

Portfolio: Localization & Tech Comm Refactoring

Project: Bear Hand Mixer User Manual

1. Project Objective

Localize a translated Chinese user manual to meet international technical documentation standards.

2. Key challenges & solutions

Highlight 1: Task-Oriented Writing & Reducing cognitive load

- **Challenge:** The draft lacked instructional focus. It relied on passive nouns and overused politeness markers (e.g., "Please").
- **Analysis:** Extraneous words increase cognitive load. Direct, action-oriented instructions improve user comprehension and task success.
- **Solution:** Applied a strict task-oriented approach. Removed all instances of "Please" and replaced static nouns with active verbs to drive precise user actions.

Before	After
5. The product has five levels of speed for different ingredients. Please refer to the table below to choose the speed.	5. Select one of the five speed settings of the product according to the ingredients being mixed. Refer to the recommended usage table below.

Highlight 2: Information Architecture & Formatting Accuracy

- **Challenge:** The source text grouped mixed-severity hazards (from warnings to notices) into a single table under an understated heading. The initial draft retained the source text's misuse of numbered lists for non-sequential features, and applied incorrect end punctuation.

- **Analysis:** In safety communications (e.g., ANSI Z535), hazard headings must strictly match the severity of the content. Masking fatal warnings under a low-level "Caution" heading poses severe liability and safety risks. Formatting-wise, mirroring misused numbers creates false sequential expectations, while incorrect end punctuation breaks Translation Memory (TM) segmentation.
- **Solution:** Restructured the information architecture within the constraints of the source layout. Corrected the understated heading to accurately reflect the mixed-severity content and ensure legal compliance. Furthermore, resolved source formatting defects by aligning list styles with their functional intent. Finally, standardized end punctuation to rectify syntax errors and optimize TM matching.

Before	After
Understated Hazard Heading	Comprehensive Hazard Heading
Cautions	Warnings, Cautions and Notices
Misused numbers for features	Converted to bullet points
1. Exquisite design with a full, rounded shape.	• Exquisite design with a full, rounded shape.
Incorrect punctuation	Standardized End Punctuation
1. Clean the mixing bowl and whisk beaters before using,	1. Clean a mixing bowl and the beaters before use.

Highlight 3: Terminology Optimization & Resolving Ambiguity in Safety Warnings

- **Challenge:** The text contained over-descriptive terminology (e.g., "whisk beater") and ambiguous safety instructions that rendered cause-and-effect relationships as parallel actions.
- **Analysis:** Standardized terminology ensures conciseness and lowers localization costs. In safety warnings, syntactic precision is critical. Converting a causal hazard warning into parallel functional goals dilutes the severity of the consequence and compromises the document's logical rigor.

- **Solution:** Standardized terminology to industry norms (e.g., replacing "whisk beater" with "beater"). Rewrote safety warnings to reflect strict causal logic, ensuring compliance with hazard-communication principles.

Before	After
Over-descriptive terminology	Standardized terminology
Insert whisk beaters into the corresponding slot on the main unit,	Insert the beaters into the sockets of the hand mixer body.
Ambiguous parallel goals	Strict causal hazard communication
After 5 minutes of continuous use, let the machine cool for 15-30 minutes to avoid overheating and extend lifespan.	After operating the appliance continuously for 5 minutes, let the hand mixer cool down for 15 to 30 minutes before using again. Operating for long periods will cause the mixer main body to overheat and shorten the life of the mixer.

Below is the final, standardized English user manual. I invite you to explore the complete document to see how these localization and refactoring strategies are applied in context.

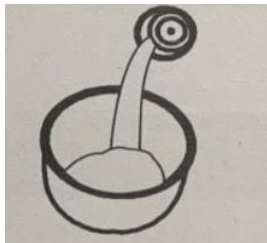
Features

- Exquisite design with a full, rounded shape.
- 5 levels of speed for flexible switching between low and high.
- A streamlined handle for a comfortable grip.


Instructions

1. Clean a mixing bowl and the beaters before use.
2. Put ingredients into the mixing bowl.


Note: Mixing bowl is not included in the product.



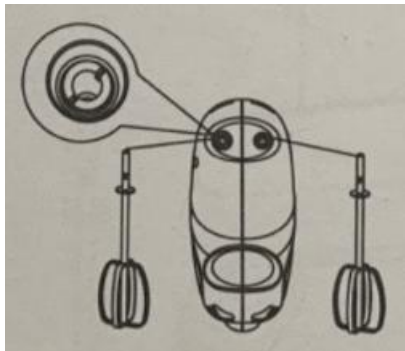
3. Insert the beaters into the sockets of the hand mixer body.





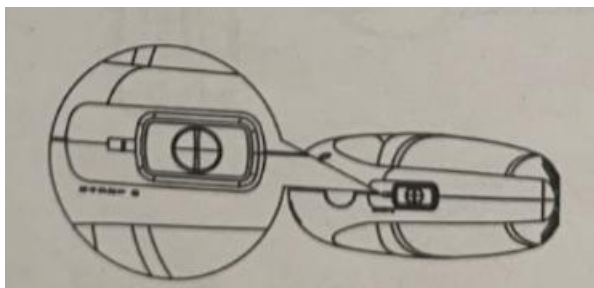4. Make sure that the switch is in the off "0" position before connecting to power.



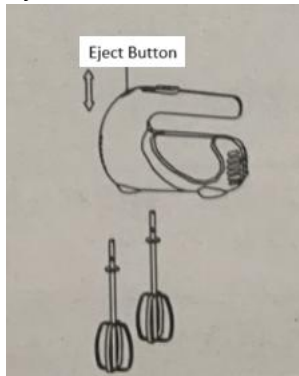5. Select one of the five speed settings of the product according to the ingredients being mixed. Refer to the recommended usage table below.

Guide				
Task	Attachment	Speed	Time	Notes
Mixing gravy, sauces, potato sauce, salad dressing	Beaters	1	Approx. 1 min	
Mixing batters or pastes	Beaters	2	Approx. 2 min	
Beating eggs	Beaters	2	Approx. 2 min	
Creaming butter or whipping cream	Beaters	2	Approx. 5 min	Do not beat blocks of butter.
Mixing cake flour into liquid ingredients	Beaters	3	Approx. 2 min	
Mashing potatoes	Beaters	4	Approx. 3 min	Boil the potatoes until they are soft, then cut potatoes into small chunks before mixing.
Beating egg whites	Beaters	5	Approx. 5 min	
6. Turn the switch to the off “0” position before unplugging the power cord. Press the “Eject” button to remove the beaters, or use your hands to pull them out.		Eject Button		
				

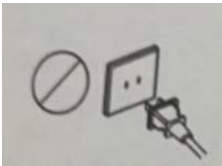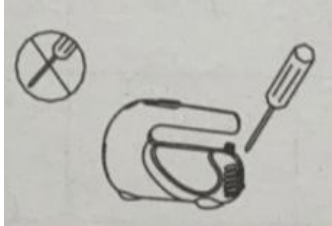Warnings, Cautions, and Notices	
Plug the appliance into a 220V AC outlet. Using other voltages may cause electric shock or a fire. 	Use 6A sockets or above. Do not plug it into a power strip. If the hand mixer shares a power strip with other appliances, the circuit may overheat and cause a fire. 
Grasp the power plug with your hand and insert it smoothly into the outlet. 	Grasp the power plug with your hand and remove it smoothly from the power outlet. 
Do not unplug the appliance by pulling on the power cord. 	Do not use hard or metal objects to scrape the appliance. 
After using the appliance, you must remove the plug to reduce risk of electric shock, current leakage, and fire.  MUST UNPLUG	After operating the appliance continuously for 5 minutes, let the hand mixer cool down for 15 to 30 minutes before using again. Operating for long periods will cause the mixer main body to overheat and shorten the life of the mixer.
Ensure the switch is at the off "0" position and the power cord is unplugged before inserting or removing the beaters.	Use only attachments recommended by Bear. Using other attachments may cause injury.

Ensure all parts are correctly installed and securely fastened while operating the appliance.

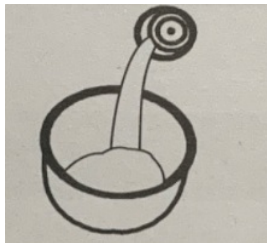
功能特点

1. 外形精巧纤细，饱满圆润；
2. 5 档调速，低速、高速自由选择，方便使用；
3. 手柄流线型设计，握持更舒适。


使用方法

1. 使用前，先将搅拌盘、片棒清洗干净；
2. 将需要搅拌的食材放入搅拌盘；


注：产品不含搅拌盘，请用户自行购买。



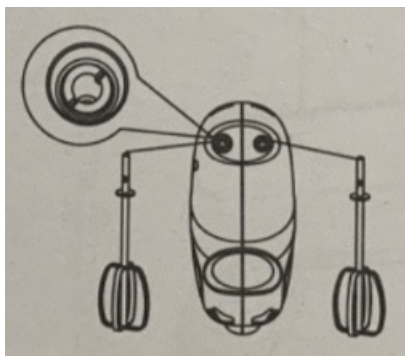
3. 片棒插入主机相应的孔中；








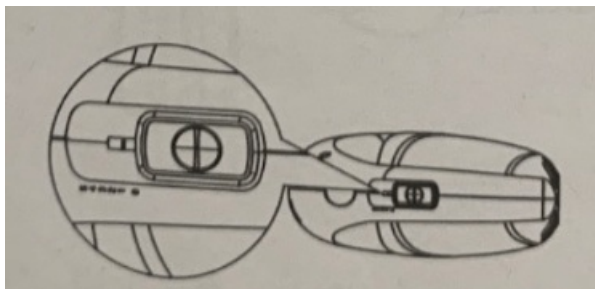4. 请确保开关处于“0”档，再接通电源；



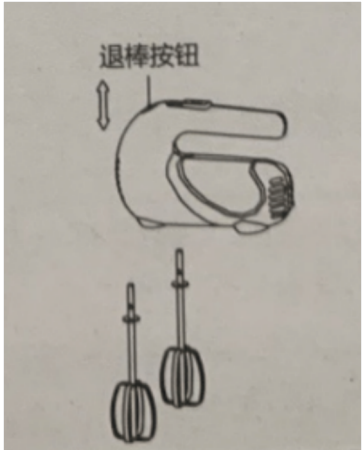5. 产品设有五个档位，可根据不同食物选择档位；可参考下方功能说明选择档位。

功能说明				
功能	配件	档位	时间	备注
调配肉汁、酱汁、马铃薯酱、沙拉酱	片棒	1 档	约 1 分钟	
混合糊状物	片棒	2 档	约 2 分钟	
打蛋	片棒	2 档	约 2 分钟	
打发黄油、奶油	片棒	2 档	约 5 分钟	不可以打块状黄油
混合蛋糕粉	片棒	3 档	约 2 分钟	
混合土豆泥	片棒	4 档	约 3 分钟	土豆煮至松软，切成小块
打发蛋清	片棒	5 档	约 5 分钟	
6. 工作完成后请将开关推到“0”档，拔掉电源线插头；按“推出”键退出棒，或用手直接拔出。		退棒按钮		
				

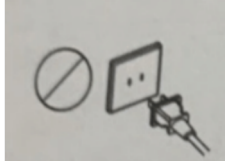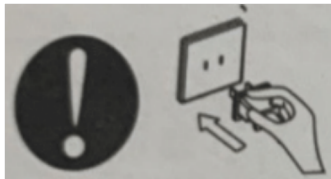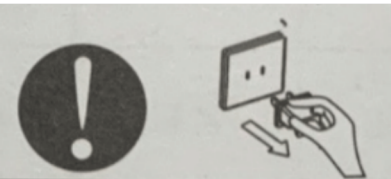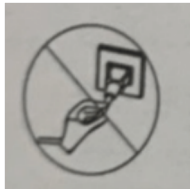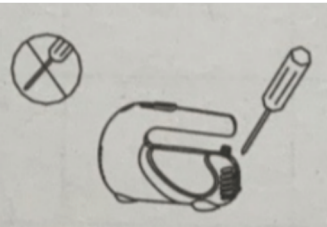注意事项	
请勿使用交流 220V 以外的电源，否则有触电或发生火灾的危险。 	请单独使用 6A 以上规格的插座。如果与其它电器公用插座，插座线路部分可能会导致异常发热起火。 
用手握住电源线插头，将电源线插头平稳插入电源插座。 	用手握住电源线插头，将电源线插头从电源插座上平稳拔出。 
请勿用手拽电源线的方式拔出电源线插头。 	请勿使用铁器类的硬物刮擦机器。 
机器使用完后，必须拔出电源线插头，否则可能发生触电、漏电、火灾的危险。  必须拔出插头	本机器连续工作 5 分钟，需让机器冷却 15-30 分钟，再继续下一一次的使用。否则主机可能会因过热造成机器寿命缩短。
安装和拆卸片棒时，需将开关推至“0”档，并拔掉电源插头。	采用非我司建议的配件可能会导致人身伤害。

操作期间，需要将各部件安装到位，锁紧无松动。