

This document explains the function of the +X Panel, its schematic level design, its board level design, and its functional testing

+X Panel

Exterior PCB Panel Design

Revision: 1.0.8

Reid Collins

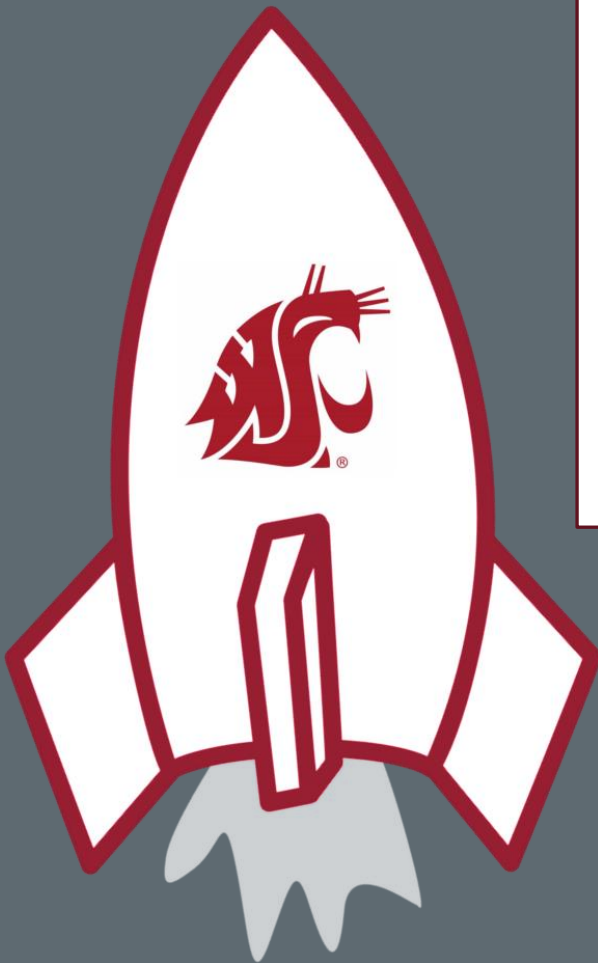


Table of Contents

1	Introduction	3
1.1	Functions.....	3
1.2	Requirements.....	3
2	Detailed Description	4
2.1	Functional Block Diagram	4
2.1.1	Low-Gain Antenna.....	4
2.1.2	GPS Patch Antenna	4
2.1.3	Photodiode Sensor	4
2.2	Schematic.....	4
2.2.1	Photodiode.....	4
2.2.2	Low-Gain Antenna.....	4
2.2.3	GPS Patch Antenna	5
2.2.4	Thermistors	5
2.3	Board.....	5
2.3.1	Layout Constraints	5
3	Testing.....	6
3.1	Before First Power-On Check.....	6
3.1.1	Test Instructions.....	6
3.1.2	Test Data	6
3.1.3	Test Notes	7
3.2	Antenna Deploy Release	7
3.2.1	Test Instructions.....	7
3.2.2	Test Data	7
3.2.3	Test Notes	7
3.3	Antenna.....	7
3.3.1	Voltage Standing Wave Ratio (VSWR).....	7
3.3.2	Gain	8
3.4	Photodiode.....	8
3.4.1	Test Instructions.....	8
3.4.2	Test Data	8

3.4.3	Test Notes	9
-------	------------------	---

1 Introduction

This document explains how the +X Panel will fulfil the following Functions and conform to the following Requirements. This document refers to the +X Panel version 1.0.

1.1 Functions

The +X panel is responsible for the following:

- Bi-directional low gain antenna for communicating with the ground station (with deployment mechanism)
- GPS Patch Antenna
- Photodiode sensor for ADCS

1.2 Requirements

The system requirements and Comms design requirements can be viewed [on GitHub](#).

2 Detailed Description

This section references the +X Panel [schematic](#). Page numbers will be listed and may have coordinates listed (number and letter combination found around the frame).

2.1 Functional Block Diagram

The block diagram can be found on the first page of the schematic.

2.1.1 Low-Gain Antenna

The low-gain antenna is deployed via high-power resistors, thermal knife, burning through a monofilament. Once deployed, the low-gain antenna is used to transmit/receive data to/from the Ground. Transmission from this antenna consists of lower speed data transfers to the ground. Faster data rate transmissions, such as sending images, are handled by the high-gain antenna on the [-Z Panel](#).

2.1.2 GPS Patch Antenna

The GPS antenna is used to receive GPS information for the attitude determination and control subsystem ([ADCS](#)).

2.1.3 Photodiode Sensor

The +X Panel board has a photodiode which is used to sense light intensity which pertains to the position of the sun. The ADCS uses an I²C ADC to read this intensity.

2.2 Schematic

2.2.1 Photodiode

The photodiode¹ can be found on page 2 of the schematic. The photodiode is placed near the center of the board facing outward. This particular photodiode has a spectral sensitivity of $6.3nA/lx$ and the expected illuminance is on the order of $< 1Mlx$.

2.2.2 Low-Gain Antenna

The low-gain antenna that can be found on page 3 (B1), of the schematic is a half wave dipole: length of 357 mm , impedance of 50Ω , gain of 2.15 dB , and linear polarization. It interfaces with the communications board via a coaxial cable (page 3, B2). As the coax is unbalanced and the antenna requires a balanced signal, a balun² does this conversion. The antenna is deployed using a thermal knife (page 3, B4:B6) consisting of two 1 W resistors. When power is applied, they burn through a monofilament tied to the stowed antenna, releasing the antenna. The power for the thermal knife is provided by the EPS.

¹ CIS PN: [63-0003](#)

² CIS PN: [39-0001](#)

While stowed, the antenna is wrapped around metal pegs (page 3, C1:C4) shorting them together. Upon deployment, the short is removed. The EPS senses this change and can determine the deployment state of the antenna.

2.2.3 GPS Patch Antenna

The GPS patch antenna (page 3, B3)³ is connected to the avionics board via a coaxial cable (page 3, B3). The antenna has an impedance of 50Ω , a center frequency of $1575\text{ MHz} \pm 3\text{ MHz}$, a bandwidth of 10 MHz for -10 dB , and right-hand circular polarization. The antenna is compatible with GPS and GALILEO signals.

2.2.4 Thermistors

The +X Panel contains seven thermistors⁴ (page 2, C4:C6). These will be used to record temperature data at various points of the +X Panel for monitoring purposes. The thermistor measurements are passed to the ADC on page 2 of the schematic where they are then read by the ADCS.

2.3 Board

The board shall be double layered with 1 oz copper and ENIG finish.

2.3.1 Layout Constraints

Unless specified in the following subsections, all signals shall use the default parameters specified below. Signals in the following subsections do not include their sense signals unless specified. Trace width can be broken if a trace needs to bottleneck down to a pin, the bottleneck shall be minimized.

Trace Width:	0.2 mm
Vias:	0.3 mm, unlimited count
Separation:	0.2 mm
Length:	Unlimited

Devices with specific placement and routing considerations are noted in the schematic, see "CAD Note".

2.3.1.1 *PC - I2C [SDA_ADCS, SCL_ADCS]*

Length:	Each node shall be length matched $\pm 1.0\text{ mm}$
Stubs:	$< 10.0\text{ mm}$

2.3.1.2 *RF Traces - LOW_GAIN [P, N, COAX], GPS_COAX*

Track Width:	1.5 mm
Gap Width:	0.5 mm
Impedance:	50Ω

2.3.1.3 *Power Resistors*

Trace Width:	0.5 mm
--------------	--------

³ CIS PN: [65-0010](#)

⁴ CIS PN: [26-0008](#)

3 Testing

All tests shall be performed at room temperature and not under vacuum unless otherwise specified. If any modifications are performed, take note. Include enough information to understand circuit behavior and for others to replicate the results. Include any software written to execute the test and link it in the test notes section. Save all software, waveforms, etc. in a subfolder of the board's test folder for each test. All tests shall be performed prior to attaching the solar cells to the solar panel.

- Waveforms shall be captured whenever appropriate.
- Have the event take fill the screen (for fast events, zoom in, for slow events, zoom out)
- Label each channel accurately
- Only have bandwidth limiting if necessary, for the test (this applies to the oscilloscope and probe settings)
- If ringing or overshoot occurs, use a ground spring or differential probe

Results location: <https://github.com/CougsInSpace/CougSat1-Hardware/tree/master/CougSat1-RadioBoard/Testing/+XPanel.1.0>

Common test instructions can be found on the [wiki](#).

3.1 Before First Power-On Check

Configuration:

This test is required to be executed before any external power is applied to the +X-Panel.

3.1.1 Test Instructions

Measure the resistance of various points in reference to PGND, DGND, and RFGND depending on whatever is appropriate.

3.1.2 Test Data

Node	Resistance	Node	Resistance
<i>AVREF_UNBUF</i>	11.3K Ω	<i>3.3V</i>	81.1K Ω
<i>AVREF</i>	8.9K Ω	<i>AVDD</i>	9.1K Ω
<i>I2C_SDA_ADCS</i>	89K Ω	<i>SENSE</i>	> 100M Ω
<i>I2C_SCL_ADCS</i>	130.7K Ω	<i>LOW_GAIN_COAX</i>	> 100M Ω
<i>PHOTODIODE</i>	1.2K	<i>LOW_GAIN_P</i>	> 100M Ω
<i>OUTLIN+2</i>	Type equation here.	<i>LOW_GAIN_N</i>	0.086 Ω
		<i>GPS_COAX</i>	57.2M Ω
		<i>Deployable</i>	6.76 Ω

3.1.3 Test Notes

3.2 Antenna Deploy Release

Results: Pass / Fail

Configuration:

This test evaluates the circuit described in Low-Gain Antenna.

3.2.1 Test Instructions

Setup the antenna and flaps in the stowed position. Connect the EPS and Comms boards. Apply 3.7 V to thermal knife resistors. Verify sense node changes from low to high. Verify antennas and flaps properly deploy.

3.2.2 Test Data

Test the antenna deployment release			
State	Property	Passing Criteria	Pass / Fail
Stowed	Sense node	< 0.5V	
Deployed	Sense node	> 1.5V	
Stowed	Antenna	Properly stowed	
Deployed	Antenna	Properly deployed	

3.2.3 Test Notes

3.3 Antenna

Results: Pass / Fail

Configuration:

This test evaluates the circuit described in Low-Gain Antenna.

3.3.1 Voltage Standing Wave Ratio (VSWR)

Results: Pass / Fail

This describes how well the impedance is matched between source and load.

3.3.1.1 Test Instructions

Connect a directional coupler to the spectrum analyzer's input and tracking generator (TG) output. Run a sweep, 420MHz to 450MHz, 30kHz BW with the TG, normalize, and store this reference. There should be a flat line at 0dB. Connect the antenna, the line should drop. Isolate the antenna as much as possible like space. Capture the antenna's response. Record the VSWR for 420MHz & 450MHz.

$$VSWR = \frac{10^{\frac{return\ loss\ (dB)}{20}} + 1}{10^{\frac{return\ loss\ (dB)}{20}} - 1}$$

3.3.1.2 Test Data

Test the antenna's VSWR			
Frequency	VSWR	Passing Criteria	Pass / Fail
420MHz	Sense node	< 1.5	Pass
450MHz	Sense node	< 1.5	Pass

3.3.1.3 Spectrum Analyzer Plot

Add the antenna's response from the spectrum analyzer

3.3.1.4 Test Notes**3.3.2 Gain**

Results: Information only

3.3.2.1 Test Instructions

Connect a 70cm dipole antenna to both the spectrum analyzer's input and tracking generator (TG) output. Separate the antennae by 1m. Run a sweep, 420MHz to 450MHz, 30kHz BW with the TG, normalize, and store this reference. There should be a flat line at 0dB. Connect the antenna to the TG output. The line should go up. Capture the antenna's response.

3.3.2.2 Test Data

Add the antenna's response from the spectrum analyzer

3.3.2.3 Test Notes

Delete me if no notes are required.

3.4 Photodiode

Results: Pass/Fail

Configuration:

This test evaluates the circuit described in Photodiode.

3.4.1 Test Instructions

Connect the ADC to the ADCS. Illuminate the photodiode with a bright light, measure the output voltage. Repeat with a dim light and a dark room. Verify the voltage changes accordingly

3.4.2 Test Data

Test the photodiode's response			
Light source	Voltage	Passing Criteria	Pass / Fail
Dark room Or shaded	1.4mVΩ	< 100mV	Pass
Dim light	4.85mVΩ	Higher than V_{dark} < 900mV	Pass
Bright light	0.8VΩ	Higher than V_{dim} < 900mV	Pass

3.4.3 Test Notes

Delete me if no notes are required. Dark was covering it up with a finger. Dim was room light and bright light used a cell phone flashlight.

3.5 Deployment

Result: Pass/Fail

Configuration:

This test evaluates that the antenna deploys.

3.5.1 Test Instructions

Apply 3.7V to deployable. Measure sense to ensure high impedance.

3.5.2

Antenna Deployment			
		Passing Criteria	Pass / Fail
		Antenna deploys	Fail
		Sense High Impedance	fail

3.5.3 Test Notes

Test failed due to