


## Lab 6.4.1: Basic Inter-VLAN Routing

### Topology Diagram

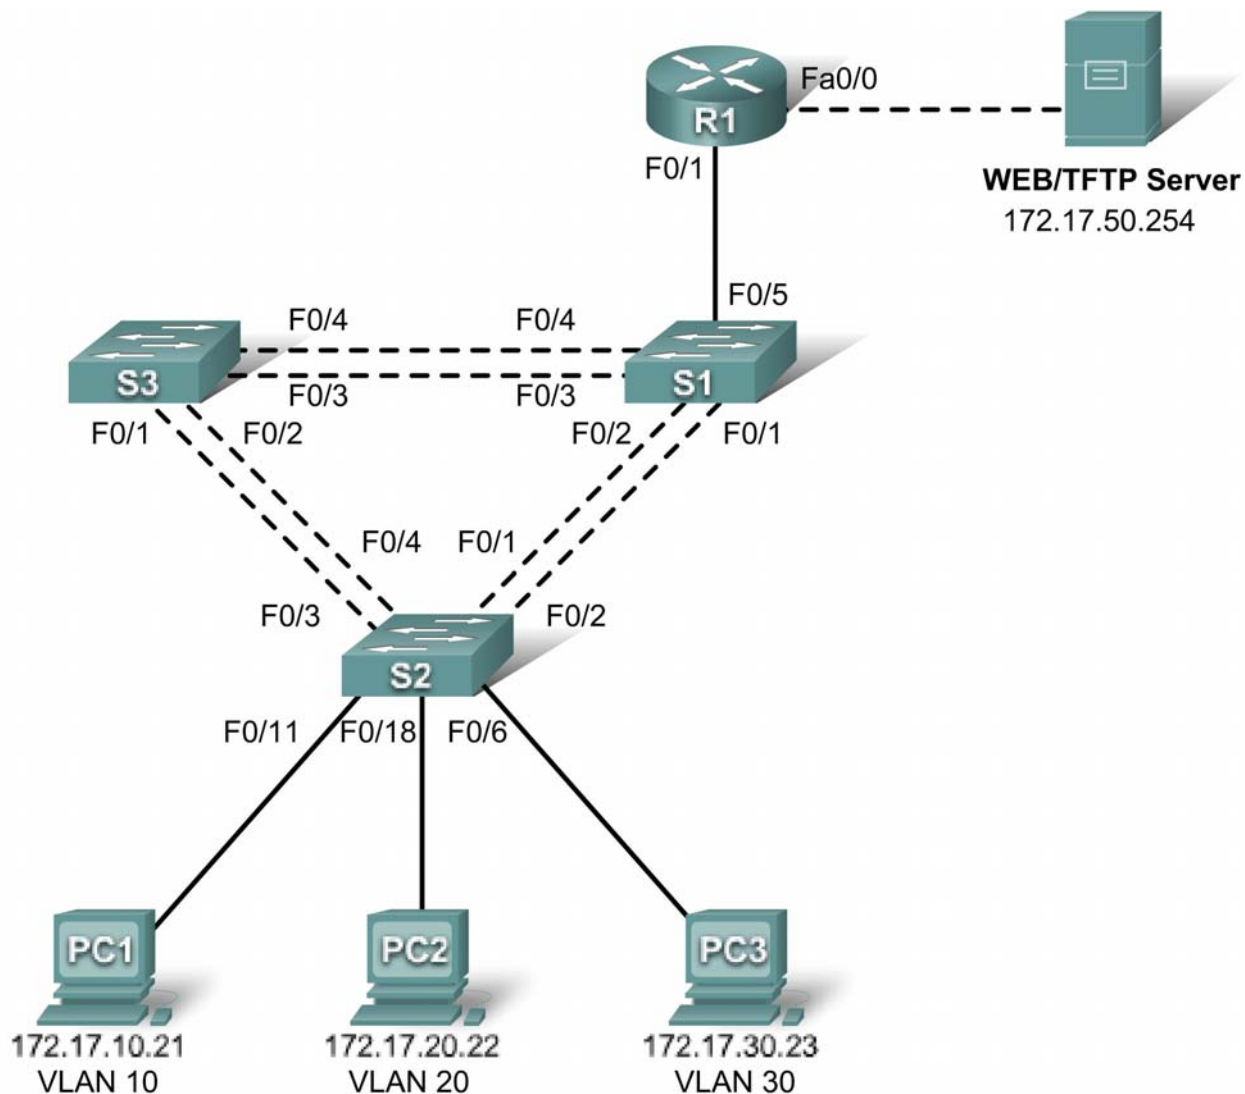

### Addressing Table

Device (Hostname)	Interface	IP Address	Subnet Mask	Default Gateway
S1	VLAN 99	172.17.99.11	255.255.255.0	172.17.99.1
S2	VLAN 99	172.17.99.12	255.255.255.0	172.17.99.1
S3	VLAN 99	172.17.99.13	255.255.255.0	172.17.99.1

<b>R1</b>	<b>Fa 0/0</b>	172.17.50.1	255.255.255.0	N/A
<b>R1</b>	<b>Fa 0/1</b>	See Interface Configuration Table		N/A
<b>PC1</b>	<b>NIC</b>	172.17.10.21	255.255.255.0	172.17.10.1
<b>PC2</b>	<b>NIC</b>	172.17.20.22	255.255.255.0	172.17.20.1
<b>PC3</b>	<b>NIC</b>	172.17.30.23	255.255.255.0	172.17.30.1
<b>Server</b>	<b>NIC</b>	172.17.50.254	255.255.255.0	172.17.50.1

## Port Assignments – Switch 2

Ports	Assignment	Network
Fa0/1 – 0/4	802.1q Trunks (Native VLAN 99)	172.17.99.0 /24
Fa0/5 – 0/10	VLAN 30 – Guest (Default)	172.17.30.0 /24
Fa0/11 – 0/17	VLAN 10 – Faculty/Staff	172.17.10.0 /24
Fa0/18 – 0/24	VLAN 20 - Students	172.17.20.0 /24

## Interface Configuration Table – Router 1

Interface	Assignment	IP Address
Fa0/1.1	VLAN1	172.17.1.1 /24
Fa0/1.10	VLAN 10	172.17.10.1 /24
Fa0/1.20	VLAN 20	172.17.20.1 /24
Fa0/1.30	VLAN 30	172.17.30.1 /24
Fa0/1.99	VLAN 99	172.17.99.1 /24

## Learning Objectives

Upon completion of this lab, you will be able to:

- Cable a network according to the topology diagram
- Clear configurations and reload a switch and a router to the default state
- Perform basic configuration tasks on a switched LAN and router
- Configure VLANs and VLAN Trunking Protocol (VTP) on all switches
- Demonstrate and explain the impact of Layer 3 boundaries imposed by creating VLANs
- Configure a router to support 802.1q trunking on a Fast Ethernet interface
- Configure a router with subinterfaces corresponding to the configured VLANs
- Demonstrate and explain inter-VLAN routing

## Task 1: Prepare the Network

### Step 1: Cable a network that is similar to the one in the topology diagram.

The output shown in this lab is based on 2960 switches and an 1841 router. You can use any current switches or routers in your lab as long as they have the required interfaces shown in the topology diagram. Other device types may produce different output. Note that Ethernet (10Mb) LAN interfaces on routers do not support trunking, and Cisco IOS software earlier than version 12.3 may not support trunking on Fast Ethernet router interfaces.

Set up console connections to all three switches and to the router.

### Step 2: Clear any existing configurations on the switches.

Clear NVRAM, delete the vlan.dat file, and reload the switches. Refer to lab 2.2.1 if necessary for the procedure. After the reload is complete, use the **show vlan** command to confirm that only default VLANs exist and that all ports are assigned to VLAN 1.

```
S1#show vlan
```

VLAN	Name	Status	Ports
1	default	active	Fa0/1, Fa0/2, Fa0/3, Fa0/4 Fa0/5, Fa0/6, Fa0/7, Fa0/8 Fa0/9, Fa0/10, Fa0/11, Fa0/12 Fa0/13, Fa0/14, Fa0/15, Fa0/16 Fa0/17, Fa0/18, Fa0/19, Fa0/20 Fa0/21, Fa0/22, Fa0/23, Fa0/24 Gig1/1, Gig1/2
1002	fddi-default	active	
1003	token-ring-default	active	
1004	fddinet-default	active	
1005	trnet-default	active	

### Step 3: Disable all ports using the shutdown command.

Ensure that the initial switch port states are inactive by disabling all ports. Use the **interface range** command to simplify this task.

```
S1(config)#interface range fa0/1-24
S1(config-if-range)#shutdown
S1(config-if-range)#interface range gi0/1-2
S1(config-if-range)#shutdown

S2(config)#interface range fa0/1-24
S2(config-if-range)#shutdown
S2(config-if-range)#interface range gi0/1-2
S2(config-if-range)#shutdown

S3(config)#interface range fa0/1-24
S3(config-if-range)#shutdown
S3(config-if-range)#interface range gi0/1-2
S3(config-if-range)#shutdown
```

### Step 4: Re-enable the active user ports on S2 in access mode.

```
S2(config)#interface fa0/6
S2(config-if)#switchport mode access
S2(config-if)#no shutdown
S2(config-if)#interface fa0/11
S2(config-if)#switchport mode access
S2(config-if)#no shutdown
S2(config-if)#interface fa0/18
S2(config-if)#switchport mode access
S2(config-if)#no shutdown
```

## Task 2: Perform Basic Switch Configurations

Configure the S1, S2, and S3 switches according to the addressing table and the following guidelines:

- Configure the switch hostname.
- Disable DNS lookup.
- Configure an enable secret password of **class**.
- Configure a password of **cisco** for console connections.
- Configure a password of **cisco** for vty connections.
- Configure the default gateway on each switch

### Output for S1 shown

```
Switch>enable
Switch#configure terminal
Enter configuration commands, one per line. End with CNTL/Z.
Switch(config)#hostname S1
S1(config)#enable secret class
S1(config)#no ip domain-lookup
S1(config)#ip default-gateway 172.17.99.1
S1(config)#line console 0
S1(config-line)#password cisco
S1(config-line)#login
S1(config-line)#line vty 0 15
S1(config-line)#password cisco
S1(config-line)#login
S1(config-line)#end
%SYS-5-CONFIG_I: Configured from console by console
S1#copy running-config startup-config
Destination filename [startup-config]? [enter]
Building configuration...
```

## Task 3: Configure the Ethernet Interfaces on the Host PCs

Configure the Ethernet interfaces of PC1, PC2, PC3 and the remote TFTP/Web Server with the IP addresses from the addressing table.

## Task 4: Configure VTP on the Switches

**Step 1: Configure VTP on the three switches using the following table. Remember that VTP domain names and passwords are case-sensitive.**

Switch Name	VTP Operating Mode	VTP Domain	VTP Password
<b>S1</b>	<b>Server</b>	<b>Lab6</b>	<b>cisco</b>
<b>S2</b>	<b>Client</b>	<b>Lab6</b>	<b>cisco</b>
<b>S3</b>	<b>Client</b>	<b>Lab6</b>	<b>cisco</b>

### S1:

```
S1(config)#vtp mode server
Device mode already VTP SERVER.
```

```
S1(config)#vtp domain Lab6
Changing VTP domain name from NULL to Lab6
S1(config)#vtp password cisco
Setting device VLAN database password to cisco
S1(config)#end
```

### S2:

```
S2(config)#vtp mode client
Setting device to VTP CLIENT mode
S2(config)#vtp domain Lab6
Changing VTP domain name from NULL to Lab6
S2(config)#vtp password cisco
Setting device VLAN database password to cisco
S2(config)#end
```

### S3:

```
S3(config)#vtp mode client
Setting device to VTP CLIENT mode
S3(config)#vtp domain Lab6
Changing VTP domain name from NULL to Lab6
S3(config)#vtp password cisco
Setting device VLAN database password to cisco
S3(config)#end
```

## Step 2: Configure trunking ports and designate the native VLAN for the trunks.

Configure Fa0/1 through Fa0/5 as trunking ports, and designate VLAN 99 as the native VLAN for these trunks. Use the **interface range** command in global configuration mode to simplify this task.

```
S1(config)#interface range fa0/1-4
S1(config-if-range)#switchport mode trunk
S1(config-if-range)#switchport trunk native vlan 99
S1(config-if-range)#no shutdown
S1(config-if-range)#end

S2(config)# interface range fa0/1-4
S2(config-if-range)#switchport mode trunk
S2(config-if-range)#switchport trunk native vlan 99
S2(config-if-range)#no shutdown
S2(config-if-range)#end

S3(config)# interface range fa0/1-4
S3(config-if-range)#switchport mode trunk
S3(config-if-range)#switchport trunk native vlan 99
S3(config-if-range)#no shutdown
S3(config-if-range)#end
```

## Step 3: Configure VLANs on the VTP server.

Configure the following VLANs on the VTP server:

VLAN	VLAN Name
VLAN 99	management

<b>VLAN 10</b>	<b>faculty-staff</b>
<b>VLAN 20</b>	<b>students</b>
<b>VLAN 30</b>	<b>guest</b>

```
S1(config)#vlan 99
S1(config-vlan)#name management
S1(config-vlan)#exit
S1(config)#vlan 10
S1(config-vlan)#name faculty-staff
S1(config-vlan)#exit
S1(config)#vlan 20
S1(config-vlan)#name students
S1(config-vlan)#exit
S1(config)#vlan 30
S1(config-vlan)#name guest
S1(config-vlan)#exit
```

Verify that the VLANs have been created on S1 with the **show vlan brief** command.

#### Step 4: Verify that the VLANs created on S1 have been distributed to S2 and S3.

Use the **show vlan brief** command on S2 and S3 to verify that the four VLANs have been distributed to the client switches.

```
S2#show vlan brief
```

VLAN	Name	Status	Ports
1	default	active	Fa0/1, Fa0/2, Fa0/4, Fa0/5 Fa0/6, Fa0/7, Fa0/8, Fa0/9 Fa0/10, Fa0/11, Fa0/12, Fa0/13 Fa0/14, Fa0/15, Fa0/16, Fa0/17 Fa0/18, Fa0/19, Fa0/20, Fa0/21 Fa0/22, Fa0/23, Fa0/24, Gi0/1 Gi0/2
10	faculty/staff	active	
20	students	active	
30	guest	active	
99	management	active	

#### Step 5: Configure the management interface address on all three switches.

```
S1(config)#interface vlan 99
S1(config-if)#ip address 172.17.99.11 255.255.255.0
S1(config-if)#no shutdown

S2(config)#interface vlan 99
S2(config-if)#ip address 172.17.99.12 255.255.255.0
S2(config-if)#no shutdown

S3(config)#interface vlan 99
S3(config-if)#ip address 172.17.99.13 255.255.255.0
S3(config-if)#no shutdown
```

Verify that the switches are correctly configured by pinging between them. From S1, ping the management interface on S2 and S3. From S2, ping the management interface on S3.

Were the pings successful? \_\_\_\_\_

If not, troubleshoot the switch configurations and try again.

### Step 6: Assign switch ports to VLANs on S2.

Refer to the port assignments table at the beginning of the lab to assign ports to VLANs on S2.

```
S2(config)#interface range fa0/5-10
S2(config-if-range)#switchport access vlan 30
S2(config-if-range)#interface range fa0/11-17
S2(config-if-range)#switchport access vlan 10
S2(config-if-range)#interface range fa0/18-24
S2(config-if-range)#switchport access vlan 20
S2(config-if-range)#end
S2#copy running-config startup-config
Destination filename [startup-config]? [enter]
Building configuration...
[OK]
```

### Step 7: Check connectivity between VLANs.

Open command windows on the three hosts connected to S2. Ping from PC1 (172.17.10.21) to PC2 (172.17.20.22). Ping from PC2 to PC3 (172.17.30.23).

Are the pings successful? \_\_\_\_\_

If not, why do these pings fail? \_\_\_\_\_

\_\_\_\_\_

\_\_\_\_\_

## Task 5: Configure the Router and the Remote Server LAN

### Step 1: Clear the configuration on the router and reload.

```
Router#erase nvram:
Erasing the nvram filesystem will remove all configuration files! Continue?
[confirm]
Erase of nvram: complete
Router#reload
System configuration has been modified. Save? [yes/no]: no
```

### Step 2: Create a basic configuration on the router.

- Configure the router with hostname R1.
- Disable DNS lookup.
- Configure an EXEC mode password of **cisco**.
- Configure a password of **cisco** for console connections.
- Configure a password of **cisco** for vty connections.

### Step 3: Configure the trunking interface on R1.

You have demonstrated that connectivity between VLANs requires routing at the network layer, exactly like connectivity between any two remote networks. There are a couple of options for configuring routing between VLANs.

The first is something of a brute force approach. An L3 device, either a router or a Layer 3 capable switch, is connected to a LAN switch with multiple connections—a separate connection for each VLAN that requires inter-VLAN connectivity. Each of the switch ports used by the L3 device are configured in a different VLAN on the switch. After IP addresses are assigned to the interfaces on the L3 device, the routing table has directly connected routes for all VLANs, and inter-VLAN routing is enabled. The limitations to this approach are the lack of sufficient Fast Ethernet ports on routers, under-utilization of ports on L3 switches and routers, and excessive wiring and manual configuration. The topology used in this lab does not use this approach.

An alternative approach is to create one or more Fast Ethernet connections between the L3 device (the router) and the distribution layer switch, and to configure these connections as dot1q trunks. This allows all inter-VLAN traffic to be carried to and from the routing device on a single trunk. However, it requires that the L3 interface be configured with multiple IP addresses. This can be done by creating “virtual” interfaces, called subinterfaces, on one of the router Fast Ethernet ports and configuring them to dot1q aware.

Using the subinterface configuration approach requires these steps:

- Enter subinterface configuration mode
- Establish trunking encapsulation
- Associate a VLAN with the subinterface
- Assign an IP address from the VLAN to the subinterface

The commands are as follows:

```
R1(config)#interface fastethernet 0/1
R1(config-if)#no shutdown
R1(config-if)#interface fastethernet 0/1.1
R1(config-subif)#encapsulation dot1q 1
R1(config-subif)#ip address 172.17.1.1 255.255.255.0
R1(config-if)#interface fastethernet 0/1.10
R1(config-subif)#encapsulation dot1q 10
R1(config-subif)#ip address 172.17.10.1 255.255.255.0
R1(config-if)#interface fastethernet 0/1.20
R1(config-subif)#encapsulation dot1q 20
R1(config-subif)#ip address 172.17.20.1 255.255.255.0
R1(config-if)#interface fastethernet 0/1.30
R1(config-subif)#encapsulation dot1q 30
R1(config-subif)#ip address 172.17.30.1 255.255.255.0
R1(config-if)#interface fastethernet 0/1.99
R1(config-subif)#encapsulation dot1q 99 native
R1(config-subif)#ip address 172.17.99.1 255.255.255.0
```

Note the following points in this configuration:

- The physical interface is enabled using the **no shutdown** command, because router interfaces are down by default. The virtual interfaces are up by default.
- The subinterface can use any number that can be described with 32 bits, but it is good practice to assign the number of the VLAN as the interface number, as has been done here.
- The native VLAN is specified on the L3 device so that it is consistent with the switches. Otherwise, VLAN 1 would be the native VLAN by default, and there would be no communication between the router and the management VLAN on the switches.

#### Step 4: Configure the server LAN interface on R1.

```
R1(config)# interface FastEthernet0/0
R1(config-if)#ip address 172.17.50.1 255.255.255.0
R1(config-if)#description server interface
```



```
R1(config-if)#no shutdown
R1(config-if)#end
```

There are now six networks configured. Verify that you can route packets to all six by checking the routing table on R1.

```
R1#show ip route
<output omitted>
```

```
Gateway of last resort is not set
```

```
      172.17.0.0/24 is subnetted, 6 subnets
C      172.17.50.0 is directly connected, FastEthernet0/1
C      172.17.30.0 is directly connected, FastEthernet0/0.30
C      172.17.20.0 is directly connected, FastEthernet0/0.20
C      172.17.10.0 is directly connected, FastEthernet0/0.10
C      172.17.1.0 is directly connected, FastEthernet0/0.1
C      172.17.99.0 is directly connected, FastEthernet0/0.99
```

If your routing table does not show all six networks, troubleshoot your configuration and resolve the problem before proceeding.

### Step 5: Verify Inter-VLAN routing.

From PC1, verify that you can ping the remote server (172.17.50.254) and the other two hosts (172.17.20.22 and 172.17.30.23). It may take a couple of pings before the end-to-end path is established.

Are the pings successful? \_\_\_\_\_

If not, troubleshoot your configuration. Check to make sure that the default gateways have been set on all PCs and all switches. If any of the hosts have gone into hibernation, the connected interface may go down.

### Task 6: Reflection

In Task 5, it was recommended that you configure VLAN 99 as the native VLAN in the router Fa0/0.99 interface configuration. Why would packets from the router or hosts fail when trying to reach the switch management interfaces if the native VLAN were left in default?

---

---

---

---

### Task 7: Clean Up

Erase the configurations and reload the switches. Disconnect and store the cabling. For PC hosts that are normally connected to other networks (such as the school LAN or to the Internet), reconnect the appropriate cabling and restore the TCP/IP settings.

## Final Configurations

### Router 1

```
hostname R1
!
enable secret class
!
no ip domain lookup
!
interface FastEthernet0/0
 ip address 172.17.50.1 255.255.255.0
 no shutdown
!
interface FastEthernet0/1
 no shutdown
!
interface FastEthernet0/1.1
 encapsulation dot1Q 1
 ip address 172.17.1.1 255.255.255.0
!
interface FastEthernet0/1.10
 encapsulation dot1Q 10
 ip address 172.17.10.1 255.255.255.0
!
interface FastEthernet0/1.20
 encapsulation dot1Q 20
 ip address 172.17.20.1 255.255.255.0
!
interface FastEthernet0/1.30
 encapsulation dot1Q 30
 ip address 172.17.30.1 255.255.255.0
!
interface FastEthernet0/1.99
 encapsulation dot1Q 99 native
 ip address 172.17.99.1 255.255.255.0
!
<output omitted - serial interfaces not configured>
!
line con 0
line aux 0
line vty 0 4
 login
 password cisco
!
```

### Switch 1

```
!
hostname S1
!
enable secret class
!
no ip domain lookup
```

```
!  
interface FastEthernet0/1  
  switchport trunk native vlan 99  
  switchport mode trunk  
!  
interface FastEthernet0/2  
  switchport trunk native vlan 99  
  switchport mode trunk  
!  
interface FastEthernet0/3  
  switchport trunk native vlan 99  
  switchport mode trunk  
!  
interface FastEthernet0/4  
  switchport trunk native vlan 99  
  switchport mode trunk  
!  
interface FastEthernet0/5  
  no shutdown  
!  
<output omitted - all remaining ports in shutdown>  
!  
interface Vlan1  
  no ip address  
  no ip route-cache  
!  
interface Vlan99  
  ip address 172.17.99.11 255.255.255.0  
  no shutdown  
!  
ip default-gateway 172.17.99.1  
ip http server  
!  
line con 0  
  logging synchronous  
line vty 0 4  
  login  
  password cisco  
line vty 5 15  
  login  
  password cisco  
!  
end
```

## Switch 2

```
!  
hostname S2  
!  
enable secret class  
!  
no ip domain lookup  
!  
interface FastEthernet0/1  
  switchport trunk native vlan 99  
  switchport mode trunk
```

```
!  
interface FastEthernet0/2  
    switchport trunk native vlan 99  
    switchport mode trunk  
!  
interface FastEthernet0/3  
    switchport trunk native vlan 99  
    switchport mode trunk  
!  
interface FastEthernet0/4  
    switchport trunk native vlan 99  
    switchport mode trunk  
!  
interface FastEthernet0/5  
    switchport access vlan 30  
    switchport mode access  
!  
    interface FastEthernet0/6  
        switchport access vlan 30  
        switchport mode access  
!  
interface FastEthernet0/7  
    switchport access vlan 30  
!  
interface FastEthernet0/8  
    switchport access vlan 30  
!  
interface FastEthernet0/9  
    switchport access vlan 30  
!  
interface FastEthernet0/10  
    switchport access vlan 30  
!  
interface FastEthernet0/11  
    switchport access vlan 10  
    switchport mode access  
!  
interface FastEthernet0/12  
    switchport access vlan 10  
!  
    interface FastEthernet0/13  
        switchport access vlan 10  
!  
interface FastEthernet0/14  
    switchport access vlan 10  
!  
interface FastEthernet0/15  
    switchport access vlan 10  
!  
interface FastEthernet0/16  
    switchport access vlan 10  
!  
interface FastEthernet0/17  
    switchport access vlan 10  
!  
interface FastEthernet0/18
```

```
    switchport access vlan 20
!
interface FastEthernet0/19
    switchport access vlan 20
!
interface FastEthernet0/20
    switchport access vlan 20
!
interface FastEthernet0/21
    switchport access vlan 20
!
interface FastEthernet0/22
    switchport access vlan 20
!
interface FastEthernet0/23
    switchport access vlan 20
!
interface FastEthernet0/24
    switchport access vlan 20
!
interface Vlan1
    no ip address
    no ip route-cache
!
interface Vlan99
    ip address 172.17.99.12 255.255.255.0
    no shutdown
!
ip default-gateway 172.17.99.1
ip http server
!
line con 0
    password cisco
    logging synchronous
    login
line vty 0 4
    password cisco
    login
line vty 5 15
    password cisco
    login
!
end
```

### Switch 3

```
!
hostname S3
!
enable secret class
!
no ip domain lookup
!
interface FastEthernet0/1
    switchport trunk native vlan 99
    switchport mode trunk
```

```
!  
interface FastEthernet0/2  
  switchport trunk native vlan 99  
  switchport mode trunk  
!  
interface FastEthernet0/3  
  switchport trunk native vlan 99  
  switchport mode trunk  
!  
interface FastEthernet0/4  
  switchport trunk native vlan 99  
  switchport mode trunk  
!  
interface FastEthernet0/5  
  shutdown  
!  
<output omitted - all remaining ports in shutdown>  
!  
!  
interface Vlan99  
  ip address 172.17.99.13 255.255.255.0  
  no shutdown  
!  
ip default-gateway 172.17.99.1  
ip http server  
!  
control-plane  
!  
!  
line con 0  
  password cisco  
  login  
line vty 0 4  
  password cisco  
  login  
line vty 5 15  
  password cisco  
  login  
!  
end
```