
Microprocessors & Microcontrollers

Aurabindo J
aurabindo@computer.org

February 6, 2012

About the Book

This book is specially written for the use of students of the Calicut University for the course EE09-601 MICROPROCESSORS & MICROCONTROLLERS. This is an open-source project, done using L^AT_EX.

The first chapter is not in the syllabus. But you should be thorough with that part if you want the preceeding chapters to really make some sense to you. If you plan to skip the first part, then there is no special benefit you get out of this book. Happy reading!!!

Copyright © 2012 Aurabindo J

This book is a free software; you can redistribute it and/or modify it under the terms of the GNU General Public License as published by the Free Software Foundation; either version 3 of the License, or (at your option) any later version.

This book is distributed in the hope that it will be useful, but WITHOUT ANY WARRANTY; without even the implied warranty of MERCHANTABILITY or FITNESS FOR A PARTICULAR PURPOSE. See the GNU General Public License for more details.

Contents

About the Book	i
1 An informal Introduction	1
1.1 Microprocessors and Microcontrollers	1
1.2 How does a processor work ?	2
1.2.1 Instruction Code Formats	2
1.3 A Simple Computer	3
1.3.1 Instruction Fetch Cycle	5
1.3.2 Execution of Instructions	6
1.3.3 Design of computer	7
2 Architecture of Intel 8086 & Pentium	9
3 Assembly Language Programming	11
4 Interfacing Peripherals with 8086	13
5 The Intel 8051 Microcontroller	15

Chapter 1

An informal Introduction

You've been hearing the word 'microprocessor' for quite a long time. Before we move on, I would like to quote that, microprocessors are the most complex thing mankind has ever made. If you were to represent the circuit diagram of a modern desktop processor like the Intel Core i7 on an A4 sheet, on a scale of 10 transistors per page, you'll need more than 20 million sheets!!! To be precise, there are 2.27 billion transistors, and that too in 434 mm^2 of area! The total population of the world is 7 billion. Not bad, the transistor is closing in :-). Even the whole blueprint of Burj Khalifa wouldn't take more than 500 sheets! Look around you. Try to enumerate a few things that didn't need any help of a microprocessor to make it look like the way it is. In almost everything you see, hear or use, is associated with a processor - whether directly or indirectly. That means living in a world without a microprocessor is same as living in the stone age! There is a one-liner which says, "Behind every successful man, there is a lady". Now, I would like to make a small change to it: "Behind every success, there is a processor"!!! :-P

Now that processor based systems are an inevitable part of our lives, it's a shame if we know nothing much in detail about it. There is a significant difference between a pure electrical system, like a machinery, and a microprocessor (obviously, not the way you thought :-P). Consider the old days when Faraday invented that a moving coil in a magnetic field created an EMF. Even if Faraday didn't invent that, that magnetic field will definitely produce EMF in that coil. But the processor, on the other hand, was totally created by humans. That means if someone didn't invent it, then someone else must have invented it. Else, it won't exist today. What I mean is that this little complex thing was created by humans, and if you can learn all those complex stuff that the humans didn't create, then you can easily learn what a human created!

1.1 Microprocessors and Microcontrollers

Before you start learning about μp and μc , you should know the difference between a controller and a processor. You already know what a microprocessor is - the ones like Intel Core i7, AMD Athlon, etc. To understand what a microcontroller is, consider the components inside a CPU. There is a motherboard which holds the important components like RAM, processor, BIOS, various ports for input & output, etc. So, if Core i7 is the microprocessor, then the motherboard is the microcontroller. But, a motherboard is never called a microcontroller, as it is much more complex and a general purpose thing. So when we call something a microcontroller, it will be very small, and

its capabilities will be very much limited and fixed. To make it clear, a microcontroller is a system comprising of a microprocessor, the primary memory (similar to RAM), a firmware (similar to BIOS), some input/output pins (similar to ports like USB, VGA, etc), and many other additional stuff (Analog to Digital Converters, etc.), on a single platform, say an IC (similar to the PCB of the motherboard).

The Pre-Requisites

Inorder to learn how a μp works, you just need to know some digital electronics – stuff like flip flops, various types of registers (parallel load, shift, counter, etc.). For a reference, use *Digital Logic & Computer Design*, *Computer System Architecture* both by *Morris Mano* and *Computer Organization & Design* by *Patterson & Hennessey*.

1.2 How does a processor work ?

Considering the complexity of a modern computer, it's hard to explain how your Core i7 works at this point. So, we'll first see the working of a really basic μp . You know very well that a μp understands nothing other than a 0 & 1. Yet it manages to do all those complex stuff. The key concept behind the's working is it's ability to treat a group of bits as 'instruction' or 'data'. The instruction tells the μp what it should do – whether to do an addition, a logic operation, a memory read/write operation, or whatever. The same may instruction tell the μp to treat a group of bits as data and operate on them.

In essence, the only thing (this) μp does is, it continuously fetches some binary data from memory (which will be treated as instruction), decodes it so as to understand what to do next, and then executes it. It does this in sequence, not everything together. First it will read the instruction from memory. It will then decode. At this point, it will understand whether it has to fetch more bits, or to execute the instruction. After it finishes the execution, it will then go to the next memory location to fetch the next group of bits, which will be treated as instruction.

Consider a computer that has "1000001010" stored in the very first address of the memory location "0000". This is called the 'instruction code'. Consider that this instruction performs an addition of two numbers stored in two register. So when the computer starts, it fetches the bits at "0000". Basically, this can be divided into two parts – The Operation Code or the 'OpCode' and data. This data may be considered as an operand or the *address* of an operand. In the example code, the first 4 bits, "1000" is the OpCode. The subsequent group of 3 bits, "001" and "010" are called operands. Here, the OpCode specifies the ADD instruction. The operands "001" and "010" will act as two register, say A (the accumulator) and B. In short, the above instruction is similar to ADD B instruction in 8085.

1.2.1 Instruction Code Formats

The instructions in a μp can be classified on different basis. Basically, we can classify them into 3 categories:

Operation Code

(a) Implied

Operation Code	Operand	(b) Immedeate Operand
Operation Code	Address of Operand	(c) Direct Address

Examples from 8051 for the implied categories include **HLT**, **XCHG**. As they dont need any further information like additional operands, they can easily fit inside a 1 byte instruction code. Consider the instruction **MVI A, 05h**. This might need more space to accomodate all the information. **MVI** might be represented by "01010", **A** by "000" and 05h by itself (00000101). So, it takes excatly 16 bits. Hence, its a 2 byte instruction. Consider **LDA 2500h**. **LDA** takes 5 bits, and it accomodates the remaining 16 bits of 2500h in the next 2 locations of 1 byte each. Hence, it's a 3 byte instruction.

1.3 A Simple Computer

The processor core of a computer is having a lot of registers. They may be general purpose register, that the users (programmers) can read and write, or special registers that only the processor can access. We shall see some of the basic registers found in all processors.

- *Program Counter*

It's simlpy a counter. It is perhaps the most important part of the computer. It initiates the fetch operation. While the computer is powered on, PC is reset to a value, say "0000". The fetching circuit takes this output of PC and goes to that memory location. After the execution is over, when the next clock tick comes, the counter incrementes to "0001". The fetch circuit again does the same thing and this cycle continues. It is mandatory that the next clock tick arrives only AFTER the current fetch is complete. Else, you wont get the expected result as the next execution may depend on the vaules of the current execution. The tiny elementary operations that a μp can do are called *micro operations*. A group of such operation that do a meaningful operation is called a *macro operation*

A note for the Geeks: You might have heard of processor overclocking. The maximum clock speed you can run your μp is the value limited by the time it takes to complete one such cycle as mentioned above. So if you increase the clock frequency too much, it will trigger an operation before an ongoing operation is completed. This can have very adverse effects on the system, as the operation being read cannot be predicted. In fact, it can be anything. It may be corresponding to a memory erase operation. And if that happens to be on your Master Boot Record, then, "Govinda!!!". It can even burn out the processor – "Gooovindaaa!!!" :-P

- *Memory Address/Buffer Register*

Memory Opeartions are the basic things any computer should do. For this purpose, there are two register, MAR and MBR. During a read operation, the the address that should be read is sent to the MAR. The MBR will hold the contents of the memory word read from or written into memory.

- *Instruction Register*

When an instruction is read from the memory, it is first placed in the MBR and later to the IR. It decodes the OpCode of the instruction and provides a unique output for each instruction, similar to the *one hot* assignment. Thus if $q_1 = 1$ if the OpCode is equivalent to binary 1, $q_2 = 1$ if OpCode is binary 2, and so on.

- *Timing Counter*

This is an important component of a computer, but this is invisible to the programmer. It synchronizes the fetch, decode and execute cycles of the μp with the clock pulse. The clock pulse of a digital system is like what the heart beat is, for a human. From the input clock pulse, a set of phase shifted clock pulses are derived as shown in the figure. Each output of the derived clock pulse will be connected to a particular circuit which does a particular micro operation.

- *Registers*

There will be a lot of general & special purpose registers in a μp . One such special register is the Accumulator, usually denoted as 'A'. There may be other registers, like 'R', 'B', etc.

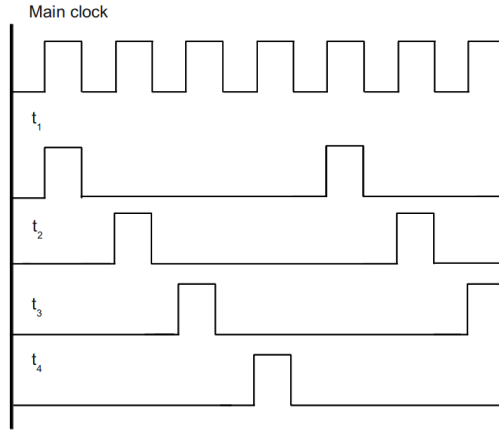


Figure 1.1: Timing Signals from Clock Pulses

The simple computer shown contains a memory unit, 7 registers & 2 decoders. The memory unit stores an 8 bit data in a particular address. Eventhough all the data is stored in the memory, all the processing happens in the registers. The PC, IR, & T are the part of the control unit. IR recieves the OpCode of instructions. The decoder supplies one output for each operation. The T counter is also decoded to supply eight timing variables t_0 thro' t_7 similar to the above figure. This counter is incremented every clock pulse (edge triggered). It can also be cleared at any time to start a new cycle.

The PC goes thro' a step-by-step counting sequence and causes the computer to read successive instructions previously stored in memory. The PC always holds the address of the next instruction in memory. To read an instruction, the contents of PC are transferred into MAR and a memory-read cycle us initiated. The PC is then incremented by 1 so that it holds the next address in the

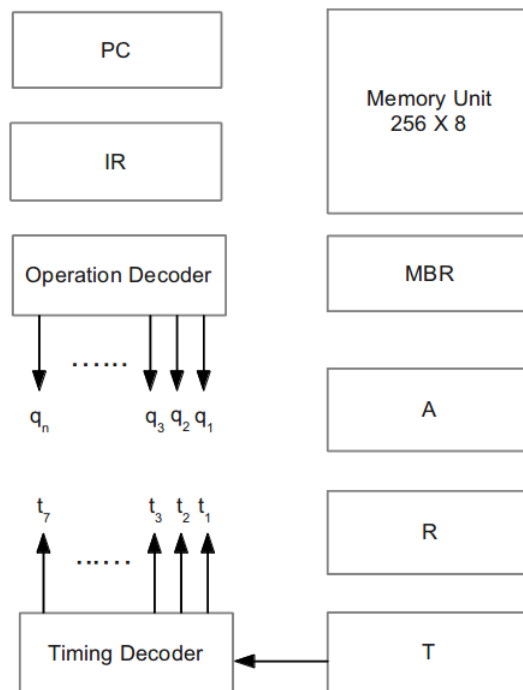


Figure 1.2: Overview of a simple computer

sequence of instructions. An OpCode read from memory into MBR is then transferred into IR. If the memory-address part of an instruction is read into MBR, this address is transferred into MAR to read the operand. Thus, MAR can receive address either from PC or from MBR.

1.3.1 Instruction Fetch Cycle

The PC must be initialized to contain the first address of the program stored in memory. Every processors have a ‘Power On Reset’ that initializes the registers in it to some default value. When a “Start” switch is activated, the computer sequence follows a basic pattern. An OpCode whose address is in PC is read from memory into MBR. The PC is incremented by 1 to prepare it for the next address in sequence. The OpCode is transferred from MBR to IR, where it is decoded. This sequence is called the instruction fetch cycle, since it fetches the OpCode from memory and places it in a control register. In this example, the timing variables t_0 , t_1 and t_2 , out of the timing decoder are used as control functions to sequence the microoperations for reading an OpCode and place it into IR. Its representation, called Register Transfer Language (RTL) is shown below:

t_0 :	MAR \leftarrow PC	Transfer OpCode Address
t_1 :	MBR \leftarrow M, PC \leftarrow PC + 1	Read OpCode, Increment PC
t_2 :	IR \leftarrow MBR	Transfer OpCode to IR

The timing counter T will start from the value 000 which produces a t_0 timing variable. The T register is incremented with every clock tick and automatically produces the next timing variables, t_1 , t_2 , t_3 , etc. in sequence. The first three timing variables execute the microoperation sequence which may be symbolized with the macrooperation statement

$$IR \leftarrow M[PC], PC \leftarrow PC + 1$$

. This states that the memory word specified by the address in PC is transferred into IR and then the PC is incremented. The hardware constraint in the simple computer is that only MAR and MBR can access the memory. Since PC and IR cannot communicate directly with the memory, the above microoperation must be executed with a sequence of 3 microoperations. Another hardware constraint is that PC cannot be incremented when its value is being used to supply the address for a memory read. By transferring the contents of PC into MAR, the PC can be incremented while the memory reads the word addressed by MAR.

The fetch cycle is common to all instructions. This means that whenever a timing variable, t_0 through t_2 are in action, it will be a fetch cycle. The microoperations and control functions that follow the fetch cycle are determined in the control section from the decoded OpCode. This is available as outputs q_i , where $i = 1, 2, 3, \dots$. The 8085 has 246 instructions. Hence, it internally has the decoded outputs q_1 through q_{246} . Latest x86 architectures have well above 1000 instructions.

1.3.2 Execution of Instructions

Execution start from the timing variable t_3 , during which, the OpCode in IR and one output of the operation decoder is equal to 1. The control uses the q_i variables to determine the next microoperations in sequence. Let “MOV R” instruction has an OpCode that makes $q_1 = 1$. The execution of this instruction requires the microoperation:

$$q_1 t_3 : A \leftarrow R, T \leftarrow 0$$

Thus when $q_1 = 1$ at time t_3 , the contents of R are transferred into register A and the timing register T is cleared. by clearing T, the control goes back to the fetch cycle again to read the next instruction. Remember that PC was incremented during time t_1 so that it now holds the address of the very next instruction in sequence.

Now lets see how the LDI instruction is implemented. In 8 bit processors (like 8085), this instruction is stored by using two consecutive locations. (Refer section §1.2.1 for more on instruction size and representation). Assume that this instruction is stored in memory like shown below:

Memory Address	Data
01256	.
01257	..
01258	...
01259	00010000
01260	11001010
01261	...
01262	..
01263	.

The LDI OPRD instruction has an OpCode that makes $q_2 = 1$. The microoperations that execute this instruction are:

q_2t_3 :	$MAR \leftarrow PC$	Transfer OpCode Address
q_2t_4 :	$MBR \leftarrow M, PC \leftarrow PC + 1$	Read Operand, Increment PC
q_2t_5 :	$A \leftarrow MBR, T \leftarrow 0$	Transfer Operand, go to fetch cycle

The first two microoperations are exactly the same for a fetch operation, since this instruction wants to get the operand which is stored in the very next address. But the condition on the left side is different. Here, the value read from memory is considered as data. But in a fetch cycle, it was considered as an instruction and was transferred to IR. This time, it is transferred to the register A, as that is what LDI is supposed to do. Now the instruction is completely executed and therefore, the timing register has to be cleared so as to start the next fetch cycle. Again, note that PC was incremented during q_2t_4 so that the current value in PC is that of the next instruction in sequence.

Now let's see how a 3 byte instruction (Indirect Addressing) is implemented. Consider "LDA ADRS". This instruction has an OpCode which makes $q_3 = 1$. The required microoperations are:

q_3t_3 :	$MAR \leftarrow PC$	Transfer OpCode Address
q_3t_4 :	$MBR \leftarrow M, PC \leftarrow PC + 1$	Read Address of Operand, Increment PC
q_3t_5 :	$MAR \leftarrow MBR$	Transfer Operand address
q_3t_6 :	$MBR \leftarrow M$	Read operand
q_3t_5 :	$A \leftarrow MBR, T \leftarrow 0$	Transfer Operand to A, go to fetch cycle

The address of the operand, symbolized by ADRS, is placed in memory right after the OpCode. As PC was incremented during fetch cycle, it now holds the address of the operand we need. After microoperations during t_4 , we get the address of the operand that is to be transferred to A. This address has to be given to the MAR again so that the memory puts the actual operand we need into MBR. We now have to increment PC so that it will point to the next instruction in the memory during the upcoming fetch cycle. Now the final value from MBR is transferred to the A register to complete the instruction. The timer is now cleared, which initiates the next fetch cycle when t_0 arrives.

The control functions and microoperations for the simple computer are summarized in table 1.1. The first 3 timing variables constitute the fetch cycle which reads the OpCode into IR. The microoperations executed during t_3 depends on the OpCode value in IR. Either q_1, q_2 or q_3 can only be 1 at a time. Hence, only one of q_1t_3 , q_2t_3 or q_3t_3 will occur at a time, since the control function is $q_x \langle \text{logical AND} \rangle t_3$.

1.3.3 Design of computer

A practical computer has many instructions. The one we are discussing is obviously not pretty useful, but by using only 3 instructions, the basic function of a digital computer can be clearly demonstrated. The list of microoperations specifies the types of registers and associated digital functions that must be incorporated in the system. The first step in the design is to scan the RTL listed in Table 1.1 and retrieve all the statements that perform the same microoperation on the same register. For example, $MAR \leftarrow PC$ is listed for t_0 , q_2t_3 , and in q_3t_3 . These 3 lines are combined into one statement:

$$t_0 + q_2t_3 + q_3t_3 : MAR \leftarrow PC$$

FETCH	t_0 :	$MAR \leftarrow PC$
	t_1 :	$MBR \leftarrow M, PC \leftarrow PC + 1$
	t_2 :	$IR \leftarrow MBR$
MOV	$q_1 t_3$:	$A \leftarrow R, T \leftarrow 0$
LDI	$q_2 t_3$:	$MAR \leftarrow PC$
	$q_2 t_4$:	$MBR \leftarrow M, PC \leftarrow PC + 1$
	$q_2 t_5$:	$A \leftarrow MBR, T \leftarrow 0$
LDA	$q_3 t_3$:	$MAR \leftarrow PC$
	$q_3 t_4$:	$MBR \leftarrow M, PC \leftarrow PC + 1$
	$q_3 t_5$:	$MAR \leftarrow MBR$
	$q_3 t_6$:	$MBR \leftarrow M$
	$q_3 t_7$:	$A \leftarrow MBR, T \leftarrow 0$

Table 1.1: Register-transfer statements for simple computer

The figure goes here. (Implementation of x_1 : $MAR \leftarrow PC$)

A control function is a boolean function. The $+$ between the control functions denotes a Boolean OR operation and its absence denotes an AND operation. The hardware implementation uses the simplified equations: $t_0 + (q_2 + q_3)t_3$. The binary variable x_1 is applied to the load input of MAR and the outputs from PC are applied to the inputs of MAR. When $x_1 = 1$, the next clock pulse transfers the contents of PC to MAR. The binary variables that causes x_1 to be 1 comes from the operation and timing decoders in the control unit.

There are a total of 8 distinct microoperations for this computer. For each microoperation, the associated control functions are accumulated and OR'ed together as shown below:

$x_1 = t_0 + q_2 t_3 + q_3 t_3$:	$MAR \leftarrow PC$
$x_2 = q_3 t_5$:	$MAR \leftarrow MBR$
$x_3 = t_1 + q_2 t_4 + q_3 t_4$:	$PC \leftarrow PC + 1$
$x_4 = x_3 + q_3 t_4$:	$MBR \leftarrow M$
$x_5 = q_2 t_5 + q_3 t_7$:	$A \leftarrow MBR$
$x_6 = q_1 t_3$:	$A \leftarrow R$
$x_7 = x_5 + x_6$:	$T \leftarrow 0$
$x_8 = t_2$:	$IR \leftarrow MBR$

Table 1.2: Hardware specifications for a simple computer

The big figure here

Chapter 2

Architecture of Intel 8086 & Pentium

This chapter explains the overall architecture of the Intel's 8086 and Pentium processors, its operations and the interrupts in 8086.

Chapter 3

Assembly Language Programming

—TO DO—

Chapter 4

Interfacing Peripherals with 8086

—TO DO—

Chapter 5

The Intel 8051 Microcontroller

—TO DO—