

## EMBEDDED SYSTEMS

- **Course Code : 18EC62**
- **CIE Marks :40**
- **Lecture Hours/Week : 03 + 2 (Tutorial)**
- **SEE marks :60**
- **Total Number of Lecture Hours : 50 (10 Hrs / Module)**
- **Exam Hours : 03**
- **CREDITS : 04**

### **MODULE -1**

ARM-32 bit Microcontroller: Thumb-2 technology and applications of ARM, Architecture of ARM Cortex M3, Various Units in the architecture, Debugging support, General Purpose Registers, Special Registers, exceptions, interrupts, stack operation, reset sequence (Text 1: Ch-I, 2, 3)

### **ARM -32-BIT MICROCONTROLLER**

#### **About ARM Cortex-M3 PROCESSOR**

The microcontroller market is vast, with more than 20 billion devices per year estimated to be shipped in 2010. A bewildering array of vendors, devices, and architectures is competing in this market. The requirement for higher performance microcontrollers has been driven globally by the industry's changing needs; for example, microcontrollers are required to handle more work without increasing a product's frequency or power. In addition, microcontrollers are becoming increasingly connected, whether by Universal Serial Bus (USB), Ethernet, or wireless radio, and hence, the processing needed to support these communication channels and advanced peripherals are growing.

The ARM Cortex™-M3 processor, the first of the Cortex generation of processors released by ARM in 2006, was primarily designed to target the 32-bit microcontroller market. The Cortex- M3 processor provides excellent performance at low gate count and comes with many new features previously available only in high-end processors. The Cortex-M3 addresses the requirements for the 32-bit embedded processor market in the following ways:

- ✓ **Greater performance efficiency:** allowing more work to be done without increasing the frequency or power requirements
- ✓ **Low power consumption:** enabling longer battery life, especially critical in portable products including wireless networking applications.
- ✓ **Enhanced determinism:** guaranteeing that critical tasks and interrupts are serviced as quickly

as possible and in a known number of cycles

- ✓ **Improved code density:** ensuring that code fits in even the smallest memory footprints
- ✓ **Ease of use:** providing easier programmability and debugging for the growing number of 8-bit and 16-bit users migrating to 32 bits
- ✓ **Lower cost solutions:** reducing 32-bit-based system costs close to those of legacy 8-bit and 16-bit devices
- ✓ **Wide choice of development tools:** from low-cost or free compilers to full-featured development suites from many development tool vendors.

## Brief History of ARM

ARM was formed in 1990 as Advanced RISC Machines Ltd., a joint venture of Apple Computer, Acorn Computer Group, and VLSI Technology. In 1991, ARM introduced the ARM6 processor family, and VLSI became the initial licensee. Subsequently, additional companies, including Texas Instruments, NEC, Sharp, and ST Microelectronics, licensed the ARM processor designs, extending the applications of ARM processors into mobile phones, computer hard disks, personal digital assistants (PDAs), home entertainment systems, and many other consumer products.

## Architecture Versions

Over the years, ARM has continued to develop new processors and system blocks. These include the popular ARM7TDMI processor and, more recently, the ARM1176TZ(F)-S processor, which is used in high-end applications such as smart phones. The evolution of features and enhancements to the processors over time has led to successive versions of the ARM architecture. Note that architecture version numbers are independent from processor names. For example, the ARM7TDMI processor is based on the ARMv4T architecture (the T is for Thumb® instruction mode support).

Over the past several years, ARM extended its product portfolio by diversifying its CPU development, which resulted in the architecture version 7 or v7. In this version, the architecture design is divided into three profiles:


- ✓ **A Profile (ARMv7-A):** Application processors which are designed to handle complex applications such as high-end embedded operating systems (OSs) (e.g., Symbian, Linux, and Windows Embedded). These processors requiring the highest processing power, virtual memory system support with memory management units (MMUs), and, optionally, enhanced Java support and a secure program execution environment. Example products include high-end mobile phones and electronic wallets for financial transactions.
- ✓ **R Profile (ARMv7-R):** Real-time, high-performance processors targeted primarily at the higher end of the real-time market—those applications, such as high-end breaking systems and hard drive

controllers, in which high processing power and high reliability are essential and for which low latency is important.

- ✓ **M Profile (ARMv7-M):** Processors targeting low-cost applications in which processing efficiency is important and cost, power consumption, low interrupt latency, and ease of use are critical, as well as industrial control applications, including real-time control systems.

## The Thumb-2 Technology and Instruction Set Architecture

The Thumb-23 technology extended the Thumb Instruction Set Architecture (ISA) into a highly efficient and powerful instruction set that delivers significant benefits in terms of ease of use, code size, and performance (see Figure 1). The extended instruction set in Thumb-2 is a superset of the previous 16-bit Thumb instruction set, with additional 16-bit instructions alongside 32-bit instructions. It allows more complex operations to be carried out in the Thumb state, thus allowing higher efficiency by reducing the number of states switching between ARM state and Thumb state.

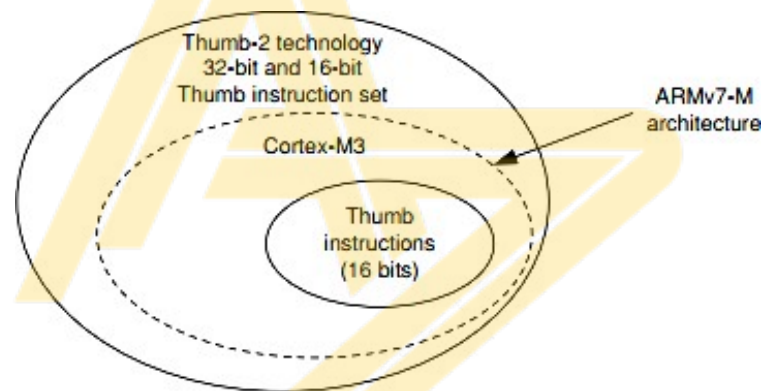

**Fig.1.1 the Relationship between the Thumb Instructions Set in Thumb-2 Technology and the Traditional Thumb**

With support for both 16-bit and 32-bit instructions in the Thumb-2 instruction set, there is no need to switch the processor between Thumb state (16-bit instructions) and ARM state (32-bit instructions). For example, in ARM7 or ARM9 family processors, you might need to switch to ARM state if you want to carry out complex calculations or a large number of conditional operations and good performance is needed, whereas in the Cortex-M3 processor, you can mix 32-bit instructions with 16-bit instructions without switching state, getting high code density and high performance with no extra complexity.


## Cortex-M3 Processor Applications

- **Low-cost microcontrollers:** The Cortex-M3 processor is ideally suited for low-cost microcontrollers, which are commonly used in consumer products, from toys to electrical appliances. It is a highly competitive market due to the many well-known 8-bit and 16-bit microcontroller products on the market. Its lower power, high performance, and ease-of-use advantages enable embedded developers to migrate to 32-bit systems and develop products with the ARM architecture.
- **Automotive:** Another ideal application for the Cortex-M3 processor is in the automotive industry. The Cortex-M3 processor has very high-performance efficiency and low interrupt latency, allowing it to be used in real-time systems. The Cortex-M3 processor supports up to 240 external vectored interrupts, with a built-in interrupt controller with nested interrupt supports and an optional MPU, making it ideal for highly integrated and cost-sensitive automotive applications.
- **Data communications:** The processor's low power and high efficiency, coupled with instructions in Thumb-2 for bit-field manipulation, make the Cortex-M3 ideal for many communications applications, such as Bluetooth and ZigBee.
- **Industrial control:** In industrial control applications, simplicity, fast response, and reliability are key factors. Again, the Cortex-M3 processors interrupt feature, low interrupt latency, and enhanced fault-handling features make it a strong candidate in this area.
- **Consumer products:** In many consumer products, a high-performance microprocessor (or several of them) is used. The Cortex-M3 processor, being a small processor, is highly efficient and low in power and supports an MPU enabling complex software to execute while providing robust memory protection.

## Architecture of ARM Cortex M3

The Cortex™-M3 is a 32-bit microprocessor. It has a 32-bit data path, a 32-bit register bank, and 32-bit memory interfaces (see Figure 2). The processor has a Harvard architecture, which means that it has a separate instruction bus and data bus. This allows instructions and data accesses to take place at the same time, and as a result of this, the performance of the processor increases because data accesses do not affect the instruction pipeline. This feature results in multiple bus interfaces on Cortex-M3, each with optimized usage and the ability to be used simultaneously. However, the instruction and data buses share the same memory space (a unified memory system). In other words, you cannot get 8 GB of memory space just because you have separate bus interfaces.

- ✓ The Cortex-M3 processor is a 32-bit processor, with a 32-bit wide data path, register bank and memory interface. There are 13 general-purpose registers, two stack pointers, a link register, a program counter and a number of special registers including a program status register.

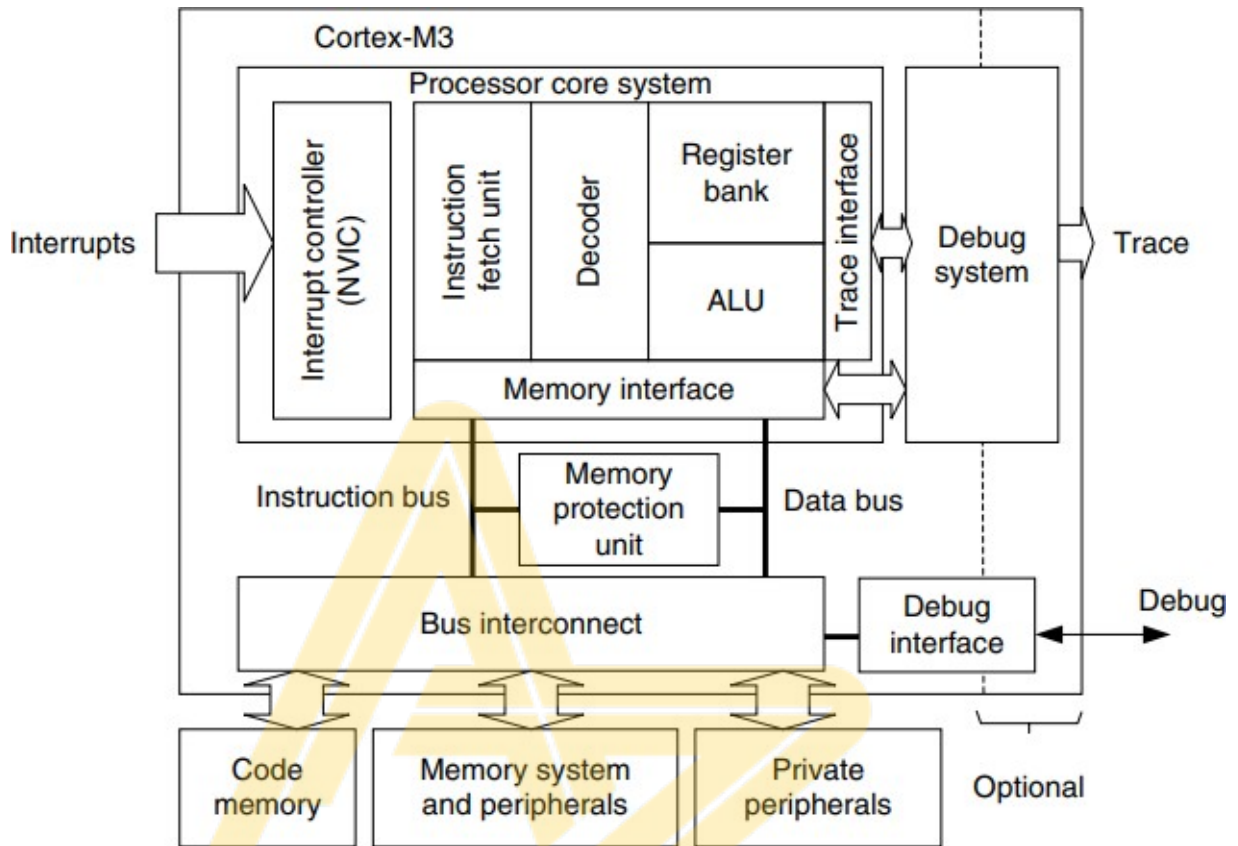

**Fig1. 2.** A Simplified View of the CortexM3.

- ✓ The Cortex-M3 core contains a decoder for traditional Thumb and new Thumb-2 instructions, an advanced ALU with support for hardware multiply and divide, control logic, and interfaces to the other components of the processor.
- ✓ The Cortex-M3 processor is a 32-bit processor, with a 32-bit wide data path, register bank and memory interface. There are 13 general-purpose registers, two stack pointers, a link register, a program counter and a number of special registers including a program status register.
- ✓ The Cortex-M3 processor is a memory mapped system with a simple, fixed memory map for up to 4 gigabytes of addressable memory space with predefined, dedicated addresses for code (code space), SRAM(memory space), external memories/devices and internal/external peripherals. There is also a special region to provide for vendor specific addressability.

- ✓ The MPU is an optional component of the Cortex-M3 processor that can improve the reliability of an embedded system by protecting critical data used by the operating system from user applications, separating processing tasks by disallowing access to each other's data, disabling access to memory regions, allowing memory regions to be defined as read-only and detecting unexpected memory accesses that could potentially break the system.
- ✓ The highly configurable NVIC is an integral part of the Cortex-M3 processor and provides the processor's outstanding interrupt handling abilities. In its standard implementation it supplies a NonMaskable Interrupt (NMI) and 32 general purpose physical interrupts with 8 levels of pre-emption priority. It can be configured to anywhere between 1 and 240 physical interrupts with up to 256 levels of priority through simple synthesis choices.
- ✓ The debug access into a Cortex-M3 processor based system is through the Debug Access Port (DAP) that can be implemented as either a Serial Wire Debug Port (SW-DP) for a two-pin (clock and data) Interface or a Serial Wire JTAG Debug Port (SWJ-DP) that enables either JTAG or SW protocol to be used. The SWJ-DP defaults to JTAG mode on power reset and can be made to switch protocols with a specific control sequence provided by the external debug hardware.
- ✓ The Cortex-M3 processor bus matrix connects the processor and debug interface to the external buses; the 32-bit AMBA® AHB-Lite based ICode, DCode and System interfaces and the 32-bit AMBA APB™ based Private Peripheral Bus (PPB). The bus matrix also implements unaligned data accesses and bit banding



## Registers in Cortex-M3 processor

The Cortex-M3 processor has registers R0 through R15. R13 (the stack pointer) is banked, with only one copy of the R13 visible at a time.


**R0–R12: General-Purpose Registers** R0–R12 are 32-bit general-purpose registers for data operations. Some 16-bit Thumb® instructions can only access a subset of these registers (low registers, R0–R7).

**R13: Stack Pointers** The Cortex-M3 contains two stack pointers (R13). They are banked so that only one is visible at a time. The two stack pointers are as follows:

1. **Main Stack Pointer (MSP):** The default stack pointer, used by the operating system (OS) kernel and exception handlers
2. **Process Stack Pointer (PSP):** Used by user application code.

**R14: The Link Register** When a subroutine is called, the return address is stored in the link register.

**R15: The Program Counter** The program counter is the current program address. This register can be written to control the program flow.

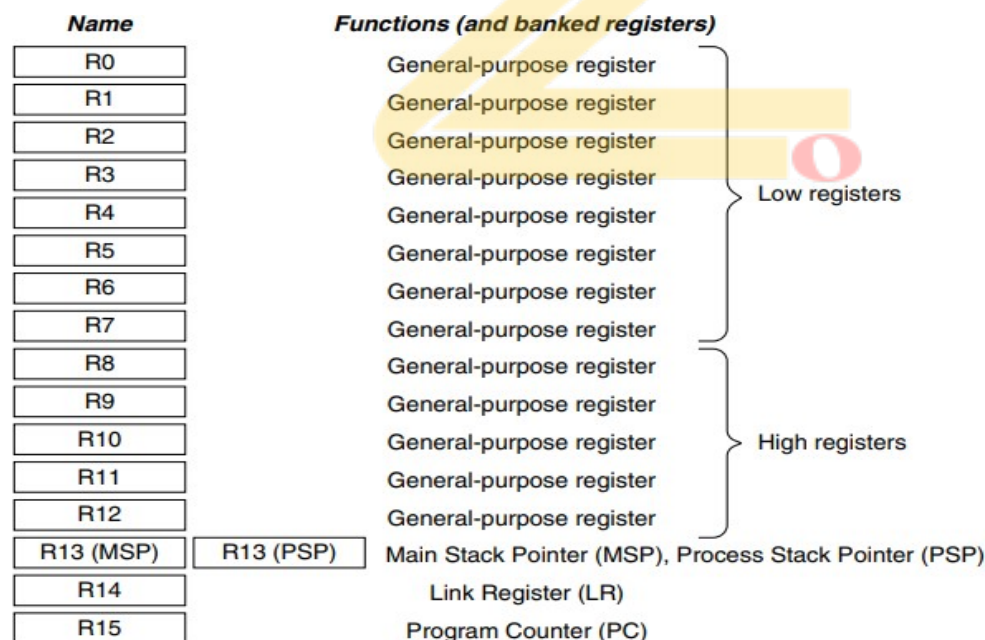


**Fig1. 3.** Registers in the Cortex-M3

### Stack Pointer R13

R13 is the stack pointer (SP). In the Cortex-M3 processor, there are two SPs. This duality allows two separate stack memories to be set up. When using the register name R13, you can only access the current SP; the other one is inaccessible unless you use special instructions to move to special register from general-purpose register (MSR) and move special register to general-purpose register (MRS).

The two SPs are as follows:

- **Main Stack Pointer (MSP) or SP\_main** in ARM documentation: This is the default SP; it is used by the operating system (OS) kernel, exception handlers, and all application codes that require privileged access.
- **Process Stack Pointer (PSP) or SP\_process** in ARM documentation: This is used by the base-level application code (when not running an exception handler).

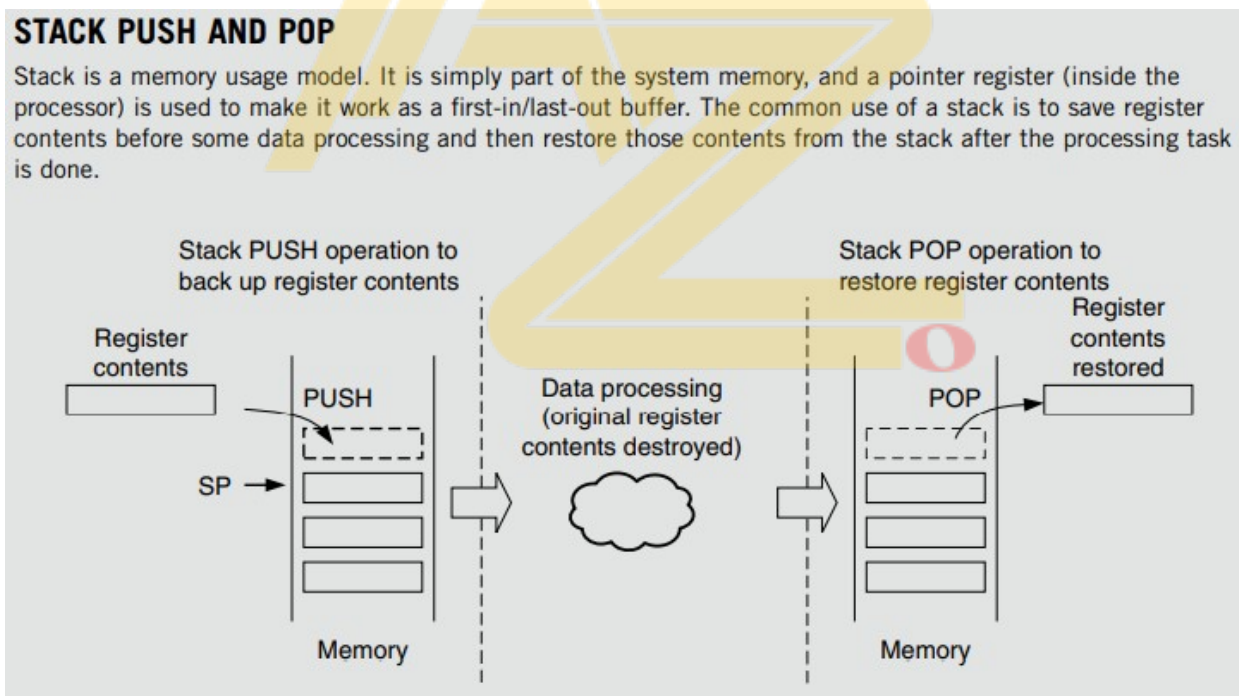



In the Cortex-M3, the instructions for accessing stack memory are PUSH and POP. The assembly language syntax is as follows (text after each semicolon [;] is a comment):

**PUSH {R0} ; R13=R13-4, then Memory[R13] = R0**

**POP {R0} ; R0 = Memory[R13], then R13 = R13 + 4**

### Link Register R14:

R14 is the link register (LR). Inside an assembly program, you can write it as either R14 or LR. LR is used to store the return program counter (PC) when a subroutine or function is called—for example, when you're using the branch and link (BL) instruction:

```
main : Main program
...
BL function1 : Call function1 using Branch with Link instruction.
               : PC = function1 and
               : LR = the next instruction in main
...
function1
...           : Program code for function 1
BX LR        : Return
```

### Program Counter R15:

R15 is the PC. You can access it in assembler code by either R15 or PC. Because of the pipelined nature of the Cortex-M3 processor, when you read this register, you will find that the value is different than the location of the executing instruction, normally by 4.

**0x1000 : MOV R0, PC ; R0 = 0x1004**

In other instructions like literal load (reading of a memory location related to current PC value), the effective value of PC might not be instruction address plus 4 due to alignment in address calculation. But the PC value is still at least 2 bytes ahead of the instruction address during execution

## Special Registers:


The Cortex-M3 processor also has a number of special registers. They

are as follows:

- Program Status registers (PSRs)
- Interrupt Mask registers (PRIMASK, FAULTMASK, and BASEPRI)
- Control register (CONTROL)

Special registers can only be accessed via MSR and MRS instructions; they do not have memory addresses:

MRS <reg>, <special\_reg>; Read special register  
MSR <special\_reg>, <reg>; write to special register

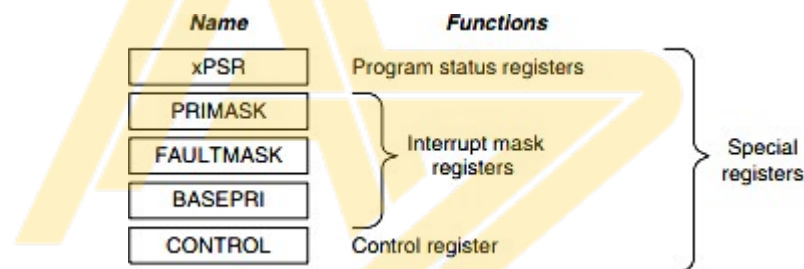

Register	Function
xPSR	Provide arithmetic and logic processing flags (zero flag and carry flag), execution status, and current executing interrupt number
PRIMASK	Disable all interrupts except the nonmaskable interrupt (NMI) and hard fault
FAULTMASK	Disable all interrupts except the NMI
BASEPRI	Disable all interrupts of specific priority level or lower priority level
CONTROL	Define privileged status and stack pointer selection

## The Built-In Nested Vectored Interrupt Controller:

The Cortex-M3 processor includes an interrupt controller called the Nested Vectored Interrupt Controller (NVIC). It is closely coupled to the processor core and provides a number of features as follows:

Nested interrupt support •

Vectored interrupt support

Dynamic priority changes support

Reduction of interrupt latency

Interrupt masking

**Nested Interrupt Support:** The NVIC provides nested interrupt support. All the external interrupts and most of the system exceptions can be programmed to different priority levels. When an interrupt occurs, the NVIC compares the priority of this interrupt to the current running priority level. If the priority of the new interrupt is higher than the current level, the interrupt handler of the new interrupt will override the current running task.

**Vectored Interrupt Support:** The Cortex-M3 processor has vectored interrupt support. When an interrupt is accepted, the starting address of the interrupt service routine (ISR) is located from a vector table in memory. There is no need to use software to determine and branch to the starting address of the ISR. Thus, it takes less time to process the interrupt request.

**Dynamic Priority Changes Support:** Priority levels of interrupts can be changed by software during run time. Interrupts that are being serviced are blocked from further activation until the ISR is completed, so their priority can be changed without risk of accidental reentry.

**Reduction of Interrupt Latency:** The Cortex-M3 processor also includes a number of advanced features to lower the interrupt latency. These include automatic saving and restoring some register contents, reducing delay in switching from one ISR to another, and handling of late arrival interrupts


**Interrupt Masking:** Interrupts and system exceptions can be masked based on their priority level or masked completely using the interrupt masking registers BASEPRI, PRIMASK, and FAULTMASK.

They can be used to ensure that time-critical tasks can be finished on time without being interrupt

## The Memory Map:

The Cortex-M3 has a predefined memory map. This allows the built-in peripherals, such as the interrupt controller and the debug components, to be accessed by simple memory access instructions. Thus, most system features are accessible in C program code. The predefined memory map also allows the Cortex-M3 processor to be highly optimized for speed and ease of integration in system-on-a-chip (SoC) designs.

The Cortex-M3 design has an internal bus infrastructure optimized for this memory usage. In addition, the design allows these regions to be used differently. For example, data memory can still be put into the CODE region, and program code can be executed from an external Random Access Memory (RAM) region.

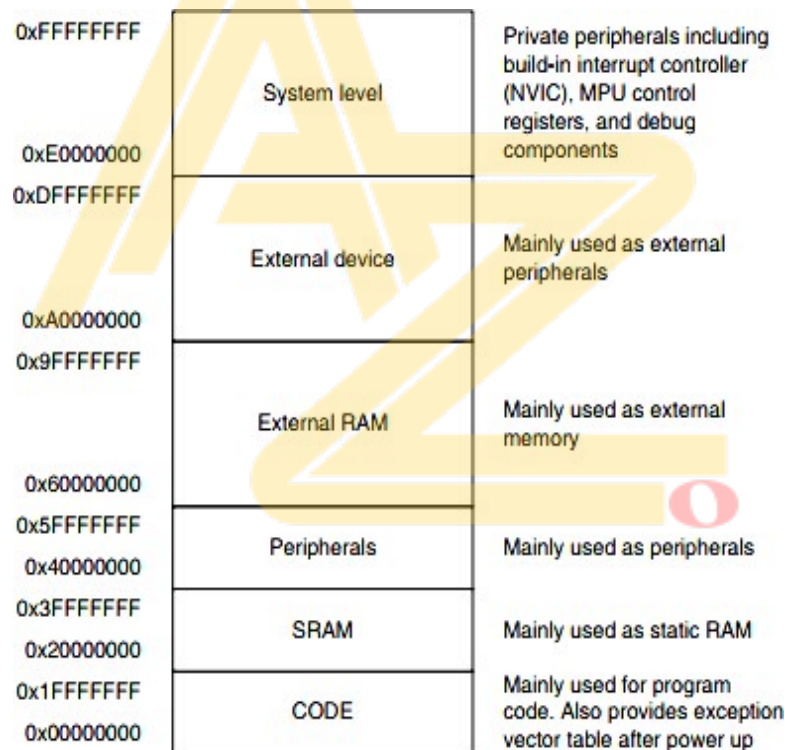

## The Bus Interface:

There are several bus interfaces on the Cortex-M3 processor. They allow the Cortex-M3 to carry instruction fetches and data accesses at the same time.

The main bus interfaces are as follows:

- Code memory buses
- System bus
- Private peripheral bus

The code memory region access is carried out on the code memory buses, which physically consist of two buses, one called I-Code and other called D-Code. These are optimized for instruction fetches for best instruction execution speed. The system bus is used to access memory and peripherals. This provides access to the Static Random Access Memory (SRAM), peripherals, external RAM, external devices, and part of the system level memory regions.

## The Instruction Set:

The Cortex-M3 supports the Thumb-2 instruction set. This is one of the most important features of the Cortex-M3 processor because it allows 32-bit instructions and 16-bit instructions to be used together for high code density and high efficiency. It is flexible and powerful yet easy to use.

In previous ARM processors, the central processing unit (CPU) had two operation states: a 32-bit ARM state and a 16-bit Thumb state. In the ARM state, the instructions are 32 bits and can execute all supported instructions with very high performance. In the Thumb state, the instructions are 16 bits, so there is a much higher instruction code density, but the Thumb state does not have all the functionality of ARM instructions and may require more instructions to complete certain types of operations.

The Cortex-M3 processor has a number of advantages over traditional ARM processors, such as:

- No state switching overhead, saving both execution time and instruction space
- No need to separate ARM code and Thumb code source files, making software development and maintenance easier
- It's easier to get the best efficiency and performance, in turn making it easier to write software, because there is no need to worry about switching code between ARM and Thumb to try to get the best density/performance.

The Cortex-M3 processor has a number of interesting and powerful instructions. Here are a few examples:

- UFBX, BFI, and BFC: Bit field extract, insert, and clear instructions
- UDIV and SDIV: Unsigned and signed divide instructions
- WFE, WFI, and SEV: Wait-For-Event, Wait-For-Interrupts, and Send-Event; these allow the processor to enter sleep mode and to handle task synchronization on multiprocessor systems
- MSR and MRS: Move to special register from general-purpose register and move special register to general-purpose register; for access to the special registers.



## Interrupts and Exceptions:

The Cortex-M3 processor implements a new exception model, introduced in the ARMv7-M architecture. This exception model differs from the traditional ARM exception model, enabling very efficient exception handling. It has a number of system exception handling. It has a number of system exceptions plus a number of external Interrupt Request (IRQs) (external interrupt inputs).

There is no fast interrupt (FIQ) (fast interrupt in ARM7/ARM9/ ARM10/ARM11) in the Cortex-M3; however, interrupt priority handling and nested interrupt support are now included in the interrupt architecture. Therefore, it is easy to set up a system that supports nested interrupts (a higher-priority interrupt can override or preempt a lower-priority interrupt handler) and that behaves just like the FIQ in traditional ARM processors.

Exception Number	Exception Type	Priority	Function
1	Reset	-3 (Highest)	Reset
2	NMI	-2	Nonmaskable interrupt
3	Hard fault	-1	All classes of fault, when the corresponding fault handler cannot be activated because it is currently disabled or masked by exception masking
4	MemManage	Settable	Memory management fault; caused by MPU violation or invalid accesses (such as an instruction fetch from a nonexecutable region)
5	Bus fault	Settable	Error response received from the bus system; caused by an instruction prefetch abort or data access error
6	Usage fault	Settable	Usage fault; typical causes are invalid instructions or invalid state transition attempts (such as trying to switch to ARM state in the Cortex-M3)
7-10	—	—	Reserved
11	SVC	Settable	Supervisor call via SVC instruction
12	Debug monitor	Settable	Debug monitor
13	—	—	Reserved
14	PendSV	Settable	Pendable request for system service
15	SYSTICK	Settable	System tick timer
16-255	IRQ	Settable	IRQ input #0-239

## Debugging Support:

The Cortex-M3 processor includes a number of debugging features, such as program execution controls, including halting and stepping, instruction breakpoints, data watchpoints, registers and memory accesses, profiling, and traces. The debugging hardware of the Cortex-M3 processor is based on the CoreSight™ architecture.

Unlike traditional ARM processors, the CPU core itself does not have a Joint Test Action Group (JTAG) interface. Instead, a debug interface module is decoupled from the core, and a bus interface called the Debug Access Port (DAP) is provided at the core level. Through this bus interface, external debuggers can access control registers to debug hardware as well as system memory, even when the processor is running. The control of this bus interface is carried out by a Debug Port (DP) device.

The DPs currently available are the Serial-Wire JTAG Debug Port (SWJ-DP) (supports the traditional JTAG protocol as well as the Serial-Wire protocol) or the SW-DP (supports the Serial-Wire protocol only). A JTAG-DP module from the ARM CoreSight product family can also be used. Chip manufacturers can choose to attach one of these DP modules to provide the debug interface.

Chip manufacturers can also include an Embedded Trace Macrocell (ETM) to allow instruction trace. Trace information is output via the Trace Port Interface Unit (TPIU), and the debug host (usually a Personal Computer [PC]) can then collect the executed instruction information via external trace capturing hardware.

## Stack Memory Operations:

In the Cortex-M3, besides normal software-controlled stack PUSH and POP, the stack PUSH and POP operations are also carried out automatically when entering or exiting an exception/interrupt handler. In this section, we examine the software stack operations.


### Operation:

In general, stack operations are memory write or read operations, with the address specified by an SP. Data in registers is saved into stack memory by a PUSH operation and can be restored to registers later by a POP operation. The SP is adjusted automatically in PUSH and POP so that multiple data PUSH will not cause old stacked data to be erased.

The function of the stack is to store register contents in memory so that they can be restored later, after a processing task is completed. For normal uses, for each store (PUSH), there must be a corresponding read (POP), and the address of the POP operation should match that of the PUSH operation. When PUSH/POP instructions are used, the SP is incremented/decremented automatically. When program control returns to the main program, the R0–R2 contents are the same as before.

Notice the order of PUSH and POP: The POP order must be the reverse of PUSH. These operations can be simplified, thanks to PUSH and POP instructions allowing multiple load and store. In this case, the ordering of a register POP is automatically reversed by the processor. You can also combine RETURN with a POP operation. This is done by pushing the LR to the stack and popping it back to PC at the end of the subroutine.

### Cortex-M3 Stack Implementation:

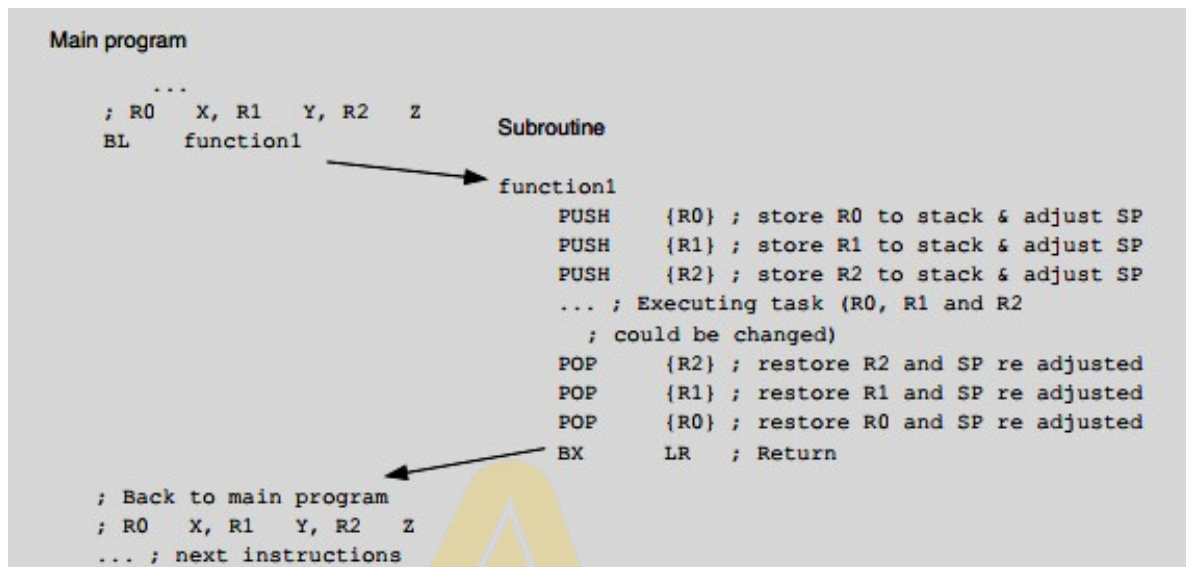

## 1. 16 Reset Sequence

After the processor exits reset, it will read two words from memory

- Address 0x00000000: Starting value of R13 (the SP)
- Address 0x00000004: Reset vector (the starting address of program execution; LSB should be set to 1 to indicate Thumb state)

This differs from traditional ARM processor behavior. Previous ARM processors executed program code starting from address 0x0. Furthermore, the vector table in previous ARM devices was instructions.

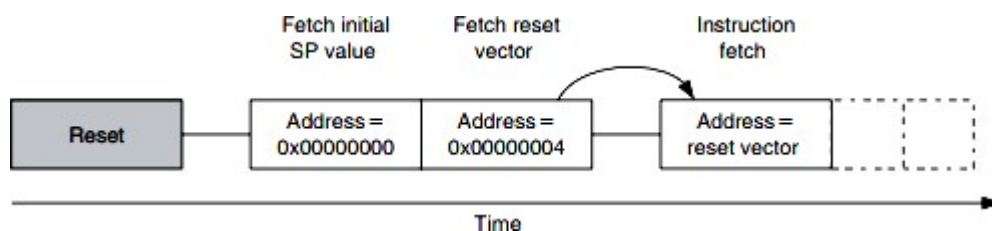


Figure 3.Reset sequence

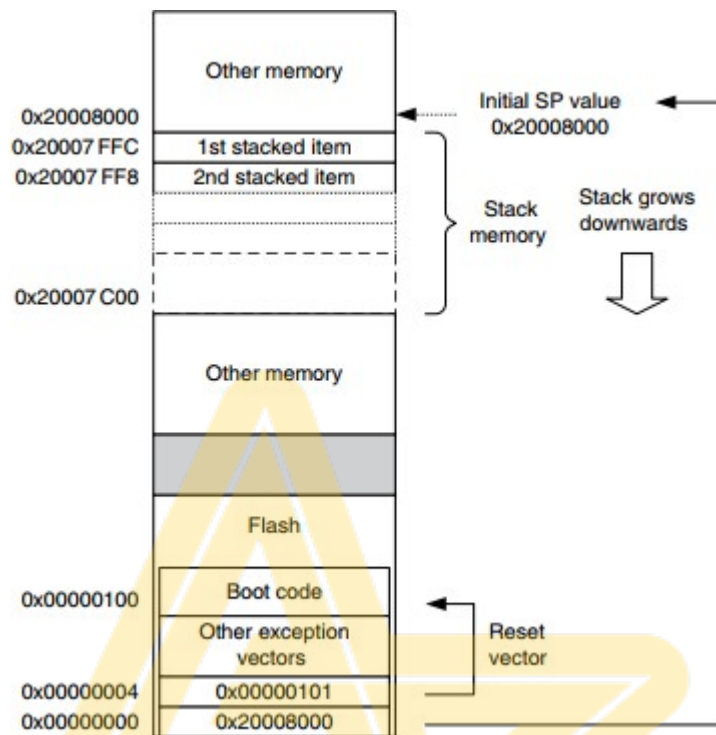


Figure.4 Initial Stack Pointer Value and Initial Program Counter Value Example.

In the Cortex-M3, the initial value for the MSP is put at the beginning of the memory map, followed by the vector table, which contains vector address values. (The vector table can be relocated to another location later, during program execution.) In addition, the contents of the vector table are address values not branch instructions. The first vector in the vector table (exception type 1) is the reset vector, which is the second piece of data fetched by the processor after reset. Because the stack operation in the Cortex-M3 is a full descending stack (SP decrement before store), the initial SP value should be set to the first memory after the top of the stack region. For example, if you have a stack memory range from 0x20007C00 to 0x20007FFF (1 KB), the initial stack value should be set to 0x20008000.

## Recommended Questions

1. Briefly discuss how Cortex-M3 address the requirements of the 32-bit embedded processor market
2. Briefly explain the Thumb-2 technology and its advantages over thumb instruction set with relevant diagram.
3. Write a short note on the applications of Cortex-M3
4. With a neat diagram, explain the architecture of ARM cortex M3 microcontroller.
5. What are the various registers in ARM Cortex M3? Specify the function of each of them.
6. Briefly describe the Special Register of ARM cortex M3.
7. Briefly explain about the operation modes and levels with relevant diagrams in case of ARM Cortex-M3
8. Explain the features of Nested vector Interrupt controller of ARM cortex M3.
9. With neat diagram explain the predefined memory map of ARM Cortex-M3
10. Write a short note on a) Bus interface b) Memory Protection units of ARM cortex M3.
11. Describe the interrupts and exceptions supported by ARM Cortex M3.
12. Describe the debugging support in ARM Cortex M3.
13. Explain the stack operations using PUSH and POP instructions in ARM Cortex M3.
14. With relevant diagrams explain the reset sequence in ARM cortex M3.