

# Aprx 2.9 Manual

A special-purpose Ham Radio software  
for  
UNIX-like environments, including Linux



## Table of Contents

1	What is APRX?	5
2	Configuration Examples	7
2.1	Minimal Configuration of Rx-iGate	8
2.2	Minimal Configuration APRS Digipeater	9
2.3	Controlling New-n-paradigm	10
2.4	Filtering at APRS Digipeater	11
2.5	Combined APRS Digipeater and Rx-iGate	12
2.6	Doing Transmit-iGate	14
2.7	Digipeater and Transmit-iGate	15
3	Configuration in details	16
3.1	The “mycall” Parameter	16
3.2	The “myloc” Parameter	16
3.3	Aprx Configuration Parameter Types	17
3.4	The “<aprsis>” section	18
3.5	The “<logging>” section	20
3.5.1	The <i>rflog</i> file	20
3.6	The “<interface>” sections	21
3.6.1	General note about serial ports	21
3.6.1.1	USB serial port powering and reliability	22
3.6.2	Serial port init-strings	22
3.6.3	The KISS variations	23
3.6.4	POSIX serial-port devices, KISS mode, sub-interface 0	24
3.6.5	POSIX serial-port devices, KISS mode, multiple sub-interfaces	25
3.6.6	POSIX serial-port devices, KISS mode with isochronous TNC-id polling	26
3.6.7	POSIX serial-port devices, TNC2 mode	26
3.6.8	POSIX serial-port devices, DPRS mode	27
3.6.9	Linux AX25-DEVICE	27
3.6.10	Networked tcp-stream connected terminal devices	28
3.6.11	The NULL-DEVICE	29
3.6.12	Telemetry to APRS-IS control	29
3.7	The “<beacon>” sections	30
3.8	The “<telemetry>” sections	34
3.9	The <digipeater> sections	35
3.9.1	The <trace> sub-section	36
3.9.2	The <wide> sub-section	36
3.9.3	The <source> sub-sections	37
3.9.4	Filter entries	39
3.9.4.1	Filter A – Area by Corner Coordinates	41
3.9.4.2	Filter B – Budlist	41
3.9.4.3	Filter D – Digipeater List	41
3.9.4.4	Filter F – Friends Range	41
3.9.4.5	Filter G – Group Messaging	42
3.9.4.6	Filter M – My Range	42
3.9.4.7	Filter O – Object/Item ID	42
3.9.4.8	Filter P – Source Address Prefix	42

3.9.4.9	Filter T – Packet Type.....	42
3.9.4.10	Filter U – Unproto.....	43
3.9.5	Regex-filter entries.....	44
3.9.6	Digipeating other than APRS packets.....	44
4	Advanced Configuration Examples.....	45
4.1	Doing Transmit-iGate.....	45
4.2	A Fill-In Digipeater.....	46
4.3	Station Identification.....	48
4.4	Using Multiple Radios.....	49
4.5	A Tx-iGate with Multiple Radios on Each Frequency.....	50
4.6	A Bi-Directional Cross-band Digipeater.....	52
4.7	Limited Service Area Digipeater.....	53
4.8	Limited Service Area Tx-iGate.....	54
4.9	Sending telemetry to radio interface.....	54
4.10	DPRS-to-APRS Gateway.....	55
5	Running the Aprx Program.....	56
5.1	Normal Operational Running.....	56
5.1.1	On RedHat/Fedora/SuSE/relatives.....	56
5.1.2	On Debian/Ubuntu/derivatives.....	57
5.1.3	Logrotate (Linux systems).....	57
5.2	The aprs.fi Telemetry Services for Aprx.....	58
5.3	Keywords on <trace> and <wide> sub-sections of <digipeater> sections.....	59
5.4	Effect of “viscous-delay” on a Digipeater.....	60
5.5	Digipeater/I-Gate Symbol Selection.....	61
6	Compile Time Options.....	63
6.1	Building Debian package.....	63
6.2	Building RPM package.....	63
7	Debugging.....	65
7.1	Testing Configuration.....	65
7.2	Hunting bugs.....	66
7.2.1	With gdb.....	66
7.2.2	With valgrind.....	67
8	Colophon.....	69
9	Credits.....	69

# 1 What is APRX?

The Aprx program is for amateur radio APRS™ networking.

The Aprx program is available at:

<http://thelifeofkenneth.com/aprx/>

Discussion forum is at:

<http://groups.google.com/group/aprx-software>

The Aprx program can do job of at least three separate programs:

1. APRS iGate
2. APRS Digipeater
3. DPRS-to-APRS gateway

The digipeater functionality can also be used for other forms of AX.25 networking, should a need arise.

The program has ability to sit on a limited memory system, it is routinely run on OpenWRT machines with 8 MB of RAM and Linux kernel. 128 MB RAM small PC is quite enough for this program with 64 MB ram disk, a web-server, and much much more.


The program is happy to run on any POSIX compatible platform, a number of UNIXes have been verified to work, Windows needs some support code to work.

On Linux platform the system supports also seamlessly the Linux kernel AX.25 devices.

This program will also report telemetry statistics on every interface it has. This can be used to estimate radio channel loading, and in general to monitor system and network health.

The telemetry data is viewable via APRSIS based services, like <http://aprs.fi>

The message flows inside the Aprx are as follows, note also where you have filtering opportunities.

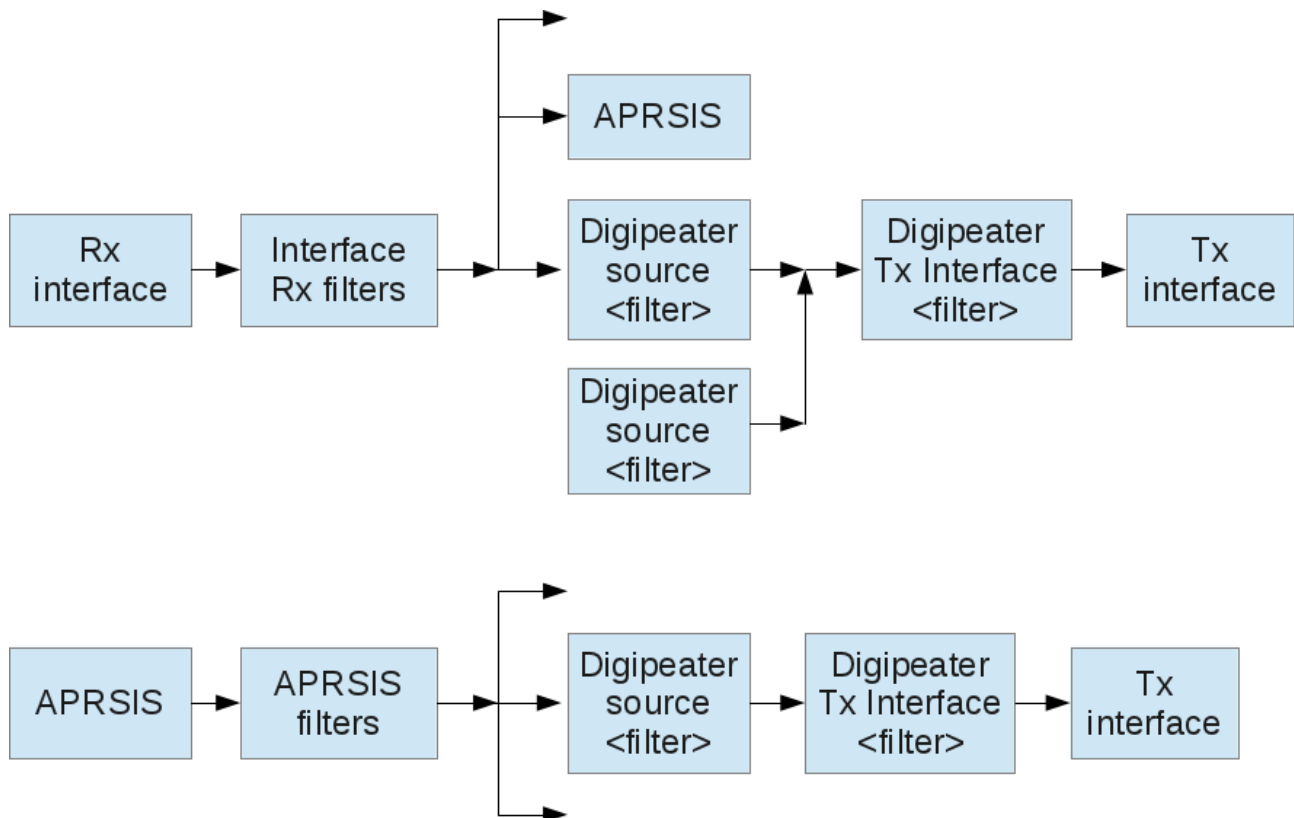

*Note: The "Interface Rx filters" feature has not been implemented, and does exist only in these pictures.*

The Aprx program has been written and is maintained by Matti Aarnio, OH2MQK.

Reachable for example at: [oh2mqk \(at\) srnl.fi](mailto:oh2mqk@srnl.fi)

Email list: [aprx-software \(at\) googlegroups.com](mailto:aprx-software@googlegroups.com)

## 2 Configuration Examples

Basis of Aprx configuration is in understanding how interfaces and message flows depend on each other:

In following chapters there are examples for:


1. Minimal Configuration of Rx-iGate
2. Minimal Configuration APRS Digipeater
3. Controlling New-n-paradigm
4. Filtering at APRS Digipeater
5. Combined APRS Digipeater and Rx-iGate
6. Doing Transmit-iGate
7. Digipeater and Transmit-iGate

Safest possible setup not requiring transmit licenses is first: the Rx-iGate.

Full feature bi-directional APRS-IS <-> RF i-gate is the last one.

At chapter 4, Advanced Configuration Examples, you can find more advanced things with multiple radios at same or at different frequencies, controlling what kind of packets and from what source locations you want to relay to your current transmitter (or not relay.)

## 2.1 Minimal Configuration of Rx-iGate

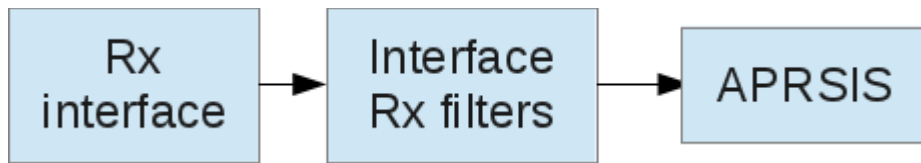

*Note: The "Interface Rx filters" feature has not been implemented, and does exist only in these pictures.*

To make a receive-only iGate, you need simply to configure:

1. mycall parameter
2. APRSIS network connection
3. Interface for the radio

```
mycall  N0CALL-1

<aprsis>
  passcode  -1
  server    rotate.aprs2.net
</aprsis>

<interface>
  serial-device  /dev/ttyUSB0  19200 8n1  KISS
</interface>
```

You need to fix the "N0CALL-1" callsign with whatever you want it to report receiving packets with (it must be unique in global APRSIS network!) and the APRS-IS passcode field. Contact the Aprx maintainer with the callsign used to receive an APRS-IS passcode if one has not already been issued to you for the used call.

You will also need to fix the interface device with your serial port, network TCP stream server, or Linux AX.25 device. Details further below.

In usual case of single radio TNC interface, this is all that a receive-only APRS iGate will need.

Detail configuration part tells about the available options to initialize the TNC in case it isn't always talking using KISS.



You need to look at <http://www.aprs2.net/> for possible other suitable servers to use. The “rotate.aprs2.net” uses global pool of servers, however some regional pool might be better suited – for example: noam.aprs2.net, euro.aprs2.net, etc.

***In most common case of wanting to make an i-gate, you do not want to use APRSIS service port parameter at all! Using “all traffic” port of 10151, or anything else than “user port” 14580 is bound to cause all sorts of troubles. This includes excessive APRSIS to Aprx data traffic, severe bloat of packet history tracking memory database, etc.***

## 2.2 Minimal Configuration APRS Digipeater



*Note: The "Interface Rx filters" feature has not been implemented, and does exist only in these pictures.*

To make a single interface digipeater, you will need:

1. mycall parameter
2. <interface> definition
3. <digipeater> definition

This is not an Rx-iGate as there is no APRSIS section.

Additional bits over the Rx-iGate configuration are highlighted below:

```
mycall  N0CALL-1

<interface>
    serial-device /dev/ttyUSB0  19200 8n1    KISS
    tx-ok        true
</interface>

<digipeater>
    transmitter $mycall
    <source>
        source  $mycall
    </source>
</digipeater>
```

The interface must be configured for transmit mode (default mode is receive-only)

Defining a digipeater is fairly simple as shown.

***Do not put “alias wide1-1” or any other of that type on the <interface> definitions! Aprx understands the “new-n-paradigm” digipeater routing at a fundamental level, and does not need kludges that old AX.25 digipeater systems needed.***

The digipeater handles AX.25 UI frames with APRS packet types using APRS rules, including duplicate detection, “new-n-paradigm” processing, etc.

At the same time it also handles all kinds of AX.25 frames as basic AX.25 digipeater matching next-hop with interface callsigns and aliases (see chapter 3.6 “The “<interface>” sections”)

## 2.3 Controlling New-n-paradigm

By default the New-n-paradigm processing uses stems of “TRACE”, “WIDE” and “RELAY” on which it adds an original request indicating “n” value suffix character, plus actual hop-by-hop processing counter on SSID field: **WIDE2-2 -> WIDE2-1 -> WIDE2\***

The Aprx has following default settings on TRACE and WIDE rules. TRACE rules are always taking precedence.

```
<digipeater>
  transmitter $mycall

  <trace>
    maxreq      3      # in range: 1 .. 7, default: 4
    maxdone     3      # in range: 1 .. 7, default: 4
    keys        TRACE,WIDE,RELAY
  </trace>
  <wide>
    maxreq      3      # in range: 1 .. 7, default: 4
    maxdone     3      # in range: 1 .. 7, default: 4
    keys        TRACE,WIDE,RELAY
  </wide>

  <source>
    source      $mycall
  </source>
</digipeater>
```

The request will be discarded from digipeating, if sum of requested steps or sum of accounted steps exceeds the configured limit (default on both: 4).

That is, if a request packet is received with excessively large **WIDEn-N** request, like WIDE7-6, such packet will never be digipeated at all.

There is one exception: If a packet is observed to have no executed steps done when it is being received by Aprx, then Aprx marks all VIA fields executed (H-bit set), and sends it back to radio. This is by Bob Bruninga's request, that pathological packets should be treated so on *first* appearance on radio network to give sending user a change to observe that his packet needs fixing. **WIDE7-7 -> WIDE7-7\***

Note: The Rx-iGate processing will happen in all cases regardless of digipeater filtering.

## 2.4 Filtering at APRS Digipeater



*Note: The "Interface Rx filters" feature has not been implemented, and does exist only in these pictures.*

To make a single interface digipeater, you will need:

1. mycall parameter
2. myloc parameter (for "filter m/100" only)
3. <interface> definition
4. <digipeater> definition

Additional bits over the minimal digipeater are highlighted below:

```

mycall N0CALL-1
myloc lat ddmN mmN lon dddmm.mmE

<interface>
    serial-device /dev/ttyUSB0 19200 8n1 KISS
    tx-ok true
</interface>

<digipeater>
    transmitter $mycall
    <source>
        source $mycall
  
```

```

        filter      p/prfx  # additive filters
        filter      -p/prfx # subtractive filters
    </source>
</digipeater>

```

Without any *filter* parameters, the system will not inspect packet content to determine if it should be digipeated or not. It will digipeat everything.


When *filter* parameters are defined, there are two kinds:

- Additive: Packet matching on this may be eligible for digipeat
- Subtractive: Packet matching on this will be rejected even if it matched on Additive. In particular an “outside range” or “outside area” filters may be of interest to you.

There can be unlimited number of both kinds of filters.

Note: These filters are applied only on APRS type packets.

## 2.5 Combined APRS Digipeater and Rx-iGate

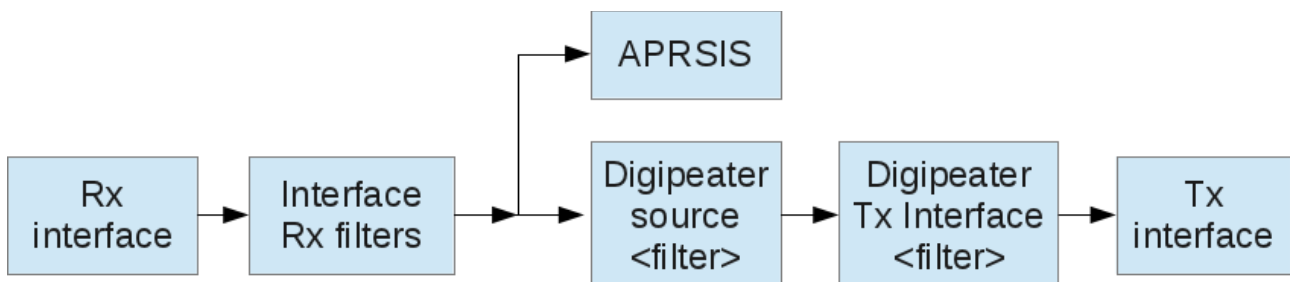

*Note: The "Interface Rx filters" feature has not been implemented, and does exist only in these pictures.*

Constructing a combined APRS Digipeater and Rx-iGate means combining previously shown configurations:

```

mycall  N0CALL-1

<aprsis>
    passcode  -1
    server    rotate.aprs2.net
</aprsis>

<interface>
    serial-device /dev/ttyUSB0  19200 8n1    KISS
    tx-ok        true
</interface>


```

```
<digipeater>
  transmitter $mycall

  <source>
    source $mycall
  </source>
</digipeater>
```

It really is as simple as that. When an <aprsis> section is defined, all declared <interface>s are Rx-iGate:d to APRSIS in addition to what else the system is doing.

## 2.6 Doing Transmit-iGate

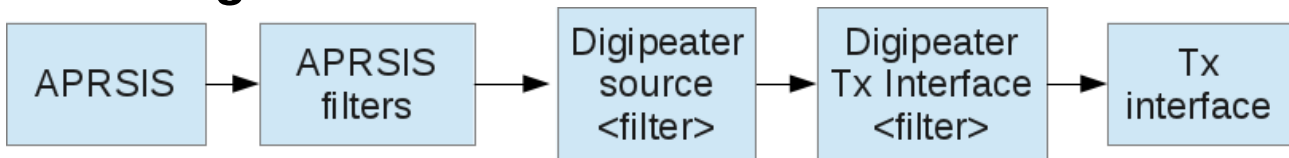

The APRSIS source on a digipeater will enable APRSIS -> RF iGate functionality.

Mandatory parts are “source APRSIS”, and “relay-type third-party”.

No filters are needed in usual case, and this example shows none.

Everything else is optional.

```

mycall N0CALL-1


<aprsis>
  passcode -1
  server rotate.aprs.net 14580
</aprsis>

<interface>
  serial-device /dev/ttyUSB0 19200 8n1 KISS
  tx-ok true
</interface>

<digipeater>
  transmitter $mycall
  <source>
    source APRSIS
    relay-type third-party
    via-path WIDE1-1 # default: none
    msg-path WIDE1-1 # default: none
  </source>
</digipeater>

```

## 2.7 Digipeater and Transmit-iGate

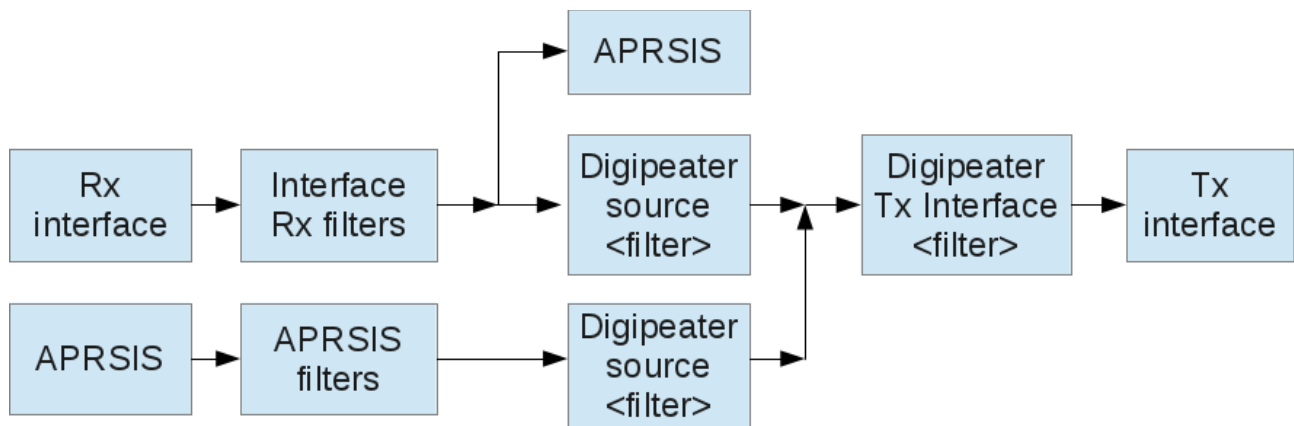

*Note: The "Interface Rx filters" feature has not been implemented, and does exist only in these pictures.*

This is fairly simple extension, but shows important aspect of Aprx's <digipeater> definitions, namely that there can be multiple sources!

```

mycall N0CALL-1

<aprsis>
  passcode -1
  server rotate.aprs.net 14580
</aprsis>

<interface>
  serial-device /dev/ttyUSB0 19200 8n1 KISS
  tx-ok true
</interface>

<digipeater>
  transmitter $mycall
  <source>
    source $mycall
  </source>
  <source>
    source APRSIS
    relay-type third-party
    # viscous-delay 5
  </source>
</digipeater>

```

Using both the radio port, and APRS-IS as sources makes this combined Tx-iGate, and digipeater.

## 3 Configuration in details

The Aprx configuration file uses sectioning style familiar from Apache HTTPD.

These sections are:

1. mycall
2. myloc
3. <aprsis>
4. <logging>
5. <interface>
6. <beacon>
7. <telemetry>
8. <digipeater>

Each section contains one or more of configuration entries with case depending type of parameters.

### 3.1 The “mycall” Parameter

The *mycall* entry is just one global definition to help default configuration to be minimalistic by not needing copying your callsign all over the place in the usual case of single radio interface setup.

### 3.2 The “myloc” Parameter

The *myloc* entry supplies self-location of the system as latitude+longitude coordinate pair. There is no support for position ambiguity.

The defined value can be used at <beacon> entries with token "\$myloc", which is used in place of explicit "lat" + "lon" coordinates.

The defined value supplies reference coordinate for digipeater "filter m/100" (distance from my location).

The syntax of the coordinates is APRS truncated form on NMEA lat/lon form:

```
lat  ddmm.mmN
lon  dddmm.mmE
```



That is, latitude (northing) degrees has two digits, longitude (easting) degrees has three digits. Both have two digits of minutes with leading zero as may be necessary, decimal point and two decimal minutes.

Latitude is followed by "N" or "S" letter, and longitude is followed by "E" or "W" letter.

### 3.3 Aprx Configuration Parameter Types

The Aprx configuration has following types of parameters on configuration entries:

- Parameters can be without quotes, when such are not necessary to embed spaces, or to have arbitrary binary content.
- Any parameter can be quoted by single or double quotes: " . . " ' . . '
- Any quoted parameter can contain \-escaped codes. Arbitrary binary bytes are encodable as "\xHH", where "HH" present two hex-decimal characters from "\x00" to "\xFF". Also quotes and backslash can be backslash-escaped: "\" "\\"
- Arbitrary binary parameter content is usable only where especially mentioned, otherwise at least "\x00" is forbidden.
- UTF-8 characters are usable in parameters with and without quotes.
- Callsign definitions (see below)
- Interval definitions (see below)
- Very long parameter lines can be folded on input file by placing a lone \-character at the end of the configuration file text line to continue the input line with contents of following line, for unlimited number of times.

The *interval-definition* is convenience method to give amount of time in other units, than integer number of seconds. An *interval-definition* contains series of decimal numbers followed by a multiplier character possibly followed by more of same. Examples:

```
2m2s
1h
```

The multiplier characters are:

1. s (S): Seconds, the default
2. m (M): Minutes
3. h (H): Hours
4. d (D): Days
5. w (W): Weeks

The *callsign* parameters are up to 6 alphanumeric characters followed by optional minus sign (“-”, the “hyphen”) and optional one or two alphanumeric characters. Callsigns are internally converted to all upper case form on devices. Depending on usage locations, the “SSID” suffix may be up to two alphanumeric characters, or just plain integer from 0 to 15. That latter applies when a strict conformance to AX.25 callsigns is required. Callsign parameter with suffix “-0” is canonicalized to a string without the “-0” suffix.

## 3.4 The “<aprsis>” section

The <aprsis> section defines communication parameters towards the APRS-IS network.

When you define <aprsis> section, all configured <interface>s will be Rx-iGate:d to the APRS-IS! Thus you can trivially add an Rx-iGate to a <digipeater> system, or to make a Rx-iGate without defining any <digipeater>.

The only required parameters are the server definition and your unique passcode:

```
<aprsis>
  passcode  -1
  server    rotate.aprs2.net    14580
</aprsis>
```

The passcode is a unique numeric “password” for your iGate callsign, which you will need to obtain from the server's operator, or calculate using the `aprspass`<sup>1</sup> program. If you already have a passcode for your callsign, use that. The same passcode works for all SSIDs (NOCALL-1, NOCALL-2, -3...).

The port number defaults to 14580, and can be omitted.

You need to look at <http://www.aprs2.net/> for possible other suitable servers to use. The “rotate.aprs2.net” uses global pool of servers, however some regional pool might be better suited – for example: noam.aprs2.net, euro.aprs2.net, etc.

You may also define multiple servers, if you absolutely want to push your data to specific ones. The connection will be established with one of them, and when it fails, then another one is tried. The “pick next” is done in a ring style:

```
<aprsis>
  passcode  -1
  server    server1.aprs2.net    14580
</aprsis>
<aprsis>
  passcode  -1
  server    server2.aprs2.net    14580
</aprsis>
```

1 Web search engines find several “aprspass” programs and web pages.

Use of other APRSIS server port than 14580 will likely do things that you absolutely do not want to happen. This includes excessive APRS-IS to Aprx packet traffic, severe bloat of packet history tracking database, etc.

Additional optional parameters are:

- login *callsign*
- heartbeat-timeout *interval-definition*
- filter *adjunct-filter-entry*

The *login* defaults to global *\$mycall*. Set it only if you login with other value than that stored on “mycall” parameter.

Adding “*heartbeat-timeout 1m*” will detect failure to communicate with APRS-IS a bit quicker than without it. The current generation of APRS-IS servers writes a heartbeat message every 20 seconds, and a two minute time-out on their waiting is more than enough:

```
<aprsis>
  passcode  -1
  server     rotate.aprs2.net
  heartbeat-timeout 1m
</aprsis>
```

The “*filter ...*” entries are concatenated, and given to APRS-IS server as adjunct filter definitions. For more information about their syntax, see:

<http://www.aprs-is.net/javAPRSFilter.aspx>

**NOTE:** For an Rx/Tx-iGate you do not need any additional explicit *filter* definitions. The option exists just in case you have some unusual reason needing them.

## 3.5 The “<logging>” section

The Aprx can log every kind of event happening, mainly you will be interested in *rflog*, and *aprxlog*.

Note: The *erlangfile* related bits are dependent on software being compiled using “--with-erlangstorage” option, which is not the default way in Aprx-2 series.

There is also a possibility to store statistics gathering memory segment on a filesystem backing store, so that it can persist over restart of the Aprx process. This is possible even on a small embedded machine (like OpenWRT), where statistics “file” resides on a ram-disk. This way you can alter configurations and restart the process, while still continuing with previous statistics dataset. Without the backing store this will cause at most 20 minute drop-off of statistics telemetry data.

Configuration options are:

- *aprxlog filename*
- *rflog filename*
- *dprslog filename*
- *pidfile filename*
- *erlangfile filename*
- *erlang-loglevel loglevel*
- *erlanglog filename*

Commonly you want setting *aprxlog*, and *rflog* entries. The *erlangfile*, and *pidfile* entries have compile time defaults, and need not to be defined unless different locations are wanted.

### 3.5.1 The *rflog* file

The *rflog* file has following format:

- Date + Time stamp to millisecond
- Interface callsign for radio ports, or 'APRSIS' for data coming up from there
- 'R' or 'T' depending on the direction
- "TNC2 format" printout of the received data. If there are embedded NUL bytes, they are included in the printout.

## 3.6 The “<interface>” sections

The <interface> sections define radio interfaces that the Aprx communicates with.

There are three basic interface device types:

1. Linux AX.25 devices (ax25-device)
2. Generic POSIX serial ports (serial-device)
3. Remote network serial ports (tcp-device)

The serial port devices can be reading TNC2 style monitoring messages (and be unable to transmit anything), or communicate with a few variations of KISS protocol (and transmit). On KISS protocols you can use device multiplexing, although cases needing polling for reception are not supported. Variations of KISS protocol are described separately.

On Linux systems the kernel AX.25 network devices are also available, and Aprx integrates fully with kernel AX.25 networking, however this is done *without* Linux `/etc/ax25/ax-ports` file by only referring on AX.25 callsigns of the interfaces. The Aprx does not need to know what is the physical port of particular AX.25 network interface.

Generally speaking: Each radio interface needs a unique callsign and to help the most common case of single radio interface, it defaults to one defined with *mycall* entry. The interface callsigns do not need to be proper AX.25 callsigns on receive-only serial/tcp-device interfaces, for example *N0CALL-R0 .. R9 .. RA .. RZ* are fine for Rx-only ports (but not for AX.25 network interfaces.)

As there are three different devices, there are three different ways to make an <interface> section.

### 3.6.1 General note about serial ports

The serial port implementations at different systems look to behave similarly, but still there are subtle differences.

Real serial ports are best, if you can have such.

USB "serial ports" depend very much on host drivers being able to operate them properly. Exactly same USB serial port device on different generations of operating system (PPC Mac vs. intel Macs as an example) seem to have radically different behaviour. Also same hardware with different operating systems (PPC Mac vs. PPC Debian) have different behaviour.

Naming of the serial ports at the system level do tend to vary too.

- `/dev/ttySnn`
- `/dev/ttyUSB00`
- `/dev/cu.usbserial-FTTPE1PS`

### 3.6.1.1 USB serial port powering and reliability

An observation with some models of FT's USB adapters has been that they need 5.25 Volts DC power fed to USB HUB they are connected to for reliable operation.

Another mitigation to this issue is adding "timeout" parameter on <interface> section:

```
<interface>
  serial-device  devicepath speed KISS
  timeout      10m
</interface>
```

Formerly the timeout was not initialized, since 2.09 it has default value of 60 minutes. You should tune it to smallest interval during which in your area there is always some traffic. When port read has not received anything during given time, it will close the port, and re-open. Quite often this restores USB serial port to functional state.

### 3.6.2 Serial port init-strings

Sometimes it is necessary to send an init-string to the TNC before it starts to talk back using KISS. What to put there does vary considerably.

The init-string may contain multiple commands. Each press of <ENTER> needs to be specified with a "\x0d" (hex code for "carriage return"). It's also a good idea to put one in the beginning of the init-string just in case the TNC would have received some line noise before getting our init-string.

```
<interface>
  serial-device  devicepath speed KISS
  initstring     "init-string-content"
  ....
</interface>
```

TNC model	Init-string content
TNC2	"\x0dKISS ON\x0dRESET\x0d"
Kantronics KPC3, Kantronics KAM Plus	"\x0dINTFACE KISS\x0dRESET\x0d"
Kantronics KPC3+	DO NOT USE. The firmware has broken KISS.
uTNT+	"\x0dKISS ON\x0d"

### 3.6.3 The KISS variations

The Aprx knows four variations of basic Chepponis/Karn KISS protocol, listed below in preference order:

1. **Stuttgart Modified Amateur-radio-CRC-KISS (SMACK)**
2. **FLEXNET KISS**
3. **BPQCRC alias XKISS**
4. Plain basic **KISS**

The **SMACK** uses one bit of CMD byte to indicate that it is indeed SMACK format of KISS frame. The bit in question is highest bit, which is highest sub-interface identity bit. Thus SMACK is not able to refer to sub-interfaces 8 to 15 of original KISS protocol. On the other hand, hardly anybody needs that many! It uses CRC-16 algorithm (not the same as CCITT-CRC used on AX.25 HDLC frame,) and is capable to detect loss or insert of single bytes in frame as well as single and sometimes also multiple bit flips in correct number of bytes within the frame.

The **FLEXNET** is a KISS protocol variation alike that of SMACK, but control byte has slightly different bit meanings. The FLEXNET has its own CRC checksum at the last two bytes of the KISS frame.

The **BPQCRC** alias **XKISS** uses single byte containing XOR of all bytes within the data frame (before the KISS frame encoding is applied/after it is taken off.) This is very weak checksum, as it does not detect addition/removal of 0x00 bytes at all, and is unable to detect flipping of same bit twice within the frame.

The plain basic **KISS** is adaptation of internet SLIP protocol, and has no checksum of any kind in the framing interface.

If at all possible, do choose to use SMACK!

It is available for TNC2 clones from:

<http://www.symek.com/g/tnc2firmware.html>

<http://www.symek.com/download/smack.zip>

Something else entirely would be 6PACK – which interleaves bulk packet data and low latency real time event data bytes on serial link. The 6PACK is not supported in Aprx itself, but a Linux system can interface with 6PACK TNC, and present it through AX.25 network.

Some SMACK installations operate best with initstring of:

```
<interface>
    serial-device /dev/ttyUSB0 9600 8n1 KISS
    initstring    "\x00"
    ....
</interface>
```

### 3.6.4 POSIX serial-port devices, KISS mode, sub-interface 0

```
<interface>
  serial-device devicepath speed KISS
  initstring    "init-string-content"
  timeout       interval-definition
  tx-ok         boolean
  callsign      callsign
  alias         RELAY,TRACE,WIDE
</interface>
```

or its equivalent:

```
<interface>
  serial-device devicepath speed KISS
  initstring    "init-string-content"
  timeout       interval-definition
  <kiss-subif 0>
    tx-ok       boolean
    callsign    callsign
    # alias     RELAY,TRACE,WIDE
  </kiss-subif>
</interface>
```

You can use a binary-transparent AX.25 radio modem on a KISS type connection. The above example shows case of KISS modem on sub-interface 0.

The *tx-ok* entry (default value: "false") controls whether or not the interface is capable to transmit something.

The *callsign* entry defines system wide unique identity for the radio port, and for transmit capable interfaces it must be valid AX.25 callsign form, for receive-only ports it can be anything that APRSIS accepts.

The *initstring* is a byte-string to be sent to the kiss devices. You can use this to send initialization values to KISS modems. Difficulty is that you must manually encode here everything, including KISS framing.

Interface *alias* entry can be issued as comma-separated lists of AX.25 callsigns, or as multiple *alias* entries. Default set is above shown *RELAY,TRACE,WIDE*. If you define any *alias* entry, the default set is replaced with your definitions. (Do **not** define "WIDE1-1" type kludge aliases that old TNC digipeaters seem to need.)

The *speed* is one of pre-defined standard baud rate speeds: 1200, 1800, 2400, 4800, 9600, 19200, 38400, 57600, 115200, 230400, 460800, 500000, 576000. Probably not all of them are supported in your platform, but at least the ones up to 38400 should be quite common.



### 3.6.5 POSIX serial-port devices, KISS mode, multiple sub-interfaces

```

<interface>
  serial-device devicepath speed KISS
  initstring      "init-string-content"
  timeout         interval-definition
  <kiss-subif 0>
    tx-ok           boolean
    callsign        callsign
    # alias         RELAY, TRACE, WIDE
  </kiss-subif>
  <kiss-subif 1>
    tx-ok           boolean
    callsign        callsign
    # alias         RELAY, TRACE, WIDE
  </kiss-subif>
</interface>

```

You can use a binary-transparent AX.25 radio modem on a KISS type connection. The above example shows case of KISS modem on sub-interface 0.

The *initstring* is a byte-string to be sent to the kiss devices. You can use this to send initialization values to KISS modems. Difficulty is that you must manually encode here everything, including KISS framing.

You can set a *timeout* parameter to close and reopen the device with optional *initstring* sending, which will happen if there is *interval-definition* amount of time from last received data on the serial port. Suitable amount of time depends on your local network channel, somewhere busy a 5 minutes is quite enough ("5m"), elsewhere one hour may not be enough ("60m").

The <kiss-subif N> sectioning tags have N in range of 0 to 7 on SMACK mode, and 0 to 15 on other KISS modes. On each <kiss-subif N> sub-sections you can use:

- The *tx-ok* entry (default value: "false") to control whether or not the sub-interface is capable to transmit something.
- The *callsign* entry to give unique identity for the sub-interface. For transmit capable sub-interfaces it must be of valid AX.25 callsign form, for receive-only ports it can be anything that APRSIS accepts.
- The sub-interface *alias* entry can be issued as comma-separated lists of AX.25 call-signs, or as multiple *alias* entries. Default set is above shown *RELAY,TRACE,WIDE*. If you define any *alias* entry, the default set is replaced with your definitions. (Do **not** define "WIDE1-1" type kludge aliases that old TNC digipeaters seem to need for a "fill-in digi", see chapter 4.2 A Fill-In Digipeater for Aprx's way of doing it.)

### 3.6.6 POSIX serial-port devices, KISS mode with isochronous TNC-id polling.

Some KISS TNCs require that the host does regular polling of each sub-interface in order to report a reception of a packet.

```
<interface>
  serial-device  devicepath speed KISS  pollmillis 250
  <kiss-subif 0>
    tx-ok          boolean
    callsign       callsign
    #pollmillis 250
  </kiss-subif>
  <kiss-subif 1>
    tx-ok          boolean
    callsign       callsign
    #pollmillis 250
  </kiss-subif>
</interface>
```

At version 2.05 an interface specific option was added, which sends out the poll request every given number of milliseconds. If you define multiple interfaces with “*pollmillis*”, the whole system will be using smallest value.

Future development option will be to define polling intervals per sub-interface, and operate them per sub-interface.

### 3.6.7 POSIX serial-port devices, TNC2 mode

```
<interface>
  serial-device  devicepath speed TNC2
  callsign       callsign
  timeout        interval-definition
  initstring     "init-string-content"
</interface>
```

If you absolutely positively must have a TNC2 monitoring mode radio modem, then it can be used for passive monitoring of heard APRS packets, but beware that such radio mo-

dems usually also corrupt some of heard APRS packets, and that this type of interface is not available for transmit mode or digipeating of received packets. This may only be used for Rx-only lgates. Only mandatory entry is “serial-device”, others have usable defaults.

The *callsign* entry defines unique identity for the radio port, but it need not to be valid AX.25 callsign.

You can set a *timeout* parameter to close and reopen the device with optional *initstring* sending, which will happen if there is *interval-definition* amount of time from last received data on the serial port. Suitable amount of time depends on your local network channel, somewhere busy a 5 minutes is quite enough (“5m”), elsewhere one hour may not be enough (“60m”).

You can use the *initstring* to issue a binary byte stream to the serial port to initialize the radio modem, if necessary.

### 3.6.8 POSIX serial-port devices, DPRS mode

```
<interface>
  serial-device  devicepath speed DPRS
  callsign       callsign
  timeout        interval-definition
  initstring     "init-string-content"
</interface>
```

This enables receive-only DPRS to APRSIS Rx-iGate in case APRSIS connection is defined.

This interface can also be used as a source on <digipeater> to enable DPRS-to-APRS RF gateway.

### 3.6.9 Linux AX25-DEVICE

```
<interface>
  ax25-device    callsign
  tx-ok          boolean
  alias          RELAY,TRACE,WIDE
</interface>
```

The *callsign* parameter must be valid AX.25 callsign as it refers to Linux kernel AX.25 device callsigns. Such Linux kernel device does not need to be active at the time the Aprx program is started, the Aprx attaches itself on it dynamically when it appears, and detaches when it disappears.

The interface *alias* entry can be defined as comma-separated lists of AX.25 callsigns, or as multiple *alias* entries. Default set is above shown *RELAY,TRACE,WIDE*. If you define any *alias* entry, the default set is replaced with your definitions. (Do **not** define “WIDE1-1” type kludge aliases that old TNC digipeaters seem to need.)

### 3.6.10 Networked tcp-stream connected terminal devices

```
<interface>
    tcp-device      hostname-or-ip-address portnumber KISS
    .....
</interface>

<interface>
    tcp-device      hostname-or-ip-address portnumber TNC2
    .....
</interface>

<interface>
    tcp-device      hostname-or-ip-address portnumber DPRS
    .....
</interface>
```

These work identical to local physical serial ports described above.

The *hostname-or-ip-address* and *portnumber* point to remote terminal server, where remote serial port is configured to attach on a radio modem. The connection must be such that no extra bytes are added on the datastream, nor any byte codes are considered command escapes for the terminal server. That is, plain TCP, no TELNET service!

Recommendation is to use IP address literals instead of domain names, the network DNS resolving takes unpredictable time, and may even fail.,

Both IPv4 and IPv6 protocols are supported, where platform supports them.

### 3.6.11 The NULL-DEVICE

A development tool, and by default a “transmitter device”.

```
<interface>
    null-device      callsign
#    tx-ok          true
#    alias           RELAY,TRACE,WIDE
</interface>
```

The *callsign* parameter is just any string within relaxed AX.25 “callsign-ssid” rules.

### 3.6.12 Telemetry to APRS-IS control

Each APRS message receiving interface is being telemetered to APRS-IS, and conditionally to RF too. (See chapter 3.8 below for the RF telemetry.)

Since 2.09 it has been made possible to disable RF interface telemetry transmission to APRS-IS too:

```
<interface>
    xxx-device      callsign
    telem-to-is    false
</interface>
```

This disable flag must be set to every interface you do not want to be telemetered to APRS-IS.

## 3.7 The “<beacon>” sections

You can define multiple <beacon> sections each defining multiple beacon entries. Each beacon group runs as a ring of beacon transmissions, which are evenly distributed over the *cycle-size* period.

Beacons can be sent to radio only, to aprsis only, or to both. Default is to both.

You can configure beacons as literals, and also to load beacon content from a file at each time it is to be transmitted. That latter allows external program, like weather probes, to feed in an APRS weather data packet without it needing to communicate with Aprx via any special protocols, nor make AX.25 frames itself.

The <beacon> section has following entries:

- *cycle-size interval*
- *beaconmode { aprsis | both | radio }*
- *beacon ...*

The *cycle-size* entry is setter of beacon transmission cycle, and all beacon entries defined in one <beacon> section are sent within that time. Default value is 20 minutes.<sup>2</sup>

The *beaconmode* setting defaults to *both* at the start of <beacon> section,, and affects *beacon* entries following the setting, until a new setting. The *aprsis* setting will send following beacons only to APRSIS, and the *radio* setting will send following beacons only to radio interface(s).

The *beacon* entry parameters:

- *interface interface-callsign*
- *srcall callsign*
- *dstcall callsign*
- *via “viapath”*
- *timefix*
- *exec /program/path.sh*
- *timeout integer*

The *interface* parameter sets explicit interface on which to send this beacon. If no *to* parameter is given, then the beacon is sent on all interfaces.

<sup>2</sup> Until version 2.08 the *cycle-size* was a global setting. Then a nice <beacon> local algorithm was implemented, and each <beacon> section runs in parallel to each other.

The *srccall* parameter sets beacon packet source callsign, and it gets its default value from transmit interface's callsign. In single tx case you do not need to set this. In multi-tx case you may want to set this. Without any radio interfaces you *must* define this.

The *dstcall* parameter sets beacon packet destination callsign, default value is program release version dependent, but possible override could be like: "APRS".

The *via* parameter adds fields on beacon AX.25 VIA path. Default is none, example value would be like: via "WIDE1-1"

The *timefix* parameter sets a flag to modify transmitted APRS packets that have a time stamp field (two kinds of basic position packets, and objects.) Set this only if your machine runs with good quality NTP time reference.

Then either of following two:

- raw "*APRS packet text*"
- file *filepath*
- exec */program/path*

or a combination of following:

- One of following three (default is type "!")
  - type "*single-character-type*"
  - item "*item-name*"
  - object "*object-name*"
- lat *latitude*
- lon *longitude*
- \$myloc
- symbol "*two-character-symbol*"
- comment "*text*" (optional)

There are three different ways to define beacon data: *file*, *raw*, and third way is a combination of a number of data parameters. The third way has a benefit of being able to validate packet structure at configuration time.

The *file* parameter is one alternate way to followed by a pathname to local file system at which an other program can place APRS packet content to be sent out at next time it is encountered in the beacon cycle. The Aprx program reads it at beacon time for transmitting.

The *exec* parameter defines external program to be executed for given beacon to be sent. That program sends to its stdout a message content to be beacons, and it is treated as "raw" format message. The stdout must end with newline character, which gets stripped out before transmitting the beacon. The *exec* parameter has associated *timeout* parameter, which defines number of seconds at most waited before the subprogram is abandoned. Default timeout is 10 seconds.

The *raw* parameter is followed by full raw APRS packet text. The packet data is not validated in any way!

The multi-component packet data content construction is done with following parameters:

The *type* parameter defaults to "!" and can be set to any of: "!", "=", "/", "@".

The *item/object* parameter sets name field for *item* and *object* type packets (";" and "). There is no default value.

The *symbol* parameter sets two character APRS symbol on the beacons packet. It has no default value. See following WB4APR maintained files for current list of symbols documents: <http://www.aprs.org/symbols/symbols-new.txt> and <http://www.aprs.org/symbols/symbolsX.txt>. For identifying your digipeater or i-gate, see [Digipeater/I-Gate Symbol Selection](#).

The *lat* parameter sets (and validates) APRS format latitude coordinate: ddmm.mmX where X is 'S' or 'N' indicating latitude hemisphere. There is no default value.

The *lon* parameter sets (and validates) APRS format longitude coordinate: dddmm.mmX where X is 'E' or 'W' indicating longitude hemisphere. There is no default value.

The *\$myloc* parameter uses coordinate pair defined at global "myloc" configuration entry, and can be used in place of *lat* and *lon*.

The *comment* parameter sets tail of the packet where an arbitrary text can appear, you can use UTF-8 characters in there. There is no default value, use of this field is optional.

In order to construct a packet with these multi-component fields, you must use at least parameters: *symbol*, *lat*, *lon*. (Or: *symbol*, *\$myloc*)



Some examples:

```
<beacon>
  # Load beacon message content from a file:
  beacon file /tmp/wxbeacon.txt

  # Define fixed beacon from components:
  beacon via TRACE1-1 \
    symbol "I&" lat "0000.00N" lon "00000.00E" \
    comment "Aprx v2.05 - a Digi + Rx-iGate"

  # When all else fails, "raw" can be used:
  beacon raw "!0000.00NR00000.00E&Aprx v1.97 - a Digi + Rx-iGate"

  # Define an OBJECT for a local voice repeater:
  beacon object "OH2RAY" \
    symbol "/r" lat "6044.09N" lon "02612.79E" \
    comment "434.775MHz TOFF -1600kHz R50k OH2RAY"
</beacon>

## Two beacon groups with different cycle-size,
## and different number of beacons in them:
<beacon>
  cycle-size 30m
  beacon ... # at t+ 0m
  beacon ... # at t+10m
  beacon ... # at t+20m
</beacon>
<beacon>
  cycle-size 11m
  beacon ... # at t+0.0m
  beacon ... # at t+2.2m
  beacon ... # at t+4.4m
  beacon ... # at t+6.6m
  beacon ... # at t+8.8m
</beacon>
```

## 3.8 The “<telemetry>” sections

The Aprx is always collecting interface statistical data on all of its interfaces.

By default that data is sent out only to APRS-IS. If there is no APRS-IS connectivity, nothing is sent in default case.

There is also an <interface> flag to disable telemetry transmission on given interface.

Defining a <telemetry> section can let you control alternate transmission to radios:

```
<telemetry>
  # Select where to transmit
  transmitter $mycall

  # Optional digipeat path for transmission to near by IGates
  via          WIDE1-1

  # Multiple sources permitted
  source       $mycall
  source       N0CALL-2
</telemetry>
```

The telemetered source ports must have valid AX.25 callsigns. Pure APRS-IS telemetry is far more permissive in this regard.

If you want telemetry to multiple radio transmitters, define multiple <telemetry> sections.

The transmission will have same data content and frequency as APRS-IS transmissions have: Telemetry packet once per 20 minutes, associated label packets every 2 hours, but with 2 minute offset to telemetry data.

Note: If you define multiple sources, all the telemetry records are sent “rapid fire” one after another without any delay! This does not harm APRS-IS, but may cause packet drops on radio transmission.

Telemetry related data labels are sent at different time than data records, but they too cause “rapid fire” clusters on radio – one label per source. Each of 3 kinds of labels are sent out with 2 hour intervals in between them.

Development assumption has been that big multi-receiver systems have also internet connectivity and won't transmit telemetry over radio, or as a compromise they send RF telemetry only regarding digipeater transmitter port(s).

### 3.9 The <digipeater> sections

With Aprx you can define multiple <digipeater> sections, each to their unique transmitter.

The Aprx will apply full set of controls on APRS type packets, but it will handle also plain AX.25 digipeat of other types of AX.25 packets.

At each <digipeater> section you can define multiple <source> sub-sections so that traffic from multiple sources are sent out with single transmitter.

The Aprx implements duplicate checking per each transmitter, and if same message is received via multiple (diversity) receivers, only one copy will be transmitted.

The Aprx implements also basic AX.25 digipeater for non-APRS frames, where radio interface callsign (and interface aliases) is matched against first AX.25 address header VIA field without its H(as been digipeated)-bit set.

The structure of each <digipeater> section is as follows:

```
<digipeater>
  transmitter    callsign
  ratelimit      60 120
  #srcratelimit  10 30
  <trace>
    ... (defaults are usually OK)
  </trace>
  <wide>
    ... (defaults are usually OK)
  </wide>
  <source>
    source       callsign
    ... (defaults are usually OK)
  </source>
  ... (more sources can be defined)
</digipeater>
```

The *transmitter* entry defines callsign of transmitter radio port to be used for this section. There is no default, but macro *\$mycall* is available.

The *ratelimit* gives *average* and *upper* limit on number of packets to be relayed per minute out on *this transmitter interface*. The system tracks number of packets sent per 5 second timeslots using “token bucket filter” algorithm. Default values are 60/120. Maximum values are 300/300. (Default limit saturates 1200 bps AFSK channel, but 9600 bps channel has some slack.)

The *srcratelimit* is like *ratelimit*, except it is applied per packet source call sign. In 3rd-party frames (i-gated and radio relayed) it is the innermost source callsign, otherwise it is packet source callsign. This allows regulating any single source callsign from flooding the channel (either by gate or digipeat.)

The `<trace>` sub-section is available both at `<digipeater>` and at `<source>` levels. Source specific settings override digipeater-wide settings. More details below. The `<trace>` settings are looked at before `<wide>` settings, thus same key value in both

The `<wide>` sub-section is alike `<trace>` sub-section, more details below.

The `<source>` sub-sections define sources that this digipeater instance receives its packets from. Same source devices can feed packets to multiple digipeaters.

### 3.9.1 The `<trace>` sub-section

```
<trace>
    maxreq      3      # in range: 1 .. 7, default: 4
    maxdone     3      # in range: 1 .. 7, default: 4
    keys        TRACE,WIDE,RELAY
</trace>
```

The `<trace>` block settings can be at `<digipeater>` level, and at `<source>` sub-level. The `<digipeater>` level has above listed default values.

The `<source>` sub-level `<trace>` instance is used at first to check what to do to packet. If there is no match at `<source>` sub-level, the `<digipeater>` level `<trace>` entry is checked. If neither matched, then `<wide>` entries (see below) are used in similar manner.

The `maxreq` and `maxdone` entries (both default to 4) limit the number of requested digipeat hops to listed amount, and in case of some of those requests being done, also limit the number of executed hops.

The `keys` entry defines multiple “new-n paradigm” style keyword stems that are matched for the first VIA field without H-bit set. See detailed explanations at 5.3 “Keywords on `<trace>` and `<wide>` sub-sections of `<digipeater>` sections.”

The system has a special “heard direct” behaviour when `maxreq` or `maxdone` is reached or exceeded, or when a *new-n paradigm* style “KEYn-N” entry has `N > n`: The system will insert itself at first VIA slot, and mark original request VIA data with H-bits (“digipeating completed”) and transmit the resulting packet. If packet was not recognized as “heard direct”, then it is silently dropped.

### 3.9.2 The `<wide>` sub-section

```
<wide>
    maxreq      3      # in range: 1 .. 7, default: 4
    maxdone     3      # in range: 1 .. 7, default: 4
    keys        TRACE,WIDE
</wide>
```

The `<wide>` sub-section keywords are matched only, if `<trace>` sub-section keywords have not matched. Match on the `<wide>` sub-section keywords means that no “trace” behaviour is done on outgoing digipeated packet's AX.25 address fields, only decrementing the request counts.

Otherwise same notes apply as on `<trace>` sub-section.

### 3.9.3 The `<source>` sub-sections

```
<source>
  source          callsign
  #via-path       foo # for “source APRSIS” only!
  #msg-path       bar # for “source APRSIS” only!
  relay-type      keyword
  viscous-delay   N   # in range: 0..9, default: 0
  ratelimit       60 120
  #srcratelimit   10 20
  regex-filter    ...
  filter          ...
  <trace>
    ...
  </trace>
  <wide>
    ...
  </wide>
</source>
```

The *source* entry uses a *callsign* reference to `<interface>` sections. There is one special built-in interface in addition to those that you define: “APRSIS”, which is basis of Tx-iGate implementation.

The `<trace>` and `<wide>` sub-sub-sections define source specific instances of respective processing rules. This way a source on 50 MHz band can have special treatment rules for `<trace>/<wide>`, while `<digipeater>` wide rules are used for other sources. Presence of `<trace>/<wide>` sub-sub-sections overrides respective `<digipeater>` section level versions of themselves.

The *msg-path* is used only on APRSIS case, where it defines the VIA-path for outgoing 3<sup>rd</sup> party frame carrying a *message* type packet, and it defaults to non-defined value.

The *via-path* is used only on APRSIS case, where it defines the VIA-path for outgoing 3<sup>rd</sup> party frame, and it defaults to non-defined value. If no *msg-path* is defined, then *via-path* is used for both.

The *ratelimit* gives *average* and *upper* limit on number of packets to be relayed per minute from *this source interface* to the digipeater where this belongs to. System tracks number of packets sent per 5 second timeslots using “token bucket filter” algorithm. Default values are 60/120. Maximum values are 300/300. Suggested value is at most as high as the *interface's* ratelimit value, preferably less than that. (Default limit saturates 1200 bps AFSK channel, but 9600 bps channel has some slack.)

The *srcratelimit* is like *ratelimit*, except it is applied per packet source call sign. In 3rd-party frames (i-gated and radio relayed) it is the innermost source callsign, otherwise it is packet source callsign. This allows regulating any single source callsign from flooding the channel (either by gate or digipeat.)

The *relay-type* defines how the digipeater modifies AX.25 address fields it passes through. Available values are: *third-party* (“3rd-party”) for APRSIS Tx-iGate use only, *digipeated* (default value,) and *directonly* for special fill-in digipeaters.

The *viscous-delay* is an auxiliary parameter intended for *relay-type directonly* digipeaters, and digipeaters with Tx-iGate. It defines number of seconds that this digipeater will hold on the packet, and account any other possible arrival of same packet by means of comparing early all packets on transmitter specific duplicate filter. If at the end of the delay this is still unique observation of the packet, then it will be sent out. Using the *viscous-delay* on APRSIS sources gives RF network a small change to have the same packet reach this node. Using the *viscous-delay* on normal digipeater is not recommended.

A non-zero *viscous-delay* value gets always an additional per packet randomized 0 to 2 second delay. This allows similarly configured Aprx servers to hopefully not transmit all at same time.

The *filter* entries define javAPRSSrvr style adjunct filter entries that must pass through the arriving packet. Further details below.

The *regex-filter* supplies an ad-hoc mechanism to *reject* matching things from packets. Further details below.

### 3.9.4 Filter entries

Only the following of the javAPRSSrvr adjunct filter *like* entries are supported on <source> sub-sections:

- a/latN/lonW/latS/lonE
- a/latN/lonW/latS/lonE/-
- b/call1/call2...
- d/call1/call2...
- f/call/dist\_km
- f/call/-dist\_km
- m/dist\_km
- m/-dist\_km
- o/object1/object2...
- p/aa/bb/cc...
- r/lat/lon/dist\_km
- r/lat/lon/-dist\_km
- s/pri/alt/overlay
- t/.../call/km
- t/.../call/-km
- u/unproto1/unproto2...

For more information about their syntax, see:

<http://www.aprs-is.net/javAPRSFilter.aspx>

(For Aprx filter type letters are case insensitive: 'A' == 'a')

Additional feature is “outside range” or “outside area” forms where radial distance (range) is expressed as *negative* number of kilometres, or area coordinate definition is followed by tail of “/-”:

- a/latN/lonW/latS/lonE/-
- f/call/-dist\_km
- r/lat/lon/-dist\_km
- t/.../call/-km

These make most sense, when used on Tx-iGate APRSIS *subtractive filter*. Then you can define "do not serve anybody that is more than 150 km from this coordinate pair:

```
filter -r/lat/lon/-150
```

Filter usage rules:

1. These filters apply only on APRS packets. Digipeating other types of packets is not subject to these filters.
2. If there are no filters, then arriving APRS packet is always accepted.
3. You can define as many filter entries as you want.
4. The filter entries are evaluated in definition order.
5. The filter entries apply only on the <source> sub-section they are in. Different <source> sub-sections have separate filtering rule sets.
6. When you define filter entries, only those packets matching a filter rule are passed on.
7. With multiple filter definitions, a match terminates filter chain evaluation, non-match continues to next filter entry.
  1. Prefixing a filter entry with minus ("-") will cause the match to reject the packet.
  2. Rejection filters are evaluated after acceptance filters, thus you can reject something that e.g. area acceptance accepted.
8. If none of filters matched, then:
  1. the packet will be rejected on RF->RF digipeating
  2. the Tx-iGate passes messages onwards with its own algorithm when no filter matched.

Example at "Limited Service Area Digipeater" uses these settings:

```
filter    t/m      # All messages (position-less)
filter    a/60.00/23.00/59.00/25.20
filter    a/60.25/25.19/59.00/27.00
```

Example of "Limited Service Area Tx-iGate" uses these settings:

```
filter    -r/60.00/25.00/-150 # not outside 150 km of Helsinki
filter    -r/61.50/24.75/50   # and not within 50 km of Tampere
```

Example of "Blacklisting a problematic user" uses these settings:

```
filter    -b/K6RPT*  # Filter out this one callsign
filter    t/*         # but accept all other packets
```



### **3.9.4.1 Filter A – Area by Corner Coordinates**

Syntax:

1. `a/latN/lonW/latS/lonE`
2. `a/latN/lonW/latS/lonE/-`

This matches only on packets with determined position.

Both forms define two opposing corners of the area. For APRS-IS servers it matters that corners are North-West and South-East, for Aprx also South-West and North-East corners work.

Second form is "coordinate being outside defined area", and it is useful with rejection filters.

### **3.9.4.2 Filter B – Budlist**

Syntax:

```
b/callsign1/callsign2/...
```

Match messages with given source addresses.

Wild-cards (\*) are supported.

### **3.9.4.3 Filter D – Digipeater List**

Syntax:

```
d/callsign1/callsign2/...
```

Match messages where relay path contains any of given callsigns as "been there". Placing there "WIDE\*" et.al. is not recommended.

Wild-cards (\*) are supported.

### **3.9.4.4 Filter F – Friends Range**

Syntax:

```
f/callsign/rangekm
```

This matches only on packets with determined position.

A range around friend's last beacons position. For this to work, exact callsign must have beacons a position around which a range can be computed. If the range is defined as negative value, the filter will match things outside given range from friend's position.

The range is specified as a decimal value, in kilometers. For example:

```
f/N0CALL/50  
f/N0CALL/10.7
```

### **3.9.4.5 Filter G – Group Messaging**

Syntax:

```
g/callsign1/callsign2/...
```

Match Message type frames whose recipient callsign matches any of the patterns.

Wild-cards (\*) are supported.

### **3.9.4.6 Filter M – My Range**

Syntax:

```
m/rangekm
```

This matches only on packets with determined position.

A range in kilometers around Aprx's configured *myloc* coordinate (see chapter 3.2). If the range is defined as negative value, the filter will match things outside given range.

The range is specified as a decimal value, in kilometers. For example:

```
m/50  
m/10.7  
m/-20.0
```

### **3.9.4.7 Filter O – Object/Item ID**

Syntax:

```
o/callsign1/callsign2/...
```

Match OBJECT and ITEM messages where Object/Item identifier is one of the patterns.

Wild-cards (\*) are supported.

### **3.9.4.8 Filter P – Source Address Prefix**

Syntax:

```
p/pfix1/pfix2/...
```

Match any packet where source callsign matches any of the prefixes.

This is alike 'B' filter, but without explicit wild-card.

### **3.9.4.9 Filter T – Packet Type**

Syntax:

1. `t/typetokens`
2. `t/typetokens/callsign/rangekm`

Match packet types, or packet types + friend-range.

The type tokens is a string of characters, one or more of:

- `'*'`: All packet types
- `'3'`: This is a 3rd party frame, and other type tokens may be present
- `'c'`: CWOP packets
- `'i'`: ITEM packets
- `'m'`: MESSAGE packets
- `'n'`: NWS packets
- `'o'`: OBJECT packets
- `'p'`: Packets with POSITION data (or resolved position)
- `'q'`: QUERY packets
- `'s'`: STATUS packets
- `'t'`: TELEMETRY packets
- `'u'`: USERDEF packets
- `'w'`: WX packets

(The type token letters are case independent at Aprx: `'t' == 'T'`)

The second form with callsign and range have same behaviour as `'f'` filter has.

The `'w'` does not match other packet types from WX source stations sending WX packets, unlike APRS-IS does.

### **3.9.4.10 Filter U – Unproto**

Syntax:

```
u/callsign1/callsign2/...
```

Match packets where AX.25 **destination address** is one of parameter callsigns.

Wild-cards (\*) are supported.

### 3.9.5 Regex-filter entries

A set of *regex-filter* rules can be used to reject packets that are not of approved kind. Available syntax is:

- *regex-filter* source RE
- *regex-filter* destination RE
- *regex-filter* via RE
- *regex-filter* data RE

The keywords “source”, “destination”, “via”, “data” tell which part of the AX.25 packet the following regular expression is applied on. Defining multiple entries of same keyword will be tested in sequence on that data field. First one matching will terminate the matcher and cause the packet to be rejected.

The *regex-filter* exists as ad-hoc method when all else fails.

### 3.9.6 Digipeating other than APRS packets

The Aprx can also be used as generic AX.25 RF digipeater.

The Aprx will handle RF->RF digipeating of other than APRS packets by matching “next hop” (via) field matching on transmitter callsign or transmitter interface aliases.


The “*new-n-paradigm*” “WIDEn-N” rules do not apply for other than APRS packets.

Digipeater *ratelimit* filters apply to all kinds of packets on digipeater sources and transmitters on per interface basis.

The regex filters can be applied to block packets, they work on all kinds of packets.

## 4 Advanced Configuration Examples

### 4.1 Doing Transmit-iGate

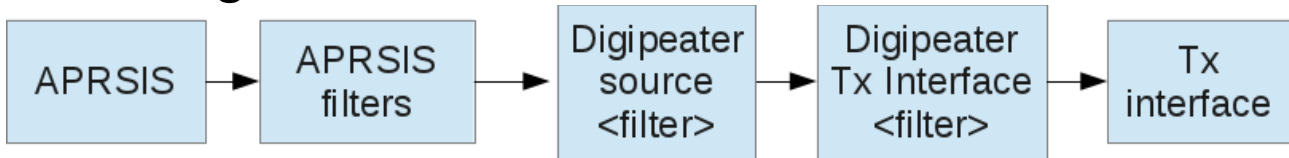

The APRSIS source on a digipeater will enable APRSIS -> RF iGate functionality.

Mandatory parts are “source APRSIS”, and “relay-type third-party”.

Everything else is optional.

```

mycall  N0CALL-1
myloc   lat ddmm.mmN lon dddmm.mmE

<aprsis>
  passcode  -1
  server    rotate.aprs.net    14580
  # filter  p/prfx             # APRSIS filters
</aprsis>

<interface>
  serial-device /dev/ttyUSB0 19200 8n1 KISS
  tx-ok         true
</interface>

<digipeater>
  transmitter $mycall
  <source>
    source      APRSIS
    relay-type  third-party
    via-path    WIDE1-1 # default: none
    msg-path    WIDE1-1 # default: none
    # viscous-delay 5    # prefer RF path
    # filter     p/prfx  # additive packet filters
    # filter     -p/prfx # subtractive packet fltrs
  </source>
</digipeater>

```

The filtering *without any explicit ones* follows default Tx-iGate filtering behaviour.

You should not need any additional filter rules.

Available packet filters are described in detail at 3.9.4 Filter entries at page 39.

Use of “filter” statements has two variations:

- Additive: These are in addition to what Tx-iGate would relay.
- Subtractive: These reject what Tx-iGate would relay.

There can be unlimited number of both kinds of filters.

The algorithm above has subtle difference of what non-APRSIS source filters do!

**If you want to transmit packets that basic Tx-iGate does not already handle (messages to local users,) then you need to add appropriate additive *filter* statements on both the <aprsis> and at source APRSIS -blocks.**

## 4.2 A Fill-In Digipeater



Classically a fill-in digipeater means a system that digipeats heard packet only when it hears it as from first transmission. Usually implemented as “consider WIDE1-1 as your alias”, but the Aprx has more profound understanding of when it hears something as “directly from the source”, and therefore there is no need for kludges like that “alias WIDE1-1”.

```
<digipeater>
  transmitter    $mycall
  <source>
    source       $mycall
    relay-type   directonly
  </source>
</digipeater>
```

***Do not put “alias wide1-1” or any other of that type on the <interface> definitions! Aprx does understand the “new-n-paradigm” digipeater routing in fundamental level, and does not need kludges that old AX.25 digipeater systems did need.***

With Aprx you can add condition: *and only if nobody else digipeats it within 5 seconds.*

```
<digipeater>
  transmitter $mycall
  <source>
    source      $mycall
    relay-type  directonly
    viscous-delay 5
  </source>
</digipeater>
```

Note: Use of “viscous-delay” parameter without this being “relay-type directonly” is generally not a good idea!

Use of “viscous-delay” makes better sense when you have multiple radio receivers in your digipeater so that even though digipeaters are sending simultaneously, you will still be able to receive them individually by means of using directional antennas.

A non-zero “viscous-delay” value gets always an additional per packet randomized 0 to 2 second delay. This allows similarly configured Aprx servers to hopefully not transmit all at same time.

## 4.3 Station Identification

All stations should identify themselves, including stations running aprx. This ensures that all regulations are met and that local APRS users are aware of the presence of the station.

In <http://www.aprs.org/digis/digi-rates.txt>, it is recommended that digipeaters identify themselves in the following manner:

- Every 10 minutes a local direct posit (no path)
- Every 30 minutes a 1 hop area posit (WIDE2-1)
- Every 60 minutes a 2 hop regional posit (WIDE2-2)

Example <beacon> configuration that accomplishes this:

```
# Every 10 minutes for ID
<beacon>
  beaconmode radio
  cycle-size 60m
  # t+0m
  beacon via WIDE2-1 symbol "I#" $myloc comment "comment"
  # t+10m
  beacon symbol "I#" $myloc comment "comment"
  # t+20m
  beacon symbol "I#" $myloc comment "comment"
  # t+30m
  beacon via WIDE2-1 symbol "I#" $myloc comment "comment"
  # t+40m
  beacon symbol "I#" $myloc comment "comment"
  # t+50m
  beacon via WIDE2-2 symbol "I#" $myloc comment "comment"
</beacon>
```

In this example, we use a 60-minute beacon cycle. A beacon will be sent every 10 minutes during the cycle. **WIDE2-1** beacons will be sent at 0 and 30 minutes into the cycle, which satisfies the “every 30 minutes 1 hop” rule. A **WIDE2-2** beacon will be sent 50 minutes into the cycle, or once every hour, and that satisfies the “every 60 minutes 2 hop” rule.

For more information on symbol selection, see [Digipeater/I-Gate Symbol Selection](#).



## 4.4 Using Multiple Radios

There is no fixed limit on number of radio interfaces that you can use, however of them only one can use the default callsign from “\$mycall” macro, all others must have explicit and unique callsign:

```
mycall N0CALL-1

<interface>
    # callsign $mycall
    serial-device /dev/ttyUSB0 19200 8n1 KISS
    tx-ok true
</interface>

<interface>
    callsign N0CALL-R2
    serial-device /dev/ttyUSB1 19200 8n1 KISS
</interface>
```

Supported interface devices include:


1. On Linux: Any AX.25 network attached devices
2. On any POSIX system: any serial ports available through “tty” interfaces
3. Remote network terminal server serial ports over TCP/IP networking

On serial ports, following protocols can be used:

1. Plain basic **KISS**: Binary transparent, decently quick.
2. **SMACK**: A CRC16 two-byte CRC checksum on serial port KISS communication. Recommended mode for KISS operation.
3. **XKISS** alias **BPQCRC**: XOR checksum on KISS. Not recommended because it is unable to really detect data that has broken during serial port transmission. Slightly better than plain basic KISS.
4. **FLEXNET**: Adds a CRC16 on each serial link packet. Algorithm is not CCITT-CRC16.
5. **TNC2** monitoring format, receive only, often transmitted bytes outside printable ASCII range of characters are replaced with space, or with a dot. **Not recommended to be used!**

The KISS protocol variations support multiplexing radios on single serial port.

## 4.5 A Tx-iGate with Multiple Radios on Each Frequency

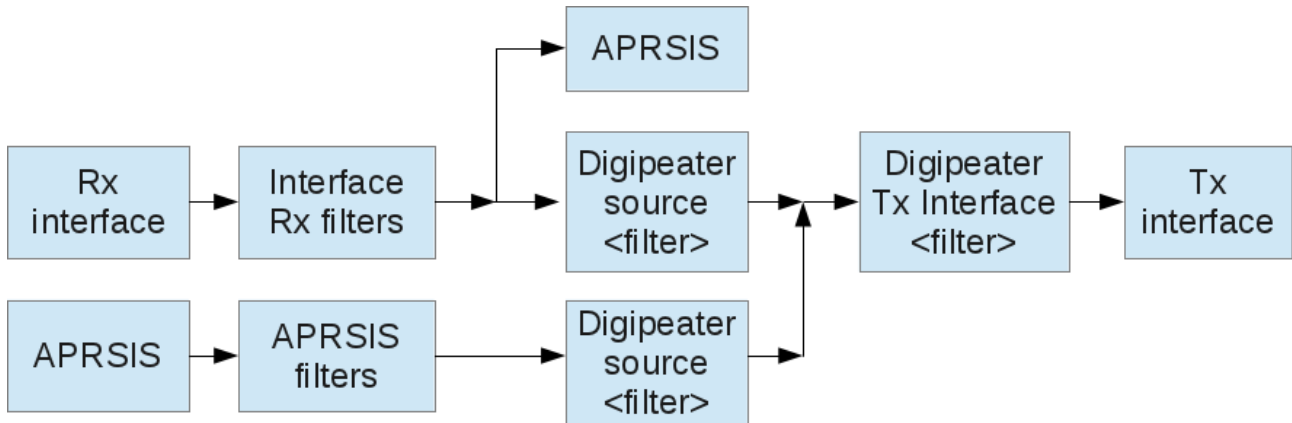

Note: If you have only single rx/tx radio per frequency, you don't need these multi-rx settings at all. (Fixme: Dual-Rx graphics!)

Extending on previous multiple interface example, here those multiple interfaces are used on a transmit iGate. Transmitter interface is at "\$mycall" label, others are receive only:

```

<interface> # Frequency 144.390 MHz Rx/Tx
  callsign      $mycall
  serial-device ...
  tx-ok         true
  igate-group   1
</interface>

<interface> # Frequency 144.390 MHz Rx-only
  callsign      NOCALL-R2
  serial-device ...
  tx-ok         false
  igate-group   1
</interface>
  
```

continues...

... continues.

```

<digipeater>
  transmitter $mycall
  <source>
    source $mycall
  </source>
  <source>
    source N0CALL-R2
  </source>
  <source>      ## this makes it Tx-iGate
    source      APRSIS
    relay-type   third-party
  # viscous-delay 5
  </source>
</digipeater>

```

Adding there a source of APRSIS will merge in Tx-iGate function, as shown before. It is trivial to make a multiple receiver, single transmitter APRS Digipeater with this.

The <digipeater> section transmitter has local APRS packet duplicate filter so that receiving same packet from multiple diversity receiver sources sends out only first one of them.

The *igate-group* parameter is for Tx-iGate to correctly account “heard on radio channel” when there are multiple receivers (and separate transmitter) on a given channel. Same parameter value must be put on all interfaces that are on same frequency. The *igate-group* parameter values are integers starting up at 1. Minimum memory usage results from use of values 1, 2 and 3. If you really need more igate groups than 3, system will enlarge necessary storage arrays, but you should use minimal largest value.

## 4.6 A Bi-Directional Cross-band Digipeater

Presuming having transmit capable radio <interface>s on two different bands, you can construct a bi-directional digipeater by defining two <digipeater> sections.

```
<digipeater>
  transmitter N0CALL-1
  <source>
    source N0CALL-1
  </source>
  <source>
    source N0CALL-2
  </source>
</digipeater>

<digipeater>
  transmitter N0CALL-2
  <source>
    source N0CALL-1
  </source>
  <source>
    source N0CALL-2
  </source>
</digipeater>
```

Now both transmitters will digipeat messages heard from either radio.

You will probably want more control parameters to limit on how much traffic is relayed from one source to other, more of that in the detail documentation.

## 4.7 Limited Service Area Digipeater

A digipeater that will relay only packets from positions in a limited service area can be done by using filtering rules:

```
<digipeater>
  transmitter N0CALL-1
  <source>
    source      N0CALL-1
    relay-type  directonly
    filter      t/m      # All messages (position-less)
    filter      a/60/23/59/25.20
    filter      a/60.25/25.19/59/27
  </source>
</digipeater>
```

This example is taken from a limited service area digipeater on a very high tower in Helsinki, Finland. The coordinates cover Gulf of Finland, and northern Estonia. Especially it was not wanted to relay traffic from land-areas, but give excellent coverage to sail yachts.

Available filters are described in detail at 3.9.4 Filter entries at page 39.

## 4.8 Limited Service Area Tx-iGate

A transmit igate with limited service area:

```
<digipeater>
  transmitter OH2RAA-1
  <source>
    source      APRSIS
    relay-type  third-party

    # Subtractive filters applied on recipients
    # with known position
    filter -r/60.00/25.00/-150 # not outside 150 km of Helsinki
    filter -r/61.50/24.75/50   # and not within 50 km of Tampere
  </source>
</digipeater>
```

Available filters are described in detail at 3.9.4 Filter entries at page 39.

## 4.9 Sending telemetry to radio interface

The Aprx is always collecting radio interface statistics from all of its interfaces.

It sends that data out to APRS-IS, but in case you do not have APRS-IS connection, like in a remote digipeater, it can also be transmitted on radio:

```
<telemetry>
  transmitter  $mycall
  via          WIDE1-1
  source       $mycall
</telemetry>
```

You can define multiple <telemetry> sections with different transmitters.

On each <telemetry> section you can define multiple sources.

There is no default “via” path, if something is needed to reach near-by iGates, add some.

## 4.10 DPRS-to-APRS Gateway

To make a DPRS-to-APRS gateway, all you need is to define an `<interface>` source for DPRS data streams, and a `<digipeater>` where that DPRS interface is defined as one of `<source>`s:

```
<interface>
  serial-device ..... DPRS
  callsign      N0CALL-DG
</interface>

<interface>
  tcp-device 192.168.1.1 9500 DPRS
  callsign   N0CALL-D2
</interface>

<digipeater>
  transmitter N0CALL-1
  <source>
    source      N0CALL-DG
    relay-type   third-party
    via-path     call-1
    #viscous-delay N    # in range: 0..9, default: 0
    #ratelimit      60 120
    #regex-filter   ...
    #filter          ...
    #<trace>
    #    ...
    #</trace>
    #<wide>
    #    ...
    #</wide>
  </source>
  <source>
    source      N0CALL-D2
    relay-type   third-party
    ...
  </source>
</digipeater>
```

This shows also, how to use so called D-RATS data stream reflector as source for D-PRS data stream.

## 5 Running the Aprx Program

Following talks about how the pre-compiled binaries for Debian and RedHat style systems are run. If you have some other platform, you must adapt these instructions in applicable ways to your environment.

### 5.1 Normal Operational Running

The Aprx program is intended to be run without any command line parameters, but some are available for normal operation:

- `-f` -- tell location of runtime `aprx.conf` file, if default is not suitable for some reason.
- `-L` -- log a bit more on `aprx.log`

Depending on your host system, you may need to setup init-script and its associated startup parameter file.

#### 5.1.1 On RedHat/Fedora/SuSE/relatives

After doing installation on this type of machine either from pre-compiled binary package, or from sources:

In order to use package contained startup scripts, you will need to edit the `/etc/sysconfig/aprx` to contain following:

```
STARTAPRX="yes"
DAEMON_OPTS=""
```

After installation you may need to execute following two commands as root:

```
chkconfig aprx on
service aprx start
```



## 5.1.2 On Debian/Ubuntu/derivatives

After doing installation on this type of machine either from pre-compiled binary package, or from sources:

In order to use package contained startup scripts, you will need to edit the `/etc/default/aprx` to contain following:

```
STARTAPRX="yes"
DAEMON_OPTS=""
```

After installation you may need to execute following two commands as root:

```
update-rc.d aprx defaults 84
/etc/init.d/aprx start
```

The second command here should be postponed until the configuration is completed.

## 5.1.3 Logrotate (Linux systems)

You will also need `logrotate` service file. This one is handy to rotate your possible logs so that especially embedded installations should never overflow their RAM-disks with useless log files. The file in question is something like this:

```
/var/log/aprx/aprx-rf.log /var/log/aprx/aprx.log /var/log/aprx/erlang.log {
    monthly
    rotate 24
#    compress
    missingok
    notifempty
    create 644 root adm
}
```

## 5.2 The aprs.fi Telemetry Services for Aprx

The Aprx sends telemetry packets for each active radio interface, and aprs.fi can plot them to you in time-series graphs per APRS specification 1.0.1 Telemetry packet rules.

These graphs are:

1. Channel received Erlang estimate (based on received bytes, not actual detected higher RSSI levels)
2. Channel transmitted Erlang estimate (based on number of transmitted bytes, not actual PTT time)
3. Number of received packets on channel
4. Number of packets that receiving iGate function discarded for one reason or another
5. Number of transmitted packets

All represent counts/averages scaled to be over 10 minute time period.

## 5.3 Keywords on <trace> and <wide> sub-sections of <digipeater> sections.

```

<trace>
  maxreq    3    # in range: 1 .. 7, default: 4
  maxdone   3    # in range: 1 .. 7, default: 4
  keys      TRACE,WIDE,RELAY
</trace>

<wide>
  maxreq    3    # in range: 1 .. 7, default: 4
  maxdone   3    # in range: 1 .. 7, default: 4
  keys      TRACE,WIDE,RELAY
</wide>

```

These definitions tell what “new-n-paradigm” word stems (up to 5 chars each) are treated as “trace”, and what are treated as “wide”.

At first the system looks at “trace” entries, and if it finds that a word-stem there is used on packet to be digipeated, trace happens. The “wide” is looked up after trace, otherwise same function.

In all cases the 'maxreq' checks that in case of:

```
CALL>APRS,WIDE1-1,WIDE3-3,WIDE3-3
```

the total number of requested hops is  $1+3+3 = 7$ , and that as it exceeds the “maxreq” value, the packet will not be digipeated!


The “maxdone” limits hopping like this:

```
CALL>APRS,WIDE1*,WIDE3-1,WIDE3-3
```

it sees that “WIDE1\*” means “1 done, list exhausted”, “WIDE3-1” means “2 done”, and “WIDE3-3” means “0 done”. Total is then:  $1+2+0 = 3$ , which is not yet over “maxdone” default value.

## 5.4 Effect of “viscous-delay” on a Digipeater

Use of *viscous-delay 5* parameter on a <digipeater>'s <source> sub-section has dramatic effect on number of packets that it sends out, and could be useful feature for a low-priority digipeater. Normally the big digipeaters are able to pick up the traffic, but sometimes they can miss it. Alternatively of course multiple digipeaters are repeating it simultaneously, and your little node can not hear those major digipeaters because your antenna receives at least two of them equally strong and your FM receiver can not separate them.

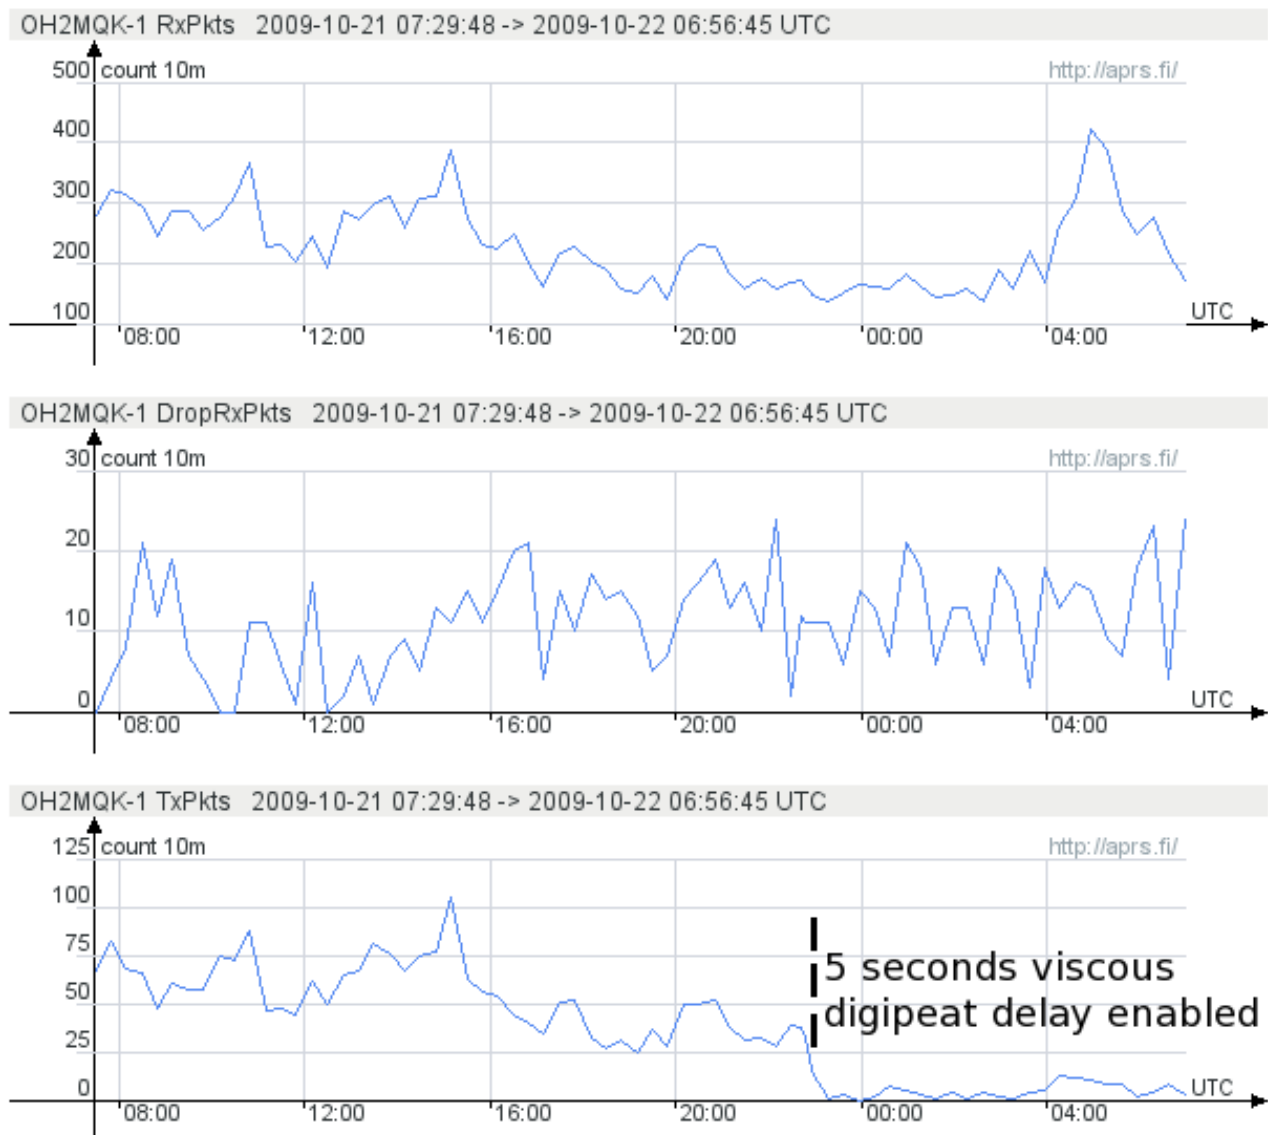

## 5.5 Digipeater/I-Gate Symbol Selection

Selecting the proper symbol for your station is important to ensure that APRS users understand the purpose of your system.

The following symbols are recommended for digipeater stations, including digipeaters equipped with i-gate capabilities:

- ✱ /# - High level digipeater supporting the global WIDEn-N alias
- ✱ 1# - Fill-in (WIDE1-1) digipeater
- ✱ A# - Alternate input (i.e. 144.990MHz) digipeater
- ✱ I# - I-gate equipped digipeater
- ✱ S# - SSn-N digipeater (includes WIDEn-N)
- ✱ X# - eXperimental digipeater

If the station is **not** a digipeater and **only** performs i-gate functions, the following symbols should be used:

- ✱ R& - Rx-only i-gate without the ability to transmit packets
- ✱ I& - VHF I-gate with the ability to RF-gate packets back to the local RF net
- ✱ /& - HF Gateways are I-gates which are operating on the 30m APRS network instead of the local VHF net

This page is intentionally left blank

## 6 Compile Time Options

Small memory footprint configuration option: `--with-embedded` (now default!)

Prefer to use: `--with-pthread`

Use of pthread results in a few 100 kB smaller memory footprint, and suitability to be used on system without UNIX fork(2) semantics.

### 6.1 Building Debian package

The package has built-in default Makefile with ability to execute following command:

```
$ make make-deb
```

which executes for a while, and finally:

```
....
dpkg-deb: building package `aprx' in `../aprx_2.01.422-1_i386.deb'.
make[1]: Leaving directory `/home/matti/aprx-2.01.svn422'
dpkg-genchanges -b >../aprx_2.01.422-1_i386.changes
dpkg-genchanges: binary-only upload - not including any source code
dpkg-buildpackage: binary only upload (no source included)
```

and the binary package is ready for installation.

### 6.2 Building RPM package

The package has built-in default Makefile with ability to execute following command:

```
$ make make-rpm
```

This page is intentionally left blank



# 7 Debugging

## 7.1 Testing Configuration

Testing the Aprx configuration, and many other things, is accomplished with command line parameters:

- -d
- -dd
- -ddd
- -dddd
- -ddv

Starting the program without these parameters will run it on background, and be silent about all problems it may encounter, however these options are *not* to be used in normal software start scripts!

These give increasing amount of debug printouts to interactive terminal session that started the program.

The program parses its configuration, and reports what it got from there. Possible wrong interpretations of parameters are observable here, as well as straight error indications. Running it with these options for 10-20 seconds will show initial start phase, at about 30 seconds the first beacons and telemetry packets are sent out and normal processing loops have begun.

To observe all beacon transmissions on a beacon cycle, you must monitor it for one whole cycle-size interval (default: 20 minutes!)

Program being tested with these options is killable simply by pressing Ctrl-C on controlling terminal.

## 7.2 Hunting bugs

Nothing beats experience and throughout knowledge of the code, however good hints are available by using various debugging tools.

### 7.2.1 With gdb

The program is compiled by default with debug symbols, thus if it crashes and “drops a core”, as it is known in UNIX systems, usual method to look for a clue within the core is:

```
# gdb /usr/sbin/aprx core.123
...
(gdb) where
```

You can also run the program under debugger so that it falls back to it in case of some error, or reaching some interesting point, or whatever:

```
# gdb /usr/sbin/aprx
(gdb) run -i
...
(gdb) where
```

## 7.2.2 With valgrind

The valgrind is UNIX environment tool chest that can find different kind of memory errors in codes. Scribbling over end of buffer, wrong allocation/free pointers, referring on freed memory, not freeing memory properly, etc.

Use of it is a bit of an art-form, but you need to compile the Aprx with suitable preparatory step for valgrinding:

```
[aprx] $ make clean  
[aprx] $ make valgrind
```

Then using the valgrind and its many tools:

```
# valgrind --tool=drd -v ./aprx -d  
# valgrind --tool=memcheck -v --leak-check=full ./aprx -d
```

Redirecting the tool outputs to a file can also be useful, as some pesky errors have been found only after several days of hunting. See also a tool called “script”.

This page is intentionally left blank

## 8 Colophon

This document was written with OpenOffice 3.2.1 producing ODT file, and then exporting a PDF file out of it. Unfortunately this system is unable to produce decent HTML for web-pages out of same document source.

Alternate technologies, like editing DOCBOOK SGML were considered, but thought to be a bit too cumbersome for initial writeup. The DOCBOOK would give excellent printed and web format outputs.

## 9 Credits

APRS symbol graphics from <http://github.com/hessu/aprs-symbols/>.