

# Intel® 64 and IA-32 Architectures Software Developer's Manual

Volume 2B: Instruction Set Reference, N-Z

**NOTE:** The Intel 64 and IA-32 Architectures Software Developer's Manual consists of five volumes: *Basic Architecture*, Order Number 253665; *Instruction Set Reference A-M*, Order Number 253666; *Instruction Set Reference N-Z*, Order Number 253667; *System Programming Guide, Part 1*, Order Number 253668; *System Programming Guide, Part 2*, Order Number 253669. Refer to all five volumes when evaluating your design needs.

Order Number: 253667-030US

March 2009

INFORMATION IN THIS DOCUMENT IS PROVIDED IN CONNECTION WITH INTEL PRODUCTS. NO LICENSE, EXPRESS OR IMPLIED, BY ESTOPPEL OR OTHERWISE, TO ANY INTELLECTUAL PROPERTY RIGHTS IS GRANTED BY THIS DOCUMENT. EXCEPT AS PROVIDED IN INTEL'S TERMS AND CONDITIONS OF SALE FOR SUCH PRODUCTS, INTEL ASSUMES NO LIABILITY WHATSOEVER AND INTEL DISCLAIMS ANY EXPRESS OR IMPLIED WARRANTY, RELATING TO SALE AND/OR USE OF INTEL PRODUCTS INCLUDING LIABILITY OR WARRANTIES RELATING TO FITNESS FOR A PARTICULAR PURPOSE, MERCHANTABILITY, OR INFRINGEMENT OF ANY PATENT, COPYRIGHT OR OTHER INTELLECTUAL PROPERTY RIGHT.

UNLESS OTHERWISE AGREED IN WRITING BY INTEL, THE INTEL PRODUCTS ARE NOT DESIGNED NOR INTENDED FOR ANY APPLICATION IN WHICH THE FAILURE OF THE INTEL PRODUCT COULD CREATE A SITUATION WHERE PERSONAL INJURY OR DEATH MAY OCCUR.

Intel may make changes to specifications and product descriptions at any time, without notice. Designers must not rely on the absence or characteristics of any features or instructions marked "reserved" or "undefined." Intel reserves these for future definition and shall have no responsibility whatsoever for conflicts or incompatibilities arising from future changes to them. The information here is subject to change without notice. Do not finalize a design with this information.

The Intel® 64 architecture processors may contain design defects or errors known as errata. Current characterized errata are available on request.

Intel® Hyper-Threading Technology requires a computer system with an Intel® processor supporting Hyper-Threading Technology and an Intel® HT Technology enabled chipset, BIOS and operating system. Performance will vary depending on the specific hardware and software you use. For more information, see <a href="http://www.intel.com/technology/hyperthread/index.htm">http://www.intel.com/technology/hyperthread/index.htm</a>; including details on which processors support Intel HT Technology.

Intel<sup>®</sup> Virtualization Technology requires a computer system with an enabled Intel<sup>®</sup> processor, BIOS, virtual machine monitor (VMM) and for some uses, certain platform software enabled for it. Functionality, performance or other benefits will\_vary depending on hardware and software configurations. Intel<sup>®</sup> Virtualization Technology-enabled BIOS and VMM applications are currently in development.

64-bit computing on Intel architecture requires a computer system with a processor, chipset, BIOS, operating system, device drivers and applications enabled for Intel<sup>®</sup> 64 architecture. Processors will not operate (including 32-bit operation) without an Intel<sup>®</sup> 64 architecture-enabled BIOS. Performance will vary depending on your hardware and software configurations. Consult with your system vendor for more information.

Enabling Execute Disable Bit functionality requires a PC with a processor with Execute Disable Bit capability and a supporting operating system. Check with your PC manufacturer on whether your system delivers Execute Disable Bit functionality.

Intel, Pentium, Intel Xeon, Intel NetBurst, Intel Core Solo, Intel Core Duo, Intel Core 2 Duo, Intel Core 2 Extreme, Intel Pentium D, Itanium, Intel SpeedStep, MMX, Intel Atom, and VTune are trademarks or registered trademarks of Intel Corporation or its subsidiaries in the United States and other countries.

\*Other names and brands may be claimed as the property of others.

Contact your local Intel sales office or your distributor to obtain the latest specifications and before placing your product order.

Copies of documents which have an ordering number and are referenced in this document, or other Intel literature, may be obtained by calling 1-800-548-4725, or by visiting Intel's website at <a href="http://www.intel.com">http://www.intel.com</a>

Copyright © 1997-2009 Intel Corporation

# CHAPTER 4 INSTRUCTION SET REFERENCE, N-Z

# 4.1 INSTRUCTIONS (N-Z)

Chapter 4 continues an alphabetical discussion of Intel<sup>®</sup> 64 and IA-32 instructions (N-Z). See also: Chapter 3, "Instruction Set Reference, A-M," in the Intel® 64 and IA-32 Architectures Software Developer's Manual, Volume 2A.

# **NEG—Two's Complement Negation**

Opcode	Instruction	64-Bit Mode	Compat/ Leg Mode	Description
F6 /3	NEG r/m8	Valid	Valid	Two's complement negate <i>r/m8.</i>
REX + F6 /3	NEG r/m8*	Valid	N.E.	Two's complement negate <i>r/m8.</i>
F7 /3	NEG r/m16	Valid	Valid	Two's complement negate r/m16.
F7 /3	NEG r/m32	Valid	Valid	Two's complement negate r/m32.
REX.W + F7 /3	NEG r/m64	Valid	N.E.	Two's complement negate r/m64.

#### **NOTES:**

#### **Description**

Replaces the value of operand (the destination operand) with its two's complement. (This operation is equivalent to subtracting the operand from 0.) The destination operand is located in a general-purpose register or a memory location.

This instruction can be used with a LOCK prefix to allow the instruction to be executed atomically.

In 64-bit mode, the instruction's default operation size is 32 bits. Using a REX prefix in the form of REX.R permits access to additional registers (R8-R15). Using a REX prefix in the form of REX.W promotes operation to 64 bits. See the summary chart at the beginning of this section for encoding data and limits.

# Operation

```
IF DEST = 0

THEN CF \leftarrow 0;

ELSE CF \leftarrow 1;

FI;

DEST \leftarrow [- (DEST)]
```

# Flags Affected

The CF flag set to 0 if the source operand is 0; otherwise it is set to 1. The OF, SF, ZF, AF, and PF flags are set according to the result.

<sup>\*</sup> In 64-bit mode, r/m8 can not be encoded to access the following byte registers if a REX prefix is used: AH, BH, CH, DH.

#### **Protected Mode Exceptions**

#GP(0) If the destination is located in a non-writable segment.

If a memory operand effective address is outside the CS, DS,

ES, FS, or GS segment limit.

If the DS, ES, FS, or GS register contains a NULL segment

selector.

#SS(0) If a memory operand effective address is outside the SS

segment limit.

#PF(fault-code) If a page fault occurs.

#AC(0) If alignment checking is enabled and an unaligned memory

reference is made while the current privilege level is 3.

#UD If the LOCK prefix is used but the destination is not a memory

operand.

#### **Real-Address Mode Exceptions**

#GP If a memory operand effective address is outside the CS, DS,

ES, FS, or GS segment limit.

#SS If a memory operand effective address is outside the SS

segment limit.

#UD If the LOCK prefix is used but the destination is not a memory

operand.

# Virtual-8086 Mode Exceptions

#GP(0) If a memory operand effective address is outside the CS, DS,

ES, FS, or GS segment limit.

#SS(0) If a memory operand effective address is outside the SS

segment limit.

#PF(fault-code) If a page fault occurs.

#AC(0) If alignment checking is enabled and an unaligned memory

reference is made.

#UD If the LOCK prefix is used but the destination is not a memory

operand.

# **Compatibility Mode Exceptions**

Same as for protected mode exceptions.

# **64-Bit Mode Exceptions**

#SS(0) If a memory address referencing the SS segment is in a non-

canonical form.

#GP(0) If the memory address is in a non-canonical form.

#PF(fault-code) For a page fault.

# INSTRUCTION SET REFERENCE, N-Z

If alignment checking is enabled and an unaligned memory reference is made while the current privilege level is 3. #AC(0)

If the LOCK prefix is used but the destination is not a memory #UD

operand.

# NOP—No Operation

Opcode	Instruction	64-Bit Mode	Compat/ Leg Mode	Description
90	NOP	Valid	Valid	One byte no-operation instruction.
0F 1F /0	NOP r/m16	Valid	Valid	Multi-byte no-operation instruction.
0F 1F /0	NOP r/m32	Valid	Valid	Multi-byte no-operation instruction.

#### **Description**

This instruction performs no operation. It is a one-byte or multi-byte NOP that takes up space in the instruction stream but does not impact machine context, except for the EIP register.

The multi-byte form of NOP is available on processors with model encoding:

CPUID.01H.EAX[Bytes 11:8] = 0110B or 1111B

The multi-byte NOP instruction does not alter the content of a register and will not issue a memory operation. The instruction's operation is the same in non-64-bit modes and 64-bit mode.

#### **Operation**

The one-byte NOP instruction is an alias mnemonic for the XCHG (E)AX, (E)AX instruction.

The multi-byte NOP instruction performs no operation on supported processors and generates undefined opcode exception on processors that do not support the multi-byte NOP instruction.

The memory operand form of the instruction allows software to create a byte sequence of "no operation" as one instruction. For situations where multiple-byte NOPs are needed, the recommended operations (32-bit mode and 64-bit mode) are:

Table 4-1. Recommended Multi-Byte Sequence of NOP Instruction

Length	Assembly	Byte Sequence
2 bytes	66 NOP	66 90H
3 bytes	NOP DWORD ptr [EAX]	0F 1F 00H
4 bytes	NOP DWORD ptr [EAX + 00H]	0F 1F 40 00H
5 bytes	NOP DWORD ptr [EAX + EAX*1 + 00H]	0F 1F 44 00 00H
6 bytes	66 NOP DWORD ptr [EAX + EAX*1 + 00H]	66 0F 1F 44 00 00H
7 bytes	NOP DWORD ptr [EAX + 00000000H]	0F 1F 80 00 00 00 00H

Table 4-1. Recommended Multi-Byte Sequence of NOP Instruction (Contd.)

Length	Assembly	Byte Sequence
8 bytes	NOP DWORD ptr [EAX + EAX*1 + 00000000H]	0F 1F 84 00 00 00 00 00H
9 bytes	66 NOP DWORD ptr [EAX + EAX*1 + 00000000H]	66 0F 1F 84 00 00 00 00 00H

# **Flags Affected**

None.

# **Exceptions (All Operating Modes)**

# **NOT—One's Complement Negation**

Opcode	Instruction	64-Bit Mode	Compat/ Leg Mode	Description
F6 /2	NOT r/m8	Valid	Valid	Reverse each bit of r/m8.
REX + F6 /2	NOT r/m8*	Valid	N.E.	Reverse each bit of r/m8.
F7 /2	NOT r/m16	Valid	Valid	Reverse each bit of $r/m16$ .
F7 /2	NOT <i>r/m32</i>	Valid	Valid	Reverse each bit of r/m32.
REX.W + F7 /2	NOT r/m64	Valid	N.E.	Reverse each bit of r/m64.

#### **NOTES:**

#### **Description**

Performs a bitwise NOT operation (each 1 is set to 0, and each 0 is set to 1) on the destination operand and stores the result in the destination operand location. The destination operand can be a register or a memory location.

This instruction can be used with a LOCK prefix to allow the instruction to be executed atomically.

In 64-bit mode, the instruction's default operation size is 32 bits. Using a REX prefix in the form of REX.R permits access to additional registers (R8-R15). Using a REX prefix in the form of REX.W promotes operation to 64 bits. See the summary chart at the beginning of this section for encoding data and limits.

#### Operation

DEST  $\leftarrow$  NOT DEST;

#### Flags Affected

None.

# **Protected Mode Exceptions**

#GP(0) If the destination operand points to a non-writable segment.

If a memory operand effective address is outside the CS, DS,

ES, FS, or GS segment limit.

If the DS, ES, FS, or GS register contains a NULL segment

selector.

#SS(0) If a memory operand effective address is outside the SS

segment limit.

#PF(fault-code) If a page fault occurs.

<sup>\*</sup> In 64-bit mode, r/m8 can not be encoded to access the following byte registers if a REX prefix is used: AH, BH, CH, DH.

#AC(0) If alignment checking is enabled and an unaligned memory

reference is made while the current privilege level is 3.

#UD If the LOCK prefix is used but the destination is not a memory

operand.

#### **Real-Address Mode Exceptions**

#GP If a memory operand effective address is outside the CS, DS,

ES, FS, or GS segment limit.

#SS If a memory operand effective address is outside the SS

segment limit.

#UD If the LOCK prefix is used but the destination is not a memory

operand.

#### Virtual-8086 Mode Exceptions

#GP(0) If a memory operand effective address is outside the CS, DS,

ES, FS, or GS segment limit.

#SS(0) If a memory operand effective address is outside the SS

segment limit.

#PF(fault-code) If a page fault occurs.

#AC(0) If alignment checking is enabled and an unaligned memory

reference is made.

#UD If the LOCK prefix is used but the destination is not a memory

operand.

#### **Compatibility Mode Exceptions**

Same as for protected mode exceptions.

#### **64-Bit Mode Exceptions**

#SS(0) If a memory address referencing the SS segment is in a non-

canonical form.

#GP(0) If the memory address is in a non-canonical form.

#PF(fault-code) If a page fault occurs.

#AC(0) If alignment checking is enabled and an unaligned memory

reference is made while the current privilege level is 3.

#UD If the LOCK prefix is used but the destination is not a memory

operand.

# **OR—Logical Inclusive OR**

Opcode	Instruction	64-Bit Mode	Compat/ Leg Mode	Description
OC ib	OR AL, i <i>mm8</i>	Valid	Valid	AL OR imm8.
OD iw	OR AX, imm16	Valid	Valid	AX OR imm16.
OD id	OR EAX, i <i>mm32</i>	Valid	Valid	EAX OR imm32.
REX.W + OD id	OR RAX, imm32	Valid	N.E.	RAX OR imm32 (sign-extended).
80 /1 <i>ib</i>	OR r/m8, imm8	Valid	Valid	r/m8 OR imm8.
REX + 80 /1 ib	OR r/m8*, imm8	Valid	N.E.	r/m8 OR imm8.
81 /1 iw	OR <i>r/m16, imm16</i>	Valid	Valid	r/m16 OR imm16.
81 /1 id	OR <i>r/m32, imm32</i>	Valid	Valid	r/m32 OR imm32.
REX.W + 81 /1 id	OR r/m64, imm32	Valid	N.E.	r/m64 OR imm32 (sign- extended).
83 /1 ib	OR <i>r/m16, imm8</i>	Valid	Valid	r/m16 OR imm8 (sign- extended).
83 /1 ib	OR <i>r/m32, imm8</i>	Valid	Valid	r/m32 OR imm8 (sign- extended).
REX.W + 83 /1 ib	OR <i>r/m64, imm8</i>	Valid	N.E.	r/m64 OR imm8 (sign- extended).
08 /r	OR <i>r/m8, r8</i>	Valid	Valid	r/m8 OR r8.
REX + 08 /r	OR r/m8*, r8*	Valid	N.E.	r/m8 OR r8.
09 /r	OR <i>r/m16, r16</i>	Valid	Valid	r/m16 OR r16.
09 /r	OR <i>r/m32, r32</i>	Valid	Valid	r/m32 OR r32.
REX.W + 09 /r	OR <i>r/m64, r64</i>	Valid	N.E.	r/m64 OR r64.
0A /r	OR <i>r8, r/m8</i>	Valid	Valid	r8 OR r/m8.
REX + 0A /r	OR r8*, r/m8*	Valid	N.E.	r8 OR r/m8.
0B /r	OR <i>r16, r/m16</i>	Valid	Valid	r16 OR r/m16.
0B /r	OR <i>r32, r/m32</i>	Valid	Valid	r32 OR r/m32.
REX.W + 0B /r	OR <i>r64, r/m64</i>	Valid	N.E.	r64 OR r/m64.

# NOTES:

<sup>\*</sup> In 64-bit mode, r/m8 can not be encoded to access the following byte registers if a REX prefix is used: AH, BH, CH, DH.

#### **Description**

Performs a bitwise inclusive OR operation between the destination (first) and source (second) operands and stores the result in the destination operand location. The source operand can be an immediate, a register, or a memory location; the destination operand can be a register or a memory location. (However, two memory operands cannot be used in one instruction.) Each bit of the result of the OR instruction is set to 0 if both corresponding bits of the first and second operands are 0; otherwise, each bit is set to 1.

This instruction can be used with a LOCK prefix to allow the instruction to be executed atomically.

In 64-bit mode, the instruction's default operation size is 32 bits. Using a REX prefix in the form of REX.R permits access to additional registers (R8-R15). Using a REX prefix in the form of REX.W promotes operation to 64 bits. See the summary chart at the beginning of this section for encoding data and limits.

#### Operation

DEST  $\leftarrow$  DEST OR SRC;

#### **Flags Affected**

The OF and CF flags are cleared; the SF, ZF, and PF flags are set according to the result. The state of the AF flag is undefined.

#### **Protected Mode Exceptions**

#GP(0) If the destination operand points to a non-writable segment.

If a memory operand effective address is outside the CS, DS,

ES, FS, or GS segment limit.

If the DS, ES, FS, or GS register contains a NULL segment

selector.

#SS(0) If a memory operand effective address is outside the SS

segment limit.

#PF(fault-code) If a page fault occurs.

#AC(0) If alignment checking is enabled and an unaligned memory

reference is made while the current privilege level is 3.

#UD If the LOCK prefix is used but the destination is not a memory

operand.

## **Real-Address Mode Exceptions**

#GP If a memory operand effective address is outside the CS, DS,

ES, FS, or GS segment limit.

#SS If a memory operand effective address is outside the SS

segment limit.

#UD If the LOCK prefix is used but the destination is not a memory

operand.

#### Virtual-8086 Mode Exceptions

#GP(0) If a memory operand effective address is outside the CS, DS,

ES, FS, or GS segment limit.

#SS(0) If a memory operand effective address is outside the SS

segment limit.

#PF(fault-code) If a page fault occurs.

#AC(0) If alignment checking is enabled and an unaligned memory

reference is made.

#UD If the LOCK prefix is used but the destination is not a memory

operand.

# **Compatibility Mode Exceptions**

Same as for protected mode exceptions.

#### **64-Bit Mode Exceptions**

#SS(0) If a memory address referencing the SS segment is in a non-

canonical form.

#GP(0) If the memory address is in a non-canonical form.

#PF(fault-code) If a page fault occurs.

#AC(0) If alignment checking is enabled and an unaligned memory

reference is made while the current privilege level is 3.

#UD If the LOCK prefix is used but the destination is not a memory

operand.

# ORPD—Bitwise Logical OR of Double-Precision Floating-Point Values

Opcode	Instruction	64-Bit Mode	Compat/ Leg Mode	Description
66 OF 56 /r	ORPD <i>xmm1</i> , <i>xmm2/m128</i>	Valid	Valid	Bitwise OR of xmm2/m128 and xmm1.

#### **Description**

Performs a bitwise logical OR of the two packed double-precision floating-point values from the source operand (second operand) and the destination operand (first operand), and stores the result in the destination operand. The source operand can be an XMM register or a 128-bit memory location. The destination operand is an XMM register.

In 64-bit mode, using a REX prefix in the form of REX.R permits this instruction to access additional registers (XMM8-XMM15).

#### **Operation**

DEST[127:0]  $\leftarrow$  DEST[127:0] BitwiseOR SRC[127:0];

# Intel® C/C++ Compiler Intrinsic Equivalent

ORPD \_\_m128d \_mm\_or\_pd(\_\_m128d a, \_\_m128d b)

#### **SIMD Floating-Point Exceptions**

None.

# **Protected Mode Exceptions**

#GP(0) For an illegal memory operand effective address in the CS, DS,

ES, FS or GS segments.

If a memory operand is not aligned on a 16-byte boundary,

regardless of segment.

#SS(0) For an illegal address in the SS segment.

#PF(fault-code) For a page fault. #NM If CR0.TS[bit 3] = 1. #UD If CR0.EM[bit 2] = 1.

If CR4.OSFXSR[bit 9] = 0.

If CPUID.01H:EDX.SSE2[bit 26] = 0.

#### **Real-Address Mode Exceptions**

#GP If a memory operand is not aligned on a 16-byte boundary,

regardless of segment.

If any part of the operand lies outside the effective address

space from 0 to FFFFH.

#NM If CR0.TS[bit 3] = 1. #UD If CR0.EM[bit 2] = 1.

If CR4.OSFXSR[bit 9] = 0.

If CPUID.01H:EDX.SSE2[bit 26] = 0.

If the LOCK prefix is used.

#### Virtual-8086 Mode Exceptions

Same exceptions as in real address mode.

#PF(fault-code) For a page fault.

# **Compatibility Mode Exceptions**

Same as for protected mode exceptions.

#### **64-Bit Mode Exceptions**

#SS(0) If a memory address referencing the SS segment is in a non-

canonical form.

#GP(0) If the memory address is in a non-canonical form.

If memory operand is not aligned on a 16-byte boundary,

regardless of segment.

#PF(fault-code) For a page fault.

#NM If CR0.TS[bit 3] = 1. #UD If CR0.EM[bit 2] = 1.

If CR4.OSFXSR[bit 9] = 0.

If CPUID.01H:EDX.SSE2[bit 26] = 0.

# **ORPS—Bitwise Logical OR of Single-Precision Floating-Point Values**

Opcode	Instruction	64-Bit Mode	Compat/ Leg Mode	Description
0F 56 /r	ORPS xmm1, xmm2/m128	Valid	Valid	Bitwise OR of xmm2/m128 and xmm1.

#### **Description**

Performs a bitwise logical OR of the four packed single-precision floating-point values from the source operand (second operand) and the destination operand (first operand), and stores the result in the destination operand. The source operand can be an XMM register or a 128-bit memory location. The destination operand is an XMM register.

In 64-bit mode, using a REX prefix in the form of REX.R permits this instruction to access additional registers (XMM8-XMM15).

#### **Operation**

DEST[127:0]  $\leftarrow$  DEST[127:0] BitwiseOR SRC[127:0];

## Intel C/C++ Compiler Intrinsic Equivalent

ORPS \_\_m128 \_mm\_or\_ps(\_\_m128 a, \_\_m128 b)

#### SIMD Floating-Point Exceptions

None.

# **Protected Mode Exceptions**

#GP(0) For an illegal memory operand effective address in the CS, DS,

ES, FS or GS segments.

If a memory operand is not aligned on a 16-byte boundary,

regardless of segment.

#SS(0) For an illegal address in the SS segment.

#PF(fault-code) For a page fault. #NM If CR0.TS[bit 3] = 1. #UD If CR0.EM[bit 2] = 1.

If CR4.OSFXSR[bit 9] = 0.

If CPUID.01H:EDX.SSE[bit 25] = 0.

#### **Real-Address Mode Exceptions**

#GP If a memory operand is not aligned on a 16-byte boundary,

regardless of segment.

If any part of the operand lies outside the effective address

space from 0 to FFFFH.

#NM If CR0.TS[bit 3] = 1. #UD If CR0.EM[bit 2] = 1.

If CR4.OSFXSR[bit 9] = 0.

If CPUID.01H:EDX.SSE[bit 25] = 0.

If the LOCK prefix is used.

#### Virtual-8086 Mode Exceptions

Same exceptions as in real address mode.

#PF(fault-code) For a page fault.

# **Compatibility Mode Exceptions**

Same as for protected mode exceptions.

#### **64-Bit Mode Exceptions**

#SS(0) If a memory address referencing the SS segment is in a non-

canonical form.

#GP(0) If the memory address is in a non-canonical form.

If memory operand is not aligned on a 16-byte boundary,

regardless of segment.

#PF(fault-code) For a page fault.

#NM If CR0.TS[bit 3] = 1. #UD If CR0.EM[bit 2] = 1.

If CR4.OSFXSR[bit 9] = 0.

If CPUID.01H:EDX.SSE[bit 25] = 0.

# **OUT—Output to Port**

Opcode*	Instruction	64-Bit Mode	Compat/ Leg Mode	Description
E6 <i>ib</i>	OUT imm8, AL	Valid	Valid	Output byte in AL to I/O port address <i>imm8</i> .
E7 ib	OUT imm8, AX	Valid	Valid	Output word in AX to I/O port address <i>imm8</i> .
E7 ib	OUT imm8, EAX	Valid	Valid	Output doubleword in EAX to I/O port address <i>imm8</i> .
EE	OUT DX, AL	Valid	Valid	Output byte in AL to I/O port address in DX.
EF	OUT DX, AX	Valid	Valid	Output word in AX to I/O port address in DX.
EF	OUT DX, EAX	Valid	Valid	Output doubleword in EAX to I/O port address in DX.

#### **NOTES:**

#### **Description**

Copies the value from the second operand (source operand) to the I/O port specified with the destination operand (first operand). The source operand can be register AL, AX, or EAX, depending on the size of the port being accessed (8, 16, or 32 bits, respectively); the destination operand can be a byte-immediate or the DX register. Using a byte immediate allows I/O port addresses 0 to 255 to be accessed; using the DX register as a source operand allows I/O ports from 0 to 65,535 to be accessed.

The size of the I/O port being accessed is determined by the opcode for an 8-bit I/O port or by the operand-size attribute of the instruction for a 16- or 32-bit I/O port.

At the machine code level, I/O instructions are shorter when accessing 8-bit I/O ports. Here, the upper eight bits of the port address will be 0.

This instruction is only useful for accessing I/O ports located in the processor's I/O address space. See Chapter 13, "Input/Output," in the Intel® 64 and IA-32 Architectures Software Developer's Manual, Volume 1, for more information on accessing I/O ports in the I/O address space.

This instruction's operation is the same in non-64-bit modes and 64-bit mode.

# **IA-32 Architecture Compatibility**

After executing an OUT instruction, the Pentium<sup>®</sup> processor insures that the EWBE# pin has been sampled active before it begins to execute the next instruction. (Note that the instruction can be prefetched if EWBE# is not active, but it will not be

<sup>\*</sup> See IA-32 Architecture Compatibility section below.

executed until the EWBE# pin is sampled active.) Only the Pentium processor family has the EWBE# pin.

# Operation

```
IF ((PE = 1) and ((CPL > IOPL) or (VM = 1)))

THEN (* Protected mode with CPL > IOPL or virtual-8086 mode *)

IF (Any I/O Permission Bit for I/O port being accessed = 1)

THEN (* I/O operation is not allowed *)

#GP(0);

ELSE ( * I/O operation is allowed *)

DEST \leftarrow SRC; (* Writes to selected I/O port *)

FI;

ELSE (Real Mode or Protected Mode with CPL \leq IOPL *)

DEST \leftarrow SRC; (* Writes to selected I/O port *)

FI;
```

#### Flags Affected

None.

#### **Protected Mode Exceptions**

#GP(0) If the CPL is greater than (has less privilege) the I/O privilege

level (IOPL) and any of the corresponding I/O permission bits in

TSS for the I/O port being accessed is 1.

#UD If the LOCK prefix is used.

#### **Real-Address Mode Exceptions**

#UD If the LOCK prefix is used.

#### Virtual-8086 Mode Exceptions

#GP(0) If any of the I/O permission bits in the TSS for the I/O port being

accessed is 1.

#PF(fault-code) If a page fault occurs.

#UD If the LOCK prefix is used.

#### **Compatibility Mode Exceptions**

Same as protected mode exceptions.

#### 64-Bit Mode Exceptions

Same as protected mode exceptions.

# OUTS/OUTSB/OUTSW/OUTSD—Output String to Port

Opcode*	Instruction	64-Bit Mode	Compat/ Leg Mode	Description
6E	OUTS DX, m8	Valid	Valid	Output byte from memory location specified in DS:(E)SI or RSI to I/O port specified in DX**.
6F	OUTS DX, m16	Valid	Valid	Output word from memory location specified in DS:(E)SI or RSI to I/O port specified in DX**.
6F	OUTS DX, m32	Valid	Valid	Output doubleword from memory location specified in DS:(E)SI or RSI to I/O port specified in DX**.
6E	OUTSB	Valid	Valid	Output byte from memory location specified in DS:(E)SI or RSI to I/O port specified in DX**.
6F	OUTSW	Valid	Valid	Output word from memory location specified in DS:(E)SI or RSI to I/O port specified in DX**.
6F	OUTSD	Valid	Valid	Output doubleword from memory location specified in DS:(E)SI or RSI to I/O port specified in DX**.

#### **NOTES:**

# **Description**

Copies data from the source operand (second operand) to the I/O port specified with the destination operand (first operand). The source operand is a memory location, the address of which is read from either the DS:SI, DS:ESI or the RSI registers (depending on the address-size attribute of the instruction, 16, 32 or 64, respectively). (The DS segment may be overridden with a segment override prefix.) The destination operand is an I/O port address (from 0 to 65,535) that is read from the DX register. The size of the I/O port being accessed (that is, the size of the source and destination operands) is determined by the opcode for an 8-bit I/O port or by the operand-size attribute of the instruction for a 16- or 32-bit I/O port.

At the assembly-code level, two forms of this instruction are allowed: the "explicit-operands" form and the "no-operands" form. The explicit-operands form (specified with the OUTS mnemonic) allows the source and destination operands to be specified explicitly. Here, the source operand should be a symbol that indicates the size of the

<sup>\*</sup> See IA-32 Architecture Compatibility section below.

<sup>\*\*</sup> In 64-bit mode, only 64-bit (RSI) and 32-bit (ESI) address sizes are supported. In non-64-bit mode, only 32-bit (ESI) and 16-bit (SI) address sizes are supported.

I/O port and the source address, and the destination operand must be DX. This explicit-operands form is provided to allow documentation; however, note that the documentation provided by this form can be misleading. That is, the source operand symbol must specify the correct **type** (size) of the operand (byte, word, or doubleword), but it does not have to specify the correct **location**. The location is always specified by the DS:(E)SI or RSI registers, which must be loaded correctly before the OUTS instruction is executed.

The no-operands form provides "short forms" of the byte, word, and doubleword versions of the OUTS instructions. Here also DS:(E)SI is assumed to be the source operand and DX is assumed to be the destination operand. The size of the I/O port is specified with the choice of mnemonic: OUTSB (byte), OUTSW (word), or OUTSD (doubleword).

After the byte, word, or doubleword is transferred from the memory location to the I/O port, the SI/ESI/RSI register is incremented or decremented automatically according to the setting of the DF flag in the EFLAGS register. (If the DF flag is 0, the (E)SI register is incremented; if the DF flag is 1, the SI/ESI/RSI register is decremented.) The SI/ESI/RSI register is incremented or decremented by 1 for byte operations, by 2 for word operations, and by 4 for doubleword operations.

The OUTS, OUTSW, and OUTSD instructions can be preceded by the REP prefix for block input of ECX bytes, words, or doublewords. See "REP/REPE/REPZ /REPNE/REPNZ—Repeat String Operation Prefix" in this chapter for a description of the REP prefix. This instruction is only useful for accessing I/O ports located in the processor's I/O address space. See Chapter 13, "Input/Output," in the Intel® 64 and IA-32 Architectures Software Developer's Manual, Volume 1, for more information on accessing I/O ports in the I/O address space.

In 64-bit mode, the default operand size is 32 bits; operand size is not promoted by the use of REX.W. In 64-bit mode, the default address size is 64 bits, and 64-bit address is specified using RSI by default. 32-bit address using ESI is support using the prefix 67H, but 16-bit address is not supported in 64-bit mode.

#### **IA-32 Architecture Compatibility**

After executing an OUTS, OUTSB, OUTSW, or OUTSD instruction, the Pentium processor insures that the EWBE# pin has been sampled active before it begins to execute the next instruction. (Note that the instruction can be prefetched if EWBE# is not active, but it will not be executed until the EWBE# pin is sampled active.) Only the Pentium processor family has the EWBE# pin.

For the Pentium 4,  $Intel^{\$}$  Xeon $^{\$}$ , and P6 processor family, upon execution of an OUTS, OUTSB, OUTSW, or OUTSD instruction, the processor will not execute the next instruction until the data phase of the transaction is complete.

#### **Operation**

```
IF ((PE = 1) and ((CPL > IOPL) or (VM = 1)))
THEN (* Protected mode with CPL > IOPL or virtual-8086 mode *)
```

```
IF (Any I/O Permission Bit for I/O port being accessed = 1)
              THEN (* I/O operation is not allowed *)
                   #GP(0);
              ELSE (* I/O operation is allowed *)
                   DEST ← SRC; (* Writes to I/O port *)
         FI;
    ELSE (Real Mode or Protected Mode or 64-Bit Mode with CPL ≤ IOPL *)
         DEST ← SRC; (* Writes to I/O port *)
FI;
Byte transfer:
    IF 64-bit mode
         Then
              IF 64-Bit Address Size
                   THEN
                         IF DF = 0
                              THEN RSI \leftarrow RSI RSI + 1;
                              ELSE RSI \leftarrow RSI or - 1;
                         FI;
                    ELSE (* 32-Bit Address Size *)
                         IF DF = 0
                              THEN
                                        ESI \leftarrow ESI + 1;
                                        ESI \leftarrow ESI - 1;
                              ELSE
                         FI;
              FI;
         ELSE
              IF DF = 0
                              (E)SI \leftarrow (E)SI + 1;
                   THEN
                    ELSE (E)SI \leftarrow (E)SI - 1;
              FI;
    FI;
Word transfer:
    IF 64-bit mode
         Then
              IF 64-Bit Address Size
                   THEN
                         IF DF = 0
                              THEN RSI \leftarrow RSI RSI + 2;
                              ELSE RSI \leftarrow RSI or - 2;
                        FI;
                   ELSE (* 32-Bit Address Size *)
                         IF DF = 0
                              THEN
                                        ESI \leftarrow ESI + 2;
```

```
ELSE
                                            ESI \leftarrow ESI - 2:
                           FI;
               FI:
          ELSE
               IF DF = 0
                     THEN
                                 (E)SI \leftarrow (E)SI + 2;
                     ELSE (E)SI \leftarrow (E)SI - 2;
               FI;
    FI:
Doubleword transfer:
    IF 64-bit mode
          Then
               IF 64-Bit Address Size
                     THEN
                           IF DF = 0
                                 THEN RSI \leftarrow RSI RSI + 4;
                                 ELSE RSI \leftarrow RSI or - 4;
                           FI:
                     ELSE (* 32-Bit Address Size *)
                           IF DF = 0
                                 THEN
                                             ESI \leftarrow ESI + 4;
                                            ESI \leftarrow ESI - 4;
                                 ELSE
                           FI;
               FI;
          ELSE
               IF DF = 0
                     THEN
                                 (E)SI \leftarrow (E)SI + 4;
                     ELSE (E)SI \leftarrow (E)SI - 4;
               FI;
    FI;
```

#### **Flags Affected**

None.

#### **Protected Mode Exceptions**

#GP(0) If the CPL is greater than (has less privilege) the I/O privilege

level (IOPL) and any of the corresponding I/O permission bits in

TSS for the I/O port being accessed is 1.

If a memory operand effective address is outside the limit of the

CS, DS, ES, FS, or GS segment.

If the segment register contains a NULL segment selector.

#PF(fault-code) If a page fault occurs.

#AC(0) If alignment checking is enabled and an unaligned memory

reference is made while the current privilege level is 3.

**#UD** If the LOCK prefix is used.

# **Real-Address Mode Exceptions**

#GP If a memory operand effective address is outside the CS, DS,

ES, FS, or GS segment limit.

#SS If a memory operand effective address is outside the SS

segment limit.

**#UD** If the LOCK prefix is used.

#### Virtual-8086 Mode Exceptions

#GP(0) If any of the I/O permission bits in the TSS for the I/O port being

accessed is 1.

#PF(fault-code) If a page fault occurs.

#AC(0) If alignment checking is enabled and an unaligned memory

reference is made.

#UD If the LOCK prefix is used.

#### **Compatibility Mode Exceptions**

Same as for protected mode exceptions.

#### **64-Bit Mode Exceptions**

#SS(0) If a memory address referencing the SS segment is in a non-

canonical form.

#GP(0) If the CPL is greater than (has less privilege) the I/O privilege

level (IOPL) and any of the corresponding I/O permission bits in

TSS for the I/O port being accessed is 1.

If the memory address is in a non-canonical form.

#PF(fault-code) If a page fault occurs.

#AC(0) If alignment checking is enabled and an unaligned memory

reference is made while the current privilege level is 3.

#### PABSB/PABSW/PABSD — Packed Absolute Value

Opcode	Instruction	64-Bit Mode	Compat/ Leg Mode	Description
OF 38 1C /r	PABSB mm1, mm2/m64	Valid	Valid	Compute the absolute value of bytes in mm2/m64 and store UNSIGNED result in mm1.
66 0F 38 1C /r	PABSB xmm1, xmm2/m128	Valid	Valid	Compute the absolute value of bytes in xmm2/m128 and store UNSIGNED result in xmm1.
0F 38 1D /r	PABSW mm1, mm2/m64	Valid	Valid	Compute the absolute value of 16- bit integers in mm2/m64 and store UNSIGNED result in mm1.
66 0F 38 1D /r	PABSW xmm1, xmm2/m128	Valid	Valid	Compute the absolute value of 16- bit integers in xmm2/m128 and store UNSIGNED result in xmm1.
OF 38 1E /r	PABSD mm1, mm2/m64	Valid	Valid	Compute the absolute value of 32-bit integers in mm2/m64 and store UNSIGNED result in mm1.
66 0F 38 1E /r	PABSD xmm1, xmm2/m128	Valid	Valid	Compute the absolute value of 32- bit integers in xmm2/m128 and store UNSIGNED result in xmm1.

# **Description**

PABSB/W/D computes the absolute value of each data element of the source operand (the second operand) and stores the UNSIGNED results in the destination operand (the first operand). PABSB operates on signed bytes, PABSW operates on 16-bit words, and PABSD operates on signed 32-bit integers. The source operand can be an MMX register or a 64-bit memory location, or it can be an XMM register or a 128-bit memory location. The destination operand can be an MMX or an XMM register. Both operands can be MMX register or XMM registers. When the source operand is a 128-bit memory operand, the operand must be aligned on a 16byte boundary or a general-protection exception (#GP) will be generated.

In 64-bit mode, use the REX prefix to access additional registers.

#### **Operation**

PABSB with 64 bit operands

Unsigned DEST[7:0]  $\leftarrow$  ABS(SRC[7:0]) Repeat operation for 2nd through 7th bytes Unsigned DEST[63:56]  $\leftarrow$  ABS(SRC[63:56])

#### PABSB with 128 bit operands:

Unsigned DEST[7:0]  $\leftarrow$  ABS(SRC[7:.0]) Repeat operation for 2nd through 15th bytes Unsigned DEST[127:120]  $\leftarrow$  ABS(SRC[127:120])

#### PABSW with 64 bit operands:

Unsigned DEST[15:0]  $\leftarrow$  ABS(SRC[15:0]) Repeat operation for 2nd through 3rd 16-bit words Unsigned DEST[63:48]  $\leftarrow$  ABS(SRC[63:48])

#### PABSW with 128 bit operands:

Unsigned DEST[15:0]  $\leftarrow$  ABS(SRC[15:0]) Repeat operation for 2nd through 7th 16-bit words Unsigned DEST[127:112]  $\leftarrow$  ABS(SRC[127:112])

#### PABSD with 64 bit operands:

Unsigned DEST[31:0]  $\leftarrow$  ABS(SRC[31:0]) Unsigned DEST[63:32]  $\leftarrow$  ABS(SRC[63:32])

#### PABSD with 128 bit operands:

Unsigned DEST[31:0]  $\leftarrow$  ABS(SRC[31:0]) Repeat operation for 2nd through 3rd 32-bit double words Unsigned DEST[127:96]  $\leftarrow$  ABS(SRC[127:96])

#### Intel C/C++ Compiler Intrinsic Equivalents

PABSB \_\_m64 \_mm\_abs\_pi8 (\_\_m64 a)

PABSB \_\_m128i \_mm\_abs\_epi8 (\_\_m128i a)

PABSW \_\_m64 \_mm\_abs\_pi16 (\_\_m64 a)

PABSW \_\_m128i \_mm\_abs\_epi16 (\_\_m128i a)

PABSD \_\_m64 \_mm\_abs\_pi32 (\_\_m64 a)

PABSD \_\_m128i \_mm\_abs\_epi32 (\_\_m128i a)

### **Protected Mode Exceptions**

#GP(0): If a memory operand effective address is outside the CS, DS,

ES, FS or GS segments.

(128-bit operations only) If not aligned on 16-byte boundary,

regardless of segment.

#SS(0) If a memory operand effective address is outside the SS

segment limit.

#PF(fault-code) If a page fault occurs.

#UD If CR0.EM = 1.

(128-bit operations only) If CR4.OSFXSR(bit 9) = 0.

If CPUID.SSSE3(ECX bit 9) = 0.

If the LOCK prefix is used.

#NM If TS bit in CR0 is set.

#MF (64-bit operations only) If there is a pending x87 FPU exception. #AC(0) (64-bit operations only) If alignment checking is enabled and

unaligned memory reference is made while the current privilege

level is 3.

#### **Real Mode Exceptions**

#GP(0): If any part of the operand lies outside of the effective address

space from 0 to 0FFFFH.

(128-bit operations only) If not aligned on 16-byte boundary,

regardless of segment.

#UD: If CR0.EM = 1.

(128-bit operations only) If CR4.OSFXSR(bit 9) = 0.

If CPUID.SSSE3(ECX bit 9) = 0.

If the LOCK prefix is used.

#NM If TS bit in CR0 is set.

#MF (64-bit operations only) If there is a pending x87 FPU exception.

#### Virtual 8086 Mode Exceptions

Same exceptions as in real address mode. #PF(fault-code) If a page fault occurs.

#AC(0) (64-bit operations only) If alignment checking is enabled and

unaligned memory reference is made.

## **Compatibility Mode Exceptions**

Same as for protected mode exceptions.

#### **64-Bit Mode Exceptions**

#SS(0) If a memory address referencing the SS segment is in a non-

canonical form.

#GP(0) If the memory address is in a non-canonical form.

(128-bit operations only) If memory operand is not aligned on a

16-byte boundary, regardless of segment.

#UD If CR0.EM[bit 2] = 1.

#### INSTRUCTION SET REFERENCE, N-Z

(128-bit operations only) If CR4.OSFXSR[bit 9] = 0.

If CPUID.01H:ECX.SSSE3[bit 9] = 0.

If the LOCK prefix is used.

#NM If CR0.TS[bit 3] = 1.

#MF (64-bit operations only) If there is a pending x87 FPU exception.

#PF(fault-code) If a page fault occurs.

#AC(0) (64-bit operations only) If alignment checking is enabled and an

unaligned memory reference is made while the current privilege

level is 3.

PACKSSWB/PA	ACKSSDW—P	ack with	Sianed	Saturation

Opcode	Instruction	64-Bit Mode	Compat/ Leg Mode	Description
0F 63 /r	PACKSSWB mm1, mm2/m64	Valid	Valid	Converts 4 packed signed word integers from <i>mm1</i> and from <i>mm2/m64</i> into 8 packed signed byte integers in <i>mm1</i> using signed saturation.
66 0F 63 /r	PACKSSWB xmm1, xmm2/m128	Valid	Valid	Converts 8 packed signed word integers from xmm1 and from xxm2/m128 into 16 packed signed byte integers in xxm1 using signed saturation.
OF 6B /r	PACKSSDW mm1, mm2/m64	Valid	Valid	Converts 2 packed signed doubleword integers from <i>mm1</i> and from <i>mm2/m64</i> into 4 packed signed word integers in <i>mm1</i> using signed saturation.
66 0F 6B /r	PACKSSDW xmm1, xmm2/m128	Valid	Valid	Converts 4 packed signed doubleword integers from xmm1 and from xxm2/m128 into 8 packed signed word integers in xxm1 using signed saturation.

# **Description**

Converts packed signed word integers into packed signed byte integers (PACKSSWB) or converts packed signed doubleword integers into packed signed word integers (PACKSSDW), using saturation to handle overflow conditions. See Figure 4-1 for an example of the packing operation.

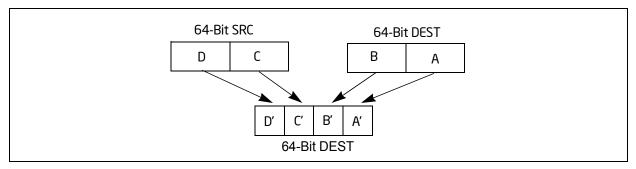


Figure 4-1. Operation of the PACKSSDW Instruction Using 64-bit Operands

The PACKSSWB instruction converts 4 or 8 signed word integers from the destination operand (first operand) and 4 or 8 signed word integers from the source operand

(second operand) into 8 or 16 signed byte integers and stores the result in the destination operand. If a signed word integer value is beyond the range of a signed byte integer (that is, greater than 7FH for a positive integer or greater than 80H for a negative integer), the saturated signed byte integer value of 7FH or 80H, respectively, is stored in the destination.

The PACKSSDW instruction packs 2 or 4 signed doublewords from the destination operand (first operand) and 2 or 4 signed doublewords from the source operand (second operand) into 4 or 8 signed words in the destination operand (see Figure 4-1). If a signed doubleword integer value is beyond the range of a signed word (that is, greater than 7FFFH for a positive integer or greater than 8000H for a negative integer), the saturated signed word integer value of 7FFFH or 8000H, respectively, is stored into the destination.

The PACKSSWB and PACKSSDW instructions operate on either 64-bit or 128-bit operands. When operating on 64-bit operands, the destination operand must be an MMX technology register and the source operand can be either an MMX technology register or a 64-bit memory location. When operating on 128-bit operands, the destination operand must be an XMM register and the source operand can be either an XMM register or a 128-bit memory location.

In 64-bit mode, using a REX prefix in the form of REX.R permits this instruction to access additional registers (XMM8-XMM15).

# **Operation**

```
DEST[7:0] ← SaturateSignedWordToSignedByte DEST[15:0];
DEST[15:8] ← SaturateSignedWordToSignedByte DEST[31:16];
DEST[23:16] ← SaturateSignedWordToSignedByte DEST[47:32];
DEST[31:24] ← SaturateSignedWordToSignedByte DEST[63:48]:
```

 $DEST[31:24] \leftarrow SaturateSignedWordToSignedByte\ DEST[63:48];$ 

 $DEST[39:32] \leftarrow SaturateSignedWordToSignedByte\ SRC[15:0];$ 

 $DEST[47:40] \leftarrow SaturateSignedWordToSignedByte\ SRC[31:16];$ 

 $DEST[55:48] \leftarrow SaturateSignedWordToSignedByte~SRC[47:32];$ 

 $DEST[63:56] \leftarrow SaturateSignedWordToSignedByte~SRC[63:48];$ 

#### PACKSSDW instruction with 64-bit operands:

PACKSSWB instruction with 64-bit operands:

```
DEST[15:0] ← SaturateSignedDoublewordToSignedWord DEST[31:0];
```

DEST[31:16] ← SaturateSignedDoublewordToSignedWord DEST[63:32];

DEST[47:32] ← SaturateSignedDoublewordToSignedWord SRC[31:0];

DEST[63:48]  $\leftarrow$  SaturateSignedDoublewordToSignedWord SRC[63:32];

#### PACKSSWB instruction with 128-bit operands:

```
DEST[7:0]← SaturateSignedWordToSignedByte (DEST[15:0]);
```

DEST[15:8] ← SaturateSignedWordToSignedByte (DEST[31:16]);

 $DEST[23:16] \leftarrow SaturateSignedWordToSignedByte (DEST[47:32]);$ 

DEST[31:24]  $\leftarrow$  SaturateSignedWordToSignedByte (DEST[63:48]);

DEST[39:32] ← SaturateSignedWordToSignedByte (DEST[79:64]);

```
DEST[47:40] ← SaturateSignedWordToSignedByte (DEST[95:80]);
   DEST[55:48] \leftarrow SaturateSignedWordToSignedByte (DEST[111:96]);
   DEST[63:56] ← SaturateSignedWordToSignedByte (DEST[127:112]);
   DEST[71:64] \leftarrow SaturateSignedWordToSignedByte (SRC[15:0]);
   DEST[79:72] \leftarrow SaturateSignedWordToSignedByte (SRC[31:16]);
   DEST[87:80] ← SaturateSignedWordToSignedByte (SRC[47:32]);
   DEST[95:88] ← SaturateSignedWordToSignedByte (SRC[63:48]);
   DEST[103:96] ← SaturateSignedWordToSignedByte (SRC[79:64]);
   DEST[111:104] \leftarrow SaturateSignedWordToSignedByte (SRC[95:80]);
   DEST[119:112] ← SaturateSignedWordToSignedByte (SRC[111:96]);
   DEST[127:120] ← SaturateSignedWordToSignedByte (SRC[127:112]);
PACKSSDW instruction with 128-bit operands:
   DEST[15:0] \leftarrow SaturateSignedDwordToSignedWord (DEST[31:0]);
   DEST[31:16] ← SaturateSignedDwordToSignedWord (DEST[63:32]);
   DEST[47:32] ← SaturateSignedDwordToSignedWord (DEST[95:64]);
   DEST[63:48] ← SaturateSignedDwordToSignedWord (DEST[127:96]);
   DEST[79:64] ← SaturateSignedDwordToSignedWord (SRC[31:0]);
   DEST[95:80] ← SaturateSignedDwordToSignedWord (SRC[63:32]);
   DEST[111:96] ← SaturateSignedDwordToSignedWord (SRC[95:64]);
   DEST[127:112] ← SaturateSignedDwordToSignedWord (SRC[127:96]);
```

# Intel C/C++ Compiler Intrinsic Equivalents

```
      PACKSSWB
      __m64 _mm_packs_pi16(__m64 m1, __m64 m2)

      PACKSSWB
      __m128i _mm_packs_epi16(__m128i m1, __m128i m2)

      PACKSSDW
      __m64 _mm_packs_pi32 (__m64 m1, __m64 m2)

      PACKSSDW
      __m128i _mm_packs_epi32(__m128i m1, __m128i m2)
```

# **Flags Affected**

None.

#### **Protected Mode Exceptions**

Flotected Flode	exceptions			
#GP(0)	If a memory operand effective address is outside the CS, DS, ES, FS, or GS segment limit.			
	(128-bit operations only) If a memory operand is not aligned on a 16-byte boundary, regardless of segment.			
#SS(0)	If a memory operand effective address is outside the SS segment limit.			
#UD	If $CR0.EM[bit 2] = 1$ .			
	(128-bit operations only) If CR4.OSFXSR[bit 9] = 0. Execution of 128-bit instructions on a non-SSE2 capable processor (one			

that is MMX technology capable) will result in the instruction

operating on the mm registers, not #UD.

If the LOCK prefix is used.

#NM If CR0.TS[bit 3] = 1.

#MF (64-bit operations only) If there is a pending x87 FPU exception.

#PF(fault-code) If a page fault occurs.

#AC(0) (64-bit operations only) If alignment checking is enabled and an

unaligned memory reference is made while the current privilege

level is 3.

# **Real-Address Mode Exceptions**

#GP (128-bit operations only) If a memory operand is not aligned on

a 16-byte boundary, regardless of segment.

If any part of the operand lies outside of the effective address

space from 0 to FFFFH.

#UD If CR0.EM[bit 2] = 1.

(128-bit operations only) If CR4.OSFXSR[bit 9] = 0. Execution of 128-bit instructions on a non-SSE2 capable processor (one that is MMX technology capable) will result in the instruction

operating on the mm registers, not #UD.

If the LOCK prefix is used.

#NM If CR0.TS[bit 3] = 1.

#MF (64-bit operations only) If there is a pending x87 FPU exception.

#### Virtual-8086 Mode Exceptions

Same exceptions as in real address mode.

#PF(fault-code) For a page fault.

#AC(0) (64-bit operations only) If alignment checking is enabled and an

unaligned memory reference is made.

#### **Compatibility Mode Exceptions**

Same as for protected mode exceptions.

#### **64-Bit Mode Exceptions**

#SS(0) If a memory address referencing the SS segment is in a non-

canonical form.

#GP(0) If the memory address is in a non-canonical form.

(128-bit operations only) If memory operand is not aligned on a

16-byte boundary, regardless of segment.

#UD If CR0.EM[bit 2] = 1.

(128-bit operations only) If CR4.OSFXSR[bit 9] = 0.

(128-bit operations only) If CPUID.01H:EDX.SSE2[bit 26] = 0.

If the LOCK prefix is used.

#NM If CR0.TS[bit 3] = 1.

#MF (64-bit operations only) If there is a pending x87 FPU exception.

#PF(fault-code) If a page fault occurs.

#AC(0) (64-bit operations only) If alignment checking is enabled and an

unaligned memory reference is made while the current privilege

level is 3.

# PACKUSDW — Pack with Unsigned Saturation

Opcode	Instruction		Compat/ Leg Mode	Description
66 OF 38 2B /r	PACKUSDW xmm1, xmm2/m128	Valid	Valid	Convert 4 packed signed doubleword integers from xmm1 and 4 packed signed doubleword integers from xmm2/m128 into 8 packed unsigned word integers in xmm1 using unsigned saturation.

# **Description**

Converts packed signed doubleword integers into packed unsigned word integers using unsigned saturation to handle overflow conditions. If the signed doubleword value is beyond the range of an unsigned word (that is, greater than FFFFH or less than 0000H), the saturated unsigned word integer value of FFFFH or 0000H, respectively, is stored in the destination.

# **Operation**

```
TMP[15:0] \leftarrow (DEST[31:0] < 0)? 0 : DEST[15:0];
DEST[15:0] \leftarrow (DEST[31:0] > FFFFH)? FFFFH: TMP[15:0];
TMP[31:16] \leftarrow (DEST[63:32] < 0) ? 0 : DEST[47:32];
DEST[31:16] \leftarrow (DEST[63:32] > FFFFH)? FFFFH: TMP[31:16];
TMP[47:32] \leftarrow (DEST[95:64] < 0) ? 0 : DEST[79:64];
DEST[47:32] \leftarrow (DEST[95:64] > FFFFH)? FFFFH: TMP[47:32];
TMP[63:48] \leftarrow (DEST[127:96] < 0)? 0 : DEST[111:96];
DEST[63:48] \leftarrow (DEST[127:96] > FFFFH)? FFFFH: TMP[63:48];
TMP[63:48] \leftarrow (DEST[127:96] < 0)? 0 : DEST[111:96];
DEST[63:48] \leftarrow (DEST[127:96] > FFFFH)? FFFFH: TMP[63:48];
TMP[79:64] \leftarrow (SRC[31:0] < 0)?0:SRC[15:0];
DEST[63:48] \leftarrow (SRC[31:0] > FFFFH)? FFFFH: TMP[79:64];
TMP[95:80] \leftarrow (SRC[63:32] < 0)? 0 : SRC[47:32];
DEST[95:80] \leftarrow (SRC[63:32] > FFFFH)? FFFFH: TMP[95:80];
TMP[111:96] \leftarrow (SRC[95:64] < 0)? 0 : SRC[79:64];
DEST[111:96] \leftarrow (SRC[95:64] > FFFFH)? FFFFH: TMP[111:96];
TMP[127:112] \leftarrow (SRC[127:96] < 0) ? 0 : SRC[111:96];
DEST[128:112] \leftarrow (SRC[127:96] > FFFFH) ? FFFFH: TMP[127:112];
```

# Intel C/C++ Compiler Intrinsic Equivalent

```
PACKUSDW __m128i _mm_packus_epi32(__m128i m1, __m128i m2);
```

#### Flags Affected

None

# **Protected Mode Exceptions**

#GP(0) For an illegal memory operand effective address in the CS, DS,

ES, FS, or GS segments.

If a memory operand is not aligned on a 16-byte boundary,

regardless of segment.

#SS(0): For an illegal address in the SS segment.

#PF(fault-code) For a page fault. #NM If CR0.TS[bit 3] = 1. #UD If CR0.EM[bit 2] = 1.

If CR4.OSFXSR[bit 9] = 0.

If CPUID.SSE4 $_1$ (ECX bit 19) = 0.

If LOCK prefix is used.

Either the prefix REP (F3h) or REPN (F2H) is used.

#### **Real Mode Exceptions**

#GP(0) If any part of the operand lies outside of the effective address

space from 0 to 0FFFFH.

If a memory operand is not aligned on a 16-byte boundary,

regardless of segment.

#NM If CR0.TS[bit 3] = 1. #UD If CR0.EM[bit 2] = 1.

If CR4.OSFXSR[bit 9] = 0.

If CPUID.SSE4 $_1$ (ECX bit 19) = 0.

If LOCK prefix is used.

Either the prefix REP (F3h) or REPN (F2H) is used.

# Virtual 8086 Mode Exceptions

Same exceptions as in Real Address Mode.

#PF(fault-code) For a page fault.

#### **Compatibility Mode Exceptions**

Same exceptions as in Protected Mode.

#### 64-Bit Mode Exceptions

#GP(0) If the memory address is in a non-canonical form.

#### INSTRUCTION SET REFERENCE, N-Z

If a memory operand is not aligned on a 16-byte boundary,

regardless of segment.

#SS(0) If a memory address referencing the SS segment is in a non-

canonical form.

#PF(fault-code) For a page fault.

#NM If TS in CR0 is set.

#UD If EM in CR0 is set.

If OSFXSR in CR4 is 0.

If CPUID feature flag ECX.SSE4\_1 is 0.

If LOCK prefix is used.

Either the prefix REP (F3h) or REPN (F2H) is used.

PACKUSWB-	-Pack with	Unsigned	Saturation

Opcode	Instruction	64-Bit Mode	Compat/ Leg Mode	Description
0F 67 /r	PACKUSWB mm, mm/m64	Valid	Valid	Converts 4 signed word integers from <i>mm</i> and 4 signed word integers from <i>mm/m64</i> into 8 unsigned byte integers in <i>mm</i> using unsigned saturation.
66 0F 67 /r	PACKUSWB xmm1, xmm2/m128	Valid	Valid	Converts 8 signed word integers from xmm1 and 8 signed word integers from xmm2/m128 into 16 unsigned byte integers in xmm1 using unsigned saturation.

#### **Description**

Converts 4 or 8 signed word integers from the destination operand (first operand) and 4 or 8 signed word integers from the source operand (second operand) into 8 or 16 unsigned byte integers and stores the result in the destination operand. (See Figure 4-1 for an example of the packing operation.) If a signed word integer value is beyond the range of an unsigned byte integer (that is, greater than FFH or less than 00H), the saturated unsigned byte integer value of FFH or 00H, respectively, is stored in the destination.

The PACKUSWB instruction operates on either 64-bit or 128-bit operands. When operating on 64-bit operands, the destination operand must be an MMX technology register and the source operand can be either an MMX technology register or a 64-bit memory location. When operating on 128-bit operands, the destination operand must be an XMM register and the source operand can be either an XMM register or a 128-bit memory location.

In 64-bit mode, using a REX prefix in the form of REX.R permits this instruction to access additional registers (XMM8-XMM15).

## **Operation**

PACKUSWB instruction with 64-bit operands:

DEST[7:0]  $\leftarrow$  SaturateSignedWordToUnsignedByte DEST[15:0];

DEST[15:8] ← SaturateSignedWordToUnsignedByte DEST[31:16];

DEST[23:16] ← SaturateSignedWordToUnsignedByte DEST[47:32];

DEST[31:24] ← SaturateSignedWordToUnsignedByte DEST[63:48];

DEST[39:32] ← SaturateSignedWordToUnsignedByte SRC[15:0];

DEST[47:40] ← SaturateSignedWordToUnsignedByte SRC[31:16];

DEST[55:48] ← SaturateSignedWordToUnsignedByte SRC[47:32];

DEST[63:56] ← SaturateSignedWordToUnsignedByte SRC[63:48];

#### PACKUSWB instruction with 128-bit operands:

DEST[7:0]← SaturateSignedWordToUnsignedByte (DEST[15:0]); DEST[15:8] ← SaturateSignedWordToUnsignedByte (DEST[31:16]); DEST[23:16] ← SaturateSignedWordToUnsignedByte (DEST[47:32]); DEST[31:24] ← SaturateSignedWordToUnsignedByte (DEST[63:48]); DEST[39:32] ← SaturateSignedWordToUnsignedByte (DEST[79:64]); DEST[47:40] ← SaturateSignedWordToUnsignedByte (DEST[95:80]); DEST[55:48] ← SaturateSignedWordToUnsignedByte (DEST[111:96]); DEST[63:56]  $\leftarrow$  SaturateSignedWordToUnsignedByte (DEST[127:112]); DEST[71:64] ← SaturateSignedWordToUnsignedByte (SRC[15:01); DEST[79:72]  $\leftarrow$  SaturateSignedWordToUnsignedByte (SRC[31:16]); DEST[87:80]  $\leftarrow$  SaturateSignedWordToUnsignedByte (SRC[47:32]); DEST[95:88] ← SaturateSignedWordToUnsignedByte (SRC[63:48]); DEST[103:96]  $\leftarrow$  SaturateSignedWordToUnsignedByte (SRC[79:64]); DEST[111:104] ← SaturateSignedWordToUnsignedByte (SRC[95:80]); DEST[119:112] ← SaturateSignedWordToUnsignedByte (SRC[111:96]); DEST[127:120]  $\leftarrow$  SaturateSignedWordToUnsignedByte (SRC[127:112]);

#### Intel C/C++ Compiler Intrinsic Equivalent

PACKUSWB \_\_m64 \_mm\_packs\_pu16(\_\_m64 m1, \_\_m64 m2)

PACKUSWB \_\_m128i \_mm\_packs\_epu16(\_\_m128i m1, \_\_m128i m2)

#### **Flags Affected**

None.

## **Protected Mode Exceptions**

#GP(0) If a memory operand effective address is outside the CS, DS,

ES, FS, or GS segment limit.

(128-bit operations only) If a memory operand is not aligned on

a 16-byte boundary, regardless of segment.

#SS(0) If a memory operand effective address is outside the SS

segment limit.

#UD If CR0.EM[bit 2] = 1.

128-bit operations will generate #UD only if CR4.OSFXSR[bit 9] = 0. Execution of 128-bit instructions on a non-SSE2 capable processor (one that is MMX technology capable) will result in the

instruction operating on the mm registers, not #UD.

If the LOCK prefix is used.

#NM If CR0.TS[bit 3] = 1.

#MF (64-bit operations only) If there is a pending x87 FPU exception.

#PF(fault-code) If a page fault occurs.

#AC(0) (64-bit operations only) If alignment checking is enabled and an

unaligned memory reference is made while the current privilege

level is 3.

#### **Real-Address Mode Exceptions**

#GP (128-bit operations only) If a memory operand is not aligned on

a 16-byte boundary, regardless of segment.

If any part of the operand lies outside of the effective address

space from 0 to FFFFH.

#UD If CR0.EM[bit 2] = 1.

128-bit operations will generate #UD only if CR4.OSFXSR[bit 9] = 0. Execution of 128-bit instructions on a non-SSE2 capable processor (one that is MMX technology capable) will result in the

instruction operating on the mm registers, not #UD.

If the LOCK prefix is used.

#NM If CR0.TS[bit 3] = 1.

#MF (64-bit operations only) If there is a pending x87 FPU exception.

#### Virtual-8086 Mode Exceptions

Same exceptions as in real address mode.

#PF(fault-code) For a page fault.

#AC(0) (64-bit operations only) If alignment checking is enabled and an

unaligned memory reference is made.

#### **Compatibility Mode Exceptions**

Same as for protected mode exceptions.

#### **64-Bit Mode Exceptions**

#SS(0) If a memory address referencing the SS segment is in a non-

canonical form.

#GP(0) If the memory address is in a non-canonical form.

(128-bit operations only) If memory operand is not aligned on a

16-byte boundary, regardless of segment.

#UD If CR0.EM[bit 2] = 1.

(128-bit operations only) If CR4.OSFXSR[bit 9] = 0.

(128-bit operations only) If CPUID.01H:EDX.SSE2[bit 26] = 0.

If the LOCK prefix is used.

#NM If CR0.TS[bit 3] = 1.

#MF (64-bit operations only) If there is a pending x87 FPU exception.

#PF(fault-code) If a page fault occurs.

#AC(0)

(64-bit operations only) If alignment checking is enabled and an unaligned memory reference is made while the current privilege level is 3.

PADDB/PADDW/PADDD—Add Packed	Integers

Opcode	Instruction	64-Bit Mode	Compat/ Leg Mode	Description
OF FC /r	PADDB mm, mm/m64	Valid	Valid	Add packed byte integers from <i>mm/m64</i> and <i>mm</i> .
66 OF FC /r	PADDB xmm1, xmm2/m128	Valid	Valid	Add packed byte integers from xmm2/m128 and xmm1.
OF FD /r	PADDW mm, mm/m64	Valid	Valid	Add packed word integers from mm/m64 and mm.
66 OF FD /r	PADDW xmm1, xmm2/m128	Valid	Valid	Add packed word integers from xmm2/m128 and xmm1.
OF FE /r	PADDD mm, mm/m64	Valid	Valid	Add packed doubleword integers from <i>mm/m64</i> and <i>mm</i> .
66 OF FE /r	PADDD xmm1, xmm2/m128	Valid	Valid	Add packed doubleword integers from xmm2/m128 and xmm1.

#### **Description**

Performs a SIMD add of the packed integers from the source operand (second operand) and the destination operand (first operand), and stores the packed integer results in the destination operand. See Figure 9-4 in the *Intel*® *64 and IA-32 Architectures Software Developer's Manual, Volume 1*, for an illustration of a SIMD operation. Overflow is handled with wraparound, as described in the following paragraphs.

These instructions can operate on either 64-bit or 128-bit operands. When operating on 64-bit operands, the destination operand must be an MMX technology register and the source operand can be either an MMX technology register or a 64-bit memory location. When operating on 128-bit operands, the destination operand must be an XMM register and the source operand can be either an XMM register or a 128-bit memory location.

The PADDB instruction adds packed byte integers. When an individual result is too large to be represented in 8 bits (overflow), the result is wrapped around and the low 8 bits are written to the destination operand (that is, the carry is ignored).

The PADDW instruction adds packed word integers. When an individual result is too large to be represented in 16 bits (overflow), the result is wrapped around and the low 16 bits are written to the destination operand.

The PADDD instruction adds packed doubleword integers. When an individual result is too large to be represented in 32 bits (overflow), the result is wrapped around and the low 32 bits are written to the destination operand.

Note that the PADDB, PADDW, and PADDD instructions can operate on either unsigned or signed (two's complement notation) packed integers; however, it does not set bits in the EFLAGS register to indicate overflow and/or a carry. To prevent

undetected overflow conditions, software must control the ranges of values operated on.

In 64-bit mode, using a REX prefix in the form of REX.R permits this instruction to access additional registers (XMM8-XMM15).

#### **Operation**

```
PADDB instruction with 64-bit operands:
   \mathsf{DEST[7:0]} \leftarrow \mathsf{DEST[7:0]} + \mathsf{SRC[7:0]};
   (* Repeat add operation for 2nd through 7th byte *)
   DEST[63:56] \leftarrow DEST[63:56] + SRC[63:56];
PADDB instruction with 128-bit operands:
   DEST[7:0] \leftarrow DEST[7:0] + SRC[7:0];
   (* Repeat add operation for 2nd through 14th byte *)
   DEST[127:120] \leftarrow DEST[111:120] + SRC[127:120];
PADDW instruction with 64-bit operands:
   DEST[15:0] \leftarrow DEST[15:0] + SRC[15:0];
   (* Repeat add operation for 2nd and 3th word *)
   DEST[63:48] \leftarrow DEST[63:48] + SRC[63:48];
PADDW instruction with 128-bit operands:
   DEST[15:0] \leftarrow DEST[15:0] + SRC[15:0];
   (* Repeat add operation for 2nd through 7th word *)
   DEST[127:112] \leftarrow DEST[127:112] + SRC[127:112];
PADDD instruction with 64-bit operands:
   DEST[31:0] \leftarrow DEST[31:0] + SRC[31:0];
   DEST[63:32] \leftarrow DEST[63:32] + SRC[63:32];
PADDD instruction with 128-bit operands:
   DEST[31:0] \leftarrow DEST[31:0] + SRC[31:0];
   (* Repeat add operation for 2nd and 3th doubleword *)
   DEST[127:96] \leftarrow DEST[127:96] + SRC[127:96];
Intel C/C++ Compiler Intrinsic Equivalents
PADDB
           __m64 _mm_add_pi8(__m64 m1, __m64 m2)
           __m128i _mm_add_epi8 (__m128ia,__m128ib )
PADDB
PADDW
           __m64 _mm_add_pi16(__m64 m1, __m64 m2)
           __m128i _mm_add_epi16 ( __m128i a, __m128i b)
PADDW
           __m64 _mm_add_pi32(__m64 m1, __m64 m2)
PADDD
```

\_\_m128i \_mm\_add\_epi32 ( \_\_m128i a, \_\_m128i b)

**PADDD** 

#### Flags Affected

None.

#### **Protected Mode Exceptions**

#GP(0) If a memory operand effective address is outside the CS, DS,

ES, FS, or GS segment limit.

(128-bit operations only) If a memory operand is not aligned on

a 16-byte boundary, regardless of segment.

#SS(0) If a memory operand effective address is outside the SS

segment limit.

#UD If CR0.EM[bit 2] = 1.

128-bit operations will generate #UD only if CR4.OSFXSR[bit 9] = 0. Execution of 128-bit instructions on a non-SSE2 capable processor (one that is MMX technology capable) will result in the

instruction operating on the mm registers, not #UD.

If the LOCK prefix is used.

#NM If CR0.TS[bit 3] = 1.

#MF (64-bit operations only) If there is a pending x87 FPU exception.

#PF(fault-code) If a page fault occurs.

#AC(0) (64-bit operations only) If alignment checking is enabled and an

unaligned memory reference is made while the current privilege

level is 3.

## **Real-Address Mode Exceptions**

#GP (128-bit operations only) If a memory operand is not aligned on

a 16-byte boundary, regardless of segment.

If any part of the operand lies outside of the effective address

space from 0 to FFFFH.

#UD If CR0.EM[bit 2] = 1.

128-bit operations will generate #UD only if CR4.OSFXSR[bit 9] = 0. Execution of 128-bit instructions on a non-SSE2 capable processor (one that is MMX technology capable) will result in the

instruction operating on the mm registers, not #UD.

If the LOCK prefix is used.

#NM If CR0.TS[bit 3] = 1.

#MF (64-bit operations only) If there is a pending x87 FPU exception.

## Virtual-8086 Mode Exceptions

Same exceptions as in real address mode.

#PF(fault-code) For a page fault.

#AC(0) (64-bit operations only) If alignment checking is enabled and an

unaligned memory reference is made.

### **Compatibility Mode Exceptions**

Same as for protected mode exceptions.

### **64-Bit Mode Exceptions**

#SS(0) If a memory address referencing the SS segment is in a non-

canonical form.

#GP(0) If the memory address is in a non-canonical form.

(128-bit operations only) If memory operand is not aligned on a

16-byte boundary, regardless of segment.

#UD If CR0.EM[bit 2] = 1.

(128-bit operations only) If CR4.OSFXSR[bit 9] = 0.

(128-bit operations only) If CPUID.01H:EDX.SSE2[bit 26] = 0.

If the LOCK prefix is used.

#NM If CR0.TS[bit 3] = 1.

#MF (64-bit operations only) If there is a pending x87 FPU exception.

#PF(fault-code) If a page fault occurs.

#AC(0) (64-bit operations only) If alignment checking is enabled and an

unaligned memory reference is made while the current privilege

level is 3.

PADDQ—Add Packed Q	uadword Integers	5
--------------------	------------------	---

Opcode	Instruction	64-Bit Mode	Compat/ Leg Mode	Description
0F D4 /r	PADDQ mm1, mm2/m64	Valid	Valid	Add quadword integer mm2/m64 to mm1.
66 OF D4 /r	PADDQ xmm1, xmm2/m128	Valid	Valid	Add packed quadword integers xmm2/m128 to xmm1.

#### **Description**

Adds the first operand (destination operand) to the second operand (source operand) and stores the result in the destination operand. The source operand can be a quadword integer stored in an MMX technology register or a 64-bit memory location, or it can be two packed quadword integers stored in an XMM register or an 128-bit memory location. The destination operand can be a quadword integer stored in an MMX technology register or two packed quadword integers stored in an XMM register. When packed quadword operands are used, a SIMD add is performed. When a quadword result is too large to be represented in 64 bits (overflow), the result is wrapped around and the low 64 bits are written to the destination element (that is, the carry is ignored).

Note that the PADDQ instruction can operate on either unsigned or signed (two's complement notation) integers; however, it does not set bits in the EFLAGS register to indicate overflow and/or a carry. To prevent undetected overflow conditions, software must control the ranges of the values operated on.

In 64-bit mode, using a REX prefix in the form of REX.R permits this instruction to access additional registers (XMM8-XMM15).

## Operation

```
PADDQ instruction with 64-Bit operands:

DEST[63:0] ← DEST[63:0] + SRC[63:0];

PADDQ instruction with 128-Bit operands:

DEST[63:0] ← DEST[63:0] + SRC[63:0];

DEST[127:64] ← DEST[127:64] + SRC[127:64];
```

## Intel C/C++ Compiler Intrinsic Equivalents

```
PADDQ __m64 _mm_add_si64 (__m64 a, __m64 b)
PADDQ __m128i _mm_add_epi64 ( __m128i a, __m128i b)
```

## **Flags Affected**

None.

#### **Numeric Exceptions**

None.

#### **Protected Mode Exceptions**

#GP(0) If a memory operand effective address is outside the CS, DS,

ES, FS, or GS segment limit.

(128-bit operations only) If a memory operand is not aligned on

a 16-byte boundary, regardless of segment.

#SS(0) If a memory operand effective address is outside the SS

segment limit.

#UD If CR0.EM[bit 2] = 1.

(128-bit operations only) If CR4.OSFXSR[bit 9] = 0.

If CPUID.01H:EDX.SSE2[bit 26] = 0.

If the LOCK prefix is used.

#NM If CR0.TS[bit 3] = 1.

#MF (64-bit operations only) If there is a pending x87 FPU exception.

#PF(fault-code) If a page fault occurs.

#AC(0) (64-bit operations only) If alignment checking is enabled and an

unaligned memory reference is made while the current privilege

level is 3.

#### **Real-Address Mode Exceptions**

#GP (128-bit operations only) If a memory operand is not aligned on

a 16-byte boundary, regardless of segment.

If any part of the operand lies outside of the effective address

space from 0 to FFFFH.

#UD If CR0.EM[bit 2] = 1.

(128-bit operations only) If CR4.OSFXSR[bit 9] = 0.

If CPUID.01H:EDX.SSE2[bit 26] = 0.

If the LOCK prefix is used.

#NM If CR0.TS[bit 3] = 1.

#MF (64-bit operations only) If there is a pending x87 FPU exception.

#### Virtual-8086 Mode Exceptions

Same exceptions as in real address mode.

#PF(fault-code) For a page fault.

#AC(0) (64-bit operations only) If alignment checking is enabled and an

unaligned memory reference is made.

#### **Compatibility Mode Exceptions**

Same as for protected mode exceptions.

#### **64-Bit Mode Exceptions**

#SS(0) If a memory address referencing the SS segment is in a non-

canonical form.

#GP(0) If the memory address is in a non-canonical form.

(128-bit operations only) If memory operand is not aligned on a

16-byte boundary, regardless of segment.

#UD If CR0.EM[bit 2] = 1.

(128-bit operations only) If CR4.OSFXSR[bit 9] = 0.

If CPUID.01H:EDX.SSE2[bit 26] = 0.

If the LOCK prefix is used.

#NM If CR0.TS[bit 3] = 1.

#MF (64-bit operations only) If there is a pending x87 FPU exception.

#PF(fault-code) If a page fault occurs.

#AC(0) (64-bit operations only) If alignment checking is enabled and an

unaligned memory reference is made while the current privilege

level is 3.

# PADDSB/PADDSW—Add Packed Signed Integers with Signed Saturation

Opcode	Instruction	64-Bit Mode	Compat/ Leg Mode	Description
OF EC /r	PADDSB mm, mm/m64	Valid	Valid	Add packed signed byte integers from <i>mm/m64</i> and <i>mm</i> and saturate the results.
66 0F EC /r	PADDSB xmm1, xmm2/m128	Valid	Valid	Add packed signed byte integers from <i>xmm2/m128</i> and <i>xmm1</i> saturate the results.
OF ED /r	PADDSW mm, mm/m64	Valid	Valid	Add packed signed word integers from <i>mm/m64</i> and <i>mm</i> and saturate the results.
66 0F ED /r	PADDSW xmm1, xmm2/m128	Valid	Valid	Add packed signed word integers from xmm2/m128 and xmm1 and saturate the results.

#### **Description**

Performs a SIMD add of the packed signed integers from the source operand (second operand) and the destination operand (first operand), and stores the packed integer results in the destination operand. See Figure 9-4 in the *Intel*® *64 and IA-32 Architectures Software Developer's Manual, Volume 1*, for an illustration of a SIMD operation. Overflow is handled with signed saturation, as described in the following paragraphs.

These instructions can operate on either 64-bit or 128-bit operands. When operating on 64-bit operands, the destination operand must be an MMX technology register and the source operand can be either an MMX technology register or a 64-bit memory location. When operating on 128-bit operands, the destination operand must be an XMM register and the source operand can be either an XMM register or a 128-bit memory location.

The PADDSB instruction adds packed signed byte integers. When an individual byte result is beyond the range of a signed byte integer (that is, greater than 7FH or less than 80H), the saturated value of 7FH or 80H, respectively, is written to the destination operand.

The PADDSW instruction adds packed signed word integers. When an individual word result is beyond the range of a signed word integer (that is, greater than 7FFFH or less than 8000H), the saturated value of 7FFFH or 8000H, respectively, is written to the destination operand.

In 64-bit mode, using a REX prefix in the form of REX.R permits this instruction to access additional registers (XMM8-XMM15).

#### **Operation**

```
PADDSB instruction with 64-bit operands:
   DEST[7:0] \leftarrow SaturateToSignedByte(DEST[7:0] + SRC (7:0]);
   (* Repeat add operation for 2nd through 7th bytes *)
   DEST[63:56] \leftarrow SaturateToSignedByte(DEST[63:56] + SRC[63:56]);
PADDSB instruction with 128-bit operands:
   DEST[7:0] ←SaturateToSignedByte (DEST[7:0] + SRC[7:0]);
   (* Repeat add operation for 2nd through 14th bytes *)
   DEST[127:120] \leftarrow SaturateToSignedByte (DEST[111:120] + SRC[127:120]);
PADDSW instruction with 64-bit operands
   DEST[15:0] \leftarrow SaturateToSignedWord(DEST[15:0] + SRC[15:0]);
   (* Repeat add operation for 2nd and 7th words *)
   DEST[63:48] \leftarrow SaturateToSignedWord(DEST[63:48] + SRC[63:48]);
PADDSW instruction with 128-bit operands
   DEST[15:0] \leftarrow SaturateToSignedWord (DEST[15:0] + SRC[15:0]);
   (* Repeat add operation for 2nd through 7th words *)
   DEST[127:112] \leftarrow SaturateToSignedWord (DEST[127:112] + SRC[127:112]);
```

#### Intel C/C++ Compiler Intrinsic Equivalents

```
PADDSB __m64 _mm_adds_pi8(__m64 m1, __m64 m2)
PADDSB __m128i _mm_adds_epi8 ( __m128i a, __m128i b)
PADDSW __m64 _mm_adds_pi16(__m64 m1, __m64 m2)
PADDSW __m128i _mm_adds_epi16 ( __m128i a, __m128i b)
```

#### **Flags Affected**

None.

#### **Protected Mode Exceptions**

Protected Mode Ex	ceptions
#GP(0)	If a memory operand effective address is outside the CS, DS, ES, FS, or GS segment limit.
	(128-bit operations only) If a memory operand is not aligned on a 16-byte boundary, regardless of segment.
#SS(0)	If a memory operand effective address is outside the SS segment limit.
#UD	If $CR0.EM[bit 2] = 1$ .
	128-bit operations will generate #UD only if CR4.OSFXSR[bit 9] = 0. Execution of 128-bit instructions on a non-SSE2 capable processor (one that is MMX technology capable) will result in the

instruction operating on the mm registers, not #UD.

If the LOCK prefix is used.

#NM If CR0.TS[bit 3] = 1.

#MF (64-bit operations only) If there is a pending x87 FPU exception.

#PF(fault-code) If a page fault occurs.

#AC(0) (64-bit operations only) If alignment checking is enabled and an

unaligned memory reference is made while the current privilege

level is 3.

#### **Real-Address Mode Exceptions**

#GP (128-bit operations only) If a memory operand is not aligned on

a 16-byte boundary, regardless of segment.

If any part of the operand lies outside of the effective address

space from 0 to FFFFH.

#UD If CR0.EM[bit 2] = 1.

128-bit operations will generate #UD only if CR4.OSFXSR[bit 9] = 0. Execution of 128-bit instructions on a non-SSE2 capable processor (one that is MMX technology capable) will result in the

instruction operating on the mm registers, not #UD.

If the LOCK prefix is used.

#NM If CR0.TS[bit 3] = 1.

#MF (64-bit operations only) If there is a pending x87 FPU exception.

#### Virtual-8086 Mode Exceptions

Same exceptions as in real address mode.

#PF(fault-code) For a page fault.

#AC(0) (64-bit operations only) If alignment checking is enabled and an

unaligned memory reference is made.

#### **Compatibility Mode Exceptions**

Same as for protected mode exceptions.

#### **64-Bit Mode Exceptions**

#SS(0) If a memory address referencing the SS segment is in a non-

canonical form.

#GP(0) If the memory address is in a non-canonical form.

(128-bit operations only) If memory operand is not aligned on a

16-byte boundary, regardless of segment.

#UD If CR0.EM[bit 2] = 1.

(128-bit operations only) If CR4.OSFXSR[bit 9] = 0.

(128-bit operations only) If CPUID.01H:EDX.SSE2[bit 26] = 0.

If the LOCK prefix is used.

#NM If CR0.TS[bit 3] = 1.

#MF (64-bit operations only) If there is a pending x87 FPU exception.

#PF(fault-code) If a page fault occurs.

#AC(0) (64-bit operations only) If alignment checking is enabled and an

unaligned memory reference is made while the current privilege

level is 3.

# PADDUSB/PADDUSW—Add Packed Unsigned Integers with Unsigned Saturation

Opcode	Instruction	64-Bit Mode	Compat/ Leg Mode	Description
OF DC /r	PADDUSB mm, mm/m64	Valid	Valid	Add packed unsigned byte integers from <i>mm/m64</i> and <i>mm</i> and saturate the results.
66 0F DC /r	PADDUSB xmm1, xmm2/m128	Valid	Valid	Add packed unsigned byte integers from xmm2/m128 and xmm1 saturate the results.
OF DD /r	PADDUSW mm, mm/m64	Valid	Valid	Add packed unsigned word integers from <i>mm/m64</i> and <i>mm</i> and saturate the results.
66 OF DD /r	PADDUSW xmm1, xmm2/m128	Valid	Valid	Add packed unsigned word integers from xmm2/m128 to xmm1 and saturate the results.

#### **Description**

Performs a SIMD add of the packed unsigned integers from the source operand (second operand) and the destination operand (first operand), and stores the packed integer results in the destination operand. See Figure 9-4 in the Intel® 64 and IA-32 Architectures Software Developer's Manual, Volume 1, for an illustration of a SIMD operation. Overflow is handled with unsigned saturation, as described in the following paragraphs.

These instructions can operate on either 64-bit or 128-bit operands. When operating on 64-bit operands, the destination operand must be an MMX technology register and the source operand can be either an MMX technology register or a 64-bit memory location. When operating on 128-bit operands, the destination operand must be an XMM register and the source operand can be either an XMM register or a 128-bit memory location.

The PADDUSB instruction adds packed unsigned byte integers. When an individual byte result is beyond the range of an unsigned byte integer (that is, greater than FFH), the saturated value of FFH is written to the destination operand.

The PADDUSW instruction adds packed unsigned word integers. When an individual word result is beyond the range of an unsigned word integer (that is, greater than FFFFH), the saturated value of FFFFH is written to the destination operand.

In 64-bit mode, using a REX prefix in the form of REX.R permits this instruction to access additional registers (XMM8-XMM15).

#### Operation

```
PADDUSB instruction with 64-bit operands:
   DEST[7:0] \leftarrow SaturateToUnsignedByte(DEST[7:0] + SRC (7:0]);
   (* Repeat add operation for 2nd through 7th bytes *)
   DEST[63:56] ← SaturateToUnsignedByte(DEST[63:56] + SRC[63:56]
PADDUSB instruction with 128-bit operands:
   DEST[7:0] \leftarrow SaturateToUnsignedByte (DEST[7:0] + SRC[7:0]);
   (* Repeat add operation for 2nd through 14th bytes *)
   DEST[127:120] \leftarrow SaturateToUnSignedByte (DEST[127:120] + SRC[127:120]);
PADDUSW instruction with 64-bit operands:
   DEST[15:0] ← SaturateToUnsignedWord(DEST[15:0] + SRC[15:0]);
   (* Repeat add operation for 2nd and 3rd words *)
   DEST[63:48] \leftarrow SaturateToUnsignedWord(DEST[63:48] + SRC[63:48]);
PADDUSW instruction with 128-bit operands:
   DEST[15:0] \leftarrow SaturateToUnsignedWord (DEST[15:0] + SRC[15:0]);
   (* Repeat add operation for 2nd through 7th words *)
   DEST[127:112] \leftarrow SaturateToUnSignedWord (DEST[127:112] + SRC[127:112]);
Intel C/C++ Compiler Intrinsic Equivalents
```

```
PADDUSB
               __m64 _mm_adds_pu8(__m64 m1, __m64 m2)
               __m64 _mm_adds_pu16(__m64 m1, __m64 m2)
PADDUSW
               m128i mm adds epu8 ( m128i a, m128i b)
PADDUSB
               __m128i _mm_adds_epu16 ( __m128i a, __m128i b)
PADDUSW
```

#### Flags Affected

None.

#### **Numeric Exceptions**

None.

#### **Protected Mode Exceptions**

#GP(0)If a memory operand effective address is outside the CS, DS,

ES, FS, or GS segment limit.

(128-bit operations only) If a memory operand is not aligned on

a 16-byte boundary, regardless of segment.

If a memory operand effective address is outside the SS #SS(0)

segment limit.

#UD If CR0.EM[bit 2] = 1.

128-bit operations will generate #UD only if CR4.OSFXSR[bit 9] = 0. Execution of 128-bit instructions on a non-SSE2 capable processor (one that is MMX technology capable) will result in the

instruction operating on the mm registers, not #UD.

If the LOCK prefix is used.

#NM If CR0.TS[bit 3] = 1.

#MF (64-bit operations only) If there is a pending x87 FPU exception.

#PF(fault-code) If a page fault occurs.

#AC(0) (64-bit operations only) If alignment checking is enabled and an

unaligned memory reference is made while the current privilege

level is 3.

#### **Real-Address Mode Exceptions**

#GP (128-bit operations only) If a memory operand is not aligned on

a 16-byte boundary, regardless of segment.

If any part of the operand lies outside of the effective address

space from 0 to FFFFH.

#UD If CR0.EM[bit 2] = 1.

128-bit operations will generate #UD only if CR4.OSFXSR[bit 9] = 0. Execution of 128-bit instructions on a non-SSE2 capable processor (one that is MMX technology capable) will result in the

instruction operating on the mm registers, not #UD.

If the LOCK prefix is used.

#NM If CR0.TS[bit 3] = 1.

#MF (64-bit operations only) If there is a pending x87 FPU exception.

#### Virtual-8086 Mode Exceptions

Same exceptions as in real address mode.

#PF(fault-code) For a page fault.

#AC(0) (64-bit operations only) If alignment checking is enabled and an

unaligned memory reference is made.

#### **Compatibility Mode Exceptions**

Same as for protected mode exceptions.

#### **64-Bit Mode Exceptions**

#SS(0) If a memory address referencing the SS segment is in a non-

canonical form.

#GP(0) If the memory address is in a non-canonical form.

(128-bit operations only) If memory operand is not aligned on a

16-byte boundary, regardless of segment.

#UD If CR0.EM[bit 2] = 1.

(128-bit operations only) If CR4.OSFXSR[bit 9] = 0.

(128-bit operations only) If CPUID.01H:EDX.SSE2[bit 26] = 0.

If the LOCK prefix is used.

#NM If CR0.TS[bit 3] = 1.

#MF (64-bit operations only) If there is a pending x87 FPU exception.

#PF(fault-code) If a page fault occurs.

#AC(0) (64-bit operations only) If alignment checking is enabled and an

unaligned memory reference is made while the current privilege

level is 3.

## PALIGNR — Packed Align Right

Opcode	Instruction	64-Bit Mode	Compat/ Leg Mode	Description
OF 3A OF	PALIGNR mm1, mm2/m64, imm8	Valid	Valid	Concatenate destination and source operands, extract byte-aligned result shifted to the right by constant value in imm8 into mm1.
66 OF 3A OF	PALIGNR xmm1, xmm2/m128, imm8	Valid	Valid	Concatenate destination and source operands, extract byte-aligned result shifted to the right by constant value in imm8 into xmm1

#### **Description**

PALIGNR concatenates the destination operand (the first operand) and the source operand (the second operand) into an intermediate composite, shifts the composite at byte granularity to the right by a constant immediate, and extracts the right-aligned result into the destination. The first and the second operands can be an MMX or an XMM register. The immediate value is considered unsigned. Immediate shift counts larger than the 2L (i.e. 32 for 128-bit operands, or 16 for 64-bit operands) produce a zero result. Both operands can be MMX register or XMM registers. When the source operand is a 128-bit memory operand, the operand must be aligned on a 16-byte boundary or a general-protection exception (#GP) will be generated.

In 64-bit mode, use the REX prefix to access additional registers.

#### **Operation**

PALIGNR with 64-bit operands:

```
temp1[127:0] = CONCATENATE(DEST,SRC)>>(imm8*8)
DEST[63:0] = temp1[63:0]
```

PALIGNR with 128-bit operands:

```
temp1[255:0] = CONCATENATE(DEST,SRC)>>(imm8*8)
DEST[127:0] = temp1[127:0]
```

## Intel C/C++ Compiler Intrinsic Equivalents

```
PALIGNR __m64 _mm_alignr_pi8 (__m64 a, __m64 b, int n)
PALIGNR __m128i _mm_alignr_epi8 (__m128i a, __m128i b, int n)
```

#### **Protected Mode Exceptions**

#GP(0) If a memory operand effective address is outside the CS, DS,

ES, FS or GS segments.

(128-bit operations only) If not aligned on 16-byte boundary,

regardless of segment.

#SS(0) If a memory operand effective address is outside the SS

segment limit.

#PF(fault-code) If a page fault occurs.

#UD If CR0.EM = 1.

(128-bit operations only) If CR4.OSFXSR(bit 9) = 0.

If CPUID.SSSE3(ECX bit 9) = 0.

If the LOCK prefix is used.

#NM If TS bit in CR0 is set.

#MF (64-bit operations only) If there is a pending x87 FPU exception. #AC(0) (64-bit operations only) If alignment checking is enabled and

(0) (64-bit operations only) If alignment checking is enabled and unaligned memory reference is made while the current privilege

level is 3.

### **Real Mode Exceptions**

#GP(0) If any part of the operand lies outside of the effective address

space from 0 to 0FFFFH.

(128-bit operations only) If not aligned on 16-byte boundary,

regardless of segment.

#UD If CR0.EM = 1.

(128-bit operations only) If CR4.OSFXSR(bit 9) = 0.

If CPUID.SSSE3(ECX bit 9) = 0.

If the LOCK prefix is used.

#NM If TS bit in CR0 is set.

#MF (64-bit operations only) If there is a pending x87 FPU exception.

#### **Virtual 8086 Mode Exceptions**

Same exceptions as in real address mode.

#PF(fault-code) If a page fault occurs.

#AC(0) (64-bit operations only) If alignment checking is enabled and

unaligned memory reference is made.

#### **Compatibility Mode Exceptions**

Same as for protected mode exceptions.

## **64-Bit Mode Exceptions**

#SS(0) If a memory address referencing the SS segment is in a non-

canonical form.

#GP(0) If the memory address is in a non-canonical form.

(128-bit operations only) If memory operand is not aligned on a

16-byte boundary, regardless of segment.

#UD If CR0.EM[bit 2] = 1.

(128-bit operations only) If CR4.OSFXSR[bit 9] = 0.

If CPUID.01H:ECX.SSSE3[bit 9] = 0.

If the LOCK prefix is used.

#NM If CR0.TS[bit 3] = 1.

#MF (64-bit operations only) If there is a pending x87 FPU exception.

#PF(fault-code) If a page fault occurs.

#AC(0) (64-bit operations only) If alignment checking is enabled and an

unaligned memory reference is made while the current privilege

level is 3.

## PAND—Logical AND

Opcode	Instruction	64-Bit Mode	Compat/ Leg Mode	Description
OF DB /r	PAND mm, mm/m64	Valid	Valid	Bitwise AND <i>mm/m64</i> and <i>mm</i> .
66 OF DB /r	PAND xmm1, xmm2/m128	Valid	Valid	Bitwise AND of xmm2/m128 and xmm1.

#### **Description**

Performs a bitwise logical AND operation on the source operand (second operand) and the destination operand (first operand) and stores the result in the destination operand. The source operand can be an MMX technology register or a 64-bit memory location or it can be an XMM register or a 128-bit memory location. The destination operand can be an MMX technology register or an XMM register. Each bit of the result is set to 1 if the corresponding bits of the first and second operands are 1; otherwise, it is set to 0.

In 64-bit mode, using a REX prefix in the form of REX.R permits this instruction to access additional registers (XMM8-XMM15).

### **Operation**

 $DEST \leftarrow (DEST AND SRC);$ 

## Intel C/C++ Compiler Intrinsic Equivalent

PAND \_\_m64 \_mm\_and\_si64 (\_\_m64 m1, \_\_m64 m2)
PAND \_\_m128i \_mm\_and\_si128 ( \_\_m128i a, \_\_m128i b)

#### **Flags Affected**

None.

### **Numeric Exceptions**

None.

### **Protected Mode Exceptions**

#GP(0) If a memory

If a memory operand effective address is outside the CS, DS, ES, FS, or GS segment limit.

(128-bit operations only) If a memory operand is not aligned on a 16-byte boundary, regardless of segment.

#SS(0) If a memory operand effective address is outside the SS

segment limit.

#UD If CR0.EM[bit 2] = 1.

128-bit operations will generate #UD only if CR4.OSFXSR[bit 9] = 0. Execution of 128-bit instructions on a non-SSE2 capable processor (one that is MMX technology capable) will result in the

instruction operating on the mm registers, not #UD.

If the LOCK prefix is used.

#NM If CR0.TS[bit 3] = 1.

#MF (64-bit operations only) If there is a pending x87 FPU exception.

#PF(fault-code) If a page fault occurs.

#AC(0) (64-bit operations only) If alignment checking is enabled and an

unaligned memory reference is made while the current privilege

level is 3.

#### **Real-Address Mode Exceptions**

#GP (128-bit operations only) If a memory operand is not aligned on

a 16-byte boundary, regardless of segment.

If any part of the operand lies outside of the effective address

space from 0 to FFFFH.

#UD If CR0.EM[bit 2] = 1.

128-bit operations will generate #UD only if CR4.OSFXSR[bit 9] = 0. Execution of 128-bit instructions on a non-SSE2 capable processor (one that is MMX technology capable) will result in the

instruction operating on the mm registers, not #UD.

If the LOCK prefix is used.

#NM If CR0.TS[bit 3] = 1.

#MF (64-bit operations only) If there is a pending x87 FPU exception.

#### Virtual-8086 Mode Exceptions

Same exceptions as in real address mode.

#PF(fault-code) For a page fault.

#AC(0) (64-bit operations only) If alignment checking is enabled and an

unaligned memory reference is made.

## **Compatibility Mode Exceptions**

Same as for protected mode exceptions.

#### **64-Bit Mode Exceptions**

#SS(0) If a memory address referencing the SS segment is in a non-

canonical form.

#GP(0) If the memory address is in a non-canonical form.

(128-bit operations only) If memory operand is not aligned on a

16-byte boundary, regardless of segment.

#UD If CR0.EM[bit 2] = 1.

(128-bit operations only) If CR4.OSFXSR[bit 9] = 0.

(128-bit operations only) If CPUID.01H:EDX.SSE2[bit 26] = 0.

If the LOCK prefix is used.

#NM If CR0.TS[bit 3] = 1.

#MF (64-bit operations only) If there is a pending x87 FPU exception.

#PF(fault-code) If a page fault occurs.

#AC(0) (64-bit operations only) If alignment checking is enabled and an

unaligned memory reference is made while the current privilege

level is 3.

## PANDN—Logical AND NOT

Opcode	Instruction	64-Bit Mode	Compat/ Leg Mode	Description
OF DF /r	PANDN mm, mm/m64	Valid	Valid	Bitwise AND NOT of mm/m64 and mm.
66 OF DF /r	PANDN xmm1, xmm2/m128	Valid	Valid	Bitwise AND NOT of xmm2/m128 and xmm1.

#### **Description**

Performs a bitwise logical NOT of the destination operand (first operand), then performs a bitwise logical AND of the source operand (second operand) and the inverted destination operand. The result is stored in the destination operand. The source operand can be an MMX technology register or a 64-bit memory location or it can be an XMM register or a 128-bit memory location. The destination operand can be an MMX technology register or an XMM register. Each bit of the result is set to 1 if the corresponding bit in the first operand is 0 and the corresponding bit in the second operand is 1; otherwise, it is set to 0.

In 64-bit mode, using a REX prefix in the form of REX.R permits this instruction to access additional registers (XMM8-XMM15).

### **Operation**

DEST  $\leftarrow$  ((NOT DEST) AND SRC);

### Intel C/C++ Compiler Intrinsic Equivalent

PANDN \_\_m64 \_mm\_andnot\_si64 (\_\_m64 m1, \_\_m64 m2)
PANDN \_m128i \_mm\_andnot\_si128 ( \_\_m128i a, \_\_m128i b)

#### **Flags Affected**

None.

### **Numeric Exceptions**

None.

## **Protected Mode Exceptions**

#GP(0) If a memory operand effective address is outside the CS, DS,

ES, FS, or GS segment limit.

(128-bit operations only) If a memory operand is not aligned on a 16-byte boundary, regardless of segment.

#SS(0) If a memory operand effective address is outside the SS

segment limit.

#UD If CR0.EM[bit 2] = 1.

128-bit operations will generate #UD only if CR4.OSFXSR[bit 9] = 0. Execution of 128-bit instructions on a non-SSE2 capable processor (one that is MMX technology capable) will result in the

instruction operating on the mm registers, not #UD.

If the LOCK prefix is used.

#NM If CR0.TS[bit 3] = 1.

#MF (64-bit operations only) If there is a pending x87 FPU exception.

#PF(fault-code) If a page fault occurs.

#AC(0) (64-bit operations only) If alignment checking is enabled and an

unaligned memory reference is made while the current privilege

level is 3.

#### **Real-Address Mode Exceptions**

#GP (128-bit operations only) If a memory operand is not aligned on

a 16-byte boundary, regardless of segment.

If any part of the operand lies outside of the effective address

space from 0 to FFFFH.

#UD If CR0.EM[bit 2] = 1.

128-bit operations will generate #UD only if CR4.OSFXSR[bit 9] = 0. Execution of 128-bit instructions on a non-SSE2 capable processor (one that is MMX technology capable) will result in the

instruction operating on the mm registers, not #UD.

If the LOCK prefix is used.

#NM If CR0.TS[bit 3] = 1.

#MF (64-bit operations only) If there is a pending x87 FPU exception.

#### Virtual-8086 Mode Exceptions

Same exceptions as in real address mode.

#PF(fault-code) For a page fault.

#AC(0) (64-bit operations only) If alignment checking is enabled and an

unaligned memory reference is made.

## **Compatibility Mode Exceptions**

Same as for protected mode exceptions.

### **64-Bit Mode Exceptions**

#SS(0) If a memory address referencing the SS segment is in a non-

canonical form.

#### INSTRUCTION SET REFERENCE, N-Z

#GP(0) If the memory address is in a non-canonical form.

(128-bit operations only) If memory operand is not aligned on a

16-byte boundary, regardless of segment.

#UD If CR0.EM[bit 2] = 1.

(128-bit operations only) If CR4.OSFXSR[bit 9] = 0.

(128-bit operations only) If CPUID.01H:EDX.SSE2[bit 26] = 0.

If the LOCK prefix is used.

#NM If CR0.TS[bit 3] = 1.

#MF (64-bit operations only) If there is a pending x87 FPU exception.

#PF(fault-code) If a page fault occurs.

#AC(0) (64-bit operations only) If alignment checking is enabled and an

unaligned memory reference is made while the current privilege

level is 3.

## PAUSE—Spin Loop Hint

Opcode	Instruction	64-Bit Mode	Compat/ Leg Mode	Description
F3 90	PAUSE	Valid	Valid	Gives hint to processor that improves performance of spin-wait loops.

#### **Description**

Improves the performance of spin-wait loops. When executing a "spin-wait loop," a Pentium 4 or Intel Xeon processor suffers a severe performance penalty when exiting the loop because it detects a possible memory order violation. The PAUSE instruction provides a hint to the processor that the code sequence is a spin-wait loop. The processor uses this hint to avoid the memory order violation in most situations, which greatly improves processor performance. For this reason, it is recommended that a PAUSE instruction be placed in all spin-wait loops.

An additional function of the PAUSE instruction is to reduce the power consumed by a Pentium 4 processor while executing a spin loop. The Pentium 4 processor can execute a spin-wait loop extremely quickly, causing the processor to consume a lot of power while it waits for the resource it is spinning on to become available. Inserting a pause instruction in a spin-wait loop greatly reduces the processor's power consumption.

This instruction was introduced in the Pentium 4 processors, but is backward compatible with all IA-32 processors. In earlier IA-32 processors, the PAUSE instruction operates like a NOP instruction. The Pentium 4 and Intel Xeon processors implement the PAUSE instruction as a pre-defined delay. The delay is finite and can be zero for some processors. This instruction does not change the architectural state of the processor (that is, it performs essentially a delaying no-op operation).

This instruction's operation is the same in non-64-bit modes and 64-bit mode.

#### Operation

Execute\_Next\_Instruction(DELAY);

### **Numeric Exceptions**

None.

## **Exceptions (All Operating Modes)**

#UD If the LOCK prefix is used.

PAVGB/PAVGW	-Average	<b>Packed</b>	Integers

Opcode	Instruction	64-Bit Mode	Compat/ Leg Mode	Description
0F E0 /r	PAVGB mm1, mm2/m64	Valid	Valid	Average packed unsigned byte integers from mm2/m64 and mm1 with rounding.
66 OF EO, /r	PAVGB xmm1, xmm2/m128	Valid	Valid	Average packed unsigned byte integers from xmm2/m128 and xmm1 with rounding.
0F E3 /r	PAVGW mm1, mm2/m64	Valid	Valid	Average packed unsigned word integers from mm2/m64 and mm1 with rounding.
66 OF E3 /r	PAVGW xmm1, xmm2/m128	Valid	Valid	Average packed unsigned word integers from xmm2/m128 and xmm1 with rounding.

#### **Description**

Performs a SIMD average of the packed unsigned integers from the source operand (second operand) and the destination operand (first operand), and stores the results in the destination operand. For each corresponding pair of data elements in the first and second operands, the elements are added together, a 1 is added to the temporary sum, and that result is shifted right one bit position. The source operand can be an MMX technology register or a 64-bit memory location or it can be an XMM register or a 128-bit memory location. The destination operand can be an MMX technology register or an XMM register.

The PAVGB instruction operates on packed unsigned bytes and the PAVGW instruction operates on packed unsigned words.

In 64-bit mode, using a REX prefix in the form of REX.R permits this instruction to access additional registers (XMM8-XMM15).

## Operation

```
PAVGB instruction with 64-bit operands:
```

```
DEST[7:0] \leftarrow (SRC[7:0] + DEST[7:0] + 1) >> 1; (* Temp sum before shifting is 9 bits *) (* Repeat operation performed for bytes 2 through 6 *) DEST[63:56] \leftarrow (SRC[63:56] + DEST[63:56] + 1) >> 1;
```

#### PAVGW instruction with 64-bit operands:

```
DEST[15:0] \leftarrow (SRC[15:0] + DEST[15:0] + 1) >> 1; (* Temp sum before shifting is 17 bits *) (* Repeat operation performed for words 2 and 3 *) DEST[63:48] \leftarrow (SRC[63:48] + DEST[63:48] + 1) >> 1;
```

#### PAVGB instruction with 128-bit operands:

```
DEST[7:0] \leftarrow (SRC[7:0] + DEST[7:0] + 1) >> 1; (* Temp sum before shifting is 9 bits *) (* Repeat operation performed for bytes 2 through 14 *) DEST[127:120] \leftarrow (SRC[127:120] + DEST[127:120] + 1) >> 1;
```

#### PAVGW instruction with 128-bit operands:

```
DEST[15:0] \leftarrow (SRC[15:0] + DEST[15:0] + 1) >> 1; (* Temp sum before shifting is 17 bits *) (* Repeat operation performed for words 2 through 6 *) DEST[127:112] \leftarrow (SRC[127:112] + DEST[127:112] + 1) >> 1;
```

#### Intel C/C++ Compiler Intrinsic Equivalent

```
PAVGB __m64 _mm_avg_pu8 (__m64 a, __m64 b)

PAVGW __m64 _mm_avg_pu16 (__m64 a, __m64 b)

PAVGB __m128i _mm_avg_epu8 ( __m128i a, __m128i b)

PAVGW __m128i _mm_avg_epu16 ( __m128i a, __m128i b)
```

#### Flags Affected

None.

#### **Numeric Exceptions**

None.

### **Protected Mode Exceptions**

#GP(0)	If a memor	v operand	offoctivo	addroce ic	· outcido tho	$\sim$	DC
# GF(U)	II a IIICIIIOI	y uperanu	CHECHIVE	auul coo io	outside tile	$\sim$	DJ,

ES, FS, or GS segment limit.

(128-bit operations only) If a memory operand is not aligned on

a 16-byte boundary, regardless of segment.

#SS(0) If a memory operand effective address is outside the SS

segment limit.

#UD If CR0.EM[bit 2] = 1.

(128-bit operations only) If CR4.OSFXSR[bit 9] = 0. Execution of 128-bit instructions on a non-SSE2 capable processor (one that is MMX technology capable) will result in the instruction

operating on the mm registers, not #UD.

If the LOCK prefix is used.

#NM If CR0.TS[bit 3] = 1.

#MF (64-bit operations only) If there is a pending x87 FPU exception.

#PF(fault-code) If a page fault occurs.

#AC(0) (64-bit operations only) If alignment checking is enabled and an

unaligned memory reference is made while the current privilege

level is 3.

#### Real-Address Mode Exceptions

#GP (128-bit operations only) If a memory operand is not aligned on

a 16-byte boundary, regardless of segment.

If any part of the operand lies outside of the effective address

space from 0 to FFFFH.

#UD If CR0.EM[bit 2] = 1.

(128-bit operations only) If CR4.OSFXSR[bit 9] = 0. Execution of 128-bit instructions on a non-SSE2 capable processor (one that is MMX technology capable) will result in the instruction

operating on the mm registers, not #UD.

If the LOCK prefix is used.

#NM If CR0.TS[bit 3] = 1.

#MF (64-bit operations only) If there is a pending x87 FPU exception.

#### Virtual-8086 Mode Exceptions

Same exceptions as in real address mode.

#PF(fault-code) For a page fault.

#AC(0) (64-bit operations only) If alignment checking is enabled and an

unaligned memory reference is made.

#### **Compatibility Mode Exceptions**

Same as for protected mode exceptions.

#### **64-Bit Mode Exceptions**

#SS(0) If a memory address referencing the SS segment is in a non-

canonical form.

#GP(0) If the memory address is in a non-canonical form.

(128-bit operations only) If memory operand is not aligned on a

16-byte boundary, regardless of segment.

#UD If CR0.EM[bit 2] = 1.

(128-bit operations only) If CR4.OSFXSR[bit 9] = 0.

(128-bit operations only) If CPUID.01H:EDX.SSE2[bit 26] = 0.

If the LOCK prefix is used.

#NM If CR0.TS[bit 3] = 1.

#MF (64-bit operations only) If there is a pending x87 FPU exception.

#PF(fault-code) If a page fault occurs.

#AC(0)

(64-bit operations only) If alignment checking is enabled and an unaligned memory reference is made while the current privilege level is 3.

## PBLENDVB — Variable Blend Packed Bytes

Opcode	Instruction		Compat/ Leg Mode	Description
66 OF 38 10 /r	PBLENDVB xmm1, xmm2/m128, <xmm0></xmm0>	Valid	Valid	Select byte values from xmm1 and xmm2/m128 from mask specified in the high bit of each byte in XMM0 and store the values into xmm1.

#### **Description**

Conditionally copies byte elements from the source operand (second operand) to the destination operand (first operand) depending on mask bits defined in the implicit third register argument, XMM0. The mask bits are the most significant bit in each byte element of the XMM0 register.

If a mask bit is "1", then the corresponding byte element in the source operand is copied to the destination, else the byte element in the destination operand is left unchanged.

The register assignment of the implicit third operand is defined to be the architectural register XMM0.

#### **Operation**

```
MASK \leftarrow XMM0;
IF (MASK[7] == 1)
    THEN DEST[7:0] \leftarrow SRC[7:0];
    ELSE DEST[7:0] \leftarrow DEST[7:0]; FI;
IF (MASK[15] == 1)
    THEN DEST[15:8] \leftarrow SRC[15:8];
    ELSE DEST[15:8] \leftarrow DEST[15:8]; FI;
IF (MASK[23] == 1)
    THEN DEST[23:16] \leftarrow SRC[23:16]
    ELSE DEST[23:16] \leftarrow DEST[23:16]; FI;
IF (MASK[31] == 1)
    THEN DEST[31:24] \leftarrow SRC[31:24]
    ELSE DEST[31:24] \leftarrow DEST[31:24]; FI;
IF (MASK[39] == 1)
    THEN DEST[39:32] \leftarrow SRC[39:32]
    ELSE DEST[39:32] \leftarrow DEST[39:32]; FI;
IF (MASK[47] == 1)
    THEN DEST[47:40] \leftarrow SRC[47:40]
    ELSE DEST[47:40] \leftarrow DEST[47:40]; FI;
```

```
IF (MASK[55] == 1)
   THEN DEST[55:48] \leftarrow SRC[55:48]
   ELSE DEST[55:48] \leftarrow DEST[55:48]; FI;
IF (MASK[63] == 1)
   THEN DEST[63:56] \leftarrow SRC[63:56]
   ELSE DEST[63:56] \leftarrow DEST[63:56]; FI;
IF (MASK[71] == 1)
   THEN DEST[71:64] \leftarrow SRC[71:64]
   ELSE DEST[71:64] \leftarrow DEST[71:64]; FI;
IF (MASK[79] == 1)
   THEN DEST[79:72] \leftarrow SRC[79:72]
   ELSE DEST[79:72] \leftarrow DEST[79:72]; FI;
IF (MASK[87] == 1)
   THEN DEST[87:80] \leftarrow SRC[87:80]
   ELSE DEST[87:80] \leftarrow DEST[87:80]; FI;
IF (MASK[95] == 1)
   THEN DEST[95:88] \leftarrow SRC[95:88]
   ELSE DEST[95:88] \leftarrow DEST[95:88]; FI;
IF (MASK[103] == 1)
   THEN DEST[103:96] \leftarrow SRC[103:96]
   ELSE DEST[103:96] ← DEST[103:96]; FI;
IF (MASK[111] == 1)
   THEN DEST[111:104] \leftarrow SRC[111:104]
   ELSE DEST[111:104] \leftarrow DEST[111:104]; FI;
IF (MASK[119] == 1)
   THEN DEST[119:112] \leftarrow SRC[119:112]
   ELSE DEST[119:112] \leftarrow DEST[119:112]; FI;
IF (MASK[127] == 1)
   THEN DEST[127:120] \leftarrow SRC[127:120]
   ELSE DEST[127:120] ← DEST[127:120]); FI;
```

#### Intel C/C++ Compiler Intrinsic Equivalent

PBLENDVB \_\_m128i \_mm\_blendv\_epi8 (\_\_m128i v1, \_\_m128i v2, \_\_m128i mask);

#### Flags Affected

None

#### **Protected Mode Exceptions**

#GP(0) For an illegal memory operand effective address in the CS, DS, ES, FS, or GS segments.

If a memory operand is not aligned on a 16-byte boundary,

regardless of segment.

#SS(0) For an illegal address in the SS segment.

#PF(fault-code) For a page fault. #NM If CR0.TS[bit 3] = 1. #UD If CR0.EM[bit 2] = 1.

If CR4.OSFXSR[bit 9] = 0.

If CPUID.01H:ECX.SSE4 1[bit 19] = 0.

If LOCK prefix is used.

Either the prefix REP (F3h) or REPN (F2H) is used.

#### **Real Mode Exceptions**

#GP(0) if any part of the operand lies outside of the effective address

space from 0 to 0FFFFH.

If not aligned on 16-byte boundary, regardless of segment

#NM If CR0.TS[bit 3] = 1. #UD If CR0.EM[bit 2] = 1.

If CR4.OSFXSR[bit 9] = 0.

If  $CPUID.01H:ECX.SSE4_1[bit 19] = 0$ .

If LOCK prefix is used.

Either the prefix REP (F3h) or REPN (F2H) is used.

#### Virtual 8086 Mode Exceptions

Same exceptions as in Real Address Mode.

#PF(fault-code) For a page fault.

## **Compatibility Mode Exceptions**

Same exceptions as in Protected Mode.

#### **64-Bit Mode Exceptions**

#GP(0) If the memory address is in a non-canonical form.

If a memory operand is not aligned on a 16-byte boundary,

regardless of segment.

#SS(0) If a memory address referencing the SS segment is in a non-

canonical form.

#PF(fault-code) For a page fault.

#NM If TS in CR0 is set.

#UD If EM in CR0 is set.

If OSFXSR in CR4 is 0.

If CPUID feature flag ECX.SSE4\_1 is 0.

If LOCK prefix is used.

Either the prefix REP (F3h) or REPN (F2H) is used.

#### PBLENDW — Blend Packed Words

Opcode	Instruction	64-bit Mode	Compat/ Leg Mode	Description
66 OF 3A OE /r ib	PBLENDW xmm1, xmm2/m128, imm8	Valid	Valid	Select words from xmm1 and xmm2/m128 from mask specified in imm8 and store the values into xmm1.

# **Description**

Conditionally copies word elements from the source operand (second operand) to the destination operand (first operand) depending on the immediate byte (third operand). Each bit of Imm8 correspond to a word element.

If a bit is "1", then the corresponding word element in the source operand is copied to the destination, else the word element in the destination operand is left unchanged.

# **Operation**

```
IF (imm8[0] == 1)
   THEN DEST[15:0] \leftarrow SRC[15:0];
   ELSE DEST[15:0] \leftarrow DEST[15:0]; FI;
IF (imm8[1] == 1)
   THEN DEST[31:16] \leftarrow SRC[31:16];
   ELSE DEST[31:16] \leftarrow DEST[31:16]); FI;
IF (imm8[2] == 1)
   THEN DEST[47:32] \leftarrow SRC[47:32];
   ELSE DEST[47:32] \leftarrow DEST[47:32]; FI;
IF (imm8[3] == 1)
   THEN DEST[63:48] \leftarrow SRC[63:48];
   ELSE DEST[63:48] \leftarrow DEST[63:48]; FI;
IF (imm8[4] == 1)
   THEN DEST[79:64] \leftarrow SRC[79:64];
   ELSE DEST[79:64] \leftarrow DEST[79:64]; FI;
IF (imm8[5] == 1)
   THEN DEST[95:80] \leftarrow SRC[95:80];
   ELSE DEST[95:80] \leftarrow DEST[95:80]; FI;
IF (imm8[6] == 1)
   THEN DEST[111:96] \leftarrow SRC[111:96];
   ELSE DEST[111:96] \leftarrow DEST[111:96]; FI;
IF (imm8[7] == 1)
```

THEN DEST[127:112]  $\leftarrow$  SRC[127:112]; ELSE DEST[127:112]  $\leftarrow$  DEST[127:112]; FI;

## Intel C/C++ Compiler Intrinsic Equivalent

PBLENDW \_\_m128i \_mm\_blend\_epi16 (\_\_m128i v1, \_\_m128i v2, const int mask);

#### Flags Affected

None

## **Protected Mode Exceptions**

#GP(0) For an illegal memory operand effective address in the CS, DS,

ES, FS, or GS segments.

If a memory operand is not aligned on a 16-byte boundary,

regardless of segment.

#SS(0) For an illegal address in the SS segment.

#PF(fault-code) For a page fault. #NM If CR0.TS[bit 3] = 1. #UD If CR0.EM[bit 2] = 1.

If CR4.OSFXSR[bit 9] = 0.

If  $CPUID.01H:ECX.SSE4_1[bit 19] = 0$ .

If LOCK prefix is used.

Either the prefix REP (F3h) or REPN (F2H) is used.

# **Real Mode Exceptions**

#GP(0) if any part of the operand lies outside of the effective address

space from 0 to 0FFFFH.

If a memory operand is not aligned on a 16-byte boundary,

regardless of segment.

#NM If CR0.TS[bit 3] = 1. #UD If CR0.EM[bit 2] = 1.

If CR4.OSFXSR[bit 9] = 0.

If CPUID.01H: ECX.SSE4 1[bit 19] = 0.

If LOCK prefix is used.

Either the prefix REP (F3h) or REPN (F2H) is used.

#### Virtual 8086 Mode Exceptions

Same exceptions as in Real Address Mode.

#PF(fault-code) For a page fault.

# **Compatibility Mode Exceptions**

Same exceptions as in Protected Mode.

# **64-Bit Mode Exceptions**

#GP(0) If the memory address is in a non-canonical form.

If a memory operand is not aligned on a 16-byte boundary,

regardless of segment.

#SS(0) If a memory address referencing the SS segment is in a non-

canonical form.

#PF(fault-code) For a page fault.

#NM If TS in CR0 is set.

#UD If EM in CR0 is set.

If OSFXSR in CR4 is 0.

If CPUID feature flag ECX.SSE4\_1 is 0.

If LOCK prefix is used.

Either the prefix REP (F3h) or REPN (F2H) is used.

# PCMPEQB/PCMPEQW/PCMPEQD— Compare Packed Data for Equal

Opcode	Instruction	64-Bit Mode	Compat/ Leg Mode	Description
0F 74 /r	PCMPEQB mm, mm/m64	Valid	Valid	Compare packed bytes in mm/m64 and mm for equality.
66 0F 74 /r	PCMPEQB xmm1, xmm2/m128	Valid	Valid	Compare packed bytes in xmm2/m128 and xmm1 for equality.
0F 75 /r	PCMPEQW mm, mm/m64	Valid	Valid	Compare packed words in mm/m64 and mm for equality.
66 0F 75 /r	PCMPEQW xmm1, xmm2/m128	Valid	Valid	Compare packed words in xmm2/m128 and xmm1 for equality.
0F 76 /r	PCMPEQD mm, mm/m64	Valid	Valid	Compare packed doublewords in mm/m64 and mm for equality.
66 0F 76 /r	PCMPEQD xmm1, xmm2/m128	Valid	Valid	Compare packed doublewords in xmm2/m128 and xmm1 for equality.

# **Description**

Performs a SIMD compare for equality of the packed bytes, words, or doublewords in the destination operand (first operand) and the source operand (second operand). If a pair of data elements is equal, the corresponding data element in the destination operand is set to all 1s; otherwise, it is set to all 0s. The source operand can be an MMX technology register or a 64-bit memory location, or it can be an XMM register or a 128-bit memory location. The destination operand can be an MMX technology register or an XMM register.

The PCMPEQB instruction compares the corresponding bytes in the destination and source operands; the PCMPEQW instruction compares the corresponding words in the destination and source operands; and the PCMPEQD instruction compares the corresponding doublewords in the destination and source operands.

In 64-bit mode, using a REX prefix in the form of REX.R permits this instruction to access additional registers (XMM8-XMM15).

# Operation

```
PCMPEQB instruction with 64-bit operands:

IF DEST[7:0] = SRC[7:0]

THEN DEST[7:0) ← FFH;

ELSE DEST[7:0] ← 0; FI;

(* Continue comparison of 2nd through 7th bytes in DEST and SRC *)
```

```
IF DEST[63:56] = SRC[63:56]
        THEN DEST[63:56] \leftarrow FFH;
        ELSE DEST[63:56] \leftarrow 0; FI;
PCMPEQB instruction with 128-bit operands:
   IF DEST[7:0] = SRC[7:0]
        THEN DEST[7:0) \leftarrow FFH;
        ELSE DEST[7:0] \leftarrow 0; FI;
   (* Continue comparison of 2nd through 15th bytes in DEST and SRC *)
   IF DEST[127:120] = SRC[127:120]
        THEN DEST[127:120] \leftarrow FFH;
        ELSE DEST[127:120] \leftarrow 0; FI;
PCMPEQW instruction with 64-bit operands:
   IF DEST[15:0] = SRC[15:0]
        THEN DEST[15:0] \leftarrow FFFFH;
        ELSE DEST[15:0] \leftarrow 0; FI;
   (* Continue comparison of 2nd and 3rd words in DEST and SRC *)
   IF DEST[63:48] = SRC[63:48]
        THEN DEST[63:48] \leftarrow FFFFH;
        ELSE DEST[63:48] \leftarrow 0; FI;
PCMPEQW instruction with 128-bit operands:
   IF DEST[15:0] = SRC[15:0]
        THEN DEST[15:0] \leftarrow FFFFH;
        ELSE DEST[15:0] \leftarrow 0; FI;
   (* Continue comparison of 2nd through 7th words in DEST and SRC *)
   IF DEST[127:112] = SRC[127:112]
        THEN DEST[127:112] \leftarrow FFFFH:
        ELSE DEST[127:112] \leftarrow 0; FI;
PCMPEQD instruction with 64-bit operands:
   IF DEST[31:0] = SRC[31:0]
        THEN DEST[31:0] \leftarrow FFFFFFFH;
        ELSE DEST[31:0] \leftarrow 0; FI;
   IF DEST[63:32] = SRC[63:32]
        THEN DEST[63:32] \leftarrow FFFFFFFH;
        ELSE DEST[63:32] \leftarrow 0; FI;
PCMPEQD instruction with 128-bit operands:
   IF DEST[31:0] = SRC[31:0]
        THEN DEST[31:0] \leftarrow FFFFFFFH;
        ELSE DEST[31:0] \leftarrow 0; FI;
   (* Continue comparison of 2nd and 3rd doublewords in DEST and SRC *)
   IF DEST[127:96] = SRC[127:96]
```

THEN DEST[127:96]  $\leftarrow$  FFFFFFFH; ELSE DEST[127:96]  $\leftarrow$  0; FI;

## Intel C/C++ Compiler Intrinsic Equivalents

PCMPEQB \_\_m64 \_mm\_cmpeq\_pi8 (\_\_m64 m1, \_\_m64 m2)
PCMPEQW \_\_m64 \_mm\_cmpeq\_pi16 (\_\_m64 m1, \_\_m64 m2)
PCMPEQD \_\_m64 \_mm\_cmpeq\_pi32 (\_\_m64 m1, \_\_m64 m2)
PCMPEQB \_\_m128i \_mm\_cmpeq\_epi8 ( \_\_m128i a, \_\_m128i b)
PCMPEQW \_\_m128i \_mm\_cmpeq\_epi16 ( \_\_m128i a, \_\_m128i b)
PCMPEQD \_\_m128i \_mm\_cmpeq\_epi32 ( \_\_m128i a, \_\_m128i b)

#### Flags Affected

None.

## **Protected Mode Exceptions**

#GP(0) If a memory operand effective address is outside the CS, DS,

ES, FS, or GS segment limit.

(128-bit operations only) If a memory operand is not aligned on

a 16-byte boundary, regardless of segment.

#SS(0) If a memory operand effective address is outside the SS

segment limit.

#UD If CR0.EM[bit 2] = 1.

128-bit operations will generate #UD only if CR4.OSFXSR[bit 9] = 0. Execution of 128-bit instructions on a non-SSE2 capable processor (one that is MMX technology capable) will result in the

instruction operating on the mm registers, not #UD.

If the LOCK prefix is used.

#NM If CR0.TS[bit 3] = 1.

#MF (64-bit operations only) If there is a pending x87 FPU exception.

#PF(fault-code) If a page fault occurs.

#AC(0) (64-bit operations only) If alignment checking is enabled and an

unaligned memory reference is made while the current privilege

level is 3.

# Real-Address Mode Exceptions

#GP (128-bit operations only) If a memory operand is not aligned on

a 16-byte boundary, regardless of segment.

If any part of the operand lies outside of the effective address

space from 0 to FFFFH.

#UD If CR0.EM[bit 2] = 1.

128-bit operations will generate #UD only if CR4.OSFXSR[bit 9] = 0. Execution of 128-bit instructions on a non-SSE2 capable processor (one that is MMX technology capable) will result in the

instruction operating on the mm registers, not #UD.

If the LOCK prefix is used.

#NM If CR0.TS[bit 3] = 1.

#MF (64-bit operations only) If there is a pending x87 FPU exception.

# Virtual-8086 Mode Exceptions

Same exceptions as in real address mode.

#PF(fault-code) For a page fault.

#AC(0) (64-bit operations only) If alignment checking is enabled and an

unaligned memory reference is made.

# **Compatibility Mode Exceptions**

Same as for protected mode exceptions.

## **64-Bit Mode Exceptions**

#SS(0) If a memory address referencing the SS segment is in a non-

canonical form.

#GP(0) If the memory address is in a non-canonical form.

(128-bit operations only) If memory operand is not aligned on a

16-byte boundary, regardless of segment.

#UD If CR0.EM[bit 2] = 1.

(128-bit operations only) If CR4.OSFXSR[bit 9] = 0.

(128-bit operations only) If CPUID.01H:EDX.SSE2[bit 26] = 0.

If the LOCK prefix is used.

#NM If CR0.TS[bit 3] = 1.

#MF (64-bit operations only) If there is a pending x87 FPU exception.

#PF(fault-code) If a page fault occurs.

#AC(0) (64-bit operations only) If alignment checking is enabled and an

unaligned memory reference is made while the current privilege

level is 3.

# PCMPEQQ — Compare Packed Qword Data for Equal

Opcode	Instruction	64-bit Mode	Compat/ Leg Mode	Description
66 0F 38 29 /r	PCMPEQQ xmm1, xmm2/m128	Valid	Valid	Compare packed qwords in xmm2/m128 and xmm1 for equality.

#### **Description**

Performs an SIMD compare for equality of the packed quadwords in the destination operand (first operand) and the source operand (second operand). If a pair of data elements is equal, the corresponding data element in the destination is set to all 1s; otherwise, it is set to 0s.

# **Operation**

```
IF (DEST[63:0] = SRC[63:0])

THEN DEST[63:0] \leftarrow FFFFFFFFFFFFFFH;

ELSE DEST[63:0] \leftarrow 0; FI;

IF (DEST[127:64] = SRC[127:64])

THEN DEST[127:64] \leftarrow FFFFFFFFFFFFFH;

ELSE DEST[127:64] \leftarrow 0; FI;
```

# Intel C/C++ Compiler Intrinsic Equivalent

```
PCMPEQQ __m128i _mm_cmpeq_epi64(__m128i a, __m128i b);
```

# **Flags Affected**

None

# **Protected Mode Exceptions**

i rotected i rode ex	acceptions
#GP(0)	For an illegal memory operand effective address in the CS, DS, ES, FS, or GS segments.
	If a memory operand is not aligned on a 16-byte boundary, regardless of segment.
#SS(0)	For an illegal address in the SS segment.
#PF(fault-code)	For a page fault.
#NM	If $CR0.TS[bit 3] = 1$ .
#UD	If $CR0.EM[bit 2] = 1$ .
	If $CR4.OSFXSR[bit 9] = 0$ .

If  $CPUID.01H:ECX.SSE4_1[bit 19] = 0$ .

If LOCK prefix is used.

Either the prefix REP (F3h) or REPN (F2H) is used.

#### **Real Mode Exceptions**

#GP(0) if any part of the operand lies outside of the effective address

space from 0 to 0FFFFH.

If a memory operand is not aligned on a 16-byte boundary,

regardless of segment.

#NM If CR0.TS[bit 3] = 1. #UD If CR0.EM[bit 2] = 1.

If CR4.OSFXSR[bit 9] = 0.

If  $CPUID.01H:ECX.SSE4_1[bit 19] = 0$ .

If LOCK prefix is used.

Either the prefix REP (F3h) or REPN (F2H) is used.

## Virtual 8086 Mode Exceptions

Same exceptions as in Real Address Mode.

#PF(fault-code) For a page fault.

# **Compatibility Mode Exceptions**

Same exceptions as in Protected Mode.

#### **64-Bit Mode Exceptions**

#GP(0) If the memory address is in a non-canonical form.

If a memory operand is not aligned on a 16-byte boundary,

regardless of segment.

#SS(0) If a memory address referencing the SS segment is in a non-

canonical form.

#PF(fault-code) For a page fault.

#NM If TS in CR0 is set.

#UD If EM in CR0 is set.

If OSFXSR in CR4 is 0.

If CPUID feature flag ECX.SSE4 1 is 0.

If LOCK prefix is used.

Either the prefix REP (F3h) or REPN (F2H) is used.

# PCMPESTRI — Packed Compare Explicit Length Strings, Return Index

Opcode	Instruction	64-Bit Mode	Compat/ Leg Mode	Description
66 OF 3A 61 /r imm8	PCMPESTRI xmm1, xmm2/m128, imm8	Valid	Valid	Perform a packed comparison of string data with explicit lengths, generating an index, and storing the result in ECX.

# **Description**

The instruction compares and processes data from two string fragments based on the encoded value in the Imm8 Control Byte (see Section 3.1.2, "Imm8 Control Byte Operation for PCMPESTRI / PCMPESTRM / PCMPISTRI / PCMPISTRM"), and generates an index stored to ECX.

Each string fragment is represented by two values. The first value is an xmm (or possibly m128 for the second operand) which contains the data elements of the string (byte or word data). The second value is stored in EAX (for xmm1) or EDX (for xmm2/m128) and represents the number of bytes/words which are valid for the respective xmm/m128 data.

The length of each input is interpreted as being the absolute-value of the value in EAX (EDX). The absolute-value computation saturates to 16 (for bytes) and 8 (for words), based on the value of imm8[bit3] when the value in EAX (EDX) is greater than 16 (8) or less than -16 (-8).

The comparison and aggregation operations are performed according to the encoded value of Imm8 bit fields (see Section 3.1.2). The index of the first (or last, according to imm8[6]) set bit of IntRes2 (see Section 3.1.2.4) is returned in ECX. If no bits are set in IntRes2, ECX is set to 16 (8).

Note that the Arithmetic Flags are written in a non-standard manner in order to supply the most relevant information:

CFlag - Reset if IntRes2 is equal to zero, set otherwise

ZFlag - Set if absolute-value of EDX is < 16 (8), reset otherwise

SFlag - Set if absolute-value of EAX is < 16 (8), reset otherwise

OFlag - IntRes2[0]

AFlag - Reset

PFlag - Reset

## **Effective Operand Size**

Operating mode/size	Operand 1	Operand 2	Length 1	Length 2	Result
16 bit	xmm	xmm/m128	EAX	EDX	ECX
32 bit	xmm	xmm/m128	EAX	EDX	ECX
64 bit	xmm	xmm/m128	EAX	EDX	ECX
64 bit + REX.W	xmm	xmm/m128	RAX	RDX	RCX

# Intel C/C++ Compiler Intrinsic Equivalent For Returning Index

int \_mm\_cmpestri (\_\_m128i a, int la, \_\_m128i b, int lb, const int mode);

# Intel C/C++ Compiler Intrinsics For Reading EFlag Results

```
int _mm_cmpestra (__m128i a, int la, __m128i b, int lb, const int mode);
int _mm_cmpestrc (__m128i a, int la, __m128i b, int lb, const int mode);
int _mm_cmpestro (__m128i a, int la, __m128i b, int lb, const int mode);
int _mm_cmpestrs (__m128i a, int la, __m128i b, int lb, const int mode);
int _mm_cmpestrz (__m128i a, int la, __m128i b, int lb, const int mode);
```

# **SIMD Floating-Point Exceptions**

N/A.

# **Protected Mode Exceptions**

#GP(0) For an illegal memory operand effective address in the CS, DS,

ES, FS or GS segments.

#PF(fault-code) For a page fault.
#NM If TS in CR0 is set.

#SS(0) For an illegal address in the SS segment

**#UD** If EM in CR0 is set.

If OSFXSR in CR4 is 0.

If CPUID.01H:ECX.SSE4\_2 [Bit 20] is 0.

If LOCK prefix is used.

Either the prefix REP (F3h) or REPN (F2H) is used.

#### Real-Address Mode Exceptions

#GP Interrupt 13 If any part of the operand lies outside the effective

address space from 0 to FFFFH.

#NM If TS in CR0 is set. #UD If EM in CR0 is set.

If OSFXSR in CR4 is 0.

If CPUID.01H:ECX.SSE4\_2 [Bit 20] is 0.

If LOCK prefix is used.

Either the prefix REP (F3h) or REPN (F2H) is used.

## Virtual-8086 Mode Exceptions

Same exceptions as in Real Address Mode

#PF(fault-code) For a page fault

# **Compatibility Mode Exceptions**

Same exceptions as in Protected Mode.

#### **64-Bit Mode Exceptions**

#GP(0) If the memory address is in a non-canonical form.

#SS(0) If a memory address referencing the SS segment is in a non-

canonical form.

#PF (fault-code) For a page fault.

#NM If TS in CR0 is set.

#UD If EM in CR0 is set.

If OSFXSR in CR4 is 0.

If  $CPUID.01H:ECX.SSE4_2$  [Bit 20] = 0.

If LOCK prefix is used.

Either the prefix REP (F3h) or REPN (F2H) is used.

# PCMPESTRM — Packed Compare Explicit Length Strings, Return Mask

Opcode	Instruction	64-Bit Mode	Compat/ Leg Mode	Description
66 OF 3A 60 /r imm8	PCMPESTRM xmm1, xmm2/m128, imm8	Valid	Valid	Perform a packed comparison of string data with explicit lengths, generating a mask, and storing the result in <i>XMMO</i>

# **Description**

The instruction compares data from two string fragments based on the encoded value in the imm8 contol byte (see Section 3.1.2, "Imm8 Control Byte Operation for PCMPESTRI / PCMPESTRM / PCMPISTRI / PCMPISTRM"), and generates a mask stored to XMM0.

Each string fragment is represented by two values. The first value is an xmm (or possibly m128 for the second operand) which contains the data elements of the string (byte or word data). The second value is stored in EAX (for xmm1) or EDX (for xmm2/m128) and represents the number of bytes/words which are valid for the respective xmm/m128 data.

The length of each input is interpreted as being the absolute-value of the value in EAX (EDX). The absolute-value computation saturates to 16 (for bytes) and 8 (for words), based on the value of imm8[bit3] when the value in EAX (EDX) is greater than 16 (8) or less than -16 (-8).

The comparison and aggregation operations are performed according to the encoded value of Imm8 bit fields (see Section 3.1.2). As defined by imm8[6], IntRes2 is then either stored to the least significant bits of XMM0 (zero extended to 128 bits) or expanded into a byte/word-mask and then stored to XMM0.

Note that the Arithmetic Flags are written in a non-standard manner in order to supply the most relevant information:

CFlag - Reset if IntRes2 is equal to zero, set otherwise

ZFlag – Set if absolute-value of EDX is < 16 (8), reset otherwise

SFlag - Set if absolute-value of EAX is < 16 (8), reset otherwise

OFlag -IntRes2[0]

AFlag - Reset

PFlag - Reset

## **Effective Operand Size**

Operating mode/size	Operand1	Operand2	Length1	Length2	Result
16 bit	xmm	xmm/m128	EAX	EDX	XMM0
32 bit	xmm	xmm/m128	EAX	EDX	XMM0
64 bit	xmm	xmm/m128	EAX	EDX	XMM0
64 bit + REX.W	xmm	xmm/m128	RAX	RDX	XMM0

# Intel C/C++ Compiler Intrinsic Equivalent For Returning Mask

\_\_m128i \_mm\_cmpestrm (\_\_m128i a, int la, \_\_m128i b, int lb, const int mode);

## Intel C/C++ Compiler Intrinsics For Reading EFlag Results

```
int _mm_cmpestra (__m128i a, int la, __m128i b, int lb, const int mode); int _mm_cmpestrc (__m128i a, int la, __m128i b, int lb, const int mode); int _mm_cmpestro (__m128i a, int la, __m128i b, int lb, const int mode); int _mm_cmpestrs (__m128i a, int la, __m128i b, int lb, const int mode); int _mm_cmpestrz (__m128i a, int la, __m128i b, int lb, const int mode);
```

# **SIMD Floating-Point Exceptions**

N/A.

# **Protected Mode Exceptions**

#GP(0) For an illegal memory operand effective address in the CS, DS,

ES, FS or GS segments.

#PF(fault-code) For a page fault.

#NM If TS in CR0 is set.

#SS(0) For an illegal address in the SS segment

**#UD** If EM in CR0 is set.

If OSFXSR in CR4 is 0.

If CPUID.01H:ECX.SSE4\_2 [Bit 20] is 0.

If LOCK prefix is used.

Either the prefix REP (F3h) or REPN (F2H) is used.

#### **Real-Address Mode Exceptions**

#GP Interrupt 13 If any part of the operand lies outside the effective

address space from 0 to FFFFH.

#NM If TS in CR0 is set.

#UD If EM in CR0 is set.

If OSFXSR in CR4 is 0.

If CPUID.01H:ECX.SSE4\_2 [Bit 20] is 0.

If LOCK prefix is used.

Either the prefix REP (F3h) or REPN (F2H) is used.

#### Virtual-8086 Mode Exceptions

Same exceptions as in Real Address Mode

#PF(fault-code) For a page fault

## **Compatibility Mode Exceptions**

Same exceptions as in Protected Mode.

# **64-Bit Mode Exceptions**

#GP(0) If the memory address is in a non-canonical form.

#SS(0) If a memory address referencing the SS segment is in a non-

canonical form.

#PF (fault-code) For a page fault.

#NM If TS in CR0 is set.

#UD If EM in CR0 is set.

If OSFXSR in CR4 is 0.

If  $CPUID.01H:ECX.SSE4_2$  [Bit 20] = 0.

If LOCK prefix is used.

Either the prefix REP (F3h) or REPN (F2H) is used.

# PCMPISTRI — Packed Compare Implicit Length Strings, Return Index

Opcode	Instruction	64-Bit Mode	Compat/ Leg Mode	Description
66 OF 3A 63 /r imm8	PCMPISTRI xmm1, xmm2/m128, imm8	Valid	Valid	Perform a packed comparison of string data with implicit lengths, generating an index, and storing the result in ECX.

# **Description**

The instruction compares data from two strings based on the encoded value in the Imm8 Control Byte (see Section 3.1.2, "Imm8 Control Byte Operation for PCMPESTRI / PCMPESTRM / PCMPISTRI / PCMPISTRM"), and generates an index stored to ECX.

Each string is represented by a single value. The value is an xmm (or possibly m128 for the second operand) which contains the data elements of the string (byte or word data). Each input byte/word is augmented with a valid/invalid tag. A byte/word is considered valid only if it has a lower index than the least significant null byte/word. (The least significant null byte/word is also considered invalid.)

The comparison and aggregation operations are performed according to the encoded value of Imm8 bit fields (see Section 3.1.2). The index of the first (or last, according to imm8[6]) set bit of IntRes2 is returned in ECX. If no bits are set in IntRes2, ECX is set to 16 (8).

Note that the Arithmetic Flags are written in a non-standard manner in order to supply the most relevant information:

CFlag - Reset if IntRes2 is equal to zero, set otherwise

ZFlag - Set if any byte/word of xmm2/mem128 is null, reset otherwise

SFlag - Set if any byte/word of xmm1 is null, reset otherwise

OFlag -IntRes2[0]

AFlag - Reset

PFlag - Reset

#### **Effective Operand Size**

Operating mode/size	Operand1	Operand2	Result
16 bit	xmm	xmm/m128	ECX
32 bit	xmm	xmm/m128	ECX
64 bit	xmm	xmm/m128	ECX
64 bit + REX.W	xmm	xmm/m128	RCX

## Intel C/C++ Compiler Intrinsic Equivalent For Returning Index

```
int _mm_cmpistri (__m128i a, __m128i b, const int mode);
```

## Intel C/C++ Compiler Intrinsics For Reading EFlag Results

```
int _mm_cmpistra (__m128i a, __m128i b, const int mode);
int _mm_cmpistrc (__m128i a, __m128i b, const int mode);
int _mm_cmpistro (__m128i a, __m128i b, const int mode);
int _mm_cmpistrs (__m128i a, __m128i b, const int mode);
int _mm_cmpistrz (__m128i a, __m128i b, const int mode);
```

# SIMD Floating-Point Exceptions

N/A.

## **Protected Mode Exceptions**

#GP(0) For an illegal memory operand effective address in the CS, DS,

ES, FS or GS segments.

#PF(fault-code) For a page fault.
#NM If TS in CR0 is set.

#SS(0) For an illegal address in the SS segment.

**#UD** If EM in CR0 is set.

If OSFXSR in CR4 is 0.

If CPUID.01H:ECX.SSE4 2 [Bit 20] is 0.

If LOCK prefix is used.

Either the prefix REP (F3h) or REPN (F2H) is used.

# **Real-Address Mode Exceptions**

#GP Interrupt 13 If any part of the operand lies outside the effective

address space from 0 to FFFFH.

#NM If TS in CR0 is set.
#UD If EM in CR0 is set.

If OSFXSR in CR4 is 0.

If CPUID.01H:ECX.SSE4\_2 [Bit 20] is 0.

If LOCK prefix is used.

Either the prefix REP (F3h) or REPN (F2H) is used.

# Virtual-8086 Mode Exceptions

Same exceptions as in Real Address Mode

#PF(fault-code) For a page fault.

# **Compatibility Mode Exceptions**

Same exceptions as in Protected Mode.

# **64-Bit Mode Exceptions**

#GP(0) If the memory address is in a non-canonical form.

#SS(0) If a memory address referencing the SS segment is in a non-

canonical form.

#PF (fault-code) For a page fault.

#NM If TS in CR0 is set.

#UD If EM in CR0 is set.

If OSFXSR in CR4 is 0.

If CPUID.01H:  $ECX.SSE4_2$  [Bit 20] = 0.

If LOCK prefix is used.

Either the prefix REP (F3h) or REPN (F2H) is used.

# PCMPISTRM — Packed Compare Implicit Length Strings, Return Mask

Opcode	Instruction	64-Bit Mode	Compat/ Leg Mode	Description
66 0F 3A 62 /r imm8	PCMPISTRM xmm1, xmm2/m128, imm8	Valid	Valid	Perform a packed comparison of string data with implicit lengths, generating a mask, and storing the result in <i>XMMO</i> .

# **Description**

The instruction compares data from two strings based on the encoded value in the imm8 byte (see Section 3.1.2, "Imm8 Control Byte Operation for PCMPESTRI / PCMPESTRM / PCMPISTRI / PCMPISTRM") generating a mask stored to XMM0.

Each string is represented by a single value. The The value is an xmm (or possibly m128 for the second operand) which contains the data elements of the string (byte or word data). Each input byte/word is augmented with a valid/invalid tag. A byte/word is considered valid only if it has a lower index than the least significant null byte/word. (The least significant null byte/word is also considered invalid.)

The comparison and aggregation operation are performed according to the encoded value of Imm8 bit fields (see Section 3.1.2). As defined by imm8[6], IntRes2 is then either stored to the least significant bits of XMM0 (zero extended to 128 bits) or expanded into a byte/word-mask and then stored to XMM0.

Note that the Arithmetic Flags are written in a non-standard manner in order to supply the most relevant information:

CFlag - Reset if IntRes2 is equal to zero, set otherwise

ZFlag - Set if any byte/word of xmm2/mem128 is null, reset otherwise

SFlag - Set if any byte/word of xmm1 is null, reset otherwise

OFlag - IntRes2[0]

AFlag - Reset

PFlag - Reset

# **Effective Operand Size**

Operating mode/size	Operand1	Operand2	Result
16 bit	xmm	xmm/m128	XMM0
32 bit	xmm	xmm/m128	XMM0
64 bit	xmm	xmm/m128	XMM0
64 bit + REX.W	xmm	xmm/m128	XMM0

## Intel C/C++ Compiler Intrinsic Equivalent For Returning Mask

\_\_m128i \_mm\_cmpistrm (\_\_m128i a, \_\_m128i b, const int mode);

# Intel C/C++ Compiler Intrinsics For Reading EFlag Results

```
int _mm_cmpistra (__m128i a, __m128i b, const int mode);
int _mm_cmpistrc (__m128i a, __m128i b, const int mode);
int _mm_cmpistro (__m128i a, __m128i b, const int mode);
int _mm_cmpistrs (__m128i a, __m128i b, const int mode);
int _mm_cmpistrz (__m128i a, __m128i b, const int mode);
```

# SIMD Floating-Point Exceptions

N/A.

### **Protected Mode Exceptions**

#GP(0) For an illegal memory operand effective address in the CS, DS,

ES, FS or GS segments.

#PF(fault-code) For a page fault.

#NM If TS in CR0 is set.

#SS(0) For an illegal address in the SS segment

#UD If EM in CR0 is set.

If OSFXSR in CR4 is 0.

If CPUID.01H:ECX.SSE4 2 [Bit 20] is 0.

If LOCK prefix is used.

Either the prefix REP (F3h) or REPN (F2H) is used.

# **Real-Address Mode Exceptions**

#GP Interrupt 13 If any part of the operand lies outside the effective

address space from 0 to FFFFH.

#NM If TS in CR0 is set.
#UD If EM in CR0 is set.

If OSFXSR in CR4 is 0.

If CPUID.01H:ECX.SSE4\_2 [Bit 20] is 0.

If LOCK prefix is used.

Either the prefix REP (F3h) or REPN (F2H) is used.

# Virtual-8086 Mode Exceptions

Same exceptions as in Real Address Mode

#PF(fault-code) For a page fault.

# **Compatibility Mode Exceptions**

Same exceptions as in Protected Mode.

# **64-Bit Mode Exceptions**

#GP(0) If the memory address is in a non-canonical form.

#SS(0) If a memory address referencing the SS segment is in a non-

canonical form.

#PF (fault-code) For a page fault.

#NM If TS in CR0 is set.

#UD If EM in CR0 is set.

If OSFXSR in CR4 is 0.

If CPUID.01H:ECX.SSE4 $_2$  [Bit 20] = 0.

If LOCK prefix is used.

Either the prefix REP (F3h) or REPN (F2H) is used.

# PCMPGTB/PCMPGTW/PCMPGTD—Compare Packed Signed Integers for Greater Than

Opcode	Instruction	64-Bit Mode	Compat/ Leg Mode	Description
0F 64 /r	PCMPGTB mm, mm/m64	Valid	Valid	Compare packed signed byte integers in <i>mm</i> and <i>mm/m64</i> for greater than.
66 0F 64 /r	PCMPGTB xmm1, xmm2/m128	Valid	Valid	Compare packed signed byte integers in xmm1 and xmm2/m128 for greater than.
0F 65 /r	PCMPGTW mm, mm/m64	Valid	Valid	Compare packed signed word integers in <i>mm</i> and <i>mm/m64</i> for greater than.
66 OF 65 /r	PCMPGTW xmm1, xmm2/m128	Valid	Valid	Compare packed signed word integers in <i>xmm1</i> and <i>xmm2/m128</i> for greater than.
0F 66 /r	PCMPGTD mm, mm/m64	Valid	Valid	Compare packed signed doubleword integers in <i>mm</i> and <i>mm/m64</i> for greater than.
66 0F 66 /r	PCMPGTD xmm1, xmm2/m128	Valid	Valid	Compare packed signed doubleword integers in xmm1 and xmm2/m128 for greater than.

# **Description**

Performs a SIMD signed compare for the greater value of the packed byte, word, or doubleword integers in the destination operand (first operand) and the source operand (second operand). If a data element in the destination operand is greater than the corresponding date element in the source operand, the corresponding data element in the destination operand is set to all 1s; otherwise, it is set to all 0s. The source operand can be an MMX technology register or a 64-bit memory location, or it can be an XMM register or a 128-bit memory location. The destination operand can be an MMX technology register or an XMM register.

The PCMPGTB instruction compares the corresponding signed byte integers in the destination and source operands; the PCMPGTW instruction compares the corresponding signed word integers in the destination and source operands; and the PCMPGTD instruction compares the corresponding signed doubleword integers in the destination and source operands.

In 64-bit mode, using a REX prefix in the form of REX.R permits this instruction to access additional registers (XMM8-XMM15).

#### **Operation**

```
PCMPGTB instruction with 64-bit operands:
   IF DEST[7:0] > SRC[7:0]
        THEN DEST[7:0) \leftarrow FFH;
        ELSE DEST[7:0] \leftarrow 0; FI;
   (* Continue comparison of 2nd through 7th bytes in DEST and SRC *)
   IF DEST[63:56] > SRC[63:56]
        THEN DEST[63:56] \leftarrow FFH;
        ELSE DEST[63:56] \leftarrow 0; FI;
PCMPGTB instruction with 128-bit operands:
   IF DEST[7:0] > SRC[7:0]
        THEN DEST[7:0) \leftarrow FFH;
        ELSE DEST[7:0] \leftarrow 0; FI;
   (* Continue comparison of 2nd through 15th bytes in DEST and SRC *)
   IF DEST[127:120] > SRC[127:120]
        THEN DEST[127:120] \leftarrow FFH;
        ELSE DEST[127:120] \leftarrow 0; FI;
PCMPGTW instruction with 64-bit operands:
   IF DEST[15:0] > SRC[15:0]
        THEN DEST[15:0] \leftarrow FFFFH;
        ELSE DEST[15:0] \leftarrow 0; FI;
   (* Continue comparison of 2nd and 3rd words in DEST and SRC *)
   IF DEST[63:48] > SRC[63:48]
        THEN DEST[63:48] \leftarrow FFFFH;
        ELSE DEST[63:48] \leftarrow 0; FI;
PCMPGTW instruction with 128-bit operands:
   IF DEST[15:0] > SRC[15:0]
        THEN DEST[15:0] \leftarrow FFFFH;
        ELSE DEST[15:0] \leftarrow 0; FI;
   (* Continue comparison of 2nd through 7th words in DEST and SRC *)
   IF DEST[63:48] > SRC[127:112]
        THEN DEST[127:112] \leftarrow FFFFH;
        ELSE DEST[127:112] \leftarrow 0; FI;
PCMPGTD instruction with 64-bit operands:
   IF DEST[31:0] > SRC[31:0]
        THEN DEST[31:0] \leftarrow FFFFFFFH;
        ELSE DEST[31:0] \leftarrow 0; FI;
   IF DEST[63:32] > SRC[63:32]
        THEN DEST[63:32] \leftarrow FFFFFFFH;
        ELSE DEST[63:32] \leftarrow 0; FI;
```

```
PCMPGTD instruction with 128-bit operands: 

IF DEST[31:0] > SRC[31:0] 

THEN DEST[31:0] \leftarrow FFFFFFFFH; 

ELSE DEST[31:0] \leftarrow 0; FI; 

(* Continue comparison of 2nd and 3rd doublewords in DEST and SRC *) 

IF DEST[127:96] > SRC[127:96] 

THEN DEST[127:96] \leftarrow FFFFFFFFH; 

ELSE DEST[127:96] \leftarrow 0; FI;
```

## Intel C/C++ Compiler Intrinsic Equivalents

```
PCMPGTB __m64 _mm_cmpgt_pi8 (__m64 m1, __m64 m2)
PCMPGTW __m64 _mm_pcmpgt_pi16 (__m64 m1, __m64 m2)
DCMPGTD __m64 _mm_pcmpgt_pi32 (__m64 m1, __m64 m2)
PCMPGTB __m128i _mm_cmpgt_epi8 ( __m128i a, __m128i b)
PCMPGTW __m128i _mm_cmpgt_epi16 ( __m128i a, __m128i b)
DCMPGTD __m128i _mm_cmpgt_epi32 ( __m128i a, __m128i b)
```

## **Flags Affected**

None.

# **Numeric Exceptions**

None.

## **Protected Mode Exceptions**

#GP(0) If a memory operand effective address is outside the CS, DS,

ES, FS, or GS segment limit.

(128-bit operations only) If a memory operand is not aligned on

a 16-byte boundary, regardless of segment.

#SS(0) If a memory operand effective address is outside the SS

segment limit.

#UD If CR0.EM[bit 2] = 1.

128-bit operations will generate #UD only if CR4.OSFXSR[bit 9] = 0. Execution of 128-bit instructions on a non-SSE2 capable processor (one that is MMX technology capable) will result in the

instruction operating on the mm registers, not #UD.

If the LOCK prefix is used.

#NM If CR0.TS[bit 3] = 1.

#MF (64-bit operations only) If there is a pending x87 FPU exception.

#PF(fault-code) If a page fault occurs.

#AC(0) (64-bit operations only) If alignment checking is enabled and an

unaligned memory reference is made while the current privilege

level is 3.

#### **Real-Address Mode Exceptions**

#GP (128-bit operations only) If a memory operand is not aligned on

a 16-byte boundary, regardless of segment.

If any part of the operand lies outside of the effective address

space from 0 to FFFFH.

#UD If CR0.EM[bit 2] = 1.

128-bit operations will generate #UD only if CR4.OSFXSR[bit 9] = 0. Execution of 128-bit instructions on a non-SSE2 capable processor (one that is MMX technology capable) will result in the

instruction operating on the mm registers, not #UD.

If the LOCK prefix is used.

#NM If CR0.TS[bit 3] = 1.

#MF (64-bit operations only) If there is a pending x87 FPU exception.

## Virtual-8086 Mode Exceptions

Same exceptions as in real address mode.

#PF(fault-code) For a page fault.

#AC(0) (64-bit operations only) If alignment checking is enabled and an

unaligned memory reference is made.

#### **Compatibility Mode Exceptions**

Same as for protected mode exceptions.

## **64-Bit Mode Exceptions**

#SS(0) If a memory address referencing the SS segment is in a non-

canonical form.

#GP(0) If the memory address is in a non-canonical form.

(128-bit operations only) If memory operand is not aligned on a

16-byte boundary, regardless of segment.

#UD If CR0.EM[bit 2] = 1.

(128-bit operations only) If CR4.OSFXSR[bit 9] = 0.

(128-bit operations only) If CPUID.01H:EDX.SSE2[bit 26] = 0.

If the LOCK prefix is used.

#NM If CR0.TS[bit 3] = 1.

#MF (64-bit operations only) If there is a pending x87 FPU exception.

#PF(fault-code) If a page fault occurs.

#AC(0)

(64-bit operations only) If alignment checking is enabled and an unaligned memory reference is made while the current privilege level is 3.

# PCMPGTQ — Compare Packed Data for Greater Than

Opcode	Instruction	64- Bit Mode	Compat/ Leg Mode	Description
66 0F 38 37 /r	PCMPGTQ xmm1,xmm2/m1 28	Valid	Valid	Compare packed qwords in xmm2/m128 and xmm1 for greater than.

# **Description**

Performs an SIMD compare for the packed quadwords in the destination operand (first operand) and the source operand (second operand). If the data element in the first (destination) operand is greater than the corresponding element in the second (source) operand, the corresponding data element in the destination is set to all 1s; otherwise, it is set to 0s.

## **Operation**

```
IF (DEST[63-0] > SRC[63-0])

THEN DEST[63-0] \leftarrow FFFFFFFFFFFFFFH;

ELSE DEST[63-0] \leftarrow 0; FI

IF (DEST[127-64] > SRC[127-64])

THEN DEST[127-64] \leftarrow FFFFFFFFFFFFFH;

ELSE DEST[127-64] \leftarrow 0; FI
```

## **Flags Affected**

None

# Intel C/C++ Compiler Intrinsic Equivalent

PCMPGTQ \_\_m128i \_mm\_cmpgt\_epi64(\_\_m128i a, \_\_m128i b)

# **Protected Mode Exceptions**

#GP(0) If a memory operand effective address is outside the CS, DS,

ES, FS or GS segments.

If not aligned on 16-byte boundary, regardless of segment.

#SS(0) If a memory operand effective address is outside the SS

segment limit.

#PF (fault-code) For a page fault. #UD If CR0.EM = 1.

If CR4.OSFXSR(bit 9) = 0.

If  $CPUID.01H:ECX.SSE4_2$  [Bit 20] = 0.

If LOCK prefix is used.

Either the prefix REP (F3h) or REPN (F2H) is used.

#NM If TS bit in CR0 is set.

#### **Real Mode Exceptions**

#GP If any part of the operand lies outside of the effective address

space from 0 to 0FFFFH.

If not aligned on 16-byte boundary, regardless of segment.

#UD If CR0.EM = 1.

If CR4.OSFXSR(bit 9) = 0.

If  $CPUID.01H:ECX.SSE4_2$  [Bit 20] = 0.

If LOCK prefix is used.

Either the prefix REP (F3h) or REPN (F2H) is used.

#NM If TS bit in CR0 is set.

# Virtual 8086 Mode Exceptions

Same exceptions as in Real Address Mode.

#PF (fault-code) For a page fault.

## **Compatibility Mode Exceptions**

Same exceptions as in Protected Mode.

#### **64-Bit Mode Exceptions**

#GP(0) If the memory address is in a non-canonical form.

If not aligned on 16-byte boundary, regardless of segment.

#SS(0) If a memory address referencing the SS segment is in a non-

canonical form.

#PF (fault-code) For a page fault. #UD If CR0.EM = 1.

If CR4.OSFXSR(bit 9) = 0.

If CPUID.01H:ECX.SSE4 2 [Bit 20] = 0.

If LOCK prefix is used.

Either the prefix REP (F3h) or REPN (F2H) is used.

#NM If TS bit in CR0 is set.

# PEXTRB/PEXTRD/PEXTRQ — Extract Byte/Dword/Qword

Opcode	Instruction	64-bit Mode	Compat/ Leg Mode	Description
66 OF 3A 14 /r ib	PEXTRB reg/m8, xmm2, imm8	Valid	Valid	Extract a byte integer value from xmm2 at the source byte offset specified by imm8 into rreg or m8. The upper bits of r32 or r64 are zeroed.
66 OF 3A 16 /r ib	PEXTRD r/m32, xmm2, imm8	Valid	Valid	Extract a dword integer value from xmm2 at the source dword offset specified by imm8 into r/m32.
66 REX.W OF 3A 16 /r ib	PEXTRQ r/m64, xmm2, imm8	Valid	N. E.	Extract a qword integer value from xmm2 at the source qword offset specified by imm8 into r/m64.

## **Description**

Copies a data element (byte, dword, quadword) in the source operand (second operand) specified by the count operand (third operand) to the destination operand (first operand). The source operand is an XMM register. The destination operand can be a general-purpose register or a memory address. The count operand is an 8-bit immediate. When specifying a quadword [dword, byte] element, the [2, 4] least-significant bit(s) of the count operand specify the location.

In 64-bit mode, using a REX prefix in the form of REX.R permits this instruction to access additional registers (XMM8-XMM15, R8-15). PEXTRQ requires REX.W. If the destination operand is a general-purpose register, the default operand size of PEXTRB is 64 bits.

## Operation

```
CASE of PEXTRB: SEL \leftarrow COUNT[3:0]; TEMP \leftarrow (Src >> SEL*8) AND FFH; IF (DEST = Mem8) THEN Mem8 \leftarrow TEMP[7:0]; ELSE IF (64-Bit Mode and 64-bit register selected) THEN R64[7:0] \leftarrow TEMP[7:0]; r64[63:8] \leftarrow ZERO_FILL; }; ELSE
```

```
R32[7:0] \leftarrow TEMP[7:0];
r32[31:8] \leftarrow ZERO\_FILL; \};
FI;
PEXTRD:SEL \leftarrow COUNT[1:0];
TEMP \leftarrow (Src >> SEL*32) \text{ AND FFFF\_FFFFH};
DEST \leftarrow TEMP;
PEXTRQ: SEL \leftarrow COUNT[0];
TEMP \leftarrow (Src >> SEL*64);
DEST \leftarrow TEMP;
EASC:
```

# Intel C/C++ Compiler Intrinsic Equivalent

PEXTRB int \_mm\_extract\_epi8 (\_\_m128i src, const int ndx);

PEXTRD int \_mm\_extract\_epi32 (\_\_m128i src, const int ndx);

PEXTRQ \_\_int64 \_mm\_extract\_epi64 (\_\_m128i src, const int ndx);

#### Flags Affected

None

# **Protected Mode Exceptions**

#GP(0) For an illegal memory operand effective address in the CS, DS,

ES, FS, or GS segments.

#SS(0) For an illegal address in the SS segment.

#PF(fault-code) For a page fault. #NM If CR0.TS[bit 3] = 1. #UD If CR0.EM[bit 2] = 1.

If CR4.OSFXSR[bit 9] = 0.

If CPUID.01H:  $ECX.SSE4_1[bit 19] = 0$ .

If LOCK prefix is used.

Either the prefix REP (F3h) or REPN (F2H) is used.

#AC(0) (Dword and qword references) If alignment checking is enabled

and an unaligned memory reference is made while the current

privilege level is 3.

#### Real Mode Exceptions

#GP(0) if any part of the operand lies outside of the effective address

space from 0 to 0FFFFH.

#UD If CR0.EM[bit 2] = 1.

If CR4.OSFXSR[bit 9] = 0.

If  $CPUID.01H:ECX.SSE4_1[bit 19] = 0$ .

If LOCK prefix is used.

Either the prefix REP (F3h) or REPN (F2H) is used.

#NM If CR0.TS[bit 3] = 1.

## Virtual 8086 Mode Exceptions

Same exceptions as in Real Address Mode.

#PF(fault-code) For a page fault.

#AC(0) (Dword and qword references) If alignment checking is enabled

and an unaligned memory reference is made while the current

privilege level is 3.

# **Compatibility Mode Exceptions**

Same exceptions as in Protected Mode.

# **64-Bit Mode Exceptions**

#GP(0) If the memory address is in a non-canonical form.

#SS(0) If a memory address referencing the SS segment is in a non-

canonical form.

#PF(fault-code) For a page fault.

#NM If TS in CR0 is set.

#UD If EM in CR0 is set.

If OSFXSR in CR4 is 0.

If CPUID.01H:ECX.SSE4 1[bit 19] = 0.

If LOCK prefix is used.

Either the prefix REP (F3h) or REPN (F2H) is used.

#AC(0) (Dword and gword references) If alignment checking is enabled

and an unaligned memory reference is made while the current

privilege level is 3.

#### PEXTRW—Extract Word

Opcode	Instruction	64-Bit Mode	Compat/ Leg Mode	Description
OF C5 /rib	PEXTRW reg, mm, imm8	Valid	Valid	Extract the word specified by imm8 from mm and move it to reg, bits 15-0. The upper bits of r32 or r64 is zeroed.
66 OF C5 /r ib	PEXTRW reg, xmm, imm8	Valid	Valid	Extract the word specified by imm8 from xmm and move it to reg, bits 15-0. The upper bits of r32 or r64 is zeroed.
66 OF 3A 15 /r ib	PEXTRW reg/m16, xmm, imm8	Valid	Valid	Extract the word specified by imm8 from xmm and copy it to lowest 16 bits of reg or m16.  Zero-extend the result in the destination, r32 or r64.

#### **Description**

Copies the word in the source operand (second operand) specified by the count operand (third operand) to the destination operand (first operand). The source operand can be an MMX technology register or an XMM register. The destination operand can be the low word of a general-purpose register or a 16-bit memory address. The count operand is an 8-bit immediate. When specifying a word location in an MMX technology register, the 2 least-significant bits of the count operand specify the location; for an XMM register, the 3 least-significant bits specify the location. The content of the destination register above bit 16 is cleared (set to all 0s).

In 64-bit mode, using a REX prefix in the form of REX.R permits this instruction to access additional registers (XMM8-XMM15, R8-15). If the destination operand is a general-purpose register, the default operand size is 64-bits in 64-bit mode.

# Operation

```
IF (DEST = Mem16)
THEN

SEL ← COUNT[2:0];
TEMP ← (Src >> SEL*16) AND FFFFH;
Mem16 ← TEMP[15:0];
ELSE IF (64-Bit Mode and destination is a general-purpose register)
THEN

FOR (PEXTRW instruction with 64-bit source operand)
{
SEL ← COUNT[1:0];
TEMP ← (SRC >> (SEL * 16)) AND FFFFH;
```

```
r64[15:0] \leftarrow TEMP[15:0];
              r64[63:16] \leftarrow ZERO\_FILL; };
         FOR (PEXTRW instruction with 128-bit source operand)
           \{ SEL \leftarrow COUNT[2:0]; \}
              TEMP \leftarrow (SRC >> (SEL * 16)) AND FFFFH;
              r64[15:0] \leftarrow TEMP[15:0];
              r64[63:16] \leftarrow ZERO\_FILL; 
    ELSE
         FOR (PEXTRW instruction with 64-bit source operand)
           { SEL \leftarrow COUNT[1:0];
              TEMP \leftarrow (SRC >> (SEL * 16)) AND FFFFH;
              r32[15:0] \leftarrow TEMP[15:0];
              r32[31:16] \leftarrow ZERO\_FILL; };
         FOR (PEXTRW instruction with 128-bit source operand)
           \{ SEL \leftarrow COUNT[2:0]; \}
              TEMP \leftarrow (SRC >> (SEL * 16)) AND FFFFH;
              r32[15:0] \leftarrow TEMP[15:0];
              r32[31:16] \leftarrow ZERO\_FILL; };
    FI;
FI:
           int _mm_extract_pi16 (__m64 a, int n)
PEXTRW
```

## Intel C/C++ Compiler Intrinsic Equivalent

```
PEXTRW int _mm_extract_epi16 ( __m128i a, int imm)
```

## **Flags Affected**

None.

# **Numeric Exceptions**

None.

## **Protected Mode Exceptions**

i iotected i iode (	Exceptions
#GP(0)	(3 byte opcode only) If a memory operand effective address is outside the CS, DS, ES, FS, or GS segment limit.
#SS(0)	(3 byte opcode only) If a memory operand effective address is outside the SS segment limit.
#UD	If $CR0.EM[bit 2] = 1$ . (128-bit operations only) If $CR4.OSFXSR[bit 9] = 0$ .
	(3 byte opcode only) If CPUID.01H:ECX.SSE4_1[bit 19] = 0.
	(128-bit operations only) If CPUID.01H:EDX.SSE2[bit 26] = $0$ .
	If the LOCK prefix is used.

(3 byte opcode only) Either the prefix REP (F3h) or REPN (F2H)

is used.

#NM If CR0.TS[bit 3] = 1.

#MF (64-bit operations only) If there is a pending x87 FPU exception.

#PF(fault-code) (3 byte opcode only) If a page fault occurs.

#AC(0) (3 byte opcode only) If alignment checking is enabled and an

unaligned memory reference is made while the current privilege

level is 3.

# **Real-Address Mode Exceptions**

#GP (3 byte opcode only) If any part of the operand lies outside of

the effective address space from 0 to FFFFH.

#UD If CR0.EM[bit 2] = 1.

(128-bit operations only) If CR4.OSFXSR[bit 9] = 0.

(3 byte opcode only) If CPUID.01H:ECX.SSE4\_1[bit 19] = 0. (128-bit operations only) If CPUID.01H:EDX.SSE2[bit 26] = 0.

If the LOCK prefix is used.

(3 byte opcode only) Either the prefix REP (F3h) or REPN (F2H)

is used.

#NM If CR0.TS[bit 3] = 1.

#MF (64-bit operations only) If there is a pending x87 FPU exception.

#### Virtual-8086 Mode Exceptions

Same exceptions as in real address mode.

#PF(fault-code) (3 byte opcode only) For a page fault.

#AC(0) (64-bit operations only) If alignment checking is enabled and an

unaligned memory reference is made.

# **Compatibility Mode Exceptions**

Same as for protected mode exceptions.

#### **64-Bit Mode Exceptions**

#GP(0) (3 byte opcode only) If the memory address is in a non-canon-

ical form.

#SS(0) (3 byte opcode only) If a memory address referencing the SS

segment is in a non-canonical form.

#PF(fault-code) (3 byte opcode only) For a page fault.

#UD If CR0.EM[bit 2] = 1.

(128-bit operations only) If CR4.OSFXSR[bit 9] = 0.

#### INSTRUCTION SET REFERENCE, N-Z

(3 byte opcode only) If CPUID.01H:ECX.SSE4 $_1$ [bit 19] = 0. (128-bit operations only) If CPUID.01H:EDX.SSE2[bit 26] = 0.

If the LOCK prefix is used.

(3 byte opcode only) Either the prefix REP (F3h) or REPN (F2H)

is used.

#NM If CR0.TS[bit 3] = 1.

#MF (64-bit operations only) If there is a pending x87 FPU exception. #AC(0) (3 byte opcode only) If alignment checking is enabled and an

unaligned memory reference is made while the current privilege

level is 3.

#### PHADDW/PHADDD — Packed Horizontal Add

Opcode	Instruction	64-Bit Mode	Compat/ Leg Mode	Description
OF 38 01 /r	PHADDW mm1, mm2/m64	Valid	Valid	Add 16-bit signed integers horizontally, pack to MM1.
66 0F 38 01 /r	PHADDW xmm1, xmm2/m128	Valid	Valid	Add 16-bit signed integers horizontally, pack to XMM1.
0F 38 02 /r	PHADDD mm1, mm2/m64	Valid	Valid	Add 32-bit signed integers horizontally, pack to MM1.
66 OF 38 02 /r	PHADDD xmm1, xmm2/m128	Valid	Valid	Add 32-bit signed integers horizontally, pack to XMM1.

#### **Description**

PHADDW adds two adjacent 16-bit signed integers horizontally from the source and destination operands and packs the 16-bit signed results to the destination operand (first operand). PHADDD adds two adjacent 32-bit signed integers horizontally from the source and destination operands and packs the 32-bit signed results to the destination operand (first operand). Both operands can be MMX or XMM registers. When the source operand is a 128-bit memory operand, the operand must be aligned on a 16-byte boundary or a general-protection exception (#GP) will be generated.

In 64-bit mode, use the REX prefix to access additional registers.

# **Operation**

PHADDW with 64-bit operands:

```
mm1[15-0] = mm1[31-16] + mm1[15-0];

mm1[31-16] = mm1[63-48] + mm1[47-32];

mm1[47-32] = mm2/m64[31-16] + mm2/m64[15-0];

mm1[63-48] = mm2/m64[63-48] + mm2/m64[47-32];
```

#### PHADDW with 128-bit operands:

```
xmm1[15-0] = xmm1[31-16] + xmm1[15-0];

xmm1[31-16] = xmm1[63-48] + xmm1[47-32];

xmm1[47-32] = xmm1[95-80] + xmm1[79-64];

xmm1[63-48] = xmm1[127-112] + xmm1[111-96];

xmm1[79-64] = xmm2/m128[31-16] + xmm2/m128[15-0];

xmm1[95-80] = xmm2/m128[63-48] + xmm2/m128[47-32];

xmm1[111-96] = xmm2/m128[95-80] + xmm2/m128[79-64];

xmm1[127-112] = xmm2/m128[127-112] + xmm2/m128[111-96];
```

#### PHADDD with 64-bit operands:

```
mm1[31-0] = mm1[63-32] + mm1[31-0];
mm1[63-32] = mm2/m64[63-32] + mm2/m64[31-0];
```

#### PHADDD with 128-bit operands:

```
xmm1[31-0] = xmm1[63-32] + xmm1[31-0];

xmm1[63-32] = xmm1[127-96] + xmm1[95-64];

xmm1[95-64] = xmm2/m128[63-32] + xmm2/m128[31-0];

xmm1[127-96] = xmm2/m128[127-96] + xmm2/m128[95-64];
```

#### Intel C/C++ Compiler Intrinsic Equivalents

```
PHADDW __m64 _mm_hadd_pi16 (__m64 a, __m64 b)
PHADDW __m128i _mm_hadd_epi16 (__m128i a, __m128i b)
PHADDD __m64 _mm_hadd_pi32 (__m64 a, __m64 b)
PHADDD __m128i _mm_hadd_epi32 (__m128i a, __m128i b)
```

#### **Protected Mode Exceptions**

#GP(0): If a memory operand effective address is outside the CS, DS,

ES, FS or GS segments.

(128-bit operations only) If not aligned on 16-byte boundary,

regardless of segment.

#SS(0) If a memory operand effective address is outside the SS

segment limit.

#PF(fault-code) If a page fault occurs. #UD If CR0.EM(bit 2)= 1.

(128-bit operations only) If CR4.OSFXSR(bit 9) = 0.

If CPUID.SSSE3(ECX bit 9) = 0.

If the LOCK prefix is used.

#NM If TS bit in CR0 is set.

#MF (64-bit operations only) If there is a pending x87 FPU exception.

#AC(0) (64-bit operations only) If alignment checking is enabled and

unaligned memory reference is made while the current privilege

level is 3.

#### **Real Mode Exceptions**

#GP(0) If any part of the operand lies outside of the effective address

space from 0 to 0FFFFH.

(128-bit operations only) If not aligned on 16-byte boundary,

regardless of segment.

#UD If CR0.EM = 1.

(128-bit operations only) If CR4.OSFXSR(bit 9) = 0.

If CPUID.SSSE3(ECX bit 9) = 0.

If the LOCK prefix is used.

#NM If TS bit in CR0 is set.

#MF (64-bit operations only) If there is a pending x87 FPU exception.

#### Virtual 8086 Mode Exceptions

Same exceptions as in real address mode. #PF(fault-code) If a page fault occurs.

#AC(0) (64-bit operations only). If alignment checking is enabled and

unaligned memory reference is made.

# **Compatibility Mode Exceptions**

Same as for protected mode exceptions.

### **64-Bit Mode Exceptions**

#SS(0) If a memory address referencing the SS segment is in a non-

canonical form.

#GP(0) If the memory address is in a non-canonical form.

(128-bit operations only) If memory operand is not aligned on a

16-byte boundary, regardless of segment.

#UD If CR0.EM[bit 2] = 1.

(128-bit operations only) If CR4.OSFXSR[bit 9] = 0.

If CPUID.01H:ECX.SSSE3[bit 9] = 0.

If the LOCK prefix is used.

#NM If CR0.TS[bit 3] = 1.

#MF (64-bit operations only) If there is a pending x87 FPU exception.

#PF(fault-code) If a page fault occurs.

#AC(0) (64-bit operations only) If alignment checking is enabled and an

unaligned memory reference is made while the current privilege

level is 3.

#### PHADDSW — Packed Horizontal Add and Saturate

Opcode	Instruction	64-Bit Mode	Compat/ Leg Mode	Description
OF 38 03 /r	PHADDSW mm1, mm2/m64	Valid	Valid	Add 16-bit signed integers horizontally, pack saturated integers to MM1.
66 0F 38 03 /r	PHADDSW xmm1, xmm2/m128	Valid	Valid	Add 16-bit signed integers horizontally, pack saturated integers to XMM1.

## **Description**

PHADDSW adds two adjacent signed 16-bit integers horizontally from the source and destination operands and saturates the signed results; packs the signed, saturated 16-bit results to the destination operand (first operand) Both operands can be MMX or XMM registers. When the source operand is a 128-bit memory operand, the operand must be aligned on a 16-byte boundary or a general-protection exception (#GP) will be generated.

In 64-bit mode, use the REX prefix to access additional registers.

# **Operation**

PHADDSW with 64-bit operands:

```
mm1[15-0] = SaturateToSignedWord((mm1[31-16] + mm1[15-0]);
mm1[31-16] = SaturateToSignedWord(mm1[63-48] + mm1[47-32]);
mm1[47-32] = SaturateToSignedWord(mm2/m64[31-16] + mm2/m64[15-0]);
mm1[63-48] = SaturateToSignedWord(mm2/m64[63-48] + mm2/m64[47-32]);
```

#### PHADDSW with 128-bit operands:

```
xmm1[15-0]= SaturateToSignedWord(xmm1[31-16] + xmm1[15-0]);

xmm1[31-16] = SaturateToSignedWord(xmm1[63-48] + xmm1[47-32]);

xmm1[47-32] = SaturateToSignedWord(xmm1[95-80] + xmm1[79-64]);

xmm1[63-48] = SaturateToSignedWord(xmm1[127-112] + xmm1[111-96]);

xmm1[79-64] = SaturateToSignedWord(xmm2/m128[31-16] + xmm2/m128[15-0]);

xmm1[95-80] = SaturateToSignedWord(xmm2/m128[63-48] + xmm2/m128[47-32]);

xmm1[111-96] = SaturateToSignedWord(xmm2/m128[95-80] + xmm2/m128[79-64]);

xmm1[127-112] = SaturateToSignedWord(xmm2/m128[127-112] + xmm2/m128[111-96]);
```

# Intel C/C++ Compiler Intrinsic Equivalent

```
PHADDSW __m64 _mm_hadds_pi16 (__m64 a, __m64 b)
PHADDSW __m128i _mm_hadds_epi16 (__m128i a, __m128i b)
```

### **Protected Mode Exceptions**

#GP(0) If a memory operand effective address is outside the CS, DS,

ES, FS or GS segments.

(128-bit operations only) If not aligned on 16-byte boundary,

regardless of segment.

#SS(0) If a memory operand effective address is outside the SS

segment limit.

#PF(fault-code) If a page fault occurs.

#UD If CR0.EM = 1.

(128-bit operations only) If CR4.OSFXSR(bit 9) = 0.

If CPUID.SSSE3(ECX bit 9) = 0.

If the LOCK prefix is used.

#NM If TS bit in CR0 is set.

#MF (64-bit operations only) If there is a pending x87 FPU exception.

#AC(0): (64-bit operations only) If alignment checking is enabled and

unaligned memory reference is made while the current privilege

level is 3.

# **Real Mode Exceptions**

#GP(0) If any part of the operand lies outside of the effective address

space from 0 to 0FFFFH.

(128-bit operations only) If not aligned on 16-byte boundary,

regardless of segment.

#UD If CR0.EM = 1.

(128-bit operations only) If CR4.OSFXSR(bit 9) = 0.

If CPUID.SSSE3(ECX bit 9) = 0.

If the LOCK prefix is used.

#NM If TS bit in CR0 is set.

#MF (64-bit operations only) If there is a pending x87 FPU exception.

### **Virtual 8086 Mode Exceptions**

Same exceptions as in real address mode.

#PF(fault-code) If a page fault occurs.

#AC(0) (64-bit operations only) If alignment checking is enabled and

unaligned memory reference is made.

### **Compatibility Mode Exceptions**

Same as for protected mode exceptions.

# **64-Bit Mode Exceptions**

#SS(0) If a memory address referencing the SS segment is in a non-

canonical form.

#GP(0) If the memory address is in a non-canonical form.

(128-bit operations only) If memory operand is not aligned on a

16-byte boundary, regardless of segment.

#UD If CR0.EM[bit 2] = 1.

(128-bit operations only) If CR4.OSFXSR[bit 9] = 0.

If CPUID.01H:ECX.SSSE3[bit 9] = 0.

If the LOCK prefix is used.

#NM If CR0.TS[bit 3] = 1.

#MF (64-bit operations only) If there is a pending x87 FPU exception.

#PF(fault-code) If a page fault occurs.

#AC(0) (64-bit operations only) If alignment checking is enabled and an

unaligned memory reference is made while the current privilege

level is 3.

# PHMINPOSUW — Packed Horizontal Word Minimum

Opcode	Instruction		Compat/ Leg Mode	Description
66 OF 38 41 /r	PHMINPOSUW xmm1, xmm2/m128	Valid	Valid	Find the minimum unsigned word in xmm2/m128 and place its value in the low word of xmm1 and its index in the second-lowest word of xmm1.

### **Description**

Determine the minimum unsigned word value in the source operand (second operand) and place the unsigned word in the low word (bits 0-15) of the destination operand (first operand). The word index of the minimum value is stored in bits 16-18 of the destination operand. The remaining upper bits of the destination are set to zero.

### **Operation**

# Intel C/C++ Compiler Intrinsic Equivalent

```
PHMINPOSUW __m128i _mm_minpos_epu16( __m128i packed_words);
```

## Flags Affected

None

# **Protected Mode Exceptions**

#GP(0) For an illegal memory operand effective address in the CS, DS, ES, FS, or GS segments.

If a memory operand is not aligned on a 16-byte boundary,

regardless of segment.

#SS(0) For an illegal address in the SS segment.

#PF(fault-code) For a page fault. #NM If CR0.TS[bit 3] = 1. #UD If CR0.EM[bit 2] = 1.

If CR4.OSFXSR[bit 9] = 0.

If CPUID.01H:ECX.SSE4 1[bit 19] = 0.

If LOCK prefix is used.

Either the prefix REP (F3h) or REPN (F2H) is used.

#### **Real Mode Exceptions**

#GP(0) if any part of the operand lies outside of the effective address

space from 0 to 0FFFFH.

If a memory operand is not aligned on a 16-byte boundary,

regardless of segment.

#NM If CR0.TS[bit 3] = 1. #UD If CR0.EM[bit 2] = 1.

If CR4.OSFXSR[bit 9] = 0.

If  $CPUID.01H:ECX.SSE4_1[bit 19] = 0$ .

If LOCK prefix is used.

Either the prefix REP (F3h) or REPN (F2H) is used.

#### Virtual 8086 Mode Exceptions

Same exceptions as in Real Address Mode.

#PF(fault-code) For a page fault.

## **Compatibility Mode Exceptions**

Same exceptions as in Protected Mode.

#### **64-Bit Mode Exceptions**

#GP(0) If the memory address is in a non-canonical form.

If a memory operand is not aligned on a 16-byte boundary,

regardless of segment.

#SS(0) If a memory address referencing the SS segment is in a non-

canonical form.

#PF(fault-code) For a page fault.

#NM If TS in CR0 is set.

#UD If EM in CR0 is set.

If OSFXSR in CR4 is 0.

# INSTRUCTION SET REFERENCE, N-Z

If CPUID feature flag ECX.SSE4\_1 is 0.

If LOCK prefix is used.

Either the prefix REP (F3h) or REPN (F2H) is used.

#### PHSUBW/PHSUBD — Packed Horizontal Subtract

Opcode	Instruction	64-Bit Mode	Compat/ Leg Mode	Description
OF 38 05 /r	PHSUBW mm1, mm2/m64	Valid	Valid	Subtract 16-bit signed integers horizontally, pack to MM1.
66 0F 38 05 /r	PHSUBW xmm1, xmm2/m128	Valid	Valid	Subtract 16-bit signed integers horizontally, pack to XMM1.
OF 38 06 /r	PHSUBD mm1, mm2/m64	Valid	Valid	Subtract 32-bit signed integers horizontally, pack to MM1.
66 0F 38 06 /r	PHSUBD xmm1, xmm2/m128	Valid	Valid	Subtract 32-bit signed integers horizontally, pack to XMM1.

#### **Description**

PHSUBW performs horizontal subtraction on each adjacent pair of 16-bit signed integers by subtracting the most significant word from the least significant word of each pair in the source and destination operands, and packs the signed 16-bit results to the destination operand (first operand). PHSUBD performs horizontal subtraction on each adjacent pair of 32-bit signed integers by subtracting the most significant doubleword from the least significant doubleword of each pair, and packs the signed 32-bit result to the destination operand. Both operands can be MMX or XMM registers. When the source operand is a 128-bit memory operand, the operand must be aligned on a 16-byte boundary or a general-protection exception (#GP) will be generated.

In 64-bit mode, use the REX prefix to access additional registers.

# **Operation**

PHSUBW with 64-bit operands:

```
mm1[15-0] = mm1[15-0] - mm1[31-16];

mm1[31-16] = mm1[47-32] - mm1[63-48];

mm1[47-32] = mm2/m64[15-0] - mm2/m64[31-16];

mm1[63-48] = mm2/m64[47-32] - mm2/m64[63-48];
```

PHSUBW with 128-bit operands:

```
xmm1[15-0] = xmm1[15-0] - xmm1[31-16];

xmm1[31-16] = xmm1[47-32] - xmm1[63-48];

xmm1[47-32] = xmm1[79-64] - xmm1[95-80];
```

```
xmm1[63-48] = xmm1[111-96] - xmm1[127-112];
xmm1[79-64] = xmm2/m128[15-0] - xmm2/m128[31-16];
xmm1[95-80] = xmm2/m128[47-32] - xmm2/m128[63-48];
xmm1[111-96] = xmm2/m128[79-64] - xmm2/m128[95-80];
xmm1[127-112] = xmm2/m128[111-96] - xmm2/m128[127-112];
PHSUBD with 64-bit operands:

mm1[31-0] = mm1[31-0] - mm1[63-32];
mm1[63-32] = mm2/m64[31-0] - mm2/m64[63-32];
PHSUBD with 128-bit operands:

xmm1[31-0] = xmm1[31-0] - xmm1[63-32];
xmm1[63-32] = xmm1[95-64] - xmm1[127-96];
xmm1[95-64] = xmm2/m128[31-0] - xmm2/m128[63-32];
xmm1[127-96] = xmm2/m128[95-64] - xmm2/m128[127-96];
```

#### Intel C/C++ Compiler Intrinsic Equivalents

```
PHSUBW __m64 _mm_hsub_pi16 (__m64 a, __m64 b)
PHSUBW __m128i _mm_hsub_epi16 (__m128i a, __m128i b)
PHSUBD __m64 _mm_hsub_pi32 (__m64 a, __m64 b)
PHSUBD __m128i _mm_hsub_epi32 (__m128i a, __m128i b)
```

#### **Protected Mode Exceptions**

#GP(0) If a memory operand effective address is outside the CS, DS,

ES, FS or GS segments.

(128-bit operations only) If not aligned on 16-byte boundary,

regardless of segment.

#SS(0) If a memory operand effective address is outside the SS

segment limit.

#PF(fault-code) If a page fault occurs.

#UD If CR0.EM = 1.

(128-bit operations only) If CR4.OSFXSR(bit 9) = 0.

If CPUID.SSSE3(ECX bit 9) = 0.

If the LOCK prefix is used.

#NM If TS bit in CR0 is set.

#MF If there is a pending x87 FPU exception (64-bit operations only).

#AC(0) (64-bit operations only) If alignment checking is enabled and

unaligned memory reference is made while the current privilege

level is 3.

#### **Real Mode Exceptions**

#GP(0): If any part of the operand lies outside of the effective address

space from 0 to 0FFFFH.

(128-bit operations only) If not aligned on 16-byte boundary,

regardless of segment.

#UD: If CR0.EM = 1.

(128-bit operations only) If CR4.OSFXSR(bit 9) = 0.

If CPUID.SSSE3(ECX bit 9) = 0.

If the LOCK prefix is used.

#NM If TS bit in CR0 is set.

#MF (64-bit operations only) If there is a pending x87 FPU exception.

### Virtual 8086 Mode Exceptions

Same exceptions as in real address mode. #PF(fault-code) If a page fault occurs.

#AC(0) (64-bit operations only) If alignment checking is enabled and

unaligned memory reference is made.

### **Compatibility Mode Exceptions**

Same as for protected mode exceptions.

#### **64-Bit Mode Exceptions**

#SS(0) If a memory address referencing the SS segment is in a non-

canonical form.

#GP(0) If the memory address is in a non-canonical form.

(128-bit operations only) If memory operand is not aligned on a

16-byte boundary, regardless of segment.

#UD If CR0.EM[bit 2] = 1.

(128-bit operations only) If CR4.OSFXSR[bit 9] = 0.

If CPUID.01H:ECX.SSSE3[bit 9] = 0.

If the LOCK prefix is used.

#NM If CR0.TS[bit 3] = 1.

#MF (64-bit operations only) If there is a pending x87 FPU exception.

#PF(fault-code) If a page fault occurs.

#AC(0) (64-bit operations only) If alignment checking is enabled and an

unaligned memory reference is made while the current privilege

level is 3.

#### PHSUBSW — Packed Horizontal Subtract and Saturate

Opcode	Instruction	64-Bit Mode	Compat/ Leg Mode	Description
OF 38 07 /r	PHSUBSW mm1, mm2/m64	Valid	Valid	Subtract 16-bit signed integer horizontally, pack saturated integers to MM1.
66 0F 38 07 /r	PHSUBSW xmm1, xmm2/m128	Valid	Valid	Subtract 16-bit signed integer horizontally, pack saturated integers to XMM1

## Description

PHSUBSW performs horizontal subtraction on each adjacent pair of 16-bit signed integers by subtracting the most significant word from the least significant word of each pair in the source and destination operands. The signed, saturated 16-bit results are packed to the destination operand (first operand). Both operands can be MMX or XMM register. When the source operand is a 128-bit memory operand, the operand must be aligned on a 16-byte boundary or a general-protection exception (#GP) will be generated.

In 64-bit mode, use the REX prefix to access additional registers.

# Operation

PHSUBSW with 64-bit operands:

```
mm1[15-0] = SaturateToSignedWord(mm1[15-0] - mm1[31-16]);
mm1[31-16] = SaturateToSignedWord(mm1[47-32] - mm1[63-48]);
mm1[47-32] = SaturateToSignedWord(mm2/m64[15-0] - mm2/m64[31-16]);
mm1[63-48] = SaturateToSignedWord(mm2/m64[47-32] - mm2/m64[63-48]);
```

#### PHSUBSW with 128-bit operands:

```
xmm1[15-0] = SaturateToSignedWord(xmm1[15-0] - xmm1[31-16]);

xmm1[31-16] = SaturateToSignedWord(xmm1[47-32] - xmm1[63-48]);

xmm1[47-32] = SaturateToSignedWord(xmm1[79-64] - xmm1[95-80]);

xmm1[63-48] = SaturateToSignedWord(xmm1[111-96] - xmm1[127-112]);

xmm1[79-64] = SaturateToSignedWord(xmm2/m128[15-0] - xmm2/m128[31-16]);

xmm1[95-80] = SaturateToSignedWord(xmm2/m128[47-32] - xmm2/m128[63-48]);

xmm1[111-96] = SaturateToSignedWord(xmm2/m128[79-64] - xmm2/m128[95-80]);

xmm1[127-112] = SaturateToSignedWord(xmm2/m128[111-96] - xmm2/m128[127-112]);
```

### Intel C/C++ Compiler Intrinsic Equivalent

PHSUBSW \_\_m64 \_mm\_hsubs\_pi16 (\_\_m64 a, \_\_m64 b)

PHSUBSW \_\_m128i \_mm\_hsubs\_epi16 (\_\_m128i a, \_\_m128i b)

#### **Protected Mode Exceptions**

#GP(0) if a memory operand effective address is outside the CS, DS, ES,

FS or GS segments.

If not aligned on 16-byte boundary, regardless of segment

(128-bit operations only).

#SS(0) If a memory operand effective address is outside the SS

segment limit.

#PF(fault-code) If a page fault occurs.

#UD If CR0.EM = 1.

If CR4.OSFXSR(bit 9) = 0 (128-bit operations only).

If CPUID.SSSE3(ECX bit 9) = 0.

If the LOCK prefix is used.

#NM If TS bit in CR0 is set.

#MF If there is a pending x87 FPU exception (64-bit operations only).

#AC(0) If alignment checking is enabled and unaligned memory refer-

ence is made while the current privilege level is 3 (64-bit opera-

tions only).

#### **Real Mode Exceptions**

#GP(0) If any part of the operand lies outside of the effective address

space from 0 to 0FFFFH.

If not aligned on 16-byte boundary, regardless of segment

(128-bit operations only).

#UD If CR0.EM = 1.

If CR4.OSFXSR(bit 9) = 0 (128-bit operations only).

If CPUID.SSSE3(ECX bit 9) = 0.

If the LOCK prefix is used.

#NM If TS bit in CR0 is set.

#MF If there is a pending x87 FPU exception (64-bit operations only).

#### Virtual 8086 Mode Exceptions

Same exceptions as in real address mode.

#PF(fault-code) If a page fault occurs.

#AC(0) If alignment checking is enabled and unaligned memory refer-

ence is made (64-bit operations only).

### **Compatibility Mode Exceptions**

Same as for protected mode exceptions.

# **64-Bit Mode Exceptions**

#SS(0) If a memory address referencing the SS segment is in a non-

canonical form.

#GP(0) If the memory address is in a non-canonical form.

(128-bit operations only) If memory operand is not aligned on a

16-byte boundary, regardless of segment.

#UD If CR0.EM[bit 2] = 1.

(128-bit operations only) If CR4.OSFXSR[bit 9] = 0.

If CPUID.01H:ECX.SSSE3[bit 9] = 0.

If the LOCK prefix is used.

#NM If CR0.TS[bit 3] = 1.

#MF (64-bit operations only) If there is a pending x87 FPU exception.

#PF(fault-code) If a page fault occurs.

#AC(0) (64-bit operations only) If alignment checking is enabled and an

unaligned memory reference is made while the current privilege

level is 3.

# PINSRB/PINSRD/PINSRQ — Insert Byte/Dword/Qword

Opcode	Instruction	Compat/ Leg Mode	64-bit Mode	Description
66 OF 3A 20 /r ib	PINSRB xmm1, r32/m8, imm8	Valid	Valid	Insert a byte integer value from r32/m8 into xmm1 at the destination element in xmm1 specified by imm8.
66 OF 3A 22 /r ib	PINSRD xmm1, r/m32, imm8	Valid	Valid	Insert a dword integer value from r/m32 into the xmm1 at the destination elements specified by imm8.
66 REX.W OF 3A 22 /r ib	PINSRQ xmm1, r/m64, imm8	N. E.	Valid	Insert a qword integer value from r/m32 into the xmm1 at the destination elements specified by imm8.

## **Description**

Copies a byte/dword/qword from the source operand (second operand) and inserts it in the destination operand (first operand) at the location specified with the count operand (third operand). (The other elements in the destination register are left untouched.) The source operand can be a general-purpose register or a memory location. (When the source operand is a general-purpose register, PINSRB copies the low byte of the register.) The destination operand is an XMM register. The count operand is an 8-bit immediate. When specifying a qword[dword, byte] location in an an XMM register, the [2, 4] least-significant bit(s) of the count operand specify the location.

In 64-bit mode, using a REX prefix in the form of REX.R permits this instruction to access additional registers (XMM8-XMM15, R8-15). Use of REX.W permits the use of 64 bit general purpose registers.

#### **Operation**

```
CASE OF

PINSRB: SEL \leftarrow COUNT[3:0];

MASK \leftarrow (0FFH << (SEL * 8));

TEMP \leftarrow (((SRC[7:0] << (SEL *8)) \text{ AND MASK});

PINSRD: SEL \leftarrow COUNT[1:0];

MASK \leftarrow (0FFFFFFFFH << (SEL * 32));

TEMP \leftarrow (((SRC << (SEL *32)) \text{ AND MASK}) ;

PINSRQ: SEL \leftarrow COUNT[0]

MASK \leftarrow (0FFFFFFFFFFFFFFFFFH << (SEL * 64));

TEMP \leftarrow (((SRC << (SEL *32)) \text{ AND MASK}) ;

ESAC;

DEST \leftarrow ((DEST \text{ AND NOT MASK}) \text{ OR TEMP});
```

### Intel C/C++ Compiler Intrinsic Equivalent

```
PINSRB __m128i _mm_insert_epi8 (__m128i s1, int s2, const int ndx);

PINSRD __m128i _mm_insert_epi32 (__m128i s2, int s, const int ndx);

PINSRQ __m128i _mm_insert_epi64(__m128i s2, __int64 s, const int ndx);
```

## **Flags Affected**

None

#### **Protected Mode Exceptions**

#GP(0) For an illegal memory operand effective address in the CS, DS,

ES, FS, or GS segments.

#SS(0) For an illegal address in the SS segment.

#PF(fault-code) For a page fault. #NM If CR0.TS[bit 3] = 1. #UD If CR0.EM[bit 2] = 1.

If CR4.OSFXSR[bit 9] = 0.

If  $CPUID.01H:ECX.SSE4_1[bit 19] = 0$ .

If LOCK prefix is used.

Either the prefix REP (F3h) or REPN (F2H) is used.

#AC(0) (Dword and gword references) If alignment checking is enabled

and an unaligned memory reference is made while the current

privilege level is 3.

# **Real Mode Exceptions**

#GP(0) if any part of the operand lies outside of the effective address

space from 0 to 0FFFFH.

#NM If CR0.TS[bit 3] = 1. #UD If CR0.EM[bit 2] = 1.

If CR4.OSFXSR[bit 9] = 0.

If  $CPUID.01H:ECX.SSE4_1[bit 19] = 0$ .

If LOCK prefix is used.

Either the prefix REP (F3h) or REPN (F2H) is used.

# Virtual 8086 Mode Exceptions

Same exceptions as in Real Address Mode.

#PF(fault-code) For a page fault.

#AC(0) (Dword and qword references) If alignment checking is enabled

and an unaligned memory reference is made while the current

privilege level is 3.

## **Compatibility Mode Exceptions**

Same exceptions as in Protected Mode.

## **64-Bit Mode Exceptions**

#GP(0) If the memory address is in a non-canonical form.

#SS(0) If a memory address referencing the SS segment is in a non-

canonical form.

#PF(fault-code) For a page fault.

#NM If TS in CR0 is set.

#UD If EM in CR0 is set.

If OSFXSR in CR4 is 0.

If CPUID feature flag ECX.SSE4\_1 is 0.

If LOCK prefix is used.

Either the prefix REP (F3h) or REPN (F2H) is used.

#AC(0) (Dword and gword references) If alignment checking is enabled

and an unaligned memory reference is made while the current

privilege level is 3.

#### PINSRW—Insert Word

Opcode	Instruction	64-Bit Mode	Compat/ Leg Mode	Description
0F C4 / <i>r</i> ib	PINSRW mm, r32/m16, imm8	Valid	Valid	Insert the low word from r32 or from m16 into mm at the word position specified by imm8
66 0F C4 /r ib	PINSRW xmm, r32/m16, imm8	Valid	Valid	Move the low word of <i>r32</i> or from <i>m16</i> into xmm at the word position specified by <i>imm8</i> .

#### **Description**

Copies a word from the source operand (second operand) and inserts it in the destination operand (first operand) at the location specified with the count operand (third operand). (The other words in the destination register are left untouched.) The source operand can be a general-purpose register or a 16-bit memory location. (When the source operand is a general-purpose register, the low word of the register is copied.) The destination operand can be an MMX technology register or an XMM register. The count operand is an 8-bit immediate. When specifying a word location in an MMX technology register, the 2 least-significant bits of the count operand specify the location; for an XMM register, the 3 least-significant bits specify the location.

In 64-bit mode, using a REX prefix in the form of REX.R permits this instruction to access additional registers (XMM8-XMM15, R8-15).

## **Operation**

```
PINSRW instruction with 64-bit source operand:
```

SEL  $\leftarrow$  COUNT AND 3H:

CASE (Determine word position) OF

SEL  $\leftarrow$  0: MASK  $\leftarrow$  00000000000FFFFH;

SEL  $\leftarrow$  1: MASK  $\leftarrow$  00000000FFFF0000H;

SEL  $\leftarrow$  2: MASK  $\leftarrow$  0000FFFF00000000H; SEL  $\leftarrow$  3: MASK  $\leftarrow$  FFFF000000000000H:

DEST ← (DEST AND NOT MASK) OR (((SRC << (SEL \* 16)) AND MASK);

PINSRW instruction with 128-bit source operand:

SEL  $\leftarrow$  COUNT AND 7H;

CASE (Determine word position) OF

SEL  $\leftarrow$  2: MASK  $\leftarrow$  0000000000000000000FFFF000000000H;

### Intel C/C++ Compiler Intrinsic Equivalent

```
PINSRW __m64 _mm_insert_pi16 (__m64 a, int d, int n)
PINSRW __m128i _mm_insert_epi16 ( __m128i a, int b, int imm)
```

### **Flags Affected**

None.

# **Numeric Exceptions**

None.

### **Protected Mode Exceptions**

#GP(0) If a memory operand effective address is outside the CS, DS,

ES, FS, or GS segment limit.

#SS(0) If a memory operand effective address is outside the SS

segment limit.

#UD If CR0.EM[bit 2] = 1.

(128-bit operations only) If CR4.OSFXSR[bit 9] = 0. Execution of 128-bit instructions on a non-SSE2 capable processor (one that is MMX technology capable) will result in the instruction

operating on the mm registers, not #UD.

If the LOCK prefix is used.

#NM If CR0.TS[bit 3] = 1.

#MF (64-bit operations only) If there is a pending x87 FPU exception.

#PF(fault-code) If a page fault occurs.

#AC(0) (64-bit operations only) If alignment checking is enabled and an

unaligned memory reference is made while the current privilege

level is 3.

#### **Real-Address Mode Exceptions**

#GP If any part of the operand lies outside of the effective address

space from 0 to FFFFH.

#UD If CR0.EM[bit 2] = 1.

(128-bit operations only) If CR4.OSFXSR[bit 9] = 0. Execution of 128-bit instructions on a non-SSE2 capable processor (one

that is MMX technology capable) will result in the instruction

operating on the mm registers, not #UD.

If the LOCK prefix is used.

#NM If CR0.TS[bit 3] = 1.

#MF (64-bit operations only) If there is a pending x87 FPU exception.

#### Virtual-8086 Mode Exceptions

Same exceptions as in real address mode.

#PF(fault-code) For a page fault.

#AC(0) (64-bit operations only) If alignment checking is enabled and an

unaligned memory reference is made.

# **64-Bit Mode Exceptions**

#SS(0) If a memory address referencing the SS segment is in a non-

canonical form.

#GP(0) If the memory address is in a non-canonical form.

#UD If CR0.EM[bit 2] = 1.

(128-bit operations only) If CR4.OSFXSR[bit 9] = 0.

(128-bit operations only) If CPUID.01H:EDX.SSE2[bit 26] = 0.

If the LOCK prefix is used.

#NM If CR0.TS[bit 3] = 1.

#MF (64-bit operations only) If there is a pending x87 FPU exception.

#PF(fault-code) If a page fault occurs.

#AC(0) If alignment checking is enabled and an unaligned memory

reference is made while the current privilege level is 3.

# PMADDUBSW — Multiply and Add Packed Signed and Unsigned Bytes

Opcode	Instruction	64-Bit Mode	Compat/ Leg Mode	Description
OF 38 04 /r	PMADDUBSW mm1, mm2/m64	Valid	Valid	Multiply signed and unsigned bytes, add horizontal pair of signed words, pack saturated signed-words to MM1.
66 OF 38 O4 /r	PMADDUBSW xmm1, xmm2/m128	Valid	Valid	Multiply signed and unsigned bytes, add horizontal pair of signed words, pack saturated signed-words to XMM1.

### **Description**

PMADDUBSW multiplies vertically each unsigned byte of the destination operand (first operand) with the corresponding signed byte of the source operand (second operand), producing intermediate signed 16-bit integers. Each adjacent pair of signed words is added and the saturated result is packed to the destination operand. For example, the lowest-order bytes (bits 7-0) in the source and destination operands are multiplied and the intermediate signed word result is added with the corresponding intermediate result from the 2nd lowest-order bytes (bits 15-8) of the operands; the sign-saturated result is stored in the lowest word of the destination register (15-0). The same operation is performed on the other pairs of adjacent bytes. Both operands can be MMX register or XMM registers. When the source operand is a 128-bit memory operand, the operand must be aligned on a 16-byte boundary or a general-protection exception (#GP) will be generated.

In 64-bit mode, use the REX prefix to access additional registers.

## **Operation**

PMADDUBSW with 64 bit operands:

```
DEST[15-0] = SaturateToSignedWord(SRC[15-8]*DEST[15-8]+SRC[7-0]*DEST[7-0]);
DEST[31-16] = SaturateToSignedWord(SRC[31-24]*DEST[31-24]+SRC[23-16]*DEST[23-16]);
DEST[47-32] = SaturateToSignedWord(SRC[47-40]*DEST[47-40]+SRC[39-32]*DEST[39-32]);
DEST[63-48] = SaturateToSignedWord(SRC[63-56]*DEST[63-56]+SRC[55-48]*DEST[55-48]);
```

PMADDUBSW with 128 bit operands:

```
DEST[15-0] = SaturateToSignedWord(SRC[15-8]* DEST[15-8]+SRC[7-0]*DEST[7-0]); // Repeat operation for 2nd through 7th word
```

SRC1/DEST[127-112] = SaturateToSignedWord(SRC[127-120]\*DEST[127-120]+ SRC[119-112]\* DEST[119-112]);

### Intel C/C++ Compiler Intrinsic Equivalents

PMADDUBSW \_\_m64 \_mm\_maddubs\_pi16 (\_\_m64 a, \_\_m64 b)

PMADDUBSW \_\_m128i \_mm\_maddubs\_epi16 (\_\_m128i a, \_\_m128i b)

### **Protected Mode Exceptions**

#GP(0) If a memory operand effective address is outside the CS, DS,

ES, FS or GS segments.

(128-bit operations only) If not aligned on 16-byte boundary,

regardless of segment.

#SS(0) If a memory operand effective address is outside the SS

segment limit.

#PF(fault-code) If a page fault occurs.

#UD If CR0.EM = 1.

If CR4.OSFXSR(bit 9) = 0 (128-bit operations only)

If CPUID.SSSE3(ECX bit 9) = 0.

If the LOCK prefix is used.

#NM If TS bit in CR0 is set.

#MF (64-bit operations only) If there is a pending x87 FPU exception.

#AC(0) (64-bit operations only) If alignment checking is enabled and

unaligned memory reference is made while the current privilege

level is 3.

### **Real Mode Exceptions**

#GP(0) If any part of the operand lies outside of the effective address

space from 0 to 0FFFFH.

(128-bit operations only) If not aligned on 16-byte boundary,

regardless of segment.

#UD If CR0.EM = 1.

(128-bit operations only) If CR4.OSFXSR(bit 9) = 0.

If CPUID.SSSE3(ECX bit 9) = 0.

If the LOCK prefix is used.

#NM If TS bit in CR0 is set.

#MF (64-bit operations only) If there is a pending x87 FPU exception.

### Virtual 8086 Mode Exceptions

Same exceptions as in real address mode.

#PF(fault-code) If a page fault occurs.

#AC(0) (64-bit operations only) If alignment checking is enabled and

unaligned memory reference is made.

## **Compatibility Mode Exceptions**

Same as for protected mode exceptions.

## **64-Bit Mode Exceptions**

#SS(0) If a memory address referencing the SS segment is in a non-

canonical form.

#GP(0) If the memory address is in a non-canonical form.

(128-bit operations only) If memory operand is not aligned on a

16-byte boundary, regardless of segment.

#UD If CR0.EM[bit 2] = 1.

(128-bit operations only) If CR4.OSFXSR[bit 9] = 0.

If CPUID.01H:ECX.SSSE3[bit 9] = 0.

If the LOCK prefix is used.

#NM If CR0.TS[bit 3] = 1.

#MF (64-bit operations only) If there is a pending x87 FPU exception.

#PF(fault-code) If a page fault occurs.

#AC(0) (64-bit operations only) If alignment checking is enabled and an

unaligned memory reference is made while the current privilege

level is 3.

# PMADDWD—Multiply and Add Packed Integers

Opcode	Instruction	64-Bit Mode	Compat/ Leg Mode	Description
0F F5 /r	PMADDWD mm, mm/m64	Valid	Valid	Multiply the packed words in <i>mm</i> by the packed words in <i>mm/m64</i> , add adjacent doubleword results, and store in <i>mm</i> .
66 0F F5 /r	PMADDWD xmm1, xmm2/m128	Valid	Valid	Multiply the packed word integers in xmm1 by the packed word integers in xmm2/m128, add adjacent doubleword results, and store in xmm1.

### **Description**

Multiplies the individual signed words of the destination operand (first operand) by the corresponding signed words of the source operand (second operand), producing temporary signed, doubleword results. The adjacent doubleword results are then summed and stored in the destination operand. For example, the corresponding low-order words (15-0) and (31-16) in the source and destination operands are multiplied by one another and the doubleword results are added together and stored in the low doubleword of the destination register (31-0). The same operation is performed on the other pairs of adjacent words. (Figure 4-2 shows this operation when using 64-bit operands.) The source operand can be an MMX technology register or a 64-bit memory location, or it can be an XMM register or a 128-bit memory location. The destination operand can be an MMX technology register.

The PMADDWD instruction wraps around only in one situation: when the 2 pairs of words being operated on in a group are all 8000H. In this case, the result wraps around to 80000000H.

In 64-bit mode, using a REX prefix in the form of REX.R permits this instruction to access additional registers (XMM8-XMM15).

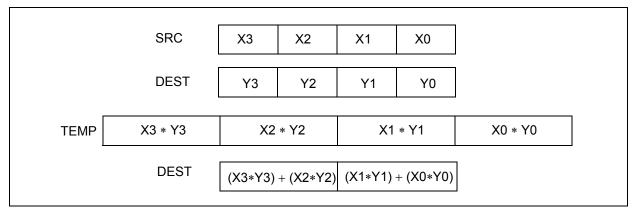


Figure 4-2. PMADDWD Execution Model Using 64-bit Operands

### **Operation**

```
PMADDWD instruction with 64-bit operands:

DEST[31:0] ← (DEST[15:0] * SRC[15:0]) + (DEST[31:16] * SRC[31:16]);

DEST[63:32] ← (DEST[47:32] * SRC[47:32]) + (DEST[63:48] * SRC[63:48]);

PMADDWD instruction with 128-bit operands:

DEST[31:0] ← (DEST[15:0] * SRC[15:0]) + (DEST[31:16] * SRC[31:16]);

DEST[63:32] ← (DEST[47:32] * SRC[47:32]) + (DEST[63:48] * SRC[63:48]);

DEST[95:64] ← (DEST[79:64] * SRC[79:64]) + (DEST[95:80] * SRC[95:80]);

DEST[127:96] ← (DEST[111:96] * SRC[111:96]) + (DEST[127:112] * SRC[127:112]);
```

# Intel C/C++ Compiler Intrinsic Equivalent

```
PMADDWD __m64 _mm_madd_pi16(__m64 m1, __m64 m2)
PMADDWD __m128i _mm_madd_epi16 ( __m128i a, __m128i b)
```

# **Flags Affected**

None.

# **Numeric Exceptions**

None.

# **Protected Mode Exceptions**

#GP(0)

If a memory operand effective address is outside the CS, DS, ES, FS, or GS segment limit.

(128-bit operations only) If a memory operand is not aligned on a 16-byte boundary, regardless of segment.

#SS(0) If a memory operand effective address is outside the SS

segment limit.

#UD If CR0.EM[bit 2] = 1.

128-bit operations will generate #UD only if CR4.OSFXSR[bit 9] = 0. Execution of 128-bit instructions on a non-SSE2 capable processor (one that is MMX technology capable) will result in the

instruction operating on the mm registers, not #UD.

If the LOCK prefix is used.

#NM If CR0.TS[bit 3] = 1.

#MF (64-bit operations only) If there is a pending x87 FPU exception.

#PF(fault-code) If a page fault occurs.

#AC(0) (64-bit operations only) If alignment checking is enabled and an

unaligned memory reference is made while the current privilege

level is 3.

### **Real-Address Mode Exceptions**

#GP (128-bit operations only) If a memory operand is not aligned on

a 16-byte boundary, regardless of segment.

If any part of the operand lies outside of the effective address

space from 0 to FFFFH.

#UD If CR0.EM[bit 2] = 1.

128-bit operations will generate #UD only if CR4.OSFXSR[bit 9] = 0. Execution of 128-bit instructions on a non-SSE2 capable processor (one that is MMX technology capable) will result in the

instruction operating on the mm registers, not #UD.

If the LOCK prefix is used.

#NM If CR0.TS[bit 3] = 1.

#MF (64-bit operations only) If there is a pending x87 FPU exception.

#### Virtual-8086 Mode Exceptions

Same exceptions as in real address mode.

#PF(fault-code) For a page fault.

#AC(0) (64-bit operations only) If alignment checking is enabled and an

unaligned memory reference is made.

# **Compatibility Mode Exceptions**

Same as for protected mode exceptions.

#### **64-Bit Mode Exceptions**

#SS(0) If a memory address referencing the SS segment is in a non-

canonical form.

#### INSTRUCTION SET REFERENCE, N-Z

#GP(0) If the memory address is in a non-canonical form.

(128-bit operations only) If memory operand is not aligned on a

16-byte boundary, regardless of segment.

#UD If CR0.EM[bit 2] = 1.

(128-bit operations only) If CR4.OSFXSR[bit 9] = 0.

(128-bit operations only) If CPUID.01H:EDX.SSE2[bit 26] = 0.

If the LOCK prefix is used.

#NM If CR0.TS[bit 3] = 1.

#MF (64-bit operations only) If there is a pending x87 FPU exception.

#PF(fault-code) If a page fault occurs.

#AC(0) (64-bit operations only) If alignment checking is enabled and an

unaligned memory reference is made while the current privilege

level is 3.

# PMAXSB — Maximum of Packed Signed Byte Integers

Opcode	Instruction	64-bit Mode	Compat/ Leg Mode	Description
66 OF 38 3C /r	PMAXSB xmm1, xmm2/m128	Valid	Valid	Compare packed signed byte integers in <i>xmm1</i> and <i>xmm2/m128</i> and store packed maximum values in <i>xmm1</i> .

#### **Description**

Compares packed signed byte integers in the destination operand (first operand) and the source operand (second operand), and returns the maximum for each packed value in the destination operand.

## **Operation**

```
IF (DEST[7:0] > SRC[7:0])
    THEN DEST[7:0] \leftarrow DEST[7:0];
   ELSE DEST[7:0] \leftarrow SRC[7:0]; FI;
IF (DEST[15:8] > SRC[15:8])
    THEN DEST[15:8] \leftarrow DEST[15:8];
   ELSE DEST[15:8] \leftarrow SRC[15:8]; FI;
IF (DEST[23:16] > SRC[23:16])
    THEN DEST[23:16] \leftarrow DEST[23:16];
    ELSE DEST[23:16] \leftarrow SRC[23:16]; FI;
IF (DEST[31:24] > SRC[31:24])
    THEN DEST[31:24] \leftarrow DEST[31:24];
   ELSE DEST[31:24] \leftarrow SRC[31:24]; FI;
IF (DEST[39:32] > SRC[39:32])
    THEN DEST[39:32] \leftarrow DEST[39:32];
   ELSE DEST[39:32] \leftarrow SRC[39:32]; FI;
IF (DEST[47:40] > SRC[47:40])
    THEN DEST[47:40] \leftarrow DEST[47:40];
   ELSE DEST[47:40] \leftarrow SRC[47:40]; FI;
IF (DEST[55:48] > SRC[55:48])
    THEN DEST[55:48] \leftarrow DEST[55:48];
   ELSE DEST[55:48] \leftarrow SRC[55:48]; FI;
IF (DEST[63:56] > SRC[63:56])
    THEN DEST[63:56] \leftarrow DEST[63:56];
   ELSE DEST[63:56] \leftarrow SRC[63:56]; FI;
IF (DEST[71:64] > SRC[71:64])
    THEN DEST[71:64] \leftarrow DEST[71:64];
```

```
ELSE DEST[71:64] \leftarrow SRC[71:64]; FI;
IF (DEST[79:72] > SRC[79:72])
   THEN DEST[79:72] \leftarrow DEST[79:72];
   ELSE DEST[79:72] \leftarrow SRC[79:72]; FI;
IF (DEST[87:80] > SRC[87:80])
   THEN DEST[87:80] \leftarrow DEST[87:80];
   ELSE DEST[87:80] \leftarrow SRC[87:80]; FI;
IF (DEST[95:88] > SRC[95:88])
   THEN DEST[95:88] \leftarrow DEST[95:88];
   ELSE DEST[95:88] ← SRC[95:88]; FI;
IF (DEST[103:96] > SRC[103:96])
   THEN DEST[103:96] \leftarrow DEST[103:96];
   ELSE DEST[103:96] \leftarrow SRC[103:96]; FI;
IF (DEST[111:104] > SRC[111:104])
   THEN DEST[111:104] \leftarrow DEST[111:104];
   ELSE DEST[111:104] \leftarrow SRC[111:104]; FI;
IF (DEST[119:112] > SRC[119:112])
   THEN DEST[119:112] \leftarrow DEST[119:112];
   ELSE DEST[119:112] \leftarrow SRC[119:112]; FI;
IF (DEST[127:120] > SRC[127:120])
   THEN DEST[127:120] \leftarrow DEST[127:120];
   ELSE DEST[127:120] \leftarrow SRC[127:120]; FI;
```

## Intel C/C++ Compiler Intrinsic Equivalent

PMAXSB \_\_m128i \_mm\_max\_epi8 ( \_\_m128i a, \_\_m128i b);

# Flags Affected

None

# **Protected Mode Exceptions**

#GP(0) For an illegal memory operand effective address in the CS, DS,

ES, FS, or GS segments.

If a memory operand is not aligned on a 16-byte boundary,

regardless of segment.

#SS(0) For an illegal address in the SS segment.

#PF(fault-code) For a page fault. #NM If CR0.TS[bit 3] = 1. #UD If CR0.EM[bit 2] = 1.

If CR4.OSFXSR[bit 9] = 0.

If CPUID.01H:ECX.SSE4 1[bit 19] = 0.

If LOCK prefix is used.

Either the prefix REP (F3h) or REPN (F2H) is used.

### Real Mode Exceptions

#GP(0) If any part of the operand lies outside of the effective address

space from 0 to 0FFFFH.

If a memory operand is not aligned on a 16-byte boundary,

regardless of segment.

#NM If CR0.TS[bit 3] = 1. #UD If CR0.EM[bit 2] = 1.

If CR4.OSFXSR[bit 9] = 0.

If  $CPUID.01H:ECX.SSE4_1[bit 19] = 0$ .

If LOCK prefix is used.

Either the prefix REP (F3h) or REPN (F2H) is used.

## Virtual 8086 Mode Exceptions

Same exceptions as in Real Address Mode.

#PF(fault-code) For a page fault.

# **Compatibility Mode Exceptions**

Same exceptions as in Protected Mode.

#### **64-Bit Mode Exceptions**

#GP(0) If the memory address is in a non-canonical form.

If a memory operand is not aligned on a 16-byte boundary,

regardless of segment.

#SS(0) If a memory address referencing the SS segment is in a non-

canonical form.

#PF(fault-code) For a page fault.

#NM If TS in CR0 is set.

#UD If EM in CR0 is set.

If OSFXSR in CR4 is 0.

If CPUID feature flag ECX.SSE4\_1 is 0.

If LOCK prefix is used.

Either the prefix REP (F3h) or REPN (F2H) is used.

# PMAXSD — Maximum of Packed Signed Dword Integers

Opcode	Instruction	64-bit Mode	Compat/ Leg Mode	Description
66 OF 38 3D /r	PMAXSD xmm1, xmm2/m128	Valid	Valid	Compare packed signed dword integers in xmm1 and xmm2/m128 and store packed maximum values in xmm1.

# **Description**

Compares packed signed dword integers in the destination operand (first operand) and the source operand (second operand), and returns the maximum for each packed value in the destination operand.

## **Operation**

```
IF (DEST[31:0] > SRC[31:0])

THEN DEST[31:0] ← DEST[31:0];

ELSE DEST[31:0] ← SRC[31:0]; FI;

IF (DEST[63:32] > SRC[63:32])

THEN DEST[63:32] ← DEST[63:32]; FI;

ELSE DEST[63:32] ← SRC[63:32]; FI;

IF (DEST[95:64] > SRC[95:64])

THEN DEST[95:64] ← DEST[95:64]; ELSE DEST[95:64] ← SRC[95:64]; FI;

IF (DEST[127:96] > SRC[127:96])

THEN DEST[127:96] ← DEST[127:96]; FI;

ELSE DEST[127:96] ← SRC[127:96]; FI;
```

# Intel C/C++ Compiler Intrinsic Equivalent

```
PMAXSD __m128i _mm_max_epi32 ( __m128i a, __m128i b);
```

#### **Flags Affected**

None

# **Protected Mode Exceptions**

#GP(0)	For an illegal memory operand effective address in the CS, DS, ES, FS, or GS segments.
	If a memory operand is not aligned on a 16-byte boundary, regardless of segment.
#SS(0)	For an illegal address in the SS segment.

#PF(fault-code) For a page fault.

#NM If CR0.TS[bit 3] = 1. #UD If CR0.EM[bit 2] = 1.

If CR4.OSFXSR[bit 9] = 0.

If CPUID.01H:  $ECX.SSE4_1[bit 19] = 0$ .

If LOCK prefix is used.

Either the prefix REP (F3h) or REPN (F2H) is used.

# **Real Mode Exceptions**

#GP(0) if any part of the operand lies outside of the effective address

space from 0 to 0FFFFH.

If a memory operand is not aligned on a 16-byte boundary,

regardless of segment.

#NM If CR0.TS[bit 3] = 1. #UD If CR0.EM[bit 2] = 1.

If CR4.OSFXSR[bit 9] = 0.

If  $CPUID.01H:ECX.SSE4_1[bit 19] = 0$ .

If LOCK prefix is used.

Either the prefix REP (F3h) or REPN (F2H) is used.

### Virtual 8086 Mode Exceptions

Same exceptions as in Real Address Mode.

#PF(fault-code) For a page fault.

# **Compatibility Mode Exceptions**

Same exceptions as in Protected Mode.

## **64-Bit Mode Exceptions**

#GP(0) If the memory address is in a non-canonical form.

If a memory operand is not aligned on a 16-byte boundary,

regardless of segment.

#SS(0) If a memory address referencing the SS segment is in a non-

canonical form.

#PF(fault-code) For a page fault.

#NM If TS in CR0 is set.

#UD If EM in CR0 is set.

If OSFXSR in CR4 is 0.

If CPUID feature flag ECX.SSE4\_1 is 0.

If LOCK prefix is used.

Either the prefix REP (F3h) or REPN (F2H) is used.

# PMAXSW—Maximum of Packed Signed Word Integers

Opcode	Instruction	64-Bit Mode	Compat/ Leg Mode	Description
OF EE /r	PMAXSW mm1, mm2/m64	Valid	Valid	Compare signed word integers in mm2/m64 and mm1 and return maximum values.
66 OF EE /r	PMAXSW xmm1, xmm2/m128	Valid	Valid	Compare signed word integers in xmm2/m128 and xmm1 and return maximum values.

## **Description**

Performs a SIMD compare of the packed signed word integers in the destination operand (first operand) and the source operand (second operand), and returns the maximum value for each pair of word integers to the destination operand. The source operand can be an MMX technology register or a 64-bit memory location, or it can be an XMM register or a 128-bit memory location. The destination operand can be an MMX technology register or an XMM register.

In 64-bit mode, using a REX prefix in the form of REX.R permits this instruction to access additional registers (XMM8-XMM15).

# Operation

```
PMAXSW instruction for 64-bit operands:
   IF DEST[15:0] > SRC[15:0]) THEN
        DEST[15:0] \leftarrow DEST[15:0];
   ELSE
        DEST[15:0] \leftarrow SRC[15:0]; FI;
   (* Repeat operation for 2nd and 3rd words in source and destination operands *)
   IF DEST[63:48] > SRC[63:48]) THEN
        DEST[63:48] \leftarrow DEST[63:48];
   ELSE
        DEST[63:48] \leftarrow SRC[63:48]; FI;
PMAXSW instruction for 128-bit operands:
   IF DEST[15:0] > SRC[15:0]) THEN
        DEST[15:0] \leftarrow DEST[15:0];
   ELSE
        DEST[15:0] \leftarrow SRC[15:0]; FI;
   (* Repeat operation for 2nd through 7th words in source and destination operands *)
   IF DEST[127:112] > SRC[127:112]) THEN
        DEST[127:112] \leftarrow DEST[127:112];
   ELSE
```

DEST[127:112]  $\leftarrow$  SRC[127:112]; FI;

### Intel C/C++ Compiler Intrinsic Equivalent

PMAXSW \_\_m64 \_mm\_max\_pi16(\_\_m64 a, \_\_m64 b)

PMAXSW \_\_m128i \_mm\_max\_epi16 ( \_\_m128i a, \_\_m128i b)

#### **Flags Affected**

None.

## **Numeric Exceptions**

None.

### **Protected Mode Exceptions**

#GP(0) If a memory operand effective address is outside the CS, DS,

ES, FS, or GS segment limit.

(128-bit operations only) If a memory operand is not aligned on

a 16-byte boundary, regardless of segment.

#SS(0) If a memory operand effective address is outside the SS

segment limit.

#UD If CR0.EM[bit 2] = 1.

(128-bit operations only) If CR4.OSFXSR[bit 9] = 0. Execution of 128-bit instructions on a non-SSE2 capable processor (one that is MMX technology capable) will result in the instruction

operating on the mm registers, not #UD.

If the LOCK prefix is used.

#NM If CR0.TS[bit 3] = 1.

#MF (64-bit operations only) If there is a pending x87 FPU exception.

#PF(fault-code) If a page fault occurs.

#AC(0) (64-bit operations only) If alignment checking is enabled and an

unaligned memory reference is made while the current privilege

level is 3.

#### **Real-Address Mode Exceptions**

#GP (128-bit operations only) If a memory operand is not aligned on

a 16-byte boundary, regardless of segment.

If any part of the operand lies outside of the effective address

space from 0 to FFFFH.

#UD If CR0.EM[bit 2] = 1.

(128-bit operations only) If CR4.OSFXSR[bit 9] = 0. Execution of 128-bit instructions on a non-SSE2 capable processor (one that is MMX technology capable) will result in the instruction

operating on the mm registers, not #UD.

If the LOCK prefix is used.

#NM If CR0.TS[bit 3] = 1.

#MF (64-bit operations only) If there is a pending x87 FPU exception.

## Virtual-8086 Mode Exceptions

Same exceptions as in real address mode.

#PF(fault-code) For a page fault.

#AC(0) (64-bit operations only) If alignment checking is enabled and an

unaligned memory reference is made.

## **Compatibility Mode Exceptions**

Same as for protected mode exceptions.

### **64-Bit Mode Exceptions**

#SS(0) If a memory address referencing the SS segment is in a non-

canonical form.

#GP(0) If the memory address is in a non-canonical form.

(128-bit operations only) If memory operand is not aligned on a

16-byte boundary, regardless of segment.

#UD If CR0.EM[bit 2] = 1.

(128-bit operations only) If CR4.OSFXSR[bit 9] = 0.

(128-bit operations only) If CPUID.01H:EDX.SSE2[bit 26] = 0.

If the LOCK prefix is used.

#NM If CR0.TS[bit 3] = 1.

#MF (64-bit operations only) If there is a pending x87 FPU exception.

#PF(fault-code) If a page fault occurs.

#AC(0) (64-bit operations only) If alignment checking is enabled and an

unaligned memory reference is made while the current privilege

level is 3.

# PMAXUB—Maximum of Packed Unsigned Byte Integers

Opcode	Instruction	64-Bit Mode	Compat/ Leg Mode	Description
OF DE /r	PMAXUB mm1, mm2/m64	Valid	Valid	Compare unsigned byte integers in <i>mm2/m64</i> and <i>mm1</i> and returns maximum values.
66 OF DE /r	PMAXUB xmm1, xmm2/m128	Valid	Valid	Compare unsigned byte integers in <i>xmm2/m128</i> and <i>xmm1</i> and returns maximum values.

## **Description**

Performs a SIMD compare of the packed unsigned byte integers in the destination operand (first operand) and the source operand (second operand), and returns the maximum value for each pair of byte integers to the destination operand. The source operand can be an MMX technology register or a 64-bit memory location, or it can be an XMM register or a 128-bit memory location. The destination operand can be an MMX technology register or an XMM register.

In 64-bit mode, using a REX prefix in the form of REX.R permits this instruction to access additional registers (XMM8-XMM15).

```
PMAXUB instruction for 64-bit operands:
   IF DEST[7:0] > SRC[17:0]) THEN
        DEST[7:0] \leftarrow DEST[7:0];
   ELSE
        DEST[7:0] \leftarrow SRC[7:0]; FI;
   (* Repeat operation for 2nd through 7th bytes in source and destination operands *)
   IF DEST[63:56] > SRC[63:56]) THEN
        DEST[63:56] \leftarrow DEST[63:56];
   ELSE
        DEST[63:56] \leftarrow SRC[63:56]; FI;
PMAXUB instruction for 128-bit operands:
   IF DEST[7:0] > SRC[17:0]) THEN
        DEST[7:0] \leftarrow DEST[7:0];
   ELSE
        DEST[7:0] \leftarrow SRC[7:0]; FI;
   (* Repeat operation for 2nd through 15th bytes in source and destination operands *)
   IF DEST[127:120] > SRC[127:120]) THEN
        DEST[127:120] \leftarrow DEST[127:120];
```

**ELSE** 

DEST[127:120]  $\leftarrow$  SRC[127:120]; FI;

### Intel C/C++ Compiler Intrinsic Equivalent

PMAXUB \_\_m64 \_mm\_max\_pu8(\_\_m64 a, \_\_m64 b)

PMAXUB \_\_m128i \_mm\_max\_epu8 ( \_\_m128i a, \_\_m128i b)

### Flags Affected

None.

### **Numeric Exceptions**

None.

### **Protected Mode Exceptions**

#GP(0) If a memory operand effective address is outside the CS, DS,

ES, FS, or GS segment limit.

(128-bit operations only) If a memory operand is not aligned on

a 16-byte boundary, regardless of segment.

#SS(0) If a memory operand effective address is outside the SS

segment limit.

#UD If CR0.EM[bit 2] = 1.

(128-bit operations only) If CR4.OSFXSR[bit 9] = 0. Execution of 128-bit instructions on a non-SSE2 capable processor (one that is MMX technology capable) will result in the instruction

operating on the mm registers, not #UD.

If the LOCK prefix is used.

#NM If CR0.TS[bit 3] = 1.

#MF (64-bit operations only) If there is a pending x87 FPU exception.

#PF(fault-code) If a page fault occurs.

#AC(0) (64-bit operations only) If alignment checking is enabled and an

unaligned memory reference is made while the current privilege

level is 3.

### **Real-Address Mode Exceptions**

#GP (128-bit operations only) If a memory operand is not aligned on

a 16-byte boundary, regardless of segment.

If any part of the operand lies outside of the effective address

space from 0 to FFFFH.

#UD If CR0.EM[bit 2] = 1.

(128-bit operations only) If CR4.OSFXSR[bit 9] = 0. Execution of 128-bit instructions on a non-SSE2 capable processor (one that is MMX technology capable) will result in the instruction

operating on the mm registers, not #UD.

If the LOCK prefix is used.

#NM If CR0.TS[bit 3] = 1.

#MF (64-bit operations only) If there is a pending x87 FPU exception.

## Virtual-8086 Mode Exceptions

Same exceptions as in real address mode.

#PF(fault-code) For a page fault.

#AC(0) (64-bit operations only) If alignment checking is enabled and an

unaligned memory reference is made.

## **Compatibility Mode Exceptions**

Same as for protected mode exceptions.

### **64-Bit Mode Exceptions**

#SS(0) If a memory address referencing the SS segment is in a non-

canonical form.

#GP(0) If the memory address is in a non-canonical form.

(128-bit operations only) If memory operand is not aligned on a

16-byte boundary, regardless of segment.

#UD If CR0.EM[bit 2] = 1.

(128-bit operations only) If CR4.OSFXSR[bit 9] = 0.

(128-bit operations only) If CPUID.01H:EDX.SSE2[bit 26] = 0.

If the LOCK prefix is used.

#NM If CR0.TS[bit 3] = 1.

#MF (64-bit operations only) If there is a pending x87 FPU exception.

#PF(fault-code) If a page fault occurs.

#AC(0) (64-bit operations only) If alignment checking is enabled and an

unaligned memory reference is made while the current privilege

level is 3.

# PMAXUD — Maximum of Packed Unsigned Dword Integers

Opcode	Instruction	64-bit Mode	Compat/ Leg Mode	Description
66 0F 38 3F /r	PMAXUD xmm1, xmm2/m128	Valid	Valid	Compare packed unsigned dword integers in xmm1 and xmm2/m128 and store packed maximum values in xmm1.

## **Description**

Compares packed unsigned dword integers in the destination operand (first operand) and the source operand (second operand), and returns the maximum for each packed value in the destination operand.

## **Operation**

```
IF (DEST[31:0] > SRC[31:0])

THEN DEST[31:0] ← DEST[31:0];

ELSE DEST[31:0] ← SRC[31:0]; FI;

IF (DEST[63:32] > SRC[63:32])

THEN DEST[63:32] ← DEST[63:32]; FI;

ELSE DEST[63:32] ← SRC[63:32]; FI;

IF (DEST[95:64] > SRC[95:64])

THEN DEST[95:64] ← DEST[95:64]; ELSE DEST[95:64] ← SRC[95:64]; FI;

IF (DEST[127:96] > SRC[127:96])

THEN DEST[127:96] ← DEST[127:96]; ELSE DEST[127:96]; FI;
```

## Intel C/C++ Compiler Intrinsic Equivalent

```
PMAXUD __m128i _mm_max_epu32 ( __m128i a, __m128i b);
```

#### Flags Affected

None

# **Protected Mode Exceptions**

#GP(0) For an illegal memory operand effective address in the CS, DS,

ES, FS, or GS segments.

If a memory operand is not aligned on a 16-byte boundary,

regardless of segment.

#### INSTRUCTION SET REFERENCE, N-Z

#SS(0) For an illegal address in the SS segment.

#PF(fault-code) For a page fault. #NM If CR0.TS[bit 3] = 1. #UD If CR0.EM[bit 2] = 1.

If CR4.OSFXSR[bit 9] = 0.

If  $CPUID.01H:ECX.SSE4_1[bit 19] = 0$ .

If LOCK prefix is used.

Either the prefix REP (F3h) or REPN (F2H) is used.

## **Real Mode Exceptions**

#GP(0) if any part of the operand lies outside of the effective address

space from 0 to 0FFFFH.

If a memory operand is not aligned on a 16-byte boundary,

regardless of segment.

#NM If CR0.TS[bit 3] = 1. #UD If CR0.EM[bit 2] = 1.

If CR4.OSFXSR[bit 9] = 0.

If  $CPUID.01H:ECX.SSE4_1[bit 19] = 0$ .

If LOCK prefix is used.

Either the prefix REP (F3h) or REPN (F2H) is used.

## Virtual 8086 Mode Exceptions

Same exceptions as in Real Address Mode.

#PF(fault-code) For a page fault.

### **Compatibility Mode Exceptions**

Same exceptions as in Protected Mode.

### **64-Bit Mode Exceptions**

#GP(0) If the memory address is in a non-canonical form.

If a memory operand is not aligned on a 16-byte boundary,

regardless of segment.

#SS(0) If a memory address referencing the SS segment is in a non-

canonical form.

#PF(fault-code) For a page fault.
#NM If TS in CR0 is set.

**#UD** If EM in CR0 is set.

If OSFXSR in CR4 is 0.

If CPUID feature flag ECX.SSE4\_1 is 0.

If LOCK prefix is used.

Either the prefix REP (F3h) or REPN (F2H) is used.

# PMAXUW — Maximum of Packed Word Integers

Opcode	Instruction	Compat/ Leg Mode	64-bit Mode	Description
66 OF 38 3E /r	PMAXUW xmm1, xmm2/m128	Valid	Valid	Compare packed unsigned word integers in xmm1 and xmm2/m128 and store packed maximum values in xmm1.

### **Description**

Compares packed unsigned word integers in the destination operand (first operand) and the source operand (second operand), and returns the maximum for each packed value in the destination operand.

```
IF (DEST[15:0] > SRC[15:0])
   THEN DEST[15:0] \leftarrow DEST[15:0];
   ELSE DEST[15:0] \leftarrow SRC[15:0]; FI;
IF (DEST[31:16] > SRC[31:16])
   THEN DEST[31:16] \leftarrow DEST[31:16];
   ELSE DEST[31:16] \leftarrow SRC[31:16]; FI;
IF (DEST[47:32] > SRC[47:32])
   THEN DEST[47:32] \leftarrow DEST[47:32];
   ELSE DEST[47:32] \leftarrow SRC[47:32]; FI;
IF (DEST[63:48] > SRC[63:48])
   THEN DEST[63:48] \leftarrow DEST[63:48];
   ELSE DEST[63:48] \leftarrow SRC[63:48]; FI;
IF (DEST[79:64] > SRC[79:64])
   THEN DEST[79:64] \leftarrow DEST[79:64];
   ELSE DEST[79:64] \leftarrow SRC[79:64]; FI;
IF (DEST[95:80] > SRC[95:80])
   THEN DEST[95:80] \leftarrow DEST[95:80];
   ELSE DEST[95:80] \leftarrow SRC[95:80]; FI;
IF (DEST[111:96] > SRC[111:96])
   THEN DEST[111:96] \leftarrow DEST[111:96];
   ELSE DEST[111:96] \leftarrow SRC[111:96]; FI;
IF (DEST[127:112] > SRC[127:112])
   THEN DEST[127:112] \leftarrow DEST[127:112];
   ELSE DEST[127:112] \leftarrow SRC[127:112]; FI;
```

### Intel C/C++ Compiler Intrinsic Equivalent

PMAXUW\_\_m128i \_mm\_max\_epu16 ( \_\_m128i a, \_\_m128i b);

### **Flags Affected**

None

### **Protected Mode Exceptions**

#GP(0) For an illegal memory operand effective address in the CS, DS,

ES, FS, or GS segments.

If a memory operand is not aligned on a 16-byte boundary,

regardless of segment.

#SS(0) For an illegal address in the SS segment.

#PF(fault-code) For a page fault.
#NM If CR0.TS[bit 3] = 1.
#UD If CR0.EM[bit 2] = 1.

If CR4.OSFXSR[bit 9] = 0.

If CPUID.01H:  $ECX.SSE4_1[bit 19] = 0$ .

If LOCK prefix is used.

Either the prefix REP (F3h) or REPN (F2H) is used.

# Real Mode Exceptions

#GP(0) if any part of the operand lies outside of the effective address

space from 0 to 0FFFFH.

If a memory operand is not aligned on a 16-byte boundary,

regardless of segment.

#NM If CR0.TS[bit 3] = 1. #UD If CR0.EM[bit 2] = 1.

If CR4.OSFXSR[bit 9] = 0.

If CPUID.01H:  $ECX.SSE4_1[bit 19] = 0$ .

If LOCK prefix is used.

Either the prefix REP (F3h) or REPN (F2H) is used.

### Virtual 8086 Mode Exceptions

Same exceptions as in Real Address Mode.

#PF(fault-code) For a page fault.

### **Compatibility Mode Exceptions**

Same exceptions as in Protected Mode.

## **64-Bit Mode Exceptions**

#GP(0) If the memory address is in a non-canonical form.

If a memory operand is not aligned on a 16-byte boundary,

regardless of segment.

#SS(0) If a memory address referencing the SS segment is in a non-

canonical form.

#PF(fault-code) For a page fault.

#NM If TS in CR0 is set.

#UD If EM in CR0 is set.

If OSFXSR in CR4 is 0.

If CPUID feature flag ECX.SSE4\_1 is 0.

If LOCK prefix is used.

Either the prefix REP (F3h) or REPN (F2H) is used.

# PMINSB — Minimum of Packed Signed Byte Integers

Opcode	Instruction		Compat/ Leg Mode	Description
66 OF 38 38 /r	PMINSB xmm1, xmm2/m128	Valid	Valid	Compare packed signed byte integers in xmm1 and xmm2/m128 and store packed minimum values in xmm1.

### **Description**

Compares packed signed byte integers in the destination operand (first operand) and the source operand (second operand), and returns the minimum for each packed value in the destination operand.

```
IF (DEST[7:0] < SRC[7:0])
    THEN DEST[7:0] \leftarrow DEST[7:0];
   ELSE DEST[7:0] \leftarrow SRC[7:0]; FI;
IF (DEST[15:8] < SRC[15:8])
    THEN DEST[15:8] \leftarrow DEST[15:8];
   ELSE DEST[15:8] \leftarrow SRC[15:8]; FI;
IF (DEST[23:16] < SRC[23:16])
    THEN DEST[23:16] \leftarrow DEST[23:16];
    ELSE DEST[23:16] \leftarrow SRC[23:16]; FI;
IF (DEST[31:24] < SRC[31:24])
    THEN DEST[31:24] \leftarrow DEST[31:24];
   ELSE DEST[31:24] \leftarrow SRC[31:24]; FI;
IF (DEST[39:32] < SRC[39:32])
    THEN DEST[39:32] \leftarrow DEST[39:32];
   ELSE DEST[39:32] \leftarrow SRC[39:32]; FI;
IF (DEST[47:40] < SRC[47:40])
    THEN DEST[47:40] \leftarrow DEST[47:40];
   ELSE DEST[47:40] \leftarrow SRC[47:40]; FI;
IF (DEST[55:48] < SRC[55:48])
    THEN DEST[55:48] \leftarrow DEST[55:48];
   ELSE DEST[55:48] \leftarrow SRC[55:48]; FI;
IF (DEST[63:56] < SRC[63:56])
    THEN DEST[63:56] \leftarrow DEST[63:56];
   ELSE DEST[63:56] \leftarrow SRC[63:56]; FI;
IF (DEST[71:64] < SRC[71:64])
    THEN DEST[71:64] \leftarrow DEST[71:64];
```

```
ELSE DEST[71:64] \leftarrow SRC[71:64]; FI;
IF (DEST[79:72] < SRC[79:72])
   THEN DEST[79:72] \leftarrow DEST[79:72];
   ELSE DEST[79:72] \leftarrow SRC[79:72]; FI;
IF (DEST[87:80] < SRC[87:80])
   THEN DEST[87:80] \leftarrow DEST[87:80];
   ELSE DEST[87:80] \leftarrow SRC[87:80]; FI;
IF (DEST[95:88] < SRC[95:88])
   THEN DEST[95:88] \leftarrow DEST[95:88];
   ELSE DEST[95:88] \leftarrow SRC[95:88]; FI;
IF (DEST[103:96] < SRC[103:96])
   THEN DEST[103:96] \leftarrow DEST[103:96];
   ELSE DEST[103:96] ← SRC[103:96]; FI;
IF (DEST[111:104] < SRC[111:104])
   THEN DEST[111:104] \leftarrow DEST[111:104];
   ELSE DEST[111:104] \leftarrow SRC[111:104]; FI;
IF (DEST[119:112] < SRC[119:112])
   THEN DEST[119:112] \leftarrow DEST[119:112];
   ELSE DEST[119:112] \leftarrow SRC[119:112]; FI;
IF (DEST[127:120] < SRC[127:120])
   THEN DEST[127:120] \leftarrow DEST[127:120];
   ELSE DEST[127:120] \leftarrow SRC[127:120]; FI;
```

## Intel C/C++ Compiler Intrinsic Equivalent

PMINSB m128i mm min epi8 ( m128i a, m128i b);

### **Flags Affected**

None

## **Protected Mode Exceptions**

#GP(0) For an illegal memory operand effective address in the CS, DS,

ES, FS, or GS segments.

If a memory operand is not aligned on a 16-byte boundary,

regardless of segment.

#SS(0) For an illegal address in the SS segment.

#PF(fault-code) For a page fault. #NM If CR0.TS[bit 3] = 1. #UD If CR0.EM[bit 2] = 1.

If CR4.OSFXSR[bit 9] = 0.

If CPUID.01H:ECX.SSE4 1[bit 19] = 0.

If LOCK prefix is used.

Either the prefix REP (F3h) or REPN (F2H) is used.

### Real Mode Exceptions

#GP(0) if any part of the operand lies outside of the effective address

space from 0 to 0FFFFH.

If a memory operand is not aligned on a 16-byte boundary,

regardless of segment.

#NM If CR0.TS[bit 3] = 1. #UD If CR0.EM[bit 2] = 1.

If CR4.OSFXSR[bit 9] = 0.

If  $CPUID.01H:ECX.SSE4_1[bit 19] = 0$ .

If LOCK prefix is used.

Either the prefix REP (F3h) or REPN (F2H) is used.

## Virtual 8086 Mode Exceptions

Same exceptions as in Real Address Mode.

#PF(fault-code) For a page fault.

## **Compatibility Mode Exceptions**

Same exceptions as in Protected Mode.

### **64-Bit Mode Exceptions**

#GP(0) If the memory address is in a non-canonical form.

If a memory operand is not aligned on a 16-byte boundary,

regardless of segment.

#SS(0) If a memory address referencing the SS segment is in a non-

canonical form.

#PF(fault-code) For a page fault.

#NM If TS in CR0 is set.

#UD If EM in CR0 is set.

If OSFXSR in CR4 is 0.

If CPUID feature flag ECX.SSE4\_1 is 0.

If LOCK prefix is used.

Either the prefix REP (F3h) or REPN (F2H) is used.

# PMINSD — Minimum of Packed Dword Integers

Opcode	Instruction	64-bit Mode	Compat/ Leg Mode	Description
66 0F 38 39 /r	PMINSD xmm1, xmm2/m128	Valid	Valid	Compare packed signed dword integers in xmm1 and xmm2/m128 and store packed minimum values in xmm1.

# **Description**

Compares packed signed dword integers in the destination operand (first operand) and the source operand (second operand), and returns the minimum for each packed value in the destination operand.

### **Operation**

```
IF (DEST[31:0] < SRC[31:0])

THEN DEST[31:0] \leftarrow DEST[31:0];

ELSE DEST[31:0] \leftarrow SRC[31:0]; FI;

IF (DEST[63:32] < SRC[63:32])

THEN DEST[63:32] \leftarrow DEST[63:32];

ELSE DEST[63:32] \leftarrow SRC[63:32]; FI;

IF (DEST[95:64] < SRC[95:64])

THEN DEST[95:64] \leftarrow DEST[95:64];

ELSE DEST[95:64] \leftarrow SRC[95:64]; FI;

IF (DEST[127:96] < SRC[127:96])

THEN DEST[127:96] \leftarrow DEST[127:96]; FI;

ELSE DEST[127:96] \leftarrow SRC[127:96]; FI;
```

# Intel C/C++ Compiler Intrinsic Equivalent

```
PMINSD __m128i _mm_min_epi32 ( __m128i a, __m128i b);
```

### **Flags Affected**

None

# **Protected Mode Exceptions**

#GP(0)	For an illegal memory operand effective address in the CS, DS, ES, FS, or GS segments.
	If a memory operand is not aligned on a 16-byte boundary, regardless of segment.
#SS(0)	For an illegal address in the SS segment.

#PF(fault-code) For a page fault.

#NM If CR0.TS[bit 3] = 1. #UD If CR0.EM[bit 2] = 1.

If CR4.OSFXSR[bit 9] = 0.

If  $CPUID.01H:ECX.SSE4_1[bit 19] = 0$ .

If LOCK prefix is used.

Either the prefix REP (F3h) or REPN (F2H) is used.

# **Real Mode Exceptions**

#GP(0) if any part of the operand lies outside of the effective address

space from 0 to 0FFFFH.

If a memory operand is not aligned on a 16-byte boundary,

regardless of segment.

#NM If CR0.TS[bit 3] = 1. #UD If CR0.EM[bit 2] = 1.

If CR4.OSFXSR[bit 9] = 0.

If  $CPUID.01H:ECX.SSE4_1[bit 19] = 0$ .

If LOCK prefix is used.

Either the prefix REP (F3h) or REPN (F2H) is used.

### Virtual 8086 Mode Exceptions

Same exceptions as in Real Address Mode.

#PF(fault-code) For a page fault.

# **Compatibility Mode Exceptions**

Same exceptions as in Protected Mode.

### **64-Bit Mode Exceptions**

#GP(0) If the memory address is in a non-canonical form.

If a memory operand is not aligned on a 16-byte boundary,

regardless of segment.

#SS(0) If a memory address referencing the SS segment is in a non-

canonical form.

#PF(fault-code) For a page fault.

#NM If TS in CR0 is set.

#UD If EM in CR0 is set.

If OSFXSR in CR4 is 0.

If CPUID feature flag ECX.SSE4\_1 is 0.

If LOCK prefix is used.

Either the prefix REP (F3h) or REPN (F2H) is used.

# PMINSW—Minimum of Packed Signed Word Integers

Opcode	Instruction	64-Bit Mode	Compat/ Leg Mode	Description
OF EA /r	PMINSW mm1, mm2/m64	Valid	Valid	Compare signed word integers in mm2/m64 and mm1 and return minimum values.
66 OF EA /r	PMINSW xmm1, xmm2/m128	Valid	Valid	Compare signed word integers in xmm2/m128 and xmm1 and return minimum values.

## **Description**

Performs a SIMD compare of the packed signed word integers in the destination operand (first operand) and the source operand (second operand), and returns the minimum value for each pair of word integers to the destination operand. The source operand can be an MMX technology register or a 64-bit memory location, or it can be an XMM register or a 128-bit memory location. The destination operand can be an MMX technology register or an XMM register.

In 64-bit mode, using a REX prefix in the form of REX.R permits this instruction to access additional registers (XMM8-XMM15).

```
PMINSW instruction for 64-bit operands:
   IF DEST[15:0] < SRC[15:0] THEN
        DEST[15:0] \leftarrow DEST[15:0];
   ELSE
        DEST[15:0] \leftarrow SRC[15:0]; FI;
   (* Repeat operation for 2nd and 3rd words in source and destination operands *)
   IF DEST[63:48] < SRC[63:48] THEN
        DEST[63:48] \leftarrow DEST[63:48];
   ELSE
        DEST[63:48] \leftarrow SRC[63:48]; FI;
PMINSW instruction for 128-bit operands:
   IF DEST[15:0] < SRC[15:0] THEN
        DEST[15:0] \leftarrow DEST[15:0];
   ELSE
        DEST[15:0] \leftarrow SRC[15:0]; FI;
   (* Repeat operation for 2nd through 7th words in source and destination operands *)
   IF DEST[127:112] < SRC/m64[127:112] THEN
        DEST[127:112] \leftarrow DEST[127:112];
```

```
ELSE
```

DEST[127:112]  $\leftarrow$  SRC[127:112]; FI;

### Intel C/C++ Compiler Intrinsic Equivalent

```
PMINSW __m64 _mm_min_pi16 (__m64 a, __m64 b)
```

PMINSW \_\_m128i \_mm\_min\_epi16 ( \_\_m128i a, \_\_m128i b)

### **Flags Affected**

None.

### **Numeric Exceptions**

None.

### **Protected Mode Exceptions**

#GP(0) If a memory operand effective address is outside the CS, DS,

ES, FS, or GS segment limit.

(128-bit operations only) If a memory operand is not aligned on

a 16-byte boundary, regardless of segment.

#SS(0) If a memory operand effective address is outside the SS

segment limit.

#UD If CR0.EM[bit 2] = 1.

(128-bit operations only) If CR4.OSFXSR[bit 9] = 0. Execution of 128-bit instructions on a non-SSE2 capable processor (one that is MMX technology capable) will result in the instruction

operating on the mm registers, not #UD.

If the LOCK prefix is used.

#NM If CR0.TS[bit 3] = 1.

#MF (64-bit operations only) If there is a pending x87 FPU exception.

#PF(fault-code) If a page fault occurs.

#AC(0) (64-bit operations only) If alignment checking is enabled and an

unaligned memory reference is made while the current privilege

level is 3.

#### **Real-Address Mode Exceptions**

#GP (128-bit operations only) If a memory operand is not aligned on

a 16-byte boundary, regardless of segment.

If any part of the operand lies outside of the effective address

space from 0 to FFFFH.

#UD If CR0.EM[bit 2] = 1.

(128-bit operations only) If CR4.OSFXSR[bit 9] = 0. Execution of 128-bit instructions on a non-SSE2 capable processor (one that is MMX technology capable) will result in the instruction

operating on the mm registers, not #UD.

If the LOCK prefix is used.

#NM If CR0.TS[bit 3] = 1.

#MF (64-bit operations only) If there is a pending x87 FPU exception.

### Virtual-8086 Mode Exceptions

Same exceptions as in real address mode.

#PF(fault-code) For a page fault.

#AC(0) (64-bit operations only) If alignment checking is enabled and an

unaligned memory reference is made.

### **Compatibility Mode Exceptions**

Same as for protected mode exceptions.

### **64-Bit Mode Exceptions**

#SS(0) If a memory address referencing the SS segment is in a non-

canonical form.

#GP(0) If the memory address is in a non-canonical form.

(128-bit operations only) If memory operand is not aligned on a

16-byte boundary, regardless of segment.

#UD If CR0.EM[bit 2] = 1.

(128-bit operations only) If CR4.OSFXSR[bit 9] = 0.

(128-bit operations only) If CPUID.01H:EDX.SSE2[bit 26] = 0.

If the LOCK prefix is used.

#NM If CR0.TS[bit 3] = 1.

#MF (64-bit operations only) If there is a pending x87 FPU exception.

#PF(fault-code) If a page fault occurs.

#AC(0) (64-bit operations only) If alignment checking is enabled and an

unaligned memory reference is made while the current privilege

level is 3.

# PMINUB—Minimum of Packed Unsigned Byte Integers

Opcode	Instruction	64-Bit Mode	Compat/ Leg Mode	Description
OF DA /r	PMINUB mm1, mm2/m64	Valid	Valid	Compare unsigned byte integers in mm2/m64 and mm1 and returns minimum values.
66 OF DA /r	PMINUB xmm1, xmm2/m128	Valid	Valid	Compare unsigned byte integers in xmm2/m128 and xmm1 and returns minimum values.

### **Description**

Performs a SIMD compare of the packed unsigned byte integers in the destination operand (first operand) and the source operand (second operand), and returns the minimum value for each pair of byte integers to the destination operand. The source operand can be an MMX technology register or a 64-bit memory location, or it can be an XMM register or a 128-bit memory location. The destination operand can be an MMX technology register or an XMM register.

In 64-bit mode, using a REX prefix in the form of REX.R permits this instruction to access additional registers (XMM8-XMM15).

```
PMINUB instruction for 64-bit operands:
   IF DEST[7:0] < SRC[17:0] THEN
        DEST[7:0] \leftarrow DEST[7:0];
   ELSE
        DEST[7:0] \leftarrow SRC[7:0]; FI;
   (* Repeat operation for 2nd through 7th bytes in source and destination operands *)
   IF DEST[63:56] < SRC[63:56] THEN
        DEST[63:56] \leftarrow DEST[63:56];
   ELSE
        DEST[63:56] \leftarrow SRC[63:56]; FI;
PMINUB instruction for 128-bit operands:
   IF DEST[7:0] < SRC[17:0] THEN
        DEST[7:0] \leftarrow DEST[7:0];
   ELSE
        DEST[7:0] \leftarrow SRC[7:0]; FI;
   (* Repeat operation for 2nd through 15th bytes in source and destination operands *)
   IF DEST[127:120] < SRC[127:120] THEN
        DEST[127:120] \leftarrow DEST[127:120];
```

**ELSE** 

DEST[127:120]  $\leftarrow$  SRC[127:120]; FI;

### Intel C/C++ Compiler Intrinsic Equivalent

PMINUB \_\_m64 \_m\_min\_pu8 (\_\_m64 a, \_\_m64 b)

PMINUB \_\_m128i \_mm\_min\_epu8 ( \_\_m128i a, \_\_m128i b)

### Flags Affected

None.

### **Numeric Exceptions**

None.

### **Protected Mode Exceptions**

#GP(0) If a memory operand effective address is outside the CS, DS,

ES, FS, or GS segment limit.

(128-bit operations only) If a memory operand is not aligned on

a 16-byte boundary, regardless of segment.

#SS(0) If a memory operand effective address is outside the SS

segment limit.

#UD If CR0.EM[bit 2] = 1.

(128-bit operations only) If CR4.OSFXSR[bit 9] = 0. Execution of 128-bit instructions on a non-SSE2 capable processor (one that is MMX technology capable) will result in the instruction

operating on the mm registers, not #UD.

If the LOCK prefix is used.

#NM If CR0.TS[bit 3] = 1.

#MF (64-bit operations only) If there is a pending x87 FPU exception.

#PF(fault-code) If a page fault occurs.

#AC(0) (64-bit operations only) If alignment checking is enabled and an

unaligned memory reference is made while the current privilege

level is 3.

### **Real-Address Mode Exceptions**

#GP (128-bit operations only) If a memory operand is not aligned on

a 16-byte boundary, regardless of segment.

If any part of the operand lies outside of the effective address

space from 0 to FFFFH.

#UD If CR0.EM[bit 2] = 1.

(128-bit operations only) If CR4.OSFXSR[bit 9] = 0. Execution of 128-bit instructions on a non-SSE2 capable processor (one that is MMX technology capable) will result in the instruction

operating on the mm registers, not #UD.

If the LOCK prefix is used.

#NM If CR0.TS[bit 3] = 1.

#MF (64-bit operations only) If there is a pending x87 FPU exception.

## Virtual-8086 Mode Exceptions

Same exceptions as in real address mode.

#PF(fault-code) For a page fault.

#AC(0) (64-bit operations only) If alignment checking is enabled and an

unaligned memory reference is made.

## **Compatibility Mode Exceptions**

Same as for protected mode exceptions.

### **64-Bit Mode Exceptions**

#SS(0) If a memory address referencing the SS segment is in a non-

canonical form.

#GP(0) If the memory address is in a non-canonical form.

(128-bit operations only) If memory operand is not aligned on a

16-byte boundary, regardless of segment.

#UD If CR0.EM[bit 2] = 1.

(128-bit operations only) If CR4.OSFXSR[bit 9] = 0.

(128-bit operations only) If CPUID.01H:EDX.SSE2[bit 26] = 0.

If the LOCK prefix is used.

#NM If CR0.TS[bit 3] = 1.

#MF (64-bit operations only) If there is a pending x87 FPU exception.

#PF(fault-code) If a page fault occurs.

#AC(0) (64-bit operations only) If alignment checking is enabled and an

unaligned memory reference is made while the current privilege

level is 3.

# PMINUD — Minimum of Packed Dword Integers

Opcode	Instruction	64-bit Mode	Compat/ Leg Mode	Description
66 OF 38 3B /r	PMINUD xmm1, xmm2/m128	Valid	Valid	Compare packed unsigned dword integers in xmm1 and xmm2/m128 and store packed minimum values in xmm1.

### **Description**

Compares packed unsigned dword integers in the destination operand (first operand) and the source operand (second operand), and returns the minimum for each packed value in the destination operand.

## **Operation**

```
IF (DEST[31:0] < SRC[31:0])

THEN DEST[31:0] \leftarrow DEST[31:0];

ELSE DEST[31:0] \leftarrow SRC[31:0]; FI;

IF (DEST[63:32] < SRC[63:32])

THEN DEST[63:32] \leftarrow DEST[63:32];

ELSE DEST[63:32] \leftarrow SRC[63:32]; FI;

IF (DEST[95:64] < SRC[95:64])

THEN DEST[95:64] \leftarrow DEST[95:64];

ELSE DEST[95:64] \leftarrow SRC[95:64]; FI;

IF (DEST[127:96] < SRC[127:96])

THEN DEST[127:96] \leftarrow DEST[127:96];

ELSE DEST[127:96] \leftarrow SRC[127:96]; FI;
```

### Intel C/C++ Compiler Intrinsic Equivalent

PMINUD \_\_m128i \_mm\_min\_epu32 ( \_\_m128i a, \_\_m128i b);

## **Flags Affected**

None

# **Protected Mode Exceptions**

#GP(0) For an illegal memory operand effective address in the CS, DS,

ES, FS, or GS segments.

If a memory operand is not aligned on a 16-byte boundary,

regardless of segment.

#SS(0) For an illegal address in the SS segment.

#PF(fault-code) For a page fault. #NM If CR0.TS[bit 3] = 1. #UD If CR0.EM[bit 2] = 1.

If CR4.OSFXSR[bit 9] = 0.

If  $CPUID.01H:ECX.SSE4_1[bit 19] = 0$ .

If LOCK prefix is used.

Either the prefix REP (F3h) or REPN (F2H) is used.

## **Real Mode Exceptions**

#GP(0) if any part of the operand lies outside of the effective address

space from 0 to 0FFFFH.

If a memory operand is not aligned on a 16-byte boundary,

regardless of segment.

#NM If CR0.TS[bit 3] = 1. #UD If CR0.EM[bit 2] = 1.

If CR4.OSFXSR[bit 9] = 0.

If  $CPUID.01H:ECX.SSE4_1[bit 19] = 0$ .

If LOCK prefix is used.

Either the prefix REP (F3h) or REPN (F2H) is used.

# Virtual 8086 Mode Exceptions

Same exceptions as in Real Address Mode.

#PF(fault-code) For a page fault.

## **Compatibility Mode Exceptions**

Same exceptions as in Protected Mode.

## **64-Bit Mode Exceptions**

#GP(0) If the memory address is in a non-canonical form.

If a memory operand is not aligned on a 16-byte boundary,

regardless of segment.

#SS(0) If a memory address referencing the SS segment is in a non-

canonical form.

#PF(fault-code) For a page fault.

#NM If TS in CR0 is set.

#UD If EM in CR0 is set.

If OSFXSR in CR4 is 0.

If CPUID feature flag ECX.SSE4\_1 is 0.

If LOCK prefix is used. Either the prefix REP (F3h) or REPN (F2H) is used.

# PMINUW — Minimum of Packed Word Integers

Opcode	Instruction	64-bit Mode	Compat/ Leg Mode	Description
66 OF 38 3A /r	PMINUW xmm1, xmm2/m128	Valid	Valid	Compare packed unsigned word integers in xmm1 and xmm2/m128 and store packed minimum values in xmm1.

## **Description**

Compares packed unsigned word integers in the destination operand (first operand) and the source operand (second operand), and returns the minimum for each packed value in the destination operand.

```
IF (DEST[15:0] < SRC[15:0])
   THEN DEST[15:0] \leftarrow DEST[15:0];
   ELSE DEST[15:0] \leftarrow SRC[15:0]; FI;
IF (DEST[31:16] < SRC[31:16])
   THEN DEST[31:16] \leftarrow DEST[31:16];
   ELSE DEST[31:16] \leftarrow SRC[31:16]; FI;
IF (DEST[47:32] < SRC[47:32])
   THEN DEST[47:32] \leftarrow DEST[47:32];
   ELSE DEST[47:32] \leftarrow SRC[47:32]; FI;
IF (DEST[63:48] < SRC[63:48])
   THEN DEST[63:48] \leftarrow DEST[63:48];
   ELSE DEST[63:48] \leftarrow SRC[63:48]; FI;
IF (DEST[79:64] < SRC[79:64])
   THEN DEST[79:64] \leftarrow DEST[79:64];
   ELSE DEST[79:64] \leftarrow SRC[79:64]; FI;
IF (DEST[95:80] < SRC[95:80])
   THEN DEST[95:80] \leftarrow DEST[95:80];
   ELSE DEST[95:80] \leftarrow SRC[95:80]; FI;
IF (DEST[111:96] < SRC[111:96])
   THEN DEST[111:96] \leftarrow DEST[111:96];
   ELSE DEST[111:96] \leftarrow SRC[111:96]; FI;
IF (DEST[127:112] < SRC[127:112])
   THEN DEST[127:112] \leftarrow DEST[127:112];
   ELSE DEST[127:112] \leftarrow SRC[127:112]; FI;
```

### Intel C/C++ Compiler Intrinsic Equivalent

PMINUW \_\_m128i \_mm\_min\_epu16 ( \_\_m128i a, \_\_m128i b);

### **Flags Affected**

None

### **Protected Mode Exceptions**

#GP(0) For an illegal memory operand effective address in the CS, DS,

ES, FS, or GS segments.

If a memory operand is not aligned on a 16-byte boundary,

regardless of segment.

#SS(0) For an illegal address in the SS segment.

#PF(fault-code) For a page fault. #NM If CR0.TS[bit 3] = 1. #UD If CR0.EM[bit 2] = 1.

If CR4.OSFXSR[bit 9] = 0.

If  $CPUID.01H:ECX.SSE4_1[bit 19] = 0$ .

If LOCK prefix is used.

Either the prefix REP (F3h) or REPN (F2H) is used.

## **Real Mode Exceptions**

#GP(0) if any part of the operand lies outside of the effective address

space from 0 to 0FFFFH.

If a memory operand is not aligned on a 16-byte boundary,

regardless of segment.

#NM If CR0.TS[bit 3] = 1. #UD If CR0.EM[bit 2] = 1.

If CR4.OSFXSR[bit 9] = 0.

If  $CPUID.01H:ECX.SSE4_1[bit 19] = 0$ .

If LOCK prefix is used.

Either the prefix REP (F3h) or REPN (F2H) is used.

### Virtual 8086 Mode Exceptions

Same exceptions as in Real Address Mode.

#PF(fault-code) For a page fault.

### **Compatibility Mode Exceptions**

Same exceptions as in Protected Mode.

## **64-Bit Mode Exceptions**

#GP(0) If the memory address is in a non-canonical form.

If a memory operand is not aligned on a 16-byte boundary,

regardless of segment.

#SS(0) If a memory address referencing the SS segment is in a non-

canonical form.

#PF(fault-code) For a page fault.

#NM If TS in CR0 is set.

#UD If EM in CR0 is set.

If OSFXSR in CR4 is 0.

If CPUID feature flag ECX.SSE4\_1 is 0.

If LOCK prefix is used.

Either the prefix REP (F3h) or REPN (F2H) is used.

# PMOVMSKB—Move Byte Mask

Opcode	Instruction	64-Bit Mode	Compat/ Leg Mode	Description
0F D7 /r	PMOVMSKB r32, mm	Valid	Valid	Move a byte mask of <i>mm</i> to <i>r32</i> .
REX.W + 0F D7 /r	PMOVMSKB r64, mm	Valid	N.E.	Move a byte mask of mm to the lower 32-bits of r64 and zero-fill the upper 32-bits.
66 0F D7 /r	PMOVMSKB reg, xmm	Valid	Valid	Move a byte mask of <i>xmm</i> to <i>reg</i> . The upper bits of r32 or r64 are zeroed

### **Description**

Creates a mask made up of the most significant bit of each byte of the source operand (second operand) and stores the result in the low byte or word of the destination operand (first operand). The source operand is an MMX technology register or an XMM register; the destination operand is a general-purpose register. When operating on 64-bit operands, the byte mask is 8 bits; when operating on 128-bit operands, the byte mask is 16-bits.

In 64-bit mode, using a REX prefix in the form of REX.R permits this instruction to access additional registers (XMM8-XMM15, R8-15). The default operand size is 64-bit in 64-bit mode.

```
PMOVMSKB instruction with 64-bit source operand and r32:
    r32[0] ← SRC[7];
    r32[1] ← SRC[15];
    (* Repeat operation for bytes 2 through 6 *)
    r32[7] ← SRC[63];
    r32[31:8] ← ZERO_FILL;

PMOVMSKB instruction with 128-bit source operand and r32:
    r32[0] ← SRC[7];
    r32[1] ← SRC[15];
    (* Repeat operation for bytes 2 through 14 *)
    r32[15] ← SRC[127];
    r32[31:16] ← ZERO_FILL;

PMOVMSKB instruction with 64-bit source operand and r64:
    r64[0] ← SRC[7];
    r64[1] ← SRC[15];
```

```
(* Repeat operation for bytes 2 through 6 *)
r64[7] ← SRC[63];
r64[63:8] ← ZERO_FILL;

PMOVMSKB instruction with 128-bit source operand and r64:
r64[0] ← SRC[7];
r64[1] ← SRC[15];
(* Repeat operation for bytes 2 through 14 *)
r64[15] ← SRC[127];
r64[63:16] ← ZERO_FILL;
```

## Intel C/C++ Compiler Intrinsic Equivalent

PMOVMSKB int \_mm\_movemask\_pi8(\_\_m64 a)
PMOVMSKB int \_mm\_movemask\_epi8 ( \_\_m128i a)

## **Flags Affected**

None.

### **Numeric Exceptions**

None.

## **Protected Mode Exceptions**

#UD If CR0.EM[bit 2] = 1.

(128-bit operations only) If CR4.OSFXSR[bit 9] = 0. Execution of 128-bit instructions on a non-SSE2 capable processor (one that is MMX technology capable) will result in the instruction

operating on the mm registers, not #UD.

If the LOCK prefix is used.

#NM If CR0.TS[bit 3] = 1.

#MF (64-bit operations only) If there is a pending x87 FPU exception.

### **Real-Address Mode Exceptions**

Same exceptions as in protected mode.

### Virtual-8086 Mode Exceptions

Same exceptions as in protected mode.

#### Compatibility Mode Exceptions

Same exceptions as in protected mode.

# **64-Bit Mode Exceptions**

Same exceptions as in protected mode.

# PMOVSX — Packed Move with Sign Extend

Opcode	Instruction	64-bit Mode	Compat/ Leg Mode	Description
66 Of 38 20 /r	PMOVSXBW xmm1, xmm2/m64	Valid	Valid	Sign extend 8 packed signed 8-bit integers in the low 8 bytes of xmm2/m64 to 8 packed signed 16-bit integers in xmm1.
66 Of 38 21 /r	PMOVSXBD xmm1, xmm2/m32	Valid	Valid	Sign extend 4 packed signed 8-bit integers in the low 4 bytes of xmm2/m32 to 4 packed signed 32-bit integers in xmm1.
66 Of 38 22 /r	PMOVSXBQ xmm1, xmm2/m16	Valid	Valid	Sign extend 2 packed signed 8-bit integers in the low 2 bytes of xmm2/m16 to 2 packed signed 64-bit integers in xmm1.
66 Of 38 23 /r	PMOVSXWD xmm1, xmm2/m64	Valid	Valid	Sign extend 4 packed signed 16-bit integers in the low 8 bytes of xmm2/m64 to 4 packed signed 32-bit integers in xmm1.
66 Of 38 24 /r	PMOVSXWQ xmm1, xmm2/m32	Valid	Valid	Sign extend 2 packed signed 16-bit integers in the low 4 bytes of xmm2/m32 to 2 packed signed 64-bit integers in xmm1.
66 Of 38 25 /r	PMOVSXDQ xmm1, xmm2/m64	Valid	Valid	Sign extend 2 packed signed 32-bit integers in the low 8 bytes of xmm2/m64 to 2 packed signed 64-bit integers in xmm1.

# **Description**

Sign-extend the low byte/word/dword values in each word/dword/qword element of the source operand (second operand) to word/dword/qword integers and stored as packed data in the destination operand (first operand).

# Operation

#### **PMOVSXBW**

 $\mathsf{DEST[15:0]} \leftarrow \mathsf{SignExtend(SRC[7:0])};$ 

 $\mathsf{DEST[31:16]} \leftarrow \mathsf{SignExtend(SRC[15:8])};$ 

 $DEST[47:32] \leftarrow SignExtend(SRC[23:16]);$ 

 $\mathsf{DEST}[63:\!48] \leftarrow \mathsf{SignExtend}(\mathsf{SRC}[31:\!24]);$ 

 $\mathsf{DEST}[79:64] \leftarrow \mathsf{SignExtend}(\mathsf{SRC}[39:32]);$ 

```
DEST[95:80] \leftarrow SignExtend(SRC[47:40]);
   DEST[111:96] \leftarrow SignExtend(SRC[55:48]);
   DEST[127:112] \leftarrow SignExtend(SRC[63:56]);
PMOVSXBD
   DEST[31:0] \leftarrow SignExtend(SRC[7:0]);
   DEST[63:32] \leftarrow SignExtend(SRC[15:8]);
   DEST[95:64] \leftarrow SignExtend(SRC[23:16]);
   DEST[127:96] \leftarrow SignExtend(SRC[31:24]);
PMOVSXBQ
   DEST[63:0] \leftarrow SignExtend(SRC[7:0]);
   DEST[127:64] \leftarrow SignExtend(SRC[15:8]);
PMOVSXWD
   DEST[31:0] \leftarrow SignExtend(SRC[15:0]);
   DEST[63:32] \leftarrow SignExtend(SRC[31:16]);
   DEST[95:64] \leftarrow SignExtend(SRC[47:32]);
   DEST[127:96] \leftarrow SignExtend(SRC[63:48]);
PMOVSXWQ
   DEST[63:0] \leftarrow SignExtend(SRC[15:0]);
   DEST[127:64] \leftarrow SignExtend(SRC[31:16]);
PMOVSXDQ
   DEST[63:0] \leftarrow SignExtend(SRC[31:0]);
   DEST[127:64] \leftarrow SignExtend(SRC[63:321);
```

#### Flags Affected

None

### Intel C/C++ Compiler Intrinsic Equivalent

```
PMOVSXBW
               __m128i _mm_ cvtepi8_epi16 ( __m128i a);
PMOVSXBD
               __m128i _mm_ cvtepi8_epi32 ( __m128i a);
PMOVSXBQ
               __m128i _mm_ cvtepi8_epi64 ( __m128i a);
               __m128i _mm_ cvtepi16_epi32 ( __m128i a);
PMOVSXWD
               __m128i _mm_ cvtepi16_epi64 ( __m128i a);
PMOVSXWQ
PMOVSXDQ
               __m128i _mm_ cvtepi32_epi64 ( __m128i a);
```

#### **Protected Mode Exceptions**

#GP(0) For an illegal memory operand effective address in the CS, DS,

ES, FS, or GS segments.

#SS(0) For an illegal address in the SS segment. #PF(fault-code) For a page fault.

#NM If CR0.TS[bit 3] = 1. #UD If CR0.EM[bit 2] = 1.

If CR4.OSFXSR[bit 9] = 0.

If  $CPUID.01H:ECX.SSE4_1[bit 19] = 0$ .

If LOCK prefix is used.

Either the prefix REP (F3h) or REPN (F2H) is used.

#AC(0) If alignment checking is enabled and an unaligned memory

reference is made while the current privilege level is 3.

### **Real Mode Exceptions**

#GP if any part of the operand lies outside of the effective address

space from 0 to 0FFFFH.

#NM If CR0.TS[bit 3] = 1. #UD If CR0.EM[bit 2] = 1.

If CR4.OSFXSR[bit 9] = 0.

If  $CPUID.01H:ECX.SSE4_1[bit 19] = 0$ .

If LOCK prefix is used.

Either the prefix REP (F3h) or REPN (F2H) is used.

## Virtual 8086 Mode Exceptions

Same exceptions as in Real Address Mode.

#PF(fault-code) For a page fault.

#AC(0) If alignment checking is enabled and an unaligned memory

reference is made while the current privilege level is 3.

## **Compatibility Mode Exceptions**

Same exceptions as in Protected Mode.

### **64-Bit Mode Exceptions**

#GP(0) If the memory address is in a non-canonical form.

#SS(0) If a memory address referencing the SS segment is in a non-

canonical form.

#PF(fault-code) For a page fault.

#NM If TS in CR0 is set.

#UD If EM in CR0 is set.

If OSFXSR in CR4 is 0.

If CPUID feature flag ECX.SSE4\_1 is 0.

If LOCK prefix is used.

#AC(0) Either the prefix REP (F3h) or REPN (F2H) is used.

If alignment checking is enabled and an unaligned memory reference is made while the current privilege level is 3.

## PMOVZX — Packed Move with Zero Extend

Opcode	Instruction	64-bit Mode	Compat/ Leg Mode	Description
66 Of 38 30 /r	PMOVZXBW xmm1, xmm2/m64	Valid	Valid	Zero extend 8 packed 8-bit integers in the low 8 bytes of xmm2/m64 to 8 packed 16-bit integers in xmm1.
66 Of 38 31 /r	PMOVZXBD xmm1, xmm2/m32	Valid	Valid	Zero extend 4 packed 8-bit integers in the low 4 bytes of xmm2/m32 to 4 packed 32-bit integers in xmm1.
66 Of 38 32 /r	PMOVZXBQ xmm1, xmm2/m16	Valid	Valid	Zero extend 2 packed 8-bit integers in the low 2 bytes of xmm2/m16 to 2 packed 64-bit integers in xmm1.
66 Of 38 33 /r	PMOVZXWD xmm1, xmm2/m64	Valid	Valid	Zero extend 4 packed 16-bit integers in the low 8 bytes of xmm2/m64 to 4 packed 32-bit integers in xmm1.
66 Of 38 34 /r	PMOVZXWQ xmm1, xmm2/m32	Valid	Valid	Zero extend 2 packed 16-bit integers in the low 4 bytes of xmm2/m32 to 2 packed 64-bit integers in xmm1.
66 Of 38 35 /r	PMOVZXDQ xmm1, xmm2/m64	Valid	Valid	Zero extend 2 packed 32-bit integers in the low 8 bytes of xmm2/m64 to 2 packed 64-bit integers in xmm1.

# **Description**

Zero-extend the low byte/word/dword values in each word/dword/qword element of the source operand (second operand) to word/dword/qword integers and stored as packed data in the destination operand (first operand).

```
PMOVZXBW

DEST[15:0] ← ZeroExtend(SRC[7:0]);

DEST[31:16] ← ZeroExtend(SRC[15:8]);

DEST[47:32] ← ZeroExtend(SRC[23:16]);

DEST[63:48] ← ZeroExtend(SRC[31:24]);

DEST[79:64] ← ZeroExtend(SRC[39:32]);

DEST[95:80] ← ZeroExtend(SRC[47:40]);

DEST[111:96] ← ZeroExtend(SRC[55:48]);

DEST[127:112] ← ZeroExtend(SRC[63:56]);

PMOVZXBD

DEST[31:0] ← ZeroExtend(SRC[7:0]);
```

```
DEST[63:32] \leftarrow ZeroExtend(SRC[15:8]);
   DEST[95:64] \leftarrow ZeroExtend(SRC[23:16]);
   DEST[127:96] \leftarrow ZeroExtend(SRC[31:24]);
PMOVZXQB
   DEST[63:0] \leftarrow ZeroExtend(SRC[7:0]);
   DEST[127:64] \leftarrow ZeroExtend(SRC[15:8]);
PMOVZXWD
   DEST[31:0] \leftarrow ZeroExtend(SRC[15:0]);
   DEST[63:32] \leftarrow ZeroExtend(SRC[31:16]);
   DEST[95:64] \leftarrow ZeroExtend(SRC[47:32]);
   DEST[127:96] \leftarrow ZeroExtend(SRC[63:48]);
PMOVZXWO
   DEST[63:0] \leftarrow ZeroExtend(SRC[15:0]);
   DEST[127:64] \leftarrow ZeroExtend(SRC[31:16]);
PMOVZXDO
    DEST[63:0] \leftarrow ZeroExtend(SRC[31:0]);
   DEST[127:64] \leftarrow ZeroExtend(SRC[63:32]);
```

#### Flags Affected

None

#### Intel C/C++ Compiler Intrinsic Equivalent

```
      PMOVZXBW
      __m128i _mm_ cvtepu8_epi16 ( __m128i a);

      PMOVZXBD
      __m128i _mm_ cvtepu8_epi32 ( __m128i a);

      PMOVZXBQ
      __m128i _mm_ cvtepu8_epi64 ( __m128i a);

      PMOVZXWD
      __m128i _mm_ cvtepu16_epi62 ( __m128i a);

      PMOVZXWQ
      __m128i _mm_ cvtepu16_epi64 ( __m128i a);

      PMOVZXDQ
      __m128i _mm_ cvtepu32_epi64 ( __m128i a);
```

#### Flags Affected

None

#### **Protected Mode Exceptions**

#GP(0) For an illegal memory operand effective address in the CS, DS,

ES, FS, or GS segments.

#SS(0) For an illegal address in the SS segment.

#PF(fault-code) For a page fault.
#NM If CR0.TS[bit 3] = 1.

#UD If CR0.EM[bit 2] = 1.

If CR4.OSFXSR[bit 9] = 0.

If  $CPUID.01H:ECX.SSE4_1[bit 19] = 0$ .

If LOCK prefix is used.

Either the prefix REP (F3h) or REPN (F2H) is used.

#AC(0) If alignment checking is enabled and an unaligned memory

reference is made while the current privilege level is 3.

#### **Real Mode Exceptions**

#GP if any part of the operand lies outside of the effective address

space from 0 to 0FFFFH.

#NM If CR0.TS[bit 3] = 1. #UD If CR0.EM[bit 2] = 1.

If CR4.OSFXSR[bit 9] = 0.

If  $CPUID.01H:ECX.SSE4_1[bit 19] = 0$ .

If LOCK prefix is used.

Either the prefix REP (F3h) or REPN (F2H) is used.

#### Virtual 8086 Mode Exceptions

Same exceptions as in Real Address Mode.

#PF(fault-code) For a page fault.

#AC(0) If alignment checking is enabled and an unaligned memory

reference is made while the current privilege level is 3.

#### **Compatibility Mode Exceptions**

Same exceptions as in Protected Mode.

#### **64-Bit Mode Exceptions**

#GP(0) If the memory address is in a non-canonical form.

#SS(0) If a memory address referencing the SS segment is in a non-

canonical form.

#PF(fault-code) For a page fault.

#NM If TS in CR0 is set.

#UD If EM in CR0 is set.

If OSFXSR in CR4 is 0.

If CPUID feature flag ECX.SSE4 1 is 0.

If LOCK prefix is used.

Either the prefix REP (F3h) or REPN (F2H) is used.

#AC(0) If alignment checking is enabled and an unaligned memory reference is made while the current privilege level is 3.

## PMULDQ — Multiply Packed Signed Dword Integers

Opcode	Instruction	64-bit Mode	Compat/ Leg Mode	Description
66 0F 38 28 /r	PMULDQ xmm1, xmm2/m128	Valid	Valid	Multiply the packed signed dword integers in <i>xmm1</i> and <i>xmm2/m128</i> and store the quadword product in <i>xmm1</i> .

#### **Description**

Performs two signed multiplications from two pairs of signed dword integers and stores two 64-bit products in the destination operand (first operand). The 64-bit product from the first/third dword element in the destination operand and the first/third dword element of the source operand (second operand) is stored to the low/high qword element of the destination.

If the source is a memory operand then all 128 bits will be fetched from memory but the second and fourth dwords will not be used in the computation.

#### Operation

```
DEST[63:0] = DEST[31:0] * SRC[31:0];
DEST[127:64] = DEST[95:64] * SRC[95:64];
```

## Intel C/C++ Compiler Intrinsic Equivalent

PMULDQ \_\_m128i \_mm\_mul\_epi32( \_\_m128i a, \_\_m128i b);

## **Flags Affected**

None

## **Protected Mode Exceptions**

#GP(0) For an illegal memory operand effective address in the CS, DS,

ES, FS, or GS segments.

If a memory operand is not aligned on a 16-byte boundary,

regardless of segment.

#SS(0) For an illegal address in the SS segment.

#PF(fault-code) For a page fault.

#NM If CR0.TS[bit 3] = 1.

#UD If CR0.EM[bit 2] = 1.

If CR4.OSFXSR[bit 9] = 0.

If  $CPUID.01H:ECX.SSE4_1[bit 19] = 0$ .

If LOCK prefix is used.

Either the prefix REP (F3h) or REPN (F2H) is used.

#### **Real Mode Exceptions**

#GP(0) if any part of the operand lies outside of the effective address

space from 0 to 0FFFFH.

If a memory operand is not aligned on a 16-byte boundary,

regardless of segment.

#NM If CR0.TS[bit 3] = 1. #UD If CR0.EM[bit 2] = 1.

If CR4.OSFXSR[bit 9] = 0.

If  $CPUID.01H:ECX.SSE4_1[bit 19] = 0$ .

If LOCK prefix is used.

Either the prefix REP (F3h) or REPN (F2H) is used.

#### Virtual 8086 Mode Exceptions

Same exceptions as in Real Address Mode.

#PF(fault-code) For a page fault.

## **Compatibility Mode Exceptions**

Same exceptions as in Protected Mode.

#### 64-Bit Mode Exceptions

#GP(0) If the memory address is in a non-canonical form.

If a memory operand is not aligned on a 16-byte boundary,

regardless of segment.

#SS(0) If a memory address referencing the SS segment is in a non-

canonical form.

#PF(fault-code) For a page fault.

#NM If TS in CR0 is set.

#UD If EM in CR0 is set.

If OSFXSR in CR4 is 0.

If CPUID feature flag ECX.SSE4\_1 is 0.

If LOCK prefix is used.

Either the prefix REP (F3h) or REPN (F2H) is used.

# PMULHRSW — Packed Multiply High with Round and Scale

Opcode	Instruction	64-Bit Mode	Compat/ Leg Mode	Description
OF 38 OB /r	PMULHRSW mm1, mm2/m64	Valid	Valid	Multiply 16-bit signed words, scale and round signed doublewords, pack high 16 bits to MM1.
66 OF 38 OB /r	PMULHRSW xmm1, xmm2/m128	Valid	Valid	Multiply 16-bit signed words, scale and round signed doublewords, pack high 16 bits to XMM1.

#### **Description**

PMULHRSW multiplies vertically each signed 16-bit integer from the destination operand (first operand) with the corresponding signed 16-bit integer of the source operand (second operand), producing intermediate, signed 32-bit integers. Each intermediate 32-bit integer is truncated to the 18 most significant bits. Rounding is always performed by adding 1 to the least significant bit of the 18-bit intermediate result. The final result is obtained by selecting the 16 bits immediately to the right of the most significant bit of each 18-bit intermediate result and packed to the destination operand. Both operands can be MMX register or XMM registers.

When the source operand is a 128-bit memory operand, the operand must be aligned on a 16-byte boundary or a general-protection exception (#GP) will be generated.

In 64-bit mode, use the REX prefix to access additional registers.

#### **Operation**

PMULHRSW with 64-bit operands:

```
temp0[31:0] = INT32 ((DEST[15:0] * SRC[15:0]) >>14) + 1;
temp1[31:0] = INT32 ((DEST[31:16] * SRC[31:16]) >>14) + 1;
temp2[31:0] = INT32 ((DEST[47:32] * SRC[47:32]) >> 14) + 1;
temp3[31:0] = INT32 ((DEST[63:48] * SRc[63:48]) >> 14) + 1;
DEST[15:0] = temp0[16:1];
DEST[31:16] = temp1[16:1];
DEST[47:32] = temp2[16:1];
DEST[63:48] = temp3[16:1];
PMULHRSW with 128-bit operand:
temp0[31:0] = INT32 ((DEST[15:0] * SRC[15:0]) >>14) + 1;
temp2[31:0] = INT32 ((DEST[47:32] * SRC[47:32]) >>14) + 1;
```

```
temp3[31:0] = INT32 ((DEST[63:48] * SRC[63:48]) >>14) + 1;

temp4[31:0] = INT32 ((DEST[79:64] * SRC[79:64]) >>14) + 1;

temp5[31:0] = INT32 ((DEST[95:80] * SRC[95:80]) >>14) + 1;

temp6[31:0] = INT32 ((DEST[111:96] * SRC[111:96]) >>14) + 1;

temp7[31:0] = INT32 ((DEST[127:112] * SRC[127:112) >>14) + 1;

DEST[15:0] = temp0[16:1];

DEST[31:16] = temp1[16:1];

DEST[47:32] = temp2[16:1];

DEST[63:48] = temp3[16:1];

DEST[79:64] = temp4[16:1];

DEST[95:80] = temp5[16:1];

DEST[111:96] = temp6[16:1];
```

#### Intel C/C++ Compiler Intrinsic Equivalents

PMULHRSW \_\_m64 \_mm\_mulhrs\_pi16 (\_\_m64 a, \_\_m64 b)

PMULHRSW \_\_m128i \_mm\_mulhrs\_epi16 (\_\_m128i a, \_\_m128i b)

#### **Protected Mode Exceptions**

#GP(0) If a memory operand effective address is outside the CS, DS,

ES, FS or GS segments.

(128-bit operations only) If not aligned on 16-byte boundary,

regardless of segment.

#SS(0) If a memory operand effective address is outside the SS

segment limit.

#PF(fault-code) If a page fault occurs.

#UD If CR0.EM = 1.

(128-bit operations only) If CR4.OSFXSR(bit 9) = 0.

If CPUID.SSSE3(ECX bit 9) = 0.

If the LOCK prefix is used.

#NM If TS bit in CR0 is set.

#MF (64-bit operations only) If there is a pending x87 FPU exception.

#AC(0) (64-bit operations only) If alignment checking is enabled and

unaligned memory reference is made while the current privilege

level is 3.

#### **Real Mode Exceptions**

#GP(0) If any part of the operand lies outside of the effective address

space from 0 to 0FFFFH.

(128-bit operations only) If not aligned on 16-byte boundary,

regardless of segment.

#UD If CR0.EM = 1.

(128-bit operations only) If CR4.OSFXSR(bit 9) = 0.

If CPUID.SSSE3(ECX bit 9) = 0.

If the LOCK prefix is used.

#NM If TS bit in CR0 is set.

#MF (64-bit operations only) If there is a pending x87 FPU exception.

#### Virtual 8086 Mode Exceptions

Same exceptions as in real address mode.

#PF(fault-code) If a page fault occurs.

#AC(0) (64-bit operations only) If alignment checking is enabled and

unaligned memory reference is made.

#### **Compatibility Mode Exceptions**

Same as for protected mode exceptions.

#### **64-Bit Mode Exceptions**

#SS(0) If a memory address referencing the SS segment is in a non-

canonical form.

#GP(0) If the memory address is in a non-canonical form.

(128-bit operations only) If memory operand is not aligned on a

16-byte boundary, regardless of segment.

#UD If CR0.EM[bit 2] = 1.

(128-bit operations only) If CR4.OSFXSR[bit 9] = 0.

If CPUID.01H:ECX.SSSE3[bit 9] = 0.

If the LOCK prefix is used.

#NM If CR0.TS[bit 3] = 1.

#MF (64-bit operations only) If there is a pending x87 FPU exception.

#PF(fault-code) If a page fault occurs.

#AC(0) (64-bit operations only) If alignment checking is enabled and an

unaligned memory reference is made while the current privilege

level is 3.

PMULHUW—Multiply I	Packed Unsigned Intege	ers and Store High Result
--------------------	------------------------	---------------------------

Opcode	Instruction	64-Bit Mode	Compat/ Leg Mode	Description
OF E4 /r	PMULHUW mm1, mm2/m64	Valid	Valid	Multiply the packed unsigned word integers in <i>mm1</i> register and <i>mm2/m64</i> , and store the high 16 bits of the results in <i>mm1</i> .
66 OF E4 /r	PMULHUW xmm1, xmm2/m128	Valid	Valid	Multiply the packed unsigned word integers in <i>xmm1</i> and <i>xmm2/m128</i> , and store the high 16 bits of the results in <i>xmm1</i> .

#### **Description**

Performs a SIMD unsigned multiply of the packed unsigned word integers in the destination operand (first operand) and the source operand (second operand), and stores the high 16 bits of each 32-bit intermediate results in the destination operand. (Figure 4-3 shows this operation when using 64-bit operands.) The source operand can be an MMX technology register or a 64-bit memory location, or it can be an XMM register or a 128-bit memory location. The destination operand can be an MMX technology register or an XMM register.

In 64-bit mode, using a REX prefix in the form of REX.R permits this instruction to access additional registers (XMM8-XMM15).

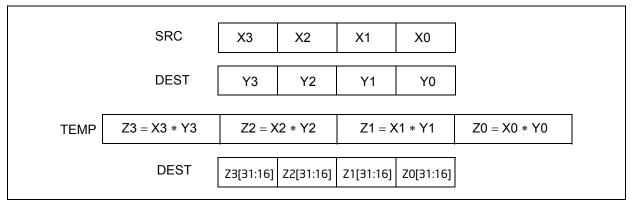


Figure 4-3. PMULHUW and PMULHW Instruction Operation Using 64-bit Operands

## Operation

PMULHUW instruction with 64-bit operands:

TEMP0[31:0] ← DEST[15:0] \* SRC[15:0]; (\* Unsigned multiplication \*)

TEMP1[31:0]  $\leftarrow$  DEST[31:16] \* SRC[31:16]; TEMP2[31:0]  $\leftarrow$  DEST[47:32] \* SRC[47:32];

```
TEMP3[31:0] ←
                    DEST[63:48] * SRC[63:48];
   DEST[15:0] ←
                    TEMP0[31:16];
   DEST[31:16] ←
                    TEMP1[31:16];
   DEST[47:32] ←
                    TEMP2[31:16];
   DEST[63:48] ←
                    TEMP3[31:16];
PMULHUW instruction with 128-bit operands:
   TEMP0[31:0] ← DEST[15:0] * SRC[15:0]; (* Unsigned multiplication *)
   TEMP1[31:0] ←
                   DEST[31:16] * SRC[31:16];
   TEMP2[31:0] \leftarrow DEST[47:32] * SRC[47:32];
   TEMP3[31:0] \leftarrow DEST[63:48] * SRC[63:48];
   TEMP4[31:0] ←
                    DEST[79:64] * SRC[79:64];
   TEMP5[31:0] \leftarrow DEST[95:80] * SRC[95:80];
   TEMP6[31:0] ←
                    DEST[111:96] * SRC[111:96];
   TEMP7[31:0] \leftarrow DEST[127:112] * SRC[127:112];
   DEST[15:0] ←
                    TEMP0[31:16];
   DEST[31:16] ←
                    TEMP1[31:16];
   DEST[47:32] ←
                    TEMP2[31:16];
   DEST[63:48] ←
                    TEMP3[31:16];
   DEST[79:64] ←
                    TEMP4[31:16];
   DEST[95:80] ←
                    TEMP5[31:16];
   DEST[111:96] \leftarrow TEMP6[31:16];
   DEST[127:112] \leftarrow TEMP7[31:16];
```

#### Intel C/C++ Compiler Intrinsic Equivalent

PMULHUW \_\_m64 \_mm\_mulhi\_pu16(\_\_m64 a, \_\_m64 b)

PMULHUW \_\_m128i \_mm\_mulhi\_epu16 ( \_\_m128i a, \_\_m128i b)

## **Flags Affected**

None.

#### **Numeric Exceptions**

None.

#### **Protected Mode Exceptions**

#GP(0) If a memory operand effective address is outside the CS, DS,

ES, FS, or GS segment limit.

(128-bit operations only) If a memory operand is not aligned on

a 16-byte boundary, regardless of segment.

#SS(0) If a memory operand effective address is outside the SS

segment limit.

#UD If CR0.EM[bit 2] = 1.

(128-bit operations only) If CR4.OSFXSR[bit 9] = 0. Execution of 128-bit instructions on a non-SSE2 capable processor (one that is MMX technology capable) will result in the instruction

operating on the mm registers, not #UD.

If the LOCK prefix is used.

#NM If CR0.TS[bit 3] = 1.

#MF (64-bit operations only) If there is a pending x87 FPU exception.

#PF(fault-code) If a page fault occurs.

#AC(0) (64-bit operations only) If alignment checking is enabled and an

unaligned memory reference is made while the current privilege

level is 3.

#### **Real-Address Mode Exceptions**

#GP (128-bit operations only) If a memory operand is not aligned on

a 16-byte boundary, regardless of segment.

If any part of the operand lies outside of the effective address

space from 0 to FFFFH.

#UD If CR0.EM[bit 2] = 1.

(128-bit operations only) If CR4.OSFXSR[bit 9] = 0. Execution of 128-bit instructions on a non-SSE2 capable processor (one that is MMX technology capable) will result in the instruction

operating on the mm registers, not #UD.

If the LOCK prefix is used.

#NM If CR0.TS[bit 3] = 1.

#MF (64-bit operations only) If there is a pending x87 FPU exception.

#### Virtual-8086 Mode Exceptions

Same exceptions as in real address mode.

#PF(fault-code) For a page fault.

#AC(0) (64-bit operations only) If alignment checking is enabled and an

unaligned memory reference is made.

## **Compatibility Mode Exceptions**

Same as for protected mode exceptions.

#### **64-Bit Mode Exceptions**

#SS(0) If a memory address referencing the SS segment is in a non-

canonical form.

#GP(0) If the memory address is in a non-canonical form.

#### INSTRUCTION SET REFERENCE, N-Z

(128-bit operations only) If memory operand is not aligned on a

16-byte boundary, regardless of segment.

#UD If CR0.EM[bit 2] = 1.

(128-bit operations only) If CR4.OSFXSR[bit 9] = 0.

(128-bit operations only) If CPUID.01H:EDX.SSE2[bit 26] = 0.

If the LOCK prefix is used.

#NM If CR0.TS[bit 3] = 1.

#MF (64-bit operations only) If there is a pending x87 FPU exception.

#PF(fault-code) If a page fault occurs.

#AC(0) (64-bit operations only) If alignment checking is enabled and an

unaligned memory reference is made while the current privilege

level is 3.

# PMULHW—Multiply Packed Signed Integers and Store High Result

Opcode	Instruction	64-Bit Mode	Compat/ Leg Mode	Description
OF E5 /r	PMULHW mm, mm/m64	Valid	Valid	Multiply the packed signed word integers in <i>mm1</i> register and <i>mm2/m64</i> , and store the high 16 bits of the results in <i>mm1</i> .
66 OF E5 /r	PMULHW xmm1, xmm2/m128	Valid	Valid	Multiply the packed signed word integers in xmm1 and xmm2/m128, and store the high 16 bits of the results in xmm1.

#### **Description**

Performs a SIMD signed multiply of the packed signed word integers in the destination operand (first operand) and the source operand (second operand), and stores the high 16 bits of each intermediate 32-bit result in the destination operand. (Figure 4-3 shows this operation when using 64-bit operands.) The source operand can be an MMX technology register or a 64-bit memory location, or it can be an XMM register or a 128-bit memory location. The destination operand can be an MMX technology register or an XMM register.

n 64-bit mode, using a REX prefix in the form of REX.R permits this instruction to access additional registers (XMM8-XMM15).

## Operation

```
PMULHW instruction with 64-bit operands:
```

```
\begin{split} & \mathsf{TEMPO}[31:0] \leftarrow & \mathsf{DEST}[15:0] * \mathsf{SRC}[15:0]; (* \, \mathsf{Signed \, multiplication \, }) \\ & \mathsf{TEMP1}[31:0] \leftarrow & \mathsf{DEST}[31:16] * \, \mathsf{SRC}[31:16]; \\ & \mathsf{TEMP2}[31:0] \leftarrow & \mathsf{DEST}[47:32] * \, \mathsf{SRC}[47:32]; \\ & \mathsf{TEMP3}[31:0] \leftarrow & \mathsf{DEST}[63:48] * \, \mathsf{SRC}[63:48]; \\ & \mathsf{DEST}[15:0] \leftarrow & \mathsf{TEMP0}[31:16]; \\ & \mathsf{DEST}[31:16] \leftarrow & \mathsf{TEMP1}[31:16]; \\ & \mathsf{DEST}[47:32] \leftarrow & \mathsf{TEMP2}[31:16]; \\ & \mathsf{DEST}[63:48] \leftarrow & \mathsf{TEMP3}[31:16]; \\ \end{split}
```

#### PMULHW instruction with 128-bit operands:

```
\begin{array}{lll} \text{TEMPO[31:0]} \leftarrow & \text{DEST[15:0]} * \text{SRC[15:0]}; (* \text{ Signed multiplication *}) \\ \text{TEMP1[31:0]} \leftarrow & \text{DEST[31:16]} * \text{SRC[31:16]}; \\ \text{TEMP2[31:0]} \leftarrow & \text{DEST[47:32]} * \text{SRC[47:32]}; \\ \text{TEMP3[31:0]} \leftarrow & \text{DEST[63:48]} * \text{SRC[63:48]}; \\ \text{TEMP4[31:0]} \leftarrow & \text{DEST[79:64]} * \text{SRC[79:64]}; \\ \text{TEMP5[31:0]} \leftarrow & \text{DEST[95:80]} * \text{SRC[95:80]}; \\ \end{array}
```

```
TEMP6[31:01 ←
                DEST[111:96] * SRC[111:96];
TEMP7[31:0] ←
                DEST[127:112] * SRC[127:112];
DEST[15:0] ←
                 TEMP0[31:16];
DEST[31:16] ←
                TEMP1[31:16];
DEST[47:32] ←
                TEMP2[31:16];
                TEMP3[31:16];
DEST[63:48] ←
DEST[79:64] ←
                TEMP4[31:16];
DEST[95:80] ←
                TEMP5[31:16];
DEST[111:96] \leftarrow TEMP6[31:16];
DEST[127:112] \leftarrow TEMP7[31:16];
```

#### Intel C/C++ Compiler Intrinsic Equivalent

```
PMULHW __m64 _mm_mulhi_pi16 (__m64 m1, __m64 m2)

PMULHW __m128i _mm_mulhi_epi16 ( __m128i a, __m128i b)
```

#### **Flags Affected**

None.

#### **Numeric Exceptions**

None.

## **Protected Mode Exceptions**

#GP(0) If a memory operand effective address is outside the CS, DS,

ES, FS, or GS segment limit.

(128-bit operations only) If a memory operand is not aligned on

a 16-byte boundary, regardless of segment.

#SS(0) If a memory operand effective address is outside the SS

segment limit.

#UD If CR0.EM[bit 2] = 1.

128-bit operations will generate #UD only if CR4.OSFXSR[bit 9] = 0. Execution of 128-bit instructions on a non-SSE2 capable processor (one that is MMX technology capable) will result in the

instruction operating on the mm registers, not #UD.

If the LOCK prefix is used.

#NM If CR0.TS[bit 3] = 1.

#MF (64-bit operations only) If there is a pending x87 FPU exception.

#PF(fault-code) If a page fault occurs.

#AC(0) (64-bit operations only) If alignment checking is enabled and an

unaligned memory reference is made while the current privilege

level is 3.

#### **Real-Address Mode Exceptions**

#GP (128-bit operations only) If a memory operand is not aligned on

a 16-byte boundary, regardless of segment.

If any part of the operand lies outside of the effective address

space from 0 to FFFFH.

#UD If CR0.EM[bit 2] = 1.

128-bit operations will generate #UD only if CR4.OSFXSR[bit 9] = 0. Execution of 128-bit instructions on a non-SSE2 capable processor (one that is MMX technology capable) will result in the

instruction operating on the mm registers, not #UD.

If the LOCK prefix is used.

#NM If CR0.TS[bit 3] = 1.

#MF (64-bit operations only) If there is a pending x87 FPU exception.

#### Virtual-8086 Mode Exceptions

Same exceptions as in real address mode.

#PF(fault-code) For a page fault.

#AC(0) (64-bit operations only) If alignment checking is enabled and an

unaligned memory reference is made.

## **Compatibility Mode Exceptions**

Same as for protected mode exceptions.

#### **64-Bit Mode Exceptions**

#SS(0) If a memory address referencing the SS segment is in a non-

canonical form.

#GP(0) If the memory address is in a non-canonical form.

(128-bit operations only) If memory operand is not aligned on a

16-byte boundary, regardless of segment.

#UD If CR0.EM[bit 2] = 1.

(128-bit operations only) If CR4.OSFXSR[bit 9] = 0.

(128-bit operations only) If CPUID.01H:EDX.SSE2[bit 26] = 0.

If the LOCK prefix is used.

#NM If CR0.TS[bit 3] = 1.

#MF (64-bit operations only) If there is a pending x87 FPU exception.

#PF(fault-code) If a page fault occurs.

#AC(0) (64-bit operations only) If alignment checking is enabled and an

unaligned memory reference is made while the current privilege

level is 3.

# PMULLD — Multiply Packed Signed Dword Integers and Store Low Result

Opcode	Instruction	64-bit Mode	Compat/ Leg Mode	Description
66 0F 38 40 /r	PMULLD xmm1, xmm2/m128	Valid	Valid	Multiply the packed dword signed integers in xmm1 and xmm2/m128 and store the low 32 bits of each product in xmm1.

#### **Description**

Performs four signed multiplications from four pairs of signed dword integers and stores the lower 32 bits of the four 64-bit products in the destination operand (first operand). Each dword element in the destination operand is multiplied with the corresponding dword element of the source operand (second operand) to obtain a 64-bit intermediate product.

#### **Operation**

```
Temp0[63:0] ← DEST[31:0] * SRC[31:0];

Temp1[63:0] ← DEST[63:32] * SRC[63:32];

Temp2[63:0] ← DEST[95:64] * SRC[95:64];

Temp3[63:0] ← DEST[127:96] * SRC[127:96];

DEST[31:0] ← Temp0[31:0];

DEST[63:32] ← Temp1[31:0];

DEST[95:64] ← Temp2[31:0];

DEST[127:96] ← Temp3[31:0];
```

## Intel C/C++ Compiler Intrinsic Equivalent

PMULLUD \_\_m128i \_mm\_mullo\_epi32(\_\_m128i a, \_\_m128i b);

## **Flags Affected**

None

#### **Protected Mode Exceptions**

#GP(0) For an illegal memory operand effective address in the CS, DS,

ES, FS, or GS segments.

If a memory operand is not aligned on a 16-byte boundary,

regardless of segment.

#SS(0) For an illegal address in the SS segment.

#PF(fault-code) For a page fault.

#NM If CR0.TS[bit 3] = 1. #UD If CR0.EM[bit 2] = 1.

If CR4.OSFXSR[bit 9] = 0.

If  $CPUID.01H:ECX.SSE4_1[bit 19] = 0$ .

If LOCK prefix is used.

Either the prefix REP (F3h) or REPN (F2H) is used.

#### **Real Mode Exceptions**

#GP(0) if any part of the operand lies outside of the effective address

space from 0 to 0FFFFH.

If a memory operand is not aligned on a 16-byte boundary,

regardless of segment.

#NM If CR0.TS[bit 3] = 1. #UD If CR0.EM[bit 2] = 1.

If CR4.OSFXSR[bit 9] = 0.

If CPUID.01H:  $ECX.SSE4_1[bit 19] = 0$ .

If LOCK prefix is used.

Either the prefix REP (F3h) or REPN (F2H) is used.

## Virtual 8086 Mode Exceptions

Same exceptions as in Real Address Mode.

#PF(fault-code) For a page fault.

## **Compatibility Mode Exceptions**

Same exceptions as in Protected Mode.

#### 64-Bit Mode Exceptions

#GP(0) If the memory address is in a non-canonical form.

If a memory operand is not aligned on a 16-byte boundary,

regardless of segment.

#SS(0) If a memory address referencing the SS segment is in a non-

canonical form.

#PF(fault-code) For a page fault.

#NM If TS in CR0 is set.

#UD If EM in CR0 is set.

If OSFXSR in CR4 is 0.

If CPUID feature flag ECX.SSE4\_1 is 0.

If LOCK prefix is used.

Either the prefix REP (F3h) or REPN (F2H) is used.

PMULLW—Multiply	<i>I</i> Packed Signed	Integers and Store	Low Result
_	,		

Opcode	Instruction	64-Bit Mode	Compat/ Leg Mode	Description
0F D5 /r	PMULLW mm, mm/m64	Valid	Valid	Multiply the packed signed word integers in <i>mm1</i> register and <i>mm2/m64</i> , and store the low 16 bits of the results in <i>mm1</i> .
66 0F D5 /r	PMULLW xmm1, xmm2/m128	Valid	Valid	Multiply the packed signed word integers in xmm1 and xmm2/m128, and store the low 16 bits of the results in xmm1.

#### **Description**

Performs a SIMD signed multiply of the packed signed word integers in the destination operand (first operand) and the source operand (second operand), and stores the low 16 bits of each intermediate 32-bit result in the destination operand. (Figure 4-3 shows this operation when using 64-bit operands.) The source operand can be an MMX technology register or a 64-bit memory location, or it can be an XMM register or a 128-bit memory location. The destination operand can be an MMX technology register or an XMM register.

In 64-bit mode, using a REX prefix in the form of REX.R permits this instruction to access additional registers (XMM8-XMM15).

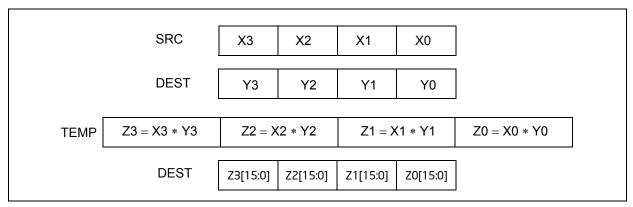


Figure 4-4. PMULLU Instruction Operation Using 64-bit Operands

## **Operation**

PMULLW instruction with 64-bit operands:

```
\begin{array}{ll} \text{TEMPO[31:0]} \leftarrow & \text{DEST[15:0]} * \text{SRC[15:0]}; (* \text{ Signed multiplication *}) \\ \text{TEMP1[31:0]} \leftarrow & \text{DEST[31:16]} * \text{SRC[31:16]}; \\ \text{TEMP2[31:0]} \leftarrow & \text{DEST[47:32]} * \text{SRC[47:32]}; \\ \text{TEMP3[31:0]} \leftarrow & \text{DEST[63:48]} * \text{SRC[63:48]}; \\ \end{array}
```

```
DEST[15:0] ←
                    TEMP0[15:0];
   DEST[31:16] ←
                    TEMP1[15:0];
   DEST[47:32] ←
                    TEMP2[15:0];
   DEST[63:48] ←
                    TEMP3[15:0];
PMULLW instruction with 128-bit operands:
   TEMP0[31:0] ←
                    DEST[15:0] * SRC[15:0]; (* Signed multiplication *)
                    DEST[31:16] * SRC[31:16];
   TEMP1[31:0] ←
   TEMP2[31:0] ←
                    DEST[47:32] * SRC[47:32];
                    DEST[63:48] * SRC[63:48];
   TEMP3[31:0] ←
   TEMP4[31:0] ←
                    DEST[79:64] * SRC[79:64];
   TEMP5[31:0] ←
                    DEST[95:80] * SRC[95:80];
   TEMP6[31:0] ←
                    DEST[111:96] * SRC[111:96];
   TEMP7[31:0] ←
                    DEST[127:112] * SRC[127:112];
   DEST[15:0] ←
                    TEMP0[15:0];
   DEST[31:16] ←
                    TEMP1[15:0];
                    TEMP2[15:0];
   DEST[47:32] ←
   DEST[63:48] \leftarrow TEMP3[15:0];
   DEST[79:64] ←
                    TEMP4[15:0];
   DEST[95:80] \leftarrow TEMP5[15:0];
   DEST[111:96] \leftarrow TEMP6[15:0];
   DEST[127:112] \leftarrow TEMP7[15:0];
```

## Intel C/C++ Compiler Intrinsic Equivalent

```
PMULLW __m64 _mm_mullo_pi16(__m64 m1, __m64 m2)
PMULLW __m128i _mm_mullo_epi16 ( __m128i a, __m128i b)
```

## **Flags Affected**

None.

## **Numeric Exceptions**

None.

#### **Protected Mode Exceptions**

#GP(0) If a memory operand effective address is outside the CS, DS,

ES, FS, or GS segment limit.

(128-bit operations only) If a memory operand is not aligned on

a 16-byte boundary, regardless of segment.

#SS(0) If a memory operand effective address is outside the SS

segment limit.

#UD If CR0.EM[bit 2] = 1.

128-bit operations will generate #UD only if CR4.OSFXSR[bit 9] = 0. Execution of 128-bit instructions on a non-SSE2 capable processor (one that is MMX technology capable) will result in the

instruction operating on the mm registers, not #UD.

If the LOCK prefix is used.

#NM If CR0.TS[bit 3] = 1.

#MF (64-bit operations only) If there is a pending x87 FPU exception.

#PF(fault-code) If a page fault occurs.

#AC(0) (64-bit operations only) If alignment checking is enabled and an

unaligned memory reference is made while the current privilege

level is 3.

#### **Real-Address Mode Exceptions**

#GP (128-bit operations only) If a memory operand is not aligned on

a 16-byte boundary, regardless of segment.

If any part of the operand lies outside of the effective address

space from 0 to FFFFH.

#UD If CR0.EM[bit 2] = 1.

128-bit operations will generate #UD only if CR4.OSFXSR[bit 9] = 0. Execution of 128-bit instructions on a non-SSE2 capable processor (one that is MMX technology capable) will result in the

instruction operating on the mm registers, not #UD.

If the LOCK prefix is used.

#NM If CR0.TS[bit 3] = 1.

#MF (64-bit operations only) If there is a pending x87 FPU exception.

#### Virtual-8086 Mode Exceptions

Same exceptions as in real address mode.

#PF(fault-code) For a page fault.

#AC(0) (64-bit operations only) If alignment checking is enabled and an

unaligned memory reference is made.

## **Compatibility Mode Exceptions**

Same as for protected mode exceptions.

#### **64-Bit Mode Exceptions**

#SS(0) If a memory address referencing the SS segment is in a non-

canonical form.

#GP(0) If the memory address is in a non-canonical form.

(128-bit operations only) If memory operand is not aligned on a

16-byte boundary, regardless of segment.

#UD If CR0.EM[bit 2] = 1.

(128-bit operations only) If CR4.OSFXSR[bit 9] = 0.

(128-bit operations only) If CPUID.01H:EDX.SSE2[bit 26] = 0.

If the LOCK prefix is used.

#NM If CR0.TS[bit 3] = 1.

#MF (64-bit operations only) If there is a pending x87 FPU exception.

#PF(fault-code) If a page fault occurs.

#AC(0) (64-bit operations only) If alignment checking is enabled and an

unaligned memory reference is made while the current privilege

level is 3.

I I IOCODO I IUICIDIV I UCICCO OTISIUTICO DOUDICIVOTO ITICUCIS	PMULUDQ-Mult	iply Packed	Unsigned	<b>Doubleword</b>	Integers
--	--------------	-------------	----------	-------------------	----------

Opcode	Instruction	64-Bit Mode	Compat/ Leg Mode	Description
0F F4 /r	PMULUDQ mm1, mm2/m64	Valid	Valid	Multiply unsigned doubleword integer in <i>mm1</i> by unsigned doubleword integer in <i>mm2/m64</i> , and store the quadword result in <i>mm1</i> .
66 0F F4 /r	PMULUDQ xmm1, xmm2/m128	Valid	Valid	Multiply packed unsigned doubleword integers in <i>xmm1</i> by packed unsigned doubleword integers in <i>xmm2/m128</i> , and store the quadword results in <i>xmm1</i> .

#### **Description**

Multiplies the first operand (destination operand) by the second operand (source operand) and stores the result in the destination operand. The source operand can be an unsigned doubleword integer stored in the low doubleword of an MMX technology register or a 64-bit memory location, or it can be two packed unsigned doubleword integers stored in the first (low) and third doublewords of an XMM register or an 128-bit memory location. The destination operand can be an unsigned doubleword integer stored in the low doubleword an MMX technology register or two packed doubleword integers stored in the first and third doublewords of an XMM register. The result is an unsigned quadword integer stored in the destination an MMX technology register or two packed unsigned quadword integers stored in an XMM register. When a quadword result is too large to be represented in 64 bits (overflow), the result is wrapped around and the low 64 bits are written to the destination element (that is, the carry is ignored).

For 64-bit memory operands, 64 bits are fetched from memory, but only the low doubleword is used in the computation; for 128-bit memory operands, 128 bits are fetched from memory, but only the first and third doublewords are used in the computation.

In 64-bit mode, using a REX prefix in the form of REX.R permits this instruction to access additional registers (XMM8-XMM15).

## **Operation**

```
PMULUDQ instruction with 64-Bit operands:

DEST[63:0] ← DEST[31:0] * SRC[31:0];

PMULUDQ instruction with 128-Bit operands:

DEST[63:0] ← DEST[31:0] * SRC[31:0];

DEST[127:64] ← DEST[95:64] * SRC[95:64];
```

#### Intel C/C++ Compiler Intrinsic Equivalent

PMULUDQ \_\_m64 \_mm\_mul\_su32 (\_\_m64 a, \_\_m64 b)

PMULUDQ \_\_m128i \_mm\_mul\_epu32 ( \_\_m128i a, \_\_m128i b)

#### **Flags Affected**

None.

#### **Protected Mode Exceptions**

#GP(0) If a memory operand effective address is outside the CS, DS,

ES, FS, or GS segment limit.

(128-bit operations only) If a memory operand is not aligned on

a 16-byte boundary, regardless of segment.

#SS(0) If a memory operand effective address is outside the SS

segment limit.

#UD If CR0.EM[bit 2] = 1.

(128-bit operations only) If CR4.OSFXSR[bit 9] = 0.

If CPUID.01H:EDX.SSE2[bit 26] = 0.

If the LOCK prefix is used.

#NM If CR0.TS[bit 3] = 1.

#MF (64-bit operations only) If there is a pending x87 FPU exception.

#PF(fault-code) If a page fault occurs.

#AC(0) (64-bit operations only) If alignment checking is enabled and an

unaligned memory reference is made while the current privilege

level is 3.

## **Real-Address Mode Exceptions**

#GP (128-bit operations only) If a memory operand is not aligned on

a 16-byte boundary, regardless of segment.

If any part of the operand lies outside of the effective address

space from 0 to FFFFH.

#UD If CR0.EM[bit 2] = 1.

(128-bit operations only) If CR4.OSFXSR[bit 9] = 0.

If CPUID.01H:EDX.SSE2[bit 26] = 0.

If the LOCK prefix is used.

#NM If CR0.TS[bit 3] = 1.

#MF (64-bit operations only) If there is a pending x87 FPU exception.

## Virtual-8086 Mode Exceptions

Same exceptions as in real address mode.

#PF(fault-code) For a page fault.

#AC(0) (64-bit operations only) If alignment checking is enabled and an

unaligned memory reference is made.

#### **Compatibility Mode Exceptions**

Same as for protected mode exceptions.

## **64-Bit Mode Exceptions**

#SS(0) If a memory address referencing the SS segment is in a non-

canonical form.

#GP(0) If the memory address is in a non-canonical form.

(128-bit operations only) If memory operand is not aligned on a

16-byte boundary, regardless of segment.

#UD If CR0.EM[bit 2] = 1.

(128-bit operations only) If CR4.OSFXSR[bit 9] = 0.

If CPUID.01H:EDX.SSE2[bit 26] = 0.

If the LOCK prefix is used.

#NM If CR0.TS[bit 3] = 1.

#MF (64-bit operations only) If there is a pending x87 FPU exception.

#PF(fault-code) If a page fault occurs.

#AC(0) (64-bit operations only) If alignment checking is enabled and an

unaligned memory reference is made while the current privilege

level is 3.

# POP—Pop a Value from the Stack

Opcode	Instruction	64-Bit Mode	Compat/ Leg Mode	Description
8F /0	POP r/m16	Valid	Valid	Pop top of stack into $m16$ ; increment stack pointer.
8F /0	POP r/ <i>m32</i>	N.E.	Valid	Pop top of stack into <i>m32</i> ; increment stack pointer.
8F /0	POP r/ <i>m64</i>	Valid	N.E.	Pop top of stack into <i>m64</i> ; increment stack pointer. Cannot encode 32-bit operand size.
58+ <i>rw</i>	POP <i>r16</i>	Valid	Valid	Pop top of stack into <i>r16</i> ; increment stack pointer.
58+ rd	POP <i>г32</i>	N.E.	Valid	Pop top of stack into <i>r32</i> ; increment stack pointer.
58+ rd	POP <i>r64</i>	Valid	N.E.	Pop top of stack into <i>r64</i> ; increment stack pointer. Cannot encode 32-bit operand size.
1F	POP DS	Invalid	Valid	Pop top of stack into DS; increment stack pointer.
07	POP ES	Invalid	Valid	Pop top of stack into ES; increment stack pointer.
17	POP SS	Invalid	Valid	Pop top of stack into SS; increment stack pointer.
OF A1	POP FS	Valid	Valid	Pop top of stack into FS; increment stack pointer by 16 bits.
OF A1	POP FS	N.E.	Valid	Pop top of stack into FS; increment stack pointer by 32 bits.
OF A1	POP FS	Valid	N.E.	Pop top of stack into FS; increment stack pointer by 64 bits.
OF A9	POP GS	Valid	Valid	Pop top of stack into GS; increment stack pointer by 16 bits.
OF A9	POP GS	N.E.	Valid	Pop top of stack into GS; increment stack pointer by 32 bits.
OF A9	POP GS	Valid	N.E.	Pop top of stack into GS; increment stack pointer by 64 bits.

## **Description**

Loads the value from the top of the stack to the location specified with the destination operand (or explicit opcode) and then increments the stack pointer. The destination operand can be a general-purpose register, memory location, or segment register.

The address-size attribute of the stack segment determines the stack pointer size (16, 32, 64 bits) and the operand-size attribute of the current code segment determines the amount the stack pointer is incremented (2, 4, 8 bytes).

For example, if the address- and operand-size attributes are 32, the 32-bit ESP register (stack pointer) is incremented by 4; if they are 16, the 16-bit SP register is incremented by 2. (The B flag in the stack segment's segment descriptor determines the stack's address-size attribute, and the D flag in the current code segment's segment descriptor, along with prefixes, determines the operand-size attribute and also the address-size attribute of the destination operand.)

If the destination operand is one of the segment registers DS, ES, FS, GS, or SS, the value loaded into the register must be a valid segment selector. In protected mode, popping a segment selector into a segment register automatically causes the descriptor information associated with that segment selector to be loaded into the hidden (shadow) part of the segment register and causes the selector and the descriptor information to be validated (see the "Operation" section below).

A NULL value (0000-0003) may be popped into the DS, ES, FS, or GS register without causing a general protection fault. However, any subsequent attempt to reference a segment whose corresponding segment register is loaded with a NULL value causes a general protection exception (#GP). In this situation, no memory reference occurs and the saved value of the segment register is NULL.

The POP instruction cannot pop a value into the CS register. To load the CS register from the stack, use the RET instruction.

If the ESP register is used as a base register for addressing a destination operand in memory, the POP instruction computes the effective address of the operand after it increments the ESP register. For the case of a 16-bit stack where ESP wraps to 0H as a result of the POP instruction, the resulting location of the memory write is processor-family-specific.

The POP ESP instruction increments the stack pointer (ESP) before data at the old top of stack is written into the destination.

A POP SS instruction inhibits all interrupts, including the NMI interrupt, until after execution of the next instruction. This action allows sequential execution of POP SS and MOV ESP, EBP instructions without the danger of having an invalid stack during an interrupt<sup>1</sup>. However, use of the LSS instruction is the preferred method of loading the SS and ESP registers.

In the following sequence, interrupts may be recognized before POP ESP executes:

POP SS

POP SS

POP ESP

If a code instruction breakpoint (for debug) is placed on an instruction located immediately after a POP SS instruction, the breakpoint may not be triggered. However, in a sequence of instructions that POP the SS register, only the first instruction in the sequence is guaranteed to delay an interrupt.

In 64-bit mode, using a REX prefix in the form of REX.R permits access to additional registers (R8-R15). When in 64-bit mode, POPs using 32-bit operands are not encodable and POPs to DS, ES, SS are not valid. See the summary chart at the beginning of this section for encoding data and limits.

#### **Operation**

```
IF StackAddrSize = 32
    THEN
         IF OperandSize = 32
              THEN
                   DEST ← SS:ESP; (* Copy a doubleword *)
                   ESP \leftarrow ESP + 4:
              ELSE (* OperandSize = 16*)
                   DEST \leftarrow SS:ESP; (* Copy a word *)
                   ESP \leftarrow ESP + 2;
         FI:
   ELSE IF StackAddrSize = 64
         THEN
              IF OperandSize = 64
                   THEN
                         DEST ← SS:RSP; (* Copy quadword *)
                         RSP \leftarrow RSP + 8;
                   ELSE (* OperandSize = 16*)
                         DEST \leftarrow SS:RSP; (* Copy a word *)
                        RSP \leftarrow RSP + 2;
              FI:
         FI;
    ELSE StackAddrSize = 16
         THEN
              IF OperandSize = 16
                   THEN
                         DEST \leftarrow SS:SP; (* Copy a word *)
                        SP \leftarrow SP + 2;
                   ELSE (* OperandSize = 32 *)
                         DEST \leftarrow SS:SP; (* Copy a doubleword *)
                        SP \leftarrow SP + 4;
              FI:
```

Loading a segment register while in protected mode results in special actions, as described in the following listing. These checks are performed on the segment selector and the segment descriptor it points to.

FI;

```
64-BIT_MODE
IF FS, or GS is loaded with non-NULL selector;
   THEN
        IF segment selector index is outside descriptor table limits
            OR segment is not a data or readable code segment
            OR ((segment is a data or nonconforming code segment)
                 AND (both RPL and CPL > DPL))
                     THEN #GP(selector);
            IF segment not marked present
                 THEN #NP(selector);
        ELSE
            SegmentRegister ← segment selector;
            SegmentRegister ← segment descriptor;
        FI;
FI:
IF FS, or GS is loaded with a NULL selector;
        THEN
            SegmentRegister ← segment selector;
            SegmentRegister ← segment descriptor;
FI;
PREOTECTED MODE OR COMPATIBILITY MODE;
IF SS is loaded:
   THEN
        IF segment selector is NULL
            THEN #GP(0);
        FI;
        IF segment selector index is outside descriptor table limits
            or segment selector's RPL ≠ CPL
            or segment is not a writable data segment
            or DPL ≠ CPL
                 THEN #GP(selector);
        FI:
        IF segment not marked present
            THEN #SS(selector);
            ELSE
                 SS \leftarrow segment selector;
                 SS \leftarrow segment descriptor;
        FI;
FI;
```

```
IF DS, ES, FS, or GS is loaded with non-NULL selector:
   THEN
        IF segment selector index is outside descriptor table limits
            or segment is not a data or readable code segment
            or ((segment is a data or nonconforming code segment)
            and (both RPL and CPL > DPL))
                 THEN #GP(selector);
        FI;
        IF segment not marked present
            THEN #NP(selector);
            ELSE
                 SegmentRegister ← segment selector;
                 SegmentRegister ← segment descriptor;
        FI:
FI:
IF DS, ES, FS, or GS is loaded with a NULL selector
   THEN
        SegmentRegister ← segment selector;
        SegmentRegister ← segment descriptor;
FI:
```

## **Flags Affected**

None.

## **Protected Mode Exceptions**

#GP(0) If attempt is made to load SS register with NULL segment

selector.

If the destination operand is in a non-writable segment.

If a memory operand effective address is outside the CS, DS,

ES, FS, or GS segment limit.

If the DS, ES, FS, or GS register is used to access memory and it

contains a NULL segment selector.

#GP(selector) If segment selector index is outside descriptor table limits.

If the SS register is being loaded and the segment selector's RPL and the segment descriptor's DPL are not equal to the CPL.

If the SS register is being loaded and the segment pointed to is a

non-writable data segment.

If the DS, ES, FS, or GS register is being loaded and the segment pointed to is not a data or readable code segment.

If the DS, ES, FS, or GS register is being loaded and the

segment pointed to is a data or nonconforming code segment,

but both the RPL and the CPL are greater than the DPL.

#SS(0) If the current top of stack is not within the stack segment.

If a memory operand effective address is outside the SS

segment limit.

#SS(selector) If the SS register is being loaded and the segment pointed to is

marked not present.

#NP If the DS, ES, FS, or GS register is being loaded and the

segment pointed to is marked not present.

#PF(fault-code) If a page fault occurs.

#AC(0) If an unaligned memory reference is made while the current

privilege level is 3 and alignment checking is enabled.

#UD If the LOCK prefix is used.

#### **Real-Address Mode Exceptions**

#GP If a memory operand effective address is outside the CS, DS,

ES, FS, or GS segment limit.

#UD If the LOCK prefix is used.

#### Virtual-8086 Mode Exceptions

#GP(0) If a memory operand effective address is outside the CS, DS,

ES, FS, or GS segment limit.

#PF(fault-code) If a page fault occurs.

#AC(0) If an unaligned memory reference is made while alignment

checking is enabled.

#UD If the LOCK prefix is used.

#### **Compatibility Mode Exceptions**

Same as for protected mode exceptions.

#### **64-Bit Mode Exceptions**

#GP(0) If the memory address is in a non-canonical form.

#SS(U) If the stack address is in a non-canonical form.

#GP(selector) If the descriptor is outside the descriptor table limit.

If the FS or GS register is being loaded and the segment pointed

to is not a data or readable code segment.

If the FS or GS register is being loaded and the segment pointed to is a data or nonconforming code segment, but both the RPL

and the CPL are greater than the DPL.

#AC(0) If an unaligned memory reference is made while alignment

checking is enabled.

#PF(fault-code) If a page fault occurs.

#NP If the FS or GS register is being loaded and the segment pointed

to is marked not present.

**#UD** If the LOCK prefix is used.

# POPA/POPAD—Pop All General-Purpose Registers

Opcode	Instruction	64-Bit Mode	Compat/ Leg Mode	Description
61	POPA	Invalid	Valid	Pop DI, SI, BP, BX, DX, CX, and AX.
61	POPAD	Invalid	Valid	Pop EDI, ESI, EBP, EBX, EDX, ECX, and EAX.

## **Description**

Pops doublewords (POPAD) or words (POPA) from the stack into the general-purpose registers. The registers are loaded in the following order: EDI, ESI, EBP, EBX, EDX, ECX, and EAX (if the operand-size attribute is 32) and DI, SI, BP, BX, DX, CX, and AX (if the operand-size attribute is 16). (These instructions reverse the operation of the PUSHA/PUSHAD instructions.) The value on the stack for the ESP or SP register is ignored. Instead, the ESP or SP register is incremented after each register is loaded.

The POPA (pop all) and POPAD (pop all double) mnemonics reference the same opcode. The POPA instruction is intended for use when the operand-size attribute is 16 and the POPAD instruction for when the operand-size attribute is 32. Some assemblers may force the operand size to 16 when POPA is used and to 32 when POPAD is used (using the operand-size override prefix [66H] if necessary). Others may treat these mnemonics as synonyms (POPA/POPAD) and use the current setting of the operand-size attribute to determine the size of values to be popped from the stack, regardless of the mnemonic used. (The D flag in the current code segment's segment descriptor determines the operand-size attribute.)

This instruction executes as described in non-64-bit modes. It is not valid in 64-bit mode.

## **Operation**

```
IF 64-Bit Mode THEN #UD;

ELSE

IF OperandSize = 32 (* Instruction = POPAD *)

THEN

EDI \leftarrow Pop();

ESI \leftarrow Pop();

EBP \leftarrow Pop();

Increment ESP by 4; (* Skip next 4 bytes of stack *)

EBX \leftarrow Pop();

EDX \leftarrow Pop();

ECX \leftarrow Pop();

EAX \leftarrow Pop();
```

```
ELSE (* OperandSize = 16, instruction = POPA *)
DI \leftarrow Pop();
SI \leftarrow Pop();
BP \leftarrow Pop();
Increment ESP by 2; (* Skip next 2 bytes of stack *)
BX \leftarrow Pop();
DX \leftarrow Pop();
CX \leftarrow Pop();
CX \leftarrow Pop();
AX \leftarrow Pop();
FI;
```

#### **Flags Affected**

None.

#### **Protected Mode Exceptions**

#SS(0) If the starting or ending stack address is not within the stack

segment.

#PF(fault-code) If a page fault occurs.

#AC(0) If an unaligned memory reference is made while the current

privilege level is 3 and alignment checking is enabled.

**#UD** If the LOCK prefix is used.

#### Real-Address Mode Exceptions

#SS If the starting or ending stack address is not within the stack

seament.

**#UD** If the LOCK prefix is used.

#### Virtual-8086 Mode Exceptions

#SS(0) If the starting or ending stack address is not within the stack

segment.

#PF(fault-code) If a page fault occurs.

#AC(0) If an unaligned memory reference is made while alignment

checking is enabled.

**#UD** If the LOCK prefix is used.

## **Compatibility Mode Exceptions**

Same as for protected mode exceptions.

## **64-Bit Mode Exceptions**

#UD If in 64-bit mode.

#### POPCNT — Return the Count of Number of Bits Set to 1

Opcode	Instruction	64-Bit Mode	Compat/ Leg Mode	Description
F3 0F B8 /r	POPCNT r16, r/m16	Valid	Valid	POPCNT on r/m16
F3 0F B8 /r	POPCNT <i>r32, r/m32</i>	Valid	Valid	POPCNT on r/m32
F3 REX.W OF B8 /r	POPCNT r64, r/m64	Valid	N.E.	POPCNT on r/m64

#### **Description**

This instruction calculates of number of bits set to 1 in the second operand (source) and returns the count in the first operand (a destination register).

## **Operation**

## **Flags Affected**

OF, SF, ZF, AF, CF, PF are all cleared. ZF is set if SRC == 0, otherwise ZF is cleared

## Intel C/C++ Compiler Intrinsic Equivalent

```
POPCNT int _mm_popcnt_u32(unsigned int a);

POPCNT int64_t _mm_popcnt_u64(unsigned __int64 a);
```

## **Protected Mode Exceptions**

#GP(0) If a memory operand effective address is outside the CS, DS,

ES, FS or GS segments.

#SS(0) If a memory operand effective address is outside the SS

segment limit.

#PF (fault-code) For a page fault.

#UD If CPUID.01H:ECX.POPCNT [Bit 23] = 0.

If LOCK prefix is used.

Either the prefix REP (F3h) or REPN (F2H) is used.

#### **Real Mode Exceptions**

#GP(0) If any part of the operand lies outside of the effective address

space from 0 to 0FFFFH.

#SS(0) If a memory operand effective address is outside the SS

segment limit.

#UD If CPUID.01H:ECX.POPCNT [Bit 23] = 0.

If LOCK prefix is used.

Either the prefix REP (F3h) or REPN (F2H) is used.

#### **Virtual 8086 Mode Exceptions**

#GP(0) If any part of the operand lies outside of the effective address

space from 0 to 0FFFFH.

#SS(0) If a memory operand effective address is outside the SS

segment limit.

#PF (fault-code) For a page fault.

#UD If CPUID.01H:ECX.POPCNT [Bit 23] = 0.

If LOCK prefix is used.

Either the prefix REP (F3h) or REPN (F2H) is used.

## **Compatibility Mode Exceptions**

Same exceptions as in Protected Mode.

#### **64-Bit Mode Exceptions**

#GP(0) If the memory address is in a non-canonical form.

#SS(0) If a memory address referencing the SS segment is in a non-

canonical form.

#PF (fault-code) For a page fault.

#UD If CPUID.01H: ECX.POPCNT [Bit 23] = 0.

If LOCK prefix is used.

Either the prefix REP (F3h) or REPN (F2H) is used.

Opcode	Instruction	64-Bit Mode	Compat/ Leg Mode	Description
9D	POPF	Valid	Valid	Pop top of stack into lower 16 bits of EFLAGS.
9D	POPFD	N.E.	Valid	Pop top of stack into EFLAGS.
REX.W + 9D	POPFQ	Valid	N.E.	Pop top of stack and zero-extend into RFLAGS.

#### **Description**

Pops a doubleword (POPFD) from the top of the stack (if the current operand-size attribute is 32) and stores the value in the EFLAGS register, or pops a word from the top of the stack (if the operand-size attribute is 16) and stores it in the lower 16 bits of the EFLAGS register (that is, the FLAGS register). These instructions reverse the operation of the PUSHF/PUSHFD instructions.

The POPF (pop flags) and POPFD (pop flags double) mnemonics reference the same opcode. The POPF instruction is intended for use when the operand-size attribute is 16; the POPFD instruction is intended for use when the operand-size attribute is 32. Some assemblers may force the operand size to 16 for POPF and to 32 for POPFD. Others may treat the mnemonics as synonyms (POPF/POPFD) and use the setting of the operand-size attribute to determine the size of values to pop from the stack.

The effect of POPF/POPFD on the EFLAGS register changes, depending on the mode of operation. When the processor is operating in protected mode at privilege level 0 (or in real-address mode, the equivalent to privilege level 0), all non-reserved flags in the EFLAGS register except RF<sup>1</sup>, VIP, VIF, and VM may be modified. VIP, VIF and VM remain unaffected.

When operating in protected mode with a privilege level greater than 0, but less than or equal to IOPL, all flags can be modified except the IOPL field and VIP, VIF, and VM. Here, the IOPL flags are unaffected, the VIP and VIF flags are cleared, and the VM flag is unaffected. The interrupt flag (IF) is altered only when executing at a level at least as privileged as the IOPL. If a POPF/POPFD instruction is executed with insufficient privilege, an exception does not occur but privileged bits do not change.

When operating in virtual-8086 mode, the IOPL must be equal to 3 to use POPF/POPFD instructions; VM, RF, IOPL, VIP, and VIF are unaffected. If the IOPL is less than 3, POPF/POPFD causes a general-protection exception (#GP).

In 64-bit mode, use REX.W to pop the top of stack to RFLAGS. The mnemonic assigned is POPFQ (note that the 32-bit operand is not encodable). POPFQ pops 64

<sup>1.</sup> RF is always zero after the execution of POPF. This is because POPF, like all instructions, clears RF as it begins to execute.

bits from the stack, loads the lower 32 bits into RFLAGS, and zero extends the upper bits of RFLAGS.

See Chapter 3 of the Intel® 64 and IA-32 Architectures Software Developer's Manual, Volume 1, for more information about the EFLAGS registers.

#### **Operation**

```
IF VM = 0 (* Not in Virtual-8086 Mode *)
    THEN IF CPL = 0
        THEN
             IF OperandSize = 32;
                  THEN
                       EFLAGS \leftarrow Pop(); (* 32-bit pop *)
                       (* All non-reserved flags except RF, VIP, VIF, and VM can be modified;
                       VIP and VIF are cleared; RF, VM, and all reserved bits are unaffected. *)
                  ELSE IF (Operandsize = 64)
                       RFLAGS = Pop(); (* 64-bit pop *)
                       (* All non-reserved flags except RF, VIP, VIF, and VM can be modified; VIP
                       and VIF are cleared; RF, VM, and all reserved bits are unaffected.*)
                  ELSE (* OperandSize = 16 *)
                       EFLAGS[15:0] \leftarrow Pop(); (* 16-bit pop *)
                       (* All non-reserved flags can be modified. *)
             FI;
        ELSE (* CPL > 0 *)
             IF OperandSize = 32
                  THEN
                       IF CPL > IOPL
                            THFN
                                 EFLAGS \leftarrow Pop(); (* 32-bit pop *)
                                 (* All non-reserved bits except IF, IOPL, RF, VIP, and
                                 VIF can be modified; IF, IOPL, RF, VM, and all reserved
                                 bits are unaffected; VIP and VIF are cleared. *)
                            ELSE
                                 EFLAGS \leftarrow Pop(); (* 32-bit pop *)
                                 (* All non-reserved bits except IOPL, RF, VIP, and VIF can be
                                  modified; IOPL, RF, VM, and all reserved bits are
                                  unaffected: VIP and VIF are cleared. *)
                       FI;
                  ELSE IF (Operandsize = 64)
                       IF CPL > IOPL
                            THEN
                                 RFLAGS \leftarrow Pop(); (* 64-bit pop *)
                                 (* All non-reserved bits except IF, IOPL, RF, VIP, and
```

```
VIF can be modified; IF, IOPL, RF, VM, and all reserved
                                  bits are unaffected; VIP and VIF are cleared. *)
                            ELSE
                                  RFLAGS \leftarrow Pop(); (* 64-bit pop *)
                                  (* All non-reserved bits except IOPL, RF, VIP, and VIF can be
                                  modified; IOPL, RF, VM, and all reserved bits are
                                  unaffected; VIP and VIF are cleared. *)
                       FI:
                   ELSE (* OperandSize = 16 *)
                       EFLAGS[15:0] \leftarrow Pop(); (* 16-bit pop *)
                       (* All non-reserved bits except IOPL can be modified; IOPL and all
                       reserved bits are unaffected. *)
             FI;
        FI;
   ELSE (* In Virtual-8086 Mode *)
        IF IOPL = 3
             THEN IF OperandSize = 32
                  THEN
                       EFLAGS \leftarrow Pop();
                       (* All non-reserved bits except VM, RF, IOPL, VIP, and VIF can be
                       modified; VM, RF, IOPL, VIP, VIF, and all reserved bits are unaffected. *)
                  ELSE
                       EFLAGS[15:0] \leftarrow Pop(); FI;
                       (* All non-reserved bits except IOPL can be modified;
                       IOPL and all reserved bits are unaffected. *)
        ELSE (* IOPL < 3 *)
              #GP(0); (* Trap to virtual-8086 monitor. *)
        FI;
   FI;
FI;
```

## **Flags Affected**

All flags may be affected; see the Operation section for details.

### **Protected Mode Exceptions**

#SS(0) If the top of stack is not within the stack segment.

#PF(fault-code) If a page fault occurs.

#AC(0) If an unaligned memory reference is made while the current

privilege level is 3 and alignment checking is enabled.

#UD If the LOCK prefix is used.

### **Real-Address Mode Exceptions**

#SS If the top of stack is not within the stack segment.

#UD If the LOCK prefix is used.

### Virtual-8086 Mode Exceptions

#GP(0) If the I/O privilege level is less than 3.

If an attempt is made to execute the POPF/POPFD instruction

with an operand-size override prefix.

#SS(0) If the top of stack is not within the stack segment.

#PF(fault-code) If a page fault occurs.

#AC(0) If an unaligned memory reference is made while alignment

checking is enabled.

#UD If the LOCK prefix is used.

## **Compatibility Mode Exceptions**

Same as for protected mode exceptions.

### **64-Bit Mode Exceptions**

#GP(0) If the memory address is in a non-canonical form. #SS(0) If the stack address is in a non-canonical form.

#PF(fault-code) If a page fault occurs.

#AC(0) If alignment checking is enabled and an unaligned memory

reference is made while the current privilege level is 3.

#UD If the LOCK prefix is used.

# **POR—Bitwise Logical OR**

Opcode	Instruction	64-Bit Mode	Compat/ Leg Mode	Description
0F EB / <i>r</i>	POR mm, mm/m64	Valid	Valid	Bitwise OR of <i>mm/m64</i> and <i>mm</i> .
66 OF EB /r	POR xmm1, xmm2/m128	Valid	Valid	Bitwise OR of xmm2/m128 and xmm1.

## **Description**

Performs a bitwise logical OR operation on the source operand (second operand) and the destination operand (first operand) and stores the result in the destination operand. The source operand can be an MMX technology register or a 64-bit memory location or it can be an XMM register or a 128-bit memory location. The destination operand can be an MMX technology register or an XMM register. Each bit of the result is set to 1 if either or both of the corresponding bits of the first and second operands are 1; otherwise, it is set to 0.

In 64-bit mode, using a REX prefix in the form of REX.R permits this instruction to access additional registers (XMM8-XMM15).

### **Operation**

DEST ← DEST OR SRC:

## Intel C/C++ Compiler Intrinsic Equivalent

POR \_\_m64 \_mm\_or\_si64(\_\_m64 m1, \_\_m64 m2)

POR \_\_m128i \_mm\_or\_si128(\_\_m128i m1, \_\_m128i m2)

#### **Flags Affected**

None.

### **Numeric Exceptions**

None.

## **Protected Mode Exceptions**

#GP(0) If a memory operand effective address is outside the CS, DS,

ES, FS, or GS segment limit.

(128-bit operations only) If a memory operand is not aligned on

a 16-byte boundary, regardless of segment.

#SS(0) If a memory operand effective address is outside the SS

segment limit.

#UD If CR0.EM[bit 2] = 1.

128-bit operations will generate #UD only if CR4.OSFXSR[bit 9] = 0. Execution of 128-bit instructions on a non-SSE2 capable processor (one that is MMX technology capable) will result in the

instruction operating on the mm registers, not #UD.

If the LOCK prefix is used.

#NM If CR0.TS[bit 3] = 1.

#MF (64-bit operations only) If there is a pending x87 FPU exception.

#PF(fault-code) If a page fault occurs.

#AC(0) (64-bit operations only) If alignment checking is enabled and an

unaligned memory reference is made while the current privilege

level is 3.

### **Real-Address Mode Exceptions**

#GP (128-bit operations only) If a memory operand is not aligned on

a 16-byte boundary, regardless of segment.

If any part of the operand lies outside of the effective address

space from 0 to FFFFH.

#UD If CR0.EM[bit 2] = 1.

128-bit operations will generate #UD only if CR4.OSFXSR[bit 9] = 0. Execution of 128-bit instructions on a non-SSE2 capable processor (one that is MMX technology capable) will result in the

instruction operating on the mm registers, not #UD.

If the LOCK prefix is used.

#NM If CR0.TS[bit 3] = 1.

#MF (64-bit operations only) If there is a pending x87 FPU exception.

#### Virtual-8086 Mode Exceptions

Same exceptions as in real address mode.

#PF(fault-code) For a page fault.

#AC(0) (64-bit operations only) If alignment checking is enabled and an

unaligned memory reference is made.

## **Compatibility Mode Exceptions**

Same as for protected mode exceptions.

#### **64-Bit Mode Exceptions**

#SS(0) If a memory address referencing the SS segment is in a non-

canonical form.

#### INSTRUCTION SET REFERENCE, N-Z

#GP(0) If the memory address is in a non-canonical form.

(128-bit operations only) If memory operand is not aligned on a

16-byte boundary, regardless of segment.

#UD If CR0.EM[bit 2] = 1.

(128-bit operations only) If CR4.OSFXSR[bit 9] = 0.

(128-bit operations only) If CPUID.01H:EDX.SSE2[bit 26] = 0.

If the LOCK prefix is used.

#NM If CR0.TS[bit 3] = 1.

#MF (64-bit operations only) If there is a pending x87 FPU exception.

#PF(fault-code) If a page fault occurs.

#AC(0) (64-bit operations only) If alignment checking is enabled and an

unaligned memory reference is made while the current privilege

level is 3.

#### PREFETCH*h*—Prefetch Data Into Caches

Opcode	Instruction	64-Bit Mode	Compat/ Leg Mode	Description
0F 18 /1	PREFETCHTO m8	Valid	Valid	Move data from <i>m8</i> closer to the processor using T0 hint.
0F 18 /2	PREFETCHT1 m8	Valid	Valid	Move data from <i>m8</i> closer to the processor using T1 hint.
0F 18 /3	PREFETCHT2 m8	Valid	Valid	Move data from <i>m8</i> closer to the processor using T2 hint.
0F 18 /0	PREFETCHNTA m8	Valid	Valid	Move data from <i>m8</i> closer to the processor using NTA hint.

### Description

Fetches the line of data from memory that contains the byte specified with the source operand to a location in the cache hierarchy specified by a locality hint:

- T0 (temporal data)—prefetch data into all levels of the cache hierarchy.
  - Pentium III processor—1st- or 2nd-level cache.
  - Pentium 4 and Intel Xeon processors—2nd-level cache.
- T1 (temporal data with respect to first level cache)—prefetch data into level 2 cache and higher.
  - Pentium III processor—2nd-level cache.
  - Pentium 4 and Intel Xeon processors—2nd-level cache.
- T2 (temporal data with respect to second level cache)—prefetch data into level 2 cache and higher.
  - Pentium III processor—2nd-level cache.
  - Pentium 4 and Intel Xeon processors—2nd-level cache.
- NTA (non-temporal data with respect to all cache levels)—prefetch data into non-temporal cache structure and into a location close to the processor, minimizing cache pollution.
  - Pentium III processor—1st-level cache
  - Pentium 4 and Intel Xeon processors—2nd-level cache

The source operand is a byte memory location. (The locality hints are encoded into the machine level instruction using bits 3 through 5 of the ModR/M byte. Use of any ModR/M value other than the specified ones will lead to unpredictable behavior.)

If the line selected is already present in the cache hierarchy at a level closer to the processor, no data movement occurs. Prefetches from uncacheable or WC memory are ignored.

The PREFETCHh instruction is merely a hint and does not affect program behavior. If executed, this instruction moves data closer to the processor in anticipation of future use.

The implementation of prefetch locality hints is implementation-dependent, and can be overloaded or ignored by a processor implementation. The amount of data prefetched is also processor implementation-dependent. It will, however, be a minimum of 32 bytes.

It should be noted that processors are free to speculatively fetch and cache data from system memory regions that are assigned a memory-type that permits speculative reads (that is, the WB, WC, and WT memory types). A PREFETCHh instruction is considered a hint to this speculative behavior. Because this speculative fetching can occur at any time and is not tied to instruction execution, a PREFETCHh instruction is not ordered with respect to the fence instructions (MFENCE, SFENCE, and LFENCE) or locked memory references. A PREFETCHh instruction is also unordered with respect to CLFLUSH instructions, other PREFETCHh instructions, or any other general instruction. It is ordered with respect to serializing instructions such as CPUID, WRMSR, OUT, and MOV CR.

This instruction's operation is the same in non-64-bit modes and 64-bit mode.

### **Operation**

FETCH (m8);

## Intel C/C++ Compiler Intrinsic Equivalent

void \_mm\_prefetch(char \*p, int i)

The argument "\*p" gives the address of the byte (and corresponding cache line) to be prefetched. The value "i" gives a constant (\_MM\_HINT\_T0, \_MM\_HINT\_T1, \_MM\_HINT\_T2, or \_MM\_HINT\_NTA) that specifies the type of prefetch operation to be performed.

#### **Numeric Exceptions**

None.

## **Exceptions (All Operating Modes)**

#UD If the LOCK prefix is used.

# PSADBW—Compute Sum of Absolute Differences

Opcode	Instruction	64-Bit Mode	Compat/ Leg Mode	Description
OF F6 /r	PSADBW mm1, mm2/m64	Valid	Valid	Computes the absolute differences of the packed unsigned byte integers from mm2 /m64 and mm1; differences are then summed to produce an unsigned word integer result.
66 OF F6 /r	PSADBW xmm1, xmm2/m128	Valid	Valid	Computes the absolute differences of the packed unsigned byte integers from xmm2 /m128 and xmm1; the 8 low differences and 8 high differences are then summed separately to produce two unsigned word integer results.

## **Description**

Computes the absolute value of the difference of 8 unsigned byte integers from the source operand (second operand) and from the destination operand (first operand). These 8 differences are then summed to produce an unsigned word integer result that is stored in the destination operand. The source operand can be an MMX technology register or a 64-bit memory location or it can be an XMM register or a 128-bit memory location. The destination operand can be an MMX technology register or an XMM register. Figure 4-5 shows the operation of the PSADBW instruction when using 64-bit operands.

When operating on 64-bit operands, the word integer result is stored in the low word of the destination operand, and the remaining bytes in the destination operand are cleared to all 0s.

When operating on 128-bit operands, two packed results are computed. Here, the 8 low-order bytes of the source and destination operands are operated on to produce a word result that is stored in the low word of the destination operand, and the 8 high-order bytes are operated on to produce a word result that is stored in bits 64 through 79 of the destination operand. The remaining bytes of the destination operand are cleared.

In 64-bit mode, using a REX prefix in the form of REX.R permits this instruction to access additional registers (XMM8-XMM15).

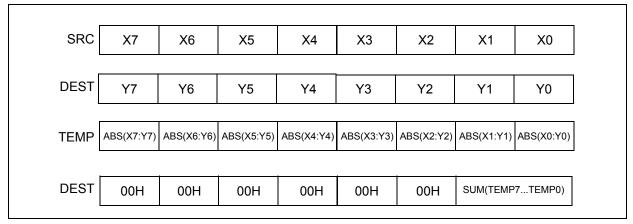


Figure 4-5. PSADBW Instruction Operation Using 64-bit Operands

### **Operation**

```
PSADBW instructions when using 64-bit operands: 

TEMPO \leftarrow ABS(DEST[7:0] - SRC[7:0]); (* Repeat operation for bytes 2 through 6 *) 

TEMP7 \leftarrow ABS(DEST[63:56] - SRC[63:56]); DEST[15:0] \leftarrow SUM(TEMP0:TEMP7); DEST[63:16] \leftarrow 000000000000H; 

PSADBW instructions when using 128-bit operands: 

TEMP0 \leftarrow ABS(DEST[7:0] - SRC[7:0]); (* Repeat operation for bytes 2 through 14 *) 

TEMP15 \leftarrow ABS(DEST[127:120] - SRC[127:120]); DEST[15:0] \leftarrow SUM(TEMP0:TEMP7); DEST[63:16] \leftarrow 000000000000H; DEST[79:64] \leftarrow SUM(TEMP8:TEMP15); DEST[127:80] \leftarrow 000000000000H;
```

# Intel C/C++ Compiler Intrinsic Equivalent

```
PSADBW __m64 _mm_sad_pu8(__m64 a,__m64 b)
PSADBW __m128i _mm_sad_epu8(__m128i a, __m128i b)
```

# **Flags Affected**

None.

### **Numeric Exceptions**

None.

### **Protected Mode Exceptions**

#GP(0) If a memory operand effective address is outside the CS, DS,

ES, FS, or GS segment limit.

(128-bit operations only) If a memory operand is not aligned on

a 16-byte boundary, regardless of segment.

#SS(0) If a memory operand effective address is outside the SS

segment limit.

#UD If CR0.EM[bit 2] = 1.

(128-bit operations only) If CR4.OSFXSR[bit 9] = 0. Execution of 128-bit instructions on a non-SSE2 capable processor (one that is MMX technology capable) will result in the instruction

operating on the mm registers, not #UD.

If the LOCK prefix is used.

#NM If CR0.TS[bit 3] = 1.

#MF (64-bit operations only) If there is a pending x87 FPU exception.

#PF(fault-code) If a page fault occurs.

#AC(0) (64-bit operations only) If alignment checking is enabled and an

unaligned memory reference is made while the current privilege

level is 3.

## **Real-Address Mode Exceptions**

#GP (128-bit operations only) If a memory operand is not aligned on

a 16-byte boundary, regardless of segment.

If any part of the operand lies outside of the effective address

space from 0 to FFFFH.

#UD If CR0.EM[bit 2] = 1.

(128-bit operations only) If CR4.OSFXSR[bit 9] = 0. Execution of 128-bit instructions on a non-SSE2 capable processor (one that is MMX technology capable) will result in the instruction

operating on the mm registers, not #UD.

If the LOCK prefix is used.

#NM If CR0.TS[bit 3] = 1.

#MF (64-bit operations only) If there is a pending x87 FPU exception.

### Virtual-8086 Mode Exceptions

Same exceptions as in real address mode.

#PF(fault-code) For a page fault.

#AC(0) (64-bit operations only) If alignment checking is enabled and an

unaligned memory reference is made.

### **Compatibility Mode Exceptions**

Same as for protected mode exceptions.

## **64-Bit Mode Exceptions**

#SS(0) If a memory address referencing the SS segment is in a non-

canonical form.

#GP(0) If the memory address is in a non-canonical form.

(128-bit operations only) If memory operand is not aligned on a

16-byte boundary, regardless of segment.

#UD If CR0.EM[bit 2] = 1.

(128-bit operations only) If CR4.OSFXSR[bit 9] = 0.

(128-bit operations only) If CPUID.01H:EDX.SSE2[bit 26] = 0.

If the LOCK prefix is used.

#NM If CR0.TS[bit 3] = 1.

#MF (64-bit operations only) If there is a pending x87 FPU exception.

#PF(fault-code) If a page fault occurs.

#AC(0) (64-bit operations only) If alignment checking is enabled and an

unaligned memory reference is made while the current privilege

level is 3.

# PSHUFB — Packed Shuffle Bytes

Opcode	Instruction	64-Bit Mode	Compat/ Leg Mode	Description
OF 38 00 /r	PSHUFB mm1, mm2/m64	Valid	Valid	Shuffle bytes in mm1 according to contents of mm2/m64.
66 0F 38 00 /r	PSHUFB xmm1, xmm2/m128	Valid	Valid	Shuffle bytes in xmm1 according to contents of xmm2/m128.

## **Description**

PSHUFB performs in-place shuffles of bytes in the destination operand (the first operand) according to the shuffle control mask in the source operand (the second operand). The instruction permutes the data in the destination operand, leaving the shuffle mask unaffected. If the most significant bit (bit[7]) of each byte of the shuffle control mask is set, then constant zero is written in the result byte. Each byte in the shuffle control mask forms an index to permute the corresponding byte in the destination operand. The value of each index is the least significant 4 bits (128-bit operation) or 3 bits (64-bit operation) of the shuffle control byte. Both operands can be MMX register or XMM registers. When the source operand is a 128-bit memory operand, the operand must be aligned on a 16-byte boundary or a general-protection exception (#GP) will be generated.

In 64-bit mode, use the REX prefix to access additional registers.

## **Operation**

PSHUFB with 64 bit operands:

```
else index[3..0] \leftarrow SRC[(i*8)+3 .. (i*8)+0]; \\ DEST[(i*8)+7..(i*8)+0] \leftarrow DEST[(index*8+7)..(index*8+0)]; \\ endif \}
```

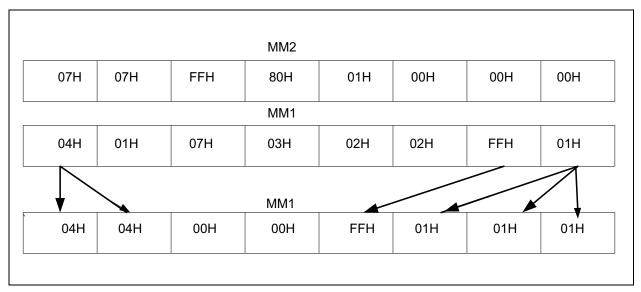


Figure 4-6. PSHUB with 64-Bit Operands

#### Intel C/C++ Compiler Intrinsic Equivalent

```
PSHUFB __m64 _mm_shuffle_pi8 (__m64 a, __m64 b)
PSHUFB __m128i _mm_shuffle_epi8 (__m128i a, __m128i b)
```

### **Protected Mode Exceptions**

#GP(0) If a memory operand effective address is outside the CS, DS,

ES, FS or GS segments.

(128-bit operations only) If not aligned on 16-byte boundary,

regardless of segment.

#SS(0) If a memory operand effective address is outside the SS

segment limit.

#PF(fault-code) If a page fault occurs.

#UD If CR0.EM = 1.

(128-bit operations only) If CR4.OSFXSR(bit 9) = 0.

If CPUID.SSSE3(ECX bit 9) = 0.

If the LOCK prefix is used.

#NM If TS bit in CR0 is set.

#MF (64-bit operations only) If there is a pending x87 FPU exception.

#AC(0) (64-bit operations only) If alignment checking is enabled and

unaligned memory reference is made while the current privilege

level is 3.

### **Real Mode Exceptions**

#GP(0) If any part of the operand lies outside of the effective address

space from 0 to 0FFFFH.

(128-bit operations only) If not aligned on 16-byte boundary,

regardless of segment.

#UD If CR0.EM = 1.

(128-bit operations only) If CR4.OSFXSR(bit 9) = 0.

If CPUID.SSSE3(ECX bit 9) = 0.

If the LOCK prefix is used.

#NM If TS bit in CR0 is set.

#MF (64-bit operations only) If there is a pending x87 FPU exception.

### Virtual 8086 Mode Exceptions

Same exceptions as in real address mode.

#PF(fault-code) If a page fault occurs.

#AC(0) (64-bit operations only) If alignment checking is enabled and

unaligned memory reference is made.

## **Compatibility Mode Exceptions**

Same as for protected mode exceptions.

### **64-Bit Mode Exceptions**

#SS(0) If a memory address referencing the SS segment is in a non-

canonical form.

#GP(0) If the memory address is in a non-canonical form.

(128-bit operations only) If memory operand is not aligned on a

16-byte boundary, regardless of segment.

#UD If CR0.EM[bit 2] = 1.

(128-bit operations only) If CR4.OSFXSR[bit 9] = 0.

If CPUID.01H:ECX.SSSE3[bit 9] = 0.

If the LOCK prefix is used.

#NM If CR0.TS[bit 3] = 1.

#MF (64-bit operations only) If there is a pending x87 FPU exception.

#PF(fault-code) If a page fault occurs.

#AC(0)

(64-bit operations only) If alignment checking is enabled and an unaligned memory reference is made while the current privilege level is 3.

<b>PSHUFD-</b>	_Shuffle	Packed	Doub	lewords.
Failui D-	-31101116	Fackeu	DUUD	iewulus

Opcode	Instruction	64-Bit Mode	Compat/ Leg Mode	Description
66 0F 70 /r ib	PSHUFD xmm1, xmm2/m128, imm8	Valid	Valid	Shuffle the doublewords in xmm2/m128 based on the encoding in imm8 and store the result in xmm1.

#### **Description**

Copies doublewords from source operand (second operand) and inserts them in the destination operand (first operand) at the locations selected with the order operand (third operand). Figure 4-7 shows the operation of the PSHUFD instruction and the encoding of the order operand. Each 2-bit field in the order operand selects the contents of one doubleword location in the destination operand. For example, bits 0 and 1 of the order operand select the contents of doubleword 0 of the destination operand. The encoding of bits 0 and 1 of the order operand (see the field encoding in Figure 4-7) determines which doubleword from the source operand will be copied to doubleword 0 of the destination operand.

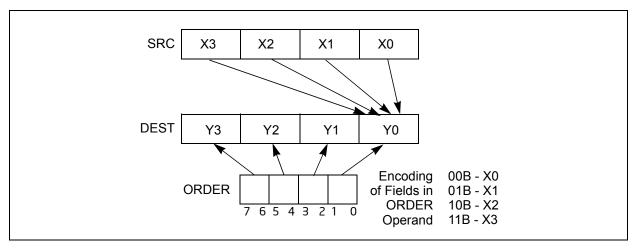


Figure 4-7. PSHUFD Instruction Operation

The source operand can be an XMM register or a 128-bit memory location. The destination operand is an XMM register. The order operand is an 8-bit immediate. Note that this instruction permits a doubleword in the source operand to be copied to more than one doubleword location in the destination operand.

In 64-bit mode, using a REX prefix in the form of REX.R permits this instruction to access additional registers (XMM8-XMM15).

#### **Operation**

```
DEST[31:0] \leftarrow (SRC >> (ORDER[1:0] * 32))[31:0];
DEST[63:32] \leftarrow (SRC >> (ORDER[3:2] * 32))[31:0];
DEST[95:64] \leftarrow (SRC >> (ORDER[5:4] * 32))[31:0];
DEST[127:96] \leftarrow (SRC >> (ORDER[7:6] * 32))[31:0];
```

#### Intel C/C++ Compiler Intrinsic Equivalent

PSHUFD \_\_m128i \_mm\_shuffle\_epi32(\_\_m128i a, int n)

#### **Flags Affected**

None.

#### **Numeric Exceptions**

None.

## **Protected Mode Exceptions**

#GP(0) If a memory operand effective address is outside the CS, DS,

ES, FS, or GS segment limit.

If a memory operand is not aligned on a 16-byte boundary,

regardless of segment.

#SS(0) If a memory operand effective address is outside the SS

segment limit.

#UD If CR0.EM[bit 2] = 1.

If CR4.OSFXSR[bit 9] = 0.

If CPUID.01H:EDX.SSE2[bit 26] = 0.

If the LOCK prefix is used.

#NM If CR0.TS[bit 3] = 1.

#PF(fault-code) If a page fault occurs.

### **Real-Address Mode Exceptions**

#GP If a memory operand is not aligned on a 16-byte boundary,

regardless of segment.

If any part of the operand lies outside of the effective address

space from 0 to FFFFH.

#UD If CR0.EM[bit 2] = 1.

If CR4.OSFXSR[bit 9] = 0.

If CPUID.01H:EDX.SSE2[bit 26] = 0.

If the LOCK prefix is used.

#NM If CR0.TS[bit 3] = 1.

## Virtual-8086 Mode Exceptions

Same exceptions as in real address mode.

#PF(fault-code) For a page fault.

### **Compatibility Mode Exceptions**

Same as for protected mode exceptions.

### **64-Bit Mode Exceptions**

#SS(0) If a memory address referencing the SS segment is in a non-

canonical form.

#GP(0) If the memory address is in a non-canonical form.

If memory operand is not aligned on a 16-byte boundary,

regardless of segment.

#UD If CR0.EM[bit 2] = 1.

If CR4.OSFXSR[bit 9] = 0.

If CPUID.01H:EDX.SSE2[bit 26] = 0.

If the LOCK prefix is used.

#NM If CR0.TS[bit 3] = 1.

#PF(fault-code) If a page fault occurs.

# PSHUFHW—Shuffle Packed High Words

Opcode	Instruction	64-Bit Mode	Compat/ Leg Mode	Description
F3 0F 70 /r ib	PSHUFHW xmm1, xmm2/ m128, imm8	Valid	Valid	Shuffle the high words in xmm2/m128 based on the encoding in imm8 and store the result in xmm1.

## **Description**

Copies words from the high quadword of the source operand (second operand) and inserts them in the high quadword of the destination operand (first operand) at word locations selected with the order operand (third operand). This operation is similar to the operation used by the PSHUFD instruction, which is illustrated in Figure 4-7. For the PSHUFHW instruction, each 2-bit field in the order operand selects the contents of one word location in the high quadword of the destination operand. The binary encodings of the order operand fields select words (0, 1, 2 or 3, 4) from the high quadword of the source operand to be copied to the destination operand. The low quadword of the source operand is copied to the low quadword of the destination operand.

The source operand can be an XMM register or a 128-bit memory location. The destination operand is an XMM register. The order operand is an 8-bit immediate. Note that this instruction permits a word in the high quadword of the source operand to be copied to more than one word location in the high quadword of the destination operand.

In 64-bit mode, using a REX prefix in the form of REX.R permits this instruction to access additional registers (XMM8-XMM15).

## **Operation**

```
DEST[63:0] \leftarrow SRC[63:0];

DEST[79:64] \leftarrow (SRC >> (ORDER[1:0] * 16))[79:64];

DEST[95:80] \leftarrow (SRC >> (ORDER[3:2] * 16))[79:64];

DEST[111:96] \leftarrow (SRC >> (ORDER[5:4] * 16))[79:64];

DEST[127:112] \leftarrow (SRC >> (ORDER[7:6] * 16))[79:64];
```

## Intel C/C++ Compiler Intrinsic Equivalent

```
PSHUFHW __m128i _mm_shufflehi_epi16(__m128i a, int n)
```

### **Flags Affected**

None.

#### **Numeric Exceptions**

None.

#### **Protected Mode Exceptions**

#GP(0) If a memory operand effective address is outside the CS, DS,

ES, FS, or GS segment limit.

If a memory operand is not aligned on a 16-byte boundary,

regardless of segment.

#SS(0) If a memory operand effective address is outside the SS

segment limit.

#UD If CR0.EM[bit 2] = 1.

If CR4.OSFXSR[bit 9] = 0.

If CPUID.01H:EDX.SSE2[bit 26] = 0.

If the LOCK prefix is used.

#NM If CR0.TS[bit 3] = 1. #PF(fault-code) If a page fault occurs.

#### **Real-Address Mode Exceptions**

#GP If a memory operand is not aligned on a 16-byte boundary,

regardless of segment.

If any part of the operand lies outside of the effective address

space from 0 to FFFFH.

#UD If CR0.EM[bit 2] = 1.

If CR4.OSFXSR[bit 9] = 0.

If CPUID.01H:EDX.SSE2[bit 26] = 0.

If the LOCK prefix is used.

#NM If CR0.TS[bit 3] = 1.

#### Virtual-8086 Mode Exceptions

Same exceptions as in real address mode.

#PF(fault-code) For a page fault.

# **Compatibility Mode Exceptions**

Same as for protected mode exceptions.

#### **64-Bit Mode Exceptions**

#SS(0) If a memory address referencing the SS segment is in a non-

canonical form.

#GP(0) If the memory address is in a non-canonical form.

#### INSTRUCTION SET REFERENCE, N-Z

If memory operand is not aligned on a 16-byte boundary,

regardless of segment.

#UD If CR0.EM[bit 2] = 1.

If CR4.OSFXSR[bit 9] = 0.

If CPUID.01H:EDX.SSE2[bit 26] = 0.

If the LOCK prefix is used.

#NM If CR0.TS[bit 3] = 1. #PF(fault-code) If a page fault occurs.

#### PSHUFLW—Shuffle Packed Low Words

Opcode	Instruction	64-Bit Mode	Compat/ Leg Mode	Description
F2 0F 70 /r ib	PSHUFLW xmm1, xmm2/m128, imm8	Valid	Valid	Shuffle the low words in xmm2/m128 based on the encoding in imm8 and store the result in xmm1.

#### **Description**

Copies words from the low quadword of the source operand (second operand) and inserts them in the low quadword of the destination operand (first operand) at word locations selected with the order operand (third operand). This operation is similar to the operation used by the PSHUFD instruction, which is illustrated in Figure 4-7. For the PSHUFLW instruction, each 2-bit field in the order operand selects the contents of one word location in the low quadword of the destination operand. The binary encodings of the order operand fields select words (0, 1, 2, or 3) from the low quadword of the source operand to be copied to the destination operand. The high quadword of the source operand is copied to the high quadword of the destination operand.

The source operand can be an XMM register or a 128-bit memory location. The destination operand is an XMM register. The order operand is an 8-bit immediate. Note that this instruction permits a word in the low quadword of the source operand to be copied to more than one word location in the low quadword of the destination operand.

In 64-bit mode, using a REX prefix in the form of REX.R permits this instruction to access additional registers (XMM8-XMM15).

## Operation

```
DEST[15:0] \leftarrow (SRC >> (ORDER[1:0] * 16))[15:0];
DEST[31:16] \leftarrow (SRC >> (ORDER[3:2] * 16))[15:0];
DEST[47:32] \leftarrow (SRC >> (ORDER[5:4] * 16))[15:0];
DEST[63:48] \leftarrow (SRC >> (ORDER[7:6] * 16))[15:0];
DEST[127:64] \leftarrow SRC[127:64];
```

## Intel C/C++ Compiler Intrinsic Equivalent

```
PSHUFLW __m128i _mm_shufflelo_epi16(__m128i a, int n)
```

#### Flags Affected

None.

#### **Numeric Exceptions**

None.

#### **Protected Mode Exceptions**

#GP(0) If a memory operand effective address is outside the CS, DS,

ES, FS, or GS segment limit.

If a memory operand is not aligned on a 16-byte boundary,

regardless of segment.

#SS(0) If a memory operand effective address is outside the SS

segment limit.

#UD If CR0.EM[bit 2] = 1.

If CR4.OSFXSR[bit 9] = 0.

If CPUID.01H:EDX.SSE2[bit 26] = 0.

If the LOCK prefix is used.

#NM If CR0.TS[bit 3] = 1. #PF(fault-code) If a page fault occurs.

### **Real-Address Mode Exceptions**

#GP If a memory operand is not aligned on a 16-byte boundary,

regardless of segment.

If any part of the operand lies outside of the effective address

space from 0 to FFFFH.

#UD If CR0.EM[bit 2] = 1.

If CR4.OSFXSR[bit 9] = 0.

If CPUID.01H:EDX.SSE2[bit 26] = 0.

If the LOCK prefix is used.

#NM If CR0.TS[bit 3] = 1.

### Virtual-8086 Mode Exceptions

Same exceptions as in real address mode.

#PF(fault-code) For a page fault.

# **Compatibility Mode Exceptions**

Same as for protected mode exceptions.

#### **64-Bit Mode Exceptions**

#SS(0) If a memory address referencing the SS segment is in a non-

canonical form.

#GP(0) If the memory address is in a non-canonical form.

#### INSTRUCTION SET REFERENCE, N-Z

If memory operand is not aligned on a 16-byte boundary,

regardless of segment.

#UD If CR0.EM[bit 2] = 1.

If CR4.OSFXSR[bit 9] = 0.

If CPUID.01H:EDX.SSE2[bit 26] = 0.

If the LOCK prefix is used.

#NM If CR0.TS[bit 3] = 1.

#PF(fault-code) If a page fault occurs.

#### PSHUFW—Shuffle Packed Words

Opcode	Instruction	64-Bit Mode	Compat/ Leg Mode	Description
0F 70 /rib	PSHUFW mm1, mm2/m64, imm8	Valid	Valid	Shuffle the words in mm2/m64 based on the encoding in imm8 and store the result in mm1.

### **Description**

Copies words from the source operand (second operand) and inserts them in the destination operand (first operand) at word locations selected with the order operand (third operand). This operation is similar to the operation used by the PSHUFD instruction, which is illustrated in Figure 4-7. For the PSHUFW instruction, each 2-bit field in the order operand selects the contents of one word location in the destination operand. The encodings of the order operand fields select words from the source operand to be copied to the destination operand.

The source operand can be an MMX technology register or a 64-bit memory location. The destination operand is an MMX technology register. The order operand is an 8-bit immediate. Note that this instruction permits a word in the source operand to be copied to more than one word location in the destination operand.

In 64-bit mode, using a REX prefix in the form of REX.R permits this instruction to access additional registers (XMM8-XMM15).

## **Operation**

```
DEST[15:0] \leftarrow (SRC >> (ORDER[1:0] * 16))[15:0];
DEST[31:16] \leftarrow (SRC >> (ORDER[3:2] * 16))[15:0];
DEST[47:32] \leftarrow (SRC >> (ORDER[5:4] * 16))[15:0];
DEST[63:48] \leftarrow (SRC >> (ORDER[7:6] * 16))[15:0];
```

## Intel C/C++ Compiler Intrinsic Equivalent

PSHUFW \_\_m64 \_mm\_shuffle\_pi16(\_\_m64 a, int n)

## **Flags Affected**

None.

# **Numeric Exceptions**

None.

### **Protected Mode Exceptions**

#GP(0) If a memory operand effective address is outside the CS, DS,

ES, FS, or GS segment limit.

#SS(0) If a memory operand effective address is outside the SS

segment limit.

#UD If CR0.EM[bit 2] = 1.

If the LOCK prefix is used.

#NM If CR0.TS[bit 3] = 1.

#MF If there is a pending x87 FPU exception.

#PF(fault-code) If a page fault occurs.

#AC(0) If alignment checking is enabled and an unaligned memory

reference is made while the current privilege level is 3.

### Real-Address Mode Exceptions

#GP If any part of the operand lies outside of the effective address

space from 0 to FFFFH.

#UD If CR0.EM[bit 2] = 1.

If the LOCK prefix is used.

#NM If CR0.TS[bit 3] = 1.

#MF If there is a pending x87 FPU exception.

### Virtual-8086 Mode Exceptions

Same exceptions as in real address mode.

#PF(fault-code) For a page fault.

#AC(0) If alignment checking is enabled and an unaligned memory

reference is made.

### **Compatibility Mode Exceptions**

Same as for protected mode exceptions.

#### 64-Bit Mode Exceptions

#SS(0) If a memory address referencing the SS segment is in a non-

canonical form.

#GP(0) If the memory address is in a non-canonical form.

#UD If CR0.EM[bit 2] = 1.

If the LOCK prefix is used.

#NM If CR0.TS[bit 3] = 1.

#MF If there is a pending x87 FPU exception.

#PF(fault-code) If a page fault occurs.

#AC(0) If alignment checking is enabled and an unaligned memory

reference is made while the current privilege level is 3.

#### PSIGNB/PSIGNW/PSIGND — Packed SIGN

Opcode	Instruction	64-Bit Mode	Compat/ Leg Mode	Description
0F 38 08 /r	PSIGNB mm1, mm2/m64	Valid	Valid	Negate/zero/preserve packed byte integers in mm1 depending on the corresponding sign in mm2/m64
66 OF 38 08 /r	PSIGNB xmm1, xmm2/m128	Valid	Valid	Negate/zero/preserve packed byte integers in xmm1 depending on the corresponding sign in xmm2/m128.
0F 38 09 /r	PSIGNW mm1, mm2/m64	Valid	Valid	Negate/zero/preserve packed word integers in mm1 depending on the corresponding sign in mm2/m128.
66 0F 38 09 /r	PSIGNW xmm1, xmm2/m128	Valid	Valid	Negate/zero/preserve packed word integers in xmm1 depending on the corresponding sign in xmm2/m128.
OF 38 OA /r	PSIGND mm1, mm2/m64	Valid	Valid	Negate/zero/preserve packed doubleword integers in mm1 depending on the corresponding sign in mm2/m128.
66 OF 38 OA /r	PSIGND xmm1, xmm2/m128	Valid	Valid	Negate/zero/preserve packed doubleword integers in xmm1 depending on the corresponding sign in xmm2/m128.

### **Description**

PSIGNB/PSIGNW/PSIGND negates each data element of the destination operand (the first operand) if the signed integer value of the corresponding data element in the source operand (the second operand) is less than zero. If the signed integer value of a data element in the source operand is positive, the corresponding data element in the destination operand is unchanged. If a data element in the source operand is zero, the corresponding data element in the destination operand is set to zero.

PSIGNB operates on signed bytes. PSIGNW operates on 16-bit signed words. PSIGND operates on signed 32-bit integers. Both operands can be MMX register or XMM registers. When the source operand is a 128bit memory operand, the operand must be aligned on a 16-byte boundary or a general-protection exception (#GP) will be generated.

In 64-bit mode, use the REX prefix to access additional registers.

### **Operation**

PSIGNB with 64 bit operands:

```
IF (SRC[7:0] < 0)
         DEST[7:0] \leftarrow Neg(DEST[7:0])
   ELSEIF (SRC[7:0] == 0)
         DEST[7:0] \leftarrow 0
   ELSEIF (SRC[7:0] > 0)
         DEST[7:0] \leftarrow DEST[7:0]
   Repeat operation for 2nd through 7th bytes
   IF (SRC[63:56] < 0 )
         DEST[63:56] \leftarrow Neg(DEST[63:56])
   ELSEIF (SRC[63:56] == 0)
         DEST[63:56] \leftarrow 0
   ELSEIF (SRC[63:56] > 0)
         DEST[63:56] \leftarrow DEST[63:56]
PSIGNB with 128 bit operands:
   IF (SRC[7:0] < 0)
         DEST[7:0] \leftarrow Neg(DEST[7:0])
   ELSEIF (SRC[7:0] == 0)
         DEST[7:0] \leftarrow 0
   ELSEIF (SRC[7:0] > 0)
         DEST[7:0] \leftarrow DEST[7:0]
   Repeat operation for 2nd through 15th bytes
   IF (SRC[127:120] < 0)
         DEST[127:120] \leftarrow Neg(DEST[127:120])
   ELSEIF (SRC[127:120] == 0)
         DEST[127:120] \leftarrow 0
   ELSEIF (SRC[127:120] > 0)
         DEST[127:120] \leftarrow DEST[127:120]
PSIGNW with 64 bit operands:
   IF (SRC[15:0] < 0)
         DEST[15:0] \leftarrow Neg(DEST[15:0])
   ELSEIF (SRC[15:0] == 0)
         DEST[15:0] \leftarrow 0
   ELSEIF (SRC[15:0] > 0)
         DEST[15:0] \leftarrow DEST[15:0]
Repeat operation for 2nd through 3rd words
   IF (SRC[63:48] < 0)
         DEST[63:48] \leftarrow Neg(DEST[63:48])
   ELSEIF (SRC[63:48] == 0)
         DEST[63:48] \leftarrow 0
   ELSEIF (SRC[63:48] > 0)
```

```
DEST[63:48] \leftarrow DEST[63:48]
PSIGNW with 128 bit operands:
   IF (SRC[15:0] < 0)
         DEST[15:0] \leftarrow Neg(DEST[15:0])
   ELSEIF (SRC[15:0] == 0)
         DEST[15:0] \leftarrow 0
   ELSEIF (SRC[15:0] > 0)
         DEST[15:0] \leftarrow DEST[15:0]
   Repeat operation for 2nd through 7th words
   IF (SRC[127:112] < 0)
         DEST[127:112] \leftarrow Neg(DEST[127:112])
   ELSEIF (SRC[127:112] == 0)
         DEST[127:112] \leftarrow 0
   ELSEIF (SRC[127:112] > 0)
         DEST[127:112] \leftarrow DEST[127:112]
PSIGND with 64 bit operands:
   IF (SRC[31:0] < 0)
         \mathsf{DEST[31:0]} \leftarrow \mathsf{Neg}(\mathsf{DEST[31:0]})
   ELSEIF (SRC[31:0] == 0)
         DEST[31:0] \leftarrow 0
   ELSEIF (SRC[31:0] > 0)
         DEST[31:0] \leftarrow DEST[31:0]
   IF (SRC[63:32] < 0)
         DEST[63:32] \leftarrow Neg(DEST[63:32])
   ELSEIF (SRC[63:32] == 0)
         DEST[63:32] \leftarrow 0
   ELSEIF (SRC[63:32] > 0)
         DEST[63:32] \leftarrow DEST[63:32]
PSIGND with 128 bit operands:
   IF (SRC[31:0] < 0)
         DEST[31:0] \leftarrow Neg(DEST[31:0])
   ELSEIF (SRC[31:0] == 0)
         DEST[31:0] \leftarrow 0
   ELSEIF (SRC[31:0] > 0)
         DEST[31:0] \leftarrow DEST[31:0]
   Repeat operation for 2nd through 3rd double words
   IF (SRC[127:96] < 0)
         DEST[127:96] \leftarrow Neg(DEST[127:96])
   ELSEIF (SRC[127:96] == 0)
```

```
DEST[127:96] \leftarrow 0
ELSEIF (SRC[127:96] > 0 )
DEST[127:96] \leftarrow DEST[127:96]
```

### Intel C/C++ Compiler Intrinsic Equivalent

PSIGNB \_\_m64 \_mm\_sign\_pi8 (\_\_m64 a, \_\_m64 b)

PSIGNB \_\_m128i \_mm\_sign\_epi8 (\_\_m128i a, \_\_m128i b)

PSIGNW \_\_m64 \_mm\_sign\_pi16 (\_\_m64 a, \_\_m64 b)

PSIGNW \_\_m128i \_mm\_sign\_epi16 (\_\_m128i a, \_\_m128i b)

PSIGND \_\_m64 \_mm\_sign\_pi32 (\_\_m64 a, \_\_m64 b)

PSIGND \_\_m128i \_mm\_sign\_epi32 (\_\_m128i a, \_\_m128i b)

#### **Protected Mode Exceptions**

#GP(0) If a memory operand effective address is outside the CS, DS,

ES, FS or GS segments.

(128-bit operations only) If not aligned on 16-byte boundary,

regardless of segment.

#SS(0) If a memory operand effective address is outside the SS

segment limit.

#PF(fault-code) If a page fault occurs.

#UD If CR0.EM = 1.

(128-bit operations only) If CR4.OSFXSR(bit 9) = 0.

If CPUID.SSSE3(ECX bit 9) = 0.

If the LOCK prefix is used.

#NM If TS bit in CR0 is set.

#MF (64-bit operations only) If there is a pending x87 FPU exception. #AC(0) (64-bit operations only) If alignment checking is enabled and

unaligned memory reference is made while the current privilege

level is 3.

## **Real Mode Exceptions**

#GP(0) If any part of the operand lies outside of the effective address

space from 0 to 0FFFFH.

(128-bit operations only) If not aligned on 16-byte boundary,

regardless of segment.

#UD (128-bit operations only) If CR0.EM = 1.

If CR4.OSFXSR(bit 9) = 0. If CPUID.SSSE3(ECX bit 9) = 0.

If the LOCK prefix is used.

#NM If TS bit in CR0 is set.

#MF (64-bit operations only) If there is a pending x87 FPU exception.

### Virtual 8086 Mode Exceptions

Same exceptions as in real address mode. #PF(fault-code) If a page fault occurs.

#AC(0) (64-bit operations only) If alignment checking is enabled and

unaligned memory reference is made.

#### **Compatibility Mode Exceptions**

Same as for protected mode exceptions.

## **64-Bit Mode Exceptions**

#SS(0) If a memory address referencing the SS segment is in a non-

canonical form.

#GP(0) If the memory address is in a non-canonical form.

(128-bit operations only) If memory operand is not aligned on a

16-byte boundary, regardless of segment.

#UD If CR0.EM[bit 2] = 1.

(128-bit operations only) If CR4.OSFXSR[bit 9] = 0.

If CPUID.01H:ECX.SSSE3[bit 9] = 0.

If the LOCK prefix is used.

#NM If CR0.TS[bit 3] = 1.

#MF (64-bit operations only) If there is a pending x87 FPU exception.

#PF(fault-code) If a page fault occurs.

#AC(0) (64-bit operations only) If alignment checking is enabled and an

unaligned memory reference is made while the current privilege

level is 3.

# PSLLDQ—Shift Double Quadword Left Logical

Opcode	Instruction	64-Bit Mode	Compat/ Leg Mode	Description
66 OF 73 /7 ib	PSLLDQ xmm1, imm8	Valid	Valid	Shift xmm1 left by imm8 bytes while shifting in 0s.

## **Description**

Shifts the destination operand (first operand) to the left by the number of bytes specified in the count operand (second operand). The empty low-order bytes are cleared (set to all 0s). If the value specified by the count operand is greater than 15, the destination operand is set to all 0s. The destination operand is an XMM register. The count operand is an 8-bit immediate.

### **Operation**

```
TEMP \leftarrow COUNT;
IF (TEMP > 15) THEN TEMP \leftarrow 16; FI;
DEST \leftarrow DEST << (TEMP * 8);
```

### Intel C/C++ Compiler Intrinsic Equivalent

PSLLDQ \_\_m128i \_mm\_slli\_si128 ( \_\_m128i a, int imm)

## **Flags Affected**

None.

# **Numeric Exceptions**

None.

# **Protected Mode Exceptions**

#UD If CR0.EM[bit 2] = 1.

If CR4.OSFXSR[bit 9] = 0.

If CPUID.01H:EDX.SSE2[bit 26] = 0.

If the LOCK prefix is used.

#NM If CR0.TS[bit 3] = 1.

## **Real-Address Mode Exceptions**

Same exceptions as in protected mode.

#### INSTRUCTION SET REFERENCE, N-Z

# **Virtual-8086 Mode Exceptions**

Same exceptions as in protected mode.

# **Compatibility Mode Exceptions**

Same exceptions as in protected mode.

# **64-Bit Mode Exceptions**

Same exceptions as in protected mode.

# PSLLW/PSLLD/PSLLQ—Shift Packed Data Left Logical

Opcode	Instruction	64-Bit Mode	Compat/ Leg Mode	Description
0F F1 /r	PSLLW mm, mm/m64	Valid	Valid	Shift words in <i>mm</i> left <i>mm/m64</i> while shifting in Os.
66 0F F1 /r	PSLLW xmm1, xmm2/m128	Valid	Valid	Shift words in <i>xmm1</i> left by <i>xmm2/m128</i> while shifting in Os.
OF 71 /6 ib	PSLLW xmm1, imm8	Valid	Valid	Shift words in <i>mm</i> left by <i>imm8</i> while shifting in Os.
66 0F 71 /6 ib	PSLLW xmm1, imm8	Valid	Valid	Shift words in xmm1 left by imm8 while shifting in 0s.
0F F2 /r	PSLLD mm, mm/m64	Valid	Valid	Shift doublewords in <i>mm</i> left by <i>mm/m64</i> while shifting in 0s.
66 0F F2 /r	PSLLD xmm1, xmm2/m128	Valid	Valid	Shift doublewords in xmm1 left by xmm2/m128 while shifting in 0s.
0F 72 /6 ib	PSLLD mm, imm8	Valid	Valid	Shift doublewords in <i>mm</i> left by <i>imm8</i> while shifting in Os.
66 0F 72 /6 ib	PSLLD xmm1, imm8	Valid	Valid	Shift doublewords in xmm1 left by imm8 while shifting in 0s.
0F F3 /r	PSLLQ mm, mm/m64	Valid	Valid	Shift quadword in <i>mm</i> left by <i>mm/m64</i> while shifting in 0s.
66 0F F3 /r	PSLLQ xmm1, xmm2/m128	Valid	Valid	Shift quadwords in <i>xmm1</i> left by <i>xmm2/m128</i> while shifting in 0s.
0F 73 /6 ib	PSLLQ mm, imm8	Valid	Valid	Shift quadword in <i>mm</i> left by <i>imm8</i> while shifting in 0s.
66 OF 73 /6 ib	PSLLQ xmm1, imm8	Valid	Valid	Shift quadwords in xmm1 left by imm8 while shifting in 0s.

# Description

Shifts the bits in the individual data elements (words, doublewords, or quadword) in the destination operand (first operand) to the left by the number of bits specified in the count operand (second operand). As the bits in the data elements are shifted left, the empty low-order bits are cleared (set to 0). If the value specified by the count operand is greater than 15 (for words), 31 (for doublewords), or 63 (for a quadword), then the destination operand is set to all 0s. Figure 4-8 gives an example of shifting words in a 64-bit operand.

The destination operand may be an MMX technology register or an XMM register; the count operand can be either an MMX technology register or an 64-bit memory loca-

tion, an XMM register or a 128-bit memory location, or an 8-bit immediate. Note that only the first 64-bits of a 128-bit count operand are checked to compute the count.

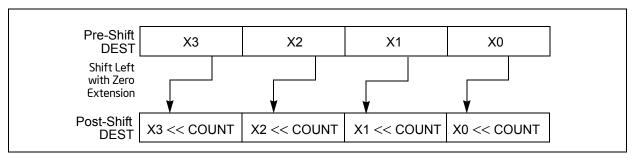


Figure 4-8. PSLLW, PSLLD, and PSLLQ Instruction Operation Using 64-bit Operand

The PSLLW instruction shifts each of the words in the destination operand to the left by the number of bits specified in the count operand; the PSLLD instruction shifts each of the doublewords in the destination operand; and the PSLLQ instruction shifts the quadword (or quadwords) in the destination operand.

In 64-bit mode, using a REX prefix in the form of REX.R permits this instruction to access additional registers (XMM8-XMM15).

### Operation

```
PSLLW instruction with 64-bit operand:
   IF (COUNT > 15)
   THEN
        DEST[64:0] \leftarrow 000000000000000H;
   ELSE
        DEST[15:0] \leftarrow ZeroExtend(DEST[15:0] << COUNT);
        (* Repeat shift operation for 2nd and 3rd words *)
        DEST[63:48] \leftarrow ZeroExtend(DEST[63:48] << COUNT);
   FI:
PSLLD instruction with 64-bit operand:
   IF (COUNT > 31)
   THEN
        DEST[64:0] \leftarrow 000000000000000H;
   ELSE
        DEST[31:0] \leftarrow ZeroExtend(DEST[31:0] << COUNT);
        DEST[63:32] \leftarrow ZeroExtend(DEST[63:32] << COUNT);
   FI;
PSLLQ instruction with 64-bit operand:
   IF (COUNT > 63)
   THEN
```

```
DEST[64:0] \leftarrow 000000000000000H;
   ELSE
       DEST ← ZeroExtend(DEST << COUNT);
   FI;
PSLLW instruction with 128-bit operand:
   COUNT \leftarrow COUNT_SOURCE[63:0];
   IF (COUNT > 15)
   THEN
       ELSE
       DEST[15:0] \leftarrow ZeroExtend(DEST[15:0] << COUNT);
       (* Repeat shift operation for 2nd through 7th words *)
       DEST[127:112] \leftarrow ZeroExtend(DEST[127:112] << COUNT);
  FI;
PSLLD instruction with 128-bit operand:
   COUNT \leftarrow COUNT_SOURCE[63:0];
   IF (COUNT > 31)
   THEN
       ELSE
       DEST[31:0] \leftarrow ZeroExtend(DEST[31:0] << COUNT);
       (* Repeat shift operation for 2nd and 3rd doublewords *)
       DEST[127:96] \leftarrow ZeroExtend(DEST[127:96] << COUNT);
   FI;
PSLLQ instruction with 128-bit operand:
   COUNT \leftarrow COUNT_SOURCE[63:0];
   IF (COUNT > 63)
   THEN
       ELSE
       DEST[63:0] \leftarrow ZeroExtend(DEST[63:0] << COUNT);
       DEST[127:64] \leftarrow ZeroExtend(DEST[127:64] << COUNT);
  FI;
Intel C/C++ Compiler Intrinsic Equivalents
PSLLW
         __m64 _mm_slli_pi16 (__m64 m, int count)
        __m64 _mm_sll_pi16(__m64 m, __m64 count)
PSLLW
PSLLW
         __m128i _mm_slli_pi16(__m64 m, int count)
PSLLW
         __m128i _mm_slli_pi16(__m128i m, __m128i count)
PSLLD
         __m64 _mm_slli_pi32(__m64 m, int count)
```

PSLLD \_\_m64 \_mm\_sll\_pi32(\_\_m64 m, \_\_m64 count)

PSLLD \_\_m128i \_mm\_slli\_epi32(\_\_m128i m, int count)

PSLLD \_\_m128i \_mm\_sll\_epi32(\_\_m128i m, \_\_m128i count)

PSLLQ \_\_m64 \_mm\_slli\_si64(\_\_m64 m, int count)

PSLLQ \_\_m64 \_mm\_sll\_si64(\_\_m64 m, \_\_m64 count)

PSLLQ \_\_m128i \_mm\_slli\_epi64(\_\_m128i m, int count)

PSLLQ \_\_m128i \_mm\_sll\_epi64(\_\_m128i m, \_\_m128i count)

#### **Flags Affected**

None.

# **Numeric Exceptions**

None.

#### **Protected Mode Exceptions**

#GP(0) If a memory operand effective address is outside the CS, DS,

ES, FS, or GS segment limit.

(128-bit operations only) If a memory operand is not aligned on

a 16-byte boundary, regardless of segment.

#SS(0) If a memory operand effective address is outside the SS

segment limit.

#UD If CR0.EM[bit 2] = 1.

(128-bit operations only) If CR4.OSFXSR[bit 9] = 0. Execution of 128-bit instructions on a non-SSE2 capable processor (one that is MMX technology capable) will result in the instruction

operating on the mm registers, not #UD.

If the LOCK prefix is used.

#NM If CR0.TS[bit 3] = 1.

#MF (64-bit operations only) If there is a pending x87 FPU exception.

#PF(fault-code) If a page fault occurs.

#AC(0) (64-bit operations only) If alignment checking is enabled and an

unaligned memory reference is made while the current privilege

level is 3.

#### **Real-Address Mode Exceptions**

#GP (128-bit operations only) If a memory operand is not aligned on

a 16-byte boundary, regardless of segment.

If any part of the operand lies outside of the effective address

space from 0 to FFFFH.

#UD If CR0.EM[bit 2] = 1.

(128-bit operations only) If CR4.OSFXSR[bit 9] = 0. Execution of 128-bit instructions on a non-SSE2 capable processor (one that is MMX technology capable) will result in the instruction

operating on the mm registers, not #UD.

If the LOCK prefix is used.

#NM If CR0.TS[bit 3] = 1.

#MF (64-bit operations only) If there is a pending x87 FPU exception.

# Virtual-8086 Mode Exceptions

Same exceptions as in real address mode.

#PF(fault-code) For a page fault.

#AC(0) (64-bit operations only) If alignment checking is enabled and an

unaligned memory reference is made.

#### **Compatibility Mode Exceptions**

Same as for protected mode exceptions.

# **64-Bit Mode Exceptions**

#SS(0) If a memory address referencing the SS segment is in a non-

canonical form.

#GP(0) If the memory address is in a non-canonical form.

(128-bit operations only) If memory operand is not aligned on a

16-byte boundary, regardless of segment.

#UD If CR0.EM[bit 2] = 1.

(128-bit operations only) If CR4.OSFXSR[bit 9] = 0.

(128-bit operations only) If CPUID.01H:EDX.SSE2[bit 26] = 0.

If the LOCK prefix is used.

#NM If CR0.TS[bit 3] = 1.

#MF (64-bit operations only) If there is a pending x87 FPU exception.

#PF(fault-code) If a page fault occurs.

#AC(0) (64-bit operations only) If alignment checking is enabled and an

unaligned memory reference is made while the current privilege

# PSRAW/PSRAD—Shift Packed Data Right Arithmetic

Opcode	Instruction	64-Bit Mode	Compat/ Leg Mode	Description
OF E1 /r	PSRAW mm, mm/m64	Valid	Valid	Shift words in <i>mm</i> right by <i>mm/m64</i> while shifting in sign bits.
66 0F E1 /r	PSRAW xmm1, xmm2/m128	Valid	Valid	Shift words in xmm1 right by xmm2/m128 while shifting in sign bits.
0F 71 /4 ib	PSRAW mm, imm8	Valid	Valid	Shift words in <i>mm</i> right by <i>imm8</i> while shifting in sign bits
66 0F 71 /4 ib	PSRAW xmm1, imm8	Valid	Valid	Shift words in xmm1 right by imm8 while shifting in sign bits
0F E2 /r	PSRAD mm, mm/m64	Valid	Valid	Shift doublewords in <i>mm</i> right by <i>mm/m64</i> while shifting in sign bits.
66 0F E2 /r	PSRAD xmm1, xmm2/m128	Valid	Valid	Shift doubleword in <i>xmm1</i> right by <i>xmm2</i> / <i>m128</i> while shifting in sign bits.
0F 72 /4 ib	PSRAD mm, imm8	Valid	Valid	Shift doublewords in <i>mm</i> right by <i>imm8</i> while shifting in sign bits.
66 0F 72 /4 ib	PSRAD xmm1, imm8	Valid	Valid	Shift doublewords in xmm1 right by imm8 while shifting in sign bits.

# **Description**

Shifts the bits in the individual data elements (words or doublewords) in the destination operand (first operand) to the right by the number of bits specified in the count operand (second operand). As the bits in the data elements are shifted right, the empty high-order bits are filled with the initial value of the sign bit of the data element. If the value specified by the count operand is greater than 15 (for words) or 31 (for doublewords), each destination data element is filled with the initial value of the sign bit of the element. (Figure 4-9 gives an example of shifting words in a 64-bit operand.)

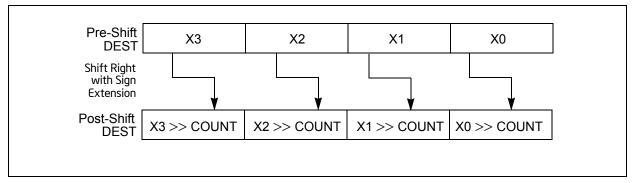


Figure 4-9. PSRAW and PSRAD Instruction Operation Using a 64-bit Operand

The destination operand may be an MMX technology register or an XMM register; the count operand can be either an MMX technology register or an 64-bit memory location, an XMM register or a 128-bit memory location, or an 8-bit immediate. Note that only the first 64-bits of a 128-bit count operand are checked to compute the count.

The PSRAW instruction shifts each of the words in the destination operand to the right by the number of bits specified in the count operand, and the PSRAD instruction shifts each of the doublewords in the destination operand.

In 64-bit mode, using a REX prefix in the form of REX.R permits this instruction to access additional registers (XMM8-XMM15).

#### **Operation**

```
PSRAW instruction with 64-bit operand:

IF (COUNT > 15)

THEN COUNT ← 16;

FI;

DEST[15:0] ← SignExtend(DEST[15:0] >> COUNT);

(* Repeat shift operation for 2nd and 3rd words *)

DEST[63:48] ← SignExtend(DEST[63:48] >> COUNT);

PSRAD instruction with 64-bit operand:

IF (COUNT > 31)

THEN COUNT ← 32;

FI;

DEST[31:0] ← SignExtend(DEST[31:0] >> COUNT);

DEST[63:32] ← SignExtend(DEST[63:32] >> COUNT);

PSRAW instruction with 128-bit operand:

COUNT ← COUNT_SOURCE[63:0];
```

```
IF (COUNT > 15)

THEN COUNT ← 16;

FI;

DEST[15:0] ← SignExtend(DEST[15:0] >> COUNT);

(* Repeat shift operation for 2nd through 7th words *)

DEST[127:112] ← SignExtend(DEST[127:112] >> COUNT);

PSRAD instruction with 128-bit operand:

COUNT ← COUNT_SOURCE[63:0];

IF (COUNT > 31)

THEN COUNT ← 32;

FI;

DEST[31:0] ← SignExtend(DEST[31:0] >> COUNT);

(* Repeat shift operation for 2nd and 3rd doublewords *)

DEST[127:96] ← SignExtend(DEST[127:96] >> COUNT);
```

# Intel C/C++ Compiler Intrinsic Equivalents

```
PSRAW
         m64 mm srai pi16 ( m64 m, int count)
         __m64 _mm_sra_pi16 (__m64 m, __m64 count)
PSRAW
PSRAD
         __m64 _mm_srai_pi32 (__m64 m, int count)
         __m64 _mm_sra_pi32 (__m64 m, __m64 count)
PSRAD
PSRAW
         __m128i _mm_srai_epi16(__m128i m, int count)
PSRAW
         m128i mm sra epi16( m128i m, m128i count))
         __m128i _mm_srai_epi32 (__m128i m, int count)
PSRAD
PSRAD
         __m128i _mm_sra_epi32 (__m128i m, __m128i count)
```

# **Flags Affected**

None.

# **Numeric Exceptions**

None.

#### **Protected Mode Exceptions**

#GP(0)

If a memory operand effective address is outside the CS, DS, ES, FS, or GS segment limit.

(128-bit operations only) If a memory operand is not aligned on a 16-byte boundary, regardless of segment.

#SS(0) If a memory operand effective address is outside the SS

segment limit.

#UD If CR0.EM[bit 2] = 1.

(128-bit operations only) If CR4.OSFXSR[bit 9] = 0. Execution of 128-bit instructions on a non-SSE2 capable processor (one that is MMX technology capable) will result in the instruction

operating on the mm registers, not #UD.

If the LOCK prefix is used.

#NM If CR0.TS[bit 3] = 1.

#MF (64-bit operations only) If there is a pending x87 FPU exception.

#PF(fault-code) If a page fault occurs.

#AC(0) (64-bit operations only) If alignment checking is enabled and an

unaligned memory reference is made while the current privilege

level is 3.

# **Real-Address Mode Exceptions**

#GP (128-bit operations only) If a memory operand is not aligned on

a 16-byte boundary, regardless of segment.

If any part of the operand lies outside of the effective address

space from 0 to FFFFH.

#UD If CR0.EM[bit 2] = 1.

(128-bit operations only) If CR4.OSFXSR[bit 9] = 0. Execution of 128-bit instructions on a non-SSE2 capable processor (one that is MMX technology capable) will result in the instruction

operating on the mm registers, not #UD.

If the LOCK prefix is used.

#NM If CR0.TS[bit 3] = 1.

#MF (64-bit operations only) If there is a pending x87 FPU exception.

# Virtual-8086 Mode Exceptions

Same exceptions as in real address mode.

#PF(fault-code) For a page fault.

#AC(0) (64-bit operations only) If alignment checking is enabled and an

unaligned memory reference is made.

# **Compatibility Mode Exceptions**

Same as for protected mode exceptions.

# **64-Bit Mode Exceptions**

#SS(0) If a memory address referencing the SS segment is in a non-

canonical form.

#### INSTRUCTION SET REFERENCE, N-Z

#GP(0) If the memory address is in a non-canonical form.

(128-bit operations only) If memory operand is not aligned on a

16-byte boundary, regardless of segment.

#UD If CR0.EM[bit 2] = 1.

(128-bit operations only) If CR4.OSFXSR[bit 9] = 0.

(128-bit operations only) If CPUID.01H:EDX.SSE2[bit 26] = 0.

If the LOCK prefix is used.

#NM If CR0.TS[bit 3] = 1.

#MF (64-bit operations only) If there is a pending x87 FPU exception.

#PF(fault-code) If a page fault occurs.

#AC(0) (64-bit operations only) If alignment checking is enabled and an

unaligned memory reference is made while the current privilege

# PSRLDQ—Shift Double Quadword Right Logical

Opcode	Instruction	64-Bit Mode	Compat/ Leg Mode	Description
66 0F 73 /3 ib	PSRLDQ xmm1, imm8	Valid	Valid	Shift <i>xmm1</i> right by <i>imm8</i> while shifting in 0s.

# **Description**

Shifts the destination operand (first operand) to the right by the number of bytes specified in the count operand (second operand). The empty high-order bytes are cleared (set to all 0s). If the value specified by the count operand is greater than 15, the destination operand is set to all 0s. The destination operand is an XMM register. The count operand is an 8-bit immediate.

In 64-bit mode, using a REX prefix in the form of REX.R permits this instruction to access additional registers (XMM8-XMM15).

# **Operation**

```
TEMP \leftarrow COUNT;
IF (TEMP > 15) THEN TEMP \leftarrow 16; FI;
DEST \leftarrow DEST >> (temp * 8);
```

# Intel C/C++ Compiler Intrinsic Equivalents

PSRLDQ \_\_m128i \_mm\_srli\_si128 ( \_\_m128i a, int imm)

# **Flags Affected**

None.

# **Numeric Exceptions**

None.

# **Protected Mode Exceptions**

#UD If CR0.EM[bit 2] = 1. If CR4.OSFXSR[bit 9] = 0. If CPUID.01H:EDX.SSE2[bit 26] = 0. If the LOCK prefix is used. #NM If CR0.TS[bit 3] = 1.

# Real-Address Mode Exceptions

Same exceptions as in protected mode.

#### INSTRUCTION SET REFERENCE, N-Z

# **Virtual-8086 Mode Exceptions**

Same exceptions as in protected mode.

# **Compatibility Mode Exceptions**

Same exceptions as in protected mode.

# **64-Bit Mode Exceptions**

Same exceptions as in protected mode.

# **Numeric Exceptions**

None.

# PSRLW/PSRLD/PSRLQ—Shift Packed Data Right Logical

Opcode	Instruction	64-Bit Mode	Compat/ Leg Mode	Description
OF D1 /r	PSRLW mm, mm/m64	Valid	Valid	Shift words in <i>mm</i> right by amount specified in <i>mm/m64</i> while shifting in Os.
66 0F D1 /r	PSRLW xmm1, xmm2/m128	Valid	Valid	Shift words in <i>xmm1</i> right by amount specified in <i>xmm2/m128</i> while shifting in 0s.
0F 71 /2 ib	PSRLW mm, imm8	Valid	Valid	Shift words in <i>mm</i> right by <i>imm8</i> while shifting in Os.
66 0F 71 /2 ib	PSRLW xmm1, imm8	Valid	Valid	Shift words in <i>xmm1</i> right by <i>imm8</i> while shifting in Os.
0F D2 /r	PSRLD mm, mm/m64	Valid	Valid	Shift doublewords in <i>mm</i> right by amount specified in <i>mm/m64</i> while shifting in 0s.
66 0F D2 /r	PSRLD xmm1, xmm2/m128	Valid	Valid	Shift doublewords in <i>xmm1</i> right by amount specified in <i>xmm2</i> / <i>m128</i> while shifting in 0s.
0F 72 /2 ib	PSRLD mm, imm8	Valid	Valid	Shift doublewords in <i>mm</i> right by <i>imm8</i> while shifting in Os.
66 OF 72 /2 ib	PSRLD xmm1, imm8	Valid	Valid	Shift doublewords in <i>xmm1</i> right by <i>imm8</i> while shifting in 0s.
OF D3 /r	PSRLQ mm, mm/m64	Valid	Valid	Shift <i>mm</i> right by amount specified in <i>mm/m64</i> while shifting in 0s.
66 0F D3 /r	PSRLQ xmm1, xmm2/m128	Valid	Valid	Shift quadwords in xmm1 right by amount specified in xmm2/m128 while shifting in 0s.
0F 73 /2 ib	PSRLQ mm, imm8	Valid	Valid	Shift <i>mm</i> right by <i>imm8</i> while shifting in Os.
66 0F 73 /2 ib	PSRLQ xmm1, imm8	Valid	Valid	Shift quadwords in xmm1 right by imm8 while shifting in 0s.

# **Description**

Shifts the bits in the individual data elements (words, doublewords, or quadword) in the destination operand (first operand) to the right by the number of bits specified in the count operand (second operand). As the bits in the data elements are shifted right, the empty high-order bits are cleared (set to 0). If the value specified by the count operand is greater than 15 (for words), 31 (for doublewords), or 63 (for a

quadword), then the destination operand is set to all 0s. Figure 4-10 gives an example of shifting words in a 64-bit operand.

The destination operand may be an MMX technology register or an XMM register; the count operand can be either an MMX technology register or an 64-bit memory location, an XMM register or a 128-bit memory location, or an 8-bit immediate. Note that only the first 64-bits of a 128-bit count operand are checked to compute the count.

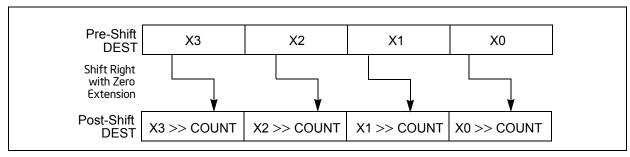


Figure 4-10. PSRLW, PSRLD, and PSRLQ Instruction Operation Using 64-bit Operand

The PSRLW instruction shifts each of the words in the destination operand to the right by the number of bits specified in the count operand; the PSRLD instruction shifts each of the doublewords in the destination operand; and the PSRLQ instruction shifts the quadword (or quadwords) in the destination operand.

In 64-bit mode, using a REX prefix in the form of REX.R permits this instruction to access additional registers (XMM8-XMM15).

# Operation

```
PSRLW instruction with 64-bit operand:
   IF (COUNT > 15)
   THEN
        DEST[64:0] \leftarrow 0000000000000000H
   ELSE
        DEST[15:0] \leftarrow ZeroExtend(DEST[15:0] >> COUNT);
        (* Repeat shift operation for 2nd and 3rd words *)
        DEST[63:48] \leftarrow ZeroExtend(DEST[63:48] >> COUNT);
   FI:
PSRLD instruction with 64-bit operand:
   IF (COUNT > 31)
   THEN
        DEST[64:0] \leftarrow 00000000000000000
   ELSE
        DEST[31:0] \leftarrow ZeroExtend(DEST[31:0] >> COUNT);
        DEST[63:32] \leftarrow ZeroExtend(DEST[63:32] >> COUNT);
   FI;
```

```
PSRLQ instruction with 64-bit operand:
  IF (COUNT > 63)
   THEN
      DEST[64:0] \leftarrow 0000000000000000H
  ELSE
      DEST ← ZeroExtend(DEST >> COUNT);
  FI;
PSRLW instruction with 128-bit operand:
   COUNT ← COUNT SOURCE[63:0];
  IF (COUNT > 15)
   THEN
      ELSE
      DEST[15:0] \leftarrow ZeroExtend(DEST[15:0] >> COUNT);
      (* Repeat shift operation for 2nd through 7th words *)
      DEST[127:112] \leftarrow ZeroExtend(DEST[127:112] >> COUNT);
  FI;
PSRLD instruction with 128-bit operand:
   COUNT \leftarrow COUNT_SOURCE[63:0];
  IF (COUNT > 31)
   THEN
      ELSE
      DEST[31:0] ← ZeroExtend(DEST[31:0] >> COUNT);
      (* Repeat shift operation for 2nd and 3rd doublewords *)
      DEST[127:96] \leftarrow ZeroExtend(DEST[127:96] >> COUNT);
  FI;
PSRLQ instruction with 128-bit operand:
  COUNT ← COUNT SOURCE[63:0];
  IF (COUNT > 15)
   THEN
      ELSE
      DEST[63:0] \leftarrow ZeroExtend(DEST[63:0] >> COUNT);
      DEST[127:64] \leftarrow ZeroExtend(DEST[127:64] >> COUNT);
  FI:
Intel C/C++ Compiler Intrinsic Equivalents
PSRLW
         __m64 _mm_srli_pi16(__m64 m, int count)
PSRLW __m64 _mm_srl_pi16 (__m64 m, __m64 count)
```

**PSRLW** \_\_m128i \_mm\_srli\_epi16 (\_\_m128i m, int count) **PSRLW** m128i mm srl epi16 ( m128i m, m128i count) **PSRLD** \_\_m64 \_mm\_srli\_pi32 (\_\_m64 m, int\_count) **PSRLD** \_\_m64 \_mm\_srl\_pi32 (\_\_m64 m, \_\_m64 count) **PSRLD** \_\_m128i \_mm\_srli\_epi32 (\_\_m128i m, int count) **PSRLD** \_\_m128i \_mm\_srl\_epi32 (\_\_m128i m, \_\_m128i count) **PSRLQ** m64 mm srli si64 ( m64 m, int count) \_\_m64 \_mm\_srl\_si64 (\_\_m64 m, \_\_m64 count) **PSRLO PSRLQ** \_\_m128i \_mm\_srli\_epi64 (\_\_m128i m, int count) \_\_m128i \_mm\_srl\_epi64 (\_\_m128i m, \_\_m128i count) **PSRLO** 

#### Flags Affected

None.

# **Numeric Exceptions**

None.

# **Protected Mode Exceptions**

#GP(0) If a memory operand effective address is outside the CS, DS,

ES, FS, or GS segment limit.

(128-bit operations only) If a memory operand is not aligned on

a 16-byte boundary, regardless of segment.

#SS(0) If a memory operand effective address is outside the SS

segment limit.

#UD If CR0.EM[bit 2] = 1.

(128-bit operations only) If CR4.OSFXSR[bit 9] = 0. Execution of 128-bit instructions on a non-SSE2 capable processor (one that is MMX technology capable) will result in the instruction

operating on the mm registers, not #UD.

If the LOCK prefix is used.

#NM If CR0.TS[bit 3] = 1.

#MF (64-bit operations only) If there is a pending x87 FPU exception.

#PF(fault-code) If a page fault occurs.

#AC(0) (64-bit operations only) If alignment checking is enabled and an

unaligned memory reference is made while the current privilege

# **Real-Address Mode Exceptions**

#GP (128-bit operations only) If a memory operand is not aligned on

a 16-byte boundary, regardless of segment.

If any part of the operand lies outside of the effective address

space from 0 to FFFFH.

#UD If CR0.EM[bit 2] = 1.

(128-bit operations only) If CR4.OSFXSR[bit 9] = 0. Execution of 128-bit instructions on a non-SSE2 capable processor (one that is MMX technology capable) will result in the instruction

operating on the mm registers, not #UD.

If the LOCK prefix is used.

#NM If CR0.TS[bit 3] = 1.

#MF (64-bit operations only) If there is a pending x87 FPU exception.

# Virtual-8086 Mode Exceptions

Same exceptions as in real address mode.

#PF(fault-code) For a page fault.

#AC(0) (64-bit operations only) If alignment checking is enabled and an

unaligned memory reference is made.

# **Compatibility Mode Exceptions**

Same as for protected mode exceptions.

#SS(0) If a memory address referencing the SS segment is in a non-

canonical form.

#### **64-Bit Mode Exceptions**

#GP(0) If the memory address is in a non-canonical form.

(128-bit operations only) If memory operand is not aligned on a

16-byte boundary, regardless of segment.

#UD If CR0.EM[bit 2] = 1.

(128-bit operations only) If CR4.OSFXSR[bit 9] = 0.

(128-bit operations only) If CPUID.01H:EDX.SSE2[bit 26] = 0.

If the LOCK prefix is used.

#NM If CR0.TS[bit 3] = 1.

#MF (64-bit operations only) If there is a pending x87 FPU exception.

#PF(fault-code) If a page fault occurs.

#AC(0) (64-bit operations only) If alignment checking is enabled and an

unaligned memory reference is made while the current privilege

# PSUBB/PSUBW/PSUBD—Subtract Packed Integers

Opcode	Instruction	64-Bit Mode	Compat/ Leg Mode	Description
0F F8 /r	PSUBB mm, mm/m64	Valid	Valid	Subtract packed byte integers in mm/m64 from packed byte integers in mm.
66 0F F8 /r	PSUBB xmm1, xmm2/m128	Valid	Valid	Subtract packed byte integers in xmm2/m128 from packed byte integers in xmm1.
0F F9 /r	PSUBW mm, mm/m64	Valid	Valid	Subtract packed word integers in mm/m64 from packed word integers in mm.
66 0F F9 /r	PSUBW xmm1, xmm2/m128	Valid	Valid	Subtract packed word integers in xmm2/m128 from packed word integers in xmm1.
OF FA /r	PSUBD mm, mm/m64	Valid	Valid	Subtract packed doubleword integers in <i>mm/m64</i> from packed doubleword integers in <i>mm</i> .
66 OF FA /r	PSUBD xmm1, xmm2/m128	Valid	Valid	Subtract packed doubleword integers in xmm2/mem128 from packed doubleword integers in xmm1.

# **Description**

Performs a SIMD subtract of the packed integers of the source operand (second operand) from the packed integers of the destination operand (first operand), and stores the packed integer results in the destination operand. See Figure 9-4 in the Intel® 64 and IA-32 Architectures Software Developer's Manual, Volume 1, for an illustration of a SIMD operation. Overflow is handled with wraparound, as described in the following paragraphs.

These instructions can operate on either 64-bit or 128-bit operands. When operating on 64-bit operands, the destination operand must be an MMX technology register and the source operand can be either an MMX technology register or a 64-bit memory location. When operating on 128-bit operands, the destination operand must be an XMM register and the source operand can be either an XMM register or a 128-bit memory location.

The PSUBB instruction subtracts packed byte integers. When an individual result is too large or too small to be represented in a byte, the result is wrapped around and the low 8 bits are written to the destination element.

The PSUBW instruction subtracts packed word integers. When an individual result is too large or too small to be represented in a word, the result is wrapped around and the low 16 bits are written to the destination element.

The PSUBD instruction subtracts packed doubleword integers. When an individual result is too large or too small to be represented in a doubleword, the result is wrapped around and the low 32 bits are written to the destination element.

Note that the PSUBB, PSUBW, and PSUBD instructions can operate on either unsigned or signed (two's complement notation) packed integers; however, it does not set bits in the EFLAGS register to indicate overflow and/or a carry. To prevent undetected overflow conditions, software must control the ranges of values upon which it operates.

In 64-bit mode, using a REX prefix in the form of REX.R permits this instruction to access additional registers (XMM8-XMM15).

# Operation

```
PSUBB instruction with 64-bit operands:
   DEST[7:0] \leftarrow DEST[7:0] - SRC[7:0];
   (* Repeat subtract operation for 2nd through 7th byte *)
   DEST[63:56] \leftarrow DEST[63:56] - SRC[63:56];
PSUBB instruction with 128-bit operands:
   DEST[7:0] \leftarrow DEST[7:0] - SRC[7:0];
   (* Repeat subtract operation for 2nd through 14th byte *)
   DEST[127:120] \leftarrow DEST[111:120] - SRC[127:120];
PSUBW instruction with 64-bit operands:
   DEST[15:0] \leftarrow DEST[15:0] - SRC[15:0];
   (* Repeat subtract operation for 2nd and 3rd word *)
   DEST[63:48] \leftarrow DEST[63:48] - SRC[63:48];
PSUBW instruction with 128-bit operands:
   DEST[15:0] \leftarrow DEST[15:0] - SRC[15:0];
   (* Repeat subtract operation for 2nd through 7th word *)
   DEST[127:112] \leftarrow DEST[127:112] - SRC[127:112];
PSUBD instruction with 64-bit operands:
   DEST[31:0] \leftarrow DEST[31:0] - SRC[31:0];
   DEST[63:32] \leftarrow DEST[63:32] - SRC[63:32];
PSUBD instruction with 128-bit operands:
   \mathsf{DEST[31:0]} \leftarrow \mathsf{DEST[31:0]} - \mathsf{SRC[31:0]};
   (* Repeat subtract operation for 2nd and 3rd doubleword *)
   DEST[127:96] \leftarrow DEST[127:96] - SRC[127:96];
Intel C/C++ Compiler Intrinsic Equivalents
```

```
__m64 _mm_sub_pi8(__m64 m1, __m64 m2)
PSUBB
```

PSUBW \_\_m64 \_mm\_sub\_pi16(\_\_m64 m1, \_\_m64 m2)
PSUBD \_\_m64 \_mm\_sub\_pi32(\_\_m64 m1, \_\_m64 m2)
PSUBB \_\_m128i \_mm\_sub\_epi8 ( \_\_m128i a, \_\_m128i b)
PSUBW \_\_m128i \_mm\_sub\_epi16 ( \_\_m128i a, \_\_m128i b)
PSUBD \_\_m128i \_mm\_sub\_epi32 ( \_\_m128i a, \_\_m128i b)

# **Flags Affected**

None.

# **Numeric Exceptions**

None.

# **Protected Mode Exceptions**

#GP(0) If a memory operand effective address is outside the CS, DS,

ES, FS, or GS segment limit.

(128-bit operations only) If a memory operand is not aligned on

a 16-byte boundary, regardless of segment.

#SS(0) If a memory operand effective address is outside the SS

segment limit.

#UD If CR0.EM[bit 2] = 1.

(128-bit operations only) If CR4.OSFXSR[bit 9] = 0. Execution of 128-bit instructions on a non-SSE2 capable processor (one that is MMX technology capable) will result in the instruction

operating on the mm registers, not #UD.

If the LOCK prefix is used.

#NM If CR0.TS[bit 3] = 1.

#MF (64-bit operations only) If there is a pending x87 FPU exception.

#PF(fault-code) If a page fault occurs.

#AC(0) (64-bit operations only) If alignment checking is enabled and an

unaligned memory reference is made while the current privilege

level is 3.

#### **Real-Address Mode Exceptions**

#GP (128-bit operations only) If a memory operand is not aligned on

a 16-byte boundary, regardless of segment.

If any part of the operand lies outside of the effective address

space from 0 to FFFFH.

#UD If CR0.EM[bit 2] = 1.

(128-bit operations only) If CR4.OSFXSR[bit 9] = 0. Execution of 128-bit instructions on a non-SSE2 capable processor (one

that is MMX technology capable) will result in the instruction

operating on the mm registers, not #UD.

If the LOCK prefix is used.

#NM If CR0.TS[bit 3] = 1.

#MF (64-bit operations only) If there is a pending x87 FPU exception.

#### Virtual-8086 Mode Exceptions

Same exceptions as in real address mode.

#PF(fault-code) For a page fault.

#AC(0) (64-bit operations only) If alignment checking is enabled and an

unaligned memory reference is made.

# **Compatibility Mode Exceptions**

Same as for protected mode exceptions.

# **64-Bit Mode Exceptions**

#SS(0) If a memory address referencing the SS segment is in a non-

canonical form.

#GP(0) If the memory address is in a non-canonical form.

(128-bit operations only) If memory operand is not aligned on a

16-byte boundary, regardless of segment.

#UD If CR0.EM[bit 2] = 1.

(128-bit operations only) If CR4.OSFXSR[bit 9] = 0.

(128-bit operations only) If CPUID.01H:EDX.SSE2[bit 26] = 0.

If the LOCK prefix is used.

#NM If CR0.TS[bit 3] = 1.

#MF (64-bit operations only) If there is a pending x87 FPU exception.

#PF(fault-code) If a page fault occurs.

#AC(0) (64-bit operations only) If alignment checking is enabled and an

unaligned memory reference is made while the current privilege

# **PSUBQ—Subtract Packed Quadword Integers**

Opcode	Instruction	64-Bit Mode	Compat/ Leg Mode	Description
OF FB /r	PSUBQ mm1, mm2/m64	Valid	Valid	Subtract quadword integer in <i>mm1</i> from <i>mm2 /m64</i> .
66 OF FB /r	PSUBQ xmm1, xmm2/m128	Valid	Valid	Subtract packed quadword integers in <i>xmm1</i> from <i>xmm2 /m128</i> .

# **Description**

Subtracts the second operand (source operand) from the first operand (destination operand) and stores the result in the destination operand. The source operand can be a quadword integer stored in an MMX technology register or a 64-bit memory location, or it can be two packed quadword integers stored in an XMM register or an 128-bit memory location. The destination operand can be a quadword integer stored in an MMX technology register or two packed quadword integers stored in an XMM register. When packed quadword operands are used, a SIMD subtract is performed. When a quadword result is too large to be represented in 64 bits (overflow), the result is wrapped around and the low 64 bits are written to the destination element (that is, the carry is ignored).

Note that the PSUBQ instruction can operate on either unsigned or signed (two's complement notation) integers; however, it does not set bits in the EFLAGS register to indicate overflow and/or a carry. To prevent undetected overflow conditions, software must control the ranges of the values upon which it operates.

In 64-bit mode, using a REX prefix in the form of REX.R permits this instruction to access additional registers (XMM8-XMM15).

# Operation

```
PSUBQ instruction with 64-Bit operands:

DEST[63:0] ← DEST[63:0] – SRC[63:0];

PSUBQ instruction with 128-Bit operands:

DEST[63:0] ← DEST[63:0] – SRC[63:0];

DEST[127:64] ← DEST[127:64] – SRC[127:64];
```

# Intel C/C++ Compiler Intrinsic Equivalents

```
PSUBQ __m64 _mm_sub_si64(__m64 m1, __m64 m2)
PSUBQ __m128i _mm_sub_epi64(__m128i m1, __m128i m2)
```

#### **Flags Affected**

None.

#### **Numeric Exceptions**

None.

#### **Protected Mode Exceptions**

#GP(0) If a memory operand effective address is outside the CS, DS,

ES, FS, or GS segment limit.

(128-bit operations only) If a memory operand is not aligned on

a 16-byte boundary, regardless of segment.

#SS(0) If a memory operand effective address is outside the SS

segment limit.

#UD If CR0.EM[bit 2] = 1.

(128-bit operations only) If CR4.OSFXSR[bit 9] = 0.

If CPUID.01H:EDX.SSE2[bit 26] = 0.

If the LOCK prefix is used.

#NM If CR0.TS[bit 3] = 1.

#MF (64-bit operations only) If there is a pending x87 FPU exception.

#PF(fault-code) If a page fault occurs.

#AC(0) (64-bit operations only) If alignment checking is enabled and an

unaligned memory reference is made while the current privilege

level is 3.

# **Real-Address Mode Exceptions**

#GP (128-bit operations only) If a memory operand is not aligned on

a 16-byte boundary, regardless of segment.

If any part of the operand lies outside of the effective address

space from 0 to FFFFH.

#UD If CR0.EM[bit 2] = 1.

(128-bit operations only) If CR4.OSFXSR[bit 9] = 0.

If CPUID.01H:EDX.SSE2[bit 26] = 0.

If the LOCK prefix is used.

#NM If CR0.TS[bit 3] = 1.

#MF (64-bit operations only) If there is a pending x87 FPU exception.

#### Virtual-8086 Mode Exceptions

Same exceptions as in real address mode.

#PF(fault-code) For a page fault.

#AC(0) (64-bit operations only) If alignment checking is enabled and an

unaligned memory reference is made.

# **Compatibility Mode Exceptions**

Same exceptions as in protected mode.

#### **64-Bit Mode Exceptions**

#SS(0) If a memory address referencing the SS segment is in a non-

canonical form.

#GP(0) If the memory address is in a non-canonical form.

(128-bit operations only) If memory operand is not aligned on a

16-byte boundary, regardless of segment.

#UD If CR0.EM[bit 2] = 1.

(128-bit operations only) If CR4.OSFXSR[bit 9] = 0.

If CPUID.01H:EDX.SSE2[bit 26] = 0.

If the LOCK prefix is used.

#NM If CR0.TS[bit 3] = 1.

#MF (64-bit operations only) If there is a pending x87 FPU exception.

#PF(fault-code) If a page fault occurs.

#AC(0) (64-bit operations only) If alignment checking is enabled and an

unaligned memory reference is made while the current privilege

# PSUBSB/PSUBSW—Subtract Packed Signed Integers with Signed Saturation

Opcode	Instruction	64-Bit Mode	Compat/ Leg Mode	Description
0F E8 /r	PSUBSB mm, mm/m64	Valid	Valid	Subtract signed packed bytes in mm/m64 from signed packed bytes in mm and saturate results.
66 0F E8 /r	PSUBSB xmm1, xmm2/m128	Valid	Valid	Subtract packed signed byte integers in xmm2/m128 from packed signed byte integers in xmm1 and saturate results.
0F E9 /r	PSUBSW mm, mm/m64	Valid	Valid	Subtract signed packed words in mm/m64 from signed packed words in mm and saturate results.
66 0F E9 /r	PSUBSW xmm1, xmm2/m128	Valid	Valid	Subtract packed signed word integers in xmm2/m128 from packed signed word integers in xmm1 and saturate results.

# **Description**

Performs a SIMD subtract of the packed signed integers of the source operand (second operand) from the packed signed integers of the destination operand (first operand), and stores the packed integer results in the destination operand. See Figure 9-4 in the Intel® 64 and IA-32 Architectures Software Developer's Manual, Volume 1, for an illustration of a SIMD operation. Overflow is handled with signed saturation, as described in the following paragraphs.

These instructions can operate on either 64-bit or 128-bit operands. When operating on 64-bit operands, the destination operand must be an MMX technology register and the source operand can be either an MMX technology register or a 64-bit memory location. When operating on 128-bit operands, the destination operand must be an XMM register and the source operand can be either an XMM register or a 128-bit memory location.

The PSUBSB instruction subtracts packed signed byte integers. When an individual byte result is beyond the range of a signed byte integer (that is, greater than 7FH or less than 80H), the saturated value of 7FH or 80H, respectively, is written to the destination operand.

The PSUBSW instruction subtracts packed signed word integers. When an individual word result is beyond the range of a signed word integer (that is, greater than 7FFFH or less than 8000H), the saturated value of 7FFFH or 8000H, respectively, is written to the destination operand.

In 64-bit mode, using a REX prefix in the form of REX.R permits this instruction to access additional registers (XMM8-XMM15).

# **Operation**

```
PSUBSB instruction with 64-bit operands:
   DEST[7:0] \leftarrow SaturateToSignedByte (DEST[7:0] - SRC (7:0]);
   (* Repeat subtract operation for 2nd through 7th bytes *)
   DEST[63:56] \leftarrow SaturateToSignedByte (DEST[63:56] - SRC[63:56]);
PSUBSB instruction with 128-bit operands:
   DEST[7:0] \leftarrow SaturateToSignedByte (DEST[7:0] - SRC[7:0]);
   (* Repeat subtract operation for 2nd through 14th bytes *)
   DEST[127:120] \leftarrow SaturateToSignedByte (DEST[111:120] - SRC[127:120]);
PSUBSW instruction with 64-bit operands
   DEST[15:0] \leftarrow SaturateToSignedWord (DEST[15:0] - SRC[15:0] );
   (* Repeat subtract operation for 2nd and 7th words *)
   DEST[63:48] \leftarrow SaturateToSignedWord (DEST[63:48] – SRC[63:48]);
PSUBSW instruction with 128-bit operands
   DEST[15:0] \leftarrow SaturateToSignedWord (DEST[15:0] – SRC[15:0]);
   (* Repeat subtract operation for 2nd through 7th words *)
   DEST[127:112] \leftarrow SaturateToSignedWord (DEST[127:112] - SRC[127:112]);
Intel C/C++ Compiler Intrinsic Equivalents
PSUBSB
           __m64 _mm_subs_pi8(__m64 m1, __m64 m2)
           __m128i _mm_subs_epi8(__m128i m1, __m128i m2)
PSUBSB
```

\_\_m64 \_mm\_subs\_pi16(\_\_m64 m1, \_\_m64 m2)

\_\_m128i \_mm\_subs\_epi16(\_\_m128i m1, \_\_m128i m2)

# **Flags Affected**

None.

PSUBSW PSUBSW

# **Numeric Exceptions**

None.

# **Protected Mode Exceptions**

#GP(0) If a r

If a memory operand effective address is outside the CS, DS, ES, FS, or GS segment limit.

(128-bit operations only) If a memory operand is not aligned on

a 16-byte boundary, regardless of segment.

#SS(0) If a memory operand effective address is outside the SS

segment limit.

#UD If CR0.EM[bit 2] = 1.

(128-bit operations only) If CR4.OSFXSR[bit 9] = 0. Execution of 128-bit instructions on a non-SSE2 capable processor (one that is MMX technology capable) will result in the instruction

operating on the mm registers, not #UD.

If the LOCK prefix is used.

#NM If CR0.TS[bit 3] = 1.

#MF (64-bit operations only) If there is a pending x87 FPU exception.

#PF(fault-code) If a page fault occurs.

#AC(0) (64-bit operations only) If alignment checking is enabled and an

unaligned memory reference is made while the current privilege

level is 3.

# **Real-Address Mode Exceptions**

#GP (128-bit operations only) If a memory operand is not aligned on

a 16-byte boundary, regardless of segment.

If any part of the operand lies outside of the effective address

space from 0 to FFFFH.

#UD If CR0.EM[bit 2] = 1.

(128-bit operations only) If CR4.OSFXSR[bit 9] = 0. Execution of 128-bit instructions on a non-SSE2 capable processor (one that is MMX technology capable) will result in the instruction

operating on the mm registers, not #UD.

If the LOCK prefix is used.

#NM If CR0.TS[bit 3] = 1.

#MF (64-bit operations only) If there is a pending x87 FPU exception.

# Virtual-8086 Mode Exceptions

Same exceptions as in real address mode.

#PF(fault-code) For a page fault.

#AC(0) (64-bit operations only) If alignment checking is enabled and an

unaligned memory reference is made.

# **Compatibility Mode Exceptions**

Same exceptions as in protected mode.

# **64-Bit Mode Exceptions**

#GP(0) If the memory address is in a non-canonical form.

#### INSTRUCTION SET REFERENCE, N-Z

(128-bit operations only) If memory operand is not aligned on a

16-byte boundary, regardless of segment.

#SS(0) If a memory operand effective address is outside the SS

segment limit.

#UD If CR0.EM[bit 2] = 1.

(128-bit operations only) If CR4.OSFXSR[bit 9] = 0.

(128-bit operations only) If CPUID.01H:EDX.SSE2[bit 26] = 0.

If the LOCK prefix is used.

#NM If CR0.TS[bit 3] = 1.

#MF (64-bit operations only) If there is a pending x87 FPU exception.

#PF(fault-code) If a page fault occurs.

#AC(0) (64-bit operations only) If alignment checking is enabled and an

unaligned memory reference is made while the current privilege

# PSUBUSB/PSUBUSW—Subtract Packed Unsigned Integers with Unsigned Saturation

Opcode	Instruction	64-Bit Mode	Compat/ Leg Mode	Description
0F D8 /r	PSUBUSB mm, mm/m64	Valid	Valid	Subtract unsigned packed bytes in mm/m64 from unsigned packed bytes in mm and saturate result.
66 OF D8 /r	PSUBUSB xmm1, xmm2/m128	Valid	Valid	Subtract packed unsigned byte integers in xmm2/m128 from packed unsigned byte integers in xmm1 and saturate result.
0F D9 /r	PSUBUSW mm, mm/m64	Valid	Valid	Subtract unsigned packed words in mm/m64 from unsigned packed words in mm and saturate result.
66 OF D9 /r	PSUBUSW xmm1, xmm2/m128	Valid	Valid	Subtract packed unsigned word integers in xmm2/m128 from packed unsigned word integers in xmm1 and saturate result.

# **Description**

Performs a SIMD subtract of the packed unsigned integers of the source operand (second operand) from the packed unsigned integers of the destination operand (first operand), and stores the packed unsigned integer results in the destination operand. See Figure 9-4 in the *Intel*® *64 and IA-32 Architectures Software Developer's Manual, Volume 1*, for an illustration of a SIMD operation. Overflow is handled with unsigned saturation, as described in the following paragraphs.

These instructions can operate on either 64-bit or 128-bit operands. When operating on 64-bit operands, the destination operand must be an MMX technology register and the source operand can be either an MMX technology register or a 64-bit memory location. When operating on 128-bit operands, the destination operand must be an XMM register and the source operand can be either an XMM register or a 128-bit memory location.

The PSUBUSB instruction subtracts packed unsigned byte integers. When an individual byte result is less than zero, the saturated value of 00H is written to the destination operand.

The PSUBUSW instruction subtracts packed unsigned word integers. When an individual word result is less than zero, the saturated value of 0000H is written to the destination operand.

In 64-bit mode, using a REX prefix in the form of REX.R permits this instruction to access additional registers (XMM8-XMM15).

#### **Operation**

```
PSUBUSB instruction with 64-bit operands:
   DEST[7:0] \leftarrow SaturateToUnsignedByte (DEST[7:0] – SRC (7:0]);
   (* Repeat add operation for 2nd through 7th bytes *)
   DEST[63:56] \leftarrow SaturateToUnsignedByte (DEST[63:56] – SRC[63:56];
PSUBUSB instruction with 128-bit operands:
   DEST[7:0] \leftarrow SaturateToUnsignedByte (DEST[7:0] - SRC[7:0]);
   (* Repeat add operation for 2nd through 14th bytes *)
   DEST[127:120] \leftarrow SaturateToUnSignedByte (DEST[127:120] - SRC[127:120]);
PSUBUSW instruction with 64-bit operands:
   DEST[15:0] ← SaturateToUnsignedWord (DEST[15:0] – SRC[15:0]);
   (* Repeat add operation for 2nd and 3rd words *)
   DEST[63:48] \leftarrow SaturateToUnsignedWord (DEST[63:48] – SRC[63:48]);
PSUBUSW instruction with 128-bit operands:
   DEST[15:0] ← SaturateToUnsignedWord (DEST[15:0] – SRC[15:0]);
   (* Repeat add operation for 2nd through 7th words *)
   DEST[127:112] \leftarrow SaturateToUnSignedWord (DEST[127:112] - SRC[127:112]);
Intel C/C++ Compiler Intrinsic Equivalents
PSUBUSB __m64 _mm_subs_pu8(__m64 m1, __m64 m2)
PSUBUSB __m128i _mm_subs_epu8(__m128i m1, __m128i m2)
PSUBUSW m64 mm subs pu16( m64 m1, m64 m2)
PSUBUSW __m128i _mm_subs_epu16(__m128i m1, __m128i m2)
Flags Affected
None.
Numeric Exceptions
None.
```

# **Protected Mode Exceptions**

I lotected I lode Cx	ceptions
#GP(0)	If a memory operand effective address is outside the CS, DS, ES, FS, or GS segment limit.
	(128-bit operations only) If a memory operand is not aligned on a 16-byte boundary, regardless of segment.
#SS(0)	If a memory operand effective address is outside the SS segment limit.
#UD	If $CR0.EM[bit 2] = 1$ .

(128-bit operations only) If CR4.OSFXSR[bit 9] = 0. Execution of 128-bit instructions on a non-SSE2 capable processor (one that is MMX technology capable) will result in the instruction

operating on the mm registers, not #UD.

If the LOCK prefix is used.

#NM If CR0.TS[bit 3] = 1.

#MF (64-bit operations only) If there is a pending x87 FPU exception.

#PF(fault-code) If a page fault occurs.

#AC(0) (64-bit operations only) If alignment checking is enabled and an

unaligned memory reference is made while the current privilege

level is 3.

# **Real-Address Mode Exceptions**

#GP (128-bit operations only) If a memory operand is not aligned on

a 16-byte boundary, regardless of segment.

If any part of the operand lies outside of the effective address

space from 0 to FFFFH.

#UD If CR0.EM[bit 2] = 1.

(128-bit operations only) If CR4.OSFXSR[bit 9] = 0. Execution of 128-bit instructions on a non-SSE2 capable processor (one that is MMX technology capable) will result in the instruction

operating on the mm registers, not #UD.

If the LOCK prefix is used.

#NM If CR0.TS[bit 3] = 1.

#MF (64-bit operations only) If there is a pending x87 FPU exception.

# Virtual-8086 Mode Exceptions

Same exceptions as in real address mode.

#PF(fault-code) For a page fault.

#AC(0) (64-bit operations only) If alignment checking is enabled and an

unaligned memory reference is made.

#### **Compatibility Mode Exceptions**

Same exceptions as in protected mode.

#### **64-Bit Mode Exceptions**

#SS(0) If a memory address referencing the SS segment is in a non-

canonical form.

#GP(0) If the memory address is in a non-canonical form.

(128-bit operations only) If memory operand is not aligned on a

16-byte boundary, regardless of segment.

#### INSTRUCTION SET REFERENCE, N-Z

#UD If CR0.EM[bit 2] = 1.

(128-bit operations only) If CR4.OSFXSR[bit 9] = 0.

(128-bit operations only) If CPUID.01H:EDX.SSE2[bit 26] = 0.

If the LOCK prefix is used.

#NM If CR0.TS[bit 3] = 1.

#MF (64-bit operations only) If there is a pending x87 FPU exception.

#PF(fault-code) If a page fault occurs.

#AC(0) (64-bit operations only) If alignment checking is enabled and an

unaligned memory reference is made while the current privilege

# **PTEST- Logical Compare**

Opcode	Instruction	64-bit Mode	Compat/ Leg Mode	Description
66 0F 38 17 /r	PTEST xmm1, xmm2/m128	Valid	Valid	Set ZF if xmm2/m128 AND xmm1 result is all 0s. Set CF if xmm2/m128 AND NOT xmm1 result is all 0s.

#### **Description**

Performs a bitwise AND of the destination operand (first operand) and the source operand (second operand), then sets the ZF flag only if all bits in the result are 0. PTEST sets the CF flag if all bits in the result are 0 of the bitwise AND of the source operand (second operand) and the bitwise logical NOT of the destination operand.

# Operation

```
IF (SRC[127:0] bitwiseAND DEST[127:0] = 0)

THEN ZF \leftarrow 1;

ELSE ZF \leftarrow 0; FI;

IF (SRC[127:0] bitwiseAND (bitwiseNOT DEST[127:0] ) = 0)

THEN CF \leftarrow 1;

ELSE CF \leftarrow 0; FI;

DEST[127:0] Unmodified;

AF = 0F = PF = SF \leftarrow 0;
```

# Intel C/C++ Compiler Intrinsic Equivalent

```
PTEST int _mm_testz_si128 (__m128i s1, __m128i s2);
int _mm_testc_si128 (__m128i s1, __m128i s2);
int _mm_testnzc_si128 (__m128i s1, __m128i s2);
```

# **Flags Affected**

The OF, AF, PF, SF flags are cleared and the ZF, CF flags are set according to the operation

# **Protected Mode Exceptions**

#GP(0)	For an illegal memory operand effective address in the CS, DS, ES, FS, or GS segments.
	If a memory operand is not aligned on a 16-byte boundary, regardless of segment.
#SS(0)	For an illegal address in the SS segment.

#PF(fault-code) For a page fault.

#NM If CR0.TS[bit 3] = 1. #UD If CR0.EM[bit 2] = 1.

If CR4.OSFXSR[bit 9] = 0.

If  $CPUID.01H:ECX.SSE4_1[bit 19] = 0$ .

If LOCK prefix is used.

Either the prefix REP (F3h) or REPN (F2H) is used.

# **Real Mode Exceptions**

#GP(0) if any part of the operand lies outside of the effective address

space from 0 to 0FFFFH.

If a memory operand is not aligned on a 16-byte boundary,

regardless of segment.

#NM If CR0.TS[bit 3] = 1. #UD If CR0.EM[bit 2] = 1.

If CR4.OSFXSR[bit 9] = 0.

If  $CPUID.01H:ECX.SSE4_1[bit 19] = 0$ .

If LOCK prefix is used.

Either the prefix REP (F3h) or REPN (F2H) is used.

# **Virtual 8086 Mode Exceptions**

Same exceptions as in Real Address Mode.

#PF(fault-code) For a page fault.

# **Compatibility Mode Exceptions**

Same exceptions as in Protected Mode.

# **64-Bit Mode Exceptions**

#GP(0) If the memory address is in a non-canonical form.

If a memory operand is not aligned on a 16-byte boundary,

regardless of segment.

#SS(0) If a memory address referencing the SS segment is in a non-

canonical form.

#PF(fault-code) For a page fault.

#NM If TS in CR0 is set.

#UD If EM in CR0 is set.

If OSFXSR in CR4 is 0.

If CPUID feature flag ECX.SSE4\_1 is 0.

If LOCK prefix is used.

# INSTRUCTION SET REFERENCE, N-Z

Either the prefix REP (F3h) or REPN (F2H) is used.

# PUNPCKHBW/PUNPCKHWD/PUNPCKHDQ/PUNPCKHQDQ— Unpack High Data

Opcode	Instruction	64-Bit Mode	Compat/ Leg Mode	Description
0F 68 /r	PUNPCKHBW mm, mm/m64	Valid	Valid	Unpack and interleave high-order bytes from <i>mm</i> and <i>mm/m64</i> into <i>mm</i> .
66 OF 68 /r	PUNPCKHBW xmm1, xmm2/m128	Valid	Valid	Unpack and interleave high-order bytes from <i>xmm1</i> and <i>xmm2/m128</i> into <i>xmm1</i> .
0F 69 /r	PUNPCKHWD mm, mm/m64	Valid	Valid	Unpack and interleave high-order words from <i>mm</i> and <i>mm/m64</i> into <i>mm</i> .
66 OF 69 /r	PUNPCKHWD xmm1, xmm2/m128	Valid	Valid	Unpack and interleave high-order words from xmm1 and xmm2/m128 into xmm1.
0F 6A /r	PUNPCKHDQ mm, mm/m64	Valid	Valid	Unpack and interleave high-order doublewords from <i>mm</i> and <i>mm/m64</i> into <i>mm</i> .
66 OF 6A /r	PUNPCKHDQ xmm1, xmm2/m128	Valid	Valid	Unpack and interleave high-order doublewords from xmm1 and xmm2/m128 into xmm1.
66 OF 6D /r	PUNPCKHQDQ xmm1, xmm2/m128	Valid	Valid	Unpack and interleave high-order quadwords from xmm1 and xmm2/m128 into xmm1.

# **Description**

Unpacks and interleaves the high-order data elements (bytes, words, doublewords, or quadwords) of the destination operand (first operand) and source operand (second operand) into the destination operand. Figure 4-11 shows the unpack operation for bytes in 64-bit operands. The low-order data elements are ignored.

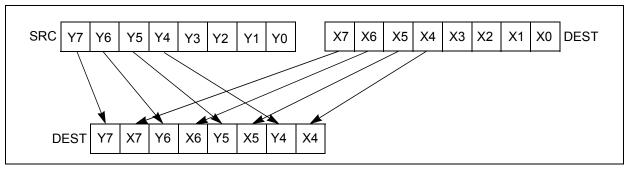


Figure 4-11. PUNPCKHBW Instruction Operation Using 64-bit Operands

The source operand can be an MMX technology register or a 64-bit memory location, or it can be an XMM register or a 128-bit memory location. The destination operand can be an MMX technology register or an XMM register. When the source data comes from a 64-bit memory operand, the full 64-bit operand is accessed from memory, but the instruction uses only the high-order 32 bits. When the source data comes from a 128-bit memory operand, an implementation may fetch only the appropriate 64 bits; however, alignment to a 16-byte boundary and normal segment checking will still be enforced.

The PUNPCKHBW instruction interleaves the high-order bytes of the source and destination operands, the PUNPCKHWD instruction interleaves the high-order words of the source and destination operands, the PUNPCKHDQ instruction interleaves the high-order doubleword (or doublewords) of the source and destination operands, and the PUNPCKHQDQ instruction interleaves the high-order quadwords of the source and destination operands.

These instructions can be used to convert bytes to words, words to doublewords, doublewords to quadwords, and quadwords to double quadwords, respectively, by placing all 0s in the source operand. Here, if the source operand contains all 0s, the result (stored in the destination operand) contains zero extensions of the high-order data elements from the original value in the destination operand. For example, with the PUNPCKHBW instruction the high-order bytes are zero extended (that is, unpacked into unsigned word integers), and with the PUNPCKHWD instruction, the high-order words are zero extended (unpacked into unsigned doubleword integers).

In 64-bit mode, using a REX prefix in the form of REX.R permits this instruction to access additional registers (XMM8-XMM15).

# **Operation**

PUNPCKHBW instruction with 64-bit operands:

 $DEST[7:0] \leftarrow DEST[39:32];$ 

 $\mathsf{DEST}[15:8] \leftarrow \mathsf{SRC}[39:32];$ 

 $\mathsf{DEST[23:16]} \leftarrow \mathsf{DEST[47:40]};$ 

 $\mathsf{DEST}[31:24] \leftarrow \mathsf{SRC}[47:40];$ 

```
DEST[39:32] \leftarrow DEST[55:48];
    DEST[47:40] \leftarrow SRC[55:48];
    DEST[55:48] \leftarrow DEST[63:56];
    DEST[63:56] \leftarrow SRC[63:56];
PUNPCKHW instruction with 64-bit operands:
    DEST[15:0] \leftarrow DEST[47:32];
    DEST[31:16] \leftarrow SRC[47:32];
    DEST[47:32] \leftarrow DEST[63:48];
    DEST[63:48] \leftarrow SRC[63:48];
PUNPCKHDQ instruction with 64-bit operands:
    DEST[31:0] \leftarrow DEST[63:32];
    DEST[63:32] \leftarrow SRC[63:32];
PUNPCKHBW instruction with 128-bit operands:
    DEST[7:0] \leftarrow DEST[71:64];
    DEST[15:8] \leftarrow SRC[71:64];
    DEST[23:16] \leftarrow DEST[79:72];
    DEST[31:24] \leftarrow SRC[79:72];
    DEST[39:32] \leftarrow DEST[87:80];
    DEST[47:40] \leftarrow SRC[87:80];
    DEST[55:48] \leftarrow DEST[95:88];
    DEST[63:56] \leftarrow SRC[95:88];
    DEST[71:64] \leftarrow DEST[103:96];
    DEST[79:72] \leftarrow SRC[103:96];
    DEST[87:80] \leftarrow DEST[111:104];
    DEST[95:88] \leftarrow SRC[111:104];
    DEST[103:96] \leftarrow DEST[119:112];
    DEST[111:104] \leftarrow SRC[119:112];
    DEST[119:112] \leftarrow DEST[127:120];
    DEST[127:120] \leftarrow SRC[127:120];
PUNPCKHWD instruction with 128-bit operands:
    DEST[15:0] \leftarrow DEST[79:64];
    DEST[31:16] \leftarrow SRC[79:64];
    DEST[47:32] \leftarrow DEST[95:80];
    DEST[63:48] \leftarrow SRC[95:80];
    DEST[79:64] \leftarrow DEST[111:96];
    DEST[95:80] \leftarrow SRC[111:96];
    DEST[111:96] \leftarrow DEST[127:112];
    DEST[127:112] \leftarrow SRC[127:112];
PUNPCKHDQ instruction with 128-bit operands:
    DEST[31:0] \leftarrow DEST[95:64];
    DEST[63:32] \leftarrow SRC[95:64];
```

```
DEST[95:64] \leftarrow DEST[127:96];
DEST[127:96] \leftarrow SRC[127:96];
PUNPCKHQDQ instruction:
DEST[63:0] \leftarrow DEST[127:64];
DEST[127:64] \leftarrow SRC[127:64];
```

## Intel C/C++ Compiler Intrinsic Equivalents

```
      PUNPCKHBW
      __m64 _mm_unpackhi_pi8(__m64 m1, __m64 m2)

      PUNPCKHBW
      __m128i _mm_unpackhi_epi8(__m128i m1, __m128i m2)

      PUNPCKHWD
      __m64 _mm_unpackhi_epi16(__m64 m1, __m64 m2)

      PUNPCKHWD
      __m128i _mm_unpackhi_epi32(__m64 m1, __m64 m2)

      PUNPCKHDQ
      __m128i _mm_unpackhi_epi32(__m128i m1, __m128i m2)

      PUNPCKHQDQ
      __m128i _mm_unpackhi_epi64 ( __m128i a, __m128i b)
```

#### **Flags Affected**

None.

# **Numeric Exceptions**

None.

# **Protected Mode Exceptions**

#GP(0) If a	memory operand	effective address i	s outside the CS, DS,
-------------	----------------	---------------------	-----------------------

ES, FS, or GS segment limit.

(128-bit operations only) If a memory operand is not aligned on

a 16-byte boundary, regardless of segment.

#SS(0) If a memory operand effective address is outside the SS

segment limit.

#UD If CR0.EM[bit 2] = 1.

(128-bit operations only) If CR4.OSFXSR[bit 9] = 0. Execution of 128-bit instructions (except PUNPCKHQDQ) on a non-SSE2 capable processor (one that is MMX technology capable) will result in the instruction operating on the mm registers, not #UD.

(PUNPCKHQDQ only) If CPUID.01H:EDX.SSE2[bit 26] = 0.

If the LOCK prefix is used.

#NM If CR0.TS[bit 3] = 1.

#MF (64-bit operations only) If there is a pending x87 FPU exception.

#PF(fault-code) If a page fault occurs.

#AC(0) (64-bit operations only) If alignment checking is enabled and an

unaligned memory reference is made while the current privilege

level is 3.

### **Real-Address Mode Exceptions**

#GP If any part of the operand lies outside of the effective address

space from 0 to FFFFH.

(128-bit operations only) If a memory operand is not aligned on

a 16-byte boundary, regardless of segment.

#UD If CR0.EM[bit 2] = 1.

(128-bit operations only) If CR4.OSFXSR[bit 9] = 0. Execution of 128-bit instructions (except PUNPCKHQDQ) on a non-SSE2 capable processor (one that is MMX technology capable) will result in the instruction operating on the mm registers, not #UD.

(PUNPCKHQDQ only) If CPUID.01H:EDX.SSE2[bit 26] = 0.

If the LOCK prefix is used.

#NM If CR0.TS[bit 3] = 1.

#MF (64-bit operations only) If there is a pending x87 FPU exception.

### Virtual-8086 Mode Exceptions

Same exceptions as in real address mode.

#PF(fault-code) For a page fault.

#AC(0) (64-bit operations only) If alignment checking is enabled and an

unaligned memory reference is made.

# **Compatibility Mode Exceptions**

Same exceptions as in protected mode.

# **64-Bit Mode Exceptions**

#SS(0) If a memory address referencing the SS segment is in a non-

canonical form.

#GP(0) If the memory address is in a non-canonical form.

(128-bit version only) If memory operand is not aligned on a

16-byte boundary, regardless of segment.

#UD If CR0.EM[bit 2] = 1.

(128-bit operations only) If CR4.OSFXSR[bit 9] = 0.

(128-bit operations only) If CPUID.01H:EDX.SSE2[bit 26] = 0.

If the LOCK prefix is used.

#NM If CR0.TS[bit 3] = 1.

#MF (64-bit operations only) If there is a pending x87 FPU exception.

#PF(fault-code)

If a page fault occurs.

#AC(0)

(64-bit operations only) If alignment checking is enabled and an unaligned memory reference is made while the current privilege level is 3.

# PUNPCKLBW/PUNPCKLWD/PUNPCKLDQ/PUNPCKLQDQ— Unpack Low Data

Opcode	Instruction	64-Bit Mode	Compat/ Leg Mode	Description
0F 60 /r	PUNPCKLBW mm, mm/m32	Valid	Valid	Interleave low-order bytes from mm and mm/m32 into mm.
66 OF 60 /r	PUNPCKLBW xmm1, xmm2/m128	Valid	Valid	Interleave low-order bytes from xmm1 and xmm2/m128 into xmm1.
0F 61 /r	PUNPCKLWD mm, mm/m32	Valid	Valid	Interleave low-order words from mm and mm/m32 into mm.
66 0F 61 /r	PUNPCKLWD xmm1, xmm2/m128	Valid	Valid	Interleave low-order words from xmm1 and xmm2/m128 into xmm1.
0F 62 /r	PUNPCKLDQ mm, mm/m32	Valid	Valid	Interleave low-order doublewords from <i>mm</i> and <i>mm/m32</i> into <i>mm</i> .
66 0F 62 /r	PUNPCKLDQ xmm1, xmm2/m128	Valid	Valid	Interleave low-order doublewords from <i>xmm1</i> and <i>xmm2/m128</i> into xmm1.
66 OF 6C /r	PUNPCKLQDQ xmm1, xmm2/m128	Valid	Valid	Interleave low-order quadword from xmm1 and xmm2/m128 into xmm1 register.

# **Description**

Unpacks and interleaves the low-order data elements (bytes, words, doublewords, and quadwords) of the destination operand (first operand) and source operand (second operand) into the destination operand. (Figure 4-12 shows the unpack operation for bytes in 64-bit operands.). The high-order data elements are ignored.

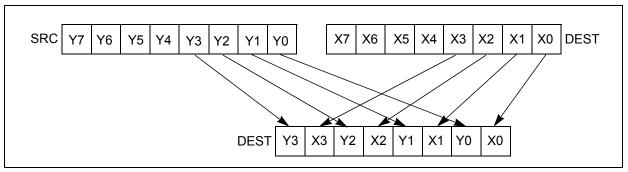


Figure 4-12. PUNPCKLBW Instruction Operation Using 64-bit Operands

The source operand can be an MMX technology register or a 32-bit memory location, or it can be an XMM register or a 128-bit memory location. The destination operand can be an MMX technology register or an XMM register. When the source data comes from a 128-bit memory operand, an implementation may fetch only the appropriate 64 bits; however, alignment to a 16-byte boundary and normal segment checking will still be enforced.

The PUNPCKLBW instruction interleaves the low-order bytes of the source and destination operands, the PUNPCKLWD instruction interleaves the low-order words of the source and destination operands, the PUNPCKLDQ instruction interleaves the low-order doubleword (or doublewords) of the source and destination operands, and the PUNPCKLQDQ instruction interleaves the low-order quadwords of the source and destination operands.

These instructions can be used to convert bytes to words, words to doublewords, doublewords to quadwords, and quadwords to double quadwords, respectively, by placing all 0s in the source operand. Here, if the source operand contains all 0s, the result (stored in the destination operand) contains zero extensions of the high-order data elements from the original value in the destination operand. For example, with the PUNPCKLBW instruction the high-order bytes are zero extended (that is, unpacked into unsigned word integers), and with the PUNPCKLWD instruction, the high-order words are zero extended (unpacked into unsigned doubleword integers).

In 64-bit mode, using a REX prefix in the form of REX.R permits this instruction to access additional registers (XMM8-XMM15).

### Operation

```
PUNPCKLBW instruction with 64-bit operands:
    DEST[63:56] \leftarrow SRC[31:24];
    DEST[55:48] \leftarrow DEST[31:24];
    DEST[47:40] \leftarrow SRC[23:16];
    \mathsf{DEST}[39:32] \leftarrow \mathsf{DEST}[23:16];
    DEST[31:24] \leftarrow SRC[15:8];
    DEST[23:16] \leftarrow DEST[15:8];
    DEST[15:8] \leftarrow SRC[7:0];
    DEST[7:0] \leftarrow DEST[7:0];
PUNPCKLWD instruction with 64-bit operands:
    DEST[63:48] \leftarrow SRC[31:16];
    DEST[47:32] \leftarrow DEST[31:16];
    DEST[31:16] \leftarrow SRC[15:0];
    DEST[15:0] \leftarrow DEST[15:0];
PUNPCKLDQ instruction with 64-bit operands:
    DEST[63:32] \leftarrow SRC[31:0];
    DEST[31:0] \leftarrow DEST[31:0];
```

```
PUNPCKLBW instruction with 128-bit operands:
   DEST[7:0] \leftarrow DEST[7:0];
   DEST[15:8] \leftarrow SRC[7:0];
   DEST[23:16] \leftarrow DEST[15:8];
   DEST[31:24] \leftarrow SRC[15:8];
   DEST[39:32] \leftarrow DEST[23:16];
   DEST[47:40] \leftarrow SRC[23:16];
   DEST[55:48] \leftarrow DEST[31:24];
   DEST[63:56] \leftarrow SRC[31:24];
   DEST[71:64] \leftarrow DEST[39:32];
   DEST[79:72] \leftarrow SRC[39:32];
   DEST[87:80] \leftarrow DEST[47:40];
   DEST[95:88] \leftarrow SRC[47:40];
   DEST[103:96] \leftarrow DEST[55:48];
   DEST[111:104] \leftarrow SRC[55:48];
   DEST[119:112] \leftarrow DEST[63:56];
   DEST[127:120] \leftarrow SRC[63:56];
PUNPCKLWD instruction with 128-bit operands:
   DEST[15:0] \leftarrow DEST[15:0];
   DEST[31:16] \leftarrow SRC[15:0];
   DEST[47:32] \leftarrow DEST[31:16];
   DEST[63:48] \leftarrow SRC[31:16];
   DEST[79:64] \leftarrow DEST[47:32];
   DEST[95:80] \leftarrow SRC[47:32];
   DEST[111:96] \leftarrow DEST[63:48];
   DEST[127:112] \leftarrow SRC[63:48];
PUNPCKLDQ instruction with 128-bit operands:
   DEST[31:0] \leftarrow DEST[31:0];
   DEST[63:32] \leftarrow SRC[31:0];
   DEST[95:64] \leftarrow DEST[63:32];
   DEST[127:96] \leftarrow SRC[63:32];
PUNPCKLQDQ
   DEST[63:0] \leftarrow DEST[63:0];
   DEST[127:64] \leftarrow SRC[63:0];
Intel C/C++ Compiler Intrinsic Equivalents
PUNPCKLBW
                    __m64 _mm_unpacklo_pi8 (__m64 m1, __m64 m2)
PUNPCKLBW
                    __m128i _mm_unpacklo_epi8 (__m128i m1, __m128i m2)
                    __m64 _mm_unpacklo_pi16 (__m64 m1, __m64 m2)
PUNPCKLWD
                    __m128i _mm_unpacklo_epi16 (__m128i m1, __m128i m2)
PUNPCKLWD
```

PUNPCKLDQ \_\_m64 \_mm\_unpacklo\_pi32 (\_\_m64 m1, \_\_m64 m2)

PUNPCKLDQ \_\_m128i \_mm\_unpacklo\_epi32 (\_\_m128i m1, \_\_m128i m2)
PUNPCKLQDQ \_\_m128i \_mm\_unpacklo\_epi64 (\_\_m128i m1, \_\_m128i m2)

#### **Flags Affected**

None.

# **Numeric Exceptions**

None.

### **Protected Mode Exceptions**

#GP(0) If a memory operand effective address is outside the CS, DS,

ES, FS, or GS segment limit.

(128-bit operations only) If a memory operand is not aligned on

a 16-byte boundary, regardless of segment.

#SS(0) If a memory operand effective address is outside the SS

segment limit.

#UD If CR0.EM[bit 2] = 1.

(128-bit operations only) If CR4.OSFXSR[bit 9] = 0. Execution of 128-bit instructions (PUNPCKLQDQ) on a non-SSE2 capable processor (one that is MMX technology capable) will result in the

instruction operating on the mm registers, not #UD.

(PUNPCKLQDQ only) If CPUID.01H:EDX.SSE2[bit 26] = 0.

If the LOCK prefix is used.

#NM If CR0.TS[bit 3] = 1.

#MF (64-bit operations only) If there is a pending x87 FPU exception.

#PF(fault-code) If a page fault occurs.

#AC(0) (64-bit operations only) If alignment checking is enabled and an

unaligned memory reference is made while the current privilege

level is 3.

# **Real-Address Mode Exceptions**

#GP If any part of the operand lies outside of the effective address

space from 0 to 0FFFFH.

(128-bit operations only) If a memory operand is not aligned on

a 16-byte boundary, regardless of segment.

#UD If CR0.EM[bit 2] = 1.

(128-bit operations only) If CR4.OSFXSR[bit 9] = 0. Execution of 128-bit instructions (except PUNPCKLQDQ) on a non-SSE2

capable processor (one that is MMX technology capable) will result in the instruction operating on the mm registers, not #UD.

(PUNPCKLQDQ only) If CPUID.01H:EDX.SSE2[bit 26] = 0.

If the LOCK prefix is used.

#NM If CR0.TS[bit 3] = 1.

#MF (64-bit operations only) If there is a pending x87 FPU exception.

#### Virtual-8086 Mode Exceptions

Same exceptions as in real address mode.

#PF(fault-code) For a page fault.

#AC(0) (64-bit operations only) If alignment checking is enabled and an

unaligned memory reference is made.

#### **Compatibility Mode Exceptions**

Same exceptions as in protected mode.

### **64-Bit Mode Exceptions**

#SS(0) If a memory address referencing the SS segment is in a non-

canonical form.

#GP(0) If the memory address is in a non-canonical form.

(128-bit version only) If memory operand is not aligned on a

16-byte boundary, regardless of segment.

#UD If CR0.EM[bit 2] = 1.

(128-bit operations only) If CR4.OSFXSR[bit 9] = 0.

(128-bit operations only) If CPUID.01H:EDX.SSE2[bit 26] = 0.

If the LOCK prefix is used.

#NM If CR0.TS[bit 3] = 1.

#MF (64-bit operations only) If there is a pending x87 FPU exception.

#PF(fault-code) If a page fault occurs.

#AC(0) (64-bit operations only) If alignment checking is enabled and an

unaligned memory reference is made while the current privilege

level is 3.

# PUSH—Push Word, Doubleword or Quadword Onto the Stack

Opcode*	Instruction	64-Bit Mode	Compat/ Leg Mode	Description
FF /6	PUSH r/m16	Valid	Valid	Push <i>r/m16.</i>
FF /6	PUSH r/m32	N.E.	Valid	Push <i>r/m32.</i>
FF /6	PUSH r/m64	Valid	N.E.	Push <i>r/m64.</i> Default operand size 64-bits.
50+ <i>rw</i>	PUSH <i>r16</i>	Valid	Valid	Push <i>r16.</i>
50+ <i>rd</i>	PUSH <i>r32</i>	N.E.	Valid	Push <i>r32.</i>
50+rd	PUSH <i>r64</i>	Valid	N.E.	Push <i>r64.</i> Default operand size 64-bits.
6A	PUSH imm8	Valid	Valid	Push sign-extended imm8. Stack pointer is incremented by the size of stack pointer.
68	PUSH imm16	Valid	Valid	Push sign-extended imm16. Stack pointer is incremented by the size of stack pointer.
68	PUSH imm32	Valid	Valid	Push sign-extended imm32. Stack pointer is incremented by the size of stack pointer.
0E	PUSH CS	Invalid	Valid	Push CS.
16	PUSH SS	Invalid	Valid	Push SS.
1E	PUSH DS	Invalid	Valid	Push DS.
06	PUSH ES	Invalid	Valid	Push ES.
OF AO	PUSH FS	Valid	Valid	Push FS and decrement stack pointer by 16 bits.
OF AO	PUSH FS	N.E.	Valid	Push FS and decrement stack pointer by 32 bits.
OF AO	PUSH FS	Valid	N.E.	Push FS. Default operand size 64-bits. (66H override causes 16-bit operation).
OF A8	PUSH GS	Valid	Valid	Push GS and decrement stack pointer by 16 bits.
OF A8	PUSH GS	N.E.	Valid	Push GS and decrement stack pointer by 32 bits.

Opcode*	Instruction	64-Bit Mode	Compat/ Leg Mode	Description
OF A8	PUSH GS	Valid	N.E.	Push GS, default operand size 64-bits. (66H override causes 16-bit operation).

#### **NOTES:**

\* See IA-32 Architecture Compatibility section below.

# **Description**

Decrements the stack pointer and then stores the source operand on the top of the stack. The address-size attribute of the stack segment determines the stack pointer size (16, 32 or 64 bits). The operand-size attribute of the current code segment determines the amount the stack pointer is decremented (2, 4 or 8 bytes).

In non-64-bit modes: if the address-size and operand-size attributes are 32, the 32-bit ESP register (stack pointer) is decremented by 4. If both attributes are 16, the 16-bit SP register (stack pointer) is decremented by 2.

If the source operand is an immediate and its size is less than the address size of the stack, a sign-extended value is pushed on the stack. If the source operand is the FS or GS and its size is less than the address size of the stack, the zero-extended value is pushed on the stack.

The B flag in the stack segment's segment descriptor determines the stack's address-size attribute. The D flag in the current code segment's segment descriptor (with prefixes), determines the operand-size attribute and the address-size attribute of the source operand. Pushing a 16-bit operand when the stack address-size attribute is 32 can result in a misaligned stack pointer (a stack pointer that is not be aligned on a doubleword boundary).

The PUSH ESP instruction pushes the value of the ESP register as it existed before the instruction was executed. Thus if a PUSH instruction uses a memory operand in which the ESP register is used for computing the operand address, the address of the operand is computed before the ESP register is decremented.

In the real-address mode, if the ESP or SP register is 1 when the PUSH instruction is executed, an #SS exception is generated but not delivered (the stack error reported prevents #SS delivery). Next, the processor generates a #DF exception and enters a shutdown state as described in the #DF discussion in Chapter 5 of the Intel® 64 and IA-32 Architectures Software Developer's Manual, Volume 3A.

In 64-bit mode, the instruction's default operation size is 64 bits. In a push, the 64-bit RSP register (stack pointer) is decremented by 8. A 66H override causes 16-bit operation. Note that pushing a 16-bit operand can result in the stack pointer misaligned to 8-byte boundary.

## **IA-32 Architecture Compatibility**

For IA-32 processors from the Intel 286 on, the PUSH ESP instruction pushes the value of the ESP register as it existed before the instruction was executed. (This is also true for Intel 64 architecture, real-address and virtual-8086 modes of IA-32 architecture.) For the Intel<sup>®</sup> 8086 processor, the PUSH SP instruction pushes the new value of the SP register (that is the value after it has been decremented by 2).

### **Operation**

```
IF StackAddrSize = 64
   THEN
        IF OperandSize = 64
             THEN
                  RSP \leftarrow (RSP - 8);
                  IF (SRC is FS or GS)
                       THEN
                            TEMP = ZeroExtend64(SRC);
                       ELSE IF (SRC is IMMEDIATE)
                            TEMP = SignExtend64(SRC); FI;
                       ELSE
                            TEMP = SRC;
                  FΙ
                  RSP \leftarrow TEMP; (* Push quadword *)
             ELSE (* OperandSize = 16; 66H used *)
                  RSP \leftarrow (RSP - 2);
                  RSP \leftarrow SRC; (* Push word *)
        FI:
ELSE IF StackAddrSize = 32
   THEN
        IF OperandSize = 32
             THEN
                  ESP \leftarrow (ESP - 4);
                  IF (SRC is FS or GS)
                       THEN
                            TEMP = ZeroExtend32(SRC);
                       ELSE IF (SRC is IMMEDIATE)
                            TEMP = SignExtend32(SRC); FI;
                       ELSE
                            TEMP = SRC;
                  FI:
                  SS:ESP \leftarrow TEMP; (* Push doubleword *)
             ELSE (* OperandSize = 16*)
                  ESP \leftarrow (ESP - 2);
                  SS:ESP \leftarrow SRC; (* Push word *)
```

```
FI;

ELSE StackAddrSize = 16

IF OperandSize = 16

THEN

SP \leftarrow (SP - 2);

SS:SP \leftarrow SRC; (* Push word *)

ELSE (* OperandSize = 32 *)

SP \leftarrow (SP - 4);

SS:SP \leftarrow SRC; (* Push doubleword *)

FI;

FI;
```

# **Flags Affected**

None.

#### **Protected Mode Exceptions**

#GP(0) If a memory operand effective address is outside the CS, DS,

ES, FS, or GS segment limit.

If the DS, ES, FS, or GS register is used to access memory and it

contains a NULL segment selector.

#SS(0) If a memory operand effective address is outside the SS

segment limit.

#PF(fault-code) If a page fault occurs.

#AC(0) If alignment checking is enabled and an unaligned memory

reference is made while the current privilege level is 3.

#UD If the LOCK prefix is used.

#### **Real-Address Mode Exceptions**

#GP If a memory operand effective address is outside the CS, DS,

ES, FS, or GS segment limit.

#SS If a memory operand effective address is outside the SS

segment limit.

If the new value of the SP or ESP register is outside the stack

segment limit.

#UD If the LOCK prefix is used.

# Virtual-8086 Mode Exceptions

#GP(0) If a memory operand effective address is outside the CS, DS,

ES, FS, or GS segment limit.

#SS(0) If a memory operand effective address is outside the SS

segment limit.

#PF(fault-code) If a page fault occurs.

#AC(0) If alignment checking is enabled and an unaligned memory

reference is made.

#UD If the LOCK prefix is used.

# **Compatibility Mode Exceptions**

Same exceptions as in protected mode.

## **64-Bit Mode Exceptions**

#GP(0) If the memory address is in a non-canonical form.
#SS(U) If the stack address is in a non-canonical form.

#PF(fault-code) If a page fault occurs.

#AC(0) If alignment checking is enabled and an unaligned memory

reference is made while the current privilege level is 3.

#UD If the LOCK prefix is used.

PUSHA/PUSHAD-	-Push All	General-Pu	irpose F	Reaisters

Opcode	Instruction	64-Bit Mode	Compat/ Leg Mode	Description
60	PUSHA	Invalid	Valid	Push AX, CX, DX, BX, original SP, BP, SI, and DI.
60	PUSHAD	Invalid	Valid	Push EAX, ECX, EDX, EBX, original ESP, EBP, ESI, and EDI.

### **Description**

Pushes the contents of the general-purpose registers onto the stack. The registers are stored on the stack in the following order: EAX, ECX, EDX, EBX, ESP (original value), EBP, ESI, and EDI (if the current operand-size attribute is 32) and AX, CX, DX, BX, SP (original value), BP, SI, and DI (if the operand-size attribute is 16). These instructions perform the reverse operation of the POPA/POPAD instructions. The value pushed for the ESP or SP register is its value before prior to pushing the first register (see the "Operation" section below).

The PUSHA (push all) and PUSHAD (push all double) mnemonics reference the same opcode. The PUSHA instruction is intended for use when the operand-size attribute is 16 and the PUSHAD instruction for when the operand-size attribute is 32. Some assemblers may force the operand size to 16 when PUSHA is used and to 32 when PUSHAD is used. Others may treat these mnemonics as synonyms (PUSHA/PUSHAD) and use the current setting of the operand-size attribute to determine the size of values to be pushed from the stack, regardless of the mnemonic used.

In the real-address mode, if the ESP or SP register is 1, 3, or 5 when PUSHA/PUSHAD executes: an #SS exception is generated but not delivered (the stack error reported prevents #SS delivery). Next, the processor generates a #DF exception and enters a shutdown state as described in the #DF discussion in Chapter 5 of the Intel® 64 and IA-32 Architectures Software Developer's Manual, Volume 3A.

This instruction executes as described in compatibility mode and legacy mode. It is not valid in 64-bit mode.

# Operation

```
IF 64-bit Mode

THEN #UD

FI;

IF OperandSize = 32 (* PUSHAD instruction *)

THEN

Temp ← (ESP);

Push(EAX);
```

```
Push(ECX);
        Push(EDX);
        Push(EBX);
        Push(Temp);
        Push(EBP);
        Push(ESI);
        Push(EDI);
   ELSE (* OperandSize = 16, PUSHA instruction *)
        Temp \leftarrow (SP);
        Push(AX);
        Push(CX);
        Push(DX);
        Push(BX);
        Push(Temp);
        Push(BP);
        Push(SI);
        Push(DI);
FI;
```

### **Flags Affected**

None.

#### **Protected Mode Exceptions**

#SS(0) If the starting or ending stack address is outside the stack

seament limit.

#PF(fault-code) If a page fault occurs.

#AC(0) If an unaligned memory reference is made while the current

privilege level is 3 and alignment checking is enabled.

#UD If the LOCK prefix is used.

#### **Real-Address Mode Exceptions**

#GP If the ESP or SP register contains 7, 9, 11, 13, or 15.

**#UD** If the LOCK prefix is used.

#### Virtual-8086 Mode Exceptions

#GP(0) If the ESP or SP register contains 7, 9, 11, 13, or 15.

#PF(fault-code) If a page fault occurs.

#AC(0) If an unaligned memory reference is made while alignment

checking is enabled.

#UD If the LOCK prefix is used.

# **Compatibility Mode Exceptions**

Same exceptions as in protected mode.

# **64-Bit Mode Exceptions**

#UD If in 64-bit mode.

Opcode	Instruction	64-Bit Mode	Compat/ Leg Mode	Description
9C	PUSHF	Valid	Valid	Push lower 16 bits of EFLAGS.
9C	PUSHFD	N.E.	Valid	Push EFLAGS.
9C	PUSHFQ	Valid	N.E.	Push RFLAGS.

# **Description**

Decrements the stack pointer by 4 (if the current operand-size attribute is 32) and pushes the entire contents of the EFLAGS register onto the stack, or decrements the stack pointer by 2 (if the operand-size attribute is 16) and pushes the lower 16 bits of the EFLAGS register (that is, the FLAGS register) onto the stack. These instructions reverse the operation of the POPF/POPFD instructions.

When copying the entire EFLAGS register to the stack, the VM and RF flags (bits 16 and 17) are not copied; instead, the values for these flags are cleared in the EFLAGS image stored on the stack. See Chapter 3 of the Intel® 64 and IA-32 Architectures Software Developer's Manual, Volume 1, for more information about the EFLAGS register.

The PUSHF (push flags) and PUSHFD (push flags double) mnemonics reference the same opcode. The PUSHF instruction is intended for use when the operand-size attribute is 16 and the PUSHFD instruction for when the operand-size attribute is 32. Some assemblers may force the operand size to 16 when PUSHF is used and to 32 when PUSHFD is used. Others may treat these mnemonics as synonyms (PUSHF/PUSHFD) and use the current setting of the operand-size attribute to determine the size of values to be pushed from the stack, regardless of the mnemonic used.

In 64-bit mode, the instruction's default operation is to decrement the stack pointer (RSP) by 8 and pushes RFLAGS on the stack. 16-bit operation is supported using the operand size override prefix 66H. 32-bit operand size cannot be encoded in this mode. When copying RFLAGS to the stack, the VM and RF flags (bits 16 and 17) are not copied; instead, values for these flags are cleared in the RFLAGS image stored on the stack.

When in virtual-8086 mode and the I/O privilege level (IOPL) is less than 3, the PUSHF/PUSHFD instruction causes a general protection exception (#GP).

In the real-address mode, if the ESP or SP register is 1 when PUSHF/PUSHFD instruction executes: an #SS exception is generated but not delivered (the stack error reported prevents #SS delivery). Next, the processor generates a #DF exception and enters a shutdown state as described in the #DF discussion in Chapter 5 of the Intel® 64 and IA-32 Architectures Software Developer's Manual, Volume 3A.

### **Operation**

```
IF (PE = 0) or (PE = 1) and ((VM = 0)) or (VM = 1) and (VM = 3)
(* Real-Address Mode, Protected mode, or Virtual-8086 mode with IOPL equal to 3 *)
   THEN
        IF OperandSize = 32
            THEN
                 push (EFLAGS AND OOFCFFFFH);
                 (* VM and RF EFLAG bits are cleared in image stored on the stack *)
            ELSE
                 push (EFLAGS); (* Lower 16 bits only *)
        FI;
   ELSE IF 64-bit MODE (* In 64-bit Mode *)
        IF OperandSize = 64
            THEN
                 push (RFLAGS AND 0000000_00FCFFFFH);
                 (* VM and RF RFLAG bits are cleared in image stored on the stack; *)
            ELSE
                 push (EFLAGS); (* Lower 16 bits only *)
        FI;
   ELSE (* In Virtual-8086 Mode with IOPL less than 3 *)
        #GP(0); (* Trap to virtual-8086 monitor *)
FI;
```

#### Flags Affected

None.

### **Protected Mode Exceptions**

#SS(0) If the new value of the ESP register is outside the stack segment

boundary.

#PF(fault-code) If a page fault occurs.

#AC(0) If an unaligned memory reference is made while the current

privilege level is 3 and alignment checking is enabled.

#UD If the LOCK prefix is used.

### Real-Address Mode Exceptions

#UD If the LOCK prefix is used.

# Virtual-8086 Mode Exceptions

#GP(0) If the I/O privilege level is less than 3.

#PF(fault-code) If a page fault occurs.

#AC(0) If an unaligned memory reference is made while alignment

checking is enabled.

#UD If the LOCK prefix is used.

# **Compatibility Mode Exceptions**

Same exceptions as in protected mode.

# **64-Bit Mode Exceptions**

#GP(0) If the memory address is in a non-canonical form. #SS(0) If the stack address is in a non-canonical form.

#PF(fault-code) If a page fault occurs.

#AC(0) If an unaligned memory reference is made while the current

privilege level is 3 and alignment checking is enabled.

#UD If the LOCK prefix is used.

# **PXOR—Logical Exclusive OR**

Opcode	Instruction	64-Bit Mode	Compat/ Leg Mode	Description
OF EF /r	PXOR mm, mm/m64	Valid	Valid	Bitwise XOR of mm/m64 and mm.
66 OF EF /r	PXOR xmm1, xmm2/m128	Valid	Valid	Bitwise XOR of xmm2/m128 and xmm1.

# **Description**

Performs a bitwise logical exclusive-OR (XOR) operation on the source operand (second operand) and the destination operand (first operand) and stores the result in the destination operand. The source operand can be an MMX technology register or a 64-bit memory location or it can be an XMM register or a 128-bit memory location. The destination operand can be an MMX technology register or an XMM register. Each bit of the result is 1 if the corresponding bits of the two operands are different; each bit is 0 if the corresponding bits of the operands are the same.

In 64-bit mode, using a REX prefix in the form of REX.R permits this instruction to access additional registers (XMM8-XMM15).

# Operation

DEST ← DEST XOR SRC;

# Intel C/C++ Compiler Intrinsic Equivalent

PXOR \_\_m64 \_mm\_xor\_si64 (\_\_m64 m1, \_\_m64 m2)

PXOR \_\_m128i \_mm\_xor\_si128 ( \_\_m128i a, \_\_m128i b)

# **Flags Affected**

None.

# **Numeric Exceptions**

None.

# **Protected Mode Exceptions**

#GP(0) If a

If a memory operand effective address is outside the CS, DS, ES, FS, or GS segment limit.

(128-bit operations only) If a memory operand is not aligned on a 16-byte boundary, regardless of segment.

#SS(0) If a memory operand effective address is outside the SS

segment limit.

#UD If CR0.EM[bit 2] = 1.

(128-bit operations only) If CR4.OSFXSR[bit 9] = 0. Execution of 128-bit instructions on a non-SSE2 capable processor (one that is MMX technology capable) will result in the instruction

operating on the mm registers, not #UD.

If the LOCK prefix is used.

#NM If CR0.TS[bit 3] = 1.

#MF (64-bit operations only) If there is a pending x87 FPU exception.

#PF(fault-code) If a page fault occurs.

#AC(0) (64-bit operations only) If alignment checking is enabled and an

unaligned memory reference is made while the current privilege

level is 3.

### **Real-Address Mode Exceptions**

#GP (128-bit operations only) If a memory operand is not aligned on

a 16-byte boundary, regardless of segment.

If any part of the operand lies outside of the effective address

space from 0 to FFFFH.

#UD If CR0.EM[bit 2] = 1.

(128-bit operations only) If CR4.OSFXSR[bit 9] = 0. Execution of 128-bit instructions on a non-SSE2 capable processor (one that is MMX technology capable) will result in the instruction

operating on the mm registers, not #UD.

If the LOCK prefix is used.

#NM If CR0.TS[bit 3] = 1.

#MF (64-bit operations only) If there is a pending x87 FPU exception.

### Virtual-8086 Mode Exceptions

Same exceptions as in real address mode.

#PF(fault-code) For a page fault.

#AC(0) (64-bit operations only) If alignment checking is enabled and an

unaligned memory reference is made.

# **Compatibility Mode Exceptions**

Same exceptions as in protected mode.

### **64-Bit Mode Exceptions**

#SS(0) If a memory address referencing the SS segment is in a non-

canonical form.

#### INSTRUCTION SET REFERENCE, N-Z

#GP(0) If the memory address is in a non-canonical form.

(128-bit operations only) If memory operand is not aligned on a

16-byte boundary, regardless of segment.

#UD If CR0.EM[bit 2] = 1.

(128-bit operations only) If CR4.OSFXSR[bit 9] = 0.

(128-bit operations only) If CPUID.01H:EDX.SSE2[bit 26] = 0.

If the LOCK prefix is used.

#NM If CR0.TS[bit 3] = 1.

#MF (64-bit operations only) If there is a pending x87 FPU exception.

#PF(fault-code) If a page fault occurs.

#AC(0) (64-bit operations only) If alignment checking is enabled and an

unaligned memory reference is made while the current privilege

level is 3.

# RCL/RCR/ROL/ROR-—Rotate

Opcode**	Instruction	64-Bit Mode	Compat/ Leg Mode	Description
D0 /2	RCL <i>r/m8</i> , 1	Valid	Valid	Rotate 9 bits (CF, r/m8) left once.
REX + D0 /2	RCL <i>r/m8*</i> , 1	Valid	N.E.	Rotate 9 bits (CF, r/m8) left once.
D2 /2	RCL r/m8, CL	Valid	Valid	Rotate 9 bits (CF, r/m8) left CL times.
REX + D2 /2	RCL r/m8*, CL	Valid	N.E.	Rotate 9 bits (CF, r/m8) left CL times.
C0 /2 ib	RCL r/m8, imm8	Valid	Valid	Rotate 9 bits (CF, r/m8) left imm8 times.
REX + CO /2 ib	RCL r/m8*, imm8	Valid	N.E.	Rotate 9 bits (CF, <i>r/m8</i> ) left <i>imm8</i> times.
D1 /2	RCL <i>r/m16</i> , 1	Valid	Valid	Rotate 17 bits (CF, r/m16) left once.
D3 /2	RCL <i>r/m16</i> , CL	Valid	Valid	Rotate 17 bits (CF, r/m16) left CL times.
C1 /2 ib	RCL r/m16, imm8	Valid	Valid	Rotate 17 bits (CF, r/m16) left imm8 times.
D1 /2	RCL <i>r/m32</i> , 1	Valid	Valid	Rotate 33 bits (CF, r/m32) left once.
REX.W + D1 /2	RCL <i>r/m64</i> , 1	Valid	N.E.	Rotate 65 bits (CF, <i>r/m64</i> ) left once. Uses a 6 bit count.
D3 /2	RCL <i>r/m32</i> , CL	Valid	Valid	Rotate 33 bits (CF, <i>r/m32</i> ) left CL times.
REX.W + D3 /2	RCL <i>r/m64</i> , CL	Valid	N.E.	Rotate 65 bits (CF, r/m64) left CL times. Uses a 6 bit count.
C1 /2 ib	RCL <i>r/m32,</i> imm8	Valid	Valid	Rotate 33 bits (CF, <i>r/m32</i> ) left <i>imm8</i> times.
REX.W + C1 /2 <i>ib</i>	RCL r/m64, imm8	Valid	N.E.	Rotate 65 bits (CF, r/m64) left imm8 times. Uses a 6 bit count.
D0 /3	RCR <i>r/m8</i> , 1	Valid	Valid	Rotate 9 bits (CF, r/m8) right once.
REX + D0 /3	RCR <i>r/m8*</i> , 1	Valid	N.E.	Rotate 9 bits (CF, r/m8) right once.
D2 /3	RCR r/m8, CL	Valid	Valid	Rotate 9 bits (CF, <i>r/m8</i> ) right CL times.
REX + D2 /3	RCR r/m8*, CL	Valid	N.E.	Rotate 9 bits (CF, <i>r/m8</i> ) right CL times.

Opcode**	Instruction	64-Bit Mode	Compat/ Leg Mode	Description
CO /3 ib	RCR r/m8, imm8	Valid	Valid	Rotate 9 bits (CF, <i>r/m8</i> ) right <i>imm8</i> times.
REX + CO /3 ib	RCR r/m8*, imm8	Valid	N.E.	Rotate 9 bits (CF, <i>r/m8</i> ) right <i>imm8</i> times.
D1 /3	RCR <i>r/m16</i> , 1	Valid	Valid	Rotate 17 bits (CF, r/m16) right once.
D3 /3	RCR <i>r/m16</i> , CL	Valid	Valid	Rotate 17 bits (CF, r/m16) right CL times.
C1 /3 ib	RCR r/m16, imm8	Valid	Valid	Rotate 17 bits (CF, r/m16) right imm8 times.
D1 /3	RCR <i>r/m32</i> , 1	Valid	Valid	Rotate 33 bits (CF, <i>r/m32</i> ) right once. Uses a 6 bit count.
REX.W + D1 /3	RCR <i>r/m64</i> , 1	Valid	N.E.	Rotate 65 bits (CF, <i>r/m64</i> ) right once. Uses a 6 bit count.
D3 /3	RCR <i>r/m32</i> , CL	Valid	Valid	Rotate 33 bits (CF, r/m32) right CL times.
REX.W + D3 /3	RCR <i>r/m64</i> , CL	Valid	N.E.	Rotate 65 bits (CF, <i>r/m64</i> ) right CL times. Uses a 6 bit count.
C1 /3 ib	RCR r/m32, imm8	Valid	Valid	Rotate 33 bits (CF, <i>r/m32</i> ) right <i>imm8</i> times.
REX.W + C1 /3 ib	RCR r/m64, imm8	Valid	N.E.	Rotate 65 bits (CF, r/m64) right imm8 times. Uses a 6 bit count.
D0 /0	ROL <i>r/m8</i> , 1	Valid	Valid	Rotate 8 bits <i>r/m8</i> left once.
REX + D0 /0	ROL <i>r/m8*</i> , 1	Valid	N.E.	Rotate 8 bits <i>r/m8</i> left once
D2 /0	ROL r/m8, CL	Valid	Valid	Rotate 8 bits r/m8 left CL times.
REX + D2 /0	ROL r/m8*, CL	Valid	N.E.	Rotate 8 bits r/m8 left CL times.
CO /O ib	ROL r/m8, imm8	Valid	Valid	Rotate 8 bits <i>r/m8</i> left <i>imm8</i> times.
REX + CO /O ib	ROL r/m8*, imm8	Valid	N.E.	Rotate 8 bits <i>r/m8</i> left <i>imm8</i> times.
D1 /0	ROL <i>r/m16</i> , 1	Valid	Valid	Rotate 16 bits <i>r/m16</i> left once.
D3 /0	ROL <i>r/m16</i> , CL	Valid	Valid	Rotate 16 bits r/m16 left CL times.
C1 /0 ib	ROL r/m16, imm8	Valid	Valid	Rotate 16 bits <i>r/m16</i> left <i>imm8</i> times.
D1 /0	ROL <i>r/m32</i> , 1	Valid	Valid	Rotate 32 bits <i>r/m32</i> left once.

Opcode**	Instruction	64-Bit Mode	Compat/ Leg Mode	Description
REX.W + D1 /0	ROL <i>r/m64</i> , 1	Valid	N.E.	Rotate 64 bits <i>r/m64</i> left once. Uses a 6 bit count.
D3 /0	ROL r/m32, CL	Valid	Valid	Rotate 32 bits r/m32 left CL times.
REX.W + D3 /0	ROL <i>r/m64</i> , CL	Valid	N.E.	Rotate 64 bits <i>r/m64</i> left CL times. Uses a 6 bit count.
C1 /0 ib	ROL r/m32, imm8	Valid	Valid	Rotate 32 bits <i>r/m32</i> left <i>imm8</i> times.
C1 /0 ib	ROL r/m64, imm8	Valid	N.E.	Rotate 64 bits <i>r/m64</i> left <i>imm8</i> times. Uses a 6 bit count.
D0 /1	ROR <i>r/m8</i> , 1	Valid	Valid	Rotate 8 bits <i>r/m8</i> right once.
REX + D0 /1	ROR <i>r/m8*</i> , 1	Valid	N.E.	Rotate 8 bits <i>r/m8</i> right once.
D2 /1	ROR <i>r/m8</i> , CL	Valid	Valid	Rotate 8 bits <i>r/m8</i> right CL times.
REX + D2 /1	ROR r/m8*, CL	Valid	N.E.	Rotate 8 bits <i>r/m8</i> right CL times.
CO /1 ib	ROR r/m8, imm8	Valid	Valid	Rotate 8 bits <i>r/m16</i> right <i>imm8</i> times.
REX + C0 /1 ib	ROR r/m8*, imm8	Valid	N.E.	Rotate 8 bits <i>r/m16</i> right <i>imm8</i> times.
D1 /1	ROR <i>r/m16</i> , 1	Valid	Valid	Rotate 16 bits <i>r/m16</i> right once.
D3 /1	ROR <i>r/m16</i> , CL	Valid	Valid	Rotate 16 bits <i>r/m16</i> right CL times.
C1 /1 ib	ROR r/m16, imm8	Valid	Valid	Rotate 16 bits <i>r/m16</i> right <i>imm8</i> times.
D1 /1	ROR <i>r/m32</i> , 1	Valid	Valid	Rotate 32 bits <i>r/m32</i> right once.
REX.W + D1 /1	ROR <i>r/m64</i> , 1	Valid	N.E.	Rotate 64 bits <i>r/m64</i> right once. Uses a 6 bit count.
D3 /1	ROR <i>r/m32</i> , CL	Valid	Valid	Rotate 32 bits <i>r/m32</i> right CL times.
REX.W + D3 /1	ROR r/m64, CL	Valid	N.E.	Rotate 64 bits <i>r/m64</i> right CL times. Uses a 6 bit count.
C1 /1 ib	ROR r/m32, imm8	Valid	Valid	Rotate 32 bits <i>r/m32</i> right <i>imm8</i> times.
REX.W + C1 /1 ib	ROR r/m64, imm8	Valid	N.E.	Rotate 64 bits <i>r/m64</i> right <i>imm8</i> times. Uses a 6 bit count.

### **NOTES:**

<sup>\*</sup> In 64-bit mode, r/m8 can not be encoded to access the following byte registers if a REX prefix is used: AH, BH, CH, DH.

<sup>\*\*</sup> See IA-32 Architecture Compatibility section below.

#### **Description**

Shifts (rotates) the bits of the first operand (destination operand) the number of bit positions specified in the second operand (count operand) and stores the result in the destination operand. The destination operand can be a register or a memory location; the count operand is an unsigned integer that can be an immediate or a value in the CL register. In legacy and compatibility mode, the processor restricts the count to a number between 0 and 31 by masking all the bits in the count operand except the 5 least-significant bits.

The rotate left (ROL) and rotate through carry left (RCL) instructions shift all the bits toward more-significant bit positions, except for the most-significant bit, which is rotated to the least-significant bit location. The rotate right (ROR) and rotate through carry right (RCR) instructions shift all the bits toward less significant bit positions, except for the least-significant bit, which is rotated to the most-significant bit location.

The RCL and RCR instructions include the CF flag in the rotation. The RCL instruction shifts the CF flag into the least-significant bit and shifts the most-significant bit into the CF flag. The RCR instruction shifts the CF flag into the most-significant bit and shifts the least-significant bit into the CF flag. For the ROL and ROR instructions, the original value of the CF flag is not a part of the result, but the CF flag receives a copy of the bit that was shifted from one end to the other.

The OF flag is defined only for the 1-bit rotates; it is undefined in all other cases (except that a zero-bit rotate does nothing, that is affects no flags). For left rotates, the OF flag is set to the exclusive OR of the CF bit (after the rotate) and the most-significant bit of the result. For right rotates, the OF flag is set to the exclusive OR of the two most-significant bits of the result.

In 64-bit mode, using a REX prefix in the form of REX.R permits access to additional registers (R8-R15). Use of REX.W promotes the first operand to 64 bits and causes the count operand to become a 6-bit counter.

# **IA-32 Architecture Compatibility**

The 8086 does not mask the rotation count. However, all other IA-32 processors (starting with the Intel 286 processor) do mask the rotation count to 5 bits, resulting in a maximum count of 31. This masking is done in all operating modes (including the virtual-8086 mode) to reduce the maximum execution time of the instructions.

# **Operation**

```
(* RCL and RCR instructions *)

SIZE ← OperandSize;

CASE (determine count) OF

SIZE ← 8: tempCOUNT ← (COUNT AND 1FH) MOD 9;

SIZE ← 16: tempCOUNT ← (COUNT AND 1FH) MOD 17;

SIZE ← 32: tempCOUNT ← COUNT AND 1FH;
```

```
SIZE \leftarrow 64: tempCOUNT \leftarrow COUNT AND 3FH;
ESAC;
(* RCL instruction operation *)
WHILE (tempCOUNT \neq 0)
    DO
         tempCF \leftarrow MSB(DEST);
         DEST \leftarrow (DEST * 2) + CF;
         CF \leftarrow tempCF;
         tempCOUNT \leftarrow tempCOUNT - 1;
    OD;
ELIHW:
IF COUNT = 1
    THEN OF \leftarrow MSB(DEST) XOR CF;
    ELSE OF is undefined;
FI;
(* RCR instruction operation *)
IF COUNT = 1
    THEN OF \leftarrow MSB(DEST) XOR CF;
    ELSE OF is undefined:
FI;
WHILE (tempCOUNT \neq 0)
    DO
         tempCF \leftarrow LSB(SRC);
         DEST \leftarrow (DEST / 2) + (CF * 2<sup>SIZE</sup>);
         CF \leftarrow tempCF;
         tempCOUNT \leftarrow tempCOUNT - 1;
    OD;
(* ROL and ROR instructions *)
SIZE \leftarrow OperandSize;
CASE (determine count) OF
                   tempCOUNT ← (COUNT AND 1FH) MOD 8; (* Mask count before MOD *)
    SIZE \leftarrow 8:
   SIZE \leftarrow 16: tempCOUNT \leftarrow (COUNT AND 1FH) MOD 16;
    SIZE \leftarrow 32: tempCOUNT \leftarrow (COUNT AND 1FH) MOD 32;
    SIZE \leftarrow 64: tempCOUNT \leftarrow (COUNT AND 1FH) MOD 64;
ESAC;
(* ROL instruction operation *)
IF (tempCOUNT > 0) (* Prevents updates to CF *)
    WHILE (tempCOUNT \neq 0)
         DO
```

```
tempCF \leftarrow MSB(DEST);
              DEST \leftarrow (DEST * 2) + tempCF;
              tempCOUNT \leftarrow tempCOUNT - 1;
         OD;
   ELIHW:
   CF \leftarrow LSB(DEST);
   IF COUNT = 1
         THEN OF \leftarrow MSB(DEST) XOR CF;
         ELSE OF is undefined:
   FI:
FI:
(* ROR instruction operation *)
IF tempCOUNT > 0) (* Prevent updates to CF *)
   WHILE (tempCOUNT \neq 0)
         DO
              tempCF \leftarrow LSB(SRC);
              DEST \leftarrow (DEST / 2) + (tempCF * 2<sup>SIZE</sup>);
              tempCOUNT \leftarrow tempCOUNT - 1:
         OD:
   ELIHW:
   CF \leftarrow MSB(DEST);
   IF COUNT = 1
         THEN OF \leftarrow MSB(DEST) XOR MSB – 1(DEST);
         ELSE OF is undefined;
   FI;
FI:
```

### **Flags Affected**

The CF flag contains the value of the bit shifted into it. The OF flag is affected only for single-bit rotates (see "Description" above); it is undefined for multi-bit rotates. The SF, ZF, AF, and PF flags are not affected.

### **Protected Mode Exceptions**

#GP(0) If the source operand is located in a non-writable segment.

If a memory operand effective address is outside the CS, DS,

ES, FS, or GS segment limit.

If the DS, ES, FS, or GS register contains a NULL segment

selector.

#SS(0) If a memory operand effective address is outside the SS

segment limit.

#PF(fault-code) If a page fault occurs.

#AC(0) If alignment checking is enabled and an unaligned memory

reference is made while the current privilege level is 3.

**#UD** If the LOCK prefix is used.

# Real-Address Mode Exceptions

#GP If a memory operand effective address is outside the CS, DS,

ES, FS, or GS segment limit.

#SS If a memory operand effective address is outside the SS

segment limit.

**#UD** If the LOCK prefix is used.

### Virtual-8086 Mode Exceptions

#GP(0) If a memory operand effective address is outside the CS, DS,

ES, FS, or GS segment limit.

#SS(0) If a memory operand effective address is outside the SS

segment limit.

#PF(fault-code) If a page fault occurs.

#AC(0) If alignment checking is enabled and an unaligned memory

reference is made.

**#UD** If the LOCK prefix is used.

# **Compatibility Mode Exceptions**

Same exceptions as in protected mode.

### **64-Bit Mode Exceptions**

#SS(0) If a memory address referencing the SS segment is in a non-

canonical form.

#GP(0) If the source operand is located in a nonwritable segment.

If the memory address is in a non-canonical form.

#PF(fault-code) If a page fault occurs.

#AC(0) If alignment checking is enabled and an unaligned memory

reference is made while the current privilege level is 3.

#UD If the LOCK prefix is used.

# RCPPS—Compute Reciprocals of Packed Single-Precision Floating-Point Values

Opcode	Instruction	64-Bit Mode	Compat/ Leg Mode	Description
0F 53 /r	RCPPS xmm1, xmm2/m128	Valid	Valid	Computes the approximate reciprocals of the packed single-precision floating-point values in <i>xmm2/m128</i> and stores the results in <i>xmm1</i> .

### **Description**

Performs a SIMD computation of the approximate reciprocals of the four packed single-precision floating-point values in the source operand (second operand) stores the packed single-precision floating-point results in the destination operand. The source operand can be an XMM register or a 128-bit memory location. The destination operand is an XMM register. See Figure 10-5 in the *Intel*® *64 and IA-32 Architectures Software Developer's Manual, Volume 1*, for an illustration of a SIMD single-precision floating-point operation.

The relative error for this approximation is:

|Relative Error| 
$$\leq 1.5 * 2^{-12}$$

The RCPPS instruction is not affected by the rounding control bits in the MXCSR register. When a source value is a 0.0, an  $\infty$  of the sign of the source value is returned. A denormal source value is treated as a 0.0 (of the same sign). Tiny results are always flushed to 0.0, with the sign of the operand. (Input values greater than or equal to |1.111111111111111101000000000008\*2<sup>125</sup>| are guaranteed to not produce tiny results; input values less than or equal to |1.0000000000110000000001B\*2<sup>126</sup>| are guaranteed to produce tiny results, which are in turn flushed to 0.0; and input values in between this range may or may not produce tiny results, depending on the implementation.) When a source value is an SNaN or QNaN, the SNaN is converted to a QNaN or the source QNaN is returned.

In 64-bit mode, using a REX prefix in the form of REX.R permits this instruction to access additional registers (XMM8-XMM15).

# **Operation**

```
DEST[31:0] \leftarrow APPROXIMATE(1.0/(SRC[31:0]));
DEST[63:32] \leftarrow APPROXIMATE(1.0/(SRC[63:32]));
DEST[95:64] \leftarrow APPROXIMATE(1.0/(SRC[95:64]));
DEST[127:96] \leftarrow APPROXIMATE(1.0/(SRC[127:96]));
```

# Intel C/C++ Compiler Intrinsic Equivalent

```
RCCPS __m128 _mm_rcp_ps(__m128 a)
```

### **SIMD Floating-Point Exceptions**

None.

### **Protected Mode Exceptions**

#GP(0) For an illegal memory operand effective address in the CS, DS,

ES, FS or GS segments.

If a memory operand is not aligned on a 16-byte boundary,

regardless of segment.

#SS(0) For an illegal address in the SS segment.

#PF(fault-code) For a page fault. #NM If CR0.TS[bit 3] = 1. #UD If CR0.EM[bit 2] = 1.

If CR4.OSFXSR[bit 9] = 0.

If CPUID.01H:EDX.SSE[bit 25] = 0.

If the LOCK prefix is used.

### **Real-Address Mode Exceptions**

#GP If a memory operand is not aligned on a 16-byte boundary,

regardless of segment.

If any part of the operand lies outside the effective address

space from 0 to FFFFH.

#NM If CR0.TS[bit 3] = 1. #UD If CR0.EM[bit 2] = 1.

If CR4.OSFXSR[bit 9] = 0.

If CPUID.01H:EDX.SSE[bit 25] = 0.

If the LOCK prefix is used.

# Virtual-8086 Mode Exceptions

Same exceptions as in real address mode.

#PF(fault-code) For a page fault.

# **Compatibility Mode Exceptions**

Same exceptions as in protected mode.

# **64-Bit Mode Exceptions**

#SS(0) If a memory address referencing the SS segment is in a non-

canonical form.

#GP(0) If the memory address is in a non-canonical form.

#### INSTRUCTION SET REFERENCE, N-Z

If memory operand is not aligned on a 16-byte boundary,

regardless of segment.

#PF(fault-code) For a page fault.

#NM If CR0.TS[bit 3] = 1. #UD If CR0.EM[bit 2] = 1.

If CR4.OSFXSR[bit 9] = 0.

If CPUID.01H:EDX.SSE[bit 25] = 0.

If the LOCK prefix is used.

# RCPSS—Compute Reciprocal of Scalar Single-Precision Floating-Point Values

Opcode	Instruction	64-Bit Mode	Compat/ Leg Mode	Description
F3 0F 53 /r	RCPSS xmm1, xmm2/m32	Valid	Valid	Computes the approximate reciprocal of the scalar single-precision floating-point value in <i>xmm2/m32</i> and stores the result in <i>xmm1</i> .

### **Description**

Computes of an approximate reciprocal of the low single-precision floating-point value in the source operand (second operand) and stores the single-precision floating-point result in the destination operand. The source operand can be an XMM register or a 32-bit memory location. The destination operand is an XMM register. The three high-order doublewords of the destination operand remain unchanged. See Figure 10-6 in the Intel® 64 and IA-32 Architectures Software Developer's Manual, Volume 1, for an illustration of a scalar single-precision floating-point operation.

The relative error for this approximation is:

|Relative Error| 
$$\leq 1.5 * 2^{-12}$$

The RCPSS instruction is not affected by the rounding control bits in the MXCSR register. When a source value is a 0.0, an  $\infty$  of the sign of the source value is returned. A denormal source value is treated as a 0.0 (of the same sign). Tiny results are always flushed to 0.0, with the sign of the operand. (Input values greater than or equal to |1.111111111111101000000000008\*2<sup>125</sup>| are guaranteed to not produce tiny results; input values less than or equal to |1.0000000000110000000001B\*2<sup>126</sup>| are guaranteed to produce tiny results, which are in turn flushed to 0.0; and input values in between this range may or may not produce tiny results, depending on the implementation.) When a source value is an SNaN or QNaN, the SNaN is converted to a QNaN or the source QNaN is returned.

In 64-bit mode, using a REX prefix in the form of REX.R permits this instruction to access additional registers (XMM8-XMM15).

# Operation

DEST[31:0]  $\leftarrow$  APPROX (1.0/(SRC[31:0])); (\* DEST[127:32] unchanged \*)

# Intel C/C++ Compiler Intrinsic Equivalent

RCPSS \_\_m128 \_mm\_rcp\_ss(\_\_m128 a)

### **SIMD Floating-Point Exceptions**

None.

### **Protected Mode Exceptions**

#GP(0) For an illegal memory operand effective address in the CS, DS,

ES, FS or GS segments.

#SS(0) For an illegal address in the SS segment.

#PF(fault-code) For a page fault. #NM If CR0.TS[bit 3] = 1. #UD If CR0.EM[bit 2] = 1.

If CR4.OSFXSR[bit 9] = 0.

If CPUID.01H:EDX.SSE[bit 25] = 0.

If the LOCK prefix is used.

#AC(0) If alignment checking is enabled and an unaligned memory

reference is made while the current privilege level is 3.

### **Real-Address Mode Exceptions**

GP If any part of the operand lies outside the effective address

space from 0 to FFFFH.

#NM If CR0.TS[bit 3] = 1. #UD If CR0.EM[bit 2] = 1.

If CR4.OSFXSR[bit 9] = 0.

If CPUID.01H:EDX.SSE[bit 25] = 0.

If the LOCK prefix is used.

# Virtual-8086 Mode Exceptions

Same exceptions as in real address mode.

#PF(fault-code) For a page fault.

#AC(0) For unaligned memory reference.

# **Compatibility Mode Exceptions**

Same exceptions as in protected mode.

# **64-Bit Mode Exceptions**

#SS(0) If a memory address referencing the SS segment is in a non-

canonical form.

#GP(0) If the memory address is in a non-canonical form.

#PF(fault-code) For a page fault.
#NM If CR0.TS[bit 3] = 1.

#UD If CR0.EM[bit 2] = 1.

If CR4.OSFXSR[bit 9] = 0.

If CPUID.01H:EDX.SSE[bit 25] = 0.

If the LOCK prefix is used.

#AC(0) If alignment checking is enabled and an unaligned memory

reference is made while the current privilege level is 3.

# RDMSR—Read from Model Specific Register

Opcode*	Instruction	64-Bit Mode	Compat/ Leg Mode	Description
0F 32	RDMSR	Valid	Valid	Read MSR specified by ECX into EDX:EAX.

#### **NOTES:**

## **Description**

Reads the contents of a 64-bit model specific register (MSR) specified in the ECX register into registers EDX:EAX. (On processors that support the Intel 64 architecture, the high-order 32 bits of RCX are ignored.) The EDX register is loaded with the high-order 32 bits of the MSR and the EAX register is loaded with the low-order 32 bits. (On processors that support the Intel 64 architecture, the high-order 32 bits of each of RAX and RDX are cleared.) If fewer than 64 bits are implemented in the MSR being read, the values returned to EDX:EAX in unimplemented bit locations are undefined.

This instruction must be executed at privilege level 0 or in real-address mode; otherwise, a general protection exception #GP(0) will be generated. Specifying a reserved or unimplemented MSR address in ECX will also cause a general protection exception.

The MSRs control functions for testability, execution tracing, performance-monitoring, and machine check errors. Appendix B, "Model-Specific Registers (MSRs)," in the Intel® 64 and IA-32 Architectures Software Developer's Manual, Volume 3B, lists all the MSRs that can be read with this instruction and their addresses. Note that each processor family has its own set of MSRs.

The CPUID instruction should be used to determine whether MSRs are supported (CPUID.01H:EDX[5] = 1) before using this instruction.

# **IA-32 Architecture Compatibility**

The MSRs and the ability to read them with the RDMSR instruction were introduced into the IA-32 Architecture with the Pentium processor. Execution of this instruction by an IA-32 processor earlier than the Pentium processor results in an invalid opcode exception #UD.

See "Changes to Instruction Behavior in VMX Non-Root Operation" in Chapter 21 of the *Intel*® *64 and IA-32 Architectures Software Developer's Manual, Volume 3B*, for more information about the behavior of this instruction in VMX non-root operation.

### **Operation**

 $EDX:EAX \leftarrow MSR[ECX];$ 

<sup>\*</sup> See IA-32 Architecture Compatibility section below.

### **Flags Affected**

None.

#### **Protected Mode Exceptions**

#GP(0) If the current privilege level is not 0.

If the value in ECX specifies a reserved or unimplemented MSR

address.

**#UD** If the LOCK prefix is used.

## **Real-Address Mode Exceptions**

#GP If the value in ECX specifies a reserved or unimplemented MSR

address.

**#UD** If the LOCK prefix is used.

#### Virtual-8086 Mode Exceptions

#GP(0) The RDMSR instruction is not recognized in virtual-8086 mode.

#### **Compatibility Mode Exceptions**

Same exceptions as in protected mode.

#### **64-Bit Mode Exceptions**

#GP(0) If the current privilege level is not 0.

If the value in ECX or RCX specifies a reserved or unimple-

mented MSR address.

#UD If the LOCK prefix is used.

RDPMC—Read Performance-Monitoring Counters	RDPMC—Read	Performance-Moni	itorina Counters
--	------------	------------------	------------------

Opcode	Instruction	64-Bit Mode	Compat/ Leg Mode	Description
0F 33	RDPMC	Valid	Valid	Read performance-monitoring counter specified by ECX into EDX:EAX.

#### **Description**

The EAX register is loaded with the low-order 32 bits. The EDX register is loaded with the supported high-order bits of the counter. The number of high-order bits loaded into EDX is implementation specific on processors that do no support architectural performance monitoring. The width of fixed-function and general-purpose performance counters on processors supporting architectural performance monitoring are reported by CPUID 0AH leaf. See below for the treatment of the EDX register for "fast" reads.

The ECX register selects one of two type of performance counters, specifies the index relative to the base of each counter type, and selects "fast" read mode if supported. The two counter types are :

- General-purpose or special-purpose performance counters: The number of general-purpose counters is model specific if the processor does not support architectural performance monitoring, see Chapter 18 of Intel® 64 and IA-32 Architectures Software Developer's Manual, Volume 3B. Special-purpose counters are available only in selected processor members, see Section 18.19, 18.20 of Intel® 64 and IA-32 Architectures Software Developer's Manual, Volume 3B. This counter type is selected if ECX[30] is clear.
- Fixed-function performance counter. The number fixed-function performance counters is enumerated by CPUID 0AH leaf. See Chapter 18 of *Intel*® *64 and IA-32 Architectures Software Developer's Manual, Volume 3B*. This counter type is selected if ECX[30] is set.

ECX[29:0] specifies the index. The width of general-purpose performance counters are 40-bits for processors that do not support architectural performance monitoring counters. The width of special-purpose performance counters are implementation specific. The width of fixed-function performance counters and general-purpose performance counters on processor supporting architectural performance monitoring are reported by CPUID 0AH leaf.

Table 4-2 lists valid indices of the general-purpose and special-purpose performance counters according to the derived displayed\_family/displayed\_model values of CPUID encoding for each processor family.

Table 4-2. Valid General and Special Purpose Performance Counter Index Range for RDPMC

Processor Family	Displayed_Family_Dis played_Model/ Other Signatures	Valid PMC Index Range	General- purpose Counters
P6	06H_01H, 06H_03H, 06H_05H, 06H_06H, 06H_07H, 06H_08H, 06H_0AH, 06H_0BH	0, 1	0, 1
Pentium <sup>®</sup> 4, Intel <sup>®</sup> Xeon processors	0FH_00H, 0FH_01H, 0FH_02H	≥ 0 and ≤ 17	≥ 0 and ≤ 17
Pentium 4, Intel Xeon processors	(0FH_03H, 0FH_04H, 0FH_06H) and (L3 is absent)	≥ 0 and ≤ 17	≥ 0 and ≤ 17
Pentium M processors	06H_09H, 06H_0DH	0, 1	0, 1
64-bit Intel Xeon processors with L3	OFH_03H, OFH_04H) and (L3 is present)	≥ 0 and ≤ 25	≥ 0 and ≤ 17
Intel <sup>®</sup> Core <sup>™</sup> Solo and Intel <sup>®</sup> Core <sup>™</sup> Duo processors, Dual-core Intel <sup>®</sup> Xeon <sup>®</sup> processor LV	06H_0EH	0, 1	0, 1
Intel <sup>®</sup> Core <sup>™</sup> 2 Duo processor, Intel Xeon processor 3000, 5100, 5300, 7300 Series - general-purpose PMC	06H_0FH	0, 1	0, 1
Intel Xeon processors 7100 series with L3	(0FH_06H) and (L3 is present)	≥ 0 and ≤ 25	≥ 0 and ≤ 17
Intel <sup>®</sup> Core <sup>™</sup> 2 Duo processor family, Intel Xeon processor family - general-purpose PMC	06H_17H	0, 1	0, 1
Intel <sup>®</sup> Atom <sup>™</sup> processor family	06H_1CH	0, 1	0, 1
Intel <sup>®</sup> Core™i7 processor	06H_1AH	0-3	0, 1, 2, 3

The Pentium 4 and Intel Xeon processors also support "fast" (32-bit) and "slow" (40-bit) reads on the first 18 performance counters. Selected this option using ECX[31]. If bit 31 is set, RDPMC reads only the low 32 bits of the selected performance counter. If bit 31 is clear, all 40 bits are read. A 32-bit result is returned in EAX and EDX is set to 0. A 32-bit read executes faster on Pentium 4 processors and Intel Xeon processors than a full 40-bit read.

On 64-bit Intel Xeon processors with L3, performance counters with indices 18-25 are 32-bit counters. EDX is cleared after executing RDPMC for these counters. On Intel Xeon processor 7100 series with L3, performance counters with indices 18-25 are also 32-bit counters.

In Intel Core 2 processor family, Intel Xeon processor 3000, 5100, and 5300 series, the fixed-function performance counters are 40-bits wide; they can be accessed by RDMPC with ECX between from 4000\_0000H and 4000\_0002H.

When in protected or virtual 8086 mode, the performance-monitoring counters enabled (PCE) flag in register CR4 restricts the use of the RDPMC instruction as follows. When the PCE flag is set, the RDPMC instruction can be executed at any privilege level; when the flag is clear, the instruction can only be executed at privilege level 0. (When in real-address mode, the RDPMC instruction is always enabled.)

The performance-monitoring counters can also be read with the RDMSR instruction, when executing at privilege level 0.

The performance-monitoring counters are event counters that can be programmed to count events such as the number of instructions decoded, number of interrupts received, or number of cache loads. Appendix A, "Performance Monitoring Events," in the Intel® 64 and IA-32 Architectures Software Developer's Manual, Volume 3B, lists the events that can be counted for various processors in the Intel 64 and IA-32 architecture families.

The RDPMC instruction is not a serializing instruction; that is, it does not imply that all the events caused by the preceding instructions have been completed or that events caused by subsequent instructions have not begun. If an exact event count is desired, software must insert a serializing instruction (such as the CPUID instruction) before and/or after the RDPMC instruction.

In the Pentium 4 and Intel Xeon processors, performing back-to-back fast reads are not guaranteed to be monotonic. To guarantee monotonicity on back-to-back reads, a serializing instruction must be placed between the two RDPMC instructions.

The RDPMC instruction can execute in 16-bit addressing mode or virtual-8086 mode; however, the full contents of the ECX register are used to select the counter, and the event count is stored in the full EAX and EDX registers. The RDPMC instruction was introduced into the IA-32 Architecture in the Pentium Pro processor and the Pentium processor with MMX technology. The earlier Pentium processors have performance-monitoring counters, but they must be read with the RDMSR instruction.

#### **Operation**

(\* Intel Core 2 Duo processor family and Intel Xeon processor 3000, 5100, 5300 series\*)

Most significant counter bit (MSCB) = 39

```
IF ((CR4.PCE = 1) or (CPL = 0) or (CR0.PE = 0))

THEN IF (ECX[30] = 1 and ECX[29:0] in valid fixed-counter range)

EAX \leftarrow IA32\_FIXED\_CTR(ECX)[30:0];

EDX \leftarrow IA32\_FIXED\_CTR(ECX)[MSCB:32];

ELSE IF (ECX[30] = 0and ECX[29:0] in valid general-purpose counter range)

EAX \leftarrow PMC(ECX[30:0])[31:0];

EDX \leftarrow PMC(ECX[30:0])[MSCB:32];
```

```
ELSE (* ECX is not valid or CR4.PCE is 0 and CPL is 1, 2, or 3 and CR0.PE is 1 *)
         #GP(0);
FI:
(* P6 family processors and Pentium processor with MMX technology *)
IF (ECX = 0 \text{ or } 1) and ((CR4.PCE = 1) \text{ or } (CPL = 0) \text{ or } (CR0.PE = 0))
    THEN
         EAX \leftarrow PMC(ECX)[31:0];
         EDX \leftarrow PMC(ECX)[39:32];
    ELSE (* ECX is not 0 or 1 or CR4.PCE is 0 and CPL is 1, 2, or 3 and CR0.PE is 1 *)
         #GP(0);
FI;
(* Processors with CPUID family 15 *)
IF ((CR4.PCE = 1) \text{ or } (CPL = 0) \text{ or } (CR0.PE = 0))
    THEN IF (ECX[30:0] = 0:17)
         THEN IF ECX[31] = 0
              THEN
                    EAX \leftarrow PMC(ECX[30:0])[31:0]; (* 40-bit read *)
                   EDX \leftarrow PMC(ECX[30:0])[39:32];
         ELSE (* ECX[31] = 1*)
              THEN
                    EAX \leftarrow PMC(ECX[30:0])[31:0]; (* 32-bit read *)
                    EDX \leftarrow 0;
         FI:
    ELSE IF (*64-bit Intel Xeon processor with L3 *)
         THEN IF (ECX[30:0] = 18:25)
              EAX \leftarrow PMC(ECX[30:0])[31:0]; (* 32-bit read *)
              EDX \leftarrow 0;
         FI;
    ELSE IF (*Intel Xeon processor 7100 series with L3 *)
         THEN IF (ECX[30:0] = 18:25)
              EAX \leftarrow PMC(ECX[30:0])[31:0]; (* 32-bit read *)
              EDX \leftarrow 0:
         FI;
    ELSE (* Invalid PMC index in ECX[30:0], see Table 4-5. *)
         GP(0);
    FI;
ELSE (* CR4.PCE = 0 and (CPL = 1, 2, or 3) and CR0.PE = 1 *)
    #GP(0);
FI;
```

#### **Flags Affected**

None.

#### **Protected Mode Exceptions**

#GP(0) If the current privilege level is not 0 and the PCE flag in the CR4

register is clear.

If an invalid performance counter index is specified (see

Table 4-2).

(Pentium 4 and Intel Xeon processors) If the value in ECX[30:0]

is not within the valid range.

#UD If the LOCK prefix is used.

#### Real-Address Mode Exceptions

#GP If an invalid performance counter index is specified (see

Table 4-2).

(Pentium 4 and Intel Xeon processors) If the value in ECX[30:0]

is not within the valid range.

#UD If the LOCK prefix is used.

### Virtual-8086 Mode Exceptions

#GP(0) If the PCE flag in the CR4 register is clear.

If an invalid performance counter index is specified (see

Table 4-2).

(Pentium 4 and Intel Xeon processors) If the value in ECX[30:0]

is not within the valid range.

#UD If the LOCK prefix is used.

#### **Compatibility Mode Exceptions**

Same exceptions as in protected mode.

#### **64-Bit Mode Exceptions**

#GP(0) If the current privilege level is not 0 and the PCE flag in the CR4

register is clear.

If an invalid performance counter index is specified in ECX[30:0]

(see Table 4-2).

#UD If the LOCK prefix is used.

RDTSC—Read Time-Stamp Counter
-------------------------------

Opcode	Instruction	64-Bit Mode	Compat/ Leg Mode	Description
0F 31	RDTSC	Valid	Valid	Read time-stamp counter into EDX:EAX.

#### **Description**

Loads the current value of the processor's time-stamp counter (a 64-bit MSR) into the EDX:EAX registers. The EDX register is loaded with the high-order 32 bits of the MSR and the EAX register is loaded with the low-order 32 bits. (On processors that support the Intel 64 architecture, the high-order 32 bits of each of RAX and RDX are cleared.)

The processor monotonically increments the time-stamp counter MSR every clock cycle and resets it to 0 whenever the processor is reset. See "Time Stamp Counter" in Chapter 18 of the Intel® 64 and IA-32 Architectures Software Developer's Manual, Volume 3B, for specific details of the time stamp counter behavior.

When in protected or virtual 8086 mode, the time stamp disable (TSD) flag in register CR4 restricts the use of the RDTSC instruction as follows. When the TSD flag is clear, the RDTSC instruction can be executed at any privilege level; when the flag is set, the instruction can only be executed at privilege level 0. (When in real-address mode, the RDTSC instruction is always enabled.)

The time-stamp counter can also be read with the RDMSR instruction, when executing at privilege level 0.

The RDTSC instruction is not a serializing instruction. Thus, it does not necessarily wait until all previous instructions have been executed before reading the counter. Similarly, subsequent instructions may begin execution before the read operation is performed.

This instruction was introduced by the Pentium processor.

See "Changes to Instruction Behavior in VMX Non-Root Operation" in Chapter 21 of the *Intel*® 64 and *IA-32 Architectures Software Developer's Manual, Volume 3B*, for more information about the behavior of this instruction in VMX non-root operation.

#### **Operation**

```
IF (CR4.TSD = 0) or (CPL = 0) or (CR0.PE = 0)

THEN EDX:EAX \leftarrow TimeStampCounter;

ELSE (* CR4.TSD = 1 and (CPL = 1, 2, or 3) and CR0.PE = 1 *)

#GP(0);

FI;
```

### **Flags Affected**

None.

### **Protected Mode Exceptions**

#GP(0) If the TSD flag in register CR4 is set and the CPL is greater than

0.

#UD If the LOCK prefix is used.

#### **Real-Address Mode Exceptions**

#UD If the LOCK prefix is used.

#### Virtual-8086 Mode Exceptions

#GP(0) If the TSD flag in register CR4 is set.

#UD If the LOCK prefix is used.

### **Compatibility Mode Exceptions**

Same exceptions as in protected mode.

### **64-Bit Mode Exceptions**

Same exceptions as in protected mode.

RDTSCP-I	Read T	ime-Stamp	Counter	and	Processor	ID
IND I JCI	ICUU I	mile Stainp	Counter	UIIU	1 1000301	

Opcode	Instruction	64-Bit Mode	Compat/ Leg Mode	Description
0F 01 F9	RDTSCP	Valid	Valid	Read 64-bit time-stamp counter and 32-bit IA32_TSC_AUX value into EDX:EAX and ECX.

#### **Description**

Loads the current value of the processor's time-stamp counter (a 64-bit MSR) into the EDX:EAX registers and also loads the IA32\_TSC\_AUX MSR (address C000\_0103H) into the ECX register. The EDX register is loaded with the high-order 32 bits of the IA32\_TSC MSR; the EAX register is loaded with the low-order 32 bits of the IA32\_TSC MSR; and the ECX register is loaded with the low-order 32-bits of IA32\_TSC\_AUX MSR. On processors that support the Intel 64 architecture, the high-order 32 bits of each of RAX, RDX, and RCX are cleared.

The processor monotonically increments the time-stamp counter MSR every clock cycle and resets it to 0 whenever the processor is reset. See "Time Stamp Counter" in Chapter 18 of the *Intel*® *64 and IA-32 Architectures Software Developer's Manual, Volume 3B*, for specific details of the time stamp counter behavior.

When in protected or virtual 8086 mode, the time stamp disable (TSD) flag in register CR4 restricts the use of the RDTSCP instruction as follows. When the TSD flag is clear, the RDTSCP instruction can be executed at any privilege level; when the flag is set, the instruction can only be executed at privilege level 0. (When in real-address mode, the RDTSCP instruction is always enabled.)

The RDTSCP instruction waits until all previous instructions have been executed before reading the counter. However, subsequent instructions may begin execution before the read operation is performed.

The presence of the RDTSCP instruction is indicated by CPUID leaf 80000001H, EDX bit 27. If the bit is set to 1 then RDTSCP is present on the processor.

See "Changes to Instruction Behavior in VMX Non-Root Operation" in Chapter 21 of the *Intel*® *64 and IA-32 Architectures Software Developer's Manual, Volume 3B*, for more information about the behavior of this instruction in VMX non-root operation.

### **Operation**

```
IF (CR4.TSD = 0) or (CPL = 0) or (CR0.PE = 0) 
THEN 
EDX:EAX \leftarrow TimeStampCounter; 
ECX \leftarrow IA32_TSC_AUX[31:0]; 
ELSE (* CR4.TSD = 1 and (CPL = 1, 2, or 3) and CR0.PE = 1 *) 
#GP(0); 
FI;
```

### **Flags Affected**

None.

#### **Protected Mode Exceptions**

#GP(0) If the TSD flag in register CR4 is set and the CPL is greater than

0.

#UD If the LOCK prefix is used.

If CPUID.80000001H:EDX.RDTSCP[bit 27] = 0.

#### **Real-Address Mode Exceptions**

**#UD** If the LOCK prefix is used.

If CPUID.80000001H:EDX.RDTSCP[bit 27] = 0.

#### Virtual-8086 Mode Exceptions

#GP(0) If the TSD flag in register CR4 is set.

#UD If the LOCK prefix is used.

If CPUID.80000001H:EDX.RDTSCP[bit 27] = 0.

### **Compatibility Mode Exceptions**

Same exceptions as in protected mode.

#### **64-Bit Mode Exceptions**

Same exceptions as in protected mode.

# REP/REPE/REPZ/REPNE/REPNZ—Repeat String Operation Prefix

Opcode	Instruction	64-Bit Mode	Compat/ Leg Mode	Description
F3 6C	REP INS <i>m8</i> , DX	Valid	Valid	Input (E)CX bytes from port DX into ES:[(E)DI].
F3 6C	REP INS m8, DX	Valid	N.E.	Input RCX bytes from port DX into [RDI].
F3 6D	REP INS m16, DX	Valid	Valid	Input (E)CX words from port DX into ES:[(E)DI.]
F3 6D	REP INS <i>m32</i> , DX	Valid	Valid	Input (E)CX doublewords from port DX into ES:[(E)DI].
F3 6D	REP INS r/m32, DX	Valid	N.E.	Input RCX default size from port DX into [RDI].
F3 A4	REP MOVS m8, m8	Valid	Valid	Move (E)CX bytes from DS:[(E)SI] to ES:[(E)DI].
F3 REX.W A4	REP MOVS m8, m8	Valid	N.E.	Move RCX bytes from [RSI] to [RDI].
F3 A5	REP MOVS m16, m16	Valid	Valid	Move (E)CX words from DS:[(E)SI] to ES:[(E)DI].
F3 A5	REP MOVS m32, m32	Valid	Valid	Move (E)CX doublewords from DS:[(E)SI] to ES:[(E)DI].
F3 REX.W A5	REP MOVS m64, m64	Valid	N.E.	Move RCX quadwords from [RSI] to [RDI].
F3 6E	REP OUTS DX, r/m8	Valid	Valid	Output (E)CX bytes from DS:[(E)SI] to port DX.
F3 REX.W 6E	REP OUTS DX, r/m8*	Valid	N.E.	Output RCX bytes from [RSI] to port DX.
F3 6F	REP OUTS DX, r/m16	Valid	Valid	Output (E)CX words from DS:[(E)SI] to port DX.
F3 6F	REP OUTS DX, r/m32	Valid	Valid	Output (E)CX doublewords from DS:[(E)SI] to port DX.
F3 REX.W 6F	REP OUTS DX, r/m32	Valid	N.E.	Output RCX default size from [RSI] to port DX.
F3 AC	REP LODS AL	Valid	Valid	Load (E)CX bytes from DS:[(E)SI] to AL.
F3 REX.W AC	REP LODS AL	Valid	N.E.	Load RCX bytes from [RSI] to AL.
F3 AD	REP LODS AX	Valid	Valid	Load (E)CX words from DS:[(E)SI] to AX.

Opcode	Instruction	64-Bit Mode	Compat/ Leg Mode	Description
F3 AD	REP LODS EAX	Valid	Valid	Load (E)CX doublewords from DS:[(E)SI] to EAX.
F3 REX.W AD	REP LODS RAX	Valid	N.E.	Load RCX quadwords from [RSI] to RAX.
F3 AA	REP STOS m8	Valid	Valid	Fill (E)CX bytes at ES:[(E)DI] with AL.
F3 REX.W AA	REP STOS m8	Valid	N.E.	Fill RCX bytes at [RDI] with AL.
F3 AB	REP STOS m16	Valid	Valid	Fill (E)CX words at ES:[(E)DI] with AX.
F3 AB	REP STOS m32	Valid	Valid	Fill (E)CX doublewords at ES:[(E)DI] with EAX.
F3 REX.W AB	REP STOS m64	Valid	N.E.	Fill RCX quadwords at [RDI] with RAX.
F3 A6	REPE CMPS m8, m8	Valid	Valid	Find nonmatching bytes in ES:[(E)DI] and DS:[(E)SI].
F3 REX.W A6	REPE CMPS m8, m8	Valid	N.E.	Find non-matching bytes in [RDI] and [RSI].
F3 A7	REPE CMPS m16, m16	Valid	Valid	Find nonmatching words in ES:[(E)DI] and DS:[(E)SI].
F3 A7	REPE CMPS m32, m32	Valid	Valid	Find nonmatching doublewords in ES:[(E)DI] and DS:[(E)SI].
F3 REX.W A7	REPE CMPS m64, m64	Valid	N.E.	Find non-matching quadwords in [RDI] and [RSI].
F3 AE	REPE SCAS m8	Valid	Valid	Find non-AL byte starting at ES:[(E)DI].
F3 REX.W AE	REPE SCAS m8	Valid	N.E.	Find non-AL byte starting at [RDI].
F3 AF	REPE SCAS m16	Valid	Valid	Find non-AX word starting at ES:[(E)DI].
F3 AF	REPE SCAS m32	Valid	Valid	Find non-EAX doubleword starting at ES:[(E)DI].
F3 REX.W AF	REPE SCAS m64	Valid	N.E.	Find non-RAX quadword starting at [RDI].
F2 A6	REPNE CMPS m8, m8	Valid	Valid	Find matching bytes in ES:[(E)DI] and DS:[(E)SI].
F2 REX.W A6	REPNE CMPS m8, m8	Valid	N.E.	Find matching bytes in [RDI] and [RSI].

Opcode	Instruction	64-Bit Mode	Compat/ Leg Mode	Description
F2 A7	REPNE CMPS m16, m16	Valid	Valid	Find matching words in ES:[(E)DI] and DS:[(E)SI].
F2 A7	REPNE CMPS <i>m32, m32</i>	Valid	Valid	Find matching doublewords in ES:[(E)DI] and DS:[(E)SI].
F2 REX.W A7	REPNE CMPS m64, m64	Valid	N.E.	Find matching doublewords in [RDI] and [RSI].
F2 AE	REPNE SCAS m8	Valid	Valid	Find AL, starting at ES:[(E)DI].
F2 REX.W AE	REPNE SCAS m8	Valid	N.E.	Find AL, starting at [RDI].
F2 AF	REPNE SCAS m16	Valid	Valid	Find AX, starting at ES:[(E)DI].
F2 AF	REPNE SCAS m32	Valid	Valid	Find EAX, starting at ES:[(E)DI].
F2 REX.W AF	REPNE SCAS m64	Valid	N.E.	Find RAX, starting at [RDI].

#### **NOTES:**

#### **Description**

Repeats a string instruction the number of times specified in the count register or until the indicated condition of the ZF flag is no longer met. The REP (repeat), REPE (repeat while equal), REPNE (repeat while not equal), REPZ (repeat while zero), and REPNZ (repeat while not zero) mnemonics are prefixes that can be added to one of the string instructions. The REP prefix can be added to the INS, OUTS, MOVS, LODS, and STOS instructions, and the REPE, REPNE, REPZ, and REPNZ prefixes can be added to the CMPS and SCAS instructions. (The REPZ and REPNZ prefixes are synonymous forms of the REPE and REPNE prefixes, respectively.) The behavior of the REP prefix is undefined when used with non-string instructions.

The REP prefixes apply only to one string instruction at a time. To repeat a block of instructions, use the LOOP instruction or another looping construct. All of these repeat prefixes cause the associated instruction to be repeated until the count in register is decremented to 0. See Table 4-3.

<sup>\*</sup> In 64-bit mode, r/m8 can not be encoded to access the following byte registers if a REX prefix is used: AH, BH, CH, DH.

<b>Table</b>	4-3.	Repeat	<b>Prefixes</b>

Repeat Prefix	Termination Condition 1*	Termination Condition 2
REP	RCX or (E)CX = 0	None
REPE/REPZ	RCX or (E)CX = 0	ZF = 0
REPNE/REPNZ	RCX or (E)CX = 0	ZF = 1

#### **NOTES:**

The REPE, REPNE, REPZ, and REPNZ prefixes also check the state of the ZF flag after each iteration and terminate the repeat loop if the ZF flag is not in the specified state. When both termination conditions are tested, the cause of a repeat termination can be determined either by testing the count register with a JECXZ instruction or by testing the ZF flag (with a JZ, JNZ, or JNE instruction).

When the REPE/REPZ and REPNE/REPNZ prefixes are used, the ZF flag does not require initialization because both the CMPS and SCAS instructions affect the ZF flag according to the results of the comparisons they make.

A repeating string operation can be suspended by an exception or interrupt. When this happens, the state of the registers is preserved to allow the string operation to be resumed upon a return from the exception or interrupt handler. The source and destination registers point to the next string elements to be operated on, the EIP register points to the string instruction, and the ECX register has the value it held following the last successful iteration of the instruction. This mechanism allows long string operations to proceed without affecting the interrupt response time of the system.

When a fault occurs during the execution of a CMPS or SCAS instruction that is prefixed with REPE or REPNE, the EFLAGS value is restored to the state prior to the execution of the instruction. Since the SCAS and CMPS instructions do not use EFLAGS as an input, the processor can resume the instruction after the page fault handler.

Use the REP INS and REP OUTS instructions with caution. Not all I/O ports can handle the rate at which these instructions execute. Note that a REP STOS instruction is the fastest way to initialize a large block of memory.

In 64-bit mode, default operation size is 32 bits. The default count register is RCX for REP INS and REP OUTS; it is ECX for other instructions. REX.W does not promote operation to 64-bit for REP INS and REP OUTS. However, using a REX prefix in the form of REX.W does promote operation to 64-bit operands for other REP/REPNE/REPNZ instructions. See the summary chart at the beginning of this section for encoding data and limits.

<sup>\*</sup> Count register is CX, ECX or RCX by default, depending on attributes of the operating modes. In 64-bit mode, if default operation size is 32 bits, the count register becomes RCX when a REX.W prefix is used.

### **Operation**

```
IF AddressSize = 16
   THEN
        Use CX for CountReg;
   ELSE IF AddressSize = 64 and REX.W used
        THEN Use RCX for CountReg; FI;
   ELSE
        Use ECX for CountReg;
FI;
WHILE CountReg ≠ 0
   DO
        Service pending interrupts (if any);
        Execute associated string instruction;
        CountReg \leftarrow (CountReg - 1);
        IF CountReq = 0
            THEN exit WHILE loop; FI;
        IF (Repeat prefix is REPZ or REPE) and (ZF = 0)
        or (Repeat prefix is REPNZ or REPNE) and (ZF = 1)
            THEN exit WHILE loop; FI;
   OD:
```

#### **Flags Affected**

None; however, the CMPS and SCAS instructions do set the status flags in the EFLAGS register.

### **Exceptions (All Operating Modes)**

Exceptions may be generated by an instruction associated with the prefix.

### **64-Bit Mode Exceptions**

#GP(0) If the memory address is in a non-canonical form.

		_			•				
			<b>O</b> ti	ICO	fro	m L	TOC		
п	1 - 1		чын				IUI.	eu	_

Opcode	Instruction	64-Bit Mode	Compat/ Leg Mode	Description
C3	RET	Valid	Valid	Near return to calling procedure.
СВ	RET	Valid	Valid	Far return to calling procedure.
C2 iw	RET imm16	Valid	Valid	Near return to calling procedure and pop imm16 bytes from stack.
CA iw	RET imm16	Valid	Valid	Far return to calling procedure and pop imm16 bytes from stack.

### **Description**

Transfers program control to a return address located on the top of the stack. The address is usually placed on the stack by a CALL instruction, and the return is made to the instruction that follows the CALL instruction.

The optional source operand specifies the number of stack bytes to be released after the return address is popped; the default is none. This operand can be used to release parameters from the stack that were passed to the called procedure and are no longer needed. It must be used when the CALL instruction used to switch to a new procedure uses a call gate with a non-zero word count to access the new procedure. Here, the source operand for the RET instruction must specify the same number of bytes as is specified in the word count field of the call gate.

The RET instruction can be used to execute three different types of returns:

- Near return A return to a calling procedure within the current code segment (the segment currently pointed to by the CS register), sometimes referred to as an intrasegment return.
- **Far return** A return to a calling procedure located in a different segment than the current code segment, sometimes referred to as an intersegment return.
- **Inter-privilege-level far return** A far return to a different privilege level than that of the currently executing program or procedure.

The inter-privilege-level return type can only be executed in protected mode. See the section titled "Calling Procedures Using Call and RET" in Chapter 6 of the *Intel*® *64 and IA-32 Architectures Software Developer's Manual, Volume 1*, for detailed information on near, far, and inter-privilege-level returns.

When executing a near return, the processor pops the return instruction pointer (offset) from the top of the stack into the EIP register and begins program execution at the new instruction pointer. The CS register is unchanged.

When executing a far return, the processor pops the return instruction pointer from the top of the stack into the EIP register, then pops the segment selector from the top of the stack into the CS register. The processor then begins program execution in the new code segment at the new instruction pointer.

The mechanics of an inter-privilege-level far return are similar to an intersegment return, except that the processor examines the privilege levels and access rights of the code and stack segments being returned to determine if the control transfer is allowed to be made. The DS, ES, FS, and GS segment registers are cleared by the RET instruction during an inter-privilege-level return if they refer to segments that are not allowed to be accessed at the new privilege level. Since a stack switch also occurs on an inter-privilege level return, the ESP and SS registers are loaded from the stack.

If parameters are passed to the called procedure during an inter-privilege level call, the optional source operand must be used with the RET instruction to release the parameters on the return. Here, the parameters are released both from the called procedure's stack and the calling procedure's stack (that is, the stack being returned to).

In 64-bit mode, the default operation size of this instruction is the stack size, i.e. 64 bits.

#### **Operation**

```
(* Near return *)
IF instruction = Near return
   THEN:
        IF OperandSize = 32
              THEN
                   IF top 4 bytes of stack not within stack limits
                        THEN #SS(0); FI;
                   EIP \leftarrow Pop();
             ELSE
                   IF OperandSize = 64
                        THEN
                             IF top 8 bytes of stack not within stack limits
                                  THEN #SS(0); FI;
                             RIP \leftarrow Pop();
                        ELSE (* OperandSize = 16 *)
                             IF top 2 bytes of stack not within stack limits
                                  THEN #SS(0); FI;
                             tempEIP \leftarrow Pop();
                             tempEIP ← tempEIP AND 0000FFFFH;
                             IF tempEIP not within code segment limits
                                  THEN #GP(0); FI;
                             EIP \leftarrow tempEIP;
                  FI;
        FI;
```

```
IF instruction has immediate operand
         THEN IF StackAddressSize = 32
              THEN
                   ESP \leftarrow ESP + SRC; (* Release parameters from stack *)
              ELSE
                   IF StackAddressSize = 64
                        THEN
                             RSP \leftarrow RSP + SRC; (* Release parameters from stack *)
                        ELSE (* StackAddressSize = 16 *)
                             SP \leftarrow SP + SRC; (* Release parameters from stack *)
                   FI;
        FI:
   FI;
FI;
(* Real-address mode or virtual-8086 mode *)
IF ((PE = 0) \text{ or } (PE = 1 \text{ AND VM} = 1)) and instruction = far return
   THEN
        IF OperandSize = 32
              THEN
                   IF top 12 bytes of stack not within stack limits
                        THEN #SS(0); FI;
                   EIP \leftarrow Pop();
                   CS \leftarrow Pop(); (* 32-bit pop, high-order 16 bits discarded *)
              ELSE (* OperandSize = 16 *)
                   IF top 6 bytes of stack not within stack limits
                        THEN #SS(0); FI;
                   tempEIP \leftarrow Pop();
                   tempEIP ← tempEIP AND 0000FFFFH;
                   IF tempEIP not within code segment limits
                        THEN #GP(0); FI;
                   EIP \leftarrow tempEIP;
                   CS \leftarrow Pop(); (* 16-bit pop *)
        FI;
   IF instruction has immediate operand
         THEN
              SP \leftarrow SP + (SRC \text{ AND FFFFH}); (* Release parameters from stack *)
   FI;
FI:
(* Protected mode, not virtual-8086 mode *)
IF (PE = 1 and VM = 0 and IA32_EFER.LMA = 0) and instruction = far RET
   THEN
```

```
IF OperandSize = 32
             THEN
                 IF second doubleword on stack is not within stack limits
                      THEN #SS(0); FI;
             ELSE (* OperandSize = 16 *)
                 IF second word on stack is not within stack limits
                      THEN #SS(0); FI;
        FI:
   IF return code segment selector is NULL
        THEN #GP(0): FI:
   IF return code segment selector addresses descriptor beyond descriptor table limit
        THEN #GP(selector); FI;
   Obtain descriptor to which return code segment selector points from descriptor table;
   IF return code segment descriptor is not a code segment
        THEN #GP(selector); FI;
   IF return code segment selector RPL < CPL
        THEN #GP(selector); FI;
   IF return code segment descriptor is conforming
   and return code segment DPL > return code segment selector RPL
        THEN #GP(selector); FI;
   IF return code segment descriptor is non-conforming and return code
   segment DPL ≠ return code segment selector RPL
        THEN #GP(selector); FI;
   IF return code segment descriptor is not present
        THEN #NP(selector); FI:
   IF return code segment selector RPL > CPL
        THEN GOTO RETURN-OUTER-PRIVILEGE-LEVEL;
        ELSE GOTO RETURN-TO-SAME-PRIVILEGE-LEVEL;
   FI;
RETURN-SAME-PRIVILEGE-LEVEL:
   IF the return instruction pointer is not within the return code segment limit
        THEN #GP(0); FI;
   IF OperandSize = 32
        THEN
             EIP \leftarrow Pop();
             CS ← Pop(); (* 32-bit pop, high-order 16 bits discarded *)
             ESP ← ESP + SRC; (* Release parameters from stack *)
        ELSE (* OperandSize = 16 *)
             EIP \leftarrow Pop();
             EIP ← EIP AND 0000FFFFH:
             CS \leftarrow Pop(); (* 16-bit pop *)
             ESP \leftarrow ESP + SRC; (* Release parameters from stack *)
```

FI:

FI;

```
RETURN-OUTER-PRIVILEGE-LEVEL:
   IF top (16 + SRC) bytes of stack are not within stack limits (OperandSize = 32)
   or top (8 + SRC) bytes of stack are not within stack limits (OperandSize = 16)
             THEN #SS(0); FI;
   Read return segment selector;
   IF stack segment selector is NULL
        THEN #GP(0); FI;
   IF return stack segment selector index is not within its descriptor table limits
        THEN #GP(selector); FI;
   Read segment descriptor pointed to by return segment selector;
   IF stack segment selector RPL ≠ RPL of the return code segment selector
   or stack segment is not a writable data segment
   or stack segment descriptor DPL ≠ RPL of the return code segment selector
             THEN #GP(selector); FI;
   IF stack segment not present
        THEN #SS(StackSegmentSelector); FI;
   IF the return instruction pointer is not within the return code segment limit
        THEN #GP(0); FI;
   CPL ← ReturnCodeSegmentSelector(RPL);
   IF OperandSize = 32
        THEN
             EIP \leftarrow Pop();
             CS \leftarrow Pop(); (* 32-bit pop, high-order 16 bits discarded; segment descriptor
             information also loaded *)
             CS(RPL) \leftarrow CPL;
             ESP ← ESP + SRC; (* Release parameters from called procedure's stack *)
             tempESP \leftarrow Pop();
             tempSS \leftarrow Pop(); (* 32-bit pop, high-order 16 bits discarded; segment
             descriptor information also loaded *)
             ESP \leftarrow tempESP;
             SS \leftarrow tempSS;
        ELSE (* OperandSize = 16 *)
             EIP \leftarrow Pop();
              EIP \leftarrow EIP AND 0000FFFFH;
             CS \leftarrow Pop(); (* 16-bit pop; segment descriptor information also loaded *)
             CS(RPL) \leftarrow CPL;
              ESP \leftarrow ESP + SRC; (* Release parameters from called procedure's stack *)
             tempESP \leftarrow Pop();
             tempSS \leftarrow Pop(); (* 16-bit pop; segment descriptor information also loaded *)
             ESP \leftarrow tempESP;
             SS \leftarrow tempSS;
```

```
FI;
   FOR each of segment register (ES, FS, GS, and DS)
        DO
             IF segment register points to data or non-conforming code segment
             and CPL > segment descriptor DPL (* DPL in hidden part of segment register *)
                 THEN SegmentSelector \leftarrow 0; (* Segment selector invalid *)
             FI;
        OD:
For each of ES, FS, GS, and DS
   DO
        IF segment selector index is not within descriptor table limits
        or segment descriptor indicates the segment is not a data or readable code segment
        or if the segment is a data or non-conforming code segment
        and the segment descriptor's DPL < CPL or RPL of code segment's segment selector
             THEN SegmentSelector \leftarrow 0; (* SegmentSelector invalid *)
   OD;
ESP ESP + SRC; (* Release parameters from calling procedure's stack *)
(* IA-32e Mode *)
   IF (PE = 1 and VM = 0 and IA32_EFER.LMA = 1) and instruction = far RET
        THEN
             IF OperandSize = 32
                 THEN
                      IF second doubleword on stack is not within stack limits
                           THEN #SS(0); FI;
                      IF first or second doubleword on stack is not in canonical space
                           THEN #SS(0); FI;
                 ELSE
                      IF OperandSize = 16
                           THEN
                                IF second word on stack is not within stack limits
                                    THEN #SS(0); FI;
                                IF first or second word on stack is not in canonical space
                                    THEN #SS(0); FI;
                           ELSE (* OperandSize = 64 *)
                                IF first or second quadword on stack is not in canonical space
                                    THEN #SS(0); FI;
                      FΙ
             FI:
        IF return code segment selector is NULL
             THEN GP(0); FI;
```

```
IF return code segment selector addresses descriptor beyond descriptor table limit
             THEN GP(selector); FI;
        IF return code segment selector addresses descriptor in non-canonical space
             THEN GP(selector); FI;
        Obtain descriptor to which return code segment selector points from descriptor table;
        IF return code segment descriptor is not a code segment
             THEN #GP(selector); FI;
        IF return code segment descriptor has L-bit = 1 and D-bit = 1
             THEN #GP(selector); FI;
        IF return code seament selector RPL < CPL
             THEN #GP(selector); FI;
        IF return code segment descriptor is conforming
        and return code segment DPL > return code segment selector RPL
             THEN #GP(selector); FI;
        IF return code segment descriptor is non-conforming
        and return code segment DPL ≠ return code segment selector RPL
             THEN #GP(selector); FI;
        IF return code segment descriptor is not present
             THEN #NP(selector); FI:
        IF return code segment selector RPL > CPL
             THEN GOTO IA-32E-MODE-RETURN-OUTER-PRIVILEGE-LEVEL:
             ELSE GOTO IA-32E-MODE-RETURN-SAME-PRIVILEGE-LEVEL;
        FI;
   FI;
IA-32E-MODE-RETURN-SAME-PRIVILEGE-LEVEL:
IF the return instruction pointer is not within the return code segment limit
   THEN #GP(0): FI:
IF the return instruction pointer is not within canonical address space
   THEN #GP(0): FI:
IF OperandSize = 32
   THEN
        EIP \leftarrow Pop();
        CS \leftarrow Pop(); (* 32-bit pop, high-order 16 bits discarded *)
        ESP ← ESP + SRC; (* Release parameters from stack *)
   ELSE
        IF OperandSize = 16
             THEN
                 EIP \leftarrow Pop():
                 EIP ← EIP AND 0000FFFFH;
                 CS \leftarrow Pop(); (* 16-bit pop *)
                 ESP \leftarrow ESP + SRC; (* Release parameters from stack *)
             ELSE (* OperandSize = 64 *)
```

```
RIP \leftarrow Pop();
                  CS \leftarrow Pop(); (* 64-bit pop, high-order 48 bits discarded *)
                  ESP \leftarrow ESP + SRC; (* Release parameters from stack *)
        FI;
FI:
IA-32E-MODE-RETURN-OUTER-PRIVILEGE-LEVEL:
IF top (16 + SRC) bytes of stack are not within stack limits (OperandSize = 32)
or top (8 + SRC) bytes of stack are not within stack limits (OperandSize = 16)
   THEN #SS(0); FI;
IF top (16 + SRC) bytes of stack are not in canonical address space (OperandSize = 32)
or top (8 + SRC) bytes of stack are not in canonical address space (OperandSize = 16)
or top (32 + SRC) bytes of stack are not in canonical address space (OperandSize = 64)
   THEN #SS(0); FI;
Read return stack segment selector;
IF stack segment selector is NULL
   THEN
        IF new CS descriptor L-bit = 0
             THEN #GP(selector);
        IF stack segment selector RPL = 3
             THEN #GP(selector);
FI;
IF return stack segment descriptor is not within descriptor table limits
        THEN #GP(selector); FI;
IF return stack segment descriptor is in non-canonical address space
        THEN #GP(selector); FI;
Read segment descriptor pointed to by return segment selector;
IF stack segment selector RPL ≠ RPL of the return code segment selector
or stack segment is not a writable data segment
or stack segment descriptor DPL ≠ RPL of the return code segment selector
   THEN #GP(selector); FI;
IF stack segment not present
   THEN #SS(StackSegmentSelector); FI;
IF the return instruction pointer is not within the return code segment limit
   THEN #GP(0); FI:
IF the return instruction pointer is not within canonical address space
   THEN #GP(0); FI;
CPL ← ReturnCodeSegmentSelector(RPL);
IF OperandSize = 32
   THEN
        EIP \leftarrow Pop();
        CS ← Pop(); (* 32-bit pop, high-order 16 bits discarded, segment descriptor
        information also loaded *)
```

```
CS(RPL) \leftarrow CPL;
         ESP \leftarrow ESP + SRC; (* Release parameters from called procedure's stack *)
         tempESP \leftarrow Pop();
         tempSS ← Pop(); (* 32-bit pop, high-order 16 bits discarded, segment descriptor
         information also loaded *)
         ESP \leftarrow tempESP;
        SS \leftarrow tempSS;
   ELSE
         IF OperandSize = 16
              THEN
                   EIP \leftarrow Pop();
                   EIP ← EIP AND 0000FFFFH;
                   CS ← Pop(); (* 16-bit pop; segment descriptor information also loaded *)
                   CS(RPL) \leftarrow CPL;
                   ESP \leftarrow ESP + SRC; (* release parameters from called
                   procedure's stack *)
                   tempESP \leftarrow Pop();
                   tempSS ← Pop(); (* 16-bit pop; segment descriptor information loaded *)
                   ESP \leftarrow tempESP:
                   SS \leftarrow tempSS;
              ELSE (* OperandSize = 64 *)
                   RIP \leftarrow Pop();
                   CS ← Pop(); (* 64-bit pop; high-order 48 bits discarded; segment
                   descriptor information loaded *)
                   CS(RPL) \leftarrow CPL;
                   ESP ← ESP + SRC; (* Release parameters from called procedure's
                   stack *)
                   tempESP \leftarrow Pop();
                   tempSS ← Pop(); (* 64-bit pop; high-order 48 bits discarded; segment
                   descriptor information also loaded *)
                   ESP \leftarrow tempESP;
                   SS \leftarrow tempSS;
        FI:
FI;
FOR each of segment register (ES, FS, GS, and DS)
   DO
         IF segment register points to data or non-conforming code segment
         and CPL > segment descriptor DPL; (* DPL in hidden part of segment register *)
              THEN SegmentSelector \leftarrow 0; (* SegmentSelector invalid *)
        FI;
   OD:
For each of ES, FS, GS, and DS
```

DO

IF segment selector index is not within descriptor table limits or segment descriptor indicates the segment is not a data or readable code segment or if the segment is a data or non-conforming code segment and the segment descriptor's DPL < CPL or RPL of code segment's segment selector THEN SegmentSelector  $\leftarrow$  0; (\* SegmentSelector invalid \*)

OD;

ESP ESP + SRC; (\* Release parameters from calling procedure's stack \*)

#### **Flags Affected**

None.

#### **Protected Mode Exceptions**

#GP(0) If the return code or stack segment selector NULL.

If the return instruction pointer is not within the return code

segment limit

#GP(selector) If the RPL of the return code segment selector is less then the

CPL.

If the return code or stack segment selector index is not within

its descriptor table limits.

If the return code segment descriptor does not indicate a code

segment.

If the return code segment is non-conforming and the segment selector's DPL is not equal to the RPL of the code segment's

segment selector

If the return code segment is conforming and the segment selector's DPL greater than the RPL of the code segment's

segment selector

If the stack segment is not a writable data segment.

If the stack segment selector RPL is not equal to the RPL of the

return code segment selector.

If the stack segment descriptor DPL is not equal to the RPL of

the return code segment selector.

#SS(0) If the top bytes of stack are not within stack limits.

If the return stack segment is not present.

#NP(selector) If the return code segment is not present.

#PF(fault-code) If a page fault occurs.

#AC(0) If an unaligned memory access occurs when the CPL is 3 and

alignment checking is enabled.

#### **Real-Address Mode Exceptions**

#GP If the return instruction pointer is not within the return code

segment limit

#SS If the top bytes of stack are not within stack limits.

#### Virtual-8086 Mode Exceptions

#GP(0) If the return instruction pointer is not within the return code

segment limit

#SS(0) If the top bytes of stack are not within stack limits.

#PF(fault-code) If a page fault occurs.

#AC(0) If an unaligned memory access occurs when alignment checking

is enabled.

#### **Compatibility Mode Exceptions**

Same as 64-bit mode exceptions.

#### **64-Bit Mode Exceptions**

#GP(0) If the return instruction pointer is non-canonical.

If the return instruction pointer is not within the return code

segment limit.

If the stack segment selector is NULL going back to compatibility

mode.

If the stack segment selector is NULL going back to CPL3 64-bit

mode

If a NULL stack segment selector RPL is not equal to CPL going

back to non-CPL3 64-bit mode.

If the return code segment selector is NULL.

#GP(selector) If the proposed segment descriptor for a code segment does not

indicate it is a code segment.

If the proposed new code segment descriptor has both the D-bit

and L-bit set.

If the DPL for a nonconforming-code segment is not equal to the

RPL of the code segment selector.

If CPL is greater than the RPL of the code segment selector.

If the DPL of a conforming-code segment is greater than the

return code segment selector RPL.

If a segment selector index is outside its descriptor table limits.

If a segment descriptor memory address is non-canonical.

If the stack segment is not a writable data segment.

If the stack segment descriptor DPL is not equal to the RPL of

the return code segment selector.

If the stack segment selector RPL is not equal to the RPL of the

return code segment selector.

#SS(0) If an attempt to pop a value off the stack violates the SS limit.

If an attempt to pop a value off the stack causes a non-canonical

address to be referenced.

#NP(selector) If the return code or stack segment is not present.

#PF(fault-code) If a page fault occurs.

#AC(0) If alignment checking is enabled and an unaligned memory

reference is made while the current privilege level is 3.

### ROUNDPD — Round Packed Double Precision Floating-Point Values

Opcode	Instruction	64-bit Mode	Compat/ Leg Mode	Description
66 OF 3A 09 /r ib	ROUNDPD xmm1, xmm2/m128, imm8	Valid	Valid	Round packed double precision floating-point values in xmm2/m128 and place the result in xmm1. The rounding mode is determined by imm8.

#### **Description**

Round the 2 double-precision floating-point values in the source operand (second operand) using the rounding mode specified in the immediate operand (third operand) and place the results in the destination operand (first operand). The rounding process rounds each input floating-point value to an integer value and returns the integer result as a single-precision floating-point value.

The immediate operand specifies control fields for the rounding operation, three bit fields are defined and shown in Figure 4-13. Bit 3 of the immediate byte controls processor behavior for a precision exception, bit 2 selects the source of rounding mode control. Bits 1:0 specify a non-sticky rounding-mode value (Table 4-4 lists the encoded values for rounding-mode field).

The Precision Floating-Point Exception is signaled according to the immediate operand. If any source operand is an SNaN then it will be converted to a QNaN. If DAZ is set to '1 then denormals will be converted to zero before rounding.

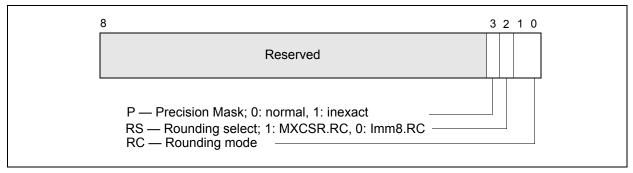


Figure 4-13. Bit Control Fields of Immediate Byte for ROUNDxx Instruction

Table 4-4. Rounding Modes and Encoding of Rounding Control (RC) Field

Rounding Mode	RC Field Setting	Description
Round to nearest (even)	00B	Rounded result is the closest to the infinitely precise result. If two values are equally close, the result is the even value (i.e., the integer value with the least-significant bit of zero).
Round down (toward $-\infty$ )	01B	Rounded result is closest to but no greater than the infinitely precise result.
Round up (toward $+\infty$ )	10B	Rounded result is closest to but no less than the infinitely precise result.
Round toward zero (Truncate)	11B	Rounded result is closest to but no greater in absolute value than the infinitely precise result.

#### **Operation**

```
IF (imm[2] == '1)

THEN  // rounding mode is determined by MXCSR.RC

DEST[63:0] ← ConvertDPFPToInteger_M(SRC[63:0]);

DEST[127:64] ← ConvertDPFPToInteger_M(SRC[127:64]);

ELSE  // rounding mode is determined by IMM8.RC

DEST[63:0] ← ConvertDPFPToInteger_Imm(SRC[63:0]);

DEST[127:64] ← ConvertDPFPToInteger_Imm(SRC[127:64]);

FI
```

### Intel C/C++ Compiler Intrinsic Equivalent

```
ROUNDPD __m128 mm_round_pd(__m128d s1, int iRoundMode);
    __m128 mm_floor_pd(__m128d s1);
    __m128 mm_ceil_pd(__m128d s1);
```

### **SIMD Floating-Point Exceptions**

Invalid (signaled only if SRC = SNaN)

Precision (signaled only if imm[3] == 0; if imm[3] == 1, then the Precision Mask in the MXSCSR is ignored and precision exception is not signaled.)

Note that Denormal is not signaled by ROUNDPD.

### **Protected Mode Exceptions**

#GP(0) For an illega

For an illegal memory operand effective address in the CS, DS, ES, FS, or GS segments.

If a memory operand is not aligned on a 16-byte boundary, regardless of segment.

#SS(0) For an illegal address in the SS segment.

#PF(fault-code) For a page fault. #NM If CR0.TS[bit 3] = 1. #UD If CR0.EM[bit 2] = 1.

If CR4.OSFXSR[bit 9] = 0.

If  $CPUID.01H:ECX.SSE4_1[bit 19] = 0$ .

If LOCK prefix is used.

Either the prefix REP (F3h) or REPN (F2H) is used.

### **Real Mode Exceptions**

#GP(0) if any part of the operand lies outside of the effective address

space from 0 to 0FFFFH.

If a memory operand is not aligned on a 16-byte boundary,

regardless of segment.

#NM If CR0.TS[bit 3] = 1. #UD If CR0.EM[bit 2] = 1.

If CR4.OSFXSR[bit 9] = 0.

If  $CPUID.01H:ECX.SSE4_1[bit 19] = 0$ .

If LOCK prefix is used.

Either the prefix REP (F3h) or REPN (F2H) is used.

### Virtual 8086 Mode Exceptions

Same exceptions as in Real Address Mode.

#PF(fault-code) For a page fault.

#### **Compatibility Mode Exceptions**

Same exceptions as in Protected Mode.

#### **64-Bit Mode Exceptions**

#GP(0) If the memory address is in a non-canonical form.

If a memory operand is not aligned on a 16-byte boundary,

regardless of segment.

#SS(0) If a memory address referencing the SS segment is in a non-

canonical form.

#PF(fault-code) For a page fault.

#NM If TS in CR0 is set.

#UD If EM in CR0 is set.

If OSFXSR in CR4 is 0.

If CPUID feature flag ECX.SSE4 1 is 0.

If LOCK prefix is used. Either the prefix REP (F3h) or REPN (F2H) is used.

# **ROUNDPS** — Round Packed Single Precision Floating-Point Values

Opcode	Instruction	64-bit Mode	Compat/ Leg Mode	Description
66 OF 3A 08 /r ib	ROUNDPS xmm1, xmm2/m128, imm8	Valid	Valid	Round packed single precision floating-point values in xmm2/m128 and place the result in xmm1. The rounding mode is determined by imm8.

#### **Description**

Round the 4 single-precision floating-point values in the source operand (second operand) using the rounding mode specified in the immediate operand (third operand) and place the results in the destination operand (first operand). The rounding process rounds each input floating-point value to an integer value and returns the integer result as a single-precision floating-point value.

The immediate operand specifies control fields for the rounding operation, three bit fields are defined and shown in Figure 4-13. Bit 3 of the immediate byte controls processor behavior for a precision exception, bit 2 selects the source of rounding mode control. Bits 1:0 specify a non-sticky rounding-mode value (Table 4-4 lists the encoded values for rounding-mode field).

The Precision Floating-Point Exception is signaled according to the immediate operand. If any source operand is an SNaN then it will be converted to a QNaN. If DAZ is set to '1 then denormals will be converted to zero before rounding.

#### **Operation**

#### Intel C/C++ Compiler Intrinsic Equivalent

```
ROUNDPS __m128 mm_round_ps(__m128 s1, int iRoundMode);
    __m128 mm_floor_ps(__m128 s1);
    __m128 mm_ceil_ps(__m128 s1);
```

#### SIMD Floating-Point Exceptions

Invalid (signaled only if SRC = SNaN)

Precision (signaled only if imm[3] == `0; if imm[3] == `1, then the Precision Mask in the MXSCSR is ignored and precision exception is not signaled.)

Note that Denormal is not signaled by ROUNDPS.

#### **Protected Mode Exceptions**

#GP(0) For an illegal memory operand effective address in the CS, DS,

ES, FS, or GS segments.

If a memory operand is not aligned on a 16-byte boundary,

regardless of segment.

#SS(0) For an illegal address in the SS segment.

#PF(fault-code) For a page fault. #NM If CR0.TS[bit 3] = 1. #UD If CR0.EM[bit 2] = 1.

If CR4.OSFXSR[bit 9] = 0.

If  $CPUID.01H:ECX.SSE4_1[bit 19] = 0$ .

If LOCK prefix is used.

Either the prefix REP (F3h) or REPN (F2H) is used.

### **Real Mode Exceptions**

#GP(0) if any part of the operand lies outside of the effective address

space from 0 to 0FFFFH.

If a memory operand is not aligned on a 16-byte boundary,

regardless of segment.

#NM If CR0.TS[bit 3] = 1. #UD If CR0.EM[bit 2] = 1.

If CR4.OSFXSR[bit 9] = 0.

If CPUID.01H:ECX.SSE4 1[bit 19] = 0.

If LOCK prefix is used.

Either the prefix REP (F3h) or REPN (F2H) is used.

### Virtual 8086 Mode Exceptions

Same exceptions as in Real Address Mode.

#PF(fault-code) For a page fault.

### **Compatibility Mode Exceptions**

Same exceptions as in Protected Mode.

#### **64-Bit Mode Exceptions**

#GP(0) If the memory address is in a non-canonical form.

If a memory operand is not aligned on a 16-byte boundary,

regardless of segment.

#SS(0) If a memory address referencing the SS segment is in a non-

canonical form.

#PF(fault-code) For a page fault.

#NM If TS in CR0 is set.

#UD If EM in CR0 is set.

If OSFXSR in CR4 is 0.

If CPUID feature flag ECX.SSE4\_1 is 0.

If LOCK prefix is used.

Either the prefix REP (F3h) or REPN (F2H) is used.

### ROUNDSD — Round Scalar Double Precision Floating-Point Values

Opcode	Instruction	64-bit Mode	Compat/ Leg Mode	Description
66 OF 3A OB /r ib	ROUNDSD xmm1, xmm2/m64, imm8	Valid	Valid	Round the low packed double precision floating-point value in xmm2/m64 and place the result in xmm1. The rounding mode is determined by imm8.

#### **Description**

Round the DP FP value in the lower qword of the source operand (second operand) using the rounding mode specified in the immediate operand (third operand) and place the result in the destination operand (first operand). The rounding process rounds a double-precision floating-point input to an integer value and returns the integer result as a double precision floating-point value in the lowest position. The upper double precision floating-point value in the destination is retained.

The immediate operand specifies control fields for the rounding operation, three bit fields are defined and shown in Figure 4-13. Bit 3 of the immediate byte controls processor behavior for a precision exception, bit 2 selects the source of rounding mode control. Bits 1:0 specify a non-sticky rounding-mode value (Table 4-4 lists the encoded values for rounding-mode field).

The Precision Floating-Point Exception is signaled according to the immediate operand. If any source operand is an SNaN then it will be converted to a QNaN. If DAZ is set to '1 then denormals will be converted to zero before rounding.

#### **Operation**

### Intel C/C++ Compiler Intrinsic Equivalent

```
ROUNDSD __m128d mm_round_sd(__m128d dst, __m128d s1, int iRoundMode); 
 __m128d mm_floor_sd(__m128d dst, __m128d s1); 
 __m128d mm_ceil_sd(__m128d dst, __m128d s1);
```

#### **SIMD Floating-Point Exceptions**

Invalid (signaled only if SRC = SNaN)

Precision (signaled only if imm[3] == `0; if imm[3] == `1, then the Precision Mask in the MXSCSR is ignored and precision exception is not signaled.)

Note that Denormal is not signaled by ROUNDSD.

#### **Protected Mode Exceptions**

#GP(0) For an illegal memory operand effective address in the CS, DS,

ES, FS, or GS segments.

#SS(0) For an illegal address in the SS segment.

#PF(fault-code) For a page fault. #NM If CR0.TS[bit 3] = 1. #UD If CR0.EM[bit 2] = 1.

If CR4.OSFXSR[bit 9] = 0.

If  $CPUID.01H:ECX.SSE4_1[bit 19] = 0$ .

If LOCK prefix is used.

Either the prefix REP (F3h) or REPN (F2H) is used.

#AC(0) If alignment checking is enabled and an unaligned memory

reference is made while the current privilege level is 3.

#### **Real Mode Exceptions**

#GP(0) if any part of the operand lies outside of the effective address

space from 0 to 0FFFFH.

#NM If CR0.TS[bit 3] = 1. #UD If CR0.EM[bit 2] = 1.

If CR4.OSFXSR[bit 9] = 0.

If CPUID.01H:ECX.SSE4 1[bit 19] = 0.

If LOCK prefix is used.

Either the prefix REP (F3h) or REPN (F2H) is used.

#### Virtual 8086 Mode Exceptions

Same exceptions as in Real Address Mode.

#PF(fault-code) For a page fault.

#AC(0) If alignment checking is enabled and an unaligned memory

reference is made while the current privilege level is 3.

#### Compatibility Mode Exceptions

Same exceptions as in Protected Mode.

## **64-Bit Mode Exceptions**

#GP(0) If the memory address is in a non-canonical form.

#SS(0) If a memory address referencing the SS segment is in a non-

canonical form.

#PF(fault-code) For a page fault.

#NM If TS in CR0 is set.

#UD If EM in CR0 is set.

If OSFXSR in CR4 is 0.

If CPUID feature flag ECX.SSE4\_1 is 0.

If LOCK prefix is used.

Either the prefix REP (F3h) or REPN (F2H) is used.

#AC(0) If alignment checking is enabled and an unaligned memory

reference is made while the current privilege level is 3.

# **ROUNDSS** — Round Scalar Single Precision Floating-Point Values

Opcode	Instruction	64-bit Mode	Compat/ Leg Mode	Description
66 OF 3A OA /r ib	ROUNDSS xmm1, xmm2/m32, imm8	Valid	Valid	Round the low packed single precision floating-point value in <i>xmm2/m32</i> and place the result in <i>xmm1</i> . The rounding mode is determined by <i>imm8</i> .

#### **Description**

Round the single-precision floating-point value in the lowest dword of the source operand (second operand) using the rounding mode specified in the immediate operand (third operand) and place the result in the destination operand (first operand). The rounding process rounds a single-precision floating-point input to an integer value and returns the result as a single-precision floating-point value in the lowest position. The upper three single-precision floating-point values in the destination are retained.

The immediate operand specifies control fields for the rounding operation, three bit fields are defined and shown in Figure 4-13. Bit 3 of the immediate byte controls processor behavior for a precision exception, bit 2 selects the source of rounding mode control. Bits 1:0 specify a non-sticky rounding-mode value (Table 4-4 lists the encoded values for rounding-mode field).

The Precision Floating-Point Exception is signaled according to the immediate operand. If any source operand is an SNaN then it will be converted to a QNaN. If DAZ is set to '1 then denormals will be converted to zero before rounding.

### Operation

# Intel C/C++ Compiler Intrinsic Equivalent

```
ROUNDSS __m128 mm_round_ss(__m128 dst, __m128 s1, int iRoundMode);

__m128 mm_floor_ss(__m128 dst, __m128 s1);

__m128 mm_ceil_ss(__m128 dst, __m128 s1);
```

#### **SIMD Floating-Point Exceptions**

Invalid (signaled only if SRC = SNaN)

Precision (signaled only if imm[3] == 0; if imm[3] == 1, then the Precision Mask in the MXSCSR is ignored and precision exception is not signaled.)

Note that Denormal is not signaled by ROUNDSS.

#### **Protected Mode Exceptions**

#GP(0) For an illegal memory operand effective address in the CS, DS,

ES, FS, or GS segments.

#SS(0) For an illegal address in the SS segment.

#PF(fault:code) For a page fault. #NM If CR0.TS[bit 3] = 1. #UD If CR0.EM[bit 2] = 1.

If CR4.OSFXSR[bit 9] = 0.

If  $CPUID.01H:ECX.SSE4_1[bit 19] = 0$ .

If LOCK prefix is used.

Either the prefix REP (F3h) or REPN (F2H) is used.

#AC(0) If alignment checking is enabled and an unaligned memory

reference is made while the current privilege level is 3.

# **Real Mode Exceptions**

#GP if any part of the operand lies outside of the effective address

space from 0 to 0FFFFH.

#NM If CR0.TS[bit 3] = 1. #UD If CR0.EM[bit 2] = 1.

If CR4.OSFXSR[bit 9] = 0.

If CPUID.01H:ECX.SSE4 1[bit 19] = 0.

If LOCK prefix is used.

Either the prefix REP (F3h) or REPN (F2H) is used.

### Virtual 8086 Mode Exceptions

Same exceptions as in Real Address Mode.

#PF(fault-code) For a page fault.

#AC(0) If alignment checking is enabled and an unaligned memory

reference is made while the current privilege level is 3.

#### **Compatibility Mode Exceptions**

Same exceptions as in Protected Mode.

## **64-Bit Mode Exceptions**

#GP(0) If the memory address is in a non-canonical form.

#SS(0) If a memory address referencing the SS segment is in a non-

canonical form.

#PF(fault-code) For a page fault.

#NM If TS in CR0 is set.

#UD If EM in CR0 is set.

If OSFXSR in CR4 is 0.

If CPUID feature flag ECX.SSE4\_1 is 0.

If LOCK prefix is used.

Either the prefix REP (F3h) or REPN (F2H) is used.

#AC(0) If alignment checking is enabled and an unaligned memory

reference is made while the current privilege level is 3.

# RSM—Resume from System Management Mode

Opcode	Instruction	Non- SMM Mode	SMM Mode	Description
OF AA	RSM	Invalid	Valid	Resume operation of interrupted program.

#### **Description**

Returns program control from system management mode (SMM) to the application program or operating-system procedure that was interrupted when the processor received an SMM interrupt. The processor's state is restored from the dump created upon entering SMM. If the processor detects invalid state information during state restoration, it enters the shutdown state. The following invalid information can cause a shutdown:

- Any reserved bit of CR4 is set to 1.
- Any illegal combination of bits in CR0, such as (PG=1 and PE=0) or (NW=1 and CD=0).
- (Intel Pentium and Intel486<sup>™</sup> processors only.) The value stored in the state dump base field is not a 32-KByte aligned address.

The contents of the model-specific registers are not affected by a return from SMM.

The SMM state map used by RSM supports resuming processor context for non-64-bit modes and 64-bit mode.

See Chapter 25, "System Management," in the *Intel*® 64 and *IA-32 Architectures* Software Developer's Manual, Volume 3B, for more information about SMM and the behavior of the RSM instruction.

# Operation

```
ReturnFromSMM;

IF (IA-32e mode supported) or (CPUID_DisplayFamily_DisplayModleSignature = 06H_0CH)

THEN

ProcessorState ← Restore(SMMDump(IA-32e SMM STATE MAP));

Else

ProcessorState ← Restore(SMMDump(Non-32-Bit-Mode SMM STATE MAP));

FI
```

#### Flags Affected

AII.

# **Protected Mode Exceptions**

#UD If an attempt is made to execute this instruction when the

processor is not in SMM. If the LOCK prefix is used.

## **Real-Address Mode Exceptions**

Same exceptions as in protected mode.

## Virtual-8086 Mode Exceptions

Same exceptions as in protected mode.

# **Compatibility Mode Exceptions**

Same exceptions as in protected mode.

## **64-Bit Mode Exceptions**

Same exceptions as in protected mode.

# RSQRTPS—Compute Reciprocals of Square Roots of Packed Single-Precision Floating-Point Values

Opcode	Instruction	64-Bit Mode	Compat/ Leg Mode	Description
0F 52 /r	RSQRTPS xmm1, xmm2/m128	Valid	Valid	Computes the approximate reciprocals of the square roots of the packed single-precision floating-point values in <i>xmm2/m128</i> and stores the results in <i>xmm1</i> .

# **Description**

Performs a SIMD computation of the approximate reciprocals of the square roots of the four packed single-precision floating-point values in the source operand (second operand) and stores the packed single-precision floating-point results in the destination operand. The source operand can be an XMM register or a 128-bit memory location. The destination operand is an XMM register. See Figure 10-5 in the Intel @ 64 and IA-32 Architectures Software Developer's Manual, Volume 1, for an illustration of a SIMD single-precision floating-point operation.

The relative error for this approximation is:

IRelative ErrorI 
$$\leq 1.5 * 2^{-12}$$

The RSQRTPS instruction is not affected by the rounding control bits in the MXCSR register. When a source value is a 0.0, an  $\infty$  of the sign of the source value is returned. A denormal source value is treated as a 0.0 (of the same sign). When a source value is a negative value (other than -0.0), a floating-point indefinite is returned. When a source value is an SNaN or QNaN, the SNaN is converted to a QNaN or the source ONaN is returned.

In 64-bit mode, using a REX prefix in the form of REX.R permits this instruction to access additional registers (XMM8-XMM15).

# **Operation**

DEST[31:0]  $\leftarrow$  APPROXIMATE(1.0/SQRT(SRC[31:0])); DEST[63:32]  $\leftarrow$  APPROXIMATE(1.0/SQRT(SRC[63:32])); DEST[95:64]  $\leftarrow$  APPROXIMATE(1.0/SQRT(SRC[95:64])); DEST[127:96]  $\leftarrow$  APPROXIMATE(1.0/SQRT(SRC[127:96]));

# Intel C/C++ Compiler Intrinsic Equivalent

RSQRTPS m128 mm rsqrt ps( m128 a)

#### **SIMD Floating-Point Exceptions**

None.

#### **Protected Mode Exceptions**

#GP(0) For an illegal memory operand effective address in the CS, DS,

ES, FS or GS segments.

If a memory operand is not aligned on a 16-byte boundary,

regardless of segment.

#SS(0) For an illegal address in the SS segment.

#PF(fault-code) For a page fault. #NM If CR0.TS[bit 3] = 1. #UD If CR0.EM[bit 2] = 1.

If CR4.OSFXSR[bit 9] = 0.

If CPUID.01H:EDX.SSE[bit 25] = 0.

If the LOCK prefix is used.

#### **Real-Address Mode Exceptions**

#GP If a memory operand is not aligned on a 16-byte boundary,

regardless of segment.

If any part of the operand lies outside the effective address

space from 0 to FFFFH.

#NM If CR0.TS[bit 3] = 1. #UD If CR0.EM[bit 2] = 1.

If CR4.OSFXSR[bit 9] = 0.

If CPUID.01H:EDX.SSE[bit 25] = 0.

If the LOCK prefix is used.

#### Virtual-8086 Mode Exceptions

Same exceptions as in real address mode.

#PF(fault-code) For a page fault.

### **Compatibility Mode Exceptions**

Same exceptions as in protected mode.

#### **64-Bit Mode Exceptions**

#SS(0) If a memory address referencing the SS segment is in a non-

canonical form.

#GP(0) If the memory address is in a non-canonical form.

If memory operand is not aligned on a 16-byte boundary,

regardless of segment.

#PF(fault-code) For a page fault.

#NM If CR0.TS[bit 3] = 1. #UD If CR0.EM[bit 2] = 1.

If CR4.OSFXSR[bit 9] = 0.

If CPUID.01H:EDX.SSE[bit 25] = 0.

# RSQRTSS—Compute Reciprocal of Square Root of Scalar Single-Precision Floating-Point Value

Opcode	Instruction	64-Bit Mode	Compat/ Leg Mode	Description
F3 0F 52 /r	RSQRTSS xmm1, xmm2/m32	Valid	Valid	Computes the approximate reciprocal of the square root of the low single-precision floating-point value in xmm2/m32 and stores the results in xmm1.

# **Description**

Computes an approximate reciprocal of the square root of the low single-precision floating-point value in the source operand (second operand) stores the single-precision floating-point result in the destination operand. The source operand can be an XMM register or a 32-bit memory location. The destination operand is an XMM register. The three high-order doublewords of the destination operand remain unchanged. See Figure 10-6 in the *Intel*® 64 and IA-32 Architectures Software Developer's Manual, Volume 1, for an illustration of a scalar single-precision floating-point operation.

The relative error for this approximation is:

|Relative Error|  $\leq 1.5 * 2^{-12}$ 

The RSQRTSS instruction is not affected by the rounding control bits in the MXCSR register. When a source value is a 0.0, an  $\infty$  of the sign of the source value is returned. A denormal source value is treated as a 0.0 (of the same sign). When a source value is a negative value (other than -0.0), a floating-point indefinite is returned. When a source value is an SNaN or QNaN, the SNaN is converted to a QNaN or the source QNaN is returned.

In 64-bit mode, using a REX prefix in the form of REX.R permits this instruction to access additional registers (XMM8-XMM15).

# **Operation**

DEST[31:0]  $\leftarrow$  APPROXIMATE(1.0/SQRT(SRC[31:0])); (\* DEST[127:32] unchanged \*)

# Intel C/C++ Compiler Intrinsic Equivalent

RSQRTSS \_\_m128 \_mm\_rsqrt\_ss(\_\_m128 a)

# **SIMD Floating-Point Exceptions**

None.

#### **Protected Mode Exceptions**

#GP(0) For an illegal memory operand effective address in the CS, DS,

ES, FS or GS segments.

#SS(0) For an illegal address in the SS segment.

#PF(fault-code) For a page fault. #NM If CR0.TS[bit 3] = 1. #UD If CR0.EM[bit 2] = 1.

If CR4.OSFXSR[bit 9] = 0.

If CPUID.01H:EDX.SSE[bit 25] = 0.

If the LOCK prefix is used.

#AC(0) If alignment checking is enabled and an unaligned memory

reference is made while the current privilege level is 3.

#### **Real-Address Mode Exceptions**

GP If any part of the operand lies outside the effective address

space from 0 to FFFFH.

#NM If CR0.TS[bit 3] = 1. #UD If CR0.EM[bit 2] = 1.

If CR4.OSFXSR[bit 9] = 0.

If CPUID.01H:EDX.SSE[bit 25] = 0.

If the LOCK prefix is used.

#### Virtual-8086 Mode Exceptions

Same exceptions as in real address mode.

#PF(fault-code) For a page fault.

#AC(0) If alignment checking is enabled and an unaligned memory

reference is made.

#### **Compatibility Mode Exceptions**

Same exceptions as in protected mode.

#### **64-Bit Mode Exceptions**

#SS(0) If a memory address referencing the SS segment is in a non-

canonical form.

#GP(0) If the memory address is in a non-canonical form.

#PF(fault-code) For a page fault.
#NM If CR0.TS[bit 3] = 1.

#### INSTRUCTION SET REFERENCE, N-Z

#UD If CR0.EM[bit 2] = 1.

If CR4.OSFXSR[bit 9] = 0.

If CPUID.01H:EDX.SSE[bit 25] = 0.

If the LOCK prefix is used.

#AC(0) If alignment checking is enabled and an unaligned memory

reference is made while the current privilege level is 3.

# SAHF—Store AH into Flags

Opcode	Instruction	64-Bit Mode	Compat/ Leg Mode	Description
9E	SAHF	Invalid*	Valid	Loads SF, ZF, AF, PF, and CF from AH into EFLAGS register.

#### **NOTES:**

#### **Description**

Loads the SF, ZF, AF, PF, and CF flags of the EFLAGS register with values from the corresponding bits in the AH register (bits 7, 6, 4, 2, and 0, respectively). Bits 1, 3, and 5 of register AH are ignored; the corresponding reserved bits (1, 3, and 5) in the EFLAGS register remain as shown in the "Operation" section below.

This instruction executes as described above in compatibility mode and legacy mode. It is valid in 64-bit mode only if CPUID.80000001H:ECX.LAHF-SAHF[bit 0] = 1.

#### **Operation**

```
IF IA-64 Mode THEN IF CPUID.80000001.ECX[0] = 1; THEN RFLAGS(SF:ZF:0:AF:0:PF:1:CF) \leftarrow AH; ELSE #UD; FI ELSE EFLAGS(SF:ZF:0:AF:0:PF:1:CF) \leftarrow AH; FI;
```

# **Flags Affected**

The SF, ZF, AF, PF, and CF flags are loaded with values from the AH register. Bits 1, 3, and 5 of the EFLAGS register are unaffected, with the values remaining 1, 0, and 0, respectively.

# **Protected Mode Exceptions**

None.

# **Real-Address Mode Exceptions**

None.

<sup>\*</sup> Valid in specific steppings. See Description section.

# **Virtual-8086 Mode Exceptions**

None.

# **Compatibility Mode Exceptions**

None.

# **64-Bit Mode Exceptions**

#UD If CPUID.80000001.ECX[0] = 0.

# SAL/SAR/SHL/SHR—Shift

Opcode***	Instruction	64-Bit Mode	Compat/ Leg Mode	Description
D0 /4	SAL <i>r/m8</i> , 1	Valid	Valid	Multiply <i>r/m8</i> by 2, once.
REX + D0 /4	SAL <i>r/m8**</i> , 1	Valid	N.E.	Multiply <i>r/m8</i> by 2, once.
D2 /4	SAL r/m8, CL	Valid	Valid	Multiply <i>r/m8</i> by 2, CL times.
REX + D2 /4	SAL <i>r/m8</i> **, CL	Valid	N.E.	Multiply <i>r/m8</i> by 2, CL times.
CO /4 ib	SAL r/m8, imm8	Valid	Valid	Multiply <i>r/m8</i> by 2, <i>imm8</i> times.
REX + CO /4 ib	SAL r/m8**, imm8	Valid	N.E.	Multiply <i>r/m8</i> by 2, <i>imm8</i> times.
D1 /4	SAL <i>r/m16</i> , 1	Valid	Valid	Multiply <i>r/m16</i> by 2, once.
D3 /4	SAL r/m16, CL	Valid	Valid	Multiply r/m16 by 2, CL times.
C1 /4 ib	SAL r/m16, imm8	Valid	Valid	Multiply <i>r/m16</i> by 2, <i>imm8</i> times.
D1 /4	SAL <i>r/m32</i> , 1	Valid	Valid	Multiply <i>r/m32</i> by 2, once.
REX.W + D1 /4	SAL <i>r/m64</i> , 1	Valid	N.E.	Multiply <i>r/m64</i> by 2, once.
D3 /4	SAL r/m32, CL	Valid	Valid	Multiply <i>r/m32</i> by 2, CL times.
REX.W + D3 /4	SAL r/m64, CL	Valid	N.E.	Multiply <i>r/m64</i> by 2, CL times.
C1 /4 ib	SAL r/m32, imm8	Valid	Valid	Multiply <i>r/m32</i> by 2, <i>imm8</i> times.
REX.W + C1 /4 ib	SAL r/m64, imm8	Valid	N.E.	Multiply <i>r/m64</i> by 2, <i>imm8</i> times.
D0 /7	SAR <i>r/m8</i> , 1	Valid	Valid	Signed divide* <i>r/m8</i> by 2, once.
REX + D0 /7	SAR <i>r/m8**</i> , 1	Valid	N.E.	Signed divide* <i>r/m8</i> by 2, once.
D2 /7	SAR <i>r/m8</i> , CL	Valid	Valid	Signed divide* r/m8 by 2, CL times.
REX + D2 /7	SAR <i>r/m8**</i> , CL	Valid	N.E.	Signed divide* r/m8 by 2, CL times.
CO /7 ib	SAR r/m8, imm8	Valid	Valid	Signed divide* r/m8 by 2, imm8 time.
REX + CO /7 ib	SAR r/m8**, imm8	Valid	N.E.	Signed divide* r/m8 by 2, imm8 times.
D1 /7	SAR <i>r/m16</i> ,1	Valid	Valid	Signed divide* r/m16 by 2, once.

Opcode	Instruction	64-Bit Mode	Compat/ Leg Mode	Description
D3 /7	SAR <i>r/m16</i> , CL	Valid	Valid	Signed divide* r/m16 by 2, CL times.
C1 /7 ib	SAR r/m16, imm8	Valid	Valid	Signed divide* r/m16 by 2, imm8 times.
D1 /7	SAR <i>r/m32</i> , 1	Valid	Valid	Signed divide* <i>r/m32</i> by 2, once.
REX.W + D1 /7	SAR <i>r/m64</i> , 1	Valid	N.E.	Signed divide* <i>r/m64</i> by 2, once.
D3 /7	SAR <i>r/m32</i> , CL	Valid	Valid	Signed divide* r/m32 by 2, CL times.
REX.W + D3 /7	SAR <i>r/m64</i> , CL	Valid	N.E.	Signed divide* r/m64 by 2, CL times.
C1 /7 ib	SAR r/m32, imm8	Valid	Valid	Signed divide* r/m32 by 2, imm8 times.
REX.W + C1 /7 ib	SAR r/m64, imm8	Valid	N.E.	Signed divide* r/m64 by 2, imm8 times
D0 /4	SHL <i>r/m8</i> , 1	Valid	Valid	Multiply <i>r/m8</i> by 2, once.
REX + D0 /4	SHL <i>r/m8**</i> , 1	Valid	N.E.	Multiply <i>r/m8</i> by 2, once.
D2 /4	SHL r/m8, CL	Valid	Valid	Multiply <i>r/m8</i> by 2, CL times.
REX + D2 /4	SHL r/m8**, CL	Valid	N.E.	Multiply <i>r/m8</i> by 2, CL times.
CO /4 ib	SHL r/m8, imm8	Valid	Valid	Multiply <i>r/m8</i> by 2, <i>imm8</i> times.
REX + CO /4 ib	SHL r/m8**, imm8	Valid	N.E.	Multiply <i>r/m8</i> by 2, <i>imm8</i> times.
D1 /4	SHL <i>r/m16</i> ,1	Valid	Valid	Multiply <i>r/m16</i> by 2, once.
D3 /4	SHL r/m16, CL	Valid	Valid	Multiply <i>r/m16</i> by 2, CL times.
C1 /4 ib	SHL r/m16, imm8	Valid	Valid	Multiply <i>r/m16</i> by 2, <i>imm8</i> times.
D1 /4	SHL <i>r/m32</i> ,1	Valid	Valid	Multiply <i>r/m32</i> by 2, once.
REX.W + D1 /4	SHL <i>r/m64</i> ,1	Valid	N.E.	Multiply <i>r/m64</i> by 2, once.
D3 /4	SHL r/m32, CL	Valid	Valid	Multiply <i>r/m32</i> by 2, CL times.
REX.W + D3 /4	SHL r/m64, CL	Valid	N.E.	Multiply <i>r/m64</i> by 2, CL times.
C1 /4 ib	SHL r/m32, imm8	Valid	Valid	Multiply <i>r/m32</i> by 2, <i>imm8</i> times.
REX.W + C1 /4 ib	SHL r/m64, imm8	Valid	N.E.	Multiply <i>r/m64</i> by 2, <i>imm8</i> times.

Opcode	Instruction	64-Bit Mode	Compat/ Leg Mode	Description
D0 /5	SHR <i>r/m8</i> ,1	Valid	Valid	Unsigned divide <i>r/m8</i> by 2, once.
REX + D0 /5	SHR <i>r/m8**</i> , 1	Valid	N.E.	Unsigned divide <i>r/m8</i> by 2, once.
D2 /5	SHR r/m8, CL	Valid	Valid	Unsigned divide <i>r/m8</i> by 2, CL times.
REX + D2 /5	SHR <i>r/m8**</i> , CL	Valid	N.E.	Unsigned divide <i>r/m8</i> by 2, CL times.
CO /5 ib	SHR r/m8, imm8	Valid	Valid	Unsigned divide <i>r/m8</i> by 2, imm8 times.
REX + CO /5 ib	SHR r/m8**, imm8	Valid	N.E.	Unsigned divide <i>r/m8</i> by 2, <i>imm8</i> times.
D1 /5	SHR <i>r/m16</i> , 1	Valid	Valid	Unsigned divide <i>r/m16</i> by 2, once.
D3 /5	SHR r/m16, CL	Valid	Valid	Unsigned divide <i>r/m16</i> by 2, CL times
C1 /5 ib	SHR r/m16, imm8	Valid	Valid	Unsigned divide <i>r/m16</i> by 2, <i>imm8</i> times.
D1 /5	SHR <i>r/m32</i> , 1	Valid	Valid	Unsigned divide <i>r/m32</i> by 2, once.
REX.W + D1 /5	SHR <i>r/m64</i> , 1	Valid	N.E.	Unsigned divide <i>r/m64</i> by 2, once.
D3 /5	SHR <i>r/m32</i> , CL	Valid	Valid	Unsigned divide <i>r/m32</i> by 2, CL times.
REX.W + D3 /5	SHR r/m64, CL	Valid	N.E.	Unsigned divide <i>r/m64</i> by 2, CL times.
C1 /5 ib	SHR r/m32, imm8	Valid	Valid	Unsigned divide <i>r/m32</i> by 2, <i>imm8</i> times.
REX.W + C1 /5 ib	SHR r/m64, imm8	Valid	N.E.	Unsigned divide <i>r/m64</i> by 2, <i>imm8</i> times.

## **NOTES:**

<sup>\*</sup> Not the same form of division as IDIV; rounding is toward negative infinity.

<sup>\*\*</sup> In 64-bit mode, r/m8 can not be encoded to access the following byte registers if a REX prefix is used: AH, BH, CH, DH.

<sup>\*\*\*</sup>See IA-32 Architecture Compatibility section below.

#### **Description**

Shifts the bits in the first operand (destination operand) to the left or right by the number of bits specified in the second operand (count operand). Bits shifted beyond the destination operand boundary are first shifted into the CF flag, then discarded. At the end of the shift operation, the CF flag contains the last bit shifted out of the destination operand.

The destination operand can be a register or a memory location. The count operand can be an immediate value or the CL register. The count is masked to 5 bits (or 6 bits if in 64-bit mode and REX.W is used). The count range is limited to 0 to 31 (or 63 if 64-bit mode and REX.W is used). A special opcode encoding is provided for a count of 1.

The shift arithmetic left (SAL) and shift logical left (SHL) instructions perform the same operation; they shift the bits in the destination operand to the left (toward more significant bit locations). For each shift count, the most significant bit of the destination operand is shifted into the CF flag, and the least significant bit is cleared (see Figure 7-7 in the Intel® 64 and IA-32 Architectures Software Developer's Manual, Volume 1).

The shift arithmetic right (SAR) and shift logical right (SHR) instructions shift the bits of the destination operand to the right (toward less significant bit locations). For each shift count, the least significant bit of the destination operand is shifted into the CF flag, and the most significant bit is either set or cleared depending on the instruction type. The SHR instruction clears the most significant bit (see Figure 7-8 in the Intel® 64 and IA-32 Architectures Software Developer's Manual, Volume 1); the SAR instruction sets or clears the most significant bit to correspond to the sign (most significant bit) of the original value in the destination operand. In effect, the SAR instruction fills the empty bit position's shifted value with the sign of the unshifted value (see Figure 7-9 in the Intel® 64 and IA-32 Architectures Software Developer's Manual, Volume 1).

The SAR and SHR instructions can be used to perform signed or unsigned division, respectively, of the destination operand by powers of 2. For example, using the SAR instruction to shift a signed integer 1 bit to the right divides the value by 2.

Using the SAR instruction to perform a division operation does not produce the same result as the IDIV instruction. The quotient from the IDIV instruction is rounded toward zero, whereas the "quotient" of the SAR instruction is rounded toward negative infinity. This difference is apparent only for negative numbers. For example, when the IDIV instruction is used to divide -9 by 4, the result is -2 with a remainder of -1. If the SAR instruction is used to shift -9 right by two bits, the result is -3 and the "remainder" is +3; however, the SAR instruction stores only the most significant bit of the remainder (in the CF flag).

The OF flag is affected only on 1-bit shifts. For left shifts, the OF flag is set to 0 if the most-significant bit of the result is the same as the CF flag (that is, the top two bits of the original operand were the same); otherwise, it is set to 1. For the SAR instruction, the OF flag is cleared for all 1-bit shifts. For the SHR instruction, the OF flag is set to the most-significant bit of the original operand.

In 64-bit mode, the instruction's default operation size is 32 bits and the mask width for CL is 5 bits. Using a REX prefix in the form of REX.R permits access to additional registers (R8-R15). Using a REX prefix in the form of REX.W promotes operation to 64-bits and sets the mask width for CL to 6 bits. See the summary chart at the beginning of this section for encoding data and limits.

#### **IA-32 Architecture Compatibility**

The 8086 does not mask the shift count. However, all other IA-32 processors (starting with the Intel 286 processor) do mask the shift count to 5 bits, resulting in a maximum count of 31. This masking is done in all operating modes (including the virtual-8086 mode) to reduce the maximum execution time of the instructions.

#### **Operation**

```
IF 64-Bit Mode and using REX.W
   THEN
        countMASK \leftarrow 3FH:
   ELSE
        countMASK \leftarrow 1FH;
FΙ
tempCOUNT \leftarrow (COUNT AND countMASK);
tempDEST \leftarrow DEST;
WHILE (tempCOUNT \neq 0)
DO
   IF instruction is SAL or SHL
         THEN
              CF \leftarrow MSB(DEST);
         ELSE (* Instruction is SAR or SHR *)
              CF \leftarrow LSB(DEST);
   FI:
   IF instruction is SAL or SHL
         THEN
              DEST \leftarrow DEST * 2;
         ELSE
              IF instruction is SAR
                   THEN
                        DEST ← DEST / 2; (* Signed divide, rounding toward negative infinity *)
                   ELSE (* Instruction is SHR *)
                        DEST ← DEST / 2; (* Unsigned divide *)
              FI:
   FI;
   tempCOUNT \leftarrow tempCOUNT - 1;
OD:
```

```
(* Determine overflow for the various instructions *)
IF (COUNT and countMASK) = 1
   THEN
        IF instruction is SAL or SHL
             THEN
                  OF \leftarrow MSB(DEST) XOR CF;
             ELSE
                   IF instruction is SAR
                       THEN
                             OF \leftarrow 0;
                        ELSE (* Instruction is SHR *)
                             OF \leftarrow MSB(tempDEST);
                  FI:
        FI;
   ELSE IF (COUNT AND countMASK) = 0
        THEN
              All flags unchanged;
        ELSE (* COUNT not 1 or 0 *)
             OF \leftarrow undefined:
   FI:
FI:
```

#### **Flags Affected**

The CF flag contains the value of the last bit shifted out of the destination operand; it is undefined for SHL and SHR instructions where the count is greater than or equal to the size (in bits) of the destination operand. The OF flag is affected only for 1-bit shifts (see "Description" above); otherwise, it is undefined. The SF, ZF, and PF flags are set according to the result. If the count is 0, the flags are not affected. For a non-zero count, the AF flag is undefined.

# **Protected Mode Exceptions**

#GP(0) If the destination is located in a non-writable segment.

If a memory operand effective address is outside the CS, DS,

ES, FS, or GS segment limit.

If the DS, ES, FS, or GS register contains a NULL segment

selector.

#SS(0) If a memory operand effective address is outside the SS

segment limit.

#PF(fault-code) If a page fault occurs.

#AC(0) If alignment checking is enabled and an unaligned memory

reference is made while the current privilege level is 3.

#UD If the LOCK prefix is used.

## **Real-Address Mode Exceptions**

#GP If a memory operand effective address is outside the CS, DS,

ES, FS, or GS segment limit.

#SS If a memory operand effective address is outside the SS

segment limit.

**#UD** If the LOCK prefix is used.

#### Virtual-8086 Mode Exceptions

#GP(0) If a memory operand effective address is outside the CS, DS,

ES, FS, or GS segment limit.

#SS(0) If a memory operand effective address is outside the SS

segment limit.

#PF(fault-code) If a page fault occurs.

#AC(0) If alignment checking is enabled and an unaligned memory

reference is made.

**#UD** If the LOCK prefix is used.

### **Compatibility Mode Exceptions**

Same exceptions as in protected mode.

#### **64-Bit Mode Exceptions**

#SS(0) If a memory address referencing the SS segment is in a non-

canonical form.

#GP(0) If the memory address is in a non-canonical form.

#PF(fault-code) If a page fault occurs.

#AC(0) If alignment checking is enabled and an unaligned memory

reference is made while the current privilege level is 3.

# SBB—Integer Subtraction with Borrow

Opcode	Instruction	64-Bit Mode	Compat/ Leg Mode	Description
1C <i>ib</i>	SBB AL, imm8	Valid	Valid	Subtract with borrow <i>imm8</i> from AL.
1D <i>iw</i>	SBB AX, imm16	Valid	Valid	Subtract with borrow imm16 from AX.
1D id	SBB EAX, imm32	Valid	Valid	Subtract with borrow <i>imm32</i> from EAX.
REX.W + 1D id	SBB RAX, imm32	Valid	N.E.	Subtract with borrow sign- extended <i>imm.32</i> to 64-bits from RAX.
80 /3 ib	SBB r/m8, imm8	Valid	Valid	Subtract with borrow imm8 from r/m8.
REX + 80 /3 ib	SBB r/m8*, imm8	Valid	N.E.	Subtract with borrow imm8 from r/m8.
81 /3 iw	SBB r/m16, imm16	Valid	Valid	Subtract with borrow imm16 from r/m16.
81 /3 id	SBB r/m32, imm32	Valid	Valid	Subtract with borrow imm32 from r/m32.
REX.W + 81 /3 id	SBB r/m64, imm32	Valid	N.E.	Subtract with borrow sign- extended <i>imm32 to 64-bits</i> from <i>r/m64</i> .
83 /3 ib	SBB r/m16, imm8	Valid	Valid	Subtract with borrow signextended <i>imm8</i> from <i>r/m16</i> .
83 /3 ib	SBB r/m32, imm8	Valid	Valid	Subtract with borrow signextended <i>imm8</i> from <i>r/m32</i> .
REX.W + 83 /3 ib	SBB r/m64, imm8	Valid	N.E.	Subtract with borrow signextended <i>imm8</i> from <i>r/m64</i> .
18 /r	SBB r/m8, r8	Valid	Valid	Subtract with borrow <i>r8</i> from <i>r/m8.</i>
REX + 18 /r	SBB r/m8*, r8	Valid	N.E.	Subtract with borrow <i>r8</i> from <i>r/m8.</i>
19 <i>/r</i>	SBB r/m16, r16	Valid	Valid	Subtract with borrow <i>r16</i> from <i>r/m16.</i>
19 <i>/r</i>	SBB <i>r/m32, r32</i>	Valid	Valid	Subtract with borrow <i>r32</i> from <i>r/m32.</i>
REX.W + 19 /r	SBB r/m64, r64	Valid	N.E.	Subtract with borrow <i>r64</i> from <i>r/m64.</i>

Opcode	Instruction	64-Bit Mode	Compat/ Leg Mode	Description
1A /r	SBB r8, r/m8	Valid	Valid	Subtract with borrow <i>r/m8</i> from <i>r8.</i>
REX + 1A /r	SBB r8*, r/m8*	Valid	N.E.	Subtract with borrow <i>r/m8</i> from <i>r8.</i>
1B /r	SBB r16, r/m16	Valid	Valid	Subtract with borrow <i>r/m16</i> from <i>r16</i> .
1B /r	SBB <i>r32, r/m32</i>	Valid	Valid	Subtract with borrow <i>r/m32</i> from <i>r32</i> .
REX.W + 1B /r	SBB <i>r64, r/m64</i>	Valid	N.E.	Subtract with borrow <i>r/m64</i> from <i>r64.</i>

#### **NOTES:**

#### **Description**

Adds the source operand (second operand) and the carry (CF) flag, and subtracts the result from the destination operand (first operand). The result of the subtraction is stored in the destination operand. The destination operand can be a register or a memory location; the source operand can be an immediate, a register, or a memory location. (However, two memory operands cannot be used in one instruction.) The state of the CF flag represents a borrow from a previous subtraction.

When an immediate value is used as an operand, it is sign-extended to the length of the destination operand format.

The SBB instruction does not distinguish between signed or unsigned operands. Instead, the processor evaluates the result for both data types and sets the OF and CF flags to indicate a borrow in the signed or unsigned result, respectively. The SF flag indicates the sign of the signed result.

The SBB instruction is usually executed as part of a multibyte or multiword subtraction in which a SUB instruction is followed by a SBB instruction.

This instruction can be used with a LOCK prefix to allow the instruction to be executed atomically.

In 64-bit mode, the instruction's default operation size is 32 bits. Using a REX prefix in the form of REX.R permits access to additional registers (R8-R15). Using a REX prefix in the form of REX.W promotes operation to 64 bits. See the summary chart at the beginning of this section for encoding data and limits.

<sup>\*</sup> In 64-bit mode, r/m8 can not be encoded to access the following byte registers if a REX prefix is used: AH, BH, CH, DH.

#### **Operation**

 $DEST \leftarrow (DEST - (SRC + CF));$ 

#### **Flags Affected**

The OF, SF, ZF, AF, PF, and CF flags are set according to the result.

#### **Protected Mode Exceptions**

#GP(0) If the destination is located in a non-writable segment.

If a memory operand effective address is outside the CS, DS,

ES, FS, or GS segment limit.

If the DS, ES, FS, or GS register contains a NULL segment

selector.

#SS(0) If a memory operand effective address is outside the SS

segment limit.

#PF(fault-code) If a page fault occurs.

#AC(0) If alignment checking is enabled and an unaligned memory

reference is made while the current privilege level is 3.

#UD If the LOCK prefix is used but the destination is not a memory

operand.

#### **Real-Address Mode Exceptions**

#GP If a memory operand effective address is outside the CS, DS,

ES, FS, or GS segment limit.

#SS If a memory operand effective address is outside the SS

segment limit.

#UD If the LOCK prefix is used but the destination is not a memory

operand.

#### Virtual-8086 Mode Exceptions

#GP(0) If a memory operand effective address is outside the CS, DS,

ES, FS, or GS segment limit.

#SS(0) If a memory operand effective address is outside the SS

segment limit.

#PF(fault-code) If a page fault occurs.

#AC(0) If alignment checking is enabled and an unaligned memory

reference is made.

#UD If the LOCK prefix is used but the destination is not a memory

operand.

## **Compatibility Mode Exceptions**

Same exceptions as in protected mode.

### **64-Bit Mode Exceptions**

#SS(0) If a memory address referencing the SS segment is in a non-

canonical form.

#GP(0) If the memory address is in a non-canonical form.

#PF(fault-code) If a page fault occurs.

#AC(0) If alignment checking is enabled and an unaligned memory

reference is made while the current privilege level is 3.

#UD If the LOCK prefix is used but the destination is not a memory

operand.

# SCAS/SCASB/SCASW/SCASD—Scan String

Opcode	Instruction	64-Bit Mode	Compat/ Leg Mode	Description
AE	SCAS m8	Valid	Valid	Compare AL with byte at ES:(E)DI or RDI, then set status flags.*
AF	SCAS m16	Valid	Valid	Compare AX with word at ES:(E)DI or RDI, then set status flags.*
AF	SCAS m32	Valid	Valid	Compare EAX with doubleword at ES(E)DI or RDI then set status flags.*
REX.W + AF	SCAS m64	Valid	N.E.	Compare RAX with quadword at RDI or EDI then set status flags.
AE	SCASB	Valid	Valid	Compare AL with byte at ES:(E)DI or RDI then set status flags.*
AF	SCASW	Valid	Valid	Compare AX with word at ES:(E)DI or RDI then set status flags.*
AF	SCASD	Valid	Valid	Compare EAX with doubleword at ES:(E)DI or RDI then set status flags.*
REX.W + AF	SCASQ	Valid	N.E.	Compare RAX with quadword at RDI or EDI then set status flags.

#### **NOTES:**

# **Description**

In non-64-bit modes and in default 64-bit mode: this instruction compares a byte, word, doubleword or quadword specified using a memory operand with the value in AL, AX, or EAX. It then sets status flags in EFLAGS recording the results. The memory operand address is read from ES:(E)DI register (depending on the address-size attribute of the instruction and the current operational mode). Note that ES cannot be overridden with a segment override prefix.

At the assembly-code level, two forms of this instruction are allowed. The explicit-operand form and the no-operands form. The explicit-operand form (specified using the SCAS mnemonic) allows a memory operand to be specified explicitly. The memory operand must be a symbol that indicates the size and location of the operand value. The register operand is then automatically selected to match the size of the memory operand (AL register for byte comparisons, AX for word comparisons, EAX for doubleword comparisons). The explicit-operand form is provided to allow documentation. Note that the documentation provided by this form can be misleading. That is, the memory operand symbol must specify the correct type (size) of the operand (byte, word, or doubleword) but it does not have to specify the correct location. The location is always specified by ES:(E)DI.

<sup>\*</sup> In 64-bit mode, only 64-bit (RDI) and 32-bit (EDI) address sizes are supported. In non-64-bit mode, only 32-bit (EDI) and 16-bit (DI) address sizes are supported.

The no-operands form of the instruction uses a short form of SCAS. Again, ES:(E)DI is assumed to be the memory operand and AL, AX, or EAX is assumed to be the register operand. The size of operands is selected by the mnemonic: SCASB (byte comparison), SCASW (word comparison), or SCASD (doubleword comparison).

After the comparison, the (E)DI register is incremented or decremented automatically according to the setting of the DF flag in the EFLAGS register. If the DF flag is 0, the (E)DI register is incremented; if the DF flag is 1, the (E)DI register is decremented. The register is incremented or decremented by 1 for byte operations, by 2 for word operations, and by 4 for doubleword operations.

SCAS, SCASB, SCASW, SCASD, and SCASQ can be preceded by the REP prefix for block comparisons of ECX bytes, words, doublewords, or quadwords. Often, however, these instructions will be used in a LOOP construct that takes some action based on the setting of status flags. See "RDTSCP—Read Time-Stamp Counter and Processor ID" in this chapter for a description of the REP prefix.

In 64-bit mode, the instruction's default address size is 64-bits, 32-bit address size is supported using the prefix 67H. Using a REX prefix in the form of REX.W promotes operation on doubleword operand to 64 bits. The 64-bit no-operand mnemonic is SCASQ. Address of the memory operand is specified in either RDI or EDI, and AL/AX/EAX/RAX may be used as the register operand. After a comparison, the destination register is incremented or decremented by the current operand size (depending on the value of the DF flag). See the summary chart at the beginning of this section for encoding data and limits.

#### Operation

```
Non-64-bit Mode:
IF (Byte cmparison)
    THEN
         temp \leftarrow AL – SRC;
         SetStatusFlags(temp);
               THEN IF DF = 0
                    THEN (E)DI \leftarrow (E)DI + 1;
                    ELSE (E)DI \leftarrow (E)DI - 1; FI;
    ELSE IF (Word comparison)
         THEN
              temp \leftarrow AX – SRC;
              SetStatusFlags(temp);
              IF DF = 0
                    THEN (E)DI \leftarrow (E)DI + 2;
                    ELSE (E)DI \leftarrow (E)DI - 2; FI;
         FI:
    ELSE IF (Doubleword comparison)
         THEN
```

```
temp \leftarrow EAX - SRC;
               SetStatusFlags(temp);
               IF DF = 0
                    THEN (E)DI \leftarrow (E)DI + 4;
                    ELSE (E)DI \leftarrow (E)DI - 4; FI;
         FI;
FI;
64-bit Mode:
IF (Byte cmparison)
    THEN
         temp \leftarrow AL – SRC;
         SetStatusFlags(temp);
               THEN IF DF = 0
                    THEN (RIE)DI \leftarrow (RIE)DI + 1;
                    ELSE (R|E)DI \leftarrow (R|E)DI - 1; FI;
    ELSE IF (Word comparison)
         THEN
               temp \leftarrow AX – SRC;
               SetStatusFlags(temp);
               IF DF = 0
                    THEN (R|E)DI \leftarrow (R|E)DI + 2;
                    ELSE (R|E)DI \leftarrow (R|E)DI - 2; FI;
         FI;
    ELSE IF (Doubleword comparison)
         THEN
               temp \leftarrow EAX - SRC;
               SetStatusFlags(temp);
               IF DF = 0
                    THEN (R|E)DI \leftarrow (R|E)DI + 4;
                    ELSE (R|E)DI \leftarrow (R|E)DI - 4; FI;
         FI;
    ELSE IF (Quadword comparison using REX.W)
         THEN
               temp \leftarrow RAX - SRC;
               SetStatusFlags(temp);
               IF DF = 0
                    THEN (R|E)DI \leftarrow (R|E)DI + 8;
                    ELSE (R|E)DI \leftarrow (R|E)DI - 8;
               FI;
    FI;
F
```

#### **Flags Affected**

The OF, SF, ZF, AF, PF, and CF flags are set according to the temporary result of the comparison.

#### **Protected Mode Exceptions**

#GP(0) If a memory operand effective address is outside the limit of the

ES segment.

If the ES register contains a NULL segment selector.

If an illegal memory operand effective address in the ES

segment is given.

#PF(fault-code) If a page fault occurs.

#AC(0) If alignment checking is enabled and an unaligned memory

reference is made while the current privilege level is 3.

#UD If the LOCK prefix is used.

#### Real-Address Mode Exceptions

#GP If a memory operand effective address is outside the CS, DS,

ES, FS, or GS segment limit.

#SS If a memory operand effective address is outside the SS

segment limit.

**#UD** If the LOCK prefix is used.

### Virtual-8086 Mode Exceptions

#GP(0) If a memory operand effective address is outside the CS, DS,

ES, FS, or GS segment limit.

#SS(0) If a memory operand effective address is outside the SS

segment limit.

#PF(fault-code) If a page fault occurs.

#AC(0) If alignment checking is enabled and an unaligned memory

reference is made.

**#UD** If the LOCK prefix is used.

### **Compatibility Mode Exceptions**

Same exceptions as in protected mode.

# 64-Bit Mode Exceptions

#GP(0) If the memory address is in a non-canonical form.

#PF(fault-code) If a page fault occurs.

## INSTRUCTION SET REFERENCE, N-Z

If alignment checking is enabled and an unaligned memory reference is made while the current privilege level is 3. #AC(0)

If the LOCK prefix is used. #UD

# SETcc—Set Byte on Condition

Opcode	Instruction	64-Bit Mode	Compat/ Leg Mode	Description
0F 97	SETA r/m8	Valid	Valid	Set byte if above (CF=0 and ZF=0).
REX + 0F 97	SETA r/m8*	Valid	N.E.	Set byte if above (CF=0 and ZF=0).
0F 93	SETAE r/m8	Valid	Valid	Set byte if above or equal (CF=0).
REX + 0F 93	SETAE r/m8*	Valid	N.E.	Set byte if above or equal (CF=0).
0F 92	SETB r/m8	Valid	Valid	Set byte if below (CF=1).
REX + 0F 92	SETB r/m8*	Valid	N.E.	Set byte if below (CF=1).
0F 96	SETBE r/m8	Valid	Valid	Set byte if below or equal (CF=1 or ZF=1).
REX + 0F 96	SETBE r/m8*	Valid	N.E.	Set byte if below or equal (CF=1 or ZF=1).
0F 92	SETC r/m8	Valid	Valid	Set byte if carry (CF=1).
REX + 0F 92	SETC r/m8*	Valid	N.E.	Set byte if carry (CF=1).
0F 94	SETE r/m8	Valid	Valid	Set byte if equal (ZF=1).
REX + 0F 94	SETE r/m8*	Valid	N.E.	Set byte if equal (ZF=1).
OF 9F	SETG r/m8	Valid	Valid	Set byte if greater (ZF=0 and SF=0F).
REX + OF 9F	SETG r/m8*	Valid	N.E.	Set byte if greater (ZF=0 and SF=0F).
OF 9D	SETGE r/m8	Valid	Valid	Set byte if greater or equal (SF=OF).
REX + OF 9D	SETGE r/m8*	Valid	N.E.	Set byte if greater or equal (SF=OF).
0F 9C	SETL r/m8	Valid	Valid	Set byte if less (SF≠ OF).
REX + OF 9C	SETL r/m8*	Valid	N.E.	Set byte if less (SF≠ OF).
0F 9E	SETLE r/m8	Valid	Valid	Set byte if less or equal (ZF=1 or SF $\neq$ OF).
REX + 0F 9E	SETLE r/m8*	Valid	N.E.	Set byte if less or equal (ZF=1 or SF $\neq$ OF).
0F 96	SETNA r/m8	Valid	Valid	Set byte if not above (CF=1 or ZF=1).
REX + 0F 96	SETNA r/m8*	Valid	N.E.	Set byte if not above (CF=1 or ZF=1).

Opcode	Instruction	64-Bit Mode	Compat/ Leg Mode	Description
0F 92	SETNAE r/m8	Valid	Valid	Set byte if not above or equal (CF=1).
REX + 0F 92	SETNAE r/m8*	Valid	N.E.	Set byte if not above or equal (CF=1).
0F 93	SETNB r/m8	Valid	Valid	Set byte if not below (CF=0).
REX + 0F 93	SETNB r/m8*	Valid	N.E.	Set byte if not below (CF=0).
0F 97	SETNBE r/m8	Valid	Valid	Set byte if not below or equal (CF=0 and ZF=0).
REX + 0F 97	SETNBE r/m8*	Valid	N.E.	Set byte if not below or equal (CF=0 and ZF=0).
0F 93	SETNC r/m8	Valid	Valid	Set byte if not carry (CF=0).
REX + 0F 93	SETNC r/m8*	Valid	N.E.	Set byte if not carry (CF=0).
0F 95	SETNE r/m8	Valid	Valid	Set byte if not equal (ZF=0).
REX + 0F 95	SETNE r/m8*	Valid	N.E.	Set byte if not equal (ZF=0).
0F 9E	SETNG r/m8	Valid	Valid	Set byte if not greater (ZF=1 or SF $\neq$ OF)
REX + OF 9E	SETNG r/m8*	Valid	N.E.	Set byte if not greater (ZF=1 or SF $\neq$ OF).
0F 9C	SETNGE r/m8	Valid	Valid	Set byte if not greater or equal (SF $\neq$ OF).
REX + OF 9C	SETNGE r/m8*	Valid	N.E.	Set byte if not greater or equal ( $SF \neq OF$ ).
0F 9D	SETNL r/m8	Valid	Valid	Set byte if not less (SF=OF).
REX + OF 9D	SETNL r/m8*	Valid	N.E.	Set byte if not less (SF=OF).
0F 9F	SETNLE r/m8	Valid	Valid	Set byte if not less or equal (ZF=0 and SF=0F).
REX + OF 9F	SETNLE r/m8*	Valid	N.E.	Set byte if not less or equal (ZF=0 and SF=0F).
0F 91	SETNO r/m8	Valid	Valid	Set byte if not overflow (OF=0).
REX + 0F 91	SETNO r/m8*	Valid	N.E.	Set byte if not overflow (OF=0).
OF 9B	SETNP r/m8	Valid	Valid	Set byte if not parity (PF=0).
REX + OF 9B	SETNP r/m8*	Valid	N.E.	Set byte if not parity (PF=0).
0F 99	SETNS r/m8	Valid	Valid	Set byte if not sign (SF=0).
REX + 0F 99	SETNS r/m8*	Valid	N.E.	Set byte if not sign (SF=0).
0F 95	SETNZ r/m8	Valid	Valid	Set byte if not zero (ZF=0).

Opcode	Instruction	64-Bit Mode	Compat/ Leg Mode	Description
REX + 0F 95	SETNZ r/m8*	Valid	N.E.	Set byte if not zero (ZF=0).
0F 90	SETO r/m8	Valid	Valid	Set byte if overflow (OF=1)
REX + 0F 90	SETO r/m8*	Valid	N.E.	Set byte if overflow (OF=1).
OF 9A	SETP r/m8	Valid	Valid	Set byte if parity (PF=1).
REX + OF 9A	SETP r/m8*	Valid	N.E.	Set byte if parity (PF=1).
OF 9A	SETPE r/m8	Valid	Valid	Set byte if parity even (PF=1).
REX + OF 9A	SETPE r/m8*	Valid	N.E.	Set byte if parity even (PF=1).
0F 9B	SETPO r/m8	Valid	Valid	Set byte if parity odd (PF=0).
REX + OF 9B	SETPO r/m8*	Valid	N.E.	Set byte if parity odd (PF=0).
0F 98	SETS r/m8	Valid	Valid	Set byte if sign (SF=1).
REX + 0F 98	SETS r/m8*	Valid	N.E.	Set byte if sign (SF=1).
0F 94	SETZ r/m8	Valid	Valid	Set byte if zero (ZF=1).
REX + 0F 94	SETZ r/m8*	Valid	N.E.	Set byte if zero (ZF=1).

#### **NOTES:**

### **Description**

Sets the destination operand to 0 or 1 depending on the settings of the status flags (CF, SF, OF, ZF, and PF) in the EFLAGS register. The destination operand points to a byte register or a byte in memory. The condition code suffix (*cc*) indicates the condition being tested for.

The terms "above" and "below" are associated with the CF flag and refer to the relationship between two unsigned integer values. The terms "greater" and "less" are associated with the SF and OF flags and refer to the relationship between two signed integer values.

Many of the SETcc instruction opcodes have alternate mnemonics. For example, SETG (set byte if greater) and SETNLE (set if not less or equal) have the same opcode and test for the same condition: ZF equals 0 and SF equals OF. These alternate mnemonics are provided to make code more intelligible. Appendix B, "EFLAGS Condition Codes," in the Intel® 64 and IA-32 Architectures Software Developer's Manual, Volume 1, shows the alternate mnemonics for various test conditions.

Some languages represent a logical one as an integer with all bits set. This representation can be obtained by choosing the logically opposite condition for the SET*cc* instruction, then decrementing the result. For example, to test for overflow, use the SETNO instruction, then decrement the result.

<sup>\*</sup> In 64-bit mode, r/m8 can not be encoded to access the following byte registers if a REX prefix is used: AH, BH, CH, DH.

In IA-64 mode, the operand size is fixed at 8 bits. Use of REX prefix enable uniform addressing to additional byte registers. Otherwise, this instruction's operation is the same as in legacy mode and compatibility mode.

#### **Operation**

```
IF condition THEN DEST \leftarrow 1; ELSE DEST \leftarrow 0; FI;
```

#### **Flags Affected**

None.

#### **Protected Mode Exceptions**

#GP(0) If the destination is located in a non-writable segment.

If a memory operand effective address is outside the CS, DS,

ES, FS, or GS segment limit.

If the DS, ES, FS, or GS register contains a NULL segment

selector.

#SS(0) If a memory operand effective address is outside the SS

segment limit.

#PF(fault-code) If a page fault occurs.

#UD If the LOCK prefix is used.

### **Real-Address Mode Exceptions**

#GP If a memory operand effective address is outside the CS, DS,

ES, FS, or GS segment limit.

#SS If a memory operand effective address is outside the SS

segment limit.

#UD If the LOCK prefix is used.

# Virtual-8086 Mode Exceptions

#GP(0) If a memory operand effective address is outside the CS, DS,

ES, FS, or GS segment limit.

#SS(0) If a memory operand effective address is outside the SS

segment limit.

#PF(fault-code) If a page fault occurs.

# **Compatibility Mode Exceptions**

Same exceptions as in protected mode.

# **64-Bit Mode Exceptions**

#SS(0) If a memory address referencing the SS segment is in a non-

canonical form.

#GP(0) If the memory address is in a non-canonical form.

#PF(fault-code) If a page fault occurs.

#### SFENCE—Store Fence

Opcode	Instruction	64-Bit Mode	Compat /Leg Mode	Description
OF AE /7	SFENCE	Valid	Valid	Serializes store operations.

#### **Description**

Performs a serializing operation on all store-to-memory instructions that were issued prior the SFENCE instruction. This serializing operation guarantees that every store instruction that precedes in program order the SFENCE instruction is globally visible before any store instruction that follows the SFENCE instruction is globally visible. The SFENCE instruction is ordered with respect store instructions, other SFENCE instructions, any MFENCE instructions, and any serializing instructions (such as the CPUID instruction). It is not ordered with respect to load instructions or the LFENCE instruction.

Weakly ordered memory types can be used to achieve higher processor performance through such techniques as out-of-order issue, write-combining, and write-collapsing. The degree to which a consumer of data recognizes or knows that the data is weakly ordered varies among applications and may be unknown to the producer of this data. The SFENCE instruction provides a performance-efficient way of insuring store ordering between routines that produce weakly-ordered results and routines that consume this data.

This instruction's operation is the same in non-64-bit modes and 64-bit mode.

#### Operation

Wait On Following Stores Until(preceding stores globally visible);

#### Intel C/C++ Compiler Intrinsic Equivalent

void \_mm\_sfence(void)

#### **Exceptions (All Operating Modes)**

# SGDT—Store Global Descriptor Table Register

Opcode*	Instruction	64-Bit Mode	Compat/ Leg Mode	Description
0F 01 /0	SGDT m	Valid	Valid	Store GDTR to m.

#### **NOTES:**

### **Description**

Stores the content of the global descriptor table register (GDTR) in the destination operand. The destination operand specifies a memory location.

In legacy or compatibility mode, the destination operand is a 6-byte memory location. If the operand-size attribute is 16 bits, the limit is stored in the low 2 bytes and the 24-bit base address is stored in bytes 3-5, and byte 6 is zero-filled. If the operand-size attribute is 32 bits, the 16-bit limit field of the register is stored in the low 2 bytes of the memory location and the 32-bit base address is stored in the high 4 bytes.

In IA-32e mode, the operand size is fixed at 8+2 bytes. The instruction stores an 8-byte base and a 2-byte limit.

SGDT is useful only by operating-system software. However, it can be used in application programs without causing an exception to be generated. See "LGDT/LIDT—Load Global/Interrupt Descriptor Table Register" in Chapter 3, *Intel*® 64 and IA-32 Architectures Software Developer's Manual, Volume 2A, for information on loading the GDTR and IDTR.

### IA-32 Architecture Compatibility

The 16-bit form of the SGDT is compatible with the Intel 286 processor if the upper 8 bits are not referenced. The Intel 286 processor fills these bits with 1s; the Pentium 4, Intel Xeon, P6 processor family, Pentium, Intel486, and Intel386™ processors fill these bits with 0s.

# Operation

```
IF instruction is SGDT

IF OperandSize = 16

THEN

DEST[0:15] \leftarrow GDTR(Limit);
DEST[16:39] \leftarrow GDTR(Base); (* 24 bits of base address stored *)
DEST[40:47] \leftarrow 0;
ELSE IF (32-bit Operand Size)
DEST[0:15] \leftarrow GDTR(Limit);
DEST[16:47] \leftarrow GDTR(Base); (* Full 32-bit base address stored *)
```

<sup>\*</sup> See IA-32 Architecture Compatibility section below.

```
FI; ELSE (* 64-bit Operand Size *) DEST[0:15] \leftarrow GDTR(Limit); \\ DEST[16:79] \leftarrow GDTR(Base); (* Full 64-bit base address stored *) \\ FI; FI;
```

#### **Flags Affected**

None.

#### **Protected Mode Exceptions**

**#UD** If the destination operand is a register.

If the LOCK prefix is used.

#GP(0) If the destination is located in a non-writable segment.

If a memory operand effective address is outside the CS, DS,

ES, FS, or GS segment limit.

If the DS, ES, FS, or GS register is used to access memory and it

contains a NULL segment selector.

#SS(0) If a memory operand effective address is outside the SS

segment limit.

#PF(fault-code) If a page fault occurs.

#AC(0) If alignment checking is enabled and an unaligned memory

reference is made while the current privilege level is 3.

#### Real-Address Mode Exceptions

**#UD** If the destination operand is a register.

If the LOCK prefix is used.

#GP If a memory operand effective address is outside the CS, DS,

ES, FS, or GS segment limit.

#SS If a memory operand effective address is outside the SS

segment limit.

#### Virtual-8086 Mode Exceptions

#UD If the destination operand is a register.

If the LOCK prefix is used.

#GP(0) If a memory operand effective address is outside the CS, DS,

ES, FS, or GS segment limit.

#SS(0) If a memory operand effective address is outside the SS

segment limit.

#PF(fault-code) If a page fault occurs.

#AC(0) If alignment checking is enabled and an unaligned memory

reference is made.

# **Compatibility Mode Exceptions**

Same exceptions as in protected mode.

### **64-Bit Mode Exceptions**

#SS(0) If a memory address referencing the SS segment is in a non-

canonical form.

**#UD** If the destination operand is a register.

If the LOCK prefix is used.

#GP(0) If the memory address is in a non-canonical form.

#PF(fault-code) If a page fault occurs.

#AC(0) If alignment checking is enabled and an unaligned memory

reference is made while the current privilege level is 3.

					CI IC.	
н	11—	.I IOU	ЫΔΙ	Precision	Shift	Ott
		·DUU	DIE I	- I EUISIUII		

Opcode	Instruction	64-Bit Mode	Compat/ Leg Mode	Description
OF A4	SHLD r/m16, r16, imm8	Valid	Valid	Shift r/m16 to left imm8 places while shifting bits from r16 in from the right.
0F A5	SHLD <i>r/m16, r16,</i> CL	Valid	Valid	Shift $r/m16$ to left CL places while shifting bits from $r16$ in from the right.
OF A4	SHLD r/m32, r32, imm8	Valid	Valid	Shift r/m32 to left imm8 places while shifting bits from r32 in from the right.
REX.W + 0F A4	SHLD r/m64, r64, imm8	Valid	N.E.	Shift <i>r/m64</i> to left <i>imm8</i> places while shifting bits from <i>r64</i> in from the right.
OF A5	SHLD <i>r/m32, r32</i> , CL	Valid	Valid	Shift $r/m32$ to left CL places while shifting bits from $r32$ in from the right.
REX.W + 0F A5	SHLD <i>r/m64, r64</i> , CL	Valid	N.E.	Shift <i>r/m64</i> to left CL places while shifting bits from <i>r64</i> in from the right.

#### **Description**

The SHLD instruction is used for multi-precision shifts of 64 bits or more.

The instruction shifts the first operand (destination operand) to the left the number of bits specified by the third operand (count operand). The second operand (source operand) provides bits to shift in from the right (starting with bit 0 of the destination operand).

The destination operand can be a register or a memory location; the source operand is a register. The count operand is an unsigned integer that can be stored in an immediate byte or in the CL register. If the count operand is CL, the shift count is the logical AND of CL and a count mask. In non-64-bit modes and default 64-bit mode; only bits 0 through 4 of the count are used. This masks the count to a value between 0 and 31. If a count is greater than the operand size, the result is undefined.

If the count is 1 or greater, the CF flag is filled with the last bit shifted out of the destination operand. For a 1-bit shift, the OF flag is set if a sign change occurred; otherwise, it is cleared. If the count operand is 0, flags are not affected.

In 64-bit mode, the instruction's default operation size is 32 bits. Using a REX prefix in the form of REX.R permits access to additional registers (R8-R15). Using a REX prefix in the form of REX.W promotes operation to 64 bits (upgrading the count mask

to 6 bits). See the summary chart at the beginning of this section for encoding data and limits.

#### **Operation**

```
IF (In 64-Bit Mode and REX.W = 1)
    THEN COUNT \leftarrow COUNT MOD 64;
   ELSE COUNT ← COUNT MOD 32:
FΙ
SIZE \leftarrow OperandSize;
IF COUNT = 0
   THEN
        No operation;
   ELSE
        IF COUNT > SIZE
             THEN (* Bad parameters *)
                  DEST is undefined:
                  CF, OF, SF, ZF, AF, PF are undefined;
             ELSE (* Perform the shift *)
                  CF \leftarrow BIT[DEST, SIZE - COUNT];
                  (* Last bit shifted out on exit *)
                  FOR i ← SIZE - 1 DOWN TO COUNT
                       DO
                            Bit(DEST, i) \leftarrow Bit(DEST, i - COUNT);
                       OD:
                  FOR i ← COUNT - 1 DOWN TO 0
                       DO
                            BIT[DEST, i] \leftarrow BIT[SRC, i - COUNT + SIZE];
                       OD;
        FI;
FI:
```

### **Flags Affected**

If the count is 1 or greater, the CF flag is filled with the last bit shifted out of the destination operand and the SF, ZF, and PF flags are set according to the value of the result. For a 1-bit shift, the OF flag is set if a sign change occurred; otherwise, it is cleared. For shifts greater than 1 bit, the OF flag is undefined. If a shift occurs, the AF flag is undefined. If the count operand is 0, the flags are not affected. If the count is greater than the operand size, the flags are undefined.

### **Protected Mode Exceptions**

#GP(0) If the destination is located in a non-writable segment.

If a memory operand effective address is outside the CS, DS,

ES, FS, or GS segment limit.

If the DS, ES, FS, or GS register contains a NULL segment

selector.

#SS(0) If a memory operand effective address is outside the SS

segment limit.

#PF(fault-code) If a page fault occurs.

#AC(0) If alignment checking is enabled and an unaligned memory

reference is made while the current privilege level is 3.

#UD If the LOCK prefix is used.

#### **Real-Address Mode Exceptions**

#GP If a memory operand effective address is outside the CS, DS,

ES, FS, or GS segment limit.

#SS If a memory operand effective address is outside the SS

segment limit.

#UD If the LOCK prefix is used.

#### Virtual-8086 Mode Exceptions

#GP(0) If a memory operand effective address is outside the CS, DS,

ES, FS, or GS segment limit.

#SS(0) If a memory operand effective address is outside the SS

segment limit.

#PF(fault-code) If a page fault occurs.

#AC(0) If alignment checking is enabled and an unaligned memory

reference is made.

#UD If the LOCK prefix is used.

#### **Compatibility Mode Exceptions**

Same exceptions as in protected mode.

#### **64-Bit Mode Exceptions**

#SS(0) If a memory address referencing the SS segment is in a non-

canonical form.

#GP(0) If the memory address is in a non-canonical form.

#PF(fault-code) If a page fault occurs.

#AC(0) If alignment checking is enabled and an unaligned memory

reference is made while the current privilege level is 3.

**#UD** If the LOCK prefix is used.

# SHRD—Double Precision Shift Right

Opcode	Instruction	64-Bit Mode	Compat/ Leg Mode	Description
OF AC	SHRD r/m16, r16, imm8	Valid	Valid	Shift r/m16 to right imm8 places while shifting bits from r16 in from the left.
OF AD	SHRD <i>r/m16,</i> <i>r16,</i> CL	Valid	Valid	Shift <i>r/m16</i> to right CL places while shifting bits from <i>r16</i> in from the left.
OF AC	SHRD r/m32, r32, imm8	Valid	Valid	Shift r/m32 to right imm8 places while shifting bits from r32 in from the left.
REX.W + OF AC	SHRD r/m64, r64, imm8	Valid	N.E.	Shift r/m64 to right imm8 places while shifting bits from r64 in from the left.
OF AD	SHRD <i>r/m32,</i> <i>r32</i> , CL	Valid	Valid	Shift <i>r/m32</i> to right CL places while shifting bits from <i>r32</i> in from the left.
REX.W + OF AD	SHRD <i>r/m64,</i> <i>r64</i> , CL	Valid	N.E.	Shift <i>r/m64</i> to right CL places while shifting bits from <i>r64</i> in from the left.

### **Description**

The SHRD instruction is useful for multi-precision shifts of 64 bits or more.

The instruction shifts the first operand (destination operand) to the right the number of bits specified by the third operand (count operand). The second operand (source operand) provides bits to shift in from the left (starting with the most significant bit of the destination operand).

The destination operand can be a register or a memory location; the source operand is a register. The count operand is an unsigned integer that can be stored in an immediate byte or the CL register. If the count operand is CL, the shift count is the logical AND of CL and a count mask. In non-64-bit modes and default 64-bit mode, the width of the count mask is 5 bits. Only bits 0 through 4 of the count register are used (masking the count to a value between 0 and 31). If the count is greater than the operand size, the result is undefined.

If the count is 1 or greater, the CF flag is filled with the last bit shifted out of the destination operand. For a 1-bit shift, the OF flag is set if a sign change occurred; otherwise, it is cleared. If the count operand is 0, flags are not affected.

In 64-bit mode, the instruction's default operation size is 32 bits. Using a REX prefix in the form of REX.R permits access to additional registers (R8-R15). Using a REX prefix in the form of REX.W promotes operation to 64 bits (upgrading the count mask

to 6 bits). See the summary chart at the beginning of this section for encoding data and limits.

### **Operation**

```
IF (\ln 64-Bit Mode and REX.W = 1)
   THEN COUNT ← COUNT MOD 64;
   ELSE COUNT ← COUNT MOD 32:
FΙ
SIZE \leftarrow OperandSize;
IF COUNT = 0
   THEN
        No operation;
   ELSE
        IF COUNT > SIZE
             THEN (* Bad parameters *)
                  DEST is undefined:
                  CF, OF, SF, ZF, AF, PF are undefined;
             ELSE (* Perform the shift *)
                  CF ← BIT[DEST, COUNT - 1]; (* Last bit shifted out on exit *)
                  FOR i \leftarrow 0 TO SIZE – 1 – COUNT
                       DO
                            BIT[DEST, i] \leftarrow BIT[DEST, i + COUNT];
                       OD:
                  FOR i ← SIZE - COUNT TO SIZE - 1
                       DO
                            BIT[DEST,i] \leftarrow BIT[SRC, i + COUNT - SIZE];
                       OD;
        FI;
FI;
```

# **Flags Affected**

If the count is 1 or greater, the CF flag is filled with the last bit shifted out of the destination operand and the SF, ZF, and PF flags are set according to the value of the result. For a 1-bit shift, the OF flag is set if a sign change occurred; otherwise, it is cleared. For shifts greater than 1 bit, the OF flag is undefined. If a shift occurs, the AF flag is undefined. If the count operand is 0, the flags are not affected. If the count is greater than the operand size, the flags are undefined.

### **Protected Mode Exceptions**

#GP(0) If the destination is located in a non-writable segment.

If a memory operand effective address is outside the CS, DS, ES, FS, or GS segment limit.

If the DS, ES, FS, or GS register contains a NULL segment

selector.

#SS(0) If a memory operand effective address is outside the SS

segment limit.

#PF(fault-code) If a page fault occurs.

#AC(0) If alignment checking is enabled and an unaligned memory

reference is made while the current privilege level is 3.

**#UD** If the LOCK prefix is used.

### Real-Address Mode Exceptions

#GP If a memory operand effective address is outside the CS, DS,

ES, FS, or GS segment limit.

#SS If a memory operand effective address is outside the SS

segment limit.

#UD If the LOCK prefix is used.

#### Virtual-8086 Mode Exceptions

#GP(0) If a memory operand effective address is outside the CS, DS,

ES, FS, or GS segment limit.

#SS(0) If a memory operand effective address is outside the SS

segment limit.

#PF(fault-code) If a page fault occurs.

#AC(0) If alignment checking is enabled and an unaligned memory

reference is made.

**#UD** If the LOCK prefix is used.

### **Compatibility Mode Exceptions**

Same exceptions as in protected mode.

#### **64-Bit Mode Exceptions**

#SS(0) If a memory address referencing the SS segment is in a non-

canonical form.

#GP(0) If the memory address is in a non-canonical form.

#PF(fault-code) If a page fault occurs.

#AC(0) If alignment checking is enabled and an unaligned memory

reference is made while the current privilege level is 3.

#UD If the LOCK prefix is used.

Opcode	Instruction		Compat/ Leg Mode	Description
66 OF C6 /r ib	SHUFPD xmm1, xmm2/m128, imm8	Valid	Valid	Shuffle packed double-precision floating-point values selected by imm8 from xmm1 and xmm2/m128 to xmm1.

### **Description**

Moves either of the two packed double-precision floating-point values from destination operand (first operand) into the low quadword of the destination operand; moves either of the two packed double-precision floating-point values from the source operand into to the high quadword of the destination operand (see Figure 4-14). The select operand (third operand) determines which values are moved to the destination operand.

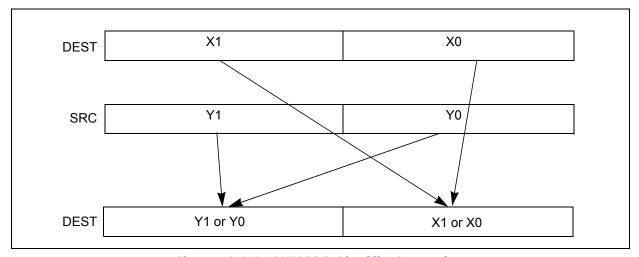


Figure 4-14. SHUFPD Shuffle Operation

The source operand can be an XMM register or a 128-bit memory location. The destination operand is an XMM register. The select operand is an 8-bit immediate: bit 0 selects which value is moved from the destination operand to the result (where 0 selects the low quadword and 1 selects the high quadword) and bit 1 selects which value is moved from the source operand to the result. Bits 2 through 7 of the select operand are reserved and must be set to 0.

In 64-bit mode, using a REX prefix in the form of REX.R permits this instruction to access additional registers (XMM8-XMM15).

#### **Operation**

```
IF SELECT[0] = 0

THEN DEST[63:0] \leftarrow DEST[63:0];

ELSE DEST[63:0] \leftarrow DEST[127:64]; FI;

IF SELECT[1] = 0

THEN DEST[127:64] \leftarrow SRC[63:0];

ELSE DEST[127:64] \leftarrow SRC[127:64]; FI;
```

#### Intel C/C++ Compiler Intrinsic Equivalent

SHUFPD \_\_m128d \_mm\_shuffle\_pd(\_\_m128d a, \_\_m128d b, unsigned int imm8)

#### **SIMD Floating-Point Exceptions**

None.

#### **Protected Mode Exceptions**

#GP(0) For an illegal memory operand effective address in the CS, DS,

ES, FS or GS segments.

If a memory operand is not aligned on a 16-byte boundary,

regardless of segment.

#SS(0) For an illegal address in the SS segment.

#PF(fault-code) For a page fault. #NM If CR0.TS[bit 3] = 1. #UD If CR0.EM[bit 2] = 1.

If CR4.OSFXSR[bit 9] = 0.

If CPUID.01H:EDX.SSE2[bit 26] = 0.

If the LOCK prefix is used.

### **Real-Address Mode Exceptions**

#GP If a memory operand is not aligned on a 16-byte boundary,

regardless of segment.

If any part of the operand lies outside the effective address

space from 0 to FFFFH.

#NM If CR0.TS[bit 3] = 1. #UD If CR0.EM[bit 2] = 1.

If CR4.OSFXSR[bit 9] = 0.

If CPUID.01H:EDX.SSE2[bit 26] = 0.

If the LOCK prefix is used.

### Virtual-8086 Mode Exceptions

Same exceptions as in real address mode.

#PF(fault-code) For a page fault.

### **Compatibility Mode Exceptions**

Same exceptions as in protected mode.

#### **64-Bit Mode Exceptions**

#SS(0) If a memory address referencing the SS segment is in a non-

canonical form.

#GP(0) If memory operand is not aligned on a 16-byte boundary,

regardless of segment.

If the memory address is in a non-canonical form.

#PF(fault-code) For a page fault.

#NM If CR0.TS[bit 3] = 1. #UD If CR0.EM[bit 2] = 1.

If CR4.OSFXSR[bit 9] = 0.

If CPUID.01H:EDX.SSE2[bit 26] = 0.

If the LOCK prefix is used.

SHUFPS—Shuffle Packed Single	e-Precision Floa	ating-Point Values
------------------------------	------------------	--------------------

Opcode	Instruction	64-Bit Mode	Compat/ Leg Mode	Description
0F C6 /r ib	SHUFPS xmm1, xmm2/m128, imm8	Valid	Valid	Shuffle packed single-precision floating-point values selected by imm8 from xmm1 and xmm1/m128 to xmm1.

#### **Description**

Moves two of the four packed single-precision floating-point values from the destination operand (first operand) into the low quadword of the destination operand; moves two of the four packed single-precision floating-point values from the source operand (second operand) into to the high quadword of the destination operand (see Figure 4-15). The select operand (third operand) determines which values are moved to the destination operand.

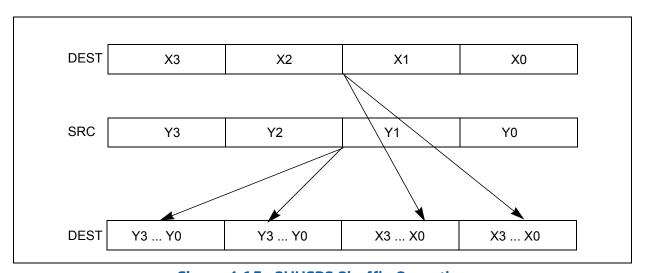


Figure 4-15. SHUFPS Shuffle Operation

The source operand can be an XMM register or a 128-bit memory location. The destination operand is an XMM register. The select operand is an 8-bit immediate: bits 0 and 1 select the value to be moved from the destination operand to the low doubleword of the result, bits 2 and 3 select the value to be moved from the destination operand to the second doubleword of the result, bits 4 and 5 select the value to be moved from the source operand to the third doubleword of the result, and bits 6 and 7 select the value to be moved from the source operand to the high doubleword of the result.

In 64-bit mode, using a REX prefix in the form of REX.R permits this instruction to access additional registers (XMM8-XMM15).

#### **Operation**

```
CASE (SELECT[1:0]) OF
   0: DEST[31:0] \leftarrow DEST[31:0];
   1: DEST[31:0] \leftarrow DEST[63:32];
   2: DEST[31:0] ← DEST[95:64];
   3: DEST[31:0] \leftarrow DEST[127:96];
ESAC:
CASE (SELECT[3:2]) OF
   0: DEST[63:32] \leftarrow DEST[31:0];
   1: DEST[63:32] \leftarrow DEST[63:32];
   2: DEST[63:32] ← DEST[95:64];
   3: DEST[63:32] \leftarrow DEST[127:96];
ESAC;
CASE (SELECT[5:4]) OF
   0: DEST[95:64] \leftarrow SRC[31:0];
   1: DEST[95:64] \leftarrow SRC[63:32];
   2: DEST[95:64] \leftarrow SRC[95:64];
   3: DEST[95:64] \leftarrow SRC[127:96];
ESAC:
CASE (SELECT[7:6]) OF
   0: DEST[127:96] \leftarrow SRC[31:0];
   1: DEST[127:96] \leftarrow SRC[63:32];
   2: DEST[127:96] ← SRC[95:64];
   3: DEST[127:96] \leftarrow SRC[127:96];
ESAC:
Intel C/C++ Compiler Intrinsic Equivalent
```

\_\_m128 \_mm\_shuffle\_ps(\_\_m128 a, \_\_m128 b, unsigned int imm8) SHUFPS

#### SIMD Floating-Point Exceptions

None.

#### **Protected Mode Exceptions**

#GP(0)For an illegal memory operand effective address in the CS, DS,

ES, FS or GS segments.

If a memory operand is not aligned on a 16-byte boundary,

regardless of segment.

#SS(0) For an illegal address in the SS segment.

#PF(fault-code) For a page fault. #NM If CR0.TS[bit 3] = 1. #UD If CR0.EM[bit 2] = 1.

If CR4.OSFXSR[bit 9] = 0.

If CPUID.01H:EDX.SSE[bit 25] = 0.

If the LOCK prefix is used.

#### **Real-Address Mode Exceptions**

#GP If a memory operand is not aligned on a 16-byte boundary,

regardless of segment.

If any part of the operand lies outside the effective address

space from 0 to FFFFH.

#NM If CR0.TS[bit 3] = 1. #UD If CR0.EM[bit 2] = 1.

If CR4.OSFXSR[bit 9] = 0.

If CPUID.01H:EDX.SSE[bit 25] = 0.

If the LOCK prefix is used.

#### Virtual-8086 Mode Exceptions

Same exceptions as in real address mode.

#PF(fault-code) For a page fault.

### **Compatibility Mode Exceptions**

Same exceptions as in protected mode.

#### **64-Bit Mode Exceptions**

#SS(0) If a memory address referencing the SS segment is in a non-

canonical form.

#GP(0) If memory operand is not aligned on a 16-byte boundary,

regardless of segment.

If the memory address is in a non-canonical form.

#PF(fault-code) For a page fault.

#NM If CR0.TS[bit 3] = 1. #UD If CR0.EM[bit 2] = 1.

If CR4.OSFXSR[bit 9] = 0.

If CPUID.01H:EDX.SSE[bit 25] = 0.

If the LOCK prefix is used.

# SIDT—Store Interrupt Descriptor Table Register

Opcode	Instruction	64-Bit Mode	Compat/ Leg Mode	Description
0F 01 /1	SIDT m	Valid	Valid	Store IDTR to m.

#### **Description**

Stores the content the interrupt descriptor table register (IDTR) in the destination operand. The destination operand specifies a 6-byte memory location.

In non-64-bit modes, if the operand-size attribute is 32 bits, the 16-bit limit field of the register is stored in the low 2 bytes of the memory location and the 32-bit base address is stored in the high 4 bytes. If the operand-size attribute is 16 bits, the limit is stored in the low 2 bytes and the 24-bit base address is stored in the third, fourth, and fifth byte, with the sixth byte filled with 0s.

In 64-bit mode, the operand size fixed at 8+2 bytes. The instruction stores 8-byte base and 2-byte limit values.

SIDT is only useful in operating-system software; however, it can be used in application programs without causing an exception to be generated. See "LGDT/LIDT—Load Global/Interrupt Descriptor Table Register" in Chapter 3, *Intel*® *64 and IA-32 Architectures Software Developer's Manual, Volume 2A*, for information on loading the GDTR and IDTR.

### IA-32 Architecture Compatibility

The 16-bit form of SIDT is compatible with the Intel 286 processor if the upper 8 bits are not referenced. The Intel 286 processor fills these bits with 1s; the Pentium 4, Intel Xeon, P6 processor family, Pentium, Intel486, and Intel386 processors fill these bits with 0s.

### **Operation**

```
IF instruction is SIDT THEN

IF OperandSize = 16

THEN

DEST[0:15] \leftarrow IDTR(Limit);
DEST[16:39] \leftarrow IDTR(Base); (* 24 bits of base address stored; *)
DEST[40:47] \leftarrow 0;
ELSE IF (32-bit Operand Size)
DEST[0:15] \leftarrow IDTR(Limit);
DEST[16:47] \leftarrow IDTR(Base); FI; (* Full 32-bit base address stored *)
ELSE (* 64-bit Operand Size *)
DEST[0:15] \leftarrow IDTR(Limit);
```

DEST[16:79]  $\leftarrow$  IDTR(Base); (\* Full 64-bit base address stored \*)

FI;

FI;

#### **Flags Affected**

None.

#### **Protected Mode Exceptions**

#GP(0) If the destination is located in a non-writable segment.

If a memory operand effective address is outside the CS, DS,

ES, FS, or GS segment limit.

If the DS, ES, FS, or GS register is used to access memory and it

contains a NULL segment selector.

#SS(0) If a memory operand effective address is outside the SS

segment limit.

#PF(fault-code) If a page fault occurs.

#AC(0) If alignment checking is enabled and an unaligned memory

reference is made while the current privilege level is 3.

#UD If the LOCK prefix is used.

### **Real-Address Mode Exceptions**

#GP If a memory operand effective address is outside the CS, DS,

ES, FS, or GS segment limit.

#SS If a memory operand effective address is outside the SS

segment limit.

#UD If the LOCK prefix is used.

### Virtual-8086 Mode Exceptions

#GP(0) If a memory operand effective address is outside the CS, DS,

ES, FS, or GS segment limit.

#SS(0) If a memory operand effective address is outside the SS

segment limit.

#PF(fault-code) If a page fault occurs.

#AC(0) If alignment checking is enabled and an unaligned memory

reference is made.

**#UD** If the LOCK prefix is used.

### **Compatibility Mode Exceptions**

Same exceptions as in protected mode.

### **64-Bit Mode Exceptions**

#SS(0) If a memory address referencing the SS segment is in a non-

canonical form.

**#UD** If the destination operand is a register.

If the LOCK prefix is used.

#GP(0) If the memory address is in a non-canonical form.

#PF(fault-code) If a page fault occurs.

#AC(0) If alignment checking is enabled and an unaligned memory

reference is made while the current privilege level is 3.

SLDT—Store	l ocal (	Descriptor :	Table	Register
JCD1—JCOIC	cocai i	Descriptor	I abic	Negistei

Opcode	Instruction	64-Bit Mode	Compat/ Leg Mode	Description
OF 00 /0	SLDT r/m16	Valid	Valid	Stores segment selector from LDTR in <i>r/m16</i> .
REX.W + 0F 00 /0	SLDT r64/m16	Valid	Valid	Stores segment selector from LDTR in r64/m16.

#### **Description**

Stores the segment selector from the local descriptor table register (LDTR) in the destination operand. The destination operand can be a general-purpose register or a memory location. The segment selector stored with this instruction points to the segment descriptor (located in the GDT) for the current LDT. This instruction can only be executed in protected mode.

Outside IA-32e mode, when the destination operand is a 32-bit register, the 16-bit segment selector is copied into the low-order 16 bits of the register. The high-order 16 bits of the register are cleared for the Pentium 4, Intel Xeon, and P6 family processors. They are undefined for Pentium, Intel486, and Intel386 processors. When the destination operand is a memory location, the segment selector is written to memory as a 16-bit quantity, regardless of the operand size.

In compatibility mode, when the destination operand is a 32-bit register, the 16-bit segment selector is copied into the low-order 16 bits of the register. The high-order 16 bits of the register are cleared. When the destination operand is a memory location, the segment selector is written to memory as a 16-bit quantity, regardless of the operand size.

In 64-bit mode, using a REX prefix in the form of REX.R permits access to additional registers (R8-R15). The behavior of SLDT with a 64-bit register is to zero-extend the 16-bit selector and store it in the register. If the destination is memory and operand size is 64, SLDT will write the 16-bit selector to memory as a 16-bit quantity, regardless of the operand size

### **Operation**

DEST  $\leftarrow$  LDTR(SegmentSelector);

### **Flags Affected**

None.

# **Protected Mode Exceptions**

#GP(0) If the destination is located in a non-writable segment.

If a memory operand effective address is outside the CS, DS,

ES, FS, or GS segment limit.

If the DS, ES, FS, or GS register is used to access memory and it

contains a NULL segment selector.

#SS(0) If a memory operand effective address is outside the SS

segment limit.

#PF(fault-code) If a page fault occurs.

#AC(0) If alignment checking is enabled and an unaligned memory

reference is made while the current privilege level is 3.

#UD If the LOCK prefix is used.

### **Real-Address Mode Exceptions**

#UD The SLDT instruction is not recognized in real-address mode.

If the LOCK prefix is used.

#### Virtual-8086 Mode Exceptions

#UD The SLDT instruction is not recognized in virtual-8086 mode.

If the LOCK prefix is used.

#### **Compatibility Mode Exceptions**

Same exceptions as in protected mode.

#### **64-Bit Mode Exceptions**

#SS(0) If a memory address referencing the SS segment is in a non-

canonical form.

#GP(0) If the memory address is in a non-canonical form.

#PF(fault-code) If a page fault occurs.

#AC(0) If alignment checking is enabled and an unaligned memory

reference is made while the current privilege level is 3.

#UD If the LOCK prefix is used.

CMCIA	_Store	Machine	Status	Mord
SIMOW	<b>—3</b> tore	Macilie	Status	wolu

Opcode	Instruction	64-Bit Mode	Compat/ Leg Mode	Description
0F 01 /4	SMSW r/m16	Valid	Valid	Store machine status word to r/m16.
0F 01 /4	SMSW r32/m16	Valid	Valid	Store machine status word in low-order 16 bits of <i>r32/m16</i> ; high-order 16 bits of <i>r32</i> are undefined.
REX.W + 0F 01 /4	SMSW r64/m16	Valid	Valid	Store machine status word in low-order 16 bits of <i>r64/m16</i> ; high-order 16 bits of <i>r32</i> are undefined.

#### **Description**

Stores the machine status word (bits 0 through 15 of control register CR0) into the destination operand. The destination operand can be a general-purpose register or a memory location.

In non-64-bit modes, when the destination operand is a 32-bit register, the low-order 16 bits of register CR0 are copied into the low-order 16 bits of the register and the high-order 16 bits are undefined. When the destination operand is a memory location, the low-order 16 bits of register CR0 are written to memory as a 16-bit quantity, regardless of the operand size.

In 64-bit mode, the behavior of the SMSW instruction is defined by the following examples:

- SMSW r16 operand size 16, store CR0[15:0] in r16
- SMSW r32 operand size 32, zero-extend CR0[31:0], and store in r32
- SMSW r64 operand size 64, zero-extend CR0[63:0], and store in r64
- SMSW m16 operand size 16, store CR0[15:0] in m16
- SMSW m16 operand size 32, store CR0[15:0] in m16 (not m32)
- SMSW m16 operands size 64, store CR0[15:0] in m16 (not m64)

SMSW is only useful in operating-system software. However, it is not a privileged instruction and can be used in application programs. The is provided for compatibility with the Intel 286 processor. Programs and procedures intended to run on the Pentium 4, Intel Xeon, P6 family, Pentium, Intel486, and Intel386 processors should use the MOV (control registers) instruction to load the machine status word.

See "Changes to Instruction Behavior in VMX Non-Root Operation" in Chapter 21 of the *Intel*® 64 and *IA-32 Architectures Software Developer's Manual, Volume 3B*, for more information about the behavior of this instruction in VMX non-root operation.

#### **Operation**

DEST ← CR0[15:0]; (\* Machine status word \*)

#### Flags Affected

None.

#### **Protected Mode Exceptions**

#GP(0) If the destination is located in a non-writable segment.

If a memory operand effective address is outside the CS, DS,

ES, FS, or GS segment limit.

If the DS, ES, FS, or GS register is used to access memory and it

contains a NULL segment selector.

#SS(0) If a memory operand effective address is outside the SS

segment limit.

#PF(fault-code) If a page fault occurs.

#AC(0) If alignment checking is enabled and an unaligned memory

reference is made while the current privilege level is 3.

#UD If the LOCK prefix is used.

#### Real-Address Mode Exceptions

#GP If a memory operand effective address is outside the CS, DS,

ES, FS, or GS segment limit.

#SS(0) If a memory operand effective address is outside the SS

segment limit.

#UD If the LOCK prefix is used.

#### Virtual-8086 Mode Exceptions

#GP(0) If a memory operand effective address is outside the CS, DS,

ES, FS, or GS segment limit.

#SS(0) If a memory operand effective address is outside the SS

segment limit.

#PF(fault-code) If a page fault occurs.

#AC(0) If alignment checking is enabled and an unaligned memory

reference is made.

#UD If the LOCK prefix is used.

#### **Compatibility Mode Exceptions**

Same exceptions as in protected mode.

### **64-Bit Mode Exceptions**

#SS(0) If a memory address referencing the SS segment is in a non-

canonical form.

#GP(0) If the memory address is in a non-canonical form.

#PF(fault-code) If a page fault occurs.

#AC(0) If alignment checking is enabled and an unaligned memory

reference is made while the current privilege level is 3.

**#UD** If the LOCK prefix is used.

# SQRTPD—Compute Square Roots of Packed Double-Precision Floating-Point Values

Opcode	Instruction	64-Bit Mode	Compat/ Leg Mode	Description
66 0F 51 /r	SQRTPD xmm1, xmm2/m128	Valid	Valid	Computes square roots of the packed double-precision floating-point values in xmm2/m128 and stores the results in xmm1.

#### **Description**

Performs a SIMD computation of the square roots of the two packed double-precision floating-point values in the source operand (second operand) stores the packed double-precision floating-point results in the destination operand. The source operand can be an XMM register or a 128-bit memory location. The destination operand is an XMM register. See Figure 11-3 in the *Intel*® *64 and IA-32 Architectures Software Developer's Manual, Volume 1*, for an illustration of a SIMD double-precision floating-point operation.

In 64-bit mode, using a REX prefix in the form of REX.R permits this instruction to access additional registers (XMM8-XMM15).

### **Operation**

DEST[63:0]  $\leftarrow$  SQRT(SRC[63:0]); DEST[127:64]  $\leftarrow$  SQRT(SRC[127:64]);

# Intel C/C++ Compiler Intrinsic Equivalent

SQRTPD \_\_m128d \_mm\_sqrt\_pd (m128d a)

# **SIMD Floating-Point Exceptions**

Invalid, Precision, Denormal.

### **Protected Mode Exceptions**

#GP(0) For an illegal memory operand effective address in the CS, DS,

ES, FS or GS segments.

If a memory operand is not aligned on a 16-byte boundary,

regardless of segment.

#SS(0) For an illegal address in the SS segment.

#PF(fault-code) For a page fault.
#NM If CR0.TS[bit 3] = 1.

#XM If an unmasked SIMD floating-point exception and CR4.OSXM-

MEXCPT[bit 10] = 1.

#UD If an unmasked SIMD floating-point exception and CR4.OSXM-

MEXCPT[bit 10] = 0.If CR0.EM[bit 2] = 1.

If CR4.OSFXSR[bit 9] = 0.CR4.OSXMMEXCPT(bit 10) is 1.

If CPUID.01H:EDX.SSE2[bit 26] = 0.

If the LOCK prefix is used.

#### **Real-Address Mode Exceptions**

#GP If a memory operand is not aligned on a 16-byte boundary,

regardless of segment.

If any part of the operand lies outside the effective address

space from 0 to FFFFH.

#NM If CR0.TS[bit 3] = 1.

#XM If an unmasked SIMD floating-point exception and CR4.OSXM-

MEXCPT[bit 10] = 1.

#UD If an unmasked SIMD floating-point exception and CR4.OSXM-

MEXCPT[bit 10] = 0. If CR0.EM[bit 2] = 1. If CR4.OSFXSR[bit 9] = 0.

If CPUID.01H:EDX.SSE2[bit 26] = 0.

If the LOCK prefix is used.

### Virtual-8086 Mode Exceptions

Same exceptions as in real address mode.

#PF(fault-code) For a page fault.

#### **Compatibility Mode Exceptions**

Same exceptions as in protected mode.

#### **64-Bit Mode Exceptions**

#SS(0) If a memory address referencing the SS segment is in a non-

canonical form.

#GP(0) If the memory address is in a non-canonical form.

If memory operand is not aligned on a 16-byte boundary,

regardless of segment.

#PF(fault-code) For a page fault.

#NM If CR0.TS[bit 3] = 1.

#### INSTRUCTION SET REFERENCE, N-Z

#XM If an unmasked SIMD floating-point exception and CR4.OSXM-

MEXCPT[bit 10] = 1.

#UD If an unmasked SIMD floating-point exception and CR4.OSXM-

MEXCPT[bit 10] = 0.If CR0.EM[bit 2] = 1.

If CR4.OSFXSR[bit 9] = 0.

If CPUID.01H:EDX.SSE2[bit 26] = 0.

If the LOCK prefix is used.

# SQRTPS—Compute Square Roots of Packed Single-Precision Floating-Point Values

Opcode	Instruction	64-Bit Mode	Compat/ Leg Mode	Description
0F 51 /r	SQRTPS xmm1, xmm2/m128	Valid	Valid	Computes square roots of the packed single-precision floating-point values in xmm2/m128 and stores the results in xmm1.

#### **Description**

Performs a SIMD computation of the square roots of the four packed single-precision floating-point values in the source operand (second operand) stores the packed single-precision floating-point results in the destination operand. The source operand can be an XMM register or a 128-bit memory location. The destination operand is an XMM register. See Figure 10-5 in the *Intel*® *64 and IA-32 Architectures Software Developer's Manual, Volume 1*, for an illustration of a SIMD single-precision floating-point operation.

In 64-bit mode, using a REX prefix in the form of REX.R permits this instruction to access additional registers (XMM8-XMM15).

### **Operation**

```
DEST[31:0] \leftarrow SQRT(SRC[31:0]);
DEST[63:32] \leftarrow SQRT(SRC[63:32]);
DEST[95:64] \leftarrow SQRT(SRC[95:64]);
DEST[127:96] \leftarrow SQRT(SRC[127:96]);
```

### Intel C/C++ Compiler Intrinsic Equivalent

SQRTPS \_\_m128 \_mm\_sqrt\_ps(\_\_m128 a)

# **SIMD Floating-Point Exceptions**

Invalid, Precision, Denormal.

### **Protected Mode Exceptions**

#GP(0) For an illegal memory operand effective address in the CS, DS,

ES, FS or GS segments.

If a memory operand is not aligned on a 16-byte boundary,

regardless of segment.

#SS(0) For an illegal address in the SS segment.

#PF(fault-code) For a page fault.

#### INSTRUCTION SET REFERENCE, N-Z

#NM If CR0.TS[bit 3] = 1.

#XM If an unmasked SIMD floating-point exception and CR4.OSXM-

MEXCPT[bit 10] = 1.

#UD If an unmasked SIMD floating-point exception and CR4.OSXM-

MEXCPT[bit 10] = 0. If CR0.EM[bit 2] = 1. If CR4.OSFXSR[bit 9] = 0.

If CPUID.01H:EDX.SSE[bit 25] = 0.

If the LOCK prefix is used.

#### **Real-Address Mode Exceptions**

#GP If a memory operand is not aligned on a 16-byte boundary,

regardless of segment.

If any part of the operand lies outside the effective address

space from 0 to FFFFH.

#NM If CR0.TS[bit 3] = 1.

#XM If an unmasked SIMD floating-point exception and CR4.OSXM-

MEXCPT[bit 10] = 1.

#UD If an unmasked SIMD floating-point exception and CR4.OSXM-

MEXCPT[bit 10] = 0. If CR0.EM[bit 2] = 1. If CR4.OSFXSR[bit 9] = 0.

If CPUID.01H:EDX.SSE[bit 25] = 0.

If the LOCK prefix is used.

#### Virtual-8086 Mode Exceptions

Same exceptions as in real address mode.

#PF(fault-code) For a page fault.

#### **Compatibility Mode Exceptions**

Same exceptions as in protected mode.

#### **64-Bit Mode Exceptions**

#SS(0) If a memory address referencing the SS segment is in a non-

canonical form.

#GP(0) If the memory address is in a non-canonical form.

If memory operand is not aligned on a 16-byte boundary,

regardless of segment.

#PF(fault-code) For a page fault.

#NM If CR0.TS[bit 3] = 1.

#XM If an unmasked SIMD floating-point exception and CR4.OSXM-

MEXCPT[bit 10] = 1.

#UD If an unmasked SIMD floating-point exception and CR4.OSXM-

 $\mathsf{MEXCPT}[\mathsf{bit}\ 10] = 0.$ 

If CR0.EM[bit 2] = 1.

If CR4.OSFXSR[bit 9] = 0.

If CPUID.01H:EDX.SSE[bit 25] = 0.

If the LOCK prefix is used.

# SQRTSD—Compute Square Root of Scalar Double-Precision Floating-Point Value

Opcode	Instruction	64-Bit Mode	Compat/ Leg Mode	Description
F2 0F 51 /r	SQRTSD xmm1, xmm2/m64	Valid	Valid	Computes square root of the low double-precision floating-point value in <i>xmm2/m64</i> and stores the results in <i>xmm1</i> .

#### **Description**

Computes the square root of the low double-precision floating-point value in the source operand (second operand) and stores the double-precision floating-point result in the destination operand. The source operand can be an XMM register or a 64-bit memory location. The destination operand is an XMM register. The high quadword of the destination operand remains unchanged. See Figure 11-4 in the *Intel*® 64 and *IA-32 Architectures Software Developer's Manual, Volume 1*, for an illustration of a scalar double-precision floating-point operation.

In 64-bit mode, using a REX prefix in the form of REX.R permits this instruction to access additional registers (XMM8-XMM15).

### **Operation**

DEST[63:0]  $\leftarrow$  SQRT(SRC[63:0]); (\* DEST[127:64] unchanged \*)

# Intel C/C++ Compiler Intrinsic Equivalent

 $SQRTSD = _m128d _mm_sqrt_sd (m128d a, m128d b)$ 

# **SIMD Floating-Point Exceptions**

Invalid, Precision, Denormal.

### **Protected Mode Exceptions**

#GP(0) For an illegal memory operand effective address in the CS, DS,

ES, FS or GS segments.

#SS(0) For an illegal address in the SS segment.

#PF(fault-code) For a page fault. #NM If CR0.TS[bit 3] = 1.

#XM If an unmasked SIMD floating-point exception and CR4.OSXM-

MEXCPT[bit 10] = 1.

#UD If an unmasked SIMD floating-point exception and CR4.OSXM-

MEXCPT[bit 10] = 0. If CR0.EM[bit 2] = 1. If CR4.OSFXSR[bit 9] = 0.

If CPUID.01H:EDX.SSE2[bit 26] = 0.

If the LOCK prefix is used.

#AC(0) If alignment checking is enabled and an unaligned memory

reference is made while the current privilege level is 3.

#### Real-Address Mode Exceptions

GP If any part of the operand lies outside the effective address

space from 0 to FFFFH.

#NM If CR0.TS[bit 3] = 1.

#XM If an unmasked SIMD floating-point exception and CR4.OSXM-

MEXCPT[bit 10] = 1.

#UD If an unmasked SIMD floating-point exception and CR4.OSXM-

 $\begin{aligned} & \mathsf{MEXCPT}[\mathsf{bit}\ 10] = 0. \\ & \mathsf{If}\ \mathsf{CR0.EM}[\mathsf{bit}\ 2] = 1. \\ & \mathsf{If}\ \mathsf{CR4.OSFXSR}[\mathsf{bit}\ 9] = 0. \end{aligned}$ 

If CPUID.01H:EDX.SSE2[bit 26] = 0.

If the LOCK prefix is used.

#### Virtual-8086 Mode Exceptions

Same exceptions as in real address mode.

#PF(fault-code) For a page fault.

#AC(0) If alignment checking is enabled and an unaligned memory

reference is made.

#### **Compatibility Mode Exceptions**

Same exceptions as in protected mode.

#### **64-Bit Mode Exceptions**

#SS(0) If a memory address referencing the SS segment is in a non-

canonical form.

#GP(0) If the memory address is in a non-canonical form.

#PF(fault-code) For a page fault.
#NM If CR0.TS[bit 3] = 1.

#XM If an unmasked SIMD floating-point exception and CR4.OSXM-

MEXCPT[bit 10] = 1.

#### INSTRUCTION SET REFERENCE, N-Z

#UD If an unmasked SIMD floating-point exception and CR4.OSXM-

 $\begin{aligned} &\mathsf{MEXCPT}[\mathsf{bit}\ 10] = 0.\\ &\mathsf{If}\ \mathsf{CR0.EM}[\mathsf{bit}\ 2] = 1. \end{aligned}$ 

If CR4.OSFXSR[bit 9] = 0.

If CPUID.01H:EDX.SSE2[bit 26] = 0.

If the LOCK prefix is used.

#AC(0) If alignment checking is enabled and an unaligned memory

reference is made while the current privilege level is 3.

# SQRTSS—Compute Square Root of Scalar Single-Precision Floating-Point Value

Opcode	Instruction	64-Bit Mode	Compat/ Leg Mode	Description
F3 0F 51 /r	SQRTSS xmm1, xmm2/m32	Valid	Valid	Computes square root of the low single-precision floating-point value in xmm2/m32 and stores the results in xmm1.

#### **Description**

Computes the square root of the low single-precision floating-point value in the source operand (second operand) and stores the single-precision floating-point result in the destination operand. The source operand can be an XMM register or a 32-bit memory location. The destination operand is an XMM register. The three high-order doublewords of the destination operand remain unchanged. See Figure 10-6 in the Intel® 64 and IA-32 Architectures Software Developer's Manual, Volume 1, for an illustration of a scalar single-precision floating-point operation.

In 64-bit mode, using a REX prefix in the form of REX.R permits this instruction to access additional registers (XMM8-XMM15).

### **Operation**

```
DEST[31:0] \leftarrow SQRT (SRC[31:0]);
(* DEST[127:64] unchanged *)
```

# Intel C/C++ Compiler Intrinsic Equivalent

SQRTSS \_\_m128 \_mm\_sqrt\_ss(\_\_m128 a)

# **SIMD Floating-Point Exceptions**

Invalid, Precision, Denormal.

### **Protected Mode Exceptions**

#GP(0)	For an illegal memory	operand effective	address in the CS, DS,
--------	-----------------------	-------------------	------------------------

ES, FS or GS segments.

#SS(0) For an illegal address in the SS segment.

#PF(fault-code) For a page fault. #NM If CR0.TS[bit 3] = 1.

#XM If an unmasked SIMD floating-point exception and CR4.OSXM-

MEXCPT[bit 10] = 1.

#### INSTRUCTION SET REFERENCE, N-Z

#UD If an unmasked SIMD floating-point exception and CR4.OSXM-

MEXCPT[bit 10] = 0. If CR0.EM[bit 2] = 1. If CR4.OSFXSR[bit 9] = 0.

If CPUID.01H:EDX.SSE[bit 25] = 0.

If the LOCK prefix is used.

#AC(0) If alignment checking is enabled and an unaligned memory

reference is made while the current privilege level is 3.

#### **Real-Address Mode Exceptions**

GP If any part of the operand lies outside the effective address

space from 0 to FFFFH.

#NM If CR0.TS[bit 3] = 1.

#XM If an unmasked SIMD floating-point exception and CR4.OSXM-

MEXCPT[bit 10] = 1.

#UD If an unmasked SIMD floating-point exception and CR4.OSXM-

MEXCPT[bit 10] = 0. If CR0.EM[bit 2] = 1. If CR4.OSFXSR[bit 9] = 0.

If CPUID.01H:EDX.SSE[bit 25] = 0.

If the LOCK prefix is used.

#### Virtual-8086 Mode Exceptions

Same exceptions as in real address mode.

#PF(fault-code) For a page fault.

#AC(0) If alignment checking is enabled and an unaligned memory

reference is made.

#### **Compatibility Mode Exceptions**

Same exceptions as in protected mode.

#### **64-Bit Mode Exceptions**

#SS(0) If a memory address referencing the SS segment is in a non-

canonical form.

#GP(0) If the memory address is in a non-canonical form.

#PF(fault-code) For a page fault. #NM If CR0.TS[bit 3] = 1.

#XM If an unmasked SIMD floating-point exception and CR4.OSXM-

MEXCPT[bit 10] = 1.

#UD If an unmasked SIMD floating-point exception and CR4.OSXM-

 $\begin{aligned} & \mathsf{MEXCPT}[\mathsf{bit}\ 10] = 0. \\ & \mathsf{If}\ \mathsf{CR0.EM}[\mathsf{bit}\ 2] = 1. \\ & \mathsf{If}\ \mathsf{CR4.OSFXSR}[\mathsf{bit}\ 9] = 0. \end{aligned}$ 

If CPUID.01H:EDX.SSE[bit 25] = 0.

If the LOCK prefix is used.

#AC(0) If alignment checking is enabled and an unaligned memory

reference is made while the current privilege level is 3.

# STC—Set Carry Flag

Opcode	Instruction	64-Bit Mode	Compat/ Leg Mode	Description
F9	STC	Valid	Valid	Set CF flag.

### **Description**

Sets the CF flag in the EFLAGS register.

This instruction's operation is the same in non-64-bit modes and 64-bit mode.

### **Operation**

 $CF \leftarrow 1$ ;

# **Flags Affected**

The CF flag is set. The OF, ZF, SF, AF, and PF flags are unaffected.

# **Exceptions (All Operating Modes)**

**#UD** If the LOCK prefix is used.

# **STD—Set Direction Flag**

Opcode	Instruction	64-Bit Mode	Compat/ Leg Mode	Description
FD	STD	Valid	Valid	Set DF flag.

## **Description**

Sets the DF flag in the EFLAGS register. When the DF flag is set to 1, string operations decrement the index registers (ESI and/or EDI).

This instruction's operation is the same in non-64-bit modes and 64-bit mode.

## **Operation**

DF  $\leftarrow$  1;

# **Flags Affected**

The DF flag is set. The CF, OF, ZF, SF, AF, and PF flags are unaffected.

## **Exceptions (All Operating Modes)**

# STI—Set Interrupt Flag

Opcode	Instruction	64-Bit Mode	Compat/ Leg Mode	Description
FB	STI	Valid	Valid	Set interrupt flag; external, maskable interrupts enabled at the end of the next instruction.

### **Description**

If protected-mode virtual interrupts are not enabled, STI sets the interrupt flag (IF) in the EFLAGS register. After the IF flag is set, the processor begins responding to external, maskable interrupts after the next instruction is executed. The delayed effect of this instruction is provided to allow interrupts to be enabled just before returning from a procedure (or subroutine). For instance, if an STI instruction is followed by an RET instruction, the RET instruction is allowed to execute before external interrupts are recognized<sup>1</sup>. If the STI instruction is followed by a CLI instruction (which clears the IF flag), the effect of the STI instruction is negated.

The IF flag and the STI and CLI instructions do not prohibit the generation of exceptions and NMI interrupts. NMI interrupts (and SMIs) may be blocked for one macroinstruction following an STI.

When protected-mode virtual interrupts are enabled, CPL is 3, and IOPL is less than 3; STI sets the VIF flag in the EFLAGS register, leaving IF unaffected.

Table 4-5 indicates the action of the STI instruction depending on the processor's mode of operation and the CPL/IOPL settings of the running program or procedure.

This instruction's operation is the same in non-64-bit modes and 64-bit mode.

PE VM **IOPL CPL** PVI **VIP** VME STI Result 0 Χ Χ Χ Χ Χ Χ **IF** = 1 1 ≥ CPL Χ Χ 0 Χ Χ **IF** = 1 1 1 0 < CPL 3 0 Χ VIF = 10 Χ Χ X **GP Fault** < CPL < 3

Table 4-5. Decision Table for STI Results

In the following instruction sequence, interrupts may be recognized before RET executes:

STI

STI

**RET** 

The STI instruction delays recognition of interrupts only if it is executed with EFLAGS.IF = 0. In a sequence of STI instructions, only the first instruction in the sequence is guaranteed to delay interrupts.

Table 4-5. Decision Table for STI Results

PE	VM	IOPL	CPL	PVI	VIP	VME	STI Result
1	0	< CPL	Х	0	Х	Х	GP Fault
1	0	< CPL	Х	Х	1	Х	GP Fault
1	1	3	Х	Х	Х	Х	IF = 1
1	1	< 3	Х	Х	0	1	VIF = 1
1	1	< 3	X	Х	1	Х	GP Fault
1	1	< 3	Х	Х	Х	0	GP Fault

#### **NOTES:**

X = This setting has no impact.

### **Operation**

```
IF PE = 0 (* Executing in real-address mode *)
   THEN
        IF \leftarrow 1; (* Set Interrupt Flag *)
   ELSE (* Executing in protected mode or virtual-8086 mode *)
        IF VM = 0 (* Executing in protected mode*)
             THEN
                  IF IOPL ≥ CPL
                       THEN
                            IF \leftarrow 1; (* Set Interrupt Flag *)
                  ELSE
                       IF (IOPL < CPL) and (CPL = 3) and (VIP = 0)
                            THEN
                                 VIF ← 1; (* Set Virtual Interrupt Flag *)
                            ELSE
                                 #GP(0);
                       FI;
                  FI;
             ELSE (* Executing in Virtual-8086 mode *)
                  IF IOPL = 3
                       THEN
                            IF \leftarrow 1; (* Set Interrupt Flag *)
                  ELSE
                       IF ((IOPL < 3) and (VIP = 0) and (VME = 1))
                            THEN
                                 VIF ← 1; (* Set Virtual Interrupt Flag *)
                       ELSE
                            #GP(0); (* Trap to virtual-8086 monitor *)
                       FI;)
                  FI;
```

FI:

FI;

## **Flags Affected**

The IF flag is set to 1; or the VIF flag is set to 1.

### **Protected Mode Exceptions**

#GP(0) If the CPL is greater (has less privilege) than the IOPL of the

current program or procedure.

#UD If the LOCK prefix is used.

## **Real-Address Mode Exceptions**

#UD If the LOCK prefix is used.

## **Virtual-8086 Mode Exceptions**

Same exceptions as in protected mode.

## **Compatibility Mode Exceptions**

Same exceptions as in protected mode.

#### **64-Bit Mode Exceptions**

Same exceptions as in protected mode.

# STMXCSR—Store MXCSR Register State

Opcode	Instruction	64-Bit Mode	Compat/ Leg Mode	Description
OF AE /3	STMXCSR m32	Valid	Valid	Store contents of MXCSR register to <i>m32</i> .

## **Description**

Stores the contents of the MXCSR control and status register to the destination operand. The destination operand is a 32-bit memory location. The reserved bits in the MXCSR register are stored as 0s.

This instruction's operation is the same in non-64-bit modes and 64-bit mode.

### **Operation**

 $m32 \leftarrow MXCSR;$ 

### Intel C/C++ Compiler Intrinsic Equivalent

\_mm\_getcsr(void)

## **Exceptions**

None.

## **Numeric Exceptions**

None.

## **Protected Mode Exceptions**

#GP(0)	For an illegal memory	operand effective	address in th	e CS, DS,
<i>"</i> O. (0)	i oi aii illogal illollioi j	operana en eeure	aaa. coo c	00,00,

ES, FS, or GS segments.

#SS(0) For an illegal address in the SS segment.

#PF(fault-code) For a page fault. #UD If CR0.EM[bit 2] = 1. #NM If CR0.TS[bit 3] = 1.

#AC For unaligned memory reference. To enable #AC exceptions,

three conditions must be true: CR0.AM[bit 18] = 1,

EFLAGS.AC[bit 18] = 1, current CPL = 3.

#UD If CR4.OSFXSR[bit 9] = 0.

If CPUID.01H:EDX.SSE[bit 25] = 0.

### **Real Address Mode Exceptions**

GP(0) If any part of the operand would lie outside of the effective

address space from 0 to 0FFFFH.

#UD If CR0.EM[bit 2] = 1. #NM If CR0.TS[bit 3] = 1. #UD If CR4.OSFXSR[bit 9] = 0.

If CPUID.01H:EDX.SSE[bit 25] = 0.

If the LOCK prefix is used.

## Virtual 8086 Mode Exceptions

Same exceptions as in real address mode.

#PF(fault-code) For a page fault.

#AC For unaligned memory reference.

### **Compatibility Mode Exceptions**

Same exceptions as in protected mode.

## **64-Bit Mode Exceptions**

#SS(0) If a memory address referencing the SS segment is in a non-

canonical form.

#GP(0) If the memory address is in a non-canonical form.

#PF(fault-code) For a page fault.
#NM If CR0.TS[bit 3] = 1.

#AC For unaligned memory reference. To enable #AC exceptions,

three conditions must be true: CR0.AM[bit 18] = 1,

EFLAGS.AC[bit 18] = 1, current CPL = 3

#UD If CR0.EM[bit 2] = 1.

If CR4.OSFXSR[bit 9] = 0.

If CPUID.01H:EDX.SSE[bit 25] = 0.

# STOS/STOSB/STOSW/STOSD/STOSQ—Store String

Opcode	Instruction	64-Bit Mode	Compat/ Leg Mode	Description
AA	STOS m8	Valid	Valid	For legacy mode, store AL at address ES:(E)DI; For 64-bit mode store AL at address RDI or EDI.
AB	STOS m16	Valid	Valid	For legacy mode, store AX at address ES:(E)DI; For 64-bit mode store AX at address RDI or EDI.
AB	STOS m32	Valid	Valid	For legacy mode, store EAX at address ES:(E)DI; For 64-bit mode store EAX at address RDI or EDI.
REX.W + AB	STOS m64	Valid	N.E.	Store RAX at address RDI or EDI.
AA	STOSB	Valid	Valid	For legacy mode, store AL at address ES:(E)DI; For 64-bit mode store AL at address RDI or EDI.
AB	STOSW	Valid	Valid	For legacy mode, store AX at address ES:(E)DI; For 64-bit mode store AX at address RDI or EDI.
AB	STOSD	Valid	Valid	For legacy mode, store EAX at address ES:(E)DI; For 64-bit mode store EAX at address RDI or EDI.
REX.W + AB	STOSQ	Valid	N.E.	Store RAX at address RDI or EDI.

### **Description**

In non-64-bit and default 64-bit mode; stores a byte, word, or doubleword from the AL, AX, or EAX register (respectively) into the destination operand. The destination operand is a memory location, the address of which is read from either the ES:EDI or ES:DI register (depending on the address-size attribute of the instruction and the mode of operation). The ES segment cannot be overridden with a segment override prefix.

At the assembly-code level, two forms of the instruction are allowed: the "explicit-operands" form and the "no-operands" form. The explicit-operands form (specified with the STOS mnemonic) allows the destination operand to be specified explicitly. Here, the destination operand should be a symbol that indicates the size and location of the destination value. The source operand is then automatically selected to match the size of the destination operand (the AL register for byte operands, AX for word operands, EAX for doubleword operands). The explicit-operands form is provided to allow documentation; however, note that the documentation provided by this form can be misleading. That is, the destination operand symbol must specify the correct **type** (size) of the operand (byte, word, or doubleword), but it does not have to specify the correct **location**. The location is always specified by the ES:(E)DI

register. These must be loaded correctly before the store string instruction is executed.

The no-operands form provides "short forms" of the byte, word, doubleword, and quadword versions of the STOS instructions. Here also ES:(E)DI is assumed to be the destination operand and AL, AX, or EAX is assumed to be the source operand. The size of the destination and source operands is selected by the mnemonic: STOSB (byte read from register AL), STOSW (word from AX), STOSD (doubleword from EAX).

After the byte, word, or doubleword is transferred from the register to the memory location, the (E)DI register is incremented or decremented according to the setting of the DF flag in the EFLAGS register. If the DF flag is 0, the register is incremented; if the DF flag is 1, the register is decremented (the register is incremented or decremented by 1 for byte operations, by 2 for word operations, by 4 for doubleword operations).

In 64-bit mode, the default address size is 64 bits, 32-bit address size is supported using the prefix 67H. Using a REX prefix in the form of REX.W promotes operation on doubleword operand to 64 bits. The promoted no-operand mnemonic is STOSQ. STOSQ (and its explicit operands variant) store a quadword from the RAX register into the destination addressed by RDI or EDI. See the summary chart at the beginning of this section for encoding data and limits.

The STOS, STOSB, STOSW, STOSD, STOSQ instructions can be preceded by the REP prefix for block loads of ECX bytes, words, or doublewords. More often, however, these instructions are used within a LOOP construct because data needs to be moved into the AL, AX, or EAX register before it can be stored. See "RDTSCP—Read Time-Stamp Counter and Processor ID" in this chapter for a description of the REP prefix.

### Operation

```
Non-64-bit Mode:

IF (Byte store)

THEN

DEST \leftarrow AL;

THEN IF DF = 0

THEN (E)DI \leftarrow (E)DI + 1;

ELSE (E)DI \leftarrow (E)DI - 1;

FI;

ELSE IF (Word store)

THEN

DEST \leftarrow AX;

THEN IF DF = 0

THEN (E)DI \leftarrow (E)DI + 2;

ELSE (E)DI \leftarrow (E)DI - 2;

FI;
```

```
FI;
    ELSE IF (Doubleword store)
          THEN
               DEST \leftarrow EAX;
                     THEN IF DF = 0
                           THEN (E)DI \leftarrow (E)DI + 4;
                           ELSE (E)DI \leftarrow (E)DI - 4;
                     FI;
          FI;
FI;
64-bit Mode:
IF (Byte store)
    THEN
          DEST \leftarrow AL;
               THEN IF DF = 0
                     THEN (R|E)DI \leftarrow (R|E)DI + 1;
                     ELSE (R|E)DI \leftarrow (R|E)DI - 1;
               FI;
    ELSE IF (Word store)
          THEN
               DEST \leftarrow AX;
                     THEN IF DF = 0
                           THEN (R|E)DI \leftarrow (R|E)DI + 2;
                           ELSE (R|E)DI \leftarrow (R|E)DI - 2;
                     FI;
          FI;
    ELSE IF (Doubleword store)
          THEN
               DEST \leftarrow EAX;
                     THEN IF DF = 0
                           THEN (R|E)DI \leftarrow (R|E)DI + 4;
                           ELSE (R|E)DI \leftarrow (R|E)DI - 4;
                     FI;
          FI;
    ELSE IF (Quadword store using REX.W)
          THEN
               DEST \leftarrow RAX;
                     THEN IF DF = 0
                           THEN (R|E)DI \leftarrow (R|E)DI + 8;
                           ELSE (R|E)DI \leftarrow (R|E)DI - 8;
                     FI;
          FI;
```

FI:

#### Flags Affected

None.

### **Protected Mode Exceptions**

#GP(0) If the destination is located in a non-writable segment.

If a memory operand effective address is outside the limit of the

ES segment.

If the ES register contains a NULL segment selector.

#PF(fault-code) If a page fault occurs.

#AC(0) If alignment checking is enabled and an unaligned memory

reference is made while the current privilege level is 3.

#UD If the LOCK prefix is used.

### **Real-Address Mode Exceptions**

#GP If a memory operand effective address is outside the ES

segment limit.

**#UD** If the LOCK prefix is used.

## Virtual-8086 Mode Exceptions

#GP(0) If a memory operand effective address is outside the ES

segment limit.

#PF(fault-code) If a page fault occurs.

#AC(0) If alignment checking is enabled and an unaligned memory

reference is made.

#UD If the LOCK prefix is used.

## **Compatibility Mode Exceptions**

Same exceptions as in protected mode.

## **64-Bit Mode Exceptions**

#GP(0) If the memory address is in a non-canonical form.

#PF(fault-code) If a page fault occurs.

#AC(0) If alignment checking is enabled and an unaligned memory

reference is made while the current privilege level is 3.

# STR—Store Task Register

Opcode	Instruction	64-Bit Mode	Compat/ Leg Mode	Description
0F 00 /1	STR r/m16	Valid	Valid	Stores segment selector from TR in r/m16.

## **Description**

Stores the segment selector from the task register (TR) in the destination operand. The destination operand can be a general-purpose register or a memory location. The segment selector stored with this instruction points to the task state segment (TSS) for the currently running task.

When the destination operand is a 32-bit register, the 16-bit segment selector is copied into the lower 16 bits of the register and the upper 16 bits of the register are cleared. When the destination operand is a memory location, the segment selector is written to memory as a 16-bit quantity, regardless of operand size.

In 64-bit mode, operation is the same. The size of the memory operand is fixed at 16 bits. In register stores, the 2-byte TR is zero extended if stored to a 64-bit register.

The STR instruction is useful only in operating-system software. It can only be executed in protected mode.

#### Operation

DEST  $\leftarrow$  TR(SegmentSelector);

## **Flags Affected**

None.

### **Protected Mode Exceptions**

#GP(0) If the destination is a memory operand that is located in a non-

writable segment or if the effective address is outside the CS,

DS, ES, FS, or GS segment limit.

If the DS, ES, FS, or GS register is used to access memory and it

contains a NULL segment selector.

#SS(0) If a memory operand effective address is outside the SS

segment limit.

#PF(fault-code) If a page fault occurs.

#AC(0) If alignment checking is enabled and an unaligned memory

reference is made while the current privilege level is 3.

## **Real-Address Mode Exceptions**

#UD The STR instruction is not recognized in real-address mode.

## Virtual-8086 Mode Exceptions

#UD The STR instruction is not recognized in virtual-8086 mode.

### **Compatibility Mode Exceptions**

Same exceptions as in protected mode.

#### **64-Bit Mode Exceptions**

#GP(0) If the memory address is in a non-canonical form. #SS(U) If the stack address is in a non-canonical form.

#PF(fault-code) If a page fault occurs.

#AC(0) If alignment checking is enabled and an unaligned memory

reference is made while the current privilege level is 3.

# **SUB—Subtract**

Opcode	Instruction	64-Bit Mode	Compat/ Leg Mode	Description
2C ib	SUB AL, i <i>mm8</i>	Valid	Valid	Subtract imm8 from AL.
2D iw	SUB AX, imm16	Valid	Valid	Subtract imm16 from AX.
2D id	SUB EAX, imm32	Valid	Valid	Subtract imm32 from EAX.
REX.W + 2D id	SUB RAX, imm32	Valid	N.E.	Subtract <i>imm32</i> sign- extended to 64-bits from RAX.
80 /5 ib	SUB r/m8, imm8	Valid	Valid	Subtract imm8 from r/m8.
REX + 80 /5 ib	SUB r/m8*, imm8	Valid	N.E.	Subtract imm8 from r/m8.
81 /5 iw	SUB r/m16, imm16	Valid	Valid	Subtract imm16 from r/m16.
81 /5 id	SUB r/m32, imm32	Valid	Valid	Subtract imm32 from r/m32.
REX.W + 81 /5 id	SUB r/m64, imm32	Valid	N.E.	Subtract <i>imm32</i> sign- extended to 64-bits from r/m64.
83 /5 ib	SUB r/m16, imm8	Valid	Valid	Subtract sign-extended <i>imm8</i> from <i>r/m16</i> .
83 /5 ib	SUB r/m32, imm8	Valid	Valid	Subtract sign-extended <i>imm8</i> from <i>r/m32</i> .
REX.W + 83 /5 ib	SUB r/m64, imm8	Valid	N.E.	Subtract sign-extended <i>imm8</i> from <i>r/m64</i> .
28 /r	SUB r/m8, r8	Valid	Valid	Subtract r8 from r/m8.
REX + 28 /r	SUB r/m8*, r8*	Valid	N.E.	Subtract r8 from r/m8.
29 /r	SUB r/m16, r16	Valid	Valid	Subtract r16 from r/m16.
29 /r	SUB r/m32, r32	Valid	Valid	Subtract r32 from r/m32.
REX.W + 29 /r	SUB r/m64, r32	Valid	N.E.	Subtract r64 from r/m64.
2A /r	SUB <i>r8, r/m8</i>	Valid	Valid	Subtract <i>r/m8</i> from <i>r8.</i>
REX + 2A /r	SUB <i>r8*, r/m8*</i>	Valid	N.E.	Subtract <i>r/m8</i> from <i>r8.</i>
2B /r	SUB <i>r16, r/m16</i>	Valid	Valid	Subtract r/m16 from r16.
2B /r	SUB <i>r32, r/m32</i>	Valid	Valid	Subtract r/m32 from r32.
REX.W + 2B /r	SUB <i>r64, r/m64</i>	Valid	N.E.	Subtract r/m64 from r64.

#### **NOTES:**

<sup>\*</sup> In 64-bit mode, r/m8 can not be encoded to access the following byte registers if a REX prefix is used: AH, BH, CH, DH.

#### **Description**

Subtracts the second operand (source operand) from the first operand (destination operand) and stores the result in the destination operand. The destination operand can be a register or a memory location; the source operand can be an immediate, register, or memory location. (However, two memory operands cannot be used in one instruction.) When an immediate value is used as an operand, it is sign-extended to the length of the destination operand format.

The SUB instruction performs integer subtraction. It evaluates the result for both signed and unsigned integer operands and sets the OF and CF flags to indicate an overflow in the signed or unsigned result, respectively. The SF flag indicates the sign of the signed result.

In 64-bit mode, the instruction's default operation size is 32 bits. Using a REX prefix in the form of REX.R permits access to additional registers (R8-R15). Using a REX prefix in the form of REX.W promotes operation to 64 bits. See the summary chart at the beginning of this section for encoding data and limits.

This instruction can be used with a LOCK prefix to allow the instruction to be executed atomically.

#### Operation

 $DEST \leftarrow (DEST - SRC);$ 

### Flags Affected

The OF, SF, ZF, AF, PF, and CF flags are set according to the result.

#### **Protected Mode Exceptions**

#GP(0) If the destination is located in a non-writable segment.

If a memory operand effective address is outside the CS, DS,

ES, FS, or GS segment limit.

If the DS, ES, FS, or GS register contains a NULL segment

selector.

#SS(0) If a memory operand effective address is outside the SS

segment limit.

#PF(fault-code) If a page fault occurs.

#AC(0) If alignment checking is enabled and an unaligned memory

reference is made while the current privilege level is 3.

#UD If the LOCK prefix is used but the destination is not a memory

operand.

### **Real-Address Mode Exceptions**

#GP If a memory operand effective address is outside the CS, DS,

ES, FS, or GS segment limit.

#SS If a memory operand effective address is outside the SS

segment limit.

#UD If the LOCK prefix is used but the destination is not a memory

operand.

### Virtual-8086 Mode Exceptions

#GP(0) If a memory operand effective address is outside the CS, DS,

ES, FS, or GS segment limit.

#SS(0) If a memory operand effective address is outside the SS

segment limit.

#PF(fault-code) If a page fault occurs.

#AC(0) If alignment checking is enabled and an unaligned memory

reference is made.

#UD If the LOCK prefix is used but the destination is not a memory

operand.

### **Compatibility Mode Exceptions**

Same exceptions as in protected mode.

### **64-Bit Mode Exceptions**

#SS(0) If a memory address referencing the SS segment is in a non-

canonical form.

#GP(0) If the memory address is in a non-canonical form.

#PF(fault-code) If a page fault occurs.

#AC(0) If alignment checking is enabled and an unaligned memory

reference is made while the current privilege level is 3.

#UD If the LOCK prefix is used but the destination is not a memory

operand.

SUBPD—Subtract Packed Double-Precision Floating-Po
--

Opcode	Instruction	64-Bit Mode	Compat/ Leg Mode	Description
66 0F 5C /r	SUBPD xmm1, xmm2/m128	Valid	Valid	Subtract packed double-precision floating-point values in xmm2/m128 from xmm1.

#### **Description**

Performs a SIMD subtract of the two packed double-precision floating-point values in the source operand (second operand) from the two packed double-precision floating-point values in the destination operand (first operand), and stores the packed double-precision floating-point results in the destination operand. The source operand can be an XMM register or a 128-bit memory location. The destination operand is an XMM register. See Figure 11-3 in the Intel® 64 and IA-32 Architectures Software Developer's Manual, Volume 1, for an illustration of a SIMD double-precision floating-point operation.

In 64-bit mode, using a REX prefix in the form of REX.R permits this instruction to access additional registers (XMM8-XMM15).

### Operation

```
DEST[63:0] \leftarrow DEST[63:0] - SRC[63:0];
DEST[127:64] \leftarrow DEST[127:64] - SRC[127:64];
```

## Intel C/C++ Compiler Intrinsic Equivalent

SUBPD \_\_m128d \_mm\_sub\_pd (m128d a, m128d b)

# **SIMD Floating-Point Exceptions**

Overflow, Underflow, Invalid, Precision, Denormal.

## **Protected Mode Exceptions**

#GP(0) For an illegal memory operand effective address in the CS, DS,

ES, FS or GS segments.

If a memory operand is not aligned on a 16-byte boundary,

regardless of segment.

#SS(0) For an illegal address in the SS segment.

#PF(fault-code) For a page fault. #NM If CR0.TS[bit 3] = 1.

#XM If an unmasked SIMD floating-point exception and CR4.OSXM-

MEXCPT[bit 10] = 1.

#UD If an unmasked SIMD floating-point exception and CR4.OSXM-

MEXCPT[bit 10] = 0. If CR0.EM[bit 2] = 1. If CR4.OSFXSR[bit 9] = 1.

If CPUID.01H:EDX.SSE2[bit 26] = 0.

If the LOCK prefix is used.

### Real-Address Mode Exceptions

#GP If a memory operand is not aligned on a 16-byte boundary,

regardless of segment.

If any part of the operand lies outside the effective address

space from 0 to FFFFH.

#NM If CR0.TS[bit 3] = 1.

#XM If an unmasked SIMD floating-point exception and CR4.OSXM-

MEXCPT[bit 10] = 1.

#UD If an unmasked SIMD floating-point exception and CR4.OSXM-

 $\begin{aligned} & \mathsf{MEXCPT}[\mathsf{bit}\ 10] = 0. \\ & \mathsf{If}\ \mathsf{CR0.EM}[\mathsf{bit}\ 2] = 1. \\ & \mathsf{If}\ \mathsf{CR4.OSFXSR}[\mathsf{bit}\ 9] = 0. \end{aligned}$ 

If CPUID.01H:EDX.SSE2[bit 26] = 0.

If the LOCK prefix is used.

### Virtual-8086 Mode Exceptions

Same exceptions as in real address mode.

#PF(fault-code) For a page fault.

## **Compatibility Mode Exceptions**

Same exceptions as in protected mode.

# **64-Bit Mode Exceptions**

#SS(0) If a memory address referencing the SS segment is in a non-

canonical form.

#GP(0) If the memory address is in a non-canonical form.

If memory operand is not aligned on a 16-byte boundary,

regardless of segment.

#PF(fault-code) For a page fault. #NM If CR0.TS[bit 3] = 1.

#XM If an unmasked SIMD floating-point exception and CR4.OSXM-

MEXCPT[bit 10] = 1.

#UD If an unmasked SIMD floating-point exception and CR4.OSXM-

 $\begin{aligned} &\mathsf{MEXCPT}[\mathsf{bit}\ 10] = 0.\\ &\mathsf{If}\ \mathsf{CR0.EM}[\mathsf{bit}\ 2] = 1. \end{aligned}$ 

If CR4.OSFXSR[bit 9] = 0.

If CPUID.01H:EDX.SSE2[bit 26] = 0.

# SUBPS—Subtract Packed Single-Precision Floating-Point Values

Opcode	Instruction	64-Bit Mode	Compat/ Leg Mode	Description
0F 5C /r	SUBPS xmm1 xmm2/m128	Valid	Valid	Subtract packed single-precision floating-point values in xmm2/mem from xmm1.

#### **Description**

Performs a SIMD subtract of the four packed single-precision floating-point values in the source operand (second operand) from the four packed single-precision floating-point values in the destination operand (first operand), and stores the packed single-precision floating-point results in the destination operand. The source operand can be an XMM register or a 128-bit memory location. The destination operand is an XMM register. See Figure 10-5 in the *Intel*® *64 and IA-32 Architectures Software Developer's Manual, Volume 1*, for an illustration of a SIMD double-precision floating-point operation.

In 64-bit mode, using a REX prefix in the form of REX.R permits this instruction to access additional registers (XMM8-XMM15).

### Operation

```
DEST[31:0] \leftarrow DEST[31:0] – SRC[31:0];
DEST[63:32] \leftarrow DEST[63:32] – SRC[63:32];
DEST[95:64] \leftarrow DEST[95:64] – SRC[95:64];
DEST[127:96] \leftarrow DEST[127:96] – SRC[127:96];
```

### Intel C/C++ Compiler Intrinsic Equivalent

```
SUBPS __m128 _mm_sub_ps(__m128 a, __m128 b)
```

# SIMD Floating-Point Exceptions

Overflow, Underflow, Invalid, Precision, Denormal.

### **Protected Mode Exceptions**

#GP(0) For an illegal memory operand effective address in the CS, DS,

ES, FS or GS segments.

If a memory operand is not aligned on a 16-byte boundary,

regardless of segment.

#SS(0) For an illegal address in the SS segment.

#PF(fault-code) For a page fault. #NM If CR0.TS[bit 3] = 1.

#### INSTRUCTION SET REFERENCE, N-Z

#XM If an unmasked SIMD floating-point exception and CR4.OSXM-

MEXCPT[bit 10] = 1.

#UD If an unmasked SIMD floating-point exception and CR4.OSXM-

MEXCPT[bit 10] = 0. If CR0.EM[bit 2] = 1. If CR4.OSFXSR[bit 9] = 0.

If CPUID.01H:EDX.SSE[bit 25] = 0.

If the LOCK prefix is used.

### **Real-Address Mode Exceptions**

#GP If a memory operand is not aligned on a 16-byte boundary,

regardless of segment.

If any part of the operand lies outside the effective address

space from 0 to FFFFH.

#NM If CR0.TS[bit 3] = 1.

#XM If an unmasked SIMD floating-point exception and CR4.OSXM-

MEXCPT[bit 10] = 1.

#UD If an unmasked SIMD floating-point exception and CR4.OSXM-

MEXCPT[bit 10] = 0. If CR0.EM[bit 2] = 1. If CR4.OSFXSR[bit 9] = 0.

If CPUID.01H:EDX.SSE[bit 25] = 0.

If the LOCK prefix is used.

### Virtual-8086 Mode Exceptions

Same exceptions as in real address mode.

#PF(fault-code) For a page fault.

## **Compatibility Mode Exceptions**

Same exceptions as in protected mode.

#### **64-Bit Mode Exceptions**

#SS(0) If a memory address referencing the SS segment is in a non-

canonical form.

#GP(0) If the memory address is in a non-canonical form.

If memory operand is not aligned on a 16-byte boundary,

regardless of segment.

#PF(fault-code) For a page fault.

#NM If CR0.TS[bit 3] = 1.

#XM If an unmasked SIMD floating-point exception and CR4.OSXM-

MEXCPT[bit 10] = 1.

#UD If an unmasked SIMD floating-point exception and CR4.OSXM-

MEXCPT[bit 10] = 0.If CR0.EM[bit 2] = 1.

If CR4.OSFXSR[bit 9] = 0.

If CPUID.01H:EDX.SSE[bit 25] = 0.

<b>SUBSD—Subtract Scalar</b>	<b>Double-Precision</b>	Floating-Point Values

Opcode	Instruction	64-Bit Mode	Compat/ Leg Mode	Description
F2 0F 5C /r	SUBSD xmm1, xmm2/m64	Valid	Valid	Subtracts the low double- precision floating-point values in xmm2/mem64 from xmm1.

#### **Description**

Subtracts the low double-precision floating-point value in the source operand (second operand) from the low double-precision floating-point value in the destination operand (first operand), and stores the double-precision floating-point result in the destination operand. The source operand can be an XMM register or a 64-bit memory location. The destination operand is an XMM register. The high quadword of the destination operand remains unchanged. See Figure 11-4 in the *Intel*® *64 and IA-32 Architectures Software Developer's Manual, Volume 1*, for an illustration of a scalar double-precision floating-point operation.

In 64-bit mode, using a REX prefix in the form of REX.R permits this instruction to access additional registers (XMM8-XMM15).

### Operation

DEST[63:0]  $\leftarrow$  DEST[63:0] - SRC[63:0]; (\* DEST[127:64] unchanged \*)

## Intel C/C++ Compiler Intrinsic Equivalent

SUBSD \_\_m128d \_mm\_sub\_sd (m128d a, m128d b)

# **SIMD Floating-Point Exceptions**

Overflow, Underflow, Invalid, Precision, Denormal.

## **Protected Mode Exceptions**

#GP(0) For an illegal memory operand effective address in the CS, DS,

ES, FS or GS segments.

#SS(0) For an illegal address in the SS segment.

#PF(fault-code) For a page fault. #NM If CR0.TS[bit 3] = 1.

#XM If an unmasked SIMD floating-point exception and CR4.OSXM-

MEXCPT[bit 10] = 1.

#UD If an unmasked SIMD floating-point exception and CR4.OSXM-

MEXCPT[bit 10] = 0.

If CR0.EM[bit 2] = 1.

If CR4.OSFXSR[bit 9] = 0.

If CPUID.01H:EDX.SSE2[bit 26] = 0.

If the LOCK prefix is used.

#AC(0) If alignment checking is enabled and an unaligned memory

reference is made while the current privilege level is 3.

## **Real-Address Mode Exceptions**

GP If any part of the operand lies outside the effective address

space from 0 to FFFFH.

#NM If CR0.TS[bit 3] = 1.

#XM If an unmasked SIMD floating-point exception and CR4.OSXM-

MEXCPT[bit 10] = 1.

#UD If an unmasked SIMD floating-point exception and CR4.OSXM-

MEXCPT[bit 10] = 0. If CR0.EM[bit 2] = 1. If CR4.OSFXSR[bit 9] = 0.

If CPUID.01H:EDX.SSE2[bit 26] = 0.

If the LOCK prefix is used.

## Virtual-8086 Mode Exceptions

Same exceptions as in real address mode.

#PF(fault-code) For a page fault.

#AC(0) If alignment checking is enabled and an unaligned memory

reference is made.

## **Compatibility Mode Exceptions**

Same exceptions as in protected mode.

## **64-Bit Mode Exceptions**

#SS(0) If a memory address referencing the SS segment is in a non-

canonical form.

#GP(0) If the memory address is in a non-canonical form.

#PF(fault-code) For a page fault.
#NM If CR0.TS[bit 3] = 1.

#XM If an unmasked SIMD floating-point exception and CR4.OSXM-

MEXCPT[bit 10] = 1.

#### INSTRUCTION SET REFERENCE, N-Z

#UD If an unmasked SIMD floating-point exception and CR4.OSXM-

MEXCPT[bit 10] = 0.If CR0.EM[bit 2] = 1.

If CR4.OSFXSR[bit 9] = 0.

If CPUID.01H:EDX.SSE2[bit 26] = 0.

If the LOCK prefix is used.

#AC(0) If alignment checking is enabled and an unaligned memory

reference is made while the current privilege level is 3.

# SUBSS—Subtract Scalar Single-Precision Floating-Point Values

Opcode	Instruction	64-Bit Mode	Compat/ Leg Mode	Description
F3 0F 5C /r	SUBSS xmm1, xmm2/m32	Valid	Valid	Subtract the lower single-precision floating-point values in xmm2/m32 from xmm1.

#### **Description**

Subtracts the low single-precision floating-point value in the source operand (second operand) from the low single-precision floating-point value in the destination operand (first operand), and stores the single-precision floating-point result in the destination operand. The source operand can be an XMM register or a 32-bit memory location. The destination operand is an XMM register. The three high-order doublewords of the destination operand remain unchanged. See Figure 10-6 in the Intel® 64 and IA-32 Architectures Software Developer's Manual, Volume 1, for an illustration of a scalar single-precision floating-point operation.

In 64-bit mode, using a REX prefix in the form of REX.R permits this instruction to access additional registers (XMM8-XMM15).

### Operation

```
DEST[31:0] \leftarrow DEST[31:0] - SRC[31:0];
(* DEST[127:96] unchanged *)
```

## Intel C/C++ Compiler Intrinsic Equivalent

SUBSS \_\_m128 \_mm\_sub\_ss(\_\_m128 a, \_\_m128 b)

# **SIMD Floating-Point Exceptions**

Overflow, Underflow, Invalid, Precision, Denormal.

## **Protected Mode Exceptions**

#GP(0) For an illegal memory operand effective address in the CS, DS,

ES, FS or GS segments.

#SS(0) For an illegal address in the SS segment.

#PF(fault-code) For a page fault. #NM If CR0.TS[bit 3] = 1.

#XM If an unmasked SIMD floating-point exception and CR4.OSXM-

MEXCPT[bit 10] = 1.

#### INSTRUCTION SET REFERENCE, N-Z

#UD If an unmasked SIMD floating-point exception and CR4.OSXM-

MEXCPT[bit 10] = 0. If CR0.EM[bit 2] = 1. If CR4.OSFXSR[bit 9] = 0.

If CPUID.01H:EDX.SSE[bit 25] = 0.

If the LOCK prefix is used.

#AC(0) If alignment checking is enabled and an unaligned memory

reference is made while the current privilege level is 3.

### **Real-Address Mode Exceptions**

GP If any part of the operand lies outside the effective address

space from 0 to FFFFH.

#NM If CR0.TS[bit 3] = 1.

#XM If an unmasked SIMD floating-point exception and CR4.OSXM-

MEXCPT[bit 10] = 1.

#UD If an unmasked SIMD floating-point exception and CR4.OSXM-

MEXCPT[bit 10] = 0. If CR0.EM[bit 2] = 1. If CR4.OSFXSR[bit 9] = 0.

If CPUID.01H:EDX.SSE[bit 25] = 0.

If the LOCK prefix is used.

#### Virtual-8086 Mode Exceptions

Same exceptions as in real address mode.

#PF(fault-code) For a page fault.

#AC(0) If alignment checking is enabled and an unaligned memory

reference is made.

## **Compatibility Mode Exceptions**

Same exceptions as in protected mode.

#### **64-Bit Mode Exceptions**

#SS(0) If a memory address referencing the SS segment is in a non-

canonical form.

#GP(0) If the memory address is in a non-canonical form.

#PF(fault-code) For a page fault. #NM If CR0.TS[bit 3] = 1.

#XM If an unmasked SIMD floating-point exception and CR4.OSXM-

MEXCPT[bit 10] = 1.

#UD If an unmasked SIMD floating-point exception and CR4.OSXM-

 $\begin{aligned} & \mathsf{MEXCPT}[\mathsf{bit}\ 10] = 0. \\ & \mathsf{If}\ \mathsf{CR0.EM}[\mathsf{bit}\ 2] = 1. \\ & \mathsf{If}\ \mathsf{CR4.OSFXSR}[\mathsf{bit}\ 9] = 0. \end{aligned}$ 

If CPUID.01H:EDX.SSE[bit 25] = 0.

If the LOCK prefix is used.

#AC(0) If alignment checking is enabled and an unaligned memory

reference is made while the current privilege level is 3.

# SWAPGS—Swap GS Base Register

Opcode	Instruction	64-Bit Mode	Compat/ Leg Mode	Description
OF 01 /7	SWAPGS	Valid	Invalid	Exchanges the current GS base register value with the value contained in MSR address C0000102H.

## **Description**

SWAPGS exchanges the current GS base register value with the value contained in MSR address C0000102H (MSR\_KERNELGSbase). KernelGSbase is guaranteed to be canonical; so SWAPGS does not perform a canonical check. The SWAPGS instruction is a privileged instruction intended for use by system software.

When using SYSCALL to implement system calls, there is no kernel stack at the OS entry point. Neither is there a straightforward method to obtain a pointer to kernel structures from which the kernel stack pointer could be read. Thus, the kernel can't save general purpose registers or reference memory.

By design, SWAPGS does not require any general purpose registers or memory operands. No registers need to be saved before using the instruction. SWAPGS exchanges the CPL 0 data pointer from the KernelGSbase MSR with the GS base register. The kernel can then use the GS prefix on normal memory references to access kernel data structures. Similarly, when the OS kernel is entered using an interrupt or exception (where the kernel stack is already set up), SWAPGS can be used to quickly get a pointer to the kernel data structures.

The KernelGSbase MSR itself is only accessible using RDMSR/WRMSR instructions. Those instructions are only accessible at privilege level 0. WRMSR will cause a #GP(0) if the value to be written to KernelGSbase MSR is non-canonical.

See Table 4-6.

Table 4-6. SWAPGS Operation Parameters

Opcode	ModR/M Byte			Instr	uction
	MOD	REG	R/M	Not 64-bit Mode	64-bit Mode
OF 01	MOD ≠ 11	111	xxx	INVLPG	INVLPG
	11	111	000	#UD	SWPGS
	11	111	≠ 000	#UD	#UD

## **Operation**

```
IF CS.L \neq 1 (* Not in 64-Bit Mode *)

THEN

#UD; FI;

IF CPL \neq 0

THEN #GP(0); FI;

tmp \leftarrow GS(BASE);

GS(BASE) \leftarrow KERNELGSbase;

KERNELGSbase \leftarrow tmp;
```

## **Flags Affected**

None

## **Protected Mode Exceptions**

#UD If Mode  $\neq$  64-Bit.

## **Real-Address Mode Exceptions**

#UD If Mode  $\neq$  64-Bit.

## Virtual-8086 Mode Exceptions

#UD If Mode  $\neq$  64-Bit.

# **Compatibility Mode Exceptions**

#UD If Mode  $\neq$  64-Bit.

## **64-Bit Mode Exceptions**

#GP(0) If  $CPL \neq 0$ .

# SYSCALL—Fast System Call

Opcode	Instruction	64-Bit Mode	Compat/ Leg Mode	Description
0F 05	SYSCALL	Valid	Invalid	Fast call to privilege level 0 system procedures.

#### **Description**

SYSCALL saves the RIP of the instruction following SYSCALL to RCX and loads a new RIP from the IA32\_LSTAR (64-bit mode). Upon return, SYSRET copies the value saved in RCX to the RIP.

SYSCALL saves RFLAGS (lower 32 bit only) in R11. It then masks RFLAGS with an OS-defined value using the IA32\_FMASK (MSR C000\_0084). The actual mask value used by the OS is the complement of the value written to the IA32\_FMASK MSR. None of the bits in RFLAGS are automatically cleared (except for RF). SYSRET restores RFLAGS from R11 (the lower 32 bits only).

Software should not alter the CS or SS descriptors in a manner that violates the following assumptions made by SYSCALL/SYSRET:

- The CS and SS base and limit remain the same for all processes, including the operating system (the base is 0H and the limit is 0FFFFFFFH).
- The CS of the SYSCALL target has a privilege level of 0.
- The CS of the SYSRET target has a privilege level of 3.

SYSCALL/SYSRET do not check for violations of these assumptions.

## Operation

```
IF (CS.L \neq 1 ) or (IA32_EFER.LMA \neq 1) or (IA32_EFER.SCE \neq 1) (* Not in 64-Bit Mode or SYSCALL/SYSRET not enabled in IA32_EFER *) THEN #UD; FI; RCX \leftarrow RIP; RIP \leftarrow LSTAR_MSR; R11 \leftarrow EFLAGS; EFLAGS \leftarrow (EFLAGS MASKED BY IA32_FMASK); CPL \leftarrow 0; CS(SEL) \leftarrow IA32_STAR_MSR[47:32]; CS(DPL) \leftarrow 0; CS(BASE) \leftarrow 0; CS(LIMIT) \leftarrow 0xFFFFF; CS(GRANULAR) \leftarrow 1; SS(SEL) \leftarrow IA32_STAR_MSR[47:32] + 8; SS(DPL) \leftarrow 0;
```

SS(BASE)  $\leftarrow$  0; SS(LIMIT)  $\leftarrow$  0xFFFFF; SS(GRANULAR)  $\leftarrow$  1;

## **Flags Affected**

All.

## **Protected Mode Exceptions**

#UD If Mode  $\neq$  64-bit.

## **Real-Address Mode Exceptions**

#UD If Mode  $\neq$  64-bit.

## **Virtual-8086 Mode Exceptions**

#UD If Mode  $\neq$  64-bit.

## **Compatibility Mode Exceptions**

#UD If Mode  $\neq$  64-bit.

### **64-Bit Mode Exceptions**

#UD If  $IA32\_EFER.SCE = 0$ .

# SYSENTER—Fast System Call

Opcode	Instruction	64-Bit Mode	Compat/ Leg Mode	Description
0F 34	SYSENTER	Valid	Valid	Fast call to privilege level 0 system procedures.

## **Description**

Executes a fast call to a level 0 system procedure or routine. SYSENTER is a companion instruction to SYSEXIT. The instruction is optimized to provide the maximum performance for system calls from user code running at privilege level 3 to operating system or executive procedures running at privilege level 0.

Prior to executing the SYSENTER instruction, software must specify the privilege level 0 code segment and code entry point, and the privilege level 0 stack segment and stack pointer by writing values to the following MSRs:

- IA32\_SYSENTER\_CS Contains a 32-bit value, of which the lower 16 bits are the segment selector for the privilege level 0 code segment. This value is also used to compute the segment selector of the privilege level 0 stack segment.
- IA32\_SYSENTER\_EIP Contains the 32-bit offset into the privilege level 0 code segment to the first instruction of the selected operating procedure or routine.
- IA32\_SYSENTER\_ESP Contains the 32-bit stack pointer for the privilege level 0 stack.

These MSRs can be read from and written to using RDMSR/WRMSR. Register addresses are listed in Table 4-7. The addresses are defined to remain fixed for future Intel 64 and IA-32 processors.

Table 4-7. MSRs Used By the SYSENTER and SYSEXIT Instructions

MSR	Address
IA32_SYSENTER_CS	174H
IA32_SYSENTER_ESP	175H
IA32_SYSENTER_EIP	176H

When SYSENTER is executed, the processor:

- 1. Loads the segment selector from the IA32\_SYSENTER\_CS into the CS register.
- 2. Loads the instruction pointer from the IA32 SYSENTER EIP into the EIP register.
- 3. Adds 8 to the value in IA32 SYSENTER CS and loads it into the SS register.
- 4. Loads the stack pointer from the IA32 SYSENTER ESP into the ESP register.
- 5. Switches to privilege level 0.
- 6. Clears the VM flag in the EFLAGS register, if the flag is set.

7. Begins executing the selected system procedure.

The processor does not save a return IP or other state information for the calling procedure.

The SYSENTER instruction always transfers program control to a protected-mode code segment with a DPL of 0. The instruction requires that the following conditions are met by the operating system:

- The segment descriptor for the selected system code segment selects a flat,
   32-bit code segment of up to 4 GBytes, with execute, read, accessed, and non-conforming permissions.
- The segment descriptor for selected system stack segment selects a flat 32-bit stack segment of up to 4 GBytes, with read, write, accessed, and expand-up permissions.

The SYSENTER can be invoked from all operating modes except real-address mode.

The SYSENTER and SYSEXIT instructions are companion instructions, but they do not constitute a call/return pair. When executing a SYSENTER instruction, the processor does not save state information for the user code, and neither the SYSENTER nor the SYSEXIT instruction supports passing parameters on the stack.

To use the SYSENTER and SYSEXIT instructions as companion instructions for transitions between privilege level 3 code and privilege level 0 operating system procedures, the following conventions must be followed:

- The segment descriptors for the privilege level 0 code and stack segments and for the privilege level 3 code and stack segments must be contiguous in the global descriptor table. This convention allows the processor to compute the segment selectors from the value entered in the SYSENTER\_CS\_MSR MSR.
- The fast system call "stub" routines executed by user code (typically in shared libraries or DLLs) must save the required return IP and processor state information if a return to the calling procedure is required. Likewise, the operating system or executive procedures called with SYSENTER instructions must have access to and use this saved return and state information when returning to the user code.

The SYSENTER and SYSEXIT instructions were introduced into the IA-32 architecture in the Pentium II processor. The availability of these instructions on a processor is indicated with the SYSENTER/SYSEXIT present (SEP) feature flag returned to the EDX register by the CPUID instruction. An operating system that qualifies the SEP flag must also qualify the processor family and model to ensure that the SYSENTER/SYSEXIT instructions are actually present. For example:

```
IF CPUID SEP bit is set

THEN IF (Family = 6) and (Model < 3) and (Stepping < 3)

THEN

SYSENTER/SYSEXIT_Not_Supported; FI;

ELSE

SYSENTER/SYSEXIT_Supported; FI;
```

FI:

When the CPUID instruction is executed on the Pentium Pro processor (model 1), the processor returns a the SEP flag as set, but does not support the SYSENTER/SYSEXIT instructions.

#### **Operation**

```
IF CRO.PE = 0 THEN \#GP(0); FI;
IF SYSENTER_CS_MSR[15:2] = 0 THEN \#GP(0); FI;
EFLAGS.VM \leftarrow 0:
                                                      (* Insures protected mode execution *)
                                                      (* Mask interrupts *)
EFLAGS.IF \leftarrow 0;
EFLAGS.RF \leftarrow 0:
CS.SEL \leftarrow SYSENTER\_CS\_MSR
                                                      (* Operating system provides CS *)
(* Set rest of CS to a fixed value *)
CS.BASE \leftarrow 0;
                                                      (* Flat segment *)
CS.LIMIT \leftarrow FFFFFH;
                                                      (* 4-GByte limit *)
CS.ARbyte.G \leftarrow 1;
                                                      (* 4-KByte granularity *)
CS.ARbyte.S \leftarrow 1;
                                                      (* Execute + Read, Accessed *)
CS.ARbyte.TYPE \leftarrow 1011B;
                                                (* 32-bit code segment*)
CS.ARbyte.D \leftarrow 1;
CS.ARbyte.DPL \leftarrow 0;
CS.SEL.RPL \leftarrow 0;
CS.ARbyte.P \leftarrow 1;
CPL \leftarrow 0:
SS.SEL \leftarrow CS.SEL + 8;
(* Set rest of SS to a fixed value *)
SS.BASE \leftarrow 0;
                                                      (* Flat segment *)
SS.LIMIT \leftarrow FFFFFH;
                                                      (* 4-GByte limit *)
                                                      (* 4-KByte granularity *)
SS.ARbyte.G \leftarrow 1;
SS.ARbyte.S \leftarrow;
                                                      (* Read/Write, Accessed *)
SS.ARbyte.TYPE \leftarrow 0011B;
SS.ARbyte.D \leftarrow 1;
                                                      (* 32-bit stack segment*)
SS.ARbyte.DPL \leftarrow 0;
SS.SEL.RPL \leftarrow 0;
SS.ARbyte.P \leftarrow 1;
ESP \leftarrow SYSENTER\_ESP\_MSR;
EIP ← SYSENTER_EIP_MSR;
```

#### **IA-32e Mode Operation**

In IA-32e mode, SYSENTER executes a fast system calls from user code running at privilege level 3 (in compatibility mode or 64-bit mode) to 64-bit executive proce-

dures running at privilege level 0. This instruction is a companion instruction to the SYSEXIT instruction.

In IA-32e mode, the IA32\_SYSENTER\_EIP and IA32\_SYSENTER\_ESP MSRs hold 64-bit addresses and must be in canonical form; IA32\_SYSENTER\_CS must not contain a NULL selector.

When SYSENTER transfers control, the following fields are generated and bits set:

- Target code segment Reads non-NULL selector from IA32\_SYSENTER\_CS.
- New CS attributes L-bit = 1 (go to 64-bit mode); CS base = 0, CS limit = FFFFFFFH.
- Target instruction Reads 64-bit canonical address from IA32 SYSENTER EIP.
- Stack segment Computed by adding 8 to the value from IA32\_SYSENTER\_CS.
- Stack pointer Reads 64-bit canonical address from IA32 SYSENTER ESP.
- New SS attributes SS base = 0, SS limit = FFFFFFFH.

### **Flags Affected**

VM, IF, RF (see Operation above)

## **Protected Mode Exceptions**

#GP(0) If IA32 SYSENTER CS[15:2] = 0.

#UD If the LOCK prefix is used.

#### Real-Address Mode Exceptions

#GP If protected mode is not enabled.

#UD If the LOCK prefix is used.

#### Virtual-8086 Mode Exceptions

Same exceptions as in protected mode.

#### **Compatibility Mode Exceptions**

Same exceptions as in protected mode.

#### 64-Bit Mode Exceptions

Same exceptions as in protected mode.

# SYSEXIT—Fast Return from Fast System Call

Opcode	Instruction	64-Bit Mode	Compat/ Leg Mode	Description
0F 35	SYSEXIT	Valid	Valid	Fast return to privilege level 3 user code.
REX.W + 0F 35	SYSEXIT	Valid	Valid	Fast return to 64-bit mode privilege level 3 user code.

### **Description**

Executes a fast return to privilege level 3 user code. SYSEXIT is a companion instruction to the SYSENTER instruction. The instruction is optimized to provide the maximum performance for returns from system procedures executing at protections levels 0 to user procedures executing at protection level 3. It must be executed from code executing at privilege level 0.

Prior to executing SYSEXIT, software must specify the privilege level 3 code segment and code entry point, and the privilege level 3 stack segment and stack pointer by writing values into the following MSR and general-purpose registers:

- **IA32\_SYSENTER\_CS** Contains a 32-bit value, of which the lower 16 bits are the segment selector for the privilege level 0 code segment in which the processor is currently executing. This value is used to compute the segment selectors for the privilege level 3 code and stack segments.
- **EDX** Contains the 32-bit offset into the privilege level 3 code segment to the first instruction to be executed in the user code.
- **ECX** Contains the 32-bit stack pointer for the privilege level 3 stack.

The IA32\_SYSENTER\_CS MSR can be read from and written to using RDMSR/WRMSR. The register address is listed in Table 4-7. This address is defined to remain fixed for future Intel 64 and IA-32 processors.

When SYSEXIT is executed, the processor:

- 1. Adds 16 to the value in IA32\_SYSENTER\_CS and loads the sum into the CS selector register.
- 2. Loads the instruction pointer from the EDX register into the EIP register.
- 3. Adds 24 to the value in IA32\_SYSENTER\_CS and loads the sum into the SS selector register.
- 4. Loads the stack pointer from the ECX register into the ESP register.
- 5. Switches to privilege level 3.
- 6. Begins executing the user code at the EIP address.

See "SWAPGS—Swap GS Base Register" in this chapter for information about using the SYSENTER and SYSEXIT instructions as companion call and return instructions.

The SYSEXIT instruction always transfers program control to a protected-mode code segment with a DPL of 3. The instruction requires that the following conditions are met by the operating system:

- The segment descriptor for the selected user code segment selects a flat, 32-bit code segment of up to 4 GBytes, with execute, read, accessed, and nonconforming permissions.
- The segment descriptor for selected user stack segment selects a flat, 32-bit stack segment of up to 4 GBytes, with expand-up, read, write, and accessed permissions.

The SYSENTER can be invoked from all operating modes except real-address mode and virtual 8086 mode.

The SYSENTER and SYSEXIT instructions were introduced into the IA-32 architecture in the Pentium II processor. The availability of these instructions on a processor is indicated with the SYSENTER/SYSEXIT present (SEP) feature flag returned to the EDX register by the CPUID instruction. An operating system that qualifies the SEP flag must also qualify the processor family and model to ensure that the SYSENTER/SYSEXIT instructions are actually present. For example:

```
IF CPUID SEP bit is set

THEN IF (Family = 6) and (Model < 3) and (Stepping < 3)

THEN

SYSENTER/SYSEXIT_Not_Supported; FI;

ELSE

SYSENTER/SYSEXIT_Supported; FI;

FI;
```

When the CPUID instruction is executed on the Pentium Pro processor (model 1), the processor returns a the SEP flag as set, but does not support the SYSENTER/SYSEXIT instructions.

## Operation

```
IF SYSENTER_CS_MSR[15:2] = 0 THEN \#GP(0); FI;
IF CRO.PE = 0 THEN \#GP(0); FI;
IF CPL \neq 0 THEN #GP(0); FI;
CS.SEL \leftarrow (SYSENTER\_CS\_MSR + 16);
                                                   (* Segment selector for return CS *)
(* Set rest of CS to a fixed value *)
CS.BASE \leftarrow 0;
                                                   (* Flat segment *)
                                                   (* 4-GByte limit *)
CS.LIMIT \leftarrow FFFFFH;
CS.ARbyte.G \leftarrow 1;
                                                   (* 4-KByte granularity *)
CS.ARbyte.S \leftarrow 1;
CS.ARbyte.TYPE \leftarrow 1011B;
                                                   (* Execute, Read, Non-Conforming Code *)
CS.ARbyte.D \leftarrow 1;
                                                   (* 32-bit code segment*)
CS.ARbyte.DPL \leftarrow 3;
```

```
CS.SEL.RPL \leftarrow 3:
CS.ARbyte.P \leftarrow 1;
CPL \leftarrow 3:
SS.SEL \leftarrow (SYSENTER\_CS\_MSR + 24);
                                                         (* Segment selector for return SS *)
(* Set rest of SS to a fixed value *);
SS.BASE \leftarrow 0:
                                                         (* Flat segment *)
                                                         (* 4-GByte limit *)
SS.LIMIT \leftarrow FFFFFH;
SS.ARbyte.G \leftarrow1;
                                                         (* 4-KByte granularity *)
SS.ARbyte.S \leftarrow;
SS.ARbyte.TYPE \leftarrow 0011B;
                                                         (* Expand Up, Read/Write, Data *)
                                                         (* 32-bit stack segment*)
SS.ARbyte.D \leftarrow 1;
SS.ARbyte.DPL \leftarrow 3;
SS.SEL.RPL \leftarrow 3;
SS.ARbyte.P \leftarrow 1;
ESP \leftarrow ECX;
EIP \leftarrow EDX;
```

#### **IA-32e Mode Operation**

In IA-32e mode, SYSEXIT executes a fast system calls from a 64-bit executive procedures running at privilege level 0 to user code running at privilege level 3 (in compatibility mode or 64-bit mode). This instruction is a companion instruction to the SYSENTER instruction.

In IA-32e mode, the IA32\_SYSENTER\_EIP and IA32\_SYSENTER\_ESP MSRs hold 64-bit addresses and must be in canonical form; IA32\_SYSENTER\_CS must not contain a NULL selector.

When the SYSEXIT instruction transfers control to 64-bit mode user code using REX.W, the following fields are generated and bits set:

- Target code segment Computed by adding 32 to the value in the IA32 SYSENTER CS.
- New CS attributes L-bit = 1 (go to 64-bit mode).
- Target instruction Reads 64-bit canonical address in RDX.
- **Stack segment** Computed by adding 8 to the value of CS selector.
- **Stack pointer** Update RSP using 64-bit canonical address in RCX.

When SYSEXIT transfers control to compatibility mode user code when the operand size attribute is 32 bits, the following fields are generated and bits set:

- Target code segment Computed by adding 16 to the value in IA32 SYSENTER CS.
- **New CS attributes** L-bit = 0 (go to compatibility mode).
- Target instruction Fetch the target instruction from 32-bit address in EDX.

- **Stack segment** Computed by adding 24 to the value in IA32\_SYSENTER\_CS.
- **Stack pointer** Update ESP from 32-bit address in ECX.

#### **Flags Affected**

None.

## **Protected Mode Exceptions**

#GP(0) If IA32\_SYSENTER\_CS[15:2] = 0.

If CPL  $\neq$  0.

#UD If the LOCK prefix is used.

## **Real-Address Mode Exceptions**

#GP If protected mode is not enabled.

#UD If the LOCK prefix is used.

## Virtual-8086 Mode Exceptions

#GP(0) Always.

## **Compatibility Mode Exceptions**

Same exceptions as in protected mode.

#### **64-Bit Mode Exceptions**

#GP(0) If IA32\_SYSENTER\_CS = 0.

If  $CPL \neq 0$ .

If ECX or EDX contains a non-canonical address.

#UD If the LOCK prefix is used.

# SYSRET—Return From Fast System Call

Opcode	Instruction	64-Bit Mode	Compat/ Leg Mode	Description
0F 07	SYSRET	Valid	Invalid	Return from fast system call

#### **Description**

SYSCALL saves the RIP of the instruction following the SYSCALL into RCX and loads the new RIP from the LSTAR (64-bit mode only). Upon return, SYSRET copies the value saved in RCX to the RIP.

In a return to 64-bit mode using Osize 64, SYSRET sets the CS selector value to MSR IA32 STAR[63:48] +16. The SS is set to IA32 STAR[63:48] + 8.

SYSRET transfer control to compatibility mode using Osize 32. The CS selector value is set to MSR IA32\_STAR[63:48]. The SS is set to IA32\_STAR[63:48] + 8.

It is the responsibility of the OS to keep descriptors in the GDT/LDT that correspond to selectors loaded by SYSCALL/SYSRET consistent with the base, limit and attribute values forced by the these instructions.

Software should not alter the CS or SS descriptors in a manner that violates the following assumptions made by SYSCALL/SYSRET:

- CS and SS base and limit remain the same for all processes, including the operating system.
- CS of the SYSCALL target has a privilege level of 0.
- CS of the SYSRET target has a privilege level of 3.

SYSCALL/SYSRET do not check for violations of these assumptions.

## **Operation**

```
IF (CS.L \neq 1 ) or (IA32_EFER.LMA \neq 1) or (IA32_EFER.SCE \neq 1) (* Not in 64-Bit Mode or SYSCALL/SYSRET not enabled in IA32_EFER *) THEN #UD; FI; IF (CPL \neq 0) THEN #GP(0); FI; IF (RCX \neq CANONICAL_ADDRESS) THEN #GP(0); FI; IF (OPERAND_SIZE = 64) THEN (* Return to 64-Bit Mode *) EFLAGS \leftarrow R11; CPL \leftarrow 0x3; CS(SEL) \leftarrow IA32_STAR[63:48] + 16; CS(PL) \leftarrow 0x3; SS(SEL) \leftarrow IA32_STAR[63:48] + 8;
```

```
SS(PL) \leftarrow 0x3; \\ RIP \leftarrow RCX; \\ ELSE (* Return to Compatibility Mode *) \\ EFLAGS \leftarrow R11; \\ CPL \leftarrow 0x3; \\ CS(SEL) \leftarrow IA32\_STAR[63:48]; \\ CS(PL) \leftarrow 0x3; \\ SS(SEL) \leftarrow IA32\_STAR[63:48] + 8; \\ SS(PL) \leftarrow 0x3; \\ EIP \leftarrow ECX; \\ FI; \\ \end{tabular}
```

## **Flags Affected**

VM, IF, RF.

#### **Protected Mode Exceptions**

#UD If Mode  $\neq$  64-Bit.

## **Real-Address Mode Exceptions**

#UD If Mode  $\neq$  64-Bit.

## Virtual-8086 Mode Exceptions

#UD If Mode  $\neq$  64-Bit.

# **Compatibility Mode Exceptions**

#UD If Mode  $\neq$  64-Bit.

## **64-Bit Mode Exceptions**

#UD If IA32\_EFER.SCE bit = 0.

If the LOCK prefix is used.

#GP(0) If  $CPL \neq 0$ .

If ECX contains a non-canonical address.

# **TEST—Logical Compare**

Opcode	Instruction	64-Bit Mode	Compat/ Leg Mode	Description
A8 <i>ib</i>	TEST AL, imm8	Valid	Valid	AND <i>imm8</i> with AL; set SF, ZF, PF according to result.
A9 iw	TEST AX, imm16	Valid	Valid	AND <i>imm16</i> with AX; set SF, ZF, PF according to result.
A9 <i>id</i>	TEST EAX, imm32	Valid	Valid	AND <i>imm32</i> with EAX; set SF, ZF, PF according to result.
REX.W + A9 id	TEST RAX, imm32	Valid	N.E.	AND <i>imm32</i> sign-extended to 64-bits with RAX; set SF, ZF, PF according to result.
F6 /0 ib	TEST r/m8, imm8	Valid	Valid	AND <i>imm8</i> with <i>r/m8</i> ; set SF, ZF, PF according to result.
REX + F6 /0 ib	TEST r/m8*, imm8	Valid	N.E.	AND <i>imm8</i> with <i>r/m8</i> ; set SF, ZF, PF according to result.
F7 /0 iw	TEST r/m16, imm16	Valid	Valid	AND <i>imm16</i> with <i>r/m16</i> ; set SF, ZF, PF according to result.
F7 /0 id	TEST r/m32, imm32	Valid	Valid	AND <i>imm32</i> with <i>r/m32</i> ; set SF, ZF, PF according to result.
REX.W + F7 /0 id	TEST r/m64, imm32	Valid	N.E.	AND <i>imm32</i> sign-extended to 64-bits with <i>r/m64</i> ; set SF, ZF, PF according to result.
84 /r	TEST r/m8, r8	Valid	Valid	AND <i>r8</i> with <i>r/m8</i> ; set SF, ZF, PF according to result.
REX + 84 /r	TEST r/m8*, r8*	Valid	N.E.	AND <i>r8</i> with <i>r/m8</i> ; set SF, ZF, PF according to result.
85 /r	TEST r/m16, r16	Valid	Valid	AND r16 with r/m16; set SF, ZF, PF according to result.
85 /r	TEST r/m32, r32	Valid	Valid	AND <i>r32</i> with <i>r/m32</i> ; set SF, ZF, PF according to result.
REX.W + 85 /r	TEST r/m64, r64	Valid	N.E.	AND <i>r64</i> with <i>r/m64</i> ; set SF, ZF, PF according to result.

## NOTES:

<sup>\*</sup> In 64-bit mode, r/m8 can not be encoded to access the following byte registers if a REX prefix is used: AH, BH, CH, DH.

## **Description**

Computes the bit-wise logical AND of first operand (source 1 operand) and the second operand (source 2 operand) and sets the SF, ZF, and PF status flags according to the result. The result is then discarded.

In 64-bit mode, using a REX prefix in the form of REX.R permits access to additional registers (R8-R15). Using a REX prefix in the form of REX.W promotes operation to 64 bits. See the summary chart at the beginning of this section for encoding data and limits.

## **Operation**

```
TEMP \leftarrow SRC1 AND SRC2;

SF \leftarrow MSB(TEMP);

IF TEMP = 0

THEN ZF \leftarrow 1;

ELSE ZF \leftarrow 0;

FI:

PF \leftarrow BitwiseXNOR(TEMP[0:7]);

CF \leftarrow 0;

OF \leftarrow 0;

(* AF is undefined *)
```

## **Flags Affected**

The OF and CF flags are set to 0. The SF, ZF, and PF flags are set according to the result (see the "Operation" section above). The state of the AF flag is undefined.

## **Protected Mode Exceptions**

#GP(0) If a memory operand effective address is outside the CS, DS,

ES, FS, or GS segment limit.

If the DS, ES, FS, or GS register contains a NULL segment

selector.

#SS(0) If a memory operand effective address is outside the SS

segment limit.

#PF(fault-code) If a page fault occurs.

#AC(0) If alignment checking is enabled and an unaligned memory

reference is made while the current privilege level is 3.

#UD If the LOCK prefix is used.

## **Real-Address Mode Exceptions**

#GP If a memory operand effective address is outside the CS, DS,

ES, FS, or GS segment limit.

#SS If a memory operand effective address is outside the SS

segment limit.

**#UD** If the LOCK prefix is used.

## Virtual-8086 Mode Exceptions

#GP(0) If a memory operand effective address is outside the CS, DS,

ES, FS, or GS segment limit.

#SS(0) If a memory operand effective address is outside the SS

segment limit.

#PF(fault-code) If a page fault occurs.

#AC(0) If alignment checking is enabled and an unaligned memory

reference is made.

**#UD** If the LOCK prefix is used.

## **Compatibility Mode Exceptions**

Same exceptions as in protected mode.

## **64-Bit Mode Exceptions**

#SS(0) If a memory address referencing the SS segment is in a non-

canonical form.

#GP(0) If the memory address is in a non-canonical form.

#PF(fault-code) If a page fault occurs.

#AC(0) If alignment checking is enabled and an unaligned memory

reference is made while the current privilege level is 3.

**#UD** If the LOCK prefix is used.

# UCOMISD—Unordered Compare Scalar Double-Precision Floating-Point Values and Set EFLAGS

Opcode	Instruction	64-Bit Mode	Compat/ Leg Mode	Description
66 OF 2E /r	UCOMISD xmm1, xmm2/m64	Valid	Valid	Compares (unordered) the low double-precision floating-point values in xmm1 and xmm2/m64 and set the EFLAGS accordingly.

## **Description**

Performs and unordered compare of the double-precision floating-point values in the low quadwords of source operand 1 (first operand) and source operand 2 (second operand), and sets the ZF, PF, and CF flags in the EFLAGS register according to the result (unordered, greater than, less than, or equal). The OF, SF and AF flags in the EFLAGS register are set to 0. The unordered result is returned if either source operand is a NaN (QNaN or SNaN).

Source operand 1 is an XMM register; source operand 2 can be an XMM register or a 64 bit memory location.

The UCOMISD instruction differs from the COMISD instruction in that it signals a SIMD floating-point invalid operation exception (#I) only when a source operand is an SNaN. The COMISD instruction signals an invalid operation exception if a source operand is either a QNaN or an SNaN.

The EFLAGS register is not updated if an unmasked SIMD floating-point exception is generated.

In 64-bit mode, using a REX prefix in the form of REX.R permits this instruction to access additional registers (XMM8-XMM15).

## Operation

```
\label{eq:result} \begin{split} & \text{RESULT} \leftarrow \text{UnorderedCompare}(\text{SRC1[63:0]} < > \text{SRC2[63:0]}) \, \{ \\ & (* \, \text{Set EFLAGS} \, *) \\ & \text{CASE} \, (\text{RESULT}) \, \text{OF} \\ & \text{UNORDERED:} & \text{ZF, PF, CF} \leftarrow 111; \\ & \text{GREATER\_THAN:} & \text{ZF, PF, CF} \leftarrow 000; \\ & \text{LESS\_THAN:} & \text{ZF, PF, CF} \leftarrow 001; \\ & \text{EQUAL:} & \text{ZF, PF, CF} \leftarrow 100; \\ & \text{ESAC;} \\ & \text{OF, AF, SF} \leftarrow 0; \end{split}
```

## Intel C/C++ Compiler Intrinsic Equivalent

int \_mm\_ucomieq\_sd(\_\_m128d a, \_\_m128d b)
int \_mm\_ucomilt\_sd(\_\_m128d a, \_\_m128d b)
int \_mm\_ucomile\_sd(\_\_m128d a, \_\_m128d b)
int \_mm\_ucomigt\_sd(\_\_m128d a, \_\_m128d b)
int \_mm\_ucomige\_sd(\_\_m128d a, \_\_m128d b)
int \_mm\_ucomineq\_sd(\_\_m128d a, \_\_m128d b)

## **SIMD Floating-Point Exceptions**

Invalid (if SNaN operands), Denormal.

## **Protected Mode Exceptions**

#GP(0) For an illegal memory operand effective address in the CS, DS,

ES, FS or GS segments.

#SS(0) For an illegal address in the SS segment.

#PF(fault-code) For a page fault. #NM If CR0.TS[bit 3] = 1.

#XM If an unmasked SIMD floating-point exception and CR4.OSXM-

MEXCPT[bit 10] = 1.

#UD If an unmasked SIMD floating-point exception and CR4.OSXM-

MEXCPT[bit 10] = 0. If CR0.EM[bit 2] = 1. If CR4.OSFXSR[bit 9] = 0.

If CPUID.01H:EDX.SSE2[bit 26] = 0.

If the LOCK prefix is used.

#AC(0) If alignment checking is enabled and an unaligned memory

reference is made while the current privilege level is 3.

## **Real-Address Mode Exceptions**

GP If any part of the operand lies outside the effective address

space from 0 to FFFFH.

#NM If CR0.TS[bit 3] = 1.

#XM If an unmasked SIMD floating-point exception and CR4.OSXM-

MEXCPT[bit 10] = 1.

#UD If an unmasked SIMD floating-point exception and CR4.OSXM-

MEXCPT[bit 10] = 0.If CR0.EM[bit 2] = 1.

If CR4.OSFXSR[bit 9] = 0.

If CPUID.01H:EDX.SSE2[bit 26] = 0.

If the LOCK prefix is used.

#### Virtual-8086 Mode Exceptions

Same exceptions as in real address mode.

#PF(fault-code) For a page fault.

#AC(0) If alignment checking is enabled and an unaligned memory

reference is made.

## **Compatibility Mode Exceptions**

Same exceptions as in protected mode.

#### **64-Bit Mode Exceptions**

#SS(0) If a memory address referencing the SS segment is in a non-

canonical form.

#GP(0) If the memory address is in a non-canonical form.

#PF(fault-code) For a page fault. #NM If CR0.TS[bit 3] = 1.

#XM If an unmasked SIMD floating-point exception and CR4.OSXM-

MEXCPT[bit 10] = 1.

#UD If an unmasked SIMD floating-point exception and CR4.OSXM-

MEXCPT[bit 10] = 0. If CR0.EM[bit 2] = 1. If CR4.OSFXSR[bit 9] = 0.

If CPUID.01H:EDX.SSE2[bit 26] = 0.

If the LOCK prefix is used.

#AC(0) If alignment checking is enabled and an unaligned memory

reference is made while the current privilege level is 3.

# UCOMISS—Unordered Compare Scalar Single-Precision Floating-Point Values and Set EFLAGS

Opcode	Instruction	64-Bit Mode	Compat/ Leg Mode	Description
OF 2E /r	UCOMISS xmm1, xmm2/m32	Valid	Valid	Compare lower single-precision floating-point value in <i>xmm1</i> register with lower single-precision floating-point value in <i>xmm2/mem</i> and set the status flags accordingly.

#### **Description**

Performs and unordered compare of the single-precision floating-point values in the low doublewords of the source operand 1 (first operand) and the source operand 2 (second operand), and sets the ZF, PF, and CF flags in the EFLAGS register according to the result (unordered, greater than, less than, or equal). In The OF, SF and AF flags in the EFLAGS register are set to 0. The unordered result is returned if either source operand is a NaN (QNaN or SNaN).

Source operand 1 is an XMM register; source operand 2 can be an XMM register or a 32 bit memory location.

The UCOMISS instruction differs from the COMISS instruction in that it signals a SIMD floating-point invalid operation exception (#I) only when a source operand is an SNaN. The COMISS instruction signals an invalid operation exception if a source operand is either a QNaN or an SNaN.

The EFLAGS register is not updated if an unmasked SIMD floating-point exception is generated.

In 64-bit mode, using a REX prefix in the form of REX.R permits this instruction to access additional registers (XMM8-XMM15).

## **Operation**

```
RESULT \leftarrow UnorderedCompare(SRC1[31:0] \Leftrightarrow SRC2[31:0]) {
(* Set EFLAGS *)
CASE (RESULT) OF
    UNORDERED:
                               ZF,PF,CF \leftarrow 111;
    GREATER_THAN:
                               ZF.PF.CF \leftarrow 000;
    LESS THAN:
                               ZF,PF,CF \leftarrow 001;
    EQUAL:
                               ZF,PF,CF \leftarrow 100;
ESAC:
OF.AF.SF \leftarrow 0:
```

## Intel C/C++ Compiler Intrinsic Equivalent

```
int _mm_ucomieq_ss(__m128 a, __m128 b)
int _mm_ucomilt_ss(__m128 a, __m128 b)
int _mm_ucomile_ss(__m128 a, __m128 b)
int _mm_ucomigt_ss(__m128 a, __m128 b)
int _mm_ucomige_ss(__m128 a, __m128 b)
int _mm_ucomineq_ss(__m128 a, __m128 b)
```

## **SIMD Floating-Point Exceptions**

Invalid (if SNaN operands), Denormal.

## **Protected Mode Exceptions**

#GP(0) For an illegal memory operand effective address in the CS, DS,

ES, FS or GS segments.

#SS(0) For an illegal address in the SS segment.

#PF(fault-code) For a page fault. #NM If CR0.TS[bit 3] = 1.

#XM If an unmasked SIMD floating-point exception and CR4.OSXM-

MEXCPT[bit 10] = 1.

#UD If an unmasked SIMD floating-point exception and CR4.OSXM-

 $\begin{aligned} & \mathsf{MEXCPT}[\mathsf{bit}\ 10] = 0. \\ & \mathsf{If}\ \mathsf{CR0.EM}[\mathsf{bit}\ 2] = 1. \\ & \mathsf{If}\ \mathsf{CR4.OSFXSR}[\mathsf{bit}\ 9] = 0. \end{aligned}$ 

If CPUID.01H:EDX.SSE[bit 25] = 0.

If the LOCK prefix is used.

#AC(0) If alignment checking is enabled and an unaligned memory

reference is made while the current privilege level is 3.

## **Real-Address Mode Exceptions**

GP If any part of the operand lies outside the effective address

space from 0 to FFFFH.

#NM If CR0.TS[bit 3] = 1.

#XM If an unmasked SIMD floating-point exception and CR4.OSXM-

MEXCPT[bit 10] = 1.

#UD If an unmasked SIMD floating-point exception and CR4.OSXM-

MEXCPT[bit 10] = 0. If CR0.EM[bit 2] = 1. If CR4.OSFXSR[bit 9] = 0. If CPUID.01H:EDX.SSE[bit 25] = 0.

If the LOCK prefix is used.

## Virtual-8086 Mode Exceptions

Same exceptions as in real address mode.

#PF(fault-code) For a page fault.

#AC(0) If alignment checking is enabled and an unaligned memory

reference is made.

## **Compatibility Mode Exceptions**

Same exceptions as in protected mode.

## **64-Bit Mode Exceptions**

#SS(0) If a memory address referencing the SS segment is in a non-

canonical form.

#GP(0) If the memory address is in a non-canonical form.

#PF(fault-code) For a page fault.

#NM If CR0.TS[bit 3] = 1.

#XM If an unmasked SIMD floating-point exception and CR4.OSXM-

MEXCPT[bit 10] = 1.

#UD If an unmasked SIMD floating-point exception and CR4.OSXM-

MEXCPT[bit 10] = 0. If CR0.EM[bit 2] = 1. If CR4.OSFXSR[bit 9] = 0.

If CPUID.01H:EDX.SSE[bit 25] = 0.

If the LOCK prefix is used.

#AC(0) If alignment checking is enabled and an unaligned memory

reference is made while the current privilege level is 3.

## **UD2—Undefined Instruction**

Opcode	Instruction	64-Bit Mode	Compat/ Leg Mode	Description
OF OB	UD2	Valid	Valid	Raise invalid opcode exception.

## **Description**

Generates an invalid opcode. This instruction is provided for software testing to explicitly generate an invalid opcode. The opcode for this instruction is reserved for this purpose.

Other than raising the invalid opcode exception, this instruction is the same as the NOP instruction.

This instruction's operation is the same in non-64-bit modes and 64-bit mode.

## Operation

**#UD** (\* Generates invalid opcode exception \*);

## **Flags Affected**

None.

# **Exceptions (All Operating Modes)**

#UD

Raises an invalid opcode exception in all operating modes.

# UNPCKHPD—Unpack and Interleave High Packed Double-Precision Floating-Point Values

Opcode	Instruction	64-Bit Mode	Compat/ Leg Mode	Description
66 OF 15 /r	UNPCKHPD xmm1, xmm2/m128	Valid	Valid	Unpacks and Interleaves double-precision floating-point values from high quadwords of xmm1 and xmm2/m128.

## **Description**

Performs an interleaved unpack of the high double-precision floating-point values from the source operand (second operand) and the destination operand (first operand). See Figure 4-16. The source operand can be an XMM register or a 128-bit memory location; the destination operand is an XMM register.

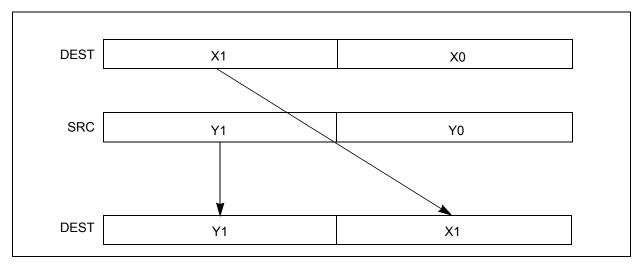


Figure 4-16. UNPCKHPD Instruction High Unpack and Interleave Operation

When unpacking from a memory operand, an implementation may fetch only the appropriate 64 bits; however, alignment to 16-byte boundary and normal segment checking will still be enforced.

In 64-bit mode, using a REX prefix in the form of REX.R permits this instruction to access additional registers (XMM8-XMM15).

## **Operation**

DEST[63:0]  $\leftarrow$  DEST[127:64]; DEST[127:64]  $\leftarrow$  SRC[127:64];

## Intel C/C++ Compiler Intrinsic Equivalent

UNPCKHPD\_\_m128d \_mm\_unpackhi\_pd(\_\_m128d a, \_\_m128d b)

## **SIMD Floating-Point Exceptions**

None.

#### **Protected Mode Exceptions**

#GP(0) For an illegal memory operand effective address in the CS, DS,

ES, FS or GS segments.

If a memory operand is not aligned on a 16-byte boundary,

regardless of segment.

#SS(0) For an illegal address in the SS segment.

#PF(fault-code) For a page fault.

#NM If CR0.TS[bit 3] = 1.

#UD If CR0.EM[bit 2] = 1.

If CR4.OSFXSR[bit 9] = 0.

If CPUID.01H:EDX.SSE2[bit 26] = 0.

If the LOCK prefix is used.

## Real-Address Mode Exceptions

#GP If a memory operand is not aligned on a 16-byte boundary,

regardless of segment.

If any part of the operand lies outside the effective address

space from 0 to FFFFH.

#NM If CR0.TS[bit 3] = 1. #UD If CR0.EM[bit 2] = 1.

If CR4.OSFXSR[bit 9] = 0.

If CPUID.01H:EDX.SSE2[bit 26] = 0.

If the LOCK prefix is used.

#### Virtual-8086 Mode Exceptions

Same exceptions as in real address mode.

#PF(fault-code) For a page fault.

#### **Compatibility Mode Exceptions**

## **64-Bit Mode Exceptions**

#SS(0) If a memory address referencing the SS segment is in a non-

canonical form.

#GP(0) If the memory address is in a non-canonical form.

If memory operand is not aligned on a 16-byte boundary,

regardless of segment.

#PF(fault-code) For a page fault.

#NM If CR0.TS[bit 3] = 1. #UD If CR0.EM[bit 2] = 1.

If CR4.OSFXSR[bit 9] = 0.

If CPUID.01H:EDX.SSE2[bit 26] = 0.

If the LOCK prefix is used.

# UNPCKHPS—Unpack and Interleave High Packed Single-Precision Floating-Point Values

Opcode	Instruction	64-Bit Mode	Compat/ Leg Mode	Description
0F 15 /r	UNPCKHPS xmm1, xmm2/m128	Valid	Valid	Unpacks and Interleaves single- precision floating-point values from high quadwords of xmm1 and xmm2/mem into xmm1.

## **Description**

Performs an interleaved unpack of the high-order single-precision floating-point values from the source operand (second operand) and the destination operand (first operand). See Figure 4-17. The source operand can be an XMM register or a 128-bit memory location; the destination operand is an XMM register.

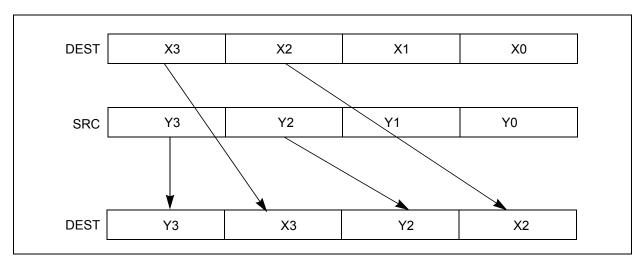


Figure 4-17. UNPCKHPS Instruction High Unpack and Interleave Operation

When unpacking from a memory operand, an implementation may fetch only the appropriate 64 bits; however, alignment to 16-byte boundary and normal segment checking will still be enforced.

In 64-bit mode, using a REX prefix in the form of REX.R permits this instruction to access additional registers (XMM8-XMM15).

## Operation

DEST[31:0]  $\leftarrow$  DEST[95:64]; DEST[63:32]  $\leftarrow$  SRC[95:64]; DEST[95:64]  $\leftarrow$  DEST[127:96]; DEST[127:96]  $\leftarrow$  SRC[127:96];

#### Intel C/C++ Compiler Intrinsic Equivalent

UNPCKHPS \_\_m128 \_mm\_unpackhi\_ps(\_\_m128 a, \_\_m128 b)

## **SIMD Floating-Point Exceptions**

None.

## **Protected Mode Exceptions**

#GP(0) For an illegal memory operand effective address in the CS, DS,

ES, FS or GS segments.

If a memory operand is not aligned on a 16-byte boundary,

regardless of segment.

#SS(0) For an illegal address in the SS segment.

#PF(fault-code) For a page fault. #NM If CR0.TS[bit 3] = 1. #UD If CR0.EM[bit 2] = 1.

If CR4.OSFXSR[bit 9] = 0.

If CPUID.01H:EDX.SSE[bit 25] = 0.

If the LOCK prefix is used.

## **Real-Address Mode Exceptions**

#GP If a memory operand is not aligned on a 16-byte boundary,

regardless of segment.

If any part of the operand lies outside the effective address

space from 0 to FFFFH.

#NM If CR0.TS[bit 3] = 1. #UD If CR0.EM[bit 2] = 1.

If CR4.OSFXSR[bit 9] = 0.

If CPUID.01H:EDX.SSE[bit 25] = 0.

If the LOCK prefix is used.

## Virtual-8086 Mode Exceptions

Same exceptions as in real address mode.

#PF(fault-code) For a page fault.

## **Compatibility Mode Exceptions**

## **64-Bit Mode Exceptions**

#SS(0) If a memory address referencing the SS segment is in a non-

canonical form.

#GP(0) If the memory address is in a non-canonical form.

If memory operand is not aligned on a 16-byte boundary,

regardless of segment.

#PF(fault-code) For a page fault.

#NM If CR0.TS[bit 3] = 1. #UD If CR0.EM[bit 2] = 1.

If CR4.OSFXSR[bit 9] = 0.

If CPUID.01H:EDX.SSE[bit 25] = 0.

If the LOCK prefix is used.

# UNPCKLPD—Unpack and Interleave Low Packed Double-Precision Floating-Point Values

Opcode	Instruction	64-Bit Mode	Compat/ Leg Mode	Description
66 0F 14 /r	UNPCKLPD xmm1, xmm2/m128	Valid	Valid	Unpacks and Interleaves double-precision floating-point values from low quadwords of xmm1 and xmm2/m128.

## **Description**

Performs an interleaved unpack of the low double-precision floating-point values from the source operand (second operand) and the destination operand (first operand). See Figure 4-18. The source operand can be an XMM register or a 128-bit memory location; the destination operand is an XMM register.

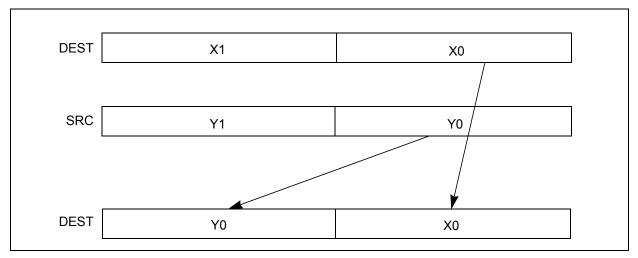


Figure 4-18. UNPCKLPD Instruction Low Unpack and Interleave Operation

When unpacking from a memory operand, an implementation may fetch only the appropriate 64 bits; however, alignment to 16-byte boundary and normal segment checking will still be enforced.

In 64-bit mode, using a REX prefix in the form of REX.R permits this instruction to access additional registers (XMM8-XMM15).

## **Operation**

DEST[63:0]  $\leftarrow$  DEST[63:0]; DEST[127:64]  $\leftarrow$  SRC[63:0];

## Intel C/C++ Compiler Intrinsic Equivalent

UNPCKHPD\_\_m128d \_mm\_unpacklo\_pd(\_\_m128d a, \_\_m128d b)

## **SIMD Floating-Point Exceptions**

None.

#### **Protected Mode Exceptions**

#GP(0) For an illegal memory operand effective address in the CS, DS,

ES, FS or GS segments.

If a memory operand is not aligned on a 16-byte boundary,

regardless of segment.

#SS(0) For an illegal address in the SS segment.

#PF(fault-code) For a page fault.

#NM If CR0.TS[bit 3] = 1.

#UD If CR0.EM[bit 2] = 1.

If CR4.OSFXSR[bit 9] = 0.

If CPUID.01H:EDX.SSE2[bit 26] = 0.

If the LOCK prefix is used.

## Real-Address Mode Exceptions

#GP If a memory operand is not aligned on a 16-byte boundary,

regardless of segment.

If any part of the operand lies outside the effective address

space from 0 to FFFFH.

#NM If CR0.TS[bit 3] = 1. #UD If CR0.EM[bit 2] = 1.

If CR4.OSFXSR[bit 9] = 0.

If CPUID.01H:EDX.SSE2[bit 26] = 0.

If the LOCK prefix is used.

#### Virtual-8086 Mode Exceptions

Same exceptions as in real address mode.

#PF(fault-code) For a page fault.

#### **Compatibility Mode Exceptions**

## **64-Bit Mode Exceptions**

#SS(0) If a memory address referencing the SS segment is in a non-

canonical form.

#GP(0) If the memory address is in a non-canonical form.

If memory operand is not aligned on a 16-byte boundary,

regardless of segment.

#PF(fault-code) For a page fault.

#NM If CR0.TS[bit 3] = 1. #UD If CR0.EM[bit 2] = 1.

If CR4.OSFXSR[bit 9] = 0.

If CPUID.01H:EDX.SSE2[bit 26] = 0.

If the LOCK prefix is used.

# UNPCKLPS—Unpack and Interleave Low Packed Single-Precision Floating-Point Values

Opcode	Instruction	64-Bit Mode	Compat/ Leg Mode	Description
0F 14 /r	UNPCKLPS xmm1, xmm2/m128	Valid	Valid	Unpacks and Interleaves single- precision floating-point values from low quadwords of xmm1 and xmm2/mem into xmm1.

## **Description**

Performs an interleaved unpack of the low-order single-precision floating-point values from the source operand (second operand) and the destination operand (first operand). See Figure 4-19. The source operand can be an XMM register or a 128-bit memory location; the destination operand is an XMM register.

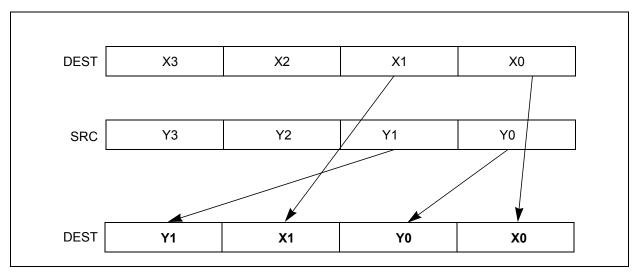


Figure 4-19. UNPCKLPS Instruction Low Unpack and Interleave Operation

When unpacking from a memory operand, an implementation may fetch only the appropriate 64 bits; however, alignment to 16-byte boundary and normal segment checking will still be enforced.

In 64-bit mode, using a REX prefix in the form of REX.R permits this instruction to access additional registers (XMM8-XMM15).

## Operation

DEST[31:0]  $\leftarrow$  DEST[31:0]; DEST[63:32]  $\leftarrow$  SRC[31:0]; DEST[95:64]  $\leftarrow$  DEST[63:32]; DEST[127:96]  $\leftarrow$  SRC[63:32];

#### Intel C/C++ Compiler Intrinsic Equivalent

UNPCKLPS \_\_m128 \_mm\_unpacklo\_ps(\_\_m128 a, \_\_m128 b)

#### SIMD Floating-Point Exceptions

None.

#### **Protected Mode Exceptions**

#GP(0) For an illegal memory operand effective address in the CS, DS,

ES, FS or GS segments.

If a memory operand is not aligned on a 16-byte boundary,

regardless of segment.

#SS(0) For an illegal address in the SS segment.

#PF(fault-code) For a page fault. #NM If CR0.TS[bit 3] = 1. #UD If CR0.EM[bit 2] = 1.

If CR4.OSFXSR[bit 9] = 0.

If CPUID.01H:EDX.SSE[bit 25] = 0.

If the LOCK prefix is used.

#### **Real-Address Mode Exceptions**

#GP If a memory operand is not aligned on a 16-byte boundary,

regardless of segment.

If any part of the operand lies outside the effective address

space from 0 to FFFFH.

#NM If CR0.TS[bit 3] = 1. #UD If CR0.EM[bit 2] = 1.

If CR4.OSFXSR[bit 9] = 0.

If CPUID.01H:EDX.SSE[bit 25] = 0.

If the LOCK prefix is used.

#### Virtual-8086 Mode Exceptions

Same exceptions as in real address mode.

#PF(fault-code) For a page fault.

#### **Compatibility Mode Exceptions**

## **64-Bit Mode Exceptions**

#SS(0) If a memory address referencing the SS segment is in a non-

canonical form.

#GP(0) If the memory address is in a non-canonical form.

If memory operand is not aligned on a 16-byte boundary,

regardless of segment.

#PF(fault-code) For a page fault.

#NM If CR0.TS[bit 3] = 1. #UD If CR0.EM[bit 2] = 1.

If CR4.OSFXSR[bit 9] = 0.

If CPUID.01H:EDX.SSE[bit 25] = 0.

If the LOCK prefix is used.

VERR/VERW—Verify	a Segment for Reading	or Writing

Opcode	Instruction	64-Bit Mode	Compat/ Leg Mode	Description
0F 00 /4	VERR r/m16	Valid	Valid	Set ZF=1 if segment specified with r/m16 can be read.
0F 00 /5	VERW r/m16	Valid	Valid	Set ZF=1 if segment specified with r/m16 can be written.

#### **Description**

Verifies whether the code or data segment specified with the source operand is readable (VERR) or writable (VERW) from the current privilege level (CPL). The source operand is a 16-bit register or a memory location that contains the segment selector for the segment to be verified. If the segment is accessible and readable (VERR) or writable (VERW), the ZF flag is set; otherwise, the ZF flag is cleared. Code segments are never verified as writable. This check cannot be performed on system segments.

To set the ZF flag, the following conditions must be met:

- The segment selector is not NULL.
- The selector must denote a descriptor within the bounds of the descriptor table (GDT or LDT).
- The selector must denote the descriptor of a code or data segment (not that of a system segment or gate).
- For the VERR instruction, the segment must be readable.
- For the VERW instruction, the segment must be a writable data segment.
- If the segment is not a conforming code segment, the segment's DPL must be greater than or equal to (have less or the same privilege as) both the CPL and the segment selector's RPL.

The validation performed is the same as is performed when a segment selector is loaded into the DS, ES, FS, or GS register, and the indicated access (read or write) is performed. The segment selector's value cannot result in a protection exception, enabling the software to anticipate possible segment access problems.

This instruction's operation is the same in non-64-bit modes and 64-bit mode. The operand size is fixed at 16 bits.

## Operation

```
IF SRC(Offset) > (GDTR(Limit)) or (LDTR(Limit))
THEN ZF \leftarrow 0; FI;
```

Read segment descriptor;

IF SegmentDescriptor(DescriptorType) = 0 (\* System segment \*)

```
or (SegmentDescriptor(Type) \neq conforming code segment) and (CPL > DPL) or (RPL > DPL) 
THEN 
ZF \leftarrow 0; 
ELSE 
IF ((Instruction = VERR) and (Segment readable)) 
or ((Instruction = VERW) and (Segment writable)) 
THEN 
ZF \leftarrow 1; 
FI;
```

## **Flags Affected**

The ZF flag is set to 1 if the segment is accessible and readable (VERR) or writable (VERW); otherwise, it is set to 0.

## **Protected Mode Exceptions**

The only exceptions generated for these instructions are those related to illegal addressing of the source operand.

#GP(0) If a memory operand effective address is outside the CS, DS,

ES, FS, or GS segment limit.

If the DS, ES, FS, or GS register is used to access memory and it

contains a NULL segment selector.

#SS(0) If a memory operand effective address is outside the SS

segment limit.

#PF(fault-code) If a page fault occurs.

#AC(0) If alignment checking is enabled and an unaligned memory

reference is made while the current privilege level is 3.

#UD If the LOCK prefix is used.

## Real-Address Mode Exceptions

#UD The VERR and VERW instructions are not recognized in real-

address mode.

If the LOCK prefix is used.

## Virtual-8086 Mode Exceptions

#UD The VERR and VERW instructions are not recognized in virtual-

8086 mode.

If the LOCK prefix is used.

## **Compatibility Mode Exceptions**

Same exceptions as in protected mode.

## **64-Bit Mode Exceptions**

#SS(0) If a memory address referencing the SS segment is in a non-

canonical form.

#GP(0) If the memory address is in a non-canonical form.

#PF(fault-code) If a page fault occurs.

#AC(0) If alignment checking is enabled and an unaligned memory

reference is made while the current privilege level is 3.

**#UD** If the LOCK prefix is used.

#### WAIT/FWAIT—Wait

Opcode	Instruction	64-Bit Mode	Compat/ Leg Mode	Description
9B	WAIT	Valid	Valid	Check pending unmasked floating- point exceptions.
9B	FWAIT	Valid	Valid	Check pending unmasked floating- point exceptions.

#### **Description**

Causes the processor to check for and handle pending, unmasked, floating-point exceptions before proceeding. (FWAIT is an alternate mnemonic for WAIT.)

This instruction is useful for synchronizing exceptions in critical sections of code. Coding a WAIT instruction after a floating-point instruction insures that any unmasked floating-point exceptions the instruction may raise are handled before the processor can modify the instruction's results. See the section titled "Floating-Point Exception Synchronization" in Chapter 8 of the *Intel*® *64 and IA-32 Architectures Software Developer's Manual, Volume 1*, for more information on using the WAIT/FWAIT instruction.

This instruction's operation is the same in non-64-bit modes and 64-bit mode.

## Operation

CheckForPendingUnmaskedFloatingPointExceptions;

## **FPU Flags Affected**

The C0, C1, C2, and C3 flags are undefined.

#### **Floating-Point Exceptions**

None.

## **Protected Mode Exceptions**

#NM If CR0.MP[bit 1] = 1 and CR0.TS[bit 3] = 1.

**#UD** If the LOCK prefix is used.

## **Real-Address Mode Exceptions**

Same exceptions as in protected mode.

## Virtual-8086 Mode Exceptions

## INSTRUCTION SET REFERENCE, N-Z

# **Compatibility Mode Exceptions**

Same exceptions as in protected mode.

# **64-Bit Mode Exceptions**

#### WBINVD—Write Back and Invalidate Cache

Opcode	Instruction	64-Bit Mode	Compat/ Leg Mode	Description
0F 09	WBINVD	Valid	Valid	Write back and flush Internal caches; initiate writing-back and flushing of external caches.

#### **Description**

Writes back all modified cache lines in the processor's internal cache to main memory and invalidates (flushes) the internal caches. The instruction then issues a special-function bus cycle that directs external caches to also write back modified data and another bus cycle to indicate that the external caches should be invalidated.

After executing this instruction, the processor does not wait for the external caches to complete their write-back and flushing operations before proceeding with instruction execution. It is the responsibility of hardware to respond to the cache write-back and flush signals. The amount of time or cycles for WBINVD to complete will vary due to size and other factors of different cache hierarchies. As a consequence, the use of the WBINVD instruction can have an impact on logical processor interrupt/event response time.

The WBINVD instruction is a privileged instruction. When the processor is running in protected mode, the CPL of a program or procedure must be 0 to execute this instruction. This instruction is also a serializing instruction (see "Serializing Instructions" in Chapter 9 of the Intel® 64 and IA-32 Architectures Software Developer's Manual, Volume 3A).

In situations where cache coherency with main memory is not a concern, software can use the INVD instruction.

This instruction's operation is the same in non-64-bit modes and 64-bit mode.

## **IA-32 Architecture Compatibility**

The WBINVD instruction is implementation dependent, and its function may be implemented differently on future Intel 64 and IA-32 processors. The instruction is not supported on IA-32 processors earlier than the Intel486 processor.

#### Operation

WriteBack(InternalCaches);
Flush(InternalCaches);
SignalWriteBack(ExternalCaches);
SignalFlush(ExternalCaches);
Continue; (\* Continue execution \*)

## **Flags Affected**

None.

## **Protected Mode Exceptions**

#GP(0) If the current privilege level is not 0.

#UD If the LOCK prefix is used.

## **Real-Address Mode Exceptions**

#UD If the LOCK prefix is used.

## **Virtual-8086 Mode Exceptions**

#GP(0) WBINVD cannot be executed at the virtual-8086 mode.

## **Compatibility Mode Exceptions**

Same exceptions as in protected mode.

## **64-Bit Mode Exceptions**

WRMSR—	Write to	Model S	Specific	Register
	volite to		Peenie	register

Opcode	Instruction	64-Bit Mode	Compat/ Leg Mode	Description
0F 30	WRMSR	Valid	Valid	Write the value in EDX:EAX to MSR specified by ECX.

## **Description**

Writes the contents of registers EDX:EAX into the 64-bit model specific register (MSR) specified in the ECX register. (On processors that support the Intel 64 architecture, the high-order 32 bits of RCX are ignored.) The contents of the EDX register are copied to high-order 32 bits of the selected MSR and the contents of the EAX register are copied to low-order 32 bits of the MSR. (On processors that support the Intel 64 architecture, the high-order 32 bits of each of RAX and RDX are ignored.) Undefined or reserved bits in an MSR should be set to values previously read.

This instruction must be executed at privilege level 0 or in real-address mode; otherwise, a general protection exception #GP(0) is generated. Specifying a reserved or unimplemented MSR address in ECX will also cause a general protection exception. The processor will also generate a general protection exception if software attempts to write to bits in a reserved MSR.

When the WRMSR instruction is used to write to an MTRR, the TLBs are invalidated. This includes global entries (see "Translation Lookaside Buffers (TLBs)" in Chapter 3 of the *Intel*® 64 and *IA-32 Architectures Software Developer's Manual, Volume 3A*).

MSRs control functions for testability, execution tracing, performance-monitoring and machine check errors. Appendix B, "Model-Specific Registers (MSRs)", in the Intel® 64 and IA-32 Architectures Software Developer's Manual, Volume 3B, lists all MSRs that can be read with this instruction and their addresses. Note that each processor family has its own set of MSRs.

The WRMSR instruction is a serializing instruction (see "Serializing Instructions" in Chapter 7 of the *Intel*® 64 and *IA-32 Architectures Software Developer's Manual, Volume 3A*).

The CPUID instruction should be used to determine whether MSRs are supported (CPUID.01H:EDX[5] = 1) before using this instruction.

## IA-32 Architecture Compatibility

The MSRs and the ability to read them with the WRMSR instruction were introduced into the IA-32 architecture with the Pentium processor. Execution of this instruction by an IA-32 processor earlier than the Pentium processor results in an invalid opcode exception #UD.

#### Operation

 $MSR[ECX] \leftarrow EDX:EAX;$ 

#### **Flags Affected**

None.

## **Protected Mode Exceptions**

#GP(0) If the current privilege level is not 0.

If the value in ECX specifies a reserved or unimplemented MSR

address.

If the value in EDX: EAX sets bits that are reserved in the MSR

specified by ECX.

**#UD** If the LOCK prefix is used.

## **Real-Address Mode Exceptions**

#GP If the value in ECX specifies a reserved or unimplemented MSR

address.

If the value in EDX: EAX sets bits that are reserved in the MSR

specified by ECX.

#UD If the LOCK prefix is used.

## Virtual-8086 Mode Exceptions

#GP(0) The WRMSR instruction is not recognized in virtual-8086 mode.

## **Compatibility Mode Exceptions**

Same exceptions as in protected mode.

#### **64-Bit Mode Exceptions**

# XADD—Exchange and Add

Opcode	Instruction	64-Bit Mode	Compat/ Leg Mode	Description
0F C0 /r	XADD r/m8, r8	Valid	Valid	Exchange <i>r8</i> and <i>r/m8</i> ; load sum into <i>r/m8</i> .
REX + 0F C0 /r	XADD r/m8*, r8*	Valid	N.E.	Exchange <i>r8</i> and <i>r/m8</i> ; load sum into <i>r/m8</i> .
0F C1 /r	XADD r/m16, r16	Valid	Valid	Exchange <i>r16</i> and <i>r/m16</i> ; load sum into <i>r/m16</i> .
0F C1 /r	XADD r/m32, r32	Valid	Valid	Exchange <i>r32</i> and <i>r/m32</i> ; load sum into <i>r/m32</i> .
REX.W + 0F C1 /r	XADD r/m64, r64	Valid	N.E.	Exchange <i>r64</i> and <i>r/m64</i> ; load sum into <i>r/m64</i> .

#### NOTES:

#### **Description**

Exchanges the first operand (destination operand) with the second operand (source operand), then loads the sum of the two values into the destination operand. The destination operand can be a register or a memory location; the source operand is a register.

In 64-bit mode, the instruction's default operation size is 32 bits. Using a REX prefix in the form of REX.R permits access to additional registers (R8-R15). Using a REX prefix in the form of REX.W promotes operation to 64 bits. See the summary chart at the beginning of this section for encoding data and limits.

This instruction can be used with a LOCK prefix to allow the instruction to be executed atomically.

### **IA-32 Architecture Compatibility**

IA-32 processors earlier than the Intel486 processor do not recognize this instruction. If this instruction is used, you should provide an equivalent code sequence that runs on earlier processors.

# Operation

```
TEMP ← SRC + DEST;
SRC ← DEST;
DEST ← TEMP;
```

<sup>\*</sup> In 64-bit mode, r/m8 can not be encoded to access the following byte registers if a REX prefix is used: AH, BH, CH, DH.

#### Flags Affected

The CF, PF, AF, SF, ZF, and OF flags are set according to the result of the addition, which is stored in the destination operand.

#### **Protected Mode Exceptions**

#GP(0) If the destination is located in a non-writable segment.

If a memory operand effective address is outside the CS, DS,

ES, FS, or GS segment limit.

If the DS, ES, FS, or GS register contains a NULL segment

selector.

#SS(0) If a memory operand effective address is outside the SS

segment limit.

#PF(fault-code) If a page fault occurs.

#AC(0) If alignment checking is enabled and an unaligned memory

reference is made while the current privilege level is 3.

#UD If the LOCK prefix is used but the destination is not a memory

operand.

#### **Real-Address Mode Exceptions**

#GP If a memory operand effective address is outside the CS, DS,

ES, FS, or GS segment limit.

#SS If a memory operand effective address is outside the SS

segment limit.

#UD If the LOCK prefix is used but the destination is not a memory

operand.

#### Virtual-8086 Mode Exceptions

#GP(0) If a memory operand effective address is outside the CS, DS,

ES, FS, or GS segment limit.

#SS(0) If a memory operand effective address is outside the SS

segment limit.

#PF(fault-code) If a page fault occurs.

#AC(0) If alignment checking is enabled and an unaligned memory

reference is made.

#UD If the LOCK prefix is used but the destination is not a memory

operand.

#### **Compatibility Mode Exceptions**

Same exceptions as in protected mode.

# **64-Bit Mode Exceptions**

#SS(0) If a memory address referencing the SS segment is in a non-

canonical form.

#GP(0) If the memory address is in a non-canonical form.

#PF(fault-code) If a page fault occurs.

#AC(0) If alignment checking is enabled and an unaligned memory

reference is made while the current privilege level is 3.

#UD If the LOCK prefix is used but the destination is not a memory

operand.

# XCHG—Exchange Register/Memory with Register

Opcode	Instruction	64-Bit Mode	Compat/ Leg Mode	Description
90+rw	XCHG AX, r16	Valid	Valid	Exchange <i>r16</i> with AX.
90+rw	XCHG <i>r16</i> , AX	Valid	Valid	Exchange AX with <i>r16.</i>
90+ <i>rd</i>	XCHG EAX, 132	Valid	Valid	Exchange <i>r32</i> with EAX.
REX.W + 90+rd	XCHG RAX, <i>r64</i>	Valid	N.E.	Exchange <i>r64</i> with RAX.
90+ <i>rd</i>	XCHG <i>г32,</i> EAX	Valid	Valid	Exchange EAX with <i>r32.</i>
REX.W + 90+rd	XCHG <i>r64</i> , RAX	Valid	N.E.	Exchange RAX with <i>r64.</i>
86 /r	XCHG r/m8, r8	Valid	Valid	Exchange $r8$ (byte register) with byte from $r/m8$ .
REX + 86 /r	XCHG r/m8*, r8*	Valid	N.E.	Exchange <i>r8</i> (byte register) with byte from <i>r/m8.</i>
86 /r	XCHG r8, r/m8	Valid	Valid	Exchange byte from <i>r/m8</i> with <i>r8</i> (byte register).
REX + 86 /r	XCHG <i>r8*, r/m8*</i>	Valid	N.E.	Exchange byte from <i>r/m8</i> with <i>r8</i> (byte register).
87 /r	XCHG <i>r/m16, r16</i>	Valid	Valid	Exchange <i>r16</i> with word from <i>r/m16.</i>
87 /r	XCHG <i>r16, r/m16</i>	Valid	Valid	Exchange word from $r/m16$ with $r16$ .
87 /r	XCHG r/m32, r32	Valid	Valid	Exchange <i>r32</i> with doubleword from <i>r/m32.</i>
REX.W + 87 /r	XCHG <i>r/m64, r64</i>	Valid	N.E.	Exchange <i>r64</i> with quadword from <i>r/m64.</i>
87 /r	XCHG <i>r32, r/m32</i>	Valid	Valid	Exchange doubleword from r/m32 with r32.
REX.W + 87 /r	XCHG <i>r64, r/m64</i>	Valid	N.E.	Exchange quadword from <i>r/m64</i> with <i>r64</i> .

#### **NOTES:**

# **Description**

Exchanges the contents of the destination (first) and source (second) operands. The operands can be two general-purpose registers or a register and a memory location. If a memory operand is referenced, the processor's locking protocol is automatically implemented for the duration of the exchange operation, regardless of the presence

<sup>\*</sup> In 64-bit mode, r/m8 can not be encoded to access the following byte registers if a REX prefix is used: AH, BH, CH, DH.

or absence of the LOCK prefix or of the value of the IOPL. (See the LOCK prefix description in this chapter for more information on the locking protocol.)

This instruction is useful for implementing semaphores or similar data structures for process synchronization. (See "Bus Locking" in Chapter 7 of the *Intel*® *64 and IA-32 Architectures Software Developer's Manual, Volume 3A*, for more information on bus locking.)

The XCHG instruction can also be used instead of the BSWAP instruction for 16-bit operands.

In 64-bit mode, the instruction's default operation size is 32 bits. Using a REX prefix in the form of REX.R permits access to additional registers (R8-R15). Using a REX prefix in the form of REX.W promotes operation to 64 bits. See the summary chart at the beginning of this section for encoding data and limits.

#### **Operation**

```
TEMP \leftarrow DEST;
DEST \leftarrow SRC;
SRC \leftarrow TEMP;
```

#### **Flags Affected**

None.

#### **Protected Mode Exceptions**

#GP(0) If either operand is in a non-writable segment.

If a memory operand effective address is outside the CS, DS,

ES, FS, or GS segment limit.

If the DS, ES, FS, or GS register contains a NULL segment

selector.

#SS(0) If a memory operand effective address is outside the SS

segment limit.

#PF(fault-code) If a page fault occurs.

#AC(0) If alignment checking is enabled and an unaligned memory

reference is made while the current privilege level is 3.

#UD If the LOCK prefix is used but the destination is not a memory

operand.

# **Real-Address Mode Exceptions**

#GP If a memory operand effective address is outside the CS, DS,

ES, FS, or GS segment limit.

#SS If a memory operand effective address is outside the SS

segment limit.

#UD If the LOCK prefix is used but the destination is not a memory

operand.

### Virtual-8086 Mode Exceptions

#GP(0) If a memory operand effective address is outside the CS, DS,

ES, FS, or GS segment limit.

#SS(0) If a memory operand effective address is outside the SS

segment limit.

#PF(fault-code) If a page fault occurs.

#AC(0) If alignment checking is enabled and an unaligned memory

reference is made.

#UD If the LOCK prefix is used but the destination is not a memory

operand.

### **Compatibility Mode Exceptions**

Same exceptions as in protected mode.

#### **64-Bit Mode Exceptions**

#SS(0) If a memory address referencing the SS segment is in a non-

canonical form.

#GP(0) If the memory address is in a non-canonical form.

#PF(fault-code) If a page fault occurs.

#AC(0) If alignment checking is enabled and an unaligned memory

reference is made while the current privilege level is 3.

#UD If the LOCK prefix is used but the destination is not a memory

operand.

# XGETBV—Get Value of Extended Control Register

Opcode	Instruction	64-Bit Mode	Compat/ Leg Mode	Description
0F 01 D0	XGETBV	Valid	Valid	Reads an XCR specified by ECX into EDX:EAX.

#### **Description**

Reads the contents of the extended control register (XCR) specified in the ECX register into registers EDX:EAX. (On processors that support the Intel 64 architecture, the high-order 32 bits of RCX are ignored.) The EDX register is loaded with the high-order 32 bits of the XCR and the EAX register is loaded with the low-order 32 bits. (On processors that support the Intel 64 architecture, the high-order 32 bits of each of RAX and RDX are cleared.) If fewer than 64 bits are implemented in the XCR being read, the values returned to EDX:EAX in unimplemented bit locations are undefined.

Specifying a reserved or unimplemented XCR in ECX causes a general protection exception.

Currently, only XCR0 (the XFEATURE\_ENABLED\_MASK register) is supported. Thus, all other values of ECX are reserved and will cause a #GP(0).

#### **Operation**

 $EDX:EAX \leftarrow XCR[ECX];$ 

#### **Flags Affected**

None.

# **Protected Mode Exceptions**

#GP(0) If an invalid XCR is specified in ECX. #UD If CPUID.01H:ECX.XSAVE[bit 26] = 0.

If CR4.OSXSAVE[bit 18] = 0. If the LOCK prefix is used.

If 66H, F3H or F2H prefix is used.

# **Real-Address Mode Exceptions**

#GP If an invalid XCR is specified in ECX.
#UD If CPUID.01H:ECX.XSAVE[bit 26] = 0.

If CR4.OSXSAVE[bit 18] = 0. If the LOCK prefix is used.

If 66H, F3H or F2H prefix is used.

# **Virtual-8086 Mode Exceptions**

Same exceptions as in protected mode.

# **Compatibility Mode Exceptions**

Same exceptions as in protected mode.

# **64-Bit Mode Exceptions**

Same exceptions as in protected mode.

XLAT/XLATB—Tab	le Look	c-up Tran	slation
----------------	---------	-----------	---------

Opcode	Instruction	64-Bit Mode	Compat/ Leg Mode	Description
D7	XLAT m8	Valid	Valid	Set AL to memory byte DS:[(E)BX + unsigned AL].
D7	XLATB	Valid	Valid	Set AL to memory byte DS:[(E)BX + unsigned AL].
REX.W + D7	XLATB	Valid	N.E.	Set AL to memory byte [RBX + unsigned AL].

#### **Description**

Locates a byte entry in a table in memory, using the contents of the AL register as a table index, then copies the contents of the table entry back into the AL register. The index in the AL register is treated as an unsigned integer. The XLAT and XLATB instructions get the base address of the table in memory from either the DS:EBX or the DS:BX registers (depending on the address-size attribute of the instruction, 32 or 16, respectively). (The DS segment may be overridden with a segment override prefix.)

At the assembly-code level, two forms of this instruction are allowed: the "explicit-operand" form and the "no-operand" form. The explicit-operand form (specified with the XLAT mnemonic) allows the base address of the table to be specified explicitly with a symbol. This explicit-operands form is provided to allow documentation; however, note that the documentation provided by this form can be misleading. That is, the symbol does not have to specify the correct base address. The base address is always specified by the DS:(E)BX registers, which must be loaded correctly before the XLAT instruction is executed.

The no-operands form (XLATB) provides a "short form" of the XLAT instructions. Here also the processor assumes that the DS:(E)BX registers contain the base address of the table.

In 64-bit mode, operation is similar to that in legacy or compatibility mode. AL is used to specify the table index (the operand size is fixed at 8 bits). RBX, however, is used to specify the table's base address. See the summary chart at the beginning of this section for encoding data and limits.

# **Operation**

```
IF AddressSize = 16

THEN
AL \leftarrow (DS:BX + ZeroExtend(AL));
ELSE IF (AddressSize = 32)
AL \leftarrow (DS:EBX + ZeroExtend(AL)); FI;
ELSE (AddressSize = 64)
```

 $AL \leftarrow (RBX + ZeroExtend(AL));$ 

FI;

#### **Flags Affected**

None.

#### **Protected Mode Exceptions**

#GP(0) If a memory operand effective address is outside the CS, DS,

ES, FS, or GS segment limit.

If the DS, ES, FS, or GS register contains a NULL segment

selector.

#SS(0) If a memory operand effective address is outside the SS

segment limit.

#PF(fault-code) If a page fault occurs.

#UD If the LOCK prefix is used.

#### **Real-Address Mode Exceptions**

#GP If a memory operand effective address is outside the CS, DS,

ES, FS, or GS segment limit.

#SS If a memory operand effective address is outside the SS

segment limit.

#UD If the LOCK prefix is used.

#### Virtual-8086 Mode Exceptions

#GP(0) If a memory operand effective address is outside the CS, DS,

ES, FS, or GS segment limit.

#SS(0) If a memory operand effective address is outside the SS

segment limit.

#PF(fault-code) If a page fault occurs.

#UD If the LOCK prefix is used.

# **Compatibility Mode Exceptions**

Same exceptions as in protected mode.

#### **64-Bit Mode Exceptions**

#SS(0) If a memory address referencing the SS segment is in a non-

canonical form.

#GP(0) If the memory address is in a non-canonical form.

#PF(fault-code) If a page fault occurs.

# XOR—Logical Exclusive OR

Opcode	Instruction	64-Bit Mode	Compat/ Leg Mode	Description
34 <i>ib</i>	XOR AL, i <i>mm8</i>	Valid	Valid	AL XOR imm8.
35 iw	XOR AX, imm16	Valid	Valid	AX XOR imm16.
35 id	XOR EAX, imm32	Valid	Valid	EAX XOR imm32.
REX.W + 35 id	XOR RAX, imm32	Valid	N.E.	RAX XOR imm32 (sign-extended).
80 /6 ib	XOR r/m8, imm8	Valid	Valid	r/m8 XOR imm8.
REX + 80 /6 ib	XOR r/m8*, imm8	Valid	N.E.	r/m8 XOR imm8.
81 /6 iw	XOR <i>r/m16, imm16</i>	Valid	Valid	r/m16 XOR imm16.
81 /6 id	XOR r/m32, imm32	Valid	Valid	r/m32 XOR imm32.
REX.W + 81 /6 id	XOR r/m64, imm32	Valid	N.E.	r/m64 XOR imm32 (sign- extended).
83 /6 ib	XOR r/m16, imm8	Valid	Valid	r/m16 XOR imm8 (sign- extended).
83 /6 ib	XOR r/m32, imm8	Valid	Valid	r/m32 XOR imm8 (sign- extended).
REX.W + 83 /6 ib	XOR r/m64, imm8	Valid	N.E.	r/m64 XOR imm8 (sign- extended).
30 /r	XOR r/m8, r8	Valid	Valid	r/m8 XOR r8.
REX + 30 /r	XOR r/m8*, r8*	Valid	N.E.	r/m8 XOR r8.
31 <i>/r</i>	XOR r/m16, r16	Valid	Valid	r/m16 XOR r16.
31 /r	XOR r/m32, r32	Valid	Valid	r/m32 XOR r32.
REX.W + 31 /r	XOR r/m64, r64	Valid	N.E.	r/m64 XOR r64.
32 /r	XOR <i>r8, r/m8</i>	Valid	Valid	r8 XOR r/m8.
REX + 32 /r	XOR r8*, r/m8*	Valid	N.E.	r8 XOR r/m8.
33 /r	XOR r16, r/m16	Valid	Valid	r16 XOR r/m16.
33 /r	XOR <i>r32, r/m32</i>	Valid	Valid	r32 XOR r/m32.
REX.W + 33 /r	XOR <i>r64, r/m64</i>	Valid	N.E.	r64 XOR r/m64.

# NOTES:

<sup>\*</sup> In 64-bit mode, r/m8 can not be encoded to access the following byte registers if a REX prefix is used: AH, BH, CH, DH.

#### **Description**

Performs a bitwise exclusive OR (XOR) operation on the destination (first) and source (second) operands and stores the result in the destination operand location. The source operand can be an immediate, a register, or a memory location; the destination operand can be a register or a memory location. (However, two memory operands cannot be used in one instruction.) Each bit of the result is 1 if the corresponding bits of the operands are different; each bit is 0 if the corresponding bits are the same.

This instruction can be used with a LOCK prefix to allow the instruction to be executed atomically.

In 64-bit mode, using a REX prefix in the form of REX.R permits access to additional registers (R8-R15). Using a REX prefix in the form of REX.W promotes operation to 64 bits. See the summary chart at the beginning of this section for encoding data and limits.

#### **Operation**

DEST  $\leftarrow$  DEST XOR SRC;

#### **Flags Affected**

The OF and CF flags are cleared; the SF, ZF, and PF flags are set according to the result. The state of the AF flag is undefined.

#### **Protected Mode Exceptions**

#GP(0) If the destination operand points to a non-writable segment.

If a memory operand effective address is outside the CS, DS,

ES, FS, or GS segment limit.

If the DS, ES, FS, or GS register contains a NULL segment

selector.

#SS(0) If a memory operand effective address is outside the SS

segment limit.

#PF(fault-code) If a page fault occurs.

#AC(0) If alignment checking is enabled and an unaligned memory

reference is made while the current privilege level is 3.

#UD If the LOCK prefix is used but the destination is not a memory

operand.

#### **Real-Address Mode Exceptions**

#GP If a memory operand effective address is outside the CS, DS,

ES, FS, or GS segment limit.

#SS If a memory operand effective address is outside the SS

segment limit.

#UD If the LOCK prefix is used but the destination is not a memory

operand.

#### Virtual-8086 Mode Exceptions

#GP(0) If a memory operand effective address is outside the CS, DS,

ES, FS, or GS segment limit.

#SS(0) If a memory operand effective address is outside the SS

segment limit.

#PF(fault-code) If a page fault occurs.

#AC(0) If alignment checking is enabled and an unaligned memory

reference is made.

#UD If the LOCK prefix is used but the destination is not a memory

operand.

### **Compatibility Mode Exceptions**

Same exceptions as in protected mode.

#### **64-Bit Mode Exceptions**

#SS(0) If a memory address referencing the SS segment is in a non-

canonical form.

#GP(0) If the memory address is in a non-canonical form.

#PF(fault-code) If a page fault occurs.

#AC(0) If alignment checking is enabled and an unaligned memory

reference is made while the current privilege level is 3.

#UD If the LOCK prefix is used but the destination is not a memory

operand.

# XORPD—Bitwise Logical XOR for Double-Precision Floating-Point Values

Opcode	Instruction	64-Bit Mode	Compat/ Leg Mode	Description
66 0F 57 /r	XORPD xmm1, xmm2/m128	Valid	Valid	Bitwise exclusive-OR of xmm2/m128 and xmm1.

### **Description**

Performs a bitwise logical exclusive-OR of the two packed double-precision floating-point values from the source operand (second operand) and the destination operand (first operand), and stores the result in the destination operand. The source operand can be an XMM register or a 128-bit memory location. The destination operand is an XMM register.

In 64-bit mode, using a REX prefix in the form of REX.R permits this instruction to access additional registers (XMM8-XMM15).

#### Operation

DEST[127:0]  $\leftarrow$  DEST[127:0] BitwiseXOR SRC[127:0];

#### Intel C/C++ Compiler Intrinsic Equivalent

XORPD \_\_m128d \_mm\_xor\_pd(\_\_m128d a, \_\_m128d b)

#### SIMD Floating-Point Exceptions

None.

#### **Protected Mode Exceptions**

#GP(0) For an illegal memory operand effective address in the CS, DS,

ES, FS or GS segments.

If a memory operand is not aligned on a 16-byte boundary,

regardless of segment.

#SS(0) For an illegal address in the SS segment.

#PF(fault-code) For a page fault.
#NM If CR0.TS[bit 3] = 1.

#UD If CR0.FS[bit 3] = 1.

If CR4.OSFXSR[bit 9] = 0.

If CPUID.01H:EDX.SSE2[bit 26] = 0.

#### **Real-Address Mode Exceptions**

#GP If a memory operand is not aligned on a 16-byte boundary,

regardless of segment.

If any part of the operand lies outside the effective address

space from 0 to FFFFH.

#NM If CR0.TS[bit 3] = 1. #UD If CR0.EM[bit 2] = 1.

If CR4.OSFXSR[bit 9] = 0.

If CPUID.01H:EDX.SSE2[bit 26] = 0.

If the LOCK prefix is used.

#### Virtual-8086 Mode Exceptions

Same exceptions as in real address mode.

#PF(fault-code) For a page fault.

# **Compatibility Mode Exceptions**

Same exceptions as in protected mode.

#### **64-Bit Mode Exceptions**

#SS(0) If a memory address referencing the SS segment is in a non-

canonical form.

#GP(0) If the memory address is in a non-canonical form.

If memory operand is not aligned on a 16-byte boundary,

regardless of segment.

#PF(fault-code) For a page fault.

#NM If CR0.TS[bit 3] = 1. #UD If CR0.EM[bit 2] = 1.

If CR4.OSFXSR[bit 9] = 0.

If CPUID.01H:EDX.SSE2[bit 26] = 0.

# XORPS—Bitwise Logical XOR for Single-Precision Floating-Point Values

Opcode	Instruction	64-Bit Mode	Compat/ Leg Mode	Description
0F 57 /r	XORPS xmm1, xmm2/m128	Valid	Valid	Bitwise exclusive-OR of xmm2/m128 and xmm1.

#### **Description**

Performs a bitwise logical exclusive-OR of the four packed single-precision floating-point values from the source operand (second operand) and the destination operand (first operand), and stores the result in the destination operand. The source operand can be an XMM register or a 128-bit memory location. The destination operand is an XMM register.

In 64-bit mode, using a REX prefix in the form of REX.R permits this instruction to access additional registers (XMM8-XMM15).

#### Operation

DEST[127:0]  $\leftarrow$  DEST[127:0] BitwiseXOR SRC[127:0];

#### Intel C/C++ Compiler Intrinsic Equivalent

XORPS \_\_m128 \_mm\_xor\_ps(\_\_m128 a, \_\_m128 b)

# SIMD Floating-Point Exceptions

None.

# **Protected Mode Exceptions**

#GP(0) For an illegal memory operand effective address in the CS, DS,

ES, FS or GS segments.

If a memory operand is not aligned on a 16-byte boundary,

regardless of segment.

#SS(0) For an illegal address in the SS segment.

#PF(fault-code) For a page fault.

#NM If CR0.TS[bit 3] = 1. #UD If CR0.EM[bit 2] = 1.

If CR4.OSFXSR[bit 9] = 0.

If CPUID.01H:EDX.SSE[bit 25] = 0.

#### **Real-Address Mode Exceptions**

#GP If a memory operand is not aligned on a 16-byte boundary,

regardless of segment.

If any part of the operand lies outside the effective address

space from 0 to FFFFH.

#NM If CR0.TS[bit 3] = 1. #UD If CR0.EM[bit 2] = 1.

If CR4.OSFXSR[bit 9] = 0.

If CPUID.01H:EDX.SSE[bit 25] = 0.

If the LOCK prefix is used.

#### Virtual-8086 Mode Exceptions

Same exceptions as in real address mode.

#PF(fault-code) For a page fault.

# **Compatibility Mode Exceptions**

Same exceptions as in protected mode.

#### **64-Bit Mode Exceptions**

#SS(0) If a memory address referencing the SS segment is in a non-

canonical form.

#GP(0) If the memory address is in a non-canonical form.

If memory operand is not aligned on a 16-byte boundary,

regardless of segment.

#PF(fault-code) For a page fault.

#NM If CR0.TS[bit 3] = 1. #UD If CR0.EM[bit 2] = 1.

If CR4.OSFXSR[bit 9] = 0.

If CPUID.01H:EDX.SSE[bit 25] = 0.

#### XRSTOR—Restore Processor Extended States

Opcode	Instruction	64-Bit Mode	Compat/ Leg Mode	Description
OF AE /5	XRSTOR mem	Valid	Valid	Restore processor extended states from <i>memory</i> . The states are specified by EDX:EAX

#### **Description**

Performs a full or partial restore of the enabled processor states using the state information stored in the memory address specified by the source operand. The implicit EDX:EAX register pair specifies a 64-bit restore mask.

The format of the XSAVE/XRSTOR area is shown in Table 4-8. The memory layout of the XSAVE/XRSTOR area may have holes between save areas written by the processor as a result of the processor not supporting certain processor extended states or system software not supporting certain processor extended states.

Table 4-8. General Layout of XSAVE/XRSTOR Save Area

Save Areas	Offset (Byte)	Size (Bytes)
FPU/SSE SaveArea <sup>1</sup>	0	512
Header	512	64
Reserved (Ext_Save_Area_2)	CPUID.(EAX=0DH, ECX=2):EBX	CPUID.(EAX=0DH, ECX=2):EAX
Reserved(Ext_Save_A rea_3)	CPUID.(EAX=0DH, ECX=3):EBX	CPUID.(EAX=0DH, ECX=3):EAX
Reserved(Ext_Save_A rea_4)	CPUID.(EAX=0DH, ECX=4):EBX	CPUID.(EAX=0DH, ECX=4):EAX
Reserved()		

#### **NOTES:**

1. Bytes 464:511 are available for software use. XRSTOR ignores the value contained in bytes 464:511 of an XSAVE SAVE image.

XRSTOR operates on each subset of the processor state or a processor extended state in one of three ways (depending on the corresponding bit in the XFEATURE\_ENABLED\_MASK register (XCR0), the restore mask EDX:EAX, and the save mask XSAVE.HEADER.XSTATE\_BV in memory):

- Updates the processor state component using the state information stored in the respective save area (see Table 4-8) of the source operand, if the corresponding bit in XCRO, EDX:EAX, and XSAVE.HEADER.XSTATE\_BV are all 1.
- Writes certain registers in the processor state component using processorsupplied values (see Table 4-10) without using state information stored in respective save area of the memory region, if the corresponding bit in XCR0 and EDX:EAX are both 1, but the corresponding bit in XSAVE.HEADER.XSTATE\_BV is 0.
- The processor state component is unchanged, if the corresponding bit in XCR0 or EDX:EAX is 0.

The format of the header section (XSAVE.HEADER) of the XSAVE/XRSTOR area is shown in Table 4-9.

15 8	7 0	Byte Offset from Header	Byte Offset from XSAVE/XRSTOR Area
Rsrvd (Must be 0)	XSTATE_BV	0	512
Reserved	Rsrvd (Must be 0)	16	528
Reserved	Reserved	32	544
Reserved	Reserved	48	560

Table 4-9. XSAVE.HEADER Layout

If a processor state component is not enabled in XCR0 but the corresponding save mask bit in XSAVE.HEADER.XSTATE\_BV is 1, an attempt to execute XRSTOR will cause a #GP(0) exception. Software may specify all 1's in the implicit restore mask EDX:EAX, so that all the enabled processors states in XCR0 are restored from state information stored in memory or from processor supplied values.

An attempt to restore processor states with writing 1s to reserved bits in certain registers (see Table 4-11) will cause a #GP(0) exception.

Because bit 63 of the XFEATURE\_ENABLED\_MASK register is reserved for future bit vector expansion, it will not be used for any future processor state feature, and XRSTOR will ignore bit 63 of EDX:EAX (EDX[31].

resident in the control of the contr				
Processor State Component	Processor Supplied Register Values			
x87 FPU State	FCW $\leftarrow$ 037FH; FTW $\leftarrow$ 0FFFFH; FSW $\leftarrow$ 0H; FPU CS $\leftarrow$ 0H; FPU DS $\leftarrow$ 0H; FPU IP $\leftarrow$ 0H; FPU DP $\leftarrow$ 0; ST0-ST7 $\leftarrow$ 0;			
SSE State <sup>1</sup>	If 64-bit Mode: XMM0-XMM15 ← 0H;			
	Else XMM0-XMM7 ← 0H			

Table 4-10. Processor Supplied Init Values XRSTOR May Use

#### **NOTES:**

1. MXCSR state is not updated by processor supplied values. MXCSR state can only be updated by XRSTOR from state information stored in XSAVE/XRSTOR area.

Processor State Component	Reserved Bit Checking
X87 FPU State	None
SSE State	Reserved bits of MXCSR

A source operand not aligned to 64-byte boundary (for 64-bit and 32-bit modes) will result in a general-protection (#GP) exception. In 64-bit mode, the upper 32 bits of RDX and RAX are ignored.

#### **Operation**

/\* The alignment of the x87 and SSE fields in the XSAVE area is the same as in FXSAVE area\*/

```
RS_{MS} = MASK[62:0] \leftarrow (EDX[30:0] << 32) OR EAX[31:0];
ST_TMP_MASK[62:0] \leftarrow SRCMEM.HEADER.XSTATE_BV[62:0];
IF ( ( (XCR0[62:0] XOR 7FFFFFFF FFFFFFFH ) AND ST TMP MASK[62:0] ) )
   THEN
       #GP(0)
ELSE
   FOR i = 0, 62 STEP 1
       IF ( RS_TMP_MASK[i] and XCR0[i] )
            THEN
                IF ( ST_TMP_MASK[i] )
                     CASE (i) OF
                     0: Processor state[x87 FPU] ← SRCMEM. FPUSSESave_Area[FPU];

    Processor state[SSE] ← SRCMEM. FPUSSESave_Area[SSE];

                         // MXCSR is loaded as part of the SSE state
                     DEFAULT: // i corresponds to a valid sub-leaf index of CPUID leaf ODH
                         Processor state[i] ← SRCMEM. Ext_Save_Area[i];
                     ESAC;
                ELSE
                     Processor extended state[i] ← Processor supplied values; (see Table 4-10)
                     CASE (i) OF
                     1: MXCSR ← SRCMEM. FPUSSESave_Area[SSE];
                     ESAC:
                FI:
       FI;
```

NEXT:

FI;

#### Flags Affected

None.

#### **Protected Mode Exceptions**

#GP(0) If a memory operand effective address is outside the CS, DS,

ES, FS, or GS segment limit.

If a memory operand is not aligned on a 64-byte boundary,

regardless of segment.

If a bit in XCR0 is 0 and the corresponding bit in HEADER.XSTATE\_BV field of the source operand is 1.

If bytes 23:8 of HEADER is not zero.

If attempting to write any reserved bits of the MXCSR register

with 1.

#SS(0) If a memory operand effective address is outside the SS

segment limit.

#PF(fault-code) If a page fault occurs. #NM If CR0.TS[bit 3] = 1.

#UD If CPUID.01H: ECX.XSAVE[bit 26] = 0.

If CR4.OSXSAVE[bit 18] = 0. If the LOCK prefix is used.

If 66H, F3H or F2H prefix is used.

#### **Real-Address Mode Exceptions**

#GP If a memory operand is not aligned on a 64-byte boundary,

regardless of segment.

If any part of the operand lies outside the effective address

space from 0 to FFFFH.

If a bit in XCR0 is 0 and the corresponding bit in HEADER.XSTATE\_BV field of the source operand is 1.

If bytes 23:8 of HEADER is not zero.

If attempting to write any reserved bits of the MXCSR register

with 1.

#NM If CR0.TS[bit 3] = 1.

#UD If CPUID.01H: ECX.XSAVE[bit 26] = 0.

If CR4.OSXSAVE[bit 18] = 0. If the LOCK prefix is used.

If 66H, F3H or F2H prefix is used.

#### Virtual-8086 Mode Exceptions

Same exceptions as in Protected Mode

#### **Compatibility Mode Exceptions**

Same exceptions as in protected mode.

#### **64-Bit Mode Exceptions**

#GP(0) If the memory address is in a non-canonical form.

If a memory operand is not aligned on a 64-byte boundary,

regardless of segment.

If a bit in XCR0 is 0 and the corresponding bit in

XSAVE.HEADER.XSTATE\_BV is 1. If bytes 23:8 of HEADER is not zero.

If attempting to write any reserved bits of the MXCSR register

with 1.

#SS(0) If a memory address referencing the SS segment is in a non-

canonical form.

#UD If CPUID.01H: ECX.XSAVE[bit 26] = 0.

If CR4.OSXSAVE[bit 18] = 0. If the LOCK prefix is used.

If 66H, F3H or F2H prefix is used.

YCV//E_	Savo	Processor	Evtondo	d States
<b>VOHACE</b>	·Save	PIUCESSUI	cxtenue	a States

Opcode	Instruction	64-Bit Mode	Compat/ Leg Mode	Description
OF AE /4	XSAVE mem	Valid	Valid	Save processor extended states to <i>memory</i> . The states are specified by EDX:EAX

#### Description

Performs a full or partial save of the enabled processor state components to a memory address specified in the destination operand. A full or partial save of the processor states is specified by an implicit mask operand via the register pair, EDX:EAX. The destination operand is a memory location that must be 64-byte aligned.

The implicit 64-bit mask operand in EDX:EAX specifies the subset of enabled processor state components to save into the XSAVE/XRSTOR save area. The XSAVE/XRSTOR save area comprises of individual save area for each processor state components and a header section, see Table 4-8. Each component save area is written if both the corresponding bits in the save mask operand and in the XFEATURE\_ENABLED\_MASK (XCR0) register are 1. A processor state component save area is not updated if either one of the corresponding bits in the mask operand or the XFEATURE\_ENABLED\_MASK register is 0. If the mask operand (EDX:EAX) contains all 1's, all enabled processor state components in XFEATURE ENABLED MASK is written to the respective component save area.

The bit assignment used for the EDX:EAX register pair matches the XFEATURE\_ENABLED\_MASK register (see chapter 2 of Vol. 3B). For the XSAVE instruction, software can specify "1" in any bit position of EDX:EAX, irrespective of whether the corresponding bit position in XFEATURE\_ENABLED\_MASK is valid for the processor. The bit vector in EDX:EAX is "anded" with the XFEATURE\_ENABLED\_MASK to determine which save area will be written.

The content layout of the XSAVE/XRSTOR save area is architecturally defined to be extendable and enumerated via the sub-leaves of CPUID.0DH leaf. The extendable framework of the XSAVE/XRSTOR layout is depicted by Table 4-8. The layout of the XSAVE/XRSTOR save area is fixed and may contain non-contiguous individual save areas. The XSAVE/XRSTOR save area is not compacted if some features are not saved or are not supported by the processor and/or by system software.

The layout of the register fields of first 512 bytes of the XSAVE/XRSTOR is the same as the FXSAVE/FXRSTOR area. But XSAVE/XRSTOR organizes the 512 byte area as x87 FPU states (including FPU operation states, x87/MMX data registers), MXCSR (including MXCSR\_MASK), and XMM registers (see Table 4-12). For details of individual FPU register layout, refer to the FXSAVE instruction.

Bytes 464:511 are available for software use. The processor does not write to bytes 464:511 when executing XSAVE.

31 28 27 24 23	1	9 16	15	12	11	8	7	4	3	0	
MXCSR and MASK x87 FPU operations							_	-			0
								נוטכנו	(ווכ		
x87/MM	X data r	egisters	(see F	XSAV	E instr	uctio	n)				32
x87/MM	IX data r	egisters	(see F	XSAV	E instr	uctio	n)				64
x87/MM	IX data r	egisters	(see F	XSAV	E instr	uctio	n)				96
x87/MM	IX data r	egisters	(see F	XSAV	E instr	uctio	n)				128
XMM1						X٢	IMO				160
XMM3	XMM3		XMM2					192			
XMM5		XMM4					224				
XMM7			XMM6					256			
XMM9		XMM8						288			
XMM11		XMM10					320				
XMM13		XMM12					352				
XMM15		XMM14					384				
Reserved		Reserved					416				
Available		Reserved					448				
Available					Avai	lable				480	

Table 4-12. XSAVE Save Area Layout for x87 FPU and SSE State

The processor writes 1 or 0 to each.HEADER.XSTATE\_BV[i] bit field of an enabled processor state component in a manner that is consistent to XRSTOR's interaction with HEADER.XSTATE\_BV (see the operation section of XRSTOR instruction). If a processor implementation discern that a processor state component is in its initialized state (according to Table 4-10) it may modify the corresponding bit in the HEADER.XSTATE BV as '0'.

A destination operand not aligned to 64-byte boundary (in either 64-bit or 32-bit modes) will result in a general-protection (#GP) exception being generated. In 64-bit mode, the upper 32 bits of RDX and RAX are ignored.

# **Operation**

1: DEST.FPUSSESAVE\_Area[SSE] ← processor state[SSE];

// SSE state include MXCSR

DEFAULT: // i corresponds to a valid sub-leaf index of CPUID leaf 0DH

DEST.Ext\_Save\_Area[i] ← processor state[i];

ESAC:

DEST.HEADER.XSTATE\_BV[i] ← INIT\_FUNCTION[i];

FI;

NEXT;

#### Flags Affected

None.

#### **Protected Mode Exceptions**

#GP(0) If a memory operand effective address is outside the CS, DS,

ES, FS, or GS segment limit.

If a memory operand is not aligned on a 64-byte boundary,

regardless of segment.

#SS(0) If a memory operand effective address is outside the SS

segment limit.

#PF(fault-code) If a page fault occurs. #NM If CR0.TS[bit 3] = 1.

#UD If CPUID.01H: ECX.XSAVE[bit 26] = 0.

If CR4.OSXSAVE[bit 18] = 0. If the LOCK prefix is used.

If 66H, F3H or F2H prefix is used.

# **Real-Address Mode Exceptions**

#GP If a memory operand is not aligned on a 64-byte boundary,

regardless of segment.

If any part of the operand lies outside the effective address

space from 0 to FFFFH.

#NM If CR0.TS[bit 3] = 1.

#UD If CPUID.01H: ECX.XSAVE[bit 26] = 0.

If CR4.OSXSAVE[bit 18] = 0. If the LOCK prefix is used.

If 66H, F3H or F2H prefix is used.

#### Virtual-8086 Mode Exceptions

Same exceptions as in protected mode.

# **Compatibility Mode Exceptions**

Same exceptions as in protected mode.

# **64-Bit Mode Exceptions**

#SS(0) If a memory address referencing the SS segment is in a non-

canonical form.

#GP(0) If the memory address is in a non-canonical form.

If a memory operand is not aligned on a 64-byte boundary,

regardless of segment.

#PF(fault-code) If a page fault occurs.
#NM If CR0.TS[bit 3] = 1.

#UD If CPUID.01H:ECX.XSAVE[bit 26] = 0.

If CR4.OSXSAVE[bit 18] = 0. If the LOCK prefix is used.

If 66H, F3H or F2H prefix is used.

# **XSETBV—Set Extended Control Register**

Opcode	Instruction	64-Bit Mode	Compat/ Leg Mode	Description
0F 01 D1	XSETBV	Valid	Valid	Write the value in EDX:EAX to the XCR specified by ECX.

#### **Description**

Writes the contents of registers EDX:EAX into the 64-bit extended control register (XCR) specified in the ECX register. (On processors that support the Intel 64 architecture, the high-order 32 bits of RCX are ignored.) The contents of the EDX register are copied to high-order 32 bits of the selected XCR and the contents of the EAX register are copied to low-order 32 bits of the XCR. (On processors that support the Intel 64 architecture, the high-order 32 bits of each of RAX and RDX are ignored.) Undefined or reserved bits in an XCR should be set to values previously read.

This instruction must be executed at privilege level 0 or in real-address mode; otherwise, a general protection exception #GP(0) is generated. Specifying a reserved or unimplemented XCR in ECX will also cause a general protection exception. The processor will also generate a general protection exception if software attempts to write to reserved bits in an XCR.

Currently, only XCR0 (the XFEATURE\_ENABLED\_MASK register) is supported. Thus, all other values of ECX are reserved and will cause a #GP(0). Note that bit 0 of XFEATURE\_ENABLED\_MASK (corresponding to x87 state) must be set to 1; the instruction will cause a #GP(0) if an attempt is made to clear this bit.

#### **Operation**

 $XCR[ECX] \leftarrow EDX:EAX;$ 

#### Flags Affected

None.

# **Protected Mode Exceptions**

#GP(0) If the current privilege level is not 0.

If an invalid XCR is specified in ECX.

If the value in EDX: EAX sets bits that are reserved in the XCR

specified by ECX.

If an attempt is made to clear bit 0 of

XFEATURE ENABLED MASK.

#UD If CPUID.01H: ECX.XSAVE[bit 26] = 0.

If CR4.OSXSAVE[bit 18] = 0.

If the LOCK prefix is used.

If 66H, F3H or F2H prefix is used.

# **Real-Address Mode Exceptions**

#GP If an invalid XCR is specified in ECX.

If the value in EDX: EAX sets bits that are reserved in the XCR

specified by ECX.

If an attempt is made to clear bit 0 of

XFEATURE\_ENABLED\_MASK.

#UD If CPUID.01H:ECX.XSAVE[bit 26] = 0.

If CR4.OSXSAVE[bit 18] = 0. If the LOCK prefix is used.

If 66H, F3H or F2H prefix is used.

#### Virtual-8086 Mode Exceptions

#GP(0) The XSETBV instruction is not recognized in virtual-8086 mode.

# **Compatibility Mode Exceptions**

Same exceptions as in protected mode.

#### **64-Bit Mode Exceptions**

Same exceptions as in protected mode.

# CHAPTER 5 VMX INSTRUCTION REFERENCE

# 5.1 OVERVIEW

This chapter describes the virtual-machine extensions (VMX) for the Intel 64 and IA-32 architectures. VMX is intended to support virtualization of processor hardware and a system software layer acting as a host to multiple guest software environments. The virtual-machine extensions (VMX) includes five instructions that manage the virtual-machine control structure (VMCS) and five instruction that manage VMX operation. Additional details of VMX are described in *IA-32 Intel Architecture Software Developer's Manual, Volume 3B*.

The behavior of the VMCS-maintenance instructions is summarized below:

- VMPTRLD This instruction takes a single 64-bit source operand that is in memory. It makes the referenced VMCS active and current, loading the current-VMCS pointer with this operand and establishes the current VMCS based on the contents of VMCS-data area in the referenced VMCS region. Because this makes the referenced VMCS active, a logical processor may start maintaining on the processor some of the VMCS data for the VMCS.
- **VMPTRST** This instruction takes a single 64-bit destination operand that is in memory. The current-VMCS pointer is stored into the destination operand.
- VMCLEAR This instruction takes a single 64-bit operand that is in memory. The instruction sets the launch state of the VMCS referenced by the operand to "clear", renders that VMCS inactive, and ensures that data for the VMCS have been written to the VMCS-data area in the referenced VMCS region. If the operand is the same as the current-VMCS pointer, that pointer is made invalid.
- VMREAD This instruction reads a component from the VMCS (the encoding of that field is given in a register operand) and stores it into a destination operand that may be a register or in memory.
- VMWRITE This instruction writes a component to the VMCS (the encoding of that field is given in a register operand) from a source operand that may be a register or in memory.

The behavior of the VMX management instructions is summarized below:

- VMCALL This instruction allows a guest in VMX non-root operation to call the VMM for service. A VM exit occurs, transferring control to the VMM.
- VMLAUNCH This instruction launches a virtual machine managed by the VMCS. A VM entry occurs, transferring control to the VM.
- **VMRESUME** This instruction resumes a virtual machine managed by the VMCS. A VM entry occurs, transferring control to the VM.
- **VMXOFF** This instruction causes the processor to leave VMX operation.

• **VMXON** — This instruction takes a single 64-bit source operand that is in memory. It causes a logical processor to enter VMX root operation and to use the memory referenced by the operand to support VMX operation.

Only VMCALL can be executed in compatibility mode (causing a VM exit). The other VMX instructions generate invalid-opcode exceptions if executed in compatibility mode.

The behavior of the VMX-specific TLB-management instructions is summarized below:

- **INVEPT** This instruction invalidates entries in the TLBs and paging-structure caches that were derived from **Extended Page Tables** (EPT).
- **INVVPID** This instruction invalidates entries in the TLBs and paging-structure caches based on a Virtual-Processor Identifier (VPID).

# 5.2 CONVENTIONS

The operation sections for the VMX instructions in Section 5.3 use the pseudo-function VMexit, which indicates that the logical processor performs a VM exit.

The operation sections also use the pseudo-functions VMsucceed, VMfail, VMfailInvalid, and VMfailValid. These pseudo-functions signal instruction success or failure by setting or clearing bits in RFLAGS and, in some cases, by writing the VM-instruction error field. The following pseudocode fragments detail these functions:

```
VMsucceed:
      CF \leftarrow 0:
      PF \leftarrow 0;
      AF \leftarrow 0:
      ZF \leftarrow 0:
      SF \leftarrow 0:
      0F \leftarrow 0;
VMfail(ErrorNumber):
      IF VMCS pointer is valid
             THEN VMfailValid(ErrorNumber);
            ELSE VMfailInvalid:
      FI:
VMfailInvalid:
      CF ← 1:
      PF \leftarrow 0;
      AF \leftarrow 0:
      ZF \leftarrow 0;
      SF \leftarrow 0;
```

 $0F \leftarrow 0$ ;

VMfailValid(ErrorNumber):// executed only if there is a current VMCS

 $CF \leftarrow 0$ ;

 $PF \leftarrow 0$ ;

 $AF \leftarrow 0$ ;

 $ZF \leftarrow 1$ ;

 $SF \leftarrow 0$ ;

 $0F \leftarrow 0$ ;

Set the VM-instruction error field to ErrorNumber;

The different VM-instruction error numbers are enumerated in Section 5.4, "VM Instruction Error Numbers".

# 5.3 VMX INSTRUCTIONS

This section provides detailed descriptions of the VMX instructions.

#### INVEPT— Invalidate Translations Derived from EPT

Opcode	Instruction	Description
66 OF 38 80	INVEPT r64, m128	Invalidates EPT-derived entries in the TLBs and paging-structure caches (in 64-bit mode)
66 OF 38 80	INVEPT r32, m128	Invalidates EPT-derived entries in the TLBs and paging-structure caches (outside 64-bit mode)

#### **Description**

Invalidates mappings in the translation lookaside buffers (TLBs) and paging-structure caches that were derived from **extended page tables** (EPT). (See Chapter "Support for Address Translation" in *IA-32 Intel Architecture Software Developer's Manual, Volume 3B*.) Invalidation is based on the **INVEPT type** specified in the register operand and the **INVEPT descriptor** specified in the memory operand.

Outside IA-32e mode, the register operand is always 32 bits, regardless of the value of CS.D. In 64-bit mode, the register operand has 64 bits; however, if bits 63:32 of the register operand are not zero, INVEPT will fail due to an attempt to use an unsupported INVEPT type (see below).

The INVEPT types supported by a logical processors are reported in the IA32\_VMX\_EPT\_VPID\_CAP MSR (see Appendix "VMX Capability Reporting Facility" in IA-32 Intel Architecture Software Developer's Manual, Volume 3B). There are two INVEPT types currently defined:

- Single-context invalidation. If the INVEPT type is 1, the logical processor invalidates all mappings tagged with the EPT pointer (EPTP) specified in the INVEPT descriptor. In some cases, it may invalidate mappings for other EPTPs as well.
- Global invalidation: If the INVEPT type is 2, the logical processor invalidates all mappings tagged with any EPT EPTP.

If an unsupported INVEPT type is specified, the instruction fails.

The INVEPT descriptor comprises 128 bits and contains a 64-bit EPTP value in bits 63:0 (see Figure 5-1).

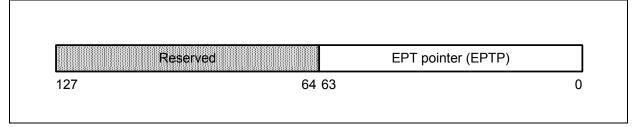


Figure 5-1. INVEPT Descriptor

#### **Operation**

```
IF (not in VMX operation) or (RFLAGS.VM = 1) or (IA32_EFER.LMA = 1 and CS.L = 0)
   THEN #UD:
ELSIF in VMX non-root operation
   THEN VM exit;
ELSIF CPL > 0
   THEN #GP(0);
   ELSE
        INVEPT_TYPE \leftarrow value of register operand;
        IF IA32_VMX_EPT_VPID_CAP MSR indicates that processor does not support INVEPT_TYPE
             THEN VMfail(Invalid operand to INVEPT/INVVPID);
                      // INVEPT TYPE must be 1 or 2
             ELSE
                 INVEPT\_DESC \leftarrow value of memory operand;
                 EPTP \leftarrow INVEPT\_DESC[63:0];
                 CASE INVEPT TYPE OF
                      1:
                                         // single-context invalidation
                           IF VM entry with the "enable EPT" VM execution control set to 1
                           would fail due to the EPTP value
                               THEN VMfail(Invalid operand to INVEPT/INVVPID);
                               ELSE
                                    Invalidate mappings tagged with EPTP;
                                    VMsucceed:
                           FI;
                           BREAK;
                      2:
                                         // global invalidation
                           Invalidate mappings tagged with all EPTPs;
                           VMsucceed:
                           BREAK;
                 ESAC;
        FI:
FI;
```

#### Flags Affected

See the operation section and Section 5.2.

# **Protected Mode Exceptions**

#GP(0) If the current privilege level is not 0.

If the memory operand effective address is outside the CS, DS, ES, FS, or GS segment limit.

If the DS, ES, FS, or GS register contains an unusable segment.

If the source operand is located in an execute-only code

segment.

#### VMX INSTRUCTION REFERENCE

#PF(fault-code) If a page fault occurs in accessing the memory operand.
#SS(0) If the memory operand effective address is outside the SS

segment limit.

If the SS register contains an unusable segment.

#UD If not in VMX operation.

If the logical processor does not support EPT (IA32\_VMX\_PROCBASED\_CTLS2[33]=0).

If the logical processor supports EPT

(IA32\_VMX\_PROCBASED\_CTLS2[33]=1) but does not support the INVEPT instruction (IA32\_VMX\_EPT\_VPID\_CAP[20]=0).

# **Real-Address Mode Exceptions**

#UD A logical processor cannot be in real-address mode while in VMX

operation and the INVEPT instruction is not recognized outside

VMX operation.

#### Virtual-8086 Mode Exceptions

#UD The INVEPT instruction is not recognized in virtual-8086 mode.

#### **Compatibility Mode Exceptions**

#UD The INVEPT instruction is not recognized in compatibility mode.

#### 64-Bit Mode Exceptions

#GP(0) If the current privilege level is not 0.

If the memory operand is in the CS, DS, ES, FS, or GS segments

and the memory address is in a non-canonical form.

#PF(fault-code) If a page fault occurs in accessing the memory operand.

#SS(0) If the memory operand is in the SS segment and the memory

address is in a non-canonical form.

#UD If not in VMX operation.

If the logical processor does not support EPT (IA32\_VMX\_PROCBASED\_CTLS2[33]=0).

If the logical processor supports EPT

(IA32\_VMX\_PROCBASED\_CTLS2[33]=1) but does not support the INVEPT instruction (IA32\_VMX\_EPT\_VPID\_CAP[20]=0).

INI///PID_	Invalidate	<b>Translations</b>	Rasad	on VPID
	IIIvalluate	i i ali Sia Livi i S	Dasen	UII VEID

Opcode	Instruction	Description
66 OF 38 81	INVVPID r64, m128	Invalidates entries in the TLBs and paging-structure caches based on VPID (in 64-bit mode)
66 0F 38 81	INVVPID r32, m128	Invalidates entries in the TLBs and paging-structure caches based on VPID (outside 64-bit mode)

#### **Description**

Invalidates mappings in the translation lookaside buffers (TLBs) and paging-structure caches based on **virtual-processor identifier** (VPID). (See Chapter "Support for Address Translation" in *IA-32 Intel Architecture Software Developer's Manual, Volume 3B*.) Invalidation is based on the **INVVPID type** specified in the register operand and the **INVVPID descriptor** specified in the memory operand.

Outside IA-32e mode, the register operand is always 32 bits, regardless of the value of CS.D. In 64-bit mode, the register operand has 64 bits; however, if bits 63:32 of the register operand are not zero, INVVPID will fail due to an attempt to use an unsupported INVVPID type (see below).

The INVVPID types supported by a logical processors are reported in the IA32\_VMX\_EPT\_VPID\_CAP MSR (see Appendix "VMX Capability Reporting Facility" in IA-32 Intel Architecture Software Developer's Manual, Volume 3B). There are four INVVPID types currently defined:

- Individual-address invalidation: If the INVVPID type is 0, the logical processor invalidates mappings for a single linear address and tagged with the VPID specified in the INVVPID descriptor. In some cases, it may invalidate mappings for other linear addresses (or with other VPIDs) as well.
- Single-context invalidation: If the INVVPID type is 1, the logical processor invalidates all mappings tagged with the VPID specified in the INVVPID descriptor. In some cases, it may invalidate mappings for other VPIDs as well.
- All-contexts invalidation: If the INVVPID type is 2, the logical processor invalidates all mappings tagged with all VPIDs except VPID 0000H. In some cases, it may invalidate translations with VPID 0000H as well.
- Single-context invalidation, retaining global translations: If the INVVPID type is 3, the logical processor invalidates all mappings tagged with the VPID specified in the INVVPID descriptor except global translations. In some cases, it may invalidate global translations (and mappings with other VPIDs) as well.

If an unsupported INVVPID type is specified, the instruction fails.

The INVVPID descriptor comprises 128 bits and consists of a VPID and a linear address as shown in Figure 5-2.

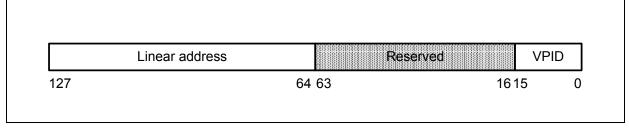


Figure 5-2. INVVPID Descriptor

#### Operation

```
IF (not in VMX operation) or (RFLAGS.VM = 1) or (IA32_EFER.LMA = 1 and CS.L = 0)
   THEN #UD;
ELSIF in VMX non-root operation
   THEN VM exit;
ELSIF CPL > 0
   THEN #GP(0);
   ELSE
        INVVPID_TYPE \leftarrow value of register operand;
        IF IA32_VMX_EPT_VPID_CAP MSR indicates that processor does not support
        INVVPID_TYPE
            THEN VMfail(Invalid operand to INVEPT/INVVPID);
                          // INVVPID_TYPE must be in the range 0-3
                 INVVPID\_DESC \leftarrow value of memory operand;
                 IF INVVPID_DESC[63:16] \neq 0
                      THEN VMfail(Invalid operand to INVEPT/INVVPID);
                      ELSE
                           CASE INVVPID_TYPE OF
                               0:
                                                  // individual-address invalidation
                                    VPID \leftarrow INVVPID\_DESC[15:0];
                                    IF VPID = 0
                                         THEN VMfail(Invalid operand to INVEPT/INVVPID);
                                         ELSE
                                             GL\_ADDR \leftarrow INVVPID\_DESC[127:64];
                                             IF (GL_ADDR is not in a canonical form)
                                                  THEN
                                                       VMfail(Invalid operand to INVEPT/INVVPID);
                                                  ELSE
                                                       Invalidate mappings for GL_ADDR tagged
with VPID;
                                                       VMsucceed;
                                             FI:
                                    FI;
```

```
BREAK:
                                 1:
                                                    // single-context invalidation
                                     VPID\_CTX \leftarrow INVVPID\_DESC[15:0];
                                     IF VPID = 0
                                          THEN VMfail(Invalid operand to INVEPT/INVVPID);
                                          ELSE
                                               Invalidate all mappings tagged with VPID;
                                               VMsucceed:
                                     FI;
                                     BREAK:
                                 2:
                                                    // all-context invalidation
                                     Invalidate all mappings tagged with all non-zero VPIDs;
                                     VMsucceed:
                                     BREAK:
                                 3:
                                                    // single-context invalidation retaining globals
                                     VPID \leftarrow INVVPID\_DESC[15:0];
                                     IF VPID = 0
                                          THEN VMfail(Invalid operand to INVEPT/INVVPID);
                                          ELSE
                                               Invalidate all mappings tagged with VPID except
global translations;
                                               VMsucceed:
                                     FI;
                                     BREAK:
                            ESAC;
                  FI:
        FI;
FI;
```

#### Flags Affected

See the operation section and Section 5.2.

#### **Protected Mode Exceptions**

#GP(0) If the current privilege level is not 0.

If the memory operand effective address is outside the CS, DS,

ES, FS, or GS segment limit.

If the DS, ES, FS, or GS register contains an unusable segment.

If the source operand is located in an execute-only code

segment.

#PF(fault-code) If a page fault occurs in accessing the memory operand.

#SS(0) If the memory operand effective address is outside the SS

segment limit.

If the SS register contains an unusable segment.

#UD If not in VMX operation.

If the logical processor does not support VPIDs

(IA32\_VMX\_PROCBASED\_CTLS2[37]=0). If the logical processor supports VPIDs

(IA32\_VMX\_PROCBASED\_CTLS2[37]=1) but does not support the INVVPID instruction (IA32\_VMX\_EPT\_VPID\_CAP[32]=0).

#### **Real-Address Mode Exceptions**

#UD A logical processor cannot be in real-address mode while in VMX

operation and the INVVPID instruction is not recognized outside

VMX operation.

#### Virtual-8086 Mode Exceptions

#UD The INVVPID instruction is not recognized in virtual-8086 mode.

#### **Compatibility Mode Exceptions**

#UD The INVVPID instruction is not recognized in compatibility mode.

#### **64-Bit Mode Exceptions**

#GP(0) If the current privilege level is not 0.

If the memory operand is in the CS, DS, ES, FS, or GS segments

and the memory address is in a non-canonical form.

#PF(fault-code) If a page fault occurs in accessing the memory operand.

#SS(0) If the memory destination operand is in the SS segment and the

memory address is in a non-canonical form.

#UD If not in VMX operation.

If the logical processor does not support VPIDs

(IA32\_VMX\_PROCBASED\_CTLS2[37]=0).

If the logical processor supports VPIDs

(IA32\_VMX\_PROCBASED\_CTLS2[37]=1) but does not support the INVVPID instruction (IA32\_VMX\_EPT\_VPID\_CAP[32]=0).

#### VMCALL—Call to VM Monitor

Opcode	Instruction	Description
0F 01 C1	VMCALL	Call to VM monitor by causing VM exit.

#### **Description**

This instruction allows guest software can make a call for service into an underlying VM monitor. The details of the programming interface for such calls are VMM-specific; this instruction does nothing more than cause a VM exit, registering the appropriate exit reason.

Use of this instruction in VMX root operation invokes an SMM monitor (see Section 25.15.2 in *IA-32 Intel Architecture Software Developer's Manual, Volume 3B*). This invocation will activate the dual-monitor treatment of system-management interrupts (SMIs) and system-management mode (SMM) if it is not already active (see Section 25.15.6 in *IA-32 Intel Architecture Software Developer's Manual, Volume 3B*).

#### Operation

```
IF not in VMX operation
    THEN #UD;

ELSIF in VMX non-root operation
    THEN VM exit;

ELSIF (RFLAGS.VM = 1) OR (IA32_EFER.LMA = 1 and CS.L = 0)
    THEN #UD;

ELSIF CPL > 0
    THEN #GP(0);

ELSIF in SMM or the logical processor does not support the dual-monitor treatment of SMIs and SMM or the valid bit in the IA32_SMM_MONITOR_CTL MSR is clear
    THEN VMfail (VMCALL executed in VMX root operation);
```

ELSIF dual-monitor treatment of SMIs and SMM is active

THEN perform an SMM VM exit (see Section 25.15.2

of the Intel® 64 and IA-32 Architectures Software Developer's Manual, Volume 3B);

ELSIF current-VMCS pointer is not valid

THEN VMfailInvalid:

ELSIF launch state of current VMCS is not clear

THEN VMfailValid(VMCALL with non-clear VMCS);

ELSIF VM-exit control fields are not valid (see Section 25.15.6.1 of the Intel® 64 and IA-32 Architectures Software Developer's Manual, Volume 3B)

THEN VMfailValid (VMCALL with invalid VM-exit control fields);

**ELSE** 

enter SMM:

read revision identifier in MSEG:

```
IF revision identifier does not match that supported by processor
        THEN
            leave SMM:
            VMfailValid(VMCALL with incorrect MSEG revision identifier);
        ELSE
            read SMM-monitor features field in MSEG (see Section 25.15.6.2,
            in the Intel® 64 and IA-32 Architectures Software Developer's Manual, Volume 3B);
            IF features field is invalid
                 THEN
                      leave SMM;
                      VMfailValid(VMCALL with invalid SMM-monitor features);
                 ELSE activate dual-monitor treatment of SMIs and SMM (see Section 25.15.6
                 in the Intel® 64 and IA-32 Architectures Software Developer's Manual, Volume
                 3B);
            FI;
        FI;
FI:
```

#### **Flags Affected**

See the operation section and Section 5.2.

#### **Protected Mode Exceptions**

#GP(0) If the current privilege level is not 0 and the logical processor is

in VMX root operation.

**#UD** If executed outside VMX operation.

#### Real-Address Mode Exceptions

#UD A logical processor cannot be in real-address mode while in VMX

operation and the VMCALL instruction is not recognized outside

VMX operation.

#### Virtual-8086 Mode Exceptions

#UD If executed outside VMX non-root operation.

#### **Compatibility Mode Exceptions**

#UD If executed outside VMX non-root operation.

#### **64-Bit Mode Exceptions**

#UD If executed outside VMX non-root operation.

#### VMCLEAR—Clear Virtual-Machine Control Structure

Opcode	Instruction	Description
66 0F C7 /6	VMCLEAR m64	Copy VMCS data to VMCS region in memory.

#### **Description**

This instruction applies to the VMCS whose VMCS region resides at the physical address contained in the instruction operand. The instruction ensures that VMCS data for that VMCS (some of these data may be currently maintained on the processor) are copied to the VMCS region in memory. It also initializes parts of the VMCS region (for example, it sets the launch state of that VMCS to clear). See Chapter 20, "Virtual-Machine Control Structures," in the Intel® 64 and IA-32 Architectures Software Developer's Manual, Volume 3B.

The operand of this instruction is always 64 bits and is always in memory. If the operand is the current-VMCS pointer, then that pointer is made invalid (set to FFFFFFF\_FFFFFFH).

Note that the VMCLEAR instruction might not explicitly write any VMCS data to memory; the data may be already resident in memory before the VMCLEAR is executed.

#### **Operation**

```
IF (register operand) or (not in VMX operation) or (RFLAGS.VM = 1) or
(IA32\_EFER.LMA = 1 \text{ and } CS.L = 0)
   THEN #UD;
ELSIF in VMX non-root operation
   THEN VM exit;
ELSIF CPL > 0
   THEN #GP(0);
   ELSE
        addr ← contents of 64-bit in-memory operand;
        IF addr is not 4KB-aligned OR
        (processor supports Intel 64 architecture and
        addr sets any bits beyond the physical-address width) OR
        (processor does not support Intel 64 architecture, addr sets any bits in the range 63:32)
             THEN VMfail(VMCLEAR with invalid physical address);
            ELSIF addr = VMXON pointer
                 THEN VMfail(VMCLEAR with VMXON pointer);
                      ensure that data for VMCS referenced by the operand is in memory;
                      initialize implementation-specific data in VMCS region;
                      launch state of VMCS referenced by the operand ← "clear"
```

IF operand addr = current-VMCS pointer

THEN current-VMCS pointer ← FFFFFFFF, FFFFFFFH;

FI;

VMsucceed;

FI:

FI;

#### **Flags Affected**

See the operation section and Section 5.2.

#### **Protected Mode Exceptions**

#GP(0) If the current privilege level is not 0.

If the memory operand effective address is outside the CS, DS,

ES, FS, or GS segment limit.

If the DS, ES, FS, or GS register contains an unusable segment.

If the operand is located in an execute-only code segment.

#PF(fault-code) If a page fault occurs in accessing the memory operand.

#SS(0) If the memory operand effective address is outside the SS

segment limit.

If the SS register contains an unusable segment.

**#UD** If operand is a register.

If not in VMX operation.

#### **Real-Address Mode Exceptions**

#UD A logical processor cannot be in real-address mode while in VMX

operation and the VMCLEAR instruction is not recognized outside

VMX operation.

#### Virtual-8086 Mode Exceptions

#UD The VMCLEAR instruction is not recognized in virtual-8086

mode.

#### **Compatibility Mode Exceptions**

#UD The VMCLEAR instruction is not recognized in compatibility

mode.

#### **64-Bit Mode Exceptions**

#GP(0) If the current privilege level is not 0.

If the source operand is in the CS, DS, ES, FS, or GS segments

and the memory address is in a non-canonical form.

#PF(fault-code) If a page fault occurs in accessing the memory operand. #SS(0)

If the source operand is in the SS segment and the memory

address is in a non-canonical form.

#UD If operand is a register.

If not in VMX operation.

#### VMLAUNCH/VMRESUME—Launch/Resume Virtual Machine

Opcode	Instruction	Description
0F 01 C2	VMLAUNCH	Launch virtual machine managed by current VMCS.
0F 01 C3	VMRESUME	Resume virtual machine managed by current VMCS.

#### **Description**

Effects a VM entry managed by the current VMCS.

- VMLAUNCH fails if the launch state of current VMCS is not "clear". If the instruction is successful, it sets the launch state to "launched."
- VMRESUME fails if the launch state of the current VMCS is not "launched."

If VM entry is attempted, the logical processor performs a series of consistency checks as detailed in Chapter 22, "VM Entries," in the Intel® 64 and IA-32 Architectures Software Developer's Manual, Volume 3B. Failure to pass checks on the VMX controls or on the host-state area passes control to the instruction following the VMLAUNCH or VMRESUME instruction. If these pass but checks on the guest-state area fail, the logical processor loads state from the host-state area of the VMCS, passing control to the instruction referenced by the RIP field in the host-state area.

VM entry is not allowed when events are blocked by MOV SS or POP SS. Neither VMLAUNCH nor VMRESUME should be used immediately after either MOV to SS or POP to SS.

#### **Operation**

```
IF (not in VMX operation) or (RFLAGS.VM = 1) or (IA32_EFER.LMA = 1 and CS.L = 0)
   THEN #UD:
ELSIF in VMX non-root operation
   THEN VMexit:
ELSIF CPL > 0
   THEN #GP(0);
ELSIF current-VMCS pointer is not valid
   THEN VMfailInvalid:
ELSIF events are being blocked by MOV SS
   THEN VMfailValid(VM entry with events blocked by MOV SS);
ELSIF (VMLAUNCH and launch state of current VMCS is not "clear")
   THEN VMfailValid(VMLAUNCH with non-clear VMCS);
ELSIF (VMRESUME and launch state of current VMCS is not "launched")
   THEN VMfailValid(VMRESUME with non-launched VMCS);
   ELSE
        Check settings of VMX controls and host-state area;
```

IF invalid settings

```
THEN VMfailValid(VM entry with invalid VMX-control field(s)) or
                      VMfailValid(VM entry with invalid host-state field(s)) or
                      VMfailValid(VM entry with invalid executive-VMCS pointer)) or
                      VMfailValid(VM entry with non-launched executive VMCS) or
                      VMfailValid(VM entry with executive-VMCS pointer not VMXON pointer) or
                      VMfailValid(VM entry with invalid VM-execution control fields in executive
                      VMCS)
                      as appropriate;
             ELSE
                 Attempt to load quest state and PDPTRs as appropriate;
                 clear address-range monitoring;
                 IF failure in checking guest state or PDPTRs
                      THEN VM entry fails (see Section 22.7, in the
                      Intel® 64 and IA-32 Architectures Software Developer's Manual, Volume 3B);
                      ELSE
                           Attempt to load MSRs from VM-entry MSR-load area;
                           IF failure
                                THEN VM entry fails (see Section 22.7, in the Intel® 64 and IA-32
Architectures Software Developer's Manual, Volume 3B);
                               ELSE
                                    IF VMLAUNCH
                                         THEN launch state of VMCS \leftarrow "launched";
                                    FI:
                                    IF in SMM and "entry to SMM" VM-entry control is 0
                                         THEN
                                              IF "deactivate dual-monitor treatment" VM-entry
                                              control is 0
                                                  THEN SMM-transfer VMCS pointer ←
                                                  current-VMCS pointer;
                                              FI;
                                              IF executive-VMCS pointer is VMX pointer
                                                  THEN current-VMCS pointer \leftarrow
                                                  VMCS-link pointer;
                                                  ELSE current-VMCS pointer ←
                                                  executive-VMCS pointer;
                                              FI;
                                              leave SMM;
                                    FI:
                                    VM entry succeeds;
                           FI;
                 FI:
        FI;
FI:
```

Further details of the operation of the VM-entry appear in Chapter 22 of *IA-32 Intel Architecture Software Developer's Manual, Volume 3B*.

#### **Flags Affected**

See the operation section and Section 5.2.

#### **Protected Mode Exceptions**

#GP(0) If the current privilege level is not 0. #UD If executed outside VMX operation.

#### **Real-Address Mode Exceptions**

#UD A logical processor cannot be in real-address mode while in VMX

operation and the VMLAUNCH and VMRESUME instructions are

not recognized outside VMX operation.

#### Virtual-8086 Mode Exceptions

#UD The VMLAUNCH and VMRESUME instructions are not recognized

in virtual-8086 mode.

#### **Compatibility Mode Exceptions**

#UD The VMLAUNCH and VMRESUME instructions are not recognized

in compatibility mode.

#### **64-Bit Mode Exceptions**

#GP(0) If the current privilege level is not 0. #UD If executed outside VMX operation.

#### VMPTRLD—Load Pointer to Virtual-Machine Control Structure

Opcode	Instruction	Description
0F C7 /6	VMPTRLD m64	Loads the current VMCS pointer from memory.

#### **Description**

Marks the current-VMCS pointer valid and loads it with the physical address in the instruction operand. The instruction fails if its operand is not properly aligned, sets unsupported physical-address bits, or is equal to the VMXON pointer. In addition, the instruction fails if the 32 bits in memory referenced by the operand do not match the VMCS revision identifier supported by this processor.<sup>1</sup>

The operand of this instruction is always 64 bits and is always in memory.

#### **Operation**

```
IF (register operand) or (not in VMX operation) or (RFLAGS.VM = 1) or
(IA32\_EFER.LMA = 1 \text{ and } CS.L = 0)
   THEN #UD:
ELSIF in VMX non-root operation
   THEN VMexit;
ELSIF CPL > 0
   THEN #GP(0);
   ELSE
        addr ← contents of 64-bit in-memory source operand;
        IF addr is not 4KB-aligned OR
        (processor supports Intel 64 architecture and
        addr sets any bits beyond the processor's physical-address width) OR
        processor does not support Intel 64 architecture and addr sets any bits in the range 63:32
             THEN VMfail(VMPTRLD with invalid physical address);
        ELSIF addr = VMXON pointer
             THEN VMfail(VMPTRLD with VMXON pointer);
                  rev \leftarrow 32 bits located at physical address addr;
                  IF rev ≠ VMCS revision identifier supported by processor
                      THEN VMfail(VMPTRLD with incorrect VMCS revision identifier);
                      FI SE
                           current-VMCS pointer \leftarrow addr;
                           VMsucceed:
```

Software should consult the VMX capability MSR VMX\_BASIC to discover the VMCS revision identifier supported by this processor (see Appendix G, "VMX Capability Reporting Facility," in the Intel® 64 and IA-32 Architectures Software Developer's Manual, Volume 3B).

FI:

FI;

FI:

#### **Flags Affected**

See the operation section and Section 5.2.

#### **Protected Mode Exceptions**

#GP(0) If the current privilege level is not 0.

If the memory source operand effective address is outside the

CS, DS, ES, FS, or GS segment limit.

If the DS, ES, FS, or GS register contains an unusable segment.

If the source operand is located in an execute-only code

segment.

#PF(fault-code) If a page fault occurs in accessing the memory source operand.

#SS(0) If the memory source operand effective address is outside the

SS segment limit.

If the SS register contains an unusable segment.

**#UD** If operand is a register.

If not in VMX operation.

#### **Real-Address Mode Exceptions**

#UD A logical processor cannot be in real-address mode while in VMX

operation and the VMPTRLD instruction is not recognized

outside VMX operation.

#### Virtual-8086 Mode Exceptions

#UD The VMPTRLD instruction is not recognized in virtual-8086

mode.

#### Compatibility Mode Exceptions

#UD The VMPTRLD instruction is not recognized in compatibility

mode.

#### **64-Bit Mode Exceptions**

#GP(0) If the current privilege level is not 0.

If the source operand is in the CS, DS, ES, FS, or GS segments

and the memory address is in a non-canonical form.

#PF(fault-code) If a page fault occurs in accessing the memory source operand.

#SS(0) If the source operand is in the SS segment and the memory

address is in a non-canonical form.

**#UD** If operand is a register.

If not in VMX operation.

#### VMPTRST—Store Pointer to Virtual-Machine Control Structure

Opcode	Instruction	Description
0F C7 /7	VMPTRST m64	Stores the current VMCS pointer into memory.

#### **Description**

Stores the current-VMCS pointer into a specified memory address. The operand of this instruction is always 64 bits and is always in memory.

#### Operation

```
IF (register operand) or (not in VMX operation) or (RFLAGS.VM = 1) or (IA32_EFER.LMA = 1 and CS.L = 0)
    THEN #UD;
ELSIF in VMX non-root operation
    THEN VMexit;
ELSIF CPL > 0
    THEN #GP(0);
ELSE
    64-bit in-memory destination operand ← current-VMCS pointer;
    VMsucceed;
FI;
```

## **Flags Affected**

See the operation section and Section 5.2.

#### **Protected Mode Exceptions**

I TOLCCICO I TOGC CAL	-cptions
#GP(0)	If the current privilege level is not 0.
	If the memory destination operand effective address is outside the CS, DS, ES, FS, or GS segment limit.
	If the DS, ES, FS, or GS register contains an unusable segment.
	If the destination operand is located in a read-only data segment or any code segment.
#PF(fault-code)	If a page fault occurs in accessing the memory destination operand.
#SS(0)	If the memory destination operand effective address is outside the SS segment limit.
	If the SS register contains an unusable segment.
#UD	If operand is a register.
	If not in VMX operation.

#### **Real-Address Mode Exceptions**

#UD A logical processor cannot be in real-address mode while in VMX

operation and the VMPTRST instruction is not recognized outside

VMX operation.

#### Virtual-8086 Mode Exceptions

#UD The VMPTRST instruction is not recognized in virtual-8086

mode.

#### **Compatibility Mode Exceptions**

#UD The VMPTRST instruction is not recognized in compatibility

mode.

#### **64-Bit Mode Exceptions**

#GP(0) If the current privilege level is not 0.

If the destination operand is in the CS, DS, ES, FS, or GS

segments and the memory address is in a non-canonical form.

#PF(fault-code) If a page fault occurs in accessing the memory destination

operand.

#SS(0) If the destination operand is in the SS segment and the memory

address is in a non-canonical form.

**#UD** If operand is a register.

If not in VMX operation.

#### VMREAD—Read Field from Virtual-Machine Control Structure

Opcode	Instruction	Description
0F 78	VMREAD r/m64, r64	Reads a specified VMCS field (in 64-bit mode).
0F 78	VMREAD r/m32, r32	Reads a specified VMCS field (outside 64-bit mode).

#### **Description**

Reads a specified field from the VMCS and stores it into a specified destination operand (register or memory).

The specific VMCS field is identified by the VMCS-field encoding contained in the register source operand. Outside IA-32e mode, the source operand has 32 bits, regardless of the value of CS.D. In 64-bit mode, the source operand has 64 bits; however, if bits 63:32 of the source operand are not zero, VMREAD will fail due to an attempt to access an unsupported VMCS component (see operation section).

The effective size of the destination operand, which may be a register or in memory, is always 32 bits outside IA-32e mode (the setting of CS.D is ignored with respect to operand size) and 64 bits in 64-bit mode. If the VMCS field specified by the source operand is shorter than this effective operand size, the high bits of the destination operand are cleared to 0. If the VMCS field is longer, then the high bits of the field are not read.

Note that any faults resulting from accessing a memory destination operand can occur only after determining, in the operation section below, that the VMCS pointer is valid and that the specified VMCS field is supported.

## Operation

```
IF (not in VMX operation) or (RFLAGS.VM = 1) or (IA32_EFER.LMA = 1 and CS.L = 0)
        THEN #UD;

ELSIF in VMX non-root operation
        THEN VMexit;

ELSIF CPL > 0
        THEN #GP(0);

ELSIF current-VMCS pointer is not valid
        THEN VMfailInvalid;

ELSIF register source operand does not correspond to any VMCS field
        THEN VMfailValid(VMREAD/VMWRITE from/to unsupported VMCS component);
        ELSE
        DEST ← contents of VMCS field indexed by register source operand;
        VMsucceed;

FI;
```

#### Flags Affected

See the operation section and Section 5.2.

#### **Protected Mode Exceptions**

#GP(0) If the current privilege level is not 0.

If a memory destination operand effective address is outside the

CS, DS, ES, FS, or GS segment limit.

If the DS, ES, FS, or GS register contains an unusable segment.

If the destination operand is located in a read-only data

segment or any code segment.

#PF(fault-code) If a page fault occurs in accessing a memory destination

operand.

#SS(0) If a memory destination operand effective address is outside the

SS segment limit.

If the SS register contains an unusable segment.

#UD If not in VMX operation.

#### **Real-Address Mode Exceptions**

#UD A logical processor cannot be in real-address mode while in VMX

operation and the VMREAD instruction is not recognized outside

VMX operation.

#### Virtual-8086 Mode Exceptions

#UD The VMREAD instruction is not recognized in virtual-8086 mode.

#### **Compatibility Mode Exceptions**

#UD The VMREAD instruction is not recognized in compatibility mode.

#### 64-Bit Mode Exceptions

#GP(0) If the current privilege level is not 0.

If the memory destination operand is in the CS, DS, ES, FS, or GS segments and the memory address is in a non-canonical

form.

#PF(fault-code) If a page fault occurs in accessing a memory destination

operand.

#SS(0) If the memory destination operand is in the SS segment and the

memory address is in a non-canonical form.

#UD If not in VMX operation.

# **VMRESUME—Resume Virtual Machine**

See VMLAUNCH/VMRESUME—Launch/Resume Virtual Machine.

#### VMWRITE—Write Field to Virtual-Machine Control Structure

Opcode	Instruction	Description
0F 79	VMWRITE r64, r/m64	Writes a specified VMCS field (in 64-bit mode)
0F 79	VMWRITE r32, r/m32	Writes a specified VMCS field (outside 64-bit mode)

#### **Description**

Writes to a specified field in the VMCS specified by a secondary source operand (register only) using the contents of a primary source operand (register or memory).

The VMCS field is identified by the VMCS-field encoding contained in the register secondary source operand. Outside IA-32e mode, the secondary source operand is always 32 bits, regardless of the value of CS.D. In 64-bit mode, the secondary source operand has 64 bits; however, if bits 63:32 of the secondary source operand are not zero, VMWRITE will fail due to an attempt to access an unsupported VMCS component (see operation section).

The effective size of the primary source operand, which may be a register or in memory, is always 32 bits outside IA-32e mode (the setting of CS.D is ignored with respect to operand size) and 64 bits in 64-bit mode. If the VMCS field specified by the secondary source operand is shorter than this effective operand size, the high bits of the primary source operand are ignored. If the VMCS field is longer, then the high bits of the field are cleared to 0.

Note that any faults resulting from accessing a memory source operand occur after determining, in the operation section below, that the VMCS pointer is valid but before determining if the destination VMCS field is supported.

#### Operation

FI:

#### **Flags Affected**

See the operation section and Section 5.2.

#### **Protected Mode Exceptions**

#GP(0) If the current privilege level is not 0.

If a memory source operand effective address is outside the CS,

DS, ES, FS, or GS segment limit.

If the DS, ES, FS, or GS register contains an unusable segment.

If the source operand is located in an execute-only code

segment.

#PF(fault-code) If a page fault occurs in accessing a memory source operand.

#SS(0) If a memory source operand effective address is outside the SS

segment limit.

If the SS register contains an unusable segment.

#UD If not in VMX operation.

#### **Real-Address Mode Exceptions**

#UD A logical processor cannot be in real-address mode while in VMX

operation and the VMWRITE instruction is not recognized

outside VMX operation.

#### Virtual-8086 Mode Exceptions

#UD The VMWRITE instruction is not recognized in virtual-8086

mode.

#### Compatibility Mode Exceptions

#UD The VMWRITE instruction is not recognized in compatibility

mode.

#### **64-Bit Mode Exceptions**

#GP(0) If the current privilege level is not 0.

If the memory source operand is in the CS, DS, ES, FS, or GS

segments and the memory address is in a non-canonical form.

#PF(fault-code) If a page fault occurs in accessing a memory source operand.
#SS(0) If the memory source operand is in the SS segment and the

memory address is in a non-canonical form.

#UD If not in VMX operation.

## **VMXOFF—Leave VMX Operation**

Opcode	Instruction	Description
0F 01 C4	VMXOFF	Leaves VMX operation.

#### **Description**

Takes the logical processor out of VMX operation, unblocks INIT signals, conditionally re-enables A20M, and clears any address-range monitoring.<sup>1</sup>

#### **Operation**

```
IF (not in VMX operation) or (RFLAGS.VM = 1) or (IA32_EFER.LMA = 1 and CS.L = 0)
   THEN #UD:
ELSIF in VMX non-root operation
   THEN VMexit:
ELSIF CPL > 0
   THEN #GP(0):
ELSIF dual-monitor treatment of SMIs and SMM is active
   THEN VMfail(VMXOFF under dual-monitor treatment of SMIs and SMM);
   ELSE
        leave VMX operation;
        unblock INIT:
        IF outside SMX operation<sup>2</sup>
             THEN unblock and enable A20M:
        FI;
        clear address-range monitoring;
        VMsucceed;
FI:
```

#### **Flags Affected**

See the operation section and Section 5.2.

## **Protected Mode Exceptions**

#GP(0) If executed in VMX root operation with CPL > 0.

**#UD** If executed outside VMX operation.

<sup>1.</sup> See the information on MONITOR/MWAIT in Chapter 7, "Multiple-Processor Management," of the Intel® 64 and IA-32 Architectures Software Developer's Manual, Volume 3A.

<sup>2.</sup> A logical processor is outside SMX operation if GETSEC[SENTER] has not been executed or if GETSEC[SEXIT] was executed after the last execution of GETSEC[SENTER]. See Chapter 6, "Safer Mode Extensions Reference."

#### **Real-Address Mode Exceptions**

#UD A logical processor cannot be in real-address mode while in VMX

operation and the VMXOFF instruction is not recognized outside

VMX operation.

#### Virtual-8086 Mode Exceptions

#UD The VMXOFF instruction is not recognized in virtual-8086 mode.

#### **Compatibility Mode Exceptions**

#UD The VMXOFF instruction is not recognized in compatibility mode.

#### **64-Bit Mode Exceptions**

#GP(0) If executed in VMX root operation with CPL > 0.

**#UD** If executed outside VMX operation.

## VMXON—Enter VMX Operation

Opcode	Instruction	Description
F3 0F C7 /6	VMXON m64	Enter VMX root operation.

#### **Description**

Puts the logical processor in VMX operation with no current VMCS, blocks INIT signals, disables A20M, and clears any address-range monitoring established by the MONITOR instruction.<sup>1</sup>

The operand of this instruction is a 4KB-aligned physical address (the VMXON pointer) that references the VMXON region, which the logical processor may use to support VMX operation. This operand is always 64 bits and is always in memory.

#### **Operation**

```
IF (register operand) or (CR4.VMXE = 0) or (CR0.PE = 0) or (RFLAGS.VM = 1) or
(IA32\_EFER.LMA = 1 and CS.L = 0)
   THEN #UD:
ELSIF not in VMX operation
   THEN
        IF (CPL > 0) or (in A20M mode) or
        (the values of CRO and CR4 are not supported in VMX operation<sup>2</sup>) or
        (bit 0 (lock bit) of IA32_FEATURE_CONTROL MSR is clear) or
        (in SMX operation<sup>3</sup> and bit 1 of IA32_FEATURE_CONTROL MSR is clear) or
        (outside SMX operation and bit 2 of IA32_FEATURE_CONTROL MSR is clear)
             THEN #GP(0);
             ELSE
                 addr ← contents of 64-bit in-memory source operand;
                 IF addr is not 4KB-aligned or
                 (processor supports Intel 64 architecture and
                 addr sets any bits beyond the VMX physical-address width) or
                 (processor does not support Intel 64 architecture and
                 addr sets any bits in the range 63:32)
```

<sup>1.</sup> See the information on MONITOR/MWAIT in Chapter 7, "Multiple-Processor Management," of the Intel® 64 and IA-32 Architectures Software Developer's Manual, Volume 3A.

<sup>2.</sup> See Section 19.8 of the Intel® 64 and IA-32 Architectures Software Developer's Manual, Volume 3B.

<sup>3.</sup> A logical processor is in SMX operation if GETSEC[SEXIT] has not been executed since the last execution of GETSEC[SENTER]. A logical processor is outside SMX operation if GETSEC[SENTER] has not been executed or if GETSEC[SEXIT] was executed after the last execution of GET-SEC[SENTER]. See Chapter 6, "Safer Mode Extensions Reference."

```
THEN VMfailInvalid:
                      ELSE
                           rev \leftarrow 32 bits located at physical address addr;
                           IF rev ≠ VMCS revision identifier supported by processor
                               THEN VMfailInvalid:
                               ELSE
                                    current-VMCS pointer ← FFFFFFFF_FFFFFFH;
                                    enter VMX operation;
                                    block INIT signals;
                                    block and disable A20M;
                                    clear address-range monitoring;
                                    VMsucceed:
                           FI;
                 FI:
        FI:
ELSIF in VMX non-root operation
   THEN VMexit:
ELSIF CPL > 0
   THEN #GP(0);
   ELSE VMfail("VMXON executed in VMX root operation");
FI;
```

#### **Flags Affected**

See the operation section and Section 5.2.

#### **Protected Mode Exceptions**

#GP(0) If executed outside VMX operation with CPL>0 or with invalid

CR0 or CR4 fixed bits.

If executed in A20M mode.

If the memory source operand effective address is outside the

CS, DS, ES, FS, or GS segment limit.

If the DS, ES, FS, or GS register contains an unusable segment.

If the source operand is located in an execute-only code

segment.

#PF(fault-code) If a page fault occurs in accessing the memory source operand.

#SS(0) If the memory source operand effective address is outside the

SS segment limit.

If the SS register contains an unusable segment.

**#UD** If operand is a register.

If executed with CR4.VMXE = 0.

#### **Real-Address Mode Exceptions**

#UD The VMXON instruction is not recognized in real-address mode.

#### Virtual-8086 Mode Exceptions

#UD The VMXON instruction is not recognized in virtual-8086 mode.

#### **Compatibility Mode Exceptions**

#UD The VMXON instruction is not recognized in compatibility mode.

#### **64-Bit Mode Exceptions**

#GP(0) If executed outside VMX operation with CPL > 0 or with invalid

CR0 or CR4 fixed bits.

If executed in A20M mode.

If the source operand is in the CS, DS, ES, FS, or GS segments

and the memory address is in a non-canonical form.

#PF(fault-code) If a page fault occurs in accessing the memory source operand.

#SS(0) If the source operand is in the SS segment and the memory

address is in a non-canonical form.

#UD If operand is a register.

If executed with CR4.VMXE = 0.

## 5.4 VM INSTRUCTION ERROR NUMBERS

For certain error conditions, the VM-instruction error field is loaded with an error number to indicate the source of the error. Table 5-1 lists VM-instruction error numbers.

Table 5-1. VM-Instruction Error Numbers

Error Number	Description
1	VMCALL executed in VMX root operation
2	VMCLEAR with invalid physical address
3	VMCLEAR with VMXON pointer
4	VMLAUNCH with non-clear VMCS
5	VMRESUME with non-launched VMCS
6	VMRESUME with a corrupted VMCS (indicates corruption of the current VMCS)
7	VM entry with invalid control field(s) <sup>1,2</sup>
8	VM entry with invalid host-state field(s) <sup>1</sup>
9	VMPTRLD with invalid physical address
10	VMPTRLD with VMXON pointer
11	VMPTRLD with incorrect VMCS revision identifier
12	VMREAD/VMWRITE from/to unsupported VMCS component
13	VMWRITE to read-only VMCS component
15	VMXON executed in VMX root operation
16	VM entry with invalid executive-VMCS pointer <sup>1</sup>
17	VM entry with non-launched executive VMCS <sup>1</sup>
18	VM entry with executive-VMCS pointer not VMXON pointer (when attempting to deactivate the dual-monitor treatment of SMIs and SMM) <sup>1</sup>
19	VMCALL with non-clear VMCS (when attempting to activate the dual-monitor treatment of SMIs and SMM)
20	VMCALL with invalid VM-exit control fields
22	VMCALL with incorrect MSEG revision identifier (when attempting to activate the dual-monitor treatment of SMIs and SMM)
23	VMXOFF under dual-monitor treatment of SMIs and SMM
24	VMCALL with invalid SMM-monitor features (when attempting to activate the dual-monitor treatment of SMIs and SMM)

Table 5-1. VM-Instruction Error Numbers (Contd.)

Error Number	Description
25	VM entry with invalid VM-execution control fields in executive VMCS (when attempting to return from SMM) <sup>1,2</sup>
26	VM entry with events blocked by MOV SS.
28	Invalid operand to INVEPT/INVVPID.

#### **NOTES:**

- 1. VM-entry checks on control fields and host-state fields may be performed in any order. Thus, an indication by error number of one cause does not imply that there are not also other errors. Different processors may give different error numbers for the same VMCS.
- 2. Error number 7 is not used for VM entries that return from SMM that fail due to invalid VM-execution control fields in the executive VMCS. Error number 25 is used for these cases.

#### VMX INSTRUCTION REFERENCE

# CHAPTER 6 SAFER MODE EXTENSIONS REFERENCE

#### 6.1 OVERVIEW

This chapter describes the Safer Mode Extensions (SMX) for the Intel 64 and IA-32 architectures. Safer Mode Extensions (SMX) provide a programming interface for system software to establish a measured environment within the platform to support trust decisions by end users. The measured environment includes:

- Measured launch of a system executive, referred to as a Measured Launched Environment (MLE)<sup>1</sup>. The system executive may be based on a Virtual Machine Monitor (VMM), a measured VMM is referred to as MVMM<sup>2</sup>.
- Mechanisms to ensure the above measurement is protected and stored in a secure location in the platform.
- Protection mechanisms that allow the VMM to control attempts to modify the VMM

The measurement and protection mechanisms used by a measured environment are supported by the capabilities of an Intel® Trusted Execution Technology (Intel® TXT) platform:

- The SMX are the processor's programming interface in an Intel TXT platform;
- The chipset in an Intel TXT platform provides enforcement of the protection mechanisms;
- Trusted Platform Module (TPM) 1.2 in the platform provides platform configuration registers (PCRs) to store software measurement values.

## 6.2 SMX FUNCTIONALITY

SMX functionality is provided in an Intel 64 processor through the GETSEC instruction via leaf functions. The GETSEC instruction supports multiple leaf functions. Leaf functions are selected by the value in EAX at the time GETSEC is executed. Each GETSEC leaf function is documented separately in the reference pages with a unique mnemonic (even though these mnemonics share the same opcode, 0F 37).

<sup>1.</sup> See Intel® Trusted Execution Technology Measured Launched Environment Programming Guide.

<sup>2.</sup> An MVMM is sometimes referred to as a measured launched environment (MLE). See Intel® Trusted Execution Technology Measured Launched Environment Programming Guide

## 6.2.1 Detecting and Enabling SMX

Software can detect support for SMX operation using the CPUID instruction. If software executes CPUID with 1 in EAX, a value of 1 in bit 6 of ECX indicates support for SMX operation (GETSEC is available), see CPUID instruction for the layout of feature flags of reported by CPUID.01H:ECX.

System software enables SMX operation by setting CR4.SMXE[Bit 14] = 1 before attempting to execute GETSEC. Otherwise, execution of GETSEC results in the processor signaling an invalid opcode exception (#UD).

If the CPUID SMX feature flag is clear (CPUID.01H.ECX[Bit 6] = 0), attempting to set CR4.SMXE[Bit 14] results in a general protection exception.

The IA32\_FEATURE\_CONTROL MSR (at address 03AH) provides feature control bits that configure operation of VMX and SMX. These bits are documented in Table 6-1.

Bit Position	Description	
0	Lock bit (0 = unlocked, 1 = locked). When set to '1' further writes to this MSR are blocked.	
1	Enable VMX in SMX operation	
2	Enable VMX outside SMX operation	
7:3	Reserved	
14:8	SENTER Local Function Enables: When set, each bit in the field represents an enable control for a corresponding SENTER function.	
15	SENTER Global Enable: Must be set to '1' to enable operation of GETSEC[SENTER]	
63:16	Reserved	

Table 6-1. Layout of IA32\_FEATURE\_CONTROL

- Bit 0 is a lock bit. If the lock bit is clear, an attempt to execute VMXON will cause a general-protection exception. Attempting to execute GETSEC[SENTER] when the lock bit is clear will also cause a general-protection exception. If the lock bit is set, WRMSR to the IA32\_FEATURE\_CONTROL MSR will cause a general-protection exception. Once the lock bit is set, the MSR cannot be modified until a power-on reset. System BIOS can use this bit to provide a setup option for BIOS to disable support for VMX, SMX or both VMX and SMX.
- Bit 1 enables VMX in SMX operation (between executing the SENTER and SEXIT leaves of GETSEC). If this bit is clear, an attempt to execute VMXON in SMX will cause a general-protection exception if executed in SMX operation. Attempts to set this bit on logical processors that do not support both VMX operation (Chapter 6, "Safer Mode Extensions Reference") and SMX operation cause general-protection exceptions.

- Bit 2 enables VMX outside SMX operation. If this bit is clear, an attempt to execute VMXON will cause a general-protection exception if executed outside SMX operation. Attempts to set this bit on logical processors that do not support VMX operation cause general-protection exceptions.
- Bits 8 through 14 specify enabled functionality of the SENTER leaf function. Each bit in the field represents an enable control for a corresponding SENTER function. Only enabled SENTER leaf functionality can be used when executing SENTER.
- Bits 15 specify global enable of all SENTER functionalities.

## 6.2.2 SMX Instruction Summary

System software must first query for available GETSEC leaf functions by executing GETSEC[CAPABILITIES]. The CAPABILITIES leaf function returns a bit map of available GETSEC leaves. An attempt to execute an unsupported leaf index results in an undefined opcode (#UD) exception.

## 6.2.2.1 GETSEC[CAPABILITIES]

The SMX functionality provides an architectural interface for newer processor generations to extend SMX capabilities. Specifically, the GETSEC instruction provides a capability leaf function for system software to discover the available GETSEC leaf functions that are supported in a processor. Table 6-2 lists the currently available GETSEC leaf functions.

Table 6-2. GETSEC Leaf Functions

Index (EAX)	Leaf function	Description
0	CAPABILITIES	Returns the available leaf functions of the GETSEC instruction
1	Undefined	Reserved
2	ENTERACCS	Enter
3	EXITAC	Exit
4	SENTER	Launch an MLE
5	SEXIT	Exit the MLE
6	PARAMETERS	Return SMX related parameter information
7	SMCTRL	SMX mode control
8	WAKEUP	Wake up sleeping processors in safer mode
9 - (4G-1)	Undefined	Reserved

## 6.2.2.2 GETSEC[ENTERACCS]

The GETSEC[ENTERACCS] leaf enables authenticated code execution mode. The ENTERACCS leaf function performs an authenticated code module load using the chipset public key as the signature verification. ENTERACCS requires the existence of an Intel® Trusted Execution Technology capable chipset since it unlocks the chipset private configuration register space after successful authentication of the loaded module. The physical base address and size of the authenticated code module are specified as input register values in EBX and ECX, respectively.

While in the authenticated code execution mode, certain processor state properties change. For this reason, the time in which the processor operates in authenticated code execution mode should be limited to minimize impact on external system events.

Upon entry into , the previous paging context is disabled (since the authenticated code module image is specified with physical addresses and can no longer rely upon external memory-based page-table structures).

Prior to executing the GETSEC[ENTERACCS] leaf, system software must ensure the logical processor issuing GETSEC[ENTERACCS] is the boot-strap processor (BSP), as indicated by IA32\_APIC\_BASE.BSP = 1. System software must ensure other logical processors are in a suitable idle state and not marked as BSP.

The GETSEC[ENTERACCS] leaf may be used by different agents to load different authenticated code modules to perform functions related to different aspects of a measured environment, for example system software and Intel® TXT enabled BIOS may use more than one authenticated code modules.

## 6.2.2.3 GETSEC[EXITAC]

GETSEC[EXITAC] takes the processor out of . When this instruction leaf is executed, the contents of the authenticated code execution area are scrubbed and control is transferred to the non-authenticated context defined by a near pointer passed with the GETSEC[EXITAC] instruction.

The authenticated code execution area is no longer accessible after completion of GETSEC[EXITAC]. RBX (or EBX) holds the address of the near absolute indirect target to be taken.

# 6.2.2.4 GETSEC[SENTER]

The GETSEC[SENTER] leaf function is used by the initiating logical processor (ILP) to launch an MLE. GETSEC[SENTER] can be considered a superset of the ENTERACCS leaf, because it enters as part of the measured environment launch.

Measured environment startup consists of the following steps:

• the ILP rendezvous the responding logical processors (RLPs) in the platform into a controlled state (At the completion of this handshake, all the RLPs except for

the ILP initiating the measured environment launch are placed in a newly defined SENTER sleep state).

- Load and authenticate the authenticated code module required by the measured environment, and enter authenticated code execution mode.
- Verify and lock certain system configuration parameters.
- Measure the dynamic root of trust and store into the PCRs in TPM.
- Transfer control to the MLE with interrupts disabled.

Prior to executing the GETSEC[SENTER] leaf, system software must ensure the platform's TPM is ready for access and the ILP is the boot-strap processor (BSP), as indicated by IA32\_APIC\_BASE.BSP. System software must ensure other logical processors (RLPs) are in a suitable idle state and not marked as BSP.

System software launching a measurement environment is responsible for providing a proper authenticate code module address when executing GETSEC[SENTER]. The AC module responsible for the launch of a measured environment and loaded by GETSEC[SENTER] is referred to as SINIT. See *Intel® Trusted Execution Technology Measured Launched Environment Programming Guide* for additional information on system software requirements prior to executing GETSEC[SENTER].

#### 6.2.2.5 GETSEC[SEXIT]

System software exits the measured environment by executing the instruction GETSEC[SEXIT] on the ILP. This instruction rendezvous the responding logical processors in the platform for exiting from the measured environment. External events (if left masked) are unmasked and Intel® TXT-capable chipset's private configuration space is re-locked.

## 6.2.2.6 GETSEC[PARAMETERS]

The GETSEC[PARAMETERS] leaf function is used to report attributes, options and limitations of SMX operation. Software uses this leaf to identify operating limits or additional options.

The information reported by GETSEC[PARAMETERS] may require executing the leaf multiple times using EBX as an index. If the GETSEC[PARAMETERS] instruction leaf or if a specific parameter field is not available, then SMX operation should be interpreted to use the default limits of respective GETSEC leaves or parameter fields defined in the GETSEC[PARAMETERS] leaf.

## 6.2.2.7 GETSEC[SMCTRL]

The GETSEC[SMCTRL] leaf function is used for providing additional control over specific conditions associated with the SMX architecture. An input register is supported for selecting the control operation to be performed. See the specific leaf description for details on the type of control provided.

#### 6.2.2.8 GETSEC[WAKEUP]

Responding logical processors (RLPs) are placed in the SENTER sleep state after the initiating logical processor executes GETSEC[SENTER]. The ILP can wake up RLPs to join the measured environment by using GETSEC[WAKEUP]. When the RLPs in SENTER sleep state wake up, these logical processors begin execution at the entry point defined in a data structure held in system memory (pointed to by an chipset register LT.MLE.JOIN) in TXT configuration space.

#### 6.2.3 Measured Environment and SMX

This section gives a simplified view of a representative life cycle of a measured environment that is launched by a system executive using SMX leaf functions. *Intel*® *Trusted Execution Technology Measured Launched Environment Programming Guide* provides more detailed examples of using SMX and chipset resources (including chipset registers, Trusted Platform Module) to launch an MVMM.

The life cycle starts with the system executive (an OS, an OS loader, and so forth) loading the MLE and SINIT AC module into available system memory. The system executive must validate and parpare the platform for the measured launch. When the platform is properly configured, the system executive executes GETSEC[SENTER] on the initiating logical processor (ILP) to rendezvous the responding logical processors into an SENTER sleep state, the ILP then enters into using the SINIT AC module. In a multi-threaded or multi-processing environment, the system executive must ensure that other logical processors are already in an idle loop, or asleep (such as after executing HLT) before executing GETSEC[SENTER].

After the GETSEC[SENTER] rendezvous handshake is performed between all logical processors in the platform, the ILP loads the chipset authenticated code module (SINIT) and performs an authentication check. If the check passes, the processor hashes the SINIT AC module and stores the result into TPM PCR 17. It then switches execution context to the SINIT AC module. The SINIT AC module will perform a number of platfom operations, including: verifying the system configuration, protecting the system memory used by the MLE from I/O devices capable of DMA, producing a hash of the MLE, storing the hash value in TPM PCR 18, and various other operations. When SINIT completes execution, it executes the GETSEC[EXITAC] instruction and transfers control the MLE at the designated entry point.

Upon receiving control from the SINIT AC module, the MLE must establish its protection and isolation controls before enabling DMA and interrupts and transferring control to other software modules. It must also wakeup the RLPs from their SENTER sleep state using the GETSEC[WAKEUP] instruction and bring them into its protection and isolation environment.

While executing in a measured environment, the MVMM can access the Trusted Platform Module (TPM) in locality 2. The MVMM has complete access to all TPM commands and may use the TPM to report current measurement values or use the measurement values to protect information such that only when the platform config-

uration registers (PCRs) contain the same value is the information released from the TPM. This protection mechanism is known as sealing.

A measured environment shutdown is ultimately completed by executing GETSEC[SEXIT]. Prior to this step system software is responsible for scrubbing sensitive information left in the processor caches, system memory.

## 6.3 GETSEC LEAF FUNCTIONS

This section provides detailed descriptions of each leaf function of the GETSEC instruction. GETSEC is available only if CPUID.01H:ECX[Bit 6] = 1. This indicates the availability of SMX and the GETSEC instruction. Before GETSEC can be executed, SMX must be enabled by setting CR4.SMXE[Bit 14] = 1.

A GETSEC leaf can only be used if it is shown to be available as reported by the GETSEC[CAPABILITIES] function. Attempts to access a GETSEC leaf index not supported by the processor, or if CR4.SMXE is 0, results in the signaling of an undefined opcode exception.

All GETSEC leaf functions are available in protected mode, including the compatibility sub-mode of IA-32e mode and the 64-bit sub-mode of IA-32e mode. Unless otherwise noted, the behavior of all GETSEC functions and interactions related to the measured environment are independent of IA-32e mode. This also applies to the interpretation of register widths<sup>1</sup> passed as input parameters to GETSEC functions and to register results returned as output parameters.

The GETSEC functions ENTERACCS, SENTER, SEXIT, and WAKEUP require a Intel® TXT capable-chipset to be present in the platform. The GETSEC[CAPABILITIES] returned bit vector in position 0 indicates an Intel® TXT-capable chipset has been sampled present<sup>2</sup> by the processor.

The processor's operating mode also affects the execution of the following GETSEC leaf functions: SMCTRL, ENTERACCS, EXITAC, SENTER, SEXIT, and WAKEUP. These functions are only allowed in protected mode at CPL = 0. They are not allowed while in SMM in order to prevent potential intra-mode conflicts. Further execution qualifications exist to prevent potential architectural conflicts (for example: nesting of the measured environment or authenticated code execution mode). See the definitions of the GETSEC leaf functions for specific requirements.

<sup>1.</sup> This chapter uses the 64-bit notation RAX, RIP, RSP, RFLAGS, etc. for processor registers because processors that support SMX also support Intel 64 Architecture. The MVMM can be launched in IA-32e mode or outside IA-32e mode. The 64-bit notation of processor registers also refer to its 32-bit forms if SMX is used in 32-bit environment. In some places, notation such as EAX is used to refer specifically to lower 32 bits of the indicated register

<sup>2.</sup> Sampled present means that the processor sent a message to the chipset and the chipset responded that it (a) knows about the message and (b) is capable of executing SENTER. This means that the chipset CAN support Intel® TXT, and is configured and WILLING to support it.

#### SAFER MODE EXTENSIONS REFERENCE

For the purpose of performance monitor counting, the execution of GETSEC functions is counted as a single instruction with respect to retired instructions. The response by a responding logical processor (RLP) to messages associated with GETSEC[SENTER] or GTSEC[SEXIT] is transparent to the retired instruction count on the ILP.

# GETSEC[CAPABILITIES] - Report the SMX Capabilities

Opcode	Instruction	Description
0F 37	GETSEC[CAPA	Report the SMX capabilities.
(EAX = 0)	EAX = 0) BILITIES]	The capabilities index is input in EBX with the result returned in EAX.

## **Description**

The GETSEC[CAPABILITIES] function returns a bit vector of supported GETSEC leaf functions. The CAPABILITIES leaf of GETSEC is selected with EAX set to 0 at entry. EBX is used as the selector for returning the bit vector field in EAX. GETSEC[CAPABILITIES] may be executed at all privilege levels, but the CR4.SMXE bit must be set or an undefined opcode exception (#UD) is returned.

With EBX = 0 upon execution of GETSEC[CAPABILITIES], EAX returns the a bit vector representing status on the presence of a Intel® TXT-capable chipset and the first 30 available GETSEC leaf functions. The format of the returned bit vector is provided in Table 6-3.

If bit 0 is set to 1, then an Intel® TXT-capable chipset has been sampled present by the processor. If bits in the range of 1-30 are set, then the corresponding GETSEC leaf function is available. If the bit value at a given bit index is 0, then the GETSEC leaf function corresponding to that index is unsupported and attempted execution results in a #UD.

Bit 31 of EAX indicates if further leaf indexes are supported. If the Extended Leafs bit 31 is set, then additional leaf functions are accessed by repeating GETSEC[CAPABILITIES] with EBX incremented by one. When the most significant bit of EAX is not set, then additional GETSEC leaf functions are not supported; indexing EBX to a higher value results in EAX returning zero.

Table 6-3. Getsec Capability Result Encoding (EBX = 0)

Field	Bit position	Description
Chipset Present	0	Intel® TXT-capable chipset is present
Undefined	1	Reserved
ENTERACCS	2	GETSEC[ENTERACCS] is available
EXITAC	3	GETSEC[EXITAC] is available
SENTER	4	GETSEC[SENTER] is available
SEXIT	5	GETSEC[SEXIT] is available

Table 6-3. Getsec Capability Result Encoding (EBX = 0) (Contd.)

Field	Bit position	Description
PARAMETERS	6	GETSEC[PARAMETERS] is available
SMCTRL	7	GETSEC[SMCTRL] is available
WAKEUP	8	GETSEC[WAKEUP] is available
Undefined	30:9	Reserved
Extended Leafs	31	Reserved for extended information reporting of GETSEC capabilities

## **Operation**

```
IF (CR4.SMXE=0)
   THEN #UD;
ELSIF (in VMX non-root operation)
   THEN VM Exit (reason="GETSEC instruction");
IF (EBX=0) THEN
        BitVector\leftarrow 0;
        IF (TXT chipset present)
              BitVector[Chipset present] \leftarrow 1;
        IF (ENTERACCS Available)
              THEN BitVector[ENTERACCS] \leftarrow 1;
        IF (EXITAC Available)
              THEN BitVector[EXITAC] \leftarrow 1;
        IF (SENTER Available)
              THEN BitVector[SENTER] \leftarrow 1;
        IF (SEXIT Available)
              THEN BitVector[SEXIT] \leftarrow 1;
        IF (PARAMETERS Available)
              THEN BitVector[PARAMETERS] \leftarrow 1;
        IF (SMCTRL Available)
              THEN BitVector[SMCTRL]\leftarrow 1;
        IF (WAKEUP Available)
             THEN BitVector[WAKEUP]\leftarrow 1;
        EAX← BitVector;
ELSE
   EAX \leftarrow 0;
END;;
```

## **Flags Affected**

None

### **Use of Prefixes**

LOCK Causes #UD

REP\* Cause #UD (includes REPNE/REPNZ and REP/REPE/REPZ)

Operand size Causes #UD

Segment overrides Ignored
Address size Ignored
REX Ignored

# **Protected Mode Exceptions**

#UD IF CR4.SMXE = 0.

## **Real-Address Mode Exceptions**

#UD IF CR4.SMXE = 0.

## Virtual-8086 Mode Exceptions

#UD IF CR4.SMXE = 0.

## **Compatibility Mode Exceptions**

#UD IF CR4.SMXE = 0.

# **64-Bit Mode Exceptions**

#UD IF CR4.SMXE = 0.

### **VM-exit Condition**

Reason (GETSEC) IF in VMX non-root operation.

# **GETSEC[ENTERACCS] - Execute Authenticated Chipset Code**

Opcode	Instruction	Description
0F 37	GETSEC[ENTERACCS]	Enter authenticated code execution mode.
(EAX = 2)		EBX holds the authenticated code module physical base address. ECX holds the authenticated code module size (bytes).

# **Description**

The GETSEC[ENTERACCS] function loads, authenticates and executes an authenticated code module using an Intel® TXT platform chipset's public key. The ENTERACCS leaf of GETSEC is selected with EAX set to 2 at entry.

There are certain restrictions enforced by the processor for the execution of the GETSEC[ENTERACCS] instruction:

- Execution is not allowed unless the processor is in protected mode or IA-32e mode with CPL = 0 and EFLAGS.VM = 0.
- Processor cache must be available and not disabled, that is, CR0.CD and CR0.NW bits must be 0.
- For processor packages containing more than one logical processor, CR0.CD is checked to ensure consistency between enabled logical processors.
- For enforcing consistency of operation with numeric exception reporting using Interrupt 16, CR0.NE must be set.
- An Intel TXT-capable chipset must be present as communicated to the processor by sampling of the power-on configuration capability field after reset.
- The processor can not already be in authenticated code execution mode as launched by a previous GETSEC[ENTERACCS] or GETSEC[SENTER] instruction without a subsequent exiting using GETSEC[EXITAC]).
- To avoid potential operability conflicts between modes, the processor is not allowed to execute this instruction if it currently is in SMM or VMX operation.
- To insure consistent handling of SIPI messages, the processor executing the GETSEC[ENTERACCS] instruction must also be designated the BSP (boot-strap processor) as defined by A32\_APIC\_BASE.BSP (Bit 8).

Failure to conform to the above conditions results in the processor signaling a general protection exception.

Prior to execution of the ENTERACCS leaf, other logical processors, i.e. RLPs, in the platform must be:

- idle in a wait-for-SIPI state (as initiated by an INIT assertion or through reset for non-BSP designated processors), or
- in the SENTER sleep state as initiated by a GETSEC[SENTER] from the initiating logical processor (ILP).

If other logical processor(s) in the same package are not idle in one of these states, execution of ENTERACCS signals a general protection exception. The same requirement and action applies if the other logical processor(s) of the same package do not have CR0.CD = 0.

A successful execution of ENTERACCS results in the ILP entering an authenticated code execution mode. Prior to reaching this point, the processor performs several checks. These include:

- Establish and check the location and size of the specified authenticated code module to be executed by the processor.
- Inhibit the ILP's response to the external events: INIT, A20M, NMI and SMI.
- Broadcast a message to enable protection of memory and I/O from other processor agents.
- Load the designated code module into an authenticated code execution area.
- Isolate the contents of the authenticated code execution area from further state modification by external agents.
- Authenticate the authenticated code module.
- Initialize the initiating logical processor state based on information contained in the authenticated code module header.
- Unlock the Intel® TXT-capable chipset private configuration space and TPM locality 3 space.
- Begin execution in the authenticated code module at the defined entry point.

The GETSEC[ENTERACCS] function requires two additional input parameters in the general purpose registers EBX and ECX. EBX holds the authenticated code (AC) module physical base address (the AC module must reside below 4 GBytes in physical address space) and ECX holds the AC module size (in bytes). The physical base address and size are used to retrieve the code module from system memory and load it into the internal authenticated code execution area. The base physical address is checked to verify it is on a modulo-4096 byte boundary. The size is verified to be a multiple of 64, that it does not exceed the internal authenticated code execution area capacity (as reported by GETSEC[CAPABILITIES]), and that the top address of the AC module does not exceed 32 bits. An error condition results in an abort of the authenticated code execution launch and the signaling of a general protection exception.

As an integrity check for proper processor hardware operation, execution of GETSEC[ENTERACCS] will also check the contents of all the machine check status registers (as reported by the MSRs IA32\_MCi\_STATUS) for any valid uncorrectable error condition. In addition, the global machine check status register IA32\_MCG\_STATUS MCIP bit must be cleared and the IERR processor package pin (or its equivalent) must not be asserted, indicating that no machine check exception processing is currently in progress. These checks are performed prior to initiating the load of the authenticated code module. Any outstanding valid uncorrectable machine check error condition present in these status registers at this point will result in the processor signaling a general protection violation.

The ILP masks the response to the assertion of the external signals INIT#, A20M, NMI#, and SMI#. This masking remains active until optionally unmasked by GETSEC[EXITAC] (this defined unmasking behavior assumes GETSEC[ENTERACCS] was not executed by a prior GETSEC[SENTER]). The purpose of this masking control is to prevent exposure to existing external event handlers that may not be under the control of the authenticated code module..

The ILP sets an internal flag to indicate it has entered authenticated code execution mode. The state of the A20M pin is likewise masked and forced internally to a deasserted state so that any external assertion is not recognized during authenticated code execution mode.

To prevent other (logical) processors from interfering with the ILP operating in authenticated code execution mode, memory (excluding implicit write-back transactions) access and I/O originating from other processor agents are blocked. This protection starts when the ILP enters into authenticated code execution mode. Only memory and I/O transactions initiated from the ILP are allowed to proceed. Exiting authenticated code execution mode is done by executing GETSEC[EXITAC]. The protection of memory and I/O activities remains in effect until the ILP executes GETSEC[EXITAC].

Prior to launching the authenticated execution module using GETSEC[ENTERACCS] or GETSEC[SENTER], the processor's MTRRs (Memory Type Range Registers) must first be initialized to map out the authenticated RAM addresses as WB (writeback). Failure to do so may affect the ability for the processor to maintain isolation of the loaded authenticated code module. If the processor detected this requirement is not met, it will signal an Intel® TXT reset condition with an error code during the loading of the authenticated code module.

While physical addresses within the load module must be mapped as WB, the memory type for locations outside of the module boundaries must be mapped to one of the supported memory types as returned by GETSEC[PARAMETERS] (or UC as default).

To conform to the minimum granularity of MTRR MSRs for specifying the memory type, authenticated code RAM (ACRAM) is allocated to the processor in 4096 byte granular blocks. If an AC module size as specified in ECX is not a multiple of 4096 then the processor will allocate up to the next 4096 byte boundary for mapping as ACRAM with indeterminate data. This pad area will not be visible to the authenticated code module as external memory nor can it depend on the value of the data used to fill the pad area.

At the successful completion of GETSEC[ENTERACCS], the architectural state of the processor is partially initialized from contents held in the header of the authenticated code module. The processor GDTR, CS, and DS selectors are initialized from fields within the authenticated code module. Since the authenticated code module must be relocatable, all address references must be relative to the authenticated code module base address in EBX. The processor GDTR base value is initialized to the AC module header field GDTBasePtr + module base address held in EBX and the GDTR limit is set to the value in the GDTLimit field. The CS selector is initialized to the AC module header SeqSel field, while the DS selector is initialized to CS + 8. The segment

descriptor fields are implicitly initialized to BASE=0, LIMIT=FFFFFh, G=1, D=1, P=1, S=1, read/write access for DS, and execute/read access for CS. The processor begins the authenticated code module execution with the EIP set to the AC module header EntryPoint field + module base address (EBX). The AC module based fields used for initializing the processor state are checked for consistency and any failure results in a shutdown condition.

A summary of the register state initialization after successful completion of GETSEC[ENTERACCS] is given for the processor in Table 6-4. The paging is disabled upon entry into authenticated code execution mode. The authenticated code module is loaded and initially executed using physical addresses. It is up to the system software after execution of GETSEC[ENTERACCS] to establish a new (or restore its previous) paging environment with an appropriate mapping to meet new protection requirements. EBP is initialized to the authenticated code module base physical address for initial execution in the authenticated environment. As a result, the authenticated code can reference EBP for relative address based references, given that the authenticated code module must be position independent.

Table 6-4. Register State Initialization after GETSEC[ENTERACCS]

Register State	Initialization Status	Comment
CR0	PG←0, AM←0, WP←0: Others unchanged	Paging, Alignment Check, Write- protection are disabled
CR4	MCE←0: Others unchanged	Machine Check Exceptions Disabled
EFLAGS	00000002H	
IA32_EFER	ОН	IA-32e mode disabled
EIP	AC.base + EntryPoint	AC.base is in EBX as input to GETSEC[ENTERACCS]
[E R]BX	Pre-ENTERACCS state: Next [E R]IP prior to GETSEC[ENTERACCS]	Carry forward 64-bit processor state across GETSEC[ENTERACCS]
ECX	Pre-ENTERACCS state: [31:16]=GDTR.limit; [15:0]=CS.sel	Carry forward processor state across GETSEC[ENTERACCS]
[E R]DX	Pre-ENTERACCS state: GDTR base	Carry forward 64-bit processor state across GETSEC[ENTERACCS]
EBP	AC.base	
CS	Sel=[SegSel], base=0, limit=FFFFFh, G=1, D=1, AR=9BH	
DS	Sel=[SegSel] +8, base=0, limit=FFFFFh, G=1, D=1, AR=93H	

Table 6-4. Register State Initialization after GETSEC[ENTERACCS] (Contd.)
---

Register State	Initialization Status	Comment
GDTR	Base= AC.base (EBX) + [GDTBasePtr], Limit=[GDTLimit]	
DR7	00000400H	
IA32_DEBUGCTL	ОН	
IA32_MISC_ENA BLES	see Table 6-5 for example	The number of initialized fields may change due.to processor implementation

The segmentation related processor state that has not been initialized by GETSEC[ENTERACCS] requires appropriate initialization before use. Since a new GDT context has been established, the previous state of the segment selector values held in ES, SS, FS, GS, TR, and LDTR might not be valid.

The MSR IA32\_EFER is also unconditionally cleared as part of the processor state initialized by ENTERACCS. Since paging is disabled upon entering authenticated code execution mode, a new paging environment will have to be reestablished in order to establish IA-32e mode while operating in authenticated code execution mode.

Debug exception and trap related signaling is also disabled as part of GETSEC[ENTERACCS]. This is achieved by resetting DR7, TF in EFLAGs, and the MSR IA32\_DEBUGCTL. These debug functions are free to be re-enabled once supporting exception handler(s), descriptor tables, and debug registers have been properly initialized following entry into authenticated code execution mode. Also, any pending single-step trap condition will have been cleared upon entry into this mode.

The IA32\_MISC\_ENABLES MSR is initialized upon entry into authenticated execution mode. Certain bits of this MSR are preserved because preserving these bits may be important to maintain previously established platform settings (See the footnote for Table 6-5.). The remaining bits are cleared for the purpose of establishing a more consistent environment for the execution of authenticated code modules. One of the impacts of initializing this MSR is any previous condition established by the MONITOR instruction will be cleared.

To support the possible return to the processor architectural state prior to execution of GETSEC[ENTERACCS], certain critical processor state is captured and stored in the general- purpose registers at instruction completion. [E|R]BX holds effective address ([E|R]IP) of the instruction that would execute next after GETSEC[ENTERACCS], ECX[15:0] holds the CS selector value, ECX[31:16] holds the GDTR limit field, and [E|R]DX holds the GDTR base field. The subsequent authenticated code can preserve the contents of these registers so that this state can be manually restored if needed, prior to exiting authenticated code execution mode with GETSEC[EXITAC]. For the processor state after exiting authenticated code execution mode, see the description of GETSEC[SEXIT].

Table 6-5. IA32\_MISC\_ENALBES MSR Initialization by ENTERACCS and SENTER

Field	Bit position	Description
Fast strings enable	0	Clear to 0
FOPCODE compatibility mode enable	2	Clear to 0
Thermal monitor enable	3	Set to 1 if other thermal monitor capability is not enabled. <sup>2</sup>
Split-lock disable	4	Clear to 0
Bus lock on cache line splits disable	8	Clear to 0
Hardware prefetch disable	9	Clear to 0
GV1/2 legacy enable	15	Clear to 0
MONITOR/MWAIT s/m enable	18	Clear to 0
Adjacent sector prefetch disable	19	Clear to 0

#### **NOTES:**

- 1. The number of IA32\_MISC\_ENABLES fields that are initialized may vary due to processor implementations.
- 2. ENTERACCS (and SENTER) initialize the state of processor thermal throttling such that at least a minimum level is enabled. If thermal throttling is already enabled when executing one of these GETSEC leaves, then no change in the thermal throttling control settings will occur. If thermal throttling is disabled, then it will be enabled via setting of the thermal throttle control bit 3 as a result of executing these GETSEC leaves.

The IDTR will also require reloading with a new IDT context after entering authenticated code execution mode, before any exceptions or the external interrupts INTR and NMI can be handled. Since external interrupts are re-enabled at the completion of authenticated code execution mode (as terminated with EXITAC), it is recommended that a new IDT context be established before this point. Until such a new IDT context is established, the programmer must take care in not executing an INT n instruction or any other operation that would result in an exception or trap signaling.

Prior to completion of the GETSEC[ENTERACCS] instruction and after successful authentication of the AC module, the private configuration space of the Intel TXT chipset is unlocked. The authenticated code module alone can gain access to this normally restricted chipset state for the purpose of securing the platform.

Once the authenticated code module is launched at the completion of GETSEC[ENTERACCS], it is free to enable interrupts by setting EFLAGS.IF and enable NMI by execution of IRET. This presumes that it has re-established interrupt handling support through initialization of the IDT, GDT, and corresponding interrupt handling code.

## Operation in a Uni-Processor Platform

```
(* The state of the internal flag ACMODEFLAG persists across instruction boundary *)
IF (CR4.SMXE=0)
   THEN #UD;
ELSIF (in VMX non-root operation)
   THEN VM Exit (reason="GETSEC instruction");
ELSIF (GETSEC leaf unsupported)
   THEN #UD:
ELSIF ((in VMX operation) or
   (CRO.PE=0) or (CRO.CD=1) or (CRO.NW=1) or (CRO.NE=0) or
   (CPL>0) or (EFLAGS.VM=1) or
   (IA32_APIC_BASE.BSP=0) or
   (TXT chipset not present) or
   (ACMODEFLAG=1) or (IN_SMM=1))
       THEN #GP(0);
FOR I = 0 to IA32 MCG CAP.COUNT-1 DO
   IF (IA32_MC[I]_STATUS← uncorrectable error)
       THEN #GP(0);
OD:
IF (IA32 MCG STATUS.MCIP=1) or (IERR pin is asserted)
   THEN #GP(0);
ACBASE← EBX;
ACSIZE← ECX:
IF (((ACBASE MOD 4096)!= 0) or ((ACSIZE MOD 64)!= 0) or (ACSIZE < minimum module size) OR
(ACSIZE > authenticated RAM capacity)) or ((ACBASE+ACSIZE) > (2^32 -1)))
   THEN #GP(0);
IF (secondary thread(s) CRO.CD = 1) or ((secondary thread(s) NOT(wait-for-SIPI)) and
   (secondary thread(s) not in SENTER sleep state)
   THEN #GP(0):
Mask SMI, INIT, A20M, and NMI external pin events;
IA32_MISC_ENABLE← (IA32_MISC_ENABLE & MASK_CONST*)
(* The hexadecimal value of MASK CONST may vary due to processor implementations *)
A20M \leftarrow 0;
IA32 DEBUGCTL← 0;
Invalidate processor TLB(s);
Drain Outgoing Transactions;
ACMODEFLAG← 1;
SignalTXTMessage(ProcessorHold);
```

```
Load the internal ACRAM based on the AC module size:
(* Ensure that all ACRAM loads hit Write Back memory space *)
IF (ACRAM memory type != WB)
   THEN TXT-SHUTDOWN(#BadACMMType);
IF (AC module header version isnot supported) OR (ACRAM[ModuleType] <> 2)
   THEN TXT-SHUTDOWN(#UnsupportedACM);
(* Authenticate the AC Module and shutdown with an error if it fails *)
KEY← GETKEY(ACRAM, ACBASE);
KEYHASH \leftarrow HASH(KEY);
CSKEYHASH← READ(TXT.PUBLIC.KEY);
IF (KEYHASH <> CSKEYHASH)
   THEN TXT-SHUTDOWN(#AuthenticateFail);
SIGNATURE← DECRYPT(ACRAM, ACBASE, KEY);
(* The value of SIGNATURE_LEN_CONST is implementation-specific*)
FOR I=0 to SIGNATURE_LEN_CONST - 1 DO
   ACRAM[SCRATCH.I] \leftarrow SIGNATURE[I];
COMPUTEDSIGNATURE← HASH(ACRAM, ACBASE, ACSIZE);
FOR I=0 to SIGNATURE_LEN_CONST - 1 DO
   ACRAM[SCRATCH.SIGNATURE\_LEN\_CONST+I] \leftarrow COMPUTEDSIGNATURE[I];
IF (SIGNATURE<>COMPUTEDSIGNATURE)
   THEN TXT-SHUTDOWN(#AuthenticateFail);
ACMCONTROL← ACRAM[CodeControl];
IF ((ACMCONTROL.0 = 0) and (ACMCONTROL.1 = 1) and (snoop hit to modified line detected on
ACRAM load))
   THEN TXT-SHUTDOWN(#UnexpectedHITM);
IF (ACMCONTROL reserved bits are set)
   THEN TXT-SHUTDOWN(#BadACMFormat);
IF ((ACRAM[GDTBasePtr] < (ACRAM[HeaderLen] * 4 + Scratch_size)) OR</pre>
   ((ACRAM[GDTBasePtr] + ACRAM[GDTLimit]) >= ACSIZE))
   THEN TXT-SHUTDOWN(#BadACMFormat);
IF ((ACMCONTROL.0 = 1) and (ACMCONTROL.1 = 1) and (snoop hit to modified line detected on
ACRAM load))
   THEN ACEntryPoint← ACBASE+ACRAM[ErrorEntryPoint];
ELSE
   ACEntryPoint← ACBASE+ACRAM[EntryPoint];
IF ((ACEntryPoint >= ACSIZE) OR (ACEntryPoint < (ACRAM[HeaderLen] * 4 + Scratch_size)))THEN
TXT-SHUTDOWN(#BadACMFormat);
IF (ACRAM[GDTLimit] & FFFF0000h)
   THEN TXT-SHUTDOWN(#BadACMFormat);
IF ((ACRAM[SegSel] > (ACRAM[GDTLimit] - 15)) OR (ACRAM[SegSel] < 8))</pre>
   THEN TXT-SHUTDOWN(#BadACMFormat);
IF ((ACRAM[SegSel].TI=1) OR (ACRAM[SegSel].RPL!=0))
   THEN TXT-SHUTDOWN(#BadACMFormat);
CR0.[PG.AM.WP] \leftarrow 0;
```

#### SAFER MODE EXTENSIONS REFERENCE

```
CR4.MCE \leftarrow 0:
EFLAGS← 00000002h;
IA32_EFER← 0h;
[E|R]BX← [E|R]IP of the instruction after GETSEC[ENTERACCS];
ECX← Pre-GETSEC[ENTERACCS] GDT.limit:CS.sel;
[E|R]DX← Pre-GETSEC[ENTERACCS] GDT.base;
EBP← ACBASE;
GDTR.BASE← ACBASE+ACRAM[GDTBasePtr];
GDTR.LIMIT← ACRAM[GDTLimit];
CS.SEL← ACRAM[SeqSel];
CS.BASE \leftarrow 0;
CS.LIMIT← FFFFFh;
CS.G \leftarrow 1;
CS.D← 1:
CS.AR← 9Bh;
DS.SEL← ACRAM[SeqSel]+8;
DS.BASE\leftarrow 0;
DS.LIMIT← FFFFFh;
DS.G← 1:
DS.D← 1;
DS.AR← 93h;
DR7← 00000400h;
IA32_DEBUGCTL← 0;
DR6.BS\leftarrow 0;
SignalTXTMsg(OpenPrivate);
SignalTXTMsg(OpenLocality3);
EIP← ACEntryPoint;
END:
```

### Flags Affected

All flags are cleared.

### **Use of Prefixes**

LOCK Causes #UD

REP\* Cause #UD (includes REPNE/REPNZ and REP/REPE/REPZ)

Operand size Causes #UD
Segment overrides Ignored
Address size Ignored
REX Ignored

### **Protected Mode Exceptions**

#UD If CR4.SMXE = 0.

If GETSEC[ENTERACCS] is not reported as supported by

GETSEC[CAPABILITIES].

#GP(0) If CR0.CD = 1 or CR0.NW = 1 or CR0.NE = 0 or CR0.PE = 0 or

CPL > 0 or EFLAGS.VM = 1.

If a Intel® TXT-capable chipset is not present.

If in VMX root operation.

If the initiating processor is not designated as the bootstrap

processor via the MSR bit IA32\_APIC\_BASE.BSP.

If the processor is already in authenticated code execution

mode.

If the processor is in SMM.

If a valid uncorrectable machine check error is logged in

IA32\_MC[I]\_STATUS.

If the authenticated code base is not on a 4096 byte boundary.

If the authenticated code size > processor internal authenti-

cated code area capacity.

If the authenticated code size is not modulo 64.

If other enabled logical processor(s) of the same package

CR0.CD = 1.

If other enabled logical processor(s) of the same package are

not in the wait-for-SIPI or SENTER sleep state.

## **Real-Address Mode Exceptions**

#UD If CR4.SMXE = 0.

If GETSEC[ENTERACCS] is not reported as supported by

GETSEC[CAPABILITIES].

#GP(0) GETSEC[ENTERACCS] is not recognized in real-address mode.

### Virtual-8086 Mode Exceptions

#UD If CR4.SMXE = 0.

If GETSEC[ENTERACCS] is not reported as supported by

GETSEC[CAPABILITIES].

#GP(0) GETSEC[ENTERACCS] is not recognized in virtual-8086 mode.

## **Compatibility Mode Exceptions**

All protected mode exceptions apply.

#GP IF AC code module does not reside in physical address below

2^32 -1.

# **64-Bit Mode Exceptions**

All protected mode exceptions apply.

#GP IF AC code module does not reside in physical address below

2^32 -1.

## **VM-exit Condition**

Reason (GETSEC) IF in VMX non-root operation.

# GETSEC[EXITAC]—Exit Authenticated Code Execution Mode

Opcode	Instruction	Description
0F 37	GETSEC[EXITA	Exit authenticated code execution mode.
(EAX=3)	C]	RBX holds the Near Absolute Indirect jump target and EDX hold the exit parameter flags

## **Description**

The GETSEC[EXITAC] leaf function exits the ILP out of authenticated code execution mode established by GETSEC[ENTERACCS] or GETSEC[SENTER]. The EXITAC leaf of GETSEC is selected with EAX set to 3 at entry. EBX (or RBX, if in 64-bit mode) holds the near jump target offset for where the processor execution resumes upon exiting authenticated code execution mode. EDX contains additional parameter control information. Currently only an input value of 0 in EDX is supported. All other EDX settings are considered reserved and result in a general protection violation.

GETSEC[EXITAC] can only be executed if the processor is in protected mode with CPL = 0 and EFLAGS.VM = 0. The processor must also be in authenticated code execution mode. To avoid potential operability conflicts between modes, the processor is not allowed to execute this instruction if it is in SMM or in VMX operation. A violation of these conditions results in a general protection violation.

Upon completion of the GETSEC[EXITAC] operation, the processor unmasks responses to external event signals INIT#, NMI#, and SMI#. This unmasking is performed conditionally, based on whether the authenticated code execution mode was entered via execution of GETSEC[SENTER] or GETSEC[ENTERACCS]. If the processor is in authenticated code execution mode due to the execution of GETSEC[SENTER], then these external event signals will remain masked. In this case, A20M is kept disabled in the measured environment until the measured environment executes GETSEC[SEXIT]. INIT# is unconditionally unmasked by EXITAC. Note that any events that are pending, but have been blocked while in authenticated code execution mode, will be recognized at the completion of the GETSEC[EXITAC] instruction if the pin event is unmasked.

The intent of providing the ability to optionally leave the pin events SMI#, and NMI# masked is to support the completion of a measured environment bring-up that makes use of VMX. In this envisioned security usage scenario, these events will remain masked until an appropriate virtual machine has been established in order to field servicing of these events in a safer manner. Details on when and how events are masked and unmasked in VMX operation are described in *Intel*® *64* and *IA-32* Architectures Software Developer's Manual, Volume 3B. It should be cautioned that if no VMX environment is to be activated following GETSEC[EXITAC], that these events will remain masked until the measured environment is exited with GETSEC[SEXIT]. If this is not desired then the GETSEC function SMCTRL(0) can be used for unmasking SMI# in this context. NMI# can be correspondingly unmasked by execution of IRET.

A successful exit of the authenticated code execution mode requires the ILP to perform additional steps as outlined below:

- Invalidate the contents of the internal authenticated code execution area.
- Invalidate processor TLBs.
- Clear the internal processor AC Mode indicator flag.
- Re-lock the TPM locality 3 space.
- Unlock the Intel® TXT-capable chipset memory and I/O protections to allow memory and I/O activity by other processor agents.
- Perform a near absolute indirect jump to the designated instruction location.

The content of the authenticated code execution area is invalidated by hardware in order to protect it from further use or visibility. This internal processor storage area can no longer be used or relied upon after GETSEC[EXITAC]. Data structures need to be re-established outside of the authenticated code execution area if they are to be referenced after EXITAC. Since addressed memory content formerly mapped to the authenticated code execution area may no longer be coherent with external system memory after EXITAC, processor TLBs in support of linear to physical address translation are also invalidated.

Upon completion of GETSEC[EXITAC] a near absolute indirect transfer is performed with EIP loaded with the contents of EBX (based on the current operating mode size). In 64-bit mode, all 64 bits of RBX are loaded into RIP if REX.W precedes GETSEC[EXITAC]. Otherwise RBX is treated as 32 bits even while in 64-bit mode. Conventional CS limit checking is performed as part of this control transfer. Any exception conditions generated as part of this control transfer will be directed to the existing IDT; thus it is recommended that an IDTR should also be established prior to execution of the EXITAC function if there is a need for fault handling. In addition, any segmentation related (and paging) data structures to be used after EXITAC should be re-established or validated by the authenticated code prior to EXITAC.

In addition, any segmentation related (and paging) data structures to be used after EXITAC need to be re-established and mapped outside of the authenticated RAM designated area by the authenticated code prior to EXITAC. Any data structure held within the authenticated RAM allocated area will no longer be accessible after completion by EXITAC.

### **Operation**

```
(* The state of the internal flag ACMODEFLAG and SENTERFLAG persist across instruction
boundary *)
IF (CR4.SMXE=0)
    THEN #UD;
ELSIF ( in VMX non-root operation)
    THEN VM Exit (reason="GETSEC instruction");
ELSIF (GETSEC leaf unsupported)
    THEN #UD;
ELSIF ((in VMX operation) or ( (in 64-bit mode) and ( RBX is non-canonical) )
```

(CR0.PE=0) or (CPL>0) or (EFLAGS.VM=1) or (ACMODEFLAG=0) or (IN\_SMM=1)) or (EDX != 0)) THEN #GP(0); IF (OperandSize = 32) THEN tempEIP← EBX; ELSIF (OperandSize = 64) THEN tempEIP← RBX; ELSE tempEIP← EBX AND 0000FFFFH; IF (tempEIP > code segment limit) THEN #GP(0); Invalidate ACRAM contents: Invalidate processor TLB(s); Drain outgoing messages; SignalTXTMsg(CloseLocality3); SignalTXTMsg(LockSMRAM); SignalTXTMsg(ProcessorRelease); Unmask INIT; IF (SENTERFLAG=0) THEN Unmask SMI, INIT, NMI, and A20M pin event;  $ACMODEFLAG \leftarrow 0$ : EIP← tempEIP; END:

## Flags Affected

None.

#### **Use of Prefixes**

LOCK Causes #UD

REP\* Cause #UD (includes REPNE/REPNZ and REP/REPE/REPZ)

Operand size Causes #UD
Segment overrides Ignored
Address size Ignored

REX.W Sets 64-bit mode Operand size attribute

### **Protected Mode Exceptions**

#UD If CR4.SMXE = 0.

If GETSEC[EXITAC] is not reported as supported by

GETSEC[CAPABILITIES].

#GP(0) If CR0.PE = 0 or CPL>0 or EFLAGS.VM =1.

If in VMX root operation.

### SAFER MODE EXTENSIONS REFERENCE

If the processor is not currently in authenticated code execution

mode.

If the processor is in SMM.

If any reserved bit position is set in the EDX parameter register.

## **Real-Address Mode Exceptions**

#UD If CR4.SMXE = 0.

If GETSEC[EXITAC] is not reported as supported by

GETSEC[CAPABILITIES].

#GP(0) GETSEC[EXITAC] is not recognized in real-address mode.

## Virtual-8086 Mode Exceptions

#UD If CR4.SMXE = 0.

If GETSEC[EXITAC] is not reported as supported by

GETSEC[CAPABILITIES].

#GP(0) GETSEC[EXITAC] is not recognized in virtual-8086 mode.

## **Compatibility Mode Exceptions**

All protected mode exceptions apply.

## **64-Bit Mode Exceptions**

All protected mode exceptions apply.

#GP(0) If the target address in RBX is not in a canonical form.

### **VM-Exit Condition**

Reason (GETSEC) IF in VMX non-root operation.

# GETSEC[SENTER]—Enter a Measured Environment

Opcode	Instruction	Description
0F 37	GETSEC[SENTER]	Launch a measured environment
(EAX=4)		EBX holds the SINIT authenticated code module physical base address.
		ECX holds the SINIT authenticated code module size (bytes).
		EDX controls the level of functionality supported by the measured environment launch.

## **Description**

The GETSEC[SENTER] instruction initiates the launch of a measured environment and places the initiating logical processor (ILP) into the authenticated code execution mode. The SENTER leaf of GETSEC is selected with EAX set to 4 at execution. The physical base address of the AC module to be loaded and authenticated is specified in EBX. The size of the module in bytes is specified in ECX. EDX controls the level of functionality supported by the measured environment launch. To enable the full functionality of the protected environment launch, EDX must be initialized to zero.

The authenticated code base address and size parameters (in bytes) are passed to the GETSEC[SENTER] instruction using EBX and ECX respectively. The ILP evaluates the contents of these registers according to the rules for the AC module address in GETSEC[ENTERACCS]. AC module execution follows the same rules, as set by GETSEC[ENTERACCS].

The launching software must ensure that the TPM.ACCESS\_0.activeLocality bit is clear before executing the GETSEC[SENTER] instruction.

There are restrictions enforced by the processor for execution of the GETSEC[SENTER] instruction:

- Execution is not allowed unless the processor is in protected mode or IA-32e mode with CPL = 0 and EFLAGS.VM = 0.
- Processor cache must be available and not disabled using the CR0.CD and NW bits.
- For enforcing consistency of operation with numeric exception reporting using Interrupt 16, CR0.NE must be set.
- An Intel TXT-capable chipset must be present as communicated to the processor by sampling of the power-on configuration capability field after reset.
- The processor can not be in authenticated code execution mode or already in a measured environment (as launched by a previous GETSEC[ENTERACCS] or GETSEC[SENTER] instruction).
- To avoid potential operability conflicts between modes, the processor is not allowed to execute this instruction if it currently is in SMM or VMX operation.

#### SAFER MODE EXTENSIONS REFERENCE

- To insure consistent handling of SIPI messages, the processor executing the GETSEC[SENTER] instruction must also be designated the BSP (boot-strap processor) as defined by A32\_APIC\_BASE.BSP (Bit 8).
- EDX must be initialized to a setting supportable by the processor. Unless enumeration by the GETSEC[PARAMETERS] leaf reports otherwise, only a value of zero is supported.

Failure to abide by the above conditions results in the processor signaling a general protection violation.

This instruction leaf starts the launch of a measured environment by initiating a rendezvous sequence for all logical processors in the platform. The rendezvous sequence involves the initiating logical processor sending a message (by executing GETSEC[SENTER]) and other responding logical processors (RLPs) acknowledging the message, thus synchronizing the RLP(s) with the ILP.

In response to a message signaling the completion of rendezvous, RLPs clear the bootstrap processor indicator flag (IA32\_APIC\_BASE.BSP) and enter an SENTER sleep state. In this sleep state, RLPs enter an idle processor condition while waiting to be activated after a measured environment has been established by the system executive. RLPs in the SENTER sleep state can only be activated by the GETSEC leaf function WAKEUP in a measured environment.

A successful launch of the measured environment results in the initiating logical processor entering the authenticated code execution mode. Prior to reaching this point, the ILP performs the following steps internally:

- Inhibit processor response to the external events: INIT, A20M, NMI, and SMI.
- Establish and check the location and size of the authenticated code module to be executed by the ILP.
- Check for the existence of an Intel® TXT-capable chipset.
- Verify the current power management configuration is acceptable.
- Broadcast a message to enable protection of memory and I/O from activities from other processor agents.
- Load the designated AC module into authenticated code execution area.
- Isolate the content of authenticated code execution area from further state modification by external agents.
- Authenticate the AC module.
- Updated the Trusted Platform Module (TPM) with the authenticated code module's hash.
- Initialize processor state based on the authenticated code module header information.
- Unlock the Intel® TXT-capable chipset private configuration register space and TPM locality 3 space.
- Begin execution in the authenticated code module at the defined entry point.

As an integrity check for proper processor hardware operation, execution of GETSEC[SENTER] will also check the contents of all the machine check status registers (as reported by the MSRs IA32\_MCi\_STATUS) for any valid uncorrectable error condition. In addition, the global machine check status register IA32\_MCG\_STATUS MCIP bit must be cleared and the IERR processor package pin (or its equivalent) must be not asserted, indicating that no machine check exception processing is currently in-progress. These checks are performed twice: once by the ILP prior to the broadcast of the rendezvous message to RLPs, and later in response to RLPs acknowledging the rendezvous message. Any outstanding valid uncorrectable machine check error condition present in the machine check status registers at the first check point will result in the ILP signaling a general protection violation. If an outstanding valid uncorrectable machine check error condition is present at the second check point, then this will result in the corresponding logical processor signaling the more severe TXT-shutdown condition with an error code of 12.

Before loading and authentication of the target code module is performed, the processor also checks that the current voltage and bus ratio encodings correspond to known good values supportable by the processor. The MSR IA32\_PERF\_STATUS values are compared against either the processor supported maximum operating target setting, system reset setting, or the thermal monitor operating target. If the current settings do not meet any of these criteria then the SENTER function will attempt to change the voltage and bus ratio select controls in a processor-specific manner. This adjustment may be to the thermal monitor, minimum (if different), or maximum operating target depending on the processor.

This implies that some thermal operating target parameters configured by BIOS may be overridden by SENTER. The measured environment software may need to take responsibility for restoring such settings that are deemed to be safe, but not necessarily recognized by SENTER. If an adjustment is not possible when an out of range setting is discovered, then the processor will abort the measured launch. This may be the case for chipset controlled settings of these values or if the controllability is not enabled on the processor. In this case it is the responsibility of the external software to program the chipset voltage ID and/or bus ratio select settings to known good values recognized by the processor, prior to executing SENTER.

### NOTE

For a mobile processor, an adjustment can be made according to the thermal monitor operating target. For a quad-core processor the SENTER adjustment mechanism may result in a more conservative but non-uniform voltage setting, depending on the pre-SENTER settings per core.

The ILP and RLPs mask the response to the assertion of the external signals INIT#, A20M, NMI#, and SMI#. The purpose of this masking control is to prevent exposure to existing external event handlers until a protected handler has been put in place to directly handle these events. Masked external pin events may be unmasked conditionally or unconditionally via the GETSEC[EXITAC], GETSEC[SEXIT], GETSEC[SMCTRL] or for specific VMX related operations such as a VM entry or the

VMXOFF instruction (see respective GETSEC leaves and Intel® 64 and IA-32 Architectures Software Developer's Manual, Volume 3B for more details). The state of the A20M pin is masked and forced internally to a de-asserted state so that external assertion is not recognized. A20M masking as set by GETSEC[SENTER] is undone only after taking down the measured environment with the GETSEC[SEXIT] instruction or processor reset. INTR is masked by simply clearing the EFLAGS.IF bit. It is the responsibility of system software to control the processor response to INTR through appropriate management of EFLAGS.

To prevent other (logical) processors from interfering with the ILP operating in authenticated code execution mode, memory (excluding implicit write-back transactions) and I/O activities originating from other processor agents are blocked. This protection starts when the ILP enters into authenticated code execution mode. Only memory and I/O transactions initiated from the ILP are allowed to proceed. Exiting authenticated code execution mode is done by executing GETSEC[EXITAC]. The protection of memory and I/O activities remains in effect until the ILP executes GETSEC[EXITAC].

Once the authenticated code module has been loaded into the authenticated code execution area, it is protected against further modification from external bus snoops. There is also a requirement that the memory type for the authenticated code module address range be WB (via initialization of the MTRRs prior to execution of this instruction). If this condition is not satisfied, it is a violation of security and the processor will force a TXT system reset (after writing an error code to the chipset LT.ERROR-CODE register). This action is referred to as a Intel® TXT reset condition. It is performed when it is considered unreliable to signal an error through the conventional exception reporting mechanism.

To conform to the minimum granularity of MTRR MSRs for specifying the memory type, authenticated code RAM (ACRAM) is allocated to the processor in 4096 byte granular blocks. If an AC module size as specified in ECX is not a multiple of 4096 then the processor will allocate up to the next 4096 byte boundary for mapping as ACRAM with indeterminate data. This pad area will not be visible to the authenticated code module as external memory nor can it depend on the value of the data used to fill the pad area.

Once successful authentication has been completed by the ILP, the computed hash is stored in the TPM at PCR17 after this register is implicitly reset. PCR17 is a dedicated register for holding the computed hash of the authenticated code module loaded and subsequently executed by the GETSEC[SENTER]. As part of this process, the dynamic PCRs 18-22 are reset so they can be utilized by subsequently software for registration of code and data modules. After successful execution of SENTER, PCR17 contains the measurement of AC code and the SENTER launching parameters.

After authentication is completed successfully, the private configuration space of the Intel® TXT-capable chipset is unlocked so that the authenticated code module and measured environment software can gain access to this normally restricted chipset state. The Intel® TXT-capable chipset private configuration space can be locked later by software writing to the chipset LT.CMD.CLOSE-PRIVATE register or unconditionally using the GETSEC[SEXIT] instruction.

The SENTER leaf function also initializes some processor architecture state for the ILP from contents held in the header of the authenticated code module. Since the authenticated code module is relocatable, all address references are relative to the base address passed in via EBX. The ILP GDTR base value is initialized to EBX + [GDTBasePtr] and GDTR limit set to [GDTLimit]. The CS selector is initialized to the value held in the AC module header field SegSel, while the DS, SS, and ES selectors are initialized to CS+8. The segment descriptor fields are initialized implicitly with BASE=0, LIMIT=FFFFFh, G=1, D=1, P=1, S=1, read/write/accessed for DS, SS, and ES, while execute/read/accessed for CS. Execution in the authenticated code module for the ILP begins with the EIP set to EBX + [EntryPoint]. AC module defined fields used for initializing processor state are consistency checked with a failure resulting in an TXT-shutdown condition.

Table 6-6 provides a summary of processor state initialization for the ILP and RLP(s) after successful completion of GETSEC[SENTER]. For both ILP and RLP(s), paging is disabled upon entry to the measured environment. It is up to the ILP to establish a trusted paging environment, with appropriate mappings, to meet protection requirements established during the launch of the measured environment. RLP state initialization is not completed until a subsequent wake-up has been signaled by execution of the GETSEC[WAKEUP] function by the ILP.

Table 6-6. Register State Initialization after GETSEC[SENTER] and GETSEC[WAKEUP]

Register State	ILP after GETSEC[SENTER]	RLP after GETSEC[WAKEUP]
CR0	PG←0, AM←0, WP←0; Others unchanged	$PG\leftarrow 0$ , $CD\leftarrow 0$ , $NW\leftarrow 0$ , $AM\leftarrow 0$ , $WP\leftarrow 0$ ; $PE\leftarrow 1$ , $NE\leftarrow 1$
CR4	00004000H	00004000H
EFLAGS	00000002H	00000002H
IA32_EFER	ОН	0
EIP	[EntryPoint from MLE header <sup>1</sup> ]	[LT.MLE.JOIN + 12]
EBX	Unchanged [SINIT.BASE]	Unchanged
EDX	SENTER control flags	Unchanged
EBP	SINIT.BASE	Unchanged
cs	Sel=[SINIT SegSel], base=0, limit=FFFFFh, G=1, D=1, AR=9BH	Sel = [LT.MLE.JOIN + 8], base = 0, limit = FFFFFH, G = 1, D = 1, AR = 9BH
DS, ES, SS	Sel=[SINIT SegSel] +8, base=0, limit=FFFFFh, G=1, D=1, AR=93H	Sel = [LT.MLE.JOIN + 8] +8, base = 0, limit = FFFFFH, G = 1, D = 1, AR = 93H

Table 6-6. Register State Initialization after GETSEC[SENTER] and GETSEC[WAKEUP]

GDTR	Base= SINIT.base (EBX) + [SINIT.GDTBasePtr], Limit=[SINIT.GDTLimit]	Base = [LT.MLE.JOIN + 4], Limit = [LT.MLE.JOIN]
DR7	00000400H	00000400H
IA32_DEBUGC TL	ОН	ОН
Performance counters and counter control registers	ОН	ОН
IA32_MISC_EN ABLES	see Table 6-5	see Table 6-5

#### **NOTES:**

1. See Intel® Trusted Execution Technology Measured Launched Environment Programming Guide for MLE header format.

Segmentation related processor state that has not been initialized by GETSEC[SENTER] requires appropriate initialization before use. Since a new GDT context has been established, the previous state of the segment selector values held in FS, GS, TR, and LDTR may no longer be valid. The IDTR will also require reloading with a new IDT context after launching the measured environment before exceptions or the external interrupts INTR and NMI can be handled. In the meantime, the programmer must take care in not executing an INT n instruction or any other condition that would result in an exception or trap signaling.

Debug exception and trap related signaling is also disabled as part of execution of GETSEC[SENTER]. This is achieved by clearing DR7, TF in EFLAGs, and the MSR IA32\_DEBUGCTL as defined in Table 6-6. These can be re-enabled once supporting exception handler(s), descriptor tables, and debug registers have been properly reinitialized following SENTER. Also, any pending single-step trap condition will be cleared at the completion of SENTER for both the ILP and RLP(s).

Performance related counters and counter control registers are cleared as part of execution of SENTER on both the ILP and RLP. This implies any active performance counters at the time of SENTER execution will be disabled. To reactive the processor performance counters, this state must be re-initialized and re-enabled.

Since MCE along with all other state bits (with the exception of SMXE) are cleared in CR4 upon execution of SENTER processing, any enabled machine check error condition that occurs will result in the processor performing the TXT-shutdown action. This also applies to an RLP while in the SENTER sleep state. For each logical processor CR4.MCE must be reestablished with a valid machine check exception handler to otherwise avoid an TXT-shutdown under such conditions.

The MSR IA32\_EFER is also unconditionally cleared as part of the processor state initialized by SENTER for both the ILP and RLP. Since paging is disabled upon entering authenticated code execution mode, a new paging environment will have to be reestablished if it is desired to enable IA-32e mode while operating in authenticated code execution mode.

The miscellaneous feature control MSR, IA32\_MISC\_ENABLES, is initialized as part of the measured environment launch. Certain bits of this MSR are preserved because preserving these bits may be important to maintain previously established platform settings. See the footnote for Table 6-5 The remaining bits are cleared for the purpose of establishing a more consistent environment for the execution of authenticated code modules. Among the impact of initializing this MSR, any previous condition established by the MONITOR instruction will be cleared.

## Effect of MSR IA32\_FEATURE\_CONTROL MSR

Bits 15:8 of the IA32\_FEATURE\_CONTROL MSR affect the execution of GETSEC[SENTER]. These bits consist of two fields:

- Bit 15: a global enable control for execution of SENTER.
- Bits 14:8: a parameter control field providing the ability to qualify SENTER execution based on the level of functionality specified with corresponding EDX parameter bits 6:0.

The layout of these fields in the IA32\_FEATURE\_CONTROL MSR is shown in Table 6-1.

Prior to the execution of GETSEC[SENTER], the lock bit of IA32\_FEATURE\_CONTROL MSR must be bit set to affirm the settings to be used. Once the lock bit is set, only a power-up reset condition will clear this MSR. The IA32\_FEATURE\_CONTROL MSR must be configured in accordance to the intended usage at platform initialization. Note that this MSR is only available on SMX or VMX enabled processors. Otherwise, IA32\_FEATURE\_CONTROL is treated as reserved.

The Intel® Trusted Execution Technology Measured Launched Environment Programming Guide provides additional details and requirements for programming measured environment software to launch in an Intel TXT platform.

### Operation in a Uni-Processor Platform

(\* The state of the internal flag ACMODEFLAG and SENTERFLAG persist across instruction boundary \*)

GETSEC[SENTER] (ILP only):

IF (CR4.SMXE=0)

THEN #UD;

ELSE IF (in VMX non-root operation)

THEN VM Exit (reason="GETSEC instruction");

ELSE IF (GETSEC leaf unsupported)

THEN #UD;

ELSE IF ((in VMX root operation) or

(CRO.PE=0) or (CRO.CD=1) or (CRO.NW=1) or (CRO.NE=0) or

(CPL>0) or (EFLAGS.VM=1) or

```
(IA32 APIC BASE.BSP=0) or (TXT chipset not present) or
   (SENTERFLAG=1) or (ACMODEFLAG=1) or (IN_SMM=1) or
   (TPM interface is not present) or
   (EDX != (SENTER EDX support mask & EDX)) or
   (IA32_CR_FEATURE_CONTROL[0]=0) or (IA32_CR_FEATURE_CONTROL[15]=0) or
   ((IA32_CR_FEATURE_CONTROL[14:8] & EDX[6:0]) != EDX[6:0]))
       THEN #GP(0);
FOR I = 0 to IA32_MCG_CAP.COUNT-1 DO
   IF IA32_MC[I]_STATUS = uncorrectable error
       THEN #GP(0);
   FI;
OD:
IF (IA32_MCG_STATUS.MCIP=1) or (IERR pin is asserted)
   THEN #GP(0);
ACBASE← EBX;
ACSIZE← ECX;
IF (((ACBASE MOD 4096) != 0) or ((ACSIZE MOD 64) != 0 ) or (ACSIZE < minimum
   module size) or (ACSIZE > AC RAM capacity) or ((ACBASE+ACSIZE) > (2^32 -1)))
       THEN #GP(0):
Mask SMI, INIT, A20M, and NMI external pin events;
SignalTXTMsq(SENTER);
DO
WHILE (no SignalSENTER message);
TXT_SENTER__MSG_EVENT (ILP & RLP):
Mask and clear SignalSENTER event;
Unmask SignalSEXIT event;
IF (in VMX operation)
   THEN TXT-SHUTDOWN(#IllegalEvent);
FOR I = 0 to IA32_MCG_CAP.COUNT-1 DO
   IF IA32 MC[I] STATUS = uncorrectable error
       THEN TXT-SHUTDOWN(#UnrecovMCError);
   FI;
OD:
IF (IA32_MCG_STATUS.MCIP=1) or (IERR pin is asserted)
   THEN TXT-SHUTDOWN(#UnrecovMCError);
IF (Voltage or bus ratio status are NOT at a known good state)
   THEN IF (Voltage select and bus ratio are internally adjustable)
       THEN
            Make product-specific adjustment on operating parameters;
       ELSE
            TXT-SHUTDOWN(#IllegalVIDBRatio);
FI;
```

```
IA32_MISC_ENABLE← (IA32_MISC_ENABLE & MASK_CONST*)
(* The hexadecimal value of MASK_CONST may vary due to processor implementations *)
A20M← 0;
IA32_DEBUGCTL← 0;
Invalidate processor TLB(s);
Drain outgoing transactions;
Clear performance monitor counters and control;
SENTERFLAG\leftarrow 1;
SignalTXTMsq(SENTERAck);
IF (logical processor is not ILP)
   THEN GOTO RLP_SENTER_ROUTINE;
(* ILP waits for all logical processors to ACK *)
DO
   DONE← TXT.READ(LT.STS);
WHILE (not DONE);
SignalTXTMsq(SENTERContinue);
SignalTXTMsg(ProcessorHold);
FOR I=ACBASE to ACBASE+ACSIZE-1 DO
   ACRAM[I-ACBASE].ADDR \leftarrow I;
   ACRAM[I-ACBASE].DATA \leftarrow LOAD(I);
OD;
IF (ACRAM memory type != WB)
   THEN TXT-SHUTDOWN(#BadACMMType);
IF (AC module header version is not supported) OR (ACRAM[ModuleType] <> 2)
   THEN TXT-SHUTDOWN(#UnsupportedACM);
KEY \leftarrow GETKEY(ACRAM, ACBASE);
KEYHASH← HASH(KEY);
CSKEYHASH \leftarrow LT.READ(LT.PUBLIC.KEY);
IF (KEYHASH <> CSKEYHASH)
   THEN TXT-SHUTDOWN(#AuthenticateFail);
SIGNATURE← DECRYPT(ACRAM, ACBASE, KEY);
(* The value of SIGNATURE_LEN_CONST is implementation-specific*)
FOR I=0 to SIGNATURE_LEN_CONST - 1 DO
   ACRAM[SCRATCH.I] \leftarrow SIGNATURE[I];
COMPUTEDSIGNATURE← HASH(ACRAM, ACBASE, ACSIZE);
FOR I=0 to SIGNATURE_LEN_CONST - 1 DO
   ACRAM[SCRATCH.SIGNATURE\_LEN\_CONST+I] \leftarrow COMPUTEDSIGNATURE[I];
IF (SIGNATURE != COMPUTEDSIGNATURE)
   THEN TXT-SHUTDOWN(#AuthenticateFail);
ACMCONTROL← ACRAM[CodeControl];
IF ((ACMCONTROL.0 = 0) and (ACMCONTROL.1 = 1) and (snoop hit to modified line detected on
ACRAM load))
   THEN TXT-SHUTDOWN(#UnexpectedHITM);
```

```
IF (ACMCONTROL reserved bits are set)
   THEN TXT-SHUTDOWN(#BadACMFormat);
IF ((ACRAM[GDTBasePtr] < (ACRAM[HeaderLen] * 4 + Scratch_size)) OR</pre>
   ((ACRAM[GDTBasePtr] + ACRAM[GDTLimit]) >= ACSIZE))
   THEN TXT-SHUTDOWN(#BadACMFormat);
IF ((ACMCONTROL.0 = 1) and (ACMCONTROL.1 = 1) and (snoop hit to modified
   line detected on ACRAM load))
   THEN ACEntryPoint← ACBASE+ACRAM[ErrorEntryPoint];
ELSE
   ACEntryPoint← ACBASE+ACRAM[EntryPoint];
IF ((ACEntryPoint >= ACSIZE) or (ACEntryPoint < (ACRAM[HeaderLen] * 4 + Scratch_size)))
   THEN TXT-SHUTDOWN(#BadACMFormat);
IF ((ACRAM[SegSel] > (ACRAM[GDTLimit] - 15)) or (ACRAM[SegSel] < 8))
   THEN TXT-SHUTDOWN(#BadACMFormat);
IF ((ACRAM[SegSel].TI=1) or (ACRAM[SegSel].RPL!=0))
   THEN TXT-SHUTDOWN(#BadACMFormat);
ACRAM[SCRATCH.SIGNATURE_LEN_CONST]← EDX;
WRITE(TPM.HASH.START) \leftarrow 0;
FOR I=0 to SIGNATURE LEN CONST + 3 DO
   WRITE(TPM.HASH.DATA) \leftarrow ACRAM[SCRATCH.I];
WRITE(TPM.HASH.END)\leftarrow 0;
ACMODEFLAG← 1;
CR0.[PG.AM.WP] \leftarrow 0;
CR4← 00004000h;
EFLAGS← 00000002h;
IA32_EFER← 0;
EBP← ACBASE;
GDTR.BASE← ACBASE+ACRAM[GDTBasePtr];
GDTR.LIMIT← ACRAM[GDTLimit];
CS.SEL← ACRAM[SeqSel];
CS.BASE \leftarrow 0;
CS.LIMIT← FFFFFh;
CS.G \leftarrow 1;
CS.D \leftarrow 1;
CS.AR← 9Bh;
DS.SEL← ACRAM[SegSel]+8;
DS.BASE\leftarrow 0:
DS.LIMIT← FFFFFh;
DS.G← 1:
DS.D← 1;
DS.AR← 93h;
SS \leftarrow DS;
ES← DS;
```

DR7← 00000400h; IA32\_DEBUGCTL← 0;

DR6.BS $\leftarrow$  0;

SignalTXTMsg(UnlockSMRAM); SignalTXTMsg(OpenPrivate); SignalTXTMsg(OpenLocality3);

EIP← ACEntryPoint;

END;

## RLP\_SENTER\_ROUTINE: (RLP only)

Mask SMI, INIT, A20M, and NMI external pin events

Unmask SignalWAKEUP event;

Wait for SignalSENTERContinue message;

IA32\_APIC\_BASE.BSP $\leftarrow$  0; GOTO SENTER sleep state;

END;

## **Flags Affected**

All flags are cleared.

### **Use of Prefixes**

LOCK Causes #UD

REP\* Cause #UD (includes REPNE/REPNZ and REP/REPE/REPZ)

Operand size Causes #UD

Segment overrides Ignored Address size Ignored REX Ignored

## **Protected Mode Exceptions**

#UD If CR4.SMXE = 0.

If GETSEC[SENTER] is not reported as supported by

GETSEC[CAPABILITIES].

#GP(0) If CR0.CD = 1 or CR0.NW = 1 or CR0.NE = 0 or CR0.PE = 0 or

CPL > 0 or EFLAGS.VM = 1. If in VMX root operation.

If the initiating processor is not designated as the bootstrap

processor via the MSR bit IA32\_APIC\_BASE.BSP. If an Intel® TXT-capable chipset is not present.

If an Intel® TXT-capable chipset interface to TPM is not detected as present.

If a protected partition is already active or the processor is already in authenticated code mode.

If the processor is in SMM.

If a valid uncorrectable machine check error is logged in IA32 MC[I] STATUS.

If the authenticated code base is not on a 4096 byte boundary. If the authenticated code size > processor's authenticated code execution area storage capacity.

If the authenticated code size is not modulo 64.

## **Real-Address Mode Exceptions**

#UD If CR4.SMXE = 0.

If GETSEC[SENTER] is not reported as supported by

GETSEC[CAPABILITIES].

#GP(0) GETSEC[SENTER] is not recognized in real-address mode.

## Virtual-8086 Mode Exceptions

#UD If CR4.SMXE = 0.

If GETSEC[SENTER] is not reported as supported by

GETSEC[CAPABILITIES].

#GP(0) GETSEC[SENTER] is not recognized in virtual-8086 mode.

# **Compatibility Mode Exceptions**

All protected mode exceptions apply.

#GP IF AC code module does not reside in physical address below

2^32 -1.

## **64-Bit Mode Exceptions**

All protected mode exceptions apply.

#GP IF AC code module does not reside in physical address below

2^32 -1.

### **VM-Exit Condition**

Reason (GETSEC) IF in VMX non-root operation.

# GETSEC[SEXIT]—Exit Measured Environment

Opcode	Instruction	Description
0F 37	GETSEC[SEXIT]	Exit measured environment
(EAX=5)		

## **Description**

The GETSEC[SEXIT] instruction initiates an exit of a measured environment established by GETSEC[SENTER]. The SEXIT leaf of GETSEC is selected with EAX set to 5 at execution. This instruction leaf sends a message to all logical processors in the platform to signal the measured environment exit.

There are restrictions enforced by the processor for the execution of the GETSEC[SEXIT] instruction:

- Execution is not allowed unless the processor is in protected mode (CR0.PE = 1) with CPL = 0 and EFLAGS.VM = 0.
- The processor must be in a measured environment as launched by a previous GETSEC[SENTER] instruction, but not still in authenticated code execution mode.
- To avoid potential inter-operability conflicts between modes, the processor is not allowed to execute this instruction if it currently is in SMM or in VMX operation.
- To insure consistent handling of SIPI messages, the processor executing the GETSEC[SEXIT] instruction must also be designated the BSP (bootstrap processor) as defined by the register bit IA32\_APIC\_BASE.BSP (bit 8).

Failure to abide by the above conditions results in the processor signaling a general protection violation.

This instruction initiates a sequence to rendezvous the RLPs with the ILP. It then clears the internal processor flag indicating the processor is operating in a measured environment.

In response to a message signaling the completion of rendezvous, all RLPs restart execution with the instruction that was to be executed at the time GETSEC[SEXIT] was recognized. This applies to all processor conditions, with the following exceptions:

- If an RLP executed HLT and was in this halt state at the time of the message initiated by GETSEC[SEXIT], then execution resumes in the halt state.
- If an RLP was executing MWAIT, then a message initiated by GETSEC[SEXIT] causes an exit of the MWAIT state, falling through to the next instruction.
- If an RLP was executing an intermediate iteration of a string instruction, then the processor resumes execution of the string instruction at the point which the message initiated by GETSEC[SEXIT] was recognized.
- If an RLP is still in the SENTER sleep state (never awakened with GETSEC[WAKEUP]), it will be sent to the wait-for-SIPI state after first clearing

the bootstrap processor indicator flag (IA32\_APIC\_BASE.BSP) and any pending SIPI state. In this case, such RLPs are initialized to an architectural state consistent with having taken a soft reset using the INIT# pin.

Prior to completion of the GETSEC[SEXIT] operation, both the ILP and any active RLPs unmask the response of the external event signals INIT#, A20M, NMI#, and SMI#. This unmasking is performed unconditionally to recognize pin events which are masked after a GETSEC[SENTER]. The state of A20M is unmasked, as the A20M pin is not recognized while the measured environment is active.

On a successful exit of the measured environment, the ILP re-locks the Intel® TXT-capable chipset private configuration space. GETSEC[SEXIT] does not affect the content of any PCR.

At completion of GETSEC[SEXIT] by the ILP, execution proceeds to the next instruction. Since EFLAGS and the debug register state are not modified by this instruction, a pending trap condition is free to be signaled if previously enabled.

## Operation in a Uni-Processor Platform

(\* The state of the internal flag ACMODEFLAG and SENTERFLAG persist across instruction boundary \*)

```
GETSEC[SEXIT] (ILP only):
```

```
IF (CR4.SMXE=0)
```

THEN #UD:

ELSE IF (in VMX non-root operation)

THEN VM Exit (reason="GETSEC instruction");

ELSE IF (GETSEC leaf unsupported)

THEN #UD;

ELSE IF ((in VMX root operation) or

(CRO.PE=0) or (CPL>0) or (EFLAGS.VM=1) or

(IA32\_APIC\_BASE.BSP=0) or

(TXT chipset not present) or

(SENTERFLAG=0) or (ACMODEFLAG=1) or (IN\_SMM=1))

THEN #GP(0);

SignalTXTMsq(SEXIT);

DO

WHILE (no SignalSEXIT message);

### TXT\_SEXIT\_MSG\_EVENT (ILP & RLP):

Mask and clear SignalSEXIT event;

Clear MONITOR FSM;

Unmask SignalSENTER event;

IF (in VMX operation)

THEN TXT-SHUTDOWN(#IllegalEvent);

SignalTXTMsq(SEXITAck);

IF (logical processor is not ILP)

```
THEN GOTO RLP_SEXIT_ROUTINE;
(* ILP waits for all logical processors to ACK *)
DO
   DONE← READ(LT.STS);
WHILE (NOT DONE);
SignalTXTMsq(SEXITContinue);
SignalTXTMsq(ClosePrivate);
SENTERFLAG\leftarrow 0;
Unmask SMI, INIT, A20M, and NMI external pin events;
END:
RLP_SEXIT_ROUTINE (RLPs only):
Wait for SignalSEXITContinue message;
Unmask SMI, INIT, A20M, and NMI external pin events;
IF (prior execution state = HLT)
   THEN reenter HLT state;
IF (prior execution state = SENTER sleep)
   THEN
        IA32_APIC_BASE.BSP← 0;
        Clear pending SIPI state;
        Call INIT_PROCESSOR_STATE;
        Unmask SIPI event;
        GOTO WAIT-FOR-SIPI;
FI;
END;
```

## Flags Affected

ILP: None.

RLPs: all flags are modified for an RLP. returning to wait-for-SIPI state, none otherwise

### **Use of Prefixes**

LOCK Causes #UD

REP\* Cause #UD (includes REPNE/REPNZ and REP/REPE/REPZ)

Operand size Causes #UD

Segment overrides Ignored
Address size Ignored
REX Ignored

### **Protected Mode Exceptions**

#UD If CR4.SMXE = 0.

### SAFER MODE EXTENSIONS REFERENCE

If GETSEC[SEXIT] is not reported as supported by

GETSEC[CAPABILITIES].

#GP(0) If CR0.PE = 0 or CPL > 0 or EFLAGS.VM = 1.

If in VMX root operation.

If the initiating processor is not designated as the via the MSR

bit IA32\_APIC\_BASE.BSP.

If an Intel® TXT-capable chipset is not present.

If a protected partition is not already active or the processor is

already in authenticated code mode.

If the processor is in SMM.

## **Real-Address Mode Exceptions**

#UD If CR4.SMXE = 0.

If GETSEC[SEXIT] is not reported as supported by

GETSEC[CAPABILITIES].

#GP(0) GETSEC[SEXIT] is not recognized in real-address mode.

## Virtual-8086 Mode Exceptions

#UD If CR4.SMXE = 0.

If GETSEC[SEXIT] is not reported as supported by

GETSEC[CAPABILITIES].

#GP(0) GETSEC[SEXIT] is not recognized in virtual-8086 mode.

## **Compatibility Mode Exceptions**

All protected mode exceptions apply.

## **64-Bit Mode Exceptions**

All protected mode exceptions apply.

### **VM-Exit Condition**

Reason (GETSEC) IF in VMX non-root operation.

# GETSEC[PARAMETERS]—Report the SMX Parameters

Opcode	Instruction	Description
0F 37	GETSEC[PARAMETERS]	Report the SMX Parameters
(EAX=6)		The parameters index is input in EBX with the result returned in EAX, EBX, and ECX.

## **Description**

The GETSEC[PARAMETERS] instruction returns specific parameter information for SMX features supported by the processor. Parameter information is returned in EAX, EBX, and ECX, with the input parameter selected using EBX.

Software retrieves parameter information by searching with an input index for EBX starting at 0, and then reading the returned results in EAX, EBX, and ECX. EAX[4:0] is designated to return a parameter type field indicating if a parameter is available and what type it is. If EAX[4:0] is returned with 0, this designates a null parameter and indicates no more parameters are available.

Table 6-7 defines the parameter types supported in current and future implementations.

Table 6-7. SMX Reporting Parameters Format

Parameter Type EAX[4:0]	Parameter Description	EAX[31:5]	EBX[31:0]	ECX[31:0]
0	NULL	Reserved (0 returned)	Reserved (unmodified)	Reserved (unmodified)
1	Supported AC module versions	Reserved (0 returned)	version comparison mask	version numbers supported
2	Max size of authenticated code execution area	Multiply by 32 for size in bytes	Reserved (unmodified)	Reserved (unmodified)

			•	•
Parameter Type EAX[4:0]	Parameter Description	EAX[31:5]	EBX[31:0]	ECX[31:0]
3	External memory types supported during AC mode	Memory type bit mask	Reserved (unmodified)	Reserved (unmodified)
4	Selective SENTER functionality control	EAX[14:8] correspond to available SENTER function disable controls	Reserved (unmodified)	Reserved (unmodified)
5-31	Undefined	Reserved (unmodified)	Reserved (unmodified)	Reserved (unmodified)

Table 6-7. SMX Reporting Parameters Format (Contd.)

Supported AC module versions (as defined by the AC module HeaderVersion field) can be determined for a particular SMX capable processor by the type 1 parameter. Using EBX to index through the available parameters reported by GETSEC[PARAMETERS] for each unique parameter set returned for type 1, software can determine the complete list of AC module version(s) supported.

For each parameter set, EBX returns the comparison mask and ECX returns the available HeaderVersion field values supported, after AND'ing the target HeaderVersion with the comparison mask. Software can then determine if a particular AC module version is supported by following the pseudo-code search routine given below:

If only AC modules with a HeaderVersion of 0 are supported by the processor, then only one parameter set of type 1 will be returned, as follows: EAX = 00000001H,

```
EBX = FFFFFFFH and ECX = 00000000H.
```

The maximum capacity for an authenticated code execution area supported by the processor is reported with the parameter type of 2. The maximum supported size in bytes is determined by multiplying the returned size in EAX[31:5] by 32. Thus, for a maximum supported authenticated RAM size of 32KBytes, EAX returns with 00008002H.

Supportable memory types for memory mapped outside of the authenticated code execution area are reported with the parameter type of 3. While is active, as initiated by the GETSEC functions SENTER and ENTERACCS and terminated by EXITAC, there are restrictions on what memory types are allowed for the rest of system memory. It is the responsibility of the system software to initialize the memory type range register (MTRR) MSRs and/or the page attribute table (PAT) to only map memory types consistent with the reporting of this parameter. The reporting of supportable memory types of external memory is indicated using a bit map returned in EAX[31:8]. These bit positions correspond to the memory type encodings defined for the MTRR MSR and PAT programming. See Table 6-8.

The parameter type of 4 is used for enumerating the availability of selective GETSEC[SENTER] function disable controls. If a 1 is reported in bits 14:8 of the returned parameter EAX, then this indicates a disable control capability exists with SENTER for a particular function. The enumerated field in bits 14:8 corresponds to use of the EDX input parameter bits 6:0 for SENTER. If an enumerated field bit is set to 1, then the corresponding EDX input parameter bit of EDX may be set to 1 to disable that designated function. If the enumerated field bit is 0 or this parameter is not reported, then no disable capability exists with the corresponding EDX input parameter for SENTER, and EDX bit(s) must be cleared to 0 to enable execution of SENTER. If no selective disable capability for SENTER exists as enumerated, then the corresponding bits in the IA32\_FEATURE\_CONTROL MSR bits 14:8 must also be programmed to 1 if the SENTER global enable bit 15 of the MSR is set. This is required to enable future extensibility of SENTER selective disable capability with respect to potentially separate software initialization of the MSR.

Table 6-8. External Memory Types Using Parameter 3

EAX Bit Position	Parameter Description
8	Uncacheable (UC)
9	Write Combining (WC)
11:10	Reserved
12	Write-through (WT)
13	Write-protected (WP)
14	Write-back (WB)
31:15	Reserved

If the GETSEC[PARAMETERS] leaf or specific parameter is not present for a given SMX capable processor, then default parameter values should be assumed. These are defined in Table 6-9.

Table 6-9. Default Parameter Values

Parameter Type EAX[4:0]	Default Setting	Parameter Description
1	0.0 only	Supported AC module versions
2	32 KBytes	Authenticated code execution area size
3	UC only	External memory types supported during AC execution mode
4	None	Available SENTER selective disable controls

## Operation

```
(* example of a processor supporting only a 0.0 HeaderVersion, 32K ACRAM size, memory types UC
and WC *)
IF (CR4.SMXE=0)
   THEN #UD;
ELSE IF (in VMX non-root operation)
   THEN VM Exit (reason="GETSEC instruction");
ELSE IF (GETSEC leaf unsupported)
   THEN #UD;
   (* example of a processor supporting a 0.0 HeaderVersion *)
IF (EBX=0) THEN
   EAX← 0000001h;
   EBX← FFFFFFFh;
   ECX← 00000000h;
ELSE IF (EBX=1)
   (* example of a processor supporting a 32K ACRAM size *)
   THEN EAX← 00008002h;
ESE IF (EBX= 2)
   (* example of a processor supporting external memory types of UC and WC *)
   THEN EAX← 00000303h;
ELSE
   EAX" 00000000h;
END:
```

## **Flags Affected**

None.

#### **Use of Prefixes**

LOCK Causes #UD

REP\* Cause #UD (includes REPNE/REPNZ and REP/REPE/REPZ)

Operand size Causes #UD

Segment overrides Ignored Address size Ignored REX Ignored

## **Protected Mode Exceptions**

#UD If CR4.SMXE = 0.

If GETSEC[PARAMETERS] is not reported as supported by

GETSEC[CAPABILITIES].

## **Real-Address Mode Exceptions**

#UD If CR4.SMXE = 0.

If GETSEC[PARAMETERS] is not reported as supported by

GETSEC[CAPABILITIES].

## Virtual-8086 Mode Exceptions

#UD If CR4.SMXE = 0.

If GETSEC[PARAMETERS] is not reported as supported by

GETSEC[CAPABILITIES].

## **Compatibility Mode Exceptions**

All protected mode exceptions apply.

## **64-Bit Mode Exceptions**

All protected mode exceptions apply.

## **VM-Exit Condition**

Reason (GETSEC) IF in VMX non-root operation.

# GETSEC[SMCTRL]—SMX Mode Control

Opcode	Instruction	Description
OF 37 (EAX = 7)	GETSEC[SMCTRL]	Perform specified SMX mode control as selected with the input EBX.

## **Description**

The GETSEC[SMCTRL] instruction is available for performing certain SMX specific mode control operations. The operation to be performed is selected through the input register EBX. Currently only an input value in EBX of 0 is supported. All other EBX settings will result in the signaling of a general protection violation.

If EBX is set to 0, then the SMCTRL leaf is used to re-enable SMI events. SMI is masked by the ILP executing the GETSEC[SENTER] instruction (SMI is also masked in the responding logical processors in response to SENTER rendezvous messages.). The determination of when this instruction is allowed and the events that are unmasked is dependent on the processor context (See Table 6-10). For brevity, the usage of SMCTRL where EBX=0 will be referred to as GETSEC[SMCTRL(0)].

As part of support for launching a measured environment, the SMI, NMI and INIT events are masked after GETSEC[SENTER], and remain masked after exiting authenticated execution mode. Unmasking these events should be accompanied by securely enabling these event handlers. These security concerns can be addressed in VMX operation by a MVMM.

The VM monitor can choose two approaches:

- In a dual monitor approach, the executive software will set up an SMM monitor in parallel to the executive VMM (i.e. the MVMM), see Chapter 25, "System Management" of Intel® 64 and IA-32 Architectures Software Developer's Manual, Volume 3B. The SMM monitor is dedicated to handling SMI events without compromising the security of the MVMM. This usage model of handling SMI while a measured environment is active does not require the use of GETSEC[SMCTRL(0)] as event re-enabling after the VMX environment launch is handled implicitly and through separate VMX based controls.
- If a dedicated SMM monitor will not be established and SMIs are to be handled within the measured environment, then GETSEC[SMCTRL(0)] can be used by the executive software to re-enable SMI that has been masked as a result of SENTER.

Table 6-10 defines the processor context in which GETSEC[SMCTRL(0)] can be used and which events will be unmasked. Note that the events that are unmasked are dependent upon the currently operating processor context.

Table 6-10. Supported Actions for GETSEC[SMCTRL(0)]

ILP Mode of Operation	SMCTRL execution action
In VMX non-root operation	VM exit
SENTERFLAG = 0	#GP(0), illegal context
In authenticated code execution mode (ACMODEFLAG = 1)	#GP(0), illegal context
SENTERFLAG = 1, not in VMX operation, not in SMM	Unmask SMI
SENTERFLAG = 1, in VMX root operation, not in SMM	Unmask SMI if SMM monitor is not configured, otherwise #GP(0)
SENTERFLAG = 1, In VMX root operation, in SMM	#GP(0), illegal context

## **Operation**

```
(* The state of the internal flag ACMODEFLAG and SENTERFLAG persist across instruction
boundary *)
IF (CR4.SMXE=0)
   THEN #UD;
ELSE IF (in VMX non-root operation)
   THEN VM Exit (reason="GETSEC instruction");
ELSE IF (GETSEC leaf unsupported)
   THEN #UD;
ELSE IF ((CR0.PE=0) or (CPL>0) OR (EFLAGS.VM=1))
   THEN #GP(0);
ELSE IF((EBX=0) and (SENTERFLAG=1) and (ACMODEFLAG=0) and (IN_SMM=0) and
        (((in VMX root operation) and (SMM monitor not configured)) or (not in VMX operation)))
   THEN unmask SMI;
ELSE
   #GP(0);
END
```

## **Flags Affected**

None.

#### **Use of Prefixes**

LOCK Causes #UD

#### SAFER MODE EXTENSIONS REFERENCE

REP\* Cause #UD (includes REPNE/REPNZ and REP/REPE/REPZ)

Operand size Causes #UD Segment overrides Ignored

Address size Ignored
REX Ignored

## **Protected Mode Exceptions**

#UD If CR4.SMXE = 0.

If GETSEC[SMCTRL] is not reported as supported by

GETSEC[CAPABILITIES].

#GP(0) If CR0.PE = 0 or CPL > 0 or EFLAGS.VM = 1.

If in VMX root operation.

If a protected partition is not already active or the processor is

currently in authenticated code mode.

If the processor is in SMM.

If the SMM monitor is not configured

## **Real-Address Mode Exceptions**

#UD If CR4.SMXE = 0.

If GETSEC[SMCTRL] is not reported as supported by

GETSEC[CAPABILITIES].

#GP(0) GETSEC[SMCTRL] is not recognized in real-address mode.

## Virtual-8086 Mode Exceptions

#UD If CR4.SMXE = 0.

If GETSEC[SMCTRL] is not reported as supported by

GETSEC[CAPABILITIES].

#GP(0) GETSEC[SMCTRL] is not recognized in virtual-8086 mode.

## **Compatibility Mode Exceptions**

All protected mode exceptions apply.

## **64-Bit Mode Exceptions**

All protected mode exceptions apply.

#### **VM-exit Condition**

Reason (GETSEC) IF in VMX non-root operation.

# GETSEC[WAKEUP]—Wake up sleeping processors in measured environment

Opcode	Instruction	Description
OF 37 (EAX=8)	GETSEC[WAKE UP]	Wake up the responding logical processors from the SENTER sleep state.

## **Description**

The GETSEC[WAKEUP] leaf function broadcasts a wake-up message to all logical processors currently in the SENTER sleep state. Responding logical processors (RLPs) enter the SENTER sleep state after completion of the SENTER rendezvous sequence.

The GETSEC[WAKEUP] instruction may only be executed:

- In a measured environment as initiated by execution of GETSEC[SENTER].
- Outside of authenticated code execution mode.
- Execution is not allowed unless the processor is in protected mode with CPL = 0 and EFLAGS.VM = 0.
- In addition, the logical processor must be designated as the boot-strap processor as configured by setting IA32\_APIC\_BASE.BSP = 1.

If these conditions are not met, attempts to execute GETSEC[WAKEUP] result in a general protection violation.

An RLP exits the SENTER sleep state and start execution in response to a WAKEUP signal initiated by ILP's execution of GETSEC[WAKEUP]. The RLP retrieves a pointer to a data structure that contains information to enable execution from a defined entry point. This data structure is located using a physical address held in the Intel® TXT-capable chipset configuration register LT.MLE.JOIN. The register is publicly writable in the chipset by all processors and is not restricted by the Intel® TXT-capable chipset configuration register lock status. The format of this data structure is defined in Table 6-11.

Table 6-11. RLP MVMM JOIN Data Structure

Offset	Field
0	GDT limit
4	GDT base pointer
8	Segment selector initializer
12	EIP

The MLE JOIN data structure contains the information necessary to initialize RLP processor state and permit the processor to join the measured environment. The GDTR, LIP, and CS, DS, SS, and ES selector values are initialized using this data structure. The CS selector index is derived directly from the segment selector initializer field; DS, SS, and ES selectors are initialized to CS+8. The segment descriptor fields are initialized implicitly with BASE = 0, LIMIT = FFFFFH, G = 1, D = 1, P = 1, S = 1= 1; read/write/access for DS, SS, and ES; and execute/read/access for CS. It is the responsibility of external software to establish a GDT pointed to by the MLE JOIN data structure that contains descriptor entries consistent with the implicit settings initialized by the processor (see Table 6-6). Certain states from the content of Table 6-11 are checked for consistency by the processor prior to execution. A failure of any consistency check results in the RLP aborting entry into the protected environment and signaling an Intel® TXT shutdown condition. The specific checks performed are documented later in this section. After successful completion of processor consistency checks and subsequent initialization, RLP execution in the measured environment begins from the entry point at offset 12 (as indicated in Table 6-11).

## **Operation**

```
(* The state of the internal flag ACMODEFLAG and SENTERFLAG persist across instruction
boundary *)
IF (CR4.SMXE=0)
    THEN #UD;
ELSE IF (in VMX non-root operation)
    THEN VM Exit (reason="GETSEC instruction");
ELSE IF (GETSEC leaf unsupported)
    THEN #UD;
ELSE IF ((CR0.PE=0) or (CPL>0) or (EFLAGS.VM=1) or (SENTERFLAG=0) or (ACMODEFLAG=1) or
(IN_SMM=0) or (in VMX operation) or (IA32_APIC_BASE.BSP=0) or (TXT chipset not present))
    THEN #GP(0);
ELSE
    SignalTXTMsg(WAKEUP);
END;
```

## RLP\_SIPI\_WAKEUP\_FROM\_SENTER\_ROUTINE: (RLP only)

```
WHILE (no SignalWAKEUP event);
Mask SMI, A2OM, and NMI external pin events (unmask INIT);
Mask SignalWAKEUP event;
Invalidate processor TLB(s);
Drain outgoing transactions;
TempGDTRLIMIT← LOAD(LT.MLE.JOIN);
TempGDTRBASE← LOAD(LT.MLE.JOIN+4);
TempSegSel← LOAD(LT.MLE.JOIN+8);
TempEIP← LOAD(LT.MLE.JOIN+12);
```

```
IF (TempGDTLimit & FFFF0000h)
   THEN TXT-SHUTDOWN(#BadJOINFormat);
IF ((TempSeqSel > TempGDTRLIMIT-15) or (TempSeqSel < 8))
   THEN TXT-SHUTDOWN(#BadJOINFormat);
IF ((TempSegSel.TI=1) or (TempSegSel.RPL!=0))
   THEN TXT-SHUTDOWN(#BadJOINFormat);
CRO.[PG,CD,W,AM,WP] \leftarrow 0;
CR0.[NE,PE] \leftarrow 1;
CR4← 00004000h;
EFLAGS← 00000002h;
IA32_EFER← 0;
GDTR.BASE← TempGDTRBASE;
GDTR.LIMIT← TempGDTRLIMIT;
CS.SEL← TempSegSel;
CS.BASE← 0;
CS.LIMIT← FFFFFh;
CS.G \leftarrow 1;
CS.D← 1;
CS.AR← 9Bh;
DS.SEL← TempSegSel+8;
DS.BASE← 0;
DS.LIMIT← FFFFFh;
DS.G← 1;
DS.D← 1;
DS.AR← 93h;
SS \leftarrow DS;
ES← DS;
DR7← 00000400h:
IA32_DEBUGCTL← 0;
DR6.BS← 0:
EIP← TempEIP;
END;
```

## Flags Affected

None.

#### **Use of Prefixes**

LOCK Causes #UD

REP\* Cause #UD (includes REPNE/REPNZ and REP/REPE/REPZ)

Operand size Causes #UD

Segment overrides Ignored
Address size Ignored

REX Ignored

## **Protected Mode Exceptions**

#UD If CR4.SMXE = 0.

If GETSEC[WAKEUP] is not reported as supported by

GETSEC[CAPABILITIES].

#GP(0) If CRO.PE = 0 or CPL > 0 or EFLAGS.VM = 1.

If in VMX operation.

If a protected partition is not already active or the processor is

currently in authenticated code mode.

If the processor is in SMM.

#UD If CR4.SMXE = 0.

If GETSEC[WAKEUP] is not reported as supported by

GETSEC[CAPABILITIES].

#GP(0) GETSEC[WAKEUP] is not recognized in real-address mode.

## Virtual-8086 Mode Exceptions

#UD If CR4.SMXE = 0.

If GETSEC[WAKEUP] is not reported as supported by

GETSEC[CAPABILITIES].

#GP(0) GETSEC[WAKEUP] is not recognized in virtual-8086 mode.

## **Compatibility Mode Exceptions**

All protected mode exceptions apply.

## **64-Bit Mode Exceptions**

All protected mode exceptions apply.

#### **VM-exit Condition**

Reason (GETSEC) IF in VMX non-root operation.

Use the opcode tables in this chapter to interpret IA-32 and intel 64 architecture object code. Instructions are divided into encoding groups:

- 1-byte, 2-byte and 3-byte opcode encodings are used to encode integer, system, MMX technology, SSE/SSE2/SSE3/SSSE3/SSE4, and VMX instructions. Maps for these instructions are given in Table A-2 through Table A-6.
- Escape opcodes (in the format: ESC character, opcode, ModR/M byte) are used for floating-point instructions. The maps for these instructions are provided in Table A-7 through Table A-22.

#### **NOTE**

All blanks in opcode maps are reserved and must not be used. Do not depend on the operation of undefined or blank opcodes.

## A.1 USING OPCODE TABLES

Tables in this appendix list opcodes of instructions (including required instruction prefixes, opcode extensions in associated ModR/M byte). Blank cells in the tables indicate opcodes that are reserved or undefined.

The opcode map tables are organized by hex values of the upper and lower 4 bits of an opcode byte. For 1-byte encodings (Table A-2), use the four high-order bits of an opcode to index a row of the opcode table; use the four low-order bits to index a column of the table. For 2-byte opcodes beginning with 0FH (Table A-3), skip any instruction prefixes, the 0FH byte (0FH may be preceded by 66H, F2H, or F3H) and use the upper and lower 4-bit values of the next opcode byte to index table rows and columns. Similarly, for 3-byte opcodes beginning with 0F38H or 0F3AH (Table A-4), skip any instruction prefixes, 0F38H or 0F3AH and use the upper and lower 4-bit values of the third opcode byte to index table rows and columns. See Section A.2.4, "Opcode Look-up Examples for One, Two, and Three-Byte Opcodes."

When a ModR/M byte provides opcode extensions, this information qualifies opcode execution. For information on how an opcode extension in the ModR/M byte modifies the opcode map in Table A-2 and Table A-3, see Section A.4.

The escape (ESC) opcode tables for floating point instructions identify the eight high order bits of opcodes at the top of each page. See Section A.5. If the accompanying ModR/M byte is in the range of 00H-BFH, bits 3-5 (the top row of the third table on each page) along with the reg bits of ModR/M determine the opcode. ModR/M bytes

outside the range of 00H-BFH are mapped by the bottom two tables on each page of the section.

## A.2 KEY TO ABBREVIATIONS

Operands are identified by a two-character code of the form Zz. The first character, an uppercase letter, specifies the addressing method; the second character, a lower-case letter, specifies the type of operand.

# A.2.1 Codes for Addressing Method

The following abbreviations are used to document addressing methods:

- A Direct address: the instruction has no ModR/M byte; the address of the operand is encoded in the instruction. No base register, index register, or scaling factor can be applied (for example, far JMP (EA)).
- C The reg field of the ModR/M byte selects a control register (for example, MOV (0F20, 0F22)).
- D The reg field of the ModR/M byte selects a debug register (for example, MOV (0F21,0F23)).
- E A ModR/M byte follows the opcode and specifies the operand. The operand is either a general-purpose register or a memory address. If it is a memory address, the address is computed from a segment register and any of the following values: a base register, an index register, a scaling factor, a displacement.
- F EFLAGS/RFLAGS Register.
- G The reg field of the ModR/M byte selects a general register (for example, AX (000)).
- I Immediate data: the operand value is encoded in subsequent bytes of the instruction.
- J The instruction contains a relative offset to be added to the instruction pointer register (for example, JMP (0E9), LOOP).
- M The ModR/M byte may refer only to memory (for example, BOUND, LES, LDS, LSS, LFS, LGS, CMPXCHG8B).
- N The R/M field of the ModR/M byte selects a packed-quadword, MMX technology register.
- O The instruction has no ModR/M byte. The offset of the operand is coded as a word or double word (depending on address size attribute) in the instruction. No base register, index register, or scaling factor can be applied (for example, MOV (A0–A3)).

- P The reg field of the ModR/M byte selects a packed quadword MMX technology register.
- A ModR/M byte follows the opcode and specifies the operand. The operand is either an MMX technology register or a memory address. If it is a memory address, the address is computed from a segment register and any of the following values: a base register, an index register, a scaling factor, and a displacement.
- R The R/M field of the ModR/M byte may refer only to a general register (for example, MOV (0F20-0F23)).
- S The reg field of the ModR/M byte selects a segment register (for example, MOV (8C,8E)).
- U The R/M field of the ModR/M byte selects a 128-bit XMM register.
- V The reg field of the ModR/M byte selects a 128-bit XMM register.
- W A ModR/M byte follows the opcode and specifies the operand. The operand is either a 128-bit XMM register or a memory address. If it is a memory address, the address is computed from a segment register and any of the following values: a base register, an index register, a scaling factor, and a displacement.
- X Memory addressed by the DS:rSI register pair (for example, MOVS, CMPS, OUTS, or LODS).
- Y Memory addressed by the ES:rDI register pair (for example, MOVS, CMPS, INS, STOS, or SCAS).

# A.2.2 Codes for Operand Type

The following abbreviations are used to document operand types:

- a Two one-word operands in memory or two double-word operands in memory, depending on operand-size attribute (used only by the BOUND instruction).
- b Byte, regardless of operand-size attribute.
- c Byte or word, depending on operand-size attribute.
- d Doubleword, regardless of operand-size attribute.
- dq Double-quadword, regardless of operand-size attribute.
- p 32-bit, 48-bit, or 80-bit pointer, depending on operand-size attribute.
- pd 128-bit packed double-precision floating-point data.
- pi Quadword MMX technology register (for example: mm0).
- ps 128-bit packed single-precision floating-point data.
- q Quadword, regardless of operand-size attribute.
- s 6-byte or 10-byte pseudo-descriptor.
- ss Scalar element of a 128-bit packed single-precision floating data.

- si Doubleword integer register (for example: eax).
- v Word, doubleword or quadword (in 64-bit mode), depending on operand-size attribute.
- w Word, regardless of operand-size attribute.
- z Word for 16-bit operand-size or doubleword for 32 or 64-bit operand-size.

# A.2.3 Register Codes

When an opcode requires a specific register as an operand, the register is identified by name (for example, AX, CL, or ESI). The name indicates whether the register is 64, 32, 16, or 8 bits wide.

A register identifier of the form eXX or rXX is used when register width depends on the operand-size attribute. eXX is used when 16 or 32-bit sizes are possible; rXX is used when 16, 32, or 64-bit sizes are possible. For example: eAX indicates that the AX register is used when the operand-size attribute is 16 and the EAX register is used when the operand-size attribute is 32. rAX can indicate AX, EAX or RAX.

When the REX.B bit is used to modify the register specified in the reg field of the opcode, this fact is indicated by adding "/x" to the register name to indicate the additional possibility. For example, rCX/r9 is used to indicate that the register could either be rCX or r9. Note that the size of r9 in this case is determined by the operand size attribute (just as for rCX).

# A.2.4 Opcode Look-up Examples for One, Two, and Three-Byte Opcodes

This section provides examples that demonstrate how opcode maps are used.

# A.2.4.1 One-Byte Opcode Instructions

The opcode map for 1-byte opcodes is shown in Table A-2. The opcode map for 1-byte opcodes is arranged by row (the least-significant 4 bits of the hexadecimal value) and column (the most-significant 4 bits of the hexadecimal value). Each entry in the table lists one of the following types of opcodes:

- Instruction mnemonics and operand types using the notations listed in Section A.2
- Opcodes used as an instruction prefix

For each entry in the opcode map that corresponds to an instruction, the rules for interpreting the byte following the primary opcode fall into one of the following cases:

• A ModR/M byte is required and is interpreted according to the abbreviations listed in Section A.1 and Chapter 2, "Instruction Format," of the *Intel*® 64 and IA-32

Architectures Software Developer's Manual, Volume 2A. Operand types are listed according to notations listed in Section A.2.

- A ModR/M byte is required and includes an opcode extension in the reg field in the ModR/M byte. Use Table A-6 when interpreting the ModR/M byte.
- Use of the ModR/M byte is reserved or undefined. This applies to entries that represent an instruction prefix or entries for instructions without operands that use ModR/M (for example: 60H, PUSHA; 06H, PUSH ES).

## Example A-1. Look-up Example for 1-Byte Opcodes

Opcode 03050000000H for an ADD instruction is interpreted using the 1-byte opcode map (Table A-2) as follows:

- The first digit (0) of the opcode indicates the table row and the second digit (3) indicates the table column. This locates an opcode for ADD with two operands.
- The first operand (type Gv) indicates a general register that is a word or doubleword depending on the operand-size attribute. The second operand (type Ev) indicates a ModR/M byte follows that specifies whether the operand is a word or doubleword general-purpose register or a memory address.
- The ModR/M byte for this instruction is 05H, indicating that a 32-bit displacement follows (0000000H). The reg/opcode portion of the ModR/M byte (bits 3-5) is 000, indicating the EAX register.

The instruction for this opcode is ADD EAX, mem\_op, and the offset of mem\_op is 00000000H.

Some 1- and 2-byte opcodes point to group numbers (shaded entries in the opcode map table). Group numbers indicate that the instruction uses the reg/opcode bits in the ModR/M byte as an opcode extension (refer to Section A.4).

# A.2.4.2 Two-Byte Opcode Instructions

The two-byte opcode map shown in Table A-3 includes primary opcodes that are either two bytes or three bytes in length. Primary opcodes that are 2 bytes in length begin with an escape opcode 0FH. The upper and lower four bits of the second opcode byte are used to index a particular row and column in Table A-3.

Two-byte opcodes that are 3 bytes in length begin with a mandatory prefix (66H, F2H, or F3H) and the escape opcode (0FH). The upper and lower four bits of the third byte are used to index a particular row and column in Table A-3 (except when the second opcode byte is the 3-byte escape opcodes 38H or 3AH; in this situation refer to Section A.2.4.3).

For each entry in the opcode map, the rules for interpreting the byte following the primary opcode fall into one of the following cases:

• A ModR/M byte is required and is interpreted according to the abbreviations listed in Section A.1 and Chapter 2, "Instruction Format," of the Intel® 64 and IA-32 Architectures Software Developer's Manual, Volume 2A. The operand types are listed according to notations listed in Section A.2.

- A ModR/M byte is required and includes an opcode extension in the reg field in the ModR/M byte. Use Table A-6 when interpreting the ModR/M byte.
- Use of the ModR/M byte is reserved or undefined. This applies to entries that represent an instruction without operands that are encoded using ModR/M (for example: 0F77H, EMMS).

## Example A-2. Look-up Example for 2-Byte Opcodes

Look-up opcode 0FA4050000000003H for a SHLD instruction using Table A-3.

- The opcode is located in row A, column 4. The location indicates a SHLD instruction with operands Ev, Gv, and Ib. Interpret the operands as follows:
  - Ev: The ModR/M byte follows the opcode to specify a word or doubleword operand.
  - Gv: The reg field of the ModR/M byte selects a general-purpose register.
  - Ib: Immediate data is encoded in the subsequent byte of the instruction.
- The third byte is the ModR/M byte (05H). The mod and opcode/reg fields of ModR/M indicate that a 32-bit displacement is used to locate the first operand in memory and eAX as the second operand.
- The next part of the opcode is the 32-bit displacement for the destination memory operand (0000000H). The last byte stores immediate byte that provides the count of the shift (03H).
- By this breakdown, it has been shown that this opcode represents the instruction: SHLD DS:00000000H, EAX, 3.

# A.2.4.3 Three-Byte Opcode Instructions

The three-byte opcode maps shown in Table A-4 and Table A-5 includes primary opcodes that are either 3 or 4 bytes in length. Primary opcodes that are 3 bytes in length begin with two escape bytes 0F38H or 0F3A. The upper and lower four bits of the third opcode byte are used to index a particular row and column in Table A-4 or Table A-5.

Three-byte opcodes that are 4 bytes in length begin with a mandatory prefix (66H, F2H, or F3H) and two escape bytes (0F38H or 0F3AH). The upper and lower four bits of the fourth byte are used to index a particular row and column in Table A-4 or Table A-5.

For each entry in the opcode map, the rules for interpreting the byte following the primary opcode fall into the following case:

• A ModR/M byte is required and is interpreted according to the abbreviations listed in A.1 and Chapter 2, "Instruction Format," of the Intel® 64 and IA-32 Architectures Software Developer's Manual, Volume 2A. The operand types are listed according to notations listed in Section A.2.

## Example A-3. Look-up Example for 3-Byte Opcodes

Look-up opcode 660F3A0FC108H for a PALIGNR instruction using Table A-5.

- 66H is a prefix and 0F3AH indicate to use Table A-5. The opcode is located in row 0, column F indicating a PALIGNR instruction with operands Vdq, Wdq, and Ib. Interpret the operands as follows:
  - Vdq: The reg field of the ModR/M byte selects a 128-bit XMM register.
  - Wdq: The R/M field of the ModR/M byte selects either a 128-bit XMM register or memory location.
  - Ib: Immediate data is encoded in the subsequent byte of the instruction.
- The next byte is the ModR/M byte (C1H). The reg field indicates that the first operand is XMM0. The mod shows that the R/M field specifies a register and the R/M indicates that the second operand is XMM1.
- The last byte is the immediate byte (08H).
- By this breakdown, it has been shown that this opcode represents the instruction: PALIGNR XMM0, XMM1, 8.

# A.2.5 Superscripts Utilized in Opcode Tables

Table A-1 contains notes on particular encodings. These notes are indicated in the following opcode maps by superscripts. Gray cells indicate instruction groupings.

Table A-1. Superscripts Utilized in Opcode Tables

Superscript Symbol	Meaning of Symbol
1A	Bits 5, 4, and 3 of ModR/M byte used as an opcode extension (refer to Section A.4, "Opcode Extensions For One-Byte And Two-byte Opcodes").
1B	Use the OFOB opcode (UD2 instruction) or the OFB9H opcode when deliberately trying to generate an invalid opcode exception (#UD).
10	Some instructions added in the Pentium III processor may use the same two- byte opcode. If the instruction has variations, or the opcode represents different instructions, the ModR/M byte will be used to differentiate the instruction. For the value of the ModR/M byte needed to decode the instruction, see Table A-6.  These instructions include SFENCE, STMXCSR, LDMXCSR, FXRSTOR, and
	FXSAVE, as well as PREFETCH and its variations.
i64	The instruction is invalid or not encodable in 64-bit mode. 40 through 4F (single-byte INC and DEC) are REX prefix combinations when in 64-bit mode (use FE/FF Grp 4 and 5 for INC and DEC).
o64	Instruction is only available when in 64-bit mode.
d64	When in 64-bit mode, instruction defaults to 64-bit operand size and cannot encode 32-bit operand size.

Table A-1. Superscripts Utilized in Opcode Tables

Superscript Symbol	Meaning of Symbol
f64	The operand size is forced to a 64-bit operand size when in 64-bit mode (prefixes that change operand size are ignored for this instruction in 64-bit mode).

# A.3 ONE, TWO, AND THREE-BYTE OPCODE MAPS

See Table A-2 through Table A-5 below. The tables are multiple page presentations. Rows and columns with sequential relationships are placed on facing pages to make look-up tasks easier. Note that table footnotes are not presented on each page. Table footnotes for each table are presented on the last page of the table.

This page intentionally left blank

Table A-2. One-byte Opcode Map: (00H - F7H)  $^{\star}$ 

	0	1	2	3	4	5	6	7
0			AD	D			PUSH ES <sup>i64</sup>	POP ES <sup>i64</sup>
	Eb, Gb	Ev, Gv	Gb, Eb	Gv, Ev	AL, Ib	rAX, Iz	ES	E9.
1			AD	С			PUSH SS <sup>i64</sup>	POP SS <sup>i64</sup>
	Eb, Gb	Ev, Gv	Gb, Eb	Gv, Ev	AL, Ib	rAX, Iz	55.01	55.*.
2			AN	D			SEG=ES	DAA <sup>i64</sup>
	Eb, Gb	Ev, Gv	Gb, Eb	Gv, Ev	AL, Ib	rAX, Iz	(Prefix)	
3		·	XC	R	•	•	SEG=SS	AAA <sup>i64</sup>
	Eb, Gb	Ev, Gv	Gb, Eb	Gv, Ev	AL, Ib	rAX, Iz	(Prefix)	
4		ı	INC	<sup>64</sup> general regis	iter / REX <sup>064</sup> Pr	refixes	1	,
	eAX REX	eCX REX.B	eDX REX.X	eBX REX.XB	eSP REX.R	eBP REX.RB	eSI REX.RX	eDI REX.RXB
5				PUSH <sup>d64</sup> ge	eneral register			
	rAX/r8	rCX/r9	rDX/r10	rBX/r11	rSP/r12	rBP/r13	rSI/r14	rDI/r15
6	PUSHA <sup>i64</sup> / PUSHAD <sup>i64</sup>	POPA <sup>i64</sup> / POPAD <sup>i64</sup>	BOUND <sup>i64</sup>	ARPL <sup>i64</sup>	SEG=FS	SEG=GS	Operand	Address
	PUSHAD	POPAD	Gv, Ma	Ew, Gw MOVSXD <sup>064</sup> Gv, Ev	(Prefix)	(Prefix)	Size (Prefix)	Size (Prefix)
7			Jcc <sup>f64</sup> , J	,	acement jump on condition			
	0	NO	B/NAE/C	NB/AE/NC	Z/E	NZ/NE	BE/NA	NBE/A
8		Immediat	e Grp 1 <sup>1A</sup>		TE	ST	χ	CHG
	Eb, Ib	Ev, Iz	Eb, Ib <sup>i64</sup>	Ev, Ib	Eb, Gb	Ev, Gv	Eb, Gb	Ev, Gv
9	NOP		XCH	G word, double	-word or quad-\	word register wit	th rAX	
	PAUSE(F3) XCHG r8, rAX	rCX/r9	rDX/r10	rBX/r11	rSP/r12	rBP/r13	rSI/r14	rDI/r15
Α		M	OV		MOVS/B	MOVS/W/D/Q	CMPS/B	CMPS/W/D
	AL, Ob	rAX, Ov	Ob, AL	Ov, rAX	Xb, Yb	Xv, Yv	Xb, Yb	Xv, Yv
В			Ì	V immediate by		1	, ,	,
	AL/R8L, lb	CL/R9L, Ib	DL/R10L, lb	BL/R11L, Ib	AH/R12L, Ib	CH/R13L, lb	DH/R14L, lb	BH/R15L, lb
С	Shift G		RETN <sup>f64</sup> lw	RETN <sup>f64</sup>	LES <sup>i64</sup> Gz, Mp	LDS <sup>i64</sup> Gz, Mp	•	<sup>1A</sup> - MOV
	Eb, Ib	Ev, Ib			•		Eb, lb	Ev, Iz
D			Grp 2 <sup>1A</sup>	_	AAM <sup>i64</sup> Ib	AAD <sup>i64</sup> lb		XLAT/ XLATB
	Eb, 1	Ev, 1	Eb, CL	Ev, CL				,
Е	LOOPNE <sup>f64</sup> / LOOPE <sup>f64</sup> /		LOOP <sup>f64</sup>	JrCXZ <sup>f64</sup> /		N	C	DUT
	LOOPNZ <sup>f64</sup> Jb	LOOPZ <sup>f64</sup> Jb	Jb	Jb	AL, Ib	eAX, Ib	lb, AL	Ib, eAX
F	LOCK		REPNE	REP/REPE	HLT	CMC	Unary	Grp 3 <sup>1A</sup>
	(Prefix)		(Prefix)	(Prefix)			Eb	Ev

Table A-2. One-byte Opcode Map: (08H - FFH)  $^{\star}$ 

	8	9	Α	В	С	D	Е	F
0	Eb, Gb	Ev, Gv	O Gb, Eb	R Gv, Ev	AL, Ib	rAX, Iz	PUSH CS <sup>i64</sup>	2-byte escape (Table A-3)
1	Eb, Gb	Ev, Gv	St Gb, Eb	Gv, Ev	AL, Ib	rAX, Iz	PUSH DS <sup>i64</sup>	POP DS <sup>i64</sup>
2	Eb, Gb	Ev, Gv	St Gb, Eb	JB Gv, Ev	AL, Ib	rAX, Iz	SEG=CS (Prefix)	DAS <sup>i64</sup>
3	Eb, Gb	Ev, Gv	CN Gb, Eb	MP Gv, Ev	AL, Ib	rAX, Iz	SEG=DS (Prefix)	AAS <sup>i64</sup>
4	,	,	DEC <sup>it</sup>	64 general regis	ter / REX <sup>064</sup> Pr	efixes		
	eAX REX.W	eCX REX.WB	eDX REX.WX	eBX REX.WXB	eSP REX.WR	eBP REX.WRB	eSI REX.WRX	eDI REX.WRXB
5				POP <sup>d64</sup> into g	eneral register	•		
	rAX/r8	rCX/r9	rDX/r10	rBX/r11	rSP/r12	rBP/r13	rSI/r14	rDI/r15
6	PUSH <sup>d64</sup> Iz	IMUL Gv, Ev, Iz	PUSH <sup>d64</sup> lb	IMUL Gv, Ev, Ib	INS/ INSB Yb, DX	INS/ INSW/ INSD Yz, DX	OUTS/ OUTSB DX, Xb	OUTS/ OUTSW/ OUTSD DX, Xz
7			Jcc <sup>f64</sup> , Jl	b- Short displac	ement jump on	condition		•
	S	NS	P/PE	NP/PO	L/NGE	NL/GE	LE/NG	NLE/G
8		MC	OV		MOV	LEA	MOV	Grp 1A <sup>1A</sup> POP <sup>d64</sup> Ev
	Eb, Gb	Ev, Gv	Gb, Eb	Gv, Ev	Ev, Sw	Gv, M	Sw, Ew	POPaga EV
9	CBW/ CWDE/ CDQE	CWD/ CDQ/ CQO	CALLF <sup>i64</sup> Ap	FWAIT/ WAIT	PUSHF/D/Q d64/ Fv	POPF/D/Q d64/ Fv	SAHF	LAHF
Α	TE AL, Ib	ST rAX, Iz	STOS/B Yb, AL	STOS/W/D/Q Yv, rAX	LODS/B AL, Xb	LODS/W/D/Q rAX, Xv	SCAS/B AL, Yb	SCAS/W/D/Q rAX, Xv
В		MC	OV immediate v	vord or double in	nto word, double	e, or quad regis	ter	
	rAX/r8, Iv	rCX/r9, Iv	rDX/r10, Iv	rBX/r11, lv	rSP/r12, Iv	rBP/r13, lv	rSI/r14, Iv	rDI/r15 , Iv
С	ENTER	LEAVE <sup>d64</sup>	RETF	RETF	INT 3	INT	INTO <sup>i64</sup>	IRET/D/Q
	lw, lb		lw			lb		
D			ESC (E	Escape to copro	cessor instructi	on set)		
Е	CALL <sup>f64</sup>		JMP		I IN		0	L UT
	Jz	near <sup>f64</sup> Jz	far <sup>i64</sup> AP	short <sup>f64</sup> Jb	AL, DX	eAX, DX	DX, AL	DX, eAX
F	CLC	STC	CLI	STI	CLD	STD	INC/DEC Grp 4 <sup>1A</sup>	INC/DEC Grp 5 <sup>1A</sup>

<sup>\*</sup> All blanks in all opcode maps are reserved and must not be used. Do not depend on the operation of undefined or reserved locations.

Table A-3. Two-byte Opcode Map: 00H - 77H (First Byte is 0FH) \*

	0	1	2	3	4	5	6	7
0	Grp 6 <sup>1A</sup>	Grp 7 <sup>1A</sup>	LAR Gv, Ew	LSL Gv, Ew		SYSCALL <sup>064</sup>	CLTS	SYSRET <sup>064</sup>
1	movups Vps, Wps movss (F3) Vss, Wss movupd (66) Vpd, Wpd movsd (F2) Vsd, Wsd	movups Wps, Vps movss (F3) Wss, Vss movupd (66) Wpd, Vpd movsd (F2) Wsd, Vsd	movlps Vq, Mq movlpd (66) Vq, Mq movhlps Vq, Uq movddup(F2) Vq, Wq movsldup(F3) Vq, Wq	movlps Mq, Vq movlpd (66) Mq, Vq	unpcklps Vps, Wq unpcklpd(66) Vpd, Wq	unpckhps Vps, Wq unpckhpd (66) Vpd, Wq	movhps Vq, Mq movhpd (66) Vq, Mq movlhps Vq, Uq movshdup(F3) Vq, Wq	movhps Mq, Vq movhpd(66) Mq, Vq
2	MOV Rd, Cd	MOV Rd, Dd	MOV Cd, Rd	MOV Dd, Rd				
3	WRMSR	RDTSC	RDMSR	RDPMC	SYSENTER	SYSEXIT		GETSEC
4			CN	MOVcc, (Gv, Ev)	- Conditional Mo	ve		
	0	NO	B/C/NAE	AE/NB/NC	E/Z	NE/NZ	BE/NA	A/NBE
5	movmskps Gd/q, Ups movmskpd (66)Gd/q,Upd	sqrtps Vps, Wps sqrtss (F3) Vss, Wss sqrtpd (66) Vpd, Wpd sqrtsd (F2) Vsd, Wsd	rsqrtps Vps, Wps rsqrtss (F3) Vss, Wss	rcpps Vps, Wps rcpss (F3) Vss, Wss	andps Vps, Wps andpd (66) Vpd, Wpd	andnps Vps, Wps andnpd (66) Vpd, Wpd	orps Vps, Wps orpd (66) Vpd, Wpd	xorps Vps, Wps xorpd (66) Vpd, Wpd
6	punpcklbw Pq, Qd punpcklbw (66) Vdq, Wdq	punpcklwd Pq, Qd punpcklwd (66) Vdq, Wdq	Vdq, Wdq	Vdq, Wdq	pcmpgtb Pq, Qq pcmpgtb (66) Vdq, Wdq	pcmpgtw Pq, Qq pcmpgtw(66) Vdq, Wdq	pcmpgtd Pq, Qq pcmpgtd (66) Vdq, Wdq	packuswb Pq, Qq packuswb(66) Vdq, Wdq
7	pshufw Pq, Qq, lb pshufd (66) Vdq,Wdq,lb pshufhw(F3) Vdq,Wdq,lb pshuflw (F2) Vdq Wdq,lb	(Grp 12 <sup>1A</sup> )	(Grp 13 <sup>1A</sup> )	(Grp 14 <sup>1A</sup> )	pcmpeqb Pq, Qq pcmpeqb (66) Vdq, Wdq	pcmpeqw Pq, Qq pcmpeqw (66) Vdq, Wdq	pcmpeqd Pq, Qq pcmpeqd (66) Vdq, Wdq	emms

# Table A-3. Two-byte Opcode Map: 08H - 7FH (First Byte is 0FH) \*

	8	9	А	В	С	D	Е	F
0	INVD	WBINVD		2-byte Illegal Opcodes UD2 <sup>1B</sup>		NOP Ev		
1	Prefetch <sup>1C</sup> (Grp 16 <sup>1A</sup> )							NOP Ev
2	movaps Vps, Wps movapd (66) Vpd, Wpd	movaps Wps, Vps movapd (66) Wpd, Vpd	cvtpi2ps Vps, Qpi cvtsi2ss (F3) Vss, Ed/q cvtpi2pd (66) Vpd, Qpi cvtsi2sd (F2) Vsd, Ed/q	movntps Mps, Vps movntpd(66) Mpd, Vpd	cvttps2pi Ppi, Wps cvttss2si (F3) Gd/q, Wss cvttpd2pi (66) Ppi, Wpd cvttsd2si (F2) Gd/q, Wsd	cvtps2pi Ppi, Wps cvtss2si (F3) Gd/q, Wss cvtpd2pi (66) Qpi, Wpd cvtsd2si (F2) Gd/q, Wsd	ucomiss Vss, Wss ucomisd (66) Vsd, Wsd	comiss Vss, Wss comisd (66) Vsd, Wsd
3	3-byte escape (Table A-4)		3-byte escape (Table A-5)					
4		•	C	MOVcc(Gv, Ev) -	Conditional Mo	ve	•	
	S	NS	P/PE	NP/PO	L/NGE	NL/GE	LE/NG	NLE/G
5	addps Vps, Wps addss (F3) Vss, Wss addpd (66) Vpd, Wpd addsd (F2) Vsd, Wsd	mulps Vps, Wps mulss (F3) Vss, Wss mulpd (66) Vpd, Wpd mulsd (F2) Vsd, Wsd	cvtps2pd Vpd, Wps cvtss2sd(F3) Vsd, Wss cvtpd2ps(66) Vps, Wpd cvtsd2ss(F2) Vsd, Wsd	cvtdq2ps Vps, Wdq cvtps2dq(66) Vdq, Wps cvttps2dq(F3) Vdq, Wps	subps Vps, Wps subss (F3) Vss, Wss subpd (66) Vpd, Wpd subsd (F2) Vsd, Wsd	minps Vps, Wps minss (F3) Vss, Wss minpd (66) Vpd, Wpd minsd (F2) Vsd, Wsd	divps Vps, Wps divss (F3) Vss, Wss divpd (66) Vpd, Wpd divsd (F2) Vsd, Wsd	maxps Vps, Wps maxss (F3) Vss, Wss maxpd (66) Vpd, Wpd maxsd (F2) Vsd, Wsd
6	punpckhbw Pq, Qd punpckhbw (66) Vdq, Wdq	punpckhwd Pq, Qd punpckhwd (66) Vdq, Wdq	punpckhdq Pq, Qd punpckhdq (66) Vdq, Wdq	packssdw Pq, Qd packssdw (66) Vdq, Wdq	punpcklqdq (66) Vdq, Wdq	punpckhqdq (66) Vdq, Wdq	movd/q/ Pd, Ed/q movd/q (66) Vdq, Ed/q	movq Pq, Qq movdqa (66) Vdq, Wdq movdqu (F3) Vdq, Wdq
7	VMREAD Ed/q, Gd/q	VMWRITE Gd/q, Ed/q			haddps(F2) Vps, Wps haddpd(66) Vpd, Wpd	hsubps(F2) Vps, Wps hsubpd(66) Vpd, Wpd	movd/q Ed/q, Pd movd/q (66) Ed/q, Vdq movq (F3) Vq, Wq	movq Qq, Pq movdqa (66) Wdq, Vdq movdqu (F3) Wdq, Vdq

Table A-3. Two-byte Opcode Map: 80H - F7H (First Byte is 0FH)  $^{\star}$ 

	0	1	2	3	4	5	6	7
8			Jcc <sup>f64</sup> , Jz	z - Long-displace	ement jump on co	ndition		
	0	NO	B/CNAE	AE/NB/NC	E/Z	NE/NZ	BE/NA	A/NBE
9			S	ETcc, Eb - Byte	Set on condition			
	0	NO	B/C/NAE	AE/NB/NC	E/Z	NE/NZ	BE/NA	A/NBE
Α	PUSH <sup>d64</sup> FS	POP <sup>d64</sup> FS	CPUID	BT Ev, Gv	SHLD Ev, Gv, Ib	SHLD Ev, Gv, CL		
В	CMPXCHG		LSS	BTR	LFS	LGS	MO	VZX
	Eb, Gb	Ev, Gv	Gv, Mp	Ev, Gv	Gv, Mp	Gv, Mp	Gv, Eb	Gv, Ew
С	XADD Eb, Gb	XADD Ev, Gv	cmpps Vps, Wps, Ib cmpss (F3) Vss, Wss, Ib cmppd (66) Vpd, Wpd, Ib cmpsd (F2) Vsd, Wsd, Ib	movnti Md/q, Gd/q	pinsrw Pq,Rd/q/Mw,Ib pinsrw (66) Vdq,Rd/q/Mw,Ib	pextrw Gd, Nq, Ib pextrw (66) Gd, Udq, Ib	shufps Vps, Wps, Ib shufpd (66) Vpd, Wpd, Ib	Grp 9 <sup>1A</sup>
D	addsubps(F2) Vps, Wps addsubpd(66) Vpd, Wpd	psrlw Pq, Qq psrlw (66) Vdq, Wdq	psrld Pq, Qq psrld (66) Vdq, Wdq	psrlq Pq, Qq psrlq (66) Vdq, Wdq	paddq Pq, Qq paddq (66) Vdq, Wdq	pmullw Pq, Qq pmullw (66) Vdq, Wdq	movq (66) Wq, Vq movq2dq (F3) Vdq, Nq movdq2q (F2) Pq, Uq	pmovmskb Gd, Nq pmovmskb(66) Gd, Udq
E	pavgb Pq, Qq pavgb (66) Vdq, Wdq	psraw Pq, Qq psraw (66) Vdq, Wdq	psrad Pq, Qq psrad (66) Vdq, Wdq	pavgw Pq, Qq pavgw (66) Vdq, Wdq	pmulhuw Pq, Qq pmulhuw(66) Vdq, Wdq	pmulhw Pq, Qq pmulhw (66) Vdq, Wdq	cvtpd2dq (F2) Vdq, Wpd cvttpd2dq(66) Vdq, Wpd cvtdq2pd (F3) Vpd, Wdq	movntq Mq, Pq movntdq (66) Mdq, Vdq
F	lddqu (F2) Vdq, Mdq	psllw Pq, Qq psllw (66) Vdq, Wdq	pslld Pq, Qq pslld (66) Vdq, Wdq	psllq Pq, Qq psllq (66) Vdq, Wdq	pmuludq Pq, Qq pmuludq (66) Vdq, Wdq	pmaddwd Pq, Qq pmaddwd(66) Vdq, Wdq	psadbw Pq, Qq psadbw (66) Vdq, Wdq	maskmovq Pq, Nq maskmovdqu (66) Vdq,Udq

Table A-3. Two-byte Opcode Map: 88H — FFH (First Byte is 0FH) \*

	8	9	Α	В	С	D	Е	F
8			Jcc <sup>f64</sup> , v	Jz - Long-displad	ement jump on	condition		
	S	NS	P/PE	NP/PO	L/NGE	NL/GE	LE/NG	NLE/G
9			:	SETcc, Eb - Byte	Set on conditio	n		
	S	NS	P/PE	NP/PO	L/NGE	NL/GE	LE/NG	NLE/G
Α	PUSH <sup>d64</sup> GS	POP <sup>d64</sup> GS	RSM	BTS Ev, Gv	SHRD Ev, Gv, Ib	SHRD Ev, Gv, CL	(Grp 15 <sup>1A</sup> ) <sup>1C</sup>	IMUL Gv, Ev
В	JMPE (reserved for emulator on IPF) POPCNT (F3) Gv, Ev	Grp 10 <sup>1A</sup> Invalid Opcode <sup>1B</sup>	Grp 8 <sup>1A</sup> Ev, lb	BTC Ev, Gv	BSF Gv, Ev	BSR Gv, Ev	MO Gv, Eb	VSX Gv, Ew
С				BS	WAP			
	RAX/EAX/ R8/R8D	RCX/ECX/ R9/R9D	RDX/EDX/ R10/R10D	RBX/EBX/ R11/R11D	RSP/ESP/ R12/R12D	RBP/EBP/ R13/R13D	RSI/ESI/ R14/R14D	RDI/EDI/ R15/R15D
D	psubusb Pq, Qq psubusb (66) Vdq, Wdq	psubusw Pq, Qq psubusw (66) Vdq, Wdq	pminub Pq, Qq pminub (66) Vdq, Wdq	pand Pq, Qq pand (66) Vdq, Wdq	paddusb Pq, Qq paddusb (66) Vdq, Wdq	paddusw Pq, Qq paddusw (66) Vdq, Wdq	pmaxub Pq, Qq pmaxub (66) Vdq, Wdq	pandn Pq, Qq pandn (66) Vdq, Wdq
Е	psubsb Pq, Qq psubsb (66) Vdq, Wdq	psubsw Pq, Qq psubsw (66) Vdq, Wdq	pminsw Pq, Qq pminsw (66) Vdq, Wdq	por Pq, Qq por (66) Vdq, Wdq	paddsb Pq, Qq paddsb (66) Vdq, Wdq	paddsw Pq, Qq paddsw (66) Vdq, Wdq	pmaxsw Pq, Qq pmaxsw (66) Vdq, Wdq	pxor Pq, Qq pxor (66) Vdq, Wdq
F	psubb Pq, Qq psubb (66) Vdq, Wdq	psubw Pq, Qq psubw (66) Vdq, Wdq	psubd Pq, Qq psubd (66) Vdq, Wdq	psubq Pq, Qq psubq (66) Vdq, Wdq	paddb Pq, Qq paddb (66) Vdq, Wdq	paddw Pq, Qq paddw (66) Vdq, Wdq	paddd Pq, Qq paddd (66) Vdq, Wdq	

<sup>\*</sup> All blanks in all opcode maps are reserved and must not be used. Do not depend on the operation of undefined or reserved locations.

Table A-4. Three-byte Opcode Map: 00H - F7H (First Two Bytes are 0F 38H) \*

	0	1	2	3	4	5	6	7
0	pshufb Pq, Qq pshufb (66) Vdq, Wdq	phaddw Pq, Qq phaddw (66) Vdq, Wdq	phaddd Pq, Qq phaddd (66) Vdq, Wdq	phaddsw Pq, Qq phaddsw(66) Vdq, Wdq	pmaddubsw Pq, Qq pmaddubsw (66)Vdq,Wdq	phsubw Pq, Qq phsubw (66) Vdq, Wdq	phsubd Pq, Qq phsubd (66) Vdq, Wdq	phsubsw Pq, Qq phsubsw (66) Vdq, Wdq
1	pblendvb(66) Vdq, Wdq				blendvps(66) Vdq, Wdq	blendvpd(66) Vdq, Wdq		ptest (66) Vdq, Wdq
2	pmovsxbw(66) Vdq, Udq/Mq	pmovsxbd(66) Vdq, Udq/Md	pmovsxbq(66) Vdq, Udq/Mw	pmovsxwd(66) Vdq, Udq/Mq	pmovsxwq(66) Vdq, Udq/Md	pmovsxdq(66) Vdq, Udq/Mq		
3	pmovzxbw(66) Vdq, Udq/Mq	pmovzxbd(66) Vdq, Udq/Md	pmovzxbq(66) Vdq, Udq/Mw	pmovzxwd(66) Vdq, Udq/Mq	pmovzxwq(66) Vdq, Udq/Md	pmovzxdq(66) Vdq, Udq/Mq		pcmpgtq (66) Vdq, Wdq
4	pmulld (66) Vdq, Wdq	phminposuw (66) Vdq, Wdq						
5								
6								
7								
8	NVEPT (66) Gd/q, Mdq	NVVPID (66) Gd/q, Mdq						
9								
Α								
В								
С								
D								
Е								
F	MOVBE Gv, Mv CRC32 (F2) Gd, Eb	MOVBE Mv, Gv CRC32 (F2) Gd, Ev						

Table A-4. Three-byte Opcode Map: 08H — FFH (First Two Bytes are 0F 38H) \*

	8	9	А	В	С	D	Е	F
0	psignb Pq, Qq psignb (66) Vdq, Wdq	psignw Pq, Qq psignw (66) Vdq, Wdq	psignd Pq, Qq psignd (66) Vdq, Wdq	pmulhrsw Pq, Qq pmulhrsw(66) Vdq, Wdq				
1					pabsb Pq, Qq pabsb (66) Vdq, Wdq	pabsw Pq, Qq pabsw (66) Vdq, Wdq	pabsd Pq, Qq pabsd (66) Vdq, Wdq	
2	pmuldq (66) Vdq, Wdq	pcmpeqq(66) Vdq, Wdq	movntdqa(66) Vdq,Mdq	packusdw(66) Vdq, Wdq				
3	pminsb (66) Vdq, Wdq	pminsd (66) Vdq, Wdq	pminuw (66) Vdq, Wdq	pminud (66) Vdq, Wdq	pmaxsb (66) Vdq, Wdq	pmaxsd (66) Vdq, Wdq	pmaxuw (66) Vdq, Wdq	pmaxud (66) Vdq, Wdq
4								
5								
6								
7								
8								
9								
Α								
В								
С								
D								
Е								
F								

<sup>\*</sup> All blanks in all opcode maps are reserved and must not be used. Do not depend on the operation of undefined or reserved locations.

Table A-5. Three-byte Opcode Map: 00H - F7H (First two bytes are 0F 3AH) \*

	0	1	2	3	4	5	6	7
0								
1					pextrb (66) Rd/Mb, Vdq, Ib	pextrw (66) Rd/Mw, Vdq, Ib	pextrd/pextrq (66) Ed/q, Vdq, Ib	extractps(66) Ed, Vdq, Ib
2	pinsrb (66) Vdq,Rd/q/Mb,Ib	insertps (66) Vdq,Udq/Md,Ib	pinsrd/pinsrq (66) Vdq, Ed/q, Ib					
3								
4	dpps (66) Vdq, Wdq, Ib	dppd (66) Vdq, Wdq, Ib	mpsadbw(66) Vdq, Wdq, Ib					
5								
6	pcmpestrm(66) Vdq, Wdq, Ib	pcmpestri(66) Vdq, Wdq, Ib	pcmpistrm(66) Vdq, Wdq, Ib	pcmpistri(66) Vdq, Wdq, Ib				
7								
8								
9								
Α								
В				·	-			
С		·	·	·				
D				<u> </u>		<u> </u>		
Е								
F								

Table A-5. Three-byte Opcode Map: 08H — FFH (First Two Bytes are 0F 3AH) \*

	8	9	А	В	С	D	Е	F
0	roundps(66) Vdq, Wdq, Ib	roundpd(66) Vdq, Wdq, Ib	roundss(66) Vss, Wss, Ib	roundsd(66) Vsd, Wsd, Ib	blendps(66) Vdq, Wdq, Ib	blendpd(66) Vdq, Wdq, Ib	pblendw(66) Vdq, Wdq, Ib	palignr Pq, Qq, Ib palignr(66) Vdq, Wdq, Ib
1								
2								
3								
4								
5								
6								
7								
8								
9								
Α								
В								
С								
D								
E								
F								

<sup>\*</sup> All blanks in all opcode maps are reserved and must not be used. Do not depend on the operation of undefined or reserved locations.

# A.4 OPCODE EXTENSIONS FOR ONE-BYTE AND TWO-BYTE OPCODES

Some 1-byte and 2-byte opcodes use bits 3-5 of the ModR/M byte (the nnn field in Figure A-1) as an extension of the opcode.



Figure A-1. ModR/M Byte nnn Field (Bits 5, 4, and 3)

Opcodes that have opcode extensions are indicated in Table A-6 and organized by group number. Group numbers (from 1 to 16, second column) provide a table entry point. The encoding for the r/m field for each instruction can be established using the third column of the table.

# A.4.1 Opcode Look-up Examples Using Opcode Extensions

An Example is provided below.

## Example A-3. Interpreting an ADD Instruction

An ADD instruction with a 1-byte opcode of 80H is a Group 1 instruction:

- Table A-6 indicates that the opcode extension field encoded in the ModR/M byte for this instruction is 000B.
- The r/m field can be encoded to access a register (11B) or a memory address using a specified addressing mode (for example: mem = 00B, 01B, 10B).

#### Example A-2. Looking Up 0F01C3H

Look up opcode 0F01C3 for a VMRESUME instruction by using Table A-2, Table A-3 and Table A-6:

- OF tells us that this instruction is in the 2-byte opcode map.
- 01 (row 0, column 1 in Table A-3) reveals that this opcode is in Group 7 of Table A-6.
- C3 is the ModR/M byte. The first two bits of C3 are 11B. This tells us to look at the second of the Group 7 rows in Table A-6.
- The Op/Reg bits [5,4,3] are 000B. This tells us to look in the 000 column for Group 7.
- Finally, the R/M bits [2,1,0] are 011B. This identifies the opcode as the VMRESUME instruction.

# A.4.2 Opcode Extension Tables

See Table A-6 below.

Table A-6. Opcode Extensions for One- and Two-byte Opcodes by Group Number \*

Opcode	Group	Mod 7,6	En	coding of	Bits 5,4	3 of the, parent		Byte (	bits 2,1,0	) in
			000	001	010	011	100	101	110	111
80-83	1	mem, 11B	ADD	OR	ADC	SBB	AND	SUB	XOR	CMP
8F	1A	mem, 11B	POP							
C0, C1 reg, imm D0, D1 reg, 1 D2, D3 reg, CL	2	mem, 11B	ROL	ROR	RCL	RCR	SHL/SAL	SHR		SAR
F6, F7	3	mem, 11B	TEST lb/lz		NOT	NEG	MUL AL/rAX	IMUL AL/rAX	DIV AL/rAX	IDIV AL/rAX
FE	4	mem, 11B	INC Eb	DEC Eb						
FF	5	mem, 11B	INC Ev	DEC Ev	CALLN <sup>f64</sup> Ev	CALLF Ep	JMPN <sup>f64</sup> Ev	JMPF Ep	PUSH <sup>d64</sup> Ev	
0F 00	6	mem, 11B	SLDT Rv/Mw	STR Rv/Mw	LLDT Ew	LTR Ew	VERR Ew	VERW Ew		
0F 01	7	mem	SGDT Ms	SIDT Ms	LGDT Ms	LIDT Ms	SMSW Mw/Rv		LMSW Ew	INVLPG Mb
		11B	VMCALL (001) VMLAUNCH (010) VMRESUME (011) VMXOFF (100)	MONITOR (000) MWAIT (001)	XGETBV (000) XSETBV (001)					SWAPGS 064 (000) RDTSCP (001)
0F BA	8	mem, 11B					ВТ	BTS	BTR	втс
0F C7	9	mem		CMPXCH8B Mq CMPXCHG16B Mdq					VMPTRLD Mq VMCLEAR (66) Mq VMXON (F3) Mq	VMPTRST Mq
		11B								
0F B9	10	mem								
		11B							_	
C6	11	mem, 11B	MOV Eb, lb							
C7		mem	MOV Ev. Iz							
		11B	Ev, Iz							

Table A-6. Opcode Extensions for One- and Two-byte Opcodes by Group Number \*

Opcode	Group	Mod 7,6	En	coding of	Bits 5,4	,3 of the parent		Byte (I	oits 2,1,0	) in
			000	001	010	011	100	101	110	111
0F 71	12	mem								
		11B			psrlw Nq, Ib psrlw (66) Udq, Ib		psraw Nq, Ib psraw (66) Udq, Ib		psllw Nq, lb psllw (66) Udq, lb	
0F 72	13	mem								
		11B			psrld Nq, Ib psrld (66) Udq, Ib		psrad Nq, lb psrad (66) Udq, lb		pslld Nq, lb pslld (66) Udq, lb	
0F 73	14	mem								
		11B			psrlq Nq, Ib psrlq (66) Udq, Ib	psrldq (66) Udq, Ib			psllq Nq, Ib psllq (66) Udq, Ib	pslldq (66) Udq, Ib
0F AE	15	mem	fxsave	fxrstor	Idmxcsr	stmxcsr	XSAVE	XRSTOR		clflush
		11B						Ifence	mfence	sfence
0F 18	16	mem	prefetch NTA	prefetch T0	prefetch T1	prefetch T2				
		11B								

<sup>\*</sup> All blanks in all opcode maps are reserved and must not be used. Do not depend on the operation of undefined or reserved locations.

## A.5 ESCAPE OPCODE INSTRUCTIONS

Opcode maps for coprocessor escape instruction opcodes (x87 floating-point instruction opcodes) are in Table A-7 through Table A-22. These maps are grouped by the first byte of the opcode, from D8-DF. Each of these opcodes has a ModR/M byte. If the ModR/M byte is within the range of 00H-BFH, bits 3-5 of the ModR/M byte are used as an opcode extension, similar to the technique used for 1-and 2-byte opcodes (see A.4). If the ModR/M byte is outside the range of 00H through BFH, the entire ModR/M byte is used as an opcode extension.

## A.5.1 Opcode Look-up Examples for Escape Instruction Opcodes

Examples are provided below.

#### Example A-5. Opcode with ModR/M Byte in the 00H through BFH Range

DD0504000000H can be interpreted as follows:

- The instruction encoded with this opcode can be located in Section . Since the ModR/M byte (05H) is within the 00H through BFH range, bits 3 through 5 (000) of this byte indicate the opcode for an FLD double-real instruction (see Table A-9).
- The double-real value to be loaded is at 00000004H (the 32-bit displacement that follows and belongs to this opcode).

#### Example A-3. Opcode with ModR/M Byte outside the 00H through BFH Range

D8C1H can be interpreted as follows:

- This example illustrates an opcode with a ModR/M byte outside the range of 00H through BFH. The instruction can be located in Section A.4.
- In Table A-8, the ModR/M byte C1H indicates row C, column 1 (the FADD instruction using ST(0), ST(1) as operands).

# A.5.2 Escape Opcode Instruction Tables

Tables are listed below.

## A.5.2.1 Escape Opcodes with D8 as First Byte

Table A-7 and A-8 contain maps for the escape instruction opcodes that begin with D8H. Table A-7 shows the map if the ModR/M byte is in the range of 00H-BFH. Here, the value of bits 3-5 (the nnn field in Figure A-1) selects the instruction.

Table A-7. D8 Opcode Map When ModR/M Byte is Within 00H to BFH \*

	nnn Field of ModR/M Byte (refer to Figure A.4)										
000B	000B         001B         010B         011B         100B         101B         110B         111B										
FADD single- real FCOM single- real FCOMP single- real FSUB single- FSUB single- real FDIVR single- real FDIVR single- real real FDIVR single- rea											

#### **NOTES:**

Table A-8 shows the map if the ModR/M byte is outside the range of 00H-BFH. Here, the first digit of the ModR/M byte selects the table row and the second digit selects the column.

Table A-8. D8 Opcode Map When ModR/M Byte is Outside 00H to BFH \*

	Table A-8. D8 Opcode Map when ModR/M Byte is outside our to BFH *											
	0	1	2	3	4	5	6	7				
С	FADD											
	ST(0),ST(0)	ST(0),ST(1)	ST(0),ST(2)	ST(0),ST(3)	ST(0),ST(4)	ST(0),ST(5)	ST(0),ST(6)	ST(0),ST(7)				
D	FCOM											
	ST(0),ST(0)	ST(0),ST(1)	ST(0),T(2)	ST(0),ST(3)	ST(0),ST(4)	ST(0),ST(5)	ST(0),ST(6)	ST(0),ST(7)				
Е	FSUB											
	ST(0),ST(0)	ST(0),ST(1)	ST(0),ST(2)	ST(0),ST(3)	ST(0),ST(4)	ST(0),ST(5)	ST(0),ST(6)	ST(0),ST(7)				
F				FD	IV							
	ST(0),ST(0)	ST(0),ST(1)	ST(0),ST(2)	ST(0),ST(3)	ST(0),ST(4)	ST(0),ST(5)	ST(0),ST(6)	ST(0),ST(7)				
	8	9	А	В	С	D	E	F				

	8	9	А	В	С	D	E	F				
С				FM	UL							
	ST(0),ST(0)	ST(0),ST(1)	ST(0),ST(2)	ST(0),ST(3)	ST(0),ST(4)	ST(0),ST(5)	ST(0),ST(6)	ST(0),ST(7)				
D				FCC	)MP							
	ST(0),ST(0)	ST(0),ST(1)	ST(0),T(2)	ST(0),ST(3)	ST(0),ST(4)	ST(0),ST(5)	ST(0),ST(6)	ST(0),ST(7)				
Е				FSU	JBR							
	ST(0),ST(0)	ST(0),ST(1)	ST(0),ST(2)	ST(0),ST(3)	ST(0),ST(4)	ST(0),ST(5)	ST(0),ST(6)	ST(0),ST(7)				
F	FDIVR											
	ST(0),ST(0)	ST(0),ST(1)	ST(0),ST(2)	ST(0),ST(3)	ST(0),ST(4)	ST(0),ST(5)	ST(0),ST(6)	ST(0),ST(7)				

#### **NOTES:**

\* All blanks in all opcode maps are reserved and must not be used. Do not depend on the operation of undefined or reserved locations.

<sup>\*</sup> All blanks in all opcode maps are reserved and must not be used. Do not depend on the operation of undefined or reserved locations.

## A.5.2.2 Escape Opcodes with D9 as First Byte

Table A-9 and A-10 contain maps for escape instruction opcodes that begin with D9H. Table A-9 shows the map if the ModR/M byte is in the range of 00H-BFH. Here, the value of bits 3-5 (the nnn field in Figure A-1) selects the instruction.

Table A-9. D9 Opcode Map When ModR/M Byte is Within 00H to BFH \*

	nnn Field of ModR/M Byte										
000B         001B         010B         011B         100B         101B         110B         111B											
FLD single-real		FST single-real	FSTP single-real	FLDENV 14/28 bytes	FLDCW 2 bytes	FSTENV 14/28 bytes	FSTCW 2 bytes				

#### **NOTES:**

\* All blanks in all opcode maps are reserved and must not be used. Do not depend on the operation of undefined or reserved locations.

Table A-10 shows the map if the ModR/M byte is outside the range of 00H-BFH. Here, the first digit of the ModR/M byte selects the table row and the second digit selects the column.

Table A-10. D9 Opcode Map When ModR/M Byte is Outside 00H to BFH \*

	0	1	2	3	4	5	6	7		
С		FLD								
	ST(0),ST(0)	ST(0),ST(1)	ST(0),ST(2)	ST(0),ST(3)	ST(0),ST(4)	ST(0),ST(5)	ST(0),ST(6)	ST(0),ST(7)		
D	FNOP									
Е	FCHS	FABS			FTST	FXAM				
F	F2XM1	FYL2X	FPTAN	FPATAN	FXTRACT	FPREM1	FDECSTP	FINCSTP		

	8	9	Α	В	С	D	E	F			
С		FXCH									
	ST(0),ST(0)	ST(0),ST(1)	ST(0),ST(2)	ST(0),ST(3)	ST(0),ST(4)	ST(0),ST(5)	ST(0),ST(6)	ST(0),ST(7)			
D											
Е	FLD1	FLDL2T	FLDL2E	FLDPI	FLDLG2	FLDLN2	FLDZ				
F	FPREM	FYL2XP1	FSQRT	FSINCOS	FRNDINT	FSCALE	FSIN	FCOS			

#### **NOTES:**

\* All blanks in all opcode maps are reserved and must not be used. Do not depend on the operation of undefined or reserved locations.

# A.5.2.3 Escape Opcodes with DA as First Byte

Table A-11 and A-12 contain maps for escape instruction opcodes that begin with DAH. Table A-11 shows the map if the ModR/M byte is in the range of 00H-BFH. Here, the value of bits 3-5 (the nnn field in Figure A-1) selects the instruction.

Table A-11. DA Opcode Map When ModR/M Byte is Within 00H to BFH \*

	nnn Field of ModR/M Byte									
000B	001B	010B	011B	100B	101B	110B	111B			
FIADD dword-integer	FIMUL dword-integer	FICOM dword-integer	FICOMP dword-integer	FISUB dword-integer	FISUBR dword-integer	FIDIV dword-integer	FIDIVR dword-integer			

#### NOTES:

Table A-11 shows the map if the ModR/M byte is outside the range of 00H-BFH. Here, the first digit of the ModR/M byte selects the table row and the second digit selects the column.

Table A-12. DA Opcode Map When ModR/M Byte is Outside 00H to BFH \*

	0	1	2	3	4	5	6	7			
С		FCMOVB									
	ST(0),ST(0)	ST(0),ST(1)	ST(0),ST(2)	ST(0),ST(3)	ST(0),ST(4)	ST(0),ST(5)	ST(0),ST(6)	ST(0),ST(7)			
D		FCMOVBE									
	ST(0),ST(0)	ST(0),ST(1)	ST(0),ST(2)	ST(0),ST(3)	ST(0),ST(4)	ST(0),ST(5)	ST(0),ST(6)	ST(0),ST(7)			
Е											
F											

	8	9	Α	В	С	D	E	F		
С	FCMOVE									
	ST(0),ST(0)	ST(0),ST(1)	ST(0),ST(2)	ST(0),ST(3)	ST(0),ST(4)	ST(0),ST(5)	ST(0),ST(6)	ST(0),ST(7)		
D		FCMOVU								
	ST(0),ST(0)	ST(0),ST(1)	ST(0),ST(2)	ST(0),ST(3)	ST(0),ST(4)	ST(0),ST(5)	ST(0),ST(6)	ST(0),ST(7)		
Е		FUCOMPP								
F										

<sup>\*</sup> All blanks in all opcode maps are reserved and must not be used. Do not depend on the operation of undefined or reserved locations.

<sup>\*</sup> All blanks in all opcode maps are reserved and must not be used. Do not depend on the operation of undefined or reserved locations.

## A.5.2.4 Escape Opcodes with DB as First Byte

Table A-13 and A-14 contain maps for escape instruction opcodes that begin with DBH. Table A-13 shows the map if the ModR/M byte is in the range of 00H-BFH. Here, the value of bits 3-5 (the nnn field in Figure A-1) selects the instruction.

Table A-13. DB Opcode Map When ModR/M Byte is Within 00H to BFH \*

			nnn Field of I	ModR/M Byte			
000B	001B	010B	011B	100B	101B	110B	111B
FILD dword-integer	FISTTP dword- integer	FIST dword-integer	FISTP dword-integer		FLD extended-real		FSTP extended-real

#### **NOTES:**

Table A-14 shows the map if the ModR/M byte is outside the range of 00H-BFH. Here, the first digit of the ModR/M byte selects the table row and the second digit selects the column.

Table A-14. DB Opcode Map When ModR/M Byte is Outside 00H to BFH \*

	0	1	2	3	4	5	6	7	
С				FCM	OVNB				
	ST(0),ST(0)	ST(0),ST(1)	ST(0),ST(2)	ST(0),ST(3)	ST(0),ST(4)	ST(0),ST(5)	ST(0),ST(6)	ST(0),ST(7)	
D	FCMOVNBE								
	ST(0),ST(0)	ST(0),ST(1)	ST(0),ST(2)	ST(0),ST(3)	ST(0),ST(4)	ST(0),ST(5)	ST(0),ST(6)	ST(0),ST(7)	
Е			FCLEX	FINIT					
F				FC	OMI				
	ST(0),ST(0)	ST(0),ST(1)	ST(0),ST(2)	ST(0),ST(3)	ST(0),ST(4)	ST(0),ST(5)	ST(0),ST(6)	ST(0),ST(7)	
	8	9	Α	В	С	D	E	F	
С				FCMC	OVNE				
	ST(0),ST(0)	ST(0),ST(1)	ST(0),ST(2)	ST(0),ST(3)	ST(0),ST(4)	ST(0),ST(5)	ST(0),ST(6)	ST(0),ST(7)	
D				FCMC	DVNU				
	ST(0),ST(0)	ST(0),ST(1)	ST(0),ST(2)	ST(0),ST(3)	ST(0),ST(4)	ST(0),ST(5)	ST(0),ST(6)	ST(0),ST(7)	
Е				FUC	OMI				
	ST(0),ST(0)	ST(0),ST(1)	ST(0),ST(2)	ST(0),ST(3)	ST(0),ST(4)	ST(0),ST(5)	ST(0),ST(6)	ST(0),ST(7)	
F									

<sup>\*</sup> All blanks in all opcode maps are reserved and must not be used. Do not depend on the operation of undefined or reserved locations.

<sup>\*</sup> All blanks in all opcode maps are reserved and must not be used. Do not depend on the operation of undefined or reserved locations.

## A.5.2.5 Escape Opcodes with DC as First Byte

Table A-15 and A-16 contain maps for escape instruction opcodes that begin with DCH. Table A-15 shows the map if the ModR/M byte is in the range of 00H-BFH. Here, the value of bits 3-5 (the nnn field in Figure A-1) selects the instruction.

Table A-15. DC Opcode Map When ModR/M Byte is Within 00H to BFH \*

	nnn Field of ModR/M Byte (refer to Figure A-1)							
000B	001B	010B	011B	100B	101B	110B	111B	
FADD double- real	FMUL double- real	FCOM double-real	FCOMP double-real	FSUB double- real	FSUBR double-real	FDIV double- real	FDIVR double-real	

#### **NOTES:**

Table A-16 shows the map if the ModR/M byte is outside the range of 00H-BFH. In this case the first digit of the ModR/M byte selects the table row and the second digit selects the column.

Table A-16. DC Opcode Map When ModR/M Byte is Outside 00H to BFH \*

	0	1	2	3	4	5	6	7	
С				FA	DD				
	ST(0),ST(0)	ST(1),ST(0)	ST(2),ST(0)	ST(3),ST(0)	ST(4),ST(0)	ST(5),ST(0)	ST(6),ST(0)	ST(7),ST(0)	
D									
Е				FSU	JBR				
	ST(0),ST(0)	ST(1),ST(0)	ST(2),ST(0)	ST(3),ST(0)	ST(4),ST(0)	ST(5),ST(0)	ST(6),ST(0)	ST(7),ST(0)	
F				FD	IVR				
	ST(0),ST(0)	ST(1),ST(0)	ST(2),ST(0)	ST(3),ST(0)	ST(4),ST(0)	ST(5),ST(0)	ST(6),ST(0)	ST(7),ST(0)	
	8	9	Α	В	С	D	Е	F	
С				FM	IUL				
	ST(0),ST(0)	ST(1),ST(0)	ST(2),ST(0)	ST(3),ST(0)	ST(4),ST(0)	ST(5),ST(0)	ST(6),ST(0)	ST(7),ST(0)	
D		1							
E		1		FS	UB				
	ST(0),ST(0)	ST(1),ST(0)	ST(2),ST(0)	ST(3),ST(0)	ST(4),ST(0)	ST(5),ST(0)	ST(6),ST(0)	ST(7),ST(0)	
F		1		FC	OIV				
	ST(0),ST(0)	ST(1),ST(0)	ST(2),ST(0)	ST(3),ST(0)	ST(4),ST(0)	ST(5),ST(0)	ST(6),ST(0)	ST(7),ST(0)	

<sup>\*</sup> All blanks in all opcode maps are reserved and must not be used. Do not depend on the operation of undefined or reserved locations.

<sup>\*</sup> All blanks in all opcode maps are reserved and must not be used. Do not depend on the operation of undefined or reserved locations.

## A.5.2.6 Escape Opcodes with DD as First Byte

Table A-17 and A-18 contain maps for escape instruction opcodes that begin with DDH. Table A-17 shows the map if the ModR/M byte is in the range of 00H-BFH. Here, the value of bits 3-5 (the nnn field in Figure A-1) selects the instruction.

Table A-17. DD Opcode Map When ModR/M Byte is Within 00H to BFH \*

nnn Field of ModR/M Byte							
000B	001B	010B	011B	100B	101B	110B	111B
FLD double- real	FISTTP integer64	FST double- real	FSTP double- real	FRSTOR 98/108bytes		FSAVE 98/108bytes	FSTSW 2 bytes

#### **NOTES:**

Table A-18 shows the map if the ModR/M byte is outside the range of 00H-BFH. The first digit of the ModR/M byte selects the table row and the second digit selects the column.

Table A-18. DD Opcode Map When ModR/M Byte is Outside 00H to BFH \*

	0	1	2	3	4	5	6	7	
С				FFF	REE				
	ST(0)	ST(1)	ST(2)	ST(3)	ST(4)	ST(5)	ST(6)	ST(7)	
D	FST								
	ST(0)	ST(1)	ST(2)	ST(3)	ST(4)	ST(5)	ST(6)	ST(7)	
E				FUC	СОМ				
	ST(0),ST(0)	ST(1),ST(0)	ST(2),ST(0)	ST(3),ST(0)	ST(4),ST(0)	ST(5),ST(0)	ST(6),ST(0)	ST(7),ST(0)	
F									
	8	9	А	В	С	D	E	F	
С									
D				FS	TP				
	ST(0)	ST(1)	ST(2)	ST(3)	ST(4)	ST(5)	ST(6)	ST(7)	
Е				FUC	OMP				
	ST(0)	ST(1)	ST(2)	ST(3)	ST(4)	ST(5)	ST(6)	ST(7)	
F									

<sup>\*</sup> All blanks in all opcode maps are reserved and must not be used. Do not depend on the operation of undefined or reserved locations.

<sup>\*</sup> All blanks in all opcode maps are reserved and must not be used. Do not depend on the operation of undefined or reserved locations.

## A.5.2.7 Escape Opcodes with DE as First Byte

Table A-19 and A-20 contain opcode maps for escape instruction opcodes that begin with DEH. Table A-19 shows the opcode map if the ModR/M byte is in the range of 00H-BFH. In this case, the value of bits 3-5 (the nnn field in Figure A-1) selects the instruction.

Table A-19. DE Opcode Map When ModR/M Byte is Within 00H to BFH \*

			nnn Field of N	ModR/M Byte			
000B	001B	010B	011B	100B	101B	110B	111B
FIADD word-integer	FIMUL word-integer	FICOM word-integer	FICOMP word- integer	FISUB word-integer	FISUBR word- integer	FIDIV word-integer	FIDIVR word-integer

#### **NOTES:**

Table A-20 shows the opcode map if the ModR/M byte is outside the range of 00H-BFH. The first digit of the ModR/M byte selects the table row and the second digit selects the column.

Table A-20. DE Opcode Map When ModR/M Byte is Outside 00H to BFH \*

	0	1	2	3	4	5	6	7	
С				FAD	DP				
	ST(0),ST(0)	ST(1),ST(0)	ST(2),ST(0)	ST(3),ST(0)	ST(4),ST(0)	ST(5),ST(0)	ST(6),ST(0)	ST(7),ST(0)	
D									
Ε				FSU	BRP				
	ST(0),ST(0)	ST(1),ST(0)	ST(2),ST(0)	ST(3),ST(0)	ST(4),ST(0)	ST(5),ST(0)	ST(6),ST(0)	ST(7),ST(0)	
F				FDI	/RP				
	ST(0),ST(0)	ST(1),ST(0)	ST(2),ST(0)	ST(3),ST(0)	ST(4),ST(0)	ST(5),ST(0)	ST(6),ST(0)	ST(7),ST(0)	
	8	9	Α	В	С	D	E	F	
С			_	FMU	JLP				
	ST(0),ST(0)	ST(1),ST(0)	ST(2),ST(0)	ST(3),ST(0)	ST(4),ST(0)	ST(5),ST(0)	ST(6),ST(0)	ST(7),ST(0)	
D									
		FCOMPP							
		FCOMPP							
E		FCOMPP		FSL	JBP				
E	ST(0),ST(0)	FCOMPP ST(1),ST(0)	ST(2),ST(0)	FSU ST(3),ST(0)	JBP ST(4),ST(0)	ST(5),ST(0)	ST(6),ST(0)	ST(7),ST(0)	
E	ST(0),ST(0)		ST(2),ST(0)		ST(4),ST(0)			ST(7),ST(0)	
	ST(0),ST(0) ST(0),ST(0)		ST(2),ST(0) ST(2),ST(0).	ST(3),ST(0)	ST(4),ST(0)			ST(7),ST(0) ST(7),ST(0)	

<sup>\*</sup> All blanks in all opcode maps are reserved and must not be used. Do not depend on the operation of undefined or reserved locations.

<sup>\*</sup> All blanks in all opcode maps are reserved and must not be used. Do not depend on the operation of undefined or reserved locations.

#### A.5.2.8 Escape Opcodes with DF As First Byte

Table A-21 and A-22 contain the opcode maps for escape instruction opcodes that begin with DFH. Table A-21 shows the opcode map if the ModR/M byte is in the range of 00H-BFH. Here, the value of bits 3-5 (the nnn field in Figure A-1) selects the instruction.

Table A-21. DF Opcode Map When ModR/M Byte is Within 00H to BFH \*

	nnn Field of ModR/M Byte							
000B	001B	010B	011B	100B	101B	110B	111B	
FILD word-integer	FISTTP word-integer	FIST word-integer	FISTP word-integer	FBLD packed- BCD	FILD qword-integer	FBSTP packed- BCD	FISTP qword-integer	

#### **NOTES:**

Table A-22 shows the opcode map if the ModR/M byte is outside the range of 00H-BFH. The first digit of the ModR/M byte selects the table row and the second digit selects the column.

Table A-22. DF Opcode Map When ModR/M Byte is Outside 00H to BFH \*

						_		_
	0	1	2	3	4	5	6	7
С								
D		1	1	1		1	1	1
Е	FSTSW AX							
F				FCC	MIP			
	ST(0),ST(0)	ST(0),ST(1)	ST(0),ST(2)	ST(0),ST(3)	ST(0),ST(4)	ST(0),ST(5)	ST(0),ST(6)	ST(0),ST(7)
	8	9	А	В	С	D	E	F
С	8	9	А	В	С	D	Е	F
С	8	9	А	В	С	D	E	F
C	8	9	А	В	С	D	Е	F
	8	9	A	В	С	D	E	F
	8	9	A		С	D	E	F
D	8 ST(0),ST(0)	9 ST(0),ST(1)	A ST(0),ST(2)			D ST(0),ST(5)	ST(0),ST(6)	F ST(0),ST(7)
D				FUC	OMIP			
D E				FUC	OMIP			

<sup>\*</sup> All blanks in all opcode maps are reserved and must not be used. Do not depend on the operation of undefined or reserved locations.

<sup>\*</sup> All blanks in all opcode maps are reserved and must not be used. Do not depend on the operation of undefined or reserved locations.

## APPENDIX B INSTRUCTION FORMATS AND ENCODINGS

This appendix provides machine instruction formats and encodings of IA-32 instructions. The first section describes the IA-32 architecture's machine instruction format. The remaining sections show the formats and encoding of general-purpose, MMX, P6 family, SSE/SSE2/SSE3, x87 FPU instructions, and VMX instructions. Those instruction formats also apply to Intel 64 architecture. Instruction formats used in 64-bit mode are provided as supersets of the above.

## B.1 MACHINE INSTRUCTION FORMAT

All Intel Architecture instructions are encoded using subsets of the general machine instruction format shown in Figure B-1. Each instruction consists of:

- an opcode
- a register and/or address mode specifier consisting of the ModR/M byte and sometimes the scale-index-base (SIB) byte (if required)
- a displacement and an immediate data field (if required)

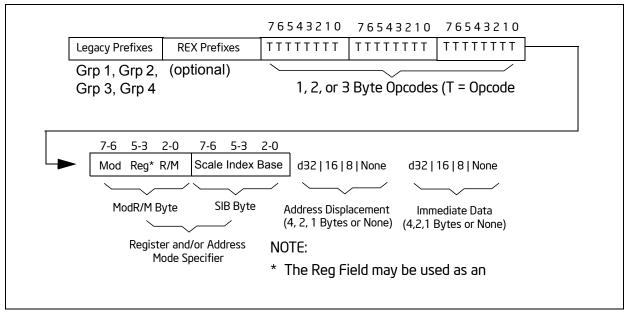


Figure B-1. General Machine Instruction Format

The following sections discuss this format.

## **B.1.1** Legacy Prefixes

The legacy prefixes noted in Figure B-1 include 66H, 67H, F2H and F3H. They are optional, except when F2H, F3H and 66H are used in new instruction extensions. Legacy prefixes must be placed before REX prefixes.

Refer to Chapter 2, "Instruction Format," in the *Intel*® *64 and IA-32 Architectures Software Developer's Manual, Volume 2A*, for more information on legacy prefixes.

#### B.1.2 REX Prefixes

REX prefixes are a set of 16 opcodes that span one row of the opcode map and occupy entries 40H to 4FH. These opcodes represent valid instructions (INC or DEC) in IA-32 operating modes and in compatibility mode. In 64-bit mode, the same opcodes represent the instruction prefix REX and are not treated as individual instructions.

Refer to Chapter 2, "Instruction Format," in the *Intel*® 64 and *IA-32 Architectures* Software Developer's Manual, Volume 2A, for more information on REX prefixes.

## B.1.3 Opcode Fields

The primary opcode for an instruction is encoded in one to three bytes of the instruction. Within the primary opcode, smaller encoding fields may be defined. These fields vary according to the class of operation being performed.

Almost all instructions that refer to a register and/or memory operand have a register and/or address mode byte following the opcode. This byte, the ModR/M byte, consists of the mod field (2 bits), the reg field (3 bits; this field is sometimes an opcode extension), and the R/M field (3 bits). Certain encodings of the ModR/M byte indicate that a second address mode byte, the SIB byte, must be used.

If the addressing mode specifies a displacement, the displacement value is placed immediately following the ModR/M byte or SIB byte. Possible sizes are 8, 16, or 32 bits. If the instruction specifies an immediate value, the immediate value follows any displacement bytes. The immediate, if specified, is always the last field of the instruction.

Refer to Chapter 2, "Instruction Format," in the *Intel*® *64 and IA-32 Architectures Software Developer's Manual, Volume 2A*, for more information on opcodes.

## **B.1.4** Special Fields

Table B-1 lists bit fields that appear in certain instructions, sometimes within the opcode bytes. All of these fields (except the d bit) occur in the general-purpose instruction formats in Table B-13.

Table B-1. Special Fields Within Instruction Encodings

Field Name	Description	Number of Bits
гед	General-register specifier (see Table B-4 or B-5)	3
W	Specifies if data is byte or full-sized, where full-sized is 16 or 32 bits (see Table B-6)	1
S	Specifies sign extension of an immediate field (see Table B-7)	1
sreg2	Segment register specifier for CS, SS, DS, ES (see Table B-8)	2
sreg3	Segment register specifier for CS, SS, DS, ES, FS, GS (see Table B-8)	3
eee	Specifies a special-purpose (control or debug) register (see Table B-9)	3
tttn	For conditional instructions, specifies a condition asserted or negated (see Table B-12)	4
d	Specifies direction of data operation (see Table B-11)	1

## B.1.4.1 Reg Field (reg) for Non-64-Bit Modes

The reg field in the ModR/M byte specifies a general-purpose register operand. The group of registers specified is modified by the presence and state of the w bit in an encoding (refer to Section B.1.4.3). Table B-2 shows the encoding of the reg field when the w bit is not present in an encoding; Table B-3 shows the encoding of the reg field when the w bit is present.

Table B-2. Encoding of reg Field When w Field is Not Present in Instruction

reg Field	Register Selected during 16-Bit Data Operations	Register Selected during 32-Bit Data Operations
000	AX	EAX
001	CX	ECX
010	DX	EDX
011	BX	EBX
100	SP	ESP
101	BP	EBP
110	SI	ESI
111	DI	EDI

Table B-3. Encoding of reg Field When w Field is Present in Instruction

Register Specified by reg Field During 16-Bit Data Operations		
	Function	of w Field
reg	When w = 0	When w = 1
000	AL	AX
001	CL	CX
010	DL	DX
011	BL	BX
100	АН	SP
101	CH	BP
110	DH	SI
111	ВН	DI

Register Specified by reg Field During 32-Bit Data Operations		
	Function of w Field	
reg	When w = 0	When w = 1
000	AL	EAX
001	CL	ECX
010	DL	EDX
011	BL	EBX
100	АН	ESP
101	CH	EBP
110	DH	ESI
111	BH	EDI

## B.1.4.2 Reg Field (reg) for 64-Bit Mode

Just like in non-64-bit modes, the reg field in the ModR/M byte specifies a general-purpose register operand. The group of registers specified is modified by the presence of and state of the w bit in an encoding (refer to Section B.1.4.3). Table B-4 shows the encoding of the reg field when the w bit is not present in an encoding; Table B-5 shows the encoding of the reg field when the w bit is present.

Table B-4. Encoding of reg Field When w Field is Not Present in Instruction

reg Field	Register Selected during 16-Bit Data Operations	Register Selected during 32-Bit Data Operations	Register Selected during 64-Bit Data Operations
000	AX	EAX	RAX
001	CX	ECX	RCX
010	DX	EDX	RDX
011	BX	EBX	RBX
100	SP	ESP	RSP
101	BP	EBP	RBP
110	SI	ESI	RSI
111	DI	EDI	RDI

Table B-5. Encoding of reg Field When w Field is Present in Instruction

Register Specified by reg Field During 16-Bit Data Operations			
	Function	Function of w Field	
гед	When w = 0	When w = 1	
000	AL	AX	
001	CL	CX	
010	DL	DX	
011	BL	BX	
100	AH <sup>1</sup>	SP	
101	CH <sup>1</sup>	BP	
110	DH <sup>1</sup>	SI	
111	BH <sup>1</sup>	DI	

Register Specified by reg Field During 32-Bit Data Operations		
	Function of w Field	
reg	When $w = 0$	When w = 1
000	AL	EAX
001	CL	ECX
010	DL	EDX
011	BL	EBX
100	AH*	ESP
101	CH*	EBP
110	DH*	ESI
111	BH*	EDI

#### **NOTES:**

## B.1.4.3 Encoding of Operand Size (w) Bit

The current operand-size attribute determines whether the processor is performing 16-bit, 32-bit or 64-bit operations. Within the constraints of the current operand-size attribute, the operand-size bit (w) can be used to indicate operations on 8-bit operands or the full operand size specified with the operand-size attribute. Table B-6 shows the encoding of the w bit depending on the current operand-size attribute.

Table B-6. Encoding of Operand Size (w) Bit

w Bit	Operand Size When Operand-Size Attribute is 16 Bits	Operand Size When Operand-Size Attribute is 32 Bits
0	8 Bits	8 Bits
1	16 Bits	32 Bits

## B.1.4.4 Sign-Extend (s) Bit

The sign-extend (s) bit occurs in instructions with immediate data fields that are being extended from 8 bits to 16 or 32 bits. See Table B-7.

<sup>1.</sup> AH, CH, DH, BH can not be encoded when REX prefix is used. Such an expression defaults to the low byte.

Table B-7. Encoding of Sign-Extend (s) Bit

s	Effect on 8-Bit Immediate Data	Effect on 16- or 32-Bit Immediate Data
0	None	None
1	Sign-extend to fill 16-bit or 32-bit destination	None

## B.1.4.5 Segment Register (sreg) Field

When an instruction operates on a segment register, the reg field in the ModR/M byte is called the sreg field and is used to specify the segment register. Table B-8 shows the encoding of the sreg field. This field is sometimes a 2-bit field (sreg2) and other times a 3-bit field (sreg3).

Table B-8. Encoding of the Segment Register (sreg) Field

2-Bit sreg2 Field	Segment Register Selected
00	ES
01	CS
10	SS
11	DS

3-Bit sreg3 Field	Segment Register Selected
000	ES
001	CS
010	SS
011	DS
100	FS
101	GS
110	Reserved <sup>1</sup>
111	Reserved

#### **NOTES:**

## B.1.4.6 Special-Purpose Register (eee) Field

When control or debug registers are referenced in an instruction they are encoded in the eee field, located in bits 5 though 3 of the ModR/M byte (an alternate encoding of the sreg field). See Table B-9.

<sup>1.</sup> Do not use reserved encodings.

Table B-9. Encoding of Special-Purpose Register (eee) Field

eee	Control Register	Debug Register
000	CR0	DRO
001	Reserved <sup>1</sup>	DR1
010	CR2	DR2
011	CR3	DR3
100	CR4	Reserved
101	Reserved	Reserved
110	Reserved	DR6
111	Reserved	DR7

#### **NOTES:**

1. Do not use reserved encodings.

## B.1.4.7 Condition Test (tttn) Field

For conditional instructions (such as conditional jumps and set on condition), the condition test field (tttn) is encoded for the condition being tested. The ttt part of the field gives the condition to test and the n part indicates whether to use the condition (n = 0) or its negation (n = 1).

- For 1-byte primary opcodes, the tttn field is located in bits 3, 2, 1, and 0 of the opcode byte.
- For 2-byte primary opcodes, the tttn field is located in bits 3, 2, 1, and 0 of the second opcode byte.

Table B-10 shows the encoding of the tttn field.

tttn	Mnemonic	Condition
0000	0	Overflow
0001	NO	No overflow
0010	B, NAE	Below, Not above or equal
0011	NB, AE	Not below, Above or equal
0100	E, Z	Equal, Zero
0101	NE, NZ	Not equal, Not zero
0110	BE, NA	Below or equal, Not above
0111	NBE, A	Not below or equal, Above
1000	S	Sign
1001	NS	Not sign
1010	P, PE	Parity, Parity Even
1011	NP, PO	Not parity, Parity Odd
1100	L, NGE	Less than, Not greater than or equal to
1101	NL, GE	Not less than, Greater than or equal to
1110	LE, NG	Less than or equal to, Not greater than
1111	NLE, G	Not less than or equal to, Greater than

## B.1.4.8 Direction (d) Bit

In many two-operand instructions, a direction bit (d) indicates which operand is considered the source and which is the destination. See Table B-11.

- When used for integer instructions, the d bit is located at bit 1 of a 1-byte primary opcode. Note that this bit does not appear as the symbol "d" in Table B-13; the actual encoding of the bit as 1 or 0 is given.
- When used for floating-point instructions (in Table B-16), the d bit is shown as bit 2 of the first byte of the primary opcode.

Table B-11. Encoding of Operation Direction (d) Bit

d	Source	Destination
0	reg Field	ModR/M or SIB Byte
1	ModR/M or SIB Byte	reg Field

#### B.1.5 Other Notes

Table B-12 contains notes on particular encodings. These notes are indicated in the tables shown in the following sections by superscripts.

Table B-12. Notes on Instruction Encoding

Symbol Note		
А	A value of 11B in bits 7 and 6 of the ModR/M byte is reserved.	
В	A value of 01B (or 10B) in bits 7 and 6 of the ModR/M byte is reserved.	

# B.2 GENERAL-PURPOSE INSTRUCTION FORMATS AND ENCODINGS FOR NON-64-BIT MODES

Table B-13 shows machine instruction formats and encodings for general purpose instructions in non-64-bit modes.

Table B-13. General Purpose Instruction Formats and Encodings for Non-64-Bit Modes

Instruction and Format	Encoding
AAA – ASCII Adjust after Addition	0011 0111
AAD - ASCII Adjust AX before Division	1101 0101 : 0000 1010
AAM - ASCII Adjust AX after Multiply	1101 0100 : 0000 1010
AAS - ASCII Adjust AL after Subtraction	0011 1111
ADC - ADD with Carry	
register1 to register2	0001 000w:11 reg1 reg2
register2 to register1	0001 001w:11 reg1 reg2
memory to register	0001 001w: mod reg r/m
register to memory	0001 000w: mod reg r/m
immediate to register	1000 00sw : 11 010 reg : immediate data
immediate to AL, AX, or EAX	0001 010w: immediate data
immediate to memory	1000 00sw : mod 010 r/m : immediate data
ADD - Add	
register1 to register2	0000 000w : 11 reg1 reg2
register2 to register1	0000 001w:11 reg1 reg2
memory to register	0000 001w : mod reg r/m
register to memory	0000 000w : mod reg r/m

Table B-13. General Purpose Instruction Formats and Encodings for Non-64-Bit Modes (Contd.)

Instruction and Format	Encoding
immediate to register	1000 00sw : 11 000 reg : immediate data
immediate to AL, AX, or EAX	0000 010w : immediate data
immediate to memory	1000 00sw : mod 000 r/m : immediate data
AND – Logical AND	
register1 to register2	0010 000w : 11 reg1 reg2
register2 to register1	0010 001w:11 reg1 reg2
memory to register	0010 001w : mod reg r/m
register to memory	0010 000w : mod reg г/m
immediate to register	1000 00sw : 11 100 reg : immediate data
immediate to AL, AX, or EAX	0010 010w : immediate data
immediate to memory	1000 00sw : mod 100 r/m : immediate data
ARPL - Adjust RPL Field of Selector	
from register	0110 0011 : 11 reg1 reg2
from memory	0110 0011 : mod reg r/m
BOUND - Check Array Against Bounds	0110 0010 : mod <sup>A</sup> reg r/m
BSF - Bit Scan Forward	
register1, register2	0000 1111 : 1011 1100 : 11 reg1 reg2
memory, register	0000 1111 : 1011 1100 : mod reg r/m
BSR - Bit Scan Reverse	
register1, register2	0000 1111 : 1011 1101 : 11 reg1 reg2
memory, register	0000 1111 : 1011 1101 : mod reg r/m
BSWAP - Byte Swap	0000 1111 : 1100 1 reg
BT - Bit Test	
register, immediate	0000 1111 : 1011 1010 : 11 100 reg: imm8 data
memory, immediate	0000 1111 : 1011 1010 : mod 100 r/m : imm8 data
register1, register2	0000 1111 : 1010 0011 : 11 reg2 reg1
memory, reg	0000 1111 : 1010 0011 : mod reg r/m
BTC - Bit Test and Complement	

Table B-13. General Purpose Instruction Formats and Encodings for Non-64-Bit Modes (Contd.)

Instruction and Format	Encoding
register, immediate	0000 1111 : 1011 1010 : 11 111 reg: imm8 data
memory, immediate	0000 1111 : 1011 1010 : mod 111 r/m : imm8 data
register1, register2	0000 1111 : 1011 1011 : 11 reg2 reg1
memory, reg	0000 1111 : 1011 1011 : mod reg r/m
BTR - Bit Test and Reset	
register, immediate	0000 1111 : 1011 1010 : 11 110 reg: imm8 data
memory, immediate	0000 1111 : 1011 1010 : mod 110 r/m : imm8 data
register1, register2	0000 1111 : 1011 0011 : 11 reg2 reg1
memory, reg	0000 1111 : 1011 0011 : mod reg r/m
BTS - Bit Test and Set	
register, immediate	0000 1111 : 1011 1010 : 11 101 reg: imm8 data
memory, immediate	0000 1111 : 1011 1010 : mod 101 r/m : imm8 data
register1, register2	0000 1111 : 1010 1011 : 11 reg2 reg1
memory, reg	0000 1111 : 1010 1011 : mod reg r/m
CALL - Call Procedure (in same segment)	
direct	1110 1000 : full displacement
register indirect	1111 1111 : 11 010 reg
memory indirect	1111 1111 : mod 010 r/m
CALL - Call Procedure (in other segment)	
direct	1001 1010 : unsigned full offset, selector
indirect	1111 1111 : mod 011 r/m
CBW - Convert Byte to Word	1001 1000
CDQ - Convert Doubleword to Qword	1001 1001
CLC - Clear Carry Flag	1111 1000
CLD - Clear Direction Flag	1111 1100

Table B-13. General Purpose Instruction Formats and Encodings for Non-64-Bit Modes (Contd.)

Instruction and Format	Encoding
CLI – Clear Interrupt Flag	1111 1010
CLTS – Clear Task-Switched Flag in CRO	0000 1111 : 0000 0110
CMC - Complement Carry Flag	1111 0101
CMP – Compare Two Operands	
register1 with register2	0011 100w : 11 reg1 reg2
register2 with register1	0011 101w:11 reg1 reg2
memory with register	0011 100w : mod reg r/m
register with memory	0011 101w : mod reg r/m
immediate with register	1000 00sw : 11 111 reg : immediate data
immediate with AL, AX, or EAX	0011 110w : immediate data
immediate with memory	1000 00sw : mod 111 r/m : immediate data
CMPS/CMPSB/CMPSW/CMPSD - Compare String Operands	1010 011w
CMPXCHG - Compare and Exchange	
register1, register2	0000 1111 : 1011 000w : 11 reg2 reg1
memory, register	0000 1111 : 1011 000w : mod reg r/m
CPUID - CPU Identification	0000 1111 : 1010 0010
CWD - Convert Word to Doubleword	1001 1001
CWDE - Convert Word to Doubleword	1001 1000
DAA – Decimal Adjust AL after Addition	0010 0111
DAS - Decimal Adjust AL after Subtraction	0010 1111
DEC – Decrement by 1	
register	1111 111w:11 001 reg
register (alternate encoding)	0100 1 reg
memory	1111 111w: mod 001 r/m
DIV - Unsigned Divide	
AL, AX, or EAX by register	1111 011w:11 110 reg
AL, AX, or EAX by memory	1111 011w : mod 110 r/m
HLT - Halt	1111 0100

Table B-13. General Purpose Instruction Formats and Encodings for Non-64-Bit Modes (Contd.)

Instruction and Format	Encoding
IDIV - Signed Divide	
AL, AX, or EAX by register	1111 011w:11 111 reg
AL, AX, or EAX by memory	1111 011w : mod 111 r/m
IMUL – Signed Multiply	
AL, AX, or EAX with register	1111 011w:11 101 reg
AL, AX, or EAX with memory	1111 011w: mod 101 reg
register1 with register2	0000 1111 : 1010 1111 : 11 : reg1 reg2
register with memory	0000 1111 : 1010 1111 : mod reg r/m
register1 with immediate to register2	0110 10s1 : 11 reg1 reg2 : immediate data
memory with immediate to register	0110 10s1 : mod reg r/m : immediate data
IN - Input From Port	
fixed port	1110 010w : port number
variable port	1110 110w
INC - Increment by 1	
гед	1111 111w:11 000 reg
reg (alternate encoding)	0100 0 reg
memory	1111 111w: mod 000 r/m
INS - Input from DX Port	0110 110w
INT n - Interrupt Type n	1100 1101 : type
INT - Single-Step Interrupt 3	1100 1100
INTO - Interrupt 4 on Overflow	1100 1110
INVD - Invalidate Cache	0000 1111 : 0000 1000
INVLPG - Invalidate TLB Entry	0000 1111 : 0000 0001 : mod 111 r/m
IRET/IRETD - Interrupt Return	1100 1111
Jcc - Jump if Condition is Met	
8-bit displacement	0111 tttn: 8-bit displacement
full displacement	0000 1111 : 1000 tttn : full displacement
JCXZ/JECXZ - Jump on CX/ECX Zero Address-size prefix differentiates JCXZ and JECXZ	1110 0011 : 8-bit displacement

Table B-13. General Purpose Instruction Formats and Encodings for Non-64-Bit Modes (Contd.)

Instruction and Format	Encoding
JMP - Unconditional Jump (to same segment)	
short	1110 1011 : 8-bit displacement
direct	1110 1001 : full displacement
register indirect	1111 1111 : 11 100 reg
memory indirect	1111 1111 : mod 100 r/m
JMP - Unconditional Jump (to other segment)	
direct intersegment	1110 1010 : unsigned full offset, selector
indirect intersegment	1111 1111 : mod 101 r/m
LAHF - Load Flags into AHRegister	1001 1111
LAR - Load Access Rights Byte	
from register	0000 1111 : 0000 0010 : 11 reg1 reg2
from memory	0000 1111 : 0000 0010 : mod reg r/m
LDS - Load Pointer to DS	1100 0101 : mod <sup>A,B</sup> reg r/m
LEA - Load Effective Address	1000 1101 : mod <sup>A</sup> reg r/m
LEAVE - High Level Procedure Exit	1100 1001
LES - Load Pointer to ES	1100 0100 : mod <sup>A,B</sup> reg r/m
LFS - Load Pointer to FS	0000 1111 : 1011 0100 : mod <sup>A</sup> reg r/m
LGDT - Load Global Descriptor Table Register	0000 1111 : 0000 0001 : mod <sup>A</sup> 010 r/m
LGS - Load Pointer to GS	0000 1111 : 1011 0101 : mod <sup>A</sup> reg г/m
LIDT - Load Interrupt Descriptor Table Register	0000 1111 : 0000 0001 : mod <sup>A</sup> 011 r/m
LLDT - Load Local Descriptor Table Register	
LDTR from register	0000 1111 : 0000 0000 : 11 010 reg
LDTR from memory	0000 1111 : 0000 0000 : mod 010 r/m
LMSW - Load Machine Status Word	
from register	0000 1111 : 0000 0001 : 11 110 reg
from memory	0000 1111 : 0000 0001 : mod 110 r/m
LOCK - Assert LOCK# Signal Prefix	1111 0000
LODS/LODSB/LODSW/LODSD - Load String Operand	1010 110w

Table B-13. General Purpose Instruction Formats and Encodings for Non-64-Bit Modes (Contd.)

Instruction and Format	Encoding
LOOP - Loop Count	1110 0010 : 8-bit displacement
LOOPZ/LOOPE - Loop Count while Zero/Equal	1110 0001 : 8-bit displacement
LOOPNZ/LOOPNE - Loop Count while not Zero/Equal	1110 0000 : 8-bit displacement
LSL - Load Segment Limit	
from register	0000 1111 : 0000 0011 : 11 reg1 reg2
from memory	0000 1111 : 0000 0011 : mod reg r/m
LSS - Load Pointer to SS	0000 1111 : 1011 0010 : mod <sup>A</sup> reg r/m
LTR - Load Task Register	
from register	0000 1111 : 0000 0000 : 11 011 reg
from memory	0000 1111 : 0000 0000 : mod 011 r/m
MOV - Move Data	
register1 to register2	1000 100w : 11 reg1 reg2
register2 to register1	1000 101w:11 reg1 reg2
memory to reg	1000 101w : mod reg r/m
reg to memory	1000 100w : mod reg r/m
immediate to register	1100 011w : 11 000 reg : immediate data
immediate to register (alternate encoding)	1011 w reg : immediate data
immediate to memory	1100 011w : mod 000 r/m : immediate data
memory to AL, AX, or EAX	1010 000w : full displacement
AL, AX, or EAX to memory	1010 001w: full displacement
MOV - Move to/from Control Registers	
CR0 from register	0000 1111 : 0010 0010 : 11 000 reg
CR2 from register	0000 1111 : 0010 0010 : 11 010reg
CR3 from register	0000 1111 : 0010 0010 : 11 011 reg
CR4 from register	0000 1111 : 0010 0010 : 11 100 reg
register from CRO-CR4	0000 1111 : 0010 0000 : 11 eee reg
MOV - Move to/from Debug Registers	
DRO-DR3 from register	0000 1111 : 0010 0011 : 11 eee reg
DR4-DR5 from register	0000 1111 : 0010 0011 : 11 eee reg

Table B-13. General Purpose Instruction Formats and Encodings for Non-64-Bit Modes (Contd.)

Instruction and Format	Encoding
DR6-DR7 from register	0000 1111 : 0010 0011 : 11 eee reg
register from DR6-DR7	0000 1111 : 0010 0001 : 11 eee reg
register from DR4-DR5	0000 1111 : 0010 0001 : 11 eee reg
register from DRO-DR3	0000 1111 : 0010 0001 : 11 eee reg
MOV - Move to/from Segment Registers	
register to segment register	1000 1110 : 11 sreg3 reg
register to SS	1000 1110 : 11 sreg3 reg
memory to segment reg	1000 1110 : mod sreg3 г/m
memory to SS	1000 1110 : mod sreg3 г/m
segment register to register	1000 1100 : 11 sreg3 reg
segment register to memory	1000 1100 : mod sreg3 r/m
MOVBE - Move data after swapping bytes	
memory to register	0000 1111 : 0011 1000:1111 0000 : mod reg r/m
register to memory	0000 1111 : 0011 1000:1111 0001 : mod reg r/m
MOVS/MOVSB/MOVSW/MOVSD - Move Data from String to String	1010 010w
MOVSX - Move with Sign-Extend	
memory to reg	0000 1111 : 1011 111w : mod reg г/m
MOVZX - Move with Zero-Extend	
register2 to register1	0000 1111 : 1011 011w : 11 reg1 reg2
memory to register	0000 1111 : 1011 011w : mod reg r/m
MUL - Unsigned Multiply	
AL, AX, or EAX with register	1111 011w:11 100 reg
AL, AX, or EAX with memory	1111 011w: mod 100 r/m
NEG – Two's Complement Negation	
register	1111 011w:11 011 reg
memory	1111 011w: mod 011 r/m
NOP - No Operation	1001 0000
NOP - Multi-byte No Operation <sup>1</sup>	

Table B-13. General Purpose Instruction Formats and Encodings for Non-64-Bit Modes (Contd.)

Encoding
0000 1111 0001 1111 : 11 000 req
0000 1111 0001 1111 : mod 000 r/m
1111 011w : 11 010 reg
1111 011w : mod 010 r/m
TTTT OTTW. MIGG OTO 17/11
0000 100w : 11 rog1 rog2
0000 100w : 11 reg1 reg2
0000 101w : 11 reg1 reg2
0000 101w : mod reg r/m
0000 100w : mod reg r/m
1000 00sw : 11 001 reg : immediate data
0000 110w : immediate data
1000 00sw : mod 001 r/m : immediate data
1110 011w: port number
1110 111w
0110 111w
1000 1111 : 11 000 reg
0101 1 reg
1000 1111 : mod 000 r/m
000 sreg2 111
000 sreg2 111
0000 1111: 10 sreg3 001
0110 0001
1001 1101

Table B-13. General Purpose Instruction Formats and Encodings for Non-64-Bit Modes (Contd.)

Instruction and Format	Encoding
register	1111 1111 : 11 110 reg
register (alternate encoding)	0101 0 reg
memory	1111 1111 : mod 110 r/m
immediate	0110 10s0 : immediate data
PUSH - Push Segment Register onto the Stack	
segment register CS,DS,ES,SS	000 sreg2 110
segment register FS,GS	0000 1111: 10 sreg3 000
PUSHA/PUSHAD - Push All General Registers	0110 0000
PUSHF/PUSHFD - Push Flags Register onto the Stack	1001 1100
RCL - Rotate thru Carry Left	
register by 1	1101 000w: 11 010 reg
memory by 1	1101 000w: mod 010 r/m
register by CL	1101 001w:11 010 reg
memory by CL	1101 001w: mod 010 r/m
register by immediate count	1100 000w : 11 010 reg : imm8 data
memory by immediate count	1100 000w : mod 010 r/m : imm8 data
RCR - Rotate thru Carry Right	
register by 1	1101 000w:11 011 reg
memory by 1	1101 000w: mod 011 r/m
register by CL	1101 001w:11 011 reg
memory by CL	1101 001w: mod 011 r/m
register by immediate count	1100 000w : 11 011 reg : imm8 data
memory by immediate count	1100 000w : mod 011 r/m : imm8 data
RDMSR - Read from Model-Specific Register	0000 1111 : 0011 0010
RDPMC - Read Performance Monitoring Counters	0000 1111 : 0011 0011

Table B-13. General Purpose Instruction Formats and Encodings for Non-64-Bit Modes (Contd.)

Instruction and Format	Encoding
RDTSCP - Read Time-Stamp Counter and Processor ID	0000 1111 : 0000 0001: 1111 1001
REP INS - Input String	1111 0011 : 0110 110w
REP LODS – Load String	1111 0011 : 1010 110w
REP MOVS - Move String	1111 0011 : 1010 010w
REP OUTS - Output String	1111 0011 : 0110 111w
REP STOS - Store String	1111 0011 : 1010 101w
REPE CMPS – Compare String	1111 0011 : 1010 011w
REPE SCAS – Scan String	1111 0011 : 1010 111w
REPNE CMPS – Compare String	1111 0010 : 1010 011w
REPNE SCAS – Scan String	1111 0010 : 1010 111w
RET - Return from Procedure (to same segment)	
no argument	1100 0011
adding immediate to SP	1100 0010 : 16-bit displacement
RET - Return from Procedure (to other segment)	
intersegment	1100 1011
adding immediate to SP	1100 1010 : 16-bit displacement
ROL - Rotate Left	
register by 1	1101 000w:11 000 reg
memory by 1	1101 000w: mod 000 r/m
register by CL	1101 001w:11 000 reg
memory by CL	1101 001w: mod 000 r/m
register by immediate count	1100 000w : 11 000 reg : imm8 data
memory by immediate count	1100 000w: mod 000 r/m: imm8 data
ROR - Rotate Right	
register by 1	1101 000w:11 001 reg
memory by 1	1101 000w: mod 001 r/m
register by CL	1101 001w:11 001 reg
memory by CL	1101 001w: mod 001 r/m

Table B-13. General Purpose Instruction Formats and Encodings for Non-64-Bit Modes (Contd.)

Instruction and Format	Encoding
register by immediate count	1100 000w : 11 001 reg : imm8 data
memory by immediate count	1100 000w : mod 001 r/m : imm8 data
RSM - Resume from System Management Mode	0000 1111 : 1010 1010
SAHF - Store AH into Flags	1001 1110
SAL - Shift Arithmetic Left	same instruction as SHL
SAR - Shift Arithmetic Right	
register by 1	1101 000w:11 111 reg
memory by 1	1101 000w: mod 111 r/m
register by CL	1101 001w:11 111 reg
memory by CL	1101 001w: mod 111 r/m
register by immediate count	1100 000w : 11 111 reg : imm8 data
memory by immediate count	1100 000w : mod 111 r/m : imm8 data
SBB - Integer Subtraction with Borrow	
register1 to register2	0001 100w:11 reg1 reg2
register2 to register1	0001 101w:11 reg1 reg2
memory to register	0001 101w: mod reg r/m
register to memory	0001 100w : mod reg r/m
immediate to register	1000 00sw : 11 011 reg : immediate data
immediate to AL, AX, or EAX	0001 110w : immediate data
immediate to memory	1000 00sw : mod 011 r/m : immediate data
SCAS/SCASB/SCASW/SCASD - Scan String	1010 111w
SETcc - Byte Set on Condition	
register	0000 1111 : 1001 tttn : 11 000 reg
memory	0000 1111 : 1001 tttn : mod 000 r/m
SGDT - Store Global Descriptor Table Register	0000 1111 : 0000 0001 : mod <sup>A</sup> 000 r/m
SHL - Shift Left	
register by 1	1101 000w:11 100 reg
memory by 1	1101 000w: mod 100 r/m

Table B-13. General Purpose Instruction Formats and Encodings for Non-64-Bit Modes (Contd.)

Instruction and Format	Encoding
register by CL	1101 001w:11 100 reg
memory by CL	1101 001w: mod 100 r/m
register by immediate count	1100 000w : 11 100 reg : imm8 data
memory by immediate count	1100 000w : mod 100 r/m : imm8 data
SHLD - Double Precision Shift Left	
register by immediate count	0000 1111 : 1010 0100 : 11 reg2 reg1 : imm8
memory by immediate count	0000 1111 : 1010 0100 : mod reg r/m : imm8
register by CL	0000 1111 : 1010 0101 : 11 reg2 reg1
memory by CL	0000 1111 : 1010 0101 : mod reg r/m
SHR - Shift Right	
register by 1	1101 000w:11 101 reg
memory by 1	1101 000w: mod 101 r/m
register by CL	1101 001w:11 101 reg
memory by CL	1101 001w: mod 101 r/m
register by immediate count	1100 000w : 11 101 reg : imm8 data
memory by immediate count	1100 000w : mod 101 r/m : imm8 data
SHRD - Double Precision Shift Right	
register by immediate count	0000 1111 : 1010 1100 : 11 reg2 reg1 : imm8
memory by immediate count	0000 1111 : 1010 1100 : mod reg r/m : imm8
register by CL	0000 1111 : 1010 1101 : 11 reg2 reg1
memory by CL	0000 1111 : 1010 1101 : mod reg r/m
SIDT - Store Interrupt Descriptor Table Register	0000 1111 : 0000 0001 : mod <sup>A</sup> 001 r/m
SLDT - Store Local Descriptor Table Register	
to register	0000 1111 : 0000 0000 : 11 000 reg
to memory	0000 1111 : 0000 0000 : mod 000 r/m
SMSW - Store Machine Status Word	
to register	0000 1111 : 0000 0001 : 11 100 reg
to memory	0000 1111 : 0000 0001 : mod 100 r/m
STC - Set Carry Flag	1111 1001

Table B-13. General Purpose Instruction Formats and Encodings for Non-64-Bit Modes (Contd.)

Instruction and Format	Encoding
STD - Set Direction Flag	1111 1101
STI - Set Interrupt Flag	1111 1011
STOS/STOSB/STOSW/STOSD - Store String Data	1010 101w
STR - Store Task Register	
to register	0000 1111 : 0000 0000 : 11 001 reg
to memory	0000 1111 : 0000 0000 : mod 001 r/m
SUB - Integer Subtraction	
register1 to register2	0010 100w : 11 reg1 reg2
register2 to register1	0010 101w:11 reg1 reg2
memory to register	0010 101w : mod reg r/m
register to memory	0010 100w : mod reg r/m
immediate to register	1000 00sw : 11 101 reg : immediate data
immediate to AL, AX, or EAX	0010 110w : immediate data
immediate to memory	1000 00sw : mod 101 r/m : immediate data
TEST - Logical Compare	
register1 and register2	1000 010w : 11 reg1 reg2
memory and register	1000 010w : mod reg r/m
immediate and register	1111 011w : 11 000 reg : immediate data
immediate and AL, AX, or EAX	1010 100w : immediate data
immediate and memory	1111 011w : mod 000 r/m : immediate data
UD2 - Undefined instruction	0000 FFFF : 0000 1011
VERR - Verify a Segment for Reading	
register	0000 1111 : 0000 0000 : 11 100 reg
memory	0000 1111 : 0000 0000 : mod 100 г/m
VERW - Verify a Segment for Writing	
register	0000 1111 : 0000 0000 : 11 101 reg
memory	0000 1111 : 0000 0000 : mod 101 r/m
WAIT - Wait	1001 1011

Table B-13. General Purpose Instruction Formats and Encodings for Non-64-Bit Modes (Contd.)

Instruction and Format	Encoding
WBINVD - Writeback and Invalidate Data Cache	0000 1111 : 0000 1001
WRMSR - Write to Model-Specific Register	0000 1111 : 0011 0000
XADD - Exchange and Add	
register1, register2	0000 1111 : 1100 000w : 11 reg2 reg1
memory, reg	0000 1111 : 1100 000w : mod reg г/m
XCHG - Exchange Register/Memory with Register	
register1 with register2	1000 011w:11 reg1 reg2
AX or EAX with reg	1001 0 reg
memory with reg	1000 011w : mod reg r/m
XLAT/XLATB - Table Look-up Translation	1101 0111
XOR - Logical Exclusive OR	
register1 to register2	0011 000w:11 reg1 reg2
register2 to register1	0011 001w:11 reg1 reg2
memory to register	0011 001w: mod reg r/m
register to memory	0011 000w : mod reg r/m
immediate to register	1000 00sw : 11 110 reg : immediate data
immediate to AL, AX, or EAX	0011 010w : immediate data
immediate to memory	1000 00sw : mod 110 r/m : immediate data
Prefix Bytes	
address size	0110 0111
LOCK	1111 0000
operand size	0110 0110
CS segment override	0010 1110
DS segment override	0011 1110
ES segment override	0010 0110
FS segment override	0110 0100
GS segment override	0110 0101
SS segment override	0011 0110

#### **NOTES:**

 The multi-byte NOP instruction does not alter the content of the register and will not issue a memory operation.

## B.2.1 General Purpose Instruction Formats and Encodings for 64-Bit Mode

Table B-15 shows machine instruction formats and encodings for general purpose instructions in 64-bit mode.

Table B-14. Special Symbols

Symbol	Application
S	If the value of REX.W. is 1, it overrides the presence of 66H.
W	The value of bit W. in REX is has no effect.

Table B-15. General Purpose Instruction Formats and Encodings for 64-Bit Mode

Instruction and Format	Encoding
ADC - ADD with Carry	
register1 to register2	0100 0R0B: 0001 000w: 11 reg1 reg2
qwordregister1 to qwordregister2	0100 1R0B : 0001 0001 : 11 qwordreg1 qwordreg2
register2 to register1	0100 0R0B: 0001 001w: 11 reg1 reg2
qwordregister1 to qwordregister2	0100 1R0B: 0001 0011: 11 qwordreg1 qwordreg2
memory to register	0100 0RXB : 0001 001 w : mod reg r/m
memory to qwordregister	0100 1RXB : 0001 0011 : mod qwordreg r/m
register to memory	0100 0RXB : 0001 000w : mod reg r/m
qwordregister to memory	0100 1RXB : 0001 0001 : mod qwordreg r/m
immediate to register	0100 000B : 1000 00sw : 11 010 reg : immediate
immediate to qwordregister	0100 100B : 1000 0001 : 11 010 qwordreg : imm32
immediate to qwordregister	0100 1R0B : 1000 0011 : 11 010 qwordreg : imm8
immediate to AL, AX, or EAX	0001 010w : immediate data

Table B-15. General Purpose Instruction Formats and Encodings for 64-Bit Mode (Contd.)

Instruction and Format	Encoding
immediate to RAX	0100 1000 : 0000 0101 : imm32
immediate to memory	0100 00XB : 1000 00sw : mod 010 r/m : immediate
immediate32 to memory64	0100 10XB: 1000 0001: mod 010 r/m: imm32
immediate8 to memory64	0100 10XB : 1000 0031 : mod 010 r/m : imm8
ADD - Add	
register1 to register2	0100 0R0B : 0000 000w : 11 reg1 reg2
qwordregister1 to qwordregister2	0100 1R0B 0000 0000 : 11 qwordreg1 qwordreg2
register2 to register1	0100 0R0B: 0000 001w: 11 reg1 reg2
qwordregister1 to qwordregister2	0100 1R0B 0000 0010 : 11 qwordreg1 qwordreg2
memory to register	0100 0RXB : 0000 001 w : mod reg r/m
memory64 to qwordregister	0100 1RXB : 0000 0000 : mod qwordreg r/m
register to memory	0100 0RXB : 0000 000w : mod reg r/m
qwordregister to memory64	0100 1RXB : 0000 0011 : mod qwordreg r/m
immediate to register	0100 0000B : 1000 00sw : 11 000 reg : immediate data
immediate32 to qwordregister	0100 100B : 1000 0001 : 11 010 qwordreg : imm
immediate to AL, AX, or EAX	0000 010w : immediate8
immediate to RAX	0100 1000 : 0000 0101 : imm32
immediate to memory	0100 00XB : 1000 00sw : mod 000 r/m : immediate
immediate32 to memory64	0100 10XB: 1000 0001: mod 010 r/m: imm32
immediate8 to memory64	0100 10XB : 1000 0011 : mod 010 r/m : imm8
AND - Logical AND	
register1 to register2	0100 0R0B 0010 000w : 11 reg1 reg2
qwordregister1 to qwordregister2	0100 1R0B 0010 0001 : 11 qwordreg1 qwordreg2
register2 to register1	0100 0R0B 0010 001w: 11 reg1 reg2

Table B-15. General Purpose Instruction Formats and Encodings for 64-Bit Mode (Contd.)

Instruction and Format	Encoding
register1 to register2	0100 1R0B 0010 0011 : 11 qwordreg1 qwordreg2
memory to register	0100 ORXB 0010 001w : mod reg r/m
memory64 to qwordregister	0100 1RXB : 0010 0011 : mod qwordreg r/m
register to memory	0100 ORXB : 0010 000w : mod reg r/m
qwordregister to memory64	0100 1RXB : 0010 0001 : mod qwordreg r/m
immediate to register	0100 000B : 1000 00sw : 11 100 reg : immediate
immediate32 to qwordregister	0100 100B 1000 0001 : 11 100 qwordreg : imm32
immediate to AL, AX, or EAX	0010 010w : immediate
immediate32 to RAX	0100 1000 0010 1001 : imm32
immediate to memory	0100 00XB : 1000 00sw : mod 100 r/m : immediate
immediate32 to memory64	0100 10XB : 1000 0001 : mod 100 r/m : immediate32
immediate8 to memory64	0100 10XB: 1000 0011: mod 100 r/m: imm8
BSF - Bit Scan Forward	
register1, register2	0100 0R0B 0000 1111 : 1011 1100 : 11 reg1 reg2
qwordregister1, qwordregister2	0100 1R0B 0000 1111 : 1011 1100 : 11 qwordreg1 qwordreg2
memory, register	0100 ORXB 0000 1111 : 1011 1100 : mod reg r/m
memory64, qwordregister	0100 1RXB 0000 1111 : 1011 1100 : mod qwordreg r/m
BSR - Bit Scan Reverse	
register1, register2	0100 0R0B 0000 1111 : 1011 1101 : 11 reg1 reg2
qwordregister1, qwordregister2	0100 1R0B 0000 1111 : 1011 1101 : 11 qwordreg1 qwordreg2
memory, register	0100 ORXB 0000 1111 : 1011 1101 : mod reg r/m

Table B-15. General Purpose Instruction Formats and Encodings for 64-Bit Mode (Contd.)

Instruction and Format	Encoding
memory64, qwordregister	0100 1RXB 0000 1111 : 1011 1101 : mod qwordreg r/m
BSWAP - Byte Swap	0000 1111 : 1100 1 reg
BSWAP - Byte Swap	0100 100B 0000 1111 : 1100 1 qwordreg
BT - Bit Test	
register, immediate	0100 000B 0000 1111 : 1011 1010 : 11 100 reg: imm8
qwordregister, immediate8	0100 100B 1111 : 1011 1010 : 11 100 qwordreg: imm8 data
memory, immediate	0100 00XB 0000 1111 : 1011 1010 : mod 100 r/m : imm8
memory64, immediate8	0100 10XB 0000 1111 : 1011 1010 : mod 100 r/m : imm8 data
register1, register2	0100 0R0B 0000 1111 : 1010 0011 : 11 reg2 reg1
qwordregister1, qwordregister2	0100 1R0B 0000 1111 : 1010 0011 : 11 qwordreg2 qwordreg1
memory, reg	0100 0RXB 0000 1111 : 1010 0011 : mod reg r/m
memory, qwordreg	0100 1RXB 0000 1111 : 1010 0011 : mod qwordreg r/m
BTC - Bit Test and Complement	
register, immediate	0100 000B 0000 1111 : 1011 1010 : 11 111 reg: imm8
qwordregister, immediate8	0100 100B 0000 1111 : 1011 1010 : 11 111 qwordreg: imm8
memory, immediate	0100 00XB 0000 1111 : 1011 1010 : mod 111 r/m : imm8
memory64, immediate8	0100 10XB 0000 1111 : 1011 1010 : mod 111 r/m : imm8
register1, register2	0100 0R0B 0000 1111 : 1011 1011 : 11 reg2 reg1

Table B-15. General Purpose Instruction Formats and Encodings for 64-Bit Mode (Contd.)

Instruction and Format	Encoding
qwordregister1, qwordregister2	0100 1R0B 0000 1111 : 1011 1011 : 11 qwordreg2 qwordreg1
memory, register	0100 ORXB 0000 1111 : 1011 1011 : mod reg r/m
memory, qwordreg	0100 1RXB 0000 1111 : 1011 1011 : mod qwordreg r/m
BTR - Bit Test and Reset	
register, immediate	0100 000B 0000 1111 : 1011 1010 : 11 110 reg: imm8
qwordregister, immediate8	0100 100B 0000 1111 : 1011 1010 : 11 110 qwordreg: imm8
memory, immediate	0100 00XB 0000 1111 : 1011 1010 : mod 110 r/m : imm8
memory64, immediate8	0100 10XB 0000 1111 : 1011 1010 : mod 110 r/m : imm8
register1, register2	0100 0R0B 0000 1111 : 1011 0011 : 11 reg2 reg1
qwordregister1, qwordregister2	0100 1R0B 0000 1111 : 1011 0011 : 11 qwordreg2 qwordreg1
memory, register	0100 ORXB 0000 1111 : 1011 0011 : mod reg r/m
memory64, qwordreg	0100 1RXB 0000 1111 : 1011 0011 : mod qwordreg r/m
BTS - Bit Test and Set	
register, immediate	0100 000B 0000 1111 : 1011 1010 : 11 101 reg: imm8
qwordregister, immediate8	0100 100B 0000 1111 : 1011 1010 : 11 101 qwordreg: imm8
memory, immediate	0100 00XB 0000 1111 : 1011 1010 : mod 101 r/m : imm8
memory64, immediate8	0100 10XB 0000 1111 : 1011 1010 : mod 101 r/m : imm8

Table B-15. General Purpose Instruction Formats and Encodings for 64-Bit Mode (Contd.)

Instruction and Format	Encoding
register1, register2	0100 0R0B 0000 1111 : 1010 1011 : 11 reg2 reg1
qwordregister1, qwordregister2	0100 1R0B 0000 1111 : 1010 1011 : 11 qwordreg2 qwordreg1
memory, register	0100 ORXB 0000 1111 : 1010 1011 : mod reg r/m
memory64, qwordreg	0100 1RXB 0000 1111 : 1010 1011 : mod qwordreg r/m
CALL - Call Procedure (in same segment)	
direct	1110 1000 : displacement32
register indirect	0100 WR00 <sup>w</sup> 1111 1111 : 11 010 reg
memory indirect	0100 W0XB <sup>w</sup> 1111 1111 : mod 010 r/m
CALL - Call Procedure (in other segment)	
indirect	1111 1111 : mod 011 r/m
indirect	0100 10XB 0100 1000 1111 1111 : mod 011 r/m
CBW - Convert Byte to Word	1001 1000
CDQ - Convert Doubleword to Qword+	1001 1001
CDQE - RAX, Sign-Extend of EAX	0100 1000 1001 1001
CLC - Clear Carry Flag	1111 1000
CLD - Clear Direction Flag	1111 1100
CLI - Clear Interrupt Flag	1111 1010
CLTS - Clear Task-Switched Flag in CRO	0000 1111 : 0000 0110
CMC - Complement Carry Flag	1111 0101
CMP - Compare Two Operands	
register1 with register2	0100 OROB 0011 100w : 11 reg1 reg2
qwordregister1 with qwordregister2	0100 1R0B 0011 1001 : 11 qwordreg1 qwordreg2
register2 with register1	0100 OROB 0011 101w : 11 reg1 reg2
qwordregister2 with qwordregister1	0100 1R0B 0011 101w : 11 gwordreg1
qwordregister 2 with qwordregister i	qwordreg2

Table B-15. General Purpose Instruction Formats and Encodings for 64-Bit Mode (Contd.)

Instruction and Format	Encoding
memory64 with qwordregister	0100 1RXB 0011 1001 : mod qwordreg r/m
register with memory	0100 0RXB 0011 101w : mod reg r/m
qwordregister with memory64	0100 1RXB 0011 101w1 : mod qwordreg r/m
immediate with register	0100 000B 1000 00sw : 11 111 reg : imm
immediate32 with qwordregister	0100 100B 1000 0001 : 11 111 qwordreg : imm64
immediate with AL, AX, or EAX	0011 110w:imm
immediate32 with RAX	0100 1000 0011 1101 : imm32
immediate with memory	0100 00XB 1000 00sw : mod 111 r/m : imm
immediate32 with memory64	0100 1RXB 1000 0001 : mod 111 r/m : imm64
immediate8 with memory64	0100 1RXB 1000 0011 : mod 111 r/m : imm8
CMPS/CMPSB/CMPSW/CMPSD/CMPSQ - Compare String Operands	
compare string operands [ X at DS:(E)SI with Y at ES:(E)DI ]	1010 011w
qword at address RSI with qword at address RDI	0100 1000 1010 0111
CMPXCHG - Compare and Exchange	
register1, register2	0000 1111 : 1011 000w : 11 reg2 reg1
byteregister1, byteregister2	0100 000B 0000 1111 : 1011 0000 : 11 bytereg2 reg1
qwordregister1, qwordregister2	0100 100B 0000 1111 : 1011 0001 : 11 qwordreg2 reg1
memory, register	0000 1111 : 1011 000w : mod reg r/m
memory8, byteregister	0100 00XB 0000 1111 : 1011 0000 : mod bytereg r/m
memory64, qwordregister	0100 10XB 0000 1111 : 1011 0001 : mod qwordreg r/m
CPUID - CPU Identification	0000 1111 : 1010 0010
CQO – Sign-Extend RAX	0100 1000 1001 1001
coo sign extend to to	
CWD - Convert Word to Doubleword	1001 1001

Table B-15. General Purpose Instruction Formats and Encodings for 64-Bit Mode (Contd.)

Instruction and Format	Encoding
DEC – Decrement by 1	
register	0100 000B 1111 111w:11 001 reg
qwordregister	0100 100B 1111 1111 : 11 001 qwordreg
memory	0100 00XB 1111 111w : mod 001 r/m
memory64	0100 10XB 1111 1111 : mod 001 r/m
DIV - Unsigned Divide	
AL, AX, or EAX by register	0100 000B 1111 011w: 11 110 reg
Divide RDX:RAX by qwordregister	0100 100B 1111 0111 : 11 110 qwordreg
AL, AX, or EAX by memory	0100 00XB 1111 011w : mod 110 г/m
Divide RDX:RAX by memory64	0100 10XB 1111 0111 : mod 110 r/m
ENTER – Make Stack Frame for High Level Procedure	1100 1000 : 16-bit displacement : 8-bit level (L)
HLT - Halt	1111 0100
IDIV - Signed Divide	
AL, AX, or EAX by register	0100 000B 1111 011w:11 111 reg
RDX:RAX by qwordregister	0100 100B 1111 0111 : 11 111 qwordreg
AL, AX, or EAX by memory	0100 00XB 1111 011w : mod 111 г/m
RDX:RAX by memory64	0100 10XB 1111 0111 : mod 111 r/m
IMUL - Signed Multiply	
AL, AX, or EAX with register	0100 000B 1111 011w:11 101 reg
RDX:RAX <- RAX with qwordregister	0100 100B 1111 0111 : 11 101 qwordreg
AL, AX, or EAX with memory	0100 00XB 1111 011w : mod 101 г/m
RDX:RAX <- RAX with memory64	0100 10XB 1111 0111 : mod 101 r/m
register1 with register2	0000 1111 : 1010 1111 : 11 : reg1 reg2
qwordregister1 <- qwordregister1 with qwordregister2	0100 1R0B 0000 1111 : 1010 1111 : 11 : qwordreg1 qwordreg2
register with memory	0100 ORXB 0000 1111 : 1010 1111 : mod reg r/m
qwordregister <- qwordregister withmemory64	0100 1RXB 0000 1111 : 1010 1111 : mod qwordreg r/m
register1 with immediate to register2	0100 0R0B 0110 10s1 : 11 reg1 reg2 : imm

Table B-15. General Purpose Instruction Formats and Encodings for 64-Bit Mode (Contd.)

Instruction and Format Faceding	
Instruction and Format	Encoding
qwordregister1 <- qwordregister2 with sign- extended immediate8	0100 1R0B 0110 1011 : 11 qwordreg1 qwordreg2 : imm8
qwordregister1 <- qwordregister2 with immediate32	0100 1R0B 0110 1001 : 11 qwordreg1 qwordreg2 : imm32
memory with immediate to register	0100 ORXB 0110 10s1 : mod reg r/m : imm
qwordregister <- memory64 with sign- extended immediate8	0100 1RXB 0110 1011 : mod qwordreg r/m : imm8
qwordregister <- memory64 with immediate32	0100 1RXB 0110 1001 : mod qwordreg r/m : imm32
IN - Input From Port	
fixed port	1110 010w: port number
variable port	1110 110w
INC - Increment by 1	
reg	0100 000B 1111 111w:11 000 reg
qwordreg	0100 100B 1111 1111 : 11 000 qwordreg
memory	0100 00XB 1111 111w : mod 000 г/m
memory64	0100 10XB 1111 1111 : mod 000 r/m
INS - Input from DX Port	0110 110w
INT n - Interrupt Type n	1100 1101 : type
INT - Single-Step Interrupt 3	1100 1100
INTO - Interrupt 4 on Overflow	1100 1110
INVD - Invalidate Cache	0000 1111 : 0000 1000
INVLPG - Invalidate TLB Entry	0000 1111 : 0000 0001 : mod 111 r/m
IRETO - Interrupt Return	1100 1111
Jcc - Jump if Condition is Met	
8-bit displacement	0111 tttn: 8-bit displacement
displacements (excluding 16-bit relative offsets)	0000 1111 : 1000 tttn : displacement32
JCXZ/JECXZ - Jump on CX/ECX Zero	
Address-size prefix differentiates JCXZ and JECXZ	1110 0011 : 8-bit displacement
JMP - Unconditional Jump (to same segment)	

Table B-15. General Purpose Instruction Formats and Encodings for 64-Bit Mode (Contd.)

Instruction and Format	Encoding
short	1110 1011 : 8-bit displacement
direct	1110 1001 : displacement32
register indirect	0100 W00B <sup>w</sup> : 1111 1111: 11 100 reg
memory indirect	0100 W0XB <sup>w</sup> : 1111 1111 : mod 100 r/m
JMP - Unconditional Jump (to other segment)	
indirect intersegment	0100 00XB : 1111 1111 : mod 101 r/m
64-bit indirect intersegment	0100 10XB: 1111 1111: mod 101 r/m
LAR - Load Access Rights Byte	
from register	0100 0R0B: 0000 1111: 0000 0010: 11 reg1 reg2
from dwordregister to qwordregister, masked by OOFxFFOOH	0100 WR0B: 0000 1111: 0000 0010: 11 qwordreg1 dwordreg2
from memory	0100 0RXB : 0000 1111 : 0000 0010 : mod reg r/m
from memory32 to qwordregister, masked by 00FxFF00H	0100 WRXB 0000 1111 : 0000 0010 : mod r/m
LEA - Load Effective Address	
in wordregister/dwordregister	0100 0RXB : 1000 1101 : mod <sup>A</sup> reg r/m
in qwordregister	0100 1RXB : 1000 1101 : mod <sup>A</sup> qwordreg r/m
LEAVE - High Level Procedure Exit	1100 1001
LFS - Load Pointer to FS	
FS:r16/r32 with far pointer from memory	0100 ORXB : 0000 1111 : 1011 0100 : mod <sup>A</sup> reg r/m
FS:r64 with far pointer from memory	0100 1RXB : 0000 1111 : 1011 0100 : mod <sup>A</sup> qwordreg r/m
LGDT - Load Global Descriptor Table Register	0100 10XB : 0000 1111 : 0000 0001 : mod <sup>A</sup> 010 r/m
LGS - Load Pointer to GS	
GS:r16/r32 with far pointer from memory	0100 0RXB : 0000 1111 : 1011 0101 : mod <sup>A</sup> reg r/m
GS:r64 with far pointer from memory	0100 1RXB : 0000 1111 : 1011 0101 : mod <sup>A</sup> qwordreg r/m

Table B-15. General Purpose Instruction Formats and Encodings for 64-Bit Mode (Contd.)

Instruction and Format	Encoding
LIDT – Load Interrupt Descriptor Table Register	0100 10XB : 0000 1111 : 0000 0001 : mod <sup>A</sup> 011 r/m
LLDT - Load Local Descriptor Table Register	
LDTR from register	0100 000B: 0000 1111: 0000 0000: 11 010 reg
LDTR from memory	0100 00XB :0000 1111 : 0000 0000 : mod 010 r/m
LMSW - Load Machine Status Word	
from register	0100 000B: 0000 1111: 0000 0001: 11 110 reg
from memory	0100 00XB :0000 1111 : 0000 0001 : mod 110 r/m
LOCK - Assert LOCK# Signal Prefix	1111 0000
LODS/LODSB/LODSW/LODSD/LODSQ - Load String Operand	
at DS:(E)SI to AL/EAX/EAX	1010 110w
at (R)SI to RAX	0100 1000 1010 1101
LOOP - Loop Count	
if count != 0, 8-bit displacement	1110 0010
if count !=0, RIP + 8-bit displacement sign- extended to 64-bits	0100 1000 1110 0010
LOOPE - Loop Count while Zero/Equal	
if count != 0 & ZF =1, 8-bit displacement	1110 0001
if count !=0 & ZF = 1, RIP + 8-bit displacement sign-extended to 64-bits	0100 1000 1110 0001
LOOPNE/LOOPNZ – Loop Count while not Zero/Equal	
if count != 0 & ZF = 0, 8-bit displacement	1110 0000
if count !=0 & ZF = 0, RIP + 8-bit displacement sign-extended to 64-bits	0100 1000 1110 0000
LSL - Load Segment Limit	
from register	0000 1111 : 0000 0011 : 11 reg1 reg2

Table B-15. General Purpose Instruction Formats and Encodings for 64-Bit Mode (Contd.)

Instruction and Format	Encoding
from qwordregister	0100 1R00 0000 1111 : 0000 0011 : 11 qwordreg1 reg2
from memory16	0000 1111 : 0000 0011 : mod reg r/m
from memory64	0100 1RXB 0000 1111 : 0000 0011 : mod qwordreg r/m
LSS - Load Pointer to SS	
SS:r16/r32 with far pointer from memory	0100 0RXB : 0000 1111 : 1011 0010 : mod <sup>A</sup> reg r/m
SS:r64 with far pointer from memory	0100 1WXB : 0000 1111 : 1011 0010 : mod <sup>A</sup> qwordreg r/m
LTR - Load Task Register	
from register	0100 0R00 : 0000 1111 : 0000 0000 : 11 011 reg
from memory	0100 00XB : 0000 1111 : 0000 0000 : mod 011 r/m
MOV - Move Data	
register1 to register2	0100 0R0B : 1000 100w : 11 reg1 reg2
qwordregister1 to qwordregister2	0100 1R0B 1000 1001 : 11 qwordeg1 qwordreg2
register2 to register1	0100 0R0B : 1000 101w : 11 reg1 reg2
qwordregister2 to qwordregister1	0100 1R0B 1000 1011 : 11 qwordreg1 qwordreg2
memory to reg	0100 0RXB : 1000 101w : mod reg r/m
memory64 to qwordregister	0100 1RXB 1000 1011 : mod qwordreg r/m
reg to memory	0100 0RXB : 1000 100w : mod reg r/m
qwordregister to memory64	0100 1RXB 1000 1001 : mod qwordreg r/m
immediate to register	0100 000B : 1100 011w : 11 000 reg : imm
immediate32 to qwordregister (zero extend)	0100 100B 1100 0111 : 11 000 qwordreg : imm32
immediate to register (alternate encoding)	0100 000B : 1011 w reg : imm
immediate64 to qwordregister (alternate encoding)	0100 100B 1011 1000 reg: imm64
immediate to memory	0100 00XB : 1100 011w : mod 000 r/m : imm

Table B-15. General Purpose Instruction Formats and Encodings for 64-Bit Mode (Contd.)

Instruction and Format	Encoding
immediate32 to memory64 (zero extend)	0100 10XB 1100 0111 : mod 000 r/m : imm32
memory to AL, AX, or EAX	0100 0000 : 1010 000w : displacement
memory64 to RAX	0100 1000 1010 0001 : displacement64
AL, AX, or EAX to memory	0100 0000 : 1010 001w : displacement
RAX to memory64	0100 1000 1010 0011 : displacement64
MOV - Move to/from Control Registers	
CRO-CR4 from register	0100 0R0B: 0000 1111: 0010 0010: 11 eee reg (eee = CR#)
CRx from qwordregister	0100 1R0B: 0000 1111: 0010 0010: 11 eee qwordreg (Reee = CR#)
register from CRO-CR4	0100 0R0B: 0000 1111: 0010 0000: 11 eee reg (eee = CR#)
qwordregister from CRx	0100 1R0B 0000 1111 : 0010 0000 : 11 eee qwordreg (Reee = CR#)
MOV - Move to/from Debug Registers	
DRO-DR7 from register	0000 1111 : 0010 0011 : 11 eee reg (eee = DR#)
DRO-DR7 from quadregister	0100 100B 0000 1111 : 0010 0011 : 11 eee reg (eee = DR#)
register from DRO-DR7	0000 1111 : 0010 0001 : 11 eee reg (eee = DR#)
quadregister from DRO-DR7	0100 100B 0000 1111 : 0010 0001 : 11 eee quadreg (eee = DR#)
MOV - Move to/from Segment Registers	
register to segment register	0100 W00B <sup>w</sup> : 1000 1110 : 11 sreg reg
register to SS	0100 000B : 1000 1110 : 11 sreg reg
memory to segment register	0100 00XB : 1000 1110 : mod sreg r/m
memory64 to segment register (lower 16 bits)	0100 10XB 1000 1110 : mod sreg r/m
memory to SS	0100 00XB : 1000 1110 : mod sreg r/m
segment register to register	0100 000B : 1000 1100 : 11 sreg reg
segment register to qwordregister (zero extended)	0100 100B 1000 1100 : 11 sreg qwordreg

Table B-15. General Purpose Instruction Formats and Encodings for 64-Bit Mode (Contd.)

Instruction and Format	Encoding
segment register to memory64 (zero extended)	0100 10XB 1000 1100 : mod sreg3 r/m
MOVBE - Move data after swapping bytes	
memory to register	0100 0RXB: 0000 1111: 0011 1000:1111 0000: mod reg r/m
memory64 to qwordregister	0100 1RXB: 0000 1111: 0011 1000:1111 0000: mod reg r/m
register to memory	0100 0RXB:0000 1111:0011 1000:1111 0001:mod reg r/m
qwordregister to memory64	0100 1RXB:0000 1111:0011 1000:1111 0001:mod reg r/m
MOVS/MOVSB/MOVSW/MOVSD/MOVSQ - Move Data from String to String	
Move data from string to string	1010 010w
Move data from string to string (qword)	0100 1000 1010 0101
MOVSX/MOVSXD - Move with Sign-Extend	
register2 to register1	0100 0R0B: 0000 1111: 1011 111w: 11 reg1 reg2
byteregister2 to qwordregister1 (sign- extend)	0100 1R0B 0000 1111 : 1011 1110 : 11 quadreg1 bytereg2
wordregister2 to qwordregister1	0100 1R0B 0000 1111 : 1011 1111 : 11 quadreg1 wordreg2
dwordregister2 to qwordregister1	0100 1R0B 0110 0011 : 11 quadreg1 dwordreg2
memory to register	0100 ORXB : 0000 1111 : 1011 111w : mod reg r/m
memory8 to qwordregister (sign-extend)	0100 1RXB 0000 1111 : 1011 1110 : mod qwordreg r/m
memory16 to qwordregister	0100 1RXB 0000 1111 : 1011 1111 : mod qwordreg r/m
memory32 to qwordregister	0100 1RXB 0110 0011 : mod qwordreg r/m
MOVZX - Move with Zero-Extend	
register2 to register1	0100 0R0B: 0000 1111: 1011 011w: 11 reg1 reg2

Table B-15. General Purpose Instruction Formats and Encodings for 64-Bit Mode (Contd.)

Instruction and Format	Encoding
dwordregister2 to qwordregister1	0100 1R0B 0000 1111 : 1011 0111 : 11 qwordreg1 dwordreg2
memory to register	0100 0RXB : 0000 1111 : 1011 011w : mod reg r/m
memory32 to qwordregister	0100 1RXB 0000 1111 : 1011 0111 : mod qwordreg r/m
MUL - Unsigned Multiply	
AL, AX, or EAX with register	0100 000B: 1111 011w: 11 100 reg
RAX with qwordregister (to RDX:RAX)	0100 100B 1111 0111 : 11 100 qwordreg
AL, AX, or EAX with memory	0100 00XB 1111 011w : mod 100 r/m
RAX with memory64 (to RDX:RAX)	0100 10XB 1111 0111 : mod 100 r/m
NEG - Two's Complement Negation	
register	0100 000B: 1111 011w: 11 011 reg
qwordregister	0100 100B 1111 0111 : 11 011 qwordreg
memory	0100 00XB: 1111 011w: mod 011 r/m
memory64	0100 10XB 1111 0111 : mod 011 r/m
NOP - No Operation	1001 0000
NOT - One's Complement Negation	
register	0100 000B: 1111 011w: 11 010 reg
qwordregister	0100 000B 1111 0111 : 11 010 qwordreg
memory	0100 00XB: 1111 011w: mod 010 r/m
memory64	0100 1RXB 1111 0111 : mod 010 r/m
OR - Logical Inclusive OR	
register1 to register2	0000 100w:11 reg1 reg2
byteregister1 to byteregister2	0100 0R0B 0000 1000 : 11 bytereg1 bytereg2
qwordregister1 to qwordregister2	0100 1R0B 0000 1001 : 11 qwordreg1 qwordreg2
register2 to register1	0000 101w:11 reg1 reg2
byteregister2 to byteregister1	0100 0R0B 0000 1010 : 11 bytereg1 bytereg2

Table B-15. General Purpose Instruction Formats and Encodings for 64-Bit Mode (Contd.)

Instruction and Format	Encoding
qwordregister2 to qwordregister1	0100 OROB 0000 1011 : 11 qwordreg1 qwordreg2
memory to register	0000 101w : mod reg r/m
memory8 to byteregister	0100 ORXB 0000 1010 : mod bytereg r/m
memory8 to qwordregister	0100 ORXB 0000 1011 : mod qwordreg r/m
register to memory	0000 100w : mod reg r/m
byteregister to memory8	0100 ORXB 0000 1000 : mod bytereg r/m
qwordregister to memory64	0100 1RXB 0000 1001 : mod qwordreg r/m
immediate to register	1000 00sw: 11 001 reg: imm
immediate8 to byteregister	0100 000B 1000 0000 : 11 001 bytereg : imm8
immediate32 to qwordregister	0100 000B 1000 0001 : 11 001 qwordreg : imm32
immediate8 to qwordregister	0100 000B 1000 0011 : 11 001 qwordreg : imm8
immediate to AL, AX, or EAX	0000 110w : imm
immediate64 to RAX	0100 1000 0000 1101 : imm64
immediate to memory	1000 00sw: mod 001 r/m: imm
immediate8 to memory8	0100 00XB 1000 0000 : mod 001 r/m : imm8
immediate32 to memory64	0100 00XB 1000 0001 : mod 001 r/m : imm32
immediate8 to memory64	0100 00XB 1000 0011 : mod 001 r/m : imm8
OUT - Output to Port	
fixed port	1110 011w : port number
variable port	1110 111w
OUTS - Output to DX Port	
output to DX Port	0110 111w
POP - Pop a Value from the Stack	
wordregister	0101 0101 : 0100 000B : 1000 1111 : 11 000 reg16
qwordregister	0100 W00B <sup>S</sup> : 1000 1111: 11 000 reg64
wordregister (alternate encoding)	0101 0101 : 0100 000B : 0101 1 reg16

Table B-15. General Purpose Instruction Formats and Encodings for 64-Bit Mode (Contd.)

101 04-011 1-10	
Instruction and Format	Encoding
qwordregister (alternate encoding)	0100 W00B:0101 1 reg64
memory64	0100 W0XB <sup>S</sup> : 1000 1111 : mod 000 г/m
memory16	0101 0101 : 0100 00XB 1000 1111 : mod 000 r/m
POP - Pop a Segment Register from the Stack (Note: CS cannot be sreg2 in this usage.)	
segment register FS, GS	0000 1111: 10 sreg3 001
POPF/POPFQ - Pop Stack into FLAGS/RFLAGS Register	
pop stack to FLAGS register	0101 0101 : 1001 1101
pop Stack to RFLAGS register	0100 1000 1001 1101
PUSH - Push Operand onto the Stack	
wordregister	0101 0101:0100 000B:1111 1111:11 110 reg16
qwordregister	0100 W00B <sup>S</sup> : 1111 1111 : 11 110 reg64
wordregister (alternate encoding)	0101 0101 : 0100 000B : 0101 0 reg16
qwordregister (alternate encoding)	0100 W00B <sup>S</sup> : 0101 0 reg64
memory16	0101 0101 : 0100 000B : 1111 1111 : mod 110 r/m
memory64	0100 W00B <sup>S</sup> : 1111 1111 : mod 110 r/m
immediate8	0110 1010 : imm8
immediate16	0101 0101 : 0110 1000 : imm16
immediate64	0110 1000 : imm64
PUSH - Push Segment Register onto the Stack	
segment register FS,GS	0000 1111: 10 sreg3 000
PUSHF/PUSHFD - Push Flags Register onto the Stack	1001 1100
RCL - Rotate thru Carry Left	
register by 1	0100 000B: 1101 000w: 11 010 reg
qwordregister by 1	0100 100B 1101 0001 : 11 010 qwordreg
memory by 1	0100 00XB : 1101 000w : mod 010 r/m

Table B-15. General Purpose Instruction Formats and Encodings for 64-Bit Mode (Contd.)

Instruction and Format	Encoding
memory64 by 1	0100 10XB 1101 0001 : mod 010 r/m
register by CL	0100 000B : 1101 001w : 11 010 reg
qwordregister by CL	0100 100B 1101 0011 : 11 010 qwordreg
memory by CL	0100 00XB: 1101 001w: mod 010 r/m
memory64 by CL	0100 10XB 1101 0011 : mod 010 r/m
register by immediate count	0100 000B : 1100 000w : 11 010 reg : imm
qwordregister by immediate count	0100 100B 1100 0001 : 11 010 qwordreg : imm8
memory by immediate count	0100 00XB : 1100 000w : mod 010 r/m : imm
memory64 by immediate count	0100 10XB 1100 0001 : mod 010 r/m : imm8
RCR - Rotate thru Carry Right	
register by 1	0100 000B: 1101 000w: 11 011 reg
qwordregister by 1	0100 100B 1101 0001 : 11 011 qwordreg
memory by 1	0100 00XB : 1101 000w : mod 011 r/m
memory64 by 1	0100 10XB 1101 0001 : mod 011 r/m
register by CL	0100 000B:1101 001w:11 011 reg
qwordregister by CL	0100 000B 1101 0010 : 11 011 qwordreg
memory by CL	0100 00XB : 1101 001w : mod 011 r/m
memory64 by CL	0100 10XB 1101 0011 : mod 011 r/m
register by immediate count	0100 000B : 1100 000w : 11 011 reg : imm8
qwordregister by immediate count	0100 100B 1100 0001 : 11 011 qwordreg : imm8
memory by immediate count	0100 00XB: 1100 000w: mod 011 r/m: imm8
memory64 by immediate count	0100 10XB 1100 0001 : mod 011 r/m : imm8
RDMSR - Read from Model-Specific Register	
load ECX-specified register into EDX:EAX	0000 1111 : 0011 0010
RDPMC - Read Performance Monitoring Counters	
load ECX-specified performance counter into EDX:EAX	0000 1111 : 0011 0011
RDTSC - Read Time-Stamp Counter	

Table B-15. General Purpose Instruction Formats and Encodings for 64-Bit Mode (Contd.)

Instruction and Format	Encoding
read time-stamp counter into EDX:EAX	0000 1111 : 0011 0001
RDTSCP - Read Time-Stamp Counter and Processor ID	0000 1111 : 0000 0001: 1111 1001
REP INS - Input String	
REP LODS - Load String	
REP MOVS - Move String	
REP OUTS - Output String	
REP STOS - Store String	
REPE CMPS – Compare String	
REPE SCAS – Scan String	
REPNE CMPS - Compare String	
REPNE SCAS – Scan String	
RET - Return from Procedure (to same segment)	
no argument	1100 0011
adding immediate to SP	1100 0010 : 16-bit displacement
RET - Return from Procedure (to other segment)	
intersegment	1100 1011
adding immediate to SP	1100 1010 : 16-bit displacement
ROL - Rotate Left	
register by 1	0100 000B 1101 000w : 11 000 reg
byteregister by 1	0100 000B 1101 0000 : 11 000 bytereg
qwordregister by 1	0100 100B 1101 0001 : 11 000 qwordreg
memory by 1	0100 00XB 1101 000w : mod 000 r/m
memory8 by 1	0100 00XB 1101 0000 : mod 000 r/m
memory64 by 1	0100 10XB 1101 0001 : mod 000 r/m
register by CL	0100 000B 1101 001w: 11 000 reg
byteregister by CL	0100 000B 1101 0010 : 11 000 bytereg
qwordregister by CL	0100 100B 1101 0011 : 11 000 qwordreg

Table B-15. General Purpose Instruction Formats and Encodings for 64-Bit Mode (Contd.)

Instruction and Format	Encoding
memory by CL	0100 00XB 1101 001w: mod 000 r/m
memory8 by CL	0100 00XB 1101 0010 : mod 000 r/m
memory64 by CL	0100 10XB 1101 0011 : mod 000 r/m
register by immediate count	1100 000w : 11 000 reg : imm8
byteregister by immediate count	0100 000B 1100 0000 : 11 000 bytereg : imm8
qwordregister by immediate count	0100 100B 1100 0001 : 11 000 bytereg : imm8
memory by immediate count	1100 000w: mod 000 r/m: imm8
memory8 by immediate count	0100 00XB 1100 0000 : mod 000 r/m : imm8
memory64 by immediate count	0100 10XB 1100 0001 : mod 000 r/m : imm8
ROR - Rotate Right	
register by 1	0100 000B 1101 000w: 11 001 reg
byteregister by 1	0100 000B 1101 0000 : 11 001 bytereg
qwordregister by 1	0100 100B 1101 0001 : 11 001 qwordreg
memory by 1	0100 00XB 1101 000w : mod 001 r/m
memory8 by 1	0100 00XB 1101 0000 : mod 001 r/m
memory64 by 1	0100 10XB 1101 0001 : mod 001 r/m
register by CL	0100 000B 1101 001w:11 001 reg
byteregister by CL	0100 000B 1101 0010:11 001 bytereg
qwordregister by CL	0100 100B 1101 0011 : 11 001 qwordreg
memory by CL	0100 00XB 1101 001w: mod 001 r/m
memory8 by CL	0100 00XB 1101 0010 : mod 001 r/m
memory64 by CL	0100 10XB 1101 0011 : mod 001 r/m
register by immediate count	0100 000B 1100 000w : 11 001 reg : imm8
byteregister by immediate count	0100 000B 1100 0000 : 11 001 reg : imm8
qwordregister by immediate count	0100 100B 1100 0001 : 11 001 qwordreg : imm8
memory by immediate count	0100 00XB 1100 000w: mod 001 r/m: imm8
memory8 by immediate count	0100 00XB 1100 0000 : mod 001 r/m : imm8

Table B-15. General Purpose Instruction Formats and Encodings for 64-Bit Mode (Contd.)

Instruction and Format	Encoding
memory64 by immediate count	0100 10XB 1100 0001 : mod 001 r/m : imm8
RSM – Resume from System Management Mode	0000 1111 : 1010 1010
SAL - Shift Arithmetic Left	same instruction as SHL
SAR - Shift Arithmetic Right	
register by 1	0100 000B 1101 000w : 11 111 reg
byteregister by 1	0100 000B 1101 0000 : 11 111 bytereg
qwordregister by 1	0100 100B 1101 0001 : 11 111 qwordreg
memory by 1	0100 00XB 1101 000w : mod 111 г/m
memory8 by 1	0100 00XB 1101 0000 : mod 111 r/m
memory64 by 1	0100 10XB 1101 0001 : mod 111 r/m
register by CL	0100 000B 1101 001w : 11 111 reg
byteregister by CL	0100 000B 1101 0010 : 11 111 bytereg
qwordregister by CL	0100 100B 1101 0011 : 11 111 qwordreg
memory by CL	0100 00XB 1101 001w : mod 111 г/m
memory8 by CL	0100 00XB 1101 0010 : mod 111 r/m
memory64 by CL	0100 10XB 1101 0011 : mod 111 r/m
register by immediate count	0100 000B 1100 000w : 11 111 reg : imm8
byteregister by immediate count	0100 000B 1100 0000 : 11 111 bytereg : imm8
qwordregister by immediate count	0100 100B 1100 0001 : 11 111 qwordreg : imm8
memory by immediate count	0100 00XB 1100 000w : mod 111 r/m : imm8
memory8 by immediate count	0100 00XB 1100 0000 : mod 111 r/m : imm8
memory64 by immediate count	0100 10XB 1100 0001 : mod 111 r/m : imm8
SBB - Integer Subtraction with Borrow	
register1 to register2	0100 0R0B 0001 100w : 11 reg1 reg2
byteregister1 to byteregister2	0100 0R0B 0001 1000 : 11 bytereg1 bytereg2
quadregister1 to quadregister2	0100 1R0B 0001 1001 : 11 quadreg1 quadreg2

Table B-15. General Purpose Instruction Formats and Encodings for 64-Bit Mode (Contd.)

Instruction and Format	Encoding
register2 to register1	0100 0R0B 0001 101w:11 reg1 reg2
byteregister2 to byteregister1	0100 0R0B 0001 1010 : 11 reg1 bytereg2
byteregister2 to byteregister1	0100 1R0B 0001 1011 : 11 reg1 bytereg2
memory to register	0100 0RXB 0001 101w : mod reg r/m
memory8 to byteregister	0100 0RXB 0001 1010 : mod bytereg r/m
memory64 to byteregister	0100 1RXB 0001 1011 : mod quadreg r/m
register to memory	0100 0RXB 0001 100w : mod reg r/m
byteregister to memory8	0100 0RXB 0001 1000 : mod reg r/m
quadregister to memory64	0100 1RXB 0001 1001 : mod reg r/m
immediate to register	0100 000B 1000 00sw:11 011 reg:imm
immediate8 to byteregister	0100 000B 1000 0000 : 11 011 bytereg : imm8
immediate32 to qwordregister	0100 100B 1000 0001 : 11 011 qwordreg : imm32
immediate8 to qwordregister	0100 100B 1000 0011 : 11 011 qwordreg : imm8
immediate to AL, AX, or EAX	0100 000B 0001 110w:imm
immediate32 to RAL	0100 1000 0001 1101 : imm32
immediate to memory	0100 00XB 1000 00sw : mod 011 r/m : imm
immediate8 to memory8	0100 00XB 1000 0000 : mod 011 r/m : imm8
immediate32 to memory64	0100 10XB 1000 0001 : mod 011 r/m : imm32
immediate8 to memory64	0100 10XB 1000 0011 : mod 011 r/m : imm8
SCAS/SCASB/SCASW/SCASD - Scan String	
scan string	1010 111w
scan string (compare AL with byte at RDI)	0100 1000 1010 1110
scan string (compare RAX with qword at RDI)	0100 1000 1010 1111
SETcc - Byte Set on Condition	
register	0100 000B 0000 1111 : 1001 tttn : 11 000 reg
register	0100 0000 0000 1111 : 1001 tttn : 11 000 reg

Table B-15. General Purpose Instruction Formats and Encodings for 64-Bit Mode (Contd.)

Instruction and Format	Encoding
memory	0100 00XB 0000 1111 : 1001 tttn : mod 000 r/m
memory	0100 0000 0000 1111 : 1001 tttn : mod 000 r/m
SGDT - Store Global Descriptor Table Register	0000 1111 : 0000 0001 : mod <sup>A</sup> 000 r/m
SHL - Shift Left	
register by 1	0100 000B 1101 000w : 11 100 reg
byteregister by 1	0100 000B 1101 0000 : 11 100 bytereg
qwordregister by 1	0100 100B 1101 0001 : 11 100 qwordreg
memory by 1	0100 00XB 1101 000w: mod 100 r/m
memory8 by 1	0100 00XB 1101 0000 : mod 100 r/m
memory64 by 1	0100 10XB 1101 0001 : mod 100 r/m
register by CL	0100 000B 1101 001w:11 100 reg
byteregister by CL	0100 000B 1101 0010 : 11 100 bytereg
qwordregister by CL	0100 100B 1101 0011 : 11 100 qwordreg
memory by CL	0100 00XB 1101 001w: mod 100 r/m
memory8 by CL	0100 00XB 1101 0010 : mod 100 r/m
memory64 by CL	0100 10XB 1101 0011 : mod 100 r/m
register by immediate count	0100 000B 1100 000w : 11 100 reg : imm8
byteregister by immediate count	0100 000B 1100 0000 : 11 100 bytereg : imm8
quadregister by immediate count	0100 100B 1100 0001 : 11 100 quadreg : imm8
memory by immediate count	0100 00XB 1100 000w : mod 100 r/m : imm8
memory8 by immediate count	0100 00XB 1100 0000 : mod 100 r/m : imm8
memory64 by immediate count	0100 10XB 1100 0001 : mod 100 r/m : imm8
SHLD - Double Precision Shift Left	
register by immediate count	0100 0R0B 0000 1111 : 1010 0100 : 11 reg2 reg1 : imm8
qwordregister by immediate8	0100 1R0B 0000 1111 : 1010 0100 : 11 qworddreg2 qwordreg1 : imm8

Table B-15. General Purpose Instruction Formats and Encodings for 64-Bit Mode (Contd.)

Instruction and Format	Encoding
memory by immediate count	0100 0RXB 0000 1111 : 1010 0100 : mod reg r/m : imm8
memory64 by immediate8	0100 1RXB 0000 1111 : 1010 0100 : mod qwordreg r/m : imm8
register by CL	0100 0R0B 0000 1111 : 1010 0101 : 11 reg2 reg1
quadregister by CL	0100 1R0B 0000 1111 : 1010 0101 : 11 quadreg2 quadreg1
memory by CL	0100 00XB 0000 1111 : 1010 0101 : mod reg r/m
memory64 by CL	0100 1RXB 0000 1111 : 1010 0101 : mod quadreg r/m
SHR - Shift Right	
register by 1	0100 000B 1101 000w : 11 101 reg
byteregister by 1	0100 000B 1101 0000 : 11 101 bytereg
qwordregister by 1	0100 100B 1101 0001 : 11 101 qwordreg
memory by 1	0100 00XB 1101 000w : mod 101 r/m
memory8 by 1	0100 00XB 1101 0000 : mod 101 r/m
memory64 by 1	0100 10XB 1101 0001 : mod 101 r/m
register by CL	0100 000B 1101 001w:11 101 reg
byteregister by CL	0100 000B 1101 0010:11 101 bytereg
qwordregister by CL	0100 100B 1101 0011 : 11 101 qwordreg
memory by CL	0100 00XB 1101 001w : mod 101 r/m
memory8 by CL	0100 00XB 1101 0010 : mod 101 r/m
memory64 by CL	0100 10XB 1101 0011 : mod 101 r/m
register by immediate count	0100 000B 1100 000w : 11 101 reg : imm8
byteregister by immediate count	0100 000B 1100 0000 : 11 101 reg : imm8
qwordregister by immediate count	0100 100B 1100 0001 : 11 101 reg : imm8
memory by immediate count	0100 00XB 1100 000w: mod 101 r/m: imm8
memory8 by immediate count	0100 00XB 1100 0000 : mod 101 r/m : imm8

Table B-15. General Purpose Instruction Formats and Encodings for 64-Bit Mode (Contd.)

Instruction and Format	Encoding
memory64 by immediate count	0100 10XB 1100 0001 : mod 101 r/m : imm8
SHRD - Double Precision Shift Right	
register by immediate count	0100 0R0B 0000 1111 : 1010 1100 : 11 reg2 reg1 : imm8
qwordregister by immediate8	0100 1R0B 0000 1111 : 1010 1100 : 11 qwordreg2 qwordreg1 : imm8
memory by immediate count	0100 00XB 0000 1111 : 1010 1100 : mod reg r/m : imm8
memory64 by immediate8	0100 1RXB 0000 1111 : 1010 1100 : mod qwordreg r/m : imm8
register by CL	0100 000B 0000 1111 : 1010 1101 : 11 reg2 reg1
qwordregister by CL	0100 1R0B 0000 1111 : 1010 1101 : 11 qwordreg2 qwordreg1
memory by CL	0000 1111 : 1010 1101 : mod reg r/m
memory64 by CL	0100 1RXB 0000 1111 : 1010 1101 : mod qwordreg r/m
SIDT - Store Interrupt Descriptor Table Register	0000 1111 : 0000 0001 : mod <sup>A</sup> 001 r/m
SLDT - Store Local Descriptor Table Register	
to register	0100 000B 0000 1111 : 0000 0000 : 11 000 reg
to memory	0100 00XB 0000 1111 : 0000 0000 : mod 000 r/m
SMSW - Store Machine Status Word	
to register	0100 000B 0000 1111 : 0000 0001 : 11 100 reg
to memory	0100 00XB 0000 1111 : 0000 0001 : mod 100 r/m
STC - Set Carry Flag	1111 1001
STD - Set Direction Flag	1111 1101
STI - Set Interrupt Flag	1111 1011

Table B-15. General Purpose Instruction Formats and Encodings for 64-Bit Mode (Contd.)

Instruction and Format	Encoding
STOS/STOSB/STOSW/STOSD/STOSQ - Store String Data	
store string data	1010 101w
store string data (RAX at address RDI)	0100 1000 1010 1011
STR - Store Task Register	
to register	0100 000B 0000 1111 : 0000 0000 : 11 001 reg
to memory	0100 00XB 0000 1111 : 0000 0000 : mod 001 r/m
SUB - Integer Subtraction	
register1 from register2	0100 0R0B 0010 100w : 11 reg1 reg2
byteregister1 from byteregister2	0100 0R0B 0010 1000 : 11 bytereg1 bytereg2
qwordregister1 from qwordregister2	0100 1R0B 0010 1000 : 11 qwordreg1 qwordreg2
register2 from register1	0100 0R0B 0010 101w:11 reg1 reg2
byteregister2 from byteregister1	0100 OROB 0010 1010 : 11 bytereg1 bytereg2
qwordregister2 from qwordregister1	0100 1R0B 0010 1011 : 11 qwordreg1 qwordreg2
memory from register	0100 00XB 0010 101w : mod reg r/m
memory8 from byteregister	0100 ORXB 0010 1010 : mod bytereg r/m
memory64 from qwordregister	0100 1RXB 0010 1011 : mod qwordreg r/m
register from memory	0100 0RXB 0010 100w : mod reg r/m
byteregister from memory8	0100 ORXB 0010 1000 : mod bytereg r/m
qwordregister from memory8	0100 1RXB 0010 1000 : mod qwordreg r/m
immediate from register	0100 000B 1000 00sw: 11 101 reg: imm
immediate8 from byteregister	0100 000B 1000 0000 : 11 101 bytereg : imm8
immediate32 from qwordregister	0100 100B 1000 0001 : 11 101 qwordreg : imm32

Table B-15. General Purpose Instruction Formats and Encodings for 64-Bit Mode (Contd.)

Instruction and Format	Encoding
immediate8 from qwordregister	0100 100B 1000 0011 : 11 101 qwordreg : imm8
immediate from AL, AX, or EAX	0100 000B 0010 110w : imm
immediate32 from RAX	0100 1000 0010 1101 : imm32
immediate from memory	0100 00XB 1000 00sw : mod 101 r/m : imm
immediate8 from memory8	0100 00XB 1000 0000 : mod 101 r/m : imm8
immediate32 from memory64	0100 10XB 1000 0001 : mod 101 r/m : imm32
immediate8 from memory64	0100 10XB 1000 0011 : mod 101 r/m : imm8
SWAPGS – Swap GS Base Register	
GS base register value for value in MSR C0000102H	0000 1111 0000 0001 [this one incomplete]
SYSCALL - Fast System Call	
fast call to privilege level 0 system procedures	0000 1111 0000 0101
SYSRET - Return From Fast System Call	
return from fast system call	0000 1111 0000 0111
TEST - Logical Compare	
register1 and register2	0100 0R0B 1000 010w : 11 reg1 reg2
byteregister1 and byteregister2	0100 0R0B 1000 0100 : 11 bytereg1 bytereg2
qwordregister1 and qwordregister2	0100 1R0B 1000 0101 : 11 qwordreg1 qwordreg2
memory and register	0100 0R0B 1000 010w : mod reg r/m
memory8 and byteregister	0100 ORXB 1000 0100 : mod bytereg r/m
memory64 and qwordregister	0100 1RXB 1000 0101 : mod qwordreg r/m
immediate and register	0100 000B 1111 011w : 11 000 reg : imm
immediate8 and byteregister	0100 000B 1111 0110 : 11 000 bytereg : imm8
immediate32 and qwordregister	0100 100B 1111 0111 : 11 000 bytereg : imm8
immediate and AL, AX, or EAX	0100 000B 1010 100w : imm

Table B-15. General Purpose Instruction Formats and Encodings for 64-Bit Mode (Contd.)

Instruction and Format	Encoding
immediate32 and RAX	0100 1000 1010 1001 : imm32
immediate and memory	0100 00XB 1111 011w : mod 000 r/m : imm
immediate8 and memory8	0100 1000 1111 0110 : mod 000 r/m : imm8
immediate32 and memory64	0100 1000 1111 0111 : mod 000 r/m : imm32
UD2 - Undefined instruction	0000 FFFF : 0000 1011
VERR - Verify a Segment for Reading	
register	0100 000B 0000 1111 : 0000 0000 : 11 100 reg
memory	0100 00XB 0000 1111 : 0000 0000 : mod 100 r/m
VERW - Verify a Segment for Writing	
register	0100 000B 0000 1111 : 0000 0000 : 11 101 reg
memory	0100 00XB 0000 1111 : 0000 0000 : mod 101 r/m
WAIT - Wait	1001 1011
WBINVD - Writeback and Invalidate Data Cache	0000 1111 : 0000 1001
WRMSR - Write to Model-Specific Register	
write EDX:EAX to ECX specified MSR	0000 1111 : 0011 0000
write RDX[31:0]:RAX[31:0] to RCX specified MSR	0100 1000 0000 1111 : 0011 0000
XADD - Exchange and Add	
register1, register2	0100 0R0B 0000 1111 : 1100 000w : 11 reg2 reg1
byteregister1, byteregister2	0100 OROB 0000 1111 : 1100 0000 : 11 bytereg2 bytereg1
qwordregister1, qwordregister2	0100 OROB 0000 1111 : 1100 0001 : 11 qwordreg2 qwordreg1
memory, register	0100 ORXB 0000 1111 : 1100 000w : mod reg r/m

Table B-15. General Purpose Instruction Formats and Encodings for 64-Bit Mode (Contd.)

Instruction and Format	Encoding
memory8, bytereg	0100 1RXB 0000 1111 : 1100 0000 : mod bytereg r/m
memory64, qwordreg	0100 1RXB 0000 1111 : 1100 0001 : mod qwordreg r/m
XCHG - Exchange Register/Memory with Register	
register1 with register2	1000 011w: 11 reg1 reg2
AX or EAX with register	1001 0 reg
memory with register	1000 011w : mod reg r/m
XLAT/XLATB - Table Look-up Translation	
AL to byte DS:[(E)BX + unsigned AL]	1101 0111
AL to byte DS:[RBX + unsigned AL]	0100 1000 1101 0111
XOR - Logical Exclusive OR	
register1 to register2	0100 0RXB 0011 000w : 11 reg1 reg2
byteregister1 to byteregister2	0100 0R0B 0011 0000 : 11 bytereg1 bytereg2
qwordregister1 to qwordregister2	0100 1R0B 0011 0001 : 11 qwordreg1 qwordreg2
register2 to register1	0100 0R0B 0011 001w:11 reg1 reg2
byteregister2 to byteregister1	0100 0R0B 0011 0010 : 11 bytereg1 bytereg2
qwordregister2 to qwordregister1	0100 1R0B 0011 0011 : 11 qwordreg1 qwordreg2
memory to register	0100 0RXB 0011 001w : mod reg r/m
memory8 to byteregister	0100 ORXB 0011 0010 : mod bytereg r/m
memory64 to qwordregister	0100 1RXB 0011 0011 : mod qwordreg r/m
register to memory	0100 0RXB 0011 000w : mod reg r/m
byteregister to memory8	0100 ORXB 0011 0000 : mod bytereg r/m
qwordregister to memory8	0100 1RXB 0011 0001 : mod qwordreg r/m
immediate to register	0100 000B 1000 00sw : 11 110 reg : imm
immediate8 to byteregister	0100 000B 1000 0000 : 11 110 bytereg : imm8

Table B-15. General Purpose Instruction Formats and Encodings for 64-Bit Mode (Contd.)

Instruction and Format	Encoding
immediate32 to qwordregister	0100 100B 1000 0001 : 11 110 qwordreg : imm32
immediate8 to qwordregister	0100 100B 1000 0011 : 11 110 qwordreg : imm8
immediate to AL, AX, or EAX	0100 000B 0011 010w : imm
immediate to RAX	0100 1000 0011 0101 : immediate data
immediate to memory	0100 00XB 1000 00sw : mod 110 r/m : imm
immediate8 to memory8	0100 00XB 1000 0000 : mod 110 r/m : imm8
immediate32 to memory64	0100 10XB 1000 0001 : mod 110 r/m : imm32
immediate8 to memory64	0100 10XB 1000 0011 : mod 110 r/m : imm8
Prefix Bytes	
address size	0110 0111
LOCK	1111 0000
operand size	0110 0110
CS segment override	0010 1110
DS segment override	0011 1110
ES segment override	0010 0110
FS segment override	0110 0100
GS segment override	0110 0101
SS segment override	0011 0110

# B.3 PENTIUM® PROCESSOR FAMILY INSTRUCTION FORMATS AND ENCODINGS

The following table shows formats and encodings introduced by the Pentium processor family.

Table B-16. Pentium Processor Family Instruction Formats and Encodings, Non-64-Bit Modes

Instruction and Format	Encoding
CMPXCHG8B - Compare and Exchange 8 Bytes	

## Table B-16. Pentium Processor Family Instruction Formats and Encodings, Non-64-Bit Modes

EDX:EAX with memory64	0000 1111 : 1100 0111 : mod 001 r/m
CD/CC/ VV VVIII I II CI I GI Y G I	0000 111111100 01111111100 00117111

Table B-17. Pentium Processor Family Instruction Formats and Encodings, 64-Bit Mode

Instruction and Format	Encoding
CMPXCHG8B/CMPXCHG16B - Compare and Exchange Bytes	
EDX:EAX with memory64	0000 1111 : 1100 0111 : mod 001 r/m
RDX:RAX with memory128	0100 10XB 0000 1111 : 1100 0111 : mod 001 r/m

# B.4 64-BIT MODE INSTRUCTION ENCODINGS FOR SIMD INSTRUCTION EXTENSIONS

Non-64-bit mode instruction encodings for MMX Technology, SSE, SSE2, and SSE3 are covered by applying these rules to Table B-19 through Table B-31. Table B-33 lists special encodings (instructions that do not follow the rules below).

- 1. The REX instruction has no effect:
  - On immediates
  - If both operands are MMX registers
  - On MMX registers and XMM registers
  - If an MMX register is encoded in the reg field of the ModR/M byte
- 2. If a memory operand is encoded in the r/m field of the ModR/M byte, REX.X and REX.B may be used for encoding the memory operand.
- 3. If a general-purpose register is encoded in the r/m field of the ModR/M byte, REX.B may be used for register encoding and REX.W may be used to encode the 64-bit operand size.
- 4. If an XMM register operand is encoded in the reg field of the ModR/M byte, REX.R may be used for register encoding. If an XMM register operand is encoded in the r/m field of the ModR/M byte, REX.B may be used for register encoding.

### B.5 MMX INSTRUCTION FORMATS AND ENCODINGS

MMX instructions, except the EMMS instruction, use a format similar to the 2-byte Intel Architecture integer format. Details of subfield encodings within these formats are presented below.

### B.5.1 Granularity Field (gg)

The granularity field (gg) indicates the size of the packed operands that the instruction is operating on. When this field is used, it is located in bits 1 and 0 of the second opcode byte. Table B-18 shows the encoding of the gg field.

	(33)
99	Granularity of Data
00	Packed Bytes
01	Packed Words
10	Packed Doublewords
11	Quadword

Table B-18. Encoding of Granularity of Data Field (gg)

## B.5.2 MMX Technology and General-Purpose Register Fields (mmxreg and reg)

When MMX technology registers (mmxreg) are used as operands, they are encoded in the ModR/M byte in the reg field (bits 5, 4, and 3) and/or the R/M field (bits 2, 1, and 0).

If an MMX instruction operates on a general-purpose register (reg), the register is encoded in the R/M field of the ModR/M byte.

## B.5.3 MMX Instruction Formats and Encodings Table

Table B-19 shows the formats and encodings of the integer instructions.

Table B 13. This instruction formats and checomings	
Instruction and Format	Encoding
EMMS – Empty MMX technology state	0000 1111:01110111
MOVD - Move doubleword	
reg to mmreg	0000 1111:0110 1110: 11 mmxreg reg
reg from mmxreg	0000 1111:0111 1110: 11 mmxreg reg
mem to mmxreg	0000 1111:0110 1110: mod mmxreg r/m

Table B-19. MMX Instruction Formats and Encodings

Table B-19. MMX Instruction Formats and Encodings (Contd.)

MOVQ - Move quadword  mmxreg2 to mmxreg1 0000 11  mmxreg2 from mmxreg1 0000 11  mem to mmxreg 0000 11  mem from mmxreg 0000 11  PACKSSDW¹ - Pack dword to word data (signed with saturation)	11:0111 1110: mod mmxreg r/m  11:0110 1111: 11 mmxreg1 mmxreg2  11:0111 1111: 11 mmxreg1 mmxreg2  11:0110 1111: mod mmxreg r/m  11:0111 1111: mod mmxreg r/m  11:0110 1011: 11 mmxreg1 mmxreg2  11:0110 1011: 11 mmxreg1 mmxreg2
mmxreg2 to mmxreg1 0000 11  mmxreg2 from mmxreg1 0000 11  mem to mmxreg 0000 11  mem from mmxreg 0000 11  PACKSSDW¹ - Pack dword to word data (signed with saturation)	11:0111 1111: 11 mmxreg1 mmxreg2 11:0110 1111: mod mmxreg r/m 11:0111 1111: mod mmxreg r/m 11:0110 1011: 11 mmxreg1 mmxreg2
mmxreg2 from mmxreg1 0000 11  mem to mmxreg 0000 11  mem from mmxreg 0000 11  PACKSSDW¹ - Pack dword to word data (signed with saturation)	11:0111 1111: 11 mmxreg1 mmxreg2 11:0110 1111: mod mmxreg r/m 11:0111 1111: mod mmxreg r/m 11:0110 1011: 11 mmxreg1 mmxreg2
mem to mmxreg 0000 11 mem from mmxreg 0000 11  PACKSSDW <sup>1</sup> - Pack dword to word data (signed with saturation)	11:0110 1111: mod mmxreg r/m 11:0111 1111: mod mmxreg r/m 11:0110 1011: 11 mmxreg1 mmxreg2
mem from mmxreg 0000 11  PACKSSDW <sup>1</sup> - Pack dword to word data (signed with saturation)	11:0111 1111: mod mmxreg r/m  11:0110 1011: 11 mmxreg1 mmxreg2
PACKSSDW <sup>1</sup> - Pack dword to word data (signed with saturation)	11:0110 1011: 11 mmxreg1 mmxreg2
(signed with saturation)	
mmxreg2 to mmxreg1 0000 11	11:0110 1011: mod mmxreg r/m
memory to mmxreg 0000 11	
PACKSSWB <sup>1</sup> - Pack word to byte data (signed with saturation)	
mmxreg2 to mmxreg1 0000 11	11:0110 0011: 11 mmxreg1 mmxreg2
memory to mmxreg 0000 11	11:0110 0011: mod mmxreg r/m
PACKUSWB <sup>1</sup> - Pack word to byte data (unsigned with saturation)	
mmxreg2 to mmxreg1 0000 11	11:0110 0111: 11 mmxreg1 mmxreg2
memory to mmxreg 0000 11	11:0110 0111: mod mmxreg r/m
PADD - Add with wrap-around	
mmxreg2 to mmxreg1 0000 11	11: 1111 11gg: 11 mmxreg1 mmxreg2
memory to mmxreg 0000 11	11: 1111 11gg: mod mmxreg r/m
PADDS - Add signed with saturation	
mmxreg2 to mmxreg1 0000 11	11: 1110 11gg: 11 mmxreg1 mmxreg2
memory to mmxreg 0000 11	11: 1110 11gg: mod mmxreg r/m
PADDUS - Add unsigned with saturation	
mmxreg2 to mmxreg1 0000 11	11: 1101 11gg: 11 mmxreg1 mmxreg2
memory to mmxreg 0000 11	11: 1101 11gg: mod mmxreg r/m
PAND - Bitwise And	
mmxreg2 to mmxreg1 0000 11	11:1101 1011: 11 mmxreg1 mmxreg2
memory to mmxreg 0000 11	11:1101 1011: mod mmxreg r/m
PANDN - Bitwise AndNot	
mmxreg2 to mmxreg1 0000 11	11:1101 1111: 11 mmxreg1 mmxreg2

Table B-19. MMX Instruction Formats and Encodings (Contd.)

Instruction and Format	Encoding
memory to mmxreg	0000 1111:1101 1111: mod mmxreg r/m
PCMPEQ - Packed compare for equality	
mmxreg1 with mmxreg2	0000 1111:0111 01gg: 11 mmxreg1 mmxreg2
mmxreg with memory	0000 1111:0111 01gg: mod mmxreg r/m
PCMPGT - Packed compare greater (signed)	
mmxreg1 with mmxreg2	0000 1111:0110 01gg: 11 mmxreg1 mmxreg2
mmxreg with memory	0000 1111:0110 01gg: mod mmxreg r/m
PMADDWD - Packed multiply add	
mmxreg2 to mmxreg1	0000 1111:1111 0101: 11 mmxreg1 mmxreg2
memory to mmxreg	0000 1111:1111 0101: mod mmxreg r/m
PMULHUW - Packed multiplication, store high word (unsigned)	
mmxreg2 to mmxreg1	0000 1111: 1110 0100: 11 mmxreg1 mmxreg2
memory to mmxreg	0000 1111: 1110 0100: mod mmxreg r/m
PMULHW - Packed multiplication, store high word	
mmxreg2 to mmxreg1	0000 1111:1110 0101: 11 mmxreg1 mmxreg2
memory to mmxreg	0000 1111:1110 0101: mod mmxreg r/m
PMULLW - Packed multiplication, store low word	
mmxreg2 to mmxreg1	0000 1111:1101 0101: 11 mmxreg1 mmxreg2
memory to mmxreg	0000 1111:1101 0101: mod mmxreg r/m
POR - Bitwise Or	
mmxreg2 to mmxreg1	0000 1111:1110 1011: 11 mmxreg1 mmxreg2
memory to mmxreg	0000 1111:1110 1011: mod mmxreg r/m
PSLL <sup>2</sup> - Packed shift left logical	
mmxreg1 by mmxreg2	0000 1111:1111 00gg: 11 mmxreg1 mmxreg2
mmxreg by memory	0000 1111:1111 00gg: mod mmxreg r/m
mmxreg by immediate	0000 1111:0111 00gg: 11 110 mmxreg: imm8 data
PSRA <sup>2</sup> - Packed shift right arithmetic	

Table B-19. MMX Instruction Formats and Encodings (Contd.)

Instruction and Format	Encoding
mmxreg1 by mmxreg2	0000 1111:1110 00gg: 11 mmxreg1 mmxreg2
mmxreg by memory	0000 1111:1110 00gg: mod mmxreg r/m
mmxreg by immediate	0000 1111:0111 00gg: 11 100 mmxreg: imm8 data
PSRL <sup>2</sup> - Packed shift right logical	
mmxreg1 by mmxreg2	0000 1111:1101 00gg: 11 mmxreg1 mmxreg2
mmxreg by memory	0000 1111:1101 00gg: mod mmxreg r/m
mmxreg by immediate	0000 1111:0111 00gg: 11 010 mmxreg: imm8 data
PSUB - Subtract with wrap-around	
mmxreg2 from mmxreg1	0000 1111:1111 10gg: 11 mmxreg1 mmxreg2
memory from mmxreg	0000 1111:1111 10gg: mod mmxreg r/m
PSUBS - Subtract signed with saturation	
mmxreg2 from mmxreg1	0000 1111:1110 10gg: 11 mmxreg1 mmxreg2
memory from mmxreg	0000 1111:1110 10gg: mod mmxreg r/m
PSUBUS - Subtract unsigned with saturation	
mmxreg2 from mmxreg1	0000 1111:1101 10gg: 11 mmxreg1 mmxreg2
memory from mmxreg	0000 1111:1101 10gg: mod mmxreg r/m
PUNPCKH – Unpack high data to next larger type	
mmxreg2 to mmxreg1	0000 1111:0110 10gg: 11 mmxreg1 mmxreg2
memory to mmxreg	0000 1111:0110 10gg: mod mmxreg r/m
PUNPCKL - Unpack low data to next larger type	
mmxreg2 to mmxreg1	0000 1111:0110 00gg: 11 mmxreg1 mmxreg2
memory to mmxreg	0000 1111:0110 00gg: mod mmxreg r/m
PXOR - Bitwise Xor	
mmxreg2 to mmxreg1	0000 1111:1110 1111: 11 mmxreg1 mmxreg2
memory to mmxreg	0000 1111:1110 1111: mod mmxreg r/m

Table B-19. MMX Instruction Formats and Encodings (Contd.)

Instruction and Format	Encoding
------------------------	----------

#### **NOTES:**

- 1. The pack instructions perform saturation from signed packed data of one type to signed or unsigned data of the next smaller type.
- 2. The format of the shift instructions has one additional format to support shifting by immediate shift-counts. The shift operations are not supported equally for all data types.

# B.6 PROCESSOR EXTENDED STATE INSTRUCTION FORMATS AND ENCODINGS

Table B-20 shows the formats and encodings for several instructions that relate to processor extended state management.

Table B-20. Formats and Encodings of XSAVE/XRSTOR/XGETBV/XSETBV Instructions

Instruction and Format	Encoding
XGETBV - Get Value of Extended Control Register	0000 1111:0000 0001: 1101 0000
XRSTOR - Restore Processor Extended States <sup>1</sup>	0000 1111:1010 1110: mod <sup>A</sup> 101 r/m
XSAVE - Save Processor Extended States <sup>1</sup>	0000 1111:1010 1110: mod <sup>A</sup> 100 г/m
XSETBV - Set Extended Control Register	0000 1111:0000 0001: 1101 0001

#### **NOTES:**

1. For XSAVE and XRSTOR, "mod = 11" is reserved.

# B.7 P6 FAMILY INSTRUCTION FORMATS AND ENCODINGS

Table B-20 shows the formats and encodings for several instructions that were introduced into the IA-32 architecture in the P6 family processors.

Table B-21. Formats and Encodings of P6 Family Instructions

Instruction and Format	Encoding
CMOVcc - Conditional Move	
register2 to register1	0000 1111: 0100 tttn : 11 reg1 reg2

Table B-21. Formats and Encodings of P6 Family Instructions (Contd.)

Instruction and Format	Encoding
memory to register	0000 1111 : 0100 tttn : mod reg r/m
FCMOVcc – Conditional Move on EFLAG Register Condition Codes	
move if below (B)	11011 010 : 11 000 ST(i)
move if equal (E)	11011 010 : 11 001 ST(i)
move if below or equal (BE)	11011 010 : 11 010 ST(i)
move if unordered (U)	11011 010 : 11 011 ST(i)
move if not below (NB)	11011 011 : 11 000 ST(i)
move if not equal (NE)	11011 011 : 11 001 ST(i)
move if not below or equal (NBE)	11011 011 : 11 010 ST(i)
move if not unordered (NU)	11011 011 : 11 011 ST(i)
FCOMI - Compare Real and Set EFLAGS	11011 011 : 11 110 ST(i)
FXRSTOR - Restore x87 FPU, MMX, SSE, and SSE2 State $^{1}$	0000 1111:1010 1110: mod <sup>A</sup> 001 r/m
FXSAVE – Save x87 FPU, MMX, SSE, and SSE2 State $^1$	0000 1111:1010 1110: mod <sup>A</sup> 000 r/m
SYSENTER - Fast System Call	0000 1111:0011 0100
SYSEXIT - Fast Return from Fast System Call	0000 1111:0011 0101

#### **NOTES:**

1. For FXSAVE and FXRSTOR, "mod = 11" is reserved.

## B.8 SSE INSTRUCTION FORMATS AND ENCODINGS

The SSE instructions use the ModR/M format and are preceded by the 0FH prefix byte. In general, operations are not duplicated to provide two directions (that is, separate load and store variants).

The following three tables (Tables B-22, B-23, and B-24) show the formats and encodings for the SSE SIMD floating-point, SIMD integer, and cacheability and memory ordering instructions, respectively. Some SSE instructions require a mandatory prefix (66H, F2H, F3H) as part of the two-byte opcode. Mandatory prefixes are included in the tables.

Table B-22. Formats and Encodings of SSE Floating-Point Instructions

Instruction and Format	Encoding
ADDPS—Add Packed Single-Precision Floating-Point Values	
xmmreg to xmmreg	0000 1111:0101 1000:11 xmmreg1 xmmreg2
mem to xmmreg	0000 1111:0101 1000: mod xmmreg r/m
ADDSS—Add Scalar Single-Precision Floating-Point Values	
xmmreg to xmmreg	1111 0011:0000 1111:01011000:11 xmmreg1 xmmreg2
mem to xmmreg	1111 0011:0000 1111:01011000: mod xmmreg r/m
ANDNPS—Bitwise Logical AND NOT of Packed Single-Precision Floating-Point Values	
xmmreg to xmmreg	0000 1111:0101 0101:11 xmmreg1 xmmreg2
mem to xmmreg	0000 1111:0101 0101: mod xmmreg r/m
ANDPS—Bitwise Logical AND of Packed Single-Precision Floating-Point Values	
xmmreg to xmmreg	0000 1111:0101 0100:11 xmmreg1 xmmreg2
mem to xmmreg	0000 1111:0101 0100: mod xmmreg r/m
CMPPS—Compare Packed Single- Precision Floating-Point Values	
xmmreg to xmmreg, imm8	0000 1111:1100 0010:11 xmmreg1 xmmreg2: imm8
mem to xmmreg, imm8	0000 1111:1100 0010: mod xmmreg r/m: imm8
CMPSS—Compare Scalar Single- Precision Floating-Point Values	
xmmreg to xmmreg, imm8	1111 0011:0000 1111:1100 0010:11 xmmreg1 xmmreg2: imm8
mem to xmmreg, imm8	1111 0011:0000 1111:1100 0010: mod xmmreg r/m: imm8
COMISS—Compare Scalar Ordered Single-Precision Floating-Point Values and Set EFLAGS	
xmmreg to xmmreg	0000 1111:0010 1111:11 xmmreg1 xmmreg2
mem to xmmreg	0000 1111:0010 1111: mod xmmreg r/m

Table B-22. Formats and Encodings of SSE Floating-Point Instructions (Contd.)

Instruction and Format	Encoding
CVTPI2PS—Convert Packed Doubleword Integers to Packed Single-Precision Floating-Point Values	
mmreg to xmmreg	0000 1111:0010 1010:11 xmmreg1 mmreg1
mem to xmmreg	0000 1111:0010 1010: mod xmmreg r/m
CVTPS2PI—Convert Packed Single- Precision Floating-Point Values to Packed Doubleword Integers	
xmmreg to mmreg	0000 1111:0010 1101:11 mmreg1 xmmreg1
mem to mmreg	0000 1111:0010 1101: mod mmreg r/m
CVTSI2SS—Convert Doubleword Integer to Scalar Single-Precision Floating-Point Value	
r32 to xmmreg1	1111 0011:0000 1111:00101010:11 xmmreg r32
mem to xmmreg	1111 0011:0000 1111:00101010: mod xmmreg r/m
CVTSS2SI—Convert Scalar Single- Precision Floating-Point Value to Doubleword Integer	
xmmreg to r32	1111 0011:0000 1111:0010 1101:11 r32 xmmreg
mem to r32	1111 0011:0000 1111:0010 1101: mod r32 r/m
CVTTPS2PI—Convert with Truncation Packed Single-Precision Floating-Point Values to Packed Doubleword Integers	
xmmreg to mmreg	0000 1111:0010 1100:11 mmreg1 xmmreg1
mem to mmreg	0000 1111:0010 1100: mod mmreg r/m
CVTTSS2SI—Convert with Truncation Scalar Single-Precision Floating-Point Value to Doubleword Integer	
xmmreg to r32	1111 0011:0000 1111:0010 1100:11 r32 xmmreg1
mem to r32	1111 0011:0000 1111:0010 1100: mod r32 r/m
DIVPS—Divide Packed Single-Precision Floating-Point Values	
xmmreg to xmmreg	0000 1111:0101 1110:11 xmmreg1 xmmreg2
mem to xmmreg	0000 1111:0101 1110: mod xmmreg r/m
DIVSS—Divide Scalar Single-Precision Floating-Point Values	

Table B-22. Formats and Encodings of SSE Floating-Point Instructions (Contd.)

Instruction and Format	Encoding
xmmreg to xmmreg	1111 0011:0000 1111:0101 1110:11 xmmreg1 xmmreg2
mem to xmmreg	1111 0011:0000 1111:0101 1110: mod xmmreg r/m
LDMXCSR—Load MXCSR Register State	
m32 to MXCSR	0000 1111:1010 1110:mod <sup>A</sup> 010 mem
MAXPS—Return Maximum Packed Single-Precision Floating-Point Values	
xmmreg to xmmreg	0000 1111:0101 1111:11 xmmreg1 xmmreg2
mem to xmmreg	0000 1111:0101 1111: mod xmmreg r/m
MAXSS—Return Maximum Scalar Double-Precision Floating-Point Value	
xmmreg to xmmreg	1111 0011:0000 1111:0101 1111:11 xmmreg1 xmmreg2
mem to xmmreg	1111 0011:0000 1111:0101 1111: mod xmmreg r/m
MINPS—Return Minimum Packed Double-Precision Floating-Point Values	
xmmreg to xmmreg	0000 1111:0101 1101:11 xmmreg1 xmmreg2
mem to xmmreg	0000 1111:0101 1101: mod xmmreg r/m
MINSS—Return Minimum Scalar Double- Precision Floating-Point Value	
xmmreg to xmmreg	1111 0011:0000 1111:0101 1101:11 xmmreg1 xmmreg2
mem to xmmreg	1111 0011:0000 1111:0101 1101: mod xmmreg r/m
MOVAPS—Move Aligned Packed Single-Precision Floating-Point Values	
xmmreg2 to xmmreg1	0000 1111:0010 1000:11 xmmreg2 xmmreg1
mem to xmmreg1	0000 1111:0010 1000: mod xmmreg r/m
xmmreg1 to xmmreg2	0000 1111:0010 1001:11 xmmreg1 xmmreg2
xmmreg1 to mem	0000 1111:0010 1001: mod xmmreg r/m

Table B-22. Formats and Encodings of SSE Floating-Point Instructions (Contd.)

Instruction and Format	Encoding
MOVHLPS—Move Packed Single- Precision Floating-Point Values High to Low	
xmmreg to xmmreg	0000 1111:0001 0010:11 xmmreg1 xmmreg2
MOVHPS—Move High Packed Single- Precision Floating-Point Values	
mem to xmmreg	0000 1111:0001 0110: mod xmmreg r/m
xmmreg to mem	0000 1111:0001 0111: mod xmmreg r/m
MOVLHPS—Move Packed Single- Precision Floating-Point Values Low to High	
xmmreg to xmmreg	0000 1111:00010110:11 xmmreg1 xmmreg2
MOVLPS—Move Low Packed Single- Precision Floating-Point Values	
mem to xmmreg	0000 1111:0001 0010: mod xmmreg r/m
xmmreg to mem	0000 1111:0001 0011: mod xmmreg r/m
MOVMSKPS—Extract Packed Single- Precision Floating-Point Sign Mask	
xmmreg to r32	0000 1111:0101 0000:11 r32 xmmreg
MOVSS—Move Scalar Single-Precision Floating-Point Values	
xmmreg2 to xmmreg1	1111 0011:0000 1111:0001 0000:11 xmmreg2 xmmreg1
mem to xmmreg1	1111 0011:0000 1111:0001 0000: mod xmmreg r/m
xmmreg1 to xmmreg2	1111 0011:0000 1111:0001 0001:11 xmmreg1 xmmreg2
xmmreg1 to mem	1111 0011:0000 1111:0001 0001: mod xmmreg r/m
MOVUPS—Move Unaligned Packed Single-Precision Floating-Point Values	
xmmreg2 to xmmreg1	0000 1111:0001 0000:11 xmmreg2 xmmreg1
mem to xmmreg1	0000 1111:0001 0000: mod xmmreg r/m
xmmreg1 to xmmreg2	0000 1111:0001 0001:11 xmmreg1 xmmreg2
xmmreg1 to mem	0000 1111:0001 0001: mod xmmreg r/m

Table B-22. Formats and Encodings of SSE Floating-Point Instructions (Contd.)

Instruction and Format	Encoding
MULPS—Multiply Packed Single- Precision Floating-Point Values	
xmmreg to xmmreg	0000 1111:0101 1001:11 xmmreg1 xmmreg2
mem to xmmreg	0000 1111:0101 1001: mod xmmreg r/m
MULSS—Multiply Scalar Single-Precision Floating-Point Values	
xmmreg to xmmreg	1111 0011:0000 1111:0101 1001:11 xmmreg1 xmmreg2
mem to xmmreg	1111 0011:0000 1111:0101 1001: mod xmmreg r/m
ORPS—Bitwise Logical OR of Single- Precision Floating-Point Values	
xmmreg to xmmreg	0000 1111:0101 0110:11 xmmreg1 xmmreg2
mem to xmmreg	0000 1111:0101 0110: mod xmmreg r/m
RCPPS—Compute Reciprocals of Packed Single-Precision Floating-Point Values	
xmmreg to xmmreg	0000 1111:0101 0011:11 xmmreg1 xmmreg2
mem to xmmreg	0000 1111:0101 0011: mod xmmreg r/m
RCPSS—Compute Reciprocals of Scalar Single-Precision Floating-Point Value	
xmmreg to xmmreg	1111 0011:0000 1111:01010011:11 xmmreg1 xmmreg2
mem to xmmreg	1111 0011:0000 1111:01010011: mod xmmreg r/m
RSQRTPS—Compute Reciprocals of Square Roots of Packed Single-Precision Floating-Point Values	
xmmreg to xmmreg	0000 1111:0101 0010:11 xmmreg1 xmmreg2
mem to xmmreg	0000 1111:0101 0010: mode xmmreg r/m
RSQRTSS—Compute Reciprocals of Square Roots of Scalar Single-Precision Floating-Point Value	
xmmreg to xmmreg	1111 0011:0000 1111:0101 0010:11 xmmreg1 xmmreg2
mem to xmmreg	1111 0011:0000 1111:0101 0010: mod xmmreg r/m

Table B-22. Formats and Encodings of SSE Floating-Point Instructions (Contd.)

Instruction and Format	Encoding
SHUFPS—Shuffle Packed Single- Precision Floating-Point Values	
xmmreg to xmmreg, imm8	0000 1111:1100 0110:11 xmmreg1 xmmreg2: imm8
mem to xmmreg, imm8	0000 1111:1100 0110: mod xmmreg r/m: imm8
SQRTPS—Compute Square Roots of Packed Single-Precision Floating-Point Values	
xmmreg to xmmreg	0000 1111:0101 0001:11 xmmreg1 xmmreg2
mem to xmmreg	0000 1111:0101 0001: mod xmmreg r/m
SQRTSS—Compute Square Root of Scalar Single-Precision Floating-Point Value	
xmmreg to xmmreg	1111 0011:0000 1111:0101 0001:11 xmmreg1 xmmreg2
mem to xmmreg	1111 0011:0000 1111:0101 0001:mod xmmreg r/m
STMXCSR—Store MXCSR Register State	
MXCSR to mem	0000 1111:1010 1110:mod <sup>A</sup> 011 mem
SUBPS—Subtract Packed Single- Precision Floating-Point Values	
xmmreg to xmmreg	0000 1111:0101 1100:11 xmmreg1 xmmreg2
mem to xmmreg	0000 1111:0101 1100:mod xmmreg r/m
SUBSS—Subtract Scalar Single- Precision Floating-Point Values	
xmmreg to xmmreg	1111 0011:0000 1111:0101 1100:11 xmmreg1 xmmreg2
mem to xmmreg	1111 0011:0000 1111:0101 1100:mod xmmreg r/m
UCOMISS—Unordered Compare Scalar Ordered Single-Precision Floating-Point Values and Set EFLAGS	
xmmreg to xmmreg	0000 1111:0010 1110:11 xmmreg1 xmmreg2
mem to xmmreg	0000 1111:0010 1110: mod xmmreg r/m
UNPCKHPS—Unpack and Interleave High Packed Single-Precision Floating- Point Values	

Table B-22. Formats and Encodings of SSE Floating-Point Instructions (Contd.)

Instruction and Format	Encoding
xmmreg to xmmreg	0000 1111:0001 0101:11 xmmreg1 xmmreg2
mem to xmmreg	0000 1111:0001 0101: mod xmmreg r/m
UNPCKLPS—Unpack and Interleave Low Packed Single-Precision Floating-Point Values	
xmmreg to xmmreg	0000 1111:0001 0100:11 xmmreg1 xmmreg2
mem to xmmreg	0000 1111:0001 0100: mod xmmreg r/m
XORPS—Bitwise Logical XOR of Single- Precision Floating-Point Values	
xmmreg to xmmreg	0000 1111:0101 0111:11 xmmreg1 xmmreg2
mem to xmmreg	0000 1111:0101 0111: mod xmmreg r/m

Table B-23. Formats and Encodings of SSE Integer Instructions

Instruction and Format	Encoding
PAVGB/PAVGW—Average Packed Integers	
mmreg to mmreg	0000 1111:1110 0000:11 mmreg1 mmreg2
	0000 1111:1110 0011:11 mmreg1 mmreg2
mem to mmreg	0000 1111:1110 0000: mod mmreg r/m
	0000 1111:1110 0011: mod mmreg r/m
PEXTRW—Extract Word	
mmreg to reg32, imm8	0000 1111:1100 0101:11 r32 mmreg: imm8
PINSRW—Insert Word	
reg32 to mmreg, imm8	0000 1111:1100 0100:11 mmreg r32: imm8
m16 to mmreg, imm8	0000 1111:1100 0100: mod mmreg r/m: imm8
PMAXSW—Maximum of Packed Signed Word Integers	
mmreg to mmreg	0000 1111:1110 1110:11 mmreg1 mmreg2
mem to mmreg	0000 1111:1110 1110: mod mmreg r/m
PMAXUB—Maximum of Packed Unsigned Byte Integers	
mmreg to mmreg	0000 1111:1101 1110:11 mmreg1 mmreg2
mem to mmreg	0000 1111:1101 1110: mod mmreg r/m

Table B-23. Formats and Encodings of SSE Integer Instructions (Contd.)

Instruction and Format	Encoding
PMINSW—Minimum of Packed Signed Word Integers	
mmreg to mmreg	0000 1111:1110 1010:11 mmreg1 mmreg2
mem to mmreg	0000 1111:1110 1010: mod mmreg r/m
PMINUB—Minimum of Packed Unsigned Byte Integers	
mmreg to mmreg	0000 1111:1101 1010:11 mmreg1 mmreg2
mem to mmreg	0000 1111:1101 1010: mod mmreg r/m
PMOVMSKB—Move Byte Mask To Integer	
mmreg to reg32	0000 1111:1101 0111:11 r32 mmreg
PMULHUW—Multiply Packed Unsigned Integers and Store High Result	
mmreg to mmreg	0000 1111:1110 0100:11 mmreg1 mmreg2
mem to mmreg	0000 1111:1110 0100: mod mmreg r/m
PSADBW—Compute Sum of Absolute Differences	
mmreg to mmreg	0000 1111:1111 0110:11 mmreg1 mmreg2
mem to mmreg	0000 1111:1111 0110: mod mmreg r/m
PSHUFW—Shuffle Packed Words	
mmreg to mmreg, imm8	0000 1111:0111 0000:11 mmreg1 mmreg2: imm8
mem to mmreg, imm8	0000 1111:0111 0000: mod mmreg r/m: imm8

Table B-24. Format and Encoding of SSE Cacheability & Memory Ordering Instructions

Instruction and Format	Encoding
MASKMOVQ—Store Selected Bytes of Quadword	
mmreg to mmreg	0000 1111:1111 0111:11 mmreg1 mmreg2
MOVNTPS—Store Packed Single-Precision Floating- Point Values Using Non-Temporal Hint	
xmmreg to mem	0000 1111:0010 1011: mod xmmreg г/m

Table B-24. Format and Encoding of SSE Cacheability & Memory Ordering Instructions (Contd.)

Instruction and Format	Encoding
MOVNTQ—Store Quadword Using Non-Temporal Hint	
mmreg to mem	0000 1111:1110 0111: mod mmreg r/m
PREFETCHTO—Prefetch Temporal to All Cache Levels	0000 1111:0001 1000:mod <sup>A</sup> 001 mem
PREFETCHT1—Prefetch Temporal to First Level Cache	0000 1111:0001 1000:mod <sup>A</sup> 010 mem
PREFETCHT2—Prefetch Temporal to Second Level Cache	0000 1111:0001 1000:mod <sup>A</sup> 011 mem
PREFETCHNTA—Prefetch Non-Temporal to All Cache Levels	0000 1111:0001 1000:mod <sup>A</sup> 000 mem
SFENCE—Store Fence	0000 1111:1010 1110:11 111 000

#### B.9 SSE2 INSTRUCTION FORMATS AND ENCODINGS

The SSE2 instructions use the ModR/M format and are preceded by the 0FH prefix byte. In general, operations are not duplicated to provide two directions (that is, separate load and store variants).

The following three tables show the formats and encodings for the SSE2 SIMD floating-point, SIMD integer, and cacheability instructions, respectively. Some SSE2 instructions require a mandatory prefix (66H, F2H, F3H) as part of the two-byte opcode. These prefixes are included in the tables.

### B.9.1 Granularity Field (gg)

The granularity field (gg) indicates the size of the packed operands that the instruction is operating on. When this field is used, it is located in bits 1 and 0 of the second opcode byte. Table B-25 shows the encoding of this gg field.

Table B-25. Encoding of Granularity of Data Field (gg)

99	Granularity of Data
00	Packed Bytes
01	Packed Words
10	Packed Doublewords
11	Quadword

Table B-26. Formats and Encodings of SSE2 Floating-Point Instructions

Instruction and Format	Encoding
	Elicoding
ADDPD—Add Packed Double- Precision Floating-Point Values	
xmmreg to xmmreg	0110 0110:0000 1111:0101 1000:11 xmmreg1 xmmreg2
mem to xmmreg	0110 0110:0000 1111:0101 1000: mod xmmreg r/m
ADDSD—Add Scalar Double-Precision Floating-Point Values	
xmmreg to xmmreg	1111 0010:0000 1111:0101 1000:11 xmmreg1 xmmreg2
mem to xmmreg	1111 0010:0000 1111:0101 1000: mod xmmreg r/m
ANDNPD—Bitwise Logical AND NOT of Packed Double-Precision Floating-Point Values	
xmmreg to xmmreg	0110 0110:0000 1111:0101 0101:11 xmmreg1 xmmreg2
mem to xmmreg	0110 0110:0000 1111:0101 0101: mod xmmreg r/m
ANDPD—Bitwise Logical AND of Packed Double-Precision Floating-Point Values	
xmmreg to xmmreg	0110 0110:0000 1111:0101 0100:11 xmmreg1 xmmreg2
mem to xmmreg	0110 0110:0000 1111:0101 0100: mod xmmreg r/m
CMPPD—Compare Packed Double- Precision Floating-Point Values	
xmmreg to xmmreg, imm8	0110 0110:0000 1111:1100 0010:11 xmmreg1 xmmreg2: imm8
mem to xmmreg, imm8	0110 0110:0000 1111:1100 0010: mod xmmreg r/m: imm8
CMPSD—Compare Scalar Double- Precision Floating-Point Values	
xmmreg to xmmreg, imm8	1111 0010:0000 1111:1100 0010:11 xmmreg1 xmmreg2: imm8
mem to xmmreg, imm8	11110 010:0000 1111:1100 0010: mod xmmreg r/m: imm8
COMISD—Compare Scalar Ordered Double-Precision Floating-Point Values and Set EFLAGS	

Table B-26. Formats and Encodings of SSE2 Floating-Point Instructions (Contd.)

xmmreg to xmmreg         0110 0110:0000 1111:0010 1111:11 xmmreg1 xmmreg2           mem to xmmreg         0110 0110:0000 1111:0010 1111: mod xmmreg r/m           CVTPI2PD—Convert Packed Double-Precision Floating-Point Values           mmreg to xmmreg         0110 0110:0000 1111:0010 1010: 11 xmmreg1 mmreg1           mem to xmmreg         0110 0110:0000 1111:0010 1010: mod xmmreg r/m           CVTPD2PI—Convert Packed Double-Precision Floating-Point Values to Packed Doubleword Integers           xmmreg to mmreg         0110 0110:0000 1111:0010 1101: mod mmreg r/m           CVTSI2SD—Convert Doubleword Integer to Scalar Double-Precision Floating-Point Value           1111 0010:0000 1111:0010 1010: mod xmmreg r/m           CVTSD2SI—Convert Scalar Double-Precision Floating-Point Value to Doubleword Integer           xmmreg to r32           1111 0010:0000 1111:0010 1101: mod r32 r/m           CVTTPD2PI—Convert with Truncation Packed Double-Precision Floating-Point Values to Packed Doubleword Integers           xmmreg to mmreg         0110 0110:0000 1111:0010 1100: mod mmreg r/m           CVTTSD2SI—Convert with Truncation Packed Double-Precision Floating-Point Value to Doubleword Integers           xmmreg to mmreg         0110 0110:0000 1111:0010 1100: mod mmreg r/m           CVTTSD2SI—Convert with Truncation Scalar Double-Precision Floating-Point Value to Doubleword Integers	Instruction and Format	Encoding
CVTPI2PD—Convert Packed Double-Precision Floating-Point Values  mmreg to xmmreg  0110 0110:0000 1111:0010 1010:11 xmmreg1 mmreg1  mem to xmmreg  0110 0110:0000 1111:0010 1010: mod xmmreg r/m  CVTPD2PI—Convert Packed Double-Precision Floating-Point Values to Packed Doubleword Integers  xmmreg to mmreg  0110 0110:0000 1111:0010 1101:11 mmreg1 xmmreg1  mem to mmreg  0110 0110:0000 1111:0010 1101:11 mmreg1 xmmreg1  mem to mmreg  0110 0110:0000 1111:0010 1101:11 mod mmreg r/m  CVTSI2SD—Convert Doubleword Integer to Scalar Double-Precision Floating-Point Value  r32 to xmmreg1  1111 0010:0000 1111:0010 1010: mod xmmreg r/m  CVTSD2SI—Convert Scalar Double-Precision Floating-Point Value to Doubleword Integer  xmmreg to r32  1111 0010:0000 1111:0010 1101:11 r32 xmmreg mem to r32  1111 0010:0000 1111:0010 1101:11 r32 xmmreg  mem to r32  1111 0010:0000 1111:0010 1101:11 mod r32 r/m  CVTTD2PI—Convert with Truncation Packed Double-Precision Floating-Point Values to Packed Doubleword Integers  xmmreg to mmreg  0110 0110:0000 1111:0010 1100:11 mmreg xmmreg  mem to mmreg  0110 0110:0000 1111:0010 1100: mod mmreg r/m  CVTTSD2SI—Convert with Truncation Scalar Double-Precision Floating-Point Value to Doubleword Integer	xmmreg to xmmreg	_
Doubleword Integers to Packed Double-Precision Floating-Point Values         0110 0110:0000 1111:0010 1010:11 xmmreg1 mmreg1           mem to xmmreg         0110 0110:0000 1111:0010 1010: mod xmmreg r/m           CVTPD2PI—Convert Packed Double-Precision Floating-Point Values to Packed Doubleword Integers         0110 0110:0000 1111:0010 1101:11 mmreg1 xmmreg1           xmmreg to mmreg         0110 0110:0000 1111:0010 1101: mod mmreg r/m           CVTS12SD—Convert Doubleword Integer to Scalar Double-Precision Floating-Point Value         1111 0010:0000 1111:0010 1010:11 xmmreg r32           mem to xmmreg         1111 0010:0000 1111:0010 1010: mod xmmreg r/m           CVTSD2SI—Convert Scalar Double-Precision Floating-Point Value to Doubleword Integer         1111 0010:0000 1111:0010 1101:11 r32 xmmreg           wem to r32         1111 0010:0000 1111:0010 1101:mod r32 r/m           CVTTPD2PI—Convert with Truncation Packed Double-Precision Floating-Point Values to Packed Doubleword Integers         1111 0010:0000 1111:0010 1100:11 mmreg xmmreg           xmmreg to mmreg         0110 0110:0000 1111:0010 1100: mod mmreg r/m           CVTTSD2SI—Convert with Truncation Scalar Double-Precision Floating-Point Value to Doubleword Integer         0110 0110:0000 1111:0010 1100: mod mmreg r/m	mem to xmmreg	0110 0110:0000 1111:0010 1111: mod xmmreg r/m
mem to xmmreg 0110 0110:0000 1111:0010 1010: mod xmmreg r/m  CVTPD2PI—Convert Packed Double-Precision Floating-Point Values to Packed Doubleword Integers  xmmreg to mmreg 0110 0110:0000 1111:0010 1101:11 mmreg1 xmmreg1  mem to mmreg 0110 0110:0000 1111:0010 1101: mod mmreg r/m  CVTSI2SD—Convert Doubleword Integer to Scalar Double-Precision Floating-Point Value  r32 to xmmreg1 1111 0010:0000 1111:0010 1010:11 xmmreg r32 mem to xmmreg 1111 0010:0000 1111:0010 1010: mod xmmreg r/m  CVTSD2SI—Convert Scalar Double-Precision Floating-Point Value to Doubleword Integer  xmmreg to r32 1111 0010:0000 1111:0010 1101:11 r32 xmmreg mem to r32 1111 0010:0000 1111:0010 1101:mod r32 r/m  CVTTPD2PI—Convert with Truncation Packed Double-Precision Floating-Point Values to Packed Doubleword Integers  xmmreg to mmreg 0110 0110:0000 1111:0010 1100:11 mmreg xmmreg mem to mmreg 0110 0110:0000 1111:0010 1100: mod mmreg r/m  CVTTSD2SI—Convert with Truncation Scalar Double-Precision Floating-Point Value to Doubleword Integer	Doubleword Integers to Packed Double-Precision Floating-Point	
CVTPD2PI—Convert Packed Double-Precision Floating-Point Values to Packed Doubleword Integers  xmmreg to mmreg  mem to mmreg  CVTSI2SD—Convert Doubleword Integer to Scalar Double-Precision Floating-Point Value  r32 to xmmreg1  mem to xmmreg  1111 0010:0000 1111:0010 1101: mod mmreg r/m  CVTSD2SI—Convert Scalar Double-Precision Floating-Point Value to Doubleword Integer  xmmreg to r32  mem to r32  T111 0010:0000 1111:0010 1101: 11 r32 xmmreg  mem to r32  T111 0010:0000 1111:0010 1101: mod r32 r/m  CVTTD2PI—Convert with Truncation Packed Double-Precision Floating-Point Values to Packed Doubleword Integers  xmmreg to mmreg  0110 0110:0000 1111:0010 1100: mod mmreg r/m  CVTTSD2SI—Convert with Truncation Packed Double-Precision Floating-Point Values to Packed Doubleword Integers  xmmreg to mmreg  0110 0110:0000 1111:0010 1100: mod mmreg r/m  CVTTSD2SI—Convert with Truncation Scalar Double-Precision Floating-Point Value to Doubleword Integer	mmreg to xmmreg	_
Precision Floating-Point Values to Packed Doubleword Integers  xmmreg to mmreg  mem to mmreg  CVTSI2SD—Convert Doubleword Integer to Scalar Double-Precision Floating-Point Value  r32 to xmmreg1  mem to xmmreg  CVTSD2SI—Convert Scalar Double-Precision Floating-Point Value to Doubleword Integer  xmmreg to r32  mem to r32  cVTTPD2PI—Convert with Truncation Packed Double-Precision Floating-Point Values to Packed Doubleword Integers  xmmreg to mmreg  mem to mmreg  cVTTSD2SI—Convert with Truncation Packed Double-Precision Floating-Point Values to Packed Doubleword Integers  xmmreg to mmreg  mem to mmreg  cVTTSD2SI—Convert with Truncation Floating-Point Value to Doubleword Integers  cVTTSD2SI—Convert with Truncation Packed Doubleword Integer  cVTTSD2SI—Convert with Truncation Scalar Double-Precision Floating-Point Value to Doubleword Integer	mem to xmmreg	0110 0110:0000 1111:0010 1010: mod xmmreg r/m
mem to mmreg  CVTSI2SD—Convert Doubleword Integer to Scalar Double-Precision Floating-Point Value  r32 to xmmreg1  mem to xmmreg  T1111 0010:0000 1111:0010 1010:11 xmmreg r32  mem to xmmreg  T1111 0010:0000 1111:0010 1010:11 xmmreg r32  mem to xmmreg  T1111 0010:0000 1111:0010 1010: mod xmmreg r/m  CVTSD2SI—Convert Scalar Double-Precision Floating-Point Value to Doubleword Integer  xmmreg to r32  T1111 0010:0000 1111:0010 1101:11 r32 xmmreg  mem to r32  T1111 0010:0000 1111:0010 1101: mod r32 r/m  CVTTPD2PI—Convert with Truncation Packed Double-Precision Floating-Point Values to Packed Doubleword Integers  xmmreg to mmreg  T110 0110:0000 1111:0010 1100:11 mmreg xmmreg  mem to mmreg  T110 0110:0000 1111:0010 1100: mod mmreg r/m  CVTTSD2SI—Convert with  Truncation Scalar Double-Precision Floating-Point Value to Doubleword Integer	Precision Floating-Point Values to	
CVTSI2SD—Convert Doubleword Integer to Scalar Double-Precision Floating-Point Value  r32 to xmmreg1	xmmreg to mmreg	_
Integer to Scalar Double-Precision Floating-Point Value  r32 to xmmreg1	mem to mmreg	0110 0110:0000 1111:0010 1101: mod mmreg r/m
mem to xmmreg  CVTSD2SI—Convert Scalar Double-Precision Floating-Point Value to Doubleword Integer  xmmreg to r32  1111 0010:0000 1111:0010 1101:11 r32 xmmreg  mem to r32  1111 0010:0000 1111:0010 1101:11 r32 xmmreg  TVTTPD2PI—Convert with Truncation Packed Double-Precision Floating-Point Values to Packed Doubleword Integers  xmmreg to mmreg  mem to mmreg  O110 0110:0000 1111:0010 1100:11 mmreg xmmreg  TVTTSD2SI—Convert with  Truncation Scalar Double-Precision Floating-Point Value to Doubleword Integer	Integer to Scalar Double-Precision	
CVTSD2SI—Convert Scalar Double- Precision Floating-Point Value to Doubleword Integer  xmmreg to r32	r32 to xmmreg1	1111 0010:0000 1111:0010 1010:11 xmmreg r32
Precision Floating-Point Value to Doubleword Integer     1111 0010:0000 1111:0010 1101:11 r32 xmmreg       xmmreg to r32     1111 0010:0000 1111:0010 1101: mod r32 r/m       CVTTPD2PI—Convert with Truncation Packed Double-Precision Floating-Point Values to Packed Doubleword Integers     0110 0110:0000 1111:0010 1100:11 mmreg xmmreg       xmmreg to mmreg     0110 0110:0000 1111:0010 1100: mod mmreg r/m       CVTTSD2SI—Convert with Truncation Scalar Double-Precision Floating-Point Value to Doubleword Integer     110 0110:0000 1111:0010 1100: mod mmreg r/m	mem to xmmreg	1111 0010:0000 1111:0010 1010: mod xmmreg r/m
mem to r32  CVTTPD2PI—Convert with Truncation Packed Double-Precision Floating-Point Values to Packed Doubleword Integers  xmmreg to mmreg  mem to mmreg  CVTTSD2SI—Convert with Truncation Point Value to Doubleword Integer  Truncation Scalar Double-Precision Floating-Point Value to Doubleword Integer  1111 0010:0000 1111:0010 1101: mod r32 r/m  0110 0110:0000 1111:0010 1100: mod mmreg xmmreg  0110 0110:0000 1111:0010 1100: mod mmreg r/m	Precision Floating-Point Value to	
CVTTPD2PI—Convert with Truncation Packed Double-Precision Floating-Point Values to Packed Doubleword Integers  xmmreg to mmreg  mem to mmreg  CVTTSD2SI—Convert with Truncation Scalar Double-Precision Floating-Point Value to Doubleword Integer	xmmreg to r32	1111 0010:0000 1111:0010 1101:11 r32 xmmreg
Packed Double-Precision Floating-Point Values to Packed Doubleword Integers  xmmreg to mmreg  mem to mmreg  CVTTSD2SI—Convert with Truncation Scalar Double-Precision Floating-Point Value to Doubleword Integer	mem to r32	1111 0010:0000 1111:0010 1101: mod r32 r/m
mem to mmreg  CVTTSD2SI—Convert with Truncation Scalar Double-Precision Floating-Point Value to Doubleword Integer  O110 0110:0000 1111:0010 1100: mod mmreg r/m	Packed Double-Precision Floating- Point Values to Packed Doubleword	
CVTTSD2SI—Convert with Truncation Scalar Double-Precision Floating-Point Value to Doubleword Integer	xmmreg to mmreg	0110 0110:0000 1111:0010 1100:11 mmreg xmmreg
Truncation Scalar Double-Precision Floating-Point Value to Doubleword Integer	mem to mmreg	0110 0110:0000 1111:0010 1100: mod mmreg r/m
xmmreg to r32 1111 0010:0000 1111:0010 1100:11 r32 xmmreg	Truncation Scalar Double-Precision Floating-Point Value to Doubleword	
	xmmreg to r32	1111 0010:0000 1111:0010 1100:11 r32 xmmreg

Table B-26. Formats and Encodings of SSE2 Floating-Point Instructions (Contd.)

Instruction and Format	Encoding
mem to r32	1111 0010:0000 1111:0010 1100: mod r32 r/m
CVTPD2PS—Covert Packed Double- Precision Floating-Point Values to Packed Single-Precision Floating- Point Values	
xmmreg to xmmreg	0110 0110:0000 1111:0101 1010:11 xmmreg1 xmmreg2
mem to xmmreg	0110 0110:0000 1111:0101 1010: mod xmmreg r/m
CVTPS2PD—Covert Packed Single- Precision Floating-Point Values to Packed Double-Precision Floating- Point Values	
xmmreg to xmmreg	0000 1111:0101 1010:11 xmmreg1 xmmreg2
mem to xmmreg	0000 1111:0101 1010: mod xmmreg r/m
CVTSD2SS—Covert Scalar Double- Precision Floating-Point Value to Scalar Single-Precision Floating-Point Value	
xmmreg to xmmreg	1111 0010:0000 1111:0101 1010:11 xmmreg1 xmmreg2
mem to xmmreg	1111 0010:0000 1111:0101 1010: mod xmmreg r/m
CVTSS2SD—Covert Scalar Single- Precision Floating-Point Value to Scalar Double-Precision Floating- Point Value	
xmmreg to xmmreg	1111 0011:0000 1111:0101 1010:11 xmmreg1 xmmreg2
mem to xmmreg	1111 0011:00001 111:0101 1010: mod xmmreg r/m
CVTPD2DQ—Convert Packed Double- Precision Floating-Point Values to Packed Doubleword Integers	
xmmreg to xmmreg	1111 0010:0000 1111:1110 0110:11 xmmreg1 xmmreg2
mem to xmmreg	1111 0010:0000 1111:1110 0110: mod xmmreg r/m

Table B-26. Formats and Encodings of SSE2 Floating-Point Instructions (Contd.)

Instruction and Format	Encoding
CVTTPD2DQ—Convert With Truncation Packed Double-Precision Floating-Point Values to Packed Doubleword Integers	
xmmreg to xmmreg	0110 0110:0000 1111:1110 0110:11 xmmreg1 xmmreg2
mem to xmmreg	0110 0110:0000 1111:1110 0110: mod xmmreg r/m
CVTDQ2PD—Convert Packed Doubleword Integers to Packed Single-Precision Floating-Point Values	
xmmreg to xmmreg	1111 0011:0000 1111:1110 0110:11 xmmreg1 xmmreg2
mem to xmmreg	1111 0011:0000 1111:1110 0110: mod xmmreg r/m
CVTPS2DQ—Convert Packed Single- Precision Floating-Point Values to Packed Doubleword Integers	
xmmreg to xmmreg	0110 0110:0000 1111:0101 1011:11 xmmreg1 xmmreg2
mem to xmmreg	0110 0110:0000 1111:0101 1011: mod xmmreg r/m
CVTTPS2DQ—Convert With Truncation Packed Single-Precision Floating-Point Values to Packed Doubleword Integers	
xmmreg to xmmreg	1111 0011:0000 1111:0101 1011:11 xmmreg1 xmmreg2
mem to xmmreg	1111 0011:0000 1111:0101 1011: mod xmmreg r/m
CVTDQ2PS—Convert Packed Doubleword Integers to Packed Double-Precision Floating-Point Values	
xmmreg to xmmreg	0000 1111:0101 1011:11 xmmreg1 xmmreg2
mem to xmmreg	0000 1111:0101 1011: mod xmmreg r/m
DIVPD—Divide Packed Double- Precision Floating-Point Values	
xmmreg to xmmreg	0110 0110:0000 1111:0101 1110:11 xmmreg1 xmmreg2
mem to xmmreg	0110 0110:0000 1111:0101 1110: mod xmmreg r/m

Table B-26. Formats and Encodings of SSE2 Floating-Point Instructions (Contd.)

Instruction and Format	Encoding
DIVSD—Divide Scalar Double- Precision Floating-Point Values	
xmmreg to xmmreg	1111 0010:0000 1111:0101 1110:11 xmmreg1 xmmreg2
mem to xmmreg	1111 0010:0000 1111:0101 1110: mod xmmreg r/m
MAXPD—Return Maximum Packed Double-Precision Floating-Point Values	
xmmreg to xmmreg	0110 0110:0000 1111:0101 1111:11 xmmreg1 xmmreg2
mem to xmmreg	0110 0110:0000 1111:0101 1111: mod xmmreg r/m
MAXSD—Return Maximum Scalar Double-Precision Floating-Point Value	
xmmreg to xmmreg	1111 0010:0000 1111:0101 1111:11 xmmreg1 xmmreg2
mem to xmmreg	1111 0010:0000 1111:0101 1111: mod xmmreg r/m
MINPD—Return Minimum Packed Double-Precision Floating-Point Values	
xmmreg to xmmreg	0110 0110:0000 1111:0101 1101:11 xmmreg1 xmmreg2
mem to xmmreg	0110 0110:0000 1111:0101 1101: mod xmmreg r/m
MINSD—Return Minimum Scalar Double-Precision Floating-Point Value	
xmmreg to xmmreg	1111 0010:0000 1111:0101 1101:11 xmmreg1 xmmreg2
mem to xmmreg	1111 0010:0000 1111:0101 1101: mod xmmreg r/m
MOVAPD—Move Aligned Packed Double-Precision Floating-Point Values	
xmmreg1 to xmmreg2	0110 0110:0000 1111:0010 1001:11 xmmreg2 xmmreg1
xmmreg1 to mem	0110 0110:0000 1111:0010 1001: mod xmmreg r/m
xmmreg2 to xmmreg1	0110 0110:0000 1111:0010 1000:11 xmmreg1 xmmreg2
mem to xmmreg1	0110 0110:0000 1111:0010 1000: mod xmmreg r/m

Table B-26. Formats and Encodings of SSE2 Floating-Point Instructions (Contd.)

Instruction and Format	Encoding
MOVHPD—Move High Packed Double- Precision Floating-Point Values	
xmmreg to mem	0110 0110:0000 1111:0001 0111: mod xmmreg r/m
mem to xmmreg	0110 0110:0000 1111:0001 0110: mod xmmreg r/m
MOVLPD—Move Low Packed Double- Precision Floating-Point Values	
xmmreg to mem	0110 0110:0000 1111:0001 0011: mod xmmreg r/m
mem to xmmreg	0110 0110:0000 1111:0001 0010: mod xmmreg r/m
MOVMSKPD—Extract Packed Double- Precision Floating-Point Sign Mask	
xmmreg to r32	0110 0110:0000 1111:0101 0000:11 r32 xmmreg
MOVSD—Move Scalar Double- Precision Floating-Point Values	
xmmreg1 to xmmreg2	1111 0010:0000 1111:0001 0001:11 xmmreg2 xmmreg1
xmmreg1 to mem	1111 0010:0000 1111:0001 0001: mod xmmreg r/m
xmmreg2 to xmmreg1	1111 0010:0000 1111:0001 0000:11 xmmreg1 xmmreg2
mem to xmmreg1	1111 0010:0000 1111:0001 0000: mod xmmreg r/m
MOVUPD—Move Unaligned Packed Double-Precision Floating-Point Values	
xmmreg2 to xmmreg1	0110 0110:0000 1111:0001 0001:11 xmmreg2 xmmreg1
mem to xmmreg1	0110 0110:0000 1111:0001 0001: mod xmmreg r/m
xmmreg1 to xmmreg2	0110 0110:0000 1111:0001 0000:11 xmmreg1 xmmreg2
xmmreg1 to mem	0110 0110:0000 1111:0001 0000: mod xmmreg r/m
MULPD—Multiply Packed Double- Precision Floating-Point Values	
xmmreg to xmmreg	0110 0110:0000 1111:0101 1001:11 xmmreg1 xmmreg2
mem to xmmreg	0110 0110:0000 1111:0101 1001: mod xmmreg r/m

Table B-26. Formats and Encodings of SSE2 Floating-Point Instructions (Contd.)

Instruction and Format	Encoding
MULSD—Multiply Scalar Double- Precision Floating-Point Values	
xmmreg to xmmreg	1111 0010:00001111:01011001:11 xmmreg1 xmmreg2
mem to xmmreg	1111 0010:00001111:01011001: mod xmmreg r/m
ORPD—Bitwise Logical OR of Double-Precision Floating-Point Values	
xmmreg to xmmreg	0110 0110:0000 1111:0101 0110:11 xmmreg1 xmmreg2
mem to xmmreg	0110 0110:0000 1111:0101 0110: mod xmmreg r/m
SHUFPD—Shuffle Packed Double- Precision Floating-Point Values	
xmmreg to xmmreg, imm8	0110 0110:0000 1111:1100 0110:11 xmmreg1 xmmreg2: imm8
mem to xmmreg, imm8	0110 0110:0000 1111:1100 0110: mod xmmreg r/m: imm8
SQRTPD—Compute Square Roots of Packed Double-Precision Floating- Point Values	
xmmreg to xmmreg	0110 0110:0000 1111:0101 0001:11 xmmreg1 xmmreg2
mem to xmmreg	0110 0110:0000 1111:0101 0001: mod xmmreg r/m
SQRTSD—Compute Square Root of Scalar Double-Precision Floating- Point Value	
xmmreg to xmmreg	1111 0010:0000 1111:0101 0001:11 xmmreg1 xmmreg2
mem to xmmreg	1111 0010:0000 1111:0101 0001: mod xmmreg r/m
SUBPD—Subtract Packed Double- Precision Floating-Point Values	
xmmreg to xmmreg	0110 0110:0000 1111:0101 1100:11 xmmreg1 xmmreg2
mem to xmmreg	0110 0110:0000 1111:0101 1100: mod xmmreg r/m

Table B-26. Formats and Encodings of SSE2 Floating-Point Instructions (Contd.)

Instruction and Format	Encoding
SUBSD—Subtract Scalar Double- Precision Floating-Point Values	
xmmreg to xmmreg	1111 0010:0000 1111:0101 1100:11 xmmreg1 xmmreg2
mem to xmmreg	1111 0010:0000 1111:0101 1100: mod xmmreg r/m
UCOMISD—Unordered Compare Scalar Ordered Double-Precision Floating-Point Values and Set EFLAGS	
xmmreg to xmmreg	0110 0110:0000 1111:0010 1110:11 xmmreg1 xmmreg2
mem to xmmreg	0110 0110:0000 1111:0010 1110: mod xmmreg r/m
UNPCKHPD—Unpack and Interleave High Packed Double-Precision Floating-Point Values	
xmmreg to xmmreg	0110 0110:0000 1111:0001 0101:11 xmmreg1 xmmreg2
mem to xmmreg	0110 0110:0000 1111:0001 0101: mod xmmreg r/m
UNPCKLPD—Unpack and Interleave Low Packed Double-Precision Floating-Point Values	
xmmreg to xmmreg	0110 0110:0000 1111:0001 0100:11 xmmreg1 xmmreg2
mem to xmmreg	0110 0110:0000 1111:0001 0100: mod xmmreg r/m
XORPD—Bitwise Logical OR of Double-Precision Floating-Point Values	
xmmreg to xmmreg	0110 0110:0000 1111:0101 0111:11 xmmreg1 xmmreg2
mem to xmmreg	0110 0110:0000 1111:0101 0111: mod xmmreg r/m

Table B-27. Formats and Encodings of SSE2 Integer Instructions

Instruction and Format	Encoding
MOVD—Move Doubleword	
reg to xmmreg	0110 0110:0000 1111:0110 1110: 11 xmmreg reg
reg from xmmreg	0110 0110:0000 1111:0111 1110: 11 xmmreg reg
mem to xmmreg	0110 0110:0000 1111:0110 1110: mod xmmreg r/m
mem from xmmreg	0110 0110:0000 1111:0111 1110: mod xmmreg r/m
MOVDQA—Move Aligned Double Quadword	
xmmreg to xmmreg	0110 0110:0000 1111:0110 1111:11 xmmreg1 xmmreg2
xmmreg from xmmreg	0110 0110:0000 1111:0111 1111:11 xmmreg1 xmmreg2
mem to xmmreg	0110 0110:0000 1111:0110 1111: mod xmmreg r/m
mem from xmmreg	0110 0110:0000 1111:0111 1111: mod xmmreg r/m
MOVDQU—Move Unaligned Double Quadword	
xmmreg to xmmreg	1111 0011:0000 1111:0110 1111:11 xmmreg1 xmmreg2
xmmreg from xmmreg	1111 0011:0000 1111:0111 1111:11 xmmreg1 xmmreg2
mem to xmmreg	1111 0011:0000 1111:0110 1111: mod xmmreg r/m
mem from xmmreg	1111 0011:0000 1111:0111 1111: mod xmmreg r/m
MOVQ2DQ—Move Quadword from MMX to XMM Register	
mmreg to xmmreg	1111 0011:0000 1111:1101 0110:11 mmreg1 mmreg2
MOVDQ2Q—Move Quadword from XMM to MMX Register	
xmmreg to mmreg	1111 0010:0000 1111:1101 0110:11 mmreg1 mmreg2
MOVQ—Move Quadword	
xmmreg2 to xmmreg1	1111 0011:0000 1111:0111 1110: 11 xmmreg1 xmmreg2
xmmreg2 from xmmreg1	0110 0110:0000 1111:1101 0110: 11 xmmreg1 xmmreg2
mem to xmmreg	1111 0011:0000 1111:0111 1110: mod xmmreg r/m

Table B-27. Formats and Encodings of SSE2 Integer Instructions (Contd.)

Instruction and Format	Encoding
mem from xmmreg	0110 0110:0000 1111:1101 0110: mod xmmreg r/m
PACKSSDW <sup>1</sup> —Pack Dword To Word Data (signed with saturation)	
xmmreg2 to xmmreg1	0110 0110:0000 1111:0110 1011: 11 xmmreg1 xmmreg2
memory to xmmreg	0110 0110:0000 1111:0110 1011: mod xmmreg r/m
PACKSSWB—Pack Word To Byte Data (signed with saturation)	
xmmreg2 to xmmreg1	0110 0110:0000 1111:0110 0011: 11 xmmreg1 xmmreg2
memory to xmmreg	0110 0110:0000 1111:0110 0011: mod xmmreg r/m
PACKUSWB—Pack Word To Byte Data (unsigned with saturation)	
xmmreg2 to xmmreg1	0110 0110:0000 1111:0110 0111: 11 xmmreg1 xmmreg2
memory to xmmreg	0110 0110:0000 1111:0110 0111: mod xmmreg r/m
PADDQ—Add Packed Quadword Integers	
mmreg to mmreg	0000 1111:1101 0100:11 mmreg1 mmreg2
mem to mmreg	0000 1111:1101 0100: mod mmreg r/m
xmmreg to xmmreg	0110 0110:0000 1111:1101 0100:11 xmmreg1 xmmreg2
mem to xmmreg	0110 0110:0000 1111:1101 0100: mod xmmreg r/m
PADD—Add With Wrap-around	
xmmreg2 to xmmreg1	0110 0110:0000 1111: 1111 11gg: 11 xmmreg1 xmmreg2
memory to xmmreg	0110 0110:0000 1111: 1111 11gg: mod xmmreg r/m
PADDS—Add Signed With Saturation	
xmmreg2 to xmmreg1	0110 0110:0000 1111: 1110 11gg: 11 xmmreg1 xmmreg2
memory to xmmreg	0110 0110:0000 1111: 1110 11gg: mod xmmreg r/m
PADDUS—Add Unsigned With Saturation	
xmmreg2 to xmmreg1	0110 0110:0000 1111: 1101 11gg: 11 xmmreg1 xmmreg2

Table B-27. Formats and Encodings of SSE2 Integer Instructions (Contd.)

Instruction and Format	Encoding
memory to xmmreg	0110 0110:0000 1111: 1101 11gg: mod xmmreg r/m
PAND—Bitwise And	
xmmreg2 to xmmreg1	0110 0110:0000 1111:1101 1011: 11 xmmreg1 xmmreg2
memory to xmmreg	0110 0110:0000 1111:1101 1011: mod xmmreg r/m
PANDN—Bitwise AndNot	
xmmreg2 to xmmreg1	0110 0110:0000 1111:1101 1111: 11 xmmreg1 xmmreg2
memory to xmmreg	0110 0110:0000 1111:1101 1111: mod xmmreg r/m
PAVGB—Average Packed Integers	
xmmreg to xmmreg	0110 0110:0000 1111:11100 000:11 xmmreg1 xmmreg2
mem to xmmreg	01100110:00001111:11100000 mod xmmreg r/m
PAVGW—Average Packed Integers	
xmmreg to xmmreg	0110 0110:0000 1111:1110 0011:11 xmmreg1 xmmreg2
mem to xmmreg	0110 0110:0000 1111:1110 0011 mod xmmreg r/m
PCMPEQ—Packed Compare For Equality	
xmmreg1 with xmmreg2	0110 0110:0000 1111:0111 01gg: 11 xmmreg1 xmmreg2
xmmreg with memory	0110 0110:0000 1111:0111 01gg: mod xmmreg r/m
PCMPGT—Packed Compare Greater (signed)	
xmmreg1 with xmmreg2	0110 0110:0000 1111:0110 01gg: 11 xmmreg1 xmmreg2
xmmreg with memory	0110 0110:0000 1111:0110 01gg: mod xmmreg r/m
PEXTRW—Extract Word	
xmmreg to reg32, imm8	0110 0110:0000 1111:1100 0101:11 r32 xmmreg: imm8
PINSRW—Insert Word	
reg32 to xmmreg, imm8	0110 0110:0000 1111:1100 0100:11 xmmreg r32: imm8

Table B-27. Formats and Encodings of SSE2 Integer Instructions (Contd.)

Instruction and Format	Encoding
m16 to xmmreg, imm8	0110 0110:0000 1111:1100 0100: mod xmmreg r/m: imm8
PMADDWD—Packed Multiply Add	
xmmreg2 to xmmreg1	0110 0110:0000 1111:1111 0101: 11 xmmreg1 xmmreg2
memory to xmmreg	0110 0110:0000 1111:1111 0101: mod xmmreg r/m
PMAXSW—Maximum of Packed Signed Word Integers	
xmmreg to xmmreg	0110 0110:0000 1111:1110 1110:11 xmmreg1 xmmreg2
mem to xmmreg	01100110:00001111:11101110: mod xmmreg r/m
PMAXUB—Maximum of Packed Unsigned Byte Integers	
xmmreg to xmmreg	0110 0110:0000 1111:1101 1110:11 xmmreg1 xmmreg2
mem to xmmreg	0110 0110:0000 1111:1101 1110: mod xmmreg r/m
PMINSW—Minimum of Packed Signed Word Integers	
xmmreg to xmmreg	0110 0110:0000 1111:1110 1010:11 xmmreg1 xmmreg2
mem to xmmreg	0110 0110:0000 1111:1110 1010: mod xmmreg r/m
PMINUB—Minimum of Packed Unsigned Byte Integers	
xmmreg to xmmreg	0110 0110:0000 1111:1101 1010:11 xmmreg1 xmmreg2
mem to xmmreg	0110 0110:0000 1111:1101 1010 mod xmmreg r/m
PMOVMSKB—Move Byte Mask To Integer	
xmmreg to reg32	0110 0110:0000 1111:1101 0111:11 r32 xmmreg
PMULHUW—Packed multiplication, store high word (unsigned)	
xmmreg2 to xmmreg1	0110 0110:0000 1111:1110 0100: 11 xmmreg1 xmmreg2
memory to xmmreg	0110 0110:0000 1111:1110 0100: mod xmmreg r/m

Table B-27. Formats and Encodings of SSE2 Integer Instructions (Contd.)

Instruction and Format	Encoding
PMULHW—Packed Multiplication, store high word	
xmmreg2 to xmmreg1	0110 0110:0000 1111:1110 0101: 11 xmmreg1 xmmreg2
memory to xmmreg	0110 0110:0000 1111:1110 0101: mod xmmreg r/m
PMULLW—Packed Multiplication, store low word	
xmmreg2 to xmmreg1	0110 0110:0000 1111:1101 0101: 11 xmmreg1 xmmreg2
memory to xmmreg	0110 0110:0000 1111:1101 0101: mod xmmreg r/m
PMULUDQ—Multiply Packed Unsigned Doubleword Integers	
mmreg to mmreg	0000 1111:1111 0100:11 mmreg1 mmreg2
mem to mmreg	0000 1111:1111 0100: mod mmreg r/m
xmmreg to xmmreg	0110 0110:00001111:1111 0100:11 xmmreg1 xmmreg2
mem to xmmreg	0110 0110:00001111:1111 0100: mod xmmreg r/m
POR—Bitwise Or	
xmmreg2 to xmmreg1	0110 0110:0000 1111:1110 1011: 11 xmmreg1 xmmreg2
xmemory to xmmreg	0110 0110:0000 1111:1110 1011: mod xmmreg r/m
PSADBW—Compute Sum of Absolute Differences	
xmmreg to xmmreg	0110 0110:0000 1111:1111 0110:11 xmmreg1 xmmreg2
mem to xmmreg	0110 0110:0000 1111:1111 0110: mod xmmreg r/m
PSHUFLW—Shuffle Packed Low Words	
xmmreg to xmmreg, imm8	1111 0010:0000 1111:0111 0000:11 xmmreg1 xmmreg2: imm8
mem to xmmreg, imm8	1111 0010:0000 1111:0111 0000:11 mod xmmreg r/m: imm8

Table B-27. Formats and Encodings of SSE2 Integer Instructions (Contd.)

Instruction and Format	Encoding
PSHUFHW—Shuffle Packed High Words	
xmmreg to xmmreg, imm8	1111 0011:0000 1111:0111 0000:11 xmmreg1 xmmreg2: imm8
mem to xmmreg, imm8	1111 0011:0000 1111:0111 0000: mod xmmreg r/m: imm8
PSHUFD—Shuffle Packed Doublewords	
xmmreg to xmmreg, imm8	0110 0110:0000 1111:0111 0000:11 xmmreg1 xmmreg2: imm8
mem to xmmreg, imm8	0110 0110:0000 1111:0111 0000: mod xmmreg r/m: imm8
PSLLDQ—Shift Double Quadword Left Logical	
xmmreg, imm8	0110 0110:0000 1111:0111 0011:11 111 xmmreg: imm8
PSLL—Packed Shift Left Logical	
xmmreg1 by xmmreg2	0110 0110:0000 1111:1111 00gg: 11 xmmreg1 xmmreg2
xmmreg by memory	0110 0110:0000 1111:1111 00gg: mod xmmreg r/m
xmmreg by immediate	0110 0110:0000 1111:0111 00gg: 11 110 xmmreg: imm8
PSRA—Packed Shift Right Arithmetic	
xmmreg1 by xmmreg2	0110 0110:0000 1111:1110 00gg: 11 xmmreg1 xmmreg2
xmmreg by memory	0110 0110:0000 1111:1110 00gg: mod xmmreg r/m
xmmreg by immediate	0110 0110:0000 1111:0111 00gg: 11 100 xmmreg: imm8
PSRLDQ—Shift Double Quadword Right Logical	
xmmreg, imm8	0110 0110:00001111:01110011:11 011 xmmreg: imm8
PSRL—Packed Shift Right Logical	
xmmreg1 by xmmreg2	0110 0110:0000 1111:1101 00gg: 11 xmmreg1 xmmreg2
xmmreg by memory	0110 0110:0000 1111:1101 00gg: mod xmmreg r/m

Table B-27. Formats and Encodings of SSE2 Integer Instructions (Contd.)

Instruction and Format	Encoding
xmmreg by immediate	0110 0110:0000 1111:0111 00gg: 11 010 xmmreg: imm8
PSUBQ—Subtract Packed Quadword Integers	
mmreg to mmreg	0000 1111:11111 011:11 mmreg1 mmreg2
mem to mmreg	0000 1111:1111 1011: mod mmreg r/m
xmmreg to xmmreg	0110 0110:0000 1111:1111 1011:11 xmmreg1 xmmreg2
mem to xmmreg	0110 0110:0000 1111:1111 1011: mod xmmreg r/m
PSUB—Subtract With Wrap-around	
xmmreg2 from xmmreg1	0110 0110:0000 1111:1111 10gg: 11 xmmreg1 xmmreg2
memory from xmmreg	0110 0110:0000 1111:1111 10gg: mod xmmreg r/m
PSUBS—Subtract Signed With Saturation	
xmmreg2 from xmmreg1	0110 0110:0000 1111:1110 10gg: 11 xmmreg1 xmmreg2
memory from xmmreg	0110 0110:0000 1111:1110 10gg: mod xmmreg r/m
PSUBUS—Subtract Unsigned With Saturation	
xmmreg2 from xmmreg1	0000 1111:1101 10gg: 11 xmmreg1 xmmreg2
memory from xmmreg	0000 1111:1101 10gg: mod xmmreg r/m
PUNPCKH—Unpack High Data To Next Larger Type	
xmmreg to xmmreg	0110 0110:0000 1111:0110 10gg:11 xmmreg1 xmmreg2
mem to xmmreg	0110 0110:0000 1111:0110 10gg: mod xmmreg r/m
PUNPCKHQDQ—Unpack High Data	
xmmreg to xmmreg	0110 0110:0000 1111:0110 1101:11 xmmreg1 xmmreg2
mem to xmmreg	0110 0110:0000 1111:0110 1101: mod xmmreg r/m
PUNPCKL—Unpack Low Data To Next Larger Type	
xmmreg to xmmreg	0110 0110:0000 1111:0110 00gg:11 xmmreg1 xmmreg2

Table B-27. Formats and Encodings of SSE2 Integer Instructions (Contd.)

Instruction and Format	Encoding
mem to xmmreg	0110 0110:0000 1111:0110 00gg: mod xmmreg r/m
PUNPCKLQDQ—Unpack Low Data	
xmmreg to xmmreg	0110 0110:0000 1111:0110 1100:11 xmmreg1 xmmreg2
mem to xmmreg	0110 0110:0000 1111:0110 1100: mod xmmreg r/m
PXOR—Bitwise Xor	
xmmreg2 to xmmreg1	0110 0110:0000 1111:1110 1111: 11 xmmreg1 xmmreg2
memory to xmmreg	0110 0110:0000 1111:1110 1111: mod xmmreg r/m

Table B-28. Format and Encoding of SSE2 Cacheability Instructions

Instruction and Format	Encoding
MASKMOVDQU—Store Selected Bytes of Double Quadword	
xmmreg to xmmreg	0110 0110:0000 1111:1111 0111:11 xmmreg1 xmmreg2
CLFLUSH—Flush Cache Line	
mem	0000 1111:1010 1110: mod 111 r/m
MOVNTPD—Store Packed Double- Precision Floating-Point Values Using Non-Temporal Hint	
xmmreg to mem	0110 0110:0000 1111:0010 1011: mod xmmreg r/m
MOVNTDQ—Store Double Quadword Using Non-Temporal Hint	
xmmreg to mem	0110 0110:0000 1111:1110 0111: mod xmmreg r/m
MOVNTI—Store Doubleword Using Non-Temporal Hint	
reg to mem	0000 1111:1100 0011: mod reg г/m
PAUSE—Spin Loop Hint	1111 0011:1001 0000
LFENCE—Load Fence	0000 1111:1010 1110: 11 101 000
MFENCE—Memory Fence	0000 1111:1010 1110: 11 110 000

### **B.10** SSE3 FORMATS AND ENCODINGS TABLE

The tables in this section provide SSE3 formats and encodings. Some SSE3 instructions require a mandatory prefix (66H, F2H, F3H) as part of the two-byte opcode. These prefixes are included in the tables.

When in IA-32e mode, use of the REX.R prefix permits instructions that use general purpose and XMM registers to access additional registers. Some instructions require the REX.W prefix to promote the instruction to 64-bit operation. Instructions that require the REX.W prefix are listed (with their opcodes) in Section B.12.

Table B-29. Formats and Encodings of SSE3 Floating-Point Instructions

Instruction and Format	Encoding
ADDSUBPD—Add /Sub packed DP FP numbers from XMM2/Mem to XMM1	
xmmreg2 to xmmreg1	01100110:00001111:11010000:11 xmmreg1 xmmreg2
mem to xmmreg	01100110:00001111:11010000: mod xmmreg r/m
ADDSUBPS—Add /Sub packed SP FP numbers from XMM2/Mem to XMM1	
xmmreg2 to xmmreg1	11110010:00001111:11010000:11 xmmreg1 xmmreg2
mem to xmmreg	11110010:00001111:11010000: mod xmmreg r/m
HADDPD—Add horizontally packed DP FP numbers XMM2/Mem to XMM1	
xmmreg2 to xmmreg1	01100110:00001111:01111100:11 xmmreg1 xmmreg2
mem to xmmreg	01100110:00001111:01111100: mod xmmreg r/m
HADDPS—Add horizontally packed SP FP numbers XMM2/Mem to XMM1	
xmmreg2 to xmmreg1	11110010:00001111:01111100:11 xmmreg1 xmmreg2
mem to xmmreg	11110010:00001111:01111100: mod xmmreg r/m
HSUBPD—Sub horizontally packed DP FP numbers XMM2/Mem to XMM1	
xmmreg2 to xmmreg1	01100110:00001111:01111101:11 xmmreg1 xmmreg2

Table B-29. Formats and Encodings of SSE3 Floating-Point Instructions (Contd.)

Instruction and Format	Encoding
mem to xmmreg	01100110:00001111:01111101: mod xmmreg r/m
HSUBPS—Sub horizontally packed SP FP numbers XMM2/Mem to XMM1	
xmmreg2 to xmmreg1	11110010:00001111:01111101:11 xmmreg1 xmmreg2
mem to xmmreg	11110010:00001111:01111101: mod xmmreg r/m

## Table B-30. Formats and Encodings for SSE3 Event Management Instructions

Instruction and Format	Encoding
MONITOR—Set up a linear address range to be monitored by hardware	
eax, ecx, edx	0000 1111 : 0000 0001:11 001 000
MWAIT—Wait until write-back store performed within the range specified by the instruction MONITOR	
eax, ecx	0000 1111 : 0000 0001:11 001 001

# Table B-31. Formats and Encodings for SSE3 Integer and Move Instructions

Instruction and Format	Encoding
FISTTP—Store ST in int16 (chop) and pop	
m16int	11011 111 : mod <sup>A</sup> 001 r/m
FISTTP—Store ST in int32 (chop) and pop	
m32int	11011 011 : mod <sup>A</sup> 001 r/m
FISTTP—Store ST in int64 (chop) and pop	
m64int	11011 101 : mod <sup>A</sup> 001 r/m
LDDQU—Load unaligned integer 128-bit	
xmm, m128	11110010:00001111:11110000: mod <sup>A</sup> xmmreg r/m
MOVDDUP—Move 64 bits representing one DP data from XMM2/Mem to XMM1 and duplicate	
xmmreg2 to xmmreg1	11110010:00001111:00010010:11 xmmreg1 xmmreg2

Table B-31. Formats and Encodings for SSE3 Integer and Move Instructions (Contd.)

Instruction and Format	Encoding
mem to xmmreg	11110010:00001111:00010010: mod xmmreg r/m
MOVSHDUP—Move 128 bits representing 4 SP data from XMM2/Mem to XMM1 and duplicate high	
xmmreg2 to xmmreg1	11110011:00001111:00010110:11 xmmreg1 xmmreg2
mem to xmmreg	11110011:00001111:00010110: mod xmmreg r/m
MOVSLDUP—Move 128 bits representing 4 SP data from XMM2/Mem to XMM1 and duplicate low	
xmmreg2 to xmmreg1	11110011:00001111:00010010:11 xmmreg1 xmmreg2
mem to xmmreg	11110011:00001111:00010010: mod xmmreg r/m

# **B.11** SSSE3 FORMATS AND ENCODING TABLE

The tables in this section provide SSSE3 formats and encodings. Some SSSE3 instructions require a mandatory prefix (66H) as part of the three-byte opcode. These prefixes are included in the table below.

Table B-32. Formats and Encodings for SSSE3 Instructions

Instruction and Format	Encoding
PABSB—Packed Absolute Value Bytes	
mmreg to mmreg	0000 1111:0011 1000: 0001 1100:11 mmreg1 mmreg2
mem to mmreg	0000 1111:0011 1000: 0001 1100: mod mmreg r/m
xmmreg to xmmreg	0110 0110:0000 1111:0011 1000: 0001 1100:11 xmmreg1 xmmreg2
mem to xmmreg	0110 0110:0000 1111:0011 1000: 0001 1100: mod xmmreg r/m
PABSD—Packed Absolute Value Double Words	
mmreg to mmreg	0000 1111:0011 1000: 0001 1110:11 mmreg1 mmreg2
mem to mmreg	0000 1111:0011 1000: 0001 1110: mod mmreg r/m

Table B-32. Formats and Encodings for SSSE3 Instructions (Contd.)

Instruction and Format	Encoding
xmmreg to xmmreg	0110 0110:0000 1111:0011 1000: 0001 1110:11 xmmreg1 xmmreg2
mem to xmmreg	0110 0110:0000 1111:0011 1000: 0001 1110: mod xmmreg r/m
PABSW—Packed Absolute Value Words	
mmreg to mmreg	0000 1111:0011 1000: 0001 1101:11 mmreg1 mmreg2
mem to mmreg	0000 1111:0011 1000: 0001 1101: mod mmreg r/m
xmmreg to xmmreg	0110 0110:0000 1111:0011 1000: 0001 1101:11 xmmreg1 xmmreg2
mem to xmmreg	0110 0110:0000 1111:0011 1000: 0001 1101: mod xmmreg r/m
PALIGNR—Packed Align Right	
mmreg to mmreg, imm8	0000 1111:0011 1010: 0000 1111:11 mmreg1 mmreg2: imm8
mem to mmreg, imm8	0000 1111:0011 1010: 0000 1111: mod mmreg r/m: imm8
xmmreg to xmmreg, imm8	0110 0110:0000 1111:0011 1010: 0000 1111:11 xmmreg1 xmmreg2: imm8
mem to xmmreg, imm8	0110 0110:0000 1111:0011 1010: 0000 1111: mod xmmreg r/m: imm8
PHADDD—Packed Horizontal Add Double Words	
mmreg to mmreg	0000 1111:0011 1000: 0000 0010:11 mmreg1 mmreg2
mem to mmreg	0000 1111:0011 1000: 0000 0010: mod mmreg r/m
xmmreg to xmmreg	0110 0110:0000 1111:0011 1000: 0000 0010:11 xmmreg1 xmmreg2
mem to xmmreg	0110 0110:0000 1111:0011 1000: 0000 0010: mod xmmreg r/m
PHADDSW—Packed Horizontal Add and Saturate	
mmreg to mmreg	0000 1111:0011 1000: 0000 0011:11 mmreg1 mmreg2
mem to mmreg	0000 1111:0011 1000: 0000 0011: mod mmreg r/m
xmmreg to xmmreg	0110 0110:0000 1111:0011 1000: 0000 0011:11 xmmreg1 xmmreg2
mem to xmmreg	0110 0110:0000 1111:0011 1000: 0000 0011: mod xmmreg r/m

Table B-32. Formats and Encodings for SSSE3 Instructions (Contd.)

Instruction and Format	Encoding
PHADDW—Packed Horizontal Add Words	
mmreg to mmreg	0000 1111:0011 1000: 0000 0001:11 mmreg1 mmreg2
mem to mmreg	0000 1111:0011 1000: 0000 0001: mod mmreg r/m
xmmreg to xmmreg	0110 0110:0000 1111:0011 1000: 0000 0001:11 xmmreg1 xmmreg2
mem to xmmreg	0110 0110:0000 1111:0011 1000: 0000 0001: mod xmmreg r/m
PHSUBD—Packed Horizontal Subtract Double Words	
mmreg to mmreg	0000 1111:0011 1000: 0000 0110:11 mmreg1 mmreg2
mem to mmreg	0000 1111:0011 1000: 0000 0110: mod mmreg r/m
xmmreg to xmmreg	0110 0110:0000 1111:0011 1000: 0000 0110:11 xmmreg1 xmmreg2
mem to xmmreg	0110 0110:0000 1111:0011 1000: 0000 0110: mod xmmreg r/m
PHSUBSW—Packed Horizontal Subtract and Saturate	
mmreg to mmreg	0000 1111:0011 1000: 0000 0111:11 mmreg1 mmreg2
mem to mmreg	0000 1111:0011 1000: 0000 0111: mod mmreg r/m
xmmreg to xmmreg	0110 0110:0000 1111:0011 1000: 0000 0111:11 xmmreg1 xmmreg2
mem to xmmreg	0110 0110:0000 1111:0011 1000: 0000 0111: mod xmmreg r/m
PHSUBW—Packed Horizontal Subtract Words	
mmreg to mmreg	0000 1111:0011 1000: 0000 0101:11 mmreg1 mmreg2
mem to mmreg	0000 1111:0011 1000: 0000 0101: mod mmreg r/m
xmmreg to xmmreg	0110 0110:0000 1111:0011 1000: 0000 0101:11 xmmreg1 xmmreg2
mem to xmmreg	0110 0110:0000 1111:0011 1000: 0000 0101: mod xmmreg r/m
PMADDUBSW—Multiply and Add Packed Signed and Unsigned Bytes	
mmreg to mmreg	0000 1111:0011 1000: 0000 0100:11 mmreg1 mmreg2

Table B-32. Formats and Encodings for SSSE3 Instructions (Contd.)

Instruction and Format	Encoding
mem to mmreg	0000 1111:0011 1000: 0000 0100: mod mmreg r/m
xmmreg to xmmreg	0110 0110:0000 1111:0011 1000: 0000 0100:11 xmmreg1 xmmreg2
mem to xmmreg	0110 0110:0000 1111:0011 1000: 0000 0100: mod xmmreg r/m
PMULHRSW—Packed Multiply Hlgn with Round and Scale	
mmreg to mmreg	0000 1111:0011 1000: 0000 1011:11 mmreg1 mmreg2
mem to mmreg	0000 1111:0011 1000: 0000 1011: mod mmreg r/m
xmmreg to xmmreg	0110 0110:0000 1111:0011 1000: 0000 1011:11 xmmreg1 xmmreg2
mem to xmmreg	0110 0110:0000 1111:0011 1000: 0000 1011: mod xmmreg r/m
PSHUFB—Packed Shuffle Bytes	
mmreg to mmreg	0000 1111:0011 1000: 0000 0000:11 mmreg1 mmreg2
mem to mmreg	0000 1111:0011 1000: 0000 0000: mod mmreg r/m
xmmreg to xmmreg	0110 0110:0000 1111:0011 1000: 0000 0000:11 xmmreg1 xmmreg2
mem to xmmreg	0110 0110:0000 1111:0011 1000: 0000 0000: mod xmmreg r/m
PSIGNB—Packed Sign Bytes	
mmreg to mmreg	0000 1111:0011 1000: 0000 1000:11 mmreg1 mmreg2
mem to mmreg	0000 1111:0011 1000: 0000 1000: mod mmreg r/m
xmmreg to xmmreg	0110 0110:0000 1111:0011 1000: 0000 1000:11 xmmreg1 xmmreg2
mem to xmmreg	0110 0110:0000 1111:0011 1000: 0000 1000: mod xmmreg r/m
PSIGND—Packed Sign Double Words	
mmreg to mmreg	0000 1111:0011 1000: 0000 1010:11 mmreg1 mmreg2
mem to mmreg	0000 1111:0011 1000: 0000 1010: mod mmreg r/m
xmmreg to xmmreg	0110 0110:0000 1111:0011 1000: 0000 1010:11 xmmreg1 xmmreg2
mem to xmmreg	0110 0110:0000 1111:0011 1000: 0000 1010: mod xmmreg r/m

Table B-32. Formats and Encodings for SSSE3 Instructions (Contd.)

Instruction and Format	Encoding
PSIGNW—Packed Sign Words	
mmreg to mmreg	0000 1111:0011 1000: 0000 1001:11 mmreg1 mmreg2
mem to mmreg	0000 1111:0011 1000: 0000 1001: mod mmreg r/m
xmmreg to xmmreg	0110 0110:0000 1111:0011 1000: 0000 1001:11 xmmreg1 xmmreg2
mem to xmmreg	0110 0110:0000 1111:0011 1000: 0000 1001: mod xmmreg r/m

#### **B.12** SPECIAL ENCODINGS FOR 64-BIT MODE

The following Pentium, P6, MMX, SSE, SSE2, SSE3 instructions are promoted to 64-bit operation in IA-32e mode by using REX.W. However, these entries are special cases that do not follow the general rules (specified in Section B.4).

Table B-33. Special Case Instructions Promoted Using REX.W

Instruction and Format	Encoding
CMOVcc—Conditional Move	
register2 to register1	0100 OROB 0000 1111: 0100 tttn: 11 reg1 reg2
qwordregister2 to qwordregister1	0100 1R0B 0000 1111: 0100 tttn : 11 qwordreg1 qwordreg2
memory to register	0100 ORXB 0000 1111 : 0100 tttn : mod reg r/m
memory64 to qwordregister	0100 1RXB 0000 1111 : 0100 tttn : mod qwordreg r/m
CVTSD2SI—Convert Scalar Double-Precision Floating-Point Value to Doubleword Integer	
xmmreg to r32	0100 OROB 1111 0010:0000 1111:0010 1101:11 r32 xmmreg
xmmreg to r64	0100 1R0B 1111 0010:0000 1111:0010 1101:11 r64 xmmreg
mem64 to r32	0100 OROXB 1111 0010:0000 1111:0010 1101: mod r32 r/m
mem64 to r64	0100 1RXB 1111 0010:0000 1111:0010 1101: mod r64 r/m

Table B-33. Special Case Instructions Promoted Using REX.W (Contd.)

Instruction and Format	Encoding
CVTSI2SS—Convert Doubleword Integer to Scalar Single-Precision Floating-Point Value	
r32 to xmmreg1	0100 0R0B 1111 0011:0000 1111:0010 1010:11 xmmreg r32
r64 to xmmreg1	0100 1R0B 1111 0011:0000 1111:0010 1010:11 xmmreg r64
mem to xmmreg	0100 0RXB 1111 0011:0000 1111:0010 1010: mod xmmreg r/m
mem64 to xmmreg	0100 1RXB 1111 0011:0000 1111:0010 1010: mod xmmreg r/m
CVTSI2SD—Convert Doubleword Integer to Scalar Double-Precision Floating-Point Value	
r32 to xmmreg1	0100 0R0B 1111 0010:0000 1111:0010 1010:11 xmmreg r32
r64 to xmmreg1	0100 1R0B 1111 0010:0000 1111:0010 1010:11 xmmreg r64
mem to xmmreg	0100 ORXB 1111 0010:0000 1111:00101 010: mod xmmreg r/m
mem64 to xmmreg	0100 1RXB 1111 0010:0000 1111:0010 1010: mod xmmreg r/m
CVTSS2SI—Convert Scalar Single-Precision Floating-Point Value to Doubleword Integer	
xmmreg to r32	0100 0R0B 1111 0011:0000 1111:0010 1101:11 r32 xmmreg
xmmreg to r64	0100 1R0B 1111 0011:0000 1111:0010 1101:11 r64 xmmreg
mem to r32	0100 0RXB 11110011:00001111:00101101: mod r32 r/m
mem32 to r64	0100 1RXB 1111 0011:0000 1111:0010 1101: mod r64 r/m
CVTTSD2SI—Convert with Truncation Scalar Double-Precision Floating-Point Value to Doubleword Integer	
xmmreg to r32	0100 0R0B 11110010:00001111:00101100:11 гЗ2 xmmreg

Table B-33. Special Case Instructions Promoted Using REX.W (Contd.)

Instruction and Format	Encoding
xmmreg to r64	0100 1R0B 1111 0010:0000 1111:0010 1100:11 r64 xmmreg
mem64 to r32	0100 ORXB 1111 0010:0000 1111:0010 1100: mod r32 r/m
mem64 to r64	0100 1RXB 1111 0010:0000 1111:0010 1100: mod r64 r/m
CVTTSS2SI—Convert with Truncation Scalar Single-Precision Floating-Point Value to Doubleword Integer	
xmmreg to r32	0100 0R0B 1111 0011:0000 1111:0010 1100:11 r32 xmmreg1
xmmreg to r64	0100 1R0B 1111 0011:0000 1111:0010 1100:11 r64 xmmreg1
mem to r32	0100 0RXB 1111 0011:0000 1111:0010 1100: mod r32 r/m
mem32 to r64	0100 1RXB 1111 0011:0000 1111:0010 1100: mod r64 r/m
MOVD/MOVQ—Move doubleword	
reg to mmxreg	0100 OROB 0000 1111:0110 1110: 11 mmxreg reg
qwordreg to mmxreg	0100 1R0B 0000 1111:0110 1110: 11 mmxreg qwordreg
reg from mmxreg	0100 OROB 0000 1111:0111 1110: 11 mmxreg reg
qwordreg from mmxreg	0100 1R0B 0000 1111:0111 1110: 11 mmxreg qwordreg
mem to mmxreg	0100 ORXB 0000 1111:0110 1110: mod mmxreg r/m
mem64 to mmxreg	0100 1RXB 0000 1111:0110 1110: mod mmxreg r/m
mem from mmxreg	0100 ORXB 0000 1111:0111 1110: mod mmxreg r/m
mem64 from mmxreg	0100 1RXB 0000 1111:0111 1110: mod mmxreg r/m
mmxreg with memory	0100 ORXB 0000 1111:0110 01gg: mod mmxreg r/m

Table B-33. Special Case Instructions Promoted Using REX.W (Contd.)

Instruction and Format	Encoding
MOVMSKPS—Extract Packed Single-Precision Floating-Point Sign Mask	
xmmreg to r32	0100 0R0B 0000 1111:0101 0000:11 r32 xmmreg
xmmreg to r64	0100 1R0B 00001111:01010000:11 г64 xmmreg
PEXTRW—Extract Word	
mmreg to reg32, imm8	0100 0R0B 0000 1111:1100 0101:11 г32 mmreg: imm8
mmreg to reg64, imm8	0100 1R0B 0000 1111:1100 0101:11 г64 mmreg: imm8
xmmreg to reg32, imm8	0100 0R0B 0110 0110 0000 1111:1100 0101:11 r32 xmmreg: imm8
xmmreg to reg64, imm8	0100 1R0B 0110 0110 0000 1111:1100 0101:11 r64 xmmreg: imm8
PINSRW—Insert Word	
reg32 to mmreg, imm8	0100 0R0B 0000 1111:1100 0100:11 mmreg r32: imm8
reg64 to mmreg, imm8	0100 1R0B 0000 1111:1100 0100:11 mmreg r64: imm8
m16 to mmreg, imm8	0100 0R0B 0000 1111:1100 0100 mod mmreg r/m: imm8
m16 to mmreg, imm8	0100 1RXB 0000 1111:11000100 mod mmreg r/m: imm8
reg32 to xmmreg, imm8	0100 0RXB 0110 0110 0000 1111:1100 0100:11 xmmreg r32: imm8
reg64 to xmmreg, imm8	0100 0RXB 0110 0110 0000 1111:1100 0100:11 xmmreg r64: imm8
m16 to xmmreg, imm8	0100 0RXB 0110 0110 0000 1111:1100 0100 mod xmmreg r/m: imm8
m16 to xmmreg, imm8	0100 1RXB 0110 0110 0000 1111:1100 0100 mod xmmreg r/m: imm8
PMOVMSKB—Move Byte Mask To Integer	
mmreg to reg32	0100 0RXB 0000 1111:1101 0111:11 г32 mmreg

Table B-33. Special Case Instructions Promoted Using REX.W (Contd.)

Instruction and Format	Encoding
mmreg to reg64	0100 1R0B 0000 1111:1101 0111:11 r64 mmreg
xmmreg to reg32	0100 0RXB 0110 0110 0000 1111:1101 0111:11 r32 mmreg
xmmreg to reg64	0110 0110 0000 1111:1101 0111:11 r64 xmmreg

#### **B.13** SSE4.1 FORMATS AND ENCODING TABLE

The tables in this section provide SSE4.1 formats and encodings. Some SSE4.1 instructions require a mandatory prefix (66H, F2H, F3H) as part of the three-byte opcode. These prefixes are included in the tables.

In 64-bit mode, some instructions requires REX.W, the byte sequence of REX.W prefix in the opcode sequence is shown.

Table B-34. Encodings of SSE4.1 instructions

Instruction and Format	Encoding
BLENDPD — Blend Packed Double- Precision Floats	
xmmreg to xmmreg	0110 0110:0000 1111:0011 1010: 0000 1101:11 xmmreg1 xmmreg2
mem to xmmreg	0110 0110:0000 1111:0011 1010: 0000 1101: mod xmmreg r/m
BLENDPS — Blend Packed Single- Precision Floats	
xmmreg to xmmreg	0110 0110:0000 1111:0011 1010: 0000 1100:11 xmmreg1 xmmreg2
mem to xmmreg	0110 0110:0000 1111:0011 1010: 0000 1100: mod xmmreg r/m
BLENDVPD — Variable Blend Packed Double-Precision Floats	
xmmreg to xmmreg <xmm0></xmm0>	0110 0110:0000 1111:0011 1000: 0001 0101:11 xmmreg1 xmmreg2
mem to xmmreg <xmm0></xmm0>	0110 0110:0000 1111:0011 1000: 0001 0101: mod xmmreg r/m

Table B-34. Encodings of SSE4.1 instructions

Instruction and Format	Encoding
BLENDVPS — Variable Blend Packed Single-Precision Floats	
xmmreg to xmmreg <xmm0></xmm0>	0110 0110:0000 1111:0011 1000: 0001 0100:11 xmmreg1 xmmreg2
mem to xmmreg <xmm0></xmm0>	0110 0110:0000 1111:0011 1000: 0001 0100: mod xmmreg r/m
DPPD — Packed Double-Precision Dot Products	
xmmreg to xmmreg, imm8	0110 0110:0000 1111:0011 1010: 0100 0001:11 xmmreg1 xmmreg2: imm8
mem to xmmreg, imm8	0110 0110:0000 1111:0011 1010: 0100 0001: mod xmmreg r/m: imm8
DPPS — Packed Single-Precision Dot Products	
xmmreg to xmmreg, imm8	0110 0110:0000 1111:0011 1010: 0100 0000:11 xmmreg1 xmmreg2: imm8
mem to xmmreg, imm8	0110 0110:0000 1111:0011 1010: 0100 0000: mod xmmreg r/m: imm8
EXTRACTPS — Extract From Packed Single-Precision Floats	
reg from xmmreg , imm8	0110 0110:0000 1111:0011 1010: 0001 0111:11 xmmreg reg: imm8
mem from xmmreg , imm8	0110 0110:0000 1111:0011 1010: 0001 0111: mod xmmreg r/m: imm8
INSERTPS — Insert Into Packed Single- Precision Floats	
xmmreg to xmmreg, imm8	0110 0110:0000 1111:0011 1010: 0010 0001:11 xmmreg1 xmmreg2: imm8
mem to xmmreg, imm8	0110 0110:0000 1111:0011 1010: 0010 0001: mod xmmreg r/m: imm8
MOVNTDQA — Load Double Quadword Non-temporal Aligned	
m128 to xmmreg	0110 0110:0000 1111:0011 1000: 0010 1010:11 r/m xmmreg2
MPSADBW — Multiple Packed Sums of Absolute Difference	

Table B-34. Encodings of SSE4.1 instructions

Instruction and Format	Encoding
xmmreg to xmmreg, imm8	0110 0110:0000 1111:0011 1010: 0100 0010:11 xmmreg1 xmmreg2: imm8
mem to xmmreg, imm8	0110 0110:0000 1111:0011 1010: 0100 0010: mod xmmreg r/m: imm8
PACKUSDW — Pack with Unsigned Saturation	
xmmreg to xmmreg	0110 0110:0000 1111:0011 1000: 0010 1011:11 xmmreg1 xmmreg2
mem to xmmreg	0110 0110:0000 1111:0011 1000: 0010 1011: mod xmmreg r/m
PBLENDVB — Variable Blend Packed Bytes	
xmmreg to xmmreg <xmm0></xmm0>	0110 0110:0000 1111:0011 1000: 0001 0000:11 xmmreg1 xmmreg2
mem to xmmreg <xmm0></xmm0>	0110 0110:0000 1111:0011 1000: 0001 0000: mod xmmreg r/m
PBLENDW — Blend Packed Words	
xmmreg to xmmreg, imm8	0110 0110:0000 1111:0011 1010: 0001 1110:11 xmmreg1 xmmreg2: imm8
mem to xmmreg, imm8	0110 0110:0000 1111:0011 1010: 0000 1110: mod xmmreg r/m: imm8
PCMPEQQ — Compare Packed Qword Data of Equal	
xmmreg to xmmreg	0110 0110:0000 1111:0011 1000: 0010 1001:11 xmmreg1 xmmreg2
mem to xmmreg	0110 0110:0000 1111:0011 1000: 0010 1001: mod xmmreg r/m
PEXTRB — Extract Byte	
reg from xmmreg , imm8	0110 0110:0000 1111:0011 1010: 0001 0100:11 reg xmmreg: imm8
xmmreg to mem, imm8	0110 0110:0000 1111:0011 1010: 0001 0100: mod xmmreg r/m: imm8
PEXTRD — Extract DWord	
reg from xmmreg, imm8	0110 0110:0000 1111:0011 1010: 0001 0110:11 reg xmmreg: imm8

Table B-34. Encodings of SSE4.1 instructions

Instruction and Format	Encoding
xmmreg to mem, imm8	0110 0110:0000 1111:0011 1010: 0001 0110: mod xmmreg r/m: imm8
PEXTRQ — Extract QWord	
r64 from xmmreg, imm8	0110 0110:REX.W:0000 1111:0011 1010: 0001 0110:11 reg xmmreg: imm8
m64 from xmmreg, imm8	0110 0110:REX.W:0000 1111:0011 1010: 0001 0110: mod xmmreg r/m: imm8
PEXTRW — Extract Word	
reg from xmmreg, imm8	0110 0110:0000 1111:0011 1010: 0001 0101:11 reg xmmreg: imm8
mem from xmmreg, imm8	0110 0110:0000 1111:0011 1010: 0001 0101: mod xmmreg r/m: imm8
PHMINPOSUW — Packed Horizontal Word Minimum	
xmmreg to xmmreg	0110 0110:0000 1111:0011 1000: 0100 0001:11 xmmreg1 xmmreg2
mem to xmmreg	0110 0110:0000 1111:0011 1000: 0100 0001: mod xmmreg r/m
PINSRB — Extract Byte	
reg to xmmreg, imm8	0110 0110:0000 1111:0011 1010: 0010 0000:11 xmmreg reg: imm8
mem to xmmreg, imm8	0110 0110:0000 1111:0011 1010: 0010 0000: mod xmmreg r/m: imm8
PINSRD — Extract DWord	
reg to xmmreg, imm8	0110 0110:0000 1111:0011 1010: 0010 0010:11 xmmreg reg: imm8
mem to xmmreg, imm8	0110 0110:0000 1111:0011 1010: 0010 0010: mod xmmreg r/m: imm8
PINSRQ — Extract QWord	
r64 to xmmreg, imm8	0110 0110:REX.W:0000 1111:0011 1010: 0010 0010:11 xmmreg reg: imm8
m64 to xmmreg, imm8	0110 0110:REX.W:0000 1111:0011 1010: 0010 0010: mod xmmreg r/m: imm8
PMAXSB — Maximum of Packed Signed Byte Integers	

Table B-34. Encodings of SSE4.1 instructions

Instruction and Format	Encoding
xmmreg to xmmreg	0110 0110:0000 1111:0011 1000: 0011 1100:11 xmmreg1 xmmreg2
mem to xmmreg	0110 0110:0000 1111:0011 1000: 0011 1100: mod xmmreg r/m
PMAXSD — Maximum of Packed Signed Dword Integers	
xmmreg to xmmreg	0110 0110:0000 1111:0011 1000: 0011 1101:11 xmmreg1 xmmreg2
mem to xmmreg	0110 0110:0000 1111:0011 1000: 0011 1101: mod xmmreg r/m
PMAXUD — Maximum of Packed Unsigned Dword Integers	
xmmreg to xmmreg	0110 0110:0000 1111:0011 1000: 0011 1111:11 xmmreg1 xmmreg2
mem to xmmreg	0110 0110:0000 1111:0011 1000: 0011 1111: mod xmmreg r/m
PMAXUW — Maximum of Packed Unsigned Word Integers	
xmmreg to xmmreg	0110 0110:0000 1111:0011 1000: 0011 1110:11 xmmreg1 xmmreg2
mem to xmmreg	0110 0110:0000 1111:0011 1000: 0011 1110: mod xmmreg r/m
PMINSB — Minimum of Packed Signed Byte Integers	
xmmreg to xmmreg	0110 0110:0000 1111:0011 1000: 0011 1000:11 xmmreg1 xmmreg2
mem to xmmreg	0110 0110:0000 1111:0011 1000: 0011 1000: mod xmmreg r/m
PMINSD — Minimum of Packed Signed Dword Integers	
xmmreg to xmmreg	0110 0110:0000 1111:0011 1000: 0011 1001:11 xmmreg1 xmmreg2
mem to xmmreg	0110 0110:0000 1111:0011 1000: 0011 1001: mod xmmreg r/m
PMINUD — Minimum of Packed Unsigned Dword Integers	

Table B-34. Encodings of SSE4.1 instructions

Table 8-34. Encodings of 33E4.1 Instructions	
Instruction and Format	Encoding
xmmreg to xmmreg	0110 0110:0000 1111:0011 1000: 0011 1011:11 xmmreg1 xmmreg2
mem to xmmreg	0110 0110:0000 1111:0011 1000: 0011 1011: mod xmmreg r/m
PMINUW — Minimum of Packed Unsigned Word Integers	
xmmreg to xmmreg	0110 0110:0000 1111:0011 1000: 0011 1010:11 xmmreg1 xmmreg2
mem to xmmreg	0110 0110:0000 1111:0011 1000: 0011 1010: mod xmmreg r/m
PMOVSXBD — Packed Move Sign Extend - Byte to Dword	
xmmreg to xmmreg	0110 0110:0000 1111:0011 1000: 0010 0001:11 xmmreg1 xmmreg2
mem to xmmreg	0110 0110:0000 1111:0011 1000: 0010 0001: mod xmmreg r/m
PMOVSXBQ — Packed Move Sign Extend - Byte to Qword	
xmmreg to xmmreg	0110 0110:0000 1111:0011 1000: 0010 0010:11 xmmreg1 xmmreg2
mem to xmmreg	0110 0110:0000 1111:0011 1000: 0010 0010: mod xmmreg r/m
PMOVSXBW — Packed Move Sign Extend - Byte to Word	
xmmreg to xmmreg	0110 0110:0000 1111:0011 1000: 0010 0000:11 xmmreg1 xmmreg2
mem to xmmreg	0110 0110:0000 1111:0011 1000: 0010 0000: mod xmmreg r/m
PMOVSXWD — Packed Move Sign Extend - Word to Dword	
xmmreg to xmmreg	0110 0110:0000 1111:0011 1000: 0010 0011:11 xmmreg1 xmmreg2
mem to xmmreg	0110 0110:0000 1111:0011 1000: 0010 0011: mod xmmreg r/m
PMOVSXWQ — Packed Move Sign Extend - Word to Qword	

Table B-34. Encodings of SSE4.1 instructions

Instruction and Format	Encoding
xmmreg to xmmreg	0110 0110:0000 1111:0011 1000: 0010 0100:11 xmmreg1 xmmreg2
mem to xmmreg	0110 0110:0000 1111:0011 1000: 0010 0100: mod xmmreg r/m
PMOVSXDQ — Packed Move Sign Extend - Dword to Qword	
xmmreg to xmmreg	0110 0110:0000 1111:0011 1000: 0010 0101:11 xmmreg1 xmmreg2
mem to xmmreg	0110 0110:0000 1111:0011 1000: 0010 0101: mod xmmreg r/m
PMOVZXBD — Packed Move Zero Extend - Byte to Dword	
xmmreg to xmmreg	0110 0110:0000 1111:0011 1000: 0011 0001:11 xmmreg1 xmmreg2
mem to xmmreg	0110 0110:0000 1111:0011 1000: 0011 0001: mod xmmreg r/m
PMOVZXBQ — Packed Move Zero Extend - Byte to Qword	
xmmreg to xmmreg	0110 0110:0000 1111:0011 1000: 0011 0010:11 xmmreg1 xmmreg2
mem to xmmreg	0110 0110:0000 1111:0011 1000: 0011 0010: mod xmmreg r/m
PMOVZXBW — Packed Move Zero Extend - Byte to Word	
xmmreg to xmmreg	0110 0110:0000 1111:0011 1000: 0011 0000:11 xmmreg1 xmmreg2
mem to xmmreg	0110 0110:0000 1111:0011 1000: 0011 0000: mod xmmreg r/m
PMOVZXWD — Packed Move Zero Extend - Word to Dword	
xmmreg to xmmreg	0110 0110:0000 1111:0011 1000: 0011 0011:11 xmmreg1 xmmreg2
mem to xmmreg	0110 0110:0000 1111:0011 1000: 0011 0011: mod xmmreg r/m
PMOVZXWQ — Packed Move Zero Extend - Word to Qword	

Table B-34. Encodings of SSE4.1 instructions

Table B-34. Encodings of 35E4.1 Instructions			
Instruction and Format	Encoding		
xmmreg to xmmreg	0110 0110:0000 1111:0011 1000: 0011 0100:11 xmmreg1 xmmreg2		
mem to xmmreg	0110 0110:0000 1111:0011 1000: 0011 0100: mod xmmreg r/m		
PMOVZXDQ — Packed Move Zero Extend - Dword to Qword			
xmmreg to xmmreg	0110 0110:0000 1111:0011 1000: 0011 0101:11 xmmreg1 xmmreg2		
mem to xmmreg	0110 0110:0000 1111:0011 1000: 0011 0101: mod xmmreg r/m		
PMULDQ — Multiply Packed Signed Dword Integers			
xmmreg to xmmreg	0110 0110:0000 1111:0011 1000: 0010 1000:11 xmmreg1 xmmreg2		
mem to xmmreg	0110 0110:0000 1111:0011 1000: 0010 1000: mod xmmreg r/m		
PMULLD — Multiply Packed Signed Dword Integers, Store low Result			
xmmreg to xmmreg	0110 0110:0000 1111:0011 1000: 0100 0000:11 xmmreg1 xmmreg2		
mem to xmmreg	0110 0110:0000 1111:0011 1000: 0100 0000: mod xmmreg r/m		
PTEST — Logical Compare			
xmmreg to xmmreg	0110 0110:0000 1111:0011 1000: 0001 0111:11 xmmreg1 xmmreg2		
mem to xmmreg	0110 0110:0000 1111:0011 1000: 0001 0111: mod xmmreg r/m		
ROUNDPD — Round Packed Double- Precision Values			
xmmreg to xmmreg, imm8	0110 0110:0000 1111:0011 1010: 0000 1001:11 xmmreg1 xmmreg2: imm8		
mem to xmmreg, imm8	0110 0110:0000 1111:0011 1010: 0000 1001: mod xmmreg r/m: imm8		
ROUNDPS — Round Packed Single- Precision Values			
xmmreg to xmmreg, imm8	0110 0110:0000 1111:0011 1010: 0000 1000:11 xmmreg1 xmmreg2: imm8		

Table B-34. Encodings of SSE4.1 instructions

Instruction and Format	Encoding
mem to xmmreg, imm8	0110 0110:0000 1111:0011 1010: 0000 1000: mod xmmreg r/m: imm8
ROUNDSD — Round Scalar Double- Precision Value	
xmmreg to xmmreg, imm8	0110 0110:0000 1111:0011 1010: 0000 1011:11 xmmreg1 xmmreg2: imm8
mem to xmmreg, imm8	0110 0110:0000 1111:0011 1010: 0000 1011: mod xmmreg r/m: imm8
ROUNDSS — Round Scalar Single- Precision Value	
xmmreg to xmmreg, imm8	0110 0110:0000 1111:0011 1010: 0000 1010:11 xmmreg1 xmmreg2: imm8
mem to xmmreg, imm8	0110 0110:0000 1111:0011 1010: 0000 1010: mod xmmreg r/m: imm8

## B.14 SSE4.2 FORMATS AND ENCODING TABLE

The tables in this section provide SSE4.2 formats and encodings. Some SSE4.2 instructions require a mandatory prefix (66H, F2H, F3H) as part of the three-byte opcode. These prefixes are included in the tables. In 64-bit mode, some instructions requires REX.W, the byte sequence of REX.W prefix in the opcode sequence is shown.

Table B-35. Encodings of SSE4.2 instructions

Instruction and Format	Encoding
CRC32 — Accumulate CRC32	
reg2 to reg1	1111 0010:0000 1111:0011 1000: 1111 000w :11 reg1 reg2
mem to reg	1111 0010:0000 1111:0011 1000: 1111 000w : mod reg r/m
bytereg2 to reg1	1111 0010:0100 WR0B:0000 1111:0011 1000: 1111 0000 :11 reg1 bytereg2
m8 to reg	1111 0010:0100 WR0B:0000 1111:0011 1000: 1111 0000 : mod reg r/m
qwreg2 to qwreg1	1111 0010:0100 1R0B:0000 1111:0011 1000: 1111 0000 :11 qwreg1 qwreg2

Table B-35. Encodings of SSE4.2 instructions

Instruction and Format	Encoding
mem64 to qwreg	1111 0010:0100 1R0B:0000 1111:0011 1000: 1111 0000 : mod qwreg r/m
PCMPESTRI— Packed Compare Explicit-Length Strings To Index	
xmmreg2 to xmmreg1, imm8	0110 0110:0000 1111:0011 1010: 0110 0001:11 xmmreg1 xmmreg2: imm8
mem to xmmreg	0110 0110:0000 1111:0011 1010: 0110 0001: mod xmmreg r/m
PCMPESTRM— Packed Compare Explicit-Length Strings To Mask	
xmmreg2 to xmmreg1, imm8	0110 0110:0000 1111:0011 1010: 0110 0000:11 xmmreg1 xmmreg2: imm8
mem to xmmreg	0110 0110:0000 1111:0011 1010: 0110 0000: mod xmmreg r/m
PCMPISTRI— Packed Compare Implicit-Length String To Index	
xmmreg2 to xmmreg1, imm8	0110 0110:0000 1111:0011 1010: 0110 0011:11 xmmreg1 xmmreg2: imm8
mem to xmmreg	0110 0110:0000 1111:0011 1010: 0110 0011: mod xmmreg r/m
PCMPISTRM— Packed Compare Implicit-Length Strings To Mask	
xmmreg2 to xmmreg1, imm8	0110 0110:0000 1111:0011 1010: 0110 0010:11 xmmreg1 xmmreg2: imm8
mem to xmmreg	0110 0110:0000 1111:0011 1010: 0110 0010: mod xmmreg r/m
PCMPGTQ— Packed Compare Greater Than	
xmmreg to xmmreg	0110 0110:0000 1111:0011 1000: 0011 0111:11 xmmreg1 xmmreg2
mem to xmmreg	0110 0110:0000 1111:0011 1000: 0011 0111: mod xmmreg r/m
POPCNT— Return Number of Bits Set to 1	
reg2 to reg1	1111 0011:0000 1111:1011 1000:11 reg1 reg2
mem to reg1	1111 0011:0000 1111:1011 1000:mod reg1 r/m

Table B-35. Encodings of SSE4.2 instructions

Instruction and Format	Encoding
qwreg2 to qwreg1	1111 0011:0100 1R0B:0000 1111:1011 1000:11 reg1 reg2
mem64 to qwreg1	1111 0011:0100 1R0B:0000 1111:1011 1000:mod reg1 r/m

#### **B.15** FLOATING-POINT INSTRUCTION FORMATS AND **ENCODINGS**

Table B-35 shows the five different formats used for floating-point instructions. In all cases, instructions are at least two bytes long and begin with the bit pattern 11011.

Table B-36. General Floating-Point Instruction Formats

	Instruction										
		First	Byte			Se	cond Byte	•		Optiona	l Fields
1	11011	OI	PA	1	m	od	1	ОРВ	r/m	s-i-b	disp
2	11011	M	lF	OPA	m	od	OF	PB	r/m	s-i-b	disp
3	11011	d	Р	OPA	1	1	OPB	R	ST(i)		
4	11011	0	0	1	1	1	1		OP		
5	11011	0	1	1	1	1	1		OP		
	15–11	10	9	8	7	6	5	4 3	2 1 0	_	

MF = Memory Format

00 — 32-bit real

01 — 32-bit integer

10 — 64-bit real

11 — 16-bit integer

P = Pop

0 — Do not pop stack

d = Destination

0 — Destination is ST(0) 1 — Destination is ST(i)

1 — Pop stack after operation

111 = Eighth stack element

ST(i) = Register stack element i

001 = Second stack element

000 = Stack Top

R XOR d = 0 — Destination OP Source

R XOR d = 1 — Source OP Destination

The Mod and R/M fields of the ModR/M byte have the same interpretation as the corresponding fields of the integer instructions. The SIB byte and disp (displacement) are optionally present in instructions that have Mod and R/M fields. Their presence depends on the values of Mod and R/M, as for integer instructions.

Table B-36 shows the formats and encodings of the floating-point instructions.

Table B-37. Floating-Point Instruction Formats and Encodings

11011 001 : 1111 0000 11011 001 : 1110 0001
11011 001 : 1110 0001
11011 000 : mod 000 r/m
11011 100 : mod 000 r/m
11011 d00 : 11 000 ST(i)
11011 110 : 11 000 ST(i)
11011 111 : mod 100 r/m
11011 111 : mod 110 r/m
11011 001 : 1110 0000
11011 011 : 1110 0010
11011 000 : mod 010 г/m
11011 100 : mod 010 r/m
11011 000 : 11 010 ST(i)
11011 000 : mod 011 r/m
11011 100 : mod 011 r/m
11011 000 : 11 011 ST(i)
11011 110:11 011 001
11011 111 : 11 110 ST(i)
11011 001 : 1111 1111
11011 001 : 1111 0110
11011 000 : mod 110 r/m
11011 100 : mod 110 r/m
11011 d00 : 1111 R ST(i)

Table B-37. Floating-Point Instruction Formats and Encodings (Contd.)

Instruction and Format	Encoding
FDIVP - Divide and Pop	
ST(0) ← ST(0) ÷ ST(i)	11011 110 : 1111 1 ST(i)
FDIVR - Reverse Divide	
ST(0) ← 32-bit memory ÷ ST(0)	11011 000 : mod 111 r/m
ST(0) ← 64-bit memory ÷ ST(0)	11011 100 : mod 111 r/m
$ST(d) \leftarrow ST(i) \div ST(0)$	11011 d00 : 1111 R ST(i)
FDIVRP - Reverse Divide and Pop	
ST(0) " ST(i) ÷ ST(0)	11011 110 : 1111 0 ST(i)
FFREE - Free ST(i) Register	11011 101 : 1100 0 ST(i)
FIADD - Add Integer	
$ST(0) \leftarrow ST(0) + 16$ -bit memory	11011 110 : mod 000 r/m
$ST(0) \leftarrow ST(0) + 32$ -bit memory	11011 010 : mod 000 r/m
FICOM - Compare Integer	
16-bit memory	11011 110 : mod 010 r/m
32-bit memory	11011 010 : mod 010 r/m
FICOMP - Compare Integer and Pop	
16-bit memory	11011 110 : mod 011 r/m
32-bit memory	11011 010 : mod 011 r/m
FIDIV	
ST(0) ← ST(0) ÷ 16-bit memory	11011 110 : mod 110 r/m
ST(0) ← ST(0) ÷ 32-bit memory	11011 010 : mod 110 r/m
FIDIVR	
$ST(0) \leftarrow 16$ -bit memory $\div ST(0)$	11011 110 : mod 111 r/m
$ST(0) \leftarrow 32$ -bit memory $\div ST(0)$	11011 010 : mod 111 r/m
FILD - Load Integer	
16-bit memory	11011 111 : mod 000 r/m
32-bit memory	11011 011 : mod 000 r/m
64-bit memory	11011 111 : mod 101 r/m
FIMUL	
$ST(0) \leftarrow ST(0) \times 16$ -bit memory	11011 110 : mod 001 r/m

Table B-37. Floating-Point Instruction Formats and Encodings (Contd.)

Instruction and Format	Encoding
$ST(0) \leftarrow ST(0) \times 32$ -bit memory	11011 010 : mod 001 r/m
FINCSTP - Increment Stack Pointer	11011 001 : 1111 0111
FINIT - Initialize Floating-Point Unit	
FIST - Store Integer	
16-bit memory	11011 111 : mod 010 r/m
32-bit memory	11011 011 : mod 010 r/m
FISTP - Store Integer and Pop	
16-bit memory	11011 111 : mod 011 r/m
32-bit memory	11011 011 : mod 011 r/m
64-bit memory	11011 111 : mod 111 r/m
FISUB	
ST(0) ← ST(0) - 16-bit memory	11011 110 : mod 100 r/m
$ST(0) \leftarrow ST(0)$ - 32-bit memory	11011 010 : mod 100 r/m
FISUBR	
ST(0) ← 16-bit memory – ST(0)	11011 110 : mod 101 r/m
ST(0) ← 32-bit memory – ST(0)	11011 010 : mod 101 r/m
FLD - Load Real	
32-bit memory	11011 001 : mod 000 r/m
64-bit memory	11011 101 : mod 000 r/m
80-bit memory	11011 011 : mod 101 r/m
ST(i)	11011 001 : 11 000 ST(i)
FLD1 - Load +1.0 into ST(0)	11011 001 : 1110 1000
FLDCW – Load Control Word	11011 001 : mod 101 r/m
FLDENV - Load FPU Environment	11011 001 : mod 100 r/m
FLDL2E - Load log <sub>2</sub> (ε) into ST(0)	11011 001 : 1110 1010
FLDL2T - Load log <sub>2</sub> (10) into ST(0)	11011 001 : 1110 1001
FLDLG2 - Load log <sub>10</sub> (2) into ST(0)	11011 001 : 1110 1100
FLDLN2 - Load log <sub>E</sub> (2) into ST(0)	11011 001 : 1110 1101
FLDPI – Load $\pi$ into ST(0)	11011 001 : 1110 1011
FLDZ - Load +0.0 into ST(0)	11011 001 : 1110 1110
FMUL - Multiply	

Table B-37. Floating-Point Instruction Formats and Encodings (Contd.)

Instruction and Format	Encoding
$ST(0) \leftarrow ST(0) \times 32$ -bit memory	11011 000 : mod 001 r/m
$ST(0) \leftarrow ST(0) \times 64$ -bit memory	11011 100 : mod 001 r/m
$ST(d) \leftarrow ST(0) \times ST(i)$	11011 d00 : 1100 1 ST(i)
FMULP - Multiply	
$ST(i) \leftarrow ST(0) \times ST(i)$	11011 110 : 1100 1 ST(i)
FNOP - No Operation	11011 001 : 1101 0000
FPATAN - Partial Arctangent	11011 001 : 1111 0011
FPREM - Partial Remainder	11011 001 : 1111 1000
FPREM1 - Partial Remainder (IEEE)	11011 001 : 1111 0101
FPTAN - Partial Tangent	11011 001 : 1111 0010
FRNDINT - Round to Integer	11011 001 : 1111 1100
FRSTOR - Restore FPU State	11011 101 : mod 100 r/m
FSAVE - Store FPU State	11011 101 : mod 110 r/m
FSCALE - Scale	11011 001 : 1111 1101
FSIN - Sine	11011 001 : 1111 1110
FSINCOS - Sine and Cosine	11011 001 : 1111 1011
FSQRT - Square Root	11011 001 : 1111 1010
FST - Store Real	
32-bit memory	11011 001 : mod 010 r/m
64-bit memory	11011 101 : mod 010 r/m
ST(i)	11011 101 : 11 010 ST(i)
FSTCW - Store Control Word	11011 001 : mod 111 r/m
FSTENV - Store FPU Environment	11011 001 : mod 110 r/m
FSTP - Store Real and Pop	
32-bit memory	11011 001 : mod 011 r/m
64-bit memory	11011 101 : mod 011 r/m
80-bit memory	11011 011 : mod 111 r/m
ST(i)	11011 101 : 11 011 ST(i)
FSTSW - Store Status Word into AX	11011 111 : 1110 0000
FSTSW - Store Status Word into Memory	11011 101 : mod 111 r/m
FSUB - Subtract	

Table B-37. Floating-Point Instruction Formats and Encodings (Contd.)

Instruction and Format	Encoding
ST(0) ← ST(0) - 32-bit memory	11011 000 : mod 100 r/m
ST(0) ← ST(0) - 64-bit memory	11011 100 : mod 100 r/m
$ST(d) \leftarrow ST(0) - ST(i)$	11011 d00 : 1110 R ST(i)
FSUBP - Subtract and Pop	
$ST(0) \leftarrow ST(0) - ST(i)$	11011 110 : 1110 1 ST(i)
FSUBR - Reverse Subtract	
$ST(0) \leftarrow 32$ -bit memory – $ST(0)$	11011 000 : mod 101 r/m
$ST(0) \leftarrow 64$ -bit memory – $ST(0)$	11011 100 : mod 101 r/m
$ST(d) \leftarrow ST(i) - ST(0)$	11011 d00 : 1110 R ST(i)
FSUBRP - Reverse Subtract and Pop	
$ST(i) \leftarrow ST(i) - ST(0)$	11011 110 : 1110 0 ST(i)
FTST - Test	11011 001 : 1110 0100
FUCOM - Unordered Compare Real	11011 101 : 1110 0 ST(i)
FUCOMP - Unordered Compare Real and Pop	11011 101 : 1110 1 ST(i)
FUCOMPP – Unordered Compare Real and Pop Twice	11011 010 : 1110 1001
FUCOMI – Unorderd Compare Real and Set EFLAGS	11011 011 : 11 101 ST(i)
FUCOMIP - Unorderd Compare Real, Set EFLAGS, and Pop	11011 111 : 11 101 ST(i)
FXAM - Examine	11011 001 : 1110 0101
FXCH - Exchange ST(0) and ST(i)	11011 001 : 1100 1 ST(i)
FXTRACT – Extract Exponent and Significand	11011 001 : 1111 0100
$FYL2X-ST(1)\timeslog_2(ST(0))$	11011 001 : 1111 0001
FYL2XP1 - ST(1) × log <sub>2</sub> (ST(0) + 1.0)	11011 001 : 1111 1001
FWAIT - Wait until FPU Ready	1001 1011

# **B.16 VMX INSTRUCTIONS**

Table B-37 describes virtual-machine extensions (VMX).

Table B-38. Encodings for VMX Instructions

Instruction and Format	Encoding
INVEPT—Invalidate Cached EPT Mappings	
Descriptor m128 according to reg	01100110 00001111 00111000 10000000: mod reg r/m
INVVPID—Invalidate Cached VPID Mappings	
Descriptor m128 according to reg	01100110 00001111 00111000 10000001: mod reg r/m
VMCALL—Call to VM Monitor	
Call VMM: causes VM exit.	00001111 00000001 11000001
VMCLEAR—Clear Virtual-Machine Control Structure	
mem32:VMCS_data_ptr	01100110 00001111 11000111: mod 110 r/m
mem64:VMCS_data_ptr	01100110 00001111 11000111: mod 110 r/m
VMLAUNCH—Launch Virtual Machine	
Launch VM managed by Current_VMCS	00001111 00000001 11000010
VMRESUME—Resume Virtual Machine	
Resume VM managed by Current_VMCS	00001111 00000001 11000011
VMPTRLD—Load Pointer to Virtual- Machine Control Structure	
mem32 to Current_VMCS_ptr	00001111 11000111: mod 110 r/m
mem64 to Current_VMCS_ptr	00001111 11000111: mod 110 r/m
VMPTRST—Store Pointer to Virtual- Machine Control Structure	
Current_VMCS_ptr to mem32	00001111 11000111: mod 111 r/m
Current_VMCS_ptr to mem64	00001111 11000111: mod 111 r/m
VMREAD—Read Field from Virtual-Machine Control Structure	
г32 (VMCS_fieldn) to г32	00001111 01111000: 11 reg2 reg1
r32 (VMCS_fieldn) to mem32	00001111 01111000: mod r32 г/m
r64 (VMCS_fieldn) to r64	00001111 01111000: 11 reg2 reg1
r64 (VMCS_fieldn) to mem64	00001111 01111000: mod r64 r/m

Table B-38. Encodings for VMX Instructions

Instruction and Format	Encoding
VMWRITE—Write Field to Virtual-Machine Control Structure	
г32 to г32 (VMCS_fieldn)	00001111 01111001: 11 reg1 reg2
mem32 to r32 (VMCS_fieldn)	00001111 01111001: mod r32 r/m
r64 to r64 (VMCS_fieldn)	00001111 01111001: 11 reg1 reg2
mem64 to r64 (VMCS_fieldn)	00001111 01111001: mod r64 r/m
VMXOFF—Leave VMX Operation	
Leave VMX.	00001111 00000001 11000100
VMXON—Enter VMX Operation	
Enter VMX.	11110011 000011111 11000111: mod 110 r/m

# **B.17 SMX INSTRUCTIONS**

Table B-38 describes Safer Mode extensions (VMX). **GETSEC leaf functions are selected by a valid value in EAX on input.** 

Table B-39. Encodings for SMX Instructions

Instruction and Format	Encoding
GETSEC—GETSEC leaf functions are selected by the value in EAX on input	
GETSEC[CAPABILITIES].	00001111 00110111 (EAX= 0)
GETSEC[ENTERACCS].	00001111 00110111 (EAX= 2)
GETSEC[EXITAC].	00001111 00110111 (EAX= 3)
GETSEC[SENTER].	00001111 00110111 (EAX= 4)
GETSEC[SEXIT].	00001111 00110111 (EAX= 5)
GETSEC[PARAMETERS].	00001111 00110111 (EAX= 6)
GETSEC[SMCTRL].	00001111 00110111 (EAX= 7)
GETSEC[WAKEUP].	00001111 00110111 (EAX= 8)

# APPENDIX C INTEL® C/C++ COMPILER INTRINSICS AND FUNCTIONAL EQUIVALENTS

The two tables in this appendix itemize the Intel C/C++ compiler intrinsics and functional equivalents for the Intel MMX technology, SSE, SSE2, SSE3, and SSSE3 instructions.

There may be additional intrinsics that do not have an instruction equivalent. It is strongly recommended that the reader reference the compiler documentation for the complete list of supported intrinsics. Please refer to http://www.intel.com/support/performancetools/.

Table C-1 presents simple intrinsics and Table C-2 presents composite intrinsics. Some intrinsics are "composites" because they require more than one instruction to implement them.

Intel C/C++ Compiler intrinsic names reflect the following naming conventions:

\_mm\_<intrin\_op>\_<suffix>

#### where:

addition and sub for subtraction

<suffix> Denotes the type of data operated on by the instruction. The

first one or two letters of each suffix denotes whether the data is packed (p), extended packed (ep), or scalar (s).

The remaining letters denote the type:

S	single-precision floating point
d	double-precision floating point
i128	signed 128-bit integer
i64	signed 64-bit integer
u64	unsigned 64-bit integer
i32	signed 32-bit integer
u32	unsigned 32-bit integer
i16	signed 16-bit integer
u16	unsigned 16-bit integer
i8	signed 8-bit integer
u8	unsigned 8-bit integer

The variable r is generally used for the intrinsic's return value. A number appended to a variable name indicates the element of a packed object. For example, r0 is the lowest word of r.

The packed values are represented in right-to-left order, with the lowest value being used for scalar operations. Consider the following example operation:

```
double a[2] = \{1.0, 2.0\};
__m128d t = _mm_load_pd(a);
```

The result is the same as either of the following:

```
_{m128d t = _{mm_set_pd(2.0, 1.0);}
_{m128d t = _{mm_set_pd(1.0, 2.0);}
```

In other words, the XMM register that holds the value t will look as follows:

	2.0		1.0	
127		64 63		0

The "scalar" element is 1.0. Due to the nature of the instruction, some intrinsics require their arguments to be immediates (constant integer literals).

To use an intrinsic in your code, insert a line with the following syntax:

data\_type intrinsic\_name (parameters)

Where:

data\_type Is the return data type, which can be either void, int, \_\_m64, \_\_m128, \_\_m128d, or \_\_m128i. Only the

mm empty intrinsic returns void.

intrinsic name Is the name of the intrinsic, which behaves like a function

that you can use in your C/C++ code instead of in-lining the

actual instruction.

parameters Represents the parameters required by each intrinsic.

## C.1 SIMPLE INTRINSICS

#### NOTE

For detailed descriptions of the intrinsics in Table C-1, see the corresponding mnemonic in Chapter 3 in the "Intel® 64 and IA-32 Architectures Software Developer's Manual, Volume 2A", or Chapter 4, "Instruction Set Reference, N-Z" in the "Intel® 64 and IA-32 Architectures Software Developer's Manual, Volume 2B".

Table C-1. Simple Intrinsics

Mnemonic	Intrinsic
ADDPD	m128d _mm_add_pd(m128d a,m128d b)
ADDPS	m128 _mm_add_ps(m128 a,m128 b)
ADDSD	m128d _mm_add_sd(m128d a,m128d b)
ADDSS	m128 _mm_add_ss(m128 a,m128 b)
ADDSUBPD	m128d _mm_addsub_pd(m128d a,m128d b)
ADDSUBPS	m128 _mm_addsub_ps(m128 a,m128 b)
ANDNPD	m128d _mm_andnot_pd(m128d a,m128d b)
ANDNPS	m128 _mm_andnot_ps(m128 a,m128 b)
ANDPD	m128d _mm_and_pd(m128d a,m128d b)
ANDPS	m128 _mm_and_ps(m128 a,m128 b)
BLENDPD	m128d _mm_blend_pd(m128d v1,m128d v2, const int mask)
BLENDPS	m128 _mm_blend_ps(m128 v1,m128 v2, const int mask)
BLENDVPD	m128d _mm_blendv_pd(m128d v1,m128d v2,m128d v3)
BLENDVPS	m128 _mm_blendv_ps(m128 v1,m128 v2,m128 v3)
CLFLUSH	void _mm_clflush(void const *p)
CMPPD	m128d _mm_cmpeq_pd(m128d a,m128d b)
	m128d _mm_cmplt_pd(m128d a,m128d b)
	m128d _mm_cmple_pd(m128d a,m128d b)
	m128d _mm_cmpgt_pd(m128d a,m128d b)
	m128d _mm_cmpge_pd(m128d a,m128d b)
	m128d _mm_cmpneq_pd(m128d a,m128d b)
	m128d _mm_cmpnlt_pd(m128d a,m128d b)
	m128d _mm_cmpngt_pd(m128d a,m128d b)
	m128d _mm_cmpnge_pd(m128d a,m128d b)
	m128d _mm_cmpord_pd(m128d a,m128d b)
	m128d _mm_cmpunord_pd(m128d a,m128d b)
	m128d _mm_cmpnle_pd(m128d a,m128d b)
CMPPS	m128 _mm_cmpeq_ps(m128 a,m128 b)
	m128 _mm_cmplt_ps(m128 a,m128 b)
	m128 _mm_cmple_ps(m128 a,m128 b)
	m128 _mm_cmpgt_ps(m128 a,m128 b)
	m128 _mm_cmpge_ps(m128 a,m128 b)
	m128 _mm_cmpneq_ps(m128 a,m128 b)
	m128 _mm_cmpnlt_ps(m128 a,m128 b)
	m128 _mm_cmpngt_ps(m128 a,m128 b)
	<u> </u>

Table C-1. Simple Intrinsics (Contd.)

Mnemonic	Intrinsic
	m128 _mm_cmpnge_ps(m128 a,m128 b)
	m128 _mm_cmpord_ps(m128 a,m128 b)
	m128 _mm_cmpunord_ps(m128 a,m128 b)
	m128 _mm_cmpnle_ps(m128 a,m128 b)
CMPSD	m128d _mm_cmpeq_sd(m128d a,m128d b)
	m128d _mm_cmplt_sd(m128d a,m128d b)
	m128d _mm_cmple_sd(m128d a,m128d b)
	m128d _mm_cmpgt_sd(m128d a,m128d b)
	m128d _mm_cmpge_sd(m128d a,m128d b)
	m128 _mm_cmpneq_sd(m128d a,m128d b)
	m128 _mm_cmpnlt_sd(m128d a,m128d b)
	m128d _mm_cmpnle_sd(m128d a,m128d b)
	m128d _mm_cmpngt_sd(m128d a,m128d b)
	m128d _mm_cmpnge_sd(m128d a,m128d b)
	m128d _mm_cmpord_sd(m128d a,m128d b)
	m128d _mm_cmpunord_sd(m128d a,m128d b)
CMPSS	m128 _mm_cmpeq_ss(m128 a,m128 b)
	m128 _mm_cmplt_ss(m128 a,m128 b)
	m128 _mm_cmple_ss(m128 a,m128 b)
	m128 _mm_cmpgt_ss(m128 a,m128 b)
	m128 _mm_cmpge_ss(m128 a,m128 b)
	m128 _mm_cmpneq_ss(m128 a,m128 b)
	m128 _mm_cmpnlt_ss(m128 a,m128 b)
	m128 _mm_cmpnle_ss(m128 a,m128 b)
	m128 _mm_cmpngt_ss(m128 a,m128 b)
	m128 _mm_cmpnge_ss(m128 a,m128 b)
	m128 _mm_cmpord_ss(m128 a,m128 b)
	m128 _mm_cmpunord_ss(m128 a,m128 b)
COMISD	int _mm_comieq_sd(m128d a,m128d b)
	int _mm_comilt_sd(m128d a,m128d b)
	int _mm_comile_sd(m128d a,m128d b)
	int _mm_comigt_sd(m128d a,m128d b)
	int _mm_comige_sd(m128d a,m128d b)
	int _mm_comineq_sd(m128d a,m128d b)
COMISS	int _mm_comieq_ss(m128 a,m128 b)

Table C-1. Simple Intrinsics (Contd.)

Mnemonic	Intrinsic (Contd.)
	int _mm_comilt_ss(m128 a,m128 b)
	int _mm_comile_ss(m128 a,m128 b)
	int _mm_comiqt_ss(m128 a,m128 b)
	int _mm_comige_ss(m128 a,m128 b)
	int _mm_comineq_ss(m128 a,m128 b)
CRC32	unsigned int _mm_crc32_u8(unsigned int crc, unsigned char data)
	unsigned int _mm_crc32_u16(unsigned int crc, unsigned short data)
	unsigned int _mm_crc32_u32(unsigned int crc, unsigned int data)
	unsignedint64 _mm_crc32_u64(unsingedint64 crc, unsignedint64 data)
CVTDQ2PD	m128d _mm_cvtepi32_pd(m128i a)
CVTDQ2PS	m128 _mm_cvtepi32_ps(m128i a)
CVTPD2DQ	m128i _mm_cvtpd_epi32(m128d a)
CVTPD2PI	m64 _mm_cvtpd_pi32(m128d a)
CVTPD2PS	m128 _mm_cvtpd_ps(m128d a)
CVTPI2PD	m128d _mm_cvtpi32_pd(m64 a)
CVTPI2PS	m128 _mm_cvt_pi2ps(m128 a,m64 b) m128 _mm_cvtpi32_ps(m128 a,m64 b)
CVTPS2DQ	m128i _mm_cvtps_epi32(m128 a)
CVTPS2PD	m128d _mm_cvtps_pd(m128 a)
CVTPS2PI	m64 _mm_cvt_ps2pi(m128 a) m64 _mm_cvtps_pi32(m128 a)
CVTSD2SI	int _mm_cvtsd_si32(m128d a)
CVTSD2SS	m128 _mm_cvtsd_ss(m128 a,m128d b)
CVTSI2SD	m128d _mm_cvtsi32_sd(m128d a, int b)
CVTSI2SS	m128 _mm_cvt_si2ss(m128 a, int b) m128 _mm_cvtsi32_ss(m128 a, int b)
CVTSS2SD	m128d _mm_cvtss_sd(m128d a,m128 b)
CVTSS2SI	int _mm_cvt_ss2si(m128 a) int _mm_cvtss_si32(m128 a)
CVTTPD2DQ	m128i _mm_cvttpd_epi32(m128d a)
CVTTPD2PI	m64 _mm_cvttpd_pi32(m128d a)
CVTTPS2DQ	m128i _mm_cvttps_epi32(m128 a)
CVTTPS2PI	m64 _mm_cvtt_ps2pi(m128 a) m64 _mm_cvttps_pi32(m128 a)
CVTTSD2SI	int _mm_cvttsd_si32(m128d a)
CVTTSS2SI	int _mm_cvtt_ss2si(m128 a) int _mm_cvttss_si32(m128 a)
	m64 _mm_cvtsi32_si64(int i)

Table C-1. Simple Intrinsics (Contd.)

Mnemonic	Intrinsic
	int _mm_cvtsi64_si32(m64 m)
DIVPD	m128d _mm_div_pd(m128d a,m128d b)
DIVPS	m128 _mm_div_ps(m128 a,m128 b)
DIVSD	m128d _mm_div_sd(m128d a,m128d b)
DIVSS	m128 _mm_div_ss(m128 a,m128 b)
DPPD	m128d _mm_dp_pd(m128d a,m128d b, const int mask)
DPPS	m128 _mm_dp_ps(m128 a,m128 b, const int mask)
EMMS	void _mm_empty()
EXTRACTPS	int _mm_extract_ps(m128 src, const int ndx)
HADDPD	m128d _mm_hadd_pd(m128d a,m128d b)
HADDPS	m128 _mm_hadd_ps(m128 a,m128 b)
HSUBPD	m128d _mm_hsub_pd(m128d a,m128d b)
HSUBPS	m128 _mm_hsub_ps(m128 a,m128 b)
INSERTPS	m128 _mm_insert_ps(m128 dst,m128 src, const int ndx)
LDDQU	m128i _mm_lddqu_si128(m128i const *p)
LDMXCSR	mm_setcsr(unsigned int i)
LFENCE	void _mm_lfence(void)
MASKMOVDQU	void _mm_maskmoveu_si128(m128i d,m128i n, char *p)
MASKMOVQ	void _mm_maskmove_si64(m64 d,m64 n, char *p)
MAXPD	m128d _mm_max_pd(m128d a,m128d b)
MAXPS	m128 _mm_max_ps(m128 a,m128 b)
MAXSD	m128d _mm_max_sd(m128d a,m128d b)
MAXSS	m128 _mm_max_ss(m128 a,m128 b)
MFENCE	void _mm_mfence(void)
MINPD	m128d _mm_min_pd(m128d a,m128d b)
MINPS	m128 _mm_min_ps(m128 a,m128 b)
MINSD	m128d _mm_min_sd(m128d a,m128d b)
MINSS	m128 _mm_min_ss(m128 a,m128 b)
MONITOR	void _mm_monitor(void const *p, unsigned extensions, unsigned hints)
MOVAPD	m128d _mm_load_pd(double * p)
	void_mm_store_pd(double *p,m128d a)
MOVAPS	m128 _mm_load_ps(float * p)
	void_mm_store_ps(float *p,m128 a)
MOVD	m128i _mm_cvtsi32_si128(int a)
	int _mm_cvtsi128_si32(m128i a)

Table C-1. Simple Intrinsics (Contd.)

Mnemonic	Intrinsic
	m64 _mm_cvtsi32_si64(int a)
	int _mm_cvtsi64_si32(m64 a)
MOVDDUP	m128d _mm_movedup_pd(m128d a)
	m128d _mm_loaddup_pd(double const * dp)
MOVDQA	m128i _mm_load_si128(m128i * p)
	void_mm_store_si128(m128i *p,m128i a)
MOVDQU	m128i _mm_loadu_si128(m128i * p)
	void_mm_storeu_si128(m128i *p,m128i a)
MOVDQ2Q	m64 _mm_movepi64_pi64(m128i a)
MOVHLPS	m128 _mm_movehl_ps(m128 a,m128 b)
MOVHPD	m128d _mm_loadh_pd(m128d a, double * p)
	void _mm_storeh_pd(double * p,m128d a)
MOVHPS	m128 _mm_loadh_pi(m128 a,m64 * p)
	void _mm_storeh_pi(m64 * p,m128 a)
MOVLPD	m128d _mm_loadl_pd(m128d a, double * p)
	void _mm_storel_pd(double * p,m128d a)
MOVLPS	m128 _mm_loadl_pi(m128 a,m64 *p)
	void_mm_storel_pi(m64 * p,m128 a)
MOVLHPS	m128 _mm_movelh_ps(m128 a,m128 b)
MOVMSKPD	int _mm_movemask_pd(m128d a)
MOVMSKPS	int _mm_movemask_ps(m128 a)
MOVNTDQA	m128i _mm_stream_load_si128(m128i *p)
MOVNTDQ	void_mm_stream_si128(m128i * p,m128i a)
MOVNTPD	void_mm_stream_pd(double * p,m128d a)
MOVNTPS	void_mm_stream_ps(float * p,m128 a)
MOVNTI	void_mm_stream_si32(int * p, int a)
MOVNTQ	void_mm_stream_pi(m64 * p,m64 a)
MOVQ	m128i _mm_loadl_epi64(m128i * p)
	void_mm_storel_epi64(_m128i * p,m128i a)
	m128i _mm_move_epi64(m128i a)
MOVQ2DQ	m128i _mm_movpi64_epi64(m64 a)
MOVSD	m128d _mm_load_sd(double * p)
	void_mm_store_sd(double * p,m128d a)
	m128d _mm_move_sd(m128d a,m128d b)
MOVSHDUP	m128 _mm_movehdup_ps(m128 a)

Table C-1. Simple Intrinsics (Contd.)

Mnemonic	Intrinsic
MOVSLDUP	m128 _mm_moveldup_ps(m128 a)
MOVSS	m128 _mm_load_ss(float * p)
	void_mm_store_ss(float * p,m128 a)
	m128 _mm_move_ss(m128 a,m128 b)
MOVUPD	m128d _mm_loadu_pd(double * p)
	void_mm_storeu_pd(double *p,m128d a)
MOVUPS	m128 _mm_loadu_ps(float * p)
	void_mm_storeu_ps(float *p,m128 a)
MPSADBW	m128i _mm_mpsadbw_epu8(m128i s1,m128i s2, const int mask)
MULPD	m128d _mm_mul_pd(m128d a,m128d b)
MULPS	m128 _mm_mul_ss(m128 a,m128 b)
MULSD	m128d _mm_mul_sd(m128d a,m128d b)
MULSS	m128 _mm_mul_ss(m128 a,m128 b)
MWAIT	void _mm_mwait(unsigned extensions, unsigned hints)
ORPD	m128d _mm_or_pd(m128d a,m128d b)
ORPS	m128 _mm_or_ps(m128 a,m128 b)
PABSB	m64 _mm_abs_pi8 (m64 a)
	m128i _mm_abs_epi8 (m128i a)
PABSD	m64 _mm_abs_pi32 (m64 a)
	m128i _mm_abs_epi32 (m128i a)
PABSW	m64 _mm_abs_pi16 (m64 a)
	m128i _mm_abs_epi16 (m128i a)
PACKSSWB	m128i _mm_packs_epi16(m128i m1,m128i m2)
PACKSSWB	m64 _mm_packs_pi16(m64 m1,m64 m2)
PACKSSDW	m128i _mm_packs_epi32 (m128i m1,m128i m2)
PACKSSDW	m64 _mm_packs_pi32 (m64 m1,m64 m2)
PACKUSDW	m128i _mm_packus_epi32(m128i m1,m128i m2)
PACKUSWB	m128i _mm_packus_epi16(m128i m1,m128i m2)
PACKUSWB	m64 _mm_packs_pu16(m64 m1,m64 m2)
PADDB	m128i _mm_add_epi8(m128i m1,m128i m2)
PADDB	m64 _mm_add_pi8(m64 m1,m64 m2)
PADDW	m128i _mm_add_epi16(m128i m1,m128i m2)
PADDW	m64 _mm_add_pi16(m64 m1,m64 m2)
PADDD	m128i _mm_add_epi32(m128i m1,m128i m2)
PADDD	m64 _mm_add_pi32(m64 m1,m64 m2)

Table C-1. Simple Intrinsics (Contd.)

Mnemonic	Intrinsic
PADDQ	m128i _mm_add_epi64(m128i m1,m128i m2)
PADDQ	m64 _mm_add_si64(m64 m1,m64 m2)
PADDSB	m128i _mm_adds_epi8(m128i m1,m128i m2)
PADDSB	m64 _mm_adds_pi8(m64 m1,m64 m2)
PADDSW	m128i _mm_adds_epi16(m128i m1,m128i m2)
PADDSW	m64 _mm_adds_pi16(m64 m1,m64 m2)
PADDUSB	m128i _mm_adds_epu8(m128i m1,m128i m2)
PADDUSB	m64 _mm_adds_pu8(m64 m1,m64 m2)
PADDUSW	m128i _mm_adds_epu16(m128i m1,m128i m2)
PADDUSW	m64 _mm_adds_pu16(m64 m1,m64 m2)
PALIGNR	m64 _mm_alignr_pi8 (m64 a,m64 b, int n)
	m128i _mm_alignr_epi8 (m128i a,m128i b, int n)
PAND	m128i _mm_and_si128(m128i m1,m128i m2)
PAND	m64 _mm_and_si64(m64 m1,m64 m2)
PANDN	m128i _mm_andnot_si128(m128i m1,m128i m2)
PANDN	m64 _mm_andnot_si64(m64 m1,m64 m2)
PAUSE	void _mm_pause(void)
PAVGB	m128i _mm_avg_epu8(m128i a,m128i b)
PAVGB	m64 _mm_avg_pu8(m64 a,m64 b)
PAVGW	m128i _mm_avg_epu16(m128i a,m128i b)
PAVGW	m64 _mm_avg_pu16(m64 a,m64 b)
PBLENDVB	m128i _mm_blendv_epi (m128i v1,m128i v2,m128i mask)
PBLENDW	m128i _mm_blend_epi16(m128i v1,m128i v2, const int mask)
PCMPEQB	m128i _mm_cmpeq_epi8(m128i m1,m128i m2)
PCMPEQB	m64 _mm_cmpeq_pi8(m64 m1,m64 m2)
PCMPEQQ	m128i _mm_cmpeq_epi64(m128i a,m128i b)
PCMPEQW	m128i _mm_cmpeq_epi16 (m128i m1,m128i m2)
PCMPEQW	m64 _mm_cmpeq_pi16 (m64 m1,m64 m2)
PCMPEQD	m128i _mm_cmpeq_epi32(m128i m1,m128i m2)
PCMPEQD	m64 _mm_cmpeq_pi32(m64 m1,m64 m2)
PCMPESTRI	int _mm_cmpestri (m128i a, int la,m128i b, int lb, const int mode)
	int _mm_cmpestra (m128i a, int la,m128i b, int lb, const int mode)
	int _mm_cmpestrc (m128i a, int la,m128i b, int lb, const int mode)
	int _mm_cmpestro (m128i a, int la,m128i b, int lb, const int mode)
	int _mm_cmpestrs (m128i a, int la,m128i b, int lb, const int mode)
	1

Table C-1. Simple Intrinsics (Contd.)

Mnemonic	Intrinsic
	int _mm_cmpestrz (m128i a, int la,m128i b, int lb, const int mode)
PCMPESTRM	m128i _mm_cmpestrm (m128i a, int la,m128i b, int lb, const int mode)
	int _mm_cmpestra (m128i a, int la,m128i b, int lb, const int mode)
	int _mm_cmpestrc (m128i a, int la,m128i b, int lb, const int mode)
	int _mm_cmpestro (m128i a, int la,m128i b, int lb, const int mode)
	int _mm_cmpestrs (m128i a, int la,m128i b, int lb, const int mode)
	int _mm_cmpestrz (m128i a, int la,m128i b, int lb, const int mode)
PCMPGTB	m128i _mm_cmpgt_epi8 (m128i m1,m128i m2)
PCMPGTB	m64 _mm_cmpgt_pi8 (m64 m1,m64 m2)
PCMPGTW	m128i _mm_cmpgt_epi16(m128i m1,m128i m2)
PCMPGTW	m64 _mm_cmpgt_pi16 (m64 m1,m64 m2)
PCMPGTD	m128i _mm_cmpgt_epi32(m128i m1,m128i m2)
PCMPGTD	m64 _mm_cmpgt_pi32(m64 m1,m64 m2)
PCMPISTRI	m128i _mm_cmpestrm (m128i a, int la,m128i b, int lb, const int mode)
	int _mm_cmpestra (m128i a, int la,m128i b, int lb, const int mode)
	int _mm_cmpestrc (m128i a, int la,m128i b, int lb, const int mode)
	int _mm_cmpestro (m128i a, int la,m128i b, int lb, const int mode)
	int _mm_cmpestrs (m128i a, int la,m128i b, int lb, const int mode)
	int _mm_cmpistrz (m128i a,m128i b, const int mode)
PCMPISTRM	m128i _mm_cmpistrm (m128i a,m128i b, const int mode)
	int _mm_cmpistra (m128i a,m128i b, const int mode)
	int _mm_cmpistrc (m128i a,m128i b, const int mode)
	int _mm_cmpistro (m128i a,m128i b, const int mode)
	int _mm_cmpistrs (m128i a,m128i b, const int mode)
	int _mm_cmpistrz (m128i a,m128i b, const int mode)
PCMPGTQ	m128i _mm_cmpgt_epi64(m128i a,m128i b)
PEXTRB	int _mm_extract_epi8 (m128i src, const int ndx)
PEXTRD	int _mm_extract_epi32 (m128i src, const int ndx)
PEXTRQ	int64 _mm_extract_epi64 (m128i src, const int ndx)
PEXTRW	int _mm_extract_epi16(m128i a, int n)
PEXTRW	int _mm_extract_pi16(m64 a, int n)
	int _mm_extract_epi16 (m128i src, int ndx)
PHADDD	m64 _mm_hadd_pi32 (m64 a,m64 b)
	m128i _mm_hadd_epi32 (m128i a,m128i b)
	I .

Table C-1. Simple Intrinsics (Contd.)

Mnemonic	Intrinsic	
PHADDSW	m64 _mm_hadds_pi16 (m64 a,m64 b)	
	m128i _mm_hadds_epi16 (m128i a,m128i b)	
PHADDW	m64 _mm_hadd_pi16 (m64 a,m64 b)	
	m128i _mm_hadd_epi16 (m128i a,m128i b)	
PHMINPOSUW	m128i _mm_minpos_epu16(m128i packed_words)	
PHSUBD	m64 _mm_hsub_pi32 (m64 a,m64 b)	
	m128i _mm_hsub_epi32 (m128i a,m128i b)	
PHSUBSW	m64 _mm_hsubs_pi16 (m64 a,m64 b)	
	m128i _mm_hsubs_epi16 (m128i a,m128i b)	
PHSUBW	m64 _mm_hsub_pi16 (m64 a,m64 b)	
	m128i _mm_hsub_epi16 (m128i a,m128i b)	
PINSRB	m128i _mm_insert_epi8(m128i s1, int s2, const int ndx)	
PINSRD	m128i _mm_insert_epi32(m128i s2, int s, const int ndx)	
PINSRQ	m128i _mm_insert_epi64(m128i s2,int64 s, const int ndx)	
PINSRW	m128i _mm_insert_epi16(m128i a, int d, int n)	
PINSRW	m64 _mm_insert_pi16(m64 a, int d, int n)	
PMADDUBSW	m64 _mm_maddubs_pi16 (m64 a,m64 b)	
	m128i _mm_maddubs_epi16 (m128i a,m128i b)	
PMADDWD	m128i _mm_madd_epi16(m128i m1m128i m2)	
PMADDWD	m64 _mm_madd_pi16(m64 m1,m64 m2)	
PMAXSB	m128i _mm_max_epi8(m128i a,m128i b)	
PMAXSD	m128i _mm_max_epi32(m128i a,m128i b)	
PMAXSW	m128i _mm_max_epi16(m128i a,m128i b)	
PMAXSW	m64 _mm_max_pi16(m64 a,m64 b)	
PMAXUB	m128i _mm_max_epu8(m128i a,m128i b)	
PMAXUB	m64 _mm_max_pu8(m64 a,m64 b)	
PMAXUD	m128i _mm_max_epu32(m128i a,m128i b)	
PMAXUW	m128i _mm_max_epu16(m128i a,m128i b)	
PMINSB	_m128i _mm_min_epi8(m128i a,m128i b)	
PMINSD	m128i _mm_min_epi32(m128i a,m128i b)	
PMINSW	m128i _mm_min_epi16(m128i a,m128i b)	
PMINSW	m64 _mm_min_pi16(m64 a,m64 b)	
PMINUB	m128i _mm_min_epu8(m128i a,m128i b)	
PMINUB	m64 _mm_min_pu8(m64 a,m64 b)	
PMINUD	m128i _mm_min_epu32 (m128i a,m128i b)	

Table C-1. Simple Intrinsics (Contd.)

Mnemonic	Intrinsic
PMINUW	m128i _mm_min_epu16 (m128i a,m128i b)
PMOVMSKB	int _mm_movemask_epi8(m128i a)
PMOVMSKB	int _mm_movemask_pi8(m64 a)
PMOVSXBW	m128i _mm_ cvtepi8_epi16(m128i a)
PMOVSXBD	m128i _mm_ cvtepi8_epi32(m128i a)
PMOVSXBQ	m128i _mm_ cvtepi8_epi64(m128i a)
PMOVSXWD	m128i _mm_ cvtepi16_epi32(m128i a)
PMOVSXWQ	m128i _mm_ cvtepi16_epi64(m128i a)
PMOVSXDQ	m128i _mm_ cvtepi32_epi64(m128i a)
PMOVZXBW	m128i _mm_ cvtepu8_epi16(m128i a)
PMOVZXBD	m128i _mm_ cvtepu8_epi32(m128i a)
PMOVZXBQ	m128i _mm_ cvtepu8_epi64(m128i a)
PMOVZXWD	m128i _mm_ cvtepu16_epi32(m128i a)
PMOVZXWQ	m128i _mm_ cvtepu16_epi64(m128i a)
PMOVZXDQ	m128i _mm_ cvtepu32_epi64(m128i a)
PMULDQ	m128i _mm_mul_epi32(m128i a,m128i b)
PMULHRSW	m64 _mm_mulhrs_pi16 (m64 a,m64 b)
	m128i _mm_mulhrs_epi16 (m128i a,m128i b)
PMULHUW	m128i _mm_mulhi_epu16(m128i a,m128i b)
PMULHUW	m64 _mm_mulhi_pu16(m64 a,m64 b)
PMULHW	m128i _mm_mulhi_epi16(m128i m1,m128i m2)
PMULHW	m64 _mm_mulhi_pi16(m64 m1,m64 m2)
PMULLUD	m128i _mm_mullo_epi32(m128i a,m128i b)
PMULLW	m128i _mm_mullo_epi16(m128i m1,m128i m2)
PMULLW	m64 _mm_mullo_pi16(m64 m1,m64 m2)
PMULUDQ	m64 _mm_mul_su32(m64 m1,m64 m2)
	m128i _mm_mul_epu32(m128i m1,m128i m2)
POPCNT int _mm_popcnt_u32(unsigned int a)	
	int64_t _mm_popcnt_u64(unsignedint64 a)
POR	m64 _mm_or_si64(m64 m1,m64 m2)
POR	m128i _mm_or_si128(m128i m1,m128i m2)
PREFETCHh	void _mm_prefetch(char *a, int sel)
PSADBW	m128i _mm_sad_epu8(m128i a,m128i b)
PSADBW	m64 _mm_sad_pu8(m64 a,m64 b)

Table C-1. Simple Intrinsics (Contd.)

Mnemonic	Intrinsic	
PSHUFB	m64 _mm_shuffle_pi8 (m64 a,m64 b)	
	m128i _mm_shuffle_epi8 (m128i a,m128i b)	
PSHUFD	m128i _mm_shuffle_epi32(m128i a, int n)	
PSHUFHW	m128i _mm_shufflehi_epi16(m128i a, int n)	
PSHUFLW	m128i _mm_shufflelo_epi16(m128i a, int n)	
PSHUFW	m64 _mm_shuffle_pi16(m64 a, int n)	
PSIGNB	m64 _mm_sign_pi8 (m64 a,m64 b)	
	m128i _mm_sign_epi8 (m128i a,m128i b)	
PSIGND	m64 _mm_sign_pi32 (m64 a,m64 b)	
	m128i _mm_sign_epi32 (m128i a,m128i b)	
PSIGNW	m64 _mm_sign_pi16 (m64 a,m64 b)	
	m128i _mm_sign_epi16 (m128i a,m128i b)	
PSLLW	m128i _mm_sll_epi16(m128i m,m128i count)	
PSLLW	m128i _mm_slli_epi16(m128i m, int count)	
PSLLW	m64 _mm_sll_pi16(m64 m,m64 count)	
	m64 _mm_slli_pi16(m64 m, int count)	
PSLLD	m128i _mm_slli_epi32(m128i m, int count)	
	m128i _mm_sll_epi32(m128i m,m128i count)	
PSLLD	m64 _mm_slli_pi32(m64 m, int count)	
	m64 _mm_sll_pi32(m64 m,m64 count)	
PSLLQ	m64 _mm_sll_si64(m64 m,m64 count)	
	m64 _mm_slli_si64(m64 m, int count)	
PSLLQm128i _mm_sll_epi64(m128i m,m128i count)		
	m128i _mm_slli_epi64(m128i m, int count)	
PSLLDQ	m128i _mm_slli_si128(m128i m, int imm)	
PSRAW	m128i _mm_sra_epi16(m128i m,m128i count)	
	m128i _mm_srai_epi16(m128i m, int count)	
PSRAW	m64 _mm_sra_pi16(m64 m,m64 count)	
	m64 _mm_srai_pi16(m64 m, int count)	
PSRAD	m128i _mm_sra_epi32 (m128i m,m128i count)	
	m128i _mm_srai_epi32 (m128i m, int count)	
PSRAD	m64 _mm_sra_pi32 (m64 m,m64 count)	
	m64 _mm_srai_pi32 (m64 m, int count)	
PSRLW	_m128i _mm_srl_epi16 (m128i m,m128i count)	
	m128i _mm_srli_epi16 (m128i m, int count)	
ı		

Table C-1. Simple Intrinsics (Contd.)

Mnemonic	Intrinsic
	m64 _mm_srl_pi16 (m64 m,m64 count)
	m64 _mm_srli_pi16(m64 m, int count)
PSRLD	m128i _mm_srl_epi32 (m128i m,m128i count)
	m128i _mm_srli_epi32 (m128i m, int count)
PSRLD	m64 _mm_srl_pi32 (m64 m,m64 count)
	m64 _mm_srli_pi32 (m64 m, int count)
PSRLQ	m128i _mm_srl_epi64 (m128i m,m128i count)
	m128i _mm_srli_epi64 (m128i m, int count)
PSRLQ	m64 _mm_srl_si64 (m64 m,m64 count)
	m64 _mm_srli_si64 (m64 m, int count)
PSRLDQ	m128i _mm_srli_si128(m128i m, int imm)
PSUBB	m128i _mm_sub_epi8(m128i m1,m128i m2)
PSUBB	m64 _mm_sub_pi8(m64 m1,m64 m2)
PSUBW	m128i _mm_sub_epi16(m128i m1,m128i m2)
PSUBW	m64 _mm_sub_pi16(m64 m1,m64 m2)
PSUBD	m128i _mm_sub_epi32(m128i m1,m128i m2)
PSUBD	m64 _mm_sub_pi32(m64 m1,m64 m2)
PSUBQ	m128i _mm_sub_epi64(m128i m1,m128i m2)
PSUBQ	m64 _mm_sub_si64(m64 m1,m64 m2)
PSUBSB	m128i _mm_subs_epi8(m128i m1,m128i m2)
PSUBSB	m64 _mm_subs_pi8(m64 m1,m64 m2)
PSUBSW	m128i _mm_subs_epi16(m128i m1,m128i m2)
PSUBSW	m64 _mm_subs_pi16(m64 m1,m64 m2)
PSUBUSB	m128i _mm_subs_epu8(m128i m1,m128i m2)
PSUBUSB	m64 _mm_subs_pu8(m64 m1,m64 m2)
PSUBUSW	m128i _mm_subs_epu16(m128i m1,m128i m2)
PSUBUSW	m64 _mm_subs_pu16(m64 m1,m64 m2)
PTEST	int _mm_testz_si128(m128i s1,m128i s2)
	int _mm_testc_si128(m128i s1,m128i s2)
	int _mm_testnzc_si128(m128i s1,m128i s2)
PUNPCKHBW	m64 _mm_unpackhi_pi8(m64 m1,m64 m2)
PUNPCKHBW	m128i _mm_unpackhi_epi8(m128i m1,m128i m2)
PUNPCKHWD	m64 _mm_unpackhi_pi16(m64 m1,m64 m2)
PUNPCKHWD	m128i _mm_unpackhi_epi16(m128i m1,m128i m2)
PUNPCKHDQ	m64 _mm_unpackhi_pi32(m64 m1,m64 m2)

Table C-1. Simple Intrinsics (Contd.)

Mnemonic	Intrinsic	
PUNPCKHDQ	m128i _mm_unpackhi_epi32(m128i m1,m128i m2)	
PUNPCKHQDQ	m128i _mm_unpackhi_epi64(m128i m1,m128i m2)	
PUNPCKLBW	m64 _mm_unpacklo_pi8 (m64 m1,m64 m2)	
PUNPCKLBW	m128i _mm_unpacklo_epi8 (m128i m1,m128i m2)	
PUNPCKLWD	m64 _mm_unpacklo_pi16(m64 m1,m64 m2)	
PUNPCKLWD	m128i _mm_unpacklo_epi16(m128i m1,m128i m2)	
PUNPCKLDQ	m64 _mm_unpacklo_pi32(m64 m1,m64 m2)	
PUNPCKLDQ	m128i _mm_unpacklo_epi32(m128i m1,m128i m2)	
PUNPCKLQDQ	m128i _mm_unpacklo_epi64(m128i m1,m128i m2)	
PXOR	m64 _mm_xor_si64(m64 m1,m64 m2)	
PXOR	m128i _mm_xor_si128(m128i m1,m128i m2)	
RCPPS	m128 _mm_rcp_ps(m128 a)	
RCPSS	m128 _mm_rcp_ss(m128 a)	
ROUNDPD	m128 mm_round_pd(m128d s1, int iRoundMode)	
	m128 mm_floor_pd(m128d s1)	
	m128 mm_ceil_pd(m128d s1)	
ROUNDPS	m128 mm_round_ps(m128 s1, int iRoundMode)	
	m128 mm_floor_ps(m128 s1)	
	m128 mm_ceil_ps(m128 s1)	
ROUNDSD	m128d mm_round_sd(m128d dst,m128d s1, int iRoundMode)	
	m128d mm_floor_sd(m128d dst,m128d s1)	
	m128d mm_ceil_sd(m128d dst,m128d s1)	
ROUNDSS	m128 mm_round_ss(m128 dst,m128 s1, int iRoundMode)	
	m128 mm_floor_ss(m128 dst,m128 s1)	
	m128 mm_ceil_ss(m128 dst,m128 s1)	
RSQRTPS	m128 _mm_rsqrt_ps(m128 a)	
RSQRTSS	m128 _mm_rsqrt_ss(m128 a)	
SFENCE	void_mm_sfence(void)	
SHUFPD	m128d _mm_shuffle_pd(m128d a,m128d b, unsigned int imm8)	
SHUFPS	m128 _mm_shuffle_ps(m128 a,m128 b, unsigned int imm8)	
SQRTPD	m128d _mm_sqrt_pd(m128d a)	
SQRTPS	m128 _mm_sqrt_ps(m128 a)	
SQRTSD	m128d _mm_sqrt_sd(m128d a)	
SQRTSS	m128 _mm_sqrt_ss(m128 a)	
STMXCSR	_mm_getcsr(void)	

Table C-1. Simple Intrinsics (Contd.)

Mnemonic	Intrinsic	
SUBPD	m128d _mm_sub_pd(m128d a,m128d b)	
SUBPS	m128 _mm_sub_ps(m128 a,m128 b)	
SUBSD	m128d _mm_sub_sd(m128d a,m128d b)	
SUBSS	m128 _mm_sub_ss(m128 a,m128 b)	
UCOMISD	int _mm_ucomieq_sd(m128d a,m128d b)	
	int _mm_ucomilt_sd(m128d a,m128d b)	
	int _mm_ucomile_sd(m128d a,m128d b)	
	int _mm_ucomigt_sd(m128d a,m128d b)	
	int _mm_ucomige_sd(m128d a,m128d b)	
	int _mm_ucomineq_sd(m128d a,m128d b)	
UCOMISS	int _mm_ucomieq_ss(m128 a,m128 b)	
	int _mm_ucomilt_ss(m128 a,m128 b)	
	int _mm_ucomile_ss(m128 a,m128 b)	
	int _mm_ucomigt_ss(m128 a,m128 b)	
	int _mm_ucomige_ss(m128 a,m128 b)	
	int _mm_ucomineq_ss(m128 a,m128 b)	
UNPCKHPD	m128d _mm_unpackhi_pd(m128d a,m128d b)	
UNPCKHPS	m128 _mm_unpackhi_ps(m128 a,m128 b)	
UNPCKLPD	m128d _mm_unpacklo_pd(m128d a,m128d b)	
UNPCKLPS	m128 _mm_unpacklo_ps(m128 a,m128 b)	
XORPD	m128d _mm_xor_pd(m128d a,m128d b)	
XORPS	m128 _mm_xor_ps(m128 a,m128 b)	

# C.2 COMPOSITE INTRINSICS

Table C-2. Composite Intrinsics

Mnemonic	Intrinsic
(composite)	m128i _mm_set_epi64(m64 q1,m64 q0)
(composite)	m128i _mm_set_epi32(int i3, int i2, int i1, int i0)
(composite)	m128i _mm_set_epi16(short w7,short w6, short w5, short w4, short w3, short w2, short w1,short w0)
(composite)	m128i _mm_set_epi8(char w15,char w14, char w13, char w12, char w11, char w10, char w9, char w8, char w7,char w6, char w5, char w4, char w3, char w2,char w1, char w0)
(composite)	m128i _mm_set1_epi64(m64 q)

Table C-2. Composite Intrinsics (Contd.)

Mnemonic	Intrinsic
(composite)	m128i _mm_set1_epi32(int a)
(composite)	m128i _mm_set1_epi16(short a)
(composite)	m128i _mm_set1_epi8(char a)
(composite)	m128i _mm_setr_epi64(m64 q1,m64 q0)
(composite)	m128i _mm_setr_epi32(int i3, int i2, int i1, int i0)
(composite)	m128i _mm_setr_epi16(short w7,short w6, short w5, short w4, short w3, short w2, short w, short w0)
(composite)	m128i _mm_setr_epi8(char w15,char w14, char w13, char w12, char w11, char w10, char w9, char w8,char w7, char w6,char w5, char w4, char w3, char w2,char w1,char w0)
(composite)	m128i _mm_setzero_si128()
(composite)	m128 _mm_set_ps1(float w) m128 _mm_set1_ps(float w)
(composite)	m128cmm_set1_pd(double w)
(composite)	m128d _mm_set_sd(double w)
(composite)	m128d _mm_set_pd(double z, double y)
(composite)	m128 _mm_set_ps(float z, float y, float x, float w)
(composite)	m128d _mm_setr_pd(double z, double y)
(composite)	m128 _mm_setr_ps(float z, float y, float x, float w)
(composite)	m128d _mm_setzero_pd(void)
(composite)	m128 _mm_setzero_ps(void)
MOVSD + shuffle	m128d _mm_load_pd(double * p) m128d _mm_load1_pd(double *p)
MOVSS + shuffle	m128 _mm_load_ps1(float * p) m128 _mm_load1_ps(float *p)
MOVAPD + shuffle	m128d _mm_loadr_pd(double * p)
MOVAPS + shuffle	m128 _mm_loadr_ps(float * p)
MOVSD + shuffle	void _mm_store1_pd(double *p,m128d a)
MOVSS + shuffle	void _mm_store_ps1(float * p,m128 a) void _mm_store1_ps(float *p,m128 a)
MOVAPD + shuffle	_mm_storer_pd(double * p,m128d a)
MOVAPS + shuffle	_mm_storer_ps(float * p,m128 a)

### INTEL® C/C++ COMPILER INTRINSICS AND FUNCTIONAL EQUIVALENTS

Numerics	Brand information, 3-205
0000, B-59	processor brand index, 3-208
64-bit mode	processor brand string, 3-205
control and debug registers, 2-15	BSF instruction, 3-87
default operand size, 2-15	BSR instruction, 3-89
direct memory-offset MOVs, 2-13	BSWAP instruction, 3-91
general purpose encodings, B-24	BT instruction, 3-93
immediates, 2-14	BTC instruction, 3-96, 3-590
introduction, 2-9	BTR instruction, 3-99, 3-590
machine instructions, B-1	BTS instruction, 3-102, 3-590
reg (reg) field, B-4	Byte order, 1-4
REX prefixes, 2-9, B-2	•
RIP-relative addressing, 2-14	C
SIMD encodings, B-54	C
special instruction encodings, B-92	Cache and TLB information, 3-199
summary table notation, 3-7	Cache Inclusiveness, 3-183
Summary table notation, 5-1	Caches, invalidating (flushing), 3-527, 4-499
	CALL instruction, 3-105
A	GETSEC, 6-3
AAA instruction, 3-26	CBW instruction, 3-123
AAD instruction, 3-28	CDQ instruction, 3-283
AAM instruction, 3-30	CDQE instruction, 3-123
AAS instruction, 3-32	CF (carry) flag, EFLAGS register, 3-37, 3-93, 3-96,
Access rights, segment descriptor, 3-561	3-99, 3-102, 3-124, 3-133, 3-289, 3-496,
ADC instruction, 3-34, 3-590	3-502, 3-746, 4-312, 4-381, 4-398,
ADD instruction, 3-26, 3-37, 3-285, 3-590	4-401, 4-430, 4-444
ADDPD instruction, 3-40	CLC instruction, 3-124
ADDPS instruction, 3-43	CLD instruction, 3-125
Addressing methods	CLFLUSH instruction, 3-126
RIP-relative, 2-14	CPUID flag, 3-198
Addressing, segments, 1-6	CLI instruction, 3-128
ADDSD instruction, 3-46	CLTS instruction, 3-131
ADDSS instruction, 3-49	CMC instruction, 3-133
ADDSUBPD instruction, 3-52	CMOVcc flag, 3-198
ADDSUBPS instruction, 3-56	CMOVcc instructions, 3-134
AND instruction, 3-60, 3-590	CPUID flag, 3-198
ANDNPD instruction, 3-67	CMP instruction, 3-141
ANDNPS instruction, 3-69	CMPPD instruction, 3-144
ANDPD instruction, 3-63	CMPPS instruction, 3-149
ANDPS instruction, 3-65	CMPS instruction, 3-154, 4-335
Arctangent, x87 FPU operation, 3-394	CMPSB instruction, 3-154
ARPL instruction, 3-71	CMPSD instruction, 3-154, 3-160
authenticated code execution mode, 6-4	CMPSQ instruction, 3-154
, , , , , , , , , , , , , , , , , , ,	CMPSS instruction, 3-164
B	CMPSW instruction, 3-154
В	CMPXCHG instruction, 3-168, 3-590
B (default stack size) flag, segment descriptor, 4-296	CMPXCHG16B instruction, 3-171
Base (operand addressing), 2-4	CPUID bit, 3-194
BCD integers	CMPXCHG8B instruction, 3-171
packed, 3-285, 3-287, 3-332, 3-334	CPUID flag, 3-197
unpacked, 3-26, 3-28, 3-30, 3-32	COMISD instruction, 3-174
Binary numbers, 1-6	COMISS instruction, 3-177
Bit order, 1-4	Compatibility mode
bootstrap processor, 6-21	introduction, 2-9
bootstrap processor, 6-28, 6-37, 6-39, 6-40	see 64-bit mode
BOUND instruction, 3-84	summary table notation, 3-7
BOUND range exceeded exception (#BR), 3-84	Compatibility, software, 1-5
Branch hints, 2-2	compilers

documentation, 1-9	SpeedStep technology, 3-194
Condition code flags, EFLAGS register, 3-134	SS2 extensions flag, 3-199
Condition code flags, x87 FPU status word	SSE extensions flag, 3-199
flags affected by instructions, 3-14	SSE3 extensions flag, 3-193
setting, 3-444, 3-446, 3-449	SSSE3 extensions flag, 3-194
Conditional jump, 3-542	SYSENTER flag, 3-197
• • •	SYSEXIT flag, 3-197
Conforming code segment, 3-562	
Constants (floating point), loading, 3-382	thermal management, 3-204
Control registers, moving values to and from, 3-646	thermal monitor, 3-194, 3-198, 3-199
Cosine, x87 FPU operation, 3-350, 3-419	time stamp counter, 3-197
CPL, 3-128, 4-494	using CPUID, 3-180
CPUID instruction, 3-180, 3-198	vendor ID string, 3-189
36-bit page size extension, 3-198	version information, 3-181, 3-203
AP-485, 1-9	virtual 8086 Mode flag, 3-197
APIC on-chip, 3-197	virtual address bits, 3-189
basic CPUID information, 3-181	WRMSR flag, 3-197
cache and TLB characteristics, 3-181	CQO instruction, 3-283
CLFLUSH flag, 3-198	CRO control register, 4-415
CLFLUSH instruction cache line size, 3-192	CS register, 3-106, 3-512, 3-531, 3-550, 3-641,
CMPXCHG16B flag, 3-194	4-204
CMPXCHG8B flag, 3-197	CVTDQ2PD instruction, 3-214
CPL qualified debug store, 3-194	CVTDQ2PS instruction, 3-220
debug extensions, CR4.DE, 3-197	CVTPD2DQ instruction, 3-223
debug store supported, 3-198	CVTPD2PI instruction, 3-226
deterministic cache parameters leaf, 3-182,	CVTPD2PS instruction, 3-229
3-185, 3-186, 3-187	CVTPI2PD instruction, 3-232
extended function information, 3-187	CVTPI2PS instruction, 3-235
feature information, 3-196	CVTPS2DQ instruction, 3-238
FPU on-chip, 3-197	CVTPS2PD instruction, 3-241
FSAVE flag, 3-198	CVTPS2PI instruction, 3-244
FXRSTOR flag, 3-198	CVTSD2SI instruction, 3-247
HT technology flag, 3-199	CVTSD2SS instruction, 3-250
IA-32e mode available, 3-188	CVTSI2SD instruction, 3-253
input limits for EAX, 3-189	CVTSI2SS instruction, 3-256
L1 Context ID, 3-194	CVTSS2SD instruction, 3-259
local APIC physical ID, 3-192	CVTSS2SI instruction, 3-262
machine check architecture, 3-198	CVTTPD2DQ instruction, 3-265
machine check exception, 3-197	CVTTPD2PI instruction, 3-265, 3-268
memory type range registers, 3-197	CVTTPS2DQ instruction, 3-271
MONITOR feature information, 3-204	CVTTPS2PI instruction, 3-274
MONITOR/MWAIT flag, 3-193, 3-194	CVTTSD2SI instruction, 3-277
MONITOR/MWAIT leaf, 3-183, 3-184, 3-185	CVTTSS2SI instruction, 3-280
MWAIT feature information, 3-204	CWD instruction, 3-283
page attribute table, 3-198	CWDE instruction, 3-123
page size extension, 3-197	C/C++ compiler intrinsics
performance monitoring features, 3-204	compiler functional equivalents, C-1
physical address bits, 3-189	composite, C-16
physical address extension, 3-197	description of, 3-11
power management, 3-204	lists of, C-1
processor brand index, 3-192, 3-205	simple, C-2
processor brand string, 3-188, 3-205	5p.:6, 0 =
processor serial number, 3-182, 3-198	_
processor type field, 3-191	D
PTE global bit, 3-198	D (default operation size) flag, segment descriptor,
RDMSR flag, 3-197	4-204, 4-210, 4-296
returned in EBX, 3-192	DAA instruction, 3-285
returned in ECX & EDX, 3-192	DAS instruction, 3-287
self snoop, 3-199	Debug registers, moving value to and from, 3-649
···	*

DEC instruction, 3-289, 3-590	FBLD instruction, 3-332
Denormalized finite number, 3-449	FBSTP instruction, 3-334
Detecting and Enabling SMX	FCHS instruction, 3-337
level 2, 6-2	FCLEX instruction, 3-339
DF (direction) flag, EFLAGS register, 3-125, 3-156,	FCMOVcc instructions, 3-341
3-506, 3-593, 3-716, 4-19, 4-385, 4-431	FCOM instruction, 3-343
Displacement (operand addressing), 2-4	FCOMI instruction, 3-347
DIV instruction, 3-292	FCOMIP instruction, 3-347
Divide error exception (#DE), 3-292	FCOMP instruction, 3-343
DIVPD instruction, 3-296	FCOMPP instruction, 3-343
DIVPS instruction, 3-299	FCOS instruction, 3-350
DIVSD instruction, 3-302	FDECSTP instruction, 3-352
DIVSS instruction, 3-305	FDIV instruction, 3-354
DS register, 3-155, 3-570, 3-592, 3-715, 4-18	FDIVP instruction, 3-354
	FDIVR instruction, 3-358
_	FDIVRP instruction, 3-358
E	Feature information, processor, 3-180
EDI register, 4-384, 4-431, 4-437	FFREE instruction, 3-362
Effective address, 3-576	FIADD instruction, 3-328
EFLAGS register	FICOM instruction, 3-363
condition codes, 3-138, 3-341, 3-347	FICOMP instruction, 3-363
flags affected by instructions, 3-14	FIDIV instruction, 3-354
popping, 4-214	FIDIVR instruction, 3-358
popping on return from interrupt, 3-531	FILD instruction, 3-366
pushing, 4-303	FIMUL instruction, 3-389
pushing on interrupts, 3-512	FINCSTP instruction, 3-368
saving, 4-371	FINIT instruction, 3-370
status flags, 3-141, 3-546, 4-391, 4-473	FINIT/FNINIT instructions, 3-411
EIP register, 3-106, 3-512, 3-531, 3-550	FIST instruction, 3-372
EMMS instruction, 3-315	FISTP instruction, 3-372
Encodings	FISTTP instruction, 3-376
See machine instructions, opcodes	FISUB instruction, 3-436
ENTER instruction, 3-317	FISUBR instruction, 3-440
GETSEC, 6-4, 6-12	FLD instruction, 3-379
Error numbers	FLD1 instruction, 3-382
VM-instruction error field, 5-34	FLDCW instruction, 3-384
ES register, 3-570, 4-18, 4-384, 4-437	FLDENV instruction, 3-386
ESI register, 3-155, 3-592, 3-593, 3-715, 4-18, 4-431	FLDL2E instruction, 3-382
ESP register, 3-106, 4-204	FLDL2T instruction, 3-382
Exceptions POLIND sange exceeded (#PP) 3.84	FLDLG2 instruction, 3-382
BOUND range exceeded (#BR), 3-84 notation, 1-6	FLDLN2 instruction, 3-382
overflow exception (#OF), 3-512	FLDPI instruction, 3-382
returning from, 3-531	FLDZ instruction, 3-382
GETSEC, 6-4, 6-6	Floating point instructions
Exponent, extracting from floating-point number,	machine encodings, B-92
3-467	Floating-point exceptions
Extract exponent and significand, x87 FPU operation	SSE and SSE2 SIMD, 3-17
, 3-467	x87 FPU, 3-17
, 3-401	Flushing
	caches, 3-527, 4-499
F	TLB entry, 3-529
F2XM1 instruction, 3-324, 3-467	FMUL instruction, 3-389
FABS instruction, 3-326	FMULP instruction, 3-389
FADD instruction, 3-328	FNCLEX instruction, 3-339
FADDP instruction, 3-328	FNINIT instruction, 3-370
Far pointer, loading, 3-570	FNOP instruction, 3-393
Far return, RET instruction, 4-338	FNSAVE instruction, 3-411 ENSTCW instruction, 3-427
	1 19 3 1 1 19 11 1 1 1 1 1 1 1 1 1 3 <b>-4</b> //

FNSTENV instruction, 3-386, 3-430	HADDPS instruction, 3-477
FNSTSW instruction, 3-433	Hexadecimal numbers, 1-6
FPATAN instruction, 3-394	HLT instruction, 3-481
FPREM instruction, 3-397	HSUBPD instruction, 3-483
FPREM1 instruction, 3-400	HSUBPS instruction, 3-487
FPTAN instruction, 3-403	Hyper-Threading Technology
FRNDINT instruction, 3-406	CPUID flag, 3-199
FRSTOR instruction, 3-408	ci old hag, o 100
FS register, 3-570	
FSAVE instruction, 3-411	I
FSAVE/FNSAVE instructions, 3-408	IA-32e mode
	CPUID flag, 3-188
FSCALE instruction, 3-415	introduction, 2-9
FSIN instruction, 3-417	see 64-bit mode
FSINCOS instruction, 3-419	see compatibility mode
FSQRT instruction, 3-422	IA32_SYSENTER_CS MSR, 4-465, 4-468, 4-469
FST instruction, 3-424	IA32_SYSENTER_EIP MSR, 4-465
FSTCW instruction, 3-427	IA32_SYSENTER_ESP MSR, 4-465
FSTENV instruction, 3-430	IDIV instruction, 3-491
FSTP instruction, 3-424	IDT (interrupt descriptor table), 3-513, 3-582
FSTSW instruction, 3-433	
FSUB instruction, 3-436	IDTR (interrupt descriptor table register), 3-582, 4-410
FSUBP instruction, 3-436	
FSUBR instruction, 3-440	IF (interrupt enable) flag, EFLAGS register, 3-128, 4-432
FSUBRP instruction, 3-440	
FTST instruction, 3-444	Immediate operands, 2-4
FUCOM instruction, 3-446	IMUL instruction, 3-495
FUCOMI instruction, 3-347	IN instruction, 3-500
FUCOMIP instruction, 3-347	INC instruction, 3-502, 3-590
FUCOMP instruction, 3-446	Index (operand addressing), 2-4
FUCOMPP instruction, 3-446	Initialization x87 FPU, 3-370
FXAM instruction, 3-449	initiating logical processor, 6-4, 6-6, 6-12, 6-13, 6-27,
FXCH instruction, 3-451	6-28
FXRSTOR instruction, 3-453	INS instruction, 3-505, 4-335
CPUID flag, 3-198	INSB instruction, 3-505
FXSAVE instruction, 3-456, 4-509, 4-520, 4-525,	INSD instruction, 3-505
4-529	instruction encodings, B-88, B-96
CPUID flag, 3-198	Instruction format
FXTRACT instruction, 3-415, 3-467	base field, 2-4
FYL2X instruction, 3-469	description of reference information, 3-1
FYL2XP1 instruction, 3-471	displacement, 2-4
	immediate, 2-4
G	index field, 2-4
	Mod field, 2-4
GDT (global descriptor table), 3-582, 3-585	ModR/M byte, 2-4
GDTR (global descriptor table register), 3-582, 4-395	opcode, 2-3
General-purpose instructions	operands, 1-5
64-bit encodings, B-24	prefixes, 2-1
non-64-bit encodings, B-9	reg/opcode field, 2-4
General-purpose registers	r/m field, 2-4
moving value to and from, 3-641	scale field, 2-4
popping all, 4-210	SIB byte, 2-4
pushing all, 4-300	See also: machine instructions, opcodes
GETSEC, 6-1, 6-3, 6-7	Instruction reference, nomenclature, 3-1
GS register, 3-570	Instruction set, reference, 3-1
	INSW instruction, 3-505
H	INT 3 instruction, 3-512
HADDPD instruction, 3-473, 3-474	Integer, storing, x87 FPU data type, 3-372
11/1001 D 11101 dedoin, 0-710, 0-717	Intel 64 architecture

definition of, 1-3	LIDT instruction, 3-582
instruction format, 2-1	LLDT instruction, 3-585
relation to IA-32, 1-3	LMSW instruction, 3-588
Intel developer link, 1-9	Load effective address operation, 3-576
Intel NetBurst microarchitecture, 1-2	LOCK prefix, 3-35, 3-38, 3-61, 3-96, 3-99, 3-102,
Intel software network link, 1-9	3-168, 3-289, 3-502, 3-590, 4-2, 4-7,
Intel VTune Performance Analyzer	4-10, 4-381, 4-444, 4-503, 4-507, 4-514
related information, 1-9	Locking operation, 3-590
Intel Xeon processor, 1-1	LODS instruction, 3-592, 4-335
Intel® Trusted Execution Technology, 6-4	LODSB instruction, 3-592
Inter-privilege level	LODSD instruction, 3-592
call, CALL instruction, 3-106	LODSQ instruction, 3-592
return, RET instruction, 4-338	LODSW instruction, 3-592
Interrupts	Log epsilon, x87 FPU operation, 3-469
interrupt vector 4, 3-512	Log (base 2), x87 FPU operation, 3-471
returning from, 3-531	LOOPs instructions, 3-596
software, 3-512 INTn instruction, 3-512	LOOPcc instructions, 3-596
· · · · · · · · · · · · · · · · · · ·	LSL instruction, 3-599
INTO instruction, 3-512 Intrinsics	LSS instruction, 3-570 LTR instruction, 3-603
compiler functional equivalents, C-1	CTK IIISti detion, 5-005
composite, C-16	
description of, 3-11	M
list of, C-1	Machine check architecture
simple, C-2	CPUID flag, 3-198
INVD instruction, 3-527	description, 3-198
INVLPG instruction, 3-529	Machine instructions
IOPL (I/O privilege level) field, EFLAGS register, 3-128,	64-bit mode, B-1
4-303, 4-432	condition test (tttn) field, B-7
IRET instruction, 3-531	direction bit (d) field, B-8
IRETD instruction, 3-531	floating-point instruction encodings, B-92
	general description, B-1
1	general-purpose encodings, B-9–B-53
J	legacy prefixes, B-2
Jcc instructions, 3-542	MMX encodings, B-55–B-58
JMP instruction, 3-549	opcode fields, B-2
Jump operation, 3-549	operand size (w) bit, B-5
	P6 family encodings, B-59
L	Pentium processor family encodings, B-53
L1 Context ID, 3-194	reg (reg) field, B-3, B-4
LAHF instruction, 3-559	REX prefixes, B-2 segment register (sreg) field, B-6
LAR instruction, 3-561	sign-extend (s) bit, B-5
Last branch	SIMD 64-bit encodings, B-54
interrupt & exception recording	special 64-bit encodings, B-92
description of, 4-350	special 64-bit effectings, B-32 special fields, B-2
LDDQU instruction, 3-565	special helds, B 2 special-purpose register (eee) field, B-6
LDMXCSR instruction, 3-568	SSE encodings, B-60–B-69
LDS instruction, 3-570	SSE2 encodings, B-69–B-85
LDT (local descriptor table), 3-585	SSE3 encodings, B-86–B-88
LDTR (local descriptor table register), 3-585, 4-413	SSSE3 encodings, B-88–B-92
LEA instruction, 3-576	VMX encodings, B-112–B-113, B-114–??
LEAVE instruction, 3-579	See also: opcodes
LES instruction, 3-570	Machine status word, CRO register, 3-588, 4-415
LFENCE instruction, 3-581	MASKMOVDQU instruction, 3-606
LFS instruction, 3-570	MASKMOVQ instruction, 3-609
LGDT instruction, 3-582	MAXPD instruction, 3-612
LGS instruction, 3-570	MAXPS instruction, 3-615

MAXSD instruction, 3-618	MOVUPD instruction, 3-734
MAXSS instruction, 3-621	MOVUPS instruction, 3-737
measured environment, 6-1	MOVZX instruction, 3-740
Measured Launched Environment, 6-1, 6-33	MSRs (model specific registers)
MFENCE instruction, 3-624	reading, 4-322
MINPD instruction, 3-625	MUL instruction, 3-30, 3-746
MINPS instruction, 3-628	MULPD instruction, 3-749
MINSD instruction, 3-631	MULPS instruction, 3-752
MINSS instruction, 3-634	MULSD instruction, 3-755
MLE, 6-1	MULSS instruction, 3-758
MMX instructions	Multi-byte no operation, 4-5, B-16
CPUID flag for technology, 3-198	MVMM, 6-1, 6-6, 6-7, 6-48
encodings, B-55	MWAIT instruction, 3-761
Mod field, instruction format, 2-4	CPUID flag, 3-194
Model & family information, 3-203	feature data, 3-204
ModR/M byte, 2-4	
16-bit addressing forms, 2-6	NI.
32-bit addressing forms of, 2-7	N
description of, 2-4	NaN. testing for, 3-444
MONITOR instruction, 3-637	Near
CPUID flag, 3-194	return, RET instruction, 4-338
feature data, 3-204	NEG instruction, 3-590, 4-2
MOV instruction, 3-640	NetBurst microarchitecture (see Intel NetBurst
MOV instruction (control registers), 3-646	microarchitecture)
	No operation, 4-5, B-16
MOV instruction (debug registers), 3-649, 3-657	Nomenclature, used in instruction reference pages,
MOVAPD instruction, 3-651	3-1
MOVAPS instruction, 3-654	NOP instruction, 4-5
MOVD instruction, 3-657	NOT instruction, 3-590, 4-7
MOVDDUP instruction, 3-664	Notation Notation
MOVDQ2Q instruction, 3-672	
MOVDQA instruction, 3-667	bit and byte order, 1-4
MOVDQU instruction, 3-669	exceptions, 1-6
MOVHLPS instruction, 3-674	hexadecimal and binary numbers, 1-6
MOVHPD instruction, 3-676	instruction operands, 1-5
MOVHPS instruction, 3-679	reserved bits, 1-5
MOVLHP instruction, 3-682	segmented addressing, 1-6
MOVLHPS instruction, 3-682	Notational conventions, 1-4
MOVLPD instruction, 3-684	NT (nested task) flag, EFLAGS register, 3-531
MOVLPS instruction, 3-686	
MOVMSKPD instruction, 3-689	0
MOVMSKPS instruction, 3-691	
MOVNTDQ instruction, 3-696	OF (carry) flag, EFLAGS register, 3-496
MOVNTI instruction, 3-699	OF (overflow) flag, EFLAGS register, 3-37, 3-512,
MOVNTPD instruction, 3-701	3-746, 4-381, 4-398, 4-401, 4-444
MOVNTPS instruction, 3-704	Opcode format, 2-3
MOVNTQ instruction, 3-707	Opcodes
MOVQ instruction, 3-657, 3-710	addressing method codes for, A-2
	extensions, A-20
MOVQ2DQ instruction, 3-713	extensions tables, A-21
MOVS instruction, 3-715, 4-335	group numbers, A-20
MOVSB instruction, 3-715	integers
MOVSD instruction, 3-715, 3-720	one-byte opcodes, A-10
MOVSHDUP instruction, 3-723	two-byte opcodes, A-10
MOVSLDUP instruction, 3-726	key to abbreviations, A-2
MOVSQ instruction, 3-715	look-up examples, A-4, A-20, A-23
MOVSS instruction, 3-729	ModR/M byte, A-20
MOVSW instruction, 3-715	one-byte opcodes, A-4, A-10
MOVSX instruction, 3-732	
MOVSXD instruction, 3-732	opcode maps, A-1

operand type codes for, A-3	machine encodings, B-53
register codes for, A-4	Performance-monitoring counters
superscripts in tables, A-7	CPUID inquiry for, 3-204
two-byte opcodes, A-5, A-6, A-12	PEXTRW instruction, 4-103
VMX instructions, B-112, B-114	PHADDD instruction, 4-107
x87 ESC instruction opcodes, A-23	PHADDSW instruction, 4-110
	PHADDW instruction, 4-110
Operands, 1-5	
OR instruction, 3-590, 4-9	PHSUBD instruction, 4-116
ORPD instruction, 4-12	PHSUBSW instruction, 4-119
ORPS instruction, 4-14	PHSUBW instruction, 4-116
OUT instruction, 4-16	Pi, 3-382
OUTS instruction, 4-18, 4-335	PINSRW instruction, 4-125, 4-242
OUTSB instruction, 4-18	PMADDUBSW instruction, 4-128
OUTSD instruction, 4-18	PMADDUDSW instruction, 4-128
OUTSW instruction, 4-18	PMADDWD instruction, 4-131
Overflow exception (#OF), 3-512	PMAXSW instruction, 4-141
	PMAXUB instruction, 4-144
D	PMINSW instruction, 4-159
P	PMINUB instruction, 4-162
P6 family processors	PMOVMSKB instruction, 4-165
description of, 1-1	PMULHRSW instruction, 4-184
machine encodings, B-59	PMULHUW instruction, 4-187
PABSB instruction, 4-23	PMULHW instruction, 4-191
PABSD instruction, 4-23	PMULLW instruction, 4-196
PABSW instruction, 4-23	PMULUDQ instruction, 4-190
PACKSSDW instruction, 4-27	POP instruction, 4-203
PACKSSWB instruction, 4-27	·
PACKUSWB instruction, 4-35	POPA instruction, 4-210
PADDB instruction, 4-39	POPAD instruction, 4-210
PADDD instruction, 4-39	POPF instruction, 4-214
	POPFD instruction, 4-214
PADDQ instruction, 4-43	POPFQ instruction, 4-214
PADDSB instruction, 4-46	POR instruction, 4-218
PADDSW instruction, 4-46	PREFETCHh instruction, 4-221
PADDUSB instruction, 4-50	Prefixes
PADDUSW instruction, 4-50	Address-size override prefix, 2-2
PADDW instruction, 4-39	Branch hints, 2-2
PALIGNR instruction, 4-54	branch hints, 2-2
PAND instruction, 4-57	instruction, description of, 2-1
PANDN instruction, 4-60	legacy prefix encodings, B-2
GETSEC, 6-5	LOCK, 2-2, 3-590
PAUSE instruction, 4-63	Operand-size override prefix, 2-2
PAVGB instruction, 4-64	REP or REPE/REPZ, 2-2
PAVGW instruction, 4-64	REPNE/REPNZ, 2-2
PCE flag, CR4 register, 4-326	REP/REPE/REPZ/REPNE/REPNZ, 4-333
PCMPEQB instruction, 4-75	REX prefix encodings, B-2
PCMPEQD instruction, 4-75	Segment override prefixes, 2-2
PCMPEQW instruction, 4-75	PSADBW instruction, 4-223
PCMPGTB instruction, 4-93	Pseudo-functions
PCMPGTD instruction, 4-93	VMfail, 5-2
PCMPGTW instruction, 4-93	•
PE (protection enable) flag, CRO register, 3-588	VMfailInvalid, 5-2
Pending break enable, 3-199	VMfailValid, 5-2
Pentium 4 processor, 1-1	VMsucceed, 5-2
	PSHUFB instruction, 4-227
Pentium II processor, 1-2	PSHUFD instruction, 4-231
Pentium III processor, 1-2	PSHUFHW instruction, 4-234
Pentium Pro processor, 1-2	PSHUFLW instruction, 4-237
Pentium processor, 1-1	PSHUFW instruction, 4-240
Pentium processor family processors	PSIGNR instruction 4-242

PSIGND instruction, 4-242	addressing modes, 2-11
PSIGNW instruction, 4-242	and INC/DEC, 2-10
PSLLD instruction, 4-249	encodings, 2-10, B-2
PSLLDQ instruction, 4-247	field names, 2-11
PSLLQ instruction, 4-249	ModR/M byte, 2-10
PSLLW instruction, 4-249	overview, 2-9
	· · · · · · · · · · · · · · · · · · ·
PSRAD instruction, 4-254	REX.B, 2-10
PSRAW instruction, 4-254	REX.R, 2-10
PSRLD instruction, 4-261	REX.W, 2-10
PSRLDQ instruction, 4-259	special encodings, 2-13
PSRLQ instruction, 4-261	RIP-relative addressing, 2-14
PSRLW instruction, 4-261	ROL instruction, 4-309
PSUBB instruction, 4-266	ROR instruction, 4-309
PSUBD instruction, 4-266	Rounding
PSUBQ instruction, 4-270	modes, floating-point operations, 4-351
PSUBSB instruction, 4-273	Rounding control (RC) field
PSUBSW instruction, 4-273	MXCSR register, 4-351
PSUBUSB instruction, 4-277	x87 FPU control word, 4-351
PSUBUSW instruction, 4-277	Rounding, round to integer, x87 FPU operation, 3-406
PSUBW instruction, 4-266	RPL field, 3-71
PUNPCKHBW instruction, 4-284	RSM instruction, 4-363
PUNPCKHDQ instruction, 4-284	RSQRTPS instruction, 4-365
PUNPCKHQDQ instruction, 4-284	RSQRTSS instruction, 4-368
PUNPCKHWD instruction, 4-284	R/m field, instruction format, 2-4
	K/III Held, IIIStruction format, 2-4
PUNPCKLBW instruction, 4-290	
PUNPCKLDQ instruction, 4-290	S
PUNPCKLQDQ instruction, 4-290	
PUNPCKLWD instruction, 4-290	Safer Mode Extensions, 6-1
PUSH instruction, 4-295	SAHF instruction, 4-371
PUSHA instruction, 4-300	SAL instruction, 4-373
PUSHAD instruction, 4-300	SAR instruction, 4-373
PUSHF instruction, 4-303	SBB instruction, 3-590, 4-380
PUSHFD instruction, 4-303	Scale (operand addressing), 2-4
	Scale, x87 FPU operation, 3-415
PXOR instruction, 4-306	Scan string instructions, 4-384
	SCAS instruction, 4-335, 4-384
R	
	SCASB instruction, 4-384
RC (rounding control) field, x87 FPU control word,	SCASD instruction, 4-384
3-373, 3-382, 3-424	SCASW instruction, 4-384
RCL instruction, 4-309	Segment
RCPPS instruction, 4-316	descriptor, segment limit, 3-599
RCPSS instruction, 4-319	limit, 3-599
RCR instruction, 4-309	registers, moving values to and from, 3-641
RDMSR instruction, 4-322, 4-326, 4-329	selector, RPL field, 3-71
CPUID flag, 3-197	Segmented addressing, 1-6
RDPMC instruction, 4-324	Self Snoop, 3-199
RDTSC instruction, 4-329, 4-331	GETSEC, 6-2, 6-4, 6-6
Reg/opcode field, instruction format, 2-4	SENTER sleep state, 6-12
Related literature, 1-8	SETcc instructions, 4-389
Remainder, x87 FPU operation, 3-400	GETSEC, 6-5
REP/REPE/REPZ/REPNE/REPNZ prefixes, 3-156,	SF (sign) flag, EFLAGS register, 3-37
3-506, 4-19, 4-333	SFENCE instruction, 4-394
Reserved	SGDT instruction, 4-395
use of reserved bits, 1-5	SHAF instruction, 4-371
Responding logical processor, 6-6	Shift instructions, 4-373
responding logical processor, 6-4, 6-5, 6-6	SHL instruction, 4-373
RET instruction, 4-338	SHLD instruction, 4-398
REX prefixes	SHR instruction, 4-373

SHRD instruction, 4-401 SHUFPD instruction, 4-404 SHUFPS instruction, 4-407 SIB byte, 2-4 32-bit addressing forms of, 2-8 description of, 2-4 SIDT instruction, 4-395, 4-410 Significand, extracting from floating-point number, 3-467 SIMD floating-point exceptions, unmasking, effects of , 3-568 Sine, x87 FPU operation, 3-417, 3-419 SINIT, 6-5 SLDT instruction, 4-413	String instructions, 3-154, 3-505, 3-592, 3-715, 4-18, 4-384, 4-437 SUB instruction, 3-32, 3-287, 3-590, 4-443 SUBPD instruction, 4-446 SUBSS instruction, 4-455 Summary table notation, 3-7 SWAPGS instruction, 4-458 SYSCALL instruction, 4-460 SYSENTER instruction, 4-462 CPUID flag, 3-197 SYSEXIT instruction, 4-466 CPUID flag, 3-197 SYSRET instruction, 4-470
GETSEC, 6-5	T
SMSW instruction, 4-415	
SpeedStep technology, 3-194 SQRTPD instruction, 4-418 SQRTPS instruction, 4-421 SQRTSD instruction, 4-424 SQRTSS instruction, 4-427	Tangent, x87 FPU operation, 3-403 Task register loading, 3-603 storing, 4-441 Task switch
Square root, Fx87 PU operation, 3-422	CALL instruction, 3-106
SS register, 3-570, 3-642, 4-204	return from nested task, IRET instruction, 3-531
SSE extensions	TEST instruction, 4-472
cacheability instruction encodings, B-68	Thermal Monitor
CPUID flag, 3-199	CPUID flag, 3-199
floating-point encodings, B-60	Thermal Monitor 2, 3-194 CPUID flag, 3-194
instruction encodings, B-60	Time Stamp Counter, 3-197
integer instruction encodings, B-67	Time-stamp counter, reading, 4-329, 4-331
memory ordering encodings, B-68 SSE2 extensions	TLB entry, invalidating (flushing), 3-529
cacheability instruction encodings, B-85	Trusted Platform Module, 6-6
CPUID flag, 3-199	TS (task switched) flag, CRO register, 3-131
floating-point encodings, B-70	TSD flag, CR4 register, 4-329, 4-331
integer instruction encodings, B-78	TSS, relationship to task register, 4-441
SSE3	,
CPUID flag, 3-193	U
SSE3 extensions	
CPUID flag, 3-193	UCOMISD instruction, 4-475
event mgmt instruction encodings, B-87	UCOMISS instruction, 4-478
floating-point instruction encodings, B-86	UD2 instruction, 4-481
integer instruction encodings, B-87, B-88	Undefined, format opcodes, 3-444 Unordered values, 3-343, 3-444, 3-446
SSSE3 extensions, B-88, B-96	UNPCKHPD instruction, 4-482
CPUID flag, 3-194	UNPCKHPS instruction, 4-485
Stack, pushing values on, 4-296	UNPCKLPD instruction, 4-488
Status flags, EFLAGS register, 3-138, 3-141, 3-341,	UNPCKLPS instruction, 4-491
3-347, 3-546, 4-391, 4-473	ora erei sinsu dedon, 4 40 i
STC instruction, 4-430	
STD instruction, 4-431	V
Stepping information, 3-203	VERR instruction, 4-494
STI instruction, 4-432	Version information, processor, 3-180
STMXCSR instruction, 4-435 STOS instruction, 4-335, 4-437	VERW instruction, 4-494
STOSB instruction, 4-437	Virtual Machine Monitor, 6-1
STOSD instruction, 4-437	VM (virtual 8086 mode) flag, EFLAGS register, 3-531
STOSQ instruction, 4-437	VMCALL instruction, 5-1
STOSW instruction, 4-437	VMCLEAR instruction, 5-1
STR instruction, 4-441	VMCS
•	error numbers, 5-34

VM-instruction error field, 5-34 VMLAUNCH instruction, 5-1 VMM, 6-1 VMPTRLD instruction, 5-1 VMPTRST instruction, 5-1 Z VMREAD instruction, 5-1 VMRESUME instruction, 5-1, 5-2 VMWRITE instruction, 5-1 VMXOFF instruction, 5-1 VMXON instruction, 5-2 W WAIT/FWAIT instructions, 4-497 GETSEC, 6-6 WBINVD instruction, 4-499 WBINVD/INVD bit, 3-183 Write-back and invalidate caches, 4-499 WRMSR instruction, 4-501 CPUID flag, 3-197 X x87 FPU checking for pending x87 FPU exceptions, 4-497 constants, 3-382 initialization, 3-370 instruction opcodes, A-23 x87 FPU control word loading, 3-384, 3-386 RC field, 3-373, 3-382, 3-424 restorina. 3-408 saving, 3-411, 3-430 storing, 3-427 x87 FPU data pointer, 3-386, 3-408, 3-411, 3-430 x87 FPU instruction pointer, 3-386, 3-408, 3-411, 3-430 x87 FPU last opcode, 3-386, 3-408, 3-411, 3-430 x87 FPU status word condition code flags, 3-343, 3-363, 3-444, 3-446, 3-449 loading, 3-386 restoring, 3-408 saving, 3-411, 3-430, 3-433 TOP field, 3-368 x87 FPU flags affected by instructions, 3-14 x87 FPU tag word, 3-386, 3-408, 3-411, 3-430 XADD instruction, 3-590, 4-503 XCHG instruction, 3-590, 4-506 XFEATURE\_ENABLED\_MASK, 4-509, 4-520, 4-521, 4-525, 4-529, 4-530 XGETBV, 4-509, 4-520, B-59 XLAB instruction, 4-511 XLAT instruction, 4-511 XOR instruction, 3-590, 4-513 XORPD instruction, 4-516 XORPS instruction, 4-518

XSAVE, 4-509, 4-520, 4-521, 4-522, 4-523, 4-524, 4-525, 4-527, 4-528, 4-529, 4-530, B-59 XSETBV, 4-529, B-59

ZF (zero) flag, EFLAGS register, 3-168, 3-561, 3-596, 3-599, 4-335, 4-494

XRSTOR, 4-525, B-59