## Xenomai POSIX skin API 2.5.94

Generated by Doxygen 1.7.1

Sun Oct 23 2011 17:53:12

# **Contents**

1	Mod	dule In	dex		1
	1.1	Modu	lles		1
2	File	Index			3
	2.1	File L	ist		3
3	Mod	dule Do	ocumenta	tion	5
	3.1	Threa	d cancella	ntion	5
		3.1.1	Detailed	Description	6
		3.1.2	Function	n Documentation	6
			3.1.2.1	pthread_cancel	6
			3.1.2.2	pthread_cleanup_pop	6
			3.1.2.3	pthread_cleanup_push	7
			3.1.2.4	pthread_setcancelstate	8
			3.1.2.5	pthread_setcanceltype	8
			3.1.2.6	pthread_testcancel	9
	3.2	Clock	s and time	ers services.	9
		3.2.1	Detailed	Description	10
		3.2.2	Function	n Documentation	11
			3.2.2.1	clock_getres	11
			3.2.2.2	clock_gettime	11
			3.2.2.3	clock_nanosleep	12
			3.2.2.4	clock_settime	13
			3.2.2.5	do_clock_host_realtime	13
			3.2.2.6	nanosleep	14
			3.2.2.7	timer_create	14
			3.2.2.8	timer_delete	15
			3.2.2.9	timer_getoverrun	15
			3 2 2 10	timer gettime	16

ii CONTENTS

		3.2.2.11	timer_settime	16
3.3	Condi	ition varia	bles services.	17
	3.3.1	Detailed	Description	18
	3.3.2	Function	Documentation	19
		3.3.2.1	pthread_cond_broadcast	19
		3.3.2.2	pthread_cond_destroy	19
		3.3.2.3	pthread_cond_init	20
		3.3.2.4	pthread_cond_signal	20
		3.3.2.5	pthread_cond_timedwait	21
		3.3.2.6	pthread_cond_wait	21
		3.3.2.7	pthread_condattr_destroy	22
		3.3.2.8	pthread_condattr_getclock	23
		3.3.2.9	pthread_condattr_getpshared	23
		3.3.2.10	pthread_condattr_init	24
		3.3.2.11	pthread_condattr_setclock	24
		3.3.2.12	pthread_condattr_setpshared	25
3.4	Interr	uptions m	nanagement services.	25
	3.4.1	Detailed	Description	26
	3.4.2	Function	Documentation	26
		3.4.2.1	pthread_intr_attach_np	26
		3.4.2.2	pthread_intr_control_np	27
		3.4.2.3	pthread_intr_detach_np	28
		3.4.2.4	pthread_intr_wait_np	28
3.5	POSIX	skin		29
	3.5.1	Detailed	Description	30
3.6	Messa	ige queue	s services.	31
	3.6.1	Detailed	Description	32
	3.6.2	Function	Documentation	32
		3.6.2.1	mq_close	32
		3.6.2.2	mq_getattr	32
		3.6.2.3	mq_notify	33
		3.6.2.4	mq_open	34
		3.6.2.5	mq_receive	35
		3.6.2.6	mq_send	36
		3.6.2.7	mq_setattr	36
		3.6.2.8	mq_timedreceive	37

CONTENTS

		3.6.2.9	$mq\_timedsend \ . \ . \ . \ . \ . \ . \ . \ . \ . \ $	38
		3.6.2.10	$mq\_unlink \ \dots $	38
3.7	Mutex	services.		39
	3.7.1	Detailed	Description	40
	3.7.2	Function	Documentation	41
		3.7.2.1	pthread_mutex_destroy	41
		3.7.2.2	pthread_mutex_init	41
		3.7.2.3	pthread_mutex_lock	42
		3.7.2.4	pthread_mutex_timedlock	42
		3.7.2.5	pthread_mutex_trylock	43
		3.7.2.6	pthread_mutex_unlock	44
		3.7.2.7	pthread_mutexattr_destroy	44
		3.7.2.8	pthread_mutexattr_getprotocol	45
		3.7.2.9	pthread_mutexattr_getpshared	45
		3.7.2.10	pthread_mutexattr_gettype	46
		3.7.2.11	pthread_mutexattr_init	46
		3.7.2.12	pthread_mutexattr_setprotocol	47
		3.7.2.13	pthread_mutexattr_setpshared	47
		3.7.2.14	pthread_mutexattr_settype	48
3.8	Threa	ds schedu	lling services.	48
	3.8.1	Detailed	Description	49
	3.8.2	Function	Documentation	49
		3.8.2.1	pthread_getschedparam	49
		3.8.2.2	pthread_getschedparam_ex	50
		3.8.2.3	pthread_setschedparam	50
		3.8.2.4	pthread_setschedparam_ex	51
		3.8.2.5	sched_get_priority_max	52
		3.8.2.6	sched_get_priority_min	52
		3.8.2.7	sched_rr_get_interval	53
		3.8.2.8	sched_yield	53
3.9	Semap	ohores ser	vices	53
	3.9.1	Detailed	Description	54
	3.9.2	Function	Documentation	55
		3.9.2.1	sem_close	55
		3.9.2.2	sem_destroy	55
		3.9.2.3	sem_getvalue	56

iv CONTENTS

	3.9.2.4	sem_init	56
	3.9.2.5	sem_open	. 57
	3.9.2.6	sem_post	. 57
	3.9.2.7	sem_timedwait	58
	3.9.2.8	sem_trywait	58
	3.9.2.9	sem_unlink	. 59
	3.9.2.10	sem_wait	. 59
3.10 Shared	d memory	y services	60
3.10.1	Detailed	Description	61
3.10.2	Function	n Documentation	61
	3.10.2.1	close	61
	3.10.2.2	ftruncate	62
	3.10.2.3	mmap	62
	3.10.2.4	munmap	63
	3.10.2.5	shm_open	64
	3.10.2.6	shm_unlink	65
3.11 Signal	s services	3	66
3.11.1	Detailed	Description	67
3.11.2	Function	n Documentation	67
	3.11.2.1	pthread_kill	67
	3.11.2.2	pthread_sigmask	68
	3.11.2.3	pthread_sigqueue_np	69
	3.11.2.4	sigaction	69
	3.11.2.5	sigaddset	71
	3.11.2.6	sigdelset	71
	3.11.2.7	sigemptyset	71
	3.11.2.8	sigfillset	72
	3.11.2.9	sigismember	72
	3.11.2.10	sigpending	72
	3.11.2.11	sigtimedwait	73
	3.11.2.12	2 sigwait	74
	3.11.2.13	3 sigwaitinfo	74
3.12 Thread	ds manag	gement services.	75
3.12.1	Detailed	Description	. 76
3.12.2	Function	n Documentation	76
	3.12.2.1	pthread_create	76

CONTENTS

3	3.12.2.2	pthread_detach	77
3	3.12.2.3	pthread_equal	78
3	3.12.2.4	pthread_exit	78
3	3.12.2.5	pthread_join	78
3	3.12.2.6	pthread_make_periodic_np	79
3	3.12.2.7	pthread_once	80
3	3.12.2.8	pthread_self	80
3	3.12.2.9	pthread_set_mode_np	80
3	3.12.2.10	pthread_set_name_np	81
3	3.12.2.11	pthread_wait_np	81
3.13 Thread of	creation	attributes	82
3.13.1 Г	Detailed	Description	84
3.13.2 F	unction	Documentation	84
3	3.13.2.1	pthread_attr_destroy	84
3	3.13.2.2	pthread_attr_getaffinity_np	84
3	3.13.2.3	pthread_attr_getdetachstate	85
3	3.13.2.4	pthread_attr_getfp_np	85
3	3.13.2.5	pthread_attr_getinheritsched	86
3	3.13.2.6	pthread_attr_getname_np	86
3	3.13.2.7	pthread_attr_getschedparam	87
3	3.13.2.8	pthread_attr_getschedparam_ex	87
3	3.13.2.9	pthread_attr_getschedpolicy	88
		pthread_attr_getscope	
3	3.13.2.11	pthread_attr_getstacksize	89
3	3.13.2.12	pthread_attr_init	89
3	3.13.2.13	pthread_attr_setaffinity_np	90
3	3.13.2.14	pthread_attr_setdetachstate	90
		pthread_attr_setfp_np	
		pthread_attr_setinheritsched	
		pthread_attr_setname_np	
		pthread_attr_setschedparam	
3	3.13.2.19	pthread_attr_setschedparam_ex	93
		pthread_attr_setschedpolicy	
3	3.13.2.21	pthread_attr_setscope	94
3	3.13.2.22	pthread_attr_setstacksize	94
3.14 Thread-s	specific o	data	94

•	CONTENTE
7 <b>1</b>	CONTENTS

	3	3.14.1	Detailed Description	5
	3	3.14.2	Function Documentation	5
			3.14.2.1 pthread_getspecific	5
			3.14.2.2 pthread_key_create	6
			3.14.2.3 pthread_key_delete	6
			3.14.2.4 pthread_setspecific	7
4	File D	Oocum	entation 99	9
	4.1	ksrc/sk	ins/posix/syscall.c File Reference	9
	4	4.1.1	Detailed Description	9

# Chapter 1

# **Module Index**

## 1.1 Modules

Here	is:	a list	of all	l modi	1100
11616	15 6	а пъс	OI an	шоч	arcs

e is a list of all modules.	
POSIX skin	
Clocks and timers services	
Condition variables services	
Interruptions management services	
Message queues services	
Mutex services	
Semaphores services	
Shared memory services	
Signals services	
Threads management services	
Thread cancellation	
Threads scheduling services	
Thread creation attributes	
Thread-specific data	

2 **Module Index** 

# Chapter 2

# File Index

## 2.1 File List

Here is a list of all documented files with brief descriptions:

ksrc/skins/posix/ <b>apc.h</b>	??
ksrc/skins/posix/cancel.h	??
ksrc/skins/posix/cb_lock.h	??
ksrc/skins/posix/cond.h	??
ksrc/skins/posix/internal.h	??
ksrc/skins/posix/intr.h	??
ksrc/skins/posix/mq.h	??
ksrc/skins/posix/mutex.h	??
ksrc/skins/posix/registry.h	??
ksrc/skins/posix/sem.h	
ksrc/skins/posix/shm.h	??
ksrc/skins/posix/sig.h	??
ksrc/skins/posix/syscall.c (This file is part of the Xenomai project )	99
ksrc/skins/posix/thread.h	??
ksrc/skins/posix/timer.h	??
ksrc/skins/posix/ <b>tsd.h</b>	??

File Index

## **Chapter 3**

## **Module Documentation**

## 3.1 Thread cancellation.

Thread cancellation.

Collaboration diagram for Thread cancellation.:

Threads management services. Thread cancellation.

## **Functions**

- int pthread\_cancel (pthread\_t thread)

  Cancel a thread.
- void pthread\_cleanup\_push (cleanup\_routine\_t \*routine, void \*arg)

  Register a cleanup handler to be executed at the time of cancellation.
- void pthread\_cleanup\_pop (int execute) *Unregister the last registered cleanup handler.*
- int pthread\_setcanceltype (int type, int \*oldtype\_ptr)

  Set cancelability type of the current thread.
- int pthread\_setcancelstate (int state, int \*oldstate\_ptr)

  Set cancelability state of the current thread.
- void pthread\_testcancel (void)

Test if a cancellation request is pending.

## 3.1.1 Detailed Description

Thread cancellation. Cancellation is the mechanism by which a thread can terminate the execution of a Xenomai POSIX skin thread (created with pthread\_create()). More precisely, a thread can send a cancellation request to a Xenomai POSIX skin thread and depending on its cancelability type (see pthread\_setcanceltype()) and state (see pthread\_setcancelstate()), the target thread can then either ignore the request, honor it immediately, or defer it till it reaches a cancellation point. When threads are first created by pthread\_create(), they always defer cancellation requests.

When a thread eventually honors a cancellation request, it behaves as if <a href="pthread\_exit(PTHREAD\_CANCELED">pthread\_exit(PTHREAD\_CANCELED</a>) was called. All cleanup handlers are executed in reverse order, finalization functions for thread-specific data are called, and finally the thread stops executing. If the canceled thread was joinable, the return value PTHREAD\_CANCELED is provided to whichever thread calls <a href="pthread\_join()">pthread\_join()</a>) on it. See <a href="pthread\_exit()">pthread\_exit()</a>) for more information.

Cancellation points are the points where the thread checks for pending cancellation requests and performs them. The POSIX threads functions pthread\_join(), pthread\_cond\_wait(), pthread\_cond\_timedwait(), pthread\_testcancel(), sem\_wait(), sem\_timedwait(), sigwait(), sigwaitinfo() and sigtimedwait() are cancellation points.

#### See also

Specification.

## 3.1.2 Function Documentation

## 3.1.2.1 int pthread\_cancel ( pthread\_t thread )

Cancel a thread.

This service sends a cancellation request to the thread *thread* and returns immediately. Depending on the target thread cancelability state (see pthread\_setcancelstate()) and type (see pthread\_setcanceltype()), its termination is either immediate, deferred or ignored.

When the cancellation request is handled and before the thread is terminated, the cancellation cleanup handlers (registered with the pthread\_cleanup\_push() service) are called, then the thread-specific data destructor functions (registered with pthread\_key\_create()).

#### Returns

0 on success; an error number if:

• ESRCH, the thread thread was not found.

#### See also

Specification.

#### 3.1.2.2 void pthread\_cleanup\_pop ( int execute )

Unregister the last registered cleanup handler.

3.1 Thread cancellation.

If the calling thread is a Xenomai POSIX skin thread (i.e. created with pthread\_create()), this service unregisters the last routine which was registered with pthread\_cleanup\_push() and call it if *execute* is not null.

If the caller context is invalid (not a Xenomai POSIX skin thread), this service has no effect.

This service may be called at any place, but for maximal portability, should only called in the same lexical scope as the matching call to pthread\_cleanup\_push().

#### **Parameters**

*execute* if non zero, the last registered cleanup handler should be executed before it is unregistered.

## Valid contexts:

- Xenomai POSIX skin kernel-space thread,
- Xenomai POSIX skin user-space thread (switches to primary mode).

#### See also

Specification.

#### 3.1.2.3 void pthread cleanup push ( cleanup routine t \* routine, void \* arg )

Register a cleanup handler to be executed at the time of cancellation.

This service registers the given *routine* to be executed a the time of cancellation of the calling thread, if this thread is a Xenomai POSIX skin thread (i.e. created with the <a href="pthread\_create">pthread\_create</a>() service). If the caller context is invalid (not a Xenomai POSIX skin thread), this service has no effect.

If allocation from the system heap fails (because the system heap size is to small), this service fails silently.

The routines registered with this service get called in LIFO order when the calling thread calls pthread\_exit() or is canceled, or when it calls the pthread\_cleanup\_pop() service with a non null argument.

#### **Parameters**

routine the cleanup routine to be registered;

arg the argument associated with this routine.

#### Valid contexts:

- Xenomai POSIX skin kernel-space thread,
- Xenomai POSIX skin user-space thread (switches to primary mode).

#### See also

## 3.1.2.4 int pthread\_setcancelstate ( int state, int \* oldstate\_ptr )

Set cancelability state of the current thread.

This service atomically set the cancelability state of the calling thread and returns its previous value at the address <code>oldstate\_ptr</code>, if the calling thread is a Xenomai POSIX skin thread (i.e. created with the pthread\_create service).

The cancelability state of a POSIX thread may be:

- PTHREAD\_CANCEL\_ENABLE, meaning that cancellation requests will be handled if received;
- PTHREAD\_CANCEL\_DISABLE, meaning that cancellation requests will not be handled if received.

#### **Parameters**

state new cancelability state of the calling thread;
oldstate\_ptr address where the old cancelability state will be stored on success.

#### Returns

0 on success;

an error number if:

- EINVAL, state is not a valid cancelability state;
- EPERM, the caller context is invalid.

#### Valid contexts:

- Xenomai POSIX skin kernel-space thread,
- Xenomai POSIX skin user-space thread (switches to primary mode).

#### See also

Specification.

## 3.1.2.5 int pthread\_setcanceltype ( int type, int \* oldtype\_ptr )

Set cancelability type of the current thread.

This service atomically sets the cancelability type of the calling thread, and return its previous value at the address *oldtype\_ptr*, if this thread is a Xenomai POSIX skin thread (i.e. was created with the pthread\_create() service).

The cancelability type of a POSIX thread may be:

- PTHREAD\_CANCEL\_DEFERRED, meaning that cancellation requests are only handled in services which are cancellation points;
- PTHREAD\_CANCEL\_ASYNCHRONOUS, meaning that cancellation requests are handled as soon as they are sent.

#### **Parameters**

type new cancelability type of the calling thread;

*oldtype\_ptr* address where the old cancelability type will be stored on success.

#### Returns

0 on success;

an error number if:

- EINVAL, *type* is not a valid cancelability type;
- EPERM, the caller context is invalid.

## Valid contexts:

- Xenomai POSIX skin kernel-space thread,
- Xenomai POSIX skin user-space thread (switches to primary mode).

#### See also

Specification.

## 3.1.2.6 void pthread\_testcancel (void)

Test if a cancellation request is pending.

This function creates a cancellation point if the calling thread is a Xenomai POSIX skin thread (i.e. created with the pthread\_create() service).

This function is a cancellation point. It has no effect if cancellation is disabled.

## Valid contexts:

- Xenomai POSIX skin kernel-space thread,
- Xenomai POSIX skin user-space thread (switches to primary mode).

## See also

Specification.

## 3.2 Clocks and timers services.

Clocks and timers services.

Collaboration diagram for Clocks and timers services.:



## **Functions**

- int clock\_getres (clockid\_t clock\_id, struct timespec \*res)

  Get the resolution of the specified clock.
- static int do\_clock\_host\_realtime (struct timespec \*tp)

  Read the host-synchronised realtime clock.
- int clock\_gettime (clockid\_t clock\_id, struct timespec \*tp)

  Read the specified clock.
- int clock\_settime (clockid\_t clock\_id, const struct timespec \*tp)

  Set the specified clock.
- int clock\_nanosleep (clockid\_t clock\_id, int flags, const struct timespec \*rqtp, struct timespec \*rmtp)

Sleep some amount of time.

- int nanosleep (const struct timespec \*rqtp, struct timespec \*rmtp)

  Sleep some amount of time.
- int timer\_create (clockid\_t clockid, const struct sigevent \*\_\_restrict\_\_ evp, timer\_t \*\_\_restrict\_\_ timerid)

  Create a timer object.
- int timer\_delete (timer\_t timerid)

  Delete a timer object.
- int timer\_settime (timer\_t timerid, int flags, const struct itimerspec \*\_\_restrict\_\_ value, struct itimerspec \*\_\_restrict\_\_ ovalue)

  Start or stop a timer.
- int timer\_gettime (timer\_t timerid, struct itimerspec \*value)

  Get timer next expiration date and reload value.
- int timer\_getoverrun (timer\_t timerid)

  Get expiration overruns count since the most recent timer expiration signal delivery.

## 3.2.1 Detailed Description

Clocks and timers services. Xenomai POSIX skin supports two clocks:

CLOCK\_REALTIME maps to the nucleus system clock, keeping time as the amount of time since the Epoch, with a resolution of one system clock tick.

CLOCK\_MONOTONIC maps to an architecture-dependent high resolution counter, so is suitable for measuring short time intervals. However, when used for sleeping (with clock\_nanosleep()), the CLOCK\_MONOTONIC clock has a resolution of one system clock tick, like the CLOCK\_REALTIME clock.

Timer objects may be created with the timer\_create() service using either of the two clocks, but the resolution of these timers is one system clock tick, as is the case for clock\_nanosleep().

#### Note

The duration of the POSIX clock tick depends on the active time base (configurable at compile-time with the constant *CONFIG\_XENO\_OPT\_POSIX\_PERIOD*, and at run-time with the *xeno\_posix* module parameter *tick\_arg*). When the time base is aperiodic (which is the default) the system clock tick is one nanosecond.

#### See also

Specification.

## 3.2.2 Function Documentation

## 3.2.2.1 int clock\_getres ( clockid\_t clock\_id, struct timespec \* res )

Get the resolution of the specified clock.

This service returns, at the address *res*, if it is not *NULL*, the resolution of the clock *clock\_id*.

For both CLOCK\_REALTIME and CLOCK\_MONOTONIC, this resolution is the duration of one system clock tick. No other clock is supported.

#### **Parameters**

clock\_id clock identifier, either CLOCK\_REALTIME or CLOCK\_MONOTONIC;res the address where the resolution of the specified clock will be stored on success.

#### Return values

```
0 on success:
```

- -1 with *errno* set if:
  - EINVAL, clock\_id is invalid;

## See also

Specification.

## 3.2.2.2 int clock\_gettime ( clockid\_t clock\_id, struct timespec \* tp )

Read the specified clock.

This service returns, at the address *tp* the current value of the clock *clock\_id*. If *clock\_id* is:

- CLOCK\_REALTIME, the clock value represents the amount of time since the Epoch, with a precision of one system clock tick;
- CLOCK\_MONOTONIC, the clock value is given by an architecture-dependent high resolution counter, with a precision independent from the system clock tick duration.
- CLOCK\_HOST\_REALTIME, the clock value as seen by the host, typically Linux. Resolution and precision depend on the host, but it is guaranteed that both, host and Xenomai, see the same information.

#### **Parameters**

clock\_id clock identifier, either CLOCK\_REALTIME, CLOCK\_MONOTONIC, or CLOCK\_HOST\_REALTIME;

*tp* the address where the value of the specified clock will be stored.

#### Return values

0 on success;

- -1 with *errno* set if:
  - EINVAL, *clock\_id* is invalid.

#### See also

Specification.

References do\_clock\_host\_realtime().

## 3.2.2.3 int clock\_nanosleep ( clockid\_t *clock\_id*, int *flags*, const struct timespec \* *rqtp*, struct timespec \* *rmtp* )

Sleep some amount of time.

This service suspends the calling thread until the wakeup time specified by rqtp, or a signal is delivered to the caller. If the flag TIMER\_ABSTIME is set in the flags argument, the wakeup time is specified as an absolute value of the clock  $clock\_id$ . If the flag TIMER\_ABSTIME is not set, the wakeup time is specified as a time interval.

If this service is interrupted by a signal, the flag TIMER\_ABSTIME is not set, and *rmtp* is not *NULL*, the time remaining until the specified wakeup time is returned at the address *rmtp*.

The resolution of this service is one system clock tick.

#### **Parameters**

clock\_id clock identifier, either CLOCK\_REALTIME or CLOCK\_MONOTONIC.
flags one of:

- 0 meaning that the wakeup time *rqtp* is a time interval;
- TIMER\_ABSTIME, meaning that the wakeup time is an absolute value of the clock *clock\_id*.

rqtp address of the wakeup time.

*rmtp* address where the remaining time before wakeup will be stored if the service is interrupted by a signal.

#### **Returns**

0 on success;

an error number if:

- EPERM, the caller context is invalid;
- ENOTSUP, the specified clock is unsupported;
- EINVAL, the specified wakeup time is invalid;
- EINTR, this service was interrupted by a signal.

#### Valid contexts:

• Xenomai kernel-space thread,

• Xenomai user-space thread (switches to primary mode).

#### See also

```
Specification.
```

Referenced by nanosleep().

## 3.2.2.4 int clock\_settime ( clockid\_t clock\_id, const struct timespec \* tp )

Set the specified clock.

This allow setting the CLOCK\_REALTIME clock.

#### **Parameters**

```
clock_id the id of the clock to be set, only CLOCK_REALTIME is supported.tp the address of a struct timespec specifying the new date.
```

## Return values

0 on success;

- -1 with errno set if:
  - EINVAL, *clock\_id* is not CLOCK\_REALTIME;
  - EINVAL, the date specified by *tp* is invalid.

#### See also

Specification.

## 3.2.2.5 static int do\_clock\_host\_realtime ( struct timespec \* tp ) [static]

Read the host-synchronised realtime clock.

Obtain the current time with NTP corrections from the Linux domain

#### **Parameters**

*tp* pointer to a struct timespec

#### **Return values**

0 on success;

-1 if no suitable NTP-corrected clocksource is availabel

#### See also

Specification.

Referenced by clock\_gettime().

#### 3.2.2.6 int nanosleep (const struct timespec \* rqtp, struct timespec \* rmtp)

Sleep some amount of time.

This service suspends the calling thread until the wakeup time specified by *rqtp*, or a signal is delivered. The wakeup time is specified as a time interval.

If this service is interrupted by a signal and *rmtp* is not *NULL*, the time remaining until the specified wakeup time is returned at the address *rmtp*.

The resolution of this service is one system clock tick.

#### **Parameters**

rqtp address of the wakeup time.

**rmtp** address where the remaining time before wakeup will be stored if the service is interrupted by a signal.

#### Return values

0 on success;

-1 with errno set if:

- EPERM, the caller context is invalid;
- EINVAL, the specified wakeup time is invalid;
- EINTR, this service was interrupted by a signal.

#### Valid contexts:

- Xenomai kernel-space thread,
- Xenomai user-space thread (switches to primary mode).

#### See also

```
Specification.
```

References clock\_nanosleep().

```
3.2.2.7 int timer_create ( clockid_t clockid, const struct sigevent *__restrict__ evp, timer_t *__restrict__ timerid )
```

Create a timer object.

This service creates a time object using the clock *clockid*.

If *evp* is not *NULL*, it describes the notification mechanism used on timer expiration. Only notification via signal delivery is supported (member *sigev\_notify* of *evp* set to *SIGEV\_SIGNAL*). The signal will be sent to the thread starting the timer with the timer\_settime() service. If *evp* is *NULL*, the SIGALRM signal will be used.

Note that signals sent to user-space threads will cause them to switch to secondary mode.

If this service succeeds, an identifier for the created timer is returned at the address *timerid*. The timer is unarmed until started with the <u>timer\_settime()</u> service.

#### **Parameters**

clockid clock used as a timing base;

*evp* description of the asynchronous notification to occur when the timer expires; *timerid* address where the identifier of the created timer will be stored on success.

#### Return values

0 on success;

- -1 with errno set if:
  - EINVAL, the clock *clockid* is invalid;
  - EINVAL, the member *sigev\_notify* of the **sigevent** structure at the address *evp* is not SIGEV SIGNAL;
  - EINVAL, the member <code>sigev\_signo</code> of the <code>sigevent</code> structure is an invalid signal number:
  - EAGAIN, the maximum number of timers was exceeded, recompile with a larger value.

#### See also

Specification.

## 3.2.2.8 int timer\_delete ( timer\_t timerid )

Delete a timer object.

This service deletes the timer timerid.

## **Parameters**

timerid identifier of the timer to be removed;

#### Return values

0 on success;

- -1 with *errno* set if:
  - EINVAL, *timerid* is invalid;
  - EPERM, the timer *timerid* does not belong to the current process.

#### See also

Specification.

## 3.2.2.9 int timer\_getoverrun ( timer\_t timerid )

Get expiration overruns count since the most recent timer expiration signal delivery.

This service returns *timerid* expiration overruns count since the most recent timer expiration signal delivery. If this count is more than *DELAYTIMER\_MAX* expirations, *DELAYTIMER\_MAX* is returned.

#### **Parameters**

timerid Timer identifier.

#### Returns

the overruns count on success;

- -1 with *errno* set if:
  - EINVAL, timerid is invalid;
  - EPERM, the timer *timerid* does not belong to the current process.

#### See also

Specification.

#### 3.2.2.10 int timer\_gettime ( timer\_t timerid, struct itimerspec \* value )

Get timer next expiration date and reload value.

This service stores, at the address *value*, the expiration date (member *it\_value*) and reload value (member *it\_interval*) of the timer *timerid*. The values are returned as time intervals, and as multiples of the system clock tick duration (see note in section Clocks and timers services for details on the duration of the system clock tick). If the timer was not started, the returned members *it\_value* and *it\_interval* of *value* are zero.

#### **Parameters**

timerid timer identifier;

value address where the timer expiration date and reload value are stored on success.

## Return values

0 on success:

- -1 with errno set if:
  - EINVAL, timerid is invalid;
  - EPERM, the timer *timerid* does not belong to the current process.

#### See also

Specification.

## 3.2.2.11 int timer\_settime ( timer\_t timerid, int flags, const struct itimerspec \*\_\_restrict\_\_ value, struct itimerspec \*\_\_restrict\_\_ ovalue )

Start or stop a timer.

This service sets a timer expiration date and reload value of the timer *timerid*. If *ovalue* is not *NULL*, the current expiration date and reload value are stored at the address *ovalue* as with timer\_gettime().

If the member *it\_value* of the **itimerspec** structure at *value* is zero, the timer is stopped, otherwise the timer is started. If the member *it\_interval* is not zero, the timer is periodic. The current thread must be a POSIX skin thread (created with pthread\_create()) and will be notified via signal of timer expirations. Note that these notifications will cause user-space threads to switch to secondary mode.

When starting the timer, if *flags* is TIMER\_ABSTIME, the expiration value is interpreted as an absolute date of the clock passed to the timer\_create() service. Otherwise, the expiration value is interpreted as a time interval.

Expiration date and reload value are rounded to an integer count of system clock ticks (see note in section Clocks and timers services for details on the duration of the system tick).

#### **Parameters**

timerid identifier of the timer to be started or stopped;

flags one of 0 or TIMER\_ABSTIME;

value address where the specified timer expiration date and reload value are read;

*ovalue* address where the specified timer previous expiration date and reload value are stored if not *NULL*.

#### **Return values**

0 on success;

- -1 with errno set if:
  - EPERM, the caller context is invalid;
  - EINVAL, the specified timer identifier, expiration date or reload value is invalid;
  - EPERM, the timer *timerid* does not belong to the current process.

#### Valid contexts:

- Xenomai kernel-space POSIX skin thread,
- kernel-space thread cancellation cleanup routine,
- Xenomai POSIX skin user-space thread (switches to primary mode),
- user-space thread cancellation cleanup routine.

#### See also

Specification.

## 3.3 Condition variables services.

Condition variables services.

Collaboration diagram for Condition variables services.:



## **Functions**

- int pthread\_cond\_init (pthread\_cond\_t \*cnd, const pthread\_condattr\_t \*attr)

  \*Initialize a condition variable.
- int pthread\_cond\_destroy (pthread\_cond\_t \*cnd)

  Destroy a condition variable.
- int pthread\_cond\_wait (pthread\_cond\_t \*cnd, pthread\_mutex\_t \*mx)

  Wait on a condition variable.
- int pthread\_cond\_timedwait (pthread\_cond\_t \*cnd, pthread\_mutex\_t \*mx, const struct timespec \*abstime)

Wait a bounded time on a condition variable.

- int pthread\_cond\_signal (pthread\_cond\_t \*cnd) Signal a condition variable.
- int pthread\_cond\_broadcast (pthread\_cond\_t \*cnd)

  Broadcast a condition variable.
- int pthread\_condattr\_init (pthread\_condattr\_t \*attr)

  Initialize a condition variable attributes object.
- int pthread\_condattr\_destroy (pthread\_condattr\_t \*attr)

  Destroy a condition variable attributes object.
- int pthread\_condattr\_getclock (const pthread\_condattr\_t \*attr, clockid\_t \*clk\_id)

  Get the clock selection attribute from a condition variable attributes object.
- int pthread\_condattr\_setclock (pthread\_condattr\_t \*attr, clockid\_t clk\_id)

  Set the clock selection attribute of a condition variable attributes object.
- int pthread\_condattr\_getpshared (const pthread\_condattr\_t \*attr, int \*pshared)

  Get the process-shared attribute from a condition variable attributes object.
- int pthread\_condattr\_setpshared (pthread\_condattr\_t \*attr, int pshared)

  Set the process-shared attribute of a condition variable attributes object.

## 3.3.1 Detailed Description

Condition variables services. A condition variable is a synchronization object that allows threads to suspend execution until some predicate on shared data is satisfied. The basic operations on conditions are: signal the condition (when the predicate becomes true), and wait for the condition, suspending the thread execution until another thread signals the condition.

A condition variable must always be associated with a mutex, to avoid the race condition where a thread prepares to wait on a condition variable and another thread signals the condition just before the first thread actually waits on it.

Before it can be used, a condition variable has to be initialized with pthread\_cond\_init(). An attribute object, which reference may be passed to this service, allows to select the features of the created condition variable, namely the *clock* used by the pthread\_cond\_timedwait() service (CLOCK\_REALTIME is used by default), and whether it may be shared between several processes (it may not be shared by default, see pthread\_condattr\_setpshared()).

Note that only pthread\_cond\_init() may be used to initialize a condition variable, using the static initializer *PTHREAD\_COND\_INITIALIZER* is not supported.

## 3.3.2 Function Documentation

## 3.3.2.1 int pthread\_cond\_broadcast ( pthread\_cond\_t \* cnd )

Broadcast a condition variable.

This service unblocks all threads blocked on the condition variable *cnd*.

#### **Parameters**

*cnd* the condition variable to be signalled.

#### Returns

0 on succes, an error number if:

- EINVAL, the condition variable is invalid;
- EPERM, the condition variable is not process-shared and does not belong to the current process.

#### See also

Specification.

## 3.3.2.2 int pthread\_cond\_destroy ( pthread\_cond\_t \* cnd )

Destroy a condition variable.

This service destroys the condition variable *cnd*, if no thread is currently blocked on it. The condition variable becomes invalid for all condition variable services (they all return the EINVAL error) except pthread\_cond\_init().

#### **Parameters**

*cnd* the condition variable to be destroyed.

## Returns

0 on succes,

an error number if:

- EINVAL, the condition variable *cnd* is invalid;
- EPERM, the condition variable is not process-shared and does not belong to the current process;
- EBUSY, some thread is currently using the condition variable.

#### See also

Specification.

## 3.3.2.3 int pthread\_cond\_init ( pthread\_cond\_t \* cnd, const pthread\_condattr\_t \* attr )

Initialize a condition variable.

This service initializes the condition variable *cnd*, using the condition variable attributes object *attr*. If *attr* is *NULL* or this service is called from user-space, default attributes are used (see pthread\_condattr\_init()).

#### **Parameters**

cnd the condition variable to be initialized;attr the condition variable attributes object.

#### Returns

0 on succes,

an error number if:

- EINVAL, the condition variable attributes object attr is invalid or uninitialized;
- EBUSY, the condition variable *cnd* was already initialized;
- ENOMEM, insufficient memory exists in the system heap to initialize the condition variable, increase CONFIG\_XENO\_OPT\_SYS\_HEAPSZ.

#### See also

Specification.

## 3.3.2.4 int pthread\_cond\_signal ( pthread\_cond\_t \* cnd )

Signal a condition variable.

This service unblocks one thread blocked on the condition variable *cnd*.

If more than one thread is blocked on the specified condition variable, the highest priority thread is unblocked.

#### **Parameters**

*cnd* the condition variable to be signalled.

## Returns

0 on succes,

an error number if:

- EINVAL, the condition variable is invalid;
- EPERM, the condition variable is not process-shared and does not belong to the current process.

#### See also

## 3.3.2.5 int pthread\_cond\_timedwait ( pthread\_cond\_t \* cnd, pthread\_mutex\_t \* mx, const struct timespec \* abstime )

Wait a bounded time on a condition variable.

This service is equivalent to pthread\_cond\_wait(), except that the calling thread remains blocked on the condition variable *cnd* only until the timeout specified by *abstime* expires.

The timeout *abstime* is expressed as an absolute value of the *clock* attribute passed to pthread\_cond\_init(). By default, *CLOCK\_REALTIME* is used.

#### **Parameters**

cnd the condition variable to wait for;mx the mutex associated with cnd;abstime the timeout, expressed as an absolute value of the clock attribute passed to pthread -

#### Returns

0 on success.

an error number if:

cond init().

- EPERM, the caller context is invalid;
- EPERM, the specified condition variable is not process-shared and does not belong to the current process;
- EINVAL, the specified condition variable, mutex or timeout is invalid;
- EINVAL, another thread is currently blocked on *cnd* using another mutex than *mx*;
- EPERM, the specified mutex is not owned by the caller;
- ETIMEDOUT, the specified timeout expired.

## Valid contexts:

- Xenomai kernel-space thread;
- Xenomai user-space thread (switches to primary mode).

#### See also

Specification.

## 3.3.2.6 int pthread\_cond\_wait ( pthread\_cond\_t \* cnd, pthread\_mutex\_t \* mx )

Wait on a condition variable.

This service atomically unlocks the mutex mx, and block the calling thread until the condition variable cnd is signalled using pthread\_cond\_signal() or pthread\_cond\_broadcast(). When the condition is signaled, this service re-acquire the mutex before returning.

Spurious wakeups occur if a signal is delivered to the blocked thread, so, an application should not assume that the condition changed upon successful return from this service.

Even if the mutex mx is recursive and its recursion count is greater than one on entry, it is unlocked before blocking the caller, and the recursion count is restored once the mutex is re-acquired by this service before returning.

Once a thread is blocked on a condition variable, a dynamic binding is formed between the condition variable cnd and the mutex mx; if another thread calls this service specifying cnd as a condition variable but another mutex than mx, this service returns immediately with the EINVAL status.

This service is a cancellation point for Xenomai POSIX skin threads (created with the pthread\_create() service). When such a thread is cancelled while blocked in a call to this service, the mutex *mx* is re-acquired before the cancellation cleanup handlers are called.

## **Parameters**

cnd the condition variable to wait for;mx the mutex associated with cnd.

#### **Returns**

0 on success, an error number if:

- EPERM, the caller context is invalid;
- EINVAL, the specified condition variable or mutex is invalid;
- EPERM, the specified condition variable is not process-shared and does not belong to the current process;
- EINVAL, another thread is currently blocked on *cnd* using another mutex than *mx*;
- EPERM, the specified mutex is not owned by the caller.

#### Valid contexts:

- Xenomai kernel-space thread;
- Xenomai user-space thread (switches to primary mode).

#### See also

Specification.

## 3.3.2.7 int pthread\_condattr\_destroy ( pthread\_condattr\_t \* attr )

Destroy a condition variable attributes object.

This service destroys the condition variable attributes object *attr*. The object becomes invalid for all condition variable services (they all return EINVAL) except pthread\_condattr\_init().

#### **Parameters**

attr the initialized mutex attributes object to be destroyed.

#### **Returns**

0 on success; an error number if:

• EINVAL, the mutex attributes object *attr* is invalid.

#### See also

## 3.3.2.8 int pthread\_condattr\_getclock ( const pthread\_condattr\_t \* attr, clockid\_t \* clk\_id )

Get the clock selection attribute from a condition variable attributes object.

This service stores, at the address *clk\_id*, the value of the *clock* attribute in the condition variable attributes object *attr*.

See pthread\_cond\_timedwait() documentation for a description of the effect of this attribute on a condition variable. The clock ID returned is CLOCK\_REALTIME or CLOCK\_MONOTONIC.

#### **Parameters**

attr an initialized condition variable attributes object,clk\_id address where the clock attribute value will be stored on success.

#### **Returns**

0 on success, an error number if:

• EINVAL, the attribute object *attr* is invalid.

#### See also

Specification.

## 3.3.2.9 int pthread\_condattr\_getpshared ( const pthread\_condattr\_t \* attr, int \* pshared )

Get the process-shared attribute from a condition variable attributes object.

This service stores, at the address *pshared*, the value of the *pshared* attribute in the condition variable attributes object *attr*.

The *pshared* attribute may only be one of *PTHREAD\_PROCESS\_PRIVATE* or *PTHREAD\_-PROCESS\_SHARED*. See <a href="pthread\_condattr\_setpshared">pthread\_condattr\_setpshared</a>() for the meaning of these two constants.

#### **Parameters**

attr an initialized condition variable attributes object.

*pshared* address where the value of the *pshared* attribute will be stored on success.

#### Returns

0 on success, an error number if:

- EINVAL, the *pshared* address is invalid;
- EINVAL, the condition variable attributes object *attr* is invalid.

#### See also

## 3.3.2.10 int pthread\_condattr\_init ( pthread\_condattr\_t \* attr )

Initialize a condition variable attributes object.

This services initializes the condition variable attributes object *attr* with default values for all attributes. Default value are:

- for the *clock* attribute, *CLOCK\_REALTIME*;
- for the *pshared* attribute *PTHREAD\_PROCESS\_PRIVATE*.

If this service is called specifying a condition variable attributes object that was already initialized, the attributes object is reinitialized.

#### **Parameters**

attr the condition variable attributes object to be initialized.

#### Returns

0 on success; an error number if:

• ENOMEM, the condition variable attribute object pointer *attr* is *NULL*.

#### See also

Specification.

## 3.3.2.11 int pthread\_condattr\_setclock ( pthread\_condattr\_t \* attr, clockid\_t clk\_id )

Set the clock selection attribute of a condition variable attributes object.

This service set the *clock* attribute of the condition variable attributes object *attr*.

See pthread\_cond\_timedwait() documentation for a description of the effect of this attribute on a condition variable.

#### **Parameters**

attr an initialized condition variable attributes object,
clk\_id value of the clock attribute, may be CLOCK\_REALTIME or CLOCK\_MONOTONIC.

#### Returns

0 on success, an error number if:

- EINVAL, the condition variable attributes object attr is invalid;
- EINVAL, the value of *clk\_id* is invalid for the *clock* attribute.

#### See also

## 3.3.2.12 int pthread\_condattr\_setpshared ( pthread\_condattr\_t \* attr, int pshared )

Set the process-shared attribute of a condition variable attributes object.

This service set the *pshared* attribute of the condition variable attributes object attr.

#### **Parameters**

attr an initialized condition variable attributes object.pshared value of the pshared attribute, may be one of:

- PTHREAD\_PROCESS\_PRIVATE, meaning that a condition variable created with the attributes object *attr* will only be accessible by threads within the same process as the thread that initialized the condition variable;
- PTHREAD\_PROCESS\_SHARED, meaning that a condition variable created with the attributes object *attr* will be accessible by any thread that has access to the memory where the condition variable is allocated.

#### Returns

0 on success, an error status if:

- EINVAL, the condition variable attributes object attr is invalid;
- EINVAL, the value of *pshared* is invalid.


#### See also

Specification.

## 3.4 Interruptions management services.

Interruptions management services.

Collaboration diagram for Interruptions management services.:



#### **Functions**

- int pthread\_intr\_attach\_np (pthread\_intr\_t \*intrp, unsigned irq, xnisr\_t isr, xniack\_t iack)

  Create and attach an interrupt object.
- int pthread\_intr\_detach\_np (pthread\_intr\_t intr)

  Destroy an interrupt object.

• int pthread\_intr\_control\_np (pthread\_intr\_t intr, int cmd)

Control the state of an interrupt channel.

• int pthread\_intr\_wait\_np (pthread\_intr\_t intr, const struct timespec \*to)

Wait for the next interruption.

## 3.4.1 Detailed Description

Interruptions management services. The services described here allow applications written using the POSIX skin to handle interrupts, either in kernel-space or in user-space.

Note however, that it is recommended to use the standardized driver API of the RTDM skin (see rtdm).

#### 3.4.2 Function Documentation

```
3.4.2.1 int pthread_intr_attach_np ( pthread_intr_t * intrp, unsigned irq, xnisr_t isr, xniack t iack )
```

Create and attach an interrupt object.

This service creates and attaches an interrupt object.

## In kernel-space:

This service installs *isr* as the handler for the interrupt *irq*. If *iack* is not null it is a custom interrupt acknowledge routine.

When called upon reception of an interrupt, the *isr* function is passed the address of an underlying **xnintr\_t** object, and should use the macro *PTHREAD\_IDESC()* to get the **pthread\_intr\_t** object. The meaning of the *isr* and *iack* function and what they should return is explained in xnintr\_init() documentation.

This service is a non-portable extension of the POSIX interface.

## **Parameters**

```
intrp address where the created interrupt object identifier will be stored on success;irq IRQ channel;isr interrupt handling routine;iack if not NULL, optional interrupt acknowledge routine.
```

#### In user-space:

The prototype of this service is:

int pthread\_intr\_attach\_np (pthread\_intr\_t \*intrp, unsigned irq, int mode);

This service causes the installation of a default interrupt handler which unblocks any Xenomai user-space interrupt server thread blocked in a call to pthread\_intr\_wait\_np(), and returns a value depending on the *mode* parameter.

#### **Parameters:**

*intrp* and *irq* have the same meaning as in kernel-space; *mode* is a bitwise OR of the following values:

- PTHREAD\_INOAUTOENA, meaning that the interrupt should not be automatically re-enabled.
- PTHREAD\_IPROPAGATE, meaning that the interrupt should be propagated to lower priority domains. In effect, PTHREAD\_IPROPAGATE implies PTHREAD\_INOAUTOENA since it would make no sense to re-enable the interrupt channel before the next domain down the pipeline has had a chance to process the propagated interrupt.

This service is intended to be used in conjunction with the pthread\_intr\_wait\_np() service.

The return values are identical in kernel-space and user-space.

#### Return values

0 on success:

- -1 with errno set if:
  - ENOSYS, kernel-space Xenomai POSIX skin was built without support for interrupts, use RTDM or enable CONFIG\_XENO\_OPT\_POSIX\_INTR in kernel configuration;
  - ENOMEM, insufficient memory exists in the system heap to create the interrupt object, increase CONFIG\_XENO\_OPT\_SYS\_HEAPSZ;
  - EINVAL, a low-level error occured while attaching the interrupt;
  - EBUSY, an interrupt handler was already registered for the irq line irq.

References pthread\_intr\_detach\_np().

## 3.4.2.2 int pthread\_intr\_control\_np ( pthread\_intr\_t intr, int cmd )

Control the state of an interrupt channel.

This service allow to enable or disable an interrupt channel.

This service is a non-portable extension of the POSIX interface.

#### **Parameters**

intr identifier of the interrupt to be enabled or disabled.cmd one of PTHREAD\_IENABLE or PTHREAD\_IDISABLE.

## Return values

0 on success;

- -1 with *errno* set if:
  - ENOSYS, kernel-space Xenomai POSIX skin was built without support for interrupts, use RTDM or enable CONFIG\_XENO\_OPT\_POSIX\_INTR in kernel configuration;
  - EINVAL, the identifier *intr* or *cmd* is invalid;
  - EPERM, the interrupt *intr* does not belong to the current process.

## 3.4.2.3 int pthread\_intr\_detach\_np ( pthread\_intr\_t intr )

Destroy an interrupt object.

This service destroys the interrupt object *intr*. The memory allocated for this object is returned to the system heap, so further references using the same object identifier are not guaranteed to fail.

If a user-space interrupt server is blocked in a call to <a href="pthread\_intr\_wait\_np">pthread\_intr\_wait\_np</a>(), it is unblocked and the blocking service returns with an error of EIDRM.

This service is a non-portable extension of the POSIX interface.

#### **Parameters**

*intr* identifier of the interrupt object to be destroyed.

#### Return values

0 on success;

-1 with errno set if:

- ENOSYS, kernel-space Xenomai POSIX skin was built without support for interrupts, use RTDM or enable CONFIG\_XENO\_OPT\_POSIX\_INTR in kernel configuration;
- EINVAL, the interrupt object *intr* is invalid;
- EPERM, the interrupt *intr* does not belong to the current process.

Referenced by pthread\_intr\_attach\_np().

## 3.4.2.4 int pthread\_intr\_wait\_np ( pthread\_intr\_t intr, const struct timespec \* to )

Wait for the next interruption.

This service is used by user-space interrupt server threads, to wait, if no interrupt is pending, for the next interrupt.

This service is a cancelation point. If a thread is canceled while blocked in a call to this service, no interruption notification is lost.

This service is a non-portable extension of the POSIX interface.

## **Parameters**

*intr* interrupt object identifier;

to if not NULL, timeout, expressed as a time interval.

#### Returns

the number of interrupt received on success;


- -1 with errno set if:
  - ENOSYS, kernel-space Xenomai POSIX skin was built without support for interrupts, use RTDM or enable CONFIG\_XENO\_OPT\_POSIX\_INTR in kernel configuration;
  - EIDRM, the interrupt object was deleted;
  - EPERM, the interrupt *intr* does not belong to the current process;
  - ETIMEDOUT, the timeout specified by *to* expired;
  - EINTR, pthread\_intr\_wait\_np() was interrupted by a signal.

3.5 POSIX skin. 29

## 3.5 POSIX skin.

Xenomai POSIX skin is an implementation of a small subset of the Single Unix specification over Xenomai generic RTOS core.

Collaboration diagram for POSIX skin.:

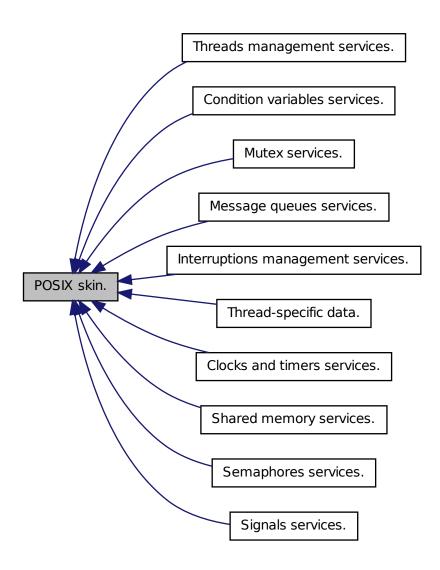

## **Modules**

• Clocks and timers services.

Clocks and timers services.

• Condition variables services.

Condition variables services.

• Interruptions management services.

Interruptions management services.

• Message queues services.

Message queues services.

• Mutex services.

Mutex services.

• Semaphores services.

Semaphores services.

• Shared memory services.

Shared memory services.

• Signals services.

Signals management services.

• Threads management services.

Threads management services.

• Thread-specific data.

Thread-specific data.

## 3.5.1 Detailed Description

Xenomai POSIX skin is an implementation of a small subset of the Single Unix specification over Xenomai generic RTOS core. The following table gives equivalence between native API services and POSIX services.

Native API services	POSIX API services
alarm	Clocks and timers services.
cond	Condition variables services.
event	no direct equivalence,
	see Condition variables services.
native_heap	Shared memory services.
interrupt	Interruptions management services.
mutex	Mutex services.
pipe	no direct equivalence,
	see Message queues services.
native_queue	Message queues services.
semaphore	Semaphores services.
task	Threads management services.
native_timer	Clocks and timers services.

## 3.6 Message queues services.

Message queues services.

Collaboration diagram for Message queues services.:



## **Functions**

- mqd\_t mq\_open (const char \*name, int oflags,...)

  Open a message queue.
- int mq\_close (mqd\_t fd)

  Close a message queue.
- int mq\_unlink (const char \*name) *Unlink a message queue.*
- int mq\_send (mqd\_t fd, const char \*buffer, size\_t len, unsigned prio)

  Send a message to a message queue.
- int mq\_timedsend (mqd\_t fd, const char \*buffer, size\_t len, unsigned prio, const struct timespec \*abs\_timeout)

Attempt, during a bounded time, to send a message to a message queue.

- ssize\_t mq\_receive (mqd\_t fd, char \*buffer, size\_t len, unsigned \*priop)

  Receive a message from a message queue.
- ssize\_t mq\_timedreceive (mqd\_t fd, char \*\_\_restrict\_\_ buffer, size\_t len, unsigned \*\_\_restrict\_\_ priop, const struct timespec \*\_\_restrict\_\_ abs\_timeout)

  Attempt, during a bounded time, to receive a message from a message queue.
- int mq\_getattr (mqd\_t fd, struct mq\_attr \*attr)

  Get the attributes object of a message queue.
- int mq\_setattr (mqd\_t fd, const struct mq\_attr \*\_\_restrict\_\_ attr, struct mq\_attr \*\_\_restrict\_\_ oattr)

Set flags of a message queue.

• int mq\_notify (mqd\_t fd, const struct sigevent \*evp)

Register the current thread to be notified of message arrival at an empty message queue.

## 3.6.1 Detailed Description

Message queues services. A message queue allow exchanging data between real-time threads. For a POSIX message queue, maximum message length and maximum number of messages are fixed when it is created with mq\_open().

## 3.6.2 Function Documentation

## 3.6.2.1 int mq\_close ( mqd\_t fd )

Close a message queue.

This service closes the message queue descriptor *fd*. The message queue is destroyed only when all open descriptors are closed, and when unlinked with a call to the mq\_unlink() service.

#### **Parameters**

fd message queue descriptor.

#### Return values

0 on success;

- -1 with errno set if:
  - EBADF, fd is an invalid message queue descriptor;
  - EPERM, the caller context is invalid.

#### Valid contexts:

- kernel module initialization or cleanup routine;
- kernel-space cancellation cleanup routine;
- user-space thread (Xenomai threads switch to secondary mode);
- user-space cancellation cleanup routine.

#### See also

Specification.

## 3.6.2.2 int mq\_getattr ( mqd\_t fd, struct mq\_attr \* attr )

Get the attributes object of a message queue.

This service stores, at the address *attr*, the attributes of the messages queue descriptor *fd*.

The following attributes are set:

- mq\_flags, flags of the message queue descriptor fd;
- mq\_maxmsg, maximum number of messages in the message queue;
- mq\_msgsize, maximum message size;
- mq\_curmsgs, number of messages currently in the queue.

#### **Parameters**

```
fd message queue descriptor;attr address where the message queue attributes will be stored on success.
```

#### Return values

```
0 on success;
```

- -1 with errno set if:
  - EBADF, fd is not a valid descriptor.

#### See also

```
Specification.
```

## 3.6.2.3 int mq\_notify ( mqd\_t fd, const struct sigevent \* evp )

Register the current thread to be notified of message arrival at an empty message queue.

If *evp* is not *NULL* and is the address of a **sigevent** structure with the *sigev\_notify* member set to SIGEV\_SIGNAL, the current thread will be notified by a signal when a message is sent to the message queue *fd*, the queue is empty, and no thread is blocked in call to mq\_receive() or mq\_timedreceive(). After the notification, the thread is unregistered.

If *evp* is *NULL* or the *sigev\_notify* member is SIGEV\_NONE, the current thread is unregistered.

Only one thread may be registered at a time.

If the current thread is not a Xenomai POSIX skin thread (created with pthread\_create()), this service fails.

Note that signals sent to user-space Xenomai POSIX skin threads will cause them to switch to secondary mode.

#### **Parameters**

```
fd message queue descriptor;evp pointer to an event notification structure.
```

## Return values

```
0 on success;
```

- -1 with errno set if:
  - EINVAL, evp is invalid;
  - EPERM, the caller context is invalid;
  - EBADF, fd is not a valid message queue descriptor;
  - EBUSY, another thread is already registered.

#### Valid contexts:

- Xenomai kernel-space POSIX skin thread,
- Xenomai user-space POSIX skin thread (switches to primary mode).

#### See also

```
Specification.
```

#### 3.6.2.4 mqd\_t mq\_open ( const char \* name, int oflags, ... )

Open a message queue.

This service establishes a connection between the message queue named *name* and the calling context (kernel-space as a whole, or user-space process).

One of the following values should be set in oflags:

- O\_RDONLY, meaning that the returned queue descriptor may only be used for receiving messages;
- O\_WRONLY, meaning that the returned queue descriptor may only be used for sending messages;
- O\_RDWR, meaning that the returned queue descriptor may be used for both sending and receiving messages.

If no message queue named *name* exists, and *oflags* has the *O\_CREAT* bit set, the message queue is created by this function, taking two more arguments:

- a *mode* argument, of type **mode\_t**, currently ignored;
- an *attr* argument, pointer to an **mq\_attr** structure, specifying the attributes of the new message queue.

If *oflags* has the two bits *O\_CREAT* and *O\_EXCL* set and the message queue alread exists, this service fails.

If the O\_NONBLOCK bit is set in *oflags*, the mq\_send(), mq\_receive(), mq\_timedsend() and mq\_timedreceive() services return -1 with *errno* set to EAGAIN instead of blocking their caller.

The following arguments of the **mq\_attr** structure at the address *attr* are used when creating a message queue:

- mq\_maxmsg is the maximum number of messages in the queue (128 by default);
- *mq\_msgsize* is the maximum size of each message (128 by default).

*name* may be any arbitrary string, in which slashes have no particular meaning. However, for portability, using a name which starts with a slash and contains no other slash is recommended.

#### **Parameters**

```
name name of the message queue to open;
oflags flags.
```

## Returns

a message queue descriptor on success;

- -1 with errno set if:
  - ENAMETOOLONG, the length of the *name* argument exceeds 64 characters;
  - EEXIST, the bits *O\_CREAT* and *O\_EXCL* were set in *oflags* and the message queue already exists;
  - ENOENT, the bit O\_CREAT is not set in oflags and the message queue does not exist;

- ENOSPC, allocation of system memory failed, or insufficient memory exists in the system heap to create the queue, try increasing CONFIG\_XENO\_OPT\_SYS\_HEAPSZ;
- EPERM, attempting to create a message queue from an invalid context;
- EINVAL, the attr argument is invalid;
- EMFILE, too many descriptors are currently open.

#### Valid contexts:

When creating a message queue, only the following contexts are valid:

- kernel module initialization or cleanup routine;
- user-space thread (Xenomai threads switch to secondary mode).

#### See also

Specification.

## 3.6.2.5 ssize\_t mq\_receive ( mqd\_t fd, char \* buffer, size\_t len, unsigned \* priop )

Receive a message from a message queue.

If the message queue *fd* is not empty and if *len* is greater than the *mq\_msgsize* of the message queue, this service copies, at the address *buffer*, the queued message with the highest priority.

If the queue is empty and the flag *O\_NONBLOCK* is not set for the descriptor *fd*, the calling thread is suspended until some message is sent to the queue. If the queue is empty and the flag *O\_NONBLOCK* is set for the descriptor *fd*, this service returns immediately a value of -1 with *errno* set to EAGAIN.

#### **Parameters**

```
fd the queue descriptor;
buffer the address where the received message will be stored on success;
len buffer length;
priop address where the priority of the received message will be stored on success.
```

## Returns

the message length, and copy a message at the address buffer on success;

- -1 with no message unqueued and errno set if:
  - EBADF, fd is not a valid descriptor open for reading;
  - EMSGSIZE, the length *len* is lesser than the message queue *mq\_msgsize* attribute;
  - EAGAIN, the queue is empty, and the flag *O\_NONBLOCK* is set for the descriptor *fd*;
  - EPERM, the caller context is invalid;
  - EINTR, the service was interrupted by a signal.

## Valid contexts:

- Xenomai kernel-space thread,
- Xenomai user-space thread (switches to primary mode).

## See also

## 3.6.2.6 int mq\_send ( mqd\_t fd, const char \* buffer, size\_t len, unsigned prio )

Send a message to a message queue.

If the message queue *fd* is not full, this service sends the message of length *len* pointed to by the argument *buffer*, with priority *prio*. A message with greater priority is inserted in the queue before a message with lower priority.

If the message queue is full and the flag *O\_NONBLOCK* is not set, the calling thread is suspended until the queue is not full. If the message queue is full and the flag *O\_NONBLOCK* is set, the message is not sent and the service returns immediately a value of -1 with *errno* set to EAGAIN.

#### **Parameters**

```
fd message queue descriptor;buffer pointer to the message to be sent;len length of the message;prio priority of the message.
```

#### **Returns**

0 and send a message on success;

- -1 with no message sent and *errno* set if:
  - EBADF, fd is not a valid message queue descriptor open for writing;
  - EMSGSIZE, the message length *len* exceeds the *mq\_msgsize* attribute of the message queue;
  - EAGAIN, the flag O\_NONBLOCK is set for the descriptor *fd* and the message queue is full;
  - EPERM, the caller context is invalid;
  - EINTR, the service was interrupted by a signal.

## Valid contexts:

- Xenomai kernel-space thread,
- Xenomai user-space thread (switches to primary mode).

#### See also

Specification.

```
3.6.2.7 int mq_setattr ( mqd_t fd, const struct mq_attr *__restrict__ attr, struct mq_attr *__restrict__ oattr )
```

Set flags of a message queue.

This service sets the flags of the *fd* descriptor to the value of the member *mq\_flags* of the **mq\_attr** structure pointed to by *attr*.

The previous value of the message queue attributes are stored at the address *oattr* if it is not *NULL*. Only setting or clearing the O\_NONBLOCK flag has an effect.

#### **Parameters**

fd message queue descriptor;

attr pointer to new attributes (only mq\_flags is used);

oattr if not NULL, address where previous message queue attributes will be stored on success.

#### Return values

0 on success:

- -1 with errno set if:
  - EBADF, fd is not a valid message queue descriptor.

#### See also

Specification.

# 3.6.2.8 ssize\_t mq\_timedreceive ( mqd\_t fd, char \*\_restrict\_\_ buffer, size\_t len, unsigned \*\_restrict\_\_ priop, const struct timespec \*\_restrict\_\_ abs\_timeout )

Attempt, during a bounded time, to receive a message from a message queue.

This service is equivalent to mq\_receive(), except that if the flag *O\_NONBLOCK* is not set for the descriptor *fd* and the message queue is empty, the calling thread is only suspended until the timeout *abs\_timeout* expires.

#### **Parameters**

fd the queue descriptor;

buffer the address where the received message will be stored on success;

len buffer length;

*priop* address where the priority of the received message will be stored on success.

abs\_timeout the timeout, expressed as an absolute value of the CLOCK\_REALTIME clock.

#### **Returns**

the message length, and copy a message at the address buffer on success;

- -1 with no message unqueued and errno set if:
  - EBADF, fd is not a valid descriptor open for reading;
  - EMSGSIZE, the length *len* is lesser than the message queue *mq\_msgsize* attribute;
  - EAGAIN, the queue is empty, and the flag *O\_NONBLOCK* is set for the descriptor *fd*;
  - EPERM, the caller context is invalid;
  - EINTR, the service was interrupted by a signal;
  - ETIMEDOUT, the specified timeout expired.

## Valid contexts:

- Xenomai kernel-space thread,
- Xenomai user-space thread (switches to primary mode).

#### See also

# 3.6.2.9 int mq\_timedsend ( mqd\_t fd, const char \* buffer, size\_t len, unsigned prio, const struct timespec \* abs\_timeout )

Attempt, during a bounded time, to send a message to a message queue.

This service is equivalent to mq\_send(), except that if the message queue is full and the flag *O\_NONBLOCK* is not set for the descriptor *fd*, the calling thread is only suspended until the timeout specified by *abs\_timeout* expires.

#### **Parameters**

```
fd message queue descriptor;
buffer pointer to the message to be sent;
len length of the message;
prio priority of the message;
abs_timeout the timeout, expressed as an absolute value of the CLOCK_REALTIME clock.
```

#### Returns

0 and send a message on success;

- -1 with no message sent and errno set if:
  - EBADF, fd is not a valid message queue descriptor open for writing;
  - EMSGSIZE, the message length exceeds the mq\_msgsize attribute of the message queue;
  - EAGAIN, the flag O\_NONBLOCK is set for the descriptor *fd* and the message queue is full;
  - EPERM, the caller context is invalid;
  - ETIMEDOUT, the specified timeout expired;
  - EINTR, the service was interrupted by a signal.

#### Valid contexts:

- Xenomai kernel-space thread,
- Xenomai user-space thread (switches to primary mode).

#### See also

Specification.

## 3.6.2.10 int mq\_unlink ( const char \* name )

Unlink a message queue.

This service unlinks the message queue named *name*. The message queue is not destroyed until all queue descriptors obtained with the mq\_open() service are closed with the mq\_close() service. However, after a call to this service, the unlinked queue may no longer be reached with the mq\_open() service.

#### **Parameters**

*name* name of the message queue to be unlinked.

3.7 Mutex services. 39

#### Return values

- 0 on success;
- -1 with *errno* set if:
  - EPERM, the caller context is invalid;
  - ENAMETOOLONG, the length of the *name* argument exceeds 64 characters;
  - ENOENT, the message queue does not exist.

#### Valid contexts:

- kernel module initialization or cleanup routine;
- kernel-space cancellation cleanup routine;
- user-space thread (Xenomai threads switch to secondary mode);
- user-space cancellation cleanup routine.

#### See also

Specification.

## 3.7 Mutex services.

Mutex services.

Collaboration diagram for Mutex services.:



## **Functions**

- int pthread\_mutex\_init (pthread\_mutex\_t \*mx, const pthread\_mutexattr\_t \*attr)

  \*Initialize a mutex.
- int pthread\_mutex\_destroy (pthread\_mutex\_t \*mx)

  Destroy a mutex.
- int pthread\_mutex\_trylock (pthread\_mutex\_t \*mx)

  Attempt to lock a mutex.
- int pthread\_mutex\_lock (pthread\_mutex\_t \*mx)
   Lock a mutex.
- int pthread\_mutex\_timedlock (pthread\_mutex\_t \*mx, const struct timespec \*to)

Attempt, during a bounded time, to lock a mutex.

- int pthread\_mutex\_unlock (pthread\_mutex\_t \*mx) *Unlock a mutex.*
- int pthread\_mutexattr\_init (pthread\_mutexattr\_t \*attr) *Initialize a mutex attributes object.*
- int pthread\_mutexattr\_destroy (pthread\_mutexattr\_t \*attr)

  Destroy a mutex attributes object.
- int pthread\_mutexattr\_gettype (const pthread\_mutexattr\_t \*attr, int \*type)

  Get the mutex type attribute from a mutex attributes object.
- int pthread\_mutexattr\_settype (pthread\_mutexattr\_t \*attr, int type)

  Set the mutex type attribute of a mutex attributes object.
- int pthread\_mutexattr\_getprotocol (const pthread\_mutexattr\_t \*attr, int \*proto)

  Get the protocol attribute from a mutex attributes object.
- int pthread\_mutexattr\_setprotocol (pthread\_mutexattr\_t \*attr, int proto)

  Set the protocol attribute of a mutex attributes object.
- int pthread\_mutexattr\_getpshared (const pthread\_mutexattr\_t \*attr, int \*pshared)

  Get the process-shared attribute of a mutex attributes object.
- int pthread\_mutexattr\_setpshared (pthread\_mutexattr\_t \*attr, int pshared)

  Set the process-shared attribute of a mutex attributes object.

## 3.7.1 Detailed Description

Mutex services. A mutex is a MUTual EXclusion device, and is useful for protecting shared data structures from concurrent modifications, and implementing critical sections and monitors.

A mutex has two possible states: unlocked (not owned by any thread), and locked (owned by one thread). A mutex can never be owned by two different threads simultaneously. A thread attempting to lock a mutex that is already locked by another thread is suspended until the owning thread unlocks the mutex first.

Before it can be used, a mutex has to be initialized with pthread\_mutex\_init(). An attribute object, which reference may be passed to this service, allows to select the features of the created mutex, namely its *type* (see pthread\_mutexattr\_settype()), the priority *protocol* it uses (see pthread\_mutexattr\_setprotocol()) and whether it may be shared between several processes (see pthread\_mutexattr\_setpshared()).

By default, Xenomai POSIX skin mutexes are of the normal type, use no priority protocol and may not be shared between several processes.

Note that only <a href="https://pww.nit.google.com">pthread\_mutex\_init()</a> may be used to initialize a mutex, using the static initializer <a href="https://prescription.org/ref">PTHREAD\_MUTEX\_INITIALIZER</a> is not supported.

3.7 Mutex services. 41

## 3.7.2 Function Documentation

## 3.7.2.1 int pthread\_mutex\_destroy ( pthread\_mutex\_t \* mx )

Destroy a mutex.

This service destroys the mutex mx, if it is unlocked and not referenced by any condition variable. The mutex becomes invalid for all mutex services (they all return the EINVAL error) except pthread\_mutex\_init().

#### **Parameters**

*mx* the mutex to be destroyed.

#### **Returns**

0 on success,

an error number if:

- EINVAL, the mutex *mx* is invalid;
- EPERM, the mutex is not process-shared and does not belong to the current process;
- EBUSY, the mutex is locked, or used by a condition variable.

#### See also

Specification.

## 3.7.2.2 int pthread\_mutex\_init ( pthread\_mutex\_t \* mx, const pthread\_mutexattr\_t \* attr )

Initialize a mutex.

This services initializes the mutex mx, using the mutex attributes object attr. If attr is NULL, default attributes are used (see pthread\_mutexattr\_init()).

#### **Parameters**

```
mx the mutex to be initialized;attr the mutex attributes object.
```

## Returns

0 on success,

an error number if:

- EINVAL, the mutex attributes object attr is invalid or uninitialized;
- EBUSY, the mutex mx was already initialized;
- ENOMEM, insufficient memory exists in the system heap to initialize the mutex, increase CONFIG\_XENO\_OPT\_SYS\_HEAPSZ.
- EAGAIN, insufficient memory exists in the semaphore heap to initialize the mutex, increase CONFIG\_XENO\_OPT\_GLOBAL\_SEM\_HEAPSZ for a process-shared mutex, or CONFG\_XENO\_OPT\_SEM\_HEAPSZ for a process-private mutex.

#### See also

## 3.7.2.3 int pthread\_mutex\_lock ( pthread\_mutex\_t \* mx )

Lock a mutex.

This service attempts to lock the mutex mx. If the mutex is free, it becomes locked. If it was locked by another thread than the current one, the current thread is suspended until the mutex is unlocked. If it was already locked by the current mutex, the behaviour of this service depends on the mutex type:

- for mutexes of the PTHREAD\_MUTEX\_NORMAL type, this service deadlocks;
- for mutexes of the *PTHREAD\_MUTEX\_ERRORCHECK* type, this service returns the EDEADLK error number;
- for mutexes of the *PTHREAD\_MUTEX\_RECURSIVE* type, this service increments the lock recursion count and returns 0.

#### **Parameters**

*mx* the mutex to be locked.

#### **Returns**

0 on success

an error number if:

- EPERM, the caller context is invalid;
- EINVAL, the mutex *mx* is invalid;
- EPERM, the mutex is not process-shared and does not belong to the current process;
- EDEADLK, the mutex is of the *PTHREAD\_MUTEX\_ERRORCHECK* type and was already locked by the current thread;
- EAGAIN, the mutex is of the *PTHREAD\_MUTEX\_RECURSIVE* type and the maximum number of recursive locks has been exceeded.

#### Valid contexts:

- Xenomai kernel-space thread;
- Xenomai user-space thread (switches to primary mode).

#### See also

Specification.

## 3.7.2.4 int pthread\_mutex\_timedlock ( pthread\_mutex\_t \* mx, const struct timespec \* to )

Attempt, during a bounded time, to lock a mutex.

This service is equivalent to pthread\_mutex\_lock(), except that if the mutex mx is locked by another thread than the current one, this service only suspends the current thread until the timeout specified by to expires.

## **Parameters**

mx the mutex to be locked;

to the timeout, expressed as an absolute value of the CLOCK\_REALTIME clock.

3.7 Mutex services. 43

#### Returns

0 on success;

an error number if:

- EPERM, the caller context is invalid;
- EINVAL, the mutex *mx* is invalid;
- EPERM, the mutex is not process-shared and does not belong to the current process;
- ETIMEDOUT, the mutex could not be locked and the specified timeout expired;
- EDEADLK, the mutex is of the *PTHREAD\_MUTEX\_ERRORCHECK* type and the mutex was already locked by the current thread;
- EAGAIN, the mutex is of the *PTHREAD\_MUTEX\_RECURSIVE* type and the maximum number of recursive locks has been exceeded.

#### Valid contexts:

- Xenomai kernel-space thread;
- Xenomai user-space thread (switches to primary mode).

#### See also

Specification.

## 3.7.2.5 int pthread\_mutex\_trylock ( pthread\_mutex\_t \* mx )

Attempt to lock a mutex.

This service is equivalent to pthread\_mutex\_lock(), except that if the mutex mx is locked by another thread than the current one, this service returns immediately.

## **Parameters**

mx the mutex to be locked.

#### **Returns**

0 on success;

an error number if:

- EPERM, the caller context is invalid;
- EINVAL, the mutex is invalid;
- EPERM, the mutex is not process-shared and does not belong to the current process;
- EBUSY, the mutex was locked by another thread than the current one;
- EAGAIN, the mutex is recursive, and the maximum number of recursive locks has been exceeded.

#### Valid contexts:

- Xenomai kernel-space thread,
- Xenomai user-space thread (switches to primary mode).

#### See also

## 3.7.2.6 int pthread\_mutex\_unlock ( pthread\_mutex\_t \* mx )

Unlock a mutex.

This service unlocks the mutex *mx*. If the mutex is of the *PTHREAD\_MUTEX\_RECURSIVE type* and the locking recursion count is greater than one, the lock recursion count is decremented and the mutex remains locked.

Attempting to unlock a mutex which is not locked or which is locked by another thread than the current one yields the EPERM error, whatever the mutex *type* attribute.

#### **Parameters**

*mx* the mutex to be released.

#### Returns

0 on success;

an error number if:

- EPERM, the caller context is invalid;
- EINVAL, the mutex mx is invalid;
- EPERM, the mutex was not locked by the current thread.

#### Valid contexts:

- Xenomai kernel-space thread,
- kernel-space cancellation cleanup routine,
- Xenomai user-space thread (switches to primary mode),
- user-space cancellation cleanup routine.

#### See also

Specification.

## 3.7.2.7 int pthread\_mutexattr\_destroy ( pthread\_mutexattr\_t \* attr )

Destroy a mutex attributes object.

This service destroys the mutex attributes object *attr*. The object becomes invalid for all mutex services (they all return EINVAL) except pthread\_mutexattr\_init().

#### **Parameters**

attr the initialized mutex attributes object to be destroyed.

#### Returns

0 on success;

an error number if:

• EINVAL, the mutex attributes object *attr* is invalid.

#### See also

3.7 Mutex services. 45

## 3.7.2.8 int pthread\_mutexattr\_getprotocol ( const pthread\_mutexattr\_t \* attr, int \* proto )

Get the protocol attribute from a mutex attributes object.

This service stores, at the address *proto*, the value of the *protocol* attribute in the mutex attributes object *attr*.

The *protcol* attribute may only be one of *PTHREAD\_PRIO\_NONE* or *PTHREAD\_PRIO\_INHERIT*. See <a href="mailto:pthread\_mutexattr\_setprotocol">pthread\_mutexattr\_setprotocol</a>() for the meaning of these two constants.

#### **Parameters**

attr an initialized mutex attributes object;proto address where the value of the protocol attribute will be stored on success.

#### **Returns**

0 on success, an error number if:

- EINVAL, the proto address is invalid;
- EINVAL, the mutex attributes object *attr* is invalid.

#### See also

Specification.

## 3.7.2.9 int pthread\_mutexattr\_getpshared ( const pthread\_mutexattr\_t \* attr, int \* pshared )

Get the process-shared attribute of a mutex attributes object.

This service stores, at the address *pshared*, the value of the *pshared* attribute in the mutex attributes object *attr*.

The *pashared* attribute may only be one of *PTHREAD\_PROCESS\_PRIVATE* or *PTHREAD\_-PROCESS\_SHARED*. See <a href="mailto:pthread\_mutexattr\_setpshared">pthread\_mutexattr\_setpshared</a>() for the meaning of these two constants.

## **Parameters**

attr an initialized mutex attributes object;pshared address where the value of the pshared attribute will be stored on success.

## Returns

0 on success;

an error number if:

- EINVAL, the *pshared* address is invalid;
- EINVAL, the mutex attributes object *attr* is invalid.

#### See also

## 3.7.2.10 int pthread\_mutexattr\_gettype ( const pthread\_mutexattr\_t \* attr, int \* type )

Get the mutex type attribute from a mutex attributes object.

This service stores, at the address *type*, the value of the *type* attribute in the mutex attributes object *attr*.

See pthread\_mutex\_lock() and pthread\_mutex\_unlock() documentations for a description of the values of the *type* attribute and their effect on a mutex.

#### **Parameters**

attr an initialized mutex attributes object,type address where the type attribute value will be stored on success.

#### Returns

0 on sucess,

an error number if:

- EINVAL, the *type* address is invalid;
- EINVAL, the mutex attributes object *attr* is invalid.

#### See also

Specification.

## 3.7.2.11 int pthread\_mutexattr\_init ( pthread\_mutexattr\_t \* attr )

Initialize a mutex attributes object.

This services initializes the mutex attributes object *attr* with default values for all attributes. Default value are :

- for the *type* attribute, *PTHREAD\_MUTEX\_NORMAL*;
- for the *protocol* attribute, *PTHREAD\_PRIO\_NONE*;
- for the *pshared* attribute, *PTHREAD\_PROCESS\_PRIVATE*.

If this service is called specifying a mutex attributes object that was already initialized, the attributes object is reinitialized.

## **Parameters**

attr the mutex attributes object to be initialized.

#### Returns

0 on success;

an error number if:

• ENOMEM, the mutex attributes object pointer attr is NULL.

#### See also

3.7 Mutex services. 47

## 3.7.2.12 int pthread\_mutexattr\_setprotocol ( pthread\_mutexattr\_t \* attr, int proto )

Set the protocol attribute of a mutex attributes object.

This service set the *type* attribute of the mutex attributes object *attr*.

#### **Parameters**

attr an initialized mutex attributes object,

*proto* value of the *protocol* attribute, may be one of:

- PTHREAD\_PRIO\_NONE, meaning that a mutex created with the attributes object *attr* will not follow any priority protocol;
- PTHREAD\_PRIO\_INHERIT, meaning that a mutex created with the attributes object *attr*, will follow the priority inheritance protocol.

The value PTHREAD\_PRIO\_PROTECT (priority ceiling protocol) is unsupported.

#### **Returns**

0 on success.

an error number if:

- EINVAL, the mutex attributes object attr is invalid;
- ENOTSUP, the value of *proto* is unsupported;
- EINVAL, the value of *proto* is invalid.

#### See also

Specification.

## 3.7.2.13 int pthread\_mutexattr\_setpshared ( pthread\_mutexattr\_t \* attr, int pshared )

Set the process-shared attribute of a mutex attributes object.

This service set the *pshared* attribute of the mutex attributes object *attr*.

#### **Parameters**

attr an initialized mutex attributes object.

*pshared* value of the *pshared* attribute, may be one of:

- PTHREAD\_PROCESS\_PRIVATE, meaning that a mutex created with the attributes object *attr* will only be accessible by threads within the same process as the thread that initialized the mutex;
- PTHREAD\_PROCESS\_SHARED, meaning that a mutex created with the attributes object *attr* will be accessible by any thread that has access to the memory where the mutex is allocated.

#### Returns

0 on success,

an error status if:

- EINVAL, the mutex attributes object attr is invalid;
- EINVAL, the value of *pshared* is invalid.

#### See also

## 3.7.2.14 int pthread\_mutexattr\_settype ( pthread\_mutexattr\_t \* attr, int type )

Set the mutex type attribute of a mutex attributes object.

This service set the *type* attribute of the mutex attributes object *attr*.

See pthread\_mutex\_lock() and pthread\_mutex\_unlock() documentations for a description of the values of the *type* attribute and their effect on a mutex.

The PTHREAD\_MUTEX\_DEFAULT default type is the same as PTHREAD\_MUTEX\_NORMAL. Note that using a Xenomai POSIX skin recursive mutex with a Xenomai POSIX skin condition variable is safe (see pthread\_cond\_wait() documentation).

#### **Parameters**

attr an initialized mutex attributes object,type value of the type attribute.

#### Returns

0 on success,

an error number if:

- EINVAL, the mutex attributes object attr is invalid;
- EINVAL, the value of *type* is invalid for the *type* attribute.

#### See also

Specification.

## 3.8 Threads scheduling services.

Thread scheduling services.

Collaboration diagram for Threads scheduling services.:



## **Functions**

- int sched\_get\_priority\_min (int policy)

  Get minimum priority of the specified scheduling policy.
- int sched\_get\_priority\_max (int policy)

  Get maximum priority of the specified scheduling policy.

- int sched\_rr\_get\_interval (int pid, struct timespec \*interval)

  Get the round-robin scheduling time slice.
- int pthread\_getschedparam (pthread\_t tid, int \*pol, struct sched\_param \*par)

  Get the scheduling policy and parameters of the specified thread.
- int pthread\_getschedparam\_ex (pthread\_t tid, int \*pol, struct sched\_param\_ex \*par)

  Get the extended scheduling policy and parameters of the specified thread.
- int pthread\_setschedparam (pthread\_t tid, int pol, const struct sched\_param \*par)

  Set the scheduling policy and parameters of the specified thread.
- int pthread\_setschedparam\_ex (pthread\_t tid, int pol, const struct sched\_param\_ex \*par)

  Set the extended scheduling policy and parameters of the specified thread.
- int sched\_yield (void) Yield the processor.

## 3.8.1 Detailed Description

Thread scheduling services. Xenomai POSIX skin supports the scheduling policies SCHED\_FIFO, SCHED\_RR, SCHED\_SPORADIC and SCHED\_OTHER.

The SCHED\_OTHER policy is mainly useful for user-space non-realtime activities that need to synchronize with real-time activities.

The SCHED\_RR policy is only effective if the time base is periodic (i.e. if configured with the compilation constant *CONFIG\_XENO\_OPT\_POSIX\_PERIOD* or the *xeno\_nucleus* module parameter *tick\_arg* set to a non null value). The SCHED\_RR round-robin time slice is configured with the *xeno\_posix* module parameter *time\_slice*, as a count of system timer clock ticks.

The SCHED\_SPORADIC policy provides a mean to schedule aperiodic or sporadic threads in periodic-based systems.

The scheduling policy and priority of a thread is set when creating a thread, by using thread creation attributes (see pthread\_attr\_setinheritsched(), pthread\_attr\_setschedpolicy() and pthread\_attr\_setschedparam()), or when the thread is already running by using the service pthread\_setschedparam().

#### See also

Specification.

## 3.8.2 Function Documentation

#### 3.8.2.1 int pthread\_getschedparam ( pthread\_t tid, int \* pol, struct sched\_param \* par )

Get the scheduling policy and parameters of the specified thread.

This service returns, at the addresses *pol* and *par*, the current scheduling policy and scheduling parameters (i.e. priority) of the Xenomai POSIX skin thread *tid*. If this service is called from user-space and *tid* is not the identifier of a Xenomai POSIX skin thread, this service fallback to Linux regular pthread\_getschedparam service.

#### **Parameters**

```
tid target thread;pol address where the scheduling policy of tid is stored on success;par address where the scheduling parameters of tid is stored on success.
```

#### Returns

0 on success; an error number if:

• ESRCH, tid is invalid.

#### See also

Specification.

# 3.8.2.2 int pthread\_getschedparam\_ex ( pthread\_t tid, int \* pol, struct sched\_param\_ex \* par )

Get the extended scheduling policy and parameters of the specified thread.

This service is an extended version of pthread\_getschedparam(), that also supports Xenomai-specific or additional POSIX scheduling policies, which are not available with the host Linux environment.

Typically, SCHED\_SPORADIC parameters can be retrieved from this call.

## **Parameters**

```
tid target thread;pol address where the scheduling policy of tid is stored on success;par address where the scheduling parameters of tid is stored on success.
```

## Returns

0 on success; an error number if:

• ESRCH, tid is invalid.

#### See also

Specification.

Referenced by pthread\_create().

## 3.8.2.3 int pthread\_setschedparam ( pthread\_t tid, int pol, const struct sched\_param \* par )

Set the scheduling policy and parameters of the specified thread.

This service set the scheduling policy of the Xenomai POSIX skin thread *tid* to the value *pol*, and its scheduling parameters (i.e. its priority) to the value pointed to by *par*.

When used in user-space, passing the current thread ID as *tid* argument, this service turns the current thread into a Xenomai POSIX skin thread. If *tid* is neither the identifier of the current

thread nor the identifier of a Xenomai POSIX skin thread this service falls back to the regular pthread\_setschedparam() service, hereby causing the current thread to switch to secondary mode if it is Xenomai thread.

#### **Parameters**

```
tid target thread;pol scheduling policy, one of SCHED_FIFO, SCHED_RR or SCHED_OTHER;par scheduling parameters address.
```

#### Returns

0 on success;

an error number if:

- ESRCH, tid is invalid;
- EINVAL, pol or par->sched\_priority is invalid;
- EAGAIN, in user-space, insufficient memory exists in the system heap, increase CONFIG\_XENO\_OPT\_SYS\_HEAPSZ;
- EFAULT, in user-space, par is an invalid address;
- EPERM, in user-space, the calling process does not have superuser permissions.

#### See also

Specification.

#### Note

When creating or shadowing a Xenomai thread for the first time in user-space, Xenomai installs a handler for the SIGWINCH signal. If you had installed a handler before that, it will be automatically called by Xenomai for SIGWINCH signals that it has not sent.

If, however, you install a signal handler for SIGWINCH after creating or shadowing the first Xenomai thread, you have to explicitly call the function xeno\_sigwinch\_handler at the beginning of your signal handler, using its return to know if the signal was in fact an internal signal of Xenomai (in which case it returns 1), or if you should handle the signal (in which case it returns 0). xeno\_sigwinch\_handler prototype is:

## int xeno\_sigwinch\_handler(int sig, siginfo\_t \*si, void \*ctxt);

Which means that you should register your handler with sigaction, using the SA\_SIGINFO flag, and pass all the arguments you received to xeno\_sigwinch\_handler.

Referenced by pthread\_setschedparam\_ex().

# 3.8.2.4 int pthread\_setschedparam\_ex ( pthread\_t tid, int pol, const struct sched\_param\_ex \* par )

Set the extended scheduling policy and parameters of the specified thread.

This service is an extended version of pthread\_setschedparam(), that supports Xenomai-specific or additional POSIX scheduling policies, which are not available with the host Linux environment.

Typically, a Xenomai thread policy can be set to SCHED\_SPORADIC using this call.

#### **Parameters**

```
tid target thread;pol address where the scheduling policy of tid is stored on success;par address where the scheduling parameters of tid is stored on success.
```

## Returns

0 on success;

an error number if:

- ESRCH, tid is invalid.
- EINVAL, par contains invalid parameters.
- ENOMEM, lack of memory to perform the operation.

#### See also

```
Specification.
```

References pthread\_setschedparam().

## 3.8.2.5 int sched\_get\_priority\_max ( int policy )

Get maximum priority of the specified scheduling policy.

This service returns the maximum priority of the scheduling policy policy.

## **Parameters**

policy scheduling policy, one of SCHED\_FIFO, SCHED\_RR, or SCHED\_OTHER.

## Return values

0 on success;

- -1 with *errno* set if:
  - EINVAL, policy is invalid.

## See also

```
Specification.
```

## 3.8.2.6 int sched\_get\_priority\_min ( int policy )

Get minimum priority of the specified scheduling policy.

This service returns the minimum priority of the scheduling policy policy.

## **Parameters**

policy scheduling policy, one of SCHED\_FIFO, SCHED\_RR, or SCHED\_OTHER.

#### **Return values**

0 on success;

- -1 with *errno* set if:
  - EINVAL, policy is invalid.

#### See also

```
Specification.
```

## 3.8.2.7 int sched\_rr\_get\_interval ( int pid, struct timespec \* interval )

Get the round-robin scheduling time slice.

This service returns the time quantum used by Xenomai POSIX skin SCHED\_RR scheduling policy.

In kernel-space, this service only works if pid is zero, in user-space, round-robin scheduling policy is not supported, and this service not implemented.

#### **Parameters**

```
pid must be zero;
```

interval address where the round-robin scheduling time quantum will be returned on success.

#### Return values

```
0 on success;
```

- -1 with errno set if:
  - ESRCH, pid is invalid (not 0).

#### See also

```
Specification.
```

## 3.8.2.8 int sched\_yield (void)

Yield the processor.

This function move the current thread at the end of its priority group.

## Return values

0

## See also

Specification.

## 3.9 Semaphores services.

Semaphores services.

Collaboration diagram for Semaphores services.:



## **Functions**

- int sem\_init (sem\_t \*sm, int pshared, unsigned value) *Initialize an unnamed semaphore.*
- int sem\_destroy (sem\_t \*sm)

  Destroy an unnamed semaphore.
- sem\_t \* sem\_open (const char \*name, int oflags,...)

  Open a named semaphore.
- int sem\_close (sem\_t \*sm)

  Close a named semaphore.
- int sem\_unlink (const char \*name) *Unlink a named semaphore.*
- int sem\_trywait (sem\_t \*sm)

  Attempt to lock a semaphore.
- int sem\_wait (sem\_t \*sm)

  Lock a semaphore.
- int sem\_timedwait (sem\_t \*sm, const struct timespec \*abs\_timeout)

  Attempt, during a bounded time, to lock a semaphore.
- int sem\_post (sem\_t \*sm) *Unlock a semaphore.*
- int sem\_getvalue (sem\_t \*sm, int \*value)

  Get the value of a semaphore.

## 3.9.1 Detailed Description

Semaphores services. Semaphores are counters for resources shared between threads. The basic operations on semaphores are: increment the counter atomically, and wait until the counter is non-null and decrement it atomically.

Semaphores have a maximum value past which they cannot be incremented. The macro *SEM\_-VALUE\_MAX* is defined to be this maximum value.

#### 3.9.2 Function Documentation

## 3.9.2.1 int sem\_close ( sem\_t \* sm )

Close a named semaphore.

This service closes the semaphore *sm*. The semaphore is destroyed only when unlinked with a call to the sem\_unlink() service and when each call to sem\_open() matches a call to this service.

When a semaphore is destroyed, the memory it used is returned to the system heap, so that further references to this semaphore are not guaranteed to fail, as is the case for unnamed semaphores.

This service fails if *sm* is an unnamed semaphore.

#### **Parameters**

sm the semaphore to be closed.

#### Return values

0 on success;

- -1 with errno set if:
  - EINVAL, the semaphore *sm* is invalid or is an unnamed semaphore.

#### See also

Specification.

## 3.9.2.2 int sem\_destroy ( sem\_t \* sm )

Destroy an unnamed semaphore.

This service destroys the semaphore *sm*. Threads currently blocked on *sm* are unblocked and the service they called return -1 with *errno* set to EINVAL. The semaphore is then considered invalid by all semaphore services (they all fail with *errno* set to EINVAL) except sem\_init().

This service fails if *sm* is a named semaphore.

#### **Parameters**

sm the semaphore to be destroyed.

#### **Return values**

0 on success,

- -1 with errno set if:
  - EINVAL, the semaphore *sm* is invalid or a named semaphore;
  - EPERM, the semaphore *sm* is not process-shared and does not belong to the current process.

## See also

#### 3.9.2.3 int sem\_getvalue ( sem\_t \* sm, int \* value )

Get the value of a semaphore.

This service stores at the address *value*, the current count of the semaphore *sm*. The state of the semaphore is unchanged.

If the semaphore is currently locked, the value stored is zero.

#### **Parameters**

sm a semaphore;

*value* address where the semaphore count will be stored on success.

#### **Return values**

0 on success:

- -1 with errno set if:
  - EINVAL, the semaphore is invalid or uninitialized;
  - EPERM, the semaphore *sm* is not process-shared and does not belong to the current process.

#### See also

Specification.

## 3.9.2.4 int sem\_init ( sem\_t \* sm, int pshared, unsigned value )

Initialize an unnamed semaphore.

This service initializes the semaphore *sm*, with the value *value*.

This service fails if *sm* is already initialized or is a named semaphore.

#### **Parameters**

sm the semaphore to be initialized;

pshared if zero, means that the new semaphore may only be used by threads in the same
process as the thread calling sem\_init(); if non zero, means that the new semaphore may
be used by any thread that has access to the memory where the semaphore is allocated.

value the semaphore initial value.

#### Return values

0 on success,

- -1 with errno set if:
  - EBUSY, the semaphore *sm* was already initialized;
  - ENOSPC, insufficient memory exists in the system heap to initialize the semaphore, increase CONFIG\_XENO\_OPT\_SYS\_HEAPSZ;
  - EINVAL, the *value* argument exceeds *SEM\_VALUE\_MAX*.

#### See also

#### 3.9.2.5 sem\_t\* sem\_open ( const char \* name, int oflags, ... )

Open a named semaphore.

This service establishes a connection between the semaphore named *name* and the calling context (kernel-space as a whole, or user-space process).

If no semaphore named *name* exists and *oflags* has the *O\_CREAT* bit set, the semaphore is created by this function, using two more arguments:

- a mode argument, of type mode\_t, currently ignored;
- a *value* argument, of type **unsigned**, specifying the initial value of the created semaphore.

If *oflags* has the two bits *O\_CREAT* and *O\_EXCL* set and the semaphore already exists, this service fails.

*name* may be any arbitrary string, in which slashes have no particular meaning. However, for portability, using a name which starts with a slash and contains no other slash is recommended.

If sem\_open() is called from the same context (kernel-space as a whole, or user-space process) several times with the same value of *name*, the same address is returned.

#### **Parameters**

```
name the name of the semaphore to be created;oflags flags.
```

#### Returns

the address of the named semaphore on success; SEM\_FAILED with *errno* set if:

- ENAMETOOLONG, the length of the *name* argument exceeds 64 characters;
- EEXIST, the bits *O\_CREAT* and *O\_EXCL* were set in *oflags* and the named semaphore already exists;
- ENOENT, the bit *O\_CREAT* is not set in *oflags* and the named semaphore does not exist;
- ENOSPC, insufficient memory exists in the system heap to create the semaphore, increase CONFIG\_XENO\_OPT\_SYS\_HEAPSZ;
- EINVAL, the *value* argument exceeds *SEM\_VALUE\_MAX*.

#### See also

Specification.

#### 3.9.2.6 int sem\_post ( sem\_t \* sm )

Unlock a semaphore.

This service unlocks the semaphore *sm*.

If no thread is currently blocked on this semaphore, its count is incremented, otherwise the highest priority thread is unblocked.

#### **Parameters**

*sm* the semaphore to be unlocked.

#### **Return values**

- 0 on success;
- -1 with errno set if:
  - EINVAL, the specified semaphore is invalid or uninitialized;
  - EPERM, the semaphore *sm* is not process-shared and does not belong to the current process;
  - EAGAIN, the semaphore count is *SEM\_VALUE\_MAX*.

#### See also

Specification.

## 3.9.2.7 int sem\_timedwait ( sem\_t \* sm, const struct timespec \* abs\_timeout )

Attempt, during a bounded time, to lock a semaphore.

This serivce is equivalent to sem\_wait(), except that the caller is only blocked until the timeout abs\_timeout expires.

#### **Parameters**

sm the semaphore to be locked;
abs\_timeout the timeout, expressed as an absolute value of the CLOCK\_REALTIME clock.

#### Return values

0 on success;

- -1 with errno set if:
  - EPERM, the caller context is invalid;
  - EINVAL, the semaphore is invalid or uninitialized;
  - EINVAL, the specified timeout is invalid;
  - EPERM, the semaphore *sm* is not process-shared and does not belong to the current process;
  - EINTR, the caller was interrupted by a signal while blocked in this service;
  - ETIMEDOUT, the semaphore could not be locked and the specified timeout expired.

#### Valid contexts:

- Xenomai kernel-space thread,
- Xenomai user-space thread (switches to primary mode).

#### See also

Specification.

## 3.9.2.8 int sem\_trywait ( sem\_t \* sm )

Attempt to lock a semaphore.

This service is equivalent to sem\_wait(), except that it returns immediately if the semaphore *sm* is currently locked, and that it is not a cancellation point.

#### **Parameters**

sm the semaphore to be locked.

## **Return values**

- 0 on success;
- -1 with errno set if:
  - EINVAL, the specified semaphore is invalid or uninitialized;
  - EPERM, the semaphore *sm* is not process-shared and does not belong to the current process;
  - EAGAIN, the specified semaphore is currently locked.

## See also

Specification.

## 3.9.2.9 int sem\_unlink ( const char \* name )

Unlink a named semaphore.

This service unlinks the semaphore named *name*. This semaphore is not destroyed until all references obtained with sem\_open() are closed by calling sem\_close(). However, the unlinked semaphore may no longer be reached with the sem\_open() service.

When a semaphore is destroyed, the memory it used is returned to the system heap, so that further references to this semaphore are not guaranteed to fail, as is the case for unnamed semaphores.

#### **Parameters**

name the name of the semaphore to be unlinked.

## Return values

- 0 on success:
- -1 with errno set if:
  - ENAMETOOLONG, the length of the name argument exceeds 64 characters;
  - ENOENT, the named semaphore does not exist.

#### See also

Specification.

#### 3.9.2.10 int sem\_wait ( sem\_t \* sm )

Lock a semaphore.

This service locks the semaphore *sm* if it is currently unlocked (i.e. if its value is greater than 0). If the semaphore is currently locked, the calling thread is suspended until the semaphore is unlocked, or a signal is delivered to the calling thread.

This service is a cancellation point for Xenomai POSIX skin threads (created with the pthread\_create() service). When such a thread is cancelled while blocked in a call to this service, the semaphore state is left unchanged before the cancellation cleanup handlers are called.

#### **Parameters**

sm the semaphore to be locked.

#### Return values

0 on success;

- -1 with errno set if:
  - EPERM, the caller context is invalid;
  - EINVAL, the semaphore is invalid or uninitialized;
  - EPERM, the semaphore *sm* is not process-shared and does not belong to the current process;
  - EINTR, the caller was interrupted by a signal while blocked in this service.

## Valid contexts:

- Xenomai kernel-space thread,
- Xenomai user-space thread (switches to primary mode).

#### See also

Specification.

## 3.10 Shared memory services.

Shared memory services.

Collaboration diagram for Shared memory services.:



## **Functions**

- int shm\_open (const char \*name, int oflags, mode\_t mode)

  Open a shared memory object.
- int close (int fd)

  Close a file descriptor.
- int shm\_unlink (const char \*name) *Unlink a shared memory object.*
- int ftruncate (int fd, off\_t len)

Truncate a file or shared memory object to a specified length.

- void \* mmap (void \*addr, size\_t len, int prot, int flags, int fd, off\_t off)

  Map pages of memory.
- int munmap (void \*addr, size\_t len) *Unmap pages of memory.*

## 3.10.1 Detailed Description

Shared memory services. Shared memory objects are memory regions that can be mapped into processes address space, allowing them to share these regions as well as to share them with kernel-space modules.

Shared memory are also the only mean by which anonymous POSIX skin synchronization objects (mutexes, condition variables or semaphores) may be shared between kernel-space modules and user-space processes, or between several processes.

## 3.10.2 Function Documentation

## 3.10.2.1 int close (int fd)

Close a file descriptor.

This service closes the file descriptor fd. In kernel-space, this service only works for file descriptors opened with shm\_open(), i.e. shared memory objects. A shared memory object is only destroyed once all file descriptors are closed with this service, it is unlinked with the shm\_unlink() service, and all mappings are unmapped with the munmap() service.

## **Parameters**

fd file descriptor.

#### Return values

0 on success;

- -1 with errno set if:
  - EBADF, *fd* is not a valid file descriptor (in kernel-space, it was not obtained with shm\_open());
  - EPERM, the caller context is invalid.

#### Valid contexts:

- kernel module initialization or cleanup routine;
- kernel-space cancellation cleanup routine;
- user-space thread (Xenomai threads switch to secondary mode);
- user-space cancellation cleanup routine.

## See also

Specification.

Referenced by shm\_open().

#### 3.10.2.2 int ftruncate ( int fd, off\_t len )

Truncate a file or shared memory object to a specified length.

When used in kernel-space, this service set to *len* the size of a shared memory object opened with the shm\_open() service. In user-space this service falls back to Linux regular ftruncate service for file descriptors not obtained with shm\_open(). When this service is used to increase the size of a shared memory object, the added space is zero-filled.

Shared memory are suitable for direct memory access (allocated in physically contiguous memory) if O\_DIRECT was passed to shm\_open.

Shared memory objects may only be resized if they are not currently mapped.

#### **Parameters**

```
fd file descriptor;
```

len new length of the underlying file or shared memory object.

#### **Return values**

0 on success;

- -1 with errno set if:
  - EBADF, fd is not a valid file descriptor;
  - EPERM, the caller context is invalid;
  - EINVAL, the specified length is invalid;
  - EINVAL, the architecture can not honour the O\_DIRECT flag;
  - EINTR, this service was interrupted by a signal;
  - EBUSY, *fd* is a shared memory object descriptor and the underlying shared memory is currently mapped;
  - EFBIG, allocation of system memory failed.

#### Valid contexts:

- kernel module initialization or cleanup routine;
- user-space thread (Xenomai threads switch to secondary mode).

#### See also

```
Specification.
```

Referenced by shm\_open().

## 3.10.2.3 void\* mmap (void\* addr, size\_t len, int prot, int flags, int fd, off\_t off)

Map pages of memory.

This service allow shared memory regions to be accessed by the caller.

When used in kernel-space, this service returns the address of the offset *off* of the shared memory object underlying *fd*. The protection flags *prot*, are only checked for consistency with *fd* open flags, but memory protection is unsupported. An existing shared memory region exists before it is mapped, this service only increments a reference counter.

The only supported value for *flags* is *MAP\_SHARED*.

When used in user-space, this service maps the specified shared memory region into the caller address-space. If fd is not a shared memory object descriptor (i.e. not obtained with  $shm_open()$ ), this service falls back to the regular Linux mmap service.

#### **Parameters**

addr ignored.

*len* size of the shared memory region to be mapped.

- PROT\_NONE, meaning that the mapped region can not be accessed;
- PROT\_READ, meaning that the mapped region can be read;
- PROT\_WRITE, meaning that the mapped region can be written;
- PROT\_EXEC, meaning that the mapped region can be executed.

*flags* only MAP\_SHARED is accepted, meaning that the mapped memory region is shared. *fd* file descriptor, obtained with shm\_open().

off offset in the shared memory region.

## Return values

0 on success;

MAP\_FAILED with errno set if:

- EINVAL, *len* is null or *addr* is not a multiple of *PAGE\_SIZE*;
- EBADF, fd is not a shared memory object descriptor (obtained with shm\_open());
- EPERM, the caller context is invalid;
- ENOTSUP, *flags* is not *MAP\_SHARED*;
- EACCES, *fd* is not opened for reading or is not opend for writing and PROT\_WRITE is set in *prot*;
- EINTR, this service was interrupted by a signal;
- ENXIO, the range [off;off+len) is invalid for the shared memory region specified by *fd*;
- EAGAIN, insufficient memory exists in the system heap to create the mapping, increase CONFIG\_XENO\_OPT\_SYS\_HEAPSZ.

#### Valid contexts:

- kernel module initialization or cleanup routine;
- user-space thread (Xenomai threads switch to secondary mode).

## See also

Specification.

## 3.10.2.4 int munmap (void \* addr, size\_t len)

Unmap pages of memory.

This service unmaps the shared memory region [addr;addr+len) from the caller address-space.

When called from kernel-space the memory region remain accessible as long as it exists, and this service only decrements a reference counter.

When called from user-space, if the region is not a shared memory region, this service falls back to the regular Linux munmap() service.

#### **Parameters**

addr start address of shared memory area;len length of the shared memory area.

#### Return values

0 on success;

- -1 with errno set if:
  - EINVAL, *len* is null, *addr* is not a multiple of the page size or the range [addr;addr+len) is not a mapped region;
  - ENXIO, *addr* is not the address of a shared memory area;
  - EPERM, the caller context is invalid;
  - EINTR, this service was interrupted by a signal.

#### Valid contexts:

- kernel module initialization or cleanup routine;
- kernel-space cancellation cleanup routine;
- user-space thread (Xenomai threads switch to secondary mode);
- user-space cancellation cleanup routine.

#### See also

Specification.

## 3.10.2.5 int shm\_open ( const char \* name, int oflags, mode\_t mode )

Open a shared memory object.

This service establishes a connection between a shared memory object and a file descriptor. Further use of this descriptor will allow to dimension and map the shared memory into the calling context address space.

One of the following access mode should be set in *oflags:* 

- O\_RDONLY, meaning that the shared memory object may only be mapped with the PROT\_-READ flag;
- O\_WRONLY, meaning that the shared memory object may only be mapped with the PROT\_-WRITE flag;
- O\_RDWR, meaning that the shared memory object may be mapped with the PROT\_READ | PROT\_WRITE flag.

If no shared memory object named *name* exists, and *oflags* has the *O\_CREAT* bit set, the shared memory object is created by this function.

If *oflags* has the two bits *O\_CREAT* and *O\_EXCL* set and the shared memory object alread exists, this service fails.

If *oflags* has the bit *O\_TRUNC* set, the shared memory exists and is not currently mapped, its size is truncated to 0.

If *oflags* has the bit *O\_DIRECT* set, the shared memory will be suitable for direct memory access (allocated in physically contiguous memory).

*name* may be any arbitrary string, in which slashes have no particular meaning. However, for portability, using a name which starts with a slash and contains no other slash is recommended.

#### **Parameters**

```
name name of the shared memory object to open;oflags flags.mode ignored.
```

#### Returns

a file descriptor on success;

- -1 with errno set if:
  - ENAMETOOLONG, the length of the *name* argument exceeds 64 characters;
  - EEXIST, the bits *O\_CREAT* and *O\_EXCL* were set in *oflags* and the shared memory object already exists;
  - ENOENT, the bit *O\_CREAT* is not set in *oflags* and the shared memory object does not exist;
  - ENOSPC, insufficient memory exists in the system heap to create the shared memory object, increase CONFIG\_XENO\_OPT\_SYS\_HEAPSZ;
  - EPERM, the caller context is invalid;
  - EINVAL, the O\_TRUNC flag was specified and the shared memory object is currently mapped;
  - EMFILE, too many descriptors are currently open.

## Valid contexts:

- kernel module initialization or cleanup routine;
- user-space thread (Xenomai threads switch to secondary mode).

#### See also

```
Specification.
```

References close(), and ftruncate().

## 3.10.2.6 int shm\_unlink ( const char \* name )

Unlink a shared memory object.

This service unlinks the shared memory object named *name*. The shared memory object is not destroyed until every file descriptor obtained with the <a href="https://shm.open">shm.open</a>() service is closed with the <a href="https://shm.open">close()</a>) service and all mappings done with <a href="mmap">mmap()</a>) are unmapped with <a href="mmap">munmap()</a>). However, after a call to this service, the unlinked shared memory object may no longer be reached with the <a href="map">shm.open()</a>) service.

#### **Parameters**

name name of the shared memory obect to be unlinked.

## Return values

- 0 on success;
- -1 with *errno* set if:
  - EPERM, the caller context is invalid;
  - ENAMETOOLONG, the length of the *name* argument exceeds 64 characters;
  - ENOENT, the shared memory object does not exist.

## Valid contexts:

- kernel module initialization or cleanup routine;
- kernel-space cancellation cleanup routine;
- user-space thread (Xenomai threads switch to secondary mode);
- user-space cancellation cleanup routine.

## See also

Specification.

# 3.11 Signals services.

Signals management services.

Collaboration diagram for Signals services.:



# **Functions**

- int sigemptyset (sigset\_t \*set)

  Initialize and empty a signal set.
- int sigfillset (sigset\_t \*set)

  Initialize and fill a signal set.
- int sigaddset (sigset\_t \*set, int sig)

  Add a signal to a signal set.
- int sigdelset (sigset\_t \*set, int sig)

  Delete a signal from a signal set.
- int sigismember (const sigset\_t \*set, int sig)

Test for a signal in a signal set.

- int sigaction (int sig, const struct sigaction \*act, struct sigaction \*oact)

  Examine and change a signal action.
- int pthread\_kill (pthread\_t thread, int sig)

  Send a signal to a thread.
- int pthread\_sigqueue\_np (pthread\_t thread, int sig, union sigval value) Queue a signal to a thread.
- int sigpending (sigset\_t \*set)

  Examine pending signals.
- int pthread\_sigmask (int how, const sigset\_t \*set, sigset\_t \*oset)

  Examine and change the set of signals blocked by a thread.
- int sigwait (const sigset\_t \*set, int \*sig)

  Wait for signals.
- int sigwaitinfo (const sigset\_t \*\_\_restrict\_\_ set, siginfo\_t \*\_\_restrict\_\_ info) Wait for signals.
- int sigtimedwait (const sigset\_t \*\_\_restrict\_\_ set, siginfo\_t \*\_\_restrict\_\_ info, const struct timespec \*\_\_restrict\_\_ timeout)

  Wait during a bounded time for signals.

# 3.11.1 Detailed Description

Signals management services. Signals are asynchronous notifications delivered to a process or thread. Such notifications occur as the result of an exceptional event or at the request of another process.

The services documented here are reserved to Xenomai kernel-space threads, user-space threads switch to secondary mode when handling signals, and use Linux regular signals services.

Xenomai POSIX skin signals are implemented as real-time signals, meaning that they are queued when posted several times to a thread before the first notification is handled, and that each signal carry additional data in a **siginfo\_t** object. In order to ensure consistence with user-space signals, valid signals number range from 1 to SIGRTMAX, signals from SIGRTMIN to SIGRTMAX being higher priority than signals from 1 to SIGRTMIN-1. As a special case, signal 0 may be used with services pthread\_kill() and pthread\_sigqueue\_np() to check if a thread exists, but entails no other action.

The action to be taken upon reception of a signal depends on the thread signal mask, (see pthread\_sigmask()), and on the settings described by a **sigaction** structure (see sigaction()).

# 3.11.2 Function Documentation

## 3.11.2.1 int pthread\_kill ( pthread\_t thread, int sig )

Send a signal to a thread.

This service send the signal *sig* to the Xenomai POSIX skin thread *thread* (created with pthread\_create()). If *sig* is zero, this service check for existence of the thread *thread*, but no signal is sent.

#### **Parameters**

```
thread thread identifier;sig signal number.
```

#### **Returns**

0 on success:

an error number if:

- EINVAL, sig is an invalid signal number;
- EAGAIN, the maximum number of pending signals has been exceeded;
- ESRCH, thread is an invalid thread identifier.

#### See also

Specification.

# 3.11.2.2 int pthread\_sigmask ( int how, const sigset\_t \* set, sigset\_t \* oset )

Examine and change the set of signals blocked by a thread.

The signal mask of a thread is the set of signals that are blocked by this thread.

If *oset* is not NULL, this service stores, at the address *oset* the current signal mask of the calling thread.

If *set* is not NULL, this service sets the signal mask of the calling thread according to the value of *how*, as follow:

- if *how* is SIG\_BLOCK, the signals in *set* are added to the calling thread signal mask;
- if how is SIG\_SETMASK, the calling thread signal mask is set to set;
- if *how* is SIG\_UNBLOCK, the signals in *set* are removed from the calling thread signal mask.

If some signals are unblocked by this service, they are handled before this service returns.

# **Parameters**

how if set is not null, a value indicating how to interpret set;set if not null, a signal set that will be used to modify the calling thread signal mask;oset if not null, address where the previous value of the calling thread signal mask will be stored on success.

# Returns

0 on success;

an error number if:

- EPERM, the calling context is invalid;
- EINVAL, how is not SIG BLOCK, SIG UNBLOCK or SIG SETMASK.

#### Valid contexts:

• Xenomai POSIX skin kernel-space thread.

#### See also

```
Specification.
```

# 3.11.2.3 int pthread\_sigqueue\_np ( pthread\_t thread, int sig, union sigval value )

Queue a signal to a thread.

This service send the signal *sig* to the Xenomai POSIX skin thread *thread* (created with pthread\_create()), with the value *value*. If *sig* is zero, this service check for existence of the thread *thread*, but no signal is sent.

This service is equivalent to the POSIX service sigqueue(), except that the signal is directed to a thread instead of being directed to a process.

#### **Parameters**

```
thread thread identifier,sig signal number,value additional datum passed to thread with the signal sig.
```

#### Returns

0 on success; an error number if:

- EINVAL, sig is an invalid signal number;
- EAGAIN, the maximum number of pending signals has been exceeded;
- ESRCH, thread is an invalid thread identifier.

# See also

```
sigqueue() specification.
```

# 3.11.2.4 int sigaction ( int sig, const struct sigaction \* act, struct sigaction \* oact )

Examine and change a signal action.

The **sigaction** structure descibes the actions to be taken upon signal delivery. A **sigaction** structure is associated with every signal, for the kernel-space as a whole.

If *oact* is not *NULL*, this service returns at the address *oact*, the current value of the **sigaction** structure associated with the signal *sig*.

If *act* is not *NULL*, this service set to the value pointed to by *act*, the **sigaction** structure associated with the signal *sig*.

The structure **sigaction** has the following members:

• *sa\_flags*, is a bitwise OR of the flags;

- SA\_RESETHAND, meaning that the signal handler will be reset to SIG\_GFL and SA\_-SIGINFO cleared upon reception of a signal,
- SA\_NODEFER, meaning that the signal handler will be called with the signal *sig* not masked when handling the signal *sig*,
- SA\_SIGINFO, meaning that the member *sa\_sigaction* of the **sigaction** structure will be used as a signal handler instead of *sa\_handler*
- *sa\_mask*, of type **sigset\_t**, is the value to which the thread signals mask will be set during execution of the signal handler (*sig* is automatically added to this set if SA\_NODEFER is not set in *sa\_flags*);
- *sa\_handler*, of type **void** (\*)(**int**) is the signal handler which will be called upon signal delivery if SA\_SIGINFO is not set in *sa\_flags*, or one of SIG\_IGN or SIG\_DFL, meaning that the signal will be respectively ignored or handled with the default handler;
- *sa\_sigaction*, of type **void** (\*)(int, siginfo\_t \*, void \*) is the signal handler which will be called upon signal delivery if SA\_SIGINFO is set in *sa\_flags*.

When using *sa\_handler* as a signal handler, it is passed the number of the received signal, when using *sa\_sigaction*, two additional arguments are passed:

- a pointer to a **siginfo\_t** object, containing additional information about the received signal;
- a void pointer, always null in this implementation.

The following members of the **siginfo\_t** structure are filled by this implementation:

- *si\_signo*, the signal number;
- *si\_code*, the provenance of the signal, one of:
  - SI\_QUEUE, the signal was queued with pthread\_sigqueue\_np(),
  - SI\_USER, the signal was queued with pthread\_kill(),
  - SI\_TIMER, the signal was queued by a timer (see timer\_settime()),
  - SI\_MESQ, the signal was queued by a message queue (see mq\_notify());
- *si\_value*, an additional datum, of type **union sigval**.

# **Parameters**

sig a signal number;

act if not null, description of the action to be taken upon notification of the signal sig;

oact if not null, address where the previous description of the signal action is stored on success.

#### Return values

0 on sucess;

- -1 with errno set if:
  - EINVAL, *sig* is an invalid signal number;
  - ENOTSUP, the sa\_flags member of act contains other flags than SA\_RESETHAND, SA\_NODEFER and SA\_SIGINFO;

## See also

# 3.11.2.5 int sigaddset ( sigset\_t \* set, int sig )

Add a signal to a signal set.

This service adds the signal number sig to the signal set pointed to by set.

#### **Parameters**

```
set address of a signal set;sig signal to be added to set.
```

# **Return values**

```
0 on success;
```

- -1 with errno set if:
  - EINVAL, sig is not a valid signal number.

## See also

```
Specification.
```

# 3.11.2.6 int sigdelset ( sigset\_t \* set, int sig )

Delete a signal from a signal set.

This service remove the signal number sig from the signal set pointed to by set.

# **Parameters**

```
set address of a signal set;sig signal to be removed from set.
```

## **Return values**

```
0 on success;
```

- -1 with errno set if:
  - EINVAL, sig is not a valid signal number.

#### See also

```
Specification.
```

# 3.11.2.7 int sigemptyset ( sigset\_t \* set )

Initialize and empty a signal set.

This service initializes ane empties the signal set pointed to by set.

#### **Parameters**

set address of a the signal set to be initialized.

## Return values

0

# See also

Specification.

# 3.11.2.8 int sigfillset ( sigset\_t \* set )

Initialize and fill a signal set.

This service initializes ane fills the signal set pointed to by set.

## **Parameters**

set address of a the signal set to be filled.

#### **Return values**

0

#### See also

Specification.

# 3.11.2.9 int sigismember ( const sigset\_t \* set, int sig )

Test for a signal in a signal set.

This service tests whether the signal number sig is member of the signal set pointed to by set.

#### **Parameters**

```
set address of a signal set;sig tested signal number.
```

# Return values

```
0 on success;
```

- **-1** with *errno* set if:
  - EINVAL, sig is not a valid signal number.

# See also

```
Specification.
```

# 3.11.2.10 int sigpending ( $sigset_t * set$ )

Examine pending signals.

This service stores, at the address *set*, the set of signals that are currently blocked and have been received by the calling thread.

set address where the set of blocked and received signals are stored on success.

## Return values

0 on success;

- -1 with errno set if:
  - EPERM, the calling context is invalid.

## Valid contexts:

• Xenomai POSIX skin kernel-space thread.

#### See also

Specification.

```
3.11.2.11 int sigtimedwait ( const sigset_t *__restrict__ set, siginfo_t *__restrict__ info, const struct timespec *__restrict__ timeout )
```

Wait during a bounded time for signals.

This service is equivalent to the sigwaitinfo() service, except that the calling thread is only blocked until the timeout specified by *timeout* expires.

# **Parameters**

```
set set of signals to wait for;
info address where the received siginfo_t object will be stored on success;
timeout the timeout, expressed as a time interval.
```

# Return values

0 on success;

- -1 with *errno* set if:
  - EINVAL, the specified timeout is invalid;
  - EPERM, the caller context is invalid;
  - EINVAL, a signal in *set* is not currently blocked;
  - EAGAIN, no signal was received and the specified timeout expired.

## Valid contexts:

• Xenomai POSIX skin kernel-space thread.

# See also

# 3.11.2.12 int sigwait ( const sigset\_t \* set, int \* sig )

Wait for signals.

This service blocks a Xenomai kernel-space POSIX skin thread until a signal of the set *set* is received. If a signal in *set* is not currently blocked by the calling thread, this service returns immediately with an error. The signal received is stored at the address *sig*.

If a signal of the set set was already pending, it is cleared and this service returns immediately.

Signals are received in priority order, i.e. from SIGRTMIN to SIGRTMAX, then from 1 to SIGRTMIN-1.

#### **Parameters**

```
set set of signals to wait for;sig address where the received signal will be stored on success.
```

#### **Returns**

0 on success;

an error number if:

- EPERM, the caller context is invalid;
- EINVAL, a signal in set is not currently blocked.

# Valid contexts:

• Xenomai POSIX skin kernel-space thread.

#### See also

Specification.

# 3.11.2.13 int sigwaitinfo ( const sigset\_t \*\_restrict\_\_ set, siginfo\_t \*\_restrict\_\_ info )

Wait for signals.

This service is equivalent to the sigwait() service, except that it returns, at the address *info*, the siginfo\_t object associated with the received signal instead of only returning the signal number.

### **Parameters**

```
set set of signals to wait for;
info address where the received siginfo_t object will be stored on success.
```

# Return values

0 on success;

-1 with errno set if:

- EPERM, the caller context is invalid;
- EINVAL, a signal in *set* is not currently blocked.

# Valid contexts:

• Xenomai POSIX skin kernel-space thread.

# See also

# 3.12 Threads management services.

Threads management services.

Collaboration diagram for Threads management services.:



# **Modules**

• Thread cancellation.

Thread cancellation.

• Threads scheduling services.

Thread scheduling services.

• Thread creation attributes.

Thread creation attributes.

# **Functions**

- int pthread\_once (pthread\_once\_t \*once, void(\*init\_routine)(void))

  Execute an initialization routine.
- int pthread\_create (pthread\_t \*tid, const pthread\_attr\_t \*attr, void \*(\*start)(void \*), void \*arg)

Create a thread.

int pthread\_detach (pthread\_t thread)

Detach a running thread.

• int pthread\_equal (pthread\_t t1, pthread\_t t2) Compare thread identifiers.

• void pthread\_exit (void \*value\_ptr)

Terminate the current thread.

• int pthread\_join (pthread\_t thread, void \*\*value\_ptr)

Wait for termination of a specified thread.

• pthread\_t pthread\_self (void)

Get the identifier of the calling thread.

• int pthread\_make\_periodic\_np (pthread\_t thread, struct timespec \*starttp, struct timespec \*periodtp)

Make a thread periodic.

- int pthread\_wait\_np (unsigned long \*overruns\_r)

  Wait for current thread next period.
- int pthread\_set\_mode\_np (int clrmask, int setmask)

  Set the mode of the current thread.
- int pthread\_set\_name\_np (pthread\_t thread, const char \*name)

  Set a thread name.

# 3.12.1 Detailed Description

Threads management services.

#### See also

Specification.

# 3.12.2 Function Documentation

```
3.12.2.1 int pthread_create ( pthread_t * tid, const pthread_attr_t * attr, void *(*)(void *) start, void * arg )
```

Create a thread.

This service create a thread. The created thread may be used with all POSIX skin services.

The new thread run the *start* routine, with the *arg* argument.

The new thread signal mask is inherited from the current thread, if it was also created with <a href="pthread\_create">pthread\_create</a>(), otherwise the new thread signal mask is empty.

Other attributes of the new thread depend on the *attr* argument. If *attr* is null, default values for these attributes are used. See Thread creation attributes. for a definition of thread creation attributes and their default values.

Returning from the *start* routine has the same effect as calling pthread\_exit() with the return value.

# **Parameters**

```
tid address where the identifier of the new thread will be stored on success;
attr thread attributes;
start thread routine;
arg thread routine argument.
```

#### Returns

0 on success; an error number if:

.. 01101 11011112 01 111

- EINVAL, attr is invalid;
- EAGAIN, insufficient memory exists in the system heap to create a new thread, increase CONFIG\_XENO\_OPT\_SYS\_HEAPSZ;
- EINVAL, thread attribute *inheritsched* is set to PTHREAD\_INHERIT\_SCHED and the calling thread does not belong to the POSIX skin;

## See also

Specification.

## Note

When creating or shadowing a Xenomai thread for the first time in user-space, Xenomai installs a handler for the SIGWINCH signal. If you had installed a handler before that, it will be automatically called by Xenomai for SIGWINCH signals that it has not sent.

If, however, you install a signal handler for SIGWINCH after creating or shadowing the first Xenomai thread, you have to explicitly call the function xeno\_sigwinch\_handler at the beginning of your signal handler, using its return to know if the signal was in fact an internal signal of Xenomai (in which case it returns 1), or if you should handle the signal (in which case it returns 0). xeno\_sigwinch\_handler prototype is:

# int xeno\_sigwinch\_handler(int sig, siginfo\_t \*si, void \*ctxt);

Which means that you should register your handler with sigaction, using the SA\_SIGINFO flag, and pass all the arguments you received to xeno\_sigwinch\_handler.

References pthread\_getschedparam\_ex().

## 3.12.2.2 int pthread\_detach ( pthread\_t thread )

Detach a running thread.

This service detaches a joinable thread. A detached thread is a thread which control block is automatically reclaimed when it terminates. The control block of a joinable thread, on the other hand, is only reclaimed when joined with the service pthread\_join().

If some threads are currently blocked in the pthread\_join() service with thread as a target, they are unblocked and pthread\_join() returns EINVAL.

#### **Parameters**

thread target thread.

# **Returns**

0 on success;

an error number if:

- ESRCH, thread is an invalid thread identifier;
- EINVAL, thread is not joinable.

## See also

Specification.

# 3.12.2.3 int pthread\_equal ( pthread\_t t1, pthread\_t t2 )

Compare thread identifiers.

This service compare the thread identifiers t1 and t2. No attempt is made to check the threads for existence. In order to check if a thread exists, the pthread\_kill() service should be used with the signal number 0.

# **Parameters**

```
t1 thread identifier;
```

t2 other thread identifier.

#### **Returns**

a non zero value if the thread identifiers are equal; 0 otherwise.

## See also

Specification.

# 3.12.2.4 void pthread\_exit ( void \* value\_ptr )

Terminate the current thread.

This service terminate the current thread with the return value *value\_ptr*. If the current thread is joinable, the return value is returned to any thread joining the current thread with the pthread\_join() service.

When a thread terminates, cancellation cleanup handlers are executed in the reverse order that they were pushed. Then, thread-specific data destructors are executed.

# **Parameters**

value ptr thread return value.

#### See also

Specification.

# 3.12.2.5 int pthread\_join ( pthread\_t thread, void \*\* value\_ptr )

Wait for termination of a specified thread.

If the thread *thread* is running and joinable, this service blocks the calling thread until the thread *thread* terminates or detaches. In this case, the calling context must be a blockable context (i.e. a Xenomai thread without the scheduler locked) or the root thread (i.e. a module initilization or cleanup routine). When *thread* terminates, the calling thread is unblocked and its return value is stored at\* the address *value\_ptr*.

If, on the other hand, the thread *thread* has already finished execution, its return value is stored at the address *value\_ptr* and this service returns immediately. In this case, this service may be called from any context.

This service is a cancelation point for POSIX skin threads: if the calling thread is canceled while blocked in a call to this service, the cancelation request is honored and *thread* remains joinable.

Multiple simultaneous calls to <a href="pthread\_join">pthread\_join</a>() specifying the same running target thread block all the callers until the target thread terminates.

#### **Parameters**

*thread* identifier of the thread to wait for; *value\_ptr* address where the target thread return value will be stored on success.

#### Returns

0 on success;

an error number if:

- ESRCH, thread is invalid;
- EDEADLK, attempting to join the calling thread;
- EINVAL, thread is detached;
- EPERM, the caller context is invalid.

## Valid contexts, if this service has to block its caller:

- Xenomai kernel-space thread;
- kernel module initilization or cleanup routine;
- Xenomai user-space thread (switches to primary mode).

# See also

Specification.

# 3.12.2.6 int pthread\_make\_periodic\_np ( pthread\_t thread, struct timespec \* starttp, struct timespec \* periodtp )

Make a thread periodic.

This service make the POSIX skin thread thread periodic.

This service is a non-portable extension of the POSIX interface.

#### **Parameters**

*thread* thread identifier. This thread is immediately delayed until the first periodic release point is reached.

*starttp* start time, expressed as an absolute value of the CLOCK\_REALTIME clock. The affected thread will be delayed until this point is reached.

*periodtp* period, expressed as a time interval.

# Returns

0 on success; an error number if:

- ESRCH, thread is invalid;
- ETIMEDOUT, the start time has already passed.

Rescheduling: always, until the *starttp* start time has been reached.

# 3.12.2.7 int pthread\_once ( pthread\_once\_t \* once, void(\*)(void) init\_routine )

Execute an initialization routine.

This service may be used by libraries which need an initialization function to be called only once.

The function *init\_routine* will only be called, with no argument, the first time this service is called specifying the address *once*.

#### Returns

0 on success;

an error number if:

• EINVAL, the object pointed to by *once* is invalid (it must have been initialized with PTHREAD\_ONCE\_INIT).

# See also

Specification.

# 3.12.2.8 pthread\_t pthread\_self (void)

Get the identifier of the calling thread.

This service returns the identifier of the calling thread.

#### Returns

identifier of the calling thread;

NULL if the calling thread is not a POSIX skin thread.

### See also

Specification.

# 3.12.2.9 int pthread\_set\_mode\_np ( int clrmask, int setmask )

Set the mode of the current thread.

This service sets the mode of the calling thread. *clrmask* and *setmask* are two bit masks which are respectively cleared and set in the calling thread status. They are a bitwise OR of the following values:

- PTHREAD\_LOCK\_SCHED, when set, locks the scheduler, which prevents the current thread from being switched out by the scheduler until the scheduler is unlocked;
- PTHREAD\_RPIOFF, when set, prevents the root Linux thread from inheriting the priority of the calling thread, when this thread is running in secondary mode;

- PTHREAD\_WARNSW, when set, cause the signal SIGXCPU to be sent to the current thread, whenever it involontary switches to secondary mode;
- PTHREAD\_PRIMARY, cause the migration of the current thread to primary mode.

PTHREAD\_LOCK\_SCHED is valid for any Xenomai thread, the other bits are only valid for Xenomai user-space threads.

This service is a non-portable extension of the POSIX interface.

#### **Parameters**

```
clrmask set of bits to be cleared;
setmask set of bits to be set.
```

#### Returns

0 on success; an error number if:

• EINVAL, some bit in *clrmask* or *setmask* is invalid.

# 3.12.2.10 int pthread\_set\_name\_np ( pthread\_t thread, const char \* name )

Set a thread name.

This service set to *name*, the name of *thread*. This name is used for displaying information in /proc/xenomai/sched.

This service is a non-portable extension of the POSIX interface.

#### **Parameters**

```
thread target thread;
name name of the thread.
```

# Returns

0 on success; an error number if:

• ESRCH, *thread* is invalid.

# 3.12.2.11 int pthread\_wait\_np ( unsigned long \* overruns\_r )

Wait for current thread next period.

If it is periodic, this service blocks the calling thread until the next period elapses.

This service is a cancelation point for POSIX skin threads.

This service is a non-portable extension of the POSIX interface.

## **Parameters**

*overruns\_r* address where the overruns count is returned in case of overrun.

#### Returns

0 on success;

an error number if:

- EPERM, the calling context is invalid;
- EWOULDBLOCK, the calling thread is not periodic;
- EINTR, this service was interrupted by a signal;
- ETIMEDOUT, at least one overrun occurred.

# Valid contexts:

- Xenomai kernel-space thread;
- Xenomai user-space thread (switches to primary mode).

# 3.13 Thread creation attributes.

Thread creation attributes.

Collaboration diagram for Thread creation attributes.:



# **Functions**

- int pthread\_attr\_init (pthread\_attr\_t \*attr) *Initialize a thread attributes object.*
- int pthread\_attr\_destroy (pthread\_attr\_t \*attr)

  Destroy a thread attributes object.
- int pthread\_attr\_getdetachstate (const pthread\_attr\_t \*attr, int \*detachstate)

  Get detachstate attribute.
- int pthread\_attr\_setdetachstate (pthread\_attr\_t \*attr, int detachstate)

  Set detachstate attribute.
- int pthread\_attr\_getstacksize (const pthread\_attr\_t \*attr, size\_t \*stacksize)

  Get stacksize attribute.
- int pthread\_attr\_setstacksize (pthread\_attr\_t \*attr, size\_t stacksize)

  Set stacksize attribute.

- int pthread\_attr\_getinheritsched (const pthread\_attr\_t \*attr, int \*inheritsched)

  Get inheritsched attribute.
- int pthread\_attr\_setinheritsched (pthread\_attr\_t \*attr, int inheritsched)

  Set inheritsched attribute.
- int pthread\_attr\_getschedpolicy (const pthread\_attr\_t \*attr, int \*policy)

  Get schedpolicy attribute.
- int pthread\_attr\_setschedpolicy (pthread\_attr\_t \*attr, int policy)

  Set schedpolicy attribute.
- int pthread\_attr\_getschedparam (const pthread\_attr\_t \*attr, struct sched\_param \*par)

  Get schedparam attribute.
- int pthread\_attr\_getschedparam\_ex (const pthread\_attr\_t \*attr, struct sched\_param\_ex \*par)

*Get schedparam\_ex extended attribute.* 

- int pthread\_attr\_setschedparam (pthread\_attr\_t \*attr, const struct sched\_param \*par) Set schedparam attribute.
- int pthread\_attr\_setschedparam\_ex (pthread\_attr\_t \*attr, const struct sched\_param\_ex \*par)

Set extended schedparam\_ex attribute.

- int pthread\_attr\_getscope (const pthread\_attr\_t \*attr, int \*scope)

  Get contention scope attribute.
- int pthread\_attr\_setscope (pthread\_attr\_t \*attr, int scope)

  Set contention scope attribute.
- int pthread\_attr\_getname\_np (const pthread\_attr\_t \*attr, const char \*\*name)

  Get name attribute.
- int pthread\_attr\_setname\_np (pthread\_attr\_t \*attr, const char \*name)

  Set name attribute.
- int pthread\_attr\_getfp\_np (const pthread\_attr\_t \*attr, int \*fp)

  Get the floating point attribute.
- int pthread\_attr\_setfp\_np (pthread\_attr\_t \*attr, int fp) Set the floating point attribute.
- int pthread\_attr\_getaffinity\_np (const pthread\_attr\_t \*attr, xnarch\_cpumask\_t \*mask)

  Get the processor affinity attribute.
- int pthread\_attr\_setaffinity\_np (pthread\_attr\_t \*attr, xnarch\_cpumask\_t mask) Set the processor affinity attribute.

# 3.13.1 Detailed Description

Thread creation attributes. The services described in this section allow to set the attributes of a **pthread\_attr\_t** object, passed to the **pthread\_create()** service in order to set the attributes of a created thread.

A **pthread\_attr\_t** object has to be initialized with **pthread\_attr\_init()** first, which sets attributes to their default values, i.e. in kernel-space:

- detachstate to PTHREAD\_CREATE\_JOINABLE,
- stacksize to PTHREAD\_STACK\_MIN,
- inheritsched to PTHREAD\_EXPLICIT\_SCHED,
- *schedpolicy* to SCHED\_OTHER,
- name to NULL (only available in kernel-space),
- scheduling priority to the minimum,
- floating-point hardware enabled (only available in kernel-space),
- processor affinity set to all available processors (only available as a thread attribute in kernel-space).

In user-space, the attributes and their defaults values are those documented by the underlying threading library (LinuxThreads or NPTL).

# 3.13.2 Function Documentation

# 3.13.2.1 int pthread\_attr\_destroy ( pthread\_attr\_t \* attr )

Destroy a thread attributes object.

This service invalidates the attribute object pointed to by *attr*. The object becomes invalid for all services (they all return EINVAL) except pthread\_attr\_init().

## See also

Specification.

# 3.13.2.2 int pthread\_attr\_getaffinity\_np ( const pthread\_attr\_t \* attr, xnarch\_cpumask\_t \* mask )

Get the processor affinity attribute.

This service stores, at the address *mask*, the value of the *affinity* attribute in the attribute object *attr*.

The *affinity* attributes is a bitmask where bits set indicate processor where a thread created with the attribute *attr* may run. The least significant bit corresponds to the first logical processor.

This service is a non-portable extension of the POSIX interface.

#### **Parameters**

attr attribute object;

*mask* address where the value of the *affinity* attribute will be stored on success.

## Returns

0 on success; an error number if:

• EINVAL, attr is invalid.

#### Valid contexts:

- kernel module initialization or cleanup routine;
- Xenomai kernel-space thread.

# 3.13.2.3 int pthread\_attr\_getdetachstate ( const pthread\_attr\_t \* attr, int \* detachstate )

Get detachstate attribute.

This service returns, at the address *detachstate*, the value of the *detachstate* attribute in the thread attribute object *attr*.

Valid values of this attribute are PTHREAD\_CREATE\_JOINABLE and PTHREAD\_CREATE\_-DETACHED. A detached thread is a thread which control block is automatically reclaimed when it terminates. The control block of a joinable thread, on the other hand, is only reclaimed when joined with the service pthread\_join().

A thread that was created joinable may be detached after creation by using the <a href="pthread\_detach()">pthread\_detach()</a> service.

# **Parameters**

attr attribute object

detachstate address where the value of the detachstate attribute will be stored on success.

#### Returns

0 on success; an error number if:

• EINVAL, attr is invalid;

## See also

Specification.

# 3.13.2.4 int pthread\_attr\_getfp\_np ( const pthread\_attr\_t \* attr, int \* fp )

Get the floating point attribute.

This service returns, at the address *fp*, the value of the *fp* attribute in the attribute object *attr*.

The *fp* attribute is a boolean attribute indicating whether a thread created with the attribute *attr* may use floating-point hardware.

This service is a non-portable extension of the POSIX interface.

```
attr attribute object;fp address where the value of the fp attribute will be stored on success.
```

#### Returns

0 on success; an error number if:

• EINVAL, attr is invalid.

#### Valid contexts:

- kernel module initialization or cleanup routine;
- Xenomai kernel-space thread.

# 3.13.2.5 int pthread\_attr\_getinheritsched ( const pthread\_attr\_t \* attr, int \* inheritsched )

Get inheritsched attribute.

This service returns at the address *inheritsched* the value of the *inheritsched* attribute in the attribute object *attr*.

Threads created with this attribute set to PTHREAD\_INHERIT\_SCHED will use the same scheduling policy and priority as the thread calling <a href="https://pthread\_create">pthread\_create</a>(). Threads created with this attribute set to PTHREAD\_EXPLICIT\_SCHED will use the value of the <a href="https://scheduling.org/reate/">scheduling.org/reate/</a>(). Threads created with this attribute set to PTHREAD\_EXPLICIT\_SCHED will use the value of the <a href="https://scheduling.org/reate/">scheduling.org/reate/</a> attribute as scheduling priority.

# **Parameters**

```
attr attribute object;
```

*inheritsched* address where the value of the *inheritsched* attribute will be stored on success.

# Returns

0 on success;

an error number if:

• EINVAL, attr is invalid.

# See also

Specification.

## 3.13.2.6 int pthread\_attr\_getname\_np ( const pthread\_attr\_t \* attr, const char \*\* name )

Get name attribute.

This service stores, at the address *name*, the value of the *name* attribute in the attribute object *attr*.

The *name* attribute is the name under which a thread created with the attribute object *attr* will appear under /proc/xenomai/sched.

The name returned by this function is only valid until the name is changed with pthread\_attr\_setname\_np() or the *attr* object is destroyed with pthread\_attr\_destroy().

If *name* is *NULL*, a unique default name will be used.

This service is a non-portable extension of the POSIX interface.

```
attr attribute object;name address where the value of the name attribute will be stored on success.
```

#### Returns

0 on success; an error number if:

• EINVAL, attr is invalid.

## Valid contexts:

- kernel module initialization or cleanup routine;
- Xenomai kernel-space thread.

# 3.13.2.7 int pthread\_attr\_getschedparam ( const pthread\_attr\_t \* attr, struct sched\_param \* par )

Get schedparam attribute.

This service stores, at the address *par*, the limited form of the *schedparam* attribute in the attribute object *attr*.

The limited form only defines the *sched\_priority* member, that is sufficent to hold the scheduling parameter for SCHED\_FIFO, SCHED\_RR and SCHED\_OTHER class members. Threads created with *attr* will use the value of this attribute as a scheduling priority if the attribute *inheritsched* is set to PTHREAD\_EXPLICIT\_SCHED. Valid priorities range from 1 to 99.

 $\label{lem:pthread_attr_getschedparam_ex} pthread\_attr\_getschedparam\_ex() should be used to retrieve the parameters for extended scheduling classes, such as SCHED\_SPORADIC.$ 

#### **Parameters**

```
attr attribute object;par address where the value of the schedparam attribute will be stored on success.
```

# **Returns**

0 on success;

an error number if:

• EINVAL, attr is invalid.

#### See also

Specification.

# 3.13.2.8 int pthread\_attr\_getschedparam\_ex ( const pthread\_attr\_t \* attr, struct sched\_param\_ex \* par )

Get schedparam\_ex extended attribute.

This service is an extended version of pthread\_attr\_getschedparam(), that also supports Xenomai-specific or additional POSIX scheduling policies, which are not available with the host Linux environment.

Typically, SCHED\_SPORADIC parameters can be retrieved from this call.

```
attr attribute object;par address where the value of the extended schedparam_ex attribute will be stored on success.
```

#### Returns

0 on success; an error number if:

• EINVAL, attr is invalid.

#### See also

Specification.

# 3.13.2.9 int pthread\_attr\_getschedpolicy ( const pthread\_attr\_t \* attr, int \* policy )

Get schedpolicy attribute.

This service stores, at the address *policy*, the value of the *policy* attribute in the attribute object *attr*.

Threads created with the attribute object *attr* use the value of this attribute as scheduling policy if the *inheritsched* attribute is set to PTHREAD\_EXPLICIT\_SCHED. The value of this attribute is one of SCHED\_FIFO, SCHED\_RR, SCHED\_SPORADIC or SCHED\_OTHER.

#### **Parameters**

```
attr attribute object;
```

*policy* address where the value of the *policy* attribute in the attribute object *attr* will be stored on success.

# Returns

0 on success; an error number if:

• EINVAL, attr is invalid.

#### See also

Specification.

# 3.13.2.10 int pthread\_attr\_getscope ( const pthread\_attr\_t \* attr, int \* scope )

Get contention scope attribute.

This service stores, at the address *scope*, the value of the *scope* attribute in the attribute object *attr*.

The *scope* attribute represents the scheduling contention scope of threads created with the attribute object *attr*. This implementation only supports the value PTHREAD\_SCOPE\_SYSTEM.

## **Parameters**

```
attr attribute object;
```

*scope* address where the value of the *scope* attribute will be stored on sucess.

#### Returns

0 on success; an error number if:

• EINVAL, attr is invalid.

## See also

Specification.

# 3.13.2.11 int pthread\_attr\_getstacksize ( const pthread\_attr\_t \* attr, size\_t \* stacksize )

Get stacksize attribute.

This service stores, at the address *stacksize*, the value of the *stacksize* attribute in the attribute object attr

The *stacksize* attribute is used as the stack size of the threads created using the attribute object *attr*.

## **Parameters**

attr attribute object;

stacksize address where the value of the stacksize attribute will be stored on success.

# Returns

0 on success;

an error number if:

• EINVAL, attr is invalid.

# See also

Specification.

# 3.13.2.12 int pthread\_attr\_init ( pthread\_attr\_t \* attr )

Initialize a thread attributes object.

This service initializes the thread creation attributes structure pointed to by *attr*. Attributes are set to their default values (see Thread creation attributes.).

If this service is called specifying a thread attributes object that was already initialized, the attributes object is reinitialized.

## **Parameters**

attr address of the thread attributes object to initialize.

## Returns

0.

# See also

# 3.13.2.13 int pthread\_attr\_setaffinity\_np ( pthread\_attr\_t \* attr, xnarch\_cpumask\_t mask )

Set the processor affinity attribute.

This service sets to *mask*, the value of the *affinity* attribute in the attribute object *attr*.

The *affinity* attributes is a bitmask where bits set indicate processor where a thread created with the attribute *attr* may run. The least significant bit corresponds to the first logical processor.

This service is a non-portable extension of the POSIX interface.

### **Parameters**

```
attr attribute object;mask address where the value of the affinity attribute will be stored on success.
```

#### Returns

0 on success; an error number if:

• EINVAL, attr is invalid.

## Valid contexts:

- kernel module initialization or cleanup routine;
- Xenomai kernel-space thread.

# 3.13.2.14 int pthread\_attr\_setdetachstate ( pthread\_attr\_t \* attr, int detachstate )

Set detachstate attribute.

This service sets to *detachstate* the value of the *detachstate* attribute in the attribute object *attr*.

Valid values of this attribute are PTHREAD\_CREATE\_JOINABLE and PTHREAD\_CREATE\_-DETACHED. A detached thread is a thread which control block is automatically reclaimed when it terminates. The control block of a joinable thread, on the other hand, is only reclaimed when joined with the service pthread\_join().

A thread that was created joinable may be detached after creation by using the pthread\_detach() service.

# **Parameters**

```
attr attribute object;
detachstate value of the detachstate attribute.
```

# Returns

0 on success; an error number if:

• EINVAL, the attribute object attr is invalid

# See also

# 3.13.2.15 int pthread\_attr\_setfp\_np ( pthread\_attr\_t \* attr, int fp )

Set the floating point attribute.

This service set to *fp*, the value of the *fp* attribute in the attribute object *attr*.

The *fp* attribute is a boolean attribute indicating whether a thread created with the attribute *attr* may use floating-point hardware.

This service is a non-portable extension of the POSIX interface.

#### **Parameters**

```
attr attribute object;fp value of the fp attribute.
```

# Returns

0 on success; an error number if:

• EINVAL, attr is invalid.

#### Valid contexts:

- kernel module initialization or cleanup routine;
- Xenomai kernel-space thread.

# 3.13.2.16 int pthread\_attr\_setinheritsched ( pthread\_attr\_t \* attr, int inheritsched )

Set inheritsched attribute.

This service set to *inheritsched* the value of the *inheritsched* attribute in the attribute object attr.

Threads created with this attribute set to PTHREAD\_INHERIT\_SCHED will use the same scheduling policy and priority as the thread calling pthread\_create(). Threads created with this attribute set to PTHREAD\_EXPLICIT\_SCHED will use the value of the *schedpolicy* attribute as scheduling policy, and the value of the *schedparam* attribute as scheduling priority.

# **Parameters**

```
attr attribute object;
inheritsched value of the inheritsched attribute, PTHREAD_INHERIT_SCHED or PTHREAD_EXPLICIT_SCHED.
```

## **Returns**

0 on success; an error number if:

• EINVAL, attr or inheritsched is invalid.

#### See also

# 3.13.2.17 int pthread\_attr\_setname\_np ( pthread\_attr\_t \* attr, const char \* name )

Set name attribute.

This service set to *name*, the value of the *name* attribute in the attribute object *attr*.

The *name* attribute is the name under which a thread created with the attribute object *attr* will appear under /proc/xenomai/sched.

If *name* is *NULL*, a unique default name will be used.

This service is a non-portable extension of the POSIX interface.

#### **Parameters**

```
attr attribute object;name value of the name attribute.
```

#### Returns

0 on success;

an error number if:

- EINVAL, attr is invalid;
- ENOMEM, insufficient memory exists in the system heap to duplicate the name string, increase CONFIG\_XENO\_OPT\_SYS\_HEAPSZ.

# Valid contexts:

- kernel module initialization or cleanup routine;
- Xenomai kernel-space thread.

# 3.13.2.18 int pthread\_attr\_setschedparam ( pthread\_attr\_t \* attr, const struct sched\_param \* par )

Set schedparam attribute.

This service set to par, the limited form of the schedparam attribute in the attribute object attr.

The limited form only defines the *sched\_priority* member, that is sufficent to hold the scheduling parameter for SCHED\_FIFO, SCHED\_RR and SCHED\_OTHER class members. Threads created with *attr* will use the value of this attribute as a scheduling priority if the attribute *inheritsched* is set to PTHREAD\_EXPLICIT\_SCHED. Valid priorities range from 1 to 99.

## **Parameters**

```
attr attribute object;
par value of the schedparam attribute.
```

#### Returns

0 on success;

an error number if:

• EINVAL, attr or par is invalid.

# See also

# 3.13.2.19 int pthread\_attr\_setschedparam\_ex ( pthread\_attr\_t \* attr, const struct sched\_param\_ex \* par )

Set extended schedparam\_ex attribute.

This service is an extended version of pthread\_attr\_setschedparam(), that also supports Xenomai-specific or additional POSIX scheduling policies, which are not available with the host Linux environment.

Typically, SCHED\_SPORADIC parameters can be set using this call.

# **Parameters**

```
attr attribute object;
par value of the schedparam attribute.
```

## Returns

0 on success; an error number if:

• EINVAL, attr or par is invalid.

## See also

Specification.

# 3.13.2.20 int pthread\_attr\_setschedpolicy ( pthread\_attr\_t \* attr, int policy )

Set schedpolicy attribute.

This service set to *policy* the value of the *policy* attribute in the attribute object *attr*.

Threads created with the attribute object *attr* use the value of this attribute as scheduling policy if the *inheritsched* attribute is set to PTHREAD\_EXPLICIT\_SCHED. The value of this attribute is one of SCHED\_FIFO, SCHED\_RR, SCHED\_SPORADIC or SCHED\_OTHER.

# **Parameters**

```
attr attribute object;
policy value of the policy attribute.
```

## Returns

0 on success; an error number if:

• EINVAL, *attr* or *policy* is invalid.

# See also

# 3.13.2.21 int pthread\_attr\_setscope ( pthread\_attr\_t \* attr, int scope )

Set contention scope attribute.

This service set to *scope* the value of the *scope* attribute in the attribute object *attr*.

The *scope* attribute represents the scheduling contention scope of threads created with the attribute object *attr*. This implementation only supports the value PTHREAD\_SCOPE\_SYSTEM.

#### **Parameters**

```
attr attribute object;
scope value of the scope attribute.
```

## Returns

0 on success;

an error number if:

- ENOTSUP, *scope* is an unsupported value of the scope attribute.
- EINVAL, attr is invalid.

## See also

Specification.

# 3.13.2.22 int pthread\_attr\_setstacksize ( pthread\_attr\_t \* attr, size\_t stacksize )

Set stacksize attribute.

This service set to *stacksize*, the value of the *stacksize* attribute in the attribute object *attr*.

The *stacksize* attribute is used as the stack size of the threads created using the attribute object *attr*.

The minimum value for this attribute is PTHREAD STACK MIN.

# **Parameters**

```
attr attribute object;
stacksize value of the stacksize attribute.
```

# Returns

0 on success; an error number if:

• EINVAL, attr or stacksize is invalid.


# See also

Specification.

# 3.14 Thread-specific data.

Thread-specific data.

Collaboration diagram for Thread-specific data.:



# **Functions**

- int pthread\_key\_create (pthread\_key\_t \*key, void(\*destructor)(void \*))

  Create a thread-specific data key.
- int pthread\_setspecific (pthread\_key\_t key, const void \*value)

  Associate a thread-specific value with the specified key.
- void \* pthread\_getspecific (pthread\_key\_t key)
   Get the thread-specific value bound to the specified key.
- int pthread\_key\_delete (pthread\_key\_t key)

  Delete a thread-specific data key.

# 3.14.1 Detailed Description

Thread-specific data. Programs often need global or static variables that have different values in different threads. Since threads share one memory space, this cannot be achieved with regular variables. Thread-specific data is the POSIX threads answer to this need.

Each thread possesses a private memory block, the thread-specific data area, or TSD area for short. This area is indexed by TSD keys. The TSD area associates values of type 'void \*' to TSD keys. TSD keys are common to all threads, but the value associated with a given TSD key can be different in each thread.

When a thread is created, its TSD area initially associates NULL with all keys.

The services documented here are valid in kernel-space context; when called in user-space, the underlying Linux threading library (LinuxThreads or NPTL) services are used.

# 3.14.2 Function Documentation

# 3.14.2.1 void\* pthread\_getspecific ( pthread\_key\_t key )

Get the thread-specific value bound to the specified key.

This service returns the value associated, for the calling thread, with the key *key*.

key TSD key, obtained with pthread\_key\_create().

## Returns

the value associated with *key*; NULL if the context is invalid.

## Valid contexts:

• Xenomai POSIX skin kernel-space thread.

#### See also

Specification.

# 3.14.2.2 int pthread\_key\_create ( pthread\_key\_t \* key, void(\*)(void \*) destructor )

Create a thread-specific data key.

This service create a TSD key. The NULL value is associated for all threads with the new key and the new key is returned at the address *key*. If *destructor* is not null, it is executed when a thread is terminated as long as the datum associated with the key is not NULL, up to PTHREAD\_-DESTRUCTOR ITERATIONS times.

#### **Parameters**

key address where the new key will be stored on success;

*destructor* function to be invoked when a thread terminates and has a non NULL value associated with the new key.

## Returns

0 on success:

an error number if:

- EAGAIN, the total number of keys PTHREAD\_KEYS\_MAX TSD has been exceeded;
- ENOMEM, insufficient memory exists in the system heap to create a new key, increase CONFIG\_XENO\_OPT\_SYS\_HEAPSZ.

#### See also

Specification.

# 3.14.2.3 int pthread\_key\_delete ( pthread\_key\_t key )

Delete a thread-specific data key.

This service deletes the TSD key *key*. Note that the key destructor function is not called, so, if any thread has a value associated with *key* that is a pointer to dynamically allocated memory, the application has to manage to free that memory by other means.

#### **Parameters**

key the TSD key to be destroyed.

# Returns

0 on success; an error number if:

• EINVAL, *key* is invalid.

# See also

Specification.

# 3.14.2.4 int pthread\_setspecific ( pthread\_key\_t key, const void \* value )

Associate a thread-specific value with the specified key.

This service associates, for the calling thread, the value *value* to the key *key*.

# **Parameters**

```
key TSD key, obtained with pthread_key_create();
value value.
```

## **Returns**

0 on success; an error number if:

- EPERM, the caller context is invalid;
- EINVAL, key is invalid.

# Valid contexts:

• Xenomai POSIX skin kernel-space thread.

# See also


# Chapter 4

# File Documentation

# 4.1 ksrc/skins/posix/syscall.c File Reference

This file is part of the Xenomai project.

Include dependency graph for syscall.c:

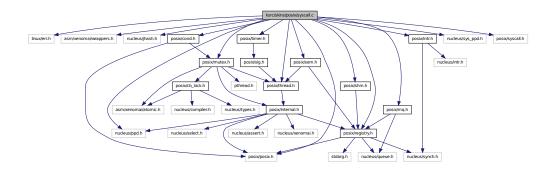

# 4.1.1 Detailed Description

This file is part of the Xenomai project. Copyright (C) 2005 Philippe Gerum crpm@xenomai.org>
Copyright (C) 2005 Gilles Chanteperdrix cproject. Copyright (C) 2005 Gilles Chanteperdrix

This program is free software; you can redistribute it and/or modify it under the terms of the GNU General Public License as published by the Free Software Foundation; either version 2 of the License, or (at your option) any later version.

This program is distributed in the hope that it will be useful, but WITHOUT ANY WARRANTY; without even the implied warranty of MERCHANTABILITY or FITNESS FOR A PARTICULAR PURPOSE. See the GNU General Public License for more details.

You should have received a copy of the GNU General Public License along with this program; if not, write to the Free Software Foundation, Inc., 59 Temple Place - Suite 330, Boston, MA 02111-1307, USA.

# Index

clock gotros	munman
clock_getres	munmap
posix_time, 11 clock_gettime	posix_shm, 63 Mutex services., 39
•	writtex services., 37
posix_time, 11	nanosleep
clock_nanosleep	posix_time, 13
posix_time, 12	posix_time, to
clock_settime	POSIX skin., 29
posix_time, 13	posix_cancel
Clocks and timers services., 9	pthread_cancel, 6
close	pthread_cleanup_pop, 6
posix_shm, 61	pthread_cleanup_push, 7
Condition variables services., 17	
do_clock_host_realtime	pthread_setcancelstate, 7
	pthread_setcanceltype, 8
posix_time, 13	pthread_testcancel, 9
ftruncate	posix_cond
posix_shm, 61	pthread_cond_broadcast, 19
posix_simi, or	pthread_cond_destroy, 19
Interruptions management services., 25	pthread_cond_init, 20
, and the second	pthread_cond_signal, 20
ksrc/skins/posix/syscall.c, 99	pthread_cond_timedwait, 20
•	pthread_cond_wait, 21
Message queues services., 31	pthread_condattr_destroy, 22
mmap	pthread_condattr_getclock, 22
posix_shm, 62	pthread_condattr_getpshared, 23
mq_close	pthread_condattr_init, 23
posix_mq, 32	pthread_condattr_setclock, 24
mq_getattr	pthread_condattr_setpshared, 24
posix_mq, 32	posix_intr
mq_notify	pthread_intr_attach_np, 26
posix_mq, 33	pthread_intr_control_np, 27
mq_open	pthread_intr_detach_np, 27
posix_mq, 33	pthread_intr_wait_np, 28
mq_receive	posix_mq
posix_mq, 35	mq_close, 32
mq_send	mq_getattr, 32
posix_mq, 35	mq_notify, 33
mq_setattr	mq_open, 33
posix_mq, 36	mq_receive, 35
mq_timedreceive	mq_send, 35
posix_mq, 37	mq_setattr, 36
mq_timedsend	mq_timedreceive, 37
posix_mq, 37	mq_timedsend, 37
mq_unlink	mq_unlink, 38
posix mq, 38	posix_mutex
P 001/4_111Q1 00	PODIA_IIIUUCA

INDEX 101

pthread_mutex_destroy, 41	sigwaitinfo, 74
pthread_mutex_init, 41	posix_thread
pthread_mutex_lock, 41	pthread_create, 76
pthread_mutex_timedlock, 42	pthread_detach, 77
pthread_mutex_trylock, 43	pthread_equal, 78
pthread_mutex_unlock, 43	pthread_exit, 78
pthread_mutexattr_destroy, 44	pthread_join, 78
pthread_mutexattr_getprotocol, 44	pthread_make_periodic_np, 79
pthread_mutexattr_getpshared, 45	pthread_once, 80
pthread_mutexattr_gettype, 45	pthread_self, 80
pthread_mutexattr_init, 46	pthread_set_mode_np, 80
pthread_mutexattr_setprotocol, 46	pthread_set_name_np, 81
pthread_mutexattr_setpshared, 47	pthread_wait_np, 81
pthread_mutexattr_settype, 47	posix_threadattr
posix_sched	pthread_attr_destroy, 84
pthread_getschedparam, 49	pthread_attr_getaffinity_np, 84
pthread_getschedparam_ex, 50	pthread_attr_getdetachstate, 85
pthread_setschedparam, 50	pthread_attr_getfp_np, 85
pthread_setschedparam_ex, 51	pthread_attr_getinheritsched, 86
sched_get_priority_max, 52	pthread_attr_getname_np, 86
sched_get_priority_min, 52	pthread_attr_getschedparam, 87
sched_rr_get_interval, 53	pthread_attr_getschedparam_ex, 87
sched_yield, 53	pthread_attr_getschedpolicy, 88
posix_sem sem_close, 55	pthread_attr_getscope, 88
	pthread_attr_getstacksize, 89
sem_destroy, 55	pthread_attr_init, 89
sem_getvalue, 55	pthread_attr_setaffinity_np, 89
sem_init, 56	pthread_attr_setdetachstate, 90
sem_open, 56 sem_post, 57	<pre>pthread_attr_setfp_np, 90 pthread_attr_setinheritsched, 91</pre>
sem_timedwait, 58	pthread_attr_setname_np, 91
sem_trywait, 58	pthread_attr_setschedparam, 92
sem_unlink, 59	pthread_attr_setschedparam_ex, 92
sem_wait, 59	pthread_attr_setschedpolicy, 93
posix_shm	pthread_attr_setscope, 93
close, 61	pthread_attr_setstacksize, 94
ftruncate, 61	posix_time
mmap, 62	clock_getres, 11
munmap, 63	clock_gettime, 11
shm_open, 64	clock_nanosleep, 12
shm_unlink, 65	clock_settime, 13
posix_signal	do_clock_host_realtime, 13
pthread_kill, 67	nanosleep, 13
pthread_sigmask, 68	timer_create, 14
pthread_sigqueue_np, 69	timer_delete, 15
sigaction, 69	timer_getoverrun, 15
sigaddset, 70	timer_gettime, 16
sigdelset, 71	timer_settime, 16
sigemptyset, 71	posix_tsd
sigfillset, 72	pthread_getspecific, 95
sigismember, 72	pthread_key_create, 96
sigpending, 72	pthread_key_delete, 96
sigtimedwait, 73	pthread_setspecific, 97
sigwait, 73	pthread_attr_destroy
<i>,</i>	/

102 INDEX

	. 1.20
posix_threadattr, 84	posix_cond, 20
pthread_attr_getaffinity_np	pthread_cond_signal
posix_threadattr, 84	posix_cond, 20
pthread_attr_getdetachstate	pthread_cond_timedwait
posix_threadattr, 85	posix_cond, 20
pthread_attr_getfp_np	pthread_cond_wait
posix_threadattr, 85	posix_cond, 21
pthread_attr_getinheritsched	pthread_condattr_destroy
posix_threadattr, 86	posix_cond, 22
pthread_attr_getname_np	pthread_condattr_getclock
posix_threadattr, 86	posix_cond, 22
pthread_attr_getschedparam	pthread_condattr_getpshared
posix_threadattr, 87	posix_cond, 23
pthread_attr_getschedparam_ex	pthread_condattr_init
posix_threadattr, 87	posix_cond, 23
pthread_attr_getschedpolicy	pthread_condattr_setclock
posix_threadattr, 88	posix_cond, 24
pthread_attr_getscope	pthread_condattr_setpshared
posix_threadattr, 88	posix_cond, 24
pthread_attr_getstacksize	pthread_create
posix_threadattr, 89	posix_thread, 76
pthread_attr_init	pthread_detach
posix_threadattr, 89	•
•	posix_thread, 77
pthread_attr_setaffinity_np	pthread_equal
posix_threadattr, 89	posix_thread, 78
pthread_attr_setdetachstate	pthread_exit
posix_threadattr, 90	posix_thread, 78
pthread_attr_setfp_np	pthread_getschedparam
posix_threadattr, 90	posix_sched, 49
pthread_attr_setinheritsched	pthread_getschedparam_ex
posix_threadattr, 91	posix_sched, 50
pthread_attr_setname_np	pthread_getspecific
posix_threadattr, 91	posix_tsd, 95
pthread_attr_setschedparam	pthread_intr_attach_np
posix_threadattr, 92	posix_intr, 26
pthread_attr_setschedparam_ex	pthread_intr_control_np
posix_threadattr, 92	posix_intr, 27
pthread_attr_setschedpolicy	pthread_intr_detach_np
posix_threadattr, 93	posix_intr, 27
pthread_attr_setscope	pthread_intr_wait_np
posix_threadattr, 93	posix_intr, 28
pthread_attr_setstacksize	pthread_join
posix_threadattr, 94	posix_thread, 78
pthread_cancel	pthread_key_create
posix_cancel, 6	posix_tsd, 96
pthread_cleanup_pop	pthread_key_delete
posix_cancel, 6	posix_tsd, 96
pthread_cleanup_push	pthread_kill
posix_cancel, 7	posix_signal, 67
pthread_cond_broadcast	pthread_make_periodic_np
posix_cond, 19	posix_thread, 79
pthread_cond_destroy	pthread_mutex_destroy
posix_cond, 19	posix_mutex, 41
pthread_cond_init	pthread_mutex_init
	=

posix_mutex, 41	sched_get_priority_min
pthread_mutex_lock	posix_sched, 52
posix_mutex, 41	sched_rr_get_interval
pthread_mutex_timedlock	posix_sched, 53
posix_mutex, 42	sched_yield
pthread_mutex_trylock	posix_sched, 53
posix_mutex, 43	sem_close
pthread_mutex_unlock	posix_sem, 55
posix_mutex, 43	sem_destroy
pthread_mutexattr_destroy	posix_sem, 55
posix_mutex, 44	sem_getvalue
pthread_mutexattr_getprotocol	posix_sem, 55
posix_mutex, 44	sem_init
pthread_mutexattr_getpshared	posix_sem, 56
posix_mutex, 45	sem_open
pthread_mutexattr_gettype	posix_sem, 56
posix_mutex, 45	sem_post
pthread_mutexattr_init	posix_sem, 57
posix_mutex, 46	sem_timedwait
pthread_mutexattr_setprotocol	posix_sem, 58
posix_mutex, 46	sem_trywait
pthread_mutexattr_setpshared	posix_sem, 58
posix_mutex, 47	sem_unlink
pthread_mutexattr_settype	posix_sem, 59
posix_mutex, 47	sem_wait
pthread_once	posix_sem, 59
posix_thread, 80	Semaphores services., 53
pthread_self	Shared memory services., 60
posix_thread, 80	shm_open
pthread_set_mode_np	posix_shm, 64
posix_thread, 80	shm_unlink
pthread_set_name_np	posix_shm, 65
posix_thread, 81	sigaction
pthread_setcancelstate	posix_signal, 69
posix_cancel, 7	
pthread_setcanceltype	sigaddset
posix_cancel, 8	posix_signal, 70
pthread_setschedparam	sigdelset
posix_sched, 50	posix_signal, 71
pthread_setschedparam_ex	sigemptyset
posix_sched, 51	posix_signal, 71
pthread_setspecific	sigfillset
posix_tsd, 97	posix_signal, 72
pthread_sigmask	sigismember
posix_signal, 68	posix_signal, 72
pthread_sigqueue_np	Signals services., 66
posix_signal, 69	sigpending
pthread_testcancel	posix_signal, 72
posix_cancel, 9	sigtimedwait
pthread_wait_np	posix_signal, 73
posix_thread, 81	sigwait
	posix_signal, 73
sched_get_priority_max	sigwaitinfo
posix_sched, 52	posix_signal, 74

104 INDEX

```
Thread cancellation., 5
Thread creation attributes., 82
Thread-specific data., 94
Threads management services., 75
Threads scheduling services., 48
timer_create
    posix_time, 14
timer_delete
    posix_time, 15
timer_getoverrun
    posix_time, 15
timer_gettime
    posix_time, 16
timer_settime
    posix_time, 16
```