LibreSilicon process HKUST (NFF)

David Lanzendörfer

December 15, 2018

Abstract

Copyright © 2017 LANCEVILLE TECHNOLOGY GROUP CO., LIMITED. All rights reserved.

This process is licensed under the Libre Silicon public license; you can redistribute it and/or modify it under the terms of the Libre Silicon public license as published by the Libre Silicon alliance, either version 1 of the License, or (at your option) any later version.

This design is distributed in the hope that it will be useful, but WITHOUT ANY WARRANTY; without even the implied warranty of MERCHANTABILITY or FITNESS FOR A PARTICULAR PURPOSE. See the Libre Silicon Public License for more details.

This document is part of the specification of the free silicon manufacturing standard for manufacturing the LibreSilicon standard logic cells¹ and related free technology nodes from the LibreSilicon project.

For this initial revision 0.1 a gate-first approach has been chosen which led to the choice of polysilicon as the gate electrode material because of the simplicity of the gate alignment. For better isolation properties of the transistors and gates in overall a box-isolation approach has been chosen. All of these choices have been made with the future scale down from the recent $1\mu m$ to smaller structure sizes. This process is for manufacturing $1\mu m$ only! But further releases which will have been tested with smaller structure sizes can be expected.

Please see the document with the generic steps² in order to get a detailed description of the different steps.

¹https://github.com/chipforge/StdCellLib

²https://github.com/libresilicon/process/raw/master/process_steps/process_hightech/process_hightech_steps.pdf


Process Flow of Lanceville Technologies Libre Silicon
 $1\mu m$

• Project: LibreSilicon $1\mu m$

• Name: Lanceville Technologies Group

- Substrate: P-Substrate silicon wafer $<\!100\!>$

• Date: December 15, 2018

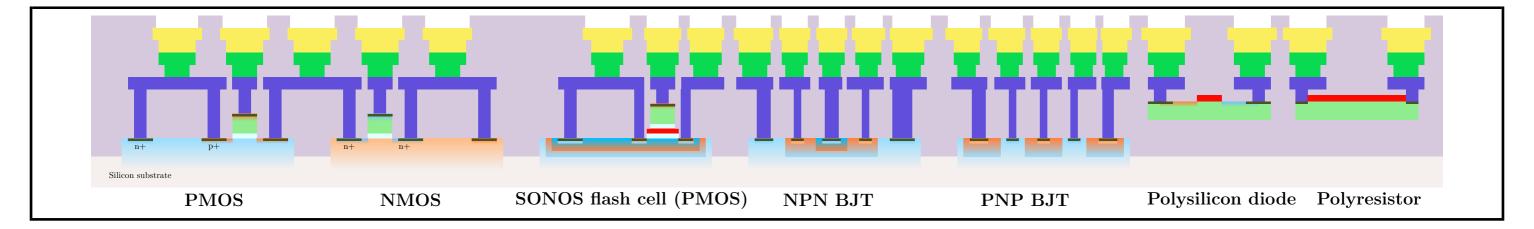

1 Initial alignment mask

Mask:	hasic

Wafer Cleanliness	Step Number	Equipment	Location	Cleanliness	Process	Requirements
Clean	1.1	B1: Sulfuric cleaning (WET-B1)	P2-01000	Clean	Default cleaning	
Clean	1.2	Spin Dryer-B (SRD-B)	P2-01000	Clean	Dry the wafer automatically	
Clean	1.3	SVG Coater Track (PHT-T1)	P2-00100	Clean Semi clean	HMDS, PR coating, soft bake	HPR 504: 3krpm (${\approx}1.5 \mu m$), soft bake: 110°C 1min
Clean	1.4	ASML Stepper (PHT-S1)	P2-00100	Clean Semi clean	Exposure of the layer	
Clean	1.5	SVG Developer Track (PHT-T2)	P2-00100	Clean Semi clean	Develop, Hard bake	FHD-5, 1min; hard bake: 120°C , 1min
Clean	1.6	Lam 490 etcher (DRY-490)	P2-01000	Clean	Etching the alignment crosses from HKUST	2 minutes (120nm)
Clean	1.7	PS210 Asher (DRY-PR-1)	P2-01000	Clean	Resist strip	
Clean	1.8	E4:Resist strip (WET-E4)	P2-01000	Clean Semi clean	Resist strip	
Clean	1.9	Spin Dryer-E (SRD-E)	P2-01000	Clean Semi clean	Dry the wafer automatically	

2 N-well

Mask:	nwell
wask:	nwen

Wafer Cleanliness	Step Number	Equipment	Location	Cleanliness	Process	Requirements
Clean	2.1	B1: Sulfuric cleaning (WET-B1)	P2-01000	Clean	Default cleaning	
Clean	2.2	Spin Dryer-B (SRD-B)	P2-01000	Clean	Dry the wafer automatically	
Clean	2.3	SVG Coater Track (PHT-T1)	P2-00100	Clean Semi clean	HMDS, PR coating, soft bake	FH 6400L: 3krpm (${\approx}1.5 \mu m$), soft bake: 110°C 1min
Clean	2.4	ASML Stepper (PHT-S1)	P2-00100	Clean Semi clean	Exposure of the layer	
Clean	2.5	SVG Developer Track (PHT-T2)	P2-00100	Clean Semi clean	Develop, Hard bake	FHD-5, 1min; hard bake: 120°C , 1min
Clean	2.6	CF-3000 Implanter (IMP-3000)	P2-01000	Clean Semi clean	Phorphorus implant	$2.33 \times 10^{12} cm^{-2}$ @70keV
Clean	2.7	PS210 Asher (DRY-PR-1)	P2-01000	Clean	Resist strip	
Clean	2.8	E4:Resist strip (WET-E4)	P2-01000	Clean Semi clean	Resist strip	
Clean	2.9	Spin Dryer-E (SRD-E)	P2-01000	Clean Semi clean	Dry the wafer automatically	

3 P-well

Mask:	pwell
-------	-------

Wafer Cleanliness	Step Number	Equipment	Location	Cleanliness	Process	Requirements
Clean	3.1	B1: Sulfuric cleaning (WET-B1)	P2-01000	Clean	Default cleaning	
Clean	3.2	Spin Dryer-B (SRD-B)	P2-01000	Clean	Dry the wafer automatically	
Clean	3.3	SVG Coater Track (PHT-T1)	P2-00100	Clean Semi clean	HMDS, PR coating, soft bake	FH 6400L: 3krpm (${\approx}1.5 \mu m$), soft bake: 110°C 1min
Clean	3.4	ASML Stepper (PHT-S1)	P2-00100	Clean Semi clean	Exposure of the layer	
Clean	3.5	SVG Developer Track (PHT-T2)	P2-00100	Clean Semi clean	Develop, Hard bake	FHD-5, 1min; hard bake: 120°C , 1min
Clean	3.6	CF-3000 Implanter (IMP-3000)	P2-01000	Clean Semi clean	Boron implant	$1.93 \times 10^{12} cm^{-2}$ @40keV
Clean	3.7	PS210 Asher (DRY-PR-1)	P2-01000	Clean	Resist strip	
Clean	3.8	E4:Resist strip (WET-E4)	P2-01000	Clean Semi clean	Resist strip	
Clean	3.9	Spin Dryer-E (SRD-E)	P2-01000	Clean Semi clean	Dry the wafer automatically	
Clean	3.10	A3:Sulfuric cleaning (WET-A3)	P2-01000	Clean	Default cleaning	
Clean	3.11	Spin Dryer-A (SRD-A)	P2-01000	Clean	Dry the wafer automatically	
Clean	3.12	Diffusion Furnace-A1, anneal/oxidation (DIF-A1)	P2-01000	Clean	Drive in	2 hours @ 1050°C in inert (N_2) environment

4 P-Base

Wafer Cleanliness	Step Number	Equipment	Location	Cleanliness	Process	Requirements
Clean	4.1	B1: Sulfuric cleaning (WET-B1)	P2-01000	Clean	Default cleaning	
Clean	4.2	Spin Dryer-B (SRD-B)	P2-01000	Clean	Dry the wafer automatically	
Clean	4.3	SVG Coater Track (PHT-T1)	P2-00100	Clean Semi clean	HMDS, PR coating, soft bake	FH 6400L: 3krpm (${\approx}1.5 \mu m$), soft bake: 110°C 1min
Clean	4.4	ASML Stepper (PHT-S1)	P2-00100	Clean Semi clean	Exposure of the layer	
Clean	4.5	SVG Developer Track (PHT-T2)	P2-00100	Clean Semi clean	Develop, Hard bake	FHD-5, 1min; hard bake: 120°C, 1min
Clean	4.6	CF-3000 Implanter (IMP-3000)	P2-01000	Clean Semi clean	Boron implant	$1.93 \times 10^{12} cm^{-2}$ @40keV
Clean	4.7	PS210 Asher (DRY-PR-1)	P2-01000	Clean	Resist strip	
Clean	4.8	E4:Resist strip (WET-E4)	P2-01000	Clean Semi clean	Resist strip	
Clean	4.9	Spin Dryer-E (SRD-E)	P2-01000	Clean Semi clean	Dry the wafer automatically	
Clean	4.10	A3:Sulfuric cleaning (WET-A3)	P2-01000	Clean	Default cleaning	
Clean	4.11	Spin Dryer-A (SRD-A)	P2-01000	Clean	Dry the wafer automatically	
Clean	4.12	Diffusion Furnace-A1, anneal/oxidation (DIF-A1)	P2-01000	Clean	Drive in	1 hour @ 1050°C in inert (N_2) environment

5 N-Base

Silicon substrate

Mask: nbase

Wafer Cleanliness	Step Number	Equipment	Location	Cleanliness	Process	Requirements
Clean	5.1	B1: Sulfuric cleaning (WET-B1)	P2-01000	Clean	Default cleaning	
Clean	5.2	Spin Dryer-B (SRD-B)	P2-01000	Clean	Dry the wafer automatically	
Clean	5.3	SVG Coater Track (PHT-T1)	P2-00100	Clean Semi clean	HMDS, PR coating, soft bake	FH 6400L: 3krpm (${\approx}1.5 \mu m$), soft bake: 110°C 1min
Clean	5.4	ASML Stepper (PHT-S1)	P2-00100	Clean Semi clean	Exposure of the layer	
Clean	5.5	SVG Developer Track (PHT-T2)	P2-00100	Clean Semi clean	Develop, Hard bake	FHD-5, 1min; hard bake: 120°C , 1min
Clean	5.6	CF-3000 Implanter (IMP-3000)	P2-01000	Clean Semi clean	Phorphorus implant	$2.33 \times 10^{12} cm^{-2}$ @70keV
Clean	5.7	PS210 Asher (DRY-PR-1)	P2-01000	Clean	Resist strip	
Clean	5.8	E4:Resist strip (WET-E4)	P2-01000	Clean Semi clean	Resist strip	
Clean	5.9	Spin Dryer-E (SRD-E)	P2-01000	Clean Semi clean	Dry the wafer automatically	
Clean	5.10	A3:Sulfuric cleaning (WET-A3)	P2-01000	Clean	Default cleaning	
Clean	5.11	Spin Dryer-A (SRD-A)	P2-01000	Clean	Dry the wafer automatically	
Clean	5.12	Diffusion Furnace-A1, anneal/oxidation (DIF-A1)	P2-01000	Clean	Drive in	1 hour @ 1050°C in inert (N_2) environment

6 Shallow trench isolation

Wafer Cleanliness	Step Number	Equipment	Location	Cleanliness	Process	Requirements
Clean	6.1	B1: Sulfuric cleaning (WET-B1)	P2-01000	Clean	Default cleaning	
Clean	6.2	Spin Dryer-B (SRD-B)	P2-01000	Clean	Dry the wafer automatically	
Clean	6.3	SVG Coater Track (PHT-T1)	P2-00100	Clean Semi clean	HMDS, PR coating, soft bake	HPR 504: 3krpm (${\approx}1.5 \mu m$), soft bake: 110°C 1min
Clean	6.4	ASML Stepper (PHT-S1)	P2-00100	Clean Semi clean	Exposure of the layer	
Clean	6.5	SVG Developer Track (PHT-T2)	P2-00100	Clean Semi clean	Develop, Hard bake	FHD-5, 1min; hard bake: 120°C , 1min
Clean	6.6	DRIE Etcher #1 (DRY-Si-1)	P2-01000	Clean	Etching the trenches	1 minute $(2\mu m)$
Clean	6.7	PS210 Asher (DRY-PR-1)	P2-01000	Clean	Resist strip	
Clean	6.8	E4:Resist strip (WET-E4)	P2-01000	Clean Semi clean	Resist strip	
Clean	6.9	Spin Dryer-E (SRD-E)	P2-01000	Clean Semi clean	Dry the wafer automatically	

7 Field oxide

 ${\bf Silicon~substrate}$

3 E 1	C
Mask:	tov
wasn.	IUA


Wafer Cleanliness	Step Number	Equipment	Location	Cleanliness	Process	Requirements
Clean	7.1	A3:Sulfuric cleaning (WET-A3)	P2-01000	Clean	Default cleaning	
Clean	7.2	Spin Dryer-A (SRD-A)	P2-01000	Clean	Dry the wafer automatically	
Clean	7.3	Diffusion Furnace-D2, dry/wet oxidation (DIF-D2)	P2-01000	Clean	Drive in	30 minutes @ 1050°C in dry environment (O_2)
Clean	7.4	A3:Sulfuric cleaning (WET-A3)	P2-01000	Clean	Default cleaning	
Clean	7.5	Spin Dryer-A (SRD-A)	P2-01000	Clean	Dry the wafer automatically	
Clean	7.6	LPCVD-B3 LTO (CVD-B3)	P2-01000	Clean	Oxide deposition	$3\mu m$ (filling the trenches)
Clean	7.7	SVG Coater Track (PHT-T1)	P2-00100	Clean Semi clean	HMDS, PR coating, soft bake	HPR 504: 3krpm (${\approx}1.5\mu m$), soft bake: 110°C 1min
Clean	7.8	ASML Stepper (PHT-S1)	P2-00100	Clean Semi clean	Exposure of the layer	
Clean	7.9	SVG Developer Track (PHT-T2)	P2-00100	Clean Semi clean	Develop, Hard bake	FHD-5, 1min; hard bake: 120°C , 1min
Clean	7.10	C3:BOE (WET-C3)	P2-01000	Clean	BOE: Field oxide etching	6 minutes (3000 nm, 500nm/min)
Clean	7.11	E4:Resist strip (WET-E4)	P2-01000	Clean Semi clean	Sulfuric resist strip	H2SO4+H2O2, 120°C , 10mins
Clean	7.12	Spin Dryer-E (SRD-E)	P2-01000	Clean Semi clean	Dry the wafer automatically	

8 SONOS

Mask:	sono
-------	------


Wafer Cleanliness	Step Number	Equipment	Location	Cleanliness	Process	Requirements
Clean	8.1	A3:Sulfuric cleaning (WET-A3)	P2-01000	Clean	Default cleaning	
Clean	8.2	Spin Dryer-A (SRD-A)	P2-01000	Clean	Dry the wafer automatically	
Clean	8.3	Diffusion Furnace-D2, dry oxidation (DIF-D1)	P2-01000	Clean	Lower gate oxide growth	$5\mathrm{nm}$
Clean	8.4	A3:Sulfuric cleaning (WET-A3)	P2-01000	Clean	Default cleaning	
Clean	8.5	Spin Dryer-A (SRD-A)	P2-01000	Clean	Dry the wafer automatically	
Clean	8.6	LPCVD-B2 Nitride/Low-Stress Nitride (CVD-B2)	P2-01000	Clean	Charge carrying nitride growth	10nm
Clean	8.7	SVG Coater Track (PHT-T1)	P2-00100	Clean Semi clean	HMDS, PR coating, soft bake	HPR 504: 3krpm (${\approx}1.5\mu m$), soft bake: 110°C 1min
Clean	8.8	ASML Stepper (PHT-S1)	P2-00100	Clean Semi clean	Exposure of the layer	
Clean	8.9	SVG Developer Track (PHT-T2)	P2-00100	Clean Semi clean	Develop, Hard bake	FHD-5, 1min; hard bake: 120°C , 1min
Clean	8.10	Lam 490 etcher (DRY-490)	P2-01000	Clean	Nitride etch	6 seconds (10nm, 100nm/min)
Clean	8.11	C3:BOE (WET-C3)	P2-01000	Clean	BOE: Field oxide etching	$(1.2 \text{ seconds}) \approx 1.2 \text{ seconds } (5 \text{ nm}, 500 \text{nm/min})$
Clean	8.12	E4:Resist strip (WET-E4)	P2-01000	Clean Semi clean	Sulfuric resist strip	H2SO4+H2O2, 120°C , 10mins
Clean	8.13	Spin Dryer-E (SRD-E)	P2-01000	Clean Semi clean	Dry the wafer automatically	

9 Gate

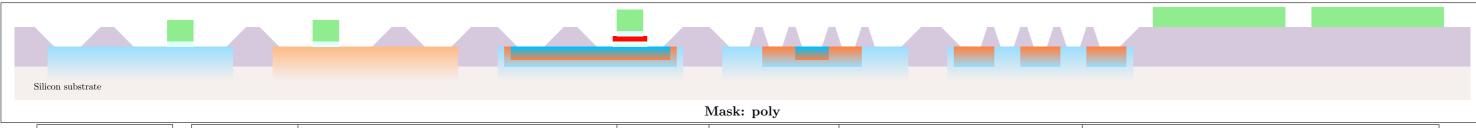


Wafer Cleanliness	Step Number	Equipment	Location	Cleanliness	Process	Requirements
Clean	9.1	A3:Sulfuric cleaning (WET-A3)	P2-01000	Clean	Default cleaning	
Clean	9.2	Spin Dryer-A (SRD-A)	P2-01000	Clean	Dry the wafer automatically	
Clean	9.3	Diffusion Furnace-D2, dry oxidation (DIF-D1)	P2-01000	Clean	Gate oxide growth	40nm, 33 minutes 14 seconds @ 1050°C in dry environment
Clean	9.4	A3:Sulfuric cleaning (WET-A3)	P2-01000	Clean	Default cleaning	
Clean	9.5	Spin Dryer-A (SRD-A)	P2-01000	Clean	Dry the wafer automatically	
Clean	9.6	LPCVD-A3: Amor-Si/Poly (CVD-A3)	P2-01000	Clean	Gate electrode growth	600nm of poly silicon
Clean	9.7	SVG Coater Track (PHT-T1)	P2-00100	Clean Semi clean	HMDS, PR coating, soft bake	HPR 504: 3krpm (${\approx}1.5\mu m$), soft bake: 110°C 1min
Clean	9.8	ASML Stepper (PHT-S1)	P2-00100	Clean Semi clean	Exposure of the layer	
Clean	9.9	SVG Developer Track (PHT-T2)	P2-00100	Clean Semi clean	Develop, Hard bake	FHD-5, 1min; hard bake: 120°C , 1min
Clean	9.10	Poly etcher (DRY-Poly)	P2-01000	Clean Semi clean	Poly silicon etch	6 minute 10 seconds (600nm poly + 40nm oxide)
Clean	9.11	E4:Resist strip (WET-E4)	P2-01000	Clean Semi clean	Sulfuric resist strip	H2SO4+H2O2, 120°C , 10mins
Clean	9.12	Spin Dryer-E (SRD-E)	P2-01000	Clean Semi clean	Dry the wafer automatically	

10 Implant stop

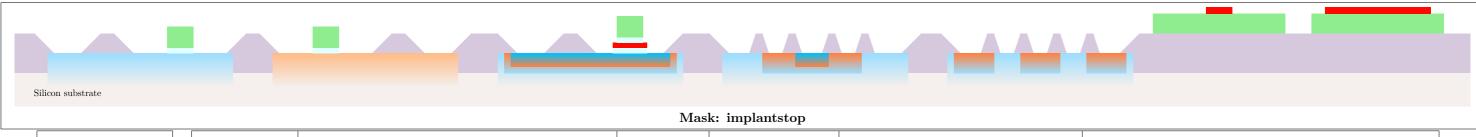


Wafer Cleanliness	Step Number	Equipment	Location	Cleanliness	Process	Requirements
Clean	10.1	A3:Sulfuric cleaning (WET-A3)	P2-01000	Clean	Default cleaning	
Clean	10.2	Spin Dryer-A (SRD-A)	P2-01000	Clean	Dry the wafer automatically	
Clean	10.3	LPCVD-B2 Nitride/Low-Stress Nitride (CVD-B2)	P2-01000	Clean	Implant stop Nitride hard mask	100nm
Clean	10.4	SVG Coater Track (PHT-T1)	P2-00100	Clean Semi clean	HMDS, PR coating, soft bake	HPR 504: 3krpm (${\approx}1.5\mu m$), soft bake: 110°C 1min
Clean	10.5	ASML Stepper (PHT-S1)	P2-00100	Clean Semi clean	Exposure of the layer	
Clean	10.6	SVG Developer Track (PHT-T2)	P2-00100	Clean Semi clean	Develop, Hard bake	FHD-5, 1min; hard bake: 120°C , 1min
Clean	10.7	Lam 490 etcher (DRY-490)	P2-01000	Clean	Nitride etch	roughly 1 minute (100nm, 100nm/min)
Clean	10.8	E4:Resist strip (WET-E4)	P2-01000	Clean Semi clean	Sulfuric resist strip	H2SO4+H2O2, 120°C , 10mins
Clean	10.9	Spin Dryer-E (SRD-E)	P2-01000	Clean Semi clean	Dry the wafer automatically	

11 N+ implant

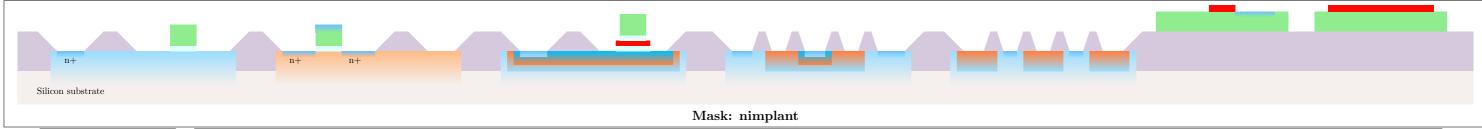


Wafer Cleanliness	Step Number	Equipment	Location	Cleanliness	Process	Requirements
Clean	11.1	B1: Sulfuric cleaning (WET-B1)	P2-01000	Clean	Default cleaning	
Clean	11.2	Spin Dryer-B (SRD-B)	P2-01000	Clean	Dry the wafer automatically	
Clean	11.3	SVG Coater Track (PHT-T1)	P2-00100	Clean Semi clean	HMDS, PR coating, soft bake	FH 6400L: 3krpm (${\approx}1.5 \mu m$), soft bake: 110°C 1min
Clean	11.4	ASML Stepper (PHT-S1)	P2-00100	Clean Semi clean	Exposure of the layer	
Clean	11.5	SVG Developer Track (PHT-T2)	P2-00100	Clean Semi clean	Develop, Hard bake	FHD-5, 1min; hard bake: 120°C , 1min
Clean	11.6	CF-3000 Implanter (IMP-3000)	P2-01000	Clean Semi clean	Phorphorus implant	$2.5 \times 10^{12} cm^{-2}$ @ 90keV
Clean	11.7	PS210 Asher (DRY-PR-1)	P2-01000	Clean	Resist strip	
Clean	11.8	E4:Resist strip (WET-E4)	P2-01000	Clean Semi clean	Resist strip	
Clean	11.9	Spin Dryer-E (SRD-E)	P2-01000	Clean Semi clean	Dry the wafer automatically	

12 P+ implant

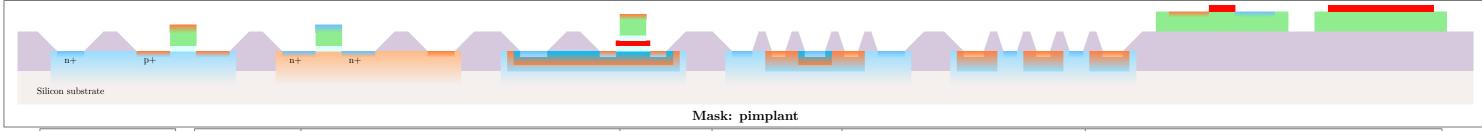


Wafer Cleanliness	Step Number	Equipment	Location	Cleanliness	Process	Requirements
Clean	12.1	B1: Sulfuric cleaning (WET-B1)	P2-01000	Clean	Default cleaning	
Clean	12.2	Spin Dryer-B (SRD-B)	P2-01000	Clean	Dry the wafer automatically	
Clean	12.3	SVG Coater Track (PHT-T1)	P2-00100	Clean Semi clean	HMDS, PR coating, soft bake	FH 6400L: 3krpm (${\approx}1.5 \mu m$), soft bake: 110°C 1min
Clean	12.4	ASML Stepper (PHT-S1)	P2-00100	Clean Semi clean	Exposure of the layer	
Clean	12.5	SVG Developer Track (PHT-T2)	P2-00100	Clean Semi clean	Develop, Hard bake	FHD-5, 1min; hard bake: 120°C , 1min
Clean	12.6	CF-3000 Implanter (IMP-3000)	P2-01000	Clean Semi clean	Boron implant	$2.5 \times 10^{12} cm^{-2}$ @ 35keV
Clean	12.7	PS210 Asher (DRY-PR-1)	P2-01000	Clean	Resist strip	
Clean	12.8	E4:Resist strip (WET-E4)	P2-01000	Clean Semi clean	Resist strip	
Clean	12.9	Spin Dryer-E (SRD-E)	P2-01000	Clean Semi clean	Dry the wafer automatically	
Clean	12.10	A3:Sulfuric cleaning (WET-A3)	P2-01000	Clean	Default cleaning	
Clean	12.11	Spin Dryer-A (SRD-A)	P2-01000	Clean	Dry the wafer automatically	
Clean	12.12	Diffusion Furnace-A1, anneal/oxidation (DIF-A1)	P2-01000	Clean	Drive in	10 minutes @ 1050°C in inert (N_2) environment

13 Silicification

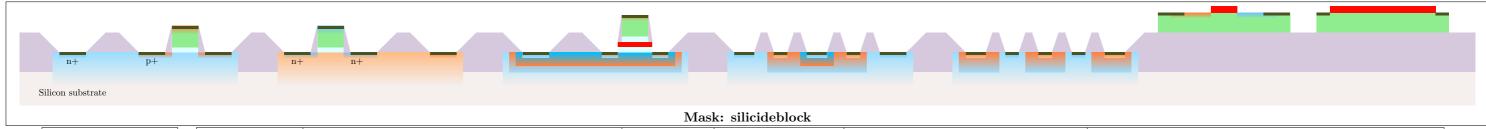


Wafer Cleanliness	Step Number	Equipment	Location	Cleanliness	Process	Requirements
Clean	13.1	A3:Sulfuric cleaning (WET-A3)	P2-01000	Clean	Default cleaning	
Clean	13.2	Spin Dryer-A (SRD-A)	P2-01000	Clean	Dry the wafer automatically	
Clean	13.3	LPCVD-B3 LTO (CVD-B3)	P2-01000	Clean	Spacer oxide	50 nm
Clean	13.4	SVG Coater Track (PHT-T1)	P2-00100	Clean Semi clean	HMDS, PR coating, soft bake	HPR 504: 3krpm (${\approx}1.5\mu m$), soft bake: 110°C 1min
Clean	13.5	ASML Stepper (PHT-S1)	P2-00100	Clean Semi clean	Exposure of the layer	
Clean	13.6	SVG Developer Track (PHT-T2)	P2-00100	Clean Semi clean	Develop, Hard bake	FHD-5, 1min; hard bake: 120°C , 1min
Clean	13.7	AOE Etcher (DRY-AOE)	P2-01000	Clean	Anisotropic oxide etch	12 seconds
Clean	13.8	E4:Resist strip (WET-E4)	P2-01000	Clean Semi clean	Sulfuric resist strip	H2SO4+H2O2, 120°C , 10mins
Clean	13.9	Spin Dryer-E (SRD-E)	P2-01000	Clean Semi clean	Dry the wafer automatically	
Semi clean	13.10	Varian 3180 Sputter (SPT-3180)	P2-01000	Semi clean	Deposit Titanium	15 seconds (roughly 60nm)
Semi clean	13.11	AG610 RTP (DIF-R2)	P2-01000	Semi clean	First reaction phase	240 seconds @ 700°C
Semi clean	13.12	E2: General purpose (WET-E2)	P2-01000	Semi clean	Remove unreacted Titanium	APM solution (Ammonia and Hydrogen Peroxide mixture, 23.1nm/min) -> roughly 2 minutes 30 seconds
Semi clean	13.13	Spin Dryer-E (SRD-E)	P2-01000	Clean Semi clean	Dry the wafer automatically	
Semi clean	13.14	AG610 RTP (DIF-R2)	P2-01000	Semi clean	Second reaction phase	240 seconds @ 800°C

14 Contact

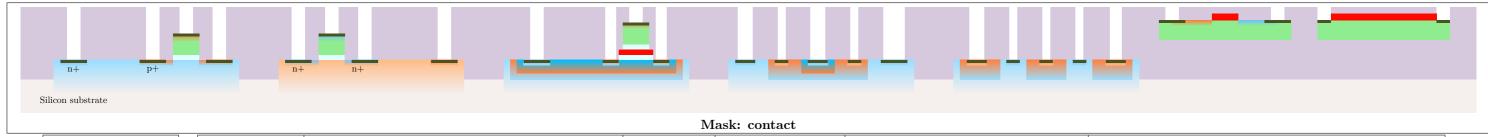

Wafer Cleanliness	Step Number	Equipment	Location	Cleanliness	Process	Requirements
Semi clean	14.1	D1: Dump rinse (WET-D-DR)	P2-01000	Semi clean	Wafer cleaning	
Semi clean	14.2	Spin Dryer-D (SRD-D)	P2-01000	Semi clean	Dry the wafer automatically	
Semi clean	14.3	LPCVD-F4 LTO/PSG (CVD-F4)	P2-01000	Semi clean	Oxide deposition	500 nm
Semi clean	14.4	SVG Coater Track (PHT-T1)	P2-00100	Clean Semi clean	HMDS, PR coating, soft bake	HPR 504: 3krpm (${\approx}1.5\mu m$), soft bake: 110°C 1min
Semi clean	14.5	ASML Stepper (PHT-S1)	P2-00100	Clean Semi clean	Exposure of the layer	
Semi clean	14.6	SVG Developer Track (PHT-T2)	P2-00100	Clean Semi clean	Develop, Hard bake	FHD-5, 1min; hard bake: 120°C , 1min
Semi clean	14.7	E2: General purpose (WET-E2)	P2-01000	Semi clean	BOE (1:6), LTO Etch	1 minute (500 nm, 500nm/min)
Semi clean	14.8	Spin Dryer-E (SRD-E)	P2-01000	Clean Semi clean	Dry the wafer automatically	
Semi clean	14.9	Y1:MS2001 Resist strip (WET-Y1)	P2-00100	Semi clean	Resist Stripping	5mins, 70°C
Semi clean	14.10	Spin Dryer-Y (SRD-Y)	P2-00100	Semi clean	Spin dry	

15 Metal 1

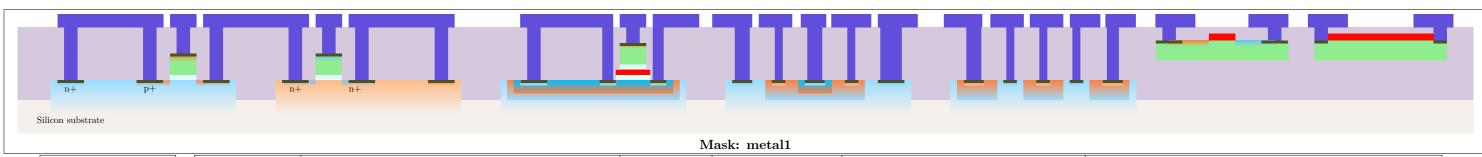

Wafer Cleanliness	Step Number	Equipment	Location	Cleanliness	Process	Requirements
Semi clean	15.1	Varian 3180 Sputter (SPT-3180)	P2-01000	Semi clean	Deposit Aluminum + Titanium finish	Aluminum: 38 seconds (roughly 600nm) + Titanium: 5 seconds (roughly 20nm)
Semi clean	15.2	SVG Coater Track (PHT-T1)	P2-00100	Clean Semi clean	HMDS, PR coating, soft bake	HPR 504: 3krpm (${\approx}1.5 \mu m$), soft bake: 110°C 1min
Semi clean	15.3	ASML Stepper (PHT-S1)	P2-00100	Clean Semi clean	Exposure of the layer	
Semi clean	15.4	SVG Developer Track (PHT-T2)	P2-00100	Clean Semi clean	Develop, Hard bake	FHD-5, 1min; hard bake: 120°C , 1min
Semi clean	15.5	E2: General purpose (WET-E2)	P2-01000	Semi clean	Wire formation	APM solution (Ammonia and Hydrogen Peroxide mixture, 23.1nm/min) -> roughly 1 minute
Semi clean	15.6	Spin Dryer-E (SRD-E)	P2-01000	Clean Semi clean	Dry the wafer automatically	
Semi clean	15.7	D1: Aluminum etch (WET-D1)	P2-01000	Semi clean	Wire formation	2 minutes (600 nm, 282.3 nm/min)
Semi clean	15.8	Y1:MS2001 Resist strip (WET-Y1)	P2-00100	Semi clean	Resist Stripping	5mins, 70° C
Semi clean	15.9	Spin Dryer-Y (SRD-Y)	P2-00100	Semi clean	Spin dry	

16 Via 1




Wafer Cleanliness	Step Number	Equipment	Location	Cleanliness	Process	Requirements
Semi clean	16.1	D1: Dump rinse (WET-D-DR)	P2-01000	Semi clean	Wafer cleaning	
Semi clean	16.2	Spin Dryer-D (SRD-D)	P2-01000	Semi clean	Dry the wafer automatically	
Semi clean	16.3	LPCVD-F4 LTO/PSG (CVD-F4)	P2-01000	Semi clean	Oxide deposition	500 nm
Semi clean	16.4	SVG Coater Track (PHT-T1)	P2-00100	Clean Semi clean	HMDS, PR coating, soft bake	HPR 504: 3krpm (${\approx}1.5 \mu m$), soft bake: 110°C 1min
Semi clean	16.5	ASML Stepper (PHT-S1)	P2-00100	Clean Semi clean	Exposure of the layer	
Semi clean	16.6	SVG Developer Track (PHT-T2)	P2-00100	Clean Semi clean	Develop, Hard bake	FHD-5, 1min; hard bake: 120°C , 1min
Semi clean	16.7	E2: General purpose (WET-E2)	P2-01000	Semi clean	BOE (1:6), LTO Etch	1 minute (500 nm, 500nm/min)
Semi clean	16.8	Spin Dryer-E (SRD-E)	P2-01000	Clean Semi clean	Dry the wafer automatically	
Semi clean	16.9	Y1:MS2001 Resist strip (WET-Y1)	P2-00100	Semi clean	Resist Stripping	5mins, 70°C
Semi clean	16.10	Spin Dryer-Y (SRD-Y)	P2-00100	Semi clean	Spin dry	

17 Metal 2




Wafer Cleanliness	Step Number	Equipment	Location	Cleanliness	Process	Requirements
Semi clean	17.1	Varian 3180 Sputter (SPT-3180)	P2-01000	Semi clean	Deposit Aluminum + Titanium finish	Aluminum: 38 seconds (roughly 600nm) + Titanium: 5 seconds (roughly 20nm)
Semi clean	17.2	SVG Coater Track (PHT-T1)	P2-00100	Clean Semi clean	HMDS, PR coating, soft bake	HPR 504: 3krpm ($\approx\!1.5\mu m$), soft bake: 110°C 1min
Semi clean	17.3	ASML Stepper (PHT-S1)	P2-00100	Clean Semi clean	Exposure of the layer	
Semi clean	17.4	SVG Developer Track (PHT-T2)	P2-00100	Clean Semi clean	Develop, Hard bake	FHD-5, 1min; hard bake: $120^{\circ}\mathrm{C}$, 1min
Semi clean	17.5	E2: General purpose (WET-E2)	P2-01000	Semi clean	Wire formation	APM solution (Ammonia and Hydrogen Peroxide mixture, 23.1nm/min) -> roughly 1 minute
Semi clean	17.6	Spin Dryer-E (SRD-E)	P2-01000	Clean Semi clean	Dry the wafer automatically	
Semi clean	17.7	D1: Aluminum etch (WET-D1)	P2-01000	Semi clean	Wire formation	2 minutes (600 nm, 282.3 nm/min)
Semi clean	17.8	Y1:MS2001 Resist strip (WET-Y1)	P2-00100	Semi clean	Resist Stripping	5mins, 70°C
Semi clean	17.9	Spin Dryer-Y (SRD-Y)	P2-00100	Semi clean	Spin dry	

18 Via 2

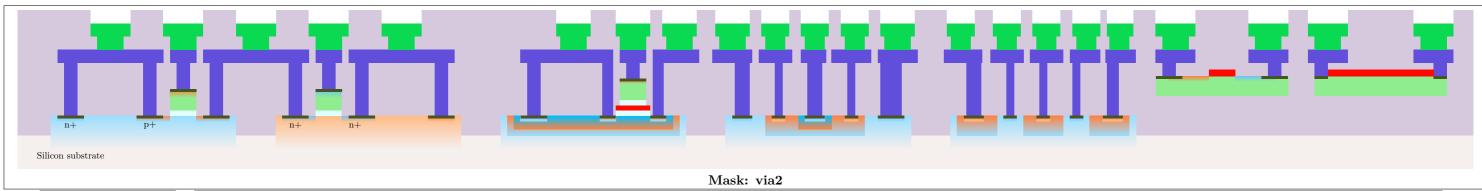

Wafer Cleanliness	Step Number	Equipment	Location	Cleanliness	Process	Requirements
Semi clean	18.1	D1: Dump rinse (WET-D-DR)	P2-01000	Semi clean	Wafer cleaning	
Semi clean	18.2	Spin Dryer-D (SRD-D)	P2-01000	Semi clean	Dry the wafer automatically	
Semi clean	18.3	LPCVD-F4 LTO/PSG (CVD-F4)	P2-01000	Semi clean	Oxide deposition	500 nm
Semi clean	18.4	SVG Coater Track (PHT-T1)	P2-00100	Clean Semi clean	HMDS, PR coating, soft bake	HPR 504: 3krpm (${\approx}1.5 \mu m$), soft bake: 110°C 1min
Semi clean	18.5	ASML Stepper (PHT-S1)	P2-00100	Clean Semi clean	Exposure of the layer	
Semi clean	18.6	SVG Developer Track (PHT-T2)	P2-00100	Clean Semi clean	Develop, Hard bake	FHD-5, 1min; hard bake: 120°C , 1min
Semi clean	18.7	E2: General purpose (WET-E2)	P2-01000	Semi clean	BOE (1:6), LTO Etch	1 minute (500 nm, 500nm/min)
Semi clean	18.8	Spin Dryer-E (SRD-E)	P2-01000	Clean Semi clean	Dry the wafer automatically	
Semi clean	18.9	Y1:MS2001 Resist strip (WET-Y1)	P2-00100	Semi clean	Resist Stripping	5mins, 70°C
Semi clean	18.10	Spin Dryer-Y (SRD-Y)	P2-00100	Semi clean	Spin dry	

19 Metal 3

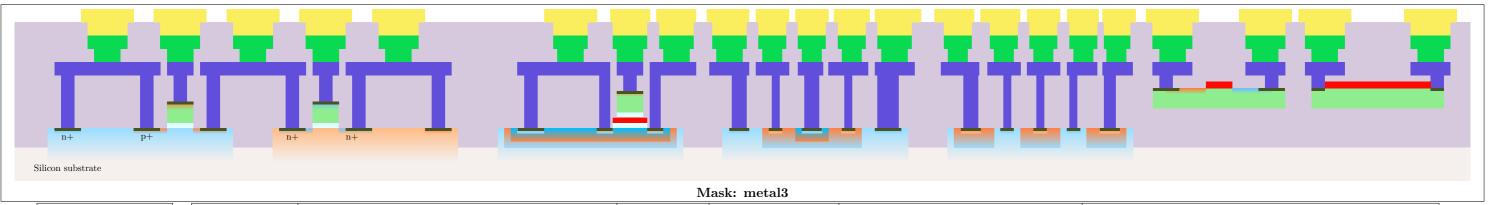

Wafer Cleanliness	Step Number	Equipment	Location	Cleanliness	Process	Requirements
Semi clean	19.1	Varian 3180 Sputter (SPT-3180)	P2-01000	Semi clean	Deposit Aluminum + Titanium finish	Aluminum: 38 seconds (roughly 600nm) + Titanium: 5 seconds (roughly 20nm)
Semi clean	19.2	SVG Coater Track (PHT-T1)	P2-00100	Clean Semi clean	HMDS, PR coating, soft bake	HPR 504: 3krpm (${\approx}1.5\mu m$), soft bake: 110°C 1min
Semi clean	19.3	ASML Stepper (PHT-S1)	P2-00100	Clean Semi clean	Exposure of the layer	
Semi clean	19.4	SVG Developer Track (PHT-T2)	P2-00100	Clean Semi clean	Develop, Hard bake	FHD-5, 1min; hard bake: 120°C , 1min
Semi clean	19.5	E2: General purpose (WET-E2)	P2-01000	Semi clean	Wire formation	APM solution (Ammonia and Hydrogen Peroxide mixture, 23.1nm/min) -> roughly 1 minute
Semi clean	19.6	Spin Dryer-E (SRD-E)	P2-01000	Clean Semi clean	Dry the wafer automatically	
Semi clean	19.7	D1: Aluminum etch (WET-D1)	P2-01000	Semi clean	Wire formation	2 minutes (600 nm, 282.3 nm/min)
Semi clean	19.8	Y1:MS2001 Resist strip (WET-Y1)	P2-00100	Semi clean	Resist Stripping	5mins, 70°C
Semi clean	19.9	Spin Dryer-Y (SRD-Y)	P2-00100	Semi clean	Spin dry	

20 Glass



Wafer Cleanliness	Step Number	Equipment	Location	Cleanliness	Process	Requirements
Semi clean	20.1	D1: Dump rinse (WET-D-DR)	P2-01000	Semi clean	Wafer cleaning	
Semi clean	20.2	Spin Dryer-D (SRD-D)	P2-01000	Semi clean	Dry the wafer automatically	
Semi clean	20.3	LPCVD-F4 LTO/PSG (CVD-F4)	P2-01000	Semi clean	Oxide deposition	500 nm
Semi clean	20.4	SVG Coater Track (PHT-T1)	P2-00100	Clean Semi clean	HMDS, PR coating, soft bake	HPR 504: 3krpm (${\approx}1.5 \mu m$), soft bake: 110°C 1min
Semi clean	20.5	ASML Stepper (PHT-S1)	P2-00100	Clean Semi clean	Exposure of the layer	
Semi clean	20.6	SVG Developer Track (PHT-T2)	P2-00100	Clean Semi clean	Develop, Hard bake	FHD-5, 1min; hard bake: 120°C , 1min
Semi clean	20.7	E2: General purpose (WET-E2)	P2-01000	Semi clean	BOE (1:6), LTO Etch	1 minute (500 nm, 500nm/min)
Semi clean	20.8	Spin Dryer-E (SRD-E)	P2-01000	Clean Semi clean	Dry the wafer automatically	
Semi clean	20.9	Y1:MS2001 Resist strip (WET-Y1)	P2-00100	Semi clean	Resist Stripping	5mins, 70°C
Semi clean	20.10	Spin Dryer-Y (SRD-Y)	P2-00100	Semi clean	Spin dry	

