# **Assignment -4**

# **Question:**

Write code and connections in wokwi for the ultrasonic sensor. Whenever the distance is less than 100 cms send an "alert" to the IBM cloud and display in the device recent events. Upload document with wokwi share link and images of IBM cloud.

```
Solution: //Pins const int
TRIG_PIN = 7; const int
ECHO_PIN =8;
//Anything over 400 cm (23200 us pulse) is "out of range"
const unsigned int MAX_DIST = 23200;
void setup() {
// The Trigger pin will tell the sensor to range find Pin
Mode(TRIG_PIN, OUTPUT);
digital Write(TRIG_PIN, LOW);
//Set Echo pin as input to measure the duration of
//pulses coming back from the distance sensor
pinMode(ECHO_PIN, INPUT );
// We'll use the serial monitor to view the sensor output
Serial.begin(9600);
 }
void loop() { unsigned
long t1;
```


```
unsigned long t2; unsigned
long pulse_width; float cm;
float inches;
// Hold the trigger pin high for at least 10 us
digitalWrite(TRIG_PIN, HIGH);
delayMicroseconds(10); digitalWrite(TRIG_PIN,
LOW);
// Wait for pulse on echo pin while
(digitalRead( ECHO_PIN )==0 );
// Measure how long the echo pin was held high (pulse
width) // Note: the micros() counter will overflow after-70
min t1= micros (); while (digitalRead(ECHO_PIN) ==1); t2=
micros ();
pulse\_width = t2-t1;
// Calculate distance in centimeters and inches. The constants
//are found in the datasheet, and calculated from the assumed speed
// of sound in air at sea level (- 340m/s)
cm=pulse_Width / 58; inches =
pulse_width/148.0;
// Print out results
if (pulse_width >MAX_DIST)
{
Serial.println("Out of range");
} else Serial.println("*****************************);
Serial.print("The Measured Distance in cm: ");
Serial.println(cm);
```

# Output:


1.If the distance is less than 100 cms, it alerts.

```
WOKWI → SHARE
  hc-sr04.ino diagram.json ● Library Manager ▼
            // Pins
const int TRIG_PIN = 7;
const int ECHO_PIN = 8;
                                                                                                                                                                                                                     ₫00:00.466 (%58%
           // Anything over 400 cm (23200 us pulse) is "out of range" const unsigned int MAX_DIST = 23200;
            void setup() {
              // The Trigger pin will tell the sensor to range find
pinMode(TRIG_PIN, OUTPUT);
digitalWrite(TRIG_PIN, LOW);
                                                                                                                                                             ONU OO
               //Set Echo pin as input to measure the duration of
//pulses coming back from the distance sensor
pinMode(ECHO_PIN, INPUT);
              // We'll use the serial monitor to view the sensor output
Serial.begin(9600);
                                                                                                                                                            ANILOS TO
           void loop() {
             unsigned long t1;
unsigned long t2;
unsigned long pulse_width;
float cm;
float inches;
                                                                                                                       The Measured Distance in cm : 84.14
                                                                                                                                                                                                                           W II 0
             // Hold the trigger pin high for at least 10 us
```

2. If the distance is more than 100 cms, it won't alert

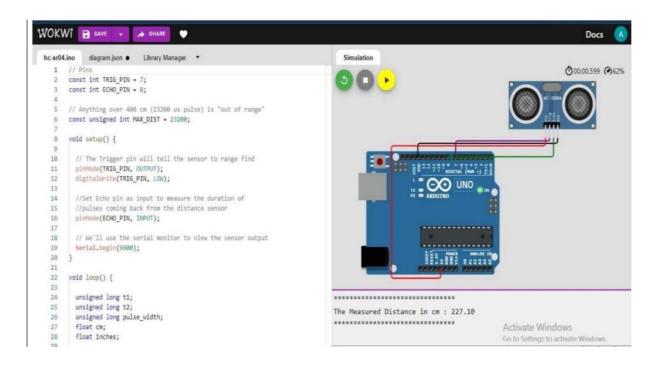

### 3. Simulation and code execution

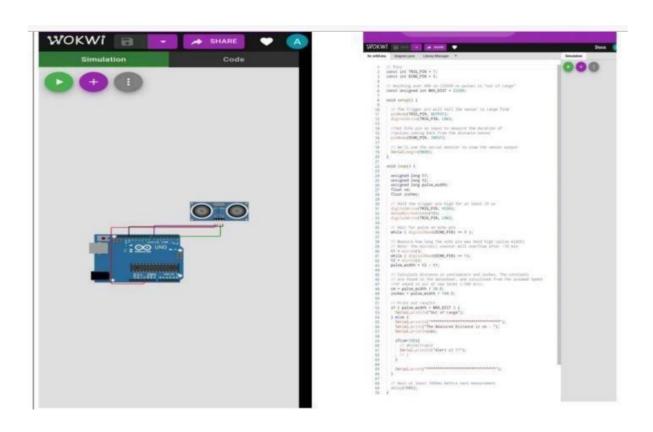

# SURYAS - 1919106107

