


Chapter 7C: Bluetooth Mesh Firmware

This chapter covers mesh code examples and mesh firmware architecture. It also covers client applications that can be used to provision and interact with mesh devices.

7C.1 FIRM	MWARE ARCHITECTURE	. 2
7C.1.1 MES	SH APPLICATION AND LIBRARIES	.,
7C.1.2 USEI	R APPLICATION	.:
7C.2 MES	SH DEMO STARTER APPLICATIONS	[3
	IT_DIMMABLE (SERVER)	
7C.2.2 on (OFF_SWITCH (CLIENT)	13
7C.2.3 (AD	VANCED) DIMMER (CLIENT)	13
	VANCED) SENSOR_TEMPERATURE	
	VANCED) OTA/DFU	
•	VANCED) APPLE HOMEKIT2	
`	RCISES	
	C.1 ADD AN ON_OFF_SWITCH TO YOUR NETWORK	
	C.2 ADD A DIMMER TO THE NETWORK	
Exercise 7	C.3 (ADVANCED) ADD A 2 ND ELEMENT FOR THE GREEN LED TO LIGHT_DIMMABLE	23
	C.4 (ADVANCED) UPDATE LIGHT_DIMMABLE TO USE THE HSL MODEL	



7C.1 Firmware Architecture

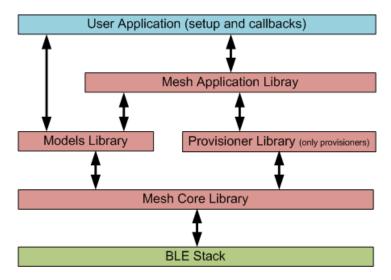

7C.1.1 Mesh Application and Libraries

The Mesh application is implemented in a set of files located in:

wiced_btsdk/dev-kit/libraries/btsdk-mesh/COMPONENT_mesh_app_lib

The user does not typically need modify any of these files. The files are:

mesh_application.c/.h	Top-level file containing application_start, stack initialization,
	Bluetooth management callback function, and other helper functions.
mesh_app_gatt.c	GATT database setup, GATT callback function, and all other GATT
	related functions.
wiced_bt_cfg.c	Bluetooth configuration including advertisement settings.
mesh_app_hci.c	Functions used for sending/receiving data to/from a host when the
	mesh device is used in HCI mode.
mesh_app_provision_server.c	Functions that allow the mesh device to be provisioned onto a
	network.

The API for the lower level BT mesh core, client and models library functions can be found in header functions that are found in the SDK at:

wiced_btsdk/dev-kit/btsdk-include/wiced_bt_mesh_*.h

Note that the easiest way to get to these files from inside the IDE are to right-click on an item such as a datatype for a structure and select "Open Declaration" (F3).



7C.1.2 User Application

The user application includes the Bluetooth and Mesh header files, sets up several variables and structures to configure mesh behavior, then registers and defines callback functions for various events that will be called from the mesh firmware. All user application functionality is handled in the various callback functions which will be discussed below.

Includes

The user application starts with at least the following includes to get access to the Bluetooth, mesh, trace, and HCI library functions:


```
#include "wiced_bt_ble.h"
#include "wiced_bt_gatt.h"
#include "wiced_bt_mesh_models.h"
#include "wiced_bt_trace.h"
#include "wiced_bt_mesh_app.h"

#ifdef HCI_CONTROL
#include "wiced_transport.h"
#include "hci_control_api.h"
#endif
```

There may be other header files included depending on the application's functionality.

Configuration Variables

After the include files, there is a set of variables that are used to configure the application. These variables configure names, models, properties, elements, and features such as relay, GATT proxy, friend, and low power. The configuration is done hierarchically, and it looks like this. Details of each item are discussed below (from the bottom up).

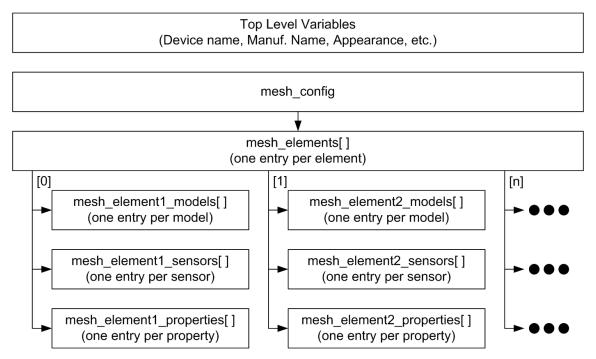



Top Level Variables

The first set of variables set up the manufacturer name, model number, etc. as shown with an example here:

Models

The next item is an array that specifies the models that will be implemented in the device. In fact, you need one of these arrays for each element in the device. So, if the device has two elements, you would have two arrays which each specify the models used in one of the two elements.

For the primary element, the array must contain WICED_BT_MESH_DEVICE. It will also contain other models to implement the required functionality of the primary element. For example, if the primary element has a user property server, the array will have an entry for WICED_BT_MESH_MODEL_USER_PROPERTY_SERVER. Secondary elements (if there are any) do not require WICED_BT_MESH_DEVICE but will contain any other models required for the element's functionality.

An example of a model array for a primary element with three models is shown here:

```
wiced_bt_mesh_core_config_model_t mesh_element1_models[] =
{
    WICED_BT_MESH_DEVICE,
    WICED_BT_MESH_MODEL_USER_PROPERTY_SERVER,
    WICED_BT_MESH_MODEL_LIGHT_LIGHTNESS_SERVER,
};
```



Sensors

If your device implements sensor models, then you will need an array for each element containing sensors to configure each sensor. Each array has one structure entry per sensor in the given element. If your device does not implement any sensor models, then these arrays are not required and can be deleted.

An example for a configuration array for a single temperature sensor is shown here:

```
wiced_bt_mesh_core_config_sensor_t mesh_element1_sensors[] =
{
       .property id = WICED BT MESH PROPERTY PRESENT AMBIENT TEMPERATURE,
       .prop value len = WICED BT MESH PROPERTY LEN PRESENT AMBIENT TEMPERATURE,
        .descriptor =
           .positive tolerance = MESH TEMPERATURE SENSOR POSITIVE TOLERANCE,
           .negative_tolerance = MESH_TEMPERATURE_SENSOR_NEGATIVE_TOLERANCE,
.sampling_function = MESH_TEMPERATURE_SENSOR_SAMPLING_FUNCTION,
           .measurement period = MESH TEMPERATURE SENSOR MEASUREMENT PERIOD,
           .update interval = MESH TEMPERATURE SENSOR UPDATE INTERVAL,
       },
       .data = (uint8 t*)&mesh sensor sent value,
       .cadence =
       {
         // Value 1 indicates that cadence does not change depending on the measurements
           .fast_cadence_period_divisor = 1,
           data by default is 4 seconds
           .fast_cadence_low
.fast_cadence_high
                                      = 0,
       },
       .num\_series = 0,
       .series columns = NULL,
       .num\_settings = 1,
       .settings = sensor_settings,
};
```



Properties

If any of the elements have properties associated with them, they are specified in an array of property structures. Each entry in the array specifies one property.

Each element in the device that contains properties has its own array to specify those properties just like with the model and sensor arrays. If there are no properties for a given element, then this array is not required and can be deleted.

An example of a property array for an element with one property (firmware revision) is shown here:

Elements

This is one array that configures the elements in the device. There is one entry in the array for each element in the device. The entries define the element's location, default transition time, power up state, etc. Each entry also points to the model array, sensor array (if there is one) and property array (if there is one) for that element.

An example element array for a device with one element is shown here. Note the pointers provided to mesh_element1_properties and mesh_element1_models. In this case there is no sensor so sensors_num is set to 0 and NULL is specified for the pointer. The code example applications include comments explaining what each element means.

```
wiced bt mesh core config element t mesh elements[] =
{
        .location = MESH ELEM LOC MAIN,
        .default_transition_time = MESH DEFAULT TRANSITION TIME IN MS,
        .onpowerup state = WICED BT MESH ON POWER UP STATE RESTORE,
        .default \overline{level} = 0,
        .range min = 1,
        .range \max = 0 \times \text{ffff}
        .move rollover = 0,
        .properties num = MESH APP NUM PROPERTIES,
        .properties = mesh element1 properties,
        .sensors_num = 0,
        .sensors = NULL,
        .models num = MESH APP NUM MODELS,
        .models = mesh element1 models,
};
```



Device Configuration

The final structure contains information such as product ID, vendor ID, etc., as well as features such as relay, GATT proxy, friend, and low power. This structure also specifies how many replay caches are available, which limits how many other devices can send application messages to this device. If the node is a friend node or a low power node then those settings are specified in this structure (details below). Finally, a pointer to the element array is provided.

An example mesh configuration structure is shown here. Note the pointer provided to the mesh_elements array. The code example firmware includes comments explaining what each element means.



The Friend configuration parameters are:

- receive_window: The time window (in ms) that an LPN must listen for a response from its Friend.
 Lower values allow LPN nodes to turn off quicker thereby saving more power since they don't need to
 listen in as wide a window but that gives the Friend node less time to prepare a response (see the figure
 below receive_delay)
- cache_buf_len: The number of bytes allocated to store messages for all LPNs supported by the Friend. Each message is 34 bytes long.
- max_lpn_num: Maximum number of LPNs that can be supported by a Friend.

The LPN configuration parameters are:


rssi_factor and receive_window_factor: These are weights that are used to determine how "good" a
potential friend will be. Both have a range of 1 – 2.5 in steps of 0.5. They allow the application to
prioritize the importance of signal strength vs. delay of response. A potential Friend sees a friend
request from an LPN and sends its friend offer after a delay calculated using this formula:

Friend offer delay = (receive_window_factor * receive_window) - (rssi_factor * RSSI)

An LPN will pick the first friend to respond, since it has the lowest calculated value.

- min_cache_size_log: The minimum number of messages (not bytes) the Friend must be able to hold for the LPN.
- **receive_delay**: This is a time (in ms) requested by the LPN before the Friend can respond to a request. This allows the LPN to stop listening for a time while the Friend prepares its response.

The relationship between receive_delay and receive_window can be seen here:

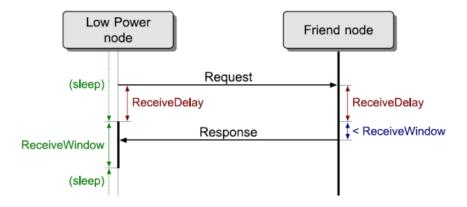

(This figure is taken from the Bluetooth Specification)

• **poll_timeout**: This is the maximum time (in ms) between consecutive requests from an LPN. If a Friend node doesn't get a request within poll_timeout, it will terminate the friendship. The LPN will not know the friendship is terminated until it sends a request 6 times and does not receive a response. At that point the LPN will begin searching for a new Friend.

User Function Callbacks

After the configuration variables, there must be a structure defined that contains a table of pointers to the functions that will be called by various mesh events. The structure looks like the following. Note that NULL can



be specified for any of the functions that are not required by the user application functionality. Each of the items from the table are discussed in more detail below.

Application Initialization

This function is called once the mesh stack is running and it is ready for the user application to perform any initialization that it requires. The initialization function takes one wiced_bool_t parameter called is_provisioned which is passed in by the stack. That is, the prototype for the application initialization function is:

```
typedef void(*wiced_bt_mesh_app_init_t)(wiced_bool_t is_provisioned);
```

The application initialization function generally does the following things:

- 1. (Optional) If provisioned, the device may remove provisioning information after a set number of reset cycles.
- 2. Set the device name appearance, firmware version, etc. For example:

```
wiced_bt_cfg_settings.device_name = (uint8_t *)"Dimmable Light";
wiced_bt_cfg_settings.gatt_cfg.appearance = APPEARANCE_LIGHT_CEILING;

mesh_prop_fw_version[0] = 0x30 + (WICED_SDK_MAJOR_VER / 10);
mesh_prop_fw_version[1] = 0x30 + (WICED_SDK_MAJOR_VER % 10);
mesh_prop_fw_version[2] = 0x30 + (WICED_SDK_MINOR_VER / 10);
mesh_prop_fw_version[3] = 0x30 + (WICED_SDK_MINOR_VER % 10);
mesh_prop_fw_version[4] = 0x30 + (WICED_SDK_REV_NUMBER / 10);
mesh_prop_fw_version[5] = 0x30 + (WICED_SDK_REV_NUMBER % 10);
// convert 12 bits of BUILD_NUMMBER to two base64 characters big endian
mesh_prop_fw_version[6] =
wiced_bt_mesh_base64_encode_6bits((uint8_t)(WICED_SDK_BUILD_NUMBER >> 6) & 0x3f);
mesh_prop_fw_version[7] =
wiced_bt_mesh_base64_encode_6bits((uint8_t)WICED_SDK_BUILD_NUMBER & 0x3f);
```

- 3. (Optional) If not provisioned, setup a scan response packet.
- 4. Do any required initialization for the user's application.
- 5. Initialize any models, sensors, or property servers that the device requires (other than the required core mesh models). For the element model example shown in the previous section, the following would be placed in the application initialization function:



The arguments to these initialization functions are:

- Element Index: This is the index of the element in the element array.
- Callback function: The function that is called when a message is received for the model (use NULL if the user application doesn't need a message callback)
- is_provisioned: This indicates whether a device has been provisioned or not. If a device has not been provisioned then configuration data for the model is deleted from NVRAM.

Button processing

The function specified here is a callback to the user application to configure button functionality. Typically, the user would configure the buttons with interrupts and then would use interrupt callback functions to process button events. The prototype for this function is:

```
typedef void(*wiced_bt_mesh_app_hardware_init_t)(void);
```

If the platform being used as the target device contains a push button but this callback is specified as NULL, the button is configured in the mesh_application.c library file to perform a factory reset on the device whenever the button is pressed for 3 or more seconds and then released. Factory reset will return the device to an unprovisioned state.

GATT connection status

The function specified here is called when a GATT connection event occurs. That is, when there is a connection up or down GATT callback event. It is passed a structure with the GATT connection status of type wiced_bt_gatt_connection_status_t. That is, the prototype for the function is:

```
typedef void(*wiced_bt_mesh_app_gatt_conn_status_t) (wiced_bt_gatt_connection_status_t *p_status);
Attention processing
```

This function is called by the stack whenever it wants the device to alert the user of its presence. For example, it may be used to identify the device that is being provisioned so that the user can visually identify it from a group of unprovisioned nodes.

It is up to the hardware to determine how that alert should be done – e.g. blink and LED, sound a buzzer, etc. The stack provides the index of the element that should be used and a length of time for the alert in seconds from 0 (stop alert) up to 0xFF. The prototype for the alert function is:

```
typedef void (*wiced_bt_mesh_app_attention_t)(uint8_t element, uint8_t time);
```

Since the stack provides a length of time for the attention signal to occur, it is typical for the callback function to use a seconds timer to control when the attention signal stops.

Notify Period Set

Depending on the model, this function may be called to indicate to the application that it needs to periodically send updates. The function prototype is:

The arguments provided by the stack are the element, company_id, model_id, and the time for periodic updates to be sent in seconds. If the model is a BT SIG defined model, the company_id will be



MESH_COMPANY_ID_BT_SIG. If it is a vendor specific model, the company_id will be specific to that vendor (e.g. MESH_COMPANY_ID_CYPRESS).

If the value of time indicated by the stack is 0 then the user application should NOT send periodic updates.

The return value is a wiced_bool_t which should be returned as WICED_TRUE if the application will take care of periodic publications for the specified element, company_id, and model_id. This allows the application to handle periodic status updates for some models but not others.

It is mandatory to implement this functionality on sensors (i.e. WICED_BT_MESH_MODEL_SENSOR_SERVER). If a device does not have sensors, support for this callback is optional. If a device does not implement this callback it can just specify NULL. Applications that do not want to handle this callback should report all changes to the local states to the Mesh Models library. This will be discussed in a minute.

WICED HCI command

This function is used if the application needs to interpret HCI commands received from a host device.

As you can see, the function takes three arguments: the command opcode, a pointer to the command parameters, and the length of the command parameters.

```
Low Power Node (LPN) Sleep
```

The stack will call this function when it is safe to enter a low power mode. The stack provides the length of time in milliseconds that it does not require any processing, so the application can decide if it wants to go to sleep, and what sleep mode is appropriate. It is up to the user application to determine whether to enter a low power mode or not, and to wake up at the appropriate time. The prototype for this function is:

```
typedef void (*wiced_bt_mesh_app_lpn_sleep_t) (uint32_t duration);
```

For example, an application may go into HID-Off if the sleep time is longer than 2 minutes and ePDS if the sleep time is shorter than 2 minutes. The mesh demo low_power_led demonstrates this approach.

Factory Reset

If a function is provided here, that function will be executed before a factory reset is performed. This is necessary if the user application has NVRAM data that needs to be erased when a factory reset is done. After that function returns, a factory reset will be performed to return the device to an unprovisioned state. The prototype for this function is:

```
typedef void (*wiced_bt_mesh_app_factory_reset_t)(void);
```

Sending Messages

The model initialization functions described above allow the user to specify a callback function when a message is received. On the other hand, when the application has a message that it needs to send, it must call a function to send the appropriate message. For example, a Generic OnOff client may send a message using:



Likewise, a sensor server may send a status message using:

More examples of messages will be seen in the mesh demo starter applications in the next section.

Notifying the Mesh Model Library of Local Changes

In addition to sending messages over the network, it is also necessary in some cases to notify the Mesh Model Library of changes to local values. That is, if a value can be changed locally, the change should be reported so that the stack will be able to send the correct value when a client on the network requests it. For example, if a light on a light lightness server device can be turned on or off by the local hardware, it should use the following function to keep the library synchronized whenever the local value changes:

This is not required for sensor models because in that case the stack will call a report callback function whenever it receives a get message from a client, so it will always get the most recent sensor value before sending it out.



7C.2 MESH Demo Starter Applications

ModusToolbox contains a wealth of demo apps and snips for mesh networking. These are distributed in two starter application "groups" in ModusToolbox, each of which contains multiple applications. They are: Mesh-Demo and Mesh-Snip. Mesh-Demo contains fully-featured applications that demonstrate a complete mesh device. Mesh-Snip contains smaller examples each of which demonstrate one of the SIG BLE mesh models. At the time of this writing, every SIG defined Mesh Model has a snip example.

The remainder of this section coves details of four of the mesh demo starter applications and explains how they interact with each other.

7C.2.1 light_dimmable (Server)

Most of the code snippets shown as examples up to now have been from the light_dimmable demo application so most of the configuration is already familiar to you. This application controls an LED which can be turned on/off and can also be dimmed via a PWM.

Configuration

The configuration sets up models, properties and features using the variables and structures as described in the previous section. The models, sensors, properties and features implemented are as follows:

Models	WICED_BT_MESH_DEVICE
	WICED_BT_MESH_MODEL_USER_PROPERTY_SERVER
	WICED_BT_MESH_MODEL_LIGHT_LIGHTNESS_SERVER
Sensors	N/A
Properties	WICED_BT_MESH_PROPERTY_DEVICE_FIRMWARE_REVISION
Features	WICED_BT_MESH_CORE_FEATURE_BIT_FRIEND
	WICED_BT_MESH_CORE_FEATURE_BIT_RELAY
	WICED_BT_MESH_CORE_FEATURE_BIT_GATT_PROXY_SERVER



User Application Functionality

The top-level file for the user application is light_dimmable.c. There are helper functions to control the LED in led_control.c/h.

Two of the mesh callback functions are registered for this application: application initialization (mesh_app_init) and attention processing (mesh_app_attention).

mesh_app_init: The application initialization function does the following:

- Factory reset the device (i.e. remove provisioning info) if it is turned ON/OFF 5 times with an ON time less than 5 seconds each time
- Set the device name, appearance, and firmware version
- Start advertisements if the device isn't provisioned
- Call a function to set up a PWM that will be used to drive the LED (led_control_init)
- Initialize a 1 second timer (including specifying the timer callback function (attention_timer_cb) that will be used for attention processing
- Initialize the two models:
 - The light lightness server model registers a message callback function (mesh_app_message_handler)
 - The property server model does not register a callback because the only property is read only so there is no action required for received messages. That is, the stack will handle sending the fixed property value when it is requested.

mesh_app_message_handler: The message handler for the light lightness server model only responds to one event - WICED_BT_MESH_LIGHT_LIGHTNESS_SET. For that event, the message handler calls the function mesh_app_process_set_level which takes the value of lightness_actual_present and converts it to a percentage brightness as an 8-bit value. The value is then sent to the function led_control_set_brighness_level which sets the PWM duty cycle to achieve the desired brightness.

mesh_app_attention: The attention callback starts the timer (or stops it if the attention time is 0). Every 1 second, the timer callback is called, and it does whatever is necessary including decrementing the remaining time.

mesh_app_fast_power_off_execute: This function looks to see if the device has been powered ON/OFF a total of 5 times in a row with the ON time being less than 5 seconds each time. If that condition is satisfied, the provisioning information is removed from the device. This is useful for Mesh devices that don't have a button or other way to reset them to the factory default (e.g. a light bulb).

Button Processing: Since no callback function is provided for button processing, the default behavior is used. That is, if the target kit has a button defined in its platform, pressing the button for >3 seconds then releasing will result in a factory reset that removes all mesh provisioning information from the device.



7C.2.2 on_off_switch (Client)

This application demonstrates a basic on/off client. It can be used in conjunction with a kit that is running the on_off_switch demo application so that it can control the LED on that kit over the mesh network.

Configuration

The configuration sets up models, properties and features using the variables and structures as described in the previous section. The models, sensors, properties and features implemented are as follows:

Models	WICED_BT_MESH_DEVICE
	WICED_BT_MESH_MODEL_ONOFF_CLIENT
Sensors	N/A
Properties	N/A
Features	WICED_BT_MESH_CORE_FEATURE_BIT_LOW_POWER
	(if enabled in application settings)

User Application Functionality

The top-level file for the user application is on_off_switch.c.

Two of the mesh callback functions are registered for this application: application initialization (mesh_app_init) and button processing (mesh_app_hardware_init).

mesh_app_init: The application initialization function in this case only needs to:

- 1. Set the device name and appearance.
- 2. Start advertisements if the device is not provisioned.
- 3. Initialize the onoff client model. The onoff client model has no callback function because it does not check the result of transmission messages or status messages.

mesh_app_hardware_init: This function sets up the default button on the kit to have an interrupt on both edges with the callback function button_interrupt_handler. It also stores the default state of the button to a global variable. All other application functionality is handled by the interrupt callback.

button_interrupt_handler: This function does the following:

- Check if the button state has changed. If it has:
 - o If the button is pressed, increment a counter
 - o If the button is released, calculate the time that it was pressed:
 - If the button was pressed more than 15 seconds, do a factory reset.
 - Otherwise, call the process_button_push function.

process_button_push: This function sends a mesh message to toggle the on/off state of whatever device(s) it is controlling. It uses the default transition time and a delay of 0.

7C.2.3 (Advanced) dimmer (Client)

This application demonstrates a level client. It can be used in conjunction with a kit that is running the dimmer demo application so that it can control both on/off and dimming of the LED on that kit over the mesh network.







Configuration

The configuration sets up models, properties and features using the variables and structures as described in the previous section. The models, sensors, properties and features implemented are as follows:

Models	WICED_BT_MESH_DEVICE
	WICED_BT_MESH_MODEL_LEVEL_CLIENT
Sensors	N/A
Properties	N/A
Features	WICED_BT_MESH_CORE_FEATURE_BIT_LOW_POWER (if enabled in application settings)

User Application Functionality

The top-level file for the user application is dimmer.c. There are helper functions to handle the button in button_control.c/h

Two of the mesh callback functions are registered for this application: application initialization (mesh_app_init) and button processing (button_hardware_init).

mesh_app_init: The application initialization function:

- 1. Set the device name and appearance.
- 2. Start advertisements if the device is not provisioned.
- 3. Calls the helper function button_control_init.
- 4. Initializes the level client model. The model has a callback function called mesh_app_message_handler that is used to act on messages that come back from the server.

mesh_app_message_handler: The message callback function for the level client handles two events:

WICED_BT_MESH_TX_COMPLETE: This event occurs when the light lightness model responds that a transmission is complete.

WICED_BT_MESH_LEVEL_STATUS: This event occurs when a status message is received from the light lightness model. The callback function prints out the current level, the target level, and the time remaining in the transition.

button_control_init: This function initializes a timer and registers the callback function button_timer_callback. It then saves the current button state.

button_hardware_init: This function just sets up the default button on the kit to have an interrupt on both edges with the callback function button_interrupt_handler. All other application functionality is handled by the interrupt callback.

button_interrupt_handler: This function does the following:

- If the button state has not changed, just return.
- If the button is pressed, start a 500 ms timer.
- If the button was released after being held down for less than 500 ms, call button_set_level to send a message to toggle the LED on or off.



• If the button has been held down for more than 500ms but less than 15 seconds, call button_set_level to send a final message to adjust the brightness of the LED.

button_timer_callback: The 500 ms timer callback calculates the next brightness value for the LED and calls button_set_level to send a message to the server to adjust the brightness of the LED .

button_set_level: This function sends a level message to the server using wiced_bt_mesh_model_level_client_set.



7C.2.4 (Advanced) sensor_temperature

This application demonstrates a sensor server. In this case, the sensor measures temperature. It sends status messages to report values on a periodic basis.

Configuration

The configuration sets up models, properties and features using the variables and structures as described in the previous section. The models, sensors, properties and features implemented are as follows:

Models	WICED_BT_MESH_DEVICE
	WICED_BT_MESH_MODEL_SENSOR_SERVER
Sensors	WICED_BT_MESH_PROPERTY_PRESENT_AMBIENT_TEMPERATURE
Properties	N/A
Features	WICED_BT_MESH_CORE_FEATURE_BIT_LOW_POWER
	(if enabled in application settings)

User Application Functionality

The top-level file for the user application is sensor_temperature.c.

Four of the mesh callback functions are registered for this application:

- Application initialization (mesh_app_init)
- Notify period set (mesh_app_notify_period_set).
- Low power node sleep (mesh_app_lpn_sleep)
- Factory reset (mesh_app_factory_reset)

mesh_app_init: The application initialization function:

- Sets up a pointer to the sensor configuration structure
- Sets the device name, appearance, and FW version
- If the device isn't provisioned yet, it starts advertising and returns.
- If the device is provisioned, it:
 - Calls thermistor_init to initialize the ADC
 - Reads the temperature using mesh_sensor_get_temperature_8
 - Initializes a timer and registers the callback function mesh_sensor_publish_timer_callback
 - Reads the stored sensor cadence value from NVRAM
 - o Initializes the sensor server and registers two callback functions one for the sensor report handler and one for the configuration change handler
 - mesh_sensor_server_report_handler
 - mesh_sensor_server_config_change_handler
 - Sends the initial temperature value by calling wiced_bt_mesh_model_sensor_server_data

mesh_sensor_publish_timer_callback: The timer callback function is used to send periodic temperature updates. It uses the cadence value set by the client to determine how often to send an update.

mesh_sensor_server_report_handler: This is the sensor server callback function for report messages. It only implements the case **WICED_BT_MESH_SENSOR_GET**. For that case, it gets the temperature value using



mesh_sensor_get_temperature_8 and sends it to the client using wiced_bt_mesh_model_sensor_server_data.

mesh_sensor_server_config_change_handler: This is the sensor server callback function for configuration change messages. It implements two cases:

WICED_BT_MESH_SENSOR_CADENCE_SET: This event occurs when the client requests a change to the sensor cadence. For this case, the user application calls

mesh_sensor_server_process_cadence_changed. That function updates the cadence, stores its value in NVRAM, and then restarts the publish timer so that cadence changes take effect.

WICED_BT_MESH_SENSOR_SETTING_SET: This event occurs when the client requests a change to the sensor settings. For this case, the user application calls

mesh_sensor_server_process_setting_changed which just prints a UART message that the change has been received.

mesh_app_notify_period_set: This function is called when the client requests a notify period change. The function first makes sure that the request is for the correct element (MESH_TEMPERATURE_SENSOR_INDEX), company ID (MESH_COMPANY_ID_BT_SIG), and model (WICED_BT_MESH_CORE_MODEL_ID_SENSOR_SRV). If it is, the publish period is updated and the timer is restarted.

mesh_app_lpn_sleep: This function calls wiced_sleep_enter_hid_off with the timeout period that is provided by the mesh stack so that the device wakes up at the appropriate time.

mesh_app_factory_reset: This function deletes the cadence information from NVRAM before the factory reset occurs.



7C.3 (Advanced) OTA/DFU

The mesh library GATT definition includes the BLE OTA (over-the-air) upgrade service by default. Therefore, it is possible to update the firmware over BLE on an unprovisioned mesh device. However, the 20819 does not have enough on-chip flash to hold two copies of the application so an external flash must be used to support OTA.

In addition, the "MESH_DFU" compile option is included in the mesh_onoff_server snip application. This snip demonstrates how to support DFU (device firmware update) over a mesh network. Note that this will not officially be supported by the Mesh Spec until mid-2020.

7C.4 (Advanced) Apple HomeKit

Apple HomeKit uses a completely different protocol. It is (currently) not based on Bluetooth Mesh but rather on a proprietary protocol that uses WiFi and BLE. The Cypress mesh library will allow devices that support mesh to also support HomeKit in the following ways:

- 1. Now: Allow a single device to advertise as both an unprovisioned mesh device and an unpaired HomeKit device. The user can then choose to use it as a mesh device or a HomeKit device but not both at the same time.
- 2. Future: Allow a single device to be controlled simultaneously by Mesh clients and HomeKit clients.



7C.5 Exercises

Exercise 7C.1 Add an on_off_switch to your Network

In this exercise you will add an on/off switch to your mesh network that can control LEDs on the light_dimmable kit(s).

- 1. Remove one of your light_dimmable kits from your mesh network using the Android app.
- 2. Find the Mesh_Demo-213043MESH.on_off_switch application in the Mesh_Demo application group.
- 3. Open the file "on_off_switch.c" and find the "device_name". Change the name so that it has your initials in it (e.g. "<Inits> Switch").
 - a. Hint: If you don't see this file in the project, right click and select "Refresh".
- 4. Program the application into the mesh kit.
 - a. Hint: You may want to label the kits to keep track of which one is programmed with each application. Remember if you accidentally hold down the user button on the light_dimmable kit for 5 seconds, it will perform a factory reset so that kit will need to be re-provisioned.
- 5. Provision the on_off_switch kit to your network.
- 6. Press the user button on the on_off_switch kit to toggle the LEDs on the light_dimmable kits.
- 7. Experiment with changing the Assignment for the on_off_switch to control different lights or rooms.
 - a. Hint: You can't move switches to different rooms, rather you Assign the device or rooms that the switch will control.
- 8. Note that you can still control the lights using the app.



Exercise 7C.2 Add a Dimmer to the Network

In this exercise you will add a dimmer device to your mesh network. This new device will be able to turn the LED on/off as well as control the brightness of the LED on the light_dimmable kit. The on_off_switch from the previous exercise will be able to control the same LED.

- 1. Remove one of your light_dimmable kits from your mesh network using the Android app.
- 2. Find the Mesh_Demo_213043MESH.dimmer application in the Mesh_Demo application group.
- 3. Open the file "dimmer.c" and find the "mesh_dev_name". Change the name so that it has your initials in it (e.g. "<Inits> Dimmer").
- 4. Program the application into the kit.
 - a. Hint: You may want to label the kits to keep track of which one is programmed with each application. Remember if you accidentally press the user button on the light_dimmable kit, it may perform a factory reset.
- 5. Provision the Dimmer kit to your network.
- 6. Press the user button on the Dimmer kit to toggle the LEDs on the light_dimmable kits.
- 7. Press and hold the user button on the Dimmer kit to adjust the brightness of the LEDs.
 - a. Hint: If you hold the button for longer than 15 seconds a factory reset will be performed and the Dimmer kit will no longer be associated with the mesh network.
- 8. Verify that the on_off_switch kit and the app can still control the LED.
- 9. Experiment with Assigning the dimmer kit to different lights or rooms.



Exercise 7C.3 (Advanced) Add a 2nd Element for the Green LED to light_dimmable

In this exercise, you will add a new element to the light_dimmable application so that you can control the Red and Green LEDs on the kit individually. To do this:

- 1. Use the app to remove one of the light_dimmable devices from your network.
- 2. Create a new application either using the Demo application group as the starter or by copying your existing light_dimmable application:
 - a. Option 1: New Demo Application Group:
 - i. Target Hardware: CYBT-213043-MESH
 - ii. Starter Application: Mesh-Demo-213043MESH
 - iii. Application Name: Mesh_Demo_ch07c_ex03
 - iv. Hint: You will get all the applications from the Demo application group when you create this application. You can delete the others if you don't want them.
 - b. Option 2: Copy Existing Application:
 - i. Copy/paste just the single application using one of the methods outlined in Chapter 01 in the section on copying projects.
 - ii. Hint: It is recommended to use the file system method to copy files.
 - iii. The basic steps are:
 - Copy the light_dimmable project to a new folder. You can preserve the hierarchy or flatten it out. In the solution project the hierarchy is flattened. Remember if you change the hierarchy to edit the CY_SHARED_PATHS variable in the makefile.
 - 2. Edit the *.project* file. Choose a name for the new project such as ch07c_ex03_red_green.
 - 3. Import the project into Eclipse using Import > General > Existing Projects into Workspace. Disable "Copy projects into workspace".
 - 4. From a command line (e.g. ModusShell) create the launches:

make eclipse CY_IDE_PRJNAME=ch07c_ex03_red_green

- 3. In the light_dimmable.c file:
 - a. Add another element to the design. This new element will have one WICED_BT_MESH_MODEL_LIGHT_LIGHTNESS_SERVER model and no properties.
 - i. Hint: You will need to create the mesh_element2_models array.
 - ii. Hint you will need to add a set of entries to the mesh_elements array for the new element.
 - iii. Hint: Make sure you set the number of models and number of properties in the mesh_elements array to the correct values for this new element.
 - b. In the mesh_app_init function, initialize the new light lightness server.
 - i. Hint: You can use the same callback for both light lightness servers since it is passed the element index when it is called.
- 4. In led_control.c:
 - a. Add a define for another PWM channel and add code to led_control_init to initialize the new PWM.
 - i. Hint: The configurator was not used in the light_dimmable demo application so for consistency you can set up the PWM the same way.
 - ii. Hint: Copy the code for PWM0 and update it to use PWM1.



- iii. Hint: the BSP has a #define for LED_GREEN that you can use.
- iv. Hint: you can use the same pwm_config structure for both PWMs just call wiced_hal_gpio_select_function and wiced_hal_pwm_start two times each once for each PWM.
- b. Add an additional parameter to the function led_control_set_brighness_level so that it knows which element a message is intended for.
 - i. Hint: unit8_t element_idx.
 - ii. Hint: remember to update the function prototype in led_control.h too.
- c. Update the led_control_set_brighness_level function so that it looks at the element_idx input and updates the appropriate PWM.
- d. Update the led_control_set_onoff in the same way as led_control_set_brighness_level.
- 5. Back in light_dimmable.c:
 - a. Change the variable last_known_brightness to a 2-element array so that you can store values for both LEDs. Add the index of [elemnt_idx] everywhere it is used in the code.
 - b. Search for calls to led_control_set_brighness_level (yes, the 't' is missing in brightness) and add the element_idx parameter.
 - i. Hint: The timer callback function (attention_timer_cb) doesn't have access to element_idx, but when you init the timer you can set it to pass a uint32_t to the callback. Therefore, you can:
 - 1. Set up a global uint32_t to hold the index value.
 - 2. Pass that variable as an argument when you init the timer
 - 3. Update the value of the variable with the element_idx value just before starting the timer.
 - ii. Hint: If you don't want to deal with the above, you can just hard code the element_idx to 0 in mesh_app_attention and attention_timer_callback.
- 6. Program your kit.
- 7. Provision your device onto your network.
 - a. Hint: You should see 2 devices show up for this kit instead of just one.
- 8. Control each of the LEDs from the app individually using the two separate devices
 - a. Note that the on_off_switch and Dimmer control both LEDs simultaneously because they control everything in the group at once.



Exercise 7C.4 (Advanced) Update light_dimmable to use the HSL Model

In this exercise, we will change the light lightness model to the Light HSL model. This model extends the light lightness model by adding the ability to control Hue and Saturation. We will use all 3 LEDs in the RGB LED for this exercise.

- 1. Use the app to remove one light_dimmable device from your network.
- 2. Create a new application using one of the methods described in the previous exercise.
- 3. In the light_dimmable.c file:
 - a. Remove the mesh_app_attention callback functionality to simplify the changes required.
 - b. Change the model from WICED_BT_MESH_MODEL_LIGHT_LIGHTNESS_SERVER to WICED_BT_MESH_MODEL_LIGHT_HSL_SERVER.
 - c. Find all instances of mesh_light_lightness and replace them with mesh_light_hsl (look for both lower and uppercase and maintain the case).
 - d. Add 2 additional elements each with one model. The required models are:
 - i. WICED_BT_MESH_MODEL_LIGHT_HSL_HUE_SERVER
 - ii. WICED_BT_MESH_MODEL_LIGHT_HSL_SATURATION_SERVER
 - e. Change the wiced_bt_mesh_model_lightness_server_init function call to wiced_bt_mesh_model_light_hsl_server_init.
 - f. Change the function mesh_app_process_set_level to mesh_app_process_set_hsl and make the changes to get the Hue, Saturation and Lightness values from p_status.
 - i. Hint: the data provided in p_status will be of type wiced_bt_mesh_light_hsl_status_data_t.
 - ii. Hint: Use "Open Declaration" on that datatype to find out what it contains. If that doesn't work, the definition can be found in wiced_btsdk/dev-kit/btsdk-include/wiced_bt_mesh_models.h
 - iii. Hint: Change the calls to led_control_set_brighness_level to pass the Hue, Saturation, and Lightness instead of last_known_brightness.
 - 1. Hint: Hue, Saturation and Lightness are of type unit16_t.
 - g. Change the call to led_control_init to use LED_CONTROL_TYPE_COLOR.
- 4. In led control.c:
 - a. Set up two additional PWMs one for the Green LED and one for the Blue LED.
 - i. Hint: Use PWM1 and PWM2.
 - ii. Hint: the BSP has #defines for LED_GREEN and LED_BLUE that you can use.
 - iii. Initialize the PWMs in the LED_CONTROL_TYPE_COLOR section of the led_control_init function.
 - iv. Use the function shown below to convert the HSL values to RGB values and then use the RGB values to control the three LEDs. (In future releases of the SDK, this will be provided as a middleware library).
 - 1. Hint: The HSL inputs can be passed in directly from what the model provides. The outputs are provided as pointers to three uint8_t variables (r, g, and b).

```
/* Convert HSL values to RGB values */
/* Inputs: hue (0-360), sat (0-100), andf lightness (0-100) */
/* Outputs: r (0-100), g (0-100), b (0-100) */
void HSL_to_RGB(uint16_t hue, uint16_t sat, uint16_t light, uint8_t* r,
uint8_t* g, uint8_t* b)
{
    uint16_t v;
```



```
/* Formulas expect input in the range of 0-255 so we need to convert
  the input ranges which are H: 0-360, S: 0-100, L: 0-100 \star/
hue = (hue*255)/360;
sat = (sat*255)/100;
light = (light*255)/100;
v = (light < 128) ? (light * (256 + sat)) >> 8 :
      (((light + sat) << 8) - light * sat) >> 8;
if (v <= 0) {
    *r = *g = *b = 0;
} else {
    int m;
    int sextant;
    int fract, vsf, mid1, mid2;
    m = light + light - v;
    hue *= 6;
    sextant = hue >> 8;
    fract = hue - (sextant << 8);</pre>
    vsf = v * fract * (v - m) / v >> 8;
    mid1 = m + vsf;
    mid2 = v - vsf;
    // Convert output range of 0-255 to 0-100
    v = (v*100)/255;
    m = (m*100)/255;
    mid1 = (mid1*100)/255;
    mid2 = (mid2*100)/255;
    switch (sextant) {
       case 0: *r = v; *g = mid1; *b = m; break;
       case 1: *r = mid2; *g = v; *b = m; break;
       case 2: *r = m; *g = v; *b = mid1; break;
       case 3: *r = m; *g = mid2; *b = v; break;
       case 4: *r = mid1; *g = m; *b = v; break;
       case 5: *r = v; *g = m; *b = mid2; break;
   }
}
```

Note: This function currently expects ranges for Hue of 0-360, Saturation of 0-100 and lightness of 0-100. This is what the app currently supplies. However, according to the BT Mesh spec, these should all be in the range of 0-65535. At some point this will be fixed in the apps and at that time this function will need to change accordingly.

- 5. Program your kit.
- 6. Provision your device onto your network.
- 7. Use the app to adjust the light color and intensity. Also note that if you turn the light on/off using an on/off switch (either in a kit or in the app), the device remembers the last value so that when you turn it back on the color and brightness are the same.