

CECS 347 Spring 2022 Project # 2

An Autonomous Wall Follower Robot Car

By

Abhishek Jasti, Anand Jasti

March 6, 2022

Design an autonomous wall follower robot car with GPIO, edge-triggered interrupts, hardware PWM, power supply circuit, IR sensors, ADC, DC motors, and motor drivers using TM4C123G Launchpad Microcontroller.

CECS 347 Project 2 Report

Introduction

Building an autonomous robot car than can navigate through any prebuilt tracks with walls on both sides. Using two IR sensor to detect left and right distances to the walls. This detection will allow us to determine the amount of power given to each wheel to keep the robot car on the track. We are using basic hardware components in our embedded systems, while including GPIO, hardware timer, interrupt, analog to digital conversion (ADC), and hardware PWM. Our goal was to be able to use GPIO to interface basic input and output devices, switches, LEDs, motors, sensors, and input/output drivers.

Operation

In this beginning we implemented hardware PWM to drive the two DC motors at different speeds. We used two IR sensors on the front of the car to determine the direction of the robot car. To display direction and action taken we used LEDs:

- YELLOW LED:
 - Should display for 2 seconds before the robot car starts to move.
- PURPLE LED:
 - Should display when the robot car reaches end of the track
- RED LED:
 - Should display when the robot car is too close to a wall
- GREEN LED:
 - o Should display when the robot car is closer to the left wall
- BLUE LED:
 - o Should display when the robot car is closer to the right wall
- WHITE LED:
 - Should display when the robot car is changing in speed cycles

0

No LED should display when the car is in the middle of the track. For this project we also used the two onboard switch buttons.

SWITCH 1:

• Toggle car on/off and toggle reverse/forward direction.

- Turn wheels off.
- Show yellow LED for 2 seconds.
- Start moving from one end of the track and navigate by itself toward the other end of the track.
- Stop at the end of the track, and show purple LED.

SWITCH 2:

- Toggle speed setting mode on/off.
- Check potentiometer value to set robot speed.

Link to Demonstration videos:

Forward in the middle:

https://drive.google.com/file/d/1fAIQaFzEt25InrQ1jtdM3Aa2dBDHU0qu/view?usp=sharing

Forward 20cm to the left wall:

https://drive.google.com/file/d/10gVMWSqpyYfpY3bGPPP2jZvi5TY2i3Tj/view?usp=sharing

Forward 20cm to the right wall: https://drive.google.com/file/d/1-pq06zZy_n0lxN7lO8MPIM4ZZM_nMYVI/view?usp=sharing

Reverse in the middle:

https://drive.google.com/file/d/1NH1eZ6dgRBY0rsilYsrmZOckWh4X2Fyd/view?usp=sharing

Reverse 20cm to the left wall:

https://drive.google.com/file/d/1HjY5L2w5W1tQeFkzII9BgcMAF3Wiy7SO/view?usp=sharing

Reverse 20cm to the right wall:

https://drive.google.com/file/d/1mbyDITCCr6dYre1cbwVV89UjX4r2NHHF/view?usp=sharing

| • | • | - | |
|----|--------|--------|--|
| | 1370 | Demo: | |
| ■. | /I V C | Denny. | |


https://drive.google.com/file/d/1vTv4ONJz2DTVVRbfhmeUwLhzmh2mgO7 M/view?usp=sharing

Theory

This project uses ARM Cortex TM4C123GH6PM Microcontroller, more specifically we used two of the six General-Purpose I/O ports (PF, PA). In port A, we used two pins for direction (PA4, PA5) and two pins for PWM signal (PA6, PA7). In port F we used the onboard buttons pin 0 and pin 4 for toggling on/off the car and toggling on/off the speed mode (more specifically defined in Operation and Hardware design). In this project we used basic hardware components, GPIO pins, edge-triggered interrupts, hardware PWM, power supply circuits, DC motors, motor drivers, IR sensors, and ADC to implement this autonomous wall follower robot car. We used hardware PWM on pins PA6 and PA7 to generate a 1KHz frequency to control the speed of the robot car. We also used GPIO pins PA4 and PA5 to control the direction (forward and backward) of the robot car. We used the two IR sensors to guide our robot car. We also used the perineometer to set the speed of the car (more specifically defined in Software design).

| Hardware | design |
|----------|--------|
|----------|--------|

Schematic:

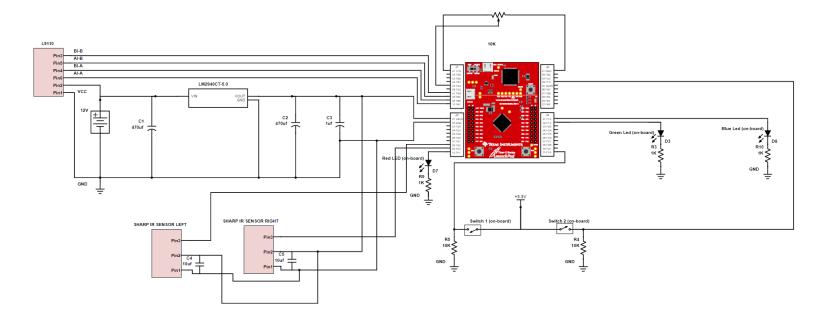

Outputs:


| Red LED | PF1 |
|----------------------------------|-----|
| Blue LED | PF2 |
| Green LED | PF3 |
| Direction signal for Left motor | PA4 |
| (BI-B pin 3 on L9110) | |
| Direction signal for Right motor | PA5 |
| (AI-B pin 5 on L9110) | |
| Speed signal for Left motor | PA6 |
| (B-IA pin 4 on L9110) | |
| Speed signal for Right motor | PA7 |
| (A-IA pin 6 on L9110) | |


Inputs:


| Switch 1 | PF4 |
|---------------------------------|-----|
| Switch 2 | PF0 |
| Left Sharp IR Sensor | PE2 |
| Right Sharp IR Sensor | PE3 |
| Potentiometer for speed control | PE4 |


The left and right motors are being driven by L9110. The pins connected to the L9110 from our launchpad are listed above. The Red, Green, and Blue LEDs are onboard LEDs provided by the launchpad.


Pictures of Hardware System:

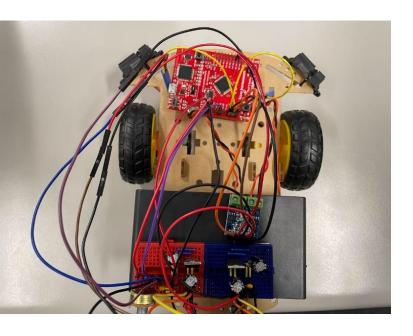

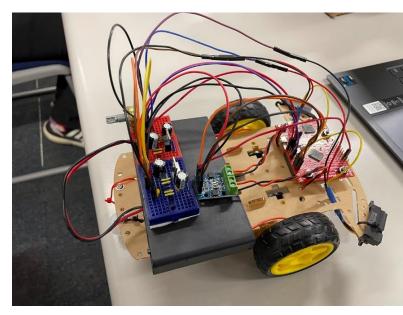

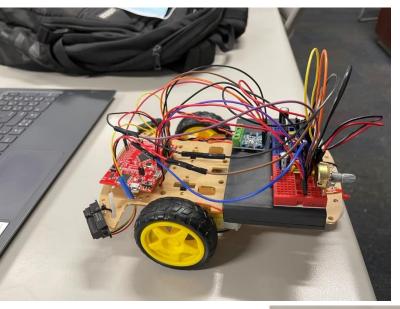

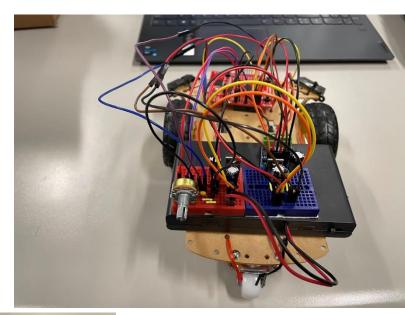

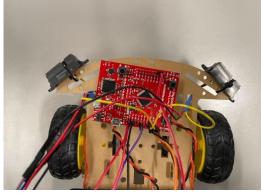

Software design

Software Source Code:

```
1 // PA6_PA7 PWM.c
    // Documentation
   // Description: Initialize Port A bit 6 and 7 for Hardware PWM
   // Student Name: Abhishek Jasti, Anand Jasti
   #include <stdint.h> // C99 data types
7
   #include "tm4cl23gh6pm.h"
8
9
   // period is a 16-bit number of PWM clock cycles in one period
10
   // Output on PA6/M1PWM2, PA7/M1PWM3
11 - void PWM1G1AB Init(uint16 t period) {
12
      SYSCTL RCGCPWM R |= SYSCTL RCGCPWM R1;
                                                 // activate PWMl
      //if ((SYSCTL_RCGC2_R &= SYSCTL_RCGC2_GPIOA) != SYSCTL_RCGC2_GPIOA) {
13
          //SYSCTL RCGC2 R |= SYSCTL RCGC2 GPIOA; // activate port A
14
15
          //while ((SYSCTL RCGC2 R&SYSCTL RCGC2 GPIOA)!=SYSCTL RCGC2 GPIOA){} // wait for the clock to be ready
16
17
     GPIO_PORTA_AFSEL_R |= 0xC0;
                                         // enable alternate function on PA6, PA7
18
19
     GPIO PORTA PCTL R &= ~0xFF000000;
                                         // configure PA6, PA7 as PWM1
20
      GPIO PORTA PCTL R \mid = 0x550000000;
21
      GPIO PORTA AMSEL R &= ~0xC0;
                                         // disable analof functionality on PA6, PA7
22
      GPIO PORTA DEN R |= 0xC0;
                                         // enable digitial I/O on PA6, PA7
23
      //SYSCTL RCC R &= ~0x00100000;
24
                                           // system clock is the source for PWM clock 16MHz
25
      PWM1 1 CTL R = 0;
                                         // re-loading down-counting mode
26
      PWM1 1 GENA R = (PWM 1 GENA ACTCMPAD INV|PWM 1 GENA ACTLOAD ZERO); // low on LOAD, high on CMPA down
27
      PWM1 1 GENB R = (PWM 1 GENB ACTCMPBD INV|PWM 1 GENB ACTLOAD ZERO); // low on LOAD, high on CMPB down
     PWM1 1 LOAD R = period -1;
28
                                    // cycles needed to count down to 0
     PWM1_1_CMPA_R = 0;
29
                                         // count value when output rises
30
      PWM1_1_CMPB_R = 0;
                                         // count value when output rises
31
      PWM1_1_CTL_R |= 0x00000001;
                                         // Start PWM1
32
      PWM1 ENABLE R |= 0x0000000C;
33
34
35 // change duty cycle of PA6, PA7
36 // duty is number of PWM clock cycles output is high
37 ⊡void PWM1AB_Duty(uint16_t duty_L, uint16_t duty_R){
     PWM1_1_CMPA_R = duty_L - 1; // count value when output rises
38
      PWM1_1_CMPB_R = duty_R - 1;
39
                                          // count value when output rises
40
   }
41
```

In this bit of code above we are initializing Port A bit 6 and 7 for Hardware PWM, and we are also providing a function to change the duty cycle of PA6 and PA7. We are using these two pins to control the speed of the left and right DC motors using the L9110 motor driver.

```
// PA4 PA5 GPIO.c
// Documentation
 // Description: Initialize Port A bit 4 and 5 as output
 // Student Name: Abhishek Jasti, Anand Jasti
#include "tm4cl23gh6pm.h"
 // Initialize Port A bit 4 and 5 as output
□void PortA45 Init(void) {
  //if ((SYSCTL RCGC2 R &= SYSCTL RCGC2 GPIOA) != SYSCTL RCGC2 GPIOA) {
  SYSCTL RCGC2 R |= SYSCTL RCGC2 GPIOA; // activate port A
  while ((SYSCTL RCGC2 R&SYSCTL RCGC2 GPIOA)!=SYSCTL RCGC2 GPIOA){} // wait for the clock to be ready
  GPIO PORTA AMSEL R &= ~0x30;
                                 // disable analog function
  GPIO PORTA PCTL R &= ~0x00FF0000; // GPIO clear bit PCTL
  GPIO PORTA DEN R |= 0x30;
                                 // enable digital pins PA6,PA5
```

In this code above we are initializing Port A pin 4 and 5 to be outputs. We are using these two pins to control the direction of the left and right DC motors using the L9110 motor driver.

```
// SysTickInterrupt.c
 // Documentation
 // Description: Initialize SysTick timer for lms delay with
     interrupt enabled and priority 1 assuming 16MHz clock
 // Student Name: Abhishek Jasti, Anand Jasti
 #include "tm4cl23gh6pm.h"
 // Initialize SysTick timer for 0.05s delay with interrupt enabled
void SysTickInterrupt Init(void) {
   NVIC ST CTRL R = 0;
                                      // disable SysTick during setup
   //NVIC\_ST\_RELOAD\_R = 800000 - 1; // number of counts to wait 0.05 seconds (assuming 16MHz clock)
   NVIC ST RELOAD_R = 16000 - 1;
                                     // number of counts to wait lms (assuming 16MHz clock)
  NVIC ST CURRENT R = 0;
                                     // any write to CURRENT clears
  NVIC SYS PRI3 R = (NVIC SYS PRI3 R&Ox1FFFFFFF) | 0x200000000; // priority 1
  NVIC_ST_CTRL_R = 0x07;
                                      // enable SysTick with core and interrupts
```

In this bit of code we are initializing SysTick timer for 1ms delay with interrupt enabled and priority 1. We are using the SysTick timer to sample ADC values. The three ADC values we are sampling are left sensor, right sensor, and the potentiometer.

```
// PortF.c
 // Documentation
 // Description: Initialize Port F LEDs
     Initialize edge trigger interrupt for
    PFO (SW2) and PF4 (SW1) falling edge
 // Student Name: Abhishek Jasti, Anand Jasti
 #include <stdint.h> // C99 data types
 #include "tm4cl23gh6pm.h"
 // Initialize Port F LEDs
pvoid PortF_LEDInit(void) {
if ((SYSCTL RCGC2 R ← SYSCTL RCGC2 GPIOF) != SYSCTL RCGC2 GPIOF) {
      SYSCTL RCGC2 R |= SYSCTL RCGC2 GPIOF;
                                         // activate port F
      while ((SYSCTL RCGC2 R&SYSCTL RCGC2 GPIOF)!=SYSCTL RCGC2 GPIOF){} // wait for the clock to be ready
   }
   GPIO PORTF AMSEL R &= ~0x0E; // disable analog function
   GPIO_PORTF_PCTL_R &= ~0x0000FFF0; // GPIO clear bit PCTL
   GPIO PORTF DEN R |= 0x0E;
                                  // enable digital pins PF1, PF2, PF4
```

In this code we are initializing Port F pins 1,2, and 3. We are using these three pins as outputs (which are built-in LEDs). In this project we are using the built-in LEDs to indicate car status. Here is the color information: yellow light: two seconds yellow light before robot start to move; purple light: when reaching end of the track, turn on purple light; red light: the car is too close to a wall and stopped before restart; green light: the car is closer to the left wall; blue light: the car is closer to the right wall; white light: the car is in speed setting mode. No light indicates the car is moving in the middle of the track.

```
// Initialize edge trigger interrupt for PFO (SW2) and PF4 (SW1) falling edge
void PortF EdgeTriggerInit(void) {
  if ((SYSCTL RCGC2 R &= SYSCTL RCGC2 GPIOF) != SYSCTL RCGC2 GPIOF) {
       SYSCTL_RCGC2_R |= SYSCTL_RCGC2_GPIOF; // activate port F
       while ((SYSCTL RCGC2 R&SYSCTL RCGC2 GPIOF)!=SYSCTL RCGC2 GPIOF){} // wait for the clock to be ready
  GPIO PORTF LOCK R = 0x4C4F434B; // unlock PortF PF0
  GPIO_PORTF_CR_R |= 0x01;  // allow changes to PFO GPIO_PORTF_AMSEL_R &= \sim 0x11;  // disable analog function
  GPIO_PORTF_PCTL_R &= ~0x000F000F; // GPIO clear bit PCTL
  GPIO_PORTF_IEV_R &= ~0x11;

GPIO_PORTF_ICR R - ^~~
  GPIO_PORTF_IBE_R &= ~0x11;
                                      // PFO, PF4 is not both edges
                                       // PF0, PF4 Falling edge event
  GPIO_PORTF_IEV_R &= ~vxii,

GPIO_PORTF_ICR_R = 0x11;  // clear flag0, flag4

CDIO_PORTF_IM_R |= 0x11;  // arm interrupt on PFO, PF4
  NVIC_PRI7_R = (NVIC_PRI7_R&OxFF1FFFFF) | 0x00400000; // priority 2
  NVIC ENO R |= 0x400000000; // enable interrupt 30 in NVIC
```

In this code above we are initializing Port F pins 0 and 4 which are built-in push buttons to be inputs, using falling edge trigger interrupt. The push buttons are used as follows: sw1 will toggle on/off the car, sw2 will toggle speed setting mode on/off.

```
// Subroutine to wait 0.5 sec assuming 16MHz clock
// Inputs: None
// Outputs: None
// Notes: ...

void Delay_50ms(uint8_t n) {
    unsigned long volatile time;
    time = 727240*10*n/91; // 0.05 sec assuming 16MHz clock
    while(time) {
        time--;
    }
    for (time=0;time<1000;time=time+10) {
    }
}</pre>
```

In this code we are providing a delay function to be used in Port F Handler for debouncing.

```
// ADCSWTrigger_PE2_PE3_PE4.c
 // Documentation
 // Description: Initialize ADCO SS2 on Ainl(PE2) AinO(PE3) Ain9(PE4) to be
                              triggered by software and trigger a conversion,
                              wait for it to finish, and return the result.
 // Student Name: Abhishek Jasti, Anand Jasti
 #include "tm4cl23gh6pm.h"
 // This initialization function sets up the ADC according to the
 // following parameters. Any parameters not explicitly listed
 // below are not modified:
 // Max sample rate: <=125,000 samples/second
 // Sequencer 0 priority: 1st (highest)
 // Sequencer 1 priority: 2nd
 // Sequencer 2 priority: 3rd
 // Sequencer 3 priority: 4th (lowest)
 // SS3 triggering event: software trigger
 // SS3 1st sample source: Ain1 (PE2)
 // SS3 interrupts: flag set on completion but no interrupt requested
void ADC0 InitSWTriggerSeq2 Chl Ch0 Ch9(void) {
   //volatile unsigned long delay;
   SYSCTL RCGC2 R |= 0x00000010;
                                    // 1) activate clock for Port E
   while((SYSCTL_RCGC2_R&0x000000010) != 0x000000010) {} // wait for clock to be ready
   //delay = SYSCTL_RCGC2_R; // allow time for clock to stabilize
   GPIO PORTE DIR R &= ~0x1C;
                                    // 2) make PE2, PE3, PE4 input
                                    // 3) enable alternate function on PE2, PE3, PE4
   GPIO PORTE AFSEL R |= 0x1C;
   GPIO PORTE DEN R &= ~0x1C;
                                   // 4) disable digital I/O on PE2, PE3, PE4
   GPIO PORTE AMSEL R |= 0x1C;
                                    // 5) enable analog function on PE2, PE3, PE4
   SYSCTL RCGC0 R |= 0x00010000; // 6) activate ADC0
   while (SYSCTL RCGCO R&Ox00010000) != 0x00010000) {} // wait for clock to be ready
   //delay = SYSCTL RCGC2 R;
   SYSCTL RCGC0 R &= ~0x00000300; // 7) configure for 125K
                              // 8) Sequencer 2 is highest priority
   ADCO SSPRI R = 0x0132;
   ADCO ACTSS R &= \sim 0 \times 0004;  // 9) disable sample sequencer 2
ADCO EMUX R &= \sim 0 \times 0 \times 000;  // 10) seq2 is software trigger
   ADCO_SSMUX2_R = (ADCO_SSMUX2_R&0xFFFFF000)+1+(9<<8); // 11) channel Ainl(PE2), Ain0(PE3), Ain9(PE4)
   ADCO SSCTL2 R = 0x0600;  // 12) no DO ENDO IEO TSO, D1 END1 IE1 TS1, D2 TS2, yes IE2 END2 ADCO IM_R &= \sim 0x00004;  // disable SS2 interrupts
                             // 13) enable sample sequencer 2
   ADC0_ACTSS_R |= 0x0004;
```

In the bit of code we are initializing ADC0 sequencer 2 Ain1(PE2), Ain0(PE3), Ain9(PE4) to be software trigger. We are using these three pins to sample ADC values from the left sensor, right sensor, and the potentiometer. We also provider a function to read all three ADC values and put it into an array to be used in the main function.

Conclusion

Implementing this project with the robot car was not as hard as we thought it would be. Building the robot car took the longest time in this project. Creating a power source using a small breadboard was a little tedious trying to fit everything on the breadboard but it was worth the amount of space we saved. We had the most trouble with soldering the wires to the motor, the soldering machine was not the best quality item we bought but we made it work. Fitting everything on the car was not the smartest idea, especially with a huge battery pack that takes eight AA batteries. We decided to use double sided tape to stick everything on the car instead of using zip ties or any other attaching item. Coding of this project for the robot car was not very simple. With the help of our previous labs using PWM and IR sensors helped us tremendously with coding this project for our robot car. Overall, this project took a long time. This project was very helpful to understand and to review the topics of GPIO, edge-triggered interrupts, hardware PWM, power supply circuits, DC Motors, IR sensors, ADC and motor drivers.