

Nailgun Defense

Chenxu Wang and Fengwei Zhang

Outline

SOUTHER SOUTHE

- 1. Introduction
- 2. Background
- 3. Design and Implementation
- 4. Possible Q&A
- 5. Necessary materials



Introduction: Nailgun Attack

An attack to break the privilege isolation via debugging


HOST processor escalates the privilege of TARGET processor by sending instructions (e.g., dcps3) via memory-mapped debug registers.

Change to El3

Introduction: Nailgun Attack

4 signals (invasive non-invasive secure non secure

A Multi-processor SoC System

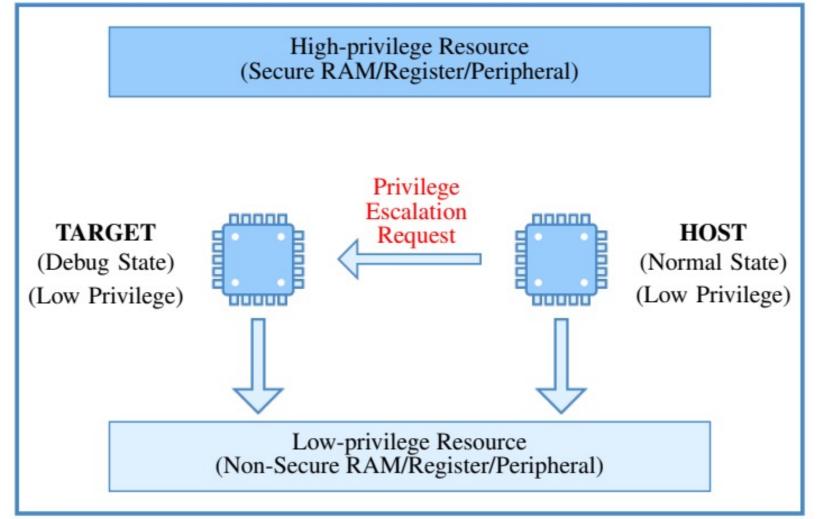

Source: Nailgun Attack Lecture slides





Disabling the debug authentication signals? Great challenges! unable to use debug feature

- Heavily influence most debug tools
- Management of debug authentication is not publicly available

PMU: performance monitor unit





Strict <u>restriction</u> in the inter-processor debugging? Hardware-based <u>access control</u> to the debug registers?

Manufactures can implement it on the future devices. But a great callback of current devices is expensive.

How about some software-based access control?





Implement the defense on higher privilege.

Control the access of the debug registers via memory mapping.



Fortunately, Arm provides Stage-2 translation.

It is controlled by EL2, and restrict the memory access in EL1&0.




Background



Background: Arm Exception Levels

Two worlds, Four ELs with different privileges.

Different CPUs can be in different ELs.

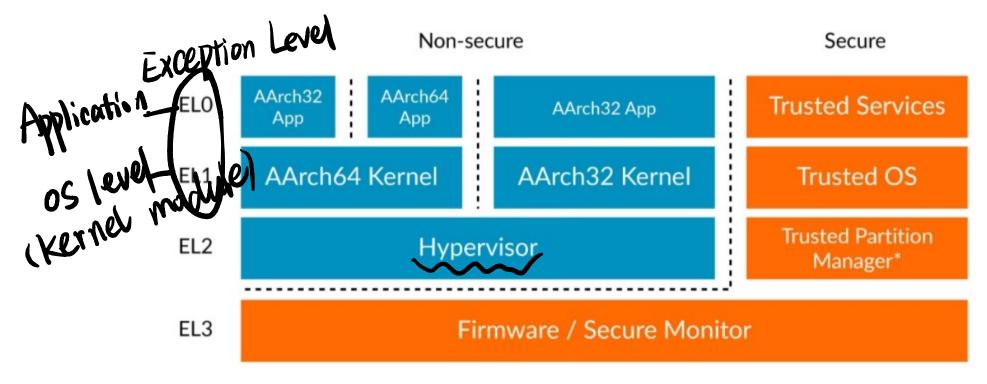

* Secure EL2 from Armv8.4-A

^{*}Source: https://developer.arm.com/documentation/102412/0100/Execution-and-Security-states



Background: Arm Address Translation


Arm introduces three types of address:

Virtual Address (VA)

Intermediate Physical Address (IPA)

Physical Address (PA)


It can be used to isolate the process' address space, access control, etc.

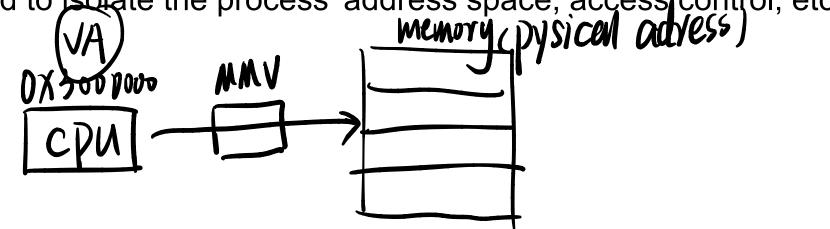



Background: Arm Address Translation

Arm also defines the address translation regimes.

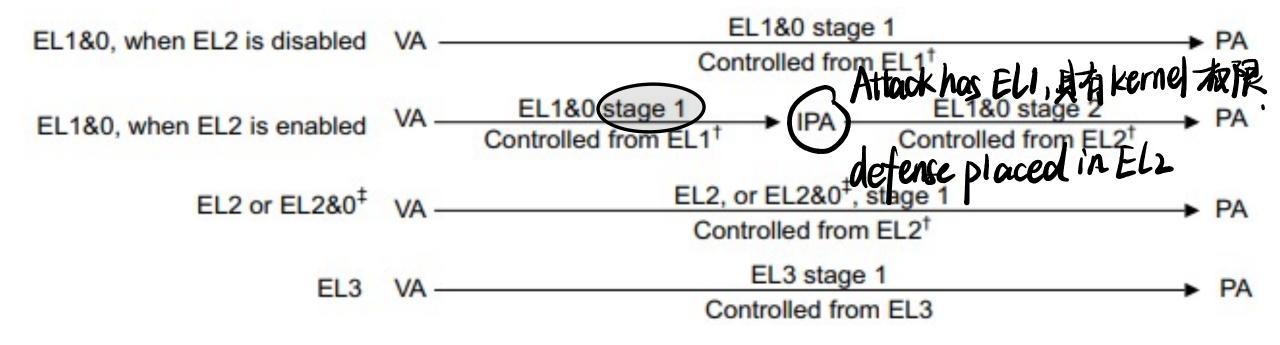

^{*}Source: D5-2684 (64-bit address translation), also you can see G5-6264 (32-bit address translation)



Background: Arm Address Translation

Stage 1 translation exists in all ELs.


But EL1&0 contains an additional translation: Stage-2 translation.

It is controlled by EL2.

Hypervisor in Arm architecture can use it to handle the memory management for VMs.

Similarly, we can use it in access control for EL1&0 CPUs.





How to provide the table?

VTTBR egister defines the address of the S-2 translation table. Put the address of translation table into this register.

BADDR, bits [47:1]

Translation table base address, bits[47:x], Bits [x-1:1] are RES0, with the additional requirement that if bits[x-1:3] are not all zero, this is a misaligned translation table base address, with effects that are CONSTRAINED UNPREDICTABLE, and must be one of the following:

*Source: G8-6942





How to use it?

We (1) Enable the S-2 translation, and (2) Provide the table of S-2 translation, then Memory Management Unit (MMU) will perform the S-2 translation after the S-1 translation.


You may ask these questions:

How to enable it?

How to provide the table?

How to create the table?

Mynu do the translation

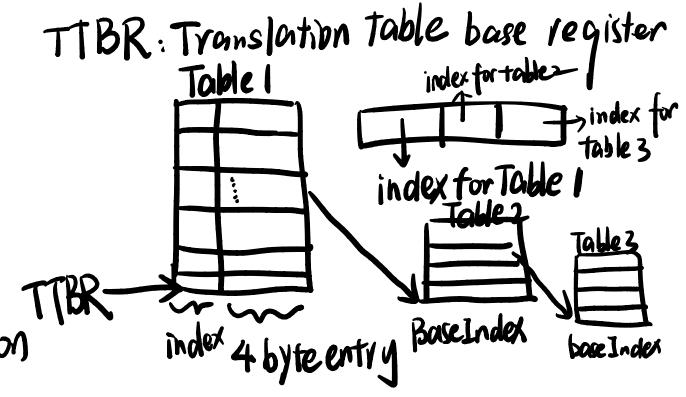





How to enable it?

HCR register controls the S-2 translation.

Set the bit[0] of HCR register as 0x1.

VM, bit [0]

Virtualization enable. Enables stage 2 address translation for the Non-secure EL1&0 translation regime.

0b0 Non-secure EL1&0 stage 2 address translation disabled.

0b1 Non-secure EL1&0 stage 2 address translation enabled.

*Source: G8-6599



Background: Stage-2 translation

Actually, it does not need the specific table address. It cuts the offset of the table address, which is provided in VTCR register.

We will configure this register later.

x is determined from the value of VTCR.SL0 and VTCR.T0SZ as follows:

- If VTCR.SL0 is 0b00, meaning that lookup starts at level 2, then x is 14 VTCR.T0SZ.
- If VTCR.SL0 is 0b01, meaning that lookup starts at level 1, then x is 5 VTCR.T0SZ.
- If VTCR.SL0 is either 0b10 or 0b11 then a stage 2 level 1 Translation fault is generated.

*Source: G8-6942





How to create the table?

The translation table consists of several levels and page entries (descriptors). Each descriptor indicates the attributes of a region.

Attributes: Read, Write, Execute, Cacheable...

Region: the size is decided by the level of the descriptor.

Level1: 1GB region


Level2: 2MB region

Level3: 4KB region





It shows the architecture of the translation table, the "Block" "Table" "Page" are different types of the descriptors.

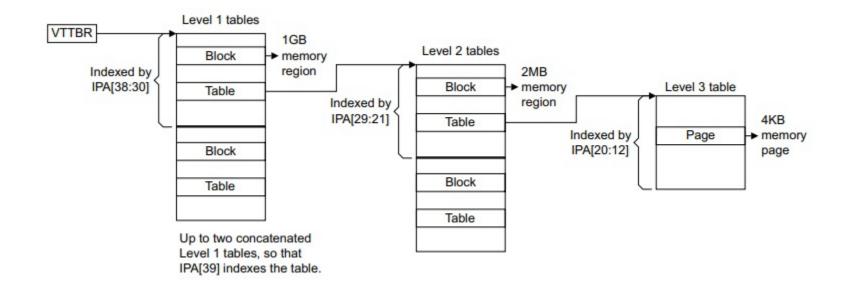


*Source: G5-6289






When we get a descriptor, it looks like this:

(Stage-2 translation uses Long descriptor, be careful when read manual.)

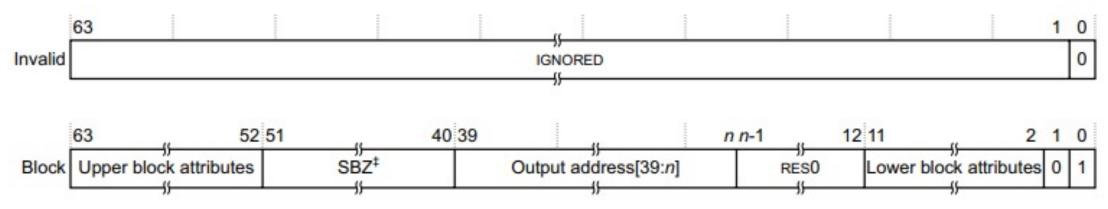

For the level 1 descriptor, n is 30. For the level 2 descriptor, n is 21.

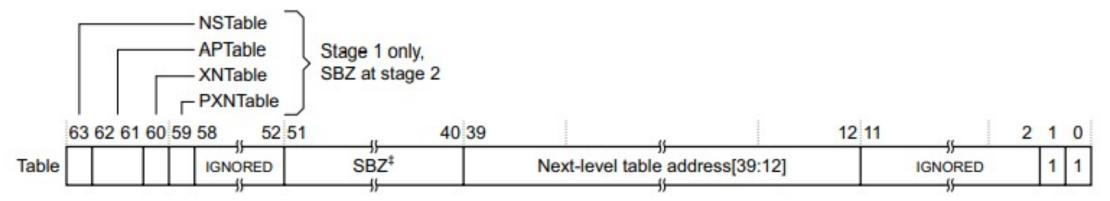

*Source: G5-6290






In a descriptor, the last two bits indicate the type of the descriptor.

Block (Level 1,2)/Page (Level 3): translation end, directly get the output

Invalid: translation fault

Table (Level 1,2): translation continue, go to next level.



For the level 1 descriptor, n is 30. For the level 2 descriptor, n is 21.

*Source: G5-6290






It contains some attributes (which is not important in this Lab).

It indicates the output address, or the address of the next descriptor.

To get them, add the provided address (e.g., bit[39:12]) and the offset of your input address (e.g., bit[11:0]).

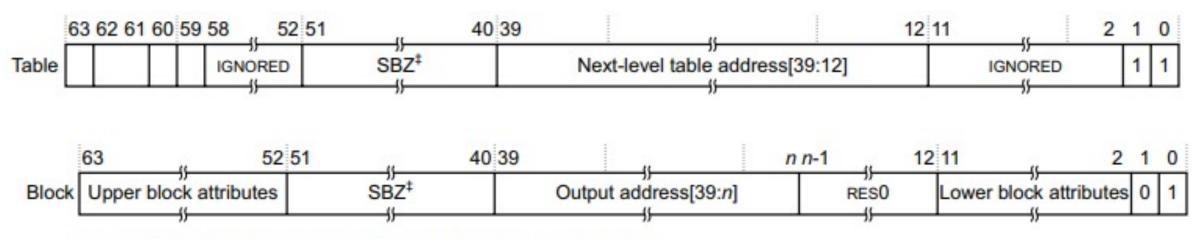

For the level 1 descriptor, n is 30. For the level 2 descriptor, n is 21.

^{*}Source: G5-6290, SBZ=should be zero, means fill 0; RES0: reserved as 0, means fill 0; IGNORED: fill anything you like





Example:

Your Input address is 0x12345678

Bit[39:12] (Next-level table address) is 0xdeadb

Then next address (0xdeadb<<12)+0x678=0xdeadb678.

Read it to get the value of the descriptor.



^{*}Source: G5-6290, SBZ=should be zero, means fill 0; RES0: reserved as 0, means fill 0; IGNORED: fill anything you like



Design





Goals in this Lab:

Enable the Stage-2 translation.

Invalid the mapping of the debug registers.

Invalid the mapping of S-2 translation table.



Design: Enable Stage-2 translation

Modified the device tree files to reserve a memory for the table.

In kernel booting stages, creating the S-2 translation table.

And configure related registers.

Replace the kernel image and compiled device tree files (.dtb) in "/boot" directory.

Boot your Raspberry Pi.





The mapped memory of the debug registers is 0x4003_0000 ~ 0x4003_0FFF.

It is a 4KB region, you should split your table to 4KB-size granule.

Also, do not forget to invalidate the mapping of your table. It just affect the EL1 attacker to read it, but not affect the EL2.





Here is one example of the table layout in $0x0 \sim 0xFFFF_FFFFF$ (only invalid dbg)

```
VTTBR: point to area0
                                                   area2:
                                                   0x4000 0000 ~ 0x4000 0FFF: 4KB Page
area0:
0x0000 0000 ~ 0x3FFF FFFF: 1GB block
0x4000_0000 ~ 0x7FFF_FFFF: table, point to area1
                                                   0x4002 F000 ~ 0x4002 FFFF: 4KB Page
0x8000 0000 ~ 0xBFFF FFFF: 1GB block
                                                   0x4003 0000 ~ 0x4003 0FFF: Invalid (0x0)
0xC000 0000 ~ 0xFFFF FFFF: 1GB block
                                                   0x4003 1000 ~ 0x4003 1FFF: 4KB Page
                                                   0x4003 2000 ~ 0x4003 2FFF: 4KB Page
area1:
0x4000_0000 ~ 0x401F_FFFF: table, point to area2
                                                   ...
0x4020_0000 ~ 0x403F_FFFF: 2MB block
                                                   0x401F 0000 ~ 0x401F FFFF: 4KB Page
0x4040 0000 ~ 0x405F FFFF: 2MB block
0x7E00_0000 ~ 0x7FFF_FFFF: 2MB block
```



SOUTHERN OF SCIENCE WO LEGIN OF SCIENCE WO LEG

Here we give an example of a successful address translation.

You can see the whole translation process in K7-8498.

We recommend you configure these bits of VTCR registers

SL0[7:6]: 0x1 (Starting at Level 1)

T0SZ[3:0]: 0x0 (Indicating the PA size is 2^32-1)

SL0, bits [7:6]

Starting level for translation table walks using VTTBR.

0b00 Start at level 2

0b01 Start at level 1

T0SZ, bits [3:0]

The size offset of the memory region addressed by VTTBR. The region size is 2(32-T0SZ) bytes.

This field holds a four-bit signed integer value, meaning it supports values from -8 to 7.



When we translate the IPA 0x4003_1234, starting at Level 1.


- (1) We do Level 0 translation, and VTTBR tells us to go to area 0.
- (2) We go to area 0 and get the descriptor of 0x4000_0000 ~ 0x7FFF_FFFF





When we translate the IPA 0x4003_1234, starting at Level 1.


- (3) We do Level 1 lookup of the descriptor 0x4000_0000 ~ 0x7FFF_FFFF, it is a table, and we should go to area2 to find the next descriptor.
- (4) We go to area2 and get the descriptor of 0x4000_0000 ~ 0x401F_FFFF

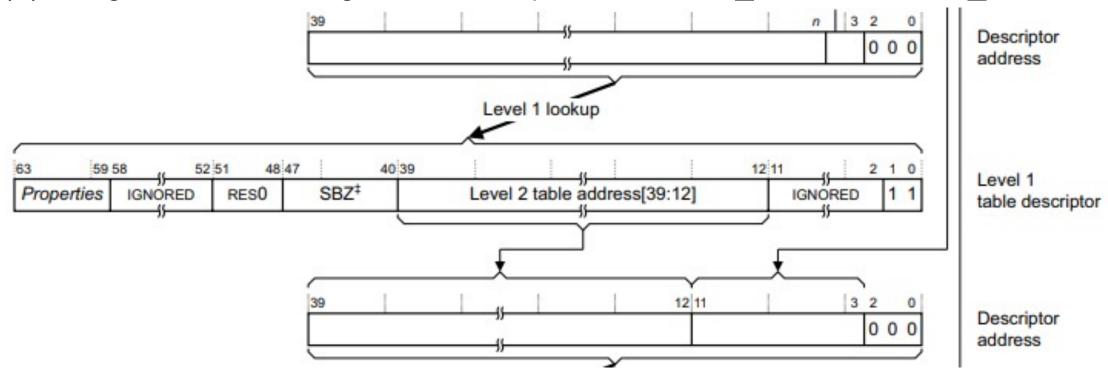



When we translate the IPA 0x4003_1234, starting at Level 1.


- (5) We do Level 2 lookup of the descriptor 0x4000_0000 ~ 0x401F_FFFF, it is a table, and we should go to area3 to find the next descriptor.
- (6) We go to area3 and get the descriptor of 0x4003_0000 ~ 0x4003_0FFF

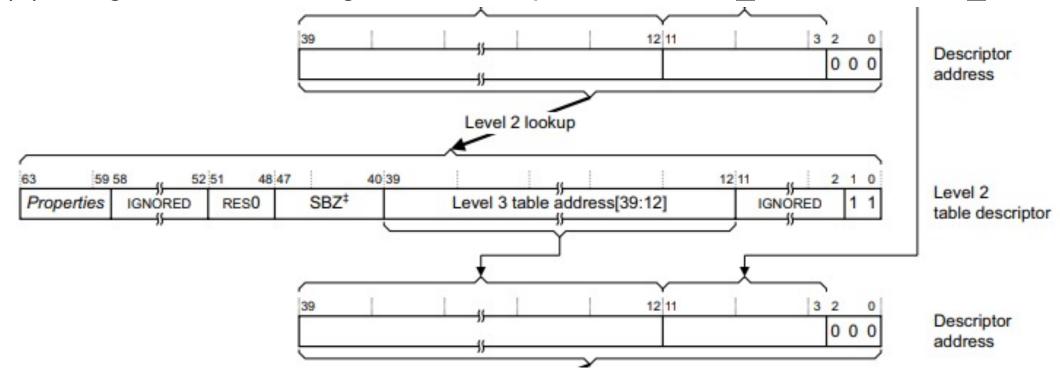



When we translate the IPA 0x4003_1234, starting at Level 1.

- (7) We do Level 3 lookup of the descriptor 0x4003_0000 ~ 0x4003_0FFF, it is a page.
- (8) Our translation result is (OA[39:12]<<12)+0x123

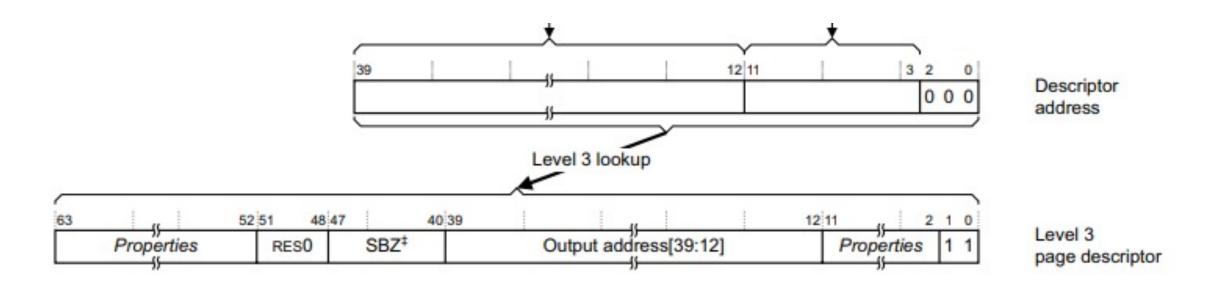



Possible Q&A

Possible Q&A



The system crashes when I load the Nailgun attack, why?

When we access the invalid region, it will trigger a translation fault.

But we have not designed the corresponding exception handler.

So the system cannot jump to the correct PC to exit the attack.





How about the cache and TLB attacks?

Actually, this Lab have not considered these attacks.

You can call them as "side-channel attack", which is a popular topic.

We may extend the discussion in the future.






How about peripheral attacks?

Attacker can use the peripherals, such as GPU and DMA, to bypass the MMU (Specifically, the MMU for CPU).

But we can config the MMU for them with S-2 translation, which is called as SMMU (or IOMMU).

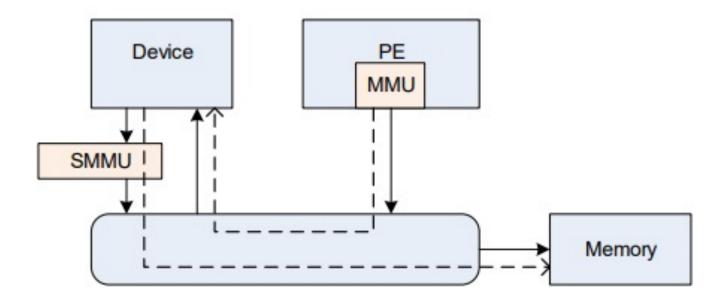

^{*}Source: https://developer.arm.com/documentation/ihi0070/latest





Do we have technical support?

The biggest support is the reference manual. Look up it and solve your problem.

Also, you can contact partial designers of this Lab.

12150073@mail.sustech.edu.cn (WANG Chenxu)





1. Armv8-A Reference Manual

Download: https://developer.arm.com/documentation/ddi0487/latest

A dictionary of Armv8-A architecture.

Important part in this Lab. G5.1-G5.7, K7.2

(They are reference about 32-bit Armv8-A architecture)





2. Linux Kernel Source file

Raspberry Pi provides the source codes for its kernel.

Download: https://github.com/raspberrypi/linux

Here we use the branch rpi-4.14.y or rpi-4.14.y-rt, you can also use the other branches.





3. Cross-compile Tools

Raspberry Pi provide it: https://github.com/raspberrypi/tools

We use it because the environment of our VM and Raspberry Pi are different.

Mostly we use Ubuntu, which is based on Intel x86 architecture. But Raspberry Pi uses Cortex-A53 cores, which support Armv8-A architecture.

*If you build Kernel files on Raspberry Pi, you will not use it.