

THE Z-DISTRIBUTION

INFERENTIAL STATISTICS

........

prepared by:

Gyro A. Madrona

Electronics Engineer











TOPIC OUTLINE

Point Estimate

Confidence Interval

z-Distribution



POINT ESTIMATE



POINT ESTIMATE

A <u>point estimate</u> is a <u>single</u> value (statistic) derived from sample data that serves as the "best guess" for an unknown population parameter.

 \overline{x} is a point estimate μ .

 s^2 is a point estimate σ^2 .

Example

A factory produces resistors labeled as $\mathbf{100}\ \Omega$, but due to manufacturing variations, the actual resistance varies. An engineer takes a random samples of 30 resistors and calculated the average resistance of the sample, $\overline{x} = \mathbf{101.2}\ \Omega$.

The point estimate for the true mean resistance μ of all resistors produced is **101**. **2** Ω .



CONFIDENCE INTERVAL




CONFIDENCE INTERVAL

A <u>confidence interval</u> is a <u>range</u> of values, derived from sample data, that is likely to contain the <u>true value</u> of an unknown population parameter (e.g., μ , σ^2).

Example


A factory produces resistors labeled as $100~\Omega$, but due to manufacturing variations, the actual resistance varies. An engineer takes a random samples of 30 resistors and calculated a 95% confidence interval for the true mean resistance, $95\%~CI=[99.41~\Omega,102.99~\Omega]$

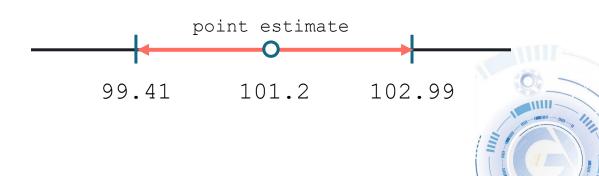

CONFIDENCE INTERVAL

A <u>confidence interval</u> is a <u>range</u> of values, derived from sample data, that is likely to contain the <u>true value</u> of an unknown population parameter (e.g., μ , σ^2).

Example

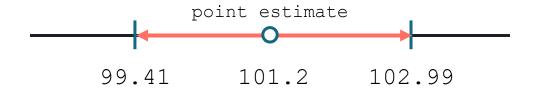


We are 95% confident that the true mean μ of all resistors produced lies between 99.41 Ω and 102.99 Ω .



Confidence levels (e.g., 90%, 95%, 99%) describe the method's reliability over many samples.

A 95% confidence level means that if the same sampling process were <u>repeated</u> many times, approximately 95% of the calculated CIs would contain the true population parameter (e.g., μ , σ^2).

Example

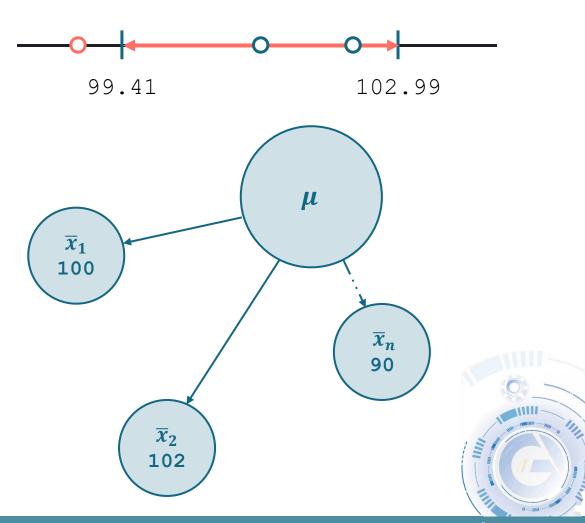

Confidence levels (e.g., 90%, 95%, 99%)

describe the method's reliability over many samples.


Formula

confidence level = $1 - \alpha$

where:

$$0 \le \alpha \le 1$$

95% Confidence Level

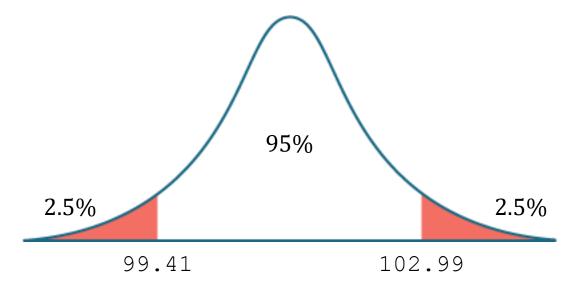

$$\alpha = 0.05$$



Confidence levels (e.g., 90%, 95%, 99%)

describe the method's reliability over many samples.


Formula

confidence level = $1 - \alpha$

where:

$$0 \le \alpha \le 1$$

99% Confidence Level

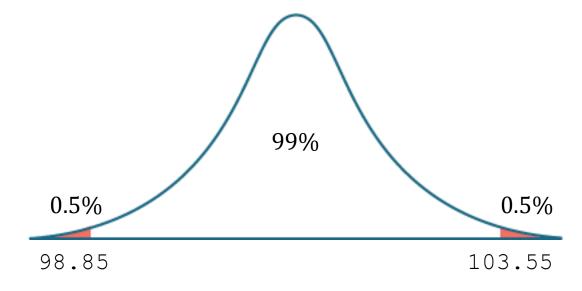

$$\alpha = 0.01$$



Confidence levels (e.g., 90%, 95%, 99%)

describe the method's reliability over many samples.


Formula

confidence level = $1 - \alpha$

where:

$$0 \le \alpha \le 1$$

100% Confidence Level

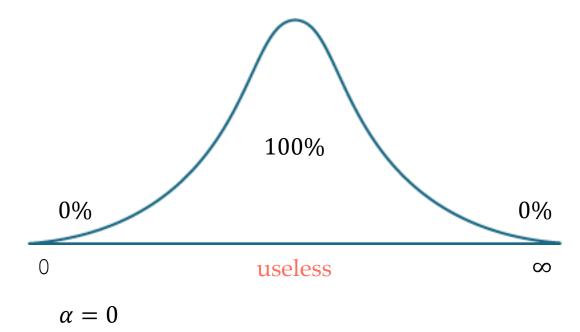



The **z-distribution** is used to calculate the confidence interval when:

- 1. The population variance (σ^2) is **known**.
- 2. The sample size is $\underline{\text{large}}$ $(n \ge 30)$.

Formula

$$CI = \overline{x} \pm z_{\alpha/2} \left(\frac{\sigma}{\sqrt{n}} \right)$$

where:

 $\bar{x} = \text{sample mean}$

 $z_{\alpha/2}$ = z-statistic

 $\frac{\sigma}{\sqrt{n}}$ = standard error

z-table

Z	0	0.01	0.02	0.03	0.04	0.05	0.06	0.07	80.0	0.09
0.0	0.5000	0.5040	0.5080	0.5120	0.5160	0.5199	0.5239	0.5279	0.5319	0.5359
0.1	0.5398	0.5438	0.5478	0.5517	0.5557	0.5596	0.5636	0.5675	0.5714	0.5753
0.2	0.5793	0.5832	0.5871	0.5910	0.5948	0.5987	0.6026	0.6064	0.6103	0.6141
0.3	0.6179	0.6217	0.6255	0.6293	0.6331	0.6368	0.6406	0.6443	0.6480	0.6517
0.4	0.6554	0.6591	0.6628	0.6664	0.6700	0.6736	0.6772	0.6808	0.6844	0.6879
0.5	0.6915	0.6950	0.6985	0.7019	0.7054	0.7088	0.7123	0.7157	0.7190	0.7224
0.6	0.7257	0.7291	0.7324	0.7357	0.7389	0.7422	0.7454	0.7486	0.7517	0.7549
0.7	0.7580	0.7611	0.7642	0.7673	0.7704	0.7734	0.7764	0.7794	0.7823	0.7852
8.0	0.7881	0.7910	0.7939	0.7967	0.7995	0.8023	0.8051	0.8078	0.8106	0.8133
0.9	0.8159	0.8186	0.8212	0.8238	0.8264	0.8289	0.8315	0.8340	0.8365	0.8389
1.0	0.8413	0.8438	0.8461	0.8485	0.8508	0.8531	0.8554	0.8577	0.8599	0.8621
1.1	0.8643	0.8665	0.8686	0.8708	0.8729	0.8749	0.8770	0.8790	0.8810	0.8830
1.2	0.8849	0.8869	0.8888	0.8907	0.8925	0.8944	0.8962	0.8980	0.8997	0.9015
1.3	0.9032	0.9049	0.9066	0.9082	0.9099	0.9115	0.9131	0.9147	0.9162	0.9177
1.4	0.9192	0.9207	0.9222	0.9236	0.9251	0.9265	0.9279	0.9292	0.9306	0.9319
1.5	0.9332	0.9345	0.9357	0.9370	0.9382	0.9394	0.9406	0.9418	0.9429	0.9441
1.6	0.9452	0.9463	0.9474	0.9484	0.9495	0.9505	0.9515	0.9525	0.9535	0.9545
1.7	0.9554	0.9564	0.9573	0.9582	0.9591	0.9599	0.9608	0.9616	0.9625	0.9633
1.8	0.9641	0.9649	0.9656	0.9664	0.9671	0.9678	0.9686	0.9693	0.9699	0.9706
1.9	0.9713	0.9719	0.9726	0.9732	0.9738	0.9744	0.9750	0.9756	0.9761	0.9767
2.0	0.9772	0.9778	0.9783	0.9788	0.9793	0.9798	0.9803	0.9808	0.9812	0.9817
2.1	0.9821	0.9826	0.9830	0.9834	0.9838	0.9842	0.9846	0.9850	0.9854	0.9857
2.2	0.9861	0.9864	0.9868	0.9871	0.9875	0.9878	0.9881	0.9884	0.9887	0.9890
2.3	0.9893	0.9896	0.9898	0.9901	0.9904	0.9906	0.9909	0.9911	0.9913	0.9916
2.4	0.9918	0.9920	0.9922	0.9925	0.9927	0.9929	0.9931	0.9932	0.9934	0.9936
2.5	0.9938	0.9940	0.9941	0.9943	0.9945	0.9946	0.9948	0.9949	0.9951	0.9952
2.6	0.9953	0.9955	0.9956	0.9957	0.9959	0.9960	0.9961	0.9962	0.9963	0.9964
2.7	0.9965	0.9966	0.9967	0.9968	0.9969	0.9970	0.9971	0.9972	0.9973	0.9974
2.8	0.9974	0.9975	0.9976	0.9977	0.9977	0.9978	0.9979	0.9979	0.9980	0.9981
2.9	0.9981	0.9982	0.9982	0.9983	0.9984	0.9984	0.9985	0.9985	0.9986	0.9986
3.0	0.9987	0.9987	0.9987	0.9988	0.9988	0.9989	0.9989	0.9989	0.9990	0.9990

The **z-distribution** is used to calculate the confidence interval when:

- 1. The population variance (σ^2) is **known**.
- 2. The sample size is <u>large</u> $(n \ge 30)$.

Formula

$$CI = \overline{x} \pm z_{\alpha/2} \left(\frac{\sigma}{\sqrt{n}} \right)$$

where:

 $\bar{x} = \text{sample mean}$

 $z_{\alpha/2}$ = z-statistic

 $\frac{\sigma}{\sqrt{n}}$ = standard error

Percent Point Function

norm.ppf() returns the critical **z** value for a given probability (1—alpha).

Two-tailed test

z_critical = stats.norm.ppf(1-alpha/2)

One-tailed test

z_critical = stats.norm.ppf(1-alpha)

The **z-distribution** is used to calculate the confidence interval when:

- 1. The population variance (σ^2) is **known**.
- 2. The sample size is <u>large</u> $(n \ge 30)$.

Formula

$$CI = \overline{x} \pm z_{\alpha/2} \left(\frac{\sigma}{\sqrt{n}} \right)$$

where:

 $\bar{x} = \text{sample mean}$

 $z_{\alpha/2}$ = z-statistic

 $\frac{\sigma}{\sqrt{n}}$ = standard error

Interval Function

norm.interval() returns a tuple (lower_limit,
upper_limit) representing the confidence interval for
z-interval.

Syntax

```
ci_lower, ci_upper =
stats.norm.interval(
    confidence = confidence_level,
    loc = sample_mean,
    scale = standard_error
```

EXERCISE

A power company measures the voltage output (in volts) of a batch of transformers. The population standard deviation (σ) is known to be 0.5 volts. A random sample of 30 transformers is tested, and their voltage outputs are recorded in "transformer-voltagedata" dataset. Calculate a 95% confidence interval for the true mean voltage output (μ) of all transformers.

Solution



LABORATORY

