



# Onload User Guide

Copyright © 2018 SOLARFLARE Communications, Inc. All rights reserved.

The software and hardware as applicable (the "Product") described in this document, and this document, are protected by copyright laws, patents and other intellectual property laws and international treaties. The Product described in this document is provided pursuant to a license agreement, evaluation agreement and/or non-disclosure agreement. The Product may be used only in accordance with the terms of such agreement. The software as applicable may be copied only in accordance with the terms of such agreement.

Onload is licensed under the GNU General Public License (Version 2, June 1991). See the LICENSE file in the distribution for details. The Onload Extensions Stub Library is Copyright licensed under the BSD 2-Clause License.

Onload contains algorithms and uses hardware interface techniques which are subject to Solarflare Communications Inc patent applications. Parties interested in licensing Solarflare's IP are encouraged to contact Solarflare's Intellectual Property Licensing Group at:

Director of Intellectual Property Licensing  
Intellectual Property Licensing Group  
Solarflare Communications Inc,  
7505 Irvine Center Drive  
Suite 100  
Irvine, California 92618

You will not disclose to a third party the results of any performance tests carried out using Onload or EnterpriseOnload without the prior written consent of Solarflare.

The furnishing of this document to you does not give you any rights or licenses, express or implied, by estoppel or otherwise, with respect to any such Product, or any copyrights, patents or other intellectual property rights covering such Product, and this document does not contain or represent any commitment of any kind on the part of SOLARFLARE Communications, Inc. or its affiliates.

The only warranties granted by SOLARFLARE Communications, Inc. or its affiliates in connection with the Product described in this document are those expressly set forth in the license agreement, evaluation agreement and/or non-disclosure agreement pursuant to which the Product is provided. EXCEPT AS EXPRESSLY SET FORTH IN SUCH AGREEMENT, NEITHER SOLARFLARE COMMUNICATIONS, INC. NOR ITS AFFILIATES MAKE ANY REPRESENTATIONS OR WARRANTIES OF ANY KIND (EXPRESS OR IMPLIED) REGARDING THE PRODUCT OR THIS DOCUMENTATION AND HEREBY DISCLAIM ALL IMPLIED WARRANTIES OF MERCHANTABILITY, FITNESS FOR A PARTICULAR PURPOSE AND NON-INFRINGEMENT, AND ANY WARRANTIES THAT MAY ARISE FROM COURSE OF DEALING, COURSE OF PERFORMANCE OR USAGE OF TRADE. Unless otherwise expressly set forth in such agreement, to the extent allowed by applicable law (a) in no event shall SOLARFLARE Communications, Inc. or its affiliates have any liability under any legal theory for any loss of revenues or profits, loss of use or data, or business interruptions, or for any indirect, special, incidental or consequential damages, even if advised of the possibility of such damages; and (b) the total liability of SOLARFLARE Communications, Inc. or its affiliates arising from or relating to such agreement or the use of this document shall not exceed the amount received by SOLARFLARE Communications, Inc. or its affiliates for that copy of the Product or this document which is the subject of such liability.

The Product is not intended for use in medical, life saving, life sustaining, critical control or safety systems, or in nuclear facility applications.

A list of patents associated with this product can be found at: <http://www.solarflare.com/patent>

SF-104474-CD Last Revised: May 2018

Issue 25



**Trademark**

OpenOnload® and EnterpriseOnload® are registered trademarks of Solarflare Communications Inc  
in the United States and other countries.

# Table of Contents

<b>1 What's New .....</b>	<b>1</b>
1.1 New features in OpenOnload 201805 .....	1
1.2 Change history.....	3
<b>2 Low Latency Quickstart Guide .....</b>	<b>4</b>
2.1 Introduction.....	4
2.2 Software Installation.....	4
2.3 Test Setup.....	5
2.4 Latency.....	7
2.5 CTPIO Latency .....	11
2.6 Testing Without Onload .....	12
2.7 Further Information .....	13
<b>3 ScaleOut Quickstart Guide .....</b>	<b>14</b>
3.1 Introduction.....	14
3.2 Software Installation.....	14
3.3 Test Setup.....	15
3.4 Throughput .....	16
3.5 Further Information .....	17
<b>4 Background .....</b>	<b>18</b>
4.1 Introduction.....	18

<b>5 Installation . . . . .</b>	<b>22</b>
5.1 Introduction . . . . .	22
5.2 Onload Distributions . . . . .	22
5.3 Hardware and Software Supported Platforms . . . . .	23
5.4 Onload and the Network Adapter Driver . . . . .	24
5.5 Removing Previously Installed Drivers . . . . .	25
5.6 Migrating Between Onload Versions - Upgrade/Downgrade . . . . .	25
5.7 EnterpriseOnload - Build and Install from SRPM . . . . .	27
5.8 EnterpriseOnload - Debian Source Packages . . . . .	29
5.9 OpenOnload DKMS Installation . . . . .	29
5.10 Build OpenOnload Source RPM . . . . .	30
5.11 OpenOnload - Installation . . . . .	30
5.12 Onload Kernel Modules . . . . .	32
5.13 Configuring the Network Interfaces . . . . .	33
5.14 Installing Netperf . . . . .	33
5.15 How to run Onload . . . . .	33
5.16 Testing the Onload Installation . . . . .	33
5.17 Apply an Onload Patch . . . . .	33
<b>6 Tuning Onload . . . . .</b>	<b>35</b>
6.1 Introduction . . . . .	35
6.2 System Tuning . . . . .	36
6.3 Standard Tuning . . . . .	38
6.4 Onload Deployment on NUMA Systems . . . . .	41
6.5 Interrupt Handling - Kernel Driver . . . . .	43
6.6 Performance Jitter . . . . .	49
6.7 Advanced Tuning . . . . .	53

<b>7 Onload Functionality.....</b>	<b>61</b>
7.1 Onload Transparency.....	61
7.2 Onload Stacks.....	61
7.3 Virtual Network Interface (VNIC).....	62
7.4 Functional Overview.....	62
7.5 Onload with Mixed Network Adapters .....	62
7.6 Maximum Number of Network Interfaces .....	63
7.7 Whitelist and Blacklist Interfaces.....	63
7.8 Onloaded PIDs .....	64
7.9 Onload and File Descriptors, Stacks and Sockets .....	64
7.10 System calls intercepted by Onload.....	64
7.11 Linux Sysctls.....	64
7.12 Changing Onload Control Plane Table Sizes .....	67
7.13 Namespaces.....	67
7.14 Control Plane Server.....	68
7.15 ScaleOut Onload .....	70
7.16 SO_BINDTODEVICE .....	70
7.17 Multiplexed I/O .....	71
7.18 Wire Order Delivery .....	75
7.19 Stack Sharing .....	78
7.20 Application Clustering.....	79
7.21 Bonding, Link aggregation and Failover.....	80
7.22 Teaming .....	81
7.23 VLANS.....	82
7.24 MACVLAN.....	83
7.25 Accelerated pipe() .....	83
7.26 Zero-Copy API .....	84
7.27 Debug and Logging .....	84
<b>8 Timestamps .....</b>	<b>86</b>
8.1 Introduction .....	86
8.2 Software Timestamps .....	86
8.3 Hardware Timestamps .....	87
8.4 Timestamping - Example Applications .....	90

<b>9 Onload - TCP .....</b>	<b>93</b>
9.1 TCP Operation .....	93
9.2 TCP Handshake - SYN, SYNACK.....	94
9.3 TCP SYN Cookies .....	94
9.4 TCP Socket Options .....	94
9.5 TCP Level Options .....	97
9.6 TCP File Descriptor Control.....	98
9.7 TCP Congestion Control.....	98
9.8 TCP SACK .....	99
9.9 TCP QUICKACK.....	99
9.10 TCP Delayed ACK .....	99
9.11 TCP Dynamic ACK .....	100
9.12 TCP Loopback Acceleration .....	100
9.13 TCP Striping .....	102
9.14 TCP Connection Reset on RTO .....	102
9.15 ONLOAD_MSG_WARM.....	103
9.16 Listen/Accept Sockets .....	104
9.17 Socket Caching.....	104
9.18 Shared local ports .....	107
9.19 Scalable Filters .....	108
9.20 Transparent Reverse Proxy Modes.....	110
9.21 Transparent Reverse Proxy on Multiple CPUs .....	112
<b>10 Onload - UDP .....</b>	<b>113</b>
10.1 UDP Operation.....	113
10.2 Socket Options.....	113
10.3 Source Specific Socket Options .....	115
10.4 Onload Sockets vs. Kernel Sockets .....	115
10.5 UDP Sockets - Send and Receive Paths .....	115
10.6 Fragmented UDP .....	116
10.7 User Level recvmsg for UDP .....	116
10.8 User-Level sendmsg for UDP.....	117
10.9 UDP sendfile .....	117
10.10 Multicast Replication .....	117
10.11 Multicast Operation and Stack Sharing.....	118
10.12 Multicast Loopback .....	121
10.13 Hardware Multicast Loopback .....	121
10.14 IP_MULTICAST_ALL .....	122

<b>11 Packet Buffers .....</b>	<b>123</b>
11.1 Introduction.....	123
11.2 Network Adapter Buffer Table Mode.....	123
11.3 Large Buffer Table Support.....	123
11.4 Scalable Packet Buffer Mode .....	124
11.5 Allocating Huge Pages.....	124
11.6 How Packet Buffers Are Used by Onload.....	125
11.7 Configuring Scalable Packet Buffers.....	128
11.8 Physical Addressing Mode .....	132
11.9 Programmed I/O .....	133
11.10 CPIO .....	135
<b>12 Onload and Virtualization .....</b>	<b>142</b>
12.1 Introduction.....	142
12.2 Overview .....	142
12.3 Onload and Linux KVM .....	142
12.4 Onload and NIC Partitioning.....	145
12.5 Onload in a Docker Container .....	146
12.6 Pre-Installation .....	146
12.7 Installation .....	147
12.8 Create Onload Docker Image .....	150
12.9 Migration .....	151
12.10 Onload Docker Images .....	151
12.11 Copying Files Between Host and Container .....	152
<b>13 Limitations.....</b>	<b>153</b>
13.1 Introduction.....	153
13.2 Changes to Behavior .....	154
13.3 Limits to Acceleration.....	158
13.4 epoll - Known Issues .....	162
13.5 Configuration Issues .....	165
<b>14 Change History .....</b>	<b>170</b>
14.1 Mapping EnterpriseOnload/OpenOnload .....	170
14.2 Onload - Adapter Net Drivers .....	170
14.3 Features .....	171
14.4 Environment Variables .....	177
14.5 Module Options.....	187
14.6 Onload - Adapter Net Drivers .....	191
<b>A Parameter Reference .....</b>	<b>193</b>
A.1 Parameter List .....	193
<b>B Meta Options .....</b>	<b>254</b>
B.1 Environment variables .....	254

<b>C Build Dependencies .....</b>	<b>256</b>
C.1 General.....	256
<b>D Onload Extensions API .....</b>	<b>258</b>
D.1 Source Code.....	258
D.2 Java Native Interface - Wrapper.....	258
D.3 Common Components .....	258
D.4 Stacks API.....	264
D.5 Stacks API Usage .....	270
D.6 Stacks API - Examples .....	271
D.7 Zero-Copy API .....	273
D.8 Templated Sends .....	286
D.9 Delegated Sends API .....	290
<b>E onload_stackdump .....</b>	<b>299</b>
E.1 Introduction.....	299
E.2 General Use .....	299
E.3 List Onloaded Processes .....	300
E.4 Onloaded Threads, Priority, Affinity.....	300
E.5 List Onload Environment variables.....	300
E.6 TX PIO Counters.....	300
E.7 Send RST on a TCP Socket.....	301
E.8 Removing Zombie and Orphan Stacks.....	301
E.9 Snapshot vs. Dynamic Views .....	302
E.10 Monitoring Receive and Transmit Packet Buffers.....	302
E.11 TCP Application STATS.....	303
E.12 The onload_stackdump LOTS Command.....	304
E.13 Onload Stackdump Filters.....	320
E.14 Remote Monitoring.....	320
<b>F Solarflare sfnettest .....</b>	<b>322</b>
F.1 Introduction .....	322
<b>G onload_tcpdump .....</b>	<b>330</b>
G.1 Introduction.....	330
G.2 Building onload_tcpdump .....	330
G.3 Using onload_tcpdump .....	330
<b>H ef_vi .....</b>	<b>333</b>
H.1 Components .....	333
H.2 Compiling and Linking .....	333
H.3 Documentation .....	334

<b>I onload_iptables .....</b>	<b>335</b>
I.1 Description .....	335
I.2 How it works .....	335
I.3 Features .....	336
I.4 Rules .....	336
I.5 Preview firewall rules .....	337
I.6 Error Messages .....	339
<b>J Solarflare eflatency Test Application .....</b>	<b>341</b>
J.1 eflatency .....	341
<b>K Management Information Base .....</b>	<b>343</b>
K.1 Host .....	343
K.2 Container .....	343
K.3 Namespaces .....	343
K.4 List Available Options .....	344
K.5 Tables .....	345

# 1

# What's New

This issue of the user guide identifies changes and new features introduced in the OpenOnload® release, 201805.

For a complete list of features and enhancements refer to the *Release Notes* and the *Release Change Log* available from: <http://www.openonload.org/download.html>.

OpenOnload 201805 includes the 4.13 net driver.

Users should refer to `ReleaseNotes-sfc` in the distribution package for details of changes to the adapter driver. Many of the new features require a minimum 4.13 version firmware.

## 1.1 New features in OpenOnload 201805

This is a major feature release that adds new features to OpenOnload, in particular support for the new X2 adapters from Solarflare, extensions to TCPDirect and new Onload scalable filter capabilities.

### Support for Solarflare X2 series adapters

This release supports the new X2 series adapters from Solarflare

### CTPIO

Cut Through Programmed Input Output (CTPIO) delivers the lowest transmit latency enabled by the architecture of the Solarflare X2 series adapters. Transmit packets are moved directly from PCIe bus to network adapter bypassing the main adapter transmit datapath.

For feature details see [CTPIO on page 135](#). For CTPIO latency benchmark tests refer to [Low Latency Quickstart Guide on page 4](#).

### New latency\_best profile

There is a new latency-best profile. This targets the lowest possible latency for a given release of Onload.

Before using this profile, please read [The latency-best profile on page 51](#), especially the warning on usage.

## Delegated sends in TCPDirect

This release adds new API functions to TCPDirect that allow the user to have TCPDirect handle the TCP state machine while performing critical sends through another mechanism (such as ef\_vi) to achieve lower latency. This is analogous both in principle and in the arrangement of the API to the existing delegated sends feature of Onload.



**NOTE:** The new API is offered as a technology preview: it is functionally complete but has had limited testing, and the API may change if problems are found. Customers are invited to experiment with the feature and to direct feedback to [support@solarflare.com](mailto:support@solarflare.com).

For more information, see the *TCPDirect User Guide* (SF-116303-CD).

## Improvements to scalable filters

Scalable filters can now be combined for both passive and active open connections and with RSS. Scalability limitations for kernel listening sockets can be avoided.

See [Scalable Filters on page 108](#).

## NGINX application support

Onload's clustering capability has been extended to provide better support for the NGINX application's master process pattern and hot restart operation. A new nginx\_reverse\_proxy profile has an example set of relevant configurations.

See [The nginx\\_reverse\\_proxy profile on page 52](#).

## Improvements to socket caching and shared local ports

Improvements have been made to socket caching and shared local ports. These target applications such as web proxies that create and close large numbers of sockets, and that spawn new processes reusing existing listening sockets.

Improvements to shared local ports include:

- faster recycling of shared local ports
- dynamic reservation of shared local ports, to avoid exhaustion of the ephemeral port range.

See [Shared local ports on page 107](#).

Improvements to socket caching include:

- using a common cache of sockets
- caching descriptors per-process, instead of only in the originating process.

See [Socket Caching on page 104](#).

## Changes to EF\_UL\_EPOLL=3

The scalability benefits from setting EF\_UL\_POLL=3 are now possible in up to four epoll sets per socket, provided that each epoll set is in a different process.

See [Epoll on page 73](#).

## Other new configuration options

Various configuration options have been added.

See [Environment Variables on page 177](#) for a list of changes, and [Parameter Reference on page 193](#) for full descriptions.

## 32-bit kernels

This release drops support for 32-bit kernels. 32-bit userspace applications are still supported.

## CONFIG\_KALLSYMS

The CONFIG\_KALLSYMS kernel configuration option is required for Onload to operate correctly. The dependency of Onload on this option is not new in this release, but very recent kernels — namely, those containing the commit 21d375b6b34ff511a507de27bf316b3dde6938d9 that removes the x86 syscall-dispatch fast path — will be unable to load the Onload driver when CONFIG\_KALLSYMS is not defined. All of the Linux distributions listed in [Hardware and Software Supported Platforms on page 23](#) set this option in their default kernel configurations, and so are not affected.

## Monitoring tools

The `orm_json` tool for monitoring Onload stacks and reporting statistics has been improved to include more comprehensive statistics and further details of the status of Onload stacks. To ease integration with standard performance monitoring tools, the new version features an additional, more machine-friendly output format, as well as the facility to generate metadata for the reported statistics.

## 1.2 Change history

The [Change History](#) section is updated with every revision of this document to include the latest Onload features, changes or additions to environment variables and changes or additions to Onload module options. Refer to [Change History on page 170](#).

## 2

# Low Latency Quickstart Guide

## 2.1 Introduction

This section demonstrates how to achieve very low latency coupled with minimum jitter on a system fitted with the Solarflare XtremeScale™ SFN8000 series network adapter and using Solarflare's kernel-bypass network acceleration middleware, OpenOnload.

The procedure will focus on the performance of the network adapter for TCP and UDP applications running on Linux using the industry-standard Netperf network benchmark application and the Solarflare supplied open source sfnettest network benchmark test tools.



**NOTE:** Please read the Solarflare ONLOAD\_LICENSE file regarding the disclosure of benchmark test results.

## 2.2 Software Installation

Before running Low Latency benchmark tests ensure that correct driver and firmware versions are installed e.g. (minimum driver and firmware versions are shown):

```
[root@server-N]# ethtool -i <interface>
driver: sfc
version: 4.10.0.1011
firmware-version: 6.2.0.1016 rx1 tx1
```

### Firmware Variant

On SFN7000, SFN8000 and X2 series adapters, the adapter should use the **ultra-low-latency** firmware variant – as indicated by the presence of **rx1 tx1** as shown above. Firmware variants are selected with the sfboot utility from the Solarflare Linux Utilities package (SF-107601-LS).

### Netperf

Netperf can be downloaded from <https://github.com/HewlettPackard/netperf>

Unpack the compressed zip file using the unzip command:

```
# unzip netperf-master.zip
```

This will create a sub-directory called netperf-master from which the configure and make commands can be run (as root):

```
./configure  
make install
```

Following installation the netperf and netserver applications are located in the /usr/local/bin subdirectory.

## Solarflare sfnettest

Download the sfnettest-<version>.tgz source file from [www.openonload.org](http://www.openonload.org)

Unpack the tar file using the tar command:

```
# tar -zxvf sfnettest-<version>.tgz
```

Run the make utility from the sfnettest-<version>/src subdirectory to build the sfnt-pingpong and other test applications.

## Solarflare Onload

Before Onload network and kernel drivers can be built and installed the system must support a build environment capable of compiling kernel modules. Refer to [Build Dependencies on page 256](#) for more details.

Download the openonload-<version>.tgz file from [www.openonload.org](http://www.openonload.org)

Unpack the tar file using the tar command:

```
# tar -zxvf onload-<version>.tgz
```


Run the onload\_install command from the Onload-<version>/scripts subdirectory:

```
# ./onload_install
```

Refer to [Driver Loading - NUMA Node on page 41](#) to ensure that drivers are affinitized to a core on the correct NUMA node.

## 2.3 Test Setup

The diagram below identifies the required physical configuration of two servers equipped with Solarflare network adapters connected back-to-back. If required, tests can be repeated with a 10G switch on the link to measure the additional latency delta using a particular switch.

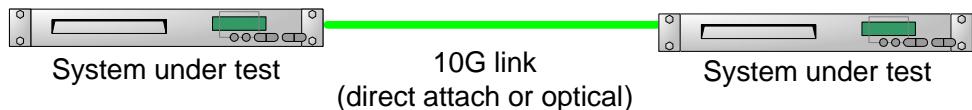

### Requirements:

- Two servers are equipped with Solarflare network adapters and connected with a single cable between the Solarflare interfaces.
- The Solarflare interfaces are configured with an IP address so that traffic can pass between them. Use ping to verify connection.

- Onload, netperf and sfnettest are installed on both machines.

## Pre-Test Configuration

The following configuration options are applicable to RHEL7 systems. On both machines:

- 1 Add the following options to the kernel config line in /boot/grub/grub.conf:  
`isolcpus=<comma separated cpu list> nohz=off iommu=off intel_iommu=off mce(ignore_ce nmi_watchdog=0)`
- 2 Stop the following services on the server:  
`systemctl stop cpupower  
systemctl stop cpuspeed  
systemctl stop cpufreqd  
systemctl stop powerd  
systemctl stop irqbalance  
systemctl stop firewalld`
- 3 Allocate hugepages - Refer to [Allocating Huge Pages on page 124](#).
- 4 On a NUMA-aware system, latency can be affected unless consideration is given to the selection of the NUMA node. Refer to [Onload Deployment on NUMA Systems on page 41](#).
- 5 Disable interrupt moderation.  
`# ethtool -C <interface> rx-usecs 0 adaptive-rx off`
- 6 Enable PIO in the Onload environment.  
`EF_PIO=1`
- 7 Refer to the [Reference System Specification](#) below for BIOS features.

## Reference System Specification

The following latency measurements were recorded on Intel® Haswell servers. The specification of the test systems is as follows:

- DELL PowerEdge R630 servers equipped with dual Intel® Xeon® CPU E5-2637 v3 @3.50GHz, 2 x 4GB DIMMs.  
BIOS: Turbo mode ENABLED, cstates ENABLED, IOMMU DISABLED, Virtualization DISABLED.
- Red Hat Enterprise Linux V7.3 (x86\_64 kernel, version 3.10.0-493.el7.x86\_64).
- Solarflare SFN8522 NIC (driver and firmware – see Software Installation).  
Direct attach cable at 10G.
- OpenOnload distribution: openonload-201606-u1.

It is expected that similar results will be achieved on any Intel based, PCIe Gen 3 server or compatible system.

## 2.4 Latency

### Onload Latency

#### UDP Latency: Netperf

Run the net-server application on system-1:

```
[system-1]# pkill -f netserver
[system-1]# onload --profile=latency taskset -c 4 ./netserver
```

Run the netperf application on system -2:

```
[system-2]# onload --profile=latency taskset -c 4 ./netperf -t UDP_RR -H <system1-ip> -l 10 -- -r 32
```

Socket	Size	Request	Resp.	Elapsed	Trans.
Send	Recv	Size	Size	Time	Rate
bytes	Bytes	bytes	bytes	secs.	per sec
212992	212992	32	32	10.00	<b>366588.0</b>

366588 transactions/second means that each transaction takes  $1/366588$  seconds resulting in a  $\frac{1}{2}$  RTT latency of  $(1/366588)/2$  or **1.36 $\mu$ s**.

#### UDP Latency: sfnt-pingpong

Run the sfnt-pingpong application on both systems:

```
[system-1]# onload --profile=latency taskset -c 4 ./sfnt-pingpong
[system-2]# onload --profile=latency taskset -c 4 ./sfnt-pingpong -- affinity "4;4" udp <system1-ip>
```

#	size	mean	min	median	max	%ile	stddev	iter
0	1374	1317	1346	14280	1415	354	354	1000000
1	1374	1311	1346	13346	1467	354	354	1000000
2	1373	1318	1345	12355	1403	354	354	1000000
4	1372	1320	1345	8866	1396	353	353	1000000
8	1373	1317	1345	14856	1424	354	354	1000000
16	1373	1316	1344	8129	1460	354	354	1000000
<b>32</b>	<b>1403</b>	<b>1340</b>	<b>1373</b>	<b>9458</b>	<b>1451</b>	<b>367</b>	<b>367</b>	<b>1000000</b>
64	1435	1377	1405	15179	1475	363	363	1000000
128	1513	1454	1481	8704	1562	378	378	1000000
256	1664	1599	1630	9668	1794	388	388	1000000

The output identifies mean, minimum, median and maximum (nanosecond)  $\frac{1}{2}$  RTT latency for increasing TCP packet sizes including the 99% percentile and standard deviation for these results. A message size of 32 bytes has a mean latency of **1.40 $\mu$ s** with a 99%ile latency under **1.45 $\mu$ s**.

## TCP Latency: Netperf

Run the netserver application on system-1:

```
[system-1]# pkill -f netserver
[system-1]# onload --profile=latency taskset -c 4 ./netserver
```

Run the netperf application on system-2:

```
[system-2]# onload --profile=latency taskset -c 4 ./netperf -t
TCP_RR -H <system1-ip> -l 10 -- -r 32
```

Socket	Size	Request	Resp.	Elapsed	Trans.
Send	Recv	Size	Size	Time	Rate
bytes	Bytes	bytes	bytes	secs.	per sec
16384	87380	32	32	10.00	<b>327572.09</b>

327572 transactions/second means that each transaction takes 1/327572 seconds resulting in a  $\frac{1}{2}$  RTT latency of  $(1/327572)/2$  or **1.52 $\mu$ s**.

## TCP Latency: sfnt-pingpong

Run the sfnt-pingpong application on both systems:

```
[system-1]# onload --profile=latency taskset -c 4 ./sfnt-pingpong
[system-2]# onload --profile=latency taskset -c 4 ./sfnt-pingpong --
affinity "4;4" tcp <system1-ip>
```

#	size	mean	min	median	max	%ile	stddev	iter
#	size	mean	min	median	max	%ile	stddev	iter
1	1494	1448	1478	14249	1630	60	1000000	
2	1494	1449	1477	4342	1630	58	1000000	
4	1496	1448	1479	3615	1632	55	1000000	
8	1500	1454	1484	3225	1636	58	1000000	
16	1508	1460	1491	3905	1645	56	1000000	
32	<b>1524</b>	<b>1477</b>	<b>1507</b>	<b>3453</b>	<b>1660</b>	<b>56</b>	<b>1000000</b>	
64	1575	1526	1558	5067	1715	60	1000000	
128	1653	1604	1637	3563	1794	59	1000000	
256	1793	1740	1776	3995	1932	57	1000000	

The output identifies mean, minimum, median and maximum (nanosecond)  $\frac{1}{2}$  RTT latency for increasing TCP packet sizes including the 99% percentile and standard deviation for these results. A message size of 32 bytes has a mean latency of **1.5  $\mu$ s** with a 99%ile latency under **1.6  $\mu$ s**.

## TCPDirect Latency

TCPDirect is a feature available for the SFN7000, SFN8000 and X2 series adapters which must have an Onload license and a TCPDirect license installed.

The TCPDirect test applications require huge pages to be configured on the test hosts. For example, to configure 1024 huge pages:

```
# sysctl -w vm.nr_hugepages=1024
```

To make this change persistent, update /etc/sysctl.conf. For example:

```
# echo "vm.nr_hugepages = 1024" >> /etc/sysctl.conf
```

### UDP Latency: zfudppingpong

Run the zfudppingpong application on both systems, which can be found in the /openonload-<version>/build/gnu\_x86\_64/tests/zf\_apps/static directory.

```
[system-1]# ZF_ATTR="interface=enp1s0f0" taskset -c 4 ./zfudppingpong -s 1
pong <system-1 ip>:20000 <system-2 ip>:20000
ZF library initialized
[system-2]# ZF_ATTR="interface=enp1s0f0" taskset -c 4 ./zfudppingpong -s 1
ping <system-2 ip>:20000 <system-1 ip>:20000
ZF library initialized
mean round-trip time: 2.192 usec
```

The output identifies mean TCPDirect ½ RTT latency for a 1byte UDP message of **1.096 µsec**.

### TCP Latency: zftcppingpong

Run the zftcppingpong application on both systems, which can be found in the /openonload-<version>/build/gnu\_x86\_64/tests/zf\_apps/static directory.

```
[system-1]# ZF_ATTR="interface=enp1s0f0" taskset -c 4 ./zftcppingpong -s 1
pong <system-1 ip>:20000
Waiting for incoming connection
Connection established

[system-2]# ZF_ATTR="interface=enp1s0f0" taskset -c 4 ./zftcppingpong -s 1
ping <system-1 ip>:20000
Connecting to ponger
Connection established

mean round-trip time: 2.202 usec
```

The output identifies mean TCPDirect ½ RTT latency for a 1byte TCP message of **1.101 µsec**.

## Layer 2 ef\_vi Latency

The eflatency UDP test application, supplied with the openonload package, can be used to measure latency of the Solarflare ef\_vi layer 2 API. eflatency uses the lowest latency method that is available on the adapter.

```
[system-1]# taskset -c 4 ./eflatency -s 32 pong enp4s0f0
[system-2]# taskset -c 4 ./eflatency -s 32 ping enp4s0f0

# ef_vi_version_str: 201606-u1
# udp payload len: 32
# iterations: 100000
# warmups: 10000
# frame len: 74
# mode: Alternatives
mean round-trip time: 1.990 usec
```

The output identifies mean (nanosecond) ef\_vi ½ RTT latency of **995ns**.



**NOTE:** The TX alternatives mode has been selected for the lowest latency. On a 4-port adapter, the port-mode option must be set to 2x10G or 2x40G. This feature is not available when used in 4x10G mode. The port-mode option can be configured with the sfboot utility from the Solarflare Linux Utilities package.

[Solarflare eflatency Test Application on page 341](#) describes the eflatency application, command line options and provides example command lines.

## 2.5 CTPIO Latency

The following results were recorded for latency tests using openonload-201805 with the Solarflare X2522 adapter. Cut through PIO is a feature of the X2 adapter where packets to be sent are streamed directly over the PCIe bus to the network port, bypassing the main adapter transmit datapath. For more information refer to [CTPIO on page 135](#).

### Reference System Specification

Single socket Skylake processor: Intel® Core™ i9-7900X CPU @ 3.30GHz

Single socket Skylake processor: Intel® Core™ E3-1270 v5 @ 3.60GHz

### Command Usage

Example command lines for openonload-201805 rtt (UDP) benchmark test application. Application source code can be found in:

`ool2018/openonload-201805/src/tests/rtt`

Application binary can be found in:

`ool2018/openonload-201805/build-gnu_x86_64/tests/rtt`

- *on server1:*  
`./rtt pong efvi:tx=ctpio,intf=<interface>`
- *on server2:*  
`./rtt ping efvi:tx=ctpio,intf=<interface> | ef_vi/stats`  
rtt produces raw output which can be piped to file.

### Latency Measurements

Figures are nanoseconds RTT/2.

<b>Payload size</b>	<b>zf tcp pingpong RTT/2</b>	<b>zf udp pingpong RTT/2</b>	<b>rtt (UDP) ctpio RTT/2</b>
1	812	800	777
32	860	850	819
64	894	877	846
128	948	939	905
256	1010	1010	961
300	1021	1023	970
400	1094	1077	1019

## 2.6 Testing Without Onload

The benchmark performance tests can be run without Onload using the regular kernel network drivers. To do this remove the `onload --profile=latency` part from the command line.

### Core Affinity

Set interrupt affinity such that interrupts and the application are running on different CPU cores but on the same processor package - examples below.

Use the following command to identify receive queues created for an interface e.g:

```
# cat /proc/interrupts | grep eth2
33: 0 0 0 0 IR-PCI-MSI-edge eth2-0
34: 0 0 0 0 IR-PCI-MSI-edge eth2-1
```

Direct IRQ 33 to CPU core 0 and IRQ 34 to CPU core 1:

```
# echo 1 > /proc/irq/33/smp_affinity
# echo 2 > /proc/irq/34/smp_affinity
```

### Tuned Profile

On RHEL7 servers, the tuned network-latency profile produces better kernel latency results:

```
# tuned-adm profile network-latency
```

### Busy Poll

Enable the kernel “busy poll” feature to disable interrupts and allow polling of the socket receive queue, the following values are recommended:

```
# sysctl net.core.busy_poll=50 && sysctl net.core.busy_read=50
```

### Results

Kernel latency has been measured at **2.7µs** with UDP traffic on a 3.11 kernel



**NOTE:** Latency will be higher when busy poll is not applied or not supported in the kernel version. Latency of less than 6us can be measured without busy poll on a standard RHEL 6.4 kernel.



## 2.7 Further Information

For installation of Solarflare adapters and performance tuning of the network driver when not using Onload refer to the *Solarflare Server Adapter User Guide* (SF-103837-CD) available from <https://support.solarflare.com/>

Questions regarding Solarflare products, Onload and this user guide can be emailed to [support@solarflare.com](mailto:support@solarflare.com).

# 3

# ScaleOut Quickstart Guide

## 3.1 Introduction

This section demonstrates how to achieve efficient packet handling and throughput on a system fitted with the Solarflare XtremeScale™ SFN8000 series network adapter and using Solarflare's kernel-bypass network acceleration middleware, OpenOnload, with the ScaleOut Onload license.

The procedure will focus on the performance of the network adapter for TCP applications running on Linux using the industry-standard Netperf network benchmark application.



**NOTE:** Please read the Solarflare ONLOAD\_LICENSE file regarding the disclosure of benchmark test results.

## 3.2 Software Installation

Before running ScaleOut benchmark tests ensure that correct driver and firmware versions are installed e.g. (minimum driver version for Onload 201710 is shown):

```
[root@server-N]# ethtool -i <interface>
driver: sfc
version: 4.12.1.1016
firmware-version: 6.4.2.1020 rx1 tx1
```

### Netperf

Netperf can be downloaded from <https://github.com/HewlettPackard/netperf>

Unpack the compressed zip file using the unzip command:

```
# unzip netperf-master.zip
```

This will create a sub-directory called netperf-master from which the configure and make commands can be run (as root):

```
./configure
make install
```

Following installation the netperf and netserver applications are located in the /usr/local/bin subdirectory.

## Solarflare Onload

Before Onload network and kernel drivers can be built and installed the system must support a build environment capable of compiling kernel modules. Refer to [Build Dependencies on page 256](#) for more details.

Download the openonload-<version>.tgz file from [www.openonload.org](http://www.openonload.org)

Unpack the tar file using the tar command:

```
# tar -zxvf onload-<version>.tgz
```


Run the `onload_install` command from the `Onload-<version>/scripts` subdirectory:

```
# ./onload_install
```

Refer to [Driver Loading - NUMA Node on page 41](#) to ensure that drivers are affinitized to a core on the correct NUMA node.

## 3.3 Test Setup

The diagram below identifies the required physical configuration of two servers equipped with Solarflare network adapters connected back-to-back. If required, tests can be repeated with a 10G switch on the link to measure the additional latency delta using a particular switch.

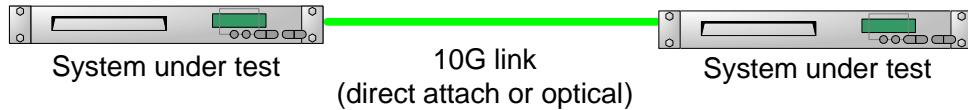

*Requirements:*

- Two servers are equipped with Solarflare network adapters and connected with a single cable between the Solarflare interfaces.
- The Solarflare interfaces are configured with an IP address so that traffic can pass between them. Use ping to verify connection.
- Onload and netperf are installed on both machines.

## Reference System Specification

The following throughput measurements were recorded on Intel® Haswell servers. The specification of the test systems is as follows:

- DELL PowerEdge R630 servers equipped with dual Intel® Xeon® CPU E5-2637 v3 @3.50GHz, 2 x 4GB DIMMs.  
BIOS: Turbo mode ENABLED, cstates ENABLED, IOMMU DISABLED, Virtualization DISABLED.
- Red Hat Enterprise Linux V7.3 (x86\_64 kernel, version 3.10.0-514.el7.x86\_64).

- Solarflare SFN8522 NIC (driver and firmware – see Software Installation) with **only** a ScaleOut Onload license.  
Direct attach cable at 10G.
  - OpenOnload distribution: openonload-201710.
  - Netperf version: 2.7.0.
- It is expected that similar results will be achieved on any Intel based, PCIe Gen 3 server or compatible system.

## Pre-Test Configuration

The reference system used for these throughput measurements is identical to that used in [Chapter 2](#) for latency measurements. Its configuration is described in [Pre-Test Configuration on page 6](#).

These configuration settings are not essential for using ScaleOut Onload. It is expected that similar results will be achieved with other configurations.

## 3.4 Throughput

### ScaleOut Onload throughput

The benchmark performance tests can be run with ScaleOut Onload using the Onload kernel bypass. To do this add **onload** to the start of each command line.

#### TCP throughput: Netperf

Run the net-server application on system-1:

```
[system-1]# pkill -f netserver  
[system-1]# onload taskset -c 5 ./netserver -p 12865
```

Run the netperf application on system -2:

```
[system-2]# onload taskset -c 5 ./netperf -t TCP_RR -H <system1-ip> -l 10  
-- -r 32
```

Socket	Size	Request	Resp.	Elapsed	Trans.
Send	Recv	Size	Size	Time	Rate
bytes	Bytes	bytes	bytes	secs.	per sec
16384	87380	32	32	10.00	<b>141747.28</b>

This transaction rate is almost double that achieved without ScaleOut Onload (see [Throughput without ScaleOut Onload](#) below).

## Throughput without ScaleOut Onload

The benchmark performance tests can be run without Onload using the regular kernel network drivers. To do this remove the **onload** part from the command line.

### TCP throughput: Netperf

Run the net-server application on system-1:

```
[system-1]# pkill -f netserver
[system-1]# taskset -c 5 ./netserver -p 12865
```

Run the netperf application on system -2:

```
[system-2]# taskset -c 5 ./netperf -t TCP_RR -H <system1-ip> -l 10 --
-r 32
```

Socket	Size	Request	Resp.	Elapsed	Trans.
Send	Recv	Size	Size	Time	Rate
bytes	Bytes	bytes	bytes	secs.	per sec
16384	87380	32	32	10.00	<b>75129.81</b>

Observe the reduced transaction rate compared to that achieved with ScaleOut Onload (see [ScaleOut Onload throughput](#) above).

## 3.5 Further Information

For installation of Solarflare adapters and performance tuning of the network driver when not using Onload refer to the *Solarflare Server Adapter User Guide* (SF-103837-CD) available from <https://support.solarflare.com/>

Questions regarding Solarflare products, Onload and this user guide can be emailed to [support@solarflare.com](mailto:support@solarflare.com).

# 4

# Background

## 4.1 Introduction



**NOTE:** This guide should be read in conjunction with the *Solarflare Server Adapter User's Guide*, SF-103837-CD, which describes procedures for hardware and software installation of Solarflare network interfaces cards, network device drivers and related software.



**NOTE:** Throughout this user guide the term Onload refers to both OpenOnload and EnterpriseOnload unless otherwise stated.

Onload is the Solarflare accelerated network middleware. It is an implementation of TCP and UDP over IP which is dynamically linked into the address space of user-mode applications, and granted direct (but safe) access to the network-adapter hardware. The result is that data can be transmitted to and received from the network directly by the application, without involvement of the operating system. This technique is known as 'kernel bypass'.

Kernel bypass avoids disruptive events such as system calls, context switches and interrupts and so increases the efficiency with which a processor can execute application code. This also directly reduces the host processing overhead, typically by a factor of two, leaving more CPU time available for application processing. This effect is most pronounced for applications which are network intensive, such as:


- Market-data and trading applications
- Computational fluid dynamics (CFD)
- HPC (High Performance Computing)
- HPMPI (High Performance Message Passing Interface), Onload is compatible with MPICH1 and 2, HPMPI, OpenMPI and SCALI
- Other physical models which are moderately parallelizable
- High-bandwidth video-streaming
- Web-caching, Load-balancing and Memcached applications
- Content Delivery Networks (CDN) and HTTP servers
- Other system hot-spots such as distributed lock managers or forced serialization points

The Onload library dynamically links with the application at runtime using the standard BSD sockets API, meaning that no modifications are required to the application being accelerated. Onload is the first and only product to offer full kernel bypass for POSIX socket-based applications over TCP/IP and UDP/IP protocols.

## Contrasting with Conventional Networking

When using conventional networking, an application calls on the OS kernel to send and receive data to and from the network. Transitioning from the application to the kernel is an expensive operation, and can be a significant performance barrier.

When an application accelerated using Onload needs to send or receive data, it need not access the operating system, but can directly access a partition on the network adapter. The two schemes are shown in [Figure 1](#).

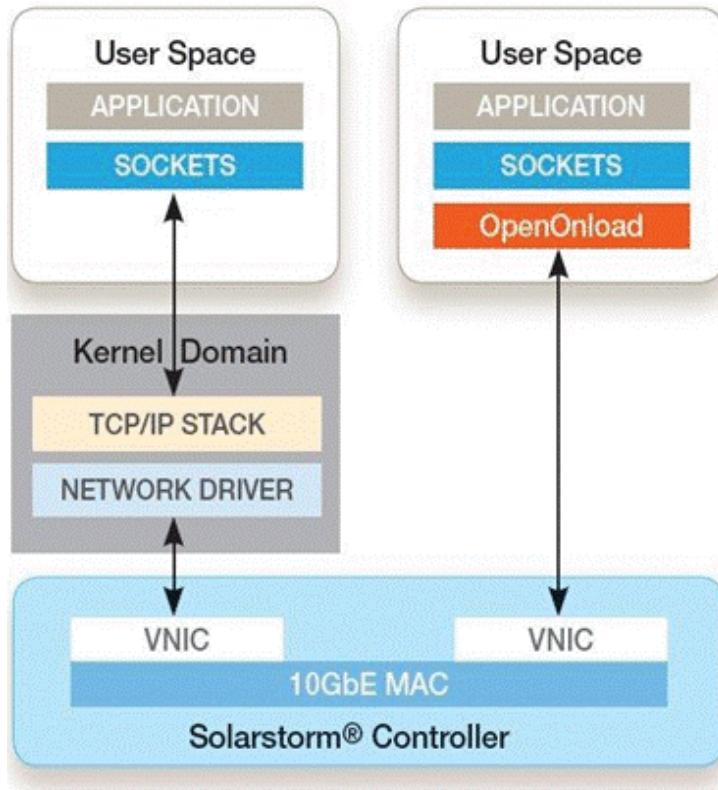

**Figure 1: Contrast with Conventional Networking.**

An important feature of the conventional model is that applications do not get direct access to the networking hardware and so cannot compromise system integrity. Onload is able to preserve system integrity by partitioning the NIC at the hardware level into many, protected 'Virtual NICs' (VNIC). An application can be granted direct access to a VNIC without the ability to access the rest of the system (including other VNICs or memory that does not belong to the application). Thus Onload with a Solarflare NIC allows optimum performance without compromising security or system integrity.

In summary, Onload can significantly reduce network processing overheads.

## How Onload Increases Performance

Onload can significantly reduce the costs associated with networking by reducing CPU overheads and improving performance for latency, bandwidth and application scalability.

### Overhead

Transitioning into and out of the kernel from a user-space application is a relatively expensive operation: the equivalent of hundreds or thousands of instructions. With conventional networking such a transition is required every time the application sends and receives data. With Onload, the TCP/IP processing can be done entirely within the user-process, eliminating expensive application/kernel transitions, i.e. system calls. In addition, the Onload TCP/IP stack is highly tuned, offering further overhead savings.

The overhead savings of Onload mean more of the CPU's computing power is available to the application to do useful work.

### Latency

Conventionally, when a server application is ready to process a transaction it calls into the OS kernel to perform a 'receive' operation, where the kernel puts the calling thread 'to sleep' until a request arrives from the network. When such a request arrives, the network hardware 'interrupts' the kernel, which receives the request and 'wakes' the application.

All of this overhead takes CPU cycles as well as increasing cache and translation lookaside-buffer (TLB) footprint. With Onload, the application can remain at user level waiting for requests to arrive at the network adapter and process them directly. The elimination of a kernel-to-user transition, an interrupt, and a subsequent user-to-kernel transition can significantly reduce latency. In short, reduced overheads mean reduced latency.


### Bandwidth

Because Onload imposes less overhead, it can process more bytes of network traffic every second. Along with specially tuned buffering and algorithms designed for 10 gigabit networks, Onload allows applications to achieve significantly improved bandwidth.

### Scalability

Modern multi-core systems are capable of running many applications simultaneously. However, the advantages can be quickly lost when the multiple cores contend on a single resource, such as locks in a kernel network stack or device driver. These problems are compounded on modern systems with multiple caches across many CPU cores and Non-Uniform Memory Architectures.

Onload results in the network adapter being partitioned and each partition being accessed by an independent copy of the TCP/IP stack. The result is that with Onload, doubling the cores really can result in doubled throughput as demonstrated by [Figure 2](#).

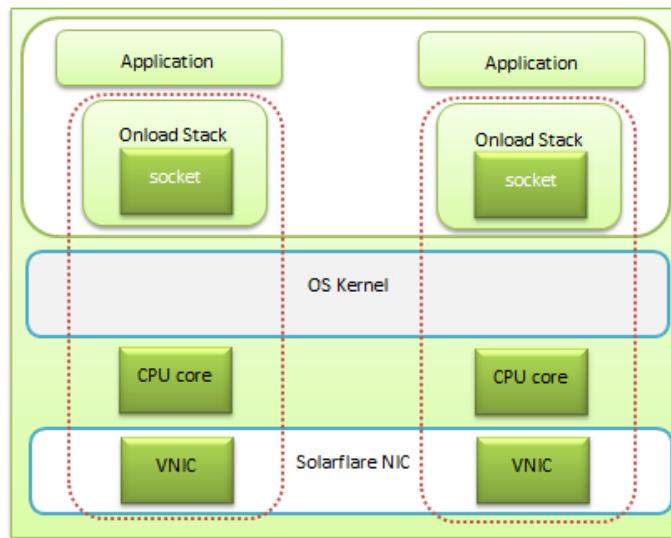

**Figure 2: Onload Partitioned Network Adapter**

## Further Information

For detailed information refer to:

- [Onload Functionality on page 61](#).
- [Onload - TCP on page 93](#).
- [Onload - UDP on page 113](#).
- [Onload and Virtualization on page 142](#)

# 5

# Installation

## 5.1 Introduction

This chapter covers the following topics:

- [Onload Distributions on page 22](#)
- [Hardware and Software Supported Platforms on page 23](#)
- [Onload and the Network Adapter Driver on page 24](#)
- [Removing Previously Installed Drivers on page 25](#)
- [onload\\_uninstallPre-install Notes on page 27](#)
- [EnterpriseOnload - Build and Install from SRPM on page 27](#)
- [EnterpriseOnload - Debian Source Packages on page 29](#)
- [OpenOnload DKMS Installation on page 29](#)
- [Build OpenOnload Source RPM on page 30](#)
- [OpenOnload - Installation on page 30](#)
- [Onload Kernel Modules on page 32](#)
- [Configuring the Network Interfaces on page 33](#)
- [Installing Netperf on page 33](#)
- [Testing the Onload Installation on page 33](#)
- [Apply an Onload Patch on page 33](#)
- [Onload Uninstall on page 34](#)

## 5.2 Onload Distributions

Onload is available in two distributions

- “OpenOnload” is a free version of Onload available from <http://www.openonload.org/> distributed as a source tarball under the GPLv2 license. OpenOnload is subject to a linear development cycle where major releases every 3-4 months include the latest development features.
- “EnterpriseOnload” is a commercial enterprise version of Onload distributed as a source RPM under the GPLv2 license. EnterpriseOnload differs from OpenOnload in that it is offered as a mature commercial product that is downstream from OpenOnload having undergone a comprehensive software product test cycle resulting in tested, hardened and validated code.

The Solarflare product range offers a flexible and broad range of support options, users should consult their reseller for details and refer to the Solarflare Enterprise Service and Support information at <http://www.solarflare.com/Enterprise-Service-Support>.

## Onload Licenses

Users are advised to read the following license files in the Onload distribution:

**LICENSE**

**IwIP-LICENSE**

**ONLOAD-LICENSE**

**TCPD-LICENSE**

## 5.3 Hardware and Software Supported Platforms

- Onload can be run on the following Solarflare adapters:
  - Solarflare Flareon™ SFN7000, XtremeScale™ SFN8000 and XtremeScale™ X2 series Adapters
  - Onload Network Adapters
  - Solarflare mezzanine adapters
  - SFA6902F and SFA7942Q ApplicationOnload™ Engine.
- Refer to the *Solarflare Server Adapter User Guide* ‘Product Specifications’ for adapter details.
- Onload can run on all Intel and AMD x86 processors, 32 bit and 64 bit platforms.



**NOTE:** Support for 32 bit kernels was removed in Onload 201805. 32 bit userspace applications are still supported.

- [Table 1](#) identifies supported operating systems/kernels

**Table 1: OS/Kernel Support**

OS Version	Notes
Red Hat Enterprise Linux 6.7 - 6.9	Built-in Solarflare drivers may not support SFN7000, SFN8000 and X2 series adapters.
Red Hat Enterprise Linux 7.1 - 7.5	
SuSE Linux Enterprise Server 11 sp4	Built-in Solarflare drivers may not support SFN7000, SFN8000 and X2 series adapters.
SuSE Linux Enterprise Server 12 sp2 and sp3	

**Table 1: OS/Kernel Support (continued)**

OS Version	Notes
Canonical Ubuntu Server LTS 16.04, 18.04	
Canonical Ubuntu Server 17.10	
Debian 8 “Jessie” 8.0	
Debian 9 “Stretch”	
Linux kernels 3.0 - 4.16.6	
	Solarflare aim to support the OS current and previous major release at the point these are released (plus the latest long term support release if this is not already included). This includes all minor releases where the distributor has not yet declared end of life/support.
	Whilst the Onload QA test cycle predominantly focuses on the Linux OS versions documented above, although not formally supported, Solarflare are not aware of any issues preventing Onload installation on other Linux variants such as Centos and Fedora. Some versions of Ubuntu and Debian earlier than those listed above are also known to support Onload.

## 5.4 Onload and the Network Adapter Driver

The Solarflare network adapter driver, the “net driver”, is generally available from three sources:

- Download as source RPM from [support.solarflare.com](http://support.solarflare.com).
- Packaged ‘in box’ in many Linux distributions e.g Red Hat Enterprise Linux.
- Packaged in the OpenOnload/EnterpriseOnload distribution.

*When using Onload you must use the adapter driver distributed with that version of Onload.*

## 5.5 Removing Previously Installed Drivers

The Solarflare adapter driver (sfc.ko) is distributed as part of many Linux based OS distributions - this is often referred to as the ‘boxed driver’ or the ‘in-tree’ driver.

Depending on the OS version this driver may not support more recent Solarflare adapters. Always check the driver release notes available from <https://support.solarflare.com/>.

The ‘in-tree’ driver displays only Major and Minor revision numbers when displayed by the ethtool command:

```
# ethtool -i enp3s0f0
driver: sfc
version: 4.0
```

Every Onload revised distribution includes a version of the net driver to support the specific features of the Onload release – **and this driver should always be used with Onload.** (The driver is installed along with the other Onload drivers.) Onload drivers display detailed version information using the ethtool command:

```
# ethtool -i enp3s0f0
driver: sfc
version: 4.5.1.1020
```

To ensure the Onload driver is always loaded following system reboot, the ‘in-tree’ driver can be removed from the OS entirely. Alternatively any Onload startup script should include the command to reload the Onload drivers:

```
# onload_tool reload
```

To remove the ‘in-tree’ driver (with Onload uninstalled or not yet installed):

```
# find /lib/modules/$(uname -r) -name 'sfc*.ko' | xargs rm -rf
# rmmod sfc
# update-initramfs -u -k <kernel version>
```

initramfs commands may differ on different Linux based OS, e.g on Centos7 the following dracut command can be used:

```
# dracut -f
```

## 5.6 Migrating Between Onload Versions - Upgrade/Downgrade

When migrating between Onload versions or between OpenOnload and EnterpriseOnload, a previously installed version must first be unloaded using the `onload_tool unload` command and then removed using the `onload_uninstall` command.

```
# onload_tool unload
# onload_uninstall
```

In some specific cases it may be necessary to manually remove onload driver modules before upgrading to a more recent version. To do this, list the modules and remove each dependency before removing the modules:

```
# lsmod | grep onload
 onload           580599  3
 sfc_char         47419   1 onload
 sfc_resource    162351   2 onload,sfc_char
 sfc              431807   4 sfc_resource,onload,sfc_char,sfc_affinity
 onload_cplane   144142   3 onload
```

```
# lsmod | grep sfc
 sfc_char         47419   1 onload
 sfc_resource    162351   2 onload,sfc_char
 sfc_affinity    17948   1 sfc_resource
 sfc              431807   4 sfc_resource,onload,sfc_char,sfc_affinity
```

To remove modules:

```
# rmmod onload
# rmmod sfc_char
```

Repeat the rmmod command for each module.

**CAUTION:** Attempts to unload or uninstall Onload and drivers when onload stacks are still present will result in the following type of warnings:

```
# onload_tool unload
onload_tool: /sbin/modprobe -r onload
FATAL: Module onload is in use.
FATAL: Error running remove command for onload
onload_tool: ERROR: modprobe -r onload failed (0)
onload_tool: /sbin/modprobe -r sfc_char
FATAL: Module sfc_char is in use.
FATAL: Error running remove command for sfc_char
onload_tool: ERROR: modprobe -r sfc_char failed (0)
onload_tool: /sbin/modprobe -r sfc_resource
FATAL: Module sfc_resource is in use.
onload_tool: ERROR: modprobe -r sfc_resource failed (0)
onload_tool: /sbin/modprobe -r sfc_affinity
FATAL: Module sfc_affinity is in use.
FATAL: Error running remove command for sfc_affinity
onload_tool: ERROR: modprobe -r sfc_affinity failed (0)
onload_tool: /sbin/modprobe -r sfc
FATAL: Module sfc is in use.
onload_tool: ERROR: modprobe -r sfc failed (0)"
```

The user should check using onload\_stackdump [-z] to ensure that all onload stacks have been terminated before the uninstall.

## Remove RPM

For some EnterpriseOnload packages, it may also be necessary to remove installed RPM packages:

```
rpm -qa | grep 'enterpriseonload' | xargs rpm -e  
rpm -qa | grep 'onload' | xargs rpm -e  
rpm -qa | grep 'sfc' | xargs rpm -e  
rpm -qa | grep 'sfutils' | xargs rpm -e
```

onload\_uninstallPre-install Notes



**NOTE:** If Onload is to accelerate a 32bit application on a 64bit architecture, the 32bit libc development headers should be installed before building Onload. Refer to Appendix C for install instructions.



**NOTE:** You must remove any existing Solarflare RPM driver packages before installing Onload.



**NOTE:** The Solarflare drivers are currently classified as unsupported in SLES11,12, the certification process is underway. To overcome this (SLES 11) add 'allow\_unsupported\_modules 1' to the /etc/modprobe.d/unsupported-modules file. For SLES 12 add the same to the /etc/modprobe.d/10-unsupported-modules.conf file.

## 5.7 EnterpriseOnload - Build and Install from SRPM

The following steps identify the procedures to build and install EnterpriseOnload. SRPMs can be built by the 'root' or 'non-root' user, but the user must have superuser privileges to install RPMs. Customers should contact their Solarflare customer sales representative for access to the EnterpriseOnload SRPM resources.

### Build the RPM



**NOTE:** Refer to Appendix C for details of build dependencies.

As root:

```
rpmbuild --rebuild enterpriseonload-<version>.src.rpm
```

Or as a non-root user:

It is advised to use \_topdir to ensure that RPMs are built into a directory to which the user has permissions. The directory structure must pre-exist for the rpmbuild command to succeed.

```
mkdir -p /tmp//myrpm/{SOURCES,BUILD,RPMS,SRPMS}  
rpmbuild --define "_topdir /tmp/myrpm" \  
--rebuild enterpriseonload-<version>.src.rpm
```



**NOTE:** On some non-standard kernels the rpmbuild might fail because of build dependencies. In this event retry, adding the --nodeps option to the command line.

Building the source RPM will produce 2 binary RPM files which can be found in the

- /usr/src/\*/RPMS/ directory
- or, when built by a non-root user in \_topdir/RPMS
- or, when \_topdir was defined in the rpmbuild command line in /tmp/myrpm/RPMS/x86\_64/

for example the EnterpriseOnload user-space components:

/usr/src/redhat/RPMS/x86\_64/enterpriseonload-<version>.x86\_64.rpm

and the EnterpriseOnload kernel components:

/usr/src/redhat/RPMS/x86\_64/enterpriseonload-kmod-2.6.18-92.el5-<version>.x86\_64.rpm

## Install the EnterpriseOnload RPM

The EnterpriseOnload RPM and the kernel RPM must be installed for EnterpriseOnload to function correctly.

```
rpm -ivf enterpriseonload-<version>.x86_64.rpm
```

```
rpm -ivf enterpriseonload-kmod-2.6.18-92.el5-<version>.x86_64.rpm
```

**NOTE:** EnterpriseOnload is now installed but the kernel modules are not yet loaded.

**NOTE:** The EnterpriseOnload-kmod filename is specific to the kernel that it is built for.

## Installing the EnterpriseOnload Kernel Module

This will load the EnterpriseOnload kernel driver and other driver dependencies and create any device nodes needed for EnterpriseOnload drivers and utilities. The command should be run as root.

```
/etc/init.d/openonload start
```

Following successful execution this command produces no output, but the 'onload' script will identify that the kernel module is now loaded.

```
onload
```

```
EnterpriseOnload <version>
Copyright 2006-2013 Solarflare Communications, 2002-2005 Level 5 Networks
Built: Oct 15 2013 09:19:23 12:23:12 (release)
Kernel module: <version>
```

**NOTE:** At this point EnterpriseOnload is loaded, but until the network interface has been configured and brought into service EnterpriseOnload will be unable to accelerate traffic.

## 5.8 EnterpriseOnload - Debian Source Packages

From version 4.0, Debian install packages are available for EnterpriseOnload. Packages are named in the following format:

- ```
enterpriseonload_<version>-debiansource.tgz
```
- 1** Untar source package

```
$ tar xf enterpriseonload_<version>-debiansource.tgz
```
  - 2** Extract source

```
$ dpkg-source -x enterpriseonload_<version>-1.dsc
```
  - 3** Build packages

```
$ cd enterpriseonload-<version>
$ debuild -i -uc -us
```
  - 4** Install packages

```
$ sudo dpkg -i ../enterpriseonload-user_<version>-1_amd64.deb
$ sudo dpkg -i ../enterpriseonload-source_<version>-1_all.deb
```
  - 5** Build and install modules

```
$ sudo m-a a-i enterpriseonload
```

## 5.9 OpenOnload DKMS Installation

OpenOnload DKMS packages are available by contacting [support@solarflare.com](mailto:support@solarflare.com).

- 1** DKMS must be installed on the server. DKMS can be downloaded from <http://linux.dell.com/dkms/> or from the OS distribution. To check this run the following command which will return nothing if DKMS is not installed:

```
# dkms --version
dkms: 2.2.0.3
```
- 2** Install the Onload dkms package:

```
# rpm -i openonload-dkms-<version>.noarch.rpm
```
- 3** Ensure drivers and kernel module are loaded:

```
onload_tool reload
```

## 5.10 Build OpenOnload Source RPM

A source RPM can be built from the OpenOnload distribution tar file.

- 1 Download the required tar file from the following location:

<http://www.openonload.org/download.html>

- 2 As root, execute the following command:

```
rpmbuild -ts openonload-<version>.tgz*
x86_64 Wrote: /root/rpmbuild/SRPMS/openonload-<version>.src.rpm
```

The output identifies the location of the source RPM. Use the -ta option to generate a binary RPM.

## 5.11 OpenOnload - Installation

The following procedure demonstrates how to download, untar and install OpenOnload.

### Download and untar OpenOnload

- 1 Download the required tar file from the following location:

<http://www.openonload.org/download.html>

The compressed tar file (.tgz) should be downloaded/copied to a directory on the machine on which it will be installed.

- 2 As root, unpack the tar file using the tar command.

```
tar -zxvf openonload-<version>.tgz
```

This will unpack the tar file and, within the current directory, create a sub-directory called openonload-<version> which contains other sub-directories including the scripts directory from which subsequent install commands can be run.

### Building and Installing OpenOnload



**NOTE:** Refer to Appendix C for details of build dependencies.

The following command will build and install OpenOnload and required drivers in the system directories:

```
./onload_install
```

Successful installation will be indicated with the following output  
“onload\_install: Install complete” – possibly followed by a warning that the sfc (net driver) driver is already installed.



**NOTE:** The onload\_install script does not create RPMs.

## Load Onload Drivers

Following installation it is necessary to load the Onload drivers:

```
onload_tool reload
```

When used with OpenOnload this command will replace any previously loaded network adapter driver with the driver from the OpenOnload distribution.

Check that Solarflare drivers are loaded using the following commands:

```
lsmod | grep sfc  
lsmod | grep onload
```

An alternative to the reload command is to reboot the system to load Onload drivers.

## Confirm Onload Installation

When the Onload installation is complete run the `onload` command to confirm installation of Onload software and kernel module:

```
# onload
```

Will display the Onload product banner and usage:

```
OpenOnload 201405  
Copyright 2006-2012 Solarflare Communications, 2002-2005 Level 5 Networks  
Built: May 20 2014 16:46:33 (release)  
Kernel module: 201405

usage:  
    onload [options] <command> <command-args>

options:  
    --profile=<profile>      -- comma sep list of config profile(s)  
    --force-profiles          -- profile settings override environment  
    --no-app-handler          -- do not use app-specific settings  
    --app=<app-name>          -- identify application to run under onload  
    --version                  -- print version information  
    -v                        -- verbose  
    -h --help                  -- this help message
```

## 5.12 Onload Kernel Modules

To identify Solarflare drivers already installed on the server:

```
find /lib/modules/`uname -r` -type f -name '*.ko' -printf '%f\n' | grep -E 'sfc|onload'
```

| Driver Name      | Description                                                                                                                                                                                                        |
|------------------|--------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| sfc.ko           | A Linux net driver provides the interface between the Linux network stack and the Solarflare network adapter.                                                                                                      |
| sfc_char.ko      | Provides low level access to the Solarflare network adapter virtualized resources. Supports direct access to the network adapter for applications that use the ef_vi user-level interface for maximum performance. |
| sfc_tune.ko      | This is used to prevent the kernel during idle periods from putting the CPUs into a sleep state.<br><br>Removed in openonload-201405.                                                                              |
| sfc_aoe.ko       | Solarflare ApplicationOnload™ Engine driver for the SFA6902F adapter.<br><br><i>Note that this is now distributed separately from Onload, to allow independent update.</i>                                         |
| sfc_affinity.ko  | Used to direct traffic flow managed by a thread to the core the thread is running on, inserts packet filters that override the RSS behaviour.                                                                      |
| sfc_resource.ko  | Manages the virtualization resources of the adapter and shares the resources between other drivers.                                                                                                                |
| onload.ko        | The kernel component of Onload.                                                                                                                                                                                    |
| onload_cplane.ko | The control plane component of Onload. User of Onload-201710 onwards refer to <a href="#">Control Plane Server on page 68</a> .                                                                                    |

To unload any loaded drivers:

```
onload_tool unload
```

To remove the installed files of a previous Onload:

```
onload_uninstall
```

To load the Solarflare net driver (if not already loaded):

```
modprobe sfc
```

Reload drivers following upgrade or changed settings:

```
onload_tool reload
```

## 5.13 Configuring the Network Interfaces

Network interfaces should be configured according to the Solarflare Server Adapter User's Guide.

When the interface(s) have been configured, the dmesg command will display output similar to the following (one entry for each Solarflare interface):

```
sfc 0000:13:00.0: INFO: eth2 Solarflare Communications NIC PCI(1924:803)
sfc 0000:13:00.1: INFO: eth3 Solarflare Communications NIC PCI(1924:803)
```



**NOTE:** IP address configuration should be carried out using normal OS tools e.g. system-config-network (Red Hat) or yast (SUSE).

## 5.14 Installing Netperf

Refer to the [Low Latency Quickstart Guide on page 4](#) for instructions to install Netperf and Solarflare sfnettest applications.

## 5.15 How to run Onload

Once Onload has been installed there are different ways to accelerate applications.

- Pre-fixing the application command line with the Onload command will accelerate the application.  
`# onload <app_name> [app_options]`
- Exporting LD\_PRELOAD to the environment will mean that all applications started in the same environment will be accelerated.  
`# export LD_PRELOAD=libonload.so`

## 5.16 Testing the Onload Installation

The [Low Latency Quickstart Guide on page 4](#) demonstrates testing of Onload with Netperf and the Solarflare sfnettest benchmark tools.

## 5.17 Apply an Onload Patch

Occasionally, the Solarflare Support Group may issue a software 'patch' which is applied to onload to resolve a specific bug or investigate a specific issue. The following procedure describes how a patch should be applied to the **installed OpenOnload software**.

- 1 Copy the patch to a directory on the server where onload is already installed.
- 2 Go to the onload directory and apply the patch e.g.

```
cd openonload-<version>
[openonload-<version>]$ patch -p1 < ~/<path>/<name of patch file>.patch
```

**3** Uninstall the old onload drivers

```
[openonload-<version>]$ onload_uninstall
```

**4** Build and re-install the onload drivers

```
[openonload-<version>]$ ./scripts/onload_install  
[openonload-<version>]$ onload_tool reload
```

The following procedure describes how a patch should be applied to the **installed EnterpriseOnload RPM**. (This example patches EnterpriseOnload version 2.1.0.3).

**1** Copy the patch to the directory on the server where the EnterpriseOnload RPM package exists and carry out the following commands:

```
rpm2cpio enterpriseonload-2.1.0.3-1.src.rpm | cpio -id  
tar -xzf enterpriseonload-2.1.0.3.tgz  
cd enterpriseonload-2.1.0.3  
patch -p1 < $PATCHNAME
```

**2** This can now be installed directory from this directory:

```
./scripts/onload_install
```

**3** Or it can be repackaged as a new source RPM:

```
cd ..  
tar -czf enterpriseonload-2.1.0.3.tgz enterpriseonload-2.1.0.3  
rpmbuild -ts enterpriseonload-2.1.0.3.tgz
```

**4** The rpmbuild procedure will display a ‘Wrote’ line identifying the location of the source RPM e.g

```
Wrote: /root/rpmbuild/SRPMS/enterpriseonload-2.1.0.3-1.el6.src.rpm
```

## Onload Uninstall

Refer to [Migrating Between Onload Versions - Upgrade/Downgrade on page 25](#).

# 6

# Tuning Onload

## 6.1 Introduction

This chapter documents the available tuning options for Onload, and the expected results. The options can be split into the following categories:

- System Tuning
- Standard Latency Tuning.
- Advanced Tuning driven from analysis of the Onload stack using `onload_stackdump`.

Most of the Onload configuration parameters, including tuning parameters, are set by environment variables exported into the accelerated applications environment. Environment variables can be identified throughout this manual as they begin with `EF_`. All environment variables are described in Appendices A and B of this manual. Examples throughout this guide assume the use of the `bash` or `sh` shells; other shells may use different methods to export variables into the applications environment.

- [System Tuning on page 36](#) describes tools and commands which can be used to tune the server and OS.
- [Standard Tuning on page 38](#) describes how to perform standard heuristic tuning, which can help improve the application's performance. There are also benchmark examples running specific tests to demonstrate the improvements Onload can have on an application.
- [Advanced Tuning on page 53](#) introduces advanced tuning options using `onload_stackdump`. There are worked examples to demonstrate how to achieve the application tuning goals.



**NOTE:** Onload tuning and kernel driver tuning are subject to different requirements. This section describes the steps to tune Onload. For details on how to tune the Solarflare kernel driver, refer to the 'Performance Tuning on Linux' section of the [Solarflare Server Adapter User Guide](#).

## 6.2 System Tuning

This section details steps to tune the server and operating system for lowest latency.

### Sysjitter

The Solarflare sysjitter utility measures the extent to which the system introduces jitter and so impacts on the user-level process. Sysjitter runs a thread on each processor core and when the thread is de-scheduled from the core it measures for how long. Sysjitter produces summary statistics for each processor core. The sysjitter utility can be downloaded from [www.openonload.org](http://www.openonload.org)

Sysjitter should be run on a system that is idle. When running on a system with cpusets enabled - run sysjitter as root.

Refer to the sysjitter README file for further information on building and running sysjitter.

The following is an example of the output from sysjitter on a single CPU socket server with 4 CPU cores.

```
./sysjitter --runtime 10 200 | column -t
```

|                 | 0          | 1          | 2          | 3          |
|-----------------|------------|------------|------------|------------|
| core_i:         | 0          | 1          | 2          | 3          |
| threshold(ns):  | 200        | 200        | 200        | 200        |
| cpu_mhz:        | 3215       | 3215       | 3215       | 3215       |
| runtime(ns):    | 9987653973 | 9987652245 | 9987652070 | 9987652027 |
| runtime(s):     | 9.988      | 9.988      | 9.988      | 9.988      |
| int_n:          | 10001      | 10130      | 10012      | 10001      |
| int_n_per_sec:  | 1001.336   | 1014.252   | 1002.438   | 1001.336   |
| int_min(ns):    | 1333       | 1247       | 1299       | 1446       |
| int_median(ns): | 1390       | 1330       | 1329       | 1470       |
| int_mean(ns):   | 1424       | 1452       | 1452       | 1502       |
| int_90(ns):     | 1437       | 1372       | 1357       | 1519       |
| int_99(ns):     | 1619       | 5046       | 2392       | 1688       |
| int_999(ns):    | 5065       | 22977      | 15604      | 3694       |
| int_9999(ns):   | 31260      | 39017      | 184305     | 36419      |
| int_99999(ns):  | 40613      | 45065      | 347097     | 49998      |
| int_max(ns):    | 40613      | 45065      | 347097     | 49998      |
| int_total(ns):  | 14244846   | 14719972   | 14541991   | 15031294   |
| int_total(%):   | 0.143      | 0.147      | 0.146      | 0.150      |

The table below describes the output fields of the sysjitter utility.

| Field           | Description                                                         |
|-----------------|---------------------------------------------------------------------|
| threshold (ns)  | ignore any interrupts shorter than this period                      |
| cpu_mhz         | CPU speed                                                           |
| runtime (ns)    | runtime of sysjitter - nanoseconds                                  |
| runtime (s)     | runtime of sysjitter - seconds                                      |
| int_n           | number of interruptions to the user thread                          |
| int_n_per_sec   | number of interruptions to the user thread per second               |
| int_min (ns)    | minimum time taken away from the user thread due to an interruption |
| int_median (ns) | median time taken away from the user thread due to an interruption  |
| int_mean (ns)   | mean time taken away from the user thread due to an interruption    |
| int_90 (ns)     | 90%percentile value                                                 |
| int_99 (ns)     | 99% percentile value                                                |
| int_999 (ns)    | 99.9% percentile value                                              |
| int_9999 (ns)   | 99.99% percentile value                                             |
| int_99999 (ns)  | 99.999% percentile value                                            |
| int_max (ns)    | max time taken away from the user thread                            |
| int_total (ns)  | total time spent not processing the user thread                     |
| int_total (%)   | int_total (ns) as a percentage of total runtime                     |

## Timer (TSC) Stability

Onload uses the Time Stamp Counter (TSC) CPU registers to measure changes in time with very low overhead. Modern CPUs support an “invariant TSC”, which is synchronized across different CPUs and ticks at a constant rate regardless of the current CPU frequency and power saving mode. Onload relies on this to generate accurate time calculations when running across multiple CPUs. If run on a system which does not have an invariant TSC, Onload may calculate wildly inaccurate time values and this can, in extreme cases, lead to some connections becoming stuck.

Users should consult their server vendor documentation and OS documentation to ensure that servers can meet the invariant TSC requirement.

## CPU Power Saving Mode

Modern processors utilize design features that enable a CPU core to drop into lowering power states when instructed by the operating system that the CPU core is idle. When the OS schedules work on the idle CPU core (or when other CPU cores or devices need to access data currently in the idle CPU core's data cache) the CPU core is signaled to return to the fully-on power state. These changes in CPU core power states create additional network latency and jitter.

Solarflare therefore recommend that customers wishing to achieve the lowest latency and lowest jitter disable the "C1E power state" or "CPU power saving mode" within the machine's BIOS.

Disabling the CPU power saving modes is required if the application is to realize low latency with low jitter.



**NOTE:** To ensure C states are not enabled, overriding the BIOS settings, it is recommended to put the line '`intel_idle.max_cstate=0 idle=poll`' into the kernel command line /boot/grub/grub.conf. The settings will produce consistent results and are particularly useful when benchmarking.

Allowing some cores to enable Turbo modes while others are idle can produce better latency in some servers. For this, use `idle=mwait` and enable C-states in the BIOS.

Alternatively, on later Linux versions, the tuned service can be enabled and used with the network-latency profile.

Users should refer to vendor documentation and experiment with C states for different applications.

*Customers should consult their system vendor and documentation for details concerning the disabling of C1E, C states or CPU power saving states.*

## 6.3 Standard Tuning

This section details standard tuning steps for Onload.

### Spinning (busy-wait)

Conventionally, when an application attempts to read from a socket and no data is available, the application will enter the OS kernel and block. When data becomes available, the network adapter will interrupt the CPU, allowing the kernel to reschedule the application to continue.

Blocking and interrupts are relatively expensive operations, and can adversely affect bandwidth, latency and CPU efficiency.

Onload can be configured to spin on the processor in user mode for up to a specified number of microseconds waiting for data from the network. If the spin period expires the processor will revert to conventional blocking behavior. Non-blocking sockets will always return immediately as these are unaffected by spinning.

Onload uses the EF\_POLL\_USEC environment variable to configure the length of the spin timeout.

```
export EF_POLL_USEC=100000
```

will set the busy-wait period to 100 milliseconds. See [Meta Options on page 254](#) for more details.

## Enabling spinning

To enable spinning in Onload:

Set EF\_POLL\_USEC. This causes Onload to spin on the processor for up to the specified number of microseconds before blocking. This setting is used in TCP and UDP and also in recv(), select(), pselect() and poll(), ppoll() and epoll\_wait(), epoll\_pwait() and onload\_ordered\_epoll\_wait(). Use the following command:

```
export EF_POLL_USEC=100000
```



**NOTE:** If neither of the spinning options EF\_POLL\_USEC and EF\_SPIN\_USEC are set, Onload will resort to default interrupt driven behavior because the EF\_INT\_DRIVEN environment variable is enabled by default.

Setting the EF\_POLL\_USEC variable also sets the following environment variables.

```
EF_SPIN_USEC=EF_POLL_USEC  
EF_SELECT_SPIN=1  
EF_EPOLL_SPIN=1  
EF_POLL_SPIN=1  
EF_PKT_WAIT_SPIN=1  
EF_TCP_SEND_SPIN=1  
EF_UDP_RECV_SPIN=1  
EF_UDP_SEND_SPIN=1  
EF_TCP_RECV_SPIN=1  
EF_BUZZ_USEC=MIN(EF_POLL_USEC, 100)  
EF SOCK LOCK_BUZZ=1  
EF_STACK_LOCK_BUZZ=1
```

Turn off adaptive moderation and set interrupt moderation to a high value (microseconds) to avoid flooding the system with interrupts. Use the following command:

```
/sbin/ethtool -C eth2 rx-usecs 60 adaptive-rx off
```

See [Meta Options on page 254](#) for more details

## When to Use Spinning

The optimal setting is dependent on the nature of the application. If an application is likely to find data soon after blocking, or the system does not have any other major tasks to perform, spinning can improve latency and bandwidth significantly.

In general, an application will benefit from spinning if the number of active threads is less than the number of available CPU cores. However, if the application has more active threads than available CPU cores, spinning can adversely affect application performance because a thread that is spinning (and therefore idle) takes CPU time away from another thread that could be doing work. If in doubt, it is advisable to try an application with a range of settings to discover the optimal value.

## Polling vs. Interrupts

Interrupts are useful because they allow the CPU to do other useful work while simultaneously waiting for asynchronous events (such as the reception of packets from the network). The historical alternative to interrupts was for the CPU to periodically poll for asynchronous events and on single processor systems this could result in greater latency than would be observed with interrupts. Historically it was accepted that interrupts were “good for latency”.

On modern, multicore systems the tradeoffs are different. It is often possible to dedicate an entire CPU core to the processing of a single source of asynchronous events (such as network traffic). The CPU dedicated to processing network traffic can be spinning (aka busy waiting), continuously polling for the arrival of packets. When a packet arrives, the CPU can begin processing it almost immediately.

Contrast the polling model to an interrupt-driven model. Here the CPU is likely in its “idle loop” when an interrupt occurs. The idle loop is interrupted, the interrupt handler executes, typically marking a worker task as runnable. The OS scheduler will then run and switches to the kernel thread that will process the incoming packet. There is typically a subsequent task switch to a user-mode thread where the real work of processing the event (e.g. acting on the packet payload) is performed. Depending on the system, it can take on the order of a microsecond to respond to an interrupt and switch to the appropriate thread context before beginning the real work of processing the event. A dedicated CPU spinning in a polling loop can begin processing the asynchronous event in a matter of nanoseconds.

It follows that spinning only becomes an option if a CPU core can be dedicated to the asynchronous event. If there are more threads awaiting events than CPU cores (i.e. if all CPU cores are oversubscribed to application worker threads), then spinning is not a viable option, (at least, not for all events). One thread will be spinning, polling for the event while another could be doing useful work. Spinning in such a scenario can lead to (dramatically) increased latencies. But if a CPU core can be dedicated to each thread that blocks waiting for network I/O, then spinning is the best method to achieve the lowest possible latency.

## 6.4 Onload Deployment on NUMA Systems

When deployed on NUMA systems, application load throughput and latency performance can be adversely affected unless due consideration is given to the selection of the NUMA node, the allocation of cache memory and the affinitization of drivers, processes and interrupts.

For best performance the accelerated application should always run on the NUMA node nearest to the Solarflare adapter. The correct allocation of memory is particularly important to ensure that packet buffers are allocated on the correct NUMA node to avoid unnecessary increases in QPI traffic and to avoid dropped packets.

### Useful commands

- To identify NUMA nodes, socket memory and CPU core allocation:  
`# numactl -H`
- To identify the NUMA node local to a Solarflare adapter:  
`# cat /sys/class/net/<interface>/device/numa_node`
- To identify memory allocation and use on a particular NUMA node:  
`# cat /sys/devices/system/node/node<N>/numastat`
- To identify NUMA node mapping to cores, use one of the following:  
`# numactl --hardware`  
`# cat /sys/devices/system/node/node<N>/cpulist`

### Driver Loading - NUMA Node

When loading, the Onload module will create a variety of common data structures. To ensure that these are created on the NUMA node nearest to the Solarflare adapter, `onload_tool reload` should be affinitized to a core on the correct NUMA node.

```
# numactl --cpunodebind=1 onload_tool reload
```

When there is more than one Solarflare adapter in the same server, on different NUMA nodes, the user must select one node over the other when loading the driver, but also make sure that interrupt IRQs are affinitized to the correct local CPU node for each adapter.

`onload_tool reload` is single threaded, so running with “`cpunodebind=0,1`”, for example, means the command could run on either node which is not identifiable by the user until after the command has completed.

## Memory Policy

To guarantee that memory is appropriately allocated - and to ensure that memory allocations do not fail, a memory policy that binds to a specific NUMA node should be selected. When no policy is specified the system will generally use a default policy allocating memory on the node on which a process is executing.

## Application Processing

The majority of processing by Onload occurs in the context of the Onloaded application. Various methods can be used to affinitize the Onloaded process; numactl, taskset or cpusets or the CPU affinity can be set programmatically.

## Workqueues

An Onloaded application will create two *shared* workqueues and one *per-stack* workqueue. The implementation of the workqueue differs between Linux kernels - and so does the method used to affinitize workqueues.

On more recent Linux kernels (3.10+) the Onload work queues will be initially affinitized to the node on which they are created. Therefore if the driver load is affinitized and the Onloaded application affinitized to the correct node, Onload stacks will be created on the correct node and there will be no further work required.

Specifying a cpumask via sysfs for a workqueue is NOT recommended as this can break ordering requirements.

On older Linux kernels dedicated workqueue threads are created - and these can be affinitized using taskset or cpusets. Identify the two workqueues shared by all Onload stacks:

```
onload-wqueue  
sfc_vi
```

Identify the per-stack workqueue which has a name in the format onload-wq<stack\_id> (e.g onload-wq:1 for stack 1).

Use the `onload_stackdump` command to identify Onload stacks and the PID of the process that created the stack:

```
# onload_stackdump  
#stack-id stack-name      pids  
0          -              106913
```

Use the Linux `pidof` command to identify the PIDs for Onload workqueues:

```
# pidof onload-wq:0 sfc_vi onload-wqueue  
106930 105409 105431
```

It is recommended that the shared workqueues are affinitized immediately after the driver is loaded and the per-stack queue immediately after stack creation.

## Interrupts

When Onload is being used in an interrupt-driven mode (see [Interrupt Handling - Using Onload on page 48](#)) interrupts should affinitized to the same NUMA node running the Onload application, but not on the same CPU core as the application.

When Onload is spinning (busy-wait) there will be few (if any) interrupts, so it is not a real concern where these are handled.

## Verification

The `onload_stackdump lots` command is used to verify that allocations occur on the required NUMA node:

```
# onload_stackdump lots | grep numa
numa nodes: creation=0 load=0
numa node masks: packet alloc=1 sock alloc=1 interrupt=1
```

The `load` parameter identifies the node where the adapter driver has been loaded. The `creation` parameter identifies the node allocating memory for the Onload stack. The `numa node masks` identify which NUMA nodes allocate memory for packets and for sockets, and the nodes on which interrupts have actually occurred. A mask value of 1 identifies node 0, a value of 2 identifies node 1, a value of 3 identifies both nodes 0 and 1 etc.

For most purposes it is best when `load` and `creation` identify the same node which is also the node local to the Solarflare adapter. To identify the local node use the following:

```
# cat /sys/class/net/<interface>/device/numa_node
```

The `cpu affinity` of individual Onloaded threads can be identified with the following command:

```
# onload_stackdump threads
```

## 6.5 Interrupt Handling - Kernel Driver

### Default Behavior

Using the value identified from the `rss_cpus` option, the Solarflare NET driver will create a number of receive (and transmit) queues (termed an “RSS channel”) for each physical interface. By default the driver creates one RSS channel per CPU core detected in the server up to a maximum of 32.

The `rss_cpus` sfc driver module option can be set in a user created file `<sfc.conf>` in the `/etc/modprobe.d` directory. The driver must be reloaded before the option becomes effective. For example, `rss_cpus` can be set to an integer value:

```
options sfc rss_cpus=4
```

In the above example 4 receive queues are created per Solarflare interface. The default value is `rss_cpus=cores`. Other available options are `rss_cpus=<int>`, `rss_cpus=hyperthreads` and `rss_cpus=packages`.



**NOTE:** If the sfc driver module parameter ‘`rss numa local`’ is enabled, RSS will be restricted to use cores/hyperthreads on the NUMA node local to the Solarflare adapter.

## Affinitizing RSS Channels to CPUs

As described in the previous section, the default behavior of the Solarflare network driver is to create one RSS channel per CPU core. At load time the driver affinizes the interrupt associated with each RSS channel to a separate CPU core so the interrupt load is evenly distributed over the available CPU cores.



**NOTE:** These initial interrupt affinities will be disrupted and changed if the Linux IRQ balancer daemon is running. To stop the IRQ balancer use the following command:

```
# service irqbalance stop
```

In the following example, we have a server with 2 Solarflare dual-port adapters (total of network 4 interfaces), installed in a server with 2 CPU sockets with 8 cores per socket (hyperthreading is disabled).


If we set `rss_cpus=4`, each interface will create 4 RSS channels. The driver takes care to spread the affinized interrupts evenly over the CPU topology i.e. evenly between the two CPU sockets and evenly over shared L2/L3 caches.

The driver also attempts to spread the interrupt load of the multiple network interfaces by using different CPU cores for different interfaces:

**Table 2: Example RSS Channel Mapping**

| Interface | Num of rx queues | Map to cores |
|-----------|------------------|--------------|
| 1         | 4                | 0,1,2,3      |
| 2         | 4                | 4,5,6,7      |
| 3         | 4                | 8,9,10,11    |
| 4         | 4                | 12,13,14,15  |

With 4 receive queues created per interface this results, on this machine, to the first network interface mapping to the four lowest number CPU cores i.e. two cores from each CPU socket as illustrated below. The next network interface uses the next four CPUs until each CPU core is loaded with a single RSS channel – as illustrated in [Figure 3](#) below.

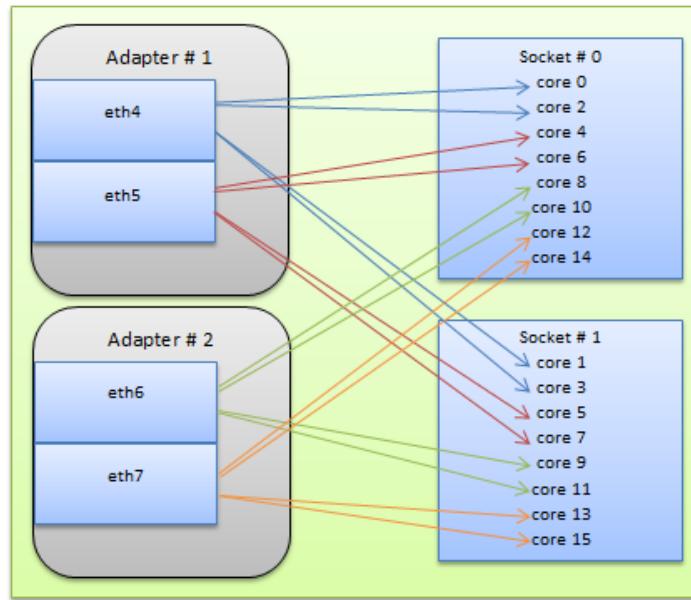

**Figure 3: Mapping RSS Channels to CPU cores.**

To identify the mapping of receive queues to CPU cores, use the following command:

```
# cat /proc/interrupts | grep eth4
106: 19 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 IR-PCI-MSI-edge eth4-0
107: 0 11 0 0 0 0 0 0 0 0 0 0 0 0 0 0 IR-PCI-MSI-edge eth4-1
108: 0 0 10 0 0 0 0 0 0 0 0 0 0 0 0 0 IR-PCI-MSI-edge eth4-2
109: 0 0 0 2 0 0 0 0 0 0 0 0 0 0 0 0 IR-PCI-MSI-edge eth4-3
```

Note that each receive queue has an assigned IRQ. Receive queue eth4-0 is served by IRQ 106, eth4-1 by IRQ 107 etc.

### **sfc affinity config**


The OpenOnload distribution also includes the `sfc affinity config` script which can also be used to affinize RSS channel interrupts. `sfc affinity config` has a number of command line options but a common way of running it is with the `auto` command:

```
# sfc affinity config auto
```

`Auto` instructs `sfc affinity config` to set interrupts affinities to evenly spread the RSS channels over the available CPU cores. Using the above scenario as an example, where `rss_cpus` has been set to 4, the command will affinize the interrupt associated with each receive queue evenly over the CPU topology – in this case the first four CPU cores.

```
sfc affinity config: INFO: eth4: Spreading 4 interrupts evenly over 2 shared caches
sfc affinity config: INFO: eth4: bind rxq 0 (irq 106) to core 1
sfc affinity config: INFO: eth4: bind rxq 1 (irq 107) to core 0
sfc affinity config: INFO: eth4: bind rxq 2 (irq 108) to core 3
```

```
sfcaffinity_config: INFO: eth4: bind rxq 3 (irq 109) to core 2
sfcaffinity_config: INFO: eth4: configure sfc_affinity n_rxqs=4
cpu_to_rxq=1,0,3,2,1,0,3,2,1,0,3,2,1,0,3,2
```

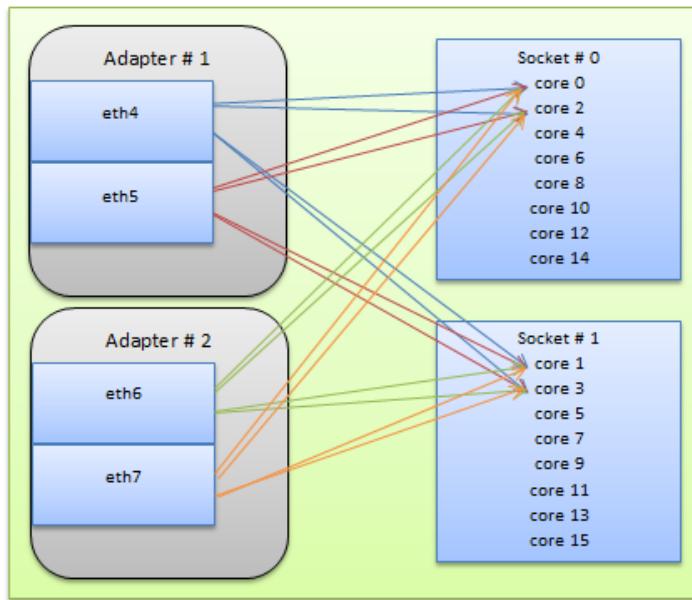

**Figure 4: Mapping with sfcaffinity\_config auto**

In this example, after running the `sfcaffinity_config auto` command, interrupts for the 4 receive queues from the 4 interfaces are now all directed to the same 4 cores 0,1,2,3 as illustrated by Figure 4.



**NOTE:** Running the `sfcaffinity_config auto` command also disables the kernel IRQ balance service to prevent interrupts being redirected by the kernel to other cores.


## Restrict RSS to local NUMA node

The sfc driver module parameter `rss numa local` will restrict RSS to only use CPU cores or hyperthreads (if hyperthreading is enabled) on the NUMA node local to the Solarflare adapter.

`rss numa local` does NOT restrict the number of RSS channels created by the driver – it instead works by restricting the RSS spreading so only the channels on the local NUMA node will receive kernel driver traffic.

In the default case (where `rss cpus=cores`), one RSS channel is created per CPU core. However, the driver adjusts the RSS settings such that only the RSS channels affinitized to the local CPU socket receive traffic. It therefore has no effect on the Onload allocation and use of receive queues and interrupts.

Figure 5 below identifies the receive queue interrupts spread when `rss cpus=4` and `rss numa local=1`. In this machine adapter #1 is attached to the PCIe bus on socket #0 with adapter #2 attached to the PCIe bus on socket #1.

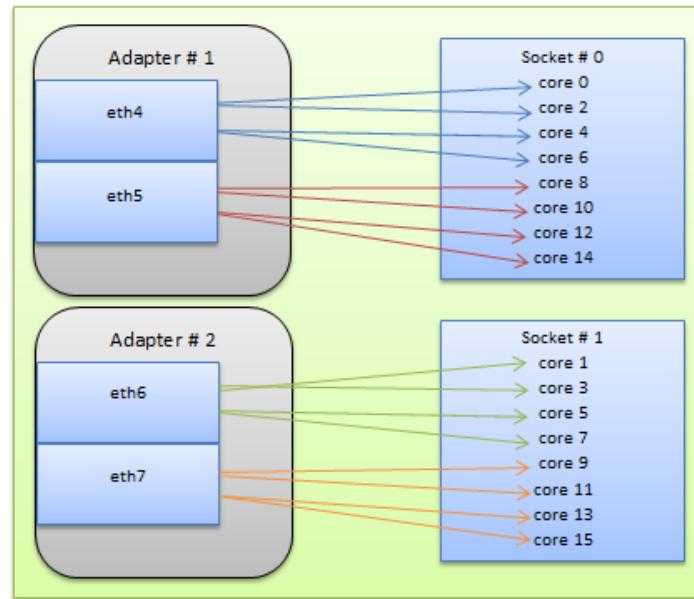

**Figure 5: Mapping with rss numa local**

## Restrict RSS Receive Queues

The ethtool -X command can also be used to restrict the receive queues accessible by RSS. In the following example rss\_cpus=4 and ethtool -x identifies the 4 receive queues per interface:

```
# ethtool -x eth4
RX flow hash indirection table for eth4 with 4 RX ring(s):
  0:  0   1   2   3   0   1   2   3
  8:  0   1   2   3   0   1   2   3
 16:  0   1   2   3   0   1   2   3
 24:  0   1   2   3   0   1   2   3
 32:  0   1   2   3   0   1   2   3
 40:  0   1   2   3   0   1   2   3
 48:  0   1   2   3   0   1   2   3
 56:  0   1   2   3   0   1   2   3
 64:  0   1   2   3   0   1   2   3
 72:  0   1   2   3   0   1   2   3
 80:  0   1   2   3   0   1   2   3
 88:  0   1   2   3   0   1   2   3
 96:  0   1   2   3   0   1   2   3
104:  0   1   2   3   0   1   2   3
112:  0   1   2   3   0   1   2   3
120:  0   1   2   3   0   1   2   3
```

To restrict RSS to spread receive flows evenly over the first 2 receive queues. Use `ethtool -X`:

```
# ethtool -X eth4 equal 2
RX flow hash indirection table for eth4 with 4 RX ring(s):
  0:  0   1   0   1   0   1   0   1
  8:  0   1   0   1   0   1   0   1
 16:  0   1   0   1   0   1   0   1
 24:  0   1   0   1   0   1   0   1
 32:  0   1   0   1   0   1   0   1
 40:  0   1   0   1   0   1   0   1
 48:  0   1   0   1   0   1   0   1
 56:  0   1   0   1   0   1   0   1
 64:  0   1   0   1   0   1   0   1
 72:  0   1   0   1   0   1   0   1
 80:  0   1   0   1   0   1   0   1
 88:  0   1   0   1   0   1   0   1
 96:  0   1   0   1   0   1   0   1
104:  0   1   0   1   0   1   0   1
112:  0   1   0   1   0   1   0   1
120:  0   1   0   1   0   1   0   1
```

## Interrupt Handling - Using Onload

A thread accelerated by Onload will either be interrupt driven or it will be spinning.

When the thread is interrupt driven, a thread which calls into Onload to read from its receive queue and for which there are no received packets to be processed, will ‘sleep’ until an interrupt(s) from the kernel informs it that there is more work to do.

When a thread is spinning, it is busy waiting on its receive queue until packets are received - in which case the packets are retrieved and the thread returns immediately to the receive queue, or until the spin period expires. If the spin period expires the thread will relinquish the CPU core and ‘sleep’ until an interrupt from the kernel informs it that further packets have been received. If the spin period is set greater than the packet inter-arrival rate, the spinning thread can continue to spin and retrieve packets without interrupts occurring. Even when spinning, an application might experience a few interrupts.

As a general rule, when spinning, only a few interrupts will be expected so performance is typically insensitive as to which CPU core processes the interrupts.

However, when Onload is interrupt driven performance can be sensitive to where the interrupts are handled and will typically benefit to be on the same CPU socket as the application thread handling the socket I/O. The method required depends on the setting of the `EF_PACKET_BUFFER_MODE` environment variable:

- If `EF_PACKET_BUFFER_MODE=0` or `2`, an Onload stack will use one or more of the interrupts assigned to the NET driver receive queues. The CPU core handling the interrupts is defined by the RSS mapping of receive queues to CPU cores:
  - If `sfc affinity config` has been used to affinize RSS channel interrupts, the interrupt handling core for the stack can be set using the `EF_IRQ_CORE` environment variable.

It is only possible for interrupts to be handled on the requested core if a NET driver interrupt is assigned to the selected core.

See [Affinizing RSS Channels to CPUs on page 44](#).

- Otherwise, the interrupt handling core for the stack can be set using the EF\_IRQ\_CHANNEL environment variable. Onload interrupts are handled by the same core assigned to the NET driver receive channel.
- If EF\_PACKET\_BUFFER\_MODE=1 or 3, the onload stack creates dedicated interrupts. The interrupt handling core for the stack can be set using the EF\_IRQ\_CORE environment variable.

For more information about these environment variables, see:

- [EF\\_IRQ\\_CHANNEL on page 205](#)
- [EF\\_IRQ\\_CORE on page 206](#)
- [EF\\_PACKET\\_BUFFER\\_MODE on page 214](#).

When Onload is using a NET driver RSS channel for its source of interrupts, it can be useful to dedicate this channel to Onload and prevent the driver from using this channel for RSS traffic. See [Restrict RSS to local NUMA node on page 46](#) and [Restrict RSS Receive Queues on page 47](#) for methods of how to achieve this.

## 6.6 Performance Jitter

On any system reducing or eliminating jitter is key to gaining optimum performance, however the causes of jitter leading to poor performance can be difficult to define and difficult to remedy. The following section identifies some key points that should be considered.

- A first step towards reducing jitter should be to consider the configuration settings specified in the [Low Latency Quickstart Guide on page 4](#) - this includes the disabling of the irqlbalance service, interrupt moderation settings and measures to prevent CPU cores switching to power saving modes.
- Use isolcpus to isolate CPU cores that the application - or at least the critical threads of the application will use and prevent OS housekeeping tasks and other non-critical tasks from running on these cores.
- Set an application thread running on one core and the interrupts for that thread on a separate core - but on the same physical CPU package. Even when spinning, interrupts may still occur, for example, if the application fails to call into the Onload stack for extended periods because it is busy doing other work.
- Ideally each spinning thread will be allocated a separate core so that, in the event that it blocks or is de-scheduled, it will not prevent other important threads from doing work. A common cause of jitter is more than one spinning thread sharing the same CPU core. Jitter spikes may indicate that one thread is being held off the CPU core by another thread.

- When EF\_STACK\_LOCK\_BUZZ=1, threads will spin for the EF\_BUZZ\_USEC period while they wait to acquire the stack lock. Lock buzzing can lead to unfairness between threads competing for a lock, and so result in resource starvation for one. Occurrences of this are counted in the 'stack\_lock\_buzz' counter. EF\_STACK\_LOCK\_BUZZ is enabled by default when EF\_POLL\_USEC (spinning) is enabled.
- If a multi-thread application is doing lots of socket operations, stack lock contention will lead to send/receive performance jitter. In such cases improved performance can be had when each contending thread has its own stack. This can be managed with EF\_STACK\_PER\_THREAD which creates a separate Onload stack for the sockets created by each thread. If separate stacks are not an option then it may be beneficial to reduce the EF\_BUZZ\_USEC period or to disable stack lock buzzing altogether.
- It is always important that threads that need to communicate with each other are running on the same CPU package so that these threads can share a memory cache.
- Jitter may also be introduced when some sockets are accelerated and others are not. Onload will ensure that accelerated sockets are given priority over non-accelerated sockets, although this delay will only be in the region of a few microseconds - not milliseconds, the penalty will always be on the side of the non-accelerated sockets. The environment variables EF\_POLL\_FAST\_USEC and EF\_POLL\_NONBLOCK\_FAST\_USEC can be configured to manage the extent of priority of accelerated sockets over non-accelerated sockets.
- If traffic is sparse, spinning will deliver the same latency benefits, but the user should ensure that the spin timeout period, configured using the EF\_POLL\_USEC variable, is sufficiently long to ensure the thread is still spinning when traffic is received.
- When applications only need to send and receive occasionally it may be beneficial to implement a keepalive - heartbeat mechanism between peers. This has the effect of retaining the process data in the CPU memory cache. Calling send or receive after a delay can result in the call taking measurably longer, due to the cache effects, than if this is called in a tight loop.
- On some servers BIOS settings such as power and utilization monitoring can cause unnecessary jitter by performing monitoring tasks on all CPU cores. The user should check the BIOS and decide if periodic tasks (and the related SMIs) can be disabled.
- The Solarflare sysjitter utility can be used to identify and measure jitter on all cores of an idle system - refer to [Sysjitter on page 36](#) for details.

## Using Onload Tuning Profiles

Environment variables set in the application user-space can be used to configure and control aspects of the accelerated application's performance. These variables can be exported using the Linux export command e.g.

```
export EF_POLL_USEC=100000
```

Onload supports tuning profile script files which are used to group environment variables within a single file to be called from the Onload command line.

The latency profile sets the EF\_POLL\_USEC=100000 setting the busy-wait spin timeout to 100 milliseconds. The profile also disables TCP faststart for new or idle connections where additional TCP ACKs will add latency to the receive path. To use the profile include it on the onload command line, e.g:

```
onload --profile=latency netperf -H onload2-sfc -t TCP_RR
```

Following Onload installation, profiles provided by Solarflare are located in the following directory - this directory will be deleted by the `onload_uninstall` command:

```
/usr/libexec/onload/profiles
```

User-defined environment variables can be written to a user-defined profile script file (having a .opf extension) and stored in any directory on the server. The full path to the file should then be specified on the onload command line e.g.

```
onload --profile=/tmp/myprofile.opf netperf -H onload2-sfc -t TCP_RR
```

As an example the latency profile, provided by the Onload distribution is shown below:

```
# Onload low latency profile.  
# Enable polling / spinning. When the application makes a blocking call  
# such as recv() or poll(), this causes Onload to busy wait for up to  
100ms  
# before blocking.  
onload_set EF_POLL_USEC=100000  
# Disable FASTSTART when connection is new or has been idle for a while.  
# The additional acks it causes add latency on the receive path.  
onload_set EF_TCP_FASTSTART_INIT 0  
onload_set EF_TCP_FASTSTART_IDLE 0
```

For a complete list of environment variables refer to [Parameter Reference on page 193](#).

### The latency-best profile

The latency-best profile targets the lowest possible latency for a given release of Onload. This means that:

- Some features used in the profile might be experimental.
- The combination of features in the profile might not be suitable for all deployments, or all types of traffic.

- The profile is subject to change between releases.

As new low-latency features become available, they will be added to the profile.

Consequently, Solarflare recommends the following:

- Always create a renamed copy of the profile, and use the copy.

This will avoid the profile unexpectedly changing when you update Onload, and potentially breaking your applications.

- Always test and tune your copy of the profile in a non-production environment, before deploying it.

This will avoid issues caused by combinations of settings that are inappropriate for your production systems.



**WARNING:** If you do not follow the above recommendations, and directly use the latency-best profile in a production environment, you might experience issues either now, or when upgrading Onload in the future.

### The nginx\_reverse\_proxy profile

Onload's clustering capability has been extended to provide better support for the NGINX application's master process pattern and hot restart operation by correctly associating Onload stacks and application worker processes. To do so, the following settings are used:

|                             |   |
|-----------------------------|---|
| EF_SCALABLE_FILTERS_ENABLE: | 2 |
| EF_CLUSTER_HOT_RESTART:     | 1 |

See [EF\\_CLUSTER\\_HOT\\_RESTART on page 194](#), and [EF\\_SCALABLE\\_FILTERS\\_ENABLE on page 225](#).

A new `nginx_reverse_proxy` profile has an example set of relevant configurations, including further settings. This profile searches for the NGINX configuration file, and then uses the settings from that file to make the correct Onload settings. Similar techniques can be used to make profiles that target other applications.



**NOTE:** Use of this profile is not compatible with use of the onload extensions stackname API.

## Benchmark Testing

Benchmark procedures using Onload, netperf and sfnt\_pingpong are described in the [Low Latency Quickstart Guide on page 4](#).

## 6.7 Advanced Tuning

Advanced tuning requires closer examination of the application performance. The application should be tuned to achieve the following objectives:

- To have as much processing at user-level as possible.
- To have as few interrupts as possible.
- To eliminate drops.
- To minimize lock contention.

Onload includes a diagnostic application called `onload_stackdump`, which can be used to monitor Onload performance and to set tuning options.

The following sections demonstrate the use of `onload_stackdump` to examine aspects of the system performance and set environment variables to achieve the tuning objectives.

For further examples and use of `onload_stackdump` refer to [onload\\_stackdump on page 299](#).

### Monitoring Using `onload_stackdump`

To use `onload_stackdump`, enter the following command:

```
onload_stackdump [command]
```

To list available commands and view documentation for `onload_stackdump` enter the following commands:

```
onload_stackdump doc  
onload_stackdump -h
```

A specific stack number can also be provided on the `onload_stackdump` command line.

## Worked Examples

### Prefault Packet Buffers

The Onload environment variable `EF_PREFACE_PACKETS` will cause the user process to ‘touch’ the specified number of packet buffers when an Onload stack is created. This means that memory for these packet buffers is pre-allocated and memory-mapped into the user-process address space.

Pre allocation is advised to prevent latency jitter caused by the allocation and memory-mapping overheads.

When deciding how many packets to prefault, the user should look at the `alloc` value when the `onload_stackdump packets` command is run. The `alloc` value is a high water mark identifying the maximum the number of packets being used by the stack at any singular point. Setting `EF_PREFACE_PACKETS` to at least this value is recommended.

```
onload_stackdump packets
```

```
$ onload_stackdump packets
ci_netif_pkt_dump_all: id=0
pkt_sets: pkt_size=2048 set_size=1024 max=32 alloc=2
pkt_set[0]: free=544
pkt_set[1]: free=446 current
pkt_bufs: max=32768 alloc=2048 free=990 async=0
pkt_bufs: rx=1058 rx_ring=992 rx_queued=2 pressure_pool=64
pkt_bufs: tx=0 tx_ring=0 tx_oflow=0
pkt_bufs: in_loopback=0 in_sock=0
994: 0x200 Rx
n_zero_refs=1054 n_freepkts=1 estimated_free_nonb=1053
free_nonb=0 nonb_pkt_pool=ffffffffffff
```



**NOTE:** It is not possible to prefault a number of packets exceeding the current value of EF\_MAX\_PACKETS – and attempts to do this will result in a warning similar to the following:

```
ci_netif_pkt_prefault_reserve: Prefaulted only 63488 of 64000
```

The warning message is harmless, this informs the user that not all the requested packets could be prefaulted (because some have already been allocated to receive rings).

When deciding how many packets to prefault the user should consider that Onload must allocate from the EF\_MAX\_PACKET pool, a number of packet buffers per receive ring per interface. Once these have been allocated, any remainder can be prefaulted.

Users who require to prefault the maximum possible number of available packets can set EF\_PREFAUTL\_PACKETS and EF\_MAX\_PACKETS to the same value and just ignore the warnings from Onload:

```
EF_PREFAUTL_PACKETS=64000 EF_MAX_PACKETS=64000 onload <myapplication>...
```

Refer to [Appendix A on page 193](#) for details of the EF\_PREFAUTL\_PACKETS variable.



**CAUTION:** Prefaulting packet buffers for one stack will reduce the number of available buffers available for others. Users should consider that over allocation to one stack might mean spare (redundant) packet buffer capacity that could be better allocated elsewhere.

## Processing at User-Level

Many applications can achieve better performance when most processing occurs at user-level rather than kernel-level. To identify how an application is performing, enter the following command:

```
onload_stackdump lots | grep polls
```

| Counter                 | Description                                                        |
|-------------------------|--------------------------------------------------------------------|
| k_polls                 | Number of times the socket event queue was polled from the kernel. |
| u_polls                 | Number of times the socket event queue was polled from user space. |
| periodic_polls          | Number of times a periodic timer has polled for events.            |
| interrupt_polls         | Number of times an interrupt polled for network events.            |
| deferred_polls          | Number of times poll has been deferred to the stack lock holder.   |
| timeout_interrupt_polls | Number of times timeout interrupts polled for network events.      |

```
$ onload_stackdump lots | grep poll
k_polls: 673
u_polls: 41
```

The output identifies many more k\_polls than u\_polls indicating that the stack is operating mainly at kernel-level and may not be achieving optimal performance.

### Solution

Terminate the application and set the EF\_POLL\_USEC parameter to 100000. Re-start the application and re-run onload\_stackdump:

```
export EF_POLL_USEC=100000
onload_stackdump lots | grep polls
$ onload_stackdump lots | grep polls
k_polls: 673
u_polls: 1289
```

The output identifies that the number of u\_polls is far greater than the number of k\_polls indicating that the stack is now operating mainly at user-level.

## As Few Interrupts as Possible

A tuned application will reach a balance between the number/rate of interrupts processed and the amount of real work that gets done e.g. process multiple packets per interrupt rather than one. Even spinning applications can benefit from the occasional interrupt, e.g. when a spinning thread has been de-scheduled from a CPU, an interrupt will prod the thread back to action when further work has to be done.

```
# onload_stackdump lots | grep ^interrupt
```

| Counter                  | Description                                                                                                                                                                   |
|--------------------------|-------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| Interrupts               | Total number of interrupts received for the stack.                                                                                                                            |
| Interrupt polls          | Number of times the stack is polled - invoked by interrupt.                                                                                                                   |
| Interrupt evs            | Number of events processed when invoked by an interrupt.                                                                                                                      |
| Interrupt wakes          | Number of times the application is woken by interrupt.                                                                                                                        |
| Interrupt primes         | Number of times interrupts are re-enabled (after spinning or polling the stack).                                                                                              |
| Interrupt no events      | Number of stack polls for which there was no event to recover.                                                                                                                |
| Interrupt lock contends  | The application polled the stack and has the lock before an interrupt fired.                                                                                                  |
| Interrupt budget limited | Number of times, when handling a poll in an interrupt, the poll was stopped when the NAPI budget was reached. Any remaining events are then processed on the stack workqueue. |

### Solution

If an application is observed taking lots of interrupts it may be beneficial to increase the spin time with the EF\_POLL\_USEC variable or setting a high interrupt moderation value for the net driver using ethtool.

The number of interrupts on the system can also be identified from /proc/interrupts.

## Eliminating Drops

The performance of networks is impacted by any packet loss. This is especially pronounced for reliable data transfer protocols that are built on top of unicast or multicast UDP sockets.

First check to see if packets have been dropped by the network adapter before reaching the Onload stack. Use ethtool to collect stats directly from the network adapter:

```
# ethtool -S enps0f0 | grep drop
```

| Counter                       | Description                                                                                                                                                                                          |
|-------------------------------|------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| rx_noskb_drops                | Number of packets dropped when there are no further socket buffers to use.                                                                                                                           |
| port_rx_nodesc_drops          | Number of packets dropped when there are no further descriptors in the rx ring buffer to receive them.                                                                                               |
| port_rx_dp_di_dropped_packets | Number of packets dropped because filters indicate the packets should be dropped - this can happen when packets don't match any filter or the matched filter indicates the packet should be dropped. |

```
# ethtool -S enps0f0 | grep drop
    rx_noskb_drops: 0
    port_rx_nodesc_drops: 0
    port_rx_dp_di_dropped_packets: 681618610
```

### Solution

If packet loss is observed at the network level due to a lack of receive buffering try increasing the size of the receive descriptor queue size via EF\_RXQ\_SIZE. If packet drops are observed at the socket level consult the application documentation - it may also be worth experimenting with socket buffer sizes (see EF\_UDP\_RCVBUF). Setting the EF\_EVS\_PER\_POLL variable to a higher value may also improve efficiency - refer to Appendix A for a description of this variable.

## Minimizing Lock Contention

Lock contention can greatly affect performance. When threads share a stack, a thread holding the stack lock will prevent another thread from doing useful work. Applications with fewer threads may be able to create a stack per thread (see `EF_STACK_PER_THREAD` and [Stacks API on page 264](#)).

Use `onload_stackdump` to identify instances of lock contention:

```
# onload_stackdump lots | egrep "(lock_)|(sleep)"
```

| Counter                                         | Description                                                                                                                   |
|-------------------------------------------------|-------------------------------------------------------------------------------------------------------------------------------|
| <code>periodic_lock_contentends</code>          | Number of times periodic timer could not get the stack lock.                                                                  |
| <code>interrupt_lock_contentends</code>         | Number of times the interrupt handler could not get the stack lock because it is already held by user level or other context. |
| <code>timeout_interrupt_lock_contentends</code> | Number of times timeout interrupts could not lock the stack.                                                                  |
| <code>sock_sleeps</code>                        | Number of times a thread has blocked on a single socket.                                                                      |
| <code>sock_sleep_primes</code>                  | Number of times select/poll/epoll enabled interrupts.                                                                         |
| <code>unlock_slow</code>                        | Number of times the slow path was taken to unlock the stack lock.                                                             |
| <code>unlock_slow_pkt_waiter</code>             | Number of times packet memory shortage provoked the unlock slow path.                                                         |
| <code>unlock_slow_socket_list</code>            | Number of times the deferred socket list provoked the unlock slow path.                                                       |
| <code>unlock_slow_need_prime</code>             | Number of times interrupt priming provoked the unlock slow path.                                                              |
| <code>unlock_slow_wake</code>                   | Number of times the unlock slow path was taken to wake threads.                                                               |
| <code>unlock_slow_swf_update</code>             | Number of times the unlock slow path was taken to update sw filters.                                                          |
| <code>unlock_slow_close</code>                  | Number of times the unlock slow path was taken to close sockets/pipes.                                                        |
| <code>unlock_slow_syscall</code>                | Number of times a syscall was needed on the unlock slow path.                                                                 |

| Counter                        | Description                                                       |
|--------------------------------|-------------------------------------------------------------------|
| lock_wakes                     | Number of times a thread is woken when blocked on the stack lock. |
| stack_lock_buzz                | Number of times a thread has spun waiting for the stack lock.     |
| sock_lock_sleeps               | Number of times a thread has slept waiting for a sock lock.       |
| sock_lock_buzz                 | Number of times a thread has spun waiting for a sock lock.        |
| tcp_send_ni_lock_contentends   | Number of times TCP sendmsg() contended the stack lock            |
| udp_send_ni_lock_contentends   | Number of times UDP sendmsg() contended the stack lock            |
| getsockopt_ni_lock_contentends | Number of times getsockopt() contended the stack lock.            |
| setsockopt_ni_lock_contentends | Number of times setsockopt() contended the stack lock.            |
| lock_dropped_icmps             | Number of dropped ICMP messages not processed due to contention.  |

### Solution

Performance will be improved when stack contention is kept to a minimum. When threads share a stack it is preferable for a thread to spin rather than sleep when waiting for a stack lock. The EF\_BUZZ\_USEC value can be increased to reduce ‘sleeps’. Where possible use stacks per process.

### Stack Contention - Deferred Work

When multiple threads share an Onload stack, the ability for one thread to defer sending tasks to another thread that is currently holding the stack lock, can mitigate the effects of lock contention. When sending data, contention occurs when one thread calls `send()`, while another thread holds the stack lock. The task of sending the data can be deferred to the lock holder - freeing the deferring thread to continue with other work. However a `send()` which also processes a lot of deferred work will take longer to execute - preventing other threads from getting the stack lock.

A thread which calls `send()` when the stack `EF_DEFER_WORK_LIMIT` has been reached cannot defer further work to the lock holder, but is forced to block and wait for the stack lock. The `defer_work_limited` counter identifies the number of these occurrences.

`onload_stackedump` per-socket counters will indicate the level of deferred work on each socket within a stack e.g.

```
TCP 2:10 lcl=172.16.20.123:4112 rmt=172.16.20.88:4112 ESTABLISHED
  snd: limited rwnd=17 cwnd=129 nagle=0 more=0 app=103905
  tx: defer=48799 nomac=0 warm=0 warm_aborted=0
```

onload\_stackdump per-stack counters also indicate the level of lock contention:

- `deferred_work` - the number packets sent using the deferred mechanism.
- `defer_work_limited` - the number of times a sending thread is prevented from deferring to the stack lock holder because the `EF_DEFER_WORK_LIMIT` has been reached.
- `deferred_polls` - a thread is prevented from polling the stack when another thread has the stack lock. The poll is deferred to the lock holder. The lock holder will place any ready received data on the correct socket queues and wake other threads if there is work to be done.

### Solutions

To reduce the level of stack lock contention, the following actions are recommended:

- For affected stacks, reduce the number of threads performing network I/O.
- Applications with fewer threads can use a stack for each thread - see `EF_STACK_PER_THREAD`.
- Bind critical sockets to selected stacks - see [Stacks API on page 264](#).
- For TCP connections, use `onload_move_fd()` to place sockets accepted from a listening socket into multiple stacks.

For more information see [Minimizing Lock Contention on page 58](#).

# 7

# Onload Functionality

This chapter provides detailed information about specific aspects of Solarflare Onload operation and functionality.

## 7.1 Onload Transparency

Onload provides significantly improved performance without the need to rewrite or recompile the user application, whilst retaining complete interoperability with the standard TCP and UDP protocols.

In the regular kernel TCP/IP architecture an application is dynamically linked to the libc library. This OS library provides support for the standard BSD sockets API via a set of ‘wrapper’ functions with real processing occurring at the kernel-level. Onload also supports the standard BSD sockets API. However, in contrast to the kernel TCP/IP, Onload moves protocol processing out of the kernel-space and into the user-level Onload library itself.

As a networking application invokes the standard socket API function calls e.g. `socket()`, `read()`, `write()` etc, these are intercepted by the Onload library making use of the LD\_PRELOAD mechanism on Linux. From each function call, Onload will examine the file descriptor identifying those sockets using a Solarflare interface - which are processed by the Onload stack, whilst those not using a Solarflare interface are transparently passed to the kernel stack.

## 7.2 Onload Stacks

An Onload ‘stack’ is an instance of a TCP/IP stack. The stack includes transmit and receive buffers, open connections and the associated port numbers and stack options. Each stack has associated with it one or more Virtual NICs (typically one per physical port that stack is using).

In normal usage, each accelerated process will have its own Onload stack shared by all connections created by the process. It is also possible for multiple processes to share a single Onload stack instance (refer to [Stack Sharing on page 78](#)), and for a single application to have more than one Onload stack. Refer to [Onload Extensions API on page 258](#).



**NOTE:** An Onload stack can only exist in a single network namespace and cannot be shared by different network namespaces.

## 7.3 Virtual Network Interface (VNIC)

The Solarflare network adapter supports 1024 transmit queues, 1024 receive queues, 1024 event queues and 1024 timer resources per network port. A VNIC (virtual network interface) consists of one unique instance of each of these resources which allows the VNIC client i.e. the Onload stack, an isolated and safe mechanism of sending and receiving network traffic. Received packets are steered to the correct VNIC by means of IP/MAC filter tables on the network adapter and/or Receive Side Scaling (RSS). An Onload stack allocates one VNIC per Solarflare network port so it has a dedicated send and receive channel from user mode.

Following a reset of the Solarflare network adapter driver, all virtual interface resources including Onload stacks and sockets will be re-instated. The reset operation will be transparent to the application, but traffic will be lost during the reset.

## 7.4 Functional Overview

When establishing its first socket, an application is allocated an Onload stack which allocates the required VNICS.

When a packet arrives, IP filtering in the adapter identifies the socket and the data is written to the next available receive buffer in the corresponding Onload stack. The adapter then writes an event to an “event queue” managed by Onload. If the application is regularly making socket calls, Onload is regularly polling this event queue, and then processing events directly rather than interrupts are the normal means by which an application is able to rendezvous with its data.

User-level processing significantly reduces kernel/user-level context switching and interrupts are only required when the application blocks - since when the application is making socket calls, Onload is busy processing the event queue picking up new network events.

## 7.5 Onload with Mixed Network Adapters

A server may be equipped with Solarflare network interfaces and non-Solarflare network interfaces. When an application is accelerated, Onload reads the Linux kernel routing tables to identify which network interface is required to make a connection. If a non-Solarflare interface is required to reach a destination Onload will pass the connection to the kernel TCP/IP stack. No additional configuration is required to achieve this as Onload does this automatically.

## 7.6 Maximum Number of Network Interfaces

A maximum of 32 network interfaces can be registered with the Onload driver.

By default, Onload supports up to 8 network interfaces per stack. This limit can be increased to a maximum 16 interfaces per stack by altering the `CI_CFG_MAX_INTERFACES` value in the `src/include/ci/internal/transport_config_opt.h` header file within the source code. Following changes to this value it is necessary to rebuild and reinstall Onload.

## 7.7 Whitelist and Blacklist Interfaces

Supported from Onload 201502, the user is able to select which Solarflare interfaces are to be used by Onload.

The `intf_white_list` Onload module option is a space-separated list of Solarflare network adapter interfaces that Onload will use for network I/O.

- Interfaces identified in the whitelist will always be accelerated by Onload.
- Interfaces NOT identified in the whitelist will not be accelerated by Onload.
- An empty whitelist means that ALL Solarflare interfaces will be accelerated.

The `intf_black_list` Onload module option is a space-separated list of Solarflare network adapter interfaces that Onload will not use for network I/O.

When an interface appears in both lists, blacklist takes priority. Renaming of interfaces after Onload has started will not be reflected in the access lists and changes to lists will only affect Onload stacks created after such changes - not currently running stacks.

Onload module options can be specified in a user created file in the `/etc/modprobe.d` directory:

```
options onload intf_white_list=eth4
options onload intf_black_list="eth5 eth6"
```

**Use double quotes and space separator when specifying multiple interfaces.**

These options are applied globally and cannot be applied to individual stacks.

## Onload 201710 Changes

The Onload-201710 release departs from the previous implementation of global whitelist/blacklist approach, changing to a per-stack view which allows users to specify interfaces that can be used by the Onload stack or to prevent interfaces being used by the stack.

The per-stack environment variables `EF_INTERFACE_BLACKLIST` and `EF_INTERFACE_WHITELIST` are space-separated lists of interfaces. Solarflare interfaces can also be identified by a higher-order interface e.g. VLAN, MACVLAN, team or bond. When the Onload stack is created interface names will be resolved to identify the underlying Solarflare adapter interface.

All interfaces identified in the whitelist will be accelerated by Onload, however blacklist takes precedence such that an interface appearing in both lists will not be accelerated by Onload.

## 7.8 Onloaded PIDs

To identify processes accelerated by Onload use the `onload_fuser` command:

```
# onload_fuser -v  
9886 ping
```

Only processes that have created an Onload stack are present. Processes which are loaded under Onload, but have not created any sockets are not present. The `onload_stackedump` command can also list accelerated processes - see [List Onloaded Processes on page 300](#) for details.

## 7.9 Onload and File Descriptors, Stacks and Sockets

For an Onloaded process it is possible to identify the file descriptors, Onload stacks and sockets being accelerated by Onload. Use the `/proc/<PID>/fd` file - supplying the PID of the accelerated process e.g.

```
# ls -l /proc/9886/fd  
total 0  
lrwx----- 1 root root 64 May 14 14:09 0 -> /dev/pts/0  
lrwx----- 1 root root 64 May 14 14:09 1 -> /dev/pts/0  
lrwx----- 1 root root 64 May 14 14:09 2 -> /dev/pts/0  
lrwx----- 1 root root 64 May 14 14:09 3 -> onload:[tcp:6:3]  
lrwx----- 1 root root 64 May 14 14:09 4 -> /dev/pts/0  
lrwx----- 1 root root 64 May 14 14:09 5 -> /dev/onload  
lrwx----- 1 root root 64 May 14 14:09 6 -> onload:[udp:6:2]
```

Accelerated file descriptors are listed as symbolic links to `/dev/onload`. Accelerated sockets are described in [protocol:stack:socket] format.

## 7.10 System calls intercepted by Onload

System calls intercepted by the Onload library are listed in the following file:

[onload]/src/include/onload/declare\_syscalls.h.tpl

## 7.11 Linux Sysctls

The Linux directory `/proc/sys/net/ipv4` contains default settings which tune different parts of the IPv4 networking stack. In many cases Onload takes its default settings from the values in this directory. In some cases the default can be

overridden, for a specified processes or socket, using socket options or with Onload environment variables. The following tables identify the default Linux values and how Onload tuning parameters can override the Linux settings.

|              |                                                                                                                                                    |
|--------------|----------------------------------------------------------------------------------------------------------------------------------------------------|
| Kernel Value | <code>tcp_slow_start_after_idle</code>                                                                                                             |
| Description  | controls congestion window validation as per RFC2861.                                                                                              |
| Onload value | “off” by default in Onload, as it's not usually useful in modern switched networks                                                                 |
| Comments     | <pre>#define CI_CFG_CONGESTION_WINDOW_VALIDATION in transport_config_opt.h.</pre> <p>recompile after changing.</p>                                 |
| Kernel Value | <code>tcp_congestion_control</code>                                                                                                                |
| Description  | determines what congestion control algorithm is used by TCP. Valid settings include <code>reno</code> , <code>bic</code> and <code>cubic</code>    |
| Onload value | no direct equivalent - see the section on TCP Congestion Control                                                                                   |
| Comments     | see <code>EF_CONG_AVOID_SCALE_BACK</code>                                                                                                          |
| Kernel Value | <code>tcp_adv_win_scale</code>                                                                                                                     |
| Description  | defines how quickly the TCP window will advance                                                                                                    |
| Onload value | no direct equivalent - see the section on TCP Congestion Control                                                                                   |
| Comments     | see <code>EF_TCP_ADV_WIN_SCALE_MAX</code>                                                                                                          |
| Kernel Value | <code>tcp_rmem</code>                                                                                                                              |
| Description  | the default size of sockets' receive buffers (in bytes)                                                                                            |
| Onload value | defaults to the currently active Linux settings, but is ignored on TCP accepted sockets. Refer to <code>EF_TCP_RCVBUF_ESTABLISHED_DEFAULT</code> . |
| Comments     | <p>can be overridden with the <code>SO_RCVBUF</code> socket option.</p> <p>can be set with <code>EF_TCP_RCVBUF</code></p>                          |

|              |                                                                                                   |
|--------------|---------------------------------------------------------------------------------------------------|
| Kernel Value | <code>tcp_wmem</code>                                                                             |
| Description  | the default size of sockets' send buffers (in bytes)                                              |
| Onload value | defaults to the currently active Linux settings                                                   |
| Comments     | <code>EF_TCP_SNDBUF</code> overrides <code>SO_SNDBUF</code> which overrides <code>tcp_wmem</code> |
| Kernel Value | <code>tcp_dsack</code>                                                                            |
| Description  | allows TCP to send duplicate SACKS                                                                |
| Onload value | uses the currently active Linux settings                                                          |
| Comments     |                                                                                                   |
| Kernel Value | <code>tcp_fack</code>                                                                             |
| Description  | enables forward acknowledgment algorithm                                                          |
| Onload value | enabled by default - Onload uses the currently active Linux setting                               |
| Comments     |                                                                                                   |
| Kernel Value | <code>tcp_sack</code>                                                                             |
| Description  | enable TCP selective acknowledgments, as per RFC2018                                              |
| Onload value | enabled by default - Onload uses the currently active Linux setting                               |
| Comments     | clear bit 2 of <code>EF_TCP_SYN_OPTS</code> to disable                                            |
| Kernel Value | <code>tcp_max_syn_backlog</code>                                                                  |
| Description  | the maximum size of a listening socket's backlog                                                  |
| Onload value | set with <code>EF_TCP_BACKLOG_MAX</code>                                                          |
| Comments     |                                                                                                   |
| Kernel Value | <code>tcp_synack_retries</code>                                                                   |
| Description  | the maximum number of retries of SYN-ACKs                                                         |
| Onload value | set with <code>EF_RETRANSMIT_THRESHOLD_SYNACK</code>                                              |
| Comments     | Default value 5                                                                                   |

Refer to the [Parameter Reference on page 193](#) for details of environment variables.

## 7.12 Changing Onload Control Plane Table Sizes

Onload supports the following runtime configurable options which determine the size of control plane tables:

| Option                | Description                                                                                                                                                | Default |
|-----------------------|------------------------------------------------------------------------------------------------------------------------------------------------------------|---------|
| max_layer2_interfaces | Sets the maximum number of network interfaces, including physical interfaces, VLANs and bonds, supported in Onload's control plane.<br><br>Table: mib_llap | 50      |
| max_local_addrs       | Sets the maximum number of local network addresses supported in Onload's control plane.<br><br>Table: mib_ipif                                             | 256     |
| max_neighs            | Sets the maximum number of rows in the Onload ARP/neighbour table. The value is rounded up to a power of two.<br><br>Table: mib_mac                        | 1024    |
| max_routes            | Sets the maximum number of entries in the Onload route table.<br><br>Table: mib_fwd                                                                        | 256     |

The table above identifies the default values for the Onload control plane tables. The default values are normally sufficient for the majority of applications and creating larger tables may impact application performance. If non-default values are needed, the user should create a file in the /etc/modprobe.d directory. The file must have the.conf extension and Onload options can be added to the file, a single option per line, in the following format:

```
options onload_cplane max_neighs=512
options onload_cplane max_routes=256
```

**NOTE:** Following changes Onload should be restarted using the reload command:  
**onload\_tool reload**



## 7.13 Namespaces

Onload includes support for all Linux namespace types. Network namespace support has been primarily implemented for use with Onload in a Docker container, but Onload will support all Linux namespace types in host and container environments. Onload will create a control\_plane instance per namespace in which an Onload stack is created.

An Onload stack can exist in only one network namespace. The stack cannot be moved between network namespaces and cannot be shared by multiple network namespaces.



**NOTE:** Onload stacks cannot be shared by different network namespaces.

The following are not supported:

- multiple interfaces with the same IP address
- multiple interfaces with the same MAC address.

## 7.14 Control Plane Server

Starting from the onload-201710 release, Onload will deploy a user-space control plane daemon.

A single `onload_cp_server` process will be created per network namespace in which there is an active `onload_stack`.

The `onload_cp_server` process is spawned when the first Onload stack is created in a namespace, and stack creation will wait until the process becomes ready - this may result in a noticeable delay. Onload will also spawn a control plane server for the default (main) network namespace at load time, thus avoiding the delay for the majority of use-cases.

The `onload_cp_server` will exit after a “grace period” when the last stack in the namespace has been destroyed. A new stack, created in the same namespace, before the grace period expires, can use the existing `onload_cp_server` avoiding the stack creation delay. The grace period, in seconds, can be managed - see options below.

For latest options details use the following command:

```
# modinfo onload
```

| Option                      | Description                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                  |
|-----------------------------|--------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| cplane_init_timeout (int)   | <p>Time in seconds to wait for the control plane to initialize when creating a stack.</p> <p>This initialization requires that the user-level control plane process be spawned if one is not already running for the current network namespace.</p> <p>If this parameter is zero, stack-creation will fail immediately if the control plane is not ready.</p> <p>If it is negative, stack-creation will block indefinitely in wait for the control plane.</p>                                                |
| cplane_spawn_server (bool)  | <p>If true, control plane server processes are spawned on-demand.</p> <p>Typically this occurs when a stack is created in a network namespace in which there are no other stacks.</p>                                                                                                                                                                                                                                                                                                                        |
| cplane_server_path          | <p>Sets the path to the <code>onload_cp_server</code> binary. Defaults to <code>/sbin/onload_cp_server</code> if empty.</p>                                                                                                                                                                                                                                                                                                                                                                                  |
| cplane_server_params        | <p>Set additional parameters for the <code>onload_cp_server</code> server when it is spawned on-demand.</p>                                                                                                                                                                                                                                                                                                                                                                                                  |
| cplane_server_grace_timeout | <p>Time in seconds to wait before killing the control plane server after the last user has gone - (i.e. the last Onload stack in this namespace have been destroyed). It is used with:</p> <ul style="list-style-type: none"> <li>• <code>cplane_spawn_server = Y</code> only.</li> <li>• <code>cplane_route_request_limit</code>. Queue depth limit for route resolution requests. (int).</li> <li>• <code>cplane_route_request_timeout_ms</code>. Time out value for route resolution requests.</li> </ul> |

The compiler architecture of the `onload_cp_server` must match that of the host kernel.

See also the Management Information Base in [Appendix K on page 343](#).

## 7.15 ScaleOut Onload

ScaleOut Onload is a new Onload license for the Solarflare XtremeScale SFN8000 and X2 series adapters.

ScaleOut Onload supports TCP kernel bypass to deliver greater efficiency in packet handling with an emphasis on lossless TCP, efficient packet batch processing and packet throughput for TCP applications. Virtual Interfaces (VI) created on ScaleOut Onload adapters will be created in a store-and-forward mode as opposed to the standard Onload cut-through mode.

UDP applications can also be run over these adapters, but will not be accelerated by Onload. UDP filters will not be inserted on ScaleOut Onload adapters and all UDP sockets are handed over to the kernel.



**NOTE:** The ScaleOut Onload adapter will not employ PIO and PIO buffers cannot be allocated or attached to ScaleOut Onload VIs.

### License

The ScaleOut Onload license can be installed on any SFN8000 or X2 series base adapter which does not already have an Onload license.

When both Onload license and ScaleOut Onload license exist on the same adapter, the Onload license will be used, and the ScaleOut Onload license will be ignored.

## 7.16 SO\_BINDTODEVICE

In response to the `setsockopt()` function call with `SO_BINDTODEVICE`, sockets identifying non-Solarflare interfaces will be handled by the kernel and all sockets identifying Solarflare interfaces will be handled by Onload. All sends from a socket are sent via the bound interface. Only traffic received over the bound interface will be delivered to the socket.

## 7.17 Multiplexed I/O

Linux supports three common methods for handling multiplexed I/O operation; `poll()`, `select()` and the `epoll` set of functions.

The general behavior of the `poll()`, `select()` and `epoll_wait()` functions with OpenOnload is as follows:

- If there are operations ready on any file descriptors, `poll()`, `select()` and `epoll_wait()` will return immediately. Refer to the Poll, Select and Epoll subsections for specific behavior details.
- If there are no file descriptors ready and spinning is not enabled, calls to `poll()`, `select()` and `epoll_wait()` will enter the kernel and block.
- In the cases of `poll()` and `select()`, when the set contains file descriptors that are not accelerated sockets, there is a slight latency overhead as Onload must make a system call to determine the readiness of these sockets. There is no such cost when using `epoll_wait()` and a system call is only needed when non-Onload descriptors become ready.

To ensure that non-accelerated (kernel) file descriptors are checked when there are no events ready on accelerated (onload) descriptors, disable the following options:

`EF_SELECT_FAST` and `EF_POLL_FAST` - setting both to zero.

`EF_POLL_FAST_USEC` and `EF_SELECT_FAST_USEC` - setting both to zero.

- If there are no file descriptors ready and spinning is enabled, OpenOnload will spin to ensure that accelerated sockets are polled a specified number of times before unaccelerated sockets are examined. This reduces the overhead incurred when OpenOnload has to call into the kernel and reduces latency on accelerated sockets.

The following subsections discuss the use of these I/O functions and OpenOnload environment variables that can be used to manipulate behavior of the I/O operation.

## Poll, ppoll

The `poll()`, `ppoll()` file descriptor set can consist of both accelerated and non-accelerated file descriptors. The environment variable `EF_UL_POLL` enables/disables acceleration of the `poll()`, `ppoll()` function calls. Onload supports the following options for the `EF_UL_POLL` variable:

| Value | Behaviour                                                                                                                                                                                                  |
|-------|------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| 0     | Disable acceleration at user-level. Calls to <code>poll()</code> , <code>ppoll()</code> are handled by the kernel.<br><br>Spinning cannot be enabled.                                                      |
| 1     | Enable acceleration at user-level. Calls to <code>poll()</code> , <code>ppoll()</code> are processed at user level.<br><br>Spinning can be enabled and interrupts are avoided until an application blocks. |

Additional environment variables can be employed to control the `poll()`, `ppoll()` functions and to give priority to accelerated sockets over non-accelerated sockets and other file descriptors. Refer to `EF_POLL_FAST`, `EF_POLL_FAST_USEC` and `EF_POLL_SPIN` in [Parameter Reference on page 193](#).

## Select, pselect

The `select()`, `pselect()` file descriptor set can consist of both accelerated and non-accelerated file descriptors. The environment variable `EF_UL_SELECT` enables/disables acceleration of the `select()`, `pselect()` function calls. Onload supports the following options for the `EF_UL_SELECT` variable:

| Value | Epoll Behaviour                                                                                                                                                                                                |
|-------|----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| 0     | Disable acceleration at user-level. Calls to <code>select()</code> , <code>pselect()</code> are handled by the kernel.<br><br>Spinning cannot be enabled.                                                      |
| 1     | Enable acceleration at user-level. Calls to <code>select()</code> , <code>pselect()</code> are processed at user-level.<br><br>Spinning can be enabled and interrupts are avoided until an application blocks. |

Additional environment variables can be employed to control the `select()`, `pselect()` functions and to give priority to accelerated sockets over non-accelerated sockets and other file descriptors. Refer to `EF_SELECT_FAST` and `EF_SELECT_SPIN` in [Parameter Reference on page 193](#).

## Epoll

The epoll set of functions, `epoll_create()`, `epoll_ctl()`, `epoll_wait()`, `epoll_pwait()`, are accelerated in the same way as poll and select. The environment variable `EF_UL_EPOLL` enables/disables epoll acceleration. Refer to the release change log for enhancements and changes to epoll behavior.

Using Onload an epoll set can consist of both Onload file descriptors and kernel file descriptors. Onload supports the following options for the `EF_UL_EPOLL` environment variable:

| Value | Epoll Behaviour                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                               |
|-------|-----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| 0     | <p>Accelerated epoll is disabled and <code>epoll_ctl()</code>, <code>epoll_wait()</code> and <code>epoll_pwait()</code> function calls are processed in the kernel. Other functions calls such as <code>send()</code> and <code>recv()</code> are still accelerated.</p> <p>Interrupt avoidance does not function and spinning cannot be enabled.</p> <p>If a socket is handed over to the kernel stack after it has been added to an epoll set, it will be dropped from the epoll set.</p> <p><code>onload_ordered_epoll_wait()</code> is not supported.</p>                                 |
| 1     | <p>Function calls to <code>epoll_ctl()</code>, <code>epoll_wait()</code>, <code>epoll_pwait()</code> are processed at user level.</p> <p>Delivers best latency except when the number of accelerated file descriptors in the epoll set is very large. This option also gives the best acceleration of <code>epoll_ctl()</code> calls.</p> <p>Spinning can be enabled and interrupts are avoided until an application blocks.</p> <p>CPU overhead and latency increase with the number of file descriptors in the epoll set.</p> <p><code>onload_ordered_epoll_wait()</code> is supported.</p> |

| Value | Epoll Behaviour                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                   |
|-------|-----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| 2     | <p>Calls to <code>epoll_ctl()</code>, <code>epoll_wait()</code>, <code>epoll_pwait()</code> are processed in the kernel.</p> <p>Delivers best performance for large numbers of accelerated file descriptors.</p> <p>Spinning can be enabled and interrupts are avoided until an application blocks.</p> <p>CPU overhead and latency are independent of the number of file descriptors in the epoll set.</p> <p><code>onload_ordered_epoll_wait()</code> is not supported.</p>                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                     |
| 3     | <p>Function calls to <code>epoll_ctl()</code>, <code>epoll_wait()</code>, <code>epoll_pwait()</code> are processed at user level.</p> <p>Delivers best acceleration latency for <code>epoll_ctl()</code> calls and scales well when the number of accelerated file descriptors in the epoll set is very large - and all sockets are in the same stack. The cost of the <code>epoll_wait()</code> is independent of the number of accelerated file descriptors in the set and depends only on the number of descriptors that become ready.</p> <p>The benefits will be less if sockets exist in different Onload stacks:</p> <ul style="list-style-type: none"> <li>From Onload 201805 onwards, each socket can be in up to four epoll sets at a time, provided that each epoll set is in a different process</li> <li>Otherwise, each socket can be in at most one epoll set at a time.</li> </ul> <p>In such cases the recommendation is to use <code>EF_UL_EPOLL=2</code>.</p> <p><code>EF_UL_EPOLL=3</code> does not allow monitoring the readiness of the epoll file descriptors from another epoll/poll/select.</p> <p><code>EF_UL_EPOLL=3</code> cannot support epoll sets which exist across <code>fork()</code>.</p> <p>Spinning can be enabled and interrupts are avoided until an application blocks.</p> <p><code>onload_ordered_epoll_wait()</code> is supported.</p> |

The relative performance of epoll options 1 and 2 depends on the details of application behavior as well as the number of accelerated file descriptors in the epoll set. Behavior may also differ between earlier and later kernels and between Linux realtime and non-realtime kernels. Generally the OS will allocate short time slices to a user-level CPU intensive application which may result in performance (latency spikes). A kernel-level CPU intensive process is less likely to be de-scheduled resulting in better performance. Solarflare recommend the user evaluate options 1 and 2 for applications that manage many file descriptors, or try option 3 (onload-201502 and later) when using very large sets and all sockets are in the same stack.

Additional environment variables can be employed to control the `epoll_ctl()`, `epoll_wait()` and `epoll_pwait()` functions and to give priority to accelerated sockets over non-accelerated sockets and other file descriptors. Refer to `EF_EPOLL_CTL_FAST`, `EF_EPOLL_SPIN` and `EF_EPOLL_MT_SAFE` in [Parameter Reference on page 193](#).

Refer to [epoll - Known Issues on page 162](#).


## 7.18 Wire Order Delivery

When a TCP or UDP application is working with multiple network sockets simultaneously it is difficult to ensure data is delivered to the application in the strict order it was received from the wire across these sockets.

The `onload_ordered_epoll_wait()` API is an Onload alternative implementation of `epoll_wait()` providing additional data allowing a receiving application to recover in-order timestamped data from multiple sockets. To maintain wire order delivery, only a specific number of bytes, as identified by the `onload_ordered_epoll_event`, should be recovered from a ready socket.

- Ordering is done on a per-stack basis - for TCP and UDP sockets. Sockets must be in the same onload stack.
- Only data received from an Onload stack with a hardware timestamp will be ordered.
- The environment variable `EF_RX_TIMESTAMPING` must be enabled:  
`EF_RX_TIMESTAMPING=1`
- File descriptors where timestamping information is not available may be included in the epoll set, but received data will be returned from these unordered.
- The application must use the epoll API and the `onload_ordered_epoll_wait()` function.
- The application must set the per-process environment variable `EF_UL_EPOLL=1` or `EF_UL_EPOLL=3`.
- `EPOLLET` and `ONESHOT` flags should NOT be used.
- See [onload\\_ordered\\_epoll\\_wait on page 272](#) for further details.

To prevent packet coalescing in the receive queue, resulting in multiple packets received with the same hardware timestamp, the `EF_TCP_RCVBUF_STRICT` variable should be disabled (default setting). [Figure 6](#) demonstrates the Wire Order Delivery feature.

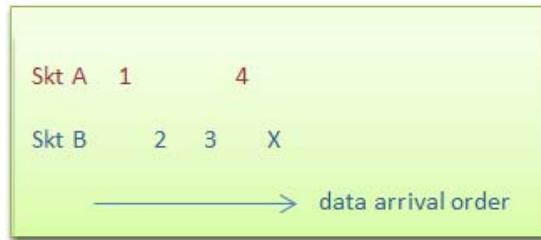

**Figure 6: Wire Order Delivery**

`onload_ordered_epoll_wait()` returning at point X would allow the following data to be recovered:

- Socket A: timestamp of packet 1, bytes in packet 1.
- Socket B: timestamp of packet 2, bytes in packets 2 and 3.
- `onload_ordered_epoll_wait()` returning again would recover timestamp of packet 4 and bytes in packet 4.

The Wire Order Delivery feature is only available on Solarflare Flareon or XtremeScale™ adapters having a PTP/HW timestamping license. When receiving across multiple adapters, Solarflare sftptd (PTP) can ensure that adapters are closely synchronized with each other and, if required, with an external PTP clock source.

## Wire Order Delivery - Example API:

The Onload distribution includes example client/server applications to demonstrate the wire order feature:

`wire_order_server` - uses `onload_ordered_epoll_wait` to receive ordered data over a set of sockets. Received data is echoed back to the client on a single reply socket.

`wire_order_client` - Sends sequenced data across the socket set, reads the reply data from the server and ensures data is received in sequence.

Source code for the wire order API is available in:

`openonload-<version>/src/tests/onload/wire_order`

Although not compiled as part of the Onload install process, to build the example API do the following:

Ensure mmaketool is in the current path (can be found in the `openonload-<version>/scripts` directory):

```
# export PATH=$PATH:/openonload-<version>/scripts
# cd /openonload-<version>/build/gnu_x86_64/tests/onload/wire_order
# USEONLOADEXT=1 make
```

### To run the server:

```
# EF_RX_TIMESTAMPING=3 onload ./wire_order_server
```

### To run the client:

```
# onload --profile=latency ./wire_order_client <ip server>
```

By default the client will send data over 100 TCP sockets controlled with the `-s` option. UDP can be selected using the `-U` option.



**NOTE:** To prevent sends being re-ordered between streams, the latency profile should be used on the client side. The environment variable `EF_RX_TIMESTAMPING` must be set on the server side.

## 7.19 Stack Sharing

By default each process using Onload has its own 'stack'. Refer to [Onload Stacks](#) for definition. Several processes can be made to share a single stack, using the EF\_NAME environment variable. Processes with the same value for EF\_NAME in their environment will share a stack.

Stack sharing is one supported method to enable multiple processes using Onload to be accelerated when receiving the same multicast stream or to allow one application to receive a multicast stream generated locally by a second application. Other methods to achieve this are Multicast Replication and Hardware Multicast Loopback.

Stacks may also be shared by multiple processes in order to preserve and control resources within the system. Stack sharing can be employed by processes handling TCP as well as UDP sockets.



**NOTE:** Onload stacks cannot be shared by different network namespaces.

Stack sharing should only be requested if there is a trust relationship between the processes. If two processes share a stack then they are not completely isolated: a bug in one process may impact the other, or one process can gain access to the other's privileged information (i.e. breach security). Once the EF\_NAME variable is set, any process on the local host can set the same value and gain access to the stack.

**By default Onload stacks can only be shared with processes having the same UID.** The EF\_SHARE\_WITH environment variable provides additional security while allowing a different UID to share a stack. Refer to [Parameter Reference on page 193](#) for a description of the EF\_NAME and EF\_SHARE\_WITH variables.

**Processes with different UIDs, sharing an Onload stack should not use huge pages.** Onload will issue a warning at startup and prevent the allocation of huge pages if EF\_SHARE\_WITH identifies a UID of another process or is set to -1. If a process P1 creates an Onload stack, but is not using huge pages and another process P2 attempts to share the Onload stack by setting EF\_NAME, the stack options set by P1 will apply, allocation of huge pages in P2 will be prevented.

An alternative method of implementing stack sharing is to use the Onload Extensions API and the `onload_set_stackname()` function which, through its scope parameter, can limit stack access to the processes created by a particular user. Refer to [Onload Extensions API on page 258](#) for details.

## 7.20 Application Clustering

An application cluster is the set of Onload TCP or UDP stack sockets bound to the same port. This feature dramatically improves the scaling of some applications across multiple CPUs (especially those establishing many sockets from a TCP listening socket).

Onload from version 201405 automatically creates a cluster using the SO\_REUSEPORT socket option. TCP or UDP processes running on RHEL 6.5 (and later) setting this option can bind multiple sockets to the same TCP or UDP port.



**NOTE:** Some older Linux kernel/distributions do not have kernel support for SO\_REUSEPORT (introduced in the Linux 3.9 kernel). Onload contains experimental support for SO\_REUSEPORT on older kernel versions but this has yet to be fully tested and verified by Solarflare. Users are free to try the Onload application clustering feature on these kernels and report their findings via email to [support@solarflare.com](mailto:support@solarflare.com).

For TCP, clustering allows the established connections resulting from a listening socket to be spread over a number of Onload stacks. Each thread/process creates its own listening socket (using SO\_REUSEPORT) on the same port, with each listening socket residing in its own Onload stack. Handling of incoming new TCP connections are spread via the adapter (using RSS) over the application cluster and therefore over each of the listening sockets resulting in each Onload stack and therefore each thread/process, handling a subset of the total traffic as illustrated in [Figure 7](#) below.

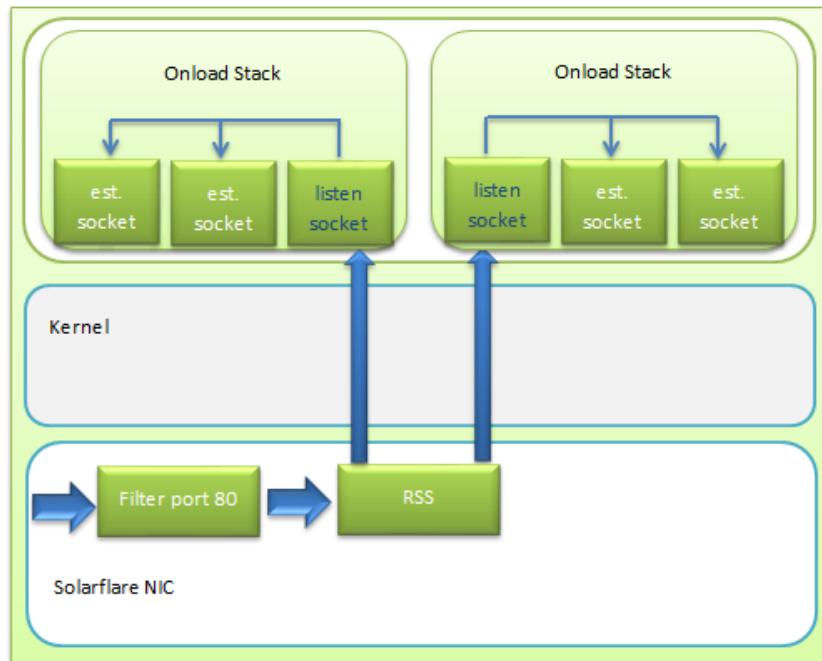


Figure 7: Application Clustering - TCP

For UDP, clustering allows UDP unicast traffic to be spread over multiple applications with each application receiving a subset of the total traffic load.

Existing applications that do not use SO\_REUSEPORT can use the application clustering feature without the need for re-compilation by using the Onload EF\_TCP\_FORCE\_REUSEPORT or EF\_UDP\_FORCE\_REUSEPORT environment variables identifying the list of ports to which SO\_REUSEPORT will be applied.

The size or number of socket members of a cluster in Onload is controlled with EF\_CLUSTER\_SIZE. To create a cluster the application sets the cluster name with EF\_CLUSTER\_NAME. A cluster of EF\_CLUSTER\_SIZE is then created.



**NOTE:** The number of socket members must equal the EF\_CLUSTER\_SIZE value otherwise a portion of the received traffic will be lost.

The spread of received traffic between cluster sockets employs Receive Side Scaling (RSS). For TCP the RSS hash is a function of the src\_ip:src\_port,dst\_ip:dst\_port. For UDP the RSS hash is a function of the src\_ip and dst\_ip only.

The reception of traffic within a cluster is dependent on port numbers only. If two sockets bind to the same port, but different IP addresses, a portion of traffic destined for one socket can be received (but dropped by Onload) on the other socket. For correct behavior, all cluster members should bind to the same IP address. This limitation has been removed in the Onload-201509 release so that it is possible to create multiple listening sockets bound to the same port but to different addresses.

Restarting an application that includes cluster socket members can fail when orphan stacks are still present. Use EF\_CLUSTER\_RESTART to force termination of orphaned stacks allowing the creation of the new cluster.

Refer to [Limitations on page 153](#) for details of Application Clustering limitations.

## 7.21 Bonding, Link aggregation and Failover

Bonding (aka teaming) allows for improved reliability and increased bandwidth by combining physical ports from one or more Solarflare adapters into a bond. A bond has a single IP address, single MAC address and functions as a single port or single adapter to provide redundancy.

Onload monitors the OS configuration of the standard kernel bonding module and accelerates traffic over bonds that are detected as suitable (see limitations). As a result no special configuration is required to accelerate traffic over bonded interfaces.

e.g. To configure an 802.3ad bond of two SFC interfaces (eth2 and eth3):

```
modprobe bonding miimon=100 mode=4 xmit_hash_policy=layer3+4  
ifconfig bond0 up
```

Interfaces must be down before adding to the bond.

```
echo +eth2 > /sys/class/net/bond0/bonding/slaves
echo +eth3 > /sys/class/net/bond0/bonding/slaves
ifconfig bond0 192.168.1.1/24
```

The file /var/log/messages should then contain a line similar to:

```
[onload] Accelerating bond0 using Onload
```

Traffic over this interface will then be accelerated by Onload.

## Polling the Bonding Configuration.

In versions prior to 201710, Onload will monitor the underlying bonding configuration by polling the state exposed by the kernel in /proc and /sys. The frequency of polling is configured through the following `onload_module` parameters which take a value in jiffies:

```
options onload oo_bond_poll_base=50
options onload oo_bond_poll_peak=100
```

Onload, from 201710, will monitor the underlying bonding configuration and state using netlink where this is supported by the OS or revert to the previous method when netlink is not supported. Polling parameters are now set through the `cplane_server_params` option via the `onload_module` parameters:

```
options cplane_server --bond_base_period=800
options cplane_server --bond_peak_period=1600
```

The `cplane_server` parameters are in milliseconds.

Refer to the Limitations section, [Bonding, Link aggregation on page 159](#) for further information.

## 7.22 Teaming

In addition to traditional Linux bonding, Onload also supports link aggregation using the Linux teaming driver that is introduced in RHEL 7, SLES 12, and other recent distributions. There are various methods to configure teaming. The example below demonstrates the use of the NetworkManager CLI which creates the `ifcfg` files in the `/etc/sysconfig/network-scripts` directory. Using `nmcli`, teams persist across server reboots.

**1** Create the team:

```
# nmcli connection add type team ifname teamA
Connection 'team-teamA' (b7c39a10-84ac-4840-85f2-66adb5e71183) successfully added.
```

**2** List the created team:

```
# nmcli con show
NAME      UUID              TYPE      DEVICE
eno2      4efeb125-d489-4a06-9d8a-407bf03fcc77 802-3-ethernet --
eno1      f270807d-9904-452e-bbd2-0d6b48840c80 802-3-ethernet eno1
enp1s0f1  16192f4d-7a97-4154-924b-02ca905c8cd7 802-3-ethernet --
```

```

team-teamA b7c39a10-84ac-4840-85f2-66adb5e71183 team      teamA
virbr0     ceb1a683-7db9-4721-8ca9-38a577ff5d77 bridge    virbr0
enp1s0f0   cbc92b25-9855-451c-8c6b-186b6d5db9f6 802-3-ethernet --
    
```

- 3** View default settings for the newly created team:

```

# cat /etc/sysconfig/network-scripts/ifcfg-team-teamA
DEVICE=teamA
DEVICETYPE=Team
BOOTPROTO=dhcp
DEFROUTE=yes
PEERDNS=yes
PEERROUTES=yes
IPV4_FAILURE_FATAL=no
IPV6INIT=yes
IPV6_AUTOCONF=yes
IPV6_DEFROUTE=yes
IPV6_PEERDNS=yes
IPV6_PEERROUTES=yes
IPV6_FAILURE_FATAL=no
NAME=team-teamA
UUID=b7c39a10-84ac-4840-85f2-66adb5e71183
ONBOOT=yes
    
```

- 4** Add primary interface to the team:

```

# nmcli con add type team-slave con-name teamA-port1 ifname enp1s0f0 master teamA
Connection 'teamA-port1' (015f09d7-3f2a-4578-aaea-7ff89a2769f7) successfully added.
    
```

- 5** Add a second interface to the team:

```

# nmcli con add type team-slave con-name teamA-port2 ifname enp1s0f1 master teamA
Connection 'teamA-port2' (92dfe561-860a-4906-842d-b7ebdf263dbe) successfully added.
    
```

- 6** Bring up the team ports:

```

# nmcli connection up teamA-port1
Connection successfully activated (D-Bus active path: /org/freedesktop/
NetworkManager/ActiveConnection/6)
    
```

Repeat command for other team ports.

- 7** Assign team IP addresses via ifcfg files or command line as required.



**NOTE:** Teams created with the teamd daemon are non-persistent. Teams created with nmcli are persistent across server reboots.

To disable Onload acceleration of teaming, please contact [support@solarflare.com](mailto:support@solarflare.com).

## 7.23 VLANS

The division of a physical network into multiple broadcast domains or VLANs offers improved scalability, security and network management.

Onload will accelerate traffic over suitable VLAN interfaces by default with no additional configuration required.

e.g. to add an interface for VLAN 5 over an SFC interface (eth2)

```
modprobe onload
modprobe 8021q
vconfig add eth2 5
ifconfig eth2.5 192.168.1.1/24
```

Traffic over this interface will then be transparently accelerated by Onload.

Refer to the Limitations section, [VLANs on page 159](#) for further information.

## 7.24 MACVLAN

The MACVLAN driver is supported from onload-201710 in container configurations and in standard host configurations.

- MACVLAN sub-interfaces will be accelerated by Onload when these are created over a Solarflare interface.
- Nested MACVLAN (MACVLAN on top of MACVLAN on top of base adapter) interfaces are also accelerated by Onload.
- MACVLAN sub-interfaces that are not in the main network namespace will be accelerated only if the base adapter is present in the current or main namespace.

If there are more than one PCI physical interfaces (PF) or virtual interfaces (VF) configured, the adapter firmware-variant must be one of the following:

- the ultra-low-latency firmware variant.
- when using the full-feature firmware variant, the `insecure-filters=1` sfboot option must be set.

Restrictions do not apply when there is only a single PF and no VFs configured. Check the adapter configuration with the sfboot utility.

## 7.25 Accelerated pipe()

Onload supports the acceleration of pipes, providing an accelerated IPC mechanism through which two processes on the same host can communicate using shared memory at user-level. Accelerated pipes do not invoke system calls. Accelerated pipes therefore, reduce the overheads for read/write operations and offer improved latency over the kernel implementation.

To create a user-level pipe, and before the `pipe()` or `pipe2()` function is called, a process must be accelerated by Onload and must have created an Onload stack. By default, an accelerated process that has not created an Onload stack is granted only a non-accelerated pipe. See `EF_PIPE` for other options.

The accelerated pipe is created from the pool of available packet buffers.

The following function calls, related to pipes, will be accelerated by Onload and will not enter the kernel unless they block:

- `pipe()`

- `read()`
- `write()`
- `readv()`
- `writev()`
- `send()`
- `recv()`
- `recvmsg()`
- `sendmsg()`
- `poll()`
- `select()`
- `epoll_ctl()`
- `epoll_wait()`

As with TCP/UDP sockets, the Onload tuning options such as `EF_POLL_USEC` and `EF_SPIN_USEC` will also influence performance of the user-level pipe.

Refer also to `EF_PIPE`, `EF_PIPE_RECV_SPIN`, `EF_PIPE_SEND_SPIN` in [Parameter Reference on page 193](#).



**NOTE:** Only anonymous pipes created with the `pipe()` or `pipe2()` function calls will be accelerated.

## 7.26 Zero-Copy API

The Onload Extensions API includes support for zero-copy of TCP transmit packets and UDP receive packets. Refer to [Zero-Copy API on page 273](#) for detailed descriptions and example source code of the API.

## 7.27 Debug and Logging

Onload supports various debug and logging options. Logging and debug information will be displayed on an attached console or will be sent to the syslog. To force all debug to the syslog set the Onload environment variable `EF_LOG_VIA_IOCTL=1`.

For more information about debug/logging environment variables refer to [Parameter Reference on page 193](#).

To enable debug and logging using the options below, Onload must be installed with debug enabled e.g:

```
# onload_install --debug
```

If Onload is already installed, uninstall, then re-install with the `--debug` option as shown above.

Log Options:

- EF\_UNIX\_LOG - A bitmask of the types of diagnostic messages to be logged.
- EF\_LOG - A comma separated list options which can be logged, enabled, disabled.
- EF\_LOG\_FILE - When EF\_LOG\_VIA\_IOCTL is unset, the user is able to redirect Onload output to a specified directory and file using the EF\_LOG\_FILE option. Timestamps can also be added to the logfile when EF\_LOG\_TIMESTAMPS is also enabled.  
`EF_LOG_FILE=<path/file>`  
Note that kernel logging is still directed to the syslog.
- TP\_LOG (bitmask) - useful for stack debugging. See Onload source code /src/include/ci/internal/ip\_log.h for bit values.
- Control plane module option:
  - `cplane_debug_bits=[bitmask]` - useful for kernel logging and events involving the control plane. See `src/include/cplane/debug.h` for bit values.
- Onload module options:
  - `ci_tp_log=[bitmask]` - useful for kernel logging and events involving an onload stack. See Onload source code /src/include/ci/internal/ip\_log.h for details.
  - `oo_debug_bits=[bitmask]` - useful for kernel logging and events not involving an onload stack or the control plane. See `src/include/onload/debug.h` for bit values.

# 8

# Timestamps

## 8.1 Introduction

This section identifies options for using software and hardware timestamps.

## 8.2 Software Timestamps

Setting the SO\_TIMESTAMP or SO\_TIMESTAMPNS options using `setsockopt()` enables software timestamping on TCP or UDP sockets. Functions such as `cmsg()`, `recvmsg()` and `recvmsg()` can then recover timestamps for packets received at the socket.

Onload implements a microsecond resolution software timestamping mechanism, which avoids the need for a per-packet system call thereby reducing the normal timestamp overheads.

The Solarflare adapter will always deliver received packets to the receive ring buffer in the order that these arrive from the network. Onload will append a software timestamp to the packet meta data when it retrieves a packet from the ring buffer - before the packet is transferred to a waiting socket buffer.

### Software Timestamp - TCP Stream

From a TCP stream the timestamp returned is that for the first available byte. Due to retransmissions and any reordering, timestamps may not be monotonically increasing as these are delivered to the application.

### Software Timestamp - Interrupt Driven

When a packet is received it is delivered from the adapter to the receive queue and a notification event placed on the event queue. When the Onload application is interrupt driven, a received packet is timestamped when Onload receives the corresponding event.

### Software Timestamp - Spinning

If the Onload application is spinning, a received packet is timestamped when the stack is polled at which point the packet is placed on the socket receive queue. Spinning will generally produce more accurate timestamps so long as the receiving application is able to keep pace with the packet arrival rate.

## Software Timestamp - Format

The format of timestamps is defined by `struct_timeval`.

Applications preferring timestamps with nanosecond resolution can use `SO_TIMESTAMPNS` in place of the normal (microsecond resolution) `SO_TIMESTAMP` value.

## 8.3 Hardware Timestamps

Setting the `SO_TIMESTAMPING` option using `setsockopt()` enables hardware timestamping on TCP or UDP sockets. Timestamps are generated by the adapter for each received packet. Functions such as `cmsg()`, `recvmsg()` and `recvmsg()` can then recover hardware timestamps for packets recovered from a socket.

### Hardware Timestamp - Requirements

- Supported only on Solarflare Flareon SFN7000, XtremeScale™ SFN8000 and XtremeScale™ X2 series adapters.
- An AppFlex license for hardware timestamps must be installed on the adapter:
  - The PTP/timestamping license is installed during manufacture on the SFN7322F adapter and on the PLUS variants of SFN8000 and X2 series adapters.
  - An appropriate license can be installed on other SFN7000, SFN8000 and X2 series adapters by the user.

### Hardware Timestamp - Format

The format of timestamps is defined by `struct_timespec`. Interested users should read the kernel `SO_TIMESTAMPING` documentation for more details of how to use this socket API – kernel documentation can be found, for example, at:

<https://www.kernel.org/doc/Documentation/networking/timestamping/>

### Hardware Timestamp - Received Packets

- The Onload stack for the socket must have the environment variable `EF_RX_TIMESTAMPING` set - see [Appendix A on page 193](#) for details.
- Received packets are timestamped when they enter the MAC on the SFN7000, SFN8000 or X2 series adapter.

## Hardware Timestamp - Transmit Packets

Onload from 201405 supports hardware timestamping of UDP and TCP packets transmitted over a Solarflare interface.

Because the Linux kernel does not support hardware timestamps for TCP, Onload provides an extension to the standard SO\_TIMESTAMPING API with the ONLOAD\_SOF\_TIMESTAMPING\_STREAM socket option to support this. To recover hardware timestamps for transmitted TCP packets, set the following socket options:

```
SOF_TIMESTAMPING_TX_HARDWARE | SOF_TIMESTAMPING_SYS_HARDWARE |  
ONLOAD_SOF_TIMESTAMPING_STREAM
```

To recover hardware timestamps for transmitted UDP packets, set the following socket options:

```
SOF_TIMESTAMPING_TX_HARDWARE | SOF_TIMESTAMPING_SYS_HARDWARE
```

Other socket flag combinations, not listed above, will be silently ignored.

### To receive hardware transmit timestamps:

- Only supported on Solarflare Flareon™ SFN7000, XtremeScale™ SFN8000 and XtremeScale™ X2 series adapters.
- The adapter must have a PTP/HW timestamping license.
- The adapter must have a SolarCapture Pro license or Performance Monitoring license.
- Set EF\_TX\_TIMESTAMPING on stacks where transmit timestamping is required.
- Set EF\_TIMESTAMPING\_REPORTING to control the type of timestamp returned to the application. This is optional, by default Onload will report translated timestamps if the adapter clock has been fully synchronized to correct time by the Solarflare PTP daemon. In all cases Onload will always report raw timestamps. Refer to [Parameter Reference on page 193](#) for full details of the EF\_TIMESTAMPING\_REPORTING variable.
- Solarflare PTP (sfptpd) must be running if timestamps are to be synchronized with an external PTP master clock.

For details of the SO\_TIMESTAMPING API refer to the Linux documentation:

<https://www.kernel.org/doc/Documentation/networking/timestamping/>

## Zeroed Timestamps

If timestamps returned from the adapter are zeroed, refer to [Setting Adapter Clock Time on page 90](#).

## Synchronizing Time

Solarflare Enhanced PTP can be enabled to synchronize the time across all clocks within a server or between multiple servers.



The sfptpd daemon supports clock synchronization with external NTP and PTP time sources and includes an optional PTP/NTP fallback configurations.

For details of Solarflare PTP refer to the Solarflare Enhanced PTP User Guide (SF-109110-CD) available from <https://support.solarflare.com/>.

## 8.4 Timestamping - Example Applications

The onload distribution includes example applications to demonstrate receive and transmit hardware timestamping. With Onload installed, source code is located in the following subdirectory:

```
/openonload-<version>/src/tests/onload/hwtimestamping
```

### Build Examples

Following the onload\_install, the example applications: rx\_timestamping and tx\_timestamping are located in the following directory:

```
/openonload-<version>/build/gnu_x86_64/tests/onload/hwtimestamping
```

Using earlier versions of Onload the user should run the **make** command in the following directory to build example timestamping applications:

```
/openonload-<version>/src/tests/onload/hwtimestamping
```

### Run Examples

The following conditions are required to run the example applications:

- The server must have a Solarflare SFN7000, SFN8000 or X2 series adapter.
- The adapter must have a PTP/HW timestamping license.
- The connection from which packets are to be timestamped must be routed over the timestamping adapter.
- To receive TX timestamps, the adapter must have a SolarCapture Pro license or Performance Monitoring license
- The Onload environment variable EF\_RX\_TIMESTAMPING or EF\_TX\_TIMESTAMPING must be enabled in the Onload environment.



**NOTE:** User should also read the specific requirements from the RX/TX timestamping sections above.

### Setting Adapter Clock Time

It may be necessary to ‘seed’ the adapter clock time - otherwise timestamps may be zeroed or reported as 01 Jan 1970. This can be done by briefly running Solarflare PTP (sfptpd) as a slave - the adapter clock is seeded from the system clock.

Running sfptpd in freerun mode will achieve the same result. It is not required to actually receive any PTP packets to seed the adapter clock and sfptpd can be terminated after a few seconds as it is only required to ‘seed’ the adapter clock.

Users who wish to synchronize the adapter clock with an external time source should refer to the Solarflare Enhanced PTP User Guide (SF-109110-CD).

## rx\_timestamping Example

The following command sets the **EF\_RX\_TIMESTAMPING** environment variable and starts the rx\_timestamping example application.

*On Server1:*

```
# EF_RX_TIMESTAMPING=2 onload ./rx_timestamping --proto tcp
oo:rx_timestamping[31250]: Using OpenOnload 201509 Copyright 2006-2015
Solarflare Communications, 2002-2005 Level 5 Networks [0]
Socket created, listening on port 9000
Socket accepted
Selecting hardware timestamping mode.
PPacket 1 - 27 bytes      timestamps 1460374944.990960465
1460374944.993421129 1460374944.993421129
Packet 2 - 27 bytes      timestamps 1460374966.478980336
1460374966.481623531 1460374966.481623531
Packet 3 - 0 bytes      no timestamp
recvmsg returned 0 - end of stream
```

*On Server2:*

This example uses the Linux netcat utility to send packets to server1:

```
# nc <server1 ip> 9000
abcdefghijklmnopqrstuvwxyz
abcdefghijklmnopqrstuvwxyz
```

## Displayed Timestamp Order

Timestamps in the example applications are displayed in the following order:

- System: software timestamp from the system clock.
- Transformed: hardware timestamp converted to software timestamp, this can be ignored because the adapter is using UTC time and transformation is not required. Transformed timestamps are identical to Raw timestamps.
- Raw: hardware timestamp generated by the adapter clock.

## tx\_timestamping Example

The following command sets the **EF\_TX\_TIMESTAMPING** environment variable and starts the tx\_timestamping example application.

*On Server1:*

```
# EF_TX_TIMESTAMPING=3 onload ./tx_timestamping --proto tcp --ioctl eth4
oo:tx_timestamping[16139]: Using OpenOnload 201509 Copyright 2006-2015
Solarflare Communications, 2002-2005 Level 5 Networks [4]
TCP listening on port 9000
TCP connection accepted
Accepted SIOCHWTSTAMP ioctl.
Selecting hardware timestamping mode.
Packet 1 - 27 bytes
Timestamp for 27 bytes:
First sent timestamp 1453436034.615029223
Last sent timestamp 0.000000000
```

*On Server2:*

This example uses the Linux netcat utility to send a packet to server1 which is then echoed back to the sender:

```
# nc <server1_ip> 9000
abcdefghijklmnopqrstuvwxyz
abcdefghijklmnopqrstuvwxyz (echoed back from server 1)
```

## Example UDP Commands

*On Server1:*

```
# EF_RX_TIMESTAMPING=2 onload ./rx_timestamping --proto udp --port 9000
```

*On Server2:*

```
# nc -u <server1_ipaddr> 9000
```

## Zeroed Timestamps

If timestamps returned from the example applications are zeroed, refer to [Setting Adapter Clock Time on page 90](#).

# 9

# Onload - TCP

## 9.1 TCP Operation

The table below identifies the Onload TCP implementation RFC compliance.

| RFC  | Title                                                               | Compliance |
|------|---------------------------------------------------------------------|------------|
| 793  | Transmission Control Protocol                                       | Yes        |
| 813  | Window and Acknowledgement Strategy in TCP                          | Yes        |
| 896  | Congestion Control in IP/TCP                                        | Yes        |
| 1122 | Requirements for Hosts                                              | Yes        |
| 1191 | Path MTU Discovery                                                  | Yes        |
| 1323 | TCP Extensions for High Performance                                 | Yes        |
| 2018 | TCP Selective Acknowledgment Options                                | Yes        |
| 2581 | TCP Congestion Control                                              | Yes        |
| 2582 | The NewReno Modification to TCP's Fast Recovery Algorithm           | Yes        |
| 2883 | An Extension to the Selective Acknowledgement (SACK) Option for TCP | Yes        |
| 2988 | Computing TCP's Retransmission Timer                                | Yes        |
| 3128 | Protection Against a Variant of the Tiny Fragment Attack            | Yes        |
| 3168 | The Addition of Explicit Congestion Notification (ECN) to IP        | Yes        |
| 3465 | TCP Congestion Control with Appropriate Byte Counting (ABC)         | Yes        |

## 9.2 TCP Handshake - SYN, SYNACK

During the TCP connection establishment 3-way handshake, Onload negotiates the MSS, Window Scale, SACK permitted, ECN, PAWS and RTTM timestamps.

For TCP connections Onload will negotiate an appropriate MSS for the MTU configured on the interface. However, when using jumbo frames, Onload will currently negotiate an MSS value up to a maximum of 2048 bytes minus the number of bytes required for packet headers. This is due to the fact that the size of buffers passed to the Solarflare network interface card is 2048 bytes and the Onload stack cannot currently handle fragmented packets on its TCP receive path.

TCP options advertised during the handshake can be selected using the `EF_TCP_SYN_OPTS` environment variable. Refer to [Parameter Reference on page 193](#) for details of environment variables.

## 9.3 TCP SYN Cookies

The Onload environment variable `EF_TCP_SYNCOOKIES` can be enabled on a per stack basis to force the use of SYNCOOKIES thereby providing a degree of protection against the Denial of Service (DOS) SYN flood attack. `EF_TCP_SYNCOOKIES` is disabled by default. Refer to [Parameter Reference on page 193](#) for details of environment variables.

## 9.4 TCP Socket Options

Onload TCP supports the following socket options which can be used in the `setsockopt()` and `getsockopt()` function calls.

| Option                       | Description                                                                                                                               |
|------------------------------|-------------------------------------------------------------------------------------------------------------------------------------------|
| <code>SO_PROTOCOL</code>     | retrieve the socket protocol as an integer.                                                                                               |
| <code>SO_ACCEPTCONN</code>   | determines whether the socket can accept incoming connections - true for listening sockets. (Only valid as a <code>getsockopt()</code> ). |
| <code>SO_BINDTODEVICE</code> | bind this socket to a particular network interface. See <a href="#">SO_BINDTODEVICE on page 70</a> .                                      |
| <code>SO_CONNECT_TIME</code> | number of seconds a connection has been established. (Only valid as a <code>getsockopt()</code> ).                                        |
| <code>SO_DEBUG</code>        | enable protocol debugging.                                                                                                                |
| <code>SO_ERROR</code>        | the <code>errno</code> value of the last error occurring on the socket. (Only valid as a <code>getsockopt()</code> ).                     |

| Option              | Description                                                                                                                                                                                                                                                                                                              |
|---------------------|--------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| SO_EXCLUSIVEADDRUSE | prevents other sockets using the SO_REUSEADDR option to bind to the same address and port.                                                                                                                                                                                                                               |
| SO_KEEPALIVE        | enable sending of keep-alive messages on connection oriented sockets.                                                                                                                                                                                                                                                    |
| SO_LINGER           | when enabled, a <code>close()</code> or <code>shutdown()</code> will not return until all queued messages for the socket have been successfully sent or the linger timeout has been reached. Otherwise the <code>close()</code> or <code>shutdown()</code> returns immediately and sockets are closed in the background. |
| SO_OOBINLINE        | indicates that out-of-bound data should be returned in-line with regular data. This option is only valid for connection-oriented protocols that support out-of-band data.                                                                                                                                                |
| SO_PRIORITY         | set the priority for all packets sent on this socket. Packets with a higher priority may be processed first depending on the selected device queuing discipline.                                                                                                                                                         |
| SO_RCVBUF           | sets or gets the maximum socket receive buffer in bytes.<br><br>Note that EF_TCP_RCVBUF overrides this value and EF_TCP_RCVBUF_ESTABLISHED_DEFAULT can also override this value.<br><br>Setting SO_RCVBUF to a value < MTU can result in poorer performance and is not recommended.                                      |
| SO_RCVLOWAT         | sets the minimum number of bytes to process for socket input operations.                                                                                                                                                                                                                                                 |
| SO_RCVTIMEO         | sets the timeout for input function to complete.                                                                                                                                                                                                                                                                         |
| SO_RECVTIMEO        | sets the timeout in milliseconds for blocking receive calls.                                                                                                                                                                                                                                                             |
| SO_REUSEADDR        | can reuse local port numbers i.e. another socket can bind to the same port except when there is an active listening socket bound to the port.                                                                                                                                                                            |
| SO_REUSEPORT        | allows multiple sockets to bind to the same port.                                                                                                                                                                                                                                                                        |

| Option                         | Description                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                           |
|--------------------------------|---------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| SO_SNDBUF                      | sets or gets the maximum socket send buffer in bytes. The value set is doubled by the kernel and by Onload to allow for bookkeeping overhead when it is set by the <code>setsockopt()</code> function call. Note that <code>EF_TCP_SNDBUF</code> , <code>EF_TCP_SNDBUF_MODE</code> and <code>EF_TCP_SNDBUF_ESTABLISHED_DEFAULT</code> can override this value.<br><br>When the <code>EF_TCP_SNDBUF_MODE</code> is set to 2, the SNDBUF size is automatically adjusted for each TCP socket to match the window advertised by the peer. |
| SO_SNDLOWAT                    | sets the minimum number of bytes to process for socket output operations. Always set to 1 byte.                                                                                                                                                                                                                                                                                                                                                                                                                                       |
| SO_SNDOPTIMEO                  | set the timeout for sending function to send before reporting an error.                                                                                                                                                                                                                                                                                                                                                                                                                                                               |
| SO_TIMESTAMP                   | enable/disable receiving the SO_TIMESTAMP control message.                                                                                                                                                                                                                                                                                                                                                                                                                                                                            |
| SO_TIMESTAMPNS                 | enable/disable receiving the SO_TIMESTAMP control message.                                                                                                                                                                                                                                                                                                                                                                                                                                                                            |
| SO_TIMESTAMPING                | enable/disable hardware timestamps for received packets.                                                                                                                                                                                                                                                                                                                                                                                                                                                                              |
| SOF_TIMESTAMPING_TX_HARDWARE   | obtain a hardware generated transmit timestamp.                                                                                                                                                                                                                                                                                                                                                                                                                                                                                       |
| SOF_TIMESTAMPING_SYS_HARDWARE  | obtain a hardware transmit timestamp adjusted to the system time base.                                                                                                                                                                                                                                                                                                                                                                                                                                                                |
| SOF_TIMESTAMPING_OPT_CMSG      | deliver timestamps using the <code>cmsg</code> API.                                                                                                                                                                                                                                                                                                                                                                                                                                                                                   |
| ONLOAD_SOF_TIMESTAMPING_STREAM | Onload extension to the standard SO_TIMESTAMPING API to support hardware timestamps on TCP sockets.                                                                                                                                                                                                                                                                                                                                                                                                                                   |
| SO_TYPE                        | returns the socket type (SOCK_STREAM or SOCK_DGRAM). (Only valid as a <code>getsockopt()</code> ).                                                                                                                                                                                                                                                                                                                                                                                                                                    |
| IP_TRANSPARENT                 | this socket option allows the calling application to bind the socket to a nonlocal IP address.                                                                                                                                                                                                                                                                                                                                                                                                                                        |

## 9.5 TCP Level Options

Onload TCP supports the following TCP options which can be used in the `setsockopt()` and `getsockopt()` function calls

| Option                        | Description                                                                                                                                                                                                          |
|-------------------------------|----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| TCP_CORK                      | stops sends on segments less than MSS size until the connection is uncorked.                                                                                                                                         |
| TCP_DEFER_ACCEPT              | a connection is ESTABLISHED after handshake is complete instead of leaving it in SYN-RECV until the first real data packet arrives. The connection is placed in the accept queue when the first data packet arrives. |
| TCP_INFO                      | populates an internal data structure with tcp statistic values.                                                                                                                                                      |
| TCP_KEEPALIVE_ABORT_THRESHOLD | how long to try to produce a successful keepalive before giving up.                                                                                                                                                  |
| TCP_KEEPALIVE_THRESHOLD       | specifies the idle time for keepalive timers.                                                                                                                                                                        |
| TCP_KEEPCNT                   | number of keepalives before giving up.                                                                                                                                                                               |
| TCP_KEEPIDLE                  | idle time for keepalives.                                                                                                                                                                                            |
| TCP_KEEPINTVL                 | time between keepalives.                                                                                                                                                                                             |
| TCP_MAXSEG                    | gets the MSS size for this connection.                                                                                                                                                                               |
| TCP_NODELAY                   | disables Nagle's Algorithm and small segments are sent without delay and without waiting for previous segments to be acknowledged.                                                                                   |
| TCP_QUICKACK                  | when enabled ACK messages are sent immediately following reception of the next data packet. This flag will be reset to zero following every use i.e. it is a one time option. Default value is 1 (enabled).          |

## 9.6 TCP File Descriptor Control

Onload supports the following options in `socket()` and `accept()` calls.

| Option                     | Description                                                                                                                                                                                                              |
|----------------------------|--------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <code>SOCK_CLOEXEC</code>  | supported in <code>socket()</code> and <code>accept()</code> . Sets the <code>O_NONBLOCK</code> file status flag on the new open file descriptor saving extra calls to <code>fcntl(2)</code> to achieve the same result. |
| <code>SOCK_NONBLOCK</code> | supported in <code>accept()</code> . Sets the close-on-exec ( <code>FD_CLOEXEC</code> ) flag on the new file descriptor.                                                                                                 |

## 9.7 TCP Congestion Control

Onload TCP implements congestion control in accordance with RFC3465 and employs the NewReno algorithm with extensions for Appropriate Byte Counting (ABC).

On new or idle connections and those experiencing loss, Onload employs a Fast Start algorithm in which delayed acknowledgments are disabled, thereby creating more ACKs and subsequently ‘growing’ the congestion window rapidly. Two environment variables; `EF_TCP_FASTSTART_INIT` and `EF_TCP_FASTSTART_LOSS` are associated with the fast start - Refer to [Parameter Reference on page 193](#) for details.

During Slow Start, the congestion window is initially set to  $2 \times$  maximum segment size (MSS) value. As each ACK is received the congestion window size is increased by the number of bytes acknowledged up to a maximum  $2 \times$  MSS bytes. This allows Onload to transmit the minimum of the congestion window and advertised window size i.e.

`transmission window (bytes) = min(CWND, receiver advertised window size)`

If loss is detected - either by retransmission timeout (RTO), or the reception of duplicate ACKs, Onload will adopt a congestion avoidance algorithm to slow the transmission rate. In congestion avoidance the transmission window is halved from its current size - but will not be less than  $2 \times$  MSS. If congestion avoidance was triggered by an RTO timeout the Slow Start algorithm is again used to restore the transmit rate. If triggered by duplicate ACKs Onload employs a Fast Retransmit and Fast Recovery algorithm.

If Onload TCP receives 3 duplicate ACKs this indicates that a segment has been lost - rather than just received out of order and causes the immediate retransmission of the lost segment (Fast Retransmit). The continued reception of duplicate ACKs is an indication that traffic still flows within the network and Onload will follow Fast Retransmit with Fast Recovery.

During Fast Recovery Onload again resorts to the congestion avoidance (without Slow Start) algorithm with the congestion window size being halved from its present value.

Onload supports a number of environment variables that influence the behavior of the congestion window and recovery algorithms identified below. Refer to [Parameter Reference on page 193](#):

- EF\_TCP\_INITIAL\_CWND - sets the initial size (bytes) of congestion window
- EF\_TCP\_LOSS\_MIN\_CWND - sets the minimum size of the congestion window following loss.
- EF\_CONG\_AVOID\_SCALE\_BACK - slows down the rate at which the TCP congestion window is opened to help reduce loss in environments already suffering congestion and loss.



**CAUTION:** *The congestion variables should be used with caution so as to avoid violating TCP protocol requirements and degrading TCP performance.*

## 9.8 TCP SACK

Onload will employ TCP Selective Acknowledgment (SACK) if the option has been negotiated and agreed by both ends of a connection during the connection establishment 3-way handshake. Refer to RFC 2018 for further information.

## 9.9 TCP QUICKACK

TCP will generally aim to defer the sending of ACKs in order to minimize the number of packets on the network. Onload supports the standard TCP\_QUICKACK socket option which allows some control over this behavior. Enabling TCP\_QUICKACK causes an ACK to be sent immediately in response to the reception of the following data packet. This is a one-shot operation and TCP\_QUICKACK self clears to zero immediately after the ACK is sent.

## 9.10 TCP Delayed ACK

By default TCP stacks delay sending acknowledgments (ACKs) to improve efficiency and utilization of a network link. Delayed ACKs also improve receive latency by ensuring that ACKs are not sent on the critical path. However, if the sender of TCP packets is using Nagle's algorithm, receive latency will be impaired by using delayed ACKs.

Using the EF\_DELACK\_THRESH environment variable the user can specify how many TCP segments can be received before Onload will respond with a TCP ACK. Refer to the [Parameter List on page 193](#) for details of the Onload environment delayed TCP ACK variables.

## 9.11 TCP Dynamic ACK

The sending of excessive TCP ACKs can impair performance and increase receive side latency. Although TCP generally aims to defer the sending of ACKs, Onload also supports a further mechanism. The EF\_DYNAMIC\_ACK\_THRESH environment variable allows Onload to dynamically determine when it is non-detrimental to throughput and efficiency to send a TCP ACK. Onload will force an TCP ACK to be sent if the number of TCP ACKs pending reaches the threshold value.

Refer to the [Parameter List on page 193](#) for details of the Onload environment delayed TCP ACK variables.



**NOTE:** When used together with EF\_DELACK\_THRESH or EF\_DYNAMIC\_ACK\_THRESH, the socket option TCP\_QUICKACK will behave exactly as stated above. Both onload environment variables identify the maximum number of segments that can be received before an ACK is returned. Sending an ACK before the specified maximum is reached is allowed.



**NOTE:** TCP ACKS should be transmitted at a sufficient rate to ensure the remote end does not drop the TCP connection.


## 9.12 TCP Loopback Acceleration

Onload supports the acceleration of TCP loopback connections, providing an accelerated mechanism through which two processes on the same host can communicate. Accelerated TCP loopback connections do not invoke system calls, reduce the overheads for read/write operations and offer improved latency over the kernel implementation.

The server and client processes who want to communicate using an accelerated TCP loopback connection do not need to be configured to share an Onload stack. However, the server and client TCP loopback sockets can only be accelerated if they are in the same Onload stack. Onload has the ability to move a TCP loopback socket between Onload stacks to achieve this.

TCP loopback acceleration is configured via the environment variables EF\_TCP\_CLIENT\_LOOPBACK and EF\_TCP\_SERVER\_LOOPBACK. As well as enabling TCP loopback acceleration these environment variables control Onload's behavior when the server and client sockets do not originate in the same Onload stack. This gives the user greater flexibility and control when establishing loopback on TCP sockets either from the listening (server) socket or from the connecting (client) socket. The connecting socket can use any local address or specify the loopback address.

The following diagram illustrates the client and server loopback options. Refer to [Parameter Reference on page 193](#) for a description of the loopback variables.

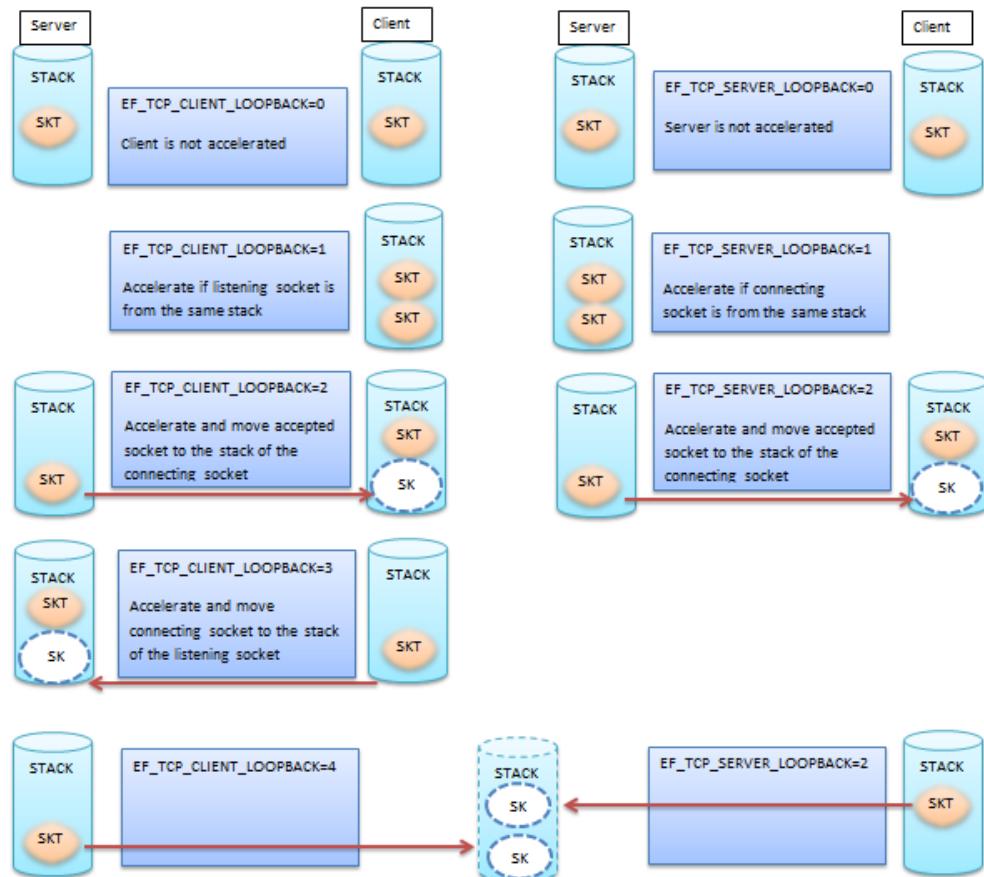

**Figure 8: EF\_TCP\_CLIENT/SERVER\_LOOPBACK**

The client loopback option `EF_TCP_CLIENT_LOOPBACK=4`, when used with the server loopback option `EF_TCP_SERVER_LOOPBACK=2`, differs from other loopback options such that rather than move sockets between existing stacks they will create an additional stack and move sockets from both ends of the TCP connection into this new stack. This avoids the possibility of having many loopback sockets sharing and contending for the resources of a single stack.

When client and server are not the same UID, set the environment variable `EF_SHARE_WITH` to allow both processes to share the created shared stack.

## 9.13 TCP Striping

Onload supports a Solarflare proprietary TCP striping mechanism that allows a single TCP connection to use both physical ports of a network adapter. Using the combined bandwidth of both ports means increased throughput for TCP streaming applications. TCP striping can be particularly beneficial for Message Passing Interface (MPI) applications.

If the TCP connection's source IP address and destination IP address are on the same subnet as defined by `EF_STRIPE_NETMASK` then Onload will attempt to negotiate TCP striping for the connection. Onload TCP striping must be configured at both ends of the link.

TCP striping allows a single TCP connection to use the full bandwidth of both physical ports on the same adapter. This should not be confused with link aggregation/port bonding in which any one TCP connection within the bond can only use a single physical port and therefore more than one TCP connection would be required to realize the full bandwidth of two physical ports.



**NOTE:** TCP striping is disabled by default. To enable this feature set the parameter `CI_CFG_PORT_STRIPING=1` in the onload distribution source directory `src/include/internal/tranport_config_opt.h` file.

## 9.14 TCP Connection Reset on RTO

Under certain circumstances it may be preferable to avoid re-sending TCP data to a peer service when data delivery has been delayed. Once data has been sent, and for which no acknowledgment has been received, the TCP retransmission timeout period represents a considerable delay. When the retransmission timeout (RTO) eventually expires it may be preferable not to retransmit the original data.

Onload can be configured to reset a TCP connection rather than attempt to retransmit data for which no acknowledgment has been received.

This feature is enabled with the `EF_TCP_RST_DELAYED_CONN` per stack environment variable and applies to all TCP connections in the onload stack. On any TCP connection in the onload stack, if the RTO timer expires before an ACK is received the TCP connection will be reset.

## 9.15 ONLOAD\_MSG\_WARM

Applications that send data infrequently may see increased send latency compared to an application that is making frequent sends. This is due to the send path and associated data structures not being cache and TLB resident (which can occur even if the CPU has been otherwise idle since the previous send call).

Onload therefore supports applications repeatedly calling send to keep the TCP fast send path ‘warm’ in the cache without actually sending data. This is particularly useful for applications that only send infrequently and helps to maintain low latency performance for those TCP connections that do not send often. These “fake” sends are performed by setting the ONLOAD\_MSG\_WARM flag when calling the TCP send calls. The message warm feature does not transmit any packets.

```
char buf[10];
send(fd, buf, 10, ONLOAD_MSG_WARM);
```

Onload stackdump supports new counters to indicate the level of message warm use:

- `warm_aborted` is a count of the number of times a message warm send function was called, but the sendpath was not exercised due to Onload locking constraints.
- `warm` is a count of the number of times a message warm send function was called when the send path was exercised.



**NOTE:** The ONLOAD\_MSG\_WARM flag is an Onload feature. It can be applied to sockets created by Onload. However if sockets are subsequently handed off to the kernel - so they are not accelerated by Onload, it may cause the message warm packets to be actually sent. This is due to a limitation in some Linux distributions which appear to ignore this flag. The Onload extensions API can be used to check whether a socket supports the MSG\_WARM feature via the `onload_fd_check_feature()` API ([onload\\_fd\\_check\\_feature on page 260](#)).



**NOTE:** When using the MSG\_WARM feature, Onload does not attempt to split large packets into multiple segments and for this reason, the size of data passed to Onload when using the MSG\_WARM feature must not exceed the MSS value.



**NOTE:** Onload versions earlier than 201310 do not support the ONLOAD\_MSG\_WARM socket flag, therefore setting the flag will cause message warm packets to be sent.

## 9.16 Listen/Accept Sockets

TCP sockets accepted from a listening socket will share a wildcard filter with the parent socket. The following Onload module options can be used to control behavior when the parent socket is closed.

`oof_shared_keep_thresh` - default 100, is the number of accepted sockets sharing a wildcard filter that will cause the filter to persist after the listening socket has closed.

`oof_shared_stal_thresh` - default 200, is the number of sockets sharing a wildcard filter that will cause the filter to persist even when a new listening socket needs the filter.

If the listening socket is closed the behavior depends on the number of remaining accepted sockets as follows:

| Number of accepted sockets                                                      | Onload Action                                                                                                                                                                                                                               |
|---------------------------------------------------------------------------------|---------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| > <code>oof_shared_keep_thresh</code> but < <code>oof_shared_stal_thresh</code> | Retain the wildcard filter shared by all accepted sockets.<br><br>If a new listening socket requires the filter, Onload will install a full-match filter for each accepted socket allowing the listening socket to use the wildcard filter. |
| > <code>oof_shared_stal_thresh</code>                                           | Retain the wildcard filter shared by all accepted sockets.<br><br>A new listening socket can be created but a filter cannot be installed meaning the socket will receive no traffic until the number of accepted connections is reduced.    |

## 9.17 Socket Caching

Socket caching means Onload can further reduce the overhead of setting up new TCP connections by reusing existing sockets instead of creating from new.

A cached socket retains a file descriptor and socket buffer when it is returned to the cache of the Onload stack from which it originated.

Socket caching is enabled when `EF_SOCKET_CACHE_MAX` is set to a value greater than zero. Onload will apply passive or active caching as appropriate for the type of sockets created by the user application.

`EF_SOCKET_CACHE_MAX` applies to both active and passive sockets, i.e. if set to 100 the cache limit is 100 of each socket type.

## TCP Passive Socket Caching

Passive socket caching, supported from the Onload 201502 release, means Onload will re-use socket buffers and file descriptors from passive-open (listening sockets).

This can improve the accept rate of active-open TCP connections and will benefit processes which need to accept lots of connections from these listening sockets.

## TCP Active Socket Caching

Active socket caching, supported from the Onload 201509 release, means Onload will re-use socket buffers and file descriptors from active-open sockets when an established TCP connection has terminated.

Active-open sockets setting the IP\_TRANSPARENT socket option can be cached.

From Onload 201805, socket caching can be enabled for active-open sockets but disabled for passive-open sockets. To do so, set EF\_PER\_SOCKET\_CACHE\_MAX to 0.

## Caching for web proxies

Applications such as web proxies can create and close large numbers of sockets. In Onload 201805, socket caching has been extended to improve the support for such applications:

- Applications using many listening sockets with scalable filters can now use a common cache of sockets accepted from them, improving utilization of the cache.
- When a listening socket is used simultaneously by multiple processes, file descriptors can now be cached per-process. In earlier versions of Onload, accepted sockets were cachable only in the process that originated them.

This is of particular benefit to server applications such as NGINX that support dynamic reconfiguration by spawning a new process reusing existing listening sockets.

This feature is not compatible with sockets that require O\_CLOEXEC.

## Caching Stackdump

Onload stackdump can be used to monitor caching activity on Onload stacks.

```
# onload_stackdump lots [| grep cache]
```

| Counter                                               | Description                                                                                                                               |
|-------------------------------------------------------|-------------------------------------------------------------------------------------------------------------------------------------------|
| active cache: hit=0 avail=0 cache=EMPTY pending=EMPTY | TCP socket caching:<br>hit = number of cache hits (were cached)<br>avail = number of sockets available for caching<br>current cache state |
| sockcache_cached                                      | Number of sockets cached over the lifetime of the stack                                                                                   |
| sockcache_contention                                  | Number of sockets not cached due to lock contention                                                                                       |
| passive_sockcache_stacklim                            | Number of passive sockets not cached due to stack limit                                                                                   |
| active_sockcache_stacklim                             | Number of active sockets not cached due to stack limit                                                                                    |
| sockcache_socklim                                     | Number of sockets not cached due to socket limit                                                                                          |
| sockcache_hit                                         | Number of socket cache hits (were cached)                                                                                                 |
| sockcache_hit_reap                                    | Number of socket cache hits (were cached) after reaping                                                                                   |
| sockcache_miss_intmismatch                            | Number of socket cache misses due to mismatched interfaces                                                                                |
| activecache_cached                                    | Number of active sockets cached over the lifetime of the stack.                                                                           |
| activecache_stacklim                                  | Number of active sockets not cached due to stack limit                                                                                    |
| activecache_hit                                       | Number of active socket cache hits (were cached)                                                                                          |
| activecache_hit_reap                                  | Number of active socket cache hits (were cached) after reaping                                                                            |

## Caching - Requirements

There are some necessary pre-requisites when using socket caching:

- set `EF_UL_EPOLL=3` and set `EF_FDS_MT_SAFE=1`
- socket caching is not supported after `fork()`
- sockets that have been `dup()`ed will not be cached
- sockets that use the `O_ASYNC` or `O_APPEND` modes will not be cached
- caching offers no benefit if a single socket accepts connections on multiple local addresses (applicable to passive caching only).
- Set `O_NONBLOCK` or `O_CLOEXEC` if required on the socket, when creating the socket.

From Onload 201805 onwards, `O_CLOEXEC` cannot be used when a listening socket is used simultaneously by multiple processes.

When socket caching cannot be enabled, sockets will be processed as normal Onload sockets.

Users should refer to details of the following environment variables:

- `EF_SOCKET_CACHE_MAX`
- `EF_PER_SOCKET_CACHE_MAX`
- `EF_SOCKET_CACHE_PORTS`



**NOTE:** Allowing more sockets to be cached than there are file descriptors available can result in drastically reduced performance and users should consider that the socket cache limit, `EF_SOCKET_CACHE_MAX`, applies per stack, unlike the per-process `EF_SOCKET_CACHE_PORTS` limits.

Refer to [Parameter Reference on page 193](#) for details of Onload environment variables.

## 9.18 Shared local ports

The shared local ports feature improves the performance of TCP active-opens. It:

- reduces the cost of both blocking and non-blocking `connect()` calls
- reduces the latency to establish new connections
- enables scaling to large numbers of active-open connections
- reduces the cost of closing these connections.

These improvements are achieved by sharing a set of local port numbers amongst active-open sockets, which saves the cost and scaling limits associated with installing packet steering filters for each active-open socket. Shared local ports are only used when the local port is not explicitly assigned by the application.

To enable shared local ports, set the `EF_TCP_SHARED_LOCAL_PORTS` option to  $\geq 1$ . The value set gives the initial number of local ports to allocate when the Onload stack is created. More shared local ports are allocated on demand as needed up to the maximum given by `EF_TCP_SHARED_LOCAL_PORTS_MAX`.

Additional configuration options were added in Onload 201805:

- When `EF_TCP_SHARED_LOCAL_PORTS_NO_FALLBACK` is set, connecting TCP sockets will use ports only from the TCP shared local port pool (unless explicitly bound).  
If all shared local ports are in use, the `connect()` call will fail.
- When `EF_TCP_SHARED_LOCAL_PORTS_PER_IP` is set, ports reserved for the pool of shared local ports will be reserved per local IP address on demand.  
This helps avoid exhaustion of the ephemeral port range.
- When `EF_TCP_SHARED_LOCAL_PORTS_REUSE_FAST` is set, shared local ports can be reused immediately when the previous socket using that port has reached the `CLOSED` state, even if it did so via LAST-ACK.  
This allows the pool of shared local ports to be recycled more rapidly.

## 9.19 Scalable Filters

Using scalable filters, an Onload stack can install a MAC filter to receive all traffic from a specified interface.



**NOTE:** Once the MAC filter is inserted on an interface, ARP, ICMP and IGMP traffic is directed to the kernel, but all other traffic is directed to a single Onload stack.

Using scalable filters removes limitations on:

- the number of listening sockets in scalable filters passive mode
- the number of active-open connections in scalable filters transparent-active mode. This works only for sockets having the `IP_TRANSPARENT` option set. See [Transparent Reverse Proxy Modes on page 110](#) below.

On Onload 201805 and later, scalable filters can be combined for both passive and active open connections and with RSS, enabling very high transaction rates for use cases such as a reverse web proxy. Note that this feature requires modern CPUs that support the CLMUL instruction.

The most effective way to use scalable filters is with a dedicated VI created with a MACVLAN. This allows the kernel stack or another application using scalable filters to use the same physical port. The kernel option `inject_kernel_gid` (introduced in Onload 201805) controls the injection of packets not handled by Onload back to the kernel when the VI is instead shared with other functions

Solarflare SFN7000, SFN8000 and X2 series adapter can be partitioned to expose up to 16 PCIe physical functions (PF). Each PF is presented to the OS as a standard network interface. The adapter is partitioned with the sfboot utility - see example below.

Once a MAC filter has been installed on a PF, other Onload stacks can still receive other traffic on the same PF, but sockets will have to insert IP filters for the required traffic. Apart from ARP, ICMP and IGMP packets, OS kernel sockets, using the same PF, will not receive any traffic.

Per interface, the MAC filter can only be installed by a single Onload stack. If a process creates multiple stacks, the EF\_SCALABLE\_FILTERS\_ENABLE per-stack variable can be used to enable/disable this feature for individual stacks using the existing Onload extensions API e.g.

```
onload_stack_opt_set_int("EF_SCALABLE_FILTERS_ENABLE", 1);
```

The MAC filter is inserted when the stack is created - i.e. before sockets are created, and sockets need to be created to receive any traffic destined for this stack.

## Scalable Filters - Restrictions

- Scalable filters are only used for TCP traffic.
- UDP traffic can be received and accelerated by Onload on interfaces where scalable filters are enabled, but kernel UDP sockets will not receive traffic.
- UDP fragmented frames cannot be received on interfaces where scalable filters are enabled. Users should avoid having fragmented frames on these interfaces.
- The adapter must use the full-feature or ultra-low-latency firmware variants.
- Minimum firmware version: 4.6.5.1000.
- Stack per thread options (EF\_STACK\_PER\_THREAD) cannot be used with this feature.
- By default the scalable filters feature requires CAP\_NET\_RAW. Onload can be configured to avoid capability checks for this using the Onload module option `scalable_filter_gid`. See [Module Options on page 187](#) for details.

## Scalable Filters - Configuration

To enable scalable filters on a specific interface:

```
EF_SCALABLE_FILTERS=enps0f0
```

Various modes can be specified that can combine both passive and active open connections, optionally with RSS. For example:

```
EF_SCALABLE_FILTERS=enps0f0=rss:transparent_active
```

For full details, see [EF\\_SCALABLE\\_FILTERS on page 224](#).

Per interface, the MAC filter can only be installed by a single Onload stack. A cluster (see [Application Clustering on page 79](#)) might have multiple stacks and each stack could install a MAC filter on a different interface.

Sockets must be bound to the IP address of the interface.

This feature is targeted at TCP listening sockets only and connections accepted from a listening socket will share the MAC filter.

See also the following configuration parameters:

- EF\_SCALABLE\_FILTERS\_ENABLE turns the scalable filter feature on or off on a stack. It is not normally required, because it defaults to 1 when it is unset but EF\_SCALABLE\_FILTERS is set.

The value 2, available from Onload 201805, indicates a special mode to address a master-worker hierarchy of some event driven applications, such as NGINX.

For full details, see [EF\\_SCALABLE\\_FILTERS\\_ENABLE on page 225](#).

- EF\_SCALABLE\_LISTEN\_MODE, available from Onload 201805, sets the behaviour of scalable listening sockets.

The non-default mode 1 rejects connections that are not to a local address configured on the scalable interface. This avoids kernel scalability issues with large numbers of listen sockets.

For full details, see [EF\\_SCALABLE\\_LISTEN\\_MODE on page 226](#).

## Partition the NIC

The sfboot utility is available in the Solarflare Linux Utilities package (SF-107601-LS), the following example demonstrates how to partition the adapter to expose more than one PF (A cold reboot of the server is needed after changes using sfboot).

```
# sfboot pf-count=2 vf-count=0 switch-mode=partitioning
```

## Scalable Filters and Bonding

Bonded interfaces - created with the standard Linux bonding or teaming driver can be used for scalable filters.

Every interface that is part of the bond must be present in the system when the scalable filters stack is created. Removing the bond will cause the scalable filter to stop receiving traffic. After a new bond interface is created, the application must be restarted to use the bond.

## 9.20 Transparent Reverse Proxy Modes

Enhancements such as [Scalable Filters](#), [Socket Caching](#) and support for the IP\_TRANSPARENT socket option support Onload with greater efficiency and increased scalability in transparent reverse proxy mode server deployments.

These features reduce to a minimum the overheads associated with creating and connecting transparent sockets. Onload can use up to 2 million transparent active-open sockets per Onload stack.

A transparent socket is created when a socket sets the IP\_TRANSPARENT socket option and explicitly binds to IP addresses and port. The IP address can be on a foreign host. IP\_TRANSPARENT must be set before the bind.

The EF\_SCALABLE\_FILTERS variable is used to enable scalable filters and to configure the transparent proxy mode.

## Restrictions

- The IP\_TRANSPARENT option must be set before the socket is bound.
- The IP\_TRANSPARENT option cannot be cleared after bind on accelerated sockets.
- IP\_TRANSPARENT sockets cannot be accelerated if they are bound to port 0 or to INADDR\_ANY.
- IP\_TRANSPARENT sockets cannot be passed to the kernel stack when bound to a port that is in the list specified by EF\_FORCE\_TCP\_REUSEPORT.
- Reverse path filters must be disabled on all interfaces. The user should check the value returned from the following files:  
`# cat /proc/sys/net/ipv4/conf/all/rp_filter`  
`# cat /proc/sys/net/ipv4/conf/lo/rp_filter`
- When using the rss:transparent\_active mode (see below), EF\_CLUSTER\_NAME must be explicitly set by the process sharing the cluster **and** the stack cannot be named by either EF\_NAME or  `onload_set_stackname()`.

## Config (example) Settings

Below are examples of configurations using the EF\_SCALABLE\_FILTERS environment option to set transparent proxy modes.

- Enable scalable filters on interface p1p1 - this inserts a MAC address filter on the adapter. The filter is shared by all active open connections on the interface. Socket caching will be applied to the passive side of the TCP connection.  
`EF_SCALABLE_FILTERS=p1p1=passive`
- Enable scalable filters on enps0f0, then all sockets using this interface that have the IP\_TRANSPARENT flag set will use the MAC filter, other sockets will continue to use normal IP filters on this interface. Socket caching will be applied to the active side of a TCP connection:  
`EF_SCALABLE_FILTERS=enps0f0=transparent_active`
- As for the example above, but uses symmetrical RSS to ensure that requests/ responses between clients and backend servers are processed by the same thread.  
`EF_SCALABLE_FILTERS=enps0f0=rss:transparent_active`
- Enable scalable filters on enps0f0, then all sockets using this interface that have the IP\_TRANSPARENT flag set will use the MAC filter, other sockets will continue to use normal IP filters on this interface. Socket buffers are cached from active and passive sides of the TCP connection.  
`EF_SCALABLE_FILTERS=enps0f0=transparent_active:passive`

## 9.21 Transparent Reverse Proxy on Multiple CPUs

Used together with [Application Clustering](#), transparent scalable modes can deliver linear scalability using multiple CPU cores.

This uses RSS to distribute traffic, both upstream and downstream of the proxy application, mapping streams to the correct Onload stack. When each CPU core is associated exclusively with a single clustered stack there can be no contention between stacks.

For this use-case to function correctly, the proxy application will use the downstream client address:port on the upstream (to server) side of the TCP connection. In this way RSS and hardware filters ensure that client side and server side are handled by the same worker thread and traffic is directed to the correct stack.

In this scenario the client thinks it communicates directly with the server, and the server thinks it communicates directly with the client - the transparent proxy server is ‘transparent’.

# 10

# Onload - UDP

## 10.1 UDP Operation

The table below identifies the Onload UDP implementation RFC compliance.

| RFC  | Title                                                    | Compliance                                                                |
|------|----------------------------------------------------------|---------------------------------------------------------------------------|
| 768  | User Datagram Protocol                                   | Yes                                                                       |
| 1122 | Requirements for Hosts                                   | Yes                                                                       |
| 3678 | Socket Interface Extensions for Multicast Source Filters | Partial<br>See <a href="#">Source Specific Socket Options on page 115</a> |

## 10.2 Socket Options

Onload UDP supports the following socket options which can be used in the `setsockopt()` and `getsockopt()` function calls.

| Option                           | Description                                                                                                                                                                                                                                                                  |
|----------------------------------|------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <code>SO_PROTOCOL</code>         | retrieve the socket protocol as an integer.                                                                                                                                                                                                                                  |
| <code>SO_BINDTODEVICE</code>     | bind this socket to a particular network interface. See <a href="#">SO_BINDTODEVICE on page 70</a> .                                                                                                                                                                         |
| <code>SO_BROADCAST</code>        | when enabled datagram sockets can send and receive packets to/from a broadcast address.                                                                                                                                                                                      |
| <code>SO_DEBUG</code>            | enable protocol debugging.                                                                                                                                                                                                                                                   |
| <code>SO_ERROR</code>            | the <code>errno</code> value of the last error occurring on the socket. (Only valid as a <code>getsockopt()</code> ).                                                                                                                                                        |
| <code>SO_EXCLUSIVEADDRUSE</code> | prevents other sockets using the <code>SO_REUSEADDR</code> option to bind to the same address and port.                                                                                                                                                                      |
| <code>SO_LINGER</code>           | when enabled a <code>close()</code> or <code>shutdown()</code> will not return until all queued messages for the socket have been successfully sent or the linger timeout has been reached. Otherwise the call returns immediately and sockets are closed in the background. |

|                                      |                                                                                                                                                                                                                                                 |
|--------------------------------------|-------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <b>SO_PRIORITY</b>                   | set the priority for all packets sent on this socket.<br>Packets with a higher priority may be processed first depending on the selected device queuing discipline.                                                                             |
| <b>SO_RCVBUF</b>                     | sets or gets the maximum socket receive buffer in bytes.<br><br>Note that EF_UDP_RCVBUF overrides this value.<br><br>Setting SO_RCVBUF to a value < MTU can result in poorer performance and is not recommended.                                |
| <b>SO_RCVLOWAT</b>                   | sets the minimum number of bytes to process for socket input operations.                                                                                                                                                                        |
| <b>SO_RECVTIMEO</b>                  | sets the timeout for input function to complete.                                                                                                                                                                                                |
| <b>SO_REUSEADDR</b>                  | can reuse local ports i.e. another socket can bind to the same port number except when there is an active listening socket bound to the port.                                                                                                   |
| <b>SO_REUSEPORT</b>                  | allow multiple sockets to bind to the same port.                                                                                                                                                                                                |
| <b>SO_SNDBUF</b>                     | sets or gets the maximum socket send buffer in bytes.<br>The value set is doubled by the kernel and by Onload to allow for bookkeeping overhead when it is set by the setsockopt() function call. Note that EF_UDP_SNDBUF overrides this value. |
| <b>SO SNDLOWAT</b>                   | sets the minimum number of bytes to process for socket output operations. Always set to 1 byte.                                                                                                                                                 |
| <b>SO SNDTIMEO</b>                   | set the timeout for sending function to send before reporting an error.                                                                                                                                                                         |
| <b>SO_TIMESTAMP</b>                  | enable or disable receiving the SO_TIMESTAMP control message (microsecond resolution). See below.                                                                                                                                               |
| <b>SO_TIMESTAMPNS</b>                | enable or disable receiving the SO_TIMESTAMP control message (nanosecond resolution). See <a href="#">SO_BINDTODEVICE</a> on page 70.                                                                                                           |
| <b>SO_TIMESTAMPING</b>               | enable/disable hardware timestamps for received packets.                                                                                                                                                                                        |
| <b>SOF_TIMESTAMPING_TX_HARDWARE</b>  | obtain a hardware generated transmit timestamp.                                                                                                                                                                                                 |
| <b>SOF_TIMESTAMPING_SYS_HARDWARE</b> | obtain a hardware transmit timestamp adjusted to the system time base.                                                                                                                                                                          |
| <b>SO_TYPE</b>                       | returns the socket type (SOCK_STREAM or SOCK_DGRAM).<br>(Only valid as a getsockopt()).                                                                                                                                                         |

## 10.3 Source Specific Socket Options

The following table identifies source specific socket options supported from onload-201210-u1 onwards. Refer to release notes for Onload specific behavior regarding these options.

| Option                           | Description                                                                                                |
|----------------------------------|------------------------------------------------------------------------------------------------------------|
| IP_ADD_SOURCE_MEMBER<br>SHIP     | Join the supplied multicast group on the given interface and accept data from the supplied source address. |
| IP_DROP_SOURCE_MEMBER<br>RSHIP   | Drops membership to the given multicast group, interface and source address.                               |
| MCAST_JOIN_SOURCE_GROUP<br>OUP   | Join a source specific group.                                                                              |
| MCAST_LEAVE_SOURCE_GROUP<br>ROUP | Leave a source specific group.                                                                             |


## 10.4 Onload Sockets vs. Kernel Sockets

For each UDP socket, Onload creates both an accelerated socket and a kernel socket. Onload will always give priority to the Onload sockets over any kernel sockets.

This is important because if there is always traffic arriving at the Onload receive queue, Onload will might never get to process any packets delivered via the kernel socket (e.g if traffic arrives from a non-Solarflare interface).

## 10.5 UDP Sockets - Send and Receive Paths

For each UDP socket, Onload creates both an accelerated socket and a kernel socket. There is usually no file descriptor for the kernel socket visible in the user's file descriptor table. When a UDP process is ready to transmit data, Onload will check a cached ARP table which maps IP addresses to MAC addresses. A cache 'hit' results in sending via the Onload accelerated socket. A cache 'miss' results in a syscall to populate the user mode cached ARP table. If no MAC address can be identified via this process the packet is sent via the kernel stack to provoke ARP resolution. Therefore, it is possible that some UDP traffic will be sent occasionally via the kernel stack.

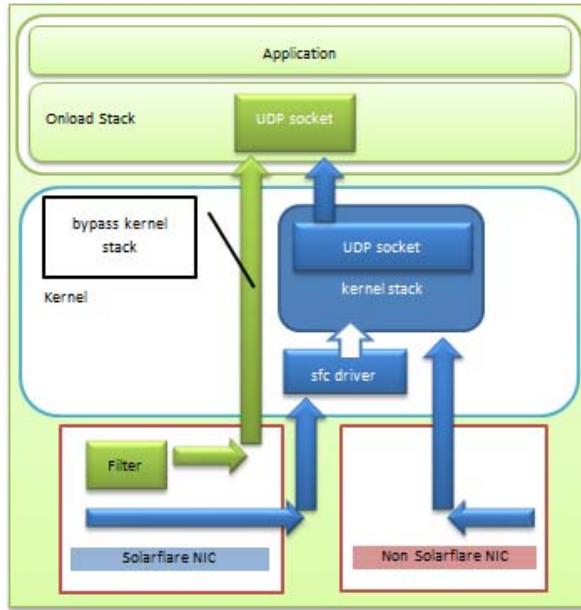

**Figure 9: UDP Send and Receive Paths**

Figure 9 illustrates the UDP send and receive paths. Lighter arrows indicate the accelerated ‘kernel bypass’ path. Darker arrows identify fragmented UDP packets received by the Solarflare adapter and UDP packets received from a non-Solarflare adapter. UDP packets arriving at the Solarflare adapter are filtered on source and destination address and port number to identify a VNIC the packet will be delivered to. Fragmented UDP packets are received by the application via the kernel UDP socket. UDP packets received by a non-Solarflare adapter are always received via the kernel UDP socket.

## 10.6 Fragmented UDP

When sending datagrams which exceed the MTU, the Onload stack will send multiple Ethernet packets. On hosts running Onload, fragmented datagrams are always received via the kernel stack.

## 10.7 User Level recvmsg for UDP

The `recvmsg()` function is intercepted for UDP sockets which are accelerated by Onload.

The Onload user-level `recvmsg()` is available to systems that do not have kernel/libc support for this function. The `recvmsg()` is not supported for TCP sockets.

## 10.8 User-Level sendmmsg for UDP

The `sendmmsg()` function is intercepted for UDP sockets which are accelerated by Onload.

The Onload user-level `sendmmsg()` is available to systems that do not have kernel/libc support for this function. The `sendmmsg()` is not supported for TCP sockets.

## 10.9 UDP sendfile

The UDP `sendfile()` method is not currently accelerated by Onload. When an Onload accelerated application calls `sendfile()` this will be handled seamlessly by the kernel.

## 10.10 Multicast Replication

The Solarflare SFN7000, SFN8000 and X2 series adapters support multicast replication where received packets are replicated in hardware and delivered to multiple receive queues. This feature allows any number of Onload clients, listening to the same multicast data stream, to receive their own copy of the packets, without an additional software copy and without the need to share Onload stacks. As illustrated below, the packets are delivered multiple times by the controller to each receive queue that has installed a hardware filter to receive the specified multicast stream.

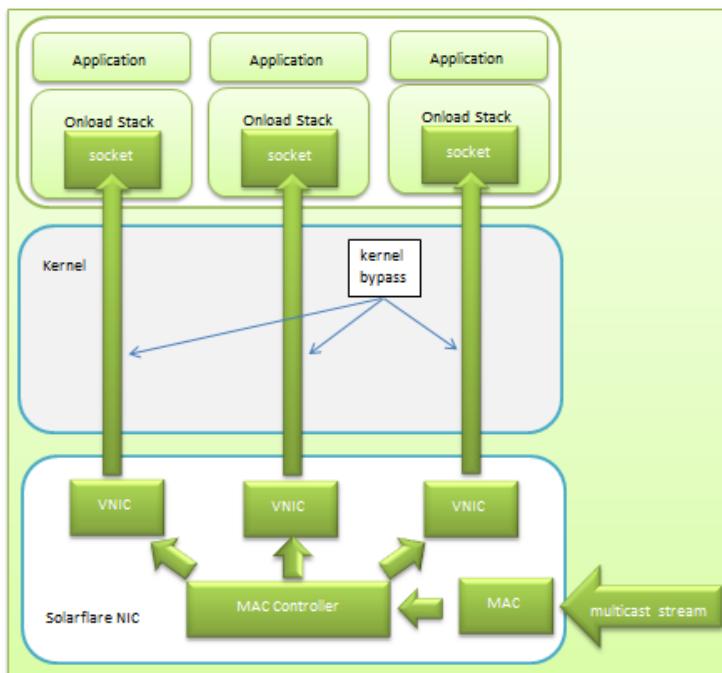


Figure 10: Hardware Multicast Replication

Multicast replication is performed in the adapter transparently and does not need to be explicitly enabled.

This feature removes the need to share Onload stacks using the EF\_NAME environment variable. Users using EF\_NAME exclusively for sharing multicast traffic can now remove EF\_NAME from the configurations.

## 10.11 Multicast Operation and Stack Sharing

To illustrate shared stacks, the following examples describe Onload behavior when two processes, on the same host, subscribe to the same multicast stream:


- [Multicast Receive Using Different Onload Stacks on page 118](#)
- [Multicast Transmit Using Different Onload Stacks on page 119](#)
- [Multicast Receive Sharing an Onload Stack on page 119](#)
- [Multicast Transmit Sharing an Onload Stack on page 120](#)
- [Multicast Receive - Onload Stack and Kernel Stack on page 120.](#)



**NOTE:** The following subsections use two processes to demonstrate Onload behavior. In practice multiple processes can share the same Onload stack. Stack sharing is not limited to multicast subscribers and can be employed by any TCP and UDP applications.

### Multicast Receive Using Different Onload Stacks

Running on SFN5000 or SFN6000 series adapters (for SFN7000, SFN8000 and X2 series, see [Multicast Replication on page 117](#)), Onload will notice if two Onload stacks on the same host subscribe to the same multicast stream and will respond by redirecting the stream to go through the kernel. Handing the stream to the kernel, though still using Onload stacks, allows both subscribers to receive the datagrams, but user-space acceleration is lost and the receive rate is lower than it could otherwise be. [Figure 11](#) below illustrates the configuration. Arrows indicate the receive path and fragmented UDP path.

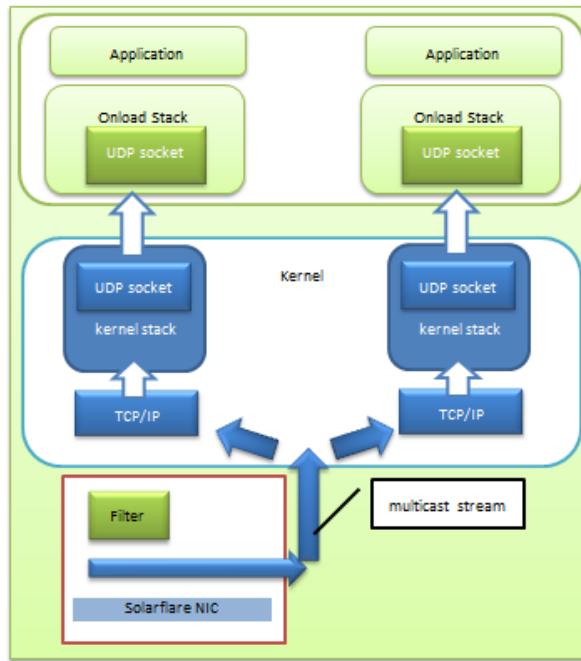

**Figure 11: Multicast Receive Using Different Onload Stacks.**


The reason for this behavior is because the Solarflare NIC will not deliver a single received multicast packet multiple times to multiple stacks – the packet is delivered only once (Does not apply to SFN7000, SFN8000 and X2 series adapters). If a received packet is delivered to kernel-space, then the kernel TCP/IP stack will copy the received data multiple times to each socket listening on the corresponding multicast stream. If the received packet were delivered directly to Onload, where the stacks are mapped to user-space, it would only be delivered to a single subscriber of the multicast stream.

## Multicast Transmit Using Different Onload Stacks

Referring to [Figure 11](#), if one process were to transmit multicast datagrams, these would not be received by the second process. Onload is only able to accelerate transmitted multicast datagrams when they do not need to be delivered to other applications in the same host. Or more accurately, the multicast stream can only be delivered within the same Onload stack.

## Multicast Receive Sharing an Onload Stack

Setting the `EF_NAME` environment variable to the same string (max 8 chars) in both processes means they can share an Onload stack. The stream is no longer redirected through the kernel resulting in a much higher receive rate than can be observed with the kernel TCP/IP stack (or with separate Onload stacks where the data path is via the kernel TCP/IP stack). This configuration is illustrated in [Figure 12](#) below. Lighter arrows indicate the accelerated (kernel bypass) path. Darker arrows indicate the fragmented UDP path.

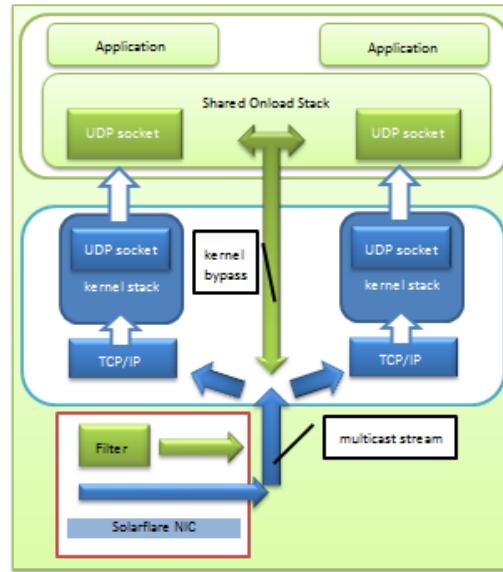

**Figure 12: Sharing an Onload Stack**

## Multicast Transmit Sharing an Onload Stack

Referring to [Figure 12](#), datagrams transmitted by one process would be received by the second process because both processes share the Onload stack.

## Multicast Receive - Onload Stack and Kernel Stack

If a multicast stream is being accelerated by Onload, and another application that is not using Onload subscribes to the same stream, then the second application will not receive the associated datagrams. Therefore if multiple applications subscribe to a particular multicast stream, either all or none should be run with Onload.

To enable multiple applications accelerated with Onload to subscribe to the same multicast stream, the applications must share the same Onload stack. Stack sharing is achieved by using the `EF_NAME` environment variable (max 8 chars).

## Multicast Receive and Multiple Sockets

When multiple sockets join the same multicast group, received packets are delivered to these sockets in the order that they joined the group.

When multiple sockets are created by different threads and all threads are spinning on `recv()`, the thread which is able to receive first will also deliver the packets to the other sockets.

If a thread 'A' is spinning on `poll()`, and another thread 'B', listening to the same group, calls `recv()` but does not spin, 'A' will notice a received packet first and deliver the packet to 'B' without an interrupt occurring.

## 10.12 Multicast Loopback

The socket option `IP_MULTICAST_LOOP` controls whether multicast traffic sent on a socket can be received locally on the machine. Receiving multicast traffic locally requires both the sender and receiver to be using the same Onload stack. Therefore, when a receiver is in the same application as the sender it will receive multicast traffic. If sender and receiver are in different applications then both must be running Onload and must be configured to share the same Onload stack.

For two processes to share an Onload stack both must set the same value for the `EF_NAME` parameter (max 8 chars). If one local process is to receive the data sent by a sending local process, `EF_MCAST_SEND` must be set to 1 or 3 on the thread creator of the stack.

User of earlier Onload versions and users of `EF_MULTICAST_LOOP_OFF` should refer to the Parameter Reference table [Parameter Reference on page 193](#) for details of deprecated features.

## 10.13 Hardware Multicast Loopback

An alternative to the Onload stack sharing scheme described in [Multicast Loopback](#), Hardware Multicast Loopback, available from openonload-201405, enables the passing of multicast traffic between Onload stacks allowing applications running on the same server to benefit from Onload acceleration without the need to share an Onload stack thereby reducing the risk of stack lock and resource contention.

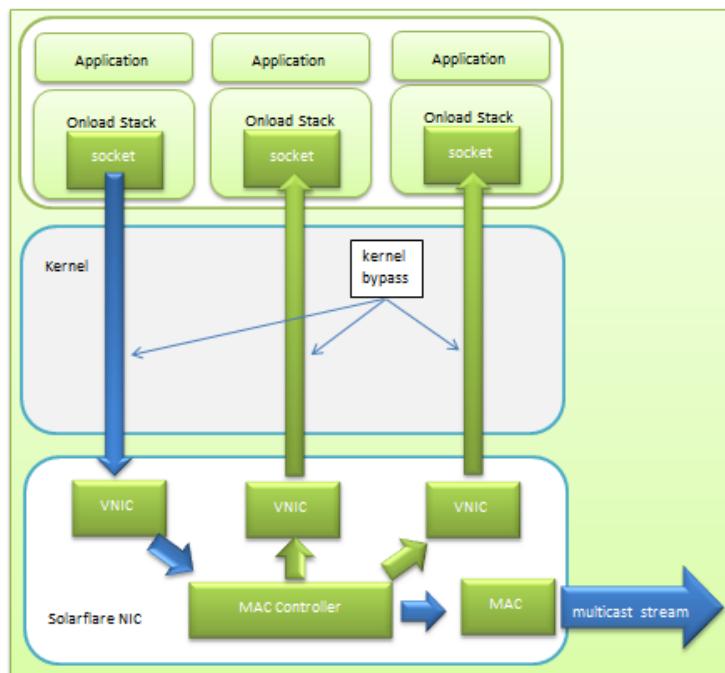


Figure 13: Hardware Multicast Loopback

- Only available on the Solarflare Flareon SFN7000, XtremeScale™ SFN8000 and XtremeScale™ X2 series adapters.
- Adapters must have a minimum firmware version v4.0.7.6710 and “full featured” firmware must be selected using the `firmware-variant` option via the “sfboot” utility. Refer to the Solarflare Server User Guide ‘sfboot parameters’ for further details.

Hardware Multicast Loopback allows data generated by one process to be received by another process on the same host - Multicast Replication does not support local loopback.

Reception of looped back traffic is enabled by default on a per Onload stack basis. A stack can choose not to receive looped back traffic by setting the environment variable `EF_MCAST_RECV_HW_LOOP=0`.



**NOTE:** Hardware Multicast Loopback is enabled through a single hardware filter. For this reason, if any single process chooses to receive multicast loopback traffic by `EF_MCAST_RECV_HW_LOOP=1`, then all other processes joined to the same multicast group will also receive the loopback traffic regardless of their setting for `EF_MCAST_RECV_HW_LOOP`.

Sending of looped back traffic is disabled by default. On a per-stack basis this feature can be enabled by setting the environment variable `EF_MCAST_SEND` to either 2 or 3.

Setting the socket option `MULTICAST_TTL=0` will disable the sending of traffic on the normal network path and prevent traffic being looped back. The value of the socket option `IP_MULTICAST_LOOP` has no effect on Hardware Multicast Loopback. Refer to [Onload and IP\\_MULTICAST\\_TTL on page 156](#) for differences in Linux kernel and Onload behavior.

## 10.14 IP\_MULTICAST\_ALL

For an accelerated socket, Onload will always behave as if `IP_MULTICAST_ALL=0`. There is always the potential for messages to arrive at the host - perhaps from a non-Solarflare interface or via the loopback interface - which will also be delivered to the socket under normal UDP port matching rules so the socket could receive traffic for groups not explicitly joined on this socket.

# 11

# Packet Buffers

## 11.1 Introduction

Packet buffers describe the memory used by the Onload stack (and Solarflare adapter) to receive, transmit and queue network data. Packet buffers provide a method for user-mode accessible memory to be directly accessed by the network adapter without compromising system integrity.

Onload will request huge pages if these are available when allocating memory for packet buffers. Using huge pages can lead to improved performance for some applications by reducing the number of Translation Lookaside Buffer (TLB) entries needed to describe packet buffers and therefore minimize TLB ‘thrashing’.



**NOTE:** Onload huge page support should not be enabled if the application uses IPC namespaces and the CLONE\_NEWIPC flag.

Onload offers two configuration modes for network packet buffers:

## 11.2 Network Adapter Buffer Table Mode

Solarflare network adapters employ a proprietary hardware-based buffer address translation mechanism to provide memory protection and translation to Onload stacks accessing a VNIC on the adapter. This is the default packet buffer mode and is suitable for the majority of applications using Onload.

This scheme employs a buffer table residing on the network adapter to control the memory an Onload stack can use to send and receive packets.

While the adapter’s buffer table is sufficient for the majority of applications, on adapters prior to the SFN7000 series, it is limited to approximately 120,000 x 2Kbyte buffers which have to be shared between all Onload stacks.

If the total packet buffer requirements of all applications using Onload require more than the number of packet buffers supported by the adapter’s buffer table, the user should consider changing to the Scalable Packet Buffers configuration.

## 11.3 Large Buffer Table Support

The Solarflare SFN7000, SFN8000 and X2 series adapters alleviate the packet buffer limitations of previous generation Solarflare adapters and support many more than the 120,000 packet buffer without the need to switch to Scalable Packet Buffer Mode.

Each buffer table entry in the SFN7000, SFN8000 and X2 series adapter can describe a 4Kbyte, 64Kbyte, 1Mbyte or 4Mbyte block of memory where each table entry is the page size as directed by the operating system.

## 11.4 Scalable Packet Buffer Mode

Scalable Packet Buffer Mode is an alternative packet buffer mode which allows a much higher number of packet buffers to be used by Onload. Using the Scalable Packet Buffer Mode Onload stacks employ Single Root I/O Virtualization (SR-IOV) virtual functions (VF) to provide memory protection and translation.

For deployments where using SR-IOV and/or the IOMMU is not an option, Onload also supports an alternative Scalable Packet Buffer Mode scheme called Physical Addressing Mode. Physical addressing does not provide the memory protection provided by SR-IOV and an IOMMU. For details of Physical Addressing Mode see [Physical Addressing Mode on page 132](#).



**NOTE:** MRG users should refer to [Red Hat MRG 2 and SR-IOV on page 169](#).

For further details on SR-IOV configuration refer to [Configuring Scalable Packet Buffers on page 128](#).

## 11.5 Allocating Huge Pages

Using huge pages can lead to improved performance for some applications by reducing the number of Translation Lookaside Buffer (TLB) entries needed to describe packet buffers and therefore minimize TLB ‘thrashing’. Huge pages also deliver many packets buffers, but consume only a single entry in the buffer table. Explicit huge pages are recommended.

Onload is able to use a total of 4096 huge pages.

The current hugepage allocation can be checked by inspection of /proc/meminfo:

```
cat /proc/meminfo | grep Huge
```

This should return something similar to:

```
AnonHugePages: 2048 kB
HugePages_Total: 2050
HugePages_Free: 2050
HugePages_Rsvd: 0
HugePages_Surp: 0
Hugepagesize: 2048 kB
```

The total number of hugepages available on the system is the value HugePages\_Total. The following command can be used to dynamically set and/or change the number of huge pages allocated on a system to <N> (where <N> is a non-negative integer):

```
echo <N> > /proc/sys/vm/nr_hugepages
```

On a NUMA platform, the kernel will attempt to distribute the huge page pool over the set of all allowed nodes specified by the NUMA memory policy of the task that modifies `nr_hugepages`. The following command can be used to check the per node distribution of huge pages in a NUMA system:

```
cat /sys/devices/system/node/node*/meminfo | grep Huge
```

Huge pages can also be allocated on a per-NUMA node basis (rather than have the hugepages allocated across multiple NUMA nodes). The following command can be used to allocate <N> hugepages on NUMA node <M>:

```
echo <N> > /sys/devices/system/node/node<M>/hugepages/hugepages-2048kB/nr_hugepages
```

## 11.6 How Packet Buffers Are Used by Onload

Each packet buffer is allocated to exactly one Onload stack and is used to receive, transmit or queue network data. Packet buffers are used by Onload in the following ways:

- 1 Receive descriptor rings. By default the RX descriptor ring will hold 512 packet buffers at all times. This value is configurable using the `EF_RXQ_SIZE` (per stack) variable.
- 2 Transmit descriptor rings. By default the TX descriptor ring will hold up to 512 packet buffers. This value is configurable using the `EF_TXQ_SIZE` (per stack) variable.
- 3 To queue data held in receive and transmit socket buffers.
- 4 TCP sockets can also hold packet buffers in the socket's retransmit queue and in the reorder queue.
- 5 User-level pipes also consume packet buffer resources.

### Identifying Packet Buffer Requirements

When deciding the number of packet buffers required by an Onload stack consideration should be given to the resource needs of the stack to ensure that the available packet buffers can be shared efficiently between all Onload stacks.

- **Example 1:**

If we consider a hypothetical case of a single host:

- which employs multiple Onload stacks e.g 10
- each stack has multiple sockets e.g 6
- and each socket uses many packet buffers e.g 2000

This would require a total of 120000 packet buffers

- **Example 2:**

If on a stack the TCP receive queue is 1 Mbyte and the MSS value is 1472 bytes, this would require at least 700 packet buffers - (and a greater number if segments smaller than the MSS were received).

- **Example 3:**

A UDP receive queue of 200 Kbytes where received datagrams are each 200 bytes would hold 500 packet buffers because each packet buffer is 2048 even if the data is less than 2048 bytes.

*The examples above use only approximate calculated values. The onload\_stackdump command provides accurate measurements of packet buffer allocation and usage.*

Consideration should be given to packet buffer allocation to ensure that each stack is allocated the buffers it will require rather than a ‘one size fits all’ approach.

When using the Buffer Table Mode the system is limited to 120K packet buffers - these are allocated symmetrically across all Solarflare interfaces.



**NOTE:** Packet buffers are accessible to all network interfaces and each packet buffer requires an entry in every network adapters' buffer table. Adding more network adapters - and therefore more interfaces does not increase the number of packet buffers available.

For large scale applications the Scalable Packet Buffer Mode removes the limitations imposed by the network adapter buffer table. See [Configuring Scalable Packet Buffers on page 128](#) for details.

## Running Out of Packet Buffers

When Onload detects that a stack is close to allocating all available packet buffers it will take action to try and avoid packet buffer exhaustion. Onload will automatically start dropping packets on receive and, where possible, will reduce the receive descriptor ring fill level in an attempt to alleviate the situation. A ‘memory pressure’ condition can be identified using the `onload_stackdump lots` command where the `pkt_bufs` field will display the CRITICAL indicator. See [Identifying Memory Pressure](#) below.

Complete packet buffer exhaustion can result in deadlock. In an Onload stack, if all available packet buffers are allocated (for example currently queued in socket buffers) the stack is prevented from transmitting further data as there are no packet buffers available for the task.

If all available packet buffers are allocated then Onload will also fail to keep its adapters receive queues replenished. If the queues fall empty further data received by the adapter is instantly dropped. On a TCP connection packet buffers are used to hold unacknowledged data in the retransmit queue, and dropping received packets containing ACKs delays the freeing of these packet buffers back to Onload. Setting the value of `EF_MIN_FREE_PACKETS=0` can result in a stack having no free packet buffers and this, in turn, can prevent the stack from shutting down cleanly.

## Identifying Memory Pressure

The following extracts from the `onload_stackdump` command identify an Onload stack under memory pressure.

The `EF_MAX_PACKETS` value identifies the maximum number of packet buffers that can be used by the stack. `EF_MAX_RX_PACKETS` is the maximum number of packet buffers that can be used to hold packets received. `EF_MAX_TX_PACKETS` is the maximum number of packet buffers that can be used to hold packets to send. These two values are always less than `EF_MAX_PACKETS` to ensure that neither the transmit or receive paths can starve the other of packet buffers. Refer to [Parameter Reference on page 193](#) for detailed descriptions of these per stack variables.

The example Onload stack has the following default environment variable values:

```
EF_MAX_PACKETS: 32768  
EF_MAX_RX_PACKETS: 24576  
EF_MAX_TX_PACKETS: 24576
```

The `onload_stackdump lots` command identifies packet buffer allocation and the onset of a memory pressure state:

```
pkt_bufs: size=2048 max=32768 alloc=24576 free=32 async=0 CRITICAL  
pkt_bufs: rx=24544 rx_ring=9 rx_queued=24535
```

There are potentially 32768 packet buffers available and the stack has allocated (used) 24576 packet buffers.

In the socket receive buffers there are 24544 packets buffers waiting to be processed by the application - this is approaching the `EF_MAX_RX_PACKETS` limit and is the reason the `CRITICAL` flag is present i.e. the Onload stack is under memory pressure. Only 9 packet buffers are available to the receive descriptor ring.

Onload will aim to keep the RX descriptor ring full at all times. If there are not enough available packet buffers to refill the RX descriptor ring this is indicated by the `LOW` memory pressure flag.

The `onload_stackdump lots` command will also identify the number of memory pressure events and number of packets dropped when Onload fails to allocate a packet buffer on the receive path.

```
memory_pressure_enter: 1  
memory_pressure_drops: 22096
```

The `memory_pressure` enter/exit counters count the number of times Onload enters/exits a state when it is trying to refill the receive queue (`rxq`) when the adapter runs out of packet buffers.

## Controlling Onload Packet Buffer Use

A number of environment variables control the packet buffer allocation on a per stack basis. Refer to [Parameter Reference on page 193](#) for a description of `EF_MAX_PACKETS`.

Unless explicitly configured by the user, EF\_MAX\_RX\_PACKETS and EF\_MAX\_TX\_PACKETS will be automatically set to 75% of the EF\_MAX\_PACKETS value. This ensures that sufficient buffers are available to both receive and transmit. The EF\_MAX\_RX\_PACKETS and EF\_MAX\_TX\_PACKETS are not typically configured by the user.

If an application requires more packet buffers than the maximum configured, then EF\_MAX\_PACKETS may be increased to meet demand, however it should be recognized that larger packet buffer queues increase cache footprint which can lead to reduced throughput and increased latency.

EF\_MAX\_PACKETS is the maximum number of packet buffers that could be used by the stack. Setting EF\_MAX\_RX\_PACKETS to a value greater than EF\_MAX\_PACKETS effectively means that all packet buffers (EF\_MAX\_PACKETS) allocated to the stack will be used for RX - with nothing left for TX. The safest method is to only increase EF\_MAX\_PACKETS which keeps the RX and TX packet buffers values at 75% of this value.

## 11.7 Configuring Scalable Packet Buffers

Using the Scalable Packet Buffer Mode Onload stacks are bound to virtual functions (VFs) and provide a PCI SR-IOV compliant means to provide memory protection and translation. VFs employ the kernel IOMMU.

Refer to [Chapter 13](#) and [Scalable Packet Buffer Mode on page 167](#) for 32-bit kernel limitations.

### Procedure:

- [Step 1. Platform Support on page 128](#)
- [Step 2. BIOS and Linux Kernel Configuration on page 129](#)
- [Step 3. Update adapter firmware and enable SR-IOV on page 130](#)
- [Step 4. Enable VFs for Onload on page 131](#)
- [Step 5. Check PCIe VF Configuration on page 131](#)
- [Step 6. Check VFs in onload\\_stackdump on page 131](#)

### Step 1. Platform Support

Scalable Packet Buffer Mode is implemented using SR-IOV. There were several kernel bugs in early incarnations of SR-IOV support, up to and including kernel.org 2.6.34. The fixes have been back-ported to recent Red Hat kernels. Users are advised to enable scalable packet buffer mode on Red Hat kernel 2.6.32-131.0.15 or later, or kernel.org 2.6.35 or later.

- The system hardware must have an IOMMU and this must be enabled in the BIOS.

- The kernel must be compiled with support for IOMMU and kernel command line options are required to select the IOMMU mode.
- The kernel must be compiled with support for SR-IOV APIs (CONFIG\_PCI\_IOV).
- SR-IOV must be enabled on the network adapter using the sfboot utility.
- When more than 6 VFs are needed, the system hardware and kernel must support PCIe Alternative Requester ID (ARI) - a PCIe Gen 2 feature.
- Onload options EF\_PACKET\_BUFFER\_MODE=1 must be set in the environment.
- The sfc driver module option max\_vfs should be set to the required number of VFs.



**NOTE:** The Scalable Packet Buffer feature can be susceptible to known kernel issues observed on RHEL6 and SLES 11. (See <http://www.spinics.net/lists/linux-pci/msg10480.html> for details. The condition can result in an unresponsive server if intel\_iommu has been enabled in the grub.conf file, as per the procedure at [Step 2. BIOS and Linux Kernel Configuration on page 129](#), and if the Solarflare sfc\_resource driver is reloaded. This issue has been addressed in newer kernels.

## Step 2. BIOS and Linux Kernel Configuration

To use SR-IOV, hardware virtualization must be enabled. Refer to RedHat Enabling Intel VT-x and AMD-V Virtualization in BIOS for more information. Take care to enable VT-d as well as VT on an Intel platform.

To verify that the extensions have been correctly enabled refer to RedHat Verifying virtualization extensions. For best kernel configuration performance and to avoid kernel bugs exhibited when IOMMU is enabled for all devices, Solarflare recommend the kernel is configured to use the IOMMU in pass-through mode - append the following lines to kernel line in the /boot/grub/grub.conf file:

On an Intel system:

```
intel_iommu=on iommu=on,pt
```

On an AMD system:

```
amd_iommu=on, iommu=on,pt
```

In pass-through mode the IOMMU is bypassed for regular devices. Refer to [Red Hat: PCI passthrough](#) for more information.



**NOTE:** Realtime (-rt) kernel patches are not currently compatible with IOMMUs (Red Hat MRG kernels are compiled with CONFIG\_PCI\_IOV disabled). It is possible to use scalable packet buffer mode on some systems without IOMMU support, but in an insecure mode. In this configuration the IOMMU is bypassed, and there is no checking of DMA addresses provided by Onload in user-space. Bugs or mis-behavior of user-space code can compromise the system.

To enable this insecure mode, set the Onload module option unsafe\_sriov\_without\_iommu=1 for the sfc\_resource kernel module.

Linux MRG users are urged to use MRGu2 and kernel 3.2.33-rt50.66.el6rt.x86\_64

or later to avoid known issues and limitations of earlier versions.

The `unsafe_sriov_without_iommu` option is obsoleted in OpenOnload 201210. It is replaced by physical addressing mode - see [Physical Addressing Mode on page 132](#) for details.

### Step 3. Update adapter firmware and enable SR-IOV

- 1 Download and install the Solarflare Linux Utilities RPM from [support.solarflare.com](http://support.solarflare.com) and unzip the utilities file to reveal the RPM:
- 2 Install the RPM:  
`# rpm -Uvh sfutils-<version>.rpm`
- 3 Identify the current firmware version on the adapter:  
`# sfupdate`
- 4 Upgrade the adapter firmware with `sfupdate`:  
`# sfupdate --write`  
 Full instructions on using `sfupdate` can be found in the Solarflare Network Server Adapter User Guide.
- 5 Use `sfboot` to enable SR-IOV and enable the VFs. You can enable up to 127 VFs per port, but the host BIOS may only be able to support a smaller number. The following example will configure 16 VFs on each Solarflare port:  
`# sfboot sriov=enabled vf-count=16 vf-msix-limit=1`

| Option                                        | Default Value | Description                                                                 |
|-----------------------------------------------|---------------|-----------------------------------------------------------------------------|
| <code>sriov=&lt;enabled   disabled&gt;</code> | Disabled      | Enable/Disable hardware SRIOV support                                       |
| <code>vf-count=&lt;n&gt;</code>               | 127           | Number of virtual functions advertised per port. <i>See the note below.</i> |
| <code>vf-msix-limit=&lt;n&gt;</code>          | 1             | Number of MSI-X interrupts per VF                                           |

- 6 It is necessary to reboot the server following changes using `sfboot` and `sfupdate`.



**NOTE:** Enabling all 127 VFs per port with more than one MSI-X interrupt per VF may not be supported by the host BIOS. If the BIOS doesn't support this then you may get 127 VFs on one port and no VFs on the other port. You should contact your BIOS vendor for an upgrade or reduce the VF count.



**NOTE:** On Red Hat 5 servers the vf-count should not exceed 32.

**NOTE:** VF allocation must be symmetric across all Solarflare interfaces.

## Step 4. Enable VFs for Onload

```
#export EF_PACKET_BUFFER_MODE=1
```

The sfc driver module `max_vfs` should specify the number of required VFs. The driver module option can be set in a user-created file (e.g. `sfc.conf`) in the `/etc/modprobe.d` directory:

```
options sfc max_vfs=N
```

Refer to [Parameter Reference on page 193](#) for other values.

## Step 5. Check PCIe VF Configuration

The network adapter sfc driver will initialize the VFs, which can be displayed by the `lspci` command:

```
# lspci -d 1924:
```

```
05:00.0 Ethernet controller: Solarflare Communications SFC9020 [Solarflare]
05:00.1 Ethernet controller: Solarflare Communications SFC9020 [Solarflare]
05:00.2 Ethernet controller: Solarflare Communications SFC9020 Virtual Function
[Solarflare]
05:00.3 Ethernet controller: Solarflare Communications SFC9020 Virtual Function
[Solarflare]
05:00.4 Ethernet controller: Solarflare Communications SFC9020 Virtual Function
[Solarflare]
05:00.5 Ethernet controller: Solarflare Communications SFC9020 Virtual Function
[Solarflare]
05:00.6 Ethernet controller: Solarflare Communications SFC9020 Virtual Function
[Solarflare]
05:00.7 Ethernet controller: Solarflare Communications SFC9020 Virtual Function
[Solarflare]
05:01.0 Ethernet controller: Solarflare Communications SFC9020 Virtual Function
[Solarflare]
05:01.1 Ethernet controller: Solarflare Communications SFC9020 Virtual Function
[Solarflare]
```

The `lspci` example output above identifies one physical function per physical port and the virtual functions (four for each port) of a single Solarflare dual-port network adapter.

## Step 6. Check VFs in `onload_stackdump`

The `onload_stackdump netif` command will identify VFs being used by Onload stacks as in the following example:

```
# onload_stackdump netif
ci_netif_dump: stack=0 name=
    ver=201109 uid=0 pid=3354
    lock=10000000 UNLOCKED  nics=3 primed=3
    sock_bufs: max=1024 n_allocated=4
    pkt_bufs: size=2048 max=32768 alloc=1152 free=128 async=0
    pkt_bufs: rx=1024 rx_ring=1024 rx_queued=0
    pkt_bufs: tx=0 tx_ring=0 tx_oflow=0 tx_other=0
    time: netif=3df7d2 poll=3df7d2 now=3df7d2 (diff=0.000sec)
ci_netif_dump_vi: stack=0 intf=0 vi=67 dev=0000:05:01.0 hw=0C0
evq: cap=2048 current=8 is_32_evs=0 is_ev=0
```

```
rxq: cap=511 lim=511 spc=15 level=496 total_desc=0
txq: cap=511 lim=511 spc=511 level=0 pkts=0 oflow_pkts=0
txq: tot_pkts=0 bytes=0
i_netif_dump_vi: stack=0 intf=1 vi=67 dev=0000:05:01.1 hw=0C0
evq: cap=2048 current=8 is_32_evs=0 is_ev=0
rxq: cap=511 lim=511 spc=15 level=496 total_desc=0
txq: cap=511 lim=511 spc=511 level=0 pkts=0 oflow_pkts=0
txq: tot_pkts=0 bytes=0
```

The output above corresponds to VFs advertised on the Solarflare network adapter interface identified using the `lspci` command - Refer to Step 5 above.

## 11.8 Physical Addressing Mode

Physical addressing mode is a Scalable Packet Buffer Mode that also allows Onload stacks to use large amounts of packet buffer memory (avoiding the limitations of the address translation table on the adapter), but without the requirement to configure and use SR-IOV virtual functions.

Physical addressing mode, does however, remove memory protection from the network adapter's access of packet buffers. Unprivileged user-level code is provided and directly handles the raw physical memory addresses of packets buffers. User-level code provides physical memory addresses directly to the adapter and therefore has the ability to direct the adapter to read or write arbitrary memory locations. A result of this is that a malicious or buggy application can compromise system integrity and security. OpenOnload versions earlier than onload-201210 and EnterpriseOnload-2.1.0.0 are limited to 1 million packet buffers. This limit was raised to 2 million packets buffers in 201210-u1 and EnterpriseOnload-2.1.0.1.

To enable physical addressing mode:

- 1 Ignore configuration steps 1-4 above.
- 2 Put the following option into a user-created .conf file in the /etc/modprobe.d directory:

```
options onload phys_mode_gid=<n>
```

Where setting <n> to be -1 allows all users to use physical addressing mode and setting to an integer x restricts use of physical addressing mode to the specific user group x.

- 3 Reload the Onload drivers  
`onload_tool reload`
- 4 Enable the Onload environment using EF\_PACKET\_BUFFER\_MODE 2 or 3.  
EF\_PACKET\_BUFFER\_MODE=2 is equivalent to mode 0, but uses physical addresses. Mode 3 uses SR-IOV VFs with physical addresses, but does not use the IOMMU for memory translation and protection. Refer to [Parameter Reference on page 193](#) for a complete description of all EF\_PACKET\_BUFFER\_MODE options.

## 11.9 Programmed I/O

PIO (programmed input/output) describes the process whereby data is directly transferred by the CPU to or from an I/O device. It is an alternative to bus master DMA techniques where data are transferred without CPU involvement.

Solarflare SFN7000, SFN8000 and X2 series adapters support TX PIO, where packets on the transmit path can be “pushed” to the adapter directly by the CPU. This improves the latency of transmitted packets but can cause a very small increase in CPU utilization. TX PIO is therefore especially useful for smaller packets.

The Onload TX PIO feature is enabled by default but can be disabled via the environment variable `EF_PIO`. An additional environment variable, `EF_PIO_THRESHOLD` specifies the size of the largest packet size that can use TX PIO.

The number of PIO buffers available depend on the adapter type being used and the number of PCIe Physical Functions (PF) exposed per port.

| Solarflare adapter | Total PIO buffers | Maximum per PF | PIO buffer size |
|--------------------|-------------------|----------------|-----------------|
| SFN7x02            | 16                | 16             | 2KB             |
| SFN7x22            | 16                | 16             | 2KB             |
| SFN7x24            | 32                | 16             | 2KB             |
| SFN7X42            | 32                | 16             | 2KB             |
| SFN8522            | 16                | 16             | 4KB             |
| X2522              | 16                | 16             | 4KB             |

For optimum performance, PIO buffers should be reserved for critical processes and other processes should set `EF_PIO` to 0 (zero).

The Onload stackdump utility provides additional counters to indicate the level of PIO use - see [TX PIO Counters on page 300](#) for details.

The Solarflare net driver will also use PIO buffers for non-accelerated sockets and this will reduce the number of PIO buffers available to Onload stacks. To prevent this set the driver module option `piobuf_size=0`. Driver module options can be set in a user-created file (`sfc.conf`) in the `/etc/modprobe.d` directory:

```
options sfc piobuf_size=0
```

An Onload stack requires one PIO buffer for each VI it creates. An Onload stack will create one VI for each physical interface that it uses.

When both accelerated and non-accelerated sockets are using PIO, the number of PIO buffers available to Onload stacks can be calculated from the available PIO regions:

|             | Description                                                                                                                                                                                                       | Example value |
|-------------|-------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|---------------|
| piobuf_size | driver module parameter                                                                                                                                                                                           | 256           |
| rss_cpus    | driver module parameter                                                                                                                                                                                           | 4             |
| region      | a chunk of memory 2048 bytes                                                                                                                                                                                      | 2048 bytes    |
| PF          | PCIe physical function. The SFN7000, SFN8000 or X2 series adapter can be partitioned to expose up to 8 PFs per physical port.<br><br>Refer to <a href="#">Onload and NIC Partitioning on page 145</a> for details | Default 1 PF  |

Using the above example values applied to a SFN7x22 adapter, each PF on the adapter requires:

$\text{piobuf\_size} * \text{rss\_cpus} * \text{num\_PFs} / \text{region size} = 0.5 \text{ regions}$  - (round up - so each port needs 1 region).

This leaves  $16-2 = 14$  regions for Onload stacks which also require one region per port, per stack. Therefore from our example we can have 7 onload stacks using PIO buffers.

PIO buffers are allocated on a first-come, first-served basis. The following warning might be observed when stacks cannot be allocated any more PIO buffers:

WARNING: all PIO bufs allocated to other stacks. Continuing without PIO.  
Use EF\_PIO to control this

To ensure more buffers are available for Onload, it is possible to prevent the net driver from using PIO buffers. This can be done by setting the sfc driver module option in a user-created file in the /etc/modprobe.d directory:

```
options sfc piobuf_size=0
```

Drivers should be reloaded for the changes to be effective:

```
# onload_tool reload
```

The per-stack EF\_PIO variable can also be unset for stacks where PIO buffers are not required.

## 11.10 CTPIO

### Introduction.

Onload-201805 introduces the Cut Through Programmed Input Output (CTPIO) feature to deliver the lowest send-path latency enabled by the architecture of the Solarflare X2 series adapters. Packets are streamed directly over the PCIe bus to the network port, bypassing the main adapter transmit datapath.

CTPIO coexists alongside the standard host-buffered (DMA) transmit mechanism ([Network Adapter Buffer Table Mode on page 123](#)) and legacy PIO buffering ([Programmed I/O on page 133](#)). From an Onload VI, traffic using all three methods can be mixed on a frame-by-frame basis and per frame ordering is maintained. CTPIO delivers the lowest transmit latency.

### Capabilities

The Solarflare adapter supports up to 2048 VIs, and all VIs can transmit using CTPIO. However, only one CTPIO packet, per adapter physical port, can be pushed at a time. When multiple VIs are mapped to the same physical port, a CTPIO push in progress will continue undisturbed, whilst another push attempt, overlapping the first, will fail with the send falling back to use the normal DMA transmit datapath.

The adapter can tolerate back-to-back bursts of CTPIO frames from a VI. An Onload stack creates a VI for each physical port that it uses.



**NOTE:** Solarflare X2 series adapters support CTPIO on a maximum 4 physical ports.

### CTPIO - Requirements

- CTPIO is a feature of the Solarflare X2 series of adapters. On the X2 models, CTPIO is enabled by default.
- The minimum adapter driver and firmware versions are identified below:

```
# ethtool -i <interface>
driver: sfc
version: 4.13.1.1034
firmware-version: 7.1.1.1007 rx1 tx1
```

- CTPIO can be used with all adapter firmware variant settings apart from capture-packed-stream.

Because CTPIO bypasses the main adapter datapath, packets sent by CTPIO cannot be looped back in hardware. As a result, CTPIO is not enabled by default on interfaces running full-featured firmware. This behavior can be overridden using a configuration variable. See [EF\\_CTPIO\\_SWITCH\\_BYPASS on page 198](#).

- CTPIO can be used with **Onload 201805** and later versions.

## CTPIO - Modes

The CTPIO feature can be used in three modes:

**1** *cut-through (ct)*

Lowest latency. A packet is transmitted onto the network as it is being streamed across the PCIe bus. The adapter starts transmitting the packet even before the entire packet has been delivered over the PCIe bus.

**2** *store-and-forward (sf)*

The packet is buffered on the adapter before transmitting onto the network. The adapter only transmits when the whole packet has been delivered over the PCIe bus.

**3** *store-and-forward-with-poison-disabled (sf-np)*

As for [2], but guaranteed that packets are never poisoned. Invalid packets are not transmitted on the wire. **This is the default mode for Onload.**

**CAUTION:** When [3] (sf-np) is enabled on any VI, all VIs are placed into this mode.



## CTPIO Frame Length

| Frame                   | Length                                |
|-------------------------|---------------------------------------|
| Maximum CTPIO frame     | 4092 bytes                            |
| Minimum CTPIO frame     | 29 bytes                              |
| Frame sizes 29-59 bytes | Are padded to 60 bytes by CTPIO logic |

## Cost of CTPIO

The very low-latency CTPIO transmit path comes at a sacrifice of some of the adapter acceleration features:

The following adapter features are not available to packets sent via CTPIO.

| Feature              | Restriction                                          |
|----------------------|------------------------------------------------------|
| no checksum offloads | Checksums must be done in the host.                  |
| no pacing            | Packet is sent as soon as last descriptor is posted. |
| no switch loopback   | No HW loopback of packets to local receivers.        |

| Feature                                | Restriction                                                                                                                                              |
|----------------------------------------|----------------------------------------------------------------------------------------------------------------------------------------------------------|
| no filter drop                         | No loopback packets to local receivers and CTPIO packets are not subject to any TX drop filters.                                                         |
| no flow control<br>no Qbb flow control | CTPIO traffic cannot be subject to pause frames or priority flow control measures.<br><br>Pause frames received at the CTPIO sender will have no effect. |

## Using CTPIO with Onload

On the Solarflare X2 series adapter, CTPIO is enabled by default in sf-np mode. The following Onload environment variables are used to configure CTPIO:

| EF Variable            | Settings                                                                                                                          |
|------------------------|-----------------------------------------------------------------------------------------------------------------------------------|
| EF_CTPIO               | 0 disable                                                                                                                         |
|                        | 1 enable (default)                                                                                                                |
|                        | 2 enable, fail if not available                                                                                                   |
| EF_CTPIO_MODE          | ct cut-through mode<br>sf store-and-forward mode<br>sf-np store-and-forward-no-poison (default)                                   |
| EF_CTPIO_MAX_FRAME_LEN | integer value<br><br>Packets with length exceeding this value are not sent via CTPIO, but are sent using the legacy DMA datapath. |

## Latency Profile

Onload-201805 includes a new low latency profile that enables CTPIO in cut-through mode to deliver lowest CTPIO latency:

```
# onload --profile=latency-best <application, args>
```

## Using CTPIO with TCPDirect

On the Solarflare X2 series adapter, CTPIO is enabled by default in sf-np mode. The following TCPDirect attributes are used to configure CTPIO:

| EF Variable | Settings                                    |
|-------------|---------------------------------------------|
| ctpio       | 0 disable                                   |
|             | 1 enable (default)                          |
|             | 2 enable, warn if not available             |
|             | 3 enable, fail if not available             |
| ctpio_mode  | ct cut-through mode                         |
|             | sf store-and-forward mode                   |
|             | sf-np store-and-forward-no-poison (default) |

For further details, refer to the *TCPDirect User Guide* (SF-116303-CD).

## Using CTPIO with ef\_vi

The OpenOnload-201805 distribution includes an example application using CTPIO with ef\_vi:

```
openonload/src/tests/rtt/rtt_efvi.c.
```

When OpenOnload is installed the test application is found at the following location:

```
/openonload-201805/build/gnu_x86_64/tests/rtt
```

The following sequence is required to send via CTPIO

- 1 When allocating a VI, ef\_vi\_alloc\_from\_pd(), set the EF\_VI\_TX\_CTPIO flag. Also set the TX timestamping flag if required.
- 2 To initiate a send, form a complete Ethernet frame (excluding FCS) in host memory. Initiate the send with ef\_vi\_transmit\_ctpio() or ef\_vi\_transmitv\_ctpio().
- 3 Post a fall-back descriptor using ef\_vi\_transmit\_ctpioFallback() or ef\_vi\_transmitv\_ctpioFallback(). These calls are used just like the standard DMA send calls (ef\_vi\_transmit() etc.), and so must be provided with a copy of the frame in registered memory.
- 4 A TX completion event is returned to the host application regardless of whether the frame is sent via CTPIO or the legacy DMA send method.

The posting of a fall-back descriptor is not on the latency critical path, provided the CTPIO operation succeeds, however it should be posted before posting any further sends on the same VI.

For further details, refer to the *ef\_vi User Guide* (SF-114063-CD).

## Latency Tests

For benchmark latency tests using CTPIO refer to the [Low Latency Quickstart Guide on page 4](#).

Example command lines for Onload 201805 **rtt** benchmark test application. The application source code can be found in:

```
ool2018/openonload-201805/src/tests/rtt
```

The application binary can be found in:

```
ool2018/openonload-201805/build/gnu_x86_64/tests/rtt
```

- on server1:  
`./rtt pong efvi:tx=ctpio,intf=<interface>`
- on server2:  
`./rtt ping efvi:tx=ctpio,intf=<interface> | ef_vi/stats`  
rtt produces raw output which can be piped to file.

## CTPIO Timestamps

TX timestamps are returned with TX completion events to the VI event queue.

## CTPIO Stats

The adapter driver will expose the following per-adapter CTPIO counters via ethtool. Counts are aggregated for all adapter ports.

```
# ethtool -S <interface> | grep ctpio
```

| Stats                    | Description                                                                                                                                                       |
|--------------------------|-------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| ctpio_vi_busyFallback    | When a CTPIO push occurs from a VI, but the VI DMA datapath is still busy with packets in flight or waiting to be sent. The packet is sent over the DMA datapath. |
| ctpio_long_write_success | Host wrote excess data beyond 32-byte boundary after frame end, but the CTPIO send was successful.                                                                |
| ctpio_missing_dbell_fail | When CTPIO push is not accompanied by a TX doorbell.                                                                                                              |
| ctpio_overflow_fail      | When the host pushes packet bytes too fast and overflows the CTPIO buffer.                                                                                        |
| ctpio_underflow_fail     | When the host fails to push packet bytes fast enough to match the adapter port speed.<br><br>The packet is truncated and data transmitted as a poisoned packet.   |

| Stats                     | Description                                                                                                                                                                                                                                                                              |
|---------------------------|------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| ctpio_timeout_fail        | When host fails to send all bytes to complete the packet to be sent by CTPIO before the VI inactivity timer expires.<br><br>The packet is truncated and data transmitted as a poisoned packet.                                                                                           |
| ctpio_noncontig_wr_fail   | A non-sequential address (for packet data) is encountered during CTPIO, caused when packet data is sent over PCIe interface as out-of-order or with gaps.<br><br>Packet is truncated and transmitted as a poisoned packet.                                                               |
| ctpio_frm_clobber_fail    | When a CTPIO push from one VI would have ‘clobbered’ a push already in progress by the same VI or another VI. One or both packets are sent over the DMA datapath - no packets are dropped.                                                                                               |
| ctpio_invalid_wr_fail     | If packet length is less than length advertised in the CTPIO header the CTPIO fails.<br><br>Or packet write is not aligned to (or multiple of) 32-bytes,<br><br>Packet maybe transmitted as a poisoned packet if sending has already started. Or erased if send has not already started. |
| ctpio_vi_clobberFallback  | When a CTPIO collided with another already in progress. In-progress packets succeeds, other is sent over the DMA datapath.                                                                                                                                                               |
| ctpio_unqualifiedFallback | VI is not enabled to send using CTPIO or first write is not the packet header.<br><br>Packet is discarded and sent over the DMA datapath.                                                                                                                                                |
| ctpio_runtFallback        | Length in header < 29 bytes.<br><br>Packet is discarded and sent over the DMA datapath.                                                                                                                                                                                                  |
| ctpio_success             | Number of successful CTPIO transmit events.                                                                                                                                                                                                                                              |

| Stats         | Description                                                                                                                                                                                                                                                                                                                                                                                                                  |
|---------------|------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| ctpioFallback | <p>Number of instances when CPIO push was rejected. This can occur because:</p> <ul style="list-style-type: none"> <li>the VI legacy datapath is still busy</li> <li>another CPIO is in progress</li> <li>VI is not enabled to use CPIO</li> <li>push request for illegal sized frame</li> </ul> <p>Fallback events do not result in poison packets. Rejected packets will fallback to use the legacy DMA datapath path.</p> |
| ctpioPoison   | <p>When the packet send has started, if CPIO has to abort this packet, a corrupt CRC is attached to the packet.</p> <p>A poisoned packet may be sent over the wire - depending on the mode.</p> <p>The packet will fallback to use the legacy DMA datapath.</p>                                                                                                                                                              |
| ctpioErase    | <p>Before a packet send has started. Corrupt, undersized or poisoned packets are erased from the CPIO datapath.</p> <p>Packet send will fallback to use the legacy DMA datapath.</p>                                                                                                                                                                                                                                         |

# 12

# Onload and Virtualization

## 12.1 Introduction

Using Onload from release 201502, accelerated applications are able to benefit from the inherent security through isolation, ease of deployment through migration and increased resource management supported by Linux virtualized environments.

This chapter identifies the following:

- [Onload and Linux KVM on page 142](#)
- [Onload and NIC Partitioning on page 145](#)
- [Onload in a Docker Container on page 146](#)

## 12.2 Overview

- Running Onload in a Virtual Machine (VM) or Docker Container means the Onload accelerated application benefits from the inherent isolation policy of the virtualized environment.
- There is minimal degradation of latency and throughput performance. Near native network I/O performance is possible because there is direct hardware access (no hardware emulation) with the guest kernel (and virtualization platform hypervisor) being bypassed.
- Multiple containers/virtual machines can co-exist on the same host and all are isolated from each other.

## 12.3 Onload and Linux KVM


This feature is supported on Solarflare SFN7000, SFN8000 and X2 series adapters.

OpenOnload includes support to accelerate applications running within Linux VMs on a KVM host. Each physical interface on the adapter can be exposed to the host as up to 16 PCIe physical functions (PF) and up to 240 virtual functions (VF). The adapter also supports up to 2048 MSI-X interrupts.

This support requires a VF (or PF) to be exposed directly into the Linux VM – KVM call this network configuration “Network hostdev”. Onload provides user-level access to the adapter via the VF in exactly the same way as is achieved on a non-virtualized Linux install. Firmware on the Solarflare SFN7000, SFN8000 and X2 series adapter configures layer 2 switching capability that supports the transport of network packets between PCI physical functions and virtual functions. This feature

supports the transport of network traffic between Onload applications running in different virtual machines. This allows traffic to be replicated across multiple functions and traffic transmitted from one VM can be received on another VM.

[Figure 14](#) below illustrates Onload deployed into the Linux KVM Network Hostdev architecture which exposes Virtual Functions (VF) directly to the VM guest. This configuration allows the Onload data path to fully bypass the host operating system and provides maximum acceleration for network traffic.

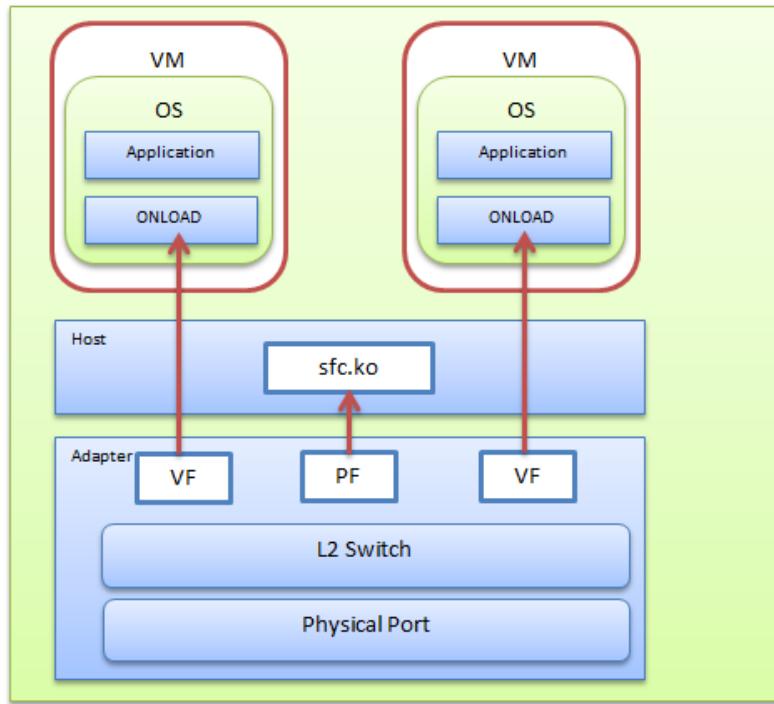

**Figure 14: Onload and Network Hostdev Configuration**

To deploy Onload in a Linux KVM:

- As detailed in the *Solarflare Server Adapter User Guide* (SF-103837-CD) chapter 7 *SRIOV*:
  - Install the Solarflare NET driver version 4.4.1.1017 (or later)
  - Ensure the adapter is using firmware version 4.4.2.1011 (or later)
  - Run sfboot to select the full-feature firmware variant, set the switch-mode and identify the required number of VFs:
 

```
# sfboot firmware-variant=full-feature switch-mode=sriov vf-count=4
```
  - Reboot the server, so the Linux KVM host can enumerate the VFs
- Follow the instructions in *Solarflare Server Adapter User Guide* (SF-103837-CD) section *KVM Libvirt network hostdev - Configuration* to:
  - Create a VM
  - Configure the VFs
  - Unbind VFs from the host

- Pass VFs to the VM

Example virsh command line and XML file configuration instructions are provided.

- Install Onload in the VM as in a non-virtualized host - see [OpenOnload - Installation on page 30](#).
- Set the sfc driver module option num\_vis to create the number of virtual interfaces. A VI is needed for each Onload stack created on a VF. Driver module options should be set in a user created file (e.g sfc.conf) in the /etc/modprobe.d directory.

```
options sfc num_vis=<NUM>
```




**NOTE:** When using Onload with multiple virtual functions (VF) it is necessary to set the Onload module option oof\_all\_ports\_required to zero. See [Module Options on page 187](#) for details.

The *Solarflare Server Adapter User Guide* is available from <https://support.solarflare.com/>.

## 12.4 Onload and NIC Partitioning

Each physical interface on a Solarflare SFN7000, SFN8000 and X2 series adapter can be exposed to the host as multiple PCIe physical functions (PF). Up to 16 PFs, each having a unique MAC address, are supported per adapter. To Onload, each PF represents a virtual adapter.

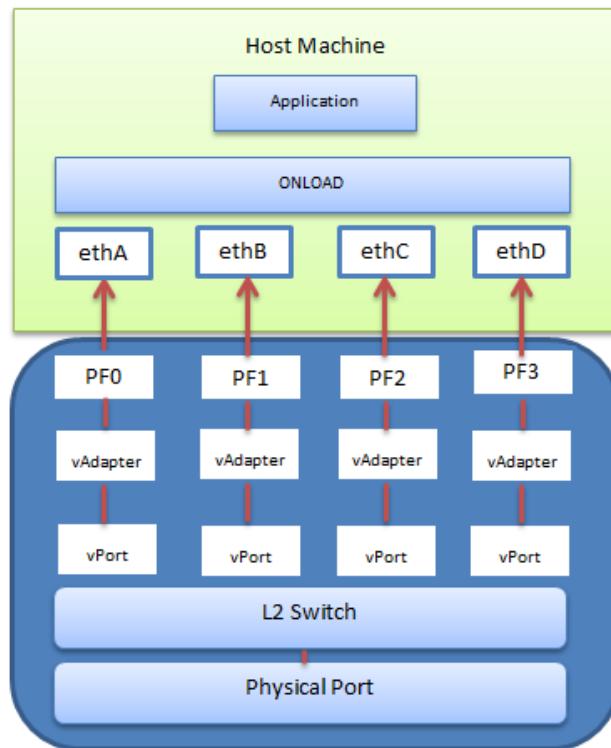

**Figure 15: Onload and NIC Partitioning**

On the adapter each PF is backed by a virtual adapter and virtual port - these components are created by the Solarflare NET driver when it finds a partitioned adapter. The PFs can be configured to transparently place traffic on separate VLANs (so each partition is on a separate broadcast domain).


To configure Onload to use the partitioned NIC:

- Ensure the adapter is using firmware version 4.4.2.1011 (minimum)
- Use sfboot to select the full-feature firmware variant
- Use sfboot to partition the NIC into multiple PFs
- Rebooting the host allows the firmware to partition the NIC into multiple PFs.
- To identify which physical port a network interface is using:  
`# cat /sys/class/net/eth<N>/device/physical_port`

For complete details of configuring NIC Partitioning refer to the *Solarflare Server Adapter User Guide* (SF-103837-CD) chapter 7 SR/IOV available from <https://support.solarflare.com/>.

## 12.5 Onload in a Docker Container

[Figure 16](#) illustrates the Onload deployment in a Docker container environment. Only the user-level components are created in the container. Onload in the container uses the Onload drivers installed on the host for network I/O. Network interfaces configured on the host are also visible and usable directly from the container.

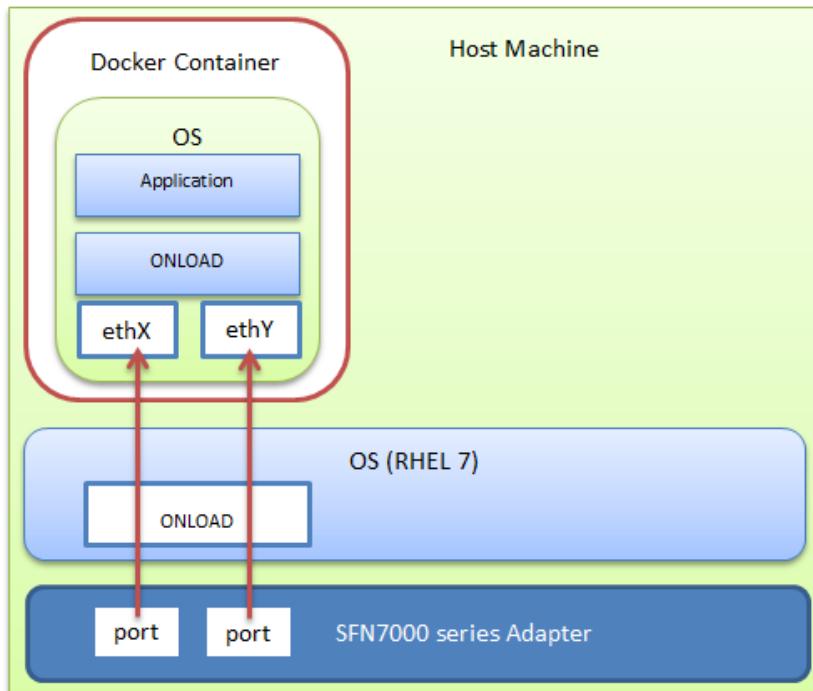

**Figure 16: Onload in a Docker Container**

In keeping with the containerization theory, it is envisaged that only a single Onload instance will be running in each container, however, there are no restrictions preventing multiple instances running in the same container.

## 12.6 Pre-Installation



**CAUTION:** This install procedure makes the following assumptions - ensure these components are created/installed before continuing:

- Docker is installed on the host server.
- Identical Onload versions must be installed on the host and in the container.
- The Onload installation in a container must match the Onload installation on the host. Configuration options such as any CI\_CFG\_\* options set in one environment must match those set in the other.

## 12.7 Installation

- 1 The docker run command will create a container named onload. The container is created from the centos:latest base image and a bash shell terminal will be started in the container.

If MACVLAN driver support and namespace support are required, refer to [MACVLAN Support](#) below before creating the container.

```
[root@host]# docker run --net=host --device=/dev/onload  
--device=/dev/onload_epoll --name=onload -it -v /src/openonload-201502.tgz:/tmp/  
openonload-201502.tgz centos:latest /bin/bash
```

The example above copies the openonload-201502.tgz file from the /src directory on the host and placed this file into /tmp in the container root file system. *All subsequent commands are run inside the container unless host is specified.*



**NOTE:** The directive --device=/dev/sfc\_char is required when used with ef\_vi.

- 2 Install required OS tools/packages in the container.

```
# yum install perl autoconf automake libtool tar gcc make net-tools ethtool
```

Different docker base images may require additional OS packages installed.

- 3 Unpack the tarball to build the openonload-<version> sub-directory.

```
# /usr/bin/tar -zxvf /tmp/openonload-201502.tgz
```



**NOTE:** It is not possible to use tools/utilities (such as tar) from the host file system on files in the container file system.

- 4 Change directory to the openonload-<version>/scripts directory

```
# cd /tmp/openonload-201502/scripts
```

- 5 Build the Onload user-level components in the container:

```
# ./onload_build --user
```

If the build process identifies any missing dependencies, return to step 2 to install missing components.

- 6 Install the Onload user-level components in the container:

```
# ./onload_install --userfiles --nobuild
```

The following warning may appear at the end of the install process, but it is **not necessary** to reload the drivers

```
onload_install: To load the newly installed drivers run: onload_tool reload
```

- 7 Check Onload installation

```
# onload  
OpenOnload 201502  
Copyright 2006-2012 Solarflare Communications, 2002-2005 Level 5  
Networks  
Built: Feb 5 2015 12:41:04 (release)  
Kernel module: 201502
```

usage:

```
onload [options] <command> <command-args>

options:
  --profile=<profile>      -- comma sep list of config profile(s)
  --force-profiles           -- profile settings override environment
  --no-app-handler          -- do not use app-specific settings
  --app=<app-name>          -- identify application to run under onload
  --version                  -- print version information
  -v                        -- verbose
  -h --help                  -- this help message
```

- 8 On the host, check that the container has been created and is running:

```
# docker ps -a
CONTAINER ID  IMAGE      COMMAND      CREATED     STATUS      PORTS      NAMES
e2a12a635359  centos:latest "/bin/bash"  15 seconds ago  Up 14 seconds  onload
```

- 9 Configure network interfaces.

Configure network adapter interfaces in the host. Interfaces will also be visible and usable from the container:

```
# ifconfig -a
```

- 10 Onload is now installed and ready to use in the container.

## MACVLAN Support

Onload from 201710 adds supports for network namespaces within Docker containers. Support is also included for the MACVLAN driver and MACVLAN sub-interfaces in container and standard host configurations.

The MACVLAN driver allows a single physical interface to be assigned multiple MAC addresses, creating sub-interfaces, each having a unique MAC address. The hardware address can be randomly generated by the driver, or supplied by the user.


An application running in a Docker container will bind to a specific sub-interface to gain direct access to the Solarflare adapter. Onload will accelerate network traffic between the container and the network.

Onload is not able to send packets directly between containers having sub-interfaces from the same parent. Such packets will be delivered between containers only via an underlying switch.

### MACVLAN - Interface Configurations

Onload will support:

- MACVLAN on top of a Solarflare adapter.
- Nested MACVLAN on top of MACVLAN on top of Solarflare adapter

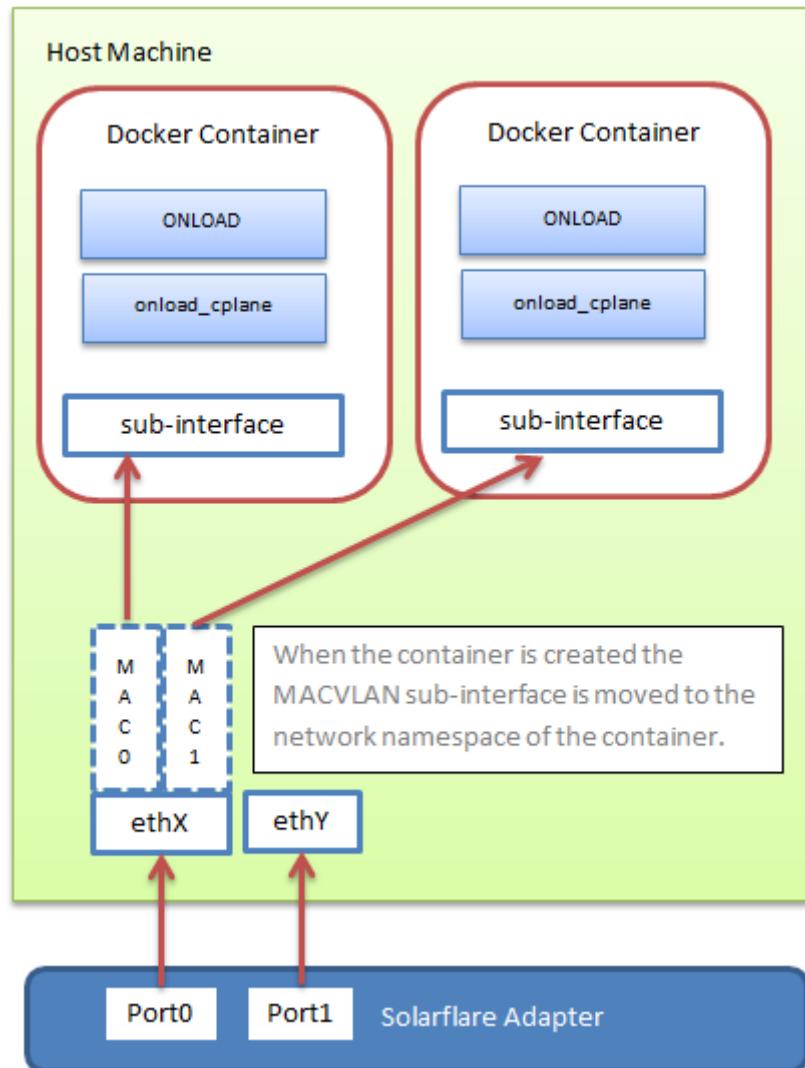

**Figure 17: Onload using MACVLAN sub-interfaces**

Traffic between containers may be delivered depending on the routing configuration/policy of the connected external switch and the configuration settings of `EF_MCAST_SEND` and `EF_MCAST_RECV_HW_LOOP`.

## Configure Docker Network - MACVLAN

- Before creating the Docker container, setup the Docker network:

```
docker network create
  -d MACVLAN
  -o parent=<interface>
  --subnet=<address>
  --ip-range=<address>
  my-network
```

Where <interface> is the physical Solarflare interface that becomes the parent interface to the created sub-interfaces.

When the network is created, only the parent interface needs to be present. When the container is created a sub-interface is created and moved to the network namespace of the container.

- Include the network when creating the Docker container:

```
docker run \
  -it \
  --net=my-network \
  --device=/dev/onload \
  --device=/dev/onload_epoll \
  --device=/dev/sfc_char \
  my-onload-image \
  /bin/bash
```

See the Installation section and examples above.

## 12.8 Create Onload Docker Image

To create a new docker image that includes the Onload installation prior to migration. *All commands are run on the host.*

- Identify the container (note CONTAINER ID or NAME)

```
# docker ps -a
CONTAINER ID  IMAGE          COMMAND       CREATED      STATUS      PORTS      NAMES
35bfeceb7022  centos:latest  "/bin/bash"  24 hours ago  Exited
onload
```

- Create new image (this example uses the NAME value)

```
# docker commit -m "installed onload 201502" onload onload:v1
89e95645d5ff1fa02880dee44b433ab577f5a2715daf944fd0b393620d8253f1
```

- List images

```
# docker images
REPOSITORY  TAG      IMAGE ID      CREATED      VIRTUAL SIZE
onload      v1       89e95645d5ff  28 seconds ago  486 MB
centos      latest   dade6cb4530a  3 days ago   224 MB
```

## 12.9 Migration

The docker save command can be used to archive a docker image which includes the Onload installation. This image can then be migrated to other servers having the following configuration:

- Docker is installed and docker service is running
- Host operating system RHEL 7
- The Onload version running on the host must be the same as the migrated image Onload version
- The target server does not need to have the same Solarflare adapter types installed.

- 1 Create a tar file of the container image:

```
# docker save -o <dir path to store image>/<name of image>.tar
<current name of image>
```

Example (store image tar file in host /tmp directory):

```
# docker save -o /tmp/dk-onload-201502.tar onload
```

- 2 The image tar file can then be copied to the target server where it can be loaded with the docker load command:

```
# docker load -i /<path to transferred file>/dk-onload-201502.tar
```

```
# docker images
REPOSITORY TAG IMAGE ID CREATED VIRTUAL SIZE
onload v1 303ec2d3e2b5 About an hour ago 486 MB
```

- 3 Create/run a container from the transferred image.

```
# docker run --net=host --device=/dev/onload --device=/dev/
onload_epoll --name=onload -it onload:v1 /bin/bash
```

When the container has been created, Onload will be running within it.



**NOTE:** The directive --device=/dev/onload\_cplane is required when used with onload-201606 and later releases.

## 12.10 Onload Docker Images

Onload images are not currently available from the default docker registry hub. Images may be made available if there is sufficient customer interest and requirement for this feature.

## 12.11 Copying Files Between Host and Container

The following example demonstrates how to copy files from the host to a container.  
All commands are run on the host.

- 1 Get the container Short Name (output truncated):

```
[root@hostname]# docker ps -a
CONTAINER ID
bd1ea8d5526c
```

- 2 Discover the container Long Name:

```
[root@hostname]# docker inspect -f '{{.Id}}' bd1ea8d5526c
bd1ea8d5526c55df4740de9ba5afe14ed28ac3d127901ccb1653e187962c5156
```

The container long name can also be discovered using the container name in place of the container identifier.

- 3 Copy a file to root file system (/tmp) on the container:

```
[root@hostname]# cp myfile.txt /var/lib/docker/devicemapper/mnt/
bd1ea8d5526c55df4740de9ba5afe14ed28ac3d127901ccb1653e187962c5156/
rootfs/tmp/myfile.txt
```

# 13 Limitations

*Users are advised to read the latest release\_notes distributed with the Onload release for a comprehensive list of Known Issues.*

## 13.1 Introduction

This chapter outlines configurations that Onload does not accelerate and ways in which Onload may change behavior of the system and applications. It is a key goal of Onload to be fully compatible with the behavior of the regular kernel stack, but there are some cases where behavior deviates.

### Resources

Onload uses certain physical resources on the network adapter. If these resources are exhausted, it is not possible to create new Onload stacks and not possible to accelerate new sockets or applications. The **onload\_stackdump** utility should be used to monitor hardware resources. Physical resources include:

#### Virtual NICs

Virtual NICs provide the interface by which a user level application sends and receives network traffic. When these are exhausted it is not possible to create new Onload stacks, meaning new applications cannot be accelerated. However, Solarflare network adapters support large numbers of Virtual NICs, and this resource is not typically the first to become unavailable.

#### Endpoints

Onload represents sockets and pipes as structures called endpoints. The maximum number of accelerated endpoints permitted by each Onload stack is set with the EF\_MAX\_ENDPOINTS variable. The stack limit can be reached sooner than expected when syn-receive states (the number of half-open connections) also consume endpoint buffers. Four syn-receive states consume one endpoint. The maximum number of syn-receive states can be limited using the EF\_TCP\_SYNRECV\_MAX variable.

## Filters

Filters are used to deliver packets received from the wire to the appropriate application. When filters are exhausted it is not possible to create new accelerated sockets. The general recommendation is that applications do not allocate more than 4096 filters - or applications should not create more than 4096 outgoing connections.

The limit does not apply to inbound connections to a listening socket.

## Buffer Table

The buffer table provides address protection and translation for DMA buffers. When all buffer resources are exhausted it is not possible to create new Onload stacks, and existing stacks are not able to allocate more DMA buffers.

When hardware resources are exhausted, normal operation of the system should continue, but it will not be possible to accelerate new sockets or applications.

## TX, RX Ring Buffer Size

Onload does not obey RX, TX ring sizes set in the kernel, but instead uses the values specified by EF\_RXQ\_SIZE and EF\_TXQ\_SIZE both default to 512.

## 13.2 Changes to Behavior

### Multithreaded Applications Termination

As Onload handles networking in the context of the calling application's thread it is recommended that applications ensure all threads exit cleanly when the process terminates. In particular the `exit()` function causes all threads to exit immediately - even those in critical sections. This can cause threads currently within the Onload stack holding the per stack lock to terminate without releasing this shared lock - this is particularly important for shared stacks where a process sharing the stack could 'hang' when Onload locks are not released.

An unclean exit can prevent the Onload kernel components from cleanly closing the application's TCP connections, a message similar to the following will be observed:

[onload] Stack [0] released with lock stuck

and any pending TCP connections will be reset. To prevent this, applications should always ensure that all threads exit cleanly.

## Thread Cancellation

Unexpected behavior can result when an accelerated application uses a `pthread_cancel` function. There is increased risk from multi-threaded applications or a PTHREAD\_CANCEL\_ASYNCHRONOUS thread calling a non-async safe function. Onload users are strongly advised that applications should not use `pthread_cancel` functions.

## Packet Capture

Packets delivered to an application via the accelerated path are not visible to the OS kernel. As a result, diagnostic tools such as `tcpdump` and `wireshark` do not capture accelerated packets. The Solarflare supplied `onload_tcpdump` does support capture of UDP and TCP packets from Onload stacks - Refer to [onload\\_tcpdump on page 330](#) for details.

## Firewalls

Packets delivered to an application via the accelerated path are not visible to the OS kernel. As a result, these packets are not visible to the kernel firewall (`iptables`) and therefore firewall rules will not be applied to accelerated traffic. The `onload_iptables` feature can be used to enforce Linux `iptables` rules as hardware filters on the Solarflare adapter, refer to [onload\\_iptables on page 335](#).



**NOTE:** Hardware filtering on the network adapter will ensure that accelerated applications receive traffic only on ports to which they are bound.

## System Tools - Socket Visibility

With the exception of 'listening' sockets, TCP sockets accelerated by Onload are not visible to the `netstat` tool. UDP sockets are visible to `netstat`.

Accelerated sockets appear in the `/proc` directory as symbolic links to `/dev/onload`. Tools that rely on `/proc` will probably not identify the associated file descriptors as being sockets. Refer to [Onload and File Descriptors, Stacks and Sockets on page 64](#) for more details.

Accelerated sockets can be inspected in detail with the Onload `onload_stackdump` tool, which exposes considerably more information than the regular system tools. For details of `onload_stackdump` refer to [onload\\_stackdump on page 299](#).

## Signals

If an application receives a `SIGSTOP` signal, it is possible for the processing of network events to be stalled in an Onload stack used by the application. This happens if the application is holding a lock inside the stack when the application is stopped, and if the application remains stopped for a long time, this may cause TCP connections to time-out.

A signal which terminates an application can prevent threads from exiting cleanly. Refer to [Multithreaded Applications Termination on page 154](#) for more information.

Undefined content may result when a signal handler uses the third argument (ucontext) and if the signal is postponed by Onload. To avoid this, use the Onload module option `safe_signals_and_exit=0` or use `EF_SIGNALS_NOPOSTPONE` to prevent specific signals being postponed by Onload.

## Onload and IP\_MULTICAST\_TTL

Onload will act in accordance with RFC 791 when it comes to the `IP_MULTICAST_TTL` setting. Using Onload, if `IP_MULTICAST_TTL=0`, packets will never be transmitted on the wire.

This differs from the Linux kernel where the following behavior has been observed:

Kernel - `IP_MULTICAST_TTL 0` - if there is a local listener, packets will not be transmitted on the wire.

Kernel - `IP_MULTICAST_TTL 0` - if there is NO local listener, packets will always be transmitted on the wire.

## Source/Policy Based Routing

### OpenOnload 201710

The Onload 201710 release includes support for source based policy routing for unicast and multicast packets. The following are supported:

- source ip address
- destination ip address
- outgoing interface (`SO_BINDTODEVICE`)
- TOS (Type of Service)

Policy rules based on other criteria are not supported and will be ignored by Onload.

### Earlier Onload versions

Onload versions before 201710 do not support source based or policy based routing. Whereas the Linux kernel will select a route and interface based on routing metrics, Onload will select any of the valid routes and Onload interfaces to a destination that are available.

The `EF_TCP_LISTEN_REPLY_BACK` environment variable provides a pseudo source-based routing solution. This option forces a reply to an incoming SYN to ignore routes and reply to the originating network interface.

Enabling this option will allow new TCP connections to be setup, but does not guarantee that all replies from an Onloaded application will go via the receiving Solarflare interface - and some re-ordering of the routing table may be needed to guarantee this OR an explicit route (to go via the Solarflare interface) should be added to the routing table.

## Routing Table Metrics

Onload, from version 201606, introduced support for routing table metrics, therefore, if two entries in the routing table will route traffic to the destination address, the entry with the best metric will be selected even if that means routing over a non-Solarflare interface.

## Reverse Path Filtering

Onload does not support Reverse Path Filtering. When Onload cannot route traffic to a remote endpoint over a Solarflare interface (no suitable route table entry), the traffic will be handled via the kernel.

## SO\_REUSEPORT

Onload vs. kernel behavior is described in [Chapter 7 on page 79](#).

## Thread Safe

Onload assumes that file descriptor modifications are thread-safe and that file descriptors are not concurrently modified by different threads. Concurrent access should not cause problems. This is different from kernel behaviour and users should set `EF_FDS_MT_SAFE=0` if the application is not considered thread-safe.

Similar consideration should be given when using `epoll()` where default concurrency control are disabled in Onload. Users should set  
`EF_EPOLL_MT_SAFE=0`.

## Control of Duplicated Sockets

When a socket has been duplicated, for example, using `fork()`, and where the parent fd is controlled by the kernel, the child fd controlled by Onload. Changes by the kernel using `fcntl()` to modify flags such as `O_NONBLOCK` will not be reflected in the Onload socket.

## UDP sockets shutdown()

When a kernel UDP socket is unconnected, a `shutdown()` call will prompt a blocking `recv()` operation on the socket to successfully complete. When an Onload UDP socket is unconnected, a `shutdown()` call does not successfully complete a blocking `recv()` call and thereafter the socket fd cannot be reused.

When a UDP socket is connected, kernel and Onload behavior is the same, a shutdown() call will prompt a blocking recv() operation to complete successfully.



**NOTE:** Kernel behavior may differ between different kernel versions.

## 13.3 Limits to Acceleration

### IP Fragmentation

Fragmented IP traffic is not accelerated by Onload on the receive side, and is instead received transparently via the kernel stack. IP fragmentation is rarely seen with TCP, because the TCP/IP stacks segment messages into MTU-sized IP datagrams. With UDP, datagrams are fragmented by IP if they are too large for the configured MTU. Refer to [Fragmented UDP on page 116](#) for a description of Onload behavior.

### Broadcast Traffic

Broadcast sends and receives function as normal but will not be accelerated.  
Multicast traffic can be accelerated.

### IPv6 Traffic

IPv6 traffic functions as normal but will not be accelerated.

### TCP NOP Options

Onload will silently discard packets that include IP header No Operation (NOP) options. Discards will not increment drop packet counters.

Onload will process packets that include NOP options in the TCP header, but the options themselves will be ignored.

### Raw Sockets

Raw Socket sends and receives function as normal but will not be accelerated.

### Socketpair and UNIX Domain Sockets

Onload will intercept, but does not accelerate the socketpair() system call. Sockets created with socketpair() will be handled by the kernel. Onload also does not accelerate UNIX domain sockets.

### UDP sendfile()

The UDP sendfile() method is not currently accelerated by Onload. When an Onload accelerated application calls sendfile() this will be handled seamlessly by the kernel.

## Statically Linked Applications

Onload will not accelerate statically linked applications. This is due to the method in which Onload intercepts libc function calls (using LD\_PRELOAD).

## Local Port Address

Onload is limited to OOF\_LOCAL\_ADDR\_MAX number of local interface addresses. A local address can identify a physical port or a VLAN, and multiple addresses can be assigned to a single interface where each address contributes to the maximum value. Users can allocate additional local interface addresses by increasing the compile time constant OOF\_LOCAL\_ADDR\_MAX in the /src/lib/efthrm/oof\_impl.h file and rebuilding Onload. In onload-201205 OOF\_LOCAL\_ADDR\_MAX was replaced by the onload module option max\_layer2\_interfaces.

## Bonding, Link aggregation

- Onload will only accelerate traffic over 802.3ad and active-backup bonds.
- Onload will not accelerate traffic if a bond contains any slave interfaces that are not Solarflare network devices.
- Adding a non-Solarflare network device to a bond that is currently accelerated by Onload may result in unexpected results such as connections being reset.
- Acceleration of bonded interfaces in Onload requires a kernel configured with sysfs support and a bonding module version of 3.0.0 or later.

In cases where Onload will not accelerate the traffic it will continue to work via the OS network stack.

## VLANs

- Onload will only accelerate traffic over VLANs where the master device is either a Solarflare network device, or over a bonded interface that is accelerated. i.e. If the VLAN's master is accelerated, then so is the VLAN interface itself.
- Nested VLAN tags are not accelerated, but will function as normal.
- The ifconfig command will return inconsistent statistics on VLAN interfaces (not master interface).
- When a Solarflare VLAN tagged interface is subsequently placed in a bond, the interface will continue to be accelerated, but the bond is not accelerated.

- Using Solarflare SFN5000 and SFN6000 series adapters, or using SFN7000, SFN8000 and X2 series adapters with the low-latency firmware variant, the following limitation applies:

Hardware filters installed by Onload on the adapter will only act on the IP address and port, but not the VLAN identifier. Therefore if the same IP address:port combination exists on different VLAN interfaces, only the first interface to install the filter will receive the traffic.

This limitation does not apply to SFN7000, SFN8000 and X2 series adapters using the full-feature firmware variant.

In cases where Onload will not accelerate the traffic it will continue to work via the OS network stack.

For more information and details and configuration options refer to the Solarflare Server Adapter User Guide section ‘Setting Up VLANs’.

## Ethernet Bridge Configuration

Onload does not currently support acceleration of interfaces added to an Ethernet bridge configured/added with the Linux brctl command.

## TCP RTO During Overload Conditions

Using Onload, under very high load conditions an increased frequency of TCP retransmission timeouts (RTOs) might be observed. This has the potential to occur when a thread servicing the stack is descheduled by the CPU whilst still holding the stack lock thus preventing another thread from accessing/polling the stack. A stack not being serviced means that ACKs are not received in a timely manner for packets sent, resulting in RTOs for the unacknowledged packets and increased jitter on the Onload stack.

Enabling the per stack environment variable `EF_INT_DRIVEN` can reduce the likelihood of this behavior and reduce jitter by ensuring the stack is serviced promptly. TCP with Jumbo Frames

When using jumbo frames with TCP, Onload will limit the MSS to 2048 bytes to ensure that segments do not exceed the size of internal packet buffers.

This should present no problems unless the remote end of a connection is unable to negotiate this lower MSS value.

## Transmission Path - Packet Loss

Occasionally Onload needs to send a packet, which would normally be accelerated, via the kernel. This occurs when there is no destination address entry in the ARP table or to prevent an ARP table entry from becoming stale.

By default, the Linux sysctl, `unres_qlen`, will enqueue 3 packets per unresolved address when waiting for an ARP reply, and on a server subject to a very high UDP or TCP traffic load this can result in packet loss on the transmit path and packets being discarded.

The `unres_qlen` value can be identified using the following command:

```
sysctl -a | grep unres_qlen
net.ipv4.neigh.eth2.unres_qlen = 3
net.ipv4.neigh.eth0.unres_qlen = 3
net.ipv4.neigh.lo.unres_qlen = 3
net.ipv4.neigh.default.unres_qlen = 3
```

Changes to the queue lengths can be made permanent in the `/etc/sysctl.conf` file. Solarflare recommend setting the `unres_qlen` value to at least 50.

If packet discards are suspected, this extremely rare condition can be indicated by the `cp_defer` counter produced by the `onload_stackedump_lots` command on UDP sockets or from the `unresolved_discards` counter in the Linux `/proc/net/stat/arp_cache` file.

## TCP - Unsupported Routing, Timed out Connections

If TCP packets are received over an Onload accelerated interface, but Onload cannot find a suitable Onload accelerated return route, no response will be sent resulting in the connection timing out.

## Application Clustering

For details of Application Clustering, refer to [Application Clustering on page 79](#).

- Onload matches the Linux kernel implementation such that clustering is not supported for multicast traffic and where setting of `SO_REUSEPORT` has the same effect as `SO_REUSEADDR`.
- Calling `connect()` on a TCP socket which was previously subject to a `bind()` call is not currently supported. This will be supported in a future release.
- An application cluster will not persist over adapter/server/driver reset. Before restarting the server or resetting the adapter the Onload applications should be terminated.
- The environment variable `EF_CLUSTER_RESTART` determines the behavior of the cluster when the application process is restarted - refer to `EF_CLUSTER_RESTART` in [Parameter Reference on page 193](#).
- If the number of sockets in a cluster is less than `EF_CLUSTER_SIZE`, a portion of the received traffic will be lost.

- There is little benefit when clustering involves a TCP loopback listening socket as connections will not be distributed amongst all threads. A non-loopback listening socket - which might occasionally get some loopback connections can benefit from Application Clustering.

## 13.4 epoll - Known Issues

Onload supports different implementations of epoll controlled by the EF\_UL\_EPOLL environment variable - see [Multiplexed I/O on page 71](#) for configuration details.

There are various limitations and differences in Onload vs. kernel behavior - refer to [Chapter 7 on page 71](#) for details.

- When using EF\_UL\_EPOLL=1 or 3, it has been identified that the behavior of `epoll_wait()` differs from the kernel when the EPOLLONESHOT event is requested, resulting in two ‘wakeup’ being observed, one from the kernel and one from Onload. This behavior is apparent on SOCK\_DGRAM and SOCK\_STREAM sockets for all combinations of EPOLLONESHOT, EPOLLIN and EPOLLOUT events. This applies for all types of accelerated sockets. EF\_EPOLL\_CTL\_FAST is enabled by default and this modifies the semantics of epoll. In particular, it buffers up calls to `epoll_ctl()` and only applies them when `epoll_wait()` is called. This can break applications that do `epoll_wait()` in one thread and `epoll_ctl()` in another thread. The issue only affects EF\_UL\_EPOLL=2 and the solution is to set EF\_EPOLL\_CTL\_FAST=0 if this is a problem. The described condition does not occur if EF\_UL\_EPOLL=1 or EF\_UL\_EPOLL=3.
- When EF\_EPOLL\_CTL\_FAST is enabled and an application is testing the readiness of an epoll file descriptor without actually calling `epoll_wait()`, for example by doing epoll within `epoll()` or epoll within `select()`, if one thread is calling `select()` or `epoll_wait()` and another thread is doing `epoll_ctl()`, then EF\_EPOLL\_CTL\_FAST should be disabled. This applies when using EF\_UL\_EPOLL 1, 2 or 3.

If the application is monitoring the state of the epoll file descriptor indirectly, e.g. by monitoring the epoll fd with poll, then EF\_EPOLL\_CTL\_FAST can cause issues and should be set to zero.

To force Onload to follow the kernel behavior when using the `epoll_wait()` call, the following variables should be set:

```
EF_UL_EPOLL=2  
EF_EPOLL_CTL_FAST=0  
EF_EPOLL_CTL_HANDOFF=0 (when using EF_UL_EPOLL=1)
```

- A socket should be removed from an epoll set only when all references to the socket are closed.

With EF\_UL\_EPOLL=1 (default) or EF\_UL\_EPOLL=3, a socket is removed from the epoll set if the file descriptor is closed, even if other references to the socket exist. This can cause problems if file descriptors are duplicated using `dup()`, `dup2()` or `fork()`. For example:

```
s = socket();
s2 = dup(s);
epoll_ctl(epoll_fd, EPOLL_CTL_ADD, s, ...);
close(s); /* socket referenced by s is removed from epoll set when using onload */
Workaround is set EF_UL_EPOLL=2.
```

- When Onload is unable to accelerate a connected socket, e.g. because no route to the destination exists which uses a Solarflare interface, the socket will be handed off to the kernel and is removed from the epoll set. Because the socket is no longer in the epoll set, attempts to modify the socket with `epoll_ctl()` will fail with the ENOENT (descriptor not present) error. The described condition does not occur if `EF_UL_EPOLL=1` or `3`.
- If an epoll file descriptor is passed to the `read()` or `write()` functions these will return a different errorcode than that reported by the kernel stack. This issue exists for all implementations of epoll.
- When EPOLLET is used and the event is ready, `epoll_wait()` is triggered by ANY event on the socket instead of the requested event. This issue should not affect application correctness.
- Users should be aware that if a server is overclocked the `epoll_wait()` timeout value will increase as CPU MHz increases resulting in unexpected timeout values. This has been observed on Intel based systems and when the Onload epoll implementation is `EF_UL_EPOLL=1` or `3`. Using `EF_UL_EPOLL=2` this behavior is not observed.
- On a spinning thread, if epoll acceleration is disabled by setting `EF_UL_EPOLL=0`, sockets on this thread will be handed off to the kernel, but latency will be worse than expected kernel socket latency.
- To ensure that non-accelerated file descriptors are checked in poll and select functions, the following options should be disabled (set to zero):
  - `EF_SELECT_FAST` and `EF_POLL_FAST`
  - When using `poll()` and `select()` calls, to ensure that non-accelerated file descriptors are checked when there are no events on any accelerated descriptors, set the following options:
    - `EF_POLL_FAST_USEC` and `EF_SELECT_FAST_USEC`, setting both to zero.

## Nested Epoll Sets

When an epoll set includes accelerated sockets and is nested inside another epoll set, the outer set may [1] not always get notified about socket readiness or [2] after a socket becomes ready, the state cannot be cleared. This limitation is known to affect `EF_UL_EPOLL=3`.


## Spinning - Timing Issues

Onload users should consider that as different software is being run, timings will be affected which can result in unexpected scheduling behaviour and memory use. Spinning applications, in particular, require a dedicated core per spinning Onload thread.

## 13.5 Configuration Issues

### Mixed Adapters Sharing a Broadcast Domain

Onload should not be used when Solarflare and non-Solarflare interfaces in the same network server are configured in the same broadcast domain<sup>1</sup> as depicted by the following diagram.

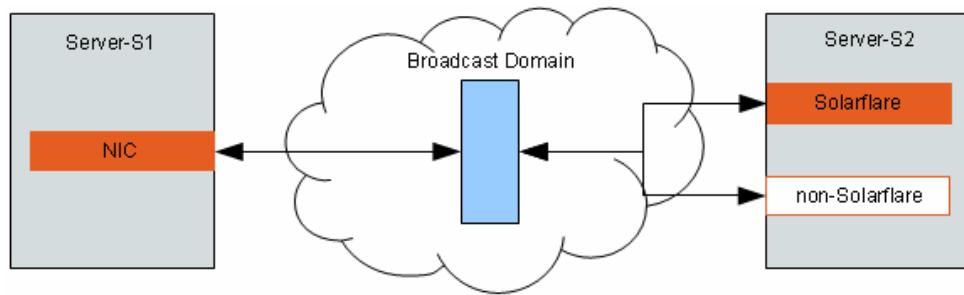

When an originating server (S1) sends an ARP request to a remote server (S2) having more than one interface within the same broadcast domain, ARP responses from S2 will be generated from all interfaces and it is non-deterministic which response the originator uses. When Onload detects this situation, it prompts a message identifying 'duplicate claim of ip address' to appear in the (S1) host syslog as a warning of potential problems.

#### Problem 1

Traffic from S1 to S2 may be delivered through either of the interfaces on S2, irrespective of the IP address used. This means that if one interface is accelerated by Onload and the other is not, you may or may not get acceleration.

To resolve the situation (for the current session) issue the following command:

```
echo 1 >/proc/sys/net/ipv4/conf/all/arp_ignore
```

or to resolve it permanently add the following line to the /etc/sysctl.conf file:

```
net.ipv4.conf.all.arp_ignore = 1
```

and run the sysctl command for this to be effective.

```
sysctl -p
```

These commands ensure that an interface will only respond to an ARP request when the IP address matches its own. Refer to the Linux documentation [Linux/Documentation/networking/ip-sysctl.txt](#) for further details.

---

1. A Broadcast domain can be a local network segment or VLAN.

## Problem 2

A more serious problem arises if one interface on S2 carries Onload accelerated TCP connections and another interface on the same host and same broadcast domain is non-Solarflare:

A TCP packet received on the non-Solarflare interface can result in accelerated TCP connections being reset by the kernel stack and therefore appear to the application as if TCP connections are being dropped/terminated at random.

To prevent this situation the Solarflare and non-Solarflare interfaces should not be configured in the same broadcast domain. The solution described for [Problem 1](#) above can reduce the frequency of [Problem 2](#), but does not eliminate it.

TCP packets can be directed to the wrong interface because:

- the originator S1 needs to refresh its ARP table for the destination IP address - so sends an ARP request and subsequently directs TCP packets to the non-Solarflare interface
- a switch within the broadcast domain broadcasts the TCP packets to all interfaces.

## Virtual Memory on 32 Bit Systems

On 32 bit Linux systems the amount of allocated virtual address space defaults, typically, to 128Mb which limits the number of Solarflare interfaces that can be configured. Virtual memory allocation can be identified in the /proc/meminfo file e.g.

```
grep Vmalloc /proc/meminfo
Vm allocTotal: 122880 kB
Vm allocUsed: 76380 kB
Vm allocChunk: 15600 kB
```

The Onload driver will attempt to map all PCI Base Address Registers for each Solarflare interface into virtual memory where each interface requires 16Mb.

Examination of the kernel logs in /var/log/messages at the point the Onload driver is loading, would reveal a memory allocation failure as in the following extract:

```
allocation failed: out of vmalloc space - use vmalloc=<size> to increase size.
[sfc efrm] Failed (-12) to map bar (16777216 bytes)
[sfc efrm] efrm_nic_add: ERROR: linux_efrm_nic_ctor failed (-12)
```

One solution is to use a 64 bit kernel. Another is to increase the virtual memory allocation on the 32 bit system by setting vmalloc size on the 'kernel line' in the /boot/grub/grub.conf file to 256, for example,

```
kernel /vmlinuz-2.6.18-238.el5 ro root=/dev/sda7 vmalloc=256M
```

The system must be rebooted for this change to take effect.

## IGMP Operation and Multicast Process Priority

It is important that the priority of processes using UDP multicast do not have a higher priority than the kernel thread handling the management of multicast group membership.

Failure to observe this could lead to the following situations:

- 1 Incorrect kernel IGMP operation.
- 2 The higher priority user process is able to effectively block the kernel thread and prevent it from identifying the multicast group to Onload which will react by dropping packets received for the multicast group.

A combination of indicators may identify this:

- ethtool reports good packets being received while multicast mismatch does not increase.
- ifconfig identifies data is being received.
- onload\_stackdump will show the rx\_discard\_mcast\_mismatch counter increasing.

Lowering the priority of the user process will remedy the situation and allow the multicast packets through Onload to the user process.

## Dynamic Loading

If the onload library libonload is opened with `dlopen()` and closed with `dlclose()` it can leave the application in an unpredictable state. Users are advised to use the `RTLD_NODELETE` flag to prevent the library from being unloaded when `dlclose()` is called.

## Scalable Packet Buffer Mode

Support for SR-IOV is disabled on 32-bit kernels, therefore the following features are not available on 32-bit kernels.

- Scalable Packet Buffer Mode (`EF_PACKET_BUFFER_MODE=1`)
- `ef_vi` with VFs

On some kernel versions, configuring the adapter to have a large number of VFs (via `sfboot`) can cause kernel panics. Affecting kernel versions in the range 3.0 to 3.3 inclusive, this is due to the large netlink messages that include information about network interfaces.

The problem can be avoided by limiting the total number of physical network interfaces, including VFs, to a maximum 30.

## SLES11 SR-IOV

It has been noted that some SLES11 kernels (3.1 and earlier) exhibit a bug, typically seen when loading Onload drivers, when running OpenOnload with SR-IOV and Intel IOMMUs. This bug has been fixed in more recent kernels 3.2 stable and 3.6.

## Huge Pages with IPC namespace

Huge page support should not be enabled if the application uses IPC namespaces and the CLONE\_NEWIPC flag. Failure to observe this may result in a segfault.

## Huge Pages with Shared Stacks

Processes having the same UID, which share an Onload stack, should not attempt to use huge pages. Refer to [Stack Sharing on page 78](#) for limitation details.

## Huge Pages - Size

When using huge pages, it is recommended to avoid setting the page size greater than 2 Mbyte. A failure to observe this could lead to Onload unable to allocate further buffer table space for packet buffers.

## Huge Pages - AMD IOMMU

Due to the AMD IOMMU not returning aligned PCI addresses, the use of huge pages on systems with AMD IOMMUs is not supported.

## Huge Pages and shmmni

Users should ensure that the number of system wide shared memory segments (shmmni) exceeds the number of huge pages required.

- To identify current shmmni setting:  
`# cat /proc/sys/kernel/shmmni`
- To set (no reboot required - but not permanent):  
`# echo 8000 > /proc/sys/kernel/shmmni`
- To set (permanent - reboot required):  
`# echo "kernel.shmmni=8000" >> /etc/sysctl.conf`

For example, if 4000 huge pages are required, increase the current shmmni value by 4000.

## Red Hat MRG 2 and SR-IOV

Solarflare do not recommend the use of SR-IOV or the IOMMU when using Onload on MRG2 systems due to a number of known kernel issues. Additionally, the following Onload features should not be used on MRG2u3:

- Scalable packet buffer mode (EF\_PACKET\_BUFFER\_MODE=1)
- ef\_vi with VFs

## PowerPC Architecture

- SR-IOV is not supported on PowerPC systems. Recommended setting is EF\_PACKET\_BUFFER\_MODE=0 or 2, but not 1 or 3.
- PowerPC architectures do not currently support PIO for reduced latency. EF\_PIO should be set to zero.

## Java 7 Applications - use of vfork()

Onload accelerated Java 7 applications that call vfork() should set the environment variable EF\_VFORK\_MODE=2 and thereafter the application should not create sockets or accelerated pipes in vfork() child before exec.

## PIO not supported in KVM/ESXi

Due to limitations with write-combine mapping in a virtual guest environment, PIO is not currently supported for Onload applications running in a virtual machine in KVM or ESXi.

Users should ensure that EF\_PIO is set to 0 for all Onload stacks running in VMs.

# 14

# Change History

This chapter provides a brief history of changes, additions and removals to Onload releases affecting Onload behavior and Onload environment variables.

- [Features on page 171](#)
- [Environment Variables on page 177](#)
- [Module Options on page 187](#)
- [Onload - Adapter Net Drivers on page 191](#)

The **OOL** column identifies the OpenOnload release supporting the feature. The **EOL** column identifies the EnterpriseOnload release supporting the feature (**NS** = not supported).

## 14.1 Mapping EnterpriseOnload/OpenOnload

The following table maps major EnterpriseOnload releases to the closest functionally equivalent OpenOnload release. Users should always also refer to the *Release Notes* and *Change Logs* to identify feature support in the Enterprise release.

OpenOnload	EnterpriseOnload
201011-u1	1.0
201109-u2	2.0
201310-u2	3.0
201502-u2	4.0
201606-u1	5.0

## 14.2 Onload - Adapter Net Drivers

Refer to [Onload - Adapter Net Drivers on page 191](#) for a list of net drivers used in OpenOnload and EnterpriseOnload distributions.

## 14.3 Features

Feature	OOL	EOL	Description/Notes
Onload adapter support	201805	NS	Onload support for X2 series adapters
CTPIO	201805	NS	Low latency transmit method. See <a href="#">CTPIO on page 135</a> .
Clustering and scalable filter improvements	201805	NS	Scalable filters can now be combined for both passive and active open connections and with RSS. Scalability limitations for kernel listening sockets can be avoided.
Shared local port improvements	201805	NS	Faster recycling, dynamic reservation to avoid exhaustion of the ephemeral port range.
Socket caching extensions	201805	NS	Common cache of sockets, per-process caching of descriptors. Targets applications such as NGINX, that spawn new processes reusing existing listening sockets.
EF_UL_EPOLL=3 performance	201805	NS	Benefits now possible in up to four epoll sets per socket.
CONFIG_RETPOLINE support	201710-u1.1	5.0.5	Support for kernels that have CONFIG_RETPOLINE enabled.
KTPI support	201710-u1	5.0.4	Support for kernels that have KTPI.
ScaleOut Onload	201710	NS	Onload licensed NIC that delivers efficiency of packet processing and throughput over latency.
Control Plane Server	201710	NS	onload_cp_server (user-space) process per namespace.
Namespaces	201710	NS	Support for Linux namespaces.
Source Based Routing	201710	NS	Source based routing - removes need for EF_TCP_LISTEN_REPLY_BACK.
MACVLAN	201710	NS	MACVLAN interfaces support in Docker containers.
bonding polling	201710	NS	oo_bond_poll_base, oo_bond_poll_peak renamed --bond_base_period and --bond_base_peak and are args to onload_cp_server.
TCPDirect GA version	201606-u1	5.0	Lightweight ultra-low-latency TCP/IP stack.
Extensions API	201606-u1	5.0	Support for <code>onload_socket_nonaccel()</code> - allocate a socket not accelerated by onload.
Routing table metrics	201606	5.0	Onload will use routing table metrics.

Feature	OOL	EOL	Description/Notes
Onload adapter support	201606	5.0	Onload support for SFN8000 series adapters
TCPDirect preview version	201606	NS	Lightweight ultra-low-latency TCP/IP stack
Extensions API	201606	5.0	Support for <code>onload_thread_get_spin()</code>
Control plane	201606	5.0	Now supplied as a separate binary module.
<code>CI_CFG_TEAMING, CI_CFG_MAX_REGISTER_INTERFACES</code>	201606	5.0	Effectively removed, as they are set at build time of the binary control plane module.
sfc_aoe driver	201606	5.0	ApplicationOnload™ driver no longer included in the Onload distribution or EOL 5.0 distribution.
Application Clustering	201405	4.0	201509 Remove the same port, same address limitation.
<code>CI_CFG_MAX_INTERFACES</code> <code>CI_CFG_MAX_REGISTER_INTERFACES</code>	201509	4.0	Increase default to 8 (previously 6). This remains a compile time option.
<code>onload_set_recv_filter()</code>	201509	4.0	UDP sockets calls is deprecated in 201509 and EOL 5.0.
Teaming driver	201509	5.0	Accelerate links aggregated using teamd and the teaming driver.
Transparent Proxy	201509	5.0	See <a href="#">Transparent Reverse Proxy Modes on page 110</a> .
Scalable Filters	201509	5.0	See <a href="#">Scalable Filters on page 108</a> .
<code>IP_TRANSPARENT</code>	201509	5.0	TCP socket option to allow a socket to be bound to a non-local address. See Scalable Filter modes.
<code>SO_PROTOCOL</code>	201502-u2	4.0	Socket option to retrieve a socket protocol as an integer.
Linux Docker Containers	201502	4.0	See <a href="#">Onload in a Docker Container on page 146</a>
Onload in KVM	201502	4.0	See <a href="#">Onload and Linux KVM on page 142</a>
Socket caching	201502	4.0	See <a href="#">Listen/Accept Sockets on page 104</a>
Remote Monitoring	201502	4.0	See <a href="#">Remote Monitoring on page 320</a>
Blacklist/Whitelist	201502	4.0	See <a href="#">Whitelist and Blacklist Interfaces on page 63</a>
TCP delegated send	201502	4.0	See <a href="#">Listen/Accept Sockets on page 104</a>

Feature	OOL	EOL	Description/Notes
Syn Cookies	201502	4.0	
Receive queue drop counters	201502	4.0	
Ubuntu/Debian supported	201502	4.0	See <a href="#">Hardware and Software Supported Platforms on page 23</a> for supported versions.
SIOCOUTQ	201405-u1	4.0	TCP socket ioctl that returns the amount of data not yet acknowledged.
SIOCOUTQNSD	201405-u1	4.0	TCP socket ioctl that returns the amount of data not yet sent.
ef_pd_interface_name()	201405-u1	4.0	Identifies the interface used by a protection domain.
ef_vi_prime()	201405-u1	4.0	Prime interrupts so can block on a file descriptor (including any virtual interface) until events are ready to be processed.
ef_filter_spec_set_tx_port_sniff()	201405-u1	4.0	New filter type to sniff TX traffic.
ONLOAD_SOF_TIMESTAMPING_STREAM	201405	4.0	Onload extension to the standard SO_TIMESTAMPING API to support hardware timestamps on TCP sockets.
onload_move_fd	201405	4.0	Move sockets between stacks.
SolarCapture Pro - application clustering	201405	4.0	Onload distribution includes the solar-clusterd daemon for SolarCapture Pro application clustering feature.
SO_REUSEPORT	201405	4.0	Allow multiple sockets to bind to the same port - supports the Application Clustering feature - see <a href="#">Application Clustering on page 79</a> .
HW Multicast Loopback	201405	4.0	Refer to <a href="#">Hardware Multicast Loopback on page 121</a> .
onload_ordered_epoll_wait()	201405	4.0	Wire order delivery of packets. Refer to <a href="#">Wire Order Delivery on page 75</a> .
onload_ordered_epoll_event()			
TCP SYN cookies	201405	4.0	Force use of TCP SYN cookies to protect against a SYN flood attack.
onload_tool disable_cstates	201405	-	Removed along with the sfc_tune driver.
sfc_aoe driver	201405	NS	ApplicationOnload™ driver included in the Onload distribution.

Feature	OOL	EOL	Description/Notes
SO_TIMESTAMPING	201310-u1	3.0	Socket option to receive hardware timestamps for received packets.
onload_fd_check_feature()	201310-u1	3.0	<a href="#">onload_fd_check_feature on page 260</a>
Multicast Replication	201310	3.0	<a href="#">Bonding, Link aggregation and Failover on page 80</a>
TX PIO	201310	3.0	<a href="#">Debug and Logging on page 84</a>
Large Buffer Table Support	201310	3.0	<a href="#">Large Buffer Table Support on page 123</a>
Templated Sends	201310	3.0	<a href="#">Templated Sends on page 286</a>
ONLOAD_MSG_WARM	201310	3.0	<a href="#">ONLOAD_MSG_WARM on page 103</a>
SO_TIMESTAMP	201310	3.0	Supported for TCP sockets
SO_TIMESTAMPNS			
dup3()	201310	3.0	Onload will intercept calls to create a copy of a file descriptor using dup3().
IP_ADD_SOURCE_MEMBERSHIP	201210-u1	3.0	Join the supplied multicast group on the given interface and accept data from the supplied source address.
IP_DROP_SOURCE_MEMBERSHIP	201210-u1	3.0	Drops membership to the given multicast group, interface and source address.
MCAST_JOIN_SOURCE_GROUP	201210-u1	3.0	Join a source specific group.
MCAST_LEAVE_SOURCE_GROUP	201210-u1	3.0	Leave a source specific group.
Huge pages support	201210	3.0	Packet buffers use huge pages. Controlled by EF_USE_HUGE_PAGES Default is 1 - use huge pages if available See <a href="#">Limitations on page 153</a>
onload_iptables	201210	3.0	Apply Linux iptables firewall rules or user-defined firewall rules to Solarflare interfaces

Feature	OOL	EOL	Description/Notes
onload_stackdump processes	201210	3.0	Show all accelerated processes by PID
onload_stackdump <b>threads</b>			Show CPU core accelerated process is running on
onload_stackdump env			Show environment variables - EF_VALIDATE_ENV
			The affinities option has been replaced with the <b>threads</b> option.
UDP sendmmsg()	201210	3.0	Send multiple msgs in a single function call
I/O Multiplexing	201210	3.0	Support for ppoll(), pselect() and epoll_pwait()
DKMS	201210	NS	OpenOnload available in DKMS RPM binary format
Removing zombie stacks	201205-u1	2.1.0.0	onload_stackdump -z kill will terminate stacks lingering after exit
Compatibility	201205-u1	2.1.0.0	Compatibility with RHEL6.3 and Linux 3.4.0
TCP striping	201205	2.1.0.0	Single TCP connection can use the full bandwidth of both ports on a Solarflare adapter
TCP loopback acceleration	201205	2.1.0.0	EF_TCP_CLIENT_LOOPBACK & EF_TCP_SERVER_LOOPBACK
TCP delayed acknowledgments	201205	2.1.0.0	EF_DYNAMIC_ACK_THRESH
TCP reset following RTO	201205	2.1.0.0	EF_TCP_RST_DELAYED_CONN
Configure control plane tables	201205	2.1.0.0	max_layer_2_interface max_neighs max_routes
Onload adapter support	201109-u2	2.0.0.0	Onload support for SFN5322F & SFN6x22F
Accelerate pipe2()	201109-u2	2.0.0.0	Accelerate pipe2() function call
SOCK_NONBLOCK SOCK_CLOEXEC	201109-u2	2.0.0.0	TCP socket types
Extensions API	201109-u2	2.0.0.0	Support for onload_thread_set_spin()
Onload_tcpdump	201109	2.0.0.0	
Scalable Packet Buffer	201109	2.0.0.0	EF_PACKET_BUFFER_MODE=1
Zero-Copy UDP RX	201109	2.0.0.0	
Zero-Copy TCP TX	201109	2.0.0.0	

Feature	OOL	EOL	Description/Notes
Receive filtering	201109	2.0.0.0	
TCP_QUICKACK	201109	2.0.0.0	setsockopt() option
Benchmark tool sfnettest	201109	2.0.0.0	Support for sfnt-stream
Extensions API	201104	2.0.0.0	Initial publication
SO_BINDTODEVICE SO_TIMESTAMP SO_TIMESTAMPNS	201104	2.0.0.0	setsockopt() and getsockopt() options
Accelerated pipe()	201104	2.0.0.0	Accelerate pipe() function call
UDP recvmsg()	201104	2.0.0.0	Deliver multiple msgs in a single function call
Benchmark tool sfnettest	201104	2.0.0.0	Supports only sfnt-pingpong

## 14.4 Environment Variables

Variable	OOL	EOL	Changed	Notes
EF_CTPIO	201805	NS		Whether the CTPIO low-latency transmit mechanism is enabled.
EF_CTPIO_CT_THRESH	201805	NS		The cut-through threshold for CTPIO transmits.
EF_CTPIO_MAX_FRAME_LEN	201805	NS		The maximum frame length for CTPIO transmits.
EF_CTPIO_MODE	201805	NS		The CTPIO transmission mode.
EF_KERNEL_PACKETS_BATCH_SIZE	201805	NS		The batch size for kernel packet injection.
EF_KERNEL_PACKETS_TIMER_USEC	201805	NS		The maximum queue time for kernel packet injection.
EF_PERIODIC_TIMER_CPU	201805	NS		Affinize Onload's periodic tasks to the specified CPU core.
EF_PREALLOC_PACKETS	201805	NS		Preallocate buffers during stack creation.
EF_SCALABLE_ACTIVE_WILDS_NEED_FILTER	201805	NS		Control filtering of cached active-opened sockets.
EF_SCALABLE_FILTERS_IFINDEX_ACTIVE	201805	NS		Stores active scalable filter interface set with EF_SCALABLE_FILTERS.
EF_SCALABLE_FILTERS_IFINDEX_PASSIVE	201805	NS		Stores passive scalable filter interface set with EF_SCALABLE_FILTERS.
EF_SCALABLE_LISTEN_MODE	201805	NS		Choose behavior of scalable listening sockets.
EF_SLEEP_SPIN_USEC	201805	NS		The duration of sleep after each spin iteration.
EF_TCP_MIN_CWND	201805	NS		Minimum size of the congestion window for TCP connections.
EF_TCP_SHARED_LOCAL_PORTS_NO_FALLBACK	201805	NS		Use ports only from the TCP shared local port pool.
EF_TCP_SHARED_LOCAL_PORTS_PER_IP	201805	NS		Reserve shared local ports per local IP address on demand.

Variable	OOL	EOL	Changed	Notes
EF_TCP_SHARED_LOCAL_PORTS_REUSE_FAST	201805	NS		Reuse shared local ports immediately they reach the CLOSED state.
EF_TCP_TSOPT_MODE	201710	NS		TCP header timestamps as per RFC 1323.
EF_CLUSTER_HOT_RESTART	201710	NS		Hot restart of applications such that they can reuse existing stacks and two apps can bind to the same port simultaneously.
EF_INTERFACE_WHITELIST, EF_INTERFACE_BLACKLIST	201710	NS		Per-stack blacklist/whitelist.
EF_LOG_TIMESTAMPS	201710	NS		Attach timestamp to Onload output log entries. Timestamps are from the FRC counter.
EF_WODA_SINGLE_INTERFACE	201606-u1	5.0		Traffic will only be ordered relative to other traffic arriving on the same interface.
EF_TCP_SHARED_LOCAL_PORTS_MAX	201606-u1	4.0.5		Set max size for the pool of local shared ports.
EF_TCP_SHARED_LOCAL_PORTS	201606-U1	4.0.5		Improve performance for TCP active-open connections.
EF_ONLOAD_FD_BASE	201606-u1	5.0		Base value for Onload internal-use file descriptors.
EF_TCP_LISTEN_REPLY_BACK	201606	5.0		Force reply to an incoming SYN to ignore routes and reply to the originating network interface.
		201710		Removed because source based routing is supported in the 201710 release.
EF_HIGH_THROUGHPUT_MODE	201606	5.0		Optimize for throughput at the cost of latency
EF_UDP_SEND_NONBLOCK_NO_PACKETS_MODE	201509	4.0.3		Control behavior of non-block UDP send() calls when insufficient buffers can be allocated.

Variable	OOL	EOL	Changed	Notes
EF_TCP_SYNRECV_MAX	201509	5.0		Limit the number of half-open connections that can be created in an Onload stack.
EF_TCP_SOCKBUF_MAX_FRACTION	201509	5.0		Control the fraction of total TX buffers allocated to a single socket.
EF_TCP_CONNECT_SPIN	201509	5.0		Calls to connect() for TCP sockets will spin until a connection is established or the spin timeout expires or the socket timeout expires. Default = disabled.
EF_SCALABLE_FILTERS_ENABLE	201509	5.0	201805	Toggle scalable filters mode for a stack. Mode 2 added.
EF_SCALABLE_FILTERS_MODE	201509	5.0	201805	Stores the scalable filter mode set with EF_SCALABLE_FILTERS. <b>Not set directly.</b> Maximum increased from 6 to 13.
EF_SCALABLE_FILTERS	201509	5.0	201805	Identify the interface to use and set mode for scalable listening sockets. New modes added: <ul style="list-style-type: none"><li>• rss:passive</li><li>• active</li><li>• rss:active</li><li>• rss:passive:active.</li></ul>
EF_RETRANSMIT_THRESHOLD_ORPHAN	201509	5.0		Number of retransmit timeouts before a TCP connection is aborted in case of orphaned connection.
EF_MAX_EP_PINNED_PAGES	NS	1.0	201509	Not used in previous release and removed from 201509.
EF_OFE_ENGINE_SIZE	201502	4.0		Size (bytes) of the Onload filter engine allocated when a new stack is created.

Variable	OOL	EOL	Changed	Notes
EF_TCP_SNDBUF_ESTABLISHED_DEFAULT	201502	4.0		Override OS default value for SO_SNDBUF for TCP sockets in the ESTABLISHED state.
EF_TCP_RCVBUF_STRICT	201502	4.0		Prevent TCP small segment attack by limiting number of packets in a TCP receive queue and reorder buffer.
EF_TCP_RCVBUF_ESTABLISHED_DEFAULT	201502	4.0		Override OS default value for SO_RCVBUF for TCP sockets in the ESTABLISHED state.
EF_SO_BUSY_POLL_SPIN	201502	4.0		Spin only if a spinning socket is present in the poll/select/epoll set.
EF_SELECT_NONBLOCK_FAST_USEC	201502	4.0		Non-accelerated sockets are polled only every N usecs.
EF_SELECT_FAST_USEC	201502	4.0		Accelerated sockets are polled for N usecs before unaccelerated sockets.
EF_PIPE_SIZE	201502	4.0		Default size of a pipe.
			201509/4.0.3	Default decreased to 229376 from 237568.
			201710	Default restored to 237568
EF_SOCKET_CACHE_MAX	201502	4.0		Set the maximum number of TCP sockets to cache per stack.
EF_SOCKET_CACHE_PORTS	201502	4.0		Allow caching of sockets bound to specified ports.
EF_PER_SOCKET_CACHE_MAX	201502	4.0		Limit the size of a socket cache.
			201805	“Unlimited” value (and default) changed from 0 to -1.
EF_COMPOUND_PAGES_MODE	201502	4.0		Control Onload use of compound pages.
EF_UL_EPOLL=3	201502	4.0		Mode 2 supported in EOL versions before 4.0
EF_ACCEPT_INHERIT_NODELAY	NS	3.0	201502/4.0	Removed (OOL)201502, (EOL) 4.0.

Variable	OOL	EOL	Changed	Notes
EF_TCP_SEND_NONBLOCK_NO_PACKETS_MODE	201502	3.0.0.3		Control non-blocking TCP send() call behavior when unable to allocate sufficient packet buffers.
EF_CLUSTER_IGNORE	201405-u1	4.0		Ignore attempts to use clusters
EF_CLUSTER_RESTART	201405	4.0		Determine Onload cluster behavior following restart.
EF_CLUSTER_SIZE	201405	4.0		Size (number of socket members) of application cluster.
EF_CLUSTER_NAME	201405	4.0		Create an application cluster.
EF_UDP_FORCE_REUSEPORT	201405	4.0		Support Application clustering for legacy applications.
EF_TCP_FORCE_REUSEPORT	201405	4.0		Support Application clustering for legacy applications.
EF_MCAST_SEND	201405	4.0		Enable/Disable multicast loopback.
EF_MCAST_RECV_HW_LOOP	201405	4.0		Enable/Disable hardware multicast loopback - receive.
EF_TX_TIMESTAMPING	201405	4.0		Per stack hardware timestamping control.
EF_TIMESTAMPING_REPORTING	201405	4.0		Control timestamp reporting.
EF_TCP_SYNCOOKIES	201405	4.0		Use TCP syncookies to protect against SYN flood attack.
EF_SYNC_CPLANE_AT_CREATE	201405	3.0		Synchronize control plane when a stack is created.
		201805		Changed from per-stack to per-process. Default changed from 2 to 1.
EF_MULTICAST_LOOP_OFF	-	3.0	201405	Deprecated in favor of EF_MCAST_SEND
EF_TX_PUSH_THRESHOLD	201310_u1	3.0		Improve EF_TX_PUSH low latency transmit feature.
EF_RX_TIMESTAMPING	201310_u1	3.0		Control of receive packet hardware timestamps.

Variable	OOL	EOL	Changed	Notes
EF_RETRANSMIT_THRESHOLD_SYNACK	201104	1.0.0.0	201310-u1	Default changed from 4 to 5.
EF_PIO	201310	3.0		Enable/disable PIO Default value 1.
EF_PIO_THRESHOLD	201310	3.0		Identifies the largest packet size that can use PIO. Default value is 1514.
EF_VFORK_MODE	201310	3.0		Dictates how vfork() intercept should work.
EF_FREE_PACKETS_LOW_WATERMARK	201310	3.0	201405-u1	Level of free packets to be retained during runtime. Default changed to 0 (interpreted as EF_RXQ_SIZE/2) from 100.
EF_TCP_SNDBUF_MODE	201310	2.0.0.6		Limit TCP packet buffers used on the send queue and retransmit queue.
		201502/4.0		Default changed to 1 from 0
		201509		Added mode 2
EF_TXQ_SIZE	3.0	201310		Limited to 2048 for SFN7000 and SFN8000 series adapters.
EF_MAX_ENDPOINTS	201104	1.1.0.3	201310	Default changed to 1024 from 10.
		201509		Default changes to 8192 from 1024. Min (default) changes to 4 from 0.
		201509-u1		Default 8192. Min 4.
		EOL 4.0.3		Default 1024. Min 0.
EF_SO_TIMESTAMP_RESET_SYNC_TIME	201104	2.1.0.1	201310	Removed from OOL.
EF_SIGNALS_NOPOSTPONE	201210-u1	2.1.0.1		Prevent the specified list of signals from being postponed by Onload.
		201606-u1		List also includes SIGFPE.
EF_FORCE_TCP_NODELAY	201210	3.0		Force use of TCP_NODELAY.

Variable	OOL	EOL	Changed	Notes
EF_USE_HUGE_PAGES	201210	3.0		Enables huge pages for packet buffers.
EF_VALIDATE_ENV	201210	3.0		Will warn about obsolete or misspelled options in the environment Default value 1.
EF_PD_VF	201205-u1	2.1.0.0		Allocate VIs within SR-IOV VFs to allocate unlimited memory.
		201210		Replaced with new options on EF_PACKET_BUFFER_MODE
EF_PD_PHYS_MODE	201205_u1	2.1.0.0		Allows a VI to use physical addressing rather than protected I/O addresses
		201210		Replaced with new options on EF_PACKET_BUFFER_MODE
EF_MAX_PACKETS	20101111	1.0.0.0	201210	Onload will round the specified value up to the nearest multiple of 1024.
EF_EPCACHE_MAX	20101111	1.0.0.0	201210	Removed from OOL
EF_TCP_MAX_SEQERR_MSGS		NS	201210	Removed
EF_STACK_LOCK_BUZZ	20101111	1.0.0.0	201210	OOL Change to per_process, from per_stack. EOL is per stack.
EF_RFC_RTO_INITIAL	20101111	1.0.0.0	201210/ 2.1.0.0	Change default to 1000 from 3000
EF_DYNAMIC_ACK_THRESH	201205	2.1.0.0	201210	Default value changed to 16 from 32 in 201210
EF_TCP_SERVER_LOOPBACK	201205	2.1.0.0		TCP loopback acceleration
EF_TCP_CLIENT_LOOPBACK		201210		Added option 4 for client loopback to cause both ends of a TCP connection to share a newly created stack.  Option 4 is supported from EnterpriseOnload v3.0.

Variable	OOL	EOL	Changed	Notes
EF_TCP_RST_DELAYED	201205	2.1.0.0		Reset TCP connection following RTO expiry
EF_SA_ONSTACK_INTERCEPT	201205	2.1.0.0		Default value 0
EF_SHARE_WITH	201109-u2	2.0.0.0		
EF_EPOLL_CTL_HANDOFF	201109-u2	2.0.0.0		Default value 1
EF_CHECK_STACK_USER		NS	201109-u2	Renamed EF_SHARE_WITH
EF_POLL_USEC	201109-u1	1.0.0.0		
EF_DEFER_WORK_LIMIT	201109-u1	2.0.0.0		Default value 32
EF_POLL_FAST_LOOPS	20101111	1.0.0.0	201109-u1	Renamed EF_POLL_FAST_USEC
		2.0.0.0		
EF_POLL_NONBLOCK_FAST_LOOPS	201104	2.0.0.0	201109-u1	Renamed EF_POLL_NONBLOCK_FAST_USEC
		2.0.0.1		
EF_PIPE_RECV_SPIN	201104	2.0.0.0	201109-u1	Becomes per-process, was previously per-stack
EF_PKT_WAIT_SPIN	20101111	1.0.0.0	201109-u1	Becomes per-process, was previously per-stack
EF_PIPE_SEND_SPIN	201104	2.0.0.0	201109-u1	Becomes per-process, was previously per-stack
EF_TCP_ACCEPT_SPIN	20101111	1.0.0.0	201109-u1	Becomes per-process, was previously per-stack
EF_TCP_RECV_SPIN	20101111	1.0.0.0	201109-u1	Becomes per-process, was previously per-stack
EF_TCP_SEND_SPIN	20101111	1.0.0.0	201109-u1	Becomes per-process, was previously per-stack
EF_UDP_RECV_SPIN	20101111	1.0.0.0	201109-u1	Becomes per-process, was previously per-stack
EF_UDP_SEND_SPIN	20101111	1.0.0.0	201109-u1	Becomes per-process, was previously per-stack
EF_EPOLL_NONBLOCK_FAST_LOOPS	201104-u2	2.0.0.0	201109-u1	Removed
EF_POLL_AVOID_INT	20101111	1.0.0.0	201109-u1	Removed
EF_SELECT_AVOID_INT	20101111	1.0.0.0	201109-u1	Removed

<b>Variable</b>	<b>OOL</b>	<b>EOL</b>	<b>Changed</b>	<b>Notes</b>
EF_SIG_DEFER	20101111	1.0.0.0	201109-u1	Removed
EF_IRQ_CORE	201109	2.0.0.0	201109-u2	Non-root user can now set it when using scalable packet buffer mode
EF_IRQ_CHANNEL	201109	2.0.0.0		
EF_IRQ_MODERATION	201109	2.0.0.0		Default value 0
EF_PACKET_BUFFER_MODE	201109	2.0.0.0	201210	In 201210 options 2 and 3 enable physical addressing mode. EOL only supports option 1.
				EOL v3.0 supports options 2 and 3.
				Default - disabled
EF_SIG_REINIT	201109	NS		Default value 0.
			201109-u1	Removed in 201109-u1
EF_POLL_TCP_LISTEN_UL_ONLY	201104	2.0.0.0	201109	Removed
EF_POLL_UDP	20101111	1.0.0.0	201109	Removed
EF_POLL_UDP_TX_FAST	20101111	1.0.0.0	201109	Removed
EF_POLL_UDP_UL_ONLY	201104	2.0.0.0	201109	Removed
EF_SELECT_UDP	20101111	1.0.0.0	201109	Removed
EF_SELECT_UDP_TX_FAST	20101111	1.0.0.0	201109	Removed
EF_UDP_CHECK_ERRORS	20101111	1.0.0.0	201109	Removed
EF_UDP_RECV_FAST_LOOPS	20101111	1.0.0.0	201109	Removed
EF_UDP_RECV_MCAST_UL_ONLY	20101111	1.0.0.0	201109	Removed
EF_UDP_RECV_UL_ONLY	20101111	1.0.0.0	201109	Removed
EF_TX_QOS_CLASS	201104-u2	2.0.0.0		Default value 0
EF_TX_MIN_IPG_CNTL	201104-u2	2.0.0.0		Default value 0
EF_TCP_LISTEN_HANDOVER	201104-u2	2.0.0.0		Default value 0

Variable	OOL	EOL	Changed	Notes
EF_TCP_CONNECT_HANDOVER	201104-u2	2.0.0.0		Default value 0
EF_EPOLL_NONBLOCK_FAST_LOOP	201104-u2	2.0.0.0		Default value 32
			201109-u1	Removed in 201109-u1
EF_TCP_SNDBUF_MODE		2.0.0.6		Default value 0
EF_UDP_PORT_HANDOVER2_MAX	201104-u1	2.0.0.0		Default value 1
EF_UDP_PORT_HANDOVER2_MIN	201104-u1	2.0.0.0		Default value 2
EF_UDP_PORT_HANDOVER3_MAX	201104-u1	2.0.0.0		Default value 1
EF_UDP_PORT_HANDOVER3_MIN	201104-u1	2.0.0.0		Default value 2
EF_STACK_PER_THREAD	201104-u1	2.0.0.0		Default value 0
EF_PREFAIL_PACKETS	20101111	1.0.0.0	201104-u1	Enabled by default, was previously disabled
EF_MCAST_RECV	201104-u1	2.0.0.0		Default value 1
EF_MCAST_JOIN_BINDTODEVICE	201104-u1	2.0.0.0		Default value 0
EF_MCAST_JOIN_HANDOVER	201104-u1	2.0.0.0		Default value 0
EF_DONT_ACCELERATE	201104-u1	2.0.0.0		Default value 0
EF_MULTICAST	20101111	1.0.0.0	201104-u1	Removed
EF_TX_PUSH	20101111-u1	1.0.0.0	201104	Enabled by default, was previously disabled
			201109	No longer set by the latency profile script

## 14.5 Module Options

- To list all onload module options:

```
# modinfo onload
# modinfo onload_cplane
```

- Onload module options can be set in a user-created file (e.g `onload.conf`) in the `/etc/modprobe.d` directory e.g

```
options onload max_layer2_interfaces=16
options onload_cplane max_layer2_interfaces=16
```

Option	OOL	EOL	Changed	Notes
<code>inject_kernel_gid</code>	201805			<p>When Onload receives a packet, but does not have a socket to match, Onload can inject the packet into kernel. Because of security consideration, you can disallow such injection using this option.</p> <ul style="list-style-type: none"> <li>-2: always disallow injection</li> <li>-1: always allow injection</li> <li>other values: group id to allow injection.</li> </ul> <p>Default is 0.</p> <p>Namespace warning: this feature makes it possible to inject a packet to the SFC interface from a net namespace which owns vlan or macvlan interface over the SFC one. UID namespaces are taken into account when comparing the group ids.</p>
<code>oof_use_all_local_ip_addresses</code>	201805			<p>By default Onload handles only those local IP addresses which are assigned to Onloadable network interfaces. This option allows to tell Onload that it should handle all local IP addresses regardless of the network interface type.</p>

Option	OOL	EOL	Changed	Notes
cplane_server_grace_timeout	201710			<p>Delay (seconds) before an <code>onload_cp_server</code> process exits when there are no remaining stacks.</p> <p>See <a href="#">Control Plane Server on page 68</a>.</p>
bond_base_period bond_peak_period	201710		201710	<p><code>oo_bond_poll_peak</code> and <code>oo_bond_peak_polls</code> (jiffies) (onload module options) are no longer required unless netlink is not supported by the OS. Onload will use the new options (millisecs) to probe netlink for bond config/state.</p> <p>See <a href="#">Polling the Bonding Configuration. on page 81</a>.</p>
max_local_addrs	201606	5.0		Maximum number of network addresses supported in the control plane.
scalable_filter_gid	201509	5.0		<p>Set to a group Identifier of users allowed to use the scalable filters feature.</p> <p>Set to -2 means that <code>CAP_NET_RAW</code> is required - and checking is enforced.</p> <p>Set to -1 to avoid capability (<code>CAP_NET_RAW</code>) check.</p>
oof_shared_steal_thresh	201502	4.0		See <a href="#">Listen/Accept Sockets on page 104</a>
oof_shared_keep_thresh	201502	4.0		See <a href="#">Listen/Accept Sockets on page 104</a>
oof_all_ports_required	201502	4.0		When set to 1, Onload will return an error if it is unable to install a filter on all required interfaces.
				Set this to 0 when using multiple PFs or VFs with Onload.

Option	OOL	EOL	Changed	Notes
intf_white_list	201502	4.0	201710	See <a href="#">Whitelist and Blacklist Interfaces on page 63</a> Replaced by EF_INTERFACE_WHITELIST.
intf_black_list	201502	4.0	201710	See <a href="#">Whitelist and Blacklist Interfaces on page 63</a> . Replace by EF_INTERFACE_BLACKLIST.
timesync_period	201502	4.0		Period in milliseconds between synchronizing the Onload clock with the system clock.
max_packets_per_stack	201210	3.0		Limit the number of packet buffers that each Onload stack can allocate. This module option places an upper limit on the EF_MAX_PACKETS option
epoll2_max_stacks	201210	3.0	201310	Identifies the maximum number of stacks that an epoll file descriptor can handle when EF_UL_EPOLL=2.  Renamed epoll_max_stacks and removed from later releases.
phys_mod_gid	201210	3.0		sfc_char module parameter to restrict which ef_vi users can use physical addressing mode.
phys_mode_gid	201210	3.0		Enable physical addressing mode and restrict which users can use it
shared_buffer_table	201210	NS		This option should be set to enable ef_vi applications that use the ef_iobufset API. Setting shared_buffer_table=10000 will make 10000 buffer table entries available for use with ef_iobufset.

Option	OOL	EOL	Changed	Notes
safe_signals_and_exit	201205	2.1.0.0		When Onload intercepts a termination signal it will attempt a clean exit by releasing resources including stack locks etc. The default is (1) enabled and it is recommended that this remains enabled unless signal handling problems occur when it can be disabled (0).
max_layer2_interfaces	201205	2.1.0.0		Maximum number of network interfaces (includes physical, VLAN and bonds) supported in the control plane.
max_routes	201205	2.1.0.0	201205	Maximum number of entries in the Onload route table. Default is 256.  Replaced the OOF_LOCAL_ADDR_MAX setting.
max_neighs	201205	2.1.0.0		Maximum number of entries in Onload ARP/neighbour table. Rounded up to power of two value. Default is 1024.
unsafe_sriov_without_iommu	201209-u2	2.0.0.0	201210	Removed, obsoleted by physical addressing modes and phys_mode_gid.  Obsolete in EOL from v3.0.
buffer_table_min		2.0.0.0	201210	Obsolete - Removed.
buffer_table_max				Obsolete in EOL from v3.0.



**NOTE:** The user should always refer to the Onload distribution *Release Notes* and *Change Log*. These are available from <http://www.openonload.org/download.html>.

## 14.6 Onload - Adapter Net Drivers

The following table identifies the Solarflare adapter net driver included in the Onload release.

OOL	EOL	Net Driver	Notes
201805	NS	4.13	
201710-u1.1	NS	4.12.2.1014	Linux kernels to 4.16, use of CONFIG_RETPOLINE
201710-u1	NS	4.12.2.1006	Linux kernels to 4.14.11, supports KTPI
201710	NS	4.12.1.1016	Linux kernels to 4.13
NS	5.0.5	4.10.7.1008	Linux kernels to 4.16, use of CONFIG_RETPOLINE
NS	5.0.4	4.10.7.1004	Linux kernels to 4.14.11, supports KTPI
NS	5.0.3	4.10.7.1001	Linux kernels to 4.11
NS	5.0.2	4.10.4.1005	Linux kernels to 4.10
201606-u1	5.0.1 5.0.0	4.10.0.1011	Linux kernels: 2.6.18 to 4.9-rc1
201606	NS	4.8.2.1004	
NS	4.0.10	4.7.0.1049	Supports KTPI
NS	4.0.9	4.7.0.1048	
NS	4.0.8	4.7.0.1046	Support for RHEL 6.9
NS	4.0.7	4.7.0.1043	Linux kernels 2.6.18 to 4.3
NS	4.0.5 4.0.6	4.7.0.1039	
NS	4.0.4	4.7.0.1035	
NS	4.0.3	4.7.0.1035	Support up to 4.3 Linux kernel. and RHEL 7.2
201509-u1	NS	4.5.1.1037	
201509	4.0.2	4.5.1.1026	
NS	4.0.1	4.5.1.1020	
201502-u2	4.0.0	4.5.1.1010	

OOL	EOL	Net Driver	Notes
201502-u1	NS	4.4.1.1021	
201502	NS	4.4.1.1017	
201405-u2	NS	4.1.2.1003	
201405-u1	NS	4.1.2.1003	supports RHEL 7.
201405	3.0.0.8 3.0.0.7 3.0.0.6 3.0.0.5 3.0.0.4 3.0.0.3 3.0.0.2	4.1.0.6734	Net driver supporting SFN5xxx, 6xxx and 7xxx series adapters - including SFN7x42Q.
201310-u2	3.0.0.0 3.0.0.1	4.0.2.6645	Net driver supporting SFN5xxx, 6xxx and 7xxx series adapters introducing hardware packet timestamps and PTP on 7xxx series adapters.  SFN7142Q not supported.
201310-u1	NS	4.0.2.6625	
201310	NS	4.0.0.6585	Supports HW timestamps, PTP on SFN7000 series adapters.
NS	2.1.0.1	3.3.0.6262	Supports sfptpd.
201210-u1	NS	3.3.0.6246	Supports sfptpd.
201210	NS	3.2.1.6222B	
NS	2.1.0.0	3.2.1.6110	
201205-u1	NS	3.2.1.6099	
201109-u1	2.0.0.0	3.2	
201104	NS	3.1	

# A

# Parameter Reference

## A.1 Parameter List

The parameter list details the following:

- The environment variable used to set the parameter.
- Parameter name: the name used by `onload_stackdump`.
- The default, minimum and maximum values.
- Whether the variable scope applies per-stack or per-process.
- Description.

### **EF\_ACCEPTQ\_MIN\_BACKLOG**

Name: `acceptq_min_backlog`

Default: 1

Scope: per-stack

Sets a minimum value to use for the 'backlog' argument to the `listen()` call. If the application requests a smaller value, use this value instead.

### **EF\_ACCEPT\_INHERIT\_NONBLOCK**

Name: `accept_force_inherit_nonblock`

Default: 0

Minimum: 0

Maximum: 1

Scope: per-process

If set to 1, TCP sockets accepted from a listening socket inherit the `O_NONBLOCK` flag from the listening socket.

### **EF\_BINDTODEVICE\_HANDOVER**

Name: `bindtodevice_handover`

Default: 0

Minimum: 0

Maximum: 1

Scope: per-stack

Hand sockets over to the kernel stack that have the `SO_BINDTODEVICE` socket option enabled.

## EF\_BURST\_CONTROL\_LIMIT

Name: burst\_control\_limit

Default: 0

Scope: per-stack

If non-zero, limits how many bytes of data are transmitted in a single burst. This can be useful to avoid drops on low-end switches which contain limited buffering or limited internal bandwidth. This is not usually needed for use with most modern, high-performance switches.

## EF\_BUZZ\_USEC

Name: buzz\_usec

Default: 0

Scope: per-stack

Sets the timeout in microseconds for lock buzzing options. Set to zero to disable lock buzzing (spinning). Will buzz forever if set to -1. Also set by the [EF\\_POLL\\_USEC](#) option.

## EF\_CLUSTER\_HOT\_RESTART

Name: cluster\_hot\_restart\_opt

Default: 0

Minimum: 0

Maximum: 1

Scope: per-process

This option controls whether or not clusters support the hot/seamless restart of applications. Enabling this reuses existing stacks in the cluster to allow up to two processes per stack to bind to the same port simultaneously. Note that it is required there will be as many new sockets on the port as old ones; traffic will be lost otherwise when the old sockets close.

- 0 - disable per-port stack sharing (default)
- 1 - enable per-port stack sharing for hot restarts.

## EF\_CLUSTER\_IGNORE

Name: cluster\_ignore

Default: 0

Minimum: 0

Maximum: 1

Scope: per-stack

When set, this option instructs Onload to ignore attempts to use clusters and effectively ignore attempts to set SO\_REUSEPORT.

## EF\_CLUSTER\_RESTART

Name: cluster\_restart\_opt

Default: 0

Minimum: 0

Maximum: 1

Scope: per-process

This option controls the behavior when recreating a stack (e.g. due to restarting a process) in an SO\_REUSEPORT cluster and it encounters a resource limitation such as an orphan stack from the previous process:

- 0 - return an error
- 1 - terminate the orphan to allow the new process to continue.

## EF\_CLUSTER\_SIZE

Name: cluster\_size

Default: 2

Minimum: 1

Scope: per-process

If use of SO\_REUSEPORT creates a cluster, this option specifies sizeof the cluster to be created. This option has no impact if use of SO\_REUSEPORT joins a cluster that already exists. Note that if fewer sockets than specified here join the cluster, then some traffic will-be lost. Refer to the SO\_REUSEPORT section in the manual for more detail. This should always be a power of two value when used on SFN5000 or SFN6000 series adapters.

## EF\_COMPOUND\_PAGES\_MODE

Name: compound\_pages

Default: 0

Minimum: 0

Maximum: 2

Scope: per-stack

Debug option, not suitable for normal use.

For packet buffers, allocate system pages in the following way:

- 0 - try to use compound pages if possible (default)
- 1 - do not use compound pages of high order
- 2 - do not use compound pages at all.

## EF\_CONG\_AVOID\_SCALE\_BACK

Name: cong\_avoid\_scale\_back

Default: 0

Scope: per-stack

When  $>0$ , this option slows down the rate at which the TCP congestion window is opened. This can help to reduce loss in environments where there is lots of congestion and loss.

## EF\_CTPIO

Name: ctpio

Default: 1

Minimum: 0

Maximum: 2

Scope: per-stack

Controls whether the CTPIO low-latency transmit mechanism is enabled:

- 0 – no (use DMA and/or PIO)
- 1 – enable CTPIO if available (default)
- 2 – enable CTPIO and fail stack creation if not available.

Mode 1 will fall back to DMA or PIO if CTPIO is not currently available. Mode 2 will fail to create the stack if the hardware supports CTPIO but CTPIO is not currently available. On hardware that does not support CTPIO there is no difference between mode 1 and mode 2.

In all cases, CTPIO is only be used for packets if length  $\leq \text{EF_CTPIO_MAX_FRAME_LEN}$  and when the VI's transmit queue is empty. If these conditions are not met DMA or PIO is used, even in mode 2.



**NOTE:** CTPIO is currently only available on x86\_64 systems.

**NOTE:** Mode 2 will not prevent a stack from operating without CTPIO in the event that CTPIO allocation is originally successful but then fails after an adapter is rebooted or hotplugged while that stack exists.

## EF\_CTPIO\_CT\_THRESH

Name: ctpio\_ct\_thresh

Default: 64

Minimum: 0

Scope: per-stack

**Experimental:** Sets the cut-through threshold for CTPIO transmits, when `EF_CTPIO_MODE=ct`. This option is for test purposes only and is likely to be changed or removed in a future release.

## EF\_CTPIO\_MAX\_FRAME\_LEN

Name: ctpio\_max\_frame\_len

Default: 0

Minimum: 0

Scope: per-stack

Sets the maximum frame length for the CTPIO low-latency transmit mechanism. Packets up to this length will use CTPIO, if CTPIO is supported by the adapter and if CTPIO is enabled (see [EF\\_CTPIO](#)). Longer packets will use PIO and/or DMA. The cost per byte of packet payload varies between host architectures, as does the effect of packet size on the probability of poisoning, and so on some hosts it may be beneficial to reduce this value.

## EF\_CTPIO\_MODE

Name: ctpio\_mode

Default: 1

Minimum: 0

Maximum: 2

Scope: per-stack

CTPIO transmission mode:

- sf - store and forward

The NIC will buffer the entire packet before starting to send it on the wire.

- sf-np - store and forward, no poison

Similar to mode sf but the NIC will guarantee never to emit a poisoned frame under any circumstances. This will force store-and-forward semantics for all users of CTPIO on the same port.

- ct - cut-through

The NIC will start to send the outgoing packet onto the wire before it has been fully received, improving latency at the cost of occasionally transmitting a poisoned frame under some circumstances (such as the process being descheduled before it has finished writing the packet to the NIC).

## EF\_CTPIO\_SWITCH\_BYPASS

Name: ctpio\_switch\_bypass

Default: 0

Minimum: 0

Maximum: 1

Scope: per-stack

Allows CTPIO to be enabled on interfaces using the adapter's internal switch. This switching functionality is used to implement hardware multicast loopback and hardware loopback between interfaces, as used by virtual machines. CTPIO bypasses the switch, and hence is not compatible with those features.

## EF\_DEFER\_WORK\_LIMIT

Name: defer\_work\_limit

Default: 32

Scope: per-stack

The maximum number of times that work can be deferred to the lock holder before we force the unlocked thread to block and wait for the lock

## EF\_DELACK\_THRESH

Name: delack\_thresh

Default: 1

Minimum: 0

Maximum: 65535

Scope: per-stack

This option controls the delayed acknowledgment algorithm. A socket may receive up to the specified number of TCP segments without generating an ACK. Setting this option to 0 disables delayed acknowledgments.



**NOTE:** This option is overridden by [EF\\_DYNAMIC\\_ACK\\_THRESH](#), so both options need to be set to 0 to disable delayed acknowledgments.

## EF\_DONT\_ACCELERATE

Name: dont\_accelerate

Default: 0

Minimum: 0

Maximum: 1

Scope: per-process

Do not accelerate by default. This option is usually used in conjunction with  `onload_set_stackname()` to allow individual sockets to be accelerated selectively.

## **EF\_DYNAMIC\_ACK\_THRESH**

Name: dynack\_thresh

Default: 16

Minimum: 0

Maximum: 65535

Scope: per-stack

If set to >0 this will turn on dynamic adaptation of the ACK rate to increase efficiency by avoiding ACKs when they would reduce throughput. The value is used as the threshold for number of pending ACKs before an ACK is forced. If set to zero then the standard delayed-ack algorithm is used.

## **EF\_EPOLL\_CTL\_FAST**

Name: ul\_epoll\_ctl\_fast

Default: 1

Minimum: 0

Maximum: 1

Scope: per-process

Avoid system calls in epoll\_ctl() when using an accelerated epoll implementation. System calls are deferred until epoll\_wait() blocks, and in some cases removed completely. This option improves performance for applications that call epoll\_ctl() frequently.

Caveats:

- This option has no effect when **EF\_UL\_EPOLL**=0.
- Do not turn this option on if your application uses dup(), fork() or exec() in conjunction with epoll file descriptors or with the sockets monitored by epoll.
- If you monitor the epoll fd in another poll, select or epoll set, and have this option enabled, it may not give correct results.
- If you monitor the epoll fd in another poll, select or epoll set, and the effects of epoll\_ctl() are latency critical, then this option can cause latency spikes or even deadlock.
- With **EF\_UL\_EPOLL**=2, this option is harmful if you are calling epoll\_wait() and epoll\_ctl() simultaneously from different threads or processes.

## EF\_EPOLL\_CTL\_HANDOFF

Name: ul\_epoll\_ctl\_handoff

Default: 1

Minimum: 0

Maximum: 1

Scope: per-process

Allow epoll\_ctl() calls to be passed from one thread to another in order to avoid lock contention, in [EF\\_UL\\_EPOLL=1](#) or 3 case. This optimization is particularly important when epoll\_ctl() calls are made concurrently with epoll\_wait() and spinning is enabled.

This option is enabled by default.

Caveat:

- This option may cause an error code returned by epoll\_ctl() to be hidden from the application when a call is deferred. In such cases an error message is emitted to stderr or the system log.

## EF\_EPOLL\_MT\_SAFE

Name: ul\_epoll\_mt\_safe

Default: 0

Minimum: 0

Maximum: 1

Scope: per-process

This option disables concurrency control inside the accelerated epoll implementations, reducing CPU overhead. It is safe to enable this option if, for each epoll set, all calls on the epoll set and all calls that may modify a member of the epoll set are concurrency safe. Calls that may modify a member are bind(), connect(), listen() and close().

This option improves performance with [EF\\_UL\\_EPOLL=1](#) or 3 and also with [EF\\_UL\\_EPOLL=2](#) and [EF\\_EPOLL\\_CTL\\_FAST=1](#).

## EF\_EPOLL\_SPIN

Name: ul\_epoll\_spin

Default: 0

Minimum: 0

Maximum: 1

Scope: per-process

Spin in epoll\_wait() calls until an event is satisfied or the spin timeout expires (whichever is the sooner). If the spin timeout expires, enter the kernel and block. The spin timeout is set by [EF\\_SPIN\\_USEC](#) or [EF\\_POLL\\_USEC](#).

## **EF\_EVS\_PER\_POLL**

Name: evs\_per\_poll  
Default: 64  
Minimum: 0  
Maximum: 0xffffffff  
Scope: per-stack

Sets the number of hardware network events to handle before performing other work. The value chosen represents a trade-off: Larger values increase batching (which typically improves efficiency) but may also increase the working set size (which harms cache efficiency).

## **EF\_FDS\_MT\_SAFE**

Name: fds\_mt\_safe  
Default: 1  
Minimum: 0  
Maximum: 1  
Scope: per-process

This option allows less strict concurrency control when accessing the user-level file descriptor table, resulting in increased performance, particularly for multi-threaded applications. Single-threaded applications get a small latency benefit, but multi-threaded applications benefit most due to decreased cache-line bouncing between CPU cores.

This option is unsafe for applications that make changes to file descriptors in one thread while accessing the same file descriptors in other threads. For example, closing a file descriptor in one thread while invoking another system call on that file descriptor in a second thread. Concurrent calls that do not change the object underlying the file descriptor remain safe.

Calls to bind(), connect(), listen() may change the underlying object. If you call such functions in one thread while accessing the same file descriptor from the other thread, this option is also unsafe. In some special cases, any functions may change the underlying object.

Also concurrent calls may happen from signal handlers, so set this to 0 if your signal handlers call bind(), connect(), listen() or close()

## **EF\_FDTABLE\_SIZE**

Name: fdtable\_size  
Default: 0  
Scope: per-process

Limit the number of opened file descriptors by this value. If zero, the initial hard limit of open files (`ulimit -n -H`) is used. Hard and soft resource limits for opened file descriptors (help ulimit, man 2 setrlimit) are bound by this value.

## **EF\_FDTABLE\_STRICT**

Name: `fdtable_strict`

Default: 0

Minimum: 0

Maximum: 1

Scope: per-process

Enables more strict concurrency control for the user-level file descriptor table. Enabling this option can reduce performance for applications that create and destroy many connections per second.

## **EF\_FORCE\_SEND\_MULTICAST**

Name: `force_send_multicast`

Default: 1

Minimum: 0

Maximum: 1

Scope: per-stack

This option causes all multicast sends to be accelerated. When disabled, multicast sends are only accelerated for sockets that have cleared the `IP_MULTICAST_LOOP` flag.

This option disables loopback of multicast traffic to receivers on the same host, unless (a) those receivers are sharing an OpenOnload stack with the sender (see [EF\\_NAME on page 212](#)) and `EF_MCAST_SEND` is set to 1 or 3, or (b) prerequisites to support loopback to other OpenOnload stacks are met (see [EF\\_MCAST\\_SEND on page 211](#)).

See the OpenOnload manual for further details on multicast operation.

## **EF\_FORCE\_TCP\_NODELAY**

Name: `tcp_force_nodelay`

Default: 0

Minimum: 0

Maximum: 2

Scope: per-stack

This option allows the user to override the use of `TCP_NODELAY`. This may be useful in cases where 3rd-party software is (not) setting this value and the user would like to control its behavior:

- 0 - do not override
- 1 - always set `TCP_NODELAY`
- 2 - never set `TCP_NODELAY`

## **EF\_FORK\_NETIF**

Name: `fork_netif`

Default: 3

Minimum: `CI_UNIX_FORK_NETIF_NONE`

Maximum: `CI_UNIX_FORK_NETIF_BOTH`

Scope: per-process

This option controls behavior after an application calls `fork()`:

- 0 - Neither fork parent nor child creates a new OpenOnload stack
- 1 - Child creates a new stack for new sockets
- 2 - Parent creates a new stack for new sockets
- 3 - Parent and child each create a new stack for new sockets.

## **EF\_FREE\_PACKETS\_LOW\_WATERMARK**

Name: `free_packets_low`

Default: 0

Scope: per-stack

Keep free packets number to be at least this value. `EF_MIN_FREE_PACKETS` defines initialization behavior, and this value is about normal application runtime. In some combinations of hardware and software, Onload is not able allocate packets at any context, so it makes sense to keep some spare packets. Default value 0 is interpreted as `EF_RXQ_SIZE`/2.

## **EF\_HELPER\_PRIME\_USEC**

Name: `timer_prime_usec`

Default: 250

Scope: per-stack

Sets the frequency with which software should reset the count-down timer. Usually set to a value that is significantly smaller than `EF_HELPER_USEC` to prevent the count-down timer from firing unless needed. Defaults to (`EF_HELPER_USEC` / 2).

## **EF\_HELPER\_USEC**

Name: `timer_usec`

Default: 500

Scope: per-stack

Timeout in microseconds for the count-down interrupt timer. This timer generates an interrupt if network events are not handled by the application within the given time. It ensures that network events are handled promptly when the application is not invoking the network, or is descheduled.

Set this to 0 to disable the count-down interrupt timer. It is disabled by default for stacks that are interrupt driven.

## EF\_HIGH\_THROUGHPUT\_MODE

Name: rx\_merge\_mode  
Default: 0  
Minimum: 0  
Maximum: 1  
Scope: per-stack

This option causes onload to optimize for throughput at the cost of latency.

## EF\_INTERFACE\_BLACKLIST

Name: iface\_blacklist  
Default: none  
Min: none  
Max: none  
Scope: per-stack

List of names of interfaces not to be used by the stack. Space separated. See [EF\\_INTERFACE\\_WHITELIST](#) for notes as the same caveats apply.



**NOTE:** Blacklist takes priority over whitelist so an interface present in both lists it will not be accelerated.

## EF\_INTERFACE\_WHITELIST

Name: iface\_whitelist  
Default: none  
Min: none  
Max: none  
Scope: per-stack

Space separated list of names of interfaces to use by the stack. Note that beside passing the network interface of Solarflare NIC itself, it is allowed to provide name of higher order interface such as VLAN, MACVLAN, team or bond. At stack creation time these names will be used to identify underlying Solarflare NICs on which the whitelisting operates.



**NOTE:** The granularity of whitelisting is limited: all interfaces based on whitelisted Solarflare NICs are accelerated.

## **EF\_INT\_DRIVEN**

Name: `int_driven`  
Default: 1  
Minimum: 0  
Maximum: 1  
Scope: per-stack

Put the stack into an 'interrupt driven' mode of operation. When this option is not enabled Onload uses heuristics to decide when to enable interrupts, and this can cause latency jitter in some applications. So enabling this option can help avoid latency outliers.

This option is enabled by default except when spinning is enabled.

This option can be used in conjunction with spinning to prevent outliers caused when the spin timeout is exceeded and the application blocks, or when the application is descheduled. In this case we recommend that interrupt moderation be set to a reasonably high value (e.g. 100us) to prevent too high a rate of interrupts.

## **EF\_INT\_REPRIME**

Name: `int_reprime`  
Default: 0  
Minimum: 0  
Maximum: 1  
Scope: per-stack

Enable interrupts more aggressively than the default.

## **EF\_IRQ\_CHANNEL**

Name: `irq_channel`  
Default: -1  
Minimum: -1  
Maximum: SMAX  
Scope: per-stack

Set the net-driver receive channel that will be used to handle interrupts for this stack. The core that receives interrupts for this stack will be whichever core is configured to handle interrupts for the specified net driver receive channel.

This option only takes effect if [EF\\_PACKET\\_BUFFER\\_MODE=0](#) (default) or 2.

## EF\_IRQ\_CORE

Name: irq\_core  
Default: -1  
Minimum: -1  
Maximum: SMAX  
Scope: per-stack

Specify which CPU core interrupts for this stack should be handled on.

With `EF_PACKET_BUFFER_MODE`=1 or 3, Onload creates dedicated interrupts for each stack, and the interrupt is assigned to the requested core.

With `EF_PACKET_BUFFER_MODE`=0 (default) or 2, Onload interrupts are handled via net driver receive channel interrupts. The sfc\_affinity driver is used to choose which net-driver receive channel is used. It is only possible for interrupts to be handled on the requested core if a net driver interrupt is assigned to the selected core. Otherwise a nearby core will be selected.



**NOTE:** If the IRQ balancer service is enabled it may redirect interrupts to other cores.

## EF\_IRQ\_MODERATION

Name: irq\_usec  
Default: 0  
Minimum: 0  
Maximum: 1000000  
Scope: per-stack

Interrupt moderation interval, in microseconds.

This option only takes effective with `EF_PACKET_BUFFER_MODE`=1 or 3. Otherwise the interrupt moderation settings of the kernel net driver take effect.

## EF\_KEEPALIVE\_INTVL

Name: keepalive\_intvl  
Default: 75000  
Scope: per-stack

Default interval between keepalives, in milliseconds.

## EF\_KEEPALIVE\_PROBES

Name: keepalive\_probes  
Default: 9  
Scope: per-stack

Default number of keepalive probes to try before aborting the connection.

## **EF\_KEEPALIVE\_TIME**

Name: `keepalive_time`

Default: 7200000

Scope: per-stack

Default idle time before keepalive probes are sent, in milliseconds.

## **EF\_KERNEL\_PACKETS\_BATCH\_SIZE**

Name: `kernel_packets_batch_size`

Default: 1

Minimum: 0

Maximum: 64

Scope: per-stack

In some cases (for example, when using scalable filters), packets that should be delivered to the kernel stack are instead delivered to Onload. Onload will forward these packets to the kernel, and may do so in batches of size up to the value of this option.

## **EF\_KERNEL\_PACKETS\_TIMER\_USEC**

Name: `kernel_packets_timer_usec`

Default: 500

Scope: per-stack

Controls the maximum time for which Onload will queue up a packet that was received by Onload but should be forwarded to the kernel.

## **EF\_LOAD\_ENV**

Name: `load_env`

Default: 1

Minimum: 0

Maximum: 1

Scope: per-process

OpenOnload will only consult other environment variables if this option is set. i.e. Clearing this option will cause all other EF\_ environment variables to be ignored.

## **EF\_LOG**

Name: `log_category`

Default: 27

Minimum: 0

Scope: per-stack

Designed to control how chatty Onload's informative/warning messages are. Specified as a comma separated list of options to enable and disable (with a minus sign). Valid options are:

- 'banner' (on by default)
- 'resource\_warnings' (on by default)
- 'config\_warnings' (on by default)
- 'conn\_drop' (off by default)
- 'usage\_warnings' (on by default).

For example:

- To enable conn\_drop:  
`EF_LOG=conn_drop`
- To enable conn\_drop and turn off resource warnings:  
`EF_LOG=conn_drop,-resource_warnings`

## **EF\_LOG\_FILE**

Scope: per-stack

When `EF_LOG_VIA_IOCTL` is unset, the user can direct Onload debug and output data to a directory/file instead of stdout and instead of the syslog.

## **EF\_LOG\_TIMESTAMPS**

Name: `log_timestamps`  
Default: 0  
Minimum: 0  
Maximum: 1  
Scope: global

If enabled this will add a timestamp to every Onload output log entry. Timestamps are originated from the FRC counter.

## **EF\_LOG\_VIA\_IOCTL**

Name: `log_via_ioctl`  
Default: 0  
Minimum: 0  
Maximum: 1  
Scope: per-process

Causes error and log messages emitted by OpenOnload to be written to the system log rather than written to standard error. This includes the copyright banner emitted when an application creates a new OpenOnload stack.

By default, OpenOnload logs are written to the application standard error if and only if it is a TTY.

Enable this option when it is important not to change what the application writes to standard error.

Disable it to guarantee that log goes to standard error even if it is not a TTY.

## EF\_MAX\_ENDPOINTS

Name: max\_ep\_bufs  
Default: 8192  
Minimum: 4  
Maximum: CI\_CFG\_NETIF\_MAX\_ENDPOINTS\_MAX  
Scope: per-stack

This option places an upper limit on the number of accelerated endpoints (sockets, pipes etc.) in an Onload stack. This option should be set to a power of two between 4 and  $2^{21}$ . When this limit is reached listening sockets are not able to accept new connections over accelerated interfaces. New sockets and pipes created via socket() and pipe() etc. are handed over to the kernel stack and so are not accelerated.



**NOTE:** ~4 syn-receive states consume one endpoint, see also [EF\\_TCP\\_SYNRECV\\_MAX on page 243](#).

## EF\_MAX\_PACKETS

Name: max\_packets  
Default: 32768  
Minimum: 1024  
Scope: per-stack

Upper limit on number of packet buffers in each OpenOnload stack. Packet buffers require hardware resources which may become a limiting factor if many stacks are each using many packet buffers. This option can be used to limit how much hardware resource and memory a stack uses. This option has an upper limit determined by the max\_packets\_per\_stack onload module option.



**NOTE:** When 'scalable packet buffer mode' is not enabled (see [EF\\_PACKET\\_BUFFER\\_MODE on page 214](#)) the total number of packet buffers possible in aggregate is limited by a hardware resource. The SFN5x series adapters support approximately 120,000 packet buffers.

## EF\_MAX\_RX\_PACKETS

Name: max\_rx\_packets  
Default: 24576  
Minimum: 0  
Maximum: 1000000000  
Scope: per-stack

The maximum number of packet buffers in a stack that can be used by the receive data path. This should be set to a value smaller than [EF\\_MAX\\_PACKETS](#) to ensure that some packet buffers are reserved for the transmit path.

## **EF\_MAX\_TX\_PACKETS**

Name: `max_tx_packets`  
Default: 24576  
Minimum: 0  
Maximum: 1000000000  
Scope: per-stack

The maximum number of packet buffers in a stack that can be used by the transmit data path. This should be set to a value smaller than [EF\\_MAX\\_PACKETS](#) to ensure that some packet buffers are reserved for the receive path.

## **EF\_MCAST\_JOIN\_BINDTODEVICE**

Name: `mcast_join_bindtodevice`  
Default: 0  
Minimum: 0  
Maximum: 1  
Scope: per-stack

When a UDP socket joins a multicast group (using `IP_ADD_MEMBERSHIP` or similar), this option causes the socket to be bound to the interface that the join was on. The benefit of this is that it ensures the socket will not accidentally receive packets from other interfaces that happen to match the same group and port. This can sometimes happen if another socket joins the same multicast group on a different interface, or if the switch is not filtering multicast traffic effectively.

If the socket joins multicast groups on more than one interface, then the binding is automatically removed.

## **EF\_MCAST\_JOIN\_HANDOVER**

Name: `mcast_join_handover`  
Default: 0  
Minimum: 0  
Maximum: 2  
Scope: per-stack

When this option is set to 1, and a UDP socket joins a multicast group on an interface that is not accelerated, the UDP socket is handed-over to the kernel stack. This can be a good idea because it prevents that socket from consuming Onload resources, and may also help avoid spinning when it is not wanted.

When set to 2, UDP sockets that join multicast groups are always handed-over to the kernel stack.

## EF\_MCAST\_RECV

Name: mcast\_recv  
Default: 1  
Minimum: 0  
Maximum: 1  
Scope: per-stack

Controls whether or not to accelerate multicast receives. When set to zero, multicast receives are not accelerated, but the socket continues to be managed by Onload.

See also [EF\\_MCAST\\_JOIN\\_HANDOVER on page 210](#).

See the OpenOnload manual for further details on multicast operation.

## EF\_MCAST\_RECV\_HW\_LOOP

Name: mcast\_recv\_hw\_loop  
Default: 1  
Minimum: 0  
Maximum: 1  
Scope: per-stack

When enabled allows udp sockets to receive multicast traffic that originates from other OpenOnload stacks.

See the OpenOnload manual for further details on multicast operation.

## EF\_MCAST\_SEND

Name: mcast\_send  
Default: 0  
Minimum: 0  
Maximum: 3  
Scope: per-stack

Controls loopback of multicast traffic to receivers in the same and other OpenOnload stacks.

- When set to 0 (default) disables loopback within the same stack as well as to other OpenOnload stacks.
- When set to 1 enables loopback to the same stack.
- When set to 2 enables loopback to other OpenOnload stacks.
- When set to 3 enables loopback to the same as well as other OpenOnload stacks.

In respect to loopback to other OpenOnload stacks the options is just a hint and the feature requires all the following:

- 7000-series or newer device

- selecting firmware variant with loopback support.

See the OpenOnload manual for further details on multicast operation.

## **EF\_MIN\_FREE\_PACKETS**

Name: `min_free_packets`

Default: 100

Minimum: 0

Maximum: 1000000000

Scope: per-stack

Minimum number of free packets to reserve for each stack at initialization. If Onload is not able to allocate sufficient packet buffers to fill the RX rings and fill the free pool with the given number of buffers, then creation of the stack will fail.

## **EF\_MULTICAST\_LOOP\_OFF**

Name: `multicast_loop_off`

Default: 1

Minimum: 0

Maximum: 1

Scope: per-stack

`EF_MULTICAST_LOOP_OFF` is deprecated in favor of [`EF\_MCAST\_SEND`](#).

When set, disables loopback of multicast traffic to receivers in the same OpenOnload stack.

This option only takes effect when [`EF\_MCAST\_SEND`](#) is not set and is equivalent to [`EF\_MCAST\_SEND=1`](#) or [`EF\_MCAST\_SEND=0`](#) for values of 0 and 1 respectively.

See the OpenOnload manual for further details on multicast operation.

## **EF\_NAME**

Default: none

Maximum: 8 chars

Scope: per-stack

The environment variable `EF_NAME` will be honored to control Onload stack sharing. However, a call to `onload_set_stackname()` overrides this variable, and [`EF\_DONT\_ACCELERATE`](#) and [`EF\_STACK\_PER\_THREAD`](#) both take precedence over `EF_NAME`.

## **EF\_NETIF\_DTOR**

Name: netif\_dtor  
Default: 1  
Minimum: 0  
Maximum: 2  
Scope: per-process

This option controls the lifetime of OpenOnload stacks when the last socket in a stack is closed.

## **EF\_NONAGLE\_INFLIGHT\_MAX**

Name: nonagle\_inflight\_max  
Default: 50  
Minimum: 1  
Scope: per-stack

This option affects the behavior of TCP sockets with the TCP\_NODELAY socket option. Nagle's algorithm is enabled when the number of packets in-flight (sent but not acknowledged) exceeds the value of this option. This improves efficiency when sending many small messages, while preserving low latency.

Set this option to -1 to ensure that Nagle's algorithm never delays sending of TCP messages on sockets with TCP\_NODELAY enabled.

## **EF\_NO\_FAIL**

Name: no\_fail  
Default: 1  
Minimum: 0  
Maximum: 1  
Scope: per-process

This option controls whether failure to create an accelerated socket (due to resource limitations) is hidden by creating a conventional unaccelerated socket. Set this option to 0 to cause out-of-resources errors to be propagated as errors to the application, or to 1 to have Onload use the kernel stack instead when out of resources.

Disabling this option can be useful to ensure that sockets are being accelerated as expected (i.e. to find out when they are not).

## EF\_ONLOAD\_FD\_BASE

Name: fd\_base

Default: 4

Scope: per-process

Onload uses fds internally that are not visible to the application. This can cause problems for applications that make assumptions about their use of the fd space, for example by doing dup2/3 onto a specific file descriptor. If this is done on an fd that is internally used by Onload than an error of the form '*citp\_ep\_dup3(29, 3): target is reserved, see EF\_ONLOAD\_FD\_BASE*' will be generated.

This option specifies a base file descriptor value, that Onload should try to make its internal file descriptors greater than or equal to. This allows the application to direct Onload to a part of the fd space that it is not expecting to explicitly use.

## EF\_PACKET\_BUFFER\_MODE

Name: packet\_buffer\_mode

Default: 0

Minimum: 0

Maximum: 3

Scope: per-stack

This option affects how DMA buffers are managed. The default packet buffer mode uses a limited hardware resource, and so restricts the total amount of memory that can be used by Onload for DMA.

Setting EF\_PACKET\_BUFFER\_MODE!=0 enables 'scalable packet buffer mode' which removes that limit. See details for each mode below:

- 1 - SR-IOV with IOMMU.

Each stack allocates a separate PCI Virtual Function. IOMMU guarantees that different stacks do not have any access to each other data.

- 2 - Physical address mode.

Inherently unsafe, with no address space separation between different stacks or net driver packets.

- 3 - SR-IOV with physical address mode.

Each stack allocates a separate PCI Virtual Function. IOMMU is not used, so this mode is unsafe in the same way as (2).

To use odd modes (1 and 3) SR-IOV must be enabled in the BIOS, OS kernel and on the network adapter. In these modes you also get faster interrupt handler which can improve latency for some workloads.

For mode (1) you also have to enable IOMMU (also known as VT-d) in BIOS and in your kernel.

For unsafe physical address modes (2) and (3), you should tune phys\_mode\_gid module parameter of the onload module.

## **EF\_PERIODIC\_TIMER\_CPU**

Name: periodic\_timer\_cpu

Default: -1

Minimum: -1

Maximum: SMAX

Scope: per-stack

Affinizes Onload's periodic tasks to the specified CPU core. To ensure that Onload internal tasks such as polling timers are correctly serviced, the user should select a CPU that is receiving periodic timer ticks.

## **EF\_PER\_SOCKET\_CACHE\_MAX**

Name: per\_sock\_cache\_max

Default: -1

Minimum: -1

Maximum: SMAX

Scope: per-stack

When socket caching is enabled, (i.e. when [EF\\_SOCKET\\_CACHE\\_MAX > 0](#)), this sets a further limit on the size of the cache for each socket.

- If set to -1 in Onload 201805 onwards, or to 0 in earlier versions, no limit is set beyond the global limit specified by [EF\\_SOCKET\\_CACHE\\_MAX](#).  
This behavior is the default.
- If set to 0 in Onload 201805 onwards, no accepted sockets will be cached for any listening sockets. This allows active-open socket caching to be enabled without also enabling passive-open socket caching.

## **EF\_PIO**

Name: pio

Default: 1

Minimum: 0

Maximum: 2

Scope: per-stack

Control of whether Programmed I/O is used instead of DMA for small packets:

- 0 - no (use DMA)
- 1 - use PIO for small packets if available (default)  
Mode 1 will fall back to DMA if PIO is not currently available.
- 2 - use PIO for small packets and fail if PIO is not available.  
Mode 2 will fail to create the stack if the hardware supports PIO but PIO is not currently available.

On hardware that does not support PIO there is no difference between mode 1 and mode 2.

In all cases, PIO will only be used for small packets (see [EF\\_PIO\\_THRESHOLD](#)) and if the VI's transmit queue is currently empty. If these conditions are not met DMA will be used, even in mode 2.



**NOTE:** PIO is currently only available on x86\_64 systems.

**NOTE:** Mode 2 will not prevent a stack from operating without PIO in the event that PIO allocation is originally successful but then fails after an adapter is rebooted or hotplugged while that stack exists.

## **EF\_PIO\_THRESHOLD**

Name: pio\_thresh

Default: 1514

Minimum: 0

Scope: per-stack

Sets a threshold for the size of packet that will use PIO (if turned on using [EF\\_PIO](#)) or CPIO (if turned on using [EF\\_CPIO](#)). Packets up to the threshold will use PIO or CPIO. Larger packets will not.

## **EF\_PIPE**

Name: ul\_pipe

Default: 2

Minimum: CI\_UNIX\_PIPE\_DONT\_ACCELERATE

Maximum: CI\_UNIX\_PIPE\_ACCELERATE\_IF\_NETIF

Scope: per-process

- 0 - disable pipe acceleration
- 1 - enable pipe acceleration
- 2 - accelerate pipes only if an Onload stack already exists in the process.

## **EF\_PIPE\_RECV\_SPIN**

Name: pipe\_recv\_spin

Default: 0

Minimum: 0

Maximum: 1

Scope: per-process

Spin in pipe receive calls until data arrives or the spin timeout expires (whichever is the sooner). If the spin timeout expires, enter the kernel and block. The spin timeout is set by [EF\\_SPIN\\_USEC](#) or [EF\\_POLL\\_USEC](#).

## **EF\_PIPE\_SEND\_SPIN**

Name: pipe\_send\_spin  
Default: 0  
Minimum: 0  
Maximum: 1  
Scope: per-process

Spin in pipe send calls until space becomes available in the socket buffer or the spin timeout expires (whichever is the sooner). If the spin timeout expires, enter the kernel and block. The spin timeout is set by [EF\\_SPIN\\_USEC](#) or [EF\\_POLL\\_USEC](#).

## **EF\_PIPE\_SIZE**

Name: pipe\_size  
Default: 237568  
Minimum: OO\_PIPE\_MIN\_SIZE  
Maximum: CI\_CFG\_MAX\_PIPE\_SIZE  
Scope: per-process

Default size of the pipe in bytes. Actual pipe size will be rounded up to the size of packet buffer and subject to modifications by fcntl F\_SETPIPE\_SZ where supported.

## **EF\_PKT\_WAIT\_SPIN**

Name: pkt\_wait\_spin  
Default: 0  
Minimum: 0  
Maximum: 1  
Scope: per-process

Spin while waiting for DMA buffers. If the spin timeout expires, enter the kernel and block. The spin timeout is set by [EF\\_SPIN\\_USEC](#) or [EF\\_POLL\\_USEC](#).

## **EF\_POLL\_FAST**

Name: ul\_poll\_fast  
Default: 1  
Minimum: 0  
Maximum: 1  
Scope: per-process

Allow a poll() call to return without inspecting the state of all polled file descriptors when at least one event is satisfied. This allows the accelerated poll() call to avoid a system call when accelerated sockets are 'ready', and can increase performance substantially.

This option changes the semantics of poll(), and as such could cause applications to misbehave. It effectively gives priority to accelerated sockets over non-accelerated sockets and other file descriptors. In practice a vast majority of applications work fine with this option.

## **EF\_POLL\_FAST\_USEC**

Name: ul\_poll\_fast\_usec

Default: 32

Scope: per-process

When spinning in a poll() call, causes accelerated sockets to be polled for N usecs before unaccelerated sockets are polled. This reduces latency for accelerated sockets, possibly at the expense of latency on unaccelerated sockets. Since accelerated sockets are typically the parts of the application which are most performance-sensitive this is typically a good tradeoff.

## **EF\_POLL\_NONBLOCK\_FAST\_USEC**

Name: ul\_poll\_nonblock\_fast\_usec

Default: 200

Scope: per-process

When invoking poll() with timeout==0 (non-blocking), this option causes non-accelerated sockets to be polled only every N usecs.

This reduces latency for accelerated sockets, possibly at the expense of latency on unaccelerated sockets. Since accelerated sockets are typically the parts of the application which are most performance-sensitive this is often a good tradeoff.

Set this option to zero to disable, or to a higher value to further improve latency for accelerated sockets.

This option changes the behavior of poll() calls, so could potentially cause an application to misbehave.

## **EF\_POLL\_ON\_DEMAND**

Name: poll\_on\_demand

Default: 1

Minimum: 0

Maximum: 1

Scope: per-stack

Poll for network events in the context of the application calls into the network stack. This option is enabled by default.

This option can improve performance in multi-threaded applications where the Onload stack is interrupt-driven ([EF\\_INT\\_DRIVEN=1](#)), because it can reduce lock contention. Setting [EF\\_POLL\\_ON\\_DEMAND=0](#) ensures that network events are (mostly) processed in response to interrupts.

## **EF\_POLL\_SPIN**

Name: ul\_poll\_spin  
Default: 0  
Minimum: 0  
Maximum: 1  
Scope: per-process

Spin in poll() calls until an event is satisfied or the spin timeout expires (whichever is the sooner). If the spin timeout expires, enter the kernel and block. The spin timeout is set by [EF\\_SPIN\\_USEC](#) or [EF\\_POLL\\_USEC](#).

## **EF\_POLL\_USEC**

Name: ef\_poll\_usec\_meta\_option  
Default: 0  
Scope: per-process

This option enables spinning and sets the spin timeout in microseconds.

Setting this option is equivalent to: Setting [EF\\_SPIN\\_USEC](#) and [EF\\_BUZZ\\_USEC](#), enabling spinning for UDP sends and receives, TCP sends and receives, select, poll and epoll\_wait(), and enabling lock buzzing.

Spinning typically reduces latency and jitter substantially, and can also improve throughput. However, in some applications spinning can harm performance, particularly application that have many threads. When spinning is enabled you should normally dedicate a CPU core to each thread that spins.

You can use the EF\_\*\_SPIN options to selectively enable or disable spinning for each API and transport. You can also use the `onload_thread_set_spin()` extension API to control spinning on a per-thread and per-API basis.

## **EF\_PREALLOC\_PACKETS**

Name: prealloc\_packets  
Default: 0  
Minimum: 0  
Maximum: 1  
Scope: per-stack

If set ensures all packet buffers ([EF\\_MAX\\_PACKETS](#)) get allocated during stack creation or the stack creation fails. Also when set [EF\\_MIN\\_FREE\\_PACKETS](#) option is not taken into account.

## **EF\_PREFACE\_PACKETS**

Name: prefault\_packets

Default: 1

Minimum: 0

Maximum: 1000000000

Scope: per-stack

When set, this option causes the process to 'touch' the specified number of packet buffers when the Onload stack is created. This causes memory for the packet buffers to be pre-allocated, and also causes them to be memory-mapped into the process address space. This can prevent latency jitter caused by allocation and memory-mapping overheads.

The number of packets requested is in addition to the packet buffers that are allocated to fill the RX rings. There is no guarantee that it will be possible to allocate the number of packet buffers requested.

The default setting causes all packet buffers to be mapped into the user-level address space, but does not cause any extra buffers to be reserved. Set to 0 to prevent prefaulting.

## **EF\_PROBE**

Name: probe

Default: 1

Minimum: 0

Maximum: 1

Scope: per-process

When set, file descriptors accessed following exec() will be 'probed' and OpenOnload sockets will be mapped to user-land so that they can be accelerated. Otherwise OpenOnload sockets are not accelerated following exec().

## **EF\_RETRANSMIT\_THRESHOLD**

Name: retransmit\_threshold

Default: 15

Minimum: 0

Maximum: SMAX

Scope: per-stack

Number of retransmit timeouts before a TCP connection is aborted.

## **EF\_RETRANSMIT\_THRESHOLD\_ORPHAN**

Name: retransmit\_threshold\_orphan

Default: 8

Minimum: 0

Maximum: SMAX

Scope: per-stack

Number of retransmit timeouts before a TCP connection is aborted in case of orphaned connection.

## **EF\_RETRANSMIT\_THRESHOLD\_SYN**

Name: retransmit\_threshold\_syn

Default: 4

Minimum: 0

Maximum: SMAX

Scope: per-stack

Number of times a SYN will be retransmitted before a connect() attempt will be aborted.

## **EF\_RETRANSMIT\_THRESHOLD\_SYNACK**

Name: retransmit\_threshold\_synack

Default: 5

Minimum: 0

Maximum: CI\_CFG\_TCP\_SYNACK\_RETRANS\_MAX

Scope: per-stack

Number of times a SYN-ACK will be retransmitted before an embryonic connection will be aborted.

## **EF\_RFC\_RTO\_INITIAL**

Name: rto\_initial

Default: 1000

Scope: per-stack

Initial retransmit timeout in milliseconds. i.e. The number of milliseconds to wait for an ACK before retransmitting packets.

## **EF\_RFC\_RTO\_MAX**

Name: rto\_max

Default: 120000

Scope: per-stack

Maximum retransmit timeout in milliseconds.

## **EF\_RFC\_RTO\_MIN**

Name: rto\_min

Default: 200

Scope: per-stack

Minimum retransmit timeout in milliseconds.

## **EF\_RXQ\_LIMIT**

Name: rxq\_limit

Default: 65535

Minimum: CI\_CFG\_RX\_DESC\_BATCH

Maximum: 65535

Scope: per-stack

Maximum fill level for the receive descriptor ring. This has no effect when it has a value larger than the ring size ([EF\\_RXQ\\_SIZE](#)).

## **EF\_RXQ\_MIN**

Name: rxq\_min

Default: 256

Minimum: 2 \* CI\_CFG\_RX\_DESC\_BATCH + 1

Scope: per-stack

Minimum initial fill level for each RX ring. If Onload is not able to allocate sufficient packet buffers to fill each RX ring to this level, then creation of the stack will fail.

## **EF\_RXQ\_SIZE**

Name: rxq\_size

Default: 512

Minimum: 512

Maximum: 4096

Scope: per-stack

Set the size of the receive descriptor ring. Valid values: 512, 1024, 2048 or 4096.

A larger ring size can absorb larger packet bursts without drops, but may reduce efficiency because the working set size is increased.

## **EF\_RX\_TIMESTAMPING**

Name: rx\_timestamping

Default: 0

Minimum: 0

Maximum: 3

Scope: per-stack

Control of hardware timestamping of received packets, possible values:

- 0 - do not do timestamping (default)
- 1 - request timestamping but continue if hardware is not capable or it does not succeed
- 2 - request timestamping and fail if hardware is capable and it does not succeed
- 3 - request timestamping and fail if hardware is not capable or it does not succeed.

## **EF\_SA\_ONSTACK\_INTERCEPT**

Name: sa\_onstack\_intercept  
Default: 0  
Minimum: 0  
Maximum: 1  
Scope: per-process

Intercept signals when signal handler is installed with SA\_ONSTACK flag.

- 0 - Don't intercept.  
If you call socket-related functions such as send, file-related functions such as close or dup from your signal handler, then your application may deadlock.  
(default)
- 1 - Intercept.

There is no guarantee that SA\_ONSTACK flag will really work, but OpenOnload library will do its best.

## **EF\_SCALABLE\_ACTIVE\_WILDS\_NEED\_FILTER**

Name: scalable\_active\_wilds\_need\_filter  
Default: 0  
Minimum: 0  
Maximum: 1  
Scope: per-stack

When set to 1, IP filter is installed for every cached active-opened socket (see [EF\\_TCP\\_SHARED\\_LOCAL\\_PORTS](#) on page 240). Otherwise it is assumed that scalable filters do the job.

Default: 1 if [EF\\_SCALABLE\\_FILTERS\\_ENABLE](#)=1 and scalable mode in [EF\\_SCALABLE\\_FILTERS\\_MODE](#) is “active”; 0 otherwise.

## EF\_SCALABLE\_FILTERS

Name: scalable\_filter\_string

Default: 0

Minimum: none

Maximum: none

Scope: per-stack

Specifies the interface on which to enable support for scalable filters, and configures the scalable filter mode(s) to use. Scalable filters allow Onload to use a single hardware MAC-address filter to avoid hardware limitations and overheads. This removes restrictions on the number of simultaneous connections and increases performance of active connect calls, but kernel support on the selected interface is limited to ARP/DHCP/ICMP protocols and some Onload features that rely on unaccelerated traffic (such as receiving fragmented UDP datagrams) will not work. Please see the Onload user guide for full details.

Depending on the mode selected this option will enable support for:

- scalable listening sockets
- IP\_TRANSPARENT socket option
- scalable active open.

The interface specified must be a SFN7000 or later adapter.

Format of EF\_SCALABLE\_FILTERS variable is as follows:

EF\_SCALABLE\_FILTERS=[<interface-name>[=mode[:mode]],]<interface-name>[=mode[:mode]]

The following modes and their combinations can be specified:

- transparent\_active
- rss:transparent\_active
- passive
- rss:passive
- transparent\_active:passive
- active
- rss:active
- rss:passive:active

It is possible to specify both an active mode interface and a passive mode interface. If two interfaces are specified then both the active and passive interfaces must have the same rss qualifier.

## EF\_SCALABLE\_FILTERS\_ENABLE

Name: scalable\_filter\_enable

Default: 0

Minimum: 0

Maximum: 2

Scope: per-stack

Turn the scalable filter feature on or off on a stack. Takes one of the following values:

- 0 – Scalable filters are not used for this stack.
- 1 – The configuration selected in [EF\\_SCALABLE\\_FILTERS](#) will be used.
- 2 – Indicates a special mode to address a master-worker hierarchy of some event driven applications.

The scalable filter gets created for reuse by port bound sockets in the master process context. However, active mode will become available in worker processes once they add one of the sockets to their epoll set.

Applies to `rss : *active` scalable modes.



**NOTE:** This mode is not compatible with use of the onload extensions stackname API.

If unset this will default to 1 if [EF\\_SCALABLE\\_FILTERS](#) is configured.

## EF\_SCALABLE\_FILTERS\_IFINDEX\_ACTIVE

Name: scalable\_filter\_ifindex\_active

Default: 0

Minimum: CITP\_SCALABLE\_FILTERS\_MIN

Maximum: SMAX

Scope: per-stack

Stores active scalable filter interface set with [EF\\_SCALABLE\\_FILTERS](#). To be set indirectly with [EF\\_SCALABLE\\_FILTERS](#) variable

## EF\_SCALABLE\_FILTERS\_IFINDEX\_PASSIVE

Name: scalable\_filter\_ifindex\_passive

Default: 0

Minimum: CITP\_SCALABLE\_FILTERS\_MIN

Maximum: SMAX

Scope: per-stack

Stores passive scalable filter interface set with [EF\\_SCALABLE\\_FILTERS](#). To be set indirectly with [EF\\_SCALABLE\\_FILTERS](#) variable

## EF\_SCALABLE\_FILTERS\_MODE

Name: scalable\_filter\_mode  
Default: -1  
Minimum: -1  
Maximum: 13  
Scope: per-stack

Stores scalable filter mode set with [EF\\_SCALABLE\\_FILTERS](#). To be set indirectly with [EF\\_SCALABLE\\_FILTERS](#) variable.

## EF\_SCALABLE\_LISTEN\_MODE

Name: scalable\_listen  
Default: 0  
Minimum: 0  
Maximum: 1  
Scope: per-stack

Choose behavior of scalable listening sockets when using [EF\\_SCALABLE\\_FILTERS](#)

- 0 – Listening sockets bound to a local address configured on the scalable interface use the scalable filter (default). Connections on other interfaces are not accelerated.
- 1 – Listening sockets bound to a local address configured on the scalable interface use the scalable filter. Connections on other interfaces including loopback are refused.

This mode avoids kernel scalability issues with large numbers of listen sockets.

## EF\_SELECT\_FAST

Name: ul\_select\_fast  
Default: 1  
Minimum: 0  
Maximum: 1  
Scope: per-process

Allow a `select()` call to return without inspecting the state of all selected file descriptors when at least one selected event is satisfied. This allows the accelerated `select()` call to avoid a system call when accelerated sockets are 'ready', and can increase performance substantially.

This option changes the semantics of `select()`, and as such could cause applications to misbehave. It effectively gives priority to accelerated sockets over non-accelerated sockets and other file descriptors. In practice a vast majority of applications work fine with this option.

## **EF\_SELECT\_FAST\_USEC**

Name: ul\_select\_fast\_usec  
Default: 32  
Scope: per-process

When spinning in a `select()` call, causes accelerated sockets to be polled for N usecs before unaccelerated sockets are polled. This reduces latency for accelerated sockets, possibly at the expense of latency on unaccelerated sockets. Since accelerated sockets are typically the parts of the application which are most performance-sensitive this is typically a good tradeoff.

## **EF\_SELECT\_NONBLOCK\_FAST\_USEC**

Name: ul\_select\_nonblock\_fast\_usec  
Default: 200  
Scope: per-process

When invoking `select()` with `timeout==0` (non-blocking), this option causes non-accelerated sockets to be polled only every N usecs.

This reduces latency for accelerated sockets, possibly at the expense of latency on unaccelerated sockets. Since accelerated sockets are typically the parts of the application which are most performance-sensitive this is often a good tradeoff.

Set this option to zero to disable, or to a higher value to further improve latency for accelerated sockets.

This option changes the behavior of `select()` calls, so could potentially cause an application to misbehave.

## **EF\_SELECT\_SPIN**

Name: ul\_select\_spin  
Default: 0  
Minimum: 0  
Maximum: 1  
Scope: per-process

Spin in blocking `select()` calls until the select set is satisfied or the spin timeout expires (whichever is the sooner). If the spin timeout expires, enter the kernel and block. The spin timeout is set by [EF\\_SPIN\\_USEC](#) or [EF\\_POLL\\_USEC](#).

## EF\_SEND\_POLL\_MAX\_EVS

Name: send\_poll\_max\_events  
Default: 96  
Minimum: 1  
Maximum: 65535  
Scope: per-stack

When polling for network events after sending, this places a limit on the number of events handled.

## EF\_SEND\_POLL\_THRESH

Name: send\_poll\_thresh  
Default: 64  
Minimum: 0  
Maximum: 65535  
Scope: per-stack

Poll for network events after sending this many packets.

Setting this to a larger value may improve transmit throughput for small messages by allowing batching. However, such batching may cause sends to be delayed leading to increased jitter.

## EF\_SHARE\_WITH

Name: share\_with  
Default: 0  
Minimum: -1  
Maximum: SMAX  
Scope: per-stack

Set this option to allow a stack to be accessed by processes owned by another user. Set it to the UID of a user that should be permitted to share this stack, or set it to -1 to allow any user to share the stack. By default stacks are not accessible by users other than root.

Processes invoked by root can access any stack. Setuid processes can only access stacks created by the effective user, not the real user. This restriction can be relaxed by setting the onload kernel module option allow\_insecure\_setuid\_sharing=1.



**WARNING:** A user that is permitted to access a stack is able to: snoop on any data transmitted or received via the stack; inject or modify data transmitted or received via the stack; damage the stack and any sockets or connections in it; cause misbehavior and crashes in any application using the stack.

## EF\_SIGNALS\_NOPOSTPONE

Name: `signals_no_postpone`  
Default: 67110088  
Minimum: 0  
Maximum: `(ci_uint64)(-1)`  
Scope: per-process

Comma-separated list of signal numbers to avoid postponing of the signal handlers. Your application will deadlock if one of the handlers uses socket function. By default, the list includes SIGBUS, SIGFPE, SIGSEGV and SIGPROF.

Please specify numbers, not string aliases: `EF_SIGNALS_NOPOSTPONE=7,11,27` instead of `EF_SIGNALS_NOPOSTPONE=SIGBUS,SIGSEGV,SIGPROF`.

You can set `EF_SIGNALS_NOPOSTPONE` to empty value to postpone all signal handlers in the same way if you suspect these signals to call network functions.

## EF\_SLEEP\_SPIN\_USEC

Name: `sleep_spin_usec`  
Default: 0  
Scope: per-process

Sets the duration in microseconds of sleep after each spin iteration. Currently applies to EPOLL3 `epoll_wait` only. Enabling the option trades some of the benefits of spinning - latency - for reduction in CPU utilization and power consumption.

Spinning typically reduces latency and jitter substantially, and can also improve throughput. However, in some applications spinning can harm performance; particularly application that have many threads. When spinning is enabled you should normally dedicate a CPU core to each thread that spins.

You can use the `EF_*_SPIN` options to selectively enable or disable spinning for each API and transport. You can also use the  `onload_thread_set_spin()` extension API to control spinning on a per-thread and per-API basis.

## EF\_SOCKET\_CACHE\_MAX

Name: `sock_cache_max`  
Default: 0  
Maximum: SMAX  
Scope: per-stack

Sets the maximum number of TCP sockets to cache for this stack. When set  $> 0$ , OpenOnload will cache resources associated with sockets in order to improve connection set-up and tear-down performance. This improves performance for applications that make new TCP connections at a high rate.

## EF\_SOCKET\_CACHE\_PORTS

Name: `sock_cache_ports`  
Default: 0  
Scope: per-process

This option specifies a comma-separated list of port numbers. When set (and socket caching is enabled), only sockets bound to the specified ports will be eligible to be cached.

## EF SOCK LOCK BUZZ

Name: `sock_lock_buzz`  
Default: 0  
Minimum: 0  
Maximum: 1  
Scope: per-process

Spin while waiting to obtain a per-socket lock. If the spin timeout expires, enter the kernel and block. The spin timeout is set by [EF\\_BUZZ\\_USEC](#).

The per-socket lock is taken in `recv()` calls and similar. This option can reduce jitter when multiple threads invoke `recv()` on the same socket, but can reduce fairness between threads competing for the lock.

## EF\_SO\_BUSY\_POLL\_SPIN

Name: `so_busy_poll_spin`  
Default: 0  
Minimum: 0  
Maximum: 1  
Scope: per-process

Spin poll, select and epoll in a Linux-like way: enable spinning only if a spinning socket is preset in the poll/select/epoll set. See Linux documentation on `SO_BUSY_POLL` socket option for details.

You should also enable spinning via `EF_{POLL, SELECT, EPOLL}_SPIN` variable if you'd like to spin in poll, select or epoll correspondingly. The spin duration is set via [EF\\_SPIN\\_USEC](#), which is equivalent to the Linux `sysctl.net.busy_poll` value. [EF\\_POLL\\_USEC](#) is all-in-one variable to set for all 4 variables mentioned here.

Linux never spins in epoll, but Onload does. This variable does not affect epoll behavior if [EF\\_UL\\_EPOLL](#)=2.

## EF\_SPIN\_USEC

Name: `ul_spin_usec`  
Default: 0  
Scope: per-process

Sets the timeout in microseconds for spinning options. Set this to -1 to spin forever. The spin timeout may also be set by the [EF\\_POLL\\_USEC](#) option.

Spinning typically reduces latency and jitter substantially, and can also improve throughput. However, in some applications spinning can harm performance, particularly application that have many threads. When spinning is enabled you should normally dedicate a CPU core to each thread that spins.

You can use the `EF_*_SPIN` options to selectively enable or disable spinning for each API and transport. You can also use the `onload_thread_set_spin()` extension API to control spinning on a per-thread and per-API basis.

## EF\_STACK\_LOCK\_BUZZ

Name: `stack_lock_buzz`  
Default: 0  
Minimum: 0  
Maximum: 1  
Scope: per-process

Spin while waiting to obtain a per-stack lock. If the spin timeout expires, enter the kernel and block. The spin timeout is set by [EF\\_BUZZ\\_USEC](#).

This option reduces jitter caused by lock contention, but can reduce fairness between threads competing for the lock.

## EF\_STACK\_PER\_THREAD

Name: `stack_per_thread`  
Default: 0  
Minimum: 0  
Maximum: 1  
Scope: per-process

Create a separate Onload stack for the sockets created by each thread.

## **EF\_SYNC\_CPLANE\_AT\_CREATE**

Name: sync\_cplane  
Default: 1  
Minimum: 0  
Maximum: 2  
Scope: per-process

When this option is set to 2 Onload will force a sync of control plane information from the kernel when a stack is created. This can help to ensure up to date information is used where a stack is created immediately following interface configuration.

If this option is set to 1 then Onload will perform a lightweight sync of control plane information without performing a full dump. It is the default mode.

Setting this option to 0 will disable forced sync. Synchronizing data from the kernel will continue to happen periodically.

Sync operation time is limited by `cplane_init_timeout` onload module option.

## **EF\_TCP**

Name: u1\_tcp  
Default: 1  
Minimum: 0  
Maximum: 1  
Scope: per-process

Clear to disable acceleration of new TCP sockets.

## **EF\_TCP\_ACCEPT\_SPIN**

Name: tcp\_accept\_spin  
Default: 0  
Minimum: 0  
Maximum: 1  
Scope: per-process

Spin in blocking TCP `accept()` calls until incoming connection is established, the spin timeout expires or the socket timeout expires (whichever is the sooner). If the spin timeout expires, enter the kernel and block. The spin timeout is set by [EF\\_SPIN\\_USEC](#) or [EF\\_POLL\\_USEC](#).

## EF\_TCP\_ADV\_WIN\_SCALE\_MAX

Name: `tcp_adv_win_scale_max`  
Default: 14  
Minimum: 0  
Maximum: 14  
Scope: per-stack

Maximum value for TCP window scaling that will be advertised.

## EF\_TCP\_BACKLOG\_MAX

Name: `tcp_backlog_max`  
Default: 256  
Scope: per-stack

Places an upper limit on the number of embryonic (half-open) connections for one listening socket. See also [EF\\_TCP\\_SYNRECV\\_MAX](#).

This value is overridden by `/proc/sys/net/ipv4/tcp_max_syn_backlog`.

## EF\_TCP\_CLIENT\_LOOPBACK

Name: `tcp_client_loopback`  
Default: 0  
Minimum: 0  
Maximum: `CITP_TCP_LOOPBACK_TO_NEWSTACK`  
Scope: per-stack

Enable acceleration of TCP loopback connections on the connecting (client) side:

- 0 - not accelerated (default)
- 1 - accelerate if the listening socket is in the same stack (you should also set [EF\\_TCP\\_SERVER\\_LOOPBACK!=0](#))
- 2 - accelerate and move accepted socket to the stack of the connecting socket (server should allow this via [EF\\_TCP\\_SERVER\\_LOOPBACK=2](#))
- 3 - accelerate and move the connecting socket to the stack of the listening socket (server should allow this via [EF\\_TCP\\_SERVER\\_LOOPBACK!=0](#))
- 4 - accelerate and move both connecting and accepted sockets to the new stack (server should allow this via [EF\\_TCP\\_SERVER\\_LOOPBACK=2](#)).



**NOTE:** Options 3 and 4 break some applications using `epoll()`, `fork()` and `dup()` calls.



**NOTE:** Options 2 and 4 makes `accept()` to misbehave if the client exist too early.

**NOTE:** Option 4 is not recommended on 32-bit systems because it can create a lot of additional Onload stacks eating a lot of low memory.

## EF\_TCP\_CONNECT\_HANDOVER

Name: `tcp_connect_handover`  
Default: 0  
Minimum: 0  
Maximum: 1  
Scope: per-stack

When an accelerated TCP socket calls `connect()`, hand it over to the kernel stack. This option disables acceleration of active-open TCP connections.

## EF\_TCP\_CONNECT\_SPIN

Name: `tcp_connect_spin`  
Default: 0  
Minimum: 0  
Maximum: 1  
Scope: per-process

Spin in blocking TCP `connect()` calls until connection is established, the spin timeout expires or the socket timeout expires (whichever is the sooner). If the spin timeout expires, enter the kernel and block. The spin timeout is set by

[EF\\_SPIN\\_USEC](#) or [EF\\_POLL\\_USEC](#).

## EF\_TCP\_FASTSTART\_IDLE

Name: `tcp_faststart_idle`  
Default: 65536  
Minimum: 0  
Scope: per-stack

The FASTSTART feature prevents Onload from delaying ACKs during times when doing so may reduce performance. FASTSTART is enabled when a connection is new, following loss and after the connection has been idle for a while.

This option sets the number of bytes that must be ACKed by the receiver before the connection exits FASTSTART. Set to zero to prevent a connection entering FASTSTART after an idle period.

## EF\_TCP\_FASTSTART\_INIT

Name: `tcp_faststart_init`  
Default: 65536  
Minimum: 0  
Scope: per-stack

The FASTSTART feature prevents Onload from delaying ACKs during times when doing so may reduce performance. FASTSTART is enabled when a connection is new, following loss and after the connection has been idle for a while.

This option sets the number of bytes that must be ACKed by the receiver before the connection exits FASTSTART. Set to zero to disable FASTSTART on new connections.

## **EF\_TCP\_FASTSTART\_LOSS**

Name: `tcp_faststart_loss`  
Default: 65536  
Minimum: 0  
Scope: per-stack

The FASTSTART feature prevents Onload from delaying ACKs during times when doing so may reduce performance. FASTSTART is enabled when a connection is new, following loss and after the connection has been idle for a while.

This option sets the number of bytes that must be ACKed by the receiver before the connection exits FASTSTART following loss. Set to zero to disable FASTSTART after loss.

## **EF\_TCP\_FIN\_TIMEOUT**

Name: `fin_timeout`  
Default: 60  
Scope: per-stack

Time in seconds to wait for an orphaned connection to be closed properly by the network partner (e.g. FIN in the TCP FIN\_WAIT2 state, zero window opening to send our FIN, etc).

## **EF\_TCP\_FORCE\_REUSEPORT**

Name: `tcp_reuseports`  
Default: 0  
Scope: per-process

This option specifies a comma-separated list of port numbers. TCP sockets that bind to those port numbers will have SO\_REUSEPORT automatically applied to them.

## **EF\_TCP\_INITIAL\_CWND**

Name: `initial_cwnd`  
Default: 0  
Minimum: 0  
Maximum: SMAX  
Scope: per-stack

Sets the initial size of the congestion window (in bytes) for TCP connections. Some care is needed as, for example, setting smaller than the segment size may result in Onload being unable to send traffic.

**WARNING:** Modifying this option may violate the TCP protocol.



## EF\_TCP\_LISTEN\_HANDOVER

Name: `tcp_listen_handover`  
Default: 0  
Minimum: 0  
Maximum: 1  
Scope: per-stack

When an accelerated TCP socket calls `listen()`, hand it over to the kernel stack. This option disables acceleration of TCP listening sockets and passively opened TCP connections.

## EF\_TCP\_LOSS\_MIN\_CWND

Name: `loss_min_cwnd`  
Default: 0  
Minimum: 0  
Maximum: SMAX  
Scope: per-stack

Sets the minimum size of the congestion window for TCP connections following loss.



**WARNING:** Modifying this option may violate the TCP protocol.

Deprecated. Please use [EF\\_TCP\\_MIN\\_CWND](#) instead.

## EF\_TCP\_MIN\_CWND

Name: `min_cwnd`  
Default: 0  
Minimum: 0  
Maximum: SMAX  
Scope: per-stack

Sets the minimum size of the congestion window for TCP connections. This value is used for any congestion window changes: connection start, packet loss, connection being idle, etc.



**WARNING:** Modifying this option may violate the TCP protocol.

## EF\_TCP\_RCVBUF

Name: `tcp_rcvbuf_user`  
Default: 0  
Scope: per-stack

Override SO\_RCVBUF for TCP sockets. (Note: the actual size of the buffer is double the amount requested, mimicking the behavior of the Linux kernel.)

## EF\_TCP\_RCVBUF\_ESTABLISHED\_DEFAULT

Name: `tcp_rcvbuf_est_def`

Default: 131072

Scope: per-stack

Overrides the OS default `SO_RCVBUF` value for TCP sockets in the ESTABLISHED state if the OS default `SO_RCVBUF` value falls outside bounds set with this option. This value is used when the TCP connection transitions to ESTABLISHED state, to avoid confusion of some applications like netperf.

The lower bound is set to this value and the upper bound is set to  $4 * \text{this value}$ . If the OS default `SO_RCVBUF` value is less than the lower bound, then the lower bound is used. If the OS default `SO_RCVBUF` value is more than the upper bound, then the upper bound is used.

This variable overrides OS default `SO_RCVBUF` value only, it does not change `SO_RCVBUF` if the application explicitly sets it (see [EF\\_TCP\\_RCVBUF](#) variable which overrides application-supplied value).

## EF\_TCP\_RCVBUF\_MODE

Name: `tcp_rcvbuf_mode`

Default: 0

Minimum: 0

Maximum: 1

Scope: per-stack

This option controls how the RCVBUF is set for TCP Mode 0 (default) gives fixed size RCVBUF.

Mode 1 will enable automatic tuning of RCVBUF using Dynamic Right Sizing. If `SO_RCVBUF` is explicitly set by the application this value will be used.

[EF\\_TCP\\_SOCKBUF\\_MAX\\_FRACTION](#) can be used to control the maximum size of the buffer for an individual socket.

The effect of [EF\\_TCP\\_RCVBUF\\_STRICT](#) is independent of this setting.

## EF\_TCP\_RCVBUF\_STRICT

Name: `tcp_rcvbuf_strict`

Default: 0

Minimum: 0

Maximum: 1

Scope: per-stack

This option prevents TCP small segment attack. With this option set, Onload limits the number of packets inside TCP receive queue and TCP reorder buffer. In some cases, this option causes performance penalty. You probably want this option if your application is connecting to untrusted partner or over untrusted network.

Off by default.

## EF\_TCP\_RECV\_SPIN

Name: `tcp_recv_spin`  
Default: 0  
Minimum: 0  
Maximum: 1  
Scope: per-process

Spin in blocking TCP receive calls until data arrives, the spin timeout expires or the socket timeout expires (whichever is the sooner). If the spin timeout expires, enter the kernel and block. The spin timeout is set by [EF\\_SPIN\\_USEC](#) or [EF\\_POLL\\_USEC](#).

## EF\_TCP\_RST\_DELAYED\_CONN

Name: `rst_delayed_conn`  
Default: 0  
Minimum: 0  
Maximum: 1  
Scope: per-stack

This option tells Onload to reset TCP connections rather than allow data to be transmitted late. Specifically, TCP connections are reset if the retransmit timeout fires. (This usually happens when data is lost, and normally triggers a retransmit which results in data being delivered hundreds of milliseconds late).



**WARNING:** This option is likely to cause connections to be reset spuriously if ACK packets are dropped in the network.

## EF\_TCP\_RX\_CHECKS

Name: `tcp_rx_checks`  
Default: 0  
Minimum: 0  
Maximum: 1  
Scope: per-stack

Internal/debugging use only: perform extra debugging/consistency checks on received packets.

## EF\_TCP\_RX\_LOG\_FLAGS

Name: `tcp_rx_log_flags`  
Default: 0  
Scope: per-stack

Log received packets that have any of these flags set in the TCP header. Only active when [EF\\_TCP\\_RX\\_CHECKS](#) is set.

## **EF\_TCP\_SEND\_NONBLOCK\_NO\_PACKETS\_MODE**

Name: `tcp_nonblock_no_pkts_mode`  
Default: 0  
Minimum: 0  
Maximum: 1  
Scope: per-stack

This option controls how a non-blocking TCP send() call should behave if it is unable to allocate sufficient packet buffers. By default Onload will mimic Linux kernel stack behavior and block for packet buffers to be available. If set to 1, this option will cause Onload to return error ENOBUFS. Note this option can cause some applications (that assume that a socket that is writable is able to send without error) to malfunction.

## **EF\_TCP\_SEND\_SPIN**

Name: `tcp_send_spin`  
Default: 0  
Minimum: 0  
Maximum: 1  
Scope: per-process

Spin in blocking TCP send calls until window is updated by peer, the spin timeout expires or the socket timeout expires (whichever is the sooner). If the spin timeout expires, enter the kernel and block. The spin timeout is set by [EF\\_SPIN\\_USEC](#) or [EF\\_POLL\\_USEC](#).

## **EF\_TCP\_SERVER\_LOOPBACK**

Name: `tcp_server_loopback`  
Default: 0  
Minimum: 0  
Maximum: `CITP_TCP_LOOPBACK_ALLOW_ALIEN_IN_ACCEPTQ`  
Scope: per-stack

Enable acceleration of TCP loopback connections on the listening (server) side:

- 0 - not accelerated (default)
- 1 - accelerate if the connecting socket is in the same stack (you should also set [EF\\_TCP\\_CLIENT\\_LOOPBACK!=0](#))
- 2 - accelerate and allow accepted socket to be in another stack (this is necessary for clients with [EF\\_TCP\\_CLIENT\\_LOOPBACK=2,4](#)).

## EF\_TCP\_SHARED\_LOCAL\_PORTS

Name: `tcp_shared_local_ports`

Default: 0

Minimum: 0

Scope: per-stack

This feature improves the performance of TCP active-opens. It reduces the cost of both blocking and non-blocking `connect()` calls, reduces the latency to establish new connections, and enables scaling to large numbers of active-open connections. It also reduces the cost of closing these connections.

These improvements are achieved by sharing a set of local port numbers amongst active-open sockets, which saves the cost and scaling limits associated with installing packet steering filters for each active-open socket. Shared local ports are only used when the local port is not explicitly assigned by the application. Set this option to `>=1` to enable local port sharing.

The value set gives the initial number of local ports to allocate when the Onload stack is created. More shared local ports are allocated on demand as needed up to the maximum given by [EF\\_TCP\\_SHARED\\_LOCAL\\_PORTS\\_MAX](#).



**NOTE:** Note that typically only one local shared port is needed, as different local ports are only needed when multiple connections are made to the same remote IP:port.

## EF\_TCP\_SHARED\_LOCAL\_PORTS\_MAX

Name: `tcp_shared_local_ports_max`

Default: 100

Minimum: 0

Scope: per-stack

This setting sets the maximum size of the pool of local shared ports. See [EF\\_TCP\\_SHARED\\_LOCAL\\_PORTS](#) for details.

## EF\_TCP\_SHARED\_LOCAL\_PORTS\_NO\_FALLBACK

Name: `tcp_shared_local_no_fallback`

Default: 0

Minimum: 0

Maximum: 1

Scope: per-stack

When set, connecting TCP sockets will use ports only from the TCP shared local port pool (unless explicitly bound). If all shared local ports are in use, the `connect()` call will fail.

## **EF\_TCP\_SHARED\_LOCAL\_PORTS\_PER\_IP**

Name: `tcp_shared_local_ports_per_ip`

Default: 0

Minimum: 0

Maximum: 1

Scope: per-stack

When set, ports reserved for the pool of shared local ports will be reserved per local IP address on demand.

## **EF\_TCP\_SHARED\_LOCAL\_PORTS\_REUSE\_FAST**

Name: `tcp_shared_local_ports_reuse_fast`

Default: 0

Minimum: 0

Maximum: 1

Scope: per-stack

When enabled, this option allows shared local ports (as controlled by the [EF\\_TCP\\_SHARED\\_LOCAL\\_PORTS](#) option) to be reused immediately when the previous socket using that port has reached the CLOSED state, even if it did so via LAST-ACK.

## **EF\_TCP\_SNDBUF**

Name: `tcp_sndbuf_user`

Default: 0

Scope: per-stack

Override SO\_SNDBUF for TCP sockets (Note: the actual size of the buffer is double the amount requested, mimicking the behavior of the Linux kernel.)

## **EF\_TCP\_SNDBUF\_ESTABLISHED\_DEFAULT**

Name: `tcp_sndbuf_est_def`

Default: 131072

Scope: per-stack

Overrides the OS default SO\_SNDBUF value for TCP sockets in the ESTABLISHED state if the OS default SO\_SNDBUF value falls outside bounds set with this option. This value is used when the TCP connection transitions to ESTABLISHED state, to avoid confusion of some applications like netperf.

The lower bound is set to this value and the upper bound is set to 4 \* this value. If the OS default SO\_SNDBUF value is less than the lower bound, then the lower bound is used. If the OS default SO\_SNDBUF value is more than the upper bound, then the upper bound is used.

This variable overrides OS default SO\_SNDBUF value only, it does not change SO\_SNDBUF if the application explicitly sets it (see [EF\\_TCP\\_SNDBUF](#) variable which overrides application-supplied value).

## **EF\_TCP\_SNDBUF\_MODE**

Name: `tcp_sndbuf_mode`

Default: 1

Minimum: 0

Maximum: 2

Scope: per-stack

This option controls how the SO\_SNDBUF limit is applied to TCP sockets. In the default mode the limit applies to the size of the send queue and retransmit queue combined. When this option is set to 0 the limit applies to the send queue only.

When this option is set to 2, the SNDBUF size is automatically adjusted for each TCP socket to match the window advertised by the peer (limited by [EF\\_TCP\\_SOCKBUF\\_MAX\\_FRACTION](#)). If the application sets SO\_SNDBUF explicitly then automatic adjustment is not used for that socket. The limit is applied to the size of the send queue and retransmit queue combined. You may also want to set [EF\\_TCP\\_RCVBUF\\_MODE](#) to give automatic adjustment of RCVBUF.

## **EF\_TCP\_SOCKBUF\_MAX\_FRACTION**

Name: `tcp_sockbuf_max_fraction`

Default: 1

Minimum: 1

Maximum: 10

Scope: per-stack

This option controls the maximum fraction of the TX buffers that may be allocated to a single socket with [EF\\_TCP\\_SNDBUF\\_MODE](#)=2.

It also controls the maximum fraction of the RX buffers that maybe allocated to a single socket with [EF\\_TCP\\_RCVBUF\\_MODE](#)=1.

The maximum allocation for a socket is [EF\\_MAX\\_TX\\_PACKETS](#)/( $2^N$ ) for TX and [EF\\_MAX\\_RX\\_PACKETS](#)/( $2^N$ ) for RX, where N is specified here.

## **EF\_TCP\_SYNCOOKIES**

Name: `tcp_syncookies`

Default: 0

Minimum: 0

Maximum: 1

Scope: per-stack

Use TCP syncookies to protect from SYN flood attack.

## EF\_TCP\_SYNRECV\_MAX

Name: `tcp_synrecv_max`  
Default: 1024  
Maximum: `CI_CFG_NETIF_MAX_ENDPOINTS_MAX`  
Scope: per-stack

Places an upper limit on the number of embryonic (half-open) connections in an Onload stack. See also [EF\\_TCP\\_BACKLOG\\_MAX](#).

By default, `EF_TCP_SYNRECV_MAX = 4 * EF_TCP_BACKLOG_MAX`.

## EF\_TCP\_SYN\_OPTS

Name: `syn_opts`  
Default: 7  
Scope: per-stack

A bitmask specifying the TCP options to advertise in SYN segments:

- bit 0 (0x1) is set to 1 to enable PAWS and RTTM timestamps (RFC1323)
- bit 1 (0x2) is set to 1 to enable window scaling (RFC1323)
- bit 2 (0x4) is set to 1 to enable SACK (RFC2018)
- bit 3 (0x8) is set to 1 to enable ECN (RFC3128).

Overridden by OS settings if they are available.

## EF\_TCP\_TCONST\_MSL

Name: `msl_seconds`  
Default: 25  
Scope: per-stack

The Maximum Segment Lifetime (as defined by the TCP RFC). A smaller value causes connections to spend less time in the `TIME_WAIT` state.

## EF\_TCP\_TSOPT\_MODE

Name: `tcp_tsopt_mode`  
Default: 2  
Minimum: 0  
Maximum: 2  
Scope: per-stack

Enable or disable per-stack TCP header timestamps (as defined in RFC 1323). Overrides system setting `ipv4.tcp_timestamps` and [EF\\_TCP\\_SYN\\_OPTS](#). Possible values are:

- 0 - Disable TCP header timestamps
- 1 - Enable TCP header timestamps

- 2 - Use system settings (default)

## **EF\_TIMESTAMPING\_REPORTING**

Name: timestamping\_reporting

Default: 0

Minimum: 0

Maximum: 1

Scope: per-stack

Controls timestamp reporting, possible values:

- 0: report translated timestamps only when the NIC clock has been set
- 1: report translated timestamps only when the system clock and the NIC clock are in sync (e.g. using ptpd)

If the above conditions are not met Onload will only report raw (not translated) timestamps.

## **EF\_TXQ\_LIMIT**

Name: txq\_limit

Default: 268435455

Minimum: 16 \* 1024

Maximum: 0xffffffff

Scope: per-stack

Maximum number of bytes to enqueue on the transmit descriptor ring.

## **EF\_TXQ\_RESTART**

Name: txq\_restart

Default: 268435455

Minimum: 1

Maximum: 0xffffffff

Scope: per-stack

Level (in bytes) to which the transmit descriptor ring must fall before it will be filled again.

## **EF\_TXQ\_SIZE**

Name: txq\_size

Default: 512

Minimum: 512

Maximum: 4096

Scope: per-stack

Set the size of the transmit descriptor ring. Valid values: 512, 1024, 2048 or 4096.

## **EF\_TX\_MIN\_IPG\_CNTL**

Name: tx\_min\_ipg\_cntl

Default: 0

Minimum: -1

Maximum: 20

Scope: per-stack

Rate pacing value.

## **EF\_TX\_PUSH**

Name: tx\_push

Default: 1

Minimum: 0

Maximum: 1

Scope: per-stack

Enable low-latency transmit.

## **EF\_TX\_PUSH\_THRESHOLD**

Name: tx\_push\_thresh

Default: 100

Minimum: 1

Scope: per-stack

Sets a threshold for the number of outstanding sends before we stop using TX descriptor push. This has no effect if [EF\\_TX\\_PUSH=0](#). This threshold is ignored, and assumed to be 1, on pre-SFN7000-series hardware. It makes sense to set this value similar to [EF\\_SEND\\_POLL\\_THRESH](#).

## **EF\_TX\_QOS\_CLASS**

Name: tx\_qos\_class

Default: 0

Minimum: 0

Maximum: 1

Scope: per-stack

Set the QOS class for transmitted packets on this Onload stack. Two QOS classes are supported: 0 and 1. By default both Onload accelerated traffic and kernel traffic are in class 0. You can minimize latency by placing latency sensitive traffic into a separate QOS class from bulk traffic.

## **EF\_TX\_TIMESTAMPING**

Name: tx\_timestamping

Default: 0

Minimum: 0

Maximum: 3

Scope: per-stack

Control of hardware timestamping of transmitted packets, possible values:

- 0 - do not do timestamping (default)
- 1 - request timestamping but continue if hardware is not capable or it does not succeed
- 2 - request timestamping and fail if hardware is capable and it does not succeed
- 3 - request timestamping and fail if hardware is not capable or it does not succeed.

## **EF\_UDP**

Name: ul\_udp

Default: 1

Minimum: 0

Maximum: 1

Scope: per-process

Clear to disable acceleration of new UDP sockets.

## **EF\_UDP\_CONNECT\_HANDOVER**

Name: udp\_connect\_handover

Default: 1

Minimum: 0

Maximum: 1

Scope: per-stack

When a UDP socket is connected to an IP address that cannot be accelerated by OpenOnload, hand the socket over to the kernel stack.

When this option is disabled the socket remains under the control of OpenOnload. This may be worthwhile because the socket may subsequently be re-connected to an IP address that can be accelerated.

## **EF\_UDP\_FORCE\_REUSEPORT**

Name: udp\_reuseports

Default: 0

Scope: per-process

This option specifies a comma-separated list of port numbers. UDP sockets that bind to those port numbers will have SO\_REUSEPORT automatically applied to them.

## **EF\_UDP\_PORT\_HANDOVER2\_MAX**

Name: udp\_port\_handover2\_max  
Default: 1  
Scope: per-stack

When set (together with [EF\\_UDP\\_PORT\\_HANDOVER2\\_MIN](#)), this causes UDP sockets explicitly bound to a port in the given range to be handed over to the kernel stack. The range is inclusive.

## **EF\_UDP\_PORT\_HANDOVER2\_MIN**

Name: udp\_port\_handover2\_min  
Default: 2  
Scope: per-stack

When set (together with [EF\\_UDP\\_PORT\\_HANDOVER2\\_MAX](#)), this causes UDP sockets explicitly bound to a port in the given range to be handed over to the kernel stack. The range is inclusive.

## **EF\_UDP\_PORT\_HANDOVER3\_MAX**

Name: udp\_port\_handover3\_max  
Default: 1  
Scope: per-stack

When set (together with [EF\\_UDP\\_PORT\\_HANDOVER3\\_MIN](#)), this causes UDP sockets explicitly bound to a port in the given range to be handed over to the kernel stack. The range is inclusive.

## **EF\_UDP\_PORT\_HANDOVER3\_MIN**

Name: udp\_port\_handover3\_min  
Default: 2  
Scope: per-stack

When set (together with [EF\\_UDP\\_PORT\\_HANDOVER3\\_MAX](#)), this causes UDP sockets explicitly bound to a port in the given range to be handed over to the kernel stack. The range is inclusive.

## **EF\_UDP\_PORT\_HANDOVER\_MAX**

Name: udp\_port\_handover\_max  
Default: 1  
Scope: per-stack

When set (together with [EF\\_UDP\\_PORT\\_HANDOVER\\_MIN](#)), this causes UDP sockets explicitly bound to a port in the given range to be handed over to the kernel stack. The range is inclusive.

## **EF\_UDP\_PORT\_HANDOVER\_MIN**

Name: `udp_port_handover_min`  
Default: 2  
Scope: per-stack

When set (together with [EF\\_UDP\\_PORT\\_HANDOVER\\_MAX](#)), this causes UDP sockets explicitly bound to a port in the given range to be handed over to the kernel stack. The range is inclusive.

## **EF\_UDP\_RCVBUF**

Name: `udp_rcvbuf_user`  
Default: 0  
Scope: per-stack

Override `SO_RCVBUF` for UDP sockets. (Note: the actual size of the buffer is double the amount requested, mimicking the behavior of the Linux kernel.)

## **EF\_UDP\_RECV\_SPIN**

Name: `udp_recv_spin`  
Default: 0  
Minimum: 0  
Maximum: 1  
Scope: per-process

Spin in blocking UDP receive calls until data arrives, the spin timeout expires or the socket timeout expires (whichever is the sooner). If the spin timeout expires, enter the kernel and block. The spin timeout is set by [EF\\_SPIN\\_USEC](#) or [EF\\_POLL\\_USEC](#).

## **EF\_UDP\_SEND\_NONBLOCK\_NO\_PACKETS\_MODE**

Name: `udp_nonblock_no_pkts_mode`  
Default: 0  
Minimum: 0  
Maximum: 1  
Scope: per-stack

This option controls how a non-blocking UDP `send()` call should behave if it is unable to allocate sufficient packet buffers. By default Onload will mimic Linux kernel stack behavior and block for packet buffers to be available. If set to 1, this option will cause Onload to return error `ENOBUFS`. Note this option can cause some applications (that assume that a socket that is writable is able to send without error) to malfunction.

## EF\_UDP\_SEND\_SPIN

Name: udp\_send\_spin  
Default: 0  
Minimum: 0  
Maximum: 1  
Scope: per-process

Spin in blocking UDP send calls until space becomes available in the socket buffer, the spin timeout expires or the socket timeout expires (whichever is the sooner). If the spin timeout expires, enter the kernel and block. The spin timeout is set by [EF\\_SPIN\\_USEC](#) or [EF\\_POLL\\_USEC](#).



**NOTE:** UDP sends usually complete very quickly, but can block if the application does a large burst of sends at a high rate. This option reduces jitter when such blocking is needed.

## EF\_UDP\_SEND\_UNLOCKED

Name: udp\_send\_unlocked  
Default: 1  
Minimum: 0  
Maximum: 1  
Scope: per-stack

Enables the 'unlocked' UDP send path. When enabled this option improves concurrency when multiple threads are performing UDP sends.

## EF\_UDP\_SEND\_UNLOCK\_THRESH

Name: udp\_send\_unlock\_thresh  
Default: 1500  
Scope: per-stack

UDP message size below which we attempt to take the stack lock early. Taking the lock early reduces overhead and latency slightly, but may increase lock contention in multi-threaded applications.

## EF\_UDP\_SNDBUF

Name: udp\_sndbuf\_user  
Default: 0  
Scope: per-stack

Override SO\_SNDBUF for UDP sockets. (Note: the actual size of the buffer is double the amount requested, mimicking the behavior of the Linux kernel.)

## **EF\_UL\_EPOLL**

Name: ul\_epoll  
Default: 1  
Minimum: 0  
Maximum: 3  
Scope: per-process

Choose epoll implementation. The choices are:

- 0 - kernel (unaccelerated)
- 1 - user-level (accelerated, lowest latency)
- 2 - kernel-accelerated (best when there are lots of sockets in the set and mode 3 is not suitable)
- 3 - user-level (accelerated, lowest latency, scalable, supports socket caching).

The default is the user-level implementation (1).

Mode 3 can offer benefits over mode 1, particularly with larger sets. However, this mode has some restrictions:

- It does not support epoll sets that exist across fork().
- It does not support monitoring the readiness of the set's epoll fd via another epoll/poll/select.

## **EF\_UL\_POLL**

Name: ul\_poll  
Default: 1  
Minimum: 0  
Maximum: 1  
Scope: per-process

Clear to disable acceleration of poll() calls at user-level.

## **EF\_UL\_SELECT**

Name: ul\_select  
Default: 1  
Minimum: 0  
Maximum: 1  
Scope: per-process

Clear to disable acceleration of select() calls at user-level.

## EF\_UNCONFINE\_SYN

Name: unconfine\_syn

Default: 1

Minimum: 0

Maximum: 1

Scope: per-stack

Accept TCP connections that cross into or out-of a private network.

## EF\_UNIX\_LOG

Name: log\_level

Default: 3

Scope: per-process

A bitmask determining which kinds of diagnostics messages will be logged:

- 0x1 errors
- 0x2 unexpected
- 0x4 setup
- 0x8 verbose
- 0x10 select()
- 0x20 poll()
- 0x100 socket set-up
- 0x200 socket control
- 0x400 socket caching
- 0x1000 signal interception
- 0x2000 library enter/exit
- 0x4000 log call arguments
- 0x8000 context lookup
- 0x10000 pass-through
- 0x20000 very verbose
- 0x40000 Verbose returned error
- 0x80000 V. Verbose errors: show 'ok' too
- 0x20000000 verbose transport control
- 0x40000000 very verbose transport control
- 0x80000000 verbose pass-through

## EF\_URG\_RFC

Name: urg\_rfc

Default: 0

Minimum: 0

Maximum: 1

Scope: per-stack

Choose between compliance with RFC1122 (1) or BSD behavior (0) regarding the location of the urgent point in TCP packet headers.

## **EF\_USE\_DSACK**

Name: `use_dsack`

Default: 1

Minimum: 0

Maximum: 1

Scope: per-stack

Whether or not to use DSACK (duplicate SACK).

## **EF\_USE\_HUGE\_PAGES**

Name: `huge_pages`

Default: 1

Minimum: 0

Maximum: 2

Scope: per-stack

Control of whether huge pages are used for packet buffers:

- 0 - no
- 1 - use huge pages if available (default)
- 2 - always use huge pages and fail if huge pages are not available.

Mode 1 prints syslog message if there is not enough huge pages in the system.

Mode 2 guarantees only initially-allocated packets to be in huge pages. It is recommended to use this mode together with [EF\\_MIN\\_FREE\\_PACKETS](#), to control the number of such guaranteed huge pages. All non-initial packets are allocated in huge pages when possible. A syslog message is printed if the system is out of huge pages.

Non-initial packets may be allocated in non-huge pages without any warning in syslog for both mode 1 and 2 even if the system has free huge pages.

## **EF\_VALIDATE\_ENV**

Name: `validate_env`

Default: 1

Minimum: 0

Maximum: 1

Scope: per-stack

When set this option validates Onload related environment variables (starting with EF\_).

## EF\_VFORK\_MODE

Name: vfork\_mode

Default: 1

Minimum: 0

Maximum: 2

Scope: per-process

This option dictates how vfork() intercept should work. After a vfork(), parent and child still share address space but not file descriptors. We have to be careful about making changes in the child that can be seen in the parent. We offer three options here. Different apps may require different options depending on their use of vfork(). If using EF\_VFORK\_MODE=2, it is not safe to create sockets or pipes in the child before calling exec().

- 0 - Old behavior. Replace vfork() with fork()
- 1 - Replace vfork() with fork() and block parent till child exits/execs
- 2 - Replace vfork() with vfork().

## EF\_WODA\_SINGLE\_INTERFACE

Name: woda\_single\_if

Default: 0

Minimum: 0

Maximum: 1

Scope: per-process

This option alters the behavior of onload\_ordered\_epoll\_wait(). This function would normally ensure correct ordering across multiple interfaces. However, this impacts latency, as only events arriving before the first interface polled can be returned and still guarantee ordering.

If the traffic being ordered is only arriving on a single interface then this additional constraint is not necessary. When this option is enabled, traffic will only be ordered relative to other traffic arriving on the same interface.

# B

# Meta Options

## B.1 Environment variables

There are several environment variables which act as meta-options and set several of the options detailed in [Appendix A](#). These are:

### EF\_POLL\_USEC

Setting EF\_POLL\_USEC causes the following options to be set:

- EF\_SPIN\_USEC=EF\_POLL\_USEC
- EF\_SELECT\_SPIN=1
- EF\_EPOLL\_SPIN=1
- EF\_POLL\_SPIN=1
- EF\_PKT\_WAIT\_SPIN=1
- EF\_TCP\_SEND\_SPIN=1
- EF\_UDP\_RECV\_SPIN=1
- EF\_UDP\_SEND\_SPIN=1
- EF\_TCP\_RECV\_SPIN=1
- EF\_BUZZ\_USEC=EF\_POLL\_USEC
- EF SOCK LOCK\_BUZZ=1
- EF\_STACK\_LOCK\_BUZZ=1



**NOTE:** If neither of the spinning options; EF\_POLL\_USEC and EF\_SPIN\_USEC are set, Onload will resort to default interrupt driven behavior because the EF\_INT\_DRIVEN environment variable is enabled by default.



**NOTE:** When EF\_POLL\_USEC or EF\_SPIN\_USEC are greater than zero, EF\_INT\_DRIVEN will be zero.

## EF\_BUZZ\_USEC

Setting EF\_BUZZ\_USEC sets the following options:

- EF SOCK LOCK BUZZ=1
- EF STACK LOCK BUZZ=1



**NOTE:** If EF\_POLL\_USEC is set to value N, then EF\_BUZZ\_USEC is also set to N only if N <= 100, If N > 100 then EF\_BUZZ\_USEC will be set to 100. This is deliberate as spinning for too long on internal locks may adversely affect performance. However the user can explicitly set EF\_BUZZ\_USEC value e.g.

```
export EF_POLL_USEC=10000
export EF_BUZZ_USEC=1000
```

# C

# Build Dependencies

## C.1 General

Before Onload network and kernel drivers can be built and installed, the target platform must support the following capabilities:

- Support a general C build environment - i.e. has gcc, make, libc and libc-devel.
- From version 201502 the following are required: perl, autoconf, automake and libtool.
- Can compile kernel modules - i.e. has the correct kernel-devel package for the installed kernel version.
- If 32 bit applications are to be accelerated on 64 bit architectures the machine must be able to build 32 bit applications.



**NOTE:** Onload builds have been tested against libtool versions 1.5.26 to 2.4.2. Users experiencing build issues with other libtool versions should contact [support@solarflare.com](mailto:support@solarflare.com).

## Building Kernel Modules

The kernel must be built with CONFIG\_NETFILTER enabled. Standard distributions will already have this enabled, but it must also be enabled when building a custom kernel. This option does not affect performance.

The following commands can be used to install kernel development headers.

- Debian based Distributions - including Ubuntu (any kernel):  
`apt-get install linux-headers-$(uname -r)`
- For RedHat/Fedora (not for 32bit Kernel):
  - If the system supports a 32 bit Kernel and the kernel is PAE, then:  
`yum -y install kernel-PAE-devel`
  - otherwise:  
`yum -y install kernel-devel`
- For SuSE:  
`yast -i kernel-source`

## onload

- binutils
- gettext
- gawk
- gcc
- sed
- make
- bash
- glibc-common
- automake
- autoconf (if onload\_remote\_monitor is required)
- libtool
- autoconf.

## onload\_tcpdump

- libpcap
- libpcap-devel<sup>1</sup>

## solar\_clusterd

- python-devel<sup>1</sup>

## Building 32 bit applications on 64 bit architecture platforms

The following commands can be used to install 32 bit libc development headers.

- Debian based Distributions - including Ubuntu:  
`apt-get install gcc-multilib libc6-dev-i386`
- For RedHat/Fedora:  
`yum -y install glibc-devel.i586`
- For SuSE:  
`yast -i glibc-devel-32bit`  
`yast -i gcc-32bit`

---

1. If additional packages are not installed the dependent component will not be built, but the Onload build will succeed.

# D

# Onload Extensions API

The Onload Extensions API allows the user to customize an application using advanced features to improve performance.

The Extensions API does not create any runtime dependency on Onload and an application using the API can run without Onload. The license for the API and associated libraries is a BSD 2-Clause License.

This section covers the follows topics:

- [Common Components on page 258](#)
- [Stacks API on page 264](#)
- [Zero-Copy API on page 273](#)
- [Templated Sends on page 286](#)
- [Delegated Sends API on page 290](#)

## D.1 Source Code

The onload source code is provided with the Onload distribution. Entry points for the source code are:

- `src/lib/transport/unix/onload_ext_intercept.c`
- `src/lib/transport/unix/zc_intercept.c`

## D.2 Java Native Interface - Wrapper

The Onload distribution includes a JNI wrapper for use with the extension APIs. Java users should also refer to the files:

- `/openonload-<version>/src/tools/jni`

## D.3 Common Components

For all applications employing the Extensions API the following components are provided:

- `#include <onload/extensions.h>`

An application should include the header file containing function prototypes and constant values required when using the API.

- `libonload_ext.a, libonload_ext.so`

This library provides stub implementations of the extended API. An application that wishes to use the extensions API should link against this library.

When Onload is not present, the application will continue to function, but calls to the extensions API will have no effect (unless documented otherwise).

To link to this library include the '-l' linker option on the compiler command line i.e.

```
-lonload_ext
```

When linking against the `onload_ext.a` static library it is necessary to also link with the dynamic library by adding the '`ldl`' option to the compiler command line.

```
-ldl -lonload_ext
```

## **onload\_is\_present**

### **Description**

If the application is linked with `libonload_ext`, but not running with Onload this will return 0. If the application is running with Onload this will return 1.

### **Definition**

```
int onload_is_present (void)
```

### **Formal Parameters**

None

### **Return Value**

1 from `libonload.so` library, or 0 from `libonload_ext.a` library

## **onload\_fd\_stat**

```
struct onload_stat
{
    int32_t      stack_id;
    char*        stack_name;
    int32_t      endpoint_id;
    int32_t      endpoint_state;
};

extern int onload_fd_stat(int fd, struct onload_stat* stat);
```

### **Description**

Retrieves internal details about an accelerated socket.

## Definition

See above

## Formal Parameters

See above

## Return Value

0 socket is not accelerated

1 socket is accelerated

-ENOMEM when memory cannot be allocated

## Notes

When calling free( ) on stack\_name use the (char \*) because memory is allocated using malloc.

This function will call malloc() and so should never be called from any other function requiring a malloc lock.



**NOTE:** Can be used to check if a fd is accelerated without allocating memory if stat is declared as NULL.

## onload\_fd\_check\_feature

```
int onload_fd_check_feature (int fd, enum onload_fd_feature feature);

enum onload_fd_feature {
    /* Check whether this fd supports ONLOAD_MSG_WARM or not */
    ONLOAD_FD_FEAT_MSG_WARM,
    /* see Notes for details */
    ONLOAD_FD_FEAT_UDP_TX_TS_HDR
};
```

### Description

Used to check whether the Onload file descriptor supports a feature or not.

## Definition

See above

## Formal Parameters

See above

## Return Value

0 if the feature is supported but not on this fd

>0 if the feature is supported both by onload and this fd

<0 if the feature is not supported:

- ENOSYS if `onload_fd_check_feature()` is not supported.
- ENOTSUPP if the feature is not supported by onload.

## Notes

Onload-201509 and later versions support the `ONLOAD_FD_FEAT_UDP_TX_TS_HDR` option. `onload_fd_check_feature` will return 1 to indicate that a `recvmsg` used to retrieve TX timestamps for UDP packets will return the entire Ethernet header.



**NOTE:** When run on older versions of onload this will return -EOPNOTSUPP.

## `onload_thread_set_spin`

### Description

For a thread calling this function, `onload_thread_set_spin()` sets the per-thread spinning actions, it is not per-stack and not per-socket.

### Definition

```
int onload_thread_set_spin(  
    enum onload_spin_type type,  
    unsigned spin)
```

### Formal Parameters

`type`

Which operation to change the spin status of. The type must be one of the following:

```
enum onload_spin_type {  
    ONLOAD_SPIN_ALL, /* enable or disable all spin options */  
    ONLOAD_SPIN_UDP_RECV,  
    ONLOAD_SPIN_UDP_SEND,  
    ONLOAD_SPIN_TCP_RECV,  
    ONLOAD_SPIN_TCP_SEND,  
    ONLOAD_SPIN_TCP_ACCEPT,  
    ONLOAD_SPIN_PIPE_RECV,  
    ONLOAD_SPIN_PIPE_SEND,  
    ONLOAD_SPIN_SELECT,  
    ONLOAD_SPIN_POLL,  
    ONLOAD_SPIN_PKT_WAIT,  
    ONLOAD_SPIN_EPOLL_WAIT,  
    ONLOAD_SPIN_STACK_LOCK,  
    ONLOAD_SPIN SOCK_LOCK,  
    ONLOAD_SPIN_SO_BUSY_POLL,  
    ONLOAD_SPIN_TCP_CONNECT,  
    ONLOAD_SPIN_MAX /* special value to mark largest valid input */  
};
```

`spin`

A boolean which indicates whether the operation should spin or not.

### Return Value

0 on success

-EINVAL if unsupported type is specified.

### Notes

Spin time (for all threads) is set using the EF\_SPIN\_USEC parameter.

### Examples

The `onload_thread_set_spin` API can be used to control spinning on a per-thread or per-API basis. The existing spin-related configuration options set the default behavior for threads, and the `onload_thread_set_spin` API overrides the default for the thread calling this function.

#### ***Disable all sorts of spinning:***

```
onload_thread_set_spin(ONLOAD_SPIN_ALL, 0);
```

#### ***Enable all sorts of spinning:***

```
onload_thread_set_spin(ONLOAD_SPIN_ALL, 1);
```

#### ***Enable spinning only for certain threads:***

- 1 Set the spin timeout by setting EF\_SPIN\_USEC, and disable spinning by default by setting EF\_POLL\_USEC=0.
- 2 In each thread that should spin, invoke `onload_thread_set_spin()`.

#### ***Disable spinning only in certain threads:***

- 1 Enable spinning by setting EF\_POLL\_USEC=<timeout>.
- 2 In each thread that should not spin, invoke `onload_thread_set_spin()`.



**WARNING:** If a thread is set to NOT spin and then blocks this may invoke an interrupt for the whole stack. Interrupts occurring on moderately busy threads may cause unintended and undesirable consequences.

#### ***Enable spinning for UDP traffic, but not TCP traffic:***

- 1 Set the spin timeout by setting EF\_SPIN\_USEC, and disable spinning by default by setting EF\_POLL\_USEC=0.
- 2 In each thread that should spin (UDP only), do:

```
onload_thread_set_spin(ONLOAD_SPIN_UDP_RECV, 1)  
onload_thread_set_spin(ONLOAD_SPIN_UDP_SEND, 1)
```

***Enable spinning for TCP traffic, but not UDP traffic:***

- 1 Set the spin timeout by setting EF\_SPIN\_USEC, and disable spinning by default by setting EF\_POLL\_USEC=0.
- 2 In each thread that should spin (TCP only), do:

```
onload_thread_set_spin(ONLOAD_SPIN_TCP_RECV, 1)  
onload_thread_set_spin(ONLOAD_SPIN_TCP_SEND, 1)  
onload_thread_set_spin(ONLOAD_SPIN_TCP_ACCEPT, 1)
```

***Spinning and sockets:***

When a thread calls `onload_thread_set_spin()` it sets the spinning actions applied when the thread accesses any socket - irrespective of whether the socket is created by this thread.

If a socket is created by thread-A and is accessed by thread-B, calling `onload_thread_set_spin(ONLOAD_SPIN_ALL, 1)` only from thread-B will enable spinning for thread-B, but not for thread-A. In the same scenario, if `onload_thread_set_spin(ONLOAD_SPIN_ALL, 1)` is called only from thread-A, then spinning is enabled only for thread-A, but not for thread-B.

The `onload_thread_set_spin()` function sets the per-thread spinning action.

## **onload\_thread\_get\_spin**

**Description**

For the current thread, identify which operations should spin.

**Definition**

```
int onload_thread_get_spin(  
    unsigned *state)
```

**Formal Parameters**

`state`

Location at which to write the spin status as a bitmask. Bit  $n$  of the mask is set if spinning has been enabled for spin type  $n$  (see [onload\\_thread\\_set\\_spin on page 261](#)).

**Return Value**

0 on success

**Notes**

Spin time (for all threads) is set using the `EF_SPIN_USEC` parameter.

## Examples

Determine if spinning is enabled for UDP receive:

```
unsigned state;
 onload_thread_get_spin(&state);
if (state & (1 << ONLOAD_SPIN_UDP_RECV)) {
    // spinning is enabled for UDP receive
}
```

## D.4 Stacks API

Using the Onload Extensions API an application can bind selected sockets to specific Onload stacks and in this way ensure that time-critical sockets are not starved of resources by other non-critical sockets. The API allows an application to select sockets which are to be accelerated thus reserving Onload resources for performance critical paths. This also prevents non-critical paths from creating jitter for critical paths.

### **onload\_set\_stackname**

#### Description

Select the Onload stack that new sockets are placed in. A socket can exist only in a single stack. A socket can be moved to a different stack - see `onload_move_fd()` below.

Moving a socket to a different stack does not create a copy of the socket in originator and target stacks.

#### Definition

```
int onload_set_stackname(
    int who,
    int scope,
    const char *name)
```

#### Formal Parameters

who

Must be one of the following:

- `ONLOAD_THIS_THREAD` - to modify the stack name in which all subsequent sockets are created by this thread.
- `ONLOAD_ALL_THREADS` - to modify the stack name in which all subsequent sockets are created by all threads in the current process.  
`ONLOAD_THIS_THREAD` takes precedence over `ONLOAD_ALL_THREADS`.

### scope

Must be one of the following:

- ONLOAD\_SCOPE\_THREAD - name is scoped with current thread
- ONLOAD\_SCOPE\_PROCESS - name is scoped with current process
- ONLOAD\_SCOPE\_USER - name is scoped with current user
- ONLOAD\_SCOPE\_GLOBAL - name is global across all threads, users and processes.
- ONLOAD\_SCOPE\_NOCHANGE - undo effect of a previous call to `onload_set_stackname(ONLOAD_THIS_THREAD, ...)`, see [Notes on page 265](#).

### name

One of the following:

- the stack name up to 8 characters.
- an empty string to set no stackname
- the special value ONLOAD\_DONT\_ACCELERATE to prevent sockets created in this thread, user, process from being accelerated.

Sockets identified by the options above will belong to the Onload stack until a subsequent call using `onload_set_stackname` identifies a different stack or the `ONLOAD_SCOPE_NOCHANGE` option is used.

## Return Value

0 on success

-1 with `errno` set to `ENAMETOOLONG` if the name exceeds permitted length

-1 with `errno` set to `EINVAL` if other parameters are invalid.

## Notes

### Note 1

This applies for stacks selected for sockets created by `socket()` and for `pipe()`, it has no effect on `accept()`. Passively opened sockets created via `accept()` will always be in the same stack as the listening socket that they are linked to, this means that the following are functionally identical i.e.

```
onload_set_stackname(foo)
socket
listen
onload_set_stackname(bar)
accept
```

and

```
onload_set_stackname(foo)
socket
listen
accept
onload_set_stackname(bar)
```

In both cases the listening socket and the accepted socket will be in stack foo.

#### **Note 2**

Scope defines the namespace in which a stack belongs. A stackname of foo in scope user is not the same as a stackname of foo in scope thread. Scope restricts the visibility of a stack to either the current thread, current process, current user or is unrestricted (global). This has the property that with, for example, process based scoping, two processes can have the same stackname without sharing a stack - as the stack for each process has a different namespace.

#### **Note 3**

Scoping can be thought of as adding a suffix to the supplied name e.g.

ONLOAD\_SCOPE\_THREAD: <stackname>-t<thread\_id>

ONLOAD\_SCOPE\_PROCESS: <stackname>-p<process\_id>

ONLOAD\_SCOPE\_USER: <stackname>-u<user\_id>

ONLOAD\_SCOPE\_GLOBAL: <stackname>

This is an example only and the implementation is free to do something different such as maintaining different lists for different scopes.

#### **Note 4**

ONLOAD\_SCOPE\_NOCHANGE will undo the effect of a previous call to `onload_set_stackname(ONLOAD_THIS_THREAD, ...)`.

If you have previously used `onload_set_stackname(ONLOAD_THIS_THREAD, ...)` and want to revert to the behavior of threads that are using the `ONLOAD_ALL_THREADS` configuration, without changing that configuration, you can do the following:

```
onload_set_stackname(ONLOAD_ALL_THREADS, ONLOAD_SCOPE_NOCHANGE, "");
```

### **Related environment variables**

Related environment variables are:

#### ***EF\_DONT\_ACCELERATE***

Default: 0

Minimum: 0

Maximum: 1

Scope: Per-process

If this environment variable is set then acceleration for ALL sockets is disabled and handed off to the kernel stack until the application overrides this state with a call to `onload_set_stackname()`.

#### ***EF\_STACK\_PER\_THREAD***

Default: 0

Minimum: 0

Maximum: 1

Scope: Per-process

If this environment variable is set each socket created by the application will be placed in a stack depending on the thread in which it is created. Stacks could, for example, be named using the thread ID of the thread that creates the stack, but this should not be relied upon.

A call to `onload_set_stackname` overrides this variable. `EF_DONT_ACCELERATE` takes precedence over this variable.

#### ***EF\_NAME***

Default: none

Minimum: 0 chars

Maximum: 8 chars

Scope: per-stack

The environment variable `EF_NAME` will be honored to control Onload stack sharing. However, a call to `onload_set_stackname` overrides this variable and, `EF_DONT_ACCELERATE` and `EF_STACK_PER_THREAD` both take precedence over `EF_NAME`.

## **onload\_move\_fd**

### **Description**

Move the file descriptor to the current stack. The target stack can be specified with `onload_set_stackname()`, then use `onload_move_fd()` to put the socket into the target stack.

A socket can exist only in a single stack. Moving a socket to a different stack does not create a copy of the socket in originator and target stacks.

### **Definition**

```
int onload_move_fd (int fd)
```

### **Formal Parameters**

fd - the file descriptor to be moved to the current stack.

## Return Value

0 on success  
non-zero otherwise.

## Notes

- Useful to move fds obtained by `accept()` to move a new connection out of the listening socket.
- Limited to TCP closed or accepted sockets only
- Cannot be used on actively opened connections, although it is possible to use `onload_set_stackname()` before calling `connect()` to achieve the same result.
- The socket must have empty send and retransmit queues (i.e. `send` not called on this socket)
- The socket must have a simple receive queue (no loss, reordering, etc)
- The fd is not yet in an epoll set.
- The `onload_move_fd` function should not be used if `SO_TIMESTAMPING` is set to a non-zero value for the originating socket.
- Should not be used simultaneously with other I/O multiplex actions i.e. `poll()`, `select()`, `recv()` etc on the file descriptor.
- This function is not async-safe and should never be called from any process function handling signals.
- This function cannot be used to hand sockets over to the kernel. It is not possible to use `onload_set_stackname(ONLOAD_DONT_ACCELERATE)` and then `onload_move_fd()`.



**NOTE:** The `onload_move_fd` function does not check whether a destination stack has either RX or TX timestamping enabled.

## **onload\_stackname\_save**

### **Description**

Save the state of the current onload stack identified by the previous call to `onload_set_stackname()`

### **Definition**

```
int onload_stackname_save (void)
```

### **Formal Parameters**

none

### **Return Value**

0 on success

-ENOMEM when memory cannot be allocated.

## **onload\_stackname\_restore**

### **Description**

Restore stack state saved with a previous call to `onload_stackname_save()`. All updates/changes to state of the current stack will be deleted and all state previously saved will be restored. To avoid unexpected results, the stack should be restored in the same thread as used to call `onload_stackname_save()`.

### **Definition**

```
int onload_stackname_restore (void)
```

### **Formal Parameters**

none

### **Return Value**

0 on success

non-zero if an error occurs.

### **Notes**

The API stackname save and restore functions provide flexibility when binding sockets to an Onload stack.

Using a combination of `onload_set_stackname()`, `onload_stackname_save()` and `onload_stackname_restore()`, the user is able to create default stack settings which apply to one or more sockets, save this state and then create changed stack settings which are applied to other sockets. The original default settings can then be restored to apply to subsequent sockets.

## D.5 Stacks API Usage

Using a combination of the `EF_DONT_ACCELERATE` environment variable and the function `onload_set_stackname()`, the user is able to control/select sockets which are to be accelerated and isolate these performance critical sockets and threads from the rest of the system.

### `onload_stack_opt_set_int`

#### **Description**

Set/modify per stack options that all subsequently created stacks will use instead of using the existing global stack options.

#### **Definition**

```
int onload_stack_opt_set_int(  
    const char* name,  
    int64_t value)
```

#### **Formal Parameters**

`name`

Stack option to modify

`value`

New value for the stack option.

#### **Example**

```
onload_stack_opt_set_int("EF_SCALABLE_FILTERS_ENABLE", 1);
```

#### **Return Value**

0 on success

`errno` set to `EINVAL` if the requested option is not found or `ENOMEM`.

#### **Notes**

Cannot be used to modify options on existing stacks - only for new stacks.

Cannot be used to modify process options - only stack options.

Modified options will be used for all newly created stacks until  `onload_stack_opt_reset()` is called.

## **onload\_stack\_opt\_reset**

### **Description**

Revert to using global stack options for newly created stacks.

### **Definition**

```
int onload_stack_opt_reset(void)
```

### **Formal Parameters**

None.

### **Return Value**

0 always

### **Notes**

Should be called following a call to  `onload_stack_opt_set_int()` to revert to using global stack options for all newly created stacks.

## **D.6 Stacks API - Examples**

- This thread will use stack foo, other threads in the stack will continue as before.  
 `onload_set_stackname(ONLOAD_THIS_THREAD, ONLOAD_SCOPE_GLOBAL, "foo")`
- All threads in this process will get their own stack called foo. This is equivalent to the EF\_STACK\_PER\_THREAD environment variable.  
 `onload_set_stackname(ONLOAD_ALL_THREADS, ONLOAD_SCOPE_THREAD, "foo")`
- All threads in this process will share a stack called foo. If another process did the same function call it will get its own stack.  
 `onload_set_stackname(ONLOAD_ALL_THREADS, ONLOAD_SCOPE_PROCESS, "foo")`
- All threads in this process will share a stack called foo. If another process run by the same user did the same, it would share the same stack as the first process. If another process run by a different user did the same it would get its own stack.  
 `onload_set_stackname(ONLOAD_ALL_THREADS, ONLOAD_SCOPE_USER, "foo")`
- Equivalent to EF\_NAME. All threads will use a stack called foo which is shared by any other process which does the same.  
 `onload_set_stackname(ONLOAD_ALL_THREADS, ONLOAD_SCOPE_GLOBAL, "foo")`
- Equivalent to EF\_DONT\_ACCELERATE. New sockets/pipes will not be accelerated until another call to  `onload_set_stackname()`.

onload\_set\_stackname(ONLOAD\_ALL\_THREADS, ONLOAD\_SCOPE\_GLOBAL, ONLOAD\_DONT\_ACCELERATE)

## onload\_ordered\_epoll\_wait

For details of the Wire Order Delivery feature refer to [Wire Order Delivery on page 75](#)

### Description

If the epoll set contains accelerated sockets in only one stack this function can be used instead of `epoll_wait()` to return events in the order these were recovered from the wire. There is no explicit check on sockets, so applications must ensure that the rules are applied to avoid mis-ordering of packets.

### Definition

```
int onload_ordered_epoll_wait (
    int epfd,
    struct epoll_event *events,
    struct onload_ordered_epoll_event *oo_events,
    int maxevents,
    int timeout);
```

### Formal Parameters

See definition `epoll_wait()`.

### Return Value

- A positive value identifies the number of `epoll_evs` / `ordered_evs` to process.
- A zero value indicates there are no events which can be processed while maintaining ordering i.e. there may be no data or only unordered data.
- A negative return value identifies an error condition.

Notes:

Any file descriptors returned as ready without a valid timestamp i.e. `tv_sec = 0`, should be considered un-ordered with respect to the rest of the set. This can occur for data received via the kernel or data returned without a hardware timestamp i.e. from an interface that does not support hardware timestamping.

The environment variable `EF_UL_EPOLL=1` must be set Hardware timestamps are required. This feature is only available on the SFN7000, SFN8000 and X2 series adapters.

```
struct onload_ordered_epoll_event{
    /* The hardware timestamp of the first readable data */
    struct timespec ts;
    /* Number of bytes that may be read to maintain wire order */
    int bytes
};
```

ONLOAD\_MSG\_ONEPKT and EF\_TCP\_RCVBUF\_STRICT are incompatible with the wire order delivery feature. Refer to [Wire Order Delivery on page 75](#) for details.

## D.7 Zero-Copy API

Zero-Copy can improve the performance of networking applications by eliminating intermediate buffers when transferring data between application and network adapter.

The Onload Extensions Zero-Copy API supports zero-copy of UDP received packet data and TCP transmit packet data.

The API provides the following components:

- `#include <onload/extensions_zc.h>`

In addition to the common components, an application should include this header file which contains all function prototypes and constant values required when using the API. The header file also includes comprehensive documentation, required data structures and function definitions.

### Zero-Copy Data Buffers

To avoid the copy data is passed to and from the application in special buffers described by a `struct onload_zc_iovec`. A message or datagram can consist of multiple iovecs using a `struct onload_zc_msg`. A single call to send may involve multiple messages using an array of `struct onload_zc_mmsg`.

```
/* A zc_iovec describes a single buffer */
struct onload_zc_iovec {
    void* iov_base;           /* Address within buffer */
    size_t iov_len;           /* Length of data */
    onload_zc_handle buf;     /* (opaque) buffer handle */
    unsigned iov_flags;       /* Not currently used */
};

/* A msg describes array of iovecs that make up datagram */
struct onload_zc_msg {
    struct onload_zc_iovec* iov; /* Array of buffers */
    struct msghdr msghdr;      /* Message metadata */
};

/* An mmsg describes a message, the socket, and its result */
struct onload_zc_mmsg {
    struct onload_zc_msg msg;   /* Message */
    int rc;                    /* Result of send operation */
```

```

        int fd;           /* socket to send on */
    };

```


**Figure 18: Zero-Copy Data Buffers**

## Zero-Copy UDP Receive Overview

[Figure 19](#) illustrates the difference between the normal UDP receive mode and the zero-copy method.

When using the standard POSIX socket calls, the adapter delivers packets to an Onload packet buffer which is described by a descriptor previously placed in the RX descriptor ring. When the application calls `recv()`, Onload copies the data from the packet buffer to an application-supplied buffer.

Using the zero-copy UDP receive API the application calls the `onload_zc_recv()` function including a callback function which will be called when data is ready. The callback can directly access the data inside the Onload packet buffer avoiding a copy.

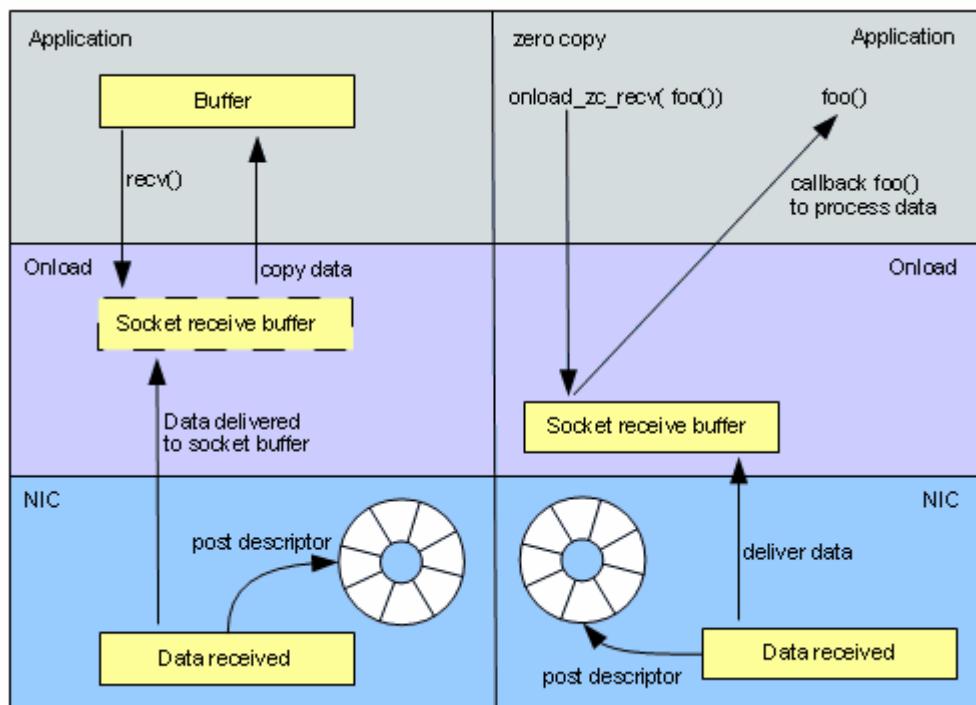

**Figure 19: Traditional vs. Zero-Copy UDP Receive**

A single call using `onload_zc_recv()` function can result in multiple datagrams being delivered to the callback function. Each time the callback returns to Onload the next datagram is delivered. Processing stops when the callback instructs Onload to cease delivery or there are no further received datagrams.

If the receiving application does not require to look at all data received (i.e. is filtering) this can result in a considerable performance advantage because this data is not pulled into the processor's cache, thereby reducing the application cache footprint.

As a general rule, the callback function should avoid calling other system calls which attempt to modify or close the current socket.

Zero-copy UDP Receive is implemented within the Onload Extensions API.

## Zero-Copy UDP Receive

The `onload_zc_recv()` function specifies a callback to invoke for each received UDP datagram. The callback is invoked in the context of the call to `onload_zc_recv()` (i.e. It blocks/spins waiting for data).

Before calling, the application must set the following in the struct `onload_zc_recv_args`:

<code>cb</code>	set to the callback function pointer
<code>user_ptr</code>	set to point to application state, this is not touched by onload
<code>msg.msghdr.msg_control</code> <code>msg_controllen</code> <code>msg_name</code> <code>msg_namelen</code>	the user application should set these to appropriate buffers and lengths (if required) as you would for <code>recvmsg</code> (or NULL and 0 if not used)
<code>flags</code>	set to indicate behavior (e.g. <code>ONLOAD_MSG_DONTWAIT</code> )

```

typedef enum onload_zc_callback_rc
{
    (*onload_zc_recv_callback)(struct onload_zc_recv_args *args, int
    flags);
}

struct onload_zc_recv_args
{
    struct onload_zc_msg msg;
    onload_zc_recv_callback cb;
    void* user_ptr;
    int flags;
};

int onload_zc_recv(int fd, struct onload_zc_recv_args *args);

```

**Figure 20: Zero-Copy `recv_args`**

The callback gets to examine the data, and can control what happens next: (i) whether or not the buffer(s) are kept by the callback or are immediately freed by Onload; and (ii) whether or not `onload_zc_recv()` will internally loop and invoke the callback with the next datagram, or immediately return to the application. The next action is determined by setting flags in the return code as follows:

ONLOAD_ZC_KEEP	the callback function can elect to retain ownership of received buffer(s) by returning <code>ONLOAD_ZC_KEEP</code> . Following this, the correct way to release retained buffers is to call <code>onload_zc_release_buffers()</code> to explicitly release the first buffer from each received datagram. Subsequent buffers pertaining to the same datagram will then be automatically released.
ONLOAD_ZC_CONTINUE	to suggest that Onload should loop and process more datagrams
ONLOAD_ZC_TERMINATE	to insist that Onload immediately return from the <code>onload_zc_recv()</code>

Flags can also be set by Onload:

ONLOAD_ZC_END_OF_BURST	Onload sets this flag to indicate that this is the last packet
ONLOAD_ZC_MSG_SHARED	Packet buffers are read only

If there is unaccelerated data on the socket from the kernel's receive path this cannot be handled without copying. The application has two choices as follows:

ONLOAD_MSG_RECV_OS_INLINE	set this flag when calling <code>onload_zc_recv()</code> . Onload will deal with the kernel data internally and pass it to the callback
check return code	check the return code from <code>onload_zc_recv()</code> . If it returns ENOTEMPTY then the application must call <code>onload_recvmmsg_kernel()</code> to retrieve the kernel data.

## Zero-Copy Receive Example #1

```

        struct onload_zc_recv_args args;
        struct zc_recv_state state;
        int rc;

        state.bytes = bytes_to_wait_for;

        /* Easy way to set msg_control* and msg_name* to zero */
        memset(&args.msg, 0, sizeof(args.msg));
        args.cb = &zc_recv_callback;
        args.user_ptr = &state;
        args.flags = ONLOAD_ZC_RECV_OS_INLINE;

        rc = onload_zc_recv(fd, &args);

        //---

        enum onload_zc_callback_rc
        zc_recv_callback(struct onload_zc_recv_args *args, int flags)
        {
            int i;
            struct zc_recv_state *state = args->user_ptr;

            for( i = 0; i < args->msg.msghdr.msg iovlen; ++i ) {
                printf("zc callback iov %d: %p, %d", i,
                    args->msg.iov[i].iov_base,
                    args->msg.iov[i].iov_len);
                state->bytes -= args->msg.iov[i].iov_len;
            }
            if( state->bytes <= 0 ) return ONLOAD_ZC_TERMINATE;
            else return ONLOAD_ZC_CONTINUE;
        }
    
```

**Figure 21: Zero-Copy Receive -example #1**

## Zero-Copy Receive Example #2

```

static enum onload_zc_callback_rc
zc_recv_callback(struct onload_zc_recv_args *args, int flag)
{
    struct user_info *zc_info = args->user_ptr;
    int i, zc_rc = 0;
    for( i = 0; i < args->msg.msghdr.msg iovlen; ++i ) {
        zc_rc += args->msg.iov[i].iov_len;
        handle_msg(args->msg.iov[i].iov_base,
                    args->msg.iov[i].iov_len);
    }
    if( zc_rc == 0 )
        return ONLOAD_ZC_TERMINATE;
    zc_info->zc_rc += zc_rc;
    if( (zc_info->flags & MSG_WAITALL) &&
        (zc_info->zc_rc < zc_info->size) )
        return ONLOAD_ZC_CONTINUE;
    else return ONLOAD_ZC_TERMINATE;
}

struct onload_zc_recv_args zc_args;
ssize_t do_recv_zc(int fd, void* buf, size_t len, int flags)
{
    struct user_info info; int rc;

    init_user_info(&info);

    memset(&zc_args, 0, sizeof(zc_args));
    zc_args.user_ptr = &info;
    zc_args.flags = 0;
    zc_args.cb = &zc_recv_callback;
    if( flags & MSG_DONTWAIT )
        zc_args.flags |= ONLOAD_MSG_DONTWAIT;

    rc = onload_zc_recv(fd, &zc_args);
    if( rc == -ENOTEMPTY) {
        if( ( rc = onload_recvmsg_kernel(fd, &msg, 0) ) < 0 )
            printf("onload_recvmsg_kernel failed\n");
    }
    else if( rc == 0 ) {
        /* zc_rc gets set by callback to bytes received, so we

```

```
    * can return that to appear like standard recv call */
    rc = info.zc_rc;
}
return rc;
}
```

**Figure 22: Zero-Copy Receive - example #2**



**NOTE:** `onload_zc_recv()` only supports accelerated (Onloaded) sockets. For example, when bound to a broadcast address the socket fd is handed off to the kernel and this function will return `ESOCKNOTSUPPORT`.


## Zero-Copy TCP Send Overview

[Figure 23](#) illustrates the difference between the normal TCP transmit method and the zero-copy method.

When using standard POSIX socket calls, the application first creates the payload data in an application allocated buffer before calling the `send()` function. Onload will copy the data to a Onload packet buffer in memory and post a descriptor to this buffer in the network adapter TX descriptor ring.

Using the zero-copy TCP transmit API the application calls the `onload_zc_alloc_buffers()` function to request buffers from Onload. A pointer to a packet buffer is returned in response. The application places the data to send directly into this buffer and then calls `onload_zc_send()` to indicate to Onload that data is available to send.

Onload will post a descriptor for the packet buffer in the network adapter TX descriptor ring and ring the TX doorbell. The network adapter fetches the data for transmission.

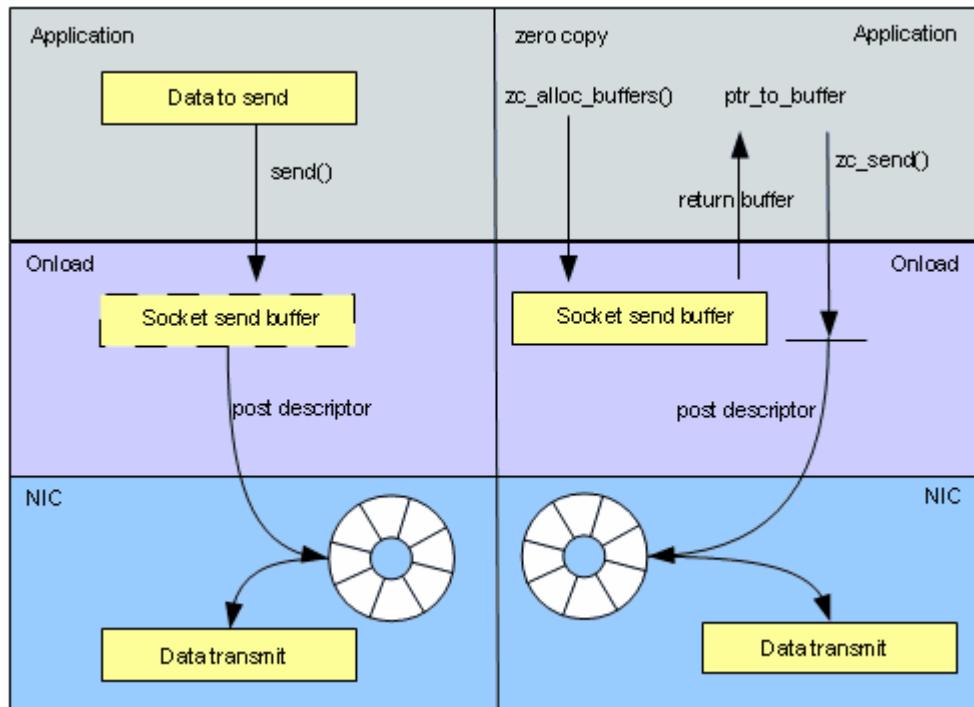

**Figure 23: Traditional vs. Zero-Copy TCP Transmit**



**NOTE:** The socket used to allocate zero-copy buffers must be in the same stack as the socket used to send the buffers. When using TCP loopback, Onload can move a socket from one stack to another. Users must ensure that they **ALWAYS USE BUFFERS FROM THE CORRECT STACK.**



**NOTE:** The `onload_zc_send` function does not currently support the `ONLOAD_MSG_MORE` or `TCP_CORK` flags.

Zero-copy TCP transmit is implemented within the Onload Extensions API.

## Zero-Copy TCP Send

The zero-copy send API supports the sending of multiple messages to different sockets in a single call. Data buffers must be allocated in advance and for best efficiency these should be allocated in blocks and off the critical path. The user should avoid simply moving the copy from Onload into the application, but where this is unavoidable, it should also be done off the critical path.

```
int onload_zc_send(struct onload_zc_mmsg* msgs, int mlen, int flags);
```

**Figure 24: Zero-Copy send**

```
int onload_zc_alloc_buffers(int fd,
                           struct onload_zc_iovec* iovecs,
                           int iovecs_len,
                           onload_zc_buffer_type_flags flags);
```

```
int onload_zc_release_buffers(int fd,
                               onload_zc_handle* bufs,
                               int bufs_len);
```

**Figure 25: Zero-Copy allocate buffers**

The `onload_zc_send()` function return value identifies how many of the `onload_zc_mmsg` array's `rc` fields are set. Each `onload_zc_mmsg.rc` returns how many bytes (or error) were sent in for that message. Refer to the table below.

<b><code>rc = onload_zc_send()</code></b>	
<code>rc &lt; 0</code>	application error calling <code>onload_zc_send()</code> . <code>rc</code> is set to the error code
<code>rc == 0</code>	should not happen
<code>0 &lt; rc &lt;= n_msgs</code>	<code>rc</code> is set to the number of messages whose status has been sent in <code>mmsgs[i].rc</code> . <code>rc == n_msgs</code> is the normal case
<b><code>rc = mmsg[i].rc</code></b>	
<code>rc &lt; 0</code>	error sending this message. <code>rc</code> is set to the error code
<code>rc &gt;= 0</code>	<code>rc</code> is set to the number of bytes that have been sent in this message. Compare to the message length to establish which buffers sent

Sent buffers are owned by Onload. Unsent buffers are owned by the application and must be freed or reused to avoid leaking.



**NOTE:** Buffers sent with the `ONLOAD_MSG_WARM` feature enabled are not actually sent buffers, ownership remains with the user who is responsible for freeing these buffers.

## Zero-Copy Send - Single Message, Single Buffer

```
struct onload_zc_iovec iovec;
struct onload_zc_mmsg mmsg;

rc = onload_zc_alloc_buffers(fd, &iovec, 1,
                            ONLOAD_ZC_BUFFER_HDR_TCP);
assert(rc == 0);
assert(my_data_len <= iovec.iov_len);
memcpy(iovec.iov_base, my_data, my_data_len);
iovec.iov_len = my_data_len;

mmsg.fd = fd;
mmsg.msg iov = &iovec;
```

```

mmsg.msg.msghdr.msg iovlen = 1;

rc = onload_zc_send(&mmsg, 1, 0);
if( rc <= 0) {
    /* Probably application bug */
    return rc;
} else {
    /* Only one message, so rc should be 1 */
    assert(rc == 1);
    /* rc == 1 so we can look at the first (only) mmsg.rc */
    if( mmsg.rc < 0 )
        /* Error sending message */
        onload_zc_release_buffers(fd, &iovec.buf, 1);
    else
        /* Message sent, single msg, single iovec so
         * shouldn't worry about partial sends */
        assert(mmsg.rc == my_data_len);
}
    
```

**Figure 26: Zero-Copy - Single Message, Single Buffer Example**

The example above demonstrates error code handling. Note it contains an examples of bad practice where buffers are allocated and populated on the critical path.

## Zero-Copy Send - Multiple Message, Multiple Buffers

```

#define N_BUFFERS 2
#define N_MSGS 2
struct onload_zc_iovec iovec[N_MSGS][N_BUFFERS];
struct onload_zc_mmsg mmsg[N_MSGS];

for( i = 0; i < N_MSGS; ++i ) {
    rc = onload_zc_alloc_buffers(fd, iovec[i], N_BUFFERS,
                                ONLOAD_ZC_BUFFER_HDR_TCP);
    assert(rc == 0);
    /* TODO store data in iovec[i][j].iov_base,
     * set iovec[i][j].iov_len */

    mmsg[i].fd = fd; /* Could be different for each message */
    mmsg[i].iov = iovec[i];
    mmsg[i].msg.msghdr.msg iovlen = N_BUFFERS;
}
    
```

```

rc = onload_zc_send(mmsg, N_MSGS, 0);
if( rc <= 0 ) {
    /* Probably application bug */
    return rc;
} else {
    for( i = 0; i < N_MSGS; ++i ) {
        if( i < rc ) {
            /* mmsg[i] is set and we can use it */
            if( mmsg[i] < 0 ) {
                /* error sending this message - release buffers */
                for( j = 0; j < N_BUFFERS; ++j )
                    onload_zc_release_buffers(fd, &iovec[i][j].buf, 1);
            } else if( mmsg[i] < sum_over_j(iovec[i][j].iov_len) ) {
                /* partial success */
                /* TODO use mmsg[i] to determine which buffers in
                 * iovec[i] array are sent and which are still
                 * owned by application */
            } else {
                /* Whole message sent, buffers now owned by Onload */
            }
        } else {
            /* mmsg[i] is not set, this message was not sent */
            for( j = 0; j < N_BUFFERS; ++j )
                onload_zc_release_buffers(fd, &iovec[i][j].buf, 1);
        }
    }
}
    
```

**Figure 27: Zero-Copy - Multiple Messages, Multiple Buffers Example**

The example above demonstrates error code handling and contains some examples of bad practice where buffers are allocated and populated on the critical path.

## Zero-Copy Send - Full Example

```

static struct onload_zc_iovec iovec[NUM_ZC_BUFFERS];

static ssize_t do_send_zc(int fd, const void* buf, size_t len, int
flags)
{
    int bytes_done, rc, i, bufs_needed;
    struct onload_zc_mmsg mmsg;
    mmsg.fd = fd;
    mmsg.msg.iov = iovec;
    bytes_done = 0;
    mmsg.msg.msghdr.msg iovlen = 0;

    while( bytes_done < len ) {
        if( iovec[mmsg.msg.msghdr.msg iovlen].iov_len > (len - bytes_done)
)
            iovec[mmsg.msg.msghdr.msg iovlen].iov_len = (len - bytes_done);
        memcpy(iovec[i].iov_base, buf+bytes_done, iov_len);
        bytes_done += iovec[mmsg.msg.msghdr.msg iovlen].iov_len;
        ++mmsg.msg.msghdr.msg iovlen;
    }

    rc = onload_zc_send(&mmsg, 1, 0);
    if( rc != 1 /* Number of messages we sent */ ) {
        printf("onload_zc_send failed to process msg, %d\n", rc);
        return -1;
    } else {
        if( mmsg.rc < 0 )
            printf("onload_zc_send message error %d\n", mmsg.rc);
        else {
            /* Iterate over the iovecs; any that were sent we must
replenish. */
            i = 0; bufs_needed= 0;
            while( i < mmsg.msg.msghdr.msg iovlen ) {
                if( bytes_done == mmsg.rc ) {
                    printf(onload_zc_send did not send iovec %d\n", i);
                    /* In other buffer allocation schemes we would have to
release
                     * these buffers, but seems pointless as we guarantee at the
                     * end of this function to have iovec array full, so do
nothing. */
                } else {

```

```
        /* Buffer sent, now owned by Onload, so replenish iovec
array */
        ++bufs_needed;
        bytes_done += iovec[i].iov_len;
    }
    ++i;
}

if( bufs_needed ) /* replenish the iovec array */
    rc = onload_zc_alloc_buffers(fd, iovec, bufs_needed,
                                ONLOAD_ZC_BUFFER_HDR_TCP);
}
}

/* Set a return code that looks similar enough to send(). NB. we're
 * not setting (and neither does onload_zc_send()) errno */
if( mmsg.rc < 0 ) return -1;
else return bytes_done;
}
```

**Figure 28: Zero-Copy Send**

## D.8 Templated Sends

“Templated sends” is a feature for the SFN7000, SFN8000 and X2 series adapters that builds on top of TX PIO to provide further transmit latency improvements. Refer to [Programmed I/O on page 133](#) for details of TX PIO.

### Description

Templated sends can be used in applications that know the majority of the content of packets in advance of when the packet is to be sent. For example, a market feed handler may publish packets that vary only in the specific value of certain fields, possibly different symbols and price information, but are otherwise identical.

The Onload templated sends feature uses the Onload Extensions API to generate the packet template which is then instantiated on the adapter ready to receive the “missing” data before each transmission.

Templated sends involve allocating a template of a packet on the adapter containing the bulk of the data prior to the time of sending the packet. Then, when the packet is to be sent, the remaining data is pushed to the adapter to complete and send the packet.

When the socket, associated with an allocated template, is shutdown or closed, allocated templates are freed and subsequent calls to access these template will return an error.

The API details are available in the Onload distribution at:

- /src/include/onload/extensions\_zc.h

### MSG Template

```
struct oo_msg_template {
    /* To verify subsequent templated calls are used with the same socket */
    oo_sp    oomt_sock_id;
};
```

### MSG Update

```
/* An update_iovec describes a single template update */
struct onload_template_msg_update_iovec {
    void*    otmu_base;          /* Pointer to new data */
    size_t   otmu_len;          /* Length of new data */
    off_t    otmu_offset;        /* Offset within template to update */
    unsigned otmu_flags;        /* For future use. Must be set to 0. */
};
```

## MSG Allocation

### Description

Populated from an array of iovecs to specify the initial packet data. This function is called once to allocate the packet template and populate the template with the bulk of the payload data.

### Definition

```
extern int onload_msg_template_alloc(  
    int fd,  
    struct iovec* initial_msg,  
    int iovlen,  
    onload_template_handle* handle,  
    unsigned flags);
```

### Formal Parameters

fd

File descriptor to send on

initial\_msg

Array of iovecs which are the bulk of the payload

iovlen

Length of initial msg

handle

Template handle, used to refer to this template

flags

See notes below. Can also be set to zero

### Return Value

0 on success

nonzero otherwise

### Notes

The initial iovec array passed to `onload_msg_template_alloc()` must have at least one element having a valid address and non-zero length.

If PIO allocation fail, then `template_alloc` will fail. Setting the flags to `ONLOAD_TEMPLATE_FLAGSPIO_RETRY` will force allocation without PIO while attempting to allocate the PIO in later calls to `onload_msg_template_update()`.

## MSG Template Update

### Description

Takes an array of `onload_template_msg_update_iovec` to describe changes to the base packet populated by the `onload_msg_template_alloc()` function. Each of the update iovecs should describe a single change. The update function is used to overwrite existing template content or to send the complete template content when the `ONLOAD_TEMPLATE_FLAGS_SEND_NOW` flag is set.

### Definition

```
extern int onload_msg_template_update(  
    int fd,  
    onload_template_handle* handle,  
    struct onload_template_msg_update_iovec* updates,  
    int ulen,  
    unsigned flags);
```

### Formal Parameters

`fd`  
File descriptor to send on

`handle`  
Template handle, returned from the alloc function

`onload_template_msg_update_iovec`  
Array of `onload_template_msg_update_iovec` each of which is a change to the template payload

`ulen`  
Length of updates array (i.e. the number of changes)

`flags`  
See notes below. Can also be set to zero

### Return Value

0 on success  
nonzero otherwise

### Notes

If the `ONLOAD_TEMPLATE_FLAGS_SEND_NOW` flag is set, ownership of the template is passed to Onload.

This function can be called multiple times and changes are cumulative.

Flags:

`ONLOAD_TEMPLATE_FLAGS_SEND_NOW`

Perform the template update, send the template contents and pass ownership of the template to Onload.

To send without updating template contents – updates=NULL, ulen=0 and set the send now flag.

ONLOAD\_TEMPLATE\_FLAGS\_DONTWAIT (same as MSG\_DONTWAIT)  
Do not block.

## MSG Template Abort

Abort use of the template without sending the template and free the template resources including the template handle and PIO region.

### Description

### Definition

```
extern int onload_msg_template_alloc(  
    int fd,  
    onload_template_handle* handle);
```

### Formal Parameters

fd

File descriptor owning the template

handle

Template handle, used to refer to this template

### Return Value

0 on success, nonzero otherwise

## D.9 Delegated Sends API

The delegated send API, supported by Solarflare SFN7000, SFN8000 and X2 series adapters, can lower the latency overhead incurred when calling `send()` on TCP sockets by controlling TCP socket creation and management through Onload, but allowing TCP sends directly through the Onload layer 2 `ef_vi` API or other similar API.

### Description

An application using the delegated sends API will prepare a packet buffer with IP/TCP header data, before adding payload data to the packet. The packet buffer can be prepared in advance and payload added just before the send is required.

After each delegated send, the actual data sent (and length of that data) is returned to Onload. This allows Onload to update the TCP internal state and have the data to hand if retransmissions are required on the socket.

This feature is intended for applications that make sporadic TCP sends as opposed to large amounts of bi-directional TCP traffic. The API should be used with caution to send small amounts of TCP data. Although the packet buffer can be prepared in advance of the send, the idea is to complete the delegated send operation (`onload_delegated_send_complete()`) soon after the initial send to maintain the integrity of the TCP internal state i.e. so that sequence/acknowledgment numbers are correct.

The user is responsible for serialization when using the delegated send API. The first call should always be `onload_delegated_send_prepare()`. If a normal send is required following the prepare, the user should use `onload_delegated_send_cancel()`.



**NOTE:** For a given file descriptor, while a delegated send is in progress, and until `complete` has been called, the user should NOT attempt any standard `send()`, `write()` or `sendfile()` `close()` etc operations.

### Performance

For best latency the application should call `onload_delegated_send_complete()` as soon as a delegated send is complete. This allows Onload to continue if retransmissions are required.




**WARNING:** Onload cannot perform any retransmission until `complete` has been called.

When a link partner has already acknowledged data before `complete` has been called, Onload will not have to copy the sent data to the TCP retransmit queue. So delaying the `complete` call may avoid a data copy but latency may suffer in the event of packet loss.

## Standard send vs. Delegated Send

The following sequence demonstrates the events sequence of a normal TCP send and the Delegated send.

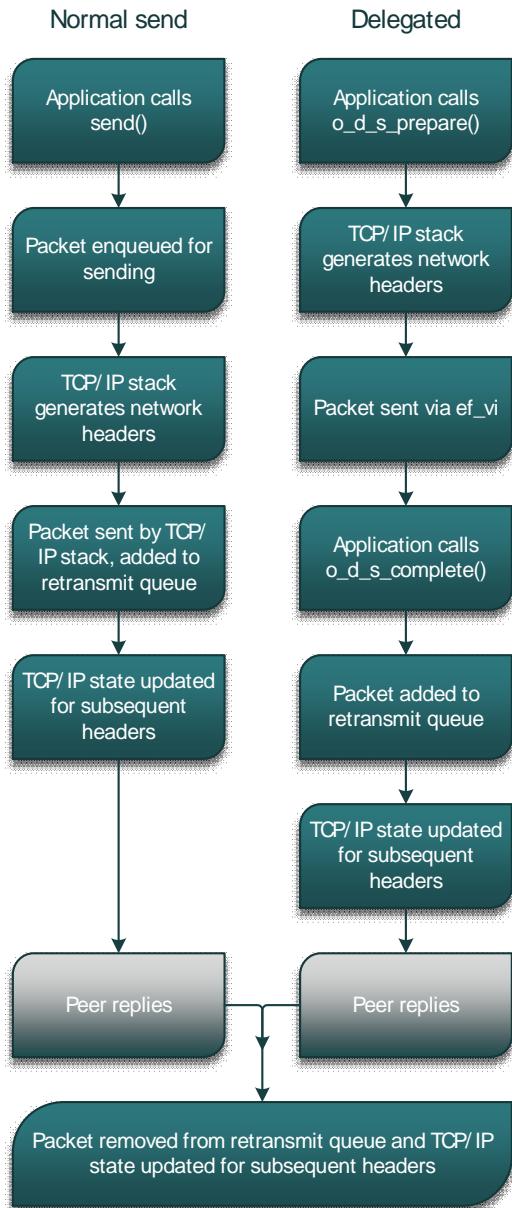

**Figure 29: Standard vs. Delegated send.**

A packet could be delayed before sending when the receiver or network is not ready. When this occurs using delegated send, the `onload_delegated_send_prepare()` function will return zero values in the cong/send window fields of the delegated send state and the caller can elect to send with the standard method.

## Example Code

The Onload distribution includes the `efdelegated_server.c` and `efdelegated_client.c` example applications to demonstrate the delegated sends API. Variables and constants definitions, including socket flags and function return codes required when using the API can be found in the `extensions.h` header file.

- `/openonload-<version>/src/tests/ef_vi`
- `/openonload-<version>/build/gnu_x86_64/tests/ef_vi`

## Run client/server

```
[server1] # onload --profile=latency ./efdelegated_server -s -p 20003
<interface>
oo:efdelegated_serv[17921]: Using OpenOnload 201606-u1 Copyright 2006-2016
Solarflare Communications, 2002-2005 Level 5 Networks [3]
Waiting for client to connect
Accepted client connection
Starting event loop
n_lost_msgs: 0
n_samples: 50000
latency_mean: 5827
latency_min: 5493
latency_max: 343472

[server2]# onload --profile=latency ./efdelegated_client -d -p 20003
<interface> <server1 interface ip>
oo:efdelegated_clie[16950]: Using OpenOnload 201606-u1 Copyright 2006-2016
Solarflare Communications, 2002-2005 Level 5 Networks [1]
n_normal_sends: 4
n_delegated_sends: 54996
```

## struct onload\_delegated\_send

```
struct onload_delegated_send {
    void* headers;
    int   headers_len; /* buffer len on input, headers len on output */
    int   mss;          /* one packet payload may not exceed this */
    int   send_wnd;    /* send window */
    int   cong_wnd;    /* congestion window */
    int   user_size;   /* the "size" value from send_prepare() call */
    int   tcp_seq_offset;
    int   ip_len_offset;
    int   ip_tcp_hdr_len;
    int   reserved[5];
};
```

## onload\_delegated\_send\_rc

The `onload_delegated_send_prepare()` function can return different return codes identified below.

```
enum onload_delegated_send_rc {
    ONLOAD_DELEGATED_SEND_RC_OK = 0,
        send successful.
    ONLOAD_DELEGATED_SEND_RC_BAD_SOCKET,
        non-onloaded, non-TCP, non-connected or write-shutdowned.
    ONLOAD_DELEGATED_SEND_RC_SMALL_HEADER,
        too small header_len value.
    ONLOAD_DELEGATED_SEND_RC_SENDQ_BUSY,
        send queue is not empty.
    ONLOAD_DELEGATED_SEND_RC_NOWIN,
        send window is closed, the peer cannot receive more data.
    ONLOAD_DELEGATED_SEND_RC_NOARP,
        failed to find the destination MAC address. See extensions.h for
        further information.
    ONLOAD_DELEGATED_SEND_RC_NOCWIN,
        congestion window is closed. It is a violation of the TCP
        protocol to send anything. However, all the headers are filled in
        and the caller may use them for sending.
};
```

## onload\_delegated\_send\_prepare

### Description

Prepare to send up to size bytes. Allocate TCP headers and prepare them with Ethernet IP/TCP header data - including current sequence number and acknowledgment number.

### Definition

```
enum onload_delegated_send_prepare (
    int fd,
    int size,
    uint flags,
    struct onload_delegated_send* )
```

### Formal Parameters

`fd`

File descriptor to send on

`size`

Size of payload data

`flags`

See below

`struct onload_delegated_send*`

See [struct onload\\_delegated\\_send](#)

### Return Value

Refer to [onload\\_delegated\\_send\\_rc](#) above.

### Notes

This function can be called speculatively so that the packet buffer is prepared in advance, headers are added so that the packet payload data can be added immediately before the send is required.

This function assumes the packet length is equal to MSS in which case there is no need to call [onload\\_delegated\\_send\\_tcp\\_update\(\)](#).

Flags are used for ARP resolution:

- default flags = 0
- ONLOAD\_DELEGATED\_SEND\_FLAG\_IGNORE\_ARP - do not do ARP lookup, the caller will provide destination MAC address.
- ONLOAD\_DELEGATED\_SEND\_FLAG\_RESOLVE\_ARP - if ARP information is not available, send a speculative TCP\_ACK to provoke kernel into ARP resolution - wait up to 1ms for ARP information to appear.



**NOTE: TCP send window/congestion windows must be respected during delegated sends.**

See extensions.h for flags and return code values.

## onload\_delegated\_send\_tcp\_update

### Description

This function does not send TCP data, but is called to update packet headers with the sequence number and flags following successive sends via the [onload\\_delegated\\_send\\_tcp\\_advance\(\)](#) function.



**NOTE: This function does not update the ACK number.**

### Definition

```
void onload_delegated_send_tcp_update (
    struct onload_delegated_send*,
    int size,
    int flags )
```

### Formal Parameters

struct onload\_delegated\_send\*

See [struct onload\\_delegated\\_send](#)

size

Size of payload data

flags

See below

### Return Value

None

### Notes

This function is called when, during a send, the payload length is not equal to the MSS value. See [onload\\_delegated\\_send\\_prepare on page 293](#).

Flag TCP\_FLAG\_PSH is expected to be set on the last packet when sending a large data chunk.

## **onload\_delegated\_send\_tcp\_advance**

### **Description**

Advance TCP headers after sending a TCP packet. This function is good for:

- sending a few small packets in rapid succession
- sending large data chunk (>MSS) over multiple packets

The sequence number is updated for each outgoing packet. When a packet has been sent, the application must call `onload_delegated_send_tcp_update()` to update packet headers with the payload length - thereby ensuring that the sequence number is correct for the next send.

This function does not update the ACK number in outgoing packets. The ACK number in successive outgoing packets is the value from the last call to the `onload_delegated_send_prepare()` function.

The advance function is used to send a small number of successive outgoing packets, but the application should then call `onload_delegated_send_complete()` to return control to Onload in order to maintain sequence/acknowledgment number integrity and allow Onload to remove sent data from the retransmit queue.

### **Definition**

```
void onload_delegated_send_tcp_advance (
    struct onload_delegated_send*,
    int bytes )
```

### **Formal Parameters**

```
struct onload_delegated_send*
    See struct onload\_delegated\_send
bytes
    Number of bytes sent
```

### **Return Value**

None

### **Notes**

When sending a packet using multiple sends, the function is called to update the header data with the number of bytes after each send.

The actual data sent is not returned to Onload until the function `onload_delegated_send_complete()` is called.

## **onload\_delegated\_send\_complete**

### **Description**

Following a delegated send, this function is used to return the actual data sent (and length of that data) to Onload which will update the internal TCP state i.e. sequence numbers and remove packets from the retransmit queue (when appropriate ACKs are received).

### **Definition**

```
int onload_delegated_send_complete (
    int fd,
    const struct iovec *,
    int iovlen,
    int flags )
```

### **Formal Parameters**

**fd**

The file descriptor.

**struct iovec**

Pointer to the data sent

**iovlen**

Size (bytes) of the iovec array

**flags**

(MSG\_DONTWAIT | MSG\_NOSIGNAL]

### **Return Value**

number of bytes accepted or return -1 if an error occurs.

### **Notes**

Onload is unable to do any retransmit until this function has been called.

This function should be called even if some (but not all) bytes specified in the prepare function have been sent. The user must also call `onload_delegated_send_cancel()` if some of the bytes are not going to be sent i.e. reserved-but-not-sent - see `onload_delegated_send_cancel()` notes below.

This function can block because of SO\_SNDBUF limitation and will ignore the SO\_SNDTIMEO value.

## **onload\_delegated\_send\_cancel**

### **Description**

No more delegated send is planned.

Normal send(), shutdown() or close() etc can be called after this call.

### **Definition**

```
int onload_delegated_send_cancel (int fd)
```

### **Formal Parameters**

fd

The file descriptor to be closed.

### **Return Value**

0 on success

-1 on failure with errno set.

### **Notes**

When tcp headers have been allocated with `onload_delegated_send_prepare()`, but it is subsequently required to do a normal send, this function can be used to cancel the delegated send operation and do a normal send.

There is no need to call this function before calling `onload_delegated_send_prepare()`.

There is no need to call this function if all the bytes specified in the `onload_delegated_send_prepare()` function have been sent.

If some, but not all bytes have been sent, you must call `onload_delegated_send_complete()` for the sent bytes THEN call `onload_delegated_send_cancel()` for the remaining bytes (reserved-but-not-sent) bytes. This applies even if the reason for not sending is that the window limits returned from the prepare function have been reached.

Normal send(), shutdown() or close() etc can be called after this call.

# E

# onload\_stackdump

## E.1 Introduction

The Solarflare `onload_stackdump` diagnostic utility is a component of the Onload distribution which can be used to monitor Onload performance, set tuning options and examine aspects of the system performance.



**NOTE:** To view data for all stacks, created by all users, the user must be root when running `onload_stackdump`. Non-root users can only view data for stacks created by themselves and accessible to them via the `EF_SHARE_WITH` environment variable.

The following examples of `onload_stackdump` are demonstrated elsewhere in this user guide:

- [Monitoring Using `onload\_stackdump` on page 53](#)
- [Processing at User-Level on page 55](#)
- [As Few Interrupts as Possible on page 56](#)
- [Eliminating Drops on page 57](#)
- [Minimizing Lock Contention on page 58](#)
- [Stack Contention - Deferred Work on page 59](#)

## E.2 General Use

The `onload_stackdump` tool can produce an extensive range of data and it can be more useful to limit output to specific stacks or to specific aspects of the system performance for analysis purposes.

- For help, and to list all `onload_stackdump` commands and options:  
`onload_stackdump --help`
- To list and read environment variables descriptions:  
`onload_stackdump doc`
- For descriptions of statistics variables:  
`onload_stackdump describe_stats`  
Describes all statistics listed by the `onload_stackdump lots` command.
- To identify all stacks, by identifier and name, and all processes accelerated by Onload:  
`onload_stackdump`

```
#stack-id stack-name      pids
6          teststack       28570
```

- To limit the command/option to a specific stack e.g (stack 4).

```
onload_stackdump 4 lots
```

## E.3 List Onloaded Processes

The ‘onload\_stackdump processes’ command will show the PID and name of processes being accelerated by Onload and the Onload stack being used by each process e.g.

```
# onload_stackdump processes
#pid  stack-id cmdline
25587    3      ./sfnt-pingpong
```

Onloaded processes which have not created a socket are not displayed, but can be identified using the lsof command.

## E.4 Onloaded Threads, Priority, Affinity

The ‘onload\_stackdump threads’ command will identify threads within each Onloaded process, the CPU affinity of the thread and runtime priority.

```
# onload_stackdump threads | column -t
#pid  thread  affinity  priority  realtime
12606  12606  00000002  0          0
```

## E.5 List Onload Environment variables

The ‘onload\_stackdump env’ command will identify onloaded processes running in the current environment and list all Onload variables set in the current environment e.g.

```
# EF_POLL_USEC=100000 EF_TXQ_SIZE=4096 EF_INT_DRIVE=1 onload <application>
# onload_stackdump env
pid: 25587
cmdline: ./sfnt-pingpong
env: EF_POLL_USEC=100000
env: EF_TXQ_SIZE=4096
env: EF_INT_DRIVEN=1
```

## E.6 TX PIO Counters

The Onload stackdump utility exposes counters to indicate how often TX PIO is being used - see [Debug and Logging on page 84](#). To view PIO counters run the following command:

```
$ onload_stackdump stats | grep pio
pio_pkts: 2485971
no_pio_err: 0
```

The values returned will identify the number of packets sent via PIO and number of times when PIO was not used due to an error condition.

## E.7 Send RST on a TCP Socket

To send a reset on an Onload accelerated TCP socket, specify the stack and socket using the `rst` command:

```
# onload_stackdump <stack:socket> rst
```

## E.8 Removing Zombie and Orphan Stacks

Onload stacks and sockets can remain active even after all processes using them have been terminated or have exited, for example to ensure sent data is successfully received by the TCP peer or to honor TCP TIME\_WAIT semantics. Such stacks should always eventually self-destruct and disappear with no user intervention. However, these stacks, in some instances, cause problems for re-starting applications, for example the application may be unable to use the same port numbers when these are still being used by the persistent stack socket. Persistent stacks also retain resources such as packet buffers which are then denied to other stacks.

Such stacks are termed ‘zombie’ or ‘orphan’ stacks and it may be undesirable or desirable that they exist.

- To list all persistent stacks:  

```
# onload_stackdump -z all
```

No output to the console or syslog means that no such stacks exist.
- To list a specific persistent stack:  

```
# onload_stackdump -z <stack ID>
```
- To display the state of persistent stacks:  

```
# onload_stackdump -z dump
```
- To terminate persistent stacks  

```
# onload_stackdump -z kill
```
- To display all options available for zombie/orphan stacks:  

```
# onload_stackdump --help
```

**NOTE:** Older versions of Onload will list zombie/orphan stacks in syslog and not on the console. Users are advised to check both outputs after running the commands.



## E.9 Snapshot vs. Dynamic Views

The `onload_stackdump` tool presents a snapshot view of the system when invoked. To monitor state and variable changes whilst an application is running use `onload_stackdump` with the Linux `watch` command e.g.

- snapshot: `onload_stackdump netif`
- dynamic: `watch -d -n1 onload_stackdump netif`

Some `onload_stackdump` commands also update periodically whilst monitoring a process. These commands usually have the `watch_` prefix e.g.

`watch_stats`, `watch_more_stats`, `watch_tcp_stats`, `watch_ip_stats` etc.

Use the `onload_stackdump -h` option to list all commands.

## E.10 Monitoring Receive and Transmit Packet Buffers

```
onload_stackdump packets
# onload_stackdump packets
ci_netif_pkt_dump_all: id=1
  pkt_sets: pkt_size=2048 set_size=1024 max=32 alloc=2
  pkt_set[0]: free=544
  pkt_set[1]: free=437 current
  pkt_bufs: max=32768 alloc=2048 free=981 async=0
  pkt_bufs: rx=1067 rx_ring=1001 rx_queued=2 pressure_pool=64
  pkt_bufs: tx=0 tx_ring=0 tx_oflow=0
  pkt_bufs: in_loopback=0 in_sock=0
    1003: 0x200 Rx
    n_zero_refs=1045 n_freetpkts=981 estimated_free_nonb=64
    free_nonb=0 nonb_pkt_pool=ffffffffffffffffff
```

The `onload_stackdump packets` command can be useful to review packet buffer allocation, use and reuse within a monitored process.

The example above identifies that the process has a maximum of 32768 buffers (each of 2048 bytes) available. From this pool 2048 buffers have been allocated and 981 from that allocation are currently free for reuse - that means they can be pushed onto the receive or transmit ring buffers ready to accept new incoming/outgoing data.

On the receive side of the stack, 1067 packet buffers have been allocated, 1001 have been pushed to the receive ring - and are available for incoming packets, and 2 are currently in the receive queue for the application to process.

On the transmit side of the stack, zero buffers are currently allocated or being used. The remaining values are calculations based on the packet buffer values.

Using the `EF_PFAULT_PACKETS` environment variable, packets can be pre-allocated to the user-process when an Onload stack is created. This can reduce latency jitter and improve Onload performance - for further details see [Prefault Packet Buffers on 53](#).

## Packet Sets

A packet set is a 2MB chunk of packet buffers being used by an Onload application. An application might use buffers from a single set or from several sets depending on its complexity and packet buffer requirements.

With an aim to further reduce TLB thrashing and eliminate packets drops, Onload will try to reuse buffers from the same set.

The `onload_stackdump lots` command will report on the current use of packets sets e.g:

```
$ onload_stackdump lots | grep pkt_set
pkt_sets: pkt_size=2048 set_size=1024 max=32 alloc=2
pkt_set[0]: free=544
pkt_set[1]: free=442 current
```

In the above output there are 2 packet sets, the counters identify the number of free packet buffers in each set and identify the set currently being used.

The packet sets feature is not available to user applications using the `ef_vi` layer directly.

## E.11 TCP Application STATS

The following `onload_stackdump` commands can be used to monitor accelerated TCP connections:

```
onload_stackdump tcp_stats
```

Field	Description
<code>tcp_activeOpens</code>	Number of socket connections initiated by the local end
<code>tcp_passiveOpens</code>	Number of sockets connections accepted by the local end
<code>tcp_attemptFails</code>	Number of failed connection attempts
<code>tcp_estabResets</code>	Number of established connections which were subsequently reset
<code>tcp_curr_estab</code>	Number of socket connections in the established or <code>close_wait</code> states
<code>tcp_in_segs</code>	Total number of received segments - includes errored segments
<code>tcp_out_segs</code>	Total number of transmitted segments - excluding segments containing only retransmitted octets
<code>tcp_retran_segs</code>	Total number of retransmitted segments

<code>tcp_in_errs</code>	Total number of segments received with errors
<code>tcp_out_RSTS</code>	Number of reset segments sent
<code>onload_stackdump more_stats   grep tcp</code>	
Field	Description
<code>tcp_has_recvq</code>	Non zero if receive queue has data ready
<code>tcp_recvq_bytes</code>	Total bytes in receive queue
<code>tcp_recvq_pkts</code>	Total packets in receive queue
<code>tcp_has_recv_reordered</code>	Non zero if socket has out of sequence bytes
<code>tcp_recv_reordered_pkts</code> :	Number of out of sequence packets received
<code>tcp_has_sendq</code>	Non zero if send queues have data ready
<code>tcp_sendq_bytes</code>	Number of bytes currently in all send queues for this connection
<code>tcp_sendq_pkts</code>	Number of packets currently in all send queues for this connection
<code>tcp_has_inflight</code>	Non zero if some data remains unacknowledged
<code>tcp_inflight_bytes</code>	Total number of unacknowledged bytes
<code>tcp_inflight_pkts</code>	Total number of unacknowledged packets
<code>tcp_n_in_listeq</code>	Number of sockets (summed across all listening sockets) where the local end has responded to SYN, with a SYN_ACK, but this has not yet been acknowledged by the remote end
<code>tcp_n_in_acceptq</code>	Number of sockets (summed across all listening sockets) that are currently queued waiting for the local application to call accept()

Use the `onload_stackdump -h` command to list all TCP connection, stack and socket commands.

## E.12 The `onload_stackdump LOTS` Command.

The `onload_stackdump lots` command will produce extensive data for all accelerated stacks and sockets. The command can also be restricted to a specific stack and its associated connections when the stack number is entered on the command line e.g.

```
onload_stackdump lots
```

```
onload_stackdump 2 lots
```

For descriptions of the statistics use the following command:

```
onload_stackdump describe_stats
```

The following tables describe the output from the `onload_stackdump lots` command for:

- TCP stack
- TCP established connection socket
- TCP listening socket
- UDP socket

*Within the tables the following abbreviations are used:*

- *rx = receive (or receiver), tx = transmit (or send)*
- *pkts = packets, skts = sockets*
- *Max = maximum, num = number, seq = sequence number*

**Table 3: Stackdump Output: TCP Stack**

Sample output	Description
<code>onload_stackdump lots</code>	Command entered
<code>ci_netif_dump_to_logger: stack=7 name=</code>	Stack id and stack name as set by EF_NAME.
<code>ver=201606 uid=0 pid=1930 ns_flags=0</code>	Onload version, user id and process id of creator process
<code>lock=20000000 LOCKED</code>	Internal stack lock status
<code>nics=3</code>	nics = bitfield identifies adapters used by this stack e.g. 3 = 0x11 - so stack is using NICs 1 and 2.
<code>primed=1</code>	primed = 1 means the event queue will generate an interrupt when the next event arrives
<code>sock_bufs:</code> <code>max=8192</code>	Max number of sockets buffers which can be allocated, and which are currently allocated.
<code>n_allocated=4</code>	
<code>aux_bufs: max=8192</code> <code>allocated=7</code> <code>free=6</code>	Buffers used by partially opened TCP connections (incoming connections) before they are established and promoted to use socket buffers. Aux buffers limited to EF_TCP_SYNRECV_MAX * 2

**Table 3: Stackdump Output: TCP Stack (continued)**

Sample output	Description
<pre>pkt_sets: pkt_size=2048 set_size=1024 max=32 alloc=2</pre>	<p>Packet buffers are 2KB in size. There are 1024 buffers in each packet set</p> <p>A maximum 32 packet sets are available to this stack</p> <p>2 packet sets are currently allocated</p>
<pre>pkt_set[0]: free=112</pre>	Packet set 0 with 112 free pkt buffers
<pre>pkt_set[1]: free=880 current</pre>	Packet set 1 with 880 free 2KB pkt buffers - this is the pkt_set currently being used.
<pre>pkt_bufs: max=32768 alloc=576 free=57 async=0</pre>	<p>Packet buffers:</p> <p>This stack is limited to allocating a maximum of 32768 packet buffers (each of 2048 bytes). 576 have been allocated of which 57 are free and can be reused by either receive or transmit rings.</p> <p>async = packet buffers used by Onload in one of its asynchronous queues</p>
<pre>pkt_bufs: rx=1056 rx_ring=992 rx_queued=0 pressure_pool=64</pre>	<p>Receive packet buffers:</p> <p>A total of 1056 pkt buffers are currently in use, 992 have been pushed to the receive ring, 0 are in the application's receive queue.</p> <p>Pressure_pool = rx - (rx_ring + rx_queued) - is a pool of pkt buffers used when the stack is under memory pressure.</p> <p>If the CRITICAL flag is displayed it indicates a memory pressure condition in which the number of packets in the receive socket buffers is approaching the EF_MAX_RX_PACKETS value.</p> <p>If the LOW flag is displayed it indicates a memory pressure condition when there are not enough packet buffers available to refill the RX descriptor ring.</p>

**Table 3: Stackdump Output: TCP Stack (continued)**

Sample output	Description
pkt_bufs: tx=2 tx_ring=1 tx_oflow=0	Transmit packet buffers: A total of 2 pkt buffers are currently in use, 1 remains in the transmit ring. tx_oflow = the number of extra packets that are ready to send to the transmit queue, but that the transmit queue doesn't have space to accept.
pkt_bufs: in_loopback=0 in_sock=991	Number of pkt_bufs currently used in TCP loopback connection or by a TCP socket
time: netif=5eb5c61 poll=5eb5c61 now=5eb5c61 (diff=0.000sec)	Internal timer values
active cache: hit=0 avail=0 cache=EMPTY pending=EMPTY	TCP socket caching. hit = number of cache hits (were cached) avail = number of sockets available for caching current cache state
ci_netif_dump_vi: stack=7 intf=0 dev=(pci address) hw=0C0 vi=240 pd_owner=1 channel=0 oo_vi_flags=3	Data describes the stack's virtual interface to the NIC  vi identifies the VI in use by the stack protection domain owner will be zero when using physical addressing mode. channel identifies the rx queue being used on this interface bitmask - VI is using adapters 1 and 2
evq: cap=2048 current=16de30 is_32_evs=0 is_ev=0	Event queue data: cap - max num of events queue can hold - set by EF_RXQ_SIZE, EF_TXQ_SIZE current - the current event queue location is_32_evs - is 1 if there are 32 or more events pending is_ev - is 1 if there are any events pending

**Table 3: Stackdump Output: TCP Stack (continued)**

Sample output	Description
rxq: cap=511 lim=511 spc=1 level=510 total_desc=93666	Receive queue data: cap - total capacity lim - max fill level for receive descriptor ring, specified by EF_RXQ_LIMIT spc - amount of empty buffers ready to be used level - how full the receive queue currently is total_desc - total number of descriptors that have been pushed to the receive queue
txq: cap=511 lim=511 spc=511 level=0 pkts=0 oflow_pkts=0	Transmit queue data: cap - total capacity lim - max fill level for transmit descriptor ring, specified by EF_TXQ_LIMIT spc - amount of empty buffers ready to be used level - how full the transmit queue currently is pkts - how many packets are represented by the descriptors in the transmit queue oflow - how many packets are in the overflow transmit queue (i.e. waiting for space in the NIC's transmit queue)
txq: pio_buf_size=2048 tot_pkts=93669 bytes=0	Total number of packets sent and number of packet bytes currently in the queue
ci_netif_dump_extra: stack=7	Additional data follows
in_poll=0 post_poll_list_empty=1 poll_did_wake=0	Stack Polling Status: in_poll = process is currently polling post_poll_list_empty=1, (1=true, 0=false) tasks to be done once polling is complete poll_did_wake = while polling, the process identified a socket which needs to be woken following the poll
rx_defrag_head=-1 rx_defrag_tail=-1	Reassembly sequence numbers. -1 means no reassembly has occurred

**Table 3: Stackdump Output: TCP Stack (continued)**

Sample output	Description
tx_may_alloc=1	TCP buffer data:
can=1	tx_may_alloc=num pkt buffers tcp could use
nonb_pool=1	nonb_pool= number of pkt buffers available to tcp process without holding lock
send_may_poll=0	send_may_poll=0, set using EF_POLL_ON_DEMAND
is_spinner=0	is_spinner= TRUE if a thread is spinning
hwport_to_intf_i=0,-1,-1,-1,-1,-1 intf_i_to_hwport=0,0,0,0,0,0	Internal mapping of internal interfaces to hardware ports
uk_intf_ver=03e89aa26d20b98fd08793e771f2cdd9	md5 user/kernel interface checksum computed by both kernel and user application to verify internal data structures
deferred count 0/32	NUMA node parameters - refer to <a href="#">Onload Deployment on NUMA Systems on page 41</a> .
numa nodes: creation=0 load=0	
numa node masks:	
packet alloc=1	
sock alloc=1	
interrupt=1	
pids:14025	List of processes being accelerated by Onload on this stack.

**Table 4: Stackdump Output: TCP Established Connection Socket**

Sample output	Description
TCP 7:1 lcl=192.168.1.2:50773 rmt=192.168.1.1:34875 ESTABLISHED	Socket Configuration. Stack:socket id, local and remote ip:port address, TCP connection is ESTABLISHED
lock: 10000000 UNLOCKED	Internal stack lock status
rx_wake=0000b6f4(RQ) tx_wake=00000002	Internal sequence values that are incremented each time a queue is ‘woken’
flags:	
ul_poll: 301326900	
spin cycles 100000 usec	
uid=0	
s_flags:	

**Table 4: Stackdump Output: TCP Established Connection Socket (continued)**

Sample output	Description
rcvbuf=129940 sndbuf=131072 bindtodev=-1(-1,0:0) ttl=64	Socket receive buffer size, send buffer size, bindtodev=-1(-1,0:0) ttl=64
rcvtimeo_ms=0 sndtimeo_ms=0 sigown=0 cmsg=	Timeout values (microseconds) before an error is generated for send/receive functions as set by SO_RCVTIMEO, SO SNDTIMEO. sigown identifies the PID receiving signals from this socket.
rx_errno=0 tx_errno=0 so_error=0 os_sock=0,TX	rx_errno = ZERO whilst data can still arrive, otherwise contains error code. tx_errno = ZERO if transmit can still happen, otherwise contains error code. so_error = current socket error (0 = no error) os_sock = identify socket handled by the OS and not by Onload. 0 means handled by Onload.
epoll3: ready_list_id 0	List of ready sockets from the epoll3 set.
tcpflags: TSO WSCL SACK ESTAB PASSIVE	TCP flags currently set for this socket.
local_peer: -1	local_peer = Identify the peer socket in a local loopback connection.
snd: up=b554bb86 una-nxt-max=b554bb86-b554bb87-b556b6a6 enq=b554bb87	TCP sequence numbers. up = (urgent pointer) sequence of byte following the 00B byte una-nxt-max = sequence number of first unacknowledged byte, sequence number of next byte we expect to be acknowledged and max = sequence of last byte in the current send window enq = sequence number of last byte currently queued for transmit

**Table 4: Stackdump Output: TCP Established Connection Socket (continued)**

Sample output	Description
<pre>         snd: send=0(0)         pre=0         inflight=1(1)         wnd=129824         unused=129823     </pre>	<p>Send Data.</p> <p>send = number of bytes (packets) held in the send buffer</p> <p>pre = number of pkts in pre-send queue. A process can add data to the prequeue when it is prevented from sending the data immediately. The data will be sent when the current sending operation is complete</p> <p>inflight = number of pkts (bytes) sent but not yet acknowledged</p> <p>wnd = receiver's advertised window size (bytes) and number of free (unused) space (bytes) in that window</p>
<pre>         snd: cwnd=49733+0         used=0         ssthresh=65535         bytes_acked=0         Open     </pre>	<p>Congestion window (cwnd).</p> <p>cwnd = congestion window size (bytes)</p> <p>used = portion of the cwnd currently in use</p> <p>slowstart thresh - number of bytes that have to be sent before process can exit slow start</p> <p>bytes_acked = number of bytes acknowledged - this value is used to calculate the rate at which the congestion window is opened</p> <p>current cwnd status = OPEN</p>
<pre>         snd:         sndbuf_pkts=136         Onloaded(Valid)         if=6         mtu=1500         intf_i=0         vlan=0         encap=4     </pre>	<p>Onloaded = can reach the destination via an accelerated interface.</p> <p>sndbuf_pkts = size of the send buffer (pkts). Send buffer is calculated as bytes.</p> <p>(Valid) = cached control plane information is up-to-date, can send immediately using this information.</p> <p>(Old) = cached control plane information may be out-of-date. On next send Onload will do a control plane lookup - this will add some latency.</p>

**Table 4: Stackdump Output: TCP Established Connection Socket (continued)**

Sample output	Description
snd: limited rwnd=0 cwnd=0 nagle=0 more=0 app=412548	Counts of reasons transmission was stopped by: receive wind size, congestion win size Nagle's algorithm more (CORK, MSG_MORE) app = TX stopped because TXQ is empty.
rcv: nxt-max=0e9251fe-0e944d1d wnd adv=129823 cur=0e944d92 FASTSTART FAST	Receiver Data. nxt-max = next byte we expect to receive and last byte we expect to receive (because of window size) wnd adv = receiver advertised window size cur = byte currently being processed
rcv: bytes=13201600 rob_pkts=0 q_pkts=2+0  usr=0	Reorder buffer. Bytes received out of sequence are put into a reorder buffer awaiting further bytes before reordering can occur.  usr = number of bytes of received data available to the user
eff_mss=1448 smss=1460 a amss=1460 used_bufs=2	Max Segment Size. eff_mss = effective_mss smss = sender mss amss = advertised mss used_bufs = number of transmit buffers used
srtt=01 rttvar=000 rto=189 zwins=0,0	Round trip time (RTT) - all values are milliseconds. srtt = smoothed RTT value rttvar = RTT variation rto = current RTO timeout value zwins = zero windows, times when advertised window has gone to zero size.

**Table 4: Stackdump Output: TCP Established Connection Socket (continued)**

Sample output	Description
curr_retrans=0	Re-transmissions.
total_retrans=0	curr_retrans
dupacks=0	total_retrans
	dupacks = number of duplicate acks received
rtos=0	rtos = number of retrans timeouts
freecs=0	freecs = number of fast recoveries
seqerr=0,0	seqerr = number of sequence errors
ooo_pkts=0	number of out of sequence pkts
ooo=0	number of out of order events
tx: defer=0	Number of pkts where send is deferred to stack lock holder.
nomac=0	
warm=0	Number of pkts sent via the OS using raw sockets when up to date ARP data is not available.
warm_aborted=0	Number of pkts sent using MSG_WARM.
	Number of times a message warm send function was called, but not sent due to onload lock constraints.
timers:	Currently active timers

**Table 5: Stackdump Output: TCP Stack Listen Socket**

Sample output	Description
TCP 7:3 lc1=0.0.0.0:50773	Socket configuration.
rmt=0.0.0.0:0 LISTEN	stack:socket id, LISTENING socket on port 50773
	local and remote addresses not set - not bound to any IP addr
lock: 10000000 UNLOCKED	Internal stack lock status
rx_wake=00000000	Internal sequence values that are incremented each time a queue is 'woken'
tx_wake=00000000 flags:	
addr_spc_id=fffffffffffffe	Address space identifier in which this socket exists
s_flags: REUSE BOUND PBOUND	flags set on the socket
	Allow bind to reuse local port

**Table 5: Stackdump Output: TCP Stack Listen Socket (continued)**

Sample output	Description
rcvbuf=129940	Receive Buffer.
sndbuf=131072	socket receive buffer size, send buffer size,
rx_errno=6b	rx_errno = ZERO whilst data can still arrive, otherwise contains error code. tx_errno = ZERO if
tx_errno=20	transmit can still happen, otherwise contains error code. so_error = current socket error (0 = no error)
so_error=0	
tcpflags: WSCL SACK	Flags advertised during handshake
listenq: max=1024	Listen Queue.
n=0	queue of half open connects (SYN received and SYNACK sent - waiting for final ACK)
	n - number of connections in the queue
acceptq: max=5	Accept Queue.
n=0	queue of open connections, waiting for application to call accept().
get=-1	max = max connections that can exist in the queue
put=-1	n = current number of connections
total=0	get/put = indexes for queue access
	total = num of connections that have traversed this queue
epcache: n=0	Endpoint cache.
cache=EMPTY	n = number of endpoints currently known to this socket
pending=EMPTY	cache = EMPTY or yes if endpoints are still cached pending = EMTPY or yes if endpoints still have to be cached

**Table 5: Stackdump Output: TCP Stack Listen Socket (continued)**

Sample output	Description
defer_accept=0	Number of times TCP_DEFER_ACCEPT kicked in - see TCP socket options 255 = OO_TCP_DIRECT_ACCEPT_OFF
l_overflow=0	l_overflow = number of times listen queue was full and had to reject a SYN request
l_no_synrecv=0	
a_overflow=0	l_no_synrecv = number of times unable to allocate internal resource for SYN request
a_no_sock=0	
ack_rsts=0	a_overflow = number of times unable to promote connection to the accept queue which is full
os=2	a_no_sock = number of times unable to create socket  ack_rsts = number of times received an ACK before SYN so the connection was reset  os=2 there are 2 sockets being processed in the kernel

**Table 6: Stackdump Output: UDP Socket:**

Sample output	Description
UDP 4:1 lcl=192.168.1.2:38142 rmt=192.168.1.1:42638 UDP	Socket Configuration. stack:socket id, UDP socket on port 38142 Local and remote addresses and ports
lock: 20000000 LOCKED	Stack internal lock status
rx_wake=000e69b0 tx_wake=000e69b1 flags:	Internal sequence values that are incremented each time a queue is ‘woken’
ul_poll:0	ul_poll
spin cycles 0 (usec)	spin_cycles is the spin duration.
uid=0 s_flags: FILTER	
rcvbuf=129024	Buffers.
sndbuf=129024	socket receive buffer size, send buffer size,
bindtodev=-1(01,0:0) ttl=64	

**Table 6: Stackdump Output: UDP Socket: (continued)**

Sample output	Description
rcvtimeo_ms=0 sndtimeo_ms=0 sigown=0 cmsg=	Timeout values (microseconds) for send/receive functions as set by SO_RCVTIMEO, SO_SNDFTIMEO.  sigown identifies the PID receiving signals from this socket.
rx_errno=0 tx_errno=0 so_error=0 os_sock=0, TX	rx_errno = ZERO whilst data can still arrive, otherwise contains error code.  tx_errno = ZERO if transmit can still happen, otherwise contains error code.  so_error = current socket error (0 = no error)
epoll3: ready_list_id 0	List of file descriptors ready in the epoll set
udpflags: FILT MCAST_LOOP RXOS	Flags set on the UDP socket
mcast_snd: intf=-1 ifindex=0 saddr=0.0.0.0 ttl=1 mtu=1500	Multicast.  intf = multicast hardware port id (-1 means port was not set)  ifindex = interface (port) identifier  saddr = IP address  ttl = time to live (default for multicast =1)  mtu = max transmission unit size
recv: q_bytes=0 q_pkts=0 reap=2 tot_bytes=30225920 tot_pkts=944560	Receive Queue.  q_bytes = num bytes currently in rx queue q_pkts = num pkts currently in rx queue  reap = num pkt buffers in the process of being freed for reuse  tot_bytes = total bytes received on this socket tot_pkts = total pkts received

**Table 6: Stackdump Output: UDP Socket: (continued)**

Sample output	Description
rcv: oflow_drop=0(0%) mem_drop=0 eagain=0 pktinfo=0 q_max_pkts=0	Overflow Buffer. oflow_drop = number packets dropped because the buffer is full. mem_drop = number of datagrams dropped due to running out of packet buffer memory. eagain = number of times the application tried to read from a socket when there is no data ready - this value can be ignored on the rcv side pktinfo = number of times IP_PKTINFO control message was received q_max = max depth reached by the receive queue (packets)
rcv: os=0(0%) os_slow=0 os_error=0	Number of datagrams received via: os = operating system os_slow = operating system slow socket os_error = recv() function call via OS returned an error
snd: q=0+0 ul=944561 os=0(0%) os_slow=0(0%)	Send values. q = number of bytes sent to the interface but not yet transmitted ul = number of datagrams sent via onload os = number of datagrams sent via OS os_slow number of datagrams sent via OS slow path
snd: cp_match=0(0%)	Unconnected UDP send. cp_match = number dgrams sent via accelerated path and percent this is of all unconnected send dgrams
snd: lk_poll=0(0%) lk_pkt=944561(100%) lk_snd=0(0%)	Stack internal lock. lk_poll = number of times the lock was held while we poll the stack lk_pkt = number of pkts sent while holding the lock lk_snd = number of times the lock was held while sending data

**Table 6: Stackdump Output: UDP Socket: (continued)**

Sample output	Description
snd: lk_defer=0(0%) cached_daddr=0.0.0.0	Sending deferred to the process/thread currently holding the lock
snd: LOCK cp=1(0%) pkt=737815(99%)	count lock held while updating control plane
snd=3(0%)	count locks to get pkt buffer
poll=0(0%) d	count locks held when sending
defer=1(0%)	count lock held to poll stack
	count - sends deferred to lock holder
snd: MCAST if=9 src=172.16.128.28 ttl=1	details of the interfaces being used by the UDP stack
snd: T0 n=737820 match=737819(99%)	total number of UDP packets sent on this socket
lookup=1+0(0%)	--
Onloaded(Valid)	--
	UDP traffic is accelerated by Onload
snd: T0 if=9 mtu=1500 intf_i=0 vlan=0 encap=4	details of the interface being used to send UDP traffic
snd: T0 172.16.128.28:34645 => 224.1.2.3:8001	UDP send multicast source address:port and multicast address:port
snd: CON n=0 lookup=0 NoRoute(Old)	
snd CON if=0 mtu=0 intf_i=-1 vlan=0 encap=0	details of the interface being used to send UDP traffic

**Table 6: Stackdump Output: UDP Socket: (continued)**

Sample output	Description
<b> snd: eagain=0</b> <b> spin=0</b> <b> block=0</b>	<b>eagain</b> = count of the number of times the application tried to send data, but the transmit queue is already full. A high value on the send side may indicate transmit issues.  <b>spin</b> = number of times process had to spin when the send queue was full  <b>block</b> = number of times process had to block when the send queue was full
<b> snd: poll_avoids_full=0</b> <b>fragments=0</b> <b>confirm=0</b>	<b>poll_avoids_full</b> = number of times polling created space in the send queue  <b>fragments</b> = number of (non first) fragments sent  <b>confirm</b> = number of datagrams sent with MSG_CONFIRM flag
<b> snd: os_slow=1</b> <b>os_late=0</b> <b>unconnect_late=0</b> <b>nomac=0(0%)</b>	<b>number of packets sent on the os_slow path</b>  <b>os_late</b> = number of pkts sent via OS after copying  <b>unconnect_late</b> = number of pkts silently dropped when process/thread becomes disconnected during a send procedure  <b>nomac</b> = count number of times when no MAC address was known, so ARP was required before delivering traffic.

Following the stack and socket data `onload_stackdump lots` will display a list of statistical data. For descriptions of the fields refer to the output from the following command:

```
onload_stackdump describe_stats
```

The final list produced by `onload_stackdump lots` shows the current values of all environment variables in the monitored process environment. For descriptions of the environment variables refer to [Parameter Reference on page 193](#) or use the `onload_stackdump doc` command.

## E.13 Onload Stackdump Filters

Use the `onload_stackdump filters` commands to identify filters installed by the Onload application.

```
# onload_stackdump filters

1. oof_manager_dump: hwports up=f, down=0 unavailable=0 local_addr_n=1
2. 172.16.130.252 active=1 sockets=0
3. oof_local_port_dump: UDP:8001 n_refs=1
4. wild sockets:
5.   : 0:3 UDP 0.0.0.0:8001 0.0.0.0:0 ACCELERATED
6. FILTER 172.16.130.252:8001 hwports=c stack=0
7. mcast filters:
8.   maddr=224.1.2.3:8001 stack=0 hwports=1,1,0
9.   0:3 UDP 0.0.0.0:8001 0.0.0.0:0 if=6 hwports=1,1,0 KERNEL
10. oof_manager_dump: scalable interfaces and MAC filters

# onload_stackdump filter_table

1. ci_netif_filter_dump: 0 size=16384 n_entries=2 n_slots=2 max=1 mean=1
2. 0000000431 id=3           rt_ct=0 UDP 224.1.2.3:8001 0.0.0.0:0
0000000431:1109197297
3. 0000012173 id=3           rt_ct=0 UDP 172.16.130.252:8001 0.0.0.0:0
0000012173:-1113780035
```

## E.14 Remote Monitoring

Introduced in Onload-201502, the remote monitoring feature uses a simple client/server model to export the Onload stack and socket data to a remote server(s). The remote monitor (server) process is installed along with the Onload distribution. A simple example client process is also provided:

The server process (on the machine to be monitored) can be started from the following directory:

```
openonload-201502/src/tools/onload_remote_monitor
```

Start the monitor server process identifying a port through which server/client processes will connect:

```
# ./onload_remote_monitor <port>
```

The example client process can be found in the following directory:

```
openonload-201502/src/tests/onload/onload_remote_monitor
```

From the remote machine, start the client process identifying the server host machine and port number

```
# ./orm_example_client <serverhost>:<port>
```

There is very little overhead to `onload_remote_monitor`. An additional thread is created and works in the same way as `onload_stackdump`, without taking any stack locks and reading data from shared memory.



In the initial release the remote\_monitor server will export an extensive list of counters from the Onload stacks and sockets. Data is exported in JSON format for processing by a remote application.

Remote monitoring is an exploratory feature and it is planned that future continuous development will include data requested by direct customer input and feedback.

Customers interested in remote monitoring are asked to provide feedback and monitoring requirements by sending an email to [support@solarflare.com](mailto:support@solarflare.com).

# F

# Solarflare sfnettest

## F.1 Introduction

Solarflare sfnettest is a set of benchmark tools and test utilities supplied by Solarflare for benchmark and performance testing of network servers and network adapters. The sfnettest is available in binary and source forms from:

<http://www.openonload.org/>

Download the sfnettest-<version>.tgz source file and unpack using the tar command.

```
tar -zxvf sfnettest-<version>.tgz
```

Run the make utility from the /sfnettest-<version>/src subdirectory to build the benchmark applications.

Refer to the README.sfnt-pingpong or README.sfnt-stream files in the distribution directory once sfnettest is installed.

### **sfnt-pingpong**

#### **Description**

The sfnt-pingpong application measures TCP and UDP latency by creating a single socket between two servers and running a simple message pattern between them. The output identifies latency and statistics for increasing TCP/UDP packet sizes.

#### **Usage**

```
sfnt-pingpong [options] [<tcp|udp|pipe|unix_stream|unix_datagram>  
[<host[:port]>]]]
```

#### **Options**

sfnt-pingpong options:

Option	Description
--port	server port
--sizes	single message size (bytes)
--connect	connect() UDP socket
--spin	spin on non-blocking recv()

Option	Description
--muxer	select, poll or epoll
--serv-muxer	none, select, poll or epoll (same as client by default)
--rtt	report round-trip-time
--raw	dump raw results to files
--percentile	percentile
--minmsg	minimum message size
--maxmsg	maximum message size
--minms	min time per msg size (ms)
--maxms	max time per msg size (ms)
--miniter	minimum iterations for result
--maxiter	maximum iterations for result
--mcast	use multicast addressing
--mcastintf	set the multicast interface. The client sends this parameter to the server. --mcastintf=eth2 both client and server use eth2 --mcastintf='eth2;eth3' client uses eth2 and server uses eth3 (quotes are required for this format)
--mcastloop	IP_MULTICAST_LOOP
--bindtodev	SO_BINDTODEVICE
--forkboth	fork client and server
--n-pipe	include pipes in file descriptor set
--n-unix-d	include unix datagrams in the file descriptor set
--n-unix-s	include unix streams in the file descriptor set
--n-udp	include UDP sockets in file descriptor set
--n-tcpc	include TCP sockets in file descriptor set
--n-tcp1	include TCP listening sockets in file descriptor set
--tcp-serv	host:port for TCP connections
--timeout	socket SND/RECV timeout

Option	Description
--affinity	'<client-core>;<server-core>' Enclose values in quotes. This option should be set on the client side only. The client sends the <server_core> value to the server. The user must ensure that the identified server core is available on the server machine.  <b>This option will override any value set by taskset on the same command line.</b>
--n-pings	number of ping messages
--n-pongs	number of pong messages
--nodelay	enable TCP_NODELAY

Standard options:

Option	Description
-? --help	this message
-q --quiet	quiet
-v --verbose	display more information

## Examples

### *Example TCP latency command lines*

```
[server]# onload --profile=latency taskset -c 1 ./sfnt-pingpong
[client]# onload --profile=latency taskset -c 1 ./sfnt-pingpong \
           --maxms=10000 --affinity "1;1" tcp <server-ip>
```

### *Example UDP latency command lines*

```
[server]# onload --profile=latency taskset -c 9 ./sfnt-pingpong
[client]# onload --profile=latency taskset -c 9 ./sfnt-pingpong \
           --maxms=10000 --affinity "9;9" udp <server_ip>
```

### *Example output*

```
# version: 1.5.0
# src: 8dc3b027d85b28bedf9fd731362e4968
# date: Tue  9 Feb 13:15:46 GMT 2016
# uname: Linux dellr210g2q.uk.level5networks.com 3.10.0-327.el7.x86_64 #1
SMP Thu Oct 29 17:29:29 EDT 2015 x86_64 x86_64 x86_64 GNU/Linux
# cpu: model name      : Intel(R) Xeon(R) CPU E3-1280 V2 @ 3.60GHz
# lspci: 05:00.0 Ethernet controller: Intel Corporation I350 Gigabit
Network Connection (rev 01)
# lspci: 05:00.1 Ethernet controller: Intel Corporation I350 Gigabit
Network Connection (rev 01)
```

```

# lspci: 83:00.0 Ethernet controller: Solarflare Communications SFC9020
[Solarstorm]
# lspci: 83:00.1 Ethernet controller: Solarflare Communications SFC9020
[Solarstorm]
# lspci: 85:00.0 Ethernet controller: Intel Corporation 82574L Gigabit
Network Connection
# eth0: driver: igb
# eth0: version: 3.0.6-k
# eth0: bus-info: 0000:05:00.0
# eth1: driver: igb
# eth1: version: 3.0.6-k
# eth1: bus-info: 0000:05:00.1
# eth2: driver: sfc
# eth2: version: 3.2.1.6083
# eth2: bus-info: 0000:83:00.0
# eth3: driver: sfc
# eth3: version: 3.2.1.6083
# eth3: bus-info: 0000:83:00.1
# eth4: driver: e1000e
# eth4: version: 1.4.4-k
# eth4: bus-info: 0000:85:00.0
# virbr0: driver: bridge
# virbr0: version: 2.3
# virbr0: bus-info: N/A
# virbr0-nic: driver: tun
# virbr0-nic: version: 1.6
# virbr0-nic: bus-info: tap
# ram: MemTotal:      32959748 kB
# tsc_hz: 3099966880
# LD_PRELOAD=libonload.so
# server LD_PRELOAD=libonload.so
# onload_version=201205
# EF_TCP_FASTSTART_INIT=0
# EF_POLL_USEC=100000
# EF_TCP_FASTSTART_IDLE=0
#
#      size    mean    min    median   max    %ile    stddev  iter
#      1     2453   2380    2434  18288   2669     77  1000000
#      2     2453   2379    2435  45109   2616     90  1000000
#      4     2467   2380    2436  10502   2730     82  1000000
#      8     2465   2383    2446   8798   2642     70  1000000
#     16     2460   2380    2441   7494   2632     68  1000000
#     32     2474   2399    2454   8758   2677     71  1000000
#     64     2495   2419    2474  12174   2716     77  1000000

```

The output identifies mean, minimum, median and maximum (nanosecond)  $\frac{1}{2}$  RTT latency for increasing packet sizes including the 99% percentile and standard deviation for these results. A message size of 32 bytes has a mean latency of 2.4 microseconds with a 99%ile latency less than 2.7 microseconds.

## **sfnt-stream**

The `sfnt-stream` application measures RTT latency (not 1/2 RTT) for a fixed size message at increasing message rates. Latency is calculated from a sample of all messages sent. Message rates can be set with the `rates` option and the number of messages to sample using the `sample` option.

Solarflare `sfnt-stream` only functions on UDP sockets. This limitation will be removed to support other protocols in the future.

Refer to the `README.sfnt-stream` file which is part of the Onload distribution for further information.

### **Usage**

```
sfnt-stream [options] [tcp|udp|pipe|unix_stream|unix_datagram [host[:port]]]
```

### **Options**

`sfnt-stream` options:

Option	Description
<code>--msgsize</code>	message size (bytes)
<code>--rates</code>	msg rates <min>-<max>[+<step>]
<code>--millisec</code>	time per test (milliseconds)
<code>--samples</code>	number of samples per test
<code>--stop</code>	stop when TX rate achieved is below give percentage of target rate
<code>--maxburst</code>	maximum burst length
<code>--port</code>	server port number
<code>--connect</code>	connect() UDP socket
<code>--spin</code>	spin on non-blocking <code>recv()</code>
<code>--muxer</code>	select, poll, epoll or none
<code>--rtt</code>	report round-trip-time
<code>--raw</code>	dump raw results to file
<code>--percentile</code>	percentile
<code>--mcast</code>	set the multicast address

Option	Description
--mcastintf	set multicast interface. The client sends this parameter to the server. --mcastintf=eth2 both client and server use eth2 --mcastintf='eth2;eth3' client uses eth2 and server uses eth3 (quotes are required for this format)
--mcastloop	IP_MULTICAST_LOOP
--ttl	IP_TTL and IP_MULTICAST_TTL
--bindtodevice	SO_BINDTODEVICE
--n-pipe	include pipes in file descriptor set
--n-unix-d	include unix datagram in file descriptor set
--n-unix-s	include unix stream in file descriptor set
--n-udp	include UDP sockets in file descriptor set
--n-tcpc	include TCP sockets in file descriptor set
--n-tcp1	include TCP listening sockets in file descriptor set
--tcpc-serv	host:port for TCP connections
--nodelay	enable TCP_NODELAY
--affinity	"<client-tx>,<client-rx>;<server-core>" enclose the values in double quotes e.g. "4,5;3". This option should be set on the client side only. The client sends the <server_core> value to the server. The user must ensure that the identified server core is available on the server machine. <b>This option will override any value set by taskset on the same command line.</b>
--rtt-iter	iterations for RTT measurement
Standard options:	
Option	Description
-? --help	this message
-q --quiet	quiet
-v --verbose	display more information
--version	display version information

## Examples

### *Example command lines client/server*

```
# ./sfnt-stream (server)
# ./sfnt-stream --affinity 1,1 udp <server-ip> (client)
# ./taskset -c 1 ./sfnt-stream --affinity="3,5;3" --mcastintf=eth4 udp \
<remote-ip> (client)
```

### *Bonded Interfaces: sfnt-stream*

The following example configures a single bond, having two slaves interfaces, on each machine. Both client and server machines use eth4 and eth5.

#### *Client Configuration:*

```
[root@client src]# ifconfig eth4 0.0.0.0 down
[root@client src]# ifconfig eth5 0.0.0.0 down
[root@client src]# modprobe bonding miimon=100 mode=1 xmit_hash_policy=layer2 primary=eth5
[root@client src]# ifconfig bond0 up
[root@client src]# echo +eth4 > /sys/class/net/bond0/bonding/slaves
[root@client src]# echo +eth5 > /sys/class/net/bond0/bonding/slaves
[root@client src]# ifconfig bond0 172.16.136.27/21

[root@client src]# onload --profile=latency taskset -c 3 ./sfnt-stream
sfnt-stream: server: waiting for client to connect...
sfnt-stream: server: client connected
sfnt-stream: server: client 0 at 172.16.136.28:45037
```

#### *Server Configuration:*

```
[root@server src]# ifconfig eth4 0.0.0.0 down
[root@server src]# ifconfig eth5 0.0.0.0 down
[root@server src]# modprobe bonding miimon=100 mode=1 xmit_hash_policy=layer2 primary=eth5
[root@server src]# ifconfig bond0 up
[root@server src]# echo +eth4 > /sys/class/net/bond0/bonding/slaves
[root@server src]# echo +eth5 > /sys/class/net/bond0/bonding/slaves
[root@server src]# ifconfig bond0 172.16.136.28/21
```

NOTE: server sends to IP address of client bond

```
[root@server src]# onload --profile=latency taskset -c 1 ./sfnt-stream --mcastintf=bond0 -
--affinity "1,1;3" udp 172.16.136.27
```

## Output Fields

All time measurements are nanoseconds unless otherwise stated.

Field	Description
mps target	Msg per sec target rate
mps send	Msg per sec actual rate
mps recv	Msg receive rate
latency mean	RTT mean latency

Field	Description
<code>latency min</code>	RTT minimum latency
<code>latency median</code>	RTT median latency
<code>latency max</code>	RTT maximum latency
<code>latency %ile</code>	RTT 99%ile
<code>latency stddev</code>	Standard deviation of sample
<code>latency samples</code>	Number of messages used to calculate latency measurement
<code>sendjit mean</code>	Mean variance when sending messages
<code>sendjit min</code>	Minimum variance when sending messages
<code>sendjit max</code>	Maximum variance when sending messages
<code>sendjit behind</code>	Number of times the sender falls behind and is unable to keep up with the transmit rate
<code>gaps n_gaps</code>	Count the number of gaps appearing in the stream
<code>gaps n_drops</code>	Count the number of drops from stream
<code>gaps n_ooo</code>	Count the number of sequence numbers received out of order

## Latency Profile - Spinning

Both sfnt-pingpong and sfnt-stream use scripts found in the onload\_apps subdirectory which invoke the onload latency profile thereby causing the application to ‘spin’.

To run these test programs in an interrupt driven mode, replace the --profile=latency option on the command line, with the --no-app-handler option.

# G

## onload\_tcpdump

### G.1 Introduction

By definition, Onload is a kernel bypass technology and this prevents packets from being captured by packet sniffing applications such as tcpdump, netstat and wireshark.

Onload supports the `onload_tcpdump` application that supports packet capture from onload stacks to a file or to be displayed on standard out (stdout). Packet capture files produced by `onload_tcpdump` can then be imported to the regular tcpdump, wireshark or other third party application where users can take advantage of search and analysis features.

`Onload_tcpdump` allows for the capture of all TCP and UDP unicast and multicast data sent or received via Onload stacks - including shared stacks.



**NOTE:** Onload tcpdump is not a replacement for the standard Linux `tcpdump` utility. Onload tcpdump captures traffic only from Onload stacks.

### G.2 Building onload\_tcpdump

The `onload_tcpdump` script is supplied with the Onload distribution and is located in the `Onload-<version>/scripts` sub-directory.



**NOTE:** `libpcap` and `libpcap-devel` must be built and installed *before* Onload is installed.

### G.3 Using onload\_tcpdump

For help use the `./onload_tcpdump -h` command:

```
Usage:  
onload_tcpdump [-o stack-(id|name) [-o stack ...]]  
tcpdump_options_and_parameters  
"man tcpdump" for details on tcpdump parameters.  
You may use stack id number or shell-like pattern for the stack name  
to specify the Onload stacks to listen on.  
If you do not specify stacks, onload_tcpdump will monitor all onload  
stacks.  
If you do not specify interface via -i option, onload_tcpdump  
listens on ALL interfaces instead of the first one.
```

For further information refer to the Linux `man tcpdump` pages.



**NOTE:** Onload tcpdump only accepts separate command line options - combined options will be ignored by the application parser:

The following example will work:

```
onload_tcpdump -n -i <interface>
```

The following example will not work:

```
onload_tcpdump -ni <interface>
```

## Examples

- Capture all accelerated traffic from eth2 to a file called mycaps.pcap:  

```
# onload_tcpdump -ieth2 -wmycaps.pcap
```
- If no file is specified onload\_tcpdump will direct output to stdout:  

```
# onload_tcpdump -ieth2
```
- To capture accelerated traffic for a specific Onload stack (by name):  

```
# onload_tcpdump -ieth4 -o stackname
```
- To capture accelerated traffic for a specific Onload stack (by ID):  

```
# onload_tcpdump -o 7
```
- To capture accelerated traffic for Onload stacks where name begins with "abc"  

```
# onload_tcpdump -o 'abc*'
```
- To capture accelerated traffic for onload stack 1, stack named "stack2" and all onload stacks with name beginning with "ab":  

```
# onload_tcpdump -o 1 -o 'stack2' -o 'ab*'
```

## VLAN Examples

- Capture all UDP VLAN tagged traffic from the specified interface:  

```
# onload_tcpdump -nn -i eth3 udp and vlan
```
- Capture all UDP non-VLAN tagged traffic from the specified interface:  

```
# onload_tcpdump -nn -i eth3 udp and not vlan
```

## Dependencies

The onload\_tcpdump application requires libpcap and libpcap-devel to be installed on the server. If libpcap is not installed the following message is reported when onload\_tcpdump is invoked:

```
./onload_tcpdump
ci Onload was compiled without libpcap development package installed. You
need to install libpcap-devel or libpcap-dev package to run
onload_tcpdump.
tcpdump: truncated dump file; tried to read 24 file header bytes, only got
0
Hangup
```

If libpcap is missing it can be downloaded from <http://www.tcpdump.org/>

Untar the compressed file on the target server and follow build instructions in the `INSTALL.txt` file. The `libpcap` package must be installed before Onload is built and installed.

## Limitations

- Using multiple `onload_tcpdump` instances to capture from the same onload stack is not a supported configuration.
- Currently `onload_tcpdump` captures only packets from Onload stacks and not from kernel stacks.
- `onload_tcpdump` delivers timestamps with microsecond resolution. `onload_tcpdump` does not support nanosecond precision.
- The `onload_tcpdump` application monitors stack creation events and will attach to newly created stacks however, there is a short period (normally only a few milliseconds) between stack creation and the attachment during which packets sent/received will not be captured.

## Known Issues

- Users may notice that the packets sent when the destination address is not in the host ARP table causes the packets to appear in both `onload_tcpdump` and (Linux) `tcpdump`.



**CAUTION:** Users should not attempt to accelerate `onload_tcpdump` i.e. the following command should not be used:

```
onload onload_tcpdump -i <interface>
```

- `onload_tcpdump` will also be accelerated if `LD_PRELOAD` is exported in the Onload environment - so the following methods should not be used.

```
# export LD_PRELOAD=libonload.so  
# onload_tcpdump -i <interface>
```

## SolarCapture

Solarflare's SolarCapture is a packet capture application for Solarflare network adapters. It is able to capture received packets from the wire at line rate, assigning accurate nanosecond precision timestamps to each packet. Packets are captured to PCAP file or forwarded to user-supplied logic for processing. For details see the SolarCapture User Guide (SF-108469-CD) available from <https://support.solarflare.com/>.

# H

## ef\_vi

The Solarflare ef\_vi API is a layer 2 API that grants an application direct access to the Solarflare network adapter datapath to deliver lower latency and reduced per message processing overheads. ef\_vi is the internal API used by Onload for sending and receiving packets. It can be used directly by applications that want the very lowest latency send and receive API and that do not require a POSIX socket interface.

- ef\_vi is packaged with the Onload distribution.
- ef\_vi is an OSI level 2 interface which sends and receives raw Ethernet frames.
- ef\_vi supports a zero-copy interface because the user process has direct access to memory buffers used by the hardware to receive and transmit data.
- An application can use both ef\_vi and Onload at the same time. For example, use ef\_vi to receive UDP market data and Onload sockets for TCP connections for trading.
- The ef\_vi API can deliver lower latency than Onload and incurs reduced per message overheads.
- ef\_vi is free software distributed under a LGPL license.
- The user application wishing to use the layer 2 ef\_vi API must implement the higher layer protocols.

### H.1 Components

All components required to build and link a user application with the Solarflare ef\_vi API are distributed with Onload. When Onload is installed all required directories/files are located under the Onload distribution directory.

### H.2 Compiling and Linking

Refer to the README.ef\_vi file in the Onload directory for compile and link instructions.

## H.3 Documentation

The ef\_vi documentation is distributed in doxygen format with the Onload distribution. Documents in HTML and RTF format are generated by running doxygen in the following directory:

```
# cd openonload-<version>/src/include/etherfabric/doxygen  
# doxygen doxyfile_ef_vi
```

Documents are generated in the HTML and RTF sub-directories.

The ef\_vi user guide is also available in PDF format (SF-114063-CD) from the Solarflare download site.

## I

# onload\_iptables

## I.1 Description

The Linux netfilter iptables feature provides filtering based on user-configurable rules with the aim of managing access to network devices and preventing unauthorized or malicious passage of network traffic. Packets delivered to an application via the Onload accelerated path are not visible to the OS kernel and, as a result, these packets are not visible to the kernel firewall (iptables).

The onload\_iptables feature allows the user to configure rules which determine which hardware filters Onload is permitted to insert on the adapter and therefore which connections and sockets can bypass the kernel and, as a consequence, bypass iptables.

The onload\_iptables command can convert a snapshot<sup>1</sup> copy of the kernel iptables rules into Onload firewall rules used to determine if sockets, created by an Onloaded process, are retained by Onload or handed off to the kernel network stack.

Additionally, user-defined filter rules can be added to the Onload firewall on a per interface basis. **The Onload firewall applies to the receive filter path only.**

## I.2 How it works

Before Onload accelerates a socket it first checks the Onload firewall module. If the firewall module indicates the acceleration of the socket would violate a firewall rule, the acceleration request is denied and the socket is handed off to the kernel. Network traffic sent or received on the socket is not accelerated.

Onload firewall rules are parsed in ascending numerical order. The first rule to match the newly created socket - which may indicate to accelerate or decelerate the socket - is selected and no further rules are parsed.

If the Onload firewall rules are an exact copy of the kernel iptables i.e. with no additional rules added by the Onload user, then a socket handed off to the kernel, because of an iptables rule violation, will be unable to receive data through either path.

Changing rules using onload\_iptables will not interrupt existing network connections.

**NOTE:** Onload firewall rules will not persist over network driver restarts.

---

1. Subsequent changes to kernel iptables will not be reflected in the Onload firewall.



**NOTE:** The onload\_iptables “IP rules” will only block hardware IP filters from being inserted and onload\_iptables “MAC rules” will only block hardware MAC filters from being inserted. Therefore it is possible that if a rule is inserted to block a MAC address, the user is still able to accept traffic from the specified host by Onload inserting an appropriate IP hardware filter.

## Files

When the Onload drivers are loaded, firewall rules exist in the Linux proc pseudo file system at:

```
/proc/driver/sfc_resource
```

Within this directory the `firewall_add`, `firewall_del` and `resources` files will be present. These files are writable only by a root user. **No attempt should be made to remove these files.**

Once rules have been created for a particular interface – and only while these rules exist – a separate directory exists which contains the current firewall rules for the interface:

```
/proc/driver/sfc_resource/ethN/firewall_rules
```

## I.3 Features

### To get help

```
# onload_iptables -h
```

## I.4 Rules

The general format of the rule is:

```
[rule=n] if=ethN protocol=(ip|tcp|udp) [local_ip=a.b.c.d[/mask]]  
[remote_ip=a.b.c.d[/mask]] [local_port=a[-b]] [remote_port=a[-b]] [vlan=n]  
action=(ACCELERATE|DECELERATE)
```



**NOTE:** Using the IP address rule form, the vlan identifier is effective only when using a Solarflare SFN7000, SFN8000 or X2 series adapter which is configured to use the full-featured firmware variant. On other Solarflare adapters the vlan identifier is ignored. The vlan identifier can only be specified with the `vlan=n` syntax and not on the interface.

```
[rule=n] if=ethN protocol=eth mac=xx:xx:xx:xx:xx:xx[/FF:FF:FF:FF:FF:FF]  
[vlan=n] action=(ACCELERATE|DECELERATE)
```



**NOTE:** Using the MAC address rule form, the vlan identifier is effective when specified for any Solarflare adapter.

## I.5 Preview firewall rules

Before creating the Onload firewall, run the `onload_iptables -v` option to identify which rules will be adopted by the firewall and which will be rejected (a reason is given for rejection):

```
# onload_iptables -v

DROP      tcp  --  0.0.0.0/0          0.0.0.0/0          tcp dpt:5201
=> if=None protocol=tcp local_ip=0.0.0.0/0 local_port=5201-5201
    remote_ip=0.0.0.0/0 remote_port=0-65535 action=DECELERATE

DROP      tcp  --  0.0.0.0/0          0.0.0.0/0          tcp dpt:5201
=> if=None protocol=tcp local_ip=0.0.0.0/0 local_port=5201-5201
    remote_ip=0.0.0.0/0 remote_port=0-65535 action=DECELERATE

DROP      tcp  --  0.0.0.0/0          0.0.0.0/0          tcp
dpts:80:88
=> if=None protocol=tcp local_ip=0.0.0.0/0 local_port=80-88
    remote_ip=0.0.0.0/0 remote_port=0-65535 action=
tcp  --  0.0.0.0/0          0.0.0.0/0          tcp spt:800
=> Error parsing: Insufficient arguments in rule.
```

*The last rule is rejected because the action is missing.*



**NOTE:** The `-v` option does not create firewall rules for any Solarflare interface, but allows the user to preview which Linux iptables rules will be accepted and which will be rejected by Onload

## To convert Linux iptables to Onload firewall rules

The Linux iptables can be applied to all or individual Solarflare interfaces.

Onload iptables are only applied to the receive filter path. The user can select the INPUT CHAIN or a user defined CHAIN to parse from the iptables. The default CHAIN is INPUT. To adopt the rules from iptables even though some rules will be rejected enter the following command identifying the Solarflare interface the rules should be applied to:

```
# onload_iptables -i ethN -c
# onload_iptables -a -c
```

Running the `onload_iptables` command will overwrite existing rules in the Onload firewall when used with the `-i` (interface) or `-a` (all interfaces) options.



**NOTE:** Applying the Linux iptables to a Solarflare interface is optional. The alternatives are to create user-defined firewall rules per interface or not to apply any firewall rules per interface (default behavior).



**NOTE:** `onload_iptables` will import all rules to the identified interface - even rules specified on another interface. To avoid importing rules specified on 'other' interfaces using the `--use-extended` option.

## To view rules for a specific interface:

When firewall rules exist for a Solarflare interface, and only while they exist, a directory for the interface will be created in:

```
/proc/driver/sfc_resource
```

Rules for a specific interface will be found in the `firewall_rules` file e.g.

```
cat /proc/driver/sfc_resource/eth3/firewall_rules
if=eth3 rule=0 protocol=tcp local_ip=0.0.0.0/0.0.0.0 remote_ip=0.0.0.0/
0.0.0.0 local_port=5201-5201 remote_port=0-65535 action=DECELERATE
if=eth3 rule=1 protocol=tcp local_ip=0.0.0.0/0.0.0.0 remote_ip=0.0.0.0/
0.0.0.0 local_port=5201-5201 remote_port=0-65535 action=DECELERATE
if=eth3 rule=2 protocol=tcp local_ip=0.0.0.0/0.0.0.0 remote_ip=0.0.0.0/
0.0.0.0 local_port=5201-5201 remote_port=72-72 action=DECELERATE
if=eth3 rule=3 protocol=tcp local_ip=0.0.0.0/0.0.0.0 remote_ip=0.0.0.0/
0.0.0.0 local_port=80-88 remote_port=0-65535 action=DECELERATE
```

## To add a rule for a selected interface

```
echo "rule=4 if=eth3 action=ACCEPT protocol=udp local_port=7330-7340" \
> /proc/driver/sfc_resource/firewall_add
```

Rules can be inserted into any position in the table and existing rule numbers will be adjusted to accommodate new rules. If a rule number is not specified the rule will be appended to the existing rule list.



**NOTE:** Errors resulting from the add/delete commands will be displayed in dmesg.

## To delete a rule from a selected interface:

To delete a single rule:

```
# echo "if=eth3 rule=2" > /proc/driver/sfc_resource/firewall_del
```

To delete all rules:

```
echo "eth2 all" > /proc/driver/sfc_resource/firewall_del
```

When the last rule for an interface has been deleted the interface `firewall_rules` file is removed from `/proc/driver/sfc_resource`. The interface directory will be removed only when completely empty.

## Error Checking

The `onload_ipTables` command does not log errors to `stdout`. Errors arising from add or delete commands will be logged in `dmesg`.

## Interface & Port

Onload firewall rules are bound to an interface and not to a physical adapter port. It is possible to create rules for an interface in a configured/down state.

## Virtual/Bonded Interface

On virtual or bonded interfaces firewall rules are only applied and enforced on the 'real' interface.

## I.6 Error Messages

Error messages relating to `onload_iptables` operations will appear in dmesg.

**Table 7: Error messages for `onload_iptables`**

Error Message	Description
Internal error	Internal condition - should not happen.
Unsupported rule	Internal condition - should not happen.
Out of memory allocating new rule	Memory allocation error.
Seen multiple rule numbers	Only a single rule number can be specified when adding/deleting rules.
Seen multiple interfaces	Only a single interface can be specified when adding/deleting rules.
Unable to understand action	The action specified when adding a rule is not supported. Note that there should be no spaces i.e. <code>action=ACCELERATE</code> .
Unable to understand protocol	Non-supported protocol.
Unable to understand remainder of the rule	Non-supported parameters/syntax.
Failed to understand interface	The interface does not exist. Rules can be added to an interface that does not yet exist, but cannot be deleted from an non-existent interface.
Failed to remove rule	The rule does not exist.
Error removing table	Internal condition - should not happen.
Invalid local_ip rule	Invalid address/mask format. Supported formats:  a.b.c.d a.b.c.d/n a.b.c.d/e.f.g.h  where a.b.c.d.e.f.g.h are decimal range 0-255, n = decimal range 0-32.

**Table 7: Error messages for `onload_iptables` (continued)**

Error Message	Description
Invalid remote_ip rule	Invalid address/mask format.
Invalid rule	A rule must identify at least an interface, a protocol, an action and at least one match criteria.
Invalid mac	Invalid mac address/mask format. Supported formats: <code>XX:XX:XX:XX:XX:XX</code> <code>XX:XX:XX:XX:XX:XX/XX:XX:XX:XX:XX:XX</code> where x is a hex digit.



**NOTE:** A Linux limitation applicable to the /proc/ filesystem restricts a write operation to 1024 bytes. When writing to /proc/driver/sfc\_resource/firewall\_[add|del] files the user is advised to flush the write between lines which exceed the 1024 byte limit.

**J**

# Solarflare eflatency Test Application

The openonload distribution includes the command line eflatency test application to measure latency of the Solarflare ef\_vi layer 2 API.

eflatency is a single thread ping/pong application. When all iterations are complete the client side will display the round-trip time.

eflatency determines the lowest latency mode that it is possible to use, from the following:

- TX alternatives
- PIO
- DMA.

By default, eflatency sends 10000 warm-up packets to fill caches and stabilize the system, before measuring statistics over 100000 iterations of packets with no payload. Payload size and numbers of iterations can be configured.

With the Onload distribution installed, eflatency will be present in the following directory:

```
~/openonload-<version>/build/gnu_x86_64/tests/ef_vi
```

## J.1 eflatency

```
./eflatency -help
usage:
  eflatency [options] <ping|pong> <interface>
options:
  -n <iterations>          - set number of iterations
  -s <message-size>        - set udp payload size
  -w <iterations>          - set number of warmup iterations
```

**Table 8: eflatency Options**

Parameter	Description
interface	the local interface to use e.g. eth2

## To run eflatency

The eflatency must be started on the server (pong side) before the client (ping side) is run. Command line examples are shown below.

### 1 On the server side (server1)

```
taskset -c <M> ./eflatency -s 28 pong eth<N>
# ef_vi_version_str: <onload version>
# udp payload len: 28
# iterations: 100000
# warmups: 10000
# frame len: 70
# mode: Alternatives
where:<
- <M> is the CPU core
- <N> is the Solarflare adapter interface.
```

### 2 On the client side (server2)

```
taskset -c <M> ./eflatency -s 28 ping eth<N>
# ef_vi_version_str: <onload version>
# udp payload len: 28
# iterations: 100000
# warmups: 10000
# frame len: 70
# mode: Alternatives
mean round-trip time: <n.nnn> usec
where:<
- <M> is the CPU core
- <N> is the Solarflare adapter interface
- <n.nnn> is the reported mean round-trip time for a 28 byte payload.
```

# K

# Management Information Base

The Onload Management Information Base utility, `onload_mibdump` introduced in openonload-201710, provides state information from the onload control plane MIB tables.

In previous versions of Onload this information was provided via the tables in:

`/proc/driver/onload_cplane/mib-*`



**NOTE:** This utility is designed primarily to aid Solarflare support when investigating Onload support issues.

## K.1 Host

When the ‘onload\_mibdump all’ command is run in the host environment, tables are generated for all `onload_cp_server` objects visible from all namespaces and all containers.

## K.2 Container

When the ‘onload\_mibdump all’ command is run within a container, tables are generated only for `onload_cp_server` objects visible within the container namespace.

## K.3 Namespaces

When the ‘onload\_mibdump all’ command is run within a specific namespace, tables are generated only for `onload_cp_server` objects visible within the namespace.

## K.4 List Available Options

```
# onload_mibdump

onload_mibdump:
onload_mibdump: No tables specified.
onload_mibdump:
onload_mibdump: usage:
onload_mibdump:   onload_mibdump [options] [table...]
onload_mibdump:
onload_mibdump: options:
onload_mibdump:   -a --all          -- Dump all visible control planes
onload_mibdump:   -n --namespace   -- Dump the control plane for the specified namespace
onload_mibdump:
onload_mibdump: Options can also be given with the environment variable CI_OPTS
onload_mibdump:
onload_mibdump: Available tables are:
onload_mibdump:
onload_mibdump:   'usage' - amount of used and free space in each table
onload_mibdump:
onload_mibdump:   'version' - MIB table versions
onload_mibdump:
onload_mibdump:   'hwport' - mapping from hwports to interfaces
onload_mibdump:
onload_mibdump:   'llap' - status of all known interfaces
onload_mibdump:
onload_mibdump:   'ipif' - local IP address configuration
onload_mibdump:
onload_mibdump:   'fwd' - routing table
onload_mibdump:
onload_mibdump:   'stats' - statistics
onload_mibdump:
onload_mibdump:   'internal' - internal state
onload_mibdump:
onload_mibdump: Or use 'all' to dump all tables.
```

## K.5 Tables

Also refer to [Control Plane Server on page 68](#) and [Changing Onload Control Plane Table Sizes on page 67](#).

### Usage

Identifies the amount of used/max entries in each table.

```
# onload_mibdump -a usage
```

Control plane state for server 5625:

```
Table version number: 422
Dump version number: 3648
OOF version number: 2
```

Table space usage:

```
hwport: 4/8
1lap: 12/32
ipif: 7/256
fwd: 0/256
```

Version numbers are for internal use only. To increase the size of cplane tables, refer to [Changing Onload Control Plane Table Sizes on page 67](#).

### Version

Displays MIB tables version numbers. These values are for internal use only.

```
# onload_mibdump -a version
```

Control plane state for server 5625:

```
Table version number: 430
Dump version number: 3678
OOF version number: 2
```

## hwport

Displays mappings of hardware ports to interfaces.

```
# onload_mibdump -a hwport
```

Hwport table (licensed f, unlicensed 0):

```
hwport[000]:  
    flags LICENSED-ONLOAD (84)  
    oo_vi_flags_mask=ffffffff efhw_flags_extra=00000000 pio_len_shift=0  
hwport[001]:  
    flags LICENSED-ONLOAD (84)  
    oo_vi_flags_mask=ffffffff efhw_flags_extra=00000000 pio_len_shift=0  
hwport[002]:  
    flags LICENSED-ONLOAD LICENSED-TCP-DIRECT (8c)  
    oo_vi_flags_mask=ffffffff efhw_flags_extra=00000000 pio_len_shift=0  
hwport[003]:  
    flags LICENSED-ONLOAD LICENSED-TCP-DIRECT (8c)  
    oo_vi_flags_mask=ffffffff efhw_flags_extra=00000000 pio_len_shift=0
```

- **flags**  
Onload features licensed on the adapter
- **oo\_vi\_flags\_mask**  
flag definitions in /src/include/ci/efhw/common.h
- **efhw\_flags\_extra**  
flag definitions in /src/include/ci/efhw/common.h
- **pio\_len\_shift**  
internal PIO value.

## llap

The llap command provides some of the data available from the ip link show command.

Link state and link characteristics data is displayed for all layer 2 interfaces which have a loaded driver. Interfaces are sequentially numbered [nnn], this value is dynamically calculated and should not be used to refer to the interface.

```
# onload_mibdump -a llap
```

LLAP table:

```
llap[000]: enp4s0f1 (650) UP mtu 1500 arp_base 30000ms
    TX hwports 1
    RX hwports 1
    mac 00:0f:53:01:45:49
llap[001]: enp4s0f0 (649) UP mtu 1500 arp_base 30000ms
    TX hwports 0
    RX hwports 0
    mac 00:0f:53:01:45:48
llap[002]:     eth0 (652) UP mtu 1500 arp_base 30000ms
    TX hwports 2
    RX hwports 2
    mac 00:0f:53:21:9b:b0
llap[003]:     enp5s0f1 (653) UP mtu 1500 arp_base 30000ms
    TX hwports 3
    RX hwports 3
    mac 00:0f:53:21:9b:b1
llap[004]:     lo (1) UP mtu 65535 arp_base 30000ms
    encap LOOP
    no TX hwports
    no RX hwports
llap[005]:     eno1 (2) UP mtu 1500 arp_base 30000ms
    no TX hwports
    no RX hwports
llap[006]:     eno2 (3) UP mtu 1500 arp_base 30000ms
    no TX hwports
    no RX hwports
llap[007]:     eno3 (4) UP mtu 1500 arp_base 30000ms
    no TX hwports
    no RX hwports
llap[008]:     eno4 (5) UP mtu 1500 arp_base 30000ms
    no TX hwports
    no RX hwports
```

- **arp\_base**  
is the /proc/sys/net/ipv4/neigh/<iface>/base\_reachable\_time\_ms. (millisecs).
- **no TX/RX hwports**  
is a mask mapping kernel interfaces to Onload interfaces.

## ipif

Displays IP configuration for local interfaces.

```
# onload_mibdump ipif
```

IPIF table:

```
ipif[000]:      lo (1) 127.0.0.1/8 bcast 0.0.0.0 scope host
ipif[001]:      eno1 (2) 10.17.130.253/21 bcast 10.17.135.255 scope univ
ipif[002]:      virbr0 (10) 192.168.122.1/24 bcast 192.168.122.255 scope univ
ipif[003]:      enp4s0f0 (12) 172.16.130.253/21 bcast 172.16.135.255 scope univ
ipif[004]:      enp4s0f1 (13) 172.16.138.253/21 bcast 172.16.143.255 scope univ
ipif[005]:      enp5s0f0 (14) 172.16.154.253/21 bcast 172.16.159.255 scope univ
ipif[006]:      enp5s0f1 (15) 172.16.162.253/21 bcast 172.16.167.255 scope univ
```

## fwd

Will identify and list all interface routes and metrics assigned to each interface. The fwd option is the equivalent of using the 'ip route show' command.

```
# onload_mibdump fwd
```

FWD table:

```
Source prefix length in use: 5 32
Destination prefix length in use: 32
```

```
fwd[001]: from 172.16.154.253/32 to 172.16.154.252/32 via any tos 0
          from 172.16.154.253 via 172.16.154.252 enp5s0f0 (14)
          mtu 1500 type NORMAL arp valid
          hwports 4 from 00:0F:53:25:3A:20 to 00:0F:53:21:9B:B0
          last used: 2682 ms ago
          in use: 1       verinfo: 1-2
fwd[003]: from 10.17.130.253/32 to 10.17.135.251/32 via any tos 0
          from 10.17.130.253 via 10.17.135.251 (0)
          mtu 0 type ALIEN arp invalid
          hwports 0 from 00:00:00:00:00:00 to 00:00:00:00:00:00
          last used: 66111 ms ago
          in use: 1       verinfo: 3-e
fwd[218]: from 0.0.0.0/5 to 172.16.154.252/32 via any tos 0
          from 172.16.154.253 via 172.16.154.252 enp5s0f0 (14)
          mtu 1500 type NORMAL arp valid
          hwports 4 from 00:0F:53:25:3A:20 to 00:0F:53:21:9B:B0
          last used: 326092 ms ago
          in use: 1       verinfo: da-2
```

## stats

These stats are counts of instances when Onload requests routing resolution from the kernel.

```
# onload_mibdump -a stats
```

Control Plane statistics:

```
Route requests (non-waiting): 0
Route requests (waiting): 4
Route requests queue depth: 0
Filter engine requests (non-waiting): 7
Dropped IP packets routed via OS: 0
```

## internal

```
# onload_mibdump -a internal
```

Requesting dump of internal state...

Succeeded. Please check syslog.

The internal command will export onload\_cplane\_server data to the systemlog and can be viewed in /var/log/messages.

This command is for diagnostic purposes and may be requested by Solarflare support.

## all

Running the following command will generate all MIB tables:

```
# onload_mibdump all
```