

Optix Series

LCD Monitor

Optix MAG274QRF (3CA8) Optix MAG274QRF-QD (3CA8)

Contents

Getting Started	3
Package Contents	3
Installing the Monitor Stand	4
Adjusting the Monitor	5
Monitor Overview	6
Connecting the Monitor to PC	8
OSD Setup	9
Navi Key	9
Hot Key	9
OSD Menus	10
Gaming	10
Professional	12
Image	13
Input Source	14
Navi Key	14
Setting	15
Specifications	17
Preset Display Modes	19
Troubleshooting	20
Safety Instructions	21
Regulatory Notices	22

Revision

V1.0, 2020/10

Getting Started

This chapter provides you with the information on hardware setup procedures. While connecting devices, be careful in holding the devices and use a grounded wrist strap to avoid static electricity.

Package Contents

Monitor	Optix MAG274QRF / Optix MAG274QRF-QD		
	Quick Start Guide		
Documentation	Registration Card		
Documentation	Warranty Card		
	MSI Reward Program Card		
	Stand with Screw(s)		
Accessories	Stand Base with Screw(s)		
	Power Adapter & Power Cord		
	HDMI Cable (Optional)		
Cables	DisplayPort Cable (Optional)		
	USB Upstream Cable (for USB Type B Upstream Port) (Optional)		




- Contact your place of purchase or local distributor if any of the items is damaged or missing.
- Package contents may vary by country.

Installing the Monitor Stand

- 1. Leave the monitor in its protective foam packaging. Align the stand bracket to the monitor groove.
- 2. Tighten the stand bracket with screws.
- **3.** Connect the base to the stand and tighten the base screw to secure the base.
- 4. Make sure the stand assembly is properly installed before setting the monitor upright.



- Place the monitor on a soft, protected surface to avoid scratching the display panel.
- Do not use any sharp objects on the panel.
- The groove for installing the stand bracket can also be used for wall mount. Please contact your dealer for proper wall mount kit.

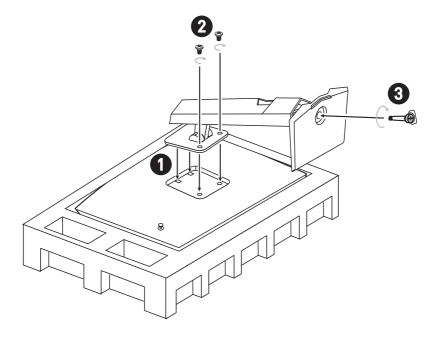


Adjusting the Monitor

This monitor is designed to maximize your viewing comfort with its adjustment capabilities.




Important

- Avoid touching the display panel when adjusting the monitor.
- Please slightly tilt the monitor backwards before pivoting it.

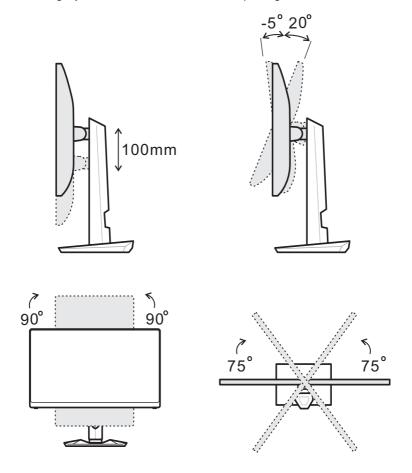


Monitor Overview

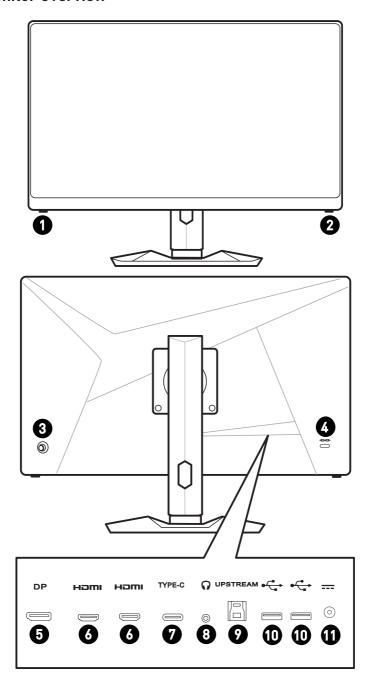

n	Macro Key
	To activate OSD.
2	Power Button
3	Navi Key
4	Kensington Lock
6	DisplayPort
6	HDMI Port HDMI
n	USB Type-C Port
	This port supports DisplayPort Alternate (DP Alt) Mode and up to 5V/3A (15W) power delivery. It only carries video signals and doesn't support data transmission function.
8	Headphone Jack
O	USB 2.0 Type B Upstream Port
	For USB Upstream Cable.
	Important To Monitor
	Check the package for USB Upstream Cable and connect it to the PC and monitor. Once
	this cable is connected, the USB Type A To PC Downstream Ports on the monitor will be ready for use.
0	USB 2.0 Type A Port
0	Power Jack

Connecting the Monitor to PC

- 1. Turn off your computer.
- 2. Connect the video cable from the monitor to your computer.
- 3. Assemble the monitor power adapter & power cord. (Figure A)
- 4. Connect the power adapter to the monitor power jack. (Figure B)
- **5.** Plug the power cord into the electrical outlet. (Figure C)
- **6.** Turn on the monitor. (Figure D)
- 7. Power on the computer and the monitor will auto detect the signal source.

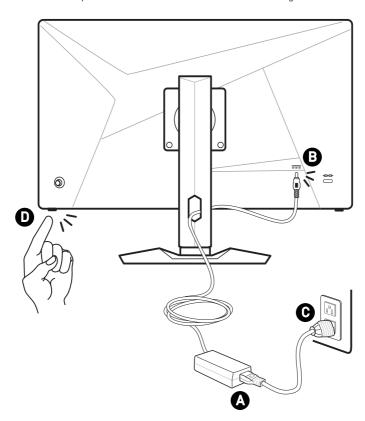

OSD Setup

This chapter provides you with essential information on OSD Setup.




\ Important

All information is subject to change without prior notice.

Navi Key

The monitor comes with a Navi Key, a multi-directional control that helps navigate the On-Screen Display (OSD) menu.

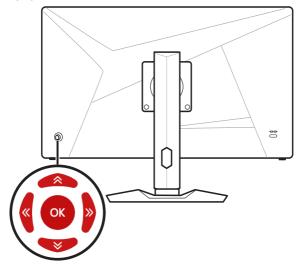

Up/Down/Left/Right:

- selecting function menus and items
- adjusting function values
- entering into/exiting from function menus


Press (OK):

- launching the On-Screen Display (OSD)
- entering submenus
- confirming a selection or setting

Hot Key

- Users may enter into Game Mode, Screen Assistance, Alarm Clock and Input Source function menus by moving the Navi Key up, down, left or right when the OSD menu is inactive
- Users may customize their own Hot Keys to enter into different function menus.

OSD Menus

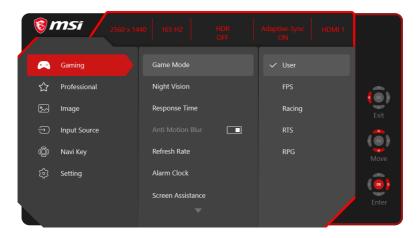

Gaming

1st Level Menu	2nd/3rd Level Menu	Description
Game Mode	User	All items can be adjusted by users.
	FPS	Use Up or Down Button to select and preview mode effects.
	Racing	Press the OK Button to confirm and
	RTS	apply your mode type.
	RPG	
Night Vision	OFF	This function optimizes background
	Normal	brightness and is recommended for FPS games.
	Strong	
	Strongest	
	A.I.	
Response Time	Normal	Users can adjust Response Time in any mode.
	Fast	Response Time will be grayed out while Anti Motion Blur is enabled
	Fastest	Response Time have to set to Fast after Anti Motion Blur is disabled.

1st Level Menu	2nd/3rd L	evel Menu	Description
Anti Motion Blur	OFF ON		When Anti Motion Blur is enabled, HDCR and Brightness cannot be enabled and will be grayed out. Response time will be grayed out while Anti Motion Blur is enabled. Anti Motion Blur has to be disabled while Adaptive-Sync is set to ON.
Refresh Rate	Location	Left Top Right Top Left Bottom Right Bottom	 Users can adjust Refresh Rate in any mode. Default Refresh Rate Location is Left Top. Location is adjustable in OSD Menu. Press the OK Button to confirm and apply your Refresh Rate Location. This monitor follows and works at the Operating System's preset Screen Refresh Rate
Alarm Clock	ON	Left Top Right Top	Users can adjust Alarm Clock in any mode. After setting the time, press the OK Button to activate the timer.
		Bottom Right Bottom Customize	Default Alarm Clock Location is Left Top. Users can select their own location.
	OFF		
	15:00 30:00	00:01 ~ 99:59	
	45:00		
	60:00		
Screen Assistance	None	[+]	 Users can adjust Screen Assistance in any mode. Screen Assistance default is None.
Assistance	Icon		
	Position	→	
	Reset	Α Υ Υ , 7	

1st Level Menu	2nd/3rd Level Menu	Description
Adaptive-Sync	Adaptive-Sync OFF ON	Adaptive-Sync prevents screen tearing.
		DisplayPort or HDMI default is OFF and can be adjusted ON/OFF in any mode, any resolution, any input source and any screen refresh rate.
		Anti Motion Blur will be disabled if Adaptive-Sync is enabled.

Professional

1st Level Menu	2nd Level Menu	Description
Pro Mode	User	Default mode is User.
	Reader	All items can be adjusted by users.
	Cinema	Use Up or Down Button to select and preview mode effects.
	Designer	Press the OK Button to confirm and apply your mode type.
Eye Saver	OFF	Eye Saver protects your eyes against blue
	ON	light. When enabled, Eye Saver adjusts the screen color temperature to a more yellow glow.
		Users can adjust Eye Saver in any mode.
		When Pro Mode is set to Reader, it is mandatory to enable Eye Saver.
HDCR	OFF	Users can adjust HDCR in any mode.
	ON	HDCR enhances image quality by increasing the contrast of images.
		When HDCR is set to ON, Brightness will be grayed out.
		HDCR and Anti Motion Blur cannot be enabled simultaneously.
Anti Motion	OFF	When Anti Motion Blur is enabled, HDCR
Blur	ON	and Brightness cannot be enabled and will be grayed out.
		Response time will be grayed out while Anti Motion Blur is enabled.
		Anti Motion Blur has to be disabled while Adaptive-Sync is set to ON.

1st Level Menu	2nd Level Menu	Description
Image Enhancement	OFF	Image Enhancement enhances image
Ennancement	Weak	edges to improve their acutance. • Users can adjust Image Enhancement in
	Medium	any mode.
	Strong	
	Strongest	

Image

1st Level Menu	2nd/3rd Level Menu		Description	
Brightness	0-100		 Users can adjust Brightness in User, RTS, RPG and Reader mode. Brightness will be grayed out when Anti Motion Blur or HDCR are enabled. 	
Contrast	0-100		Users can adjust Contrast in any mode.	
Sharpness	0-5		Users can adjust Sharpness in any mode.	
			Sharpness improves clarity and details of images.	
Color	Cool		Color Temperature default is Normal	
Temperature	Normal		Normal. Use Up or Down Button to select	
	Warm		and preview mode effects.	
	Customization	R (0-100)	Press the OK Button to confirm and apply your mode type.	
		G (0-100)	Users can adjust Color	
		B (0-100)	Temperature in Customization mode.	
Screen Size	Auto 4:3		Users can adjust Screen Size in	
			any mode, any resolution and any screen refresh rate.	
	16:9		• Default is Auto.	

Input Source

1st Level Menu	2nd Level Menu	Description
HDMI1		Users can adjust Input Source in any mode.
HDMI2		
DP		
Type C		
Auto Scan	OFF	Users can use the Navi Key to select Input
	ON	Source at below status:
	ON	While "Auto Scan" is set to "OFF" with the monitor at power saving mode;
		While "No Signal" message box is shown on the monitor.

Navi Key

1st Level Menu	2nd Level Menu	Description
Up / Down / Left	OFF	Up Button default is Game Mode.
/ Right	Brightness	Down Button default is Screen Assistance.
	Game Mode	Left Button default is Alarm Clock.
	Odine Mode	Right Button default is Input Source.
	Screen Assistance • All Navi Key ite OSD Menus.	All Navi Key items can be adjusted via OSD Menus.
	Alarm Clock	
	Input Source	
	Refresh Rate	
	Information on Screen	

Setting

1st Level Menu	2nd Level Menu	Description
Language	繁體中文	Language factory default is English.
	English	Users have to press the OK Button to confirm and apply the Language setting.
	Français	Language is an independent setting.
	Deutsch	Users' own language setting will override the factory default. When users set Reset
	Italiano	to Yes, Language will not be changed.
	Español	
	한국어	
	日本語	
	Русский	
	Português	
	简体中文	
	Bahasa Indonesia	
	Türkçe	
	(More languages coming soon)	
Transparency	0~5	Users can adjust Transparency in any mode.
OSD Time Out	5~30s	Users can adjust OSD Time Out in any mode.
RGB LED	OFF	• Users can adjust RGB LED to ON or OFF.
	ON	Default is ON.
Power Button	OFF	When set to OFF, users can press the power button to turn off the monitor.
	Standby	When set to Standby, users can press the power button to turn off the panel and backlight.
Information on	OFF	The information of the monitor status will
Screen	ON	be shown on the right side of the screen. Users can enable or disable the Information on Screen. Default is OFF.

1st Level Menu	2nd Level Menu	Description	
HDMI CEC	OFF	Default is OFF.	
	ON	HDMI CEC (Consumer Electronics Control) supports Sony PlayStation®, Nintendo® Switch™, and various audio-visual devices that are CEC-capable.	
		• If HDMI CEC is set to ON:	
		The monitor will automatically power on when the CEC device is turned on.	
		The CEC device will enter power saving mode when the monitor is turned off.	
		 When Sony PlayStation® or Nintendo® Switch™ is connected, Game and Pro Mode will be automatically set to User mode (Default) and can be adjusted to users' preferred modes later. 	
Reset	YES	Users can Reset and restore settings to original OSD Default in any mode.	
	NO		

Specifications

Model	Optix MAG274QRF	Optix MAG274QRF-QD	
Size		optix MA02/4GRF-GD	
	27 inch		
Curvature	Flat		
Panel Type	Rapid IPS		
Resolution	2560 x 1440 @165Hz	@165Hz	
Aspect Ratio	16:9		
Brightness (nits)	300 (typ.)		
Brightness: USB Type-C Power Delivery	5V/3A	• 0~69%: 5V/3A • 70~80%: 5V/2A • 81~100%: 5V/1A	
Contrast Ratio	1000:1		
Refresh Rate	165Hz		
Response Time	1ms (GTG)		
Input Interface	 HDMI x 2 DP x 1 USB Type-C (DP Alt Mode) x 1 (Up to 5V/3A power delivery) 		
1/0	 USB 2.0 Type B x 1 (for PC to Monitor) USB 2.0 Type A x 2 Headphone Jack x 1 		
View Angles	178°(H) , 178°(V)		
DCI-P3*/ sRGB	94% / 131%	97% / 147%	
Surface Treatment	Anti-glare		
Display Colors	1.07B (8 bit +FRC)		
Power Adapter Specs	• Option 1: DA-65C19 • Option 2: YJS065I-1903420D		
Power Input	100~240Vac, 50~60Hz, 1.6A Max		
Power Output	19.0V === 3.42A		
Adjustment (Tilt)	-5° ~ 20°		
Adjustment (Height)	0 ~ 100mm		

Model		Optix MAG274QRF	Optix MAG274QRF-QD	
Adjustment (Swivel)		-75° ~ 75°		
Adjustment (Pivot)		-90° ~ 90°		
Kensington Lock		Yes		
		• Plate Type: 100 x 100 mm		
		• Screw Type: M4 x 10 mm		
VESA Mounting		Thread Diameter: 4 mm		
		• Thread Pitch: 0.7 mm		
		• Thread Length: 10 mm		
Dimension (W x H x D)		614.9 x 532.7 x 206.7 mm		
Weight		6.05 Kg (net) / 8.7 Kg (gross)		
		• Temperature: 0°C to 40°C		
Environment	Operating	Humidity: 20% to 90%, non-condensing		
		• Altitude: 0 ~ 5000m		
	Storage	• Temperature: -20°C to 60°C		
		• Humidity: 10% to 90%, non-condensing		

^{*} Based on CIE1976 test standards.

Preset Display Modes

Standard	Resolution		Optix MAG274QRF / Optix MAG274QRF-QD	
			HDMI	DP/ Type-C
VGA	640x480	@60Hz	V	V
		@67Hz	V	V
		@72Hz	V	V
		@75Hz	V	V
Dos-Mode	720x480	@60Hz	V	V
	720x576	@50Hz	V	V
SVGA	800x600	@56Hz	V	V
		@60Hz	V	V
		@72Hz	V	V
		@75Hz	V	V
XGA	1024x768	@60Hz	V	V
		@70Hz	V	V
		@75Hz	V	V
SXGA	1280x1024	@60Hz	V	V
		@75Hz	V	V
WXGA+	1440x900	@60Hz	V	V
WSXGA+	1680x1050	@60Hz	V	V
Full HD	1920x1080	@60Hz	V	V
		@120Hz	V	V
		@165Hz	V	V
QHD	2560x1440	@60Hz	V	V
		@120Hz	V	V
		@144Hz	V	X
		@165Hz	Х	V
Video	480P		V	V
Timing Resolution	576P		V	V
Resolution	720P		V	V
	1080P		V	V
	1080P @120Hz		V	V
	2160P @30Hz		V	V
	2160P @60Hz		V	V

Troubleshooting

The power LED is off.

- Press the monitor power button again.
- Check if the monitor power cable is properly connected.

No image.

- Check if the computer graphics card is properly installed.
- Check if the computer and monitor are connected to electrical outlets and are turned on.
- Check if the monitor signal cable is properly connected.
- The computer may be in Standby mode. Press any key to activate the monitor.

The screen image is not properly sized or centered.

• Refer to Preset Display Modes to set the computer to a setting suitable for the monitor to display.

No Plug & Play.

- Check if the monitor power cable is properly connected.
- Check if the monitor signal cable is properly connected.
- Check if the computer and graphics card are Plug & Play compatible.

The icons, font or screen are fuzzy, blurry or have color problems.

- · Avoid using any video extension cables.
- · Adjust brightness and contrast.
- Adjust RGB color or tune color temperature.
- Check if the monitor signal cable is properly connected.
- Check for bent pins on the signal cable connector.

The monitor starts flickering or shows waves.

- Change the refresh rate to match the capabilities of your monitor.
- Update your graphics card drivers.
- Keep the monitor away from electrical devices that may cause electromagnetic interference (EMI).

Safety Instructions

- Read the safety instructions carefully and thoroughly.
- All cautions and warnings on the device or user's manual should be noted.
- Refer servicing to qualified personnel only.
- Keep the User's Guide that comes with the package for future reference.
- To prevent fire or shock hazard, keep this device away from humidity and high temperature.
- Lay this device on a reliable flat surface before setting it up.
- Make sure that the power voltage is within its safety range and has been adjusted properly to the value of 100~240V before connecting the device to the power outlet. Do not disable the protective earth pin from the plug. The device must be connected to an earthed mains socket-outlet.
- Always disconnect the power cord or switch the wall socket off if the device would be left unused for a certain time to achieve zero energy consumption.
- The ventilator on the device is used for air convection and to prevent the device from overheating. Do not cover the ventilator.
- Do not leave the device in an unconditioned environment with a storage temperature above 60°C or below -20°C, which may damage the device.
- NOTE: The maximum operating temperature is around 40°C.
- When cleaning the device, be sure to remove the power plug. Use a piece of soft cloth rather than industrial chemical to clean the device. Never pour any liquid into the opening; that could damage the device or cause electric shock.
- Place the power cord in a way that people are unlikely to step on it. Do not place anything on the power cord.
- Always keep strong magnetic or electrical objects away from the device.
- If any of the following situations arises, get the device checked by service personnel:
 - The power cord or plug is damaged.
 - Liquid has penetrated into the device.
 - The device has been exposed to moisture.
 - The device does not work well or you can not get it work according to user's manual.
 - The device has dropped and damaged.
 - The device has obvious sign of breakage.
- To prevent the monitor from tipping over, secure the monitor to a desk, wall or fixed object with a anti-tip fastener that helps to properly support the monitor and keep it safe in place.



Please confirm the power distribution system in the installation site shall provide the circuit breaker rated 120/240V. 20A (maximum).

Regulatory Notices

CE Conformity

This device complies with the requirements set out in the Council Directive on the Approximation of the Laws of the Member States relating to Electromagnetic Compatibility (2014/30/EU), Low-voltage Directive (2014/35/EU), ErP Directive (2009/125/EC) and RoHS directive (2011/65/EU). This product has been tested and found to comply with the harmonized standards for Information Technology Equipment published under Directives of Official Journal of the European Union.

FCC-B Radio Frequency Interference Statement

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instruction manual, may



cause harmful interference to radio communications. However, there is no quarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the measures listed below:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected
- Consult the dealer or an experienced radio/television technician for help.

Notice 1

The changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

Notice 2

Shielded interface cables and AC power cord, if any, must be used in order to comply with the emission limits.

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

- 1. This device may not cause harmful interference, and
- 2. This device must accept any interference received, including interference that may cause undesired operation.

MSI Computer Corp.

901 Canada Court, City of Industry, CA 91748, USA [626] 913-0828 www.msi.com

WFFF Statement

Under the European Union ("EU") Directive on Waste Electrical and Electronic Equipment, Directive 2012/19/EU, products of "electrical and electronic equipment" cannot be discarded as municipal waste anymore and manufacturers of covered electronic equipment will be obligated to take back such products at the end of their useful life.



Chemical Substances Information

In compliance with chemical substances regulations, such as the EU REACH Regulation (Regulation EC No. 1907/2006 of the European Parliament and the Council), MSI provides the information of chemical substances in products at:

https://storage-asset.msi.com/html/popup/csr/evmtprtt_pcm.html

RoHS Statement

Japan JIS C 0950 Material Declaration

A Japanese regulatory requirement, defined by specification JIS C 0950, mandates that manufacturers provide material declarations for certain categories of electronic products offered for sale after July 1, 2006.

https://storage-asset.msi.com/html/popup/csr/cemm jp.html

India RoHS

This product complies with the "India E-waste (Management and Handling) Rule 2011" and prohibits use of lead, mercury, hexavalent chromium, polybrominated biphenyls or polybrominated diphenyl ethers in concentrations exceeding 0.1 weight % and 0.01 weight % for cadmium, except for the exemptions set in Schedule 2 of the Rule.

Turkey EEE Regulation

Conforms to the EEE Regulations of the Republic Of Turkey.

Ukraine Restriction of Hazardous Substances

The equipment complies with requirements of the Technical Regulation, approved by the Resolution of Cabinet of Ministry of Ukraine as of December 3, 2008 № 1057, in terms of restrictions for the use of certain dangerous substances in electrical and electronic equipment.

Vietnam RoHS

As from December 1, 2012, all products manufactured by MSI comply with Circular 30/2011/TT-BCT temporarily regulating the permitted limits for a number of hazardous substances in electronic and electric products.

Green Product Features

- Reduced energy consumption during use and stand-by
- Limited use of substances harmful to the environment and health
- Easily dismantled and recycled
- Reduced use of natural resources by encouraging recycling
- · Extended product lifetime through easy upgrades
- Reduced solid waste production through take-back policy

Environmental Policy

- The product has been designed to enable proper reuse of parts and recycling and should not be thrown away at its end of life.
- Users should contact the local authorized point of collection for recycling and disposing of their end-of-life products.



- · Visit the MSI website and locate a nearby distributor for further recycling information.
- Users may also reach us at gpcontdev@msi.com for information regarding proper disposal, take-back, recycling, and disassembly of MSI products.

Warning!

Overuse of screens is likely to affect eyesight.

Recommendations:

- 1. Take a 10-minute break for every 30 minutes of screen time.
- 2. Children under 2 years of age should have no screen time. For children aged 2 years and over, screen time should be limited to less than one hour per day.

Copyright and Trademarks Notice

Copyright © Micro-Star Int'l Co., Ltd. All rights reserved. The MSI logo used is a registered trademark of Micro-Star Int'l Co., Ltd. All other marks and names mentioned may be trademarks of their respective owners. No warranty as to accuracy or completeness is expressed or implied. MSI reserves the right to make changes to this document without prior notice.

Technical Support

If a problem arises with your product and no solution can be obtained from the user's manual, please contact your place of purchase or local distributor. Alternatively, please visit https://www.msi.com/support/ for further guidance.