

ENGINEERING GRAPHICS

Topic: Scales



It is always possible or convenient to make the linear dimensions on a drawing sheet of the same size as the corresponding real dimensions on the object given.

Eg. Drawing of a mobile phone.





Drawing of very big object, like an aeroplane, must be drawn considerably smaller than the object so that the drawing can be read and handled with convenience.





On the other hand, details of small precision instruments, like watches etc.; are shown larger than their real size so that the drawing can be read clearly.





The proportion by which the drawing of a given object is enlarged or reduced is called the *scale* of the drawing.

Representative Fraction



The scale of a drawing is indicated by a ratio, called the Representative Fraction (RF) or Scale Factor.

Length of a line in the drawing

RF

Actual length of the line on the object

The terms 'scale' and 'RF' are synonymous. The scale is most commonly expressed in the format X:Y while RF is expressed in the format X/Y.



- 1. Reducing Scale.
- 2. Enlarging Scale.
- 3. Full Scale.



1. Reducing Scale

When huge objects are to be drawn, they are reduced in size on the drawing. The scales used for these objects are called *reducing scales*. It is clear that the length of the object on the drawing is less than the actual length of the object. Reducing scales are mentioned in the format 1:*Y*, where *Y* is greater than 1. Hence, RF < 1.

For eg:- 1:2 means drawing made to one HALF of the actual size.

Objects like multi-storeyed buildings, bridges, boilers, huge machinery, ships, aeroplanes, etc., are drawn to reducing scales.



2. Enlarging Scale

When smaller objects are to be drawn, they often need to be enlarged. The scales used in such cases are called *enlarging scales*. Obviously, the length of an object on the drawing is more than the corresponding actual length of the object. Enlarging scales are mentioned in the format X:1, where X is greater than 1. Clearly, RF > 1.

For eg: - 2:1 means drawing made to twice the actual size

Enlarging scales are used for objects like screws and gears used in small electronic gadgets, wristwatch parts, resistors, transistors, ICs.



3. Full Scale

When an object is drawn on the sheet to its actual size, it is said to be drawn to *full scale*. As the length on the drawing is equal to the actual length of the object, the full scale is expressed as 1:1. Obviously, for full scale, RF = 1.

Full scales are used for objects like mobile phone, calculators, etc.

Types of Scale



- 1. Plain Scale or Simple Scale
- 2. Diagonal Scale

Conversions



1 Km = 10 Hectometer

1 Hectometer = 10 Decameter

1 Decameter = 10 Meter

1 Meter = 10 Decimeter

1 Decimeter = 10 Centimeter

1 Centimeter = 10 Millimeters

Types of Scale



1. Plain Scale:

It is a line divided into suitable number of equal parts or units, the first part of which is subdivided into small parts.

It represents either 2 main units or 1 unit and its sub division (fractions).

It can measure lengths up to 1 decimal place. (eg: 3.5 m, 2.7 cm)

Types of Scale



2. <u>Diagonal Scale</u>:

In diagonal scale the smallest unit on plain scale is further subdivided by using diagonal principle.

It represents either 3 units or only one unit and its fractions up to second place of decimal point.

It can measure lengths upto 2 decimal place. (eg: 3.56 m, 2.78 cm)



Construct a Plain Scale to show meters & decimeters when 1 m is represented by 2.5 cm. The scale should be long enough to measure up to 6 m. Mark off 3.3 m & 5.6 m on the scale.


1. Calculate Representative Factor,

2. Calculate length of scale (L.O.S),

LOS = RF x Maximum length of scale = $1/40 \times 6 \text{ m} = 1/40 \times 600 \text{ cm}$ = 15 cm




Construct a Plain Scale to show meters & decimeters when 1 m is represented by 2.5 cm. The scale should be long enough to measure up to 6 m. Mark off 3.3 m & 5.6 m on the scale.

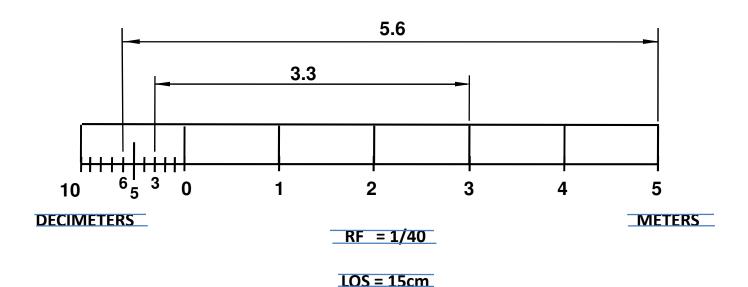



Q 2. Construct a Plain Scale to show kilometers & hectometers when 2.5 cm is equal to 1 km. The scale should be long enough to measure up to 6 km. Mark off 2.7 km, 3.9 km & 4.5 km on the scale.

1.
$$RF = 2.5 \text{ cm}/1 \text{ km} = 2.5/100000 = 1/40000$$

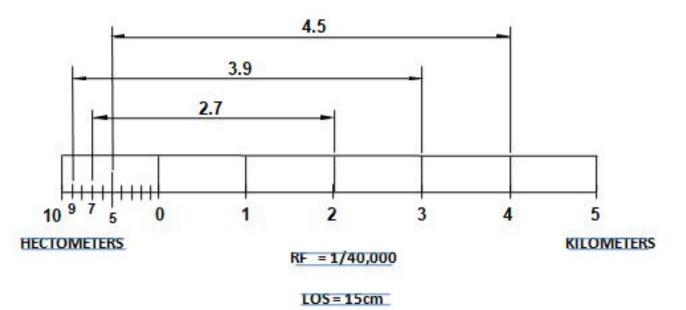



Construct a diagonal scale to show meters, decimeters & centimeters when 1 m is represented by 5 cm. Consider maximum length of scale as 4 m. Mark off 2.58 m & 3.09 m.


1. Calculate Representative Factor,

2. Calculate length of scale (L.O.S),

LOS = RF x Maximum length of scale = $1/20 \times 4 \text{ m}$ = $1/20 \times 4 \times 100 \text{ cm}$ = 20 cm



Construct a diagonal scale to show meters, decimeters & centimeters when 1 m is represented by 5 cm. Consider maximum length of scale as 4 m. Mark off 2.58 m & 3.09 m.

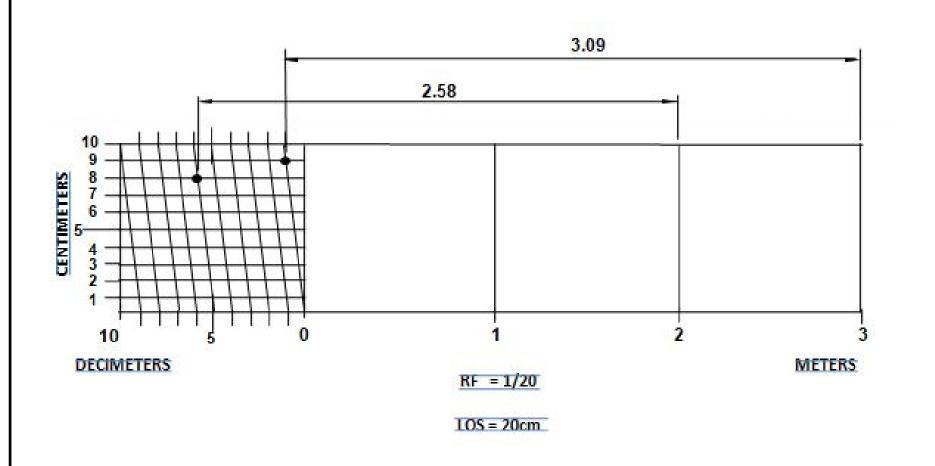



Q 6. The distance between two stations is 100 Km and it is represented on a map by a line of 2.5 cm. Draw a diagonal scale showing single Km. Mark off 409 Km & 573 Km on the scale.


- 1. RF = 2.5 cm/100 km = 2.5/(100x 100000) = 1/4000000
- 2. L.O.S = (1/4000000) X 600 km = (1/4000000) X 600 X 100000 cm = 15 cm


Note:

Maximum length of scale is not given.

But the maximum distance to show is 573 Km.

So take maximum length of scale as 600 Km.

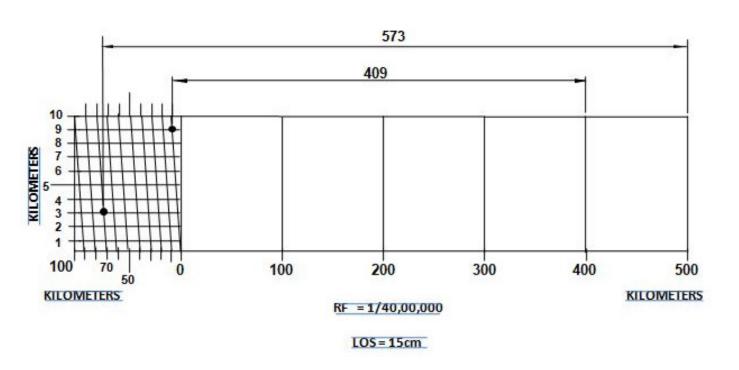

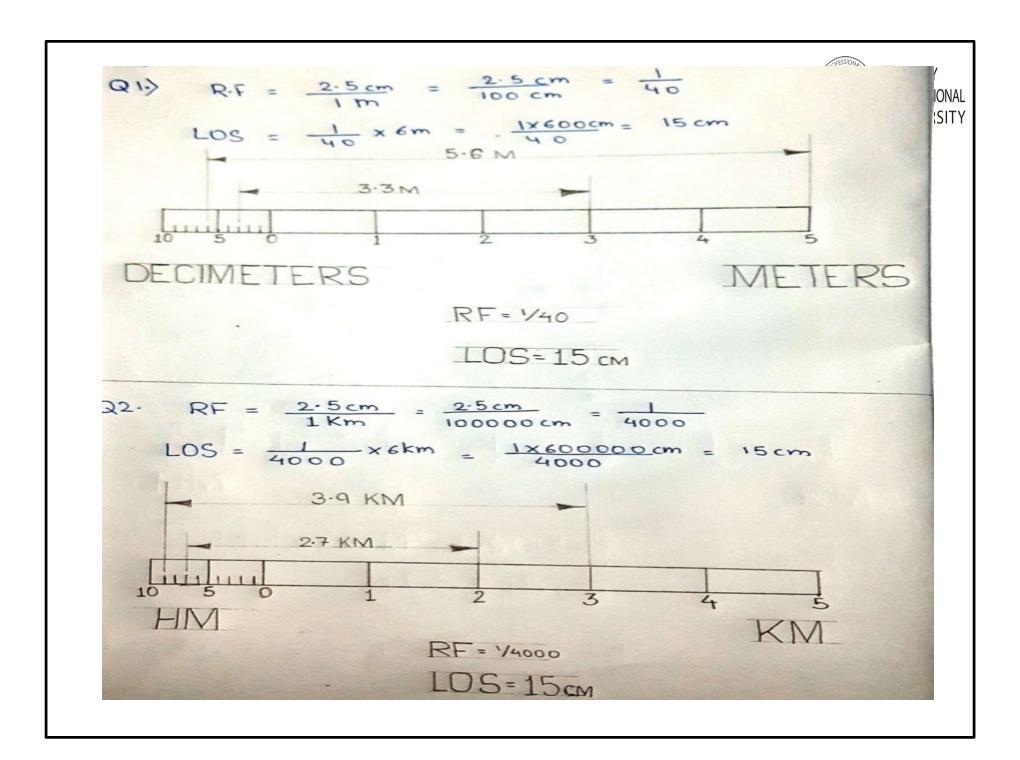



Thanks