

Verification Continuum™

Synopsys Synplify Pro for Lattice

Command Reference Manual

November 2020

SYNOPSYS®

Contents

Chapter 1: Introduction

About Tcl Commands	12
Tcl Conventions	12
Tcl Scripts and Batch Mode	13
About the GUI Commands	13
Graphic User Interface Commands	13
Tcl Commands	15
About Online Help	16
The Online Help User Interface	16
Document Set	24

Chapter 2: Tcl Synthesis Commands

Alphabetical List of Commands	26
add_file	28
add_folder	32
analyst	33
check_fdc_query	36
command_history	39
constraint_file	40
create_fdc_template	41
cdpl_queue	42
define_link	43
design	44
dump_metrics	53
encryptIP	56
encryptP1735	58
IEEE 1735 Encryption Use Models	61
export_project	68
get_env	70
get_option	70
hdl_define	71

hdl_param	72
help	73
impl	74
job	75
log_filter	76
log_report	78
message_override	78
open_design	80
open_file	81
partdata	81
program_terminate	82
program_version	83
project_ect	84
project_data	92
project_file	93
project_folder	94
query_available_metrics	96
query_metric	99
query_metric_details	101
recording	102
report_clocks	103
report_messages	104
report_message_summary	106
run_config	107
run_tcl	108
run_config	109
run_tcl	110
sdc2fdc	111
set_option	112
status_report	135
sub_impl	139
syn_connect	140
syn_create_err_net	141
synplify_pro	142
vcs_launch	145
Tcl Command Categories	147

Chapter 3: Tcl Find, Expand, and Collection Commands

find	151
Tcl Find Syntax (Standard)	152
Tcl Find Syntax	158
Tcl Find Syntax Examples	161

find -filter	165
expand	173
Collection Commands	177
c_diff	178
c_info	179
c_intersect	179
c_list	180
c_print	181
c_symdiff	182
c_union	183
define_collection	184
define_scope_collection	184
get_prop	184
set	185
Query Commands	187
all_clocks	190
all_fanin	190
all_fanout	192
all_inputs	194
all_outputs	195
all_registers	195
get_cells	197
get_clocks	199
get_flat_cells	201
get_flat_nets	203
get_flat_pins	205
get_nets	207
get_pins	208
get_ports	211
object_list	212
report_timing	213
Synopsys Standard Collection Commands	217
add_to_collection	217
append_to_collection	219
copy_collection	220
foreach_in_collection	221
get_object_name	223
index_collection	223
remove_from_collection	225
sizeof_collection	226

Chapter 4: Constraint Commands

SCOPE Constraints Editor	230
SCOPE Tabs	231
Clocks	232
Generated Clocks	237
Collections	239
Inputs/Outputs	242
Registers	245
Delay Paths	246
Attributes	249
I/O Standards	250
Compile Points	252
TCL View	255
Industry I/O Standards	257
Industry I/O Standards	258
Delay Path Timing Exceptions	261
Multicycle Paths	261
False Paths	264
Specifying From, To, and Through Points	266
Timing Exceptions Object Types	266
From/To Points	266
Through Points	268
Product of Sums Interface	269
Clocks as From/To Points	271
Conflict Resolution for Timing Exceptions	274
Timing Constraints	278
create_clock	279
create_generated_clock	281
reset_path	284
set_case_analysis	286
set_clock_groups	288
set_clock_latency	293
set_clock_route_delay	295
set_clock_uncertainty	296
set_false_path	298
set_input_delay	301
set_max_delay	303
set_multicycle_path	306
set_output_delay	310

set_reg_input_delay	313
set_reg_output_delay	314
Naming Rule Syntax Commands	315
Design Constraints	317
define_compile_point	318
define_current_design	319
define_io_standard	320
Chapter 5: User Interface Commands	
File Menu	322
New Command	323
Create Image Command	325
Build Project Command	326
Open Project Command	327
Edit Menu	327
Find Command (Text)	329
Find Command (In Project)	331
Find Command (HDL Analyst)	332
Find in Files Command	336
Replace Command	338
Goto Command	339
View Menu	340
Toolbar Command	343
View Sheets Command	344
View Log File Command	345
Project Menu	348
Add Source File Command	350
Remove Implementation	351
Change File Command	352
Set VHDL Library Command	352
Add Implementation Command	353
Convert Vendor Constraints Command	353
Archive Project Command	353
Un-Archive Project Command	356
Copy Project Command	358
Hierarchical Project Options Command	361
Insert Subproject Command	362
Implementation Options Command	364
Device Panel	365
Options Panel	366

Constraints Panel	368
Implementation Results Panel	370
Timing Report Panel	371
High Reliability Panel	373
VHDL Panel	374
Verilog Panel	378
Push Tristates Option	381
Compiler Directives and Design Parameters	383
GCC Panel	393
Place and Route Panel	393
Run Menu	395
Run Tcl Script Command	398
Run Implementations Setup Command	399
Job Status Command	400
Launch SYNCORE Command	401
SYNCORE FIFO Wizard	403
SYNCORE RAM Wizard	412
SYNCORE Byte-Enable RAM Wizard	416
SYNCORE ROM Wizard	419
SYNCORE Adder/Subtractor Wizard	423
SYNCORE Counter Wizard	427
Configure and Launch VCS Simulator Command	429
Analysis Menu	440
Timing Report Generation Parameters	441
HDL Analyst Menu	452
HDL Analyst Menu: RTL and Technology View Submenus	452
HDL Analyst Menu: Hierarchical and Current Level Submenus	453
HDL Analyst Menu: Filtering and Flattening Commands	455
HDL Analyst Menu: Timing Commands	459
HDL Analyst Menu: Analysis Commands	459
HDL Analyst Menu: Selection Commands	463
HDL Analyst Menu: FSM Commands	463
Options Menu	464
Project View Options Command	465
Editor Options Command	470
Place and Route Environment Options Command	474
Configure 3rd Party Tools Options Command	474
Project Status Page Location	476
HDL Analyst Options Command	477
Standard HDL Analyst Options Command	479

Configure External Programs Command	487
Web Menu	488
Help Menu	489
Preferred License Selection Command	490
Tip of the Day Command	491

Chapter 6: GUI Popup Menu Commands

Popup Menus	494
Watch Window Popup Menu	494
Tcl Window Popup Menu	495
Text Editor Popup Menu	495
Log File Popup Menu	496
FSM Viewer Popup Menu	498
Project View Popup Menus	501
Project Management View Popup Folder Commands	507
Vendor Tool Invocation Popup Menu Command	508
File Options Popup Menu Command	510
Copy File Popup Menu Command	512
Change Implementation Popup Menu Commands	512
Show Compile Points Popup Menu Command	512
Project Options Popup Menu Command	513
Add P&R Implementation Popup Menu Command	514
Options for Place & Route Jobs Popup Menu Command	515
Create Subproject Popup Menu Commands	515
Design Block/Instance Properties Popup Menu Command	519
Insert Subproject Command	521
Subproject Parameter Sync	522
Insert & Link Subproject to Module Command	523
Allocate Timing and Resource Budgets	524
RTL and Technology Views Popup Menus	526
Informational Dialog Boxes	531

CHAPTER 1

Introduction

This document is part of a set that includes reference and procedural information for the Synopsys® synthesis tool.

This chapter includes the following introductory information:

- [About Tcl Commands](#), on page 12
- [About the GUI Commands](#), on page 13
- [About Online Help](#), on page 16
- [Document Set](#), on page 24

About Tcl Commands

Tcl (Tool Command Language) is a popular scripting language for controlling software applications. Synopsys has extended the Tcl command set with additional commands that you can use to run the Synopsys FPGA programs. These commands are not intended for use in controlling interactive debugging, but you can use them to run synthesis multiple times with alternate options to try different technologies, timing goals, or constraints on a design.

Tcl scripts are text files that have a .tcl file extension and contain a set of Tcl commands designed to complete a task or set of tasks. You can also run Tcl scripts through the Tcl window (see [Tcl Script Window, on page 44](#)).

The Synopsys FPGA Tcl commands are described here. For information on the standard Tcl commands, syntax, language, and conventions, refer to the Tcl online help (Help->TCL Help).

Tcl Conventions

Here is a list of conventions to respect when entering Tcl commands and/or creating Tcl scripts.

- Tcl is case sensitive.
- Comments begin with a hash mark or pound sign (#).
- Enclose all path names and filenames in double quotes (").
- Use a forward slash (/) as the separator between directory and path names (even on the Microsoft® Windows® operating system). For example:

```
designs/big_design/test.v
```

Tcl Scripts and Batch Mode

For procedures for creating Tcl scripts and using batch mode, see [Working with Tcl Scripts and Commands, on page 572](#):

- [Running Batch Mode on a Project File, on page 566](#)
- [Running Batch Mode with a Tcl Script, on page 568](#)
- [Generating a Job Script, on page 573](#)
- [Creating a Tcl Synthesis Script, on page 574](#)
- [Using Tcl Variables to Try Different Clock Frequencies, on page 576](#)
- [Running Bottom-up Synthesis with a Script, on page 578](#)

About the GUI Commands

The FPGA synthesis tools include a graphical user interface (GUI) as well as a command line capability. Most commands have GUI and command line versions, so you can use either method to specify commands.

The commands that are available vary with the capabilities of synthesis tools. The following sections give you an overview of the commands in various tools:

- [Graphic User Interface Commands, on page 13](#)
- [Tcl Commands, on page 15](#)

Graphic User Interface Commands

The GUI commands are accessed from the software graphical interface. Most commands open dialog boxes where you can specify parameters for the command.


The GUI provides a few ways to access commands:

- [Menus, on page 14](#)
- [Context-sensitive Popup Menus, on page 15](#)
- [Toolbars, on page 15](#)

- [Keyboard Shortcuts](#), on page 15
- [Buttons and Options](#), on page 15
- [Tcl Commands](#), on page 15

Menus

The set of commands on the pull-down menus in the menu bar varies depending on the view, design status, task to perform, and selected object(s). For example, the File menu commands in the Project view differ slightly from those in the RTL view. Menu commands that are not available for the current context are grayed out. The menu bar in the Project view is shown below:

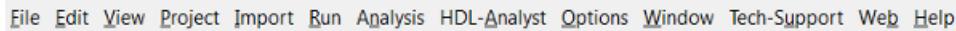

The individual menus, their commands, and the associated dialog boxes are described in the following sections:

- [File Menu](#), on page 322
- [Edit Menu](#), on page 327
- [View Menu](#), on page 340
- [Project Menu](#), on page 348
- [Run Menu](#), on page 395
- [Run Menu](#), on page 395
- [Analysis Menu](#), on page 440
- [HDL Analyst Menu](#), on page 452
- [Options Menu](#), on page 464
- [Web Menu](#), on page 488
- [Web Menu](#), on page 488
- [Help Menu](#), on page 489

Context-sensitive Popup Menus

Popup menus, available by right-clicking, offer access to commonly used commands that are specific to the current context. See [Popup Menus, on page 494](#), [Project View Popup Menus, on page 501](#), and [RTL and Technology Views Popup Menus, on page 526](#) for information on individual popup menus.

Toolbars

Toolbars contain icons associated with commonly used commands. For more information about toolbars, see [Toolbars, on page 69](#).

Keyboard Shortcuts

Keyboard shortcuts are available for commonly used commands. The shortcut appears next to the command in the menu. See [Keyboard Shortcuts, on page 76](#) for details.

Buttons and Options

The Project view has buttons for quick access to commonly used commands and options. See [Buttons and Options, on page 84](#) for details.

Tcl Commands

You can enter the Tcl (Tool Command Language) commands directly in the Tcl window, or include them in Tcl scripts that you can run in batch mode. For more information about Tcl commands, see [Tcl Synthesis Commands, on page 25](#).

About Online Help


The online help system, delivered in HTML format, has been redesigned to improve navigation and search capabilities. The online help system uses the QT Assistant HTML viewer included with your product.

The online help interface includes the following enhancements:

- Simultaneous viewing of help content and navigation including a Sidebar with tabs for the Table of Contents, Index, Search, and Bookmarks - see [Online Help Sidebar, on page 20](#).
- Command Menus and a quick access Toolbar - see [Online Help Toolbar, on page 17](#) and [Online Help Menus, on page 18](#).
- A Contents window where you can add or remove tabs for each topic that you view - see [Online Help Contents Window, on page 21](#).
- Bookmarks for quick retrieval of relevant topics.
- Full-text search where you can search using wildcards and quotes for complete phrases.

The Online Help User Interface

Select Help->Help Topics to display the Online Help window. The help window is composed of a Toolbar, a Sidebar with Contents, Index, Bookmarks and Search tabs, and Open Pages panel and a Contents window.

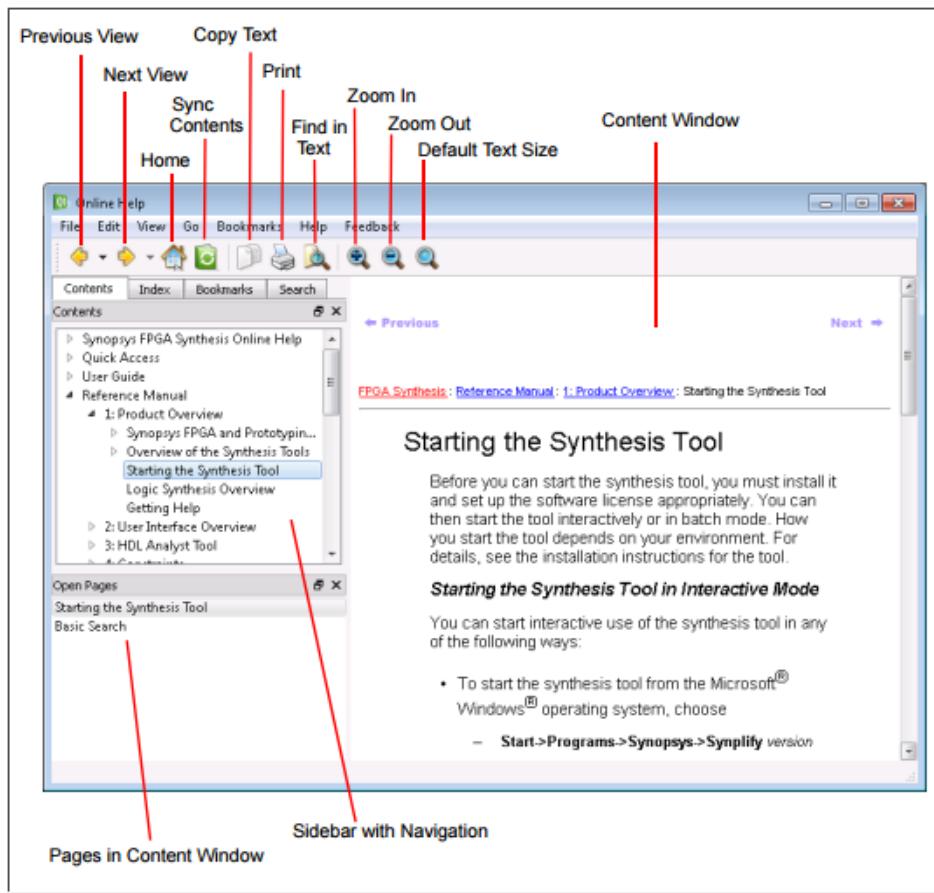

Online Help Toolbar

The help toolbar assists you in navigation. The following table describes each tool in detail.

Button Name	Description
 Previous and Next View	<p>Previous takes you to the previous page in your navigation history.</p> <p>Next takes you to the next page in your navigation history.</p> <p>Note this is different than the previous and next links on the Contents page. See Online Help Contents Window, on page 21.</p>
 Home	Home takes you to the home page.
 Copy	Copy copies any selected text to the clipboard.
 Find in Text	Find in Text invokes the Find Text dialog box.
 Print	Print invokes the Print dialog box.
 Zoom In, Zoom Out, and Normal Size	<p>Zoom in increases the font size.</p> <p>Zoom out decreases the font size.</p> <p>Normal Size sets the font size to the default value.</p>
 Sync	Sync synchronizes the TOC panel with the content in the currently selected content window.

Online Help Menus

The online help menus contain many of the same commands as the toolbar. A detailed description of each command is in the following table.

Command	Description
The File Menu	
New Tab	Adds content tab in the Contents window.
Page Setup...	Page size and orientation format settings for printing.
Print Preview	Opens a preview panel to show how content will be formatted when printed.
Print	Invokes the Print dialog box.
Close Tab	Closes the active content tab in the Contents window.
Quit	Terminates the online help and QT Assistant viewer.

Command	Description
The Edit Menu	
Copy Selected Text	Copies any selected text to the clipboard.
Find in Text...	Invokes the Find Text dialog box.
Find Next	Finds the next occurrence of the search instance.
Find Previous	Finds the previous next occurrence of the search instance.
The View Menu	
Zoom in	Increases the font size.
Zoom out	Decreases the font size.
Normal Size	Resets the text to the default size.
Contents	Selects the Contents tab in the sidebar.
Index	Selects the Index tab in the sidebar.
Bookmarks	Selects the Bookmarks tab in the sidebar.
Search	Selects the Contents tab in the content window.
The Go Menu	
Home	Displays to the home page.
Back and Forward	Displays the previous or next topic in your navigation history.
Sync with Table of Contents	Synchronizes the TOC panel with the content in the currently selected content window.
Next Page	Selects the next tab in the content window. If there is only one content tab open, toggles between the open tab and the search tab.
Previous Page	Selects the previous tab in the content window. If there is only one content tab open, toggles between the open tab and the search tab.
Bookmarks	
Manage Bookmarks	Brings up a window with options to search, arrange, and delete saved bookmarks.

Command	Description
Add Bookmark	Creates a bookmark for the current topic. Your bookmarks appear under the Bookmark menu or under the Bookmarks tab in the Sidebar.
Help	
About Help	Displays information on the help system.

Online Help Popup Menus

Popup menus appear when you right-click the mouse in different areas of the help window. The popup menu commands are the same as the menus and toolbar.

Online Help Sidebar

In the default view, the online help sidebar has four tabs (Contents, Index, Bookmarks and search) with the Contents tab active.

The Contents tab displays the contents of the Help system organized by topic. User Guides contain process and conceptual information whereas Reference Manuals contain reference data based on descriptions of files and interface. Command References contain command-specific information.

The Index tab contains an index of terms for all content in the help system.

The Bookmark tab contains user-generated bookmarks. This tab is empty until bookmarks are added.


The Search tab provides full-text search access to the documentation. Use basic search find terms and phrases, and use advanced search options to target your search by searching exact phrases or excluding terms from a search.

The sidebar is a docked window, so you can drag it to the top, left, right or bottom of the help window, or drag it outside the help window to float it.

Tab Name	Description
Contents	<p>The table of contents for the online help. Selecting an entry takes you to the topic. The contents are organized by manual: User Guide, Reference Manuals, etc. To expand an entry, click on the triangle icon to the left of the entry.</p> <p>Note that while you navigate the help system, the Table of Contents does not automatically update to reflect your current topic.</p>
Index	The index for the online help. Index results appear when you begin typing. Click once on a term to open a relevant topic. If more than one entry exists for a term, a window appears listing the index entries.
Bookmarks	Mark specific topics by adding a bookmark to quickly locate the topic for the future. See Online Help Bookmarks, on page 22 .
Search	The search interface for the online help. Search uses a full-text search index and has basic and advanced search options.

Online Help Contents Window

The Contents window displays the help topic information. To display more than one help topic, you can select File -> New Tab or right-click on any link (hypertext link, Content panel item, or index entry) and select Open Link in New Tab. The content is displayed in the right content window and the topic title is displayed in the Open Pages panel in the lower left. To switch topics, select the topic title in the Open Pages panel. To close a topic, select the topic title and then select File-> Close Tab from the menu bar or hover over the topic title and then click the close icon (x) that appears to the right of the topic title.

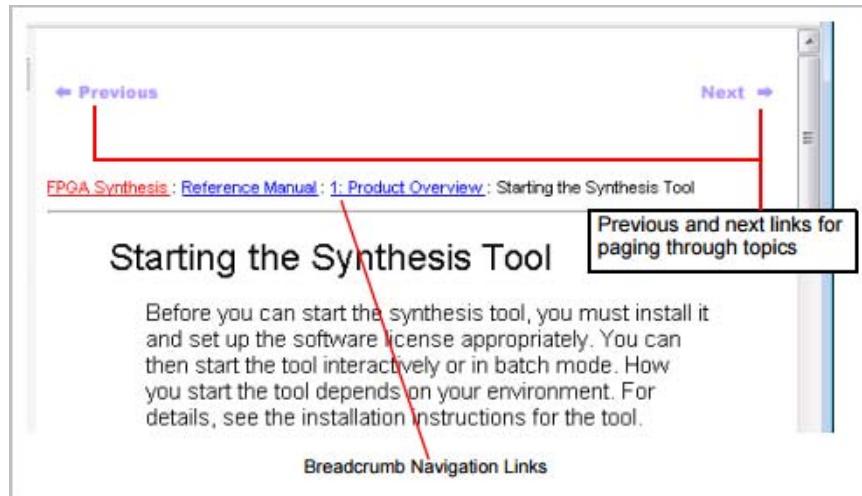

The breadcrumb navigation links at the top of the Contents window indicate your topic location in the section. The Contents tab can also be synchronized to indicate the topic location.

Previous and next arrows at the top and bottom of the content in the Contents window to allow you to go forward or backward a page at a time through the topic.

Online Help Bookmarks

To add a bookmark, select New Bookmark to bookmark the topic that appears in the Contents window. The bookmarks for the topic appear under the Bookmarks tab in the Sidebar or under the Bookmarks menu.

To delete a bookmark, select a bookmark in the list, then select Delete Bookmark to delete the highlighted bookmark.

Online Help Search

Enter the text you want to look for and press Enter or click Search. The search is not case sensitive.

The following are examples of common search patterns:

- Tcl — lists all the documents that contain the word 'Tcl'
- Tcl* — lists all the documents that contain a word beginning with 'Tcl'
- Tcl copy — lists all documents that contain both 'Tcl' and 'copy'
- "Tcl copy" — list all documents that contain the phrase 'Tcl copy'
- The wildcard (*) character cannot be used within quotes.

The list of documents found is ordered according to the number of occurrences of the search text they contain, therefore those with the highest number of occurrences appear first. Click any document in the list to display it in the document window.

Search Within a Page

To search the text displayed in the current content window, use the Find in Text command. When you select Find in Text from the Edit menu, a search bar is displayed beneath the contents window. Type the search term in the and the first occurrence of the term is highlighted.

Document Set

This document is part of a series of books included with the Synopsys FPGA synthesis software tools. The set consists of the following books that are packaged with the tool:

- *Synplify Pro for Lattice User Guide*
- *Synplify Pro for Lattice Reference Manual*
- *Synplify Pro for Lattice Command Reference Manual*
- *Synplify Pro for Lattice Attributes and Directives Manual*
- *Synplify Pro for Lattice Language Support Reference Manual*

CHAPTER 2

Tcl Synthesis Commands

This chapter describes supported Tcl commands. The synthesis commands are listed in alphabetical order.

Alphabetical List of Commands

The commands are listed in alphabetical order. The find, expand, and collection commands appear in the table, but are described in [Tcl Find, Expand, and Collection Commands, on page 149](#).

add_file	add_folder	add_to_collection
all_clocks	all_fanin	all_fanout
all_inputs	all_outputs	all_registers
analyst	append_to_collection	c_diff
c_info	c_intersect	c_list
c_print	c_symdiff	c_union
check_fdc_query	command_history	constraint_file
copy_collection	create_fdc_template	cdpl_queue
define_collection	define_link	design
define_scope_collection	dump_metrics	encryptIP
encryptP1735	expand	export_project
find (Tcl find)	foreach_in_collection	get_env
get_clocks	get_env	get_nets
get_object_name	get_option	get_pins
get_ports	get_prop	hdl_define
hdl_param	help	impl
job	log_filter	log_report
message_override	object_list	open_design
open_file	partdata	program_terminate
program_version	project	project_data
project_file	project_folder	query_available_metrics
query_metric	query_metric_details	recording

report_clocks	report_messages	report_message_summary
run_config	run_tcl	remove_from_collection
report_timing	run_config	run_tcl
sdc2fdc	set	set_option
sizeof_collection	status_report	sub_impl
syn_connect	syn_create_err_net	synplify_pro

See also:

- For specific categories of synthesis commands (for example, log file or high reliability commands), see [Tcl Command Categories, on page 147](#).
- For a description of the find, expand, and collection commands, see [Tcl Find, Expand, and Collection Commands, on page 149](#).
- For the TCL timing and design constraints syntax and their descriptions in SCOPE, see [Constraint Commands, on page 229](#).

add_file

The `add_file` command adds one or more files to a project.

Syntax

```
add_file [-filetype] fileName [ fileName [ ... ] ]
add_file -verilog [-lib libName [ fileName [ ... ] ] [-folder folderName]
add_file -vhdl [-lib libName[ libName] ] fileName [ fileName [ ... ] ] [-folder folderName]
add_file -include fileName [ fileName [ ... ] ]
add_file [-filetype] -job_owner par | simulation [ fileName [ ... ] ]
add_file -structver [fileName [ ... ] ]
add_file -tooltag tooltagName -toolargs [toolArguments] fileName
add_file -vlog_std standard fileName [ fileName [ ... ] ]
```

<code>-filetype</code>	Specifies the type of file being added to the project (files are placed in folders according to their file types; including this argument overrides automatic filename-extension placement). See Filename Extensions, on page 30 for a list of the recognized file types.
<code>fileName</code>	Specifies the name of the file being added to the project. Files are added to the individual project folders according to their filename extensions (View Project Files in Folders must be set in the Project View Options dialog box). You can add multiple files by separating individual filenames with a space, and you can specify different file types (extensions) within the same command.
<code>-verilog</code> or <code>-vhdl</code>	Adds HDL files with non-standard extensions to the Verilog or VHDL directory, so that they can be compiled with the project. For example, the following command adds the file <code>alu.v.new</code> to the project's <code>verilog</code> directory: <pre>% add_file -verilog /designs/megachip/alu.v.new</pre> If you do not specify <code>-verilog</code> , the file is added to the Other directory (<code>new</code> is not a recognized Verilog extension), and the file would not be compiled with the files in the Verilog directory.

[-lib <i>libName</i>]	<p>Specifies the library associated with VHDL files. The default library is work. The -lib option sets the VHDL library to <i>libName</i>.</p> <p>Note: You can also specify multiple libraries for VHDL files. For example:</p> <pre>add_file -vhdl -lib {mylib,work} "ff.vhd"</pre> <p>Both the logical and physical libraries must be specified in the Project file (if you only specify the logical library associated with the VHDL files, the compiler treats the module as a black box).</p>
[-folder <i>folderName</i>]	<p>Creates logical folders with custom files in various hierarchy groupings within your Project view. For example:</p> <pre>add_file -verilog -folder memory "ram_1.v" add_file -verilog -folder memory "C:/examples/verilog/common_rtl/memory/ram_1.v"</pre>
-include	<p>Indicates that the specified file is to be added to the project as an include file (include files are added to the Include directory regardless of their extension). Include files are not passed to the compiler, but are assumed to be referenced from within the HDL source code. Adding an include file to a project, although not required, allows it to be accessed in the user interface where it can be viewed, edited, or cross-probed.</p>
-job_owner	<p>Allows you to determine how files are used; you can specify these options from the File Options dialog box. For example, you can automatically decide to pass files to the backend place-and-route tool (Use for Place and Route) or use them for test benches containing HDL constructs for simulation (Use for Simulation only).</p>

-tooltag <i>tooltagName</i>	Creates a tool tag name for the application tool you want to invoke from within the Synopsys FPGA synthesis tools. For example:
-toolargs <i>tool</i>	Specifies any argument options to use with the application tool you want to invoke from within the Synopsys FPGA synthesis tool. For example:
-vlog_std <i>standard</i>	<p>Overrides the global Verilog standard for an individual file. The accepted values for <i>standard</i> are v95 (Verilog 95), v2001 (Verilog 2001), and sysv (SystemVerilog). The file (<i>fileName</i>) is added to the Verilog folder in the project; the specified standard is listed after the filename in the project view and is enclosed in angle brackets (for example, commchip.v <sysv>). Note that when you add a SystemVerilog file (a file with an sv extension) to a project, the add_file entry in the project file includes the -vlog_std <i>standard</i> string.</p> <p>The default standard for new projects is SystemVerilog. For Verilog 2005 extensions, use sysv (SystemVerilog).</p>

Filename Extensions

Files with the following extensions are automatically added to their corresponding project directories; files with any other extension are added to the Other directory. The **-filetype** argument overrides automatic filename extension placement.

Extension	-Filetype	Project Folder
.adc	-analysis_constraint	Analysis Design Constraint
.edf, .edn	-edif	EDIF
.fdc	-fpga_constraint/-constraint	Logic Constraints (FDC)
.sdc	-constraint	Logic Constraints (SDC)
.sv ¹	-verilog	Verilog
.tcl	-tcl	Tcl Script
.v	-verilog	Verilog

Extension	-Filetype	Project Folder
.vhd, .vhdl	-vhdl	VHDL
.vm	-structver	Structural Verilog File
any	-include	Include


1. Use the sv format for SystemVerilog keyword support. Both Verilog and SystemVerilog formats are added to the Verilog folder.

Example: Add Files

Add a series of VHDL files to the VHDL directory and add an include file to the project:

```
% add_file /designs/sequencer/top.vhd
% add_file /designs/sequencer/alu.vhdl
% add_file -vhdl /designs/sequencer/reg.vhd.fast
% add_file -include /designs/std/decode.vhd
```

The corresponding directory structure in the Project view is shown in the following figure:

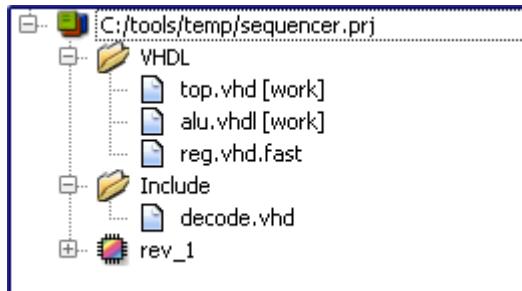

Example: File Options Designation

Designate some IP core wrappers as well as their associated instantiated component files that must be passed on to the place-and-route tool, since they are not written to the final netlist:

```
add_file -verilog -job_owner par "my_ip_core.v"
add_file -verilog -job_owner par "my_ip_core_enc.v"
```

add_folder

The `add_folder` command adds a custom folder to a project.

Syntax

`add_folder folderName`

Creates logical folders with files in various custom hierarchy groupings within your Project view. These custom folders can be specified with any name or hierarchy level.

```
add_folder verilog  
add_folder verilog/common_rtl  
add_folder verilog/common_rtl/prep
```

For more information about custom folders, see [Managing Project File Hierarchy, on page 80](#) in the *User Guide*.

analyst

Changes and manipulates the schematic views of the netlist. Note that the following HDL Analyst commands can be used without the analyst prefix as well.

analyst clone_view	analyst critical_path	analyst dissolve
analyst filter	analyst flatten	analyst get_selected
analyst group	analyst pop	analyst push
analyst select	analyst unfilter	analyst view

analyst clone_view

Opens a copy of the current view.

analyst clone_view *designID*

designID

The design ID to clone. If not specified, clones the current view.

analyst critical_path

Filters the view to show the instances that are part of the critical path, if available.

analyst critical_path

analyst dissolve

Removes targeted hierarchies from the design. Contents of the hierarchy are put into the level that originally contained the hierarchy.

analyst dissolve *collection*

collection

Collection of instances to dissolve.

analyst filter

Filters the view by selected instances and ports.

analyst filter

analyst flatten

Flattens the current view.

analyst flatten

analyst get_selected

Returns the names of currently selected objects.

analyst get_selected [-inst] [-net] [-port] [-pin]

-inst

Returns the names of selected instances. If no *-type* option is set, the names of all selected objects are returned.

-net

Returns the names of selected nets. If no *-type* option is set, the names of all selected objects are returned.

-port

Returns the names of selected ports. If no *-type* option is set, the names of all selected objects are returned.

-pin

Returns the names of selected pins. If no *-type* option is set, the names of all selected objects are returned.

analyst group

Creates a graphical group of instances.

analyst group [collection] [-name groupName]

collection

Instances to group. All instances must be on the same level of the hierarchy.

-name groupName

The name of the graphical group to be created.

analyst pop

Pops up the hierarchy.

analyst pop

analyst push

Pushes down the hierarchy.

analyst push *hierarchyName*

hierarchyName

The name of the group or instance to push the hierarchy down into.

analyst select

Selects specified objects.

analyst select [*collection*] [-append] [-clear] [-instances]

collection

The ID of the collection to select.

-append

Appends objects to the selection list.

-clear

Clears the selection list.

-instances

Selects all instances in the current view.

analyst unfilter

Unfilters the view.

analyst unfilter

analyst view

Opens a schematic view.

analyst view *designID*

designID

The design ID to view.

check_fdc_query

Runs the constraint checker for constraints using the get_* and/or all_* query commands specified in the timing constraint file for the project.

Syntax

```
check_fdc_query [-full_check]
```

Arguments and Options

-full_check

Runs the full constraint checker before checking the query commands. The default is to run the check_fdc_query command without this option.

When the -full_check option is *not* specified, the command only runs the constraint syntax checker, which reduces runtime significantly, since most objects being searched are found in pre-mapping and do not require full mapping to be run. However, this option does not find bit-blasted registers and objects using the advanced -filter @property =~ commands, where the property is created or applied during mapping because it requires optimizations such as register replication.

For example, if a 4-bit RAM output is targeted with the get_cell command, the differences in the results are shown below:

Command	Run Stage	Results
Default (without -full_check)	Pre-mapping	ram_out [3:0]
With -full_check	Mapping	ram_out [3] ram_out [2] ram_out [1] ram_out [0]

Description

The `check_fdc_query` command reads the fdc constraint file of the current project file. It runs the constraint checker for the following object query commands that are used with FDC constraints:

all_* Commands	get_* Commands
<code>all_clocks</code>	<code>get_cells</code>
<code>all_fanin</code>	<code>get_clocks</code>
<code>all_fanout</code>	<code>get_nets</code>
<code>all_inputs</code>	<code>get_pins</code>
<code>all_outputs</code>	<code>get_ports</code>
<code>all_registers</code>	

The report provides feedback on how these query commands are applied and ensures that the commands are used properly with constraints in the constraint file.

Collections created with `define_scope_collection`, `find`, and `expand` are not covered by this Tcl command. You can check these SCOPE collections in the HDL Analyst and the SCOPE interface. The report does not cover the `define_io-standard` constraint either.

Example

Invoke `check_fdc_query` from the Tcl command line for the project. You can also invoke it from a shell window.

The command writes out the results of the object query commands to the `projectName_cck_fdc.rpt` file that opens in the GUI. You may need to run the constraint checker (Run->Constraint Check) to find additional issues with constraints.

The following example shows the results of running the constraint checker in the *projectName_cck_fdc.rpt* file.

```
FDC query commands results
*****
#####
# 1019 : set_multicycle_path 2 -from [get_cells -hier {*[4]}]
# line 175 in :
C:/check_fdc_query/all_clocks/test1_basic/top_translated.fdc
Results of query command: get_cells -hier {*[4]}
(none)
#####
# 1027 : set_multicycle_path 3 -to [all_clocks]
# line 196 in :
C:/check_fdc_query/all_clocks/test1_basic/top_translated.fdc
Results of query command: all_clocks
    clka
    clkb
    dcm|CLK0_BUF_clock_CLKIN1
    dcm|clk0_i_clock_CLKIN1
    dcm|CLK0_BUF_1_clock_CLKIN1
```

The syntax checker reports the object query commands and any issues it found and writes them to the *projectName_scck.rpt* file.

```
# Synopsys Constraint Checker (syntax only), version map610dev,
Build 1085R
# Copyright (C) 1994-2016, Synopsys, Inc.
# Written on Tue Apr 30 15:39:07 2013
##### DESIGN INFO
#####
Top View:           "top"
Constraint File(s):
"C:\check_fdc_query\all_clocks\test1_basic\top_translated.fdc"

"C:\builds\syn201309_063R\lib\fdc_query.fdc"

# Run constraint checker to find more issues with constraints.
#####
#####

No issues found in constraint syntax.

Clock Summary
*****
Start
Requested      Requested      Clock          Clock
```

Clock	Frequency	Period	Type	Group
clka	100.0 MHz	10.000	declared	default_clkgroup
clkb	50.0 MHz	20.000	declared	default_clkgroup
dcm CLK0_BUFBUF _clock_CLKIN1				
	200.0 MHz	5.000	derived (from clka)	default_clkgroup
dcm CLK0_BUFBUF_1 _clock_CLKIN1				
	50.0 MHz	20.000	derived (from clka)	default_clkgroup

See Also

- [Constraint Checking, on page 140](#)
- [Constraint Checking Report, on page 174](#)

command_history

Displays a list of the Tcl commands executed during the current session.

Syntax

command_history [-save *filename*]

Arguments and Options

-save

Writes the list of Tcl commands to the specified *filename*.

Description

The command_history command displays a list of the Tcl commands executed during the current session. Including the -save option, saves the commands to the specified file to create Tcl scripts.

Examples

```
command_history -save C:/DesignsII/tut/proto/myTclScript.tcl
```

See [recording, on page 102](#).

constraint_file

The **constraint_file** command manipulates the constraint files used by the active implementation.

Syntax

```
constraint_file
  -enable constraintFileName
  -disable constraintFileName
  -list
  -all
  -clear
```

The following table describes the command arguments.

Option	Description
-enable	Selects the specified constraint file to use for the active implementation.
-disable	Excludes the specified constraint file from being used for the active implementation
-list	Lists the constraint files used by the active implementation
-all	Selects (includes) all the project constraint files for the active implementation.
-clear	Clears (excludes) all the constraint files for the active implementation

Examples

List all constraint files added to a project, then disable one of these files for the next synthesis run.

```
% constraint_file -list
  attributes.fdc clocks1.fdc clocks2.fdc eight_bit_uc.fdc
% constraint_file -disable eight_bit_uc.fdc
```

Disable all constraint files previously enabled for the project, then enable only one of them for the next synthesis run.

```
% constraint_file -clear
% constraint_file -enable clocks2.fdc
```

create_fdc_template

Lets you create an initial constraint file (fdc) for your specific design.

Syntax

```
create_fdc_template [-period float] [-in_delay float] [-out_delay float]
```

The following table describes the `create_fdc_template` command options.

Option	Description
-period float	Specifies the default values for port clocks.
-in_delay float	Specifies the default values for the input delay ports.
-out_delay float	Specifies the default values for the output delay ports.

Examples

Each port clock includes a `set_clock_groups` header with details shown below, which can help you determine whether clocks have been optimized away or if there are any derived clocks.

```
#####
### Individual "set_clock_groups" commands for all "clka" derived clocks
### appear at the end of this file. Enabling a given command will make the
### given clock asynchronous to all other clocks. If a given clock (below)
### does not appear in the final Performance Summary (in the *.srr
### file after synthesis), the clock may have been optimized away due to
### Gated/Generated Clock Conversion.
### See the "CLOCK OPTIMIZATION REPORT" in the *.srr file.
### Below is a list of any clocks derived from "clka":
### clka DERIVED CLOCKS:
```

```
###      dcm|CLK0_BUF_1_derived_clock_CLKIN Clock Object: {t:dcm_inst.CLK_BUFI.O}
###      dcm|CLK0_BUF_derived_clock_CLKIN1    Clock Object: {t:dcm_inst.CLK_BUFO.O}
#####
```

```
set_clock_groups -disable -asynchronous -name {clka_group}
    -group {clka} -comment {Source clock clka group}
```

```
set_clock_groups -disable -asynchronous
    -name {dcm|CLK0_BUF_1_derived_clock_CLKIN1_group}
    -group [get_clocks
        -of_objects [get_pins {t:dcm_inst.CLK_BUFI.O}]]
    -comment {Derived clock dcm|CLK0_BUF_1_derived_clock_CLKIN1
        from source clock clka}
```

```

set_clock_groups -disable -asynchronous
  -name {dcm|CLK0_BUF_derived_clock_CLKIN1_group}
  -group [get_clocks]
  -of_objects [get_pins {t:dcm_inst.CLK_BUFO.O}]
  -comment {Derived clock dcm|CLK0_BUF_derived_clock_CLKIN1
             from source clock clka}

set_clock_groups -disable -asynchronous -name {clkb_group}
  -group {clkb} -comment {Source clock clkb group}

```

cdpl_queue

Use the `cdpl_queue` command to set a CDPL queue, get the configuration setting of the CDPL queue, or clear the CDPL queue settings. These settings are valid only for the current session, and not saved in the .ini file or any other script. Create a Tcl file to save the settings and use it for subsequent sessions. This command is available only as a Tcl syntax.

Syntax

```
cdpl_queue -set [queueType][queueConfig] | -get [queueType] | -clear
```

The following table describes the `cdpl_queue` command options:

Option	Description
-set [queueType] [queueConfig]	Sets a CDPL queue configuration. <ul style="list-style-type: none"> queueType is lowmem, highmem, default or vendor. The queue type vendor is for all place and route jobs. queueConfig is the queue host file. See CDPL help documentation on how to set up a queue host file.
-get [queueType]	Returns the configuration setting of the queueType specified. If queueType is not given, the command returns all the queue types set in the current session.
-clear	Clears all the queue settings.

Examples

To use this command, set up the following string in your project file:

```
cdpl_queue -set default $PWD/hosts_default
```

For more information, see the CDPL (Common Distributed Processing Library) documentation.

define_link

Use the `define_link` command to add or remove an instance to/from the subproject mapping.

Syntax

```
define_link [{i | v}; {instanceName}]
[-name linkSubProjectName] [-run_type value] [-remove] [-list] [-parameter]
```

The following table describes the `define_link` command options.

Option	Description
i: <i>instanceName</i>	Specifies the name of the instance to be linked for the subproject.
-name	Specifies the name of the subproject implementation that contains the design block.
-run_type <i>value</i>	Defines how the subproject is run. You can specify: <ul style="list-style-type: none"> • top-down – Runs the top-down flow from RTL or SRS. • bottom-up – Runs the bottom-up flow from EDIF.
-remove	Removes the link to an instance or design block from the subproject database. When the -remove option is not used, the instance or design block is removed from the top-level project and added as a subproject for that project.
-list	Lists all existing links for the project.
-parameter	Maps the subproject base on the parameterized design block.

Examples

Links the instance or design block to the subproject implementation that contains the block definition. For example:

```
"define_link "i:inst1" -name proj1_1|rev_1"
```

design

Returns netlist data representing information about the design. Commands are available in both batch and GUI mode. Note that the following HDL Analyst find commands can be used without the design prefix as well.

design c_diff	design c_filter	design c_info
design c_intersect	design c_list	design c_print
design c_symdiff	design c_union	design close
design expand	design find	design get_prop
design get	design list	design open
design set		

design c_diff

Returns a new find collection containing the differences between two existing find collections.

Syntax

design c_diff *collection1 collection2*

collection1

The first collection to compare.

collection2

The second collection to compare.

design c_filter

Filters a find collection based on set properties.

Syntax

design c_filter *collection pattern [-inst] [-net] [-port] [-pin] [-view]*

collection

The collection ID to filter.

pattern

Statement used to filter.

-inst

Returns matching instances. If no -type option (**-inst**, **-net**, **-port**, or **-pin**) is set, all types will be returned.

-net

Returns matching nets. If no -type option (**-inst**, **-net**, **-port**, or **-pin**) is set, all types will be returned.

-port

Returns matching ports. If no -type option (**-inst**, **-net**, **-port**, or **-pin**) is set, all types will be returned.

-pin

Returns matching pins. If no -type option (**-inst**, **-net**, **-port**, or **-pin**) is set, all types will be returned.

-view

Returns matching views. If no -type option (**-inst**, **-net**, **-port**, or **-pin**) is set, all types will be returned.

design c_info

Returns information about the contents of a find collection.

Syntax

design c_info [collection] [-array value]

collection

Find collection information to display.

-array *value*

Specify an array to store collection information in.

design c_intersect

Defines common objects that are included in each of the collections being compared.

Syntax

design c_intersect *collectionList*

collectionList

List of collections separated by spaces.

design c_list

Converts a collection to a Tcl list of objects.

Syntax

design c_list *collection*

collection

Collection to convert.

design c_print

Displays collections or properties in column format.

Syntax

design c_print *collection* [-prop *propertyName*] [-file *filename*] [-append]

collection

The collection to print as a table.

-prop

Writes a column in the table for properties of type *propname*.

-file

Writes the collection to *filename*.

-append

Appends to the file specified in **-file** rather than overwriting it.

design c_symdiff

Returns a new find collection containing the difference between two existing find collections.

Syntax

design c_symdiff *collection1* *collection2*

collection1 The first collection.

collection2 The second collection.

design c_union

Combines multiple collections into a single collection.

Syntax

design c_union *collectionList*

collectionList

Space-separated list of collections.

design close

Closes the specified design ID. If no design ID is provided, this command closes the current active design.

Syntax

design close *designID*

designID

The design ID to close.

design expand

The design expand command identifies objects based on their connectivity, by expanding forward from a given starting point. Returns a collection.

Syntax

design expand [-*objectType*] [-from *object*] [-thru *object*] [-to *object*] [-level *integer*] [-hier] [-leaf] [-seq] [-print]

-objectType

Optionally specifies the type of object to be returned by the expansion. If you do not specify *objectType*, all objects are returned. The object type is one of the following:

-inst – returns all instances between the expansion points. This is the default.

-pin – returns all instance pins between the expansion points.

-net – returns all nets between the expansion points.

-port – returns all top-level ports between the expansion points.

-from object

Specifies a list or collection of ports, instances, pins, or nets for expansion forward from all listed pins. Instances and input pins are automatically expanded to all output pins of the instances. Nets are expanded to all output pins connected to the net. If you do not specify this argument, backward propagation stops at a sequential element.

-thru object

Specifies a list or collection of instances, pins, or nets for expansion forward or backward from all listed output pins and input pins respectively. Instances are automatically expanded to all input/output pins of the instances. Nets are expanded to all input/output pins connected to the net. You can have multiple -thru lists for product of sum (POS) operations.

-to object

Specifies a list or collection of ports, instances, pins, or nets for expansion backward from all the pins listed. Instances and output pins are automatically expanded to all input pins of the instances. Nets are expanded to all input pins connected to the net. If you do not specify this argument, forward propagation stops at a sequential element.

-level integer

Limits the expansion to N logic levels of propagation. You cannot specify more than one -from, -thru, or -to point when using this option.

-hier

Modifies the range of any expansion to any level below the current view. The default for the current view is the top level and is defined with the `define_current_design` command as in the compile-point flow.

-leaf

Returns only non-hierarchical instances.

-seq

Modifies the range of any expansion to include only sequential elements. By default, the `expand` command returns all object types. If you want just sequential instances, make sure to define the `object_type` with the -inst argument, so that you limit the command to just instances.

-print

Evaluates the `expand` function and prints the first 20 results. If you use this command from HDL Analyst, results are printed to the Tcl window; for constraint-file commands, the results are printed to the log file at the

start of the Mapper section. For a full list of objects found, you must use `c_print` or `c_list`. Reported object names have prefixes that identify the object type. There are curly braces around each name to allow for spaces in the names. For example:

```
{i:reg1}
{i:reg2}
{i:\weird_name[foo$]}
{i:reg3}
<<found 233 objects. Displaying first 20 objects. Use
c_print or c_list for all. >>
```

design find

Identifies design objects based on specified criteria.

Syntax

```
design find
[-objectType] pattern
[-seq]
[-inst instance]
[-net net]
[-port port]
[-pin pin]
[-view view]
[-depth viewNumber]
[-flat]
[-print]
[-filter expression]
-in value
-below value
-nocase
```

-objectType *pattern*

Specifies the type of object to be found. Object types are view, inst, port, pin, or net. The *pattern* argument is required and specifies the search pattern to be matched. The pattern can include the * and ? wildcard characters (see [Regular Expressions, Wildcards, and Special Characters \(Standard\), on page 155](#)).

-seq

Finds sequential (clocked) instances (the -inst object type is not required). This argument is equivalent to `-filter @is_sequential`.

-hier

Extends the search downward through each level of the local hierarchy, instead of limiting the search to the current view. The default hierarchy separator for the search is the period (.).

-inst *instance*

Finds instances. If no -type option is set, find defaults to finding instances, nets, and ports.

-net *net*

Finds nets. If no -type option is set, find defaults to finding instances, nets, and ports.

-port *port*

Finds ports. If no -type option is set, find defaults to finding instances, nets, and ports.

-pin *pin*

Finds pins. If no -type option is set, find defaults to finding instances, nets, and ports.

-view *view*

Finds views. If no -type option is set, find defaults to finding instances, nets, and ports.

-depth *depth*

Sets the start depth for the search. *depth* may be a single hierarchy depth or a range. Using **-depth** with a range will cause **-hier** and **-flat** arguments to be ignored. Setting **-depth** to **0** will start the search at the top level.

-flat

Extends the search to all levels, but with -flat, the * wildcard character matches hierarchy separators as well as characters. This means that the following example finds instance a1_fft at the current level as well as the hierarchical instance a1.fft:

```
find -seq -flat a1*fft
```

-print

Prints the first 20 search results. For a full list of objects found, use **c_print** or **c_list**. If you use **find** from the shell, the results are printed to the Tcl window; if you **find** in the constraint file, the results are printed to the log file at the beginning of the Mapper section. Reported object names have prefixes that identify the object type and curly braces around each name to allow for spaces in the names as shown below:

```
{i:reg1}
{i:\weird_name[foo$]}
{i:reg2}
<<found 233 objects. Displaying first 20 objects. Use c_print
or c_list for all. >>
```

-filter expression

Further refines the results of find by filtering the results using the specified object property. For syntax details, refer to [find -filter, on page 165](#).

-in value

Searchs a collection to find a subset of the collection.

-below value

Sets the start point of the search to the specified instance path. Only search for objects below that point.

-nocase

Ignores the case when matching object names.

design get_prop

Returns a list of property values for an object or collection.

Syntax

design get_prop [objectName|collection] [-prop value] [-all]

objectName|collection

The object or collection to use.

-prop

The property value to return.

-all

Prints all available properties.

design get

Returns the design ID for the current active design.

Syntax

design get

design list

Returns a list of available design IDs.

Syntax

design list

design open

View schematic of the design in its current state.

Syntax

design open [netlist]

netlist

The netlist to view.

design set

Sets specified design ID as the active design.

Syntax

design set *designID*

designID

The design ID to set as active.

dump_metrics

Shows metrics and values available for the current implementation of a design. By default, only primary metrics are shown.

Syntax

dump_metrics [-show_queries] [-all]

-all

Shows detailed metrics as well as primary metrics for the design.

-show_queries

Shows available metrics in the form of a Tcl command that can be used to retrieve each metric.

The default output format is

table.[object|global]: metric = value [units] from job [// description]

Examples

```
% dump_metrics -all

*clock_conversion.global: icg_removed = 0  from premap
    //Number of ICG latches removed
*clock_conversion.global: icg_retained = 0  from premap
    //Number of ICG latches not removed
*clock_conversion.global: clean_clock_trees = 1  from fpga_mapper
    //Number of non-gated/non-generated clock trees
*clock_conversion.global: clean_clock_pins = 270  from fpga_mapper
    //Number of clock pins driven by non-gated/non-generated clock trees
*clock_conversion.global: gated_clock_trees = 0  from fpga_mapper
    //Number of gated/generated clock trees
*clock_conversion.global: gated_clock_pins = 0  from fpga_mapper
    //Number of clock pins driven by gated/generated clock trees
*clock_conversion.global: instancesConverted = 0  from fpga_mapper
    //Number of sequential instances converted
*clock_conversion.global: instancesNotconverted = 0  from fpga_mapper
    //Number of sequential instances left unconverted
*hdl_compile.global: modified_files = 28  from compiler
    //Total number of HDL input files compiled
*hdl_compile.global: modified_modules = 11  from compiler
    //Total number of modules compiled
*hdl_compile.global: total_modules = 11  from compiler
    //Total number of modules
*hdl_compile.global: total_files = 28  from compiler
    //Total number of HDL input files
*misc.global: Part = xc7vx485tffg1157-1  from fpga_mapper
*runtime.global: realtime = 3.154000 seconds from compiler
*runtime.global: cputime = 1.809612 seconds from compiler
```

```
*runtime.global: realtime = 1.452000 seconds from premap
*runtime.global: cputime = 1.622410 seconds from premap
*runtime.global: realtime = 9.881000 seconds from fpga_mapper
*runtime.global: cputime = 9.828063 seconds from fpga_mapper
*timing.global: "Worst Slack" = -0.445800 ns from fpga_mapper
utilization.global: LUT1 = 31 from fpga_mapper
utilization.global: LUT2 = 64 from fpga_mapper
utilization.global: LUT3 = 45 from fpga_mapper
utilization.global: LUT4 = 84 from fpga_mapper
utilization.global: LUT5 = 57 from fpga_mapper
utilization.global: LUT6 = 160 from fpga_mapper
utilization.global: IBUF = 1 from fpga_mapper
utilization.global: IBUFG = 1 from fpga_mapper
utilization.global: IOBUF = 24 from fpga_mapper
*utilization.global: "I/O primitives" = 26 from fpga_mapper
utilization.global: BUFG = 1 from fpga_mapper
*utilization.global: "I/O Register bits" = 0 from fpga_mapper
*utilization.global: "Total Luts" = 411 from fpga_mapper
```

Note: The * denotes a primary metric.

```
% dump_metrics -show_queries

query_metric clock_conversion.icg_removed -jobname premap
query_metric clock_conversion.icg_retained -jobname premap
query_metric clock_conversion.clean_clock_trees -jobname fpga_mapper
query_metric clock_conversion.clean_clock_pins -jobname fpga_mapper
query_metric clock_conversion.gated_clock_trees -jobname fpga_mapper
query_metric clock_conversion.gated_clock_pins -jobname fpga_mapper
query_metric clock_conversion.instancesConverted -jobname fpga_mapper
query_metric clock_conversion.instancesNotconverted -jobname fpga_mapper
query_metric hdl_compile.modified_files -jobname compiler
query_metric hdl_compile.modified_modules -jobname compiler
query_metric hdl_compile.total_modules -jobname compiler
query_metric hdl_compile.total_files -jobname compiler
query_metric misc.Part -jobname fpga_mapper
query_metric runtime.realtime -jobname compiler
query_metric runtime.cputime -jobname compiler
query_metric runtime.realtime -jobname premap
query_metric runtime.cputime -jobname premap
query_metric runtime.realtime -jobname fpga_mapper
query_metric runtime.cputime -jobname fpga_mapper
query_metric {timing.Worst Slack} -jobname fpga_mapper
query_metric {utilization.I/O primitives} -jobname fpga_mapper
query_metric {utilization.I/O Register bits} -jobname fpga_mapper
query_metric {utilization.Total Luts} -jobname fpga_mapper
```

Naming Conventions for Metrics

The naming convention used for metrics consists of the following:

- Table – Represents a group of related metrics, such as, timing, runtime, or clock conversion.
- Metric Name – Descriptive string used to query metrics. This name usually consists of lower case letters with underscores between words.
- Units – Values associated with the metric, such as ns or percent are only shown if details are specified.
- Object – Some metrics are associated with an object, while others are global. Objects can be a clock net name, view name, or an instance path.
- Description – Brief description of the metric.

For example, clock conversion metrics can be specified as follows:

Table	Metric Name	Description
clock_conversion	clean_clock_trees	Number of non-gated/non-generated clock trees
clock_conversion	clean_clock_pins	Number of clock pins driven by non-gated/non-generated clock trees
clock_conversion	gated_clock_trees	Number of gated/generated clock trees
clock_conversion	instancesConverted	Number of sequential instances converted
clock_conversion	instancesNotconverted	Number of sequential instances left unconverted

See Also

To query metrics for a design, see the following commands:

- [query_available_metrics, on page 96](#)
- [query_metric, on page 99](#)
- [query_metric_details, on page 101](#)

encryptIP

The encryptIP script lets you encrypt data with the OpenIP scheme. Download the script from the Synopsys website and run it directly from Perl. The Perl command line syntax for running the script is as follows:

Perl encryptIP Script Syntax

```
encryptIP
  -in | input inputFile
  -out | output outputFileName
  -c | cipher "{des-cbc | 3des-cbc | aes128-cbc |blowfish-cbc}"
  -k | key symmetricEncryptionKeyInTextFormat
  -kx | keyx symmetricEncryptionKeyInHexadecimalFormat
  -bd | build_date ddmmmyyyy
  -om | outputmethod "{plaintext | blackbox | persistent_key}"
  -incv | includevendor vendorKeyBlock
  -dkn | datakeyname sessionKeyName
  -dko | datakeyowner sessionKeyOwner
  -a | author dataAuthor
  -v | verbose
```

You must specify all required parameters.

-in input	Names the input RTL file to be encrypted.
-out output	Names the output file generated after encryption.
-c cipher	Specifies the symmetric encryption cipher. The key length must match the algorithm being used, with each character using 8 bits. <ul style="list-style-type: none"> des-cbc specifies the Data Encryption Standard (DES); uses a 64-bit key. 3des-cbc specifies the Triple Data Encryption Standard (Triple DES); uses a 192-bit key. aes128-cbc specifies the Advanced Encryption Standard (AES Rijndael); uses a 128-bit key. blowfish-cbc specifies the Blowfish standard, and is used for Lattice designs only. See Encryption and Decryption, on page 541 in the <i>User Guide</i> .
<hr/>	
-k key	Specifies the symmetric data decryption key used to encode your RTL data block. The key is in text format, and can be any string (e.g. ABCDEFG). The exact length of the key depends on the data method you use.

-kx keyx*	Optional parameter. Specifies the symmetric encryption key in hexadecimal format.
-bd build_date	Specifies a date (ddmmmyyyy). The IP only works in Synopsys software released after the specified date. This option lets you force users to use newer Synopsys FPGA releases that contain more security features. Contact Synopsys if you need help in deciding what build date to use.
-om outputmethod	Determines how the IP is treated in the output after synthesis: <ul style="list-style-type: none">• plaintext specifies that the IP is unencrypted in the synthesis netlist.• blackbox specifies that the IP is treated as a black box, and only interface information is in the output.• persistent_key is the default setting. It is used for Lattice designs, and re-encrypts the output after synthesis in accordance with the OpenIP standard. See Specifying the Script Output Method, on page 553 for more information.
-incv includevendor	Optional parameter that specifies a key block for an EDA vendor, so that IP can be read by the vendor tools. C
-dkn datakeyname	Specifies a string that denotes your session key, that was used to encrypt your IP.
-dko datakeyowner	Optional parameter that names the owner of the session key. The value can be any string.
-a author	Optional parameter that names the author of the session key. The value can be any string.
-v verbose	Specifies that the script run in verbose mode.

Example of encryptIP (OpenIP) Script Output

The following is an example of the script output:

```

Key block with session key      Key block header
with key information
%%% protect protected_file 1.0
<optional unencrypted HDL>

%%% protect begin_protected
%%% protect key_keyowner=Synopsys
%%% protect key_keyname=SYNP05_001
%%% protect key_block
U9n263KwF7RWb8GSz7C+700tKshqQgTmb8UdRxISekIJDFon/
...
<other key blocks>

%%% protect data_method=aes128-cbc
%%% protect data_block
UWhcm3CPmGz27DXAMQZF8rY7hSsvLwedXiP59HYZHJfoMIM/
...
...
%%% protect end_protected
<optional unencrypted HDL>

Data block          Data block header with
                    encryption method

```

For brief descriptions of the pragmas used in the output of the encryptIP script, see [Pragmas Used by Encryption Scripts, on page 60](#).

encryptP1735

Run the encryptP1735 script directly from Perl.

The script supports different models for encrypting RTL files and accessing the encrypted information (see [IEEE 1735 Encryption Use Models, on page 61](#)). The use model is determined by how blocks are marked for encryption in the HDL, combined with the information in the public keys file, which is described in [Public Keys File, on page 60](#).

Perl encryptP1735 Script Syntax

```
encryptP1735
  [-l | list listofFiles]
  [-pk | public_keys keyFileName]
  [-sk | showkey]
  [-verbose]
  [-verilog]
  [-vhdl]
  [-log logFileName]
  [-h | -help]
```

The following table describes the command-line arguments.

-l list	Specifies a list of the files to be encrypted; <i>listofFiles</i> is a list of the non-encrypted HDL input files with each filename entry on a separate line.
-pk public_keys	Specifies the public keys repository file. This file contains public keys for various tools. If the encryption envelope contains a key block with a particular keyowner and keyname, the script searches the public keys file to find a corresponding public key to use during key-block generation.
-sk showkey	When used, the encryption script displays the session key in use. This is useful when random keys are used and you want to know which key is being used.
-verbose	Prints more detailed messages to the screen or log file.
-verilog	Specifies Verilog HDL file format when filename does not include a .v or .sv extension.
-vhdl	Specifies VHDL HDL file format when filename does not include a .vhd or .vhdl extension.
-log	Prints messages to the specified log file.

Public Keys File

The encryptP1735.pl encryption script requires public key information, which is specified in a designated file (-public_keys or -pk) option. This file includes public keys for each of the tools that are allowed access to the envelope with the encrypted data. The default keys file is called keys.txt and is located with the encryption script in the lib directory of the tool installation.

```
// Use verilog pragma syntax in this file

`pragma protect version=1
`pragma protect author="default"
`pragma protect author_info="default"

`pragma protect key_keyowner="Synopsys", key_keyname="SYNP15_1",
key_method="rsa"
`pragma protect key_public_key
<public_key_block>

// Add additional public keys below this line

// Add additional public keys above this line

`pragma protect data_keyowner="default-ip-author"
`pragma protect data_keyname="default-ip-key"
`pragma protect data_method="aes128-cbc"

// End of file
```

For the partial file with all pragmas use model, the following pragma attribute values must match the corresponding values in the key-block section of the encryption envelope:

```
`pragma protect key_keyowner="Synopsys", key_keyname="SYNP15_1",
key_method="rsa"
```

For information on the pragmas supported, see [Pragmas Used by Encryption Scripts, on page 60](#).

Pragmas Used by Encryption Scripts

Both the encryptIP1735 and encryptIP (OpenIP) schemes use the pragmas described in the following tables. Note the following:

- The %% protect directive must be placed at the exact beginning of a line.
- Exactly one white-space character must separate the %% sequence from the command that follows.

The following table lists the pragmas used. In Verilog, the pragma must be preceded by the word `pragma`; this is not required in VHDL.

General Pragmas

<code>%%% protect protected_file 1.0</code>	Line 1 of file with encrypted data
<code>%%% protect begin_protected</code>	Marks the beginning of data to be encrypted
<code>%%% protect end_protected</code>	Marks the end of data to be encrypted
<code>%%% protect comment comment</code>	Single-line plain-text comment
<code>%%% protect begin_comment</code>	Marks the beginning of plain-text comment block
<code>%%% protect end_comment</code>	Marks the end of plain-text comment block

Data Block Pragmas (IP Author Data Encryption Information)

<code>%%% protect author=string</code>	Lists name of IP author
<code>%%% protect version=1</code>	Specifies encryption version; required only for IEEE 1735 Partial File with Standard Pragmas encryption use model
<code>%%% protect data_method=des-cbc 3des-cbc aes128-cbc</code>	Specifies the DES encryption method used: <ul style="list-style-type: none">• des-cbc: Data Encryption Standard (DES)• 3des-cbc: Triple DES• aes128-cbc: Advanced Encryption Standard (AES)
<code>%%% protect data_block</code>	Immediately precedes the encrypted data block

Key Block Pragmas (IP Consumer Public Key Information)

<code>%%% protect key_keyowner=string</code>	Lists the owner of the key
<code>%%% protect key_keyname=string</code>	Name recognized by the Synopsys software to select the key block
<code>%%% protect key_method=string</code>	Encryption algorithm (RSA currently supported)
<code>w %%% protect key_block</code>	Immediately precedes encrypted key block

IEEE 1735 Encryption Use Models

Encryption models determine the scope of what gets encrypted and who can access the files. The `encryptP1735` script lets you use these use models to encrypt RTL files:

Encryption Model	Details
Full file	Full-File Use Model, on page 62
Partial file with minimal pragmas	Partial File with Minimal Pragmas Use Model, on page 63
Partial file with standard pragmas (Recommended)	Partial File with Standard Pragmas Use Model, on page 64
Partial file with IEEE pragmas	Partial File with IEEE Pragmas Use Model, on page 66

Full-File Use Model

Use this model to encrypt the entire file. The entire RTL file is included in the decryption envelope. This model uses the `keys.txt` file to define which consumers have access to the encrypted data.

RTL	<ul style="list-style-type: none"> Contains no encryption pragmas (entire file is encrypted)
<code>keys.txt</code>	<ul style="list-style-type: none"> Contains public key information for multiple downstream tools Owners of all public keys listed have access to the entire file

This Verilog example encrypts the whole file (`tb_encrypt.v`), including the module named `secret` that it contains.

```
module secret (a, b, clk);
  input a, clk;
  output b;
  reg b=0;

  always @(posedge clk) begin
    b = a;
  end
endmodule
```

Run the script to encrypt the file:

```
perl encryptP1735.pl -list mylist -log encryptP1735.log
```

This command runs the script on a file (`mylist`), which lists the single Verilog file `tb_encrypt.v`. The command uses the default `keys.txt` file from the `lib` directory, and creates the decryption envelope file `tb_encrypt.vp`. Messages from the run are written to the `encryptP1735.log` file.

Partial File with Minimal Pragmas Use Model

With this encryption model, pragma protect begin and pragma protect end pragmas are used to indicate the start and end points of encryption regions. This model is best suited for cases where every encryption region must be encrypted for every key in the key file. When using this model, you must encrypt the entire module. The `encryptP1735.pl` script checks all the begin and end pragmas and generates the decryption envelope for each tool specified in the keys file.

- | | |
|----------|---|
| RTL | <ul style="list-style-type: none"> • Contains individual blocks marked for encryption (partial file) • Contains no public key information |
| keys.txt | <ul style="list-style-type: none"> • Contains public key information for multiple downstream tools • Owners of all public keys listed have access to all encrypted RTL blocks |
-

To illustrate this use model, consider a single, Verilog file (`tb_encrypt.v`) to be encrypted with only begin and end pragmas. This file contains a single module named `secret`.

```
`pragma protect begin
module secret (a, b, clk);
    input a, clk;
    output b;
    reg b=0;

    always @(posedge clk) begin
        b = a;
    end
endmodule
`pragma protect end
```

When you run the script with the following command, it uses the begin and end pragmas specified in the RTL file to encrypt the file:

```
perl encryptP1735.pl -list mylist -pk keys.txt
```

Here, the list file (`mylist`) names the Verilog file `tb_encrypt.v`. The command encrypts the data between the begin and end pragmas and creates the decryption envelope file `tb_encrypt.vp` for all tools listed in the key file. No log file (-log option) is specified, so messages are not written to a log file.

Partial File with Standard Pragmas Use Model

This is the recommended encryption use model. It is the most flexible because you can choose to encrypt individual blocks instead of the entire file and specify which tools can access each encrypted block on a per-block basis. When using this model, you must encrypt the entire module. This model requires a side file (`keys.txt`) that contains public key information for IP consumers.

- | | |
|----------|--|
| RTL | <ul style="list-style-type: none"> • Marks individual blocks for encryption (partial file) • Includes public key encryption pragmas for each tool that is allowed access to an encrypted block, except the key itself (<code>key_public_key</code>) • Key information must match the information in the <code>keys.txt</code> file • Can allow different keys access to different blocks |
| keys.txt | <ul style="list-style-type: none"> • Contains public key information for multiple downstream tools • Must include all public key encryption pragmas, as well as the public key itself • Only those owners of public keys listed in the RTL before the encrypted block have access to that block; all public keys listed in <code>keys.txt</code> need not be used in the RTL |

If there are conflicting pragmas defined in the RTL and the `keys.txt` file, the RTL pragma takes precedence over the corresponding pragma in the `keys.txt` file. For example, if `data_method` in the RTL is defined as `des-cbc` but the same pragma in the `keys.txt` file defines it as `aes128-cbc`, the RTL definition is used and copied to the decryption envelope:

```
data_method="des-cbc"
```

Verilog Example

This example encrypts a single Verilog file (`tb_encrypt.v`). The file contains a module named `secret` and includes all the encryption-related pragmas in the RTL, with the exception of `key_public_key`.

```
`pragma protect version=1
`pragma protect encoding=(enctype="base64")
`pragma protect author="author-a", author_info="author-a-details"
`pragma protect encrypt_agent="encryptP1735.pl",
encrypt_agent_info="Synplify encryption scripts"
```

```

`pragma protect key_keyowner="Synopsys",key_keyname="SYNP15_1",
key_method="rsa", key_block
`pragma protect data_keyowner="ip-vendor-a",data_keyname="fpga-
ip", data_method="des-cbc"
`pragma protect begin

module secret (a, b, clk);
input a, clk;
output b;
reg b=0;
always @(posedge clk) begin
    b = a;
end
endmodule

`pragma protect end

```

The script is then run with the following command, where the list file (mylist) names a single file, tb_encrypt.v. The command uses the default keys.txt file from the *installLocation/lib* directory as the public keys file to create the decryption envelope file tb_encrypt.vp. No log file is specified, so messages from the run are not sent to a log file.

```
perl encryptP1735.pl -list mylist -pk keys.txt
```

VHDL Example

This example partially encrypts a VHDL file (tb_encrypt.vhd) where all encryption pragmas are specified in the file, except for key_public_key. The file contains a single entity/architecture pair named secret. For VHDL pragmas, just use the keyword protect.

```

library IEEE;
use IEEE.std_logic_1164.all;

entity secret is
    port (clk : in std_logic;
          a : in std_logic;
          b : out std_logic);
end entity;

`protect version=1
`protect author="author-a", author_info="author-a-details"
`protect encrypt_agent="encryptP1735.pl",
encrypt_agent_info="Synplify encryption scripts"
`protect encoding=(enctype="base64")

```

```

`protect key_keyowner="Synopsys", key_keyname="SYNP15_1",
key_method="rsa", key_block
`protect data_keyowner="ip-vendor-a", data_keyname="fpga-ip",
data_method="des-cbc"
`protect begin

architecture rtl of secret is
signal b_reg: std_logic;
begin
process (clk) is
begin
  if rising_edge(clk) then
    b_reg <= a;
  end if;
end process;
b <= b_reg;
end architecture;

`protect end

```

Encrypt the file with the following command, where the list file (mylist) names a single VHDL file, tb_encrypt.vhd. The command uses the default keys.txt file from the directory *installLocation/lib* as the public keys file to create the decryption envelope file tb_encrypt.vhdp. Messages are not captured in a log file.

```
perl encryptP1735.pl -list mylist -pk keys.txt
```

Partial File with IEEE Pragmas Use Model

Like the partial file with standard pragmas model, this use model is flexible, but it does not require a side file with the key block information. This makes it the most portable model, because all the information, including the key block information for each IP consumer, is included in the source code. When using this model, you must encrypt the entire module.

- | | |
|----------|---|
| RTL | <ul style="list-style-type: none"> • Marks individual blocks for encryption (partial file) • Includes public key encryption pragmas for each tool that is allowed access to an encrypted block, including the key itself (<code>key_public_key</code>) • Can allow different keys access to different blocks |
| keys.txt | <ul style="list-style-type: none"> • Not required |
-

```
module top (qa, qb, a, b, clk);
    input a, b, clk;
    output qa, qb;
    enc_and iand (qa, a, b, clk);
    enc_or ior (qb, a, b, clk);
endmodule

`pragma protect version=1
`pragma protect author="author-a", author_info="author-a-details"

`pragma protect key_keyowner="Synplicity", key_keyname="SYNP15_1",
key_method="rsa"

`pragma protect key_public_key
<public_key_block>

`pragma protect key_keyowner = "XYZ"
`pragma protect key_method = "rsa"
`pragma protect key_keyname = "XYZ8_001"

`pragma protect key_public_key
<public_key_block>

`pragma protect data_method="aes128-cbc"
`pragma protect begin

module enc_and (q, a, b, clk);
    input a, b, clk;
    output q;
    reg q=0;
    always @ (posedge clk) begin
        q = a & b;
    end
endmodule

`pragma protect end

`pragma protect version=1
`pragma protect author="author-a", author_info="author-a-details"
`pragma protect key_keyowner="Synplicity", key_keyname="SYNP15_1",
key_method="rsa"
`pragma protect key_public_key
<public_key_block>
```

```
`pragma protect key_keyowner = "XYZ"
`pragma protect key_method = "rsa"
`pragma protect key_keyname = "XYZ8_001"
`pragma protect key_public_key
<public_key_block>

`pragma protect data_method="aes128-cbc"
`pragma protect begin

module enc_or (q, a, b, clk);
input a, b, clk;
output q;
reg q=0;
always @(posedge clk) begin
    q = a | b;
end
endmodule

`pragma protect end
```

export_project

Creates a new module- based subproject that you can export and insert into the current project. By default, HDL-dependent files are included in the subproject. Use the various options for this command to help you create the subproject easily in batch mode.

Syntax

```
export_project -module moduleName [
  -add_file fileName] [-filelist fileListName] [-no_default_hdl] [-run_type configType]
  [-project projectName]
```

Arguments and Options

-module moduleName

Specifies the target RTL module for performing module-base subproject export.

-add_file *fileName*

Adds HDL source files to the project. Use either a relative or absolute path, for the source files to be included in your project. These are additional files used in conjunction with the default HDL-dependent files.

-filelist *fileListName*

Specifies a file that contains a list of HDL source files to be included in the subproject. Add one entry per line for each HDL file, specifying either a relative or absolute path to the source files in *fileListName*. When you use this option, the files listed in *fileListName* replace the default files listed in the parent project (prj).

-no_default_hdl

Prevents the automatic adding of HDL-dependent files.

-run_type *configType*

Specifies how to run the subproject for each implementation of the parent project. Choose one of the following configuration modes:

top_down – Compiles the subproject, linking to the top-level project before mapping to a netlist.

bottom_up – Maps the subproject to a netlist, before linking to the top-level project.

-project *projectName*

Specifies the project file name. Use either a relative or absolute path for the export subproject.

Examples

```
export_project -instance b1  
export_project -module bblock  
export_project -module bblock -project ./bblock_inst_b1/bblock.prj
```

get_env

The `get_env` command reports the value of a predefined system variable.

Syntax

```
get_env systemVariable
```

Use this command to view system variable values. The following example shows you how to use the `get_env` command to see the value of the previously created `MY_PROJECT` environment variable. The `MY_PROJECT` variable contains the path to an HDL file directory, so `get_env` reports this path.

```
get_env MY_PROJECT  
d:\project\hdl_files
```

In the project file or a Tcl script, you can define a Tcl variable that contains the environment variable. In this example, `my_project_dir` contains the `MY_PROJECT` variable, which points to an HDL file directory.

```
set my_project_dir [get_env MY_PROJECT]
```

Then, use the `$systemVariable` syntax to access the variable value. This is useful for specifying paths in your scripts, as in the following example which adds the file `myfile1.v` to the project.

```
add_file $my_project_dir/myfile1.v
```

get_option

The `get_option` command reports the settings of predefined project and device options. The options are the same as those for `set_option`. See [set_option, on page 112](#) for details.

Syntax

```
get_option -optionName
```

hdl_define

For Verilog designs, this command specifies values for Verilog text macros. You can specify text macro values that you would normally enter using the Verilog `'define` statement in a Verilog file included at the top of the synthesis project. The parameter value is valid for the current implementation only.

This command is equivalent to the `set_option -hdl_define` command.

Syntax

```
hdl_define
  -set "directive=value [directive=value ...]"
  -clear
  -list
```

Examples

```
hdl_define -set "SIZE=32"
```

This statement specifies the value 32 for the SIZE directive; the following statement is written to the project file:

```
set_option -hdl_define -set "SIZE=32"
```

To define multiple directive values using `hdl_define`, enclose the directives in quotes and use a space delimiter. For example:

```
hdl_define -set "SIZE=32 WIDTH=8"
```

The software writes the following statement to the `prj` file:

```
set_option -hdl_define -set "size=32 width=8"
```

See Also

[Compiler Directives and Design Parameters, on page 383](#) for information on specifying compiler directives in the GUI.

hdl_param

The `hdl_param` command shows or sets HDL parameter overrides. For the GUI equivalent of this command, select Project->Implementation Options->Verilog/VHDL.

Syntax

```
hdl_param
  -add {paramName}
  -list | -set paramName {paramValue}
  -clear
  -overrides
```

The following table describes the command arguments.

Option	Description
-add	Adds a parameter override to the project.
-list	Shows parameters for the top-level module only and lists values for parameters if there is a parameter override.
-set	Sets a parameter override and its value for the active implementation. Only the parameter value is enclosed within curly braces.
-clear	Clears all parameter overrides of the active implementation.
-overrides	Lists all the parameter override values used in this project.

Examples

In batch mode, to set generic values using the `set_option` command in a project file, specify the `hdl_param` generic with quotes and enclose it within {}.

For example:

```
set_option -hdl_param -set ram_file {"init.mem"}
set_option -hdl_param -set simulation {"false"}
```

Suppose the following parameter is set for the top-level module.

```
set_option -hdl_param -set {"width=8"}
```

Add a parameter override and its value, then list the parameter override.

```
hdl_param -add {"size=32"}  
hdl_param -list "size=32"
```

You can specify `hdl_param` generics with different types, such as, an integer, `std_logic_vector`, or string value for VHDL. Here are some examples that show how to define these generics:

- With an integer value

```
set_option -hdl_param -set DATA_WIDTH 4
```

- With a `std_logic_vector` value

```
set_option -hdl_param -set MY_SLV {"0011"}
```

- Using a string value

```
set_option -hdl_param -set initialization_file {"table2"}
```

help

The `help` command displays the usage syntax and description for the specified command in the Tcl window.

Syntax

```
help commandName | wildcardTerm
```

Examples

```
help set_option  
  
usage:set_option -<optionName> <optionValue> -- set option  
on active implementation  
  
get_option -<optionName> -- return option value on  
active implementation  
  
help c_*
```

```
c_diff
c_filter
c_info
c_intersect
c_list
c_member
c_print
c_symdiff
c_union
```

impl

The `impl` command adds, removes, or modifies an implementation.

Syntax

```
impl
  -add [implName] [model]
  -name implName
  -remove implName
  -active [implName]
  -list
  -type implType
  -result_file
  -dir
```

The following table describes the command arguments.

Option	Description
-add	Adds a new device implementation. If: <ul style="list-style-type: none"> <i>implName</i> is not specified, creates a unique implementation name by incrementing the name of the active implementation. you want to add a new implementation copied from implementation <i>model</i>.
-name	Changes the name of the active implementation.
-remove	Removes the specified implementation.

Option	Description
-active	Reports the active implementation. If you specify an implementation name, changes the specified name to the active implementation.
-list	Lists all the implementations used in this project.
-type	Specifies the type of implementation to add. For example, the: <ul style="list-style-type: none"> -type fpga option creates an FPGA implementation. -type identify option creates an Identify implementation.
-result_file	Displays the implementation results file.
-dir	Displays the implementation directory.

Examples

The following command sequence lists all implementations, reports the active implementation, and then activates a different implementation.

```
% impl -list
design_worst design_typical design_best

% impl -active
design_best

%impl -active design_typical

% impl -active
design_typical

% impl -add rev_1_identify mixed -type identify
```

job

The job command, for place and route job support, creates, removes, identifies, runs, cancels, and sets/gets options for named P&R jobs.

Syntax

```
job jobName [-add jobType |-remove |-type | -run [mode] |-cancel |
             -option optionName [optionValue]]
```

job -list

The following table describes the command options.

Option	Description
-run	Runs the P&R job, according to the specified options:
-add <i>jobType</i>	Creates a new P&R job for the active implementation.
-cancel	Cancels a P&R job in progress.
-remove	Removes a P&R job from an active implementation
-list	Returns a list of the P&R jobs in the active implementation.
-remove	Removes a P&R job from the active implementation
-option <i>optionName</i> [<i>optionValue</i>]	Get/set options for <i>jobName</i> .
-type	Returns the P&R job type.

Examples

```
% job pr_2 -add par
% job pr_2 -option enable_run 1
% job pr_2 -option run_backannotation 1
% job pr_2 -run
```

log_filter

This command lets you filter errors, notes, and warning messages. The GUI equivalent of this command is the Warning Filter dialog box, which you access by selecting the Warnings tab in the Tcl window and then clicking Filter. For information about using this command, see [Filtering Messages in the Message Viewer, on page 236](#) in the *User Guide*.

Syntax

```
log_filter -field fieldName==value
log_filter -show_matches
log_filter -hide_matches
log_filter -enable
log_filter -disable
log_filter -clear
```

The following table shows valid *fieldName* and *value* values for the **-field** option:

Fieldname	Value
type	Error Warning Note
id	The message ID number. For example, MF138
message	The text of the message. You can use wildcards.
source_loc	The name of the HDL file that generated the message.
log_loc	The corresponding srr file (log).
time	The time the message was generated.
report	The log file section. For example, Compiler or Mapper.

Example

```
log_filter -hide_matches
log_filter -field type==Warning -field message==*Una*
    -field source_loc==sendpacket.v -field log_loc==usbHostSlave.srr
    -field report=="Compiler Report"
log_filter -field type==Note
log_filter -field id==BN132
log_filter -field id==CL169
log_filter -field message=="Input *"
log_filter -field report=="Compiler Report"
```

log_report

This command lets you write out the results of the log_filter command to a file. For information about using this command, see [Filtering Messages in the Message Viewer, on page 236](#) in the *User Guide*.

Syntax

You specify this command after the log_filter commands.

```
log_report -print fileName
```

Example

```
log_report -print output.txt
```

message_override

Allows you to suppress or override the log file message ID specifications with another type or limit.

Use -limit and -count, to limit the number of occurrences for all messages or specific messages in each log file. Messages that exceed the limit still show up in the Report Summary page and can be retrieved later from the message database. Suppressing messages is the same as -limit *ID* -count 0; errors cannot be suppressed or limited.

Syntax

```
message_override [-suppress value] [-read_file value] [-error value]
                 [-warning value] [-note value] [-remove value] [-global] [-clear]
                 [-limit value] [-count value]
```

The following table describes the command arguments and options.

Option	Description
-suppress value	Lists message IDs to suppress in the log file.
-read_file value	Reads the specified message override file.
-error value	Lists the message ID type as an error.

Option	Description
-warning value	Lists the message ID type as a warning.
-note value	Lists the message ID type as a note.
-remove value	Removes the override and resets the message type to its original value.
-global	Allows message operations to be applied globally. Otherwise, the override operation is only applied on messages for the current project.
-clear	Removes all overrides and resets messages to their original types.

Examples

It is recommended that you set the default limit to something other than unlimited, if possible. To do this, you can specify the following:

```
message_override -default_limit 100
```

More examples are shown below:

1. Upgrade messages with ID MF446 to be treated as an error.

```
message_override -error MF446
```

2. Suppress messages with ID BN101 (cannot be done for errors):

```
message_override -suppress BN101
```

3. Limit the number of occurrences of messages with IDs MF580 and MF581 to 1000 each in each log file:

```
message_override -limit {MF580 MF581} -count 1000
```

4. Unlimit the number of occurrences of messages with ID CL118 in logs and reports:

```
message_override -limit CL118 -count unlimited
```

5. Clear existing message overrides:

```
message_override -clear
```

open_design

The `open_design` command specifies a netlist file (`srs`, `srp`, or `srm`) that can be used to search the database with the `Tcl find` command in batch mode. With `open_design`, you can use `find` without having to open an RTL or Technology view. Use `open_design` to read in the `srs`, `srp` or `srm` file before issuing the `find` command. See the example below.

Syntax

`open_design filename`

Where:

- `filename` is the RTL (`srs`), partitioned RTL (`srp`), or Technology (`srm`) file that can be used to search the database. The specified netlist is loaded on-demand to minimize memory resources.

Example

```
project -load ../examples/vhdl/prep2_2.prj
open_design prep2_2.srs
set a [find -inst *]
c_print $a -file a.txt
open_design prep2_2.srm
set b [find -net *]
c_print $b -file b.txt
```

In the example above, `prep2_2` is loaded and the information from the RTL view file is read in. Then, the `find` command searches for all instances in the design and prints them to file `a`. Next, the technology view file is read in, then `find` searches for all nets in the design and prints them to file `b`.

See Also

- [find, on page 151](#).

open_file

The `open_file` command opens views within the tool. The command accepts two arguments: `-rtl_view` and `-technology_view`.

Syntax

```
open_file -rtl_view | -technology_view
```

The `-rtl_view` option displays the RTL view for the current implementation, and the `-technology_view` option displays the technology view for the current implementation. Views remain displayed until overwritten and multiple views can be displayed.

partdata

The `partdata` command loads part files and returns information regarding a part such as available families, family parts, vendors, attributes, grades, packages.

Syntax

```
partdata
  -load filename
  -family
  -part family
  -vendor family
  -attribute attribute family
  -grade [family:]part
  -package [family:]part
  -oem [family:]part
```

Option	Description
-load <i>filename</i>	Loads part file.
-family	Lists available technology families.
-part <i>family</i>	Lists all parts in specified family.
-vendor <i>family</i>	Returns vendor name for the specified family.

Option	Description
-attribute attribute family	Returns the value of the job attribute for the specified family.
-grade [family:]part	Lists the speed grades available for the specified part.
-package [family:]part	Lists the packages available for the specified part.
-oem [family:]part	Returns true if the part entered is an OEM part.

Example

The following example prints out the available vendors, their supported families, and the parts for each family.

```
% foreach vendor [partdata -vendorlist]
% puts VENDOR:$vendor;
% foreach family [partdata -family $vendor]
% puts \tFAMILY:$family;
% puts \t\tpARTS:;
% foreach part [partdata -part $family]
% puts \t\t$part;
```

program_terminate

Immediately terminates the tool session without prompting or saving any data.

Syntax

program_terminate

Arguments and Options

None

Description

The **program_terminate** command terminates a tool session without prompting or saving data. Use this command with caution as any unsaved data is lost and cannot be recovered.

Examples

```
program_terminate
```

program_version

Returns the product and software release version.

Syntax

```
program_version
```

Arguments and Options

None

Description

The program_version command returns the software product version number.

Examples

```
% program_version
Synplify Pro L-2016.09
```

project

The project command runs job flows to create, load, save, and close projects, to change and examine project status, and to archive projects.

Syntax

```

project -run [-all] [-bg] implementationList [-impl implementationName]
[-clean] implementationList [-impl implementationName]
[-parallel] implementationList [-impl implementationName]
[-from proccessName] [-to processName]

project {-new [projectPath] | -load projectPath | -close [projectPath]}
[-save [projectPath] | -insert projectPath} |

project {-active [ projectName ] | -dir | -file | -name | -list | -filelist |
-fileorder filepath1 filepath2 [... filepathN] | -addfile filepath |
-movefile filepath1 [filepath2] | -removefile filepath}

project {-result_file resultFilePath | -log_file [logfileName]}

project -propagate_params

project -copy [-project filename] [-implement implementationName]
[-dest_dir pathname] [-copy_type {full | local | customize}]
[-add_srs [fileList] -no_input]

project -unarchive [-archive_file pathname/filename] [-dest_dir pathname]

```

run option

The run option lets you synthesize selected implementations of a Project file. You can choose to use the arguments for the run option independently or in any combination. The arguments available are described in the table below.

You can also use the Batch Run Setup dialog box to set the arguments to use with the run option. For details, see [Run Implementations Setup Command, on page 399](#).

Option	Description
-run [-all] [-bg] [-clean] [-parallel]	Synthesizes the project, according to the specified options:

Option	Description
	<p>You can use <i>run</i> with any of the following arguments:</p> <ul style="list-style-type: none"> • -all – Runs all implementations of the active project. • -bg – Runs specified implementations in non-blocking background mode. • -clean – Runs specified implementations, while ignoring up-to-date checking. This option cleans all previous results and forces a complete rerun. • -parallel – Runs specified implementations concurrently. Additional licenses are required for each job. • -from - Runs from and including the specified process name. • -to - Runs up to and including the specified process name. • processName - Specifies the process name.
	<p>The <i>mode</i> can be one of the following keywords:</p> <ul style="list-style-type: none"> • compile – Compiles the active project, but does not map it. • constraint_check - Validates the syntax and applicability of constraints defined in one or more constraint files. • syntax_check – Verifies that the HDL is syntactically correct; errors are reported in the log file. • synthesis – Default mode if no mode is specified. Compiles (if necessary) and synthesizes the currently active project. If followed by the -clean option (project -run synthesis -clean), resynthesizes the entire project, including the top level and <i>all compile points</i>, whether or not their constraints, implementation options or source code changed since the last synthesis. If not followed by -clean, only compile points that have been modified are resynthesized. • synthesis_check – Verifies that the design is functionally correct; errors are reported in the log file. • timing – Runs the Timing Analyst. This is equivalent to clicking the Generate Timing button in the Timing Report Generation dialog box with user-specified values.

Option	Description
	<ul style="list-style-type: none"> • write_netlist – Writes the mapped output netlist to structural Verilog (vm) or VHDL (vhm) format. You can also use this command in an incremental timing analysis flow. For details, see Run Menu, on page 395 and Generating Custom Timing Reports with STA, on page 383.

The following table describes the rest of the Project file command options.

Option	Description
-new [<i>projectPath</i>]	Creates a new project in the current working directory. If <i>projectPath</i> is specified, creates the project in the specified directory. For the Hierarchical Project Management flow, you can create a new subproject for the top-level project.
-load <i>projectPath</i>	Opens and loads the project file specified by <i>projectPath</i> .
-close [<i>projectPath</i>]	Closes the currently active project. If <i>projectPath</i> is specified, closes the specified project.
-save [<i>projectPath</i>]	Saves the currently active project. If <i>projectPath</i> is specified, saves the specified project.
-insert <i>projectPath</i>	Adds the specified project to the workspace project.
-insert <i>projectFile</i>	For the Hierarchical Project Management flow, adds the specified subproject for the top-level project. See Example: Inserting Subproject for a Top-level Project, on page 90 .
-active [<i> projectName</i>]	Shows the active project. If <i>projectName</i> is specified, makes the specified project the active project.
-dir	Shows the project directory for the active project.
-file	Returns the path to the active project.
-name	Returns the filename (prj) of the active project.
-list	Returns a list of the loaded projects.
-filelist	Returns the pathnames of the files in the active project.

Option	Description
-fileorder <i>filepath1</i> <i>filepath2</i> [... <i>filepathN</i>]	Reorders files by adding the specified files to the end of the project file list.
-addfile <i>filepath</i>	Adds the specified file to the project.
-movefile <i>filepath1</i> [<i>filepath2</i>]	Moves <i>filepath1</i> to follow <i>filepath2</i> in project file list. If <i>filepath2</i> is not specified, moves <i>filepath1</i> to top of list.
-removefile <i>filepath</i>	Removes the specified file from the project.
-result_file <i>resultFilePath</i>	Changes the name of the synthesis result file to the path specified.
-log_file [/ <i>logfileName</i>]	Reports the name of the project log file. If <i>logfileName</i> is specified, changes the base name of the log file.
-propagate_params	<p>Synchronizes parameters for a subproject, when you make changes to these parameters in the design. This ensures that the parameters are propagated properly from the top-level design to lower-level blocks of the subproject.</p> <p>GUI equivalent: Run Subproject Parameter Sync. For an example, see Example: Using Subproject Parameter Sync, on page 90.</p>

Option	Description
-archive -project <i>filename</i> [-root_dir <i>pathname</i>] -archive_file <i>filename.sar</i> -archive_type {full local customize} -add_srs [<i>fileList</i>] -no_input	<ul style="list-style-type: none">• project <i>filename</i> – copies a project other than the active project. If you do not use this option, by default the active project is copied.• root_dir <i>pathname</i> – specifies the top-level directory containing the project files.• archive_file <i>filename</i> – is the name of the archived project file.• archive_type - specifies the type of archive:<ul style="list-style-type: none">• full – performs a complete archive; all input and result files are contained in the archive file.• customize – performs a partial archive; only the project files that you select are included in the archive.• local – includes only project input files in the archive; does not include result files.• add_srs – adds the listed srs files to the archived project. Use the -no_input option with this command. If <i>fileList</i> is omitted, adds all srs files for the project/implementations. The srs files are the RTL schematic views that are output when the design is compiled (Run->Compile Only). <p>For more information about, and examples of the project -archive command, see Archive Utility, on page 91.</p>

Option	Description
-copy -project <i>filename</i> -implement <i>implementationName</i> -dest_dir <i>pathname</i> -copy_type {full local customize} -add_srs [<i>fileList</i>] -no_input	<ul style="list-style-type: none"> • project <i>filename</i> – copies a project other than the active project. If you do not use this option, by default the active project is copied. • implement <i>implementation_name</i> – archives all files in the specified implementation. • dest_dir <i>directory_pathname</i> – specifies the directory in which to copy the project files. • copy_type – specifies the type of file/project copy: <ul style="list-style-type: none"> • full – performs a complete copy; all input and result files are contained in the archive file. • customize – performs a partial copy; only the project files that you select are included in the archive. • local – includes only project input files in the copy; does not include result files. • add_srs – adds the listed srs files to the archived project. Use the -no_input option with this command. If <i>fileList</i> is omitted, adds all srs files for the project/implementations. The srs files are the RTL schematic views that are output when the design is compiled (Run->Compile Only). <p>For more information about, and examples of the project -copy command, see Archive Utility, on page 91.</p>
-unarchive -archive_file <i>pathname/filename</i> -dest_dir <i>pathname</i>	<ul style="list-style-type: none"> • archive_file <i>pathname/filename</i> – is the name of the archived project file. • dest_dir <i>pathname</i> – specifies the directory in which to write the project files. <p>For more information about, and examples of the project -unarchive command, see Archive Utility, on page 91.</p>

project Command Examples

Load the project top.prj and compile the design without mapping it. Compiling makes it possible to create a constraint file with the SCOPE spreadsheet and display an RTL schematic representation of the design.

```
% project -load top.prj  
% project -run compile
```

Load a project and synthesize the design.

```
% project -load top.prj  
% project -run synthesis
```

In the example above, you can also use the command `project -run`, since the default is `synthesis`.

Example: Inserting Subproject for a Top-level Project

You can add a project within a project using the following syntax:

```
project -insert [projectFile]
```

This command inserts a subproject within the top-level design, which becomes the active project.

```
% project -insert "./block2/block2.prj"  
% project -insert "./block3/block3.prj"  
% project -insert "./block1/block1.prj"  
% project -insert "./control/control.prj"
```

Example: Using Subproject Parameter Sync

If parameters have been changed in a design, you can make sure they are properly propagated to lower-level blocks of a subproject using the following Tcl command syntax:

```
project -propagate_params
```

The output generated for this command specifies the top-level parameters that have changed. For example:

```
set_option -hdl_param -set DATA_WIDTH 32  
set_option -hdl_param -set FIFO_DEPTH 128
```

Note: This command is the same as using the Subproject Parameter Sync option from the GUI.

Archive Utility

The archive utility provides a way to archive, extract, or copy your design projects. An archive file is in Synopsys proprietary format and is saved to a file name using the sar extension. You can also use this utility to submit your design along with a request for technical support.

The archive utility is available through the Project menu in the GUI or through the project Tcl command. See the following for details:

For information about ...	See ...
Archiving, un-archiving, or copying projects	<i>Archiving Files and Projects, on page 133</i>
Archiving a project for technical support	<i>Web Menu, on page 488</i>

Project Archive Examples

The following example archives all files in the project and stores the files in the specified sar file:

```
project -archive -project c:/proj1.prj  
        -archive_file c:/archive/proj1.sar
```

The next example archives the project file (prj) and all local input files into the specified sar file.

```
project -archive -project c:/proj1.prj -archive_type local  
        -archive_file c:/archive/proj1.sar
```

The following example archives the project file (prj) only for selected srs files into the specified sar file. Any input source files that are in the project are not included.

```
project -archive -project c:/proj1.prj -archive_type customize  
        -add_srs -no_input -archive_file c:/archive/proj1.sar
```

Project Unarchive Example

The following example extracts the project files from c:/archive/proj1.sar to directory c:/proj1. All directories and sub-directories are created if they do not already exist.

```
project -unarchive -archive_file c:/archive/proj1.sar
        -dest_dir c:/proj1
```

Project Copy Examples

The following example copies only selected `srs` files for the project to the destination project file directory.

```
project -copy -project d:/test/proj_2.prj -copy_type customize
        -add_srs -no_input -dest_dir d:/test_1
```

The next example copies all input source files and `srs` files selected for the project to the destination project file directory.

```
project -copy -project d:/test/proj_2.prj -copy_type customize
        -dest_dir d:/test_1
```

project_data

The `project_data` command shows or sets properties of a project.

Syntax

```
project_data {-active [ projectName ] | -dir | -file }
```

The following table describes the command options.

Option	Description
-active	Set/show active project. With no argument, shows the active project. If <i>projectName</i> is specified, changes the active project to <i>projectName</i> .
-dir	Show directory of active project.
-file	Show the project file for the active project. The full path is included with the file name.

project_file

The `project_file` command manipulates and examines project files.

Syntax

```
project_file {-lib fileName [libName] | -name fileName [newPath] |  
-time fileName [format] | -date fileName | -type fileName |  
-savetype fileName [relative | absolute] -move fileName1 [fileName2] |  
-remove fileName | -top topModule |  
-tooltag applicationTagName | -toolargs [arguments] fileName }
```

The following table describes the command options.

Option	Description
-lib	Shows the project file library associated with <i>fileName</i> . If <i>libName</i> is specified, changes the project file library for the specified file to <i>libName</i> .
-name	Shows the project file path for the specified file. If <i>newPath</i> is specified, changes the location of the specified project file to the directory path specified by <i>newPath</i> .
-time	Shows the file time stamp. If a <i>format</i> is specified, changes the composition of the time stamp according to the combination of the following time formatting codes: %H (hour 00-23) %M (minute 00-59) %S (second 00-59) %d (day 01-31) %b (abbreviated month) %Y (year with century)
-date	Shows the file date.
-type	Shows the file type.
-savetype	Sets or shows whether a file is saved relative to the project or its absolute path.
-move	Positions <i>fileName1</i> after <i>fileName2</i> in HDL file list. If <i>fileName2</i> is not specified, moves <i>fileName1</i> to the top of the list.
-remove	Removes the specified file from the project file list.

Option	Description
-top	Sets or shows the top-level module of the specified file for the active implementation.
-tooltag	Sets or shows the third-party tool tag for the specified file.
-toolargs	Sets or shows the third-party tool tag arguments for the specified file.

Examples

List the files added to a project. Remove a file.

```
% project -filelist path_name1/cpu.v path_name1/cpu_cntrl.v
path_name2/cpu_cntrl.vhd
% project_file -remove path_name2/cpu_cntrl.vhd
```

project_folder

The project_folder command manipulates and examines attributes for project folders.

Syntax

```
project_folder [folderName] [-folderlist] [-filelist] [-printout] [-add] [-remove] [-r]
[-tooltag] [-toolargs]
```

The following table describes the command options.

Option	Description
<i>folderName</i>	Specifies the name of the folder for which attributes are examined.
-folderlist	Lists folders contained in the specified project folder.
-filelist	Lists files contained in the specified project folder.
-printout	Prints the specified project folder hierarchy including its files.
-add	Adds a new project folder.

Option	Description
-remove	Removes the specified project folder.
-r	Removes the specified project folder and all its containing sub-folders. Files are removed from the project folder, but are not deleted.
-tooltag	Sets or shows the third-party tool tag name.
-toolargs	Sets or shows the additional arguments for the third-party tool tag.

Examples

Add a folder and list the files added to a project folder.

```
% project_folder -add newfolder  
% project_folder -filelist newfolder
```

query_available_metrics

Shows metrics that can be queried for the design. If specified, only metrics matching the required values are shown. Otherwise, shows all metrics for all tables. You should use the `query_available_metrics` command primarily for scripting, since it returns a Tcl list. For a more readable format, use the `dump_metrics` command.

Syntax

```
query_available_metrics [[table.]name]
```

`[table.]name`

Name of the metric to query, optionally preceded by '`table.`'.

For details about specifying metrics, see the [Naming Conventions for Metrics, on page 55](#).

Examples

This command returns values in a list of the form as follows:

```
{ {name1 object1 jobname1} {name2 object2 jobname2} ... }
```

1. Show a Tcl list of metrics that can be queried for the current implementation:

```
% query_available_metrics
```

Format is { {name1 object1 jobname1} {name2 object2 jobname2} ... }:
{clock_conversion.icg_removed {} premap} {clock_conversion.icg_retained {}
premap} {clock_conversion.clean_clock_trees {} fpga_mapper}
{clock_conversion.clean_clock_pins {} fpga_mapper}
{clock_conversion.gated_clock_trees {} fpga_mapper}
{clock_conversion.gated_clock_pins {} fpga_mapper}
{clock_conversion.instancesConverted {} fpga_mapper}
{clock_conversion.instancesNotConverted {} fpga_mapper}
{hdl_compile.modified_files {} compiler} {hdl_compile.modified_modules {}
compiler} {hdl_compile.total_modules {} compiler} {hdl_compile.total_files
{} compiler} {misc.Part {} fpga_mapper} {runtime.realtime {} compiler}
{runtime.cputime {} compiler} {runtime.realtime {} premap}
{runtime.cputime {} premap} {runtime.realtime {} fpga_mapper}
{runtime.cputime {} fpga_mapper} {{timing.Worst Slack} {} fpga_mapper}
{utilization.LUT1 {} fpga_mapper} {utilization.LUT2 {} fpga_mapper}
{utilization.LUT3 {} fpga_mapper} {utilization.LUT4 {} fpga_mapper}

```
{utilization.LUT5 {} fpga_mapper} {utilization.LUT6 {} fpga_mapper}
{utilization.IBUF {} fpga_mapper} {utilization.IBUFG {} fpga_mapper}
{utilization.IOBUF {} fpga_mapper} {{utilization.I/O primitives} {}}
fpga_mapper} {utilization.BUFG {} fpga_mapper} {{utilization.I/O Register
bits} {} fpga_mapper} {{utilization.Total Luts} {} fpga_mapper}
```

2. Use a simple loop to show the values of all available metrics:

```
% foreach amt [query_available_metrics] {set metric
    [lindex $amt 0]; set object [lindex $amt 1];
    set job [lindex $amt 2]; puts "$metric $object:
[query_metric $metric -object $object -jobname $job]"}
```

Format is {{name1 object1 jobname1} {name2 object2 jobname2} ...}:

```
clock_conversion.icg_removed : 0
clock_conversion.icg_retained : 0
clock_conversion.clean_clock_trees : 1
clock_conversion.clean_clock_pins : 270
clock_conversion.gated_clock_trees : 0
clock_conversion.gated_clock_pins : 0
clock_conversion.instancesConverted : 0
clock_conversion.instancesNotconverted : 0
hdl_compile.modified_files : 28
hdl_compile.modified_modules : 11
hdl_compile.total_modules : 11
hdl_compile.total_files : 28
misc.Part : xc7vx485tffg1157-1
runtime.realtime : 9.881000
runtime.cputime : 9.828063
timing.Worst Slack : -0.445800
utilization.LUT1 : 31
utilization.LUT2 : 64
utilization.LUT3 : 45
utilization.LUT4 : 84
utilization.LUT5 : 57
utilization.LUT6 : 160
utilization.IBUF : 1
utilization.IBUFG : 1
utilization.IOBUF : 24
utilization.I/O primitives : 26
utilization.BUFG : 1
utilization.I/O Register bits : 0
utilization.Total Luts : 411
```

3. Show a Tcl list of metrics for the specified metric name:

```
% query_available_metrics cputime
```

Format is {{name1 object1 jobname1} {name2 object2 jobname2} ...}:

```
{runtime.cputime {} compiler} {runtime.cputime {} premap} {runtime.cputime
{} fpga_mapper}
```

4. Optionally, show a Tcl list of metrics for the specified table value:

```
% query_available_metrics runtime.cputime  
Format is {{name1 object1 jobname1} {name2 object2 jobname2} ...}:  
{runtime.cputime {} compiler} {runtime.cputime {} premap} {runtime.cputime  
{} fpga_mapper}
```

5. Enclose within curly braces {} whenever metrics contain spaces.

```
% query_available_metrics {timing.worst slack}  
Format is {{name1 object1 jobname1} {name2 object2 jobname2} ...}:  
{ {timing.Worst Slack} {} fpga_mapper}
```

See Also

See the related query commands below:

- [encryptIP, on page 56](#)
- [query_metric, on page 99](#)
- [query_metric_details, on page 101](#)

query_metric

Queries specific QoR metrics for the current implementation of a design.

Syntax

```
query_metric table.name [-object value] [-jobname value]
```

table.name

Name of the metric to query, preceded by '*table*'.:

-object *value*

Queries metrics associated with a specific object or global metrics if not specified.

-jobName *value*

Queries metrics associated with a specific job name or any job name if not specified.

For details about specifying metrics, see the [Naming Conventions for Metrics, on page 55](#).

Examples

Here are examples of how to query metrics for a design:

```
% query_metric clock_conversion.icg_removed  
0  
% query_metric clock_conversion.instancesConverted -jobname  
fpga_mapper  
1  
% query_metric runtime.realtime -jobname compiler  
3.15400  
% query_metric {timing.worst slack} -jobname fpga_mapper  
-0.445800  
% query_metric {utilization.total lut}s  
411
```

Suppose you have a design with compile points.

```
dump_metrics -show_queries

...
query_metric {timing.Worst Slack} -object r2p_cordic -jobname fpga_mapper
...
```

Then you can query worst slack for one of the compile points.

```
% query_metric {timing.Worst Slack} -object r2p_cordic
  -jobname fpga_mapper
-1.339500 ns {Estimated slack during compile point synthesis}
```

See Also

See the related query commands below:

- [encryptIP, on page 56](#)
- [query_available_metrics, on page 96](#)
- [query_metric_details, on page 101](#)

query_metric_details

Queries information about a QoR metric from the current implementation. Exactly one metric must match.

Syntax

```
query_metric table.name [-object value] [-jobname value]
```

table.name

Name of the metric to query, preceded by '*table.*'.

-object *value*

Queries metrics associated with a specific object or a global metric if not specified.

-jobName *value*

Queries metrics associated with a specific job name or any job name if not specified.

For details about specifying metrics, see the [Naming Conventions for Metrics, on page 55](#).

Examples

The Tcl command returns a list of three values: <*value*> <*units*> <*comment*>.

```
% query_metric_details clock_conversion.clean_clock_pins  
270 {} {Number of clock pins driven by non-gated/non-generated clock  
trees}  
% query_metric_details clock_conversion.icg_removed  
0 {} {Number of ICG latches removed}  
% query_metric_details runtime.realpath -jobname compiler  
3.154000 seconds {}  
% query_metric_details runtime.cputime -jobname fpga_mapper  
9.828063 seconds {}  
% query_metric_details {timing.worst slack} -jobname fpga_mapper  
-0.445800 ns {}  
% query_metric_details utilization.lut1
```

```
31 {} {}
```

Suppose you have a design with compile points.

```
dump_metrics -show_queries
```

```
...
query_metric {timing.Worst Slack} -object r2p_cordic -jobname fpga_mapper
...
```

Then you can query worst slack for one of the compile points.

```
% query_metric_details {timing.Worst Slack} -object r2p_cordic
    -jobname fpga_mapper
-1.339500 ns {Estimated slack during compile point synthesis}
```

See Also

See the related query commands below:

- [encryptIP, on page 56](#)
- [query_available_metrics, on page 96](#)
- [query_metric, on page 99](#)

recording

Allows you to record and store the Tcl commands generated when you work on your projects in the GUI. You can use this command for creating job scripts. The complete syntax for the recording command is:

```
recording
    -on|-off
    -file [historyLogFile]
    -save [historyLogFile]
    -state
    -edit [filename]
```

In the command line:

- **on|off** – turns Tcl command recording on or off. Recording mode is off by default.
- **file** – if you specify a history log file name, this option uses the specified file in which to store the recorded Tcl commands for the current session.

If you do not specify a history log name, reports the name of the current history log file.

- **save** – if you do not specify a file name, updates the current history log. If you specify a history log file name, saves Tcl command history to the specified file.
- **state** – returns the Boolean value of recording mode.
- **-edit** - displays the Tcl command log file in a text editor.

Examples

Turn on recording mode and save the Tcl commands in the `cpu_tcl_log` file created.

```
% recording -on  
% recording -file cpu_tcl_log
```

report_clocks

Reports the clocks in the design database.

Syntax

```
report_clocks [-netlist [srsNetlistFile] [-csv_format] [-out fileName]
```

Arguments and Options

srsNetlistFile

The name of the srs netlist file. If this optional argument is not specified, the netlist file is taken from the active project implementation.

-csv_format

Displays the report in spread-sheet format.

-out

Specifies the name of the output report file (default name is *design-Name_clk.rpt*).

Description

The `report_clocks` command generates a report of the clocks found in the design database. The report includes a listing of the clock domain, parent clock, and clock type for each clock. If the `-csv_format` option is included, the report is output in spread-sheet format.

Examples

```
report_clocks c:/designs/mem_ctrl/mem_ctrl.srs -csv_format
```

report_messages

Queries messages from jobs based on ID or severity. This can be used to show duplicate messages that were suppressed in the log files.

Syntax

```
report_messages logFile [-id value] [-severity value] [-out value] [-outa value]
```

logFile

Specifies one or more log files to query for message details.

-*id* *value*

Restricts report to messages matching this id. Use the * or % wildcard to match any string.

-*severity* *value*

Limits messages to a specific severity. Can specify one or more messages as an error, warning, note, or advice. Multiple severities can be specified. If none is specified, all types are shown.

-*out* *value*

Name of the output file to be written rather than writing to the Tcl window.

-*outa* *value*

Name of the output file to be appended rather than writing to the Tcl window.

Output Format

Running the `report_messages` command produces a list of messages. Messages are displayed in the following format with each message beginning on a new line:

ID {messageText}

Examples

1. Query BN132 messages from the test.srr log file.

```
report_messages test.srr -id BN132
```

2. Query error and warning messages from the test.srr log file.

```
report_messages test.srr -severity error warning
```

3. Query critical warnings (CW) or downgradable errors (DE). You can search for these messages using wildcards. For example:

```
report_messages test.srr -id DE*
```

4. Query error and warning messages from the test.srr log file, and writes output to a file called messages in the current working directory.

```
report_messages test.srr -severity not warning -out messages
```

report_message_summary

Retrieves a summary of the messages in the log file. This summary contains a list of the message IDs and the number of occurrences for each type, along with their message descriptions.

Syntax

```
report_message_summary logFile
```

logFile

Specifies a log file to query for the message summary.

Examples

```
report_message_summary test.srr
```

run_config

The `run_config` command lets you set up the subproject implementations and configure how to run these implementations with the top-level project. You can specify:

- Which implementations to run for each subproject.
- Whether to run the subproject top-down or bottom-up.
- Which options to synchronize for all the subprojects.

Syntax

```
run_config
    -add implementationList [-impl implementationName]
    -set implementationList [-impl implementationName]
    -run_type runType [-subproject projectName] [-impl implementationName]
    -list
    -clear
    -reset_default
```

The following table describes the `run_config` command options.

Option	Description
-add	Lets you add subproject implementations to run with the top-level project for this configuration. Specify <i>implementationName</i> as { <i>projectName</i> <i>implName</i> }.
-set	Lets you select the subproject implementations to run with the top-level project for this configuration. Specify <i>implementationName</i> as { <i>projectName</i> <i>implName</i> }.
-impl	Specifies the parent implementation to apply for this configuration run. The default is the active implementation.
-subproject	Specifies the path for the subproject.
-run_type	Specifies how to run the subprojects. You can choose: <ul style="list-style-type: none"> • top_down • bottom_up

Option	Description
-list	Lists the current subproject implementations to run with the top-level project for this configuration.
-clear	For this configuration, removes all the subprojects for the top-level project.
-reset_default	Resets the subprojects back to its original settings to run with the top-level project for this configuration.

Examples

Set the subproject implementations for the top-level project to run with the current configuration.

```
run_config -set -impl rev_1
{block2/block2.prj|rev_1 block3/block3.prj|rev_1
 block1/block1.prj|rev_1 control/control.prj|rev_1}
```

Specify whether to run the `top_down` or `bottom_up` flow for the specified subproject.

```
run_config -run_type top_down -impl rev_1 -subproject
control/control.prj
```

run_tcl

The `run_tcl` command lets you synthesize your project using a Tcl script file from the Tcl Script window of the synthesis tool.

Syntax

run_tcl [-fg] tclFile

You can also use the following command:

source tclFile

These commands are equivalent.

The following table describes the `run_tcl` command options.

Option	Description
-fg	Synthesizes the project in foreground mode.
<i>TclFile</i>	Specifies the name of the Tcl file used to synthesize the project. To create a Tcl Script file, see Creating a Tcl Synthesis Script, on page 574 .

run_config

The `run_config` command lets you set up the subproject implementations and configure how to run these implementations with the top-level project. You can specify:

- Which implementations to run for each subproject.
- Whether to run the subproject top-down or bottom-up.
- Which options to synchronize for all the subprojects.

Syntax

```
run_config
  -add implementationList [-impl implementationName]
  -set implementationList [-impl implementationName]
  -run_type runType [-subproject projectName] [-impl implementationName]
  -list
  -clear
  -reset_default
```

The following table describes the `run_config` command options.

Option	Description
-add	Lets you add subproject implementations to run with the top-level project for this configuration. Specify <i>implementationName</i> as { <i>projectName</i> <i>implName</i> }.
-set	Lets you select the subproject implementations to run with the top-level project for this configuration. Specify <i>implementationName</i> as { <i>projectName</i> <i>implName</i> }.
-impl	Specifies the parent implementation to apply for this configuration run. The default is the active implementation.

Option	Description
-subproject	Specifies the path for the subproject.
-run_type	Specifies how to run the subprojects. You can choose: <ul style="list-style-type: none"> • top_down • bottom_up
-list	Lists the current subproject implementations to run with the top-level project for this configuration.
-clear	For this configuration, removes all the subprojects for the top-level project.
-reset_default	Resets the subprojects back to its original settings to run with the top-level project for this configuration.

Examples

Set the subproject implementations for the top-level project to run with the current configuration.

```
run_config -set -impl rev_1
{block2/block2.prj|rev_1 block3/block3.prj|rev_1
 block1/block1.prj|rev_1 control/control.prj|rev_1}
```

Specify whether to run the top_down or bottom_up flow for the specified subproject.

```
run_config -run_type top_down -impl rev_1 -subproject
control/control.prj
```

run_tcl

The `run_tcl` command lets you synthesize your project using a Tcl script file from the Tcl Script window of the synthesis tool.

Syntax

run_tcl [-fg] tclFile

You can also use the following command:

source tclFile

These commands are equivalent.

The following table describes the `run_tcl` command options.

Option	Description
<code>-fg</code>	Synthesizes the project in foreground mode.
<code>TclFile</code>	Specifies the name of the Tcl file used to synthesize the project. To create a Tcl Script file, see Creating a Tcl Synthesis Script, on page 574 .

sdc2fdc

Translates legacy FPGA timing constraints to Synopsys FPGA timing constraints.

Syntax

sdc2fdc

Run it from the Tcl window in the synthesis tool.

See also

- [Converting SDC to FDC, on page 191](#) in the User Guide
- [sdc2fdc Conversion, on page 135](#) in the *Reference Manual*

Examples of sdc2fdc Translation

The following are examples of feedback after running the command. For information about the translated FDC file and handling the error messages, see [sdc2fdc Conversion, on page 135](#) in the *Reference Manual*.

```
% sdc2fdc
```

```

INFO: Translation successful.
See:"D:/bugs/timing_88/clk_prior/scratch/FDC_constraints/rev_2
      /top_translated.fdc"
Replace your current *.sdc files with this one.

INFO: Automatically updating your project to reflect the new
constraint file(s)
Do "Ctrl+S" to save the new settings.

% sdc2fdc

ERROR: Bad -from list for define_false_path: {my_inst}
Missing qualifier(s) (i: p: n: ...)
ERROR: Translation problems were found.
See:"D:/bugs/timing_88/clk_prior/scratch/FDC_constraints/rev_2
      /top_translate.log" for details.
_translate.log

ERROR: Bad -from list for define_false_path {my_inst}
Missing qualifier(s) (i: p: n: ...)

"define_false_path -from {my_inst} -to i:abc.def.g_reg
 -through {n:bar}"
Synplicity SDC source file: D:/bugs/timing_88/clk_prior/scratch
      /top.sdc.
Line number: 79

```

set_option

The **set_option** command sets options for the technology (device) as well as for the design project.

Syntax

set_option *-optionName optionValue*

For syntax and descriptions of the options and related values, see one of the following tables:

- [Device Options for set_option/get_option](#)
- [Project Options for set_option/get_option](#)

Device Options for set_option/get_option

The following table lists *generic* device arguments for the technology, part, and speed grade. These are the options on the Implementation Options-> Device tab.

Information on all other Implementation Options tabs are listed in the next section, [Project Options for set_option/get_option, on page 113](#).

Option Name	Description
-technology parameter	Sets the target technology for the implementation. <i>parameter</i> is the string for the vendor architecture. Check the Device panel in the GUI or see Device Panel, on page 365 , for a list of supported families.
-part part_name	Specifies a part for the implementation. Check the Device panel of the Implementation Options dialog box (see Device Panel, on page 365) for available choices.
-speed_grade -value	Sets the speed grade for the implementation. Check the Device panel of the Implementation Options dialog box (see Device Panel, on page 365) for available choices.
-package value	Sets the package for the implementation. This option is not available for certain vendor families, because it is set in the place-and-route software. Check the Device panel of the Implementation Options dialog box (see Device Panel, on page 365) for available choices.
-grade -value	Same as -speed_grade. Included for backwards compatibility.

In general, device options are technology-specific, or have technology-specific defaults or limitations. For vendor-specific details, see [synhooks File Syntax, on page 280](#).

Project Options for set_option/get_option

Below is a list of options for the set_option and get_option commands. Click on the option below for the corresponding description and GUI equivalents. Options set through the Device tab are listed in [Device Options for set_option/get_option, on page 113](#).

analysis_constraint	auto constrain io
autosm	beta vfeatures
block	compiler_compatible
compiler_constraint	constraint
continue_on_error	default_enum_encoding
disable_io_insertion	dup
enable64bit	fanin_limit
fanout_limit	fix_gated_and_generated_clocks
force_gsr	frequency
frequency auto	hdl_define
hdl_param	help
ignore_undefined_libs	include_path
incremental	job (PR)
libext	library_path
log_file	loop_limit
map_logic	maxfan
maxfanin	maxterms
max_parallel_jobs	max_terms_per_macrocel
multi_file_compilation_unit	no_sequential_opt
num_critical_paths	num_startend_points
pipe	project_relative_includes
reporting_reportType	resolve_multiple_driver
resource_sharing	result_file
retiming	run_prop_extract
rw_check_on_ram	safe_case
supporttypedflt	symbolic_fsm_compiler

<code>synthesis_onoffPragma</code>	<code>topModule</code>
<code>updateModelsCp</code>	<code>vlogStd</code>
<code>writeAprConstraint</code>	<code>writeDeclaredClocksOnly</code>
<code>writeVerilog</code>	<code>writeVhdl</code>

Option	Description	GUI Equivalent
-analysis_constraint <i>path/filename.adc</i>	Specifies the analysis design constraint file (adc) you can use to modify constraints for the stand-alone Timing Analyst only.	Constraint File section on the Timing Report Generation Parameters dialog box
-auto constrain_io 1 0	Determines whether default constraints are used for I/O ports that do not have user-defined constraints. When disabled, only <code>define_input_delay</code> or <code>define_output_delay</code> constraints are considered during synthesis or forward-annotated after synthesis. When enabled, the software considers any explicit <code>define_input_delay</code> or <code>define_output_delay</code> constraints, as before.	Use clock period for unconstrained IO check box, Constraints Panel
-autosm 1 0	Enables/disables the FSM compiler.	FSM Compiler check box, Options Panel
-symbolic_fsm_compiler 1 0		
-beta_vfeatures 1 0	Enables/disables the use of Verilog compiler beta features.	Beta Features for Verilog, Verilog Panel
-block 1 0	Enables/disables I/O insertion in some technologies.	Disable I/O Insertion check box, Device Panel
-disable_io_insertion 1 0		

Option	Description	GUI Equivalent
-compiler_compatible 1 0	Disables pushing of tristates across process/block boundaries.	<i>Complement</i> of the Push Tristates Across Process/Block Boundaries check box, VHDL Panel and Verilog Panel
-compiler_constraint constraintFile	When multiple constraint files are defined, specify which constraint files are to be used from the Constraints tab of the Implementation Options panel.	Constraints Files, Constraints Panel
-constraint -option	<p>Manipulates constraint files in the project:</p> <ul style="list-style-type: none"> -enable/disable <i>filename</i> – adds or removes constraint file from active implementation -list – lists all enabled constraint files in active implementation -all – enables all constraint files in active implementation -clear – disables all constraint files in active implementation 	Constraint Files, Constraints Panel
-default_enum_encoding default onehot gray sequential	(VHDL only) Sets the default for enumerated types.	Default Enum Encoding, VHDL panel (see VHDL Panel and Verilog Panel)
-disable_io_insertion 1 0 -block 1 0	<p>Enables/disables I/O insertion in some technologies.</p> <p>For more information about the impact of using this command, see syn_insert_pad, on page 119.</p>	Disable I/O Insertion, Device Panel

Option	Description	GUI Equivalent
-dup	For Verilog designs, allows the use of duplicate module names. When true, the last definition of the module is used by the software and any previous definitions are ignored.	Allow Duplicate Modules, Verilog Panel
	You should not use duplicate module names in your Verilog design, therefore, this option is disabled by default. However, if you need to, you can allow for duplicate modules by setting this option to 1.	
-enable64bit 1 0	Enables/disables the 64-bit mapping switch. When enabled, this switch allows you to run client programs in 64-bit mode, if available on your system.	Enable 64-bit Synthesis, Options Panel
-fanin_limit value	Specifies the maximum fan-in.	Maximum Cell Fanin, Device Panel
-maxfanin 1 0		
-fanout_limit value	Sets the fanout limit guideline for the current project.	Fanout Guide, Device Panel
-maxfan value		
-fix_gated_and_generated_clocks 1 0	Performs gated and generated clock optimization when enabled. See Working with Gated Clocks, on page 590 and Optimizing Generated Clocks, on page 621 for details.	Gated Clocks, GCC Panel
-force_gsr yes no auto	The default value is no. Enables (yes) or disables forced use of the global set/reset routing resources. When the value is auto, the synthesis tool decides whether to use the global set/reset resources. The default value is auto.	Force GSR Usage, Device Panel

Option	Description	GUI Equivalent
-frequency <i>value</i>	Sets the global frequency.	Frequency, Constraints Panel
-frequency auto	Enables/disables auto constraints.	Auto Constrain, Constraints Panel
-hdl_define	For Verilog designs; used for extracting design parameters and entering compiler directives.	Compiler Directives and Design Parameters, Verilog Panel
-hdl_param	Shows or sets HDL parameter overrides. See hdl_param, on page 72 for command syntax.	Use this command in the Tcl window of the UI.
-help	This option is useful for getting syntax help on the various implementation options used for compiling and mapping a design. For examples, see help for set_option, on page 128 .	Use this command in the Tcl window of the UI.
-ignore_undefined_libs 1 0	(VHDL only) When enabled (default), the compiler will ignore any declared library files not included with the source file. In previous releases, the missing library file would cause the synthesis tool to error out. To set this option to error out when a library file is missing (as in previous releases), use 0 for the command value.	Not available in the UI

Option	Description	GUI Equivalent
-include_path <i>path</i>	(Verilog only) Defines the search path used by the 'include' command in Verilog design files.	Include Path Order,
/extra_input/	Argument <i>path</i> is a string that is a semicolon-delimited list of	Verilog Panel, on page 378
	directories where the included design files can be found. The software searches for include files in the following order:	
	<ul style="list-style-type: none"> • First, the source file directory. • Then, looks in the included path directory order and stops at the first occurrence of the included file it finds. • Finally, the project directory. <p>The include paths are relative. Use the <code>project_relative_includes</code> option to update older project files.</p> <p>The archive utility allows you to add the <code>extra_input</code> directory path for all include files and copies them to your project. Use the Add extra input path to project option on the Un-Archive Utility dialog box.</p>	
-job <i>PR_job_name</i>	If enabled, runs the specified place-and-route job with the appropriate vendor-specific place-	Specify the place-
-option enable_run 1 0	and-route tool after synthesis.	and-route job you want to run for the specified implementation.
		See Place and Route Panel .
-libext	Adds library extensions to Verilog library files included in your design for the project and	Library Extensions (space separated)
<i>.libextName1 .libextName2 ...</i>	searches the directory paths you specified that contain these	for each unique
	Verilog library files. To use library	file extension,
	Using Library Extensions for Verilog Library Files , see page 55.	Verilog Panel .

Option	Description	GUI Equivalent
-library_path <i>directory_pathname</i>	<p>For Verilog designs, specifies the paths to the directories which contain the library files to be included in your design for the project. Defines the search path used by the tool to include all the Verilog design files for your project. The argument <i>directory_pathname</i> is a string that specifies the directories where these included library files can be found. The software searches for all included Verilog files and the tool determines the top-level module. The names of files read from the library path must match module names. Mismatches result in error messages.</p>	Library Directories on Verilog Panel .
-log_file <i>logFileName</i>	<p>Allows you to change the name for the default log file. For example:</p> <pre>set_option -log_file test</pre> <p>generates the <i>synlog\test_fpga_mapper.srr</i> file in the Implementation Directory after synthesis is run.</p>	Enter command from the Tcl window
looplimit <i>loopLimitValue</i>	<p>Allows you to override the default compiler loop limit value of 2000 in the RTL. You can apply loop limits using the Verilog <i>loop_limit</i> or the VHDL <i>syn_looplimate</i> directive. For details about these directives, see loop_limit, on page 28 and syn_looplimate, on page 133.</p>	Loop Limit, Verilog Panel and VHDL Panel .
-map_logic <i>1 0</i>	Turns on direct mapping to technology-specific devices during synthesis.	Map Logic to Macrocells, Device Panel .
-maxfan <i>value</i>	Sets the fanout limit for the current project. The limit is value is guideline for the tool rather than a hard limit.	Fanout Guide, Device Panel
-fanout_guide <i>value</i>		

Option	Description	GUI Equivalent
-maxfanin 1 0	Specifies the maximum fan-in.	Maximum Cell Fanin, Device Panel
-fanin_limit value		
max_parallel_jobs n	Lets you run multiprocessing with compile points. This allows the synthesis software to run multiple, independent compile point jobs simultaneously, providing additional runtime improvements for the compile point synthesis flow. For information on setting the maximum number of parallel synthesis jobs, see Setting Number of Parallel Jobs, on page 573 .	Maximum number of parallel mapper jobs, on the Configure Compile Point Process dialog box.
-maxterms value	Sets the maximum number of terminals per macrocell. This option is available only if -map_logic is set to true.	Maximum Terms/Macrocell, Device Panel
-max_terms_per_macrocel value		
-multi_file_compilation_unit 1 0	When you enable the Multiple File Compilation Unit switch, the Verilog compiler uses the compilation unit for modules defined in multiple files.	Verilog Panel
-no_sequential_opt 1 0	Enables or disables the sequential optimizations for the design. (Note that unused registers will still be removed from the design.) The default value is false (sequential optimizations are performed). When true, delay and area size might increase. Value can be 1 or true, 0 or false. With this option enabled, the FSM Compiler option is effectively disabled.	Device Panel
-num_critical_paths value	Specifies the number of critical paths to report in the timing report.	Number of Critical Paths, Timing Report Panel

Option	Description	GUI Equivalent
-num_startend_points <i>value</i>	Specifies the number of start and end points to include when reporting paths with the worst slack in the timing report.	Number of Start/End Points, Timing Report Panel . Number of Start/End Points, Timing Report Generation dialog box.
-pipe 1 0	Runs designs at a faster frequency by moving registers into the multiplier, creating pipeline stages.	Pipelining, Device Panel
-project_relative_includes 1 0	Enables/disables the Verilog include statement to be relative to the project, rather than a verilog file. For projects built with software after 8.0, the include statement is no longer relative to the files but is relative to the project: project_relative (1). See Updating Verilog Include Paths in Older Project Files, on page 78 in the <i>User Guide</i> for information about updating older project files.	Include Path Order, Verilog Panel
-reporting <i>reportType</i>	Sets parameters for the stand-alone Timing Analyst report. See Timing Report Parameters for set_option, on page 126 for details.	Analysis->Timing Analyst command: Timing Report Generation Parameters
-resolve_multiple_driver 1 0	When a net is driven by a VCC or GND and active drivers, enable this option to connect the net to the VCC or GND driver. The default for this option is disabled (0). See Resolve Mixed Drivers Option, on page 129 for details.	Resolve Multiple Drivers, Device Panel

Option	Description	GUI Equivalent
-resource_sharing 1 0	<p>Enables or disables resource sharing globally. This is a compiler-specific optimization, and does not affect resource sharing in the mapper.</p> <p>To enable or disable individual modules, use the <code>syn_sharing</code> directive.</p>	Resource Sharing, Device Panel
-result_file filename	Specifies the name of the results file.	Result File Name and Result Format, Implementation Results Panel
-retiming 1 0	When enabled (1), registers may be moved into combinational logic to improve performance. The default value is 0 (disabled).	Retiming, Device Panel
-run_prop_extract 1 0	Enables/disables the annotation of certain generated properties relating to clocks and expansion onto the RTL view. This enables the Tcl <code>expand</code> and <code>find</code> commands to work correctly with clock properties.	Options Panel
-rw_check_on_ram 1 0	<p>Enabling this option automatically inserts bypass logic when required to prevent simulation mismatch in read-during-write scenarios.</p> <p>For more information about using this option in conjunction with the <code>syn_ramstyle</code> attribute, see syn_ramstyle, on page 203.</p>	Read Write Check on RAM, Device Panel
-safe_case 1 0	When enabled, the high reliability safe case option turns off sequential optimizations for counters, FSM, and sequential logic to increase the circuit's reliability.	Preserve and Decode Unreachable States (FSM, Counters, Sequential Logic), High Reliability Panel

Option	Description	GUI Equivalent
-supporttypedfit 1 0	<p>When enabled (1), the compiler passes init values through a <code>syn_init</code> property to the mapper. For more information, see VHDL Implicit Data-type Defaults, on page 345.</p>	Implicit Initial Value Support, VHDL Panel
-symbolic_fsm_compiler 1 0	<p>Enables/disables the FSM compiler. Controls the use of FSM synthesis for state machines. The default is false (FSM Compiler disabled). Value can be 1 or true, 0 or false.</p> <p>When this option is true, the FSM Compiler automatically recognizes and optimizes state machines in the design. The FSM Compiler extracts the state machines as symbolic graphs, and then optimizes them by re-encoding the state representations and generating a better logic optimization starting point for the state machines.</p> <p>However, if you turn off sequential optimizations for the design, FSM Compiler and/or the <code>syn_state_machine</code> directive and <code>syn_encoding</code> attribute are effectively disabled.</p> <p>See -no_sequential_opt 1 0 for more information on turning off sequential optimizations.</p>	FSM Compiler check box, Device Panel
-synthesis_onoffPragma 1 0	<p>Determines whether code between synthesis on/off directives is ignored.</p> <p>When enabled, the software ignores any VHDL code between <code>synthesis_on</code> and <code>synthesis_off</code> directives. It treats these third-party directives like <code>translate_on</code>/off directives (see translate_off/translate_on, on page 306 for details).</p>	Synthesis on/off Implemented as Translate on/Off, VHDL Panel

Option	Description	GUI Equivalent
-top_module name	Specifies the top-level module. If the top-level entity does not use the default work library to compile the VHDL files, you must specify the library file where the top-level entity can be found. To do this, the top-level entity name must be preceded by the VHDL library followed by the dot (.)	Top-level Entity/Module, VHDL Panel or Verilog Panel
-update_models_cp 1 0	Determines whether (1) or not (0) changes inside a compile point can cause the compile point (or top-level) containing it to change accordingly.	Update Compile Point Timing Data, Device Panel
-vlog_std v2001 v95 sysv	The default Verilog standard for new projects is SystemVerilog. Turning off both options in the Verilog panel defaults to v95.	Verilog 2001, SystemVerilog, Verilog Panel
-write_apr_constraint 1 0	Writes vendor-specific constraint files.	Write Vendor Constraint File, Implementation Results Panel
-write_declared_clocks_only 1 0	Forward-annotates declared clocks only to the LPF file. By default, this option is enabled. See Write Declared Clocks Only, on page 329 , for details.	Write Declared Clocks Only, Device Panel
-write_verilog 1 0	Writes Verilog or VHDL mapped netlists.	Write Mapped Verilog/VHDL Netlist, Implementation Results Panel
-write_vhdl 1 0		

Timing Report Parameters for set_option

The following lists the parameters for the stand-alone timing report (ta file).

async_clock	margin
ctd	netlist
filename	number_paths
filter	output_srm
gen_output_srm	

Reporting Option	Description
-reporting_async_clock	Generates a report for paths that cross between clock groups using the stand-alone Timing Analyst.
-reporting_ctd slack end_point off	<p>Controls how the <i>design_ctd.txt</i> (correlation timing dump) file is generated when the Timing Analyst is run. You can specify one of the following values:</p> <ul style="list-style-type: none"> slack – The timing information in the ctd file is sorted by slack. This is the default. end_point – The timing information in the ctd file is sorted by end points. off – Turns off generating the ctd file. <p>The ctd file contains a timing summary of the design that is used by the Timing Report View to display and analyze the synthesis timing for the design and correlate this synthesis timing with the P&R timing in the GUI.</p>
-reporting_filename <i>filename.ta</i>	Specifies the standard timing report file (ta) generated from the stand-alone Timing Analyst.

Reporting Option	Description
-reporting_filter <i>filter options</i>	<p>Generates the standard timing report based on the filter options you specify for paths, such as:</p> <ul style="list-style-type: none"> • From points • Through points • To points <p>For more information, see:</p> <ul style="list-style-type: none"> • Timing Report Generation Parameters, on page 441. • Combining Path Filters for the Timing Analyzer, on page 445 • Timing Analyzer Through Points, on page 444. • Specifying From, To, and Through Points, on page 190.
-reporting_gen_output_srm 1 0	Specifies the new name of the output SRM File when you change the default name. If this option is set to 1, this new name is used for the output srm file after you run the stand-alone Timing Analyst.
-reporting_margin <i>slackValue</i>	You can specify a slack margin to obtain a range of paths within the worst slack time for the design after you run the stand-alone Timing Analyst.
-reporting_netlist <i>filename.srm</i>	Specifies the associated gate-level netlist file (srm) generated from the stand-alone Timing Analyst.
-reporting_number_path <i>numberOfPaths</i>	You can specify the number of critical paths to report after you run the stand-alone Timing Analyst.
-reporting_output_srm 1 0	Allows you to change the name of the output srm file. If you enable the output SRM File option, you can change this default name.

For GUI equivalent switches for these parameters, see [Timing Report Generation Parameters, on page 441](#).

help for set_option

This option is useful for getting syntax help on the various implementation options used for compiling and mapping a design, especially since this list of options keeps growing.

Syntax

```
% set_option -help
```

Usage:

```
set_option optionName optionValue [-help [value]]
```

Where:

- *optionName*—specifies the option name.
- *optionValue*—specifies the option value.
- -**help** [*value*]—to get help on options. Use:
 - -**help** * for the list of options
 - -**help** *optionName* for a description of the option

Examples

To list all option commands in the Tcl window:

```
set_option -help *
```

To list all option commands beginning with the letters fi in the Tcl window:

```
% set_option -help fi*
```



```
fixgatedclocks
fixgeneratedclocks
fixsmult
```

To get help on a specific option in the Tcl window:

```
% set_option -help fixgatedclocks
0: Don't fix; 1: fix, no report; 2: fix, report exception
registers; 3: fix, report all registers
```

Use the following Tcl commands to print a description of the options:

```
% set_option -help c*
% set hl [set_option -help c*]
% puts $hl
% foreach option $hl { puts "$option:\t [set_option -help
$option]"; }
```

This example will print a list of `set_option` options that begin with the letter c.

Resolve Mixed Drivers Option


Use the Resolve Mixed Drivers option when mapping errors are generated for input nets with mixed drivers. You might encounter the following messages in the log file:

```
@A:BN313 | Found mixed driver on pin pin:data_out inst:dpram_lut3
of work.dpram(verilog), use option "Resolve Mixed Drivers" in
"Device" tab of "Implementation Options" to automatically resolve
this
@E:BN314 | Net "GND" in work.test(verilog) has mixed drivers

@A:BN313 | Found mixed driver on pin pin:Q[0] inst:dff1.q of
PrimLib.sdffr(prim), use option "Resolve Mixed Drivers" in
"Device" tab of "Implementation Options" to automatically resolve
this
@E:BN314) | Net "VCC" in work.test(rtl) has mixed drivers
```

Whenever a constant net (GND or VCC) and an active net are driving the same output net, enable the Resolve Mixed Drivers option so that synthesis can proceed. To set this switch:

- Check Resolve Mixed Drivers on the Device tab of the Implementation Options panel.

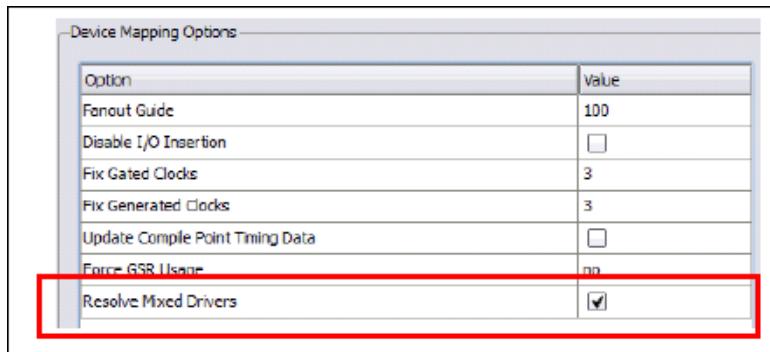

- Use the Tcl command, `set_option -resolve_multiple_driver 1.`

By default this option is disabled and set to:

```
set_option -resolve_multiple_driver 0.
```

When you rerun synthesis, you should now see messages like the following in the log file:

```
@W:BN312 | Resolving mixed driver on net GND, connecting output
pin:data_out inst:dpram_lut3 of work.dpram(verilog) to GND
@N:BN116) | Removing sequential instance dpram_lut3.dout of
view:PrimLib.dffe(prim) because there are no references to its
outputs
@N:BN116 | Removing sequential instance dpram_lut3.mem of
view:PrimLib.raml(prim) because there are no references to its
outputs

@W:BN312 | Resolving mixed driver on net VCC, connecting output
pin:Q[0] inst:dff1.q of PrimLib.sdffr(prim) to VCC
@N:BN116 | Removing sequential instance dff1.q of
view:PrimLib.sdffr(prim) because there are no references to its
outputs
```

Example – Active Net and Constant GND Driving Output Net (Verilog)

```
module test(clk,data_in,data_out,radd,wradd,wr,rd);
  input clk,wr,rd;
  input data_in;
  input [5:0]radd,wradd;
  output data_out;
  // component instantiation for shift register module
  shr1 srl_lut0 (
```

```
.clk(clk),
.sren(wr),
.srin(data_in),
.srout(data_out)
);
// Instantiation for ram
dpram dpram_lut3 (
    .clk(clk),
    .data_in(data_in),
    .data_out(data_out),
    .raddr(raddr),
    .wraddr(wraddr),
    .wr(wr),
    .rd(rd)
);

endmodule

module shrl (clk,sren,srin,srout);
input clk;
input sren;
input srin;
output srout;

parameter width = 32;
reg [width-1:0] sr;

always@(posedge clk)
begin
    if (sren == 1)
        begin
            sr <= {sr[width-2:0], srin};
        end
    end
// Constant net driving

// the output net
assign srout = 1'b0;
endmodule

module dpram(clk,data_in,data_out,raddr,wraddr,wr,rd);
input clk,wr,rd;
input data_in;
input [5:0]raddr,wraddr;
output data_out;
```

```

reg dout;
reg [0:0]mem[63 :0];

always @ (posedge clk)
begin
    if(wr)
        mem[wradd] <= data_in;
end


always @ (posedge clk)
begin
    if(rd)
        dout <= mem[radd];
end

assign data_out = dout;

endmodule

```

See the following RTL and Technology views; the Technology view shows the constant net tied to the output.

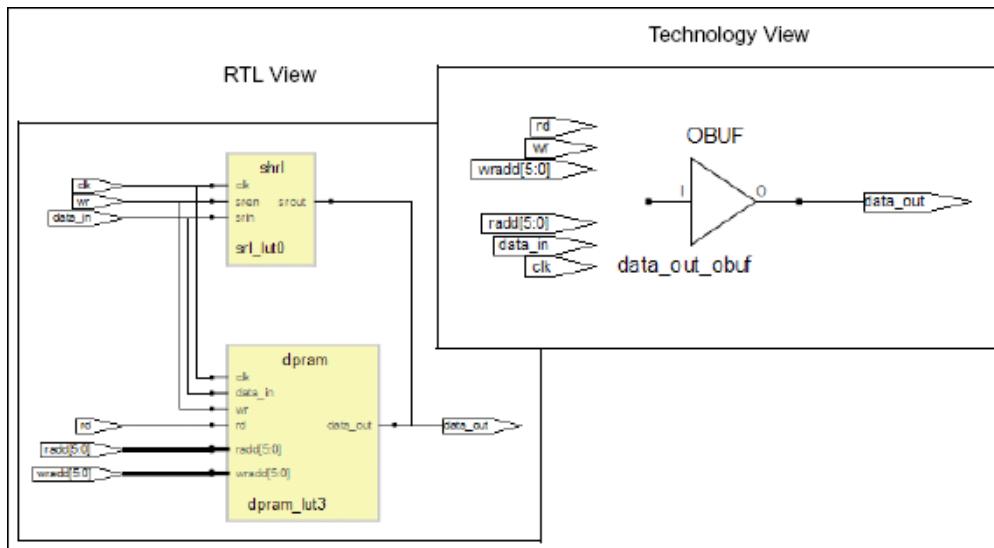

Example - Active Net and Constant VCC Driving Output Net (VHDL)

```
library ieee;
use ieee.std_logic_1164.all;

entity test is
port (clk,rst : in std_logic;
      sr_en : in std_logic;
      data : in std_logic;
      data_op : out std_logic );
end entity test;

architecture rtl of test is
component shrl
generic (sr_length : natural);
port (clk : in std_logic;
      sr_en : in std_logic;
      sr_ip : in std_logic;
      sr_op : out std_logic );
end component shrl;

component d_ff
port (data, clk, rst : in std_logic;
      q : out std_logic );
end component d_ff;

begin
-- instantiation of shift register
shift_register : shrl
generic map (sr_length => 64)
port map (clk => clk,
          sr_en => sr_en,
          sr_ip => data,
          sr_op => data_op );
-- instantiation of flipflop
dff1 : d_ff
port map (data => data,
          clk => clk,
          rst => rst,
          q => data_op );
end rtl;

library ieee;
use ieee.std_logic_1164.all;
use ieee.numeric_std.all;
```

```

entity shrl is
generic (sr_length : natural);
port (clk : in std_logic;
      sr_en : in std_logic;
      sr_ip : in std_logic;
      sr_op : out std_logic );
end entity shrl;

architecture rtl of shrl is
signal sr_reg : std_logic_vector(sr_length-1 downto 0);
begin
  shreg_lut: process (clk)
  begin
    if rising_edge(clk) then
      if sr_en = '1' then
        sr_reg <= sr_reg(sr_length-2 downto 0) & sr_ip;
      end if;
    end if;
  end process shreg_lut;
-- Constant net driving output net
sr_op <= '1';
end architecture rtl;


library IEEE;
use IEEE.std_logic_1164.all;

entity d_ff is
port (data, clk, rst : in std_logic;
      q : out std_logic );
end d_ff;

architecture behav of d_ff is
begin
  FF1:process (clk) begin
    if (clk'event and clk = '1') then
      if (rst = '1') then
        q <= '0';
      else q <= data;
      end if;
    end if;
  end process FF1;
end behav;

```

See the following RTL and Technology views; the Technology view shows the constant net tied to the output.

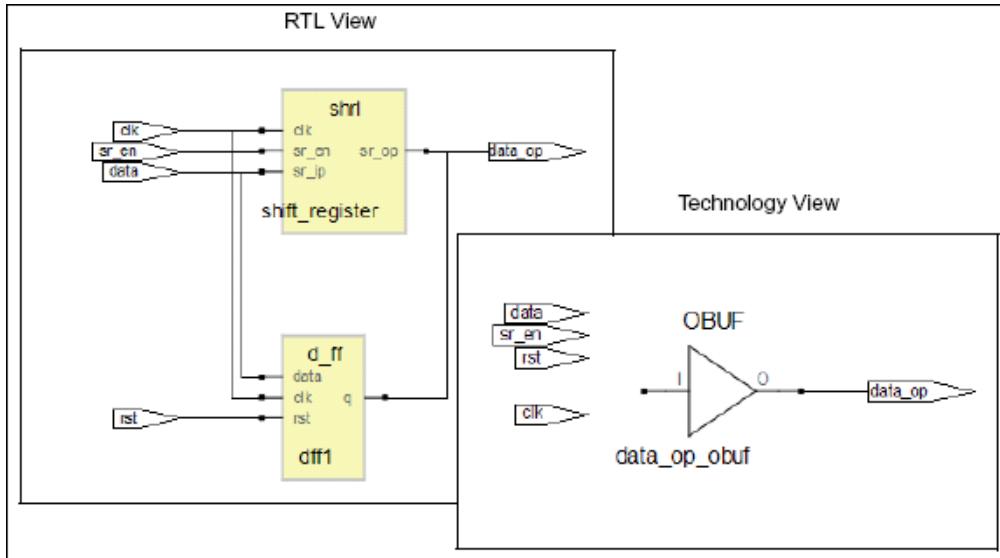

status_report

Writes out the results of reports displayed in the Project Status view after synthesizing a design.

Syntax

```
status_report -name reportName [-parameter reportSectionName]
[-csv] [-output_file fileName] [-msgtype msgStatus] [-status] [-help]
```

Examples

```
status_report -name area_report
status_report -name timing_report -csv -output_file reports
status_report -name area_report -parameter io_port
status_report -name run_status -msgtype warnings
status_report -name timing_report -help
```

Option	Description
-name <i>reportName</i>	<p>The type of report to access. Use any of the following keywords for <i>reportName</i>:</p> <ul style="list-style-type: none"> • area_report • timing_report • opt_report • cp_report • hier_area_report • run_status
-parameter <i>reportSectionName</i>	<p>Specifies a specific section of the area, timing, or message reports to access. See Parameters, on page 137 for details of the appropriate keywords to use for the section names.</p>
-csv	<p>Generates the report as a comma-separated list.</p>
-output_file <i>fileName</i>	<p>Specifies the name of the file that writes out the report. If you do not specify an output file, the report is displayed in the Tcl window.</p>
-msgtype <i>msgStatus</i>	<p>Generates the number of messages found for the following types of messages:</p> <ul style="list-style-type: none"> • Errors • Warnings • Notes
-status	<p>Generates the status for a job. The results of the job can be specified with one of the following conditions:</p> <ul style="list-style-type: none"> • Completed • Failed
-help	<p>Allows you to get help on a parameter list. Use -help * for a list of parameters.</p>

Parameters

For the area, timing, and message reports you can report results for specific sections by specifying the appropriate keywords for the -parameter argument.

Area Report section keywords for -parameter

io_port
non_io_reg
total_io_reg
v_ram
dsp_used
total_luts

Timing Report section keywords for -parameter

clock_name
req_freq
est_freq slack

Run Status section keywords for -parameter

compiler
premap
fpga_mapper

For example:

```
% status_report -name area_report
I/O ports(io_port) 26
Non I/O Register bits(non_io_reg) 242 (0%)
I/O Register bits(total_io_reg) 24
Block Rams(v_ram) 0 (1030)
DSP(dsp_used) 1 (2800)
LUTs(total_luts) 310 (0%)
```

Additional Reporting Commands

There are other commands available from the command line to report commonly-required information: `report_timing_summary`, `report_area`, and `report_opt`.

- Report Timing Summary

```
% report_timing_summary
Timing Summary
Clock Name      Req Freq   Est Freq   Slack
eight_bit_uc|clock 198.9 MHz  169.1 MHz  -0.887
```

- Report Area

```
% report_area
LUTs for combinational functions 0
Non I/O Registers 0
I/O Pins 66
I/O registers 0
DSP Blocks 0 (256)
Memory Bits 32768
```

- Report Optimizations

```
% report_opt
Combined Clock Conversion 1 / 0
```

Messages Reporting Commands

Here are examples of commands available from the command line to report message information using the option: `run_status`.

```
%status_report -name run_status
{compiler {notes "8"}{warnings "0"}{errors "0"}
 {job_status "Completed"}}
{fpga_mapper {notes "46"}{warnings "1"}{errors "0"}
 {job_status "Completed"}}
{premap {notes "3"}{warnings "2"}{errors "0"}
 {job_status "Completed"}}

% status_report - name run_status -msgtype warnings
{compiler {warnings "0"}}
{fpga_mapper {warnings "10"}}
{premap {warnings "0"}}

% status_report - name run_status -parameter {compiler premap}
 -msgtype warnings
{compiler {warnings "0"}}
{premap {warnings "0"}}

% status_report -name run_status -parameter compiler -status
{compiler {job_status "Completed"}}

% status_report -name run_status -parameter premap -status
```

sub_impl

Sub-implementation editing command.

Syntax

```
sub_impl
  implName -add jobType
  implName -remove
  implName -type
  implName -run mode
  implName -cancel
  implName -option optionName [optionValue]
  -list
```

Arguments and Options

Option	Description
<i>implName -add jobType</i>	Creates a new sub-implementation that belongs to an active implementation.
<i>implName -remove</i>	Removes an active sub-implementation.
<i>implName -type</i>	Lists a sub-implementation type.
<i>implName -run mode</i>	Runs sub-implementation.
<i>implName -cancel</i>	Cancels a running sub-implementation.
<i>implName -option optionName [optionValue]</i>	Sets option for sub-implementation.
-list	Lists all sub-implementations for an active implementation.

syn_connect

Specifies the connectivity between the module-instance being monitored for the error with the error monitoring IP port or top-level port for the error monitoring module. It is used with the [syn_create_err_net](#) command and the syn_ramstyle attribute o probe the error flag in high-reliability designs.

Syntax

syn_connect

-from {*i*:netName}
-to {*n*:existingNetpath | *t*:inputPinEMIPpath | *p*:topErrorport}

-from {<i>i</i>:netName}	Specifies the new net name for the error flag connection used with the syn_create_err_net command. See syn_create_err_net, on page 141 .
-to {<i>n</i>:existingNetpath <i>t</i>:inputPinEMIPpath <i>p</i>:topErrorport}	Specifies the path to an existing net, the input pin for the Error Monitoring IP (EMIP), or the top-level error port.

Example

```
syn_connect {-from {n:dwc_err0_net} -to {n:emp[0]}}
```

Limitation

Currently, when using the -to argument with the t: | p: option, an existing net must be present that feeds into the ports.

syn_create_err_net

Specifies the connectivity between the module/instance being monitored for the error with the error monitoring IP port or top-level port for the error monitoring module. It is used with the `syn_connect` command and the `syn_ramstyle` attribute to probe the error flag in high-reliability designs.

This is the syntax:

```
sync_create_err_net -name {netName}
  -inst {i:highRelInst}
  -err_pipe_num {numPipelineStages}
  -err_clk {n:clkSourceForPipelineStages}
  -err_reset {n:resetSourceForPipelineStages}
  -err_set {n:setSourceForPipelineStages}
  -err_enable {n:enableSourceForPipelineStages}
  -err_synch {synchValue}
```

netName	Specifies the new net name for the error flag connection.
-inst <i>highRelInst</i>	Specifies the high reliability instance being monitored for the error.
-err_pipe_num {numPipelineStages}	Specifies the number of pipeline stages using the retiming property. The default value is 0. Note: If <code>err_pipe_num=N</code> , then the property <code>syn_allow_retimimg=0</code> is set on the Nth stage of the pipeline register and <code>syn_allow_retimimg=1</code> is set on the first (N-1)th stage of the pipeline registers by the synthesis tool. Where $N > 0$ and <code>err_clk</code> is specified.
-err_clk {n:clkSourceforPipelineStages}	Specifies the hierarchical path to the input pin for the clock. Note: You must define the <code>-err_clk</code> for the pipeline stages if you specify <code>-err_pipe_num</code> . Otherwise, the pipeline stages to stabilize the error signals are not added.
-err_reset {n:resetSourceforPipelineStages}	Specifies the hierarchical path to the input pin for the reset signal.

-err_set {n:setSourceforPipelineStages}	Specifies the hierarchical path to the input pin for the set signal.
-err_enable {n:enableSourceforPipelineStages}	Specifies the hierarchical path to the input pin for the enable signal.
-err_synth {synchValue}	Specifies the boolean value for synchronous or asynchronous set/reset. The default is TRUE.

Example

```
syn_create_err_net {-name {dwc_err0_net} -inst {i:inst1}
                   -err_pipe_num {2} -err_clk {n:inst1.clk}
                   -err_reset {n:inst1.rst} -err_synth {TRUE}}
```

synplify_pro

Starts the FPGA synthesis tool and runs synthesis from the command line. Use the appropriate command for the tool you are using. The command to start the synthesis tool from the command line includes a number of command line options.

Syntax

```
synplify_pro
[options ...]
[projectFile]
```

projectFile Specifies the project (.prj) file to use. If no file is specified, the tool defaults to the last project file opened.

options Any of the command line options described in the next table. These options control tool action on startup and, in many cases, can be combined on the same command line. See the next table for a description of the *options* you can specify.

The following table describes the *options* you can specify:

Option	Description
-batch	<i>Synplify Pro (except node-locked)</i> Starts the synthesis tool in batch mode from the specified project or Tcl file without opening the Project window.
-compile	Compiles the project, but does not map it.
-evalhostid	Reports host ID for node-locked and floating licenses.
-help	Lists available command line options and descriptions.
-history <i>filename</i>	Records all Tcl commands and writes them to the specified history log file when the command exits.
-impl <i>impName</i>	Runs only the specified implementation. You can use this option in conjunction with the -batch keyword.
-ip_license_wait <i>waitTime</i>	<p>Specifies how long to wait for a Synopsys DesignWare IP license when one is not immediately available. e. If you do not specify the -ip_license_wait option, license queuing is not enabled.</p> <p>If all requested licenses are checked out or if the specified wait time elapses, the tool excludes the IP and continues to process the rest of the design. Any IP block without a license is treated either as an error or a black box.</p> <p>License queuing allows you to wait until a license becomes available or specify a wait time in seconds. You can use this option in conjunction with the -batch keyword. For details, see Queuing Licenses, on page 569.</p> <p>The <i>waitTime</i> value determines license queuing and sets a maximum wait time:</p> <ul style="list-style-type: none"> • Undefined or 0 = Queuing off • 1 = Queuing enabled, indefinite wait time • >1 = Queuing enabled for the specified time

Option	Description
-license_release	<p>Releases FPGA synthesis licenses for a session after the place-and-route job is launched. The software allows place and route to continue running even after exiting the synthesis tool so that it does not consume an FPGA license.</p>
	<p>This command option must be run in batch mode. Specify the following command:</p>
	<pre>toolName -batch -license_release</pre>
	<p>For details, see Releasing the Synthesis License During Place and Route, on page 653.</p>
-licensetype featureName	<p>Specifies a license if you work in an environment with multiple Synopsys FPGA licenses. You can use this option in conjunction with the -batch keyword.</p> <p>If you have licenses for multiple products, separate each feature license by a colon so that licenses can be searched in the order they are read until an available license is found.</p>
-license_wait waitTime	<p>Specifies how long to wait for a Synopsys FPGA license. If you do not specify the -license_wait option, license queuing is not enabled.</p> <p>License queuing allows you to wait until a license becomes available or specify a wait time in seconds. You can use this option in conjunction with the -batch keyword. For details, see Queuing Licenses, on page 569.</p> <p>The <i>waitTime</i> value determines license queuing and sets a maximum wait time in seconds:</p> <ul style="list-style-type: none"> • Undefined or 0 = Queuing off • 1 = Queuing enabled, indefinite wait time • >1 = Queuing enabled for the specified wait time
-log filename	<p>Writes all output to the specified log file.</p>
-loga filename	<p>Writes all output to be appended to the specified log file.</p>
-max_parallel_job s value	<p>Specifies the maximum number of concurrent processes used for synthesis.</p>
-nopopup	<p>Suppresses popup dialog boxes.</p>
-run implName	<p>Runs the specified implementation in the project file.</p>
-runall	<p>Runs all the implementations in the project file.</p>

Option	Description
-shell	Starts synthesis tool in shell mode. Note: The FPGA synthesis tool only supports the -shell option on UNIX and Linux platforms.
-tcl <i>prjFile Tlscript</i>	Starts the synthesis tool in the graphical user interface using the specified project or Tcl file.
-tclcmd <i>command</i>	Specifies Tcl command to be executed on startup.
-verbose_log	Writes messages to stdout.log in verbose mode.
-version	Reports version of specified synthesis tool.

vcs_launch

The vcs_launch command launches VCS with the specified options. For details about launching VCS from the synthesis tool, see [Simulating with the VCS Tool, on page 655](#).

Syntax

```
vcs_launch [-config_file path] [-simtype rtl|postsyn] [-vlogan options]
           [-vhdlan options] [-vcs options] [-simv options] [-rundir path]
           [-lib path] [-testbench path] [-script_only]
```

The following table describes the options you can specify:

Option	Description
-config_file <i>path</i>	Specify a path to the VCS configuration file. This file is saved by VCS launch dialog.
-simtype rtl postsyn	Select either rtl postsyn for RTL or post-synthesis simulation, respectively.
-vlogan <i>options</i>	Specify the -vlogan options.
-vhdlan <i>options</i>	Specify the -vhdlan options.
-vcs <i>options</i>	Specify the -vcs options.
-simv <i>options</i>	Specify the -simv options.

Option	Description
-rundir <i>path</i>	Specify the path to directory to run simulation.
-lib <i>path</i>	Specify the path to vendor-specific library. Multiple -lib arguments can be used.
-testbench <i>path</i>	Specify the path to testbench file. Multiple -testbench arguments can be used.
-script_only	Generate VCS script only; don't run the script.

Tcl Command Categories

The following tables group Tcl commands together by type or functionality.

- [Log File Commands, on page 147](#)
- [High Reliability Commands, on page 147](#)
- [Technology-Specific Tcl Commands, on page 148](#)

Log File Commands

These Tcl commands let you filter messages in the log file.

log_filter	Lets you filter errors, notes, and warning messages.
log_report	Lets you write out the results of the <code>log_filter</code> command to a file.
message_override	Allows you to suppress or override the log file message ID specification.

High Reliability Commands

High-reliability commands specify I/O redundancy in high-reliability designs.

Tcl Command Categories	Specifies the connectivity between the module/instance being monitored for the error with the error monitoring IP port or top-level port for the error monitoring module. It is used with the <code>syn_create_err_net</code> command.
syn_create_err_net	Specifies the connectivity between the module/instance being monitored for the error with the error monitoring IP port or top-level port for the error monitoring module. It is used with the <code>syn_connect</code> command.

Technology-Specific Tcl Commands

You can find vendor-specific Tcl commands in the appropriate vendor chapter.

Vendor/Family	Tcl Command Lists
Lattice	Lattice MachXO and Platform Devices, on page 341 LatticeECP/EC and Later Devices, on page 334 LatticeSC/SCM and LatticeXP2/XP Devices, on page 338 Lattice iCE40 Devices, on page 345

CHAPTER 3

Tcl Find, Expand, and Collection Commands

The FPGA synthesis software includes powerful search functionality in the Tcl find and expand commands. Objects located by these commands can be grouped into collections and manipulated. The following sections describe the commands and collections in detail:

- [find, on page 151](#)
- [find -filter, on page 165](#)
- [expand, on page 173](#)
- [Collection Commands, on page 177](#)
- [Query Commands, on page 187](#)
- [Synopsys Standard Collection Commands, on page 217](#)

The find, expand, and collection commands are listed alphabetically in the following table.

add_to_collection	all_clocks	all_fanin
all_fanout	all_inputs	all_outputs
all_registers	append_to_collection	c_diff
c_info	c_intersect	c_list
c_print	c_symdiff	c_union
copy_collection	define_collection	define_scope_collection

expand	find (Tcl find)	foreach_in_collection
get_cells	get_clocks	get_nets
get_object_name	get_pins	get_ports
get_prop	index_collection	object_list
remove_from_collection	report_timing	set
sizeof_collection		

find

The Tcl find command identifies design objects based on specified criteria. Use this command to locate multiple objects with a common characteristic. If you want to locate objects that share connectivity, use the expand command instead of the find command ([expand, on page 173](#)).

You can specify the find command from the SCOPE environment or enter it as a Tcl command. This command operates on the RTL database.

You can define objects identified by find as a group or *collection*, and operate on all the objects in the collection at the same time. To do this, you embed the find command as part of a collection creation or manipulation command to do this in a single step. The combination of find and collection commands provides you with very powerful functionality to operate on and manipulate multiple design objects simultaneously.

The table summarizes where to find detailed information:

For ...	See ...
Command syntax	Tcl Find Syntax, on page 158
Syntax details: object types, expressions, case sensitivity, and special characters	Tcl Find Command Object Types, on page 159 Wildcards and Special Characters, on page 160 Tcl Find Command Case Sensitivity, on page 160
Examples of find syntax	Tcl Find Syntax Examples, on page 161
Filtering find searches by property	find -filter, on page 165 Find Filter Properties, on page 166 Refining Tcl Find Results with -filter, on page 174 in the <i>User Guide</i> .
Using find search patterns and using find in collections	Finding Objects with Tcl find and expand, on page 172 in the <i>User Guide</i> .

Tcl Find Syntax (Standard)

```
find [-objectType] [pattern]
      [-in $collectionName | listName]
      [-hier] [-hsc character]
      [-regexp] [-nocase] [-exact]
      [-print]
      [-namespace techview | netlist]
      [-flat]
      [-leaf]
      [-rtl | -tech]
      [-filter expression]
      [-seq]
```

If used, the **-filter** option must be specified as the last argument in the command. Descriptions of each command option are listed alphabetically in the following table.

Argument	Description
-objectType pattern	Specifies the type of object to be found: view, inst, port, pin, net or seq. The object type must be preceded by the appropriate prefix, as described in Tcl Find Syntax, on page 158 . <i>pattern</i> specifies the search pattern to be matched, and can include the * and ? wildcard characters.
-exact	Disables simple pattern matching. Use it to search for objects that contain the * and ? wildcard characters. You cannot use this argument with -nocase or -regexp . See Regular Expressions, Wildcards, and Special Characters (Standard), on page 155 for additional information.
-filter expression	Refines the results of find further, by filtering the results by the specified object property. For details about the syntax, refer to find -filter, on page 165 . If you use the -filter option, it must be specified as the last argument to the find command.
-flat	Extends the search to all levels, but with -flat , the * wildcard character matches hierarchy separators as well as characters. This means that the following example finds instance a1_fft at the current level as well as the hierarchical instance a1.fft: <code>find -seq -flat a1*fft</code>

Argument	Description
-hier	<p>Sets the search to search every level of hierarchy, instead of just the top level. By default, the search occurs from the top-level hierarchy for the given pattern; this option allows you to search for the pattern from every level of hierarchy.</p> <p>When -hier is not specified, the search is limited to the current view and wildcards do not match the hierarchy delimiter character. You can still traverse downward through the hierarchy by adding the delimiter in the pattern. Thus an asterisk (*) matches any object at the current level, but <code>*.*</code> matches any object one level below the current view. For more about wildcard characters, see Regular Expressions, Wildcards, and Special Characters (Standard), on page 155.</p>
-hsc <i>character</i>	<p>Extends the search downward through each level of the local hierarchy, instead of limiting the search to the current view. The default hierarchy separator for the search is the period (.). To specify another hierarchy character, use the -hsc option. Use this option when the pattern is ambiguous. For example, with the default separator, <code>block1.u1</code> could match either instance <code>u1</code> in <code>block1</code> or the object named <code>block1.u1</code>. Using a " " separator character eliminates the ambiguity. If you specify <code>find -hier -hsc " "</code> [<code>block1 u1</code>], the command finds hierarchical instance <code>u1</code> in the block, while <code>find -hier -hsc " "</code> [<code>block1.u1</code>] finds the object.</p> <p>See Tcl Syntax Guidelines for Constraint Files, on page 63 for more information.</p>
-in <i>\$collectionName/</i> <i>listName</i>	<p>Restricts the search to the specified list or collection.</p>
-leaf	<p>Returns only non-hierarchical instances.</p>
-nocase	<p>Ignores case when matching patterns. The default is to take case into account (-case). You cannot use the -nocase argument with -exact or -regexp. See Tcl Find Command Case Sensitivity, on page 160 for more information.</p>
-namespace <i>techview netlist</i>	<p>Determines the database to search for the find operation.</p> <ul style="list-style-type: none"> • <code>techview</code> searches the mapped (srm) database. This is the default. • <code>netlist</code> searches the output netlist. <p>This option is not available for an RTL view. To select a database view (srs, srp or srm) with <code>find</code> in batch mode, use <code>open_design</code> (open_design, on page 80).</p>

Argument	Description
-print	<p>Prints the first 20 results. For a full list of objects found, use <code>c_print</code> or <code>c_list</code>.</p>
	<p>If you specify this command from an HDL Analyst view, the results are printed to the Tcl window; if you specify it in the constraint file, the results are printed to the log file, at the beginning of the Mapper section.</p>
	<p>Reported object names have prefixes that identify the object type, and double quotes around each name to allow for spaces in the names. For example:</p>
	<pre>"i:reg1" "i:\weird_name[foo\$]" "i:reg2" <<found 233 objects. Displaying first 20 objects. Use c_print or c_list for all. >></pre>
-regexp	<p>Treats the pattern as a regular expression instead of a simple wildcard pattern. It also uses the <code>==</code> and <code>!=</code> filter operators to compare regular expressions, rather than simple wildcard patterns. You cannot use this argument with <code>-nocase</code> or <code>-exact</code>. If you do not specify <code>-regexp</code>, there are only two special characters that are used as wildcards: <code>*</code> and <code>?</code>. See Regular Expressions, Wildcards, and Special Characters (Standard), on page 155 for details about regular expressions.</p>
-rtl -tech	<p>Uses the most recently activated RTL or Technology view. If none are available, it opens a new view. The RTL view is the default.</p>
-seq	<p>Finds sequential (clocked) instances (the <code>-inst</code> object type is not required). This argument is equivalent to <code>-filter @is_sequential</code>.</p>

Tcl Find Command Object Types (Standard)

You can specify the following types of objects:

Object	Prefix	Example	Synopsis
view (Design)	v:	v:work.cpu.rtl is the master cell of the cpu entity, rtl architecture, compiled in the VHDL work library.	lib_cell
inst (Instance)	i:	Default object type. i:core.i_cpu.reg1 points to the reg1 instance inside i_cpu.	cell
port	p:	p:data_in[3] points to bit 3 of the primary data_in port. work.cpu.rt1 p:rst is the hierarchical rst port in the cpu view. This eventually points to all instances of cpu.	port
pin	t:	t:core.i_cpu.rst points to the hierarchical rst pin of instance i_cpu.	pin
net	n:	n:core.i_cpu.rst points to the rst net driven in i_cpu.	net
seq (Sequential instance)	i:	i:core.i_cpu.reg[7:0]	cell

Regular Expressions, Wildcards, and Special Characters (Standard)

The Tcl find command significantly differs from a simple Tcl search. A simple Tcl search does not treat any character, except for the backslash (\), as a special character, so * matches everything in a string. The Tcl find command uses various regular expressions and special characters, as shown in the following table.

Use curly brackets {} or double quotes to prevent the interpretation of special characters within a pattern, and the backslash to escape a single character.

Syntax Matches ...

Meta Characters: Used to match certain conditions in a string

- ^ At the beginning of the string
- \$ At the end of the string. Use curly brackets {} or double quotes to prevent the interpretation of special characters within a pattern.

Syntax Matches ...

.	Any character. If you want to use the dot (.) as a hierarchy delimiter, you must escape it with a backslash (\), because it has a special meaning in regular expressions.
\k	Interprets and matches the specified non-alphanumeric character as an ordinary, non-reserved character (where k is the non-alphanumeric character). For example, \\$ matches a dollar symbol, not the character in its reserved sense of matching the end of a string. Similarly \.d in a.b.c\..d.e indicates that c.d must be interpreted as part of the instance name, not as a hierarchy separator.
\c	The specified non-alphanumeric character (where c is the non-alphanumeric character) when it is used in an escape sequence.
	Equivalent to an OR.

Character Class: A list of characters to match

[list]	Any single character from the list. For example, [abc] matches a lower-case a, b, or c. To specify a range of characters in the list, use a dash. For example, [A-Za-z] matches any alphabetical character. Use curly brackets {} or double quotes to prevent the interpretation of special characters within a pattern.
[^list]	Characters not in the list. You can specify a range, as described above. For example, [^0-9] matches any non-numeric character.
\	Used as a prefix to escape special characters like the following: ^ \$ \ . () [] { } ? + *

Escape Sequences: Shortcuts for common character classes

\d	A digit between 0 and 9
\D	A non-numeric character
\s	A white space character
\S	A non-white space character
\w	A word character; i.e., alphanumeric characters or underscores
\W	A non-word character

Syntax Matches ...


Quantifiers: Number of times to match the preceding pattern

- * A sequence of 0 or more matches
If you do not specify -hier, the search is restricted to the current view only. To traverse downward through the hierarchy, either use the -hier argument or specify the hierarchical levels to be searched by adding the hierarchical delimiter to the pattern. For example, *: $*$ matches objects one level below the current view.
- + A sequence of 1 or more matches
- ? A sequence of 0 or 1 matches
- { N } A sequence of exactly N matches
Use curly brackets to interpret special characters as ordinary characters within a pattern.
- { N , P } A sequence of N through P matches (P included); $N \leq P$


Tcl Find Command Case Sensitivity (Standard)

Case sensitivity depends on the rules of the language used to specify the object. If the object was generated in VHDL, it is case-insensitive; if it was generated in Verilog, it is case-sensitive. In mixed-language designs, the case-sensitivity rules for the parent object prevail, even when another language is used to define the lower-level object.

- Verilog
- VHDL

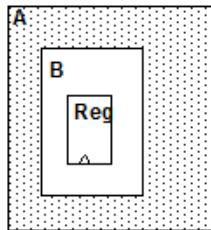

i.A.B.Reg - correct
i.A.b.Reg - correct
i.a.B.Reg - correct
i.a.b.Reg - correct
i.A.B.REG - incorrect
i.A.B.reg - incorrect

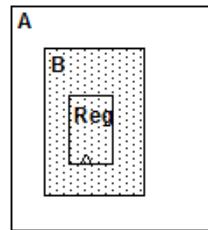

i.A.B.Reg - correct
i.A.b.Reg - incorrect
i.a.B.Reg - incorrect
i.a.b.Reg - incorrect
i.A.B.REG - correct
i.A.B.reg - correct

Tcl Find Syntax

Finds design objects based on specified criteria.

Find is available as part of the HDL Analyst tool.

Syntax

```
find
  [-flat]
  [-inst]
  [-net]
  [-port]
  [-pin]
  [-view]
  [-nocase]
  [-print]
  [-depth value]
  [-filter expression]
  [-seq]
  [pattern]
```

-flat

Extends the search to all levels. The * wildcard character matches hierarchy separators as well as characters. See [Wildcards and Special Characters, on page 160](#) for additional information.

-inst

Finds matching instances. If no -type (-inst, -net, -port, -pin, or -view) option is set, results include instances, nets, and ports.

-net

Finds matching nets. If no -type (-inst, -net, -port, -pin, or -view) option is set, results include instances, nets, and ports.

-port

Finds matching ports. If no -type (-inst, -net, -port, -pin, or -view) option is set, results include instances, nets, and ports.

-pin

Finds matching pins. If no -type (-inst, -net, -port, -pin, or -view) option is set, results include instances, nets, and ports.

-view

Finds matching views. If no -type (-inst, -net, -port, -pin, or -view) option is set, results include instances, nets, and ports.

-nocase

The -nocase option makes the search case-insensitive.

-print

Prints the first 20 search results. For a full list of objects found, use c_print or c_list. If you use find from the shell, the results are printed to the Tcl window; if you find in the constraint file, the results are printed to the log file at the beginning of the Mapper section. Reported object names have prefixes that identify the object type and are contained in curly braces ({}).

-depth value

Sets the starting depth for the search. Value may be a single number or a range. When -depth with a range is used, for example -depth 4-7, -hier and -flat arguments are ignored.

-filter expression

Further refines the results of find by filtering the results using the specified object property. For syntax details, refer to [find -filter, on page 165](#).

-seq

Finds sequential (clocked) instances (the -inst object type is not required). This argument is equivalent to -filter @is_sequential.

pattern

The value to search for.

Tcl Find Command Object Types

You can specify the following types of objects:

Object	Prefix	Example	Synopsis
view (Design)	v:	work.cpu.rt1 p:rst is the hierarchical rst port in the cpu view which points to all instances of cpu.	lib_cell
inst (Instance)	i:	Default object type. i:core.i_cpu.reg1 points to the reg1 instance inside i_cpu.	cell
port	p:	p:data_in[3] points to bit 3 of the primary data_in port. work.cpu.rt1 p:rst is the hierarchical rst port in the cpu view which eventually points to all instances of cpu.	port

Object	Prefix	Example	Synopsis
pin	t:	t:core.i_cpu.rst points to the hierarchical rst pin of instance i_cpu.	pin
net	n:	n:core.i_cpu.rst points to the rst net driven in i_cpu.	net
seq (Sequential instance)	i:	i:core.i_cpu.reg[7:0]	cell

Wildcards and Special Characters

The Tcl find command significantly differs from a simple Tcl search. A simple Tcl search does not treat any character, except for the backslash (\), as a special character, so * matches everything in a string. The Tcl find command uses various special characters, as shown in the following table.


Use curly brackets {} or double quotes to prevent the interpretation of special characters within a pattern, and the backslash to escape a single character.

Syntax	Matches ...
*	A sequence of 0 or more matches If you do not specify -hier, the search is restricted to the current view only. To traverse downward through the hierarchy, either use the -hier argument or specify the hierarchical levels to be searched by adding the hierarchical delimiter to the pattern. For example, *.* matches objects one level below the current view.
?	A sequence of 0 or 1 matches


- * A sequence of 0 or more matches
If you do not specify -hier, the search is restricted to the current view only.
To traverse downward through the hierarchy, either use the -hier argument or specify the hierarchical levels to be searched by adding the hierarchical delimiter to the pattern. For example, *.* matches objects one level below the current view.
 - ? A sequence of 0 or 1 matches
-

Tcl Find Command Case Sensitivity

Case sensitivity depends on the rules of the language used to specify the object. In mixed-language designs, the case-sensitivity rules for the parent object prevail, even when another language is used to define the lower-level object.

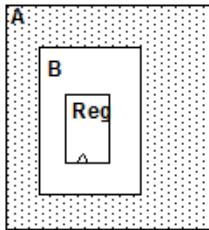

i.A.B.Reg - correct
 i.A.b.Reg - correct
 i.a.B.Reg - correct
 i.a.b.Reg - correct
 i.A.B.REG - incorrect
 i.A.B.reg - incorrect

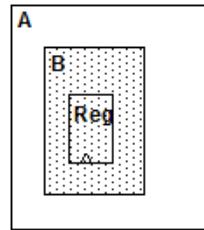

i.A.B.Reg - correct
 i.A.b.Reg - incorrect
 i.a.B.Reg - incorrect
 i.a.b.Reg - incorrect
 i.A.B.REG - correct
 i.A.B.reg - correct

Tcl Find Syntax Examples

The following are examples of find syntax:

Example	Description
find {a*}	Finds any object in the current view that starts with a
find {a*} -hier -nocase	Finds any object that starts with a or A
find -net {"synp*} -hier	Finds any net that contains synp
find -seq * -filter {@clock==myclk}	Finds any register in the current view that is clocked by myclk
find -flat -seq {U1.*}	Finds all sequential elements at any hierarchical level under U1 (* matches hierarchy separator)
find -hier -flat -inst {i:A.B.C.*} -filter @view==ram*	Finds all RAM instances starting from a submodule and all lower hierarchical levels from A downwards
find -hier-seq {*} -filter @clock_enable==ena	Finds all registers enabled by the ena signal.
find -hier-seq {*} -filter @slack <{-0.0}	Finds all sequential elements with negative slack
find -hier-seq {*} -filter {@clock ==clk1}	Finds all sequential elements within the clk1 clock domain

Example	Description
find -hier-net {*} -filter {@fanout >20}	Finds high fanout nets that drive more than 20 destinations
find -hier-seq * -in \$all_inst_coll	Finds sequential elements inside the all_inst_coll collection
find -net -regexp {[a-b].*}	Finds all nets in hierarchy a and b. This means {n:a.*} and {n:b.*} ; regular expressions are only supported in the earlier standard version of the HDL Analyst and are not supported in the current version.

Use the {} characters to protect patterns that contain [] from Tcl evaluation. For example, use the following command to find instance reg[4]:

```
find -inst {reg[4]}
```

Example: Custom Report Showing Paths with Negative Slack

Use the following commands:

```
open_design implementation_a/top.srm
set find_negslack [find -hier -seq -inst {*} -filter @slack <
    {-0.0}]
c_print -prop slack -prop view $find_negslack -file negslack.txt
```

The result of running these commands is a report called negslack.txt:

Object Name	slack	view
{i:CPU_A_SOC.CPU.DATAPATH.GBR[0]}	-3.264	"FDE"
{i:CPU_A_SOC.CPU.DATAPATH.GBR[1]}	-3.158	"FDE"
{i:CPU_A_SOC.CPU.DATAPATH.GBR[2]}	-3.091	"FDE"

Example: Custom Report for Negative Slack FFs in a Clock Domain

The following procedure steps through the commands used to find all negative slack flip-flops with a given clock domain:

1. Create a collection that contains all sequential elements with negative slack:

```
set negFF [find -tech -hier -seq {*} -filter @slack < {-0.0}]
```

2. Create a collection of all sequential elements within the clk clock domain

```
set clk1FF find -hier -seq * -filter {@clock==clk1}
```

3. Isolate the common elements in the two collections:

```
set clk1Slack [c_intersect $negFF $clk1FF]
```

4. Generate a report using the c_print command:

```
c_print [find -hier -net * -filter @fanout>=2]
{n:ack1_tmp}
{n:ack2_tmp}
...
{n:blk_xfer_cntrl_inst.lfsr_data[20:14]}
{n:blk_xfer_cntrl_inst.lfsr_inst.blk_size[6:0]}
{n:blk_xfer_cntrl_inst.lfsr_inst.clk_c}
...
```

Custom Fanout Report Example

The following command generates a fanout report:

```
% c_print -prop fanout [find -hier -net * -filter @fanout>=2]
```

This is an example of the report generated by the command:

Object Name	fanout
{n:ack1_tmp}	3
{n:ack2_tmp}	4
...	
{n:blk_xfer_cntrl_inst.lfsr_data[14]}	3
{n:blk_xfer_cntrl_inst.lfsr_data[15]}	3
{n:blk_xfer_cntrl_inst.lfsr_data[16]}	2
...	

You can add additional information to the report, by specifying more properties. For example:

```
% c_print -prop fanout [find -hier -net * -filter @fanout>=2] -prop pins
```

This command generates a report like the one shown below:

Object Name	Fanout	Pins
{n:ack1_tmp}	3	"t:word_xfer_cntrl_inst.ack1_tmp t:word_xfer_inst.ack1_tmp"
{n:ack2_tmp}	4	"t:blk_xfer_cntrl_inst.ack2_tmp t:blk_xfer_inst.ack2_tmp"
{n:adr_o_axb_1}	2	"t:blk_xfer_inst.adr_o_axb_1

```
{n:adr_o_axb_2} 2          t:adr_o_cry_1_0.S t:adr_o_s_1.LI"
                            "t:blk_xfer_inst.adr_o_axb_2
{n:adr_o_axb_3} 2          t:adr_o_cry_2_0.S t:adr_o_s_2.LI"
                            "t:blk_xfer_inst.adr_o_axb_3
{n:adr_o_axb_4} 2          t:adr_o_cry_3_0.S t:adr_o_s_3.LI"
                            "t:blk_xfer_inst.adr_o_axb_4
{n:adr_o_axb_5} 2          t:adr_o_cry_4_0.S t:adr_o_s_4.LI"
                            "t:blk_xfer_inst.adr_o_axb_5
{n:adr_o_axb_6} 2          t:adr_o_cry_5_0.S t:adr_o_s_5.LI"
                            "t:blk_xfer_inst.adr_o_axb_6
                            t:adr_o_cry_6_0.S t:adr_o_s_6.LI"
...

```

To save the report as a file, use a command like this one:

```
c_print -prop fanout [find -hier -net * -filter @fanout>=2]
              -prop pins -file prop.txt
```

find -filter

The Tcl `find` command includes the optional `-filter` option, which provides a powerful way to further refine the results of the `find` command and filter objects based on properties. See the following for details about the `find -filter` command:

- [Find -filter Syntax, on page 165](#)
- [Find Filter Properties, on page 166](#)
- [Find Filter Examples, on page 171](#)

For the Tcl `find` command syntax, see

Find -filter Syntax

`find pattern otherOptions -filter {[!]@propertyName operator value}`

!	Optional character to specify the negative. Include the ! character if you are checking for the absence of a property; leave it out if you are checking for the presence of a property.
<code>@propertyName</code>	Property name to use for filtering. The name must be prefixed with the @ character. For example, if <code>clock</code> is the property name, specify <code>{@clock==myclk}</code> .
<code>operator</code>	Evaluates and determines the property value used for the filter expression. For the operators you can use in the expressions, see Filter Operators, on page 166 .
<code>value</code>	Property value for the property in the filter expression, when the property has a value. The value can either be an object name such as <code>myclk</code> in <code>{@clock==myclk}</code> , or a value, such as 60 in <code>{@fanout>=60}</code> .

When specified, the `-filter` option must be the last option specified for the `find` command.

Filter Operators

You can use the following relational operators with the `-filter` option:

<code>==</code>	Equal
<code>!=</code>	Not equal
<code>></code>	Greater than
<code><</code>	Less than
<code>>=</code>	Greater than or equal to
<code><=</code>	Less than or equal to
<code>=~</code>	Matches pattern
<code>!~</code>	Does not match pattern

You can use the following logical operators with the `-filter` option:

<code>&&</code>	And
<code> </code>	Or
<code>!</code>	Not

Find Filter Properties

The object properties are based on the design or constraint, and are used to qualify searches and build collections. To generate these properties, open Project->Implementation Options->Device and enable the Annotated Properties for Analyst check box. The properties display in the Tcl window when the RTL or Technology view is active. Some properties are only available in a certain view. The tool creates `.sap` and `.tap` files (design and timing properties, respectively) in the project folder.

The table below lists the common filter object properties. It does not include some vendor-specific properties. Use the table as a guide to filter the properties you want. Here is how to read the columns:

Property Name	Property Value	HDL View	Comment
Common Properties			
type	view port net instance pin	All	Specifies the type of object to be filtered from the netlist <code>find * -filter -object -print</code>
View Properties			
compile_point	locked	Tech	Filters the view based on compile point properties <code>find * -view -filter @compile_point==locked -print</code>
is_black_box	1	All	Filters the black box view <code>find * -view -filter @is_black_box==1 -print</code>
is_verilog	0 1	All	Filters the Verilog based view <code>find * -view -filter @is_verilog=={0 1} -print</code>
is_vhdl	0 1	All	Filters the VHDL based view <code>find * -view -filter @is_vhdl=={0 1} -print</code>
orig_inst_of	<i>viewName</i>	RTL and Tech	Filters the view based on original instance <code>find * -view -filter @orig_inst_of==viewName -print</code>

Property Name	Property Value	HDL View	Comment
syn_hier	remove flatten soft firm hard	Tech	Filters the view based on the syn_hier attribute value find * -view -filter @syn_hier=={remove flatten soft firm hard} -print

Port Properties

direction	input output inout	All	Filters the port based on port direction find * -port -filter @direction=={input output inout} -print
fanout	<i>value</i>	All	Filters the port based on fanout value find * -port -filter @fanout== <i>value</i> -print

Instance Properties

area	<i>area_value</i>	Tech	
arrival_time	<i>value</i>	Tech	Corresponds to worst slack
async_reset	n:netName	All	
async_set	n:netName	All	
clock	<i>clockName</i>	All	Could be a list if there are multiple clocks
clock_edge	rise fall high low	All	Could be a list if there are multiple clocks
clock_enable	n:netName	All	Highest branch name in the hierarchy, and closest to the driver
compile_point	locked	Tech	Automatically inherited from its view
hier_rtl_name	<i>hierInstanceName</i>	All	

Property Name	Property Value	HDL View	Comment
inout_pin_count	<i>value</i>	All	
input_pin_count	<i>value</i>	All	
inst_of	<i>viewName</i>	All	
is_black_box	1 (Property added)	All	Automatically inherited from its view
is_hierarchical	1 (Property added)	All	
is_sequential	1 (Property added)	All	
is_combinatorial	1 (Property added)	All	
is_pad	1 (Property added)	All	
is_tristate	1 (Property added)	All	
is_keepbuf	1 (Property added)	All	
is_clock_gating	1 (Property added)	All	
is_vhdl	0 1	All	Automatically inherited from its view
is_verilog	0 1	All	Automatically inherited from its view
kind	<i>primitive</i> For example: inv and dff mux statemachine ...)	All	Tech view contains vendor-specific primitives
location	(<i>x</i> , <i>y</i>)	Tech	Format can differ
name	<i>instanceName</i>	All	
orientation	N S E W	Tech	
output_pin_count	<i>value</i>	All	
pin_count	<i>value</i>	All	
placement_type	unplaced placed	All	
rtl_name	<i>nonhierInstanceName</i>	All	
slack	<i>value</i>	Tech	Worst slack of all arcs

Property Name	Property Value	HDL View	Comment
slow	1	Tech	
sync_reset	n:netName	All	
sync_set	n:netName	All	
syn_hier	remove flatten soft firm hard	Tech	Automatically inherited from its view
view	<i>viewName</i>	All	
Pin Properties			
arrival_time	<i>timingValue</i>	Tech	
clock	<i>clockName</i>	All	Could be a list if there are multiple clocks
clock_edge	rise fall high low	All	Could be a list if there are multiple clocks
direction	input output inout	All	
fanout	<i>value</i>	All	Total fanout (integer)
is_clock	0 1	All	
is_gated_clock	0 1	All	Set in addition to is_clock
slack	<i>value</i>	Tech	
Net Properties			
clock	<i>clockName</i>	All	Could be a list if there are multiple clocks
is_clock	0 1	All	
is_gated_clock	0 1	All	Set in addition to is_clock
fanout	<i>value</i>	All	Total fanout (integer)

Find Filter Examples

The following examples show how `find -filter` is used to check for the presence or absence of a property, with the `!` character indicating a negative check:

<code>c_print [find -hier -view {*} -filter (@is_black_box)]</code>	Finds all objects that are black boxes.
---	---

<code>c_print [find -hier -view {*} -filter (!@is_black_box)]</code>	Finds all objects that are not black boxes
--	--

Positive Check Examples

Finds all ports, pins, and nets from the top level with a fanout greater than 8:

```
find * -filter {@fanout>8}
```

Finds all instances other than `andv` and `orv` in the design:

```
find * -hier -filter {@view!=andv||@view!=orv}
```

Finds all instances of `statemachine` throughout the hierarchy:

```
find -hier -inst * -filter {@inst_of==statemachine}  
find -hier -inst * -filter {@kind==statemachine}
```

Finds all instances throughout the hierarchy that include the string `reg` and are clocked by `CLK`:

```
find -hier -inst {*reg*} -filter {@clock==CLK}
```

Finds all nets throughout the hierarchy that have a fanout greater than 4:

```
find -hier -net {*} -filter {@fanout>4}
```

Negative Check Example

Finds all instances from the top level that have the include string `big`, that are not black boxes, and that have more than 10 pins:

```
find -inst *big* -filter {@is_black_box&&(@pin_count>10)}
```

Example of Boolean Expression Specified on Multiple Properties

Finds all instances from the top level that have more than eight pins and negative slack:

```
find * -filter {(@pin_count>8)&&(@slack<0)}
```

expand

The expand command identifies objects based on their connectivity, by expanding forward from a given starting point. For more information, see [Using the Tcl expand Command to Define Collections, on page 177](#) of the *User Guide*.

Tcl expand Syntax

The syntax for the expand command is as follows:

```
expand [-objectType] [-from object] [-thru object] [-to object] [-level integer]
       [-hier] [-leaf] [-seq] [-print]
```

Argument	Description
-from <i>object</i>	Specifies a list or collection of ports, instances, pins, or nets for expansion forward from all the pins listed. Instances and input pins are automatically expanded to all output pins of the instances. Nets are expanded to all output pins connected to the net. If you do not specify this argument, backward propagation stops at all sequential elements.
-hier	Searches for the pattern from every level of hierarchy, instead of just the top level and identifies objects to be expanded based on their connectivity. The default for the current view is the top level and is defined with the <code>define_current_design</code> command as in the compile-point flow.
-leaf	Returns only non-hierarchical instances.
-level <i>integer</i>	Limits the expansion to N logic levels of propagation. You cannot specify more than one -from, -thru, or -to point when using this option.

Argument	Description
-objectType	<p>Optionally specifies the type of object to be returned by the expansion. If you do not specify an <i>objectType</i>, all objects are returned. The object type is one of the following:</p> <ul style="list-style-type: none"> • -instance returns all instances between the expansion points. This is the default. • -pin returns all instance pins between the expansion points. • -net returns all nets between the expansion points. • -port returns all top-level ports between the expansion points.
-print	<p>Evaluates the <code>expand</code> function and prints the first 20 results. If you use this command from HDL Analyst, these results are printed to the Tcl window; for constraint file commands, the results are printed to the log file at the start of the Mapper section.</p> <p>For a full list of objects found, you must use <code>c_print</code> or <code>c_list</code>. Reported object names have prefixes that identify the object type. There are double quotes around each name to allow for spaces in the names. For example:</p> <pre>"i:reg1" "i:reg2" "i:\weird_name[foo\$]" "i:reg3" <<found 233 objects. Displaying first 20 objects. Use c_print or c_list for all. >></pre>

Argument	Description
-seq	Modifies the range of any expansion to include only sequential elements. By default, the expand command returns all object types. If you want just sequential instances, make sure to define the <i>object type</i> with the -inst argument, so that you limit the command to just instances.
-thru object	Specifies a list or collection of instances, pins, or nets for expansion forward or backward from all listed output pins and input pins respectively. Instances are automatically expanded to all input/output pins of the instances. Nets are expanded to all input/output pins connected to the net. You can have multiple -thru lists for product of sum (POS) operations.
-to object	Specifies a list or collection of ports, instances, pins, or nets for expansion backward from all the pins listed. Instances and output pins are automatically expanded to all input pins of the instances. Nets are expanded to all input pins connected to the net. If you do not specify this argument, forward propagation stops at all sequential elements.

Tcl expand Syntax Examples

Example	Description
expand -hier -from {i:reg1} -to {i:reg2}	Expands the cone of logic between two registers. Includes hierarchical instances below the current view.
expand -inst -from {i:reg1}	Expands the cone of logic from one register. Does not include instances below the current view.
expand -inst -hier -to {i:reg1}	Expands the cone of logic to one register. Includes hierarchical instances below the current view.
expand -pin -from {t:i_and2.z} -level 1	Finds all pins driven by the specified pin. Does not include pins below the current view.
expand -hier -to {t:i_and2.a} -level 1	Finds all instances driving an instance. Includes hierarchical instances below the current view.

Example	Description
expand -hier -from {n:cen}	Finds all elements in the transitive fanout of a clock enable net, across hierarchy.
expand -hier -from {n:cen} -level 1	Finds all elements directly connected to a clock enable net, across hierarchy.
expand -hier -thru {n:cen}	Finds all elements in the transitive fanout and transitive fanin of a clock enable net, across hierarchy.


Collection Commands

A collection is a group of objects. Grouping objects lets you operate on multiple group members at once; for example you can apply the same constraint to all the objects in a collection. You can do this from both the SCOPE editor (see [Collections, on page 163](#)) or in a Tcl file.


The following table lists the commands for creating, copying, evaluating, traversing, and filtering collections, and subsequent sections describe the collections, except for `find` and `expand`, in alphabetical order. For information on using collections, see [Using Collections, on page 181](#) in the *User Guide*.

Command	Description
Creation	
<code>define_collection</code>	Creates a collection from a list
<code>set modules</code>	Creates a collection
<code>set modules_copy \$modules</code>	Copies a collection
Creation from Objects Identified by Embedded Commands	
<code>find</code>	Does a targeted search and finds objects. Embedding the <code>find</code> command in a collection creation command first finds the objects, and then creates a collection out of the identified group of objects.
<code>expand</code>	Identifies related objects by expanding from a selected point. Embedding the <code>expand</code> command in a collection creation command first finds the objects, and then creates a collection out of the identified group of objects.
Operators for Comparison and Analysis	
<code>c_diff</code>	Identifies differences between lists or collections
<code>c_intersect</code>	Identifies objects common to a list and a collection
<code>c_symdiff</code>	Identifies objects that belong exclusively to only one list or collection
<code>c_union</code>	Concatenates a list to a collection

Command	Description
Operators for Evaluation and Statistics	
c_info	Prints statistics for a collection
c_list	Converts a collection to a Tcl list for evaluation
c_print	Displays collections or properties for evaluation

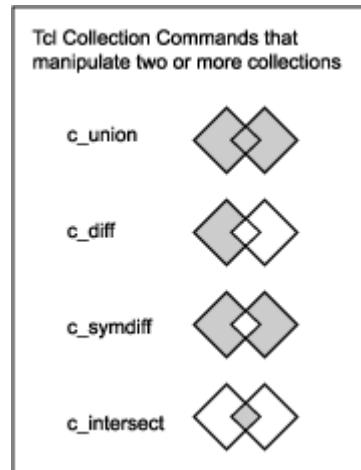

c_diff

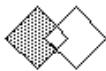

Identifies differences by comparing collections, or a list and a collection. For this command to work, the design must be open in the GUI.

Syntax

```
c_diff {$collection1 $collection2 | $collection {list} [-print]}
```

This command also includes a -print option to display the result.

Examples

The following examples combine the set with the `c_diff` command to create a new collection that contains the results of the `c_diff` command. The first example compares two collections and puts the results in `diffCollection`:

```
set diffCollection [c_diff $collection1 $collection2]
```

The next example creates `collection1` consisting of objects `i:reg1` and `i:reg2`, compares this collection to a Tcl list containing object `i:reg1`, puts the results in the collection `diffCollection` and prints the result (`i:reg2`).

```
%set collection1 {i:reg1 i:reg2}
%set diffCollection [c_diff $collection1 {i:reg1}]
%c_print $diffCollection
{i:reg2}
```

c_info

Returns specifics of a collection, including database name, number of objects per type, and total number of objects. You can save the results to a Tcl variable (array) using the `-array name` option.

Syntax

```
c_info $mycollection [-array name]
```

c_intersect



Defines common objects that are included in each of the collections or lists being compared.

Syntax

```
c_intersect $collection1 $collection2 | list [-print]
```

This command also includes a `-print` option to display the result.

Example

The following example uses the `set` command to create a new collection that contains the results of the `c_intersect` command. The example compares a list to a collection (`myCollection`) and puts the common elements in a new collection called `commonCollection`:

```
%set mycollection {i:reg1 i:reg2}
%set commonCollection [c_intersect $mycollection {i:reg1 i:reg3}]
%c_print $commonCollection
{i:reg1}
```

c_list

Converts a collection to a Tcl list of objects. You can evaluate any collection with this command. If you assign the collection to a variable, you can then manipulate the list using standard Tcl list commands like `lappend` and `lsort`. Optionally, you can specify object properties to add to the resulting list with the `-prop` option:

```
(object prop_value ... prop_value)...
(object prop_value ... prop_value)
```

Syntax

c_list `$collection/list [-prop propertyName]*`

Example

```
%set myModules [find -view *]
%c_list $myModules
{v:top}{v:block_a}{v:block_b}

%c_list $myModules -prop is_vhdl -prop is_verilog

Name      is_vhdl      is_verilog
{v:top}    0            1
{v:block_a} 1            0
{v:block_b} 1            0
```

c_print

Displays collections or properties in column format. Object properties are printed using one or more `-prop propertyName` options.

Syntax

```
c_print {$collection | {list} [-prop propertyName]* [-file filename] [-append] [-foot footer] [-head header]}
```

To print to a file, use the `-file` option. Use `-append` to append to the specified file instead of overwriting it. Use the `-head` and the `-foot` options to add the header and footer respectively, before printing the file. The following command in a constraint file prints the whole collection to a file:

```
c_print -file foo.txt $col
```

The following example adds a header and a footer to the file before printing:

```
% c_print [find -inst *] -head "Search for all..." -foot "Ends here."
```

```
Total finding took: 0 seconds
Search for all...
{i:inst1}
{i:inst2}
<<Collection has 2 objects>>
Ends here.
```

Note that the command prints the file to the current working directory. If you have multiple projects loaded, check that the file is written to the correct location. You can use the `pwd` command in the Tcl window to echo the current directory and then use `cd directoryName` to change the directory as needed.

Example

```
%set modules [find -view *]
%c_print $modules
{v:top}
{v:block_a}
{v:block_b}
```

```
%c_print -prop is_vhdl -prop is_verilog $modules
Name is_vhdl is_verilog
{v:top}0 1
{v:block_a}1 0
{v:block_b}1 0
```

c_symdiff



Compares a collection to another collection or Tcl list and finds the objects that are unique, not shared between the collections or Tcl lists being compared. It is the complement of the [c_intersect command](#) ([c_intersect, on page 179](#)).

Syntax

```
c_symdiff {$collection1 $collection2 | $collection {list} [-print]}
```

This command also includes a `-print` option to display the result.

Examples

The following example uses the `set` command together with the `c_symdiff` command to compare two collections and create a new collection (`symDiffCollection`) that contains the results of the `c_symdiff` command.


```
set symDiff_collection [c_symdiff $collection1 $collection2]
```

The next example is more detailed. It compares a list to a collection (`collection1`) and creates a new collection called `symDiffCollection` from the objects that are different. In this case, `reg1` is excluded from the new collection because it is common to both the list and `collection1`.

```
set collection1 {i:reg1 i:reg2}
set symDiffCollection [c_symdiff $collection1 {i:reg1 i:reg3}]
c_list $symDiffCollection
 {"i:reg2" "i:reg3"}
```

You can also use the command to compare two collections:

c_union

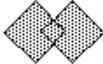

Adds a collection, or a list to a collection, and removes any redundant instances. For this command to work, the design must be open in the GUI.

Syntax

```
c_union {$collection1 $collection2 | $collection {list} [-print]}
```

The **c_union** command automatically removes redundant elements. This command also includes a **-print** option to display the result.

Examples

You can concatenate two collections into a new collection using the **c_union** and **set** commands, as shown in the following example where **collection1** and **collection2** are concatenated into **combined_collection**:

```
set combined_collection [c_union $collection1 $collection2]
```

The following example creates a new collection called **sumCollection**, which is generated by adding a Tcl list with one object (**reg3**) to **collection1**, which consists of **reg1** and **reg2**. The new collection created by **c_union** contains **reg1**, **reg2**, and **reg3**.

```
%set collection1 [find -instance {reg?} -print]
{i:reg1}
{i:reg2}
%set sumcollection [c_union $collection1 {i:reg3}]
%c_list $sumcollection
{i:reg1} {i:reg2} {i:reg3}
```

If instead you added **reg2** and **reg3** to **collection1** with the **c_union** command, the command removes redundant instances (**reg2**), so that the new collection still consists of **reg1**, **reg2**, and **reg3**.

```
%set collection1 {i:reg1 i:reg2}
%set sumcollection [c_union $collection1 {i:reg2 i:reg3}]
%c_list $sumcollection
{i:reg1} {i:reg2} {i:reg3}
```

define_collection

Creates a collection from any combination of single elements, Tcl lists, and collections. You get a warning message about empty collections if you define a collection with a leading asterisk and then define an attribute for it, as shown here:

```
set noretimesh [define_collection [find -hier -seq *uc_alu]]
define_attribute {$noretimesh} {syn_allow_retimings} {0}
```

To avoid the error message, remove the leading asterisk and change *uc_alu to uc_alu.

Example

```
set modules [define_collection {v:top} {v:cpu} $mycoll $mylist]
```

define_scope_collection

The `define_scope_collection` command combines `set` and `define_collection` to create a collection and assigns it to a variable.

```
define_scope_collection my_regs {find -hier -seq *my*}
```

get_prop

Returns a single property value for each member of the collection in a Tcl list.

Examples

```
get_prop -prop clock [find -seq *]
get_prop $listExpandedInst -prop rtl_name LOROM32X1inst
get_prop $listExpandedInst -prop location SLICE_X1y36
```

```
get_prop $listExpandedInst -prop bel C6LUT
get_prop $listExpandedInst -prop slack 0.678
```

If this command is used in a Tcl script and the results need to be printed, use a `puts` command.

```
foreach cel [c_list $all_hier] {puts [get_prop -prop view $cel];}
```

set

Copies a collection to create a new collection. This command copies the collection but not the name, so the two are independent. Changes to the original collection do not affect the copied collection.

Syntax

set *collectionName collectionCriteria*

set *copyName \$collectionName*

collectionName The name of the new collection.

collectionCriteria Criteria for defining the elements to be included in the collection. Use this argument to embed other commands, like `Tcl find` and `expand`, as shown in the examples below, or other collection commands like `define_collection`, `c_intersect`, `c_diff`, `c_union`, and `c_symdiff`. Refer to these commands for examples.

copyName The name assigned to the copied collection.

\$collectionName Name of an existing collection to copy.

Examples

The following syntax examples illustrate how to use the `set` command:

- Use the `set` command to copy a collection:

```
set my_mod_copy $my_module
```

- Use the `set` command with a variable name and an embedded `find` command to create a collection from the `find` command results:

```
set my_module [find -view *]
```

- Use the `set` command with `define_collection` to create a collection:

```
set my_module [define_collection {v:top} {v:cpu} $col_1 $mylist]
```

For more examples of the `set` command used with embedded Tcl collection commands, see the examples in [c_diff, on page 178](#), [c_intersect, on page 179](#), [c_symdiff, on page 182](#), [c_union, on page 183](#), and [define_collection, on page 184](#).

Query Commands

The query commands are Synopsys SDC commands from the Design Compiler® tool for creating collections of specific object types. Functionally, they are equivalent to the Tcl *find* and *expand* commands ([find, on page 151](#) and [expand, on page 173](#)).

These query commands are intended to be used in the FDC file or the HDL Analyst view (see [Query Commands in HDL Analyst Tool, on page 188](#)) to create collections of objects for constraints. This section describes the syntax for the query commands supported in the FPGA synthesis tools. For complete documentation on these commands, see the Design Compiler documentation.

- [all_clocks](#)
- [all_fanin](#)
- [all_fanout](#)
- [all_inputs](#)
- [all_outputs](#)
- [all_registers](#)
- [get_cells](#)
- [get_clocks](#)
- [get_flat_cells](#)
- [get_flat_nets](#)
- [get_flat_pins](#)
- [get_nets](#)
- [get_pins](#)
- [get_ports](#)
- [object_list](#)
- [report_timing](#)

Note: Since all the query commands above are used to create Tcl collections of objects for constraints, they must be enclosed in [] to be applied. For example:

```
set_input_delay 0.5 [all_inputs] -clock clk
```

Query Commands in HDL Analyst Tool

Most of the query commands can be used in both the FDC file and the HDL Analyst view to create collections of objects for constraints. However, the `all_clocks` command cannot be implemented in the HDL Analyst view.

Note that the `get_clock_source` commands are only used in the HDL Analyst view. This feature allows you to test the query commands in the HDL Analyst tool, before implementing them in the FDC file.

To use the query commands in the HDL Analyst RTL view:

1. Enable the option: Implementation Options->Device->Annotate Properties for Analyst.
2. If results are not as expected, check that this option is turned on during compile and before you open the SRS view.

Annotated Properties for Analyst	<input checked="" type="checkbox"/>
Verification Mode	<input type="checkbox"/>
Resolve Mixed Drivers	<input type="checkbox"/>
Read Write Check on RAM	<input checked="" type="checkbox"/>

Query Commands and Tcl find and expand Commands

The Synopsys `get*` commands and `all*` commands are functionally similar to the Tcl `find` and `expand` commands. The `get*` commands and `all*` commands are better suited to use with constraints and the fdc file, because they handle properties like `@clock` better than the Tcl `find` and `expand` commands. In certain cases, the fdc file does not support the `find` and `expand` commands, although you can still enter them in the Tcl window. See [Query Commands and Tcl find and expand Commands, on page 188](#) for examples.

Query and Tcl find/expand Examples

The following table lists parallel examples that compare how to use either the Tcl find/expand or the get/all commands to query design objects and set constraints.

Return the output pins of top-level registers clocked by clk_b (e.g. inst1.inst2.my_reg.Q)

all_registers	FDC Constraint:
	<pre>set_multicycle_path {4} -from [all_registers -no_hierarchy -output_pins -clock [get_clocks {clk_b}]] set_multicycle_path {4} -from [get_pins -of_objects [get_cells * -filter {@clock == clk_b}]] -filter {@name == Q}]</pre>

find	Tcl Window:
	<pre>% define_collection [regsub -all {i:(^\s+)} [join [c_list [find -inst * -filter @clock == clkfx]]] {t:\1.Q}]</pre>

Return all registers in the design clocked by the rising edge of clock clk_{fx}

all_registers	FDC Constraint:
	<pre>set_multicycle_path {3} -to [all_registers -cells -rise_clock [get_clocks {clkfx}]] set_multicycle_path {3} -to [get_cells -hier * -filter {@clock == clkfx && @clock_edge == rise}]</pre>

find	Tcl Window:
	<pre>find -hier -inst * -filter {@clock == clkfx && @clock_edge == rise}</pre>

Return clock pins of all registers clocked by the falling edge of clk_{fx}

all_registers	FDC Constraint:
	<pre>set_multicycle_path {2} -from [all_registers -clock_pins -fall_clock [get_clocks {clkfx}]] set_multicycle_path {2} -from [get_pins -of_objects [get_cells -hier * -filter {@clock == clkfx && @clock_edge == fall}]] -filter {@name == C}]</pre>

find	Tcl Window:
	<pre>% find -hier -inst * -filter {@clock == clkfx && @clock_edge == fall}</pre>

Return the E pins of all instances of dffre cells (e.g. inst1.inst2.my_reg.E)

get_pins	FDC Constraint:
	<pre>set_multicycle_path -to [get_pins -filter {@name == E} -of_objects [get_cells -hier * -filter {@inst_of == dffre}]]</pre>

find	Tcl Window and FDC Constraint:
	<pre>% regsub -all {i:(^\s+)} [join [c_list [find -hier -inst * -filter @inst_of == dffre]]] {t:\1.E}]</pre>

all_clocks

Use this command in the fdc constraint file to return a collection of objects. This command is not supported in the HDL Analyst view.

Returns a collection of clocks in the current design.

Syntax

This is the supported syntax for the all_clocks command:

```
all_clocks
```

This command has no arguments. All clocks must be defined in the design before using this command. To create clocks, you can use the create_clock command.

Example

The following constraint sets a multicycle path from all the starting points.

```
set_multicycle_path 3 -from [all_clocks]
```

all_fanin

Use this command in the fdc constraint file to return a collection of objects and/or in the HDL Analyst view to return a Tcl list of objects.

Reports pins, ports, or cells for the fanin of the specified sinks in the to list.

Syntax

This is the supported syntax for the all_fanin command:

```
all_fanin  
  [-break_on_bboxes]  
  [-endpoints_only]  
  [-exclude_bboxes]  
  [-flat]
```

[-levels** *integer*]**
[-only_cells**]**
[-startpoints_only**]**
-to *listC*
[-trace_arcs** all | timing]**

Arguments

-break_on_bboxes	Stops timing fanin from traversing on black boxes.
-endpoints_only	Returns only timing end points.
-exclude_bboxes	Excludes black boxes from the final result.
-flat	The fanin function operates in flat mode. This function can be specified in hierarchical (default) or flat mode. For hierarchical mode, only objects in the same hierarchy level as the current sink are returned. The pins within a level of hierarchy below the sink are traversed, but are not reported.
-levels <i>integer</i>	Stops traversal when the perimeter of the search <i>integer</i> hops is reached. For example, a level 2 hop traverses through two levels of combinational logic and stops, instead of hopping through all levels and stopping at the first sequential or port object. Counting is performed for the layers of cells that are equidistant from the sink.
-only_cells	Results include a set of all cells from the timing fanin for <i>listC</i> .
-startpoints_only	Returns only timing start points.
-to <i>listC</i>	<i>Required.</i> Reports a list of sink pins, ports, or nets in the design and the timing fanin of each sink in the <i>listC</i> Tcl list or collection specified. When you specify a net, effectively all drivers on the net are listed.
-trace_arcs all timing	Specifies the type of combinational arcs to trace while traversing the fanin. You can specify either: <ul style="list-style-type: none"> • all – Permits tracing of all combinational arcs. This is the default. • timing – Permits tracing of valid timing arcs only.

Examples

The following examples show the timing fanin of a port in the design.

```
all_fanin -to [get_ports y*]
{t:y_obuf[4].O t:y_obuf[3].O t:y_obuf[0].O t:y_obuf[1].O
 t:y_obuf[2].O t:y_obuf[5].O t:y_obuf[6].O t:y_obuf[7].O t:GND.G
 t:moduley_inst.y_c[0] t:moduley_inst.y_c[1]
 t:moduley_inst.y_c[2]}

all_fanin -to [get_ports y*] -startpoints_only -flat
{t:moduley_inst.q[2].Q t:moduley_inst.q[1].Q
 t:moduley_inst.q[0].Q}

all_fanin -to [get_ports y*] -startpoints_only -flat -only_cells
{i:moduley_inst.q[0] i:moduley_inst.q[1] i:moduley_inst.q[2]}
```

all_fanout

Use this command in the fdc constraint file to return a collection of objects and/or in the HDL Analyst view to return a Tcl list of objects.

Returns a set of pins, ports, or cells for the fanout of the specified sources in the from list.

Syntax

This is the supported syntax for the all_fanout command:

```
all_fanout
[-break_on_bboxes]
-clock_tree /-from listC
[-endpoints_only]
[-exclude_bboxes]
[-flat]
[-levels integer]
[-only_cells]
[-trace_arcs all |timing]
```

Arguments

-break_on_bboxes	Stops timing fanout from traversing on black boxes.
-clock_tree	Uses all clock source pins and/or ports in the design as its list of sources. Clock sources are specified with the <code>create_clock</code> command. If there are no clocks or clocks have no sources, then the report is empty. The <code>-clock_tree</code> option generates a report displaying the clock trees or networks in the design. The <code>-clock_tree</code> and <code>-from</code> options are mutually exclusive.
-endpoints_only	Returns only timing end points.
-exclude_bboxes	Excludes black boxes from the final result.
-flat	The fanout function operates in flat mode. This function can be specified in hierarchical (default) or flat mode. For hierarchical mode, only objects in the same hierarchy level as the current source are returned. The pins within a level of hierarchy below the source are traversed, but are not reported.
-from <i>listC</i>	Specifies a list of source pins, ports, or nets in the design. The timing fanout for each source of the <i>listC</i> Tcl list or collection is reported. When you specify a net, effectively all load pins on the net are listed. The <code>-clock_tree</code> and <code>-from</code> options are mutually exclusive.
-levels <i>integer</i>	Stops traversal when the perimeter of the search <i>integer</i> hops is reached. For example, a level 2 hop traverses through two levels of combinational logic and stops, instead of hopping through all levels and stopping at the first sequential or port object. Counting is performed for the layers of cells that are equidistant from the source.
-only_cells	Results include a set of all cells from the timing fanout for the <i>listC</i> .
-trace_arcs all timing	Specifies the type of combinational arcs to trace while traversing the fanout. You can specify either: <ul style="list-style-type: none"> • all – Permits tracing of all combinational arcs. This is the default. • timing – Permits tracing of valid timing arcs only.

Examples

The following examples show the timing fanout of a port in the design.

```
all_fanout -from [get_ports {a*}]
  {t:a_ibuf[0].I t:a_ibuf[1].I t:a_ibuf[2].I t:hold_a.D
   t:modulex_inst.a_c[0] t:modulex_inst.a_c[1]
   t:modulex_inst.a_c[2]}

all_fanout -from [get_ports {a*}] -level 1
  {t:a_ibuf[0].I t:a_ibuf[1].I t:a_ibuf[2].I}

all_fanout -from [get_ports {a*}] -flat -endpoints_only
  {t:hold_a.D t:modulex_inst.qa[0].D t:modulex_inst.qa[1].D
   t:modulex_inst.qa[2].D t:modulex_inst.qa_fast[0].D}
```

all_inputs

Use this command in the fdc constraint file to return a collection of objects and/or in the HDL Analyst view to return a Tcl list of objects.

Returns a collection of input or inout ports in the current design.

Syntax

This is the supported syntax for the all_inputs command:

```
all_inputs
  [-clock clockName]
  [-exclude_clock_port]
```

Arguments

-clock <i>clockName</i>	Limits the search to ports that have input delay relative to <i>clockName</i> .
-exclude_clock_port	Excludes clock ports from the search.

Examples

The following constraints set a default input delay.

```
set_input_delay 3 [all_inputs]  
set_input_delay 3 -clock {clk} [all_inputs]
```

all_outputs

Use this command in the fdc constraint file to return a collection of objects and/or in the HDL Analyst view to return a Tcl list of objects.

Returns a collection of output or inout ports in the current design.

Syntax

This is the supported syntax for the all_outputs command:

```
all_outputs  
[-clock clockName]
```

Arguments

-clock *clockName* Limits the search to ports that have output delay relative to *clockName*.

Examples

The following constraints set a default output delay.

```
set_output_delay 2 [all_outputs]  
set_output_delay 2 -clock {clk} [all_outputs]
```

all_registers

Use this command in the fdc constraint file to return a collection of objects and/or in the HDL Analyst view to return a Tcl list of objects.

Returns a collection of sequential cells or pins in the current design.

Syntax

This is the supported syntax for the `all_registers` command:

```
all_registers
[-clock clockName]
[-rise_clock clockName]
[-fall_clock clockName]
[-cells]
[-data_pins]
[-clock_pins]
[-output_pins]
[-no_hierarchy]
```

Arguments

-clock <i>clockName</i>	Searches only sequential cells that are clocked by the specified clock. By default, all sequential cells in the current design are searched.
-rise_clock <i>clockName</i>	Searches only sequential cells triggered by the rising edge of the specified clock. By default, all sequential cells in the current design are searched.
-fall_clock <i>clockName</i>	Searches only sequential cells triggered by the falling edge of the specified clock. By default, all sequential cells in the current design are searched.
-cells	Returns a collection of sequential cells that meet the search criteria. If you do not specify any of the object types, the command returns a collection of sequential cells.
-data_pins	Returns a collection of data pins for the sequential cells that meet the search criteria.
-clock_pins	Returns a collection of clock pins for the sequential cells that meet the search criteria.
-output_pins	Returns a collection of output pins for the sequential cells that meet the search criteria.

-no_hierarchy	Limits the search to only the current level of hierarchy. Sub-designs are not searched. By default, the entire hierarchy is searched.
----------------------	--

Examples

The following constraint sets a max delay target for timing paths leading to all registers.

```
set_max_delay 10.0 -to [all_registers]
```

The following constraint sets a max delay target for timing paths leading to all registers clocked by PHI2.

```
set_max_delay 10.0 -to [all_registers -clock [get_clocks PHI2]]
```

get_cells

Use this command in the fdc constraint file to return a collection of objects and/or in the HDL Analyst view to return a Tcl list of objects.

Creates a collection of cells from the current design that is relative to the current instance.

Syntax

This is the supported syntax for the get_cells command:

```
get_cells  
[-hierarchical]  
[-nocase]  
[-regexp]  
[-filter expression]  
[pattern]
```

Arguments

-hierarchical	Searches each level of hierarchy for cells in the design relative to the current instance. The object name at a particular level must match the patterns. For the cell block1/adder, a hierarchical search uses "adder" to find this cell name. By default, the search is <i>not</i> hierarchical.
-nocase	Ensures that matches are case-insensitive. This applies for both the patterns argument and the filter operators (=~ and !~).
-regexp	Views the patterns argument as a regular expression rather than a simple wildcard pattern. The behavior of the filter operators (=~ and !~) have also been modified to use regular expression rather than simple wildcard patterns. When using the -regexp option, be careful how you quote the patterns argument and filter expression. Rigidly quoting with curly braces around regular expressions is recommended. Regular expressions are always anchored; that is, the expression assumes matching begins at the beginning of the object name and ends matching at the end of an object name. You can expand the search by adding ". *" to the beginning or end of the expressions, as needed.
-filter expressions	Filters the collection with the specified expression. For each cell in the collection, the expression is evaluated based on the cell's attributes. If the expression evaluates to true, the cell is included in the result.
pattern	Creates a collection of cells whose names match the specified patterns. Patterns can include the * (asterisk) and ? (question mark) wildcard characters. Pattern matching is case sensitive unless you use the -nocase option.

Examples

The following example creates a collection of cells that begin with o and reference an FD2 library cell.

```
get_cells "o*" -filter "@ref_name =~ FD2"
```

The following example creates a collection of cells connected to a collection of pins.

```
set pinsel [get_pins o*/cp]
get_cells -of_objects $pinsel
```

The following example creates a collection of cells connected to a collection of nets.

```
set netsel [get_nets tmp]
get_cells -of_objects $netsel
```

This example creates a collection of cells with the string BSCAN in its name. Make sure to use the "`=~`" operator when performing wildcard matching.

```
get_cells -hier * -filter {@hier_rtl_name =~ *BSCAN*}
```

get_clocks

Use this command in the fdc constraint file and in the HDL Analyst view (on a limited basis) to return a collection of objects.

Creates a collection of clocks from the current design.

Syntax

This is the supported syntax for the get_clocks command:

```
get_clocks
[-nocase]
[-regexp]
[-filter expression]
[pattern | -of_objects objects]
[-include_generated_clocks]
```

Arguments

-nocase	Ensures that matches are case-insensitive. This applies for both the patterns argument and the filter operators (<code>=~</code> and <code>!~</code>).
----------------	--

-regexp	Views the patterns argument as a regular expression rather than a simple wildcard pattern. The behavior of the filter operators (=~ and !~) have also been modified to use regular expression rather than simple wildcard patterns. When using the -regexp option, be careful how you quote the patterns argument and filter expression. Rigidly quoting with curly braces around regular expressions is recommended. Regular expressions are always anchored; that is, the expression assumes matching begins at the beginning of the object name and ends matching at the end of an object name. You can expand the search by adding ". *" to the beginning or end of the expressions, as needed.
-filter expressions	Filters the collection with the specified expression. For each clock in the collection, the expression is evaluated based on the clock's attributes. If the expression evaluates to true, the clock is included in the result. This option is not supported in the HDL Analyst view.
<i>pattern</i>	Creates a collection of clocks whose names match the specified patterns. Patterns can include the * (asterisk) and ? (question mark) wildcard characters. Pattern matching is case sensitive unless you use the -nocase option.
-of_objects objects	Creates a collection of clocks that are defined for the given net or pin objects.
-include_generated_clocks	Creates a collection of clocks matching the search criteria and includes any clocks derived or generated from the source clocks found. This option is not supported in the HDL Analyst view.

Examples

The following example creates a collection of clocks that match the wildcard pattern.

```
get_clocks {*BUF_1*derived_clock*}
```

The following example creates a collection of clocks that match the given regular expression.

```
get_clocks -regexp {.*derived_clock}
```

The following example creates a collection that includes clka and any generated or derived clocks of clka.

```
get_clocks -include_generated_clocks {clka}
```

get_flat_cells

Creates a collection of leaf cells that match certain criteria in the current design.

Syntax

```
get_flat_cells  
  [-regexp | -exact]  
  [-nocase]  
  [-filter expr]  
  [patterns | -of_objects objects]  
  [-print]
```

Arguments

-regexp

Views the *patterns* argument as a regular expression rather than a simple wildcard pattern. This option also modifies the behavior of the `=~` and `!~` filter operators to use regular expressions rather than simple wildcard patterns.

When using the **-regexp** option, be careful how you quote the patterns argument and filter expression. Using rigid quoting with curly braces around regular expressions is recommended. Note that regular expressions are always anchored; that is, the expression is assumed to begin matching at the beginning of an object name and end matching at the end of an object name. You can widen the search by adding `"*"` at the beginning or end of the expressions, as needed.

The **-regexp** and **-exact** options are mutually exclusive; you can use only one.

-exact	Considers wildcards to be plain characters, and does not interpret their meaning as wildcards.
	The -regexp and -exact options are mutually exclusive; you can use only one.
-nocase	Makes matches case-insensitive, both for the patterns argument and for the ==, =~, and !~ filter operators.
-filter expression	Filters the collection with the specified expression. For each cell in the collection, the expression is evaluated based on the cell's attributes. If the expression evaluates to true, the cell is included in the result.
<i>patterns</i>	<p>Creates a collection of cells whose full names match the specified <i>patterns</i>. Patterns can include the * (asterisk) and ? (question mark) wildcard characters. Pattern matching is case sensitive unless you use the -nocase option.</p> <p>When using the <i>patterns</i> argument, the command searches all leaf cells to match the patterns argument on their full names regardless of their hierarchical level.</p> <p>The <i>patterns</i> and -of_objects arguments are mutually exclusive; you can specify only one. If you do not specify any of these arguments, the command uses the * (asterisk) as the default pattern.</p>
-of_objects <i>objects</i>	Creates a collection of cells connected to the specified objects. The patterns and -of_objects arguments are mutually exclusive; you can specify only one. If you do not specify any of these arguments, the command uses the * (asterisk) as the default pattern.
-print	Prints the contents of the collection.

get_flat_nets

Creates a collection of top-level nets of hierarchical net groups in the current design that match the specified criteria.

Syntax

```
get_flat_pins
[-regexp | -exact]
[-nocase]
[-filter exper]
[patterns | -of_objects objects]
[-print]
```

Arguments

-regexp

Views the *patterns* argument as a regular expression rather than a simple wildcard pattern. This option also modifies the behavior of the `=~` and `!~` filter operators to use regular expressions rather than simple wildcard patterns. When using the **-regexp** option, be careful how you quote the patterns argument and filter expression. Using rigid quoting with curly braces around regular expressions is recommended. Note that regular expressions are always anchored; that is, the expression is assumed to begin matching at the beginning of an object name and end matching at the end of an object name. You can widen the search by adding `".*"` at the beginning or end of the expressions, as needed.

The **-regexp** and **-exact** options are mutually exclusive; you can use only one.

-exact

Considers wildcards to be plain characters, and does not interpret their meaning as wildcards.

The **-regexp** and **-exact** options are mutually exclusive; you can use only one.

-nocase

Makes matches case-insensitive, both for the patterns argument and for the `==`, `=~`, and `!~` filter operators.

-filter expression	Filters the collection with the specified expression. For each net in the collection, the expression is evaluated based on the net's attributes. If the expression evaluates to true, the net is included in the result.
patterns	<p>Creates a collection of top-level nets of hierarchical net groups whose full names match the specified patterns. Patterns can include the * (asterisk) and ? (question mark) wildcard characters. Patterns can include the asterisk (*) and question mark (?) wildcard characters. Pattern matching is case sensitive unless you use the -nocase option.</p> <p>When using the patterns argument, the command searches all top-level nets of hierarchical net groups to match the patterns argument on their full name.</p> <p>The patterns and -of_objects arguments are mutually exclusive; you can specify only one. If you do not specify any of these arguments, the command uses the * (asterisk) as the default pattern.</p>
-of_objects objects	Creates a collection of top-level nets of hierarchical net groups that are connected to the specified objects. Each object is either a named pin, port, net, cell, or a collection of these objects. The patterns and -of_objects arguments are mutually exclusive; you can specify only one. If you do not specify any of these arguments, the command uses the * (asterisk) as the default pattern.
-print	Prints the contents of the collection.

get_flat_pins

Creates a collection of leaf-cell pins that match specified criteria in the current design.

Syntax

```
get_flat_pins
[-regexp | -exact]
[-nocase]
[-filter exper]
[patterns | -of_objects objects]
[-print]
```

Arguments

-regexp

Views the *patterns* argument as a regular expression rather than a simple wildcard pattern. This option also modifies the behavior of the `=~` and `!~` filter operators to use regular expressions rather than simple wildcard patterns. When using the **-regexp** option, be careful how you quote the patterns argument and filter expression. Using rigid quoting with curly braces around regular expressions is recommended. Note that regular expressions are always anchored; that is, the expression is assumed to begin matching at the beginning of an object name and end matching at the end of an object name. You can widen the search by adding `".*"` at the beginning or end of the expressions, as needed.

The **-regexp** and **-exact** options are mutually exclusive; you can use only one.

-exact

Considers wildcards to be plain characters, and does not interpret their meaning as wildcards.

The **-regexp** and **-exact** options are mutually exclusive; you can use only one.

-nocase

Makes matches case-insensitive, both for the patterns argument and for the `==`, `=~`, and `!~` filter operators.

-filter expression	Filters the collection with the specified expression. For each pin in the collection, the expression is evaluated based on the pin's attributes. If the expression evaluates to true, the pin is included in the result.
<i>patterns</i>	Creates a collection of leaf-cell pins whose full names match the specified patterns. Patterns can include the asterisk (*) and question mark (?) wildcard characters. Pattern matching is case sensitive unless you use the -nocase option. When using the <i>patterns</i> argument, the command searches all pins of leaf cells to match the <i>patterns</i> argument on their full names regardless of their hierarchical level. The <i>patterns</i> and -of_objects arguments are mutually exclusive; you can specify only one. If you do not specify any of these arguments, the command uses the * (asterisk) as the default pattern.
-of_objects objects	Creates a collection of leaf-cell pins connected to the specified objects. Each object is a named leaf cell, a net, or a collection of these objects. The <i>patterns</i> and -of_objects arguments are mutually exclusive; you can specify only one. If you do not specify any of these arguments, the command uses the * (asterisk) as the default pattern.
-print	Prints the contents of the collection.

get_nets

Use this command in the fdc constraint file to return a collection of objects and/or in the HDL Analyst view to return a Tcl list of objects.

Creates a collection of nets from the current design.

Syntax

This is the supported syntax for the get_nets command:

```
get_nets
[-hierarchical]
[-nocase]
[-regexp | -exact]
[-filter expression]
[pattern | -of_objects objects]
```

Arguments

-hierarchical	Searches each level of hierarchy for nets in the design relative to the current instance. The object name at a particular level must match the patterns. For the net block1/muxsel a hierarchical search uses muxsel to find this net name. By default, the search is <i>not</i> hierarchical.
-nocase	Ensures that matches are case-insensitive. This applies for both the patterns argument and the filter operators (=~ and !~).
-regexp	Views the patterns argument as a regular expression rather than a simple wildcard pattern. The behavior of the filter operators (=~ and !~) have also been modified to use regular expression rather than simple wildcard patterns. When using the -regexp option, be careful how you quote the patterns argument and filter expression. Rigidly quoting with curly braces around regular expressions is recommended. Regular expressions are always anchored; that is, the expression assumes matching begins at the beginning of the object name and ends matching at the end of an object name. You can expand the search by adding ". *" to the beginning or end of the expressions, as needed.

-filter expressions	Filters the collection with the specified expression. For any nets in the collection, the expression is evaluated based on the net's attributes. If the expression evaluates to true, the net is included in the result.
pattern	Creates a collection of nets whose names match the specified patterns. Patterns can include the * (asterisk) and ? (question mark) wildcard characters. Pattern matching is case sensitive unless you use the -nocase option. The patterns and -of_objects arguments are mutually exclusive; you can specify only one. If you do not specify any of these arguments, the command uses * (asterisk) as the default pattern.
-of_objects objects	Creates a collection of nets connected to the specified objects. Each object can be a pin, port, or cell.

Examples

The following example creates a collection of nets connected to a collection of pins.

```
set pinsel [get_pins {o_reg1.Q o_reg2.Q}]
get_nets -of_objects $pinsel
```

The following example creates a collection of nets connected to the E pin of any cell in the modulex_inst hierarchy.

```
get_nets {*.*} -filter {@pins =~ modulex_inst.*.E}
```

get_pins

Use this command in the fdc constraint file to return a collection of objects and/or in the HDL Analyst view to return a Tcl list of objects.

Creates a collection of pins from the current design that match the specified criteria.

Syntax

This is the supported syntax for the get_pins command:

```
get_pins
[-hierarchical]
[-nocase]
[-regexp | -exact]
[-filter expression]
[pattern | -of _objects objects [-leaf]
```

Arguments

-hierarchical	Searches each level of hierarchy for pins in the design relative to the current instance. The object name at a particular level must match the patterns. For the cell block1/adder/D[0], a hierarchical search uses adder/D[0] to find this pin name. By default, the search is <i>not</i> hierarchical.
-nocase	Ensures that matches are case-insensitive. This applies for both the patterns argument and the filter operators (=~ and !~).
-regexp	Views the patterns argument as a regular expression rather than a simple wildcard pattern. The behavior of the filter operators (=~ and !~) have also been modified to use regular expression rather than simple wildcard patterns. When using the -regexp option, be careful how you quote the patterns argument and filter expression. Rigidly quoting with curly braces around regular expressions is recommended. Regular expressions are always anchored; that is, the expression assumes matching begins at the beginning of the object name and ends matching at the end of an object name. You can expand the search by adding ". * " to the beginning or end of the expressions, as needed. The -regexp and -exact options are mutually exclusive; use only one.
-exact	Treats wildcards as plain characters, so the meanings of these wildcard are not interpreted. The -regexp and -exact options are mutually exclusive; use only one.
-filter expressions	Filters the collection with the specified expression. For each pin in the collection, the expression is evaluated based on the pin's attributes. If the expression evaluates to true, the cell is included in the result.

<i>pattern</i>	Creates a collection of pins whose names match the specified patterns. Patterns can include the * (asterisk) and ? (question mark) wildcard characters. Pattern matching is case sensitive unless you use the -nocase option. The patterns and -of_objects arguments are mutually exclusive; you can specify only one. If you do not specify any of these arguments, the command uses * (asterisk) as the default pattern.
-of_objects <i>objects</i>	Creates a collection of pins connected to the specified objects. Each object can be a cell or net. By default, the command considers only pins connected to the specified nets at the same hierarchical level. To consider only pins connected to leaf cells on the specified nets, use the -leaf option. You cannot use the -hierarchical option with the -of_objects option.
-leaf	Includes pins that are on leaf cells connected to the nets specified with the -of_objects option. The tool can cross hierarchical boundaries to find pins on leaf cells.

Examples

The following example creates a collection for all pins in the design.

```
get_pins -hier *.*
```

The following example creates a collection for pins from the top-level hierarchy that match the regular expression.

```
get_pins -regexp {.*\.ena}
```

The following example creates a collection for pins throughout the hierarchy that match the regular expression.

```
get_pins -hier - regexp {.*\.ena}
```

The following example creates a collection of hierarchical pin names for the library cell pin DQSFOUND, and for each instantiation of a library cell named PHASER_IN_PHY.

```
get_pins -filter {@name =~ DQSFOUND} -of_objects [get_cells -hier
* -filter {@inst_of =~ PHASER_IN_PHY}]
```

The following example creates a collection of library cell pins with the string DRCK in its name, for each instantiation of a library cell with the string BSCAN in its name. Whenever you use wildcards to match names, make sure to specify the " $=\sim$ " operator instead of the " $\==$ " operator.

```
[get_pins -filter {@name=\sim*DRCK} -of_objects [get_cells -hier * - filter {@hier_rtl_name =\sim *BSCAN*}]]
```

get_ports

Use this command in the fdc constraint file to return a collection of objects and/or in the HDL Analyst view to return a Tcl list of objects.

Creates a collection of ports from that match the specified criteria.

Syntax

This is the supported syntax for the get_ports command:

```
get_ports  
  [-nocase]  
  [-regexp]  
  [-filter expression]  
  [pattern]
```

Arguments

-nocase	Ensures that matches are case-insensitive. This applies for both the patterns argument and the filter operators ($=\sim$ and $!\sim$).
-regexp	<p>Views the patterns argument as a regular expression rather than a simple wildcard pattern. The behavior of the filter operators ($=\sim$ and $!\sim$) have also been modified to use regular expression rather than simple wildcard patterns.</p> <p>When using the -regexp option, be careful how you quote the patterns argument and filter expression. Rigidly quoting with curly braces around regular expressions is recommended. Regular expressions are always anchored; that is, the expression assumes matching begins at the beginning of the object name and ends matching at the end of an object name. You can expand the search by adding ". * " to the beginning or end of the expressions, as needed.</p>

-filter expressions	Filters the collection with the specified expression. For each port in the collection, the expression is evaluated based on the port's attributes. If the expression evaluates to true, the port is included in the result.
pattern	Creates a collection of ports whose names match the specified patterns. Patterns can include the * (asterisk) and ? (question mark) wildcard characters. Pattern matching is case sensitive unless you use the -nocase option. The patterns and -of_objects arguments are mutually exclusive, so only specify one of them. If you do not specify either argument, the command uses * (asterisk) as the default pattern.

Examples

The following example queries all input ports beginning with mode.

```
get_ports mode* -filter {@direction =~ input}
```

object_list

Translates object strings returned by query commands in the HDL Analyst tool to proper Tcl lists. This allows you to process the results using Tcl commands.

Syntax

This is the supported syntax for the object_list command:

```
object_list objectString
```

Arguments

<i>objectString</i>	Converts the object string returned by an FDC query command to proper Tcl lists.
---------------------	--

Examples

For example:

```
% foreach x [object_list [get_cells -hier {q[*]}]]  
  {puts "Match: $x"}  
  
Match: i:modulex_inst.q[7:0]  
Match: i:moduley_inst\[4\].q[7:0]
```

report_timing

Alternatively, use this command to generate timing reports for a design from the Tcl window, which follows the standards set for the Design Compiler or PrimeTime® commands. One advantage this command has over the Timing Analyst GUI in the synthesis tool is that the filter options (for example, -from/-to/-through) support the FDC query commands.

Syntax

This is the supported syntax for the report_timing command:

```
report_timing  
  [-delay_type max]  
  [-fall_from clock]  
  [-fall_to clock]  
  [-file string]  
  [-from list]  
  [-max_paths int]  
  [-nworst 1]  
  [-path_type full]  
  [-rise_from clock]  
  [-rise_to clock]  
  [-slack_margin float]  
  [-through instance]  
  [-to list]
```

Arguments

-delay_type max	Specifies the path type for the end points. This default value can be specified as max; the maximum delay. All other values are ignored.
-fall_from clock	Reports paths from the falling edge of the specified clock. For a given clock, selects the starting points for paths clocked on the falling edge of the clock source.

-fall_to clock	Reports paths to the falling edge of the specified clock. For a given clock, selects the ending points for paths clocked on the falling edge of the clock source.
-file string	Allows the report to be re-directed to the specified file.
-from list	Reports paths from the specified port, register, register pin, or clock.
-max_paths int	Reports the number of paths to report for the path group. The default integer value is 1.
-nworst 1	Reports the maximum number of paths to report for each timing end point. The default is 1, which reports the single worst path at a given end point. All other values are ignored.
-path_type full	Specifies how to display the timing path. This default value can be specified as full. A complete timing report is displayed, for example, containing timing start and end points, required time, and slack. All other values are ignored.
-rise_from clock	Reports paths from the rising edge of the specified clock. For a given clock, selects the starting points for paths clocked on the rising edge of the clock source.
-rise_to clock	Reports paths to the rising edge of the specified clock. For a given clock, selects the ending points for paths clocked on the rising edge of the clock source.
-slack_margin float	Reports paths for the specified slack margin, which allows you to specify a floating point value for the range of worst slack times.
-through instance	Reports paths that pass through the specified pins or nets.
-to list	Reports paths to the specified ports, register, register pin, or clock.

Examples

The following example reports timing to all registers clocked by clkb.

```
%report_timing -to [all_registers -clock {clkb}]

##### START OF TIMING REPORT #####
# Timing Report written on Mon Dec 16 10:35:02 2013|
#
Top view:          top
Requested Frequency: 50.0 MHz
```

```
Wire load mode:          top
Paths requested:        1
to:                     moduley_inst.qa[7:0] moduley_inst.qb[7:0]
```

Worst From-To Path Information

Path information for path number 1:

Requested Period:	10.000
- Setup time:	-1.000
+ Clock delay at ending point:	0.909
= Required time:	11.909
- Propagation time:	0.000
= Slack :	11.909
Number of logic level(s):	1
Starting point:	c[7:0] / c[0]
Ending point:	moduley_inst.qa[0] / D
The start point is clocked by	clkb [rising]
The end point is clocked by	clkb [rising] on pin C

Instance/Net Name	Type	Pin Name	Pin Dir	Delay	Arrival Time	No. of Fan Out(s)
c[7:0]	Port	c[0]	In	0.000	0.000	-
c[0]	Net	-	-	0.000	-	1
c_ibuf[0]	IBUF	I	In	-	0.000	-
c_ibuf[0]	IBUF	O	Out	0.000	0.000	-
c_c[0]	Net	-	-	0.000	-	1
moduley_inst.qa[0]	FDE	D	In	-	0.000	-

Path delay compensated for clock skew. Clock skew is added to clock-to-out value, and is subtracted from setup time value

End clock path:

Instance/Net Name	Type	Pin Name	Pin Dir	Delay	Arrival Time	No. of Fan Out(s)
clkb	Port	c[0]	In	0.000	0.000	-
clkb	Net	-	-	0.000	-	1
clkb_IBUFG	IBUF	I	In	-	0.000	-

Instance/Net Name	Type	Pin Name	Pin Dir	Delay	Arrival Time	No. of Fan Out(s)
clkb_IBUFG	IBUF	O	Out	0.000	0.000	-
clkb_i	Net	-	-	0.000	-	1
moduley_inst.qa[0]	FDE	D	In	-	0.000	-

END OF TIMING REPORT #####]

Synopsys Standard Collection Commands

There are a number of Synopsys standard SDC collection commands that can be included in the fdc file. These commands are not compatible with the `define_scope_collection` command.

The collection commands let you manipulate or operate on multiple design objects simultaneously by creating, copying, evaluating, iterating, and filtering collections. This section describes the syntax for the following collection commands supported in the FPGA synthesis tools; for the complete syntax for these commands, refer to the Design Compiler documentation.

- [add_to_collection](#)
- [append_to_collection](#)
- [copy_collection](#)
- [foreach_in_collection](#)
- [get_object_name](#)
- [index_collection](#)
- [remove_from_collection](#)
- [sizeof_collection](#)

Use these commands in the FDC constraint file to facilitate the shared scripting of constraint specifications between the FPGA synthesis and Design Compiler tools.

add_to_collection

Adds objects to a collection that results in a new collection. The base collection remains unchanged. Any duplicate objects in the resulting collection are automatically removed from the collection.

Syntax

This is the supported syntax for the `add_to_collection` command:

```
add_to_collection
[collection1]
[objectSpec]
```

Arguments

<i>collection1</i>	Specifies the base collection to which objects are to be added. This collection is copied to a resulting collection, where objects matching <i>objectSpec</i> are added to this results collection.
<i>objectSpec</i>	Specifies a list of named objects or collections to add. Depending on the base collection type (heterogeneous or homogeneous), the searches and resulting collection may differ. For more information, see Heterogeneous Base Collection, on page 218 and Homogeneous Base Collection, on page 218 .

Description

The `add_to_collection` command allows you to add elements to a collection. The result is a new collection representing the objects added from the *objectSpec* list to the base collection. Objects are duplicated in the resulting collection, unless they are removed using the `-unique` option. If *objectSpec* is empty, then the new collection is a copy of the base collection. Depending on the base collection type (heterogeneous or homogeneous), the searches and resulting collection may differ.

Heterogeneous Base Collection

If the base collection is heterogeneous, then only collections are added to the resulting collection. All implicit elements of the *objectSpec* list are ignored.

Homogeneous Base Collection

If the base collection is homogeneous and any elements of *objectSpec* are not collections, then the command searches the design using the object class of the base collection.

When *collection1* is an empty collection, special rules apply to *objectSpec*. If *objectSpec* is not empty, at least one homogeneous collection must be in the *objectSpec* list (can be any position in the list). The first homogeneous collection in the *objectSpec* list becomes the base collection and sets the object class for the function.

Examples

```
set result [get_cells{u*}]
get_object_name $result
==> {u:u1} {i:u2} {i:u3}

set result_1 [add_to_collection $result {get_cells {i:clkb_IBUFG}}
get_object_name $result_1
==> {i:u1} {i:u2} {i:u3} {i:clkb_IBUFG}
```

See [append_to_collection](#).

append_to_collection

Adds objects to the collection specified by a variable, modifying its value. Objects must be unique, since duplicate objects are not supported.

Syntax

This is the supported syntax for the `append_to_collection` command:

```
append_to_collection
  [variableName]
  [objectSpec]
```

Arguments

<i>variableName</i>	Specifies a variable name. The objects matching <i>objectSpec</i> are added to the collection referenced by this variable.
<i>objectSpec</i>	Specifies a list of named objects or collections to add to the resulting collection.

Description

The `append_to_collection` command allows you to add elements to a collection. This command treats the *variableName* option as a collection, and appends all the elements of *objectSpec* to that collection. If the variable does not exist, it creates a collection with elements from the *objectSpec* as its value. So, a

collection is created that was referenced initially by *variableName* or automatically if the *variableName* was not provided. However, if the variable exists but does not contain a collection, then an error is generated.

The `append_to_collection` command can be more efficient than the `add_to_collection` command ([add_to_collection, on page 217](#)) when you are building a collection in a loop.

Examples

```
set result [get_cells{u*}]
get_object_name $result
==> {u:u1} {i:u2} {i:u3}

append_to_collection result {get_cells {i:clkb_IBUFG}}
get_object_name $result
==> {i:u1} {i:u2} {i:u3} {i:clkb_IBUFG}
```

See Also

- [add_to_collection](#)

copy_collection

Duplicates the contents of a collection that results a new collection. The base collection remains unchanged.

Syntax

This is the supported syntax for the `copy_collection` command:

```
copy_collection
[collection1]
```

Arguments

<i>collection1</i>	Specifies the collection to be copied.
--------------------	--

Description

The `copy_collection` command is an efficient mechanism to create a duplicate of an existing collection. It is sometimes more efficient and usually sufficient to simply have more than one variable referencing the same collection. However, whenever you want to copy the collection instead of reference it, use the `copy_collection` command.

Be aware that if an empty string is used for the `collection1` argument, the command returns an empty string. This means that a copy of the empty collection is an empty collection.

Examples

```
set insts [define_collection {u1 u2 u3 u4}]
set result_copy [copy_collection $insts]
get_object_name $result_copy
==> {u1} {u2} {u3} {u4}
```

foreach_in_collection

Iterates on the elements of a collection.

Syntax

This is the supported syntax for the `foreach_in_collection` command:

```
foreach_in_collection
  [iterationVariable]
  [collections]
  [body]
```

Arguments

<i>iterationVariable</i>	Specifies the name of the iteration variable. It is set to a collection of one object. Any argument that accepts collections as an argument can also accept the <i>iterationVariable</i> , as they are the same data type.
--------------------------	--

<i>collections</i>	Specifies a list of collections on which to iterate.
--------------------	--

<i>body</i>	Specifies a script to execute for the iteration. If the body of the iteration is modifying the netlist, all or part of the collection involved in the iteration can be deleted. The <code>foreach_in_collection</code> command is safe for such operations. A message is generated that indicates the iteration ended prematurely.
-------------	--

Description

The `foreach_in_collection` command is a Design Compiler and PrimeTime command used to iterate on each element of a collection. This command requires the following arguments: an iteration variable (do not specify a list), the collection on which to iterate, and the script to apply for each iteration.

You can nest this command within other control structures, including another `foreach_in_collection` command.

You can include the command in an FDC file, but if you are using the Tcl window and HDL Analyst, you must use the standard Tcl `foreach` command instead of `foreach_in_collection`.

Examples

The following examples show valid methods to reference a collection for this command:

```
set seqs[all_registers]
set ports[all_inputs]

foreach_in_collection x [all_registers] {body}
foreach_in_collection x $ports {body}
foreach_in_collection x [list $seqs $ports] {body}
foreach_in_collection x {$seqs} {body}
foreach_in_collection x {$seqs $ports} {body}
```

get_object_name

Returns a list of names for objects in a collection.

Syntax

This is the supported syntax for the `get_object_name` command:

```
get_object_name
  [collection1]
```

Arguments

<i>collection1</i>	Specifies the name of the collection that contains the requested objects.
--------------------	---

Examples

```
set c1[define_collection {u1 u2}]
get_object_name $c1
==> {u1} {u2}
```

index_collection

Creates a new collection that contains only the single object for the index specified in the base collection. You must provide an index to the collection.

Syntax

This is the supported syntax for the `index_collection` command:

```
index_collection
  [collection1]
  [index]
```

Arguments

<i>collection1</i>	Specifies the collection to be searched.
--------------------	--

<i>index</i>	Specifies an index to the collection. Allowed values are integers from 0 to <code>sizeof_collection -1</code> .
--------------	---

Description

You can use the `index_collection` command to extract a single object from a collection. The result is a new collection that contains only this object. The range of indices can be from 0 to one less than the size of the collection. If the specified index is outside that range, an error message is generated.

Commands that create a collection of objects do not impose a specific order on the collection, but they do generate the objects in the same, predictable order each time. Applications that support the sorting of collections allow you to impose a specific order on a collection.

If you use an empty string for the `collection1` argument, then any index to the empty collection is not valid. This results in an empty collection and generates an error message.

Be aware that all collections cannot be indexed.

Examples

```
set c1[get_cells {u1 u2}]
get_object_name [index_collection $c1 0]
==> {u1}
```

See Also

- [sizeof_collection](#)

remove_from_collection

Removes objects from a collection that results in a new collection. The base collection remains unchanged.

Syntax

This is the supported syntax for the remove_from_collection command:

```
remove_from_collection
[-intersect]
[collection1]
[objectSpec]
```

Arguments

-intersect	Removes objects from the base collection that are <i>not</i> found in <i>objectSpec</i> . By default, when this option is not specified, objects are removed from the base collection that is found in the <i>objectSpec</i> .
<i>collection1</i>	Specifies the base collection that is copied to a resulting collection, where objects matching <i>objectSpec</i> are removed from this results collection.
<i>objectSpec</i>	Specifies a list of named objects or collections to remove. The object class for each element in this list must be the same in the base collection. If the name matches an existing collection, that collection is used. Otherwise, objects are searched in the design using the object class for the base collection.

Description

The remove_from_collection command removes elements from a collection and creates a new collection.

When the -intersect option is not specified and there are no matches for *objectSpec*, the resulting collection is just a copy of the base collection. If everything in the *collection1* option matches the *objectSpec*, this results in an empty collection. When using the -intersect option, nothing is removed from the resulting collection.

Heterogeneous Base Collection

If the base collection is heterogeneous, then any elements of *objectSpec* that are not collections are ignored.

Homogeneous Base Collection

If the base collection is homogeneous and any elements of *objectSpec* are not collections, then the command searches the design using the object class of the base collection.

Examples

```
set c1[define_collection {u1 u2 u3}]
set c2[define_collection {u2 u3 u4}]
get_object_name [remove_from_collection $c1 $c2]
==> {u1}

get_object_name [remove_from_collection $c2 $c1]
==> {u4}

get_object_name [remove_from_collection -intersect $c1 $c2]
==> {u2} {u3}
```

See Also

- [add_to_collection](#)

sizeof_collection

Returns the number of objects in a collection.

Syntax

This is the supported syntax for the `sizeof_collection` command:

```
sizeof_collection
[collection1]
```

Arguments

<i>collection1</i>	Specifies the name of the collection for which the number of objects is requested. If no collection argument is specified, then the command returns 0.
--------------------	---

Examples

```
set c1[define_collection {u1 u2 u3}]\nsizeof_collection $c1\n==> 3
```


CHAPTER 4

Constraint Commands

The SCOPE (Synthesis Constraints OPtimization Environment[®]) editor automatically generates syntax for synthesis constraints. Enter information in the SCOPE tabs, panels, columns, and pull-downs to define constraints and parameter values. You can also drag and drop objects from the HDL Analyst UI to populate values in the constraint fields.

This interface creates Tcl-format *Synopsys Standard timing constraints* and *Synplify-style design constraints* and saves the syntax to an FPGA design constraints (FDC) file that is automatically added to your synthesis project. See [Constraint Types, on page 126](#) for definitions of synthesis constraints.

Topics in this section include:


- [SCOPE Constraints Editor](#), on page 230
- [SCOPE Tabs](#), on page 231
- [Industry I/O Standards](#), on page 257
- [Delay Path Timing Exceptions](#), on page 261
- [Specifying From, To, and Through Points](#), on page 266
- [Conflict Resolution for Timing Exceptions](#), on page 274

You can also specify Tcl equivalents for the timing and design constraints that are included in the SCOPE editor or a constraint file. For the constraint command syntax, see:

- [Timing Constraints](#), on page 278.
- [Design Constraints](#), on page 317

SCOPE Constraints Editor

The SCOPE editor contains a number of panels for creating and managing timing constraints and design attributes. This GUI offers the easiest way to create constraint files for your project. The syntax is saved to a file using an FDC extension and can be included in your design project.

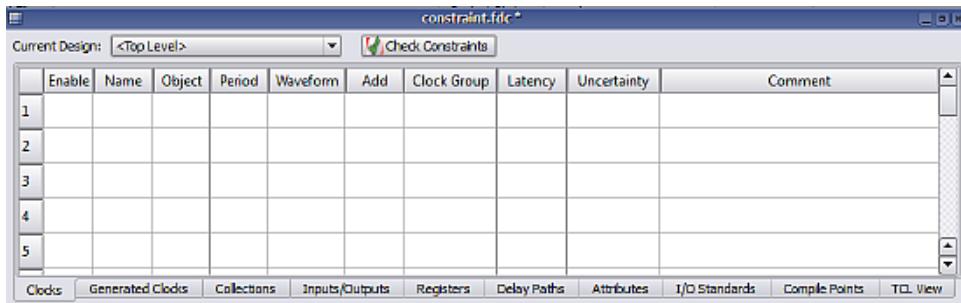

From this editor, you specify timing constraints for clocks, ports, and nets as well as design constraints such as attributes, collections, and compile points. However, you cannot set black-box constraints from the SCOPE window.

To bring up the editor, use one of the following methods from the Project view:

- For a new file (the project file is open and the design is compiled):
 - Choose File->New-> FPGA Design Constraints; select FPGA Constraint File (SCOPE).
 - Click the SCOPE icon in the toolbar; select FPGA Constraint File (SCOPE).
- You can also open the editor using an existing constraint file. Double-click on the constraint file (FDC), or use File->Open, specifying the file type as FPGA Design Constraints File (*.fdc).

For more information about using FPGA timing constraints with your project, see [Using the SCOPE Editor, on page 148](#).

For general information on the Design Constraints Format, see the *Using the Synopsys Design Constraints Format Application Note* on the Synopsys website.

SCOPE Tabs

Here is a summary of the constraints created through the SCOPE editor:

SCOPE Panel	See ...
Clocks	Clocks , on page 232
Generated Clocks	Generated Clocks , on page 237
Collections	Collections , on page 239
Inputs/Outputs	Inputs/Outputs , on page 242
Registers	Registers , on page 245
Delay Paths	Delay Paths , on page 246
Attributes	Attributes , on page 249
I/O Standards	I/O Standards , on page 250
Compile Points	Compile Points , on page 252
TCL View	TCL View , on page 255

If you choose an object from a SCOPE pull-down menu, it has the appropriate prefix appended automatically. If you drag and drop an object from an RTL view, for example, make sure to add the prefix appropriate to the language used for the module. See [Naming Rule Syntax Commands](#), on page 315 for details.

Clocks

You use the Clocks panel of the SCOPE spreadsheet to define a signal as a clock.

	Enable	Name	Object	Period	Waveform	Add	Clock Group	Latency	Uncertainty	Comment
1										
2										
3										
4										
Clocks										

The Clocks panel includes the following options:

Field	Description
Name	Specifies the clock object name. Clocks can be defined on the following objects: <ul style="list-style-type: none"> • Pins • Ports • Nets For virtual clocks, the field must contain a unique name not associated with any port, pin, or net in the design.
Period	Specifies the clock period in nanoseconds. This is the minimum time over which the clock waveform repeats. The period must be greater than zero.
Waveform	Specifies the rise and fall edge times for the clock waveforms of the clock in nanoseconds, over an entire clock period. The first time in the list is a rising transition, typically the first rising transition after time zero. There must be two edges, and they are assumed to be rise and then fall. The edges must be monotonically increasing. If you do not specify this option, a default waveform is assumed, which has a rise edge of 0.0 and a fall edge of period/2.
Add Delay	Specifies whether to add this delay to the existing clock or to overwrite it. Use this option when multiple clocks must be specified on the same source for simultaneous analysis with different clock waveforms. When you use this option, you must also specify the clock, and clocks with the same source must have different names.

Field	Description
Clock Group	Assigns clocks to asynchronous clock groups. The clock grouping is inclusionary (for example, clk2 and clk3 can each be related to clk1 without being related to each other). For details, see Clock Groups, on page 233 .
Latency	Specifies the clock latency applied to clock ports and clock aliases. Applying the latency constraint on a port can be used to model the off-chip clock delays in a multichip environment. Clock latency can only: <ul style="list-style-type: none"> • Apply to clocks defined on input ports. • Be used for source latency. • Apply to port clock objects.
Uncertainty	Specifies the clock uncertainty (skew characteristics) of the specified clock networks. You can only apply latency to clock objects.

Clock Groups

Clock grouping is associative; two clocks can be asynchronous to each other but both can be synchronous with a third clock.

The SCOPE GUI prompts you for a clock group for each clock that you define. By default, the tool assigns all clocks to the default clock group. When you add a name that differs from the default clock group name, the clock is assigned its own clock group and is asynchronous to the default clock group as well as all other named clock groups.

This section presents scenarios for defining clocks and includes the following examples:

- [Example 1 - SCOPE Definition](#)
- [Example 2 - Equivalent Tcl Syntax](#)
- [Example 3 - Establish Clock Relationships](#)
- [Example 4 - Using a Single Group Option](#)
- [Example 6 - Legacy Clock Grouping](#)

Example 1 - SCOPE Definition

A design has three clocks, clk1, clk2, clk3. You want clk1 and clk2 to be in the same clock group—synchronous to each other but asynchronous to clk3. You can apply this clock definition by adding a name in the Clock Group column, as shown below:

	Enable	Name	Object	Period	Waveform	Add	Clock Group	Latency	U
1	<input checked="" type="checkbox"/>	clk1	clk1	7		<input type="checkbox"/>	group1		
2	<input checked="" type="checkbox"/>	clk2	nsclk2	10		<input type="checkbox"/>	group1		
3	<input checked="" type="checkbox"/>	clk3	clk3	12		<input type="checkbox"/>	<default>		
4									
5									
6									

This definition assigns clk1 and clk2 to clock group group1, synchronous to each other and asynchronous to clk3. The equivalent Tcl command for this appears in the text editor window as follows:

```
set_clock_groups -derive -asynchronous -name {group1}
                  -group {{c:clk1} {c:clk2}}
```

Example 2 - Equivalent Tcl Syntax

A design has three clocks: clk1, clk2, clk3. Use the following commands to set clk2 synchronous to clk3, but asynchronous to clk1:

```
set_clock_groups -asynchronous -group [get_clocks {clk3 clk2}]
set_clock_groups -asynchronous -group [get_clocks {clk1}]
```

Example 3 - Establish Clock Relationships

A design has the following clocks defined:

```
create_clock -name {clka} {p:clka} -period 10 -waveform {0 5.0}
create_clock -name {clkb} {p:clkb} -period 20 -waveform {0 10.0}
create_clock -name {my_sys} {p:sys_clk} -period 200 -waveform {0
100.0}
```

You want to define clka and clkb as asynchronous to each other and clka and clkb as synchronous to my_sys.

For the tool to establish these relationships, multiple -group options are needed in a single `set_clock_groups` command. Clocks defined by the first -group option are asynchronous to clocks in the subsequent -group option. Therefore, you can use the following syntax to establish the relationships described above:

```
set_clock_groups -asynchronous -group [get_clocks {clka}]
                  -group [get_clocks {clkb}]
```

Example 4 - Using a Single Group Option

`set_clock_groups` has a unique behavior when a single -group option is specified in the command. For this example, the following constraint specifications are applied:

```
set_clock_groups -asynchronous -name {default_clkgroup_0} -group
                  [get_clocks {clka my_sys}]
set_clock_groups -asynchronous -name {default_clkgroup_1} -group
                  [get_clocks {clkb my_sys}]
```

The first statement assigns clka AND my_sys as asynchronous to clkb, and the second statement assigns clkb AND my_sys as asynchronous to clka. Therefore, with this specification, all three clocks are established as asynchronous to each other.

Example 6 - Legacy Clock Grouping

This section shows how the legacy clock group definitions (Synplify-style timing constraints) are converted to the Synopsys standard timing syntax (FDC). Legacy clock grouping can be represented through Synopsys standard constraints, but the multi-grouping in the Synopsys standard constraints cannot be represented in legacy constraints.

For example, the following table shows legacy clock definitions and their translated FDC equivalents:

Legacy Definition	define_clock -name{clk_a}{p:clk_a}-period 10 -clockgroup default_clkgroup_0 define_clock -name {clk_b}{p:clk_b} -freq 150 -clockgroup default_clkgroup_1 define_clock -name {clk_c}{p:clk_c} -freq 200 -clockgroup default_clkgroup_1
FDC Definition	##### BEGIN Clocks - (Populated from SCOPE tab, do not edit) create_clock -name {clk_a} {p:clk_a} -period 10 -waveform {0 5.0} create_clock -name {clk_b} {p:clk_b} -period 6.667 -waveform {0 3.3335} create_clock -name {clk_c} {p:clk_c} -period 5.0 -waveform {0 2.5} set_clock_groups -derive -name default_clkgroup_0 -asynchronous -group {c:clk_a} set_clock_groups -derive -name default_clkgroup_1 -asynchronous -group {c:clk_b c:clk_c} ##### END Clocks

The `create_generated_clock` constraints used in legacy SDC are preserved in FDC. The `-derive` option directs the `create_generated_clock` command to inherit the `-source` clock group. This behavior is unique to FDC and is an extension of the Synopsys SDC standard functionality.

See Also

For equivalent Tcl syntax, see the following sections:

- [create_clock](#), on page 279
- [create_generated_clock](#), on page 281
- [set_clock_latency](#), on page 293
- [set_clock_uncertainty](#), on page 296

For information about other SCOPE panels, see [SCOPE Tabs](#), on page 231.

Generated Clocks

Use the Generated Clocks panel of the SCOPE spreadsheet to define a signal as a generated clock. The equivalent Tcl constraint is `create_generated_clock`; its syntax is described in [create_generated_clock](#), on page 281.

Enable	Name	Source	Object	Master Clock	Generate Type	Generate Parameters	Generate Modifier	Modifier Parameters	Invert	Add	Comment
1											
2											
3											
4											

Generated Clocks


The Generated Clocks panel includes the following options:

Field	Description
Name	Specifies the name of the generated clock. If this option is not used, the clock gets the name of the first clock source specified in the source.
Source	Specifies the master clock pin, which is either a master clock source pin or a fanout pin of the master clock driving the generated clock definition pin. The clock waveform at the master pin is used for deriving the generated clock waveform.
Object	Generated clocks can be defined on the following objects: <ul style="list-style-type: none"> Pins Ports Nets Instances - Where instances have only one output (for example, BUFGs)
Master Clock	Specifies the master clock to be used for this generated clock, when multiple clocks fan into the master pin.


Field	Description
Generate Type	<p>Specifies any of the following:</p> <p>edges - Specifies a list of integers that represents edges from the source clock that are to form the edges of the generated clock. The edges are interpreted as alternating rising and falling edges and each edge must not be less than its previous edge. The number of edges must be an odd number and not less than 3 to make one full clock cycle of the generated clock waveform. For example, 1 represents the first source edge, 2 represents the second source edge, and so on.</p> <p>divide_by - Specifies the frequency division factor. If the divide factor value is 2, the generated clock period is twice as long as the master clock period.</p> <p>multiply_by - Specifies the frequency multiplication factor. If the multiply factor value is 3, the generated clock period is one-third as long as the master clock period.</p>
Generate Parameters	Specifies integers that define the type of generated clock.
Generate Modifier	Defines the secondary characteristics of the generated clock.
Modify Parameters	Defines modifier values of the generated clock.
Invert	Specifies whether to use invert - Inverts the generated clock signal (in the case of frequency multiplication and division).
Add	Either add this clock to the existing clock or overwrite it. Use this option when multiple generated clocks must be specified on the same source, because multiple clocks fan into the master pin. Ideally, one generated clock must be specified for each clock that fans into the master pin. If you specify this option, you must also specify the clock and master clock. The clocks with the same source must have different names.

Examples

In the following example, the generated clock genclk1 is created with the same frequency as the source clock ckin, but its phase is shifted by 180. Each of the edges of the generated clock shifts by 5 ns, which is specified by the -edges and -edge_shift options.

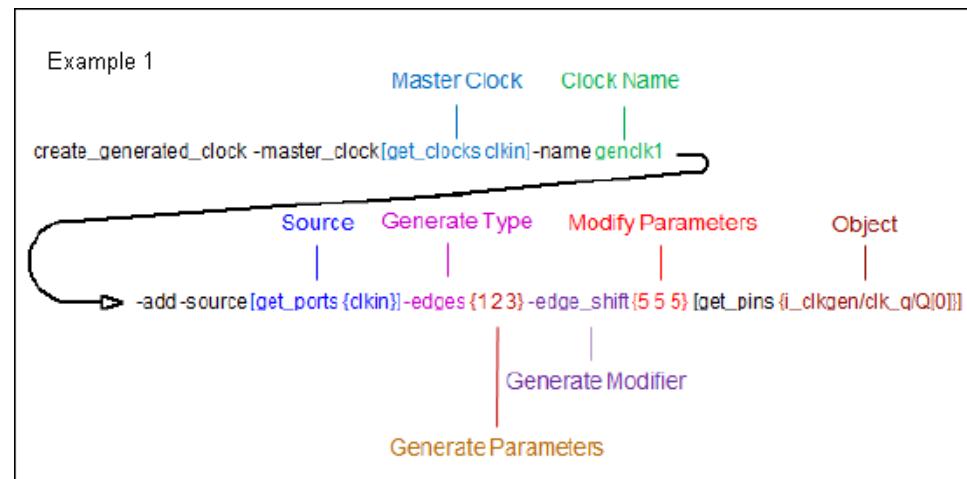

For this example, a generated clock is created with half the frequency of the source clock.

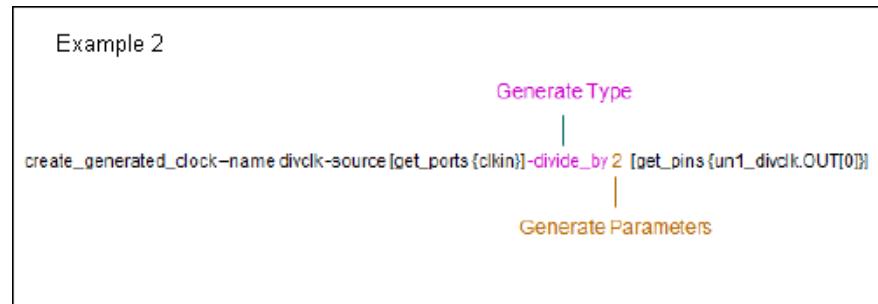

For more information about other SCOPE options, see [SCOPE Tabs, on page 231](#).

Collections

The Collections tab allows you to set constraints for a group of objects you have defined as a collection with the Tcl command. For details, see [Creating and Using SCOPE Collections, on page 182](#).

	Enable	Name	Command	Comment
1				
2				
3				

Collections

Field	Description
Enable	Enables the row.
Name	Enter the collection name.
Command	Select a collection creation command from the drop-down menu. See Collection Commands, on page 240 for descriptions of the commands.
Comment	Enter comments that are included in the constraints file.

You can crossprobe the collection results to an HDL Analyst view. To do this, right-click in the SCOPE cell and select the option Select in Analyst.

Collection Commands

You can use the collection commands on collections or Tcl lists. Tcl lists can be just a single element long.

To ...	Use this command ...
Create a collection	<p><code>set modules</code></p> <p>To create and save a collection, assign it to a variable. You can also use this command to create a collection from any combination of single elements, TCL lists and collections:</p> <pre>set modules [define_collection {v:top} {v:cpu} \$mycoll \$mylist]</pre> <p>Once you have created a collection, you can assign constraints to it in the SCOPE interface.</p>
Copy a collection	<p><code>set modules_copy \$modules</code></p> <p>This copies the collection, so that any change to <code>\$modules</code> does not affect <code>\$modules_copy</code>.</p>
Evaluate a collection	<p><code>c_print</code></p> <p>This command returns all objects in a column format. Use this for visual inspection.</p> <p><code>c_list</code></p> <p>This command returns a Tcl list of objects. Use this to convert a collection to a list. You can manipulate a Tcl list with standard Tcl list commands.</p>
Concatenate a list to a collection	<code>c_union</code>
Identify differences between lists or collections	<p><code>c_diff</code></p> <p>Identifies differences between a list and a collection or between two or more collections. Use the <code>-print</code> option to display the results.</p>
Identify objects common to a list and a collection	<p><code>c_intersect</code></p> <p>Use the <code>-print</code> option to display the results.</p>
Identify objects common to two or more collections	<p><code>c_sub</code></p> <p>Use the <code>-print</code> option to display the results.</p>
Identify objects that belong exclusively to only one list or collection	<p><code>c_symdiff</code></p> <p>Use this to identify unique objects in a list and a collection, or two or more collections. Use the <code>-print</code> option to display the results.</p>

For information about all SCOPE panels, see [SCOPE Tabs, on page 231](#).

Inputs/Outputs

The Inputs/Outputs panel models the interface of the FPGA with the outside environment. You use it to specify delays outside the device.

	Enable	Delay Type	Port	Rise	Fall	Max	Min	Clock	Clock Fall	Add Delay	Value	Comment
1												
2												
3												

Inputs/Outputs

The Inputs/Outputs panel includes the following options:

Field	Description
Delay Type	Specifies whether the delay is an input or output delay.
Port	Specifies the name of the port.
Rise	<p>Specifies that the delay is relative to the rising transition on specified port.</p> <p>Currently, the synthesis tool does not differentiate between the rising and falling edges for the data transition arcs on the specified ports. The worst case path delay is used instead. However, the <code>-rise</code> option is preserved and forward annotated to the place-and-route tool.</p>
Fall	<p>Specifies that the delay is relative to the falling transition on specified port</p> <p>Currently, the synthesis tool does not differentiate between the rising and falling edges for the data transition arcs on the specified ports. The worst case path delay is used instead. However, the <code>-fall</code> option is preserved and forward annotated to the place-and-route tool.</p>
Max	<p>Specifies that the delay value is relative to the longest path.</p> <p>Note: The <code>-max</code> delay values are reported in the top-level log file and are forward annotated to the place-and-route tool.</p>
Min	<p>Specifies that the delay value is relative to the shortest path.</p> <p>Note: The synthesis tool does not optimize for hold time violations and only reports <code>-min</code> delay values in the <code>synlog/topLevel_fpga_mapper.srr_Min</code> timing report section of the log file. The <code>-min</code> delay values are forward annotated to the place-and-route tool.</p>

Field	Description
Clock	Specifies the name of a clock for which the specified delay is applied. If you specify the clock fall, you must also specify the name of the clock.
Clock Fall	Specifies that the delay relative to the falling edge of the clock. For examples, see Input Delays, on page 243 and Output Delays, on page 244 .
Add Delay	Specifies whether to add delay information to the existing input delay or overwrite the input delay. For examples, see Input Delays, on page 243 and Output Delays, on page 244 .
Value	Specifies the delay path value.

Input Delays

Here is how this constraint applies for input delays:

- Clock Fall - The default is the rising edge or rising transition of a reference pin. If you specify clock fall, you must also specify the name of the clock.
- Add Delay - Use this option to capture information about multiple paths leading to an input port relative to different clocks or clock edges.

For example, `set_input_delay 5.0 -max -rise -clock phi1 {A}` removes all maximum rise input delay from A, because the `-add_delay` option is not specified. Other input delays with different clocks or with `-clock_fall` are removed.

In this example, the `-add_delay` option is specified as `set_input_delay 5.0 -max -rise -clock phi1 -add_delay {A}`. If there is an input maximum rise delay for A relative to clock phi1 rising edge, the larger value is used. The smaller value does not result in critical timing for maximum delay. For minimum delay, the smaller value is used. If there is maximum rise input delay relative to a different clock or different edge of the same clock, it remains with the new delay.

Output Delays

Here is how this constraint applies for output delays:

- Clock Fall - If you specify clock fall, you must also specify the name of the clock.
- Add Delay - By using this option, you can capture information about multiple paths leading from an output port relative to different clocks or clock edges.

For example, the `set_output_delay 5.0 -max -rise -clock phi1 {OUT1}` command removes all maximum rise output delays from OUT1, because the `-add_delay` option is not specified. Other output delays with a different clock or with the `-clock_fall` option are removed.

In this example, the `-add_delay` option is specified: `set_output_delay 5.0 -max -rise -clock phi1 -add_delay {Z}`. If there is an output maximum rise delay for Z relative to the clock phi1 rising edge, the larger value is used. The smaller value does not result in critical timing for maximum delay. For minimum delay, the smaller value is used. If there is a maximum rise output delay relative to a different clock or different edge of the same clock, it remains with the new delay.

Priority of Multiple I/O Constraints

You can specify multiple input and output delays constraints for the same I/O port. This is useful for cases where a port is driven by or feeds multiple clocks. The priority of a constraint and its use in your design is determined by a few factors:

- The software applies the tightest constraint for a given clock edge, and ignores all others. All applicable constraints are reported in the timing report.
- You can apply I/O constraints on three levels, with the most specific overriding the more global:
 - Global (top-level netlist), for all inputs and outputs
 - Port-level, for the whole bus
 - Bit-level, for single bits

If there are two bit constraints and two port constraints, the two bit constraints override the two port constraints for that bit. The other bits get the two port constraints. For example, take the following constraints:

```
a[3:0]3 clk1:r
a[3:0]3 clk2:r
a[0]2 clk1:r
```

In this case, port a[0] only gets one constraint of 2 ns. Ports a[1], a[2], and a[3] get two constraints of 3 ns each.

- If at any given level (bit, port, global) there is a constraint with a reference clock specified, then any constraint without a reference clock is ignored. In this example, the 1 ns constraint on port a[0] is ignored.

```
a[0]2 clk1:r
a[0]1
```

See Also


For equivalent Tcl syntax, see:

- [set_input_delay](#), on page 301
- [set_output_delay](#), on page 310

For information about all SCOPE panels, see [SCOPE Tabs](#), on page 231.

Registers

This panel lets the advanced user add delays to paths feeding into/out of registers, in order to further constrain critical paths. You use this constraint to speed up the paths feeding a register. See [set_reg_input_delay](#), on page 313, and [set_reg_output_delay](#), on page 314 for the equivalent Tcl commands.

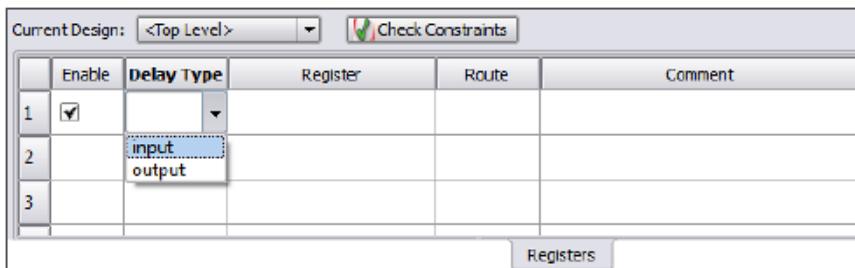

The Registers SCOPE panel includes the following fields:

Field	Description
Enabled	(Required) Turn this on to enable the constraint.
Delay Type	(Required) Specifies whether the delay is an input or output delay.
Register	(Required) Specifies the name of the register. If you have initialized a compiled design, you can choose from the pull-down list.
Route	(Required) Improves the speed of the paths to or from the register by the given number of nanoseconds. The value shrinks the effective period for the constrained registers without affecting the clock period that is forward-annotated to the place-and-route tool.
Comment	Lets you enter comments that are included in the constraints file.

Delay Paths

Use the Delay Paths panel to define the timing exceptions.



The Path Delay panel includes the following options:

Field	Description
Delay Type	<p>Specifies the type of delay path you want the synthesis tool to analyze. Choose one of the following types:</p> <ul style="list-style-type: none"> • Multicycle • False • Max Delay • Reset Path • Datapath Only
From	<p>Starting point for the path. From points define timing start points and can be defined for clocks (c:), registers (i:), top-level input or bi-directional ports (p:), black box output pins (i:) or sequential cell clock pins. For details, see the following:</p> <ul style="list-style-type: none"> • Defining From/To/Through Points for Timing Exceptions • Naming Rule Syntax Commands, on page 315
Through	<p>Specifies the intermediate points for the timing exception. Intermediate points can be combinational nets (n:), hierarchical ports (t:), or instantiated cell pins (t:). If you click the arrow in a column cell, you open the Product of Sums (POS) interface where you can set through constraints. For details, see the following:</p> <ul style="list-style-type: none"> • Product of Sums Interface • Defining From/To/Through Points for Timing Exceptions • Naming Rule Syntax Commands, on page 315
To	<p>Ending point of the path. To points must be timing end points and can be defined for clocks (c:), registers (i:), top-level output or bi-directional ports (p:), or black box input pins (i:). For details, see the following:</p> <ul style="list-style-type: none"> • Defining From/To/Through Points for Timing Exceptions • Naming Rule Syntax Commands, on page 315
Max Delay	Specifies the maximum delay value for the specified path in nanoseconds.


Field	Description
Setup	Specifies the setup (maximum delay) calculations used for specified path.
Start/End	Used for multicycle paths with different start and end clocks. This option determines the clock period to use for the multiplicand in the calculation for clock distance. If you do not specify a start or end clock, the end clock is the default.
Cycles	Specifies the number of cycles required for the multicycle path.

See Also

- For equivalent Tcl syntax, see:
 - [set_multicycle_path](#), on page 306
 - [set_false_path](#), on page 298
 - [set_max_delay](#), on page 303
 - [reset_path](#), on page 284
- For more information on timing exception constraints and how the tool resolves conflicts, see:
 - [Delay Path Timing Exceptions](#), on page 261
 - [Conflict Resolution for Timing Exceptions](#), on page 274
- For information about all SCOPE panels, see [SCOPE Tabs](#), on page 231.

Attributes

You can assign attributes directly in the editor.

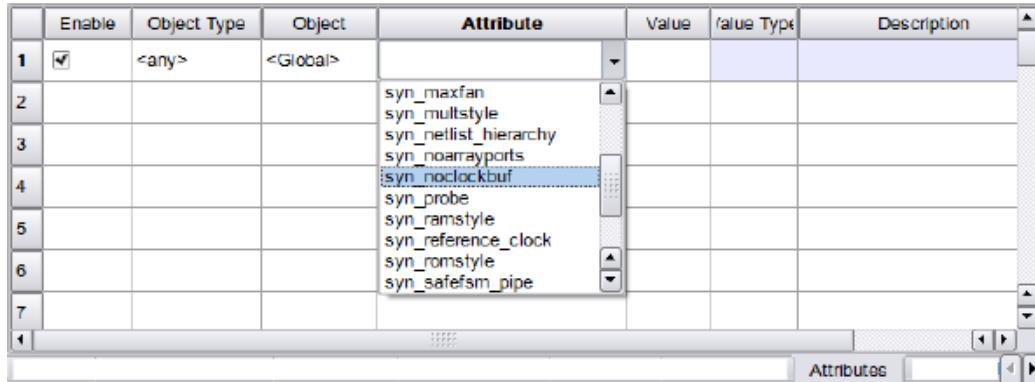

Here are descriptions for the Attributes columns:

Column	Description
Enabled	(Required) Turn this on to enable the constraint.
Object Type	Specifies the type of object to which the attribute is assigned. Choose from the pull-down list, to filter the available choices in the Object field.
Object	(Required) Specifies the object to which the attribute is attached. This field is synchronized with the Attribute field, so selecting an object here filters the available choices in the Attribute field.
Attribute	(Required) Specifies the attribute name. You can choose from a pull-down list that includes all available attributes for the specified technology. This field is synchronized with the Object field. If you select an object first, the attribute list is filtered. If you select an attribute first, the Synopsys FPGA synthesis tool filters the available choices in the Object field. You must select an attribute before entering a value. If a valid attribute does not appear in the pull-down list, simply type it in this field and then apply appropriate values.
Value	(Required) Specifies the attribute value. You must specify the attribute first. Clicking in the column displays the default value; a drop-down arrow lists available values where appropriate.

Val Type	Specifies the kind of value for the attribute. For example, string or boolean.
Description	Contains a one-line description of the attribute.
Comment	Lets you enter comments about the attributes.

Enter the appropriate attributes and their values, by clicking in a cell and choosing from the pull-down menu.


To specify an object to which you want to assign an attribute, you may also drag-and-drop it from the RTL or Technology view into a cell in the Object column. After you have entered the attributes, save the constraint file and add it to your project.

See Also

- For more information on specifying attributes, see [How Attributes and Directives are Specified, on page 8](#).
- For information about all SCOPE panels, see [SCOPE Tabs, on page 231](#).

I/O Standards

You can specify a standard I/O pad type to use in the design. Define an I/O standard for any port appearing in the I/O Standards panel.

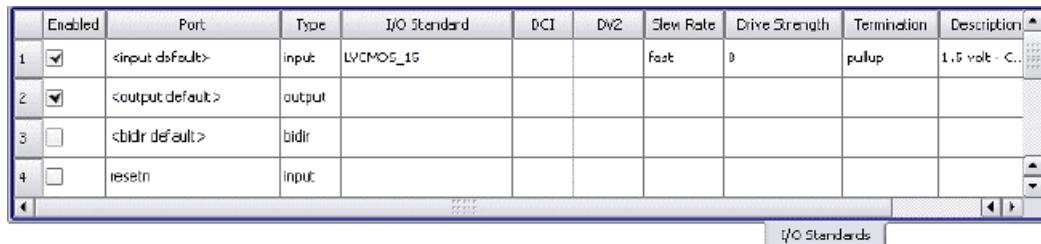

Field	Description
Enabled	(Required) Turn this on to enable the constraint, or off to disable a previous constraint.
Port	(Required) Specifies the name of the port. If you have initialized a compiled design, you can select a port name from the pull-down list. The first two entries let you specify global input and output delays, which you can then override with additional constraints on individual ports.
Type	(Required) Specifies whether the delay is an input or output delay.
I/O Standard	Supported I/O standards by Synopsys FPGA products. See Industry I/O Standards, on page 257 for a description of the standards.
Slew Rate	The values for these parameters are based on the selected I/O standard.
Drive Strength	
Termination	
Power	
Schmitt	
Description	Describes the selected I/O Standard.
Comment	Enter comments about an I/O standard.

See Also

- The Tcl equivalent of this constraint is [define_io_standard](#).
- For information about all SCOPE panels, see [SCOPE Tabs, on page 231](#).

Compile Points

Use the Compile Points panel to specify compile points in your design, and to enable/disable them. This panel, available only if the device technology supports compile points, is used to define a top-level constraint file.

	Enabled	Module	Type	Comment
1	<input checked="" type="checkbox"/>		<input type="button" value="locked"/> <input type="button" value="soft"/> <input type="button" value="hard"/>	
2				
3				
4				


Compile Points

Here are the descriptions of the fields in the Compile Points panel.

Field	Description
Enabled	(Required) Turn this on to enable the constraint.
Module	(Required) Specifies the name of the compile-point module. You must specify a view module, with a v: prefix to identify the module as a view. For example: v:alu.
Type	(Required) Specifies the type of compile point: <ul style="list-style-type: none"> • locked (default) - no timing reoptimization is done on the compile point. The hierarchical interface is unchanged and an interface logic model is constructed for the compile point. • soft - compile point is included in the top-level synthesis, boundary optimizations can occur. • hard - compile point is included in the top-level synthesis, boundary optimizations can occur, however, the boundary remains unchanged. Although, the boundary is not modified, instances on both sides of the boundary can be modified using top-level constraints. For details, see Compile Point Types, on page 469 .
Comment	Lets you enter a comment about the compile point.

Constraints for Compile Points

You can set constraints at the top-level or for modules to be used as the compile points from the Current Design pull-down menu shown below. Use the Compile Points tab to select compile points and specify their types.

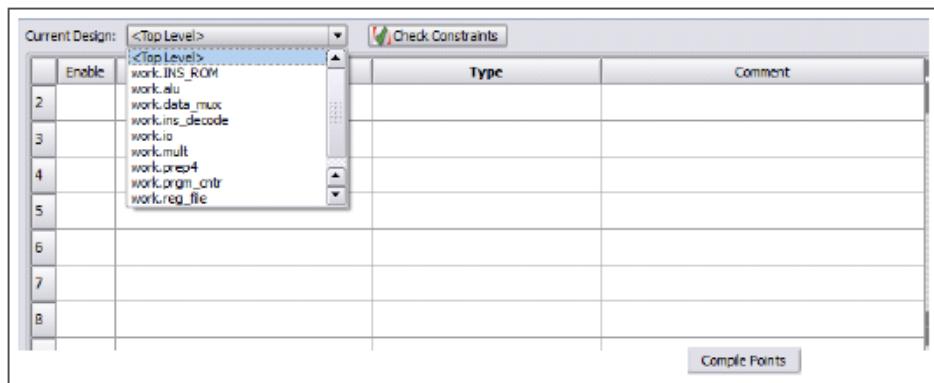

See Also

- The Tcl equivalent is [define_compile_point](#).
- For more information on compile points and using the Compile Points panel, see [Synthesizing Compile Points, on page 484](#).
- For information about all SCOPE panels, see [SCOPE Tabs, on page 231](#).

TCL View

The TCL View is an advanced text file editor for defining FPGA timing and design constraints.

The screenshot shows the SCOPE TCL View window. The main area is a code editor with the following content:

```

146 set_rtl_ff_names {*}
147 set qffs [define_collection           [find -seq -hier {qbi[*]}
148 set f_max 150
149 create_clock -name {clka} [get_ports {clka}] -period 10 -wa
150 create_clock -name {clkb} [get_ports {clkb}] -period 6.6666
151 set_input_delay -clock [get_clocks {clka}] -clock_fall -add
152 set_output_delay -clock [get_clocks {clka}] -add_delay 0.00
153 set_input_delay -clock [get_clocks {clka}] -add_delay 2.00
154 set_input_delay -clock [get_clocks {clka}] -add_delay 0 [ge
155 set_mcp 4
156 set_multicycle_path $mcp -start \
157     -from \
158         [get_ports \
159             {a* \
160             b*} \
161             ] \
162             -to \
163                 [find -seq -hier {q7[*]} ]
164
165
166 set_multicycle_path 3 -end \
167     -from \
168         [find -seq {"y*.q[*]} ]
169
170 set_clock_groups -name default_clkgroup_0 -asynchronous \
171     -group [get_clocks {clka dom|clk0_derived_clock dom|clk

```

The right side of the window features a command browser with sections for "Name" and "Constraint Syntax". The "Name" section lists various FDC Constraints, and the "Constraint Syntax" section provides a tooltip for the `set_rtl_ff_names` command.

A red arrow points from the text "Click on Hide Syntax Help to close this browser" to the "Syntax Help" button at the bottom center of the window.

This text editor provides the following capabilities:

- Uses dynamic keyword expansion and tool tips for commands that
 - Automatically completes the command from a popup list
 - Displays complete command syntax as a tool tip
 - Displays parameter options for the command from a popup list
 - Includes a keyword command syntax help
- Checks command syntax and uses color indicators that
 - Validate commands and command syntax
 - Identifies FPGA design constraints and SCOPE legacy constraints

- Allows for standard editor commands, such as copy, paste, comment/un-comment a group of lines, and highlighting of keywords

For information on how to use this Tcl text editor, see [Using the TCL View of SCOPE GUI, on page 161](#).

See Also

- For Tcl timing constraint syntax, see [Timing Constraints, on page 278](#).
- For Tcl design constraint syntax, see [Design Constraints, on page 317](#).
- You can also use the SCOPE editor to set attributes. See [How Attributes and Directives are Specified, on page 8](#) for details.

Industry I/O Standards

The synthesis tool lets you specify a standard I/O pad type to use in your design. You can define an I/O standard for any port supported from the industry standard and proprietary I/O standards.

For industry I/O standards, see [Industry I/O Standards, on page 258](#).

For vendor-specific I/O standards, see: [Lattice I/O Standards, on page 324](#).

Industry I/O Standards

The following table lists industry I/O standards.

I/O Standard	Description
AGP1X	Intel Corporation Accelerated Graphics Port
AGP2X	Intel Corporation Accelerated Graphics Port
BLVDS_25	Bus Differential Transceiver
CTT	Center Tap Terminated - EIA/JEDEC Standard JESD8-4
DIFF_HSTL_15_Class_I	1.5 volt - Differential High Speed Transceiver Logic - EIA/JEDEC Standard JESD8-6
DIFF_HSTL_15_Class_II	1.5 volt - Differential High Speed Transceiver Logic - EIA/JEDEC Standard JESD8-6
DIFF_HSTL_18_Class_I	1.8 volt - Differential High Speed Transceiver Logic - EIA/JEDEC Standard JESD8-9A
DIFF_HSTL_18_Class_II	1.8 volt - Differential High Speed Transceiver Logic - EIA/JEDEC Standard JESD8-9A
DIFF_SSTL_18_Class_II	1.8 volt - Differential Stub Series Terminated Logic - EIA/JEDEC Standard JESD8-6
DIFF_SSTL_2_Class_I	2.5 volt - Pseudo Differential Stub Series Terminated Logic - EIA/JEDEC Standard JESD8-9A
DIFF_SSTL_2_Class_II	2.5 volt - Pseudo Differential Stub Series Terminated Logic - EIA/JEDEC Standard JESD8-9A
GTL	Gunning Transceiver Logic - EIA/JEDEC Standard JESD8-3
GTL+	Gunning Transceiver Logic Plus
GTL25	Gunning Transceiver Logic - EIA/JEDEC Standard JESD8-3
GTL+25	Gunning Transceiver Logic Plus
GTL33	Gunning Transceiver Logic - EIA/JEDEC Standard JESD8-3
GTL+33	Gunning Transceiver Logic Plus

I/O Standard	Description
HSTL_12	1.2 volt - High Speed Transceiver Logic - EIA/JEDEC Standard JESD8-6
HSTL_15_Class_II	1.5 volt - High Speed Transceiver Logic - EIA/JEDEC Standard JESD8-6
HSTL_18_Class_I	1.8 volt - High Speed Transceiver Logic - EIA/JEDEC Standard JESD8-6
HSTL_18_Class_II	1.8 volt - High Speed Transceiver Logic - EIA/JEDEC Standard JESD8-6
HSTL_18_Class_III	1.8 volt - High Speed Transceiver Logic - EIA/JEDEC Standard JESD8-6
HSTL_18_Class_IV	1.8 volt - High Speed Transceiver Logic - EIA/JEDEC Standard JESD8-6
HSTL_Class_I	1.5 volt - High Speed Transceiver Logic - EIA/JEDEC Standard JESD8-6
HSTL_Class_II	1.5 volt - High Speed Transceiver Logic - EIA/JEDEC Standard JESD8-6
HSTL_Class_III	1.5 volt - High Speed Transceiver Logic - EIA/JEDEC Standard JESD8-6
HSTL_Class_IV	1.5 volt - High Speed Transceiver Logic - EIA/JEDEC Standard JESD8-6
HyperTransport	2.5 volt - Hypertransport - HyperTransport Consortium

I/O Standard	Description
LVCMOS_12	1.2 volt - EIA/JEDEC Standard JESD8-16
LVCMOS_15	1.5 volt - EIA/JEDEC Standard JESD8-7
LVCMOS_18	1.8 volt - EIA/JEDEC Standard JESD8-7
LVCMOS_25	2.5 volt - EIA/JEDEC Standard JESD8-5
LVCMOS_33	3.3 volt CMOS - EIA/JEDEC Standard JESD8-B
LVCMOS_5	5.0 volt CMOS
LVDS	Differential Transceiver - ANSI/TIA/EIA-644-95
LVDSEXT_25	Differential Transceiver
LVPECL	Differential Transceiver - EIA/JEDEC Standard JESD8-2
LVTTL	3.3 volt TTL - EIA/JEDEC Standard JESD8-B
MINI_LVDS	Mini Differential Transceiver
PCI33	3.3 volt PCI 33MHz - PCI Local Bus Spec. Rev. 3.0 (PCI Special Interest Group)
PCI66	3.3 volt PCI 66MHz - PCI Local Bus Spec. Rev. 3.0 (PCI Special Interest Group)
PCI-X_133	3.3 volt PCI-X - PCI Local Bus Spec. Rev. 3.0 (PCI Special Interest Group)
PCML	3.3 volt - PCML
PCML_12	1.2 volt - PCML
PCML_14	1.4 volt - PCML
PCML_15	1.5 volt - PCML
PCML_25	2.5 volt - PCML
RSDS	Reduced Swing Differential Signalling
SSTL_18_Class_I	1.8 volt - Stub Series Terminated Logic - EIA/JEDEC Standard JESD8-15
SSTL_18_Class_II	1.8 volt - Stub Series Terminated Logic - EIA/JEDEC Standard JESD8-15
SSTL_2_Class_I	2.5 volt - Stub Series Terminated Logic - EIA/JEDEC Standard JESD8-9B
SSTL_2_Class_II	2.5 volt - Stub Series Terminated Logic - EIA/JEDEC Standard JESD8-9B
SSTL_3_Class_I	3.3 volt - Stub Series Terminated Logic - EIA/JEDEC Standard JESD8-8
SSTL_3_Class_II	3.3 volt - Stub Series Terminated Logic - EIA/JEDEC Standard JESD8-8
ULVDS_25	Differential Transceiver

Delay Path Timing Exceptions

For details about the following path types, see:

- [Multicycle Paths](#), on page 261
- [False Paths](#), on page 264

Multicycle Paths

Multicycle paths lets you specify paths with multiple clock cycles. The following table defines the parameters for this constraint. For the equivalent Tcl constraints, see [set_multicycle_path](#), on page 306. This section describes the following:

- [Multi-cycle Path with Different Start and End Clocks](#), on page 261
- [Multicycle Path Examples](#), on page 262

Multi-cycle Path with Different Start and End Clocks

The start/end option determines the clock period to use for the multiplicand in the calculation for required time. The following table describes the behavior of the multi-cycle path constraint using different start and end clocks. In all equations, n is number of clock cycles, and *clock_distance* is the default, single-cycle relationship between clocks that is calculated by the tool.

Basic required time for a multi-cycle path	$\text{clock_distance} + [(n-1) * \text{end_clock_period}]$
Required time with no end clock defined	$\text{clock_distance} + [(n-1) * \text{global_period}]$
Required time with -start option defined	$\text{clock_distance} + [(n-1) * \text{start_clock_period}]$
Required time with no start clock defined	$\text{clock_distance} + [(n-1) * \text{global_period}]$

If you do not specify a start or end option, by default the end clock is used for the constraint. Here is an example:


	Enabled	Delay Type	From	To	Through	Start/End	Cycles	Max Delay(ns)	Comment
1	<input checked="" type="checkbox"/>	Multicycle				End			
2						Start			
3						End			
4									

Delay Paths

Multicycle Path Examples


Multicycle Path Example 1

If you apply a multicycle path constraint from D1 to D2, the allowed time is #cycles x normal time between D1 and D2. In the following figure, CLK1 has a period of 10 ns. The data in this path has only one clock cycle before it must reach D2. To allow more time for the signal to complete this path, add a multiple-cycle constraint that specifies two clock cycles (10 x 2 or 20 ns) for the data to reach D2.

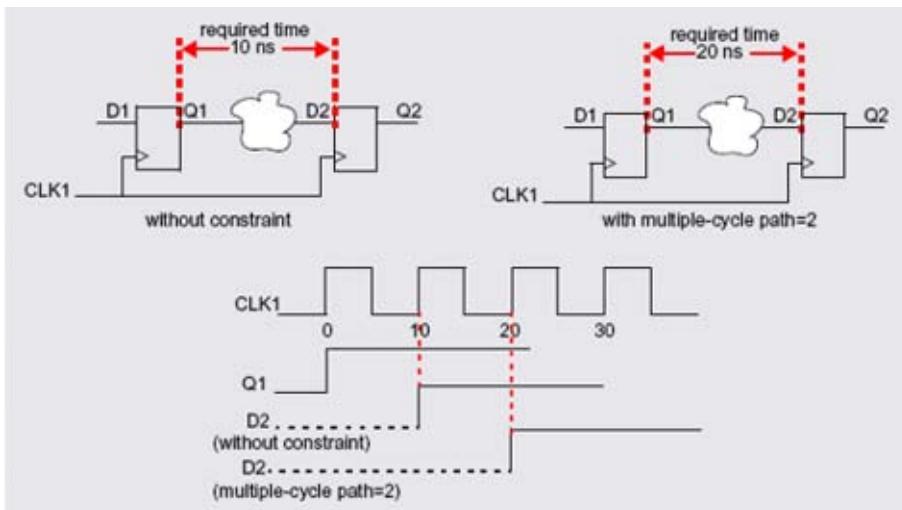

Multicycle Path Example 2

The design has a multiplier that multiplies signal_a with signal_b and puts the result into signal_c. Assume that signal_a and signal_b are outputs of registers register_a and register_b, respectively. The RTL view for this example is shown below. On clock cycle 1, a state machine enables an input enable signal to load signal_a into register_a and signal_b into register_b. At the beginning of clock cycle 2, the multiply begins. After two clock cycles, the state machine enables an output_enable signal on clock cycle 3 to load the result of the multiplication (signal_c) into an output register (register_c).

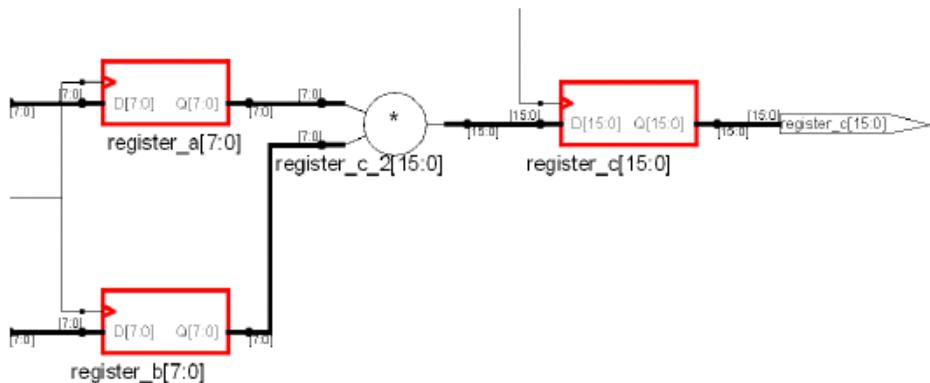

The design frequency goal is 50 MHz (20 ns) and the multiply function takes 35 ns, but it is given 2 clock cycles. After optimization, this 35 ns path is normally reported as a timing violation because it is more than the 20 ns clock-cycle timing goal. To avoid reporting the paths as timing violations, use the SCOPE window to set 2-cycle constraints (From column) on register_a and register_b, or include the following in the timing constraint file:

```
# Paths from register_a use 2 clock cycles
set_multicycle_path -from register_a 2

# Paths from register_b use 2 clock cycles
set_multicycle_path -from register_b 2
```

Alternatively, you can specify a 2-cycle SCOPE constraint (To column) on register_c, or add the following to the constraint file:

```
# Paths to register_c use 2 clock cycles
set_multicycle_path -to register_c 2
```

False Paths

You use the Delay Paths constraint to specify clock paths that you want the synthesis tool to ignore during timing analysis and assign low (or no) priority during optimization. The equivalent Tcl constraint is described in [set_false_path](#), on page 298.

This section describes the following:


- [Types of False Paths](#), on page 264
- [False Path Constraint Examples](#), on page 265

Types of False Paths

A false path is a path that is not important for timing analysis. There are two types of false paths:

- Architectural false paths

These are false paths that the designer is aware of, like an external reset signal that feeds internal registers but which is synchronized with the clock. The following example shows an architectural false path where the primary input x is always 1, but which is not optimized because the software does not optimize away primary inputs.

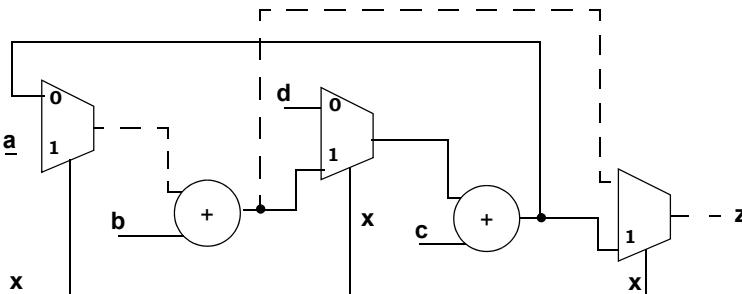

- Code-introduced false paths

These are false paths that you identify after analyzing the schematic.

False Path Constraint Examples

In this example, the design frequency goal is 50 MHz (20ns) and the path from register_a to register_c is a false path with a large delay of 35 ns. After optimization, this 35 ns path is normally reported as a timing violation because it is more than the 20 ns clock-cycle timing goal. To lower the priority of this path during optimization, define it as a false path. You can do this in many ways:

- If all paths from register_a to any register or output pins are not timing-critical, then add a false path constraint to register_a in the SCOPE interface (From), or put the following line in the timing constraint file:

```
#Paths from register_a are ignored  
set_false_path -from {i:register_a}
```

- If all paths to register_c are not timing-critical, then add a false path constraint to register_c in the SCOPE interface (To), or include the following line in the timing constraint file:

```
#Paths to register_c are ignored  
set_false_path -to {i:register_c}
```

- If only the paths between register_a and register_c are not timing-critical, add a From/To constraint to the registers in the SCOPE interface (From and To), or include the following line in the timing constraint file:

```
#Paths to register_c are ignored  
set_false_path -from {i:register_a} -to {i:register_c}
```

Specifying From, To, and Through Points

The following section describes from, to, and through points for timing exceptions specified by the multicycle paths, false paths, and max delay paths constraints.

- [Timing Exceptions Object Types](#), on page 266
- [From/To Points](#), on page 266
- [Through Points](#), on page 268
- [Product of Sums Interface](#), on page 269
- [Clocks as From/To Points](#), on page 271

Timing Exceptions Object Types

Timing exceptions must contain the type of object in the constraint specification. You must explicitly specify an object type, n: for a net, or i: for an instance, in the instance name parameter of all timing exceptions. For example:

```
set_multicycle_path -from {i:inst2.lowreg_output[7]}\n                     -to {i:inst1.DATA0[7]} 2
```

If you use the SCOPE GUI to specify timing exceptions, it automatically attaches the object type qualifier to the object name.

From/To Points

From specifies the starting point for the timing exception. To specifies the ending point for the timing exception. When you specify an object, use the appropriate prefix (see [syn_black_box](#), on page 44) to avoid confusion. The following table lists the objects that can serve as starting and ending points:

From Points	To Points
Clocks. See Clocks as From/To Points , on page 271 for more information.	Clocks. See Clocks as From/To Points , on page 271 for more information.
Registers	Registers

From Points	To Points
Top-level input or bi-directional ports	Top-level output or bi-directional ports
Instantiated library primitive cells (gate cells)	Instantiated library primitive cells (gate cells)
Black box outputs	Black box inputs

You can specify multiple from points in a single exception. This is most common when specifying exceptions that apply to all the bits of a bus. For example, you can specify constraints From A[0:15] to B - in this case, there is an exception, starting at any of the bits of A and ending on B.

Similarly, you can specify multiple to points in a single exception. If you specify both multiple starting points and multiple ending points such as From A[0:15] to B[0:15], there is actually an exception from any start point to any end point. In this case, the exception applies to all $16 * 16 = 256$ combinations of start/end points.

Through Points

Through points are limited to nets, hierarchical ports, and pins of instantiated cells. There are many ways to specify these constraints.

- Single Point
- Single List of Points
- Multiple Through Points
- Multiple Through Lists

You define these constraints in the appropriate SCOPE panels, or in the POS GUI (see [Product of Sums Interface, on page 269](#)). When a port and net have the same name, preface the name of the through point with n: for nets or t: for hierarchical ports. For example, you can specify n:regs_mem[2] or t:dmux.bdpol. The n: prefix must be specified to identify nets; otherwise, the associated timing constraint will not be applied for valid nets.

Single Point

You can specify a single through point. In this case, the constraint is applied to any path that passes through net regs_mem[2] as follows:

```
set_false_path -through n:regs_mem[2]  
set_false_path -through [get_nets {regs_mem[2]}]
```

Single List of Points

If you specify a list of through points, the through option behaves as an OR function and applies to any path that passes through any of the points in the list. In the following example, the constraint is applied to any path through regs_mem[2] OR prgcntr.pc[7] OR dmux.alub[0] with a maximum delay value of 5 ns (-max 5):

```
set_max_delay  
-through {t:regs_mem[2] t:prgcntr.pc[7] t:dmux.alub[0]} 5
```

Multiple Through Points

You can specify multiple points for the same constraint by preceding each point with the -through option. In the following example, the constraint operates as an AND function and applies to paths through `regs_mem[2]` AND `prgcntr.pc[7]` AND `dmux.alub[0]:`

```
set_max_delay  
-through t:regs_mem[2]  
-through t:prgcntr.pc[7]  
-through t:dmux.alub[0] 5
```

Multiple Through Lists

If you specify multiple -through lists, the constraint is applied as an AND/OR function and is applied to the paths through all points in the lists. The following constraint applies to all paths that pass through nets { A_1 or A_2 or... A_n } AND nets { B_1 or B_2 or B_3 }:

```
set_false_path -through {n:A1 n:A2...n:An} -through {n:B1 n:B2 n:B3}
```

In this example,

```
set_multicycle_path  
-through {n:net1 n:net2}  
-through {n:net3 n:net4} 2
```

all paths that pass through the following nets are constrained at 2 clock cycles:


```
net1 AND net3  
OR net1 AND net4  
OR net2 AND net3  
OR net2 AND net4
```

Product of Sums Interface

You can use the SCOPE GUI to format -through points for nets with multicycle path, false path, and max delay path constraints in the Product of Sums (POS) interface of the SCOPE editor. You can also manually specify constraints that use the -through option. For more information, see [Defining From/To/Through Points for Timing Exceptions, on page 166](#).

The POS interface is accessible by clicking the arrow in a Through column cell in the following SCOPE panels:

- Multi-Cycle Paths
- False Paths
- Delay Paths

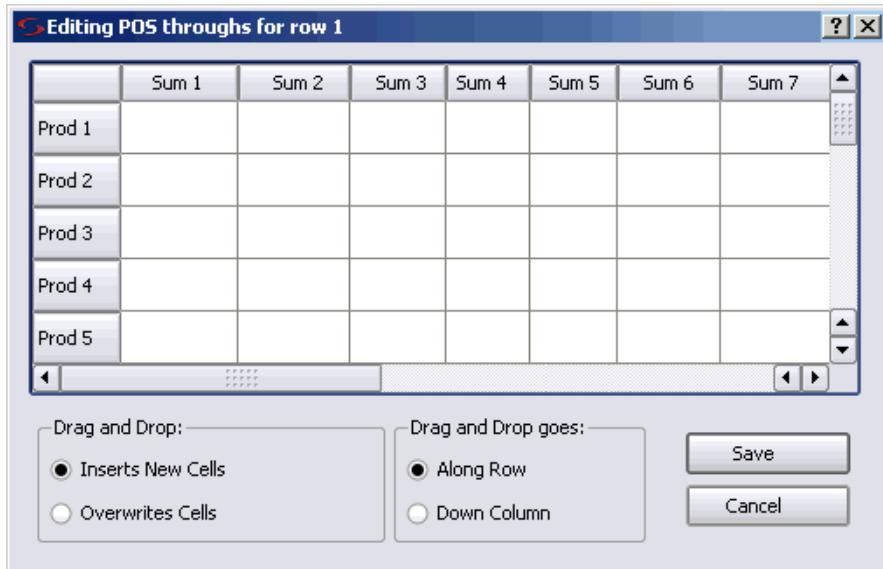

Field	Description
Prod 1, 2, etc.	Type the first net name in a cell in a Prod row, or drag the net from a HDL Analyst view into the cell. Repeat this step along the same row, adding other nets in the Sum columns. The nets in each row form an OR list.
Sum 1, 2, etc.	Type the first net name in the first cell in a Sum column, or drag the net from a HDL Analyst view into the cell. Repeat this step down the same Sum column. The nets in each column form an AND list.

Drag and Drop Goes	Along Row - places objects in multiple Sum columns, utilizing only one Prod row. Down Column - places objects in multiple Prod rows, utilizing only one Sum column.
Drag and Drop	Inserts New Cells - New cells are created when dragging and dropping nets. Overwrites Cells - Existing cells are overwritten when dragging and dropping nets.
Save/Cancel	Saves or cancels your session.

Clocks as From/To Points

You can specify clocks as from/to points in your timing exception constraints. Here is the syntax:

```
set_timing_exception -from | -to {c:clock_name [:edge]}
```

where

- *timing_exception* is one of the following constraint types: multicycle path, false path, or max delay
- **c:clock_name:edge** is the name of the clock and clock edge (r or f). If you do not specify a clock edge, by default both edges are used.

See the following sections for details and examples on each timing exception.

Multicycle Path Clock Points

When you specify a clock as a from or to point, the multicycle path constraint applies to all registers clocked by the specified clock.

The following constraint allows two clock periods for all paths from the rising edge of the flip-flops clocked by clk1:

```
set_multicycle_path -from {c:clk1:r} 2
```

You cannot specify a clock as a through point. However, you can set a constraint from or to a clock and through an object (net, pin, or hierarchical port). The following constraint allows two clock periods for all paths to the falling edge of the flip-flops clocked by clk1 and through bit 9 of the hierarchical net:

```
set_multicycle_path -to {c:clk1:f} -through (n:MYINST.mybus2[9]) 2
```

False Path Clock Points

When you specify a clock as a from or to point, the false path constraint is set on all registers clocked by the specified clock. False paths are ignored by the timing analyzer. The following constraint disables all paths from the rising edge of the flip-flops clocked by clk1:

```
set_false_path -from {c:clk1:r}
```

You cannot specify a clock as a through point. However, you can set a constraint from or to a clock and through an object (net, pin, or hierarchical port). The following constraint disables all paths to the falling edge of the flip-flops clocked by clk1 and through bit 9 of the hierarchical net:

```
set_false_path -to {c:clk1:f} -through (n:MYINST.mybus2[9])
```

Path Delay Clock Points

When you specify a clock as a from or to point for the path delay constraint, the constraint is set on all paths of the registers clocked by the specified clock. This constraint sets a max delay of 2 ns on all paths to the falling edge of the flip-flops clocked by clk1:

```
set_max_delay -to {c:clk1:f} 2
```

You cannot specify a clock as a through point, but you can set a constraint from or to a clock and through an object (net, pin, or hierarchical port). The next constraint sets a max delay of 0.2 ns on all paths from the rising edge of the flip-flops clocked by clk1 and through bit 9 of the hierarchical net:

```
set_max_delay -from {c:clk1:r} -through (n:MYINST.mybus2[9]).2
```

Conflict Resolution for Timing Exceptions

The term *timing exceptions* refers to the false path, max path delay, and multicycle path timing constraints. When the tool encounters conflicts in the way timing exceptions are specified through the constraint file, the software uses a set priority to resolve these conflicts. Conflict resolution is categorized into four levels, meaning that there are four different tiers at which conflicting constraints can occur, with one being the highest. The table below summarizes conflict resolution for constraints. The sections following the table provide more details on how conflicts can occur and examples of how they are resolved.

Conflict Level	Constraint Conflict	Priority	For Details, see ...
1	Different timing exceptions set on the same object.	1 - False Path 2 - Path Delay 3 - Multi-cycle Path	Conflicting Timing Exceptions, on page 275.
2	Timing exceptions of the same constraint type, using different semantics (from/to/through).	1 - From 2 - To 3 - Through	Same Constraint Type with Different Semantics, on page 276.
3	Timing exceptions of the same constraint type using the same semantic, but set on different objects.	1 - Ports/Instances/Pins 2 - Clocks	Same Constraint and Semantics with Different Objects, on page 277.
4	Identical timing constraints, except constraint values differ.	Tightest, or most constricting constraint.	Identical Constraints with Different Values, on page 277.


In addition to the four levels of conflict resolution for timing exceptions, there are priorities for the way the tool handles multiple I/O delays set on the same port and implicit and explicit false path constraints. For information on resolving these types of conflicts, see [Priority of Multiple I/O Constraints, on page 244](#).

Conflicting Timing Exceptions

The first (and highest) level of resolution occurs when timing exceptions—false paths, max path delay, or multicycle path constraints—conflict with each other. The tool follows this priority for applying timing exceptions:

1. False Path
2. Path Delay
3. Multicycle Path

For example:

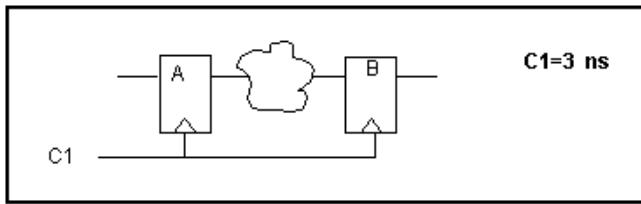

```
set_false_path -from {c:C1:r}  
set_max_delay -from {i:A} -to {i:B} 10  
set_multicycle_path -from {i:A} -to {i:B} 2
```


These constraints are conflicting because the path from A to B has three different constraints set on it. When the tool encounters this type of conflict, the false path constraint is honored. Because it has the highest priority of all timing exceptions, `set_false_path` is applied and the other timing exceptions are ignored.

Same Constraint Type with Different Semantics

The second level of resolution occurs when conflicts between timing exceptions that are of the same constraint type, use different semantics (from/to/through). The priority for these constraints is as follows:

1. From
2. To
3. Through

If there are two multicycle constraints set on the same path, one specifying a from point and the other specifying a to point, the constraint using -from takes precedence, as in the following example.

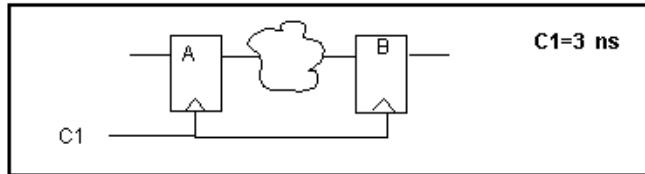

```
set_multicycle_path -from {i:A} 3  
set_multicycle_path -to {i:B} 2
```

In this case, the tool uses:

```
set_multicycle_path -from {i:A} 3
```

The other constraint is ignored even though it sets a tighter constraint.

Same Constraint and Semantics with Different Objects

The third level resolves timing exceptions of the same constraint type that use the same semantic, but are set on different objects. The priority for design objects is as follows:

1. Ports/Instances/Pins
2. Clocks

If the same constraints are set on different objects, the tool ignores the constraint set on the clock for that path.

```
set_multicycle_path -from {i:mac1.datax[0]} -start 4  
set_multicycle_path -from {c:clk1:r} 2
```

In the example above, the tool uses the first constraint set on the instance and ignores the constraint set on the clock from i:mac1.datax[0], even though the clock constraint is tighter.

For details on how the tool prioritizes multiple I/O delays set on the same port or implicit and explicit false path constraints, see [Priority of Multiple I/O Constraints, on page 244](#).

Identical Constraints with Different Values

Where timing constraints are identical except for the constraint value, the tightest or most constricting constraint takes precedence. In the following example, the tool uses the constraint specifying two clock cycles:

```
set_multicycle_path -from {i:special_regs.trisa[7:0]} 2  
set_multicycle_path -from {i:special_regs.trisa[7:0]} 3
```

Timing Constraints

The FPGA synthesis tools support FPGA timing constraints for a subset of the clock definition, I/O delay, and timing exception constraints.

The remainder of this section describes the constraint file syntax for the following FPGA timing constraints in the FPGA synthesis tools.

create_clock	create_generated_clock
reset_path	set_case_analysis
set_clock_groups	set_clock_latency
set_clock_route_delay	set_clock_uncertainty
set_false_path	set_false_path
set_input_delay	set_max_delay
set_multicycle_path	set_output_delay
set_reg_input_delay	set_reg_output_delay

Note: When adding comments for constraints, use standard Tcl syntax conventions. Otherwise, invalid specifications can cause the constraint to be ignored. The (#) comment must begin on a new line or needs to be preceded by a (;), if the comment is on the same line as the constraint. For example:

```
create_clock -period 10 [get_ports CLK]; # comment text  
# comment text  
set_clock_groups -asynchronous -group  
MMCM_module|clk100_90_MMCM_derived_clock_CLKIN1
```

create_clock

Creates a clock object and defines its waveform in the current design.

Syntax

The supported syntax for the create_clock constraint is:

```
create_clock
  -name clockName [-add] {objectList} |
    -name clockName [-add] [{objectList}]
      [-name clockName [-add]] {objectList}
  -period value
  [-waveform {riseValue fallValue}]
  [-disable]
  [-comment commentString]
```

Arguments

-name <i>clockName</i>	Specifies the name for the clock being created, enclosed in quotation marks or curly braces. If this option is not used, the clock gets the name of the first clock source specified in the <i>objectList</i> option. If you do not specify the <i>objectList</i> option, you must use the -name option, which creates a virtual clock not associated with a port, pin, or net. You can use both the -name and <i>objectList</i> options to give the clock a more descriptive name than the first source pin, port, or net. If you specify the -add option, you must use the -name option and the clocks with the same source must have different names.
-add	Specifies whether to add this clock to the existing clock or to overwrite it. Use this option when multiple clocks must be specified on the same source for simultaneous analysis with different clock waveforms. When you specify this option, you must also use the -name option.
-period <i>value</i>	Specifies the clock period in nanoseconds. This is the minimum time over which the clock waveform repeats. The <i>value</i> type must be greater than zero.

-waveform	Specifies the rise and fall edge times for the clock waveforms of the clock in nanoseconds, over an entire clock period. The first time is a rising transition, typically the first rising transition after time zero. There must be two edges, and they are assumed to be rise followed by fall. The edges must be monotonically increasing. If you do not specify this option, a default waveform is assumed, which has a rise edge of 0.0 and a fall edge of <i>periodValue</i> /2.
<i>objectList</i>	Clocks can be defined on the following objects: pins, ports, and nets. The FPGA synthesis tools support nets and instances, where instances have only one output (for example, BUFGs).
-disable	Disables the constraint.
-comment <i>textString</i>	Allows the command to accept a comment string. The tool honors the annotation and preserves it with the object so that the exact string is written out when the constraint is written out. The comment remains intact through the synthesis, place-and-route, and timing-analysis flows.

Examples

Refer to the following examples.

Example 1

A clock named `clk_in1` is created for port `clk_in1` that uses a period of 10 with rising edge of 0 and falling edge of 5.

```
create_clock -name {clk_in1} -period 10 [get_ports {clk_in1}]
```

Example 2

A clock named `clk` is created for port `clk_in` that uses a period of 10.0 with rising edge of 5.0 and falling edge of 9.5.

```
create_clock -name {clk} -period 10 -waveform {5.0 9.5}
[get_ports {clk_in}]
```

Example 3

A virtual clock named `CLK` is created that uses a period of 12 with a rising edge of 0.0 and falling edge of 6.0.

```
create_clock -name {CLK} -period 12
```

create_generated_clock

Creates a generated clock object.

Syntax

The supported syntax for the create_generated_clock constraint is:

```
create_generated_clock
  -name clockName [-add]] | {clockObject}
  -source masterPinName
  [-master_clock clockName]
  [-divide_by integer | -multiply_by integer [-duty_cycle value]]
  [-invert]
  [-edges {edgeList}]
  [-edge_shift {edgeShiftList}]
  [-combinational]
  [-disable]
  [-comment commentString]
```

Arguments

-name <i>clockName</i>	Specifies the name of the generated clock. If this option is not used, the clock gets the name of the first clock source specified in the -source option (<i>clockObject</i>). If you specify the -add option, you must use the -name option and the clocks with the same source must have different names.
-add	Specifies whether to add this clock to the existing clock or to overwrite it. Use this option when multiple generated clocks must be specified on the same source, because multiple clocks fan into the master pin. Ideally, one generated clock must be specified for each clock that fans into the master pin. If you specify this option, you must also use the -name and -master_clock options.
<i>clockObject</i>	The first clock source specified in the -source option in the absence of <i>clockName</i> . Clocks can be defined on pins, ports, and nets. The FPGA synthesis tool supports nets and instances, where instances have only one output (for example, BUFGs).
-source <i>masterPinName</i>	Specifies the master clock pin, which is either a master clock source pin or a fanout pin of the master clock driving the generated clock definition pin. The clock waveform at the master pin is used for deriving the generated clock waveform.

-master_clock <i>clockName</i>	Specifies the master clock to be used for this generated clock, when multiple clocks fan into the master pin.
-divide_by <i>integer</i>	Specifies the frequency division factor. If the <i>divideFactor</i> value is 2, the generated clock period is twice as long as the master clock period.
-multiply_by <i>integer</i>	Specifies the frequency multiplication factor. If the <i>multiplyFactor</i> value is 3, the generated clock period is one-third as long as the master clock period.
-duty_cycle <i>percent</i>	Specifies the duty cycle, as a percentage, if frequency multiplication is used. Duty cycle is the high pulse width. Note: This option is valid only when used with the -multiply_by option.
-invert	Inverts the generated clock signal (in the case of frequency multiplication and division).
-edges <i>edgeList</i>	Specifies a list of integers that represents edges from the source clock that are to form the edges of the generated clock. The edges are interpreted as alternating rising and falling edges and each edge must not be less than its previous edge. The number of edges must be set to 3 to make one full clock cycle of the generated clock waveform. For example, 1 represents the first source edge, 2 represents the second source edge, and so on.
-edge_shift <i>edgeShiftList</i>	Specifies a list of floating point numbers that represents the amount of shift, in nanoseconds, that the specified edges are to undergo to yield the final generated clock waveform. The number of edge shifts specified must be equal to the number of edges specified. The values can be positive or negative; positive indicating a shift later in time, while negative indicates a shift earlier in time. For example, 1 indicates that the corresponding edge is to be shifted by one library time unit.
-combinational	The source latency paths for this type of generated clock only includes the logic where the master clock propagates. The source latency paths do not flow through sequential element clock pins, transparent latch data pins, or source pins of other generated clocks.
-disable	Disables the constraint.
-comment <i>textString</i>	Allows the command to accept a comment string. The tool honors the annotation and preserves it with the object so that the exact string is written out when the constraint is written out. The comment remains intact through the synthesis, place-and-route, and timing-analysis flows.

Examples

Refer to the following examples.

Example 1

A frequency of -divide_by 2 is used for the generated clock.

```
create_generated_clock -name {gen_clk} -source  
[get_pins {DCM0.CLK0}] [get_pins {BUFGMUX_inst.O}] -divide_by 2
```

Example 2

A generated clock is created whose edges are 1, 3, and 5 of the master clock source. If the master clock period is 30 and the master waveform is {24 36}, then the generated clock period becomes 60 with waveform {24 54}.

```
create_generated_clock -name {genclk} -source  
[get_ports {clk_in1}] [get_nets {dut.clk_out2}] -edges {1 3 5}
```

Example 3

This example shows the generated clock from the previous example with each derived edge shifted by 1 time unit. If the master clock period is 30 and the master waveform is {24 36}, then the generated clock period becomes 60 with waveform {25 55}.

```
create_generated_clock -name {genclk}  
-source [get_ports {clk_in1}] [get_nets {dut.clk_out2}]  
-edges {1 3 5} -edge_shift {1 1 1}
```

Example 4

A generated clock is created, which is 2/5th of the source clock defined at port clk_in1.

```
create_generated_clock -name {genclk}  
-source [get_ports {clk_in1}] [get_nets {dut.clk_out2}]  
-edges {1 1 2} -edge_shift {0 0.8 -0.4}
```

reset_path

Resets the specified paths to single-cycle timing.

Syntax

The supported syntax for the reset_path constraint is:

```
reset_path [-setup]
[-from {objectList}]
[-through {objectList} [-through {objectList} ...]]
[-to {objectList}]
[-disable]
[-comment commentString]
```

Arguments

-setup	Specifies that setup checking (maximum delay) is reset to single-cycle behavior.
-from	Specifies the names of objects to use to find path start points. The -from <i>objectList</i> includes: <ul style="list-style-type: none">• Clocks• Registers• Top-level input or bi-directional ports)• Black box outputs• Sequential cell clock pins When the specified object is a clock, all flip-flops, latches, and primary inputs related to that clock are used as path start points

-through	Specifies the intermediate points for the timing exception. The -through <i>objectList</i> includes: <ul style="list-style-type: none">• Combinational nets• Hierarchical ports• Pins on instantiated cells By default, the through points are treated as an OR list. The constraint is applied if the path crosses any points in <i>objectList</i> . If more than one object is included, the objects must be enclosed either in quotation marks ("") or in braces ({}). If you specify the -through option multiple times, <code>reset_path</code> applies to the paths that pass through a member of each <i>objectList</i> . If you use the -through option in combination with the -from or -to options, <code>reset_path</code> applies only if the -from or -to and the -through conditions are satisfied.
-to	Specifies the names of objects to use to find path end points. The -to <i>objectList</i> includes: <ul style="list-style-type: none">• Clocks• Registers• Top-level output or bi-directional ports• Black box inputs• Sequential cell data input pins If a specified object is a clock, all flip-flops, latches, and primary outputs related to that clock are used as path end points.
-disable	Disables the constraint.
-comment <i>textString</i>	Allows the command to accept a comment string. The tool honors the annotation and preserves it with the object so that the exact string is written out when the constraint is written out. The comment remains intact through the synthesis, place-and-route, and timing-analysis flows.

set_case_analysis

Specifies that a port or pin is at a constant 1 or 0 logic value.

Note: Currently set_case_analysis is only supported on the select input pin for BUFGMUX, BUFGMUX_1, and BUFGMUX_CTRL.

Syntax

The supported syntax for the set_case_analysis constraint is:

set_case_analysis *value* *portOrPinList*

For example:

```
set_case_analysis 1 [get_ports {IN1}]
```

Arguments


<i>value</i>	Specifies that the port or pin is at a constant 1 or 0 logic value. Valid values are <ul style="list-style-type: none">• 1 or one• 0 or zero
--------------	--

<i>portOrPinList</i>	Specifies the port or pin list.
----------------------	---------------------------------

Examples

The synthesis tool allows multiple clocks to propagate along a single net, either through unate logic or a mux for timing all possible clocks. In the following example, incorrect clock reporting can occur when both clocks are propagated through the mux.

Unate logic refers to inverters and buffers in clock trees that recognizes the positive or negative sense of the clock signal arriving at each register clock pin.

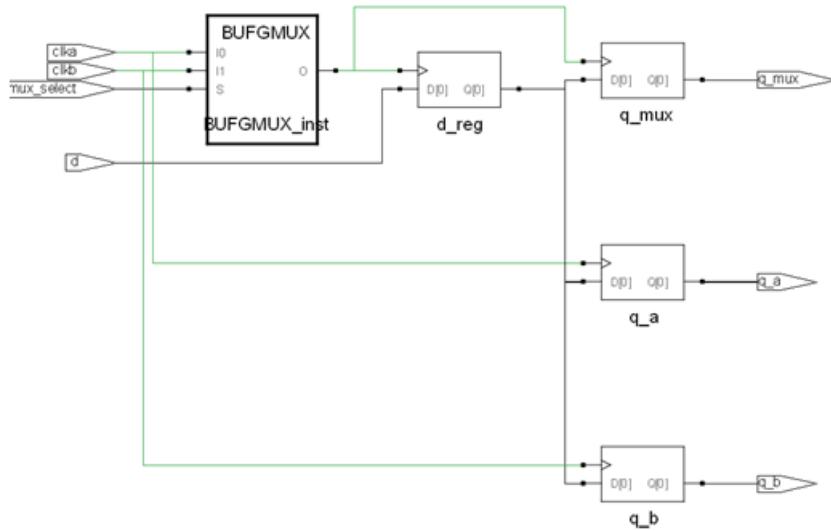

If both clocks are propagated, the timing report will contain the following timing paths:

Starting point: `d_reg / Q`

Ending point: `q_mux / D`

The start point is clocked by `clka [rising]` on pin C

The end point is clocked by `clkb [rising]` on pin C

This path is invalid because `clka` and `clkb` cannot exist on the net at the same time. The `set_case_analysis` constraint lets you select the clock to propagate through the mux.

This constraint specified with a query command allows `clka` to propagate through the mux:

```
set_case_analysis 0 [get_ports {mux_select}]
```

If you want to propagate `clkb` through the mux, use the following constraint:

```
set_case_analysis 1 [get_ports {mux_select}]
```

set_clock_groups

Specifies clock groups that are mutually exclusive or asynchronous with each other in a design. Clocks created with `create_clock` are considered synchronous as long as no `set_clock_groups` constraints specify otherwise. Paths between asynchronous clocks are not considered for timing analysis.

Clock grouping in the FPGA synthesis environment is inclusionary or exclusionary. For example, `clk2` and `clk3` can each be related to `clk1` without being related to each other.

Syntax

```
set_clock_groups
  -asynchronous | -physically_exclusive | -logically_exclusive
  [-name clockGroupname]
  -group {clockList} [-group {clockList} ... ]
  -derive
  [-disable]
  [-comment commentString]
```

Arguments

-asynchronous	Specifies that the clock groups are asynchronous to each other (the FPGA synthesis tool assumes all clock groups are synchronous). Two clocks are asynchronous with respect to each other if they have no phase relationship at all.
-physically_exclusive	Specifies that the clock groups are physically exclusive to each other. An example is multiple clocks that are defined on the same source pin. The FPGA synthesis tool accepts this option, but treats it as <code>-asynchronous</code> .
-logically_exclusive	Specifies that the clock groups are logically exclusive to each other. An example is multiple clocks that are selected by a multiplexer, but might have coupling with each other in the design. The FPGA synthesis tool accepts this option, but treats it as <code>-asynchronous</code> .

-group {clockList}	<p>Specifies a space-separated list of clocks in {clockList} that are asynchronous to all other clocks in the design, or asynchronous to the clocks specified in other -group arguments in the same command.</p> <p>If you specify only one group, the clocks in that group are exclusive or asynchronous with all other clocks in the design. Whenever a new clock is created, it is automatically included in the default “other” group that includes all the other clocks in the design.</p> <p>If you specify -group multiple times in a single command execution, the listed clocks are only asynchronous with the clocks in the other groups specified in the same command. You can include a clock in only one group in a single command execution. To include a clock in multiple groups, use multiple set_clock_groups commands.</p> <p>Do not use commas between clock names in the list. See -group Option, on page 290.</p>
-derive	Specifies that generated and derived clocks inherit the clock group of the parent clock. By default, a generated clock and its master clock are not in the same group when the exclusive or asynchronous clock groups are defined. The -derive option lets you override this behavior and allow generated or derived clocks to inherit the clock group of their parent source clock.
-disable	Disables the constraint.
-comment textString	Allows the command to accept a comment string. The tool honors the annotation and preserves it with the object so that the exact string is written out when the constraint is written out. The comment remains intact through the synthesis, place-and-route, and timing-analysis flows.

Restrictions

Be aware of the restrictions for the following set_clock_groups options:

-group Option

Do not insert commas between clock names when you use the -group option, because the tool treats the comma as part of the clock name. This is true for all constraints that contain lists. This means that if you specify the following constraint, the tool generates a warning that it cannot find clk1,:

```
set_clock_groups -asynchronous -group {clk1, clk2}
```

Examples

The following examples illustrate how to use this constraint.

Example 1

This set_clock_groups constraint specifies that clk4 is asynchronous to all other clocks in the design.

```
set_clock_groups -asynchronous -group {clk4}
```

Example 2

This set_clock_groups constraint specifies that clock clk1, clk2, and clk3 are asynchronous to all other clocks in the design. If a new clock called clkx is added to the design, clk1, clk2, and clk3 are asynchronous to it too.

```
set_clock_groups -asynchronous -group {clk1 clk2 clk3}
```

Example 3

The following set_clock_groups constraint has multiple -group arguments, and specifies that clk1 and clk2 are asynchronous to clk3 and clk4.

```
set_clock_groups -asynchronous -group {clk1 clk2}
                  -group {clk3 clk4}
```

Example 4

The following set_clock_groups constraint specifies that clk1 and clk2 which were synchronous when defined with the create_clock command, are now asynchronous.

```

create_clock [get_ports {c1}] -name clk1 -period 10
create_clock [get_ports {c2}] -name clk2 -period 16
create_clock [get_ports {c3}] -name clk3 -period 5
set_clock_groups -asynchronous -group [get_clocks {clk1}]
    -group [get_clocks {clk2}]

```

The following constructs are equivalent:

```

set_clock_groups -asynchronous -group [get_clocks {clk1}]
set_clock_groups -asynchronous -group {clk1}

```

Example 5

The following constraint specifies that test|clkout0_derived_clock_CLKIN1 and test|clkout1_derived_clock_CLKIN1 are asynchronous to all other clocks in the design:

```
set_clock_groups -asynchronous -group [get_clocks {*clkout*}]
```

Example 6

This example defines the clock on the u1.clkout0 net is asynchronous to all other clocks in the design:

```
set_clock_groups -asynchronous -group [get_clocks -of_objects
{n:u1.clkout0}]
```

Examples of Asynchronous Clocks

Example 1: Multiple -group Arguments for Asynchronous Clock Definition

This method uses multiple -group arguments in one constraint:

```
set_clock_groups -asynchronous -group {clk1 clk2} -group {clk3
bclk4} -group {clk5 cclk6}
```

With this constraint, members of the same group are synchronous, but relationships between clocks from different groups defined in this constraint are asynchronous. This has the following implications:

- clk1 and clk2 are synchronous to each other, but asynchronous to clocks in all other groups defined in this constraint
- clk3 and clk4 are synchronous to each other, but asynchronous to clocks in all other groups defined in this constraint

- clk5 and clk6 are synchronous to each other, but asynchronous to clocks in all other groups defined in this constraint

Example 2: Single -group Argument for Asynchronous Clock Definition

Asynchronous clocks defined with a single -group argument in a constraint are asynchronous to all other clocks in the design. You can specify multiple such constraints. In this example, all six clocks are asynchronous, because each individual constraint makes that clock asynchronous to all others.

```
set_clock_groups -asynchronous -group {clk1}
set_clock_groups -asynchronous -group {clk2}
set_clock_groups -asynchronous -group {clk3}
set_clock_groups -asynchronous -group {clk4}
set_clock_groups -asynchronous -group {clk5}
set_clock_groups -asynchronous -group {clk6}
```

set_clock_latency

Specifies clock network latency.

Syntax

The supported syntax for the set_clock_latency constraint is:

```
set_clock_latency
  -source
  [-clock {clockList}]
  delayValue
  {objectList}
  [-disable]
```

Arguments

-source	Indicates that the specified delay is applied to the clock source latency.
-clock <i>clockList</i>	Indicates that the specified delay is applied with respect to the specified clocks. By default, the specified delay is applied to all specified objects.
<i>delayValue</i>	Specifies the clock latency value.
<i>objectList</i>	Specifies the input ports for which clock latency is to be set

Description

In the FPGA synthesis tools, the set_clock_latency constraint accepts both clock objects and clock aliases. Applying a set_clock_latency constraint on a port can be used to model the off-chip clock delays in a multi-chip environment. Clock latency is forward annotated in the top-level constraint file as part of the time budgeting that takes place in the Certify/HAPS flow. The annotated values represent the arrival times for clocks on specific ports of any particular FPGA in a HAPS design.

In the above syntax, *objectList* references either input ports with defined clocks or clock aliases defined on the input ports. When more than one clock is defined for an input port, the -clock option can be used to apply different latency values to each alias.

Restrictions

The following limitations are present in the FPGA synthesis environment:

- Clock latency can only be applied to clocks defined on input ports.
- The `set_clock_latency` constraint is only used for source latency.
- The constraint only applies to port clock objects.
- Latency on clocks defined with `create_generated_clock` is not supported.

set_clock_route_delay

Translates the -route option for the legacy define_clock constraint.

Syntax

The supported syntax for the set_clock_route_delay constraint is:

```
set_clock_route_delay {clockAliasList} {delayValue}
```

Arguments

clockAliasList Lists the clock aliases to include the route delay.

delayValue Specifies the route delay value.

Description

The sdc2fdc translator performs a translation of the -route option for the legacy define_clock constraint and places a set_clock_route_delay constraint in the *_translated.fdc file using the following format:

```
set_clock_route_delay [get_clocks {clk_alias_1 clk_alias_2 ...}]  
{delay_in_ns}
```

set_clock_uncertainty

Specifies the uncertainty (skew) of the specified clock networks.

Syntax

The supported syntax for the set_clock_uncertainty constraint is:

```
set_clock_uncertainty
  {objectList}
    -from fromClock |-rise_from riseFromClock | -fall_from fallFromClock
    -to toClock |-rise_to riseToClock | -fall_to fallToClock
    value
```

Arguments

<i>objectList</i>	Specifies the clocks for simple uncertainty. The uncertainty is applied to the capturing latches clocked by one of the specified clocks. You must specify either this argument or a clock pair with the -from/-rise_from/-fall_from and -to/-rise_to/-fall_to options; you cannot specify both an object list and a clock pair.
-from <i>fromClock</i>	Specifies the source clocks for interclock uncertainty. You can use only one of the -from, -rise_from, and -fall_from options and you must specify a destination clock with one of the -to, -rise_to, and -fall_to options.
-rise_from <i>riseFromClock</i>	Specifies that the uncertainty applies only to the rising edge of the source clock. You can use only one of the -from, -rise_from, and -fall_from options and you must specify a destination clock with one of the -to, -rise_to, and -fall_to options.
-fall_from <i>fallFromClock</i>	Specifies that the uncertainty applies only to the falling edge of the source clock. You can use only one of the -from, -rise_from, and -fall_from options and you must specify a destination clock with one of the -to, -rise_to, and -fall_to options.
-to <i>toClock</i>	Specifies the destination clocks for interclock uncertainty. You can use only one of the -to, -rise_to, and -fall_to options and you must specify a source clock with one of the -from, -rise_from, and -fall_from options.
-rise_to <i>riseToClock</i>	Specifies that the uncertainty applies only to the rising edge of the destination clock. You can use only one of the -to, -rise_to, and -fall_to options and you must specify a source clock with one of the -from, -rise_from, and -fall_from options.

-fall_to fallToClock Specifies that the uncertainty applies only to the falling edge of the destination clock. You can use only one of the -to, -rise_to, and -fall_to options and you must specify a source clock with one of the -from, -rise_from, and -fall_from options.

value	Specifies a floating-point number that indicates the uncertainty value. Only positive uncertainty numbers are acceptable.
--------------	---

Examples

Refer to the following examples.

Example 1

All paths to registers clocked by `clk` are specified with setup uncertainty of 0.4 in the following example:

```
set_clock_uncertainty 0.4 -setup [get_clocks clk]
```

Example 2

For this example, interclock uncertainties are specified between clock `clk` and `clk2`:

```
set_clock_uncertainty -from [get_clocks clk] -to
[get_clocks clk2] 0.2
set_clock_uncertainty -from [get_clocks clk2] -to
[get_clocks clk] 0.1
```

Example 3

For this example, interclock uncertainties are specified between clock `clk` and `clk2` with specific edges:

```
set_clock_uncertainty -rise_from [get_clocks clk2] -to
[get_clocks clk] 0.5
set_clock_uncertainty -rise_from [get_clocks clk2] -rise_to
[get_clocks clk] 0.1
set_clock_uncertainty -from [get_clocks clk2] -fall_to
[get_clocks clk] 0.1
```

set_false_path

Removes timing constraints from particular paths.

Syntax

The supported syntax for the set_false_path constraint is:

```
set_false_path
[-setup]
[-from {objectList}]
[-through {objectList} [-through {objectList} ...]]
[-to {objectList}]
[-disable]
[-comment commentString]
```

Arguments

-setup	Specifies that setup checking (maximum delay) is reset to single-cycle behavior.
-from	Specifies the names of objects to use to find path start points. The -from <i>objectList</i> includes: <ul style="list-style-type: none">• Clocks• Registers• Top-level input or bi-directional ports• Black box outputs• Sequential cell clock pins• Sequential cell data output pins• When the specified object is a clock, all flip-flops, latches, and primary inputs related to that clock are used as path start points.

-through	Specifies the intermediate points for the timing exception. The -through <i>objectList</i> includes: <ul style="list-style-type: none">• Combinational nets• Hierarchical ports• Pins on instantiated cells By default, the through points are treated as an OR list. The constraint is applied if the path crosses any points in <i>objectList</i> . If more than one object is included, the objects must be enclosed either in quotation marks ("") or in braces ({}). If you specify the -through option multiple times, set_path applies to the paths that pass through a member of each <i>objectList</i> . If you use the -through option in combination with the -from or -to options, set_false_path applies only if the -from or -to and the -through conditions are satisfied.
-to	Specifies the names of objects to use to find path end points. The -to <i>objectList</i> includes: <ul style="list-style-type: none">• Clocks• Registers• Top-level output or bi-directional ports• Black box inputs• Sequential cell data input pins If a specified object is a clock, all flip-flops, latches, and primary outputs related to that clock are used as path end points.
-disable	Disables the constraint.
-comment <i>textString</i>	Allows the command to accept a comment string. The tool honors the annotation and preserves it with the object so that the exact string is written out when the constraint is written out. The comment remains intact through the synthesis, place-and-route, and timing-analysis flows.

Examples

Refer to the following examples.

Example 1

All the paths from the sequential cell output pins and clock pins in module `gen_sub\[*\].u_sub` with names matching `out*` (i.e. registers `out1` and `out2` in modules `gen_sub\[0\].u_sub`, `gen_sub\[1\].u_sub`, and `gen_sub\[2\].u_sub`) are set as false paths.

```
set_false_path -from [get_pins {gen_sub\[*\]\.u_sub.out*.*}]
```

Note: Only sequential clock pins are valid pins that can be used as start points for a timing path. Note that hierarchical module pins are not valid as starting points for a timing path.

Example 2

All the paths from the sequential cells in module `gen_sub\[*\].u_sub` with names matching `out*` (i.e. registers `out1` and `out2` in modules `gen_sub\[0\].u_sub`, `gen_sub\[1\].u_sub`, and `gen_sub\[2\].u_sub`) are set as false paths.

```
set_false_path -from [get_cells {gen_sub\[*\]\.u_sub.out*}]
```

Example 3

All paths from top-level input ports with names `in*` are set as false paths.

```
set_false_path -from [get_ports {in*}]
```

Note: Only top-level ports are valid port based start points for timing paths. Do not use the `get_ports` command to reference hierarchical module pins.

Example 4

All paths with end points clocked by clock `clka` are set as false paths.

```
set_false_path -to [get_clocks {clka}]
```

set_input_delay

Sets input delay on pins or input ports relative to a clock signal.

Syntax

The supported syntax for the set_input_delay constraint is:

```
set_input_delay
[-clock clockName [-clock_fall]]
[-rise|-fall]
[-min|-max]
[-add_delay]
delayValue
{portPinList}
[-disable]
[-comment commentString]
```

Argument

-clock <i>clockName</i>	Specifies the clock to which the specified delay is related. If -clock_fall is used, -clock <i>clockName</i> must be specified. If -clock is not specified, the delay is relative to time zero for combinational designs. For sequential designs, the delay is considered relative to a new clock with the period determined by considering the sequential cells in the transitive fanout of each port.
-clock_fall	Specifies that the delay is relative to the falling edge of the clock. The default is the rising edge.
-rise	Specifies that <i>delayValue</i> refers to a rising transition on the specified ports of the current design. If neither -rise nor -fall is specified, rising and falling delays are assumed to be equal. Currently, the synthesis tool does not differentiate between the rising and falling edges for the data transition arcs on the specified ports. The worst case path delay is used instead. However, the -rise option is preserved and forward annotated to the place-and-route tool.

-fall	Specifies that <i>delayValue</i> refers to a falling transition on the specified ports of the current design. If neither -rise nor -fall is specified, rising and falling delays are assumed equal. Currently, the synthesis tool does not differentiate between the rising and falling edges for the data transition arcs on the specified ports. The worst case path delay is used instead. However, the -fall option is preserved and forward annotated to the place-and-route tool.
-min	Specifies that <i>delayValue</i> refers to the shortest path. If neither -max nor -min is specified, maximum and minimum input delays are assumed equal. Note: The synthesis tool does not optimize for hold time violations and only reports -min delay values in the <code>synlog/topLevel_fpga_mapper.srr_Min</code> timing report section of the log file. The -min delay values are forward annotated to the place-and-route tool.
-max	Specifies that <i>delayValue</i> refers to the longest path. If neither -max nor -min is specified, maximum and minimum input delays are assumed equal. Note: The -max delay values are reported in the top-level log file and are forward annotated to the place-and-route tool.
-add_delay	Specifies if delay information is to be added to the existing input delay or if it is to be overwritten. The -add_delay option enables you to capture information about multiple paths leading to an input port that are relative to different clocks or clock edges.
-disable	Disables the constraint.
-comment <i>textString</i>	Allows the command to accept a comment string. The tool honors the annotation and preserves it with the object so that the exact string is written out when the constraint is written out. The comment remains intact through the synthesis, place-and-route, and timing-analysis flows.
<i>delayValue</i>	Specifies the path delay. The <i>delayValue</i> must be in units consistent with the technology library used during optimization. The <i>delayValue</i> represents the amount of time the signal is available after a clock edge. This represents a combinational path delay from the clock pin of a register.
<i>portPinList</i>	Specifies a list of input port names in the current design to which <i>delayValue</i> is assigned. If more than one object is specified, the objects are enclosed in quotes ("") or in braces ({}).

set_max_delay

Specifies a maximum delay target for paths in the current design.

Syntax

The supported syntax for the set_max_delay constraint is:

```
set_max_delay
[-from {objectList}]
[-through {objectList} [-through {objectList} ...] ]
[-to {objectList}]
delayValue
[-disable]
[-comment commentString]
```

Arguments

-from	Specifies the names of objects to use to find path start points. The -from <i>objectList</i> includes: <ul style="list-style-type: none">• Clocks• Registers• Top-level input or bi-directional ports• Black box outputs• Sequential cell clock pins When the specified object is a clock, all flip-flops, latches, and primary inputs related to that clock are used as path start points. All paths from these start points to the end points in the -from <i>objectList</i> are constrained to <i>delayValue</i> . If a -to <i>objectList</i> is not specified, all paths from the -from <i>objectList</i> are affected. If you include more than one object, you must enclose the objects in quotation marks ("") or braces ({}).
--------------	--

-through	Specifies the intermediate points for the timing exception. The -through <i>objectList</i> includes: <ul style="list-style-type: none">• Combinational nets• Hierarchical ports• Pins on instantiated cells By default, the through points are treated as an OR list. The constraint is applied if the path crosses any points in <i>objectList</i> . The max delay value applies only to paths that pass through one of the points in the -through <i>objectList</i> . If more than one object is included, the objects must be enclosed either in quotation marks ("") or in braces ({}). If you specify the -through option multiple times, set_max_delay applies to the paths that pass through a member of each <i>objectList</i> . If you use the -through option in combination with the -from or -to options, set_max_delay applies only if the -from or -to and the -through conditions are satisfied.
-to	Specifies the names of objects to use to find path end points. The -to <i>objectList</i> includes: <ul style="list-style-type: none">• Clocks• Registers• Top-level output or bi-directional ports• Black box inputs• Sequential cell data input pins If a specified object is a clock, all flip-flops, latches, and primary outputs related to that clock are used as path end points. All paths to the end points in the -to <i>objectList</i> are constrained to <i>delayValue</i> . If a -from <i>objectList</i> is not specified, all paths to the -to <i>objectList</i> are affected. If you include more than one object, you must enclose the objects in quotation marks ("") or braces ({}).
-disable	Disables the constraint.
-comment <i>textString</i>	Allows the command to accept a comment string. The tool honors the annotation and preserves it with the object so that the exact string is written out when the constraint is written out. The comment remains intact through the synthesis, place-and-route, and timing-analysis flows.

<i>delayValue</i>	Specifies the value of the desired maximum delay for paths between start and end points. You must express <i>delayValue</i> in the same units as the technology library used during optimization. If a path start point is on a sequential device, clock skew is included in the computed delay. If a path start point has an input delay specified, that delay value is added to the path delay. If a path end point is on a sequential device, clock skew and library setup time are included in the computed delay. If the end point has an output delay specified, that delay is added into the path delay.
-------------------	---

set_multicycle_path

Modifies the single-cycle timing relationship of a constrained path.

Syntax

The supported syntax for the set_multicycle_path constraint is:

```
set_multicycle_path
  [-setup | -hold]
  [-start | -end]
  [-from {objectList}]
  [-through {objectList} [-through {objectList} ...] ]
  [-to {objectList}]
  pathMultiplier
  [-disable]
  [-comment commentString]
```

Arguments

-setup | -hold The option **-setup** specifies the *pathMultiplier* to be used for the setup (maximum delay) calculations.

The option **-hold** enables you to over-ride the default hold multiplier— $\{\text{pathMultiplier} - 1\}$ —that is forward annotated to the vendor constraint file. If you use this option, you must specify the hold value for each of the defined multicycle constraints.

If you do not provide **-setup** or **-hold**, the *pathMultiplier* is used for setup.

-start | -end Specifies if the multi-cycle information is relative to the period of either the start clock or the end clock. These options are only needed for multi-frequency designs; otherwise start and end are equivalent. The start clock is the clock source related to the register or primary input at the path start point. The end clock is the clock source related to the register or primary output at the path endpoint. The default is to move the setup check relative to the end clock, and the hold check relative to the start clock. A setup multiplier of 2 with **-end** moves the relation forward one cycle of the end clock. A setup multiplier of 2 with **-start** moves the relation back one cycle of the start clock. A hold multiplier of 1 with **-start** moves the relation forward one cycle of the start clock. A hold multiplier of 1 with **-end** moves the relation back one cycle of the end clock. If you do not provide **-start** or **-end**, **-end** is assumed.

-from	<p>Specifies the names of objects to use to find path start points. The <i>-from objectList</i> includes:</p> <ul style="list-style-type: none">• Clocks• Registers• Top-level input or bi-directional ports• Black box outputs• Sequential cell clock pins• Sequential cell data output pins <p>When the specified object is a clock, all flip-flops, latches, and primary inputs related to that clock are used as path start points. If a <i>-to objectList</i> is not specified, all paths from the <i>-from objectList</i> are affected. If you include more than one object, you must enclose the objects in quotation marks ("") or braces ({}).</p>
-through	<p>Specifies the intermediate points for the timing exception. The <i>-through objectList</i> includes:</p> <ul style="list-style-type: none">• Combinational nets• Hierarchical ports• Pins on instantiated cells <p>The multi-cycle values apply only to paths that pass through one of the points in the <i>-through objectList</i>. If more than one object is included, the objects must be enclosed either in double quotation marks ("") or in braces ({}). If you specify the <i>-through</i> option multiple times, <i>set_multicycle_delay</i> applies to the paths that pass through a member of each <i>objectList</i>. If the <i>-through</i> option is used in combination with the <i>-from</i> or <i>-to</i> options, the multi-cycle values apply only if the <i>-from</i> or <i>-to</i> conditions and the <i>-through</i> conditions are satisfied.</p>
-to	<p>Specifies the names of objects to use to find path end points. The <i>-to objectList</i> includes:</p> <ul style="list-style-type: none">• Clocks• Registers• Top-level output or bi-directional ports• Black box inputs• Sequential cell data input pins <p>If a specified object is a clock, all flip-flops, latches, and primary outputs related to that clock are used as path end points. If a <i>-from objectList</i> is not specified, all paths to the <i>-to objectList</i> are affected. If you include more than one object, you must enclose the objects in quotation marks ("") or braces ({}).</p>

pathMultiplier	Specifies the number of cycles that the data path must have, relative to the start point or end point clock, before data is required at the end point.
-disable	Disables the constraint.
-comment <i>textString</i>	Allows the command to accept a comment string. The tool honors the annotation and preserves it with the object so that the exact string is written out when the constraint is written out. The comment remains intact through the synthesis, place-and-route, and timing-analysis flows.

Examples

Refer to the following examples.

Example 1

All the paths from the sequential cell output pins and clock pins in module `gen_sub\[*\].u_sub` with names matching `out*` (i.e. registers `out1` and `out2` in modules `gen_sub\[0\].u_sub`, `gen_sub\[1\].u_sub`, and `gen_sub\[2\].u_sub`) provide 2 timing cycles before the data is required at the end point.

```
set_multicycle_path -from [get_pins{gen_sub\[*\]\.u_sub.out*.*}] 2
```

Note: Only sequential clock pins are pins that can be used as valid start points for a timing path. Note that hierarchical module pins cannot be used as starting points for a timing path.

Example 2

All the paths from the sequential cells in module `gen_sub\[*\].u_sub` with names matching `out*` (i.e. registers `out1` and `out2` in modules `gen_sub\[0\].u_sub`, `gen_sub\[1\].u_sub`, and `gen_sub\[2\].u_sub`) support the timing cycle set to 2.

```
set_multicycle_path -from [get_cells {gen_sub\[*\]\.u_sub.out*}] 2
```

Example 3

All paths from top-level input ports with names `in*` provide 2 timing cycles before the data is required at the end point.

```
set_multicycle_path -from [get_ports {in*}] 2
```

Note: Only top-level ports are valid port based start points for timing paths. Do not use the get_ports command to reference hierarchical module pins.

Example 4

All paths with end points clocked by clock clka provide 2 timing cycles before the data is required at the end point.

```
set_multicycle_path -to [get_clocks {clka}] 2
```

set_output_delay

Sets output delay on pins or output ports relative to a clock signal.

Syntax

The supported syntax for the set_output_delay constraint is:

```
set_output_delay
  [-clock clockName [-clock_fall]]
  [-rise][-fall]
  [-min|-max]
  [-add_delay]
  delayValue
  {portPinList}
  [-disable]
  [-comment commentString]
```

Arguments

-clock <i>clockName</i>	Specifies the clock to which the specified delay is related. If -clock_fall is used, -clock <i>clockName</i> must be specified. If -clock is not specified, the delay is relative to time zero for combinational designs. For sequential designs, the delay is considered relative to a new clock with the period determined by considering the sequential cells in the transitive fanout of each port.
-clock_fall	Specifies that the delay is relative to the falling edge of the clock. If -clock is specified, the default is the rising edge.
-rise	Specifies that <i>delayValue</i> refers to a rising transition on the specified ports of the current design. If neither -rise nor -fall is specified, rising and falling delays are assumed to be equal. Currently, the synthesis tool does not differentiate between the rising and falling edges for the data transition arcs on the specified ports. The worst case path delay is used instead. However, the -rise option is preserved and forward annotated to the place-and-route tool.

-fall	Specifies that <i>delayValue</i> refers to a falling transition on the specified ports of the current design. If neither -rise nor -fall is specified, rising and falling delays are assumed equal. Currently, the synthesis tool does not differentiate between the rising and falling edges for the data transition arcs on the specified ports. The worst case path delay is used instead. However, the -fall option is preserved and forward annotated to the place-and-route tool.
-min	Specifies that <i>delayValue</i> refers to the shortest path. If neither -max nor -min is specified, maximum and minimum output delays are assumed equal. Note: The synthesis tool does not optimize for hold time violations and only reports -min delay values in the <i>synlog/topLevel_fpga_mapper.srr_Min</i> timing report section of the log file. The -min delay values are forward annotated to the place-and-route tool.
-max	Specifies that <i>delayValue</i> refers to the longest path. If neither -max nor -min is specified, maximum and minimum output delays are assumed equal. Note: The -max delay values are reported in the top-level log file and are forward annotated to the place-and-route tool.
-add_delay	Specifies whether to add delay information to the existing output delay or to overwrite. The -add_delay option enables you to capture information about multiple paths leading to an output port that are relative to different clocks or clock edges.
-disable	Disables the constraint.
-comment <i>textString</i>	Allows the command to accept a comment string. The tool honors the annotation and preserves it with the object so that the exact string is written out when the constraint is written out. The comment remains intact through the synthesis, place-and-route, and timing-analysis flows.
<i>delayValue</i>	Specifies the path delay. The <i>delayValue</i> must be in units consistent with the technology library used during optimization. The <i>delayValue</i> represents the amount of time that the signal is required before a clock edge. For maximum output delay, this usually represents a combinational path delay to a register plus the library setup time of that register. For minimum output delay, this value is usually the shortest path delay to a register minus the library hold time

<i>portPinList</i>	A list of output port names in the current design to which <i>delayValue</i> is assigned. If more than one object is specified, the objects are enclosed in double quotation marks ("") or in braces ({}).
--------------------	--

set_reg_input_delay

Speeds up paths feeding a register by a given number of nanoseconds.

Syntax

```
set_reg_input_delay {registerName} [-route ns] [-disable] [-comment textString]
```

Arguments

<i>registerName</i>	A single bit, an entire bus, or a slice of a bus.
-route	Advanced user option that you use to tighten constraints during resynthesis, when the place-and-route timing report shows the timing goal is not met because of long paths to the register.
-comment	Allows the command to accept a comment string. The tool honors the annotation and preserves it with the object so that the exact string is written out when the constraint is written out. The comment remains intact through the synthesis, place-and-route, and timing-analysis flows.
-disable	Disables the constraint.

Description

The set_reg_input_delay timing constraint speeds up paths feeding a register by a given number of nanoseconds. The Synopsys FPGA synthesis tool attempts to meet the global clock frequency goals for a design as well as the individual clock frequency goals (set with create_clock). Use this constraint to speed up the paths feeding a register. For information about the equivalent SCOPE spreadsheet interface, see [Registers, on page 245](#).

Use this constraint instead of the legacy constraint, define_reg_input_delay.

set_reg_output_delay

Speeds up paths coming from a register by a given number of nanoseconds.

Syntax

```
set_reg_output_delay {registerName} [-route ns] [-disable] [-comment textString]
```

Arguments

<i>registerName</i>	A single bit, an entire bus, or a slice of a bus.
-route	Advanced user option that you use to tighten constraints during resynthesis, when the place-and-route timing report shows the timing goal is not met because of long paths from the register.
-comment	Allows the command to accept a comment string. The tool honors the annotation and preserves it with the object so that the exact string is written out when the constraint is written out. The comment remains intact through the synthesis, place-and-route, and timing-analysis flows.
-disable	Disables the constraint.

Description

The `set_reg_output_delay` constraint speeds up paths coming from a register by a given number of nanoseconds. The synthesis tool attempts to meet the global clock frequency goals for a design as well as the individual clock frequency goals (set with `create_clock`). Use this constraint to speed up the paths coming from a register. For information about the equivalent SCOPE spreadsheet interface, see [Registers, on page 245](#).

Use this constraint instead of the legacy constraint, `define_reg_output_delay`.

Naming Rule Syntax Commands

The FPGA synthesis environment uses a set of naming conventions for design objects in the RTL when your project contains constraint files. The following naming rule commands are added to the constraint file to change the expected default values. These commands must appear at the beginning of the constraint file before any other constraints. Similarly, when multiple constraint files are included in the project, the naming rule commands must be in the first constraint file read.

set_hierarchy_separator Command

The `set_hierarchy_separator` command redefines the hierarchy separator character (the default separator character is the period in the FPGA synthesis environment). For example, the following command changes the separator character to a forward slash:

```
set_hierarchy_separator {/}
```

Embedded Tcl commands, such as `get_pins` must be enclosed in brackets [] for the software to execute the command. Also, the curly brackets {} are required when object names include the escape (\) character or square brackets. For example, the following syntax is honored by the tool:

```
set_hierarchy_separator {/}
create_clock -name {clk1} [get_pins
{pdp_c/ib_phy_c/port_g\1.phy_c/c7_g\gtxe2_common_0_i/GTREFCLK[0]}]
-period {10}
```

set_rtl_ff_names Command

The `set_rtl_ff_names` command controls the stripping of register suffixes in the object strings of delay-path constraints (for example, `set_false_path`, `set_multicycle_path`). Generally, it is only necessary to change this value from its default when constraints that target ASIC designs are being imported from the Design Compiler (in the Design Compiler, inferred registers are given a `_reg` suffix during the elaboration phase; constraints targeting these registers must include this suffix). When importing constraints from the Design Compiler, include the following command to change the value of this naming rule to `{_reg}` to automatically recognize the added suffix.

```
set_rtl_ff_names {_reg}
```

For example, using the above value allows the DC exception

```
set_false_path -to [get_cells {register_bus_reg[0]}]
```

to apply to the following object without having to manually modify the constraint:

```
[get_cells {register_bus[0]}]
```

bus_naming_style Command

The `bus_naming_style` command redefines the format for identifying bits of a bus (by default, individual bits of a bus are identified by the bus name followed by the bus bit enclosed in square brackets). For example, the following command changes the bus-bit identification from the default `busName[busBit]` format to the `busName_busBit` format:

```
bus_naming_style {%s_%d}
```

bus_dimension_separator_style Command

The `bus_dimension_separator_style` command redefines the format for identifying multi-dimensional arrays (by default, multidimensional arrays such as row 2, bit 3 of array ABC[$n \times m$] are identified as ABC[2][3]). For example, the following command changes the bus-dimension separator from individual square bracket sets to an underscore:

```
bus_dimension_separator_style {_}
```

The resulting format for the above example is:

```
ABC[2_3]
```

read_sdc Command

Reads in a script in Synopsys FPGA constraint format. The supported syntax for the `read_sdc` constraint is:

```
read_sdc fileName
```

Design Constraints

This section describes the constraint file syntax for the following non-timing design constraints:

- [define_compile_point](#), on page 318
- [define_current_design](#), on page 319
- [define_io_standard](#), on page 320

define_compile_point

The `define_compile_point` command defines a compile point in a top-level constraint file. You use one `define_compile_point` command for each compile point you define. For the equivalent SCOPE spreadsheet interface, see [Compile Points, on page 176](#). (Compile points are only available for certain technologies.)

This is the syntax:

```
define_compile_point [-disable] {moduleName}  
-type {soft|hard|locked} [-comment textString]
```

-disable Disables a previous compile point definition.

-type Specifies the type of compile point. This can be soft, hard, or locked. See [Compile Point Types, on page 469](#) for more information.

Refer to [Guidelines for Entering and Editing Constraints, on page 163](#) for details about the syntax and prefixes for naming objects.

Here is a syntax example:

```
define_compile_point {v:work.prgm_cntr} -type {locked}
```

define_current_design

The `define_current_design` command specifies the module to which the constraints that follow it apply. It must be the first command in a block-level or compile-point constraint file. The specified module becomes the top level for objects defined in this hierarchy and the constraints applied in the respective block-level or compile-point constraint file.

This is the syntax:

```
define_current_design {regionName | libraryName.moduleName }
```

Refer to [Guidelines for Entering and Editing Constraints, on page 163](#) for details about the syntax and prefixes for naming objects.

Here is an example:

```
define_current_design {lib1.prgm_cntr}
```

Objects in all constraints that follow this command relate to `prgm_cntr`.

define_io_standard

Specifies a standard I/O pad type to use for various vendor-specific families. See [I/O Standards, on page 174](#) for details of the SCOPE equivalent.

```
define_io_standard [-disable] {p:portName} -delay_type input|output|bidir
    syn_pad_type {I/O_standard} [parameter {value}...]
```

In the above syntax:

portName is the name of the input, output, or bidirectional port.

-delay_type identifies the port direction which must be input, output, or bidir.

syn_pad_type is the I/O pad type (I/O standard) to be assigned to *portName*.

parameter is one or more of the parameters defined in the following table. Note that these parameters are device-family dependent.

Parameter	Function
syn_io_termination	The termination type; typical values are pullup and pulldown.
syn_io_drive	The output drive strength; values include low and high or numerical values in mA.
syn_io_dv2	Switch to use a 2x impedance value (DV2).
syn_io_dci	Switch for digitally-controlled impedance (DCI).
syn_io_slew	The slew rate for single-ended output buffers; values include slow and fast or low and high.

Examples:

```
define_io_standard {p:DATA1[7:0]} -delay_type input
    syn_pad_type {LVCMOS_33} syn_io_slew {high}
    syn_io_drive {12} syn_io_termination {pulldown}

define_io_standard {p:en} -delay_type input
    syn_pad_type {LVCMOS_18} syn_io_dci {DCI}
    syn_io_dv2 {DV2}
```

CHAPTER 5

User Interface Commands

The following describe the graphical user interface (GUI) commands available from the menus:

- [File Menu, on page 322](#)
- [Edit Menu, on page 327](#)
- [View Menu, on page 340](#)
- [Project Menu, on page 348](#)
- [Implementation Options Command, on page 364](#)
- [Run Menu, on page 395](#)
- [Run Menu, on page 395](#)
- [Analysis Menu, on page 440](#)
- [HDL Analyst Menu, on page 452](#)
- [Options Menu, on page 464](#)
- [Web Menu, on page 488](#)
- [Help Menu, on page 489](#)

For information about context-sensitive commands accessed from right-click popup menus, see Chapter 6, *GUI Popup Menu Commands*.

File Menu


Use the File menu for opening, creating, saving, and closing projects and files. The following table describes the File menu commands.

Command	Description
New	Can create any of the following types of files: Text, Tcl Script, VHDL, Verilog, Design Constraints, Analysis Design Constraints, or Project file. See New Command, on page 323 .
 Open	Opens a project or file.
Close	Closes a project file.
 Save	Saves a project or a file.
Save As	Saves a project or a file to a specified name.
 Save All	Saves all projects or files.
Print	Prints a file. For more information about printing, see the operating system documentation.
Print Setup	Specify print options.
Create Image	This command is available in the following views: <ul style="list-style-type: none">HDL Analyst ViewsFSM Viewer A camera pointer () appears. Drag a selection rectangle around the region for which you want to create an image, then release the mouse button. You can also simply click in the current view, then the Create Image dialog appears. See Create Image Command, on page 325 .
Build Project	Creates a new project based on the file open in the Text Editor (if active), or lets you choose files to add to a new project. See Build Project Command, on page 326 .
 Open Project	Opens a project. See Open Project Command, on page 327 .
New Project	Creates a new project. If a project is already open, it prompts you to save it before creating a new one. If you want to open multiple projects, select Allow multiple projects to be opened in the Project View dialog box. See Project View Options Command, on page 465 .
Close Project	Closes the current project.

Command	Description
Recent Projects	Lists recently accessed projects. Choose a project listed in the submenu to open it.
Recent files (listed as separate menu items)	Lists the last files you recently opened as separate menu items. Choose a file to open it.
Exit	Exits the session.

New Command

Select File->New to display the New dialog box, where you can select a file type to be created (for example, Verilog, VHDL, text, Tcl script, design constraints, analysis design constraints, or project). For most file types, a text editor window opens to allow you to define the file contents. You must provide a file name. You can automatically add the new file to your project by enabling the Add To Project checkbox before clicking OK.

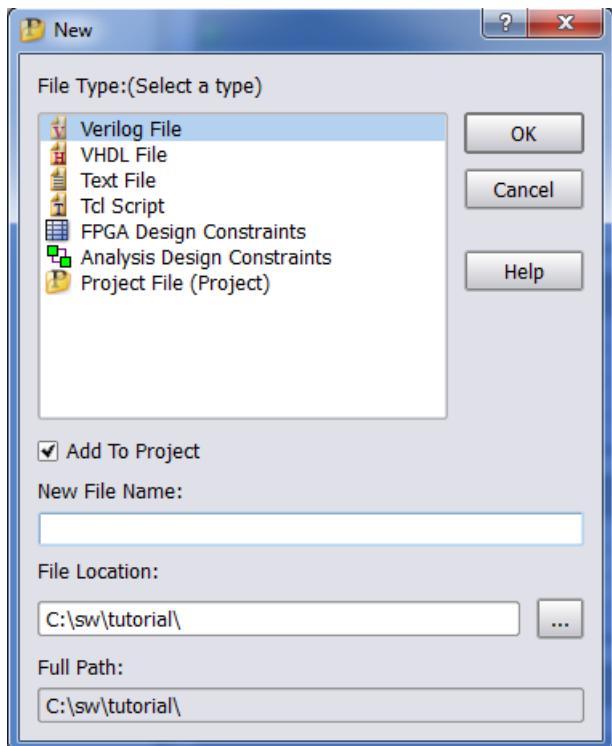


File Type	Opens Window	Directory Name	Extension
Verilog	Text Editor	Verilog	.v
VHDL	Text Editor	VHDL	.vhd
Text	Text Editor	Other	.txt
Tcl Script	Text Editor	Tcl Script	.tcl
FPGA Design Constraints	SCOPE	Constraint	.fdc
Analysis Design Constraints	SCOPE	Analysis Design Constraint	.adc
Project	None	None	.prj

Create Image Command

Select File->Create Image to create a capture image from any of the following views:

- HDL Analyst Views
- FSM Viewer

Drag the camera cursor to define the area for the image. When you release the cursor, the Create Image dialog box appears. Use the dialog box to copy the image, save the image to a file, or to print the image.

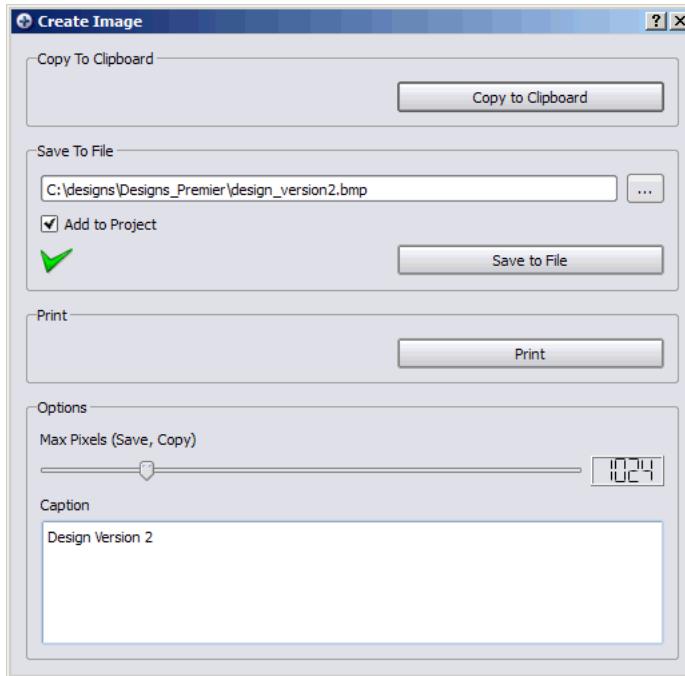

Field/Option	Description
Copy to Clipboard	Copies the image to the clipboard so you can paste it into a selected application (for example, a Microsoft Word file). When you copy an image to the clipboard, a green check mark appears in the Copy To Clipboard field.
Save to File	Saves the image to the specified file. You can save the file in a number of formats (platform dependent) including bmp, jpg, png, ppm, tif, xbm, and xpm.
Add to Project	Adds the saved image file to the Images folder in the Project view. This option is enabled by default.
Save to File button	You must click this button to save an image to the specified file. When you save the image, a green check mark appears in the Save To File field.
Print	Prints the image. When you print the image, a green check mark appears in the Print field.
Options	Allows you to select the resolution of the image saved to a file or copied to the clipboard. Use the Max Pixels slider to change the image resolution.
Caption	Allows you to enter a caption for a saved or copied image. The overlay for the caption is at the top-left corner of the image.


Build Project Command

Select File->Build Project to build a new project. This command behaves differently if an HDL file is open in the Text Editor.

- When an active Text Editor window with an HDL file is open, File->Build Project creates a project with the same name as the open file.
- If no file is open, File->Build Project prompts you to add files to the project using the Select Files to Add to New Project dialog box. The name of the new project is the name of the first HDL file added. See [Add Source File Command, on page 350](#).

Open Project Command

Select File->Open Project to open an existing project or to create a new project.

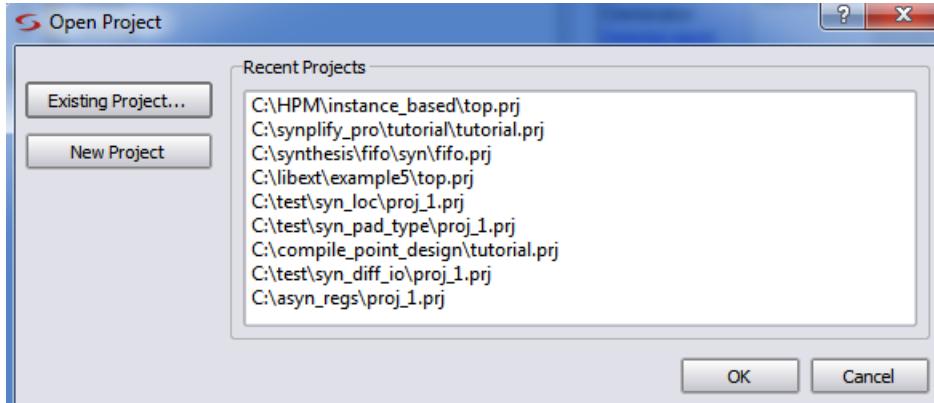

Field/Option	Description
Existing Project	Displays the Open Project dialog box for opening an existing project.
New Project	Creates a new project and places it in the Project view.

Edit Menu

You use the Edit menu to edit text files (such as HDL source files) in your project. This includes cutting, copying, pasting, finding, and replacing text; manipulating bookmarks; and commenting-out code lines. The Edit menu commands available at any time depend on the active window or view (Project, Text Editor, SCOPE spreadsheet, RTL, or Technology views).

The available Edit menu commands vary, depending on your current view. The following table describes all of the Edit menu commands:


Command	Description
Basic Edit Menu Commands	
 Undo	Cancels the last action.
 Redo	Performs the action undone by Undo.
 Cut	Removes the selected text and makes it available to Paste.
 Copy	Duplicates the selected text and makes it available to Paste.
 Paste	Pastes text that was cut (Cut) or copied (Copy).
Delete	Deletes the selected text.
 Find	Searches the file for text matching a given search string; see Find Command (Text), on page 329 . In the RTL view, opens the Object Query dialog box, which lets you search your design for instances, symbols, nets, and ports, by name; see Find Command (HDL Analyst), on page 332 . In the project view, searches files for text strings; see Find Command (In Project), on page 331 .
Find Next	Continues the search initiated by the last Find.
Find in Files	Performs a string search of the target files. See Find in Files Command, on page 336 .
Edit Menu Commands for the Text Editor	
Select All	Selects all text in the file.
Replace	Finds and replaces text. See Replace Command, on page 338 .
Goto	Goes to a specific line number. See Goto Command, on page 339 .
 Toggle bookmark	Toggles between inserting and removing a bookmark on the line that contains the text cursor.
 Next bookmark	Takes you to the next bookmark.
 Previous bookmark	Takes you to the previous bookmark.

Command	Description
 Delete all bookmarks	Removes all bookmarks from the Text Editor window.
Advanced->Comment Code	Inserts the appropriate comment prefix at the current text cursor location.
Advanced-> Uncomment Code	Removes comment prefix at the current text cursor location.
Advanced->Uppercase	Makes the selected string all upper case.
Advanced->Lowercase	Makes the selected string all lower case.
Select->All	Selects all text in the file (same as All).

Find Command (Text)

Select Edit->Find to display the Find dialog box. In the SCOPE window, the FSM Viewer, and the Text Editor window, the command has basic text-based search capabilities. Some search features, like regular expressions and line-number highlighting, are available only in the Text Editor. See [Find Command \(In Project\), on page 331](#), to search for files in the Project.


The HDL Analyst Find command is different; see [Find Command \(HDL Analyst\), on page 332](#) for details.

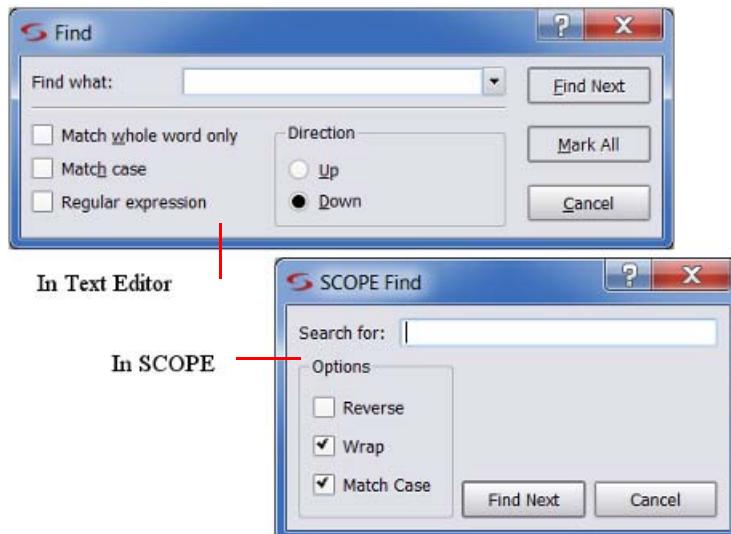

Field/Option	Description
Find What/Search for	Search string matching the text to find. In the text editor, you can use the pull-down list to view and reuse search strings used previously in the current session.
Match whole word only (text editor only)	When enabled, matches the entire word rather than a portion of the word.
Match Case	When enabled, searching is case sensitive.
Regular expression (text editor only)	When enabled, wildcard characters (*) and (?) can be used in the search string: ? matches any single character; * matches any string of characters, including an empty string.
Direction/Reverse	Changes search direction. In the text editor, buttons select the search direction (Up or Down).
Find Next	Initiates a search for the search string (see Find What/Search for). In the text editor, searching starts again after reaching the end (Down) or beginning (Up) of the file.
Wrap (SCOPE only)	When enabled, searching starts again after reaching the end or beginning (Reverse) of the spread sheet.
Mark All (Text editor only)	Highlights the line numbers of the text matching the search string and closes the Find dialog box.

Find Command (In Project)


Select Edit->Find to display the Find File dialog box. In the Project view, the command has basic text-based search capabilities to locate files in the project.

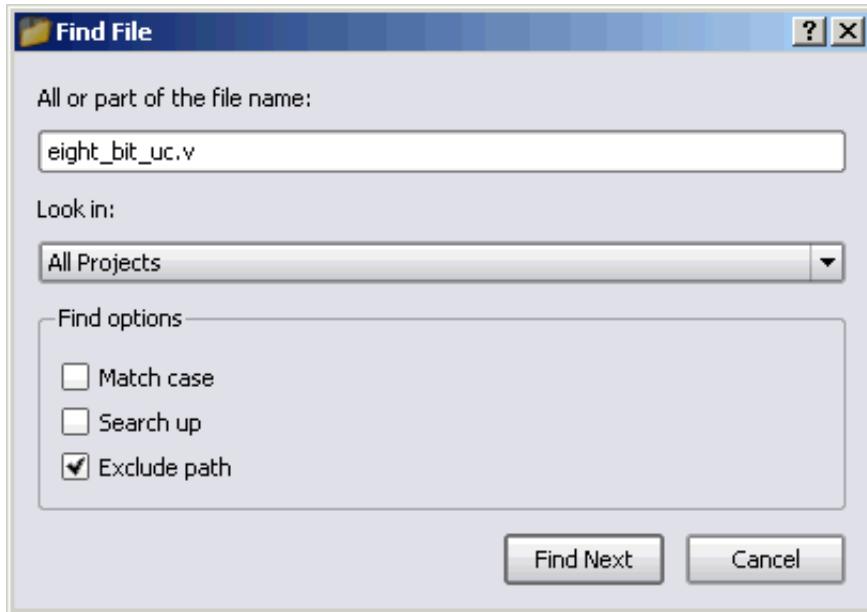

Field/Option	Description
All or part of the file name	Search string matching the file to find. You can specify all or part of the file name.
Look in	Search for files in all projects or limit the search to files only in the specified project.
Match Case	When enabled, searching is case sensitive.
Search up	Searches in the up direction (search terminates when an end of tree is reached in either direction).
Exclude path	Excludes the path name during the search.
Find Next	Initiates a search for the file name string.

Find Command (HDL Analyst)

In the RTL or Technology view, use Edit->Find to display the Object Query dialog box. For a detailed procedure about using this command, see [Using Find for Hierarchical and Restricted Searches, on page 333](#).

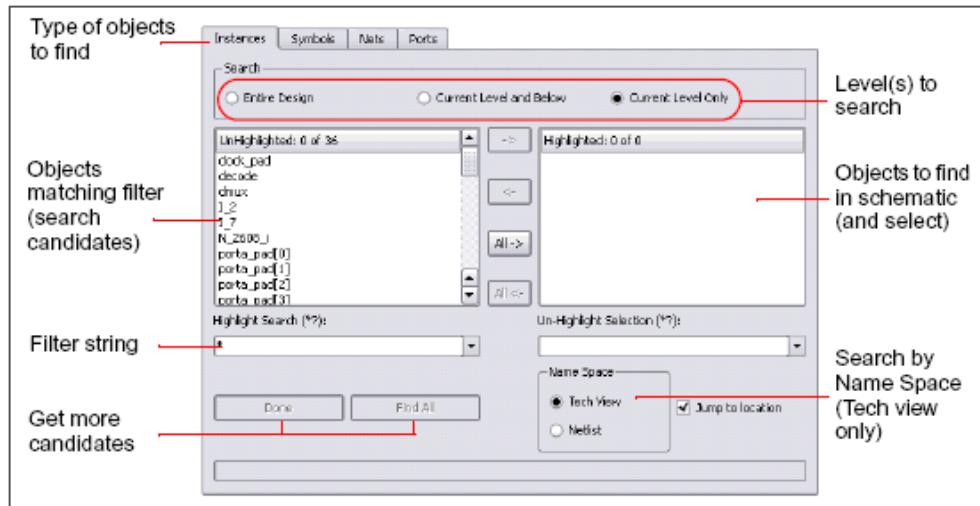

The available Find menu commands vary, depending on your current view. The following table describes all of the Find menu commands:

Field/Option Description

Instances, Symbols, Nets, Ports	Tabbed panels for finding different kinds of objects. Choose a panel for a given object type by clicking its tab. In terms of memory consumption, searching for Instances is most efficient, and searching for Nets is least efficient.
Search	Where to search: Entire Design, Current Level & Below, or Current Level Only. See Using Find for Hierarchical and Restricted Searches, on page 333 .

Field/Option	Description
UnHighlighted	<p>Names of all objects of the current panel type, in the level(s) chosen to Search, that match the Highlight Search (*?) filter. This list is populated by the Find 200 and Find All buttons.</p>
	<p>To select an object as a candidate for highlighting, click its name in this list. The complete name of the selected object appears near the bottom of the dialog box. You can select part or all of this complete name, then use the Ctrl-C keyboard shortcut to copy it for pasting.</p>
	<p>You can select multiple objects by pressing the Ctrl or Shift key while clicking; press Ctrl and click a selection to deselect it. The number of objects selected, and the total number listed, are displayed above the list, after the UnHighlighted: label: # selected of # total.</p>
	<p>To confirm a selection for highlighting and move the selected objects to the Highlighted list, click the -> button.</p>
Highlight Search (*?)	<p>Determines which object names appear in the UnHighlighted area, based on the case-sensitive filter string that you enter. For tips about using this field, see Using Wildcards with the Find Command, on page 336.</p>
	<p>The filter string can contain the following wildcard characters:</p>
	<ul style="list-style-type: none"> • * (asterisk) - matches any sequence of characters • ? (question mark) - matches any single character • . (period) - does not match any characters, but indicates a change in hierarchical level.
	<p>Wildcards * and ? only match characters within the current hierarchy level; a*b*, for example, will not cross levels to match alpha.beta (where the period indicates a change in hierarchy).</p>
	<p>If you must match a period character occurring in a name, use \. (backslash period) in the filter string. The backslash prevents interpreting the period as a wildcard.</p>
	<p>The filter string is matched at each searched level of the hierarchy (the Search levels are described above). Use filter strings that are as specific as possible to limit the number of unwanted matches. Unnecessarily extensive search can be costly in terms of memory performance.</p>
>	<p>Moves the selected names from the UnHighlighted area to the Highlighted area, and highlights their objects in the RTL and Technology views.</p>
<	<p>Moves the selected names from the Highlighted area to the UnHighlighted area, and unhighlights their objects in the RTL and Technology views.</p>


Field/Option	Description
All ->	Moves all names from the UnHighlighted to the Highlighted area, and highlights their objects in the RTL and Technology views.
<- All	Moves all names from the Highlighted to the UnHighlighted area, and unhighlights their objects in the RTL and Technology views.
Highlighted	Complementary and analogous to the UnHighlighted area. You select object names here as candidates for moving to the UnHighlighted list. (You move names to the UnHighlighted list by clicking the <- button which unselects and unhighlights the corresponding objects.) When you select a name in the Highlighted list, the view is changed to show the (original, unfiltered) schematic sheet containing the object.
Un-Highlight Selection (*?)	Complementary and analogous to the Highlight Search area: selects names in the Highlighted area, based on the filter string you input here.
Jump to location	When enabled, jumps to another sheet if necessary to show target objects.
Name Space: Tech View	Searches for the specified name using the mapped (srm) database. For more information, see Using Find for Hierarchical and Restricted Searches, on page 333 .
Name Space: Netlist	Searches for the specified name using the output netlist file. For more information, see Using Find for Hierarchical and Restricted Searches, on page 333 .

Field/Option	Description
Find 200	<p>Adds up to 200 more objects that match the filter string to the UnHighlighted list. This button becomes available after you enter a Highlight Search (*?) filter string. This button does not find objects in HDL Analyst views. It matches names of design objects against the Highlight Search (*?) filter and provides the candidates listed in the UnHighlighted list, from which you select the objects to find.</p> <p>Using the Enter (Return) key when the cursor is in the Highlight Search (*?) field is equivalent to clicking the Find 200 button.</p> <p><i>Usage note:</i></p> <p>Click Find 200 before Find All to prevent unwanted matches in case the Highlight Search (*?) string is less selective than you expect.</p>
Find All	<p>Places all objects that match the Highlight Search (*) filter string in the UnHighlighted list. This button does not find objects in HDL Analyst views. It matches names of design objects against the Highlight Search (*) filter and provides the candidates listed in the UnHighlighted list, from which you select the objects to find. (Enter a filter string before clicking this button.) See <i>Usage Note</i> for Find 200, above.</p>

For more information on using the Object Query dialog box, see [Using Find for Hierarchical and Restricted Searches, on page 333](#).

Find in Files Command


The Find in Files command searches the defined target for the occurrence of a specified search string. The list of files containing the string is reported in the display area at the bottom of the dialog box. For information on using this feature, see [Searching Files, on page 130](#).

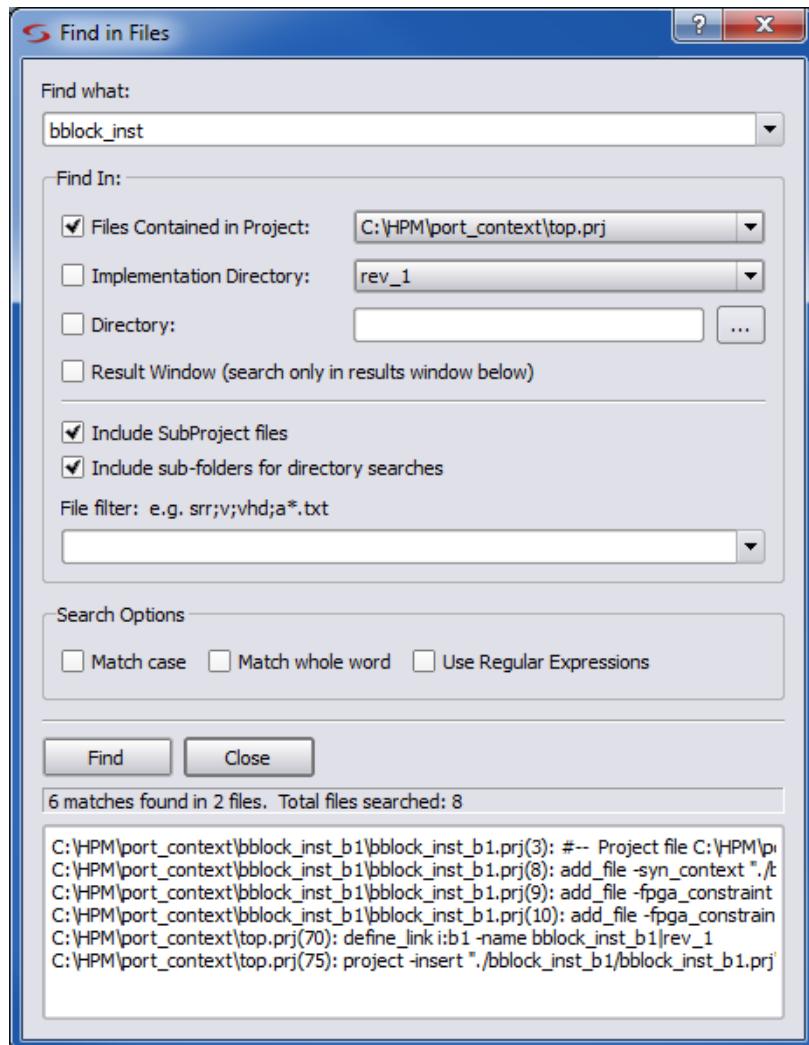

Field/Option	Description
Find what	Text string object of search.
Files Contained in Project	Drop-down menu identifying the source project of the files to be searched.
Implementation Directory	Drop-down menu restricting project search to a specific implementation or all implementations.
Directory	Identifies directory for files to be searched.
Result Window	Allows a secondary search string (Find what) to be applied to the targets reported from the initial search.
Include SubProject files	When checked, extends the search to include subproject files of the top-level project file.
Include sub-folders for directory searches	When checked, extends the search to sub-directories of the target directory.
File filter	Excludes files from the search by filename extension.
Search Options	Standard string search options; check to enable.
Find	Initiates search.
Result Display	List of files containing search string. Status line lists the number of matches in each file and the number of files searched.

Replace Command


Use Edit->Replace to find and optionally replace text in the Text Editor.

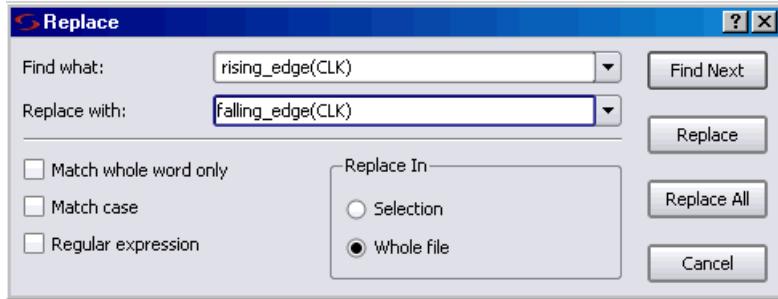

Feature	Description
Find what	Search string matching the text to find. You can use the pull-down list to view and reuse search strings used previously in the current session.
Replace with	The text that replaces the found text. You can use the pull-down list to view and reuse replacement text used previously in the current session.
Match whole word only	Finds only occurrences of the exact string (strings longer than the Find what string are not recognized).
Match case	When enabled, searching is case sensitive.
Regular expression	When enabled, wildcard characters (*) and (?) can be used in the search string: ? matches any single character; * matches any string of characters, including the empty string.
Selection	Replace All replaces only the matched occurrence.
Whole file	Replace All replaces all matching occurrences.
Find Next	Initiates a search for the search string (see Find What).
Replace	Replaces the found text with the replacement text, and locates the next match.
Replace All	Replaces all text that matches the search string.

Goto Command

Use Edit->Goto to go to a specified line number in the Text Editor.

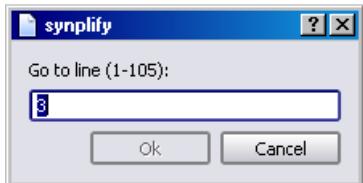

View Menu

Use the View menu to set the display and viewing options, choose toolbars, and display result files. The commands in the View menu vary with the active view. The following tables describe the View menu commands in various views.

- [View Menu Commands: All Views, on page 340](#)
- [View Menu: Zoom Commands, on page 341](#)
- [View Menu: RTL and Technology Views Commands, on page 341](#)
- [View Menu: FSM Viewer Commands, on page 342](#)

View Menu Commands: All Views

Command	Description
Font Size	Changes the font size in the Project UI of the synthesis tools. You can select one of the following options: <ul style="list-style-type: none">• Increase Font Size• Decrease Font Size• Reset Font Size (default size)
Toolbars	Displays the Toolbars dialog box, where you specify the toolbars to display. See Toolbar Command, on page 343 .
Status Bar	When enabled, displays context-sensitive information in the lower-left corner of the main window as you move the mouse pointer over design elements. This information includes element identification.
Refresh	Updates the UI display of project files and folders.
Output Windows	Displays or removes the Tcl Script/Messages and Watch windows simultaneously in the Project view. Refer to the Tcl Window and Watch Window options for more information.
Tcl Window	When enabled, displays the Tcl Script and Messages windows. All commands you execute in the Project view appear in the Tcl window. You can enter or paste Tcl commands and scripts in the Tcl window. Check for notes, warning, and errors in the Messages window.

Command	Description
Watch Window	When enabled, displays selected information from the log file in the Watch window.
View Log File	Displays a log file report that includes compiler, mapper, and timing information on your design. See View Log File Command, on page 345 .
View Result File	Displays a detailed netlist report.

View Menu: Zoom Commands

Command	Description
 Zoom In	Lets you Zoom in or out. When selected, a Z-shaped mouse pointer (\mathbb{Z}) appears. Zoom in or out on the view by clicking or dragging a box around (lassoing) the region. Clicking zooms in or out on the center of the view; lassoing zooms in or out on the lassoed region. Right-click to exit zooming mode. In the SCOPE spreadsheet, selecting these commands increases or decreases the view in small increments.
Pan	Lets you pan (scroll) a schematic or FSM view using the mouse. If your mouse has a wheel feature, use the wheel to pan up and down. To pan left and right, use the Shift key with the wheel.
 Full View	Zooms the active view so that it shows the entire design.
 Normal View	Zooms the active view to normal size and centers it where you click. If the view is already normal size, clicking centers the view.

View Menu: RTL and Technology Views Commands

These commands are available when the RTL view or Technology view is active. These commands are available in addition to the commands described in [View Menu Commands: All Views, on page 340](#) and [View Menu: Zoom Commands, on page 341](#).

Command	Description
 Push/Pop Hierarchy	Traverses design hierarchy using the push/pop mode – see Exploring Design Hierarchy, on page 323
 Previous Sheet	Displays the previous sheet of a multiple-sheet schematic.
 Next Sheet	Displays the next sheet of a multiple-sheet schematic.
View Sheets	Displays the Goto Sheet dialog box where you can select a sheet to display from a list of all sheets. See View Sheets Command, on page 344 .
Visual Properties	Toggles the display of information for nets, instances, pins, and ports in the HDL Analyst view. To customize the information that displays, set the values with Options->HDL Analyst Options->Visual Properties. See Visual Properties Panel, on page 486 .
 Back	Goes backward in the history of displayed sheets for the current HDL Analyst view.
 Forward	Goes forward in the history of displayed sheets for the current HDL Analyst view.
Filter	Filters the RTL/Technology view to display only the selected objects.

View Menu: FSM Viewer Commands

The following commands are available when the FSM viewer is active. These commands are in addition to the common commands described in [View Menu Commands: All Views, on page 340](#) and [View Menu: Zoom Commands, on page 341](#).


Command	Description
 Filter->Selected	Hides all but the selected state(s).
 Filter->By output transitions	Hides all but the selected state(s), their output transitions, and the destination states of those transitions.
 Filter->By input transitions	Hides all but the selected state(s), their input transitions, and the origin states of those transitions.

Command	Description
Filter->By any transition	Hides all but the selected state(s), their input and output transitions, and their predecessor and successor states.
 Unfilter	Restores a filtered FSM diagram so that all the states and transitions are showing.
Cross Probing	Enables cross probing between FSM nodes and RTL view schematic.
Select All States	Selects all the states.
 FSM Table	Toggles display of the transition table.
FSM Graph	Toggles FSM state diagram on or off.
Annotate Transitions	Toggles display of state transitions on or off on FSM state diagram.
<hr/>	
Selection Transcription	
Tool Tips	Toggles state diagram tool tips on or off.
FSM Properties	Displays FSM Properties dialog box.
Unselect All	Unselects all states and transitions.

Toolbar Command

Select View->Toolbars to display the Toolbars dialog box, where you can:


- Choose the toolbars to display
- Customize their appearance

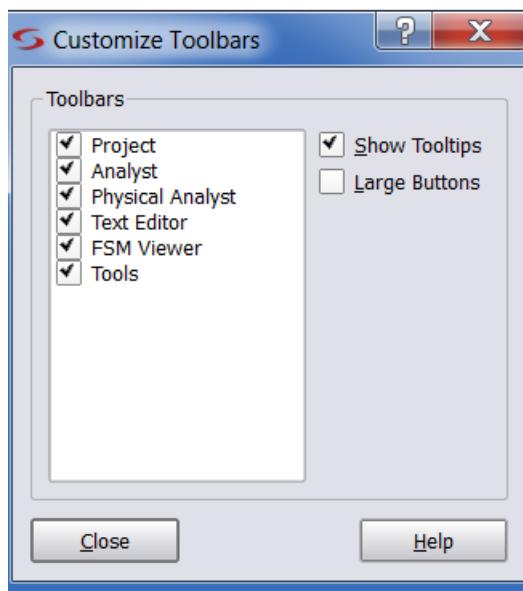

Feature	Description
Toolbars	Lists the available toolbars. Select the toolbars that you want to display.
Show Tooltips	When selected, a descriptive tooltip appears whenever you position the pointer over an icon.
Large Buttons	When selected, large icons are used.

View Sheets Command

Select View->View Sheets to display the Goto Sheet dialog box and select a sheet to display. The Goto Sheet dialog box is only available in an RTL or Technology view, and only when a multiple-sheet design is present.

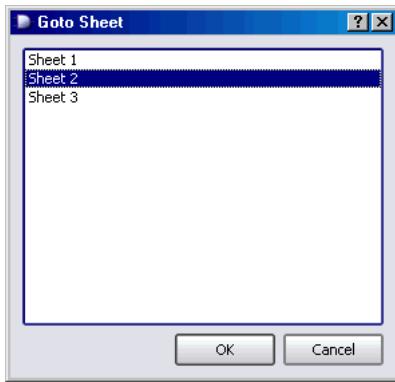

To see if your design has multiple sheets, check the sheet count display at the top of the schematic window.

View Log File Command

View->View Log File displays the log file report for your project. The log file is available in either text (*project_name.srr*) or HTML (*project_name_srr.htm*) format. To enable or disable the HTML file format for the log file, select the View log file in HTML option in the Options->Project View Options dialog box.

When opening the log file, a table of contents appears. Selecting an item from the table of contents takes you to the corresponding HTML page. To go back, right-click on the HTML page and select Back from the menu.

The screenshot shows a window titled "Report: example (rev_1)". On the left is a tree view of the log file structure:

- Synthesis
 - Compiler Report
 - Pre-mapping Report
 - Mapper Report
 - Backannotation Report ...
- Place and Route
- Session Log (08:39 28-Nov)

Below the tree view is a large text pane displaying the log file content. The text includes build information, implementation details, and compiler logs for Synopsys HDL Compiler and VHDL Compiler. The log file ends with a warning about time resolution.

```
#Build: Synplify Pro
#install: Z:\nt\syn201303_091R
#OS: Windows 7 6.1
#Hostname: 8200

#Implementation: rev_1


$ Start of Compile
#Wed Nov 28 08:48:06 2012

Synopsys HDL Compiler, version compdevb, Build 2820R, built Nov 27 2012
@N: : | Running in 64-bit mode
Copyright (C) 1994-2012 Synopsys, Inc. This software the associated docume


Synopsys VHDL Compiler, version compdevb, Build 2820R, built Nov 27 2012
@N: : | Running in 64-bit mode
Copyright (C) 1994-2012 Synopsys, Inc. This software the associated docume

@N:CD720 : std.vhd(123) | Setting time resolution to ns
@N: : ins_rom.vhd(131) | Top entity is set to INS ROM.
```


You can use the search field to find an item in the table of contents. Enter all or part of the header name in the search field, then click Find. The log file displays the resulting section.

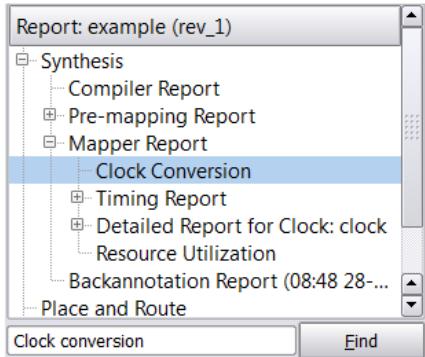

Find searches within collapsed tables. It expands the tables to show your results.

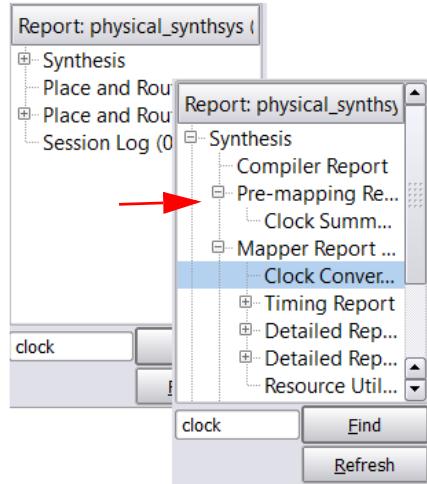

If the file changes while the search window is open, click the Refresh button to update the table of contents.

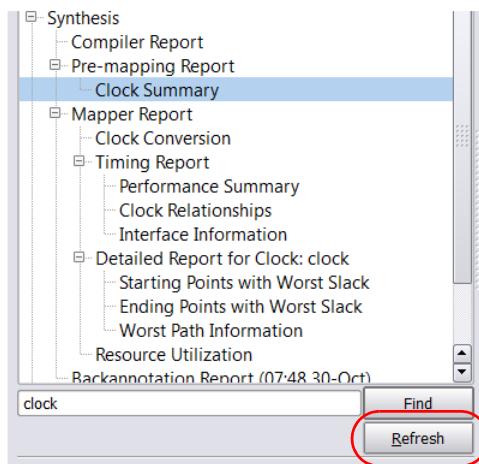

Project Menu

You use the Project menu to set implementation options, add or remove files from a project, change project filenames, create new implementations, and archive or copy the project. The Project menu commands change, depending on the view you are in. For example, the HDL Analyst RTL and Technology views only include a subset of the Project menu commands.

The tool provides a graphical user interface (GUI) with views that help you manage hierarchical designs that can be synthesized independently and imported back to the top-level project in a team design flow called Hierarchical Project Management. For details about using the team design flow, see [Hierarchical Project Management Flows, on page 32](#).


The following table describes the Project menu commands.

Command	Description
Implementation Options	Displays the Implementation Options dialog box, where you set options for implementing your design. See Implementation Options Command, on page 364 .
Add Source File	Displays the Select Files to Add to Project dialog box. See Add Source File Command, on page 350 . Tcl equivalent: add_file -fileType filename
Remove Implementation	Displays the Remove Implementation dialog box that allows you to remove the selected implementation. See Remove Implementation, on page 351 . Tcl equivalent: impl -remove implementationName
Remove File From Project	Removes selected files from your project. Tcl equivalent: project_file -remove filename
Change File	Replaces the selected file in your project with another that you choose. See Change File Command, on page 352 . Tcl equivalent: project_file -name "originalFile" "newFile"
Set VHDL Library	Displays the File Options dialog box, where you choose the library (Library Name) for synthesizing VHDL files. The default library is called work. See Set VHDL Library Command, on page 352 .

Command	Description
Add Implementation	<p>Creates a new implementation for a current design. Each implementation pertains to the same design, but it can have different options settings and/or constraints for synthesis runs. See Add Implementation Command, on page 353.</p> <p>Tcl equivalent: <code>impl -add implementation_1 implementation -type implementationType</code></p>
New Identify Implementation	<p>Creates a new Identify implementation for a current design.</p>
Convert Vendor Constraints	<p>Not applicable for Lattice technologies.</p>
Archive Project	<p>Archives a design project. Use this command to archive a full or partial project, or to add files to or remove files from an archived project. See Archive Project Command, on page 353 for a description of the utility wizard options.</p>
Un-Archive Project	<p>Loads an archived project file to the specified directory. See Un-Archive Project Command, on page 356 for a description of the utility wizard options.</p>
Copy Project	<p>Creates a copy of a full or partial design project. See Copy Project Command, on page 358 for a description of the utility wizard options.</p>
Hierarchical Project Options	<p>Configures how to run synthesis for a subproject or top-level project. See Hierarchical Project Options Command, on page 361.</p>
Add SubProject Implementation	<p>Adds new implementations to the blocks in the top-level project. This command is only available when the top-level implementation is selected in the Project Files view. See Working with Multiple Implementations in Hierarchical Projects, on page 120.</p>

Add Source File Command

Select Project->Add Source File to add files, such as HDL source files, to your project. This selection displays the Select Files to Add to Project dialog box.

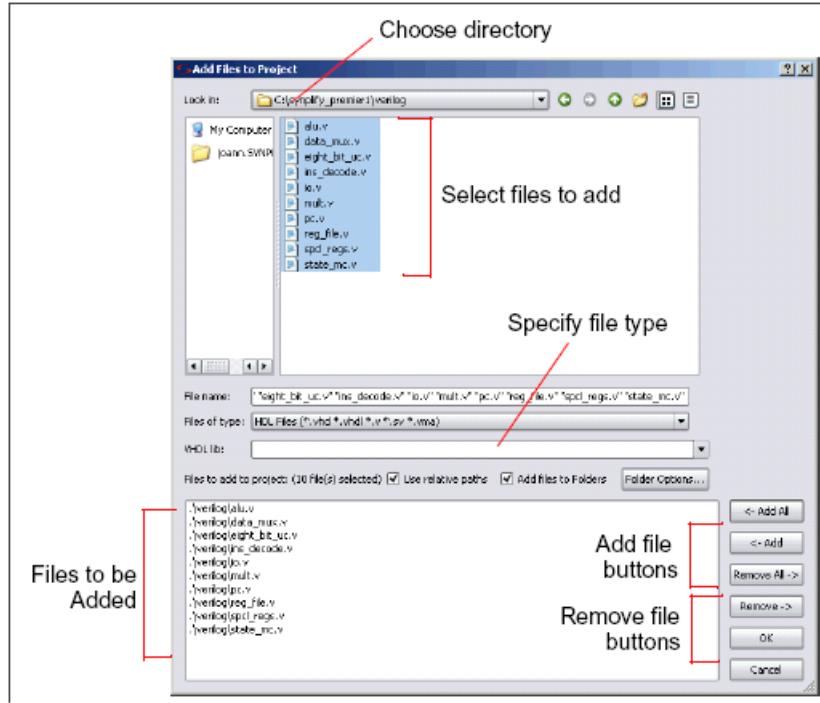

Feature	Description
Look in	The directory of the file to add. You can use the pull-down directory list or the Up One Level button to choose the directory.
File name	The name of a file to add to the project. If you enter a name using the keyboard, then you must include the file-type extension.
Files of type	The type (extension) of files to be added to the project. Only files in the active directory that match the file type selected from the drop-down menu are displayed in the list of files. Use All Files to list all files in the directory.


Feature	Description
Files To Add To Project	The files to add to the project. You add files to this list with the <-Add and <-Add All buttons. You remove files from this list with the Remove -> and Remove All -> buttons. For information about adding files to custom folders, see Creating Custom Folders, on page 80 . Tcl equivalent: <code>add_file -type filename</code>
Use relative paths	When you add files to the project, you can specify either to use the relative path or full path names for the files.
Add files to Folders	When you add files to the project, you can specify whether or not to automatically add the files to folders. See the Folder Options described below.
Folder Options	When you add files to folders, you can specify the folder name as either: <ul style="list-style-type: none"> • Operating System (OS) folder name • Parent path name from a list provided in the display

Remove Implementation

Displays the Remove Implementation dialog box that allows you to remove the selected implementation. You can select any of the following:


- Remove implementation only – Removes the implementation from the project only.
- Remove impl. and delete directory – Removes the implementation from the project and deletes the directory on the disk.
- No – Do no remove the implementation.

Choose the appropriate option shown in the dialog box below.

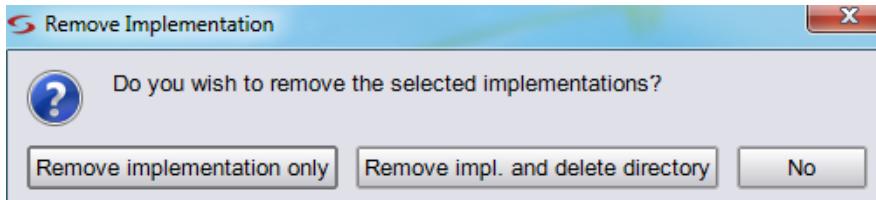

Change File Command

Select Project->Change File to replace a file in the project files list with another of the same type. This displays the Source File dialog box, where you specify the replacement file. You must first select the file to replace, in the Project view, before you can use this command.

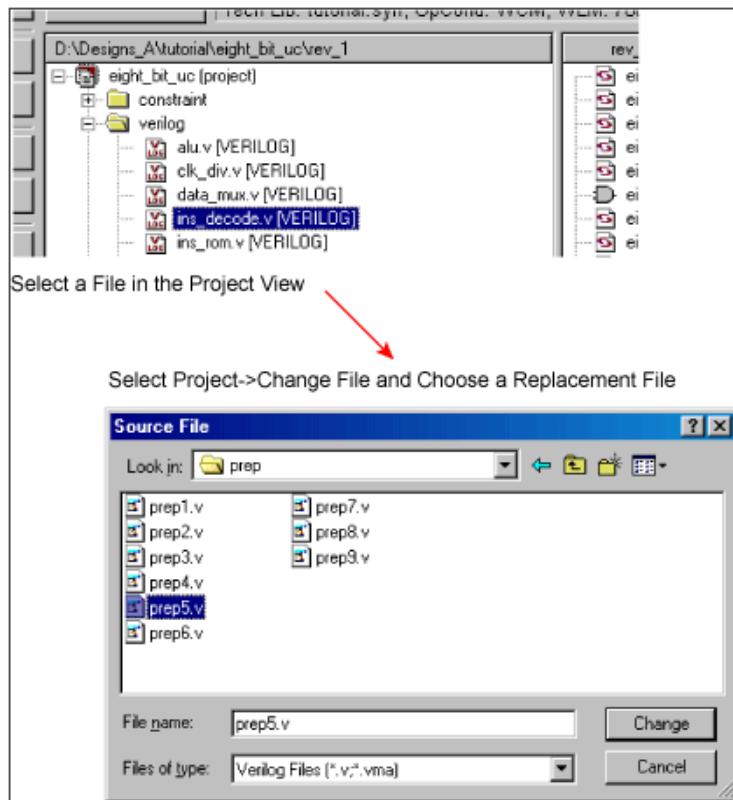

Set VHDL Library Command

Select Project->Set VHDL Library to display the File Options dialog box, where you view VHDL file properties and specify the VHDL library name. See [File Options Popup Menu Command, on page 510](#). This is the same dialog box as that displayed by right-clicking a VHDL filename in the Project view and choosing File Options.

Add Implementation Command

Select Project->Add Implementation to create a new implementation for the selected project. This selection displays the Implementation Options dialog box, where you define the implementation options for the project – see [Implementation Options Command, on page 364](#). This is the same dialog box as that displayed by Project->Implementation Options, except that there is no list of implementations to the right of the tabbed panels.


Convert Vendor Constraints Command

The Project->Convert Vendor Constraints option is not available for Lattice technologies.

Archive Project Command

Use the Project->Archive Project command to store files for a design project into a single archive file in Synopsys Proprietary Format (sar). You can archive an entire project or selected files from the project.

The Archive Project command displays the Synopsys Archive Utility wizard consisting of either two (all files archived) or three (custom file selection) tabs.

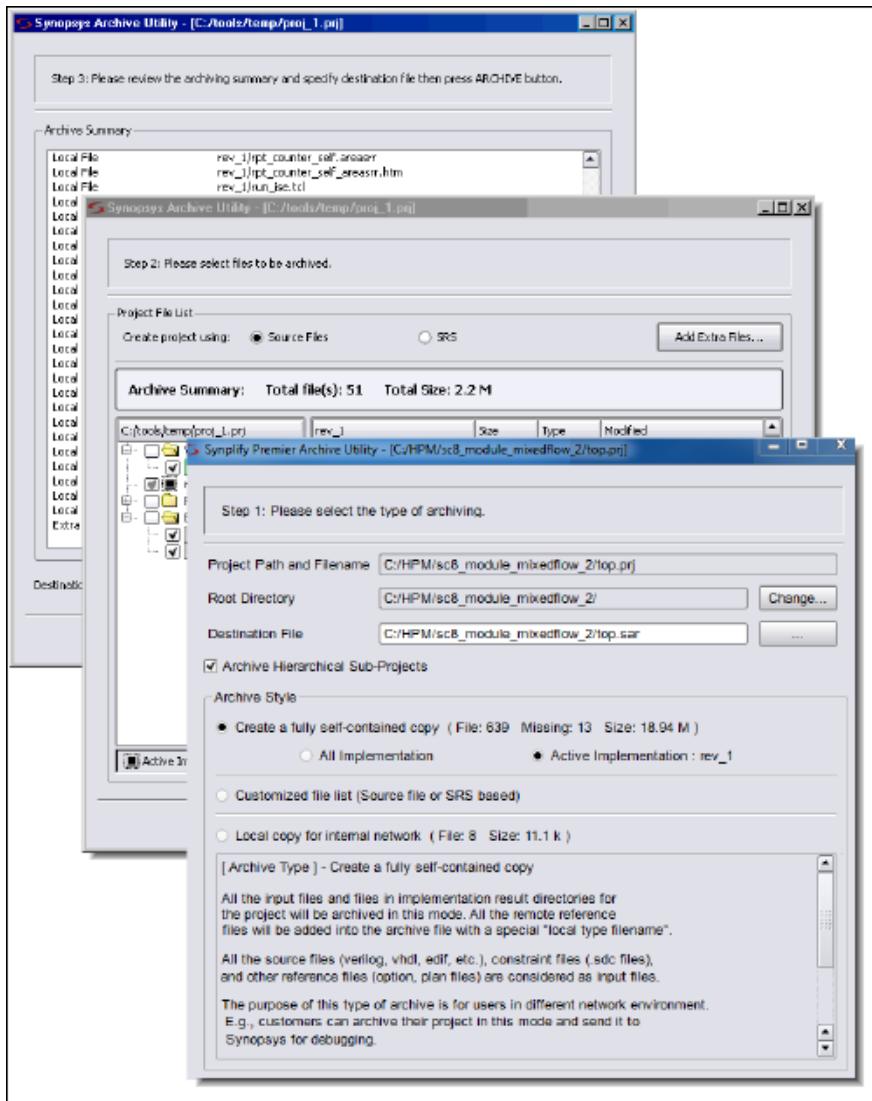


Option	Description
Project Path and Filename	Path and filename of the .prj file.
Root Directory	Top-level directory that contains the project files.
Destination Directory	Pathname of the directory to store the archive .sar file.
Archive Style	<p>The type of archive:</p> <ul style="list-style-type: none"> • Create a fully self-contained copy – all project files are archived; includes project input files and result files. • If the project contains more than one implementation: <ul style="list-style-type: none"> - All Implementation includes all implementations in the project. - Active Implementation includes only the active implementation. • Customized file list – only project files that you select are included in the archive. • Local copy for internal network – only project input files are archived, no result files will be included.
Create Project using	<p>If you select the Customized file list option in the wizard, you can choose one the following options on the second tab:</p> <ul style="list-style-type: none"> • Source Files - Includes all design files in the archive. You cannot enable the SRS option if this option is enabled. • SRS - Includes all .srs files (RTL schematics) in the archive. You cannot enable the Source Files option when this option is enabled.
Add Extra Files	<p>If you select the Customized file list option in the wizard, you can use this button on the second tab to add additional files to the archive.</p>

For step-by-step details on how to use the archive utility, see [Archive Project Command, on page 353](#).

Un-Archive Project Command

Use the Project->Un-Archive Project command to extract the files from an archived design project.

This command displays a Synplify Un-Archive Utility wizard.

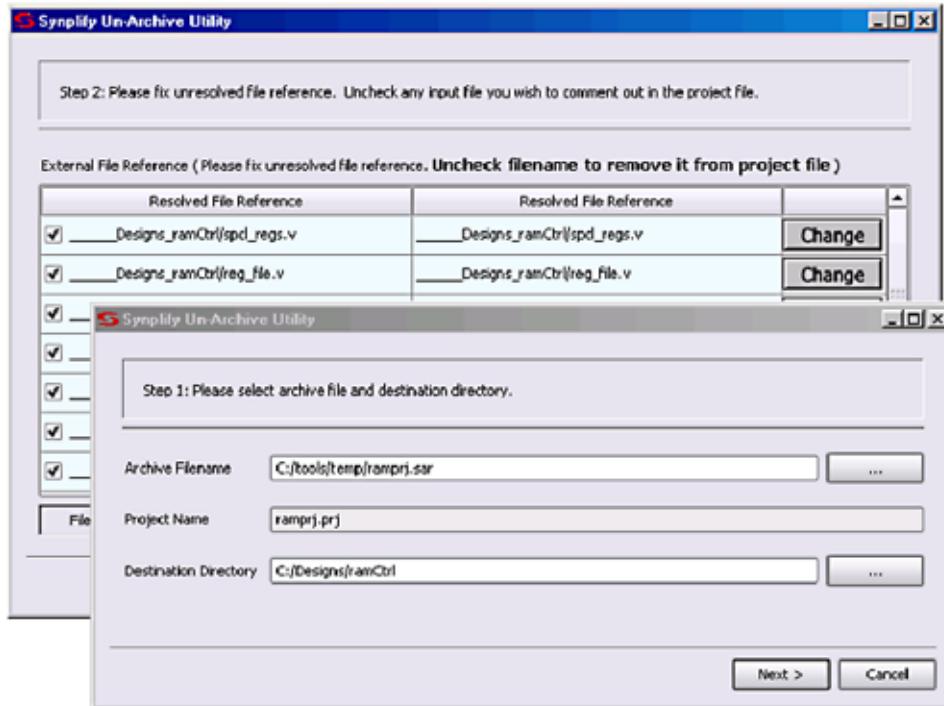


Option	Description
Archive Filename	Path and filename of the .prj file.

Option	Description
Project Name	Top-level directory that contains the project files.
Destination Directory	Pathname of the directory to store the archive .sar file.
Original File Reference/ Resolved File Reference	<p>Displays the files in the archive that will be extracted. You can exclude files from the .sar by unchecking the file in the Original File Reference list. Any unchecked files are commented out in the .prj file.</p> <p>If there are unresolved reference files in the .sar file, you must fix (Resolve button) or uncheck them. Or, if there are files that you want to change when project files are extracted, use the Change button and select files, as appropriate. See Resolve File Reference, next for more details.</p>

For step-by-step details on how to use the un-archive utility, see [Un-Archive Project Command, on page 356](#).

Resolve File Reference

When you use the Un-Archive Utility wizard to extract a project, if there are unresolved file references, use the Resolve button next to the file to point to a new file location. You can also optionally replace project files in the destination directory by clicking the Change button next to the file you want to replace. The Change and Resolve buttons bring up the following dialog box:

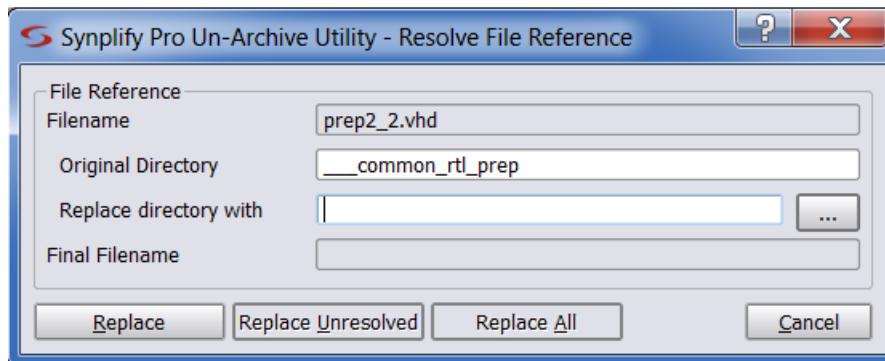


Option	Description
Filename	Specifies the path and name of the file you want to change or resolve.
Original Directory	Specifies the location of the project at the time it was archived.
Replace directory with	Specifies the new location of the project files you want to use to replace files.
Final Filename	Specifies the path name of the directory and the file name of the replace file.
Replace buttons	<ul style="list-style-type: none">• Replace - replaces only the file specified in the Filename field when the project is extracted.• Replace Unresolved - replaces any unresolved files in the project, with files of the same name from the Replace directory.• Replace All - replaces all files in the archived project with files of the same name from the Replace directory.• To undo any replace-file references, clear the Replace directory with field, then click Replace. This causes the utility to point back to the Original Directory and filenames.

Copy Project Command

Use the Project->Copy Project command to create a copy of a design project. You can copy an entire project or selected files from the project.

The Copy Project command displays the Synopsys Copy Utility wizard consisting of either two (all files copied) or three (custom file selection) tabs.

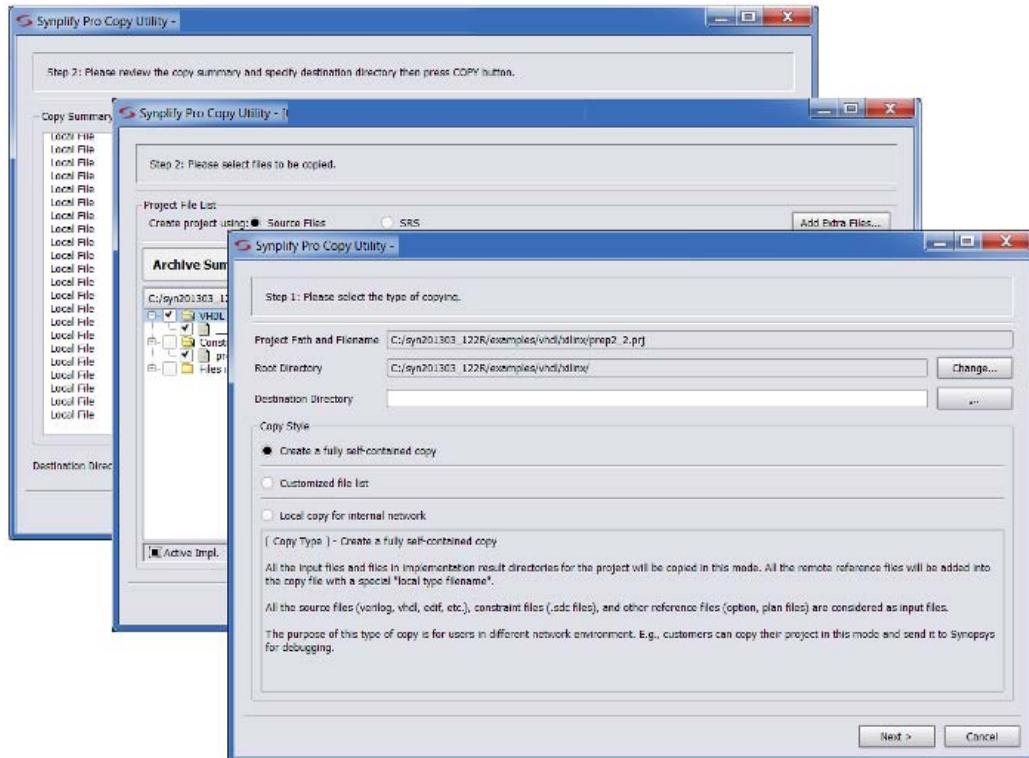


Option	Description
Project Path and Filename	Path and filename of the .prj file.
Root Directory	Top-level directory that contains the project files.
Destination Directory	Pathname of the directory to store the archive .sar file.

Option	Description
Copy Style	<p>The type of archive:</p> <ul style="list-style-type: none">• Create a fully self-contained copy - all project files are archived; includes project input files and result files.• If the project contains more than one implementation:<ul style="list-style-type: none">- All Implementation includes all implementations in the project.- Active Implementation includes only the active implementation.• Customized file list – only project files that you select are included in the archive.• Local copy for internal network – only project input files are archived, no result files will be included.
Create Project using	<p>If you select the Customized file list option in the wizard, you can choose one the following options on the second tab:</p> <ul style="list-style-type: none">• Source Files - Includes all design files in the archive. You cannot enable the SRS option if this option is enabled.• SRS - Includes all .srs files (RTL schematics) in the archive. You cannot enable the Source Files option if this option is enabled.
Add Extra Files	<p>If you select the Customized file list option in the wizard, you can use this button on the second tab to add additional files to the archive.</p>

For step-by-step details on how to use the copy utility, see [Copy Project Command, on page 358](#).

Hierarchical Project Options Command

Use this command to configure synthesis runs for a subproject or top-level project when you are working with hierarchical designs. You can determine which subprojects to run, how to run each project (top-down or bottom-up), and synchronize options across all implementations. Most of the default implementation options displayed in this dialog box are automatically filled in for the target device you specify for synthesis. For more information about using this command, see [Configuring Synthesis Runs for Hierarchical Projects, on page 124](#).

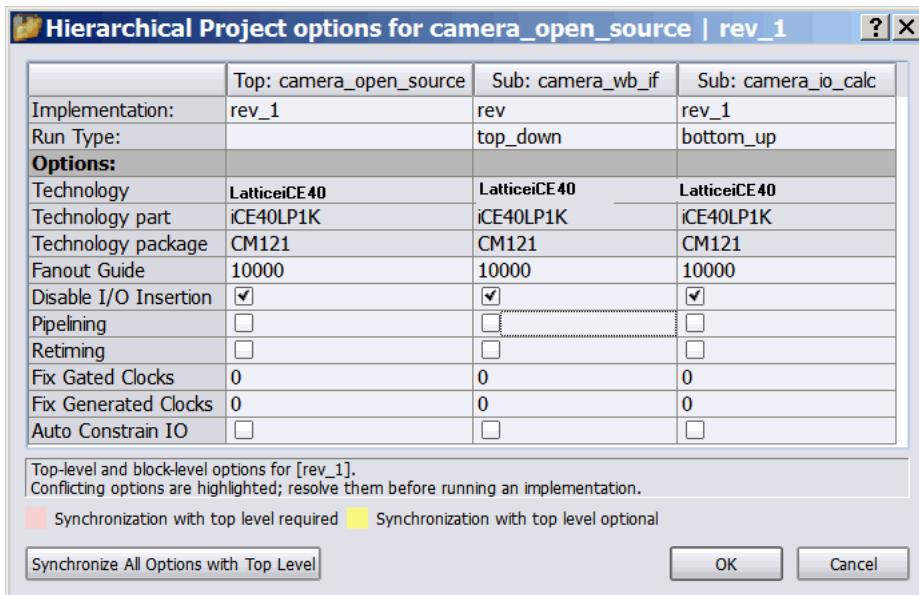


The following table describes the Run Configuration options for the top-level project and its subprojects.

Edit Run Configuration Command	Description
Implementation	Selects the implementation, such as rev_1, to synthesize for the subproject. If you do not want to run synthesis, choose <off> from the pull-down menu.
Run Type	You can choose the following run types: <ul style="list-style-type: none">• top_down - the subproject .srs files are imported back to the top-level project for final assembly.• bottom_up - design block .srd/.edif files for the subproject are imported back to the top-level project for final assembly. This is the default.
Options	Most default options are automatically filled in with the target device you specify for synthesis from the Device tab of the Implementation Options panel.
Synchronize All Options with Top Level	Synchronizes device options for the top-level project and subprojects so that they all match the top-level project. When you create subprojects, the top-level and block-level device option settings can vary. Running the design with conflicting options can cause errors during synthesis. The software highlights options where there is a mismatch between the top-level and subproject settings. Pink highlighting indicates a mismatch that must be synchronized and yellow highlighting indicates that synchronization with the top level is optional. Resolve conflicting options before synthesizing the design. See Configuring Synthesis Runs for Hierarchical Projects, on page 124 for details.


Insert Subproject Command

This command lets you nest subprojects within a subproject hierarchy. To do this, right-click on a subproject and select Insert SubProject from the popup menu. You can add an existing project or a new project from the Insert Project dialog box. Then, begin adding design files to your subproject after you have created the new project.

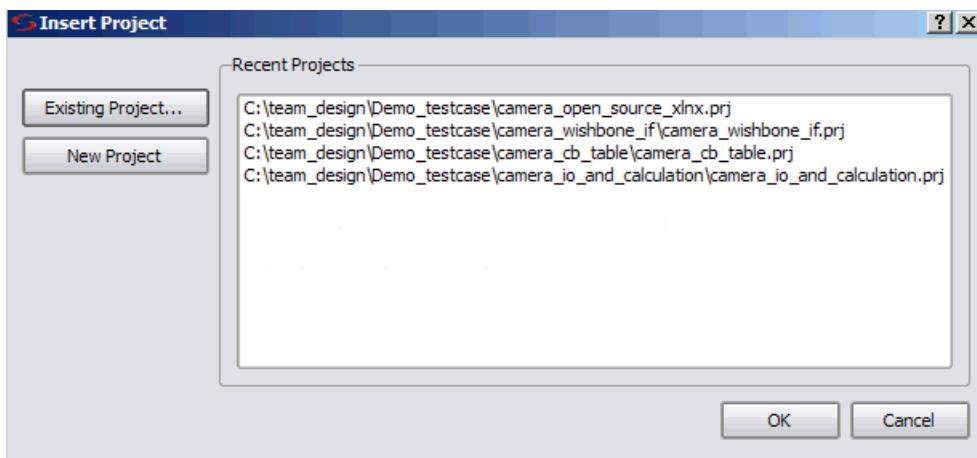

Implementation Options Command

You use the Implementation Options dialog box to define the implementation options for the current project. You can access this dialog box from Project->Implementation Options, by clicking the button in the Project view, or by clicking the text in the Project view that lists the current technology options.

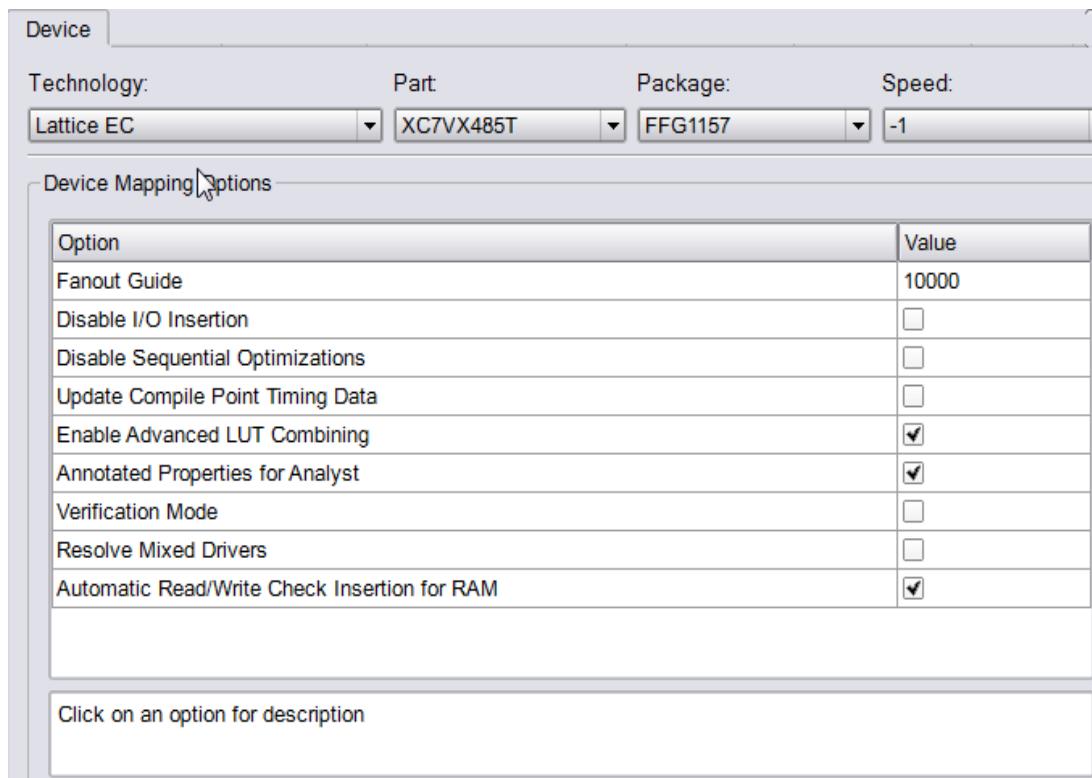


This section describes the following:

- [Device Panel, on page 365](#). For device-specific details of the options, refer to the appropriate vendor chapter.
- [Options Panel, on page 366](#)
- [Constraints Panel, on page 368](#)
- [Implementation Results Panel, on page 370](#)

- [Timing Report Panel, on page 371](#)
- [High Reliability Panel, on page 373](#)
- [VHDL Panel, on page 374](#)
- [Verilog Panel, on page 378](#)
- [GCC Panel, on page 393](#)
- [Place and Route Panel, on page 393](#)

Device Panel

You use the Device panel to set mapping options for the selected technology.

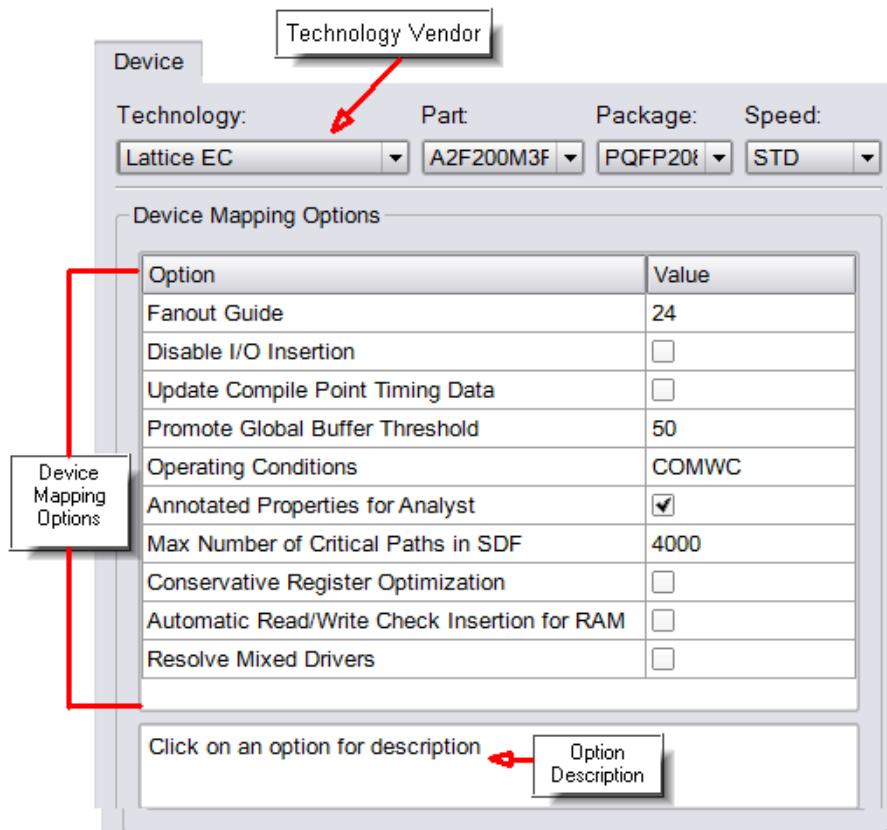


The mapping options vary, depending on the technology. See [Setting Device Options, on page 88](#) for a procedure, and the relevant vendor sections in this reference manual for technology-specific descriptions of the options.

The table below lists the following category of options. Not all options are available for all tools and technologies.

Option	Description
Technology Vendor	Specify the device technology you want to synthesize. You can also select the part, package, and speed grade to use. For more information, see the appropriate vendor appendix in the <i>Reference</i> manual.
Device Mapping Options	The device mapping options vary depending on the device technology you select. For more information, see the appropriate vendor appendix in the <i>Reference</i> manual.
Option Description	Click on a device mapping option to display its description in this field. Refer to the relevant vendor sections for technology-specific descriptions of the options.

Options Panel

You use the Options panel of the Implementation Options dialog box to define general options for synthesis optimization. See [Setting Optimization Options, on page 90](#) for details.

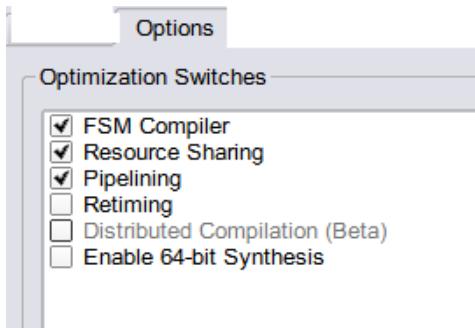


The following table lists the options alphabetically. Not all options are available for all tools and technologies.

Option	Description
Enable 64-bit Synthesis	<p>Enables/disables the 64-bit mapping switch. When enabled, this switch allows you to run client programs in 64-bit mode, if available on your system.</p> <p>This option is supported on the Windows and Linux platforms.</p> <p>Tcl equivalent: set_option -enable64bit 0 1</p>
FSM Compiler	<p>Determines whether the FSM Compiler is run. See FSM Compiler, on page 62 and Optimizing State Machines, on page 457.</p> <p>Tcl equivalent: set_option -symbolic_fsm_compiler 0 1</p>
Pipelining	<p>Runs designs at a faster frequency by moving registers after the multiplier or ROM into the multiplier or ROM. See Pipelining, on page 434.</p> <p>Tcl equivalent: set_option -pipe 0 1</p>
Resource Sharing	<p>Determines whether you optimize area by sharing resources. When enabled, this optimization technique runs during the compilation stage of synthesis.</p> <p>Even if it is disabled, the mapper can still flatten the netlist and re-optimize adders, multipliers as needed to improve timing, because this setting does not affect the mapper. See Sharing Resources, on page 454 for information for how to use this option.</p> <p>Enabling this option generates the resource sharing report in the log file (see Resource Usage Report, on page 163).</p> <p>Tcl equivalent: set_option -resource_sharing 0 1</p>
Retiming	<p>Determines whether the tool moves storage devices across computational elements to improve timing performance in sequential circuits. Note that the tool might retime registers associated with RAMs, DSPs, and generated clocks, regardless of the Retiming setting. See Retiming, on page 438.</p> <p>Tcl equivalent: set_option -retiming 0 1</p>

Constraints Panel

You use the Constraints panel of the Implementation Options dialog box to specify target frequency and timing constraint files for design synthesis. Depending on the synthesis tool you are using and the device you specify, the types of constraint files you can apply for the implementation may vary. See the table below for a complete list of option types you can apply.

See [Specifying Global Frequency and Constraint Files, on page 92](#), in the *User Guide* for details.

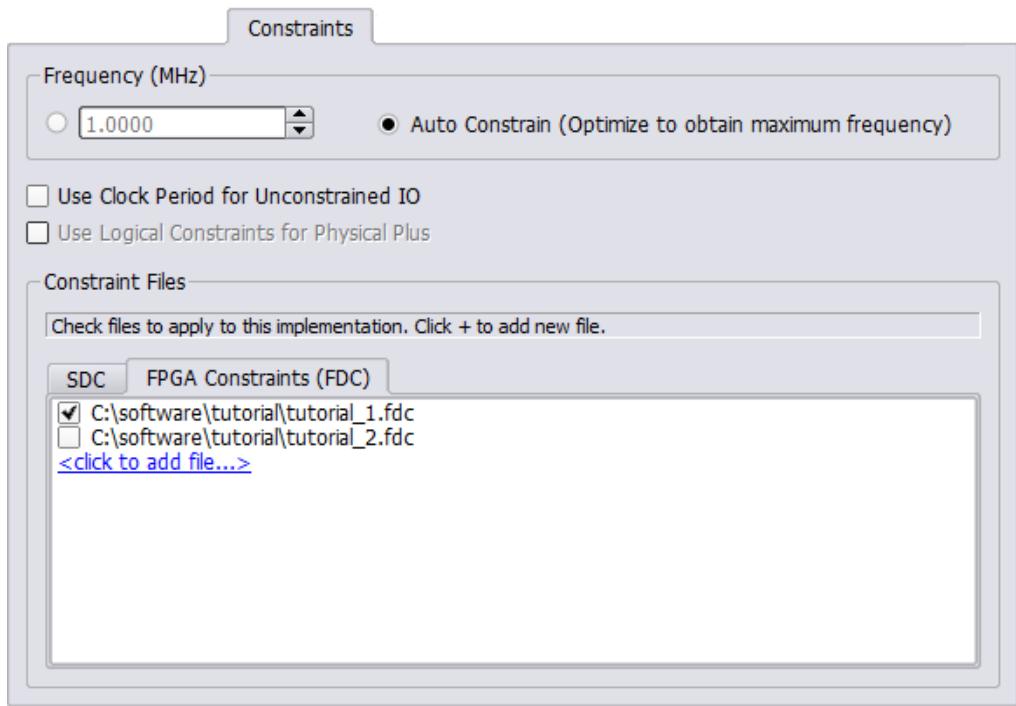

Option	Description
Frequency	Sets the default global frequency. You can either set the global frequency here or in the Project view. To override the default you set here, set individual clock constraints from the SCOPE interface. Tcl equivalent: set_option -frequency frequency


Option	Description
Auto Constrain	<p>When enabled and no clocks are defined, the software automatically constrains the design to achieve the best possible timing. It does this by reducing periods of each individual clock and the timing of any timed I/O paths in successive steps. See Using Auto Constraints, on page 393 in the <i>User Guide</i> for information about using this option.</p> <p>You can also set this option in the Project view.</p> <p>Tcl equivalent: set_option -frequency auto</p>
Use clock period for unconstrained IO	<p>Determines whether default constraints are used for I/O ports that do not have user-defined constraints.</p> <p>When disabled, only <code>define_input_delay</code> or <code>define_output_delay</code> constraints are considered during synthesis or forward-annotated after synthesis.</p> <p>When enabled, the software considers any explicit <code>define_input_delay</code> or <code>define_output_delay</code> constraints. In addition, for all ports without explicit constraints, it uses constraints based on the clock period of the attached registers. Both the explicit and implicit constraints are used for synthesis and forward-annotation. The default is off (disabled) for new designs.</p> <p>Tcl equivalent: set_option -auto_constraint_io 0 1</p>
Constraint Files SDC	<p>Specifies which timing constraints (SDC) files to use for the implementation. Select the check box to select a file.</p> <p>Block-level files in the compile-point flows, the Module column shows the name of the module or compile point.</p>
Constraint Files FDC	<p>Specifies which timing constraints (FDC) files to use for the implementation. Select the check box to select a file.</p> <p>Block-level files in the compile-point flows, the Module column shows the name of the module or compile point.</p>

Implementation Results Panel

You use the Implementation Results panel to specify the implementation name (default: rev_1), the results directory, and the name and format of the top-level output netlist file (Result File). You can also specify output constraint and netlist files. See [Specifying Result Options, on page 94](#) for details.

The results directory is a subdirectory of the project file directory. Clicking the Browse button brings up the Select Run Directory dialog box to allow you to browse for the results directory. You can change the location of the results directory, but its name must be identical to the implementation name.


Select optional output file check boxes to generate the corresponding Verilog netlist, VHDL netlist, or vendor constraint files.

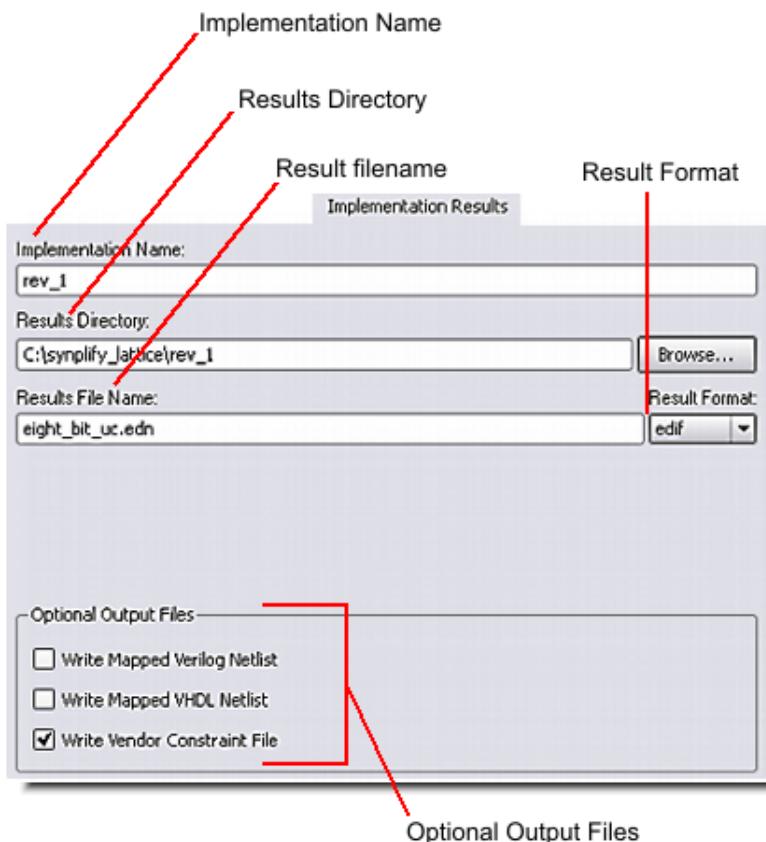

Option	Description
Implementation Name	Displays implementation name, directory path for results, and the base name for the result files.
Results Directory	Tcl equivalent: set_option -result_file pathToFile
Result Base Name	
Result Format	Select the output that corresponds to the technology you are using. See Generating Vendor-Specific Output, on page 645 for a list of netlist formats. Tcl equivalent: set_option -result_format format
Write Mapped Verilog Netlist	Generates mapped Verilog or VHDL netlist files. Tcl equivalent: set_option -write_verilog 0 1
Write Mapped VHDL Netlist	Tcl equivalent: set_option -write_vhdl 0 1
Write Vendor Constraint File	Generates a vendor-specific constraint file for forward annotation. Tcl equivalent: set_option -write_apr_constraint 0 1

Timing Report Panel

Use the Timing Report panel (Implementation Options dialog box) to set criteria for the (default) output timing report. Specify the number of critical paths and the number of start and end points to appear in the timing report. See [Specifying Timing Report Output, on page 96](#) for details. For a description of the report, see [Timing Reports, on page 165](#).

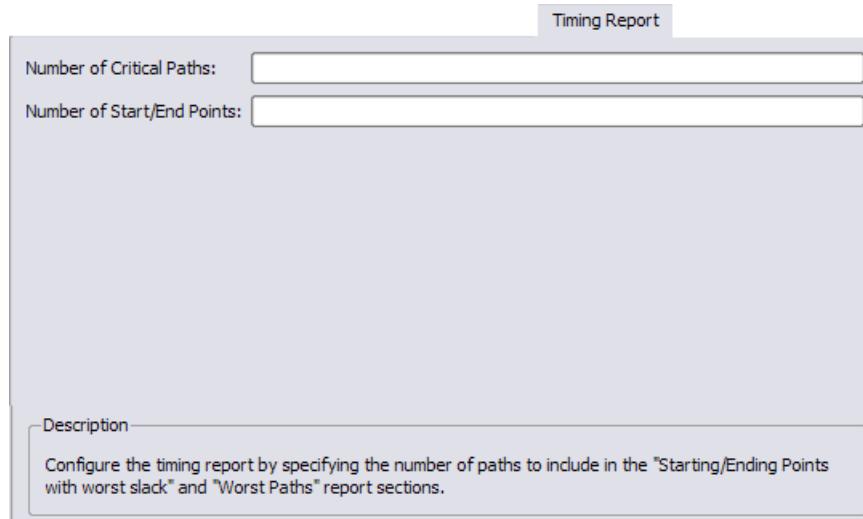

Option	Description
Number of Critical Paths	Set the number of critical paths for the software to report. Tcl equivalent: set_option -num_critical_paths numberOfRowsPaths
Number of Start/End Points	Specify the number of start and end points to see reported in the critical path sections. Tcl equivalent: set_option -num_startend_points numberOfRowsPoints

See also:

- [Timing Reports, on page 165](#), for more information on the default timing report, which is affected by the Timing Report panel settings.
- [Analysis Menu, on page 440](#), information on creating additional custom timing reports for certain device technologies.

High Reliability Panel


Use the High Reliability panel (Implementation Options dialog box) to implement safe logic for the design.



Option	Description
Preserve and Decode Unreachable States (FSM, Counters, Sequential Logic)	<p>When enabled, this option turns off sequential optimizations on all counters, FSMs, and sequential logic, to increase the reliability of the circuit.</p> <p>If you do not want to implement this globally, use the <code>syn_safe_case</code> directive (syn_safe_case, on page 231) on individual FSMs.</p> <p>Tcl equivalent: <code>set_option -safe_case 0 1</code></p>

VHDL Panel

You use the VHDL panel in the Implementation Options dialog box to specify various language-related options. With mixed HDL designs, the VHDL and Verilog panels are both available. See [Setting Verilog and VHDL Options, on page 96](#) for details.

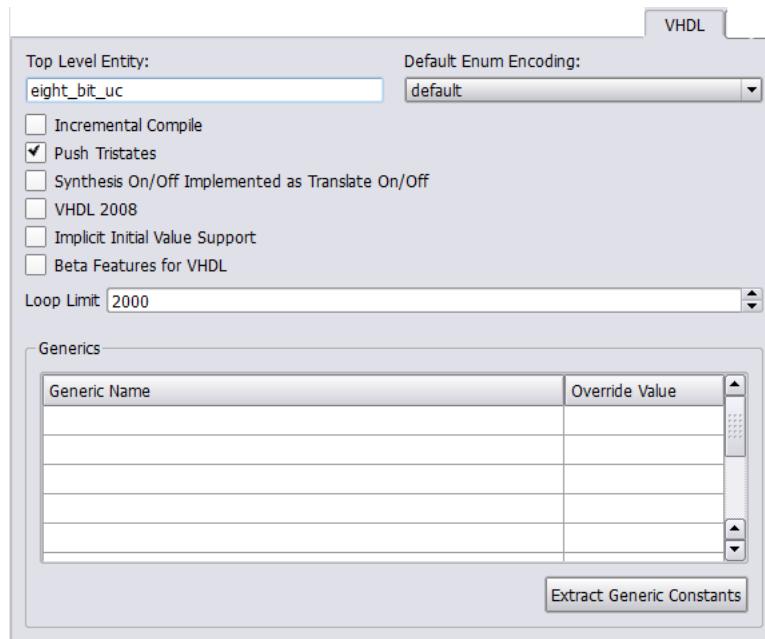

The following table describes the options available.

Feature	Description
Top Level Entity	<p>The name of the top-level entity of your design. If the top-level entity does not use the default work library to compile the VHDL files, you must specify the library file where the top-level entity can be found. To do this, the top-level entity name must be preceded by the VHDL library followed by a period (.). To specify VHDL library files, see Project Menu, on page 348 for the Set VHDL Library command, or the File Options Popup Menu Command, on page 510.</p> <p>Tcl equivalent: set_option -top_module topLevelName</p>
Default Enum Encoding	<p>The default enumeration encoding to use. This is only for enumerated types; the FSM compiler automatically determines the state-machine encoding, or you can specify the encoding using the <code>syn_encoding</code> attribute.</p> <p>Tcl equivalent: set_option -default_enum_encoding encodingType</p> <p>Note: Enable FSM Compiler before attempting to change the encoding style.</p>
Push Tristates	<p>When enabled (default), tristates are pushed across process/block boundaries. For more information, see GCC Panel, on page 393.</p> <p>Tcl equivalent: set_option -compiler_compatible 0 1</p>
Synthesis On/Off Implemented as Translate On/Off	<p>When enabled, the software ignores any VHDL code between <code>synthesis_on</code> and <code>synthesis_off</code> directives. It treats these third-party directives like <code>translate_on/translate_off</code> directives (see translate_off/translate_on, on page 306 for details).</p> <p>Tcl equivalent: set_option -synthesis_onoff_pragma 0 1</p>
VHDL 2008	<p>When enabled, allows you to use VHDL 2008 language standards.</p> <p>Tcl equivalent: set_option -vhdl2008 0 1</p>
VHDL 2019	<p>When enabled, allows you to implement VHDL 2019 conditional analysis. See VHDL 2019 Conditional Analysis, on page 376.</p>


Feature	Description
Implicit Initial Value Support	<p>When enabled, the compiler passes init values through a <code>syn_init</code> property to the mapper. For more information, see VHDL Implicit Data-type Defaults, on page 345.</p> <p>Tcl equivalent: <code>set_option -supporttypedfit 0 1</code></p>
Beta Features for VHDL	<p>Enables use of any VHDL beta features included in the release. Enabling this checkbox is equivalent to including a <code>set_option -hdl_define -set _BETA_FEATURES_ON_</code> directive in the project file.</p> <p>Tcl equivalent: <code>set_option -beta_vhfeatures 0 1</code></p>
Loop Limit	<p>Overrides the default compiler loop limit value of 2000 in the RTL and sets a new global default. You can apply limits on a per-loop basis using the Verilog <code>loop_limit</code> or the VHDL <code>syn_looplimit</code> directive for individual loops.</p> <p>For details about these directives, see loop_limit, on page 28 and syn_looplimit, on page 133 in the <i>Attribute Reference</i>.</p> <p>Tcl equivalent: <code>set_option -looplimit loopLimitValue</code></p>
Generics	<p>Shows generics extracted with Extract Generic Constants. You can override the default and set a new value for the generic constant. The value is valid for the current implementation.</p>
Extract Generic Constants	<p>Extracts generics from the top-level entity and displays them in the table.</p>

VHDL 2019 Conditional Analysis

This section describes how to implement VHDL 2019 conditional analysis identifiers and values:

1. Open the Implementation Options dialog box and select the VHDL tab.
2. Click the VHDL 2019 option to specify VHDL analysis.
3. Add a file, `condparams.dat`, into the `synwork` folder of your implementation directory. The file should have one identifier name and one string value pair, per line of the file.

For example:

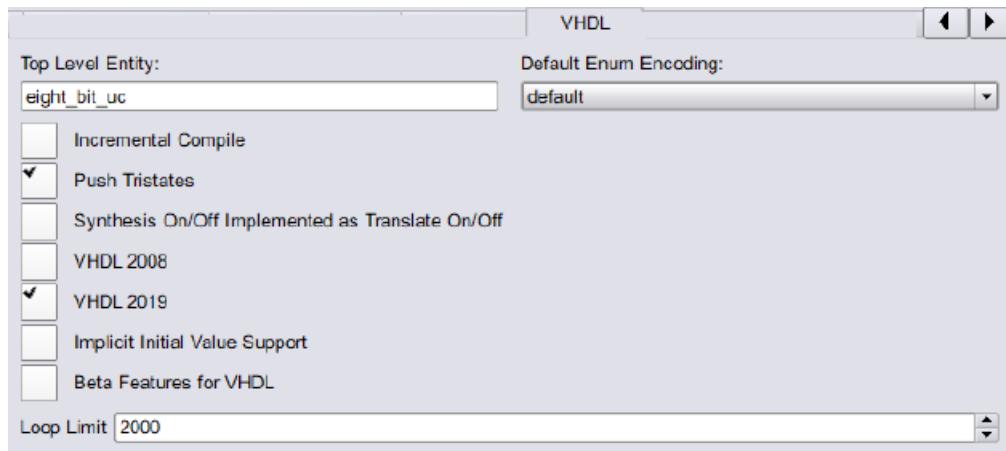

```
VHDL_VERSION "2019"  
TOOL_TYPE "SYNTHESIS"  
DEBUG_LEVEL "2"
```


The VHDL 2019 LRM includes predefined identifiers with their default values:

```
VHDL_VERSION "2019"  
TOOL_TYPE "SYNTHESIS"  
TOOL_VENDOR "SYNOPSYS"  
TOOL_NAME "FPGA_COMPILER"  
TOOL_EDITION "SYNPLIFY"  
TOOL_VERSION "P-2019.03"
```

4. You can edit the `condparams.dat` file to override these defaults.

Verilog Panel

You use the Verilog panel in the Implementation Options dialog box to specify various language-related options. With mixed HDL designs, the VHDL and Verilog panels are both available. See [Setting Verilog and VHDL Options, on page 96](#) for details.

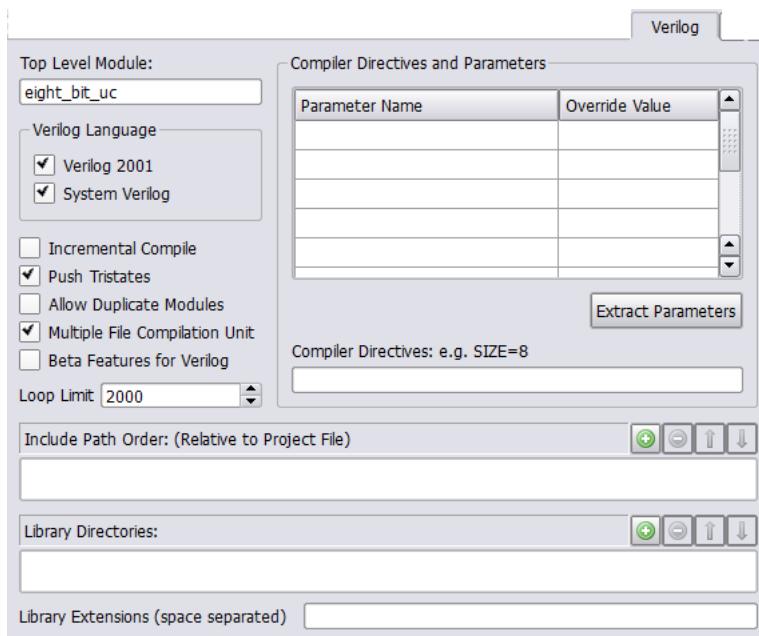

Feature	Description
Top Level Module	The name of the top-level module of your design. Tcl equivalent: set_option -top_module moduleName
Compiler Directives and Parameters	Shows design parameters extracted with Extract Parameters. You can override the default and set a new value for the parameter. The value is valid for the current implementation.
Extract Parameters	Extracts design parameters from the top-level module and displays them in the table. See Compiler Directives and Design Parameters, on page 383 .

Feature	Description
Compiler Directives	Provides an interface where you can enter compiler directives that you would normally enter in the code with 'ifdef and 'define statements. See Compiler Directives and Design Parameters, on page 383 .
Verilog Language – Verilog 2001	<p>When enabled, the default Verilog standard for the project is Verilog 2001. When both Verilog 2001 and SystemVerilog are disabled, the default standard is Verilog 95. For information about Verilog 2001, see Verilog 2001 Support, on page 31.</p> <p>You can override the default project standard on a per file basis by selecting the file, right-clicking, and selecting the File Options command (see File Options Popup Menu Command, on page 510).</p> <p>Tcl equivalent: <code>set_option -vlog_std v2001</code></p>
Verilog Language – SystemVerilog	<p>When enabled, the default Verilog standard for the project is SystemVerilog which is the default standard for all new projects. Enabling SystemVerilog automatically enables Verilog 2001.</p> <p>Tcl equivalent: <code>set_option -vlog_std sysv</code></p>
Push Tristates	<p>When enabled (default), tristates are pushed across process/block boundaries. For details, see GCC Panel, on page 393.</p> <p>Tcl equivalent: <code>set_option -compiler_compatible 0 1</code></p>
Allow Duplicate Modules	<p>Allows the use of duplicate modules in your design. When enabled, the last definition of the module is used by the software and any previous definitions are ignored. You should not use duplicate module names in your Verilog design, therefore this option is disabled by default. However, if you need to, you can allow for duplicate modules by enabling this option.</p> <p>Tcl equivalent: <code>set_option -dup 0 1</code></p>
Multiple File Compilation Unit	<p>When enabled (the default), the Verilog compiler uses the compilation unit for modules defined in multiple files. See SystemVerilog Compilation Units, on page 239 for additional information.</p> <p>Tcl equivalent: <code>set_option -multi_file_compilation_unit 0 1</code></p>

Feature	Description
Beta Features for Verilog	<p>Enables use of any Verilog beta features included in the release. Enabling this checkbox is equivalent to including a <code>set_option -hdl_define -set _BETA_FEATURES_ON_</code> directive in the project file.</p> <p>Tcl equivalent: <code>set_option -beta_vfeatures 0 1</code></p>
Loop Limit	<p>Overrides the default compiler loop limit value of 2000 in the RTL and sets a new global default. You can apply limits on a per-loop basis using the Verilog <code>loop_limit</code> or the VHDL <code>syn_looplimate</code> directive for individual loops.</p> <p>For details about these directives, see loop_limit, on page 28 and syn_looplimate, on page 133.</p> <p>Tcl equivalent: <code>set_option -looplimate loopLimitValue</code></p>
Include Path Order (Relative to Project File)	<p>Specifies the search paths for the <code>include</code> commands in the Verilog design files of your project. Use the buttons in the upper right corner of the box to add, delete, or reorder the paths. The include paths are relative. See Updating Verilog Include Paths in Older Project Files, on page 78 for additional information.</p>
Library Directories or Files	<p>Specifies all the paths to the directories which contain the Verilog library files to be included in your design for the project. You can also add custom library files with module definitions for the design in a single file. See Verilog Single Library File Support, on page 382. The names of files read from the library path must match module names. Mismatches result in error messages.</p> <p>Tcl equivalent:</p> <p><code>set_option -library_path . /libraryPath or /libraryFile</code></p>
Library Extensions (space separated)	<p>Adds library extensions to Verilog library files included in your design for the project and searches the directory paths you specified that contain these Verilog library files. To use library extensions, see Using Library Extensions for Verilog Library Files, on page 55.</p> <p>Tcl equivalent:</p> <p><code>set_option -libext .libextName1 .libextName1...</code></p> <p>Enter a space between each unique library extension.</p>


Push Tristates Option

Pushing tristates is a synthesis optimization option you set with Project->Implementation Options->Verilog or VHDL.


Description

When the Push Tristates option is enabled, the Synopsys FPGA compiler pushes tristates through objects such as muxes, registers, latches, buffers, nets, and tristate buffers, and propagates the high-impedance state. The high-impedance states are not pushed through combinational gates such as ANDs or ORs.

Push Tristates on: tristate is pushed through the flip-flop so that the result matches RTL simulation

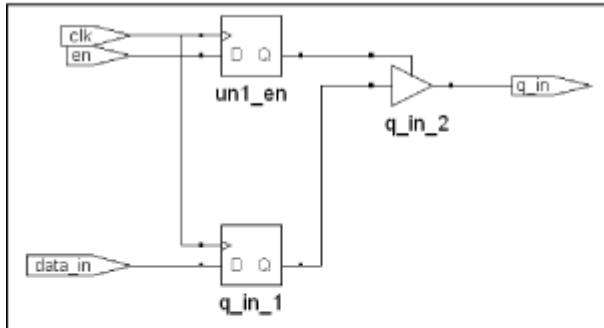

Push Tristates off: tristate is not pushed through the flip-flop

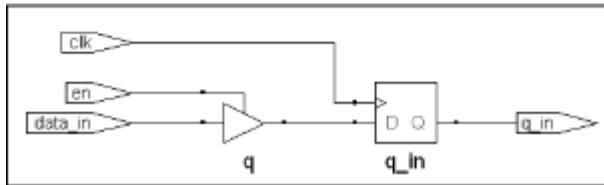

If there are multiple tristates, the software muxes them into one tristate and pushes it through. The software pushes tristates through loops and stores the high impedance across multiple cycles in the register.

Advantages and Disadvantages

The advantage to pushing tristates to the periphery of the design is that you get better timing results because the software uses tristate output buffers.

The Synopsys FPGA software approach to tristate inference matches the simulation approach. Simulation languages are defined to store and propagate 0, 1, and Z (high impedance) states. Like the simulation tools, the Synopsys FPGA synthesis tool propagates the high-impedance states instead of producing tristate drivers at the outputs of process (VHDL) or always (Verilog) blocks.

The disadvantage to pushing tristates is that you might use more design resources.


Effect on Other Synthesis Options

Tristate pushing has no effect on the `syn_tristatetomux` attribute. This is because tristate pushing is a compiler directive, while the `syn_tristatetomux` attribute is used during mapping.

Verilog Single Library File Support

You can add a single library file to your project for easier migration from a VCS environment and to ensure their behaviors are consistent for the design. To do this, either:

- Select the Add a file icon from the Verilog tab of the Implementation Options panel. Then, specify the library file to be added to the project from the Library Directories and Files option.
- Add the following Tcl command to your project file:

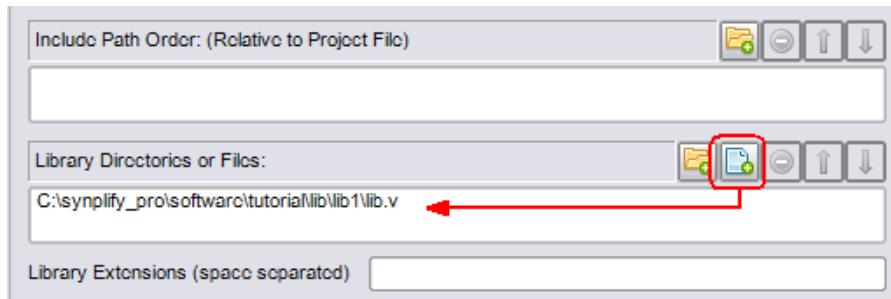


```
set_option -library_path {./libPath/libFile.v}
```

Compiler Directives and Design Parameters

When you click the Extract Parameters button in the Verilog panel (Implementation Options dialog box), parameter values from the top-level module are displayed in the table. You can also override the default by setting a new value for the parameter. The value is valid for the current implementation only.


The Compiler Directives field provides an interface where you can enter compiler directives that you would normally enter in the code using 'ifdef' and 'define' statements. Use spaces to separate the statements. The directives you enter are stored in the project file. For example, if you enter the directive shown below to the Compiler Directives field of the Verilog panel:

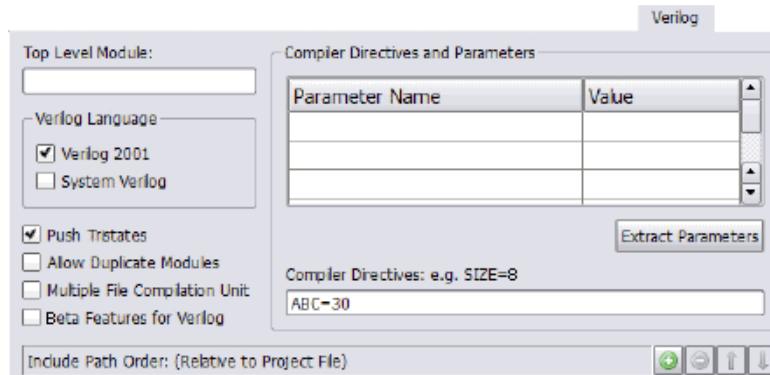

The software writes the following statement to the project file:

```
set_option -hdl_define -set "ABC=30"
```

To define multiple variables in the GUI, use a space delimiter. For example:

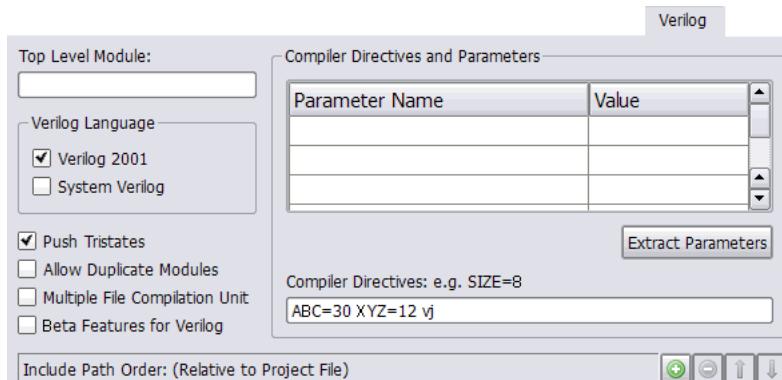

The software writes the following statement to the prj file:

```
set_option hdl_define -set "ABC=30 XYZ=12 vj"
```

More information is provided for the following Verilog compiler directives:


Directive	Description
<u>_ALLOWNESTEDBLOCKCOMMENTSTART_</u>	Allows for nested comment blocks.
<u>_BETA_FEATURES_ON_</u>	Explicitly enables beta HDL language features.
<u>IGNORE_VERILOG_BLACKBOX_GUTS</u>	Ignores the contents of a black box.
<u>_SEARCHFILENAMEONLY_</u>	Provides workaround for archive utility limitations.
<u>_SYN_COMPATIBLE_INCLUDEPATH_</u>	Specifies that the search path order for includes to be the same as the one used by the simulation tool (VCS).

IGNORE_VERILOG_BLACKBOX_GUTS

When you use the `syn_black_box` directive, the compiler parses the contents of the black box and can determine whether illegal syntax or incorrect code is defined within it. Whenever this occurs, an error message is generated. You can specify the `IGNORE_VERILOG_BLACKBOX_GUTS` compiler directive to ignore the contents of the black box. However, make sure that the black box is syntactically correct.

If you want the tool to ignore the contents of your black box, set the:

- Built-in compiler directive `IGNORE_VERILOG_BLACKBOX_GUTS` in the Compiler Directives field of the Verilog panel on the Implementation Options dialog box.

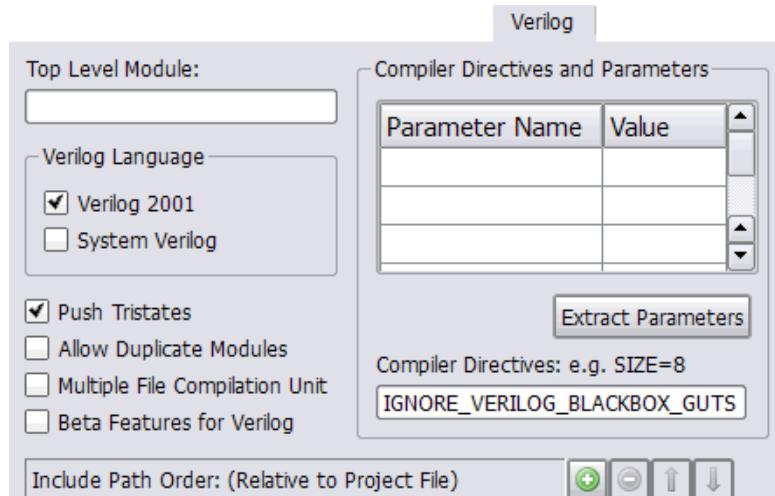

The software writes the following command to the project file:

```
set_option -hdl_define -set "IGNORE_VERILOG_BLACKBOX_GUTS"
```

- `define IGNORE_VERILOG_BLACKBOX_GUTS directive in the Verilog file.

This option is implemented globally for the project file.

Example of the IGNORE_VERILOG_BLACKBOX_GUTS Directive

Note that the IGNORE_VERILOG_BLACKBOX_GUTS directive ignores the contents of the black box. However, whenever you use this directive, you must first define the ports for the black box correctly. Otherwise, the IGNORE_VERILOG_BLACKBOX_GUTS directive generates an error. See the following valid Verilog example:

```
`define IGNORE_VERILOG_BLACKBOX_GUTS
module b1_fpga1 (A,B,C,D) /* synthesis syn_black_box */;
  input B;
  output A;
  input [2:0] D;
  output [2:0] C;
  temp;
  assign A = B;
  assign C = D;

endmodule


module b1_fpga1_top (inout A, B, inout [2:0] C, D);
  b1_fpga1 b1_fpga1_inst(A,B,C,D);
endmodule
```

_BETA_FEATURES_ON_

Beta features for the Verilog, SystemVerilog, or VHDL language must be explicitly enabled. In the UI, a Beta Features checkbox is included on the VHDL or Verilog tab of the Implementations Options dialog box. A _BETA_FEATURES_ON_ compiler directive is also available. This directive is specified with a set_option -hdl_define command added to the project file as shown below:

```
set_option -hdl_define -set _BETA_FEATURES_ON_
```

The directive can also be added to the Compiler Directives field of the Verilog panel.

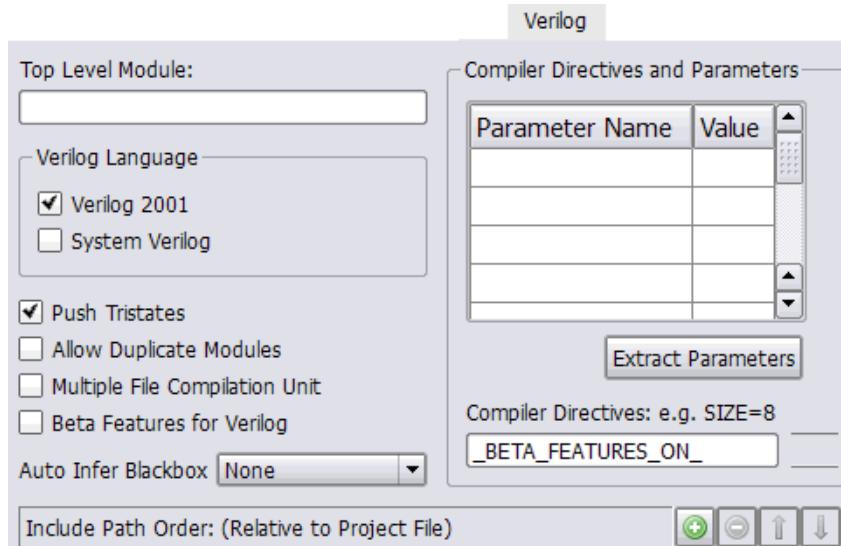

Current beta features that must be explicitly enabled for the compiler include the following:

HDL Language Constructs	Descriptions
Aggregates	<ul style="list-style-type: none">• Multi-assignments for array aggregates• Assignments for the union of variable types

- Multi-assignments for array aggregates
- Assignments for the union of variable types

SEARCHFILENAMEONLY

This directive provides a workaround for some known limitations of the archive utility.

If Verilog 'include files belong in any of the following categories, you may encounter problems when compiling a design after un-archiving:

1. The include paths have relative paths to the project file.

```
`include "../../defines.h"
```

2. The include paths have absolute paths to the project file.

```
`include "c:/temp/params.h"
```

```
`include "/remote/sbg_home/user/params.h"
```

3. The include paths have the same file names, but are located in different directories relative to the project file.

```
`include "../myflop.v"
```

```
..."
```

```
`include "../../myflop.v"
```


Use the _SEARCHFILENAMEONLY_ directive to resolve categories 1 and 2 above. Category 3 is a known limitation; in this case it is recommended that you adopt standard coding practices to avoid files with the same name and different content.

When you un-archive a sar file that contains relative or absolute include paths for the files in the project, you can add the _SEARCHFILENAMEONLY_ compiler directive to the unarchived project. This has the compiler remove the relative/absolute paths from the `include and search only for the file names.

This directive is specified with a `set_option -hdl_define` command added to an implementation within the project file as shown below:

```
set_option -hdl_define -set "_SEARCHFILENAMEONLY_"
```

The directive can also be added to the Compiler Directives field of the Verilog panel as shown below.

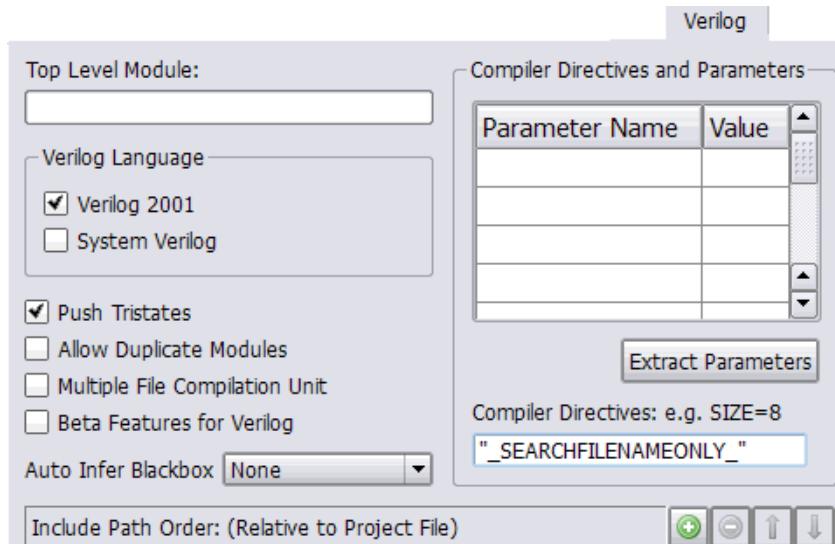

The compiler generates the following warning message whenever it extracts include files using this directive:

```
@W: | Macro _SEARCHFILENAMEONLY_ is set: fileName not found
attempting to search for base file name fileName
```

__ALLOWNESTEDBLOCKCOMMENTSTART__

Verilog/SystemVerilog comments can be included in RTL code as a

- One-line comment starting with the characters // and ending with a new line
- Block comment starting with /* and ending with */

However, nested block comments are not supported according to the LRM, so most tools generate a warning and ignore these comments in the RTL code. To match this behavior, the synthesis tools must also ignore various nested block comments, such as:

/*...../*....*/
(An incorrect pair)


/*...../*...../*.....*/

To do this, the compiler uses the `_ALLOWNESTEDBLOCKCOMMENTSTART_` directive and parses the first `/*` until it encounters the associated pair `*/`, then ignores all content between and including any number of these lines and the block comments.

You can specify the `_ALLOWNESTEDBLOCKCOMMENTSTART_` directive with a `set_option -hdl_define` command added to the project file as shown below:

```
set_option -hdl_define -set _ALLOWNESTEDBLOCKCOMMENTSTART_
```

The directive can also be added to the Compiler Directives field of the Verilog panel.

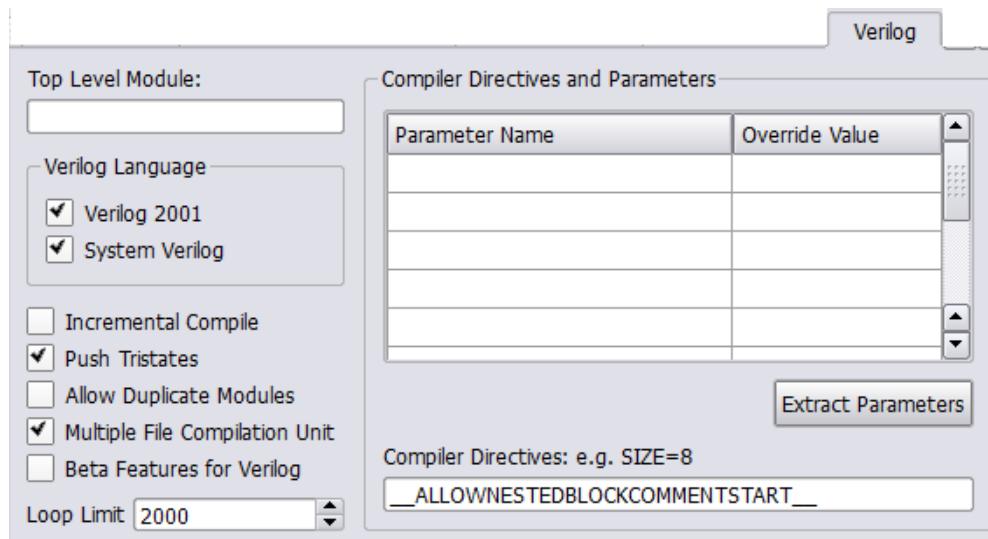

_SYN_COMPATIBLE_INCLUDEPATH_

Specifies that the search path order for includes to be the same as the one used by the simulation tool (VCS), instead of the following default search order, which searches the current logical library of the file where the module is instantiated first, then the library path for the current logical library, and lastly other logical libraries.


With `__SYN_COMPATIBLE_INCLUDEPATH__`, this is the search path order:

- Current working directory
- Include file directories, with first priority to RTL includes and then include paths

You can specify the `__SYN_COMPATIBLE_INCLUDEPATH__` directive with a `set_option -hdl_define` command added to the project file as shown below:

```
set_option -hdl_define -set __SYN_COMPATIBLE_INCLUDEPATH__
```

The directive can also be added to the Compiler Directives field of the Verilog panel.

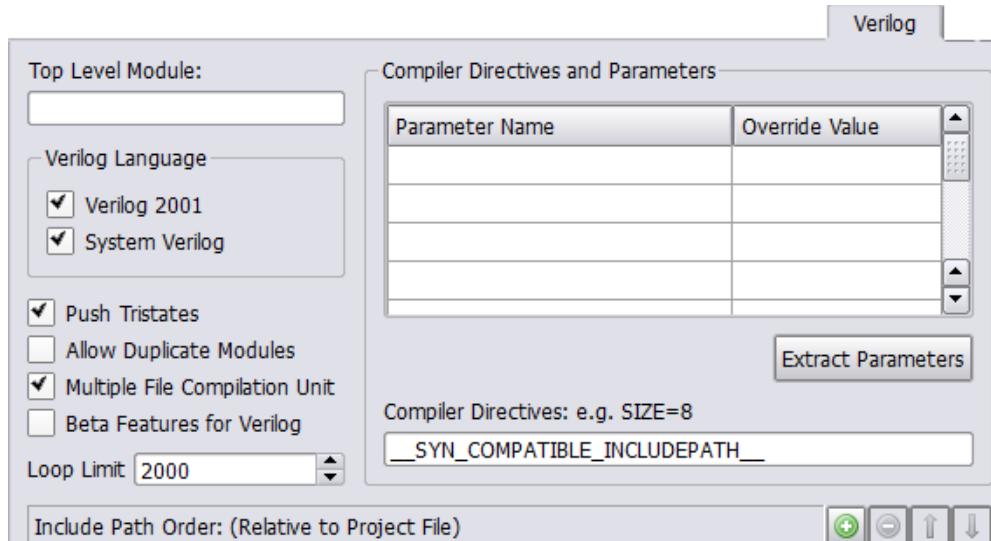

SYN_COMPATIBLE

Use the `SYN_COMPATIBLE` macro to ensure compatibility between different Synopsys tools. Some Synopsys tools, such as Design Compiler (DC), ignore dynamic initialization assignments, unlike the synthesis tool. In the following example, note the line logic `a=b`; DC leaves the output unconnected, because DC does not handle inline assignments. By contrast, the synthesis tool handles inline assignments, so input `b` drives the output `q`.

```
module test (b, q);
  input b;
  output q;
  logic a = b;
  assign q = a;
endmodule
```


The tool warns you of the difference in handling (warning message @W: CG879), and treats the assignment as a regular assign. If you are using modules from DC and need it to be compatible with the synthesis tool, there are two ways to match the behavior and ignore the non-constant initial values:

1. Specify a macro with a Tcl command.

```
set_option -hdl_define -set SYN_COMPATIBLE=DC
```


2. Specify a macro through the GUI.

- To specify it from the GUI, go to the Verilog tab of the Implementation Options dialog box.
- In the Compiler Directives field, set SYN_COMPATIBLE=DC.

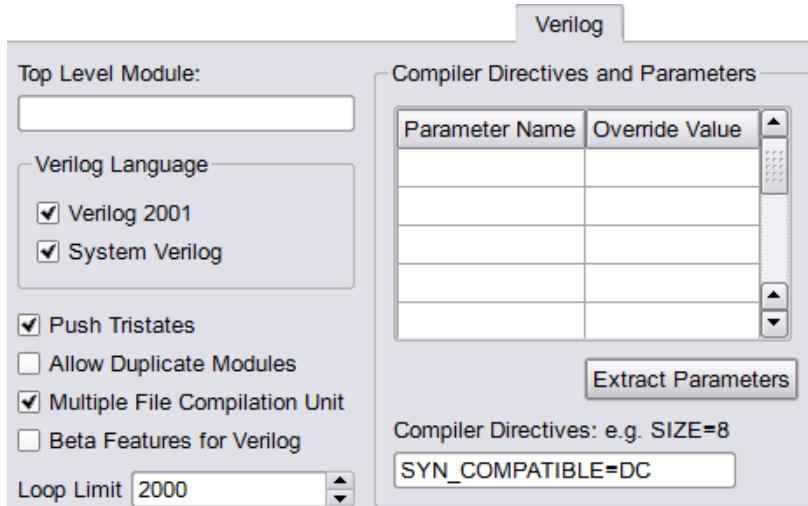

GCC Panel


The GCC panel specifies how gated and generated clocks are treated during synthesis.

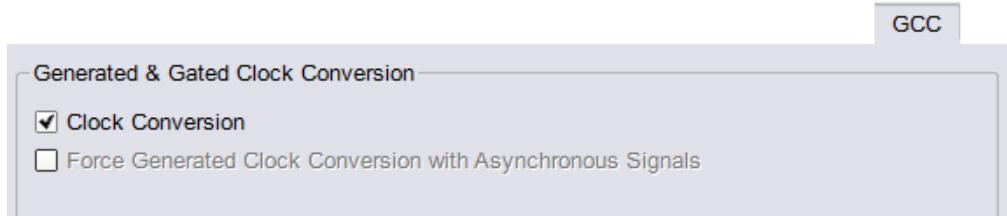

Feature	Description
Clock Conversion	Performs gated and generated clock optimization when enabled. See Working with Gated Clocks, on page 590 and Optimizing Generated Clocks, on page 621 for details. Tcl equivalent: <code>set_option -fix_gated_and_generated_clocks 0 1</code>

Place and Route Panel

The Place and Route panel allows you to run selected place-and-route jobs after design synthesis. To create a place-and-route job, see [Add P&R Implementation Popup Menu Command, on page 514](#) or [Options for Place & Route Jobs Popup Menu Command, on page 515](#) for details.

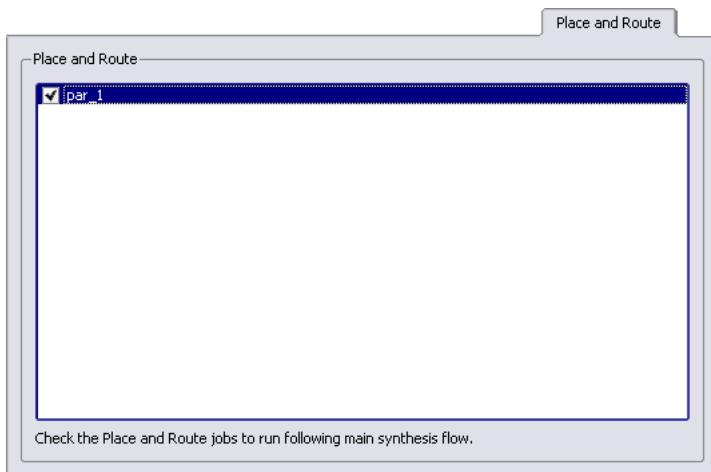

Run Menu

You use the Run menu to perform the following tasks:

- Compile a design, without mapping it.
- Synthesize (compile and map) or resynthesize a design.
- Check design syntax and synthesis code, and check source code errors.
- Check constraint syntax and how/if constraints are applied to the design.
- Run Tcl scripts.
- Run all implementations at once.
- Check the status of the current job.

The following table describes the Run menu commands.

Command	Description
Run	Synthesizes (compiles and maps) the top-level design. For the compile point flow, this command also synthesizes any compile points whose constraints, implementation options, or source code changed since the last synthesis run. You can view the result of design synthesis in the RTL and Technology views. Same as clicking the Run button in the Project view. Tcl equivalent: project -run
Resynthesize All	Resynthesizes (compiles and maps) the entire design, including the top level and <i>all compile points</i> , whether or not their constraints, implementation options, or source code changed since the last synthesis. If you do <i>not</i> want to force a <i>recompilation of all compile points</i> , then use Run->Run instead. Tcl equivalent: project -run synthesis -clean
Compile Only	Compiles the design into technology-independent high-level structures. You can view the result in the RTL view. Tcl equivalent: project -run compile


Command	Description
Write Output Netlist Only	<p>Generates an output netlist after synthesis has been run. This command generates the netlists you specify on the Implementation Results tab of the Implementation Options dialog box.</p> <p>You can also use this command in an incremental timing analysis flow. See Generating Custom Timing Reports with STA, on page 383 for details.</p> <p>Tcl equivalent: project -run write_netlist</p>
Syntax Check	<p>Runs a syntax check on design code. The status bar at the bottom of the window displays any error messages. If the active window shows an HDL file, then the command checks only that file; otherwise, it checks all project source code files.</p> <p>Tcl equivalent: project -run syntax_check</p>
Synthesis Check	<p>Runs a synthesis check on your design code. This includes a syntax check and a check to see if the synthesis tool could map the design to the hardware. No optimizations are carried out. The status bar at the bottom of the window displays any error messages. If the active window shows an HDL file, then the command checks only that file; otherwise, it checks all project source code files.</p> <p>Tcl equivalent: project -run synthesis_check</p>
Constraint Check	<p>Checks the syntax and applicability of the timing constraints in the fdc/sdc file for your project and generates a report (<i>projectName_cck.rpt</i>). The report contains information on the constraints that can be applied, cannot be applied because objects do not exist, and wildcard expansion on the constraints.</p> <p>See Constraint Checking Report, on page 174.</p> <p>Tcl equivalent: project -run constraint_check</p>
Arrange VHDL files	<p>Reorders the VHDL source files for synthesis.</p> <p>Tcl equivalent: project -run hdl_info_gen fileorder</p>
Launch Identify Instrumentor	<p>Not available for Lattice technologies.</p>
Launch Identify Debugger	<p>Not available for Lattice technologies.</p>

Command	Description
Launch SYNCORE	Opens the Synopsys FPGA IP Core Wizard. This tool helps you build IP blocks such as memory or FIFO models for your design. See the Launch SYNCORE Command, on page 401 for details.
Configure and Launch VCS Simulator	Allows you to configure and launch the VCS simulator. See Configure and Launch VCS Simulator Command, on page 429 .
Run Tcl Script	Displays the Open dialog box, where you choose a Tcl script to run. See Run Tcl Script Command, on page 398 .
Run Implementations Setup	Runs all selected implementations for one project at the same time. See Run Implementations Setup Command, on page 399 . Tcl equivalent: run -impl "implementation1 implementation2..." -parallel
Job Status	During compilation, tells you the name of the current job, and gives you the runtime and directory location of your design. This option is enabled during synthesis. See Job Status Command, on page 400 . Clicking in the status area of the Project view is a shortcut for this command.
Next Error/Warning	Shows the next error or warning in your source code file.
Previous Error/Warning	Shows the previous error or warning in your source code file.
Log File Message Filter	Allows messages in the current session to be elevated in severity (for example, promoted to an error from a warning), lowered in severity (for example, demoting a warning to a note), or suppressed from the log file after the next run through the Log File Filter dialog box. For more information, see Log File Message Controls, on page 241 .

Run Tcl Script Command


Select Run->Run Tcl Script to display the Open dialog box, where you specify the Tcl script file to execute. The File name area is filled automatically with the wildcard string “*.tcl”, corresponding to Tcl files.

This dialog box is the same as that displayed with File->Open, except that no Open as read-only check box is present. See [Open Project Command, on page 327](#), for an explanation of the features in the Open dialog box.

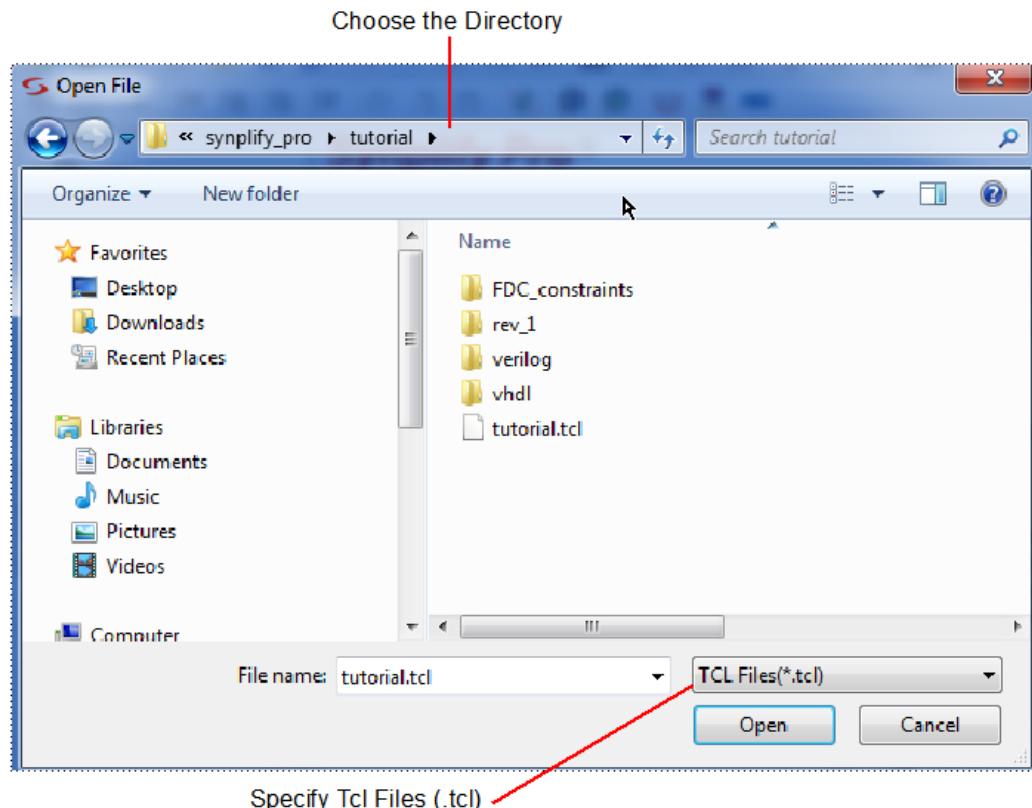

Run Implementations Setup Command

Select Run->Run Implementations Setup to run selected implementations of a Project file in batch mode. To use the Batch Run Setup dialog box, check one or more implementations from the list displayed and click the Run button.

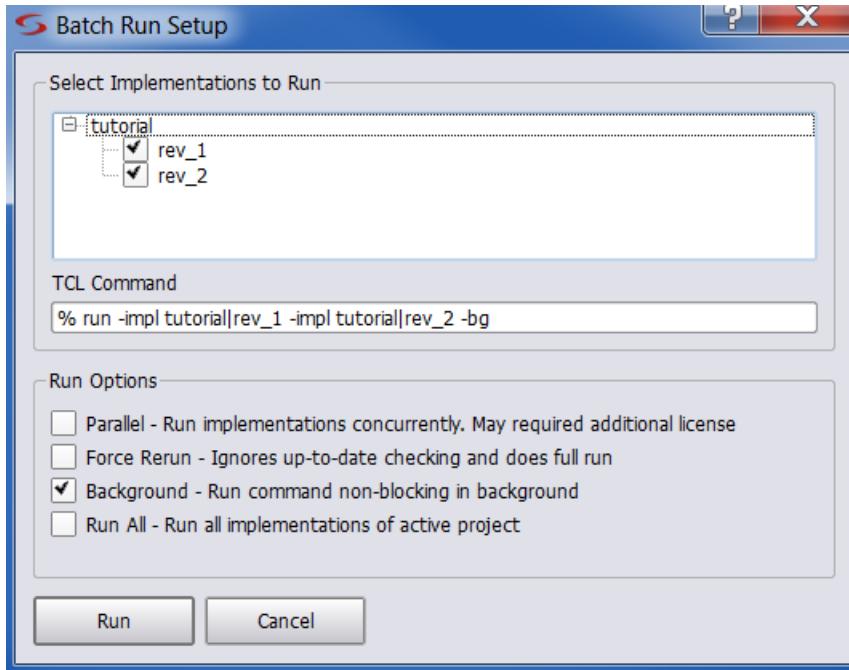


You can also choose to run the selected implementations with one or more of the following options:

Command	Description
Parallel	Runs specified implementations concurrently. This may require additional licenses. Tcl equivalent: run -impl implName -parallel
Force Rerun	Runs specified implementations, while ignoring up-to-date checking. This option clears all previous results and forces a complete rerun. Tcl equivalent: run -impl implName -clean
Background	Runs specified implementations in non-blocking background mode. Tcl equivalent: run -impl implName -bg
Run All	Runs all implementations of the active project. Tcl equivalent: run -all

Job Status Command

Select Run->Job Status to monitor the synthesis jobs that are running, their run times, and their associated commands. This information appears in the Job Status dialog box. This dialog box is also displayed when you click in the status area of the Project view (see [The Project View, on page 26](#)).

You can cancel a displayed job by selecting it in the dialog box and clicking Cancel Job.

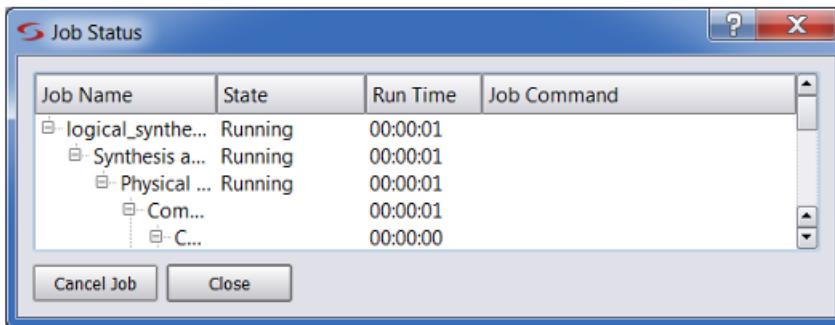


Launch SYNCORE Command

The SYNCORE wizard helps you build IP cores. The wizard can compile RAM and ROM memories including a byte-enable RAM, a FIFO, an adder/subtractor, and a counter. The resulting Verilog models can be synthesized and simulated. For details about using the wizard to build these models, see the following sections in the user guide:

- [Specifying FIFOs with SYNCORE, on page 500](#)
- [Specifying RAMs with SYNCORE, on page 506](#)
- [Specifying Byte-Enable RAMs with SYNCORE, on page 513](#)
- [Specifying ROMs with SYNCORE, on page 520](#)
- [Specifying Adder/Subtractors with SYNCORE, on page 525](#)
- [Specifying Counters with SYNCORE, on page 532](#)

To start the SYNCORE wizard, select Run->Launch SYNCORE and:

- Select `sfifo_model` and click Ok to start the FIFO wizard, described in [SYNCORE FIFO Wizard, on page 403](#).
- Select `ram_model` and click Ok to start the RAM wizard, described in [SYNCORE RAM Wizard, on page 412](#).
- Select `byte_en_ram` and click Ok to start the byte-enable RAM wizard, described in [SYNCORE Byte-Enable RAM Wizard, on page 416](#).
- Select `rom_model` and click Ok to start the ROM wizard, described in [SYNCORE ROM Wizard, on page 419](#).
- Select `addnsub_model` and click Ok to start the adder/subtractor wizard, described in [SYNCORE Adder/Subtractor Wizard, on page 423](#).
- Select `counter_model` and click Ok to start the counter wizard, described in [SYNCORE Counter Wizard, on page 427](#).

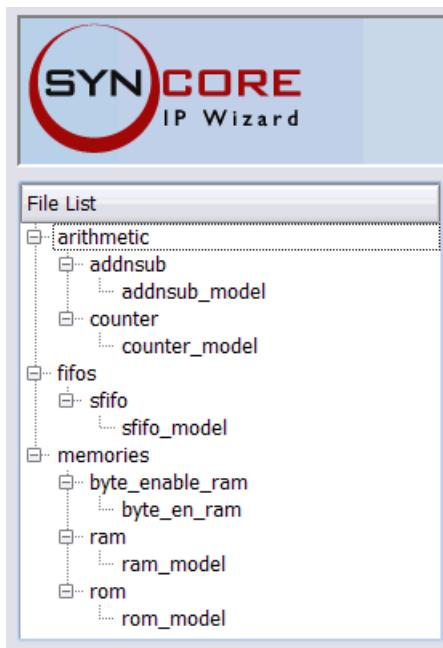

Each SYNCORE wizard has three tabs at the top, and buttons below, which are described here:

Parameters	Consists of a multiple-screen wizard that lets you set parameters for that model. See SYNCORE FIFO Wizard, on page 403 , SYNCORE RAM Wizard, on page 412 , SYNCORE Byte-Enable RAM Wizard, on page 416 , SYNCORE ROM Wizard, on page 419 , SYNCORE Adder/Subtractor Wizard, on page 423 , or SYNCORE Counter Wizard, on page 427 for details about the options you can set.
Core Overview	Contains basic information about the kind of model you are creating.
Generate	Generates the model with the parameters you specify in the wizard.
Sync FIFO Info, RAM Info, BYTE ENABLE RAM Info, ROM Info, ADDnSUB Info, COUNTER Info	Opens a window with technical information about the corresponding model.


SYNCore FIFO Wizard

The following describe the parameters you can set in the FIFO wizard, which opens when you select `sfifo_model`:

- [SYNCore FIFO Parameters Page 1, on page 403](#)
- [SYNCore FIFO Parameters Page 2, on page 404](#)
- [SYNCore FIFO Parameters Page 3, on page 406](#)
- [SYNCore FIFO Parameters Page 4, on page 408](#)
- [SYNCore FIFO Parameters Page 5, on page 410](#)

SYNCore FIFO Parameters Page 1

The page 1 parameters define the FIFO. Data is written/read on the rising edge of the clock.

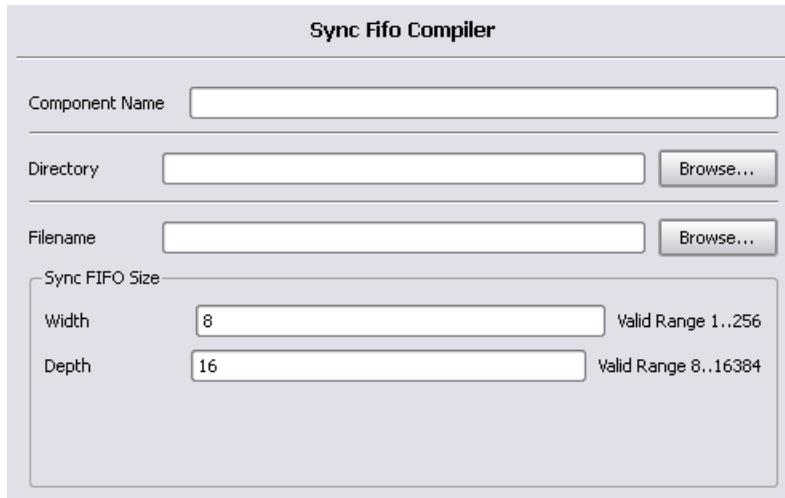

Parameter	Function
Component Name	Specifies a name for the FIFO. This is the name that you instantiate in your design file to create an instance of the SYNCore FIFO in your design. Do not use spaces.
Directory	Indicates the directory where the generated files will be stored. Do not use spaces.

Parameter	Function
Filename	Specifies the name of the generated file containing the HDL description of the generated FIFO. Do not use spaces.
Width	Specifies the width of the FIFO data input and output. It must be within the valid range.
Depth	Specifies the depth of the FIFO. It must be within the valid range.

SYNCore FIFO Parameters Page 2

Sync Fifo Compiler

Sync FIFO Optional Flags

Write Control Handshaking Options

Full Flags

Full Flag
 Active High Active Low

Almost Full Flag
 Active High Active Low

Overflow

Overflow Flag
 Active High Active Low

Write Acknowledge

Write Acknowledge Flag
 Active High Active Low

The page 2 parameters let you specify optional handshaking flags for FIFO write operations. When you specify a flag, the symbol on the left reflects your choice. Data is written/read on the rising edge of the clock.

Parameter	Function
Full Flag	Specifies a Full signal, which is asserted when the FIFO memory queue is full and no more writes can be performed until data is read. Enabling this option makes the Active High and Active Low options (FULL_FLAG_SENSE parameter) available for the signal. See Full/Almost Full Flags, on page 229 and FIFO Parameters, on page 227 for descriptions of the flag and parameter.
Almost Full Flag	Specifies an Almost_full signal, which is asserted to indicate that there is one location left and the FIFO will be full after one more write operation. Enabling this option makes the Active High and Active Low options available for the signal (AFULL_FLAG_SENSE parameter). See Full/Almost Full Flags, on page 229 and FIFO Parameters, on page 227 for descriptions of the flag and parameter.
Overflow Flag	Specifies an Overflow signal, which is asserted to indicate that the write operation was unsuccessful because the FIFO was full. Enabling this option makes the Active High and Active Low options available for the signal (OVERFLOW_FLAG_SENSE parameter). See Handshaking Flags, on page 231 and FIFO Parameters, on page 227 for descriptions of the flag and parameter.
Write Acknowledge Flag	Specifies a Write_ack signal, which is asserted at the completion of a successful write operation. Enabling this option makes the Active High and Active Low options (WACK_FLAG_SENSE parameter) available for the signal. See Handshaking Flags, on page 231 and FIFO Parameters, on page 227 for descriptions of the flag and parameter.
Active High	Sets the specified signal to active high (1).
Active Low	Sets the specified signal to active low (0).

SYNCore FIFO Parameters Page 3


The page 3 parameters let you specify optional handshaking flags for FIFO read operations. Data is written/read on the rising edge of the clock.



Parameter	Function
Empty Flag	<p>Specifies an Empty signal, which is asserted when the memory queue for the FIFO is empty and no more reads can be performed until data is written.</p> <p>Enabling this option makes the Active High and Active Low options (EMPTY_FLAG_SENSE parameter) available for the signal. See Empty/Almost Empty Flags, on page 230 and FIFO Parameters, on page 227 for descriptions of the flag and parameter.</p>

Parameter	Function
Almost Empty Flag	<p>Specifies an Almost_empty signal, which is asserted when there is only one location left to be read. The FIFO will be empty after one more read operation.</p> <p>Enabling this option makes the Active High and Active Low options (AEMPTY_FLAG_SENSE parameter) available for the signal. See Empty/Almost Empty Flags, on page 230 and FIFO Parameters, on page 227 for descriptions of the flag and parameter.</p>
Underflow Flag	<p>Specifies an Underflow signal, which is asserted to indicate that the read operation was unsuccessful because the FIFO was empty.</p> <p>Enabling this option makes the Active High and Active Low options (UNDRFLW_FLAG_SENSE parameter) available for the signal. See Handshaking Flags, on page 231 and FIFO Parameters, on page 227 for descriptions of the flag and parameter.</p>
Read Acknowledge Flag	<p>Specifies a Read_ack signal, which is asserted at the completion of a successful read operation.</p> <p>Enabling this option makes the Active High and Active Low options (RACK_FLAG_SENSE parameter) available for the signal. See Handshaking Flags, on page 231 and FIFO Parameters, on page 227 for descriptions of the flag and parameter.</p>
Active High	Sets the specified signal to active high (1).
Active Low	Sets the specified signal to active low (0).

SYNCore FIFO Parameters Page 4

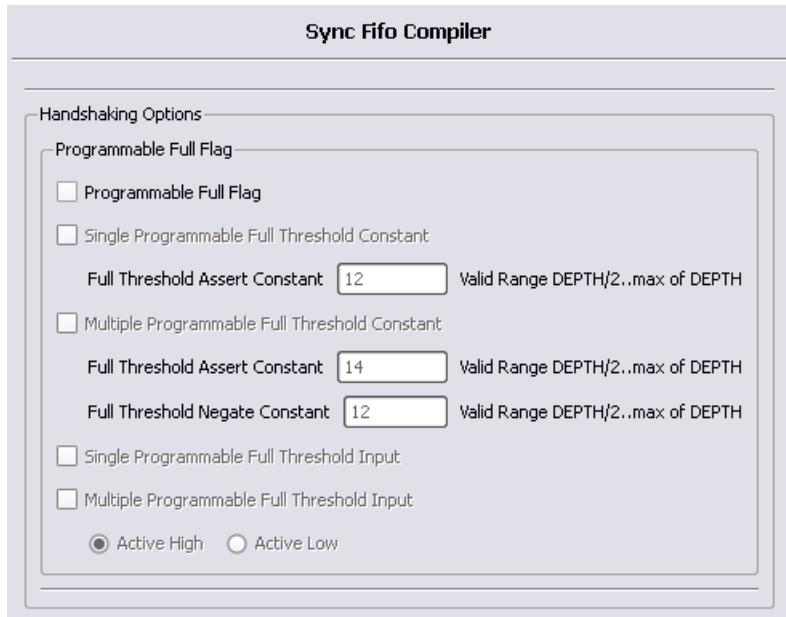


The page 4 parameters let you specify optional handshaking flags for FIFO programmable full operations. To use these options, you must have a Full signal specified. See [FIFO Programmable Flags, on page 232](#) for details and [FIFO Parameters, on page 227](#) for a list of the FIFO parameters. Data is written/read on the rising edge of the clock.

Parameter	Function
Programmable Full Flag	Specifies a Prog_full signal, which indicates that the FIFO has reached a user-defined full threshold. You can only enable this option if you set Full Flag on page 2. When it is enabled, you can specify other options for the Prog_Full signal (PFULL_FLAG_SENSE parameter). See Programmable Full, on page 233 and FIFO Parameters, on page 227 for descriptions of the flag and parameter.

Parameter	Function
Single Programmable Full Threshold Constant	Specifies a Prog_full signal with a single constant defining the assertion threshold (PGM_FULL_TYPE=1 parameter). See Programmable Full with Single Threshold Constant, on page 233 for details.
	Enabling this option makes Full Threshold Assert Constant available.
Multiple Programmable Full Threshold Constant	Specifies a Prog_full signal (PGM_FULL_TYPE=2 parameter), with multiple constants defining the assertion and deassertion thresholds. See Programmable Full with Multiple Threshold Constants, on page 234 for details.
	Enabling this option makes Full Threshold Assert Constant and Full Threshold Negate Constant available.
Full Threshold Assert Constant	Specifies a constant that is used as a threshold value for asserting the Prog_full signal. It sets the PGM_FULL_THRESH parameter for PGM_FULL_TYPE=1 and the PGM_FULL_ATHRESH parameter for PGM_FULL_TYPE=2.
Full Threshold Negate Constant	Specifies a constant that is used as a threshold value for deasserting the Prog_full signal (PGM_FULL_NTHRESH parameter).
Single Programmable Full Threshold Input	Specifies a Prog_full signal (PGM_FULL_TYPE=3 parameter), with a threshold value specified dynamically through a Prog_full_thresh input port during the reset state. See Programmable Full with Single Threshold Input, on page 234 for details.
	Enabling this option adds the Prog_full_thresh input port to the FIFO.
Multiple Programmable Full Threshold Input	Specifies a Prog_full signal (PGM_FULL_TYPE=4 parameter), with threshold assertion and deassertion values specified dynamically through input ports during the reset state. See Programmable Full with Multiple Threshold Inputs, on page 235 for details.
	Enabling this option adds the Prog_full_thresh_assert and Prog_full_thresh_negate input ports to the FIFO.
Active High	Sets the specified signal to active high (1).
Active Low	Sets the specified signal to active low (0).

SYNCore FIFO Parameters Page 5

These options specify optional handshaking flags for FIFO programmable empty operations. To use these options, you first specify an Empty signal on page 3. See [FIFO Programmable Flags, on page 232](#) for details and [FIFO Parameters, on page 227](#) for a list of the FIFO parameters. Data is written/read on the rising edge of the clock.

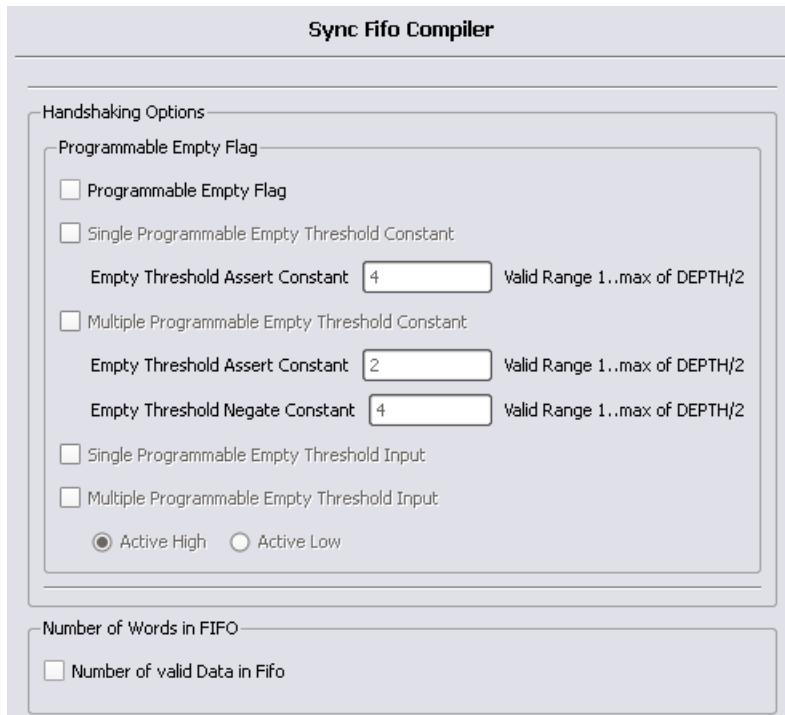

Parameter	Function
Programmable Empty Flag	<p>Specifies a Prog_empty signal (PEMPTY_FLAG_SENSE parameter), which indicates that the FIFO has reached a user-defined empty threshold. See Programmable Empty, on page 236 and FIFO Parameters, on page 227 for descriptions of the flag and parameter.</p> <p>Enabling this option makes the other options available to specify the threshold value, either as a constant or through input ports. You can also specify single or multiple thresholds for each of these options.</p>

Parameter	Function
Single Programmable Empty Threshold Constant	Specifies a Prog_empty signal (PGM_EMPTY_TYPE=1 parameter), with a single constant defining the assertion threshold. See Programmable Empty with Single Threshold Input, on page 237 for details.
	Enabling this option makes Empty Threshold Assert Constant available.
Multiple Programmable Empty Threshold Constant	Specifies a Prog_empty signal (PGM_EMPTY_TYPE=2 parameter), with multiple constants defining the assertion and de-assertion thresholds. See Programmable Empty with Multiple Threshold Constants, on page 237 for details.
	Enabling this option makes Empty Threshold Assert Constant and Empty Threshold Negate Constant available.
Empty Threshold Assert Constant	Specifies a constant that is used as a threshold value for asserting the Prog_empty signal. It sets the PGM_EMPTY_THRESH parameter for PGM_EMPTY_TYPE=1 and the PGM_EMPTY_ATHRESH parameter for PGM_EMPTY_TYPE=2.
Empty Threshold Negate Constant	Specifies a constant that is used as a threshold value for de-asserting the Prog_empty signal (PGM_EMPTY_NTHRESH parameter).
Single Programmable Empty Threshold Input	Specifies a Prog_empty signal (PGM_EMPTY_TYPE=3 parameter), with a threshold value specified dynamically through a Prog_empty_thresh input port during the reset state. See Programmable Empty with Single Threshold Input, on page 237 for details.
	Enabling this option adds the Prog_full_thresh input port to the FIFO.
Multiple Programmable Empty Threshold Input	Specifies a Prog_empty signal (PGM_EMPTY_TYPE=4 parameter), with threshold assertion and deassertion values specified dynamically through Prog_empty_thresh_assert and Prog_empty_thresh_negate input ports during the reset state. See Programmable Empty with Multiple Threshold Inputs, on page 239 for details.
	Enabling this option adds the input ports to the FIFO.
Active High	Sets the specified signal to active high (1).
Active Low	Sets the specified signal to active low (0).

Parameter	Function
Number of Valid Data in FIFO	Specifies the Data_cnt signal for the FIFO output. This signal contains the number of words in the FIFO in the read domain.

SYNCore RAM Wizard

The following describe the parameters you can set in the RAM wizard, which opens when you select ram_model:

- [SYNCore RAM Parameters Page 1, on page 412](#)
- [SYNCore RAM Parameters Pages 2 and 3, on page 414](#)

SYNCore RAM Parameters Page 1

Memory Compiler

Component Name

Directory

Filename

Memory Size

Data Width Valid Range 1..256

Address Width Valid Range 2..256

How will you be using the RAM?

Single Port Dual Port

Which clocking method do you want to use?


Single Clock Separate Clocks For Each Port

Component Name	Specifies the name of the component. This is the name that you instantiate in your design file to create an instance of the SYNCORE RAM in your design. Do not use spaces. For example:
	<pre>ram101 <ComponentName> (.PortAClk(PortAClk) , .PortAAAddr(PortAAAddr) , .PortADataIn(PortADataIn) , .PortAWriteEnable(PortAWriteEnable) , .PortBDataIn(PortBDataIn) , .PortBAAddr(PortBAAddr) , .PortBWriteEnable(PortBWriteEnable) , .PortADataOut(PortADataOut) , .PortBDataOut(PortBDataOut));</pre>
Directory	Specifies the directory where the generated files are stored. Do not use spaces. The following files are created: <ul style="list-style-type: none"> • filelist.txt – lists files written out by SYNCORE • options.txt – lists the options selected in SYNCORE • readme.txt – contains a brief description and known issues • syncore_ram.v – Verilog library file required to generate RAM model • testbench.v – Verilog testbench file for testing the RAM model • instantiation_file.vin – describes how to instantiate the wrapper file • <i>component.v</i> – RAM model wrapper file generated by SYNCORE <p>Note that running the Memory Compiler wizard in the same directory overwrites the existing files.</p>
Filename	Specifies the name of the generated file containing the HDL description of the compiled RAM. Do not use spaces.
Data Width	Is the width of the data you need for the memory. The unit used is the number of bits.
Address Width	Is the address depth you need for the memory. The unit used is the number of bits.
Single Port	When enabled, generates a single-port RAM.

Dual Port	When enabled, generates a dual-port RAM.
Single Clock	When enabled, generates a RAM with a single clock for dual-port configurations.
Separate Clocks for Each Port	When enabled, generates separate clocks for each port in dual-port RAM configurations.

SYNCore RAM Parameters Pages 2 and 3

The port implementation parameters on pages 2 and 3 are identical, but page 2 applies to Port A (single- and dual-port configurations), and page 3 applies to Port B (dual-port configurations only). The following figure shows the parameters on page 2 for Port A.

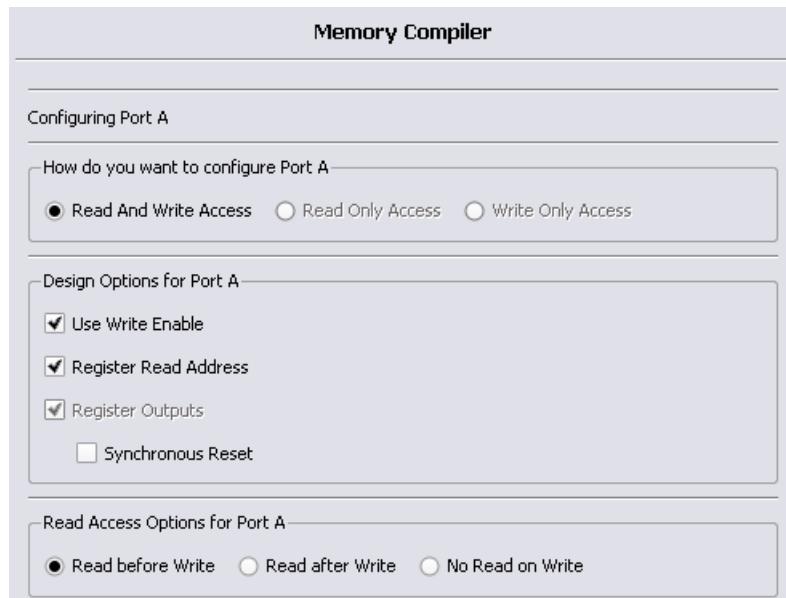

Read and Write Access	Specifies that the port can be accessed by both read and write operations.
Read Only Access	Specifies that the port can only be accessed by read operations.
Write Only Access	Specifies that the port can only be accessed by write operations.
Use Write Enable	Includes write-enable control. The RAM symbol on the left reflects the selections you make.

Register Read Address	Adds registers to the read address lines. The RAM symbol on the left reflects the selections you make.
Register Outputs	Adds registers to the write address lines when you specify separate read/write addressing. The register outputs are always enabled. The RAM symbol on the left reflects the selections you make.
Synchronous Reset	Individually synchronizes the reset signal with the clock when you enable Register Outputs. The RAM symbol on the left reflects the selections you make.
Read before Write	Specifies that the read operation takes place before the write operation for port configurations with both read and write access (Read And Write Access is enabled). For a timing diagram, see Read Before Write, on page 247 .
Read after Write	Specifies that the read operation takes place after the write operation for port configurations with both read and write access (Read And Write Access is enabled). For a timing diagram, see Write Before Read, on page 248 .
No Read on Write	Specifies that no read operation takes place when there is a write operation for port configurations with both read and write access (Read And Write Access is enabled). For a timing diagram, see No Read on Write, on page 249 .

SYNCore Byte-Enable RAM Wizard

The following describes the parameters you can set in the byte-enable RAM wizard, which opens when you select `byte_en_ram`.

- [SYNCore Byte-Enable RAM Parameters Page 1, on page 416](#)
- [SYNCore Byte-Enable RAM Parameters Pages 2 and 3, on page 417](#)

SYNCore Byte-Enable RAM Parameters Page 1

Byte Enable Ram Compiler

Component Name

Directory

File Name

Memory Size

Address Width Valid Range 1...256

Data Width valid range 1..256

Write Enable Width Valid Range 1...256

How will you be using the RAM?

Single Port Dual Port

Component Name	Specifies the name of the component. This is the name that you instantiate in your design file to create an instance of the SYNCORE byte-enable RAM in your design. Do not use spaces.
Directory	<p>Specifies the directory where the generated files are stored. Do not use spaces. The following files are created:</p> <ul style="list-style-type: none"> • <code>filelist.txt</code> – lists files written out by SYNCORE • <code>options.txt</code> – lists the options selected in SYNCORE • <code>readme.txt</code> – contains a brief description and known issues • <code>syncore_be_ram_sdp.v</code> – SystemVerilog library file required to generate single or simple dual-port, byte-enable RAM model • <code>syncore_be_ram_tdp.v</code> – SystemVerilog library file required to generate true dual-port byte-enable RAM model • <code>testbench.v</code> – Verilog testbench file for testing the byte-enable RAM model • <code>instantiation_file.vin</code> – describes how to instantiate the wrapper file • <code>component.v</code> – Byte-enable RAM model wrapper file generated by SYNCORE <p>Note that running the byte-enable RAM wizard in the same directory overwrites the existing files.</p>
Filename	Specifies the name of the generated file containing the HDL description of the compiled byte-enable RAM. Do not use spaces.
Address Width	Specifies the address depth for Ports A and B. The unit used is the number of bits; the default is 2.
Data Width	Specifies the width of the data for Ports A and B. The unit used is the number of bits; the default is 2.
Write Enable Width	Specifies the write enable width for Ports A and B. The unit used is the number of byte enables; the default is 2, the maximum is 4.
Single Port	When enabled, generates a single-port, byte-enable RAM (automatically enables single clock).
Dual Port	When enabled, generates a dual-port, byte-enable RAM (automatically enables separate clocks for each port).

SYNCORE Byte-Enable RAM Parameters Pages 2 and 3

The port implementation parameters on pages 2 and 3 are identical, but page 2 applies to Port A (single- and dual-port configurations), and page 3 applies to Port B (dual-port configurations only). The following figure shows the parameters on page 2 for Port A.

Byte Enable Ram Compiler

Configuring Port A

How do you want to configure Port A

Read And Write Access Read Only Access Write Only Access

Pipelining Address Bus and Output Data

Register address bus AddrA
 Register output data bus RdDataA

Configure Reset Options

Reset for RdDataA

Specify output data on reset

Default value of '1' for all bits
 Specify Reset value for RdDataA Valid Range 0... $2^{\text{DATA_WIDTH}}$

Configure Write Enable Options

Write Enable for PORTA
 Active High Active Low

Read and Write Access Specifies that the port can be accessed by both read and write operations (only mode allowed for single-port configurations).

Read Only Access Specifies that the port can only be accessed by read operations (dual-port mode only).

Write Only Access Specifies that the port can only be accessed by write operations (dual-port mode only).

Register address bus AddrA/B Adds registers to the read address lines.

Register output data bus RdDataA/B Adds registers to the read data lines. By default, the read data register is enabled.

Reset for RdDataA/B	Specifies the reset type for registered read data: <ul style="list-style-type: none">• Reset type is synchronous when Reset for RdDataA/B is enabled• Reset type is no reset when Reset for RdDataA/B is disabled
Specify output data on reset	Specifies reset value for registered read data (applies only when RdDataA/B is enabled): <ul style="list-style-type: none">• Default value of '1' for all bits – sets read data to all 1's on reset• Specify Reset value for RdDataA/B – specifies reset value for read data; when enabled, value is entered in adjacent field
Write Enable for Port A/B	Specifies the write enable level for Port A/B. Default is Active High.

SYNCore ROM Wizard

The following describe the parameters you can set in the ROM wizard, which opens when you select rom_model:

- [SYNCore ROM Parameters Page 1, on page 420](#)
- [SYNCore ROM Parameters Pages 2 and 3, on page 421](#)
- [SYNCore ROM Parameters Page 4, on page 423](#)

SYNCore ROM Parameters Page 1

Component Name: BankDecodeROM2

Directory: C:/majie/dsgns

File Name: bdrom2.v

ROM Size

Read Data width: 8 Valid Range 1..256

ROM address width: 10 Valid Range 2..256

Configuring the ROM


Single Port Rom Dual Port Rom

Component Name	Specifies the name of the component. This is the name that you instantiate in your design file to create an instance of the SYNCore ROM in your design. Do not use spaces.
Directory	<p>Specifies the directory where the generated files are stored. Do not use spaces. The following files are created:</p> <ul style="list-style-type: none"> filelist.txt – lists files written out by SYNCore options.txt – lists the options selected in SYNCore readme.txt – contains a brief description and known issues syncore_rom.v – Verilog library file required to generate ROM model testbench.v – Verilog testbench file for testing the ROM model instantiation_file.vin – describes how to instantiate the wrapper file <i>component.v</i> – ROM model wrapper file generated by SYNCore <p>Note that running the ROM wizard in the same directory overwrites the existing files.</p>
File Name	Specifies the name of the generated file containing the HDL description of the compiled ROM. Do not use spaces.

Read Data Width	Specifies the read data width of the ROM. The unit used is the number of bits and ranges from 2 to 256. Default value is 8. The read data width is common to both Port A and Port B. The corresponding file parameter is DATA_WIDTH=n.
ROM address width	Specifies the address depth for the memory. The unit used is the number of bits. Default value is 10. The corresponding file parameter is ADD_WIDTH=n.
Single Port Rom	When enabled, generates a single-port ROM. The corresponding file parameter is CONFIG_PORT="single".
Dual Port Rom	When enabled, generates a dual-port ROM. The corresponding file parameter is CONFIG_PORT="dual".


SYNCore ROM Parameters Pages 2 and 3

The port implementation parameters on pages 2 and 3 are the same; page 2 applies to Port A (single- and dual-port configurations), and page 3 applies to Port B (dual-port configurations only).

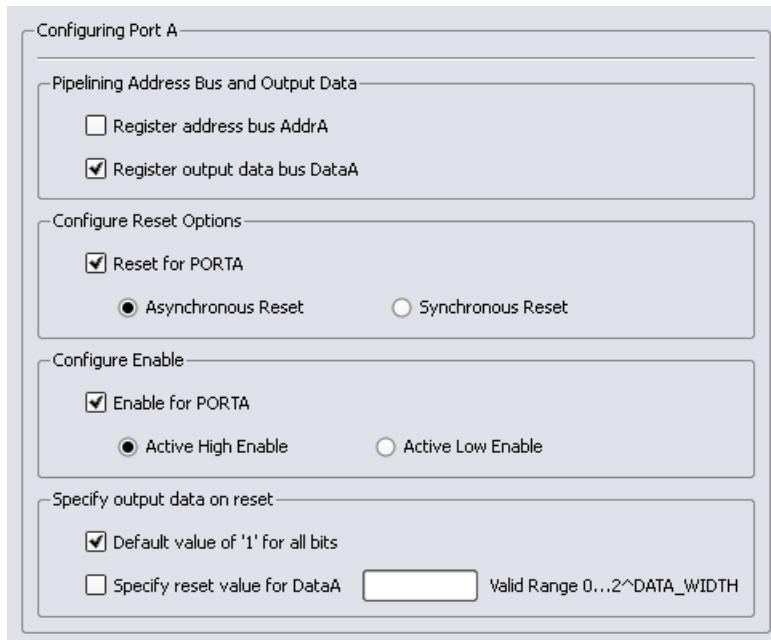

Register address bus AddrA	Used with synchronous ROM configurations to register the read address. When checked, also allows chip enable to be configured.
Register output data bus DataA	Used with synchronous ROM configurations to register the data outputs. When checked, also allows chip enable to be configured.
Asynchronous Reset	Sets the type of reset to asynchronous (Configure Reset Options must be checked). Configuring reset also allows the output data pattern on reset to be defined. The corresponding file parameter is RST_TYPE_A=1/RST_TYPE_B=1.
Synchronous Reset	Sets the type of reset to synchronous (Configure Reset Options must be checked). Configuring reset also allows the output data pattern on reset to be defined. The corresponding file parameter is RST_TYPE_A=0/RST_TYPE_B=0.
Active High Enable	Sets the level of the chip enable to high for synchronous ROM configurations. The corresponding file parameter is EN_SENSE_A=1/EN_SENSE_B=1.
Active Low Enable	Sets the level of the chip enable to low for synchronous ROM configurations. The corresponding file parameter is EN_SENSE_A=0/EN_SENSE_B=0.
Default value of '1' for all bits	Specifies an output data pattern of all 1's on reset. The corresponding file parameter is RST_DATA_A={n{1'b1}}/RST_DATA_B={n{1'b1}}.
Specify reset value for DataA/DataB	Specifies a user-defined output data pattern on reset. The pattern is defined in the adjacent field. The corresponding file parameter is RST_TYPE_A=pattern/RST_TYPE_B=pattern.

SYNCore ROM Parameters Page 4

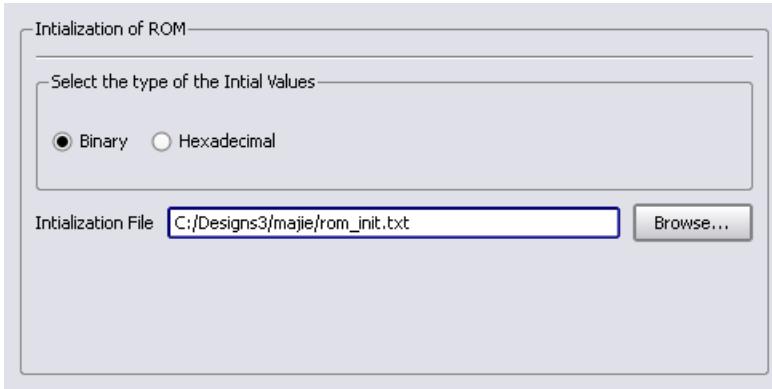

Binary Specifies binary-formatted initialization file.

Hexadecimal Specifies hexadecimal-formatted initial file.


Initialization File Specifies path and filename of initialization file. The corresponding file parameter is `INIT_FILE="filename"`.

SYNCore Adder/Subtractor Wizard

The following describe the parameters you can set in the adder/subtractor wizard, which opens when you select `addnsub_model`:

- [SYNCore Adder/Subtractor Parameters Page 1, on page 424](#)
- [SYNCore Adder/Subtractor Parameters Page 2, on page 425](#)

SYNCore Adder/Subtractor Parameters Page 1

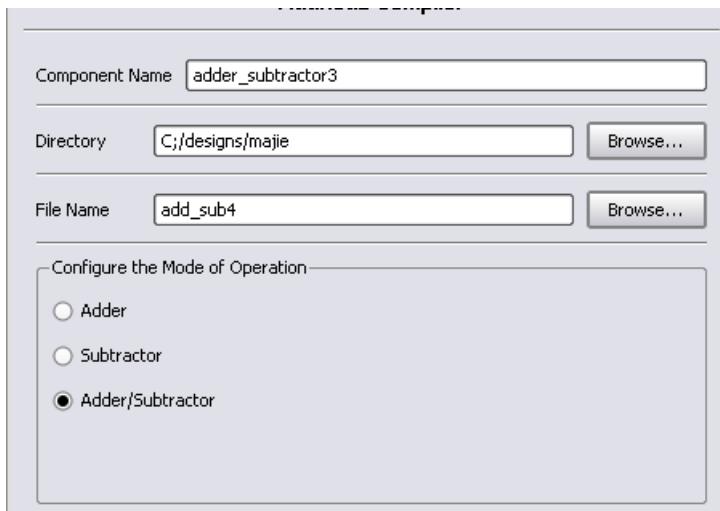

Component Name	Specifies a name for the adder/subtractor. This is the name that you instantiate in your design file to create an instance of the SYNCore adder/subtractor in your design. Do not use spaces.
Directory	<p>Indicates the directory where the generated files will be stored. Do not use spaces. The following files are created:</p> <ul style="list-style-type: none"> • filelist.txt – lists files written out by SYNCore • options.txt – lists the options selected in SYNCore • readme.txt – contains a brief description and known issues • syncore_ADDnSUB.v – Verilog library file required to generate adder/subtractor model • testbench.v – Verilog testbench file for testing the adder/subtractor model • instantiation_file.vin – describes how to instantiate the wrapper file • <i>component.v</i> – adder/subtractor model wrapper file generated by SYNCore <p>Note that running the wizard in the same directory overwrites any existing files.</p>
Filename	Specifies the name of the generated file containing the HDL description of the generated adder/subtractor. Do not use spaces.

Adder	When enabled, generates an adder (the corresponding file parameter is ADD_N_SUB ="ADD").
Subtractor	When enabled, generates a subtractor (the corresponding file parameter is ADD_N_SUB ="SUB").
Adder/Subtractor	When enabled, generates a dynamic adder/subtractor (the corresponding file parameter is ADD_N_SUB ="DYNAMIC").

SYNCore Adder/Subtractor Parameters Page 2

Input and Output Ports Configurations

Configure Port A

Port A Width

Register Input A

Clock Enable for Register A Reset for Register A

Configure Port B

Constant Value Input Enable Port B

Constant Value/Port B Width

Register Input B

Clock Enable for Register B Reset for Register B

Configure Output Port

Output port Width

Register output PortOut

Clock Enable for Register PortOut Reset for Register PortOut

Configure Reset type for all Reset Signals

Synchronous Reset Asynchronous Reset

Port A Width	Specifies the width of port A (the corresponding file parameter is PORT_A_WIDTH=n).
Register Input A	Used with synchronous adder/subtractor configurations to register port A. When checked, also allows clock enable and reset to be configured (the corresponding file parameter is PORTA_PIPELINE_STAGE='0' or '1').
Clock Enable for Register A	Specifies the enable for port A register.
Reset for Register A	Specifies the reset for port A register.
Constant Value Input	Specifies port B as a constant input when checked and allows you to enter a constant value in the Constant Value/Port B Width field (the corresponding file parameter is CONSTANT_PORT ='0').
Enable Port B	Specifies port B as an input when checked and allows you to enter a port B width in the Constant Value/Port B Width field (the corresponding file parameter is CONSTANT_PORT ='1').
Constant Value/Port B Width	Specifies either a constant value or port B width depending on Constant Value Input and Enable Port B selection (the corresponding file parameters are CONSTANT_VALUE= n or PORT_B_WIDTH=n).
Register Input B	Used with synchronous adder/subtractor configurations to register port B. When checked, also allows clock enable and reset to be configured (the corresponding file parameter is PORTB_PIPELINE_STAGE='0' or '1').
Clock Enable for Register B	Specifies the enable for the port B register.
Reset for Register B	Specifies the reset for the port B register.
Output port Width	Specifies the width of the output port (the corresponding file parameter is PORT_OUT_WIDTH=n).
Register output PortOut	Used with synchronous adder/subtractor configurations to register the output port. When checked, also allows clock enable and reset to be configured (the corresponding file parameter is PORTOUT_PIPELINE_STAGE='0' or '1').
Clock Enable for Register PortOut	Specifies the enable for the output port register.

Reset for Register PortOut	Specifies the reset for the output port register.
Synchronous Reset	Sets the type of reset to synchronous (the corresponding file parameter is RESET_TYPE='0').
Asynchronous Reset	Sets the type of reset to asynchronous (the corresponding file parameter is RESET_TYPE='1').

SYNCore Counter Wizard

The following describe the parameters you can set in the ROM wizard, which opens when you select counter_model:

- [SYNCore Counter Parameters Page 1, on page 427](#)
- [SYNCore Counter Parameters Page 2, on page 429](#)


SYNCore Counter Parameters Page 1

The dialog box contains the following fields:

- Component Name: up-down_counter
- Directory: C:/designs/majie/monitor
- File Name: udc2
- Configure the Counter Parameters:
 - Width of Counter: 16
 - Counter Step Value: 1
- Configure the Mode of Counter:
 - Up Counter
 - Down Counter
 - UpDown Counter

Component Name	Specifies a name for the counter. This is the name that you instantiate in your design file to create an instance of the SYNCORE counter in your design. Do not use spaces.
Directory	<p>Indicates the directory where the generated files will be stored. Do not use spaces. The following files are created:</p> <ul style="list-style-type: none"> • <code>filelist.txt</code> – lists files written out by SYNCORE • <code>options.txt</code> – lists the options selected in SYNCORE • <code>readme.txt</code> – contains a brief description and known issues • <code>syncore_counter.v</code> – Verilog library file required to generate counter model • <code>testbench.v</code> – Verilog testbench file for testing the counter model • <code>instantiation_file.vin</code> – describes how to instantiate the wrapper file • <code>component.v</code> – counter model wrapper file generated by SYNCORE <p>Note that running the wizard in the same directory overwrites any existing files.</p>
Filename	Specifies the name of the generated file containing the HDL description of the generated counter. Do not use spaces.
Width of Counter	Determines the counter width (the corresponding file parameter is <code>COUNT_WIDTH=n</code>).
Counter Step Value	Determines the counter step value (the corresponding file parameter is <code>STEP=n</code>).
Up Counter	Specifies an up counter (the default) configuration (the corresponding file parameter is <code>MODE=Up</code>).
Down Counter	Specifies a down counter configuration (the corresponding file parameter is <code>MODE=Down</code>).
UpDown Counter	Specifies a dynamic up/down counter configuration (the corresponding file parameter is <code>MODE=Dynamic</code>).

SYNCore Counter Parameters Page 2

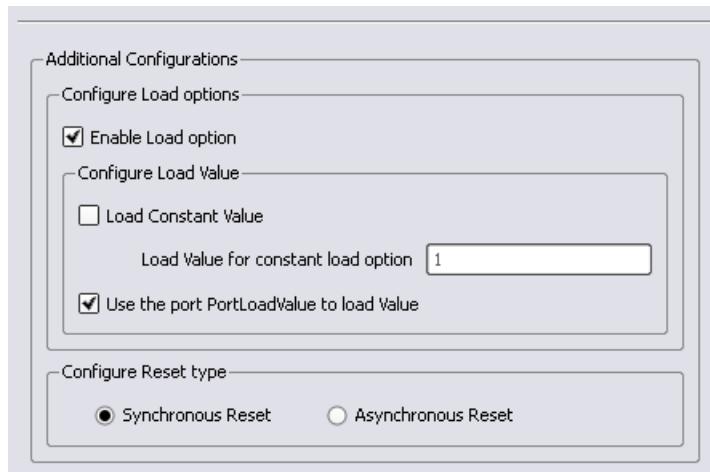

Enable Load option	Enables the load options
Load Constant Value	Load the constant value specified in the Load Value for constant load option field; (the corresponding file parameter is LOAD=1).
Load Value for constant load option	The constant value to be loaded.
Use the port PortLoadValue to load Value	Loads variable value from PortLoadValue (the corresponding file parameter is LOAD=2).
Synchronous Reset	Specifies a synchronous (the default) reset input (the corresponding file parameter is MODE=0).
Asynchronous Reset	Specifies an asynchronous reset input (the corresponding file parameter is MODE=1).

Configure and Launch VCS Simulator Command

The Configure and Launch VCS Simulator command enables you to launch VCS simulation from within the Synopsys FPGA synthesis tools. Additionally, configuration information, such as libraries and options can be specified on the Run VCS Simulator dialog box before running VCS simulation. You can launch this simulation tool from the synthesis tools on Linux platforms only.


For a step-by-step procedure on setting up and launching this tool, see [Simulating with the VCS Tool, on page 655](#).

The Run VCS *SimulationType* Simulation dialog box contains unique pages for specific tasks, such as specifying simulation type, VCS options, and libraries or test bench files. From this dialog box:

- Choose a category, which simplifies the data input for each task.
- A task marked with (✓) means that data has automatically been filled in; however, an (●) requires that data must be filled in.
- You are prompted to save, after canceling changes made in the dialog box.

Simulation Type

The following dialog box displays the Simulation Type task.

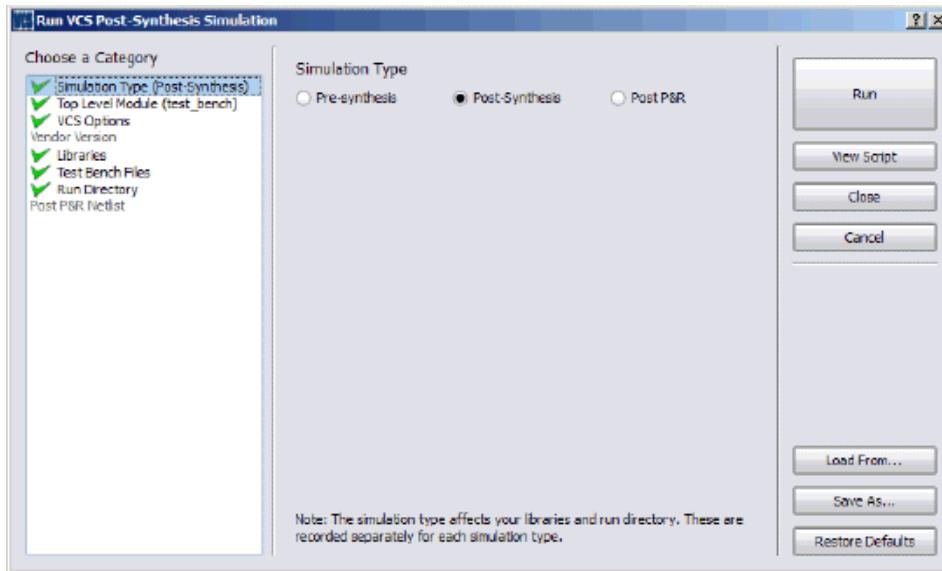


The Run VCS Simulator dialog box contains the following options:

Command	Description
Choose a Category Simulation Type	Select Simulation Type and choose the type of simulation to run: <ul style="list-style-type: none">• Pre-synthesis – RTL simulation• Post-synthesis – Post-synthesis netlist simulation• Post-P&R – Post-P&R netlist simulation See Simulation Type, on page 430 to view the dialog box.
Choose a Category Top Level Module	Select Top Level Module and specify the top-level VCS module or modules for simulation. You can use any combination of the semi-colon (;), comma (,), or a space to separate multiple top-level modules. See Top Level Module, on page 433 to view the dialog box.
Choose a Category VCS Options	Select VCS Options and specify options for each VCS step: <ul style="list-style-type: none">• Verilog compiler – VLOGAN command options for compiling and analyzing Verilog, such as the -q option.• VHDL compiler – VHDLAN options for compiling and analyzing VHDL.• Elaboration – VCS command options. The default setting is -debug_all.• Simulation – SIMV command options. The default setting is -gui. The default settings use the FPGA version of VCS and open the VCS GUI for the debugger (DBE) and the waveform viewer. See VCS Options, on page 434 to view the dialog box.
Choose a Category Libraries	Select Libraries and specify library files typically used for Post-synthesis or Post-P&R simulation. These library files are automatically populated in the display window. You can choose to: <ul style="list-style-type: none">• Add a library• Edit the selected library• Remove the selected library See Libraries, on page 435 and Changing Library and Test Bench Files, on page 437 for more information.

Command	Description
Choose a Category Test Bench Files	Select Test Bench Files and specify the test bench files typically used for Post-synthesis or Post-P&R simulation. These test bench files are automatically populated in the display window. You can choose to: <ul style="list-style-type: none">• Add a test bench file• Edit the selected test bench file• Remove the selected test bench file See Test Bench Files, on page 435 and Changing Library and Test Bench Files, on page 437 for more information.
Choose a Category Run Directory	Select Run Directory and specify the results directory to run the VCS simulation. See Run Directory, on page 436 to view the dialog box.
Choose a Category Post P&R Netlist	Select Post P&R Netlist and specify the post place-and-route netlist to run the VCS simulation. See Post P&R Netlist, on page 436 to view the dialog box.
Run	Runs VCS simulation.
View Script	View the script file with the specified VCS commands and options before generating it. For an example, see VCS Script File, on page 438 .
Load From	Use this option to load an existing VCS script.
Save As	Generates the VCS script. The tool generates the XML script in the directory specified.
Restore Defaults	Restores all the default VCS settings.


Top Level Module

The following dialog box displays the Top Level Module task.

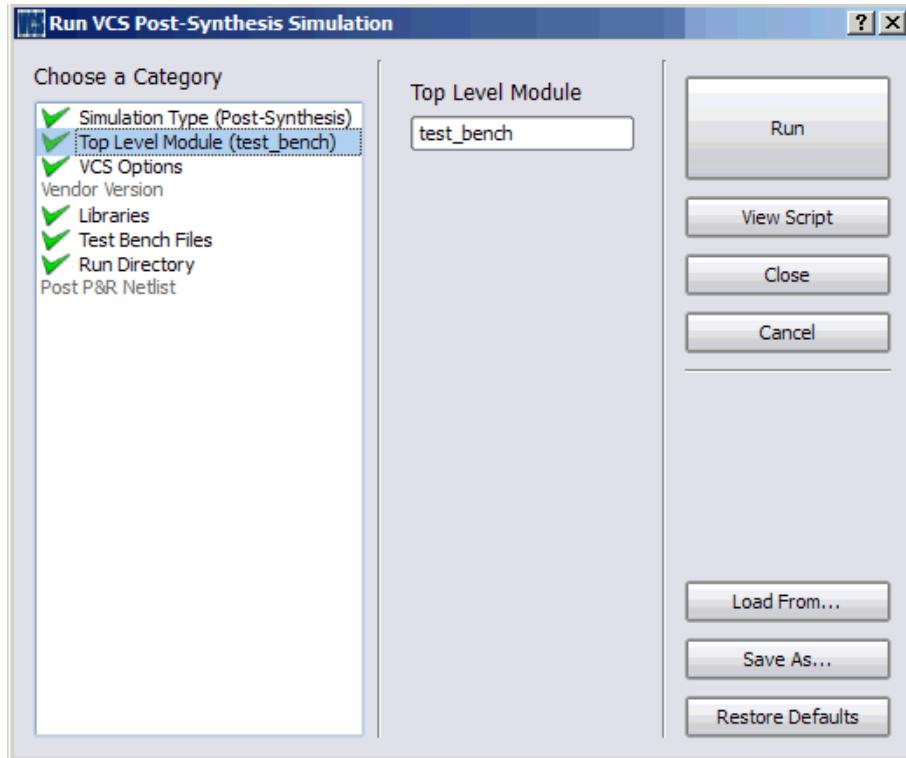


VCS Options

The following dialog box displays the VCS Options task.

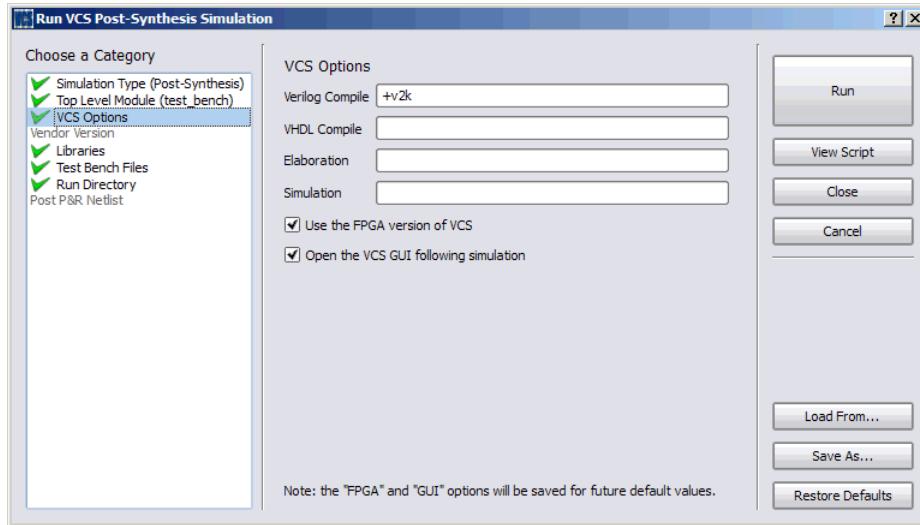


Vendor Version

The following dialog box displays the Vendor Versions task.

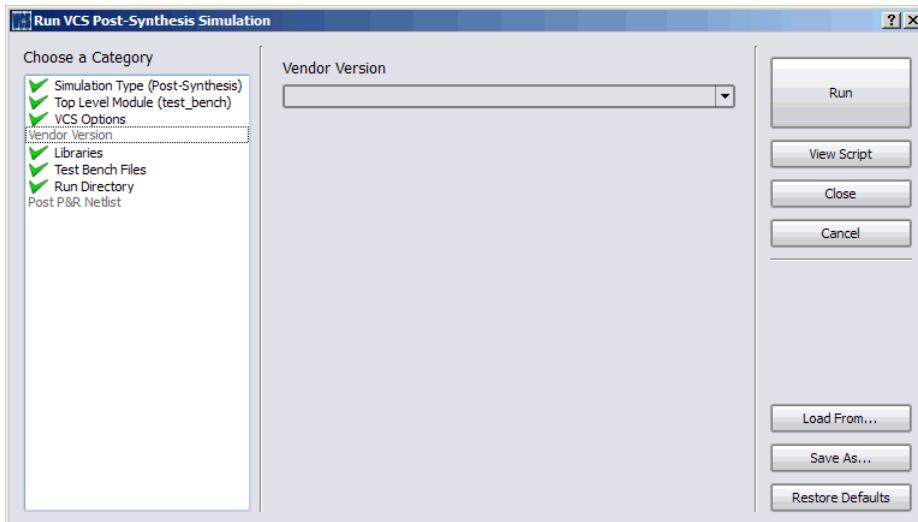


Libraries

The following dialog box displays the Libraries task.

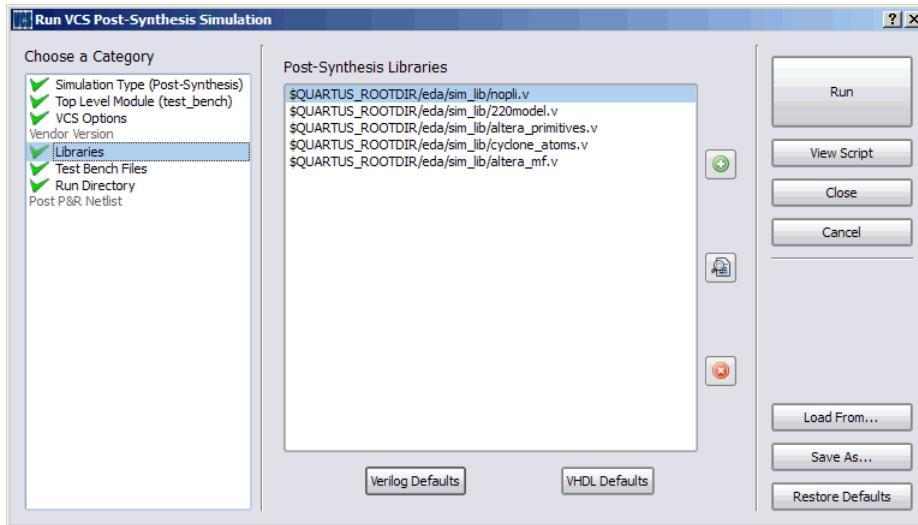


Test Bench Files

The following dialog box displays the Test Bench Files task.

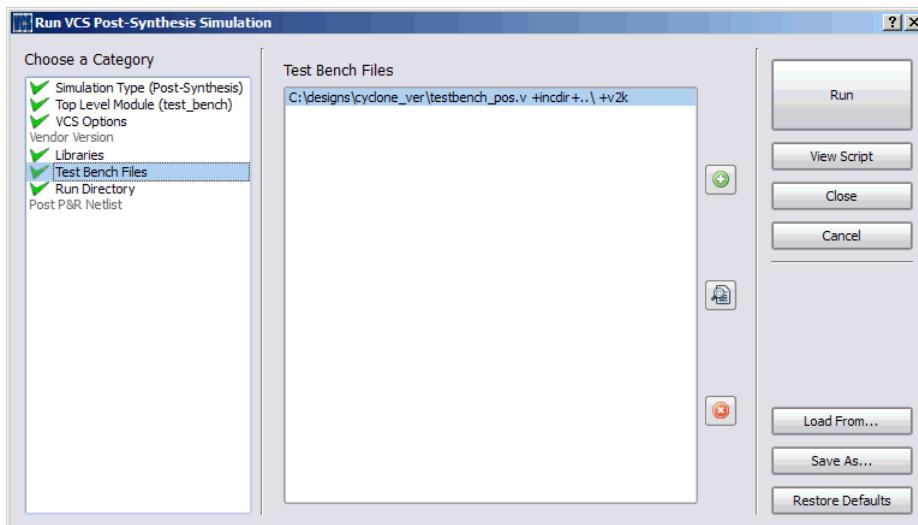


Run Directory

The following dialog box displays the Run Directory task.

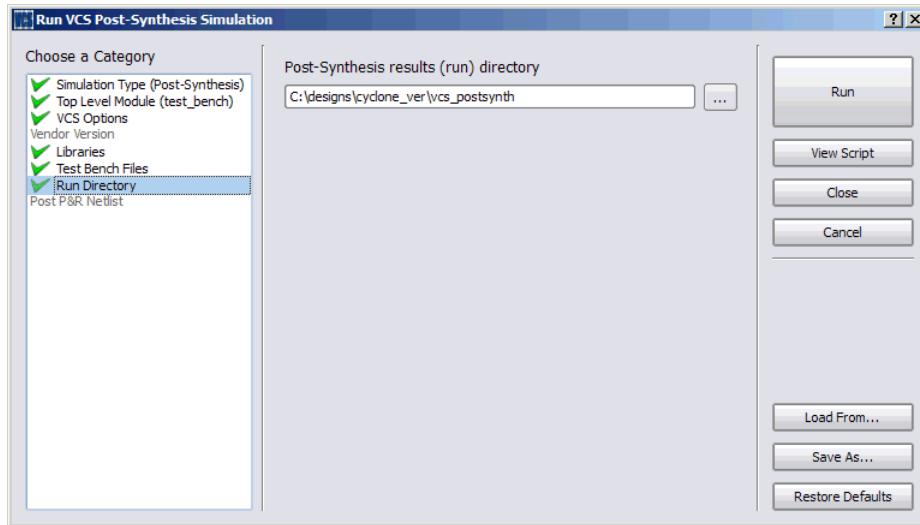


Post P&R Netlist

The following dialog box displays the Post P&R Netlist task.

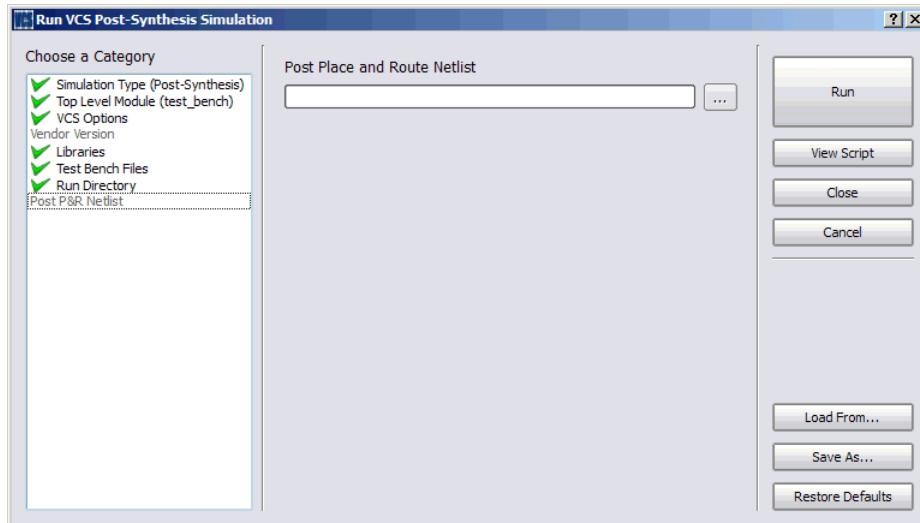


Changing Library and Test Bench Files

You can add Post-synthesis or Post place-and-route library files and test bench files before you launch the VCS simulator. For example, specify options on the following dialog box.

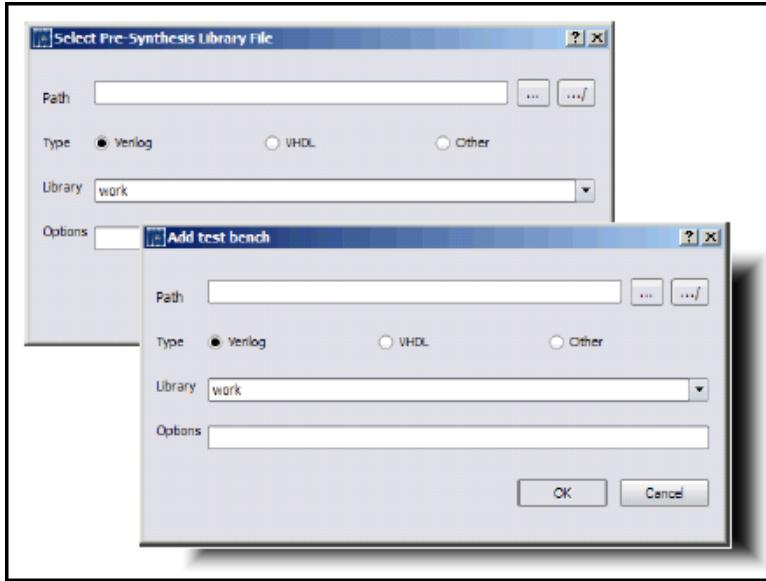


You can also edit library files and test bench files before you launch the VCS simulator. For example: specify options on the following dialog box.

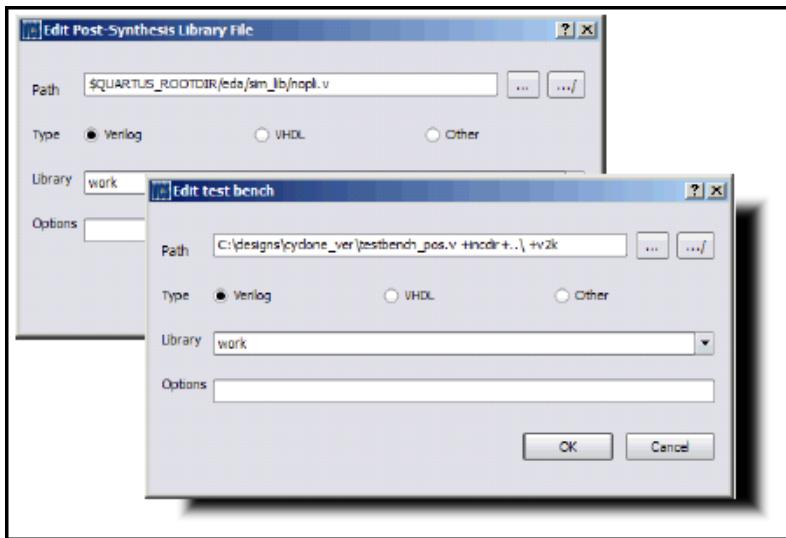

VCS Script File

When you select the VCS Script button on the Run VCS Simulator dialog box, you can view the VCS script generated by the synthesis software for this VCS run. You can also save this VCS script to a file by clicking on Save a Copy.

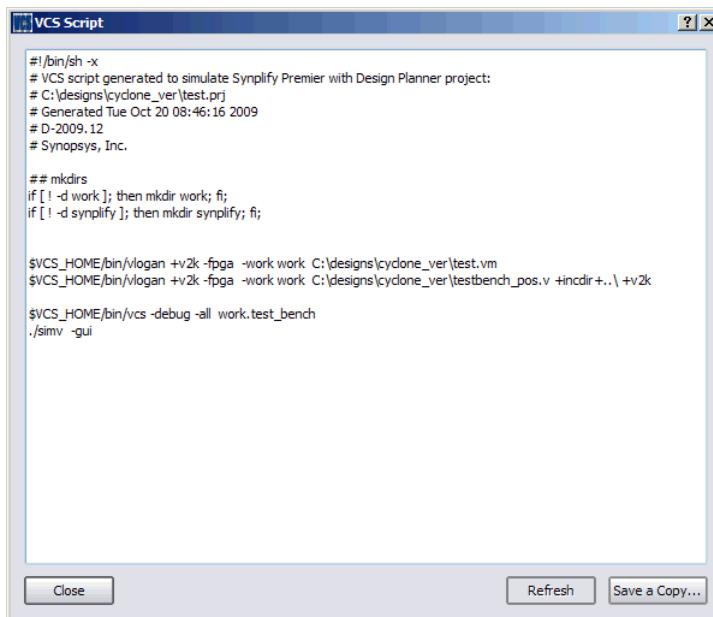

The screenshot shows a window titled "VCS Script". The window contains a text area with the following content:

```
#!/bin/sh -x
# VCS script generated to simulate Synplify Premier with Design Planner project:
# C:\designs\cyclone_ver\test.prj
# Generated Tue Oct 20 08:46:16 2009
# D-2009.12
# Synopsys, Inc.

## mkdirs
if [ ! -d work ]; then mkdir work; fi;
if [ ! -d synplify ]; then mkdir synplify; fi;

$VCS_HOME/bin/vlogan +v2k -fpga -work work C:\designs\cyclone_ver\test.vm
$VCS_HOME/bin/vlogan +v2k -fpga -work work C:\designs\cyclone_ver\testbench_pos.v +incdir+.. \ +v2k

$VCS_HOME/bin/vcs -debug -all work.test_bench
./simv -gui
```

At the bottom of the window, there are three buttons: "Close", "Refresh", and "Save a Copy...".


Analysis Menu

When you synthesize a design, a default timing report is automatically written to the log file (*projectName.srr*), located in the results directory. This report provides a clock summary, I/O timing summary, and detailed critical path information for the design. However, you can also generate a custom timing report that provides more information than the default report (specific paths or more than five paths) or one that provides timing based on additional analysis constraint files without rerunning synthesis.

Command	Description
Timing Analyst	<p>Displays the Timing Report Generation dialog box to specify parameters for a stand-alone customized report. See Timing Report Generation Parameters, on page 441 for information on setting these options, and Analyzing Timing in Schematic Views, on page 376 for more information.</p> <p>If you click OK in the dialog box, the specified parameters are saved to a file. To run the report, click Generate. The report is created using your specified parameters.</p>
Generate Timing	<p>Generates and displays a report using the timing option parameters specified above. See the following:</p> <ul style="list-style-type: none">• Generating Custom Timing Reports with STA, on page 383 for specifics on how to run this report.• Timing Report Generation Parameters, on page 441 for information on setting parameters for the report. This includes information on filtering and options for running backannotation data and power consumption reports.

Timing Report Generation Parameters

You can use the Analysis->Timing Analyst command to specify parameters for a stand-alone timing report. See [Timing Reports, on page 165](#) for information on the file contents.

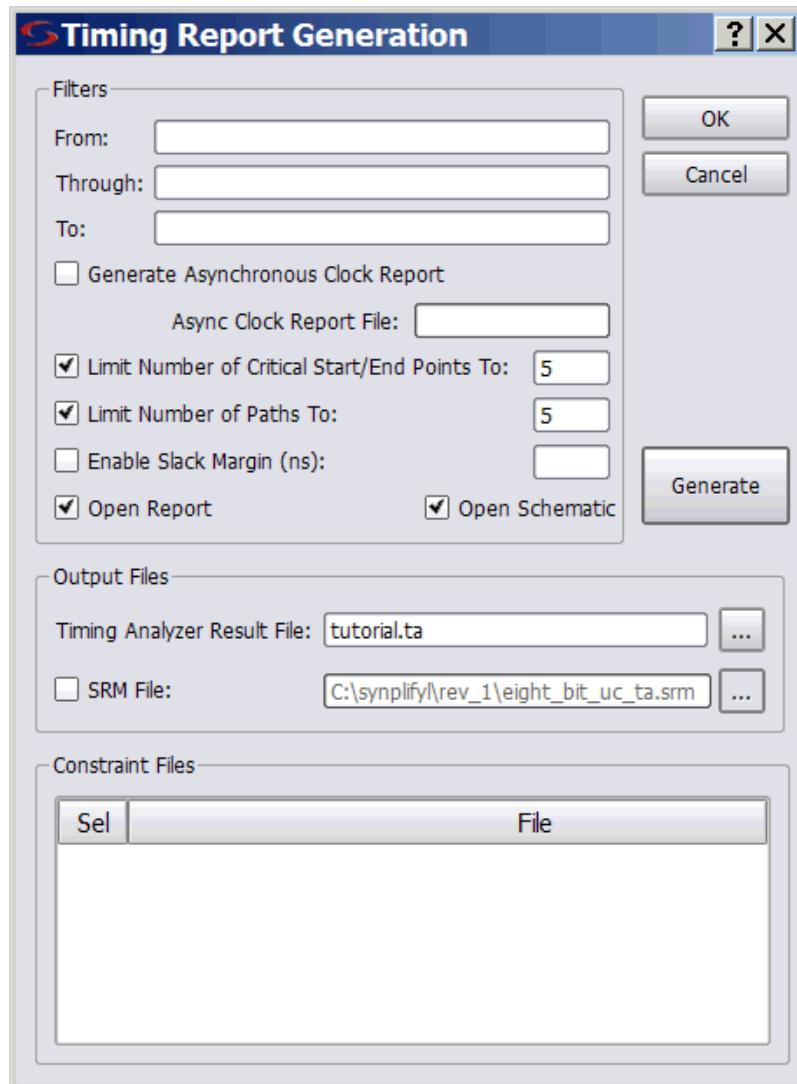

The following table provides brief descriptions of the parameters for running a stand-alone timing report.

Timing Report Option Description

From or To	<p>Specifies the starting (From) or ending (To) point of the path for one or more objects. It must be a timing start point (From) or end (To) point for each object. Use this option in combination with the others in the Filters section of the dialog box. See Combining Path Filters for the Timing Analyzer, on page 445 for examples of using filters.</p> <p>Tcl equivalent: <code>set_option -reporting_filter "-from {object1} -to {object2}"</code></p>
Through	<p>Reports all paths through the specified point or list of objects. See for more information on using this filter. Use this option in combination with the others in the Filters section of the dialog box. See the following for additional information:</p> <ul style="list-style-type: none"> • Timing Analyzer Through Points, on page 444 • Combining Path Filters for the Timing Analyzer, on page 445. <p>Tcl equivalent: <code>set_option -reporting_filter "-from {object1} -to {object2} -through {object3}"</code></p>
Generate Asynchronous Clock Report	<p>Generates a report for paths that cross between clock groups. Generally paths in different clock groups are automatically handled as false paths. This option provides a file that contains information on each of the paths and can be viewed in a spreadsheet. This file is in the results directory (<i>projectName_async_clk.rpt.csv</i>). For details on the report, see Asynchronous Clock Report, on page 172.</p> <p>Tcl equivalent: <code>set_option -reporting_async_clock 0 1</code></p>
Limit Number of Critical Start/End Points to	<p>Specifies the maximum number of start/end paths to display for critical paths in the design. The default is 5. Use this option in combination with the others in the Filters section of the dialog box.</p> <p>Tcl equivalent: <code>set_option -num_startend_points numberOfRowsPaths</code></p>
Limit Number of Paths to	<p>Specifies the maximum number of paths to report. The default is 5. Use this option in combination with the others in the Filters section of the dialog box.</p> <p>Tcl equivalent: <code>set_option -reporting_number_paths numberOfRowsPaths</code></p>

Timing Report Option Description

Enable Slack Margin (ns)	Limits the report to paths within the specified distance of the critical path. Use this option in combination with the others in the Filters section of the dialog box. Tcl equivalent: <code>set_option -reporting_margin slackValue</code>
Open Report	When enabled, clicking the Generate button opens the Text Editor on the generated custom timing report specified in the timing report file (ta).
Open Schematic	When enabled, clicking the Generate button opens a Technology view showing the netlist specified in the timing report netlist file (srm). Tcl equivalent: <code>set_option -reporting_output_srm 0 1</code>
Output Files	<p>Displays the name of the generated report:</p> <ul style="list-style-type: none"> • Async Clock Report File contains the spreadsheet data for the asynchronous clock report. This file is not automatically opened when report generation is complete. You can locate this file in the results directory. Default name is <i>projectName_async_clk.rpt.csv</i> (name cannot be changed). <p>Tcl equivalent: <code>set_option -reporting_async_clock 0 1</code></p> <ul style="list-style-type: none"> • Timing Analyst Results File is the standard timing report file, located in the Implementation Results directory. The file is also listed in the Project view. Default filename is <i>projectName.ta</i>. <p>Tcl equivalent: <code>set_option -reporting_filename filename.ta</code></p> <ul style="list-style-type: none"> • SRM File updates the Technology view so that you can display the results of the timing updates in the HDL and Physical Analyst tools. The file is also listed in the Project view. <p>Tcl equivalent: <code>set_option -reporting_netlist filename</code></p> <p>For more details on any of these reports, see Timing Reports, on page 165.</p>
Constraint Files	Enables analysis design constraint files (adc) to be used for stand-alone timing analysis only. See Input Files, on page 146 for information on this file.
Generate	Clicking this button generates the specified timing report file and timing view netlist file (srm) if requested, saves the current dialog box entries for subsequent use, then closes the dialog box.

Timing Analyzer Through Points

You can specify through points for nets (n:), hierarchical ports (t:), or instantiated cell pins (t:). You can specify the through points in two ways:

- OR list Enter the points as a space-separated list. The points are treated as an OR list and paths are reported if they cross any of the points in the list. For example, when you type the following, the tool reports paths that pass through points b or c:

{n:b n:c}

See [Filtering Points: OR List of Through Points, on page 444](#).

- AND list Enter the points in a product of sums (POS) format. The tool treats them as an AND list, and only reports the path if it passes through all the points in the list. The POS format for the timing report is the same as for timing constraints. The POS format is as follows:

{n:b n:c}, {n:d n:e}

This constraint translates as follows:


b AND d
OR b AND e
OR c AND d
OR c AND e

See [Filtering Points: AND List of Through Points, on page 445](#).

See [Defining From/To/Through Points for Timing Exceptions, on page 166](#) in the *User Guide* for more information about specifying through points.


Filtering Points: OR List of Through Points

This example reports the five worst paths through port bdpol or net aluout. You can enter the through points as a space-separated list (enclosing the list in braces is optional.)

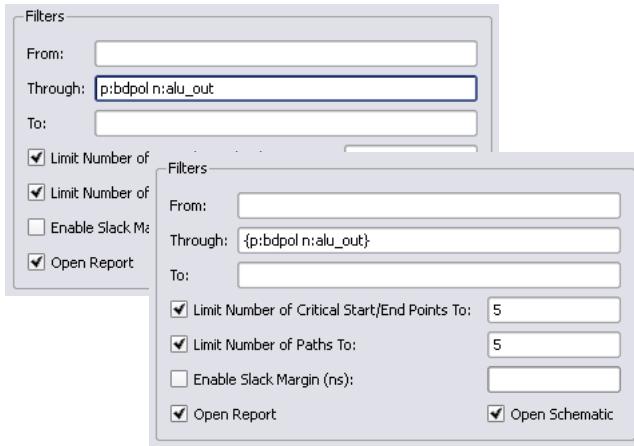

Filtering Points: AND List of Through Points

This example reports the five worst paths passing through port bdpol and net aluout. Enclose each list in braces {} and separate the lists with a comma.

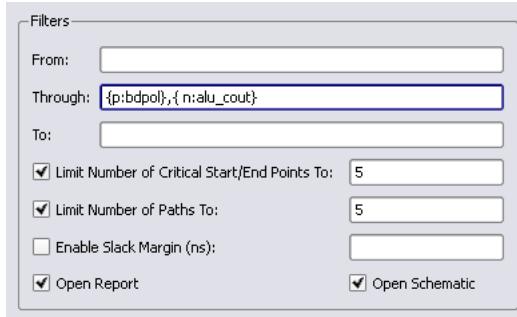

Combining Path Filters for the Timing Analyzer

This section describes how to use a combination of path filters to specify what you need and how to specify start and end points for path filtering.

Number and Slack Path Filters

The Limit Number of Paths To option specifies the maximum number of paths to report and the Enable Slack Margin option limits the report to output only paths that have a slack value that is within the specified value. When you use these

two options together, the tighter constraint applies, so that the actual number of paths reported is the minimum of the option with the smallest value. For example, if you set the number of paths to report to 10 and the slack margin for 1 ns, if the design has only five paths within 1 ns of critical, then only five paths are reported (not the 10 worst paths). But if, for example, the design has 15 paths within a 1 ns of critical, only the first 10 are reported.

From/To/Through Filters

You can specify the from/to points for a path. You can also specify just a from point or just a to point. The from and to points are one or more hierarchical names that specify a port, register, pin on a register, or clock as object (clock alias). Ports and instances can have the same names, so prefix the name with p: for top-level port, i: for instance, or t: for hierarchical port or instance pin. However, the c: prefix for clocks is required for paths to be reported.


The timing analyst searches for the from/to objects in the following order: clock, port, bit port, cell (instance), net, and pin. Always use the prefix qualifier to ensure that all expected paths are reported. Remember that the timing analyst stops at the first occurrence of an object match. For buses, all possible paths from the specified start to end points are considered.

You can specify through points for nets, cell pins, or hierarchical ports.


You can simply type in from/to or through points. You can also cut-and-paste or drag-and-drop valid objects from the RTL or Technology views into the appropriate fields on the Timing Report Generation dialog box. Timing analysis requires that constraints use the Tech View name space. Therefore, it is recommended that you cut-and-paste or drag-and-drop objects from the Technology view rather than the RTL view.

The following examples show how to specify start, end, or through point combinations for path filtering.


Filtering Points: Single Register to Single Register

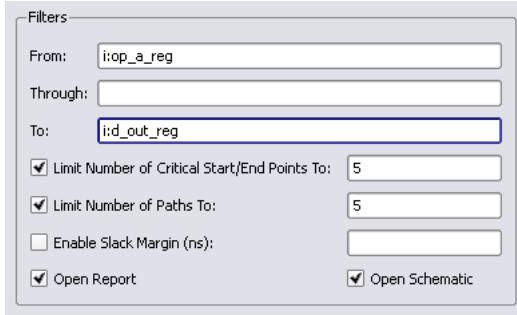

Filtering Points: Clock Object to Single Register

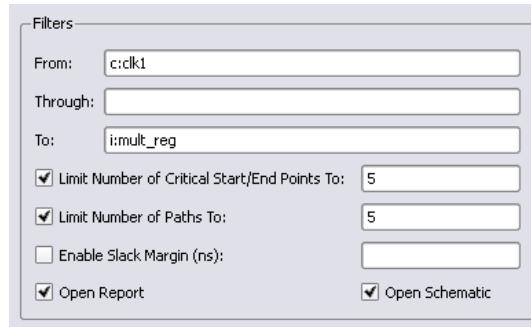

Filtering Points: Single Bit of a Bus to Single Register

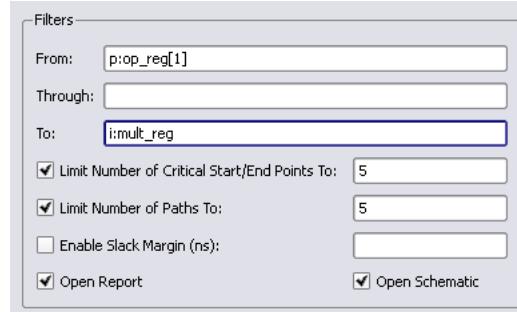

Filtering Points: Single Bit of a Bus to Single Bit of a Bus

Filters

From: p:op_reg[4]

Through:

To: p:d_out_reg[6]

Limit Number of Critical Start/End Points To: 5

Limit Number of Paths To: 5

Enable Slack Margin (ns):

Open Report Open Schematic

Filtering Points: Multiple Bits of a Bus to Multiple Bits of a Bus

Filters

From: p:op_a_reg[7:0]

Through:

To: p:d_out_reg[15:0]

Limit Number of Critical Start/End Points To: 5

Limit Number of Paths To: 5

Enable Slack Margin (ns):

Open Report Open Schematic

Filtering Points: With Hierarchy

This example reports the five worst paths for the net foo:

Filters

From: i:nac_core.rxu_fifo.reg

Through:

To: i:nac_core.rxu_channel.reg


Limit Number of Critical Start/End Points To: 5

Limit Number of Paths To: 5

Enable Slack Margin (ns):


Open Report Open Schematic

Filtering Points: Through Point for a Net

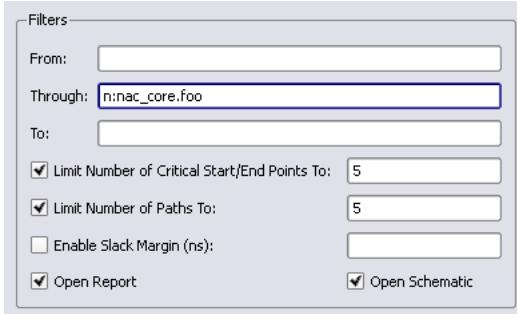

Filtering Points: Through Point for a Hierarchical Port

This example reports the five worst paths for the hierarchical port bdpol:

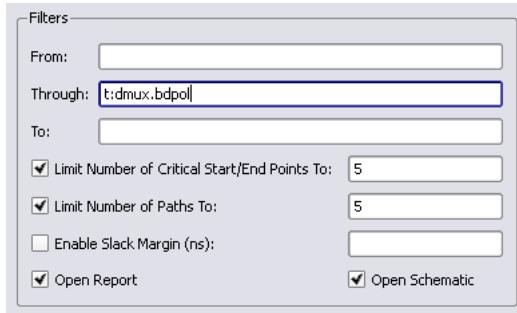

Examples Using Wildcards

You can use the question mark (?) or asterisk (*) wildcard characters for object searching and name substitution. These characters work the same way in the synthesis tool environment as in the Linux environment.

The ? Wildcard


The ? matches single characters. If a design has buses op_a[7:0], op_b[7:0], and op_c[7:0], and you want to filter the paths starting at each of these buses, specify the start points as op_?[7:0]. See [Example: ? Wildcard in the Name, on page 450](#) for another example.

The * Wildcard

The * matches a string of characters. In a design with buses op_a2[7:0], op_b2[7:0], and op_c2[7:0], where you want to filter the paths starting at each of these objects, specify the start points as op_*[*]. The report shows all paths beginning at each of these buses and for all of the bits of each bus. See [Example: * Wildcard in the Name \(With Hierarchy\), on page 451](#) and [Example: * Wildcard in the Bus Index, on page 451](#) for more examples.


Example: ? Wildcard in the Name

The ? is not supported in bus indices.

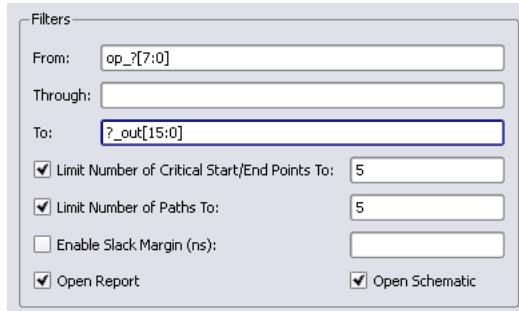


Example: * Wildcard in the Name (With Hierarchy)

This example reports the five worst paths, starting at block rxu_fifo and ending at block rxu_channel within module nac_core. Each register in the design has the characters reg in the name.

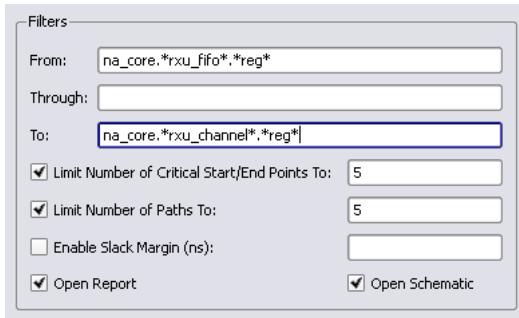

Example: * Wildcard in the Bus Index

This example reports the five worst paths, starting at op_b, and ending at d_out, taking into account all bits on these buses.

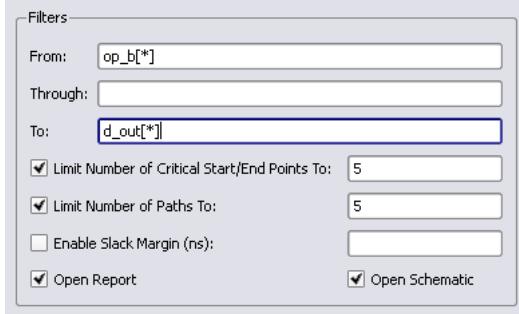

HDL Analyst Menu

In the Project View, the HDL Analyst menu contains commands that provide project analysis in the following views:

- [RTL View](#)
- [Technology View](#)

This section describes the HDL Analyst menu commands for the RTL and Technology views. Commands may be disabled, depending on the current context. Generally, the commands enabled in any context reflect those available in the corresponding popup menus. The descriptions in the table indicate when commands are context-dependent. For explanations about the terms used in the table, such as filtered and unfiltered, transparent and opaque, see [Filtered and Unfiltered Schematic Views, on page 88](#) and [Transparent and Opaque Display of Hierarchical Instances, on page 93](#). For procedures on using the HDL Analyst tool, see [Analyzing With the Standard HDL Analyst Tool, on page 352](#).

For ease of use, the commands have been divided into sections that correspond to the divisions in the HDL Analyst menu.

- [HDL Analyst Menu: RTL and Technology View Submenus, on page 452](#)
- [HDL Analyst Menu: Hierarchical and Current Level Submenus, on page 453](#)
- [HDL Analyst Menu: Filtering and Flattening Commands, on page 455](#)
- [HDL Analyst Menu: Timing Commands, on page 459](#)
- [HDL Analyst Menu: Analysis Commands, on page 459](#)
- [HDL Analyst Menu: Selection Commands, on page 463](#)
- [HDL Analyst Menu: FSM Commands, on page 463](#)

HDL Analyst Menu: RTL and Technology View Submenus

This table describes the commands that appear on the HDL Analyst->RTL and HDL Analyst->Technology submenus when the RTL or Technology View is active. For procedures on using these commands, see [Analyzing With the Standard HDL Analyst Tool, on page 352](#).

HDL Analyst Command	Description
 RTL->Hierarchical View	Opens a new, hierarchical RTL view. The schematic is unfiltered.
RTL->Flattened View	Opens a new RTL view of your entire design, with a flattened, unfiltered schematic at the level of generic logic cells. See Usage Notes for Flattening, on page 457 for some usage tips.
 Technology->Hierarchical View	Opens a new, hierarchical Technology view. The schematic is unfiltered.
Technology->Flattened View	Creates a new Technology view of your entire design, with a flattened, unfiltered schematic at the level of technology cells. See Usage Notes for Flattening, on page 457 for tips about flattening.
Technology->Flattened to Gates View	Creates a new Technology view of your entire design, with a flattened, unfiltered schematic at the level of Boolean logic gates. See Usage Notes for Flattening, on page 457 for tips about flattening.
Technology->Hierarchical Critical Path	Creates a new Technology view of your design, with a hierarchical, <i>filtered</i> schematic showing only the instances and paths whose slack times are within the slack margin you specified in the Slack Margin dialog. This command automatically enables HDL Analyst->Show Timing Information.
Technology->Flattened Critical Path	Creates a new Technology view of your design, with a flattened, <i>filtered</i> schematic showing only the instances and paths whose slack times are within the slack margin you specified in the Slack Margin dialog. This command automatically enables HDL Analyst->Show Timing Information. See Usage Notes for Flattening, on page 457 for tips about flattening.

HDL Analyst Menu: Hierarchical and Current Level Submenus

This table describes the commands on the HDL Analyst->Hierarchical and HDL Analyst->Current Level submenus. For procedures on using these commands, see [Analyzing With the Standard HDL Analyst Tool, on page 352](#).

HDL Analyst Command	Description
Hierarchical->Expand	<p>Expands paths from selected pins and/or ports up to the nearest objects on any hierarchical level, according to pin/port directions. The result is a <i>filtered</i> schematic. Operates hierarchically, on lower schematic levels as well as the current level.</p> <p>Successive Expand commands expand the paths further, based on the new current selection.</p>
Hierarchical->Expand to Register/Port	<p>Expands paths from selected pins and/or ports, in the port/pin direction, up to the next register, port, or black box. The result is a <i>filtered</i> schematic. Operates hierarchically, on lower schematic levels as well as the current level.</p>
Hierarchical->Expand Paths	<p>Shows all logic, on any hierarchical level, between two or more selected instances, pins, or ports. The result is a <i>filtered</i> schematic. Operates hierarchically, on lower schematic levels as well as the current level.</p>
Hierarchical->Expand Inwards	<p>Expands within the hierarchy of an instance, from the lower-level ports that correspond to the selected pins, to the nearest objects and no further. The result is a <i>filtered</i> schematic. Operates hierarchically, on lower schematic levels as well as the current level.</p>
Hierarchical->Goto Net Driver	<p>Displays the unfiltered schematic sheet that contains the net driver for the selected net. Operates hierarchically, on lower schematic levels as well as the current level.</p>
Hierarchical->Select Net Driver	<p>Selects the driver for the selected net. The result is a <i>filtered</i> schematic. Operates hierarchically, on lower schematic levels as well as the current level.</p>
Hierarchical->Select Net Instances	<p>Selects instances connected to the selected net. The result is a <i>filtered</i> schematic. Operates hierarchically, on lower schematic levels as well as the current level.</p>
Current Level->Expand	<p>Expands paths from selected pins and/or ports up to the nearest objects on the current level, according to pin/port directions. The result is a <i>filtered</i> schematic. Limited to all sheets on the current schematic level. This command is only available if a HDL Analyst view is open.</p> <p>Successive Expand commands expand the paths further, based on the new current selection.</p>

HDL Analyst Command	Description
Current Level->Expand to Register/Port	Expands paths from selected pins and/or ports, according to the pin/port direction, up to the next register, ports, or black box on the current level. The result is a <i>filtered</i> schematic. Limited to all sheets on the current schematic level.
Current Level->Expand Paths	Shows all logic on the current level between two or more selected instances, pins, or ports. The result is a <i>filtered</i> schematic. Limited to the current schematic level (all sheets).
Current Level->Goto Net Driver	Displays the unfiltered schematic sheet that contains the net driver for the selected net. Limited to all sheets on the current schematic level.
Current Level->Select Net Driver	Selects the driver for the selected net. The result is a <i>filtered</i> schematic. Limited to all sheets on the current schematic level.
Current Level->Select Net Instances	Selects instances on the current level that are connected to the selected net. The result is a <i>filtered</i> schematic. Limited to all sheets on the current schematic level.

HDL Analyst Menu: Filtering and Flattening Commands

This table describes the filtering and flattening commands on the HDL Analyst menu. For procedures on filtering and flattening, see [Analyzing With the Standard HDL Analyst Tool, on page 352](#).

HDL Analyst Command	Description
 Filter Schematic	Filters your entire design to show only the selected objects. The result is a <i>filtered</i> schematic. For more information about using this command, see Filtering Schematics, on page 356 . This command is only available with an open HDL Analyst view.

HDL Analyst Command	Description
Flatten Current Schematic (Unfiltered Schematic)	<p>In an unfiltered schematic, the command flattens the current schematic, at the current level and all levels below. In an RTL view, the result is at the generic logic level. In a Technology view, the result is at the technology-cell level. See the next table entry for information about flattening a filtered schematic.</p> <p>This command does not do the following:</p> <ul style="list-style-type: none">• Flatten your entire design (unless the current level is the top level)• Open a new view window• Take into account the number of Dissolve Levels defined in the Schematic Options dialog box <p>See Usage Notes for Flattening, on page 457 for tips.</p>

HDL Analyst Command	Description
Flatten Current Schematic (Filtered Schematic)	<p>In a filtered schematic, flattening is a two-step process:</p> <ul style="list-style-type: none">• Only unhidden transparent instances (including nested ones) are flattened in place, in the context of the entire design. Opaque and hidden hierarchical instances remain hierarchical. The effect of this command is that all hollow boxes with pale yellow borders are removed from the schematic, leaving only what was displayed inside them.• The original filtering is restored. <p>In an RTL view, the result is at the generic logic level. In a Technology view, the result is at the technology-cell level.</p> <p>This command does not do the following:</p> <ul style="list-style-type: none">• Flatten everything inside a transparent instance. It only flattens transparent instances and any nested transparent instances they contain.• Open a new view window.• Take into account the number of Dissolve Levels defined in the Schematic Options dialog box. <p>See Usage Notes for Flattening, on page 457 for usage tips.</p>
Unflatten Current Schematic	<p>Undoes any flattening operations and returns you to the original schematic, as it was before flattening and any filtering.</p> <p>This command is available only if you have explicitly flattened a hierarchical schematic using HDL Analyst->Flatten Current Schematic, for example. It is not available for flattened schematics created directly with the RTL and Technology submenus of the HDL Analyst menu.</p>

Usage Notes for Flattening

It is usually more memory-efficient to flatten only parts of your design, as needed. The following are a few tips for flattening designs with different commands. For detailed procedures, see [Flattening Schematic Hierarchy, on page 363](#).

RTL/Technology->Flattened View Commands

- Use Flatten Current Schematic to flatten only the current hierarchical level and below.
 - Flatten selected hierarchical instances with Dissolve Instances (followed by Flatten Current Schematic, if the schematic is filtered).
 - To make hierarchical instances transparent without flattening them, use Dissolve Instances in a filtered schematic. This shows their details nested inside the instances.
-

Flatten Current Schematic Command (Unfiltered View)

- Flatten selected hierarchical instances with Dissolve Instances.
 - To see the lower-level logic inside a hierarchical instance, push into it instead of flattening.
 - Selectively flatten your design by hiding the instances you do not need, flattening, and then unhiding the instances.
 - Flattening erases the history of displayed sheets for the current view. You can no longer use View->Back. You can, however, use UnFlatten Schematic to get an unflattened view of the design.
-

Flatten Current Schematic Command (Filtered View)

- Flatten selected hierarchical instances with Dissolve Instances, followed by Flatten Current Schematic.
 - Selectively flatten your design by hiding the instances you do not need, flattening, and then unhiding the instances.
 - Flattening erases the history of displayed sheets for the current view. You can no longer use View->Back. You can do the following:
 - Use View->Back for a view of the transparent instance flattened in the context of the entire design. This is the view generated after step 1 of the two-step flattening process described above. Use UnFlatten Schematic to get an unflattened view of the design.
-

HDL Analyst Menu: Timing Commands

This table describes the timing commands on the HDL Analyst menu. For procedures on using the timing commands, see [Analyzing With the Standard HDL Analyst Tool, on page 352](#).

HDL Analyst Command	Description
Set Slack Margin	Displays the Slack Margin dialog box, where you set the slack margin. HDL Analyst->Show Critical Path displays only those instances whose slack times are worse than the limit set here. Available only in a Technology view.
 Show Critical Path	Filters your entire design to show only the instances and paths whose slack times exceed the slack margin set with Set Slack Margin, above. The result is flat if the entire design was already flat. This command also enables Show Timing Information (see below). Available only in a Technology view.
Show Timing Information	When enabled, Technology view schematics are annotated with timing numbers above each instance. The first number is the cumulative path delay; the second is the slack time of the worst path through the instance. Negative slack indicates that timing has not met requirements. Available only in a Technology view. For more information, see Viewing Timing Information, on page 376 on the <i>User Guide</i> .

HDL Analyst Menu: Analysis Commands

This table describes the analysis commands on the HDL Analyst menu. For procedures on using the analysis commands, see [Analyzing With the Standard HDL Analyst Tool, on page 352](#).

HDL Analyst Command	Description
Isolate Paths	<p>Filters the current schematic to display only paths associated with all the pins of the selected instances. The paths follow the pin direction (from output to input pins), up to the next register, black box, port, or hierarchical instance.</p> <p>If the selected objects include ports and/or pins on unselected instances, the result also includes paths associated with those selected objects.</p> <p>The range of the operation is all sheets of a filtered schematic or just the current sheet of an unfiltered schematic. The result is always a filtered schematic.</p> <p>In contrast to the Expand operations, which add to what you see, Isolate Paths can only remove objects from the display. While Isolate Paths is similar to Expand to Register/Port, Isolate Paths reduces the display while Expand to Register/Port augments it.</p>
Show Context	Shows the original, unfiltered schematic sheet that contains the selected instance. Available only in a filtered schematic.
Hide Instances	<p>Hides the logic inside the selected hierarchical (non-primitive) instances. This affects only the active HDL Analyst view; the instances are not hidden in other HDL Analyst views.</p> <p>The logic inside hidden instances is not loaded (saving dynamic memory), and it is unrecognized by searching, dissolving, flattening, expansion, and push/pop operations. (Crossprobing does recognize logic inside hidden instances, however.) See Usage Notes for Hiding Instances, on page 462 for tips.</p>
Unhide Instances	Undoes the effect of Hide Instances: the selected hidden hierarchical instances become visible (susceptible to loading, searching, dissolving, flattening, expansion, and push/pop operations). This affects only the current HDL Analyst view; the instances are not hidden in other HDL Analyst views.

HDL Analyst Command	Description
Show All Hier Pins	Shows all pins on the selected transparent, non-primitive instances. Available only in a filtered schematic. Normally, transparent instance pins that are connected to logic that has been filtered out are not displayed. This command lets you display these pins that connect to logic that has been filtered out. Pins on primitives are always shown.
Dissolve Instances	Shows the lower-level details of the selected non-hidden hierarchical instances. The number of levels dissolved is determined by the Dissolve Levels value in the HDL Analyst Options dialog box (HDL Analyst Options Command, on page 477). For usage tips, see Usage Notes for Dissolving Instances, on page 462 .
Dissolve to Gates	<p>Dissolves the selected instances by flattening them to the gate level. This command displays the lower-level hierarchy of selected instances, but it dissolves technology primitives as well as hierarchical instances. Technology primitives are dissolved to generic synthesis symbols. The command is only available in the Technology view.</p> <p>The number of levels dissolved is determined by the Dissolve Levels value in the HDL Analyst Options dialog box (HDL Analyst Options Command, on page 477).</p> <p>Dissolving an instance one level redraws the current sheet, replacing the hierarchical dissolved instance with the logic you would see if you pushed into it using Push/pop mode. Unselected objects or selected hidden instances are not dissolved.</p> <p>The effect of the command varies:</p> <ul style="list-style-type: none"> In an unfiltered schematic, this command <i>flattens</i> the selected instances. This means the history of displayed sheets is removed. The resulting schematic is unfiltered. In a filtered schematic, this command makes the selected instances <i>transparent</i>, displaying their internal, lower-level logic inside hollow boxes. History is retained. You can use Flatten Schematic to flatten the transparent instances, if necessary. The resulting schematic is filtered.

Usage Notes for Hiding Instances

The following are a few tips for hiding instances. For detailed procedures, see [Flattening Schematic Hierarchy, on page 363](#).

- Hiding hierarchical instances soon after startup can often save memory. After the interior of an instance has been examined (by searching or displaying), it is too late for this savings.
- You can save memory by creating small, temporary working files: File->Save As .srs or .srm files does not save the hidden logic (hidden instances are saved as black boxes). Restarting the synthesis tool and loading such a saved file can often result in significant memory savings.
- You can selectively flatten instances by temporarily hiding all the others, flattening, then unhiding.
- You can limit the range of Edit->Find (see [Find Command \(HDL Analyst\), on page 332](#)) to prevent it looking inside given instances, by temporarily hiding them.

Usage Notes for Dissolving Instances

Dissolving an instance one level redraws the current sheet, replacing the hierarchical dissolved instance with the logic you would see if you pushed into it using Push/pop mode. Unselected objects or selected hidden instances are not dissolved. For additional information about dissolving instances, see [Flattening Schematic Hierarchy, on page 363](#).

The type (filtered or unfiltered) of the resulting schematic is unchanged from that of the current schematic. However, the effect of the command is different in filtered and unfiltered schematics:

- In an unfiltered schematic, this command flattens the selected instances. This means the history of displayed sheets is removed.
- In a filtered schematic, this command makes the selected instances transparent, displaying their internal, lower-level logic inside hollow boxes. History is retained. You can use Flatten Schematic to flatten the transparent instances, if necessary. This command is only available if an HDL Analyst view is open.

HDL Analyst Menu: Selection Commands

This table describes the selection commands on the HDL Analyst menu.

HDL Analyst Command	Description
Select All Schematic ->Instances ->Ports	Selects all Instances or Ports, respectively, on all sheets of the current schematic. All other objects are unselected. This does not select objects on other schematics.
Select All Sheet ->Instances ->Ports	Selects all Instances or Ports, respectively, on the current schematic sheet. All other objects are unselected.
Unselect All	Unselects all objects in all HDL Analyst views.

HDL Analyst Menu: FSM Commands

This table describes the FSM commands on the HDL Analyst menu.

HDL Analyst Command	Description
View FSM	Displays the selected finite state machine in the FSM Viewer. Available only in an RTL view.
View FSM Info File	Displays information about the selected finite state machine module, including the number of states, the number of inputs, and a table of the states and transitions. Available only in an RTL view.

Options Menu

Use the Options menu to configure the VHDL and Verilog compilers, customize toolbars, and set options for the Project view, Text Editor, and HDL Analyst schematics. When using certain technologies, additional menu commands let you run technology-vendor software from this menu.


The following table describes the Options menu commands.

Command	Description
Basic Options Menu Commands for all Views	
Configure VHDL Compiler	Opens the Implementation Options dialog box where you can set the top-level entity and the encoding method for enumerated types. State-machine encoding is automatically determined by the FSM compiler or FSM explorer, or you can specify it explicitly using the <code>syn_encoding</code> attribute. See Implementation Options Command, on page 364 .
Configure Verilog Compiler	Opens the Implementation Options dialog box where you can specify the top-level module and the include search path. See Implementation Options Command, on page 364 .
Toolbars	Lets you customize the toolbars.
Project View Options	Sets options for organizing files in the Project view. See Project View Options Command, on page 465 .
Editor Options	Sets your Text Editor syntax coloring, font, and tabs. See Editor Options Command, on page 470 .
P&R Environment Options	Displays the environmental variable options set for the place-and-route tool. See Place and Route Environment Options Command, on page 474 .

Command	Description
Configure 3rd Party Tool Options	Lets you invoke third-party tools, for example to modify the files generated or debug problems from EDK tools within the FPGA synthesis products. See Configure 3rd Party Tools Options Command, on page 474 .
Project Status Page Location	Saves the current project status to a location of your choice. See Project Status Page Location, on page 476 .
HDL Analyst Options	Sets display preferences for HDL Analyst schematics (RTL and Technology views). See HDL Analyst Options Command, on page 477 .

Project View Options Command

Select Options->Project View Options to display the Project View Options dialog box, where you define how projects appear and are organized in the Project view.

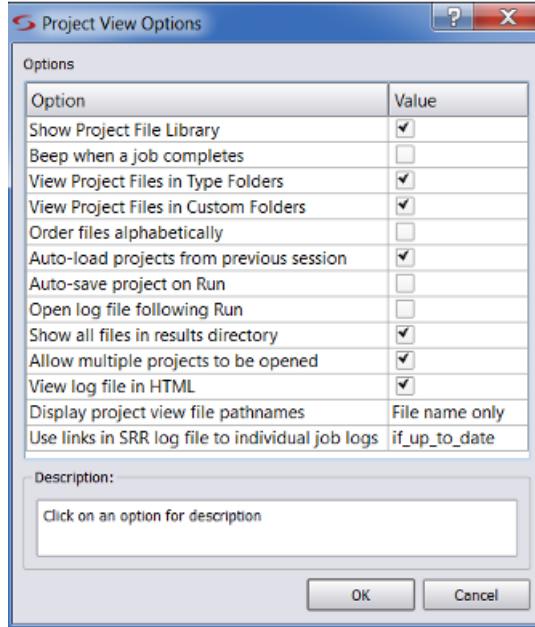


The following table describes the Project View Options dialog box features.

Field/Option	Description
Show Project File Library	<p>When enabled, displays the corresponding VHDL library next to each source VHDL filename, in the Project Tree view of the Project view. For example, with library dune, file pc.vhd is listed as [dune] pc.vhd if this option is enabled, and as pc.vhd if it is disabled.</p> <p>See also Set VHDL Library Command, on page 352, for how to change the library of a file.</p>
Beep when a job completes	<p>When enabled, sounds an audible signal whenever a project finishes running.</p>
View Project Files in Type Folders	<p>When enabled, organizes project files into separate folders by type. See View Project Files in Type Folders Option, on page 468 and add_file, on page 28.</p>
View Project Files in Custom Folders	<p>When enabled, allows you to view files contained within the custom folders created for the project. See View Project Files in Custom Folders Option, on page 468.</p>
Order files alphabetically	<p>When enabled, the software orders the files within folders alphabetically instead of in project order. You can also use the Sort Files option in the Project view.</p>
Autoload projects from previous session	<p>Enable/Disable automatically loading projects from the previous session. Otherwise, projects will not be loaded automatically. This option is enabled by default. See Loading Projects With the Run Command, on page 469.</p>
Auto-save project on Run	<p>Enable/Disable automatically saving projects when the Run button is selected. See Automatically Save Project on Run, on page 469.</p>
Open Log file following Run	<p>Enable/Disable automatically opening and displaying log file after a synthesis run.</p>
Show all files in results directory	<p>When enabled, shows all files in the Implementation Results view. When disabled, the results directory shows only files generated by the synthesis tool itself.</p>


Field/Option	Description
Allow multiple projects to be opened	When enabled, multiple projects are displayed at the same time. See Allow Multiple Projects to be Opened Option, on page 469 .
View log file in HTML	Enable/Disable viewing of log file report in HTML format versus text format. See Log File, on page 160 .
Project file name display	<p>From the drop-down menu, select one the following ways to display project files:</p> <ul style="list-style-type: none">• File name only• Relative file path• Full file path
Use links in SRR log file to individual job logs	<p>Determines if individual job logs use links in the srr log file. You can select:</p> <ul style="list-style-type: none">• off—appends individual job logs to the srr log file.• on—always link to individual job logs.• if_up_to_date—only links to individual job logs if the module is up-to-date.

View Project Files in Type Folders Option

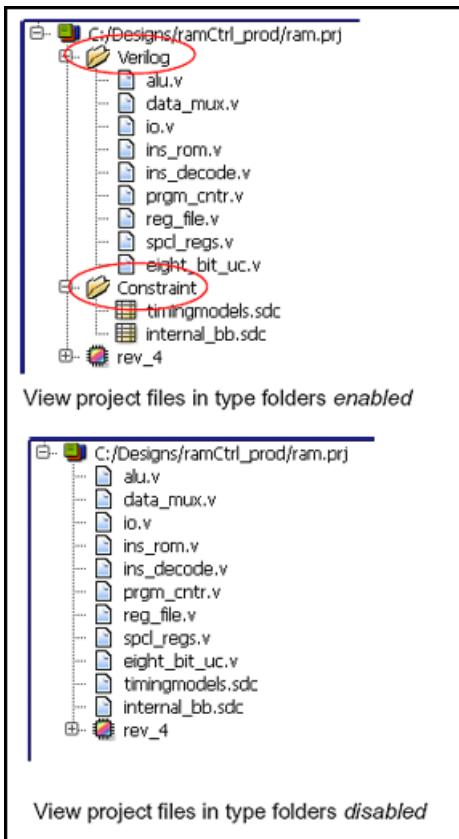


View Project Files in Custom Folders Option

Selecting this option enables you to view user-defined custom folders that contain a predefined subset of project files in various hierarchy groupings or organizational structures. Custom folders are distinguished by their blue color. For information on creating custom folders, see [Creating Custom Folders, on page 80](#) in the *User Guide*.

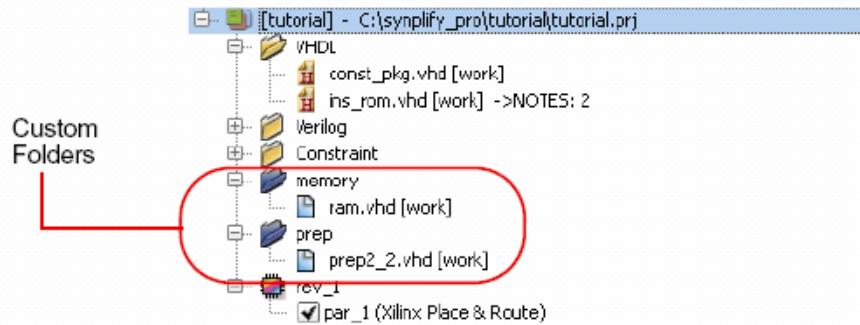

Allow Multiple Projects to be Opened Option

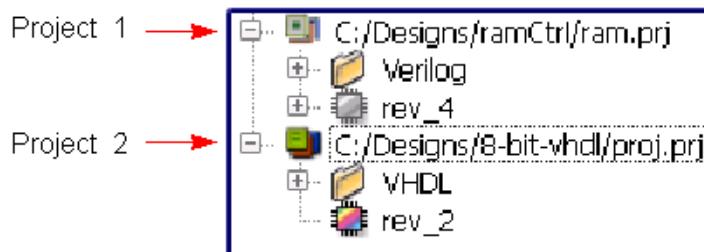

Loading Projects With the Run Command

When you load a project that includes the project -run command, a dialog box appears in the Project view with the following message:


Project run command encountered during project load. Are you sure you want to run?

You can reply with either yes or no.

Automatically Save Project on Run

If you have modified your project on the disk directory since being loaded into the Project view and you run your design, a message is generated that infers the UI is out-of-date.

The following dialog box appears with a message to which you must reply.

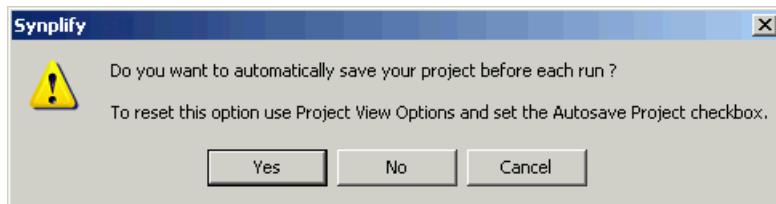


You can specify one of the following:

- Yes — The Auto-save project on Run switch on the Project View Options dialog box is automatically enabled, and then your design is run.
- No — The Auto-save project on Run switch on the Project View Options dialog box is not enabled, but your design is run.
- Cancel — Closes this message dialog box and does not run your design.

Editor Options Command

Select Options->Editor Options to display the Editor Options dialog box, where you select either the internal text editor or an external text editor.

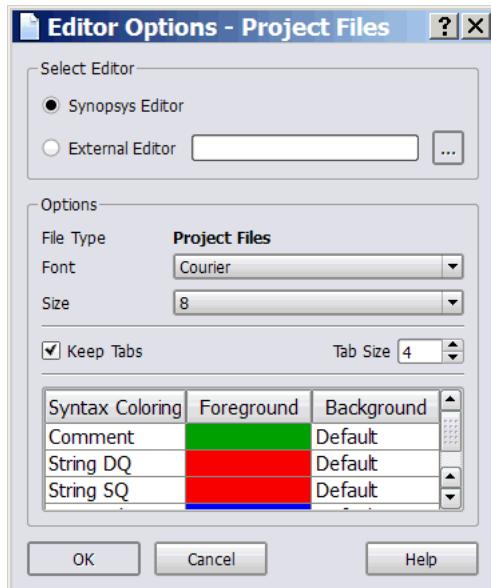


The following table describes the Editor Options dialog box features.

Feature	Description
Select Editor	Select an internal or external editor.
• Synopsys Editor	Sets the Synopsys text editor as the default text editor.
• External Editor	Uses the specified external text editor program to view text files from within the Synopsys tool. The executable specified must open its own window for text editing. See Using an External Text Editor, on page 53 for a procedure. <i>Note:</i> Files opened with an external editor cannot be crossprobed.
Options	Set text editing preferences.
• File Type	You can define text editor preferences for the following file types: project files, HDL files, log files, constraint files, and default files.
• Font	Lets you define fonts to use with the text editor.
• Font Size	Lets you define font size to use with the text editor.
• Keep Tabs	Lets you define whether to use tab settings with the text editor.
• Tab Size	
• Syntax Coloring	Lets you define foreground or background syntax coloring to use with the text editor. See Color Options, on page 471 .

Color Options

Click in the Foreground or Background field for the corresponding object in the Syntax Coloring field to display the color palette.

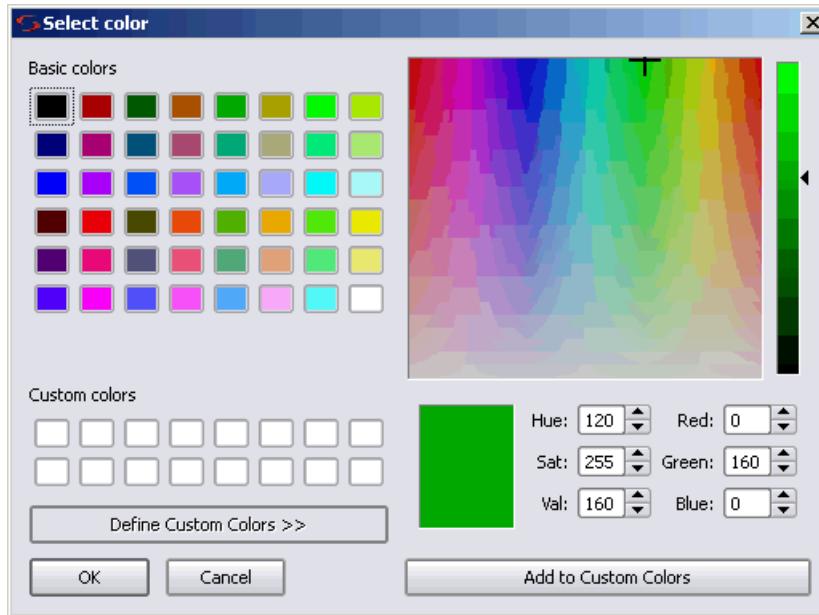


You can set syntax colors for some common syntax options listed in the following table.

Syntax	Description
Comment	Comment strings contained in all file types.
Error	Error messages contained in the log file.
Gates	Gates contained in HDL source files.
Info	Informational messages contained in the log file.
Keywords	Generic keywords contained in the project, HDL source, constraint, and log files.
Line Comment	Line comments contained in the HDL source, C, C++, and log files.
Note	Notes contained in the log file.
SDCKeyword	Constraint-specific keywords contained in the .sdc file.
Strength	Strength values contained in HDL source files.

Syntax	Description
String DQ	String values within double quotes contained in the project, HDL source, constraint, C, C++, and log files.
String SQ	String values within single quotes contained in the project, HDL source, constraint, C, C++, and log files.
SVKeyword	SystemVerilog keywords contained in the Verilog file.
Types	Type values contained in HDL source files.
Warning	Warning messages contained in the log file.

Place and Route Environment Options Command


Select Options->P&R Environment Options to display the environment variable options set for the place-and-route tool. This option allows you to change the specified location of the selected place-and-route tool set on your system; the software locates and runs this updated version of the P&R tool for the current session of the synthesis tool.

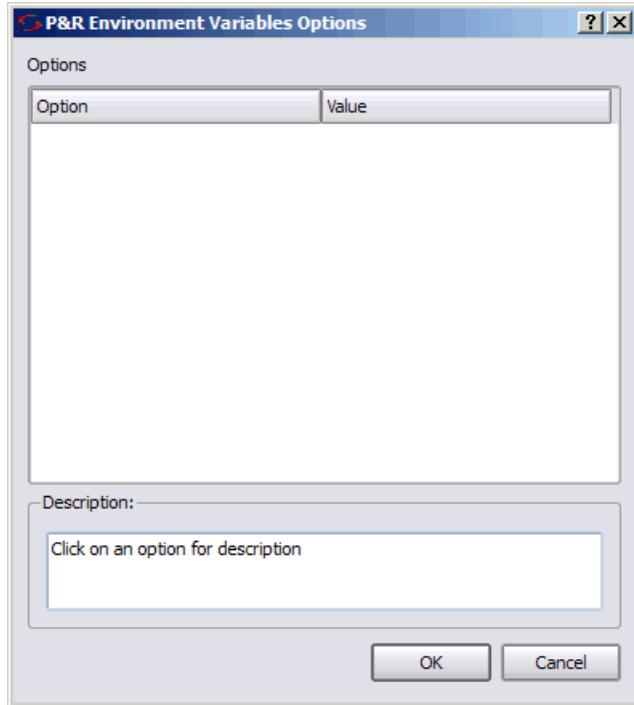

Configure 3rd Party Tools Options Command

Use the Configure 3rd Party Tools Option command to invoke third-party tools, such as the Embedded Development Kit (EDK) from within the Synopsys FPGA products. This allows you to modify source files or libraries added to your synthesis projects from within the third-party tool directly. Use the following dialog box to configure the location and common arguments for the tools.

For more information, see [Invoking Third-Party Vendor Tools, on page 646](#)

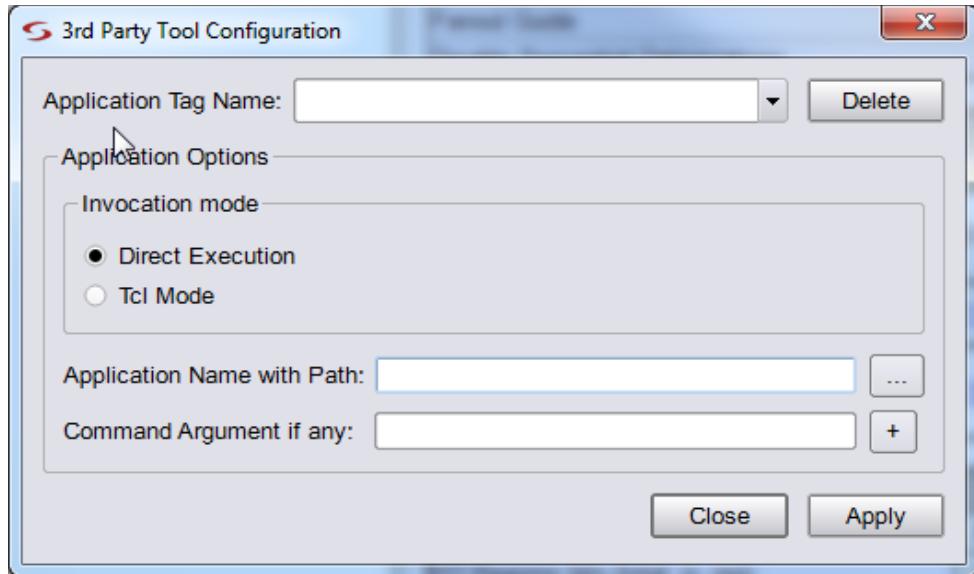


The 3rd Party Tool Configuration dialog box includes the following options:

Feature	Description
Application Tag Name	Specifies an application or Tcl procedure name. Type in the name or select a preconfigured application from the list.
Direct Execution	Sets up the direct invocation of a third-party tool from within the FPGA synthesis tool, using the path defined for the executable in Application Name with Path.
Tcl Mode	Sets up the tool to execute the Tcl procedure from within the FPGA synthesis tool, using the path defined for the procedure in Tcl Procedure Name. You must execute this Tcl script from the Tcl window to register the invocation procedure for the third-party tool.
Application Name with Path	When using direct execution, specifies the path to the executable for the application.
Tcl Procedure Name	When using Tcl mode, specifies the Tcl procedure name.

Feature	Description
Command Argument if any	Defines any additional arguments for the third-party application. You can select arguments from the drop-down list or type them. Note: For internal Synopsys tools, you must include the \$Syncode parameter.
Procedure Arguments if any	Defines additional arguments for the Tcl procedure. You can select arguments from the drop-down list or type them.

Project Status Page Location

Lets you save the current project status to a location of your choice. You can then view the project status offline with any browser on a mobile device.

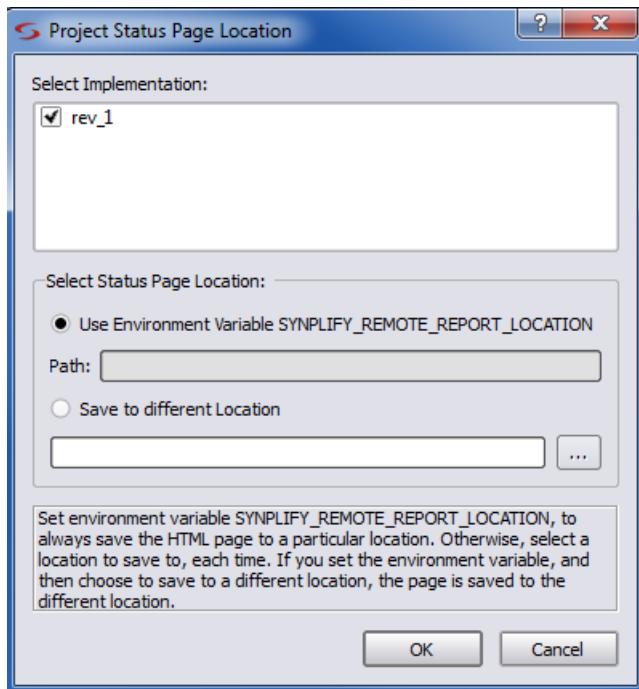


The following table describes the Project Status Page Location dialog box options.

Option	Description
Select Implementation	Select the implementation for the design for which you want synthesis results. You can select multiple implementations.
Select Status Page Location	<p>Select the location on your computer where you want to save the project status reports:</p> <ul style="list-style-type: none"><li data-bbox="189 463 628 489">• Use Environment Variable<li data-bbox="189 490 628 516"> SYNPLIFY_REMOTE_REPORT_LOCATION<li data-bbox="189 525 475 551">• Save to Different Location <p data-bbox="669 739 1210 787">For more information, see Accessing Results Remotely, on page 225 in the <i>User Guide</i>.</p>

HDL Analyst Options Command

Select Options->Schematic Options to display a dialog box where you define preferences for the New HDL Analyst schematic. For details see [Setting Schematic Preferences, on page 320](#) in the *User Guide*.

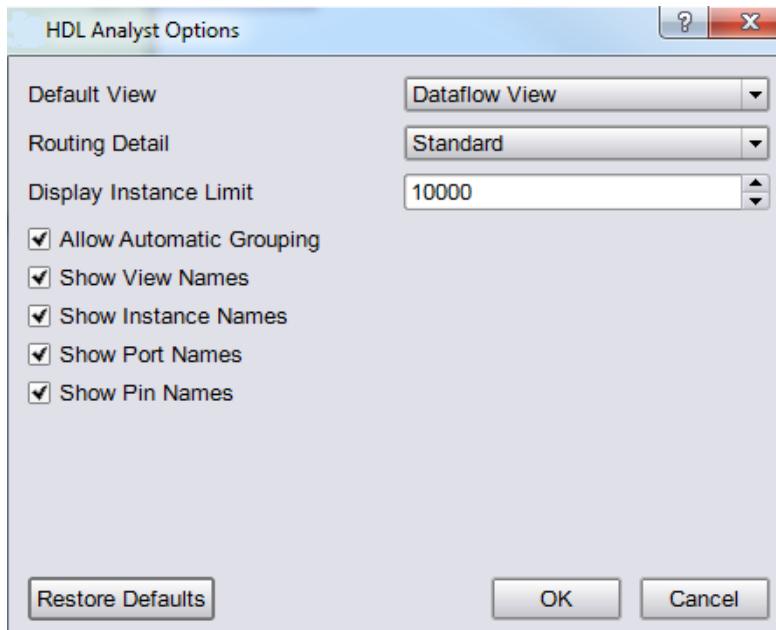

Field/Option	Description
Default View	Specify how you want the schematic views to display: <ul style="list-style-type: none"> • Clocks View - Displays all sequential elements connected to clock nets so that clocks in the design can be debugged. • Dataflow View - Displays objects from a left to right datapath flow. This is the default.
Routing Detail	Specify how the tool determines the detailed routing for the design: <ul style="list-style-type: none"> • Optimized • Detailed • Standard - This is the default. • Quick - Direct connections
Allow Automatic Grouping	When enabled, automatic grouping is performed.
Show View Names	When enabled, module names are displayed.
Show Instance Names	When enabled, instance names are displayed.

Field/Option	Description
Show Port Names	When enabled, port names are displayed.
Show Pin Names	When enabled, pin names are displayed.
Restore Defaults	Click this button to reset all options to their defaults.


Standard HDL Analyst Options Command

Select Options->HDL Analyst Options to display the HDL Analyst Options dialog box, where you define preferences for the HDL Analyst schematic views (RTL and Technology views). Some preferences take effect immediately, others only take effect in the next view that you open. For details, see [Setting Schematic Preferences, on page 320](#) in the *User Guide*.

For information about the options, see the following, which correspond to the tabs on the dialog box:

- [Text Panel, on page 479](#)
- [General Panel, on page 480](#)
- [Sheet Size Panel, on page 484](#)
- [Visual Properties Panel, on page 486](#)


Text Panel

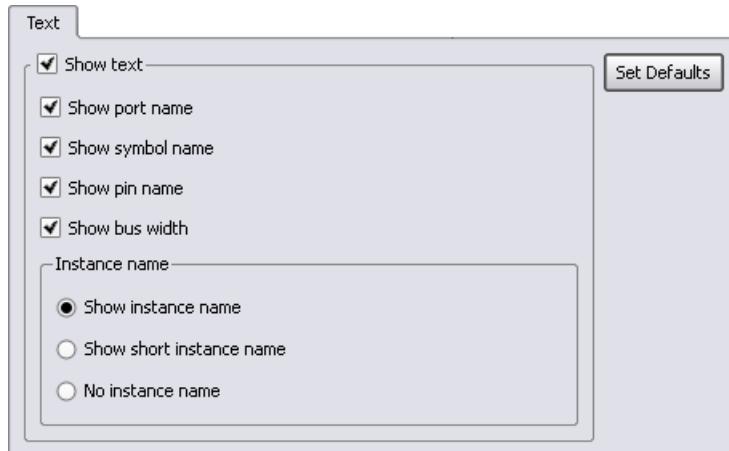

The following options are on the Text panel.

Field/Option	Description
Show text	Enables the selective display of schematic labels. Which labels are displayed is governed by the other Show * features and Instance name, described below.
Show port name	When enabled, port names are displayed.
Show symbol name	When enabled, symbol names are displayed.
Show pin name	When enabled, pin names are displayed.
Show bus width	When enabled, connectivity bit ranges are displayed near pins (in square brackets: []), indicating the bits used for each bus connection.
Instance name	Determines how to display instance names: <ul style="list-style-type: none"> • Show instance name • Show short instance name • No instance name
Set Defaults	Set the dialog box to display the default values.

General Panel

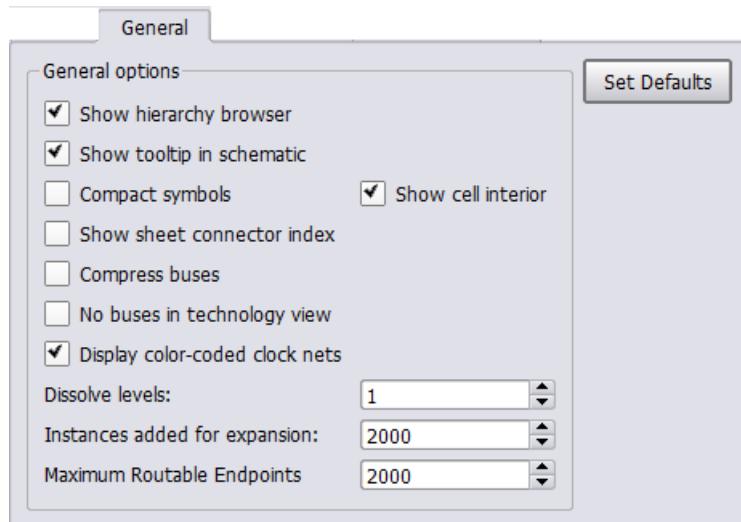


The following options are on the General panel.

Field/Option	Description
Show hierarchy browser	When enabled, a hierarchy browser is present at the left pane of RTL and Technology views.
Show tooltip in schematic	When enabled, displays tooltips that hover objects as you move over them in the RTL and Technology schematic views.
Compact symbols	When enabled, symbols are displayed in a slightly more compact manner, to save space in schematics. When this is enabled, Show cell interior is disabled.
Show cell interior	When enabled, the internal logic of cells that are technology-specific primitives (such as LUTs) is shown in Technology views. This is not available if Compact symbols is enabled.
Show sheet connector index	When enabled, sheet connectors show connecting sheet numbers – see Sheet Connectors, on page 91 .
Compress buses	When enabled, buses having the same source and destination instances are displayed as bundles, to reduce clutter. A single bundle can connect to more than one pin on a given instance. The display of a bundle of buses is similar to that of a single bus.
No buses in technology view	When enabled, buses are not displayed, they are only indicated as bits in a Technology View. This applies only to flattened views created by HDL Analyst->Technology->Flattened View (or Flattened to Gates View), not to hierarchical views that you have flattened (using, for example, HDL Analyst->Flatten Current Schematic).
Display color-coded clock nets	Displays clock nets in the HDL Analyst View with the color green. See Color-coded Clock Nets, on page 482 .

Field/Option	Description
Dissolve levels	The number of levels to dissolve, during HDL Analyst->Dissolve Instances. See Dissolve Instances, on page 461 .
Instances added for expansion	The maximum number of instances to add during any operation (such as HDL Analyst->Hierarchical->Expand) that results in a <i>filtered</i> schematic. When this limit is reached, you are prompted to continue adding more instances.
Maximum Routable Endpoints	<p>Specifies the maximum number of endpoints for nets, which the synthesis tool routes to their explicit connection endpoints in the design.</p> <p>The default value is set to 2000. You can use this option to change this value. For more information, see Results of Maximum Routable Endpoints in the HDL Analyst View, on page 482.</p>

Color-coded Clock Nets


Clock nets are displayed with the color green in the RTL and Technology views.

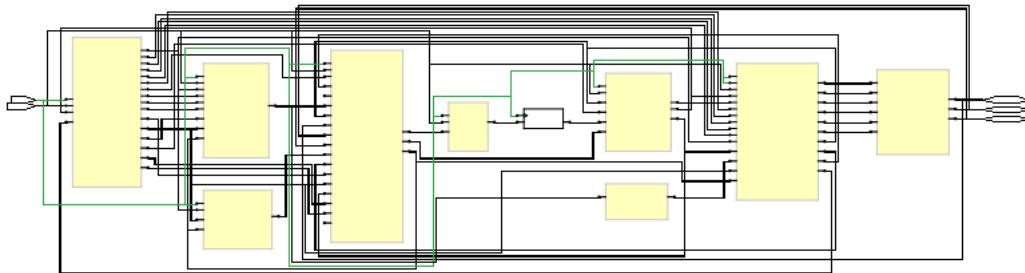

Results of Maximum Routable Endpoints in the HDL Analyst View


Use the Maximum Routable Endpoints option to specify the maximum number of endpoints for nets in the design to be explicitly routed to their connection endpoints. When you adjust the default value of 2000 sufficiently, improvements in performance can be seen in the HDL Analyst tool.

If the number of connection endpoints routed for the design has been reduced, you will see dashes (---) for these endpoints in the HDL Analyst (RTL or Technology) view. Note that you can still select these endpoints and perform any viable operation for these nets as shown in the RTL view below.

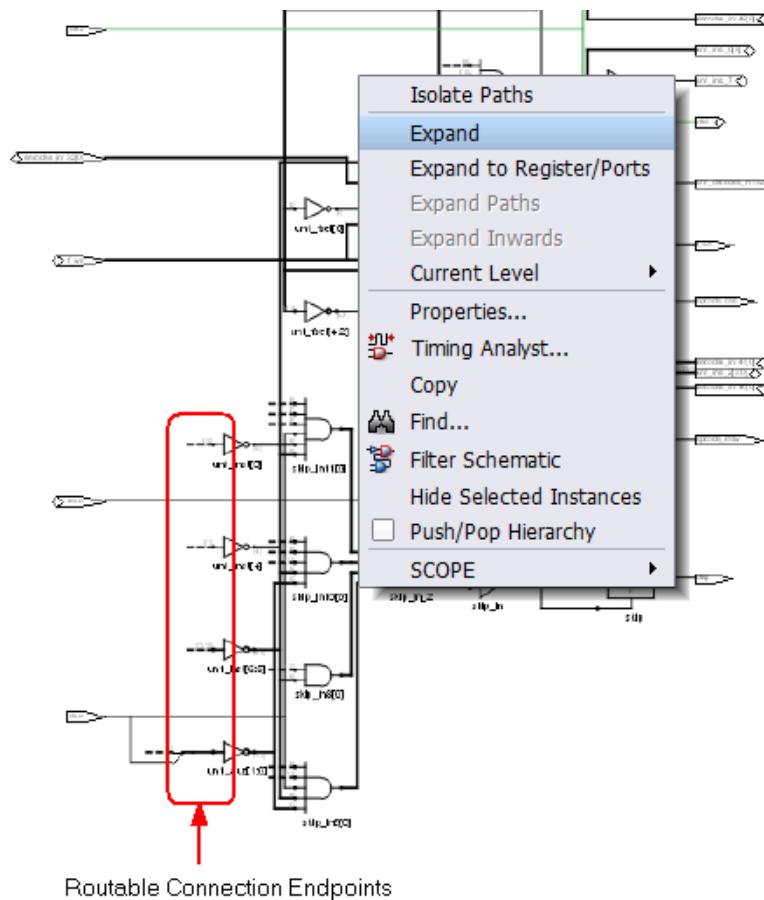

Note: Occasionally, the software does not route nets for some reason. You will see dashes (---) for these endpoints in the HDL Analyst (RTL or Technology) view. Note that you can still select these nets and perform any viable operation for them.

Sheet Size Panel

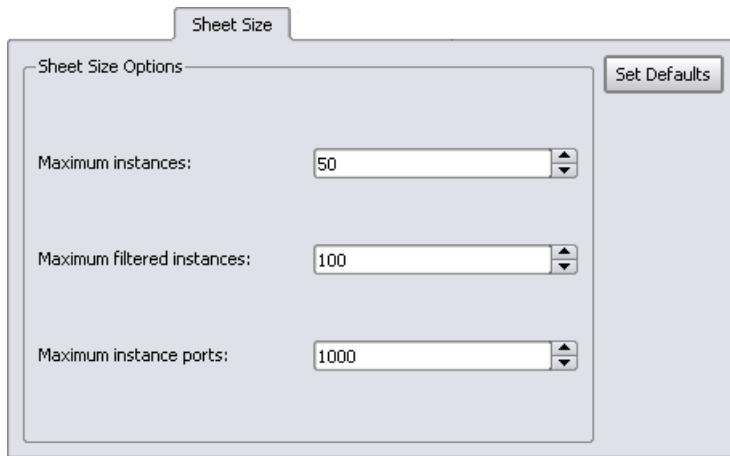


The following options are in the Sheet Size panel.

Maximum instances	Defines the maximum number of instances to display on a single sheet of an unfiltered schematic. If a given hierarchical level has more than this number of instances, then it will be partitioned into multiple sheets. See Multiple-sheet Schematics, on page 105 .
Maximum filtered instances	<p>Defines the maximum number of instances to display on a filtered schematic sheet, at any visible hierarchical level. This limit is applied recursively, at each visible <i>level</i>, when</p> <ul style="list-style-type: none">• the sheet itself is a level, and• each transparent instance is a level (even if inside another transparent instance). <p>Whenever a given level has more child instances inside it than the value of Filtered Instances, it is divided into multiple sheets.</p> <p>(Only children are counted, not grandchildren or below. Instance A is a <i>child</i> of instance B if it is inside no other instance that is inside B.)</p> <p>In fact, at each level except the sheet itself, an additional margin of allowable child instances is added to the Maximum filtered instances value, increasing its effective value. This means that you can see more child instances than Maximum filtered instances itself implies.</p> <p>The Maximum filtered instances value must be at least the Maximum instances value. See Multiple-sheet Schematics, on page 105.</p>
Maximum Instance Ports	Defines the maximum number of instance pins to display on a schematic sheet.

Visual Properties Panel

Controls the display of the selected property in open HDL Analyst views. The properties are displayed as colored boxes on the relevant objects. To display these properties, the View->Visual Properties command must also be enabled. For more information about properties, see [Viewing Object Properties, on page 252](#) in the *User Guide*.

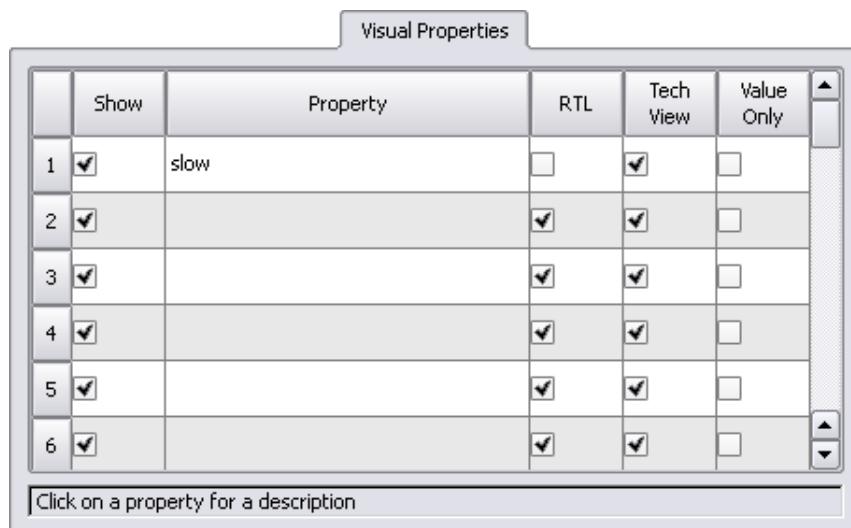


The following options are on the Visual Properties panel.

Show	Toggles the property name and value is displayed in a color-coded box on the object.
Property	Sets the properties to display.
RTL	Enables or disables the display of visual properties in the RTL view.
Tech View	Enables or disables the display of visual properties of in the Technology view.
Value Only	Displays only the value of an item and not its property name.

Configure External Programs Command

This command is for Linux platforms only. It lets you specify the web browser and PDF reader for accessing Synopsys support (see [Web Menu, on page 488](#) for details) and online documentation.

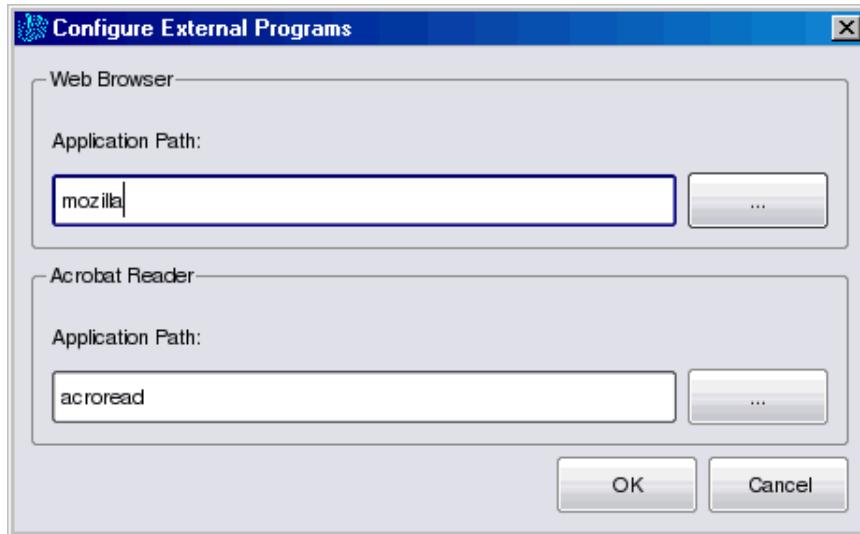

Field/Option	Description
Web Browser	Specify your web browser as an absolute path. You can use the Browse button to locate the browser you need. The default is netscape. If your browser requires additional environment settings, you must do so outside the synthesis tool.
Acrobat Reader	Specify your PDF reader as an absolute path. You can use the Browse button to locate the reader you need. The default is acroread.

Web Menu

This menu contains commands that access up-to-date information from Synopsys Support.

Command	Description
Synopsys Home	Opens the Synopsys home web page for Synopsys products.
FPGA Implementation Tools	Opens the Synopsys FPGA design solution web page for Synopsys FPGA products. You can find information about the full line of Synopsys FPGA Implementation products here.

Help Menu

There are four help systems accessible from the Help menu:

- Help on the Synopsys FPGA synthesis tool (Help->Help Topics)
- Help on standard Tcl commands (Help->TCL)
- Help on using messages (Help->Error Messages)
- Help on using online help (Help->How to Use Help)


The following table describes the Help menu commands.

Command	Description
Help Topics	Displays hyperlinked online help for the product.
Demos & Examples	Lets you quickly access information on key features, examples, and an attribute wizard.
Additional Products	Displays the Synopsys FPGA family of products with a brief description.
How to Use Help	Displays help on how to use Synopsys FPGA online help.
PDF Documents	Displays an Open dialog box with hyperlinked PDF documentation for the product including user guide and reference manuals. You need Adobe Acrobat Reader® to view the PDF files.
Error Messages	Displays help on the message viewer.
TCL	Displays help for Tcl commands.
Tutorial	Opens the appropriate tutorial for the synthesis tool you are using.
Mouse Stroke Tutor	Displays the Mouse Stroke Tutor dialog box which provides information on the available mouse strokes - see Using Mouse Strokes, on page 65 for details.
License Agreement	Displays the Synopsys software license agreement.
Floating License Usage	Specifies the number of floating licenses currently being used and their users.

Command	Description
Preferred License Selection	Displays the floating licenses that are available for your selection. See Preferred License Selection Command, on page 490 .
Tip of the Day	Displays a daily tip on how to use the Synopsys tools better. See Tip of the Day Command, on page 491 .
 About this program	Displays the About dialog box, showing the tool product name, license expiration date, customer identification number, version number, and copyright. Clicking the Versions button in the About dialog box displays the Version Information dialog box, listing the installation directory and the versions of all the compiler and mapper programs for the tool.


Preferred License Selection Command

Select Help->Preferred License to display the Select Preferred License dialog box, listing the available licenses for you to choose from. Select a license from the License Type column and click Save. Close and restart the Synopsys tool, then the new session uses the preferred license you selected.

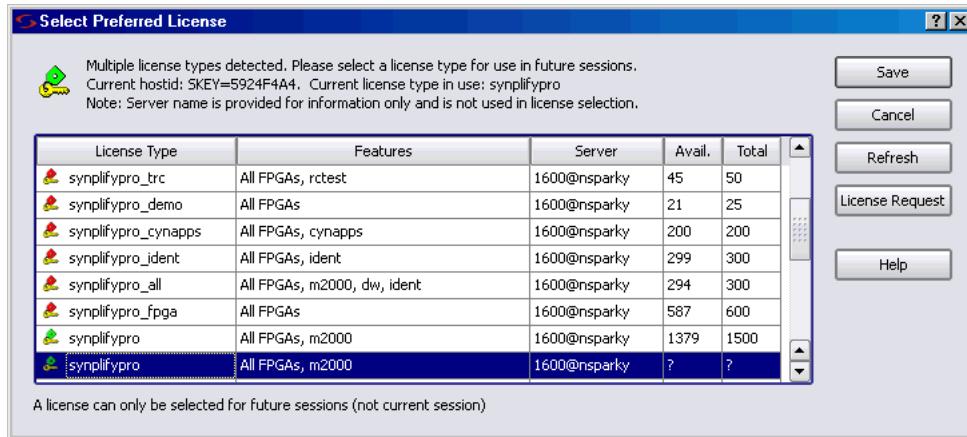

Tip of the Day Command

Select Help->Tip of the Day to display a dialog box with a daily tip on how to best use the Synopsys tool. This dialog box also displays automatically when you first start the tool. To prevent it from redisplaying at product startup, deselect Show Tips at Startup.

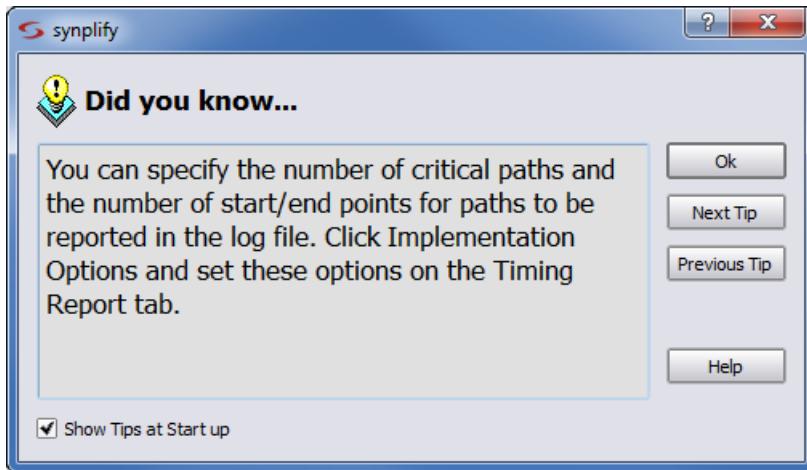

CHAPTER 6

GUI Popup Menu Commands

In addition to the GUI menu commands described in [Chapter 5, User Interface Commands](#), the FPGA synthesis tools also have context-sensitive commands that are accessed from popup or right-click menus in different parts of the interface. Most of these commands have an equivalent menu command. This chapter only describes the unique commands that are not documented in the previous chapter.

See the following sections for details:

- [Popup Menus, on page 494](#)
- [Project View Popup Menus, on page 501](#)
- [RTL and Technology Views Popup Menus, on page 526](#)
- [Informational Dialog Boxes, on page 531](#)

Popup Menus

Popup menus, available by clicking the right mouse button, offer quick ways to access commonly used menu commands that are specific to the view where you click. Commands shown greyed out (dimmed) are currently inaccessible. Popup menu commands generally duplicate commands available from the regular menus, but sometimes have commands that are only available from the popup menu. The following table lists the popup menus:

Popup Menu	Description
Project view	See Project View Popup Menus, on page 501 for details.
SCOPE window	Contains commonly used commands from the Edit menu.
Watch Window	See Watch Window Popup Menu, on page 494 for details.
Tcl window	Contains commands from the Edit menu. For details, see Edit Menu Commands for the Text Editor, on page 328 .
Text Editor window	See Text Editor Popup Menu, on page 495 for more information.
RTL and Technology views	See RTL and Technology Views Popup Menus, on page 526 .
FSM viewer	See FSM Viewer Popup Menu, on page 498 .

Watch Window Popup Menu

The Watch window popup menu contains the following commands:

Command	Description
Configure Watch	Displays the Log Watch Configuration dialog box, where you choose the implementations to watch.
Refresh	Refreshes (updates) the window display.
Clear Parameters	Empties the Watch window.

For more information on the Watch window and the Configure Watch dialog box, see [Watch Window, on page 40](#).

Tcl Window Popup Menu

The Tcl window popup menu contains the Copy, Paste, and Find commands from the Edit menu, as well as the Clear command, which empties the Tcl window. For information on the Edit menu commands available in the Tcl window, see [Edit Menu Commands for the Text Editor, on page 328](#).

Text Editor Popup Menu

The popup menu in the Text Editor window contains the following commonly used text-editing commands from the Edit menu: Undo, Redo, Cut, Copy, Paste, and Toggle Bookmark. In addition, HDL Analyst specific commands appear when both an HDL Analyst view and its corresponding HDL source file is open. For details of these commands, see [Edit Menu Commands for the Text Editor, on page 328](#) and [HDL Analyst Menu, on page 452](#).

The following table lists the commands that are unique to the popup menu:


Command	Description
Filter Analyst	Filters your design to show only the currently selected objects in the HDL text file. This is the same as HDL Analyst->Filter Schematic.
Select in Analyst	Crossprobes from the Text Editor and selects the objects in the HDL Analyst view. To use this command, the Enhanced Text Crossprobing (option must be engaged).

Log File Popup Menu

The popup menu in the log file contains commands that control operations in the log file. The popup menu differs when the log file is opened in the HTML mode or in the ASCII text mode.

Log File Filter Dialog Box

The Log File Filter dialog box is available by selecting Log File Message Filter from the log file popup menu when the log file is opened in the HDML mode. The dialog box allows messages in the current session to be promoted or demoted in severity or suppressed from the log files for subsequent sessions. For additional information on using this dialog box, see [Log File Message Controls, on page 241](#) of the *User Guide*.

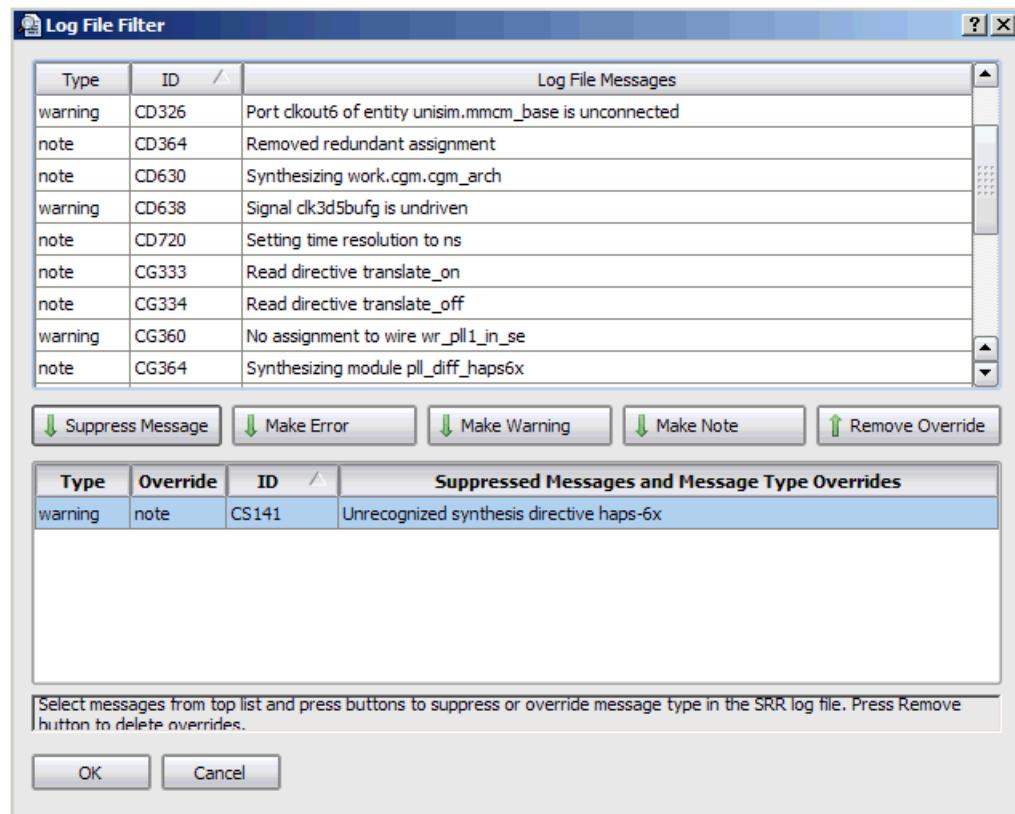

The following table describes the dialog box functions.



Function	Description
Log File Messages window	Displays the message ID and text and the default message type of messages generated during the current session.
Suppress Message button	Suppresses the selected note, warning, or advisory message. The selected message is removed from the upper Log File Messages window and displayed in the lower window with the Override column indicating suppress status. Note that error messages cannot be suppressed.
Make Error button	Promotes the status of the selected warning (or note) to an error. The selected message is removed from the upper Log File Messages window and displayed in the lower window with the Override column indicating error status.
Make Warning button	Promotes the status of the selected note to a warning. The selected message is removed from the upper Log File Messages window and displayed in the lower window with the Override column indicating warning status.
Make Note button	Demotes the status of the selected warning to a note. The selected message is removed from the upper Log File Messages window and displayed in the lower window with the Override column indicating note status.
Remove Override button	Removes the override status on the selected message in the lower window and returns the message to the upper Log File Messages window.
lower window	Lists the status of all messages that have been promoted, demoted, or suppressed.
OK button	Updates the status of any changed messages in the .pfl file. Note that you must recompile/resynthesize the design before any message status changes become effective.

FSM Viewer Popup Menu

The popup menu in the FSM Viewer contains commands that determine what is shown in the FSM Viewer. The following table lists the popup commands in the FSM Viewer.

Command	Description
Properties	Displays the Object Properties dialog box and view properties of a selected state or transition. Information about a selected transition includes the conditions enabling the transition and the identities of its origin and destination states. Information about a selected state includes its name, RTL encoding, and mapped encoding.
Filter	See View Menu: FSM Viewer Commands, on page 342 .
Unfilter	See View Menu: FSM Viewer Commands, on page 342 .
FSM Properties	Displays the Object Properties dialog box indicating the FSM identity and location, encoding style, reset state, and the number of states and transitions.

FSM Properties

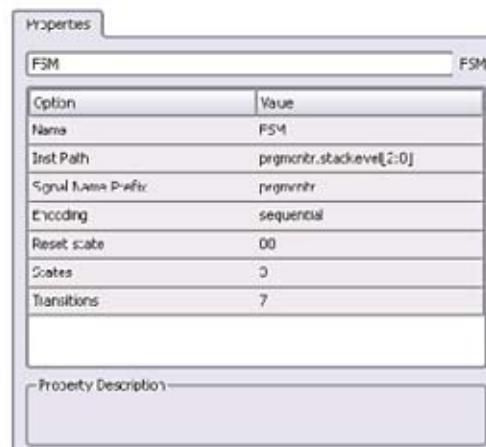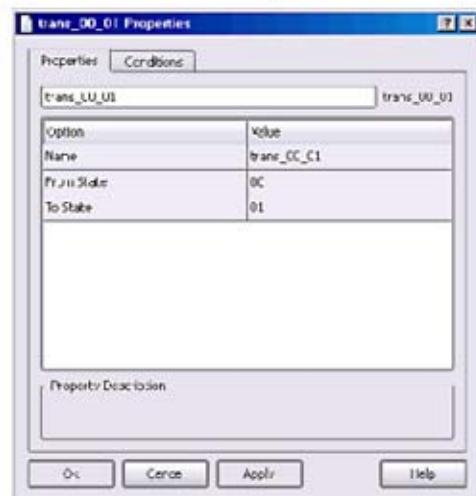State properties
(state selected)Transition properties
(transition selected)

Field/Option	Description
	Icons indicating the object type: FSM, state, or transition.
Name	The name of the selected state or transition, or FSM if nothing is selected.
Inst Path	The full name and position of the state machine in the hierarchy.
Signal Name Prefix	The position of the state machine in the hierarchy.
Encoding	The style of encoding used for the state machine. This can be onehot, sequential, gray, or safe. See syn_encoding, on page 69 , for information on changing the encoding type.
Reset State	The initial state of the FSM: the active state after resetting.
States	The number of states in the state machine.
Transitions	The number of transitions in the state machine.
RTL Encoding	The name (address) of the selected state, as referred to in the RTL (HDL) file.
Mapped Encoding	The encoding of the selected state.
From	The origin state of the selected transition.
To	The destination state of the selected transition.
Conditions (min-terms)	The conditions enabling the selected transition, as defined in the RTL (HDL) file.

Project View Popup Menus

The popup menu commands available in the Project view are context-sensitive, depending on what is currently selected and where in the view you click to open the popup menu. Most commands duplicate commands from the File, Project, Run, and Options menus.

Project Management View Popup Commands

The following table describes the Project Management view commands that are not duplicated on other menus in the tool:

Command	Description
Project Management View, No Selections	
Open Project	Displays the Open Project Dialog. See Open Project Command, on page 327 .
New Project	Creates a new empty project in the Project Window.
Refresh	Refreshes the display.
Project View Options	Displays the Project View Options dialog. See Project View Options Command, on page 465 .
Project Selected	
Open as Text	Opens the selected file in the Text Editor.
Add File	Displays the Add Files to Project dialog. See Add Source File Command, on page 350 .
New Implementation	Displays the Implementation Options dialog box. See Implementation Options Command, on page 364 .
Synthesize	Compiles and maps the selected design.
Compile Only	Compiles the selected design.

Command	Description
Write Output Netlist Only	Writes the mapped output netlist to structural Verilog (vm) or VHDL (vhm) format. Same as enabling: <ul style="list-style-type: none">• Write Mapped Verilog Netlist• Write Mapped VHDL Netlist on the Implementation Results tab of the Implementation Options dialog box.
Arrange VHDL Files	Reorders the VHDL source files.
Save Project	Displays the Save Project As dialog box.
Close Project	Closes your project.

Project Folder or File Selected

Add Folder	Creates a folder with the new name you specified and adds it to the Project view. See Add Folder Command, on page 507 .
Rename Folder	Renames an existing folder with the new name you specified in the Project view. See Rename Folder Command, on page 507 .
Delete Folder	Deletes the specified folder and all its contents as necessary. See Delete Folder Command, on page 507 .
Remove from Folder	Removes the selected file from its corresponding folder.
Place in Folder	Places the selected file into the folder you specify.
Launch Tools->Run Vendor Tool	Launches the vendor application or Tcl procedure tool from the Project view for the selected file or folder. See Vendor Tool Invocation Popup Menu Command, on page 508 .

Constraint File Selected

File Options	Displays the File Options dialog box. See File Options Popup Menu Command, on page 510 .
Open	Opens the SCOPE window.
Open as Text	Opens the selected file in the Text Editor.
Copy File	Displays the Copy File dialog box, where you copy the selected file and add it to the current project. You specify a new name for the file. See Copy File Popup Menu Command, on page 512 .

Command	Description
Change File	Opens the Source File dialog box where you choose a new file to replace the selected file. See Change File Command, on page 352 .
Remove File From Project	Removes the file from the project.
HDL File Selected	
File Options	Displays the File Options dialog box. See File Options Popup Menu Command, on page 510 .
Open	Opens the file in the Text Editor.
Syntax Check	Runs a syntax check on your design code. Reports errors, warnings, or notes in the Tcl Window.
Synthesis Check	Runs a synthesis check on your design code. This includes a syntax check and a check to see if the synthesis tool could map the design to the hardware. No optimizations are performed. Reports errors, warnings, or notes in the Tcl Window.
Copy File	Displays the Copy File dialog box, where you copy the selected file and add it to the current project. You specify a new name for the file. See Copy File Popup Menu Command, on page 512 .
Change File	Opens the Source File dialog box where you choose a new file to replace the selected file. See Change File Command, on page 352 .
Remove File From Project	Removes the file from the project.
Implementation Selected	
Implementation Options	Displays the Implementation Options dialog box. See Implementation Options Command, on page 364 .
Change Implementation Name	Displays the Implementation Name dialog box, where you rename the selected implementation. See Change Implementation Popup Menu Commands, on page 512 .

Command	Description
Copy Implementation	Copies the selected implementation and adds it to the current project with the name you specify in the dialog box. See Change Implementation Popup Menu Commands, on page 512 .
Remove Implementation	Removes the selected implementation from the project.
RTL View	Creates an RTL View based on the properties of the selected implementation.
Tech View	Creates a Technology View based on the properties of the selected implementation.
Add P&R Implementation	Displays the Add New Place & Route Task dialog box where you set options to run place & route after synthesis. See Add P&R Implementation Popup Menu Command, on page 514
Run	Starts a synthesis run on your design.
Place & Route Implementation Selected	
Add Place & Route Job	Displays the Add New Place & Route Task dialog box, so you can set options and run placement and routing. See Add P&R Implementation Popup Menu Command, on page 514 .
Remove Place & Route Job	Deletes the place-and-route implementation from the project.
Run Place & Route Job	Runs the place-and-route job for the design.

Project Management Commands

The following table lists the popup commands in the Project Management views that are not available on the tool command menus. The Project Management view consists of two tabs, and the table lists the popup commands available in both tabs.

For the Design Hierarchy tab, the tool supports all the project management commands listed in [Project Management View Popup Commands, on page 501](#), as well as the unique commands listed here.

Command	Description
Project Management View -> Project Files Tab Popup Commands	
All Synplify project management commands	Refer to the table in Project Management View Popup Commands, on page 501 for descriptions of these commands.
Project Options	With the project selected, displays project properties such as name and location. See Project Options Popup Menu Command, on page 513 .
Show Compile Points	Displays the compile points of the selected implementation and lets you edit them. See Show Compile Points Popup Menu Command, on page 512 .
P & R Options	With a place-and-route implementation selected, displays the Options for Place & Route on Implementation dialog box, so you can change options and rerun placement and routing. See Options for Place & Route Jobs Popup Menu Command, on page 515 for a description of the features.
Set as Black Box	When enabled, specifies that the design block be implemented as a black box during synthesis. Only available when the subproject is selected.
Design Block Source	Takes you to the design block or instance block definition in the HDL source file. Only available when the subproject is selected.
Refresh Hierarchy	Refreshes the Design Hierarchy view after design blocks or instance blocks have changed.
Properties	Displays the design block or instant block properties. For details, see Design Block/Instance Properties Popup Menu Command, on page 519 .
Hierarchical Project Options	Configures synthesis run for subprojects or top-level projects. For details, see Hierarchical Project Options Command, on page 361 . Same as the Project->Hierarchical Project Options command.

Command	Description
Add SubProject Implementations	Adds new implementations to the blocks in the top-level project. This command is only available when the top-level implementation is selected. Same as the Project-> SubProject Implementation command. See Working with Multiple Implementations in Hierarchical Projects, on page 120 in the <i>User Guide</i> for information about using this command.
Insert SubProject	Allows you to nest subprojects within a hierarchy. For details, see Insert Subproject Command, on page 362 . Only available as a popup menu command.
Subproject Parameter Sync	Synchronizes parameters for all the subprojects from the top-level project. See Subproject Parameter Sync, on page 522 .

Project Management View -> Design Hierarchy Tab Commands


Create Subproject (Design Block)	Defines a design or instance block as a subproject of the top-level project. See Design Block/Instance Properties Popup Menu Command, on page 519 for a description.
Insert and Link Subproject to Module	Specifies a design as a subproject and links it to the top-level module. See Insert & Link Subproject to Module Command, on page 523 or a description.
Set as Black Box	Specifies that the design block be implemented as a black box during synthesis.
Design Block source	Takes you to the design block or instance block definition in the HDL source file.
Refresh Hierarchy	Refreshes the Design Hierarchy view after design blocks or instance blocks have changed.
Properties	Displays the design block properties.

Project Management View Popup Folder Commands

The Project view popup menu includes commands for manipulating folders.


Add Folder Command

Use this option to add a folder to the Project view.

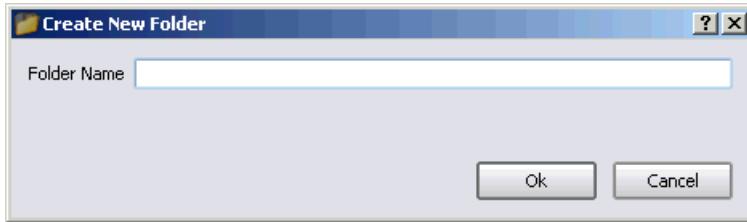


Rename Folder Command

Use this option to rename an existing folder in the Project view.

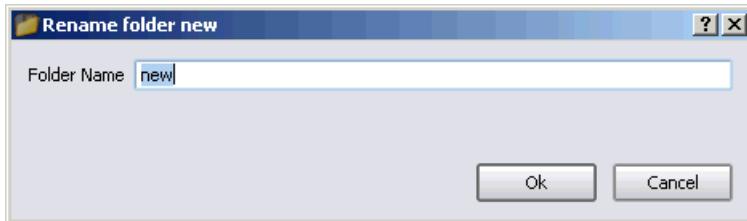

Delete Folder Command

Use this option to delete a folder from the Project view.

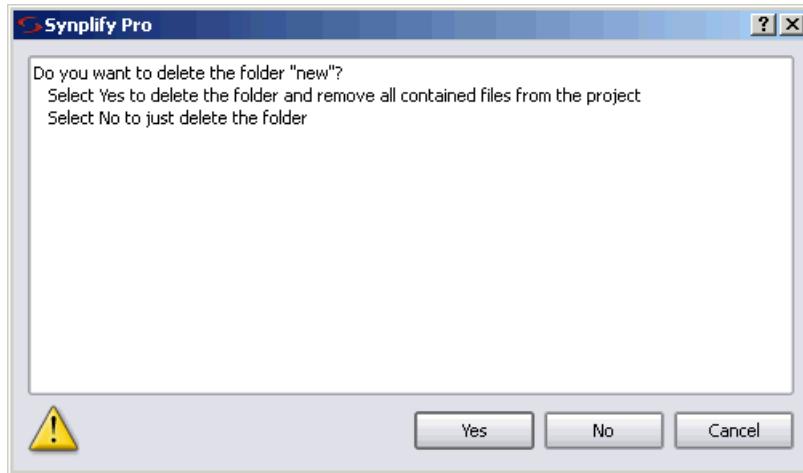


This dialog box includes the following options:

Feature	Description
Yes	Select Yes to delete the folder and all files contained in the folder from the Project view.
No	Select No to delete just the folder from the Project view.
Cancel	Select Cancel, to discontinue the operation.

Vendor Tool Invocation Popup Menu Command

Use the Vendor Tool Invocation command to invoke third-party tools, such as the Embedded Development Kit (EDK) from within the Synopsys FPGA products. This allows you to modify source files or libraries added to your synthesis projects from within the third-party tool directly. Use the following dialog box to run the vendor tools.

For more information, see [Invoking Third-Party Vendor Tools, on page 646](#) in the *User Guide*.

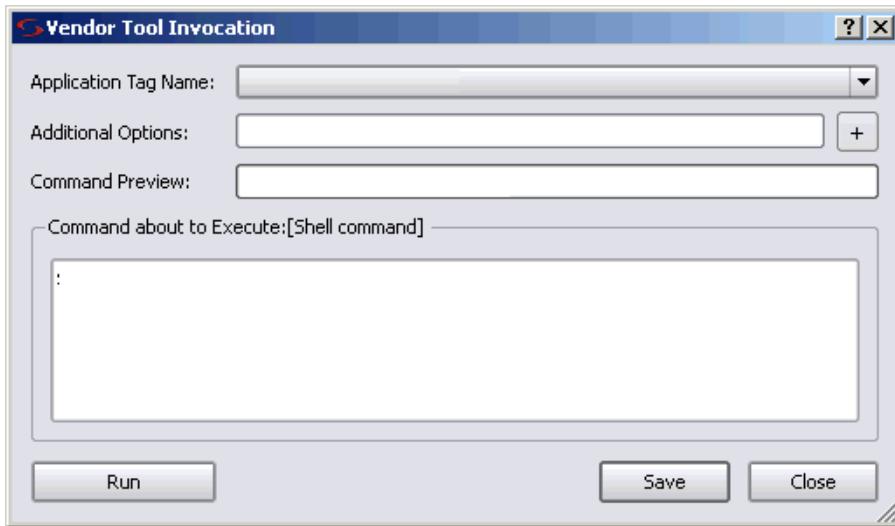

The Vendor Tool Invocation dialog box includes the following options:


Feature	Description
Application Tag Name	Specifies an application or Tcl procedure name. Type in the name or select a preconfigured application from the list.
Additional Options	Defines any additional arguments for the Tcl procedure or third-party application. You can select arguments from the drop-down list or type them. Note: For internal Synopsys tools, you must include the \$Syncode parameter.
Command Preview	Sets up the direct invocation of a third-party tool from within the FPGA synthesis tool, using the path defined for the executable in Application Name with Path or to execute the Tcl procedure from within the FPGA synthesis tool, using the path defined for the procedure in Tcl Procedure Name.
Run	The synthesis tool launches the third-party tool or runs the Tcl procedure with the arguments you specified.

File Options Popup Menu Command


To display the File Options dialog box, right-click on a project file and select File Options from the popup menu. Specify the path as relative or absolute when listing the file in the project (.prj) file and if the file is to be passed to the place-and-route tool or used only for simulation.

Field/Option	Description
File Path	Path to the selected file.
File Type	The folder type for the selected file. You can select the file folder type from a large list of file types. Changing the folder file type does <i>not</i> change the file contents or its extension; it simply places the file in the specified Project view folder. For example, if you change the file type of a VHDL file to Verilog, the file retains its Verilog extension, but is moved from the VHDL folder to the Verilog folder.
Library Names	Name of the library which must be compatible with the HDL simulator. For VHDL files, the dialog box is the same as that accessed by Project->Set VHDL Library - see Set VHDL Library Command, on page 352 .
Last modified	Date the file was last modified.
Save file	The format for the path type: choose either Relative to Project (the default) or with an Absolute Path.
Verilog Standard (Verilog only)	Select the Verilog file type from the menu: Use Project Default, Verilog 95, Verilog 2001, or SystemVerilog. Use Project Default sets the type of the selected file to the default for the project (new projects default to SystemVerilog).
Use for Place and Route	Determines if files are automatically passed to the backend place-and-route tool. The files are copied to the place-and-route implementation directory and then invoked when the place-and-route tool is run.
Use for Simulation Only	Determines if files are only to be used for simulation. For example, files such as test benches containing HDL constructs used only for simulation can be specified using this option.

The following is the Verilog dialog box:

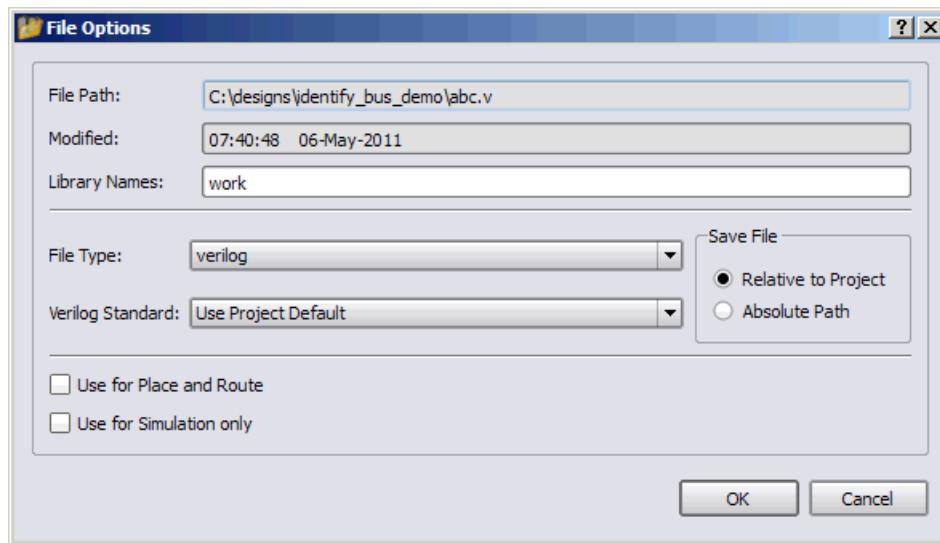


The following is the VHDL dialog box:

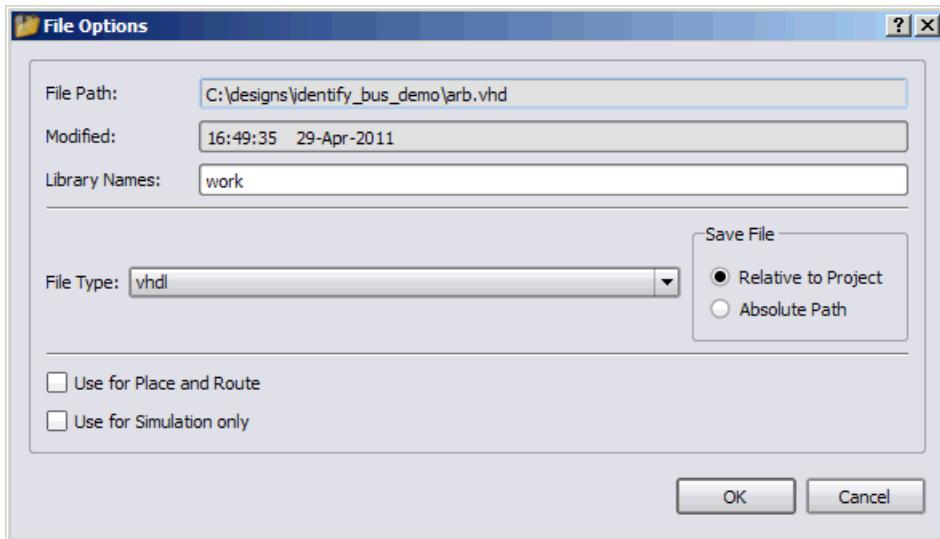


Copy File Popup Menu Command

With a file selected, select the Copy File popup menu command to copy the selected file and add it to the current project. This displays the Copy File dialog box where you specify the name of the new file.

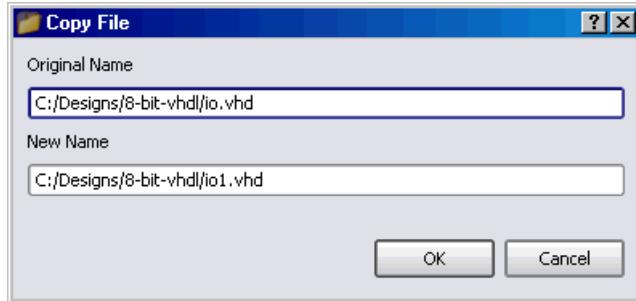

Change Implementation Popup Menu Commands


With an implementation selected, right-click and select the Change Implementation Name or Copy Implementation popup menu commands to display a dialog box where you specify the new name.

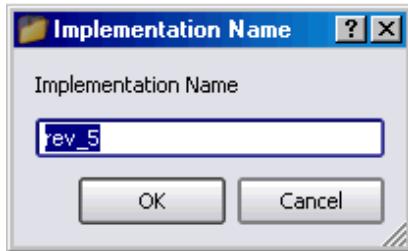

Show Compile Points Popup Menu Command

With an implementation selected, select the Show Compile Points popup menu command to display the Compile Points dialog box and view or edit the compile points of the selected implementation.

Compile points are only available for certain technologies. For more information on compile points and the compile-point synthesis flow, see [Compile Point Types, on page 469](#) and [Synthesizing Compile Points, on page 484](#) of the *User Guide*.

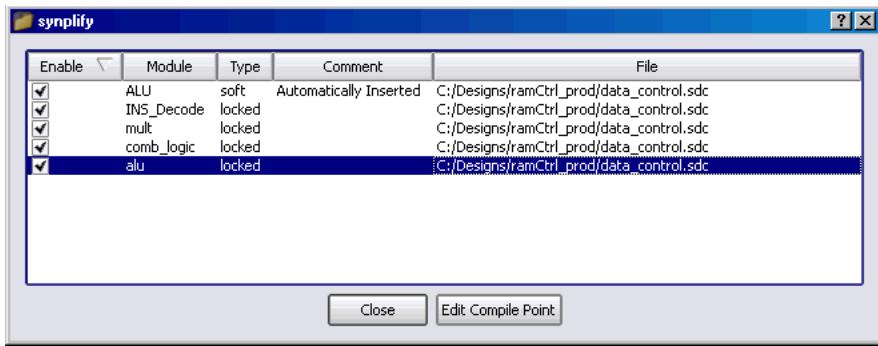


The columns Enable, Module, Type, and Comment in the dialog box correspond to the columns Enabled, Module, Type, and Comment in the SCOPE spreadsheet for the compile point. The File column lists the top-level constraint file where the compile point is defined.

To open and edit the SCOPE spreadsheet for a compile point, either double-click the row of the compile point or select it and click the Edit Compile Point button.

Project Options Popup Menu Command


With a project selected, select the Project Options popup menu command to display the Project Properties dialog box and change the implementation of a project.

In the dialog box, select an implementation in the Implementations list, then click OK or Apply to make it the active implementation of the project.

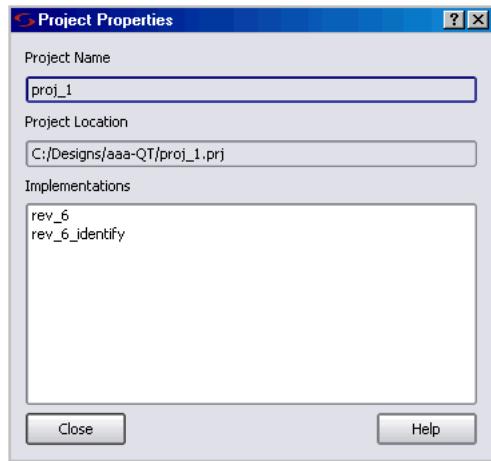

Add P&R Implementation Popup Menu Command

Displays the Add New Place & Route Task dialog box. For information about using this command for place-and-route encapsulation, see [Running P&R Automatically after Synthesis, on page 652](#) in the *User Guide*.

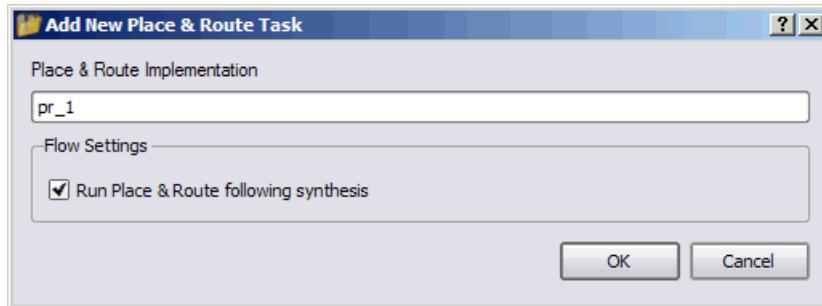


Command	Description
Place & Route Implementation Name	Enter a name for the place & route implementation. Do not use spaces for the implementation name.
Flow Settings	

Once the par implementation is created, then you can right-click and perform any of the following options:

- P&R Options—See [Options for Place & Route Jobs Popup Menu Command, on page 515](#).
- Add Place & Route Job—See [Add P&R Implementation Popup Menu Command, on page 514](#).
- Run Place & Route Job—Runs the place-and-route job.

Options for Place & Route Jobs Popup Menu Command

You can select a place-and-route job for a particular implementation, easily change options and then rerun the job. These options are the same found on the Options for Place & Route on Implementation dialog box. For a description of these options, see [Add P&R Implementation Popup Menu Command, on page 514](#).

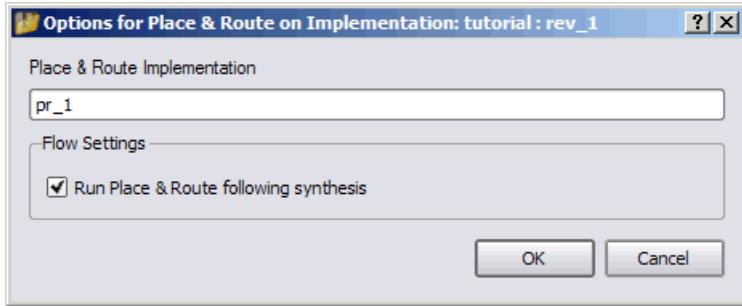

Create Subproject Popup Menu Commands


There are two subproject creation commands:

- [Create Subproject \(Design Block\), on page 516](#)
- [Create Subproject \(Instance\) Command, on page 517](#)

Create Subproject (Design Block)

The Create Subproject (Design Block) command displays the Create “*blockName*” as Subproject dialog box, which lets you specify a name, location, and source files for the subproject you are creating. You can create a subproject for an instance block or a design block.

For more information about using this command, refer to [Creating Hierarchical Subprojects by Exporting Blocks, on page 111](#).

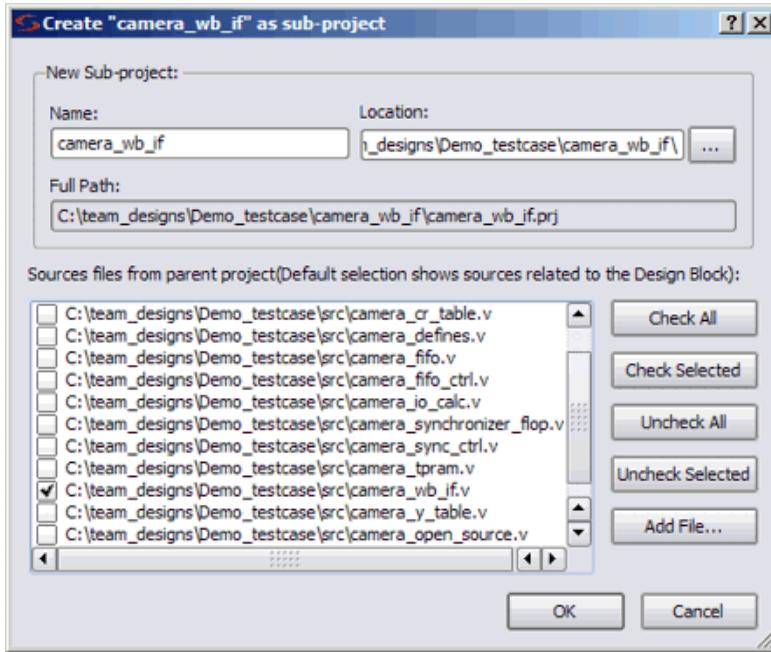


The following table describes the options:

Option	Description
Project Name	Specifies the name of the block subproject to be created for the block.
Project Location	Specifies the location for the block subproject.
Full Path	Specifies the full path name of the subproject file.

Option	Description
Source files from parent project	Lists the source file(s) from the parent project. The selected design block is enabled by default in the source file display window.
Check All	Selects all source files listed in the source file display window. The selected source files are added to the block project when you click OK.
Check Selected	Re-selects the recently unchecked source files in the source file display window. The selected source files are added to the block project when you click OK.
Uncheck all	Disables all the source files selected in the source file display window. Deselected files are not added to the block project when you click OK.
Uncheck Selected	Disables the selected source files in the source file display window. Deselected files are not added to the block project when you click OK.
Add File	Opens the Add Files to Project dialog box, so you can select source files to add to the displayed list. The compiler might not always identify all the source files that belong to the parent project, but you can use Add File to add the missing source files.

Create Subproject (Instance) Command

The Create Subproject (Instance) command displays the Create “*instanceName*” as Subproject dialog box, which lets you specify a name, location, and source files for the subproject you are creating. You can create a subproject for an instance block.

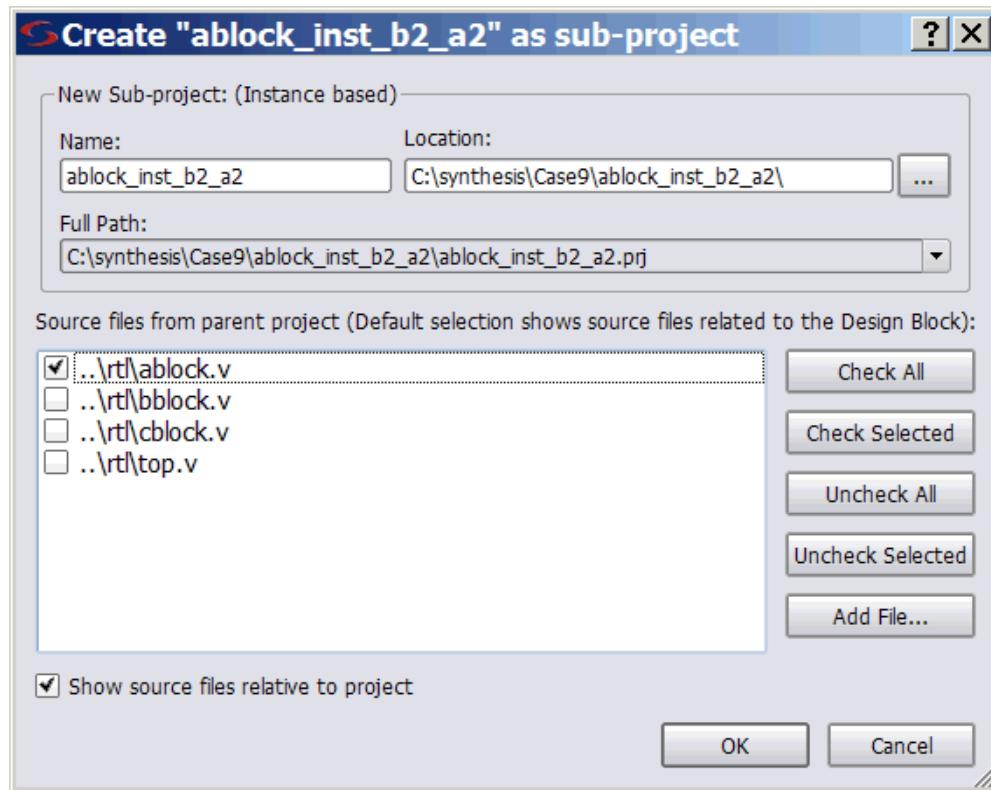

The following table describes the options:

Option	Description
Project Name	Specifies the name of the subproject to be created for the instance.
Project Location	Specifies the location for the instance subproject.
Full Path	Specifies the full path name of the subproject file.
Source files from parent project	Lists the source file(s) from the parent project. The selected instance is enabled by default in the source file display window. The synthesis tool can miss auxiliary files such as 'include' files that define macros or packages. You must manually add these files by checking the corresponding check box.

Option	Description
Check All	Selects all source files listed in the source file display window. The selected source files are added to the instance project when you click OK.
Check Selected	Re-selects the recently unchecked source files in the source file display window. The selected source files are added to the instance project when you click OK.
Uncheck all	Disables all the source files selected in the source file display window. Deselected files are not added to the instance project when you click OK.
Uncheck Selected	Disables the selected source files in the source file display window. Deselected files are not added to the instance project when you click OK.
Add File	Opens the Add Files to Project dialog box, so you can select source files to add to the displayed list. The compiler might not always identify all the source files that belong to the parent project, but you can use Add File to add the missing source files.


Design Block/Instance Properties Popup Menu Command

The Properties dialog box in the Design Hierarchy view displays properties for a hierarchical design block or instance block. The properties displayed vary, according to the status of the design block or instance block. The Properties tab is always displayed and lists properties such as the following:

- Current block name
- Original block name
- Language used for the block, such as Verilog


- The kind of block. For example, it could be any of the following:
 - A black box
 - Parameterized (the block can have multiple combinations of parameters)
 - The top-level block
 - Implemented as a subproject
- Block source file

The Parameters or Attributes tabs are displayed for some design or instance blocks. Parameters are user-defined variables in the HDL source code, such as register width. Attributes can be specified in the HDL source or created by the compiler, such as `syn_black_box` or `syn_sub_project`. See the following figure.

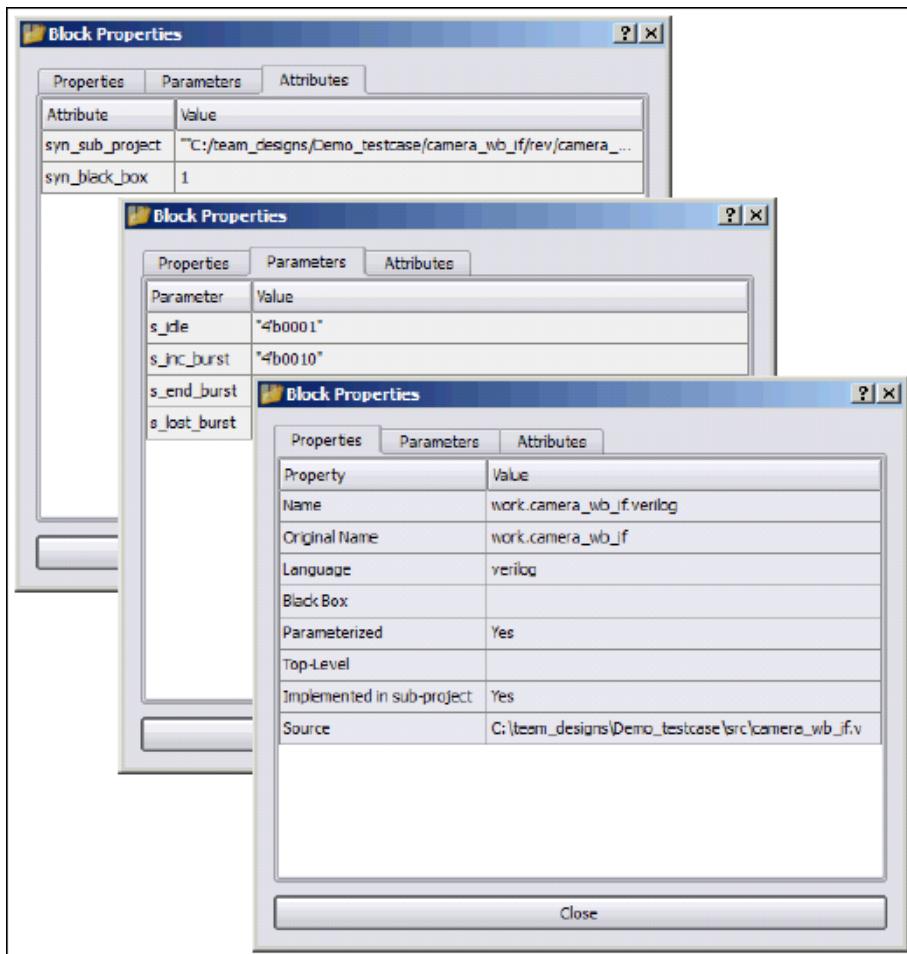


Insert Subproject Command

This command in the Project Files view lets you nest subprojects within a subproject hierarchy. To do this, right-click on a subproject and select Insert Subproject from the popup menu. You can add an existing project or a new project from the Insert Project dialog box. Then, begin adding design files to your subproject after you have created the new project.

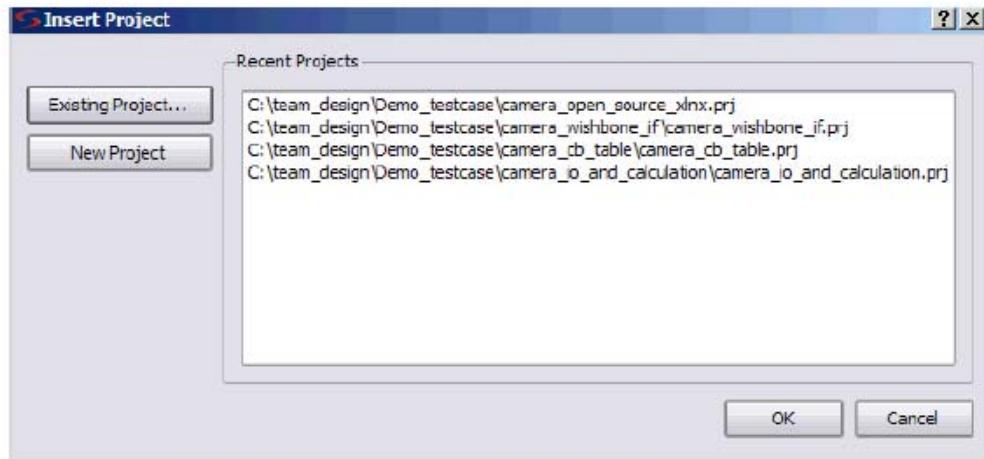

Subproject Parameter Sync

The Subproject Parameter Sync command synchronizes parameter properties for all the subprojects from the top-level project. To do this, simply click the Synchronize Subprojects button shown on the dialog box.

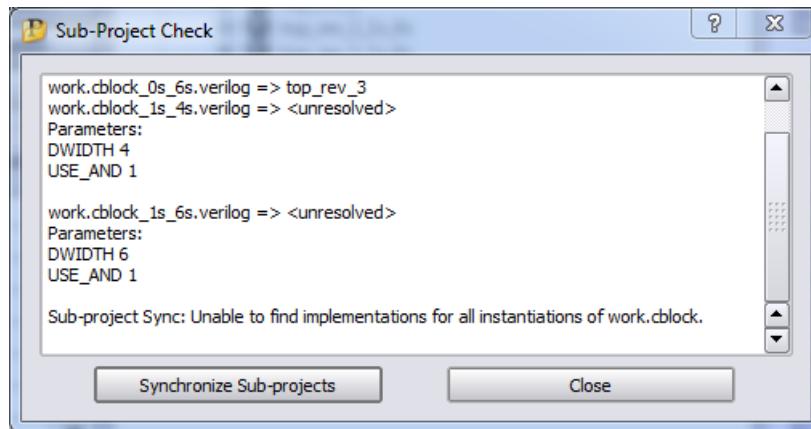


Insert & Link Subproject to Module Command

This popup command in the Design Hierarchy view adds the specified design module/instance as a subproject and links it to the top-level module.

Insert & Link Subproject to Design Block


Highlight the desired module, right-click and Insert & Link Subproject to Design Block. The following dialog box appears.

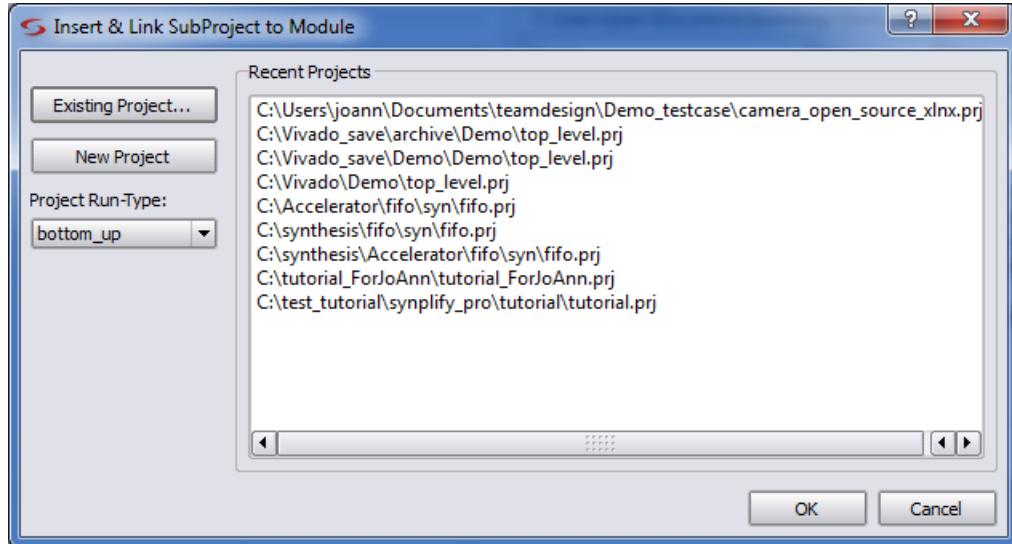

Option	Description
Existing Project	Adds the specified module to an existing subproject and links it to the top-level module.
New Project	Adds the specified module to a new subproject and links it to the top-level module.
Project Run-Type	Specifies the run type for how you want the modules synthesized for the subproject: top-down or bottom-up.

Insert & Link Subproject to Instance


Highlight the desired module, right-click and Insert & Link Subproject to Instance. The following dialog box appears.

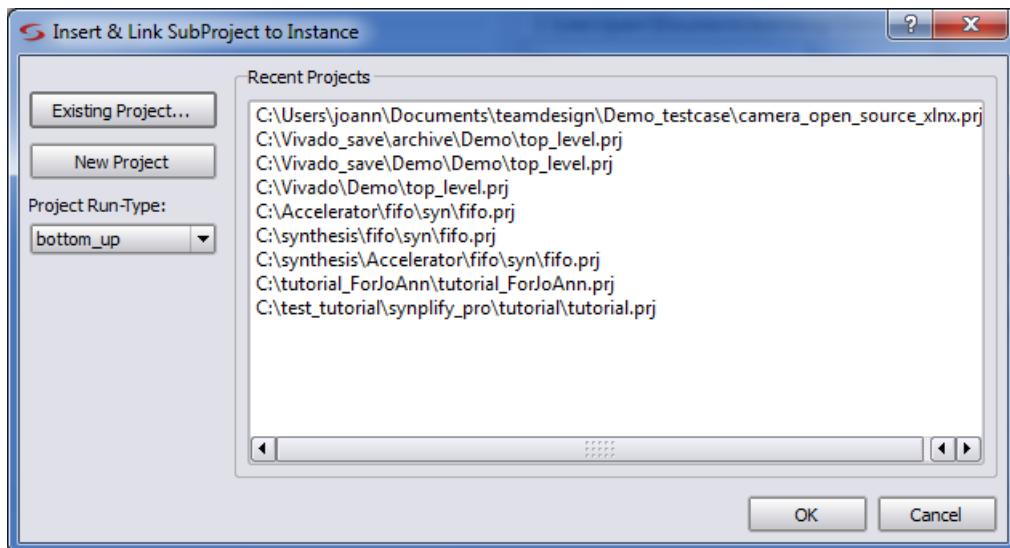

Option	Description
Existing Project	Adds the specified instance to an existing subproject and links it to the top-level module.
New Project	Adds the specified instance to a new subproject and links it to the top-level module.
Project Run-Type	Specifies the run type for how you want the instances synthesized for the subproject: top-down or bottom-up.

Allocate Timing and Resource Budgets

The Allocate Timing and Resource Budgets command generates the timing and resource constraints for the instance-based subproject(s) of a hierarchical design. You can access this command by right-clicking on an instance in the Design Hierarchy view or by right-clicking anywhere in the Design Hierarchy view.

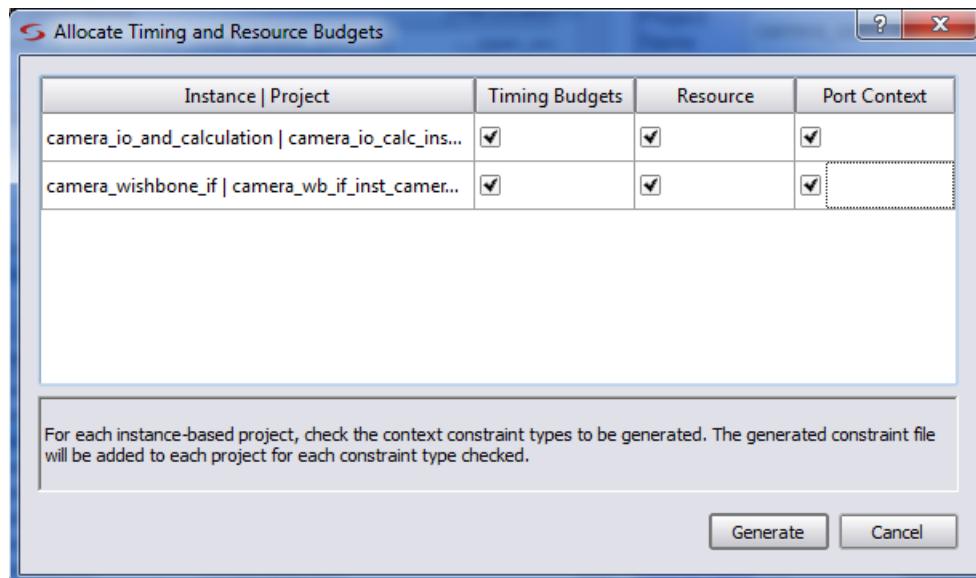

Option	Description
Instance/Project	Specifies the name of the instance-based subproject.
Timing Budgets	When enabled, sets initial timing constraints for the instance-based subproject, based on the top-level constraints.
Resource	When enabled, allocates RAM and DSP resources to the instance-based subproject, based on top-level resources.
Port Context	When enabled, generates port context information, such as ports tied to a fixed value or unused ports for the instance-based subproject with the bottom-up flow.

RTL and Technology Views Popup Menus

Some commands are only available from the popup menus in the RTL and Technology views, but most of the commands are duplicates of commands from the HDL Analyst, Edit, and View menus. The popup menus in the RTL and Technology views are nearly identical. See the following:

- [Hierarchy Browser Popup Menu Commands, on page 526](#)
- [RTL View and Technology View Popup Menu Commands, on page 526](#)

Hierarchy Browser Popup Menu Commands

The following commands become available when you right-click in the Hierarchy Browser of an RTL or Technology view. The Filter, Hide Instances, and Unhide Instances commands are the same as the corresponding commands in the HDL Analyst menu. The following commands are unique to this popup menu.

Command	Description
Collapse All	Collapses all trees in the Hierarchy Browser.
Filter	Highlights and filters objects such as ports, instances, and primitives in the HDL analyst window.
Reload	Refreshes the Hierarchy Browser. Use this if the Hierarchy Browser and schematic view do not match.
Hide/Unhide Instances	Hides or unhides selected instances in the HDL analyst window. For more information on hidden instances, see Hidden Hierarchical Instances, on page 95 .

RTL View and Technology View Popup Menu Commands

The commands on the popup menu are context-sensitive, and vary depending on the object selected, the kind of view, and where you click. In general, if you have a selected object and you right-click in the background, the menu includes global commands as well as selection-specific commands for the objects.

Most of the commands duplicate commands available on the HDL Analyst menu (see [HDL Analyst Menu, on page 452](#)). The following table lists the unique commands.

Common Commands

Command	See ...
Show Critical Path	HDL Analyst Menu: Timing Commands, on page 459.
Timing Analyst	HDL Analyst Menu: Timing Commands, on page 459.
Find	Find Command (HDL Analyst), on page 332.
Filter Schematic	HDL Analyst Menu: Filtering and Flattening Commands, on page 455.
Push/Pop Hierarchy	HDL Analyst Menu: RTL and Technology View Submenus, on page 452.
Select All Schematic	HDL Analyst Menu: Selection Commands, on page 463.
Select All Sheet	HDL Analyst Menu: Selection Commands, on page 463.
Unselect All	HDL Analyst Menu: Selection Commands, on page 463.
Flatten Schematic	HDL Analyst Menu: Filtering and Flattening Commands, on page 455.
Unflatten Current Schematic	HDL Analyst Menu: Filtering and Flattening Commands, on page 455.
HDL Analyst Options	HDL Analyst Options Command, on page 477.
SCOPE->Edit Attributes (object name)	Opens a SCOPE window where you can enter attributes for the selected object. It displays the Select Constraint File dialog box (Edit Attributes Popup Menu Command, on page 530), where you select the constraint file to edit. If no constraint file exists, you are prompted to create one.

SCOPE->Edit Compile Point Constraints (module <i>moduleName</i>)	For technologies that support compile points, it opens a SCOPE window where you can enter constraints for the selected compile point. It displays the Select Compile Point Definition File dialog box and lets you create or edit a compile-point constraint file for the selected region or instance. See Edit Attributes Popup Menu Command, on page 530 .
SCOPE->Edit Module Constraints (module <i>moduleName</i>)	Opens a SCOPE window so you can define module constraints for the selected module. If you do not have a constraint file, it prompts you to create one. The file created is a separate, module-level constraint file.

Instance Selected

Command	See ...
Isolate Paths	Isolate Paths, on page 460 .
Expand Paths	Hierarchical->Expand Paths, on page 454 .
Current Level Expand Paths	Current Level->Expand Paths, on page 455 .
Show Context	Show Context, on page 460 .
Hide Instance	Hide Instances, on page 460 .
Unhide Instance	Unhide Instances, on page 460 .
Show All Hier Pins	Show All Hier Pins, on page 461 .
Dissolve Instance	Dissolve Instances, on page 461 .
Dissolve to Gates	Dissolve to Gates, on page 461 .

Port Selected

Command	See ...
Expand to Register/Port	Hierarchical->Expand to Register/Port, on page 454 .
Expand Inwards	Hierarchical->Expand Inwards, on page 454 .
Current Level->Expand	Current Level->Expand, on page 454 .
Current Level->Expand to Register/Port	Current Level->Expand to Register/Port, on page 455 .

Current Level->Expand Paths Current Level->Expand Paths, [on page 455](#).


Properties Properties Popup Menu Command, [on page 530](#).

Net Selected

Command	See ...
Goto Net Driver	Hierarchical->Goto Net Driver, on page 454 .
Select Net Driver	Hierarchical->Select Net Driver, on page 454 .
Select Net Instances	Hierarchical->Select Net Instances, on page 454 .
Current Level->Goto Net Driver	Current Level->Goto Net Driver, on page 455 .
Current Level->Select Net Driver	Current Level->Select Net Driver, on page 455 .
Current Level->Select Net Instances	Current Level->Select Net Instances, on page 455 .
Set Net Color	Sets the color of the selected net from a color pallet. For details, see Set Net Color Popup Menu Command, on page 529 .

Set Net Color Popup Menu Command


The set net color command sets the color of the selected net in the HDL Analyst for the current session. To use the command, select the desired net or nets in the RTL view and select set net color from the popup menu to display the dialog box.

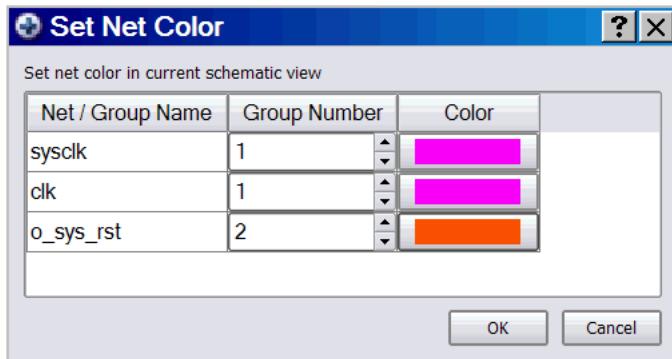

Double click on the corresponding color in the Color column to display the color pallet and then double click the desired color and click OK. Nets can be grouped and assigned to the same color by selecting the same group number in the Group Number column.

Properties Popup Menu Command

The software displays property information about the selected object when you right-click on a net, instance, pin, or port in a HDL Analyst view. See [Visual Properties Panel, on page 486](#) or [Viewing Object Properties, on page 252](#) in the *User Guide* for more information about viewing object properties.

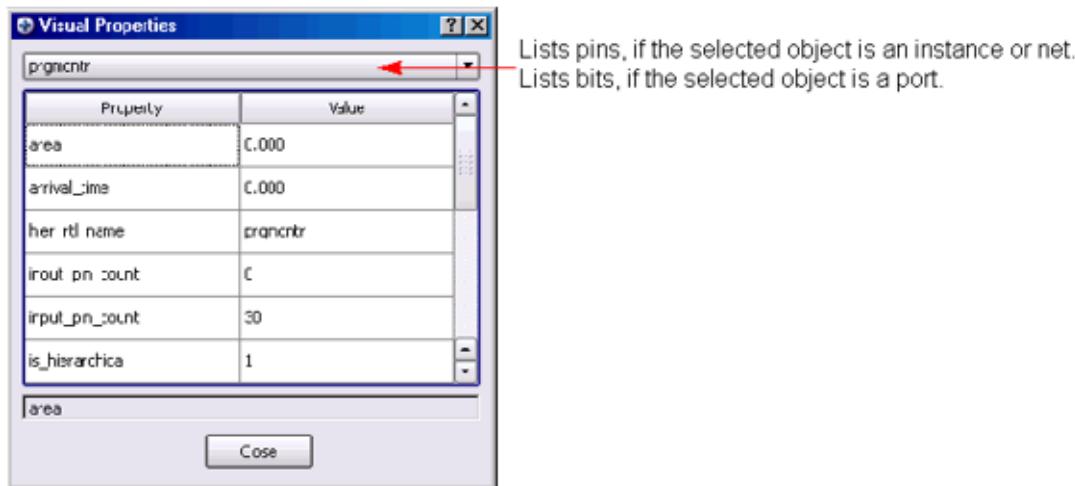


Edit Attributes Popup Menu Command

You use the Select a Constraint File dialog box to choose or create a constraint file. You can open the constraint file and edit it. For technologies that support the compile points, it lets you create or edit a compile-point constraint file for the selected region or instance.

Informational Dialog Boxes

The Synopsys FPGA software occasionally displays informational dialog boxes that require you to make a choice or confirm that you have read the information.

Here are examples:

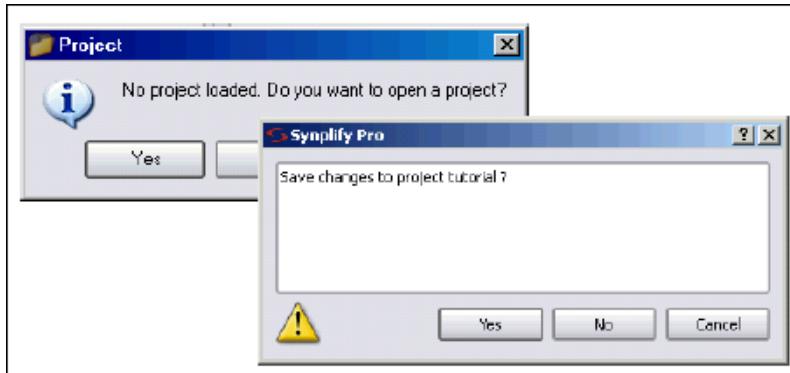

Index

Symbols

_ALLOWNESTEDBLOCKCOMMENT-
 START_ directive [389](#)
SEARCHFILENAMEONLY directive [388](#)
! character, find command [171](#)
? wildcard
 Timing Analyzer [450](#)
.srr file
 See log file
.srs file
 See srs file

Numerics

64-bit mapping [367](#)

A

aborting a synthesis run [400](#)
About this program command [490](#)
add files
 -include tcl argument [29](#)
Add Implementation command [349](#)
Add P&R Implementation command [514](#)
Add Place and Route Job command [514](#)
Add Source File command [348](#)
add_file Tcl command [28](#)
add_folder Tcl command [32](#)
add_to_collection command [217](#)
Additional Products command [489](#)
annotated properties for analyst
 object properties for filtering [166](#)
append_to_collection command [219](#)
archive utility
 SEARCHFILENAMEONLY directive
 [388](#)
 copy tcl command [84](#)
 unarchive tcl command [84](#)
Arrange VHDL files command [396](#)

asynchronous clock report
 generation option [442](#)
Attributes panel, SCOPE [249](#)
auto constraints
 Maximize option (Constraints tab) [369](#)

B

Back command [342](#)
batch mode [142](#)
Build Project command [322](#)
bus bundling [481](#)
bus_dimension_separator_style command
 [316](#)
bus_naming_style command [316](#)
buses
 compressed display [481](#)
 enabling bit range display [480](#)
 hiding in flattened Technology views [481](#)
By any transition command [343](#)
By input transitions command [342](#)
By output transitions command [342](#)

C

c_diff command (collections) [241](#)
c_intersect command (collections) [241](#)
c_print command (collections) [241](#)
c_sub command (collections) [241](#)
c_symdiff command (collections) [241](#)
c_symdiff command, examples [182](#)
c_union command (collections) [241](#)
camera mouse pointer [322](#)
case sensitivity, Tcl find command [157, 160](#)
cell interior display, enabling/disabling [481](#)
Change File command [348](#)
Change Implementation Name command [503](#)
check_fdc_query command [36](#)
check_fdc_query Tcl command [36](#)
Clear Parameters command [494](#)

clock alias 446
clock as object 446
clock groups, SCOPE 233
clock paths, ignoring 264
Clocks panel, SCOPE 232
Close command 322
Close Project command 322
Collapse All command 526
collection commands
 c_diff 178
 c_intersect 179
 c_list 180
 c_print 181
 c_symdiff 182
 c_union 183
 SCOPE 240
collections
 Synopsys standard commands 217
Collections panel, SCOPE 239
commands
 Add Place & Route Job 514
 Hierarchy Browser 526
 menu
 See individual command entries
 set_modules (Tcl) 185
 Tcl
 See Tcl commands
 Tcl collection 177
 Tcl command equivalents 15
 Tcl expand 173
 Tcl find 151
Comment Code command 329
Compile Only command 395
compile point constraints
 editing 528
Compile Points panel, SCOPE 252
compiler directive
 `_SEARCHFILENAMEONLY_` 388
 `IGNORE_VERILOG_BLACKBOX_GUTS`
 385
compiler directives
 `_ALLOWNESTEDBLOCKCOMMENTS`
 `TART_` 389
 `_SYN_COMPATIBLE_INCLUDEPATH_`
 `_390`
 UI option 379
 Verilog 383
Configure External Programs command 487
Configure Verilog Compiler command 464
Configure VHDL Compiler command 464
Configure Watch command 494
connectivity, enabling bit range display 480
constraint checker
 check_fdc_query command 36
constraint file
 define_compile_point 318
 define_current_design 319
 syn_create_err_net 141
constraint files
 editing compile point files 528
 SCOPE spreadsheet 230
constraint_file Tcl command 40
constraints
 automatic. See auto constraints
 check constraints 396
 FPGA timing 278
Constraints panel
 Implementation Options dialog box 368
context-sensitive popup menus
 See popup menus
Copy command 328
Copy File command 502
Copy Implementation command 504
copy_collection command 220
copying image
 Create Image command 322
Create Image command 322
Create Sub-project (Design Block) command
 516, 517
create_clock timing constraint 279
create_generated_clock timing constraint 281
critical paths
 creating new schematics 453
 custom timing reports 441
 finding 459
 Timing Report panel, Implementation
 Options dialog box 372
custom folders
 project_folder Tcl command 94
Customize command 464
customizing
 project files 466
Cut command 328

D

define_compile_point
 Tcl 318

define_current_design
Tcl 319
defining I/O standards 250
delay paths
POS 270
Delay Paths panel, SCOPE 246
Delete all bookmarks command 329
Design Block Properties command (hierarchical project management) 519
design parameters (Verilog)
extracting 383
Device panel
Implementation Options dialog box 365
dialog boxes
Implementation Options 364
directives
SEARCHFILENAMEONLY 388
beta features 386
ignore syntax check 385
IGNORE_VERILOG_BLACKBOX_GUTS
385
specifying for the compiler (Verilog) 383
disabling sequential optimizations 121
display settings
Project view 466
Dissolve Instances command 461
Dissolve to Gates command 461
dissolving instances 461
duplicate modules (Verilog)
Tcl option 117

E

Edit Attributes command 527
Edit Compile Point Constraints command 528
Edit menu 327
Advanced submenu 329
commands 327
Edit Module Constraints command 528
Edit Run Configuration command 361
Editor Options command 464
Enable Slack Margin 445
encoding
enumeration, default (VHDL) 375
state machine
displaying 500
encryptIP script
command-line arguments 56
syntax 56

encryptP1735 script 58
command-line arguments 59
public keys repository file 60
syntax 59
use models 61
enumeration encoding, default (VHDL) 375
environment variables
accessing, get_env Tcl command 70
examples
Tcl find command syntax 161
Exit command 323
Expand command
current level 454
hierarchical 454
Expand Inwards command 454
Expand Paths command
current level 455
hierarchical 454
Expand to Register/Port command
current level 455
hierarchical 454
expanding
paths between schematic objects 454
export project Tcl command 68
Extract Parameters 383

F

false paths
architectural 264
clocks as from/to points 272
code-introduced 264
defined 264
POS 270
FDC
create_clock constraint 279
create_generated_clock 281
reset_path 284
set_clock_groups 288
set_clock_latency 293
set_clock_route_delay 295
set_clock_uncertainty 296
set_false_path 298
set_input_delay 301
set_max_delay 303
set_multicycle_path 306
set_output_delay 310
set_reg_input_delay 313
set_reg_output_delay 314
standard collection commands 217

- File menu
Recent Projects submenu 323
File Options command 510
files
.ta *See also* timing report file 443
adding to project 28, 350
constraint 40
copying 502, 503
include 29
log. *See* log file
opening recent project 323
organization into folders 466
project 93
removing from project 348
replacing in project 352
srs *See* srs file
stand-alone timing report (.ta) 440
temporary 462
timing report. *See also* timing report file 443
Filter Schematic command 455
popup menu 495
filtering
critical paths 459
FSM states and transitions 342
paths from pins or ports 460
selected objects 455
timing reports 442
Find again command 328
Find command
HDL Analyst 332
Text Editor 328
find command
batch mode 80
filter properties 166
finding
critical paths 459
Flatten Current Schematic command
filtered schematic 457
unfiltered schematic 456
Flattened Critical Path command 453
flattened schematic, creating 453
Flattened to Gates View command 453
Flattened View command 453
flattening
instances 461
schematics 456
Floating License Usage command 489
folders
adding to project 32
folders for project files 466
foreach_in_collection command 221
Forward command 342
FPGA Implementation Tools command 488
FPGA timing constraints 278
from points
clocks 271
multiple 267
object search order (Timing Analyzer)
446
objects 266
timing analyzer 446
FSM Table command 343
FSM Viewer
popup menu 498
popup menu commands 498
FSMs
optimizing with FSM Compiler 124
Full View command 341
- ## G
- gated-clock conversion 393
Generated Clocks panel, SCOPE 237
generated-clock optimization 393
get_env Tcl command 70
get_object_name command 223
get_option Tcl command 70
Goto command 328
Goto Net Driver command
current level 455
hierarchical 454
gui
synthesis software 13
- ## H
- HDL Analyst
Find command 332
Visual Properties 342
HDL Analyst menu 452
Current Level submenu 454
Hierarchical submenu 454
RTL submenu 453
Select All Schematic submenu 463
Select All Sheet submenu 463
Technology submenu 453
HDL Analyst Options command 465

- HDL Analyst tool
 - displaying timing information [459](#)
 - HDL parameter overrides [72](#)
 - hdl_define Tcl command [71](#)
 - hdl_param Tcl command [72](#)
 - Help command [489](#)
 - Help menu [489](#)
 - commands [489](#)
 - Hide Instances command [460](#)
 - hiding instances [460](#)
 - Hierarchical Critical Path command [453](#)
 - Hierarchical View command [453](#)
 - hierarchy
 - flattening [456](#)
 - Hierarchy Browser
 - commands [526](#)
 - popup menu [526](#)
 - refreshing [526](#)
 - hierarchy browser
 - enabling/disabling display [481](#)
 - hierarchy separator [315](#)
 - High Reliability panel
 - Implementation Options dialog box [373](#)
 - How to Use Help command [489](#)
- I**
- I/O constraints
 - multiple on same port [244](#)
 - I/O Standards panel, SCOPE [250](#)
 - impl Tcl command [74](#)
 - implementation options
 - Options Panel [366](#)
 - Implementation Options command [348](#), [364](#)
 - Implementation Options dialog box [353](#), [364](#)
 - Constraints panel [368](#)
 - Device panel [365](#)
 - High Reliability panel [373](#)
 - Options panel [366](#)
 - Place and Route panel [393](#)
 - Timing Report panel [371](#)
 - Verilog panel [378](#)
 - VHDL panel [374](#)
 - implementation options, device
 - partdata tcl command [81](#)
 - Implementation Results panel
 - Options for implementation dialog box [370](#)
 - implementations
- creating [349](#)
 - naming [503](#)
- I** include command
 - verilog library directories [380](#)
- I** include files [29](#)
- I** index_collection command [223](#)
- I** Inputs/Outputs panel, SCOPE [242](#)
- I** Insert Sub-project command [362](#), [521](#)
- I** Instance Properties command (hierarchical project management) [519](#)
- I** instances
 - dissolving [461](#)
 - expanding paths between [454](#)
 - expansion maximum limit [482](#)
 - expansion maximum limit (per filtered sheet) [485](#)
 - expansion maximum limit (per unfiltered sheet) [485](#)
 - finding by name [328](#)
 - hiding and unhiding [460](#)
 - isolating paths through [460](#)
 - making transparent [461](#)
 - name display [480](#)
 - selecting all in schematic [463](#)
- I** Instances command
 - schematic selection [463](#)
 - sheet selection [463](#)
- I** IP
 - license queuing syntax [143](#)
- I** IP core wizard [397](#)
- I** IP cores (SYNCORE)
 - building ram models [401](#)
- I** Isolate Paths command [460](#)
- J**
- Job Status command [397](#), [400](#)
 - job tcl command [75](#)
- L**
- labels, displaying [480](#)
 - levels
 - See hierarchy
 - license
 - floating [489](#)
 - saving [490](#)
 - specifying in batch mode [142](#)
 - License Agreement command [489](#)
 - license queuing [144](#)

- Limit Number of Paths 445
Linux, 64-bit mapping 367
Log File
 HTML 345
 text 345
log file
 displaying 341
 Tcl commands for filtering 147
Log File command
 View menu 345
Log Watch window
 popup menu 494
Log Watch Window command 341
log_filter Tcl command
 syntax 76
log_report Tcl command 78
Lowercase command 329
- M**
- memory compiler 401
memory, saving 462
menubar 14
menus
 context-sensitive
 See popup menus
Edit 327
HDL Analyst 452
Help 489
online help 18
Options 464
popup
 See popup menus
Project 348
Run 395
View 340
Messages
 Tcl Window command 340
Mouse Stroke Tutor command 489
multicycle paths
 clocks as from/to points 272
 examples 262
POS 270
 using different start/end clocks 261
multiple drivers
 resolving 129
Multiple File Compilation Unit
 Verilog panel 379
multiple projects
- displaying project files 467
- N**
- naming rules 315
net drivers
 displaying and selecting 454
netlist formats
 Implementation Options dialog box, Implementation Results panel 371
nets
 expanding hierarchically from pins and ports 454
 finding by name 328
 selecting instances on 454
New command 322
New Implementation command 353
New Project command 322
Next Bookmark command 328
Next Error command 397
Next Sheet command 342
Normal View command 341
- O**
- object prefixes
 Tcl find command 155, 159
object properties
 annotated properties for analyst 166
object search order (Timing Analyzer) 446
object types
 Tcl find command 155, 159
objects
 displaying compactly 481
 expanding paths between 454
 filtering 455
 unselecting
 all in schematic 463
online help
 menus 18
online help toolbar 17
Open command
 File menu 322
Open Project command 322
open_design command 80
open_file command 81
opening
 project 322
operators

Tcl collection 177
option settings
 reporting 70
options
 setting 112
Options for implementation dialog box
 Implementation Results panel 370
Options menu 464
 commands 464
Options panel
 Implementation Options dialog box 366
output files
 log. *See* log file
 srs
 See srs file
overriding FSM Compiler 121
Overview of the Synopsys FPGA Synthesis
 Tools 13

P

Pan command 341
parameters
 overriding HDL 72
 SYNCore adder/subtractor 423
 SYNCore byte-enable RAM 416
 SYNCore counter 427
 SYNCore FIFO 403
 SYNCore RAM 412
 SYNCore ROM 419
partdata tcl command 81
Paste command 328
path delays
 clocks as from/to points 272
path filtering 445
paths
 expanding hierarchically from pins and
 ports 454
pins
 displaying names 480
 displaying on transparent instances 461
 expanding hierarchically from 454
 expanding paths between 454
 isolating paths from 460
 maximum on schematic sheet 485
Place and Route panel
 Implementation Options dialog box 393
place and route tcl commands
 job 75
pointers, mouse
 zoom 341
popup menus
 FSM Viewer 498
 Hierarchy Browser 526
 Log Watch window 494
 Project view 501
 RTL view 526
 Tcl window 495
 Technology view 526
ports
 displaying names 480
 expanding hierarchically from 454
 expanding paths between 454
 finding by name 328
 isolating paths from 460
 selecting all in schematic 463
Ports command
 schematic 463
 sheet 463
POS
 interface 269
preferences
 project file display 466
Preferred License Selection command 490
prefixes
 Timing Analyzer points 446
Previous bookmark command 328
Previous Error/Warning command 397
Previous Sheet command 342
primitives
 internal logic, displaying 481
Print command 322
Print Setup command 322
printing
 view 322
printing image
 Create Image command 322
Product of Sums
 See POS
program_terminate command 82
program_version command 83
project files
 organization into folders 466
Project menu 348
 commands 348
Project Options command 505
project Tcl command 84
Project view

display settings 466
popup menu 501
setting up 465
Project View Options command 464
project_data Tcl command 92
project_file Tcl command 93
project_folder
 Tcl command 94
projects
 adding files 350
 closing 322
 creating (Build Project) 322
 creating (New) 322
 displaying multiple 467
 opening 322
properties
 find command 166
 project 92
Push Tristates
 Verilog panel 379
Push/Pop Hierarchy command 342

Q
quitting a synthesis run 400

R
recent projects, opening 323
recording command 102
Redo command 328
Refresh command 494
Registers panel, SCOPE 245
regular expressions
 Tcl find command 155, 160
Reload command 526
Remove Files From Project command 348
Remove Implementation command 504
remove_from_collection command 225
Replace command
 Text Editor 328
replacing
 text 338
report_clocks command 103
report_messages command 104
reports
 timing report (.ta file) 440
reset_path timing constraint 284
Resolve Multiple Drivers option 129

resolving conflicting timing constraints 274
resource sharing
 Resource Sharing option 367
Resynthesize All command 395
RTL view
 displaying 81
 opening hierarchical view 453
 popup menu 526
 popup menu commands 526
 printing 322
Run All Implementations command 397
Run menu 395
 commands 395
Run Tcl Script command 397, 398

S
sar file
 Archive Project command 353
Save All command 322
Save As command 322
Save command 322
schematic objects
 displaying compactly 481
 expanding paths between 454
 filtering 455
 unselecting all 463
schematics
 displaying labels 480
 flattening 456
 navigating sheets 341
 opening hierarchical RTL 453
 sheet connectors 481
 unselecting objects 463
SCOPE
 Attributes panel 249
 clock groups 233
 Clocks panel 232
 Collections panel 239
 Compile Points panel 252
 Delay Paths panel 246
 Generated Clocks panel 237
 I/O Standards panel 250
 Inputs/Outputs panel 242
 Registers panel 245
 TCL View 255
SCOPE spreadsheet
 popup menu commands 494
 starting 230
SCOPE timing constraints summary 231

sdc
 standard sdc collection commands 217
sdc2fdc utility 111
Select All command 328
Select All States command 343
Select in Analyst command 495
Select Net Driver command
 current level 455
 hierarchical 454
Select Net Instances command
 current level 455
 hierarchical 454
Selected command 342
sequential elements
 naming 315
sequential optimizations
 disabling 121
Set Library command 348
set modules command (collections) 241
set modules_copy command (collections) 241
Set Slack Margin command 459
Set VHDL Library command 348
set_case_analysis timing constraint 286
set_clock_groups timing constraint 288
set_clock_latency timing constraint 293
set_clock_route_delay timing constraint 295
set_clock_uncertainty timing constraint 296
set_false_path timing constraint 298
set_hierarchy_separator command 315
set_input_delay timing constraint 301
set_max_delay timing constraint 303
set_multicycle_path timing constraint 306
set_option
 Resolve Multiple Drivers 129
set_option Tcl command 112
set_output_delay timing constraint 310
set_reg_input_delay timing constraint 313
set_reg_output_delay timing constraint 314
set_rtl_ff_names command 315
settings
 reporting option 70
sheet connectors 481
Show All Hier Pins command 461
Show Compile Points command 505
Show Context command 460
Show Critical Path command 459
Show Timing Information command 459
sizeof_collection command 226
slack
 margin
 setting 459
 slack margin 445
srm file
 hidden logic not saved 462
srr file
 See log file
srs file
 hidden logic not saved
start/end points
 Timing Report panel, Implementation Options dialog box 372
state machines
 See also FSM Compiler, FSM viewer, FSMs.
 displaying in FSM viewer 463
encoding
 displaying 500
 filtering states and transitions 342
Status Bar command 340
status_report Tcl command 135
stopping a synthesis run 400
symbols
 enabling name display 480
 finding by name 328
syn_connect 140
syn_create_err_net 141
syn_reference_clock attribute
 effect on multiple I/O constraints 245
syn_tristatetomux attribute
 effect of tristate pushing 382
SYNCore
 adder/subtractor parameters 423
 byte-enable RAM parameters 416
 counter parameters 427
 FIFO parameters 403
 RAM parameters 412
 ROM parameters 419
 SYNCore wizard 397, 401
Synopsys FPGA implementation tools
 product information 488
Synopsys FPGA products 488
Synopsys FPGA Synthesis Tools
 overview 13
Synopsys Home Page command 488
Synplify Pro tool
 user interface 13

Synplify tool
 user interface 13
synplify_pro command-line command 142
syntax
 bus dimension separator 316
 bus naming 316
Syntax Check command 396
synthesis
 stopping 400
Synthesis Check command 396
synthesis jobs
 monitoring 400
synthesis software
 gui 13
synthesis_off directive, handling 375
synthesis_on directive, handling 375
Synthesize command 395
SystemVerilog 379

T

Tcl
 c_diff collection command 178
 c_intersect collection command 179
 c_list collection command 180
 c_print collection command 181
 c_symdiff collection command 182
 c_union collection command 183
 collection commands 177
 set_modules collection command 185
 -verilog argument 28
 -vhdl argument 28
Tcl (Tool Command Language) 12
tcl argument
 -_include 29
Tcl collection commands 177
 c_diff 178
 c_intersect 179
 c_list 180
 c_print 181
 c_symdiff 182
 c_union 183
 set_modules 185
Tcl collection operators 177
Tcl commands
 add_file 28
 add_folder 32
 collections 240
 constraint_file 40
 get_env 70
 get_option 70
 hdl_param 72
 impl 74
 log file commands 147
 project 84
 project_data 92
 project_file 93
 project_folder 94
 set_option 112
Tcl conventions 12
Tcl expand command 173
Tcl find command 151
 case sensitivity 157, 160
 examples 161
 object prefixes 155, 159
 object types 155, 159
 regular expression syntax 155, 160
 special characters 155, 160
 syntax 152
 wildcards 155, 160
TCL Help command 489
Tcl Script
 Tcl Window command 340
Tcl scripts
 running 397, 398
Tcl shell command
 sdc2fdc 111
TCL View, SCOPE 255
Tcl window
 popup menu 495
Tcl Window command 340
Technical Resource Center
 specifying PDF reader (UNIX) 487
 specifying web browser (UNIX) 487
Technology view
 creating 453
 popup menu 526
 popup menu commands 526
 printing 322
technology view
 displaying 81
text
 copying, cutting and pasting 327
 replacing 338
Text Editor
 popup menu commands 495
 printing 322
through constraints

- point-to-point delays [247](#)
 through points
 clocks [272](#)
 lists, multiple [269](#)
 lists, single [268](#)
 multiple [269](#)
 product of sums UI [269](#)
 single [268](#)
 specifying for timing exceptions [268](#)
 specifying for timing report [444](#)
- timing analyst
 generating report [440](#)
- timing analyzer
 wildcards [449](#)
- timing constraints
 checking [396](#)
 conflict resolution [274](#)
 constraint priority [274](#)
 create_clock [279](#)
 create_generated_clock [281](#)
 FPGA [278](#)
 reset_path [284](#)
 set_case_analysis [286](#)
 set_clock_groups [288](#)
 set_clock_latency [293](#)
 set_clock_route_delay [295](#)
 set_clock_uncertainty [296](#)
 set_false_path [298](#)
 set_input_delay [301](#)
 set_max_delay [303](#)
 set_multicycle_path [306](#)
 set_output_delay [310](#)
 set_reg_input_delay [313](#)
 set_reg_output_delay [314](#)
- timing exceptions
 False Paths panel [264](#)
 multicycle paths [261](#)
 priority [274](#)
 specifying paths/points [264](#)
- timing information, displaying (HDL Analyst tool) [459](#)
- timing report
 asynchronous clock report [442](#)
 defining through points [444](#)
 file (.ta) [440](#)
 specifying slack margin [445](#)
 using path filtering [445](#)
- timing report file
 generating custom [441](#)
 stand-alone [443](#)
- Timing Report panel
 Implementation Options dialog box [371](#)
 Number of Critical Paths [372](#)
 Start/End Points [372](#)
- timing reports
 file. See [timing report file](#)
 filtering [442](#)
 parameters [440](#)
 stand-alone [440](#)
 stand-alone (.ta file) [440](#)
 Tip of the Day command [490](#)
 to points [446](#)
 clocks [271](#)
 multiple [267](#)
 objects [266](#)
 Timing Analyzer [446](#)
 Toggle bookmark command [328](#)
- toolbar
 online help [17](#)
- Toolbars command [340](#)
- tooltips
 displaying [344](#)
- transparent instances
 displaying pins [461](#)
- tristates
 pushing tristates, description [381](#)
 pushing tristates, example [381](#)
 pushing tristates, pros and cons [381](#)
- U**
- Uncomment Code [329](#)
- Undo command [328](#)
- Unfilter command [343](#)
- unfiltering [460](#)
 FSM diagram [343](#)
 schematic [460](#)
- Unflatten Current Schematic command [457](#)
- Unhide Instances command [460](#)
- unhiding hidden instance [460](#)
- Unselect All command [463](#)
 View menu (FSM Viewer) [343](#)
- Uppercase command [329](#)
- user interface
 Synplify Pro tool [13](#)
 Synplify tool [13](#)
- utilities
 sdc2fdc [111](#)

V

variables

- accessing, `get_env` Tcl command [70](#)
- reporting [70](#)

VCS Simulator command [397](#)

Vendor Constraints

- Implementation Results panel, Implementation Options dialog box [371](#)
- writing [371](#)

Verilog

- 'ifdef and 'define statements [383](#)
- allow duplicate modules (Tcl option) [117](#)
- beta features [386](#)
- compiler, configuring [464](#)
- extract design parameters [383](#)
- library directories [380](#)
- specifying compiler directives [383](#)

Verilog 2001

- Verilog panel [379](#)

-verilog argument

- Tcl [28](#)

Verilog include files

- using `_SEARCHFILENAMEONLY_` directive [388](#)

Verilog panel [379](#)

- Implementation Options dialog box [378](#)

- Multiple File Compilation Unit [379](#)

- options [379](#)

- Push Tristates [379](#)

- SystemVerilog [379](#)

version information [490](#)

VHDL

- compiler, configuring [464](#)
- enumeration encoding, default [375](#)
- ignoring code with synthesis off/on [375](#)

-vhdl argument

- Tcl [28](#)

VHDL libraries

- setting up [352](#)

VHDL panel

- Implementation Options dialog box [374](#)

View FSM command [463](#)

View FSM Info File command [463](#)

View Log File command [341](#)

View menu [340](#)

- commands [340](#)

- Filter submenu [342](#)

- Log File command [345](#)

- RTL and Technology view commands [341](#)

View Result File command [341](#)

View Sheets command [342](#)

Visual Properties command [342](#)

W

web browser, specifying for UNIX [487](#)

wildcards

Tcl find command [154, 155, 160](#)

text Find [330](#)

text replacement [338](#)

timing analyzer [449](#)

Windows, 64-bit mapping [367](#)

Write Output Netlist Only command [396](#)

Z

zoom mouse pointer [341](#)

Zoom Out command [341](#)

