

Missile Interference Test

ANSYS, Inc.

Problem Statement

Engineers and operators need to quickly model and analyze a telemetry link from a missile launch and to determine how various settings on a radar will affect its ability to track a missile. You are launching a test missile from a launch pad located on the Pacific Coast of the United States. The missile will transmit telemetry data to a communications system on board a ship anchored off the coast. The missile's telemetry data will be transmitted on an S-band frequency, which is close to a frequency used by multiple high-power satellite digital audio radio service (SDARS) satellites. Phase one of your test will determine if the satellites, which provide XM radio service, will interfere with ship's ability to receive the test missile telemetry data. Phase two of your test will determine for how long a shipborne radar system can detect and track the missile during its flight. A custom radar cross section and a radar antenna pattern file are required for your analysis.

This example is based on [this](#) tutorial.

Launch a new STK instance

```
from ansys.stk.core.stkengine import STKEngine

stk = STKEngine.start_application(no_graphics=False)
print(f"Using {stk.version}")
```

Using STK Engine v13.1.0

Create a new scenario


```
root = stk.new_object_root()
root.new_scenario("CommRadar_MissileTest_Interference")
```

Once the scenario is created, you can view a 3D graphics window by running:

```
from ansys.stk.core.experimental.jupyterwidgets import GlobeWidget
```

```
globe_widget = GlobeWidget(root, 640, 480)
globe_widget.camera.position = [0, 0, 0]
globe_widget.show()
```

```
RFBOutputContext()
```

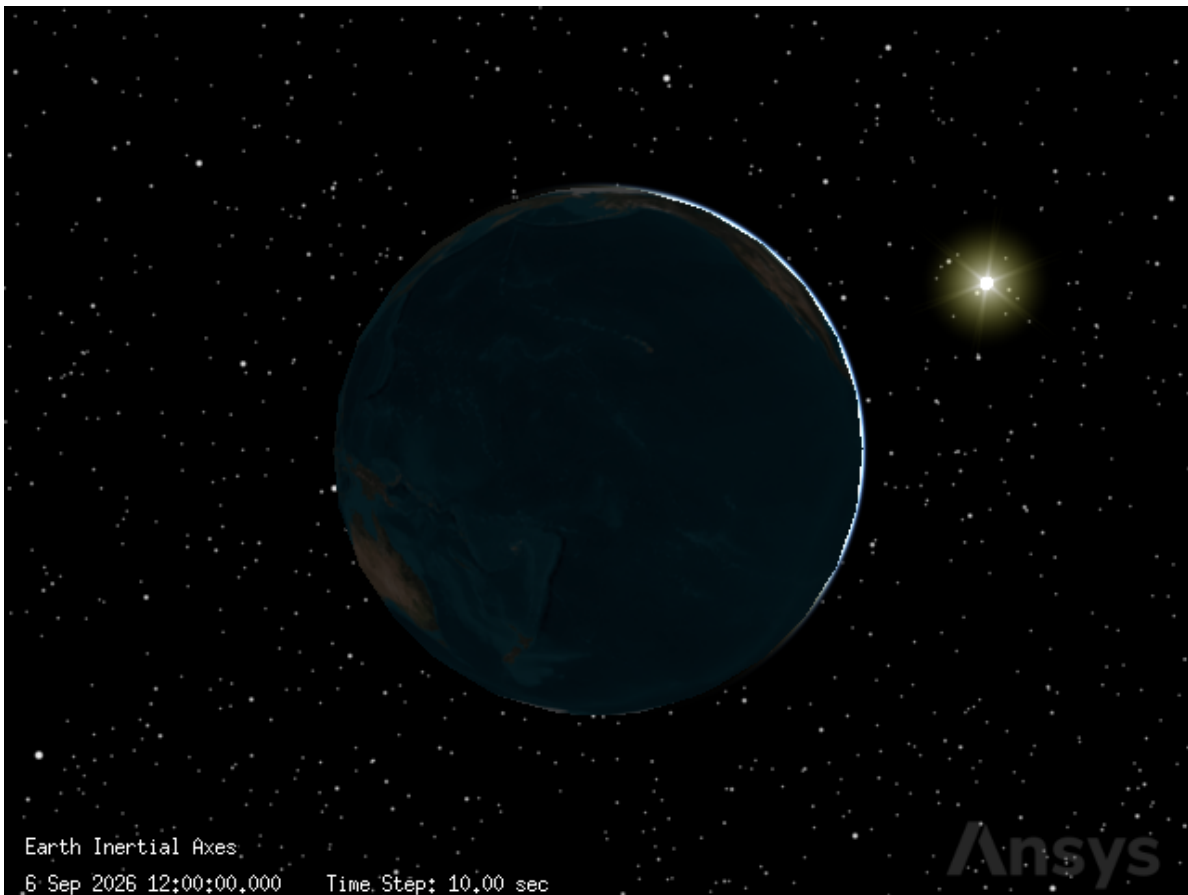


Once the scenario is created, you can view a 2D graphics window by running:

```
from ansys.stk.core.experimental.jupyterwidgets import MapWidget
```

```
map_widget = MapWidget(root, 640, 480)  
map_widget.show()
```

```
RFBOutputContext()
```

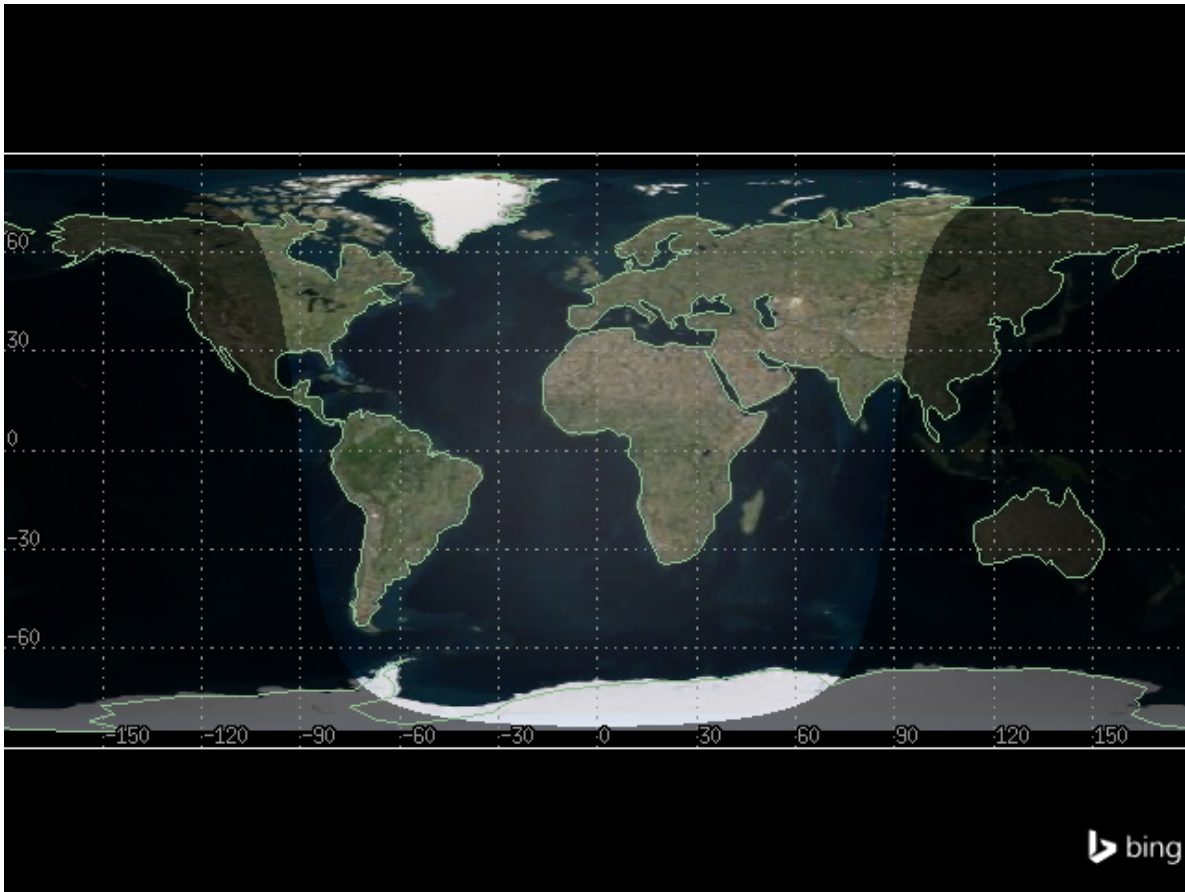

Set the scenario time period

```
scenario = root.current_scenario  
scenario.set_time_period("10 June 2026 16:00:00.000", "10 June 2026 16:35:00.000")  
root.rewind()
```

Model the test missile

Insert a new Missile object

```
from ansys.stk.core.stkobjects import Missile, STKObjectType

test_missile = scenario.children.new(STKObjectType.MISSILE, "test_missile")
```

First, set the units properly. Setting units proactively is a great practice!

```
root.units_preferences.item("Latitude").set_current_unit("deg")
root.units_preferences.item("Longitude").set_current_unit("deg")
root.units_preferences.item("Distance").set_current_unit("km")
```

Next, design the missile's trajectory:

```
from ansys.stk.core.stkobjects import (
    IPropagator,
    PropagatorType,
    VehicleImpactLocationPoint,
    VehicleLaunchControl,
)

test_missile.set_trajectory_type(PropagatorType.BALLISTIC)
trajectory = test_missile.trajectory
root.units_preferences.set_current_unit("DateFormat", "EpSec")
trajectory.ephemeris_interval.set_explicit_interval(0, 0)
```

Next, set the launch parameters:

```
trajectory.launch.latitude = 34.7556
trajectory.launch.longitude = -120.6223
trajectory.launch.altitude = 0.0024385
```

Then, set the impact parameters:

```
impact_location = trajectory.impact_location


impact_location.impact.latitude = 10
impact_location.impact.longitude = 173
impact_location.set_launch_control_type(VehicleLaunchControl.FIXED_DELTA_V)
impact_location.launch_control.delta_v = 6.90194
impact_location.impact.altitude = 0.0024385
```

Lastly, propagate:

```
trajectory.propagate()
```

We can now view the test missile's trajectory:

```
globe_widget.camera.position = [  
    19252.274451116944,  
    4639.005171788969,  
    5592.340350242526,  
]  
globe_widget.show()
```

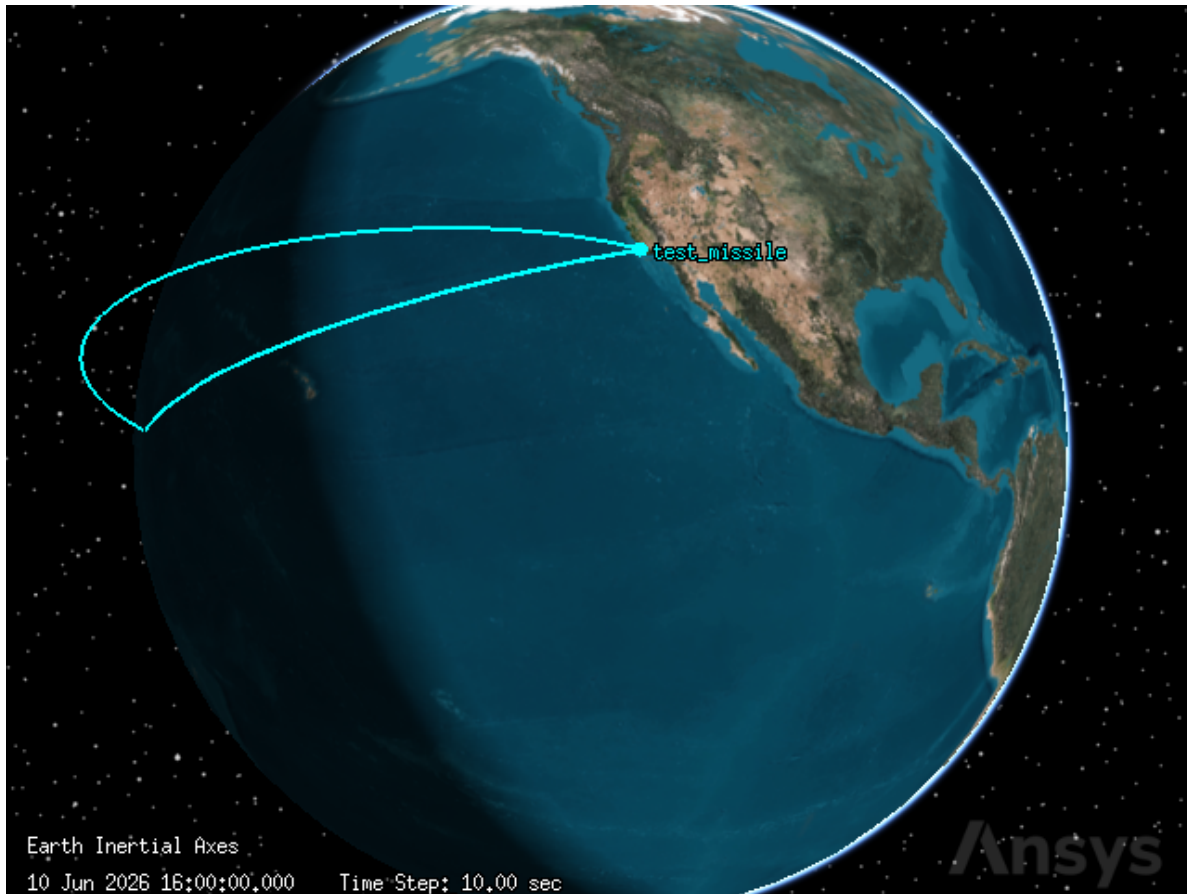

Generate an Altitude vs Ground Range report

Use a data provider to generate the report:

```
provider = test_missile.data_providers.item("Ground Range").group.item("Fixed")
```

Then, set the time step. This is set in seconds.

```
time_step = 60
```

Now, generate the report

```
ground_range_report = provider.execute(  
    scenario.start_time, scenario.stop_time, time_step  
)  
.data_sets.to_pandas_dataframe()  
ground_range_report[["time", "ground range", "alt"]]
```

	time	ground range	alt
0	0.000000	0.000000	0.002439
1	60.000000	301.676840	260.064691
2	120.000000	583.118013	499.216861
3	180.000000	847.852529	718.512810
4	240.000000	1098.671575	918.858608
5	300.000000	1337.823957	1101.034496
6	360.000000	1567.152601	1265.712771
7	420.000000	1788.192134	1413.472302
8	480.000000	2002.240180	1544.810324
9	540.000000	2210.410493	1660.152024
10	600.000000	2413.673339	1759.858308
11	660.000000	2612.886786	1844.232104
12	720.000000	2808.821442	1913.523422
13	780.000000	3002.180442	1967.933378
14	840.000000	3193.615990	2007.617338
15	900.000000	3383.743447	2032.687278
16	960.000000	3573.153709	2043.213460
17	1020.000000	3762.424484	2039.225468
18	1080.000000	3952.131000	2020.712645
19	1140.000000	4142.856596	1987.623944
20	1200.000000	4335.203689	1939.867192
21	1260.000000	4529.805577	1877.307735
22	1320.000000	4727.339673	1799.766429
23	1380.000000	4928.542825	1707.016899
24	1440.000000	5134.229617	1598.781976
25	1500.000000	5345.314770	1474.729189
26	1560.000000	5562.841230	1334.465127
27	1620.000000	5788.016086	1177.528478
28	1680.000000	6022.257463	1003.381452
29	1740.000000	6267.256879	811.399239
30	1800.000000	6525.063875	600.857076

	time	ground range	alt
31	1860.000000	6798.203245	370.914372
32	1920.000000	7089.841134	120.595274
33	1947.222881	7229.313516	0.002439

Model the test missile's transmitter

Insert a Transmitter object

```
from ansys.stk.core.stkobjects import Transmitter
```

```
missile_transmitter = test_missile.children.new(STKObjectType.TRANSMITTER, "Missile_Tx")
```

Use a Medium Transmitter model

```
missile_transmitter.model_component_linking.set_component("Medium Transmitter Model")
transmitter_model = missile_transmitter.model_component_linking.component
```

Set the transmitter properties

```
transmitter_model.frequency = 2.31
transmitter_model.power = 19.03
transmitter_model.antenna_gain = -0.57
transmitter_model.data_rate = 2.048
```

Set the transmitter modulation options

```
transmitter_model.set_modulator("BPSK")
transmitter_model.modulator.enable_signal_psd = True
```

Model the ship

Insert a new Ship object

```
from ansys.stk.core.stkobjects import Ship
```

```
ship = scenario.children.new(STKObjectType.SHIP, "Ship")
```

Define the ship's route options

In the tutorial, the ship is defined to be stationary. First, set the propagator type to great arc:

```
from ansys.stk.core.stkobjects import (  
    IGreatArcVehicle,  
    PropagatorGreatArc,  
    PropagatorType,  
    VehicleWaypointComputationMethod,  
)
```

```
IGreatArcVehicle(ship).set_route_type(PropagatorType.GREAT_ARC)
```

Second, set the altitude reference:

```
from ansys.stk.core.stkobjects import VehicleAltitudeReference
```

```
ship.route.set_altitude_reference_type(VehicleAltitudeReference.WGS84)
```

Now, we can propagate. Set the latitude, longitude, and the timing.

```
PropagatorGreatArc(IGreatArcVehicle(ship).route).set_points_specify_time_and_propagate(  
    [  
        [scenario.start_time, 34.196, -120, 0, 0],  
        [scenario.stop_time, 34.196, -120, 0, 0],  
    ]  
)
```

Insert a Sensor Object

```
from ansys.stk.core.stkobjects import Sensor, SensorPattern, SensorSimpleConicPattern
```

```
antenna_motor = ship.children.new(STKObjectType.SENSOR, "Antenna_Motor")
```

Define the sensor's cone half angle

```
antenna_motor.set_pattern_type(SensorPattern.SIMPLE_CONIC)  
SensorSimpleConicPattern(antenna_motor.pattern).cone_angle = 5
```

Set the antenna motor's location type to fixed.

```
from ansys.stk.core.stkobjects import SensorLocation
```

```
antenna_motor.set_location_type(SensorLocation.FIXED)
```

After the location type is set to fixed, the location is editable using cartesian coordinates.

```
root.units_preferences.item("Distance").set_current_unit("ft")
antenna_motor.location_data.assign_cartesian(75, 0, 75)
```

Target the test missile.


```
from ansys.stk.core.stkobjects import BoresightType, TrackMode
```

```
antenna_motor.common_tasks.set_pointing_targeted_tracking(
    TrackMode.RECEIVE, BoresightType.ROTATE, "Missile/test_missile"
)
```

```
<ansys.stk.core.stkobjects.SensorPointingTargeted at 0x763970a26360>
```

View the targeted antenna in the 3D graphics window

```
globe_widget.camera.position = [
    16443720.539118323,
    5550468.64120438,
    11651969.751643106,
]
globe_widget.show()
```

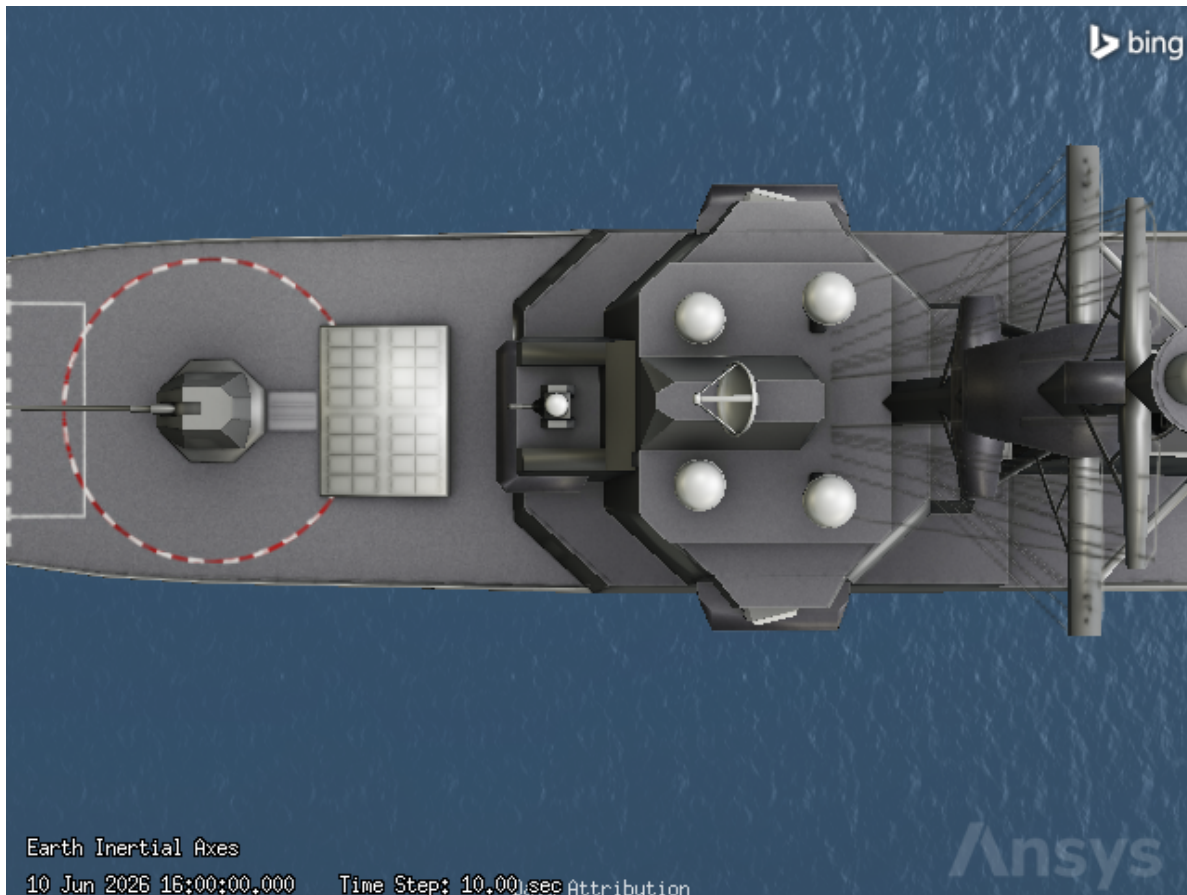

Model the test ship's receiver

Insert a Receiver object that is attached to the “antenna motor” sensor.

```
from ansys.stk.core.stkobjects import Receiver
```

```
ship_receiver = antenna_motor.children.new(STKObjectType.RECEIVER, "Ship_Rx")
```

Use a Complex Receiver model. Once this is set we can edit its properties.

```
ship_receiver.model_component_linking.set_component("Complex Receiver Model")  
receiver_model = ship_receiver.model_component_linking.component
```

Now we can set the receiver to automatically track frequency.

```
receiver_model.track_frequency_automatically = True
```

Define the receiver's antenna specifications. First, set the antenna model to helix.

```
from ansys.stk.core.stkobjects import AntennaModelHelix, IAntennaModel
```

```
receiver_model.antenna_control.embedded_model_component_linking.set_component("Helix")  
helix_model = receiver_model.antenna_control.embedded_model_component_linking.component
```

Once the antenna model is set to “helix,” we can edit these properties:

```
IAntennaModel(helix_model).design_frequency = 2.5  
helix_model.diameter = 0.9  
helix_model.efficiency = 55  
helix_model.turn_spacing = 0.001  
helix_model.number_of_turns = 3  
helix_model.backlobe_gain = -30
```

Let's now visualize the receiver's antenna pattern. First define a volume variable.

```
from ansys.stk.core.stkobjects import AntennaVolumeGraphics
```

```
volume = ship_receiver.graphics_3d.volume
```

Before anything else, we must set show volume to “true.” Once this is set, we can edit the rest of the properties.

```
volume.show = True  
volume.gain_scale = 0.5
```

We are now able to edit the pattern properties. These can be set all together at once:

```
volume.set_resolution(  
    azimuth_start=-180,  
    azimuth_stop=180,  
    azimuth_resolution=1,  
    elevation_start=0,  
    elevation_stop=90,  
    elevation_resolution=1,  
)
```

Add gain coloring

```
from ansys.stk.core.stkobjects import FigureOfMeritGraphics2DColorMethod
```

```
volume.color_method = FigureOfMeritGraphics2DColorMethod.EXPLICIT  
volume.relative_to_maximum = True
```

Next, add levels to the shading:

```
levels = volume.levels  
levels.clear()  
  
for gain in range(-70, 1, 10):  
    level = levels.add(gain)
```

Analyze the telemetry downlink's link budget

Create a simple link budget to calculate the bit error rate (BER), which reflects of how often errors occur in the transmission of digital data. You can compute a simple link budget using the Access tool. For the purposes of this analysis, a Bit Error Rate of 1.000000e-09 or lower is acceptable.

First, create and compute an access between the receiver and transmitter:

```
from pandas import DataFrame  
  
from ansys.stk.core.stkobjects import Access, ISTKObject  
  
access = ISTKObject(ship_receiver).get_access_to_object(missile_transmitter)  
access.compute_access()
```

After computing the access, we can use data providers to retrieve the link information data.

```
provider = access.data_providers.item("Link Information")
```

Finally, create and generate the link budget report.

```
link_budget_report = provider.execute(  
    scenario.start_time, scenario.stop_time, time_step  
)  
.data_sets.to_pandas_dataframe()
```

Focus on the ber column:

```
link_budget_report[["ber"]]
```

	ber
0	0.0
1	0.0
2	0.0
3	0.0
4	0.0
5	0.0
6	0.0
7	0.0
8	0.000001
9	0.00001
10	0.000044
11	0.000132
12	0.000311
13	0.000618
14	0.001082
15	0.001721
16	0.002542
17	0.00354
18	0.004703
19	0.006016
20	0.007459
21	0.007942

Insert the interfering satellites

Get the STK database location using Connect

```
from pathlib import Path
```

```
from ansys.stk.core.stkobjects import ExecuteCommandResult
```

```
result = root.execute_command("GetDirectory / Database Satellite")
satellite_data_dir = result[0]
file_location = ''' + str(Path(satellite_data_dir) / Path(r"stkAllTLE.sd")) + '''
```

Import object from database using Connect

```
command = f"ImportFromDB * Satellite {file_location} Propagate On CommonName SXM-8"
root.execute_command(command)
```

```
command = f"ImportFromDB * Satellite {file_location} Propagate On CommonName SXM-9"
root.execute_command(command)

command = f"ImportFromDB * Satellite {file_location} Propagate On CommonName SXM-10"
root.execute_command(command)
```

```
<ansys.stk.core.stkutil.ExecuteCommandResult at 0x763970a69460>
```

Assign the satellites to variables:

```
from ansys.stk.core.stkobjects import Satellite
```

```
sxm_8 = scenario.children.item("SXM-8_48838")
sxm_9 = scenario.children.item("SXM-9_62259")
sxm_10 = scenario.children.item("SXM-10_64290")
```

Model the interfering satellites' transmitters

```
from ansys.stk.core.stkobjects import TransmitterModelMedium
```

```
transmitters = []
```

```
for satellite in [sxm_8, sxm_9, sxm_10]:
    transmitter = ISTKObject(satellite).children.new(
        STKObjectType.TRANSMITTER, "Transmitter"
    )

    transmitter.model_component_linking.set_component("Medium Transmitter Model")

    transmitter_model = TransmitterModelMedium(
        transmitter.model_component_linking.component
    )

    transmitter_model.frequency = 2.3347
    transmitter_model.power = 41.2385
    transmitter_model.data_rate = 0.048
    transmitter_model.antenna_gain = 40

    transmitter_model.set_modulator("QPSK")
    transmitter_model.modulator.scale_bandwidth_automatically = True
```

```
transmitters.append(transmitter)
```

Assign the satellite transmitters to the existing satellite variables:

```
sxm_8_transmitter = transmitters[0]
sxm_9_transmitter = transmitters[1]
sxm_10_transmitter = transmitters[2]
```

Check for interference

There are several methods through which you can determine the impact of interference on a system. For less complex systems, like the one in this scenario, you can compute interference effects directly in a Receiver object.

Create an interference variable. Use this to modify the interference on the receiver.

```
from ansys.stk.core.stkobjects import ISTKObject, RFInterference

interference = RFInterference(
    ship_receiver.model_component_linking.component.interference
)
```

We have to enable interference before we are able to edit the interference sources:

```
interference.enabled = True
```

Only now are we able to add the interference sources.

```
interference.emitters.add(sxm_8_transmitter.path)
interference.emitters.add(sxm_9_transmitter.path)
interference.emitters.add(sxm_10_transmitter.path)
```

Determine the impact of interference with a Link Budget - Interference report. First, compute the access.

```
access = ISTKObject(ship_receiver).get_access_to_object(missile_transmitter)
access.compute_access()
```

Next, use data providers to retrieve the link information data.

```
provider = access.data_providers.item("Link Information")
```

Finally, generate the link budget report.

```
link_budget_report = provider.execute(
    scenario.start_time, scenario.stop_time, time_step
).data_sets.to_pandas_dataframe()
```

Focus on the ber and ber+i columns:

```
link_budget_report[["ber", "ber+i"]]
```

	ber	ber+i
0	0.0	0.0
1	0.0	0.053852
2	0.0	0.227621
3	0.0	0.302732
4	0.0	0.339659
5	0.0	0.360267
6	0.0	0.372342
7	0.0	0.37918
8	0.000001	0.382307
9	0.00001	0.382398
10	0.000044	0.379608
11	0.000132	0.373657
12	0.000311	0.363746
13	0.000618	0.348244
14	0.001082	0.323913
15	0.001721	0.283953
16	0.002542	0.213095
17	0.00354	0.086401
18	0.004703	0.007062
19	0.006016	0.00882
20	0.007459	0.010712
21	0.007942	0.011336

Mitigate interference with a spectrum filter

To use a filter, we have to enable it:

```
receiver_model.enable_filter = True
```

We are now able to set the filter type. Set it to Butterworth for this scenario.

```
receiver_model.filter_component_linking.set_component("Butterworth")
ship_receiver_filter = receiver_model.filter_component_linking.component
```

Then, set the Butterworth filter properties:

```
ship_receiver_filter.upper_bandwidth_limit = 20
ship_receiver_filter.lower_bandwidth_limit = -20
ship_receiver_filter.cut_off_frequency = 5
ship_receiver_filter.order = 4
```

Recompute the Link Budget - Interference report. The access must be refreshed first.

```
access = ISTKObject(ship_receiver).get_access_to_object(missile_transmitter)
access.compute_access()
```

Then retrieve the link information data:

```
provider = access.data_providers.item("Link Information")
```

Generate the link information report.

```
link_budget_report = provider.execute(
    scenario.start_time, scenario.stop_time, time_step
).data_sets.to_pandas_dataframe()
```

Focus on the ber and ber+i columns:

```
link_budget_report[["ber", "ber+i"]]
```

	ber	ber+i
0	0.0	0.0
1	0.0	0.0
2	0.0	0.0
3	0.0	0.0
4	0.0	0.0
5	0.0	0.0
6	0.0	0.0
7	0.0	0.0
8	0.000002	0.000002
9	0.000015	0.000015
10	0.000059	0.000059
11	0.00017	0.00017
12	0.00039	0.00039
13	0.000758	0.000758
14	0.001303	0.001303
15	0.002041	0.002041
16	0.002975	0.002975

	ber	ber+i
17	0.004097	0.004097
18	0.005393	0.005393
19	0.006843	0.006843
20	0.008426	0.008426
21	0.008953	0.008953

Model the ship's radar

First, insert a radar object

```
from ansys.stk.core.stkobjects import Radar
```

```
ship_radar = ship.children.new(STKObjectType.RADAR, "Ship_Radar")
```

Next, set the radar system to monostatic.

```
ship_radar.model_component_linking.set_component("Monostatic")
monostatic_radar = ship_radar.model_component_linking.component
```

Once the radar system is set to monostatic, we can specify the mode. Select search track.

```
monostatic_radar.mode_component_linking.set_component("Search Track")
monostatic_search_track_radar = monostatic_radar.mode_component_linking.component
```

Only after setting the mode to search track can we modify the pulse width. This property is located in the pulse definition sub-tab of the waveform sub-tab.

```
monostatic_search_track_radar.waveform.pulse_definition.pulse_width = 8.8e-7
```

Then, set the goal signal-to-noise ratio. This is also located in the pulse definition sub-tab of the waveform sub-tab.

```
monostatic_search_track_radar.waveform.pulse_integration.snr = 20
```

Configure the radar's antenna model to use an external pattern.

```
from ansys.stk.core.stkobjects import AntennaControl, AntennaModelExternal
```

```
antenna_control = ship_radar.model_component_linking.component.antenna_control
antenna_control.embedded_model_component_linking.set_component(
    "External Antenna Pattern"
```

```
)
```

```
external_model = AntennaModelExternal(  
    antenna_control.embedded_model_component_linking.component  
)
```

Once an external pattern is selected, set the design frequency:

```
external_model.design_frequency = 2.8
```

Then, specify the file from which the pattern will be provided.

```
import pathlib
```

```
install_dir = root.execute_command("GetDirectory / STKHome")[0]  
external_model.filename = str(  
    pathlib.Path(install_dir)  
    / "Data"  
    / "Resources"  
    / "stktraining"  
    / "samples"  
    / "ASR9Low.pattern"  
)
```

Set the radar antenna's orientation. These properties are located in the orientation sub-tab of the antenna tab.

```
root.units_preferences.item("SmallDistance").set_current_unit("ft")
```

```
antenna_control.embedded_model_orientation.position_offset.set(37, 0, 120)
```

Create a radar transmitter:

```
from ansys.stk.core.stkobjects import RadarFrequencySpecificationType, RadarReceiver
```

```
radar_transmitter = ship_radar.model_component_linking.component.transmitter
```

Set the radar transmitter specifications. First, select frequency as the independent property. Wavelength will be dependent on frequency.

```
radar_transmitter.frequency_specification = RadarFrequencySpecificationType.FREQUENCY
```

```
radar_transmitter.frequency = 2.8
```

Set the power of the radar transmitter. This does not depend on frequency or wavelength.

```
radar_transmitter.power = 100.414
```

Create a radar receiver:

```
radar_receiver = ship_radar.model_component_linking.component.receiver
```

Adjust the radar receiver LNA gain

```
radar_receiver.lna_gain = 25
```

Define the missile's radar cross section

The Radar capability enables you to specify an important property of a potential radar target: its radar cross section (RCS). You can define the missile's RCS using an external RCS file. External RCS files can contain real-valued pattern data or complex-valued pattern data.

First, the missile must not inherit its cross section. We will specify it ourselves. It is now editable.

```
test_missile.radar_cross_section.inherit = False
```

Create a rcs band variable to manage the cross section properties:

```
from ansys.stk.core.stkobjects import (
    RadarCrossSectionComputeStrategyExternalFile,
    RadarCrossSectionFrequencyBand,
)
```

```
rcs_band = test_missile.radar_cross_section.model_component_linking.component.frequency_bands[0]
)
```

Select an external file for the radar cross section.

```
rcs_band.set_compute_strategy("External File")
```

```
external_file_compute_strategy = rcs_band.compute_strategy
external_file_compute_strategy.filename = str(
    pathlib.Path(install_dir)
    / "Data"
    / "Resources"
    / "stktraining"
```

```

    / "samples"
    / "Basic_missile_mono.rcs"
)

```

Compute access

Determine if the ship's radar can track the test missile. Refresh the access variable:

```

access = ISTKObject(ship_radar).get_access_to_object(test_missile)
access.compute_access()

```

Create a custom report

Create a custom report style that shows azimuth-elevation-range (AER) and Radar Search/Track data. First, we will generate the AER Data portion of the report.

```

provider = access.data_providers.item("AER Data").group.item("BodyFixed")
aer_and_search_track_data = provider.execute(
    scenario.start_time, scenario.stop_time, time_step
).data_sets.to_pandas_dataframe()
print(aer_and_search_track_data[["time", "azimuth", "elevation", "range"]])

```

	time	azimuth	elevation	range
0	0.068662	-47.33435997690291	-0.19276471290045324	277499.68702389224
1	60.0	-2.278785030710994	34.067636249985355	1462814.02656295
2	120.0	2.637287438600781	34.305712102262504	2708711.7986098365
3	180.0	4.366064376252702	33.09089860338797	3896635.8925933205
4	240.0	5.1966484986581	31.52785544269757	5026421.219034072
5	300.0	5.651390966273694	29.833384453985886	6101062.783855856
6	360.0	5.9140062215640965	28.075614790646533	7123754.095134587
7	420.0	6.065621002107361	26.280807621897182	8097502.7277088445
8	480.0	6.147579911346308	24.459870205420977	9025068.15801134
9	540.0	6.1831565878512755	22.61707804832553	9908977.02534137
10	600.0	6.186450005446279	20.753497348091905	10751553.923284285
11	660.0	6.166496954712688	18.868514539739248	11554945.44885367
12	720.0	6.129357232929657	16.960564389757398	12321151.070449246
13	780.0	6.079247737257478	15.027500470739561	13052049.856776178
14	840.0	6.019194938455114	13.066803550730233	13749418.772868508
15	900.0	5.951430214661957	11.075683708460717	14414955.052709023
16	960.0	5.8776383478087455	9.051131924729772	15050295.712756773
17	1020.0	5.799118657490446	6.989955117389711	15657031.341973325
18	1080.0	5.716893860744762	4.888778704277576	16236723.754792009

```

19      1140.0   5.631784727363819    2.7440463944039273   16790919.85576909
20      1200.0   5.544463350887707    0.552001321355068   17321167.599849485
21  1220.10828   5.514804058289774   -0.19390516566196064   17493786.858176887

```

Second, we will generate the Radar SearchTrack portion of the report.

```

root.units_preferences.item("Distance").set_current_unit("km")

provider = access.data_providers.item("Radar SearchTrack")
aer_and_search_track_data = provider.execute(
    scenario.start_time, scenario.stop_time, time_step
).data_sets.to_pandas_dataframe()
print(
    aer_and_search_track_data[
        ["s/t integrated snr", "s/t integrated pdet", "s/t pulses integrated"]
    ]
)

```

	s/t integrated snr	s/t integrated pdet	s/t pulses integrated
0	22.576748	1.000000	2.0
1	-5.494893	0.000105	512.0
2	-16.636145	0.000101	512.0
3	-21.211116	0.000100	512.0
4	-23.659155	0.000100	512.0
5	-24.981974	0.000100	512.0
6	-25.834754	0.000100	512.0
7	-27.150925	0.000100	512.0
8	-28.248083	0.000100	512.0
9	-30.037316	0.000100	512.0
10	-32.302380	0.000100	512.0
11	-33.878631	0.000100	512.0
12	-35.741058	0.000100	512.0
13	-35.864041	0.000100	512.0
14	-35.248650	0.000100	512.0
15	-36.239022	0.000100	512.0
16	-35.540899	0.000100	512.0
17	-33.922124	0.000100	512.0
18	-32.257246	0.000100	512.0
19	-29.574983	0.000100	512.0
20	-34.115917	0.000100	512.0
21	-39.029565	0.000100	512.0

Third, we will generate the Radar RCS portion of the report.

```

provider = access.data_providers.item("Radar RCS")
aer_and_search_track_data = provider.execute(
    scenario.start_time, scenario.stop_time, time_step
).data_sets.to_pandas_dataframe()
print(aer_and_search_track_data[["rcs"]])

```

```

          rcs
0    21.5498925193463
1    23.80801654878749
2    23.79895484286079
3    23.691431798714746
4    23.52711259802114
5    23.30253099730713
6    23.00502279045346
7    22.635415755390376
8    22.185178876046486
9    21.643958048109162
10   21.004639111379376
11   20.25682073179582
12   19.403254769659824
13   18.42415189631041
14   17.33665224948085
15   16.114323373833987
16   14.793766844632286
17   13.338317492966166
18   11.803556351357258
19   10.158098068570427
20    8.423157515326128
21    7.8536737655751265

```