

# Lenovo ideapad 310S/510S

## Hardware Maintenance Manual

Lenovo™

**Notes:**

- Before using this information and the product it supports, be sure to read the general information under “Notices” on page 74.
- This manual applies to the following models: Lenovo ideapad 310S-14AST/ideapad 510S-14ISK/ideapad 310S-14ISK.  
The illustrations used in this manual are for Lenovo ideapad 510S-14ISK unless otherwise stated.

**First Edition (Mar. 2016)**

**© Copyright Lenovo 2016. All rights reserved.**

LIMITED AND RESTRICTED RIGHTS NOTICE: If data or software is delivered pursuant a General Services Administration “GSA” contract, use, reproduction, or disclosure is subject to restrictions set forth in Contract No. GS-35F-05925.

© 2016 Lenovo

---

# Contents

---

<b>About this manual .....</b>	<b>iv</b>
<b>Safety information.....</b>	<b>1</b>
General safety .....	2
Electrical safety .....	3
Safety inspection guide .....	5
Handling devices that are sensitive to electrostatic discharge.....	6
Grounding requirements.....	6
Safety notices: multilingual translations.....	7
Laser compliance statement.....	14
<b>Important service information.....</b>	<b>16</b>
Strategy for replacing FRUs .....	16
Strategy for replacing a hard disk drive .....	17
Important notice for replacing a system board .....	17
Important information about replacing RoHS compliant FRUs .....	18
<b>General checkout .....</b>	<b>19</b>
What to do first .....	20
Power system checkout.....	21
Checking the AC adapter .....	21
Checking operational charging .....	22
Checking the battery pack .....	22
<b>Related service information .....</b>	<b>23</b>
Restoring the factory contents by using OneKey Recovery .....	23
Restore of factory default .....	23
Passwords.....	24
Power-on password .....	24
Hard-disk password.....	24
Administrator password .....	24
Power management .....	25
Putting the computer to sleep or shutting it down .....	25
Putting your computer to sleep .....	25
Shutting down the computer .....	25
<b>Lenovo ideapad 310S-14AST/ideapad 510S-14ISK/ideapad 310S-14ISK.....</b>	<b>26</b>
Specifications .....	26
Status indicators .....	28
Fn key combinations/Hotkeys.....	29
FRU replacement notices .....	30
Screw notices .....	30
Removing and replacing an FRU .....	31
1010 Base cover.....	32
1020 Battery pack.....	34
1030 Hard disk drive.....	35
1040 DIMM .....	37
1050 PCI Express Mini Card for wireless LAN.....	38
1060 Upper case .....	41
1070 DC-in cable.....	43
1080 Fan and heat sink assembly .....	44
1090 IO board.....	46
1100 System board .....	47
1110 Speaker.....	49
1120 Touchpad module.....	50
1130 LCD unit.....	51
1140 LCD hinges .....	53
1150 EDP cable and integrated camera .....	55
Locations .....	57
Front and right-side view .....	57
Bottom and left-side view .....	58
Parts list.....	59
Overall .....	60
LCD FRUs .....	70
Miscellaneous parts .....	72
AC adapters.....	72
Screws.....	73
<b>Notices.....</b>	<b>74</b>
Trademarks .....	75

## About this manual

This manual contains service and reference information for the following Lenovo product:

**Lenovo ideapad 310S-14AST/ideapad 510S-14ISK/ideapad 310S-14ISK**  
Use this manual to troubleshoot problems.

The manual is divided into the following sections:

- The common sections provide general information, guidelines, and safety information required for servicing computers.
- The product-specific section includes service, reference, and product-specific parts information.

**Important:**

This manual is intended only for trained servicers who are familiar with Lenovo products. Use this manual to troubleshoot problems effectively.

Before servicing a Lenovo product, make sure to read all the information under “Safety information” on page 1 and “Important service information” on page 16.

---

## **Safety information**

---

This chapter presents the following safety information that you need to get familiar with before you service a Lenovo ideapad 310S-14AST/ideapad 510S-14ISK/ideapad 310S-14ISK computer:

- “General safety” on page 2
- “Electrical safety” on page 3
- “Safety inspection guide” on page 5
- “Handling devices that are sensitive to electrostatic discharge” on page 6
- “Grounding requirements” on page 6
- “Safety notices: multilingual translations” on page 7
- “Laser compliance statement” on page 14

## General safety

Follow these rules below to ensure general safety:

- Observe a good housekeeping in the area where the machines are put during and after the maintenance.
- When lifting any heavy object:
  1. Make sure that you can stand safely without slipping.
  2. Distribute the weight of the object equally between your feet.
  3. Use a slow lifting force. Never move suddenly or twist when you attempt to lift it.
  4. Lift it by standing or pushing up with your leg muscles; this action could avoid the strain from the muscles in your back. Do not attempt to lift any object that weighs more than 16 kg (35 lb) or that you think is too heavy for you.
- Do not perform any action that causes hazards to the customer, or that makes the machine unsafe.
- Before you start the machine, make sure that other service representatives and the customer are not in a hazardous position.
- Please remove covers and other parts in a safe place, away from all personnel, while you are servicing the machine.
- Keep your toolcase away from walk areas so that other people will not trip over it.
- Do not wear loose clothing that can be trapped in the moving parts of the machine. Make sure that your sleeves are fastened or rolled up above your elbows. If your hair is long, fasten it.
- Insert the ends of your necktie or scarf inside clothing or fasten it with the nonconductive clip, about 8 centimeters (3 inches) from the end.
- Do not wear jewelry, chains, metal-frame eyeglasses, or metal fasteners for your clothing.

**Attention:** Metal objects are good electrical conductors.
- Wear safety glasses when you are hammering, drilling, soldering, cutting wire, attaching springs, using solvents, or working in any other conditions that may be hazardous to your eyes.
- After service, reinstall all safety shields, guards, labels, and ground wires. Replace any safety device that is worn or defective.
- Reinstall all covers correctly before returning the machine to the customer.
- Fan louvers on the machine help to prevent the overheating of internal components. Do not obstruct fan louvers or cover them with labels or stickers.

## Electrical safety

Observe the following rules when working on electrical equipments.

### Important:

Use only approved tools and test equipments. Some hand tools have handles covered with a soft material that does not insulate you when working with live electrical currents.

Many customers have rubber floor mats near their machines that contain small conductive fibers to decrease electrostatic discharges. Do not use such kind of mat to protect yourself from electrical shock.

- Find the room emergency power-off (EPO) switch, disconnecting switch or electrical outlet. If an electrical accident occurs, you can then operate the switch or unplug the power cord quickly.
- Do not work alone under hazardous conditions or near the equipment that has hazardous voltages.
- Disconnect all power before:
  - Performing a mechanical inspection
  - Working near power supplies
  - Removing or installing main units
- Before you start to work on the machine, unplug the power cord. If you cannot unplug it, ask the customer to power-off the wall box that supplies power to the machine, and to lock the wall box in the off position.
- If you need to work on a machine that has exposed electrical circuits, observe the following precautions:

- Ensure that another person, familiar with the power-off controls, is near you.

**Attention:** Another person must be there to switch off the power, if necessary.

- Use only one hand when working with powered-on electrical equipment; keep the other hand in your pocket or behind your back.

**Attention:** An electrical shock can occur only when there is a complete circuit. By observing the above rule, you may prevent a current from passing through your body.

- When using testers, set the controls correctly and use the approved probe leads and accessories for that tester.
  - Stand on suitable rubber mats (obtained locally, if necessary) to insulate you from grounds such as metal floor strips and machine frames.

Observe the special safety precautions when you work with very high voltages; instructions for these precautions are in the safety sections of maintenance information. Be extremely careful when you measure the high voltages.

- Regularly inspect and maintain your electrical hand tools for safe operational condition.
- Do not use worn or broken tools and testers.
- Never assume that power has been disconnected from a circuit. First, check it to make sure that it has been powered off.

# *Lenovo ideapad 310S-14AST/ideapad 510S-14ISK/ ideapad 310S-14ISK Hardware Maintenance Manual*

- Always look carefully for possible hazards in your work area. Examples of these hazards are moist floors, nongrounded power extension cables, power surges, and missing safety grounds.
- Do not touch live electrical circuits with the reflective surface of a plastic dental mirror. The surface is conductive; such touching can cause personal injury and machine damage.
- Do not service the following parts with the power on when they are removed from their normal operating places in a machine:
  - Power supply units
  - Pumps
  - Blowers and fans
  - Motor generatorsand similar units. (This practice ensures correct grounding of the units.)
- If an electrical accident occurs:
  - Caution: do not become a victim yourself.
  - Switch off the power.
  - Send the victim to get medical aid.

## **Safety inspection guide**

The purpose of this inspection guide is to assist you in identifying potential unsafe conditions. As each machine was designed and built, required safety items were installed to protect users and service personnel from injury. This guide addresses only those items. You should use good judgment to identify potential safety hazards according to the attachment of non-Lenovo features or options not covered by this inspection guide.

If any unsafe conditions are present, you must determine how serious the apparent hazard could be and whether you can continue without first correcting the problem.

Consider these conditions and the safety hazards they present:

- Electrical hazards, especially primary power (primary voltage on the frame can cause serious or fatal electrical shock)
- Explosive hazards, such as a damaged CRT face or a bulging capacitor
- Mechanical hazards, such as loose or missing hardware

To determine whether there are any potential unsafe conditions, use the following checklist at the beginning of every service task. Begin the checks with the power off, and the power cord disconnected.

Checklist:

1. Check exterior covers for damage (loose, broken, or sharp edges).
2. Turn off the computer. Disconnect the power cord.
3. Check the power cord for:
  - a. A third-wire ground connector in good condition. Use a meter to measure third-wire ground continuity for 0.1 ohm or less between the external ground pin and the frame ground.
  - b. The power cord should be the type specified in the parts list.
  - c. Insulation must not be frayed or worn.
4. Check for cracked or bulging batteries.
5. Remove the cover.
6. Check for any obvious non-Lenovo alterations. Use good judgment as to the safety of any non-Lenovo alterations.
7. Check inside the unit for any obvious unsafe conditions, such as metal filings, contamination, water or other liquids, or signs of fire or smoke damage.
8. Check for worn, frayed, or pinched cables.
9. Check that the power-supply cover fasteners (screws or rivets) have not been removed or tampered with.

## Handling devices that are sensitive to electrostatic discharge

Any computer part containing transistors or integrated circuits (ICs) should be considered sensitive to electrostatic discharge (ESD). ESD damage can occur when there is a difference in charge between objects. Protect against ESD damage by equalizing the charge so that the machine, the part, the work mat, and the person handling the part are all at the same charge.

### Notes:

1. Use product-specific ESD procedures when they exceed the requirements noted here.
2. Make sure that the ESD protective devices you use have been certified (ISO 9000) as fully effective.

When handling ESD-sensitive parts:

- Keep the parts in protective packages until they are inserted into the product.
- Avoid contact with other people.
- Wear a grounded wrist strap against your skin to eliminate static on your body.
- Prevent the part from touching your clothing. Most clothing is insulative and retains a charge even when you are wearing a wrist strap.
- Use the black side of a grounded work mat to provide a static-free work surface. The mat is especially useful when handling ESD-sensitive devices.
- Select a grounding system, such as those listed below, to provide protection that meets the specific service requirement.

### Note:

The use of a grounding system to guard against ESD damage is desirable but not necessary.

- Attach the ESD ground clip to any frame ground, ground braid, or green-wire ground.
- When working on a double-insulated or battery-operated system, use an ESD common ground or reference point. You can use coax or connector-outside shells on these systems.
- Use the round ground prong of the ac plug on ac-operated computers.

## Grounding requirements

Electrical grounding of the computer is required for operator safety and correct system function. Proper grounding of the electrical outlet can be verified by a certified electrician.

## Safety notices: multilingual translations

The safety notices in this section are provided in English, French, German, Hebrew, Italian, Japanese, and Spanish.

### Safety notice 1

Before the computer is powered on after FRU replacement, make sure all screws, springs, and other small parts are in place and are not left loose inside the computer. Verify this by shaking the computer and listening for rattling sounds. Metallic parts or metal flakes can cause electrical shorts.

Avant de remettre l'ordinateur sous tension après remplacement d'une unité en clientèle, vérifiez que tous les ressorts, vis et autres pièces sont bien en place et bien fixées. Pour ce faire, secouez l'unité et assurez-vous qu'aucun bruit suspect ne se produit. Des pièces métalliques ou des copeaux de métal pourraient causer un court-circuit.

Bevor nach einem FRU-Austausch der Computer wieder angeschlossen wird, muß sichergestellt werden, daß keine Schrauben, Federn oder andere Kleinteile fehlen oder im Gehäuse vergessen wurden. Der Computer muß geschüttelt und auf Klappergeräusche geprüft werden. Metallteile oder-splitter können Kurzschlüsse erzeugen.

לפני הפעלת המחשב לאחר החלפת FRU יש לוודא  
שכל הברגים, הקפיצים, והלולס קיימים ואינם נמצאים  
בפרקם ולא מושמעו בוון המחשב. יד לרווחא  
ואת, ש, לא ליליל את מוחשב להתקשו לילוי קרות שיקוש.  
חלי או שבוי מוחכת עלילום נלאה לקרים חמילים.

Prima di accendere l'elaboratore dopo che è stata effettuata la sostituzione di una FRU, accertarsi che tutte le viti, le molle e tutte le altre parti di piccole dimensioni siano nella corretta posizione e non siano sparse all'interno dell'elaboratore. Verificare ciò scuotendo l'elaboratore e prestando attenzione ad eventuali rumori; eventuali parti o pezzetti metallici possono provocare cortocircuiti pericolosi.

FRU の交換後、コンピュータの電源を入れる前に、ねじ、バネ、その他の小さな部品がすべて正しい位置にあり、またコンピュータの内部で緩んでいないことを確認してください。

これを確認するには、コンピュータを振って、カチャカチャと音がしないか確かめます。金属部品や金属破片はショートの原因になることがあります。

Antes de encender el sistema despues de sustituir una FRU, compruebe que todos los tornillos, muelles y demás piezas pequeñas se encuentran en su sitio y no se encuentran sueltas dentro del sistema. Compruébelo agitando el sistema y escuchando los posibles ruidos que provocarían. Las piezas metálicas pueden causar cortocircuitos eléctricos.

## Safety notice 2

### **⚠ DANGER**

Some standby batteries contain a small amount of nickel and cadmium. Do not disassemble a standby battery, recharge it, throw it into fire or water, or short-circuit it. Dispose of the battery as required by local ordinances or regulations. Use only the battery in the appropriate parts listing. Use of an incorrect battery can result in ignition or explosion of the battery.

Certaines batteries de secours contiennent du nickel et du cadmium. Ne les démontez pas, ne les rechargez pas, ne les exposez ni au feu ni à l'eau. Ne les mettez pas en court-circuit. Pour les mettre au rebut, conformez-vous à la réglementation en vigueur. Lorsque vous remplacez la pile de sauvegarde ou celle de l'horloge temps réel, veillez à n'utiliser que les modèles cités dans la liste de pièces détachées adéquate. Une batterie ou une pile inappropriée risque de prendre feu ou d'explorer.

Die Bereitschaftsbatterie, die sich unter dem Diskettenlaufwerk befindet, kann geringe Mengen Nickel und Cadmium enthalten. Sie darf nicht zerlegt, wiederaufgeladen, kurgeschlossen, oder Feuer oder Wasser ausgesetzt werden. Bei der Entsorgung die örtlichen Bestimmungen für Sondermüll beachten. Beim Ersetzen der Bereitschafts-oder Systembatterie nur Batterien des Typs verwenden, der in der Ersatzteilliste aufgeführt ist. Der Einsatz falscher Batterien kann zu Entzündung oder Explosion führen.

טלולות המותגה מסוימות מוכילות בעובי כפוף  
של גודל קידומיהם. אונטרכר טולולות התרה  
לשונו או מהדר. להשליך אותה או  
לזרע או לזרע אותה. יש לשליך אותה  
בדריש לעזיז החטונות והוחוקם המחוקקים. יש  
להשתמש רק בתקינות מומפעעה ברשותו החקלאי  
המוניאמו. יישמש תבילה לא מאנימה עילית  
לגורום להזנה או החופצות לש הסוללה.

Alcune batterie di riserva contengono una piccola quantità di nichel e cadmio. Non smontarle, ricaricarle, gettarle nel fuoco o nell'acqua né cortocircuitarle. Smaltirle secondo la normativa in vigore (DPR 915/82, successive disposizioni e disposizioni locali). Quando si sostituisce la batteria dell'RTC (real time clock) o la batteria di supporto, utilizzare soltanto i tipi inseriti nell'appropriato Catalogo parti. L'impiego di una batteria non adatta potrebbe determinare l'incendio o l'esplosione della batteria stessa.

予備バッテリーの中には少量のニッケルとカドミウムが含まれているものがあります。したがって、予備バッテリーの分解、再充電、火または水の中への投棄、またはショートさせることは決して行わないでください。バッテリーを廃棄する場合は地方自治体の条例に従ってください。適切なバッテリー・リストにあるバッテリーだけを使用してください。誤ったバッテリーを使用すると、バッテリーが発火したり、爆発したりすることがあります。

Algunas baterías de reserva contienen una pequeña cantidad de níquel y cadmio. No las desmonte, ni recargue, ni las eche al fuego o al agua ni las cortocircuite. Deséchelas tal como dispone la normativa local. Utilice sólo baterías que se encuentren en la lista de piezas. La utilización de una batería no apropiada puede provocar la ignición o explosión de la misma.

**Safety notice 3****⚠ DANGER**

The battery pack contains small amounts of nickel. Do not disassemble it, throw it into fire or water, or short-circuit it. Dispose of the battery pack as required by local ordinances or regulations. Use only the battery in the appropriate parts listing when replacing the battery pack. Use of an incorrect battery can result in ignition or explosion of the battery.

La batterie contient du nickel. Ne la démontez pas, ne l'exposez ni au feu ni à l'eau. Ne la mettez pas en court-circuit. Pour la mettre au rebut, conformez-vous à la réglementation en vigueur. Lorsque vous remplacez la batterie, veillez à n'utiliser que les modèles cités dans la liste de pièces détachées adéquate. En effet, une batterie inappropriée risque de prendre feu ou d'exploser.

Akkus enthalten geringe Mengen von Nickel. Sie dürfen nicht zerlegt, wiederaufgeladen, kurzgeschlossen, oder Feuer oder Wasser ausgesetzt werden. Bei der Entsorgung die örtlichen Bestimmungen für Sondermüll beachten. Beim Ersetzen der Batterie nur Batterien des Typs verwenden, der in der Ersatzteilliste aufgeführt ist. Der Einsatz falscher Batterien kann zu Entzündung oder Explosion führen.

מארז הסוללה מכיל כמות קטנה של ניקל  
ומדיום. אין לפולק או פגוז סוללה. להשליך  
אתו לאש או מים או לבלצ' אותו. ש. סלולר את  
מארז הסוללה בדוחש על ידי החקנות  
והוחיקות המקובלות. יש להעתמס מתקין הסוללה  
הומוגני בנסיבות תחילה. יישלחו דגון הלהמת  
תאזרחי סוללה. שטמש בטלול אל מזניאור עלייל  
לגורום להנאה או החבצות של הסוללה.

La batteria contiene piccole quantità di nichel. Non smontarla, gettarla nel fuoco o nell'acqua né cortocircuitarla. Smaltrala secondo la normativa in vigore (DPR 915/82, successive disposizioni e disposizioni locali). Quando si sostituisce la batteria, utilizzare soltanto i tipi inseriti nell'appropriato Catalogo parti. L'impiego di una batteria non adatta potrebbe determinare l'incendio o l'esplosione della batteria stessa.

パッテリー・パックには少量のニッケルが含まれています。パッテリー・パックを分解したり、火または水の中に投げ込んだり、ショートさせないでください。パッテリー・パックの廃棄にあたっては、地方自治体の条例または規則に従ってください。パッテリー・パックを交換するときは、適切なパーツ。リストにあるパッテリーだけを使用してください。誤ったパッテリーを使用すると、パッテリーが発火したり、爆発したりすることがあります。

Las baterías contienen pequeñas cantidades de níquel. No las desmonte, ni recargue, ni las eche al fuego o al agua ni las cortocircuite. Deséchelas tal como dispone la normativa local. Utilice sólo baterías que se encuentren en la lista de piezas al sustituir la batería. La utilización de una batería no apropiada puede provocar la ignición o explosión de la misma.

## Safety notice 4

### DANGER

The lithium battery can cause a fire, an explosion, or a severe burn. Do not recharge it, remove its polarized connector, disassemble it, heat it above 100°C (212°F), incinerate it, or expose its cell contents to water. Dispose of the battery as required by local ordinances or regulations. Use only the battery in the appropriate parts listing. Use of an incorrect battery can result in ignition or explosion of the battery.

La pile de sauvegarde contient du lithium. Elle présente des risques d'incendie, d'explosion ou de brûlures graves. Ne la rechargez pas, ne retirez pas son connecteur polarisé et ne la démontez pas. Ne l'exposez pas à une température supérieure à 100°C, ne la faites pas brûler et n'en exposez pas le contenu à l'eau. Mettez la pile au rebut conformément à la réglementation en vigueur. Une pile inappropriée risque de prendre feu ou d'exploser.

Die Systembatterie ist eine Lithiumbatterie. Sie kann sich entzünden, explodieren oder schwere Verbrennungen hervorrufen. Batterien dieses Typs dürfen nicht aufgeladen, zerlegt, über 100 C erhitzt oder verbrannt werden. Auch darf ihr Inhalt nicht mit Wasser in Verbindung gebracht oder der zur richtigen Polung angebrachte Verbindungsstecker entfernt werden. Bei der Entsorgung die örtlichen Bestimmungen für Sondermüll beachten. Beim Ersetzen der Batterie nur Batterien des Typs verwenden, der in der Ersatzteilliste aufgeführt ist. Der Einsatz falscher Batterien kann zu Entzündung oder Explosion führen.

סוללה לטיול מילוי לירום לשירות, להנפקות וארון בטיחות או מטען או מהירות המזמין עליה. פלטוק ואורה ואלהם תוחנה ולסק את המחברה העדית לעל מעמידת ליטויו. אין לזרע או תסבילה און לשחרר את גזון התא מילס. ש. סולק או תסבילה בדרכש בתקנות והתקנים התקומומיים. ש. להשמיש קר בטלול המומניה בראש מותחן הנקודות המתואימים. ש. טימוש בסוללה אחרת עליל גבון לאכנת שירפה או חומצינו.

La batteria di supporto e una batteria al litio e può incendiarsi, esplodere o procurare gravi ustioni. Evitare di ricaricarla, smontarne il connettore polarizzato, smontarla, riscalarla ad una temperatura superiore ai 100 gradi centigradi, incenderla o gettarla in acqua. Smaltirla secondo la normativa in vigore (DPR 915/82, successive disposizioni e disposizioni locali). L'impiego di una batteria non adatta potrebbe determinare l'incendio o l'esplosione della batteria stessa.

リチウム・バッテリーは、火災、爆発、または重症のやけどを引き起こすことがあります。バッカアップ・バッテリーの充電、その極性コネクターの取り外し、バッテリー本体の分解、100 °C (212 °F) 以上への加熱、焼却、電池の中身を水に浸すことなどはしないでください。バッテリーを廃棄する場合は地方自治体の条例に従ってください。適切なバーツ・リストにあるバッテリーだけを使用してください。誤ったバッテリーを使用すると、バッテリーが発火したり、爆発したりすることがあります。

La batería de repuesto es una batería de litio y puede provocar incendios, explosiones o quemaduras graves. No la recargue, ni quite el conector polarizado, ni la desmonte, ni caliente por encima de los 100°C (212°F), ni la incinere ni exponga el contenido de sus celdas al agua. Deséchela tal como dispone la normativa local.

**Safety notice 5**

If the LCD breaks and the fluid from inside the LCD gets into your eyes or on your hands, immediately wash the affected areas with water at least for 15 minutes. Seek medical care if any symptoms caused by the fluid are present after washing.

Si le panneau d'affichage à cristaux liquides se brise et que vous recevez dans les yeux ou sur les mains une partie du fluide, rincez-les abondamment pendant au moins quinze minutes. Consultez un médecin si des symptômes persistent après le lavage.

Die Leuchtstoffröhre im LCD-Bildschirm enthält Quecksilber. Bei der Entsorgung die örtlichen Bestimmungen für Sondermüll beachten. Der LCD-Bildschirm besteht aus Glas und kann zerbrechen, wenn er unsachgemäß behandelt wird oder der Computer auf den Boden fällt. Wenn der Bildschirm beschädigt ist und die darin befindliche Flüssigkeit in Kontakt mit Haut und Augen gerät, sollten die betroffenen Stellen mindestens 15 Minuten mit Wasser abgespült und bei Beschwerden anschließend ein Arzt aufgesucht werden.

אם מסך הจอ נזק או נוזל מותך המסך באבגוי  
עם ליטרים או ליטר, טפל תחאזרו נזקם מים מים במשען  
15 דקות לפחות שורה רפואי. אם סימני הנזק  
מהונע עם הנוזל מיישם לאחר השימוש.

Nel caso che caso l'LCD si dovesse rompere ed il liquido in esso contenuto entrasse in contatto con gli occhi o le mani, lavare immediatamente le parti interessate con acqua corrente per almeno 15 minuti; poi consultare un medico se i sintomi dovessero permanere.

LCD が破損し、LCD の中の液体が目に入ったり、手に触れたりした場合は、液体が触れた部分を少なくとも 15 分間洗い流してください。洗い流した後に、液体によって何らかの症状が現れた場合は、医師の治療を受けてください。

Si la LCD se rompe y el fluido de su interior entra en contacto con sus ojos o sus manos, lave inmediatamente las áreas afectadas con agua durante 15 minutos como mínimo. Obtenga atención médica si se presenta algún síntoma del fluido después de lavarse.

# *Lenovo ideapad 310S-14AST/ideapad 510S-14ISK/ ideapad 310S-14ISK Hardware Maintenance Manual*

## Safety notice 6

### DANGER

To avoid shock, do not remove the plastic cover that protects the lower part of the inverter card.

Afin d'éviter tout risque de choc électrique, ne retirez pas le cache en plastique protégeant la partie inférieure de la carte d'alimentation.

Aus Sicherheitsgründen die Kunststoffabdeckung, die den unteren Teil der Spannungswandlerplatine umgibt, nicht entfernen.

כדי למנוע חשמל מותם, אינן להסיר את מסכת הפלסטיק  
המן על חלקי החתחתו של בקריטיס ההפוך.

Per evitare scosse elettriche, non rimuovere la copertura in plastica che avvolge la parte inferiore della scheda invertitore.

感電を防ぐため、インバーター・カードの下部を保護しているプラスチック・カバーを外さないでください。

Para evitar descargas, no quite la cubierta de plástico que rodea la parte baja de la tarjeta invertida.

## Safety notice 7

### DANGER

Though the main batteries have low voltage, a shorted or grounded battery can produce enough current to burn personnel or combustible materials.

Bien que le voltage des batteries principales soit peu élevé, le court-circuit ou la mise à la masse d'une batterie peut produire suffisamment de courant pour brûler des matériaux combustibles ou causer des brûlures corporelles graves.

Obwohl Hauptbatterien eine niedrige Spannung haben, können sie doch bei Kurzschluß oder Erdung genug Strom abgeben, um brennbare Materialien zu entzünden oder Verletzungen bei Personen hervorzurufen.

אך שהבatterיות הראשיות הן בעלות מתח נמוך, סוללה  
מתקנת או מוגרחת עליליה להיפוך זורם מספק לירוי מת  
כיווית או להצתת חומרים דלקיים.

Sebbene le batterie di alimentazione siano a basso voltaggio, una batteria in corto circuito o a massa può fornire corrente sufficiente da bruciare materiali combustibili o provocare ustioni ai tecnici di manutenzione.

メイン・バッテリーの電圧は低くても、ショートしたり、接地したバッテリーが、作業者にやけどを負わせたり、可燃物を燃やすだけの電流を発生させる場合があります。

Aunque las baterías principales tienen un voltaje bajo, una batería cortocircuitada o con contacto a tierra puede producir la corriente suficiente como para quemar material combustible o provocar quemaduras en el personal.

### **Safety notice 8**

#### **⚠ DANGER**

Before removing any FRU, turn off the computer, unplug all power cords from electrical outlets, remove the battery pack, and then disconnect any interconnecting cables.

Avant de retirer une unité remplaçable en clientèle, mettez le système hors tension, débranchez tous les cordons d'alimentation des socles de prise de courant, retirez la batterie et déconnectez tous les cordons d'interface.

Die Stromzufuhr muß abgeschaltet, alle Stromkabel aus der Steckdose gezogen, der Akku entfernt und alle Verbindungskabel abgenommen sein, bevor eine FRU entfernt wird.

לפני סילוק FRU כלשהו, יש לכבות את המחשב, לנתק את כל כבלי התחנה טעקי חיבור, להוציא את אמצעי תומילת, או לטע כליב ובודרו ארים אם יש כאלה.

Prima di rimuovere qualsiasi FRU, spegnere il sistema, scollegare dalle prese elettriche tutti i cavi di alimentazione, rimuovere la batteria e poi scollegare i cavi di interconnessione.

FRUを取り外す前に、ThinkPad の電源を切って、すべての電源コードをコンセントから外してください。次に、バッテリー・パックを外し、相互接続ケーブルを外してください。

Antes de quitar una FRU, apague el sistema, desenchufe todos los cables de las tomas de corriente eléctrica, quite la batería y, a continuación, desconecte cualquier cable de conexión entre dispositivos.

## Laser compliance statement

Some models of Lenovo computer are equipped from the factory with an optical storage device such as a CD-ROM drive or a DVD-ROM drive. Such devices are also sold separately as options. If one of these drives is installed, it is certified in the U.S. to conform to the requirements of the Department of Health and Human Services 21 Code of Federal Regulations (DHHS 21 CFR) Subchapter J for Class 1 laser products. Elsewhere, the drive is certified to conform to the requirements of the International Electrotechnical Commission (IEC) 825 and CENELEC EN 60 825 for Class 1 laser products.

If a CD-ROM drive, a DVD-ROM drive, or another laser device is installed, note the following:

### CAUTION

Use of controls or adjustments or performance of procedures other than those specified herein might result in hazardous radiation exposure.

O uso de controles, ajustes ou desempenho de procedimentos diferentes daqueles aqui especificados pode resultar em perigosa exposição à radiação.

凡未在这里指明的任何控制用法、调整、行为，  
都会导致严重后果。

Pour éviter tout risque d'exposition au rayon laser, respectez les consignes de réglage et d'utilisation des commandes, ainsi que les procédures décrites.

Werden Steuer- und Einstellelemente anders als hier festgesetzt verwendet, kann gefährliche Laserstrahlung auftreten.

Az itt előírt eljárástól, beállításuktól és vezérlésekktől eltérő lézersugárzás veszélye miatt kockázatos !

L'utilizzo di controlli, regolazioni o l'esecuzione di procedure diverse da quelle specificate possono provocare l'esposizione a.

Использование элементов настройки и выполнение процедур иных, чем указано здесь, может привести к опасному радиационному облучению.

Použíteľ konôr, úprav alebo iných vykonaní od iných výrobcov, aké je v tomto špecifikované, môžlo by mať za následok nebezpečenstvo vystavenia sa vyzárovaniu.

本書で指定された内容以外の、お客様による整備、調整、または手順を行つた場合、レーザー光の放射の危険があります。

El uso de controles o ajustes o la ejecución de procedimientos distintos de los aquí especificados puede provocar la exposición a radiaciones peligrosas.

Opening the CD-ROM drive, the DVD-ROM drive, or any other optical storage device could result in exposure to hazardous laser radiation. There are no serviceable parts inside those drives. **Do not open.**

A CD-ROM drive, a DVD-ROM drive, or any other storage device installed may contain an embedded Class 3A or Class 3B laser diode. Note the following:

 **DANGER**

Emits visible and invisible laser radiation when open. Do not stare into the beam, do not view directly with optical instruments, and avoid direct exposure to the beam.

Radiação por raio laser ao abrir. Não olhe fixo no feixe de luz, não olhe diretamente por meio de instrumentos ópticos e evite exposição direta com o feixe de luz.

**开启时会有激光发射时，请勿盯视激光光束，  
视觉仪器，并且避免直接接触在激光光束之中。**

Rayonnement laser si carter ouvert. Évitez de fixer le faisceau, de le regarder directement avec des instruments optiques, ou de vous exposer au rayon.

Laserstrahlung bei geöffnetem Gerät. Nicht direkt oder über optische Instrumente in den Laserstrahl sehen und den Strahlungsbereich meiden.

Kinyitáskor lézersugár ! Ne nézzen bele se szabad szemmel, se optikai eszközökkel. Kerülje a sugárnyalábbal való érintkezést!

Aprendo l'unità vengono emesse radiazioni laser. Non fissare il fascio, non guardararlo direttamente con strumenti ottici e evitare l'esposizione diretta al fascio.

Открывая, берегитесь лазерного излучения.  
Не смотрите на луч, не разглядывайте его  
с помощью оптических инструментов, а также  
избегайте прямого воздействия лазерного луча.

Ked je laserová jednotka otvorená. Vyhnite sa priamemu poľohadu a nehladte priamo s optickými nástrojmi do ľúča a vyhnite sa priamemu vystaveniu ľúčov.

開けるとレーザー光が放射されます。光線を見つめたり、光学機械を使って直接見たりしないでください。

Radiación láser al abrir. No mire fijamente ni examine con instrumental óptico el haz de luz. Evite la exposición directa al haz.

---

## Important service information

---

This chapter presents the following important service information:

- “Strategy for replacing FRUs” on page 16
  - “Strategy for replacing a hard disk drive” on page 17
  - “Important notice for replacing a system board” on page 17
- “Important information about replacing RoHS compliant FRUs” on page 18

**Important:**

BIOS and device driver fixes are customer-installable. The BIOS and device drivers are posted on the customer support site:  
<http://support.lenovo.com>.

---

## Strategy for replacing FRUs

---

**Before replacing parts:**

Make sure that all software fixes, drivers, and BIOS downloads are installed before replacing any FRUs listed in this manual.

After a system board is replaced, ensure that the latest BIOS is loaded to the system board before completing the service action.

To download software fixes, drivers, and BIOS, follow the steps below:

1. Go to <http://support.lenovo.com>.
2. Enter the serial number or select a product or use Lenovo smart downloading.
3. Select the BIOS/Driver/Applications and download.
4. Follow the directions on the screen and install the necessary software.

Use the following strategy to prevent unnecessary expense for replacing and servicing FRUs:

- If you are instructed to replace an FRU, but the replacement does not solve the problem, reinstall the original FRU before you continue.
- Some computers have both a processor board and a system board. If you are instructed to replace either of them, and replacing one of them does not solve the problem, reinstall that board, and then replace the other one.
- If an adapter or a device consists of more than one FRU, any of the FRUs may be the cause of the error. Before replacing the adapter or device, remove the FRUs one by one to see if the symptoms change. Replace only the FRU that changed the symptoms.

**Attention:** The setup configuration on the computer you are servicing may have been customized. Running Automatic Configuration may alter the settings. Note the current configuration settings (using the View Configuration option); then, when service has been completed, verify that those settings remain in effect.

## **Strategy for replacing a hard disk drive**

Always try to run a low-level format before replacing a hard disk drive. This will cause all customer data on the hard disk to be lost. Make sure that the customer has a current backup of the data before performing this action.

**Attention:** The drive startup sequence in the computer you are servicing may have been changed. Be extremely careful during write operations such as copying, saving, or formatting. If you select an incorrect drive, data or programs can be overwritten.

## **Important notice for replacing a system board**

Some components mounted on a system board are very sensitive. Improper handling can cause damage to those components, and may cause a system malfunction.

**Attention:** When handling a system board:

- Do not drop the system board or apply any excessive force to it.
- Avoid rough handling of any kind.
- Avoid bending the system board and hard pushing to prevent cracking at each BGA (Ball Grid Array) chipset.

## **Important information about replacing RoHS compliant FRUs**

**RoHS, The Restriction of Hazardous Substances in Electrical and Electronic Equipment Directive (2002/95/EC)** is a European Union legal requirement affecting the global electronics industry. RoHS requirements must be implemented on Lenovo products placed on the market after June 2006. Products on the market before June 2006 are not required to have RoHS compliant parts. If the original FRU parts are non-compliant, replacement parts can also be non-compliant. In all cases if the original FRU parts are RoHS compliant, the replacement part must also be RoHS compliant.

**Note:** RoHS and non-RoHS FRU part numbers with the same fit and function are identified with unique FRU part numbers.

Lenovo plans to transit to RoHS compliance well before the implementation date and expects its suppliers to be ready to support Lenovo's requirements and schedule in the EU. Products sold in 2005 and 2006 will contain some RoHS compliant FRUs. The following statement pertains to these products and any product Lenovo produces containing RoHS compliant FRUs.

RoHS compliant FRUs have unique FRU part numbers. Before or after the RoHS implementation date, failed RoHS compliant parts must always be replaced with RoHS compliant ones, so only the FRUs identified as compliant in the system HMM or direct substitutions for those FRUs may be used.

Products marketed before June 2006		Products marketed after June 2006	
Current or original part	Replacement FRU	Current or original part	Replacement FRU
Non-RoHS	Can be Non-RoHS	Must be RoHS	Must be RoHS
Non-RoHS	Can be RoHS		
Non-RoHS	Can sub to RoHS		
RoHS	Must be RoHS		

**Note:** A direct substitution is a part with a different FRU part number that is automatically shipped by the distribution center at the time of the order.

## General checkout

This chapter presents the following information:

- “What to do first” on page 20
- “Power system checkout” on page 21

Before you go to the checkout, make sure to read the following important notes:

### **Important notes:**

- Only certified trained personnel can service the computer.
- Before replacing any FRU, read the entire page on removing and replacing FRUs.
- Carefully remove screws for reuse when replacing FRUs.
- Be extremely careful during such write operations as copying, saving, or formatting. Drives in the computer that you are servicing sequence might have been altered. If you select an incorrect drive, data or programs might be overwritten.
- Replace an FRU only with another FRU of the correct model. When you replace an FRU, make sure that the machine model and the FRU part number are correct by referring to the FRU parts list.
- An FRU should not be replaced just because of a single, unreproducible failure. Single failures can occur for a variety of reasons that have nothing to do with a hardware defect, such as cosmic radiation, electrostatic discharge, or software errors. Consider replacing an FRU only when a problem recurs. If you suspect that an FRU is defective, clear the error logs and run the test again. If the error does not recur, do not replace the FRU.
- Be careful not to replace a nondefective FRU.

---

## What to do first

When you do return an FRU, you must include the following information in the parts exchange form or parts return form that you attach to it:

1. Name and phone number of servicer
2. Date of service
3. Date on which the machine failed
4. Date of purchase
5. Procedure index and page number in which the failing FRU was detected
6. Failing FRU name and part number
7. Machine type, model number, and serial number
8. Customer's name and address

**Note for warranty:** During the warranty period, the customer may be responsible for repair costs if the computer damage was caused by misuse, accident, modification, unsuitable physical or operating environment, or improper maintenance by the customer.

The following is a list of some common items that are not covered under warranty and some symptoms that might indicate that the system was subjected to stress beyond normal use.

Before checking problems with the computer, determine whether the damage is covered under the warranty by referring to the following list:

### **The following are not covered under warranty:**

- LCD panel cracked from the application of excessive force or from being dropped
- Scratched (cosmetic) parts
- Distortion, deformation, or discoloration of the cosmetic parts
- Plastic parts, latches, pins, or connectors that have been cracked or broken by excessive force
- Damage caused by liquid spilled into the system
- Damage caused by the improper insertion of a PC Card or the installation of an incompatible card
- Improper disk insertion or use of an optical drive
- Diskette drive damage caused by pressure on the diskette drive cover, foreign material in the drive, or the insertion of a diskette with multiple labels
- Damaged or bent diskette eject button
- Fuses blown by attachment of a nonsupported device
- Forgotten computer password (making the computer unusable)
- Sticky keys caused by spilling a liquid onto the keyboard
- Use of an incorrect AC adapter on laptop products

### **The following symptoms might indicate damage caused by nonwarranted activities:**

- Missing parts might be a symptom of unauthorized service or modification.
- If the spindle of a hard disk drive becomes noisy, it may have been subjected to excessive force, or dropped.

## Power system checkout

To verify a symptom, follow the steps below:

1. Turn off the computer.
2. Remove the battery pack.
3. Connect the AC adapter.
4. Make sure that power is supplied when you turn on the computer.
5. Turn off the computer.
6. Disconnect the AC adapter and install the charged battery pack.
7. Make sure that the battery pack supplies power when you turn on the computer.

If you suspect a power problem, see the appropriate one of the following power supply checkouts:

- “Checking the AC adapter” on page 21
- “Checking operational charging” on page 22
- “Checking the battery pack” on page 22


### Checking the AC adapter

You are here because the computer fails only when the AC adapter is used.

- If the power-on indicator does not turn on, check the power cord of the AC adapter for correct continuity and installation.
- If the computer does not charge during operation, go to “Checking operational charging”.

To check the AC adapter, follow the steps below:

1. Unplug the AC adapter cable from the computer.
2. Measure the output voltage at the plug of the AC adapter cable. See the following figure:

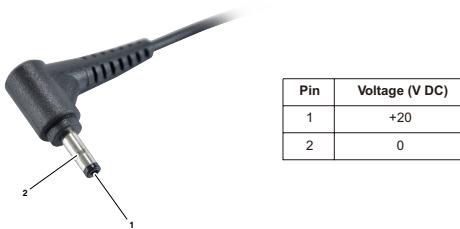

**Note:** Output voltage for the AC adapter pin No. 2 may differ from the one you are servicing.

3. If the voltage is not correct, replace the AC adapter.
4. If the voltage is acceptable, do the following:
  - Replace the system board.
  - If the problem persists, go to “Lenovo ideapad 310S-14AST/ideapad 510S-14ISK/ideapad 310S-14ISK” on page 26.

**Note:** Noise from the AC adapter does not always indicate a defect.

## **Checking operational charging**

To check whether the battery charges properly during operation, use a discharged battery pack or a battery pack that has less than 50% of the total power remaining when installed in the computer.

Perform operational charging. If the battery status indicator or icon does not light on, remove the battery pack and let it return to room temperature. Reinstall the battery pack. If the charge indicator or icon is still off, replace the battery pack.

If the charge indicator still does not light on, replace the system board. Then reinstall the battery pack. If it is still not charged, go to the next section.

## **Checking the battery pack**

Battery charging does not start until the Power Meter shows that less than 95% of the total power remains; under this condition the battery pack can charge to 100% of its capacity. This protects the battery pack from being overcharged or from having a shortened life.

To check your battery, move your cursor to the Power Meter icon in the icon tray of the Windows® taskbar and wait for a moment (but do not click it), and the percentage of battery power remaining is displayed. To get detailed information about the battery, double-click the Power Meter icon.

**Note:** If the battery pack becomes hot, it may not be able to be charged. Remove it from the computer and leave it at room temperature for a while. After it cools down, reinstall and recharge it.

---

## Related service information

---

This chapter presents the following information:

- “Restoring the factory contents by using OneKey Recovery” on page 23
- “Passwords” on page 24
- “Power management” on page 25

### Restoring the factory contents by using OneKey Recovery

#### Restore of factory default

The Lenovo ideapad 310S-14AST/ideapad 510S-14ISK/ideapad 310S-14ISK computers come with pre-installed OneKey Recovery System. In order to save application files and the initial backed up files of the system, the hard disk in a Lenovo computer includes a hidden partition when it is shipped. If you need to restore the system to the point of your first boot up, just enter Lenovo OneKey Recovery System and run **System Recovery**. For details of OneKey Recovery System, see *the User Guide for Lenovo OneKey Recovery System*.

**Note:** This will delete all the new data on the system partition (C drive), which is not recoverable. Make sure to back up your critical data before you perform this action.

## **Passwords**

As many as three passwords may be needed for any Lenovo computer: the power-on password (POP), the hard disk password (HDP), and the administrator password.

If any of these passwords has been set, a prompt for it appears on the screen whenever the computer is turned on. The computer does not start until the password is entered.

### **Power-on password**

A power-on password (POP) protects the system from being powered on by an unauthorized person. The password must be entered before an operating system can be booted.

### **Hard-disk password**

There are two hard-disk passwords (HDPs):

- + User HDP - for the user
- + Master HDP - for the system administrator, who can use it to get access to the hard disk drive even if the user has changed the user HDP

Attention: If the user HDP has been forgotten, check whether a master HDP has been set. If it has, it can be used for access to the hard disk drive. If no master HDP is available, neither Lenovo nor Lenovo authorized service technicians provide any services to reset either the user or the master HDP, or to recover data from the hard disk drive. The hard disk drive can be replaced for a scheduled fee.

### **Administrator password**

Administrator password controls the access of the whole setup utility. Only Administrator password was set then User password can be set. If Administrator password was cleared, the User password was cleared too.

## Power management

**Note:** Power management modes are not supported for APM operating system.

### Putting the computer to sleep or shutting it down

When you have finished working with your computer, you can put it to sleep or shut it down.

### Putting your computer to sleep

If you will be away from your computer for only a short time, put the computer to sleep. When the computer is in sleep mode, you can quickly wake it to resume use, bypassing the startup process.

To put the computer to sleep, do one of the following:

- Close the display lid.
- Press the Power button.
- Open the start menu, and then select **Power**  → **Sleep**.

**Attention:** Wait until the power indicator light starts blinking (indicating that the computer is in sleep mode) before you move your computer. Moving your computer while the hard disk is spinning can damage the hard disk, causing loss of data.

To wake the computer, do one of the following:

- Press any key on the keyboard.
- Press the Power button.

### Shutting down the computer

If you are not going to use your computer for a long time, shut it down.

To shut down the computer, do one of the following:

- Open the start menu, and then select **Power**  → **Shut down**.
- Right-click the **Start** button in the lower-left corner and select **Shut down or sign out** → **Shut down**.

---

## **Lenovo ideapad 310S-14AST/ideapad 510S-14ISK/ ideapad 310S-14ISK**

---

This chapter presents the following product-specific service references and product-specific parts information:

- “Specifications” on page 26
- “Status indicators” on page 28
- “Fn key combinations/Hotkeys” on page 29
- “FRU replacement notices” on page 30
- “Removing and replacing an FRU” on page 31
- “Locations” on page 57
- “Parts list” on page 59

---

## **Specifications**

---

The following table lists the specifications of the Lenovo ideapad 310S-14AST/ideapad 510S-14ISK/ideapad 310S-14ISK:

*Table 1. Specifications*

Feature	Description
Processor	<ul style="list-style-type: none"><li>• View the system properties of your computer. You can do this as follows: Open the <b>Control Panel</b>, and then select <b>System and Security</b> → <b>System</b>.</li></ul>
Bus architecture	<ul style="list-style-type: none"><li>• </li></ul>
Graphic memory chip	<ul style="list-style-type: none"><li>• Lenovo ideapad 310S-14AST: AMD R16M-M1-30</li><li>• Lenovo ideapad 510S-14ISK: GT2 &amp; GT3e/AMD R16M-M1-30/AMD R16M-M2-50 (25W)</li><li>• Lenovo ideapad 310S-14ISK: GT2 &amp; GT3e/AMD R16M-M1-30</li></ul>
Display	<ul style="list-style-type: none"><li>• 14.0" 16:9, 1,366 × 768 pixels HD / 1,920 × 1,080 pixels FHD</li></ul>
Standard memory	<ul style="list-style-type: none"><li>• DDR4-1866 MHz / 2133 MHz / 2400 MHz, SODIMM × 1 (max 8 GB)</li></ul>
CMOS RAM	<ul style="list-style-type: none"><li>• </li></ul>
Storage devices	<ul style="list-style-type: none"><li>• HDD: 2.5-inch, 7.0 mm SATA II/SATA III</li><li>• SSD: 2.5-inch, 5.0 mm, SATA III</li></ul>
I/O port	<ul style="list-style-type: none"><li>• USB 2.0 × 1, USB 3.0 × 2</li><li>• Combo audio jack × 1</li><li>• HDMI port × 1</li><li>• RJ-45 × 1 (1,000 Mbps)</li><li>• Memory card slot (SD/SDHC/SDXC/MMC)</li></ul>
Audio	<ul style="list-style-type: none"><li>• 3.5 mm Combo audio jack</li><li>• 2 W speaker × 1</li><li>• Single microphone</li></ul>
Ethernet	<ul style="list-style-type: none"><li>• 1,000 Mbps</li></ul>
Bluetooth wireless	<ul style="list-style-type: none"><li>• Combined in combo card</li></ul>

*Table 1. Specifications (continued)*

<b>Feature</b>	<b>Description</b>
Keyboard	<ul style="list-style-type: none"><li>• 6 rows Lenovo Keyboard</li></ul>
Integrated camera	<ul style="list-style-type: none"><li>• HD/0.3 M</li></ul>
Battery	<ul style="list-style-type: none"><li>• Li-ion battery pack, 3 cells / 2 cells, 45 Wh / 30 Wh</li></ul>
AC adapter	<ul style="list-style-type: none"><li>• 20 V, DIS 65 W, UMA 45 W</li></ul>
Pre-installed operating system	<ul style="list-style-type: none"><li>• DOS</li><li>• Windows 10</li></ul>

## Status indicators

The system status indicators below show the computer status:



Table 2. Status indicators

Indicator	Indicator status	Charge status	Meaning
1 Power 	On (solid white)	---	The computer is powered on.
	Blinking	---	The computer is in sleep mode.
	Off	---	The computer is powered off.
	On (solid white)	Charging	The battery has more than 80% charge.
	On (solid amber)	Discharging	The battery has between 5% and 20% charge.
	Blinking slowly (white)	Charging	The battery has between 20% and 80% charge. When the battery reaches 80% charge, the light will stop blinking. However, charging will continue until the battery is fully charged.
2 Battery	Blinking slowly (amber)	Charging	The battery has less than 20% charge. When the battery charge reaches 20%, the blinking color will change to white.
	Blinking quickly (amber)	Discharging	The battery has less than 5% charge.
	Off	Discharging	The battery has more than 20% charge.

## Fn key combinations/Hotkeys

The following table shows the function of each combination of Fn with a function key.

*Table 3. Fn key combinations*

<b>Fn + B:</b>	Activates the break function.
<b>Fn + P:</b>	Activates the pause function.
<b>Fn + C:</b>	Enables/disables the scroll lock.
<b>Fn + S:</b>	Activates the system request.
<b>Fn + ↑:</b>	Activates the Pgup key function.
<b>Fn + ↓:</b>	Activates the Pgdn key function.
<b>Fn + ←:</b>	Activates the home key function.
<b>Fn + →:</b>	Activates the end key function.
<b>Fn + Space (on select models):</b>	Adjusts the keyboard backlight (off → dim → bright → off).

You can access certain system settings quickly by pressing the appropriate hotkeys.

*Table 4. Hotkeys*

 :	Mutes/unmutes the sound.	 :	Enables/disables Airplane mode.
 :	Decreases the volume level.	 :	Enables/disables the integrated camera.
 :	Increases the volume level.	 :	Locks the screen.
 :	Enables/disables the microphone.	 :	Toggles the display between the computer and an external device.
 :	Refreshes the desktop or the currently active window.	 :	Decreases the display brightness.
 :	Enables/disables the touchpad.	 :	Increases the display brightness.

## FRU replacement notices

This section presents notices related to removing and replacing parts. Read this section carefully before replacing any FRU.

### Screw notices

Loose screws can cause a reliability problem. In the Lenovo computer, this problem is addressed with special nylon-coated screws that have the following characteristics:

- They maintain tight connections.
- They do not easily come loose, even with shock or vibration.
- They are harder to tighten.


Do the following when you service this machine:

- Keep the screw kit in your tool bag.
- Carefully remove screws for reuse when replacing FRUs.
- Use a torque screwdriver if you have one.

Tighten screws as follows:


- **Plastic to plastic**

Turn an additional 90° after the screw head touches the surface of the plastic part:

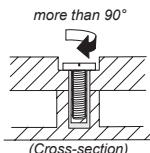

- **Logic card to plastic**

Turn an additional 180° after the screw head touches the surface of the logic card:

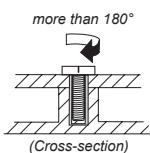

- **Torque driver**

If you have a torque screwdriver , refer to the "Torque" column for each step.

- Make sure that you use the correct screws. If you have a torque screwdriver, tighten all screws firmly to the torque shown in the table. **Carefully remove screws for reuse when replacing FRUs. Make sure that all screws are tightened firmly.**
- Ensure torque screwdrivers are calibrated correctly following country specifications.

## **Removing and replacing an FRU**

This section presents exploded figures with the instructions to indicate how to remove and replace the FRU. Make sure to observe the following general rules:

1. Do not attempt to service any computer unless you have been trained and certified. An untrained person runs the risk of damaging parts.
2. Before replacing any FRU, review "FRU replacement notices" on page 30.
3. Begin by removing any FRUs that have to be removed before the failing FRU. Any of such FRUs are listed at the top of the page. Remove them in the order in which they are listed.
4. Follow the correct sequence in the steps to remove the FRU, as given in the figures by the numbers in square callouts.
5. When turning a screw to replace an FRU, turn it in the direction as given by the arrow in the figure.
6. When removing the FRU, move it in the direction as given by the arrow in the figure.
7. To put the new FRU in place, reverse the removal procedures and follow any of the notes that pertain to replacement. For information about connecting and arranging internal cables, see "Locations" on page 57.
8. When replacing an FRU, use the correct screw as shown in the procedures.

### **DANGER**

Before removing any FRU, turn off the computer, unplug all power cords from electrical outlets, remove the battery pack, and then disconnect any of the interconnecting cables.

**Attention:** After replacing an FRU, do not turn on the computer until you have made sure that all screws, springs, and other small parts are in place and none are loose inside the computer. Verify this by shaking the computer gently and listening for rattling sounds. Metallic parts or metal flakes can cause electrical short circuits.

**Attention:** The system board is sensitive to, and can be damaged by, electrostatic discharge. Before touching it, establish personal grounding by touching a ground point with one hand or using an electrostatic discharge (ESD) strap (P/N 6405959) to remove potential shock reasons.


### **Notes:**

- This manual applies to the following models: Lenovo ideapad 310S-14AST/ideapad 510S-14ISK/ideapad 310S-14ISK.
- The illustrations used in this manual are for Lenovo ideapad 510S-14ISK unless otherwise stated.

## 1010 Base cover


*Figure 1. Removal steps of base cover*

Remove the screws **1** from the bottom.

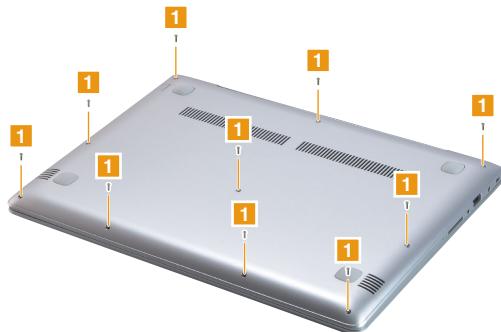

Step	Screw (quantity)	Color	Torque
<b>1</b>	M2 × 6 mm, Phillips head, nylok-coated (10) LOW TO UPPER	Silver	1.85±0.15 kgf*cm

Use a plastic prying tool to aid in separation, then remove the base cover in the direction shown by arrow **2**.

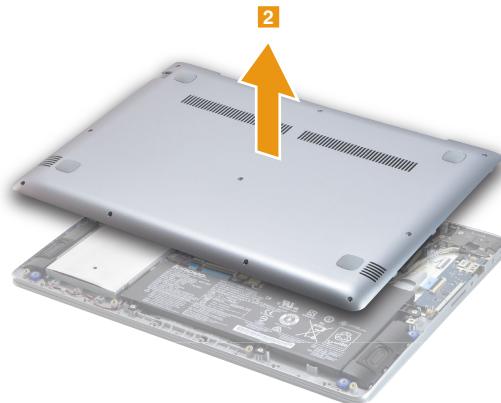

**Note: Applying labels to the base cover**


The new base cover FRU is shipped with a kit containing labels of several kinds. When you replace the base cover, you need to apply the following labels:

The following labels need to be peeled off from the old base cover, and need to be put on the new base cover.

- a** Rating label
- b** Rating print label
- c** Indonesia rating label

For some models, you also need to apply one or two FCC labels. Check the old base cover; if it has one or two FCC labels, find duplicates of them in the label kit and apply them to the new base cover.

For the location of each label, refer to the following figures:

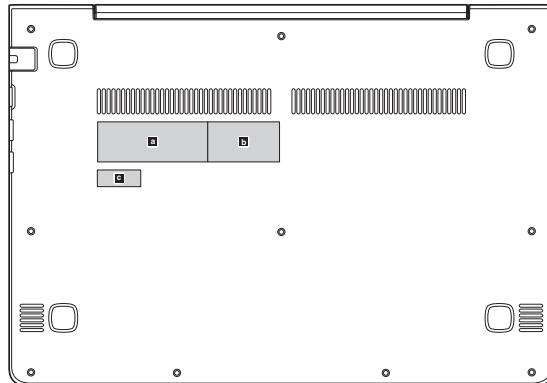

## 1020 Battery pack

For access, remove this FRU:


- “1010 Base cover” on page 32

 **DANGER**

Only use the battery specified in the parts list for your computer. Any other battery could ignite or explode.

*Figure 2. Removal steps of battery pack*

Detach the battery pack connector in the direction shown by arrow **1**, then remove the screws **2**. Remove the battery pack in the direction shown by arrow **3**.

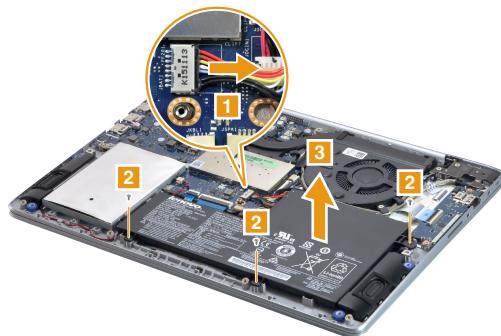

Step	Screw (quantity)	Color	Torque
<b>2</b>	M2 × 4 mm, Phillips head, nylok-coated (3) BATT MODULE TO UPPER	Silver	1.85±0.15 kgf*cm

**When installing:** Make sure that the battery connector is attached firmly and route the cable along the cable guides.

## 1030 Hard disk drive

For access, remove these FRUs in order:


- “1010 Base cover” on page 32
- “1020 Battery pack” on page 34

### Attention:

- **Do not drop the hard disk drive or apply any physical shock to it.** The hard disk drive is sensitive to physical shock. Improper handling can cause damage and permanent loss of data.
- Before removing the drive, suggest the customer to backup all the information on it if possible.
- Never remove the drive while the system is operating or is in suspend mode.

*Figure 3. Removal steps of hard disk drive*

Remove the screws **1**, then remove the hard disk drive in the direction shown by arrow **2**.

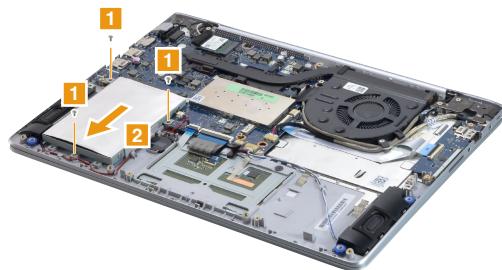

Step	Screw (quantity)	Color	Torque
<b>1</b>	M2 × 4 mm, Phillips head, nylok-coated (3) HDD BRK TO UPPER	Silver	1.85±0.15 kgf*cm

# // Lenovo ideapad 310S-14AST/ideapad 510S-14ISK/ ideapad 310S-14ISK Hardware Maintenance Manual

Figure 3. Removal steps of hard disk drive (continued)

Remove the screws **3**, and then take out the metal frame.



Step	Screw (quantity)	Color	Torque
<b>3</b>	M3 × 3 mm, Phillips head, nylok-coated (4) HDD BRK TO HDD	Silver	3.0±0.3 kgf*cm


## 1040 DIMM

For access, remove these FRUs in order:


- “1010 Base cover” on page 32
- “1020 Battery pack” on page 34

*Figure 4. Removal steps of DIMM*

Carefully remove the DIMM EMI shielding **1**.

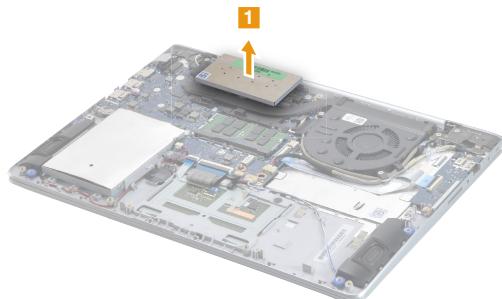

Release the two latches on both edges of the socket at the same time in the directions shown by arrows **2**, and then unplug the DIMM in the direction shown by arrow **3**.

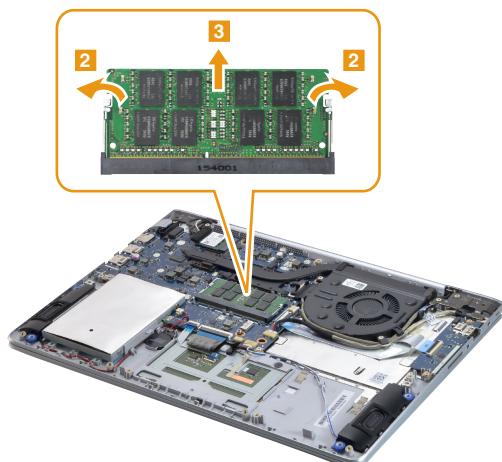

**When installing:** Insert the notched end of the DIMM into the socket. Push the DIMM firmly, and pivot it until it snaps into place. Make sure that it is firmly fixed in the slot and is difficult to move.

**Note:** When replacing the memory is completed, you need to restart the computer after the first reboot.

## 1050 PCI Express Mini Card for wireless LAN


For access, remove these FRUs in order:

- “1010 Base cover” on page 32
- “1020 Battery pack” on page 34

**Important:** The preinstalled WLAN module may only be replaced with a Lenovo approved module in order to comply with FCC and IC regulations. Refer to “Table 5. Parts list—Overall” on page 61 for Lenovo part numbers for the approved modules.


*Figure 5. Removal steps of PCI Express Mini Card for wireless LAN*

Peel off the sponge on the card **1**.

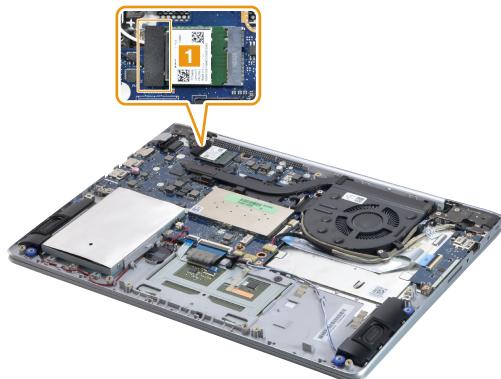

*Figure 5. Removal steps of PCI Express Mini Card for wireless LAN (continued)*

Disconnect the two wireless LAN cables (black, grey) **2**, and then remove the screw **3**.

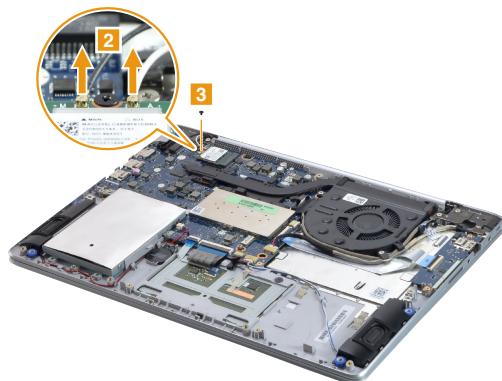

In step **2**, unplug the jacks by using the removal tool antenna RF connector (P/N: 08K7159), or pick up the connectors with your fingers and gently unplug them in the direction shown by the arrows.

**Notes:** The wireless LAN card has 2 cables in step **2**.

The wireless LAN card in some models might have 3 cables in step **2**.

Step	Screw (quantity)	Color	Torque
<b>3</b>	M2 × 3 mm, Phillips head, nylok-coated (1) WLAN CARD TO MB	Black	1.85±0.15 kgf·cm

# *Lenovo ideapad 310S-14AST/ideapad 510S-14ISK/ ideapad 310S-14ISK Hardware Maintenance Manual*

*Figure 5. Removal steps of PCI Express Mini Card for wireless LAN (continued)*

Remove the card in the direction shown by arrow **4**.



#### **When installing:**

- In models with a wireless LAN card that has two antenna connectors, plug the black cable (1st) (MAIN) into the jack labeled **MAIN**, and the grey cable (2nd) (AUX) into the jack labeled **AUX** on the card.
- In models with a wireless LAN card that has three antenna connectors, plug the black cable (1st) (MAIN) into the jack labeled **1**, the grey cable (3rd) into the jack labeled **3**, and the white cable (2nd) (AUX) into the jack labeled **2** on the card.


## 1060 Upper case

For access, remove these FRUs in order:

- “1010 Base cover” on page 32
- “1020 Battery pack” on page 34
- “1050 PCI Express Mini Card for wireless LAN” on page 38

*Figure 6. Removal steps of upper case*

Detach the EDP cable connector in the direction shown by arrow 1. Release the LCD cable and antenna cables from the cable guides. Remove the screws 2.

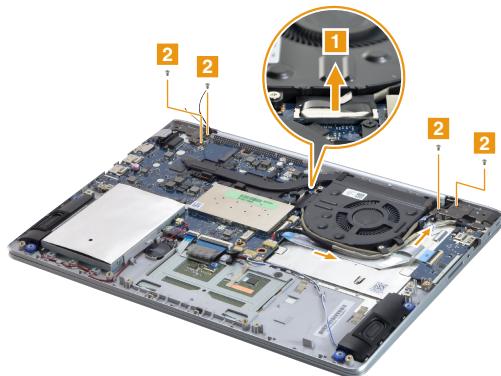


Step	Screw (quantity)	Color	Torque
2	M2.5 × 4 mm, Phillips head, nylok-coated (4) HINGE BRK TO UPPER	Silver	3.0±0.3 kgf*cm

# // Lenovo ideapad 310S-14AST/ideapad 510S-14ISK/ ideapad 310S-14ISK Hardware Maintenance Manual

Figure 6. Removal steps of upper case (continued)

Open the hinge in the direction shown by arrows **3**.

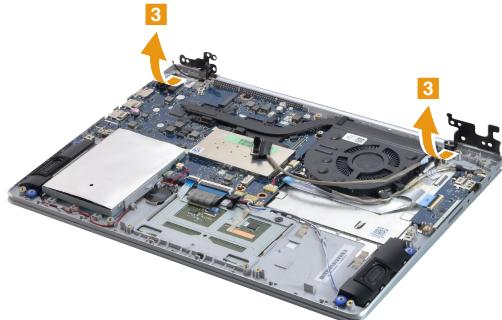

Rotate the upper case in the direction shown by arrow **4**. Then remove the upper case from LCD unit.



## 1070 DC-in cable

For access, remove these FRUs in order:


- “1010 Base cover” on page 32
- “1020 Battery pack” on page 34
- “1050 PCI Express Mini Card for wireless LAN” on page 38
- “1060 Upper case” on page 41

*Figure 7. Removal steps of DC-in cable*

Unplug the DC-in cable connector **1**.



Remove the DC-in cable **2**.

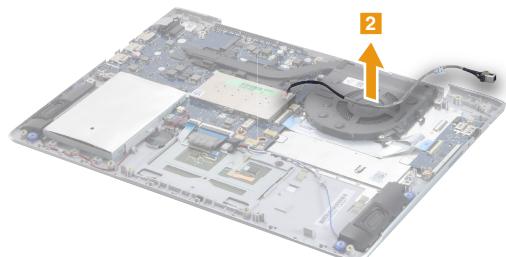


## 1080 Fan and heat sink assembly

For access, remove these FRUs in order:

- “1010 Base cover” on page 32
- “1020 Battery pack” on page 34
- “1050 PCI Express Mini Card for wireless LAN” on page 38
- “1060 Upper case” on page 41
- “1070 DC-in cable” on page 43

*Figure 8. Removal steps of fan and heat sink assembly*


Unplug the fan connector **1**. Remove the screws **2** and **3**.

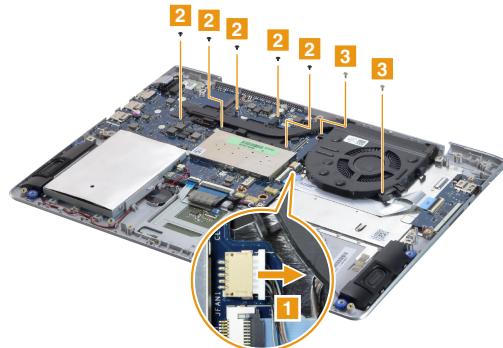

Step	Screw (quantity)	Color	Torque
<b>2</b>	M2 × 3 mm, Phillips head, nylok-coated (5) THERMAL MODULE TO CPU BRK & THERMAL MODULE TO GPU (DIS)	Black	1.85±0.15 kgf*cm
<b>3</b>	M2 × 4 mm, Phillips head, nylok-coated (2) FAN TO UPPER	Silver	1.85±0.15 kgf*cm

*Figure 8. Removal steps of fan and heat sink assembly (continued)*

Lift the fan and heat sink assembly in the direction shown by arrows **4** and **5**.

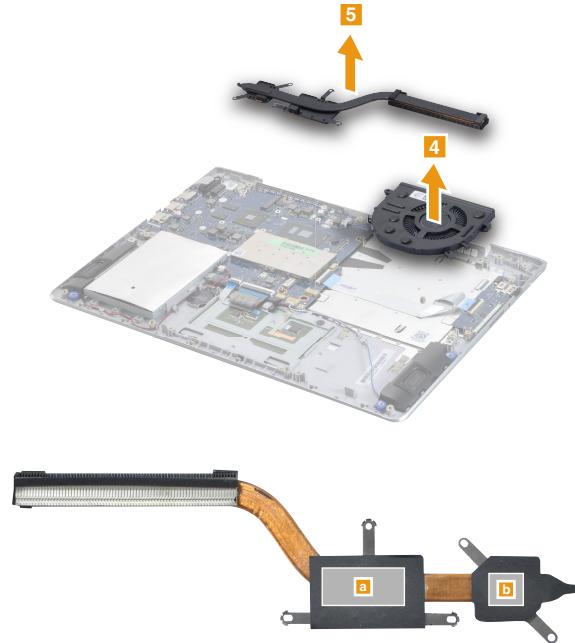

**When installing:**

Before you attach the fan assembly to the computer, apply thermal grease, at an amount of 0.2 grams, to the **a** and **b** part shown in the figure above. Either too much or too little grease application can cause a thermal problem due to imperfect contact with a component.

## 1090 IO board

For access, remove these FRUs in order:

- “1010 Base cover” on page 32
- “1020 Battery pack” on page 34
- “1050 PCI Express Mini Card for wireless LAN” on page 38
- “1060 Upper case” on page 41
- “1070 DC-in cable” on page 43
- “1080 Fan and heat sink assembly” on page 44


*Figure 9. Removal steps of IO board*

Detach the IO board connector in the directions shown by arrows **1** and **2**. Remove the screws **3**.



Step	Screw (quantity)	Color	Torque
<b>3</b>	M2 × 4 mm, Phillips head, nylok-coated (2) IO BOARD TO UPPER	Silver	1.85±0.15 kgf*cm

Remove the IO board **4**.

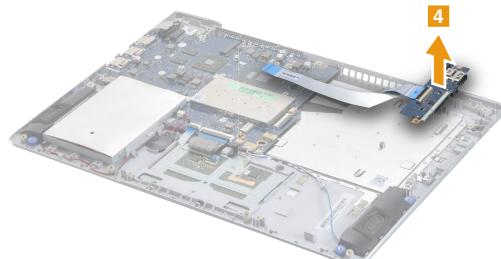

## 1100 System board

### Important notices for handling the system board:

When handling the system board, bear the following in mind.


- Be careful not to drop the system board on a bench top that has a hard surface, such as metal, wood, or composite.
- Avoid rough handling of any kind.
- In the whole process, make sure not to drop or stack the system board.
- If you put a system board down, make sure to put it only on a padded surface such as an ESD mat or conductive corrugated material.

For access, remove these FRUs in order:

- “1010 Base cover” on page 32
- “1020 Battery pack” on page 34
- “1030 Hard disk drive” on page 35
- “1050 PCI Express Mini Card for wireless LAN” on page 38
- “1060 Upper case” on page 41
- “1070 DC-in cable” on page 43
- “1080 Fan and heat sink assembly” on page 44
- “1090 IO board” on page 46

*Figure 10. Removal steps of system board*

Detach the four connectors (the speaker connector, KB FPC connector, KB backlight connector and touchpad connector) in the directions shown by arrows **1**, **2** and **3**. Remove the screws **4**.

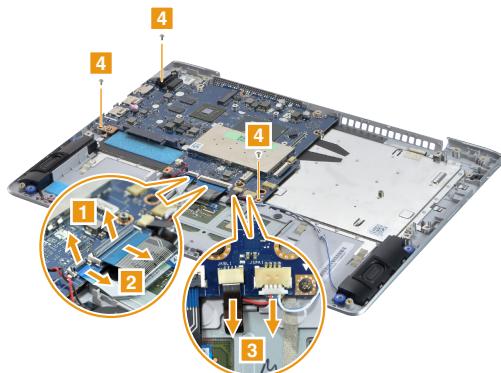


Step	Screw (quantity)	Color	Torque
<b>4</b>	M2 × 4 mm, Phillips head, nylok-coated (3) MB TO UPPER	Silver	1.85±0.15 kgf*cm

**When installing:** Make sure that the connectors are attached firmly.


# // Lenovo ideapad 310S-14AST/ideapad 510S-14ISK/ ideapad 310S-14ISK Hardware Maintenance Manual

Figure 10. Removal steps of system board (continued)

Remove the system board in the direction shown by arrow **5**.

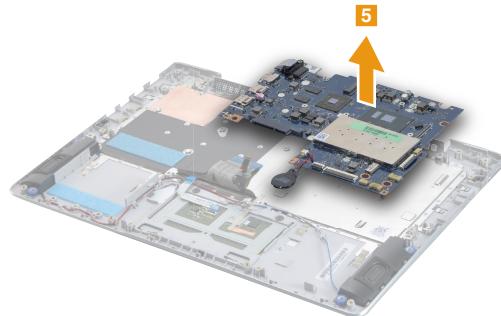

Unplug the RTC battery connector in the direction shown by arrow **6**, then remove the RTC connector. Remove the screw **7**, then remove the RJ-45 door in the direction shown by arrow **8**.

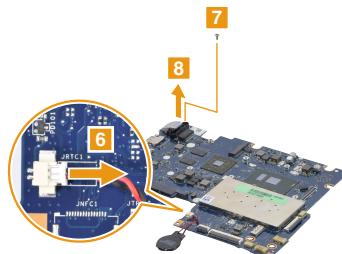

Step	Screw (quantity)	Color	Torque
<b>7</b>	M2 × 4 mm, Phillips head, nylok-coated (1) RJ45 COVER TO MB	Silver	1.85±0.15 kgf*cm


## 1110 Speaker

For access, remove these FRUs in order:

- “1010 Base cover” on page 32
- “1020 Battery pack” on page 34
- “1030 Hard disk drive” on page 35
- “1050 PCI Express Mini Card for wireless LAN” on page 38
- “1060 Upper case” on page 41
- “1070 DC-in cable” on page 43
- “1080 Fan and heat sink assembly” on page 44
- “1090 IO board” on page 46
- “1100 System board” on page 47

*Figure 11. Removal step of speaker*

Remove the speaker 1.

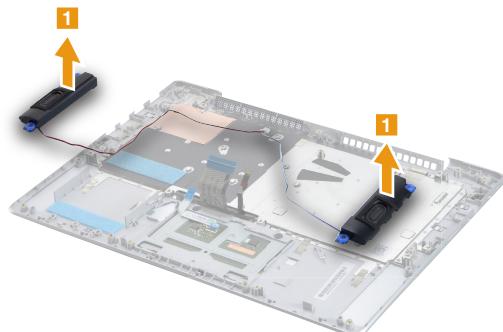


## 1120 Touchpad module

For access, remove these FRUs in order:

- “1010 Base cover” on page 32
- “1020 Battery pack” on page 34
- “1030 Hard disk drive” on page 35
- “1050 PCI Express Mini Card for wireless LAN” on page 38
- “1060 Upper case” on page 41
- “1070 DC-in cable” on page 43
- “1080 Fan and heat sink assembly” on page 44
- “1090 IO board” on page 46
- “1100 System board” on page 47
- “1110 Speaker” on page 49

*Figure 12. Removal steps of Touchpad module*

Remove the screws **1**.

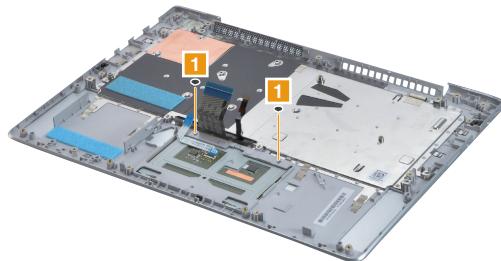

Step	Screw (quantity)	Color	Torque
<b>1</b>	M2 × 2 mm, Phillips head, nylok-coated (2) TP BRACKET TO LOG UP	Black	1.85±0.15 kgf*cm

Then remove the touchpad module in the direction shown by arrow **2**.




## 1130 LCD unit

For access, remove these FRUs in order:

- “1010 Base cover” on page 32
- “1020 Battery pack” on page 34
- “1030 Hard disk drive” on page 35
- “1050 PCI Express Mini Card for wireless LAN” on page 38
- “1060 Upper case” on page 41

*Figure 13. Removal steps of LCD unit*


Remove the LCD front bezel in the direction shown by arrows 1.

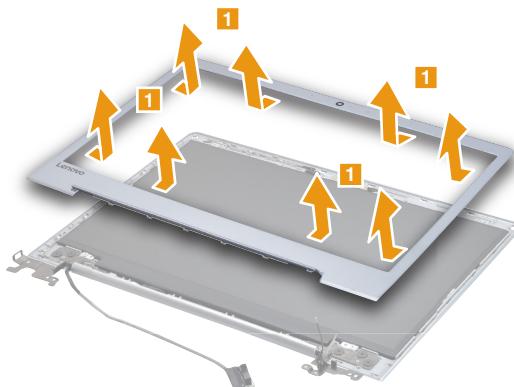

# // Lenovo ideapad 310S-14AST/ideapad 510S-14ISK/ ideapad 310S-14ISK Hardware Maintenance Manual

Figure 13. Removal steps of LCD unit (continued)

Remove the screws **2**. Lift the LCD panel slightly **3**. Peel off the adhesive tape and detach the connector in the direction shown by arrow **4**. Then remove the LCD panel.

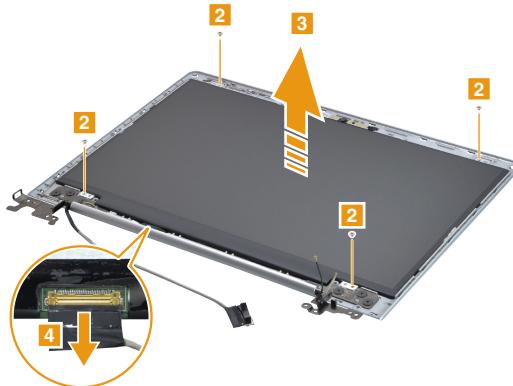

Step	Screw (quantity)	Color	Torque
<b>2</b>	M2 × 2.5 mm, Phillips head, nylok-coated (4) HINGE BRK TO LCD PANEL	Silver	1.85±0.15 kgf*cm

**When installing:** Make sure that the metal connector is attached firmly.

## 1140 LCD hinges

For access, remove these FRUs in order:

- “1010 Base cover” on page 32
- “1020 Battery pack” on page 34
- “1030 Hard disk drive” on page 35
- “1050 PCI Express Mini Card for wireless LAN” on page 38
- “1060 Upper case” on page 41
- “1130 LCD unit” on page 51

*Figure 14. Removal steps of LCD hinges*

Remove the screws 1.



Step	Screw (quantity)	Color	Torque
1	M2.5 × 2.5 mm, Phillips head, nylok-coated (8) HINGE BRK TO LCD COVER	Black	3.0±0.3 kgf*cm

# // *Lenovo ideapad 310S-14AST/ideapad 510S-14ISK/ ideapad 310S-14ISK Hardware Maintenance Manual*

*Figure 14. Removal steps of LCD hinges (continued)*

Release the two hinges in the direction shown by arrows **2**.



## 1150 EDP cable and integrated camera

For access, remove these FRUs in order:

- “1010 Base cover” on page 32
- “1020 Battery pack” on page 34
- “1030 Hard disk drive” on page 35
- “1050 PCI Express Mini Card for wireless LAN” on page 38
- “1060 Upper case” on page 41
- “1130 LCD unit” on page 51
- “1140 LCD hinges” on page 53

*Figure 15. Removal steps of EDP cable and integrated camera*

**Note:** The integrated camera is stuck on the top center of the LCD cover.

Detach the connector in the direction shown by arrow 1, then remove the camera board in the direction shown by arrow 2.



**When installing:** Stick the integrated camera to the top center of the LCD cover and adjust the placement of it to make sure the connector is attached firmly.

# // *Lenovo ideapad 310S-14AST/ideapad 510S-14ISK/ ideapad 310S-14ISK Hardware Maintenance Manual*

*Figure 15. Removal steps of EDP cable and integrated camera (continued)*


Remove the EDP cable in the direction shown by arrow **3**.



## Locations

### Front and right-side view

- 1 Integrated camera
  - 2 Built-in microphone
  - 3 Computer display
  - 4 Wireless LAN antennas
  - 5 Power button
  - 6 Touchpad
  - 7 Power status indicator
- Note:** For the description of each indicator, see "Status indicators" on page 28.
- 8 USB ports
  - 9 HDMI port
  - 10 RJ-45 port

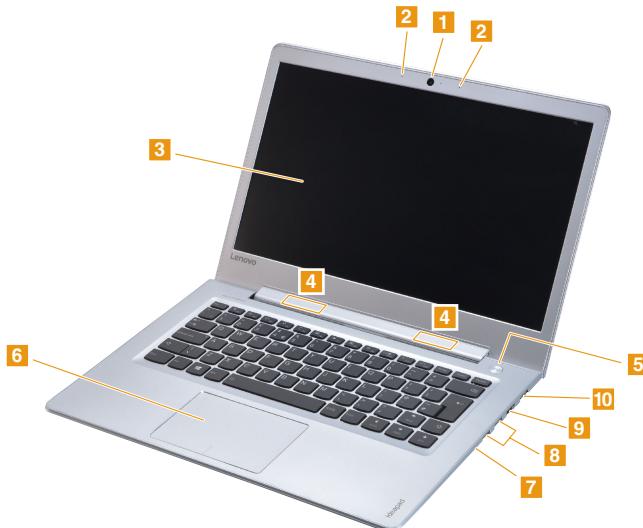

## Bottom and left-side view

- 1 Speakers
- 2 Novo button
- 3 Memory card slot
- 4 Combo audio jack
- 5 USB 2.0 port
- 6 Battery status indicator

**Note:** For the description of each indicator, see “Status indicators” on page 28.

- 7 AC power adapter jack
- 8 Kensington mini security slot



## Parts list

This section presents the following service parts:

- “Overall” on page 60
- “LCD FRUs” on page 70
- “Miscellaneous parts” on page 72
- “AC adapters” on page 72
- “Screws” on page 73

**Note:**

Each FRU is available for all types or models, unless specific types or models are specified.

**Attention:**

**Do not attempt to replace an FRU on your own. If an FRU is damaged, contact a Lenovo authorized servicer or a marketing representative for replacement or repair. Only qualified technicians can inspect or repair this product.**

# // *Lenovo ideapad 310S-14AST/ideapad 510S-14ISK/ ideapad 310S-14ISK Hardware Maintenance Manual*

## Overall

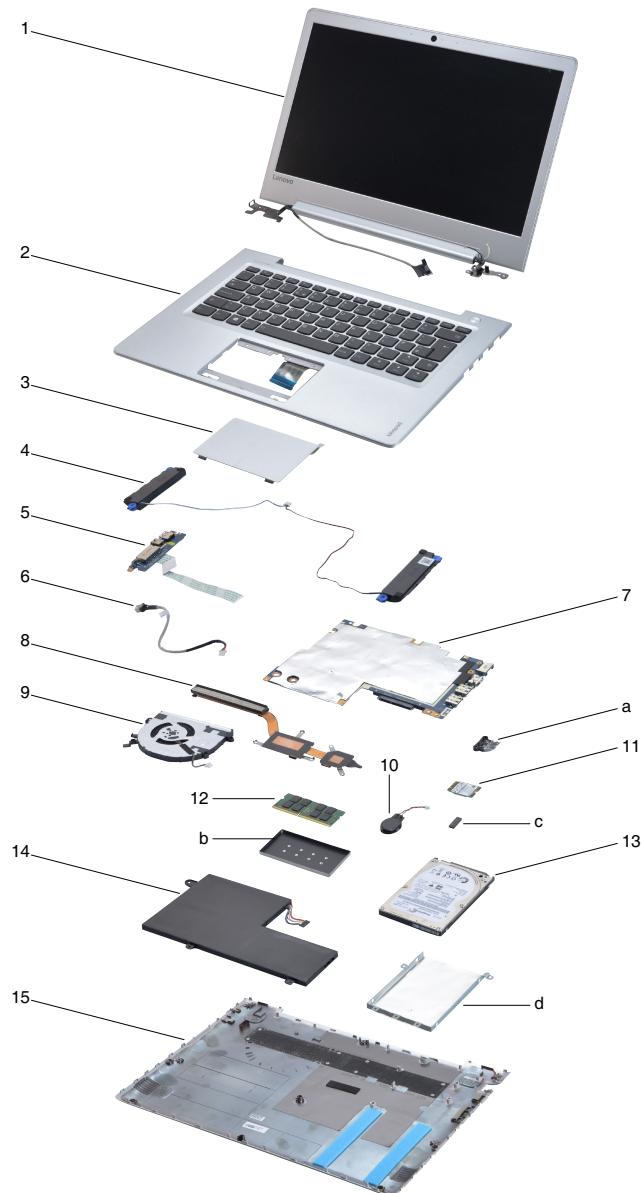


Table 5. Parts list—Overall

No.	FRU	FRU no.	CRU ID.
a-c	See "Miscellaneous parts" on page 72.		
1	LCD unit (see "LCD FRUs" on page 70.)		
2	Upper Case C 80TK BL SR W/KB US	5CB0L45078	
2	Upper Case C 80TK BL SR W/KB GK	5CB0L45094	
2	Upper Case C 80TK BL SRW/KBUSINT'E	5CB0L45291	
2	Upper Case C 80TK BL SR W/KB KO	5CB0L45089	
2	Upper Case C 80TK BL SR W/KB CH	5CB0L45439	
2	Upper Case C 80TK BL SR W/KB RU	5CB0L45272	
2	Upper Case C 80TK BL SR W/KB AR-E	5CB0L45004	
2	Upper Case C 80TK BL SR W/KB HB	5CB0L45463	
2	Upper Case C 80TK BL SR W/KB TI	5CB0L45153	
2	Upper Case C 80TK BL SR W/KBINDIA	5CB0L45366	
2	Upper Case C 80TK BL SR W/KB USA	5CB0L44941	
2	Upper Case C 80TK BL SR W/KB UK	5CB0L45083	
2	Upper Case C 80TK BL SR W/KB IT	5CB0L45127	
2	Upper Case C 80TK BL SR W/KB SP	5CB0L45360	
2	Upper Case C 80TK BL SR W/KB TR	5CB0L44984	
2	Upper Case C 80TK BL SR W/KB PO	5CB0L44961	
2	Upper Case C 80TK BL SR W/KB LA	5CB0L45422	
2	Upper Case C 80TK BL SR W/KB CF-E	5CB0L45262	
2	Upper Case C 80TK BL SR W/KB ND	5CB0L45321	
2	Upper Case C 80TK BL SR W/KB FR	5CB0L45414	
2	Upper Case C 80TK BL SR W/KB GR	5CB0L45283	
2	Upper Case C 80TK BL SR W/KB NL	5CB0L45323	
2	Upper Case C 80TK BL SR W/KB HG	5CB0L45220	
2	Upper Case C 80TK BL SR W/KB BE	5CB0L44962	N
2	Upper Case C 80TK BL SR W/KB ICE	5CB0L45328	
2	Upper Case C 80TK BL SR W/KB SA	5CB0L45332	
2	Upper Case C 80TK BL SR W/KB SW	5CB0L45007	
2	Upper Case C 80TK BL SR W/KB BU	5CB0L45458	
2	Upper Case C 80TK BL SR W/KBCZ-SK	5CB0L45329	
2	Upper Case C 80TK BL SR W/KB BZ	5CB0L44971	
2	Upper Case C 80TK BL SR W/KBFR-AR	5CB0L45077	
2	Upper Case C 80TK BL WH W/KB US	5CB0L45110	
2	Upper Case C 80TK BL WH W/KB GK	5CB0L45016	
2	Upper Case C 80TK BLVHW/KBUSINT'E	5CB0L45177	
2	Upper Case C 80TK BL WH W/KB KO	5CB0L45389	
2	Upper Case C 80TK BL WH W/KB CH	5CB0L45412	
2	Upper Case C 80TK BL WH W/KB RU	5CB0L45302	
2	Upper Case C 80TK BL WH W/KB AR-E	5CB0L45111	
2	Upper Case C 80TK BL WH W/KB HB	5CB0L44913	
2	Upper Case C 80TK BL WH W/KB TI	5CB0L45172	
2	Upper Case C 80TK BL WH W/KBINDIA	5CB0L45249	
2	Upper Case C 80TK BL WH W/KB USA	5CB0L45100	
2	Upper Case C 80TK BL WH W/KB UK	5CB0L45456	
2	Upper Case C 80TK BL WH W/KB IT	5CB0L44987	
2	Upper Case C 80TK BL WH W/KB SP	5CB0L45038	
2	Upper Case C 80TK BL WH W/KB TR	5CB0L45065	
2	Upper Case C 80TK BL WH W/KB PO	5CB0L45261	

# // Lenovo ideapad 310S-14AST/ideapad 510S-14ISK/ ideapad 310S-14ISK Hardware Maintenance Manual

Table 5. Parts list—Overall (continued)

No.	FRU	FRU no.	CRU ID.
2	Upper Case C 80TK BL WH W/KB LA	5CB0L45299	
2	Upper Case C 80TK BL WH W/KB CF-E	5CB0L45058	
2	Upper Case C 80TK BL WH W/KB ND	5CB0L45349	
2	Upper Case C 80TK BL WH W/KB FR	5CB0L45204	
2	Upper Case C 80TK BL WH W/KB GR	5CB0L44934	
2	Upper Case C 80TK BL WH W/KB NL	5CB0L45101	
2	Upper Case C 80TK BL WH W/KB HG	5CB0L45035	
2	Upper Case C 80TK BL WH W/KB BE	5CB0L45234	
2	Upper Case C 80TK BL WH W/KB ICE	5CB0L45181	
2	Upper Case C 80TK BL WH W/KB SA	5CB0L44936	
2	Upper Case C 80TK BL WH W/KB SW	5CB0L44920	
2	Upper Case C 80TK BL WH W/KB BU	5CB0L44976	
2	Upper Case C 80TK BL WH W/KBCZ-SK	5CB0L45376	
2	Upper Case C 80TK BL WH W/KB BZ	5CB0L45330	
2	Upper Case C 80TK BL WH W/KBFR-AR	5CB0L45149	
2	Upper Case C 80TK BL PK W/KB US	5CB0L45095	
2	Upper Case C 80TK BL PK W/KB GK	5CB0L44992	
2	Upper Case C 80TK BLPKW/KBUSINT'E	5CB0L44948	
2	Upper Case C 80TK BL PK W/KB KO	5CB0L45457	
2	Upper Case C 80TK BL PK W/KB CH	5CB0L45045	
2	Upper Case C 80TK BL PK W/KB RU	5CB0L45079	
2	Upper Case C 80TK BL PK W/KB AR-E	5CB0L45339	
2	Upper Case C 80TK BL PK W/KB HB	5CB0L45295	
2	Upper Case C 80TK BL PK W/KB TI	5CB0L45300	
2	Upper Case C 80TK BL PK W/KBINDIA	5CB0L45388	N
2	Upper Case C 80TK BL PK W/KB USA	5CB0L45384	
2	Upper Case C 80TK BL PK W/KB UK	5CB0L45281	
2	Upper Case C 80TK BL PK W/KB IT	5CB0L45169	
2	Upper Case C 80TK BL PK W/KB SP	5CB0L45371	
2	Upper Case C 80TK BL PK W/KB TR	5CB0L44991	
2	Upper Case C 80TK BL PK W/KB PO	5CB0L45259	
2	Upper Case C 80TK BL PK W/KB LA	5CB0L45180	
2	Upper Case C 80TK BL PK W/KB CF-E	5CB0L45276	
2	Upper Case C 80TK BL PK W/KB ND	5CB0L44939	
2	Upper Case C 80TK BL PK W/KB FR	5CB0L45171	
2	Upper Case C 80TK BL PK W/KB GR	5CB0L44914	
2	Upper Case C 80TK BL PK W/KB NL	5CB0L45350	
2	Upper Case C 80TK BL PK W/KB HG	5CB0L45053	
2	Upper Case C 80TK BL PK W/KB BE	5CB0L45230	
2	Upper Case C 80TK BL PK W/KB ICE	5CB0L45399	
2	Upper Case C 80TK BL PK W/KB SA	5CB0L45187	
2	Upper Case C 80TK BL PK W/KB SW	5CB0L44978	
2	Upper Case C 80TK BL PK W/KB BU	5CB0L45092	
2	Upper Case C 80TK BL PK W/KB CZ-SK	5CB0L45370	
2	Upper Case C 80TK BL PK W/KB BZ	5CB0L45359	
2	Upper Case C 80TK BL PK W/KBFR-AR	5CB0L44958	
2	Upper Case C 80TK BL RD W/KB US	5CB0L45000	
2	Upper Case C 80TK BL RD W/KB GK	5CB0L45034	
2	Upper Case C 80TK BLRDW/KBUSINT'E	5CB0L45386	

Table 5. Parts list—Overall (continued)

No.	FRU	FRU no.	CRU ID.
2	Upper Case C 80TK BL RD W/KB KO	5CB0L45068	
2	Upper Case C 80TK BL RD W/KB CH	5CB0L45129	
2	Upper Case C 80TK BL RD W/KB RU	5CB0L45280	
2	Upper Case C 80TK BL RD W/KB AR-E	5CB0L45417	
2	Upper Case C 80TK BL RD W/KB HB	5CB0L44921	
2	Upper Case C 80TK BL RD W/KB TI	5CB0L45054	
2	Upper Case C 80TK BL RD W/KBINDIA	5CB0L44935	
2	Upper Case C 80TK BL RD W/KB USA	5CB0L44979	
2	Upper Case C 80TK BL RD W/KB UK	5CB0L45049	
2	Upper Case C 80TK BL RD W/KB IT	5CB0L45418	
2	Upper Case C 80TK BL RD W/KB SP	5CB0L45158	
2	Upper Case C 80TK BL RD W/KB TR	5CB0L45411	
2	Upper Case C 80TK BL RD W/KB PO	5CB0L45374	
2	Upper Case C 80TK BL RD W/KB LA	5CB0L45232	
2	Upper Case C 80TK BL RD W/KB CF-E	5CB0L45436	
2	Upper Case C 80TK BL RD W/KB ND	5CB0L45067	
2	Upper Case C 80TK BL RD W/KB FR	5CB0L45356	
2	Upper Case C 80TK BL RD W/KB GR	5CB0L45041	
2	Upper Case C 80TK BL RD W/KB NL	5CB0L45364	
2	Upper Case C 80TK BL RD W/KB HG	5CB0L45039	
2	Upper Case C 80TK BL RD W/KB BE	5CB0L45170	
2	Upper Case C 80TK BL RD W/KB ICE	5CB0L45102	
2	Upper Case C 80TK BL RD W/KB SA	5CB0L44988	
2	Upper Case C 80TK BL RD W/KB SW	5CB0L45213	
2	Upper Case C 80TK BL RD W/KB BU	5CB0L45011	
2	Upper Case C 80TK BL RD W/KBCZ-SK	5CB0L45018	
2	Upper Case C 80TK BL RD W/KB BZ	5CB0L45103	
2	Upper Case C 80TK BL RD W/KBFR-AR	5CB0L45242	
2	Upper Case C 80TK BL PL W/KB US	5CB0L45069	
2	Upper Case C 80TK BL PL W/KB GK	5CB0L45063	
2	Upper Case C 80TK BLPLW/KBUSINT'E	5CB0L45059	
2	Upper Case C 80TK BL PL W/KB KO	5CB0L45284	
2	Upper Case C 80TK BL PL W/KB CH	5CB0L45305	
2	Upper Case C 80TK BL PL W/KB RU	5CB0L45440	
2	Upper Case C 80TK BL PL W/KB AR-E	5CB0L45413	
2	Upper Case C 80TK BL PL W/KB HB	5CB0L45352	
2	Upper Case C 80TK BL PL W/KB TI	5CB0L44940	
2	Upper Case C 80TK BL PL W/KBINDIA	5CB0L45096	
2	Upper Case C 80TK BL PL W/KB USA	5CB0L45119	
2	Upper Case C 80TK BL PL W/KB UK	5CB0L45425	
2	Upper Case C 80TK BL PL W/KB IT	5CB0L45132	
2	Upper Case C 80TK BL PL W/KB SP	5CB0L45118	
2	Upper Case C 80TK BL PL W/KB TR	5CB0L45150	
2	Upper Case C 80TK BL PL W/KB PO	5CB0L45166	
2	Upper Case C 80TK BL PL W/KB LA	5CB0L45031	
2	Upper Case C 80TK BL PL W/KB CF-E	5CB0L45448	
2	Upper Case C 80TK BL PL W/KB ND	5CB0L45342	
2	Upper Case C 80TK BL PL W/KB FR	5CB0L45098	

N

# // Lenovo ideapad 310S-14AST/ideapad 510S-14ISK/ ideapad 310S-14ISK Hardware Maintenance Manual

Table 5. Parts list—Overall (continued)

No.	FRU	FRU no.	CRU ID.
2	Upper Case C 80TK BL PL W/KB GR	5CB0L45251	
2	Upper Case C 80TK BL PL W/KB NL	5CB0L45260	
2	Upper Case C 80TK BL PL W/KB HG	5CB0L45130	
2	Upper Case C 80TK BL PL W/KB BE	5CB0L45047	
2	Upper Case C 80TK BL PL W/KB ICE	5CB0L45008	
2	Upper Case C 80TKNBLSRW/KBUSINT'E	5CB0L45226	
2	Upper Case C 80TK NBL SR W/KB KO	5CB0L45319	
2	Upper Case C 80TK NBL SR W/KB CH	5CB0L45407	
2	Upper Case C 80TK NBL SR W/KB RU	5CB0L45202	
2	Upper Case C 80TK NBL SR W/KBAR-E	5CB0L44975	
2	Upper Case C 80TK NBL SR W/KB HB	5CB0L45247	
2	Upper Case C 80TK NBL SR W/KB TI	5CB0L45361	
2	Upper Case C 80TK NBL SRW/KBINDIA	5CB0L45036	
2	Upper Case C 80TK NBL SR W/KB UK	5CB0L44977	
2	Upper Case C 80TK NBL SR W/KB IT	5CB0L45066	
2	Upper Case C 80TK NBL SR W/KB SP	5CB0L45055	
2	Upper Case C 80TK NBL SR W/KB TR	5CB0L44990	
2	Upper Case C 80TK NBL SR W/KB PO	5CB0L45318	
2	Upper Case C 80TK NBL SR W/KB LA	5CB0L45282	
2	Upper Case C 80TK NBL SR W/KBCF-E	5CB0L45286	
2	Upper Case C 80TK NBL SR W/KB ND	5CB0L45263	
2	Upper Case C 80TK NBL SR W/KB FR	5CB0L45084	
2	Upper Case C 80TK NBL SR W/KB GR	5CB0L45061	
2	Upper Case C 80TK NBL SR W/KB NL	5CB0L45362	
2	Upper Case C 80TK NBL SR W/KB HG	5CB0L45233	
2	Upper Case C 80TK NBL SR W/KB BE	5CB0L45333	
2	Upper Case C 80TK NBL SR W/KB ICE	5CB0L45285	
2	Upper Case C 80TK NBL SR W/KB SA	5CB0L44924	
2	Upper Case C 80TK NBL SR W/KB SW	5CB0L45238	
2	Upper Case C 80TK NBL SR W/KB BU	5CB0L45183	
2	Upper Case C 80TK NBL SRW/KBCZ-SK	5CB0L45116	
2	Upper Case C 80TK NBL SR W/KB BZ	5CB0L45447	
2	Upper Case C 80TK NBL SRW/KBFR-AR	5CB0L45419	
2	Upper Case C 80TK NBL WH W/KB US	5CB0L45195	
2	Upper Case C 80TK NBL WH W/KB GK	5CB0L45446	
2	Upper Case C 80TKNBLWHW/KBUSINT'E	5CB0L44930	
2	Upper Case C 80TK NBL WH W/KB KO	5CB0L44983	
2	Upper Case C 80TK NBL WH W/KB CH	5CB0L45184	
2	Upper Case C 80TK NBL WH W/KB RU	5CB0L45145	
2	Upper Case C 80TK NBL WHW/KBAR-E	5CB0L45044	
2	Upper Case C 80TK NBL WH W/KB HB	5CB0L45363	
2	Upper Case C 80TK NBL WH W/KB TI	5CB0L45293	
2	Upper Case C 80TK NBL WHW/KBINDIA	5CB0L45421	
2	Upper Case C 80TK NBL WH W/KB UK	5CB0L45167	
2	Upper Case C 80TK NBL WH W/KB IT	5CB0L45415	
2	Upper Case C 80TK NBL WH W/KB SP	5CB0L44942	
2	Upper Case C 80TK NBL WH W/KB TR	5CB0L45087	
2	Upper Case C 80TK NBL WH W/KB PO	5CB0L44970	N

Table 5. Parts list—Overall (continued)

No.	FRU	FRU no.	CRU ID.
2	Upper Case C 80TK NBL WH W/KB LA	5CB0L45133	
2	Upper Case C 80TK NBL WH W/KBCF-E	5CB0L44933	
2	Upper Case C 80TK NBL WH W/KB ND	5CB0L45179	
2	Upper Case C 80TK NBL WH W/KB FR	5CB0L44946	
2	Upper Case C 80TK NBL WH W/KB GR	5CB0L45019	
2	Upper Case C 80TK NBL WH W/KB NL	5CB0L45056	
2	Upper Case C 80TK NBL WH W/KB HG	5CB0L45064	
2	Upper Case C 80TK NBL WH W/KB BE	5CB0L45080	
2	Upper Case C 80TK NBL WH W/KB ICE	5CB0L45085	
2	Upper Case C 80TK NBL WH W/KB SA	5CB0L45060	
2	Upper Case C 80TK NBL WH W/KB SW	5CB0L45228	
2	Upper Case C 80TK NBL WH W/KB BU	5CB0L44955	
2	Upper Case C 80TK NBL WHW/KBCZ-SK	5CB0L45246	
2	Upper Case C 80TK NBL WH W/KB BZ	5CB0L45279	
2	Upper Case C 80TK NBL WHW/KBFR-AR	5CB0L45208	
2	Upper Case C 80TK NBL PK W/KB US	5CB0L45146	
2	Upper Case C 80TK NBL PK W/KB GK	5CB0L45210	
2	Upper Case C 80TKNBLPKW/KBUSINT'E	5CB0L45029	
2	Upper Case C 80TK NBL PK W/KB KO	5CB0L45138	
2	Upper Case C 80TK NBL PK W/KB CH	5CB0L45137	
2	Upper Case C 80TK NBL PK W/KB RU	5CB0L44932	
2	Upper Case C 80TK NBL PK W/KBAR-E	5CB0L44974	
2	Upper Case C 80TK NBL PK W/KB HB	5CB0L45002	
2	Upper Case C 80TK NBL PK W/KB TI	5CB0L45144	
2	Upper Case C 80TK NBL PKW/KBINDIA	5CB0L45309	
2	Upper Case C 80TK NBL PK W/KB UK	5CB0L45277	
2	Upper Case C 80TK NBL PK W/KB IT	5CB0L45347	
2	Upper Case C 80TK NBL PK W/KB SP	5CB0L45441	
2	Upper Case C 80TK NBL PK W/KB TR	5CB0L45198	
2	Upper Case C 80TK NBL PK W/KB PO	5CB0L45311	
2	Upper Case C 80TK NBL PK W/KB LA	5CB0L45336	
2	Upper Case C 80TK NBL PK W/KBCF-E	5CB0L45420	
2	Upper Case C 80TK NBL PK W/KB ND	5CB0L45459	
2	Upper Case C 80TK NBL PK W/KB FR	5CB0L45196	
2	Upper Case C 80TK NBL PK W/KB GR	5CB0L45043	
2	Upper Case C 80TK NBL PK W/KB NL	5CB0L45357	
2	Upper Case C 80TK NBL PK W/KB HG	5CB0L45288	
2	Upper Case C 80TK NBL PK W/KB BE	5CB0L45240	
2	Upper Case C 80TK NBL PK W/KB ICE	5CB0L45122	
2	Upper Case C 80TK NBL PK W/KB SA	5CB0L45159	
2	Upper Case C 80TK NBL PK W/KB SW	5CB0L45354	
2	Upper Case C 80TK NBL PK W/KB BU	5CB0L45027	
2	Upper Case C 80TK NBL PKW/KBCZ-SK	5CB0L44915	
2	Upper Case C 80TK NBL PK W/KB BZ	5CB0L45445	
2	Upper Case C 80TK NBL PKW/KBFR-AR	5CB0L45164	
2	Upper Case C 80TK NBL RD W/KB US	5CB0L44926	
2	Upper Case C 80TK NBL RD W/KB GK	5CB0L45301	
2	Upper Case C 80TKNBLRDW/KBUSINT'E	5CB0L45013	N

# // Lenovo ideapad 310S-14AST/ideapad 510S-14ISK/ ideapad 310S-14ISK Hardware Maintenance Manual

Table 5. Parts list—Overall (continued)

No.	FRU	FRU no.	CRU ID.
2	Upper Case C 80TK NBL RD W/KB KO	5CB0L45310	
2	Upper Case C 80TK NBL RD W/KB CH	5CB0L45124	
2	Upper Case C 80TK NBL RD W/KB RU	5CB0L45155	
2	Upper Case C 80TK NBL RD W/KBAR-E	5CB0L45051	
2	Upper Case C 80TK NBL RD W/KB HB	5CB0L44994	
2	Upper Case C 80TK NBL RD W/KB TI	5CB0L45393	
2	Upper Case C 80TK NBL RDW/KBINDIA	5CB0L45237	
2	Upper Case C 80TK NBL RD W/KB UK	5CB0L45173	
2	Upper Case C 80TK NBL RD W/KB IT	5CB0L45075	
2	Upper Case C 80TK NBL RD W/KB SP	5CB0L45303	
2	Upper Case C 80TK NBL RD W/KB TR	5CB0L45026	
2	Upper Case C 80TK NBL RD W/KB PO	5CB0L45345	
2	Upper Case C 80TK NBL RD W/KB LA	5CB0L45142	
2	Upper Case C 80TK NBL RDW/KBCF-E	5CB0L45274	
2	Upper Case C 80TK NBL RD W/KB ND	5CB0L45255	
2	Upper Case C 80TK NBL RD W/KB FR	5CB0L45024	
2	Upper Case C 80TK NBL RD W/KB GR	5CB0L44967	
2	Upper Case C 80TK NBL RD W/KB NL	5CB0L45194	
2	Upper Case C 80TK NBL RD W/KB HG	5CB0L45214	
2	Upper Case C 80TK NBL RD W/KB BE	5CB0L44959	
2	Upper Case C 80TK NBL RD W/KB ICE	5CB0L44964	
2	Upper Case C 80TK NBL RD W/KB SA	5CB0L44929	
2	Upper Case C 80TK NBL RD W/KB SW	5CB0L45264	
2	Upper Case C 80TK NBL RD W/KB BU	5CB0L44916	
2	Upper Case C 80TK NBL RDW/KBCZ-SK	5CB0L45105	
2	Upper Case C 80TK NBL RD W/KB BZ	5CB0L44968	
2	Upper Case C 80TK NBL RDW/KBFR-AR	5CB0L45317	
2	Upper Case C 80TK NBL PL W/KB US	5CB0L45104	
2	Upper Case C 80TK NBL PL W/KB GK	5CB0L44989	
2	Upper Case C 80TNBLPLW/KBUSINT'E	5CB0L45188	
2	Upper Case C 80TK NBL PL W/KB KO	5CB0L45451	
2	Upper Case C 80TK NBL PL W/KB CH	5CB0L45398	
2	Upper Case C 80TK NBL PL W/KB RU	5CB0L45209	
2	Upper Case C 80TK NBL PL W/KBAR-E	5CB0L45378	
2	Upper Case C 80TK NBL PL W/KB HB	5CB0L45307	
2	Upper Case C 80TK NBL PL W/KB TI	5CB0L45212	
2	Upper Case C 80TK NBL PLW/KBINDIA	5CB0L45114	
2	Upper Case C 80TK NBL PL W/KB UK	5CB0L45343	
2	Upper Case C 80TK NBL PL W/KB IT	5CB0L45175	
2	Upper Case C 80TK NBL PL W/KB SP	5CB0L44993	
2	Upper Case C 80TK NBL PL W/KB TR	5CB0L45292	
2	Upper Case C 80TK NBL PL W/KB PO	5CB0L44981	
2	Upper Case C 80TK NBL PL W/KB LA	5CB0L45052	
2	Upper Case C 80TK NBL PL W/KBCF-E	5CB0L45430	
2	Upper Case C 80TK NBL PL W/KB ND	5CB0L44969	
2	Upper Case C 80TK NBL PL W/KB FR	5CB0L45227	
2	Upper Case C 80TK NBL PL W/KB GR	5CB0L45112	
2	Upper Case C 80TK NBL PL W/KB NL	5CB0L45200	

N

Table 5. Parts list—Overall (continued)

No.	FRU	FRU no.	CRU ID.
2	Upper Case C 80TK NBL PL W/KB HG	5CB0L44931	
2	Upper Case C 80TK NBL PL W/KB BE	5CB0L45070	
2	Upper Case C 80TK NBL PL W/KB ICE	5CB0L45143	
2	Upper Case C 80TK NBL PL W/KB SA	5CB0L45312	
2	Upper Case C 80TK NBL PL W/KB SW	5CB0L45025	
2	Upper Case C 80TK NBL PL W/KB BU	5CB0L45253	
2	Upper Case C 80TK NBL PLW/KBCZ-SK	5CB0L45252	
2	Upper Case C 80TK NBL PL W/KB BZ	5CB0L45030	
2	Upper Case C 80TK NBL PLW/KBFR-AR	5CB0L45001	
3	TouchpadMod C80TKW/CableSilver	5T60L45254	
3	TouchpadMod C 80TKW/CableBlack	5T60L44963	
4	Idea510S-14 Veco 1224 Speaker	5SB0K97342	
4	Idea510S-14 GGEC 1224 Speaker	5SB0K97337	
5	IO BOARD C 80TK W/Cable	5C50L45315	
6	DC IN Cable C 80TK	5C10L45289	
7	MB C 80TK NOK I36100U UMA BL	5B20L45375	
7	MB C 80TK WIN I36100U UMA BL	5B20L45160	
7	MB C 80TK NOK I36100U UMA NBL	5B20L45156	
7	MB C 80TK WIN I36100U UMA NBL	5B20L45136	
7	MB C 80TK NOKI36100UR16MM12GBL	5B20L45381	
7	MB C 80TK WINI36100UR16MM12GBL	5B20L45348	
7	MB C 80TKNOKI36100UR16MM12GNBL	5B20L44995	
7	MB C 80TKWINI36100UR16MM12GNBL	5B20L45152	
7	MB C 80TK NOKI36100UR16MM22GBL	5B20L45396	
7	MB C 80TK WINI36100UR16MM22GBL	5B20L45205	
7	MB C 80TKNOKI36100UR16MM22GNBL	5B20L45455	
7	MB C 80TKWINI36100UR16MM22GNBL	5B20L45225	
7	MB C 80TK NOK I56200U UMA BL	5B20L45022	
7	MB C 80TK WIN I56200U UMA BL	5B20L45014	
7	MB C 80TK NOK I56200U UMA NBL	5B20L45216	
7	MB C 80TK WIN I56200U UMA NBL	5B20L45431	
7	MB C 80TK NOKI56200UR16MM12GBL	5B20L45434	
7	MB C 80TKWINI56200UR16MM12GBL	5B20L45090	
7	MB C 80TKNOKI56200UR16MM12GNBL	5B20L45033	
7	MB C 80TKWINI56200UR16MM12GNBL	5B20L45322	
7	MB C 80TK NOKI56200UR16MM22GBL	5B20L45368	
7	MB C 80TK WINI56200UR16MM22GBL	5B20L45267	
7	MB C 80TKNOKI56200UR16MM22GNBL	5B20L45151	
7	MB C 80TKWINI56200UR16MM22GNBL	5B20L45426	
7	MB C 80TK NOK I56267U UMA BL	5B20L45021	
7	MB C 80TK WIN I56267U UMA BL	5B20L45338	
7	MB C 80TK NOK I56267U UMA NBL	5B20L45442	
7	MB C 80TK WIN I56267U UMA NBL	5B20L45462	
7	MB C 80TK NOK I76500U UMA BL	5B20L44956	
7	MB C 80TK WIN I76500U UMA BL	5B20L45239	
7	MB C 80TK NOK I76500U UMA NBL	5B20L45314	
7	MB C 80TK WIN I76500U UMA NBL	5B20L45037	
7	MB C 80TK NOKI76500UR16MM12GBL	5B20L45015	N

# *Lenovo ideapad 310S-14AST/ideapad 510S-14ISK/ ideapad 310S-14ISK Hardware Maintenance Manual*

Table 5. Parts list—Overall (continued)

No.	FRU	FRU no.	CRU ID.
7	MB C 80TK WINI76500UR16MM12GBL	5B20L44953	N
7	MB C 80TKNOKI76500UR16MM12GNBL	5B20L45248	
7	MB C 80TKWINI76500UR16MM12GNBL	5B20L45452	
7	MB C 80TK NOKI76500UR16MM22GBL	5B20L45148	
7	MB C 80TK WINI76500UR16MM22GBL	5B20L45199	
7	MB C 80TKNOKI76500UR16MM22GNBL	5B20L45275	
7	MB C 80TKWINI76500UR16MM22GNBL	5B20L44938	
7	MB C 80TK NOK I76567U UMA BL	5B20L44986	
7	MB C 80TK WIN I76567U UMA BL	5B20L44923	
7	MB C 80TK NOK I76567U UMA NBL	5B20L45355	
7	MB C 80TK WIN I76567U UMA NBL	5B20L45325	
8	Heatsink C 80TK DIS	5H40L45268	
8	Heatsink C 80TK UMA 15W	5H40L45201	
8	Heatsink C 80TK UMA 23W	5H40L45197	
9	Fan C 80STK	5F10L44951	
10	RTC Battery C 80TK	5B10L45435	
11	Intel 3165 1x1AC+BT PCIE M.2 WLAN	SW10H24486	
11	Ltn NFA435 1x1AC+BT4.0 PCIE M.2 WLAN	SW10A11641	
11	Cbt RTL8821AE 1x1AC+BT4.0 PCIE M.2 WLAN	SW10A11648	
12	M471A15143EB0-CPB	5M30K59778	
12	MTA8ATF51264HZ-2G1A2	5M30K59777	
12	HMA451S6AFR8N-TFN0	5M30H35732	
12	RMSA3230KE68H9F-2133	5M30K62038	
12	M471A1K43BB0-CPB	5M30K59786	
12	MTA16ATF1G64HZ-2G1A2	5M30K59784	
12	HMA41GS6AFR8N-TFN0	5M30H35726	
12	RMSA3230KB78HAF-2133	5M30K62037	
13	HDD, ST500LT012 6G 7mm 5.4K 500G HDD	16200383	
13	HDD, WD5000LPCX-24VHAT0 7mm 5400rpm 500G HDD	5H20J35762	
13	HDD, MQ01ABF050 6G 7mm 5.4K 500G HDD	16200433	
13	HDD, HTS545050A7E660 6G 7mm 5.4K 500G HDD	5H20H14223	
13	HDD, WD10SPCX-24HWST1 6G 7mm 1T HDD	16200554	
13	HDD, TSB MQ02ABF100 6G 7mm 5.4k 1TB HDD	5H20G09709	
13	HDD, TBD(QS sample:2016/FEB)	TBD	
13	HDD, HTS541010A7E630	16200658	
13	HDD, ST500LM000 7mm 500G+8G	5H20H24608	
13	HDD, Toshiba MQ02ABF050H 7mm 5.4k 500GB+8GB SSHD	5H20H12631	
13	SSD, MZYTY256HDHP-000L2 2.5" 256G 5mm SSD	5SD0L14644	
13	SSD, CV3-DE256 2.5" 5mm 256G SSD	5SD0L02316	
14	Tesla SP/A L14M2P21 7.4V30Wh2cell GB	5B10K10182	
14	Tesla SP/C L14M2P21 7.4V30Wh2cell GB	5B10K10229	
14	Tesla LGL14L2P21 7.4V30Wh2cell GB	5B10K10180	
14	Tesla SP/A L14M3P21 11.1V45Wh3cell GB	5B10K10186	
14	Tesla SP/C L14M3P21 11.1V45Wh3cell GB	5B10K10236	

*Table 5. Parts list—Overall (continued)*

No.	FRU	FRU no.	CRU ID.
14	Tesla LG L14L3P21 11.1V45Wh3cell GB	5B10K10214	N
15	Lower Cover C 80TK White	5CB0L45113	
15	Lower Cover C 80TK Silver	5CB0L45048	
15	Lower Cover C 80TK Red	5CB0L44998	
15	Lower Cover C 80TK Pink	5CB0L45032	
15	Lower Cover C 80TK Purple	5CB0L45278	
—	AC adapter (see “AC adapters” on page 72).		

# *Lenovo ideapad 310S-14AST/ideapad 510S-14ISK/ ideapad 310S-14ISK Hardware Maintenance Manual*

## LCD FRUs

In Lenovo ideapad 310S-14AST/ideapad 510S-14ISK/ideapad 310S-14ISK, there are following types of LCDs.

- “14.0-in. HD LED”

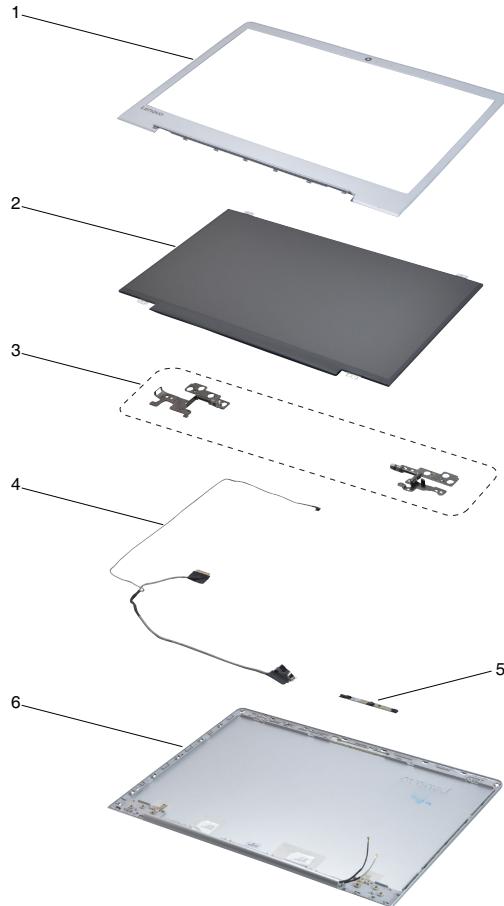


Table 6. Parts list—LCD FRUs

No.	FRU	FRU no.	CRU ID.
1	LCD Bezel C 80TK Silver	5B30L45429	
1	LCD Bezel C 80TK Black	5B30L45081	
2	AUO B140XTN02.E HW0A HD AG S NB	5D10G95364	
2	IN N140BGA-EA3 HDT AG S NB	5D10K85755	
2	LG LP140WHU-TPH1 HDT AG S NB	5D10K81464	
2	SD LTN140AT39-401 HDT AG S NB	5D10K81456	
2	IN N140HCE-EAA C3 FHD AG S NB	5D10K91452	
2	LGD LP140WF6-SPB1 FHD AG S NB	5D10H34771	
2	BOE NV140FHM-N41 FHD AG S NB	5D10H32288	
3	Hinge C 80TK R+L	5H50L44949	
4	EDP Cable C 80TK	5C10L45244	
5	Camera C 80TK 1.0M	5C20L45086	
5	Camera C 80TK 0.3M	5C20L45400	
6	LCD Cover C 80TK W/Antenna White	5CB0L45108	
6	LCD Cover C 80TK W/Antenna Silver	5CB0L44944	
6	LCD Cover C 80TK W/Antenna Red	5CB0L45062	
6	LCD Cover C 80TK W/Antenna Pink	5CB0L45287	
6	LCD Cover C 80TK W/Antenna Purple	5CB0L45387	N

# *Lenovo ideapad 310S-14AST/ideapad 510S-14ISK/ ideapad 310S-14ISK Hardware Maintenance Manual*

## Miscellaneous parts

Table 7. Parts list—Miscellaneous parts

FRU	P/N	CRU ID.
System miscellaneous parts:		
• (a) RJ45 Door C 80TK White	5D30L45324	
• (a) RJ45 Door C 80TK Silver	5D30L44965	
• (a) RJ45 Door C 80TK Red	5D30L45134	
• (a) RJ45 Door C 80TK Pink	5D30L45438	
• (a) RJ45 Door C 80TK Purple	5D30L44966	N
• (b) Dimm Emi Shielding C 80TK	5S60L44947	
• (c) NGFF Sponge C 80TK	5T10L45222	
• (d) HDD Bracket C 80TK	5B40L45326	

**Note:** Italicized letters in parentheses are references to the exploded view in “Overall” on page 60.

## AC adapters

Table 8. Parts list—AC adapters

FRU	P/N	CRU ID.
Delta ADP-45DW AA 20V2.25A adapter	5A10H43620	
Delta ADP-45DW JA 20V2.25A adapter	5A10H43623	
Delta ADP-45DW BA 20V2.25A adapter	5A10H43630	
Delta ADP-45DW DA 20V2.25A adapter	5A10H43621	
Delta ADP-45DW HA 20V2.25A adapter	5A10H43627	
Delta ADP-45DW GA 20V2.25A adapter	5A10H43617	
Delta ADP-45DW EA 20V2.25A adapter	5A10H43626	
Delta ADP-45DW CA 20V2.25A adapter	5A10H43632	
Delta ADP-45DW KA 20V2.25A adapter	5A10H43624	
Liteon PA-1450-55LN 20V2.25A adapter	5A10H42921	
Liteon PA-1450-55LG 20V2.25A adapter	5A10H42920	
Liteon PA-1450-55LL 20V2.25A adapter	5A10H42923	
Liteon PA-1450-55LK 20V2.25A adapter	5A10H42917	
Liteon PA-1450-55LI 20V2.25A adapter	5A10H42926	
Liteon PA-1450-55LR 20V2.25A adapter	5A10H42919	*
Liteon PA-1450-55LS 20V2.25A adapter	5A10H42922	
Liteon PA-1450-55LU 20V2.25A adapter	5A10H42925	
Liteon PA-1450-55LZ 20V2.25A adapter	5A10H42918	
Chicony ADL45WCA 20V2.25A adapter	5A10H43629	
Chicony ADL45WCB 20V2.25A adapter	5A10H43618	
Chicony ADL45WCC 20V2.25A adapter	5A10H43625	
Chicony ADL45WCD 20V2.25A adapter	5A10H43631	
Chicony ADL45WCK 20V2.25A adapter	5A10H43619	
Chicony ADL45WCE 20V2.25A adapter	5A10H43633	
Chicony ADL45WCF 20V2.25A adapter	5A10H43622	
Chicony ADL45WCG 20V2.25A adapter	5A10H43628	
Chicony ADL45WCH 20V2.25A adapter	5A10H43616	
Delta ADLX65CDGC2A 20V3.25A adapter	5A10K78762	
Delta ADLX65CDGG2A 20V3.25A adapter	5A10K78739	

Table 8. Parts list—AC adapters (continued)

FRU	P/N	CRU ID.
Delta ADLX65CDGU2A 20V3.25A adapter	5A10K78742	
Delta ADLX65CDGK2A 20V3.25A adapter	5A10K78743	
Delta ADLX65CDGI2A 20V3.25A adapter	5A10K78759	
Delta ADLX65CDGR2A 20V3.25A adapter	5A10K78748	
Delta ADLX65CDGA2A 20V3.25A adapter	5A10K78741	
Delta ADLX65CDGE2A 20V3.25A adapter	5A10K78753	
Delta ADLX65CDGB2A 20V3.25A adapter	5A10K78754	
Liteon ADLX65CLGC2A 20V3.25A adapter	5A10K78736	
Liteon ADLX65CLGG2A 20V3.25A adapter	5A10K78749	
Liteon ADLX65CLGU2A 20V3.25A adapter	5A10K78745	
Liteon ADLX65CLGL2A 20V3.25A adapter	5A10K78750	
Liteon ADLX65CLGI2A 20V3.25A adapter	5A10K78740	
Liteon ADLX65CLGR2A 20V3.25A adapter	5A10K78746	*
Liteon ADLX65CLGA2A 20V3.25A adapter	5A10K78758	
Liteon ADLX65CLGE2A 20V3.25A adapter	5A10K78752	
Liteon ADLX65CLGB2A 20V3.25A adapter	5A10K78755	
Chicony ADLX65CCGC2A 20V3.25A adapter	5A10K78744	
Chicony ADLX65CCGG2A 20V3.25A adapter	5A10K78756	
Chicony ADLX65CCGU2A 20V3.25A adapter	5A10K78761	
Chicony ADLX65CCGK2A 20V3.25A adapter	5A10K78757	
Chicony ADLX65CCGI2A 20V3.25A adapter	5A10K78760	
Chicony ADLX65CCGR2A 20V3.25A adapter	5A10K78747	
Chicony ADLX65CCGA2A 20V3.25A adapter	5A10K78737	
Chicony ADLX65CCGE2A 20V3.25A adapter	5A10K78751	
Chicony ADLX65CCGB2A 20V3.25A adapter	5A10K78738	

## Screws

Table 9. Parts list—Screws

FRU	P/N	CRU ID.
Screw Pack C 80TK	5S10L45223	N

## Notices

---

Lenovo may not offer the products, services, or features discussed in this document in all countries. Consult your local Lenovo representative for information on the products and services currently available in your area. Any reference to a Lenovo product, program, or service is not intended to state or imply that only that Lenovo product, program, or service may be used. Any functionally equivalent product, program, or service that does not infringe any Lenovo intellectual property right may be used instead. However, it is the user's responsibility to evaluate and verify the operation of any other product, program, or service.

Lenovo may have patents or pending patent applications covering subject matter described in this document. The furnishing of this document does not give you any license to these patents.

LENOVO GROUP LTD. PROVIDES THIS PUBLICATION "AS IS" WITHOUT WARRANTY OF ANY KIND, EITHER EXPRESS OR IMPLIED, INCLUDING, BUT NOT LIMITED TO, THE IMPLIED WARRANTIES OF NON-INFRINGEMENT, MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE. Some jurisdictions do not allow disclaimer of express or implied warranties in certain transactions, therefore, this statement may not apply to you. This information could include technical inaccuracies or typographical errors. Changes are periodically made to the information herein; these changes will be incorporated in new editions of the publication. Lenovo may make improvements and/or changes in the product(s) and/or the program(s) described in this publication at any time without notice.

The products described in this document are not intended for use in implantation or other life support applications where malfunction may result in injury or death to persons. The information contained in this document does not affect or change Lenovo product specifications or warranties. Nothing in this document shall operate as an express or implied license or indemnity under the intellectual property rights of Lenovo or third parties. All information contained in this document was obtained in specific environments and is presented as an illustration. The result obtained in other operating environments may vary.

Lenovo may use or distribute any of the information you supply in any way it believes appropriate without incurring any obligation to you.

Any references in this publication to non-Lenovo Web sites are provided for convenience only and do not in any manner serve as an endorsement of those Web sites. The materials at those Web sites are not part of the materials for this Lenovo product, and use of those Web sites is at your own risk.

Any performance data contained herein was determined in a controlled environment. Therefore, the result obtained in other operating environments may vary significantly. Some measurements may have been made on development-level systems and there is no guarantee that these measurements will be the same on generally available systems. Furthermore, some measurements may have been estimated through extrapolation. Actual results may vary. Users of this document should verify the applicable data for their specific environment.

## Trademarks

---

The following terms are trademarks or registered trademarks of Lenovo in the United States, other countries, or both.

Lenovo

OneKey

ideapad

Microsoft and Windows are trademarks of Microsoft Corporation in the United States, other countries, or both.

Other company, products, or service names may be trademarks or service marks of others.