

Vivado Hello World Tutorial

Embedded Processor Hardware Design
September 9, 2013

Table of Contents

Requirements	3
Part 1: Building a Zynq-7000 Processor Hardware	3
Introduction	3
Step 1: Start the Vivado IDE and Create a Project	3
Step 2: Create an IP Integrator Design	5
<i>Customize Instantiated IP</i>	9
<i>Use Block Designer Assistance</i>	10
Step 4: Generate HDL Design Files	14
Step 7: Implement Design and Generate Bitstream.....	15
Step 8: Export Hardware to SDK.....	17
<i>Export to SDK</i>	17
Part 2: Build Zynq-7000 Processor Software	18
Step 1: Start SDK and Create a Software Application.....	18
Step 2: Run the Software Application	21
<i>Add a Breakpoint</i>	26
Step 3: Executing the Software	27

Requirements

The following is needed in order to follow this tutorial:

- Vivado w/ Xilinx SDK (tested, version 2013.2)
- Zedboard (tested, version D)

Part 1: Building a Zynq-7000 Processor Hardware

Introduction

In this part of the tutorial you create a Zynq-7000 processor based design and instantiate IP in the processing logic fabric (PL) to complete your design. Then you take the design through implementation, generate a bitstream, and export the hardware to SDK.

If you are not familiar with the Vivado Integrated Development Environment Vivado (IDE), see the *Vivado Design Suite User Guide: Using the Vivado IDE* (UG893).

Step 1: Start the Vivado IDE and Create a Project

1. Start the Vivado IDE (FIGURE 1) by clicking the Vivado desktop icon or by typing **vivado** at a terminal command line.

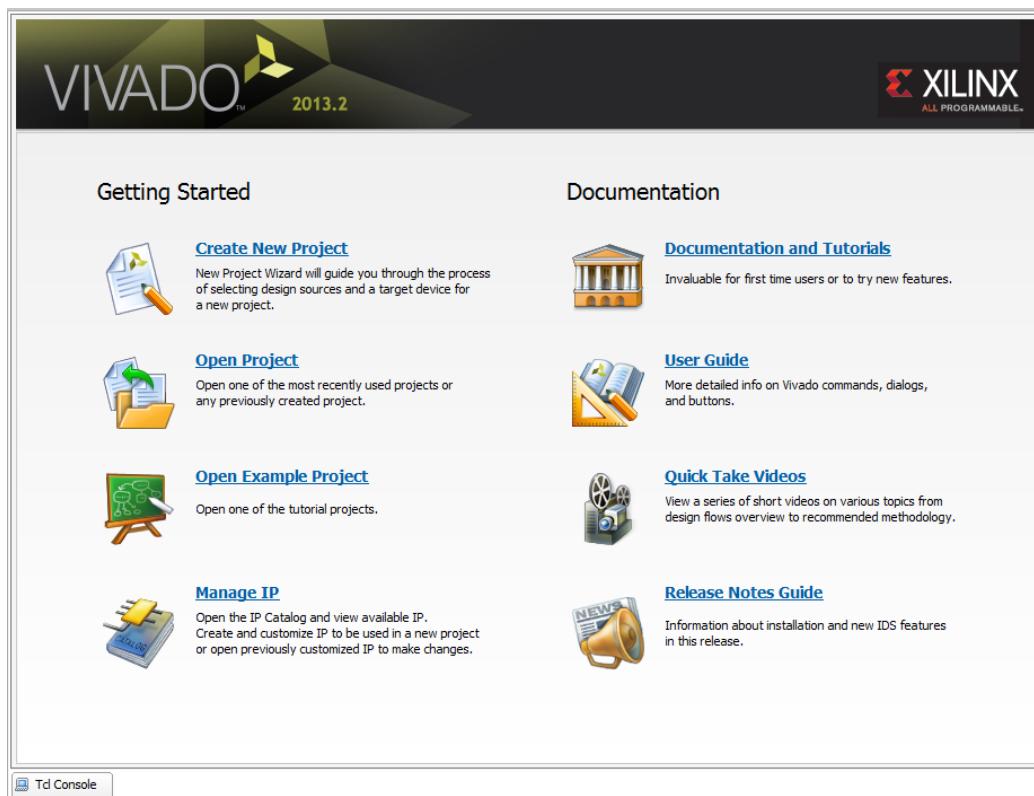


Figure 1: Getting Started Page

2. From the Getting Started page, select **Create New Project**. The New Project wizard opens (FIGURE 2).
3. Click **Next**

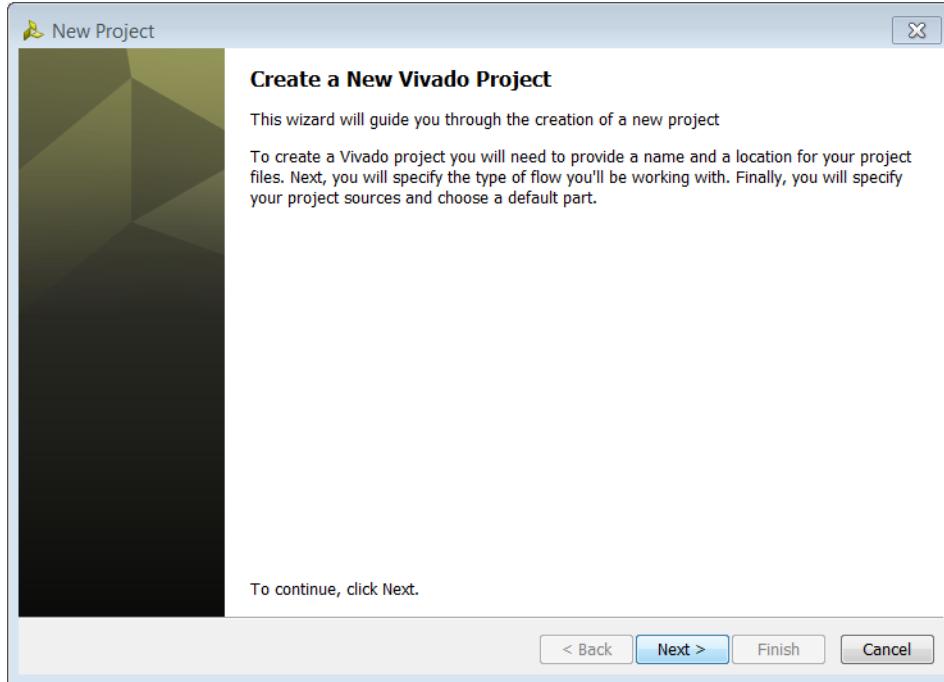


Figure 2: Create New Project Wizard

4. In the **Project Name** dialog box, type the project name and location. Ensure that **Create project subdirectory** is checked, and then click **Next**.
5. In the **Project Type** dialog box, select **RTL Project**, then click **Next**.
6. In the **Add Sources** dialog box, ensure that the **Target language** is set to **VHDL**, then click **Next**.
7. In the **Add Existing IP** dialog box, click **Next**.
8. In the **Add Constraints** dialog box, click **Next**.
9. In the **Default Part** dialog box select **Boards** and choose “ZedBoard Zynq Evaluation and Development Kit”. Make sure that you have selected the proper Board Version to match your hardware because multiple versions of hardware are supported in the Vivado IDE. Click **Next**.
10. Review the project summary in the **New Project Summary** dialog box before clicking **Finish** to create the project.

Step 2: Create an IP Integrator Design

1. In the Flow Navigator, select **Create Block Design**.

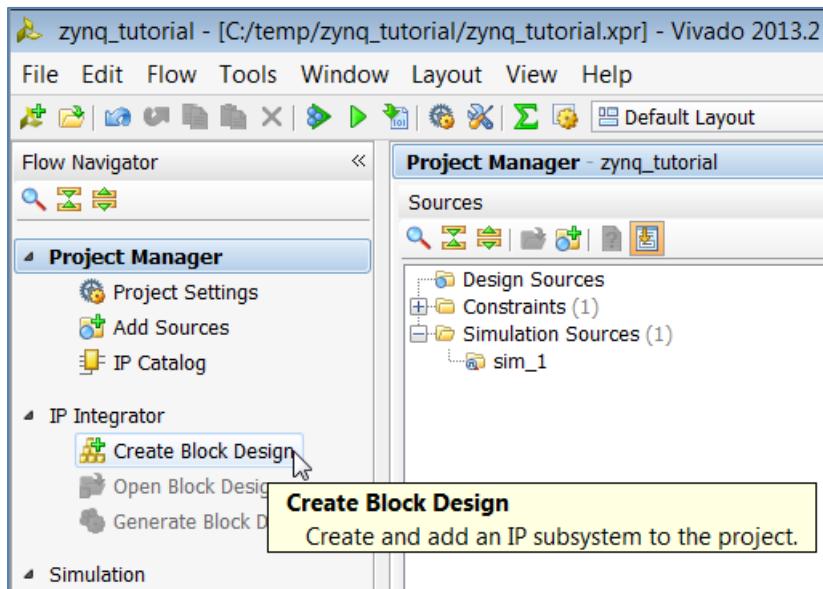


Figure 3: Create Block Design from Flow Navigator

2. In the **Create Block Design** popup menu, specify a name for your IP subsystem design.



Figure 4: Create Block Design Dialog Box

3. Right-click in the Vivado IP integrator diagram window, and select **Add IP**.

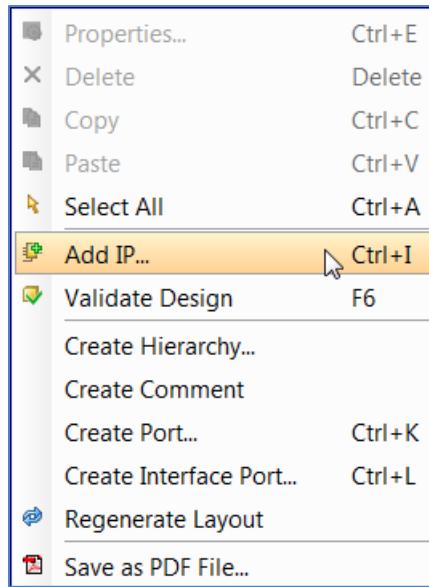


Figure 5: Add IP Option

4. Alternatively, you can click the **Add IP** link in the IP integrator diagram area.

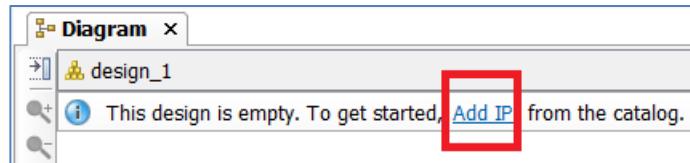


Figure 6: Add IP Link in IP Integrator Canvas

The IP Catalog opens.

5. In the search field, type **zynq** to find the ZYNQ7 Processing System IP, and then press **Enter** on the keyboard.

Search: <input type="text" value="zynq"/> (2 matches)		1	2	3	4	5
Name	1	Version	AXI4	Status	License	Vendor
ZYNQ7 Processing System	5.2	AXI4-Stream, AXI4	Production	Included	Xilinx, Inc.	x
ZYNQ7 Processing System BFM	1.0	AXI4	Pre-produ...	Purchase	Xilinx, Inc.	x

Select and press ENTER or drag and drop, ESC to cancel

Figure 7: The IP Integrator IP Catalog

Because you selected the ZedBoard when you created the project, the Vivado IP integrator configures the design appropriately.

In the Tcl Console, you see the following message:

```
create_bd_cell -type ip -vlnv  
xilinx.com:ip:processing_system7:5.2 processing_system7_1  
  
INFO: [PS7-6] Configuring Board Preset zed. Please wait .....
```

There is a corresponding Tcl command for all actions performed in the IP integrator block diagram. Those commands are not shown in this document. See the Tcl Console for information on those commands.

6. In the IP integrator diagram header, click **Run Block Automation**.



Figure 8: Run Block Automation on Zync

The **Run Block Automation** dialog box opens, stating that the FIXED_IO and DDR interfaces will be created for the Zynq core.

7. Click **OK**.

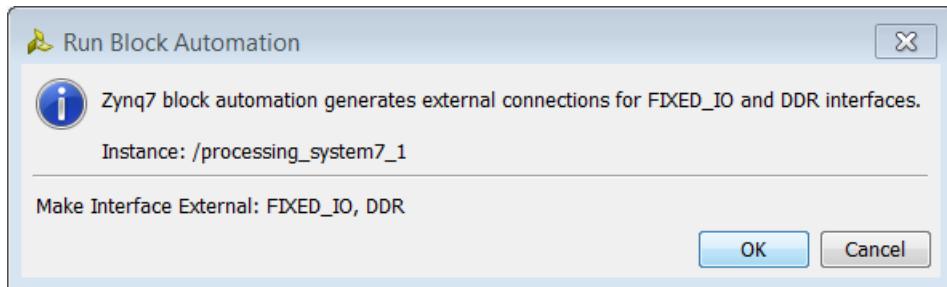


Figure 9: Zync7 Run Block Automation Dialog Box

After running block automation on the Zynq processor, the IP integrator diagram should look as follows:

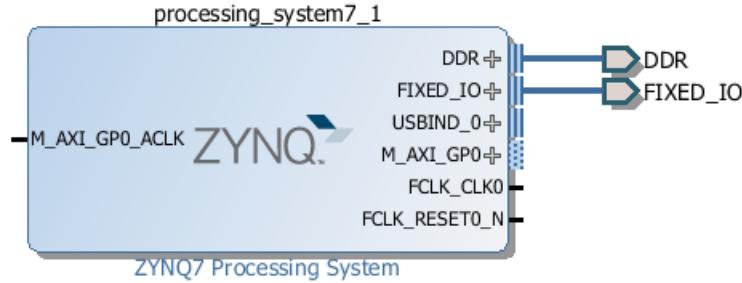


Figure 10: Zynq Processing System after Running Block Automation

8. Now you can add peripherals to the processing logic (PL). To do this, right-click in the IP integrator diagram, and select **Add IP**.
9. In the search field, type `gpi` to find the AXI GPIO IP, and then press **Enter** to add the AXI GPIO IP to the design.
10. Repeat the action, typing `axi_bram` to find and add AXI BRAM Controller, and typing `block` to find and add Block Memory Generator.

The Block Design window matches FIGURE 11. The relative positions of the IP will vary.

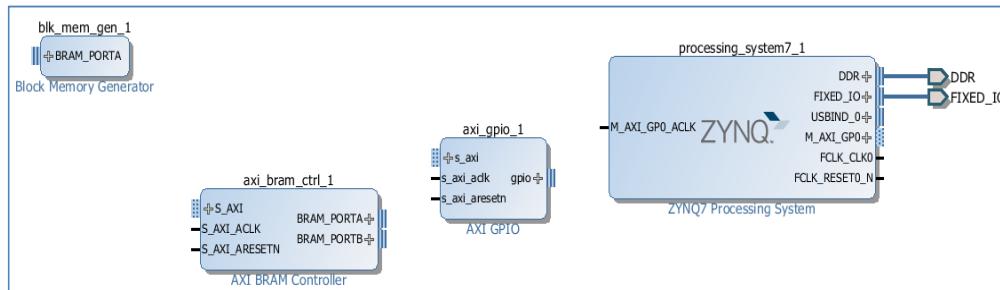


Figure 11: Block Design after Instantiating IP

Customize Instantiated IP

1. Double-click the Block Memory Generator IP, or right-click and select **Customize Block** (FIGURE 12).

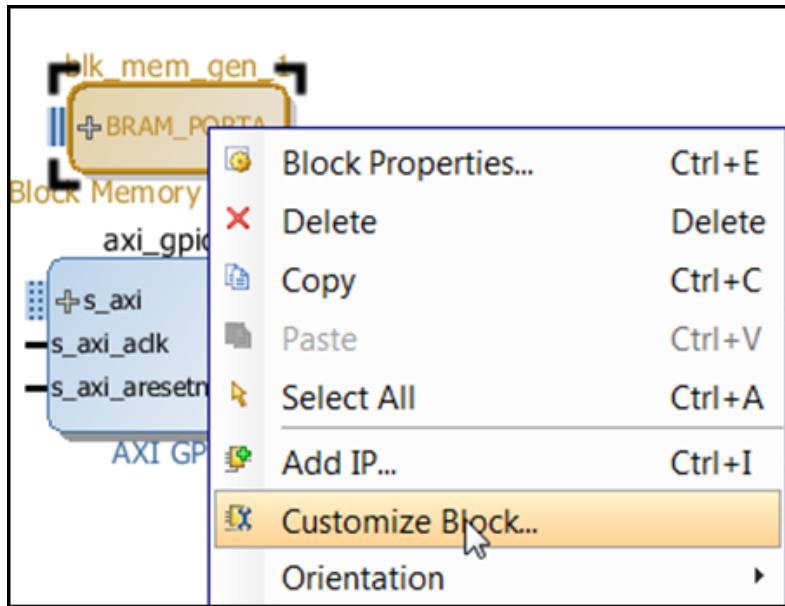


Figure 12: Customize Block Option

The **Re-customize IP** dialog box opens. 2.

2. On the Basic tab of the dialog box, set:
 - **Mode** to **BRAM Controller**
 - **Memory Type** to **True Dual Port RAM**

Click **OK**.

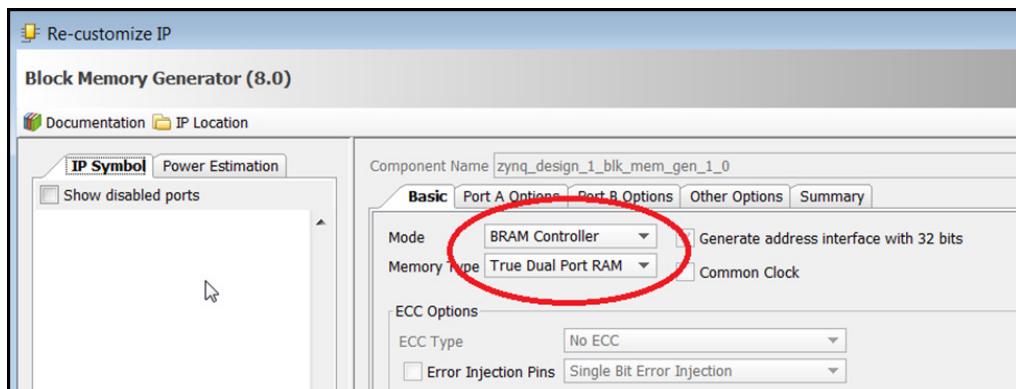


Figure 13: Set Mode and Memory Type

The AXI BRAM Controller provides an AXI memory map interface to the Block Memory Generator.

3. Connect the Block Memory Generator to the AXI4 BRAM Controller by clicking the connection point and dragging a line between the IP.

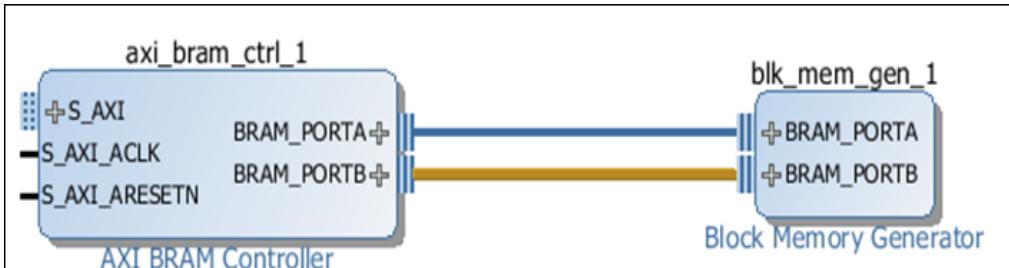


Figure 14: Connected AXI BRAM Controller and Block Memory Generator

The AXI BRAM Controller provides an AXI memory map interface to the Block Memory Generator.

Use Block Designer Assistance

Block Designer Assistance helps connect the AXI GPIO and AXI BRAM Controller to the Zynq-7000 PS.

1. Click **Run Connection Automation** and then select **/axi_gpio_1/s_axi** to connect the BRAM controller and GPIO IP to the Zynq PS and to the external pins on the ZedBoard (FIGURE 15).

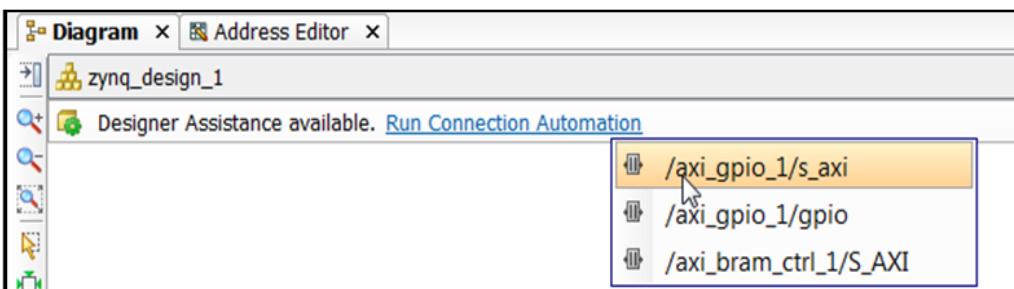


Figure 15: Run Connection Automation

The Run Connection Automation dialog box opens and states that it will connect the master AXI interface to a slave interface.

In this case, the master is the Zynq Processing System IP (FIGURE 16).



Figure 16: Run Connection Automation Message

Click **OK**.

This action instantiates an AXI Interconnect IP as well as a Proc Sys Reset IP and makes the interconnection between the AXI interface of the GPIO and the Zynq-7000 PS.

2. Select **Run Connection Automation** again, and the `/axi_gpio_1/gpio` shown in FIGURE 17.

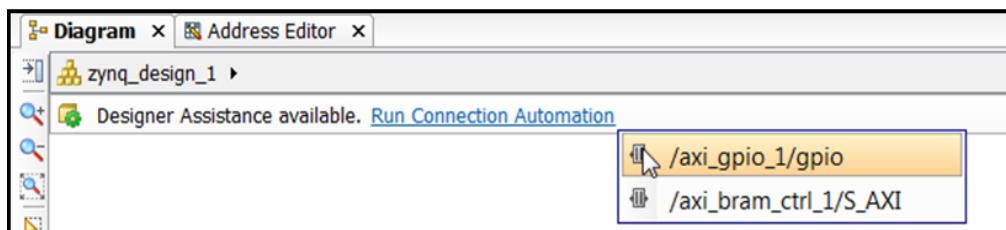


Figure 17: axi_gpio Selection

The Run Connection Automation dialog box includes options to hook up to the GPIO port. 4.

3. Select `leds_8bits` (FIGURE 18).

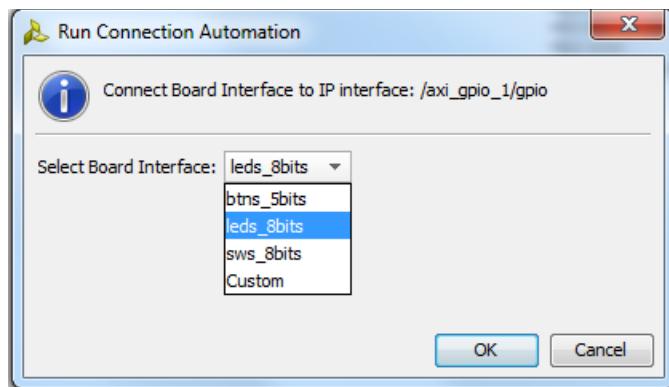


Figure 18: Select Board Interface Options

4. Click **OK**. This step also configures the IP so that during netlist generation, the IP creates the necessary Xilinx Design Constraints (XDC).
5. Click **Run Connection Automation** again, and select the remaining option **/axi_bram_ctrl_1/S_AXI** (FIGURE 19).

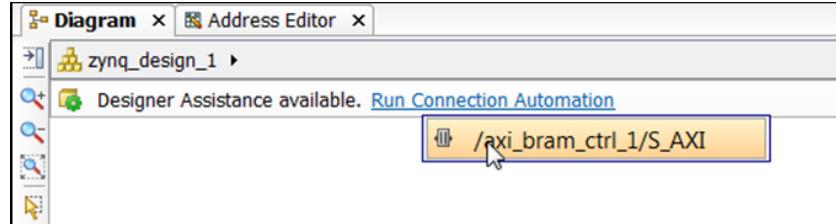


Figure 19: axi_bram_ctrl Selection

This completes the connection between the Zynq7 Processing System and the AXI BRAM Controller.

The IP integrator subsystem looks like FIGURE 20. Again, the relative positions of the IP can differ slightly.

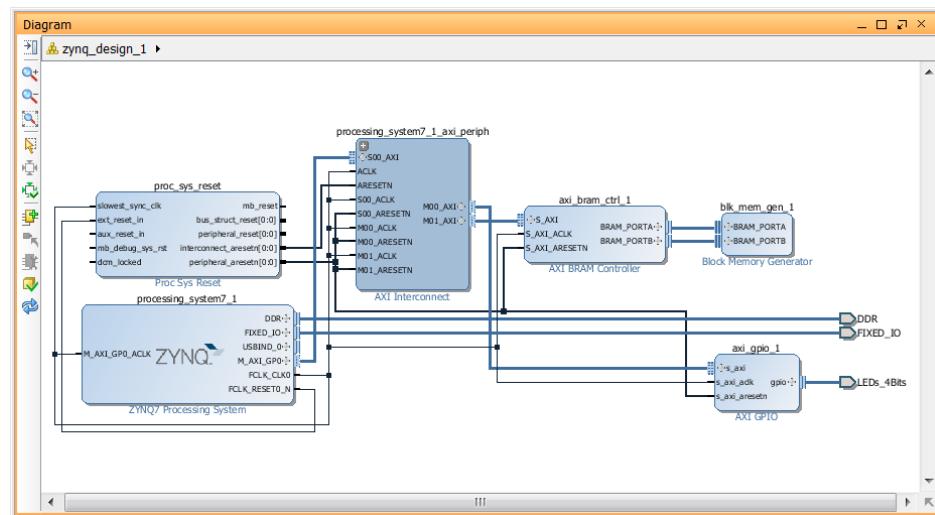


Figure 20: Zynq Processor System

6. Click the Address Editor tab to show the memory map of all the IP in the design.

In this case, there are two IP: the AXI GPIO and the AXI BRAM Controller. The IP integrator assigns the memory maps for these IP automatically. You can change them if necessary.

7. Change the range of the AXI BRAM Controller to **64K**, as shown in FIGURE 21.

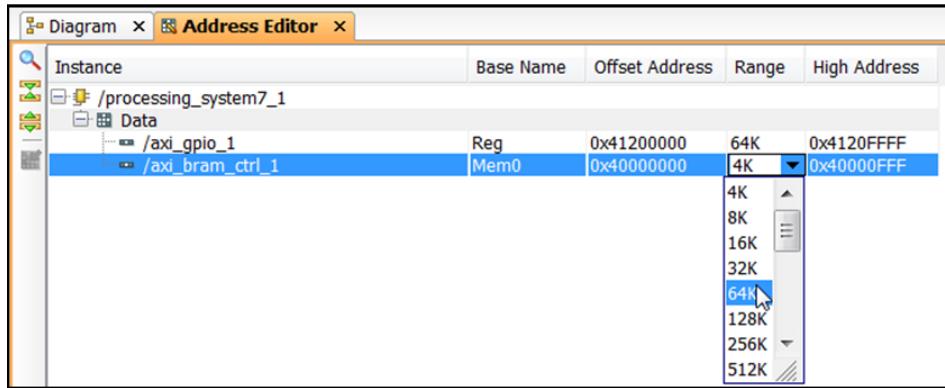


Figure 21: axi_bram_ctrl to 64k Range

8. Save your design by pressing Ctrl-S, or select File > Save Block Design.
9. Click the Address Editor tab to make sure that the memory mappings for the GPIO and BRAM controller have been auto populated.
10. From the toolbar, run Design-Rules-Check (DRC) by clicking the **Validate Design** button (FIGURE 22). Alternatively, you can do the same from the menu by:
 - Selecting **Tools > Validate Design** from the menu.
 - Right-clicking in the Diagram window and selecting **Validate Design**.

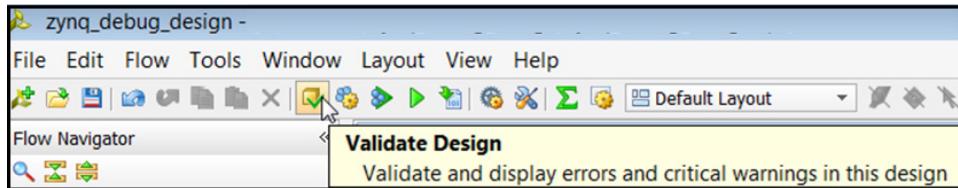


Figure 22: Validate Design Button

The Validate Design Successful dialog box opens (FIGURE 23).

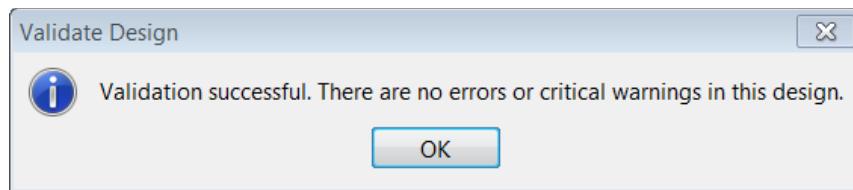


Figure 23: Validate Design Message

11. Click **OK**.

Step 4: Generate HDL Design Files

You now generate the HDL files for the design.

1. In the Source window, right-click the top-level subsystem design and select **Generate Output Products** (FIGURE 24). This generates the source files for the IP used in the block diagram and the relevant constraints file.


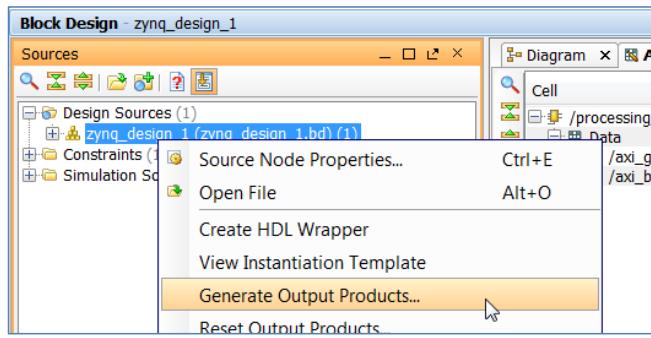


Figure 24: Generate Output Products Option

2. The **Manage Output Products** dialog box opens. Click **OK**.

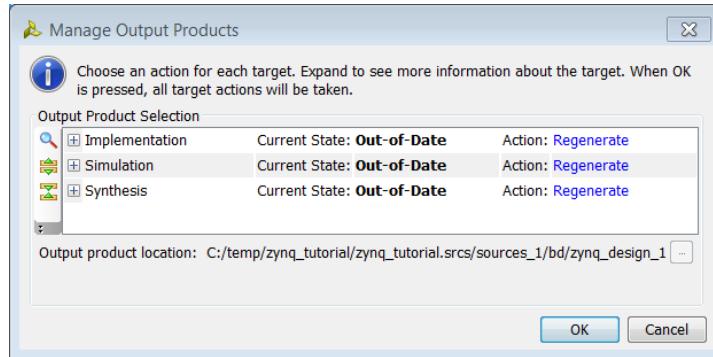

3. In the Sources window, select the top-level subsystem source, and select **Create HDL Wrapper** to create an example top-level HDL file (FIGURE 25).
4. Click **OK** when the **Create HDL Wrapper** dialog box opens.

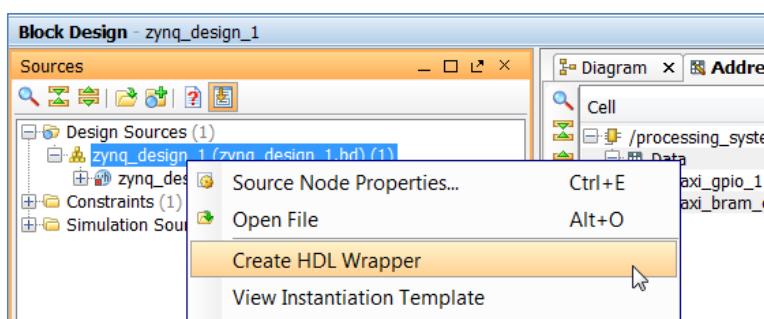


Figure 25: Create HDL Wrapper

Step 7: Implement Design and Generate Bitstream

1. In Flow Navigator, click **Generate Bitstream** to implement the design and generate a BIT file.

Note: If the system requests to re-synthesize the design before implementing, click **No**. The previous step of saving the constraints caused the flow to mark synthesis out-of-date. Ordinarily, you might want to re-synthesize the design if you manually changed the constraints, but for this tutorial, it is safe to ignore this condition (FIGURE 26).

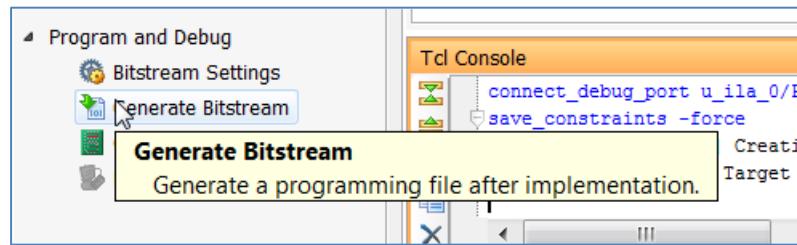


Figure 26: Generate Bitstream

You might see a dialog box stating no implementation results are available.

2. Click **Yes**.

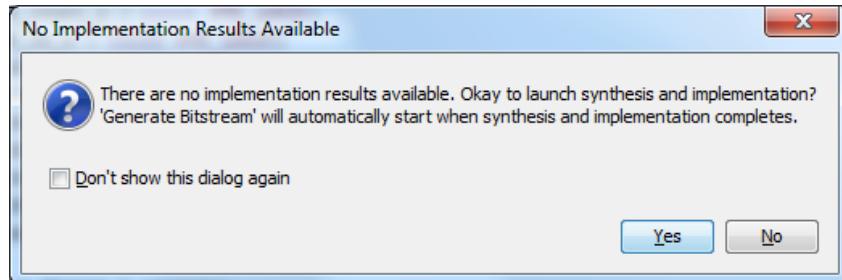


Figure 27: No Implementation Results Available Dialog Box

3. After the design implementation, click **Open Implemented Design**, (FIGURE 28).

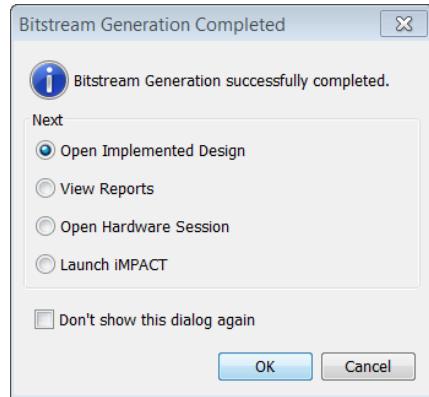


Figure 28: Bitstream Generation Completed

4. You might get a warning that the implementation is out of date. Click **Yes**.

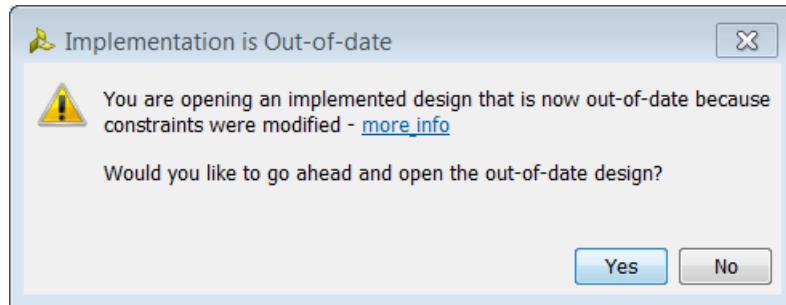


Figure 29: Implementation Is Out-of-Date Dialog Box

Step 8: Export Hardware to SDK

In this step, you export the hardware description to SDK. You use this in Part 2. The IP integrator block diagram, and the Implemented design, must be open to export the design to SDK.

IMPORTANT: For the Digilent driver to install, you must power on and connect the board to the host PC before launching SDK.

Export to SDK

1. In the Flow Navigator, click **Open Block** to invoke the IP integrator design (FIGURE 30).



Figure 30: IP Integrator - Open Block Design

Now you are ready to export your design to SDK.

2. From the main Vivado File menu, select Export Hardware for SDK (FIGURE 31).

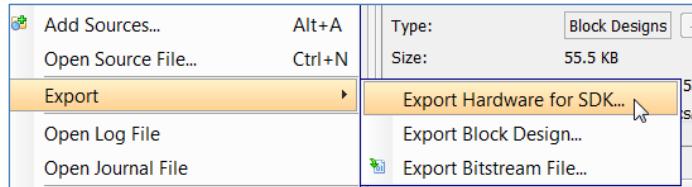


Figure 31: Export Hardware for SDK

The Export Hardware for SDK dialog box opens, ensure that Export Hardware, Include Bitstream, and Launch SDK are checked (FIGURE 32).

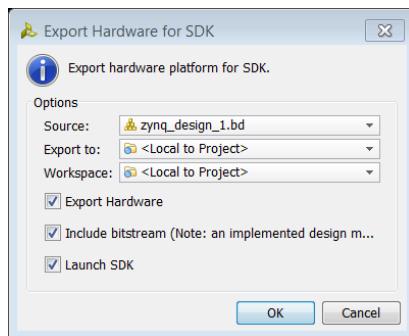


Figure 32: Export Hardware for SDK

Part 2: Build Zynq-7000 Processor Software

In this portion of the tutorial you will build an embedded software project that prints “Hello World” to the serial port.

Step 1: Start SDK and Create a Software Application

1. If you are doing this lab as a continuation of Part 1 then SDK should have launched in a separate window (if you checked the Launch SDK option while exporting hardware). You can also start SDK from the Windows Start menu by clicking on **Start > All Programs > Xilinx Design Tools > Vivado 2013.2 > SDK > Xilinx SDK 2013.2**. When starting SDK in this manner you need to ensure that you in the correct workspace.
2. You can do that by clicking on **File > Switch Workspace > Other** in SDK. In the Workspace Launcher dialog box in the Workspace field, point to the **SDK_Export** folder where you had exported your hardware from lab 1. Usually, this is located at
`..\\project_name\\project_name.sdk\\SDK\\SDK_Export.`

Now you can create a hello world application.

3. Select **File > New > Application Project** (FIGURE 33).

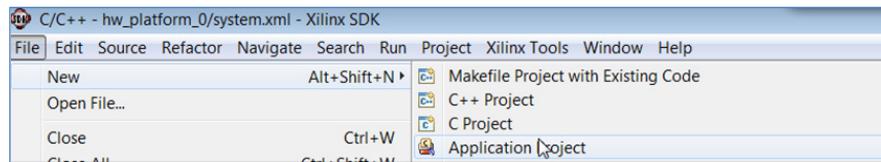


Figure 33: File->New->Application Project

New Project dialog box opens

4. In the Project Name field, type **Zync_Design**, and click **Next** (FIGURE 34).

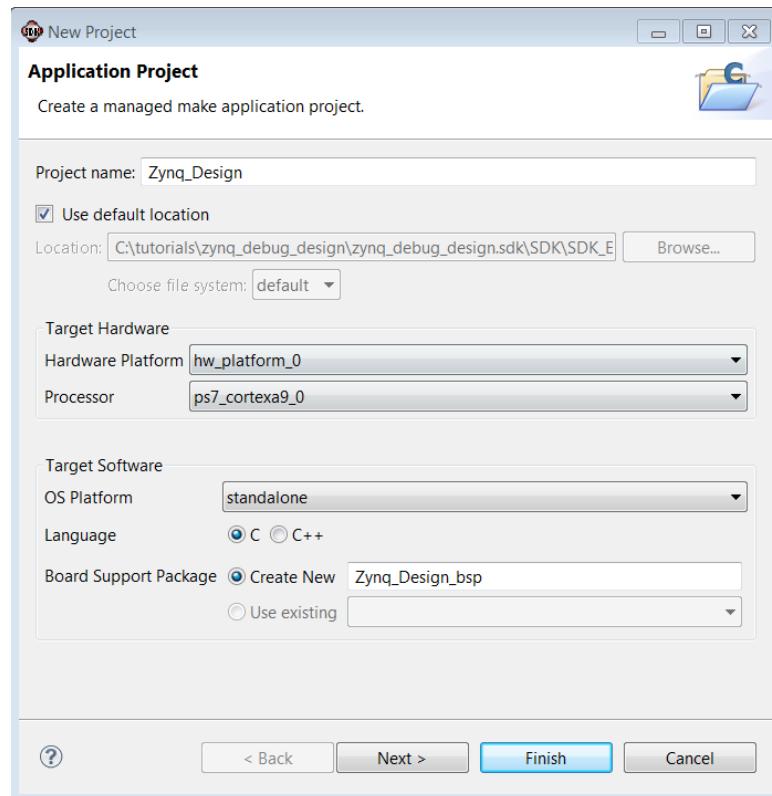


Figure 34: SDK Application Project

5. From the Available Templates, select **Hello World** (FIGURE 34) and click **Finish**.

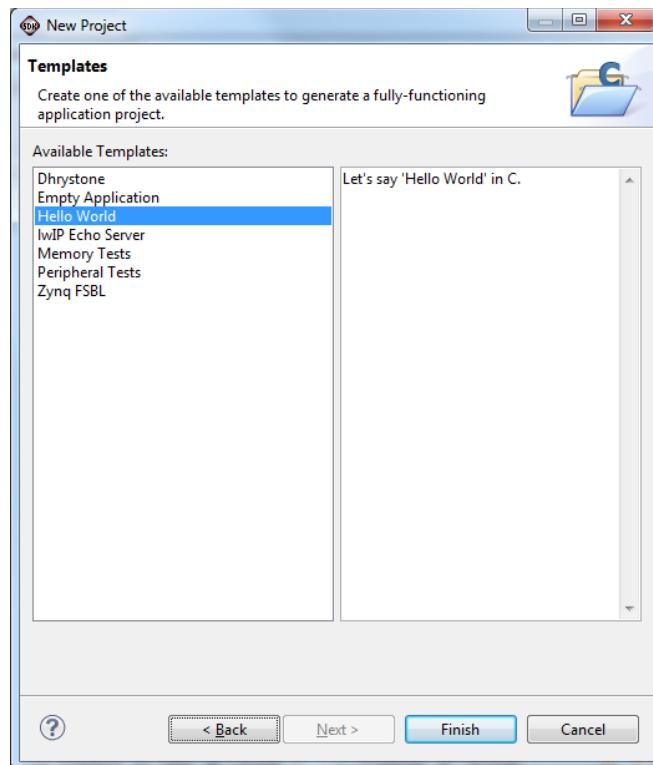


Figure 35: SDK New Project Template

When the program finish compiling, you will see the following (FIGURE 36).

A screenshot of the 'CDT Build Console' window. The title bar says 'Overview | Source' and has tabs for 'Problems', 'Tasks', 'Console' (which is active), 'Properties', and 'Terminal'. The main area shows the build log for 'Zynq_Design'. It starts with 'Invoking: ARM Print Size', followed by the command 'arm-xilinx-eabi-size Zynq_Design.elf | tee "Zynq_Design.elf.size"'. Below that, memory statistics are listed: text 74740, data 2024, bss 33700, dec 110464, hex 1af80, and filename Zynq_Design.elf. The log concludes with 'Finished building: Zynq_Design.elf.size'. At the bottom of the console window, a blue status bar displays '16:53:10 Build Finished (took 4s.976ms)'.

Figure 36: SDK Message

Step 2: Run the Software Application

Now, you must run the hello world application on the ZedBoard. To do so, you need to configure the JTAG port. Make sure that your hardware is powered on and a Digilent Cable is connected to the host PC. Also, ensure that you have a USB cable connected to the UART port of the ZedBoard.

1. Click **Xilinx Tools** and select **Configure JTAG Settings** (FIGURE 37).

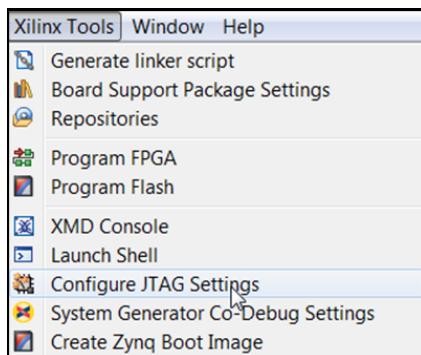


Figure 37: Configure JTAG Settings

2. In the Configure JTAG Settings dialog box, select the **Type** as **Auto Detect**, and click **OK** (FIGURE 38).

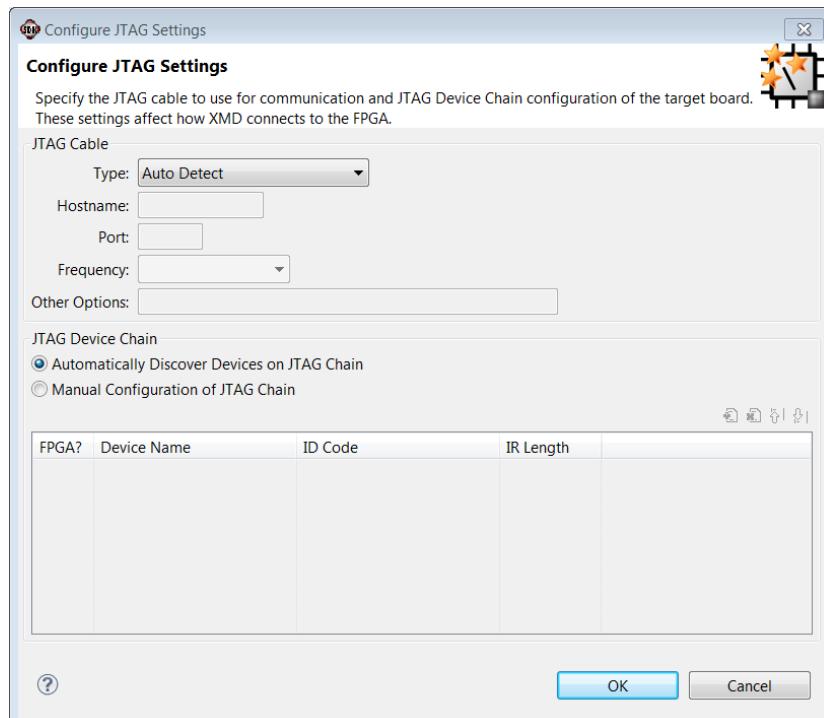


Figure 38: Configure JTAG Settings

3. Next, download the bitstream into the FPGA by selecting Xilinx **Tools** > **Program FPGA** (FIGURE 39).

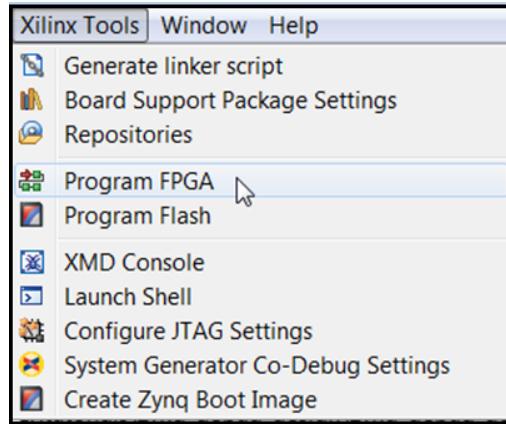


Figure 39: Program FPGA

This opens the Program FPGA dialog box.

4. Ensure that the path to the bitstream that you created in Step 7 of Lab 1 is correct and then click **Program**.

Note: The DONE LED on the board turns blue if the programming is successful.

5. Select and right-click the **Zynq_Design** application.
6. Select **Debug As** and **Debug Configurations** (FIGURE 40).

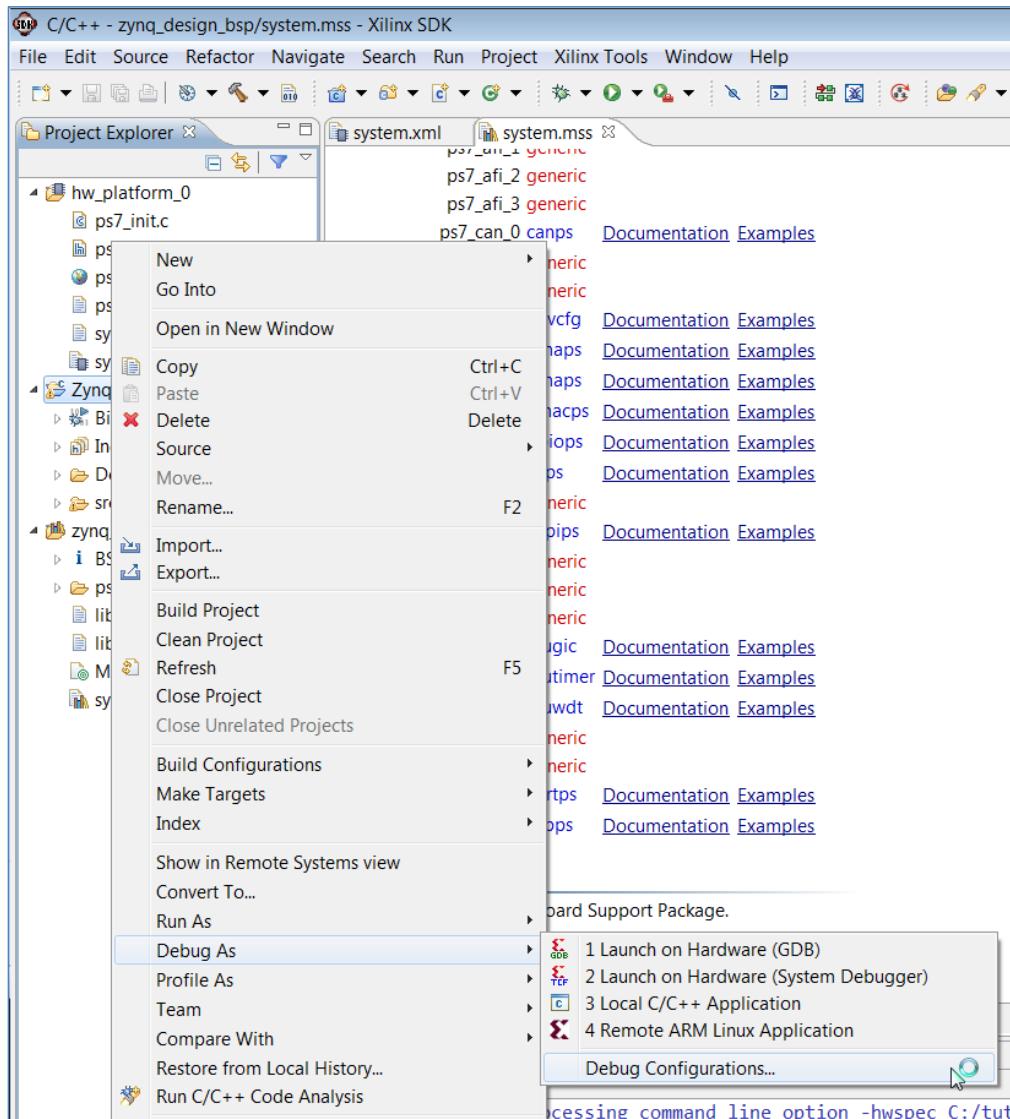


Figure 40: Launch on Hardware

7. In the Debug Configurations dialog box, right-click **Xilinx C/C++ Application (GDB)** and select **New**.

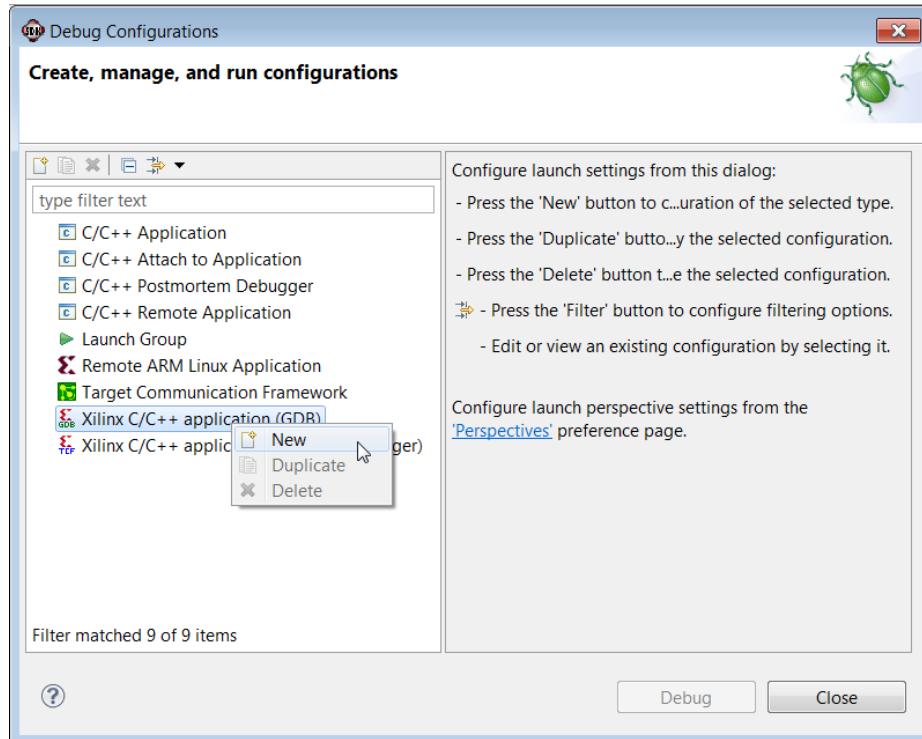


Figure 41: Debug Configuration Dialog Box

8. In the Debug Configurations dialog box, click **Debug**.

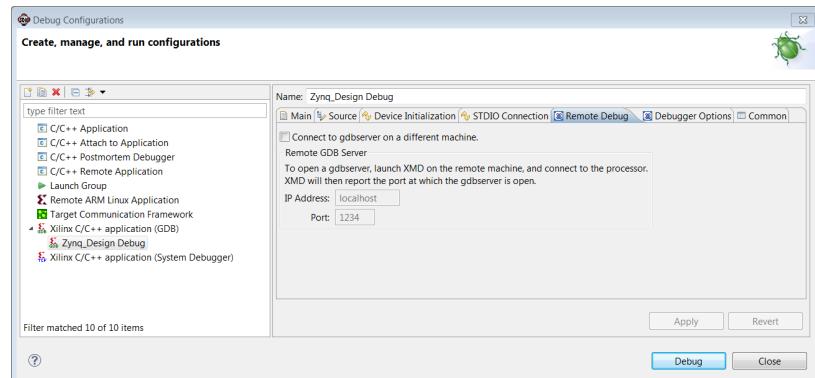


Figure 42: Run Debug Configurations

9. The Confirm Perspective Switch dialog box opens. Click **Yes**.

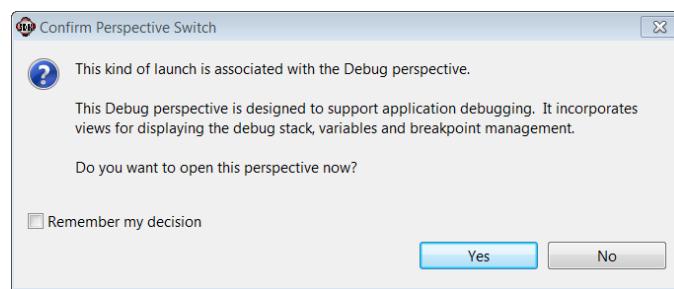


Figure 43: Confirm Perspective Switch Dialog Box

10. Set the terminal by selecting the Terminal 1 tab and clicking the Settings button (FIGURE 44).

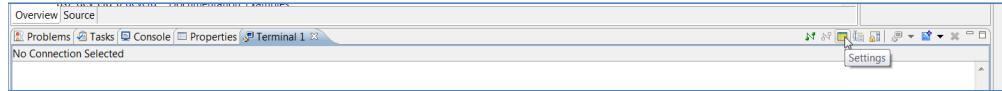


Figure 44: Settings Button

11. Use the following settings for the ZedBoard (FIGURE 45). Click **OK**.

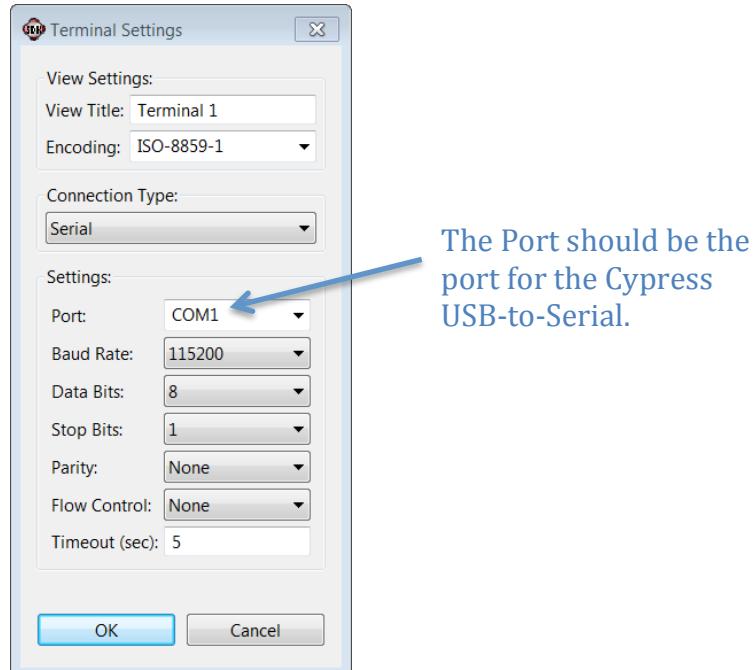


Figure 45: Terminal Settings

12. Verify the **Terminal** connection by checking the status at the top of the tab (FIGURE 46).



Figure 46: Terminal Connection Verification

13. In the **Debug** tab, expand the tree, and select the processor core on which the program is to be run (FIGURE 47).

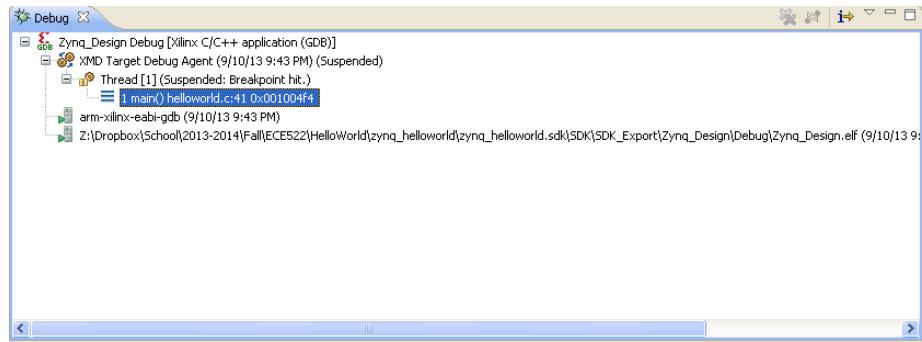


Figure 47: Processor Core to Debug

14. If it is not already open, select `.../src/helloworld.c`, line 41, and double click that line to open the source file.

Add a Breakpoint

You add a breakpoint on line 43.

1. Select **Navigate > Go To Line** (FIGURE 48).

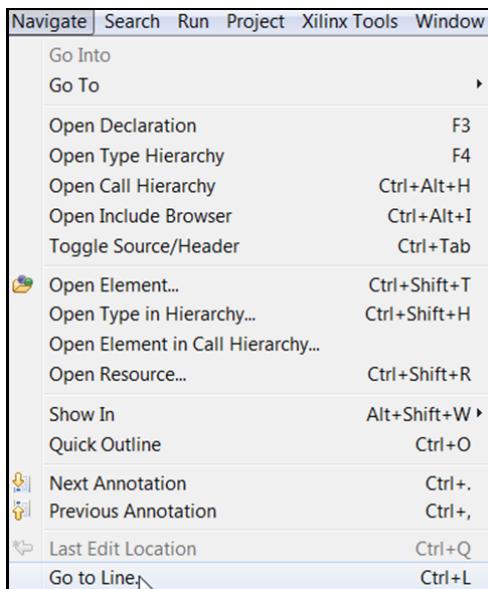


Figure 48: Go to Line

2. In the Go To Line dialog box, type **43**.
3. Double click on the left pane of line 43, which adds a breakpoint on that line of source code (Figure 49).



```

system.xml      system.mss      helloworld.c
+ uartsns550  9600
+ usartlite   Configurable only in HW design
+ ps7_uart    115200 (configured by bootrom/bsp)
r/
#include <stdio.h>
#include "platform.h"

void print(char *str);

int main()
{
    init_platform();
    print("Hello World\n");
    return 0;
}


```

Figure 49: Add a Breakpoint

Step 3: Executing the Software

This step will take you through executing the code up to and past the break point.

1. Click the **Resume** button or press **F8**
2. Click the **Step Over** button or press **F6**
3. You should see “Hello World” in the terminal if everything worked correctly (FIGURE 50).

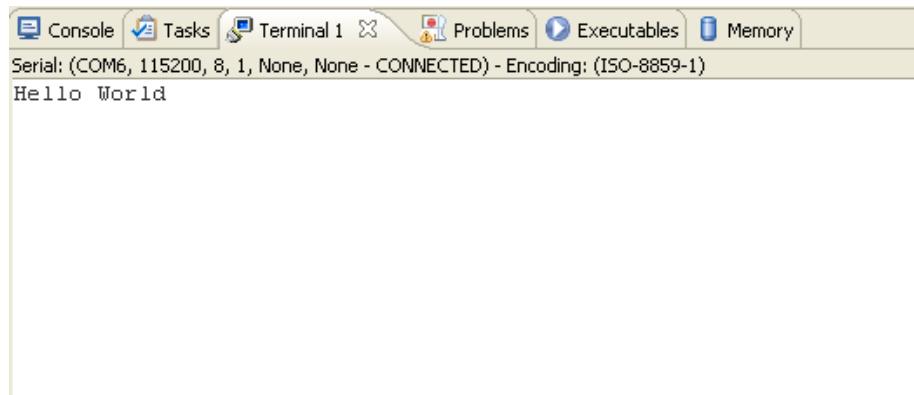

Console Tasks Terminal 1 Problems Executables Memory
Serial: (COM6, 115200, 8, 1, None, None - CONNECTED) - Encoding: (ISO-8859-1)
Hello World

Figure 50: Terminal Output