

Introduction


Thank you for purchasing the FrSky 2.4GHz ACCST Taranis Q X7S digital telemetry radio system. In order to make the best use of your system and to fly safely, please read this manual carefully. If you have any difficulties while using your system, please consult the manual, your hobby dealer, or FrSky technical support.

Due to unforeseen changes in production, the information contained in this manual is subject to change without notice.

Meanings of Special Markings

Pay special attention to safety where indicated by the following marks:

- ⚠ DANGER - Procedures which may lead to dangerous conditions and cause death/serious injury if not carried out properly.
- ⚠ WARNING - Procedures which may lead to a dangerous condition or cause death or serious injury to the user if not carried out properly or procedures where the probability of superficial injury or physical damage is high.
- ⚠ CAUTION - Procedures where the possibility of serious injury to the user is small, but there is a danger of injury, or physical damage, if not carried out properly.
- ⓘ Note - Steps, Tips or information.
- ⚠ WARNING - Always keep electrical components away from children.

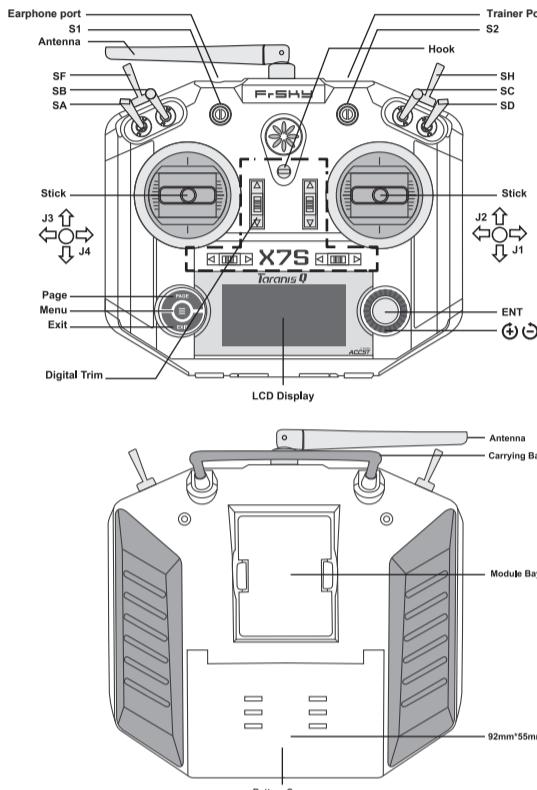

FrSky Electronic Co., Ltd. www.frsky-rc.com Contact us: frsky@frsky-rc.com
Add: F-4, Building C, Zhongxiu Technology Park, No.3 Yuanxi Road, Wuxi, 214125, Jiangsu, China Technical Support: sales4tech@gmail.com

Overview

- (Switch Default Settings)
- SA: 3 positions; Short Lever
 - SB: 3 positions; Long Lever
 - SC: 3 positions; Long Lever
 - SD: 3 positions; Short Lever
 - SF: 2 positions; Long Lever
 - SH: 2 positions; Momentary; Long Lever

You can choose the Switch and define its positions in the Mixer menu.

Adjust sticks of Taranis Q X7S


Taranis Q X7S has 4 centred sticks and will not distinguish between the throttle stick and other sticks. You can change the stick mode and feeling according to your need.

Battery Connector Polarity

Ensure that the battery connector polarity is correct when connecting batteries into the battery compartment, otherwise the Taranis Q X7S might not be powered on.

Cautions on handling antenna

- ⚠ Do not touch the antenna during operation. Doing so could interfere with transmission, causing a crash.
- ⚠ Do not carry the transmitter by the antenna. The antenna wire could break and prevent transmission.
- ⚠ Do not pull the antenna forcefully. The antenna wire could break and prevent transmission.

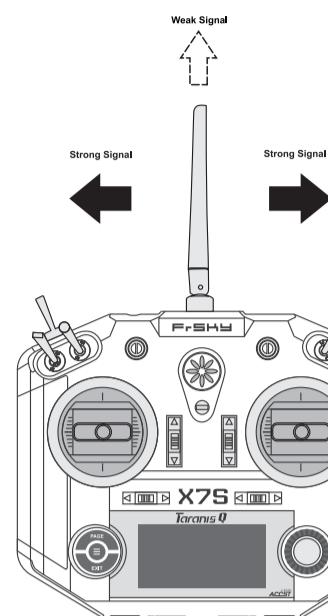

Rotating Antenna

The antenna can be rotated 180 degrees and angled 90 degrees. Forcing the antenna further than this can cause damage to the antenna. The antenna is not removable.

Angle adjustment of the antenna

The antenna rotation and angle can be adjusted. The antenna features weak radio signal in the forward direction and strong radio signal in the sideways directions. Adjust the antenna angle to match your flying style.


Specifications

- Model Name: Taranis Q X7S
- Number of channels: 16 channels (Up to 32 channels)
- Operating Voltage Range: 6.5~15V (2S, 3S Lipo are acceptable)
- Operating Current: 190mA@7.2V
- Operating Temperature: -10~60°C
- Backlight LCD Screen: 128*64 outdoor readable LCD
- Model Memories: 60 (extendable by MicroSD (TF) card)
- Compatibility: FrSky receivers in the D8/D16/LR12 mode, Taranis Q X7S-EU version is not compatible with D8 mode.

Features

- Hall sensor M7 gimbal
- Receiver Match
- Audio Speech Outputs (values, alarms, settings, etc.)
- Real-time Flight Data Logging
- Receiver Signal Strength Indicator (RSSI) Alerts
- Inbuilt wireless trainer system
- Super Low Latency
- Vibration Alerts
- Model files are compatible with TARANIS X9D/X9D Plus/X9E/X7.
- Open source firmware OpenTx installed.
- Support connect the Free Link App for telemetry

FrSky Electronic Co., Ltd. www.frsky-rc.com Contact us: frsky@frsky-rc.com
Add: F-4, Building C, Zhongxiu Technology Park, No.3 Yuanxi Road, Wuxi, 214125, Jiangsu, China Technical Support: sales4tech@gmail.com

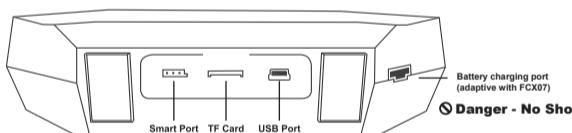

Interface definition


1. TF card is not provided with shipment.
2. USB port is for upgrading and reading / writing MicroSD cards and internal memory of radio contents.

Notes and Warnings for Battery

- ⚠ Please connect a battery in the battery compartment before use.
- ⚠ The voltage range should be DC 6.5~15V.
- ⚠ Be careful not to drop the battery.
- ⚠ Don't pull the battery wires as this could produce short-circuits and may cause the battery to fire even explode.
- ⚠ Do not remove the battery from the Taranis Q X7S transmitter while the voltage warning is blinking as this could cause internal settings and memories to be destroyed.
- ⚠ Do not use the transmitter if a "Backup Error" warning occurs.

Model Setup for Taranis Q X7S internal RF Module

Enter the MODEL SETUP menu.

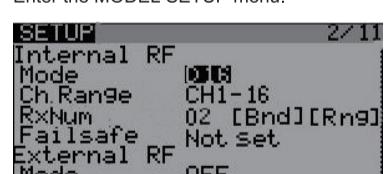

Step 1: Set the Mode for Taranis Q X7S Internal RF

Refer to the table below and set the Taranis Q X7S to the mode corresponding to your receiver (D8, D16 or LR12).

Mode of Taranis Q X7S	Compatible Receivers	Number of Output Channels
D8	V8-II series in D mode (V8FR-II, V8R7-II, V8R4-II, VD5M, etc.) D series (D8R-II plus, D8R-XP, D6FR, D4R-II, etc.)	8 channels
D16	X series (X8R, etc.)	Up to 16 channels
LR12	L series (L9R, etc.)	12 channels

Mode of Taranis Q X7S-EU version	Compatible Receivers	Number of Output Channels
D16-EU	X series-EU version receivers	Up to 16 channels
LR12	L series (L9R, etc.)	12 channels

FrSky Electronic Co., Ltd. www.frsky-rc.com Contact us: frsky@frsky-rc.com
Add: F-4, Building C, Zhongxiu Technology Park, No.3 Yuanxi Road, Wuxi, 214125, Jiangsu, China Technical Support: sales4tech@gmail.com

Notice:

Older V8 series receivers are not supported by the internal module of Taranis Q X7S but can be used with an external DJT module in V8 mode.
Taranis Q X7S-EU version only has D16-EU and LR12 mode.

Step 2: Set the Channel Range

The internal RF module of Taranis Q X7S supports up to 16 channels. The channel range is configurable, and needs double check before use.

Step 3: Set the Receiver Number

When you create a new model, the system will assign you a receiver number automatically, but this can be easily changed. The range of the receiver number is 00-63, with the default number being 01 (use 00 is not recommended). Once the receiver is set to the desired number and is bound to the Taranis Q X7S, the bind procedure will not need to be repeated unless the receiver number is changed. In this case, either set the receiver number to the previous one or repeat the bind procedure.

Step 4: Bind

Bind refers to Taranis Q X7S binding mode. Move the cursor to "Bind", press ENTER button, the cursor will flash and the speaker will beep to remind you that the RF module has entered the bind mode. Then put your receiver into binding mode and finish the bind procedure (refer to the receiver's manual for details). Press Enter or EXIT to exit.

Step 5: Set Failsafe mode

There are 4 failsafe modes: No Pulse, Hold, Custom and receiver (this mode only used above opentx-v2.0.0 firmware).

- No Pulse: on loss of signal the receiver produces no pulses on any channel. To use this type, select it in the menu and wait 9 seconds for the failsafe to take effect.
- Hold: the receiver continues to output the last positions before signal was lost. To use this type, select it in the menu and wait 9 seconds for the failsafe to take effect.
- Custom: pre-set to required positions on lost signal. Move the cursor to "Set" and press ENTER, you will see FAILSAFE SETTING screen below. Move the cursor to the channel you want to set failsafe on, and press ENTER. When moving the corresponding sticks or switches, you will see the channel bar moving. Move the channel bar to the place you want for failsafe and long press ENTER to finish the setting. Wait 9 seconds before the failsafe takes effect.
- Receiver: set the failsafe on the receiver (see receiver instructions) in D16 or LR12 mode, select it in the menu and wait 9 seconds for the failsafe to take effect.

Notice:

The above instructions do not apply to D-series receivers, which require the internal RF module of Taranis Q X7S to be in D8 mode. For these receivers, failsafe must be set on the receiver side (see receiver instructions).

- SBUS port always outputs, No Pulse could not perform properly on it. Set "Hold" or "Custom" for SBUS port.

Step 6: Range

Range refers to Taranis Q X7S range check mode. A pre-flight range check should be done before each flying session. Move the cursor to "Range" and press ENTER. In range check mode, the effective distance will be decreased to 1/30. Press Enter or EXIT to exit.

FrSky Electronic Co., Ltd. www.frsky-rc.com Contact us: frsky@frsky-rc.com
Add: F-4, Building C, Zhongxiu Technology Park, No.3 Yuanxi Road, Wuxi, 214125, Jiangsu, China Technical Support: sales4tech@gmail.com

Model Setup for Taranis Q X7S external RF Module

```

SETUP 2/11
Internal RF
Mode [ ] CH1-16
Ch Range CH1-16
RxNum 02 [Bnd] [Rng]
Failsafe Not set
External RF OFF
Mode

```

The external RF module can be powered on or off by software. The setup process is the same as that for the internal RF module.

If you use other brand RF module than FrSky, please choose PPM mode.

FCC Statement**§ 15.19 Labelling requirements.**

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

§ 15.21 Information to user.

Any changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

§ 15.105 Information to the user.

Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

-Reorient or relocate the receiving antenna.

-Increase the separation between the equipment and receiver.

-Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.

-Consult the dealer or an experienced radio/TV technician for help.

*** RF warning for Portable device:**

The device has been evaluated to meet general RF exposure requirement. The device can be used in portable exposure condition without restriction.

CE

The product may be used freely in these countries: Germany, Italy, Spain, Belgium, Netherlands, Portugal, Greece, Ireland, Denmark, Luxembourg, Austria, Finland, Sweden, Norway, Switzerland, France and Iceland.

FrSky Electronic Co., Ltd.

www.frsky-rc.com

Contact us: frsky@frsky-rc.com

Add: F-4, Building C, Zhongxiu Technology Park, No.3 Yuanxi Road, Wuxi, 214125, Jiangsu, China Technical Support: sales4tech@gmail.com

FLYING SAFETY**⚠ Warning:**

To ensure the safety of yourself and others, please observe the following precautions.

① **Have regular maintenance performed.** Although your TARANIS Q X7S protects the model memories with non-volatile EEPROM memory (which does not require periodic replacement) and of a battery, it still should have regular check-ups for wear and tear. We recommend sending your system to your FrSky Service Centre annually during your non-flying-season for a complete check-up and service.

Battery

① Using a fully charged battery (DC 6.5~15V). A low battery will soon die, causing loss of control and a crash. When you begin your flying session, reset your transmitter's built-in timer, and during the session pay attention to the duration of usage. Also, if your model uses a separate receiver battery, make sure it is fully charged before each flying session.

① **Stop flying long before your batteries become low on charge. Do not rely on your radio's low battery warning systems, intended only as a precaution, to tell you when to recharge. Always check your transmitter and receiver batteries prior to each flight.**

Where to Fly

We recommend that you fly at a recognized model airplane flying field. You can find model clubs and fields by asking your nearest hobby dealer.

① **Always pay particular attention to the flying field's rules**, as well as the presence and location of spectators, the wind direction, and any obstacles on the field. Be very careful flying in areas near power lines, tall buildings, or communication facilities as there may be radio interference in their vicinity.

At the flying field

① To prevent possible damage to your radio gear, turn the power switches on and off in the proper sequence:

1. Pull throttle stick to idle position, or otherwise disarm your motor/engine.

2. Turn on the transmitter power and allow your transmitter to reach its home screen.

3. Confirm the proper model memory has been selected.

4. Turn on your receiver power.

5. Test all controls. If a servo operates abnormally, don't attempt to fly until you determine the cause of the problem. (For PCM systems only: Test to ensure that the Failsafe settings are correct by waiting at least 2 minutes after adjusting them, turning the transmitter off and confirming the proper surface/throttle movements. Turn the transmitter back on.)

6. Start your engine.

7. Complete a full range check.

8. After flying, bring the throttle stick to idle position, engage any kill switches or otherwise disarm your motor/engine.

If you do not turn on your system on and off in this order, you may damage your servos or control surfaces, flood your engine, or in the case of electric-powered or gasoline-powered models, the engine may unexpectedly turn on and cause a severe injury.

① **Make sure your transmitter can't tip it over.** If it is knocked over, the throttle stick may be accidentally moved, causing the engine to speed up. Also, damage to your transmitter may occur.

① In order to maintain complete control of your aircraft it is important that it remains visible at all times. Flying behind large objects such as buildings, grain bins, etc. must be avoided. Doing so may interrupt the radio frequency link to the model, resulting in loss of control.

FrSky Electronic Co., Ltd. www.frsky-rc.com Contact us: frsky@frsky-rc.com
Add: F-4, Building C, Zhongxiu Technology Park, No.3 Yuanxi Road, Wuxi, 214125, Jiangsu, China Technical Support: sales4tech@gmail.com

④ Do not grasp the transmitter's antenna during flight. Doing so may degrade the quality of the radio frequency transmission and could result in loss of control.

④ As with all radio frequency transmissions, the strongest area of signal transmission is from the sides of the transmitter's antenna. As such, the antenna should not be pointed directly at the model. If your flying style creates this situation, easily move the antenna to correct this situation.

① Before taxiing, be sure to extend the transmitter antenna to its full length.

A collapsed antenna will reduce your flying range and cause a loss of control. It is a good idea to avoid pointing the transmitter antenna directly at the model, since the signal is weakest in that direction.

④ **Don't fly in the rain!** Water or moisture may enter the transmitter through the antenna or stick openings and cause erratic operation or loss of control. If you must fly in wet weather during a contest, be sure to cover your transmitter with a plastic bag or waterproof barrier. Never fly if lightning is expected.

Secure Digital (SD) Memory Card Handling Instructions

The MicroSD card (not provided with Taranis Q X7S) can store various files, such as model data, music, sound files, pictures and text. The card is locked when it is pushed in all the way in. To remove the card, push in on the card again, it will pop out allowing you to remove it.

⚠ Warning

① Be sure to turn off the power of the transmitter before inserting or removing a MicroSD card.

② As the MicroSD card is a precision device, do not use excessive force when inserting.

③ If model data generated by a transmitter with a new software version is copied to one with older software, the transmitter may not operate correctly. Before copying the model data, update the destination transmitter to the new software version.

④ Do not expose the MicroSD card to dirt, moisture, water or fluids of any kind.

⑤ Never remove the MicroSD card or turn off power while entering data.

⑥ Never store the MicroSD card where it may be subject to strong static electricity or magnetic fields.

⑦ Do not expose the MicroSD card to direct sunlight, excessive humidity or corrosive environments.

⑧ Be certain to insert the MicroSD card in the correct direction.

Read data from a PC

Music and image files edited by a PC can be transferred onto the MicroSD card and used on your TARANIS Q X7S transmitter. Equipment for reading and writing MicroSD cards is available at most electronics stores.

Stored data

The life of the MicroSD card is limited due to the use of Flash memory. If you have a problem saving or reading data after a long period of use you may need to purchase a new MicroSD card.

• We are not responsible for, and cannot compensate for any failure to the data stored in the memory card for any reason. Be sure to keep a backup of your models and data in your MicroSD card.

- TARANIS Q X7S transmitters and MicroSD cards use non-volatile memory devices so that the data stored is retained, even without a backup battery. Nevertheless, it is good practice to back up the data in the transmitter to the MicroSD card.
- The clock for the transmitter does depends on the internal battery, which may need to be replaced occasionally.

Updates

FrSky is continuously adding features and improvements to our radio systems. Updating (via USB Port or the MicroSD card) is easy and free. To get the most from your new transmitter, please check the download section of the FrSky website www.frsky-rc.com for the latest update firmware and guide for adjusting your sticks.

- The currently pre-installed firmware of FrSky Taranis Q X7S is modified from OpenTX firmware, improved and well tested by FrSky and the developing union.
- More information about OpenTX can be found on: <http://openrcforums.com>.

FrSky is continuously adding features and improvements to our products. To get the most from your product, please check the download section of the FrSky website www.frsky-rc.com for the latest update firmware and manuals