

UEFI & EDK II Training UEFI Driver Wizard Lab – Windows

See also Lab Guide.md for Copy & Paste examples in labs

tianocore.org



Lesson Objective

- Setup the UEFI Driver Wizard
- Create a UEFI Driver Template



UEFI DRIVER WIZARD

Creating a Template UEFI Driver with the UEFI Driver Wizard



UEFI Driver Wizard Overview

- ✓ Open source tool
- ✓ Based on Driver Writer's Guide for UEFI 2.3.1 content
- ✓ Intel engineers contributed
- ✓ Located on <u>www.TianoCore.org</u>





Installing UEFI Driver Wizard

Requirements and Options

- Workspace must contain BaseTools, MdePkg & MdeModulePkg Packages from tianocore.org edk2 for Driver development on Tianocore.org
- Uses previous lab's setup w/ Windows C:\FW\edk2-ws\
- Python* scripts from <u>GitHub Link</u> then use instructions from README for Python and wxPython versions to install then run

bash\$ python launch.py



Requirements for Your Driver



Using UEFI Driver Wizard

- UEFI Device Driver
- UEFI Version 2.7 (0x00020046)

```
#define EFI_2_70_SYSTEM_TABLE_REVISION ((2<<16) | (70DEC))</pre>
```

- Unloadable driver
- Support IA32 & x64 CPUs
- Returns component name information
- Byte stream device (i.e.UART / Serial I/O)
- Option to produce HII strings & forms for setup



Template File Contents

Proper UEFI driver entry point

Basic driver libraries/headers


Skeletons for common driver functions

Error values until ported EFI_UNSUPPORTED, EFI_DEVICE_ERROR



Lab 1: Create a UEFI Driver with the UEFI Driver Wizard

- In this lab, you'll create a new UEFI driver using the UEFI Driver Wizard.
- This will create a set of "c" code files to be used as a template UEFI Driver used in the subsequent driver labs

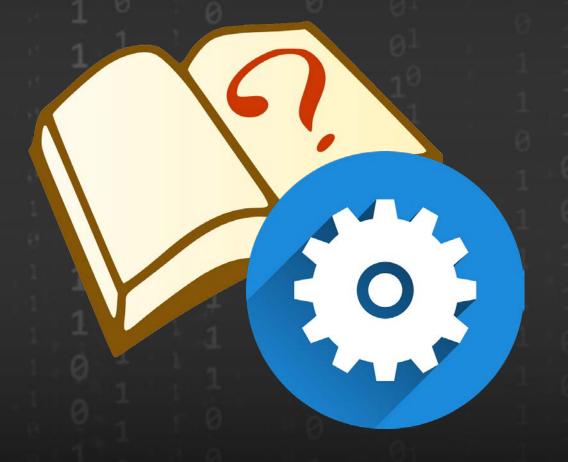



Lab 1: Install UEFI Driver Wizard

First setup for Building EDK II, See Lab Setup

Install UEFI Driver Wizard

- 1. Open and Run
 /FW/DriverWizard/UefiDriverWizard.msi
- 2. Click through "Next" until install finishes

Open the UEFI Driver Wizard








Lab 1: UefiDriverWizard -Select Work Space


Click on File and Select
"Open WORKSPACE"

Or
Control+O

Browse to C:/FW/edk2-ws/edk2
Select "OK"
Should say
"WORKSPACE C:\FW\edk2-ws\edk2 selected"

Note: the environment for EDK II must be setup with edksetup.bat

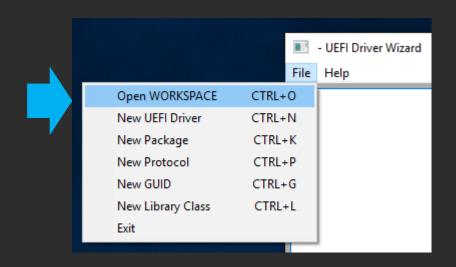


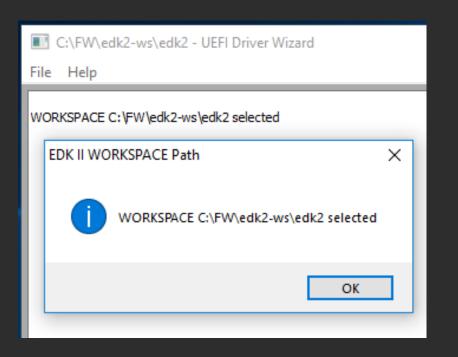




Lab 1: Create a New UEFI Driver

Control+N – to Open Menu

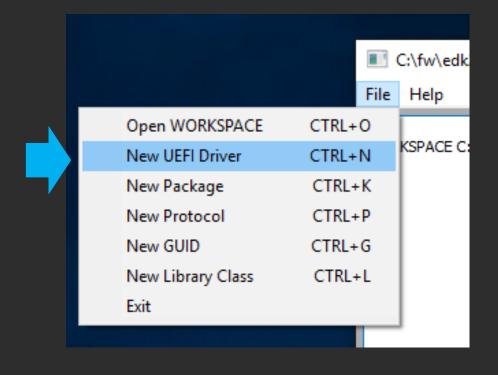

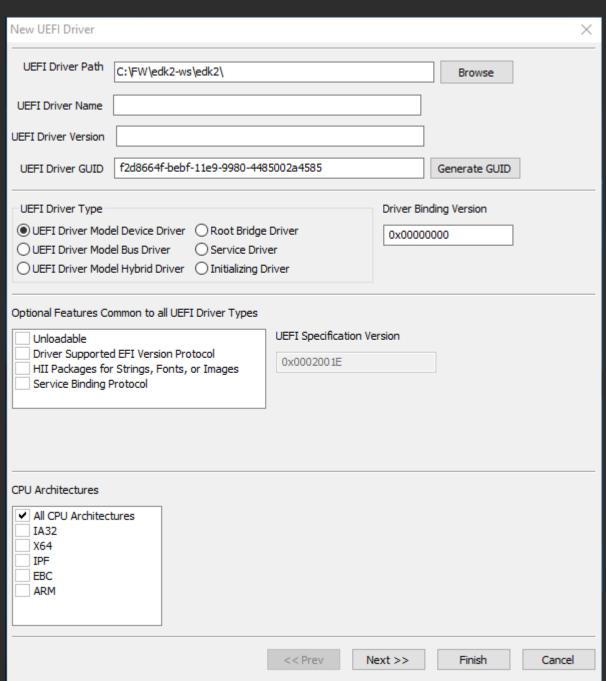



Lab 1: New UEFI Driver Menu


UEFI Driver Path" – Type: "MyPkg/MyWizardDriver"

Note: "UEFI Driver Name" is filled in.

- Ensure all the forms, radio buttons, and boxes are filled in and selected exactly like the image to the right. (except GUID)
- Note: A new, specific driver GUID will populate, so it will be different than this image

Click



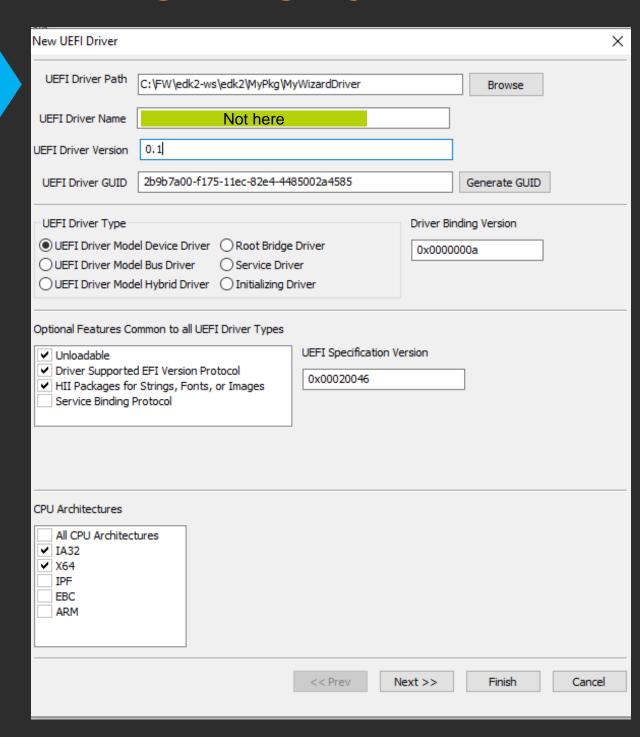




Lab 1: UEFI Driver Model Optional Features

Ensure all the forms, radio buttons, and boxes are filled in and selected exactly like the image to the right.

- √ "Component Name 2 Protocol"
- √ "Component Name Protocol"
- √ "HII Packages for Forms . . ."

Click

Next >>

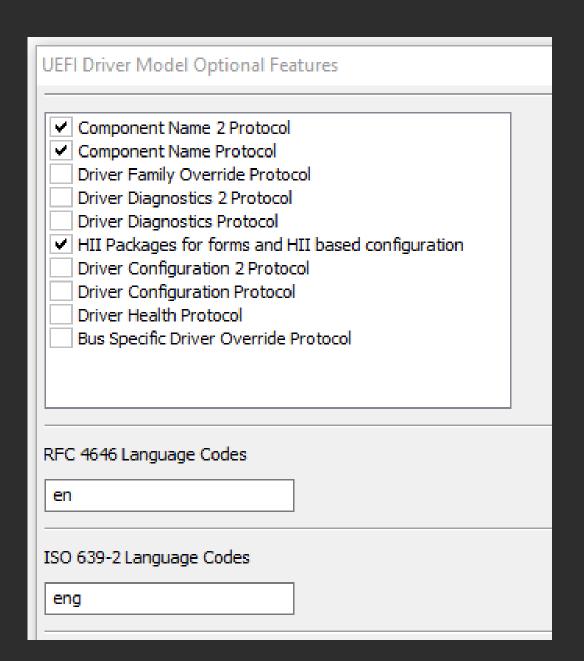




Lab 1: UEFI Driver Consumed Protocol

Select

√ "USB Driver that consumes the USB I/O Protocol"

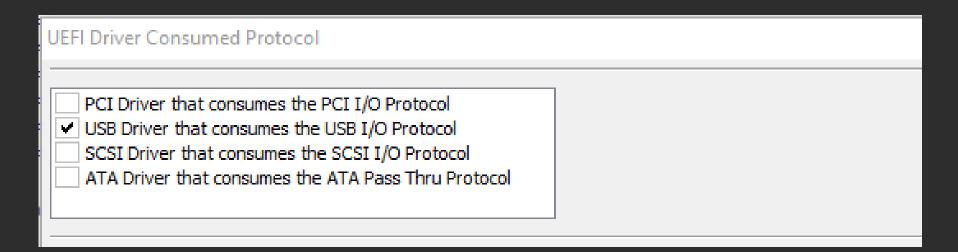

Click






Lab1: UEFI Driver Produced Protocols

Select

√ "Byte stream device (i.e.UART) producing Serial I/O Protocol"

Click


Finish

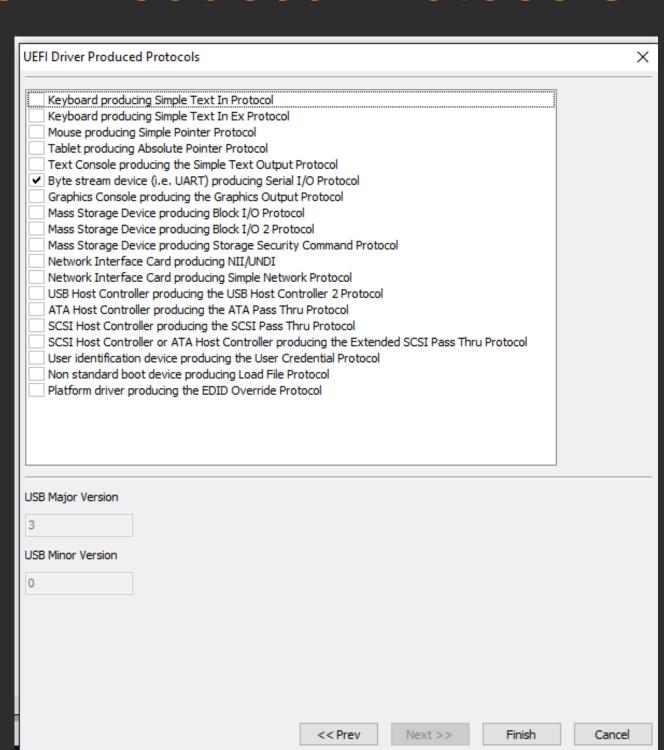




Lab 1: UEFI Driver Created

UEFI Driver template created

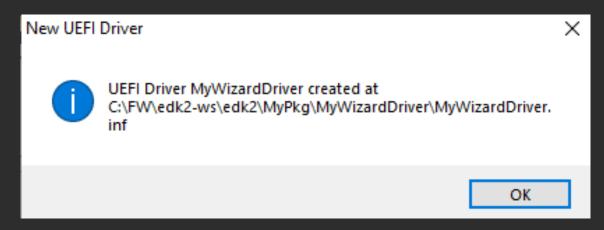

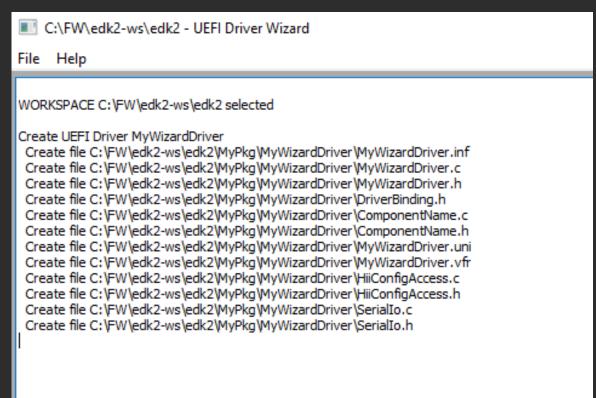

Close the UEFI Wizard



Summary



Setup the UEFI Driver Wizard



Create a UEFI Driver Template

17







Return to Main Training Page



Return to Training Table of contents for next presentation link





ACKNOWLEDGEMENTS

Redistribution and use in source (original document form) and 'compiled' forms (converted to PDF, epub, HTML and other formats) with or without modification, are permitted provided that the following conditions are met:

Redistributions of source code (original document form) must retain the above copyright notice, this list of conditions and the following disclaimer as the first lines of this file unmodified.

Redistributions in compiled form (transformed to other DTDs, converted to PDF, epub, HTML and other formats) must reproduce the above copyright notice, this list of conditions and the following disclaimer in the documentation and/or other materials provided with the distribution.

THIS DOCUMENTATION IS PROVIDED BY TIANOCORE PROJECT "AS IS" AND ANY EXPRESS OR IMPLIED WARRANTIES, INCLUDING, BUT NOT LIMITED TO, THE IMPLIED WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE ARE DISCLAIMED. IN NO EVENT SHALL TIANOCORE PROJECT BE LIABLE FOR ANY DIRECT, INDIRECT, INCIDENTAL, SPECIAL, EXEMPLARY, OR CONSEQUENTIAL DAMAGES (INCLUDING, BUT NOT LIMITED TO, PROCUREMENT OF SUBSTITUTE GOODS OR SERVICES; LOSS OF USE, DATA, OR PROFITS; OR BUSINESS INTERRUPTION) HOWEVER CAUSED AND ON ANY THEORY OF LIABILITY, WHETHER IN CONTRACT, STRICT LIABILITY, OR TORT (INCLUDING NEGLIGENCE OR OTHERWISE) ARISING IN ANY WAY OUT OF THE USE OF THIS DOCUMENTATION, EVEN IF ADVISED OF THE POSSIBILITY OF SUCH DAMAGE.

Copyright (c) 2021-2022, Intel Corporation. All rights reserved.