


Apache Labs LLC

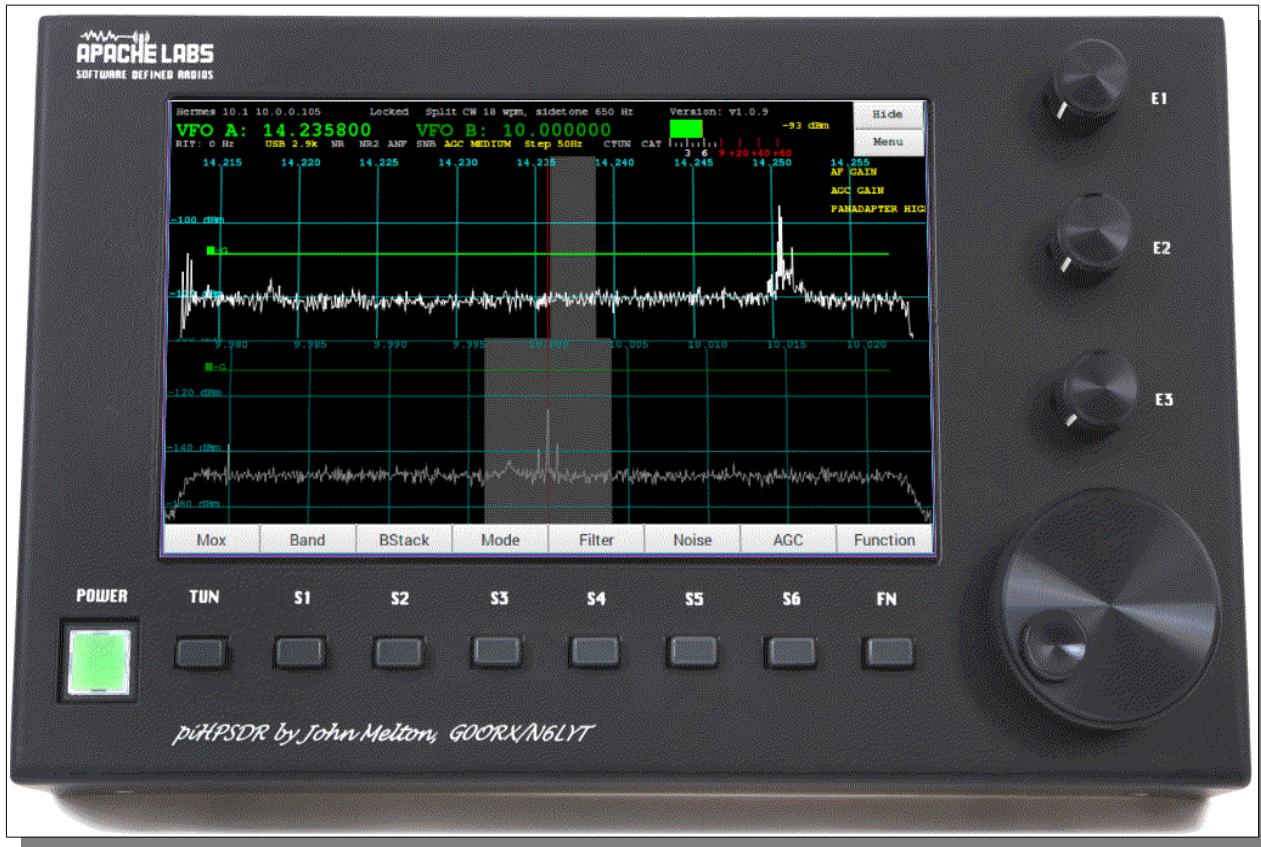

pihpsdr showing two receivers (40M LSB + WWV) + waterfalls + on screen sliders + menu toolbar

**TWO
RECEIVER
Version**

piHPSDR Controller Users Guide

by

John Melton GØORX/N6LYT

This document contains references to the Apache Labs Transceiver products
<http://www.apache-labs.com>

In cooperation with VK6PH, NRØV, W5WC, K5SO
 and the OpenHPSDR Hardware and Software Projects
<http://openhpsdr.org>

all images and manufacturer data is copied here with permission of the owner

Contents - piHPSDR Controller Users Guide

1. Introduction.....	5
Introduction by John Melton GØORX/N6LYT.....	5
2. Controller connection requirements.....	6
Network LAN Connection.....	6
Controller Hardware requirements.....	6
Controller software requirements:.....	7
3. Front panel controls.....	8
Default assignments of switches and rotary encoders.....	8
Power ON/OFF – switches external 12vdc 2A power to the Controller.....	8
TUN – MOX/TUNE.....	8
S1 – Band.....	8
S2 – Band Stack.....	8
S3 – Mode.....	8
S4 – Filter.....	8
S5 – Noise Blanker.....	8
S6 – AGC.....	8
FN – Function switch to toggle 8 on screen touch buttons such as TUNE or MOX.....	8
E1 – push encoder knob for selection from Encoder Assignment menu of 11 functions.....	8
E2 – push encoder knob for selection from Encoder Assignment menu of 11 functions.....	8
E3 – push encoder knob for selection from Encoder Assignment menu of 11 functions.....	8
E4 – VFO – main tuning knob.....	8
4. Front Panel Display.....	9
5. Side panel connections.....	10
6. Quick Start Instructions.....	11
Hardware Setup.....	11
Software Setup.....	11
7. Discovery Menu.....	12
Discover Ethernet Connections to RPi.....	12
Pihpsdr program START button.....	13
8. Main Menu.....	14
Menu → Exit piHPSDR.....	15
Menu → Radio.....	16
Menu → Rx.....	17
Menu → Sample Rate for new protocol.....	18
Menu → TX.....	19
Menu → PA Gain by Band.....	20
Menu → CW.....	21
Weight – sets the dot/dash weighting.....	21
Menu → ANT.....	22
Menu → DSP.....	23
Menu → OC Open Collector Aux I/O connectors.....	24
Menu → Display.....	25

Menu → Display (continued).....	26
Menu → XVTR.....	27
Menu → Equalizers.....	28
Menu → Step.....	29
Menu → Meter.....	30
Menu → VOX.....	31
9. On-Screen Controls and toolbar Buttons.....	32
Touch selection of VFO-A (Rx0).....	32
Touch selection of VFO-B (Rx1).....	32
Touch Direct Frequency Entry.....	33
Toolbar – Function button.....	34
Four Toolbar menus – select with Function button or front panel switch.....	34
Toolbar – MOX.....	35
Toolbar – Band selection.....	35
Toolbar - Bandstack.....	36
Toolbar – Mode.....	37
Toolbar – Filter.....	37
Toolbar – NOISE.....	38
Toolbar – AGC.....	38
Toolbar – Function button.....	39
Toolbar VFO Lock.....	40
.....	40
Toolbar CTUN – Click Tuning.....	41
.....	41
Toolbar A>B A<B A<>B.....	42
Toolbar SPLIT.....	43
Toolbar FREQ.....	44
Toolbar MEM.....	45
Toolbox VOX.....	46
Toolbar RIT.....	47
RIT – Receiver Incremental Tuning.....	47
Tapping on the RIT+ (plus) or RIT- (minus) button will enable RIT.....	47
AF Gain Slider.....	49
MIC Gain Slider.....	49
PA Drive Slider.....	50
Tune Drive Slider.....	50
AGC Gain Slider.....	51
Receive Attenuation Slider.....	51
Main screen HIDE.....	52
Menu or Toolbar → Meter.....	53
10. Tuning.....	54
VFO Encoder.....	54
Touch Screen.....	54
Mouse.....	54
11. TUNE/SWR/FWD Power.....	54
TUNE/SWR/FWD power.....	54

12. Appendix.....	55
Encoders and Switches.....	55
5Switch or Encoder.....	55
Power ON/OFF.....	55
TUN – TUNE button.....	55
MOX – MOX button.....	55
S1 – Band.....	55
S2 – Mode.....	55
S3 – Filter.....	55
S4 – Noise.....	55
S5 – AGC.....	55
FN – Function.....	55
22.....	55
E1 --.....	55
E2 –.....	55
E3 –.....	55
E4 – VFO Main tuning knob.....	55
GPIO pin Assignments (RaspberryPi).....	57
13. Reference materials.....	57
GOORX Friedrichshaven pdf and video.....	57
14. Steve Wilson KA6S special addition for Fldigi.....	58
Using PiHPSDR with other applications:.....	58
Mapping a Serial Port to TCP/IP port in Linux.....	58
Example: Set up GRIG to talk to PiHPSDR.....	59
Example: Connect FLDIGI to PiHPSDR.....	59
Also – check the PTT via CAT button in the lower left corner.....	60
Now Choose Config/Setup/TCPIP.....	61
Setting up rigctld.....	62
Multi-Client Support.....	62
Running applications with the latest version of Hamlib.....	64
KA6S Summary.....	65
15. Supported CAT Commands.....	66
16. Apache Support.....	71
Apache Labs International Support.....	71
Apache Yahoo Support Group.....	71
OpenHPSDR Group.....	71
17. Apache Service and Repair.....	71
Early prototypes by John Melton GOORX (circa: 2015).....	72

1. Introduction

Introduction by John Melton GØORX/N6LYT

Thu Aug 5, 2016 12:52 am (PDT) .

Posted by: ["John Melton" g0orx](#)

I think it is time to answer some of the questions about the controller.

Some background ...

I presented a paper at DCC last year on how to build a CAT controller using an Arduino and some buttons and encoders, even one with an LCD screen showing the mode, frequency and an S meter. The idea of this was to try to get people building them.

When I returned I started looking at what a Raspberry Pi (model 2 at the time) could do as a standalone controller. I had already ported WDSP to Linux so had a good starting point. Very soon after I received an email from LA2NI, Kjell Karlsen asking if my Android code would run on the Raspberry Pi as he wanted to try to build a standalone system with a touch screen. I told him about my early development work on the Raspberry Pi and that started a project that is still on going today.

The idea was not to build an all singing/dancing copy of PowerSDR but to build something that could be used with a small portable system. Kjell has since gone on to build a very nice system using a Hermes and Apollo all built into a small case with the Raspberry Pi (now a model 3).

Abhi (Apache Labs) got interested in the project and wanted to build a controller initially without the built in Hermes/Apollo. Hopefully we will see a complete portable system sometime from Apache Labs.

So, that is what we have today. The software is still in development and new features are being added as well as bugs being fixed. It is designed to use with the radio, not as a remote console. The RPi does not have any audio input but does have audio output. It is currently possible to output the audio locally on the RPi but to connect a microphone you will need to plug a USB audio card into the device. I will be adding support for connecting a microphone to the this as well.

The RPi will work over WiFi using the built in controller. The signal quality will determine what sample rate it will run at. The RPi does not have GigE so cannot connect directly to a radio running the new Ethernet protocol, but will work through a switch or over WiFi. However, it has been tested using a USB to GigE dongle and that does work. Just remember this will not run at the higher sample rates.

I have looked at several other more powerful single board computers, but always I have run into problems with their implementation of the GPIO, which is used to interface the buttons and encoders.

We are using the Raspberry Pi official 7 inch touch screen. This has a resolution of 800x480 so we are struggling with screen real estate.

There is work in progress to also use the controller remotely across the Internet. This will require a server running at the radio that is connected to by a thin client running on the controller. This will stream the audio and spectrum information with all the DSP work being done on the server. It is not based on my gbpsdr3 project but of course that was a good starting point for the design.

Finally, all the software is open source. It will run on a Raspberry Pi without the buttons/encoders. It will also run on other Linux systems and I have even built it and had it running on Mac OS X. I have not tried to build it on Windows as I do not have a Windows system.


-- John g0orx/n6lyt

 **Note:** This Note: this document assumes familiarity with the Apache Transceiver and standard software such as PowerSDR or Thetis. The Apache Transceiver Users Guides are located here: <https://apache-labs.com/al-downloads/1001/ANAN-USER-GUIDES.html>


2. Controller connection requirements

Network LAN Connection

Auto-negotiation of a the RaspberryPi 100BT Ethernet connection allows operation of the Controller at the 48000, 96000, and 192Ksps sample rates.

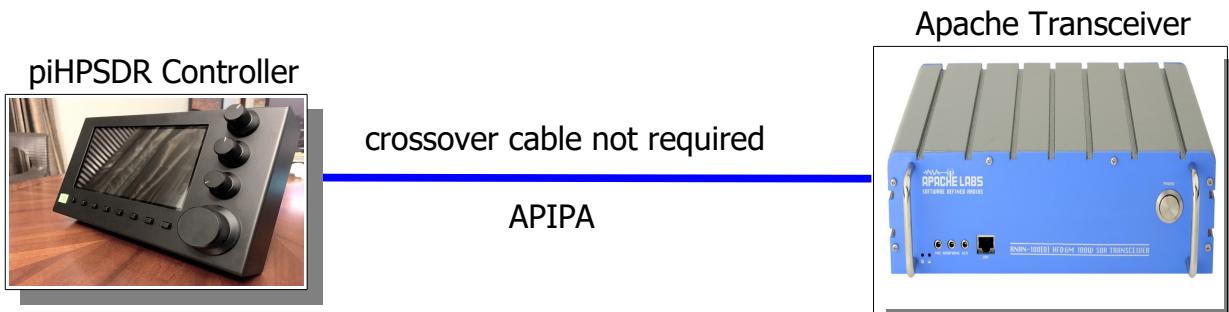

The new piHPSDR-Controller can be connected directly to your ANAN Transceiver and each unit will make use of the APIPA assignment for an IP address.

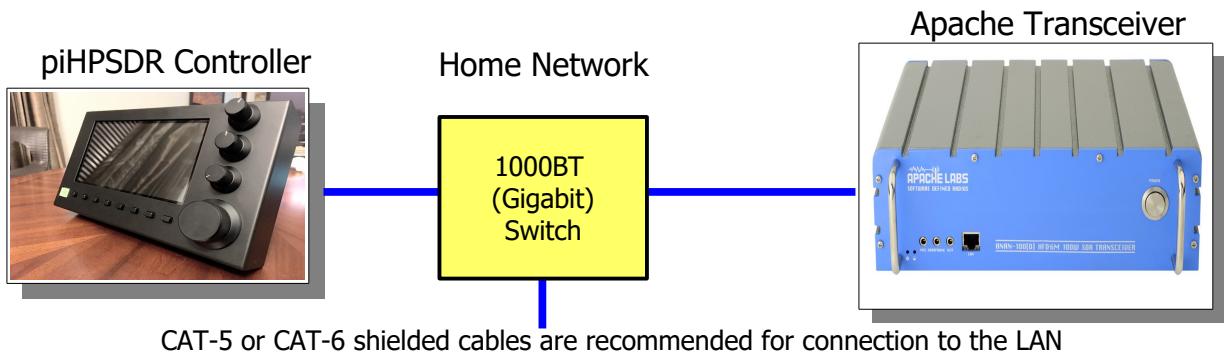

Controller Hardware requirements

- 13.8vdc 2.5A (minimum 12vdc 2A) Power connection
- 100BT LAN connection to your Apache Transceiver

Note: when running the dual receiver version of pihpsdr, you may need to place passive heatsinks on the CPU and LAN chip on the RaspberryPi-3b. Be mindful of the temperature alarm shown on the right side of the display screen.

Heatsinks like these:

- <https://www.modmypi.com/blog/how-to-install-heat-sinks-on-the-raspberry-pi>
- https://www.element14.com/community/community/raspberry-pi/raspberrypi_projects/blog/2016/03/03/raspberry-pi-3-cooling-heat-sink-ideas
- https://www.amazon.com/Addicore-Raspberry-Heatsink-Aluminum-Sinks/dp/B00HPQGTI4/ref=pd_lpo_147_bs_t_2?_encoding=UTF8&psc=1&refRID=6D4ND9MW55Y93DD05V26

Controller software requirements:


- Pihsdr Controller Operating System and application program are factory installed on an SDHC card.
- If you have purchased the piHPSDR-Controller KIT, you will need to create and install an SDHC card with the RaspberryPi operating system and pihsdr application.
- Instructions for Installation of Rpi software are detailed in the **Install pdf document** that is available at:
<https://github.com/g0orx/pihsdr/raw/master/release/documentation/pihsdr-install.pdf>
- If you wish to get the latest version of pihsdr source code, executable binaries, and documentation the instructions are available at:
<https://github.com/g0orx/pihsdr/raw/master/release/documentation/pihsdr-build.pdf>

Note: it is a good idea to make a backup of your Operating System and piHPSDR software. Use the RaspberryPi Menu → Accessories → SD Card Copier utility. Use a new SDHC card of the same capacity as the original.

This is easily done using a USB – SDHC card reader/writer dongle plugged into one of the RPi USB ports on the left side of the piHPSDR Controller.

A pdf document reader is included in the standard RaspberryPi operating system distribution.

3. Front panel controls

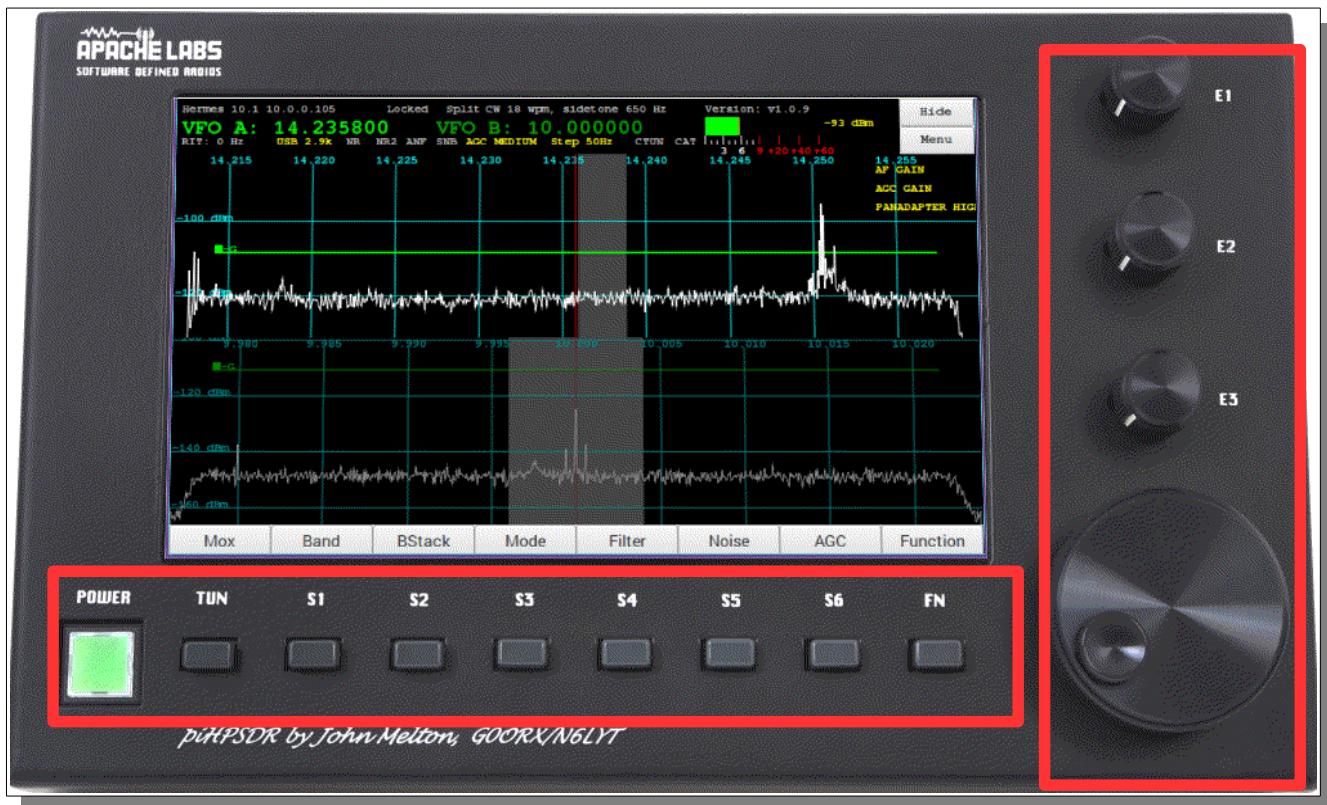

Switches

Encoders


Default assignments of switches and rotary encoders

- **Power ON/OFF** – switches external 12vdc 2A power to the Controller
- **TUN** – MOX/TUNE
- **S1** – Band
- **S2** – Band Stack
- **S3** – Mode
- **S4** – Filter
- **S5** – Noise Blanker
- **S6** – AGC
- **FN** – Function switch to toggle 8 on screen touch buttons such as TUNE or MOX
- **E1** – push encoder knob for selection from Encoder Assignment menu of 11 functions
- **E2** – push encoder knob for selection from Encoder Assignment menu of 11 functions
- **E3** – push encoder knob for selection from Encoder Assignment menu of 11 functions
- **E4** – VFO – main tuning knob

Note: Appendix page 56 has a table showing the Switch, Encoder, and Touch Screen activation details.


Note: if you are not using a touch sensitive display panel, you may wish to operate pihpsdr from your favorite Linux system. You can use either the RealVNC connection or connect a mouse/keyboard for easy access.

4. Front Panel Display

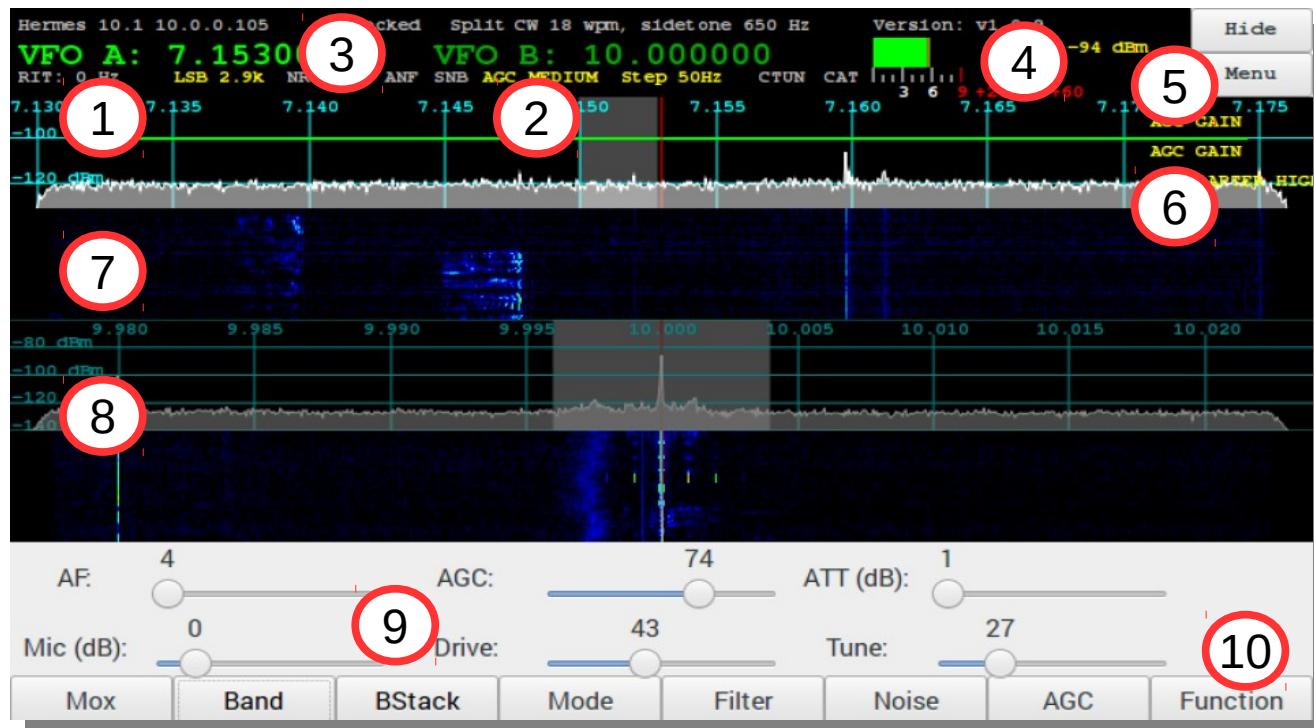

- 1 VFO-A Receiver Rx0
- 2 VFO-B Receiver Rx1
- 3 Status Lines above and below VFO frequency
- 4 Meter displays S-Meter and ALC displays
- 5 Main MENU on screen control
- 6 Panadapter display Rx0
- 7 Waterfall Rx0
- 8 Panadapter display Rx1
- 9 6 Slider controls
- 10 Function Menu activation

5. Side panel connections

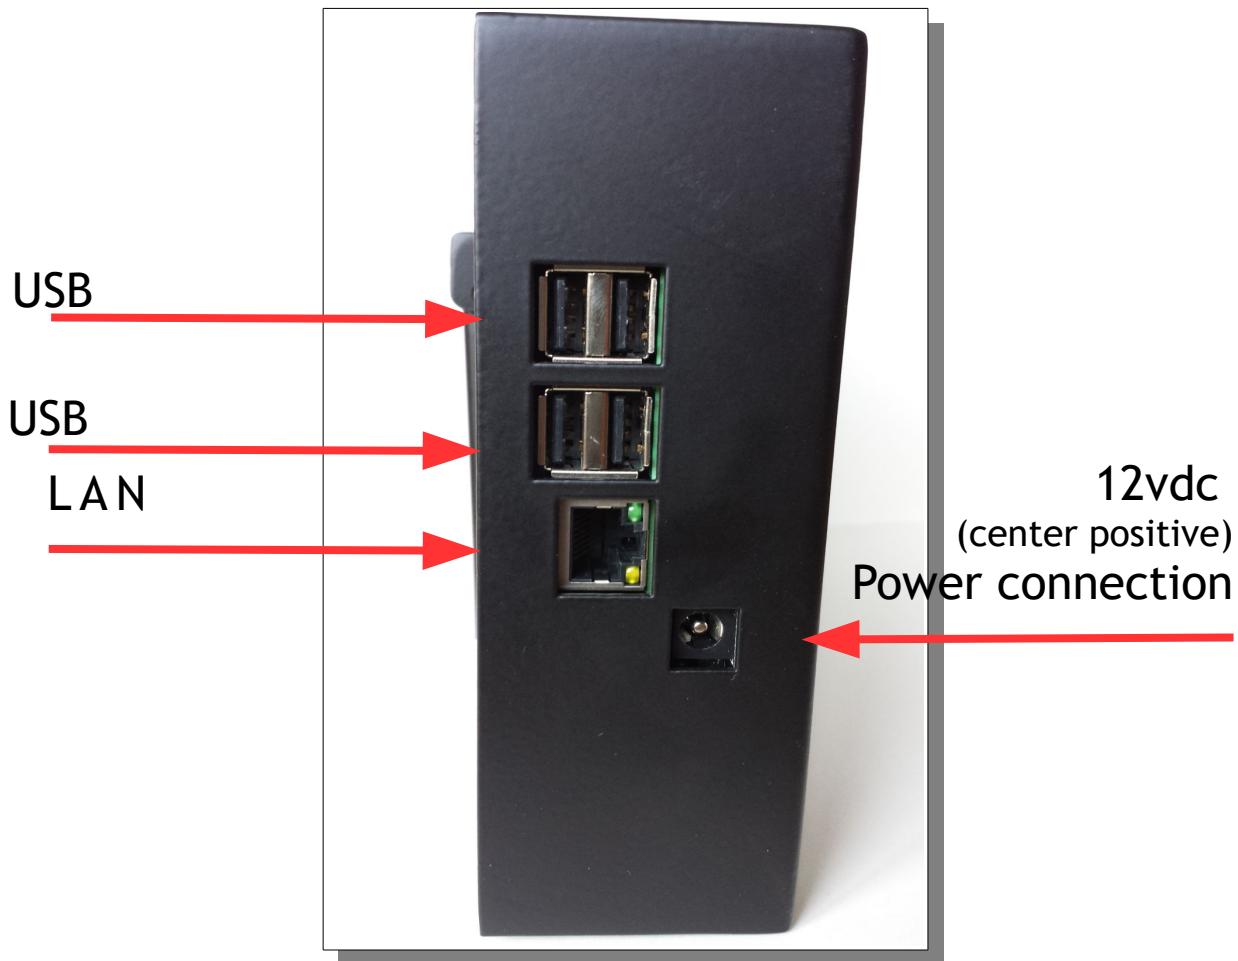

6. Quick Start Instructions

please refer to front and back panel illustrations

Hardware Setup

- ➊ Carefully unpack the piHPSDR Controller.
- ➋ Connect a **CAT 5/6 Ethernet cable** between the rear panel LAN jack with proper access to your Apache Transceiver, Gigabit switch, or suitable router. Please see Network LAN connection page 9.
- ➌ Connect the supplied piHPSDR Controller power cable to a **fused 12vdc** typical (13.8vdc) Amateur Radio station power supply.
- ➍ **Apache Transceiver connections to MIC, KEY, Headphones**

Software Setup

The piHPSDR Controller software is pre-formatted on the Operating System SDHC card inserted in the RaspberryPi.

- ➊ Alternative software configurations are not provided by Apache Labs.
- ➋ A person familiar with the Raspbian operating system may wish to modify or update the contents of the SDHC card using appropriate Linux tools. Please refer to page 10.

Note: pihpsdr is OpenSource. If you would like to compile the program on a Linux system, the source, binaries, and documentation are located at <https://github.com/g0orx/pihpsdr/tree/master/release/documentation>

7. Discovery Menu

Discover Ethernet Connections to RPi

- When first started, piHPSDR will try to discover all the HPSDR compatible radios on the network. It will look for devices running both the original (old) and the new Ethernet (new) protocol.
- If one or more Transceiver interfaces are found they will be identified by the device type,** the software version, the IP address and the MAC address of the device.



- If no devices are found you should check connectivity between the radio and the network that piHPSDR is connected to. Tapping on OK will try discovery again. Tapping on Cancel will exit piHPSDR back to the Raspberry Pi desktop.
- The Discover protocol will allow a device to see and respond even if they are not on the same subnet. If this is the case, the Start button will be disabled and the text replaced with **Subnet**. The most common cause of this problem is usually that the radio has not been able to get a DHCP address and has defaulted to the Self Assigned IP Address, or the device has a static IP address that is not on the same subnet as the piHPSDR.


Pihsdr program START button



- ➊ **Tapping on the Start button will start the radio – on the selected Ethernet interface.**
- ➋ In this example you see **both** the Rpi **Wireless** and **Ethernet** connections are active and were discovered properly.
- ➌ Depending on your particular WLAN and LAN setup, either will work well with pihsdr 10Mbps network requirement. **Both the Rpi and your Apache Transceiver must be on the same subnet.**
- ➍ Configuration of the [GPIO default connections](#) are shown on page **57**


8. Main Menu

Tapping the **Menu** button brings up the menu dialog.

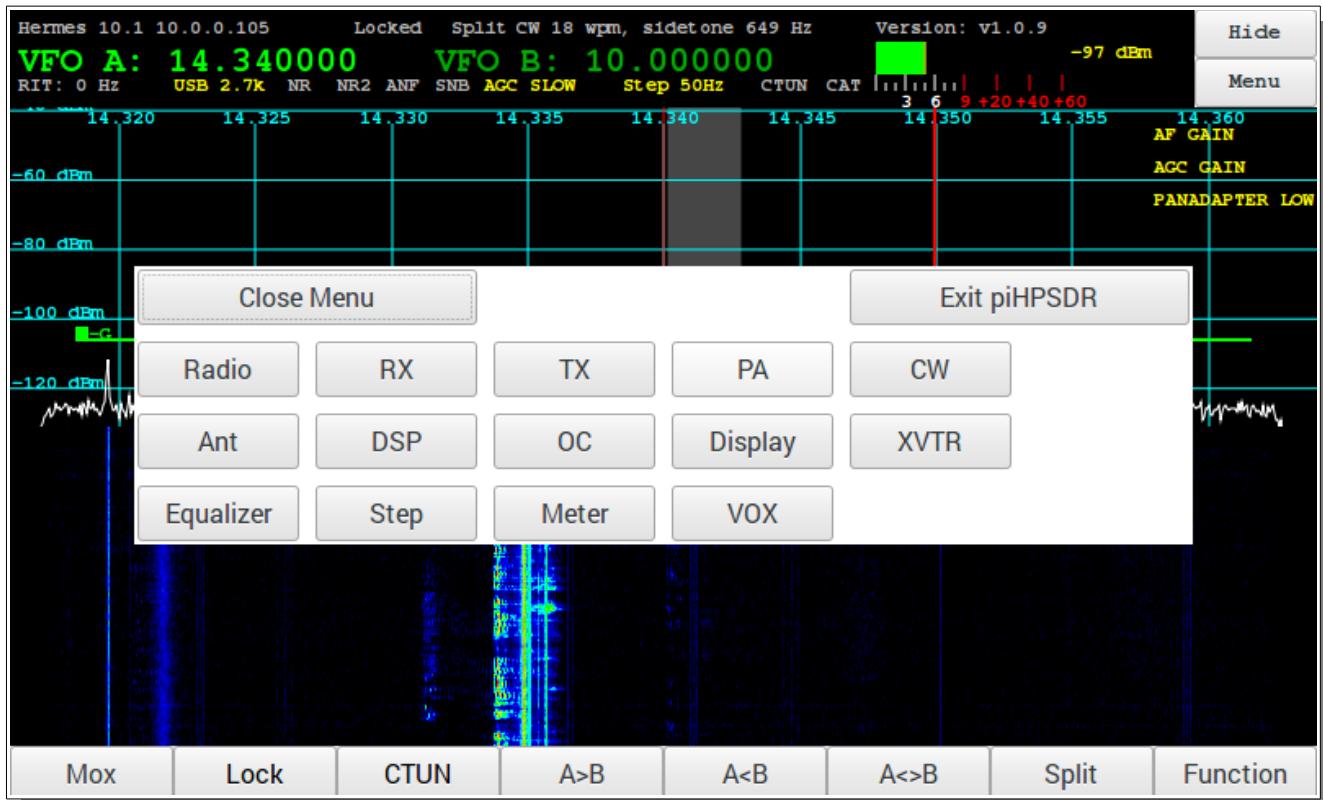

💡 You can close the menu by tapping on the Close Menu button or by tapping on the Menu button again.

Menu → Exit piHPSDR

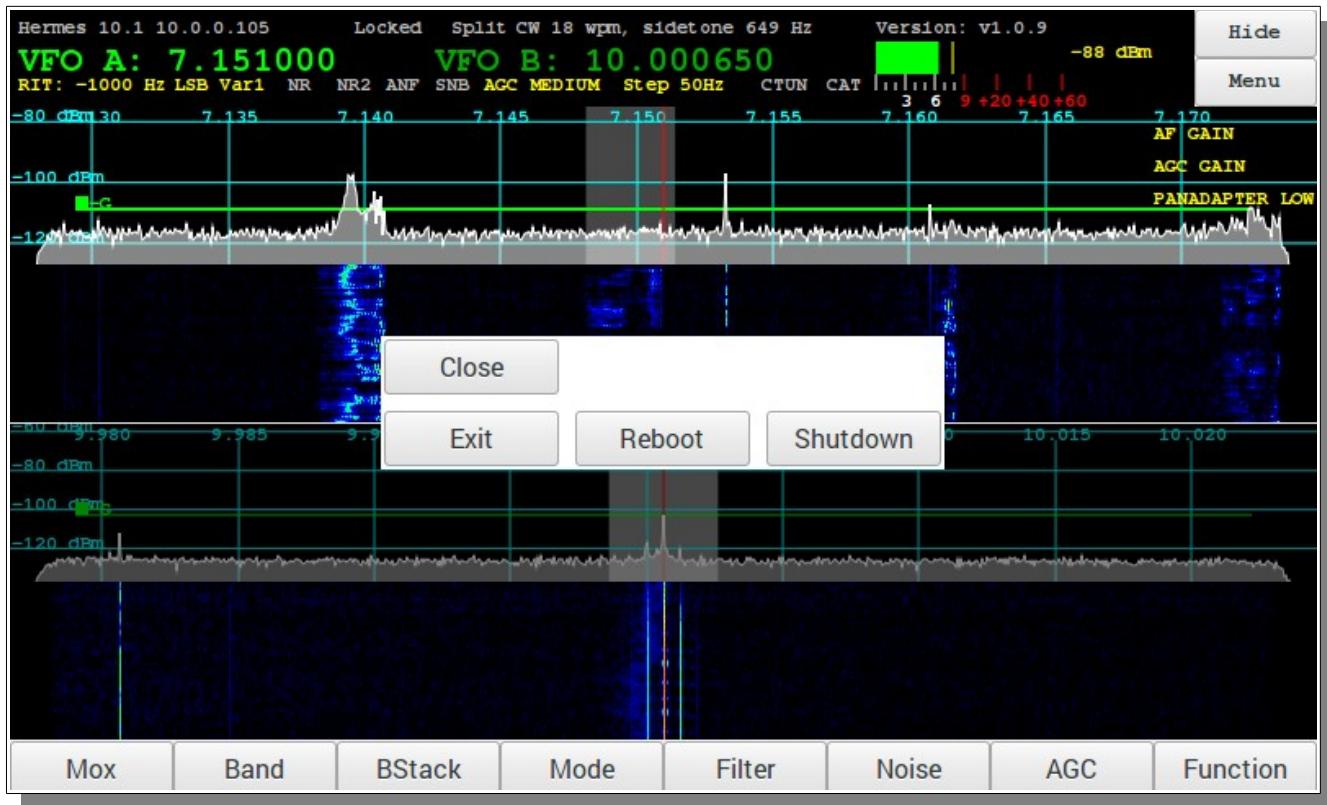

The Exit piHPSDR button will bring up a sub-dialog allowing you to end the piHPSDR application in a number of ways:

- ➊ **Close** – close this dialog box
- ➋ **Exit** – exit piHPSDR back to the Raspberry Pi Desktop
- ➌ **Reboot** – reboot the Raspberry Pi
- ➍ **Shutdown** – Shutdown the Raspberry Pi - (note the Controller power button remains lighted)

You can also tap the Menu button again to close the Exit Menu and bring up the Menu selection.

Menu → Radio




- ➊ **Receivers** - changing pihsdr to 1 or 2 receivers!
- ➋ **RIT Step size** – This value is the increment or step size for the RIT control and mouse wheel tuning.

Menu → Rx

(individual receiver settings)

When you touch or select either PANADAPTER you change to that VFO and the RX menu changes from Rx0 to Rx1.

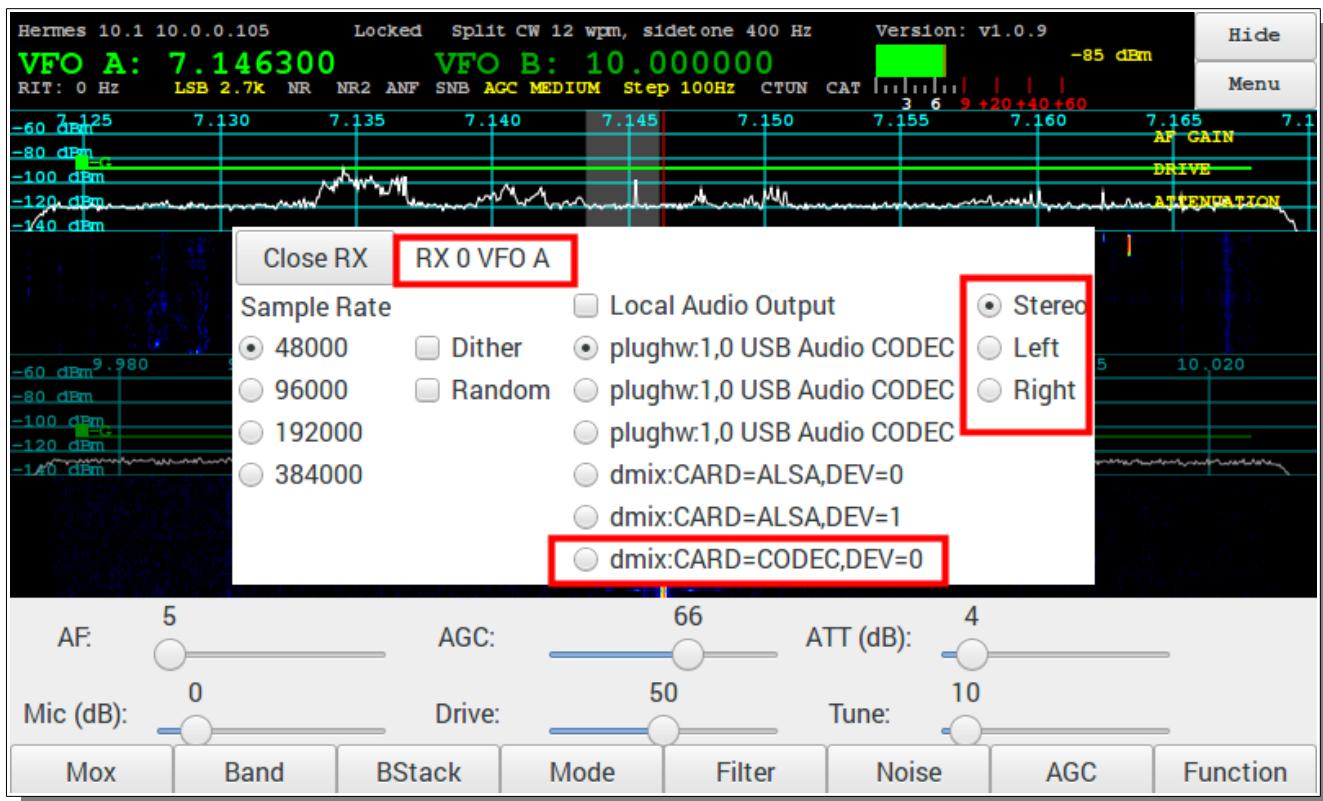

- Sample Rate - The Sample Rate selection selects the width of the Panadapter displayed on the pihpsdr Controller screen. This is the rate which **pihpsdr** uses to decode a portion of the 60Mhz spectrum data from the Apache Transceiver.

Note: Original Protocol sample rate for both receivers shown in the Menu → Radio


"New Ethernet Protocol" in beta test shows two receivers with individual sample rates.

If your Apache Transceiver has been updated to the 2017 firmware, you can change the sample rate of each receiver independently. This is a feature of the "New Ethernet Protocol" firmware. Independent Receiver sample rates have been implemented in the February 2017 pihpsdr software release.

Note: 768k and 1.536K are not available on Rpi.

- Dither - Dither is a built-in electronic feature of the Linear Technologies LTC-2208 Analog to Digital Conv'erter chip inside each **Apache** Software Defined Radio Transceiver.
- Random - Ramdom is a built-in electronic feature of the Linear Technologies LTC-2208 Analog to Digital Converter chip inside each **Apache** Software Defined Radio Transceiver.
- Local Audio Output – This column identifies all the audio output connections that pihpsdr recognizes when it starts. The entries with "bcm2835 ALSA" are associated with the audio chip on the Rpi. Entries with "USB" indicate external audio devices that you have plugged into the Rpi. Entries with "dmix" have been added in the February pihpsdr in order to facilitate TEXT FROM JOHN


Menu → Sample Rate for new protocol

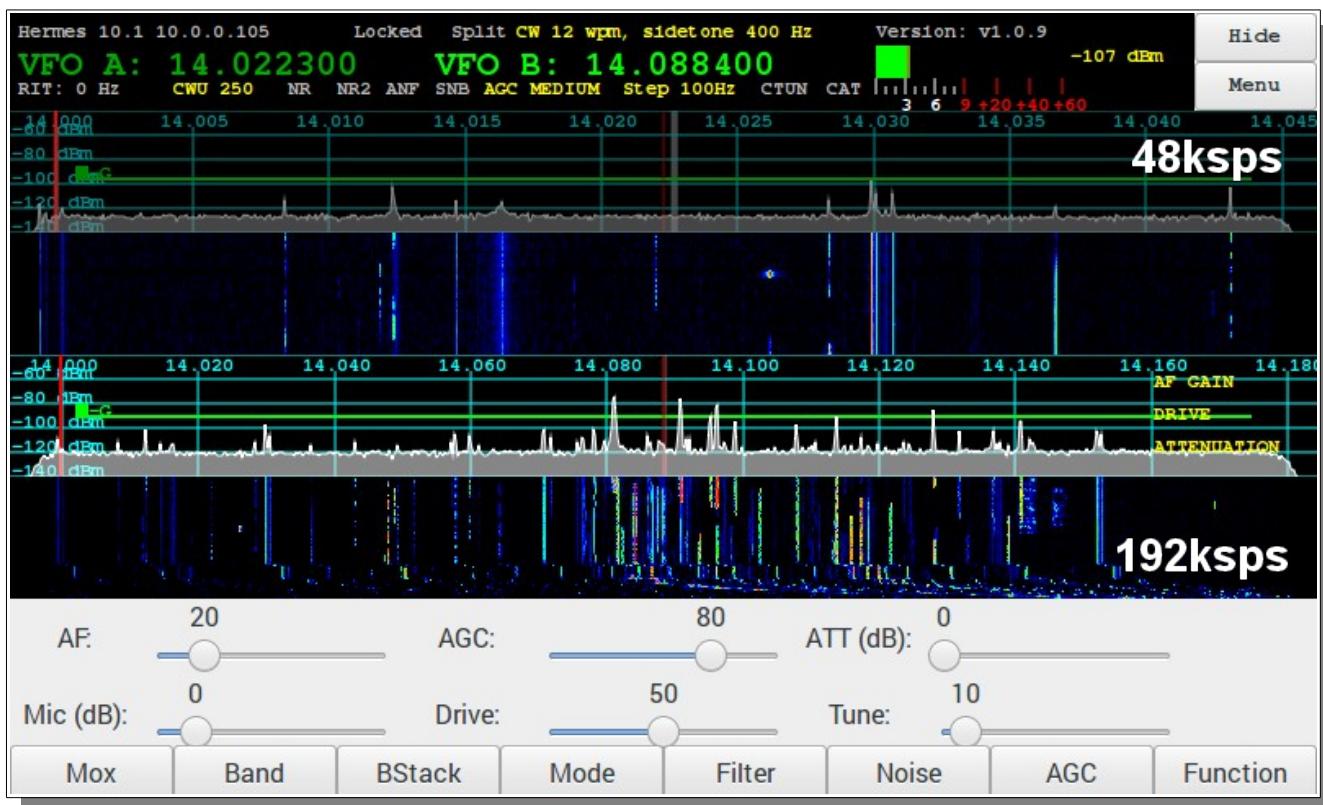

Note: Original Protocol sample rate for both receivers shown in the Menu → Radio


"New Ethernet Protocol" in beta test shows two receivers with individual sample rates.

Menu → TX

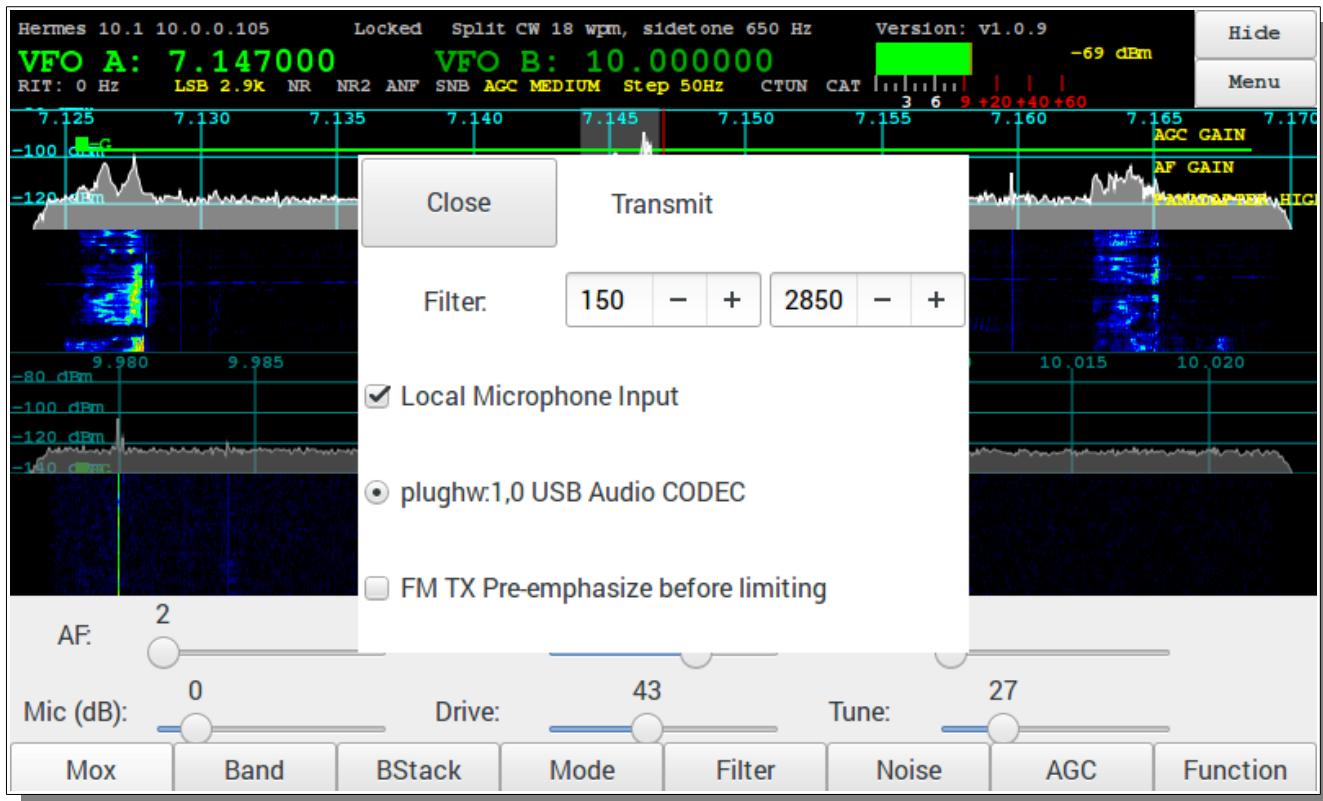


- ➊ **Local Microphone Input** – Local Audio refers to the front panel MIC connection on an Apache Transceiver.
- ➋ Filter indicates the upper and lower frequencies for the Transmit bandwidth.
- ➌ Audio CODEC shown here is an external USB Audio **INPUT** device connected to the Rpi.
- ➍ FM TX Pre-Emphasis may be required for normal voice quality communications by the FM Server you are connecting to.

Menu → PA Gain by Band

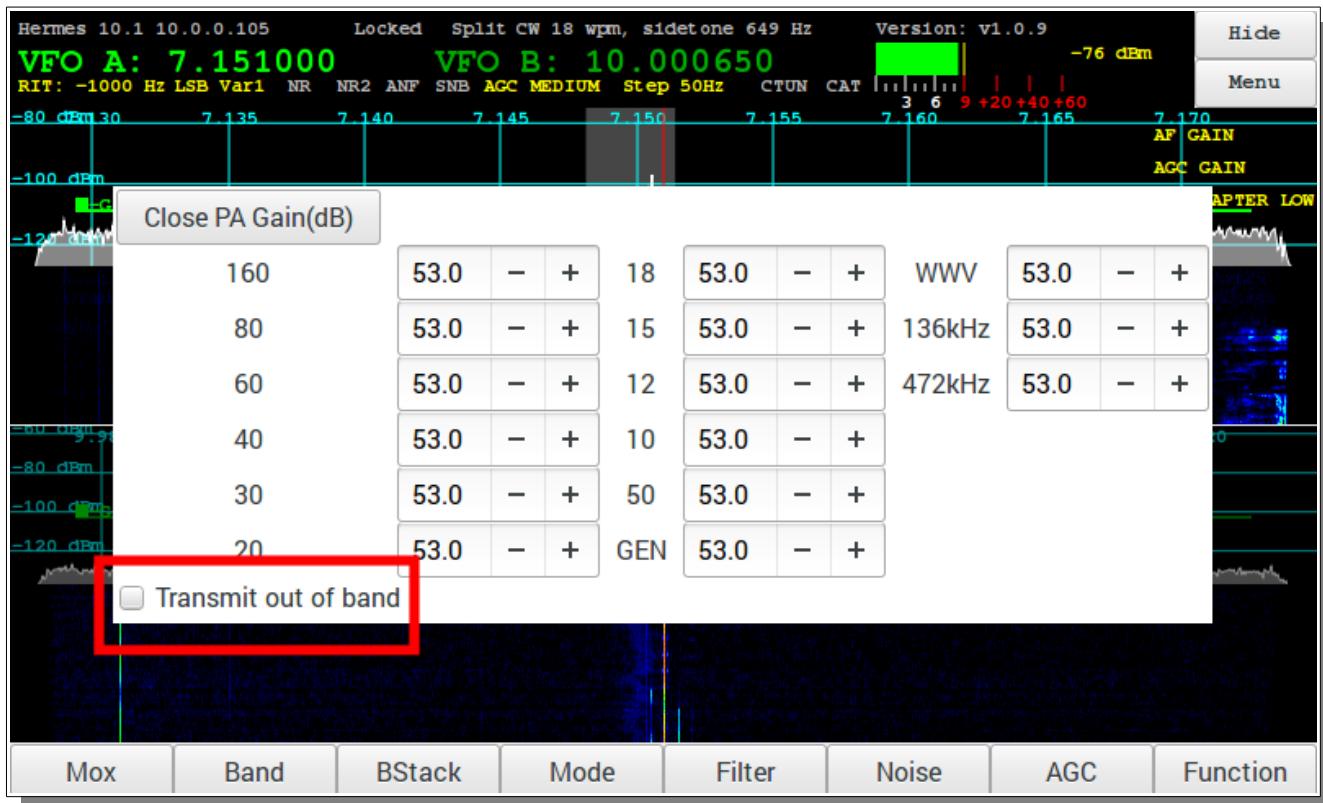

- Sets the PA gain for each band by adjusting the drive level. Note that as the setting are **increased** the drive level is **decreased**. This adjustment is set for minimum drive to protect the PA Final Amplifier.
- Note: Transmit out of band** – enables transmit outside of ham bands. Default disabled.

Menu → CW

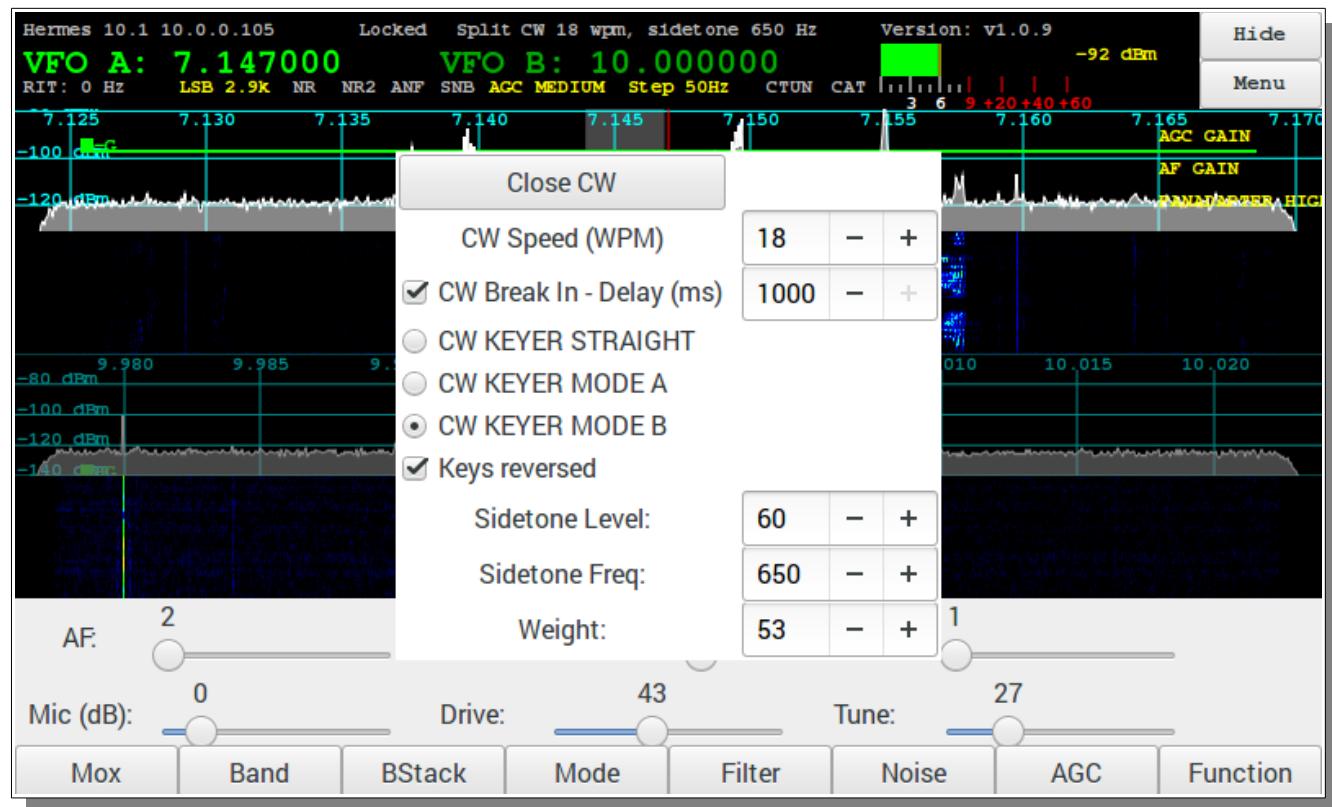


Controls the firmware CW Keyer.


- **CW Speed (WPM)** – sets speed of dot/dash generator when in Mode A or Mode B.
- **CW Break In** – when enabled sets the delay time in milliseconds to switching to receive.
- **CW KEYER STRAIGHT** – selects the key connected will be a straight key.
- **CW KEYER MODE A** – selects a paddle key running in Mode A
- **CW KEYER MODE B** – selects a paddle key running in Mode B
- **Keys reversed** – when enabled the dot/dash paddles are reversed.
- **Sidetone Level** – sets the audio level of the sidetone.
- **Sidetone Freq** – set the frequency of the sidetone.
- **Weight** – sets the dot/dash weighting.

Menu → ANT

The Ant menu selects which antenna is used for receive and transmit on each band.

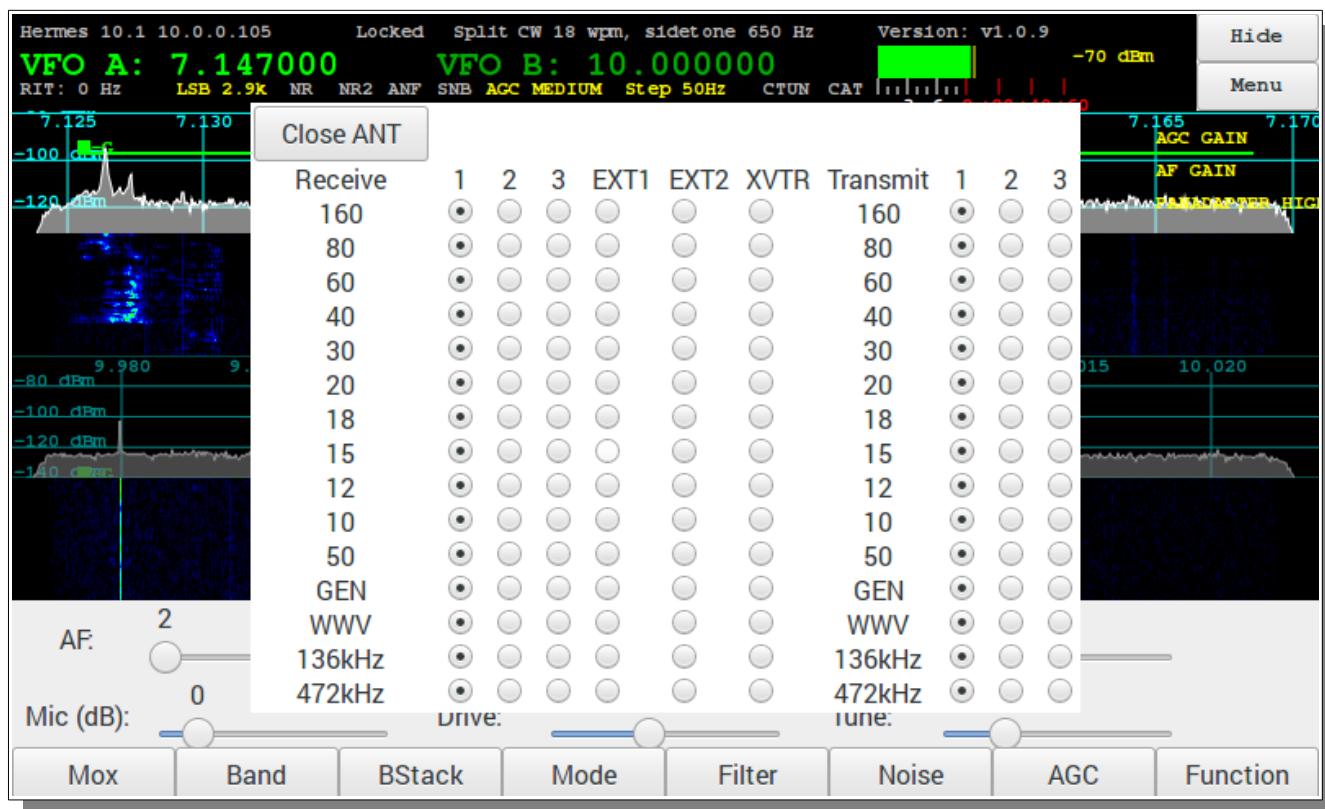


Menu → DSP

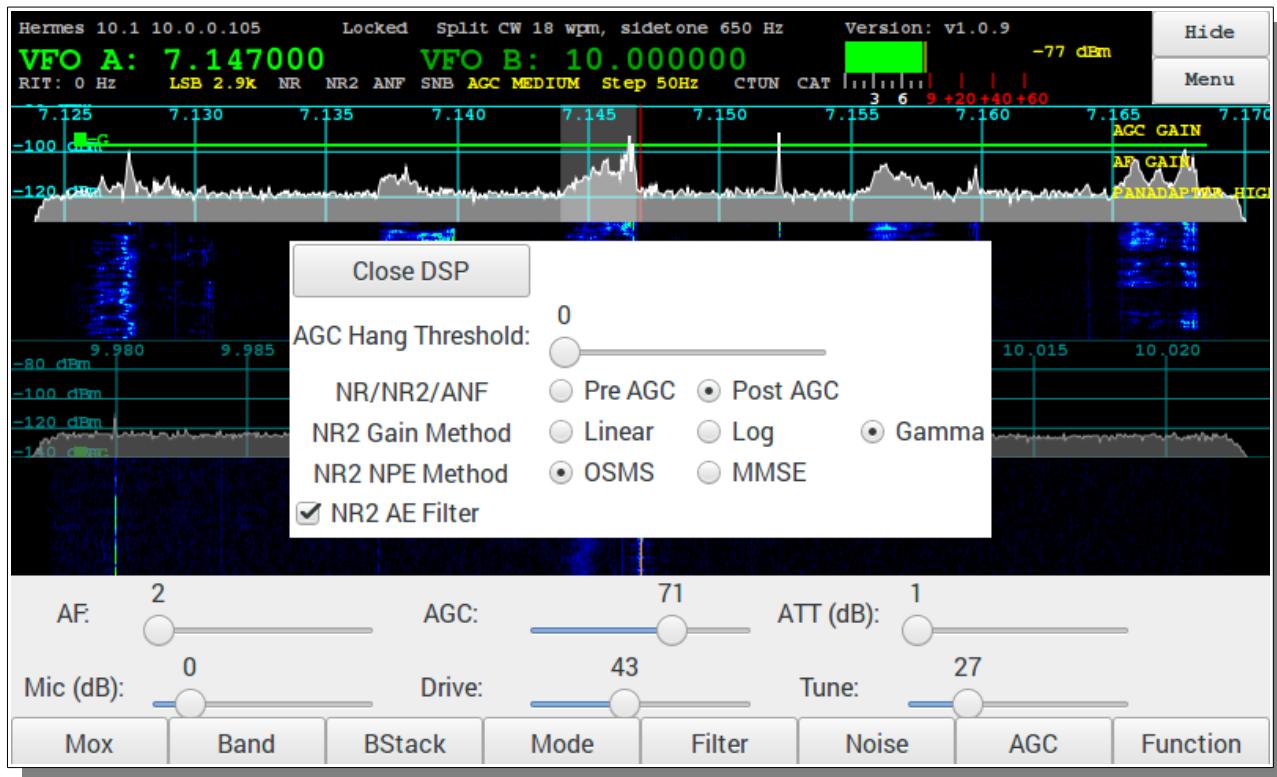

The DSP has options for the DSP functions.

- **AGC Hang Threshold** – sets the HangThreshold for the AGC.
- **NR/NR2/ANF** – selects where in the DSP processing the noise reduction functions are performed/ The default id Pre AGC processing.
 - Pre AGC – perform noise reduction pre AGC
 - Post AGC – perform noise reduction post AGC
- **NR2 Gain Method** – selects the method used for the gain processing. The default is Gamma.
 - Linear - Gaussian speech distribution, linear amplitude scale
 - Log - Gaussian speech distribution, log amplitude scale
 - Gamma - Gamma speech distribution
- **NR2 NPE Method** – selects the Noise-Power-Estimation method. The default is OSMS.
 - OSMS - Optimal Smoothing Minimum Statistics
 - MMSE - Minimum Mean -Square Error
- **NR2 AE Filter** - Enable Artifact elimination. Default enabled.

Menu → OC Open Collector Aux I/O connectors

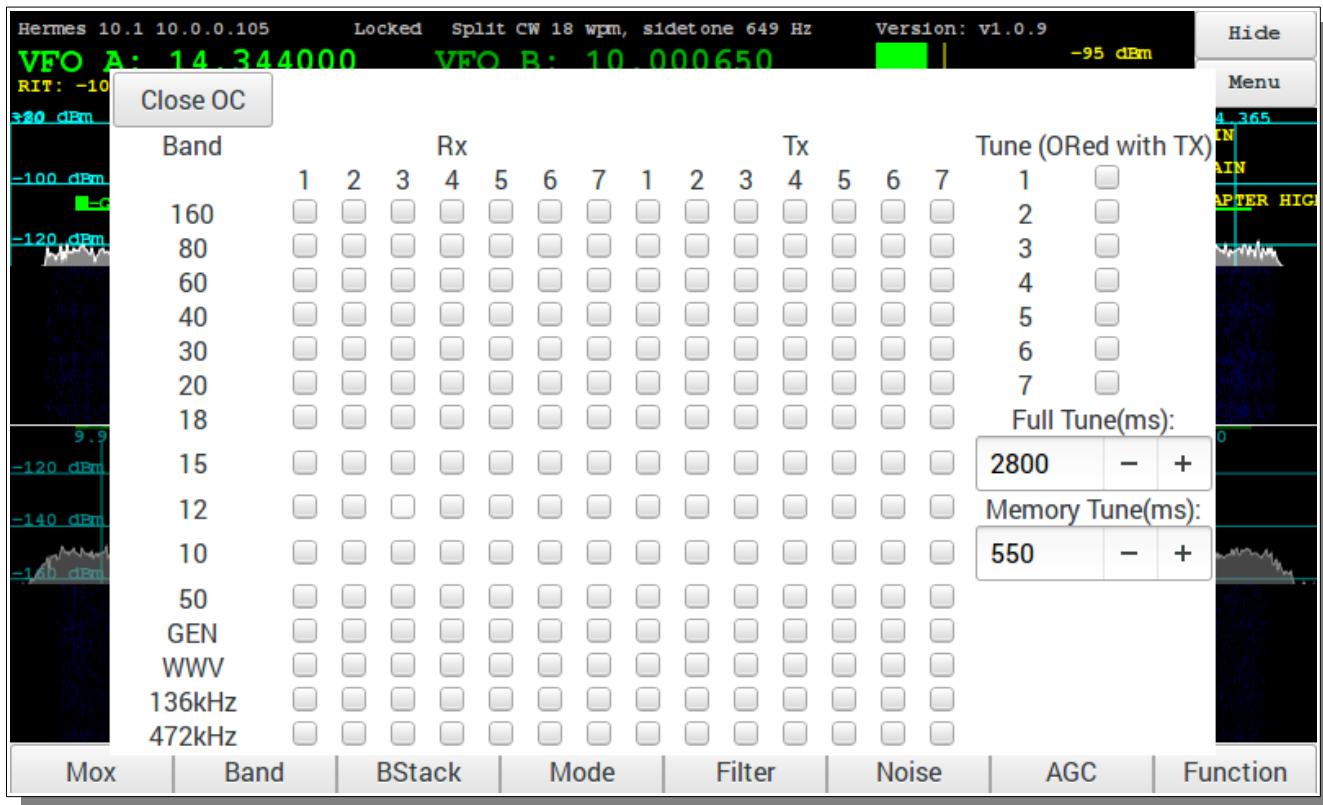


Configure the Open Collector outputs for each band. These can be used to control an external bandpass or antenna filter when not using the Apache Labs filters or the Alex filters. The default is none are enabled.

When an external ATU is used the Tune option can be used to signal to the ATU to start its tune function. The default is none are enabled.

- ➊ **Tune** – configure an OC to be turned on when Tx is enabled.
- ➋ **Full Tune milliseconds** – specifies the time the OC is enabled when the Tuning.
- ➌ **Memory Tune milliseconds** – keydown time for TUNE when using an external Automatic Antenna Tuner

Menu → Display

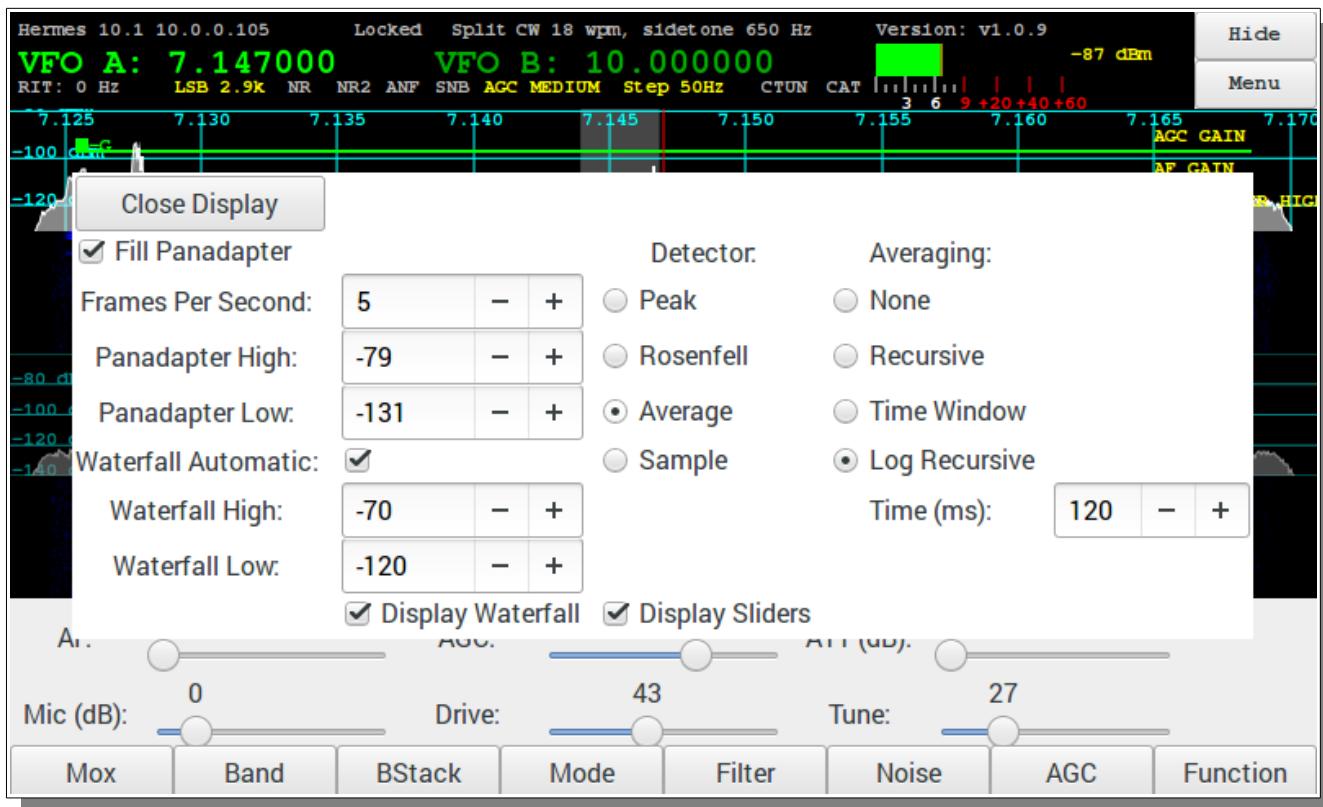

- **Fill Panadapter** – when enabled the panadapter graph will be filled. When not enabled it will be drawn as a line. Default enabled.

- **Frames Per Second** – Update rate of Panadapter and Waterfall

- **Panadapter High** - Maximum signal level displayed in Panadapter

Note: now included as a sub-menu selection for E1, E2, E3 Encoder function assignment

- **Panadapter Low** – Minimum signal level displayed in Panadapter

Note: now included as a sub-menu selection for E1, E2, E3 Encoder function assignment

- **Waterfall Automatic** – When enabled the Waterfall High and Waterfall Low are adjusted automatically.

- **Waterfall High** – Manual control to set the maximum signal used in the waterfall.

- **Waterfall Low** – Manual control to set the minimum signal used in the waterfall.

Menu → Display (continued)



- **Detector** – Selects Peak, Rosenfell, Average or Sample for the Panadapter display.
- **Averaging** – Selects the method for averaging the Panadapter display.
- **Display Panadapter** – when selected the Panadapter is displayed on the main screen.
- **Display Waterfall** – when selected the Waterfall display is displayed on the main screen.
- **Display Sliders** – when selected the slider controls are displayed on the main screen.

Menu → XVTR




Configure up to 8 transverters.

- **Title** – the name as it appears in the Band, Ant and OC menus.
- **Min Freq** – The minimum frequency in Hz.
- **Max Freq** – The maximum frequency in Hz.
- **LO Freq** – The Local Oscillator frequency in Hz.
- **Disable PA** – When checked the Transceiver power amplifier will be disabled on transmit.

Note that the frequency the radio is tuned to is the selected frequency minus the LO frequency. In the example above the 144MHz to 146MHz Transverter frequency will be tuned to 28MHz to 30MHz on the radio.

When one or more Transverters are configured they will appear in the band selection dialog and also in the ANT selection menu and the PA Gain menu.

Menu → Equalizers

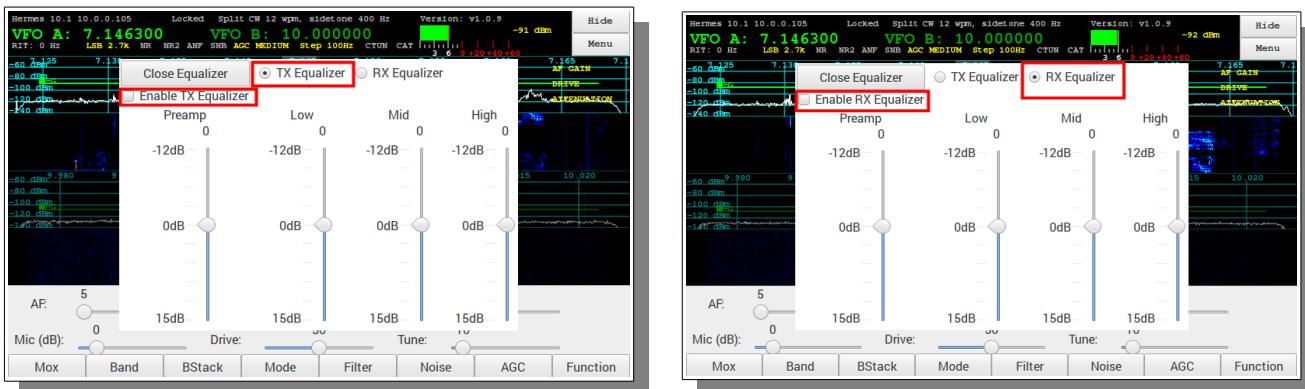


A 3 band graphic **equalizer** is implemented for **both Transmit and Receive**:

- **Preamp**
- **Low** – 0-400 Hz slider dB
- **Mid** – 400-1500 Hz slider dB
- **High** – 1500-6000 Hz slider dB

The radio buttons **TX Equalizer** and **RX Equalizer** select which values are displayed.


The equalizers can be enabled by the checkbox **Enable TX Equalizer** or **Enable Rx Equalizer**.

Menu → Step

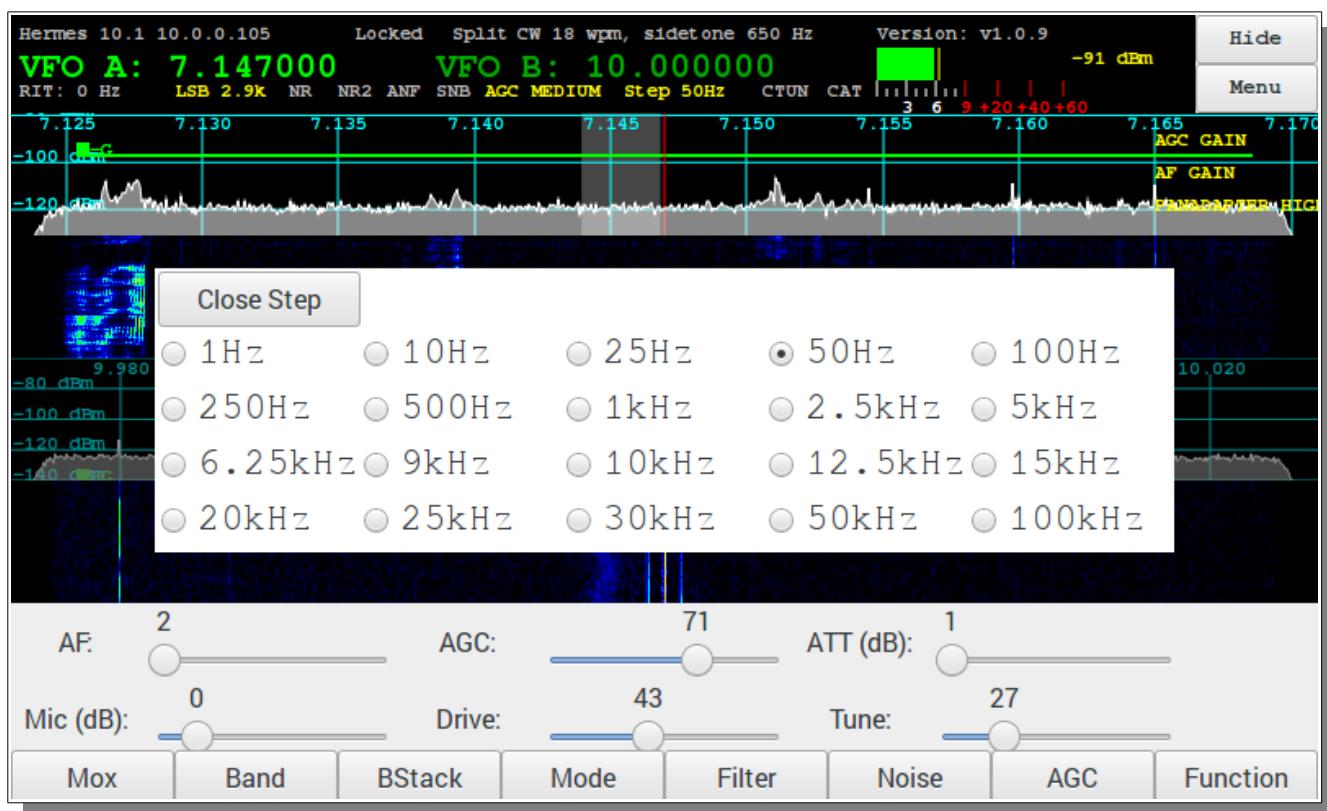


💡 **Step** sets the increment for VFO Tuning rate via Touch, E4 Encoder, and Mouse Wheel.

Menu → Meter

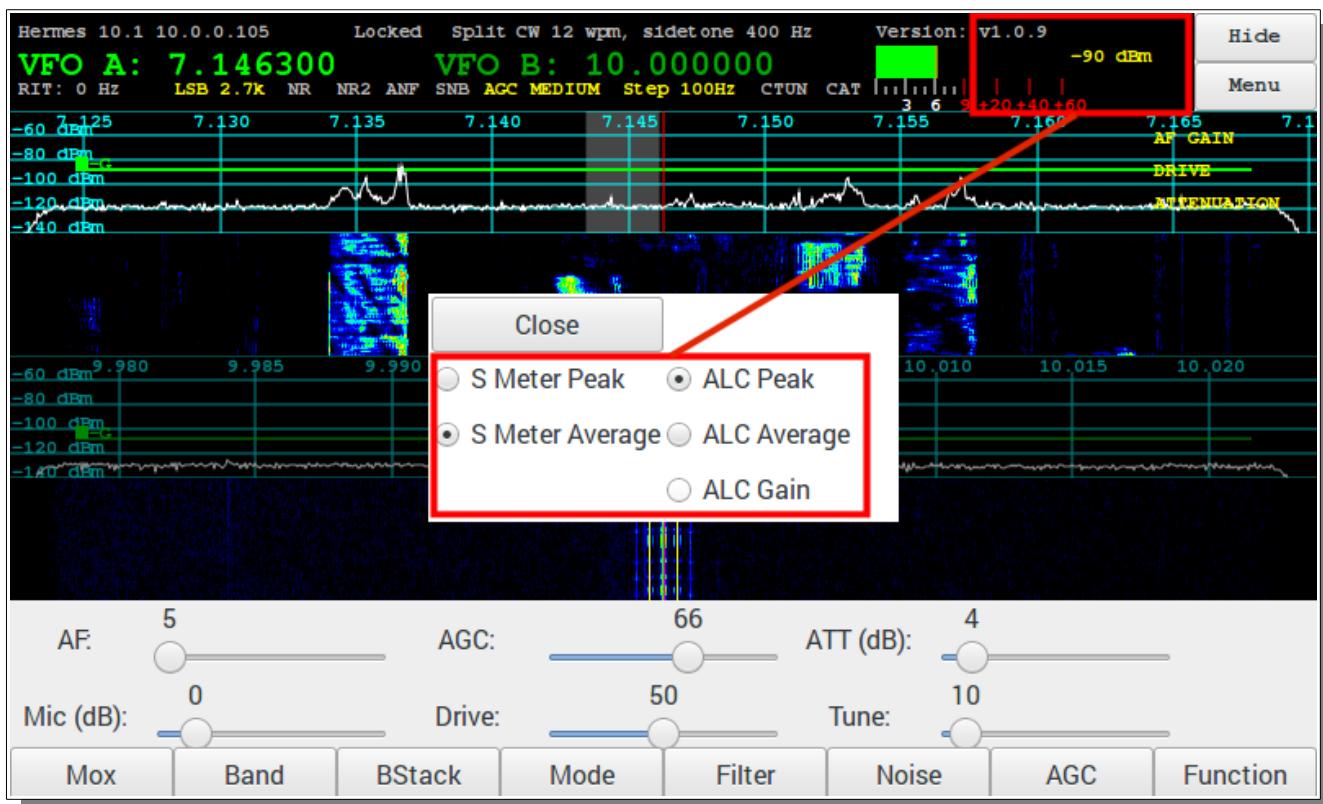

- S-Meter Peak and Average
- ALC Peak Average or GAIN
- Meter values appear in the upper right hand corner of the display.


Menu → VOX

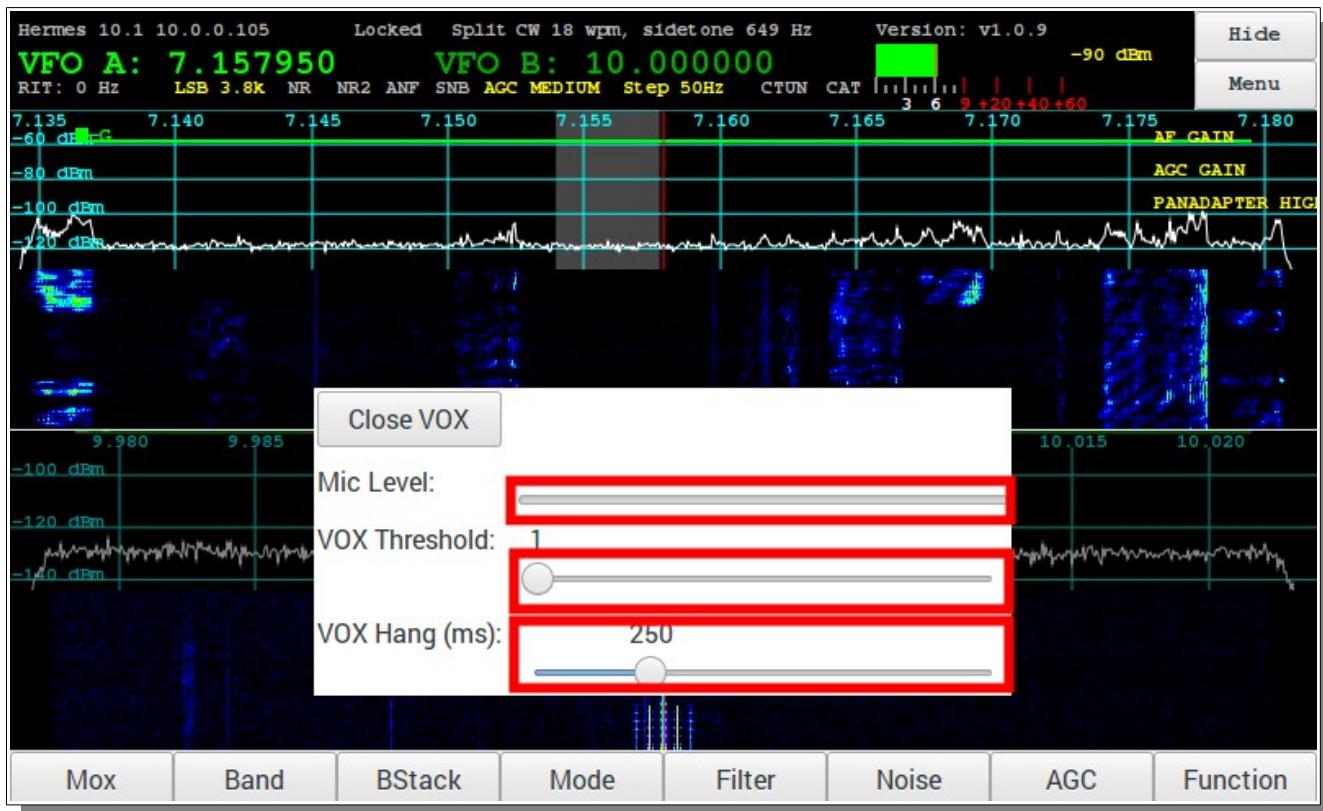


- ➊ Highlighted box indicates **Microphone Level** as you speak to adjust Threshold and Hang
- ➋ **Threshold** for VOX activation
- ➌ **Hang** for how long to hold VOX between words while speaking

9. On-Screen Controls and toolbar Buttons


Touch selection of VFO-A (Rx0)

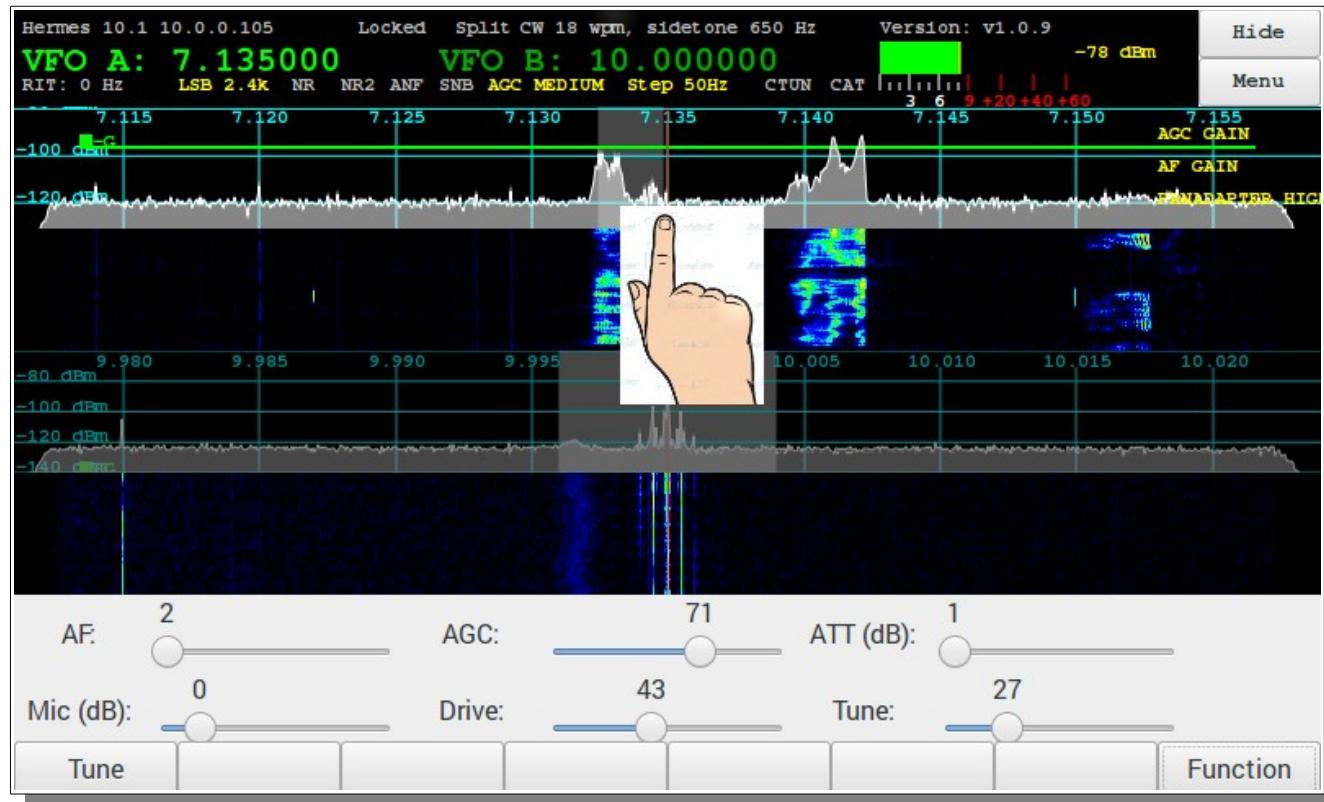

Touch selection of VFO-B (Rx1)

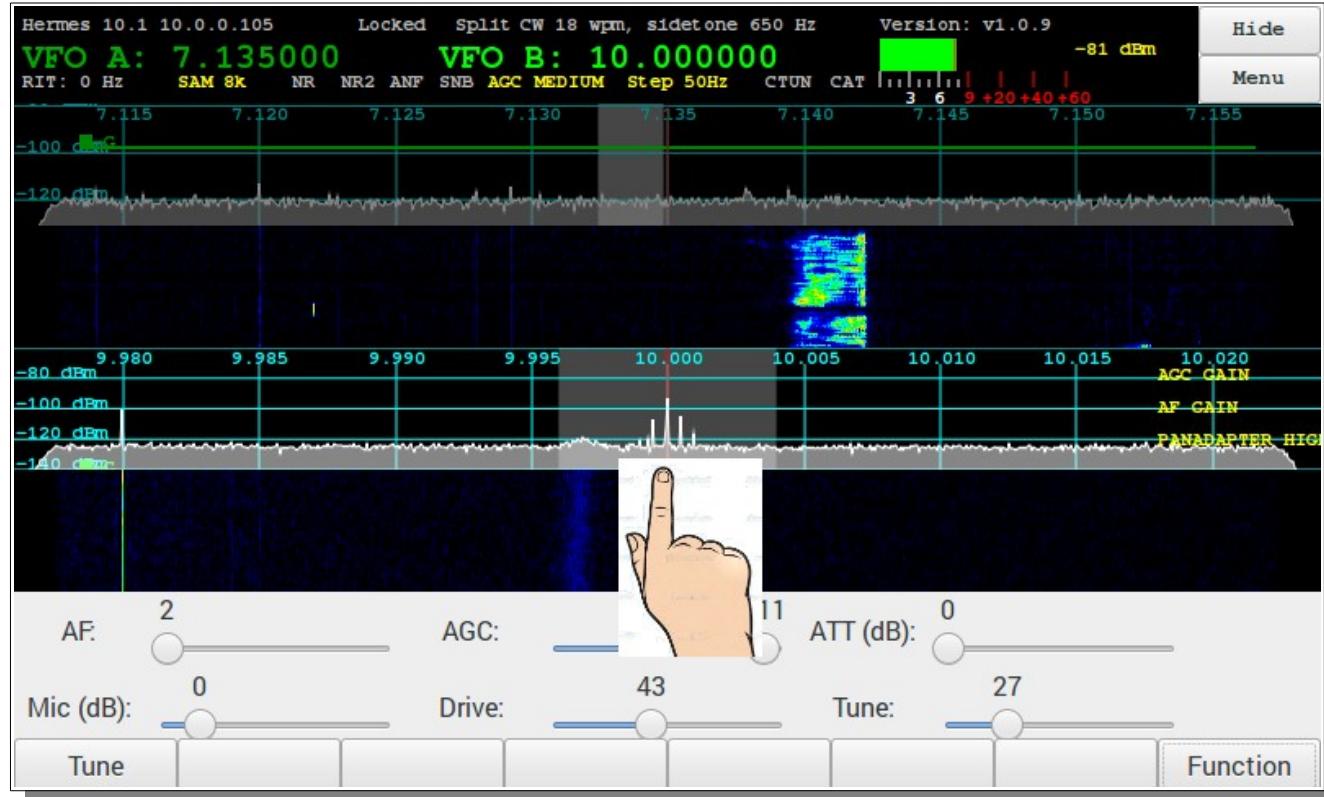

Touch Direct Frequency Entry

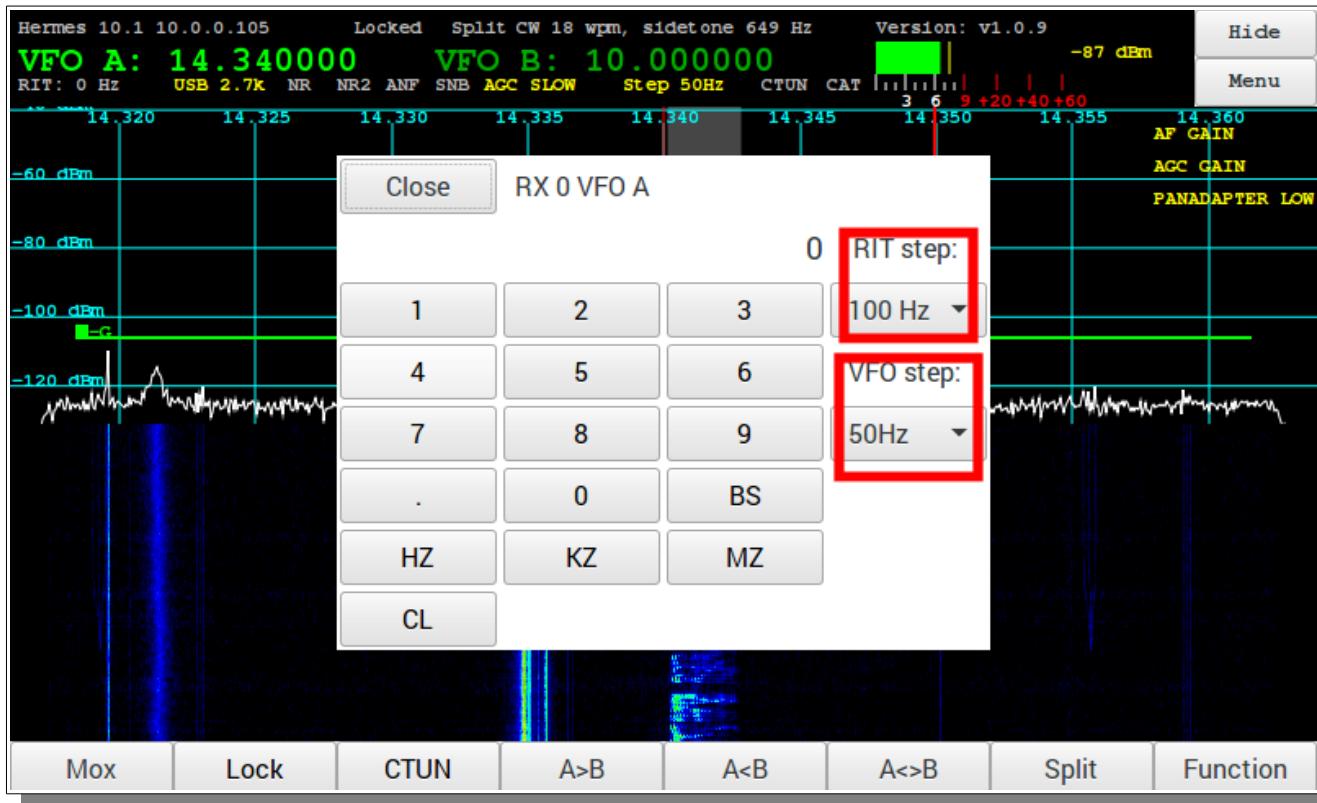

- Touch or Mouse on VFO-A or VFO-B digits to bring up Direct Frequency Entry menu
(example touch 1-4-3-2-0-KZ = 14.320Mhz 20M)

Note: there is a separate direct Freq entry for each VFO

- RIT Step**
- VFO Step**


Toolbar – Function button

There are 4 Toolbars. Each one is selected by using the Function button or on-panel switch FN Switch to repeatedly cycle through the 4 toolbars.

Physical Function "FN" Button



On-Screen Function Button

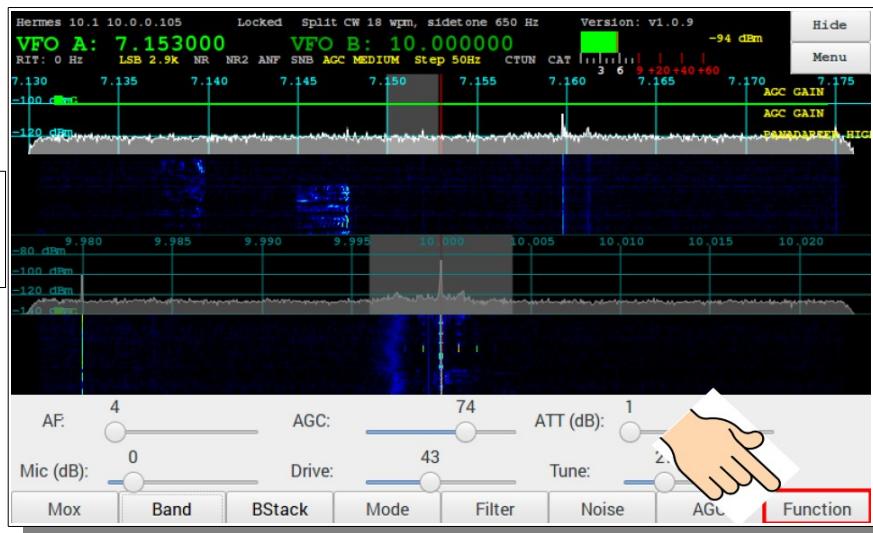


The function touch screen button or physical button enable the 4 functions buttons and encoders.


Four Toolbar menus – select with Function button or front panel switch




Toolbar – MOX


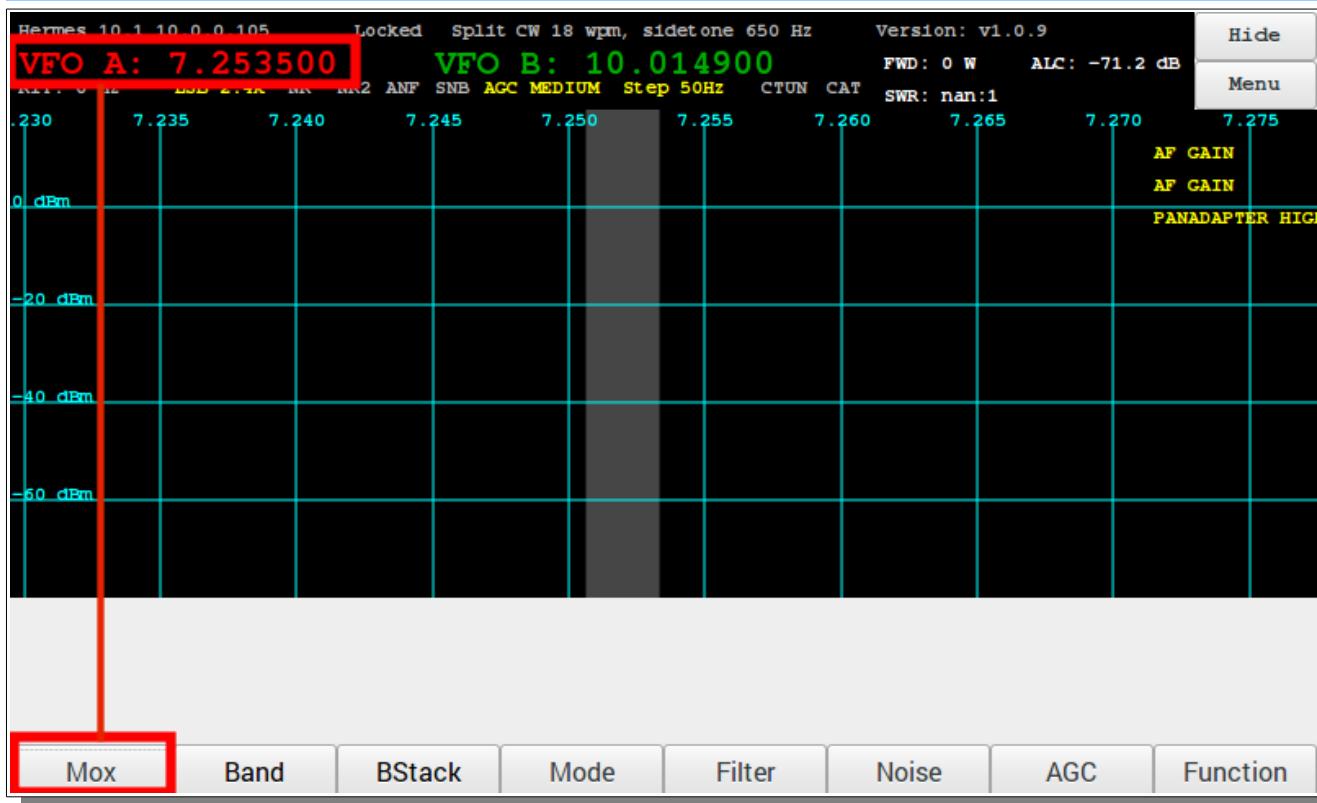


Toolbar – Band selection

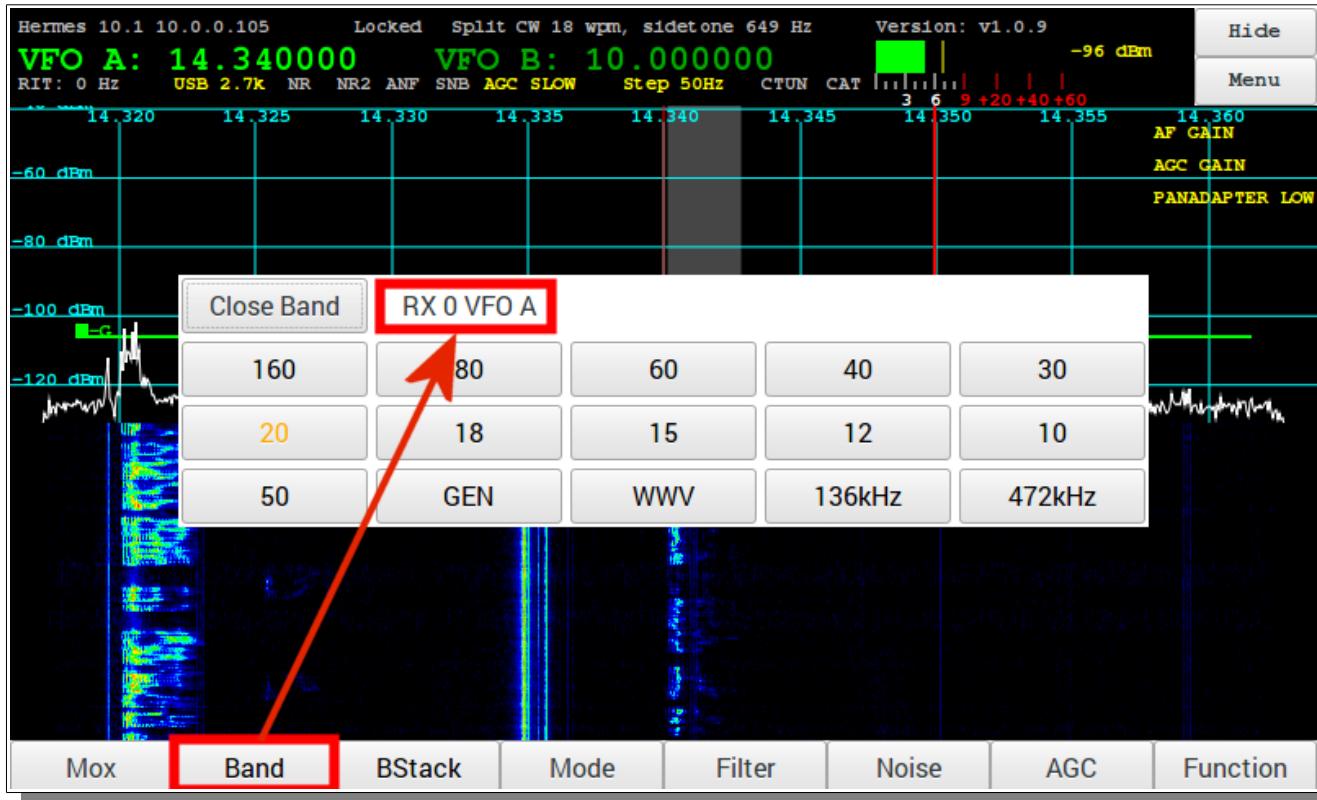


Toolbar - Bandstack

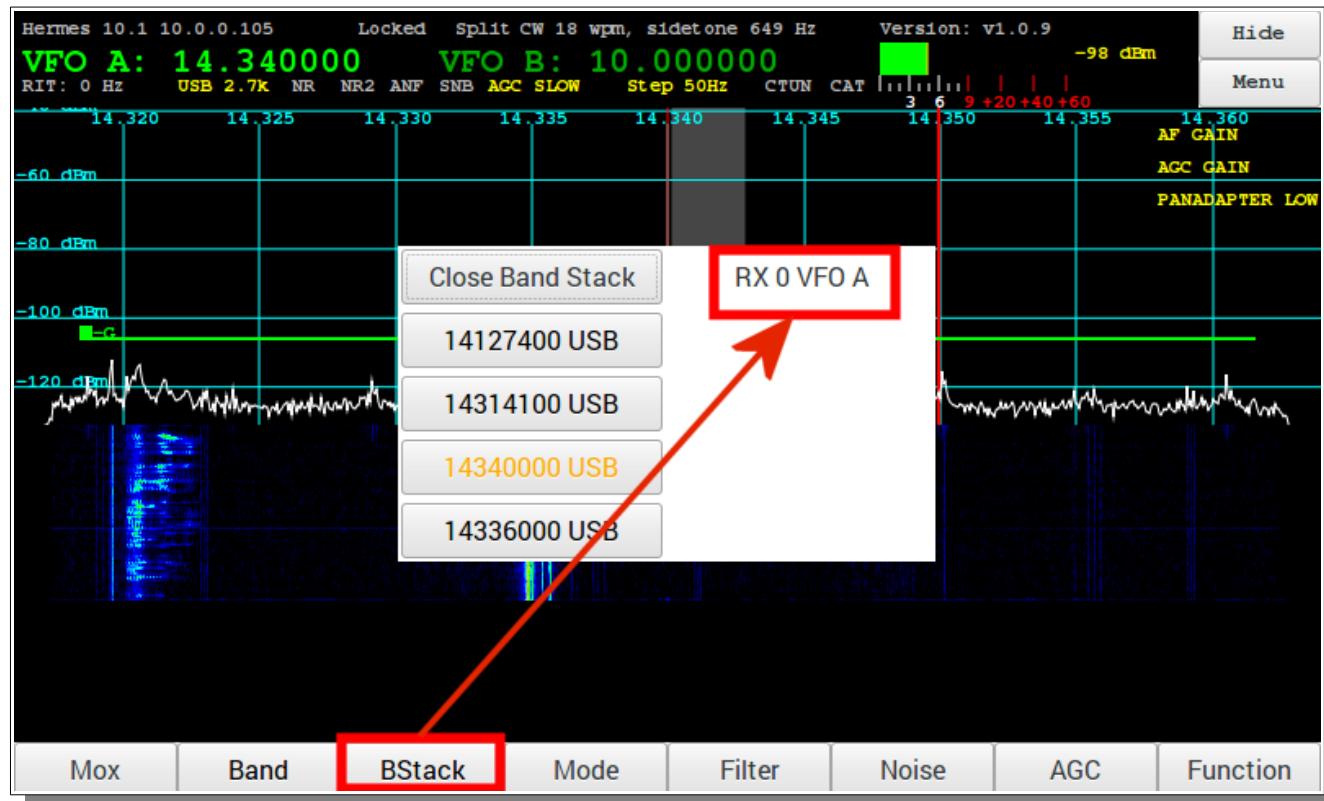


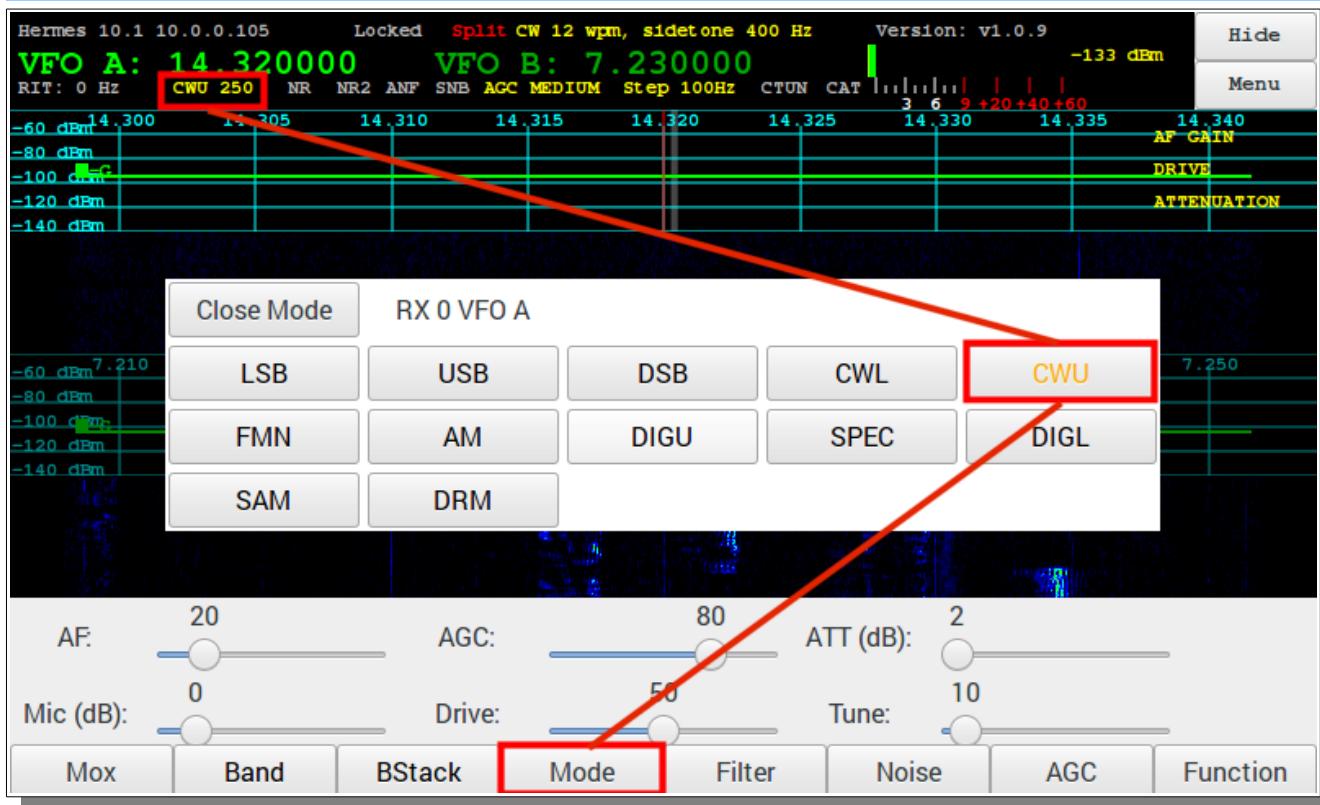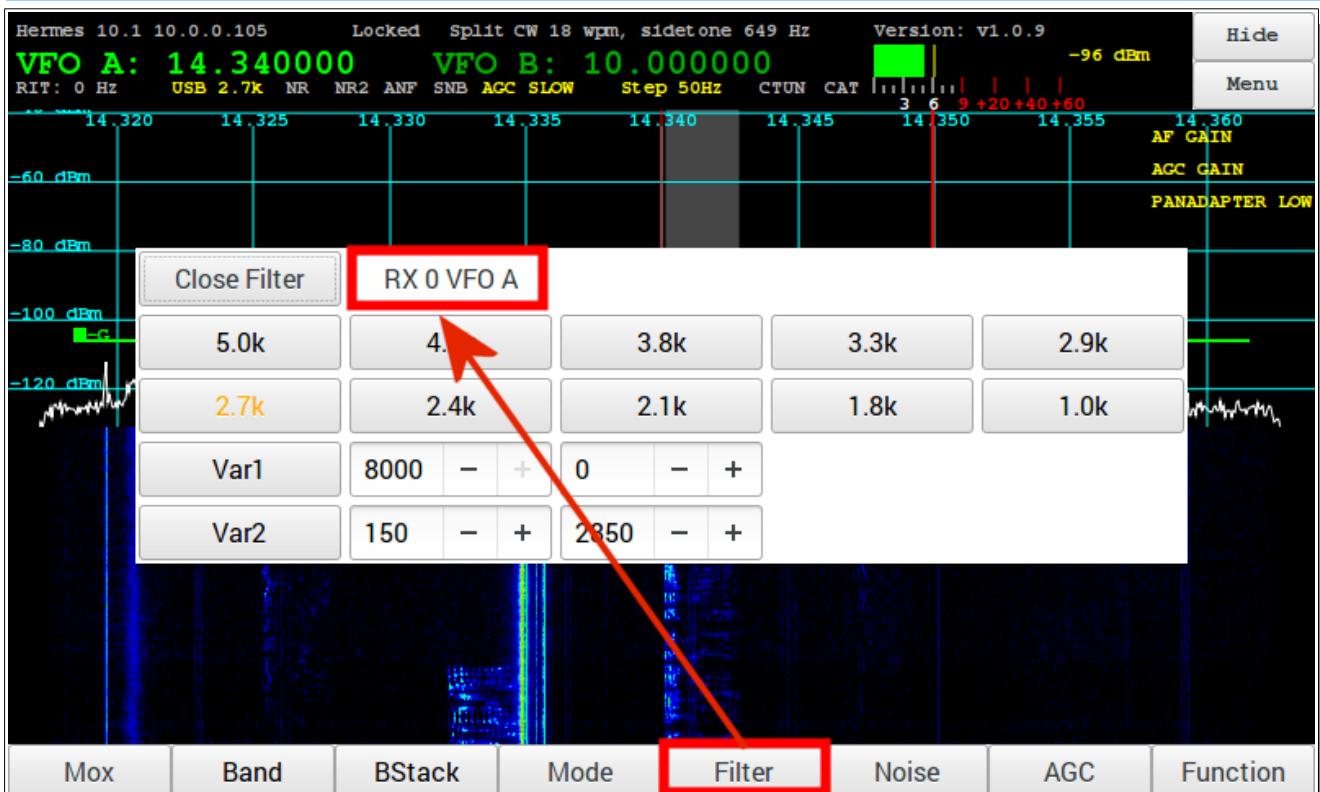Toolbar – Mode**Toolbar – Filter**


Toolbar – NOISE

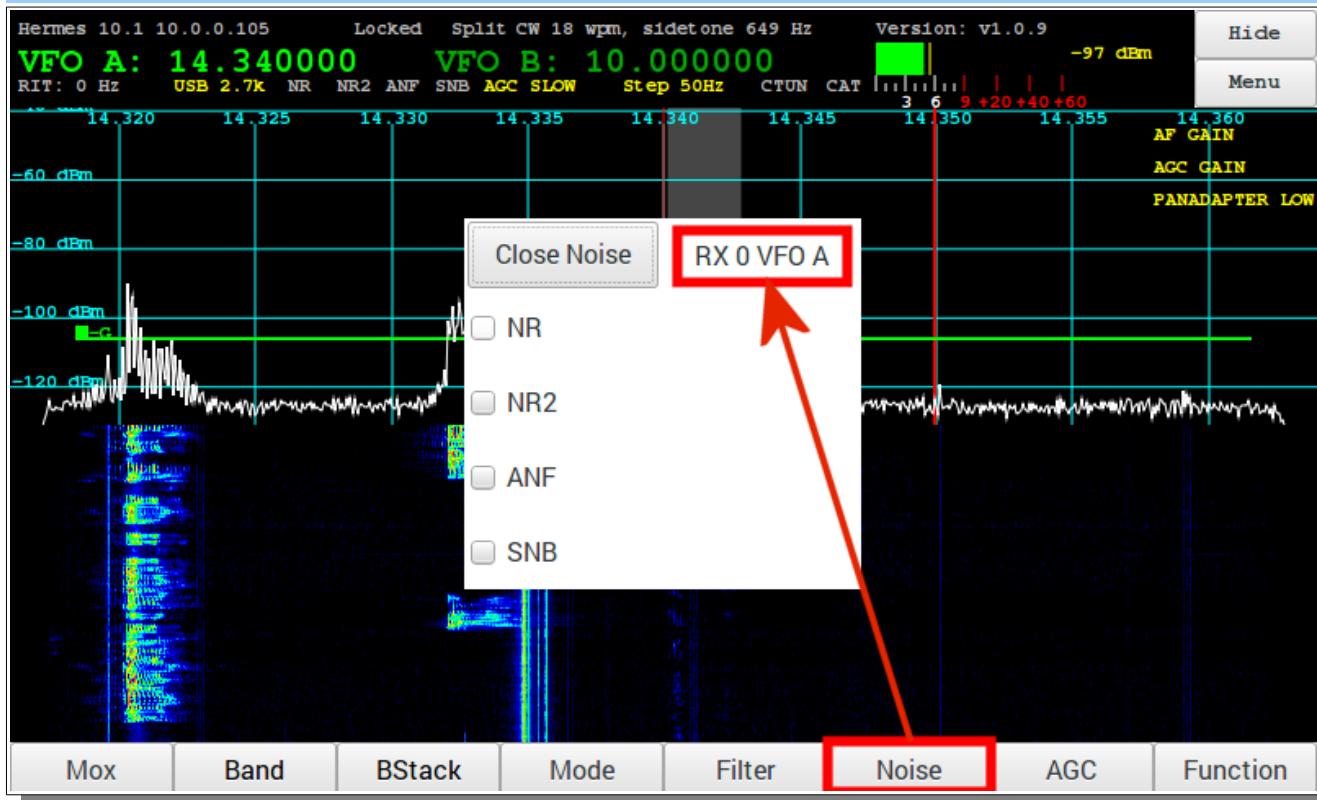

Toolbar – AGC

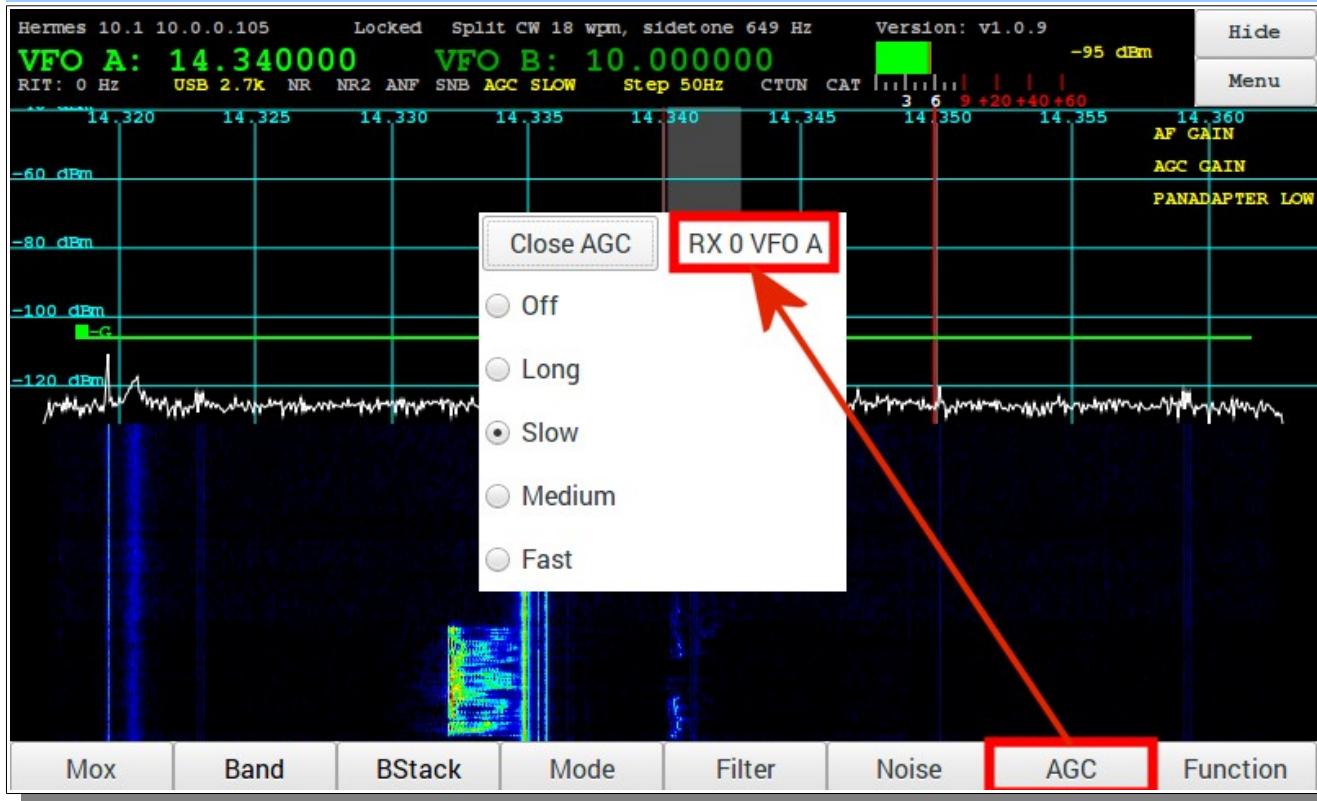


Toolbar – Function button

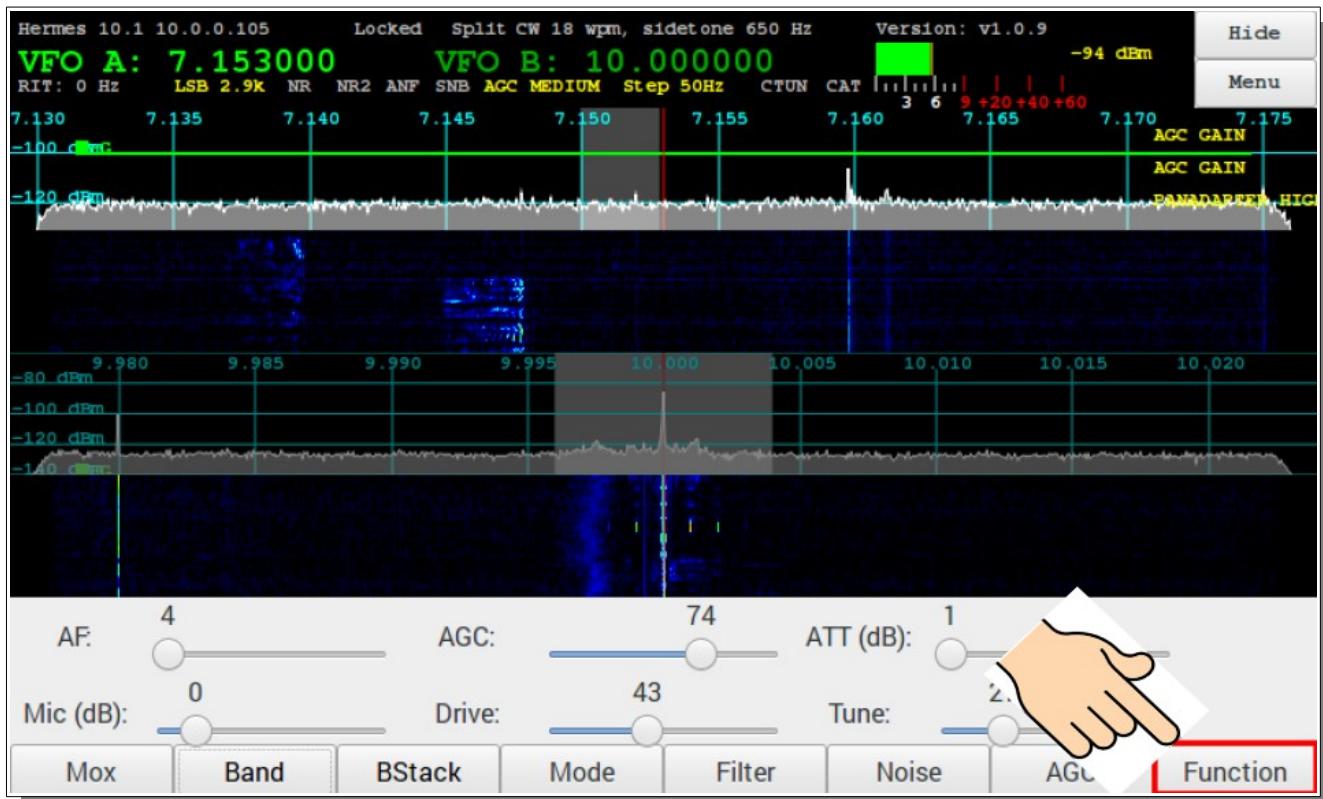


The function touch screen button or physical button enable the optional functions of some of the buttons and encoders.

Four Function Toolbar menus – select with Function button or front panel switch

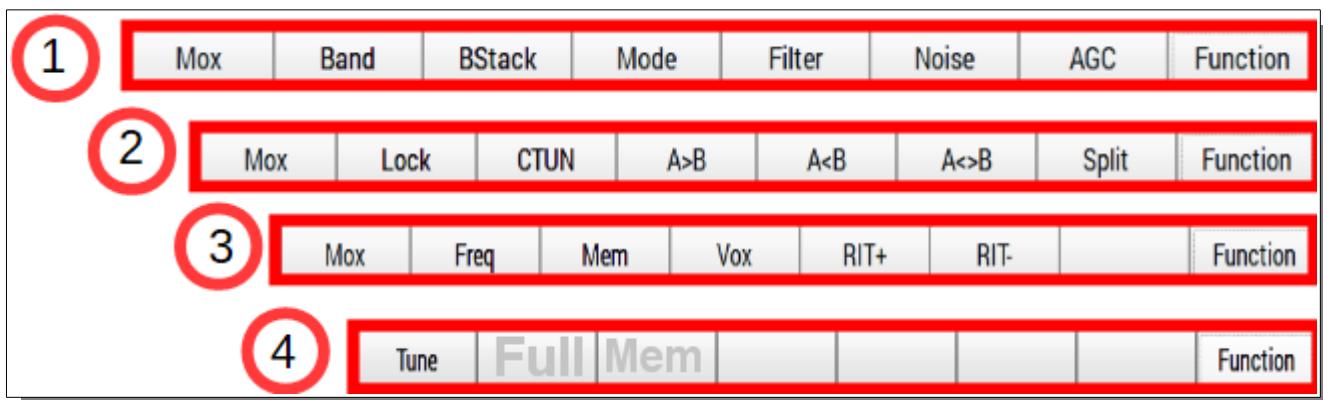


Note: the 4th Function Menu will include the Full Time and Mem Time from the Open Collector Menu

Toolbar VFO Lock

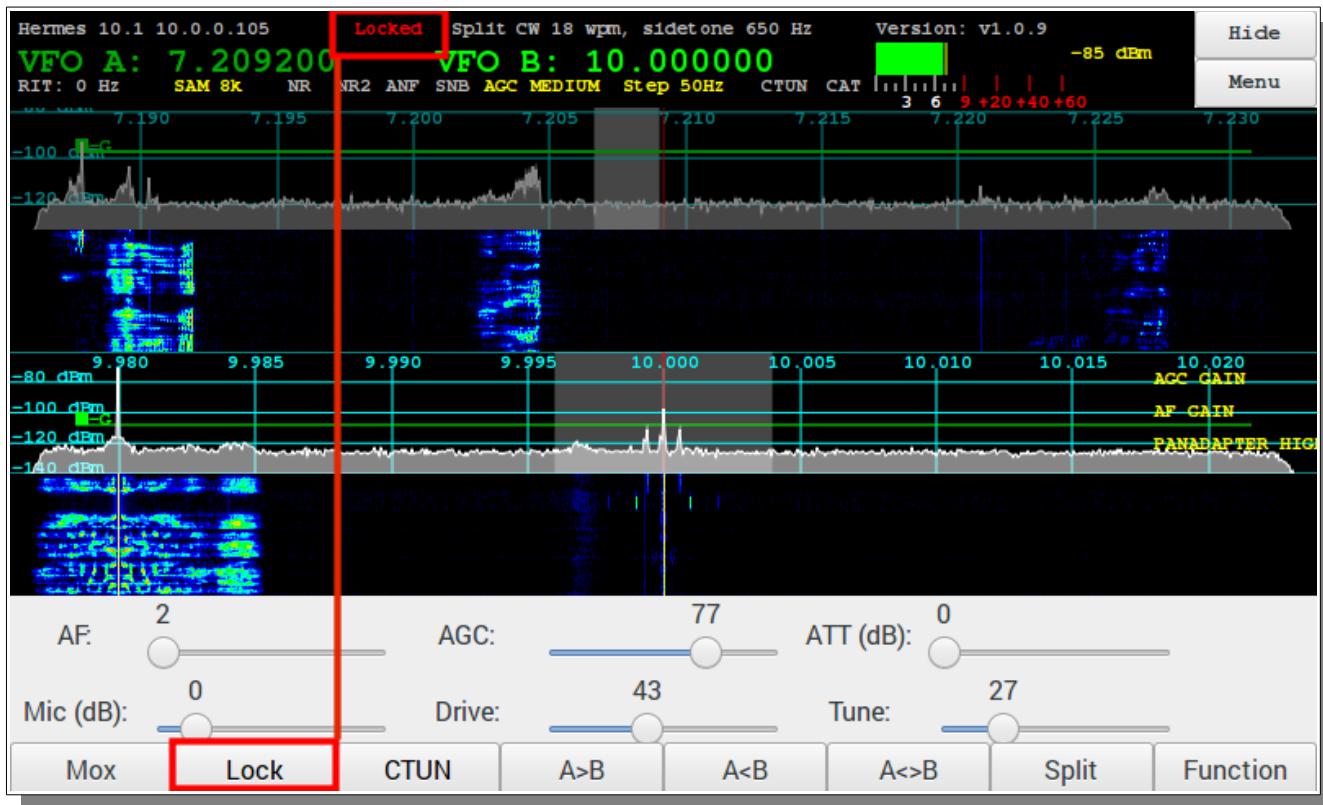

- ➊ The VFO can be locked by pressing the button on the AF Gain encoder or by tapping on the left side of the VFO display. To unlock press the AF Gain encoder button again or tap on the left side of the VFO display.
- ➋ When locked the text will be displayed in Red on the VFO.


Toolbar CTUN – Click Tuning

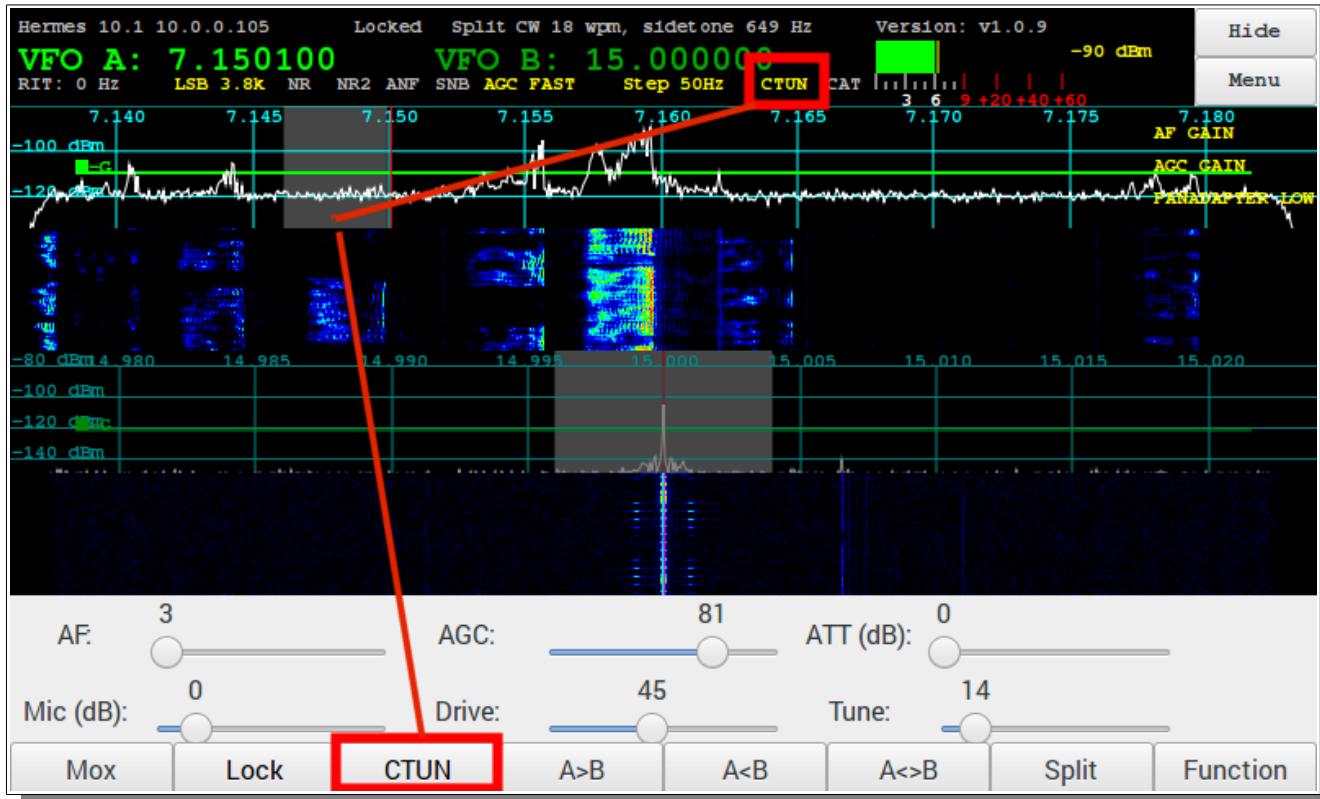

Note: how filter is Tuned to a new frequency and CTUNE is announced in the status bar in Yellow

- ➊ Tapping on the CTUN button will enable or disable the click tuning function. When the function is enabled the CTUN button text will be red.
- ➋ When CTUN is enabled tuning is restricted to be within the passband currently being received. The tuned frequency and filter moves within the current passband without scrolling the panadapter or waterfall left or right.

Toolbar A>B A<B A<>B

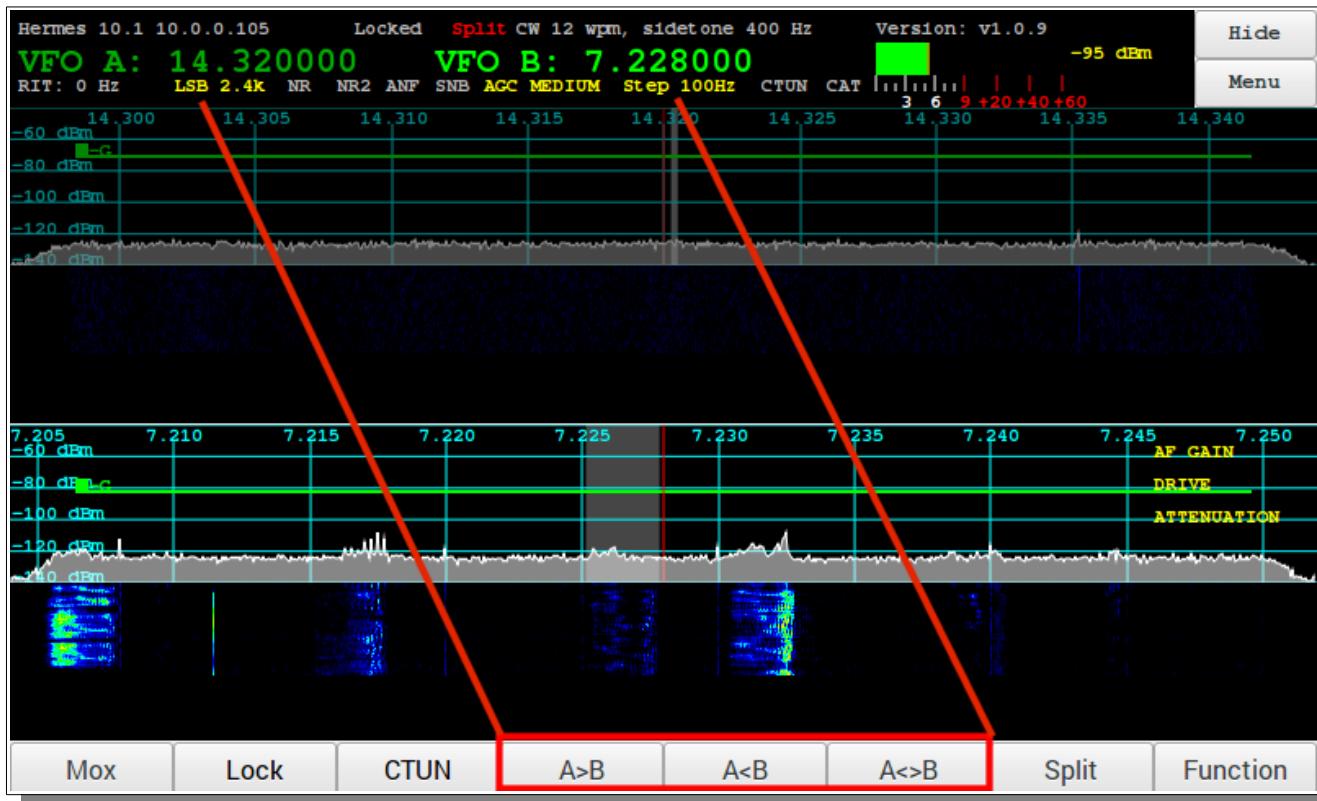


The toolbar allows you to copy the VFO frequency:

VFO-A into VFO-B (A>B)

VFO-B into VFO-A (A<B)


VFO-A swap VFO-B (A<>B)

Toolbar SPLIT

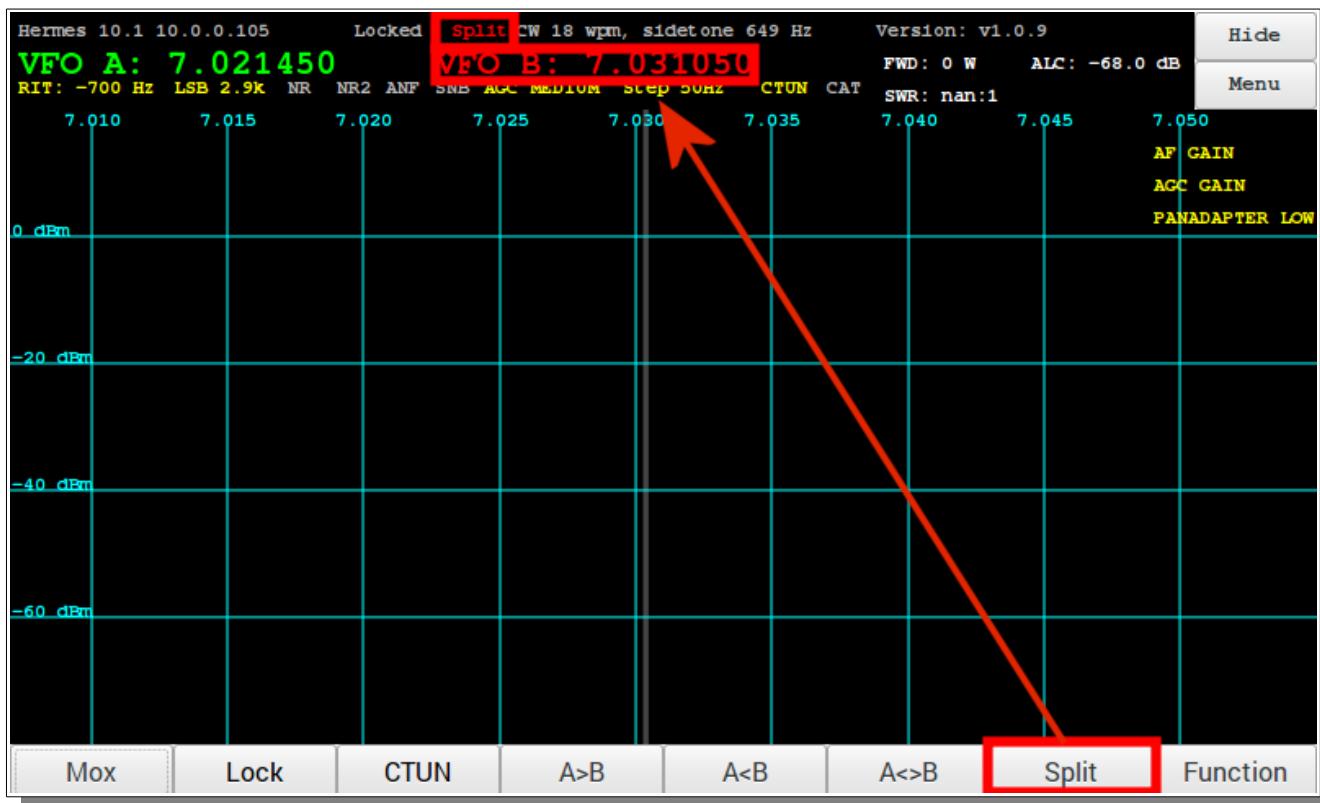


- ➊ The Split function allows you to select VFO-A for Receive and VFO-B for Transmit. This is a common practice when working Contests, DX, or Crossband.

Toolbar FREQ

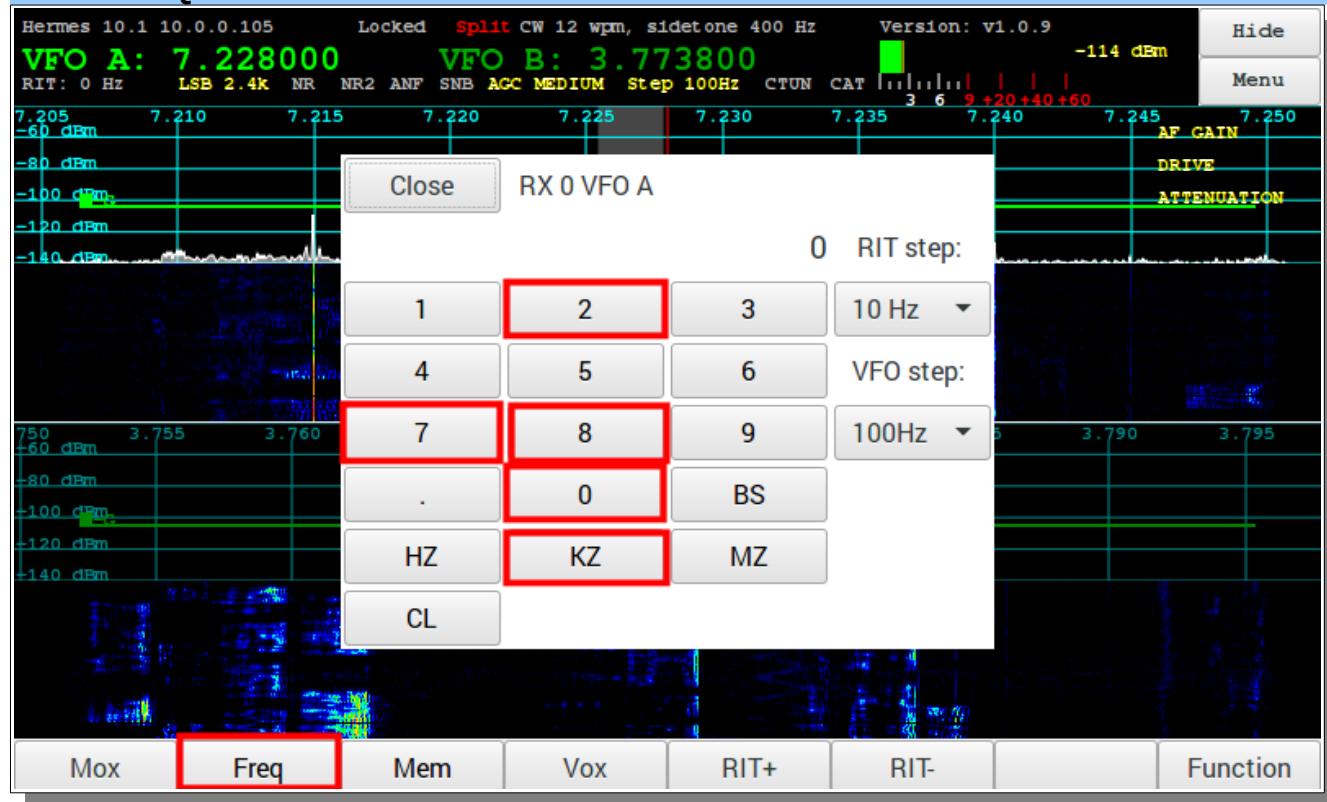


- Direct frequency entry using the touchpad is easily done by first selecting the VFO you wish to change, and then punching in the frequency in kHz or mHz. This illustration shows selection of 7.228 LSB on 40M.

Toolbar MEM

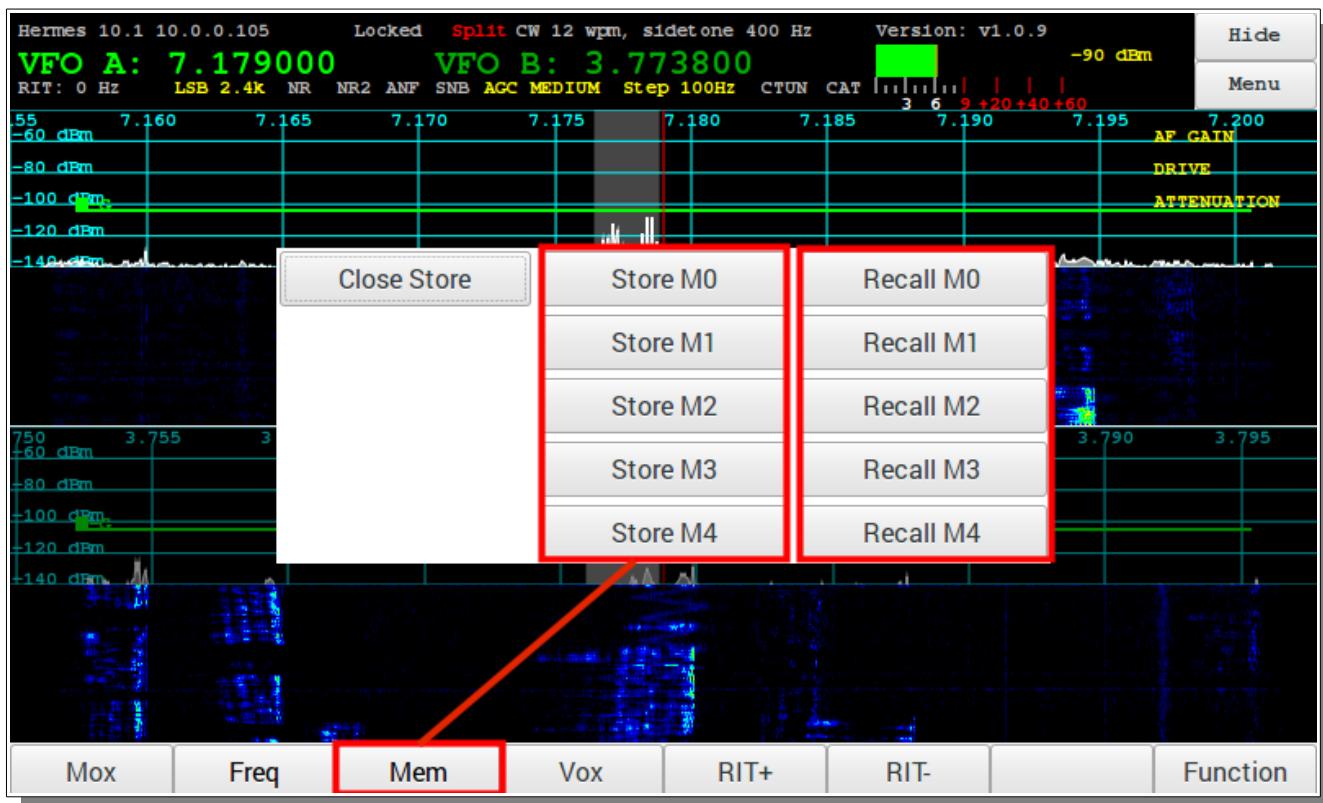


- Convenient storage and recall of four favorite frequencies

Toolbox VOX

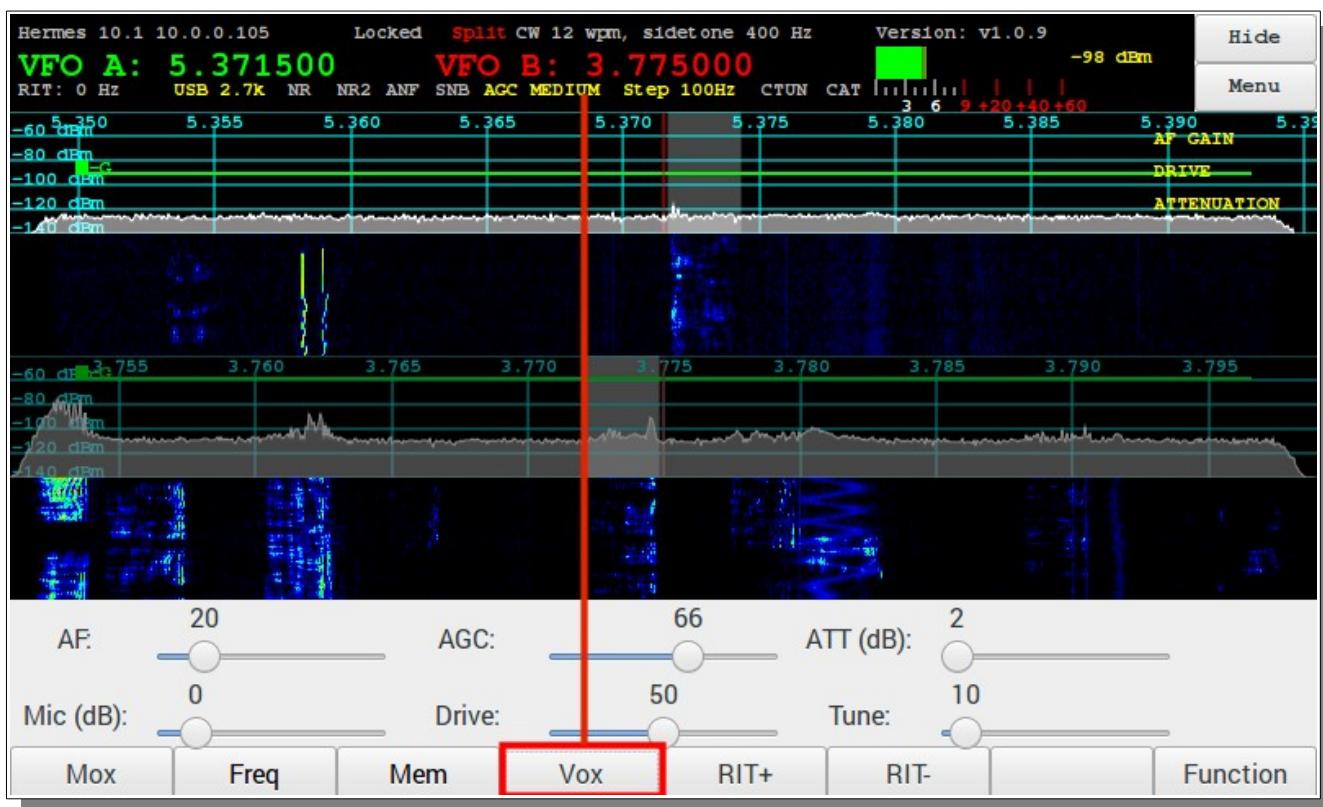


- Using the Toolbar VOX allows you to key PTT for VOX level adjustments (Menu)

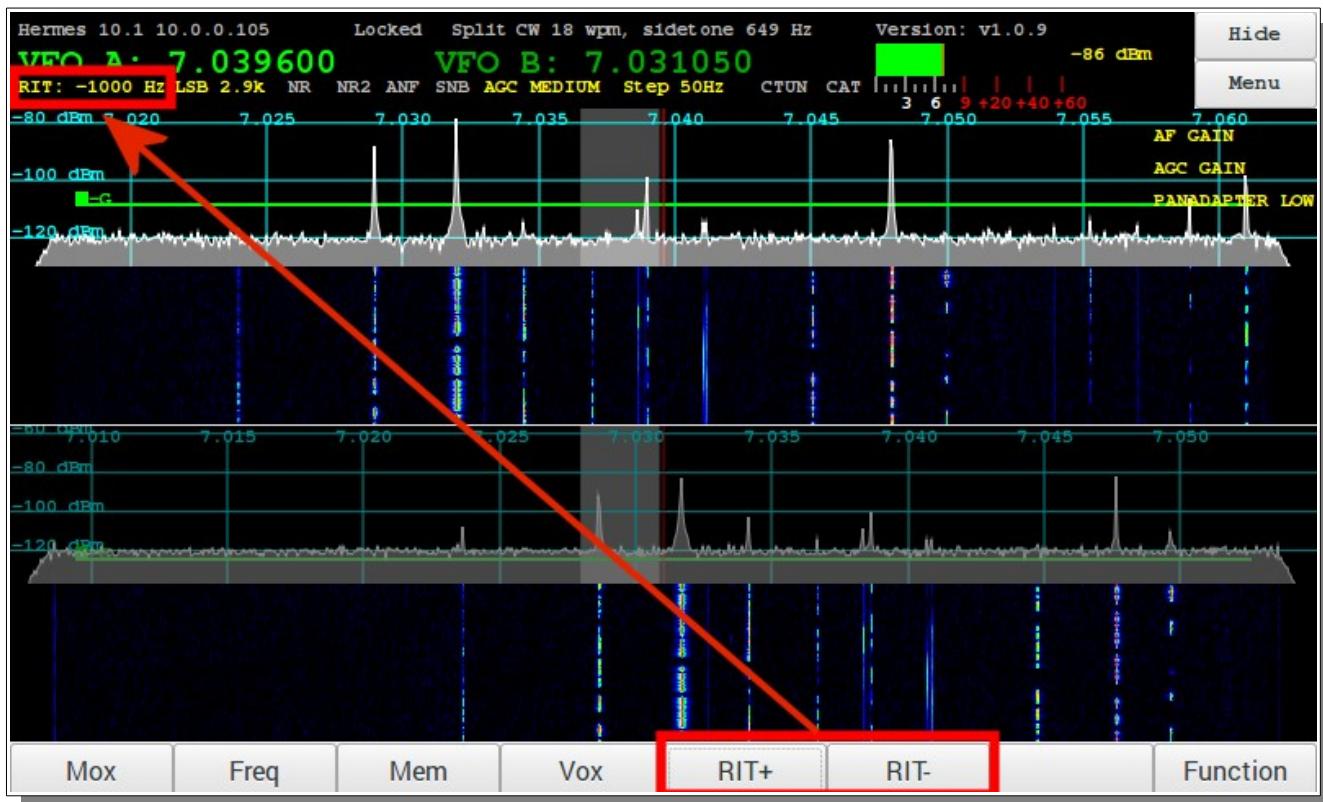Toolbar RIT**RIT – Receiver Incremental Tuning**

- ➊ Tapping on the RIT+ (plus) or RIT- (minus) button will enable RIT



This page reserved for future additions of
Open Collector Full Tune and Memory Tune times (ms)

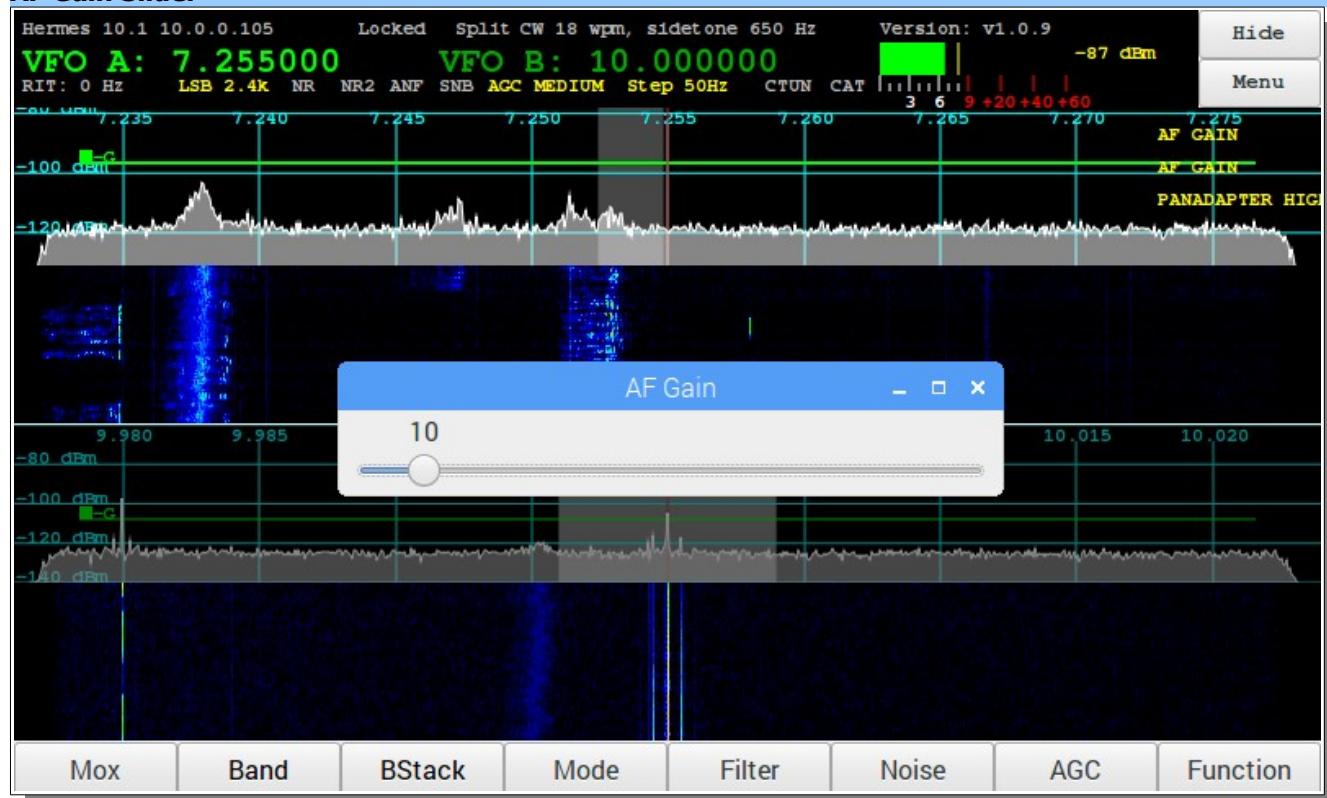AF Gain Slider



AF Gain Slider is displayed using Function key to select one of the two uses for Encoder E1

MIC Gain Slider

MIC Gain Slider is displayed using Function key to select one of the two uses for Encoder E1

PA Drive Slider


PA Drive Slider is displayed using Function key to select one of the two uses for Encoder E1

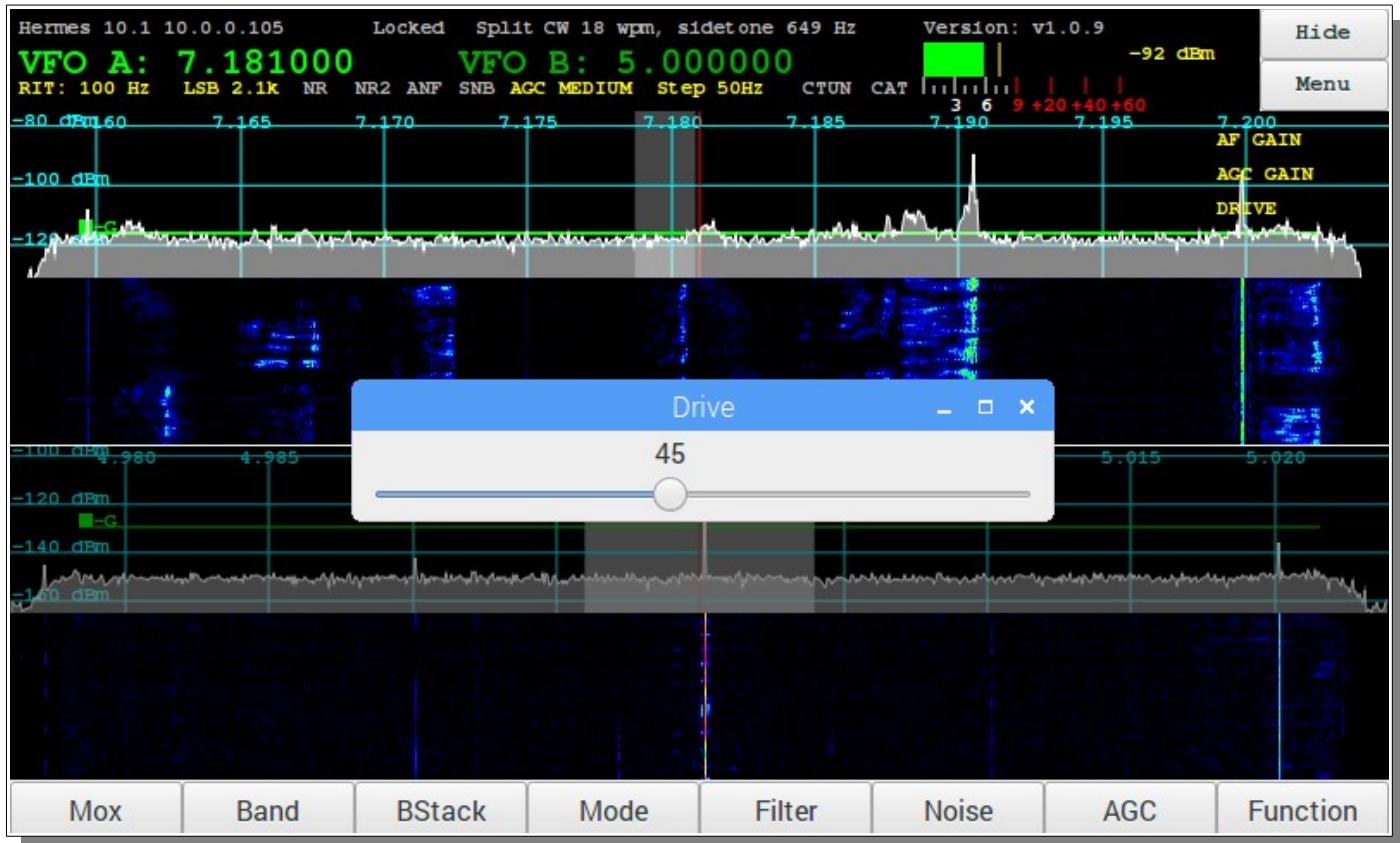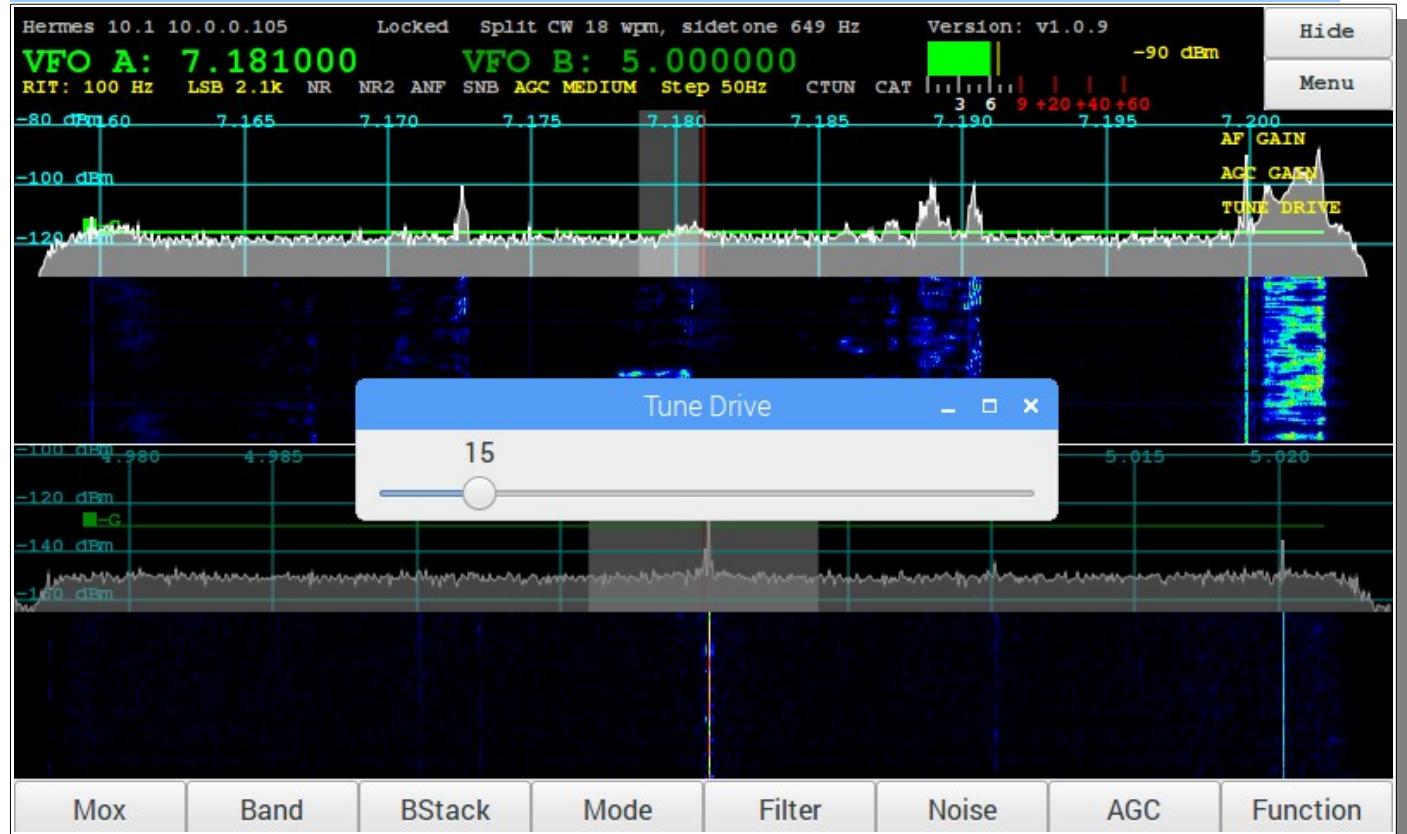**Tune Drive Slider**

TUNE Drive Slider is displayed using Function key to select one of the two uses for Encoder E2


AGC Gain Slider

AGC Gain Slider is selected using the Function Key and then rotating E3

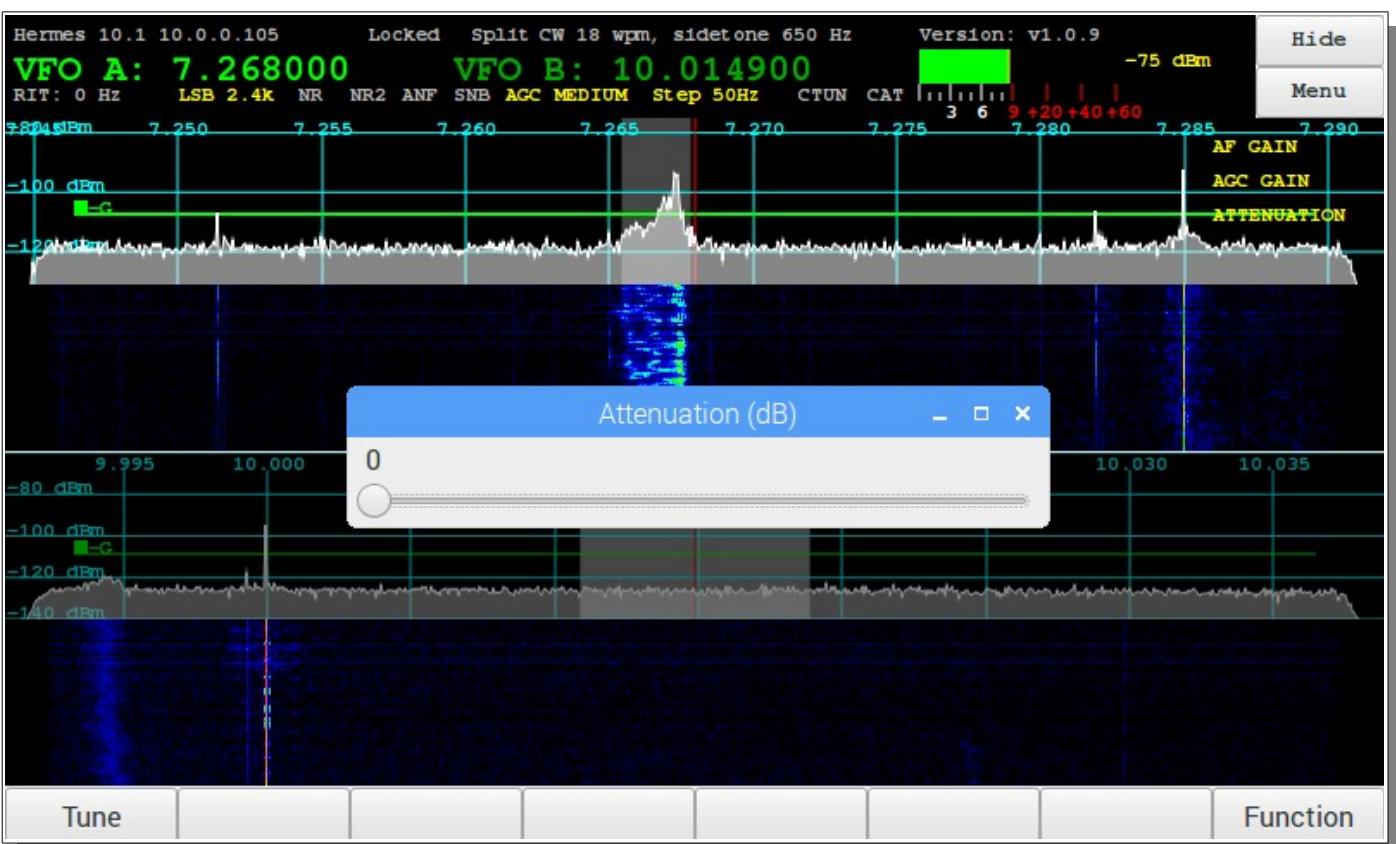Receive Attenuation Slider


Receive Attenuation Slider is selected using the Function Key and then rotating E3

Main screen HIDE

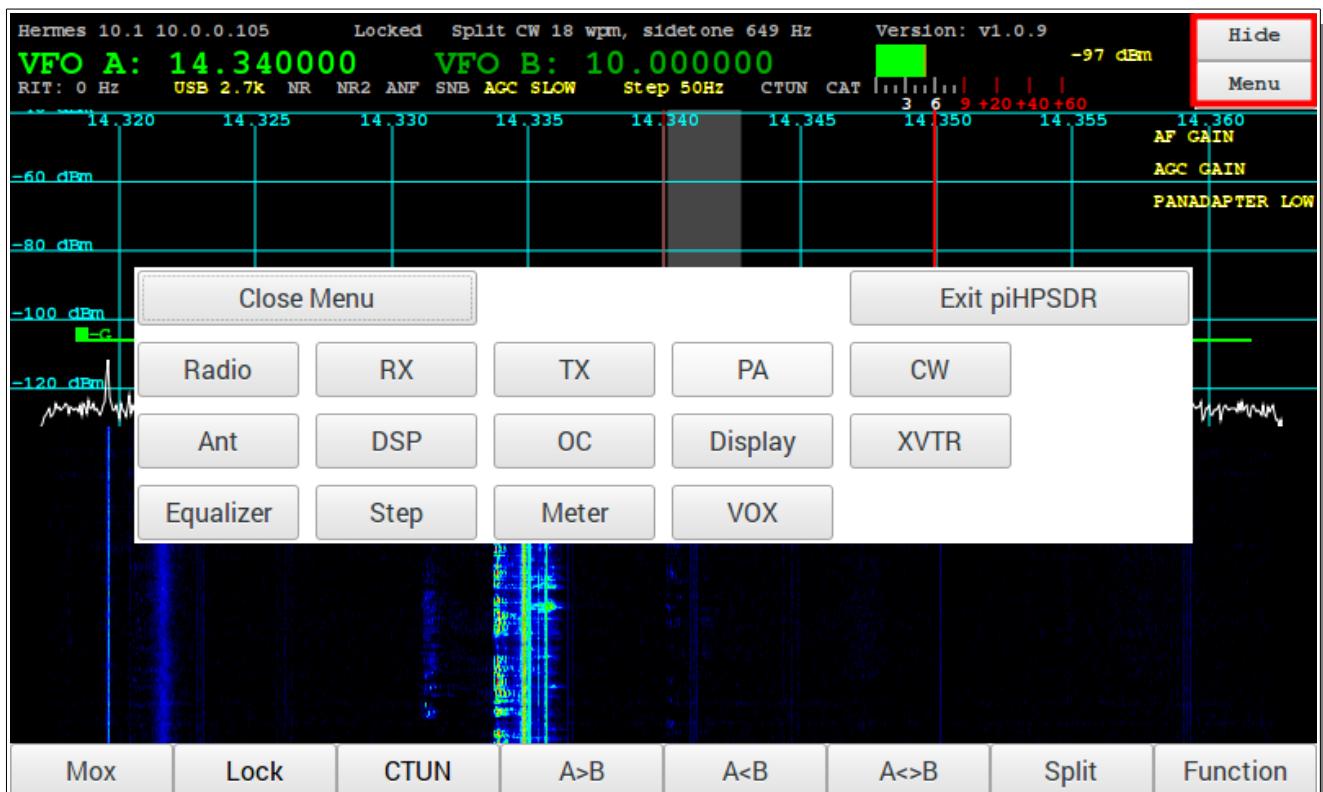

- 💡 The purpose of the HIDE option is to minimize the pihpsdr application window and to then provide easy access to the RaspberryPi operating system and secondary applications such as Fldigi.

Menu or Toolbar → Meter

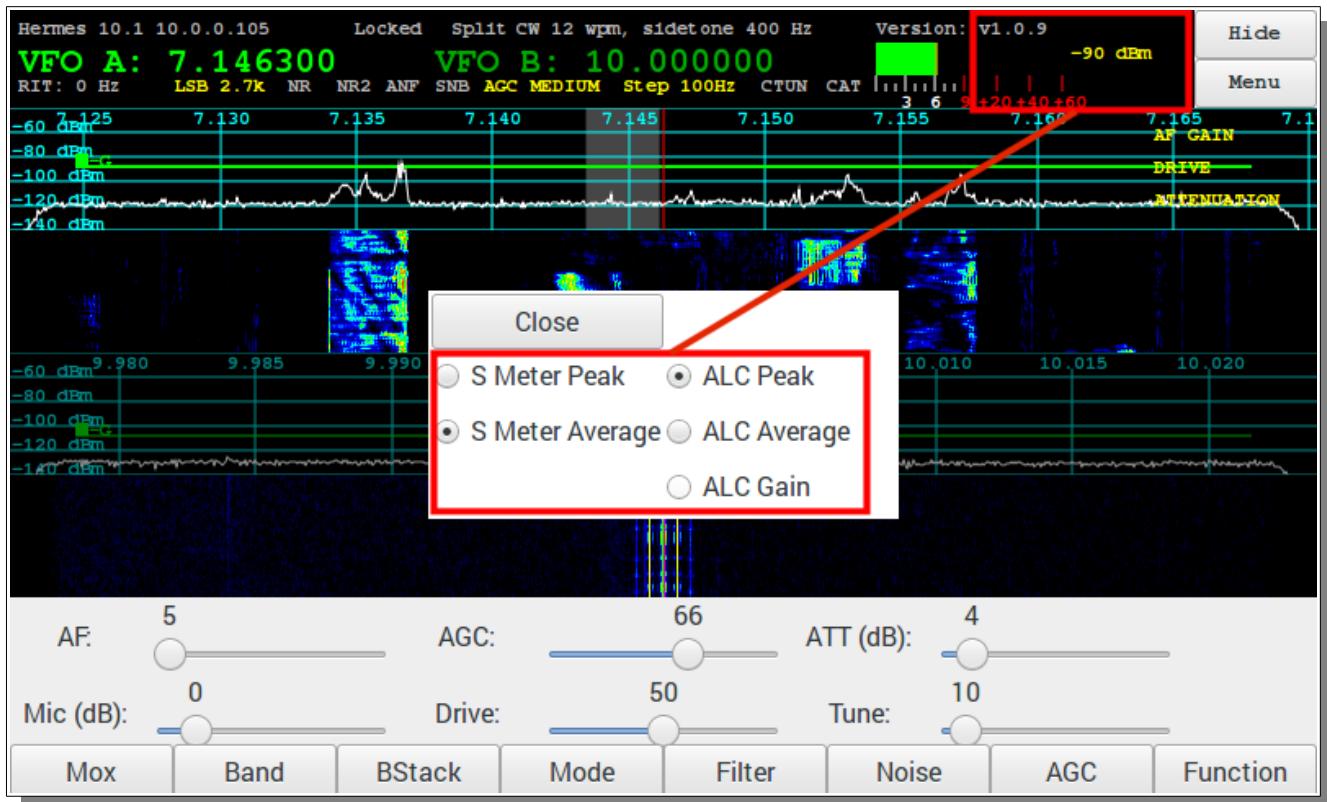

- ➊ Tapping on the Meter will display a list of options for updating the meter.

10. Tuning

VFO Encoder

The VFO encoder knob is used to tune the radio. By turning the encoder clockwise and anticlockwise the frequency will increment or decrement by the amount of the step value.

The General Menu has a field to set the resolution of the encoder.

Touch Screen

Touching and dragging on the panadapter or waterfall will move the frequency up or down. Note that it will move in step increments.

Tapping a frequency on the panadapter or waterfall will move to that frequency.

Mouse

Left down and holding then dragging while on the panadapter or waterfall will move the frequency up or down.


Left clicking will move to the selected frequency.

Moving the scroll wheel will increment or decrement the frequency by the step value.

11. TUNE/SWR/FWD Power

TUNE/SWR/FWD power

When the Function button is selected, it toggles the TUNE/MOX button on the far left. FWD power and SWR can then be read in the top of the pihpsdr window.

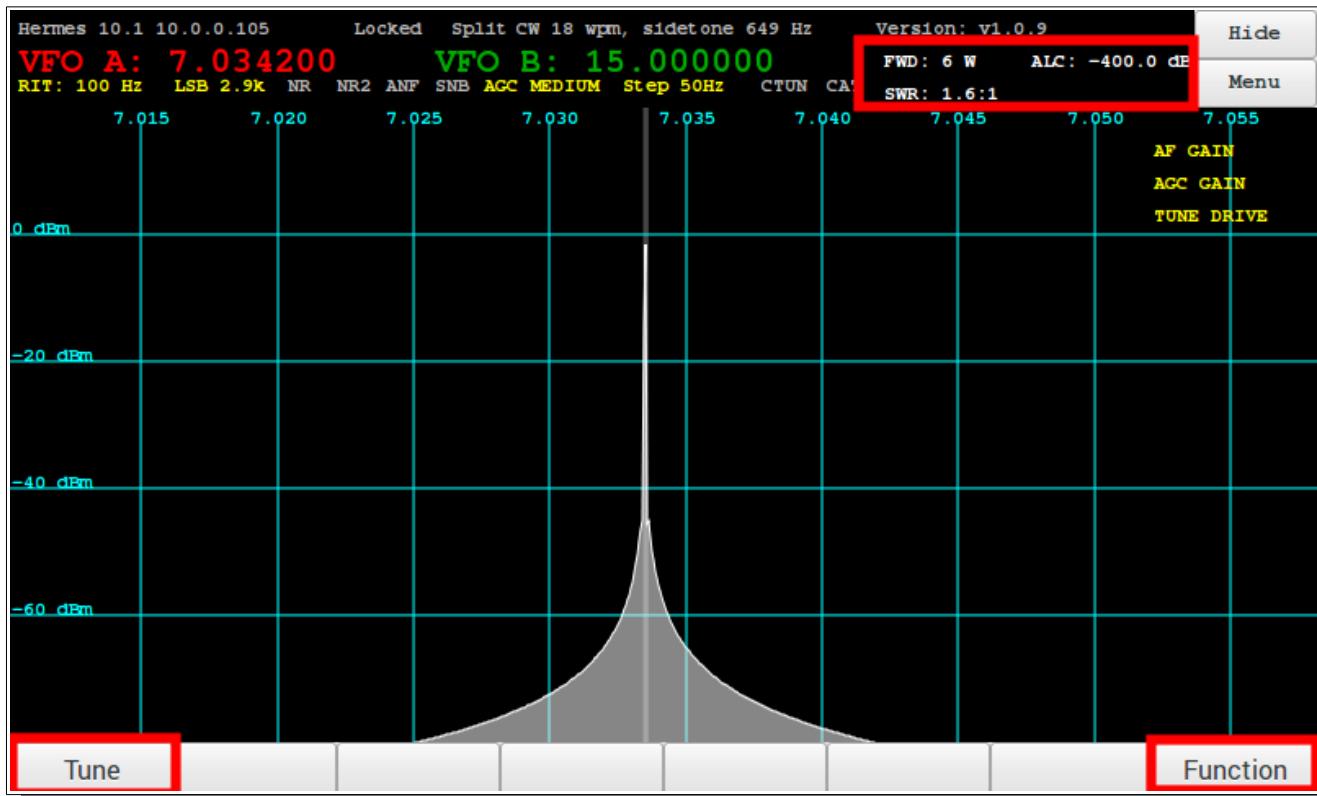


12. Appendix

Encoders and Switches

Factory Switch/Encoder/Touch activation

5Switch or Encoder	Function	Touch Screen	GPIO A	GPIO B
Power ON/OFF	Controller power on/off	Controller power on/off		
TUN – TUNE button	generates a carrier with Tune power selection slider	generates a carrier with Tune power selection slider		
MOX – MOX button	Space bar toggle for PTT or MOX button	Space bar toggle for PTT or MOX button	27	
S1 – Band	10 HF Bands + General Coverage + WWV + LF + XVRT	10 HF Bands + General Coverage + WWV + LF + XVRT	13	
S2 – Mode	LSB USB DSB CWL CWU FMN AM DRM FreeDV PSK	LSB USB DSB CWL CWU FMN AM DRM FreeDV PSK	6	
S3 – Filter	10 IF Filter widths	10 IF Filter widths	5	
S4 – Noise	5 Noise Reduction modes	5 Noise Reduction modes	24	
S5 – AGC	5 AGC Decay settings	5 AGC Decay settings	4	
FN – Function	Function switch to toggle TUNE or MOX and the action of E1, E2, E3 knobs	Function switch to toggle TUNE or MOX and the action of E1, E2, E3 knobs	22	
E1 --	two functions AF Gain / MIC Gain	two functions AF Gain / MIC Gain	20	26
E2 –	two function RF Drive / TUNE Drive	two function RF Drive / TUNE Drive	16	19
E3 –	two function AGC Gain / Rx ATTEN	two function AGC Gain / Rx ATTEN	4	21
E4 – VFO Main tuning knob	-----	-----	17	18
Menu	-----	Main piHPSDR Menu		
Menu → Band		Select band		
Menu → Band Stack	3 to 5 level quick freq change	3 to 5 level quick freq change	13	
Menu → Mode	Mode	Mode	6	
Menu → Filter	IF Filter width	IF Filter Width	5	


5Switch or Encoder	Function	Touch Screen	GPIO A	GPIO B
Menu → Noise	Noise Blanker mode	Noise Blanker Mode	24	
Menu → AGC	Automatic Gain	Automatic Gain	4	21
Locked	Right click on VFO Frequency to toggle Frequency Lock	Touch VFO Frequency to toggle Frequency Lock		
Meter	Right click on S-Meter for S-Meter and ALC peak/average	Touch S-Meter for S-Meter and ALC peak/average		

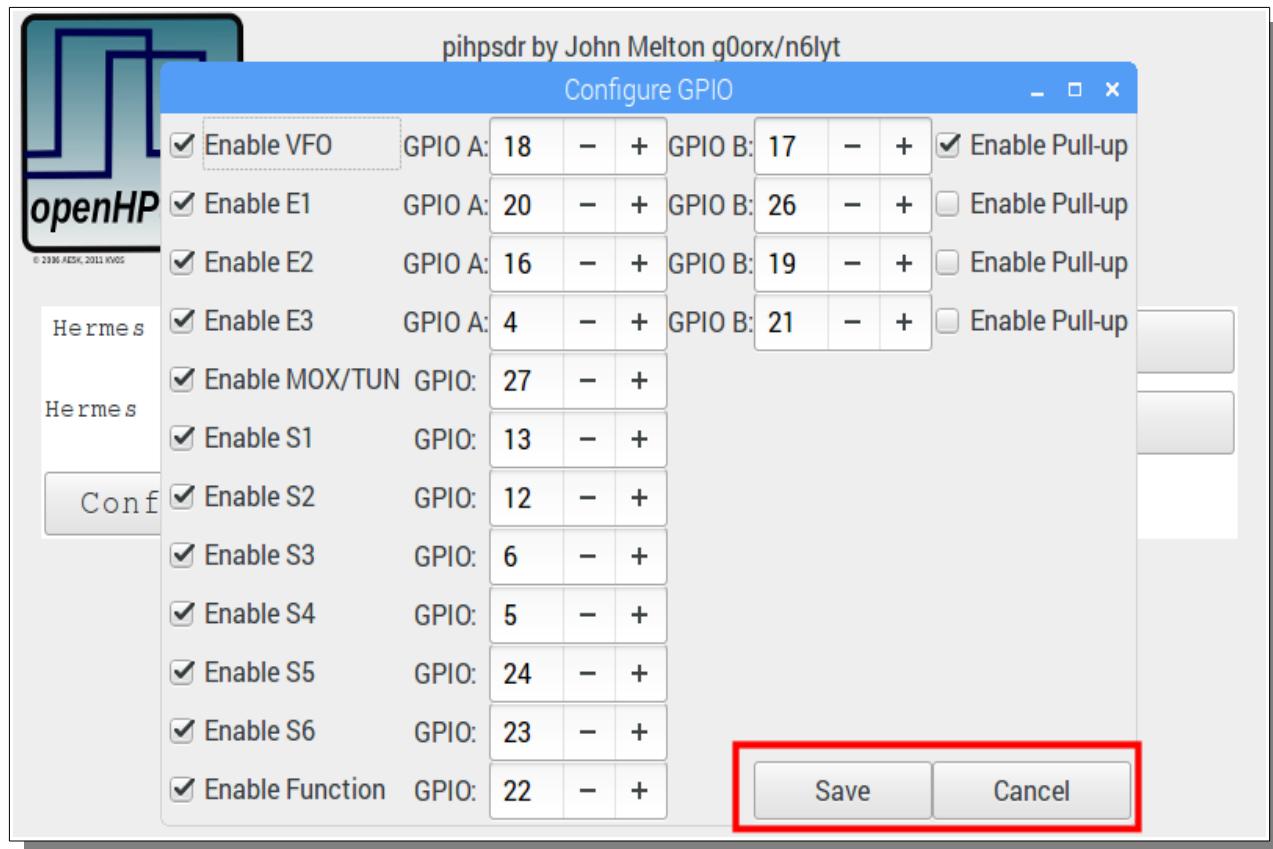

GPIO Default assignments

GPIO pin Assignments (RaspberryPi)

Note: You may wish to **reverse the direction of Tuning on the VFO Encoder**. The GPIO table shown at the START of pihpsdr allows convenient text entry. For example, the VFO direction of TUNING can easily be changed by swapping GPIO-A from 17 to 18, and GPIO-B from 18 to 17.

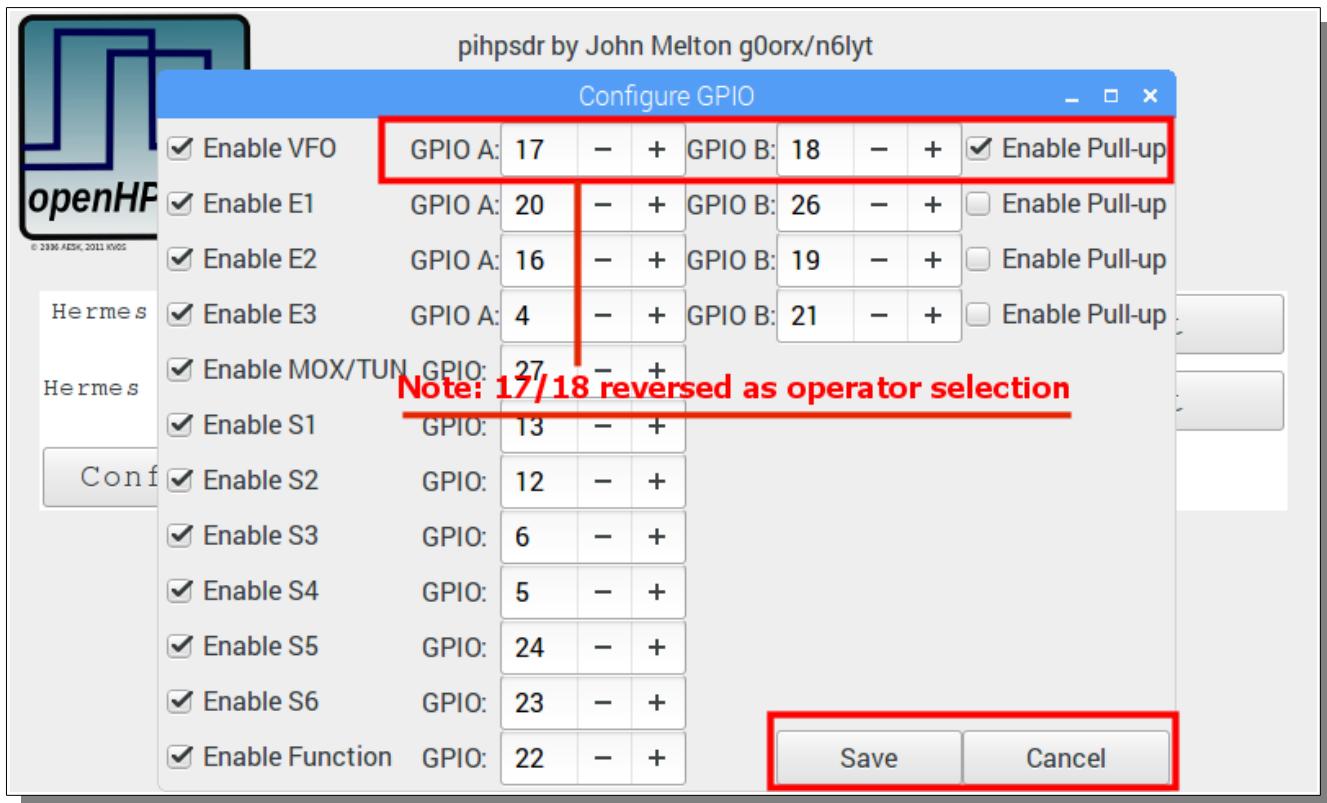

13. Reference materials

G0ORX Friedrichshafen pdf and video

Friedrichshafen 2016 publication

<https://www.dropbox.com/sh/fva5d5mi93c93tq/AAD6dU-eBMR0cVK-E95hJC5Ia?dl=0>

Jacinto Rebelo CU2ED for his Homebrew of a pihpsdr Controller

Kjell Lasen LA2NI for his complete RPi-e System

Scott WU2O [Homebrew Controller](http://wu2o.dyndns.org/wu2o_pi_4.html) http://wu2o.dyndns.org/wu2o_pi_4.html

F'Hafen video on YouTube:

<https://www.youtube.com/watch?v=U7QfP28YjCw>

14. Steve Wilson KA6S special addition for Flldigi


Using PiHPSDR with other applications:

PiHPSDR emulates several commands available in the CAT control found in the TS-2000. However, it receives commands over TCP/IP instead of through an RS-232 connection. For some applications this is trivial – for others some internet plumbing is required.

The Basics

PiHPSDR listens on Ports 19090-19092 for TCP/IP connections. It interprets TS-2000 protocol commands and will respond appropriately. It is NOT a full implementation. Some things don't make sense, i.e. they are features not shared between the TS-2000 and PiHPSDR. Others are still to be implemented.

Note: The latest version of Hamlib has a radio definition for the PiHPSDR, thus any application that uses Hamlib will be able to talk to PiHPSDR in its native manner, i.e. directly through TCP/IP without using the serial port. (Thanks to Jae, K5JAE for the hamlib port!) The serial port methodology is presented here for older iterations of Hamlib. To get access to native support you will need to compile Hamlib from source and install it. That is beyond the scope of this manual.

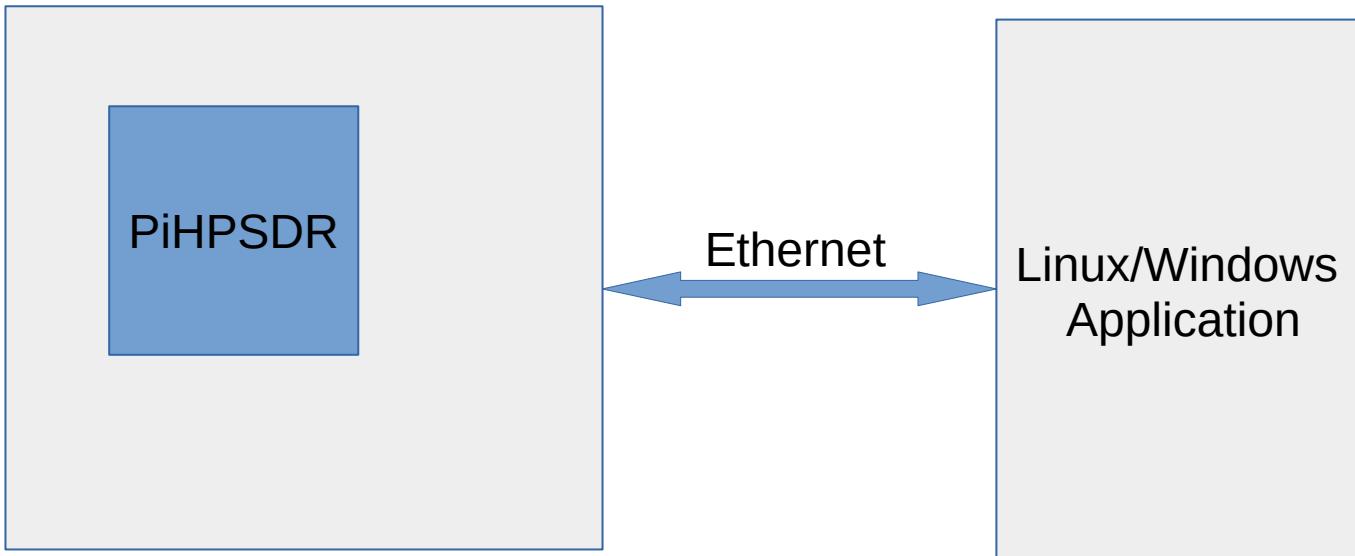

Use the Raspberry PI
TCP/IP Address
And set for Port 19090

Mapping a Serial Port to TCP/IP port in Linux

Perhaps the easiest way to do this is via the utility “socat” available in most Linux distributions. This utility is sort of a swiss army knife for interconnectivity, and one of its abilities is to map Linux Serial ports to TCP/IP ports.

To obtain “socat” and install it on an Ubuntu system type:

```
sudo apt-get install socat
```

To use it – first start PiHPSDR. You need to know the TCP/IP address of your Raspberry Pi. This will

be a 32 bit number formated as XX.XX.XX.XX. I'll use 192.168.1.73 in my examples – since that happens to be what I have my Raspberry Pi set too.

To run it – type:

```
socat pty,link=/tmp/vtty,raw tcp:192.168.1.73:19090&
```

This will do two things. It creates a fake serial port called /tmp/vtty that can be opened by most applications and acts just like a serial port.

The next step is to point your application at /tmp/vtty where you would normally choose a serial port and set it to talk to a TS-2000. It really is that simple!

This allows applications that are built to use Hamlib to talk to PiHPSDR.

Example: Set up GRIG to talk to PiHPSDR

```
grig --model=214 --rig-file=/tmp/vtty *
```



/tmp/vtty is a temporary file – it disappears as soon as socat ends.

Grig is built around the Hamlib radio access library. The TS-2000 is model 214 in Hamlib. Any application that uses Hamlib should be able to communicate with PiHPSDR by using /dev/vtty and choosing model 214 as the radio.

Something else to realize is that only one application can talk to PiHPSDR at a time on a given port. PiHPSDR can use any of 19090-19092 as the CAT port, and supports 3 simultaneous connections.

If you have the latest version of Hamlib that supports PiHPSDR natively – the command to start grig would be:

```
grig --model=240 --rig-file=192.168.1.73:19090 &
```

Example: Connect FLDIGI to PiHPSDR

FLDIGI can be connected to PiHPSDR using the native PiHPSDR interface built into the latest version of Hamlib. However, it polls PiHPSDR way to fast.

Have no fear – FLRIG is here. FLRIG is a companion application to FLDIGI that can act as a server for FLDIGI.


You can install FLRIG on with:
 sudo apt-get install flrig

You can install FLDIGI with:
 sudo apt-get install fldigi


Start FLRIG first with

flrig

No need to start it with sudo since it talks directly to PiHPSDR.

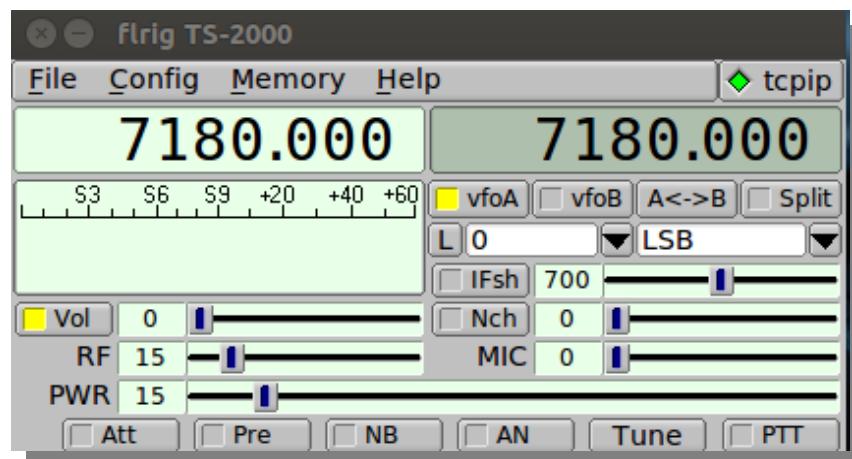

To set up FLRIG – Hit the Config button on the top of the application and Choose Config/Setup/Transceiver – the Window below will pop up.

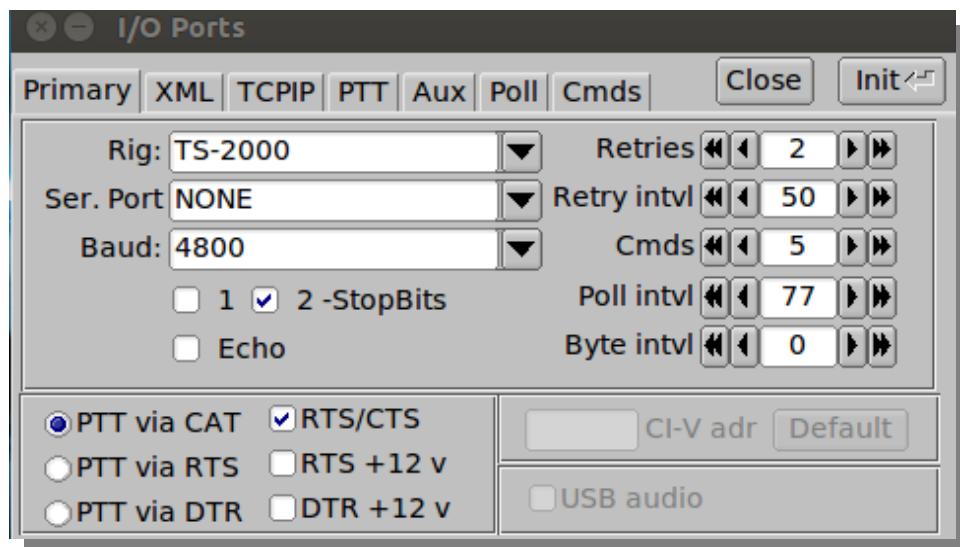


Use the arrow to the right of the Rig: box and slide it to TS-2000.

Also – check the PTT via CAT button in the lower left corner.

Hit Close

Now Choose Config/Setup/TCP/IP

The window below will pop up.

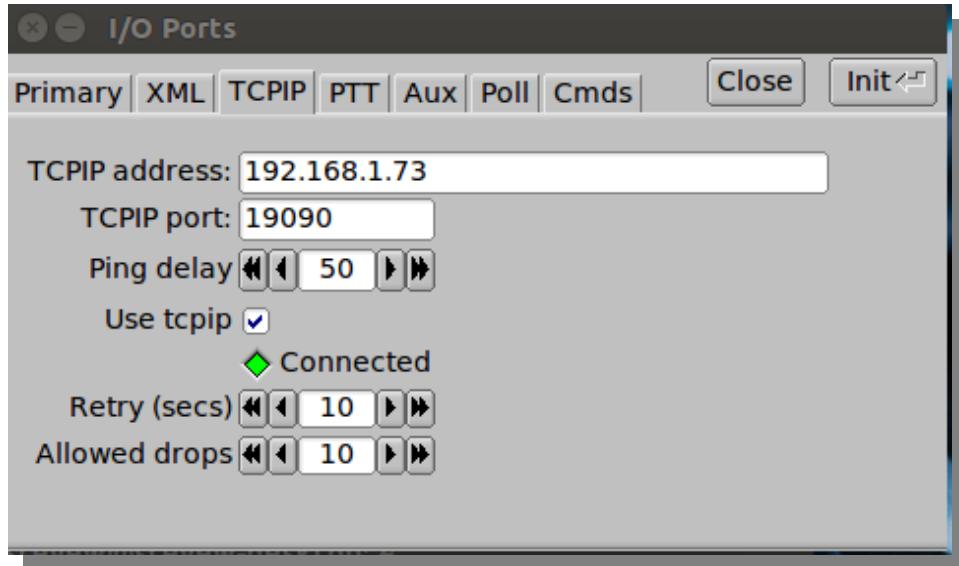

Select the TCPIP tab. Enter the TCPIP address of your Raspberry Pi – in our example you see 192.168.1.73. Type in the TCPIP box 19090 and that should do it. Hit the “Use tcip” button. If the connected light isn't green – hit the Init button in the upper right portion of the window.

Hit Close and you should have FLRIG up and controlling your PiHPSDR.

The Frequency should work by using the scroll wheel over the digit you want to change.

The volume, RF, PWR, and MIC sliders should all work.

The PTT should cause the radio to transmit.

The S Meter should register.

Now get FLDIGI running.

Type:

fldigi


Choose Configure/Rig Control

Hit the flrig tab and the window below will pop up.

Hit the “Enable flrig xcvr control with fldigi as client” button.

Note that the TCP/IP address is 127.0.0.1 – which is the same as the machine you are running flrig and fldigi on. The TCP/IP port 12345 should already be configured.

Also hit the “Flrig PTT keys modem”

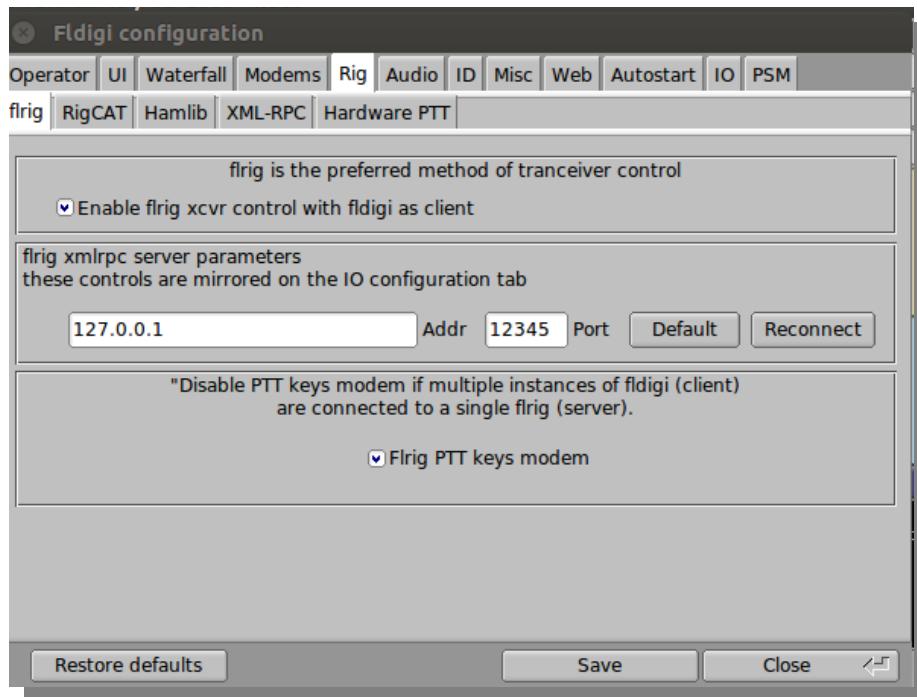

That is it.

You need to use actual audio cables from the Radio to your Linux computer for the audio as of now – but this should be all that is necessary for FLDIGI to talk to your radio!

Setting up rigctld

The Hamlib system must be installed to use some packages – specifically to run the rigctld daemon.

On Ubuntu:

```
sudo apt-get install libhamlib-utils  
sudo apt-get install libhamlib2
```

Note: These packages don't yet have PiHPSDR supported natively. It is necessary to compile the latest version from source and that is beyond the scope of this manual.

Multi-Client Support

PiHPSDR can communicate with up to 3 independent clients simultaneously. An example of this might be running FLRIG/FLDIGI with the logging program CQLOG.

First – make sure you have CQLOG installed.

On Ubuntu:

```
sudo apt-get install CQLOG
```

We need do three things to get cqrlg running.

- 1) Create a virtual terminal – see the instructions above about running cqrlg. There is one change here. We're going to aim the virtual serial port /tmp/vtty at TCP/IP port 19091 instead of 19090.
- 2) Start up the hamlib rigctld – this is a “daemon” in Unix parlance that is responsible for interfacing between applications and the virtual terminal using the internal hamlib protocol. Note that SOME applications have the hamlib software built in, while others use the daemon – cqrlg uses the daemon. The rigctld must be started using “sudo”
- 3) Start up cqrlg. Specifically do NOT use “sudo” for this command.

In a single xterm – you can start up both socat AND the rigctld daemon. Note again the use of “sudo” prior to the command AND note that the first program can be put into the background safely. Rigctld doesn't work if you do that..


```
teview@steview-desktop:~$ 
teview@steview-desktop:~$ 
teview@steview-desktop:~$ 
teview@steview-desktop:~$ 
teview@steview-desktop:~$ sudo socat pty,link=/dev/vtty,raw tcp:192.168.1.73:19091 &
1] 19226
teview@steview-desktop:~$ sudo /usr/bin/rigctld -m 214 -r /dev/vtty
```

In another xterm – start up cqrlg

Enter: cqrlg &

This will start up cqrlg talking the PiHPSDR radio using port 19091. Note that this can be safely put into the background using the ampersand operator.

Configure cqrlg as shown in the picture below:

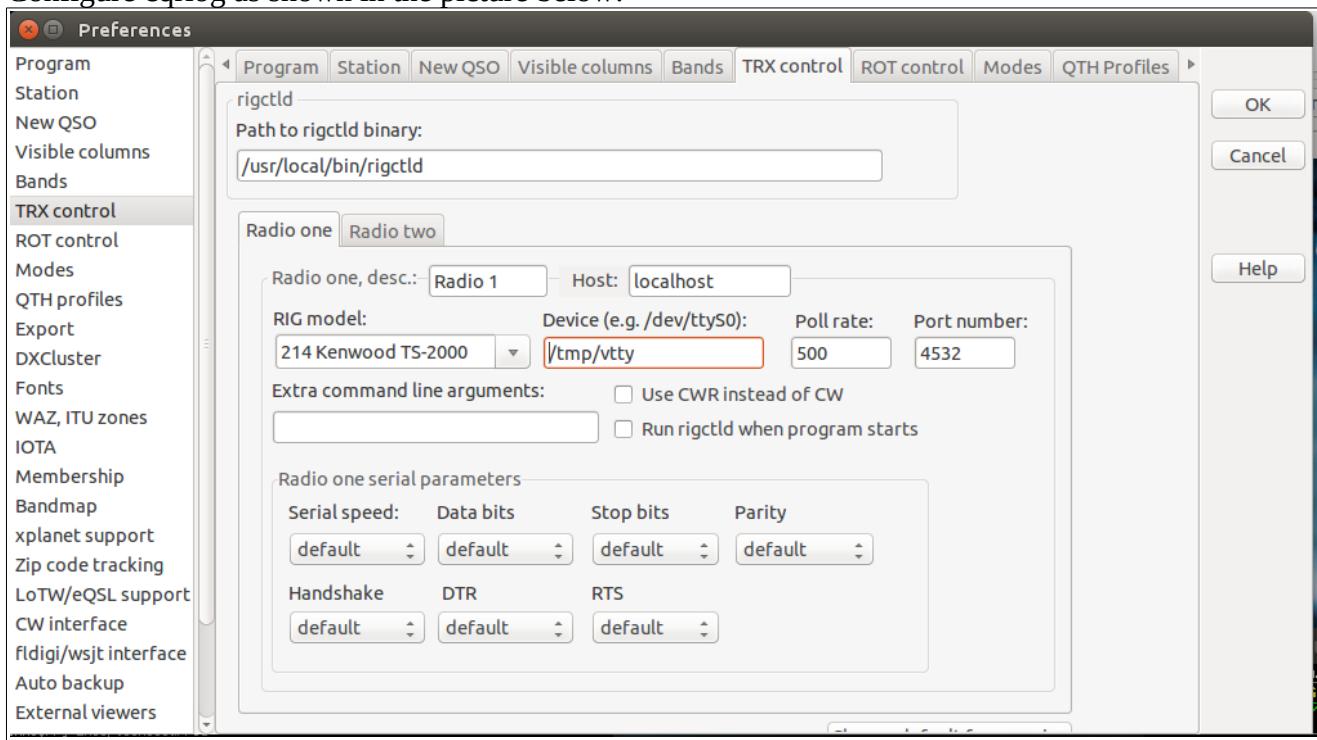

Note that we are choosing to NOT launch rigctld when the program starts – but rather starting it by hand.


Next – start up flrig as you have previously using port 19090. It should be configured correctly from the first time you used it. Since cqrllog spouts messages – you may need to use another xterm...

% flrig &

And this you can start up FLDIGI using the same xterm..

%fldigi

The picture below shows all applications running – using the two TCP/IP ports.

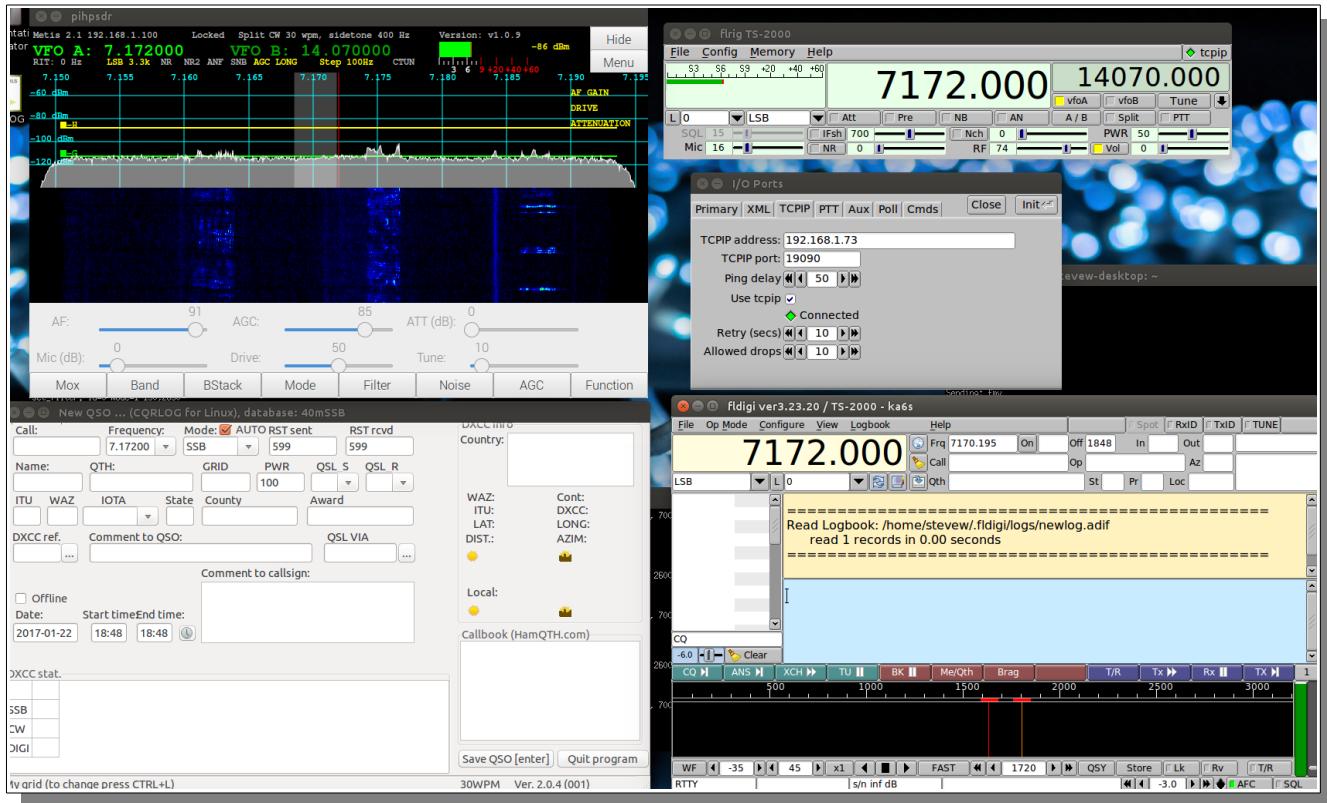

Running applications with the latest version of Hamlib


The biggest advantage of running applications through latest version of Hamlib is that the whole virtual terminal concept is removed! Applications can talk directly to PiHPSDR without any middleware. I'll use CQRLOG to illustrate the setup.

The first trick is to make rigctld runnable without being root. THIS IS A SECURITY HOLE – Proceed at your own risk! The following command allows rigctld to be run without being root...

sudo chown pi /usr/local/bin/rigctld

This makes the user “pi” owner of the rigctld daemon.

Next – start up cqrllog and set up its preferences as shown in the next picture.

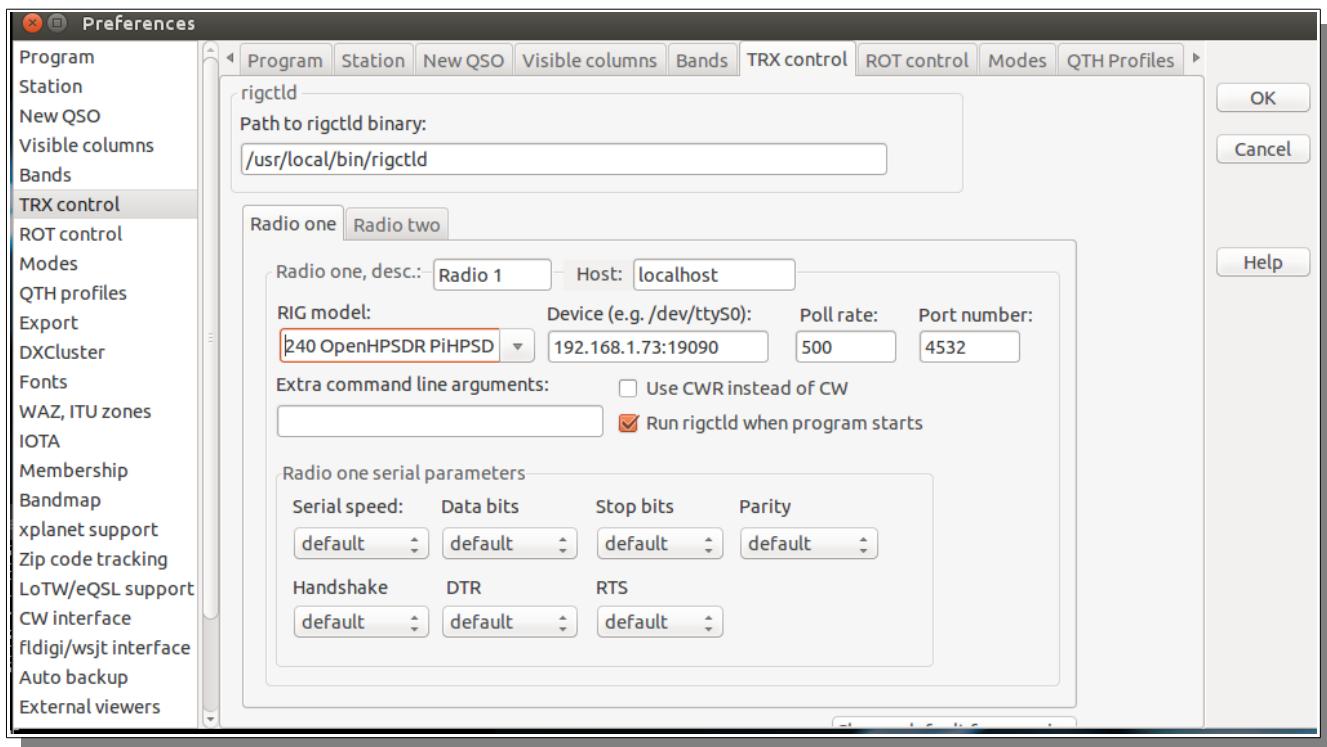

Things to note:

Rig Model is OpenHPSDR PiHPSDR – radio model 240.

Device: Use the TCP/IP/Port number – so 192.168.1.73:19090

The “Run rigctld when program starts” is checked – since we don't have to root to run rigctld.

It is also possible to start cqrllog on OTHER than the Raspberry Pi. The settings would be the SAME since the device entry is what actually aims the communications at the PiHPSDR TCP/IP port. Rigctld can be started on another machine and it will be able to communicate via TCP/IP directly to the PiHPSDR application.

KA6S Summary

PiHPSDR provides 3 separate TCP/IP channels on ports 19090, 19091, and 19092 which can communicate with other applications using an emulation of the TS-2000 command set.

Some applications require a virtual serial port – use the socat command run to create the virtual serial port.

The very latest version of Hamlib supports PiHPSDR natively. Radio model is 240, and uses TCPIP Address/Port Number instead of the serial port.

Other applications require the hamlib rigctld to be present – start /usr/bin/rigctld with sudo.

To run FLDIGI – use FLRIG as the server for FLDIGI since FLDIGI has issues talking to the virtual serial port.

15. Supported CAT Commands

AG Command Sets/Reads AF Slider

	1	2	3	4	5	6	7	8	9	10	
Set	A	G	P1	P2	P2	P2	;				Notes:
Read	A	G	;								P1 Ignored
Response	A	G	P1	P2	P2	P2	;				P2 000-255 linearly mapped to 0-100 range

FA Command Sets VFO A Frequency

	1	2	3	4	5	6	7	8	9	10	
Set	F	A	P1	Frequency in Hertz (11- digits)							
	P1	P1	P1	;							Note that blank digits should be 0
Read	F	A	;								Always reads VFO_A
Response	F	A	P1								
	P1	P1	P1	;							

FB Command Sets VFO B Frequency

	1	2	3	4	5	6	7	8	9	10	
Set	F	B	P1	Frequency in Hertz (11- digits)							
	P1	P1	P1	;							Note that blank digits should be 0
Read	F	B	;								Reads VFO_A when one receiver operation is selected.
Response	F	B	P1								
	P1	P1	P1	;							

FR Command Sets/Reads which VFO is active receiver

	1	2	3	4	5	6	7	8	9	10	
Set	F	R	P1	;							P1=0 – VFO A 1=VFO B
Read	F	R	;								Only in 2 receiver mode will cause frequency swapping to between
Response	F	R	P1	;							VFO A and VFO B and if Transmit != Receive VFO – Split will set.

FT Command Sets/Reads which VFO is active transmitter

	1	2	3	4	5	6	7	8	9	10	
Set	F	T	P1	;							P1=0 – VFO A 1=VFO B
Read	F	T	;								Sets Split if Active Transmitter not the same as active receiver
Response	F	T	P1	;							

FW Command Sets/Reads receive filter width (Only for CW mode)

	1	2	3	4	5	6	7	8	9	10	
Set	F	W	P1	P1	P1	P1	;				P1 – (0000-9999 in Hz)
Read	F	W	;								Frequency are mapped from TS2000 to PiHPSDR
Response	F	W	P1	P1	P1	P1	;				CW 25/50→50 100→100 250→300 400→400 500→500 600→600 750→1000 800→1000

GT Command Set/Read AGC constant values

	1	2	3	4	5	6	7	8	9	10
Set										
Read	G	T	;							
Response	G	T	P1	P1	P1	;				

TS-2000 legal values 000-020

PiHPSDR = 000 = Off, 005=Fast, 010=Medium
010=Medium, 015=Slow, 020=Long

Note: Hamlib will send values as N*84 -
PiHPSDR can detect commands using
this scale and SET its internal state
accordingly – but can only read back legal
values according to the 000-020 mapping.

ID Command Read the transceiver ID number

	1	2	3	4	5	6	7	8	9	10
Set										
Read	I	D	;							
Response	I	D	P1	P1	P1	;				

P1 = 019: TS-2000

IF Command Sets VFO A Frequency

	1	2	3	4	5	6	7	8	9	10
Set										
Read	I	F	;							
Response	I	F	P1	P1	P1	P1	P1	P1	P1	P1
	P1	P1	P1	P2	P2	P2	P2	P3	P3	P3
	P3	P3	P3	P4	P5	P6	P7	P7	P8	P9
	P10	P11	P12	P13	P14	P14	P15	;		

P1 = Frequency in Hz (11 digits)

P2 = Step in Hertz (5 digits)

P3 = Active Receiver RIT in Hertz (5 digits)

P4 = 0: Rit Off 1: Rit On

P5 = 0: Rit Off 1: Rit On

P8 = 0: Mox=0 1: Mox=1

P9 = Radio Mode (See MD command)

P12 = 0: Split off 1: Split on

All other parameters are 0.

KS Command Sets and reads keyer speed

	1	2	3	4	5	6	7	8	9	10
Set	K	S	P1	P1	P1	;				
Read	K	S	;							
Response	K	S	P1	P1	P1	;				

P1 – 010 (min) – 060 (max) in WPM

LK Command Sets/reads the lock function

	1	2	3	4	5	6	7	8	9	10
Set	L	K	P1	P2	;					
Read	L	K	;							
Response	L	K	P1	P2	;					

Notes:

P1 = 0: Unlock 1: Lock

P2 ignored

MD Command Sets/Reads radio Mode

	1	2	3	4	5	6	7	8	9	10	
Set	M	D	P1	;							P1 = 1: LSB 2: USB 3: CWU 4: FMN 5: AM
Read	M	D	;								6: DIGL 7: CWL 9: DIGU
Response	M	D	P1	;							

MG Command Sets/Reads Mic Gain Slider

	1	2	3	4	5	6	7	8	9	10	
Set	M	G	P1	P1	P1	;					P1 – 000 (min) – 100 (max)
Read	M	G	;								
Response	M	G	P1	P1	P1	;					

NB Command Sets/Reads the Noise Blanker function status

	1	2	3	4	5	6	7	8	9	10	
Set	N	B	P1	;							P1 = 0: Off 1: On
Read	N	B	;								
Response	N	B	P1	;							

NR Command Sets/Reads the Noise Blanker function status

	1	2	3	4	5	6	7	8	9	10	
Set	N	R	P1	;							P1 = 0: Off 1: NR On 2: NR2 On
Read	N	R	;								
Response	N	R	P1	;							

NT Command Sets ANF bit (Autonotch in TS2000)

	1	2	3	4	5	6	7	8	9	10	
Set	N	T	P1	;							P1= 0: ANF Off 1: ANF On
Read	N	T	;								
Response	N	T	P1	;							

PC Command Sets/Reads Drive Slider

	1	2	3	4	5	6	7	8	9	10	
Set	P	C	P1	P1	P1	;					P1 – 005 (min) – 100 (max)
Read	P	C	;								
Response	P	C	P1	P1	P1	;					

RD Command Move RIT off frequency Down

	1	2	3	4	5	6	7	8	9	10	
Set	R	D	P1	P1	P1	P1	P1	;			P1,P2 ignored
Read	R	D	;								decrements rit_frequency by rit_increment
Response	R	D	P2	;							

RG Command Sets/Reads AGC slider

	1	2	3	4	5	6	7	8	9	10
Set	R	G	P1	P1	P1	;				
Read	R	G	;							
Response	R	G	P1	P1	P1	;				

P1 = 000 (min) to 255 (max) linearly scaled to -20 to 140 range of slider

RT Command Sets/Read the RIT function status

	1	2	3	4	5	6	7	8	9	10
Set	R	T	P1	;						
Read	R	T	;							
Response	R	T	P1	;						

P1 – 0: Off 1: On
Returns state of active receiver RIT

RU Command Move RIT off frequency Up

	1	2	3	4	5	6	7	8	9	10
Set	R	U	P1	P1	P1	P1	P1	;		
Read	R	U	;							
Response	R	U	P2	;						

P1,P2 ignored
increments rit_frequency by rit_increment
of active receiver

RX Command Set Mox to 0 (turn off transmitter)

	1	2	3	4	5	6	7	8	9	10
Set	R	X	;							
Read										
Response										

SD Command Set /Read CW Breakin Delay

	1	2	3	4	5	6	7	8	9	10
Set	S	D	P1	P1	P1	P1	P1	;		
Read	S	D	;							
Response	P1	P1	P1	P1	P1	;				

P1 = 0000-1000 ms Breakin delay
0000= Set Full Breakin
If PiHPSDR has values above 1000 internally
a value of 1000 is reported

SM Command Reads the S Meter

	1	2	3	4	5	6	7	8	9	10
Set										
Read	S	M	P1	;						
Response	S	M	P1	P2	P2	P2	P2	;		

P1 – 0: Main, 1: Sub
P2 = 0000 (min) to 0030 (max) main xcvr
0000 (min) to 0015 (max) sub xcvr

ST Command Sets/reads the frequency step

	1	2	3	4	5	6	7	8	9	10
Set	S	T	P1	P1	;					
Read	S	T	;							
Response	S	T	P1	P1	;					

Note that internal value is categorized into These slots for the read operation, Set uses the assigned value.

P1 – SSB 00-1 KHz 01: 2.5KHz 02 5KHz
 03: 10KHz
 AM/FM: 00: 5KHz 01: 6.25KHz
 02: 10KHz 03: 12.5KHz
 04: 15KHz 05: 20KHz 06: 25KHz 07: 30KHz
 08: 50KHz 09: 100KHz

TX Command Set the transmitter MOX

	1	2	3	4	5	6	7	8	9	10
Set	T	X	;							
Read										
Response										

VD Command Set/Read Vox Delay

	1	2	3	4	5	6	7	8	9	10
Set	V	D	P1	P1	P1	P1	;			
Read	V	D	;							
Response	V	D	P1	P1	P1	P1	;			

P1 – 0000 (min) to 1000 (max)
 Values are limited to these boundaries

VG Command Set/Read Vox Threshold (Vox GAIN on TS2000)

	1	2	3	4	5	6	7	8	9	10
Set	V	D	P1	P1	P1	;				
Read	V	D	;							
Response	V	D	P1	P1	P1	;				

Set Vox Threshold
 P1 = (ooo) min to (oo9) max



16. Apache Support

Apache Labs International Support

Technical support for ANAN-10 from the factory is available via the Apache Labs Yahoo Group

<http://groups.yahoo.com/group/apache-labs/>

or directly via email <support@apache-labs.com>

Apache Yahoo Support Group

<http://groups.yahoo.com/group/apache-labs/>

OpenHPSDR Group

Instructions relating to joining the OpenHPSDR Group reflector are here:

<http://lists.openhpsdr.org/listinfo.cgi/hpsdr-openhpsdr.org>

The OpenHPSDR archives may also be searched here:

<http://lists.openhpsdr.org/mmsearch.cgi/hpsdr-openhpsdr.org>

The latest version of the OpenHPSDR User Manual can be obtained from

<http://openhpsdr.org/documents.php> Author Phil Harman VK6PH

17. Apache Service and Repair

1023 Tower B4, Spaze I-Tech Park

Sector - 49, Sohna Road

Gurgaon - 122001


Haryana, India

Tel: 91-0124-4245173/4/5 (10AM - 6PM IST]

Email: support@apache-labs.com

Website: <http://www.apache-labs.com>

Early prototypes by John Melton G0ORX (circa: 2015)

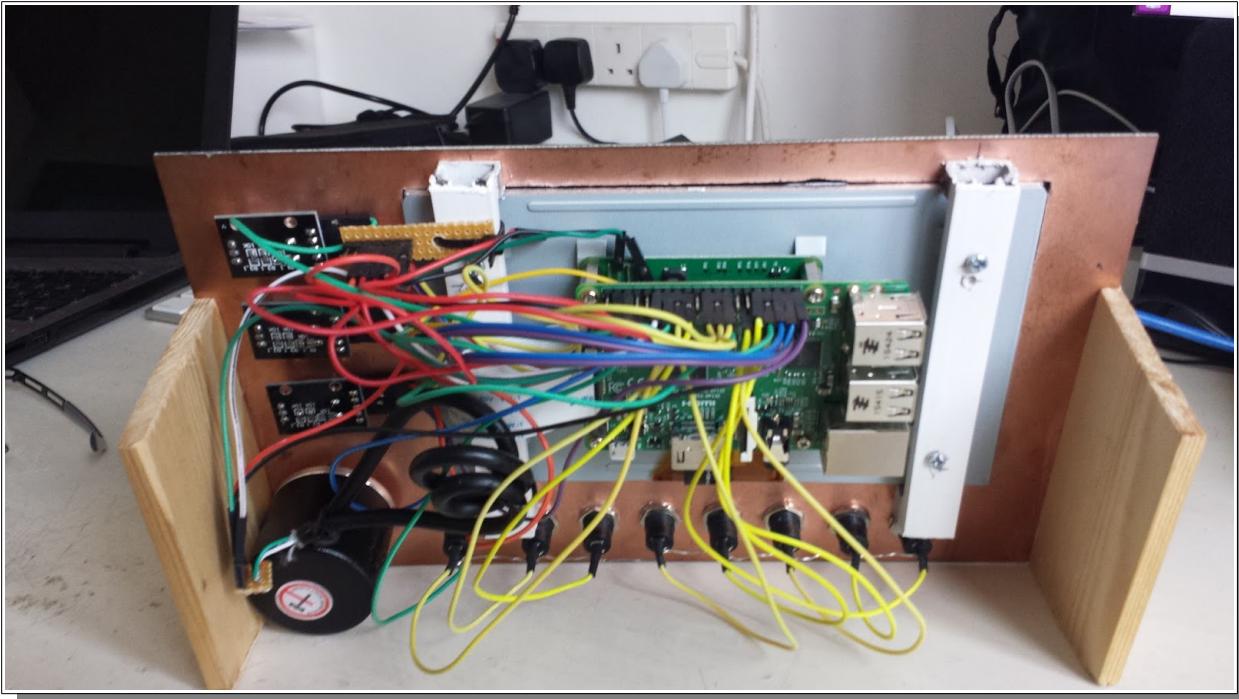

Note: pihpsdr is OpenSource. If you would like to run the program on a Linux system, the source, binaries, and documentation are located here: <http://g0orx.blogspot.com/>

NOTES

Alphabetical Index

1. Introduction.....	5
10. Tuning.....	54
100BT.....	6
100BT LAN connection.....	6
11. TUNE/SWR/FWD Power.....	54
12. Appendix.....	55
12. Appendix.....	55
13. Reference materials.....	57
13.8vdc 2.5A.....	6
16. Apache Support.....	71
17. Apache Service and Repair.....	71
3 band graphic equalizer.....	28
3. Front panel controls.....	8
4 Toolbars.....	34
5. Side panel connections.....	10
5Switch or Encoder.....	55
6. Quick Start Instructions.....	11
7. Discovery Menu.....	12
8. Main Menu.....	14
9. On-Screen Controls and toolbar Buttons.....	32
AF Gain Slider.....	49
AGC Gain Slider.....	51
AGC Hang Threshold.....	23
ALC Peak Average or GAIN.....	30
Apache Labs International Support.....	71
Apache Labs LLC.....	1
Apache Service and Repair.....	71
Apache Support.....	71
Apache Yahoo Support Group.....	71
APIPA.....	6
Appendix.....	55
Audio CODEC.....	19
Automatic Antenna Tuner.....	24
Averaging.....	26
backup of your Operating System.....	7
binaries.....	11
CAT 5/6 Ethernet cable.....	11
change the sample rate.....	17
Close.....	15

Close Menu button.....	14
close this dialog box.....	15
compile.....	11
Config/Setup/TCPIP.....	61
Configure up to 8 transverters.....	27
Connect FLDIGI to PiHPSDR.....	59
Controller software requirements:.....	7
CQLOG.....	62p.
CW Break In.....	21
CW Keyer.....	21
CW KEYER MODE A.....	21
CW KEYER MODE B.....	21
CW KEYER STRAIGHT.....	21
CW Speed.....	21
Default assignments of switches and rotary encoders.....	8
Detector.....	26
direct Freq entry for each VFO.....	33
Direct frequency entry.....	44
Direct Frequency Entry menu.....	33
Disable PA.....	27
Discover.....	12
Discover Ethernet Connections to RPi.....	12
Discover protocol.....	12
Discovery Menu.....	12
Display Panadapter.....	26
Display Sliders.....	26
Display Waterfall.....	26
Dither.....	17
documentation.....	7, 11
E1.....	8
E2.....	8
E3.....	8
E4.....	8
Early prototypes.....	72
Encoders and Switches.....	55
equalizers can be enabled.....	28
executable binaries.....	7
Exit.....	15
exit piHPSDR back to the Raspberry Pi Desktop.....	15
Exit piHPSDR button.....	15
Factory Switch/Encoder/Touch activation.....	55

Fill Panadapter.....	25
Filter.....	19
FLDIGI – use FLRIG as the server.....	65
FLRIG.....	60
FM TX Pre-Emphasis.....	19
FN.....	8
FN Switch.....	34
Four Function Toolbar menu.....	39
Frames Per Second.....	25
Front Panel Display.....	9
Full Time and Mem Time.....	39
Full Tune milliseconds.....	24
Function.....	55
Function button.....	39
function touch screen.....	34
fused 12vdc.....	11
GØORX Friedrichshaven pdf and video.....	57
Gamma.....	23
GPIO.....	55
GPIO Default assignments.....	56
GPIO default connections.....	13
GPIO pin Assignments (RaspberryPi).....	57
grig.....	59
Hamlib.....	58
Hang.....	31
Hardware Setup.....	11
HIDE.....	52
High.....	28
holding then dragging.....	54
Install pdf document.....	7
John Melton GØORX/N6LYT.....	1
K5SO.....	1
KA6S Summary.....	65
Keys reversed.....	21
latest version of pihpsdr source code.....	7
Linear.....	23
Linux.....	11
LO Freq.....	27
Local Audio Output.....	17
Local Microphone Input.....	19
Log.....	23

Low.....	28
Main screen HIDE.....	52
Mapping a Serial Port to TCP/IP port in Linux.....	58
Max Freq.....	27
Memory Tune milliseconds.....	24
Menu →.....	19
Menu → ANT.....	22
Menu → CW.....	21
Menu → Display.....	25
Menu → DSP.....	23
Menu → Equalizers.....	28
Menu → Exit piHPSDR.....	15
Menu → Meter.....	30
Menu → OC.....	24
Menu → PA Gain by Band.....	20
Menu → R.....	16
Menu → Radio.....	16
Menu → Rx.....	17
Menu → Sample Rate for new protocol.....	18
Menu → Step.....	29
Menu → TX.....	19
Menu → VOX.....	31
Menu → XVTR.....	27
Menu button.....	14
Menu or Toolbar → Meter.....	53
Meter values appear in the upper right hand corner of the display.....	30
MIC Gain Slider.....	49
Microphone Level.....	31
Mid.....	28
Min Freq.....	27
minimize the pihpsdr application window.....	52
minimum 12vdc 2A.....	6
MMSE.....	23
Mouse.....	54
mouse/keyboard for easy access.....	8
Moving the scroll wheel.....	54
MOX.....	54
Multi-Client Support.....	62
New Ethernet Protocol.....	17p.
NOTES.....	73
NR/NR2/ANF.....	23

NR2 AE Filter.....	23
NR2 Gain Method.....	23
NR2 NPE Method.....	23
NRØV.....	1
on-panel switch.....	34
On-Screen Controls.....	32
Open Collector Aux I/O connectors.....	24
Open Collector Menu.....	39
Open Collector outputs.....	24
OpenHPSDR archives.....	71
OpenHPSDR Group.....	71
OpenHPSDR Hardware and Software Projects.....	1
OpenSource.....	11
Original Protocol.....	18
OSMS.....	23
PA Drive Slider.....	50
Panadapter High.....	25
Panadapter Low.....	25
piHPSDR Controller.....	1
PiHPSDR listens on Ports 19090-19092 for TCP/IP connections.....	58
Pihpsdr program START button.....	13
Post AGC.....	23
Power.....	8
Pre AGC.....	23
Preamp.....	28
PTT via CAT button.....	60
Quick Start Instructions.....	11
Random.....	17
RealVNC connection.....	8
Reboot.....	15
reboot the Raspberry Pi.....	15
Receive Attenuation Slider.....	51
Receiver Incremental Tuning.....	47
reverse the direction of Tuning on the VFO.....	57
RIT.....	47
RIT Step.....	33
Running applications with the latest version of Hamlib.....	64
S-Meter Peak and Average.....	30
S1.....	8
S2.....	8
S3.....	8

S4.....	8
S5.....	8
S6.....	8
Sample Rate.....	17
Set up GRIG to talk to PiHPSDR.....	59
Setting up rigctld.....	62
Shutdown.....	15
Shutdown the Raspberry Pi.....	15
Sidetone Freq.....	21
Sidetone Level.....	21
socat.....	58
Software Setup.....	11
source.....	11
Start button will start the radio.....	13
Start button will start the radio – on the selected Ethernet interface.....	13
Step.....	29
Steve Wilson KA6S special addition for.....	58
Steve Wilson KA6S special addition for Fldigi.....	58
Subnet.....	12
sudo apt-get install fldigi.....	60
sudo apt-get install flrig.....	60
sudo apt-get install socat.....	58
The VFO encoder knob.....	54
Threshold.....	31
Title.....	27
Toolbar VFO Lock.....	40
Toolbar - Bandstack.....	36
Toolbar – AGC.....	38
Toolbar – Band selection.....	35
Toolbar – Filter.....	37
Toolbar – Function button.....	34, 39
Toolbar – Mode.....	37
Toolbar – MOX.....	35
Toolbar – NOISE.....	38
Toolbar A>B A<B A<>B.....	42
Toolbar CTUN.....	41
Toolbar CTUN – Click Tuning.....	41
Toolbar FREQ.....	44
Toolbar MEM.....	45
Toolbar SPLIT.....	43
Toolbox VOX.....	46

Touch.....	33
Touch Direct Frequency Entry.....	33
Touch Screen.....	54p.
Touch selection of VFO-A (Rx0).....	32
Touch selection of VFO-B (Rx1).....	32
Touching and dragging on the panadapter.....	54
Transceiver interfaces.....	12
Transmit bandwidth.....	19
Transmit out of band.....	20
TS-2000 protocol.....	58
TUN.....	8
TUNE.....	24, 54
Tune Drive Slider.....	50
TUNE/SWR/FWD power.....	54
two receivers with individual sample rates.....	18
TX Equalizer and RX Equalizer.....	28
unction button.....	34
upper and lower frequencies.....	19
USB Audio INPUT device.....	19
Users Guide.....	1
Using PiHPSDR with other applications:.....	58
VFO Encoder.....	54
VFO Step.....	33
VFO Tuning rate.....	29
VFO-A.....	33
VFO-B.....	33
VK6PH.....	1
W5WC.....	1
Waterfall Automatic.....	25
Waterfall High.....	25
Waterfall Low.....	25
Weight.....	21
Weight – sets the dot/dash weighting.....	21
Wireless and Ethernet connections.....	13
.....	17p., 40p., 47
(individual receiver settings.....	17
Buttons.....	32
February 2017 pihpsdr software release.....	17
Menu button.....	14
.....	57
"New Ethernet Protocol" in beta test shows two receivers with individual sample	

rates.....18

