


### **Required Components**



#### **BOM**

- 1. 1X 470K Resistor
- 2. 1X 22K Resistor
- 3. 1X Texas Instruments CD74HC73E Flip-Flop
- 4. 1X 1uF Capacitor
- 5. 1X #4-3/8" Pan Head Screw
- 6. 1X OpenAT-Switch-Latch PCB (Printed Circuit Board)
- 7. 1X CR2032 Battery holder
- 8. 2X IRLD014PBF MOSFET
- 9. 1X 10K Resistor
- 10. 1X 0.1uF Capacitor
- 11. 2X SJ-3566AN 3.5mm Audio Stereo Jack
- 12. 1X Slide Switch
- 13. 1X LED (green, super bright)
- 14. 1X 3D Printed Enclosure Top
- 15. 1X 3D Printed Enclosure Bottom
- 16. 1X 3D Printed LED Spacer
- 17. 4X #4-3/8" Pan Head Screw
- 18. 1X 3D Printed Switch Slide
- 19. 1X 3D Printed Battery Cover

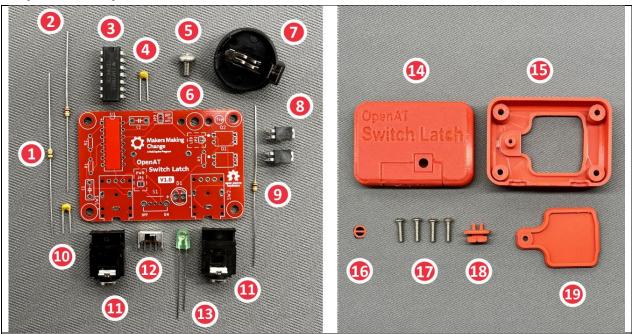

### **Required Tools**

- Screwdriver Medium Phillips
- Needle nose pliers
- Side Cutters
- Soldering Iron
- 60/40 rosin core solder for electronics
- Multimeter

### **Required Personal Protective Equipment (PPE)**


- Safety glasses
- Vinyl gloves (if skin sensitivity to rosin or have dermatitis)



### **Assembly Instructions**


#### Step 1

Identify the 470K resistor (Colour code stripes: Yellow, Violet, Yellow). Bend both leads of the resistor straight down, so that it appears like in the photo below.

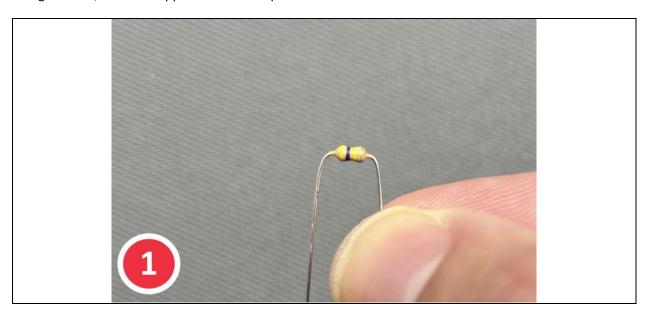

#### Step 2

Insert the 470K resistor (Colour code stripes: Yellow, Violet, Yellow) into the holes marked "R1" on the PCB. Ensure the body of the resistor is flat against the circuit board. Bending the wires apart once it's in position will help keep it in place during soldering.

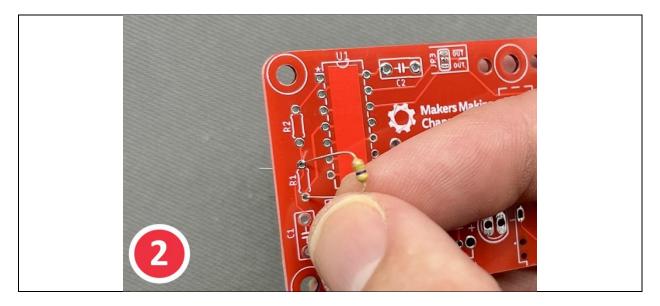




Step 3
Solder the two wires of resistor R1 to the circuit board.




Step 4
When joints are soldered, trim the wire ends with the flat side of side cutters. Trim right on top of the solder peak.

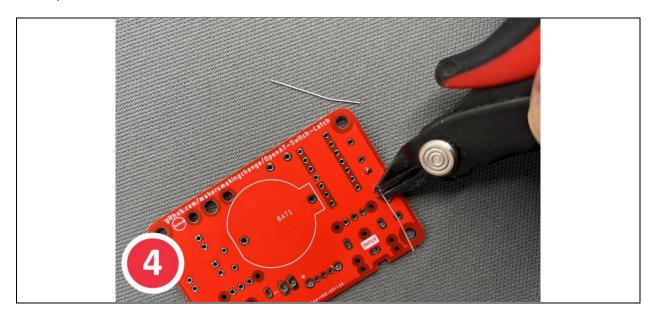




#### Step 5

Identify the 22K resistor (Colour code stripes: Red, Red, Orange). Bend the wire leads straight down, as before, in preparation for soldering.

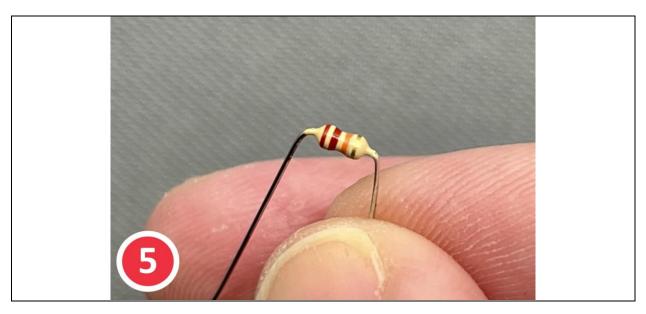


Step 6
Insert the 22K resistor (Colour code stripes: Red, Red, Orange) into the holes marked "R2" on the PCB.
Again, bend the leads after, to keep it in place during soldering.

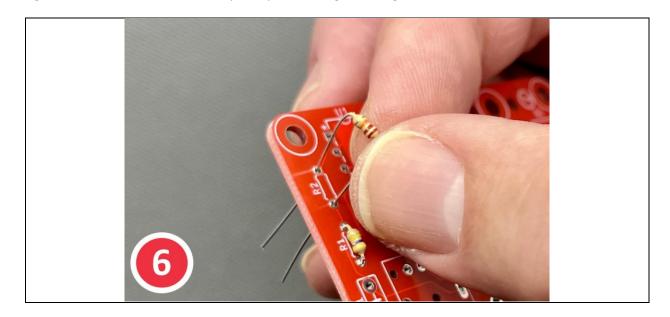




Step 7
Solder the two wires. When done, trim the wire ends with side cutters, as before.

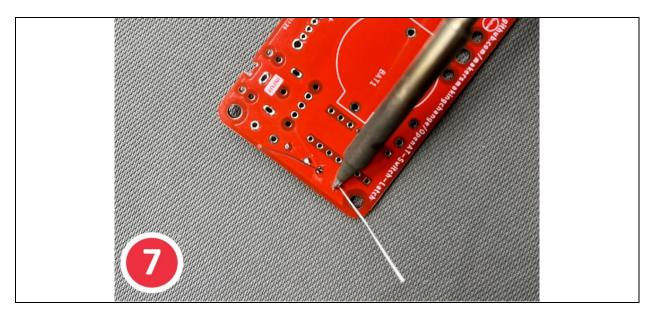


Step 8 Identify the 10K resistor (Colour code stripes: Brown, Black, Orange). As with the previous resistors, bend the wires straight down.

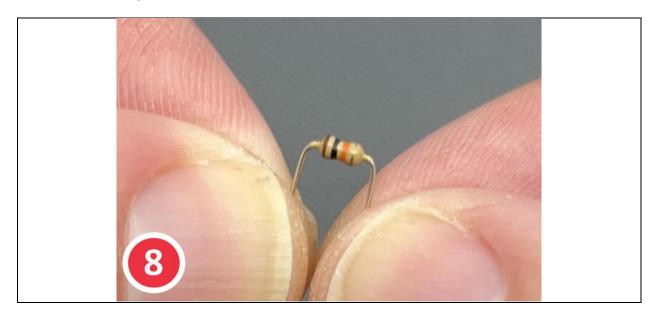




### Step 9

Insert the 10K resistor (Colour code stripes: Brown, Black, Orange) into the holes marked "R3" on the PCB. Once again, bend the wires apart.

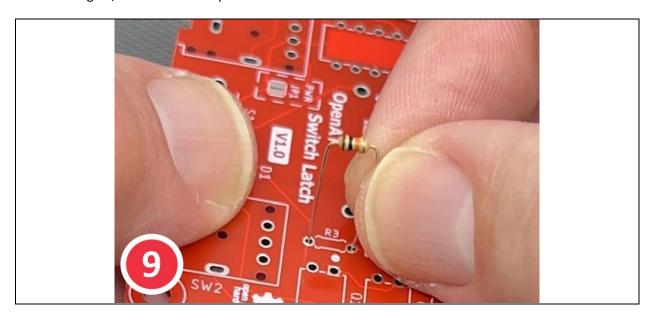


Step 10 Solder the two wires. When done, trim the wire ends with side cutters.

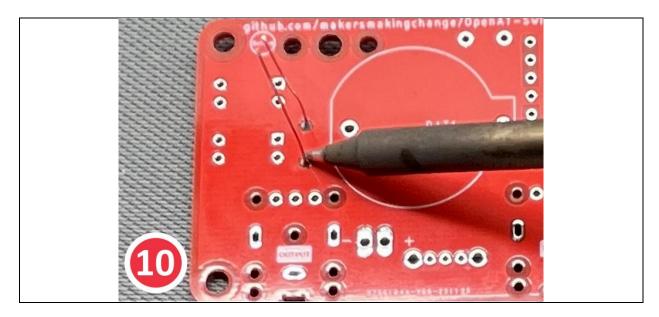



#### Step 11

Insert 0.1uF capacitor (the smaller capacitor marked "104") into holes for location C1 on the PCB.

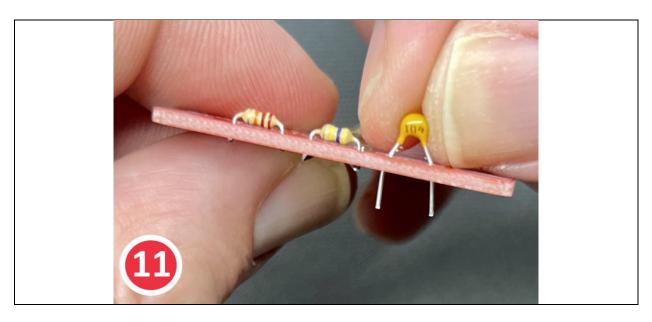


Step 12 When done, trim the wire ends with side cutters.






Step 13
Insert 1uF capacitor (the larger capacitor marked "105") into holes for location C1 on the PCB.

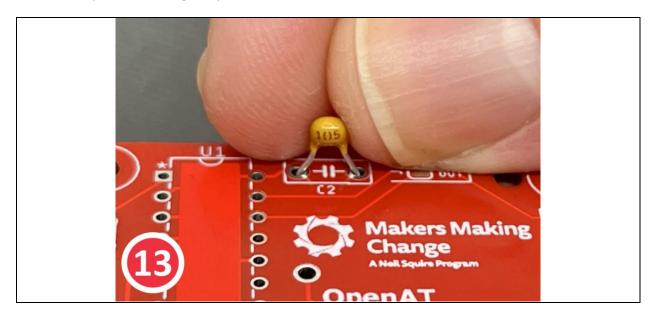


Step 14 When done soldering, trim the wire ends using side cutters.

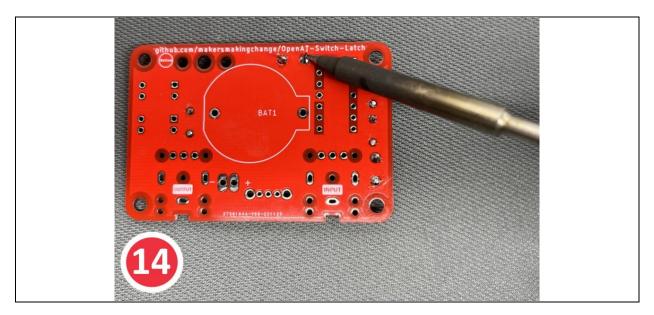



#### Step 15

Insert the Switch into location S1 on the circuit board. Ensure the switch toggle is facing towards the edge of the board as shown below. To aid in soldering (next step), it may help to use tape or Blue Tack to hold the switch in position.

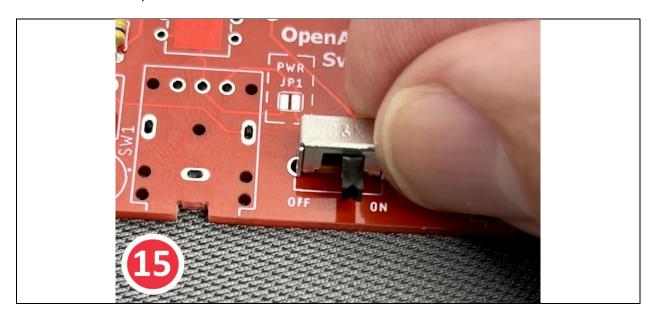


Step 16
Solder the switch into place by soldering middle terminal first. Confirm the switch is aligned on the component side of the board, and then solder the remaining terminals.





#### Step 17

Slide the spacer onto the LED, and then slide the LED into location D1 on the board. Important! The longer wire of LED (positive lead) MUST be placed into the hole marked + (as shown in the photo below).

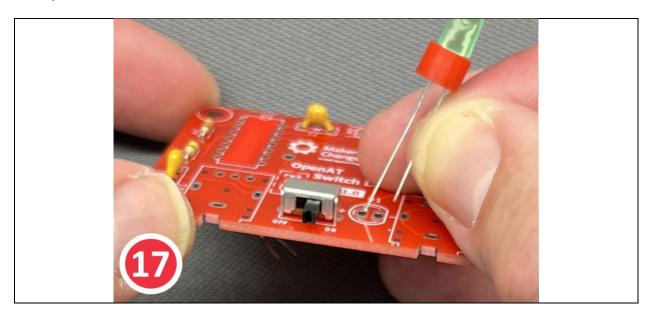


Step 18
Before soldering, hold the LED into position, so that the body of the LED is pressing against the spacer and the circuit board.






#### Step 19

Solder the LED into place by soldering the longest lead (+) first. Confirm the LED is properly positioned on the component side of the board, and then solder the remaining lead. When soldering is complete, trim off the LED leads with side cutters.

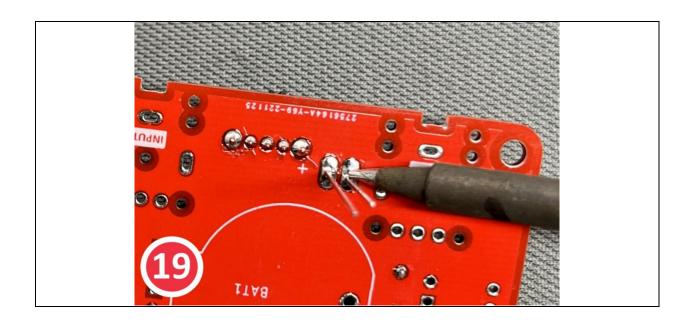


Step 20 Insert both jacks into positions SW1 and SW2 (shown). Jacks should be held in place during soldering (next step).

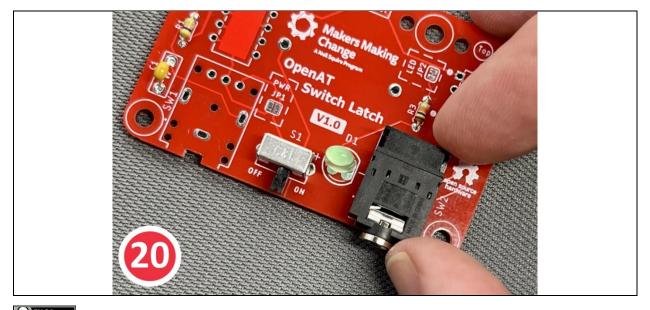




#### Step 21

Solder one jack pin first. Confirm the jack is properly positioned on the component side of the board, and then solder the remaining pins. Repeat these steps for the second jack.

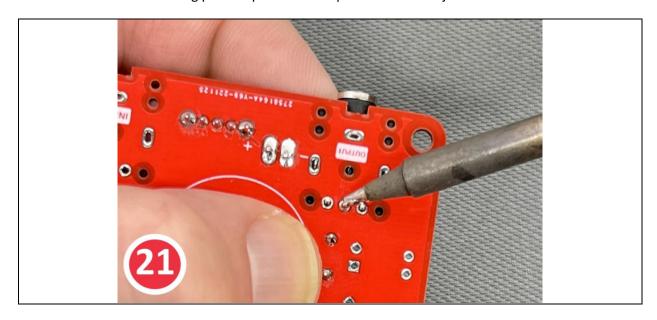

### Step 22


Insert both MOSFETS into positions marked Q1 and Q2. IMPORTANT: The MOSFETS are polarized and must be oriented correctly. The tabbed side of the MOSFETS should go in closest to the right edge of the PCB. Note, the pins on the MOSFET may also need to be bent inwards slightly, to fit into the holes of the circuit board.

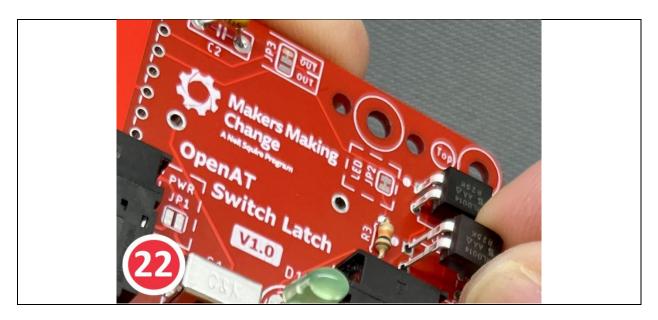




#### Step 23

Solder one MOSFET pin first. **Confirm the MOSFET is properly oriented** on the component side of the board, and then solder the remaining pins. Repeat these steps for the second MOSFET.

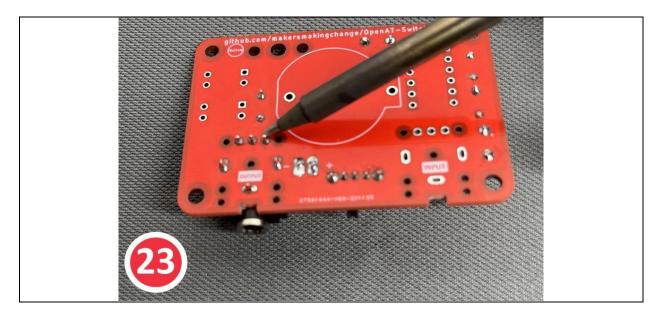

#### Step 24


Insert the IC into position U1. **IMPORTANT: The IC polarized and must be oriented correctly.** Pin 1 of the IC should go in closest to the left edge of the PCB. Note the physical U-shaped notch on the IC should go over the U shaped notch printed on the PCB (see photo below). Note, also, the pins of the IC may need to be bent inwards slightly, to fit into the holes of the circuit board.

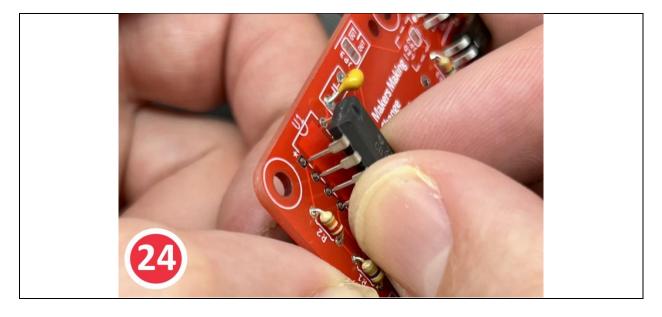




#### Step 25

Solder one IC pin first. **Confirm the IC is properly oriented** (see previous step). If the IC is positioned correctly, solder the remaining pins. Repeat these steps for the second MOSFET.

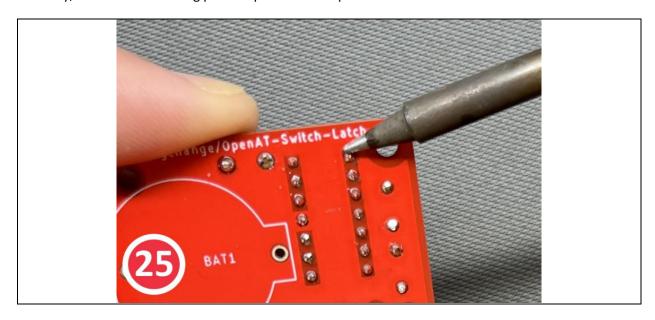

#### Step 26

Insert the battery holder on the **solder side** of the circuit board. Note the rectangular end of the battery holder should match the corresponding outline printed on the circuit board.

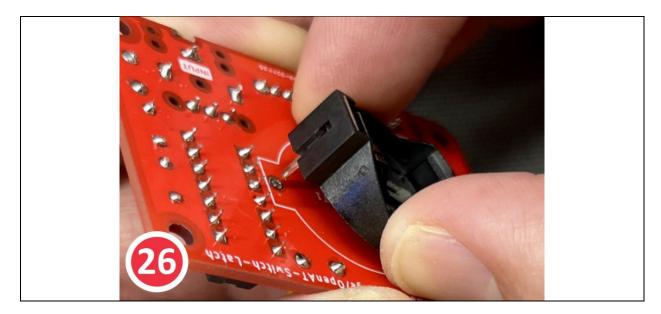




#### Step 27

Solder one battery holder pin first. Battery holder should match the corresponding outline printed on the circuit board



#### Step 28 (Testing)

Insert a 3V lithium coin cell, type CR2032, into the holder. Ensure the positive (+) side of the battery is facing up, and that the battery is fully inserted.

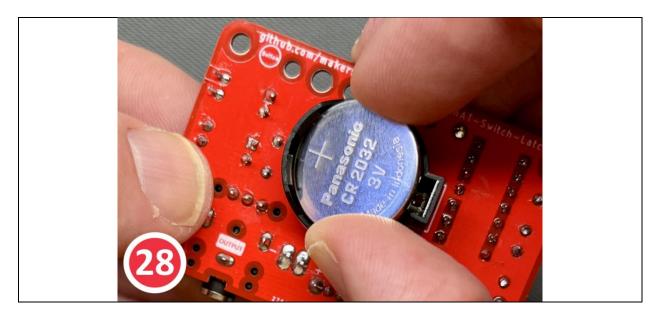




#### Step 29 (Testing)

Insert the 3.5 mm plug end of an assistive switch into the input jack. Turn on the power switch (move switch toggle right) Tap the button. The LED should turn on (or off), and stay that way, until the next button tap.



Step 30
Position the Enclosure Top with the 'OpenAT Switch Latch' logo facing down. Insert the Switch Slide into the groove and slide it into the off position.

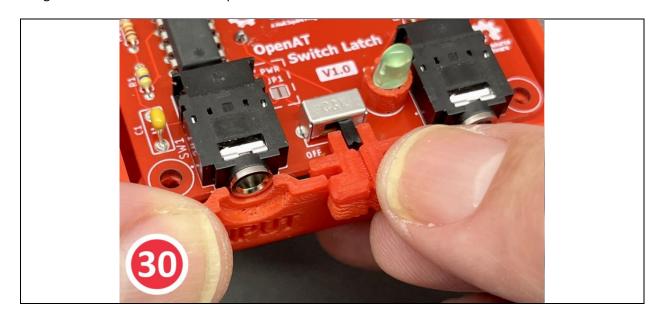



#### Step 31

Slide the power switch on the PCB left into the off position. Flip the PCB so the bottom side is face up and insert into the Enclosure Top, aligning the LED with the hole. Secure with ONE #4-3/8" screw in the hole beside the battery holder.




Step 32 Insert the Battery Cover into the Enclosure Bottom. Secure with ONE #4 x 3/8" screw.





Step 33 Line up the Enclosure Bottom over the Enclosure Top. Fasten with FOUR #4 x 3/8" screws.

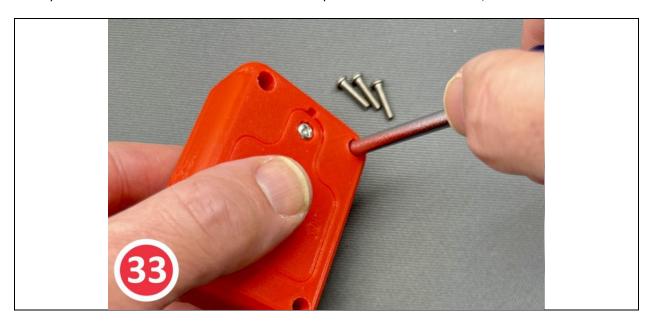

Step 34 (Test)

Attach a switch to the input jack and an output device to the output jack. Slide the power switch on.

Activate the switch. The LED should turn on and remain on and the output device should also activate.

Activate the switch again. The LED should turn off and remain off and the output device should turn off.



V1.0 | December 2022

# **OpenAT-Switch-Latch ASSEMBLY GUIDE V1.0**

