

NHDPlus Version 2: User Guide

(Data Model Version 2.1)



January 15, 2013

NHDPlus Team Members:

Tommy Dewald, US Environmental Protection Agency, Project Lead
Lucinda McKay, Horizon Systems Corporation, Technical Lead
Timothy Bondelid, Independent Consultant
Alan Rea, US Geological Survey
Craig Johnston, US Geological Survey
Richard Moore, US Geological Survey

Recommended NHDPlus Version 2 User Guide Citation:

McKay, L., Bondelid, T., Dewald, T., et al, "NHDPlus Version 2: User Guide", 2012

This document was prepared for:

Tommy Dewald
Office of Water
United States Environmental Protection Agency (EPA)

And funded under EPA contract:

CM130105CT0027

Table of Contents

NHDPlus Version 2 Team and Contributors	v
Introduction to NHDPlus	7
NHDPlus Version 1 (NHDPlusV1)	9
Overview of NHDPlus Version 2 (NHDPlusV2)	10
Highlights of How NHDPlusV2 Differs from NHDPlusV1	11
NHDPlusV2 Data Structure	22
Projection Information	29
A Guide for Installing NHDPlusV2 Data	30
NHDPlusV2 Distribution Files and NHDPlusV2 Components	32
NHDPlusV2 Versioning System	34
NHDPlusV2 Global Data Feature Class and Table Descriptions	36
\NHDPlusGlobalData\BoundaryUnit (feature class) (not released)	37
\NHDPlusGlobalData\NHDPlusConnect (table) (not released)	38
NHDPlusV2 Metadata Collection.....	39
\NHDPlusMetadata\NHDPlusV21.met	39
\NHDPlusMetadata\NHD.met (not yet released)	39
\NHDPlusMetadata\Conus_NED_Metadata<yyymm> (feature class) and	
\NHDPlusGlobalData\NED_DataDictionary20100601 (pdf)	39
\NHDPlusMetadata\CDED_MetaData\CDED_Index_Polygons (polygon feature class) and	
cded_<tile>_fgdc_en.xml	39
\NHDPlusMetadata\WBD_Poly_Seamless.Met (text)	39
\NHDPlusMetadata\Precip and Temp Metadata (not yet released)	40
\NHDPlusMetadata\Runoff Metadata (not yet released)	40
\NHDPlusGlobalData\SuperCatchments (feature class) (not yet released).....	41
\NHDPlusGlobalData\SC<featureid> (grid) (not yet released).....	41
NHDPlusV2 National Data Feature Class and Table Descriptions	42
\NHDPlusNationalData\GageLoc (feature class)	42
\NHDPlusNationalData\GageInfo (table).....	43
\NHDPlusNationalData\Gage_Smooth (table)	44
\NHDPlusNationalData\nationalcat (grid) (not yet released).....	45
\NHDPlusNationalData\NationalWBDSnapshot (feature class)	46
NHDPlusV2 Core Feature Class, Grid, and Table Descriptions	47
\NHDPlusCatchment\FeatureIDGridcode (table)	47
\NHDPlusCatchment\cat (grid).....	47
\NHDPlusCatchment\Catchment (polygon feature class).....	48
\NHDPlusAttributes\CumulativeArea (table)	48
\NHDPlusAttributes\DivFracMP (table)	49
\NHDPlusAttributes\ElevSlope (table)	50
\NHDPlusAttributes\HeadwaterNodeArea (table).....	50
\NHDPlusAttributes\MegaDiv (table)	51
\NHDPlusAttributes\PlusFlowlineVAA (table).....	51
\NHDPlusAttributes\PlusFlow (table)	53
\NHDPlusAttributes\PlusARPointEvent (table)	54
\NHDPlusAttributes\PlusFlowAR (table).....	55
\NHDPlusFdrFacrrrrrrr\fac (grid).....	56

\NHDPlusFdrFacrrrrrrr\fdr (grid)	56
\NHDPlusFilledAreasrrrrrrr\filledareas (grid).....	57
\NHDPlusCatSeedrrrrrrr\catseed (grid)	57
\NHDPlusFdrNullrrrrrrr\fdrnull (grid)	58
\NHDPlusHydroDemrrrrrrr\hydrodem (grid).....	58
\NHDPlusBurnComponents\BurnLineEvent (table)	59
\NHDPlusBurnComponents\BurnWaterbody (polygon feature class)	60
\NHDPlusBurnComponents\Sink (point feature class)	60
\NHDPlusBurnComponents\Wall (line feature class)	60
\NHDPlusBurnComponents\LandSea (polygon feature class).....	61
\NHDPlusBurnComponents\BurnAddLine (line feature class).....	61
\NHDPlusBurnComponents\BurnAddWaterbody (polygon feature class)	61
NHDPlusV2 Extended Feature Class and Table Descriptions	62
\EROMExtension\EROM_MA0001 (table)	62
\EROMExtension\EROMQA_0001 (pdf)	63
\EROMExtension\EROMQA_MA0001 (table).....	64
\VogelExtension\VogelFlow (table)	65
\VPAttributeExtension\IncrLat (comma delimited table).....	66
\VPAttributeExtension\ROMA0001 and ROMMmm0001 (comma delimited tables)	67
\NHDPlusAttributeExtension\IncrPrecipMA and IncrPrecipMMmm (tables)	68
\NHDPlusAttributeExtension\CumTotPrecipMA and CumDivPrecipMA (tables)	68
\NHDPlusAttributeExtension\IncrTempMA and IncrTempMMmm (tables)	69
\NHDPlusAttributeExtension\CumTotTempMA and CumDivTempMA (tables)	69
Understanding and Using NHDPlusV2	70
NHDPlus and Divergences	70
Total Upstream Accumulation and Divergence-Routed Accumulation	72
Building an NHDPlusV2 Attribute Accumulator	73
Understanding NHDPlus Slope	75
Finding the Upstream Inflows to an NHDPlus Dataset	76
Finding all the Tributaries to a Stretch of River	76
NHDFlowline Features with "Known Flow" vs. Features with "Unknown Flow"	76
How WBD Boundaries Relate to NHDPlusV2 Catchment Boundaries	77
How do Catchment Boundaries differ from WBD Snapshot Boundaries	78
Main Flowline Network vs. Isolated Networks	78
NHDFlowline Features With and Without Catchments	81
Using the NHDPlus Value Added Attributes (VAAs) for Non-Navigation Tasks	81
Why do EROM flow estimates sometimes differ from Gage-reported flow?	89
Using the NHDReachCrossReference Table to Transfer to NHDPlusV2 Data that is Linked to NHDPlusV1	91
Appendix A: NHDPlusV2 Build/Refresh Process Description	94
Step 1 – Edit Global Data to set up VPUs and Setup the Build/Refresh Work Flow (External)	97
Step 2 – Prepare NHD Data (External).....	97
Step 3 – Prepare WBD Data (External)	97
Step 4 – Reserved for Future Use	98
Step 5 – NHD QAQC – For each VPU in Drainage Area	98

Step 6 – Build GlobalData.BoundaryUnit for VPUs, ComID-based NHDPlusV2 tables, and VAAs Part 1	101
Step 7 – Edit Divergence Fraction Mainpath Table (External)	102
Step 8 – QAQC Divergence Fraction Mainpath Table – For Each VPU in Drainage Area...	102
Step 9 – Edit Global Data BoundaryValue Table for incomplete DA (External)	102
Step 10 – Compute VAAs Part 2	102
Step 11 – Edit Global Data to set up RPUs (External)	105
Step 12 – Build GlobalData.BoundaryUnit for RPUs	105
Step 13 – Prepare NED (External).....	105
Step 14 – Trim BurnLineEvent for Raster Processing.....	105
Step 15 – Edit BurnComponents (External)	106
Step 16 – Prepare Sinks and Update BurnWaterbody and BurnAddWaterbody.....	108
Step 17 – Review all Burn Components – For each VPU in Drainage Area (External)	109
Step 18 – Build Catchments, FDR, and FAC Grids – For each VPU in Drainage Area.....	110
Step 18.5 – Build National Catchment Grid – For each VPU in Drainage Area.....	118
Step 19 – Build Final GlobalData.BoundaryUnit for VPUs and RPUs.....	118
Step 20 – Build HW Node Area and Raw Elevations – For each VPU in Drainage Area	118
Step 21 – Edit Catchments to Add International Areas (External)	118
Step 22 – Smooth Elevations	118
Step 23 – Accumulate Catchment Area	122
Step 24 – Package NHDPlusV2 for Distribution.....	122
Build NHDPlusV2 NationalWBDSnapshot	123
Catchment Attribute Allocation and Accumulation Extensions (CA3TV2)	124
Enhanced Unit Runoff Method (EROM) Flow Estimation and QAQC Extension	125
EROM Flow Estimation QAQC	137
Vogel Mean Annual Flow Estimation Extension	142
Velocity Extension.....	144
Appendix B: National Hydrography Dataset (NHD) Snapshot Feature Class and Table Descriptions	146
\NHDSnapshot\Hydrography\NHDFlowline (line feature class)	146
\NHDSnapshot\Hydrography\NHDWaterbody (polygon feature class).....	147
\NHDSnapshot\Hydrography\NHDArea (polygon feature class).....	148
\NHDSnapshot\NHDFCode (Table	149
\NHDSnapshot\NHDReachCrossReference (Table)	150
Appendix C: National Elevation Dataset (NED) Snapshot Raster and Table Descriptions	151
\NEDSnapshot\ elev cm (grid).....	151
\NEDSnapshot\shdrelief (grid)	152
Appendix D: Watershed Boundary Dataset (WBD) Snapshot Feature Class and Table Descriptions	153
\WBDSnapshot\WBD\WBD_SubWatershed (polygon feature class).....	153
Appendix E: Purpose Code (PurpCode) Values	157
Appendix F: How do Catchment Boundaries differ from WBD Snapshot Boundaries	158
Glossary	165
References.....	167

NHDPlus Version 2 Team and Contributors

NHDPlus Team – EPA and United States Geological Survey (USGS)

EPA

Tommy Dewald Washington, D.C.

EPA Contractor (Horizon Systems Corporation, Herndon, VA)

Lucinda McKay, Technical Lead	White Stone, VA
Robert Deffenbaugh	White Stone, VA
Jennifer Hill	Stanardsville, VA
Margaret Neil	Jacksonville, NC
Theodore Markson	Vienna, VA

EPA Contractor (Independent Consultant)

Timothy Bondelid Woodville, VA

USGS

Alan Rea	Boise, ID
Richard Moore	Pembroke, NH
Craig Johnston	Pembroke, NH

Subject Matter Consultants, USGS

Kernell Ries	Baltimore, MD
Gregory Schwarz	Reston, VA
David Wolock	Lawrence, KS

NAWQA Team, USGS

Charles Crawford	Indianapolis, IN
Stephen Preston	Dover, DE
Gregory Schwarz	Reston, VA
David Wolock	Lawrence, KS
John Brakebill	Baltimore, MD
Michael Wieczorek	Baltimore, MD

NAWQA Major River Basin Staff and Editors, USGS

MRB 1

Richard Moore	Pembroke, NH
Craig Johnston	Pembroke, NH

MRB 2

Anne Hoos	Nashville, TN
Ana Garcia	Raleigh, NC
Silvia Terziotti	Raleigh, NC

MRB 3

Dale Robertson	Middleton, WI
David Saad	Middleton, WI
James Kennedy	Middleton, WI

Great Lakes Restoration Initiative

Jana Stewart	Middleton, WI
Howard Reeves	Lansing, MI
Cyndi Rachol	Lansing, MI

MRB 4

Juliane Brown	Denver, CO
Jean Dupree	Denver, CO

MRB 5

Richard Rebich	Jackson, MS
Natalie Houston	Austin, TX
Sophia Hurtado	Austin, TX

MRB 6

None

MRB 7

Daniel Wise	Portland, OR
Hank Johnson	Portland, OR

MRB 8

Dina Saleh	Sacramento, CA
Joseph Domagalski	Sacramento, CA
Timothy Guerrero	Sacramento, CA

Watershed Boundary Dataset (WBD) Technical Coordinator

Karen Hanson	West Valley City, UT
Kim Jones	West Valley City, UT

NHD Editors - USGS

Steve Char	Denver, CO
Esther Duggan	Portland, OR
Tana Haluska	Portland, OR
Laura Hayes	Pembroke, NH
Craig Johnston	Pembroke, NH
Bernard McNamara	Sacramento, CA
Doug Rautenkranz	Tucson, AZ

NHD Editors – Horizon Systems Corporation

Margaret Neil	Jacksonville, NC
Theodore Markson	Vienna, VA

Introduction to NHDPlus

NHDPlus is an integrated suite of application-ready geospatial data products, incorporating many of the best features of the National Hydrography Dataset (NHD), the National Elevation Dataset (NED), and the National Watershed Boundary Dataset (WBD). NHDPlus includes a stream network based on the medium resolution NHD (1:100,000-scale), improved networking, feature naming, and “value-added attributes” (VAA). NHDPlus also includes elevation-derived catchments produced using a drainage enforcement technique first broadly applied in New England, and thus dubbed “The New-England Method.” This technique involves enforcing the 1:100,000-scale NHD drainage network by modifying the NED elevations to fit with the network via trenching and using the WBD to enforce hydrologic divides, and applying sinks in non-contributing areas¹. The resulting modified digital elevation model (DEM) was used to produce hydrologic derivatives that closely agree with the NHD and WBD.

The VAAs include greatly enhanced capabilities for upstream and downstream navigation, analysis, and modeling. Examples include rapidly retrieving all NHDFlowline features and catchments upstream of a given NHDFlowline feature, using structured queries rather than slower traditional flowline-by-flowline navigation; subsetting a stream level path sorted in hydrologic order for stream profile mapping, analysis, and plotting; and calculating cumulative catchment attributes using streamlined VAA hydrologic sequence routing attributes. VAA-based routing techniques were used to produce the NHDPlus attributes such as cumulative drainage areas, temperature, and precipitation distributions. These cumulative attributes are used to estimate the NHDPlus mean annual flow and velocity.

NHDPlus is built from static copies of the medium resolution (1:100,000-scale or better) NHD, the 30 meter NED, and the WBD. These three data sets are constantly changing, therefore the snapshots of NHD, NED and WBD that are used to build NHDPlus are included in the NHDPlus data. Unlike NED and WBD, the NHD is extensively improved by the NHDPlus team during the NHDPlus build process. While these updates eventually make their way back to the central USGS NHD central repository, this does not happen prior to distribution of NHDPlus, in part, due to the need to release the NHDPlus as soon as possible. The NHD, NED and WBD snapshots, included with NHDPlus, may not be updated by users with the intent of sending updates back to these national databases. EPA is the steward for the medium resolution NHD and updates to this data may be sent to EPA. Updates to NED and WBD should be directed to the respective national stewardship programs sponsored by USGS.

NHDPlusV2 benefits from over six years of NHDPlusV1 use. Feedback and updates provided by a diverse and engaged NHDPlusV1 user community contributed to many of the improvements found in NHDPlusV2. As a result, NHDPlusV2 is a more robust and sophisticated suite of geospatial products. Users are encouraged to first familiarize themselves with NHDPlusV2 through this guide, other user documentation and training materials, and consultation with other NHDPlus users. We welcome descriptions of your applications that

¹ An interdisciplinary team from the U.S. Geological Survey (USGS) and the U.S. Environmental Protection Agency (EPA) found this method to produce the best-quality agreement among the ingredient datasets among the various methods tested. <http://pubs.usgs.gov/sir/2009/5233/>

might be shared with this growing user community through the NHDPlus web site. The NHDPlus team is always available to discuss your application ideas and questions.

Additional information, tools, exercises, training opportunities, news, and the latest NHDPlus data can be found at <http://www.epa.gov/waters>.

NHDPlus Version 1 (NHDPlusV1)

NHDPlusV1 was released in 2006 and for six years acquired a large and diverse user community. Many applications have been developed around the unique characteristics of NHDPlusV1 and some of these applications are highlighted on the NHDPlus web page. The NHDPlusV1 data, documentation, and training materials continue to be available in the “NHDPlusV1 Archive” section of the NHDPlus web page.

The remainder of this document is dedicated to NHDPlus Version 2 (NHDPlusV2). For additional information about NHDPlusV1, see the “NHDPlus Version 1 User Guide” located in the “NHDPlusV1 Archive” section of the NHDPlus web site.

Overview of NHDPlus Version 2 (NHDPlusV2)

During 2010 and 2011, the NHDPlus team re-engineered the NHDPlus Build/Refresh Tools in preparation for the creation of the NHDPlusV2 dataset. The four primary goals of the NHDPlus Build/Refresh Tools are (1) to enable the refreshing of NHDPlus as the input datasets are improved, (2) to provide a refresh capability that is timely and cost-effective so that NHDPlus can be refreshed more often, (3) to improve the NHDPlus components through the use of more sophisticated techniques for hydro-enforcement and flow estimation, and (4) to enable the building of NHDPlusV2 from more detailed input datasets, such as high resolution NHD and 10 meter NED.

In conjunction with the development of the NHDPlus Build/Refresh Tools, the NHDPlusV1 data model was enhanced to create the NHDPlusV2 data model. The new data model reflects improvements identified since 2006 from NHDPlusV1 application development activities by the growing NHDPlus user community. The first major change in NHDPlusV2 data model is the division of the NHDPlus data structure into “core” components and “extended” components. The concept is to create a set of “core” data components that are the direct results of integrating the three primary source datasets: the National Hydrography Dataset (NHD), the National Elevation Dataset (NED), and the Watershed Boundary Dataset (WBD). All other components of NHDPlusV1 and some new NHDPlusV2 components are the result of extending the primary source dataset integration and are classified as “extended” components in the new data model (e.g. flow estimates, catchment attributes, and accumulated attributes). It is envisioned that additional NHDPlusV2 “extended” components will continue to be built in the future by the NHDPlus team and user community.

This document is intended to provide users with an understanding of the format and content of NHDPlusV2, how it was built, and how to use the data.

Highlights of How NHDPlusV2 Differs from NHDPlusV1

Many improvements have been incorporated into NHDPlusV2. These improvements include better input source data, better procedures for building NHDPlusV2 and additional components to enhance the application and utility of NHDPlusV2. Details about the NHDPlusV2 improvements are discussed throughout this guide, especially in Appendix A where the NHDPlusV2 build process is described. The process used to produce NHDPlusV2 catchments refined and improved upon the basic process used for NHDPlusV1 catchments¹.

Improved NHD Data – Like NHDPlusV1, NHDPlusV2 uses the medium resolution NHD (1:100,000-scale) data from the USGS NHD database (<http://nhd.usgs.gov/>). Extensive updates were made to the NHD data in preparation for building NHDPlusV1 and those updates were returned to USGS for processing into the NHD database between January 2006 and December 2009. In April 2010, the NHD data was again extracted from the NHD database to begin the edits that were made in preparation for building NHDPlusV2. These edits included the connection of thousands of isolated networks that existed in the NHDPlusV1. In addition, other NHD edits included correcting flow routing and coordinate ordering issues and adding spatial detail to the network using high resolution NHD and imagery. Many of these edits required changes and additions to the NHD geometry. The following types of edits were performed to improve the NHD snapshot used for NHDPlusV2:

- Isolated networks connected using geometry from the high resolution NHD data or features digitized from imagery,
- Detail added to the NHD network using geometry from the high resolution NHD data or features digitized from imagery,
- Stream and waterbody names added,
- Name placements corrected,
- Lake features added,
- Lakes split by quad map lines merged,
- Real sinks (non-contributing areas and networks that drain into the ground) identified,
- Duplicate geometry removed,
- Small network gaps closed,
- Great Lakes drainage connected, and
- ReachCodes migrated to agree with the February 2012 WBD.

Improved WBD Data – Using WBD boundaries to create walls as part of the hydro-enforcement during NHDPlusV1 processing was shown to greatly improve catchment delineations, especially in flat terrain¹. As shown in Figure 1, NHDPlusV1 used WBD (circa 2005) boundaries for ten states and Puerto Rico that were certified as complete at that time.

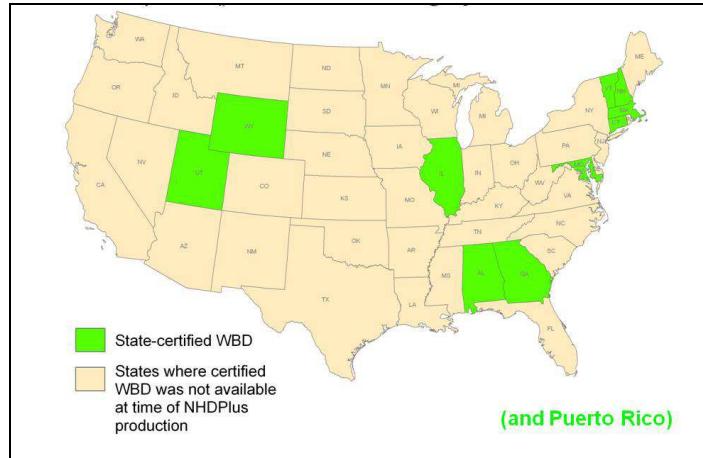


Figure 1: 2005 Watershed Boundary Dataset

NHDPlusV2 has incorporated the now-completed WBD for the conterminous U.S. (Figure 2). New information included with the WBD on closed basin systems was also utilized in NHDPlusV2 as an aid in placement of sinks (see Appendix A, Steps 16, 17, and 18 for a description of the use of sinks in NHDPlusV2.).

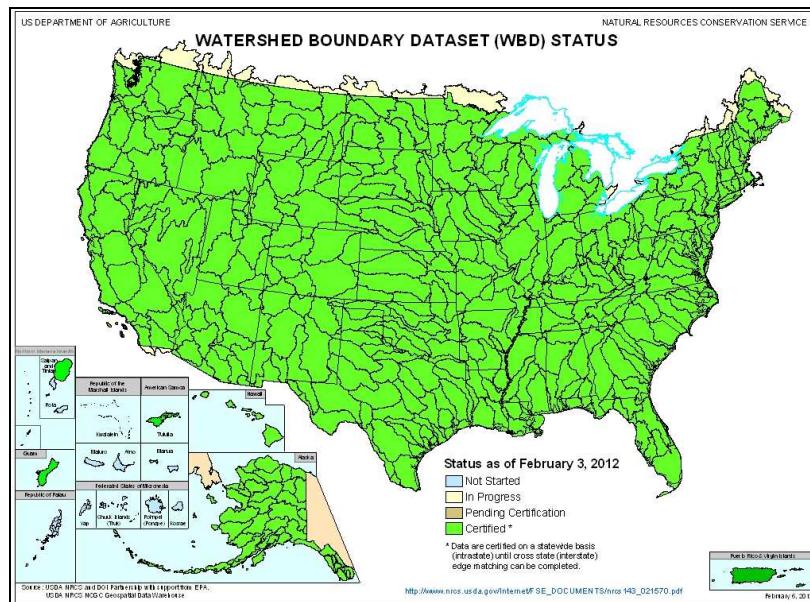


Figure 2: 2012 Watershed Boundary Dataset

Improved NED Data - NHDPlusV2 has incorporated updated elevation data from the National Elevation Dataset (NED). The NED is updated with higher resolution data as the data are collected. The higher-resolution NED data are used to update the other NED layers of a lesser

resolution as well. For instance, when new 10-m DEMs are produced, the 10-m NED is updated to include these areas and the 1-arc-second NED (approximately 30-m) is updated by resampling the new 10-m data.

NHDPlusV1 used a NED snapshot from June 2004 (Figure 3).

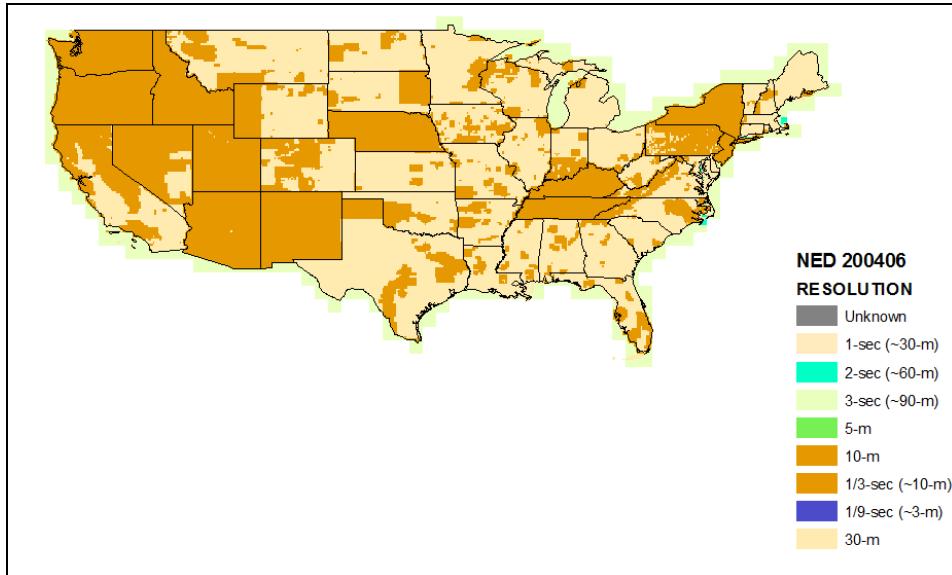


Figure 3: June 2004 NED Resolutions

NHDPlusV2 used the best-available snapshots released by USGS during the production period. These NED snapshots were published from August 2010 to December 2011.

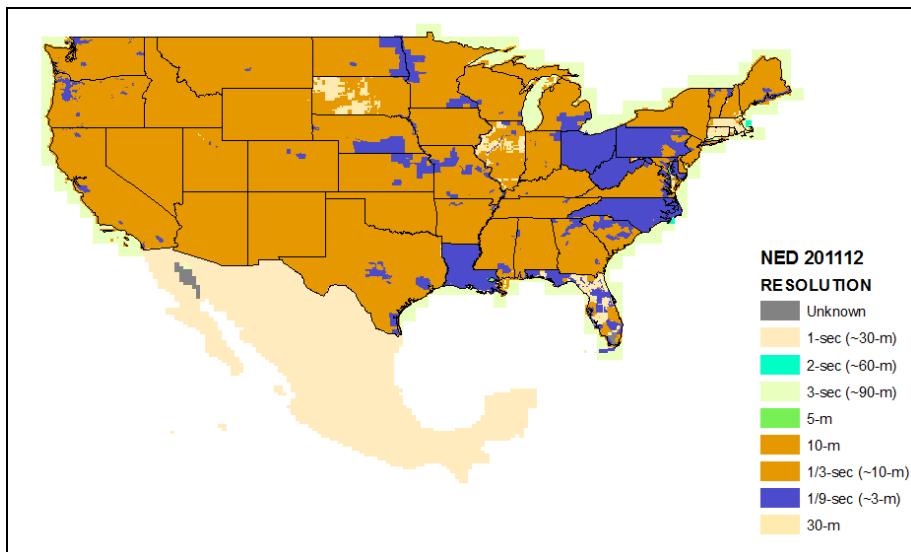


Figure 4a: December 2011 NED Resolutions

Differences between NHDPlusV1 and V2 Processing Units

In NHDPlusV1, the processing units were referred to as “Hydrologic Region” for vector data (even though hydrologic region 10 was split into two pieces) and “Production Unit” for raster data. In NHDPlusV2, the processing units are referred to as “Vector Processing Unit (VPU)” for vector data and “Raster Processing Unit (RPU)” for raster data. The change to VPU and RPU was made to introduce flexibility into the size of units that were processed. This will be especially important when processing higher resolution NHDPlus in the future.

The actual geographic extent of the vector processing units is very similar, though not identical, between NHDPlusV1 and V2. The NHDPlusV2 Vector Processing Units (VPUs) are different from V1 in five areas: (1) the division of hydrologic region 10 into 10U and 10L has changed, (2) hydrologic region 03 was one piece in V1 and is three pieces (03N, 03S, and 03W) in V2, (3) the HUC4 0318 (the Pearl River) is incorporated into VPU 08 in the Mississippi drainage where it belongs hydrologically, (4) VPUs 01, 02, 04, 09, 10U, and 17 extend into Canada and (5) VPUs 13, 15, and 18 extend into Mexico.

While the names of the V2 RPUs are mostly the same as the V1 Production Units, the extents of the RPUs reflect many changes as follows:

- RPUs now extend into more international areas to include contributing drainage areas from Canada or Mexico.
- RPU boundary configurations have changed in V2 as a result of eliminating former Arc Workstation Grid size constraints.
- In V2, RPUs are created by combining whole HUC4 drainages. This was not always the case in V1 Production Units configurations.
- A V2 RPU and a V1 Production Unit of the same name are not always the same extent.

Figure 4b illustrates the V1 and V2 processing units.

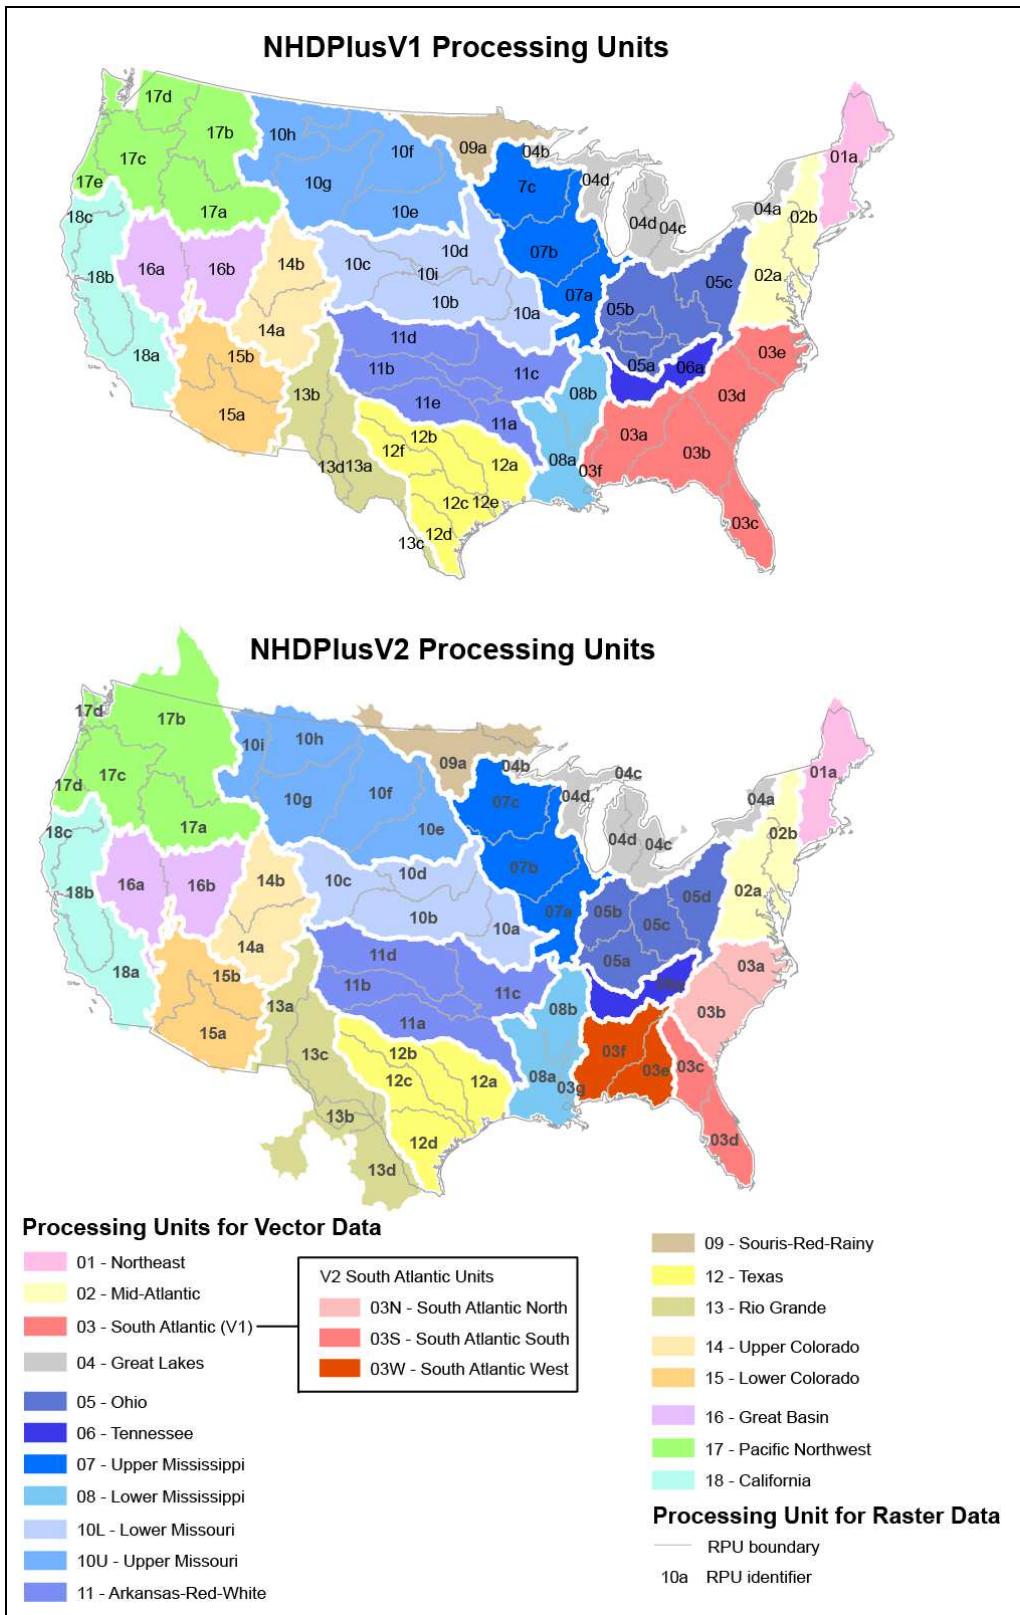


Figure 4b: NHDPlusV1 versus V2 Processing Units

Incorporation of Canadian Data - On the Canadian side of shared international drainages, NHDPlusV2 processing combined the Canadian DEMs with the NED and the Canadian digital drainage divides with the WBD. These additions enhanced the catchment delineations in Canada and thereby the drainage areas that flow into the U.S. This was not done in NHDPlusV1. In addition, Canadian 1:50,000-scale National Hydrographic Network (NHN) stream data has been incorporated into the high resolution NHD for many hydrologic units that straddle the international border. These high resolution NHD lines along with additional lines from the Canadian NHN, were selectively incorporated into the hydro-enforcement processing as "burn lines" to further improve the catchment delineations in Canada. Additionally, precipitation, temperature, and runoff grids provided by the Canadian Forest Service (McKenney and others, 2006) were used to develop runoff estimates for Canadian drainage areas.

Incorporation of Mexican Data – The 1-arc-second NED data, used for NHDPlusV2 processing, includes elevation data from Mexico. Additionally, hydrography data from Mexico has been incorporated into the high resolution NHD for hydrologic units that straddle the international border. These data were used selectively as "burn lines" in the hydro-enforcement processing to improve the accuracy of the catchment delineations in Mexico. In addition, precipitation, temperature, and runoff grids provided by the Canadian Forest Service (McKenney and others, 2006) were used to develop runoff estimates for Mexican drainage areas.

Improved Flow Estimates – The Enhanced Unit Runoff Method (EROM), used to estimate streamflows in NHDPlusV2, incorporates several improvements to the original Unit Runoff Method (UROM) used in NHDPlusV1. NHDPlusV1 estimated a unit runoff (cfs/km^2) for each catchment and conservatively routed and accumulated these incremental flows down the network. Many enhancements have been made in the NHDPlusV2 EROM flow method as reflected in the new 6-step flow estimation process:

1. Unit runoff is computed from a runoff grid produced from a flow balance model. The 900-m runoff grid is at a much finer resolution than the 8-digit Hydrologic Unit (HUC8) runoff values used in NHDPlusV1.
2. A "losing streams" methodology is incorporated that estimates stream flow losses that can occur due to excessive evapotranspiration in the stream channels.
3. A log-log regression step using "Reference" gages provides a further adjustment to the flow estimates. Reference gages (Falcone, et. al.) are those gages determined to be largely unaffected by human activities. The regression-adjusted flows should be considered the "best" NHDPlusV2 estimates of "natural" flow.
4. A new table in NHDPlusV2, PlusFlowAR, provides a means to account for flow transfers, withdrawals, and augmentation.
5. A gage adjustment component adjusts flows upstream of gages based on the flow measurements at the gage locations. This step performs the flow adjustments for all gages that meet criteria as explained in the details on this step later in this section. The gage adjustment causes the flow estimates to match the gage-ed flow at the gage locations.

Prorated adjustments are also made to the incremental catchments flow estimates upstream of the gages. After the upstream adjustments have been made, catchment incremental flows are accumulated down the network thereby making necessary adjustments to the flows below gages. The gage-adjusted flow estimates should be considered the “best” NHDPlusV2 flow estimates for use in models and analyses.

6. The gage adjustment, performed in step 5, forces the NHDPlusV2 flow estimates to match the gaged-flows at the gage locations. Gaged-flow can not be used to perform QA on the results of step 5. This sixth step, called “gage-sequestration”, is designed to measure how well the step 5 gage adjustment has performed in estimating flows through out the network. First, a proportion of the gages (typically 20%) are randomly selected and set aside (sequestered). The remaining gages are used to perform a gage adjustment identical to step 5. Finally, the sequestered gages are used to QA the results of the gage adjustment. These QA results can be viewed as the QA of the flow estimates produced in step 5.

Unlike NHDPlusV1, NHDPlusV2 contains statical QA measures of the flow estimates. These QA statistics are included with the NHDPlusV2 data and provide a comprehensive assessment of the quality of the flow estimates.

Improved Waterbody Enforcement – In NHDPlusV2, enhancements were made to the hydro-enforcement process performed on lakes/ponds and river area features. The NHDPlusV1 process did not always accurately represent isolated lakes/ponds (i.e. lakes/ponds not connected to any NHDFlowline feature). As a result, in NHDPlusV1, it is not uncommon to observe catchment boundaries that split isolated lakes. In NHDPlusV2, significant efforts were made to reduce this anomaly.

Improved Sinks - NHDPlusV2 has the capability of representing non-contributing areas that the NHDFlowline features do not represent. Sinks, which are point features found in the new Sink feature class, are used to insert a NoData cell into the hydro-enforced DEM. The areas around the sink points drain to the sinks. During the hydro-enforcement fill process, areas that drain to sinks do not fillup and spill into down-gradient areas.

Sinks are used to represent the terminal ends of NHDFlowline isolated stream networks and waterbody features (lake/pond and playa) that are identified as "closed" (i.e. with no NHDFlowline outlet). For sinks representing waterbodies, a bathymetric gradient is applied during hydro-enforcement which forces cells within the waterbody to slope toward the sink. Sinks are also used to represent WBD HUC12 units that are attributed as “closed basins”. Sinks within a WBD closed basin can represent one or a combination of sink sources. As a result of these changes, there are many more sinks in NHDPlusV2 than there were in NHDPlusV1.

In NHDPlusV1, the ends of isolated networks had sinks only if the network was in a HUC8 classified as a closed basin and also as an arid area (mean annual precipitation less than 14 inches). In NHDPlusV1, the ends of isolated networks that were not given sinks would “fill and spill” in the hydro-enforced DEM draining to down-gradient areas. This created a disagreement between the NHDPlusV1 vector and raster data. The vector data contained isolated networks,

while the raster data (flow direction and flow accumulation grids) connected the drainage areas of the isolated networks to down-gradient drainage areas.

In NHDPlusV2, the additional sinks improve the flow direction and flow accumulation grids, which now drain into the sink at the end of each isolated network, resulting in the raster representation of flow being isolated, as shown in the vector network.

Improved Trimming of Streams - In NHDPlusV1 data, headwater streams were trimmed by a small distance to account for the buffer around flowlines that was burned in the DEM. In NHDPlusV2, headwater flowlines were trimmed to reduce the possibility that WBD drainage boundaries would be breached by headwater catchments. If trimmed headwater flowlines were touching or within a grid cell width of WBD divides, the flowlines received additional trimming. In this way, hydro-enforcement in NHDPlusV2 uses a stream network that conforms closely to the WBD drainage boundaries.

NHDPlusV2, the upstream ends of flowlines that represent minor paths at stream network divergences were also trimmed. This was done to direct the flow direction and flow accumulation grids down the main path identified by the NHDPlusV2 stream network.

In the NHDPlusBurnComponents folder, BurnLineEvent contains the trimmed stream network that was used to hydro-enforce the DEM. In some cases, headwater and minor divergent path flowlines were so short that sufficient trimming was not possible and these flowlines were removed from BurnLineEvent. Only lines in BurnLineEvent receive catchments.

Nationally Consistent WBD Drainage Divide Enforcement – In both NHDPlusV1 and NHDPlusV2, drainage divides represented by the WBD HUC12 boundary lines were incorporated as “walls” during the hydro-enforcement of the DEM. In NHDPlusV2, additional techniques were used to refine the walls. In NHDPlusV2, non-closed HUC12s that contain no NHDFlowline features were identified and portions of the walls for these HUCs were removed to enable these areas to drain to an appropriate down-gradient area. In NHDPlusV1, these “empty” HUCs were completely walled in the hydro-enforced DEM causing a “fill and spill” based purely on the location of the lowest elevation cell at the perimeter of the HUC. Also, the NHDPlusV1 filling of entire HUC12 areas rendered the flow direction grids useless for DEM based watershed delineations within these areas.

Use of NHDPlusV2 VAA Attribute HydroSeq for Elevation "stepping" - This enhancement utilizes the hydro-sequence number from the NHDPlusV2 Value Added Attributes (VAA) to ensure that the flow paths in the hydro-enforced DEM follow the NHDPlusV2 flow path directions as defined in the NHDPlusV2 flow table (PlusFlow). This process minimizes problems during the hydro-enforcement fill process by replacing the NHD stream cells with a gentle downstream stepping of elevations within the “canyon” burned into the DEM. This process has shown to be a great improvement over NHDPlusV1 data where the hydro-enforcement filling process occasionally created reverse flow situations.

Enforcement of Stepped Values in the Ocean and Estuaries – In NHDPlusV1, ocean and estuary areas were set to NoData. In NHDPlusV2, the NHD ocean coastlines were hydro-

enforced into the DEM by setting the elevation values below the minimum “burned” elevation value of the BurnLineEvent features. The selected estuaries were given elevation values 1cm higher than the ocean coastline elevation values. This stepping of coastal water elevation values enables watershed delineations within the selected estuaries.

Catchment/Burn Attributes - In NHDPlusV2, greater controls over the hydro-enforcement process were introduced through attributes in the BurnLineEvent table. Using these attributes, individual flowlines could be logically removed from the burning process and/or logically removed from the catchment delineation process.

Controlling which lines are burned provides greater flexibility in representing the network in the flow direction and flow accumulation grids. For example, pipeline features, certain elevated sections of canals, or flowlines that would create problems near walls, were removed from the burning process.

Controlling which lines receive catchments prevents lines that do not receive overland flow from having a catchment. Examples of flowlines that should not receive a catchment include pipelines and elevated sections of canals.

Rasterization of Burn Line Features using StreamLevel - In both versions of NHDPlus, catchments are delineated with the ArcGIS Watershed Tool using the NHDPlus flow direction grid and a raster grid representation of the flowlines (used as the "seed" source). In NHDPlusV1, the grid representation of these burn lines were problematic at node intersections, where the DEM cell value at the node was assigned from whichever burnline had the greatest length within the given cell. This sometimes created an issue where the confluence node was assigned to the a tributary stream rather than the main path stream leading to undesirable results in catchment delineation. In NHDPlusV2, this problem was eliminated by using the VAA “StreamLevel” attribute to control the rasterization of streams. At a confluence, the stream with the lowest StreamLevel receives the confluence node in its catchment.

BurnAddLine and BurnAddWaterbodies - In NHDPlusV2, there are new capabilities to add additional non-NHD features for hydro-enforcement of the DEM. Additional lines are stored in BurnAddLine, while additional waterbody polygons were stored in BurnAddWaterbody.

Features placed in BurnAddLine came from a multitude of sources for a variety of purposes. In some cases, BurnAddLines were added to ensure proper drainage of WBD HUC12 units where NHD was not present. Other uses of BurnAddLine features included international hydrography from sources in Canada or Mexico to improve catchment delineation in international areas. BurnAddLine features were also added to provide a flow channel within estuaries.

Features in BurnAddWaterbody were commonly added to ensure sink placement for closed lakes not found in the medium resolution NHD. BurnAddWaterbody also holds waterbodies from international areas to enhance catchment delineations across international borders. Waterbody polygons placed in BurnAddWaterbody came from high resolution NHD or the Canadian National Hydrography Network dataset, or were digitized from imagery.

Flow Direction Grid with NoData Values for Burn Line Stream cells - New in NHDPlusV2, is a variant of the NHDPlusV2 flow direction grid where the cells of BurnLineEvent features are set to NoData. This grid is called FdrNull and can be used to compute flowpath length grids. Flowpath length grids are useful for a variety of purposes including determining the mean flowpath length within a catchment or deriving stream riparian buffer areas.

Improved and Expanded Value Added Attributes (VAAs) – The NHDPlusV2 process performs extensive automated qaqc on the VAAs to ensure the accuracy and consistency of the attributes across the entire NHDPlusV2 dataset. New VAAs have been added, such as RTNDIV (returning divergence) flag which identifies flowlines where an upstream divergence returns to the network. The VAAs FromMeas and ToMeas, expose the measures (m-values) that are assigned to the bottom and top endpoints of NHDFlowline features. In NHDPlusV2, the method for assigning HydroSeq (hydrologic sequence number) is performed across an entire drainage area rather than for each HUC8 as in NHDPlusV1. This assignment method adds power to queries that use HydroSeq. Unlike NHDPlusV1, NHDPlusV2 has VAAs calculated for Coastline features.

Introduction of Flow Split Controls – NHDPlusV2 contains a divergence fraction/mainpath table (DivFracMP) that permits control over what happens at network splits. This table was used to inform the NHDPlusV2 process which path in a divergence is the main path and what fraction of the streamflow proceeds down each path of the divergence.

Points of Addition and Removal – NHDPlusV2 contains the ability to specify points along the NHDFlowline network where flow is removed or added and to specify how much water is removed or added. These points are stored in the PlusARPointEvent and the PlusFlowAR tables. Using this new capability, irrigation withdrawals and returns, drinking water withdrawals, and permitted discharges may be specified. In addition, a withdrawal point and an addition point may be linked to represent an interbasin flow transfer.

Great Lakes Supercatchments – NHDPlusV2 includes polygons known as “Supercatchments” which represent the drainage areas above the outlets of four of the Great Lakes: Lake Superior, Lake Huron, Lake Erie, and Lake Ontario. These Supercatchments include the areas on the Canadian side of the Great Lakes and are used to provide accurate cumulative drainage areas for the rivers that flow from the lakes.

Flow Accumulation Grid Extent and Content – In NHDPlusV1 and V2, the hydro-enforcement process is run for a Raster Processing Unit (RPU) and a buffer area surrounding the RPU. In NHDPlusV1 and V2, the distributed grids do not contain values outside the RPU boundaries (i.e. in the buffer area). In NHDPlusV1 and V2, if one RPU drains into another RPU, the flow accumulation values in the upstream RPU do not carry into the downstream RPU. In other words, cell counts of an upstream RPU drainage are not reflected in the cell counts of a downstream RPU.

In NHDPlusV1, while the distributed grid does not contain the processed buffer area, if all or part of the buffer area drains into the RPU, then the RPU’s flow accumulation grid cell values include the upstream cells from the buffer area.

In NHDPlusV2, the distributed grid does not contain the processed buffer area and, if all or part of the buffer area drains into the RPU, then the RPU's flow accumulation grid cell values DO NOT include the surrounding buffer area. Only cells within the RPU are counted in the NHDPlusV2 flow accumulation grids.

The list above describes the primary improvements that have been incorporated into NHDPlusV2. All improvements are described in more detail in this guide.

NHDPlusV2 Data Structure

In NHDPlusV1, the geographic units were (1) “Production Units” for the raster components (elevation, flow direction and flow accumulation grids) and (2) “Hydrologic Regions” (2-digit Hydrologic Units) for catchment grids, all vector feature classes and all tables. In the future, as the source datasets for NHDPlus become higher resolution, these geographic units will need to change and, in general, become smaller. Thus NHDPlusV2 introduces new and flexible geographic divisions. NHDPlusV1 “Production Unit” is replaced by the NHDPlusV2 “Raster Processing Unit” (RPU). The NHDPlusV1 “Hydrologic Region” is replaced with the NHDPlusV2 “Vector Processing Unit” (VPU).

Because NHDPlusV2 is built from the same resolution inputs as NHDPlusV1, the VPUs in NHDPlusV2 are similar to the “Hydrologic Regions” defined in NHDPlusV1. In NHDPlusV1 and NHDPlusV2, Hydro Region 10, the Missouri River Basin, was divided into 2 VPUs. Also Hydro Region 3, Southeastern United States (“South Atlantic”), was processed as 1 VPU in NHDPlusV1, while it was processed as 3 VPUs in NHDPlusV2. The NHDPlusV2 RPUs are similar, but not identical to the NHDPlusV1 “Production Units”. RPUs represent some hydrologic improvements over the “Production Units”.

NHDPlusV2 data is distributed by the major drainage areas of the United States. Within a Drainage Area, the NHDPlusV2 data components are packaged into compressed files either by Vector Processing Unit (VPU) or Raster Processing Unit (RPU). A Drainage Area is composed of one or more VPUs and a VPU is composed of one or more RPUs. The valid NHDPlusV2 Drainage Areas, VPUs and RPUs are shown in Figures 5a and 5b.

Drainage Area Name	Drainage Id	VPUs	RPU s
Northeast	NE	01	01a
Mid-Atlantic	MA	02	02a, 02b
South Atlantic	SA	03N, 03S, 03W (less 0318) ²	03a, 03b, 03c, 03d, 03e, 03f
Great Lakes	GL	04	04a, 04b, 04c, 04d
Mississippi	MS	06, 05, 07, 08, 10U, 10L, 11 and 0318 ²	06a, 05a, 05b, 05c, 05d, 07a, 07b, 07c, 08a, 08b, 10a, 10b, 10c, 10d, 10e, 10f, 10g, 10h, 10i, 11a, 11b, 11c, 11d, 03g
Souris-Red-Rainy	SR	09	09a
Texas	TX	12	12a, 12b, 12c, 12d
Rio Grande	RG	13	13a, 13b, 13c, 13d
Colorado	CO	14, 15	14a, 14b, 15a, 15b
Great Basin	GB	16	16a, 16b
Pacific Northwest	PN	17	17a, 17b, 17c, 17d
California	CA	18	18a, 18b, 18c

Figure 5a: NHDPlusV2 Drainage Areas, VPUs, and RPUs

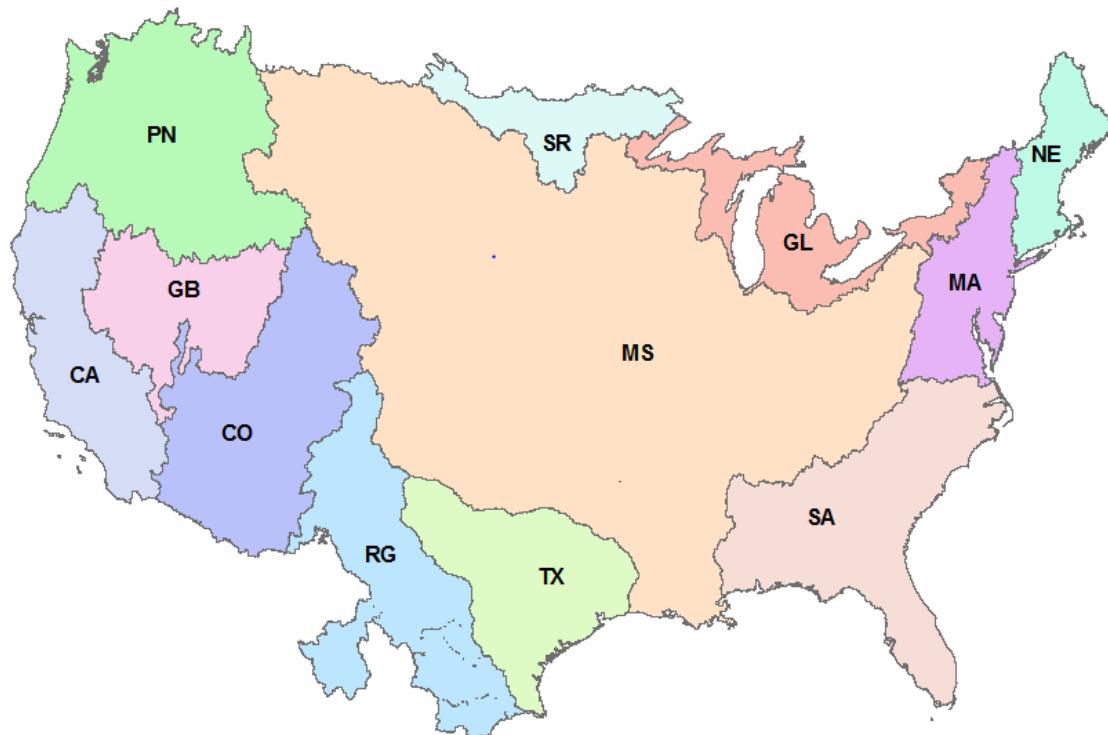


Figure 5b: NHDPlusV2 Drainage Area Map

² The HUC4 0318 contains the Pearl River drainage which has both inflows and outflows with region 08, while being completely disconnected from the rest of region 03. Because of the connections with region 08, NHDPlusV2 includes 0318 with the Mississippi drainage area.

Note that some large areas of WBD have been recoded with Hydrologic Unit Codes (HUC codes) that differ significantly from previous HUC codes. For example: HUC4s 0111 and 0201 were renumbered to 0415; and 1001 was renumbered to 0904. Numerous smaller changes have also occurred. The NHDPlusV2 processing for the re-coded areas was already underway when the changes were detected and, given the timing, it was not feasible to re-process those areas or to physically move data from one NHDPlusV2 workspace to another. However, the NHD snapshot ReachCodes on both NHDFlowline and NHDWaterbody features were adjusted to reflect the HUC8s in the 2/1/2012 version of WBD. This means that, in some NHDPlusV2 workspaces, some NHDFlowline and NHDWaterbody features will have ReachCodes that reflect a different hydrologic region than the VPU in which the features are stored. If and when NHDPlusV2 is reprocessed for these areas, these issues will be addressed.

Like NHDPlusV1, NHDPlusV2 data is distributed as shapefiles, grids, and .dbf tables. The NHDPlusV2 data structure is shown below. An asterisk (*) is used to indicate which components are new or changed relative to the NHDPlusV1 data structure.

The overall data structure is:

```
\NHDPlusGlobalData
    BoundaryUnit (polygon feature class) *
    BoundaryValue (table) *
    NHDPlusConnect (table) *
```

```
\NHDPlusV2Metadata
```

This folder contains a collection of metadata for NHDPlusV2 and for the source datasets used to produce NHDPlusV2.

```
\NHDPlusNationalData
    GageLoc (point feature class) *
    GageInfo (table) *
    Gage_Smooth (table) *
    nationalcat (grid) *
    \SuperCatchments*
        SuperCatchments (polygon feature class)*
        \supercatgrids*
            \info
            \sc<featureid> (grid)
```

Where featureid is an NHDFlowline ComID

```
NationalWBDSnapshot (polygon feature class)
```

The content of the \NHDPlusDD folder is referred to as a Drainage Area workspace.

Each Drainage area workspace has the following structure:

```
\NHDPlusDD (drainage area folder)
  \DAAttributeExtension (NHDPlus data extensions for the Drainage Area)
  \NHDPlusVVVVVVVV (VPU folder)
    [VPU feature classes, grids and tables]
    \NHDPlusRRRRRRRR (RPU folder)
      [RPU feature classes, grids and tables]
      [more RPUs]
    [more VPUs]
  [more Drainage Areas]
```

Where

DD = Drainage Area Id of 1-2 characters
VVVVVVVV = VPUIDs of 1-8 characters
RRRRRRRR = RPUIDs of 1-8 characters

The content of a \NHDPlusVVVVVVVV folder is referred to as a VPU workspace.

Each VPU workspace will contain:

```
\NHDPlusVVVVVVVV
  \NHDPlusAttributes
    CumulativeArea (table) *
    DivFracMP (table) *
    ElevSlope (table) *
    HeadwaterNodeArea (table) *
    PlusARPointEvent (table) *
    PlusFlowlineVAA (table) *
    PlusFlow (table) *
    PlusFlowAR (table) *
    MegaDiv (table)*
  \NHDPlusCatchment
    cat (grid)
    \info (info tables for cat grid)
    Catchment (polygon feature class)
    FeatureIDGridCode (table) *
  \NHDPlusBurnComponents
    BurnAddLine (table) *
    BurnAddWaterbody (polygon feature class) *
    BurnLineEvent (line feature class) *
    BurnWaterbody (polygon feature class) *
    LandSea (polygon feature class) *
    Sink (point feature class) *
    Wall (line feature class) *
```

```

\NHDSnapshot
    NHDCode (table)
    NHDReachCode_ComID (table)
    NHDReachCrossReference (table)
    \hydrography
        NHDFlowline (line feature class)
        NHDWaterbody (polygon feature class)
        NHDPoint (point feature class)
        NHDLane (line feature class)
        NHDArea (polygon feature class)
        NHDHydroAreaEventFC (empty polygon feature class)
        NHDHydroLineEventFC (empty line feature class)
        NHDHydroPointEventFC (empty point feature class)

\NEDSnapShot
    \NEDRRRRRRRRR
        \elev_cm
        \shdrelief*
        \info

\WBDSnapShot
    \WBD
        WBD_Subwatershed (polygon feature class)*

```

RPU folders reside under the VPU workspace folder and will contain NHDPlusV2 RPU components. Each RPU folder name ends in RRRRRRRR which is replaced with the RPUid.

```

\NHDPlusCatSeedRRRRRRRR
    \catseed (grid)*
    \info

\NHDPlusFdrFacRRRRRRRR
    \fac (grid)
    \fdr (grid)
    \info

\NHDPlusFdrNullRRRRRRRR
    \fdrnnull (grid)*
    \info

\NHDPlusFilledAreasRRRRRRRR
    \filledareas (grid)*
    \info

\NHDPlusHydrodemRRRRRRRR
    \hydrodem (grid)*
    \info

```

The NHDPlusV2 extended components will be stored in separate folders under the NHDPlusV2 Drainage Area or VPU folders, as appropriate. The structures of the, currently defined, extended components are:

\DAAttributeExtension

No drainage area attribute extensions have been define as yet.

\NHDPlusVVVVVVVV (VPU folder)

\EROMExtension

 EROM_MA_{nnnn} (table)*
 EROMQA_n_{nnn} (pdf)*
 EROMQA_MA_{nnnn} (table)*

\VOGELExtension

 VogelFlow (table)*

\VPUMAAttributeExtension

 IncrLat.txt*
 IncrPrecipMA.txt*
 IncrPrecipMM01.txt*
 IncrPrecipMM02.txt*
 IncrPrecipMM03.txt*
 IncrPrecipMM04.txt*
 IncrPrecipMM05.txt*
 IncrPrecipMM06.txt*
 IncrPrecipMM07.txt*
 IncrPrecipMM08.txt*
 IncrPrecipMM09.txt*
 IncrPrecipMM10.txt*
 IncrPrecipMM11.txt*
 IncrPrecipMM12.txt*
 IncrTempMA.txt*
 IncrTempMM01.txt*
 IncrTempMM02.txt*
 IncrTempMM03.txt*
 IncrTempMM04.txt*
 IncrTempMM05.txt*
 IncrTempMM06.txt*
 IncrTempMM07.txt*
 IncrTempMM08.txt*
 IncrTempMM09.txt*
 IncrTempMM10.txt*
 IncrTempMM11.txt*
 IncrTempMM12.txt*
 IncrROMA.txt*
 IncrROMM01.txt*
 IncrROMM02.txt*
 IncrROMM03.txt*
 IncrROMM04.txt*
 IncrROMM05.txt*
 IncrROMM06.txt*

IncrROMM07.txt*
IncrROMM08.txt*
IncrROMM09.txt*
IncrROMM10.txt*
IncrROMM11.txt*
IncrROMM12.txt*
CumDivPrecipMA.txt*
CumTotPrecipMA.txt*
CumDivTempMA.txt*
CumTotTempMA.txt*

Projection Information

All vector data in feature class format uses the following projection/coordinate system:

Projection	GEOGRAPHIC
Datum	NAD83
Zunits	NO
Units	DD
Spheroid	GRS1980
Xshift	0.0000000000
Yshift	0.0000000000

All grid datasets (cat, fac, fdr, elev_cm, ext_fac, ext_fdr) for the conterminous U.S. are stored in an Albers Equal-Area projection:

Projection	ALBERS
Datum	NAD83
Zunits	100 for elev_cm, otherwise “NO”
Units	METERS
Spheroid	GRS1980
Xshift	0.0000000000
Yshift	0.0000000000
Parameters	
29 30 0.000	/* 1st standard parallel
45 30 0.000	/* 2nd standard parallel
-96 0 0.000	/* central meridian
23 0 0.000	/* latitude of projection's origin
0.00000	/* false easting (meters)
0.00000	/* false northing (meters)

A Guide for Installing NHDPlusV2 Data

NHDPlusV2 data is distributed in compressed files created by 7-Zip (compression software) with a “.7z” extension. While 7-Zip can create files in standard Zip format, the NHDPlusV2 data is stored in a special 7-Zip format which creates even smaller compressed files. This helps preserve disk space and shorten download times.

Along with other zipping utilities that support “.7z” files, 7-Zip may be used to uncompress the NHDPlusV2 data. 7-Zip is a free utility available at: <http://www.7-zip.org/download.html>.

NHDPlusV2 data is distributed by Drainage Area. Within a Drainage Area, the NHDPlusV2 data components are packaged into .7z files either by Vector Processing Unit (VPU) or Raster Processing Unit (RPU). A Drainage Area is composed of one or more VPUs and a VPU is composed of one or more RPUs.

After installing 7-Zip (or other zipping utility that supports “.7z” files) and downloading the NHDPlusV2 data, please follow these steps to install the data:

1. Make a folder for the NHDPlusV2 data (e.g. \NHDPlusV2Data). For best performance, install the data on a local drive.
2. The compressed data files are named:

NHDPlusV2nn_<dd>_<VPUid>_componentname_<vv>
or
NHDPlusV2nn_<dd>_<VPUid>_<RPUid>_componentname_<vv>

where:

V2nn is version (2) and subversion (nn) of the NHDPlusV2 data model,
dd is the drainage area identifier,
VPUid is the VPU identifier,
RPUid is the RPU identifier,
Componentname is the name of the NHDPlusV2 component contained in the file,
and
vv is the data content version, 01, 02, ... for the component.

The valid values for NHDPlusV2 Drainage Areas, VPUs and RPUs are provided in section “NHDPlusV2 Data Structure”.

Each NHDPlusV2 “.7z” file should be uncompressed into the folder created in step 1. **Be certain to preserve the folder structure included in the “.7z” file.** When installed on Windows, the 7-Zip utility provides an “Extract Here” option on the context (right-click) menu in Windows Explorer. Saving all “.7z” files to the folder created in step 1, followed

by using the “Extract Here” option will ensure all folders and files are extracted to their appropriate locations.

3. Using Drainage Area GL (i.e. Great Lakes) and a VPU 04 (i.e. Hydrologic Region 04) as an example, when completely installed, the uncompressed data should look like this:

```
\NHDPlusV2Data  
  \NHDPlusGL  
    \DAAttributeExtension  
    \NHDPlus04  
      <NHDPlusV2 component folders>
```

4. NHDPlusV2nn_Global Data_vv.7z should be uncompressed into the same upper level folder as the drainage area data. The decompression will create the \NHDPlusGlobalData folder.

```
\NHDPlusV2Data  
  \NHDPlusGlobalData
```

5. NHDPlusV2nn_NationalData_vv.7z, it should be uncompressed into the same upper level folder as the drainage area data. The decompression will create the \NHDPlusNationalData folder.

```
\NHDPlusV2Data  
  \NHDPlusNationalData
```

6. NHDPlusV2nn_Metadata_vv.7z, it should be uncompressed into the same upper level folder as the drainage area data. The decompression will create the \NHDPlusV2nn_Metadata folder.

```
\NHDPlusV2Data  
  \NHDPlusV2nn_Metadata
```

NHDPlusV2 Distribution Files and NHDPlusV2 Components

The correspondence between the NHDPlusV2 .7z distribution files and the NHDPlusV2 data components that are contained in the .7z file is shown in the table below.

Distribution Zip Files	Zip File Contents
NHDPlusV2nn_Metadata_dd.7z	\NHDPlusV2nn_Metadata
NHDPlusV2nn_GlobalData_dd.7z	\NHDPlusGlobalData
	BoundaryUnit.shp
	BoundaryValue.dbf
	NHDPlusConnects.dbf
	\SuperCatchments
	SuperCatchments.shp
	\supercatgrids
	\sc<ComID> (grid)
NHDPlusV2nn_NationalData_dd.7z	\NHDPlusNationalData
	GageLoc.shp
	GageInfo.dbf
	RefGages.txt
	GageSmooth.dbf
	\nationalcat (grid)
	NationalWBDSnapshot.shp
The zip files below contain higher level folders as needed and as described previously.	\NHDPlusV2dd
	\NHDPlusVVVVVVVV
	\NHDPlusRRRRRRRR
NHDPlusV2nn_DD_<VPUid>_EROMExtension_dd.7z	\EROMExtension
	EROM_MA0001.dbf
	EROMQA_MA0001.dbf
	EROMQA_0001.pdf
NHDPlusV2nn_DD_<VPUid>_<RPUid>_NEDSnapshot_dd.7z	\NEDSnapshot
	\ ned<rpuid>
	\ elev_cm (grid)
	\ shdrelief (grid)
NHDPlusV2nn_DD_<VPUid>_NHDPlusAttributes_dd.7z	\NHDPlusAttributes
	CumulativeArea.dbf
	HeadwaterNodeArea.dbf
	DivFracMP.dbf
	PlusFlowlineVAA.dbf
	PlusFlow.dbf
	PlusARPointEvent.dbf
	PlusFlowAR.dbf
	MegaDiv.dbf
	ElevSlope.dbf
NHDPlusV2nn_DD_<VPUid>_NHDPlusBurnComponents_dd.7z	\NHDPlusBurnComponents
	BurnlineEvent.dbf
	BurnWaterbody.shp
	Sink.shp
	Wall.shp

	BurnAddLine.shp
	BurnAddWaterbody.shp
	LandSea.shp
NHDPlusV2nn_DD_<VPUid>_NHDPlusCatchments_dd.7z	\NHDPlusCatchment \cat (grid) Catchment.shp FeatureIDGridCode.dbf
NHDPlusV2nn_DD_<VPUid>_<RPUid>_CatSeed_dd.7z	\NHDPlusCatSeed<rpid> \catseed
NHDPlusV2nn_DD_<VPUid>_<RPUid>_FdrFac_dd.7z	\NHDPlusFdrFac<rpid> \fdr (grid) \fac (grid)
NHDPlusV2nn_DD_<VPUid>_<RPUid>_FdrNull_dd.7z	\NHDPlusFdrNull<rpid> \fdrnull
NHDPlusV2nn_DD_<VPUid>_<RPUid>_FilledAreas_dd.7z	\NHDPlusFilledAreas<rpid> \filledareas
NHDPlusV2nn_DD_<VPUid>_<RPUid>_Hydrodem_dd.7z	\NHDPlusHydrodem<rpid> \hydrodem
NHDPlusV2nn_DD_<VPUid>_NHDSnapshot_dd.7z	\NHDSnapshot \hydrography NHDFlowline.shp NHDWaterbody.shp NDArea.shp NHDPoint.shp NHDFcode.dbf
NHDPlusV2nn_DD_<VPUid>_VogelExtension_dd.7z	\VogelExtension VogelFlow.dbf
NHDPlusV2nn_DD_<VPUid>_VPUAttributeExtension_dd.7z	\VPUAttributeExtension IncrLat.txt IncrPrecipMA.txt IncrPrecipMMmm.txt CumDivPrecipMA.txt CumTotPrecipMA.txt IncrTempMA.txt IncrTempMMmm.txt CumDivTempMA.txt CumTotTempMA.txt ROMA0001.txt ROMMmm0001.txt
NHDPlusV2nn_DD_<VPUid>_WBDSnapshot_dd.7z	\WBDSnapshot \WBD Sub_Watershed.shp

Figure 6: NHDPlusV2 Distribution Files and Their Contents

NHDPlusV2 Versioning System

NHDPlusV2 has a dual versioning system; both the data model and the data content are versioned. The NHDPlusV2 .7z download files each contain the version information in the filename. The filenames have two formats:

NHDPlusV2nn_<dd>_<VPUid>_componentname_<vv>
or
NHDPlusV2nn_<dd>_<VPUid>_<RPUid>_componentname_<vv>

where:

V2nn is version (2) and subversion (nn) of the NHDPlusV2 data model
vv is the data content version, 01, 02, ... for the component.

Each component can be versioned and distributed without the need to re-release all components. For example, at any given time, both NHDPlusV21_MS_10L_Catchment_01.7z and NHDPlusV21_MS_10L_NHD_03.7z might be available for download. In this example, the Catchment shape file has data model version 2.1 and data content version 01, while the NHDSnapshot component has schema version 2.1 and data content version 03.

The NHDPlus download site will contain the most recent version for each component. When a change in NHDPlusV2 affects more than one component, the new version of all affected components will be made available at the same time. Therefore, users can be assured that all components on the download site, regardless of their indicated versions, are compatible with each other.

Users can determine which versions they have downloaded and uncompressed by examining the version text files that reside within the uncompressed NHDPlusV2 data. Each .7z files contain a .TXT file with the same name as the .7z file. For example, NHDPlusV21_MS_08_NHDSnapshot_02.7z will contain a file called NHDPlusV21_MS_08_NHDSnapshot_02.txt.

When NHDPlusV2 .7z files are uncompressed, the version text files are stored in the appropriate Drainage Area folder. These are empty text files used solely to denote, by their file name, what version of NHDPlusV2 data has been installed. The existence of these .TXT files means that the user, at one time, installed the indicated versions of the specified NHDPlusV2 components.

When uncompressing updates for the same component, the .TXT files will not be overwritten and will serve as a history of what NHDPlusV2 components and versions have been installed. In general, when a new version of a particular NHDPlusV2 component is released, a note about that component is added to the release notes for that VPU.

When an updated component is available, users must first delete the existing version of the component. This may be done with ArcCatalog or accomplished using Windows Explorer. The superceded NHDPlusV2 components that must be deleted are shown in the table in the section

above entitled “NHDPlusV2 Distribution Files and NHDPlusV2 Components”. Once the superceded version of the component is deleted, the updated component should be installed according to the instructions in the previous section.

NHDPlusV2 documentation is versioned by the data model version only (see first page of guide). When you download a component containing a new data model version, you should also download new documentation.

The first public version of NHDPlusV2 has a data model designation of V2.1 with the components having a variety of data content versions. Draft NHDPlusV2 data was distributed to a limited number of evaluation users. The draft data had a data model designation of V2 and was not accompanied by version .TXT files.

NHDPlusV2 Global Data Feature Class and Table Descriptions

NHDPlusV2 Global Data tables called BoundaryUnit, BoundaryValue, and NHDPlusConnect contain information that was compiled during the NHDPlus Build/Refresh process and include information such as the connection information between multiple VPUs in a drainage area and the geographic boundaries of VPUs and RPUs.

NHDPlusV2 Global Data tables called PlusMetadata, PlusSourceCitation, PlusSourceUsed are the metadata tables for NHDPlus. Metadata is created during the NHDPlusV2 Build/Refresh process and includes information about the source datasets used to build NHDPlusV2 and about the processing steps performed.

NHDPlusV2 Global Data feature classes called conus_ned_metadata_<yyymm> contain the metadata for each of the NED snapshots used to build NHDPlusV2.

The following conventions are used when describing NHDPlusV2 component attributes:

- Field formats are intended to be technology-neutral. Primary and foreign keys are all long integer format to facilitate relates and joins. Other formats show the maximum size and precision of the field.
- A particular database technology may dictate the format for a given field. As an example, a number with 6 total digits with 3 to the right of the decimal point is specified in this volume as (6,3), however it would be (7,3) in a .dbf file.
- All redundancy (un-normalized fields) in the database has been introduced to increase performance in the build/refresh tools and end-user tools.
- All field names are verbose to enhance readability, however, in some implementation formats, the field names may be truncated. For example, field names will be truncated to 10 characters in .dbf files.
- A field value of -9998 signifies that a value is applicable, but unknown.
- A field value of -9999 signifies that a value is not applicable

WHDPlusGlobalData\BoundaryUnit (feature class) (not released)

Description: Contains a polygon boundary for each geographic unit used to build the NHDPlus. The unit types that will have boundaries are VPU and RPU. The boundaries are built from NHDPlusV2 Catchments.

Field Name	Description	Format
DrainageID	Drainage area identifier	Character (2)
UnitID	Boundary Unit unique identifier	Character (8)
UnitName	Boundary Unit Name	Character (100)
UnitType	Boundary Unit Type - “VPU”, “RPU”	Character (5)
Hydroseq	Hydrologic order of Boundary Unit (populated for VPUs and RPUs only)	Num(11)
AreaSqKM	Area in square kilometers of the unit	Num(13,4)
Shape_Area	Feature area in square decimal degrees	See ESRI documentation

WHDPlusGlobalData\NHDPlusConnect (table) (not released)

Description: Provides the upstream/downstream relationships between VPUs and between RPUs. The NHDFlowline ComIDs that create the connections are provided in the table. This table is maintained by the NHDPlusV2 Build/Refresh Tools and can be thought of as a geographic unit flow relationship table.

Field Name	Description	Format
DrainageID	Drainage area identifier	Character (2)
UpUnitID	Unit Code of upstream unit	Character (8)
UpUnitType	“VPU”, “VDU”, “RPU”, “RDU”, or “HUCnn”	Character (5)
DnUnitID	Unit Code of downstream unit	Character (8)
DnUnitType	“VPU”, “VDU”, “RPU”, “RDU”, or “HUCnn”	Character (5)
UpComID	Flowline pourpoint of UpUnitCode	Long Integer
DnComID	Flowline inflow point of DnUnitCode	Long Integer

NHDPlusV2 Metadata Collection

WHDPlusMetadata\NHDPlusV21.met

Description: This file contains metadata for NHDPlusV2 as a whole. Metadata for individual VPUs can be found in the \NHDPlusVVVVVVVV folders.

WHDPlusMetadata\NHD.met (not yet released)

Description: In April 2010, the medium resolution NHD data was extracted from the USGS NHD database in preparation for building NHDPlusV2. The data was extensively edited (see section entitled “Highlights of How NHDPlusV2 Differs from NHDPlusV1”) prior to NHDPlusV2 production. The following links provide documentation about NHD:

<http://nhd.usgs.gov/index.html>

[http://nhd.usgs.gov/userguide.html?url=NHD User Guide/Feature Catalog/NHD Feature Catalog.htm](http://nhd.usgs.gov/userguide.html?url=NHD%20User%20Guide/Feature%20Catalog/NHD%20Feature%20Catalog.htm)

As time and resources permit, the edits made to NHD will be returned to USGS for inclusion in the NHD database.

WHDPlusMetadata\Conus_NED_Metadata<yyymm> (feature class) and WHDPlusGlobalData\NED_DataDictionary20100601 (pdf)

Description: These files contain metadata for the NED snapshots that were used to build NHDPlusV2. NHDPlusV21.met contains the NED snapshot date used for each VPU. Each NED snapshot has a separate metadata shapefile contained in the \NHDPlusGlobalData folder. The NED_DataDictionary20100601.pdf contains the field descriptions for the Conus_NED_Metadata_<yyymm> feature attributes.

WHDPlusMetadata\CDED_Metadata\CDED_Index_Polygons (polygon feature class) and cded_<tile>_fgdc_en.xml

Description: This folder contains metadata for the portions of the Canadian Digital Elevation Data (CDED) that was used to build NHDPlusV2. The CDED data were downloaded from the <http://www.geobase.ca> website. The CDED_Index_Polygons feature class contains an index to the individual data files that were used for NHDPlusV2. The CDED data tiles were accompanied by FGDC metadata xml files. The metadata files are provided in the metadata folder, and the first part of the filenames may be matched with the filenames shown in the Path field of the CDED_Index_Polygons feature class.

WHDPlusMetadata\WBD_Poly_Seamless.Met (text)

Description: This file contains the metadata for the WBD snapshots that were used to build NHDPlusV2. NHDPlusV21.met contains the WBD snapshot date used for each VPU. The WBD metadata is cumulative, with process descriptions listed in chronological order. The metadata for each WBD snapshot is described by all the process descriptions with dates equal to or earlier than the snapshot date.

WHDPlusMetadata\Precip and Temp Metadata (not yet released)

Description: This file contains the metadata for the precipitation and temperature data used to build NHDPlusV2. Precipitation and temperature data were compiled for the period 1971-2000 by combining two data sources: (1) Parameter-elevation Regressions on Independent Slopes Model data (PRISM) (<http://www.prismclimate.org>) for the conterminous U.S. and (2) a set of 1-km grids from the Canadian Forest Service, Natural Resources Canada (McKenney and others, 2006) for areas in Canada and Mexico. The resulting combined temperature and precipitation data was used to build the catchment allocation and, associated, network accumulation data contained in the \VPAttributeExtension folder.

Note: The temperature and precipitation grids used for NHDPlusV2 production, along with their metadata, will be released after production for the entire country is completed.

WHDPlusMetadata\Runoff Metadata (not yet released)

Description: This file contains the metadata for the runoff data used to build NHDPlusV2. The runoff data was used to build the incremental catchment allocation data contained in the \VPAttributeExtension folder.

Note: The runoff grids used for NHDPlusV2 production, along with their metadata, will be released after production for the entire country is completed.

WHDPlusGlobalData\SuperCatchments (feature class) (not yet released)

Description: Contains Supercatchment polygons. Supercatchments are drainage area polygons for the NHDFlowline associated with SuperCatchments.FeatureID. The Supercatchment is the entire drainage area upstream of the associated NHDFlowline designated by FeatureID. Supercatchments were created only for Hydrologic Region 04 (Great Lakes) to represent the entire drainage, both Canadian and US, into each of the lakes.

Field Name	Description	Format
GridCode	Catchment gridcode for the NHDFlowline catchment	Num(10,0)
FeatureID	ComID of the associated NHDFlowline	Long Integer
SourceFC	“NHDFlowline”	Char(20)
AreaSqKM	Area of the supercatchment in square kilometers	Num(18,6)
VPUID	Vector Processing Unit Identifier	Char(8)

WHDPlusGlobalData\SC<featureid> (grid) (not yet released)

Description: These are supercatchment grids. There is a grid for each supercatchment polygon in SuperCatchments. The featureid in the grid name links to SuperCatchments.FeatureID.

Field Name	Description	Format
Value	The value stored in the grid cell; a unique, compact identification number for an NHDFlowline catchment; also referred to as GridCode – See FeatureIDGridCode	Long Integer
Count	Number of grid cells with a particular value in the Value field.	Long Integer

NHDPlusV2 National Data Feature Class and Table Descriptions

The following conventions are used when describing NHDPlusV2 component attributes:

- Field formats are intended to be technology-neutral. Primary and foreign keys are all long integer format to facilitate relates and joins. Other formats show the maximum size and precision of the field.
- A particular database technology may dictate the format for a given field. As an example, a number with 6 total digits with 3 to the right of the decimal point is specified in this volume as (6,3), however it would be (7,3) in a .dbf file.
- All redundancy (un-normalized fields) in the database has been introduced to increase performance in the build/refresh tools and end-user tools.
- All field names are verbose to enhance readability, however, in some implementation formats, the field names may be truncated. For example, field names will be truncated to 10 characters in .dbf files.
- A field value of -9998 signifies that a value is applicable, but unknown.
- A field value of -9999 signifies that a value is not applicable

WHDPlusNationalData\GageLoc (feature class)

GageLoc contains the locations of streamflow gages on the NHDFlowline features. This table is used in the EROM gage adjustment step (See Appendix A).

Field Name	Description
ComID	Not populated
EventDate	Date event was created
ReachCode	ReachCode on which Stream Gage is located
ReachSMDat	Reach Version Date (Not populated)
Reachresol	Reach Resolution, always “Medium” (i.e. 1:100K scale)
FeatureCom	Reserved for future use
FeatureCla	Reserved for future use
Source_Ori	Originator of Event
Source_Dat	Description of point entity
Source_Fea	Gage ID/USGS Site Number
Featuredet	URL where detailed gage data can be found (NWISWEB)
Measure	Measure along reach where Stream Gage is located in percent from downstream end of the one or more NHDFlowline features that are assigned to the ReachCode
Offset	Always zero
EventType	“StreamGage”

WHDPlusNationalData\GageInfo (table)

GageInfo contains information about each gage extracted from the National Water Information System (NWIS). This table is used in the EROM gage adjustment step.

Field Name	Description
GageID	NWIS Gage ID
Agency_CD	Agency Code
Station_NM	Station Name
State_CD	State Code
State	State name
SiteStatus	“A” = Active, “I” = Inactive (flow measurements taken in 2010 or 2011)
DA_SQ_Mile	NWIS Drainage Area (Sq. Miles)
Lon_Site	NWIS Longitude
Lat_Site	NWIS Latitude
Lon_NHD	NHD Longitude
Lat_NHD	NHD Latitude
Reviewed	“Y” = NHD location was reviewed, “N” = Not reviewed

WHDPlusNationalData\Gage_Smooth (table)

Gage_Smooth provides the mean annual and mean monthly gage flows. This table is used in the EROM gage adjustment step (See Appendix A).

Variable	Format	Description
SITE_NO	Char(16)	The NWIS Gage ID
YEAR	Char(4)	The year
MONTH	Char(2)	The Month. "MA" = Mean Annual, "01" = January, "02" = February, etc.
AVE	Double	The mean flow for the year/month at the gage (cfs)
COMPLETERE	Integer	<p>0 = There is not a complete record for the time period.</p> <p>1 = There is a complete record for the time period.</p> <p>A complete record is daily flow values for every day in the time period.</p> <p>The time period is the Year/Mo for a monthly mean and the Year for a annual mean. The gage adjustments are only done using records that have a complete record.</p>

WHDPlusNationalData\nationalcat (grid)

Description: An ESRI integer grid containing a national version of the VPU cat grids (see “\NHDPlusCatchment\cat (grid)”). The cat grids contained in the individual VPUs are combined to build the nationalcat grid. NHDPlus catchments are created for NHDFlowline features and for Sink features.

The national cat grid is provided for display purposes by users interested in the overall distribution of catchments. Data analysis requiring linking NHDPlus data and attributes to the catchments should be done at the VPU level rather than at the national level. The catchment grid (cat) at the VPU level has a raster attribute table, with the attribute “FeatureID” that can be used to link other NHDPlus data and attributes to the catchments.

Field Name	Description	Format
Value	The value stored in the grid cell, A unique, compact identification number for each catchment, Also referred to as GridCode – See FeatureIDGridCode	Long Integer

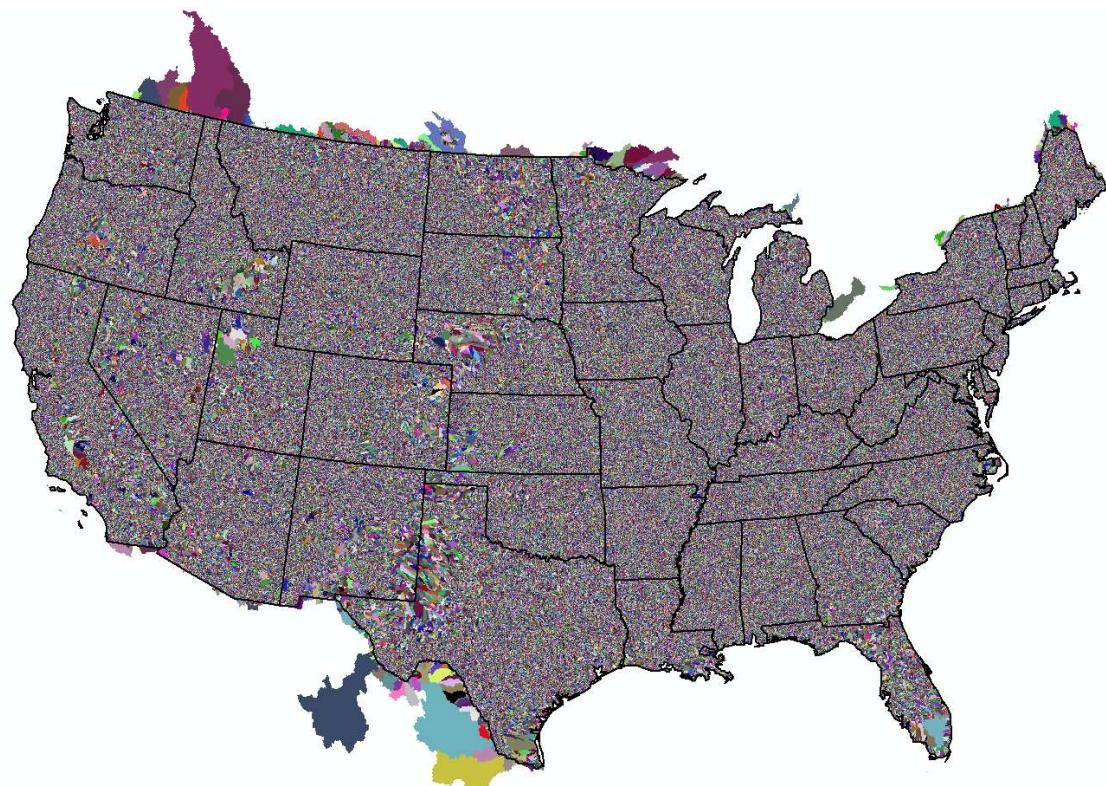


Figure 6.1: NHDPlusV2 Catchments

WHDPlusNationalData\NationalWBDSnapshot (feature class)

The \WBDSnapshot data that accompanies each VPU represents the most recent WBD data available at the time the VPU was processed. The NationalWBDSnapshot is a compilation of the VPU \WBDSnapshot data into a seamless national layer. See Appendix D for the description of the WBD attributes contained in this file. See Appendix A for a description of how this file was built. In addition to the standard WBD attributes, NationalWBDSnapshot contains the two additional attributes shown in the following table.

Field Name	Description	Format
	See appendix D for the standard WBD attributes	
WBD_Date	The version date of the NRCS national WBD from which this WBD HUC12 polygon originated.	Date
VPUID	The identifier of the NHDPlusV2 VPU that was built using this WBD HUC12 polygon.	Text(8)

NHDPlusV2 Core Feature Class, Grid, and Table Descriptions

The following conventions are used when describing NHDPlusV2 component attributes:

- Field formats are intended to be technology-neutral. Primary and foreign keys are all long integer format to facilitate relates and joins. Other formats show the maximum size and precision of the field.
- A particular database technology may dictate the format for a given field. As an example, a number with 6 total digits with 3 to the right of the decimal point is specified in this volume as (6,3), however it would be (7,3) in a .dbf file.
- All redundancy (un-normalized fields) in the database has been introduced to increase performance in the build/refresh tools and end-user tools.
- All field names are verbose to enhance readability, however, in some implementation formats, the field names may be truncated. For example, field names will be truncated to 10 characters in .dbf files.
- A field value of -9998 signifies that a value is applicable, but unknown.
- A field value of -9999 signifies that a value is not applicable

WHDPlusCatchment\FeatureIDGridcode (table)

Description: Tables containing crosswalk between Catchment FeatureIDs and gridcodes.

Field Name	Description	Format
FeatureID	FeatureID of the Catchment which equals the ComID of an NHDFlowline feature or the SinkID of a Sink feature	Long Integer
GridCode	Unique, compact identification number for a Catchment	Long Integer
RPUId	RPU identifier for the Catchment	Char(8)
SourceFC	Source Feature Class (“NHDFlowline” or “Sink”)	Char(20)

WHDPlusCatchment\cat (grid)

Description: An Environmental Systems Research Institute (ESRI) integer grid dataset that associates each cell with a catchment. NHDPlus catchments are created for NHDFlowline features and for Sink features.

Field Name	Description	Format
Value	The value stored in the grid cell; a unique, compact identification number for each catchment; also referred to as GridCode – See FeatureIDGridCode	Long Integer
Count	Number of grid cells with a particular value in the Value field.	Long Integer
FeatureID	FeatureID of the Catchment which equals the ComID of an NHDFlowline feature or the SinkID of a Sink feature	Long Integer
SourceFC	Source Feature Class (“NHDFlowline” or “Sink”)	Char(20)

WHDPlusCatchment\Catchment (polygon feature class)

Description: Contains a catchment polygon for either an NHDFlowline feature or a Sink feature.

Note: Some polygons may be multipart polygons.

Field Name	Description	Format
FeatureID	FeatureID of a Catchment which is equal to the ComID of an NHDFlowline feature or the SinkID of a Sink feature	Long Integer
GridCode	See FeatureIDGridCode	
AreaSqKm	Catchment area in square kilometers	Num(13,4)
SourceFC	Source Feature Class (“NHDFlowline” or “Sink”)	Char(20)
Shape_leng	Feature length in decimal degrees	See ESRI documentation
Shape_Area	Feature area in square decimal degrees	See ESRI documentation

WHDPlusAttributes\CumulativeArea (table)

Description: Tables containing cumulative area upstream of the downstream end of an NHDFlowline feature.

Field Name	Description	Format
ComID	Common identifier of an NHDFlowline feature	Long Integer
TotDASqKm	Total Upstream Cumulative Drainage Area, in square kilometers, at the downstream end of the NHDFlowline feature	Num(14,6)
DivDASqKm	Divergence-routed Cumulative Drainage Area, in square kilometers, at the downstream end of the NHDFlowline feature	Num(14,6)

NHDPlusAttributes\DivFracMP (table)

Description: Contains specifications about the fraction of a cumulative attribute to be routed through each path in a divergence. The ComIDs in this table represent NHDFlowline surface water features, found in the PlusFlow table, that form a network divergence (i.e. a flow split). All the paths in a given divergence are identified in this table by a unique NodeNumber.

When stream name is used to determine the mainpath in a divergence, the entries in the DivFracMP table do not override the mainpath designation in the Divergence flag in PlusFlowlineVAA. PlusFlowlineVAA.Divergence always follows the named stream path. When stream name does not determine the mainpath, then values in DivFracMP will establish the value in PlusFlowlineVAA.Divergence.

All divergences are represented in this table. If DivFracMP values are specified, they are used in the divergence routing method of all NHDPlus accumulated attributes, such as drainage area. Divergences where no information is known about the fractional split have DivFracMP.DivFrac = -9998 for all paths in the divergence. In this case, the Divergence Routing method uses the PlusFlowlineVAA.Divergence field and routes a fraction of 1 to the main path (i.e. Divergence = 1) and a fraction of 0 to all other paths (i.e. Divergence = 2). The impact of using DivFracMP in the Divergence Routing method is discussed in section “Understanding and Using NHDPlusV2”.

When not set to -9998, the sum of the DivFrac values for all paths in a divergence (i.e. all records with the same NodeNumber) must equal 1.

Field Name	Description	Format
ComID	ComID of an NHDFlowline feature which is a path in a divergence	Long Integer
NodeNumber	See PlusFlowlineVAA.FromNode	Num(11)
DivFrac	Fraction used for routing cumulative attributes down the flowlines paths in a divergence. Values between 0 and 1	Num(5,4)
StatusFlag	Reserved for use during NHDPlusV2 Build/Refresh Tools Processing	Char(1)

WHDPlusAttributes\ElevSlope (table)

Description: Elevation and slope derived for NHDFlowline features.

Field Name	Description	Format
ComID	Common identifier of an NHDFlowline feature	Long Integer
Fdate	See NHDFlowline	
MaxElevRaw	Maximum elevation (unsmoothed) in centimeters	Num(10,3)
MinElevRaw	Minimum elevation (unsmoothed) in centimeters	Num(10,3)
MaxElevSmo	Maximum elevation (smoothed) in centimeters	Num(10,3)
MinElevSmo	Minimum elevation (smoothed) in centimeters	Num(10,3)
Slope	Slope of flowline (meters/meters) based on smoothed elevations; a value of -9998 means that no slope value is available. See Appendix A, step 22 for information about slope computation.	Num(12,8)
SlopeLenKM	NHDFlowline feature length (kilometers) used to compute slope. Will be less than NHDFlowline.LengthKM when the NHDFlowline feature was trimmed during the hydro-enforcement process. See Appendix A, step 14 and 15 for information about trimming of NHDFlowlines.	Num(11,3)
ElevFixed	Flag indicating that the downstream elevation is fixed (i.e. not smoothed)	Char(1)
HWTType	“H” – real headwater, “A” – Artificial Head water (i.e. all inflows have Gapdist > 43m)	Char(1)
StatusFlag	Reserved for use during NHDPlusV2 Build/Refresh Tools Processing	Char(1)

WHDPlusAttributes\HeadwaterNodeArea (table)

Description: For each headwater node in the surface water network, the HeadWaterNodeArea table contains the size of the land area that drains to the node at the upstream end of the flowline.

Field Name	Description	Format
ComID	Common identifier of an NHDFlowline feature	Long Integer
Fdate	See NHDFlowline	
HwNodesqkm	Catchment area in square kilometers that drains to the headwater node of the NHDFlowline feature	Num(13,4)

WHDPlusAttributesMegaDiv (table)

Description: Table containing the PlusFlow records for divergences that have more than two outflow paths.

Field Name	Description	Format
FromComID	Common identifier of the upstream NHDFlowline feature	Long Integer
ToComID	Common identifier of the downstream NHDFlowline feature	Long Integer

WHDPlusAttributesPlusFlowlineVAA (table)

Description: Value Added Attributes (VAAs) for each NHDFlowline feature that appears in the PlusFlow table (i.e. every NHDFlowline with NHDFlowline.FlowDir = “With Digitized”). The NHDPlusV2 Build/Refresh process populates the PlusFlowlineVAA table. The PlusFlowlineVAA table differs from the NHDFlowlineVAA table. NHDFlowlineVAA is an official part of the NHD schema, contains any VAA values that are stored in the NHD central database and is not populated by the NHDPlusV2 Build/Refresh process.

Additional documentation on VAAs can be found in Appendix A under “Step 6” and “Step 10” of the NHDPlusV2 Build/Refresh Tools process.

Field Name	Description	Format
ComID	Common identifier of an NHDFlowline feature	Long Integer
Fdate	See NHDFlowline	
StreamLevel	Stream level	Num(2)
StreamOrder	Modified Strahler Stream Order http://en.wikipedia.org/wiki/Strahler_number ftp://ftp.horizon-systems.com/NHDPlusExtensions/SOSC/SOSC_technical_paper.pdf	Num(2)
StreamCalculator	Stream Calculator ftp://ftp.horizon-systems.com/NHDPlusExtensions/SOSC/SOSC_technical_paper.pdf	Num(2)
FromNode	Unique identifier for the point at the top of the NHDFlowline feature	Num(11)
ToNode	Unique identifier for the point at the end of the NHDFlowline feature	Num(11)
Hydroseq	Hydrologic sequence number; places flowlines in hydrologic order; processing NHDFlowline features in ascending order, encounters the features from downstream to upstream; processing the NHDFlowline features in descending order, encounters the features from upstream to downstream.	Num(11)
LevelPathID	Hydrologic sequence number of most downstream NHDFlowline feature in the level path	Num(11)

PathLength	Distance to the terminal NHDFlowline feature downstream along the mainpath	Num(13,4)
TerminalPathID	Hydrologic sequence number of terminal NHDFlowline feature	Num(11)
ArboluteSum	Kilometers of stream upstream of the bottom of the NHDFlowline feature	Num(13,4)
Divergence	0 – feature is not part of a divergence 1 – feature is the main path of a divergence 2 – feature is a minor path of a divergence	Num(1)
StartFlag	0 – feature is not a headwater flowline 1 – feature is a headwater flowline	Num(1)
TerminalFlag	0 – not a terminal NHDFlowline feature 1 – a terminal NHDFlowline feature	Num(1)
DnLevel	Streamlevel of mainstem downstream NHDFlowline feature	Num(2)
ThinnerCode	Not valued; Reserved for future use	
UpLevelPathID	Upstream mainstem level path identifier	Num(11)
UpHydroSeq	Upstream mainstem hydrologic sequence number	Num(11)
DnLevelPathID	Downstream mainstem level path identifier	Num(11)
DnMinorHyd	Downstream minor hydrologic sequence number	Num(11)
DnDrainCount	Number of NHDFlowline features immediately downstream	Num(2)
DnHydroSeq	Downstream mainstem hydrologic sequence number	Num(11)
FromMeas	ReachCode route measure (m-value) at bottom of NHDFlowline feature	Num(8,5)
ToMeas	ReachCode route measure (m-value) at top of NHDFlowline feature	Num(8,5)
ReachCode	See NHDFlowline	
LengthKM	See NHDFlowline	
Fcode	See NHDFlowline	
RTNDiv	Returning Divergence Flag; 0 = no upstream divergences return at the top of this NHDFlowline feature 1 = one or more upstream divergences returned to the network at the top of this NHDFlowline feature	Num(1)
OutDiv	Not valued; Reserved for future use	Num(1)
DivEffect	Not valued; Reserved for future use	Num(1)
VPUIn	Are there VPU inflows? 0(no) or 1(yes)	Num(1)
VPUOut	Are there VPU Outflows? 0(no) or 1(yes)	Num(1)
AreaSqKm	See Catchment	
TotDASqKM	See CumulativeArea	
DivDASqKM	See CumulativeArea	
TravTime	Time to travel this flowline using mean annual velocity from the Extended Unit Runoff Method; not valued	Num(6,3)
PathTime	Time to travel to network terminus using mean annual velocity from the Extended Unit Runoff Method; not valued	Num(13,4)

WHDPlusAttributes\PlusFlow (table)

Description: A table that describes flowing and non-flowing connections between NHDFlowline features. The table contains entries for: (1) pairs of NHDFlowline features that exchange water, (2) headwater NHDFlowline features, (3) terminal NHDFlowline features, (4) surface water NHDFlowline features that connect to coastline NHDFlowline features, and (5) coastline NHDFlowline features that connect to each other.

Note: Native NHD contains a flow table called NHDFlow. NHDFlow contains only geometric connections between NHDFlowline features. PlusFlow, on the other hand, includes non-geometric and geometric connections. Non-geometric connections are used to represent situations such as return flows along an international border and underground connections in karst topography.

Field Name	Description	Format
FromComID	Common identifier for the upstream NHDFlowline feature	Long Integer
FromHydroSeq	Hydroseq of FromComID	Num(11)
FromLevelPathID	LevelPathID of FromComID	Num(11)
ToComID	Common identifier for the downstream NHDFlowline feature	Long Integer
ToHydroSeq	Hydroseq of ToComID	Num(11)
ToLevelPathID	LevelPathID of ToComID	Num(11)
NodeNumber	Node number at the bottom of FromComID and the top of ToComID	Num(11)
DeltaLevel	Numerical difference between StreamLevel for FromComID and StreamLevel for ToComID	Num(3)
Direction	714 – coastal connection (FromComID may be a coastline and ToComID is always a coastline) 709 – flowing connection 712 – network start (ToComID is a headwater) 713 – network end (FromComID is a network end)	Num(3)
GapDistKM	Distance between the downstream end of FromComID and the upstream end of ToComID	Num(13,4)
HasGeo	“Y”es FromComID touches ToComID, “N”o, there is a geometry gap between FromComID and ToComID	Char(1)
TotDASqKM	See CumulativeArea	
DivDASqKM	See CumulativeArea	

WHDPlusAttributes\PlusARPointEvent (table)

Description: A table containing point events which represent the locations of flow additions to and flow removals from the stream network. The network location is provided by the ReachCode and measure base on the linear referencing system of the NHDFlowline feature class. The geometry of the point events may be derived using the ArcGIS Linear Referencing Tool called Make Route Event Layer.

Field Name	Description	Format
ComID	A nationally unique negative ComID assigned to the point of addition or removal	Long Integer
EventDate	Data event was created	Date
ReachCode	See NHDFlowline	Char(14)
ReachSMDat	See NHDReachCode_ComID table	Date
Reachresol	“Medium”	Char(7)
FeatureCom	Not valued	Long Integer
FeatureCla	Not valued	Char(15)
Source_Ori	Not valued	Char(130)
Source_Dat	Not valued	Char(100)
Source_Fea	External identifier of the event point, generally a key in an external database	Char(40)
FeatureDet	URL link to information about the event point	Char(254)
Measure	m-value (0 to 100) of the point location along the NHDFlowline route defined by ReachCode	Num(8,5)
Offset	Not valued	Num
EventType	“Addition” or “Removal”	Char(100)

WHDPlusAttributes\PlusFlowAR (table)

Description: A table that describes the connections between NHDFlowline features, flow addition points and flow removal points. See PlusARPointEvent

Type of Table Entry	FromComID	ToComID
Flow addition	Addition point	NHDFlowline feature
Flow removal	NHDFlowline feature	Removal point
Flow Transfer	Removal point	Addition point
Flow use/consumption	Removal point	none

Field Name	Description	Format
FromComID	ComID of NHDFlowline feature, Addition point, or Removal point	Long Integer
FromFC	“NHDFlowline” or “PlusARPointEvent”	Char(20)
ToComID	ComID of NHDFlowline feature, Addition point, or Removal point	Long Integer
ToFC	“NHDFlowline” or “PlusARPointEvent”	Char(20)
Quantity	Quantity of Flow through this connection	Num(14,7)
Units	Units of measurement for Quantity, “CFS” = cubic feet per second	Num(3)

WHDPlusFdrFacrrrrrrr\fac (grid)

Description: An ESRI integer flow accumulation grid which contains the number of cells within the RPU draining to each cell within the RPU based on the HydroDEM.

Field Name	Description	Format
Value	Number of cells that drain to each cell.	See ESRI documentation

WHDPlusFdrFacrrrrrrr\fdr (grid)

Description: An ESRI integer flow direction grid which contains the codes that show the direction water would flow from each grid cell within the RPU based the HydroDEM.

Field Name	Description	Format
Value	The value for the grid cell. Can be assigned one of eight possible values: 0 – Flow ends (sink) 1 – Flow is to the East 2 – Flow is to the Southeast 4 – Flow is to the South 8 – Flow is to the Southwest 16 – Flow is to the West 32 – Flow is to the Northwest 64 – Flow is to the North 128 – Flow is to the Northeast	See ESRI documentation
Count	Number of cells with a particular value in the Value field	Long Integer

WHDPlusFilledAreasrrrrrrr\filledareas (grid)

Description: An ESRI integer grid which identifies cells which were raised by the Fill process.

Field Name	Description	Format
Value	The value for the grid cell. Can be assigned one of two possible values: 0 – Cell was not changed by the Fill process 1 – Cell was raised by the Fill process	See ESRI documentation
Count	Number of cells with a particular value in the Value field	Long Integer

WHDPlusCatSeedrrrrrrr\catseed (grid)

Description: An ESRI integer grid which contains the codes that show the locations of the seed cells used to produce the NHDPlusV2 catchments.

Field Name	Description	Format
Value	Gridcode of the catchment. See FeatureIDGridCode	

WHDPlusFdrNullrrrrrrr\fdrnnull (grid)

Description: An ESRI integer grid which contains the codes that show the direction water would flow from each grid cell based on the HydroDEM. Identical to the fdr grid except that the stream network cells are set to “no data”.

Field Name	Description	Format
Value	For Stream Network cells, No Data For cells not on the stream network, the value for the grid cell is: 0 – Flow ends (sink) 1 – Flow is to the East 2 – Flow is to the Southeast 4 – Flow is to the South 8 – Flow is to the Southwest 16 – Flow is to the West 32 – Flow is to the Northwest 64 – Flow is to the North 128 – Flow is to the Northeast NoData – a stream network cell	See ESRI documentation
Count	Number of cells with a particular value in the Value field	Long Integer

WHDPlusHydroDemrrrrrrr\hydrodem (grid)

Description: An ESRI integer grid of the hydro-conditioned digital elevation model, with all aspects of the NHDPlus burn components integrated and filled. This grid is used to generate the flow direction grid from which the flow accumulation and catchment grids are generated. The elevations are in centimeters.

Field Name	Description	Format
Value	Elevation value in centimeters	See ESRI documentation

WHDPlusBurnComponents\BurnLineEvent (table)

Description: Events that describe the parts of NHDFlowline features are used for hydro-enforcement.

Field Name	Description	Format
ComID	Common identifier of an NHDFlowline feature	Long Integer
GridCode	See ComIDGridCode	
Hydroseq	See PlusFlowlineVAA	
FCode	See NHDFlowline	
FType	See NHDFlowline	
Fdate	See NHDFlowline	
ReachCode	See NHDFlowline	
ReachSMDate	See NHDReachCodeComID	
FromMeas	Downstream BurnLineEvent Measure (m-value)	Num(8,5)
ToMeas	Upstream BurnLineEvent Measure (m-value)	Num(8,5)
StartFlag	See PlusFlowlineVAA	
LengthKM	See PlusFlowlineVAA	
BurnLengKM	Length of BurnLineEvent feature	Num(7,3)
Divergence	See PlusFlowlineVAA	
StreamLevel	See PlusFlowlineVAA	
StreamCalc	See PlusFlowlineVAA	
StatusFlag	Reserved for use during NHDPlusV2 Build/Refresh Tools Processing	Char(1)
InRPU	RPU that contains the BurnLineEvent feature	Text(8)
Catchment	“Y” – line will receive a catchment, “N” - will not receive a catchment	Text(1)
Burn	“Y” – line will be used for hydro-enforcement, “N” - will not be used for hydro-enforcement	Text(1)

WHDPlusBurnComponents\BurnWaterbody (polygon feature class)

Description: NHDWaterbody and NHDArea features used for hydro-enforcement.

Field Name	Description	Format
ComID	Common identifier of the NHDWaterbody feature or NHDArea feature	Long Integer
NHDFC	NHD Feature Class – “W”aterbody, “A”rea	Character(1)
FCode	See NHDWaterbody or NHDArea	
ReachCode	See NHDWaterbody or NHDArea	
ReachSMDate	See NHDReachCodeComID	
OnOffNet	On/Off network flag – 1 = On network, 0 = Off network	Num(1)
Shape_Leng	Feature Length in Decimal Degrees	See ESRI documentation
Shape_Area	Feature Area in Decimal Degrees	See ESRI documentation

WHDPlusBurnComponents\Sink (point feature class)

Description: Point locations of sinks used for hydro-enforcement.

Field Name	Description	Format
SinkID	Unique identifier for sink point	Long Integer
GridCode	See Catchment and Cat	
PurpCode	Purpose of Sink, See Appendix E	Char(2)
PurpDesc	Description of Sink	Char(254)
ComID	See NHDFlowline If the sink is associated with the downstream end of an NHDFlowline feature that is a network end, this is the Common Identifier of the NHDFlowline feature.	
Fdate	See NHDFlowline	
StatusFlag	Reserved for use during NHDPlusV2 Build/Refresh Tools Processing	Char(1)

WHDPlusBurnComponents\Wall (line feature class)

Description: Lines used as walls in hydro-enforcement.

Field Name	Description	Format
WallID	Unique identifier for wall line	Long Integer
Source_Id	Place holder for WBD unique identifier (not part of the current WBD data model)	Long Integer

WHDPlusBurnComponents\LandSea (*polygon feature class*)

Description: Polygons used for hydro-enforcement along the NHD coastline.

Field Name	Description	Format
LandSeaID	Unique identifier for land/sea polygon	Long Integer
Land	A numeric code to identify land/sea/estuary areas. 1 = Land, -2 = Sea, -1 = Estuary	Short Integer

WHDPlusBurnComponents\BurnAddLine (*line feature class*)

Description: Additional lines not in BurnLineEvent that are needed for hydro-enforcement.

Field Name	Description	Format
LineID	Unique identifier for wall line	Long Integer
GridCode	Manually assigned gridcodes. See Appendix A, Step 15.	
PurpCode	Purpose of added line. See Appendix E.	
PurpDesc	Description of added line.	
StreamLevel	Manually assigned streamlevel value. See Appendix A.	
HydroSeq	See PlusFlowLineVAA; a manually assigned number that puts the additional line in the proper hydrologic sequence with BurnLineEvent.	

WHDPlusBurnComponents\BurnAddWaterbody (*polygon feature class*)

Description: Additional waterbodies not in BurnWaterbody that are needed for hydro-enforcement.

Field Name	Description	Format
PolyID	Unique identifier for wall line	Long Integer
PurpCode	Purpose of added waterbody (see Appendix E)	Text(2)
PurpDesc	Description of added waterbody	Text(254)
OnOffNet	0 = Off network, 1 = On network	Short Integer
FCode	See NHDFCode	

NHDPlusV2 Extended Feature Class and Table Descriptions

The following conventions are used when describing NHDPlusV2 component attributes:

- Field formats are intended to be technology-neutral. Primary and foreign keys are all long integer format to facilitate relates and joins. Other formats show the maximum size and precision of the field.
- A particular database technology may dictate the format for a given field. As an example, a number with 6 total digits with 3 to the right of the decimal point is specified in this volume as (6,3), however it would be (7,3) in a .dbf file.
- All redundancy (un-normalized fields) in the database has been introduced to increase performance in the build/refresh tools and end-user tools.
- All field names are verbose to enhance readability, however, in some implementation formats, the field names may be truncated. For example, field names will be truncated to 10 characters in .dbf files.
- A field value of -9998 signifies that a value is applicable, but unknown.
- A field value of -9999 signifies that a value is not applicable

\EROMExtension\EROM_MA0001 (*table*)

Description: Extended Unit Runoff Method (EROM) mean annual flow statistic estimates for NHDFlowline features in the NHDPlus network. The best EROM flow and velocity estimates are the gage adjusted values. These values are Q0001E and V0001E, respectively, in the EROM_MA0001 table. Table 2 of the EROM QA report provides an estimate of how good these flow estimates are as compared to gage flows. For “natural” flows and velocities, the best estimates are the Reference Gage Regression values. These values are Q0001C and V0001C, respectively, in the EROM_MA0001 table. The “RefGage Reg” column in Table 3 of the EROM QA Report provides an estimate of how good these flow estimates are as compared to gage flows.

All Flow estimates are in cubic feet per second (cfs) and represent the flow at the bottom (downstream end) of the NHDFlowline feature.

All Velocity computations are in feet per second (fps) using the Jobson Method (1996) and represent the velocity at the bottom of the NHDFlowline feature.

Field Name	Description	Format
ComID	Common identifier of an NHDFlowline feature	Long Integer
Q0001A	Flow from runoff	Num(14,3)
V0001A	Velocity for Q0001A	Num(14,5)
Qincr0001A	Incremental Flow from runoff	Num(13,5)
Q0001B	Flow with Excess ET	Num(14,3)
V0001B	Velocity for Q0001B	Num(13,5)
Qincr0001B	Incremental Flow With Excess ET	Num(13,5)
Q0001C	Flow with Reference Gage Regression applied to Q0001B	Num(14,3)
V0001C	Velocity for Q0001C	Num(13,5)
Qincr0001C	Incremental Flow by subtracting the sum of upstream Q<eeee>C flows from the sum of the upstream Q0001C	Num(13,5)
Q0001D	Flow with PlusFlowAR	Num(14,3)
V0001D	Velocity for Q0001D	Num(13,5)

Qincr0001D	Incremental flow with PlusFlowAR	Num(13,5)
Q0001E	Flow from gage adjustment	Num(14,3)
V0001E	Velocity from gage adjustment	Num(13,5)
Qincr0001E	Incremental flow from gage adjustment	Num(13,5)
Q0001F	Flow from gage sequestration step	Num(14,3)
Qincr0001F	Incremental flow from gage sequestration step	Num(13,5)
ARQ0001NAV	PlusflowAR flow not available on flowline	Num(14,3)
TEMP0001	Catchment temperature Deg. C	Num(14,5)
PPT0001	Catchment precipitation mm	Num(14,5)
PET0001	Catchment PET mm	Num(14,5)
QLOSS0001	Catchment flow loss from Excess ET	Num(14,3)
QG0001ADJ	Gage adjustment flow cfs	Num(14,3)
QG0001NAV	Gage adjustment flow not available(cfs)	Num(14,3)
DivDASqKM	Divergence-routed cumulative area	Num(14,6)
AreaSqKm	See Catchment	Num(14,6)
Lat	Average Latitude of catchment in decimal degrees	Num(9,5)
Gageadj	Flag indicating that Q<eeee>E and Qincr0001E have been adjusted by gage flow. “0” = not adjusted, “2” = adjusted, including the NHDFlowline feature at the gage and the NHDFlowline features upstream.	Text(1)
Avgqadj	Gage Q adjusted for bottom of an NHDFlowline feature	Num(14,3)
SMGageID	The ID of the gage located on NHDFlowline feature	Text(16)
SMGageq	Gaged flow measured by the gage on NHDFlowline feature	Num(14,3)
ETFRAC1	Excess ET Fraction 1	Num(5,3)
ETFRAC2	Excess ET Fraction 2	Num(5,3)
A	Reference gage regression coefficient “a”	Num(11,5)
B	Reference gage regression coefficient “b”	Num(11,5)
BCF	Reference gage regression Bias Correction Factor	Num(11,5)
r2	Reference gage regression Log-Log r ²	Num(11,4)
SER	Reference gage regression log-log Standard Error of the Regression	Num(11,5)
NRef	Number of Reference gages used in the regression	Num(5,4)
Gageseqp	Proportion of gages to sequester in the gage sequestration step. Values 0 to 1.	Num(5,3)
Gageseq	0 = gage not sequestered, 1= gage sequestered	Num(5,3)

\EROMExtension\EROMQA_0001 (pdf)

Description: QA statistics in report form for the EROM mean annual flow estimates in \EROMExtension\EROM_MA0001.

\EROMExtension\EROMQA_MA0001 (table)

Description: QA statistics in table form for the EROM mean annual flow estimates in the \EROMExtension\EROMMA_0001. The file layout is designed to facilitate graphical and statistical analyses. All data values are adjusted for the bottom of the flowline. The files are sorted by GageRef so that all of the reference gages are at the top of the file; this is useful for users who want to look at graphs or additional statistics for only the reference gages.

Field Name	Description	Format
ComID	Common identifier of an NHDFlowline feature	Long Integer
Gageid	The NWIS gageid	Text(16)
GageRef	Text field: “Ref” = Falcone Reference Gage. Blank = not Reference gage.	Char(3)
DivDASqKm	The NHDPlusV2 divergence-routed drainage area at the bottom of the flowline.(SqKm)	Num(14,3)
Q_E	The Gage Flow (cfs)	Num(14,3)
Q_A	Cumulative runoff (cfs)	Num(14,3)
Q_B	Q_A – Excess ET (EET) (cfs)	Num(14,3)
Q_C	Q_A - EET +/- Refgage Regression Adjustment	Num(14,3)
Q_D	Q_A – EET +/- Refgage Regression Adjustment +/- PlusFlowAR (cfs)	Num(14,3)
Q_Eunitro	Q_E / DivDASqKm	Num(14,3)
Q_Aunitro	Q_A / DivDASqKm	Num(14,3)
Q_Bunitro	Q_B / DivDASqKm	Num(14,3)
Q_Cunitro	Q_C / DivDASqKm	Num(14,3)
Q_Dunitro	Q_D / DivDASqKm	Num(14,3)
Q_Adelta	Q_E – Q_A	Num(14,3)
Q_Bdelta	Q_E – Q_B	Num(14,3)
Q_Cdelta	Q_E – Q_C	Num(14,3)
Q_Ddelta	Q_E – Q_D	Num(14,3)
Q_Aurodelt	Q_Eunitro – Q_Aunitro	Num(14,3)
Q_Burodelt	Q_Eunitro – Q_Bunitro	Num(14,3)
Q_Curodelt	Q_Eunitro – Q_Cunitro	Num(14,3)
Q_Durodelt	Q_Eunitro – Q_Dunitro	Num(14,3)

\Vogel\Extension\VogelFlow (table)

Description: Vogel Method flow volume and velocity estimates for NHD flowlines. The Vogel Method is not applicable for total drainage area ranges that fall outside of the AreaMax and AreaMin values in the Vogel_Coefficients Table (see Appendix A, Vogel). These drainage area ranges vary by Hydroregion.

Field Name	Description	Format
ComID	Common identifier of an NHDFlowline feature	Long Integer
MAFlowV	Mean Annual Flow (cfs) at bottom of flowline using Vogel Method.	Num(14,7)
MAVelV	Mean Annual Velocity (fps) at bottom of flowline using Jobson Method (1996) with MAFlowV.	Num(8,5)

\VPAttributeExtension\ncrLat (comma delimited table)

Description: Mean latitude of each NHDPlusV2 catchment.

Field Name	Description	Format
FeatureID	FeatureID of an NHDPlusV2 Catchment	Long Integer
MissDataA	Area of Catchment with no data	Num(13,4)
LatVT	Value Type	“V” meaning average
LatV	Mean latitude in degrees	Num(5,2)
Hydroseq	When FeatureID represents an NHDFlowline feature, the Hydrologic Sequence Number of the feature; When FeatureID represents a Sink, set to -9998	Num(11)

\VPUAttributeExtension\ROMA0001 and ROMMmm0001 (comma delimited tables)

Description: Mean annual and mean monthly runoff in the area of each NHDPlusV2 catchment. There is a mean monthly table for each month (mm = 01 through 12). Mean annual runoff values were used in computing EROM mean annual flow estimates. The mean monthly runoff values will be used to compute EROM mean monthly flow estimates in the future (see Appendix A: EROM).

Note: If a catchment extends beyond the extent of the runoff data (e.g. into Canada or Mexico), the value will be the runoff over the portion of the catchment which does have data. MissDataA will contain the area in the catchment where data was not available.

Field Name	Description	Format
FeatureID	FeatureID of an NHDPlusV2 Catchment	Long Integer
MissDataA	Area of Catchment with no data	Num(13,4)
RunOffVT	Value Type	“V” meaning average
RunOffV	Mean annual runoff in millimeters	Num(5,2)
Hydroseq	When FeatureID represents an NHDFlowline feature, the Hydrologic Sequence Number of the feature; When FeatureID represents a Sink, set to -9998	Num(11)

WHDPlusAttributeExtension\IncrPrecipMA and IncrPrecipMMmm (tables)

Description: Mean annual and mean monthly precipitation averaged over the area of each NHDPlusV2 catchment. IncrPrecipMA contains the mean annual precipitation and the 12 IncrPrecipMMnn tables contain the mean monthly values where mm = 01 through 12). The precipitation values have been computed using a grid which combined the Parameter-elevation Regressions on Independent Slopes Model data (PRISM) (<http://www.prismclimate.org>) for the conterminous U.S. and a set of 1-km grids from the Canadian Forest Service, Natural Resources Canada, for areas in Canada. Mean annual precip values were used in computing EROM mean annual flow estimates. The mean monthly precip values will be used to compute EROM mean monthly flow estimates in the future (see Appendix A: EROM)

Note: If a catchment extends into Mexico and therefore beyond the extent of the precipitation data, the value will be the average over the portion of the catchment which does have data. MissDataA will contain the area in the catchment where data was not available.

Field Name	Description	Format
FeatureID	FeatureID of an NHDPlusV2 Catchment	Long Integer
MissDataA	Area of Catchment with no data	Num(13,4)
PrecipVT	Value Type	“V” meaning average
PrecipV	Mean annual precipitation in millimeters * 100	Num(5,2)
Hydroseq	When FeatureID represents an NHDFlowline feature, the Hydrologic Sequence Number of the feature; When FeatureID represents a Sink, set to -9998	Num(11)

WHDPlusAttributeExtension\CumTotPrecipMA and CumDivPrecipMA (tables)

Description: Mean annual precipitation accumulated down the NHDFlowline network. Two tables are created: (1) Total upstream accumulation and (2) Accumulation based on the Divergence Routed method.

Field Name	Description	Format
FeatureID	ComID of an NHDFlowline feature and, where applicable, FeatureID of an NHDPlusV2 Catchment	Long Integer
MissDataA	Area of Drainage Area with no data	Num(13,4)
PrecipCT	Value Type, “V” meaning average	Char(1)
PrecipCV	Mean annual precipitation in area upstream of the bottom of flowline in millimeters * 100	Num(5,2)
Hydroseq	Hydrologic Sequence Number of an NHDFlowline feature	Num(11)

WHDPlusAttributeExtension\IncrTempMA and IncrTempMMmm (tables)

Description: Mean annual and mean monthly temperature averaged over the area of each catchment. IncrPrecipMA contains the mean annual precipitation and the 12 IncrPrecipMMnn tables contain the mean monthly values where mm = 01 through 12). The temerature values have been computed using a grid which combined the Parameter-elevation Regressions on Independent Slopes Model data (PRISM) (<http://www.prismclimate.org>) for the conterminous U.S. and a set of 1-km grids provided by the Canadian Forest Service, Natural Resources Canada, for areas in Canada. Mean annual temperature values were used in computing EROM mean annual flow estimates. The mean monthly temperature values will be used to compute EROM mean monthly flow estimates in the future (see Appendix A: EROM)

Note: If a catchment extends into Mexico and therefore beyond the extent of the temperature data, the value will be the average over the portion of the catchment which does have data. MissDataA will contain the area in the catchment where data was not available.

Field Name	Description	Format
FeatureID	FeatureID of an NHDPlusV2 Catchment	Long Integer
MissDataA	Area of Catchments with no data	Num(13,4)
TempVT	Value Type	“V” meaning average
TempV	Mean annual temperature in degrees centigrade * 100	Num(5,2)
Hydroseq	When FeatureID represents an NHDFlowline feature, the Hydrologic Sequence Number of the feature; When FeatureID represents a Sink, set to -9998	Num(11)

WHDPlusAttributeExtension\CumTotTempMA and CumDivTempMA (tables)

Description: Mean annual temperature accumulated down the flowline network. Two types of tables are created: (1) Total upstream accumulation and (2) Accumulation based on the Divergence Routed method.

Field Name	Description	Format
FeatureID	ComID of an NHDFlowline feature and, where applicable, FeatureID of an NHDPlusV2 Catchment	Long Integer
MissDataA	Area of Drainage Areas with no data	Num(13,4)
TempVCT	Value Type	“V” meaning average
TempVC	Mean annual temperature in area upstream of the bottom of flowline in degrees centigrade * 100	Num(5,2)
Hydroseq	Hydrologic Sequence Number of an NHDFlowline feature	Num(11)

Understanding and Using NHDPlusV2

Note: User-written scripts that illustrate the use of NHDPlusV2 will be posted on the NHDPlusV2 Web page.

NHDPlus and Divergences

The NHDPlusV2 network includes complex network components, especially divergent and complex flow paths. These types of network components are illustrated in Figure 7. A convergent junction is the simplest type of junction and poses no problems in downstream routing and accumulating attributes, such as drainage area. Divergent and other types of complex junctions, however, pose particular issues in computing cumulative values. These issues and how the cumulative values are computed in NHDPlusV2 are described below.

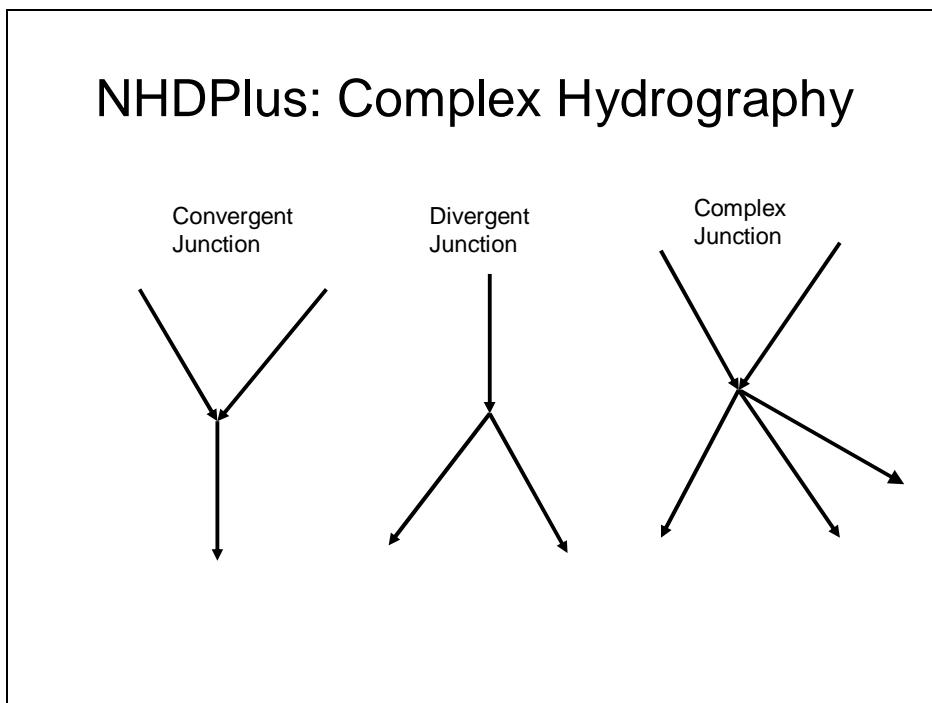


Figure 7: NHDPlusV2 Complex Hydrography

The DIVERGENCE field in the \NHDPlusAttributes\PlusFlowlineVAA table defines “main” and “minor” paths at divergences. One path is designated as the main path and is given a DIVERGENCE field value of “1”. All other paths in the divergence are designated as minor paths and are given a DIVERGENCE field value of “2”, as illustrated in Figure 8.

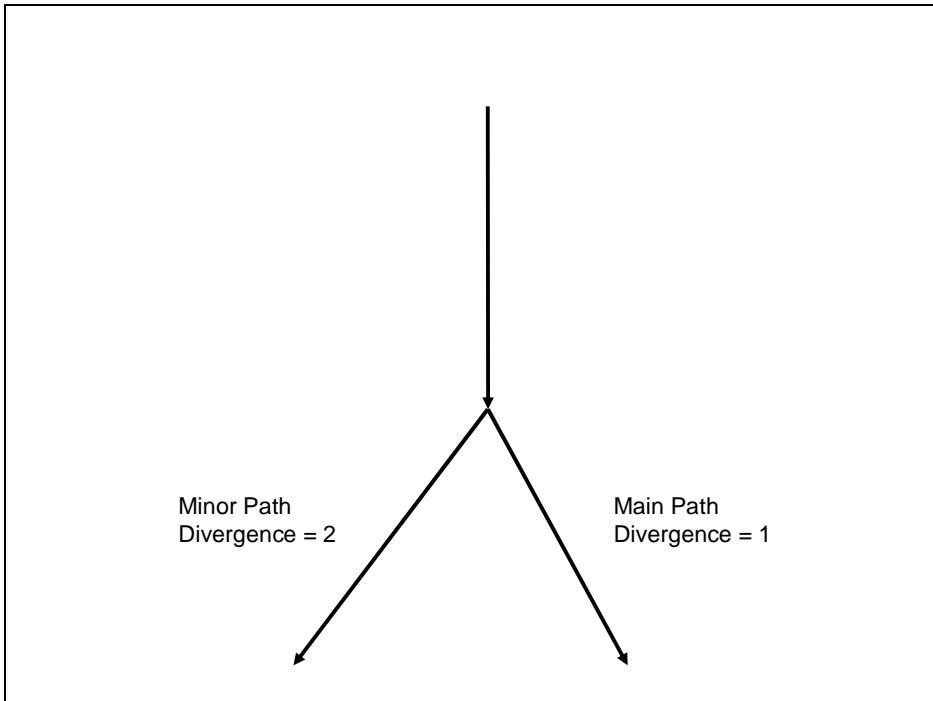


Figure 8: Main and Minor Paths in NHDPlusV2

In many cases, the divergences are “local”, as shown in Figure 9, where the divergence returns to the main network at the next downstream confluence. The red flowlines represent the divergences. The blue lines represent flowlines not affected by these divergences because the divergent streams have rejoined the network upstream of the blue lines.

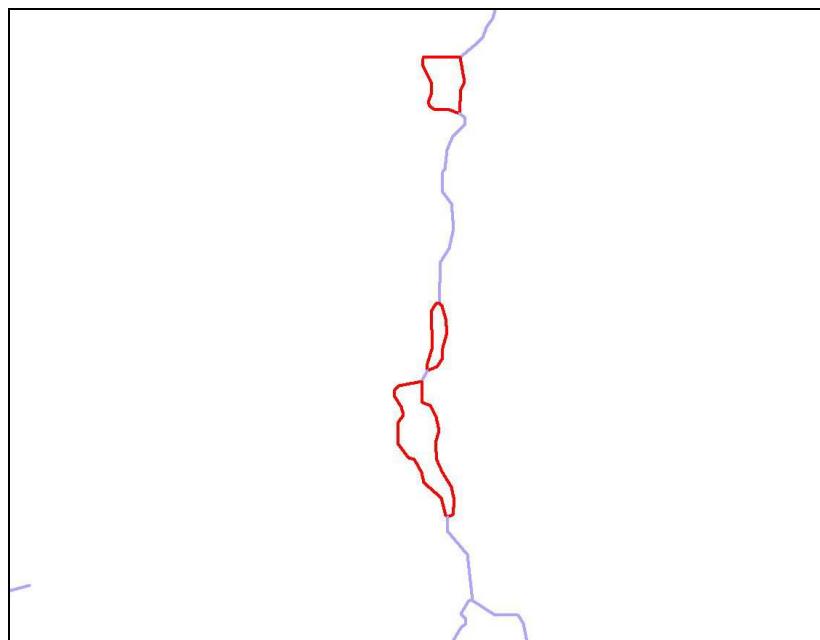


Figure 9: “Local” Divergences

There are many situations in NHDPlusV2 which are much more complex; for example multiple divergences, braided streams, coastal drainage patterns, and divergences where the divergent flowlines never re-join the network downstream. As shown in Figure 10:, these complex divergences do not return immediately to the main network and may flow into additional divergences and return to the main network many miles downstream. In routing and accumulating downstream, cumulative values will be affected by divergences on the red flowlines while the blue flowlines are not affected by the divergences. As can be seen, the divergences can affect multiple flowlines.

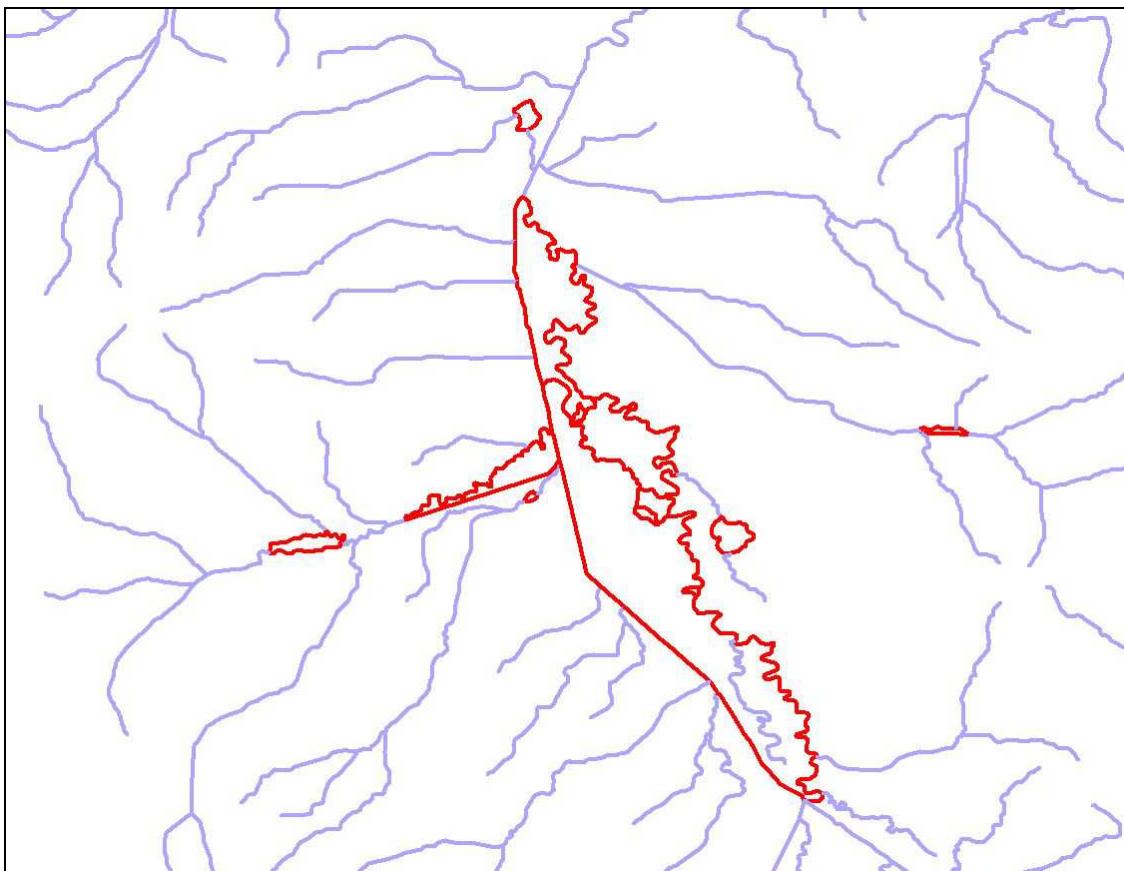


Figure 10: More Complex Divergent Junction Example

Total Upstream Accumulation and Divergence-Routed Accumulation

When accumulating attributes downstream along the NHDPlusV2 network, there are two approaches. The first approach is called “total upstream accumulation” which means that the accumulated value for an attribute, at each NHDFlowline feature along the network, is the total value of the attribute upstream of the bottom of the NHDFlowline feature. The second approach is called “divergence-routed accumulation” which means that at each divergence, a portion of the accumulation is routed down each path of the divergence such that the sum of the portions is

100% of the accumulation. The divergence-routed accumulation values for an attribute, at each NHDFlowline feature along the network, will not include portions that have been routed down minor divergent paths that have not yet returned to the main network.

At the vast majority of divergences, there is no knowledge of how to apportion an accumulation down each path of a divergence. Where there is no knowledge, NHDPlusV2 uses defaults that route 100% down main paths (PlusFlowlineVAA.Divergence=1) and 0% down minor paths (PlusFlowlineVAA.Divergence=2). The NHDPlusV2 table called DivFracMP enabled, during NHDPlusV2 production, the specification of percentages, other than 100% and 0%, to be routed down the main and minor paths, respectively. There are a handful of locations where stream gage information provided something other than a 100%/0% split and the actual split is recorded in DivFracMP.

As shown in Figure 11, the effect of using the Divergence-Routed accumulation method, in the absence of information from DivFracMP, is that, on minor divergent flowlines and the flowlines downstream of the minor divergences (until the divergent path re-joins the main path), the values (such as drainage area, flow, and all other cumulative attributes) will not include the cumulative values upstream of the divergence.

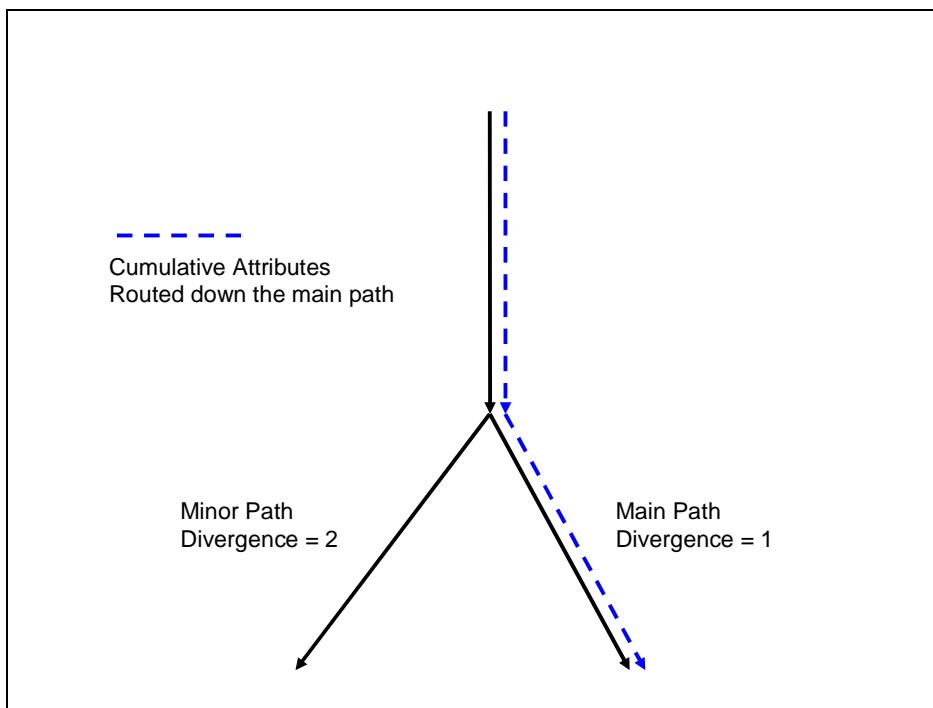


Figure 11: Divergence-Routed Accumulation Method: Attributes are routed down the main path

Building an NHDPlusV2 Attribute Accumulator

There are two types of requirements for attribute accumulation: site specific accumulation or an accumulation across the entire network. Site specific accumulation can be done easily with upstream navigation followed by aggregation, based on the navigation results, of any attributes that have been assigned to NHDFlowline features or their associated catchments. An entire

network accumulation is one where the desired attributes are accumulated for each NHDFlowline feature and saved in an attribute table for future use. Entire network accumulations need a program or script to accomplish the accumulation task. This section addresses the specifications for such a program.

For example, assume that a new attribute has been defined and that incremental values for the attribute have been assigned to each NHDFlowline feature or its catchment. The objective of accumulation is to aggregate the incremental values such that, at any particular NHDFlowline feature/catchment in the network, the value of the attribute for the area upstream of the feature/catchment is computed. Aggregation uses different mathematical operations depending on the attribute being aggregated. For example, the “drainage area” attribute is additive, while the “percent of area in forest” is computed using an area-weighted average.

There are two techniques for accumulating attributes for every flowline: Total Upstream Accumulation and Divergence-routed Accumulation (see section entitled “Total Upstream Accumulation and Divergence-Routed Accumulation”).

The Divergence-Routed accumulation method starts at the top of the network and moves downstream aggregating together the features’/catchments’ incremental values and storing the result at each feature/catchment. The advantage of this method is that it is fast, taking only minutes to run. The disadvantage of this method is that it must make decisions at flow splits (divergences) about which way to route the accumulated value. The value may not be routed down both paths of a divergence because, if those diverging paths come back together (which is frequently the case), the accumulation will begin to double-count the attribute. In the NHDPlusV2 accumulated attributes, both accumulation methods are used and cumulative values are provided for both methods. It is easy to see that the Divergence-Routed Accumulation method is very sensitive to errors in divergence classifications. When the wrong path is designated as the major path, the accumulation goes down the wrong path. In addition, NHDFlowline features that are downstream of divergences that have not yet returned to the major network path will not receive the full accumulated value from upstream. This may be appropriate for some attributes but not for others.

The Total-Upstream Accumulation Method is similar to the site specific method, discussed above, where the accumulation for each NHDFlowline feature is the aggregation of all the incremental values from upstream. The advantages of this method are that it is not sensitive to errors in divergence classifications and always gives the full accumulated value regardless of the presence of upstream unresolved divergences. The disadvantage of this method is that it takes some time to run – hours, perhaps days, not minutes.

Specifications for a script which performs the Divergence-Routed method are provided here. As an example, begin with a file that contains NHDFlowline feature ComIDs or Catchment FeatureIDs and the incremental value for a single attribute that has been assigned to each NHDFlowline feature or catchment. For this specification, assume that the file is called IncrementalAttributeFile and that it has the fields ComID and AttrValue.

1. Add to IncrementalAttributeFile a field for the cumulative value for the attribute. Let's call this CumAttrValue.
2. Join IncrementalAttributeFile with \NHDPlusAttributes\PlusFlowlineVAA using ComID. For performance, we'll delete from the joined file every record that has hydroseq = 0. These lines are not in the NHDPlusV2 stream network, therefore they are not needed in an accumulation.
3. Sort the joined file by Hydroseq descending.
4. Accumulation procedure:
 - 4.1. Get next record from the sorted file. If end of file, quit.
 - 4.2. If PlusFlowlineVAA.Startflag = 1 (i.e., this is a headwater and there is nothing upstream) or PlusFlowlineVAA.Divergence = 2 (i.e., nothing is routed down the minor paths of the divergence), then set CumAttrValue = AttrValue and go to step 4.1.
 - 4.3. Find all the inflows to this current NHDFlowline feature: inflows are records in the joined file where the PlusFlowlineVAA.tonode = PlusFlowlineVAA.fromnode of the current flowline.
 - 4.4. Set CumAttrValue = AttrValue + the CumAttrValue for each inflow.
 - 4.5. Go to step 4.1.

This procedure routes the accumulation down the mainpath at each divergence. Alternatively, the accumulation may be apportioned to the different paths in the divergence using the contents of \NHDPlusAttributes\DivFracMP table or other apportioning method, as long as 100% (neither less nor more) of the accumulation is routed down the paths from any single divergence.

Understanding NHDPlus Slope

NHDPlus slope is unit-less. It can be viewed as cm/cm or m/m or km/km. The units are the same in both the numerator and denominator and therefore cancel out. Cm/cm appears elsewhere in this documentation to show that it is unit-less.

Minimum and maximum smoothed elevations for flowlines, in the \NHDPlusAttributes\ElevSlope table, are expressed in meters and NHDFlowline feature length, in the NHDFlowline feature class, is in kilometers. Therefore when slope is calculated with these fields the result is slope in meters per kilometer (m/km):

$$\frac{\text{maxelevsmo(m)} - \text{minelevsmo(m)}}{\text{LengthKM(km)}} = \text{slope in m/km}$$

To get the unit-less slope given in \NHDPlusAttributes\Elevslope.slope the units must be converted as follows:

$$\text{slope in m/km} * 1 \text{ km}/1000\text{m} = \text{slope (unit-less)}$$

NHDPlus slopes are constrained to be greater than or equal to 0.00005.

Finding the Upstream Inflows to an NHDPlus Dataset

All NHDPlusV2 VPU workspaces are hydrologically complete drainage areas except the datasets that make up the Colorado River (NHDPlus14 and NHDPlus15) and the Mississippi River (NHDPlus05, NHDPlus06, NHDPlus07, NHDPlus08 (including the 4-digit HUC 0318), NHDPlus10L, NHDPlus10U, and NHDPlus11). When navigating the stream network in either of these areas, it is necessary to determine if the navigation should be continued in an upstream or downstream NHDPlusV2 VPU workspace.

It is possible to determine upstream inflows to any NHDPlusV2 VPU workspace by using the \NHDPlusGlobalData\NHDPlusConnects table. All inter-VPU connections are stored as records in this table.

Finding all the Tributaries to a Stretch of River

First, find the stretch of interest along the main river using one of these methods:

Method 1: Navigate upstream mainstem on the major river from the desired starting flowline for the desired distance.

Method 2: Use the attributes in the \NHDPlusAttributes\PlusFlowlineVAA table. Establish the StartPathlength as the Pathlength attribute of the starting NHDFlowline feature. Query all NHDFlowline features with the major river's LevelPathID where (Pathlength - StartingPathlength) <= desired distance. If the desired stretch of river does not start at the mouth of the river, remove from the query any NHDFlowline features that have Hydroseq < Hydroseq of the starting NHDFlowline feature.

Then, find the tributaries to the stretch:

Join the \NHDPlusAttributes\PlusFlowlineVAA.ToComID to the list of ComIDs from Method1 or Method2.

All the \NHDPlusAttributes\Plusflow.FromComID's in the joined records are the ComIDs of the downstream NHDFlowline features of the tributaries to the desired stretch of main river.

NHDFlowline Features with "Known Flow" vs. Features with "Unknown Flow"

There are approximately 3 million NHDFlowline features in NHDPlusV2. Most, but not all, of these features have a known flow direction. Flow direction information is contained in an attribute called FlowDir in the NHDFlowline feature class attribute table. FlowDir can have the values "With Digitized" (known flow direction) or "Uninitialized" (unknown flow direction). The features having unknown flow direction are primarily of three types: isolated stream segments, canal/ditches, and some channels inside braided networks. The features with known flow direction are the subset of the NHDFlowline feature class which makeup the NHDPlusV2 surface water network. The "plus" part of NHDPlusV2 is built just for the flowlines with known flow direction. In other words, catchments and attributes based on catchment area are only included in NHDPlusV2 features with known flow direction. When using NHDPlusV2, it is

useful to symbolize the NHDFlowline feature class using the FlowDir attribute. This will help eliminate confusion about what is considered in the NHDPlusV2 surface water network and what is not. In Figure 12:, the dark blue lines are those NHDFlowline features with known flow direction and, consequently, are included in the “plus” part of NHDPlusV2. The broad cyan lines are NHDFlowline features with unknown flow direction and, consequently, are not part of the “plus” part of NHDPlusV2.

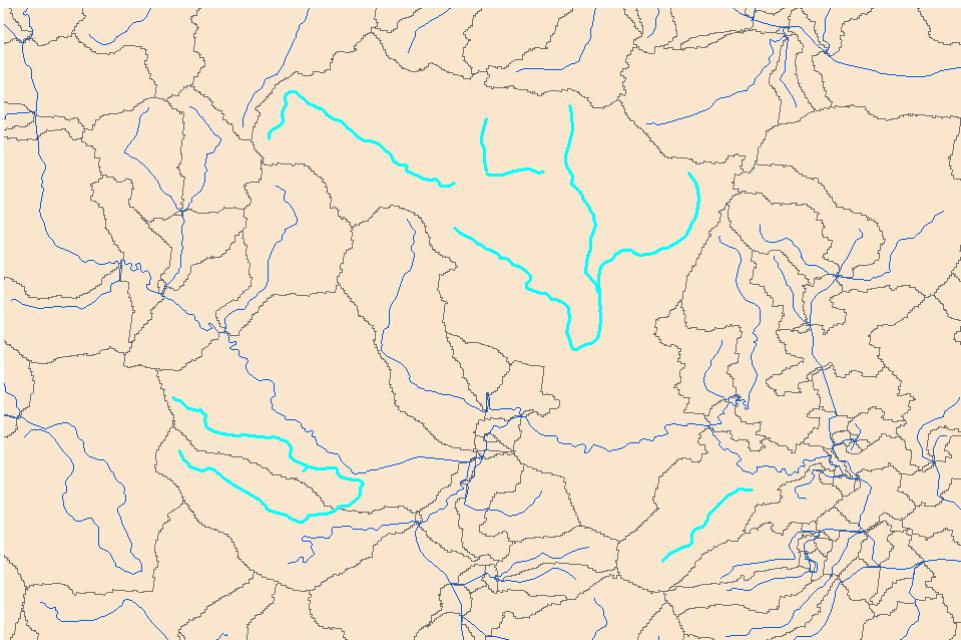


Figure 12: NHDFlowline Features With Known and Unknown Flow Direction

How WBD Boundaries Relate to NHDPlusV2 Catchment Boundaries

The latest available WBD version was used for each region during NHDPlusV2 processing. The WBD stewardship team performed an edit pass across the U.S. in advance of the NHDPlusV2 processing, to ensure that the WBD was as up-to-date as possible for each of the NHDPlusV2 VPUs. NHDPlusV2 data includes, in the \WBDSnapshot folders, the WBD boundaries used during catchment delineation.

The date of the WBD snapshot that was used for each region’s NHDPlusV2 processing is provided in the NHDPlusV2 metadata found in the \NHDPlusV2nn_Metadata folder. The chronology of WBD updates that occurred during the NHDPlusV2 production is provided in the \NHDPlusV2nn_Metadata\wbd_poly_seamless_yyyymmdd.met. The process descriptions are chronological and one can see what updates were and what updates were not in each snapshot.

Prior to public release, the NHD snapshot ReachCodes on NHDFlowline and NHDWaterbody features were adjusted to reflect the HUC8s in the 2/1/2012 version of WBD. This means that, in some NHDPlusV2 workspaces, there are some NHDFlowline and NHDWaterbody features may have ReachCodes that reflect a different hydrologic region than the VPU in which the

features are stored. For example, the \NHDPlusNE\NHDPlus01\NHDSnapshot has ReachCodes that start with "0415".

How do Catchment Boundaries differ from WBD Snapshot Boundaries

This topic is discussed in detail in Appendix F.

Main Flowline Network vs. Isolated Networks

The majority of the NHDPlus surface water network features drain to the Atlantic Ocean, Pacific Ocean, Gulf of Mexico, Canada, Mexico, or to one of the Great Lakes. These features are the ones that compose the NHDPlus “main” flowline network. In addition, NHDPlus contains many isolated networks throughout the U.S. An isolated network is one that appears to terminate into the ground. Many isolated networks either seep into the ground or end due to excess evaporation. These are often called “non-contributing” networks and, while they can occur in any part of the country, they are found primarily found in the Southwestern U.S. and in southeastern parts of hydrologic region 17 (Pacific Northwest). Some isolated networks are mapping errors. These networks should be connected to the main NHDPlus network. **Figure 13:** and **Figure 14** illustrate isolated networks that are non-contributing and mapping errors, respectively.

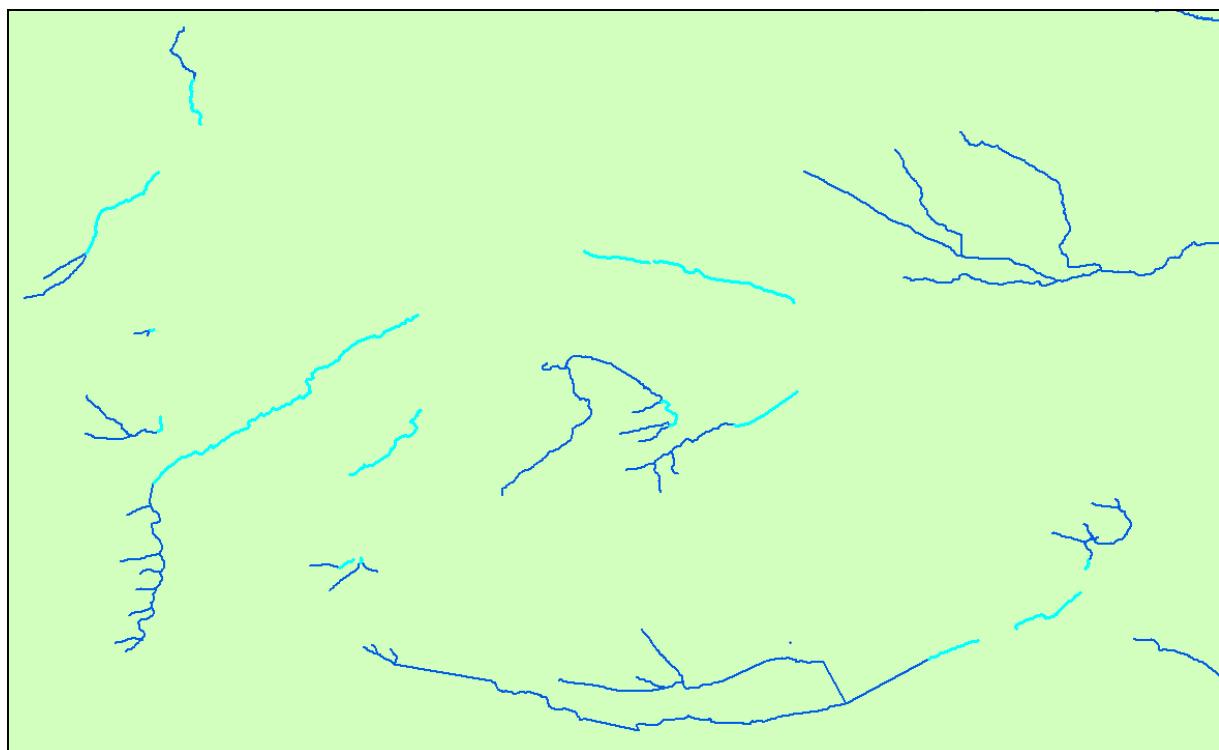


Figure 13: Non-contributing Isolated Networks Teal lines are terminal segments of isolated networks.


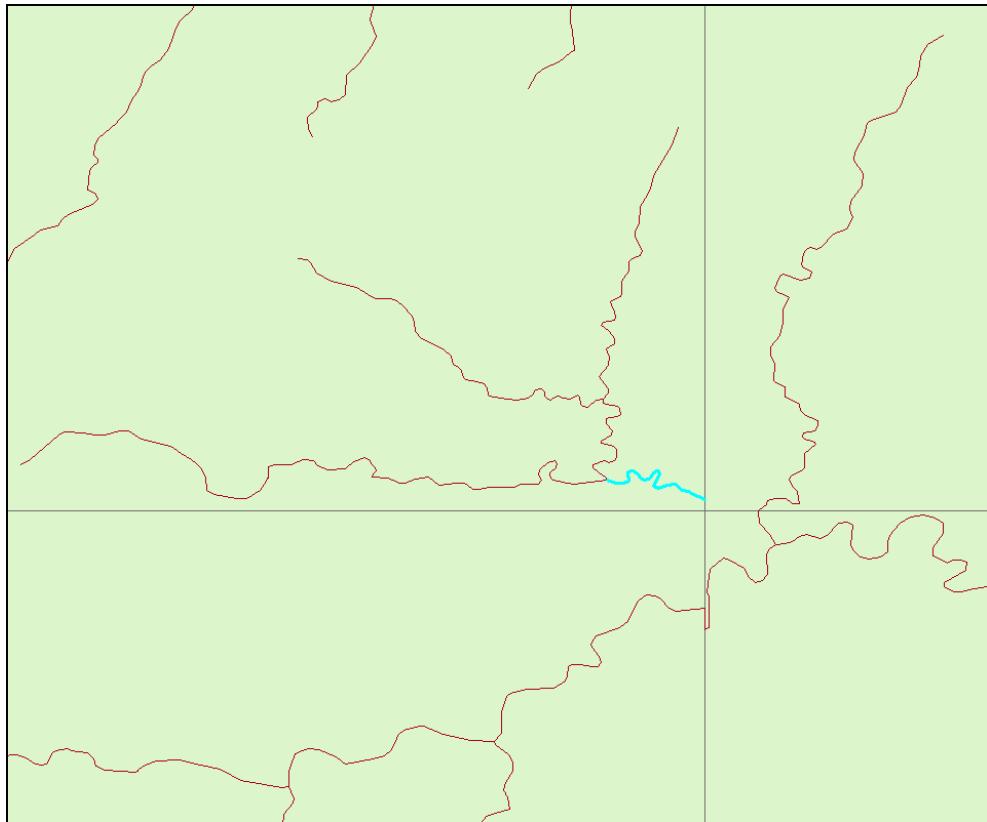



Figure 14: Map error - The cross-hairs are the edges of USGS quad maps.

Isolated networks may be located in any NHDPlusV2 drainage area. To find isolated networks, join the PlusFlowlineVAA attribute table to the NHDFlowline feature class using the ComID field in each. Then select all flowlines with PlusFlowlineVAA.Terminalfl = 1. The flowlines selected will be those with known flow direction that are considered by the NHD Snapshot as terminal flowlines.

Catchment delineation and flow grids for isolated networks have been much improved between NHDPlusV1 and NHDPlusV2. This has occurred for two main reasons. First, there was an extensive effort to connect up isolated networks to the main network, for networks that were isolated because of mapping errors. Second, sinks were placed at the terminal ends of the networks that remained isolated in NHDPlusV2. Figure 15 shows synthetic networks generated from the fdr and fac grids for the same area, comparing NHDPlusV1 to NHDPlusV2. The improved alignment of the NHD streams with the synthetic network results in much better catchment delineation.

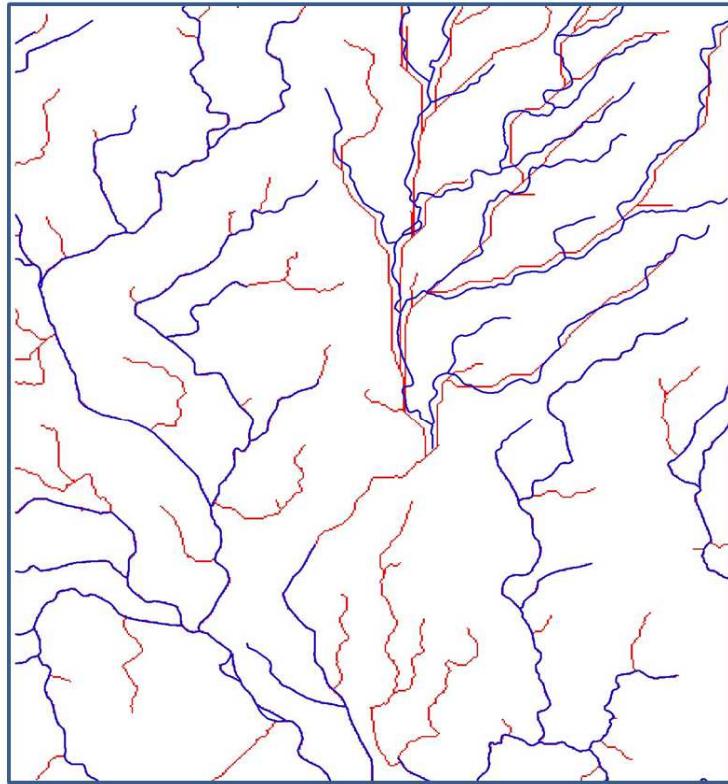

NHDPlus Version 1

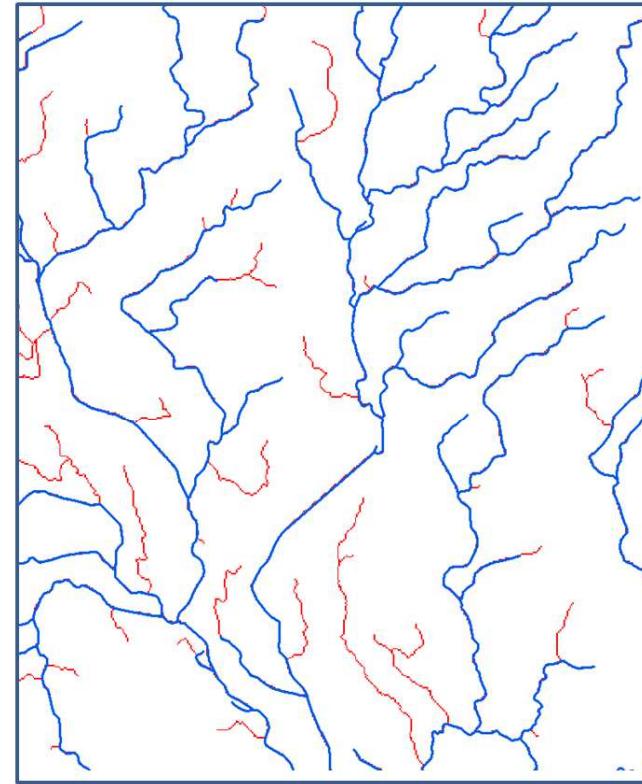

NHDPlus Version 2

Figure 15 – Illustration showing the horizontal displacement between the NHD streams of an isolated network, in blue on the left image (NHDPlusV1) to the synthetic streams of the “filled” HydroDEM in red. In NHDPlusV2 shown on the right, the previously isolated network is connected to the main network and the displacement has been eliminated. Placement of sinks at the ends of isolated networks in NHDPlusV2 also eliminates this type of displacement for isolated networks that remain isolated.

NHDFlowline Features With and Without Catchments

In general catchments are generated for networked NHD flowlines (FlowDir = “With Digitized”). However, with Version 2 NHDFPlus, some networked flowlines were intentionally removed from the set of features for catchment generation. Examples include pipelines, elevated canals, flowlines that conflict with the WBD, and other data conditions that are documented in each of the VPU Release Notes. The CATCHMENT field in BurnLineEvent identifies the flowlines that were designated as “N” for no catchment.

A common reason for flowlines without catchments is due to the resolution of the NED data. Catchments were not generated for many very short flowlines approximately 42 meters or less in length (42 meters is the diagonal distance across a 30 meter grid cell). This happens when longer flowlines fall within the same area (stream cells) that also contains a very short flowline. In such cases the stream cells are typically assigned to the longer flowline. And no catchment is delineated for the very short flowline.

In rare circumstances, flowlines longer than 42 meters may not have been assigned a catchment, depending on the spatial configuration of a flowline with other flowlines. In these cases, flowlines may run parallel with each other within a given cell and may continue for several cells over the entire length of one of the flowlines. In such a case, all of the cells used as seeds to delineate the catchments may be assigned to just one of the lines. In such cases no catchments will be delineated for the short flowline.

Using the NHDFPlus Value Added Attributes (VAAs) for Non-Navigation Tasks

The attributes in the \NHDFPlusAttributes\PlusFlowLineVAA table provide several powerful capabilities for users. All of the figures in the following examples use Hydrologic Region 2, the Mid-Atlantic.

Details on the computation of the VAAs can be found in **Appendix A, Steps 6 and 10**.

Example 1: Using LevelPathID to Generalize the Stream Network based on Stream Length

The mainstem of each stream is assigned a unique identifier VAA called “LevelPathID”. LevelPathID is equal to the Hydroseq value of the most downstream flowline on that river. LevelPathID can be used in conjunction with NHDFlowline feature LengthKM (also in the VAA table) to build a table of the total lengths for each mainstem of every networked stream/river. The SQL statement is as follows:

```
SELECT PlusFlowlineVAA.LevelPathID, Sum(PlusFlowlineVAA.LengthKM) AS strmlength  
INTO strmleng  
FROM PlusFlowlineVAA BY PlusFlowlineVAA.LevelPathID  
HAVING (PlusFlowlineVAA.LevelPathID)>0;
```

The above SQL statement creates a variable named strmlength as the sum of the lengths of all NHDFlowline features by LevelPathID and puts the LevelPathID and strmlength variables into a table named “strmleng”. Figure 16 highlights all of the mainstem rivers greater than or equal to 100 Km in length. Note that any length threshold criteria can be used as desired.

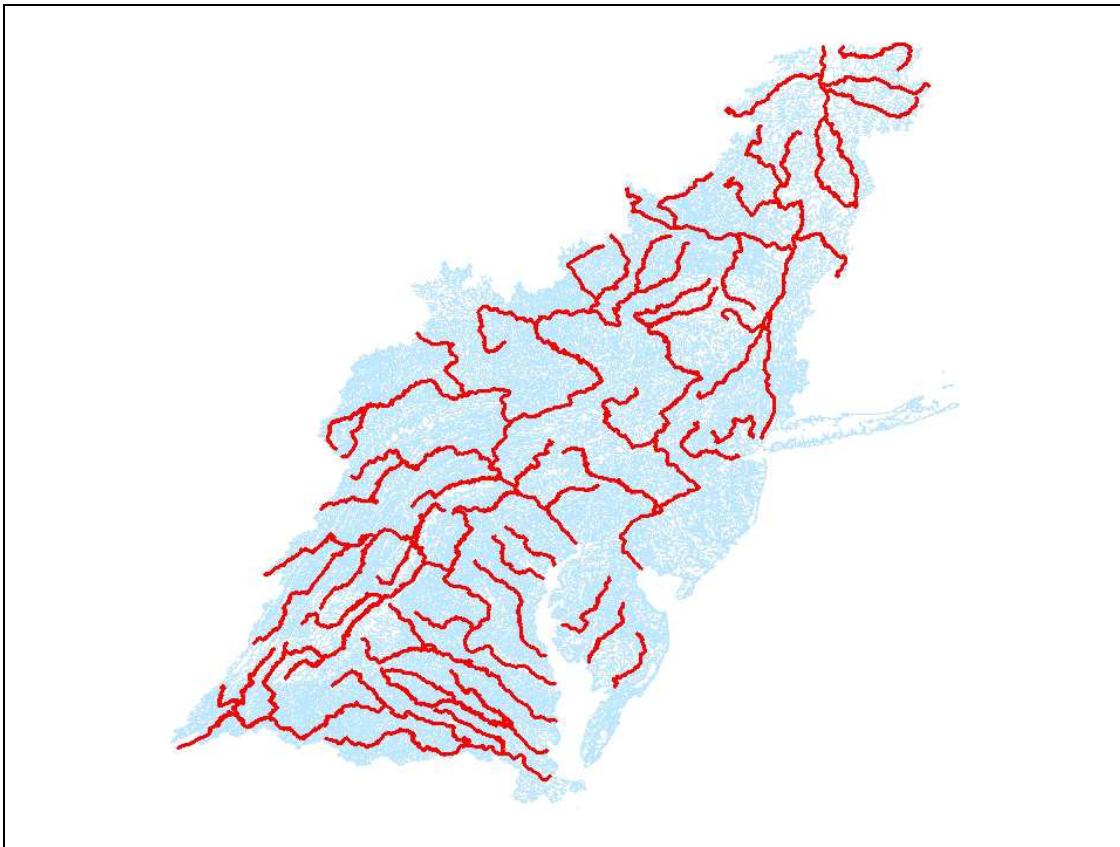


Figure 16: Streams Greater than or Equal to 100 Kilometers in Length

Example 2: Selecting an Individual River or an Individual Terminal River Basin

TerminalPathID is a VAA that contains the same value for the NHDFlowline features in an entire drainage area. For convenience, TerminalPathID is set to the Hydroseq VAA of the terminal NHDFlowline feature in the drainage. Let's say, for example, that the Potomac River has a most downstream Hydroseq of 9169600001. This means that by the VAA conventions, the LevelPathID for the Potomac mainstem is assigned this value and, since the Potomac is the terminus of the drainage area, every networked NHDFlowline feature in the Potomac Basin is assigned this value as the TerminalPathID. Figure 17: shows the selection of LevelPathID = 9169600001, which selects the mainstem of the Potomac River. Figure 18: shows the selection of TerminalPathID = 9169600001 which selects the entire Potomac River Basin.

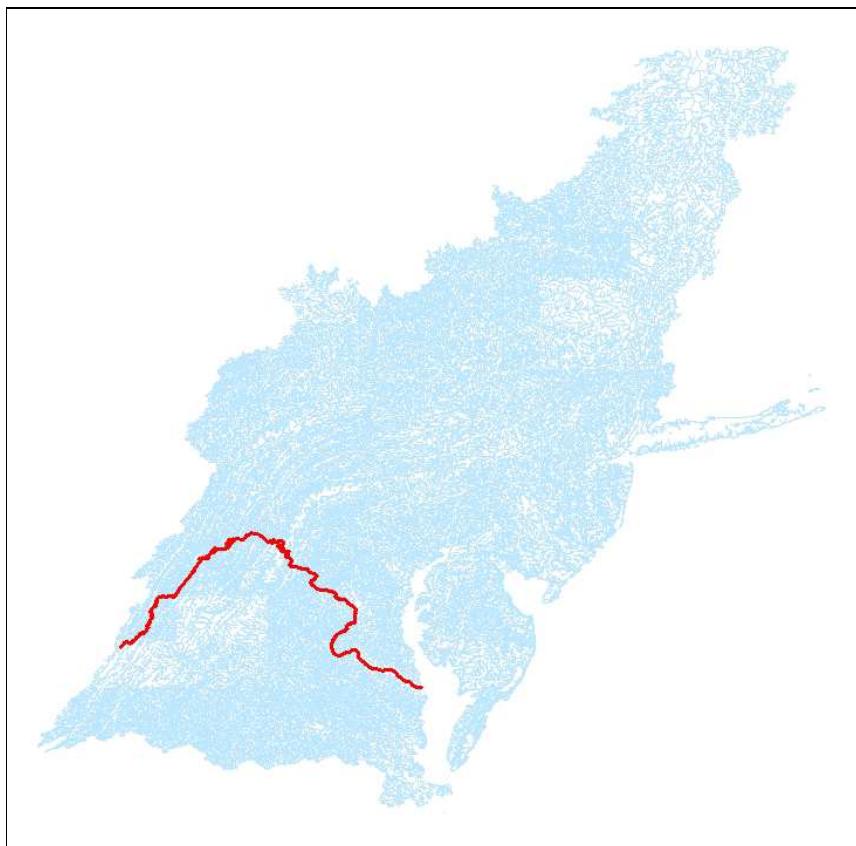


Figure 17: The Mainstem of the Potomac River By Selecting LevelPathID=9169600001

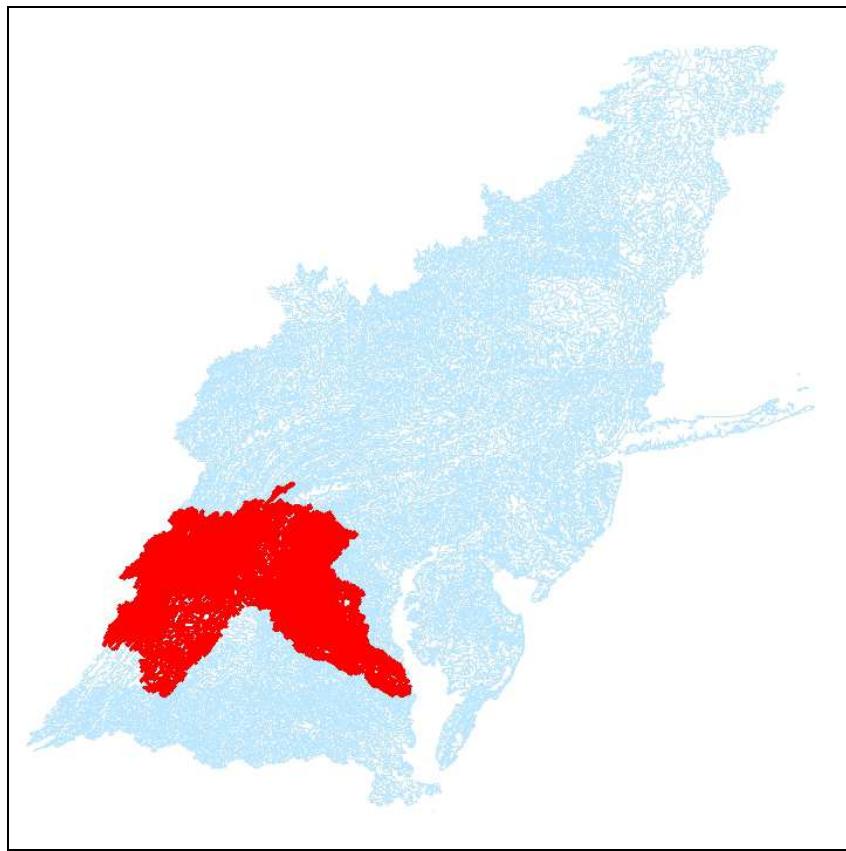


Figure 18: The Potomac River Basin By Selecting TerminalPA = 9169600001

Example 3: Profile Plots

Plots of data along a river where the x-axis is the river mile (or river kilometer) are widely used for showing data and modeling results. The NHDPlusV2 VAAs contain the basic information to readily develop profile plots. Previous VAA examples showed how the LevelPathID can be used to identify every flowline on a river. Another VAA, PathLength, is the length from the bottom of the NHDFlowline feature to the end of the network. For instance, every flowline in the Missouri drainage basin has a PathLength value that tells how far away it is from the mouth of the Mississippi River.

The basic profile plotting procedure is to select the NHDFlowline features using the LevelPathID for the river of interest and assign a data value of choice (for example, a modeling result) to the ComIDs of the selected NHDFlowline features. Include the VAA named PathLength in the dataset, and then plot data using PathLength as the x-axis and data value as the y-axis.

This example uses the mainstem of the Potomac River PathLength variable as the x-axis and the data value of choice is the \NHDPlusAttributes\ElevSlope.MinElevSmo (minimum smoothed) elevation values for the y-axis. This particular plot, shown in Figure 19, is interesting because the elevation change near PathLength 180 is dramatic; this is where the Potomac River changes from free-flowing to estuarine. This plot goes from downstream to upstream but it is a simple matter to reverse the x-axis as desired.

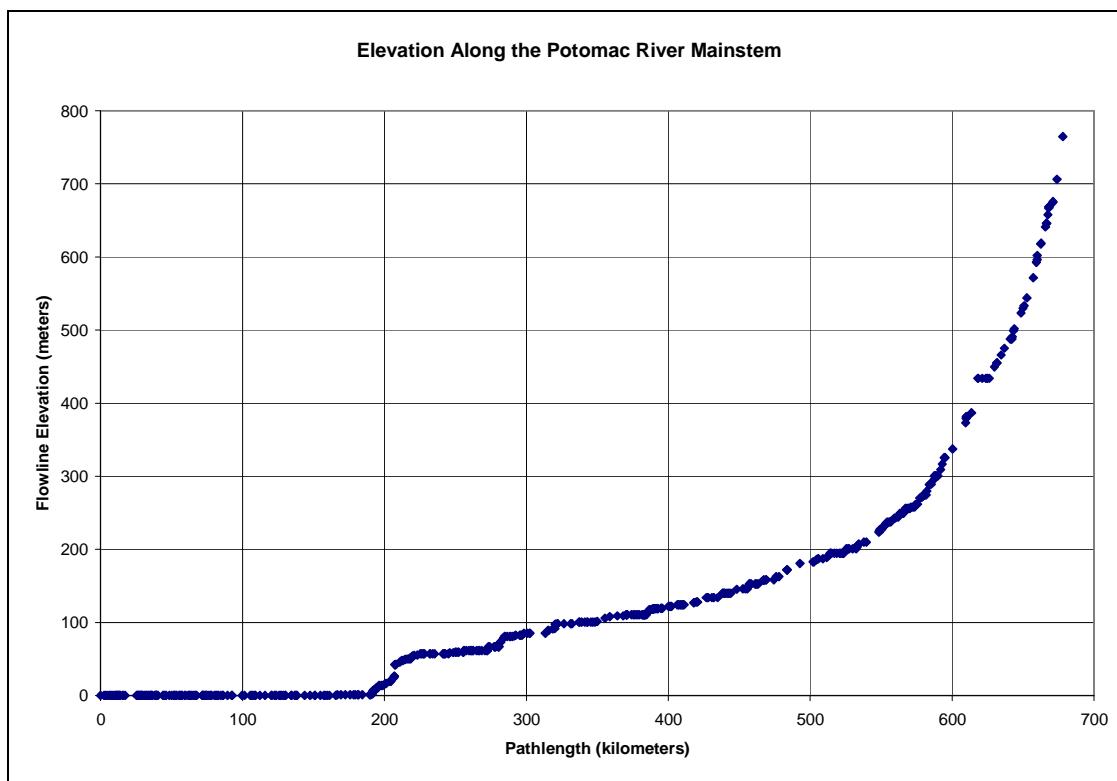


Figure 19: An Elevation Profile Plot of the Mainstem of the Potomac River

Example 5: Stream Order

The NHDPlusV2 stream order is based on a modification of the Strahler Method. Stream order is a classic method for ranking streams according to size.

Mapping or classifying NHDFlowline features on the basis of stream order can help to rank features by size within the network, selecting out streams of only certain orders, or aggregating data by stream order. Some examples of mapping by stream order are shown below.

Figure 20: shows different colors for each stream order for an area in the Mid-Atlantic Region. This figure illustrates how stream order helps rank streams by relative size. Figure 21: shows the same area but with stream order 1 removed. This is one method to “thin” the network based on hydrologic criteria. There are other excellent ways to rank or thin the NHDPlusV2 network, especially by using mean annual flow as a criteria; this method is not illustrated here.

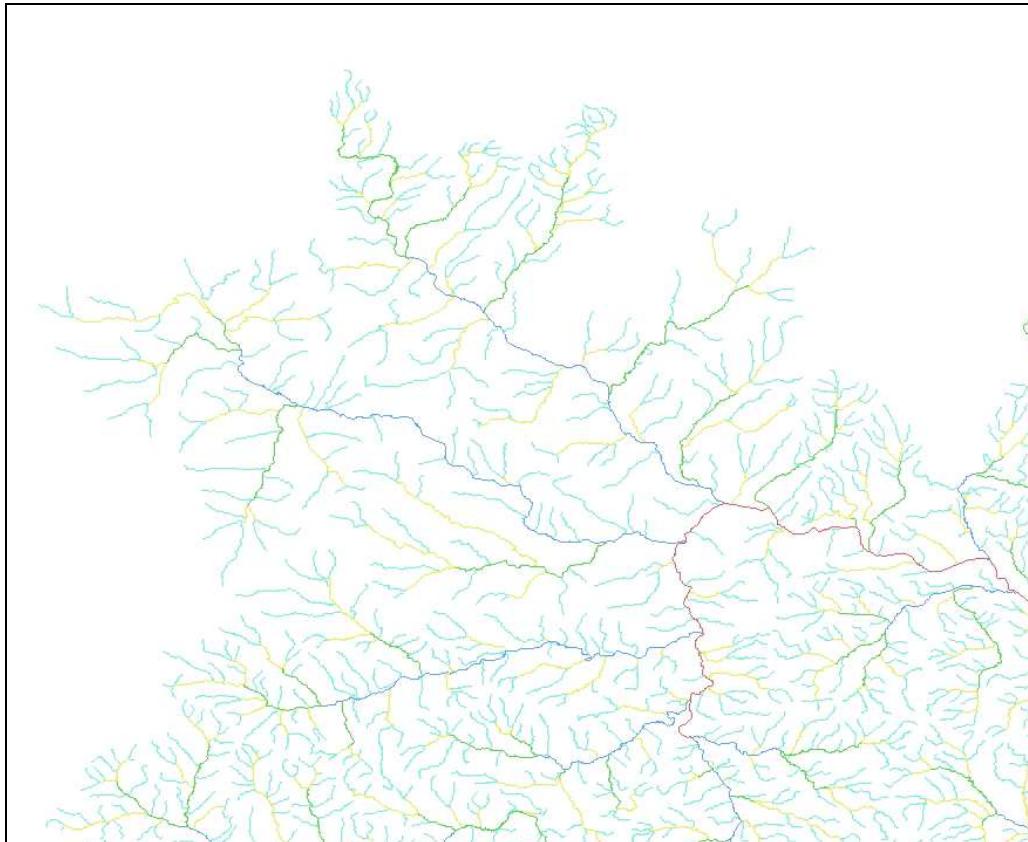


Figure 20: Stream Orders in Part of the Mid-Atlantic Region

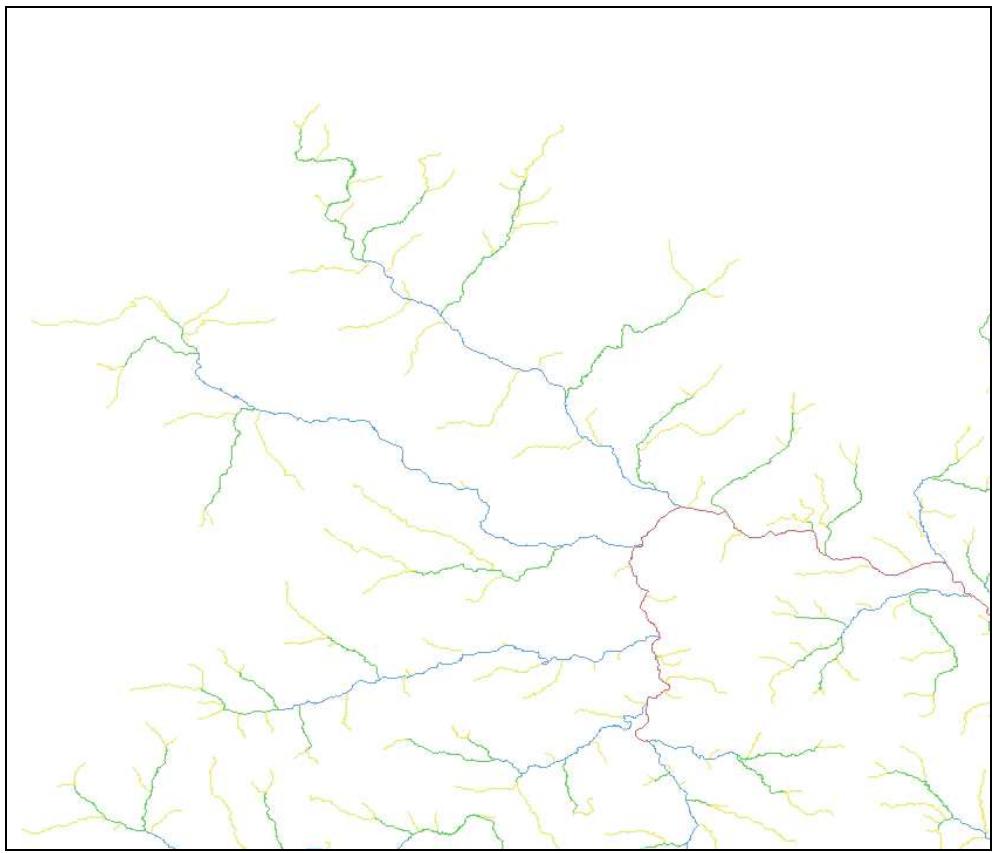


Figure 21: Stream Orders in a Part of the Midatlantic Region with Order 1 Streams Removed

Example 6: Stream Level

The use of the StreamLevel VAAs is often misunderstood or misused by users of the VAAs. Quite often, users think of StreamLevel “as the opposite of Stream Order”. But, this is not true in any sense. Streamlevel = 1 will apply to the Mississippi mainstem but also to every small or large stream that terminates on the coastline. Therefore, StreamLevel has nothing to do with stream size.

The only valid use of StreamLevel is to identify, at a particular junction, what is the mainstem and what is the tributary stream. The lower valued stream levels are the mainstem and the higher valued stream levels are the tributaries. Figure 22 illustrates this. The flowlines are labeled with the StreamLevel values. The NHDFlowline features going in the north-south direction are StreamLevel = 2, and the features coming in from the West is StreamLevel=3. Therefore, the North-South features are the mainstem and the feature coming in from the West is the tributary.

There are additional aids in the VAAs, for instance, to determine flow direction on the North-South stream, check the Pathlength values of both of these features. In this case, the Pathlength of the southern feature is 400.1 and the Pathlength of the northern feature is 397.5. Therefore, the northern feature is closer to the network terminus, so the flow is going from south to north. The Hydroseq can also be used to determine the flow direction at this junction. The smaller Hydroseq value will be the downstream feature.

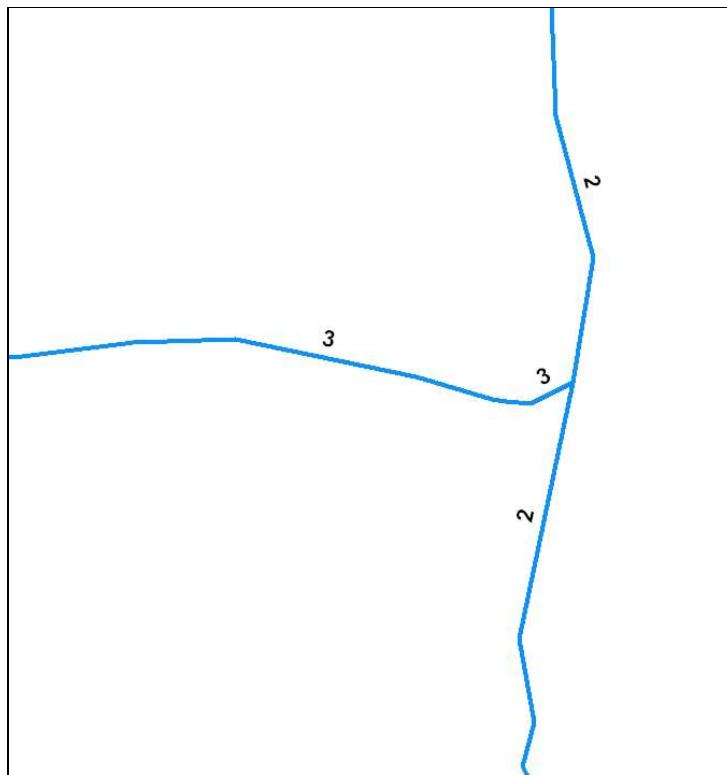


Figure 22: StreamLevel Values at a flowline Junction

Why do EROM flow estimates sometimes differ from Gage-reported flow?

A full discussion about how EROM computes mean annual flow is covered in Appendix A. This discussion is intended to address why the EROM gage-adjusted mean annual flow estimates may not match the flow reported at a given gage location.

To perform the flow adjustment based on gage flows, EROM screens gages based on number of years of record, the period of record, and a comparison of the NWIS-reported drainage area with the NHDPlus calculated drainage area. Only gages that pass the screening are used in EROM's gage adjustment process. Consequently, at locations where a gage exists but the gage does not pass the screening criteria, the EROM flow estimate may differ from the gage flow measurement. Such a case is illustrated in the figures below.

Figure 1 shows the area in question, central California. The red dot is a gage location.

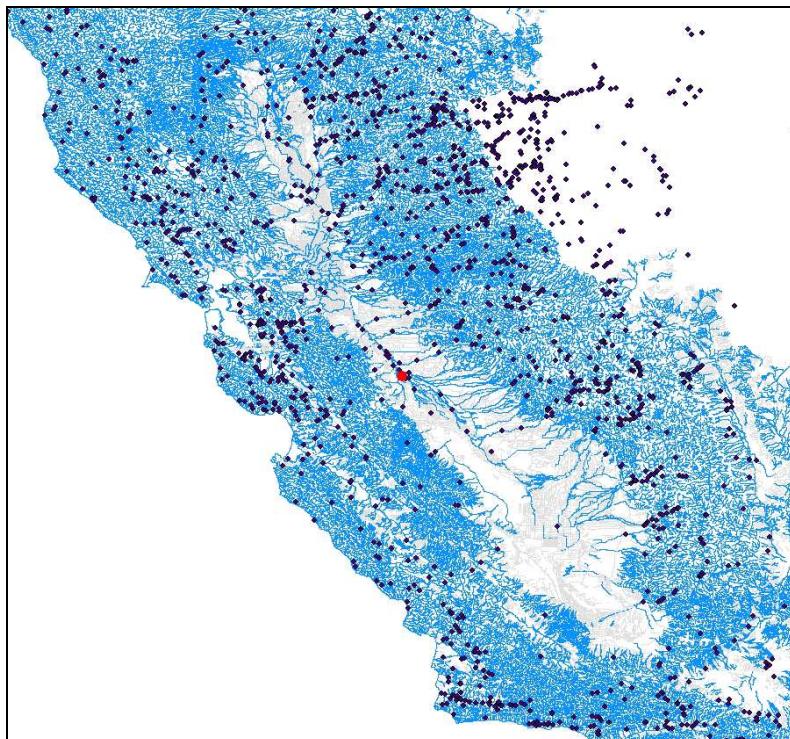


Figure 1

Figure 2 is a picture of the NHDFlowline features near the gage. The dashed lines are NHDFlowline features that are coded as FlowDir="Uninitialized" and therefore are not included in the NHDPlus network. Many of these dashed line features are irrigation withdrawals and returns. The solid lines are NHDFlowline features that are coded as FlowDir= "With Digitized" and therefore are included in the NHDPlus network. The arrows show the direction of flow. The numeric labels on the solid lines represent the EROM mean annual flow estimates (in cfs)

after all EROM steps have been performed. The highlighted feature has an EROM flow of 0.637 cfs. A gage is located on the highlighted feature and this gage reports a mean annual flow of approximately 33 cfs. Why does the EROM estimate differ so dramatically from the gage measurement?

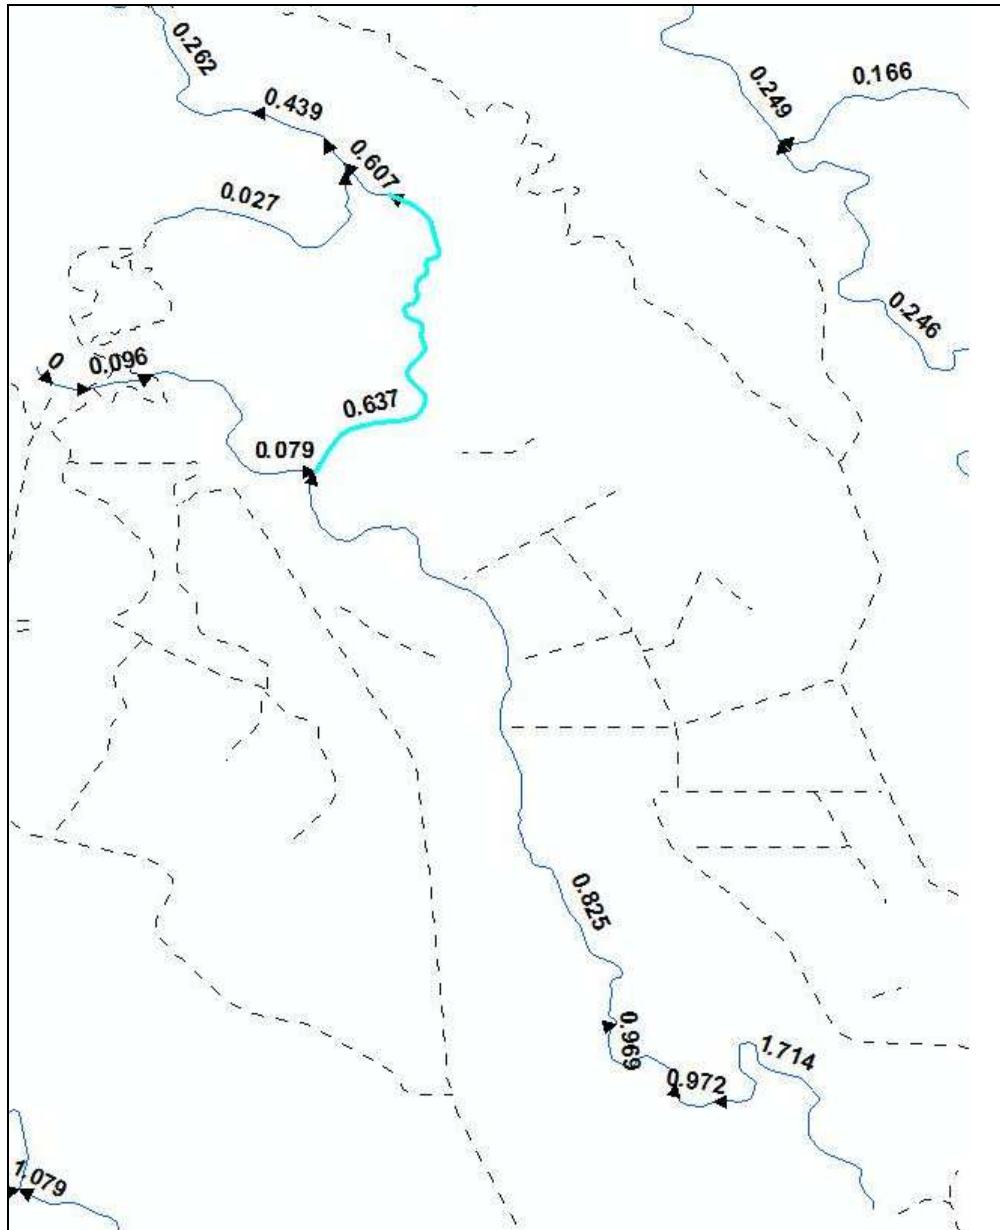


Figure 2

First, let us look at the EROM estimate. The runoff in this area is approximately 16 mm/year, from which EROM estimates a mean annual runoff flow (EROM step A) of 2.5 cfs. After the EROM adjustments for EET (EROM step B) and a reference gage regression (EROM step C), the flow is reduced to 0.637 cfs. In EROM step D, flow additions and removals are applied from the NHDPlusV2 PlusFlowAR table. There are no entries in the table for this location, so

the EROM flow after step D remains unchanged at 0.637 cfs. In EROM step E, the flow estimate is adjusted based on gages in the vicinity. There is a single gage in the vicinity and it's located on the feature highlighted in Figure 2. However, this gage "failed" the gage screening criteria used during the NHDPlusV2 processing, as follows:

1. The gage started operation in Oct. 1985 and therefore did not have the required 20 years of record in the period from 1971 to 2000.
2. The NWIS-reported drainage area for this gage is missing. Therefore the gage's drainage area cannot be compared to the NHDPlusV2 computed drainage area which is a required comparison.

Since the gage did not pass the screening criteria, it was not used in EROM step E, where the flows are adjusted based on the gage flow. Therefore the step E flow estimate remains unchanged at 0.637 cfs.

How might the EROM estimates be improved? There are two possible ways to accomplish improvement in this particular case. First, enable the gage to pass the screening criteria, by including an NWIS-reported drainage area and reducing the number of years of record required. Second, this NHDFlowline feature is most likely influenced by irrigation returns. Entries in the PlusFlowAR table for this feature and/or upstream features can be used to adjust the flow based on estimated irrigation returns.

Using the NHDReachCrossReference Table to Transfer to NHDPlusV2 Data that is Linked to NHDPlusV1

If you have linked data to NHDPlusV1, it's possible to transfer that data to NHDPlusV2 by using the NHDReachCrossReference table.

NHDFlowline and NHDWaterbody contain two keys: ComID and Reachcode. ComIDs change frequently and the changes are not tracked. On the other hand, Reachcodes are fairly stable and change infrequently. Reachcode changes are tracked in the NHDReachCrossReference table.

Transferring Links to NHDWaterbody

If you have linked data to NHDWaterbody ComIDs, you can easily associate NHDPlusV1 Reachcodes with your data, as follows:

1. For your data linked to NHDWaterbody features, join your data table's ComID with NHDWaterbody.ComID. Create a field in your data table called Reachcode (Character(14)) and set it to the NHDWaterbody.Reachcode.

Once you have NHDPlusV1 NHDWaterbody Reachcodes you can translate to NHDPlusV2 Reachcode using the NHDReachCrossReference table. The translation procedure is:

1. Search for your NHDPlusV1 Reachcode in NHDReachCrossReference.OldReachcode.

2. If there is no such entry, then the NHDPlusV2 Reachcode is the same as the NHDPlusV1 Reachcode. Measure values on the Reach should be the same as well.
3. If an entry is found and the NHDReachCrossReference.ChangeCode = “D”, then there is no translation to an NHDPlusV2 Reachcode and you will need to associate your data to NHDPlusV2 manually.
4. If an entry is found and the NHDReachCrossReference.ChangeCode <> “D”, then you must find the NHDPlusV2 Reachcode that now represents your NHDPlusV1 Reachcode. The NHDPlusV1 Reachcode may have been modified more than once, in which case, you will need to follow the consecutive links in the NHDReachCrossReference table. For the value NewReachcode (“NextReach”) in the table entry found above, search the table for an entry where NHDReachCrossReference.OldReachcode = NextReach. Repeat this step until no additional entries are found. The final value for NewReachcode is the NHDPlusV2 Reachcode that corresponds to your NHDPlusV1 Reachcode.

Transferring Links to NHDFlowline

If you have linked data to NHDPlusV1 NHDFlowline ComIDs, first you must associate NHDPlusV1 Reachcodes with your data.

1. Join your data table’s ComID with the Tnavwork.tblVAAFromTo.ComID. Create a field in your data table called Reachcode (Character(14)) and set it to the tblVAAFromTo.Reachcode. Note: Tnavwork data is available as an NHDPlusV1 Data Extension.
2. If you don’t have a feature class that shows the location of your data, you must derive a feature class for your data from the NHDPlusV1 NHDFlowline feature class:
 - a. If your data is linked to the bottom point of the NHDFlowline feature, create a field in your data table called Measure (Double(9,5)) and set it to Tnavwork.tblVAAFromTo.ToMeasure.
 - b. If your data is linked to the top point of the NHDFlowline feature, create a field in your data table called Measure (Double(9,5)) and set it to Tnavwork.tblVAAFromTo.FromMeasure.
 - c. If your data is associated with the entire NHDFlowline feature, you will need the from-measure and to-measure of the NHDFlowline feature. Create fields in your data table called FromMeasure (Double(9,5)) and ToMeasure (Double(9,5)) and set them as follows: FromMeasure = Tnavwork.tblVAAFromTo.ToMeasure and ToMeasure = Tnavwork.tblVAAFromTo.FromMeasure.
 - d. Using your data table with the fields added in step 2, run the ArcGIS Linear Referencing Toolbox tool called “Make Route Event Layer” to build a feature class with the geometry locations of your data.

Once you have NHDPlusV1 Reachcodes and a feature class with the geometry of the locations of your data, you can translate the NHDPlusV1 Reachcode into the NHDPlusV2 Reachcode using the NHDReachCrossReference table. This translation procedure is repeated for each entry in your data table:

1. Search the NHDReachCrossReference table for entries where NHDReachCrossReference.OldReachcode = your NHDPlusV1 Reachcode.
2. If there is no such entry, then the NHDPlusV2 Reachcode is the same as the NHDPlusV1 Reachcode.
3. If an entry is found and the NHDReachCrossReference.ChangeCode = “D”, then there is no translation to an NHDPlusV2 Reachcode and you will need to associate your data to NHDPlusV2 manually.
4. If one or more entries are found and the NHDReachCrossReference.ChangeCode <> “D”, then you must find the set of NHDPlusV2 Reachcodes that now represent your NHDPlusV1 Reachcode. If an NHDPlusV1 Reach became more than one NHDPlusV2 Reach, there will be more than one entry found in the NHDReachCrossReference table.
5. The NHDPlusV1 Reachcode may have been modified more than once, in which case, you will need to follow the consecutive links in the NHDReachCrossReference table. This can be done by saving the NHDReachCrossReference.NewReachcode value from each of the entries found in step 4 above. For each NewReachcode value (“NextReach”), search NHDReachCrossReference.OldReachcode = NextReach. Repeat this step until no additional entries are found. The final set of values for NextReach are the NHDPlusV2 Reachcodes to which your NHDPlusV1 Reachcode corresponds.
6. Using GIS tools to conflate your data onto NHDFlowline feature. In other words, locate your data on the set of NHDPlusV2 NHDFlowline features that represent the Reachcodes found during step 5.

Appendix A: NHDPlusV2 Build/Refresh Process Description

NHDPlusV2 starts with a snapshot of the National Hydrography Dataset (NHD), a snapshot of the National Elevation Dataset (NED) and a snapshot of the Watershed Boundary Dataset (WBD). From these three inputs, the NHDPlusV2 Build/Refresh Tools process produces NHDPlusV2 workspaces. The NHDPlusV2 Build/Refresh Tools are a collection of database and geo-spatial functions that are used to build NHDPlusV2.

The first 24 steps in the Build/Refresh process are incorporated into a single graphical user interface, called NHDPlusBuildRefresh, which creates and manages the workflow of steps necessary to execute the build/refresh process. Several additional tools, each under its own graphical user interface, are used to assist in steps classified as “External” and also to build the NHDPlusV2 data extensions. The data extensions (with tool names in parentheses) are EROM Flow Estimates (EROM), EROM Flow QAQC (EROMQAQC), Vogel Flow Estimates (VogelFlow), and Jobson Velocity Calculations (VelocityCalculator). In addition, various attributes allocated to NHDPlusV2 catchments and accumulated down the NHDPlusV2 stream network are produced with the Catchment Attribute Allocation and Accumulation Tool (CA3TV2).

The diagrams on the next two pages (Figure A-1) illustrate the workflow for the first 24 steps and the NHDPlusV2 data extensions, respectively.

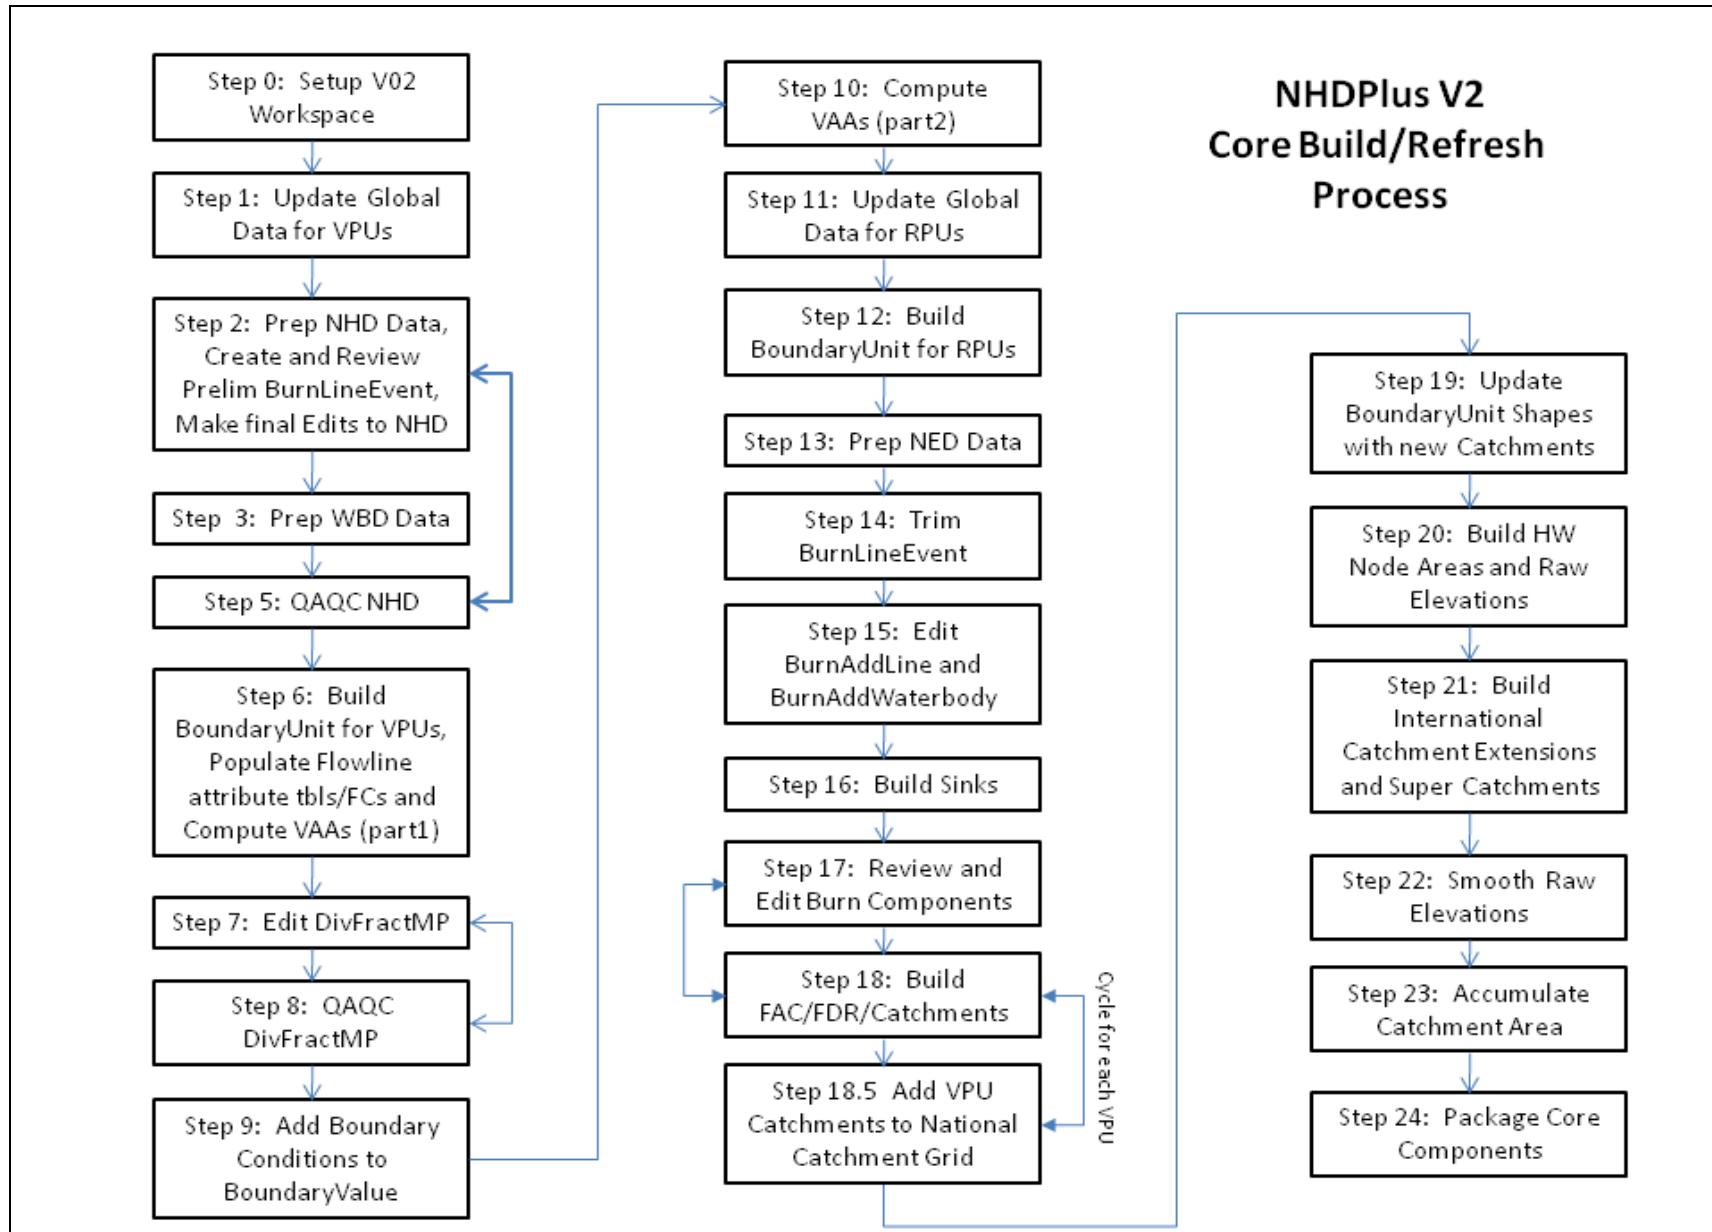


Figure A-1: (a) NHDPlus V2 Core Build/Refresh Process

NHDPlus V2 – Extended Build/Refresh Process

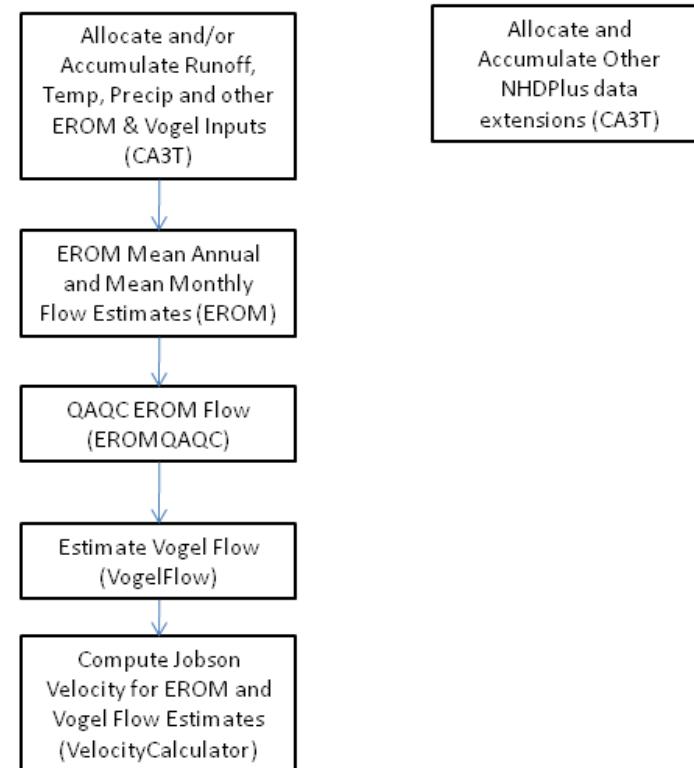


Figure A-1: (b) NHDPlusV2 Extended Build/Refresh Process

Step 1 – Edit Global Data to set up VPUs and Setup the Build/Refresh Work Flow (External)

During this step the NHDPlusV2 Global Data is set up for a drainage area. This involves defining the geographic area that is included in the drainage area and the divisions of the drainage area that comprise the VPUs. The \NHDPlusGlobalData\BoundaryRel table contains a list of HUC8s which are assigned during this step to the drainage area and to VPUs within the drainage area.

Step 2 – Prepare NHD Data (External)

The NHD data is edited in HUC04 shapefile workspaces using an NHD Edit Tool bar built especially for NHDPlusV2 Build/Refresh. The following edits are performed:

1. Names are applied or corrected on NHDFlowlines and NHDWaterbodies.
2. Incorrect isolated networks are connected to the network.
3. NHD and WBD are reconciled based on the WBD designation of “open” or “closed” and downstream HUC.
4. Coastline dangles are fixed.
5. Microgaps are fixed.
6. Non-linear NHDFlowline features, Reaches and Named paths are corrected.
7. Invalid Connectors are corrected.
8. Flow direction are corrected.

After editing is complete and the data passes the NHDPlusV2 network qaqc checks, (1) LengthKM and AreaSQKM in the various NHD feature classes are re-computed, ReachCodes are assigned to new reaches, M-values are assigned to each linear reach, and the HUC4 workspaces are appended into HUC2 hydrologic regions.

A flow table (\NHDPlusAttributes\Plusflow) is built from the geometry of the NHDFlowlines where FlowDir = “With Digitized”. Non-spatial connections at international return flows, underground connections, and other locations are added to the flow table.

Step 3 – Prepare WBD Data (External)

During step 3, the latest version of the WBD is acquired. The WBD polygons and lines are used to populate \WBDSnapshot\WBD\WBD_Subwatershed and \NHDPlusBurncomponents\Wall, respectively. The source WBD data is processed in the following manner.

From the national seamless snapshot of the WBD, HUC 12 polygons are selected in order to define a given NHDPlusV2 VPU. These are exported to \WBDSnapshot\WBD\WBD_Subwatershed (see Appendix D). A field is added to WBD_Subwatershed, named GAZ_ID. The GAZ_ID field is intended to contain a unique identifier assigned to each WBD HUC unit in the Geographic Names Information System (GNIS). At time of NHDPlusV2 processing, these IDs had not yet been assigned and, to accommodate the NHDPlusV2 processing, the GAZ_ID is populated with an NHDPlus unique FeatureID.

The Wall feature class is created from the national WBD HUC 12 line feature class using a spatial overlay selection with the WBD_Subwatershed. Any international boundary lines, coastal closure lines, and shorelines are removed from the newly created Wall feature class.

Step 4 – Reserved for Future Use

Step 5 – NHD QAQC – For each VPU in Drainage Area

During step 5, the NHDPlus NHD QAQC checks are run against the NHDSnapshot. If severe errors are found, the NHD is returned to step 2 for additional editing. The Build/Refresh process does not proceed beyond this point until the NHDSnapshot passes the qaqc checks.

NHDFlow.Direction valid values used in the descriptions of the QAQC checks are:

- 712 – Network Start
- 713 – Network End
- 709 – Flowline Connection
- 714 – Non-flowline connection at Coastlines

Check 1 - Flow Table Entry Never Navigated (Severe)

A downstream global navigation is performed beginning with all "Network Start" flow table entries. (including incoming workspace connections) The navigation proceeds downstream such that a flow table entry is never processed until all inflows to that entry have been processed. When no additional navigation can be performed, a Check 1 error is generated for each flow table entry that was not processed during the navigation.

Check 2 - Improper Network End (Severe)

ToComID in flow table does not appear as a FromComID (except inflowing connections). FromComID in flow table on “Terminal” flow record (i.e. ToComID = 0) also exists as a FromComID where ToComID

Check 3 - Invalid Flow Table Entry (Severe)

FromComID = ToComID
Neither FromComID nor ToComID are in NHDFlowline
Direction not 712, 713, or 714
Direction = 712 and (ToComID = 0 or FromComID > 0)
Direction = 713 and (FromComID = 0 or ToComID > 0)
Direction = 709 and (FromComID = 0 or ToComID = 0)
Direction = 714 and FromComID = 0 and ToComID = 0

Check 4 - Improper Network Start (Severe)

FromComID in flow table does not appear as a ToComID in flow table (except outflowing connections).
ToComID in flow table on “Start” flow record (i.e. FromComID = 0) also exists as a ToComID where FromComID \neq 0

Check 5 - Potential Loop (Severe)

When Check 1 errors are found, a Check 5 is generated at each location where the Check 1 navigation stopped. Check 5 can be used to locate the problems found by Check 1. Check 5 requires check 1 to be executed. If check 5 is selected, but not check 1. Check 1 will be run but the results will not be included in the error report.

Check 6 - Possible Outflowing Connection (Informational)

A flow table entry exists where the FromComID is in NHDFlowline and the ToComID is not.

Check 7 - Possible Inflowing Connection (Informational)

A flow table entry exists where the ToComID is in NHDFlowline and the FromComID is not.

Check 8 - Duplicate Flow Table Entry (Severe)

Based on FromComID, ToComID flow table entry occurs more than once

Check 9 - Incomplete Divergence

Identify incomplete divergences where all the inflows to the divergence do not each flow to all the outflows from the divergence. For example, A -> C, A-> D, B->C, but B->D is not in the flow table. Error report entry is for one of the ComIDs containing multiple outflows.

Check 10 - Flow Table and Flowline FType Disagree

ToComID in a coastline (714 - Non Flowline) flow table entry does not have an NHDFlowline.FType of "Coastline"

709 (In) Flow table entry where either FromComID or ToComID has NHDFlowline.FType of "Coastline"

Check 11 - Flow Table and Flowline FlowDir Disagree

NHDFlowline.ComID is in the flow table as ToComID or FromComID and NHDFlowline.FlowDir = "Uninitialized"

NHDFlowline.ComID is neither ToComID nor FromComID in the flow table and NHDFlowline.FlowDir = "With Digitized"

Check 12 - Isolated Network

Flow table.Direction = 713 (Network End)

Check 13 - Coordinate Order and Flow table Disagree

The common endpoint of flow table.FromComID and flow table.ToComID are not last 'point' and first 'point' respectively.

Check 14 - Flowlines Relate in Flow Table But Do Not Touch

Flow table.FromComID and the flow table.ToComID do not contain a common endpoint

Check 15 - Flowlines Touch But Do Not Relate in Flow Table (not Canal/Ditch)

Flowlines A and B contain a common endpoint (last "point" and "first" point, respectively) and A does not relate to B in the flow table and neither A nor B is a canal/ditch.

Check 16 - Reserved

Check 17 - Flowline Not in Linear Reach

Flowline is not part of a linear reach (i.e. NHDFlowline.ReachCode is empty or blank)

Check 18 - Circular Reach

Merged geometry for all NHDFlowlines with a particular ReachCode has 0 endpoints

Check 19 - Nonlinear Reach

Merged geometry for all NHDFlowlines with a particular ReachCode has other than 2 endpoints (and not 0 endpoints).

Check 20 - Circular Flowline

Geometry for a particular NHDFlowline has 0 endpoints.

Check 21 - Flowline With LengthKM = 0

Value of NHDFlowline.LengthKM is 0

Check 22 - Reachable Waterbody Not in Area Reach (Warning)

LakePond waterbody is not part of an area reach (i.e. NHDWaterbody.ReachCode is empty or blank).

Check 23 - Circular Named Path (Warning)

Merged geometry for all NHDFlowlines with a particular gnisid has 0 endpoints

Check 24 - Nonlinear Flowline (Severe)

Geometry for a particular NHDFlowline has other than 2 endpoints (and not 0 endpoints).

Check 25 - Nonlinear Named Path (Severe, but there can be false positives)

Merged geometry for all NHDFlowlines with a particular gnisid has other than 2 endpoints (and not 0 endpoints)

Check 26 - Flowline with both flowing and non-flowing flow table entries (Severe)

Flowline has both flowing and non-flowing flow table entries.

Check 27 - Waterbody reach has multiple waterbodies that do not touch (Severe?)

Waterbody reach contains multiple waterbodies and at least one of the waterbodies does not touch any of the remaining waterbodies in the waterbody reach.

Check 28 – Microgaps (Severe)

Identify microgaps between NHDFlowlines.

Check 29 - Duplicate NHDFlowline features (Warning)

Identify NHDFlowline features that intersect with a cluster_tolerance of 0. (shapes are overlapping or directly on top of each other).

Check 30 - Duplicate NHDWaterbody features (Warning)

Identify NHDWaterbody features that intersect with a cluster_tolerance of 0. (shapes are overlapping or directly on top of each other).

Check 31 - Duplicate NHDArea features (Warning)

Identify NHDArea features that intersect with a cluster_tolerance of 0. (shapes are overlapping or directly on top of each other).

Check 32 - Reach Surrounded by Different HUCS (Warning)

Identify NHDFlowlines in one HUC that are touched on both ends by NHDFlowlines in one or more different HUCs.

Check 33 - Coastline Dangles (Severe but there can be false positives between hydro-regions)

Identify coastline dangles.

Step 6 – Build GlobalData.BoundaryUnit for VPUs, ComID-based NHDPlusV2 tables, and VAAs Part 1

Step 6 partially populates PlusFlowlineVAA by calculating and QAQCing twelve Value Added Attributes (VAAs) and stores them in \NHDPlusAttributes\PlusFlowlineVAA. The VAAs are populated from the content of the PlusFlow table and the NHDFlowline feature class.

These VAAs are calculated only for NHDFlowline features with NHDFlowline.FlowDir = “With Digitized”. Step 6 computes values for the following VAAs:

Frommeas: Set to the m-values at the bottom of the NHDFlowline feature.

Tomeas: Set to the m-values at the top of the NHDFlowline feature.

Fromnode/Tonode: A node is defined as one of the following:

- The top of a NHDFlowline feature that has a flow table record with Direction = 712 (i.e. a headwater node).
- The bottom of a NHDFlowline feature that has a flow table record with Direction = 713 (i.e. a terminal node).
- The “point” of flow exchange represented by a flow table record with Direction = 709 (i.e. a node between two or more NHDFlowline features).
- The “point” of a non-flowing connection represented by a flow table record with Direction = 714 (i.e. a coastline connection)

Within a drainage area (DA), each node is given a unique number beginning with 1. The numbers are made unique across DAs by multiplying the node number by nn0000000, where nn is unique to each drainage area.

The Fromnode is the top of the NHDFlowline feature and the Tonode is at the bottom of the NHDFlowline feature.

StartFlag: Set to 1 if the NHDFlowline feature has a flow table record with Direction = 712 or if the Direction = 714 and the FromComID =0.

TerminalFlag: Set to 1 if the NHDFlowline feature has a flow table record with Direction = 713 or if the Direction = 714 and the ToComID =0.

VPUIn: Set to 1 if the NHDFlowline feature has a flow table record with Direction = 709 or 714 and the FromComID is not in the DA.

VPUout: Set to 1 if the NHDFlowline feature has a flow table record with Direction = 709 or 714 and the ToComID is not in the DA.

DnDrainCount: Set to the number of flow table records where the NHDFlowline feature is the FromComID and Direction = 709.

LengthKM: Set to NHDFlowline.LengthKM of the NHDFlowline feature.

ReachCode: Set to NHDFlowline.ReachCode of the NHDFlowline feature.

Fcode: Set to NDHFlowline.Fcode of the NHDFlowline feature

Step 7 – Edit Divergence Fraction Mainpath Table (External)

During step 7, the DivFracMP table is edited, when it is necessary, to specify mainpaths at points of flow divergence. If gaged stream flow data is available, the DivFracMP table may also specify the percentage of stream flow that flows down each of the divergent paths.

Step 8 – QAQC Divergence Fraction Mainpath Table – For Each VPU in Drainage Area

Step 8 is an automated QA/QC that confirms that the divergence fractions for a given divergence (i.e. the set of DivFracMP records with the same NodeNumber) sum to 1.0.

Step 9 – Edit Global Data BoundaryValue Table for incomplete DA (External)

When a drainage area is processed in parts by NHDPlus Build/Refresh Tools, it is necessary to establish boundary values for some NHDPlus attributes at the edge of the partial drainage area. Places where flow enters and leaves the partial drainage area require boundary values. Regardless of the use of boundary values, the drainage area parts must be run in hydrologic order from upstream to downstream.

The NHDPlusV2 Build/Refresh process was performed on partial drainage areas for the Mississippi and Colorado drainages.

Step 10 – Compute VAAs Part 2

Step 10 completes the VAA computation task started in Step 6. Each VAA is computed and QAQC'ed against other VAAs to confirm that the VAAs are internally consistent. All VAA must pass their respective QAQC checks in order for Step 10 to be considered successful. In the discussion below, only NHDFlowline features with FlowDir="With Digitized" are assigned VAA values. The following VAAs are computed in Step 10:

Divergence: Divergence is a flag that distinguishes between the main and minor paths at a network flow split. One NHDFlowline feature is designated as the major path (Divergence=1) and all other paths in the split are designated as minor paths (Divergence=2). All features that do not participate in a flow split have Divergence=0. Divergence always agrees with StreamLevel. This agreement insures that when navigating upstream along the main path and downstream along the main path give the same navigation results. The main path at a flow split is selected from all the out-flowing NHDFlowline features according to the following rules:

- An NHDFlowline feature that has the same name, ultimately flows to a coast and has an FType of StreamRiver, Artificial Path or Connector, otherwise
- An NHDFlowline feature that has the same name, that does not ultimately flow to a coast and has an FType of StreamRiver, Artificial Path or Connector, otherwise

- An NHDFlowline that has a positive DivFrac value in the DivFracMP table and that value is the maximum such value at the divergent node, otherwise
- any named stream/river, artificial path, or connector that ultimately flows to a coast, otherwise
- unnamed stream/river, artificial path, or connector that doesn't ultimately flow to a coast, otherwise
- any named canal/ditch or pipeline that ultimately flows to a coast, otherwise
- any NHDFlowline feature that ultimately flows to a coast, otherwise
- any named stream/river, artificial path, or connector that doesn't ultimately flows to coast.
- unnamed stream/river, artificial path, or connector that doesn't ultimately flow to coast, otherwise
- named canal/ditch or pipeline that doesn't ultimately flow to coast, otherwise
- any flowline that doesn't ultimately flow to coast.

In the rules above, if there is more than one NHDFlowline feature that matches the rule criteria, the one with the lowest ComID value is selected.

ArboluteSum: ArboluteSum is computed starting at the headwaters of the NHDFlowline network. The NHDFlowline.LengthKM is summed along the network such that each feature has an ArboluteSum of its length plus the length of every upstream feature.

StreamLevel: StreamLevel is a numeric code that traces main paths of water flow upstream through the drainage network. StreamLevel is assigned starting at the terminus of a drainage network. If the terminus stopped at a coastline NHDFlowline feature (i.e. at the Atlantic Ocean, the Pacific Ocean, the Gulf of Mexico, or one of the Great Lakes), a stream level of 1 is assigned to the terminus and all the NHDFlowline features in the main path upstream to the headwater of the stream. If the terminus drains into the ground or stops at the Canadian or Mexican border, a stream level of 4 is assigned to the terminus and all the NHDFlowline features in the main path upstream to the headwater of the stream. After the initial stream level of 1 or 4 is assigned to the terminus and its upstream path, all tributaries to that path are assigned a stream level incremented by 1. Then the tributaries to those stream paths are assigned a stream level incremented by 1. This continues until the entire stream network has been assigned stream levels.

If possible, StreamLevel follows a named path. In other words, at any confluence, if there is an NHDFlowline feature immediately upstream with the same name, that feature is selected as the main path. If there is no matching name immediately upstream, the NHDFlowline feature with the maximum ArboluteSum value is selected. To ensure agreement with Divergence, StreamLevel assignment along a give path stops when it encounters a Divergence=2, otherwise StreamLevel assignment continues to the headwaters of the stream.

HydroSeq: Hydroseq is assigned by starting at the headwaters of the NHDFlowline network and assigning a sequential number proceeding downstream. To begin each headwater is assigned a value. Next, all of the outflows from the headwater streams are assigned values. Then all of the outflows of the outflows of the headwater streams are assigned values. This process continues until all network features have values. The features are sorted by descending values (i.e. downstream to upstream) and the final Hydroseq values are assigned in a ascending sequence. The final Hydroseq values are smallest at the downstream end of the network and largest at the upstream end of the network.

The primary characteristic of the HydroSeq number is that if the features are processed by descending HydroSeq values (i.e. upstream to downstream), when any feature is processed, all the features upstream have already been processed. Likewise, if the features are processed by ascending HydroSeq values (i.e. downstream to upstream), when any feature is processed, all the features downstream have already been processed.

DnLevel: This is the value of StreamLevel of main path NHDFlowline feature immediately downstream. When DnLevel \leftrightarrow StreamLevel, the stream is about to discharge into another stream pathway.

LevelPathID: LevelPathID is set equal to the HydroSeq value of the most downstream feature on the same level path. For example, all the features along the Mississippi River have the same value for LevelPathID.

TerminalPathID: TerminalPathID is set equal to the HydroSeq value of the most downstream feature in the drainage system. In other words, the HydroSeq of the network terminus will become the TerminalPathID of all the features that flow to that terminus. For example, all the features that flow to the mouth of the Delaware River will have the same value for TerminalPathID.

UpLevelPathID: This is the LevelPathID of the main path NHDFlowline feature immediately upstream.

UpHydroSeq: This is the HydroSeq value of the main path NHDFlowline feature immediately upstream.

DnMinorHydroSeq: When there is a flow split at the downstream end of a feature, this is the HydroSeq value of a minor path in that divergence. If there is more than one minor path in the divergence, the one with the lowest ComID value is used to set DnMinorHydroSeq.

PathLength: Pathlength is the sum of the NHDFlowline.LengthKM downstream, along the main path, to the terminus of the network. For example, the Pathlength of the mouth of the Missouri River will be the distance to the mouth of the Mississippi River.

RTNDiv: RTNDiv stands for returning divergence and it is set to one when one or more of the paths from an upstream flow split return to the network at the upstream end of the NHDFlowline feature.

StreamOrder/StreamCalc: Stream in NHDPlus is a modified version of stream order as defined by Strahler. The Strahler stream order algorithm does not account for flow splits in the network. The NHDPlus algorithm for stream order does take flow splits into consideration. StreamCalc stands for stream calculator and is computed along with StreamOrder. These VAAs are computed from upstream to downstream. The basic rules for assigning StreamOrder and StreamCalc are:

StreamCalc is set to 0 at headwater features. Otherwise, if Divergence = 2, StreamCalc is set to 1. Otherwise, StreamCalc is set to the maximum values of StreamCalc on the inflows (i.e. features immediately upstream).

If the StreamOrder values on all the inflows are different and StreamCalc = 0, then StreamOrder is set to the maximum value of StreamOrder on the inflows.

If the StreamOrder values on two or more inflows are the same and StreamCalc = 0, then StreamOrder is set to the maximum value of StreamOrder on the inflows plus 1.

If StreamCalc = 1, then StreamOrder is set to the maximum value of StreamOrder on the inflows.

Step 11 – Edit Global Data to set up RPUs (External)

During Step 11, the NHDPlusGlobalData\BoundaryRel is edited to assign HUC8s to the RPUs in the drainage area.

Step 12 – Build GlobalData.BoundaryUnit for RPUs

Using the HUC8 boundaries in \NHDPlusGlobalData\BoundaryUnit and the assignments of HUC8s to RPUs found in NHDPlusGlobalData\BoundaryRel, Step 12 builds polygons for the RPUs in the drainage area.

Step 13 – Prepare NED (External)

The purpose of Step 13 is to prepare the original/raw elevation data for the production of the HYDRODEM in Step 18. One-arc-second NED data is acquired from the USGS EROS Data Center. If the drainage area has drainage coming from Canada, elevation data for the Canadian area is acquired, as available, from the Canadian Digital Elevation Data and appended to the NED data. The NED data currently includes data for Mexico.

The RPU polygons in \NHDPlusGlobalData\BoundaryUnit are used to select the set of WBD sub-watershed polygons (see “\WBDSnapshot\WBD\wbd-Subwatershed”) that belong to each RPU. For each RPU in the drainage area, the set of sub-watershed polygons are buffered and the buffered area is used to create the \NEDSnapshot\NEDRRRRRRRRR\elev_cm for the RPU. The data are extracted, merged together, projected to the Albers Equal-Area projection, and converted to integer centimeters in ESRI Grid format. Integer grids are used because integer grids use internal compression, and the data are converted from meters to centimeters in order to retain precision.

Step 14 – Trim BurnLineEvent for Raster Processing

Step 14 shortens some features in \NHDPlusBurncomponents\BurnLineEvent to improve the hydro-enforcement process. To avoid the possibility that headwater features will cut through the ridge lines in the elevation data, the headwater features are trimmed by 150 meters. To ensure that the NHDPlus flow direction grids (see “\NHDPlusFdrFacRRRRRRRR(fdr”) follow the main path at flow divergences, the minor path of divergences are also trimmed or shortened by 150 meters.

Occasionally, a headwater feature or a minor divergent path feature is shorter than 150 meters. When this occurs, the feature is removed entirely from BurnLineEvent. Features removed from BurnLineEvent are not included in the NHDPlusV2 raster processing and consequently, they are not hydro-enforced into the DEM and they do not receive catchments. When these features are headwater features, they will not have

values for the attributes that depend upon the raster processing such as endpoint elevations, slope, headwater node area, and flow estimates.

Step 15 – Edit BurnComponents (External)

The purpose of Step 15 is to edit the hydro-enforcement components found in \NHDPlusBurnComponents. The BurnLineEvent, BurnAddWaterbody, BurnAddLine, and Wall feature classes are edited as needed and the LandSea feature class is created.

The parts to this step are:

- A. Create LandSea polygons (if a coastal VPU): This is created using the NHD coastline features and creating a buffer area on both sides of the coastline to contain a polygon for the landward side of the coastline and a polygon for the ocean. Estuary polygons are optional features to separate coastal bays from the ocean polygon areas.
- B. Find and Resolve Stream-Wall Conflicts: Headwater stream conflicts with the WBD are identified by locating headwater NHDFlowline features that intersect a wall when both the feature and the wall are rasterized. The selected streams are then trimmed back, leaving only the lower 30% of the feature. This action minimizes breaching of 1:24,000-scale WBD divides by 1:100,000-scale headwater NHDFlowline features. Further conflicts are identified for any NHDFlowline feature that intersects, when rasterized, the outermost boundary of the VPU wall. Conflicts are resolved by either trimming back a headwater feature further; setting a feature or set of features to “N” for the Burn and Catchment attributes in BurnLineEvent; or when necessary, editing the Wall feature class to remove the conflict with the NHDFlowline feature(s).
- C. Resolve “Empty” HUCs: This step identifies HUC 12 polygons in WBD_Subwatershed that are not closed basins (as identified by the WBD) and do not have any BurnLineEvent features within them. HUC 12s that meet this criteria are termed “empty hucs” and lack a NHDFlowline connection to drain these areas correctly in the HydroDEM. Once the empty hucs are identified, a WBD attribute in the polygon data is used to identify the next downstream HUC 12 to which that the HUC flows. The line feature between these HUCs is then removed from the Wall feature class.

An alternative process was used early in the production process; a line was added to the BurnAddLine NHDPlus feature class to breach the wall between the “empty huc” and the next downstream HUC in the HydroDEM conditioning process. This early method was abandoned after the automated method was developed to remove wall segments, as described above.

- D. Identify and attribute closed lakes: In NHDPlusV2, non-contributing areas are represented from a variety of sources including the WBD. Within the WBD, information on non-contributing areas (termed “closed basin” in WBD) is available at the HUC 12 level. An attribute in the WBD_Subwatershed feature class named HU_12_DS is used to find these closed basins. Within these closed systems an attempt was made to identify closed lakes (i.e. lakes that have no outflows). Identifying closed lakes provided greater detail of the non-contributing HUC 12 areas. In many cases, a closed lake could be identified by checking for a lake name in the attribute HU_12_Name in WBD_Subwatershed.

In these cases, the named lake drains the closed HUC 12. In other cases, several lakes within these closed systems are identified by review of the topographic maps and imagery. Lakes in the

NHD that are deemed closed, are coded in BurnWaterbody by setting the attributes Purpcode = 5 and Purpdesc = “NHD Waterbody closed lake”. Closed lakes in BurnAddWaterbody are coded with PurpCode = 8 and Purpdesc = “BurnAddWaterbody closed lake”. Step 16 places a point at the centroid of these closed lakes in the Sink feature class. In step 18, catchments for these sinks are generated along with catchments for BurnLineEvent features.

- E. Check InRPU field in BurnLineEvent: This step reviews the RPU id (in BurnLineEvent.InRPU) assignments for the BurnLineEvent features. The PlusFlow table was used to detect where flowlines flow from one RPU to another. The flowlines were reviewed manually to ensure no flowlines were assigned to the wrong RPU.
- F. Review Burn Components: This step involves reviewing the feature classed in \NHDPlusBurnComponents and handling certain data conditions that are observed. The following conditions are checked:
 - Review features in BurnLineEvent coded as FType=“Pipeline” and determine the appropriate values for fields “Catchment” and “Burn” in BurnLineEvent. Often, these features should not have a catchment generated and/or should not be used for hydro-enforcement. In these cases, the Catchment and/or Burn attributes can be set to “N” (no).
 - Review features in BurnLineEvent coded as FType=“CanalDitch” or “Connector”. Like “Pipeline”, these features may also need the Catchment and/or Burn attributes can be set to “N” (no).
 - This step also accommodates other scenarios that involve setting the Catchment and Burn attributes in BurnLineEvent and adding features to BurnAddLine. It is beyond the scope of the User Guide to identify all possible scenarios, however, these are discussed when appropriate in the Release Notes of the distribution data for a given VPU.
- G. Create Burn Components for International areas (if applicable): For VPUs along international borders, hydrography data from Canadian or Mexican sources are included in the NHDPlusV2 Burn Components: BurnAddLine and BurnAddWaterbody. In some cases, these international data sources are part of “harmonized” high resolution NHD data, while others are datasets available from Canadian or Mexican agencies such as the Canadian National Hydrographic Network (NHN). Inclusion of this hydrography is intended to improve catchment delineations where NHDFlowline features receive contributing drainage from these international areas. In some cases, lake polygons in international areas are coded as closed lakes when such information on non-contributing areas is known.
- H. Add Burn Components at inter-VPU connections (if applicable): In cases, where VPU’s are connected with another VPU, whether as an inflow or outflow with an adjacent VPU, the connecting BurnLineEvent features from the adjacent VPU are added to BurnAddLine of the VPU being processed. This ensures that catchment delineations for the VPU being processed are constrained by the adjacent VPU flowlines. In addition, flowlines are needed in BurnAddLine from downstream associated VPUs to ensure proper hydro-enforcement of the DEM. Downstream VPU flowlines are selected to extend to the edge of the DEM. In some cases, waterbodies from the adjacent VPUs are integrated into BurnAddWaterbody if these features are at or near the inter-connection areas between the VPUs.

Step 16 – Prepare Sinks and Update BurnWaterbody and BurnAddWaterbody

This automated step first populates, with unique feature ids, the fields PolyId in BurnAddWaterbody and GAZ_ID in WBD_Subwatershed. A callable NHDPlusV2 web service is used to assign unique identifiers.

Next, the OnOffNet fields in the BurnWaterbody and BurnAddWaterbody are populated. OnOffNet is used to differentiate waterbodies that intersect a burn line from either BurnLineEvent or BurnAddLine. Only features in BurnLineEvent with a Burn property of “Y” (yes) are used in the spatial intersect selection. All features in BurnAddLine are used in the spatial intersect selection with BurnWaterbody and BurnAddWaterbody. Any waterbody that intersects a burn line is coded as “1” in the field OnOffNet. Also, if a waterbody is coded as a playa or closed lake, these are also coded with a value of “1”. Later, in Step 18, the hydro enforcement process handles the enforcement of these features in the DEM differently than waterbody features that do not intersect with a burn line or are identified as a closed lake or playa (OnOffNet = 0).

The sink shapefile is then created for the following scenarios in the following order where all sinks created are written to one Sink shapefile.

- A. Create sinks at network ends of isolated networks: Network ends are identified by finding PlusFlow records that have Direction = 713). Sinks are created for the corresponding BurnLineEvent feature’s most downstream point. The network end feature’s InRPU assignment is carried over from BurnLineEvent into the InRPU field of the Sink feature. These Sink features are assigned PurpCode = 1 and PurpDesc = ‘BurnLineEvent network end’. The Sink features SourceFC field is set to “NHDFlowline” and FeatureID field is set to the BurnLineEvent feature’s ComID. Sinks are removed if they are within 60-meters of a BurnLineEvent or BurnAddLine that is not associated to the isolated network.
- B. Create sinks at the ends of networks that are non-spatially connected to another flowline network: These network ends are identified from the PlusFlow table where the values in field GapDistKM exceed 0.03 kilometers. The InRPU value is carried over from the BurnLineEvent feature into the Sink InRPU field. These Sink features are assigned PurpCode = 2 and PurpDesc = ‘BurnLineEvent non-spatial connection’. The Sink features’ SourceFC field is set to “NHDFlowline” and FeatureID field is set to the BurnLineEvent features’ ComID.
- C. Create sinks at the centroids of polygon features in BurnWaterbody that are classified as a playa (FCODE > 36099 and FCODE < 36200): These Sink features’ fields are set as follows:
 - Purpcode = ‘3’
 - PurpDesc = ‘NHD Waterbody Playa’
 - SourceFC = ‘NHDWaterbody’
 - FeatureID equal to the NHD Waterbody ComID that the sink represents.
 - InRPU is set using a spatial overlay intersect with the NHDPlusV2GlobalData\BoundaryUnit feature class.
- D. Create sinks at the centroids of polygon features in BurnWaterbody that are classified as a closed lake (PurpCode = ‘5’): These Sink features’ fields are set as follows:
 - Purpcode = ‘5’
 - PurpDesc = ‘NHD Waterbody closed lake’

- SourceFC = ‘NHDWaterbody’
 - FeatureID = to the NHD Waterbody ComID that the sink represents.
 - InRPU is set using a spatial overlay intersect with the NHDPlusV2GlobalData\BoundaryUnit feature class.
- E. Create sinks at the centroids of polygon features in BurnAddWaterbody that are classified as a playa (FCODE > 36099 and FCODE < 36200): These Sink features’ fields are set as follows:
- Purpcode = ‘4’
 - PurpDesc = ‘BurnAddWaterbody Playa’
 - SourceFC = ‘BurnAddWaterbody’
 - FeatureID = to the BurnAddWaterbody PolyID that the sink represents.
 - InRPU is set using a spatial overlay intersect with the NHDPlusV2GlobalData\BoundaryUnit feature class.
- F. Create sinks at the centroids of polygon features in BurnAddWaterbody that are classified as a closed lake (PurpCode = ‘8’): These Sink features’ fields are set as follows:
- Purpcode = ‘8’
 - PurpDesc = ‘BurnAddWaterbody closed lake’
 - SourceFC = ‘BurnAddWaterbody’
 - FeatureID = to the BurnAddWaterbody PolyID that the sink represents.
 - InRPU is set using a spatial overlay intersect with the NHDPlusV2GlobalData\BoundaryUnit feature class.
- G. Create sinks in WBD closed 12-digit HUCs coded as closed basin (HU_12_TYPE = ‘C’ OR HU_12_DS = ‘CLOSED BASIN’): Sinks are placed at the minimum elevation point(s) within closed HUC 12s. If sinks were placed from any other scenario (A-F) in these closed basins, another sink is not created for this scenario. The NED snapshot is used to determine the minimum elevation within a given closed HUC 12. These Sink features’ fields are set as follows:
- Purpcode = ‘6’
 - PurpDesc = ‘WBD Closed HUC 12’
 - SourceFC = ‘WBD_Subwatershed’
 - FeatureID = GAZ_ID in WBD_Subwatershed.
 - InRPU is set using a spatial overlay intersect with the NHDPlusV2GlobalData\BoundaryUnit feature class.

Step 17 – Review all Burn Components – For each VPU in Drainage Area (External)

This manual step reviews a variety of the NHDPlus burn component feature classes and includes:

- Check and populate missing InRPU assignments in the Sink feature class.
- For sinks associated to closed HUC 12s with missing InRPU assignments, populate the InRPU to the correct RPU id and move sink to the lowest elevation in the HUC.
- Determine if additional sinks are needed and digitize these manually in the Sink feature class; populate the sink fields appropriately. Manually adjusted sinks carry a StatusFlag = ‘M’.
- Remove sinks not associated to flowlines that are within a distance of 45 meters from any Wall feature.
- Find and remove any playa sinks if the playa is on the flowline network.

- Fix gaps caused by trimming of headwater streams along the international border. For these headwaters, international drainage in BurnAddLine most likely connects to these flowlines and need to have their automatic trimback reset to the original position as they are represented in NHDFlowline.
- Finalize the review of all burn components and make changes as needed. Unique edits are recorded in the VPU release notes.

Step 18 – Build Catchments, FDR, and FAC Grids – For each VPU in Drainage Area

This processing step prepares the ingredient vector data by VPU, then runs the raster processing steps for each RPU within the VPU.

The purpose of this step is to create, for an RPU, a HydroDEM and resultant flow direction and accumulation grid. Catchments are generated for each RPU and then merged into one catchment grid for the entire VPU. The catchments for the VPU are converted to a shapefile and projected into geographic coordinates. Minimum elevations for each flowline catchment are written to elevslope. A version of the flow direction grid with NoData cell values in NHD streams is provided in the grid FDRNULL. The source grid used to generate catchments is also provided for each RPU in the grid CatSeed. A grid showing filled cell areas for each RPU is provided in grid FilledAreas.

Section A. Preparation of input vector data: Below list the general steps in preparing the input vector data from the NHDPlusBurnComponents folder:

- Assign / Update new gridcodes for all flowlines in BurnLineEvent and sink points in Sink.
- Assign feature ids for NULL values in Sink, BurnAddWaterbody, BurnAddLine, LandSea, and Wall.
- Extract features from BurnLineEvent with BURN properties set to “Y”. Write selected records to TmpBurnLineEvent.
- Append all features from BurnAddLine to TmpBurnLineEvent. TmpBurnLineEvent is used later in Section B of Step 18 for hydrologic enforcement of the NHD streams and additional features from BurnAddLine (stream-burning process).
- Extract features from BurnLineEvent with CATCHMENT properties set to “Y”. Write selected records to TmpCatchLine.
- Select features from BurnAddLine with a GRIDCODE > 0. Append selected features to TmpCatchLine. TmpCatchLine will later be used in Step 18 to generate catchments.
- Combine waterbodies from BurnWaterbody and BurnAddWaterbody to one temp shapefile (tmp_wball). These are used for hydro-enforcement of all waterbody features later in Section B of Step 18.
- Select OnOffNet features = 1 from BurnWaterbody and BurnAddWaterbody and combine these to a new temp shapefile (TmpWBodyOn). These are used for the bathymetric gradient processing later in Section B of Step 18.
- Select Sinks with BURN properties NOT equal to “N” for hydro-enforcement of these sink features.
- Calculate STEP values in TmpBurnLineEvent for hydro-enforcement. This process computes the step values from the NHDPlus VAA hydro sequence numbers.

Section B. Raster processing

Below is a general overview of the main raster processing steps in building the HydroDEM for each RPU. The step is repeated for each RPU of the VPU being processed.

- Clip VPU vector data to the RPU buffer area
- Assign negative grid code values in TmpCatchLine that do not belong to the RPU being processed.
- Select flowlines based on each unique stream level and export these to unique stream level feature classes. Next the stream level feature classes are converted to grids using gridcode as the cell value. The stream level grids are then merged together as one NHD grid. Main paths override lesser paths at confluence grid cells in the merge operation. This ensures correct representation of the flowline network in the grid data model.
- Assign negative grid code values for sink features that do not belong to the RPU being processed.
- Convert sinks to a grid using gridcode as the cell values.
- Merge the sink grid with the NHD grid, the merged grid named CatSeed will be used as input later on as the “seed” source grid for catchment delineation.

Descriptions of Hydro-enforcement Processes

Waterbody Enforcement

Certain waterbody features from the NHD were used in the HydroDEM enforcement process. These include “Lake/Pond”, “Playa”, and “Reservoir” features from NHDWaterbody and “Stream/River” features from NHDArea. Step 6 of the NHDPlus BuildRefresh production process selects these from both NHD sources and writes these to the BurnWaterbody shapefile. In addition to NHD features in BurnWaterbody, additional waterbodies collected in BurnAddWaterbody are also enforced. For this processing, the features from both are combined into a temp waterbody shapefile.

The waterbody enforcement is a two stage process. The first stage is new for NHDPlus Version 2 and fixes issues identified in Version 1 where catchments can sometimes subdivide an NHD waterbody in error. In this process all the waterbodies are enforced by determining the minimum DEM elevation within these and setting the overlapping waterbody cells in the HydroDEM the value of the minimum DEM elevation found for each. These elevation cells are then dropped by subtracting 100 meters from the previously set minimum elevation values. This dropping of the waterbody elevations is applied to ensure these cells are well below the surrounding terrain. Later, when the FILL process is applied to the HydroDEM, these waterbodies will fill and drain to one location, the result of which will lead to better agreement with the catchment delineations in relation to these features.

The second stage process of the waterbody enforcement, termed applying a “bathymetric gradient” is the same as was done in Version 1 NHDPlus with some slight modifications. The bathymetric gradient ensures that the catchments generated for artificial path flowlines within waterbodies are based on a gradient directed towards the artificial path flowlines. This process involves enforcement of just the waterbodies that intersect the flowline network (OnOffNet = 1) or have a sink within them. The results of the bathymetric gradient process are shown in Figure A-2.

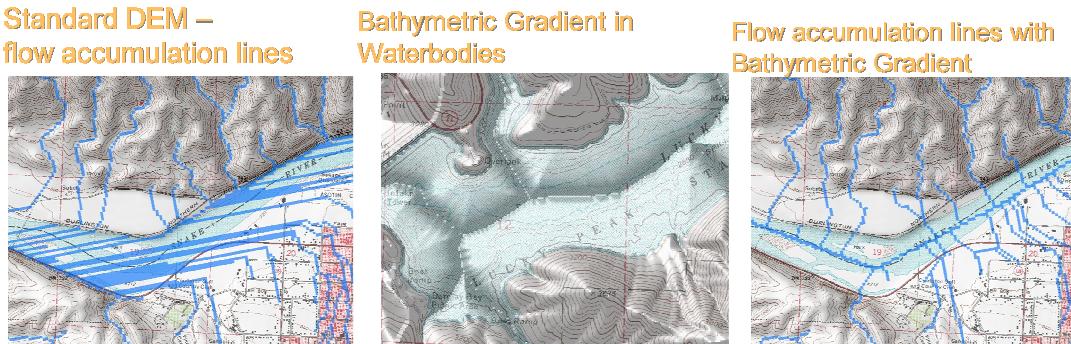


Figure A-2: (a) Standard DEM Flow Accumulation Lines, (b) Bathymetric Gradient in Waterbody, (c) Flow Accumulation Lines with Bathymetric Gradient

Stream-Burning using the AGREE Method

Modifications were applied to the source DEMs (elev_cm grids included in the NEDSnapshot folder) to produce the HydroDEM. These modifications were considered necessary because often the drainage path (flowpath) defined by the NED surface does not exactly match the 1:100,000-scale NHD. In many cases, the NHD streams and NED-derived streams are parallel or offset from each other. Figure A-3 (a) illustrates a common example of the differences in the horizontal positions of NHD streams and NED-derived streams. If this offset distance is greater than one grid-cell width, then some cells may not be identified as being upslope from the NHD stream segment and therefore would be erroneously excluded from the delineated catchment (Figure A-3 (b)).

To mitigate this mismatch of stream locations, the NHD vector drainage was integrated into the raster NED data, often referred to as “stream burning” (Saunders, 2000). This process uses computer algorithms originally written in the Arc Macro Language (AML) program called AGREE, developed by Hellweger (1997). Figure A-3 (c) illustrates how the AGREE program corrects for DEM flow path displacement errors when delineating catchments.

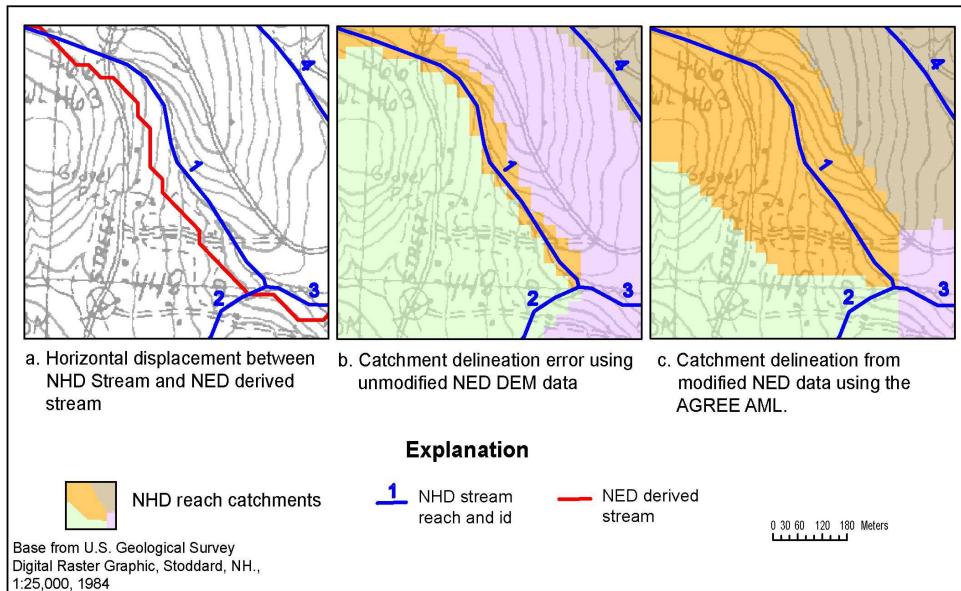


Figure A-3: (a) Differences in drainage between the NHD and flow paths of a NED-derived stream, (b) Resultant NHD catchment delineations using unmodified NED DEM data, and (c) Resultant NHD catchment delineations using AGREE-modified NED data.

AGREE “burns” a “canyon” into the NED-based DEM by subtracting a specified vertical distance from the elevation beneath the NHD vector streamlines. The vertical exaggeration of the canyon is controlled by specifying a “Sharp Drop/Raise Distance.” For the HydroDEM, a negative “sharp” drop distance (10,000 meters) was applied to retain the new NHD stream flow path after subsequent depression filling processes needed for catchment delineation.

AGREE also “smooths” the elevation adjacent to NHD stream cell locations in the DEM within a buffer distance specified by the AGREE program user. Typically, the buffer distance is related to a common horizontal displacement error between NHD and NED-derived streams; this error is seldom exceeded. For HydroDEM production, the buffer distance was set to 160 meters on each side of the NHD streamline. The smoothing process changes the DEM grid-cell elevations within the buffer area to create a downward sloping gradient towards the modeled canyon beneath the NHD streams. The steepness of the slope within the buffer is controlled by the AGREE “Smooth Drop/Raise Distance” option. For the HydroDEM, a smooth drop distance of 500 meters was specified, with acceptable results. Figure A-4 illustrates how AGREE changes the original DEM using all the specified parameters of AGREE.

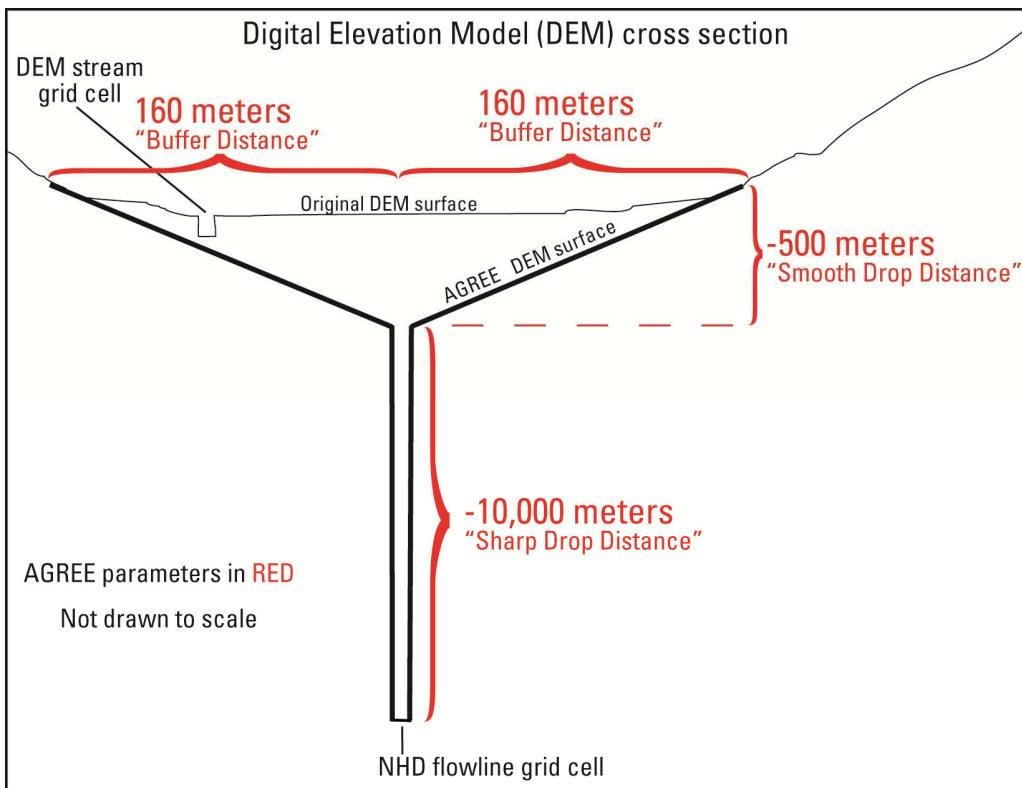


Figure A-4: Schematic of AGREE process

The use of AGREE's 160 meter smooth/drop buffer distance of the NHD streams may cause potential problems at headwater flowlines because they begin at or near drainage divides in the DEM. The 160 meter buffer distance at these headwater streams may extend across the DEM drainage divides and into the adjacent basin area, thereby including areas outside the true catchment area.

To minimize the problem of extending headwater streams into adjacent watersheds, these headwater streams were trimmed back earlier in the NHDPlus BuildRefresh production process (Step 14). In addition, headwater streams still in conflict with the WBD 12-digit HUC divides in the Wall feature class, were trimmed back 70% of their original length (Step 15). The trimback positions are noted in the ToMeas field of BurnLineEvent.

Enforcement of WBD divides as “Walls”

A seamless nationwide coverage of the HUC 12 drainage divides of the Watershed Boundary Dataset (WBD) are integrated into the HydroDEM as “Walls” in the Wall feature class. The process of conditioning DEM data to WBD drainage divides is called “walling”, which vertically exaggerate DEM elevations corresponding to the location of WBD ridgelines. The vertical distance used to exaggerate the cells is a specified constant added to the elevation grid cells above the WBD. Breaks in the walls were created at locations where the stream network crosses the WBD to ensure proper passage of water from one WBD HUC 12 to another. A graphic 3-D representation of a hydrologically-conditioned DEM with WBD walling and the NHD “burning” is shown in Figure A-5.

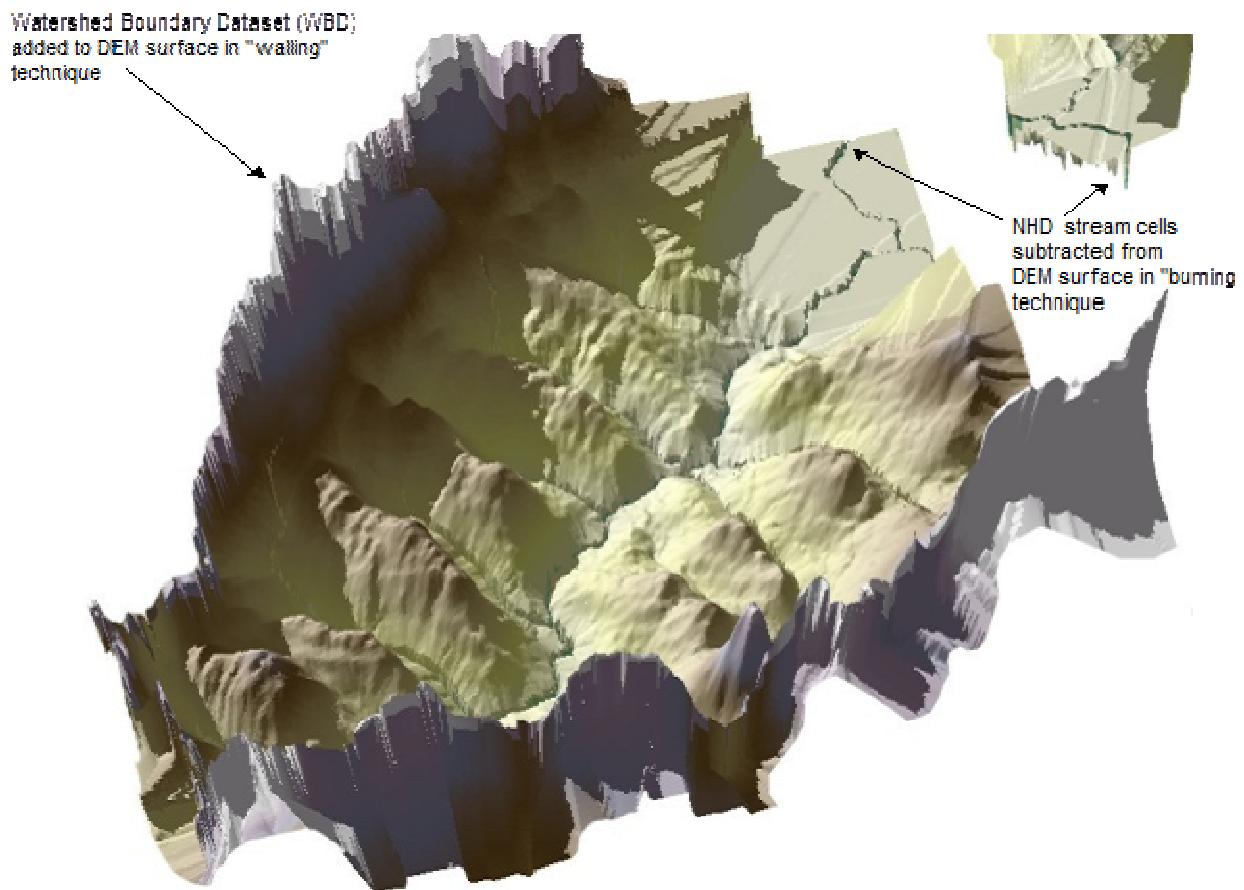


Figure A-5: 3-D Perspective view of modified DEM with walling of existing Watershed boundaries and burning of NHD streams

Step Elevations for Flowlines

New for NHDPlus in Version 2, is the replacement of elevation cell values within the NHD stream channel cells of the stream burning process of Agree. The improvement utilizes the NHDPlus VAA attribute, HYDROSEQ (hydrosequence) values to compute a unique elevation value for each flowline, to create a stepping sequence within the burnt in stream canyon from Agree. This improvement enhances the HydroDEM flow path to follow the main path navigation defined by NHDPlus, and resolves issues that sometimes occur in Version 1 NHDPlus flow direction grids, where the FILL process reversed the direction of water to flow uphill to an adjacent RPU/VPU inflow connection. While catchment delineations are unaffected by flow directions of the streams, the use of stepped values for the stream channels in NHDPlusV2 greatly enhances the usability of the flow direction and accumulation grids for watershed delineations.

Enforcement along the NHD Coastline (LandSea)

Another new enhancement for NHDPlusV2 is the hydro-enforcement of areas along the NHD coastline. Previously in NHDPlusV1, the ocean side of the NHD coastline was set to NoData in the HydroDEM. Now with NHDPlusV2, the ocean areas within a buffer area of the NHD coastline has elevation values

lower than any NHD feature on the land. For coastal bays of interest, a two-tiered ocean stepping can be imposed in the HydroDEM to allow for DEM based watershed delineation within a bay to capture all drainage to the bay by selecting just one grid cell.

The new NHDPlus Burn Component feature class LandSea is used for this coastal enforcement. This enforcement is only applied for VPUs with NHD coastline (the Great Lakes region is the one exception). LandSea is a polygon feature class that typically contains two or three unique polygon categories coded in the “Land” field. The polygon coded as land (LAND = 1) is used to resolve any disparity of landward elevations in the HydroDEM between the NHD coastline and coastline defined by the NED.

The ocean polygon (Land = -2) in LandSea is used to drop the oceanic surface elevation cells in the HydroDEM below the imposed elevations of the NHD coastline. Estuary polygons (Land = -1) are optional features along the coast for those bays where it is preferable to have these differentiated from the ocean cells. The estuary cells are 1 cm higher than the ocean areas, and one centimeter lower than the lowest NHD coastline in the VPU.

Flow paths can be imposed into the estuary and ocean elevations cells as a burnt canyon to direct drainage to these flow paths using the NHDPlus BurnAddLine feature class.

Enforcement of Sink points

For VPUs with sinks, the sink points are converted to a grid where a sink is represented as one grid cell. These sink cells are set to NoData in the HydroDEM so that sink drainage areas drain to these points. Later, when the NHDPlus ection grid (FDR) is created, these NoData cell values are replaced with 0 (zero) values within the FDR grid in order to ensure proper functionality with their use for point based watershed delineation.

Final HydroDEM, Catchments, FDR/FAC and Other NHDPlus Outputs

After all the NHDPlus Burn Components are used in the various hydro-conditioning process, the final HydroDEM for each RPU is completed after the FILL process is applied. FILL is used to resolve any depressions in the DEM by “filling” these areas to drain these to the lowest surrounding grid cell. All lowpoints are filled except for those areas imposed in the HydroDEM with NoData cell sinks. The NHDPlus FILLEDAREAS grid shows grid cells raised by the fill process, and is available with the HydroDEM data for each RPU.

From the final filled HydroDEM, the flow direction (FDR) and flow accumulation (FAC) grids are computed and written to each NHDPlus RPU folder. Flow direction and flow accumulation grids are not merged for each VPU because the accumulation values only represent upstream cells within the RPU; they do not include cells in upstream production units or buffer areas.

New in NHDPlusV2, a second version of this flow direction grid is produced where the burned in hydro is replaced by NoData cells. This variant flow direction grid is named FDRNULL and written to each RPU folder of the NHDPlus HydroDem folder. The FDRNULL grid can be used with the ArcGIS Spatial Analyst function, FLOW LENGTH, to determine for each grid cell, the overland flow path length to a NoData stream cell or coastline. Flow length grids are useful for a variety of applications including use in determining riparian buffer areas.

The standard NHDPlus FDR grid is used in conjunction with the NHDPlus CatSeed grid to determine the catchments for the NHD flowlines and NHDPlus sinks. Catchments generated for flowlines or sinks can be determined by the catchment attribute, FeatureID and SourceFC fields. In general, positive values in

FeatureID are catchments delineated for NHDFlowlines. Negative FeatureID values are sink related catchments. The table, Featureidgridcode can also be used to look up coded gridcode values to their source feature ids and feature class source.

The catchments data are available in GRID format (CAT) and as a vector polygon feature-class shapefile (Catchment). It is important to note that catchment features in a shapefile may be composed of one or more vector polygon features. Multiple polygon features occur as a result of the source 30 meter grid-cell resolution and the grid-to-vector conversion process. In these situations, one or more cells with directional flow traveling diagonally into an adjacent cell along a catchment boundary may create a separate polygon in the vector data model when these data are converted from a GRID (see Figure A-6). These multiple polygons are “dissolved”, however, into single multi-part polygons, so there is only one polygon record in the catchment shapefile for each catchment.

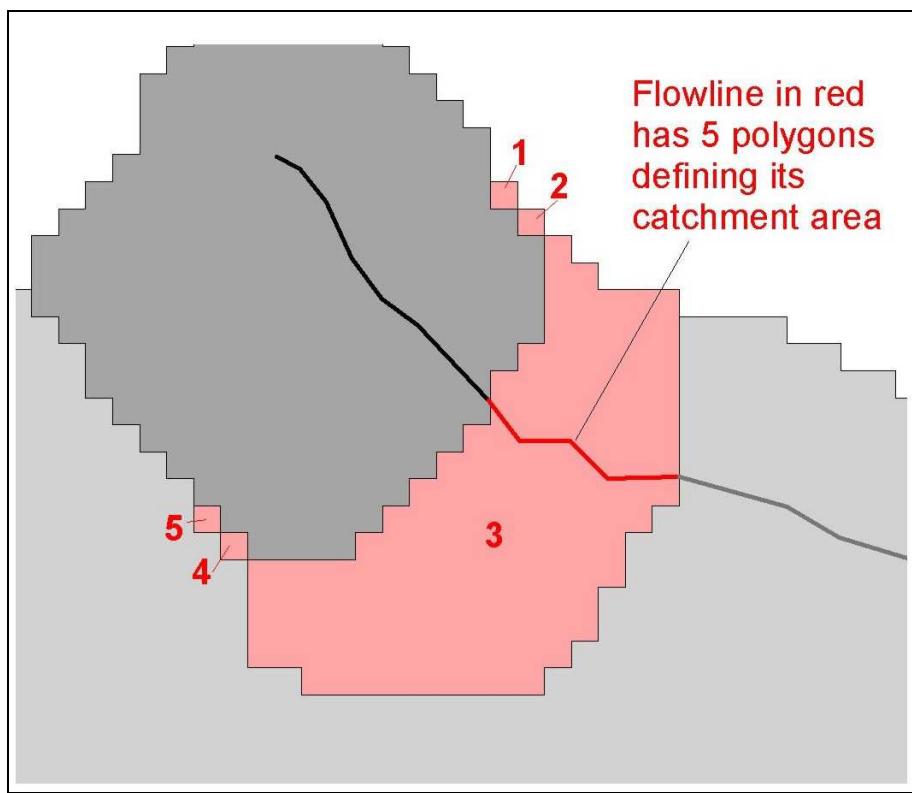


Figure A-6: Illustration of multiple polygon features defining an NHDFlowline feature catchment area.
The final catchment is represented by a single multi-part polygon.

Step 18 also determines what the minimum elevations are for each flowline catchment and writes these to the NHDPlus ElevSlope table found in the NHDPlusAttributes folder. These minimum elevations are recorded as the flowline's minimum raw elevation in field MinElevRaw.

Step 18.5 – Build National Catchment Grid – For each VPU in Drainage Area

This automated step merges the VPU catchments to a grid of catchments for the nation. This national catchment grid is used in Step 18 to ensure seamless coverage of the catchments as subsequent VPUs are processed.

Step 19 – Build Final GlobalData.BoundaryUnit for VPUs and RPUs

During step 19, the newly created catchments from step 18 are dissolved into new boundaries for VPUs and RPUs. The new boundaries are stored in the NHDPlusGlobalData\BoundaryUnit feature class replacing the preliminary boundaries built in steps 6 and 12.

Step 20 – Build HW Node Area and Raw Elevations – For each VPU in Drainage Area

The purpose of this step is to determine raw elevations for the headwater nodes and to determine the area of a headwater catchment that drains to the headwater node of the flowline. This is accomplished by delineating the portion of the total catchment area that drains to the headwater node. The minimum elevation within the headwater node catchment is obtained, from the NED snapshot grid, elev_cm. The minimum elevation within this headwater node catchment becomes the maximum raw elevation for the headwater flowline in field MaxElevRaw of ElevSlope table. The headwater node areas are recorded in the NHDPlus attribute table, HeadWaterNodeArea in the field HwNodesqkm. Also, the minimum elevations for catchments are calculated and this value is stored in the “Minelevraw” field in elevslope, to be used in Step 22.

Step 21 – Edit Catchments to Add International Areas (External)

Detailed data sets for most areas along the international borders have been included in the data used for developing the NHDPlus Version 2 HydroDEM, however in some areas catchments needed further extension so they would encompass the entire drainage area that drains to an NHD flowline. The largest examples of extended catchments are in Region 17 (the Pacific Northwest). In these cases, Canadian elevation data and hydrography data were acquired for 8-digit hydrologic units that straddle the border. Catchment delineations in these areas were based on the HydroDEM that was constructed using these data. Areas that drain into the border hydrologic units were represented by extending the catchments using either the “container” polygons from the Canadian NHN dataset (see <http://www.geobase.ca/geobase/en/data/nhn/description.html>), or the Atlas of Canada 1:1,000,000-scale Fundamental Drainage Areas (FDA) dataset (Natural Resources Canada, 2008).

Because the 1-arc-second NED data now includes all of Mexico, the catchments for NHD flowlines having drainage area in Mexico were developed entirely using the HydroDEM. None of the catchment areas in Mexico were extended.

An additional process was done to ensure that areas that drain out of the U.S. to streams in Canada or Mexico are all covered by the flow direction and flow accumulation grids.

Step 22 – Smooth Elevations

The raw flowline elevations developed in Step 20 provide upstream elevations at most headwater flowlines and downstream elevations for most flowlines. The situations where upstream and/or downstream elevations are not available are described below under Special Considerations. These raw elevation values may result in negative slopes where elevations decrease as the flowlines are traversed from downstream to upstream. To develop non-negative slope estimates for all flowlines and consistent elevations at nodes, several steps are performed in elevation smoothing. The post-processing and elevation smoothing take full advantage of advanced NHDPlus network traversal capabilities. The elevations go through the following processes:

First, the minimum elevations for flowlines that join at a downstream node are independently developed and may not be equal. The elevations at each node are made equal by taking the maximum elevation of the one (or more) flowlines that are immediately upstream of the node.

Second, the node elevations are also assigned as the maximum elevation for each flowline that is immediately downstream of the node.

The results of these two processes are consistent node elevations for flowlines that have catchments. When all of the flowlines immediately upstream of a node are too short to generate catchments, the node will have an elevation equal to the downstream smoothed elevation.

Third, raw elevations are smoothed so that most flowlines will have non-negative slopes. With raw elevations, flowlines can have a minimum elevation greater than the maximum elevation which results in a negative flowline slope; essentially, the water flows “uphill.” This problem is not uncommon when using digital elevation models for estimating flowline slopes. The solution used in NHDPlus is to smooth the elevations along a flow path so that the negative slopes are removed. This process involves interpolating between elevations upstream and downstream of flowlines that have negative slopes. The result of the smoothing is that all of the flowlines will have a positive (“downhill”) or zero slope. NHDPlus slopes are constrained to be greater than or equal to 0.00001 m/m even when the elevation smoothing process produces equal upstream and downstream elevations on a flowline. Another important reason to perform the smoothing is to ensure that all networked flowlines have elevations and slopes. For nodes with missing elevations, as described above, the smoothing process fills in these elevations and slopes based on the elevation values of the flowlines upstream and downstream. There are some cases where the smoothed elevations produce a zero slope, but the slope is set to missing (-9998), which is described below under Special Considerations.

Fourth, because “Raw” elevations are based on the values determined in the catchment building process, many flowlines are “trimmed”, which means that these elevations are computed based on the trimmed flowline. Therefore, the elevation smoothing length used for calculating slope (SLOPELENKM) uses the flowline lengths from the BurnLineEvent table.

The results of the elevation processing are stored in the ElevSlope Table in the NHDPlusAttributes folder.

One of the many powerful features of NHDPlus is the ability to extract all of the flowlines for a stream path and sort them in an upstream or downstream order. This capability permits smoothing to be done on a stream level path basis (e.g., the Ohio River mainstem). The elevation smoothing is done sequentially, going from the mainstem to tributaries.

Smoothing Techniques

Three basic approaches to elevation smoothing have been evaluated. The first approach, referred to as “downstream smoothing,” interpolates progressively downstream. This approach generates a smoothed elevation set that forms the lower envelope of the elevation profile. An example of this approach is shown in Figure A-7. The second approach, “upstream smoothing,” interpolates in the upstream direction and forms the upper envelope of the elevation profile. An example is shown in Figure A-8. A third approach, a hybrid downstream-upstream approach, was also evaluated. The hybrid approach mainly uses the downstream elevation smoothing technique and then uses the upstream smoothing technique until a slope greater than zero is produced (Figure A-9).

Smoothed Elevations and Slopes for NHDPlus

Of the three smoothing techniques evaluated as part of the development of NHDPlus, the upstream smoothing technique was selected. The downstream smoothing proved unsatisfactory because of ramifications of the method used for assigning downstream elevations of flowlines. The downstream elevations are determined using the lowest elevation in the catchment. While this method works in most cases, sometimes the minimum elevation is in a low-lying area, such as a rock quarry or mine, that is at a much lower elevation than the true downstream elevation of the flowline. The downstream and hybrid smoothing techniques will then set all flowline elevations downstream of an artificially low elevation equal to this artificially low value, until a flowline elevation is encountered that is higher than this low elevation. The effect of this process results in many flowlines having artificially low elevations and zero slopes. The upstream smoothing technique avoids this problem.

In NHDPlusV2, the ElevSlope table contains the “Raw” (Step 20) and smoothed elevations (Step 22), using the upstream smoothing approach, with slopes constrained to be greater than or equal to 0.00001 (except situations described below). A relatively small number of flowline connections exist where elevations of all flowlines at a node are not consistent. These elevation inconsistencies occur only where some level paths meet, particularly in areas with complex divergences. As a result of elevation smoothing, most (>99%) flowlines in the network receives a slope greater than, or equal to, 0.00001.

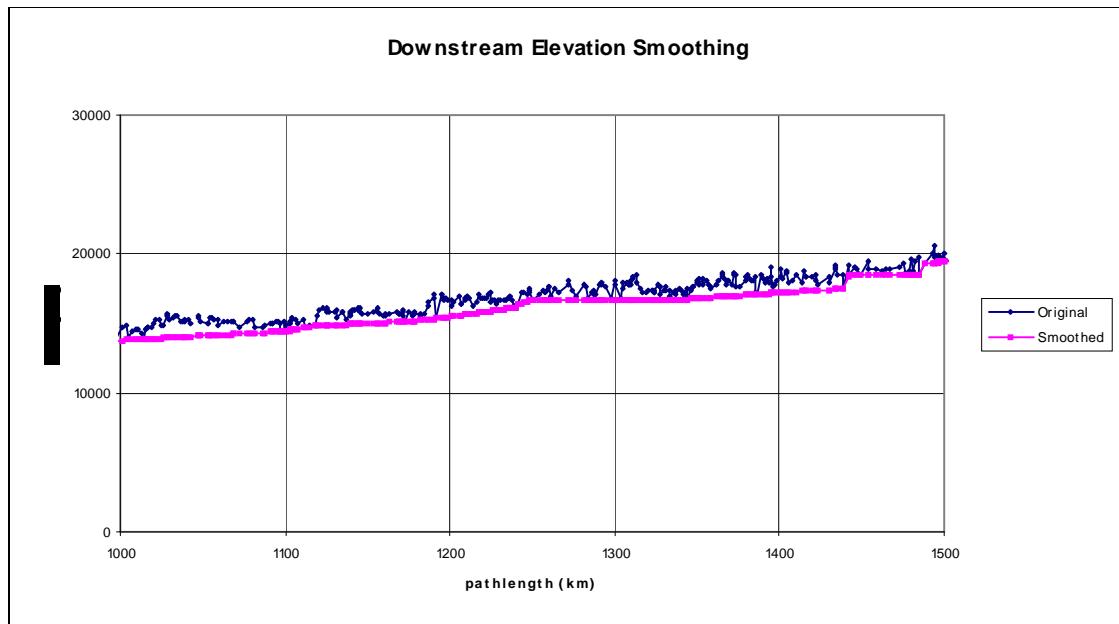


Figure A-7: Downstream Elevation Smoothing

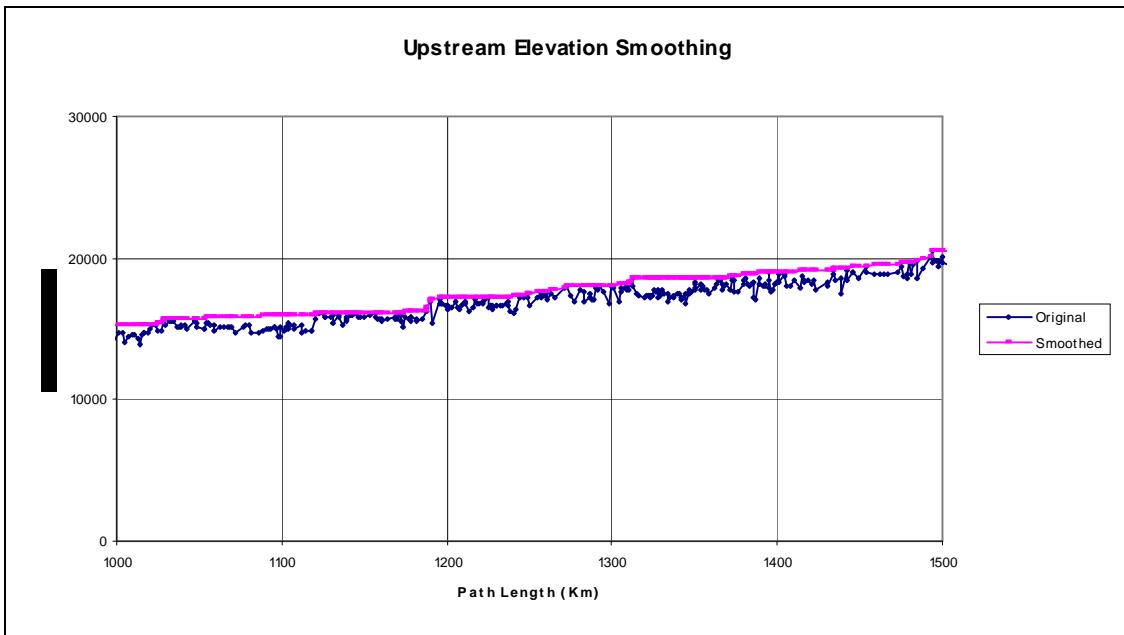


Figure A-8: Upstream Elevation Smoothing

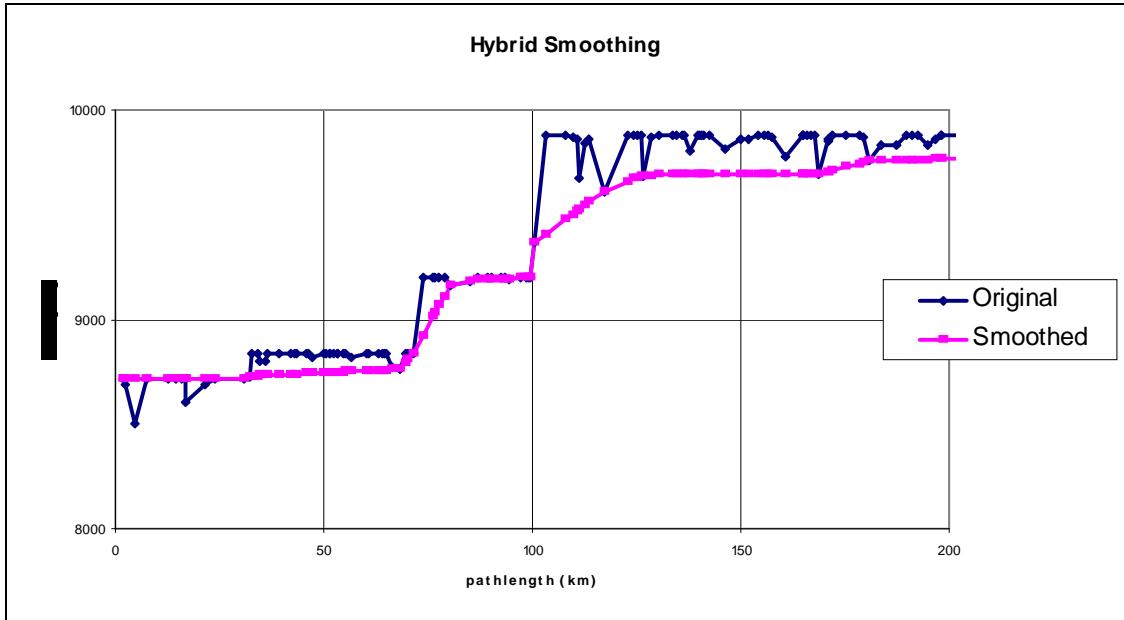


Figure A-9: Hybrid Elevation Smoothing

Special Considerations

1. Missing Slopes

Sometimes headwater flowlines or minor path flowlines are trimmed back to the point where a catchment cannot be built. In these cases, both upstream and downstream “raw” elevations are missing (-9998). In these cases, as well as some other situations where catchment or burn is set to “N”, the actual slope cannot be determined, but should not be considered to be zero, so the slope

is set equal to missing (-9998). In addition, in some of these cases where the downstream junction is a simple junction, the downstream flowline also has a slope set to missing; this is because there is no way to determine an upstream elevation, but there is no reason to expect it to be zero. The elevation smoothing process does assign elevations in these situations, but the upstream and downstream elevations are equal. In cases where the slope is missing the Velocity Extension module uses the Jobson “Unknown-Slope” method.

2. Non-Spatial Connections

Non-spatial connections occur at places where the NHDPlus editors have determined that a flowline, or a network of flowlines, are connected to another networked flowline, but no digitized flowline is provided for this connection. This situation also exists at international borders, where a network enters CN or MX and then the stream network re-enters the U.S. at another flowline. The connection exists logically in the Flow table and the NHDPlusVAA table, but there is a “Gapdist” > 0 computed. In these situations, the elevation smoothing process does not continue upstream to the non-spatially connected flowline/network. It treats the upstream flowline(s) of the non-spatially connected flowline/network as an “isolated” network.

3. Cross-VPU Connections

In the Mississippi and Colorado River Basins, there are multiple VPUs. The upstream connectors for VPUs downstream of another VPU are not start reaches, so they do not have upstream elevations assigned based on the upstream flowline elevations. In these situations, the final runs of these VPUs will run them first in an upstream-to-downstream sequence, determining the elevation that should be used for the most upstream flowline(s) in the downstream VPU. These elevations are stored in the BoundaryValue table, for later use when the elevation smoothing is run in a downstream-to-upstream VPU sequence. These elevations stored in the BoundaryValue table are used as the “raw” upstream elevations. The elevation smoothing process may change these elevations, and the smoothed elevations at these upstream connections are stored in the BoundaryValue table, to be used in the elevation smoothing when the upstream VPU is run.

Step 23 – Accumulate Catchment Area

Step 23 uses functions from the NHDPlusV2 Catchment Allocation and Accumulation Tool (CA3TV2) to accumulate the catchment areas downstream to establish the cumulative upstream catchment area for each NHDFlowline feature where NHDFlowline.FlowDir = “With Digitized” and NHDFlowline.FType <> “Coastline”. Cumulative catchment areas are stored in the \NHDPlusAttributes\CumulativeArea table.

Step 24 – Package NHDPlusV2 for Distribution

Step 24 is primarily a manual process of re-arranging the outputs of the NHDPlusV2 Build/Refresh Tools processing into the publicly available copy of NHDPlusV2 described in this User Guide.

Build NHDPlusV2 NationalWBDSnapshot

As described above, the NHDPlusV2 process incorporated a number of snapshots from the national WBD. As each VPU was processed, the latest version of the national WBD was acquired and used to extract the WBDSnapshot for the VPU. After NHDPlusV2 build/refresh production was completed, the WBDSnapshots for all the VPUs were assembled into a single national WBDSnapshot. The following steps were performed to build the national WBDSnapshot:

- Attribute each VPU's WBDSnapshot SubWatershed shapefile with the WBD snapshot date (WBD_Date) and VPU Identifier (VPUID).
- Append all attributed snapshots together and load into an fgdb.
- Create and Validate a topology with rules "Must not overlap" and "Must not have gaps", using a tolerance of 0.00000556 decimal degrees (approximately 0.6 meter).
- Use the topology error inspector to zoom to and fix overlaps by keeping the polygon from the earlier WBD snapshot.
- Use topology error inspector to examine gaps. Flag as exceptions all gaps resulting from islands that are single or multipart islands in WBD.
- Use topology error inspector to fix remaining gaps by converting to features, and merging with an adjacent polygon.

Catchment Attribute Allocation and Accumulation Extensions (CA³TV2)

The purpose of CA³TV2 is the integration of landscape attributes with the NHDPlus Catchments. CA³TV2 has two main functions: Allocation and Accumulation. The Allocation function takes a user-supplied raster dataset, either continuous numeric or categorical, of landscape attributes and allocates the attribute(s) to the NHDPlusV2 Catchments. The Accumulation function builds, for each NHDPlusV2 stream network feature, the upstream accumulated values from the allocated attributes. During the NHDPlusV2 Build/Refresh Tools process, CA3TV2 is used to allocation and accumulate the attributes that are contained in the \VPUAttributeExtension folder. These attributes are then used in the EROM Extension and VogelFlow Extension to estimate stream flow.

Enhanced Unit Runoff Method (EROM) Flow Estimation and QAQC Extension

The Enhanced Unit Runoff Method (EROM) for estimating streamflows in NHDPlusV2 has extended beyond the original Unit Runoff Method (UROM) used in NHDPlusV1. UROM estimated a unit runoff (cfs/km^2) for each catchment and conservatively routed and accumulated these incremental flows down the stream network. EROM contains enhancements which result in a 6 step flow estimation procedure as follows:

1. The unit runoff step uses a grid produced from a flow balance model (Wolock, et al.) that is at a finer resolution than the NHDPlusV1 HUC8 runoff values.
2. A “losing streams” methodology is incorporated that takes losses in stream flow that can occur due to excessive evapotranspiration in the stream channels.
3. A log-log regression step using “Reference” gages that provides a further adjustment to the flow estimates. Reference gages (Falcone, et. al.) are those gages determined to be largely unaffected by human activities. This regression, based on QA analysis of the flow estimates from the first two flow estimation steps, improves the mean annual flow estimates.
4. A new table in NHDPlusV2, PlusFlowAR, provides a means to take flow transfers, withdrawals, and augmentation into account.
5. A gage adjustment component is incorporated that adjusts flows upstream of a gage based on the observed flow at the gage. Only gages that meet certain criteria are used to perform gage adjustment. The gage-adjusted flow estimates should be considered the “best” NHDPlusV2 flow estimates for use in models and analyses.
6. Because the gage adjustment is performed on all gages there is no way to perform a QA on how good the gage adjusted flows are on ungaged NHDFlowline features. In the sixth step, a proportion (typically 20%) of the gages are randomly removed from the gage adjustment process, which then provides a basis for an estimate of the accuracy of the flow estimates created in Step 5.

In addition to the 6 steps in flow estimation, other enhancements have been incorporated into the NHDPlusV2 EROM flow procedures:

- The flows for all six of the above steps are retained in the EROM output file. A separate module calculates the velocity estimates for the flows produced by the first five steps. The EROM output file contains several additional output values that are used for QA and can be used for various user analyses.
- EROM interface enables adjustments to various parameters that control EROM computations.
- The EROM flow estimates are examined by a QA module which calculates and reports statistical QA measures.

Note: EROM is designed to compute mean flows for various time periods such as mean annual and mean monthly for each month in the year. At the present time, NHDPlusV2 contains mean annual flow estimates. Ultimately, the mean monthly flow estimates will be computed. The sections that follow describe the mean annual flow computations, however, these same procedures can be used to compute mean monthly flow estimates.

Step 1 Unit Runoff Calculations

Step 1 uses the mean annual (MA) runoff grids as the baseline unit runoff values (Wolock and McCabe, 1999). The runoff grids were produced as part of the U.S. Global Change Research Program (USGCRP), where a water balance approach was used to estimate runoff. The water balance approach takes precipitation, potential evapotranspiration (PET), evapotranspiration (ET), and soil moisture storage into account. In this process, ET losses are, properly, not allowed to exceed precipitation. These grids are overlaid onto the NHDPlusV2 catchments to compute runoff within each catchment. The catchment runoff values are conservatively routed downstream to arrive at the first estimate of streamflows for each networked NHDFlowline feature. Figure A-10 shows the mean annual runoff grid. Note that, for use in NHDPlusV2, the mean annual runoff grid was expanded to include areas of Canada and Mexico.

Incremental runoff flows for each NHDFlowline feature are labeled “QIncr0001A”. The QIncr0001A flows are routed and accumulated to produce the Step 1 flow estimates which are labeled Q0001A.

Step 1: Mean Annual Runoff Grid

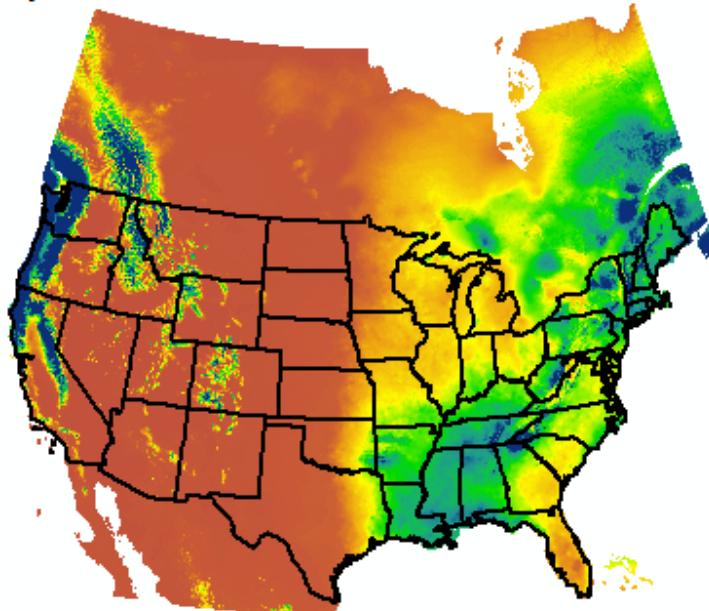


Figure A-10: Mean Annual Runoff

Step 2 Computations:

Step 2 implements a method that takes “excess ET” into account. This method, developed by Dave Wollock of USGS (personal communication), considers the total available water in a given catchment to compute additional losses due to ET. The ET losses can exceed the total water available in a catchment, resulting in a net loss in streamflow.

As streamflow is routed through the NHDFlowline network, some portion of the flow can be “lost” in a downstream catchment through evapotranspiration (ET). The quantity of lost streamflow is assumed to be a function, in part, of excess potential ET (PET) in the hydrologic unit, which is defined as the PET that is in excess of actual ET (AET) computed by the water-balance model. The model assumes that the excess PET within the river corridor itself places a demand on water entering the catchment from upstream flow

and that the river corridor is 30% of the total catchment area. Furthermore, it is assumed that the amount of upstream flow that can be lost to satisfy excess PET is limited to 50% of the total upstream flow. These percentages were determined by subjective calibration of the model to measured streamflow in arid regions that clearly lose water in the downstream direction. Runoff consumption in a catchment occurs when locally generated streamflow, computed from the water-balance model, is less than streamflow loss due to excess potential evapotranspiration.

There are situations where this step is not run, and the Step 2 flows are set equal to the Step 1 flows. For mean annual flows there is an option to not run this step; this option is selected if the QA statistics for a VPU show that step 2 greatly increases the error terms. EROM is then re-run with the option to not run Step 2. The VPUs where Step 2 is not run for mean annual flows is contained in the Release Notes.

Input Data:

- PPT – The mean annual precipitation in the catchment from PRISM.
- Temp: The mean monthly temperature of the catchment using Prism; it is the (average max T + Average Min T) / 2.
- XLAT: The average latitude of the catchment for the NHDFlowline feature.
- QAUS: The sum of flows that enter the catchment based on the Step 1 values.
- Qincr0001A: The incremental flow in the catchment from Step 1.
- Julian Day: For each month, the Julian Day for the middle of the month.
- Fract1, Fract2 are inputs; default values are 0.3 and 0.5, respectively.

Step 2 calculations are performed as follows:

Note: The method described below is the Hamon Method (Hamon, 1961).

1. Sum the monthly PET values to arrive at total PET.
2. AET (actual ET) = Max(PPT – PET, 0)
3. ExtraPET = MAX(PET – AET, 0)
4. Q0001B = QAUS + Qincr0001A – Min(QAUS*Frac2, ExtraPET*Frac1)
5. Qincr0001B = Q0002B – QAUS. Qincr0001B is the incremental Step 2 inflow for the catchment/NHDFlowline feature.

Note: For headwater NHDFlowline features, the calculations will not change the Step 1 flow estimates because QAUS = 0

Steps 1 and 2 are designed to estimate “natural flow”. Step 1 uses the flow balance runoff grids, which reflects “natural runoff” at a much finer resolution than the NHDPlusV1 runoff, which is based on a HUC8 resolution. Step 2, “Excess ET”, is designed to take instream losses into account due to natural hydrologic processes. This loss of instream flow is a significant, observed phenomenon, especially in areas west of the Mississippi River. Step 2 was introduced to overcome a major problem in the NHDPlusV1 flow estimates, which tended to over-estimate flows in dry, hot areas because the flow estimation process in NHDPlusV1 had no loss component. Together, Q0001B flow estimates, produced by Step 2, are designed to provide the “best estimates” of natural flow.

Step 3 Reference Gage Regression Flow Adjustment

In the course of performing detailed QA/QC of flow estimates in HydroRegion 04, it was discovered that steps 1 and 2 tended to fairly consistently under-estimate flows. Based on the knowledge and experience of the USGS hydrologists on and consulting with the NHDPlus team (Al Rea, Dave Wolock, and Kernal

Ries), it was hypothesized that steps 1 and 2 may “miss” a key part of the natural stream flow, which could be an underlying, fairly consistent negative bias in base flow. Additional analyses using gages that are primarily “natural flow” (known as the “Falcone Reference Gages”) reinforced this point.

Through evaluations of the flow at the Falcone gages versus EROM Step 2 flow estimates, a log-log regression adjustment of the EROM flow estimates after the first two steps helped to correct for this observed bias in the EROM flows in HydroRegion 04. Based on this analysis, Step 3 uses the results of the regression to adjust the EROM Step 2 flows.

The phenomenon found in HydroRegion 04 is not expected to occur in all HydroRegions. However, there is every reason to expect that different situations may occur. For instance, there may be a consistent loss of base flow to groundwater, which might then lead to an over-estimation of stream flow in EROM.

The regression step has been found to improve EROM flow estimates in several VPUs, while in some VPUs it has a marginal effect; refer to the EROMQA_0001.pdf files for each VPU to see what impacts the regression step has in improving EROM flow estimates.

Based on the EROM QA, if there are no particular “issues” in a VPU that result in a consistent under or over-estimation of stream flows, then the regression equation has a minor effect on the stream flow estimates. The QA statistics and the regression coefficients (described in the section on “EROM Flow Estimation QA”) provide the information needed to determine whether or not, and by how much, the regression process changes stream flows.

The Reference Gage Regression applies a regression-based adjustment to the Q0001B flow which is then referred to as Q0001C. The regression is determined as follows:

1. The reference gages are screened based on two criteria. First, the NHDPlusV2 drainage area for the gage must be within a certain plus or minus percentage of the NWIS-reported drainage area. Second, the gage must have a required minimum number of years/months of complete record. The criteria used for each VPU is shown in the EROM QA report.
2. The screened reference gages are used to develop a log-log regression comparing the gage flow to the Q0001B flow. The regression is of the form:

$$Q0001C = a * Q0001B^b * BCF, \text{ where} \quad (1)$$

a and b = regression coefficients and

BCF = Bias Correction Factor

Equation (1) is then applied to all networked NHDFlowline features.

3. Regression variables and calculations:

N = number of Reference gages being used

i = the gage being used, from 1 to N, Note: summations are for all N

$Y_i = \log_{10}(Q_F_i + 0.1)$, where Q_F_i = Falcone Reference gage Q adjusted to the bottom of the stream segment

$X_i = \log_{10}(Q0001B_i + 0.1)$, where $Q0001B_i$ is the Q0001B flow for the NHDFlowline feature containing the gage

$$X_{\bar{}} = \sum X_i / N$$

$$Y_{\bar{}} = \sum Y_i / N$$

$$x_i = X_i - X_{\bar{}}$$

$$y_i = Y_i - Y_{\bar{}}$$

$$b = (\sum x_i * y_i) / \sum x_i^2$$

$$a = (Y_{\bar{}} - b * X_{\bar{}})$$

$$r^2 = b * \sum(x_i * y_i) / \sum(y_i^2)$$

For the BCF using a “smearing” approach (Duan, 1983):

$$e_i = Y_i - 10^a * X_i^b$$

$$BCF = \sum(10^{ei} / N)$$

Figure A-11 shows a simple junction with network features numbered 1, 2, and 3. This will be used to illustrate how the reference gage regressions and incremental flows are computed.

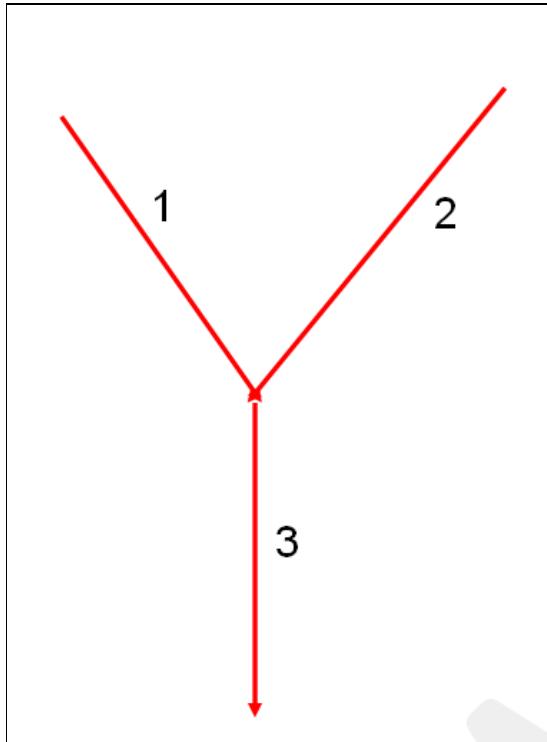


Figure A-11: A Simple Junction for Flow Routing

Step 4 flow calculations are made as follows:

The calculations are performed for NHDFlowline features 1 and 2 and all networked features above 1 and 2. Also, ALL flows are ≥ 0 ; no negative flows are allowed. Incremental flows may be negative.

$Q0001B_n$ = Flow on NHDFlowline feature n from the EET step

$Q0001C_n$ = Flow on NHDFlowline feature n with the reference gage equation applied

$Qincr0001C_3$ = Incremental flow on NHDFlowline feature 3 in the reference gage step

$Divfract_3$ = If NHDFlowline feature number 3 was part of a divergence, this would be the fraction of the upstream flow to route to feature number 3.

a, b, BCF = reference gage regression coefficients

$$Q0001C_1 = 10^a * Q0001B_1^b * BCF$$

$$Q0001C_2 = 10^a * Q0001B_2^b * BCF$$

$$Q0001C_3 = 10^a * Q0001B_3^b * BCF$$

$$Qincr0001C_3 = Q0001C_3 - (Divfract_3 * (Q0001C_1 + Q0001C_2))$$

Note 1: Flow balance is preserved because accumulated flows are a sum of incremental flows.

Note 2: The reference gage regression is, in effect, applied to incremental flows in cases where the network feature is a headwater or a minor path of a divergence without flow split values (Divfract=0 for the minor path).

Step 4 PlusFlowAR Flow Adjustments

Step 4, PlusFlowAR adjustments, is an opportunity to incorporate flow withdrawals, augmentations, and inter-basin transfers, into the flow estimates. A data table has been added to NHDPlusV2, named “PlusFlowAR”, that provides a place for flow additions, removals, and transfers of flow to be taken into account. This table can hold, for instance, upstream boundary conditions from Lake Erie to the Niagara River, flow transfers from the Colorado River to other basins or locales (e.g., Phoenix or California), flows withdrawn for irrigation, and irrigation return flows. As EROM routes down the NHDFLowline network, flows are added and removed based on the addition and removal points and quantities in PlusFlowAR. The Qincr0001C values are modified and saved as Qincr0001D.

Over time, it is hoped that the PlusFlowAR table will be used to store many flow removals, additions and transfers, including irrigation and drinking water withdrawals, karst areas flows, and losses/gains from groundwater.

There can be situations where the total available flow is less than the flow that is to be transferred from a given NHDFlowline feature. In this case, all Q0001D flow will be transferred/withdrawn, resulting in a zero flow at that NHDFlowline feature. In these cases, there is a field in the EROM output that tracks the amount of flow in the PlusFlowAR table that is not available for transfer/withdrawal.

The cumulative and incremental flows after the PlusFlowAR adjustments are referred to as Q0001D and Qincr0001D, respectively. Using the example in Figure A-11, Q0001D and Qincr0001D are computed as follows:

$$Q0001D_n = Q0001C_n +/ - \text{PlusFlowAR} \quad \text{where } n \text{ is the NHDFlowline feature number 1, 2, or 3}$$
$$Qincr0001D_3 = Q0001D_3 - (\text{Divfract} * (Q0001D_1 + Q0001D_2))$$

Step 5 Gage-based Flow Adjustments

Step 5 performs a gage-based flow adjustment on NHDPlusV2 network features above the gages. Step 5 is a way to (1) provide much better flow estimates upstream of gages, and (2) “adjust” flow estimates downstream of gages to better reflect flow alterations not taken into account in the first four steps. Step 5 adjusts streamflow estimates based on observed gaging station data. Only gaging stations linked to the NHDPlus network are used to adjust flows. The adjustment process includes the following steps:

1. Only gages where the NHDPlusV2 drainage area for the gage is within +/- 20% of the NWIS gage drainage area are used for gage adjustment. The drainage area comparison removes gages that are incorrectly on the minor path of a divergence or mis-located on a tributary rather than on a mainstem. An example of these outliers is shown in Figure A-12. The circled gage points are gages that would be removed in this process.

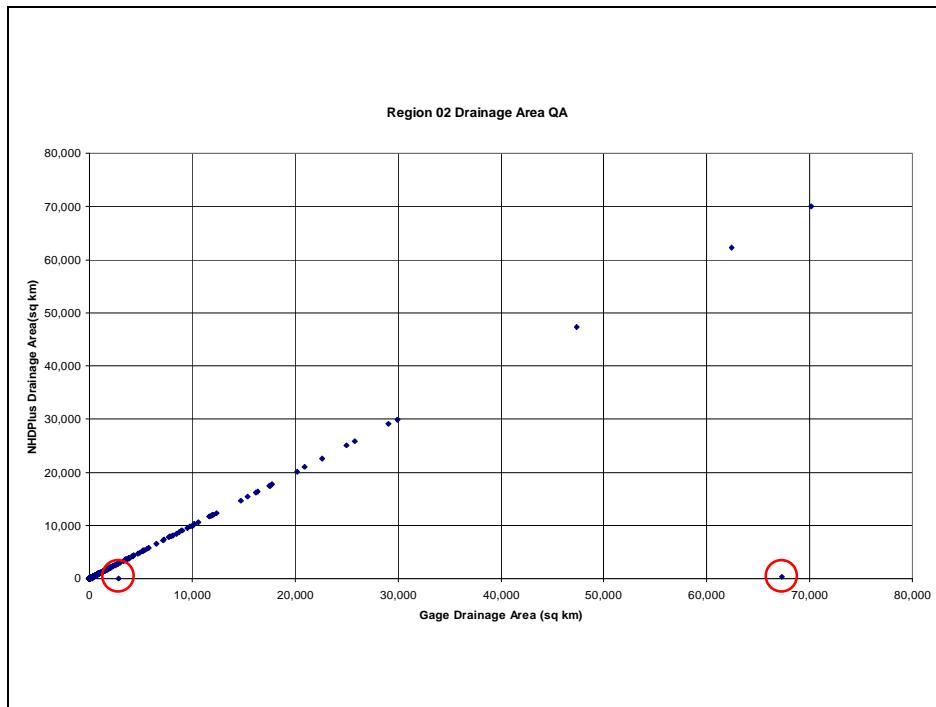


Figure A-12: Gage Mismatch Removal

2. The gage flows and drainage areas are adjusted to reflect values at the downstream end of the NHDFlowline feature. Drainage area is adjusted by adding the catchment area below the gage to the gage drainage area. The gage flow is adjusted by taking the catchment unit runoff from Step 1 (cfs/km^2), and adding that incremental flow based on the catchment area below the gage.
3. Incremental flows are adjusted as follows:
 - a. For Upstream gages (no other gages upstream).
 - i. Apportion the adjustments in the incremental streamflows (Q000D) so that the NHDFlowline features that are closer to the gage receive more of the adjustments than NHDFlowline features farther away from gage. The adjustment is apportioned based on the ratio of an NHDFlowline feature's drainage area to gage drainage area.
 - ii. Streamflow adjustment is made only where the NHDFlowline feature's cumulative drainage area is greater than or equal to 0.5 of the NHDPlus gage drainage area.
 - iii. A "flow balance" will usually be maintained such that the incremental flows from Step 5 can be summed to get the Step 5 streamflows.
 - b. For a gage that lies below another gage on the same mainstem. Mainstems are defined as the Level Paths in NHDPlusV2 (See PlusFlowlineVAA.LevelPathID).
 - i. The adjustments are apportioned to incremental flow such that the NHDFlowline features that are closer to the gage receive more of the adjustments than NHDFlowline features farther away from gage.
 - ii. The flows will be adjusted for all NHDFlowline features between the two gages regardless of the gage drainage ratios.

4. The flows on NHDFlowline features are not adjusted per se for gages that are upstream, however the gage-adjusted flows upstream of gages are routed downstream so that the gage adjustment effects will impact NHDFlowline features downstream of gages. This helps to improve flow estimates on all NHDFlowline features downstream of gages.

The gage flow adjustments are computed as follows:

1. There is no gage upstream:
 - a. The change in flow necessary for the Step 4 flow and the gage flow to match is $\Delta Q = Q_{\text{gage}} - Q_{0001D}$.
 - b. The NHDFlowline features to which ΔQ must be apportioned is found by navigating upstream from the gage, “flagging” all NHDFlowline features with a cumulative drainage area ≥ 0.5 times the gage drainage area. Each NHDFlowline feature’s cumulative drainage area is referred to as “CumDA”.
 - c. Sum of the cumulative drainage areas for the NHDFlowline features to be adjusted is computed. This will be referred to as “CumCumDA”.
 - d. The incremental flow adjustment for each of the NHDFlowline features from (2) is calculated as: $\Delta \text{incr}Q = \Delta Q / \text{CumCumDA} * \text{CumDA}$. $Q_{\text{incr}0001E} = Q_{\text{incr}0001D} + \Delta \text{incr}Q$
 - e. All of the NHDFlowline features that are adjusted are flagged such that no further flow adjustments can be made to them.
2. The gage is below another gage on the same Level Path:
 - a. The revised flow at the upstream gage(s) is routed and accumulated the upstream gage down to this gage. The accumulation is based on the $Q_{\text{incr}0001D}$ values on the NHDFlowline features between the gages. At this gage the $\Delta Q = Q_{\text{gage}} - Q_{0001D}$ based on the downstream gage values.
 - b. The NHDFlowline features are navigated from this gage to the next upstream gage(s). This routing includes all NHDFlowline features between the two gages as well as any tributary NHDFlowline features that have (1) not already been flagged as being adjusted, for instance, NHDFlowline features adjusted in 1 above; and, (2) tributary NHDFlowline features where the cumulative drainage area is ≥ 0.5 times the downstream gage drainage area.
 - c. It is important to note that the drainage area criterion is not used for NHDFlowline features on the same Level Path between the gages. This is to ensure that there are no “gaps” in the gage flow adjustments between gages on the same mainstem, which is defined by the Level Path.
 - d. The same flow adjustment method as described in 1.d above is performed, where $\Delta \text{incr}Q = \Delta Q / \text{CumCumDA} * \text{CumDA}$. $Q_{\text{incr}0001E} = Q_{\text{incr}0001D} + \Delta \text{incr}Q$. CumCumDA is the DA sum for all NHDFlowline features being adjusted, which includes all NHDFlowline features between the gages on the Level Path and any tributary NHDFlowline features that meet the DA ≥ 0.5 times the downstream gage DA.
 - e. Note that large mainstem rivers will have adjustments on most of its NHDFlowline features, with adjustments probably occurring on larger tributaries.
3. There are no gages downstream on the Level Path. Flows are accumulated to the bottom of the Level Path using the $Q_{\text{incr}0001E}$ values on the mainstem and tributaries.

Figures A-13 through A-18 illustrate how the gage-based flow adjustments are done. The example shows the process for step 1.d above. For ease in understanding the process, a unit flow (e.g., 1 cfs/km²) is assumed so that the drainage areas and flows are equal. Note that in this example, NHDFlowline features

are adjusted on both mainstem NHDFlowline features and on one tributary NHDFlowline feature. In many situations, a “flow balance” can be maintained such that the accumulation of the adjusted incremental flows in this process will be maintained. In cases where the gage flow is greater than the Step 3 flow (Q0001C), a flow balance can always be maintained. In many cases but not all cases, where the gage flow is less than the Q0001C flows, a flow balance can be maintained.

There will be cases where the gage-based flow adjustment could result in a negative flow on one or more NHDFlowline features. Because negative flows are not valid, the NHDFlowline feature flow will be set to zero. In this case, the Step 4 flow on the NHDFlowline feature where the gage is located will be set equal to the gage flow. **In this case a flow balance, in which the sum of the flows upstream plus the incremental flow, will not be able to be maintained above the gage.** Note that attempting to re-adjust changes in incremental inflows to maintain a flow balance can get quite complicated if not impossible; the re-adjustment could in itself lead to additional NHDFlowline features having negative flow, which would create a “loop”.

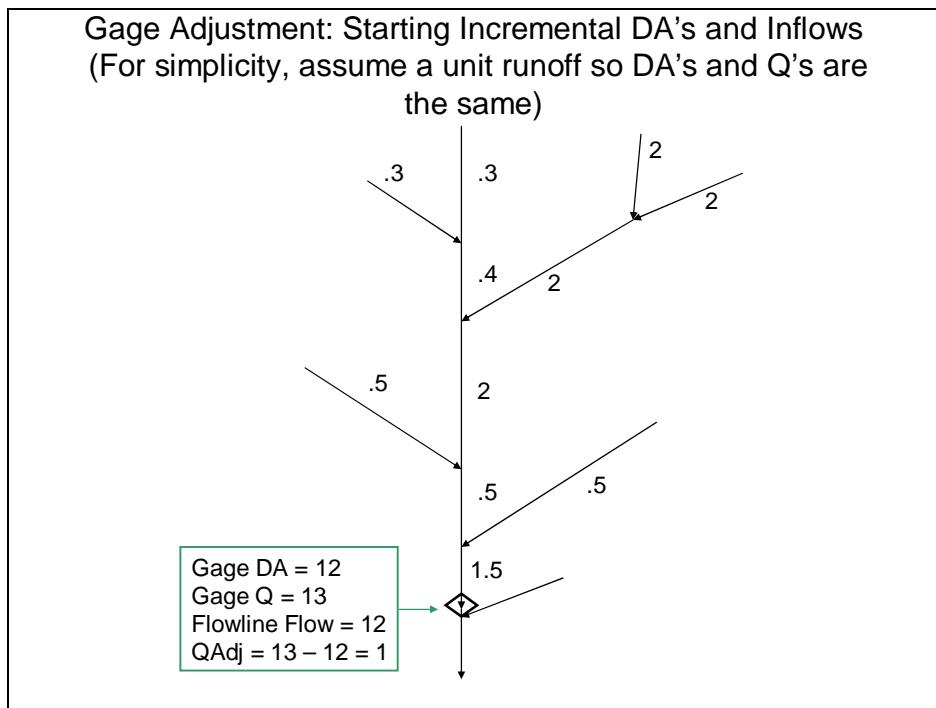


Figure A-11: Incremental Drainage Areas and Flows

Gage Adjustment: Cumulative Drainage Areas and Flows

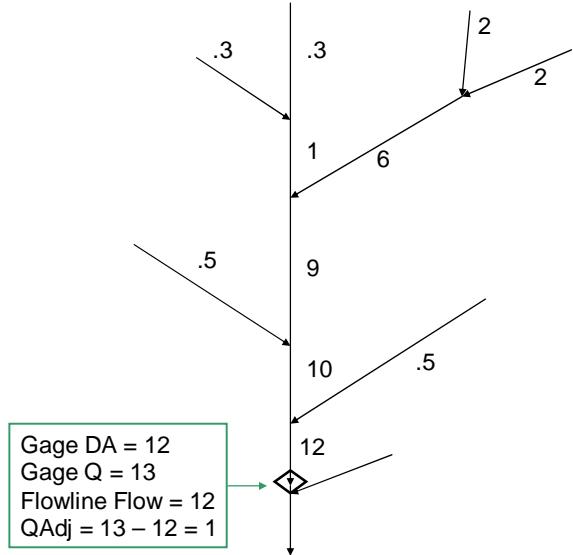


Figure A-12: Cumulative Drainage Areas and Flows

Gage Adjustment: Adjust All Flowlines Upstream With $\text{CumDA} \geq 0.5 * \text{Gage DA}$


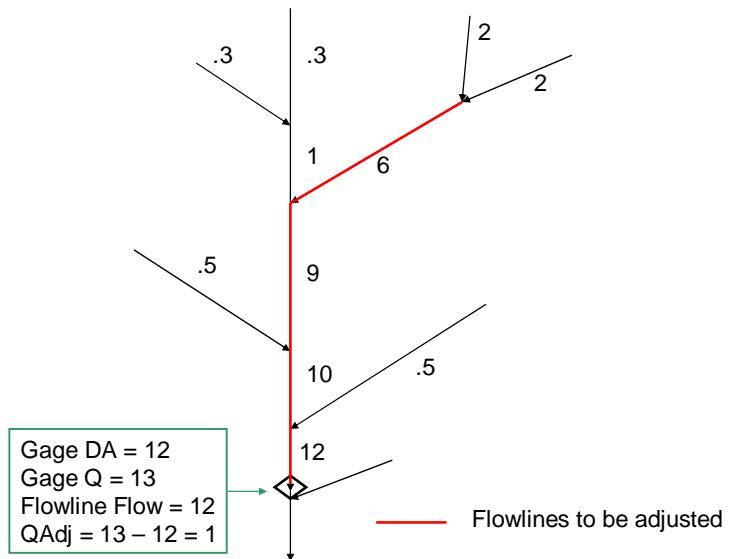


Figure A-13. NHDFlowline features to be adjusted by gage flow

Gage Adjustment: Adjustment Factors for Flowlines

For a Flowline:
 $\text{AdjFactor} = \text{CumDA}/\Sigma\text{CumDA}$
 $\Sigma\text{CumDA} = 12+10+9+6 = 37$
 $\Sigma\text{AdjFactor} = 1$

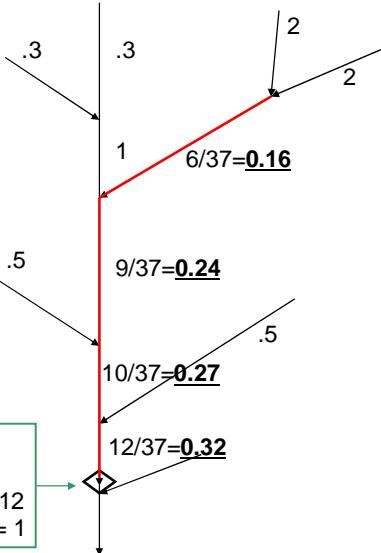

Gage DA = 12
 Gage Q = 13
 Flowline Flow = 12
 QAdj = 13 - 12 = 1

Figure A-14: Compute Adjustment Factors for NHDFlowline features

Gage Adjustment: Compute Adjusted Incremental Flows

Gage DA = 12
 Gage Q = 13
 Flowline Flow = 12
 QAdj = 13 - 12 = 1

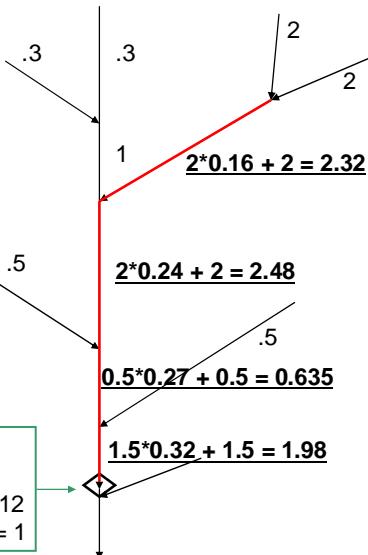


Figure A-15: Compute adjusted incremental flows

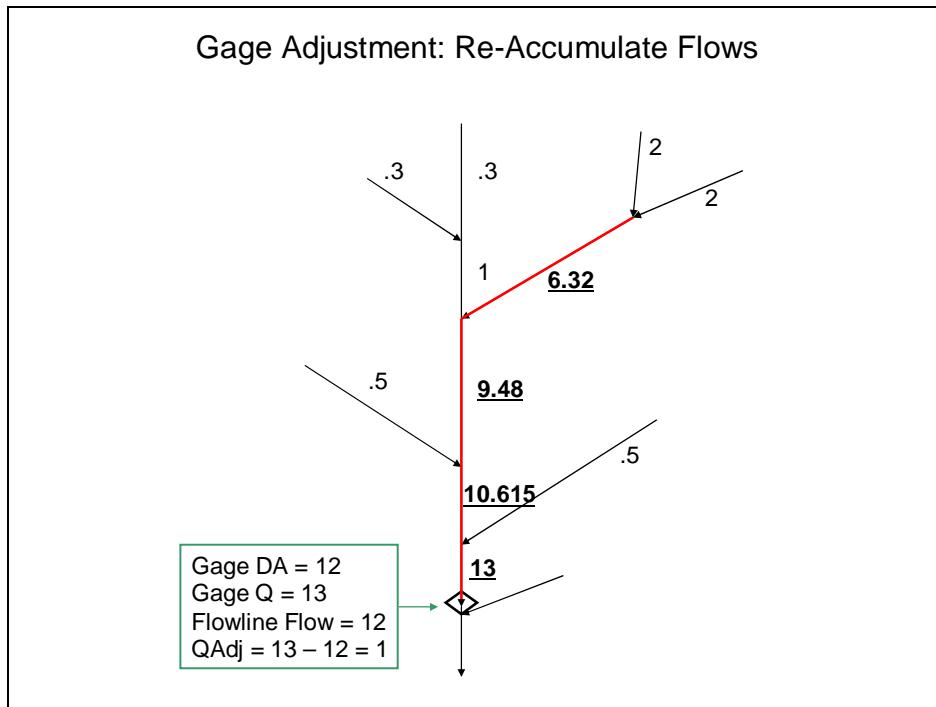


Figure A-16: Re-accumulate Flows

Step 6 Calculations

Because Step 5 uses all gages, the flow estimates at the gage locations will always match the gaged flow values. This means that any statistical analyses on the Step 5 flows compared to gage flows will always be a “perfect” match. Step 6 is designed to provide a measure of how good the gage adjustment flow estimates are on ungaged NHDNHDFlowline feature features. The first step is to sequester (remove) a random set of gages, typically 20%, and repeat the gage adjustment process using the un-sequestered gages (i.e., 80%). The EROM QA process is then used to compute the QA statistics for the sequestered gages (i.e. the 20% not used for gage adjustment).

This gage sequestration step is performed once, so the results are a “snapshot” for potential benefits of the gage adjustment step. The gage sequestration could be performed multiple times, each time sequestering a different random set of gages. Averaging the QA results over these multiple runs would be a refinement of this QA process.

Some Observations:

1. Taken together, Steps 1 and 2 are designed to provide the best consideration of the water balance components that is feasible on a national scale.
2. Step 3, the Reference Gage Regression adjustment, takes into account factors not incorporated in the water balance, such as broad regional-scale groundwater effects.
3. Step 4, the PlusFlowAR adjustment, has great potential to be able to take any water use factors into account, including groundwater, drinking water withdrawals, sewerage discharges, and irrigation into account.
4. Step 5, Gage Adjustment, implicitly takes into account any factors not covered in the first four steps, such as consumptive use and flow augmentations not accounted for the PlusFlowAR tables.

EROM Flow Estimation QAQC

Each run of the QA module produces two outputs: a tabular report and a QA file. The tabular report comes up on the screen and can be sent to a printer connected to the computer or to a .pdf file. The format for the QA files is described below.

Note: EROM is designed to compute estimates for mean annual and the twelve mean monthly flows. The QA report contains lines for all thirteen of these flows and there is one QA file for each of the thirteen flows. However, at this time, in NHDPlusV2, EROM is used to compute only the mean annual flow estimates. Therefore, the QA report contains empty rows for the twelve monthly flows and the mean monthly QA files are not produced.

The EROM tabular report is saved to the EROMExtension folder as EROMQA_0001.pdf. The EROM mean annual QA file is saved to the EROMExtension folder as EROMQA_MA0001.

Summary of the Flow values computed in EROM

Six flow values are computed in EROM, listed as A to F below:

- A. Cumulative runoff based on the runoff grids.
- B. The application of the Excess ET step to the cumulative runoff.
- C. The flow adjustments based on the Reference Gage regression.
- D. The application of PlusFlowAR flow additions and removals.
- E. Gage adjustment, in which the flows at the gages and a distance upstream from the gage are adjusted to match the gage flow. Statistics of the accuracy of this step are not possible because the gage adjustment is performed at every gage; the gage adjustment values will always be a “perfect” match to the gage flows.
- F. The gage adjustment performed with a randomly selected proportion of the gages removed (typically 20%); this process is referred to as gage sequestering. The gage sequestering provides a means to estimate the accuracy of the flows after the gage adjustment step.

See the EROM documentation for more details on the computation of these flow values.

Contents of the QA report

The QA report contains comparisons of the EROM flow estimates and the observed gage flows. Two statistics are used for measuring how well the different flow estimates performed in relation to the gage flows:

1. The Log10 mean flow at the gage as compared to the Log10 of the EROM mean flow estimate.
2. The Standard Error of the Estimate (SEE) in percent; 2/3 of the flow estimates will be within one SEE.

There are four tables included in the EROM QA report:

Table 1 reports statistics for all gages for flows A, B, C, and D described above.

Table 2 reports the statistics for only the sequestered gages for flow value F.

Table 3 reports the statistics for only the Reference gages.

Table 4 presents the statistics used in the Reference Gage regression step (flow value C); these values are the log-log regression coefficients, R^2 , and the Standard Error of the regression. These statistics are computed in the EROM Module and saved to the EROM output table.

The third page of the QA report provides documentation of the content of the report.

The best EROM flow and velocity estimates are the gage adjusted values: Q0001E and V0001E, respectively in the EROM_MA0001 table. Table 2 of the EROM QA report provides an estimate of how good these flow estimates are as compared to gage flows. For “natural” flows and velocities, the best estimates are the Reference Gage Regression values: Q0001C and V0001C, respectively, in the EROM_MA0001 table. The “RefGage Reg” column in Table 3 of the EROM QA Report provides an estimate of how good these flow estimates are as compared to gage flows.

Below is an example of Page 1 of the QA Report:

EROM QA Report For: VPU = 09 Runid = 0001									
ETFRAC1 = 0.3 ETFRAC2 = 0.5									
Gage Sequestration Proportion = 0.2									
See Page 3 for a brief explanation of the values in the tables.									
N = Number of Gages									
Qbar = Log10 Mean Flow (cfs)									
SEE = Standard Error of the Estimate in percent;									
2/3 of the Flow Estimates will have errors that are within one SEE									
Table 1: Statistics For All Gages:									
Period N Gage Runoff Excess ET RefGage Reg PlusFlowAR									
MA	43	2.3601	2.1672	58.784	2.1672	58.784	2.3648	32.586	2.3648
JAN									
FEB									
MAR									
APR									
MAY									
JUN									
JUL									
AUG									
SEP									
OCT									
NOV									
DEC									
Table 2: Statistics For Sequestered Gages:									
Period N Gage Seq. Gages SEE									
MA	9	2.6515	2.6370	23.027					
JAN									
FEB									
MAR									
APR									
MAY									
JUN									
JUL									
AUG									
SEP									
OCT									
NOV									
DEC									
Page 1									

Figure A-19: EROM QA Report, Page 1.

In the example report in figure A-19, note how the reference gage regression improves the EROM flow estimates as compared to the runoff flow estimates. As compared to the runoff statistics, the reference gage regression statistics show that the log10 mean values are much closer to the gage log10 mean, and the SEE is reduced by almost half. The following section on the QA file will illustrate what happens in the reference gage regression to make these improvements in flow estimates.

The EROM-Gage QA file

The file is saved in the EROMExtension folder, named EROMQA_MA0001.

The file can be loaded into ArcGIS or Excel 2003, 2007, or 2010. It is especially useful to load the file into Excel, or a similar spreadsheet package for use in graphing the results.

The file layout is designed to facilitate graphical and statistical analyses. All data values are adjusted for the bottom of the NHDFlowline feature. The files are sorted by GageRef so that all of the reference gages are at the top of the file; this is useful for users who want to look at graphs or additional statistics for only the reference gages.

Field Name	Description	Format
ComID	Common identifier of an NHDFlowline feature	Long Integer
Gageid	The NWIS gageid	Text(16)
GageRef	Text field: “Ref” = Falcone Reference Gage. Blank = not Reference gage.	Char(3)
DivDASqKm	The NHDPlusV2 divergence-routed drainage area at the bottom of the flowline.(SqKm)	Num(14,3)
Q_E	The Gage Flow (cfs)	Num(14,3)
Q_A	Cumulative runoff (cfs)	Num(14,3)
Q_B	Q_A – Excess ET (EET) (cfs)	Num(14,3)
Q_C	Q_A - EET +/- Refgage Regression Adjustment	Num(14,3)
Q_D	Q_A – EET +/- Refgage Regression Adjustment +/- PlusFlowAR (cfs)	Num(14,3)
Q_Eunitro	Q_E / DivDASqKm	Num(14,3)
Q_Aunitro	Q_A / DivDASqKm	Num(14,3)
Q_Bunitro	Q_B / DivDASqKm	Num(14,3)
Q_Cunitro	Q_C / DivDASqKm	Num(14,3)
Q_Dunitro	Q_D / DivDASqKm	Num(14,3)
Q_Adelta	Q_E – Q_A	Num(14,3)
Q_Bdelta	Q_E – Q_B	Num(14,3)
Q_Cdelta	Q_E – Q_C	Num(14,3)
Q_Ddelta	Q_E – Q_D	Num(14,3)
Q_Aurodelt	Q_Eunitro – Q_Aunitro	Num(14,3)
Q_Burodelt	Q_Eunitro – Q_Bunitro	Num(14,3)
Q_Curodelt	Q_Eunitro – Q_Cunitro	Num(14,3)
Q_Durodelt	Q_Eunitro – Q_Dunitro	Num(14,3)

Figure A-20 contains a sample of the QA file, with the Q_E, Q_A, and Q_C columns highlighted. It is then a simple matter to produce a graph of gage flows versus EROM flows. An example of this graph is shown below the QA file example.

Microsoft Excel - EROMQAMA0001_09.xls

File Edit View Insert Format Tools Data Window Help Adobe PDF Type a question for help

Reply with Changes... End Review...

Arial 10 B I U \$ % ^ & & A

H1 Q_C

	A	B	C	D	E	F	G	H	I	J	K	L	M
1	Comid	Gage	Gag	DivDASqKm	Q_E	Q_A	Q_B	Q_C	Q_D	Q_Eunitro	Q_Aunitro	Q_Bunitro	Q_Cl
2	14269214	05057200	Ref	1731.084	30.773	36.672	36.638	64.638	64.638	0.017	0.021	0.021	
3	6689413	05061000	Ref	817.103	97.240	41.539	41.539	72.158	72.158	0.119	0.050	0.050	
4	6689073	05061500	Ref	1191.332	72.272	34.625	34.625	60.991	60.991	0.060	0.029	0.029	
5	6688853	05062000	Ref	2465.694	191.538	89.097	89.097	145.997	145.997	0.077	0.036	0.036	
6	7027381	05062500	Ref	2405.449	255.756	161.018	161.018	252.173	252.173	0.106	0.066	0.066	
7	14144065	05064900	Ref	395.394	11.833	8.594	8.594	16.841	16.841	0.029	0.021	0.021	
8	7089743	05087500	Ref	643.643	52.917	15.503	15.503	29.038	29.038	0.082	0.024	0.024	
9	14156742	05123400	Ref	3003.594	56.476	76.130	76.130	126.260	126.260	0.018	0.025	0.025	
10	7140308	05129115	Ref	2348.046	636.335	476.454	476.454	686.767	686.767	0.271	0.202	0.202	
11	7174272	05130500	Ref	482.303	129.081	101.546	101.546	164.741	164.741	0.267	0.210	0.210	
12	7171122	05131500	Ref	4382.421	1117.981	756.606	756.606	1052.680	1052.680	0.255	0.172	0.172	
13	22237092	05132000	Ref	3880.865	796.220	602.550	602.550	853.064	853.064	0.205	0.155	0.155	
14	6667943	05051522	---	10713.068	772.856	414.304	414.304	603.602	603.602	0.072	0.038	0.038	
15	7040897	05079000	---	13822.916	1456.510	890.386	890.386	1223.477	1223.477	0.105	0.064	0.064	
16	7088107	05112000	---	3905.866	341.748	198.597	198.597	306.076	306.076	0.087	0.050	0.050	
17	6658313	05046000	---	4537.791	454.751	251.721	251.721	380.980	380.980	0.100	0.055	0.055	
18	6909020730	05050000	---	3264.912	122.575	86.149	86.149	141.530	141.530	0.037	0.026	0.026	
19	14145053	05066500	---	3091.108	129.931	71.343	71.343	118.910	118.910	0.042	0.023	0.023	
20	9398232	05082500	---	63992.451	4115.231	2393.196	2393.196	3048.972	3048.972	0.064	0.037	0.037	
21	7164000	05139500	---	50090.596	10443.930	10095.301	10095.301	11006.509	11006.509	0.260	0.207	0.207	
22	14428746	05089000	---	545.920	23.556	11.470	11.470	21.986	21.986	0.043	0.021	0.021	
23	14416871	05100000	---	8233.175	320.529	216.842	216.842	331.955	331.955	0.038	0.026	0.026	
24	7027319	05064000	---	4091.494	389.141	210.808	210.808	323.416	323.416	0.095	0.051	0.051	
25	7047623	05078000	---	2515.450	235.624	106.059	106.059	171.490	171.490	0.093	0.042	0.042	
26	7098267	05127500	---	3891.965	1425.386	945.705	945.705	1293.516	1293.516	0.366	0.242	0.242	
27	7075722	05092000	---	75674.357	4706.305	2656.541	2656.541	3357.562	3357.562	0.062	0.035	0.035	
28	7053799	05078500	---	3474.649	379.432	206.468	206.468	317.263	317.263	0.109	0.059	0.059	
29	14416271	05099600	---	8045.704	234.613	212.676	212.676	326.061	326.061	0.029	0.026	0.026	
30	7111641	05127000	---	3401.366	1079.703	844.967	844.967	1165.727	1165.727	0.317	0.248	0.248	
31	14254647	05059700	---	2151.863	66.517	50.599	50.599	86.580	86.580	0.030	0.023	0.023	
32	9398994	05089000	---	1206.435	96.222	46.625	46.625	80.281	80.281	0.079	0.038	0.038	
33	6676032	05053000	---	5106.389	130.371	120.306	120.306	192.662	192.662	0.025	0.023	0.023	
34	6667867	05054000	---	16802.274	955.303	559.766	559.766	796.970	796.970	0.056	0.033	0.033	
35	7086793	05104500	---	1108.518	128.504	60.977	60.977	102.860	102.860	0.115	0.055	0.055	
36	7038705	05075000	---	5963.647	688.405	529.787	529.787	757.469	757.469	0.115	0.088	0.088	
37	14294035	05056400	---	3566.912	66.348	73.473	73.473	122.184	122.184	0.018	0.020	0.020	
38	6909020972	050606000	---	263.101	15.989	6.321	6.321	12.682	12.682	0.060	0.024	0.024	
39	7053809	05078000	---	1445.839	182.248	94.740	94.740	154.516	154.516	0.126	0.065	0.065	
40	7056281	05078230	---	686.955	77.692	42.973	42.973	74.456	74.456	0.113	0.062	0.062	
41	14428870	05090000	---	1758.542	68.101	37.298	37.298	65.327	65.327	0.038	0.021	0.021	
42	14278458	05054500	---	974.717	14.931	20.079	20.079	36.874	36.874	0.015	0.020	0.020	
43	7086347	05107500	---	2812.438	282.935	164.744	164.744	257.557	257.557	0.100	0.058	0.058	
44	7043255	05074500	---	5045.877	506.237	481.530	481.530	693.520	693.520	0.100	0.095	0.095	
45													

Chart1 (2) | Chart1 | EROMQAMA0001_09 /

Draw AutoShapes Insert Microsoft PowerPo...

Ready Start Inbox - Microsoft... erom and QAQC d... 2012 MRB training Microsoft Excel - E... 3:01 PM

Sum=93090.766 NUM

Figure A-20: EROM QA File Example

The graph in Figure A-21 shows gage flows on the x-axis and EROM flow estimates for runoff and the reference gage regression on the y-axis. The graph is in log-log coordinates to best show the range of flows. The blue triangles are the runoff flow estimates and the orange squares are the flows adjusted with the reference gage regression. The red line is where the gage and EROM flows would be equal. Note how the runoff estimates consistently under-estimate the true (gage) flows. The reference gage regression shifts the flows up to better match the gage flows. This is a graphical representation of the statistics shown in the QA table shown above.

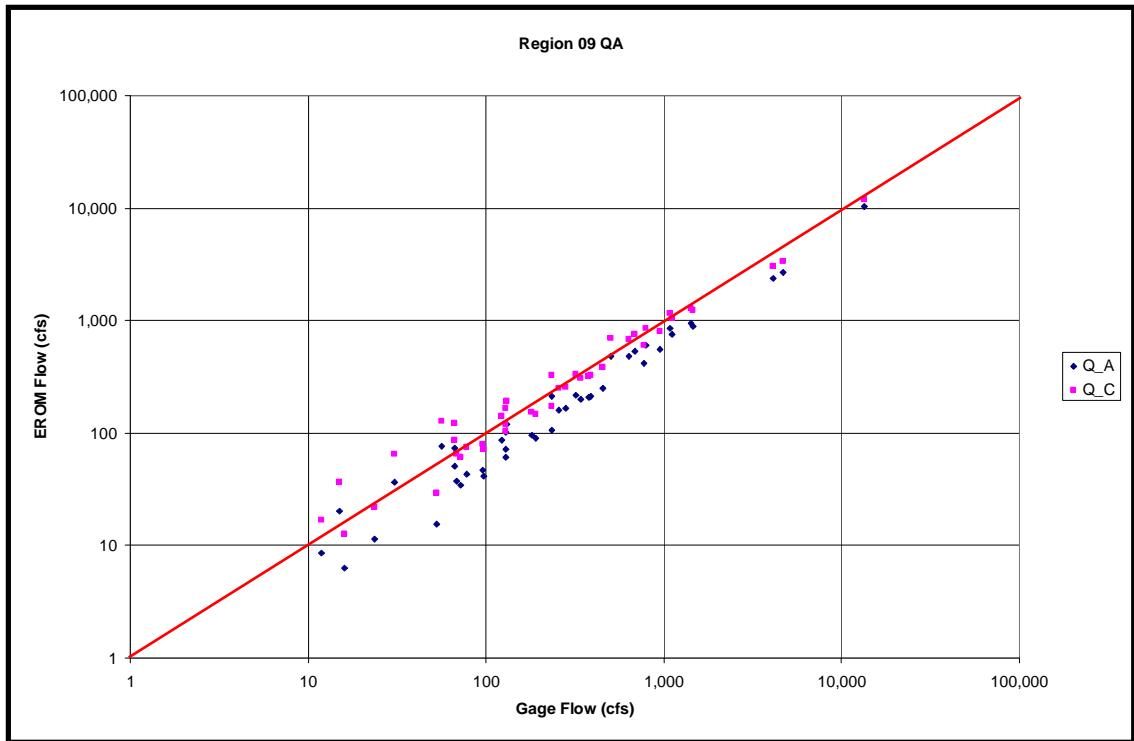


Figure A-21: QA Graph

Vogel Mean Annual Flow Estimation Extension

Mean annual flow estimates for the Continental United States (Hydrologic Regions 01 to 18) are computed based on the work of Vogel et al., 1999. This method uses a log-log regression approach based on drainage area, precipitation, and temperature data using mean annual flow values from the HydroClimatic Data Network (HCDN) of gages. These gages are defined as minimally affected by human activities, such as major reservoirs, intakes, and irrigation withdrawals. Therefore, the “Vogel” mean annual flow estimates are most representative of “natural” flow conditions. Regression parameters are provided for each Hydrologic Region. With this method, the mean annual flow for a NHDFlowline feature is computed as:

$$\text{MAFlowV} = e^a * \text{CumAREA}^b * \text{AreaWtMAP}^c * \text{AreaWtMAT}^d * \text{BCF} * 35.31467$$

where

a, b, c, and d are Hydrologic Region-specific regression coefficients,

BCF = Bias Correction Factor by Hydrologic Region,

CumAREA = Divergence-routed cumulative area,

AreaWtMAP = Area-weighted mean annual precipitation,

AreaWtMAT = Area-weighted mean annual temperature, and,

35.31467 = conversion factor from cubic meters per second to cubic feet per second

The BCF is needed because the regression is in log-log space. In addition, the Vogel flow estimates are valid only within the ranges of the original data used for computing the regressions. The regression coefficients, BCFs, and valid drainage area ranges for the Vogel Flow estimates are shown in Figure A-22¹. For cumulative drainage areas that fall outside of these ranges, the Vogel flows and velocities are set to missing values (-9999) in the distributed data.

Hydrologic region	a	B	C	d	BCF	AreaMin (Sq. Km.)	AreaMax (Sq. Km.)
R01	-9.4301	1.01238	1.21308	-0.5118	1.004042	5.179976221	14672.28265
R02	-2.707	0.97938	1.6251	-2.051	1.007174	2.58998811	29940.26256
R03	-10.102	0.98445	2.2599	-1.607	1.014347	12.94994055	44547.7955
R04	-5.678	0.96519	2.2889	-2.3191	1.012719	72.51966709	5982.872535
R05	-4.891	0.99319	2.32521	-2.5093	1.007174	2.58998811	74164.30954
R06	-8.82	0.96418	1.3581	-0.7476	1.009752	12.94994055	6622.599598
R07	-11.861	1.00209	4.5596	-3.8984	1.009752	93.23957197	308208.5851
R08	0	0.98399	3.157	-4.1898	1.011187	132.0893936	7283.046566
R09	0	0.81629	6.4222	-7.6551	1.062826	51.79976221	16757.22307
R10	-10.927	0.89405	3.2	-2.4524	1.156028	10.35995244	53491.02444
R11	-18.627	0.96494	3.8152	-1.9665	1.044031	62.15971465	46236.46775
R12	0	0.84712	3.8336	-4.7145	1.146124	85.46960764	101032.8462
R13	0	0.77247	1.9636	-2.8284	1.122542	28.48986921	25200.58431
R14	-9.856	0.98744	2.469	-1.8771	1.08462	90.64958386	116160.9667
R15	0	0.8663	2.5065	-3.427	1.286895	23.30989299	68634.68492
R16	0	0.83708	2.1672	-3.0535	1.118034	18.12991677	12975.84043
R17	-10.18	1.00269	1.86412	-1.1579	1.059481	20.71990488	35094.3389
R18	-8.438	0.97398	1.99863	-1.5319	1.109234	15.53992866	8062.632987

Figure A-22: Vogel Flow Values by Hydrologic Region³

The area-weighted MAP and MAT values come from PRISM-based grids that are allocated and accumulated using the CA3T tool. The results are stored in the VPUAttributeExtension directory, named CumDivPrecipMA CumDivTempMA, respectively. Cumulative Divergence-routed area comes from the CumulativeArea table in the NHDPlusAttributes folder. The MAP and MAT values are computed by dividing the CA3T accumulated values by the Divergence-routed cumulative area.

The “Vogel” based flow and, therefore, velocity estimates depend upon estimates for mean annual precipitation and temperature, as well as drainage area. It is possible that drainage area, precipitation, or temperature data is unavailable in some cases, for instance where there is drainage entering from Canada or Mexico. The accumulation tool, CA3T, keeps track of “missing” data. If the percentage of missing temperature or precipitation data is greater than or equal to 25 percent of the total drainage area, the Vogel-based flow and velocity estimates are assigned missing values of -9999.

³ Figure A-22 contains published and unpublished material from Vogel (2005). The information in columns BCF, AreaMin, and AreaMax is unpublished and was supplied by Vogel through e-mail and telephone communication to Timothy R. Bondelid, Consulting Engineer.

Velocity Extension

Velocities are estimated for mean annual and mean monthly flows using the work of Jobson (1996). This method uses regression analyses on hydraulic variables for over 980 time-of-travel studies, which represent about 90 different rivers in the U.S. These rivers represent a range of sizes, slopes, and channel geometries. Four principal NHDFlowline feature variables are used in the Jobson methods: drainage area, NHDFlowline feature slope, mean annual discharge, and discharge at the time of the measurement. Based on his analyses, regression equations were developed to relate velocity (meters/second) to drainage area, a dimensionless drainage area, NHDFlowline feature slope, discharge, and a dimensionless relative discharge. The Velocity Module computes velocities for either the EROM or Vogel flow estimates.

Note that replication of the velocities using data values in the EROM or Vogel tables may not produce the exact velocities in the table due to round-off in the values in the table. This can occur because the velocity calculations were calculated using double-precision values in the code that generated the velocity estimates.

The slope smoothing process does not permit zero slopes on NHDFlowline features. If the elevation smoothing produces a zero slope, the slope is set to a value of 0.00001. There are situations where the slope is set to “missing” (-9998), in which case the Jobson “Unknown-Slope” method is used for the velocity calculation. See Step 22 (Elevation Smoothing) for a description of when these missing slopes occur. For all NHDFlowline features with a,slope, velocities are calculated using the Jobson “slope” method.

The equations for the velocity estimates are presented below:

The dimensionless relative discharge (Q'_a) (Jobson, 1996) is expressed as

$$Q'_a = Q/Q_a$$

where

Q = mean annual discharge (cubic meters/second), and
 Q_a = mean annual discharge.

The dimensionless drainage area (D'_a) (Jobson, 1996) is expressed as

$$D'_a = (D_a^{1.25} * g^{0.5})/Q_a$$

where

D_a = drainage area (square meters),
 g = acceleration of gravity (9.8 meters/second/second), and
 Q_a = mean annual discharge (cubic meters/second).

The “Slope” method NHDFlowline feature velocity equation (Jobson, 1996) is:

$$Vel = 0.094 + (0.0143 * (D'_a)^{0.919}) * (Q'_a)^{-0.469} * (\text{slope}^{0.159}) * (Q/D_a).$$

The “Unknown-Slope” NHDFlowline feature velocity equation (Jobson, 1996) is:

$$Vel = 0.02 + (0.051 * D'_a^{0.821}) * Q'_a^{-0.465} * (Q/D_a)$$

Conversion of velocity from mps to fps:

$$\text{Vel} = \text{Vel} * 3.2808$$

Appendix B: National Hydrography Dataset (NHD) Snapshot Feature Class and Table Descriptions

The data contained in the \NHDSnapshot folder is the version of NHD data used to build NHDPlus. Only the NHD features classes and tables of importance to NHDPlusV2 are described here. Additional documentation on these and other NHD components may be found on: <http://nhd.usgs.gov/>

Some fields in the attribute tables contain special coded values as follows:

The value “-9998” signifies that the applicable value for the field is missing or undetermined.
The value “-9999” signifies that there is no applicable value and one will never be assigned.

WHDSnapshot\Hydrography\NHDFlowline (line feature class)

Description: NHD linear features of types: stream/river, canal/ditch, pipeline, artificial path, coastline, and connector.

Field Name	Description	Format
ComID	Common identifier of the NHD feature	Long Integer
FDate	Feature Currency Date	Date
Resolution	NHD db resolution (i.e. “high”, “medium” or “local”)	Character (6)
GNIS_ID	Geographic Names Information System ID for the value in GNIS_Name	Character(10)
GNIS_Name	Feature Name from the Geographic Names Information System	Character(65)
LengthKM	Feature length in kilometers	Num(11,3)
ReachCode	Reach Code assigned to feature	Character (14)
FlowDir	Flow direction is “With Digitized” or “Uninitialized” Only flowlines with FlowDir = “With Digitized” are used to define the surface water network used in NHDPlus. All other flowlines are ignored by NHDPlus.	Character (14)
WBAreaComI	ComID of the NHD polygonal water feature through which an NHD “Artificial Path” flowline flows	Long Integer
FType	NHD Feature Type	Character (32)
FCode	Numeric codes for various feature attributes in the NHDFCode lookup table	Num(5)
Shape_Leng	Feature length in decimal degrees	See ESRI documentation
Enabled	Always “True”	Character (6)

WHDSnapshotHydrography\NHDWaterbody (polygon feature class)

Description: NHD polygonal features of types: Playa, Ice Mass, LakePond, Reservoir, SwampMarsh, and Estuary.

Field Name	Description	Format
ComID	Common identifier of the NHD Waterbody feature	Long Integer
FDate	Feature Currency Date	Date
Resolution	NHD db resolution (i.e. "high", "medium" or "local")	Character (6)
GNIS_ID	Geographic Names Information System ID for the value in GNIS_Name	Character(10)
GNIS_Name	Feature Name from the Geographic Names Information System	Character (65)
AreaSqKm	Feature area in square kilometers	Num(11,3)
Elevation	Feature elevation in feet	Num(10,3)
ReachCode	Reach Code assigned to feature	Character (14)
FType	NHD Feature Type	Character (32)
FCode	Numeric code for various feature attributes; definitions for codes found in the NHDFCode lookup table	Num(5)
Shape_Leng	Feature length in decimal degrees	See ESRI documentation
Shape_Area	Feature area in square decimal degrees	See ESRI documentation

WHDSnapshot\Hydrography\NHDArea (polygon feature class)

Description: NHD polygonal features of types: Area to be Submerged, BayInlet, Bridge, CanalDitch, DamWeir, Flume, Foreshore, Hazard Zone, Lock Chamber, Inundation Area, Rapids, SeaOcean, Special Use Zone, Spillway, StreamRiver, Submerged Stream, Wash, Water IntakeOutflow, and Area of Complex Channels.

Field Name	Description	Format
ComID	Common identifier of the NHD area feature	Long Integer
FDate	Feature Currency Date	Date
Resolution	NHD db resolution (i.e. "high", "medium" or "local")	Character (6)
GNIS_ID	Geographic Names Information System ID for the value in GNIS_Name	Character(10)
GNIS_Name	Feature Name from the Geographic Names Information System	Character 65)
AreaSqKm	Feature area in square kilometers	Num(11,3)
Elevation	Feature elevation in feet	Num(9,3)
FType	NHD Feature Type	Character (32)
FCode	Numeric codes for various feature attributes; definitions for codes found in the NHDFCode lookup table	Num(5)
Shape_Leng	Feature length in decimal degrees	See ESRI documentation
Shape_Area	Feature area in square decimal degrees	See ESRI documentation

WHDSnapshotWHDFCode (Table)

Description: The FCode table describes attribute codes used in the FCode fields of feature tables.

Field Name	Description	Format
FCode	A numeric code that represents the feature type plus its encoded attribute values	Long Integer
Descriptio	Text description of feature type and the encoded attributes	Character (255)
CanalDitch	Canal Ditch Type (aqueduct, unspecified)	Character (32)
Constructi	Construction material (earthen, nonearththen, unspecified)	Character (32)
Hydrograph	Intermittent or perennial	Character (32)
Inundation	Inundation Area Type (debris basin, dewatering area, duck pond, general case, percolation basin, retarding basin)	Character (32)
Operationa	Operational Status (abandoned, operational, under construction)	Character (32)
PipelineTy	Pipeline type (aqueduct, general case, penstock, siphon)	Character (32)
Positional	Positional accuracy (approximate, definite, indefinite, not applicable)	Character (32)
Relationsh	Relationship to surface (abovewater, at or near, elevated, underground, underwater, unspecified)	Character (32)
ReservoirT	Reservoir type (aquaculture, decorative pool, disposal-tailings pond, disposal-unspecified, evaporator, swimming pool, treatment-cooling pond, treatment-filtration pond, treatment-settling pond, treatment-sewage treatment pond, unspecified water storage)	Character (32)
Stage	Elevation stage (Normal Pool, Flood Elevation, Average Water Elevation, Date of Photography, High Water Elevation, Spillway Elevation)	Character (32)
SpecialUse	Special use category (dump site, spoil area)	Character (32)
KCode		Character (30)

WHDSnapshotWHDReachCrossReference (Table)

Description: The NHDReachCrossReference table is used to track changes to Reachcodes and NHD Reach configuration. As distributed with NHDPlus, this table tracks only Reachcodes assigned to Medium Resolution (1:100,000) NHD. This table can be used to track the changes between NHDPlusV1 to NHDPlusV2.

Field Name	Description	Format
OldReachCode	Old Reachcode	Character(14)
OldReachDate	Date OldReachcode was assigned	Date
NewReachCode	New Reachcode	Character(14)
NewReachDate	Date NewReachcode was assigned	Date
OldUpMi	No longer used.	Character(5)
NewUpMi	No longer used.	Character(5)
ChangeCode	A: New Reach was added D: Old Reach was deleted 1-1: Old Reach became one new Reach 1-P: Old Reach became part of new Reach P-1: Part of old Reach became new Reach P-P: Part of old Reach became part of new Reach (rare)	Character(4)
Process	Abreviation of process which changed the Reaches.	Character(6)
ReachFileVersion	NHD Version	Character (10)
OldHUCode	Old HUC8	Character (8)
NewHUCode	New HUC8	Character (8)

Appendix C: National Elevation Dataset (NED) Snapshot Raster and Table Descriptions

The NED snapshot resides in the \NEDSnapshot subfolder of the NHDPlusV2 VPU workspace. The data contained in the \NEDSnapshot folder is the NED data that was used to build NHDPlusV2 for the VPU workspace.

Additional documentation about the National Elevation Dataset may be found on: <http://ned.usgs.gov/>. The data used were the 1-arc-second resolution NED. The NED data are updated on a bimonthly basis, and because the NHDPlusV2 production process took place over a period of many months, more than one snapshot of NED data were used. The source NED snapshot date is identified in the metadata for each NHDPlusV2 VPU.

Data for Mexico were included in the NED.

Elevation data for Canadian areas is from the Canadian Digital Elevation Data, Level 1 (CDED1). These data generally were derived from 1:50,000-scale topographic maps and sampled at a 0.75-arc-second resolution. The data were downloaded from the web at <http://www.geobase.ca/>. Each file was in DEM format.

Both the NED and CDED1 data were provided as tiled datasets in rectangular tiles. Automated processes were developed to clip the desired areas from each data tile, merge the pieces together, check for and fill any gaps in the data, and finally to project the data to the Albers Equal-area map projection and convert to an integer grid with elevations in centimeters. A shaded relief grid then was generated.

WEDSnapshot\lev cm (grid)

Description: An ESRI integer grid dataset that gives the elevation in centimeters (from the North American Vertical Datum of 1988). This grid holds the source elevation data used to build NHDPlus. This grid is an integer grid, with vertical units of centimeters, on the Albers Equal-area map projection. This grid is not hydro-enforced.

Field Name	Description	Format
Value	Elevation in centimeters	See ESRI documentation

WEDSnapshot\shdrelief (grid)

Description: An ESRI integer grid dataset that contains the shaded relief generated from elev_cm.

Field Name	Description	Format
Value	0-254	See ESRI documentation
Count	Number of cells with the same value in Value	Long Integer

Appendix D: Watershed Boundary Dataset (WBD) Snapshot Feature Class and Table Descriptions

The WBD snapshot resides in the \WBDSnapshot subfolder of the NHDPlusV2 VPU workspace. The data contained in the \WBDSnapshot folder is the WBD data used to build NHDPlusV2 for the VPU workspace. As NHDPlusV2 was built for each VPU, the most recent WBD snapshot was acquired from the Watershed Boundary Dataset website located at <http://www.nrcd.usda.gov>

\WBDSnapshot\WBD\WBD_SubWatershed (polygon feature class)

Description: Boundaries of 12-digit Hydrologic Units.

Additional documentation about the Watershed Boundary Dataset may be found at:

http://www.nrcs.usda.gov/wps/portal/nrcs/detail/national/water/watersheds/dataset/?&cid=nrcs143_021616

Field Name	Description	Format
HUC_8	8-digit Hydrologic Unit Code	Char(8)
HUC_10	10-digit Hydrologic Unit Code	Char(10)
HUC_12	12-digit Hydrologic Unit Code	Char(12)
Acres	Size of 12-digit HUC	Num(,)
NContrib_A	Non-contributing area in 12-digit HUC	Num(,)
HU_10_GNIS	10-digit HUC GNIS name	Char(23)
HU_12_GNIS	12-digit HUC GNIS name	Char(23)
HU_10_DS	Downstream 10-digit HUC	Char(10)
HU_10_Name	10-digit HUC name	Char(80)
HU_10_Mod	Identifies interbasin transfers (IT), dams at outlet (DM), etc. that modify natural overland flow as modifications are identified from most significant to least significant modification(s). Hydrologic units with no modification are marked with NM. SC - Stormwater Canal or Drainage Canal ID - Irrigation Ditch IT - Interbasin Transfer BC - Barge Canal or Navigation Canal SD - Stormwater Ditch PD - Pipe Diversion CD - Channel Diversion NC - Noncontributing Area KA - Karst LE - Levee NM - No Modifications OC - Overflow Channel or Flume DM - Dam at outlet or HU boundary GC - General Canal/Ditch PS - Pumping Station DD - Drainage Ditch SI - Siphon	Char(20)

	AD - Aqueduct RS - Reservoir TF - Transportation Feature (road, railroad, docks etc.) GF - Ground-Water Flow MA - Mining Activity UA - Urban Area GL - Glacier IF - Ice Field OF - Overbank Flow OT – Other	
HU_10_Type	<p>The hydrologic unit type that most closely identifies the watershed.</p> <p>S - "Standard" hydrologic unit - Any land HU with drainage flowing to a single outlet point, excluding non-contributing areas. This includes areas or small triangular wedges between adjacent HU's that remain after classic hydrologic units are delineated. Some examples include "true", "classic", "composite", and "remnant" hydrologic units.</p> <p>C - "Closed Basin" hydrologic unit - A drainage area that is 100% non-contributing. This means all surface flow is internal, no overland flow leaves the hydrologic unit through the outlet point.</p> <p>F - "Frontal" hydrologic unit - Areas along the coastline of lakes, oceans, bays, etc. that have more than one outlet. These HU's are predominantly land with some water areas at or near the outlet(s).</p> <p>M - "Multiple Outlet" hydrologic unit An area that has more than one natural outlet; for example, an outlet located on a stream with multiple channels. This does not include frontal or water hydrologic units, hydrologic units with artificial interbasin transfers, drainage outlets through karst or ground-water flow, or outlets that cross a stream with an island. This code should be used only in rare instances.</p> <p>W - "Water" hydrologic unit - Hydrologic units that are predominantly water with adjacent land areas, ex. lake, easturies, harbors.</p> <p>I - "Island" hydrologic unit - A hydrologic unit that is one or more islands and adjacent water out to the toe of the shore face.</p> <p>U - "Unclassified" hydrologic unit - A hydrologic unit that can't be defined or doesn't fit into one of the types that have been listed.</p>	Char(1)
HU_12_DS	Downstream 12-digit HUC	Char(10)
HU_12_Name	12-digit HUC name	Char(80)
HU_12_Mod	Identifies interbasin transfers (IT), dams at outlet (DM), etc. that modify natural overland flow as modifications are identified from most significant to least significant modification(s). Hydrologic units with no modification are marked with NM. SC - Stormwater Canal or Drainage Canal ID - Irrigation Ditch IT - Interbasin Transfer	Char(20)

	BC - Barge Canal or Navigation Canal SD - Stormwater Ditch PD - Pipe Diversion CD - Channel Diversion NC - Noncontributing Area KA - Karst LE - Levee NM - No Modifications OC - Overflow Channel or Flume DM - Dam at outlet or HU boundary GC - General Canal/Ditch PS - Pumping Station DD - Drainage Ditch SI - Siphon AD - Aqueduct RS - Reservoir TF - Transportation Feature (road, railroad, docks etc.) GF - Ground-Water Flow MA - Mining Activity UA - Urban Area GL - Glacier IF - Ice Field OF - Overbank Flow OT - Other	
HU_12_Type	<p>The hydrologic unit type that most closely identifies the watershed.</p> <p>S - "Standard" hydrologic unit - Any land HU with drainage flowing to a single outlet point, excluding non-contributing areas. This includes areas or small triangular wedges between adjacent HU's that remain after classic hydrologic units are delineated. Some examples include "true", "classic", "composite", and "remnant" hydrologic units.</p> <p>C - "Closed Basin" hydrologic unit - A drainage area that is 100% non-contributing. This means all surface flow is internal, no overland flow leaves the hydrologic unit through the outlet point.</p> <p>F - "Frontal" hydrologic unit - Areas along the coastline of lakes, oceans, bays, etc. that have more than one outlet. These HU's are predominantly land with some water areas at or near the outlet(s).</p> <p>M - "Multiple Outlet" hydrologic unit An area that has more than one natural outlet; for example, an outlet located on a stream with multiple channels. This does not include frontal or water hydrologic units, hydrologic units with artificial interbasin transfers, drainage outlets through karst or ground-water flow, or outlets that cross a stream with an island. This code should be used only in rare instances.</p> <p>W - "Water" hydrologic unit - Hydrologic units that are predominantly water with adjacent land areas, ex. lake, easturies, harbors.</p> <p>I - "Island" hydrologic unit - A hydrologic unit that is one or</p>	Char(1)

	more islands and adjacent water out to the toe of the shore face. U - "Unclassified" hydrologic unit - A hydrologic unit that can't be defined or doesn't fit into one of the types that have been listed.	
Meta_ID	Most recent Meta_ID which links to content in WBD metadata	Char(4)
States	List of states within the 12-digit HUC	Char(20)
GlobalID	Globally Unique Identifier	Char(38)
GAZ_ID	Identifier assigned by NHDPlus production process	Long Integer
Shape_Leng	Feature length in decimal degrees	See ESRI Documentation
Shape_Area	Feature area in square decimal degrees	See ESRI Documentation

Appendix E: Purpose Code (PurpCode) Values

Sink	
<u>PurpCode</u>	<u>PurpDesc</u>
1	BurnLineEvent network end
2	BurnLineEvent non-spatial connection
3	NHDWaterbody Playa
4	BurnAddWaterbody Playa
5	NHD Waterbody closed lake
6	WBD Closed HUC12
7	WBD HUC12 not indicated as closed, but no surface-water connection is seen on maps
8	BurnAddWaterbody closed lake
9	Karst sinkhole
10	Topographic depression
11	Topographic depression (Canada or Mexico)
12	BurnAddLine end (Mexico)
 BurnAddLine	
<u>PurpCode</u>	<u>PurpDesc</u>
CN	Feature from Canadian NHN
CT	Feature from Canadian NHN, but trimmed. Not whole NHN feature.
CC	Connection between Canadian NHN and US NHD
CO	Feature omitted from Canadian NHN. Added to ensure drainage connectivity.
NO	Feature omitted from NHD. Added to ensure drainage connectivity.
HR	Feature from High resolution NHD
HT	Feature from High resolution NHD, but trimmed. Not whole High resolution Feature.
NH	Feature from High resolution NHD. In Canada or Mexico, from harmonized NHD data.
CH	Connection between High Resolution NHD and Medium Resolution NHD. High resolution may include harmonized Canada or Mexico data.
UF	Feature from Medium Resolution NHD FlowDir=Uninitialized
BA	Feature from adjacent VPU, burned to ensure same catchment boundaries from both VPU's
BW	Line added to breach a wall
AC	Added connector
MB	Modify burn path
AV	InterVPU flowline from adjacent VPU
AP	Artificial path in coastal bay
CV	Coastline from adjacent VPU
EN	Stream digitized to exit VPU drainage to NoData extent

Appendix F: How do Catchment Boundaries differ from WBD Snapshot Boundaries

A common goal of the NHDPlus and WBD programs is to minimize differences, over time, between catchment boundaries and WBD boundaries. The objective is to have NHDPlusV2 catchments that will nest within WBD HUC12 areas. This, in turn, will enable catchment attributes to be aggregated up to any HUC level. A particular version of NHDPlusV2 catchments is built using a snapshot of the WBD and the nesting will only apply to that particular WBD snapshot.

The WBD HUC12 drainage divide lines are incorporated into the NHDPlusV2 hydro-enforced DEM as “walls”, so that DEM derived flow direction cells (i.e. the NHDPlusV2 fdr grid) conform to the WBD. Catchments for NHDFlowline features and Sink features are created using the NHDPlusV2 fdr grid and, theoretically, the catchments should conform to the WBD boundaries within the 30-meter grid cell resolution. In practice, however, catchments and WBD Boundaries are not always that closely aligned. At present, the catchment boundaries correspond well at ridge lines but small differences are common at the WBD pour points. Below is a list of common data conditions that result in differences between the catchment boundaries and the WBD boundaries.

- Pour point of the catchment is slightly upstream or downstream of the pourpoint of the WBD. This misalignment between the medium resolution NHD and the WBD can occur at HUC12 outlets. Here, the segmentation of the NHD does not always match these confluences with the WBD outlets. The result is a flowline catchment extending into a portion of the next downstream or upstream HUC12 (Figure F-1).
- The 30-meter grid cell resolution can sometimes be a limiting factor for spatial correspondence between the catchments and WBD divides. This is true when an NHDFlowline feature is within a grid cell width of a WBD divide. This situation can result in an NHDFlowline feature breaching the WBD wall feature in the hydro-enforced DEM. This anomaly can cause the catchment for the NHDFlowline feature to extend beyond the WBD divide. An example of this is shown in Figure F-2 where a series of NHDFlowline features breach nearby WBD wall features.
- Where lake shores are used to define WBD boundaries (see Figure F-3), the NHDPlus catchments associated with artificial paths within the lakes, will not match the WBD boundary of the lake. The NHD representation is correct since the artificial path catchment features should include contributing drainage from the surrounding HUC12s.
- In arid areas, some HUC12s may be “empty”, i.e. may not contain any NHDFlowline features or other water features. If the HUC12 was not identified in WBD as a closed basin, the wall between the HUC12 and the downstream HUC12 was removed during the NHDPlusV2 production process. In these cases, the catchments may not agree closely with the HUC12 boundaries. In Figure F-4A, the example shows two empty HUC12s. A portion of the boundary of each empty HUC12 is removed from the Wall feature thus hydrologically connecting the empty HUCs to downstream drainage. In the figure, one empty HUC flows to the other empty HUC which drains to the next downstream HUC containing an NHDFlowline feature. The resultant catchment for the NHDFlowline feature includes the area of the HUC 12 that the feature is within plus the two upstream empty HUC 12s (Figure F-4B).
- Arid areas present situations where there are isolated NHDFlowline networks within a HUC12, and a sink is placed at the downstream end of each isolated network. Sometimes there is an area downhill of the sink, within the HUC 12, but with no flowline to connect the area to an adjacent HUC12. If the HUC12 is not identified as a closed basin in WBD and has a downstream HUC12 identified, a section of the wall was removed during NHDPlusV2 processing. By removing the wall section, the downhill portion of the HUC12 drains to the downstream HUC12. In these

cases, the areas downhill of the sink will be assigned to a catchment in the downstream HUC12. Figure F-5 shows a catchment for an NHDWaterbody playa feature (i.e. a sink labeled with a map id of 1) which includes all of the area for an upslope empty HUC12 (same scenario as Figure F-4) and a large portion of another upstream HUC 12 that is partially allocated to catchments for an isolated network.

- All NHDFlowline headwater features are trimmed back by a small distance to reduce possible breaches of ridge lines in the DEM. Further intersecting conflicts of headwater features with the WBD drainage divides are then identified and additional trimming is performed on these conflicting headwater features. These combined trimming actions do not ensure that headwater flowlines will never breach a WBD divide.

In Figure F-6, a headwater NHDFlowline feature extends into an adjacent WBD HUC12 in a manner that appears to contradict what the drainage should be as defined by the WBD. This situation may represent an error NHD or an error in WBD. Visual review of this example with high-resolution oblique aerial photos (source: Bing Maps) suggested that the headwater feature does extend into the adjacent HUC12 via culverts and pipeline features. No additional action was necessary during the NHDPlusV2 processing.

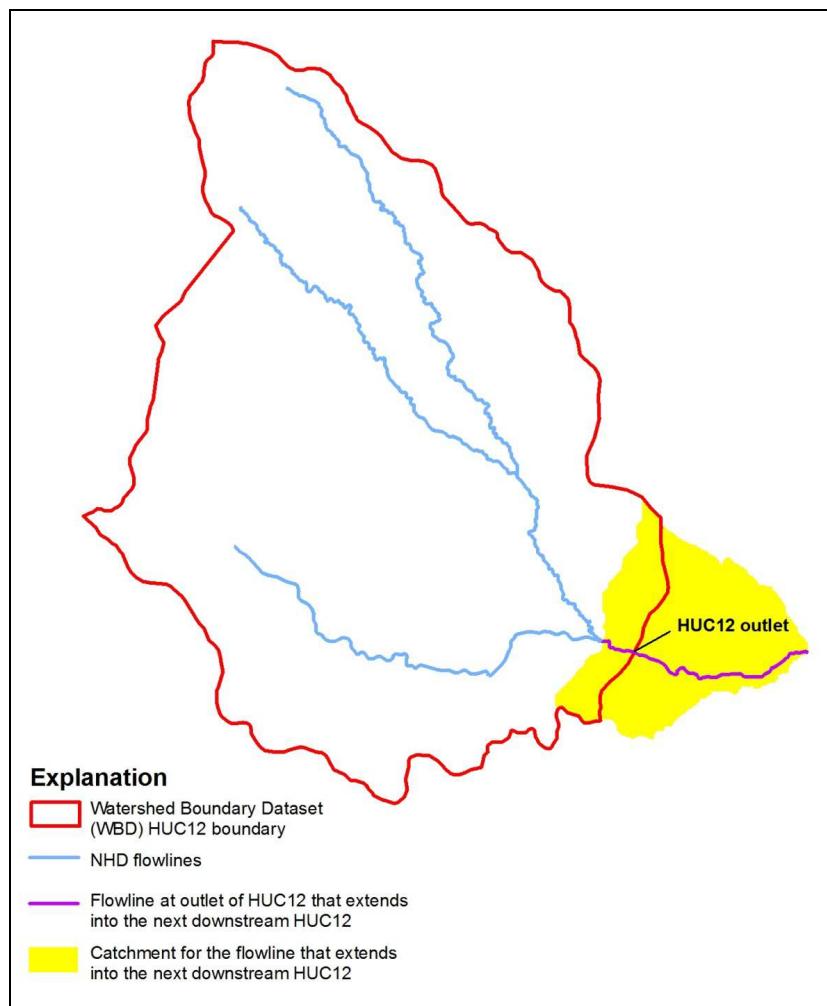


Figure F-1

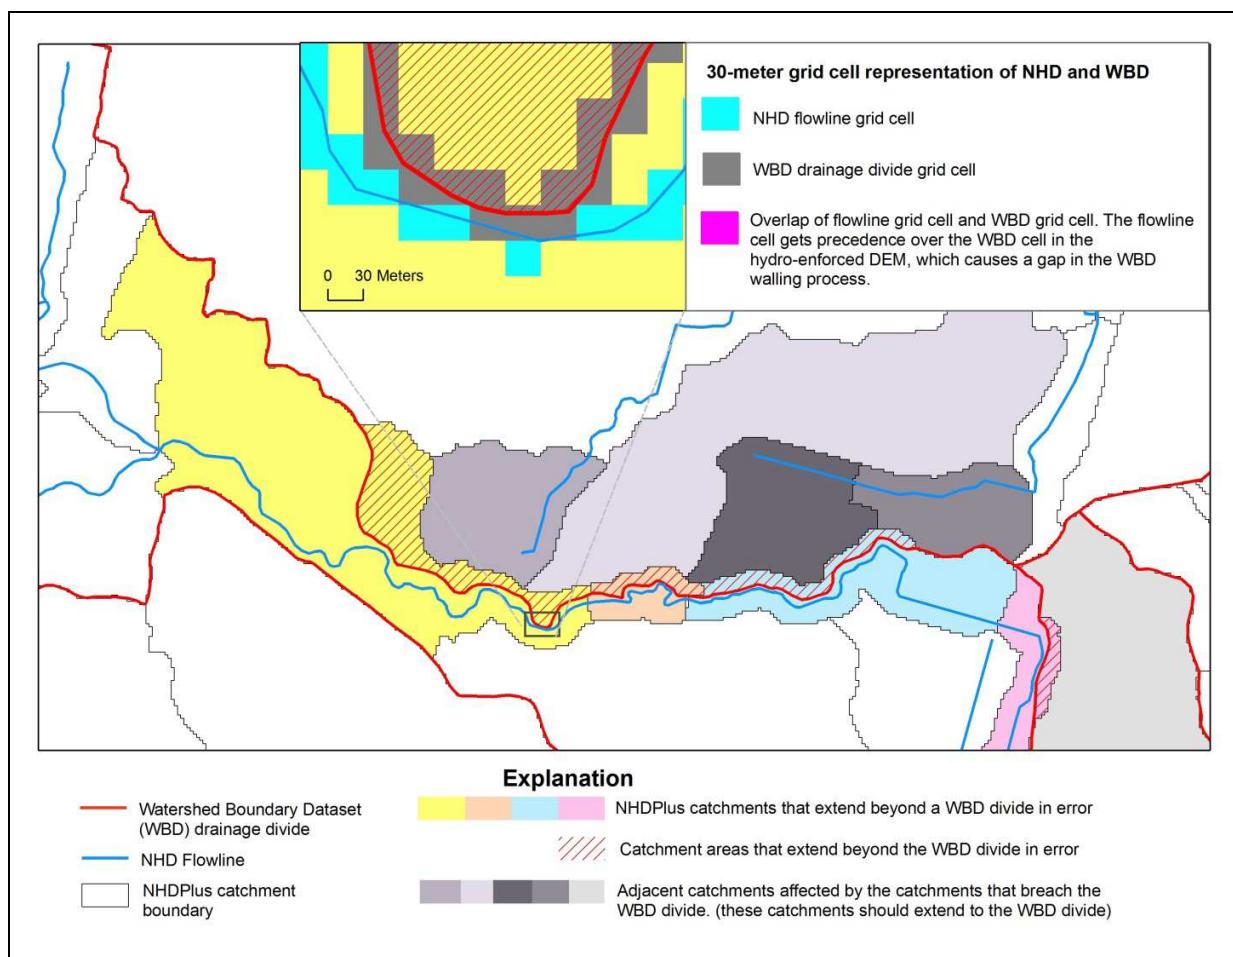


Figure F-2

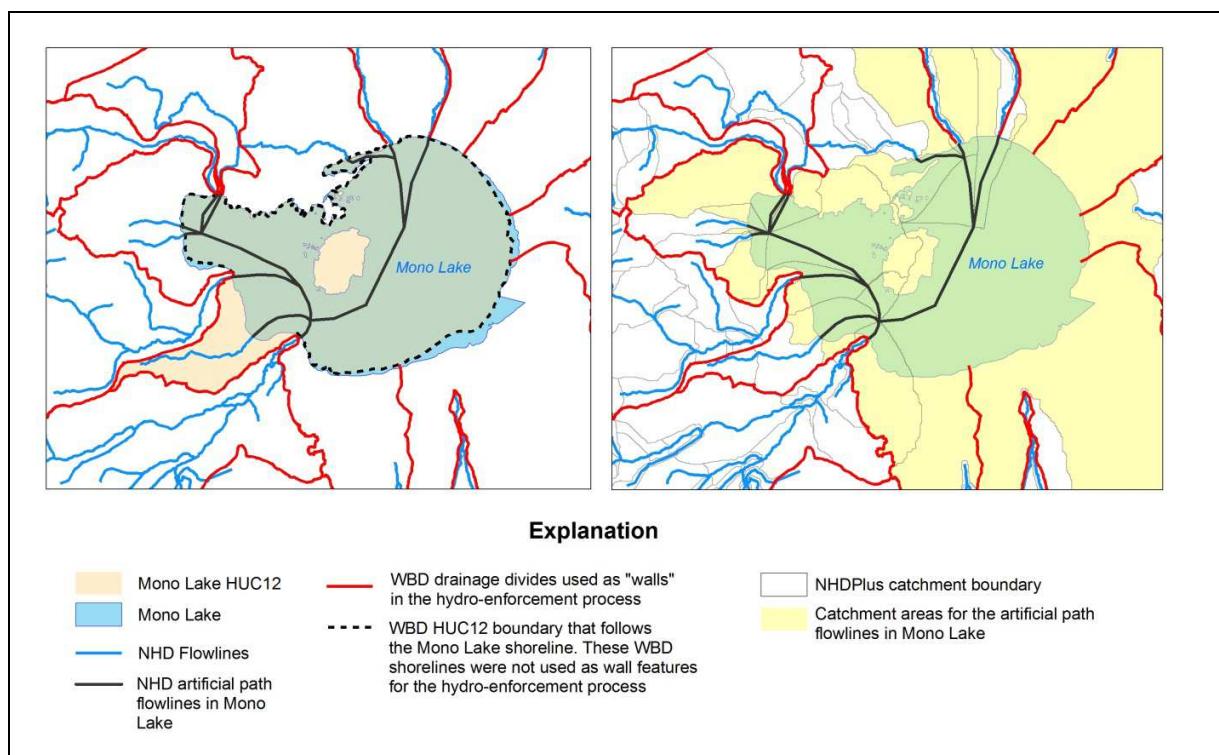


Figure F-3



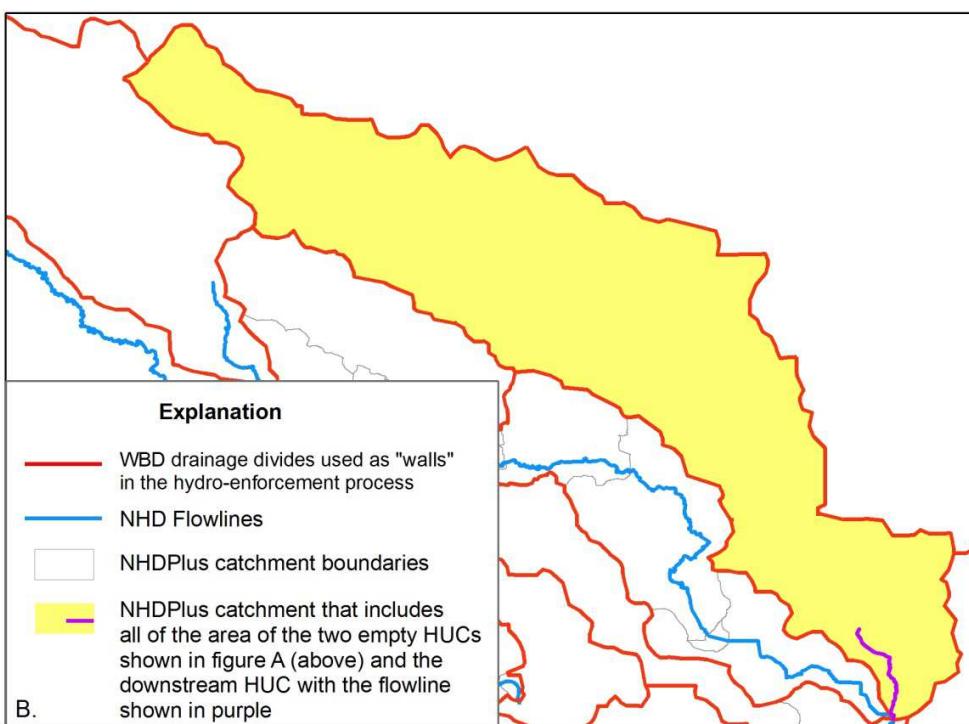


Figure F-4a and F-4b

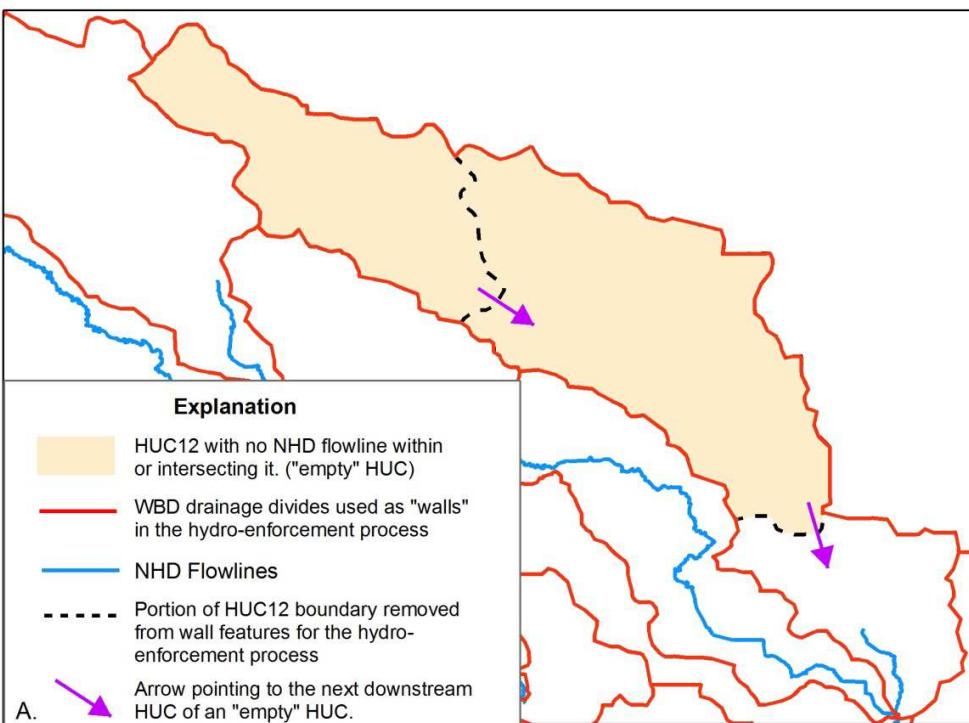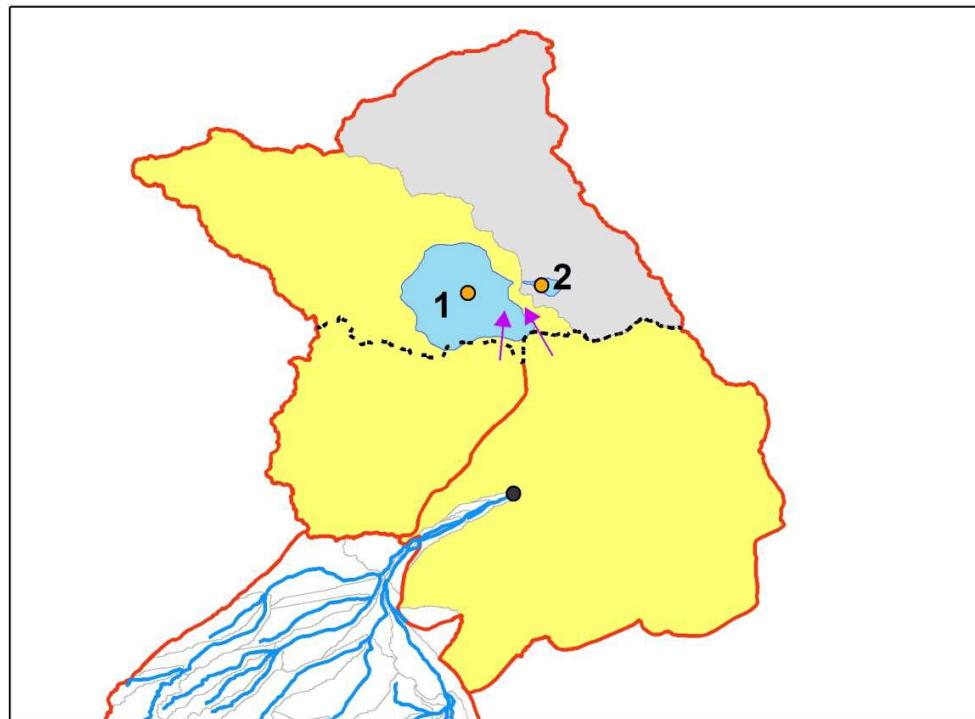

Explanation

- | | | |
|----------|---|--|
| 1 | NHD Waterbody - Playa and map id | — WBD drainage divides used as "walls" in the hydro-enforcement process |
| — | NHD Flowlines | Portion of HUC12 boundary removed from wall features for the hydro-enforcement process |
| ● | Playa sink feature used for the hydro-enforcement process and the catchment delineation source for an NHD Waterbody playa feature | → Arrow pointing to the next downstream HUC |
| ● | Sink feature used in the hydro-enforcement process for a terminal end of an NHD isolated stream network | — NHDPlus catchment boundary |
| 1 | NHDPlus catchment for the NHD playa feature labeled with the map id of 1. The catchment includes upslope areas from an "empty" HUC12 and a HUC12 with flowlines belonging to an isolated network. | |
| 2 | NHDPlus catchment for the NHD playa feature labeled as number 2 | |

Figure F-5

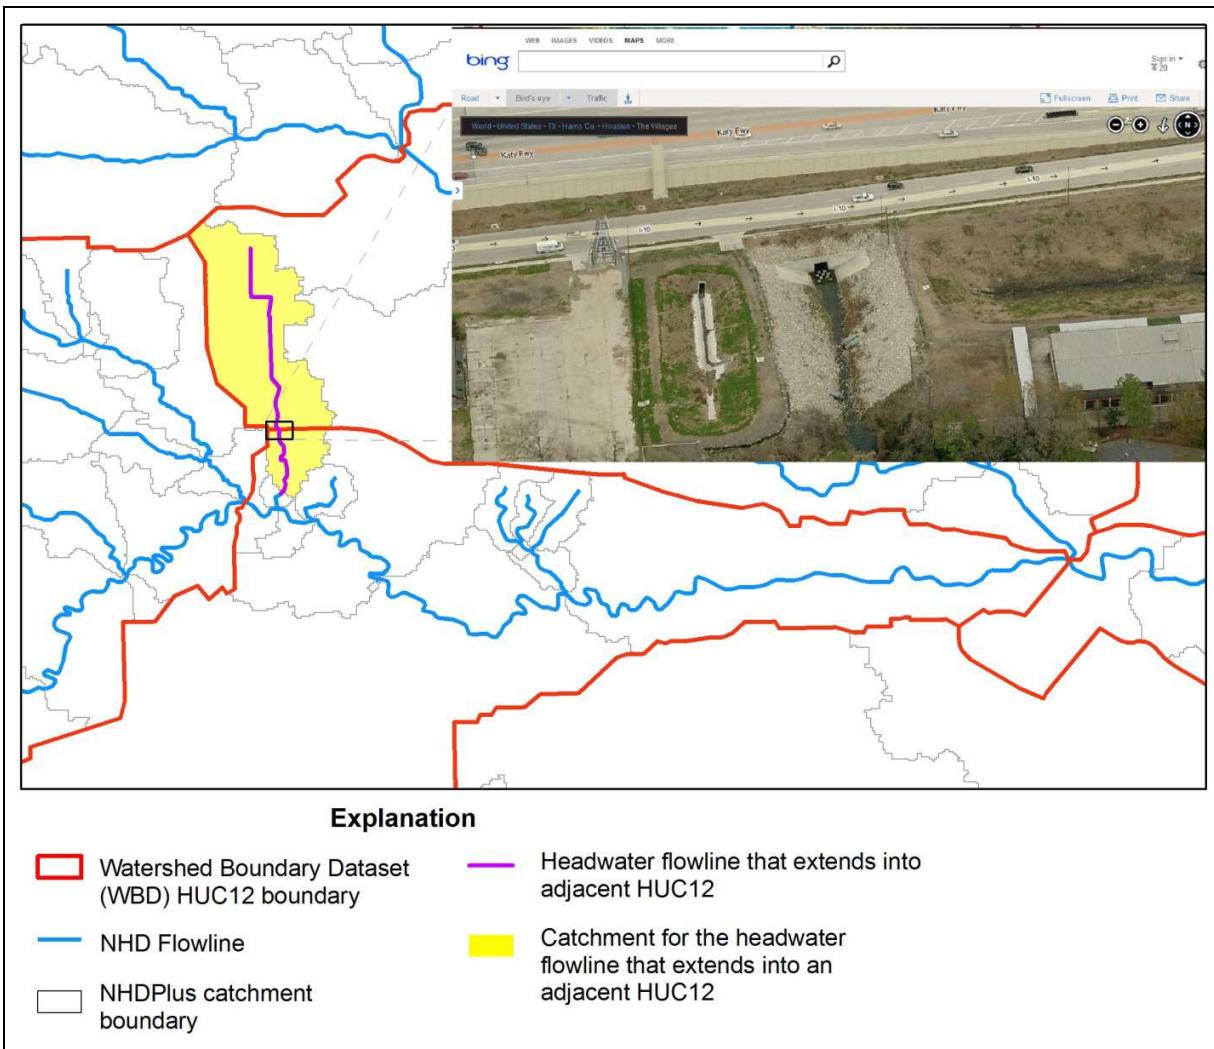


Figure F-6

Glossary

A

Artificial path A National Hydrography Dataset (NHD) flowline feature type that represents a flow-path through a waterbody in the surface water network of the NHD.

B

Burn Line – a line used to perform hydro-enforcement of the DEM during step 18 of the NHDPlusV2 Build/Refresh production. Burn lines are stored in BurnlineEvent feature class if they are NHDFlowline features or in BurnAddLine if they are additional lines which are not in NHDFlowline features.

C

Catchment The incremental drainage area for a linear hydrologic feature found in the National Hydrography Dataset (NHD).

Cumulative drainage area The catchment area for a specific flowline combined with the catchment areas for all upstream flowlines.

D

DEM – Digital Elevation Model. A raster (a grid of squares) representing elevation.

DEM flow-path displacement The horizontal positional offset between a mapped stream in the NHD and that of a synthetic stream derived from a digital elevation model.

Divergence-routed Accumulation – A method of accumulating attributes downstream along the surface water network features where the attribute is divided into portions at each flow split in the network, where the total of the portions is 100%.

Drainage-area boundary The polygon that defines the perimeter of a drainage area.

Drainage-area divide The boundary line between two different drainage areas along a topographic ridge.

F

Flowline A mapped stream segment or a path through a waterbody in the surface-water network of the National Hydrography Dataset. The basic unit of the NHD linear surface-water network.

NHDPlus Flow table (also PlusFlow) A database table that contains the interconnections between the NHD flowlines.

G

Geographic Names Information Systems (GNIS) A database that contains name and location information about more than two million physical and cultural features located throughout the United States and its territories.

H

Hydrologic Unit The Hydrologic Unit system is a standardized classification system developed by USGS in the mid 1970s. Hydrologic units are area boundaries organized in a nested hierarchy by size.

Hydrologic Unit Codes (HUC) – The Hydrologic Unit Coding system that sub-divides the U.S. into progressively smaller nested hydrologic units. The largest sub-divisions are assigned a 2-digit code from 01 through 22. 4-digit codes sub-divide the 2-digit areas. 6-digit codes sub-divide the 4-digit areas. This subdivision continues into 8, 10, and 12-digit coded areas. See <http://pubs.usgs.gov/tm/tm11a3/>.

N

National Elevation Dataset (NED) A seamless elevation coverage of the conterminous United States, Hawaii, Alaska, and the island territories.

National Hydrography Dataset (NHD) A comprehensive set of digital spatial data representing the surface water of the United States using common features such as lakes, ponds, streams, rivers, canals, and oceans.

National Water Information System (NWIS) A principal repository of national water resources data.

NHDPlus An integrated suite of application-ready geospatial datasets that incorporate many of the best features of the National Hydrography Dataset (NHD), the National Elevation Dataset (NED), the National Land Cover Dataset (NLCD), and the Watershed Boundary Dataset (WBD).

NHD Reach (also Reach) A uniquely identified linear feature that consists of one or more flowlines.

R

Raster A digital computer format for representing an image or mapped data information. The structure consists of data stored in a rectangular grid array of pixels. Synonymous with grid.

Reach (also NHD Reach) A uniquely identified linear feature that consists of one or more flowlines.

Reach code A unique, permanent identifier in the National Hydrography Dataset.

S

SPARROW - a modeling tool for the regional interpretation of water-quality monitoring data. The model relates in-stream water-quality measurements to spatially referenced characteristics of watersheds, including contaminant sources and factors influencing terrestrial and aquatic transport. SPARROW empirically estimates the origin and fate of contaminants in river networks and quantifies uncertainties in model predictions. See <http://water.usgs.gov/nawqa/sparrow/>.

Stream burning Using a mapped stream network to trench a DEM to improve how accurately the DEM flow paths match the streams, to ensure DEM-derived catchment boundaries fit the stream network.

Streamflow The volume of water flowing past a fixed point in a fixed unit of time.

Stream segment (also see flowline) Part of a stream, often extending between tributary confluences

T

Total Upstream Accumulation – A method of accumulating attributes downstream along the surface water network features where the accumulated value at any NHDFlowline feature is the total amount of the attribute that is upstream of the network feature.

W

Walling Using a representation of the known drainage boundaries to build up or mathematically warp a DEM to improve how accurately catchment boundaries replicate known drainage boundaries.

Watershed Boundary Dataset (WBD) A base-line hydrologic drainage boundary framework, accounting for all land and surface areas of the United States.

References

- Canadian Digital Elevation Data (CDED) Web page
<http://www.geobase.ca/geobase/en/data/cded/description.html>
- Canadian National Hydro Network (NHN) Web page
<http://www.geobase.ca/geobase/en/data/nhn/description.html>
- Duan, Naihua, 1983, Smearing estimate: a non-parametric retransformation method: Journal of the American Statistical Association, v. 78, no. 383, p. 605–610.
- Falcone, James A., Carlisle, Daren M., Wolock, David M., and Meador, Michael R., 2010. GAGES: A stream gage database for evaluating natural and altered flow conditions in the conterminous United States. *Ecology* 91:621.
Online References: <http://www.esapubs.org/archive/ecol/E091/045/James.A.Falcone.Daren.M.Carlisle.David.M.Wolock.and.Michael.R.Medor.2010.GAGES.A.stream.gage.database.for.evaluating.natural.and.altered.flow.conditions.in.the.conterminous.United.States.Ecology.91:621.html>
- Hamon, W.R., 1961. Estimating Potential Evaporation. *Journal of the Hydraulics Division, Proceedings of American Society of Civil Engineers* 87:107-120.
- Hellwege, F., Maidment, D., and the Center for Research in Water Resources, *AGREE-DEM Surface Reconditioning System* (Austin: University of Texas, 1998).
<http://www.crwr.utexas.edu/gis/gishyd98/quality/agree/agree.htm>
- Jobson, H. E., *Prediction of Traveltime and Longitudinal Dispersion in Rivers and Streams*, U.S. Geological Survey Water Resources Investigations Report 96-4013 (1996), U.S. Geological Survey.
- McCabe, G. J., and D. M. Wolock (2011), Independent effects of temperature and precipitation on modeled runoff in the conterminous United States, *Water Resour. Res.*, 47, W11522, doi:10.1029/2011WR010630.
- McKenney, D.W., Papadopol, P., Campbell, K.L., Lawrence, K.M., Hutchinson, M.F., 2006, "Spatial models of Canada- and North America-wide 1971/2000 minimum and maximum temperature, total precipitation and derived bioclimatic variables," *Frontline Technical Notes 106*, Natural Resources Canada, Great Lakes Forestry Centre, Sault St. Marie, Ontario, 9 p.
- National Elevation Dataset (NED) Web page <http://ned.usgs.gov/>
- National Hydrography Dataset (NHD) Web page <http://nhd.usgs.gov/>
- National Watershed Boundary Dataset (WBD) Web page
<http://www.ncgc.nrcc.usda.gov/products/datasets/Watershed/>
- Natural Resources Canada, 2008, *Atlas of Canada 1,000,000 National Frameworks Data, Hydrology - Drainage Areas, V6.0* Ottawa, Ontario, Canada. Online Linkage:
<http://geogratis.gc.ca/geogratis/en/option/select.do?id=87B4BE8F-C67C-5545-80B5-AB6FC056149E>

PRISM Climate Group, Oregon State University, <http://www.prismclimate.org>, created 6 Dec 2006.

Saunders, W., "Preparation of DEMs for Use in Environmental Modeling Analysis," *Hydrologic and Hydraulic Modeling Support*, Maidment, D. and Djokic, D. [eds.], pp. 29-51 (Redlands, CA: Environmental Systems Research Institute, Inc., 2000).

Vogel, R.M., Wilson, I.W., and Daly, C., "Regional Regression Models of Annual Streamflow for the United States," *Journal of Irrigation and Drainage Engineering* Vol. 125, No. 3, pp. 148-157, 1999).
