


UnMapper user guide

UnMapper **recreates a physical LED rig on the screens you actually have, and plays the real show onto it.** It reads a Resolume Arena **Advanced Output** — the same slice map driving the real wall — receives Resolume's outputs over **NDI**, and composites them onto a virtual reconstruction of the rig.

Two views of one stage, and they are not alternatives:

- **Emulation** — the whole rig recreated flat, one canvas pixel per LED. Each connected display shows a cropped region, so a grid of monitors becomes the wall.
- **Previz** — the same panels at their positions in 3D, through a camera.

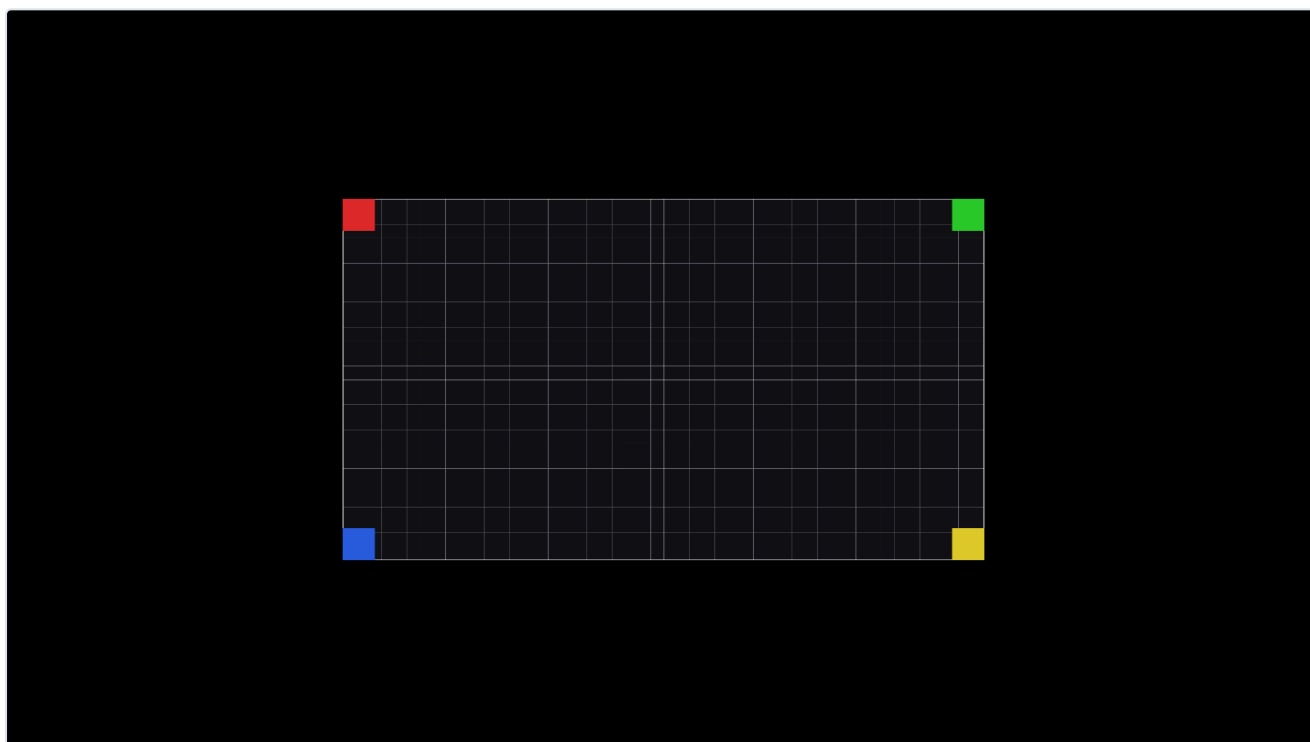

An 11-panel rig in the previz view, rendered by `unmapper render --previz` — the same stage the window further down is editing. Both views are fed by the same slice map and the same frames, so what you see in one is what the other is showing.

Before you rely on this: the pipeline is built and verified end to end on real hardware — a real Arena 7.27 file, a live NDI sender at 50 fps, a real GPU — with the render paths checked by **pixel readback rather than by eye.**


What that does not cover: **it has never run on a real LED wall or in a venue**, several GUI widgets are unexercised, and there is **no Syphon or Spout publishing, so NDI is the only way out.**

Built with AI assistance.

The workflow

The GUI is the intended way in:

```
cargo run -p unmapper-gui
```

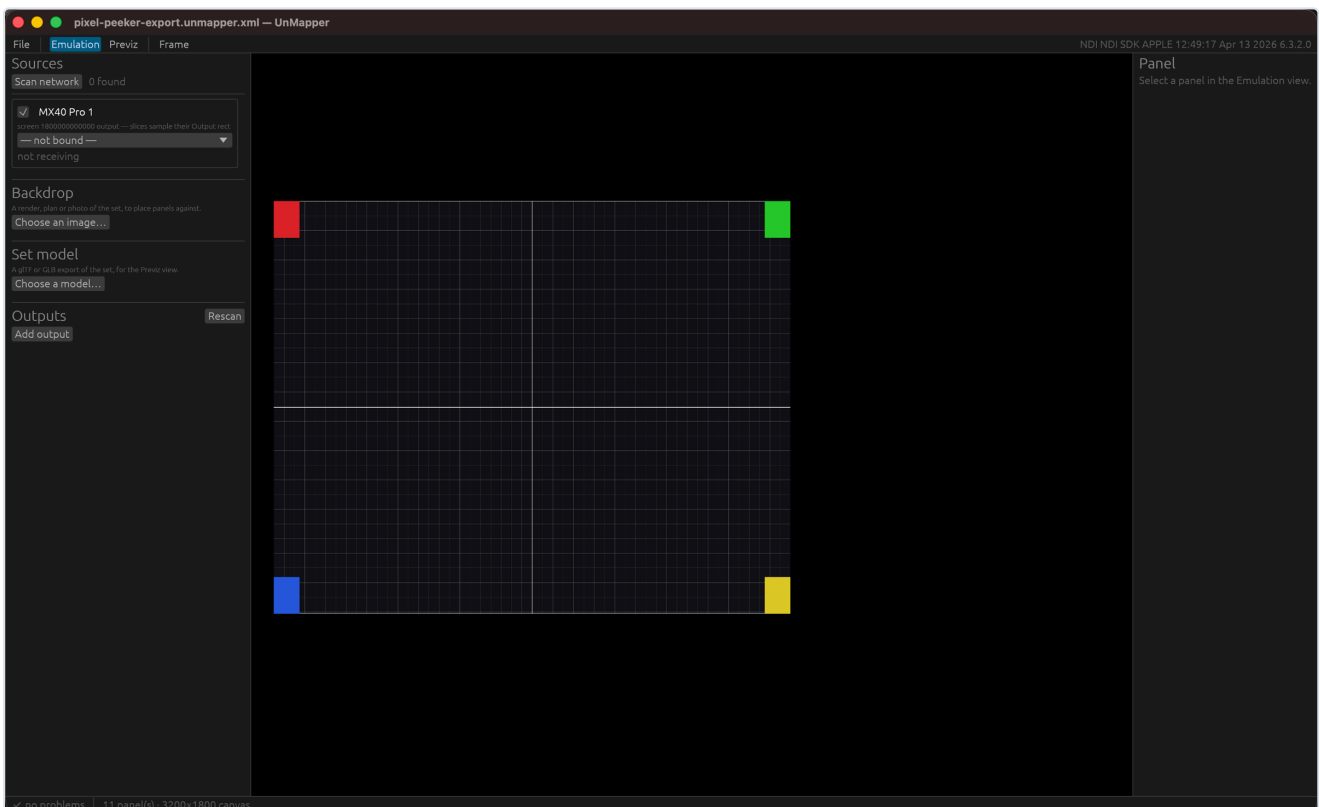

An 11-panel rig imported straight from a Resolume Advanced Output, with every source defaulted to the built-in test pattern — no Resolume and no NDI sender involved. The source reads "not bound / not receiving", which is what an offline layout session looks like.

1. **Import** the Resolume Advanced Output file.
2. **Pick an NDI source** for each Resolume output.
3. **Drag the panels** into the shape of your rig.

4. **Save** the stage.

It also opens a stage directly:

```
cargo run -p unmapper-gui -- rig.unmapper.xml
```

Everything is available headlessly too — `sources`, `import`, `bind`, `check`, `render`:

```
cargo run -p unmapper-app -- sources
cargo run -p unmapper-app -- import "AdvancedOutput.xml" -o rig.unmapper.xml
cargo run -p unmapper-app -- bind rig.unmapper.xml --source 0 --ndi "STUDIO (Arena - Screen 1)"
cargo run -p unmapper-app -- render rig.unmapper.xml -o wall.png
cargo run -p unmapper-app -- render rig.unmapper.xml --previz -o previz.png --size 1280x720
```

The one thing to get right

There are five coordinate spaces, and mixing two of them up is **the difference between a correct wall and a plausible-looking wrong one**:

Space	Units	Holds
Composition	px	Resume's composition raster. A slice's <code>input</code> quad.
Screen raster	px	One Resume output. A slice's <code>output</code> quad.
Virtual raster	px	UnMapper's emulation canvas — the whole rig, flat. A panel's <code>layout</code> .
Stage	metres	The physical set, Y up. A panel's <code>placement</code> .
Display	px	A connected monitor. An output's <code>region</code> crops the canvas into one.

A slice's pixels live in *two* places, and which one to sample depends entirely on what the sender is sending.

- Resume sending its **whole composition** → sample the slice's `input` quad.
- Resume sending **one feed per screen** (the usual show configuration) → that feed already has the slicing applied, so sample the `output` quad.

`SourceSpace` records which. Get it wrong and everything still renders — just wrongly.

Working with nothing plugged in

A source does not have to be NDI. Two offline kinds exist so a rig can be laid out and checked with no Resume, no network and often no venue:

- **Test pattern** — a grid with four differently-coloured corners and a centre cross, sized to whatever the slice map says the screen is. **Because the corners differ, a slice that is flipped, rotated or sampling the wrong region is obvious at a glance** rather than plausible-looking.
- **Still** — any image, for laying a rig out against real artwork.

The test pattern is a **geometry** aid, not a colour reference. Use [test-card](#) for colour.

Describing the set

Two ways, and they are not alternatives — an operator with both should not have to choose.

A 2D mockup — a render, plan or photo of the display surface, sitting behind the panels on the emulation canvas so they can be dragged onto the places they occupy in it.

It is an editing aid and never content. The viewport draws it; the canvas that outputs crop from does not. Fade it with the opacity slider so panels stay readable over a busy render.

A 3D set model — glTF or GLB, from Blender, Cinema 4D, SketchUp or anything else. **Only geometry is read**; materials, cameras and animation are ignored, because this is context for judging where the walls sit, not a render. Nested node transforms are baked at load, so a truss rotated inside a rig group arrives where the file says it is.

CAD is usually in millimetres — there is a one-click `mm→m` button for exactly that.

Panel shapes

A panel is a **flat** rectangle unless you say otherwise, and most are — one physical LED tile is rigid and flat. But UnMapper imports **one panel per slice**, and a slice routinely covers a whole run of tiles: a curved upstage wall, a wrapped column, a folded corner. Those are exactly the rigs the packed Advanced Output layout hides, and showing them flat is the thing previz is meant to fix.

Select a panel and pick its shape in the inspector.

Arc bends the panel about its vertical centre line. `Sweep°` is the total angle it subtends — **positive sweeps both ends away from the audience**, which is the common concave wrap; negative bulges towards them. The panel's **width is preserved as arc length**, so curving a wall does not silently make it narrower, and the radius, chord and depth are reported beside the sweep so you can check the shape against a drawing.

Lattice is the escape hatch for a shape no parameter describes — a fold, a stepped run, something someone measured. Pick the number of columns and rows, then **drag the points in the Previz view**: click one to select it, drag it to move it. A dragged point moves in the plane facing the

camera, so **orbit first, then drag** — the view you pull from is the view you pull in. Fine values go in the inspector's X/Y/Z boxes, in panel-local metres with +Z towards the audience.

Changing shape keeps the shape. Switching an arc to a lattice samples the arc, so the picture does not move; changing a lattice's columns or rows resamples it rather than starting again. Only **Flatten** and **Flat** throw the shape away.

A curved surface never reaches the emulation canvas. Emulation stays flat and pixel-exact — one canvas pixel per LED — because that canvas is what stands in for the wall on a bank of monitors. Shape is previz's business, and only previz's.

Outputs

The canvas is rendered **once** per frame at full resolution; every output then blits the region it stands in for. Ten monitors cost one render and ten blits, and **none of them can disagree about which frame they are showing**.

New outputs are created windowed, not fullscreen — a fullscreen window that opens on the wrong monitor is unpleasant to get rid of. Tick the box once it looks right.

Closing an output window disables that output rather than quitting the app.

The crop is sampled nearest, so a region that is not the monitor's own size looks blocky rather than being quietly interpolated into something plausible. That is deliberate: blocky tells you the geometry is wrong, smooth hides it.

NDI output publishes a canvas region, or the previz camera, as an NDI source. There is no Syphon or Spout — NDI is the only way out.

The stage file

A stage saves as XML you can read, diff and hand-edit, and the round trip is lossless. That makes a stage reviewable in a pull request and repairable in a text editor at 2am, which is worth more than a binary format's convenience.

Troubleshooting

Symptom	Cause
Wall renders but the content is wrong within each panel	Almost always the <code>input / output</code> quad question — check <code>SourceSpace</code> against what Resolume is actually sending.
A panel is flipped or rotated	Use a test-pattern source: the four differently-coloured corners make it obvious immediately.
Output looks blocky	The crop region is not the monitor's own size. That is nearest sampling telling you so, on purpose.
Fullscreen window on the wrong monitor	New outputs start windowed for this reason — place it, then tick fullscreen.
Closing an output window seemed to do nothing	It disabled that output. The app keeps running.
The backdrop appears in the viewport but not on the output	Correct — it is an editing aid and never reaches an output.
A 3D model arrives enormous or microscopic	CAD is usually in millimetres. Use the <code>mm→m</code> button.
Model imported with no materials	Only geometry is read, deliberately.
Looking for Syphon or Spout	Not built. Use the NDI output.

See also

- [README](#) — the status table, the five coordinate spaces and the stage-file schema

UnMapper · guide updated 2026-08-31 · stoatworks-labs.com/software/unmapper/

Latest version of this guide: stoatworks-labs.com/software/unmapper/guide/ · Source and issues: <https://github.com/stoatworks-labs/UnMapper>