

Ver 1.09, July 2024

BluNor BT40F is a powerful, highly flexible, ultra low power Bluetooth Low Energy (BLE) using Nordic nRF5340 SoC. With a dual core ARM Cortex™ M33 MCU, embedded 2.4GHz multi-protocol transceiver, and an integrated PCB trace antenna or u.FL connector for an external antenna. It allows faster time to market with reduced development cost. BT40E is certified with ANT060, a 6dBi antenna in all regions. It has the best receiver sensitivity in worldwide market.

No external component needed to minimize host PCB area: Both 32 MHz and 32.768 KHz, -40°C to +105°C, 20 PPM crystals are integrated. DCDC inductors for VDD and VDDH are integrated.

Specifications:

- nRF5340 QKAA, dual core ARM® Cortex M33
- Application Core
- 128/64 MHz Cortex M33 with FPU and DSP instructions
- 1MB flash, 512KB RAM
- 8KB 2-way set associate cache
- ARM® TrustZone® Cryptocell-312 co-processor
- Network core:
- 64 MHz Cortex M33 with 2KB instruction cache
- 256KB flash, 64KB RAM
- 2.6 mA in RX and 3.2 mA in 0dBm TX
- Receiver Sensitivity: -98 dBm at 1Mbps.
- TX power: programmable +3dBm to -20dBm
- BLE 5.3 data rate: 2Mbps, 1Mbps, 500kbps, 125kbps.
- IEEE 802.15.4 data rate: 250 Kbps
- 2.4 GHz proprietary data rate: 2 Mbps, 1 Mbps
- DCDC inductors for VDD, VDDH on board.
- Direct powered by Lithium batteries or USB.
- Serial Wire Debug (SWD)
- Over-the-Air (OTA) firmware update
- 48 General purpose I/O pins
- USB 2.0 full speed (12 Mbps) controller
- QSPI interface
- Type 2 NFC-A tag with wake-on field, Touch-topair support
- Programmable peripheral interconnect (PPI)

- 12 bit/200 Ksps ADC, 8 configurable channels.
- Up to 3x pulse width modulator (PWM)
- Audio peripherals: I²S, digital microphone interface (PDM)
- 5 x 32 bit timers with counter mode
- Up to 3x SPI masters/3x SPI slaves
- Up to 2x I²C compatible 2-wire masters/slaves
- 2x UART (CTS/RTS)
- Quadrature Demodulator (QDEC)
- 2x real time counters (RTC)
- Hybrid pins: 16 castellated and 45 LGA.
- Both 32 MHz and 32.768KHz crystals on board
- Integrated PCB trace antenna or u.FL connector
- Max TX power, BT40NE:+19.1 dBm conducted;
 +25.1 dBm radiated.
- Operation voltage: 1.7V to 5.5V
- Certified for Bluetooth and 802.15.4.
- QDID: 119517, 182626
- All modules support approtect features.
- Footprint upgradeable to <u>WT02C40C</u> Series BLE-WiFi 6 combo modules.

Application Examples

- BLE-LTE M.2 module:LN60E40F.
- Matter IoT gateways: MIG02C40F.
- BLE-LTE medical IoT gateway: **BLG40FB16**.
- BLE-LTE/WiFi/PoE IP65 gateway: LEW40E6P.
- BLE-LTE IP67 battery-powered gateway: **SL40F6**.

Model Summaries

module	BT40F	BT40	BT40E	BT40N	BT40NE
SoC	nRF5340 QKAA	nRF5340 QKAA	nRF5340 QKAA	nRF5340 + nRF21540	nRF5340 + nRF21540
Size	15x21x2.0mm	14x16x2.0mm	14x16x2.0mm	15x29.9x2.0mm	15x29.9x2.0mm
32 MHz,32.768 kHz crystals	Integrated	Integrated	Integrated	Integrated	Integrated
DCDC inductors,VDD,VDDH	Integrated	Integrated	Integrated	Integrated	Integrated
BT Antenna	PCB trace	PCB trace	u.FL	PA+PCB	PA+PCB+u.FL
Max TX, conducted, FCC	+3.4 dBm	+3.4 dBm	+3.4 dBm	+19.1 dBm	+19.1 dBm
Max TX, radiated, FCC	+4.3 dBm	0 dBm	+9.4 dBm	+20.0 dBm	+25.1 dBm
Operating temp.	-40°C to +105°C	-40°C to +105°C	-40°C to +105°C	-40°C to +105°C	-40°C to +105°C
FCC ID	X8WBT40F	X8WBT40F	X8WBT40F	X8WBT40N	X8WBT40N
ISED ID	4100A-BT40F	4100A-BT40F	4100A-BT40F	4100A-BT40N	4100A-BT40N
CE, RCM	Compliant	Compliant	Compliant	Compliant	Compliant
TELEC	201-210217/01	201-210217/01	201-210217/01	201-230324	201-230324
Evaluation board	EV-BT40F	EV-BT40	EV-BT40E	EV-BT40NE	EV-BT40NE
Availability	Production	Production	Production	Production	Production



Table Of Contents

1. Introduction	3
BT40F Block Diagram	3
BT40N, BT40NE Block Diagram	
2. Codes Development Using Nordic Tools	
Over-The-Air DFU	
nRF Connect SDK	
Development Tools	6
3. Product Descriptions	
Block Diagram of nRF5340	
Mechanical Drawings	
Pin Assignments of BT40	
Pin Functions	
Using Internal Load Capacitors for the High Frequency Oscillator	18
Mounting BT40F Module on the Host PCB	
Host Board Design for Low Cost or Long Range	21
Settings for Certification Testings	21
Control Nordic nRF21540 Power Amplifier	22
GPIO mode	22
4. BT40F Evaluation Board	23
Nordic Development Tools	24
Android OS Apps	24
iOS Apps	24
EV-BT40F EvaluationBoard Schematics	25
Suggestion for Battery Power Application	26
5. Miscellaneous	27
Soldering Temperature-Time Profile for Re-Flow Soldering	27
Cautions, Design Notes, and Installation Notes	27
Packaging and Lot Number	31
FCC Label	31
Revision History	32
Contact Us	33




Ver 1.09, July 2024

1. Introduction

BluNor BT40F Series are powerful, highly flexible, ultra low power wireless modules using Nordic nRF5340 SoCs. With a dual core ARM CortexTM M33 MCU, embedded 2.4GHz multi-protocol transceiver, and an integrated antenna, it allows faster time to market with reduced development cost.

BT40F Block Diagram

The following is a block diagram of BT40F. Antenna circuit and main clock are integrated. All 48 GPIOs of nRF5340 can be accessed from main board. Connection to an external NFC (Near Field Communication) antenna is provided.

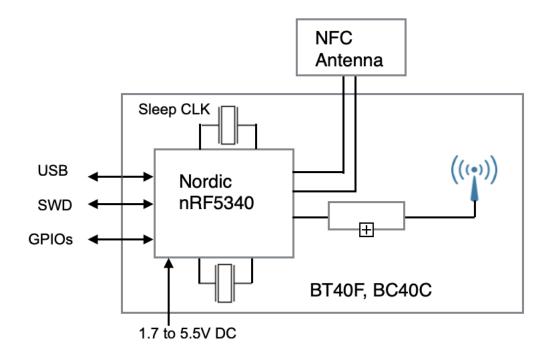

BlurNor BT40F is a sister module of BT840F, an nRF52840 module. The physical size is the same.

There are 3 modules in the BT40F Series.

BT40F

- Uses an nRF5340 QIAA with dual core Cortex M33 MCU
- Integrated high performance PCB trace antenna.
- Size: 15x21x2.0mm

BT40

- Uses an nRF5340 QIAA with dual core Cortex M33 MCU
- Integrated PCB trace antenna.
- Size: 14x16x2.0mm.

BT40F

- Uses an nRF5340 QIAA with dual core Cortex M33 MCU
- An u.FL connector for external antenna.
- Size: 14x16x2.0mm.
- Passes FCC, ISED, CE, RCM, TELEC testings with ANT060, a 6 dBi antenna.










BT40E with ANT060 has the best receiver sensitivity.



BT40N, BT40NE Block Diagram

A Nordic nRF21540 power amplifier is integrated with nRF5340 SoC in BT40N and BT40NE modules. BT40NE has an integrated high performance PCB trace antenna and an u.FL connector for an external antenna.

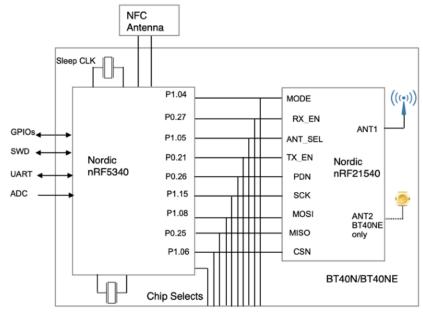

Other SPI Devices

BT40N

- Uses an nRF5340 QKAA with dual core Cortex M33 MCU
- Integrated Nordic nRF21540 power amplifier.
- · Integrated high performance PCB trace antenna.
- Size: 15x29.9x2.0mm.





Ver 1.09, July 2024

BT40NE

- Uses an nRF5340 QKAA with dual core Cortex M33 MCU
- Integrated Nordic nRF21540 power amplifier
- Integrated high performance PCB trace antenna
- An u.FL connector for external antenna
- Size: 15x29.9x2.0mm.





2. Codes Development Using Nordic Tools

Development tools from Nordic and other third party development tools recommended by Nordic should be used.

Over-The-Air DFU

The nRF5340 is supported by an Over-The-Air Device Firmware Upgrade (OTA DFU) feature. This allows for in the field updates of application software and SoftDevice.

nRF Connect SDK

nRF Connect SDK is a scalable and unified software development kit for building products based on all our nRF52, nRF53 and nRF91 Series wireless devices. It offers developers an extensible framework for building size-optimized software for memory-constrained devices as well as powerful and complex software for more advanced devices and applications. It integrates the Zephyr RTOS and a wide range of samples, application protocols, protocol stacks, libraries and hardware drivers.

For developing Bluetooth Low Energy, Thread and Zigbee products, the nRF Connect SDK contains all needed software, including protocol stacks. For developing cellular IoT products it contains everything except the LTE modem firmware that must be downloaded separately from the nRF9160 SiP product page. See the cellular IoT software for more details.

nRF Connect SDK also offers an unique integration of HomeKit Accessory Development Kit for developing products using both HomeKit over Thread and HomeKit over Bluetooth Low Energy. It is a highly optimized solution that enables battery-powered products with both the HomeKit Accessory Protocol (HAP) and application firmware running on a single chip. MFi licensees can get access to the HomeKit repository by contacting us via Nordic DevZone private ticket.

nRF Connect SDK offers a single code base for all our devices and software components. It simplifies porting modules, libraries and drivers from one application to another, thus reducing development time. By enabling developers to pick and choose the essential software components for their application, high memory efficiency is guaranteed.

nRF Connect SDK is publicly hosted on GitHub, offers source code management with Git and has free SEGGER Embedded Studio IDE support. Nordic runs continuous integration tests on the nRF Connect SDK code to ensure robust and secure production quality code.

Development Tools


Nordic Semiconductor provides a complete range of hardware and software development tools for the nRF53 Series devices. nRF53 DK board is recommended for firmware development.

Nordic software development tools can be downloaded.

3. Product Descriptions

Block Diagram of nRF5340

The following is a block diagram of Nordic nRF5340 Bluetooth Low Energy (BLE) SoC. Please visit Nordic website for <u>full description and product specifications</u>.

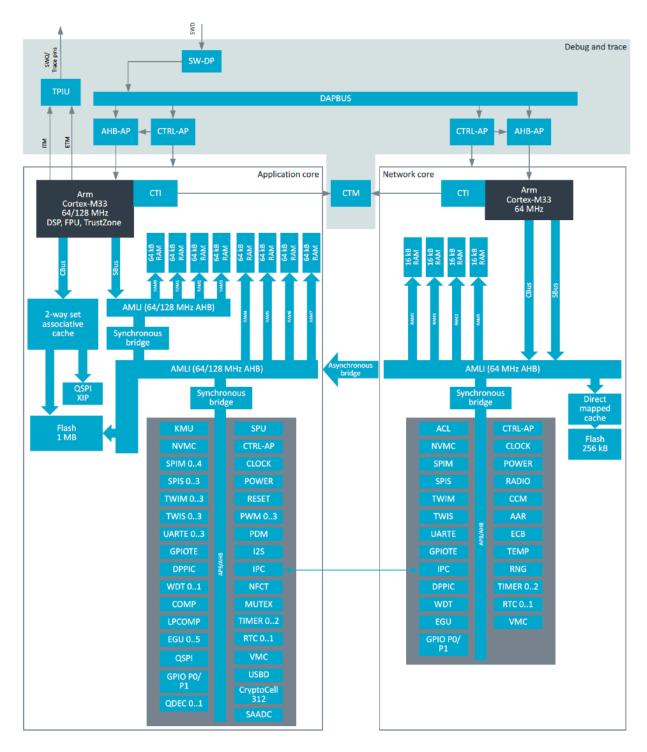

nRF5340 is a wireless ultra-low power multiple core System on Chip (SoC) integrating two fully programmable Arm Cortex M33 processors, advanced security features, a range of peripherals, and a multiprotocol 2.4 GHz



transceiver. The transceiver supports Bluetooth low energy, ANTTM, and 802.15.4 and allows the implementation of proprietary 2.4 GHz protocols.

The two Arm Cortex M33 processors share the power, clock, and peripheral architecture with Nordic Semiconductor nRF51, nRF52, and nRF91 Series of PAN/LAN SoCs, ensuring minimal porting efforts. The application core is a full-featured Arm Cortex M33 processor including DSP instructions and FPU and running at up to 128 MHz with 1MB of flash and 512 KB of RAM. The option to run the application processor at 64 MHz allows the CPU to increase energy efficiency. The network core is an Arm Cortex M33 processor with a reduced feature set, designed for ultra-low power operation. It runs at a fixed 64 MHz frequency and contains 256 KB of flash and 64 KB of RAM.

The peripheral set offers a variety of analog and digital functionality enabling single chip implementation of a wide range of applications. Arm trustZone technology, Arm cryptoCell-312, and supporting blocks for ysytem protection and key management are embedded for the advanced security needed for IoT applications.




Mechanical Drawings

Mechanical drawings of BT40F, BT40, and BT40E is identical to that of BT840F, BT840, and BT840E, respectively.

Two types of pins are available to meet different application requirements.


- 16 castellated pins for application needing limited number of IOs. SMT equipment is not required for soldering castellated pins.
- 45 LGA (Land Grid Array) pins to access all 48 GPIOs of nRF52840 when needed.

The following is BT40F mechanical drawings, top view.

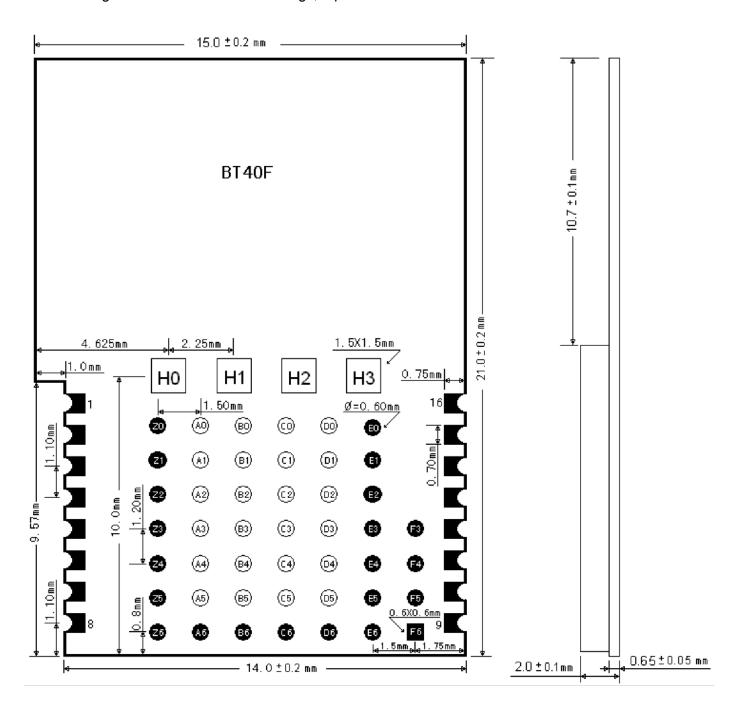




The following is BT40 mechanical drawings, top view.

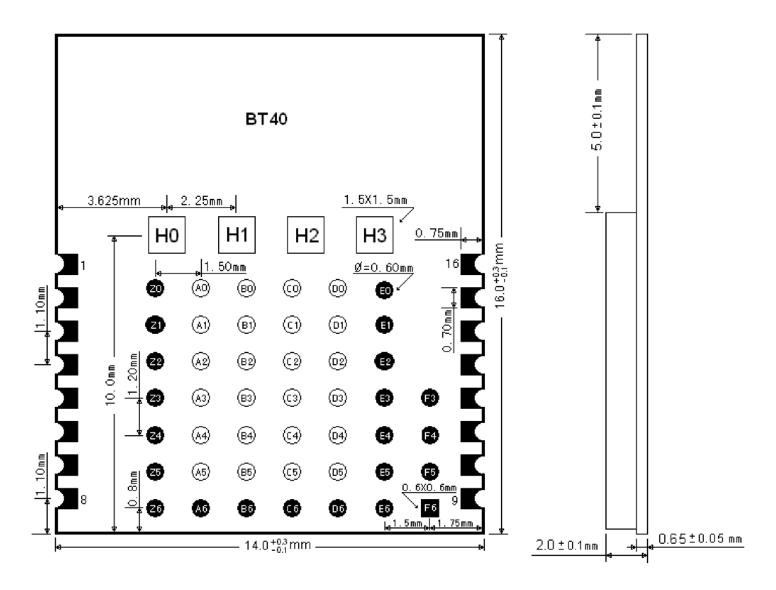




The following is BT40E mechanical drawings, top view.

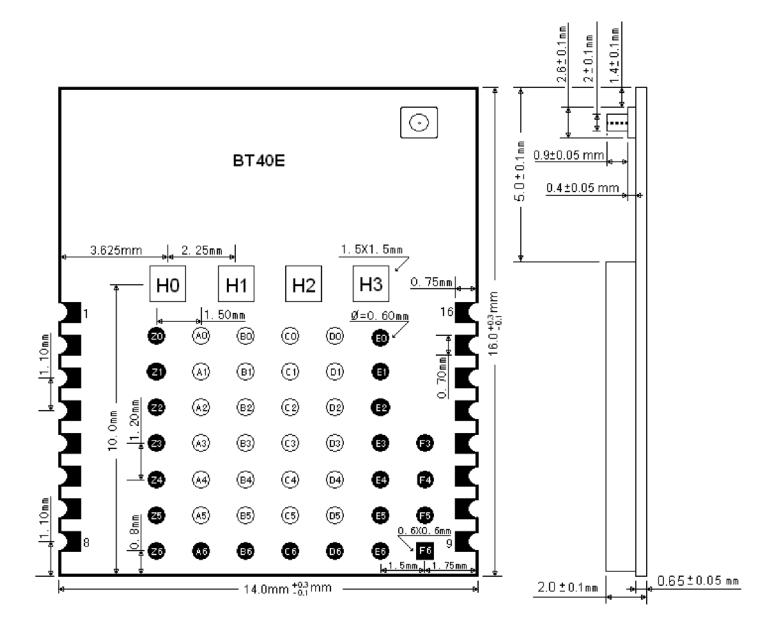




The following is BT40N mechanical drawings.

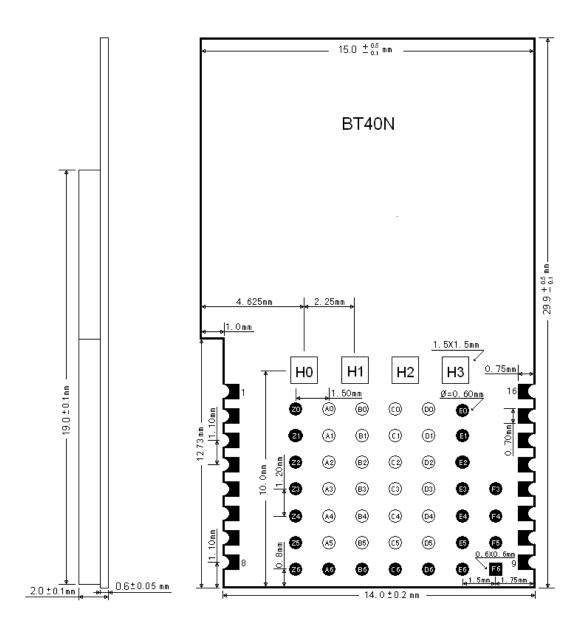



The following is BT40NE mechanical drawing.

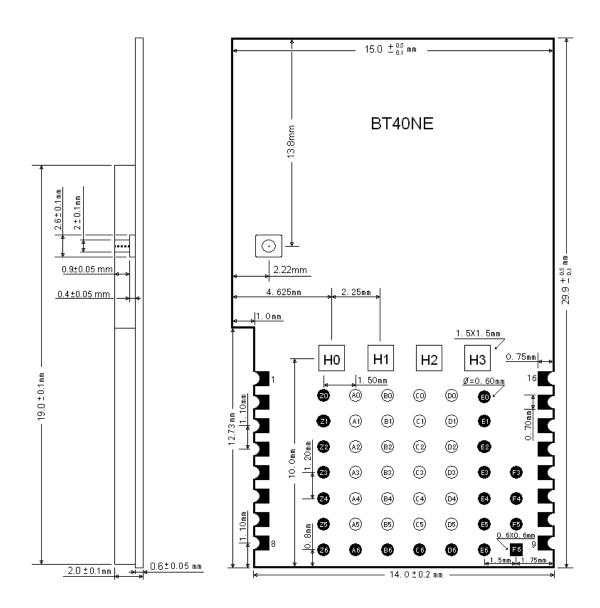




Pin Assignments of BT40

The followings are BT40 pin assignment. Pin functions are in a table in next section. Please refer to Nordic nRF5340 Product Specifications for detailed descriptions and features supported.


BT840F and BT40F have compatible footprints. Pin assignments are below. Firmware configuration is required to upgrade module on the PCB.

BT40F footprints are compatible with nRF5340 and nRF7002, BLE-WiFi 6 combo module, WT02C40C Series.

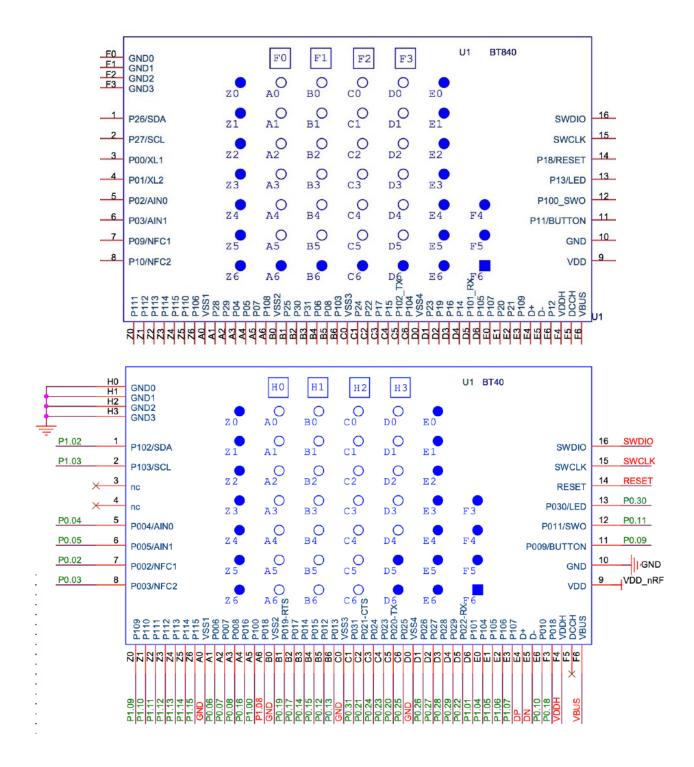



BT40N and BT40NE pin assignments.

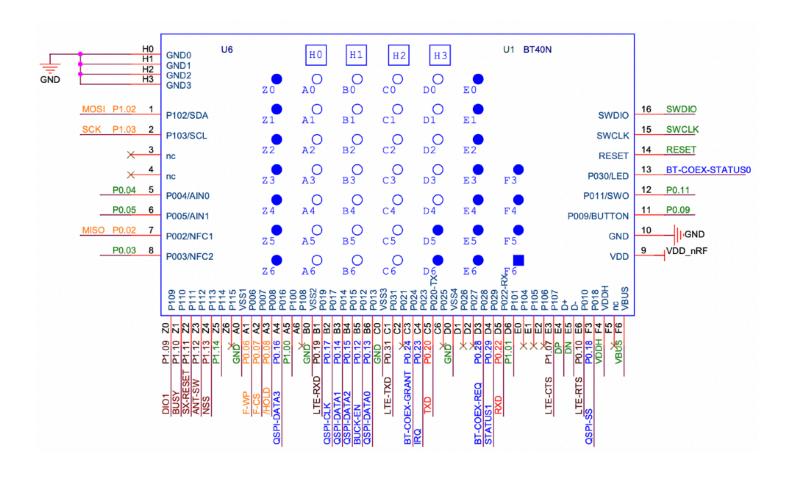



Pin Functions

BT40N/NE has the same soldering pads as BT40F. It uses 9 GPIO pins internally to control the power amplifier, nRF21540. These pins are described in red color in the **Descriptions** column. The SPI pins may be shared with other SPI devices. Avoid using these pins as GPIO pins if you need Bluetooth range upgrade.

BT840	52840		BT40F	nRF5340		lo ii you noou Diaciocan lai igo apgilaaci
pin#	pin#	pin name	pin#	pin#	pin name	Descriptions
1	G1	P0.26/SDA	1	AE1	P1.02	GPIO, configured as I2C SDA on EV board
2	H2	P0.27/SCL	2	AF2	P1.03	GPIO, configured as I2C SCL on EV board
3	D2	P0.00/XL1	3	N1	NC	BT840F, external 32.768 KHz crystal connection; BT40F, NC, 32.768 KHz crystal embedded.
4	F2	P0.01/XL2	4	R1	NC	BT840F, external 32.768 KHz crystal connection; BT40F, NC, 32.768 KHz crystal embedded.
5	A12	P0.02/AIN0	5	V2	P0.04/AIN0	GPIO, Analog input
6	B13	P0.03/AIN1	6	Y2	P0.05/AIN1	GPIO, Analog input
7	L24	P0.09/NFC1	7	W1	P0.02/NFC1	GPIO, NFC antenna connection
8	J24	P0.10/NFC2	8	AA1	P0.03/NFC2	GPIO, NFC antenna connection
9	B1	VDD	9	A19	VDD	DC supply 1.7V to 3.6V
10	B7	GND	10	A25	VSS	Ground
11	T2	P0.11	11	AJ1	P0.09/MOSI	GPIO; BT40F, high speed SPI_MOSI.
12	AD22	P1.00	12	AK4	P0.11	GPIO
13	AD8	P0.13	13	B24	P0.30	GPIO
14	AC13	P0.18/RESET	14	AC31	/RESET	GPIO, reset with internal pull up, active low.
15	AA24	SWDCLK	15	W31	SWDCLK	Serial Wire Debug clock input
16	AC24	SWDIO	16	AA31	SWDIO	Serial Wire Debug I/O
Z0	B19	P1.11	Z0	AK26	P1.09	GPIO
Z1	B17	P1.12	Z1	R31	P1.10	GPIO
Z2	A16	P1.13	Z2	B20	P1.11	GPIO;
Z3	B15	P1.14	Z3	B18	P1.12	GPIO;
Z4	A14	P1.15	Z4	A17	P1.13	GPIO;
Z5	A20	P1.10	Z5	B16	P1.14	GPIO
Z6	R24	P1.06	Z6	B14	P1.15	GPIO, Connected to nRF21540 SCK pin internally for BT40N.
A0		GND	A0	A25	VSS	Ground
A1	B11	P0.28/AIN4	A1	AB2	P0.06/AIN2	GPIO, Analog input
A2	A10	P0.29/AIN5	A2	AD2	P0.07/AIN3	GPIO, Analog input
A3	J1	P0.04/AIN2	A3	AH2	P0.08/SCK	GPIO, BT840F, analog input; BT40F, high speed SPI clock
A4	K2	P0.05/AIN3	A4	AL9	P0.16/IO3	GPIO, BT840F, analog input; BT40F, high speed SPI IO3
A5	M2	P0.07	A5	M2	P1.00	GPIO
A6	P2	P1.08	A6	AL23	P1.08	GPIO, Connected to nRF21540 MOSI pin internally for BT40N.
В0		GND	В0		VSS	Ground
B1	AC21	P0.25	B1	AL13	P0.19	GPIO
B2	В9	P0.30/AIN6	B2	AK12	P0.17/SCK	GPIO, BT840F, analog input; BT40F, QSPI clock.
В3	A8	P0.31/AIN7	В3	AK8	P0.14/IO1	GPIO, BT840F, analog input; BT40F, QSPI IO1
B4	L1	P0.06	B4	AK10	P0.15/IO2	GPIO, NC for BT840X; BT40F, QSPI IO2



/er	1.09,	July	2024

B5	N1	P0.08	B5	AK6	P0.12/DCX	GPIO, NC for BT840X; BT40F, high speed SPI DCX.
B6	V23	P1.03	B6	AL5	P0.13/IO0	GPIO, BT40F, QSPI IO0
C0		GND	C0		VSS	Ground
C1	AD20	P0.24	C1	B22	P0.31	GPIO
C2	AD18	P0.22	C2	AL15	P0.21	GPIO; Connected to nRF21540 TX_EN pin internally for BT40N.
C3	AD12	P0.17	C3	AL27	P0.24	GPIO;
C4	AD10	P0.15	C4	AK20	P0.23	GPIO
C5	W24	P1.02	C5	AK16	P0.20	GPIO
C6	U24	P1.04	C6	AK28	P0.25/AIN4	GPIO, BT40F, analog input; Connected to nRF21540 MISO pin internally for BT40N.
D0		GND	D0		VSS	Ground
D1	AC19	P0.23	D1	AL29	P0.26/AIN5	GPIO, BT40F, analog input; Connected to nRF21540 PDN pin internally for BT40N.
D2	AC15	P0.19	D2	AK30	P0.27/AIN6	GPIO, NC for BT840X/XE; BT40F, analog input; Connected to nRF21540 RX_EN pin internally for BT40N.
D3	AC11	P0.16	D3	AE31	P0.28/AIN7	GPIO, BT40F, analog input.
D4	AC9	P0.14	D4	U31	P0.29	GPIO
D5	Y23	P1.01	D5	AK18	P0.22	GPIO
D6	T23	P1.05	D6	P2	P1.01	GPIO
E0	P23	P1.07	E0	AL19	P1.04	GPIO; Connected to nRF21540 MODE internally for BT40N.
E1	AD16	P0.20	E1	AK22	P1.05	GPIO; Connected to nRF21540 ANT-SEL internally for BT40N.
E2	AC17	P0.21	E2	AL21	P1.06	GPIO; Connected to nRF21540 CSN pin internally for BT40N.
E3	R1	P1.09	E3	AK24	P1.07	GPIO
E4	AD6	D+	E4	B2	D+	USB D+
E5	AD4	D-	E5	B4	D-	USB D-
E6	U1	P0.12	E6	AK2	P0.10/MISO	GPIO, BT40F, high speed SPI MISO
F0			H0			Ground pad
F1			H1			Ground pad
F2			H2			Ground pad
F3			H3			Ground pad
			F3	AK14	P0.18/CSN	GPIO, BT40F, QSPI chip select
F4	Y2	VDDH	F4	E1	VDDH	High Voltage Power Supply, 2.5V to 5.5V
F5	AB2	DCCH	F5	J1	NC	BT840F, DCDC converter output; BT40F, No connect, L,C circuit embedded.
F6	AD2	VBUS	F6	A5	VBUS	5V DC power for USB 3.3V regulator



Ver 1.09, July 2024


Using Internal Load Capacitors for the High Frequency Oscillator

The external load capacitors for the 32MHz crystal are not mounted. An Epson or equivalent +/-10 PPM crystal is connected to XC1 and XC2 pins. The Bluetooth signal frequencies are within specifications if the internal load capacitors are not enabled. Use the following procedures to set the internal load capacitors to:

- 11 pF for BT40,BT40E, and BT40F. The Bluetooth signal frequency is measured to be within 5 PPM at 25°C.
- 12.5 pF for BT40N and BT40NE. The Bluetooth signal frequency is measured to be within 5 PPM at 25°C.

The internal load capacitors can be programmed from 7.0 pF to 20 pF in 0.5 pF steps. The addresses and description of registers for programming the value of load capacitors are from the Nordic nRF5340 Product Specifications.



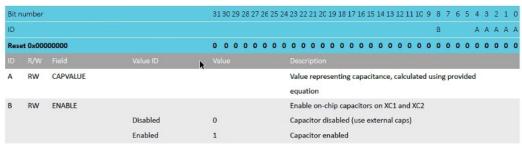

Register	Offset	Security	Description	
XOSC32MCAPS	0x5C4		Programmable capacitance of XC1 and XC2	Retained
XOSC32KI.BYPASS	0x6C0		Enable or disable bypass of LFCLK crystal oscillator with external clock source	Retained
XOSC32KI.INTCAP	0x6D0		Control usage of internal load capacitors	Retained

To program the load capacitance, settings in the file cpu_app prj.conf:

CONFIG SOC ENABLE LFXO=y CONFIG_SOC_LFXO_CAP_INT_7PF=y CONFIG_SOC_HFXO_CAP_INTERNAL=y CONFIG SOC HFXO CAP INT VALUE X2=25 CONFIG_BUILD_WITH_TFM=y

X2=14 7pf 0x400045c4=0x102## X2=15 7.5pf 0x400045c4=0x103 ## X2=16 8pf 0x400045c4=0x104 ## X2=17 8.5pf 0x400045c4=0x105 0x400045c4=0x106 ## X2=18 9pf



```
## X2=19 9.5pf 0x400045c4=0x107
## X2=20 10pf
                   0x400045c4=0x107
## X2=21 10.5pf 0x400045c4=0x108
## X2=22 11pf 0x400045c4=0x109
                                //BT40, BT40F, BT40E default
## X2=23 11.5pf 0x400045c4=0x10A
## X2=24 12pf 0x400045c4=0x10B
## X2=25 12.5pf 0x400045c4=0x10C //BT40N, BT40NE default
## X2=26 13pf 0x400045c4=0x10D
## X2=27 13.5pf 0x400045c4=0x10E
## X2=28 14pf 0x400045c4=0x10F
## X2=29 14.5pf 0x400045c4=0x110
## X2=30 15pf 0x400045c4=0x111
## X2=31 15.5pf 0x400045c4=0x112 //BC40C, BC40M, BC40E default
## X2=32 16pf 0x400045c4=0x113
```

Alternatively, the load capacitance can be programmed using commands.


```
:\Users\Leo>nrfjprog --memrd 0x500045c4
0x500045C4: 0000010C
C:\Users\Leo>nrfjprog --memrd 0x500045c4
0x500045C4: 00000102
                                                              1....1
C:\Users\Leo>nrfjprog --memrd 0x500045c4
0x500045C4: 00000102
                                                              1....1
C:\Users\Leo>nrfjprog --memrd 0x500045c4
0x500045C4: 00000102
                                                              1....1
C:\Users\Leo>nrfjprog --memrd 0x500045c4
0x500045C4: 0000010B
                                                              1....
C:\Users\Leo>nrfjprog --memrd 0x500045c4
0x500045C4: 0000010D
                                                              1....1
C:\Users\Leo>nrfjprog --memrd 0x500045c4
0x500045C4: 0000010C
                                                              1....1
C:\Users\Leo>
```



Mounting BT40F Module on the Host PCB

The following figure shows recommended mounting of BT40F module on the host PCB.

- For the best Bluetooth range performance, the antenna area of module shall extend 9.8 mm outside the edge of host PCB board, or 9.8 mm outside the edge of a ground plane.
- The next choice is to place a module on a corner of host PCB, the antenna area shall extend 9.8 mm from the edge of ground plane. Ground plane shall be at least 5 mm from the edge of the antenna area of module.
- We don't recommend mounting BT40F module in the middle of a host PCB.

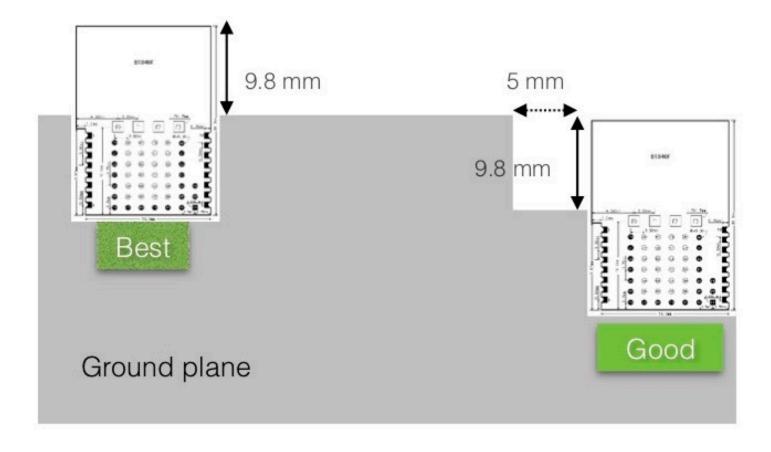

For the best Bluetooth range performance, keep all external metal at least 30mm from the antenna area.

FANSVer 1.09, July 2024

BLE 5.3, 802.15.4 Modules, BT40/F/E/N/NE

Host Board Design for Low Cost or Long Range

On nRF53 series SoCs, Nordic offers various memory options and protocol supports. Fanstel offers various antenna and power amplifier options. A host board can be designed to accommodate these nRF53 modules. Our suggestions for host PCB design:

If your main goal is minimum PCB cost,

- use a 2-sided PCB.
- Use library component from EV-BT40F Gerber files, can be downloaded from http://www.fanstel.com/download-document/. It has 16 castellated pins plus 24 LGA pins. BT40F library component can be used. However, signal routing can be difficult on a 2-sided PCB.
- Be sure of no metal contact in the area of 21 additional BT40F pins.
- BT40F can be mounted on a BT840F pad.

If you main goal is maximum wireless range,

- use a 4 or more layers PCB.
- Use library component from EV-BT40F Gerber files. They can be downloaded from http://www.fanstel.com/download-document/. It has 16 castellated pins plus 45 LGA pins.
- As much ground plane under BT40F, on top side of host PCB as possible. Use EV-BT40F Gerber files as an example.
- If your products may need wireless range of 1350 meters or more, allocate physical space for a 15x29.9x1.9mm module. This larger module size is required to accommodate Nordic nRF21540 power amplifier.

Settings for Certification Testings

Settings for BT40N and BT40NE to transmit maximum power within regulations:

- nRF5340 SoC TX is set to +0 dBm for FCC and ISED testings.
- nRF5340 SoC TX is set to -6 dBm for CE, RCM, and TELEC testings.
- BT40NE passes CE, RCM, and TELEC certification testings with ANT000, a 0 dBi antenna.
- BT40NE passes FCC and ISED certification testings with ANT060, a 6 dBi antenna.
- VDD is set to 3.3V.



Control Nordic nRF21540 Power Amplifier

BT40N and BT40NE uses nRF21540 power amplifier.

Nordic online document

https://developer.nordicsemi.com/nRF Connect SDK/doc/latest/nrf/ug radio fem.html? highlight=sky66112#ug-radio-fem-skyworks https://infocenter.nordicsemi.com/pdf/nRF21540 PS v1.2.pdf

The nRF21540 device is a range extender that you can use with nRF52 and nRF53 Series devices. For more information about nRF21540, see the nRF21540 documentation.

GPIO mode

The nRF21540 GPIO mode implementation of FEM is compatible with this device and implements the 3-pin PA/LNA interface.

To use nRF21540 in GPIO mode, complete the following steps:

Add the following node in the devicetree file:

```
/{
    nrf_radio_fem: name_of_fem_node {
        compatible = "nordic,nrf21540-fem";
        tx-en-gpios = <&gpio0 21 GPIO_ACTIVE_HIGH>;
        rx-en-gpios = <&gpio0 27 GPIO_ACTIVE_HIGH>;
        pdn-gpios = <&gpio0 26 GPIO_ACTIVE_HIGH>;
        ant-sel-gpios = <&gpio1 05 GPIO_ACTIVE_HIGH>;
        mode-gpios = <&gpio0 24 GPIO_ACTIVE_HIGH>;
};
};
```

On nRF53 devices, you must also apply the same devicetree to network code. tx-en-gpios - GPIO characteristic of the device that controls the TX EN signal of nRF21540.

rx-en-gpios - GPIO characteristic of the device that controls the RX_EN signal of nRF21540.

pdn-gpios - GPIO characteristic of the device that controls the PDN signal of nRF21540.

Optional properties

The following properties are optional and you can add them to the devicetree node if needed. ant-sel-gpios - GPIO characteristic of the device that controls the ANT_SEL signal of the nRF21540.

mode-gpios - GPIO characteristic of the device that controls the MODE signal of the nRF21540.

The nRF21540 in BT40X is hardware-wired to the PCB trace antenna. ANT-SEL pin is not used.




4. BT40F Evaluation Board

An evaluation board consists of the followings:

- Mini USB cable
- Evaluation board
- 10-conductor cable for connection to Nordic nRF53 DK (DK is not included)

The EV board can be programmed by using a Nordic nRF53 DK board, connected as below. (Photo to be updated)

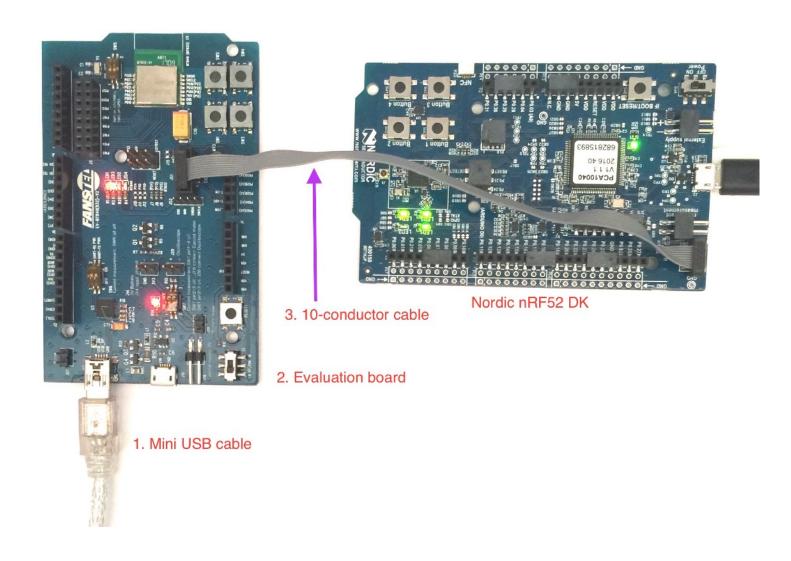



Nordic Development Tools

A Nordic nRF5340 DK is recommended for programming this evaluation board. Visit Nordic website for nRR5340 DK description and product brief.

Many application examples can be downloaded from Nordic website.

Some firmware, Android OS, and iOS app codes can be downloaded from **Bluetooth 5 Codes section** of this Fanstel webpage.

http://www.fanstel.com/download-document/

BT40 firmware can be used in all nRF5340 modules without power amplifier, e.g., BT40F and BT40E.

Android OS Apps

The following Android OS apps are available for download from Google Play Store:

BlueNor nrf5x: to use with Bluetooth 5 stacks, AT commands, or Slave firmware. Master firmware does not connect to a smartphone. Source codes can be downloaded from http://www.fanstel.com/download-document/

BlueNor Mesh: to use with BlueNor mesh firmware to send command to any node in a mesh. Node number is displayed when acknowledgement is received. Source codes will be uploaded to Fanstel website when supporting Bluetooth 5.

iOS Apps

The following iOS apps can be downloaded from Apple APP Store.


BlueNor Mesh: to use with BlueNor mesh firmware to send command to any node in a mesh. Node number is displayed when acknowledgement is received.

BlueNor nrf5x firmware, apps, and source codes will be uploaded when ready.

EV-BT40F EvaluationBoard Schematics

Evaluation board **EV-BT40F schematics and Gerber files** is available at Fanstel website.

Evaluation board can be used as a reference design for using modules. EV-BT40F is designed for the BT40F soldering pads with 61 pins. This EV board can also be used for BT40, BT40E, and BT40X modules.

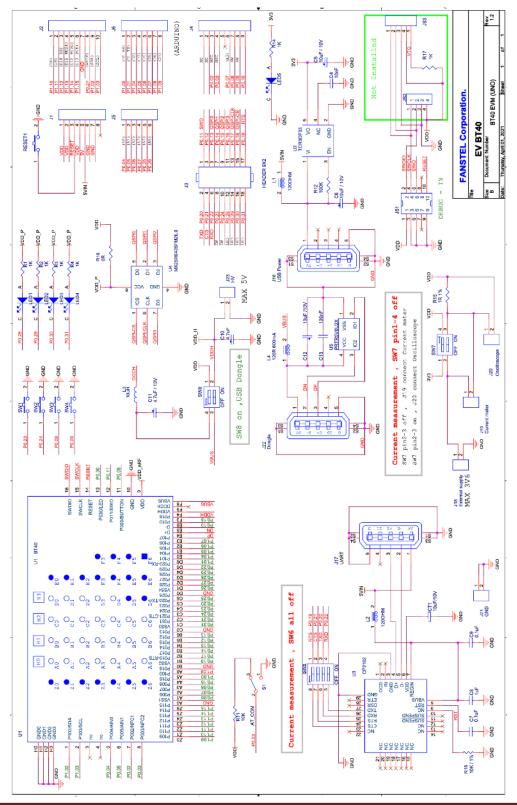



Suggestion for Battery Power Application

Standby current consumption is important for battery-powered product. To reduce host board area, the followings are embedded in modules:


- 32 MHz, 20PPM main crystal and load capacitors.
- 32.768 KHz, 20PPM sleep crystal and load capacitors.
- Inductors and capacitors required for VDD power supply DC to DC converter.
- Inductors and capacitors required for VDDH power supply DC to DC converter.

No external component is required. DCDC converter shall be enabled to reduce power consumption.



Soldering Temperature-Time Profile for Re-Flow Soldering

Maximum number of cycles for re-flow is 2. No opposite side re-flow is allowed due to module weight.

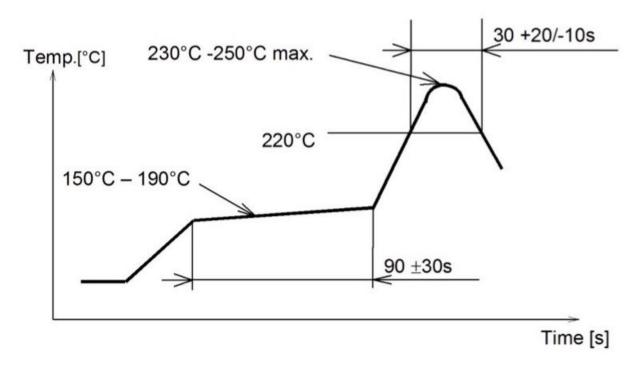

Cautions, Design Notes, and Installation Notes

Failure to follow the guidelines set forth in this document may result in degrading of the product's functions and damage to the product.

Design Notes

- (1) Follow the conditions written in this specification, especially the control signals of this module.
- (2) The supply voltage has to be free of AC ripple voltage (for example from a battery or a low noise regulator output). For noisy supply voltages, provide a decoupling circuit (for example a ferrite in series connection and a bypass capacitor to ground of at least 47uF directly at the module).
- (3) This product should not be mechanically stressed when installed.
- (4) Keep this product away from heat. Heat is the major cause of decreasing the life of these products.
- (5) Avoid assembly and use of the target equipment in conditions where the products' temperature may exceed the maximum tolerance.
- (6) The supply voltage should not be exceedingly high or reversed. It should not carry noise and/or spikes.
- (7) this product away from other high frequency circuits.

FANSVer 1.09, July 2024

BLE 5.3, 802.15.4 Modules, BT40/F/E/N/NE

Notes on Antenna and PCB Layout

(1) Don't use a module with internal antenna inside a metal case.

(2) For PCB layout:

- Avoid running any signal line below module whenever possible,
- No ground plane below antenna,
- If possible, cut-off the portion of main board PCB below antenna.

Installation Notes

- (1) Reflow soldering is possible twice based on the time-temperature profile in this data sheets. Set up the temperature at the soldering portion of this product according to this reflow profile.
- (2) Carefully position the products so that their heat will not burn into printed circuit boards or affect the other components that are susceptible to heat.
- (3) Carefully locate these products so that their temperatures will not increase due to the effects of heat generated by neighboring components.
- (4) If a vinyl-covered wire comes into contact with the products, then the cover will melt and generate toxic gas, damaging the insulation. Never allow contact between the cover and these products to occur.
- (5) This product should not be mechanically stressed or vibrated when reflowed.
- (6) If you want to repair your board by hand soldering, please keep the conditions of this chapter.
- (7) Do not wash this product.
- (8) Refer to the recommended pattern when designing a board.
- (9) Pressing on parts of the metal cover or fastening objects to the metal will cause damage to the unit.

Usage Condition Notes

- (1) Take measures to protect the unit against static electricity. If pulses or other transient loads (a large load applied in a short time) are applied to the products, check and evaluate their operation before assembly on the final products.
- (2)Do not use dropped products.
- (3)Do not touch, damage or soil the pins.
- (4) Follow the recommended condition ratings about the power supply applied to this product.
- (5)Electrode peeling strength: Do not add pressure of more than 4.9N when soldered on PCB
- (6) Pressing on parts of the metal cover or fastening objects to the metal cover will cause damage.
- (7) These products are intended for general purpose and standard use in general electronic equipment, such as home appliances, office equipment, information and communication equipment.

FANSVer 1.09, July 2024

BLE 5.3, 802.15.4 Modules, BT40/F/E/N/NE

Storage Notes

- (1) The module should not be stressed mechanically during storage.
- (2)Do not store these products in the following conditions or the performance characteristics of the product, such as RF performance will be adversely affected:
 - Storage in salty air or in an environment with a high concentration of corrosive gas.
 - Storage in direct sunlight
 - Storage in an environment where the temperature may be outside the range specified.
 - Storage of the products for more than one year after the date of delivery storage period.
- (3) Keep this product away from water, poisonous gas and corrosive gas.
- (4) This product should not be stressed or shocked when transported.
- (5) Follow the specification when stacking packed crates (max. 10).

Safety Conditions

These specifications are intended to preserve the quality assurance of products and individual components. Before use, check and evaluate the operation when mounted on your products. Abide by these specifications, without deviation when using the products. These products may short-circuit. If electrical shocks, smoke, fire, and/or accidents involving human life are anticipated when a short circuit occurs, then provide the following failsafe functions, as a minimum.

- (1)Ensure the safety of the whole system by installing a protection circuit and a protection device.
- (2)Ensure the safety of the whole system by installing a redundant circuit or another system to prevent a dual fault causing an unsafe status.

Other Cautions

- (1)This specification sheet is copyrighted. Reproduction of this data sheets is permissible only if reproduction is without alteration and is accompanied by all associated warranties, conditions, limitations, and notices.
- (2)Do not use the products for other purposes than those listed.
- (3)Be sure to provide an appropriate failsafe function on your product to prevent an additional damage that may be caused by the abnormal function or the failure of the product.
- (4)This product has been manufactured without any ozone chemical controlled under the Montreal Protocol.
- (5)These products are not intended for other uses, other than under the special conditions shown below. Before using these products under such special conditions, check their performance and reliability under the said special conditions carefully to determine whether or not they can be used in such a manner.
 - In liquid, such as water, salt water, oil, alkali, or organic solvent, or in places where liquid may splash.



- · In direct sunlight, outdoors, or in a dusty environment
- In an environment where condensation occurs.
- In an environment with a high concentration of harmful gas.
- (6) If an abnormal voltage is applied due to a problem occurring in other components or circuits, replace these products with new products because they may not be able to provide normal performance even if their electronic characteristics and appearances appear satisfactory.
- (7) When you have any question or uncertainty, contact Fanstel.



Packaging and Lot Number

Production modules are delivered in reel, 1000 modules in each reel. Lot number for modules made after May 2019, can be used to track silicon version of SoC, module PCB version, and production test code version.



Lot: **D0 V2 18B - 00 00 000**

D0: 2 digits, version number of SoC.

V2: 2 digits, version number of module PCB.

18B: the first 2 digits for production test codes released year and the last digit for month in hex format. A=October, B=November, C=December. 18B was released in November 2018.

00 00 000, 7 digits, reserved for 2nd SoC for modules with 2 SoCs.

FCC LABEL

The Original Equipment Manufacturer (OEM) must ensure that the OEM modular transmitter must be labeled with its own FCC ID number. This includes a clearly visible label on the outside of the final product enclosure that displays the contents shown below. If the FCC ID is not visible when the equipment is installed inside another device, then the outside of the device into which the equipment is installed must also display a label referring to the enclosed equipment

The end product with this module may subject to perform FCC part 15 unintentional emission test requirement and be properly authorized.

This device is intended for OEM integrator only.



Revision History

- Feb. 2020, Ver. 0.10: Initial release
- May 2020, Ver. 0.50: draft update
- Sep. 2020, Ver.0.60: draft update
- March 2021, Ver. 0.90: draft update
- April 2021, Ver. 0.92: Draft revision.
- May 2021, Ver.1.00: Add FCC and other certification information. Initial release.
- Aug. 2021, Ver.1.02: Update mechanical drawings with side view.
- Aug. 2021, Ver. 1.03: Correct module pin name.
- July 2022, Ver. 1.04: Add BT40N and BT40NE information.
- Nov. 2022, Ver. 1.05: Add instructions for using the internal load capacitors for 32MHz crystal.
- Dec. 2022, Ver. 1.06: Update BT40N, BT40NE description.
- May 2023, Ver. 1.07: Add BT40N certification information.
- Sep. 2023, Ver. 1.08: Update BT40N photos.
- July 2024, Ver. 1.09: Add settings to transmit max. Power for BT40N.



Contact Us

United States:

Fanstel Corp.

7466 E. Monte Cristo Ave. Scottsdale AZ 85260

Tel. 1 480-948-4928 Fax. 1-480-948-5459 Email: info@fanstel.com Website: www.fanstel.com

Taiwan:

Fanstel Corp.

10F-10, 79 Xintai Wu Road

Xizhu, New Taipei City, Taiwan 22101

泛世公司

臺灣省新北市汐止區新臺五路79號10樓之10,22101

Tel. 886-2-2698-9328 Fax. 886-2-2698-4813 Email: info@fanstel.com Website: www.fanstel.com

China:

Fanstel Technologies Corp.

11 Jiale Street

Ping-Dih, Long-Gang, Shen Zhen, GD 518117

泛世康科技(深圳)有限公司

廣東省深圳市龍崗區坪地鎮佳樂街11號

Tel. 86-755-8409-0928 Fax. 86-755-8409-0973 QQ. 3076221086

Email: info@fanstel.com Website: www.fanstel.com