



# **Advanced Configuration and Power Interface (ACPI) Specification**

Version 6.3

January 2019

## Acknowledgements

The material contained herein is not a license, either expressly or impliedly, to any intellectual property owned or controlled by any of the authors or developers of this material or to any contribution thereto. The material contained herein is provided on an "AS IS" basis and, to the maximum extent permitted by applicable law, this information is provided AS IS AND WITH ALL FAULTS, and the authors and developers of this material hereby disclaim all other warranties and conditions, either express, implied or statutory, including, but not limited to, any (if any) implied warranties, duties or conditions of merchantability, of fitness for a particular purpose, of accuracy or completeness of responses, of results, of workmanlike effort, of lack of viruses and of lack of negligence, all with regard to this material and any contribution thereto. Designers must not rely on the absence or characteristics of any features or instructions marked "reserved" or "undefined." The Unified EFI Forum, Inc. reserves any features or instructions so marked for future definition and shall have no responsibility whatsoever for conflicts or incompatibilities arising from future changes to them. ALSO, THERE IS NO WARRANTY OR CONDITION OF TITLE, QUIET ENJOYMENT, QUIET POSSESSION, CORRESPONDENCE TO DESCRIPTION OR NON-INFRINGEMENT WITH REGARD TO THE SPECIFICATION AND ANY CONTRIBUTION THERETO.

IN NO EVENT WILL ANY AUTHOR OR DEVELOPER OF THIS MATERIAL OR ANY CONTRIBUTION THERETO BE LIABLE TO ANY OTHER PARTY FOR THE COST OF PROCURING SUBSTITUTE GOODS OR SERVICES, LOST PROFITS, LOSS OF USE, LOSS OF DATA, OR ANY INCIDENTAL, CONSEQUENTIAL, DIRECT, INDIRECT, OR SPECIAL DAMAGES WHETHER UNDER CONTRACT, TORT, WARRANTY, OR OTHERWISE, ARISING IN ANY WAY OUT OF THIS OR ANY OTHER AGREEMENT RELATING TO THIS DOCUMENT, WHETHER OR NOT SUCH PARTY HAD ADVANCE NOTICE OF THE POSSIBILITY OF SUCH DAMAGES.

Copyright © 2018, Unified Extensible Firmware Interface (UEFI) Forum, Inc. All Rights Reserved. The UEFI Forum is the owner of all rights and title in and to this work, including all copyright rights that may exist, and all rights to use and reproduce this work. Further to such rights, permission is hereby granted to any person implementing this specification to maintain an electronic version of this work accessible by its internal personnel, and to print a copy of this specification in hard copy form, in whole or in part, in each case solely for use by that person in connection with the implementation of this Specification, provided no modification is made to the Specification.

# Revision History

---

ACPI Revision	Mantis Number / Description	Affected Sections
6.3	1851 Extend GTDT to describe ARMv8.1 architected CNTHV timer	<a href="#">Section 5.2.24</a>
6.3	1855 ARS Error Inject	<a href="#">Table 9-299</a> <a href="#">Section 9.20.7.7</a> <a href="#">Section 9.20.7.9.1</a> <a href="#">Section 9.20.7.12</a>
6.3	1867 Add Trigger order to PCC Identifier structure within PDTT	<a href="#">Section 5.2.28</a>
6.3	1873 Peripheral-attached Memory	<a href="#">Table 5-132</a>
6.3	1883 Reserve the table names "CRAT" and "CDIT"	<a href="http://uefi.org/acpi">http://uefi.org/acpi</a>
6.3	1893 New NVDIMM Device methods _NCH and _NBS	<a href="#">Section 9.20.8.1</a> <a href="#">Section 9.20.8.2</a>
6.3	1898 PCC Operation Region	<a href="#">Section 5.5.2.4</a> <a href="#">Section 6.5.4</a> <a href="#">Section 19.2.7</a> <a href="#">Section 19.6</a> <a href="#">Section 20.2.5.2</a>
6.3	1900 I3C host controller support	<a href="#">Table 6-190</a> <a href="#">Table 6-241</a>
6.3	1904 Generic Initiator Affinity Structure	<a href="#">Section 5.2.16</a>
6.3	1910 NVDIMM Address Range Scrubbing (ARS) interface update	<a href="#">Section 5.6.6</a> <a href="#">Section 9.20.7</a>
6.3	1911 _PRD object in Table 6-186 has no definition	Appendix C
6.3	1913 New NVDIMM Device methods for Health Error Injection	<a href="#">Section 5.6.6</a> <a href="#">Section 9.20.8</a>
6.3	1914 HMAT Enhancements	<a href="#">Section 5.2.27</a>
6.3	1922 _HPX Enhancements	<a href="#">Section 6.2.9</a>
6.3	1930 ASL: Make some arguments to ASL operators optional	<a href="#">Section 19.6.7</a> <a href="#">Section 19.6.46</a> <a href="#">Section 19.6.63</a> <a href="#">Section 19.6.88</a>

ACPI Revision	Mantis Number / Description	Affected Sections
6.3	1931 ASL: extend Load() operator to allow table load from an ASL buffer	<a href="#">Section 19.6.76</a>
6.3	1932 ASL: deprecate Unload operator	<a href="#">Section 19.6.146</a> and related references
6.3	1934 SPE support for ARM	<a href="#">Section 5.2.12.14</a> <a href="#">Table 5-155</a>
6.3	1939 Error Disconnect Recover Notification	<a href="#">Table 5-165</a> <a href="#">Section 6.3.5</a>
6.3	1944 Outdated copied text from PCI Firmware Spec	<a href="#">Section 6.2.11.3</a> <a href="#">Section 6.2.11.4</a>
6.3	1946 Generic Initiator _OSC Bit	<a href="#">Section 5.2.16.6</a> <a href="#">Table 6-200</a>
6.3	1948 Adds a “Hot-plug Capable” flag to the Local APIC and x2APIC structures in MADT	<a href="#">Table 5-44</a> <a href="#">Table 5-47</a> <a href="#">Table 5-58</a>
6.3	1958 PCC Operation Region Updates	<a href="#">Section 5.5.2.4</a> <a href="#">Section 19.2.7</a> <a href="#">Table 19-420</a> <a href="#">Section 20.2.5.2</a>
6.3	1959 Update to ECR 1914	<a href="#">Table 5-146</a>
6.3	1978 GT Block Timers table - update the Timer Interrupt Mode description	<a href="#">Table 5-126</a>
6.3	1979 ACPI version change from 6.2 to 6.3	<a href="#">Table 5-33</a>
6.3	1980 Fix link to local APIC flags in the Processor Local APIC Structure table	<a href="#">Table 5-46</a>
6.2 B	1819 Errata: remove support for multiple GICD structures	<a href="#">Table 5-43</a>
6.2 B	1852 Fix Inconsistent TranslateType Language	<a href="#">Section 19.6.33</a> <a href="#">Section 19.6.34</a> <a href="#">Section 19.6.41</a> <a href="#">Section 19.6.42</a> <a href="#">Section 19.6.109</a> <a href="#">Section 19.6.110</a> <a href="#">Section 19.6.151</a>

ACPI Revision	Mantis Number / Description	Affected Sections
6.2 B	1870 PPTT Clarifications	<a href="#">Section 5.2.29.1</a>
6.2 B	1881 Incorrect reference "Memory Devices" in "5.2.21.10 Interaction with Memory Hot Plug"	<a href="#">Section 5.2.21.10</a>
6.2 B	1882 Incorrect EINJ table references/link	<a href="#">Table 18-404</a>
6.2 B	1894 SRAT GICC Flags Field Definition Errata	<a href="#">Table 5-76</a>
6.2 B	1905 Missing description in 6.1.9 title in ACPI 6.2a	<a href="#">Section 6.1.9</a>
6.2 B	1909 Update NFIT SPA Range Structure	<a href="#">Table 5-132</a>
6.2 B	1929 Miscellaneous Errata	<a href="#">Section 19.6.38</a> <a href="#">Section 19.6.53</a> <a href="#">Section 19.6.54</a> Removed redundant Interrupt section (now <a href="#">Section 19.6.63</a> ).
6.2 B	1945 NFIT_SPA_ECR	<a href="#">Section 5.2.25.2</a>
6.2 B	1951 _PXM Clarifications	<a href="#">Section 5.2.16</a> <a href="#">Section 5.2.16.6</a> <a href="#">Section 6.2.14</a> <a href="#">Section 6.2.15</a> <a href="#">Section 17.2</a> <a href="#">Section 17.2.1</a> <a href="#">Section 17.3</a> <a href="#">Section 17.3.1</a> <a href="#">Section 17.4</a> <a href="#">Section 17.4.1</a>
6.2 B	1960 PWR_BUTTON desription should say "power button", not "sleep button"	<a href="#">Table 5-34</a>
6.2 B	1962 Clarifications for the use of _REG methods	<a href="#">Section 6.5.4</a>
6.2 B	1965 Clean up Address Space ID	<a href="#">Table 5-25</a> <a href="#">Table 6-238</a> <a href="#">Section 19.6.114</a> <a href="#">Section 19.2.7</a>
6.2B	1968 Clarifications for ACPI Namepaths	<a href="#">Section 5.2</a>

ACPI Revision	Mantis Number / Description	Affected Sections
6.2 A	1839 Missing space in title of ACPI RAS Feature Table (RASF)	<a href="#">Section 5.2</a> <a href="#">Section 5.2.20</a> <a href="#">Table 5-29</a>
6.2 A	1837 Typos in Extended PCC subspaces (types 3 and 4)	<a href="#">Section 14.1.6</a>
6.2 A	1831 Add a new NFIT Platform Capabilities Structure	<a href="#">Section 5.2.25.1</a> <a href="#">Figure 5-22</a> <a href="#">Table 5-131</a> <a href="#">Section 5.2.25.9</a>
6.2 A	1827 PPTT ID Type Structure offsets	<a href="#">Section 5.2.29.3</a>
6.2 A	1825 Remove bits 2-4 in the Platform RAS Capabilities Bitmap table	<a href="#">Section 5.2.20.4</a>
6.2 A	1820 Region Format Interface Code description	<a href="#">Section 5.2.25.6</a>
6.2 A	1819 Remove support for multiple GICD structures	<a href="#">Section 5.2.12</a> <a href="#">Section 5.2.12.1</a>
6.2 A	1814 PDTT typos and PPTT reference	Revision History <a href="#">Section 5.2</a> <a href="#">Section 5.2.28</a>
6.2 A	1812 Minor correction to Trigger Action Table	<a href="#">Section 18.6.4</a>
6.2 A	1811 General Purpose Event Handling flow	<a href="#">Section 5.6.4</a>
6.2	1795 ACPI Table Signature Reservation	<a href="#">Table 5-30</a>
6.2	1781 Clarify ResourceUsage Descriptor Argument	<a href="#">Table 6-193</a>
6.2	1780 Add DescriptorName to PinFunction and PinConfig Macros	<a href="#">Section 19.6.102</a> and <a href="#">Section 19.6.103</a>
6.2	1770 Update Revision History	<a href="#">Revision History</a>
6.2	1769 FADT Format: ACPI Version update to reflect 6.2 versus 6.1	<a href="#">Table 5-33</a>
6.2	1755 Deprecate PCC Platform Async Notifications	<a href="#">Section 14.4</a> , and <a href="#">Section 14.5.1</a>
6.2	1743 PinGroupFunctionConfig resource descriptors update	<a href="#">Section 6.4.3.11</a> , <a href="#">Section 6.4.3.12</a> , <a href="#">Section 6.4.3.13</a> ,
6.2	1738 PCIEXP_WAKE Bits description updates	<a href="#">Table 4-15</a> , <a href="#">Table 4-16</a> , and <a href="#">Table 5-34</a>
6.2	1731 Software Delegated Exception HW error notification	<a href="#">Section 18-394</a>

ACPI Revision	Mantis Number / Description	Affected Sections
6.2	1725 NVST Updates - NFIT ARS Error Injection	<a href="#">Section 9.20.7.9</a> , <a href="#">Section 9.20.7.10</a> , and <a href="#">Section 9.20.7.11</a>
6.2	1724 NVST Updates - Platform RAS Capabilities Updates	<a href="#">Section 5.2.20.4</a>
6.2	1723 NVST Updates - Translate SPA DSM Interface	<a href="#">Section 2.1</a> , <a href="#">Section 9.20.7.8</a>
6.2	1722 NVST Updates - ARS Updates	<a href="#">Section 2.1</a> , <a href="#">Section 9.20.7.2</a> , <a href="#">Section 9.20.7.4</a> , <a href="#">Section 9.20.7.5</a> , and <a href="#">Section 9.20.7.6</a>
6.2	1721 NVST Updates - Labels	<a href="#">Section 2.1</a> , <a href="#">Section 5-184</a> , and <a href="#">Section 6.5.10</a>
6.2	1717 ASL Grammar Update for Reference Operators	<a href="#">Section 19.2</a>
6.2	1714 Reserve the table name "SDEI"	<a href="#">Table 5-30</a>
6.2	1705 Add Heterogeneous Memory Attributes Tables (HMAT)	<a href="#">Section 5.2</a> , <a href="#">Section 5.6.6</a> , <a href="#">Section 5.6.8</a> , <a href="#">Section 6.2</a> , <a href="#">Section 6.2.18</a> , and <a href="#">Section 17.4</a>
6.2	1703 Time & Alarm Device _GCP new bits	<a href="#">Section 9.18.2</a>
6.2	1680 Pin Group, Pin Group Function and Pin Group Configuration Descriptors and Macros	<a href="#">Table 6-224</a> and <a href="#">Section 6.4.3.10</a>
6.2	1679 Pin Configuration Descriptor and Macro	<a href="#">Table 6-224</a> and <a href="#">Section 6.4.3.10</a>
6.2	1677 CPPC Registers in System Memory	<a href="#">Section 6.2.11.2</a> and <a href="#">Section 8.4.7.1</a>
6.2	1674 GHES_ASSIST Proposal	<a href="#">Section 18.3.2</a>
6.2	1669 FADT HEADLESS flag should be valid for HW_REDUCED_ACPI platforms	<a href="#">Section 5.2.9</a>
6.2	1667 Processor Properties Topology Table (PPTT)	<a href="#">Section 5.2.29</a>
6.2	1659 Master Slave PCC channels	<a href="#">Chapter 14</a> , <a href="#">Platform Communications Channel (PCC)</a>
6.2	1656 SRAT Support for ITS	<a href="#">Section 5.2.16</a>
6.2	1650 CPPC Support for Multiple PCC Channels	<a href="#">Table 6-200</a> and <a href="#">Section 8.4.7.1.9</a>

ACPI Revision	Mantis Number / Description	Affected Sections
6.2	1649 ECR: Minor updates to IA-32 Architecture Deferred Machine Check	<a href="#">Section 18.3.2.10</a>
6.2	1645 Add _STR Support for Thermal Zones	<a href="#">Section 6.1</a> , <a href="#">Section 6.1.10</a> , <a href="#">Section 11.4</a> , <a href="#">Section 11.4.14</a> , and <a href="#">Section 11.7.1</a>
6.2	1632 Secure Devices Table (SDEV)	<a href="#">Table 5-30</a>
6.2	1611 Add a _PPL object to processor devices	<a href="#">Section 8.4.7</a>
6.2	1597 ASL For() Conditional Loop Macro	<a href="#">Section 19.6.51</a> , <a href="#">Section 19.2.5</a> , <a href="#">Section 19.2.6</a> , and <a href="#">Section 19.3.4</a>
6.2	1588 Clarification on Interrupt Descriptor Usage for "Interrupt Combining"	<a href="#">Section 6.2.11.2</a> , <a href="#">Section 6.4.3.6</a> , <a href="#">Section 19.6.62</a>
6.2	1585 Reserve table signature "WSMT," with reference to ACPI links page for more details	<a href="#">Table 5-30</a>
6.2	1583 Diverse Highest Processor Performance	<a href="#">Table 5-158</a> and <a href="#">Table 6-200</a>
6.2	1578 Function Config Descriptor and Macro	<a href="#">Table 6-213</a> and <a href="#">Section 6.4.3.9</a>
6.2	1576 Platform Debug Trigger Table (PDTT)	<a href="#">Section 5.2.28</a>
6.2	1573 Extensions to the ASL Concatenate operator	<a href="#">Section 19.2.6</a> and <a href="#">Section 19.6.12</a>
6.2	1569 Add new introduction (background) section	Background chapter
6.1 Errata A	1796 Clarify that Type 1 can never support Level triggered platform interrupt	<a href="#">Section 14.1.4</a>
6.1 Errata A	1785 Lack of clarity on use of System Vector Base on GICD structures	<a href="#">Section 5.2.12.15</a>
6.1 Errata A	1783 Clarification on Interrupt Descriptor Usage for Bit [0] Consumer/Producer	<a href="#">Table 6-237</a>
6.1 Errata A	1760 Typo - incorrect bit offsets in the PM1 Enable Registers Fixed Hardware Feature Enable Bits table.	<a href="#">Table 4-16</a>
6.1 Errata A	1758 Minor Errata in ERST tables, Serialization Instruction Entry and Injection Instruction Entry.	<a href="#">Table 18-399</a> and <a href="#">Table 18-405</a>

ACPI Revision	Mantis Number / Description	Affected Sections
6.1 Errata A	1756 Errata: Ensure non-secure timers are accessible to non-secure in the Flag Definitions: Common Flags table.	<a href="#">Table 5-126</a>
6.1 Errata A	1740 Errata in section 9.13: wrong reference	<a href="#">Section 9.13</a>
6.1 Errata A	1715 0 is a valid GSIV for the secure EL1 physical timer in GTDT	<a href="#">Table 5-120</a>
6.1 Errata A	1687 Typo in the Reserved field of the GIC ITS Structure table.	<a href="#">Table 5-66</a>
6.1 Errata A	1686 Clarification of the FADT HW_REDUCED_ACPI flag description in the FADT Format table.	<a href="#">Table 5-33</a>
6.1 Errata A	1676 Clarifications for the ASL Buffer (Declare Buffer Object)	<a href="#">Section 19.6.10</a>
6.1 Errata A	1671 Typo in Memory Affinity Structure table	<a href="#">Section 5-72</a>
6.1 Errata A	1670 Update for _OSI return value	<a href="#">Section 5.7.2</a>
6.1 Errata A	1664 Clarification of the RSDP Structure table, Revision description.	<a href="#">Table 5-66</a>
6.1 Errata A	1662 Clarification of the Generic Communications Channel Command Field table.	<a href="#">Table 14-370</a>
6.1 Errata A	1661 typos in the Generic Communications Channel Status Field table and the Platform Notification section.	<a href="#">Table 14-371</a> and <a href="#">Section 14.5</a>
6.1 Errata A	1660 type in the Generic Communications Channel Shared Memory Region table	<a href="#">Table 14-369</a>
6.1 Errata A	1651 LPI Clarifications	<a href="#">Section 8.4.4.3</a>
6.1 Errata A	1644 Mismatch of mantis number 1449 vs. change description	<a href="#">Revision History</a>
6.1 Errata A	1643 Incorrect row order in GET_EXECUTE_OPERATION_TIMINGS table	<a href="#">Table 18-397</a>
6.1 Errata A	1642 Clarifications and fixes to _PSD and _TSD	<a href="#">Table 5-184</a>
6.1 Errata A	1639 _WPC and _WPP are missing in the Predefined ACPI Names table.	<a href="#">Table 5-164</a>
6.1 Errata A	1616 Clarify which processor ID to use in the EINJ for ARM	<a href="#">Table 18-403</a>

ACPI Revision	Mantis Number / Description	Affected Sections
6.1 Errata A	1606 Errata: typos in the Interrupt Resource Descriptor Macro definition	<a href="#">Section 19.6.62</a>
6.1 Errata A	1602 Updates to the PMC Method Result Codes table	<a href="#">Table 10-338</a>
6.1 Errata A	1601 Typos in the _CPC Implementation Example	<a href="#">Section 8.4.7.1.11</a>
6.1 Errata A	1600 Typos in PCC Subspace Structure Type 1 and Type 2.	<a href="#">Table 14-366</a> and <a href="#">Table 14-367</a>
6.1 Errata A	1599 Add clarification to existing text (_OSC Control Field via arg3)	<a href="#">Table 6-202</a>
6.1 Errata A	1591 ASL grammar clarification for “executable” AML opcodes	<a href="#">Section 5.4</a>
6.1 Errata A	1589 Wireless Power Calibration Device ACPI ID not defined	<a href="#">Section 10.5</a> (Table 10-292 removed) and <a href="#">Table 5-163</a>
6.1 Errata A	1582 Clarification for Time and Alarm wake description	<a href="#">Section 9.18.1</a>
6.1 Errata A	1581 Processing Sequence for Graceful Shutdown Request - need to update section 6.3.5.1 to reflect change	<a href="#">Table 5-166</a> and <a href="#">Section 6.3.5.1</a>
6.1 Errata A	1579 typos	<a href="#">Table 5-130</a> and <a href="#">Table 5-131</a>
6.1 Errata A	1577 BGRT Image Orientation Offset	<a href="#">Table 5-107</a>
6.1 Errata A	1572 Update ASL grammar to support multiple Definition Blocks	<a href="#">Section 19.2.3</a>
6.1 Errata A	1571 Update AML Filename description for ASL DefinitionBlock operator	<a href="#">Section 19.6.28</a>
6.1 Errata A	1552 GIC Redistributor base address language in GIIC leaves room for ambiguity	<a href="#">Table 5-60</a>
6.1 Errata A	1549 Errata: wrong offset in Generic Communications Channel Shared Memory Region table.	<a href="#">Table 14-369</a>
6.1	1527 Qualcomm feedback on ACPI 6.1 draft 2	Throughout
6.1	1524 Strange hotlink	<a href="#">Section 5.7.5</a>
6.1	1514 Comments against 6.1 Draft from HPE	Throughout--draft corrections and typos, but especially <a href="#">Section 9.20.7.2</a>

ACPI Revision	Mantis Number / Description	Affected Sections
6.1	1512 Microsoft feedbacks on ACPI 6.1 draft 2	<a href="#">Section 5.2.25</a> , <a href="#">Section 9.20.7</a> , <a href="#">Section 18.3.2</a>
6.1	1503 Editorial comments against 6.1 Draft 1	Throughout--draft corrections & typos
6.1	1500 ACPI 6.1 - Graceful Shutdown (Device Object Notification)	<a href="#">Table 5-166</a>
6.1	1499 _FIT and _MAT ASL nits in 6.0 and 6.1 Draft	<a href="#">Section 6.2.10</a> , <a href="#">Section 6.5.9</a>
6.1	1490 ACPI Version update to reflect 6.1 versus 6.0	<a href="#">Table 5-33</a>
6.1	1483 NFIT SPD extensions and clarifications	<a href="#">Section 5.2.25x</a> , <a href="#">Section 6.5.9</a> , <a href="#">Section 9.20x</a>
6.1	1478 Wireless Power Calibration ACPI Device	<a href="#">Section 10.5</a> & <a href="#">Section 10.6</a>
6.1	1427 Addition to Memory Device State Flags in NFIT	<a href="#">Table 5-133</a>
6.1	1395 _DSM interfaces associated with NVDIMM-N objects	<a href="#">Section 9.20.2x</a> through <a href="#">Section 9.20.7</a>
6.1	1384 ERST/EINJ max wait time	<a href="#">Table 18-397</a> , <a href="#">Table 18-404</a>
6.1	1367 Interrupt-signaled Events	<a href="#">Section 4.1.1.1</a> <a href="#">Section 5.6.</a> , <a href="#">Section 5.6.10</a> , <a href="#">Section 5.6.4</a> <a href="#">Section 5.6.5</a> <a href="#">Section 5.6.5.2</a> , <a href="#">Section 6.2.11.2</a> , <a href="#">Section 7.3.13</a> , <a href="#">Section 18.3.2.7.2</a> , <a href="#">Section 18.4</a> Added <a href="#">Section 5.6.9</a> , through <a href="#">Section 5.6.9.4</a>
6.1	1356 ARM APEI extensions	<a href="#">Section 18.3.2.7</a> , <a href="#">Section 18.3.2.8</a> , <a href="#">Section 18.3.2.9</a>
6.1	1344 Sharing of Connection Resources NOTE: The changes were included in ACPI 6.0, but was missed in the ACPI 6.0 Revision History	<a href="#">Section 5.5.2.4.6</a> through <a href="#">Section 5.5.2.4.6.3.9</a> <a href="#">Section 19.6.15</a>
6.1	1326	<a href="#">Section 2.2</a> , <a href="#">Table 5-37</a> , <a href="#">Section 7.4.2.5</a> , <a href="#">Section 15</a> , <a href="#">Table 15-374</a> , <a href="#">Section 16.1.4</a>
6.0 Errata	1488 Typo on description of PkgLength encoding (ACPI v6.0, section 5.4)	<a href="#">Section 5.4</a>

ACPI Revision	Mantis Number / Description	Affected Sections
6.0 Errata	1487 The Length of GIC ITS Structure is wrong	<a href="#">Table 5-66</a>
6.0 Errata	1470 Region Format Interface Code clarification	<a href="#">Table 5-137</a>
6.0 Errata	1462 5.2.21 Errata	<a href="#">Section 5.2.21</a>
6.0 Errata	1461 5.2.21.10 Clarification	<a href="#">Section 5.2.21.10</a>
6.0 Errata	1449 Graceful Shutdown Request (Device Object Notification Values)	<a href="#">Section 2.1</a> , <a href="#">Table 5-44</a> , <a href="#">Section 5.2.12.6</a> , <a href="#">Table 5-51</a> , <a href="#">Section 5.2.12.9</a> , <a href="#">Section 5.2.12.14</a> through <a href="#">Section 5.2.12.18</a> , <a href="#">Section 5.2.25</a> , <a href="#">Section 5.6</a> , <a href="#">Table 6-193</a> , <a href="#">Table 6.2.10</a> , <a href="#">Table 6-249</a> , <a href="#">Table 6.5.9</a>
6.0 Errata	1445 Section 19.6.99 "Package" of the specification needs updating	<a href="#">Section 19.6.100</a>
6.0 Errata	1444 GTDT CntReadBase Physical address should be optional	<a href="#">Section 5.2.24</a>
6.0 Errata	1433 Time and Alarm _GCP changes in support of wakes from S4/S5	<a href="#">Section 9.18.2</a>
6.0 Errata	1432 Errata - Explicit Data Type Conversions	<a href="#">Section 19.3.4</a> , <a href="#">Section 19.3.5.2</a> , <a href="#">Section 19.3.5.3</a>
6.0 Errata	1406 NFIT RAMDisk Update	<a href="#">Section 5.2.25.2</a>
6.0 Errata	1403 Two distinct definitions of the MADT have the same revision number	<a href="#">Table 5-43</a>
6.0 Errata	1393 In FADT: if X_DSDT field is non-zero, DSDT field should be ignored or deprecated	<a href="#">Table 5-33</a>
6.0 Errata	1392 Incorrect length in the GIC ITS Structure	<a href="#">Table 5-66</a>
6.0 Errata	1386 Clarify APEI vs UEFI runtime variable support	<a href="#">Table 18-397</a>
6.0 Errata	1385 ACPI 6.0 typo and table misnumbering	<a href="#">Section 18.5.2.1</a> ,

ACPI Revision	Mantis Number / Description	Affected Sections
6.0 Errata	1380 Unnecessary restrictions to FW vendors in ordering of GIC structures in MADT	<a href="#">Section 5.2.12.14</a>
6.0 Errata	1378 Duplication of table 5-155/156, section mismatch in GIC redistributor	duplicates of <a href="#">Table 5-175</a> & <a href="#">Table 5-180</a> removed; <a href="#">Section 5.2.12.17</a>
6.0 Errata	1374 section mismatch: _CCA method belongs to section 6.2 Device Configuration Objects?	<a href="#">Table 6-189</a> / <a href="#">Table 6-193</a>
6.0 Errata	1372 Fix inconsistency for _PXM method in section 17	<a href="#">Section 17.2.1</a> , <a href="#">Section 17.3.2</a>
6.0 Errata	1368 Various errata fixes and clarifications in chapter 18 APEI	<a href="#">Section 18.3.1</a> , <a href="#">Section 18.3.2.7.1</a> , <a href="#">Section 18.5.1</a> , <a href="#">Section 18.6.1</a> , <a href="#">Section 18.6.2</a> , <a href="#">Section 18.6.4</a>
6.0 Errata	1361 Clarify _PIC Method on ARM	<a href="#">Section 5.8.1</a>
6.0 Errata	1289 replace use of the term "BIOS" with more accurate descriptions	Throughout
6.0 Errata	1154 Ensure that ACPI and UEFI specs agree on the treatment of "holes" in the memory map	<a href="#">Section 15.4</a>
6.0	1370 Changes needed for ACPI 6.0: persistent memory S4 behavior	<a href="#">Section 16.3.4</a>
6.0	1359 Vendor Range for E820 Address Types and UEFI memory Types	<a href="#">Table 15-374</a>
6.0	1354 Disambiguation of _REV	<a href="#">Section 5.7.4</a>
6.0	1343 Comments against v6.0 Final Draft	<a href="#">Section 18.6.2</a> ; <a href="#">Section 18.6.4</a>
6.0	1340 comment against the Final Draft: Minor errata in register fields of LPI example	<a href="#">Section 8.4.4.3.4</a>
6.0	1332 Fixes for ACPI 6.0 Draft March 2	<a href="#">Table 5-37</a> ; <a href="#">Section 5.2.25.2</a> <a href="#">Table 5-132</a>
6.0	1328 ACPI 6.0 Draft feedback - Mantis 1228	<a href="#">Table 5-62</a>
6.0	1337 Missing reference in Extended Address Space Descriptor Definition, Section 6.4.3.5.4	<a href="#">Section 6.4.3.5.4</a>
6.0	1333 ACPI 6.0 March2 Draft Feedback - Bits and NFIT related	NFIT throughout
6.0	1329 ACPI 6.0 Feb 18 Draft - Follow consistent notation for Bits and Bytes ranges	throughout

ACPI Revision	Mantis Number / Description	Affected Sections
6.0	1327 ACPI 6.0 Feb 18 draft feedback - NFIT related	NFIT throughout
6.0	1324 ACPI 6.0 Feb 5 Draft1 Feeback2 - Mantis 1250	<a href="#">Section 5.2</a> ; <a href="#">Section 5.2.25</a> ; <a href="#">Section 6.1.1</a> ; <a href="#">Section 5.6.6</a>
6.0	1320 ACPI 6.0 Feb 5 Draft1 Feedback - Mantis 1250	<a href="#">Section 5.2</a> ; <a href="#">Section 5.2.25</a> ; <a href="#">Section 6.1.1</a> ; <a href="#">Section 5.6.6</a>
6.0	1319 Comment against ACPI 6.0 Draft 1 concerning Mantis 1279	<a href="#">Section 19.1</a> ; <a href="#">Section 19.6.3</a> ; <a href="#">Section 19.6.5</a> ; <a href="#">Section 19.6.26</a> ; <a href="#">Section 19.6.31</a> ; <a href="#">Section 19.6.60</a> ; <a href="#">Section 19.6.61</a> ; <a href="#">Section 19.6.68</a> - <a href="#">Section 19.6.74</a> ; <a href="#">Section 19.6.78</a> ; <a href="#">Section 19.6.85</a> ; <a href="#">Section 19.6.86</a> ; <a href="#">Section 19.6.92</a>
6.0	1312 Add USB-C Connection support to _UPC	<a href="#">Table 9-293</a> ; <a href="#">Section 9.14</a>
6.0	1306 New ACPI Version Placeholder	<a href="#">Table 5-33</a>
6.0	1302 Errata on reference in section 6.2.11.2 Platform-Wide OSPM Capabilities	<a href="#">Section 6.2.11.2</a>
6.0	1294 Typo in section 5.7.2: "Section" used when "Table" was meant	<a href="#">Section 5.7.2</a>
6.0	1293 Reserve "STAO" and "XENV" table signatures	<a href="#">Table 5-30</a>
6.0	1292 A Missing space in first paragraph of Section 2.4	<a href="#">Section 2.4</a>
6.0	1284 Battery ACPI ECR	<a href="#">Section 5-184</a> ; <a href="#">Section 10.2.2.7</a> ; <a href="#">Table 10-329</a> ; <a href="#">Section 10.2.2</a> ; <a href="#">Table 10-331</a>
6.0	1282 AML: Improve Disassembly of Control Method Invocations	<a href="#">Section 19.6.44</a> ; <a href="#">Section 20.2.5.2</a> ; <a href="#">Section 20-440</a>
6.0	1281 ASL Printf and Fprintf Debug Macros	<a href="#">Table 10-331</a> ; <a href="#">Table 10-331</a>
6.0	1280 ASL Helper Macro for _PLD (Physical Location of Device) - ToPLD()	<a href="#">Section 19.2.6</a> ; <a href="#">Section 19.3.4</a> ; <a href="#">Section 19.3.5.2</a> ; <a href="#">Section 19.3</a> ; <a href="#">Section 19.4</a> ; <a href="#">Section 19.6.52</a> ; <a href="#">Section 19.6.107</a>

ACPI Revision	Mantis Number / Description	Affected Sections
6.0	1279 ASL Extensions for Symbolic Operators and Expressions (ASL 2.0)	<a href="#">Section 19.1</a> ; <a href="#">Section 19.6.3</a> ; <a href="#">Section 19.6.5</a> ; <a href="#">Section 19.6.26</a> ; <a href="#">Section 19.6.31</a> ; <a href="#">Section 19.6.60</a> ; <a href="#">Section 19.6.61</a> ; <a href="#">Section 19.6.68</a> - <a href="#">Section 19.6.74</a> ; <a href="#">Section 19.6.78</a> ; <a href="#">Section 19.6.85</a> ; <a href="#">Section 19.6.86</a> ; <a href="#">Section 19.6.92</a>
6.0	1265 Missing word in figure 1-1	<a href="#">Figure 1-1</a>
6.0	1264 Device Power Management Clarifications	<a href="#">Section 2.3</a> ; <a href="#">Section 2.3.1</a> ; <a href="#">Section 3.3.1</a> ; <a href="#">Section 3.3</a> ; <a href="#">Section 3.4</a> ; <a href="#">Section 3.4.2</a> ; <a href="#">Section 3.4.3</a> ; <a href="#">Section 3.4.4x</a> ; <a href="#">Section 7</a> ; <a href="#">Section 7.1</a> ; <a href="#">Section 7.2x</a> ; <a href="#">Section 7.3</a>
6.0	1262 New Thermal Zone Objects	<a href="#">Table 5-184</a> ; <a href="#">Section 11.1.5.1</a> ; <a href="#">Section 11.4.8</a> ; <a href="#">Section 11.4.21</a>
6.0	1261 _OSC, add OS-->Platform information to communicate >16 p-states are supported	<a href="#">Table 6-200</a>
6.0	1258 Standby Thermal Trip	<a href="#">Section 11.4.5</a>
6.0	1253 Clarification of S5 (Soft-Off) and S1~S4 Sleeping States	<a href="#">Section 2.4</a> ; <a href="#">Section 3.9.4</a> ; <a href="#">Section 4.7</a> ; <a href="#">Section 4.8.2.3</a> ; <a href="#">Section 4.8.3.2.1</a> ; <a href="#">Section 7.3.1</a>
6.0	1252 Incorrect Indentation in first page of Section 3	<a href="#">Section 3</a>
6.0	1250 Support for Non-Volatile Memory Firmware Interfaces	<a href="#">Section 5.2</a> ; <a href="#">Section 5.2.25</a> ; <a href="#">Section 6.1.1</a> ; <a href="#">Section 5.6.6</a>
6.0	1241 PCC and level interrupts for HW reduced platforms	<a href="#">Section 14.1.2</a> ; <a href="#">Section 14.1.5</a>
6.0	1232 Deprecate Processor Keyword	<a href="#">Table 5-46</a> ; <a href="#">Table 5-52</a> ; <a href="#">Section 5.2.12.10</a> ; <a href="#">Section 5.2.12.12</a> ; <a href="#">Section 8.4</a> ; <a href="#">Section 11.7.1</a> ; <a href="#">Section 11.7.2</a> ; <a href="#">Section 19.6.30</a> ; <a href="#">Section 19.6.108</a>
6.0	1231 Adjust max p-states	<a href="#">Section 2.6</a>

ACPI Revision	Mantis Number / Description	Affected Sections
6.0	1230 Adding Support for Faster Thermal Sampling	<a href="#">Table 6-200</a> ; <a href="#">Table 5-184</a> ; <a href="#">Section 11.4.17</a> ; <a href="#">Section 11.4.22</a> ; <a href="#">Section 11.6</a>
6.0	1229 Reserve IORT and support for ARM GICv3/4 ITS in MADT	<a href="#">Table 5-29</a> ; <a href="#">Table 5-45</a> ; <a href="#">Section 5.2.12.18</a>
6.0	1206 Clarify _HID/_CID/_CLS usage model	<a href="#">Section 6.1</a> ; <a href="#">Section 6.1.5</a> ; <a href="#">Section 6.2x</a>
6.0	1203 CPPC heterogeneous performance capabilities	<a href="#">Section 8.4.7</a> ; <a href="#">Section 8.4.7.1</a> ; <a href="#">Section 8.4.7.10</a>
6.0	1197: MADT Efficiency Classes and wording change for MP Parking update	<a href="#">Table 5-60</a>
6.0	1176 FADT Hypervisor Vendor Identification Support	<a href="#">Table 5-33</a>
6.0	1171 Extend Address Ranger Types and UEFI Memory Type to comprehend persistent memory.	<a href="#">Table 5-37</a> ; <a href="#">Section 6.4.3.5.4.1</a> ; <a href="#">Section 15</a> ; <a href="#">Table 15-379</a> ; <a href="#">Section 15.4</a> ; <a href="#">Table 15-380</a>
6.0	1152 Support for Platform-specific device reset	<a href="#">Section 7.3.25</a> and <a href="#">Section 7.3.26</a> ; <a href="#">Table 7-255</a> ; <a href="#">Table 7-256</a>
6.0	1132 Generic Button(s) Abstraction	<a href="#">Table 5-183</a> ; Add new <a href="#">Section 9.19</a> and following.
6.0	1125 ACPI Low Power Idle Table (LPIT) and _LPD proposal	<a href="#">Section 5.6.7</a> ; <a href="#">Section 5.6.8</a> ; <a href="#">Table 6-200</a> ; <a href="#">Section 7.1</a> ; <a href="#">Section 7.2.5</a> ; <a href="#">Section 7.4.2.1</a> ; <a href="#">Section 8.4</a> ; <a href="#">Section 8.4.1</a> ; <a href="#">Section 8.4.2</a> ; <a href="#">Section 8.4.2.1</a> ; <a href="#">Section 8.4.3.1</a>
5.1 Errata	1265 Missing word in figure 1-1	<a href="#">Figure 1-1</a>
5.1 Errata	1252 Incorrect Indentation in first page of Section 3	<a href="#">Section 3</a>
5.1 Errata	1243 Clarify whether or not the FACS is optional or not	<a href="#">Section 5.2.9</a> ; <a href="#">Table 5-33</a>
5.1 Errata	1233 Fix broken Link and Example for _CLS	<a href="#">Section 6.1.3</a>

ACPI Revision	Mantis Number / Description	Affected Sections
5.1 Errata	1228 Present GIC version in MADT table	<a href="#">Table 5-62</a>
5.1 Errata	1196 Table reference in Section 9.8.3.2 is Incorrect	<a href="#">Section 9.9.3.2</a>
5.1 Errata	1193 Parking protocol field link is incorrect	<a href="#">Section 5.2.12.14</a> ; <a href="#">Table 5-60</a>
5.1 Errata	1190 Table references in Section 18 - ACPI Platform Error Interfaces (APEI) are incorrect	<a href="#">Table 18-383</a> ; <a href="#">Table 18-385</a>
5.1 Errata	1189 _CCA attribute default value description does not work for ARM systems	<a href="#">Section 6.2.17</a>
5.1	1181 MADT GICC table definition is wrong	Table 5-61; 5.2.12.14
5.1	1180 FADT minor version byte length is wrong	5-34
5.1	1179 Errors in GTDT Section of 5.1 draft	5.2.24, 5.2.24.1;Tables 5-115, 5-118, 5-121, 5-122
5.1	1175 Bad section reference in ACPI 5.1	19.2.3
5.1	1164 Modifications to UEFI Forum ownership of PNP ID and ACPI ID Registry	6.1.5
5.1	1161 Misc typos in draft documents	5.2.1.6; 5.2.16.4;5.2.24;5.2.12.14; 5.2.24.1.1; Table 5-74;Table 5-115-116;Table 5-118-119; Table 5-121; Table 5-61; 5-61 8.4.5.1, 8.4.5.1.2.3 Table 6-162, Table 8-229; RM duplicates from 1123/ 1130:8.4.5.1.31.1
5.1	1160 ACPI 5.1 draft corrections related to _DSD (SEE 1126 BELOW)	6.2.5;Was Table 5-133 & 6-142 now-->5-148 & 6-157
5.1	1157 Reserve ACPI Low Power Idle Table Signature "LPIT"	Table 5-31
5.1	1155 Updates to M1133 MADT	Table 5-63, 5-64
5.1	1151 Bug in ASL example code	PRT3 code example following Figure 9-49
5.1	1149 GTDT changes for new GT Configurations	5.2.24, 5.24.1x

ACPI Revision	Mantis Number / Description	Affected Sections
5.1	1136 Add a Notification Type for System Resource Affinity Change Event	Table 5-119 Device Object Notifications, new 17.2.2
5.1	1134 FADT changes for PSCI Support on ARM platforms	Table 5-34, 5-36, New table 5-37
5.1	1135 PCC Doorbell Protocol for HW-Reduced Platforms	14.1.1, 14.1.2-4, 14.2.1-2, 14.3-4
5.1	1133 MADT Updates for new GICs	5.2.12.15-17, Table 5-43, 5.2.12 table 5-45, 5-60, 5-61, 5-63, 5-66
5.1	1131 Per-device Cache-coherency Attribute	6.2, 6.2.16; Was Table 6-142-->Table 6-153
5.1	1126 Add _DSD Predefined Object-- "DeviceSpecific Data" properties	Was Table 5-133 & 6-142 now-->5-148 & 6-157
5.1	1123 CPPC Performance Feedback Counter Change 1130 CPPC2 [overlapping/duplicate tickets]	Tables 5-126, 8.4.5, 8.4.5.1x 8.4.5.1, 8.4.5.1.3.1-4; Was Table 8-218-->8-229
5.1	1116 Add x2APIC and GIC structure for _MAT method	6.2.10
5.0 B	1145 Support GICs in proximity domain	5.2.16 5.2. new section 16.4 new tables, 6.2.13 Table 5-65
5.0 B	1144 Fix the gap for Notify value description	5.6.6, new tables: Table 5-132, 5-133
5.0 B	1142 Error Source Notifications	18.3.2.6.2, 18.4, Table 18-290
5.0 B	1117 Move <a href="http://acpi.info/links.htm">http://acpi.info/links.htm</a> content to UEFI Forum Website	1.10, 5.2.4, 5.2.22.3, 5.2.24, 5.6.7, 9.8.3.2, 13, 13.2.2 A.2.4, A.2.5; Tables 5-31, 5-60, 5-133
5.0 B	1113 Typos in ACPI 5.0a	Table 6-184
5.0 B	1148 Inconsistent BIX object description/example	Was Table 10-234-->10-250
5.0 B	1143 Typos in ACPI 5.0a	6.1.8, 8.4.1
5.0 B	1102 Clarify Use of GPE Block Devices in Hardware-Reduced ACPI	3.11.1, 4.1, 9.10
5.0 B	Mantis 1114 Lack of description on Bit 4 of _STA	6.3.7

ACPI Revision	Mantis Number / Description	Affected Sections
5.0 A	Jira 51 incorrect type information	Table 19-322
5.0 A	Jira 50 Misspelling of "management"	3.10
5.0 A	Jira 49 Updated description of DereferOf to specify behavior when attempt is made to de-reference a reference (via Index) to a NULL (empty) package element.	19.5.29
5.0 A	Jira 48 Text changes to change PM Timer from required to optional	4.8.1.4, 4.8.2.1, 4.8.3.3, 5.2.9
5.0 A	Jira 46 Figure 5-29 is a printer killer	Fig 5-29
5.0 A	Jira 45 Typos in Figure 5-30	Fig 5-30
5.0 A	Jira 44 Link issues in table 5-133	Table 5-133
5.0 A	Jira 43 Invalid AddressSpaced keywords in example ASL code, orphan _REG	6.5.4
5.0 A	Jira 42 Serious bug in ASL example code for _OSC	6.2.10.4
5.0 A	Jira 41 Fix problems with PCC address space description	14.5
5.0 A	Jira 40 Issues with _GRT and _SRT Buffer description	9.18.3, 9.18.4
5.0 A	Jira 39 Clarification needed for _CST	Table 8-206
5.0 A	Jira 38 Incorrect field name in "Generic Register Descriptor".	6.4.3.7
5.0 A	Jira 37 Clarifications for _CPC method	8.4.5.1.2.1-2
5.0 A	Jira 36 Restore legality of module-level executable AML code.	19.1.3
5.0 A	Jira 35 ASL grammar: "UserTerm" is confusing	19.1
5.0 A	Jira 34 Description of _GTM has a bad line with very large font	9.8.2.1.1
5.0 A	Jira 33 Missing information in _CPC description	8.4.5.1
5.0 A	Jira 32 Error in description of _REG method	6.5.4
5.0 A	Jira 31 Clarify length field for Serial resource descriptor	6.4.3.8.2 Table 6-190
5.0 A	Jira 30 Argument descriptions in incorrect order for resource descriptors	19.5.41, 19.5.101
5.0 A	Jira 29 Issues with memory descriptors (grammar and macros)	19.1, 19.5
5.0 A	Jira 28 Problems with ASL grammar entry for DWordMemory	19.1.8
5.0 A	Jira 27 Problems with Unicode description for _MLS method	6.1.7
5.0 A	Jira 26 Incorrect grammar for "32-bits" and "64-bits"	throughout

ACPI Revision	Mantis Number / Description	Affected Sections
5.0 A	Jira 25 Incorrect table reference in 19.2.5.4	19.2.5.4
5.0 A	Jira 24 Resource Descriptor tables -- formatting issues	6.4
5.0 A	Jira 23 Interrupt Descriptors: Wake bit should be split from Share bit	6.4
5.0 A	Jira 22 ASL grammar for ObjectType operator is incorrect	19.1.6
5.0 A	Jira 21 ASL grammar is missing description of type 6 opcodes	19.1.5
5.0 A	Jira 20 Problems with table 5-31 (reserved ACPI table signatures)	Table 5-31
5.0 A	Jira 19 Clarify description of _BQC method	B.5.4
5.0 A	Jira 18 Fix for EC OpRegion availability example	5.2.15
5.0 A	Jira 17 Clarify meaning of BGRT status field	Table 5-97
5.0 A	Jira 16 Correction to _DSM example	9.14.1
5.0 A	Jira 15 Clarify _DSM backward compatibility requirement and example	9.15.1
5.0 A	Jira 14 Description of _CPC is missing definition of unsupported optional registers	8.4.5.1
5.0 A	Jira 13 Incorrect _PLD name expansion	Table 5-133, 6.1.8
5.0 A	Jira 12 PLD description needs clarification	6.1.8
5.0 A	Jira 11 Errata forwarded from HP	5.2.24,5.6.5.3
5.0 A	Jira 10 More issues with ACPI table 5-133	Table 5-133
5.0 A	Jira 7 Error in QWordIO, ExtendedIO descriptions	19.5.41,19.5.101
5.0 A	Jira 6 Appendix A is now misnamed in ACPI 5.0	Appendix A
5.0 A	Jira 5 PARTIAL--Need group agreement--Method _GTS and _BFS are unused, should be removed from ACPI spec.	7.3, 7.3.3, 16.1, 16.1.6-7, fig. 7-204
5.0 A	Jira 4 Table 5-133 - issues with _Sx methods	Table 5-133
5.0 A	Jira 3 Issues with predefined names table (table 5-133)	Table 5-133
5.0 A	Jira 2 Description of new sleep control register incorrect	Table 4-24
5.0 A	Jira 1 SystemCMOS keyword inconsistencies	Table 5-114, 5.5.2.4.1, 6.5.4 19.5.96, 9.15.1 - 2, 19.5.96, 20.2.5.2
5.0 Dec. 2, 2011	Ptec-002	5.2.6

ACPI Revision	Mantis Number / Description	Affected Sections
5.0	MSFT-020 Enumeration Power Controls	7.2.7, 7.2.12,
5.0	MSFT-019 GTDT table	5.2.24
5.0	MSFT_0018 Locking Targets from AML	5.7.5
5.0	MSFT-0017 PLD clarification for handheld form factors	5.1.8
5.0	MSFT-0016 Extended GPIO-signaled Event Numbers	5.6.5.3
5.0	MSFT-0015 (0.1) D3 Cold Errata	7.2.1, 7.2.18 through 7.2.22
5.0	MSFT-0014	5.2.23
5.0	MSFT-0013_ADR for SIO	6.2
5.0	MSFT-0012 ROM (Get ROM Data)	5.6.6, 9.16
	MSFT-010 Reserved Table Signatures	5.2.6
5.0	MSFT-0009 (0.4)TimeAndAlarmDevice Modification	9.18
5.0	MSFT-0008 Collaborative Processor Performance Control	8.4.5
5.0	MSFT-0007 Platform Communications Channel added (new ch. 14)	Ch 14 (new)
5.0	MSFT-0007-0008 - Platform_Communication_Channel_and_CPPC_changes	(new) 14
5.0	MSFT-0006 SPB Abstraction	3.11.3, 5.5.2.4.5.x, 6.4.3.8.2, 6.5.8, 18.1.3, 18.1.6, 18.1.7, 18.5.44, 18.5x, 19.2.5.2
5.0	MSFT-0005 GPIO Abstraction	5.5.2.4.x, 5.6, 5.6.5.x, 6.4.3, 6.3.8.x, 18.5.51, 18.5.52, 18.5.89
5.0	MSFT-0004 (0.2) Fixed DMA Descriptor	6.4.2.9, 18.5.50
5.0	MSFT-0003 Device identification	6.1, 6.1.3, 6.1.5, 6.1.6, 6.1.9
5.0	MSFT-0002 Interrupt Descriptors for Generic Interrupt Controller	5.2.11, 5.2.14-15
5.0	MSFT-0001 HW-reduced ACPI	3.11.x, 4, 4.1.x, 4.3.7, 5.2.9, 5.2.9.1, 6.4.2.1, 6.4.3.6, 7.2.11, 7.3.4, 9.6, 12, 12.1, 12.6, 12.11, 12.11.1, 15, 15.1.x, 15.3, 15.3.1.x, 18.5.55, 18.5.57
5.0	INTC-0014 Remove a line (reference) not needed	A.2.3
5.0	INTC-0013	
5.0	INTC-0012 fix AML opcode table	19.3

ACPI Revision	Mantis Number / Description	Affected Sections
5.0	INTC-0011 fix table offsets	18.6.x (tables)
5.0	INTC-0010 Update Constant Descriptions	18.5.88, 18.5.89,18.5.104,18.5.136
5.0	INTC0009 RASF	5.2.20.x
5.0	INTC-008	5.2.6
5.0	INTC-006 Fixed Example	6.2.10.4
5.0	INTC-005 Update Package Description	18.5.92
5.0	INTC-004 Table Definition Language	20, 21.x
5.0	INTC-003 MPST	6.1, 6.1.3, 6.1.5,6.1.6, 6.1.9
5.0	INTC-002 EINJ	17.6.1, 17.6.3, 17.6.5
5.0	INTC-001 (0.8) Firmware Performance Data Table (FPDT)	5.2.20.4, 5.2.20.6
5.0	INTC-001 Firmware Performance Data Table (FPDT) (0.4)	5.2.19- 5.2.20.6
5.0	HP-0002 Additional Hardware Error Notification Types	18.3.2.7
5.0	HP-0001 (0.2) BMC Requested Graceful Shutdown	5.6.5, 6.3.5
5.0	ACPI4.0 _DSM function 0 clarification	9.14.1
5.0	AMD-002 0.3 ROM (Get ROM Data)	B.3.3
4.0a Apr. 2010	Errata corrected and clarifications added. Removed text concerning government requirement of mechanical off Clarified URL update document, Corrected section references for APIC, SLIT, SRAT in Table 5-5, Update URLs and reformatted Table 5-	2.2 5.2.6 5.2.12.4

ACPI Revision	Mantis Number / Description	Affected Sections
	<p>Removed “TODO” note. Updated example</p> <p>Repaired diagram that would not display properly Figure 15-1</p> <p>Corrected error conditions from “fatal” to “corrected”</p> <p>Corrected several incorrect section references, Clarified number of Generic Error Data Entry structures is <math>\geq 1</math> (not Zero)</p> <p>Clarified number of Generic Error Data Entry structures is <math>\geq 1</math> (not Zero)</p> <p>Added new section clarifying SCI notification for generic error sources</p> <p>Added new section describing Firmware First error handling</p> <p>Clarified purpose of the codes Table 17-17</p> <p>Added reference to table of COMMAND_STATUS codes Table 17-23</p> <p>Clarified purpose of the command status codes in Table 17-27 and the error type definitions in Table 17-28</p> <p>Added _ATT resource descriptor field name</p> <p>Clarified rules for Buffer vs. Integer return types from a field unit</p> <p>Corrected section/page reference</p>	10.4.1 10.5 15.1 17.1 17.3.1 17.3.2.6.1 17.3.2.6.2 17.4 17.5.1.1 17.6.1 17.6.3 18.1.8 18.5.44,89 18.5.101
4.0 June 2009	Major specification revision. Clock Domains, x2APIC Support, Logical Processor Idling, Corrected Platform Error Polling Table, Maximum System Characteristics Table, Power Metering and Budgeting, IPMI Operation Region, USB3 Support in _PLD, Re-evaluation of _PPC acknowledgement via _OST, Thermal Model Enhancements, _OSC at \_SB, Wake Alarm Device, Battery Related Extensions, Memory Bandwidth Monitoring and Reporting, ACPI Hardware Error Interfaces, D3hot.	
3.0b Oct. 2006	Errata corrected and clarifications added.	
3.0a Dec. 2005	Errata corrected and clarifications added.	
3.0 Sept. 2004	Major specification revision. General configuration enhancements. Inter-Processor power, performance, and throttling state dependency support added. Support for > 256 processors added. NUMA Distancing support added. PCI Express support added. SATA support added. Ambient Light Sensor and User Presence device support added. Thermal model extended beyond processor-centric support.	

<b>ACPI Revision</b>	<b>Mantis Number / Description</b>	<b>Affected Sections</b>
2.0c Aug. 2003	Errata corrected and clarifications added.	
2.0b Oct. 2002	Errata corrected and clarifications added.	
2.0a Mar. 2002	Errata corrected and clarifications added. ACPI 2.0 Errata Document Revision 1.0 through 1.5 integrated.	
ACPI 2.0 Errata Doc. Rev. 1.5	Errata corrected and clarifications added.	
ACPI 2.0 Errata Doc. Rev. 1.4	Errata corrected and clarifications added.	
ACPI 2.0 Errata Doc. Rev. 1.3	Errata corrected and clarifications added.	
ACPI 2.0 Errata Doc. Rev. 1.2	Errata corrected and clarifications added.	
ACPI 2.0 Errata Doc. Rev. 1.1	Errata corrected and clarifications added.	
ACPI 2.0 Errata Doc. Rev. 1.0	Errata corrected and clarifications added.	
2.0 Aug. 2000	Major specification revision. 64-bit addressing support added. Processor and device performance state support added. Numerous multiprocessor workstation and server-related enhancements. Consistency and readability enhancements throughout.	
1.0b Feb. 1999	Errata corrected and clarifications added. New interfaces added.	

<b>ACPI Revision</b>	<b>Mantis Number / Description</b>	<b>Affected Sections</b>
1.0a Jul. 1998	Errata corrected and clarifications added. New interfaces added.	
1.0 Dec. 1996	Original Release.	

# Table of Contents

---

<b>Revision History.....</b>	<b>iii</b>
<b>Table of Contents.....</b>	<b>xxvi</b>
<b>List of Tables.....</b>	<b>xliii</b>
<b>List of Figures .....</b>	<b>iii</b>
<b>Overview.....</b>	<b>1</b>
<b>1 Introduction.....</b>	<b>8</b>
1.1 Principal Goals .....	8
1.2 Power Management Rationale.....	9
1.3 Legacy Support.....	10
1.4 OEM Implementation Strategy.....	10
1.5 Power and Sleep Buttons .....	11
1.6 ACPI Specification and the Structure of ACPI .....	11
1.7 OS and Platform Compliance .....	13
1.7.1 Platform Implementations of ACPI-defined Interfaces .....	13
1.7.2 OSPM Implementations .....	17
1.7.3 OS Requirements.....	17
1.8 Target Audience.....	18
1.9 Document Organization .....	18
1.9.1 ACPI Introduction and Overview .....	19
1.9.2 Programming Models .....	19
1.9.3 Implementation Details.....	19
1.9.4 Technical Reference .....	21
1.9.5 Revision Numbers.....	21
1.10 Related Documents .....	21
<b>2 Definition of Terms.....</b>	<b>23</b>
2.1 General ACPI Terminology .....	23
2.2 Global System State Definitions .....	33
2.3 Device Power State Definitions.....	35
2.3.1 Device Performance States .....	37
2.4 Sleeping and Soft-off State Definitions .....	37
2.5 Processor Power State Definitions .....	38
2.6 Device and Processor Performance State Definitions .....	38
<b>3 ACPI Concepts.....</b>	<b>40</b>
3.1 System Power Management.....	42
3.2 Power States.....	42
3.2.1 Power Button.....	43
3.2.2 Platform Power Management Characteristics .....	43
3.3 Device Power Management.....	44
3.3.1 Device Power Management Model .....	45
3.3.2 Power Management Standards.....	46

3.3.3 Device Power States .....	46
3.3.4 Device Power State Definitions .....	46
3.4 Controlling Device Power.....	47
3.4.1 Getting Device Power Capabilities .....	47
3.4.2 Setting Device Power States.....	48
3.4.3 Getting Device Power Status .....	48
3.4.4 Waking the System .....	48
3.4.5 Example: Modem Device Power Management .....	49
3.5 Processor Power Management.....	52
3.6 Device and Processor Performance States .....	52
3.7 Configuration and “Plug and Play” .....	53
3.7.1 Device Configuration Example: Configuring the Modem .....	53
3.7.2 NUMA Nodes .....	53
3.8 System Events .....	54
3.9 Battery Management.....	54
3.9.1 Battery Communications .....	55
3.9.2 Battery Capacity .....	55
3.9.3 Battery Gas Gauge .....	55
3.9.4 Low Battery Levels.....	56
3.9.5 Battery Calibration.....	58
3.10 Thermal Management.....	58
3.10.1 Active and Passive Cooling Modes .....	59
3.10.2 Performance vs. Energy Conservation .....	60
3.10.3 Acoustics (Noise) .....	60
3.10.4 Multiple Thermal Zones.....	60
3.11 Flexible Platform Architecture Support .....	60
3.11.1 Hardware-reduced ACPI .....	61
3.11.2 Low-Power Idle .....	61
3.11.3 Connection Resources .....	61
<b>4 ACPI Hardware Specification .....</b>	<b>64</b>
4.1 Hardware-Reduced ACPI .....	64
4.1.1 Hardware-Reduced Events .....	65
4.2 Fixed Hardware Programming Model .....	65
4.3 Generic Hardware Programming Model .....	66
4.4 Diagram Legends.....	68
4.5 Register Bit Notation .....	69
4.6 The ACPI Hardware Model .....	69
4.6.1 Hardware Reserved Bits .....	74
4.6.2 Hardware Ignored Bits .....	74
4.6.3 Hardware Write-Only Bits.....	74
4.6.4 Cross Device Dependencies .....	74
4.7 ACPI Hardware Features .....	75
4.8 ACPI Register Model .....	77
4.8.1 ACPI Register Summary .....	80
4.8.2 Fixed Hardware Features.....	82
4.8.3 Fixed Hardware Registers.....	93

4.8.4 Generic Hardware Registers .....	102
<b>5 ACPI Software Programming Model .....</b>	<b>109</b>
5.1 Overview of the System Description Table Architecture .....	109
5.1.1 Address Space Translation .....	112
5.2 ACPI System Description Tables .....	112
5.2.1 Reserved Bits and Fields .....	113
5.2.2 Compatibility.....	113
5.2.3 Address Format.....	113
5.2.4 Universally Unique Identifiers (UUIDs).....	116
5.2.5 Root System Description Pointer (RSDP).....	116
5.2.6 System Description Table Header .....	118
5.2.7 Root System Description Table (RSDT) .....	124
5.2.8 Extended System Description Table (XSDT) .....	125
5.2.9 Fixed ACPI Description Table (FADT) .....	126
5.2.10 Firmware ACPI Control Structure (FACS).....	142
5.2.11 Definition Blocks.....	148
5.2.12 Multiple APIC Description Table (MADT).....	151
5.2.13 Global System Interrupts.....	168
5.2.14 Smart Battery Table (SBST) .....	169
5.2.15 Embedded Controller Boot Resources Table (ECDT) .....	170
5.2.16 System Resource Affinity Table (SRAT) .....	172
5.2.17 System Locality Distance Information Table (SLIT) .....	179
5.2.18 Corrected Platform Error Polling Table (CPEP) .....	180
5.2.19 Maximum System Characteristics Table (MSCT) .....	182
5.2.20 ACPI RAS Feature Table (RASF) .....	184
5.2.21 Memory Power State Table (MPST) .....	188
5.2.22 Boot Graphics Resource Table (BGRT).....	206
5.2.23 Firmware Performance Data Table (FPDT) .....	209
5.2.24 Generic Timer Description Table (GTDT) .....	216
5.2.25 NVDIMM Firmware Interface Table (NFIT) .....	222
5.2.26 Secure Devices (SDEV) ACPI Table .....	239
5.2.27 Heterogeneous Memory Attribute Table (HMAT).....	243
5.2.28 Platform Debug Trigger Table (PDTT) .....	252
5.2.29 Processor Properties Topology Table (PPTT) .....	256
5.3 ACPI Namespace .....	265
5.3.1 Predefined Root Namespaces .....	268
5.3.2 Objects .....	268
5.4 Definition Block Encoding .....	268
5.4.1 AML Encoding.....	269
5.4.2 Definition Block Loading.....	269
5.5 Control Methods and the ACPI Source Language (ASL).....	271
5.5.1 ASL Statements .....	272
5.5.2 Control Method Execution.....	272
5.6 ACPI Event Programming Model .....	302
5.6.1 ACPI Event Programming Model Components.....	302
5.6.2 Types of ACPI Events .....	303

5.6.3 Fixed Event Handling .....	304
5.6.4 General-Purpose Event Handling .....	304
5.6.5 GPIO-signaled ACPI Events .....	309
5.6.6 Device Object Notifications .....	311
5.6.7 Device Class-Specific Objects .....	318
5.6.8 Predefined ACPI Names for Objects, Methods, and Resources.....	320
5.6.9 Interrupt-signaled ACPI events .....	331
5.6.10 Managing a Wake Event Using Device _PRW Objects .....	334
5.7 Predefined Objects .....	335
5.7.1 \_GL (Global Lock Mutex) .....	335
5.7.2 _OSI (Operating System Interfaces) .....	335
5.7.3 \_OS (OS Name Object) .....	338
5.7.4 \_REV (Revision Data Object).....	339
5.7.5 _DLM (DeviceLock Mutex).....	339
5.8 System Configuration Objects .....	341
5.8.1 _PIC Method .....	341
<b>6 Device Configuration .....</b>	<b>342</b>
6.1 Device Identification Objects.....	342
6.1.1 _ADR (Address) .....	343
6.1.2 _CID (Compatible ID).....	345
6.1.3 _CLS (Class Code) .....	346
6.1.4 _DDN (DOS Device Name).....	346
6.1.5 _HID (Hardware ID) .....	346
6.1.6 _HRV (Hardware Revision).....	347
6.1.7 _MLS (Multiple Language String).....	347
6.1.8 _PLD (Physical Location of Device).....	349
6.1.9 _SUB (Subsystem ID) .....	357
6.1.10 _STR (String) .....	357
6.1.11 _SUN (Slot User Number).....	357
6.1.12 _UID (Unique ID).....	358
6.2 Device Configuration Objects .....	358
6.2.1 _CDM (Clock Domain) .....	359
6.2.2 _CRS (Current Resource Settings).....	360
6.2.3 _DIS (Disable).....	360
6.2.4 _DMA (Direct Memory Access).....	361
6.2.5 _DSD (Device Specific Data) .....	362
6.2.6 _FIX (Fixed Register Resource Provider) .....	365
6.2.7 _GSB (Global System Interrupt Base) .....	367
6.2.8 _HPP (Hot Plug Parameters) .....	368
6.2.9 _HPX (Hot Plug Parameter Extensions) .....	371
6.2.10 _MAT (Multiple APIC Table Entry) .....	385
6.2.11 _OSC (Operating System Capabilities).....	386
6.2.12 _PRS (Possible Resource Settings) .....	396
6.2.13 _PRT (PCI Routing Table) .....	397
6.2.14 _PXM (Proximity) .....	399
6.2.15 _SLI (System Locality Information) .....	400

6.2.16 _SRS (Set Resource Settings).....	402
6.2.17 _CCA (Cache Coherency Attribute) .....	403
6.2.18 _HMA(Heterogeneous Memory Attributes) .....	405
6.3 Device Insertion, Removal, and Status Objects.....	405
6.3.1 _EDL (Eject Device List) .....	407
6.3.2 _EJD (Ejection Dependent Device).....	408
6.3.3 _EJx (Eject).....	409
6.3.4 _LCK (Lock) .....	410
6.3.5 _OST (OSPM Status Indication) .....	410
6.3.6 _RMV (Remove) .....	416
6.3.7 _STA (Status).....	417
6.4 Resource Data Types for ACPI.....	418
6.4.1 ASL Macros for Resource Descriptors.....	418
6.4.2 Small Resource Data Type .....	418
6.4.3 Large Resource Data Type .....	424
6.5 Other Objects and Control Methods .....	470
6.5.1 _INI (Init) .....	470
6.5.2 _DCK (Dock) .....	471
6.5.3 _BDN (BIOS Dock Name).....	472
6.5.4 _REG (Region).....	472
6.5.5 _BBN (Base Bus Number) .....	474
6.5.6 _SEG (Segment).....	474
6.5.7 _GLK (Global Lock).....	476
6.5.8 _DEP (Operation Region Dependencies) .....	476
6.5.9 _FIT (Firmware Interface Table) .....	477
6.5.10 NVDIMM Label Methods .....	478
<b>7 Power and Performance Management .....</b>	<b>481</b>
7.1 Power Resource Objects and the Power Management Models .....	481
7.2 Declaring a Power Resource Object .....	482
7.2.1 Defined Methods for a Power Resource .....	484
7.2.2 _OFF .....	484
7.2.3 _ON .....	484
7.2.4 _STA (Status).....	485
7.2.5 Passive Power Resources .....	485
7.3 Device Power Management Objects.....	485
7.3.1 _DSW (Device Sleep Wake) .....	487
7.3.2 _PS0 (Power State 0) .....	488
7.3.3 _PS1 (Power State 1) .....	488
7.3.4 _PS2 (Power State 2) .....	488
7.3.5 _PS3 (Power State 3) .....	488
7.3.6 _PSC (Power State Current).....	489
7.3.7 _PSE (Power State for Enumeration) .....	489
7.3.8 _PR0 (Power Resources for D0).....	489
7.3.9 _PR1 (Power Resources for D1).....	490
7.3.10 _PR2 (Power Resources for D2).....	490
7.3.11 _PR3 (Power Resources for D3hot).....	491

7.3.12 _PRE (Power Resources for Enumeration) .....	491
7.3.13 _PRW (Power Resources for Wake).....	492
7.3.14 _PSW (Power State Wake).....	493
7.3.15 _IRC (In Rush Current) .....	494
7.3.16 _S1D (S1 Device State) .....	494
7.3.17 _S2D (S2 Device State) .....	495
7.3.18 _S3D (S3 Device State) .....	496
7.3.19 _S4D (S4 Device State) .....	496
7.3.20 _S0W (S0 Device Wake State) .....	497
7.3.21 _S1W (S1 Device Wake State).....	497
7.3.22 _S2W (S2 Device Wake State).....	497
7.3.23 _S3W (S3 Device Wake State).....	498
7.3.24 _S4W (S4 Device Wake State) .....	498
7.3.25 _RST (Device Reset) .....	499
7.3.26 _PRR (Power Resource for Reset) .....	499
7.4 OEM-Supplied System-Level Control Methods .....	499
7.4.1 \_PTS (Prepare To Sleep).....	500
7.4.2 \_Sx (System States) .....	500
7.4.3 _SWS (System Wake Source) .....	505
7.4.4 \_TTS (Transition To State).....	506
7.4.5 \_WAK (System Wake) .....	507
7.5 OSPM usage of _PTS, _TTS, and _WAK.....	508
<b>8 Processor Configuration and Control .....</b>	<b>509</b>
8.1 Processor Power States .....	509
8.1.1 Processor Power State C0.....	511
8.1.2 Processor Power State C1.....	513
8.1.3 Processor Power State C2.....	513
8.1.4 Processor Power State C3.....	513
8.1.5 Additional Processor Power States.....	514
8.2 Flushing Caches .....	515
8.3 Power, Performance, and Throttling State Dependencies .....	515
8.4 Declaring Processors .....	516
8.4.1 _PDC (Processor Driver Capabilities).....	516
8.4.2 Processor Power State Control.....	518
8.4.3 Processor Hierarchy.....	524
8.4.4 Lower Power Idle States .....	525
8.4.5 Processor Throttling Controls.....	551
8.4.6 Processor Performance Control .....	559
8.4.7 Collaborative Processor Performance Control.....	567
8.4.8 _PPE (Polling for Platform Errors) .....	586
8.5 Processor Aggregator Device .....	586
8.5.1 Logical Processor Idling .....	586
8.5.2 OSPM _OST Evaluation .....	587
<b>9 ACPI-Defined Devices and Device-Specific Objects.....</b>	<b>589</b>
9.1 Device Object Name Collision .....	589
9.1.1 _DSM (Device Specific Method) .....	589

9.2 \_SI System Indicators .....	592
9.2.1 _SST (System Status).....	592
9.2.2 _MSG (Message).....	592
9.2.3 _BLT (Battery Level Threshold) .....	593
9.3 Ambient Light Sensor Device.....	593
9.3.1 Overview .....	594
9.3.2 _ALI (Ambient Light Illuminance) .....	595
9.3.3 _ALT (Ambient Light Temperature).....	595
9.3.4 _ALC (Ambient Light Color Chromaticity) .....	595
9.3.5 _ALR (Ambient Light Response).....	596
9.3.6 _ALP (Ambient Light Polling) .....	600
9.3.7 Ambient Light Sensor Events.....	600
9.3.8 Relationship to Backlight Control Methods .....	601
9.4 Battery Device.....	601
9.5 Control Method Lid Device.....	601
9.5.1 _LID.....	601
9.6 Control Method Power and Sleep Button Devices .....	602
9.7 Embedded Controller Device .....	602
9.8 Generic Container Device .....	602
9.9 ATA Controller Devices.....	603
9.9.1 Objects for Both ATA and SATA Controllers.....	603
9.9.2 IDE Controller Device.....	604
9.9.3 Serial ATA (SATA) Controller Device.....	607
9.10 Floppy Controller Device Objects .....	609
9.10.1 _FDE (Floppy Disk Enumerate) .....	609
9.10.2 _FDI (Floppy Disk Information) .....	610
9.10.3 _FDM (Floppy Disk Drive Mode).....	611
9.11 GPE Block Device.....	611
9.11.1 Matching Control Methods for Events in a GPE Block Device .....	612
9.12 Module Device .....	613
9.13 Memory Devices .....	616
9.13.1 Address Decoding .....	616
9.13.2 Memory Bandwidth Monitoring and Reporting .....	616
9.13.3 _OSC Definition for Memory Device .....	618
9.13.4 Example: Memory Device .....	619
9.14 _UPC (USB Port Capabilities) .....	619
9.14.1 USB 2.0 Host Controllers and _UPC and _PLD .....	624
9.15 PC/AT RTC/CMOS Devices .....	626
9.15.1 PC/AT-compatible RTC/CMOS Devices (PNP0B00) .....	626
9.15.3 Dallas Semiconductor-compatible RTC/CMOS Devices (PNP0B02) .....	628
9.16 User Presence Detection Device .....	628
9.16.1 _UPD (User Presence Detect) .....	628
9.16.2 _UPP (User Presence Polling) .....	629
9.16.3 User Presence Sensor Events .....	629
9.17 I/O APIC Device .....	629
9.18 Time and Alarm Device.....	630
9.18.2 _GCP (Get Capability) .....	634

9.18.3 _GRT (Get Real Time) .....	634
9.18.4 _SRT (Set Real Time) .....	635
9.18.5 _GWS (Get Wake alarm status) .....	636
9.18.6 _CWS (Clear Wake alarm status) .....	637
9.18.7 _STP (Set Expired Timer Wake Policy) .....	637
9.18.8 _STV (Set Timer Value) .....	637
9.18.9 _TIP (Expired Timer Wake Policy) .....	638
9.18.10 _TIV (Timer Values) .....	638
9.18.11 ACPI Wakeup Alarm Events .....	638
9.18.12 Relationship to Real Time Clock Alarm .....	639
9.18.13 Time and Alarm device as a replacement to the RTC .....	639
9.18.14 Relationship to UEFI time source .....	639
9.18.15 Example ASL code .....	639
9.19 Generic Buttons Device .....	643
9.19.1 Button Interrupts .....	643
9.19.2 Button Usages and Collections .....	644
9.19.3 Example .....	645
9.20 NVDIMM Devices .....	647
9.20.1 Overview .....	647
9.20.2 NVDIMM Root Device .....	647
9.20.3 NVDIMM Device .....	647
9.20.4 Example .....	647
9.20.5 Loading NVDIMM drivers .....	648
9.20.6 Hot Plug Support .....	649
9.20.7 NVDIMM Root Device _DSMs .....	650
9.20.8 NVDIMM Device Methods .....	665
<b>10 Power Source and Power Meter Devices .....</b>	<b>673</b>
10.1 Smart Battery Subsystems .....	673
10.1.1 ACPI Smart Battery Status Change Notification Requirements .....	675
10.1.2 Smart Battery Objects .....	676
10.1.3 _SBS (Smart Battery Subsystem) .....	676
10.2 Control Method Batteries .....	680
10.2.1 Battery Events .....	680
10.2.2 Battery Control Methods .....	681
10.3 AC Adapters and Power Source Objects .....	695
10.3.1 _PSR (Power Source) .....	696
10.3.2 _PCL (Power Consumer List) .....	696
10.3.3 _PIF (Power Source Information) .....	696
10.3.4 _PRL (Power Source Redundancy List) .....	697
10.4 Power Meters .....	698
10.4.1 _PMC (Power Meter Capabilities) .....	698
10.4.2 _PTP (Power Trip Points) .....	700
10.4.3 _PMM (Power Meter Measurement) .....	701
10.4.4 _PAI (Power Averaging Interval) .....	701
10.4.5 _GAI (Get Averaging Interval) .....	702
10.4.6 _SHL (Set Hardware Limit) .....	702

10.4.7 _GHL (Get Hardware Limit) .....	702
10.4.8 _PMD (Power Metered Devices).....	703
10.5 Wireless Power Controllers.....	703
10.5.1 Wireless Power Calibration Device .....	704
10.5.2 Wireless Power Calibration (_WPC) .....	704
10.5.3 Wireless Power Polling (_WPP).....	704
10.6 Wireless Power Calibration Event .....	705
10.7 Example: Power Source and Power Meter Namespace.....	705
<b>11 Thermal Management.....</b>	<b>707</b>
11.1 Thermal Control .....	707
11.1.1 Active, Passive, and Critical Policies .....	708
11.1.2 Dynamically Changing Cooling Temperature Trip Points .....	709
11.1.3 Detecting Temperature Changes .....	710
11.1.4 Active Cooling .....	712
11.1.5 Passive Cooling .....	713
11.1.6 Critical Shutdown .....	714
11.2 Cooling Preferences .....	715
11.2.1 Evaluating Thermal Device Lists .....	716
11.2.2 Evaluating Device Thermal Relationship Information .....	717
11.3 Fan Device.....	717
11.3.1 Fan Objects .....	718
11.4 Thermal Objects.....	721
11.4.1 _ACx (Active Cooling) .....	722
11.4.2 _ALx (Active List) .....	723
11.4.3 _ART (Active Cooling Relationship Table).....	723
11.4.4 _CRT (Critical Temperature).....	726
11.4.5 _CR3 (Warm/Standby Temperature) .....	726
11.4.6 _DTI (Device Temperature Indication) .....	727
11.4.7 _HOT (Hot Temperature) .....	727
11.4.8 _MTL (Minimum Throttle Limit) .....	727
11.4.9 _NTT (Notification Temperature Threshold) .....	728
11.4.10 _PSL (Passive List).....	728
11.4.11 _PSV (Passive) .....	728
11.4.12 _RTV (Relative Temperature Values) .....	729
11.4.13 _SCP (Set Cooling Policy) .....	729
11.4.14 _STR (String) .....	733
11.4.15 _TC1 (Thermal Constant 1) .....	733
11.4.16 _TC2 (Thermal Constant 2) .....	733
11.4.17 _TFP (Thermal fast Sampling Period) .....	733
11.4.18 _TMP (Temperature).....	734
11.4.19 _TPT (Trip Point Temperature) .....	734
11.4.20 _TRT (Thermal Relationship Table).....	734
11.4.21 _TSN (Thermal Sensor Device) .....	735
11.4.22 _TSP (Thermal Sampling Period) .....	735
11.4.23 _TST (Temperature Sensor Threshold) .....	736
11.4.24 _TZD (Thermal Zone Devices).....	736

11.4.25 _TZM (Thermal Zone Member).....	737
11.4.26 _TZA (Thermal Zone Polling).....	737
11.5 Native OS Device Driver Thermal Interfaces .....	737
11.6 Thermal Zone Interface Requirements .....	738
11.7 Thermal Zone Examples.....	738
11.7.1 Example: The Basic Thermal Zone.....	738
11.7.2 Example: Multiple-Speed Fans .....	740
11.7.3 Example: Thermal Zone with Multiple Devices .....	742
<b>12 ACPI Embedded Controller Interface Specification .....</b>	<b>750</b>
12.1 Embedded Controller Interface Description .....	750
12.2 Embedded Controller Register Descriptions .....	753
12.2.1 Embedded Controller Status, EC_SC (R) .....	753
12.2.2 Embedded Controller Command, EC_SC (W).....	755
12.2.3 Embedded Controller Data, EC_DATA (R/W).....	755
12.3 Embedded Controller Command Set .....	755
12.3.1 Read Embedded Controller, RD_EC (0x80) .....	755
12.3.2 Write Embedded Controller, WR_EC (0x81).....	755
12.3.3 Burst Enable Embedded Controller, BE_EC (0x82).....	756
12.3.4 Burst Disable Embedded Controller, BD_EC (0x83).....	756
12.3.5 Query Embedded Controller, QR_EC (0x84).....	757
12.4 SMBus Host Controller Notification Header (Optional), OS_SMB_EVT .....	757
12.5 Embedded Controller Firmware .....	757
12.6 Interrupt Model.....	758
12.6.1 Event Interrupt Model.....	758
12.6.2 Command Interrupt Model .....	758
12.7 Embedded Controller Interfacing Algorithms .....	759
12.8 Embedded Controller Description Information .....	759
12.9 SMBus Host Controller Interface via Embedded Controller.....	760
12.9.1 Register Description.....	760
12.9.2 Protocol Description .....	764
12.10 SMBus Devices.....	771
12.10.1 SMBus Device Access Restrictions .....	771
12.10.2 SMBus Device Command Access Restriction .....	771
12.11 Defining an Embedded Controller Device in ACPI Namespace .....	772
12.11.1 Example: EC Definition ASL Code .....	772
12.12 Defining an EC SMBus Host Controller in ACPI Namespace.....	773
12.12.1 Example: EC SMBus Host Controller ASL-Code .....	773
<b>13 ACPI System Management Bus Interface Specification .....</b>	<b>775</b>
13.1 SMBus Overview .....	775
13.1.1 SMBus Slave Addresses.....	775
13.1.2 SMBus Protocols.....	776
13.1.3 SMBus Status Codes .....	777
13.1.4 SMBus Command Values .....	777
13.2 Accessing the SMBus from ASL Code .....	777
13.2.1 Declaring SMBus Host Controller Objects .....	777
13.2.2 Declaring SMBus Devices.....	778

13.2.3 Declaring SMBus Operation Regions .....	778
13.2.4 Declaring SMBus Fields.....	780
13.2.5 Declaring and Using an SMBus Data Buffer .....	782
13.3 Using the SMBus Protocols .....	783
13.3.1 Read/Write Quick (SMBQuick).....	783
13.3.2 Send/Receive Byte (SMBSendReceive).....	784
13.3.3 Read/Write Byte (SMBByte).....	785
13.3.4 Read/Write Word (SMBWord).....	785
13.3.5 Read/Write Block (SMBBlock) .....	786
13.3.6 Word Process Call (SMBProcessCall).....	787
13.3.7 Block Process Call (SMBBlockProcessCall) .....	788
<b>14 Platform Communications Channel (PCC).....</b>	<b>789</b>
14.1 Platform Communications Channel Table .....	789
14.1.1 Platform Communications Channel Global Flags .....	790
14.1.2 Platform Communications Channel Subspace Structures .....	790
14.1.3 Generic Communications Subspace Structure (type 0) .....	790
14.1.4 HW-Reduced Communications Subspace Structure (type 1) .....	791
14.1.5 HW-Reduced Communications Subspace Structure (type 2) .....	793
14.1.6 Extended PCC subspaces (types 3 and 4) .....	794
14.2 Generic Communications Channel Shared Memory Region .....	798
14.2.1 Generic Communications Channel Command Field .....	798
14.2.2 Generic Communications Channel Status Field .....	798
14.3 Extended PCC Subspace Shared Memory Region .....	799
14.4 Doorbell Protocol .....	800
14.5 Platform Notification .....	802
14.5.1 Platform Notification for Subspace Types 0, 1 and 2 .....	802
14.5.2 Platform Notification for slave PCC subspaces (type 4) .....	802
14.6 Referencing the PCC address space.....	804
<b>15 System Address Map Interfaces .....</b>	<b>805</b>
15.1 INT 15H, E820H - Query System Address Map .....	806
15.2 E820 Assumptions and Limitations .....	808
15.3 UEFI GetMemoryMap() Boot Services Function.....	809
15.4 UEFI Assumptions and Limitations .....	810
15.5 Example Address Map .....	810
15.6 Example: Operating System Usage.....	811
<b>16 Waking and Sleeping .....</b>	<b>813</b>
16.1 Sleeping States .....	814
16.1.1 S1 Sleeping State .....	816
16.1.2 S2 Sleeping State .....	817
16.1.3 S3 Sleeping State .....	817
16.1.4 S4 Sleeping State .....	818
16.1.5 S5 Soft Off State .....	820
16.1.6 Transitioning from the Working to the Sleeping State.....	820
16.1.7 Transitioning from the Working to the Soft Off State.....	821
16.2 Flushing Caches .....	821

16.3 Initialization .....	822
16.3.1 Placing the System in ACPI Mode .....	825
16.3.2 Platform Boot Firmware Initialization of Memory.....	825
16.3.3 OS Loading .....	827
16.3.4 Exiting ACPI Mode .....	829
<b>17 Non-Uniform Memory Access (NUMA) Architecture Platforms .....</b>	<b>830</b>
17.1 NUMA Node.....	830
17.2 System Locality.....	830
17.2.1 System Resource Affinity Table Definition .....	831
17.2.2 System Resource Affinity Update .....	831
17.3 System Locality Distance Information.....	831
17.3.1 Online Hot Plug .....	832
17.3.2 Impact to Existing Localities .....	832
17.4 Heterogeneous Memory Attributes Information .....	832
17.4.1 Online Hot Plug .....	833
17.4.2 Impact to Existing Localities .....	833
<b>18 ACPI Platform Error Interfaces (APEI).....</b>	<b>834</b>
18.1 Hardware Errors and Error Sources .....	834
18.2 Relationship between OSPM and System Firmware .....	835
18.3 Error Source Discovery .....	835
18.3.1 Boot Error Source .....	835
18.3.2 ACPI Error Source .....	836
18.4 Firmware First Error Handling .....	854
18.4.1 Example: Firmware First Handling Using NMI Notification .....	854
18.5 Error Serialization .....	855
18.5.1 Serialization Action Table.....	856
18.5.2 Operations.....	862
18.6 Error Injection.....	866
18.6.1 Error Injection Table (EINJ).....	866
18.6.2 Injection Instruction Entries .....	869
18.6.3 Injection Instructions .....	870
18.6.4 Trigger Action Table .....	873
18.6.5 Error Injection Operation .....	873
<b>19 ACPI Source Language (ASL) Reference.....</b>	<b>875</b>
19.1 ASL 2.0 Symbolic Operators and Expressions .....	875
19.2 ASL Language Grammar .....	876
19.2.1 ASL Grammar Notation .....	877
19.2.2 ASL Name and Pathname Terms .....	878
19.2.3 ASL Root and Secondary Terms .....	879
19.2.4 ASL Data and Constant Terms .....	880
19.2.5 ASL Opcode Terms.....	883
19.2.6 ASL Primary (Terminal) Terms .....	885
19.2.7 ASL Parameter Keyword Terms .....	903
19.2.8 ASL Resource Template Terms .....	905
19.3 ASL Concepts .....	916

19.3.1 ASL Names .....	916
19.3.2 ASL Literal Constants .....	917
19.3.3 ASL Resource Templates .....	919
19.3.4 ASL Macros.....	920
19.3.5 ASL Data Types .....	921
19.4 ASL Operator Summary .....	933
19.5 ASL Operator Summary by Type .....	937
19.6 ASL Operator Reference .....	942
19.6.1 AccessAs (Change Field Unit Access).....	942
19.6.2 Acquire (Acquire a Mutex).....	943
19.6.3 Add (Integer Add).....	943
19.6.4 Alias (Declare Name Alias) .....	944
19.6.5 And (Integer Bitwise And) .....	944
19.6.6 Argx (Method Argument Data Objects).....	944
19.6.7 BankField (Declare Bank/Data Field).....	945
19.6.8 Break (Break from While).....	946
19.6.9 BreakPoint (Execution Break Point).....	946
19.6.10 Buffer (Declare Buffer Object).....	946
19.6.11 Case (Expression for Conditional Execution).....	948
19.6.12 Concatenate (Concatenate Data) .....	948
19.6.13 ConcatenateResTemplate (Concatenate Resource Templates) .....	950
19.6.14 CondRefOf (Create Object Reference Conditionally) .....	950
19.6.15 Connection (Declare Field Connection Attributes) .....	951
19.6.16 Continue (Continue Innermost Enclosing While) .....	952
19.6.17 CopyObject (Copy and Store Object).....	952
19.6.18 CreateBitField (Create 1-Bit Buffer Field) .....	952
19.6.19 CreateByteField (Create 8-Bit Buffer Field) .....	952
19.6.20 CreateDWordField (Create 32-Bit Buffer Field) .....	953
19.6.21 CreateField (Create Arbitrary Length Buffer Field) .....	953
19.6.22 CreateQWordField (Create 64-Bit Buffer Field) .....	953
19.6.23 CreateWordField (Create 16-Bit Buffer Field) .....	954
19.6.24 DataTableRegion (Create Data Table Operation Region) .....	954
19.6.25 Debug (Debugger Output).....	954
19.6.26 Decrement (Integer Decrement) .....	955
19.6.27 Default (Default Execution Path in Switch) .....	955
19.6.28 DefinitionBlock (Declare Definition Block) .....	956
19.6.29 DerefOf (Dereference an Object Reference) .....	956
19.6.30 Device (Declare Device Package) .....	957
19.6.31 Divide (Integer Divide).....	958
19.6.32 DMA (DMA Resource Descriptor Macro) .....	958
19.6.33 DWordIO (DWord IO Resource Descriptor Macro) .....	959
19.6.34 DWordMemory (DWord Memory Resource Descriptor Macro).....	961
19.6.35 DWordSpace (DWord Space Resource Descriptor Macro) .....	963
19.6.36 EISAID (EISA ID String To Integer Conversion Macro) .....	964
19.6.37 Else (Alternate Execution).....	964
19.6.38 Elseif (Alternate/Conditional Execution).....	965
19.6.39 EndDependentFn (End Dependent Function Resource Descriptor Macro) ..	966

19.6.40 Event (Declare Event Synchronization Object) .....	966
19.6.41 ExtendedIO (Extended IO Resource Descriptor Macro) .....	967
19.6.42 ExtendedMemory (Extended Memory Resource Descriptor Macro) .....	968
19.6.43 ExtendedSpace (Extended Address Space Resource Descriptor Macro) ....	970
19.6.44 External (Declare External Objects) .....	971
19.6.45 Fatal (Fatal Error Check).....	972
19.6.46 Field (Declare Field Objects).....	972
19.6.47 FindSetLeftBit (Find First Set Left Bit).....	975
19.6.48 FindSetRightBit (Find First Set Right Bit).....	975
19.6.49 FixedDMA (DMA Resource Descriptor Macro) .....	976
19.6.50 FixedIO (Fixed IO Resource Descriptor Macro) .....	976
19.6.51 For (Conditional Loop) .....	977
19.6.52 Fprintf (Create and Store formatted string) .....	978
19.6.53 FromBCD (Convert BCD To Integer) .....	978
19.6.54 Function (Declare Control Method) .....	979
19.6.55 GpioInt (GPIO Interrupt Connection Resource Descriptor Macro).....	980
19.6.56 Gpiolo (GPIO Connection IO Resource Descriptor Macro) .....	981
19.6.57 I2CSerialBusV2 (I2C Serial Bus Connection Resource Descriptor (Version 2) Macro) .....	982
19.6.58 If (Conditional Execution) .....	983
19.6.59 Include (Include Additional ASL File) .....	983
19.6.60 Increment (Integer Increment).....	984
19.6.61 Index (Indexed Reference To Member Object).....	984
19.6.62 IndexField (Declare Index/Data Fields) .....	986
19.6.63 Interrupt (Interrupt Resource Descriptor Macro) .....	987
19.6.64 IO (IO Resource Descriptor Macro) .....	988
19.6.65 IRQ (Interrupt Resource Descriptor Macro) .....	989
19.6.66 IRQNoFlags (Interrupt Resource Descriptor Macro) .....	990
19.6.67 LAnd (Logical And).....	990
19.6.68 LEqual (Logical Equal) .....	990
19.6.69 LGreater (Logical Greater) .....	991
19.6.70 LGreaterEqual (Logical Greater Than Or Equal) .....	991
19.6.71 LLess (Logical Less) .....	991
19.6.72 LLessEqual (Logical Less Than Or Equal).....	992
19.6.73 LNot (Logical Not) .....	992
19.6.74 LNotEqual (Logical Not Equal) ).....	993
19.6.75 Load (Load Definition Block) .....	993
19.6.76 LoadTable (Load Definition Block From XSDT) .....	994
19.6.77 Localx (Method Local Data Objects) .....	995
19.6.78 LOr (Logical Or) .....	995
19.6.79 Match (Find Object Match).....	995
19.6.80 Memory24 (Memory Resource Descriptor Macro) .....	996
19.6.81 Memory32 (Memory Resource Descriptor Macro) .....	997
19.6.82 Memory32Fixed (Memory Resource Descriptor Macro) .....	998
19.6.83 Method (Declare Control Method).....	999
19.6.84 Mid (Extract Portion of Buffer or String) .....	1000
19.6.85 Mod (Integer Modulo).....	1001

19.6.86 Multiply (Integer Multiply) .....	1001
19.6.87 Mutex (Declare Synchronization/Mutex Object).....	1001
19.6.88 Name (Declare Named Object).....	1002
19.6.89 NAnd (Integer Bitwise Nand).....	1003
19.6.90 NoOp Code (No Operation) .....	1003
19.6.91 NOR (Integer Bitwise Nor).....	1003
19.6.92 Not (Integer Bitwise Not) .....	1003
19.6.93 Notify (Notify Object of Event).....	1004
19.6.94 Offset (Change Current Field Unit Offset).....	1004
19.6.95 ObjectType (Get Object Type) .....	1004
19.6.96 One (Constant One Integer).....	1005
19.6.97 Ones (Constant Ones Integer) .....	1005
19.6.98 OperationRegion (Declare Operation Region).....	1006
19.6.99 Or (Integer Bitwise Or) .....	1007
19.6.100 Package (Declare Package Object).....	1007
19.6.101 Pin Configuration.....	1009
19.6.102 Pin Function .....	1013
19.6.103 Pin Group .....	1017
19.6.104 Pin Group Configuration.....	1017
19.6.105 Pin Group Function .....	1022
19.6.106 PowerResource (Declare Power Resource) .....	1023
19.6.107 Printf (Create and Store formatted string) .....	1023
19.6.108 Processor (Declare Processor) .....	1024
19.6.109 QWordIO (QWord IO Resource Descriptor Macro).....	1025
19.6.110 QWordMemory (QWord Memory Resource Descriptor Macro) .....	1027
19.6.111 QWordSpace (QWord Space Resource Descriptor Macro) .....	1028
19.6.112 RawDataBuffer.....	1030
19.6.113 RefOf (Create Object Reference).....	1030
19.6.114 Register (Generic Register Resource Descriptor Macro).....	1031
19.6.115 Release (Release a Mutex Synchronization Object).....	1032
19.6.116 Reset (Reset an Event Synchronization Object).....	1032
19.6.117 ResourceTemplate (Resource To Buffer Conversion Macro) .....	1033
19.6.118 Return (Return from Method Execution) .....	1033
19.6.119 Revision (Constant Revision Integer).....	1033
19.6.120 Scope (Open Named Scope) .....	1033
19.6.121 ShiftLeft (Integer Shift Left) .....	1035
19.6.122 ShiftRight (Integer Shift Right) .....	1035
19.6.123 Signal (Signal a Synchronization Event) .....	1035
19.6.124 SizeOf (Get Data Object Size) .....	1036
19.6.125 Sleep (Milliseconds Sleep).....	1036
19.6.126 SPISerialBusV2 (SPI Serial Bus Connection Resource Descriptor (Version 2) Macro) .....	1036
19.6.127 Stall (Stall for a Short Time) .....	1037
19.6.128 StartDependentFn (Start Dependent Function Resource Descriptor Macro)....	1038
19.6.129 StartDependentFnNoPri (Start Dependent Function Resource Descriptor Macro) .....	1038

19.6.130 Store (Store an Object) .....	1039
19.6.131 Subtract (Integer Subtract).....	1039
19.6.132 Switch (Select Code To Execute Based On Expression).....	1040
19.6.133 ThermalZone (Declare Thermal Zone).....	1042
19.6.134 Timer (Get 64-Bit Timer Value) .....	1042
19.6.135 ToBCD (Convert Integer to BCD).....	1043
19.6.136 ToBuffer (Convert Data to Buffer) .....	1043
19.6.137 ToDecimalString (Convert Data to Decimal String).....	1044
19.6.138 ToHexString (Convert Data to Hexadecimal String) .....	1044
19.6.139 ToInteger (Convert Data to Integer) .....	1044
19.6.140 ToPLD (Creates a _PLD Buffer Object) .....	1045
19.6.141 ToString (Convert Buffer To String) .....	1047
19.6.142 ToUUID (Convert String to UUID Macro) .....	1047
19.6.143 UARTSerialBusV2 (UART Serial Bus Connection Resource Descriptor (Version 2) Macro).....	1048
19.6.144 Unicode (String To Unicode Conversion Macro).....	1050
19.6.145 VendorLong (Long Vendor Resource Descriptor).....	1050
19.6.146 {deprec ated} Unload (Unload Definition Block).....	1051
19.6.147 VendorShort (Short Vendor Resource Descriptor).....	1051
19.6.148 Wait (Wait for a Synchronization Event) .....	1051
19.6.149 While (Conditional Loop).....	1052
19.6.150 WordBusNumber (Word Bus Number Resource Descriptor Macro).....	1052
19.6.151 WordIO (Word IO Resource Descriptor Macro) .....	1053
19.6.152 WordSpace (Word Space Resource Descriptor Macro) ) .....	1055
19.6.153 XOr (Integer Bitwise Xor) .....	1057
19.6.154 Zero (Constant Zero Integer) .....	1057
<b>20 ACPI Machine Language (AML) Specification .....</b>	<b>1058</b>
20.1 Notation Conventions.....	1058
20.2 AML Grammar Definition .....	1059
20.2.1 Table and Table Header Encoding .....	1059
20.2.2 Name Objects Encoding .....	1060
20.2.3 Data Objects Encoding .....	1060
20.2.4 Package Length Encoding .....	1061
20.2.5 Term Objects Encoding.....	1061
20.2.6 Miscellaneous Objects Encoding .....	1069
20.3 AML Byte Stream Byte Values.....	1070
20.4 AML Encoding of Names in the Namespace .....	1076
<b>21 ACPI Data Tables and Table Definition Language .....</b>	<b>1079</b>
21.1 Types of ACPI Data Tables .....	1079
21.2 ACPI Table Definition Language Specification .....	1079
21.2.1 Overview of the Table Definition Language (TDL) .....	1080
21.2.2 TDL Grammar Specification.....	1081
21.2.3 Data Types.....	1083
21.2.4 Fields Set Automatically by the Compiler.....	1086
21.2.5 Special Fields.....	1086
21.2.6 TDL Generic Data Types .....	1087

21.2.7 Defining a Known ACPI Table in TDL .....	1087
21.2.8 Defining an Unknown or New ACPI table in TDL.....	1088
21.2.9 Table Definition Language Examples .....	1088
21.2.10 Minimal ECDT Definition .....	1090
<b>Device Class Specifications .....</b>	<b>1092</b>
<b>Video Extensions .....</b>	<b>1118</b>
<b>Deprecated Content.....</b>	<b>1135</b>

# List of Tables

---

Table 1-1 Hardware Type vs. OS Type Interaction.....	10
Table 2-1 Summary of Global Power States .....	34
Table 2-2 Summary of Device Power States .....	36
Table 3-3 Low Battery Levels .....	57
Table 3-4 Implementable Platform Types .....	62
Table 4-5 Feature/Programming Model Summary.....	75
Table 4-6 PM1 Event Registers .....	80
Table 4-7 PM1 Control Registers .....	80
Table 4-8 PM2 Control Register .....	80
Table 4-9 PM Timer Register .....	80
Table 4-10 Processor Control Registers.....	80
Table 4-11 General-Purpose Event Registers .....	81
Table 4-12 Power Button Support .....	84
Table 4-13 Sleep Button Support.....	86
Table 4-14 Alarm Field Decodings within the FADT.....	91
Table 4-15 PM1 Status Registers Fixed Hardware Feature Status Bits.....	93
Table 4-16 PM1 Enable Registers Fixed Hardware Feature Enable Bits .....	96
Table 4-17 PM1 Control Registers Fixed Hardware Feature Control Bits.....	97
Table 4-18 PM Timer Bits.....	98
Table 4-19 PM2 Control Register Bits .....	99
Table 4-20 Processor Control Register Bits.....	99
Table 4-21 Processor LVL2 Register Bits .....	100
Table 4-22 Processor LVL3 Register Bits .....	100
Table 4-23 Sleep Control Register .....	101
Table 4-24 Sleep Status Register .....	101
Table 5-25 Generic Address Structure (GAS).....	115
Table 5-26 Address Space Format .....	116
Table 5-27 RSDP Structure.....	118
Table 5-28 DESCRIPTION_HEADER Fields .....	119
Table 5-29 DESCRIPTION_HEADER Signatures for tables defined by ACPI.....	120
Table 5-30 DESCRIPTION_HEADER Signatures for tables reserved by ACPI .....	122
Table 5-31 Root System Description Table Fields (RSDT) .....	124
Table 5-32 Extended System Description Table Fields (XSDT).....	125
Table 5-33 FADT Format .....	126
Table 5-34 Fixed ACPI Description Table Fixed Feature Flags .....	136
Table 5-35 Fixed ACPI Description Table Boot IA-PC Boot Architecture Flags.....	141
Table 5-36 Fixed ACPI Description Table ARM Boot Architecture Flags .....	142
Table 5-37 Firmware ACPI Control Structure (FACS) .....	142
Table 5-38 Firmware Control Structure Feature Flags.....	146
Table 5-39 OSPM Enabled Firmware Control Structure Feature Flags .....	146
Table 5-40 Global Lock Structure within the FACS .....	147
Table 5-41 Differentiated System Description Table Fields (DSDT) .....	149
Table 5-42 Secondary System Description Table Fields (SSDT) .....	150
Table 5-43 Multiple APIC Description Table (MADT) Format .....	151
Table 5-44 Multiple APIC Flags .....	152
Table 5-45 Interrupt Controller Structure Types .....	152
Table 5-46 Processor Local APIC Structure .....	154
Table 5-47 Local APIC Flags.....	154
Table 5-48 I/O APIC Structure .....	154
Table 5-49 Interrupt Source Override Structure .....	155
Table 5-50 MPS INTI Flags.....	156
Table 5-51 NMI Source Structure .....	157

Table 5-52 Local APIC NMI Structure .....	157
Table 5-53 Local APIC Address Override Structure .....	158
Table 5-54 I/O SAPIC Structure .....	158
Table 5-55 Processor Local SAPIC Structure .....	159
Table 5-56 Platform Interrupt Source Structure.....	160
Table 5-57 Platform Interrupt Source Flags.....	161
Table 5-58 Processor Local x2APIC Structure .....	161
Table 5-59 Local x2APIC NMI Structure .....	162
Table 5-60 GICC Structure .....	164
Table 5-61 GICC CPU Interface Flags .....	166
Table 5-62 GICD Structure .....	166
Table 5-63 GIC MSI Frame Structure .....	167
Table 5-64 GIC MSI Frame Flags .....	167
Table 5-65 GICR Structure .....	168
Table 5-66 GIC ITS Structure .....	168
Table 5-67 Smart Battery Description Table (SBST) Format .....	169
Table 5-68 Embedded Controller Boot Resources Table Format .....	170
Table 5-69 Static Resource Affinity Table Format .....	173
Table 5-70 Processor Local APIC/SAPIC Affinity Structure .....	174
Table 5-71 Flags – Processor Local APIC/SAPIC Affinity Structure.....	174
Table 5-72 Memory Affinity Structure.....	175
Table 5-73 Flags – Memory Affinity Structure.....	175
Table 5-74 Processor Local x2APIC Affinity Structure.....	176
Table 5-75 GICC Affinity Structure .....	176
Table 5-76 Flags – GICC Affinity Structure .....	177
Table 5-77 Architecture Specific Affinity Structure .....	177
Table 5-78 Generic Initiator Affinity Structure .....	178
Table 5-79 Device Handle - ACPI.....	178
Table 5-80 Device Handle - PCI.....	178
Table 5-81 Flags – Generic Initiator Affinity Structure .....	179
Table 5-82 SLIT Format .....	180
Table 5-83 Corrected Platform Error Polling Table Format .....	181
Table 5-84 Corrected Platform Error Polling Processor Structure.....	182
Table 5-85 Maximum System Characteristics Table (MSCT) Format.....	182
Table 5-86 Maximum Proximity Domain Information Structure .....	183
Table 5-87 RASF Table format .....	184
Table 5-88 RASF Platform Communication Channel Shared Memory Region.....	185
Table 5-89 PCC Command Codes used by RASF Platform Communication Channel .....	186
Table 5-90 Platform RAS Capabilities Bitmap .....	186
Table 5-91 Parameter Block Structure for PATROL_SCRUB.....	187
Table 5-92 MPST Table Structure .....	190
Table 5-93 PCC Command Codes used by MPST Platform Communication Channel .....	191
Table 5-94 MPST Platform Communication Channel Shared Memory Region.....	191
Table 5-95 Power state Values .....	193
Table 5-96 Command Status .....	194
Table 5-97 Memory Power Node Structure definition .....	195
Table 5-98 Flag format.....	197
Table 5-99 Memory Power State Structure definition .....	197
Table 5-100 Memory Power State Characteristics Structure .....	198
Table 5-101 Flag format of Memory Power State Characteristics Structure .....	199
Table 5-102 Platform Memory Topology Table .....	201
Table 5-103 Common Memory Aggregator Device Structure .....	203
Table 5-104 Socket Structure .....	204
Table 5-105 Memory Controller Structure .....	204
Table 5-106 Physical Components Identifier Structure .....	206

Table 5-107 Boot Graphics Resource Table Fields.....	207
Table 5-108 Status Description Field .....	208
Table 5-109 Image Type Description Field.....	208
Table 5-110 Firmware Performance Data Table (FPDT) Format.....	209
Table 5-111 Performance Record Structure .....	210
Table 5-112 Performance Record Types.....	211
Table 5-113 Runtime Performance Record Types .....	211
Table 5-114 S3 Performance Table Pointer Record .....	212
Table 5-115 S4 Performance Table Pointer Record .....	212
Table 5-116 S3 Performance Table Header .....	213
Table 5-117 Basic S3 Resume Performance Record .....	213
Table 5-118 Basic S3 Suspend Performance Record .....	214
Table 5-119 Firmware Basic Boot Performance Table Header .....	214
Table 5-120 Firmware Basic Boot Performance Data Record Structure .....	214
Table 5-121 GTDT Table Structure.....	216
Table 5-122 Flag Definitions: Secure EL1 Timer, Non-Secure EL1 Timer, EL2 Timer, Virtual EL1 Timer and Virtual EL2 Timer.....	218
Table 5-123 Platform Timer Type Structures.....	218
Table 5-124 GT Block Structure Format.....	219
Table 5-125 GT Block Timer Structure Format .....	219
Table 5-126 Flag Definitions: GT Block Physical Timers and Virtual Timers .....	220
Table 5-127 Flag Definitions: Common Flags.....	220
Table 5-128 SBSA Generic Watchdog Structure Format.....	221
Table 5-129 Flag Definitions: SBSA Generic Watchdog Timer .....	221
Table 5-130 NVDIMM Firmware Interface Table (NFIT) .....	224
Table 5-131 NFIT Structure Types.....	224
Table 5-132 SPA Range Structure .....	225
Table 5-133 NVDIMM Region Mapping Structure .....	227
Table 5-134 Interleave Structure Index and Interleave Ways definition.....	230
Table 5-135 Interleave Structure.....	231
Table 5-136 SMBIOS Management Information Structure.....	231
Table 5-137 NVDIMM Control Region Structure Mark.....	232
Table 5-138 NVDIMM Block Data Windows Region Structure .....	236
Table 5-139 Flush Hint Address Structure .....	237
Table 5-140 Platform Capabilities Structure.....	237
Table 5-141 SDEV ACPI Table.....	240
Table 5-142 PCIe Endpoint Device Based Device Structure Example .....	242
Table 5-143 Heterogeneous Memory Attribute Table Header.....	244
Table 5-144 HMAT Structure Types .....	245
Table 5-145 Memory Proximity Domain Attributes Structure .....	246
Table 5-146 System Locality Latency and Bandwidth Information Structure .....	248
Table 5-147 Memory Side Cache Information Structure .....	250
Table 5-148 PDTT Structure.....	253
Table 5-149 PDTT Platform Communication Channel Identifier Structure.....	253
Table 5-150 PCC Commands Codes used by Platform Debug Trigger Table .....	254
Table 5-151 PDTT Platform Communication Channel .....	254
Table 5-152 Example: Platform with 4 debug triggers .....	255
Table 5-153 Processor Properties Topology Table .....	257
Table 5-154 Processor Hierarchy Node Structure .....	259
Table 5-155 Processor Structure Flags .....	260
Table 5-156 Cache Type Structure.....	263
Table 5-157 Cache Structure Flags .....	263
Table 5-158 ID Type Structure .....	265
Table 5-159 Namespaces Defined Under the Namespace Root.....	268
Table 5-160 Operation Region Address Space Identifiers .....	275

Table 5-161 IPMI Status Codes .....	281
Table 5-162 Accessor Type Values .....	284
Table 5-163 ACPI Event Programming Model Components .....	303
Table 5-164 Fixed ACPI Events.....	304
Table 5-165 Device Object Notification Values .....	312
Table 5-166 System Bus Notification Values .....	313
Table 5-167 Control Method Battery Device Notification Values .....	314
Table 5-168 Power Source Object Notification Values.....	314
Table 5-169 Thermal Zone Object Notification Values.....	314
Table 5-170 Control Method Power Button Notification Values....	314
Table 5-171 Control Method Sleep Button Notification Values .....	315
Table 5-172 Control Method Lid Notification Values .....	315
Table 5-173 NVDIMM Root Device Notification Values .....	315
Table 5-174 NVDIMM Device Notification Values .....	315
Table 5-175 Processor Device Notification Values .....	316
Table 5-176 User Presence Device Notification Values .....	316
Table 5-177 Ambient Light Sensor Device Notification Values.....	316
Table 5-178 Power Meter Object Notification Values.....	317
Table 5-179 Processor Aggregator Device Notification Values .....	317
Table 5-180 Error Device Notification Values .....	317
Table 5-181 Fan Device Notification Values .....	317
Table 5-182 Memory Device Notification Values .....	318
Table 5-183 ACPI Device IDs .....	318
Table 5-184 Predefined ACPI Names .....	320
Table 5-185 Predefined Object Names.....	335
Table 5-186 Predefined Operating System Vendor String Prefixes .....	336
Table 5-187 Standard ACPI-Defined Feature Group Strings .....	336
Table 5-188 DeviceLockInfo Package Values .....	340
Table 6-189 Device Identification Objects.....	342
Table 6-190 ADR Object Address Encodings.....	344
Table 6-191 Additional Language ID Alias Strings.....	348
Table 6-192 PLD Back Panel Example Settings .....	355
Table 6-193 Device Configuration Objects .....	359
Table 6-194 HPP Package Contents .....	368
Table 6-195 PCI Setting Record Content.....	372
Table 6-196 PCI-X Setting Record Content .....	373
Table 6-197 PCI Express Setting Record Content .....	374
Table 6-198 PCI Express Descriptor Setting Record Content.....	378
Table 6-199 PCI Express Register Descriptor .....	379
Table 6-200 Platform-Wide _OSC Capabilities DWORD 2 .....	390
Table 6-201 Mapping Fields.....	397
Table 6-202 Example Relative Distances Between Proximity Domains .....	401
Table 6-203 Example System Locality Information Table .....	401
Table 6-204 Example Relative Distances Between Proximity Domains - 5 Node .....	402
Table 6-205 Device Insertion, Removal, and Status Objects .....	407
Table 6-206 OST Source Event Codes .....	411
Table 6-207 General Processing Status Codes.....	412
Table 6-208 Operating System Shutdown Processing (Source Events : 0x100) Status Codes .....	412
Table 6-209 Ejection Request / Ejection Processing (Source Events: 0x03 and 0x103) Status Codes	413
Table 6-210 Insertion Processing (Source Event: 0x200) Status Codes .....	413
Table 6-211 Small Resource Data Type Tag Bit Definitions .....	418
Table 6-212 Small Resource Items.....	418
Table 6-213 IRQ Descriptor Definition .....	419
Table 6-214 DMA Descriptor Definition .....	420
Table 6-215 Start Dependent Functions Descriptor Definition .....	421

Table 6-216 Start Dependent Function Priority Byte Definition.....	421
Table 6-217 End Dependent Functions Descriptor Definition .....	422
Table 6-218 I/O Port Descriptor Definition.....	422
Table 6-219 Fixed-Location I/O Port Descriptor Definition .....	423
Table 6-220 Fixed DMA Resource Descriptor .....	423
Table 6-221 Vendor-Defined Resource Descriptor Definition .....	424
Table 6-222 End Tag Definition.....	424
Table 6-223 Large Resource Data Type Tag Bit Definitions .....	425
Table 6-224 Large Resource Items.....	425
Table 6-225 24-bit Memory Range Descriptor Definition .....	426
Table 6-226 Large Vendor-Defined Resource Descriptor Definition .....	427
Table 6-227 32-Bit Memory Range Descriptor Definition .....	427
Table 6-228 32-bit Fixed-Location Memory Range Descriptor Definition .....	430
Table 6-229 Valid combination of Address Space Descriptors fields.....	431
Table 6-230 QWORD Address Space Descriptor Definition .....	431
Table 6-231 DWORD Address Space Descriptor Definition .....	435
Table 6-232 WORD Address Space Descriptor Definition.....	437
Table 6-233 Extended Address Space Descriptor Definition .....	439
Table 6-234 Memory Resource Flag (Resource Type = 0) Definitions .....	443
Table 6-235 I/O Resource Flag (Resource Type = 1) Definitions.....	444
Table 6-236 Bus Number Range Resource Flag (Resource Type = 2) Definitions .....	444
Table 6-237 Extended Interrupt Descriptor Definition.....	445
Table 6-238 Generic Register Descriptor Definition .....	447
Table 6-239 GPIO Connection Descriptor Definition .....	448
Table 6-240 GenericSerialBus Connection Descriptors .....	451
Table 6-241 I2C Serial Bus Connection Descriptor .....	453
Table 6-242 SPI Serial Bus Connection Descriptor .....	455
Table 6-243 UART Serial Bus Connection Descriptor.....	457
Table 6-244 Pin Function Description Definition .....	460
Table 6-245 Pin Configuration Descriptor Definition.....	462
Table 6-246 Pin Group Descriptor Definition .....	464
Table 6-247 Pin Group Function Descriptor Definition .....	465
Table 6-248 Pin Group Configuration Descriptor Description .....	467
Table 6-249 Other Objects and Methods .....	470
Table 6-250 OSPM _INI Object Actions .....	471
Table 6-251 NVDIMM Label Methods .....	478
Table 6-252 _LSI Return Package Values .....	478
Table 6-253 _LSR Return Package Values .....	480
Table 7-254 Power Resource Object Provisions for Information and Control.....	481
Table 7-255 Power Resource Methods.....	484
Table 7-256 Device Power Management Child Objects .....	486
Table 7-257 PSC Device State Codes.....	489
Table 7-258 Power Resource Requirements Package .....	490
Table 7-259 S1 Action / Result Table .....	495
Table 7-260 S2 Action / Result Table .....	495
Table 7-261 S3 Action / Result Table .....	496
Table 7-262 S4 Action / Result Table .....	497
Table 7-263 BIOS-Supplied Control Methods for System-Level Functions.....	499
Table 7-264 System State Package .....	501
Table 8-265 Cstate Package Values .....	520
Table 8-266 CStateDependency Package Values.....	522
Table 8-267 Processor Container Device Objects.....	525
Table 8-268 Valid Local State Combinations in Figure 2 example system.....	527
Table 8-269 Extended LPI fields.....	534
Table 8-270 Flags for LPI states .....	536

Table 8-271 Enabled Parent State values for example system.....	537
Table 8-272 Entry method example .....	544
Table 8-273 PTC Package Values .....	552
Table 8-274 TState Package Values .....	553
Table 8-275 TStateDependency Package Values .....	555
Table 8-276 PCT Package Values .....	560
Table 8-277 PState Package Values .....	561
Table 8-278 PStateDependency Package Values .....	564
Table 8-279 Continuous Performance Control Package Values .....	569
Table 8-280 Performance Limited Register Status Bits .....	581
Table 8-281 PCC Commands Codes used by Collaborative Processor Performance Control .....	583
Table 8-282 Processor Aggregator Device Objects.....	586
Table 9-283 System Indicator Control Methods.....	592
Table 9-284 Control Method Ambient Light Sensor Device .....	594
Table 9-285 Control Method Lid Device .....	601
Table 9-286 ATA Specific Objects .....	603
Table 9-287 GTM Method Result Codes.....	606
Table 9-288 Tape Presence.....	610
Table 9-289 ACPI Floppy Drive Information .....	610
Table 9-290 MBM Package Details .....	617
Table 9-291 MSM Result Encoding .....	618
Table 9-292 Memory Device _OSC Capabilities DWORD number 2 .....	618
Table 9-293 UPC Return Package Values.....	620
Table 9-294 User Presence Detection Device.....	628
Table 9-295 Time and Alarm Device .....	630
Table 9-296 Generic Buttons Device Child Objects .....	643
Table 9-297 Usage Types and Interrupt Polarity .....	644
Table 9-298 Common HID Button Usages .....	644
Table 9-299 NVDIMM Root Device Function Index .....	650
Table 9-300 Status and Extended Status Field Generic Interpretations.....	652
Table 9-301 Query ARS Capabilities – Input Buffer .....	653
Table 9-302 Query ARS Capabilities – Output Buffer .....	653
Table 9-303 Start ARS – Input Buffer .....	654
Table 9-304 Start ARS – Output Buffer .....	655
Table 9-305 Query ARS Status – Output Buffer .....	656
Table 9-306 ARS Data .....	656
Table 9-307 ARS Error Record Format.....	657
Table 9-308 Clear Uncorrectable Error – Input Buffer.....	658
Table 9-309 Clear Uncorrectable Error – Output Buffer.....	659
Table 9-310 Translate SPA - Input Payload Format .....	659
Table 9-311 Translate SPA - Output Payload Format .....	660
Table 9-312 Translate SPA – Translated NVDIMM Device List Output Payload Format.....	661
Table 9-313 ARS Error Inject – Input Format .....	661
Table 9-314 ARS Error Inject – Output Format .....	663
Table 9-315 ARS Error Inject Clear – Input Format .....	663
Table 9-316 ARS Error Inject Clear – Output Format .....	663
Table 9-317 ARS Error Inject Status Query – Output Format .....	664
Table 9-318 ARS Error Inject Status Query – Error Record Format .....	664
Table 9-319 ARS Error Inject Options Support.....	665
Table 9-320 NVDIMM Device Method Return Status Code.....	665
Table 9-321 _NCH Return Value .....	666
Table 9-322 _NBS Return Value.....	668
Table 9-323 _NIC Output Buffer .....	669
Table 9-324 _NIH Input Buffer .....	670
Table 9-325 _NIH Output Buffer .....	671

Table 9-326 _NIG Output Buffer.....	672
Table 10-327 Example SMBus Device Slave Addresses .....	674
Table 10-328 Smart Battery Objects.....	676
Table 10-329 Battery Control Methods .....	681
Table 10-330 BIF Return Package Values.....	682
Table 10-331 BIX Return Package Values .....	684
Table 10-332 Control Method Battery _OSC Capabilities DWORD2 Bit Definitions.....	687
Table 10-333 BST Return Package Values .....	689
Table 10-334 BMD Return Package Values.....	693
Table 10-335 Power Source Objects.....	696
Table 10-336 PIF Method Result Codes.....	697
Table 10-337 Power Meter Objects.....	698
Table 10-338 PMC Method Result Codes .....	699
Table 10-339 Wireless Power Calibration.....	704
Table 10-340 Wireless Power Control Notification Values:.....	705
Table 11-341 Fan Specific Objects .....	717
Table 11-342 FIF Package Details .....	718
Table 11-343 FPS FanPstate Package Details.....	720
Table 11-344 FST Package Details.....	721
Table 11-345 Thermal Objects.....	721
Table 11-346 Thermal Relationship Package Values .....	724
Table 11-347 Thermal Relationship Package Values .....	735
Table 12-348 Read only register table .....	753
Table 12-349 Register details .....	754
Table 12-350 Embedded Controller Commands .....	755
Table 12-351 Events for Which Embedded Controller Must Generate SCIs.....	758
Table 12-352 Read Command (3 Bytes) .....	758
Table 12-353 Write Command (3 Bytes) .....	759
Table 12-354 Query Command (2 Bytes).....	759
Table 12-355 Burst Enable Command (2 Bytes) .....	759
Table 12-356 Burst Disable Command (1 Byte).....	759
Table 12-357 SMBus Status Codes .....	761
Table 12-358 SMB EC Interface .....	770
Table 12-359 Embedded Controller Device Object Control Methods .....	772
Table 12-360 EC SMBus HC Device Objects .....	773
Table 13-361 SMBus Protocol Types .....	776
Table 14-362 Platform Communications Channel Table (PCCT).....	789
Table 14-363 Platform Communications Channel Global Flags.....	790
Table 14-364 Generic PCC Subspace Structure .....	790
Table 14-365 PCC Subspace Structure type 0 (Generic Communications Subspace).....	790
Table 14-366 PCC Subspace Structure type 1 (HW-Reduced Communications Subspace) .....	791
Table 14-367 PCC Subspace Structure type 2 (HW-Reduced Communications Subspace) .....	793
Table 14-368 PCC Subspace Structure type 3 and type 4, master and slave respectively .....	795
Table 14-369 Generic Communications Channel Shared Memory Region.....	798
Table 14-370 Generic Communications Channel Command Field .....	798
Table 14-371 Generic Communications Channel Status Field .....	798
Table 14-372 Master Slave Communications Channel Shared Memory Region .....	799
Table 14-373 Master Slave Communications Channel Flags .....	799
Table 15-374 Address Range Types .....	805
Table 15-375 Input to the INT 15h E820h Call .....	807
Table 15-376 Output from the INT 15h E820h Call .....	807
Table 15-377 Address Range Descriptor Structure.....	807
Table 15-378 Extended Attributes for Address Range Descriptor Structure .....	808
Table 15-379 UEFI Memory Types and mapping to ACPI address range types .....	809
Table 15-380 Sample Memory Map .....	811

Table 18-381 Boot Error Record Table (BERT) Table .....	836
Table 18-382 Hardware Error Source Table (HEST) .....	837
Table 18-383 IA-32 Architecture Machine Check Exception Structure .....	837
Table 18-384 IA-32 Architecture Machine Check Error Bank Structure .....	838
Table 18-385 IA-32 Architecture Corrected Machine Check Structure .....	839
Table 18-386 IA-32 Architecture NMI Error Structure.....	840
Table 18-387 PCI Express Root Port AER Structure .....	841
Table 18-388 PCI Express Device AER Structure.....	842
Table 18-389 PCI Express Bridge AER Structure .....	844
Table 18-390 Generic Hardware Error Source Structure.....	845
Table 18-391 Generic Error Status Block .....	847
Table 18-392 Generic Error Data Entry.....	848
Table 18-393 Generic Hardware Error Source version 2 (GHESv2) Structure .....	851
Table 18-394 Hardware Error Notification Structure .....	852
Table 18-395 Architecture Deferred Machine Check Structure .....	853
Table 18-396 Error Record Serialization Table (ERST) .....	856
Table 18-397 Error Record Serialization Actions .....	857
Table 18-398 Command Status Definition.....	858
Table 18-399 Serialization Instruction Entry.....	859
Table 18-400 Serialization Instructions .....	859
Table 18-401 Instruction Flags.....	860
Table 18-402 Error Record Serialization Info.....	862
Table 18-403 Error Injection Table (EINJ) .....	866
Table 18-404 Error Injection Actions .....	867
Table 18-405 Injection Instruction Entry .....	869
Table 18-406 Instruction Flags.....	869
Table 18-407 Injection Instructions .....	870
Table 18-408 Command Status Definition.....	870
Table 18-409 Error Type Definition .....	870
Table 18-410 SET_ERROR_TYPE_WITH_ADDRESS Data Structure .....	871
Table 18-411 Vendor Error Type Extension Structure.....	872
Table 18-412 Trigger Error Action .....	873
Table 19-413 ASL Grammar Notation .....	877
Table 19-414 Named Object Reference Encodings .....	916
Table 19-415 Definition Block Name Modifier Encodings.....	916
Table 19-416 ASL Escape Sequences .....	918
Table 19-417 Summary of ASL Data Types .....	921
Table 19-418 Data Types and Type Conversions .....	925
Table 19-419 Object Conversion Rules .....	927
Table 19-420 Object Storing and Copying Rules.....	930
Table 19-421 Reading from ArgX Objects.....	931
Table 19-422 Writing to ArgX Objects .....	931
Table 19-423 Reading from LocalX Objects .....	932
Table 19-424 Writing to LocalX Objects .....	932
Table 19-425 Reading from Named Objects.....	932
Table 19-426 Writing to Named Objects .....	933
Table 19-427 Concatenate Data Types .....	948
Table 19-428 Concatenate Object Types .....	949
Table 19-429 Debug Object Display Formats .....	955
Table 19-430 Field Unit list entires .....	973
Table 19-431 OperationRegion Address Spaces and Access Types .....	974
Table 19-432 Match Term Operator Meanings .....	996
Table 19-433 TValues Returned By the ObjectType Operator .....	1005
Table 19-434 Pin Configuration Types and Values .....	1010
Table 19-435 Pin Group Configuration Types and Values .....	1018

Table 19-436 PLD Keywords and Assignment Types .....	1045
Table 19-437 PLD Keywords and assignable String Values.....	1046
Table 19-438 UUID Buffer Format .....	1048
Table 20-439 AML Grammar Notation Conventions .....	1058
Table 20-440 AML Byte Stream Byte Values .....	1070
Table A-1 Default Power State Definitions .....	1095
Table B-1 Video Extension Object Requirements .....	1118
Table B-2 Video Output Device Attributes .....	1123
Table B-3 Example Device Ids .....	1124
Table B-4 Notifications for Display Devices. ....	1127
Table B-5 Device Status .....	1130
Table B-6 Device State for _DGS.....	1131
Table B-7 Device State for _DSS .....	1132
Table B-8 Notification Values for Output Devices .....	1132

# List of Figures

---

Figure 0-1 ACPI overview .....	2
Figure 0-2 ACPI structure .....	2
Figure 0-3 ASL and AML.....	3
Figure 0-4 ACPI initialization.....	5
Figure 0-5 Runtime thermal event.....	6
Figure 1-1 OSPM/ACPI Global System .....	12
Figure 3-1 Global System Power States and Transitions .....	42
Figure 3-2 Example Modem and COM Port Hardware.....	50
Figure 3-3 Reporting Battery Capacity.....	55
Figure 3-4 Low Battery and Warning.....	56
Figure 3-5 Thermal Zone .....	59
Figure 4-1 Generic Hardware Feature Model.....	67
Figure 4-2 Global States and Their Transitions .....	71
Figure 4-3 Example Event Structure for a Legacy/ACPI Compatible Event Model .....	72
Figure 4-4 Block Diagram of a Status/Enable Cell.....	77
Figure 4-5 Example Fixed Hardware Feature Register Grouping .....	78
Figure 4-6 Register Blocks versus Register Groupings .....	79
Figure 4-7 Power Management Timer .....	83
Figure 4-8 Fixed Power Button Logic .....	84
Figure 4-9 Fixed Hardware Sleep Button Logic .....	86
Figure 4-10 Sleeping/Wake Logic.....	88
Figure 4-11 RTC Alarm .....	90
Figure 4-12 Power Management Events to SMI/SCI Control Logic.....	92
Figure 4-13 Example of General-Purpose vs. Generic Hardware Events.....	103
Figure 4-14 Example Generic Address Space Lid Switch Logic .....	106
Figure 5-15 Root System Description Pointer and Table.....	109
Figure 5-16 Description Table Structures.....	110
Figure 5-17 APIC-Global System Interrupts .....	163
Figure 5-18 8259-Global System Interrupts .....	169
Figure 5-19 MPST ACPI Table Overview.....	189
Figure 5-20 Memory Power State Transitions.....	193
Figure 5-21 Image Offset.....	209
Figure 5-22 NVDIMM Firmware Interface Table (NFIT) Overview .....	223
Figure 5-23 HMAT Representation.....	244
Figure 5-24 Memory Side Cache Example .....	245
Figure 5-25 Example: Platform with 4 debug triggers .....	255
Figure 5-26 Cache Type Structure - Type 1 Example .....	262
Figure 5-27 Example ACPI NameSpace.....	267
Figure 5-28 AML Encoding.....	269
Figure 6-29 System Panel and Panel Origin Positions .....	349
Figure 6-30 Laptop Panel and Panel Origin Positions .....	349
Figure 6-31 Default Shape Definitions .....	354
Figure 6-32 PLD Back Panel Rendering .....	356
Figure 6-33 System Locality information Table .....	400

Figure 6-34 Device Ejection Flow Example Using _OST .....	414
Figure 7-35 Working / Sleeping State object evaluation flow.....	508
Figure 8-36 Processor Power States .....	510
Figure 8-37 Throttling Example.....	511
Figure 8-38 Equation 1 Duty Cycle Equation.....	511
Figure 8-39 Example Control for the STPCLK# .....	512
Figure 8-40 ACPI Clock Logic (One per Processor).....	512
Figure 8-41 Processor Hierarchy.....	524
Figure 8-42 Power states for processor hierarchy .....	526
Figure 8-43 Worst case wake latency .....	538
Figure 8-44 Energy of states A,B and C versus sleep duration .....	538
Figure 8-45 Platform performance thresholds.....	573
Figure 8-46 OSPM performance controls .....	576
Figure 9-47 A five-point ALS Response Curve .....	597
Figure 9-48 A two-point ALS Response Curve.....	598
Figure 9-49 Example Response Curve for a Transflective Display.....	599
Figure 9-50 USB ports .....	621
Figure 9-51 Persistence of expired timer events .....	632
Figure 9-52 System transitions with WakeAlarm -- Timer.....	633
Figure 9-53 System transitions with WakeAlarm -- Policy .....	633
Figure 9-54 Vendor/Device Specific Driver Loading .....	648
Figure 10-55 Typical Smart Battery Subsystem (SBS).....	674
Figure 10-56 Single Smart Battery Subsystem.....	678
Figure 10-57 Smart Battery Subsystem.....	679
Figure 10-58 Remaining Battery Percent Formula.....	690
Figure 10-59 Remaining Battery Life Formula .....	690
Figure 10-60 Power Meter and Power Source/Docking Namespace Example .....	706
Figure 11-61 ACPI Thermal Zone .....	708
Figure 11-62 Thermal Events .....	711
Figure 11-63 Temperature and CPU Performance Versus Time.....	713
Figure 11-64 Active and Passive Threshold Values.....	715
Figure 11-65 Cooling Preferences.....	716
Figure 12-66 Shared Interface .....	751
Figure 12-67 Private Interface.....	752
Figure 12-68 Interrupt Model.....	758
Figure 13-69 Bit Encoding Example .....	776
Figure 13-70 Smart Battery Subsystem Devices.....	779
Figure 13-71 Smart Battery Device Virtual Registers.....	781
Figure 14-72 Communication flow of the doorbell protocol .....	800
Figure 14-73 Communication flow for notifications on slave subspaces .....	803
Figure 16-74 Example Sleeping States .....	814
Figure 16-75 Platform Firmware Initialization .....	823
Figure 16-76 Example Physical Memory Map .....	826
Figure 16-77 Memory as Configured after Boot.....	827
Figure 16-78 OS Initialization.....	828
Figure 18-79 APEI error flow example with external RAS controller .....	851
Figure B-1 Example Display Architecture .....	1124

# Overview

---

This chapter provides a high-level overview of the *Advanced Configuration and Power Interface* (ACPI). To make it easier to understand ACPI, this section focuses on broad and general statements about ACPI and does not discuss every possible exception or detail about ACPI. The rest of the ACPI specification provides much greater detail about the inner workings of ACPI than is discussed here, and is recommended reading for developers using ACPI.

## History of ACPI

ACPI was developed through collaboration between Intel, Microsoft\*, Toshiba\*, HP\*, and Phoenix\* in the mid-1990s. Before the development of ACPI, *operating systems* (OS) primarily used *BIOS* (Basic Input/Output System) interfaces for power management and device discovery and configuration. This power management approach used the OS's ability to call the system BIOS natively for power management. The BIOS was also used to discover system devices and load drivers based on probing *input/output* (I/O) and attempting to match the correct driver to the correct device (plug and play). The location of devices could also be hard coded within the BIOS because the platform itself was non-enumerable.

These solutions were problematic in three key ways. First, the behavior of OS applications could be negatively affected by the BIOS-configured power management settings, causing systems to go to sleep during presentations or other inconvenient times. Second, the power management interface was proprietary on each system. This required developers to learn how to configure power management for each individual system. Finally, the default settings for various devices could also conflict with each other, causing devices to crash, behave erratically, or become undiscoverable.

ACPI was developed to solve these problems and others.


## What is ACPI?

ACPI can first be understood as an architecture-independent power management and configuration framework that forms a subsystem within the host OS. This framework establishes a hardware register set to define power states (sleep, hibernate, wake, etc). The hardware register set can accommodate operations on dedicated hardware and general purpose hardware.


The primary intention of the standard ACPI framework and the hardware register set is to enable power management and system configuration without directly calling firmware natively from the OS. ACPI serves as an interface layer between the system firmware (BIOS) and the OS, as shown in [Figure 0-1](#) and [Figure 0-2](#), with certain restrictions and rules.

**Figure 0-1 ACPI overview**

Fundamentally, ACPI defines two types of data structures that are shared between the system firmware and the OS: *data tables* and *definition blocks*. These data structures are the primary communication mechanism between the firmware and the OS. Data tables store raw data and are consumed by device drivers. Definition blocks consist of byte code that is executable by an interpreter.

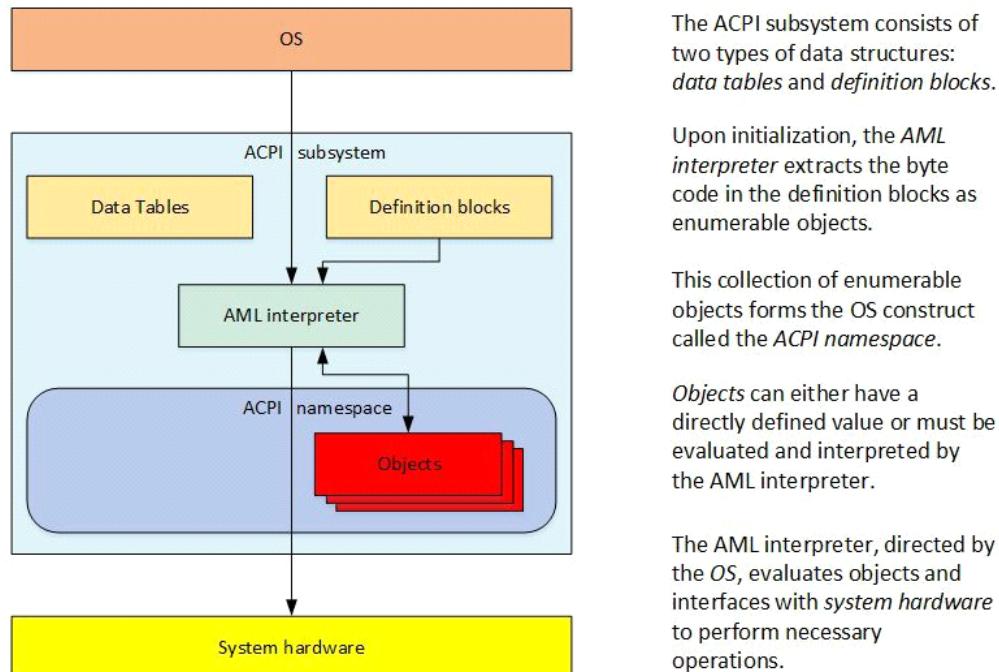**Figure 0-2 ACPI structure**

This definition block byte code is compiled from the *ACPI Source Language* (ASL) code. ASL is the language used to define ACPI objects and to write control methods. An ASL compiler translates ASL into *ACPI Machine Language* (AML) byte code. AML is the language processed by the AML interpreter, as shown in [Figure 0-3](#).

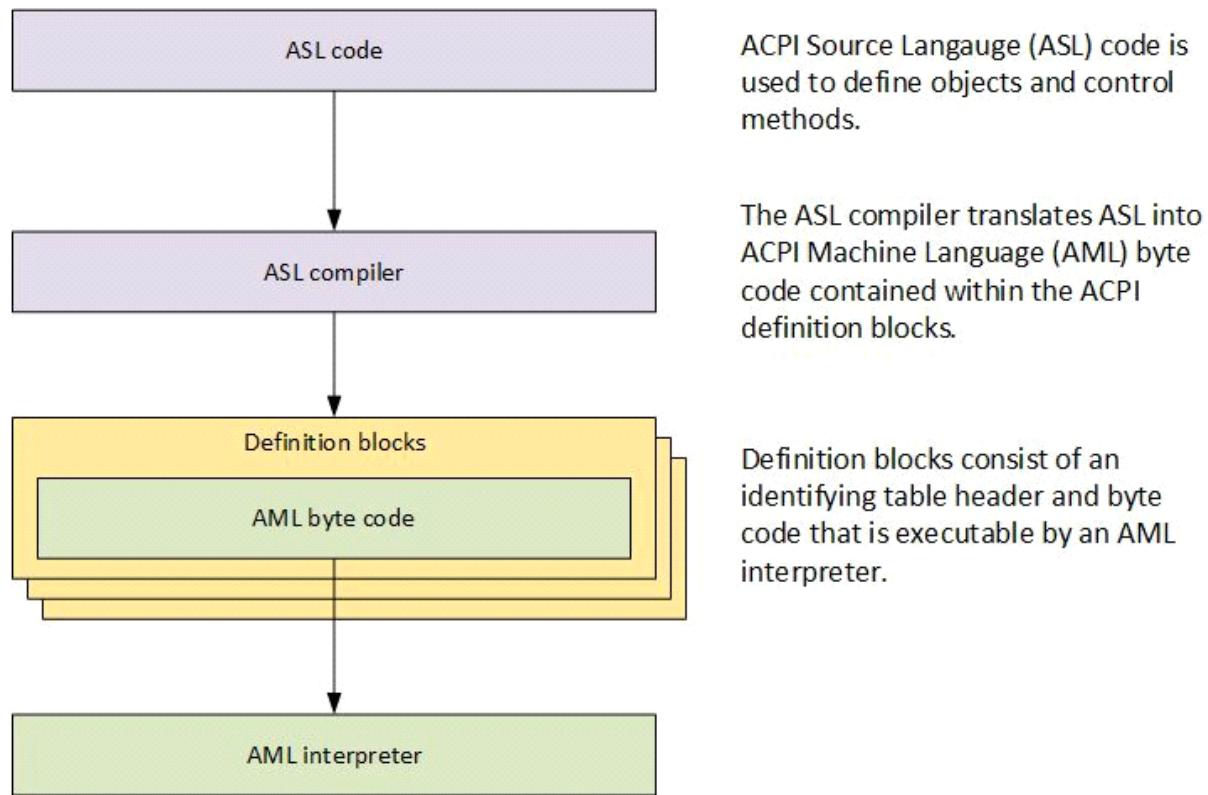**Figure 0-3 ASL and AML**

The AML interpreter executes byte code and evaluates objects in the definition blocks to allow the byte code to perform loop constructs, conditional evaluations, access defined address spaces, and perform other operations that applications require. The AML interpreter has read/write access to defined address spaces, including system memory, I/O, PCI configuration, and more. It accesses these address spaces by defining entry points called objects. Objects can either have a directly defined value or else must be evaluated and interpreted by the AML interpreter.

This collection of enumerable objects is an OS construct called the ACPI namespace. The namespace is a hierarchical representation of the ACPI devices on a system. The system bus is the root of enumeration for these ACPI devices. Devices that are enumerable on other buses, like PCI or USB devices, are usually not enumerated in the namespace. Instead, their own buses enumerate the devices and load their drivers. However, all enumerable buses have an encoding technique that allows ACPI to encode the bus-specific addresses of the devices so they can be found in ACPI, even though ACPI usually does not load drivers for these devices.

Generally, devices that have a `_HID` object (*hardware identification* object) are enumerated and have their drivers loaded by ACPI. Devices that have an `_ADR` object (*physical address* object) are usually not enumerated by ACPI and generally do not have their drivers loaded by ACPI. `_ADR` devices usually can perform all necessary functions without involving ACPI, but in cases where the device driver cannot

perform a function, or if the driver needs to communicate to system firmware, ACPI can evaluate objects to perform the needed function.

As an example of this, PCI does not support native hotplug. However, PCI can use ACPI to evaluate objects and define methods that allow ACPI to fill in the functions necessary to perform hotplug on PCI.

An additional aspect of ACPI is a runtime model that handles any ACPI interrupt events that occur during system operation. ACPI continues to evaluate objects as necessary to handle these events. This interrupt-based runtime model is discussed in greater detail in the *Runtime model* section below.

## ACPI Initialization

The best way to understand how ACPI works is chronologically. The moment the user powers up the system, the system firmware completes its setup, initialization, and self tests.

The system firmware then uses information obtained during firmware initialization to update the ACPI tables as necessary with various platform configurations and power interface data, before passing control to the bootstrap loader. The *extended root system description table* (XSDT) is the first table used by the ACPI subsystem and contains the addresses of most of the other ACPI tables on the system. The XSDT points to the *fixed ACPI description table* (FADT) as well as other major tables that the OS processes during initialization. After the OS initializes, the FADT directs the ACPI subsystem to the *differentiated system description table* (DSDT), which is the beginning of the namespace because it is the first table that contains a definition block.

The ACPI subsystem then processes the DSDT and begins building the namespace from the ACPI definition blocks. The XSDT also points to the *secondary system description tables* (SSDTs) and adds them to the namespace. The ACPI data tables give the OS raw data about the system hardware.

After the OS has built the namespace from the ACPI tables, it begins traversing the namespace and loading device drivers for all the *\_HID* devices it encounters in the namespace.

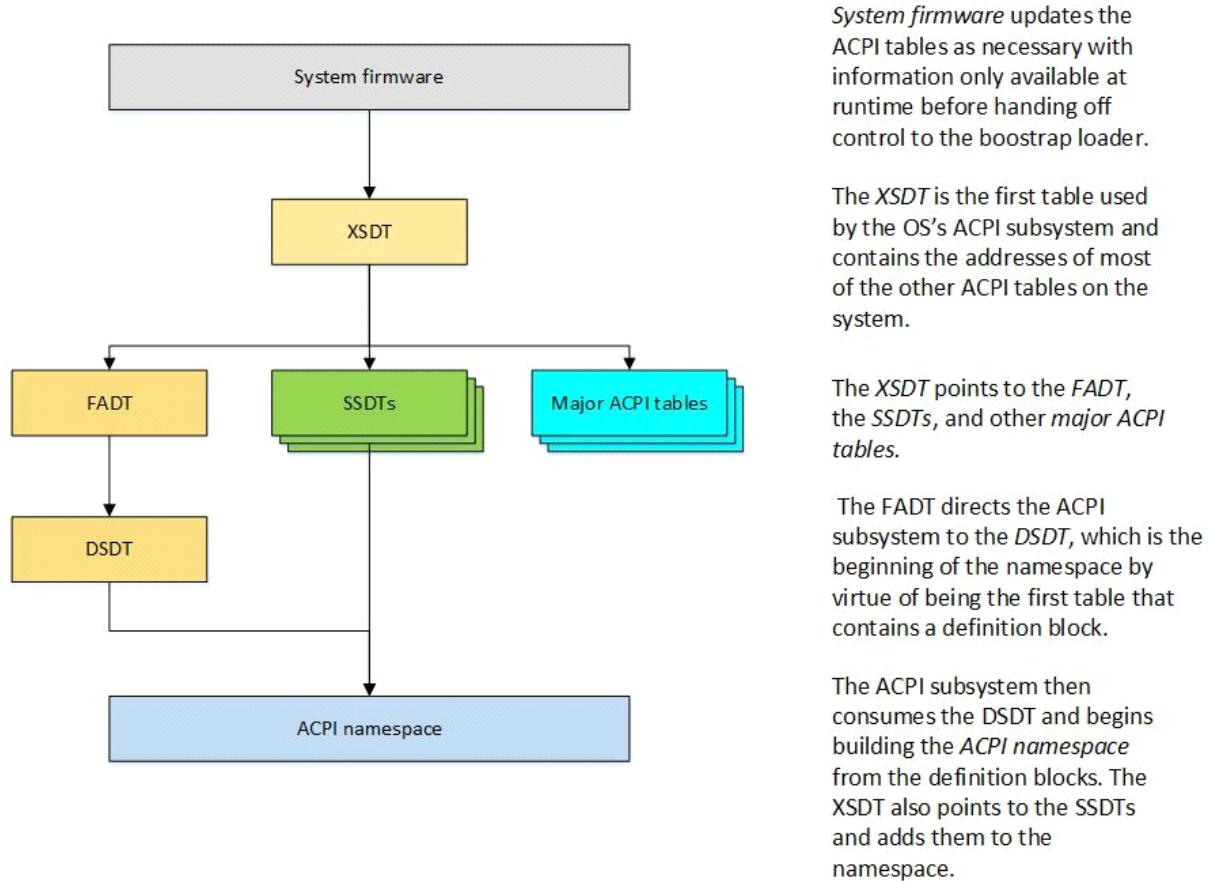


Figure 0-4 ACPI initialization

## Runtime Model

After the system is up and running, ACPI works with the OS to handle any ACPI events that occur via an interrupt. This interrupt invokes ACPI events in one of two general ways: *fixed events* and *general purpose events* (GPEs).


Fixed events are ACPI events that have a predefined meaning in the ACPI specification. These fixed events include actions like pressing the power button or ACPI timer overflows. These events are handled directly by the OS handlers.

GPEs are ACPI events that are not predefined by the ACPI specification. These events are usually handled by evaluating control methods, which are objects in the namespace and can access system hardware. When the ACPI subsystem evaluates the control method with the AML interpreter, the GPE object handles the events according to the OS's implementation. Typically this might involve issuing a notification to a device to invoke the device driver to perform a function.

We discuss a generic example of this runtime model in the next section.

## Thermal Event Example

ACPI includes a thermal model to allow systems to control the system temperature either actively (by performing actions like turning a fan on) or passively by reducing the amount of power the system uses (by performing actions like throttling the processor). We can use an example of a generic thermal event shown in Figure 5 to demonstrate how the ACPI runtime model works.

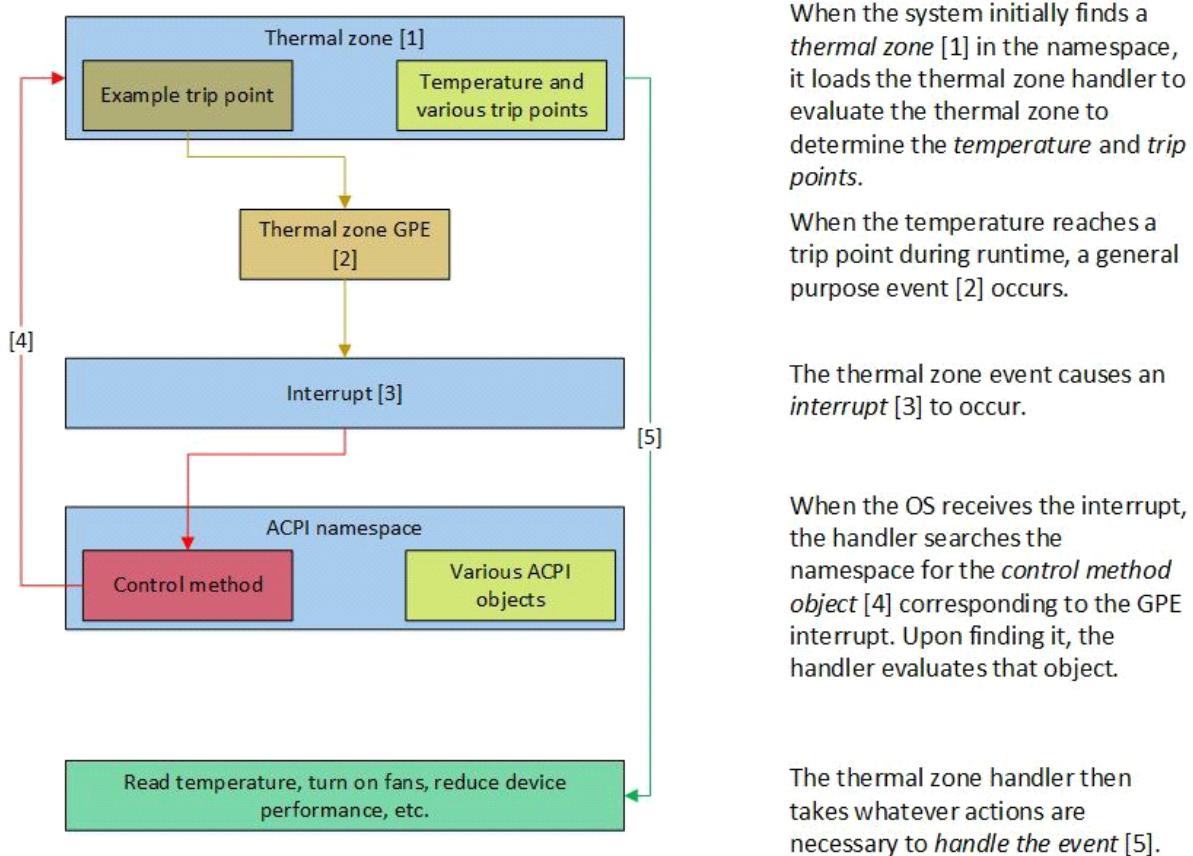

**Figure 0-5 Runtime thermal event**

The ACPI thermal zone includes control methods to read the current system temperature and trip points.

When the OS initially finds a thermal zone in the namespace, it loads the thermal zone driver, which evaluates the thermal zone to obtain the current temperature and trip points.

When a system component heats up enough to trigger a trip point, a thermal zone GPE occurs.

The GPE causes an interrupt to occur. When the ACPI subsystem receives the interrupt, it first checks whether any fixed events have occurred. In this example, the thermal zone event is a GPE, so no fixed event has occurred.

The ACPI subsystem then searches the namespace for the control method that matches the GPE number of the interrupt. Upon finding it, the ACPI subsystem evaluates the control method, which might then access hardware and/or notify the thermal zone handler.

The operating system's thermal zone handler then takes whatever actions are necessary to handle the event, including possibly accessing hardware.

ACPI is a very robust interface implementation. The thermal zone trip point could notify the system to turn on a fan, reduce a device's performance, read the temperature, shut down the system, or any combination of these and other actions depending on the need.

This runtime model is used throughout the system to manage all of the ACPI events that occur during system operation.

## Summary

ACPI can best be described as a framework of concepts and interfaces that are implemented to form a subsystem within the host OS. The ACPI tables, handlers, interpreter, namespace, events, and interrupt model together form this implementation of ACPI, creating the ACPI subsystem within the host OS. In this sense, ACPI is the interface between the system hardware/firmware and the OS and OS applications for configuration and power management. This gives various OS a standardized way to support power management and configuration via the ACPI namespace.

The ACPI namespace is the enumerable, hierarchical representation of all ACPI devices on the system and is used to both find and load drivers for ACPI devices on the system. The namespace can be dynamic by evaluating objects and sending interrupts in real time, all without the need for the OS to call native system firmware code. This enables device manufacturers to code their own instructions and events into devices. It also reduces incompatibility and instability by implementing a standardized power management interface.

# 1 Introduction

---

The Advanced Configuration and Power Interface (ACPI) specification was developed to establish industry common interfaces enabling robust operating system (OS)-directed motherboard device configuration and power management of both devices and entire systems. ACPI is the key element in Operating System-directed configuration and Power Management (OSPM).

ACPI evolved the existing pre-ACPI collection of power management BIOS code, Advanced Power Management (APM) application programming interfaces (APIs, PNPBIOS APIs, Multiprocessor Specification (MPS) tables and so on into a well-defined power management and configuration interface specification. ACPI provides the means for an orderly transition from existing (legacy) hardware to ACPI hardware, and it allows for both ACPI and legacy mechanisms to exist in a single machine and to be used as needed.

Further, system architectures being built at the time of the original ACPI specification's inception, stretched the limits of historical "Plug and Play" interfaces. ACPI evolved existing motherboard configuration interfaces to support advanced architectures in a more robust, and potentially more efficient manner.

The interfaces and OSPM concepts defined within this specification are suitable to all classes of computers including (but not limited to) desktop, mobile, workstation, and server machines. From a power management perspective, OSPM/ACPI promotes the concept that systems should conserve energy by transitioning unused devices into lower power states including placing the entire system in a low-power state (sleeping state) when possible.

This document describes ACPI hardware interfaces, ACPI software interfaces and ACPI data structures that, when implemented, enable support for robust OS-directed configuration and power management (OSPM).

## 1.1 Principal Goals

ACPI is the key element in implementing OSPM. ACPI-defined interfaces are intended for wide adoption to encourage hardware and software vendors to build ACPI-compatible (and, thus, OSPM-compatible) implementations.

The principal goals of ACPI and OSPM are to:

- Enable all computer systems to implement motherboard configuration and power management functions, using appropriate cost/function tradeoffs.
  - Computer systems include (but are not limited to) desktop, mobile, workstation, and server machines.
  - Machine implementers have the freedom to implement a wide range of solutions, from the very simple to the very aggressive, while still maintaining full OS support.
  - Wide implementation of power management will make it practical and compelling for applications to support and exploit it. It will make new uses of PCs practical and existing uses of PCs more economical.

- Enhance power management functionality and robustness.
  - Power management policies too complicated to implement in platform firmware can be implemented and supported in the OS, allowing inexpensive power managed hardware to support very elaborate power management policies.
  - Gathering power management information from users, applications, and the hardware together into the OS will enable better power management decisions and execution.
  - Unification of power management algorithms in the OS will reduce conflicts between the firmware and OS and will enhance reliability.
- Facilitate and accelerate industry-wide implementation of power management.
  - OSPM and ACPI reduces the amount of redundant investment in power management throughout the industry, as this investment and function will be gathered into the OS. This will allow industry participants to focus their efforts and investments on innovation rather than simple parity.
  - The OS can evolve independently of the hardware, allowing all ACPI-compatible machines to gain the benefits of OS improvements and innovations.
- Create a robust interface for configuring motherboard devices.
  - Enable new advanced designs not possible with existing interfaces.

## 1.2 Power Management Rationale

It is necessary to move power management into the OS and to use an abstract interface (ACPI) between the OS and the hardware to achieve the principal goals set forth above. Because ACPI is abstract, the OS can evolve separately from the hardware and, likewise, the hardware from the OS.

ACPI is by nature more portable across operating systems and processors. ACPI control methods allow for very flexible implementations of particular features.

Issues with older power management approaches include the following:

- Minimal support for power management inhibits application vendors from supporting or exploiting it.
  - Moving power management functionality into the OS makes it available on every machine on which the OS is installed. The level of functionality (power savings, and so on) varies from machine to machine, but users and applications will see the same power interfaces and semantics on all OSPM machines.
  - This will enable application vendors to invest in adding power management functionality to their products.
- Legacy power management algorithms were restricted by the information available to the platform firmware that implemented them. This limited the functionality that could be implemented.
  - Centralizing power management information and directives from the user, applications, and hardware in the OS allows the implementation of more powerful functionality. For example, an OS can have a policy of dividing I/O operations into normal and lazy. Lazy I/O operations (such as a word processor saving files in the background) would be gathered up into clumps and done only when the required I/O device is powered up for some other reason. A non-lazy I/O request made when the required device was powered down would cause the device to be powered up immediately, the non-lazy I/O request to be carried out, and any pending lazy I/O operations to be done. Such a policy requires knowing when

- I/O devices are powered up, knowing which application I/O requests are lazy, and being able to assure that such lazy I/O operations do not starve.
- Appliance functions, such as answering machines, require globally coherent power decisions. For example, a telephone-answering application could call the OS and assert, “I am waiting for incoming phone calls; any sleep state the system enters must allow me to wake and answer the telephone in 1 second.” Then, when the user presses the “off” button, the system would pick the deepest sleep state consistent with the needs of the phone answering service.
    - Platform firmware has become very complex to deal with power management. It is difficult to make work with an OS and is limited to static configurations of the hardware.
    - There is much less state information for the platform firmware to retain and manage (because the OS manages it).
    - Power management algorithms are unified in the OS, yielding much better integration between the OS and the hardware.
    - Because additional ACPI tables (Definition Blocks) can be loaded, for example, when a mobile system docks, the OS can deal with dynamic machine configurations.
    - Because the platform firmware has fewer functions and they are simpler, it is much easier (and therefore cheaper) to implement and support.
  - The legacy PC platform structure constrains OS and hardware designs.

## 1.3 Legacy Support

ACPI provides support for an orderly transition from legacy hardware to ACPI hardware, and allows for both mechanisms to exist in a single machine and be used as needed.

**Table 1-1     Hardware Type vs. OS Type Interaction**

Hardware\OS	Legacy OS	ACPI OS with OSPM
Legacy hardware	A legacy OS on legacy hardware does what it always did.	If the OS lacks legacy support, legacy support is completely contained within the hardware functions.
Legacy and ACPI hardware support in machine	It works just like a legacy OS on legacy hardware.	During boot, the OS tells the hardware to switch from legacy to OSPM/ACPI mode and from then on, the system has full OSPM/ACPI support.
ACPI-only hardware	There is no power management.	There is full OSPM/ACPI support.

## 1.4 OEM Implementation Strategy

Any OEM is, as always, free to build hardware as they see fit. Given the existence of the ACPI specification, two general implementation strategies are possible:

- An original equipment manufacturer (OEM) can adopt the OS vendor-provided ACPI OSPM software and implement the hardware part of the ACPI specification (for a given platform) in one of many possible ways.
- An OEM can develop a driver and hardware that are not ACPI-compatible. This strategy opens up even more hardware implementation possibilities. However, OEMs who implement hardware that is OSPM-compatible but *not* ACPI-compatible will bear the cost of developing, testing, and distributing drivers for their implementation.

## 1.5 Power and Sleep Buttons

OSPM provides a new appliance interface to consumers. In particular, it provides for a sleep button that is a “soft” button that does *not* turn the machine physically off but signals the OS to put the machine in a soft off or sleeping state. ACPI defines two types of these “soft” buttons: one for putting the machine to sleep and one for putting the machine in soft off.

This gives the OEM two different ways to implement machines: A one-button model or a two-button model. The one-button model has a single button that can be used as a power button or a sleep button as determined by user settings. The two-button model has an easily accessible sleep button and a separate power button. In either model, an override feature that forces the machine to the soft-off state without OSPM interaction is also needed to deal with various rare, but problematic, situations.

## 1.6 ACPI Specification and the Structure of ACPI

This specification defines ACPI hardware interfaces, ACPI software interfaces and ACPI data structures. This specification also defines the semantics of these interfaces.

[Figure 1-1](#) lays out the software and hardware components relevant to OSPM/ACPI and how they relate to each other. This specification describes the *interfaces between* components, the contents of the ACPI System Description Tables, and the related semantics of the other ACPI components. Notice that the ACPI System Description Tables, which describe a particular platform’s hardware, are at heart of the ACPI implementation and the role of the ACPI System Firmware is primarily to supply the ACPI Tables (rather than a native instruction API).

ACPI is *not* a software specification; it is *not* a hardware specification, although it addresses both software and hardware and how they must behave. ACPI is, instead, an interface specification comprised of both software and hardware elements.

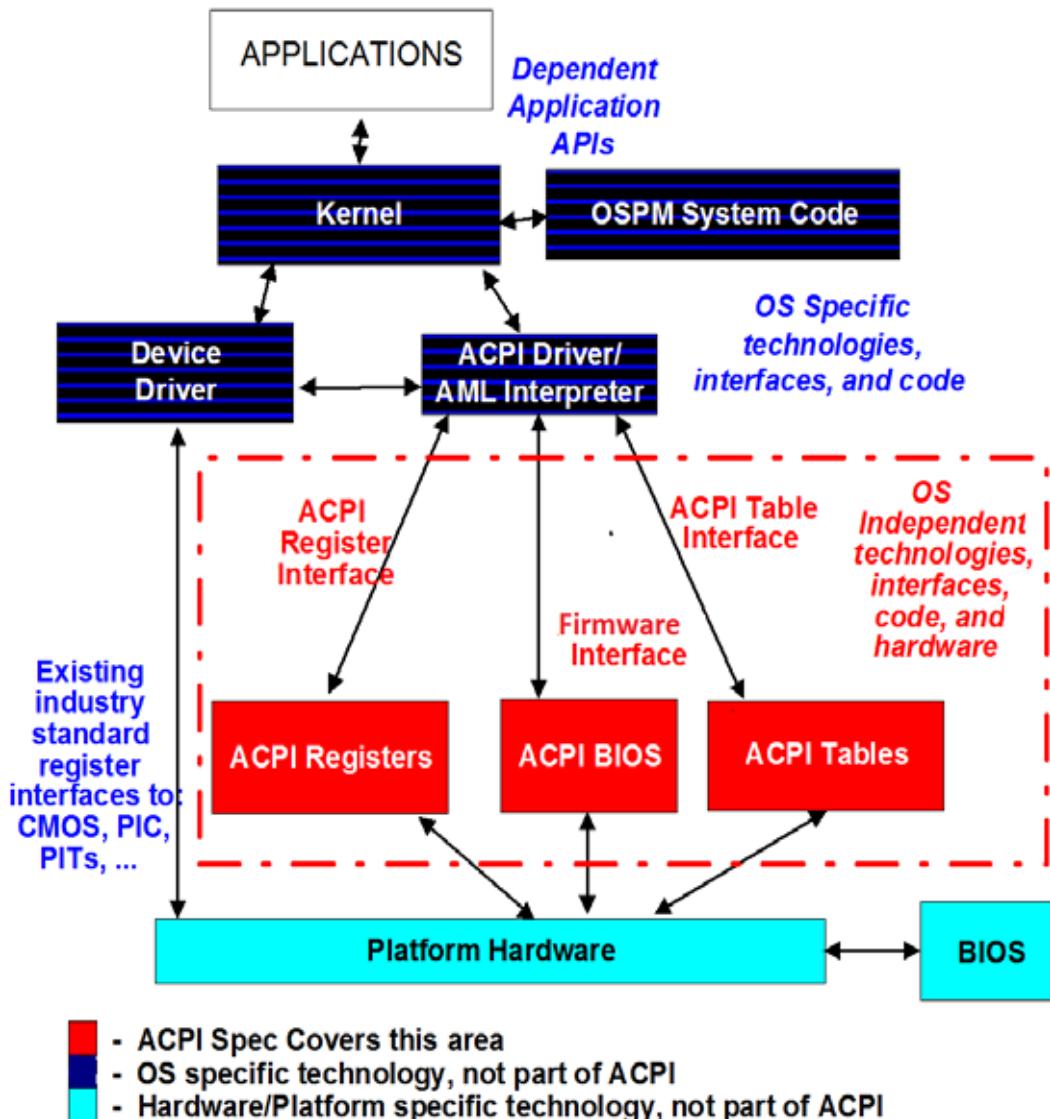


Figure 1-1 OSPM/ACPI Global System

There are three run-time components to ACPI:

### ACPI System Description Tables

Describe the interfaces to the hardware. Some descriptions limit what can be built (for example, some controls are embedded in fixed blocks of registers and the table specifies the address of the register block). Most descriptions allow the hardware to be built in arbitrary ways and can describe arbitrary operation sequences needed to make the hardware function. ACPI Tables containing “Definition Blocks” can make use of a pseudo-code type of language, the interpretation of which is performed by the OS. That is, OSPM contains and uses an interpreter

that executes procedures encoded in the pseudo-code language and stored in the ACPI tables containing “Definition Blocks.” The pseudo-code language, known as ACPI Machine Language (AML), is a compact, tokenized, abstract type of machine language.

### ACPI Registers.

The constrained part of the hardware interface, described (at least in location) by the ACPI System Description Tables.

### ACPI Platform Firmware.

Refers to the portion of the firmware that is compatible with the ACPI specifications. Typically, this is the code that boots the machine (as legacy BIOSs have done) and implements interfaces for sleep, wake, and some restart operations. It is called rarely, compared to a legacy BIOS. The ACPI Description Tables are also provided by the ACPI Platform Firmware.

## 1.7 OS and Platform Compliance

The ACPI specification contains only interface specifications. ACPI does not contain any platform compliance requirements. The following sections provide guidelines for class specific platform implementations that reference ACPI-defined interfaces and guidelines for enhancements that operating systems may require to completely support OSPM/ACPI. The minimum feature implementation requirements of an ACPI-compatible OS are also provided.

### 1.7.1 Platform Implementations of ACPI-defined Interfaces

System platforms implement ACPI-defined hardware interfaces via the platform hardware and ACPI-defined software interfaces and system description tables via the ACPI system firmware. Specific ACPI-defined interfaces and OSPM concepts while appropriate for one class of machine (for example, a mobile system), may not be appropriate for another class of machine (for example, a multi-domain enterprise server). It is beyond the capability and scope of this specification to specify all platform classes and the appropriate ACPI-defined interfaces that should be required for the platform class.

Platform design guide authors are encouraged to require the appropriate ACPI-defined interfaces and hardware requirements suitable to the particular system platform class addressed in a particular design guide. Platform design guides should not define alternative interfaces that provide similar functionality to those defined in the ACPI specification.

#### 1.7.1.1 Recommended Features and Interface Descriptions for Design Guides

Common description text and category names should be used in design guides to describe all features, concepts, and interfaces defined by the ACPI specification as requirements for a platform class. Listed below is the recommended set of high-level text and category names to be used to describe the features, concepts, and interfaces defined by ACPI.

**Note:** *Where definitions or relational requirements of interfaces are localized to a specific section, the section number is provided. The interface definitions and relational requirements of the interfaces specified below are generally spread throughout the ACPI specification. The ACPI specification defines:*

- System address map reporting interfaces (Section 14)
- ACPI System Description Tables (Section 5.2):

- Root System Description Pointer (RSDP)
- System Description Table Header
- Root System Description Table (RSDT)
- Fixed ACPI Description Table (FADT)
- Firmware ACPI Control Structure (FACS)
- Differentiated System Description Table (DSDT)
- Secondary System Description Table (SSDT)
- Multiple APIC Description Table (MADT)
- Smart Battery Table (SBST)
- Extended System Description Table (XSDT)
- Embedded Controller Boot Resources Table (ECDT)
- System Resource Affinity Table (SRAT)
- System Locality Information Table (SLIT)
- Corrected Platform Error Polling Table (CPEP)
- Maximum System Characteristics Table (MSCT)
- ACPI RAS FeatureTable (RASF)
- Memory Power StateTable (MPST)
- Platform Memory Topology Table (PMTT)
- Boot Graphics Resource Table (BGRT)
- Firmware Performance Data Table (FPDT)
- Generic Timer Description Table (GTDT)
- ACPI-defined Fixed Registers Interfaces (Section 4, Section 5.2.9):
  - Power management timer control/status
  - Power or sleep button with S5 override (also possible in generic space)
  - Real time clock wakeup alarm control/status
  - SCI /SMI routing control/status for Power Management and General-purpose events
  - System power state controls (sleeping/wake control) (Section 7)
  - Processor power state control (c states) (Section 8)
  - Processor throttling control/status (Section 8)
  - Processor performance state control/status (Section 8)
  - General-purpose event control/status
  - Global Lock control/status
  - System Reset control (Section 4.7.3.6)
  - Embedded Controller control/status (Section 12)
  - SMBus Host Controller (HC) control/status (Section 13)
  - Smart Battery Subsystem (Section 10.1)
- ACPI-defined Generic Register Interfaces and object definitions in the ACPI Namespace (Section 4.2, Section 5.6.5):
  - General-purpose event processing
  - Motherboard device identification, configuration, and insertion/removal (Section 6)
  - Thermal zones (Section 11)
  - Power resource control (Section 7.1)
  - Device power state control (Section 7.2)
  - System power state control (Section 7.3)
  - System indicators (Section 9.1)

- Devices and device controls (Section 9):
  - Processor (Section 8)
  - Control Method Battery (Section 10)
  - Smart Battery Subsystem (Section 10)
  - Mobile Lid
  - Power or sleep button with S5 override (also possible in fixed space)
  - Embedded controller (Section 12)
  - Fan
  - Generic Bus Bridge
  - ATA Controller
  - Floppy Controller
  - GPE Block
  - Module
  - Memory
- Global Lock related interfaces
- ACPI Event programming model (Section 5.6)
- ACPI-defined Platform Firmware Responsibilities (Section 15)
- ACPI-defined State Definitions (Section 2):
  - Global system power states (G-states, S0, S5)
  - System sleeping states (S-states S1-S4) (Section 15)
  - Device power states (D-states (Appendix B))
  - Processor power states (C-states) (Section 8)
  - Device and processor performance states (P-states) (Section 3, Section 8)

### 1.7.1.2 Terminology Examples for Design Guides

The following example shows how a client platform design guide could use the recommended terminology to define ACPI requirements, with a goal of requiring robust configuration and power management for the system class.

**Note:** *This example is provided as a guideline for how ACPI terminology can be used. It should not be interpreted as a statement of ACPI requirements.*

Platforms compliant with this platform design guide must implement the following ACPI defined system features, concepts, and interfaces, along with their associated event models:

- System address map reporting interfaces
- ACPI System Description Tables provided in the system firmware
- ACPI-defined Fixed Registers Interfaces:
- Power management timer control/status
- Power or sleep button with S5 override (may also be implemented in generic register space)
- Real time clock wakeup alarm control/status
- General-purpose event control/status
- SCI /SMI routing control/status for Power Management and General-purpose events
- (control required only if system supports legacy mode)
- System power state controls (sleeping/wake control)
- Processor power state control (for C1)
- Global Lock control/status (if Global Lock interfaces are required by the system)

- ACPI-defined Generic Register Interfaces and object definitions in the ACPI Namespace:
  - General-purpose event processing
  - Motherboard device identification, configuration, and insertion/removal (Section 6)
  - System power state control (Section 7.3)
  - Devices and device controls:
    - Processor
    - Control Method Battery (or Smart Battery Subsystem on a mobile system)
    - Smart Battery Subsystem (or Control Method Battery on a mobile system)
    - Power or sleep button with S5 override (may also be implemented in fixed register space)
  - Global Lock related interfaces when a logical register in the hardware is shared between OS and firmware environments
- ACPI Event programming model (Section 5.6)
- ACPI-defined Platform Firmware Responsibilities (Section 15)
- ACPI-defined State Definitions:
  - System sleeping states (At least one system sleeping state, S1-S4, must be implemented)
  - Device power states (D-states must be implemented in accordance with device class specifications)
  - Processor power states (All processors must support the C1 Power State)

The following example shows how a design guide could use the recommended terminology to define ACPI related requirements for systems that execute multiple OS instances, with a goal of requiring robust configuration and continuous availability for the system class.

**Note:** *This example is provided as a guideline for how ACPI terminology can be used. It should not be interpreted as a statement of ACPI requirements.*

Platforms compliant with this platform design guide must implement the following ACPI defined system features and interfaces, along with their associated event models:

- System address map reporting interfaces
- ACPI System Description Tables provided in the system firmware
- ACPI-defined Fixed Registers Interfaces:
- Power management timer control/status
- General-purpose event control/status
- SCI /SMI routing control/status for Power Management and General-purpose events
- (control required only if system supports legacy mode)
- System power state controls (sleeping/wake control)
- Processor power state control (for C1)
- Global Lock control/status (if Global Lock interfaces are required by the system)
- 
- ACPI-defined Generic Register Interfaces and object definitions in the ACPI Namespace:
  - General-purpose event processing
  - Motherboard device identification, configuration, and insertion/removal (Section 6)
  - System power state control (Section 7.3)
  - System indicators

- Devices and device controls:
  - Processor
- Global Lock related interfaces when a logical register in the hardware is shared between OS and firmware environments
- ACPI Event programming model (Section 5.6)
- ACPI-defined Platform Firmware Responsibilities (Section 15)
- ACPI-defined State Definitions:
  - Processor power states (All processors must support the C1 Power State)

### 1.7.2 OSPM Implementations

OS enhancements are needed to support ACPI-defined features, concepts, and interfaces, along with their associated event models appropriate to the system platform class upon which the OS executes. This is the implementation of OSPM. The following outlines the OS enhancements and elements necessary to support all ACPI-defined interfaces. To support ACPI through the implementation of OSPM, the OS needs to be modified to:

- Use system address map reporting interfaces.
- Find and consume the ACPI System Description Tables.
- Interpret ACPI machine language (AML).
- Enumerate and configure motherboard devices described in the ACPI Namespace.
- Interface with the power management timer.
- Interface with the real-time clock wake alarm.
- Enter ACPI mode (on legacy hardware systems).
- Implement device power management policy.
- Implement power resource management.
- Implement processor power states in the scheduler idle handlers.
- Control processor and device performance states.
- Implement the ACPI thermal model.
- Support the ACPI Event programming model including handling SCI interrupts, managing fixed events, general-purpose events, embedded controller interrupts, and dynamic device support.
- Support acquisition and release of the Global Lock.
- Use the reset register to reset the system.
- Provide APIs to influence power management policy.
- Implement driver support for ACPI-defined devices.
- Implement APIs supporting the system indicators.
- Support all system states S1–S5.

### 1.7.3 OS Requirements

The following list describes the minimum requirements for an OSPM/ACPI-compatible OS:

- Use system address map reporting interfaces to get the system address map on Intel Architecture (IA) platforms:
  - INT 15H, E820H - Query System Address Map interface (see [Section 15](#), “System Address Map Interfaces”)
  - EFI GetMemoryMap() Boot Services Function (see [Section 15](#), “System Address Map Interfaces”)

- Find and consume the ACPI System Description Tables (see [Section 5](#), “ACPI Software Programming Model”).
- Implementation of an AML interpreter supporting all defined AML grammar elements (see [Section 20](#), ACPI Machine Language Specification”).
- Support for the ACPI Event programming model including handling SCI interrupts, managing fixed events, general-purpose events, embedded controller interrupts, and dynamic device support.
- Enumerate and configure motherboard devices described in the ACPI Namespace.
- Implement support for the following ACPI devices defined within this specification:
  - Embedded Controller Device (see [Section 12](#), “ACPI Embedded Controller Interface Specification”)
  - GPE Block Device (see [Section 9.11](#), “GPE Block Device”)
  - Module Device (see [Section 9.12](#), “Module Device”)
- Implementation of the ACPI thermal model (see [Section 11](#), “Thermal Management”).
- Support acquisition and release of the Global Lock.
- OS-directed power management support (device drivers are responsible for maintaining device context as described by the Device Power Management Class Specifications described in [Section A](#)).

## 1.8 Target Audience

This specification is intended for the following users:

- OEMs building hardware containing ACPI-compatible interfaces
- Operating system and device driver developers
- All platform system firmware developers
- CPU and chip set vendors
- Peripheral vendors

## 1.9 Document Organization

The ACPI specification document is organized into the following four parts:

- The first part of the specification (sections 1 through 3) introduces ACPI and provides an executive overview.
- The second part (sections 4 and 5) defines the ACPI hardware and software programming models.
- The third part (sections 6 through 17) specifies the ACPI implementation details; this part of the specification is primarily for developers.
- The fourth part (sections 18 and 19) is technical reference material; section 18 is the ACPI Source Language (ASL) reference, parts of which are referred to by most of the other sections in the document.
- Appendices contain device class specifications, describing power management characteristics of specific classes of devices, and device class-specific ACPI interfaces.

### 1.9.1 ACPI Introduction and Overview

The first three sections of the specification provide an executive overview of ACPI.

#### Section 1: Introduction.

Discusses the purpose and goals of the specification, presents an overview of the ACPI-compatible system architecture, specifies the minimum requirements for an ACPI-compatible system, and provides references to related specifications.

#### Section 2: Definition of Terms.

Defines the key terminology used in this specification. In particular, the global system states (Mechanical Off, Soft Off, Sleeping, Working, and Non-Volatile Sleep) are defined in this section, along with the device power state definitions: Off (D3), D3hot, D2, D1, and Fully-On (D0). Device and processor performance states (P0, P1, ...Pn) are also discussed.

#### Section 3: ACPI Overview.

Gives an overview of the ACPI specification in terms of the functional areas covered by the specification: system power management, device power management, processor power management, Plug and Play, handling of system events, battery management, and thermal management.

### 1.9.2 Programming Models

Sections 4 and 5 define the ACPI hardware and software programming models. This part of the specification is primarily for system designers, developers, and project managers.

All of the implementation-oriented, reference, and platform example sections of the specification that follow (all the rest of the sections of the specification) are based on the models defined in sections 4 and 5. These sections are the heart of the ACPI specification. There are extensive cross-references between the two sections.

#### Section 4: ACPI Hardware Specification.

Defines a set of hardware interfaces that meet the goals of this specification.

#### Section 5: ACPI Software Programming Model.

Defines a set of software interfaces that meet the goals of this specification.

### 1.9.3 Implementation Details

The third part of the specification defines the implementation details necessary to actually build components that work on an ACPI-compatible platform. This part of the specification is primarily for developers.

#### Section 6: Configuration.

Defines the reserved Plug and Play objects used to configure and assign resources to devices, and share resources and the reserved objects used to track device insertion and removal. Also defines the format of ACPI-compatible resource descriptors.

**Section 7: Power and Performance Management.**

Defines the reserved device power-management objects and the reserved-system power-management objects.

**Section 8: Processor Configuration and Control.**

Defines how the OS manages the processors' power consumption and other controls while the system is in the working state.

**Section 9: ACPI-Specific Device Objects.**

Lists the integrated devices that need support for some device-specific ACPI controls, along with the device-specific ACPI controls that can be provided. Most device objects are controlled through generic objects and control methods and have generic device IDs; this section discusses the exceptions.

**Section 10: Power Source Devices.**

Defines the reserved battery device and AC adapter objects.

**Section 11: Thermal Management.**

Defines the reserved thermal management objects.

**Section 12: ACPI Embedded Controller Interface Specification.**

Defines the interfaces between an ACPI-compatible OS and an embedded controller.

**Section 13: ACPI System Management Bus Interface Specification.**

Defines the interfaces between an ACPI-compatible OS and a System Management Bus (SMBus) host controller.

**Section 14: Platform Communications Channel.**

Explains the generic mechanism for OSPM to communicate with an entity in the platform defines a new address space type

**Section 15: System Address Map Interfaces.**

Explains the special INT 15 call for use in ISA/EISA/PCI bus-based systems. This call supplies the OS with a clean memory map indicating address ranges that are reserved and ranges that are available on the motherboard. UEFI-based memory address map reporting interfaces are also described.

**Section 16: Waking and Sleeping.**

Defines in detail the transitions between system working and sleeping states and their relationship to wake events. Refers to the reserved objects defined in sections 6, 7, and 8.

**Section 17: Non-Uniform Memory Access (NUMA) Architecture Platforms.**

Discusses in detail how ACPI define interfaces can be used to describe a NUMA architecture platform. Refers to the reserved objects defined in sections 5, 6, 8, and 9.

## Section 18: ACPI Platform Error Interfaces.

Defines interfaces that enable OSPM to process different types of hardware error events that are detected by platform-based error detection hardware.

### 1.9.4 Technical Reference

The fourth part of the specification contains reference material for developers.

## Section 19: ACPI Source Language Reference.

Defines the syntax of all the ASL statements that can be used to write ACPI control methods, along with example syntax usage.

## Section 20: ACPI Machine Language Specification.

Defines the grammar of the language of the ACPI virtual machine language. An ASL translator (compiler) outputs AML.

## Section 21: ACPI Data Tables and Table Language Definition.

Describes a simple language (the Table Definition Language or TDL) that can be used to generate any ACPI data table.

## Appendix A: Device class specifications.

Describes device-specific power management behavior on a per device-class basis.

## Appendix B: Video Extensions.

Contains video device class-specific ACPI interfaces.

## 1.9.5 Revision Numbers

Updates to the ACPI specification are considered either new revisions or errata as described below:

- A new revision is produced when there is substantive new content or changes that may modify existing behavior. New revisions are designated by a Major.Minor version number (e.g. 6.3). In cases where the changes are exceptionally minor, we may have a Major.Minor.Minor naming convention (e.g. 6.3.1).
- An errata is produced when proposed changes or fixes of the specification do not include any significant new material or modify existing behavior. Errata are designated by adding an upper-case letter at the end of the version number, such as 6.2A.

## 1.10 Related Documents

Power management and Plug and Play specifications for legacy hardware platforms are the following, available from "Links to ACPI-Related Documents" (<http://uefi.org/acpi>) under the heading "Legacy PNP Guidelines".

- *Advanced Power Management (APM) BIOS Specification*, Revision 1.2.
- *Plug and Play BIOS Specification*, Version 1.0a.

Intel Architecture specifications are available from <http://developer.intel.com>:

*Intel® Itanium™ Architecture Software Developer's Manual*, see "Links to ACPI-Related Documents" (<http://uefi.org/acpi>) under the heading "Intel Architecture Specifications".

*Itanium™ Processor Family System Abstraction Layer Specification*, Intel Corporation, December 2003 (June 2004 Update).

Unified Extensible Firmware Interface Specifications are available from <http://www.uefi.org>:

Unified Extensible Firmware Interface Specification, see "Links to ACPI-Related Documents" (<http://uefi.org/acpi>) under the heading "Unified Extensible Firmware Interface Specifications"

Documentation and specifications for the Smart Battery System components and the SMBus are available from <http://www.sbs-forum.org>:

- "Links to ACPI-Related Documents" (<http://uefi.org/acpi>) under the heading "Smart Battery System Components and SMBus Specification".
- *Smart Battery Data Specification*, see "Links to ACPI-Related Documents" (<http://uefi.org/acpi>) under the heading "Smart Battery System Components and SMBus Specification".
- *Smart Battery Selector Specification*, Revision 1.1, Smart Battery System Implementers Forum, December, 1998.
- *Smart Battery System Manager Specification*, Revision 1.0, Smart Battery System Implementers Forum, December, 1998.
- *System Management Bus Specification*, Revision 1.1, Smart Battery System Implementers Forum, December, 1998.

# 2 Definition of Terms

---

This specification uses a particular set of terminology, defined in this section. This section has three parts: General ACPI terms are defined and presented alphabetically.

The ACPI global system states (working, sleeping, soft off, and mechanical off) are defined. Global system states apply to the entire system, and *are* visible to the user.

The ACPI device power states are defined. Device power states are states of particular devices; as such, they are generally *not* visible to the user. For example, some devices may be in the off state even though the system as a whole is in the working state. Device states apply to any device on any bus.

## 2.1 General ACPI Terminology

### Advanced Configuration and Power Interface (ACPI)

As defined in this document, ACPI is a method for describing hardware interfaces in terms abstract enough to allow flexible and innovative hardware implementations and concrete enough to allow shrink-wrap OS code to use such hardware interfaces.

### ACPI Hardware

Computer hardware with the features necessary to support OSPM and with the interfaces to those features described using the Description Tables as specified by this document.

### ACPI Namespace

A hierarchical tree structure in OS-controlled memory that contains named objects. These objects may be data objects, control method objects, bus/device package objects, and so on. The OS dynamically changes the contents of the namespace at run-time by loading definition blocks from the ACPI Tables that reside in the ACPI system firmware. All the information in the ACPI Namespace comes from the Differentiated System Description Table (DSDT), which contains the Differentiated Definition Block, and one or more other definition blocks.

### ACPI Machine Language (AML)

Pseudo-code for a virtual machine supported by an ACPI-compatible OS and in which ACPI control methods and objects are written. The AML encoding definition is provided in section 19, “ACPI Machine Language (AML) Specification.”

### Add-in Card

A generic term used to refer to any device which can be inserted or removed from a platform through a connection bus, such as PCI. Add-in cards are typically inserted within a platform’s physical enclosure, rather than residing physically external to a platform. An add-in card will have its own devices and associated firmware, and may have its own Expansion ROM Firmware.

### Advanced Programmable Interrupt Controller (APIC)

An interrupt controller architecture commonly found on Intel Architecture-based 32-bit PC systems. The APIC architecture supports multiprocessor interrupt management (with symmetric interrupt distribution across all processors), multiple I/O subsystem support, 8259A

compatibility, and inter-processor interrupt support. The architecture consists of local APICs commonly attached directly to processors and I/O APICs commonly in chip sets.

### ACPI Source Language (ASL)

The programming language equivalent for AML. ASL is compiled into AML images. The ASL statements are defined in section 18, “ACPI Source Language (ASL) Reference.”

### Address Range Scrub (ARS)

Process by which regions of memory can be scrubbed to look for memory locations that contain correctable or uncorrectable errors.

### BIOS

BIOS (Basic Input/Output System) is firmware that provides basic boot capabilities for a platform; it is used here to refer specifically to traditional x86 BIOS, and not as a general term for all firmware, or a replacement term for UEFI Core System BIOS. The ambiguity of this the term is what we are trying to remove. See also: Legacy BIOS, System BIOS.

### Boot Firmware

Generic term to describe any firmware on a platform used during the boot process. Use a more specific term, if possible.

### Component

Synonym for device. Please use the term “device” if possible.

### Control Method

A control method is a definition of how the OS can perform a simple hardware task. For example, the OS invokes control methods to read the temperature of a thermal zone. Control methods are written in an encoded language called AML that can be interpreted and executed by the ACPI-compatible OS. An ACPI-compatible system must provide a minimal set of control methods in the ACPI tables. The OS provides a set of well-defined control methods that ACPI table developers can reference in their control methods. OEMs can support different revisions of chip sets with one version of platform firmware by either including control methods in the platform firmware that test configurations and respond as needed or including a different set of control methods for each chip set revision.

### Central Processing Unit (CPU) or Processor

The part of a platform that executes the instructions that do the work. An ACPI-compatible OS can balance processor performance against power consumption and thermal states by manipulating the processor performance controls. The ACPI specification defines a working state, labeled G0 (S0), in which the processor executes instructions. Processor sleeping states, labeled C1 through C3, are also defined. In the sleeping states, the processor executes no instructions, thus reducing power consumption and, potentially, operating temperatures. The ACPI specification also defines processor performance states, where the processor (while in C0) executes instructions, but with lower performance and (potentially) lower power consumption and operating temperature. For more information, see section 8, “Processor Configuration and Control.”

A definition block contains information about hardware implementation and configuration details in the form of data and control methods, encoded in AML. An OEM can provide one or more definition blocks in the ACPI Tables. One definition block must be provided: the Differentiated Definition Block, which describes the base system. Upon loading the Differentiated Definition Block, the OS inserts the contents of the Differentiated Definition Block into the ACPI Namespace. Other definition blocks, which the OS can dynamically insert and remove from the active ACPI Namespace, can contain references to the Differentiated Definition Block. For more information, see [Section 5.2.11](#)

## Device

A generic term used to refer to any computing, input/output or storage element, or any collection of computing, input/output or storage elements, on a platform. An example of a device is a CPU, APU, embedded controller (EC), BMC, Trusted Platform Module (TPM), graphics processing unit (GPU), network interface controller (NIC), hard disk drive (HDD), solid state drive (SSD), Read Only Memory (ROM), flash ROM, or any of the large number of other possible devices. If at all possible, use a more specific term.

## Device Context

The variable data held by the device; it is usually volatile. The device might forget this information when entering or leaving certain states (for more information, see section 2.3, “Device Power State Definitions.”), in which case the OS software is responsible for saving and restoring the information. Device Context refers to small amounts of information held in device peripherals. See System Context.

## Device Firmware

Firmware that is only used by a specific device and cannot be used with any other device. This firmware is typically provided by the device manufacturer.

## Differentiated System Description Table (DSDT)

An OEM must supply a DSDT to an ACPI-compatible OS. The DSDT contains the Differentiated Definition Block, which supplies the implementation and configuration information about the base system. The OS always inserts the DSDT information into the ACPI Namespace at system boot time and never removes it.

## DIMM Physical Address (DPA)

An NVDIMM relative memory address.

## Embedded Controller

The general class of micro-controllers used to support OEM-specific implementations, mainly in mobile environments. The ACPI specification supports embedded controllers in any platform design, as long as the micro-controller conforms to one of the models described in this section. The embedded controller performs complex low-level functions through a simple interface to the host microprocessor(s).

## Embedded Controller Interface

A standard hardware and software communications interface between an OS driver and an embedded controller. This allows any OS to provide a standard driver that can directly

communicate with an embedded controller in the system, thus allowing other drivers within the system to communicate with and use the resources of system embedded controllers (for example, Smart Battery and AML code). This in turn enables the OEM to provide platform features that the OS and applications can use.

## Expansion ROM Firmware

Peripheral Component Interconnect (PCI) term for firmware executed on a host processor which is used by an add-in device during the boot process. This includes Option ROM Firmware and UEFI drivers. Expansion ROM Firmware may be embedded as part of the Host Processor Boot Firmware, or may be separate (e.g., from an add-in card). See also: Option ROM Firmware

## Firmware

Generic term to describe any BIOS or firmware on a platform; it refers to the general class of things, not a specific type. Use a more specific term, if possible.

## Firmware ACPI Control Structure (FACS)

A structure in read/write memory that the platform runtime firmware uses for handshaking between the firmware and the OS. The FACS is passed to an ACPI-compatible OS via the Fixed ACPI Description Table (FADT). The FACS contains the system's hardware signature at last boot, the firmware waking vector, and the Global Lock.

## Firmware Storage Device

A memory device used to store firmware. This could include Read Only Memory (ROM), flash memory, eMMC, UFS drives, etc.

## Fixed ACPI Description Table (FADT)

A table that contains the ACPI Hardware Register Block implementation and configuration details that the OS needs to directly manage the ACPI Hardware Register Blocks, as well as the physical address of the DSDT, which contains other platform implementation and configuration details. An OEM must provide an FADT to an ACPI-compatible OS in the RSDT/XSDT. The OS always inserts the namespace information defined in the Differentiated Definition Block in the DSDT into the ACPI Namespace at system boot time, and the OS never removes it.

## Fixed Features

A set of features offered by an ACPI interface. The ACPI specification places restrictions on where and how the hardware programming model is generated. All fixed features, if used, are implemented as described in this specification so that OSPM can directly access the fixed feature registers.

## Fixed Feature Events

A set of events that occur at the ACPI interface when a paired set of status and event bits in the fixed feature registers are set at the same time. When a fixed feature event occurs, a system control interrupt (SCI) is raised. For ACPI fixed feature events, OSPM (or an ACPI-aware driver) acts as the event handler.

## Fixed Feature Registers

A set of hardware registers in fixed feature register space at specific address locations in system I/O address space. ACPI defines register blocks for fixed features (each register block gets a separate pointer from the FADT). For more information, see section 4.6, “ACPI Hardware Features.”

## General-Purpose Event Registers

The general-purpose event registers contain the event programming model for generic features. All general-purpose events generate SCIs.

## Generic Feature

A generic feature of a platform is value-added hardware implemented through control methods and general-purpose events.

## Generic Interrupt Controller (GIC)

An interrupt controller architecture for ARM processor-based systems.

## Global System Status

Global system states apply to the entire system, and are visible to the user. The various global system states are labeled G0 through G3 in the ACPI specification. For more information, see [Section 2.2](#), “Global System State Definitions.”

## Host Processor

A host processor is the primary processing unit in a platform, traditionally called a Central Processing Unit (CPU), now also sometimes referred to as an Application Processing Unit (APU), or a System on Chip (SoC). This is the processing unit on which the primary operating system (and/or hypervisor), as well as user applications run. This is the processor that is responsible for loading and executing the Host Processor Boot Firmware. This term and "Boot Processor" should be considered synonyms for this particular text clean-up effort (i.e., making them consistent should probably be part of a different ECR, if needed).

## Host Processor Boot Firmware

Generic term used to describe firmware loaded and executed by the Host Processor which provides basic boot capabilities for a platform. This class of firmware is a reference to Legacy BIOS and UEFI, which were sometimes referred to as System BIOS. Where the distinction between Legacy BIOS and UEFI is not important, the term Host Processor Boot Firmware will be used. Where the distinction is important, it will be referenced appropriately. Expansion ROM firmware may also be considered as part of the Host Processor Boot Firmware. Expansion ROM Firmware may be embedded as part of the Host Processor Boot Firmware, or may be separate from the Host Processor Boot Firmware (e.g., loaded from an add-in card).

## Host Processor Runtime Firmware

Host processor runtime firmware is any runtime firmware which executes on the host processor.

## Ignored Bits

Some unused bits in ACPI hardware registers are designated as “ignored” in the ACPI specification. Ignored bits are undefined and can return zero or one (in contrast to reserved bits,

which always return zero). Software ignores ignored bits in ACPI hardware registers on reads and preserves ignored bits on writes.

### **Intel Architecture-Personal Computer (IA-PC)**

A general descriptive term for computers built with processors conforming to the architecture defined by the Intel processor family based on the Intel Architecture instruction set and having an industry-standard PC architecture.

### **I/O APIC**

An Input/Output Advanced Programmable Interrupt Controller routes interrupts from devices to the processor's local APIC.

### **I/O SAPIC**

An Input/Output Streamlined Advanced Programmable Interrupt Controller routes interrupts from devices to the processor's local APIC.

### **Label Storage Area**

A persistent storage area reserved for Label storage.

### **Legacy**

A computer state where power management policy decisions are made by the platform hardware/firmware shipped with the system. The legacy power management features found in today's systems are used to support power management in a system that uses a legacy OS that does not support the OS-directed power management architecture.

### **Legacy BIOS**

One form of Host Processor Boot Firmware used on x86 platforms which uses a legacy x86 BIOS structure. This form of host processor boot firmware has been or is being replaced by UEFI. This term will likely be most useful in distinguishing and comparing older forms of firmware to newer forms (e.g., "it was done this way in legacy BIOS, but is now done another way in UEFI"). See also: BIOS, System BIOS

### **Legacy Hardware**

A computer system that has no ACPI or OSPM power management support.

### **Legacy OS**

An OS that is not aware of and does not direct the power management functions of the system. Included in this category are operating systems with APM 1.x support.

### **Local APIC**

A local Advanced Programmable Interrupt Controller receives interrupts from the I/O APIC.

### **Local SAPIC**

A local Streamlined Advanced Programmable Interrupt Controller receives interrupts from the I/O SAPIC.

**Management Firmware**

Firmware used only by a Baseboard Management Controller (BMC) or other Out-of-Band (OOB) management controller.

**Multiple APIC Description Table (MADT)**

The Multiple APIC Description Table (MADT) is used on systems supporting the APIC and SAPIC to describe the APIC implementation. Following the MADT is a list of APIC/SAPIC structures that declare the APIC/SAPIC features of the machine.

**Namespace**

A namespace defines a contiguously-addressed range of Non-Volatile Memory, conceptually similar to a SCSI Logical Unit (LUN) or an NVM Express namespace. A namespace can be described by one or more Labels.

**Non-Host Processor**

A non-host processor is a generic term used to describe any processing unit on a platform which is not a host processor (e.g. a microcontroller, co-processor, etc). For the purposes of this particular ECR, this should also be considered a synonym for "secondary processor", those CPUs that might be on an SoC, for example, that are not the host (or "boot") processor.

**NVDIMM**

Non Volatile Dual In-line Memory Module.

**Object**

The nodes of the ACPI Namespace are objects inserted in the tree by the OS using the information in the system definition tables. These objects can be data objects, package objects, control method objects, and so on. Package objects refer to other objects. Objects also have type, size, and relative name.

**Object name**

Part of the ACPI Namespace. There is a set of rules for naming objects.

**Operating System-directed Power Management (OSPM)**

A model of power (and system) management in which the OS plays a central role and uses global information to optimize system behavior for the task at hand.

**Option ROM Firmware/Device Firmware**

Legacy term for boot firmware typically executed on a host processor which is used by a device during the boot process. Option ROM firmware may be included with the host processor boot firmware or may be carried separately by a device (such as an add-in card). See also: Expansion ROM Firmware

**Package**

An array of objects.

**Peripheral**

A peripheral (also known as an external device) is a device which resides physically external to a platform and is connected to a platform, either wired or wirelessly. A peripheral is comprised of its own devices which may have their own firmware.

**Persistent Memory (pmem)**

Byte-addressable memory that retains its contents across power loss.

**Platform**

A platform consists of multiple devices assembled and working together to deliver a specific computing function, but does not include any other software other than the firmware as part of the devices in the platform. Examples of platforms include a notebook, a desktop, a server, a network switch, a blade, etc. - all without and independent of any operating system, user applications, or user data.

**Platform Boot Firmware**

The collection of all boot firmware on a platform. This firmware is initially loaded by a platform (such as an SoC, a motherboard, or a complete system) at power-on to do basic initialization of the platform hardware and then hand control to a boot loader or OS. In some cases this will be x86 BIOS, or it may be UEFI Core System BIOS, or it could be something else entirely. Once control has been handed over to a boot loader or an OS, this firmware has no further role.

**Platform Runtime Firmware**

The collection of all run-time firmware on a platform. This is firmware that can provide functions that can be invoked by an OS, but those functions are still concerned only with the platform hardware (e.g., PSCI on ARM). The assumption is that platform boot firmware has since been superceded by the OS since the OS is now up and running, but that there is still a need for an OS to access specific features of hardware that may only be possible via firmware.

**Platform Firmware**

The collection of platform boot firmware and platform runtime firmware.

**Power Button**

A user push button or other switch contact device that switches the system from the sleeping/soft off state to the working state, and signals the OS to transition to a sleeping/soft off state from the working state.

**Power Management**

Mechanisms in software and hardware to minimize system power consumption, manage system thermal limits, and maximize system battery life. Power management involves trade-offs among system speed, noise, battery life, processing speed, and alternating current (AC) power consumption. Power management is required for some system functions, such as appliance (for example, answering machine, furnace control) operations.

**Power Resources**

Resources (for example, power planes and clock sources) that a device requires to operate in a given power state.

## Power Sources

The battery (including a UPS battery) and AC line powered adapters or power supplies that supply power to a platform.

## Register Grouping

Consists of two register blocks (it has two pointers to two different blocks of registers). The fixed-position bits within a register grouping can be split between the two register blocks. This allows the bits within a register grouping to be split between two chips.

## Reserved Bits

Some unused bits in ACPI hardware registers are designated as “Reserved” in the ACPI specification. For future extensibility, hardware-register reserved bits always return zero, and data writes to them have no side effects. OS/PM implementations must write zeros to all reserved bits in enable and status registers and preserve bits in control registers.

## Root System Description Pointer (RSDP)

An ACPI-compatible system must provide an RSDP in the system’s low address space. This structure’s only purpose is to provide the physical address of the RSDT and XSDT.

## Root System Description Table (RSDT)

A table with the signature ‘RSDT,’ followed by an array of physical pointers to other system description tables. The OS locates that RSDT by following the pointer in the RSDP structure.

## Runtime Firmware

Generic term to describe any firmware on a platform used during runtime (i.e., after the boot process has completed). Use a more specific term, if possible.

## Secondary System Description Table (SSDT)

SSDTs are a continuation of the DSDT. Multiple SSDTs can be used as part of a platform description. After the DSDT is loaded into the ACPI Namespace, each secondary description table listed in the RSDT/XSDT with a unique OEM Table ID is loaded. This allows the OEM to provide the base support in one table, while adding smaller system options in other tables.

## System Physical Address (SPA)

The platform physical address assigned and programmed by the platform and utilized by the OS.

## Sleep Button

A user push button that switches the system from the sleeping/soft off state to the working state, and signals the OS to transition to a sleeping state from the working state.

## Smart Battery Subsystem

A battery subsystem that conforms to the following specifications: Smart Battery and either Smart Battery System Manager or Smart Battery Charger and Selector—and the additional ACPI requirements.

## Smart Battery Table

An ACPI table used on platforms that have a Smart Battery subsystem. This table indicates the energy-level trip points that the platform requires for placing the system into different sleeping states and suggested energy levels for warning the user to SMBus Interface

A standard hardware and software communications interface between an OS bus driver and an SMBus controller.

## Software

Software is comprised of elements required to load the operating system and all user applications and user data subsequently handled by the operating system.

## Streamlined Advanced Programmable Interrupt Controller (SAPIC)

An advanced APIC commonly found on Intel Itanium™ Processor Family-based 64-bit systems. transition the platform into a sleeping state.

## System

A system is the entirety of a computing entity, including all elements in a platform (hardware, firmware) and software (operating system, user applications, user data). A system can be thought of both as a logical construct (e.g. a software stack) or physical construct (e.g. a notebook, a desktop, a server, a network switch, etc).

## System BIOS

A term sometimes used in industry to refer to either Legacy BIOS, or to UEFI Core System BIOS, or both. Please use this term only when referring to Legacy BIOS. See also: BIOS, Legacy BIOS.

## System Context

The volatile data in the system that is not saved by a device driver.

## System Control Interrupt (SCI)

A system interrupt used by hardware to notify the OS of ACPI events. The SCI is an active, low, shareable, level interrupt.

## System Management Bus (SMBus)

A two-wire interface based upon the I<sup>2</sup>C protocol. The SMBus is a low-speed bus that provides positive addressing for devices, as well as bus arbitration.

## System Management Interrupt (SMI)

An OS-transparent interrupt generated by interrupt events on legacy systems. By contrast, on ACPI systems, interrupt events generate an OS-visible interrupt that is shareable (edge-style interrupts will not work). Hardware platforms that want to support both legacy operating systems and ACPI systems must support a way of re-mapping the interrupt events between SMIs and SCIs when switching between ACPI and legacy models.

## Thermal States

Thermal states represent different operating environment temperatures within thermal zones of a system. A system can have one or more thermal zones; each thermal zone is the volume of

space around a particular temperature-sensing device. The transitions from one thermal state to another are marked by trip points, which are implemented to generate an SCI when the temperature in a thermal zone moves above or below the trip point temperature.

## UEFI

One form of Host Processor Boot Firmware which uses a Unified Extensible Firmware Interface (UEFI) structure (as defined by the UEFI Forum). This is the current host processor boot firmware structure being adopted as a standard in the industry. This term should be used when referring specifically to UEFI code on a platform.

## UEFI Drivers

Standalone binary executables in PE<sub>COFF</sub> format which are loaded by UEFI during the boot process to handle specific pieces of hardware.

## Extended Root System Description Table (XSDT)

The XSDT provides identical functionality to the RSDT but accommodates physical addresses of DESCRIPTION HEADERs that are larger than 32 bits. Notice that both the XSDT and the RSDT can be pointed to by the RSDP structure.

## 2.2 Global System State Definitions

Global system states (Gx states) apply to the entire system and are visible to the user.

Global system states are defined by six principal criteria:

1. Does application software run?
2. What is the latency from external events to application response?
3. What is the power consumption?
4. Is an OS reboot required to return to a working state?
5. Is it safe to disassemble the computer?
6. Can the state be entered and exited electronically?

Following is a list of the system states:

### G3 Mechanical Off

A computer state that is entered and left by a mechanical means (for example, turning off the system's power through the movement of a large red switch). It is implied by the entry of this off state through a mechanical means that no electrical current is running through the circuitry and that it can be worked on without damaging the hardware or endangering service personnel. The OS must be restarted to return to the Working state. No hardware context is retained. Except for the real-time clock, power consumption is zero.

### G2/S5 Soft Off

A computer state where the computer consumes a minimal amount of power. No user mode or system mode code is run. This state requires a large latency in order to return to the Working state. The system's context will not be preserved by the hardware. The system must be restarted to return to the Working state. It is not safe to disassemble the machine in this state.

## G1 Sleeping

A computer state where the computer consumes a small amount of power, user mode threads are not being executed, and the system “appears” to be off (from an end user’s perspective, the display is off, and so on). Latency for returning to the Working state varies on the wake environment selected prior to entry of this state (for example, whether the system should answer phone calls). Work can be resumed without rebooting the OS because large elements of system context are saved by the hardware and the rest by system software. It is not safe to disassemble the machine in this state.

## G0 Working

A computer state where the system dispatches user mode (application) threads and they execute. In this state, peripheral devices (peripherals) are having their power state changed dynamically. The user can select, through some UI, various performance/power characteristics of the system to have the software optimize for performance or battery life. The system responds to external events in real time. It is not safe to disassemble the machine in this state.

## S4 Non-Volatile Sleep

A special global system state that allows system context to be saved and restored (relatively slowly) when power is lost to the motherboard. If the system has been commanded to enter S4, the OS will write all system context to a file on non-volatile storage media and leave appropriate context markers. The machine will then enter the S4 state. When the system leaves the Soft Off or Mechanical Off state, transitioning to Working (G0) and restarting the OS, a restore from a NVS file can occur. This will only happen if a valid non-volatile sleep data set is found, certain aspects of the configuration of the machine have not changed, and the user has not manually aborted the restore. If all these conditions are met, as part of the OS restarting, it will reload the system context and activate it. The net effect for the user is what looks like a resume from a Sleeping (G1) state (albeit slower). The aspects of the machine configuration that must not change include, but are not limited to, disk layout and memory size. It might be possible for the user to swap a PC Card or a Device Bay device, however.

Notice that for the machine to transition directly from the Soft Off or Sleeping states to S4, the system context must be written to non-volatile storage by the hardware; entering the Working state first so that the OS or platform runtime firmware can save the system context takes too long from the user’s point of view. The transition from Mechanical Off to S4 is likely to be done when the user is not there to see it.

Because the S4 state relies only on non-volatile storage, a machine can save its system context for an arbitrary period of time (on the order of many years).

**Table 2-1      Summary of Global Power States**

Global system state	Software runs	Latency	Power consumption	OS restart required	Safe to disassemble computer	Exit state electronically
G0 Working	Yes	0	Large	No	No	Yes

Global system state	Software runs	Latency	Power consumption	OS restart required	Safe to disassemble computer	Exit state electronically
G1 Sleeping	No	>0, varies with sleep state	Smaller	No	No	Yes
G2/S5 Soft Off	No	Long	Very near 0	Yes	No	Yes
G3 Mechanical Off	No	Long	RTC battery	Yes	Yes	No

Notice that the entries for G2/S5 and G3 in the Latency column of the above table are “Long.” This implies that a platform designed to give the user the appearance of “instant-on,” similar to a home appliance device, will use the G0 and G1 states almost exclusively (the G3 state may be used for moving the machine or repairing it).

## 2.3 Device Power State Definitions

Device power states are states of particular devices; as such, they are generally not visible to the user. For example, some devices may be in the Off state even though the system as a whole is in the Working state.

Device states apply to any device on any bus. They are generally defined in terms of four principal criteria:

- Power consumption--How much power the device uses.
- Device context--How much of the context of the device is retained by the hardware. The OS is responsible for restoring any lost device context (this may be done by resetting the device).
- Device driver--What the device driver must do to restore the device to full on.
- Restore time--How long it takes to restore the device to full on.

The device power states are defined below, although very generically. Many devices do not have all four power states defined. Devices may be capable of several different low-power modes, but if there is no user-perceptible difference between the modes, only the lowest power mode will be used. The Device Class Power Management Specifications, included in Appendix A of this specification, describe which of these power states are defined for a given type (class) of device and define the specific details of each power state for that device class. For a list of the available *Device Class Power Management Specifications*, see “[Appendix A: Device Class Specifications](#).”

### D3 (Off)

Power has been fully removed from the device. Also referred to as D3cold in this and other specs. All device context is lost when this state is entered, so the OS software will reinitialize the device when powering it back on. Since all device context and power are lost, devices in this state do not decode their address lines, and cannot be enumerated by software. Devices in this state have the longest restore times.

### D3hot

The meaning of the D3hot State is defined by each device class. In general, D3hot is expected to save as much power as possible without affecting PNP Enumeration. Devices in D3hot must have

enough power to remain enumerable by software. For example, PCI Configuration space access and contents must operate as in shallower power states. Similarly, ACPI identification and configuration objects must operate as in shallower power states. Otherwise, no device functionality is supported, and Driver software is required to restore any lost context, or reinitialize the device, during its transition back to D0.

Devices in this state can have long restore times. All classes of devices define this state.

**Note:** *For devices that support both D3hot and D3 exposed to OSPM via \_PR3, device software/drivers must always assume OSPM will target D3and must assume all device context will be lost and the device will no longer be enumerable.*

## D2

The meaning of the D2 Device State is defined by each device class. Many device classes may not define D2. In general, D2 is expected to save more power and preserve less device context than D1 or D0. Buses in D2 may cause the device to lose some context (for example, by reducing power on the bus, thus forcing the device to turn off some of its functions).

## D1

The meaning of the D1 Device State is defined by each device class. Many device classes may not define D1. In general, D1 is expected to save less power and preserve more device context than D2.

## D0 (Fully-On)

This state is assumed to be the highest level of power consumption. The device is completely active and responsive, and is expected to remember all relevant context continuously.

Transitions amongst these power states are restricted for simplicity. Power-down transitions (from higher-power, or shallower, to lower-power, or deeper) are allowed between any two states. However, power-up transitions (from deeper to shallower) are required to go through D0; i.e. Dy to Dx<y is illegal for all x !=0.

**Table 2-2 Summary of Device Power States**

Device State	Power Consumption	Device Context Retained	Driver Restoration
D0 - Fully-On	As needed for operation	All	None
D1	D0>D1>D2> D3hot>D3	>D2	<D2
D2	D0>D1>D2> D3hot>D3	<D1	>D1
D3hot	D0>D1>D2>D3hot>D3	Optional	None <->Full initialization and load
D3 - Off	0	None	Full initialization and load

**Note:** Devices often have different power modes within a given state. Devices can use these modes as long as they can automatically transparently switch between these modes from the software, without violating the rules for the current Dx state the device is in. Low-power modes that adversely affect performance (in other words, low speed modes) or that are not transparent to software cannot be done automatically in hardware; the device driver must issue commands to use these modes.

### 2.3.1 Device Performance States

Device performance states (Px states) are power consumption and capability states within the active (D0) device power state. Performance states allow OSPM to make tradeoffs between performance and energy conservation. Device performance states have the greatest impact when the implementation is such that the states invoke different device efficiency levels as opposed to a linear scaling of performance and energy consumption. Since performance state transitions occur in the active device states, care must be taken to ensure that performance state transitions do not adversely impact the system.

Device performance states, when necessary, are defined on a per device class basis (See [Appendix A](#) for more information).

## 2.4 Sleeping and Soft-off State Definitions

S1-S4 are types of sleeping states within the global system state, G1, while S5 is a soft-off state associated with the G2 system state. The Sx states are briefly defined below. For a detailed definition of the system behavior within each Sx state, see [Section 7.4.2](#), “System \\_Sx States.” For a detailed definition of the transitions between each of the Sx states, see [Section 16.1](#), “Sleeping States.”

### S1 Sleeping State

The S1 sleeping state is a low wake latency sleeping state. In this state, no system context is lost (CPU or chip set) and hardware maintains all system context.

### S2 Sleeping State

The S2 sleeping state is a low wake latency sleeping state. This state is similar to the S1 sleeping state except that the CPU and system cache context is lost (the OS is responsible for maintaining the caches and CPU context). Control starts from the processor’s reset vector after the wake event.

### S3 Sleeping State

The S3 sleeping state is a low wake latency sleeping state where all system context is lost except system memory. CPU, cache, and chip set context are lost in this state. Hardware maintains memory context and restores some CPU and L2 configuration context. Control starts from the processor’s reset vector after the wake event.

### S4 Sleeping State

The S4 sleeping state is the lowest power, longest wake latency sleeping state supported by ACPI. In order to reduce power to a minimum, it is assumed that the hardware platform has powered off all devices. Platform context is maintained.

### S5 Soft Off State

The S5 state is similar to the S4 state except that the OS does not save any context. The system is in the “soft” off state and requires a complete boot when it wakes. Software uses a different

state value to distinguish between the S5 state and the S4 state to allow for initial boot operations within the platform boot firmware to distinguish whether the boot is going to wake from a saved memory image.

## 2.5 Processor Power State Definitions

Processor power states (Cx states) are processor power consumption and thermal management states within the global working state, G0. The Cx states possess specific entry and exit semantics and are briefly defined below. For a more detailed definition of each Cx state, see section 8.1, “Processor Power States.”

### C0 Processor Power State

While the processor is in this state, it executes instructions.

### C1 Processor Power State

This processor power state has the lowest latency. The hardware latency in this state must be low enough that the operating software does not consider the latency aspect of the state when deciding whether to use it. Aside from putting the processor in a non-executing power state, this state has no other software-visible effects.

### C2 Processor Power State

The C2 state offers improved power savings over the C1 state. The worst-case hardware latency for this state is provided via the ACPI system firmware and the operating software can use this information to determine when the C1 state should be used instead of the C2 state. Aside from putting the processor in a non-executing power state, this state has no other software-visible effects.

### C3 Processor Power State

The C3 state offers improved power savings over the C1 and C2 states. The worst-case hardware latency for this state is provided via the ACPI system firmware and the operating software can use this information to determine when the C2 state should be used instead of the C3 state. While in the C3 state, the processor’s caches maintain state but ignore any snoops. The operating software is responsible for ensuring that the caches maintain coherency.

## 2.6 Device and Processor Performance State Definitions

Device and Processor performance states (Px states) are power consumption and capability states within the active/executing states, C0 for processors and D0 for devices. The Px states are briefly defined below. For a more detailed definition of each Px state from a processor perspective, see section 8.4.4, “Processor Performance Control.” For a more detailed definition of each Px state from a device perspective see section 3.6, “Device and Processor Performance States,” and the device class specifications in Appendix A.

### P0 Performance State

While a device or processor is in this state, it uses its maximum performance capability and may consume maximum power.

**P1 Performance State**

In this performance power state, the performance capability of a device or processor is limited below its maximum and consumes less than maximum power.

**Pn Performance State**

In this performance state, the performance capability of a device or processor is at its minimum level and consumes minimal power while remaining in an active state. State  $n$  is a maximum number and is processor or device dependent. Processors and devices may define support for an arbitrary number of performance states not to exceed 255.

# 3 ACPI Concepts

---

Platforms compliant with the ACPI specification provide OSPM with direct and **exclusive** control over the power management and motherboard device configuration functions of a computer. During OS initialization, OSPM **takes over** these functions from legacy implementations such as the APM BIOS, SMM-based firmware, legacy applications, and the PNPBIOS. Having done this, OSPM is responsible for handling motherboard device configuration events as well as for controlling the power, performance, and thermal status of the system based on user preference, application requests and OS imposed Quality of Service (QOS) / usability goals. ACPI provides low-level interfaces that allow OSPM to perform these functions. The functional areas covered by the ACPI specification are:

## **System power management**

ACPI defines mechanisms for putting the computer as a whole in and out of system sleeping states. It also provides a general mechanism for any device to wake the computer.

## **Device power management**

ACPI tables describe motherboard devices, their power states, the power planes the devices are connected to, and controls for putting devices into different power states. This enables the OS to put devices into low-power states based on application usage.

## **Processor power management**

While the OS is idle but not sleeping, it will use commands described by ACPI to put processors in low-power states.

## **Device and processor performance management**

While the system is active, OSPM will transition devices and processors into different performance states, defined by ACPI, to achieve a desirable balance between performance and energy conservation goals as well as other environmental requirements (for example, visibility and acoustics).

## **Configuration / Plug and Play**

ACPI specifies information used to enumerate and configure motherboard devices. This information is arranged hierarchically so when events such as docking and undocking take place, the OS has precise, *a priori* knowledge of which devices are affected by the event.

## **System Events**

ACPI provides a general event mechanism that can be used for system events such as thermal events, power management events, docking, device insertion and removal, and so on. This mechanism is very flexible in that it does not define specifically how events are routed to the core logic chip set.

## **Battery management**

Battery management policy moves from the APM BIOS to the ACPI OS. An ACPI-compatible battery device needs either a Smart Battery subsystem interface, which is controlled by the OS directly through the embedded controller interface, or a Control Method Battery interface. A Control Method Battery interface is completely defined by AML control methods, allowing an

OEM to choose any type of the battery and any kind of communication interface supported by ACPI. The battery must comply with the requirements of its interface, as described either herein or in other applicable standards. The OS may choose to alter the behavior of the battery, for example, by adjusting the Low Battery or Battery Warning trip point. When there are multiple batteries present, the battery subsystem is not required to perform any synthesis of a “composite battery” from the data of the separate batteries. In cases where the battery subsystem does not synthesize a “composite battery” from the separate battery’s data, the OS must provide that synthesis.

## Thermal management

Since the OS controls the power and performance states of devices and processors, ACPI also addresses system thermal management. It provides a simple, scalable model that allows OEMs to define thermal zones, thermal indicators, and methods for cooling thermal zones.

## Embedded Controller

ACPI defines a standard hardware and software communications interface between an OS bus enumerator and an embedded controller. This allows any OS to provide a standard bus enumerator that can directly communicate with an embedded controller in the system, thus allowing other drivers within the system to communicate with and use the resources of system embedded controllers. This in turn enables the OEM to provide platform features that the OS and applications can use.

## SMBus Controller

ACPI defines a standard hardware and software communications interface between an OS bus driver and an SMBus Controller. This allows any OS to provide a standard bus driver that can directly communicate with SMBus devices in the system. This in turn enables the OEM to provide platform features that the OS and applications can use.

OSPM's mission is to optimally configure the platform and to optimally manage the system's power, performance, and thermal status given the user's preferences and while supporting OS imposed Quality of Service (QOS) / usability goals. To achieve these goals, ACPI requires that once an ACPI compliant platform is in ACPI mode, the platform's hardware, firmware, or other non-OS software must not manipulate the platform's configuration, power, performance, and thermal control interfaces independently of OSPM. OSPM alone is responsible for coordinating the configuration, power management, performance management, and thermal control policy of the system. Manipulation of these interfaces independently of OSPM undermines the purpose of OSPM/ACPI and may adversely impact the system's configuration, power, performance, and thermal policy goals. There are two exceptions to this requirement. The first is in the case of the possibility of damage to a system from an excessive thermal conditions where an ACPI compatible OS is present and OSPM latency is insufficient to remedy an adverse thermal condition. In this case, the platform may exercise a failsafe thermal control mechanism that reduces the performance of a system component to avoid damage. If this occurs, the platform must notify OSPM of the performance reduction if the reduction is of significant duration (in other words, if the duration of reduced performance could adversely impact OSPM's power or performance control policy - operating system vendors can provide guidance in this area). The second exception is the case where the platform contains Active cooling devices but does not contain Passive cooling temperature trip points or controls,. In this case, a hardware based Active cooling mechanism may be implemented without impacting OSPM's goals. Any platform that requires both active and


passive cooling must allow OSPM to manage the platform thermals via ACPI defined active and passive cooling interfaces.

### 3.1 System Power Management

Under OSPM, the OS directs all system and device power state transitions. Employing user preferences and knowledge of how devices are being used by applications, the OS puts devices in and out of low-power states. Devices that are not being used can be turned off. Similarly, the OS uses information from applications and user settings to put the system as a whole into a low-power state. The OS uses ACPI to control power state transitions in hardware.

### 3.2 Power States

From a user-visible level, the system can be thought of as being in one of the states in the following diagram:

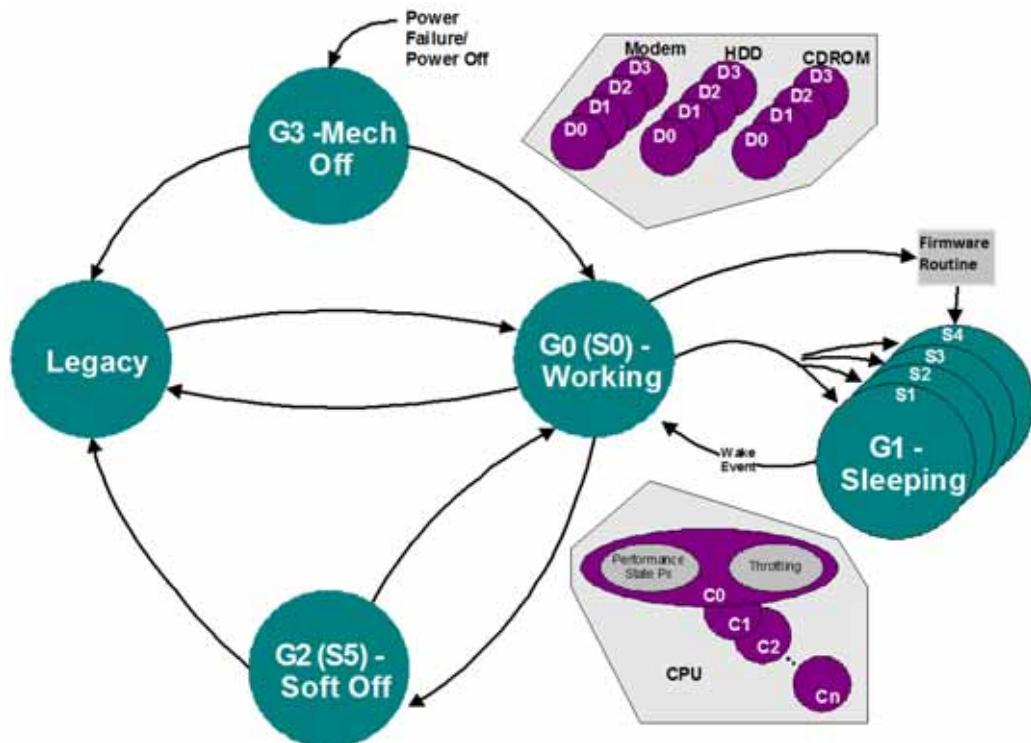

**Figure 3-1 Global System Power States and Transitions**

See [Section 2.2](#), “Global System State Definitions,” for detailed definitions of these states.

In general use, computers alternate between the Working and Sleeping states. In the Working state, the computer is used to do work. User-mode application threads are dispatched and running. Individual devices can be in low-power (Dx) states and processors can be in low-power (Cx) states if they are not being used. Any device the system turns off because it is not actively in use can be turned on with short latency. (What “short” means depends on the device. An LCD display needs to come on in sub-second times, while it is generally acceptable to wait a few seconds for a printer to wake.)

The net effect of this is that the entire machine is functional in the Working state. Various Working sub-states differ in speed of computation, power used, heat produced, and noise produced. Tuning within the Working state is largely about trade-offs among speed, power, heat, and noise.

When the computer is idle or the user has pressed the power button, the OS will put the computer into one of the sleeping (Sx) states. No user-visible computation occurs in a sleeping state. The sleeping sub-states differ in what events can arouse the system to a Working state, and how long this takes. When the machine must awaken to all possible events or do so very quickly, it can enter only the sub-states that achieve a partial reduction of system power consumption. However, if the only event of interest is a user pushing on a switch and a latency of minutes is allowed, the OS could save all system context into an NVS file and transition the hardware into the S4 sleeping state. In this state, the machine draws almost zero power and retains system context for an arbitrary period of time (years or decades if needed).

The other states are used less often. Computers that support legacy BIOS power management interfaces boot in the Legacy state and transition to the Working state when an ACPI OS loads. A system without legacy support (for example, a RISC system) transitions directly from the Mechanical Off state to the Working state. Users typically put computers into the Mechanical Off state by flipping the computer's mechanical switch or by unplugging the computer.

### 3.2.1 Power Button

In legacy systems, the power button typically either forces the machine into Soft Off or Mechanical Off or, on a laptop, forces it to some sleeping state. No allowance is made for user policy (such as the user wants the machine to "come on" in less than 1 second with all context as it was when the user turned the machine "off"), system alert functions (such as the system being used as an answering machine or fax machine), or application function (such as saving a user file).

In an OSPM system, there are two switches. One is to transition the system to the Mechanical Off state. A mechanism to stop current flow is required for legal reasons in some jurisdictions (for example, in some European countries). The other is the "main" power button. This is in some obvious place (for example, beside the keyboard on a laptop). Unlike legacy on/off buttons, all it does is send a request to the system. What the system does with this request depends on policy issues derived from user preferences, user function requests, and application data.

### 3.2.2 Platform Power Management Characteristics

#### 3.2.2.1 Mobile PC

Mobile PCs will continue to have aggressive power management functionality. Going to OSPM/ACPI will allow enhanced power savings techniques and more refined user policies.

Aspects of mobile PC power management in the ACPI specification are thermal management (see [Section 11](#), "Thermal Management") and the embedded controller interface (see [Section 12](#), "ACPI Embedded Controller Interface Specification").

#### 3.2.2.2 Desktop PCs

Power-managed desktops will be of two types, though the first type will migrate to the second over time.

## Ordinary “Green PC”

Here, new appliance functions are not the issue. The machine is really only used for productivity computations. At least initially, such machines can get by with very minimal function. In particular, they need the normal ACPI timers and controls, but don't need to support elaborate sleeping states, and so on. They, however, do need to allow the OS to put as many of their devices/resources as possible into device standby and device off states, as independently as possible (to allow for maximum compute speed with minimum power wasted on unused devices). Such PCs will also need to support wake from the sleeping state by means of a timer, because this allows administrators to force them to turn on just before people are to show up for work.

## Home PC

Computers are moving into home environments where they are used in entertainment centers and to perform tasks like answering the phone. A home PC needs all of the functionality of the ordinary green PC. In fact, it has all of the ACPI power functionality of a laptop except for docking and lid events (and need not have any legacy power management). Note that there is also a thermal management aspect to a home PC, as a home PC user wants the system to run as quietly as possible, often in a thermally constrained environment.

### 3.2.2.3 Multiprocessor and Server PCs

Perhaps surprisingly, server machines often get the largest absolute power savings. Why? Because they have the largest hardware configurations and because it's not practical for somebody to hit the off switch when they leave at night.

#### Day Mode

In day mode, servers are power-managed much like a corporate ordinary green PC, staying in the Working state all the time, but putting unused devices into low-power states whenever possible. Because servers can be very large and have, for example, many disk spindles, power management can result in large savings. OSPM allows careful tuning of when to do this, thus making it workable.

#### Night Mode

In night mode, servers look like home PCs. They sleep as deeply as they can and are still able to wake and answer service requests coming in over the network, phone links, and so on, within specified latencies. So, for example, a print server might go into deep sleep until it receives a print job at 3 A.M., at which point it wakes in perhaps less than 30 seconds, prints the job, and then goes back to sleep. If the print request comes over the LAN, then this scenario depends on an intelligent LAN adapter that can wake the system in response to an interesting received packet.

## 3.3 Device Power Management

This section describes ACPI-compatible device power management. The ACPI device power states are introduced, the controls and information an ACPI-compatible OS needs to perform device power management are discussed, the wake operation devices use to wake the computer from a sleeping state is described, and an example of ACPI-compatible device management using a modem is given

### 3.3.1 Device Power Management Model

ACPI Device Power Management is based on an integrated model consisting of:

#### Distributed device power state policy

For each hardware device on the system, there is a Power Policy Owner in the Operating System that is responsible for continuously determining the best power state for the device. The best device power state is the one that, at any point in time, minimizes the consumption of power by the device consistent with the usage requirements of the device by the system and its user. Policy is typically defined for a class of devices, and incorporates application activity, user scenarios and other operating state as necessary. It is applied to all devices of a given class.

#### Layered device power state control

Once power state decisions are made for a device, they must be carried-out by device drivers. The model partitions the control functionality between the device, bus and platform layers. Device drivers at each layer perform control using mechanisms available at that level, coordinated by OSPM. In general, the ordering proceeds from Device/Class level, to Bus level, to Platform level when a device is powering down, and the inverse when powering-up.

For instance, a device-level driver has access, via the device programming interface, to settings and control registers that invoke specific, sometimes proprietary, power control features in the device. The device driver uses these controls as appropriate for the target ACPI-defined power state determined by the policy owner. Similarly, classes of devices may have standardized power features, invoked in standardized ways that Class Drivers might use when entering a target power state.

At the bus level, power management standards come into play to provide bus-specific controls that work for every device connected to the bus, regardless of device class. PCI, for instance, defines fields in the device Configuration Space for setting the device's power state (D0-D3). Bus-level drivers utilize these standards to perform control in addition to that applied by the device-specific or device class driver. Bus-specific mechanisms also enable additional power savings in the system by enabling the bus infrastructure hardware itself to enter lower power states, as defined in the bus standard.

Finally, for platform-level power state control, ACPI defines mechanisms (\_PRx, \_PSx, \_ON, \_OFF) for putting a device into a given power state. The Operating System's ACPI software ("OSPM") utilizes these mechanisms to execute the lowest-level, platform-specific control for a given device, such as turning off and on power rails and clocks, resetting HW, etc.

#### Operating System coordination

Finally, ACPI defines information and behavior requirements that enable OSPM to inform the Power Policy Owner about supported state and wake-up capabilities, and to coordinate the actions of the various levels of device drivers in controlling power. OSPM, in this role, is responsible for ensuring that device power management is coordinated with System Power Management such as entering sleep states (S1-S4) or Low-power Idle states (LPI). Integrated with device power state policy and control, wake-up policy and control are also coordinated by OSPM. Power Policy Owners, which decide when the device might be needed to wake the system, ensure that only device power states that the device can wake from are selected when the

platform enters a Sleep or LPI state. Enabling of wake-up hardware is also performed at the device, bus and platform levels and coordinated by OSPM. OSPM ensures further that the Sleep or LPI state selected for the system is compatible with the device state and wake-up capabilities of all the devices currently enabled for wake.

### 3.3.2 Power Management Standards

To manage power of all the devices in the system, the OS needs standard methods for sending commands to a device. These standards define the operations used to manage power of devices on a particular I/O interconnect and the power states that devices can be put into. Defining these standards for each I/O interconnect creates a baseline level of power management support the OS can utilize. Independent Hardware Vendors (IHVs) do not have to spend extra time writing software to manage power of their hardware, because simply adhering to the standard gains them direct OS support. For OS vendors, the I/O interconnect standards allow the power management code to be centralized in the driver for each I/O interconnect. Finally, I/O interconnect-driven power management allows the OS to track the states of all devices on a given I/O interconnect. When all the devices are in a given state (or example, D3 - off), the OS can put the entire I/O interconnect into the power supply mode appropriate for that state (for example, D3 - off).

I/O interconnect-level power management specifications are written for a number of buses including:

- PCI
- PCI Express
- CardBus
- USB
- IEEE 1394

### 3.3.3 Device Power States

To unify nomenclature and provide consistent behavior across devices, standard definitions are used for the power states of devices. Generally, these states are defined in terms of the following criteria:

- Power consumption--How much power the device uses.
- Device context--How much of the context of the device is retained by the hardware.
- Device driver--What the device driver must do to restore the device to fully on.
- Restore latency--How long it takes to restore the device to fully on.

More specifically, power management specifications for each class of device (for example, modem, network adapter, hard disk, and so on) more precisely define the power states and power policy for the class. See [Section 2.3](#), “Device Power State Definitions,” for the detailed description of the general device power states (D0-D3).

### 3.3.4 Device Power State Definitions

The device power state definitions are device-independent, but classes of devices on a bus must support some consistent set of power-related characteristics. For example, when the bus-specific mechanism to set the device power state to a given level is invoked, the actions a device might take and the specific sorts of behaviors the OS can assume while the device is in that state will vary from device type to device type. For a fully integrated device power management system, these class-specific power characteristics must also be standardized:

## Device Power State Characteristics

Each class of device has a standard definition of target power consumption levels, state-change latencies, and context loss.

## Minimum Device Power Capabilities

Each class of device has a minimum standard set of power capabilities.

## Device Functional Characteristics

Each class of device has a standard definition of what subset of device functionality or features is available in each power state (for example, the net card can receive, but cannot transmit; the sound card is fully functional except that the power amps are off, and so on).

## Device Wakeup Characteristics

Each class of device has a standard definition of its wake policy.

The Device Class Power Management specifications define these power state characteristics for each class of device. See [Appendix A](#).

## 3.4 Controlling Device Power

ACPI interfaces provide the control methods and information needed to manage device power. OSPM leverages these interfaces to perform tasks like determining the capabilities of a device, executing methods to set a device's power state or get its status, and enabling a device to wake the machine.

**Note:** *Other buses enumerate some devices on the main board. For example, PCI devices are reported through the standard PCI enumeration mechanisms. Power management of these devices is handled through their own bus specification (in this case, PCI). All other devices on the main board are handled through ACPI. Specifically, the ACPI table lists legacy devices that cannot be reported through their own bus specification, the root of each bus in the system, and devices that have additional power management or configuration options not covered by their own bus specification.*

For more detailed information see [Section 7](#), “Power and Performance Management.”

### 3.4.1 Getting Device Power Capabilities

As the OS enumerates devices in the system, it gets information about the power management features that the device supports. The Differentiated Definition Block given to the OS by the platform boot firmware describes every device handled by ACPI. This description contains the following information:

- A description of what power resources (power planes and clock sources) the device needs in each power state that the device supports. For example, a device might need a high power bus and a clock in the D0 state but only a low-power bus and no clock in the D2 state.
- A description of what power resources a device needs in order to wake the machine (or none to indicate that the device does not support wake). The OS can use this information to infer what device and system power states from which the device can support wake.
- The optional control method the OS can use to set the power state of the device and to get and set resources.

In addition to describing the devices handled by ACPI, the table lists the power planes and clock sources themselves and the control methods for turning them on and off. For detailed information, see [Section 7](#), “Power and Performance Management.”

### 3.4.2 Setting Device Power States

OSPM uses the Set Power State operation to put a device into one of the four power states.

When a device is put in a lower power state, it configures itself to draw as little power from the bus as possible. The OS tracks the state of all devices on the bus, and will put the bus in the best power state based on the current device requirements on that bus. For example, if all devices on a bus are in the D3 state, the OS will send a command to the bus control chip set to remove power from the bus (thus putting the bus in the D3 state). If a particular bus supports a low-power supply state, the OS puts the bus in that state if all devices are in the D1 or D2 state. Whatever power state a device is in, the OS must be able to issue a Set Power State command to resume the device.

**Note:** *The device does not need to have power to do this. The OS must turn on power to the device before it can send commands to the device.*

OSPM also uses the Set Power State operation to enable power management features such as wake (described in [Section 7](#), “Power and Performance Management.”).

For power-down operations (transitions from Dx to some deeper Dy), OSPM first evaluates the appropriate control method for the target state (\_PSx), then turns-off any unused power resources. Notice that this might not mean that power is actually removed from the device. If other active devices are sharing a power resource, the power resource will remain on. In the power-up case (transitions from some Dx back to the shallower D0), the power resources required for D0 are first turned on, and then the control method (\_PS0) is evaluated.

### 3.4.3 Getting Device Power Status

OSPM uses the Get Power Status operation to determine the current power configuration (states and features), as well as the status of any batteries supported by the device. The device can signal an SCI to inform the OS of changes in power status. For example, a device can trigger an interrupt to inform the OS that the battery has reached low power level.

Devices use the ACPI event model to signal power status changes (for example, battery status changes) to OSPM. The platform signals events to the OS via an interrupt, either SCI, or GPIO. An interrupt status bit is set to indicate the event to the OS. The OS runs the control method associated with the event. This control method signals to the OS which device has changed.

ACPI supports two types of batteries: batteries that report only basic battery status information and batteries that support the Smart Battery System Implementers Forum *Smart Battery Specification*. For batteries that report only basic battery status information (such as total capacity and remaining capacity), the OS uses control methods from the battery’s description table to read this information. To read status information for Smart Batteries, the OS can use a standard Smart Battery driver that directly interfaces to Smart Batteries through the appropriate bus enumerator.

### 3.4.4 Waking the System

The wake operation enables devices to wake the system from a sleeping or low-power idle state. This operation must not depend on the CPU because the CPU will not be executing instructions.

The OS ensures any bridges between the device and the core logic are in the lowest power state in which they can still forward the wake signal. When a device with wake enabled decides to wake the system, it sends the defined signal on its bus. Bus bridges must forward this signal to upstream bridges using the appropriate signal for that bus. Thus, the signal eventually reaches the core chip set (for example, an ACPI chip set), which in turn wakes the system.

Before putting the system in a sleeping power state, the OS determines which devices are needed to wake the system based on application requests, and then enables wake on those devices in a device and bus specific manner.

The OS enables the wake feature on devices by setting that device's SCI Enable bit or unmasking its wake interrupt. The location of this control is listed in the device's entry in the description table. Only devices that have their wake feature enabled can wake the system. The OS keeps track of the power states that the wake devices support, and keeps the system in a power state in which the wake can still wake the system (based on capabilities reported in the description table).

When the system is in a Sleeping or low-power idle state and a wake device decides to wake the system, it signals to the core logic. The status bit corresponding to the device waking the system is set, and the core logic resumes the system. After the OS is running again, it determines the device responsible for the wake event by either running a control method (for wake events) or processing the device's ISR (for wake interrupts).

**Note:** *Besides using ACPI mechanism to enable a particular device to wake the system, an ACPI platform must also be able to record and report the wake source to OSPM. When a system is woken from certain states (such as the S4 state), it may start out in non-ACPI mode. In this case, the SCI status bit may be cleared when ACPI mode is re-entered. However the platform must still attempt to record the wake source for retrieval by OSPM at a later point.*

**Note:** *Although the above description explains how a device can wake the system, note that a device can also be put into a low power state during the S0 system state, and that this device may generate a wake signal in the S0 state as the following example illustrates.*

### 3.4.5 Example: Modem Device Power Management

To illustrate how these power management methods function in ACPI, consider an integrated modem. (This example is greatly simplified for the purposes of this discussion.) The power states of a modem are defined as follows (this is an excerpt from the Modem Device Class Power Management Specification):

#### D0

- Modem controller on
- Phone interface on
- Speaker on
- Can be on hook or off hook
- Can be waiting for answer

#### D1

- Modem controller in low-power mode (context retained by device)
- Phone interface powered by phone line or in low-power mode
- Speaker off
- Must be on hook

**D2**

Same as **D3**

**D3**

- Modem controller off (context lost)
- Phone interface powered by phone line or off
- Speaker off
- On hook

The power policy for the modem is defined as follows:

**D3 D0**

COM port opened

**D0, D1 D3**

COM port closed

**D0 D1**

Modem put in answer mode

**D1 D0**

Application requests dial or the phone rings while the modem is in answer mode

The wake policy for the modem is very simple: When the phone rings and wake is enabled, wake the system.

Based on that policy, the modem and the COM port to which it is attached can be implemented in hardware as shown in Figure 3-2. This is just an example for illustrating features of ACPI. This example is not intended to describe how OEMs should build hardware.

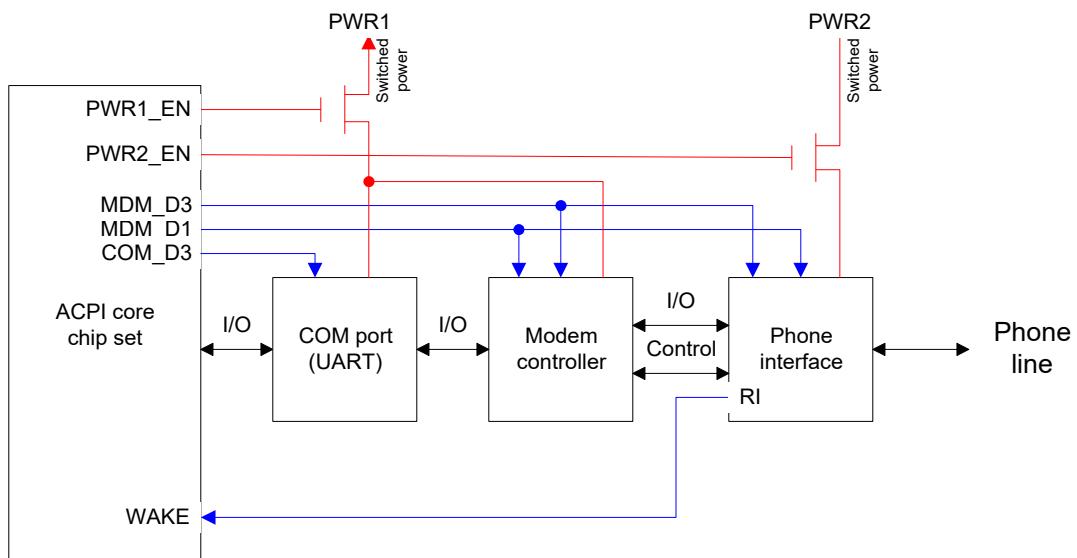


Figure 3-2 Example Modem and COM Port Hardware

**Note:** Although not shown above, each discrete part has some isolation logic so that the part is isolated when power is removed from it. Isolation logic controls are implemented as power resources in the ACPI Differentiated Description Block so that devices are isolated as power planes are sequenced off.

### 3.4.5.1 Obtaining the Modem Capabilities

The OS determines the capabilities of this modem when it enumerates the modem by reading the modem's entry in the Differentiated Definition Block. In this case, the entry for the modem would report:

The device supports **D0**, **D1**, and **D3**:

- **D0** requires PWR1 and PWR2 as power resources
- D1** requires PWR1 as a power resource  
(**D3** implicitly requires no power resources)
- To wake the system, the modem needs no power resources (implying it can wake the system from **D0**, **D1**, and **D3**)

### Control methods for setting power state and resources

#### 3.4.5.2 Setting the Modem Power State

While the OS is running (G0 state), it switches the modem to different power states according to the power policy defined for modems.

When an application opens the COM port, the OS turns on the modem by putting it in the D0 state. Then if the application puts the modem in answer mode, the OS puts the modem in the D1 state to wait for the call. To make this power-down transition, OSPM first runs a control method (\_PS1) provided in the modem's entry to put the device in the D1 state. In this example, this control method asserts the MDM\_D1 signal that tells the modem controller to go into a low-power mode. OSPM then checks to see what power resources are no longer needed by the modem device. In this case, PWR2 is no longer needed. Then it checks to make sure no other device in the system requires the use of the PWR2 power resource. If the resource is no longer needed, the OSPM uses the \_OFF control method associated with that power resource in the Differentiated Definition Block to turn off the PWR2 power plane. This control method sends the appropriate commands to the core chip set to stop asserting the PWR2\_EN line.

OSPM does not always turn off power resources when a given device is put in a lower power state. For example, assume that the PWR1 power plane also powers an active line printer (LPT) port. Suppose the user terminates the modem application, causing the COM port to be closed, and therefore causing the modem to be shut off (state D3). As always, OSPM begins the state transition process by running the modem's control method to switch the device to the D3 power state. The control method causes the MDM\_D3 line to be asserted. Notice that these registers might not be in the device itself. For example, the control method could read the register that controls MDM\_D3. The modem controller now turns off all its major functions so that it draws little power, if any, from the PWR1 line. OSPM continues by checking to see which power resources are no longer needed. Because the LPT port is still active, PWR1 is in use. OSPM does not turn off the PWR1 resource. Because the COM port is closed, the same sequence of events take place to put it in the D3 state, but the power resource is not turned off due to the LPT dependency.

### 3.4.5.3 Obtaining the Modem Power Status

Integrated modems have no batteries; the only power status information for the device is the power state of the modem. To determine the modem's current power state (D0-D3), OSPM runs a control method (\_PSC) supplied in the modem's entry in the Differentiated Definition Block. This control method reads from the necessary registers to determine the modem's power state.

### 3.4.5.4 Waking the System

As indicated in the modem capabilities, this modem can wake the machine from any device power state. Before putting the system in a Sleep or LPI state, the OS enables wake on any devices that applications have requested to be able to wake the system. Then, it chooses the deepest sleeping or LPI state that can still provide the power resources necessary to allow all enabled wake devices to wake the system. Next, the OS puts each of those devices in the appropriate power state. In this case, the OS puts the modem in the D3 state because it supports wake from that state. Finally, the OS puts the system into a sleep or LPI state.

Waking the system via modem starts with the modem's phone interface asserting its ring indicate (RI) line when it detects a ring on the phone line. This line is routed to the core logic to generate a wake event. The chipset then wakes the system and the hardware will eventually pass control back to the OS (the wake mechanism differs depending on the sleeping state, or LPI). After the OS is running, it puts the device in the D0 state and begins handling interrupts from the modem to process the event.

## 3.5 Processor Power Management

To further save power in the Working state, the OS puts the CPU into low-power states (C1, C2, and C3) when the OS is idle. In these low-power states, the CPU does not run any instructions, and wakes when an interrupt, such as the OS scheduler's timer interrupt, occurs.

The OS determines how much time is being spent in its idle loop by reading the ACPI Power Management Timer. This timer runs at a known, fixed frequency and allows the OS to precisely determine idle time. Depending on this idle time estimate, the OS will put the CPU into different quality low-power states (which vary in power and latency) when it enters its idle loop.

The CPU states are defined in detail in [Section 8](#), "Processor Configuration and Control."

## 3.6 Device and Processor Performance States

This section describes the concept of device and processor performance states. Device and processor performance states (Px states) are power consumption and capability states within the active/executing states, C0 for processors and D0 for devices. Performance states allow OSPM to make tradeoffs between performance and energy conservation. Device and processor performance states have the greatest impact when the states invoke different device and processor efficiency levels as opposed to a linear scaling of performance and energy consumption. Since performance state transitions occur in the active/executing device states, care must be taken to ensure that performance state transitions do not adversely impact the system.

Examples of device performance states include:

- A hard drive that provides levels of maximum throughput that correspond to levels of power consumption.

- An LCD panel that supports multiple brightness levels that correspond to levels of power consumption.
- A graphics component that scales performance between 2D and 3D drawing modes that corresponds to levels of power consumption.
- An audio subsystem that provides multiple levels of maximum volume that correspond to levels of maximum power consumption.
- A Direct-RDRAM™ controller that provides multiple levels of memory throughput performance, corresponding to multiple levels of power consumption, by adjusting the maximum bandwidth throttles.

Processor performance states are described in [Section 8](#), “Processor Configuration and Control.”

## 3.7 Configuration and “Plug and Play”

In addition to power management, ACPI interfaces provide controls and information that enable OSPM to configure the required resources of motherboard devices along with their dynamic insertion and removal. ACPI Definition Blocks, including the Differentiated System Description Table (DSDT) and Secondary System Description Tables (SSDTs), describe motherboard devices in a hierarchical format called the ACPI namespace. The OS enumerates motherboard devices simply by reading through the ACPI Namespace looking for devices with hardware IDs.

Each device enumerated by ACPI includes ACPI-defined objects in the ACPI Namespace that report the hardware resources that the device could occupy, an object that reports the resources that are currently used by the device, and objects for configuring those resources. The information is used by the Plug and Play OS (OSPM) to configure the devices.

**Note:** *When preparing to boot a system, the platform boot firmware only needs to configure boot devices. This includes boot devices described in the ACPI system description tables as well as devices that are controlled through other standards.*

### 3.7.1 Device Configuration Example: Configuring the Modem

Returning to the modem device example above, the OS will find the modem and load a driver for it when the OS finds it in the DSDT. This table will have control methods that give the OS the following information:

- The device can use IRQ 3, I/O 3F8-3FF or IRQ 4, I/O 2E8-2EF
- The device is currently using IRQ 3, I/O 3F8-3FF

The OS configures the modem’s hardware resources using Plug and Play algorithms. It chooses one of the supported configurations that does not conflict with any other devices. Then, OSPM configures the device for those resources by running a control method supplied in the modem’s section of the Differentiated Definition Block. This control method will write to any I/O ports or memory addresses necessary to configure the device to the given resources.

### 3.7.2 NUMA Nodes

Systems employing a Non Uniform Memory Access (NUMA) architecture contain collections of hardware resources including processors, memory, and I/O buses, that comprise what is commonly known as a “NUMA node”. Processor accesses to memory or I/O resources within the local NUMA node is generally faster than processor accesses to memory or I/O resources outside of the local NUMA node. ACPI defines

interfaces that allow the platform to convey NUMA node topology information to OSPM both statically at boot time and dynamically at run time as resources are added or removed from the system.

## 3.8 System Events

ACPI includes a general event model used for Plug and Play, Thermal, and Power Management events. There are two registers that make up the event model: an event status register and an event enable register.

When an event occurs, the core logic sets a bit in the status register to indicate the event. If the corresponding bit in the enable register is set, the core logic will assert the SCI to signal the OS. When the OS receives this interrupt, it will run the control methods corresponding to any bits set in the event status register. These control methods use AML commands to tell the OS what event occurred.

For example, assume a machine has all of its Plug and Play, Thermal, and Power Management events connected to the same pin in the core logic. The event status and event enable registers would only have one bit each: the bit corresponding to the event pin.

When the system is docked, the core logic sets the status bit and signals the SCI. The OS, seeing the status bit set, runs the control method for that bit. The control method checks the hardware and determines the event was a docking event (for example). It then signals to the OS that a docking event has occurred, and can tell the OS specifically where in the device hierarchy the new devices will appear.

Since the event model registers are generalized, they can describe many different platform implementations. The single pin model above is just one example. Another design might have Plug and Play, Thermal, and Power Management events wired to three different pins so there would be three status bits (and three enable bits). Yet another design might have every individual event wired to its own pin and status bit. This design, at the opposite extreme from the single pin design, allows very complex hardware, yet very simple control methods. Countless variations in wiring up events are possible. However, note that care must be taken to ensure that if events share a signal that the event that generated the signal can be determined in the corresponding event handling control method allowing the proper device notification to be sent.

## 3.9 Battery Management

Battery management policy moves from the APM BIOS to the ACPI-compatible OS. Batteries must comply with the requirements of their associated interfaces, as described either herein or in other applicable standards. The OS may choose to alter the behavior of the battery, for example, by adjusting the Low Battery or Battery Warning trip point. When there are multiple batteries present, the battery subsystem is not required to perform any synthesis of a “composite battery” from the data of the separate batteries. In cases where the battery subsystem does not synthesize a “composite battery” from the separate battery's data, the OS must provide that synthesis.

An ACPI-compatible battery device needs either a Smart Battery subsystem interface or a Control Method Battery interface.

- *Smart Battery* is controlled by the OS directly through the embedded controller (EC). For more information about the ACPI Embedded Controller SMBus interface, see [Section 12.9](#), “SMBus Host Controller Interface via Embedded Controller.” For additional information about the Smart Battery subsystem interface, see [Section 10.1](#), “Smart Battery Subsystems.”

- *Control Method Battery* is completely accessed by AML code control methods, allowing the OEM to choose any type of battery and any kind of communication interface supported by ACPI. For more information about the Control Method Battery Interface, see [Section 10.2](#), “Control Method Batteries.”

This section describes concepts common to all battery types.


### 3.9.1 Battery Communications

Both the Smart Battery and Control Method Battery interfaces provide a mechanism for the OS to query information from the platform’s battery system. This information may include full charged capacity, present battery capacity, rate of discharge, and other measures of the battery’s condition. All battery system types must provide notification to the OS when there is a change such as inserting or removing a battery, or when a battery starts or stops discharging. Smart Batteries and some Control Method Batteries are also able to give notifications based on changes in capacity. Smart batteries provide extra information such as estimated run-time, information about how much power the battery is able to provide, and what the run-time would be at a predetermined rate of consumption.

### 3.9.2 Battery Capacity

Each battery must report its designed capacity, latest full-charged capacity, and present remaining capacity. Remaining capacity decreases during usage, and it also changes depending on the environment. Therefore, the OS must use latest full-charged capacity to calculate the battery percentage. In addition the battery system must report warning and low battery levels at which the user must be notified and the system transitioned to a sleeping state. See [Figure 3-3](#) for the relation of these five values.

A system may use either rate and capacity [mA/mAh] or power and energy [mW/mWh] for the unit of battery information calculation and reporting. Mixing [mA] and [mW] is not allowed on a system.

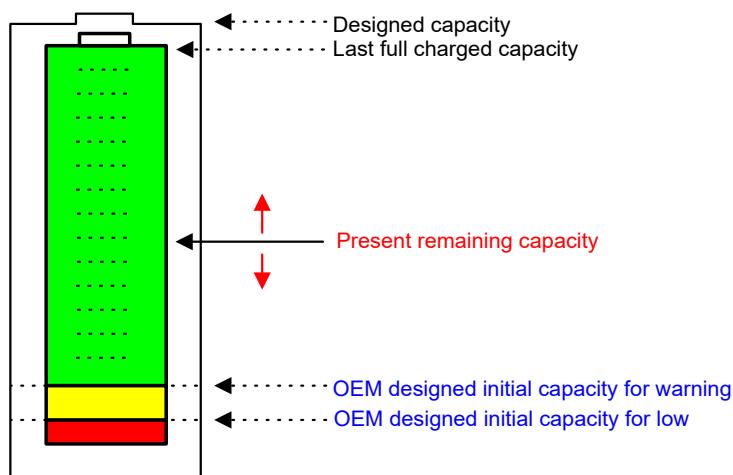

**Figure 3-3 Reporting Battery Capacity**

### 3.9.3 Battery Gas Gauge

At the most basic level, the OS calculates Remaining Battery Percentage [%] using the following formula:

$$\text{Remaining Battery Percentage[%]} = \frac{\text{Battery Remaining Capacity [mAh/mWh]}}{\text{Last Full Charged Capacity [mAh/mWh]}} * 100$$


Control Method Battery also reports the Present Drain Rate [mA or mW] for calculating the remaining battery life. At the most basic level, Remaining Battery life is calculated by following formula:

$$\text{Remaining Battery Life [h]} = \frac{\text{Battery Remaining Capacity [mAh/mWh]}}{\text{Battery Present Drain Rate [mA/mW]}}$$

Smart Batteries also report the present rate of drain, but since they can directly report the estimated run-time, this function should be used instead as it can more accurately account for variations specific to the battery.

### 3.9.4 Low Battery Levels

A system has an OEM-designed initial capacity for warning, initial capacity for low, and a critical battery level or flag. The values for warning and low represent the amount of energy or battery capacity needed by the system to take certain actions. The critical battery level or flag is used to indicate when the batteries in the system are completely drained. OSPM can determine independent warning and low battery capacity values based on the OEM-designed levels, but cannot set these values lower than the OEM-designed values, as shown in the figure below

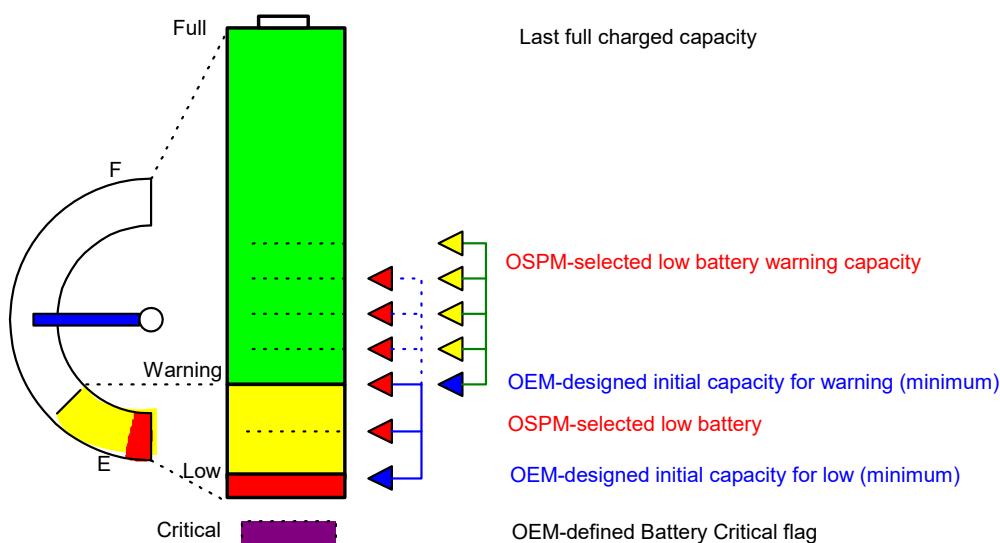

**Figure 3-4 Low Battery and Warning**

Each Control Method Battery in a system reports the OEM-designed initial warning capacity and OEM-designed initial low capacity as well as a flag to report when that battery has reached or is below its critical energy level. Unlike Control Method Batteries, Smart Batteries are not necessarily specific to one particular machine type, so the OEM-designed warning, low, and critical levels are reported separately in a Smart Battery Table described in [Section 5.2.14](#).

The table below describes how these values should be set by the OEM and interpreted by the OS.

**Table 3-3 Low Battery Levels**

Level	Description
Warning	When the total available energy (mWh) or capacity (mAh) in the batteries falls below this level, the OS will notify the user through the UI. This value should allow for a few minutes of run-time before the “Low” level is encountered so the user has time to wrap up any important work, change the battery, or find a power outlet to plug the system in.
Low	This value is an estimation of the amount of energy or battery capacity required by the system to transition to any supported sleeping state. When the OS detects that the total available battery capacity is less than this value, it will transition the system to a user defined system state (S1-S4). In most situations this should be S4 so that system state is not lost if the battery eventually becomes completely empty. The design of the OS should consider that users of a multiple battery system may remove one or more of the batteries in an attempt replace or charge it. This might result in the remaining capacity falling below the “Low” level not leaving sufficient battery capacity for the OS to safely transition the system into the sleeping state. Therefore, if the batteries are discharging simultaneously, the action might need to be initiated at the point when both batteries reach this level.
Critical	The Critical battery state indicates that all available batteries are discharged and do not appear to be able to supply power to run the system any longer. When this occurs, the OS must attempt to perform an emergency shutdown as described below.  For a smart battery system, this would typically occur when all batteries reach a capacity of 0, but an OEM may choose to put a larger value in the Smart Battery Table to provide an extra margin of safety.  For a Control Method Battery system with multiple batteries, the flag is reported per battery. If any battery in the system is in a critically low state and is still providing power to the system (in other words, the battery is discharging), the system is considered to be in a critical energy state. The _BST control method is required to return the Critical flag on a discharging battery only when all batteries have reached a critical state; the ACPI system firmware is otherwise required to switch to a non-critical battery.

### 3.9.4.1 Emergency Shutdown

Running until all batteries in a system are critical is not a situation that should be encountered normally, since the system should be put into a sleeping state when the battery becomes low. In the case that this does occur, the OS should take steps to minimize any damage to system integrity. The emergency shutdown procedure should be designed to minimize bad effects based on the assumption that power may be lost at any time. For example, if a hard disk is spun down, the OS should not try to spin it up to write any data, since spinning up the disk and attempting to write data could potentially corrupt files if the write were not completed. Even if a disk is spun up, the decision to attempt to save even system settings data before shutting down would have to be evaluated since reverting to previous settings might be less harmful than having the potential to corrupt the settings if power was lost halfway through the write operation.

### 3.9.5 Battery Calibration

The reported capacity of many batteries generally degrade over time, providing less run time for the user. However, it is possible with many battery systems to provide more usable runtime on an old battery if a calibration or conditioning cycle is run occasionally. The user has typically been able to perform a calibration cycle either by going into the platform boot firmware setup menu, or by running a custom driver and calibration application provided by the OEM. The calibration process typically takes several hours, and the laptop must be plugged in during this time. Ideally the application that controls this should make this as good of a user experience as possible, for example allowing the user to schedule the system to wake up and perform the calibration at some time when the system will not be in use. Since the calibration user experience does not need to be different from system to system it makes sense for this service to be provided by the OSPM. In this way OSPM can provide a common experience for end users and eliminate the need for OEMs to develop custom battery calibration software.

In order for OSPM to perform generic battery calibration, generic interfaces to control the two basic calibration functions are required. These functions are defined in [Section 10.2.2.5](#) and [Section 10.2.2.6](#). First, there is a means to detect when it would be beneficial to calibrate the battery. Second there is a means to perform that calibration cycle. Both of those functions may be implemented by dedicated hardware such as a battery controller chip, by firmware in the embedded controller, by the platform firmware, or by OSPM. From here on any function implemented through AML, whether or not the AML code relies on hardware, will be referred to as “AML controlled” since the interface is the same whether the AML passes control to the hardware or not.

Detection of when calibration is necessary can be implemented by hardware or AML code and be reported through the `_BMD` method. Alternately, the `_BMD` method may simply report the number of cycles before calibration should be performed and let the OS attempt to count the cycles. A counter implemented by the hardware or the platform firmware will generally be more accurate since the batteries can be used without the OS running, but in some cases, a system designer may opt to simplify the hardware or firmware implementation.


When calibration is desirable and the user has scheduled the calibration to occur, the calibration cycle can be AML controlled or OSPM controlled. OSPM can only implement a very simple algorithm since it doesn't have knowledge of the specifics of the battery system. It will simply discharge the battery until it quits discharging, then charge it until it quits charging. In the case where the AC adapter cannot be controlled through the `_BMC`, it will prompt the user to unplug the AC adapter and reattach it after the system powers off. If the calibration cycle is controlled by AML, the OS will initiate the calibration cycle by calling `_BMC`. That method will either give control to the hardware, or will control the calibration cycle itself. If the control of the calibration cycle is implemented entirely in AML code, the platform runtime firmware may avoid continuously running AML code by having the initial call to `_BMC` start the cycle, set some state flags, and then exit. Control of later parts of the cycle can be accomplished by putting code that checks these state flags in the battery event handler (`_Qxx`, `_Lxx`, or `_Exx`).

Details of the control methods for this interface are defined in [Section 10.2](#).

## 3.10 Thermal Management

ACPI allows the OS to play a role in the thermal management of the system while maintaining the platform's ability to mandate cooling actions as necessary. In the passive cooling mode, OSPM can make cooling decisions based on application load on the CPU as well as the thermal heuristics of the system. OSPM can also gracefully shutdown the computer in case of high temperature emergencies.

The ACPI thermal design is based around regions called thermal zones. Generally, the entire PC is one large thermal zone, but an OEM can partition the system into several logical thermal zones if necessary. [Figure 3-5](#) is an example mobile PC diagram that depicts a single thermal zone with a central processor as the thermal-coupled device. In this example, the whole notebook is covered as one large thermal zone. This notebook uses one fan for active cooling and the CPU for passive cooling.

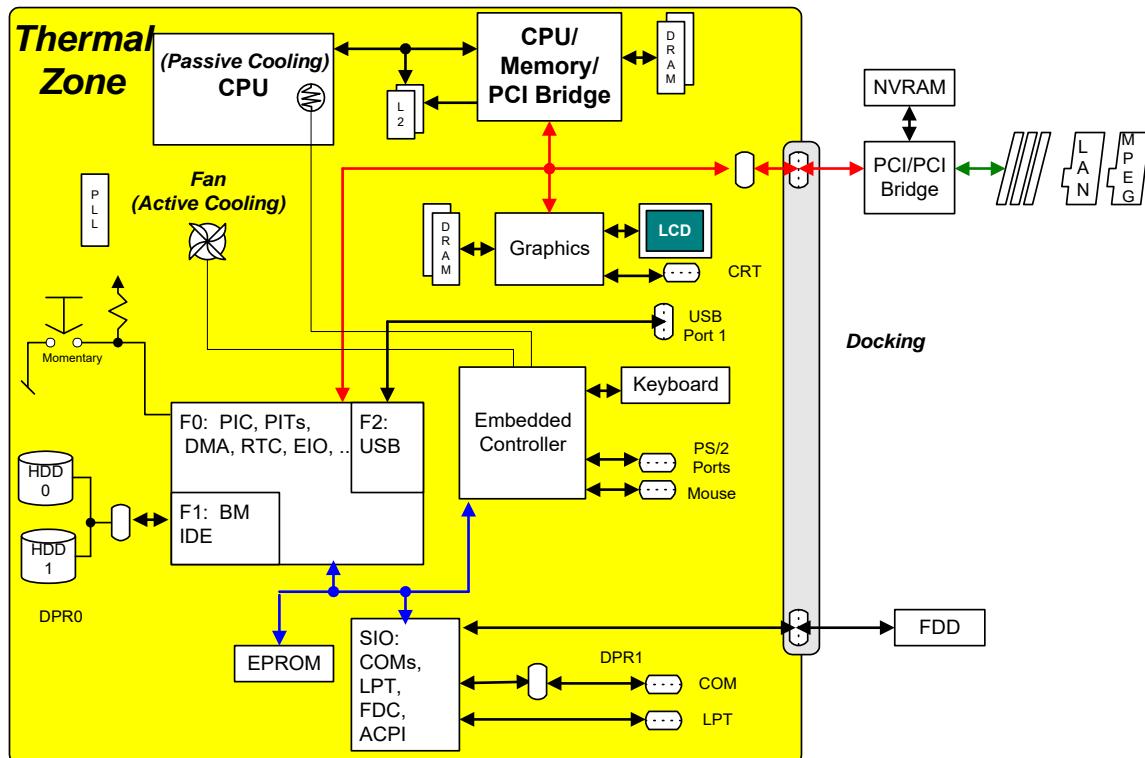

**Figure 3-5 Thermal Zone**

The following sections are an overview of the thermal control and cooling characteristics of a computer. For some thermal implementation examples on an ACPI platform, see [Section 11.6](#), “Thermal Zone Interface Requirements.”

### 3.10.1 Active and Passive Cooling Modes

ACPI defines two cooling modes, Active and Passive:

#### Passive cooling

OS reduces the power consumption of devices at the cost of system performance to reduce the temperature of the system.

#### Active cooling

OS increases the power consumption of the system (for example, by turning on a fan) to reduce the temperature of the system.

These two cooling modes are inversely related to each other. Active cooling requires increased power to reduce the heat within the system while Passive cooling requires reduced power to decrease the temperature. The effect of this relationship is that Active cooling allows maximum system performance, but it may create undesirable fan noise, while Passive cooling reduces system performance, but is inherently quiet.

### 3.10.2 Performance vs. Energy Conservation

A robust OSPM implementation provides the means for the end user to convey to OSPM a preference (or a level of preference) for either performance or energy conservation. Allowing the end user to choose this preference is most critical to mobile system users where maximizing system run-time on a battery charge often has higher priority over realizing maximum system performance.

A user's preference for performance corresponds to the Active cooling mode while a user's preference for energy conservation corresponds to the Passive cooling mode. ACPI defines an interface to convey the cooling mode to the platform. Active cooling can be performed with minimal OSPM thermal policy intervention. For example, the platform indicates through thermal zone parameters that crossing a thermal trip point requires a fan to be turned on. Passive cooling requires OSPM thermal policy to manipulate device interfaces that reduce performance to reduce thermal zone temperature.

### 3.10.3 Acoustics (Noise)

Active cooling mode generally implies that fans will be used to cool the system and fans vary in their audible output. Fan noise can be quite undesirable given the loudness of the fan and the ambient noise environment. In this case, the end user's physical requirement for fan silence may override the preference for either performance or energy conservation.

A user's desire for fan silence corresponds to the Passive cooling mode. Accordingly, a user's desire for fan silence also means a preference for energy conservation.

For more information on thermal management and examples of platform settings for active and passive cooling, see [Section 11](#), "Thermal Management."

### 3.10.4 Multiple Thermal Zones

The basic thermal management model defines one thermal zone, but in order to provide extended thermal control in a complex system, ACPI specifies a multiple thermal zone implementation. Under a multiple thermal zone model, OSPM will independently manage several thermal-coupled devices and a designated thermal zone for each thermal-coupled device, using Active and/or Passive cooling methods available to each thermal zone. Each thermal zone can have more than one Passive and Active cooling device. Furthermore, each zone might have unique or shared cooling resources. In a multiple thermal zone configuration, if one zone reaches a critical state then OSPM must shut down the entire system.

## 3.11 Flexible Platform Architecture Support

ACPI defines mechanisms and models to accommodate platform architectures that deviate from the traditional PC. ACPI provides support for platform technologies that enable lower-power, lower cost, more design flexibility and more device diversity. This support is described in the following sections, and detailed in later chapters.

### 3.11.1 Hardware-reduced ACPI

ACPI offers an alternative platform interface model that removes ACPI hardware requirements for platforms that do not implement the PC Architecture. In the *Hardware-reduced ACPI* model, the Fixed hardware interface requirements of Chapter 4 are removed, and Generic hardware interfaces are used instead. This provides the level of flexibility needed to innovate and differentiate in low-power hardware designs while enabling support by multiple Operating Systems.

Hardware-reduced ACPI has the following requirements:

- UEFI firmware interface for boot (Legacy BIOS is not supported).
- Boot in ACPI mode only (ACPI Enable, ACPI Disable, SMI\_CMD and Legacy mode are not supported)
- No hardware resource sharing between OSPM and other asynchronous operating environments, such as UEFI Runtime Services or System Management Mode. (The Global Lock is not supported)
- No dependence on OS-support for maintaining cache coherency across processor sleep states (Bus Master Reload and Arbiter Disable are not supported)
- GPE block devices are not supported

Systems that do not meet the above requirements must implement the ACPI Fixed Hardware interface.

#### 3.11.1.1 Interrupt-based Wake Events

On HW-reduced ACPI platforms, wakeup is an attribute of connected interrupts. Interrupts that are designed to wake the processor or the entire platform are defined as *wake-capable*. Wake-capable interrupts, when enabled by OSPM, wake the system when they assert.

### 3.11.2 Low-Power Idle

Platform architectures may support hardware power management models other than the traditional ACPI Sleep/Resume model. These are typically implemented in proprietary hardware and are capable of delivering low-latency, connected idle while saving as much energy as ACPI Sleep states. To support the diversity of hardware implementations, ACPI provides a mechanism for the platform to indicate to OSPM that such capability is available.

#### 3.11.2.1 Low Power S0 Idle Capable Flag

This flag in the FADT informs OSPM whether a platform has advanced idle power capabilities such that S0 idle achieves savings similar to or better than those typically achieved in S3. With this flag, OSPM can keep the system in S0 idle for its low-latency response and its connectedness rather than transitioning to a system sleep state which has neither. The flag enables support for a diversity of platform implementations: traditional Sleep/Resume systems, systems with advanced idle power, systems that support neither, and systems that can support both, depending on the capabilities of the installed OS.

### 3.11.3 Connection Resources

General-purpose I/O (GPIO) and Simple Peripheral Bus (SPB) controllers are hardware resources provided in silicon solutions to enable flexible configuration of a broad range of system designs. These controllers can provide input, output, interrupt and serial communication connections to arbitrary devices in a system. The function to which one of these connections is put depends on the specific device involved

and the needs of the platform design. In order to support these platform technologies, ACPI defines a general abstraction for flexible connections.

In order to maintain compatibility with existing software models, ACPI abstracts these connections as hardware resources.

The Connection Resource abstraction mirrors the hardware functionality of GPIO and SPB controllers. Like other resources, these connections are allocated and configured before use. With the resources described by the platform, OSPM abstracts the underlying configuration from device drivers. Drivers, then, can be written for the device's function only, and reused with that functional hardware regardless of how it is integrated into a given system.

The key aspects of the Connection Resource abstraction are:

- GPIO and SPB controllers are enumerated as devices in the ACPI Namespace.
- *GPIO Connection* and *SPB Connection* resource types are defined.
- Namespace devices that are connected to GPIO or SPB controllers use Resource Template Macros to add Connection Resources to their resource methods (\_CRS, \_SRS, etc.).
- GPIO Connection Resources can be designated by the platform for use as *GPIO-signaled ACPI Events*.
- Connection Resources can be used by AML methods to access pins and peripherals through *GPIO and SPB operation regions*.

### 3.11.3.1 Supported Platforms

The HW-reduced ACPI and Low power S0 Idle Capable flags combine to represent 4 platform types that can be implemented. The following table enumerates these, as well as the intended OSPM behavior and specific platform requirements.

**Table 3-4 Implementable Platform Types**

Low Power S0 Idle Capable	Hardware-reduced ACPI	OSPM Behavior	Platform Implementation
0	0	Fixed hardware interface accessed for features, events and system power management. Traditional Sleep/Resume power management.	Implement Fixed-feature hardware interface.
0	1	Fixed-feature hardware interface not accessed. Sleep/Resume Power Management using FADT SLEEP_*_REG fields and Interrupt-based wake signaling.	Implement GPIO-signaled ACPI Events; Implement software alternatives to any ACPI fixed features, including the Sleep registers. Implement wake-capable interrupts for wake events.

Low Power S0 Idle Capable	Hardware-reduced ACPI	OSPM Behavior	Platform Implementation
1	0	Fixed hardware interface accessed for features and events. Platform-specific Low-power Idle power management.	Implement Fixed-feature hardware interface. Implement low-power hardware such that the platform achieves power savings in S0 similar to or better than those typically achieved in S3.
1	1	Fixed-feature hardware interface not accessed. Platform-specific Low-power Idle power management.	Implement GPIO-signaled ACPI Events; Implement software alternatives to any ACPI fixed features desired; Implement wake-capable interrupts for any wake events. Implement low-power hardware such that the platform achieves power savings in S0 similar to or better than those typically achieved in S3.

# 4 ACPI Hardware Specification

---

ACPI defines standard interface mechanisms that allow an ACPI-compatible OS to control and communicate with an ACPI-compatible hardware platform. These interface mechanisms are optional (See "Hardware-Reduced ACPI", below). However, if the ACPI Hardware Specification is implemented, platforms must comply with the requirements in this section.

This section describes the hardware aspects of ACPI.

ACPI defines "hardware" as a programming model and its behavior. ACPI strives to keep much of the existing legacy programming model the same; however, to meet certain feature goals, designated features conform to a specific addressing and programming scheme. Hardware that falls within this category is referred to as "fixed."

Although ACPI strives to minimize these changes, hardware engineers should read this section carefully to understand the changes needed to convert a legacy-only hardware model to an ACPI/Legacy hardware model or an ACPI-only hardware model.

ACPI classifies hardware into two categories: Fixed or Generic. Hardware that falls within the fixed category meets the programming and behavior specifications of ACPI. Hardware that falls within the generic category has a wide degree of flexibility in its implementation.

## 4.1 Hardware-Reduced ACPI

For certain classes of systems the ACPI Hardware Specification may not be adequate. Examples include legacy-free, UEFI-based platforms with recent processors, and those implementing mobile platform architectures. For such platforms, a Hardware-reduced ACPI mode is defined. Under this definition, the ACPI Fixed Hardware interface is not implemented, and software alternatives for many of the features it supports are used instead. Note, though, that Hardware-reduced ACPI is not intended to support every possible ACPI system that can be built today. Rather, it is intended to introduce new systems that are designed to be HW-reduced from the start. The ACPI HW Specification should be used if the platform cannot be designed to work without it. Specifically, the following features are not supported under the HW-reduced definition:

- The Global Lock, SMI\_CMD, ACPI Enable and ACPI Disable. Hardware-reduced ACPI systems always boot in ACPI mode, and do not support hardware resource sharing between OSPM and other asynchronous operating environments, such as UEFI Runtime Services or System Management Mode.
- Bus Master Reload and Arbiter Disable. Systems that depend on OS use of these bits to maintain cache coherency across processor sleep states are not supported.
- GPE block devices are not supported.

Platforms that require the above features must implement the ACPI Hardware Specification.

Platforms that are designed for the Hardware-reduced ACPI definition must implement Revision 5 or greater of the Fixed ACPI Descriptor Table, and must set the HW\_REDUCED\_ACPI flag in the Flags field.

**Note:** FFH is permitted and applicable to both full and HW-reduced ACPI implementations.

### 4.1.1 Hardware-Reduced Events

HW-reduced ACPI platforms require alternatives to some of the features supported in the ACPI HW Specification, where none already exists. There are two areas that require such alternatives: The ACPI Platform Event Model, and System and Device Wakeup.

#### 4.1.1.1 GPIO-Signaled Events or Interrupt Signaled Events

General Purpose Input/Output (GPIO) hardware can be used for signaling platform events. GPIO HW is a generalization of the GPE model, and is a shared hardware resource used for many applications. ACPI support for GPIO is described in section [Section 3.11.3](#), "Connection Resources". ACPI 6.1 introduces the capability to signal events via interrupts. See [Section 5.6.9](#) for further details.

GPIO based event signaling is provided through GPIO interrupt connections, which describe the connection to a GPIO controller and pin, and which are mapped to the ACPI Event Handling mechanism via the ACPI Event Information namespace object (\_AEI). OSPM treats GPIO Interrupt Connections listed in \_AEI exactly as it does SCI interrupts: it executes the Event Method associated with the specific event. The name of the method to run is determined by the pin information contained in the GPIO Interrupt Connection resource. See [Section 5.6.5](#) for further details.

GPIO-signaled events can also be wake events, just as GPE events can on traditional ACPI platforms. Designating which events are wake events is done through attributes of the GPIO Interrupt Connection resource used. Devices may use \_PRW to manage wake events as described in [Section 7.3.13](#).

Interrupt based event signaling follows a similar methodology, a generic event device (GED) is declared which in turn describes all interrupts associated with event generation. The interrupts are listed in a \_CRS object. When an interrupt is asserted the OSPM will execute the event method (\_EVT) declared in the GED object specifying the interrupt identifier as a parameter. In this way the interrupt can be associated with specific platform events.

#### 4.1.1.2 Interrupt-based Wake Events

Wake events on HW-reduced ACPI platforms are always caused by an interrupt reaching the processor. Therefore, there are two requirements for waking the system from a sleep or low-power idle state, or a device from a low-power state. First, the interrupt line must be Wake-Capable. Wake-capable interrupts are designed to be able to be delivered to the processor from low-power states. This implies that it must also cause the processor and any required platform hardware to power-up so that an Interrupt Service Routine can run. Secondly, an OS driver must enable the interrupt before entering a low-power state, or before OSPM puts the system into a sleep or low-power idle state.

Wake-capable interrupts are designated as such in their Extended Interrupt or GPIO Interrupt Connection resource descriptor.

## 4.2 Fixed Hardware Programming Model

Because of the changes needed for migrating legacy hardware to the fixed category, ACPI limits the features specified by fixed hardware. Fixed hardware features are defined by the following criteria:

- Performance sensitive features
- Features that drivers require during wake

- Features that enable catastrophic OS software failure recovery

ACPI defines register-based interfaces to fixed hardware. CPU clock control and the power management timer are defined as fixed hardware to reduce the performance impact of accessing this hardware, which will result in more quickly reducing a thermal condition or extending battery life. If this logic were allowed to reside in PCI configuration space, for example, several layers of drivers would be called to access this address space. This takes a long time and will either adversely affect the power of the system (when trying to enter a low-power state) or the accuracy of the event (when trying to get a time stamp value).

Access to fixed hardware by OSPM allows OSPM to control the wake process without having to load the entire OS. For example, if PCI configuration space access is needed, the bus enumerator is loaded with all drivers used by the enumerator. Defining these interfaces in fixed hardware at addresses with which OSPM can communicate without any other driver's assistance, allows OSPM to gather information prior to making a decision as to whether it continues loading the entire OS or puts it back to sleep.

If elements of the OS fail, it may be possible for OSPM to access address spaces that need no driver support. In such a situation, OSPM will attempt to honor fixed power button requests to transition the system to the G2 state. In the case where OSPM event handler is no longer able to respond to power button events, the power button override feature provides a back-up mechanism to unconditionally transition the system to the soft-off state.

### 4.3 Generic Hardware Programming Model

Although the fixed hardware programming model requires hardware registers to be defined at specific address locations, the generic hardware programming model allows hardware registers to reside in most address spaces and provides system OEMs with a wide degree of flexibility in the implementation of specific functions in hardware. OSPM directly accesses the fixed hardware registers, but relies on OEM-provided ACPI Machine Language (AML) code to access generic hardware registers.

AML code allows the OEM to provide the means for OSPM to control a generic hardware feature's control and event logic.

The section entitled "ACPI Source Language Reference" describes the ACPI Source Language (ASL)—a programming language that OEMs use to create AML. The ASL language provides many of the operators found in common object-oriented programming languages, but it has been optimized to enable the description of platform power management and configuration hardware. An ASL compiler converts ASL source code to AML, which is a very compact machine language that the ACPI AML code interpreter executes.


AML does two things:

- Abstracts the hardware from OSPM
- Buffers OEM code from the different OS implementations

One goal of ACPI is to allow the OEM "value added" hardware to remain basically unchanged in an ACPI configuration. One attribute of value-added hardware is that it is all implemented differently. To enable OSPM to execute properly on different types of value added hardware, ACPI defines higher level "control methods" that it calls to perform an action. The OEM provides AML code, which is associated with control methods, to be executed by OSPM. By providing AML code, generic hardware can take on almost any form.

Another important goal of ACPI is to provide OS independence. To do this, the OEM AML code has to execute the same under any ACPI-compatible OS. ACPI allows for this by making the AML code interpreter part of OSPM. This allows OSPM to take care of synchronizing and blocking issues specific to each particular OS.

The generic feature model is represented in the following block diagram. In this model the generic feature is described to OSPM through AML code. This description takes the form of an object that sits in the ACPI Namespace associated with the hardware to which it is adding value.

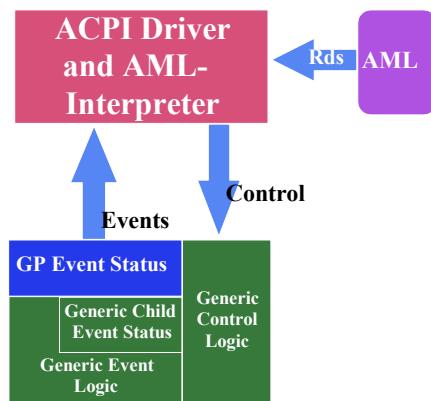

**Figure 4-1 Generic Hardware Feature Model**

As an example of a generic hardware control feature, a platform might be designed such that the IDE HDD's D3 state has value-added hardware to remove power from the drive. The IDE drive would then have a reference to the AML **PowerResource** object (which controls the value added power plane) in its namespace, and associated with that object would be control methods that OSPM invokes to control the D3 state of the drive:

- **\_PS0**: A control method to sequence the IDE drive to the D0 state.
- **\_PS3**: A control method to sequence the IDE drive to the D3 state.
- **\_PSC**: A control method that returns the status of the IDE drive (on or off).

The control methods under this object provide an abstraction layer between OSPM and the hardware. OSPM understands how to control power planes (turn them on or off or to get their status) through its defined **PowerResource** object, while the hardware has platform-specific AML code (contained in the appropriate control methods) to perform the desired function. In this example, the platform would describe its hardware to the ACPI OS by writing and placing the AML code to turn the hardware off within the **\_PS3** control method. This enables the following sequence:

When OSPM decides to place the IDE drive in the D3 state, it calls the IDE driver and tells it to place the drive into the D3 state (at which point the driver saves the device's context).

When the IDE driver returns control, OSPM places the drive in the D3 state.

OSPM finds the object associated with the HDD and then finds within that object any AML code associated with the D3 state.

OSPM executes the appropriate **\_PS3** control method to control the value-added “generic” hardware to place the HDD into an even lower power state.

As an example of a generic event feature, a platform might have a docking capability. In this case, it will want to generate an event. Notice that all ACPI events generate an SCI, which can be mapped to any shareable system interrupt. In the case of docking, the event is generated when a docking has been detected or when the user requests to undock the system. This enables the following sequence:

OSPM responds to the SCI and calls the AML code event handler associated with that generic event. The ACPI table associates the hardware event with the AML code event handler.

The AML-code event handler collects the appropriate information and then executes an AML Notify command to indicate to OSPM that a particular bus needs re-enumeration.

The following sections describe the fixed and generic hardware feature set of ACPI. These sections enable a reader to understand the following:

- Which hardware registers are required or optional when an ACPI feature, concept or interface is required by a design guide for a platform class
- How to design fixed hardware features
- How to design generic hardware features
- The ACPI Event Model

## 4.4 Diagram Legends

The hardware section uses simplified logic diagrams to represent how certain aspects of the hardware are implemented. The following symbols are used in the logic diagrams to represent programming bits.

	Write-only control bit
	Enable, control or status bit
	Sticky status bit
	Query value

The half round symbol with an inverted “V” represents a write-only control bit. This bit has the behavior that it generates its control function when it is set. Reads to write-only bits are treated as ignore by software (the bit position is masked off and ignored).

The round symbol with an “X” represents a programming bit. As an enable or control bit, software setting or clearing this bit will result in the bit being read as set or clear (unless otherwise noted). As a status bit it directly represents the value of the signal.

The square symbol represents a sticky status bit. A sticky status bit is set by the level (not edge) of a hardware signal (active high or active low). The bit is only cleared by software writing a “1” to its bit position.

The rectangular symbol represents a query value from the embedded controller. This is the value the embedded controller returns to the system software upon a query command in response to an SCI event. The query value is associated with the event control method that is scheduled to execute upon an embedded controller event.

## 4.5 Register Bit Notation

Throughout this section there are logic diagrams that reference bits within registers. These diagrams use a notation that easily references the register name and bit position. The notation is as follows:

*Registername.Bit*

*Registername* contains the name of the register as it appears in this specification

*Bit* contains a zero-based decimal value of the bit position.

For example, the SLP\_EN bit resides in the PM1x\_CNT register bit 13 and would be represented in diagram notation as:

SLP\_EN  
PM1x\_CNT.13

## 4.6 The ACPI Hardware Model

The ACPI hardware model is defined to allow OSPM to sequence the platform between the various global system states (G0-G3) as illustrated in the following figure by manipulating the defined interfaces. When first powered on, the platform finds itself in the global system state G3 or “Mechanical Off.” This state is defined as one where power consumption is very close to zero—the power plug has been removed; however, the real-time clock device still runs off a battery. The G3 state is entered by any power failure, defined as accidental or user-initiated power loss.

The G3 state transitions into either the G0 working state or the Legacy state depending on what the platform supports. If the platform is an ACPI-only platform, then it allows a direct boot into the G0 working state by always returning the status bit SCI\_EN set (1) (for more information, see [Section 4.8.2.5](#), “Legacy/ACPI Select and the SCI Interrupt”). If the platform supports both legacy and ACPI operations (which is necessary for supporting a non-ACPI OS), then it would always boot into the Legacy state (illustrated by returning the SCI\_EN clear (0)). In either case, a transition out of the G3 state requires a total boot of OSPM.

The Legacy system state is the global state where a non-ACPI OS executes. This state can be entered from either the G3 “Mechanical Off,” the G2 “Soft Off,” or the G0 “Working” states only if the hardware supports both Legacy and ACPI modes. In the Legacy state, the ACPI event model is disabled (no SCIs are generated) and the hardware uses legacy power management and configuration mechanisms. While in the Legacy state, an ACPI-compliant OS can request a transition into the G0 working state by performing an ACPI mode request. OSPM performs this transition by writing the ACPI\_ENABLE value to the SMI\_CMD, which generates an event to the hardware to transition the platform into ACPI mode. When hardware has finished the transition, it sets the SCI\_EN bit and returns control back to OSPM. While in the G0 “working state,” OSPM can request a transition to Legacy mode by writing the ACPI\_DISABLE value to the SMI\_CMD register, which results in the hardware going into legacy mode and resetting the SCI\_EN bit LOW (for more information, see [Section 4.8.2.5](#), “Legacy/ACPI Select and the SCI Interrupt”).

The G0 “Working” state is the normal operating environment of an ACPI system. In this state different devices are dynamically transitioning between their respective power states (D0, D1, D2, D3hot, or D3) and processors are dynamically transitioning between their respective power states (C0, C1, C2 or C3). In this state, OSPM can make a policy decision to place the platform into the system G1 “sleeping” state. The platform can only enter a single sleeping state at a time (referred to as the global G1 state); however, the hardware can provide up to four system sleeping states that have different power and exit latencies

represented by the S1, S2, S3, or S4 states. When OSPM decides to enter a sleeping state it picks the most appropriate sleeping state supported by the hardware (OS policy examines what devices have enabled wake events and what sleeping states these support). OSPM initiates the sleeping transition by enabling the appropriate wake events and then programming the SLP\_TYPx field with the desired sleeping state and then setting the SLP\_ENx bit. The system will then enter a sleeping state; when one of the enabled wake events occurs, it will transition the system back to the working state (for more information, see [Section 16](#), “Waking and Sleeping”).

Another global state transition option while in the G0 “working” state is to enter the G2 “soft off” or the G3 “mechanical off” state. These transitions represent a controlled transition that allows OSPM to bring the system down in an orderly fashion (unloading applications, closing files, and so on). The policy for these types of transitions can be associated with the ACPI power button, which when pressed generates an event to the power button driver. When OSPM is finished preparing the operating environment for a power loss, it will either generate a pop-up message to indicate to the user to remove power, in order to enter the G3 “Mechanical Off” state, or it will initiate a G2 “soft-off” transition by writing the value of the S5 “soft off” system state to the SLP\_TYPx register and setting the SLP\_EN bit.

The G1 sleeping state is represented by four possible sleeping states that the hardware can support. Each sleeping state has different power and wake latency characteristics. The sleeping state differs from the working state in that the user’s operating environment is frozen in a low-power state until awakened by an enabled wake event. No work is performed in this state, that is, the processors are not executing instructions. Each system sleeping state has requirements about who is responsible for system context and wake sequences (for more information, see [Section 16](#), Waking and Sleeping”).

The G2 “soft off” state is an OS initiated system shutdown. This state is initiated similar to the sleeping state transition (SLP\_TYPx is set to the S5 value and setting the SLP\_EN bit initiates the sequence). Exiting the G2 soft-off state requires rebooting the system. In this case, an ACPI-only system will re-enter the G0 state directly (hardware returns the SCI\_EN bit set), while an ACPI/Legacy system transitions to the Legacy state (SCI\_EN bit is clear).


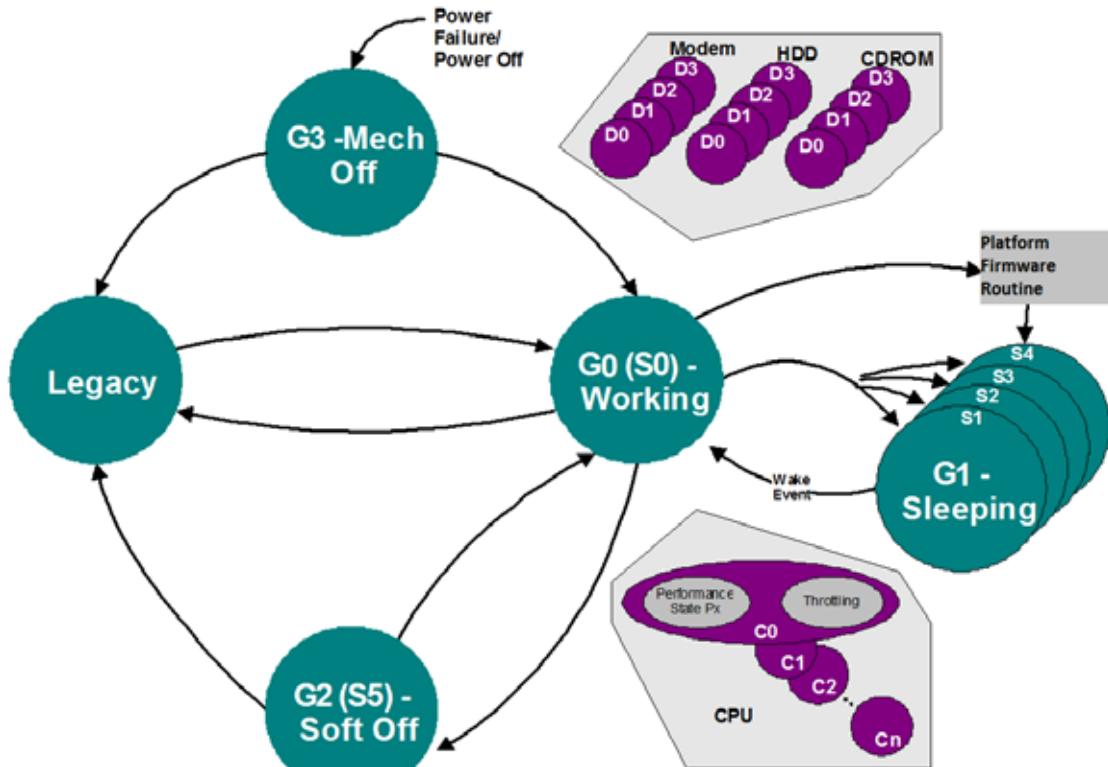


Figure 4-2 Global States and Their Transitions

The ACPI architecture defines mechanisms for hardware to generate events and control logic to implement this behavior model. Events are used to notify OSPM that some action is needed, and control logic is used by OSPM to cause some state transition. ACPI-defined events are “hardware” or “interrupt” events. A hardware event is one that causes the hardware to unconditionally perform some operation. For example, any wake event will sequence the system from a sleeping state (S1, S2, S3, and S4 in the global G1 state) to the G0 working state (see [Figure 16-74](#)).

An interrupt event causes the execution of an event handler (AML code or an ACPI-aware driver), which allows the software to make a policy decision based on the event. For ACPI fixed-feature events, OSPM or an ACPI-aware driver acts as the event handler. For generic logic events OSPM will schedule the execution of an OEM-supplied AML control method associated with the event.

For legacy systems, an event normally generates an OS-transparent interrupt, such as a System Management Interrupt, or SMI. For ACPI systems the interrupt events need to generate an OS-visible interrupt that is shareable; edge-style interrupts will not work. Hardware platforms that want to support both legacy operating systems and ACPI systems support a way of re-mapping the interrupt events between SMIs and SCIs when switching between ACPI and legacy models. This is illustrated in the following block diagram.

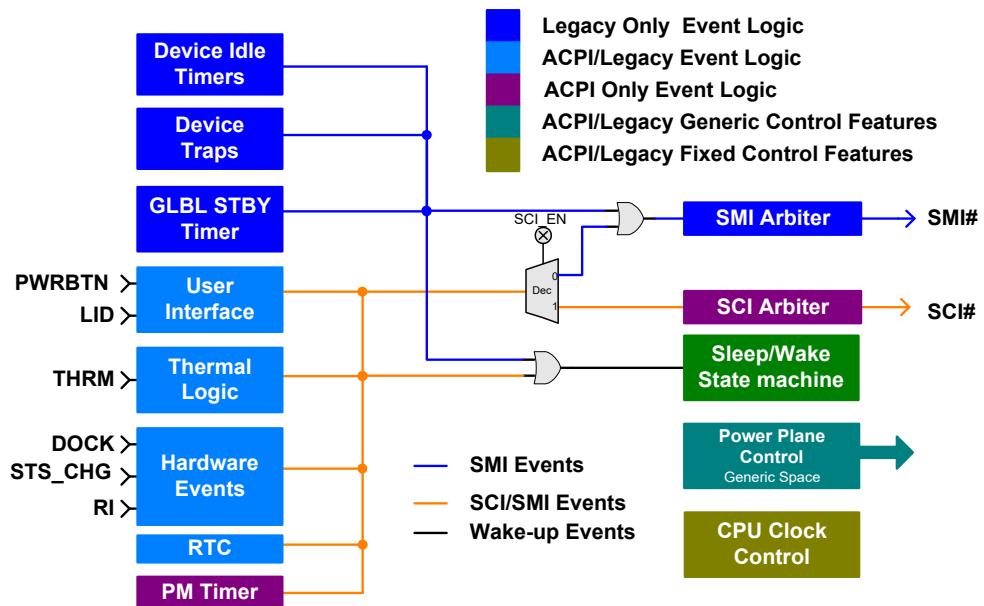

**Figure 4-3 Example Event Structure for a Legacy/ACPI Compatible Event Model**

This example logic illustrates the event model for a sample platform that supports both legacy and ACPI event models. This example platform supports a number of external events that are power-related (power button, LID open/close, thermal, ring indicate) or Plug and Play-related (dock, status change). The logic represents the three different types of events:

### OS Transparent Events

These events represent OEM-specific functions that have no OS support and use software that can be operated in an OS-transparent fashion (that is, SMIs).

### Interrupt Events

These events represent features supported by ACPI-compatible operating systems, but are not supported by legacy operating systems. When a legacy OS is loaded, these events are mapped to the transparent interrupt (SMI# in this example), and when in ACPI mode they are mapped to an OS-visible shareable interrupt (SCI#). This logic is represented by routing the event logic through the decoder that routes the events to the SMI# arbiter when the SCI\_EN bit is cleared, or to the SCI# arbiter when the SCI\_EN bit is set.

### Hardware events

These events are used to trigger the hardware to initiate some hardware sequence such as waking, resetting, or putting the system to sleep unconditionally.

In this example, the legacy power management event logic is used to determine device/system activity or idleness based on device idle timers, device traps, and the global standby timer. Legacy power management models use the idle timers to determine when a device should be placed in a low-power state because it is idle—that is, the device has not been accessed for the programmed amount of time. The device traps are used to indicate when a device in a low-power state is being accessed by OSPM. The

global standby timer is used to determine when the system should be allowed to go into a sleeping state because it is idle—that is, the user interface has not been used for the programmed amount of time.

These legacy idle timers, trap monitors, and global standby timer are not used by OSPM in the ACPI mode. This work is handled by different software structures in an ACPI-compatible OS. For example, the driver model of an ACPI-compatible OS is responsible for placing its device into a low-power state (D1, D2, D3hot, or D3) and transitioning it back to the On state (D0) when needed. And OSPM is responsible for determining when the system is idle by profiling the system (using the PM Timer) and other knowledge it gains through its operating structure environment (which will vary from OS to OS). When the system is placed into the ACPI mode, these events no longer generate SMIs, as OSPM handles this function. These events are disabled through some OEM-proprietary method.

On the other hand, many of the hardware events are shared between the ACPI and legacy models (docking, the power button, and so on) and this type of interrupt event changes to an SCI event when enabled for ACPI. The ACPI OS will generate a request to the platform runtime firmware to enter into the ACPI mode. The firmware sets the SCI\_EN bit to indicate that the system has successfully entered into the ACPI mode, so this is a convenient mechanism to map the desired interrupt (SMI or SCI) for these events (as shown in Figure 4-3).

The ACPI architecture specifies some dedicated hardware not found in the legacy hardware model: the power management timer (PM Timer). This is a free running timer that the ACPI OS uses to profile system activity. The frequency of this timer is explicitly defined in this specification and must be implemented as described.

Although the ACPI architecture reuses most legacy hardware as is, it does place restrictions on where and how the programming model is generated. If used, all fixed hardware features are implemented as described in this specification so that OSPM can directly access the fixed hardware feature registers.

Generic hardware features are manipulated by ACPI control methods residing in the ACPI Namespace. These interfaces can be very flexible; however, their use is limited by the defined ACPI control methods (for more information, see [Section 9](#), “ACPI Devices and Device Specific Objects”). Generic hardware usually controls power planes, buffer isolation, and device reset resources. Additionally, “child” interrupt status bits can be accessed via generic hardware interfaces; however, they have a “parent” interrupt status bit in the GP\_STS register. ACPI defines eight address spaces that may be accessed by generic hardware implementations. These include:

- System I/O space
- System memory space
- PCI configuration space
- Embedded controller space
- System Management Bus (SMBus) space
- CMOS
- PCI BAR Target
- IPMI space
- Platform Communication Channel

Generic hardware power management features can be implemented accessing spare I/O ports residing in any of these address spaces. The ACPI specification defines an optional embedded controller and SMBus interfaces needed to communicate with these associated address spaces.

## 4.6.1 Hardware Reserved Bits

ACPI hardware registers are designed such that reserved bits always return zero, and data writes to them have no side affects. OSPM implementations must write zeros to reserved bits in enable and status registers and preserve bits in control registers, and they will treat these bits as ignored.

## 4.6.2 Hardware Ignored Bits

ACPI hardware registers are designed such that ignored bits are undefined and are ignored by software. Hardware-ignored bits can return zero or one. When software reads a register with ignored bits, it masks off ignored bits prior to operating on the result. When software writes to a register with ignored bit fields, it preserves the ignored bit fields.

## 4.6.3 Hardware Write-Only Bits

ACPI hardware defines a number of write-only control bits. These bits are activated by software writing a 1 to their bit position. Reads to write-only bit positions generate undefined results. Upon reads to registers with write-only bits, software masks out all write-only bits.

## 4.6.4 Cross Device Dependencies

Cross Device Dependency is a condition in which an operation to a device interferes with the operation of other unrelated devices, or allows other unrelated devices to interfere with its behavior. This condition is not supportable and can cause platform failures. ACPI provides no support for cross device dependencies and suggests that devices be designed to not exhibit this behavior. The following two examples describe cross device dependencies:

### 4.6.4.1 Example 1: Related Device Interference

This example illustrates a cross device dependency where a device interferes with the proper operation of other unrelated devices. Device A has a dependency that when it is being configured it blocks all accesses that would normally be targeted for Device B. Thus, the device driver for Device B cannot access Device B while Device A is being configured; therefore, it would need to synchronize access with the driver for Device A. High performance, multithreaded operating systems cannot perform this kind of synchronization without seriously impacting performance.

To further illustrate the point, assume that Device A is a serial port and Device B is a hard drive controller. If these devices demonstrate this behavior, then when a software driver configures the serial port, accesses to the hard drive need to block. This can only be done if the hard disk driver synchronizes access to the disk controller with the serial driver. Without this synchronization, hard drive data will be lost when the serial port is being configured.

### 4.6.4.2 Example 2: Unrelated Device Interference

This example illustrates a cross-device dependency where a device demonstrates a behavior that allows other unrelated devices to interfere with its proper operation. Device A exhibits a programming behavior that requires atomic back-to-back write accesses to successfully write to its registers; if any other platform access is able to break between the back-to-back accesses, then the write to Device A is unsuccessful. If the Device A driver is unable to generate atomic back-to-back accesses to its device, then it relies on software to synchronize accesses to its device with every other driver in the system; then a device cross dependency is created and the platform is prone to Device A failure.

## 4.7 ACPI Hardware Features

This section describes the different hardware features defined by the ACPI interface. These features are categorized as the following:

- Fixed Hardware Features
- Generic Hardware Features

Fixed hardware features reside in a number of the ACPI-defined address spaces at the locations described by the ACPI programming model. Generic hardware features reside in one of four address spaces (system I/O, system memory, PCI configuration, embedded controller, or serial device I/O space) and are described by the ACPI Namespace through the declaration of AML control methods.

Fixed hardware features have exact definitions for their implementation. Although many fixed hardware features are optional, if implemented they must be implemented as described since OSPM manipulates the registers of fixed hardware devices and expects the defined behavior. Functional fixed hardware provides functional equivalents of the fixed hardware feature interfaces as described in [Section 4.3](#), “Functional Fixed Hardware.”

Generic hardware feature implementation is flexible. This logic is controlled by OEM-supplied AML code (for more information, see [Section 5](#), “ACPI Software Programming Model”), which can be written to support a wide variety of hardware. Also, ACPI provides specialized control methods that provide capabilities for specialized devices. For example, the Notify command can be used to notify OSPM from a generic hardware event handler (control method) that a docking or thermal event has taken place. A good understanding of this section and [Section 5](#) of this specification will give designers a good understanding of how to design hardware to take full advantage of an ACPI-compatible OS.

Notice that the generic features are listed for illustration only, the ACPI specification can support many types of hardware not listed.

**Table 4-5 Feature/Programming Model Summary**

Feature Name	Description	Programming Model
Power Management Timer	24-bit or 32-bit free running timer.	Fixed Hardware Feature Control Logic
Power Button	User pushes button to switch the system between the working and sleeping/soft-off states.	Fixed Hardware Event and Control Logic or Generic Hardware Event and Logic
Sleep Button	User pushes button to switch the system between the working and sleeping/soft-off states.	Fixed Hardware Event and Control Logic or Generic Hardware Event and Logic
Power Button Override	User sequence (press the power button for 4 seconds) to turn off a hung system.	
Real Time Clock Alarm	Programmed time to wake the system.	Optional Fixed Hardware Event <sup>a</sup>
Sleep/Wake Control Logic	Logic used to transition the system between the sleeping and working states.	Fixed Hardware Control and Event Logic

Feature Name	Description	Programming Model
Embedded Controller Interface	ACPI Embedded Controller protocol and interface, as described in <a href="#">Section 12</a> , “ACPI Embedded Controller Interface Specification.”	Generic Hardware Event Logic, must reside in the general-purpose register block
Legacy/ACPI Select	Status bit that indicates the system is using the legacy or ACPI power management model (SCI_EN).	Fixed Hardware Control Logic
Lid switch	Button used to indicate whether the system’s lid is open or closed (mobile systems only).	Generic Hardware Event Feature
C1 Power State	Processor instruction to place the processor into a low-power state.	Processor ISA
C2 Power Control	Logic to place the processor into a C2 power state.	Fixed Hardware Control Logic
C3 Power Control	Logic to place the processor into a C3 power state.	Fixed Hardware Control Logic
Thermal Control	Logic to generate thermal events at specified trip points.	Generic Hardware Event and Control Logic (See description of thermal logic in <a href="#">Section 3.10</a> , “Thermal Management.”)
Device Power Management	Control logic for switching between different device power states.	Generic Hardware control logic
AC Adapter	Logic to detect the insertion and removal of the AC adapter.	Generic Hardware event logic
Docking/device insertion and removal	Logic to detect device insertion and removal events.	Generic Hardware event logic

- a. RTC wakeup alarm is required, the fixed hardware feature status bit is optional.

## 4.8 ACPI Register Model

ACPI hardware resides in one of six address spaces:


- System I/O
- System memory
- PCI configuration
- SMBus
- Embedded controller
- Functional Fixed Hardware

Different implementations will result in different address spaces being used for different functions. The ACPI specification consists of fixed hardware registers and generic hardware registers. Fixed hardware registers are required to implement ACPI-defined interfaces. The generic hardware registers are needed for any events generated by value-added hardware.

ACPI defines register blocks. An ACPI-compatible system provides an ACPI table (the FADT, built in memory at boot-up) that contains a list of pointers to the different fixed hardware register blocks used by OSPM. The bits within these registers have attributes defined for the given register block. The types of registers that ACPI defines are:

- Status/Enable Registers (for events)
- Control Registers

If a register block is of the status/enable type, then it will contain a register with status bits, and a corresponding register with enable bits. The status and enable bits have an exact implementation definition that needs to be followed (unless otherwise noted), which is illustrated by the following diagram:

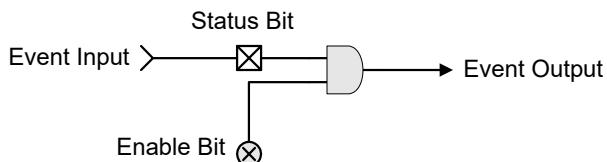

**Figure 4-4 Block Diagram of a Status/Enable Cell**


Notice that the status bit, which hardware sets by the Event Input being set in this example, can only be cleared by software writing a 1 to its bit position. Also, the enable bit has no effect on the setting or resetting of the status bit; it only determines if the SET status bit will generate an "Event Output," which generates an SCI when set if its enable bit is set.

ACPI also defines register groupings. A register grouping consists of two register blocks, with two pointers to two different blocks of registers, where each bit location within a register grouping is fixed and cannot be changed. The bits within a register grouping, which have fixed bit positions, can be split between the two register blocks. This allows the bits within a register grouping to reside in either or both register blocks, facilitating the ability to map bits within several different chips to the same register thus providing the programming model with a single register grouping bit structure.

OSPM treats a register grouping as a single register; but located in multiple places. To read a register grouping, OSPM will read the "A" register block, followed by the "B" register block, and then will logically "OR" the two results together (the SLP\_TYP field is an exception to this rule). Reserved bits, or unused

bits within a register block always return zero for reads and have no side effects for writes (which is a requirement).

The SLP\_TYPx field can be different for each register grouping. The respective sleeping object `\_Sx` contains a SLP\_TYPa and a SLP\_TYPb field. That is, the object returns a package with two integer values of 0-7 in it. OSPM will always write the SLP\_TYPa value to the “A” register block followed by the SLP\_TYPb value within the field to the “B” register block. All other bit locations will be written with the same value. Also, OSPM does not read the SLP\_TYPx value but throws it away.

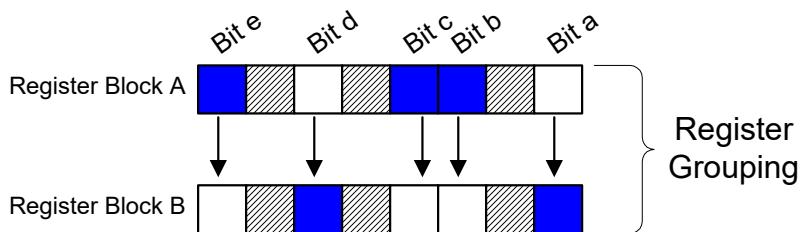


**Figure 4-5 Example Fixed Hardware Feature Register Grouping**

As an example, the above diagram represents a register grouping consisting of register block A and register block b. Bits “a” and “d” are implemented in register block B and register block A returns a zero for these bit positions. Bits “b”, “c” and “e” are implemented in register block A and register block B returns a zero for these bit positions. All reserved or ignored bits return their defined ACPI values.

When accessing this register grouping, OSPM must read register block a, followed by reading register block b. OSPM then does a logical OR of the two registers and then operates on the results.

When writing to this register grouping, OSPM will write the desired value to register group A followed by writing the same value to register group B.

ACPI defines the following fixed hardware register blocks. Each register block gets a separate pointer from the FADT. These addresses are set by the OEM as static resources, so they are never changed—OSPM cannot re-map ACPI resources. The following register blocks are defined:

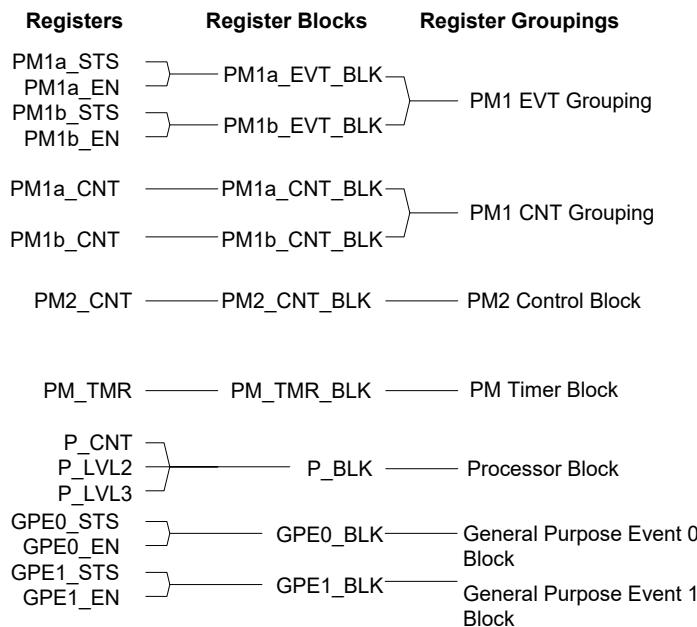

**Figure 4-6 Register Blocks versus Register Groupings**

The PM1 EVT grouping consists of the PM1a\_EVT and PM1b\_EVT register blocks, which contain the fixed hardware feature event bits. Each event register block (if implemented) contains two registers: a status register and an enable register. Each register grouping has a defined bit position that cannot be changed; however, the bit can be implemented in either register block (A or B). The A and B register blocks for the events allow chipsets to vary the partitioning of events into two or more chips. For read operations, OSPM will generate a read to the associated A and B registers, OR the two values together, and then operate on this result. For write operations, OSPM will write the value to the associated register in both register blocks. Therefore, there are two rules to follow when implementing event registers:

- Reserved or unimplemented bits always return zero (control or enable).
- Writes to reserved or unimplemented bits have no affect.

The PM1 CNT grouping contains the fixed hardware feature control bits and consists of the PM1a\_CNT\_BLK and PM1b\_CNT\_BLK register blocks. Each register block is associated with a single control register. Each register grouping has a defined bit position that cannot be changed; however, the bit can be implemented in either register block (A or B). There are two rules to follow when implementing CNT registers:

- Reserved or unimplemented bits always return zero (control or enable).
- Writes to reserved or unimplemented bits have no affect.

The PM2\_CNT\_BLK register block currently contains a single bit for the arbiter disable function. The general-purpose event register contains the event programming model for generic features. All generic events, just as fixed events, generate SCIs. Generic event status bits can reside anywhere; however, the top-level generic event resides in one of the general-purpose register blocks. Any generic feature event status not in the general-purpose register space is considered a child or sibling status bit, whose parent status bit is in the general-purpose event register space. Notice that it is possible to have N levels of general-purpose events prior to hitting the GPE event status.

General-purpose event registers are described by two register blocks: The GPE0\_BLK or the GPE1\_BLK. Each register block is pointed to separately from within the FADT. Each register block is further broken into two registers: GPEx\_STS and GPEx\_EN. The status and enable registers in the general-purpose event registers follow the event model for the fixed hardware event registers.

#### 4.8.1 ACPI Register Summary

The following tables summarize the ACPI registers:

**Table 4-6 PM1 Event Registers**

Register	Size (Bytes)	Address (relative to register block)
PM1a_STS	PM1_EVT_LEN/2	<PM1a_EVT_BLK>
PM1a_EN	PM1_EVT_LEN/2	<PM1a_EVT_BLK>+PM1_EVT_LEN/2
PM1b_STS	PM1_EVT_LEN/2	<PM1b_EVT_BLK>
PM1b_EN	PM1_EVT_LEN/2	<PM1b_EVT_BLK>+PM1_EVT_LEN/2

**Table 4-7 PM1 Control Registers**

Register	Size (Bytes)	Address (relative to register block)
PM1_CNTa	PM1_CNT_LEN	<PM1a_CNT_BLK>
PM1_CNTb	PM1_CNT_LEN	<PM1b_CNT_BLK>

**Table 4-8 PM2 Control Register**

Register	Size (Bytes)	Address (relative to register block)
PM2_CNT	PM2_CNT_LEN	<PM2_CNT_BLK>

**Table 4-9 PM Timer Register**

Register	Size (Bytes)	Address (relative to register block)
PM_TMR	PM_TMR_LEN	<PM_TMR_BLK>

**Table 4-10 Processor Control Registers**

Register	Size (Bytes)	Address (relative to register block)
P_CNT	4	Either <P_BLK> or specified by the PTC object (See <a href="#">Section 8.4.5.1</a> , “PTC [Processor Throttling Control].”)
P_LVL2	1	<P_BLK>+4h
P_LVL3	1	<P_BLK>+5h

**Table 4-11 General-Purpose Event Registers**

Register	Size (Bytes)	Address (relative to register block)
GPE0_STS	GPE0_LEN/2	<GPE0_BLK>
GPE0_EN	GPE0_LEN/2	<GPE0_BLK>+GPE0_LEN/2
GPE1_STS	GPE1_LEN/2	<GPE1_BLK>
GPE1_EN	GPE1_LEN/2	<GPE1_BLK>+GPE1_LEN/2

#### 4.8.1.1 PM1 Event Registers

The PM1 event register grouping contains two register blocks: the PM1a\_EVT\_BLK is a required register block when the following ACPI interface categories are required by a class specific platform design guide:

- Power management timer control/status
- Processor power state control/status
- Global Lock related interfaces
- Power or Sleep button (fixed register interfaces)
- System power state controls (sleeping/wake control)

The PM1b\_EVT\_BLK is an optional register block. Each register block has a unique 32-bit pointer in the Fixed ACPI Table (FADT) to allow the PM1 event bits to be partitioned between two chips. If the PM1b\_EVT\_BLK is not supported, its pointer contains a value of zero in the FADT.

Each register block in the PM1 event grouping contains two registers that are required to be the same size: the PM1x\_STS and PM1x\_EN (where x can be “a” or “b”). The length of the registers is variable and is described by the PM1\_EVT\_LEN field in the FADT, which indicates the total length of the register block in bytes. Hence if a length of “4” is given, this indicates that each register contains two bytes of I/O space. The PM1 event register block has a minimum size of 4 bytes.

#### 4.8.1.2 PM1 Control Registers

The PM1 control register grouping contains two register blocks: the PM1a\_CNT\_BLK is a required register block when the following ACPI interface categories are required by a class specific platform design guide:

- SCI/SMI routing control/status for power management and general-purpose events
- Processor power state control/status
- Global Lock related interfaces
- System power state controls (sleeping/wake control)

The PM1b\_CNT\_BLK is an optional register block. Each register block has a unique 32-bit pointer in the Fixed ACPI Table (FADT) to allow the PM1 event bits to be partitioned between two chips. If the PM1b\_CNT\_BLK is not supported, its pointer contains a value of zero in the FADT.

Each register block in the PM1 control grouping contains a single register: the PM1x\_CNT. The length of the register is variable and is described by the PM1\_CNT\_LEN field in the FADT, which indicates the total length of the register block in bytes. The PM1 control register block must have a minimum size of 2 bytes.

#### 4.8.1.3 PM2 Control Register

The PM2 control register is contained in the PM2\_CNT\_BLK register block. The FADT contains a length variable for this register block (PM2\_CNT\_LEN) that is equal to the size in bytes of the PM2\_CNT register

(the only register in this register block). This register block is optional, if not supported its block pointer and length contain a value of zero.

#### 4.8.1.4 PM Timer Register

The PM timer register is contained in the PM\_TMR\_BLK register block. It is an optional register block that must be implemented when the power management timer control/status ACPI interface category is required by a class specific platform design guide.

If defined, this register block contains the register that returns the running value of the power management timer. The FADT also contains a length variable for this register block (PM\_TMR\_LEN) that is equal to the size in bytes of the PM\_TMR register (the only register in this register block).

#### 4.8.1.5 Processor Control Block (P\_BLK)

There is an optional processor control register block for each processor in the system. As this is a homogeneous feature, all processors must have the same level of support. The ACPI OS will revert to the lowest common denominator of processor control block support. The processor control block contains the processor control register (P\_CNT-a 32-bit performance control configuration register), and the P\_LVL2 and P\_LVL3 CPU sleep state control registers. The 32-bit P\_CNT register controls the behavior of the processor clock logic for that processor, the P\_LVL2 register is used to place the CPU into the C2 state, and the P\_LVL3 register is used to place the processor into the C3 state.

#### 4.8.1.6 General-Purpose Event Registers

The general-purpose event registers contain the root level events for all generic features. To facilitate the flexibility of partitioning the root events, ACPI provides for two different general-purpose event blocks: GPE0\_BLK and GPE1\_BLK. These are separate register blocks and are not a register grouping, because there is no need to maintain an orthogonal bit arrangement. Also, each register block contains its own length variable in the FADT, where GPE0\_LEN and GPE1\_LEN represent the length in bytes of each register block.

Each register block contains two registers of equal length: GPEx\_STS and GPEx\_EN (where x is 0 or 1). The length of the GPE0\_STS and GPE0\_EN registers is equal to half the GPE0\_LEN. The length of the GPE1\_STS and GPE1\_EN registers is equal to half the GPE1\_LEN. If a generic register block is not supported then its respective block pointer and block length values in the FADT table contain zeros. The GPE0\_LEN and GPE1\_LEN do not need to be the same size.


### 4.8.2 Fixed Hardware Features

This section describes the fixed hardware features defined by ACPI.

#### 4.8.2.1 Power Management Timer

The ACPI specification defines an optional power management timer that provides an accurate time value that can be used by system software to measure and profile system idleness (along with other tasks). The power management timer provides an accurate time function while the system is in the working (G0) state. To allow software to extend the number of bits in the timer, the power management timer generates an interrupt when the last bit of the timer changes (from 0 to 1 or 1 to 0). ACPI supports either a 24-bit or 32-bit power management timer. The PM Timer is accessed directly by OSPM, and its programming model is contained in fixed register space. The programming model can be partitioned in up to three different register blocks. The event bits are contained in the PM1\_EVT register grouping,

which has two register blocks, and the timer value can be accessed through the PM\_TMR\_BLK register block. A block diagram of the power management timer is illustrated in the following figure:

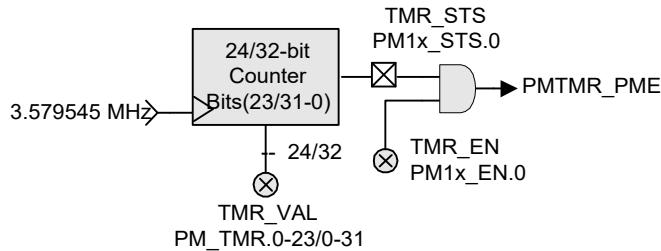

**Figure 4-7 Power Management Timer**

The power management timer is a 24-bit or 32-bit fixed rate free running count-up timer that runs off a 3.579545 MHz clock. The ACPI OS checks the FADT to determine whether the PM Timer is a 32-bit or 24-bit timer. The programming model for the PM Timer consists of event logic, and a read port to the counter value. The event logic consists of an event status and enable bit. The status bit is set any time the last bit of the timer (bit 23 or bit 31) goes from set to clear or clear to set. If the TMR\_EN bit is set, then the setting of the TMR\_STS will generate an ACPI event in the PM1\_EVT register grouping (referred to as PMTMR\_PME in the diagram). The event logic is only used to emulate a larger timer.

OSPM uses the read-only TMR\_VAL field (in the PM TMR register grouping) to read the current value of the timer. OSPM never assumes an initial value of the TMR\_VAL field; instead, it reads an initial TMR\_VAL upon loading OSPM and assumes that the timer is counting. It is allowable to stop the Timer when the system transitions out of the working (G0/S0) state. The only timer reset requirement is that the timer functions while in the working state.

The PM Timer's programming model is implemented as a fixed hardware feature to increase the accuracy of reading the timer.

#### 4.8.2.2 Console Buttons

ACPI defines user-initiated events to request OSPM to transition the platform between the G0 working state and the G1 sleeping, G2 soft off and G3 mechanical off states. ACPI also defines a recommended mechanism to unconditionally transition the platform from a hung G0 working state to the G2 soft-off state.

ACPI operating systems use power button events to determine when the user is present. As such, these ACPI events are associated with buttons in the ACPI specification.

The ACPI specification supports two button models:

- A single-button model that generates an event for both sleeping and entering the soft-off state. The function of the button can be configured using OSPM UI.
- A dual-button model where the power button generates a soft-off transition request and a sleep button generates a sleep transition request. The type of button implies the function of the button.

Control of these button events is either through the fixed hardware programming model or the generic hardware programming model (control method based). The fixed hardware programming model has the advantage that OSPM can access the button at any time, including when the system is crashed. In a

crashed system with a fixed hardware power button, OSPM can make a “best” effort to determine whether the power button has been pressed to transition the system to the soft-off state, because it doesn’t require the AML interpreter to access the event bits.

#### 4.8.2.2.1 Power Button

The power button logic can be used in one of two models: single button or dual button. In the single-button model, the user button acts as both a power button for transitioning the system between the G0 and G2 states and a sleep button for transitioning the system between the G0 and G1 states. The action of the user pressing the button is determined by software policy or user settings. In the dual-button model, there are separate buttons for sleeping and power control. Although the buttons still generate events that cause software to take an action, the function of the button is now dedicated: the sleep button generates a sleep request to OSPM and the power button generates a wake request.


Support for a power button is indicated by a combination of the PWR\_BUTTON flag and the power button device object, as shown in the following:

**Table 4-12 Power Button Support**

Indicated Support	PWR_BUTTON Flag	Power Button Device Object
Fixed hardware power button	Clear	Absent
Control method power button	Set	Present

The power button can also have an additional capability to unconditionally transition the system from a hung working state to the G2 soft-off state. In the case where OSPM event handler is no longer able to respond to power button events, the power button override feature provides a back-up mechanism to unconditionally transition the system to the soft-off state. This feature can be used when the platform doesn’t have a mechanical off button, which can also provide this function. ACPI defines that holding the power button active for four seconds or longer will generate a power button override event.

##### 4.8.2.2.1.1 Fixed Power Button

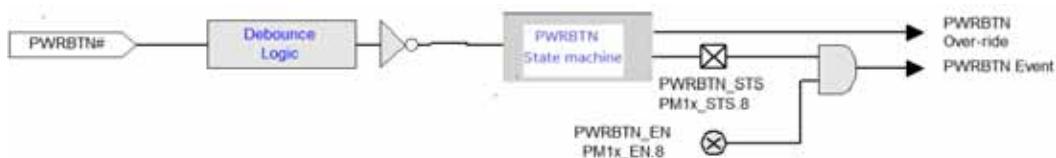

**Figure 4-8 Fixed Power Button Logic**

The fixed hardware power button has its event programming model in the PM1x\_EVT\_BLK. This logic consists of a single enable bit and sticky status bit. When the user presses the power button, the power button status bit (PWRBTN\_STS) is unconditionally set. If the power button enable bit (PWRBTN\_EN) is set and the power button status bit is set (PWRBTN\_STS) due to a button press while the system is in the G0 state, then an SCI is generated. OSPM responds to the event by clearing the PWRBTN\_STS bit. The power button logic provides debounce logic that sets the PWRBTN\_STS bit on the button press “edge.”

While the system is in the G1 or G2 global states (S1, S2, S3, S4 or S5 states), any further power button press after the button press that transitioned the system into the sleeping state unconditionally sets the

power button status bit and wakes the system, regardless of the value of the power button enable bit. OSPM responds by clearing the power button status bit and waking the system.

#### 4.8.2.2.1.2 Control Method Power Button

The power button programming model can also use the generic hardware programming model. This allows the power button to reside in any of the generic hardware address spaces (for example, the embedded controller) instead of fixed space. If the power button is implemented using generic hardware, then the OEM needs to define the power button as a device with an \_HID object value of “PNPOCOC,” which then identifies this device as the power button to OSPM. The AML event handler then generates a Notify command to notify OSPM that a power button event was generated. While the system is in the working state, a power button press is a user request to transition the system into either the sleeping (G1) or soft-off state (G2). In these cases, the power button event handler issues the Notify command with the device specific code of 0x80. This indicates to OSPM to pass control to the power button driver (PNPOCOC) with the knowledge that a transition out of the G0 state is being requested. Upon waking from a G1 sleeping state, the AML event handler generates a notify command with the code of 0x2 to indicate it was responsible for waking the system.

The power button device needs to be declared as a device within the ACPI Namespace for the platform and only requires an \_HID. An example definition follows.

This example ASL code performs the following:

- Creates a device named “PWRB” and associates the Plug and Play identifier (through the \_HID object) of “PNPOCOC.”
- The Plug and Play identifier associates this device object with the power button driver.
- Creates an operational region for the control method power button’s programming model: System I/O space at 0x200.
- Fields that are not accessed are written as zeros. These status bits clear upon writing a 1 to their bit position, therefore preserved would fail in this case.
- Creates a field within the operational region for the power button status bit (called PBP). In this case the power button status bit is a child of the general-purpose event status bit 0. When this bit is set, it is the responsibility of the ASL-code to clear it (OSPM clears the general-purpose status bits). The address of the status bit is 0x200.0 (bit 0 at address 0x200).
- Creates an additional status bit called PBW for the power button wake event. This is the next bit and its physical address would be 0x200.1 (bit 1 at address 0x200).
- Generates an event handler for the power button that is connected to bit 0 of the general-purpose event status register 0. The event handler does the following:
  - Clears the power button status bit in hardware (writes a one to it).
  - Notifies OSPM of the event by calling the Notify command passing the power button object and the device specific event indicator 0x80.

```
// Define a control method power button
Device(\_SB.PWRB){
    Name(_HID, EISAID("PNPOCOC"))
    Name(_PRW, Package(){0, 0x4})

    OperationRegion(\PH0, SystemI0, 0x200, 0x1)
    Field(\PH0, ByteAcc, NoLock, WriteAsZeros){
        PBP, // sleep/off request
    }
}
```

```

        PBW, 1           // wakeup request
    }
} // end of power button device object

Scope(\_GPE){
    Method(_L00){
        If(\PBP){
            Store(One, \PBP)      // clear power button status
            Notify(\_SB.PWRB, 0x80) // Notify OS of event
        }
        If(\PBW){
            Store(One, \PBW)
            Notify(\_SB.PWRB, 0x2)
        }
    } // end of _L00 handler
} // end of \_GPE scope

```

#### 4.8.2.2.1.3 Power Button Override

The ACPI specification also allows that if the user presses the power button for more than four seconds while the system is in the working state, a hardware event is generated and the system will transition to the soft-off state. This hardware event is called a power button override. In reaction to the power button override event, the hardware clears the power button status bit (PWRBTN\_STS).


#### 4.8.2.2.2 Sleep Button

When using the two button model, ACPI supports a second button that when pressed will request OSPM to transition the platform between the G0 working and G1 sleeping states. Support for a sleep button is indicated by a combination of the SLEEP\_BUTTON flag and the sleep button device object:

**Table 4-13 Sleep Button Support**

Indicated Support	SLEEP_BUTTON Flag	Sleep Button Device Object
No sleep button	Set	Absent
Fixed hardware sleep button	Clear	Absent
Control method sleep button	Set	Present

#### 4.8.2.2.2.1 Fixed Hardware Sleep Button

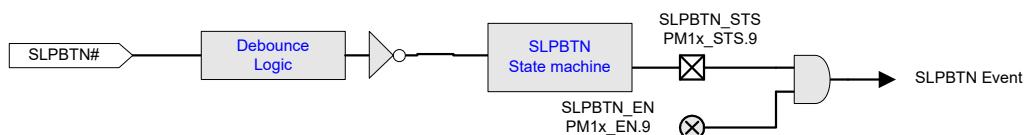

**Figure 4-9 Fixed Hardware Sleep Button Logic**

The fixed hardware sleep button has its event programming model in the PM1x\_EVT\_BLK. This logic consists of a single enable bit and sticky status bit. When the user presses the sleep button, the sleep button status bit (SLPBTN\_STS) is unconditionally set. Additionally, if the sleep button enable bit (SLPBTN\_EN) is set, and the sleep button status bit is set (SLPBTN\_STS, due to a button press) while the system is in the G0 state, then an SCI is generated. OSPM responds to the event by clearing the SLPBTN\_STS bit. The sleep button logic provides debounce logic that sets the SLPBTN\_STS bit on the button press “edge.”

While the system is sleeping (in either the S0, S1, S2, S3 or S4 states), any further sleep button press (after the button press that caused the system transition into the sleeping state) sets the sleep button status bit (SLPBTN\_STS) and wakes the system if the SLP\_EN bit is set. OSPM responds by clearing the sleep button status bit and waking the system.

#### 4.8.2.2.2 Control Method Sleep Button

The sleep button programming model can also use the generic hardware programming model. This allows the sleep button to reside in any of the generic hardware address spaces (for example, the embedded controller) instead of fixed space. If the sleep button is implemented via generic hardware, then the OEM needs to define the sleep button as a device with an \_HID object value of “PNPOCOE”, which then identifies this device as the sleep button to OSPM. The AML event handler then generates a Notify command to notify OSPM that a sleep button event was generated. While in the working state, a sleep button press is a user request to transition the system into the sleeping (G1) state. In these cases the sleep button event handler issues the Notify command with the device specific code of 0x80. This will indicate to OSPM to pass control to the sleep button driver (PNPOCOE) with the knowledge that the user is requesting a transition out of the G0 state. Upon waking-up from a G1 sleeping state, the AML event handler generates a Notify command with the code of 0x2 to indicate it was responsible for waking the system.

The sleep button device needs to be declared as a device within the ACPI Namespace for the platform and only requires an \_HID. An example definition is shown below.

The AML code below does the following:

- Creates a device named “SLPB” and associates the Plug and Play identifier (through the \_HID object) of “PNPOCOE.”
- The Plug and Play identifier associates this device object with the sleep button driver.
- Creates an operational region for the control method sleep button’s programming model: System I/O space at 0x201.
- Fields that are not accessed are written as “1s” (these status bits clear upon writing a “1” to their bit position, hence preserved would fail in this case).
- Creates a field within the operational region for the sleep button status bit (called PBP). In this case the sleep button status bit is a child of the general-purpose status bit 0. When this bit is set it is the responsibility of the AML code to clear it (OSPM clears the general-purpose status bits). The address of the status bit is 0x201.0 (bit 0 at address 0x201).
- Creates an additional status bit called PBW for the sleep button wake event. This is the next bit and its physical address would be 0x201.1 (bit 1 at address 0x201).
- Generates an event handler for the sleep button that is connected to bit 0 of the general-purpose status register 0. The event handler does the following:
  - Clears the sleep button status bit in hardware (writes a “1” to it).

- Notifies OSPM of the event by calling the Notify command passing the sleep button object and the device specific event indicator 0x80.

```
// Define a control method sleep button
Device(\_SB.SLPB){
    Name(_HID, EISAID("PNPOCOE"))
    Name(_PRW, Package(){0x01, 0x04})
    OperationRegion(\_Boo, SystemIO, 0x201, 0x1)
    Field(\_Boo, ByteAcc, NoLock, WriteAsZeros){
        SBP, 1, // sleep request
        SBW, 1, // wakeup request
        {} // end of field definition
    }
}
Scope(\_GPE){
    Method(_L01){
        If(\_SBP){
            Store(One, \_SBP) // clear sleep button status
            Notify(\_SB.SLPB, 0x80) // Notify OS of event
        }
        If(\_SBW){
            Store(One, \_SBW)
            Notify(\_SB.SLPB, 0x2)
        }
    } // end of _L01 handler
} // end of \_GPE scope
```

#### 4.8.2.3 Sleeping/Wake Control

The sleeping/wake logic consists of logic that will sequence the system into the defined low-power hardware sleeping state (S1-S4) or soft-off state (S5) and will wake the system back to the working state upon a wake event. Notice that the S4BIOS state is entered in a different manner (for more information, see [Section 16.1.4.2](#), “The S4BIOS Transition”).

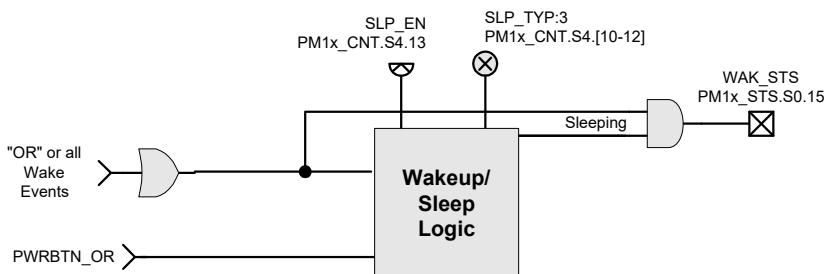


Figure 4-10 Sleeping/Wake Logic

The logic is controlled via two bit fields: Sleep Enable (SLP\_EN) and Sleep Type (SLP\_TYPx). The type of sleep or soft-off state desired is programmed into the SLP\_TYPx field and upon assertion of the SLP\_EN the hardware will sequence the system into the defined sleeping state. OSPM gets values for the SLP\_TYPx field from the \\_Sx objects defined in the static definition block. If the object is missing OSPM

assumes the hardware does not support that sleeping state. Prior to entering the desired sleeping state, OSPM will read the designated `\_Sx` object and place this value in the `SLP_TYP` field.

Additionally ACPI defines a fail-safe Off protocol called the “power button override,” which allows the user to initiate an Off sequence in the case where the system software is no longer able to recover the system (the system has hung). ACPI defines that this sequence be initiated by the user pressing the power button for over 4 seconds, at which point the hardware unconditionally sequences the system to the Off state. This logic is represented by the `PWRBTN_OR` signal coming into the sleep logic.

While in any of the sleeping states (G1), an enabled “Wake” event will cause the hardware to sequence the system back to the working state (G0). The “Wake Status” bit (`WAK_STS`) is provided for OSPM to “spin-on” after setting the `SLP_EN`/`SLP_TYP` bit fields. When waking from the S1 sleeping state, execution control is passed back to OSPM immediately, whereas when waking from the S2-S4 states execution control is passed to the platform boot firmware (execution begins at the CPU’s reset vector). The `WAK_STS` bit provides a mechanism to separate OSPM’s sleeping and waking code during an S1 sequence. When the hardware has sequenced the system into the sleeping state (defined here as the processor is no longer able to execute instructions), any enabled wake event is allowed to set the `WAK_STS` bit and sequence the system back on (to the G0 state). If the system does not support the S1 sleeping state, the `WAK_STS` bit can always return zero.

-If more than a single sleeping state is supported, then the sleeping/wake logic is required to be able to dynamically sequence between the different sleeping states. This is accomplished by waking the system; OSPM programs the new sleep state into the `SLP_TYP` field, and then sets the `SLP_EN` bit—placing the system again in the sleeping state.

#### 4.8.2.4 Real Time Clock Alarm


If implemented, the Real Time Clock (RTC) alarm must generate a hardware wake event when in the sleeping state. The RTC can be programmed to generate an alarm. An enabled RTC alarm can be used to generate a wake event when the system is in a sleeping state. ACPI provides for additional hardware to support OSPM in determining that the RTC was the source of the wake event: the `RTC_STS` and `RTC_EN` bits. Although these bits are optional, if supported they must be implemented as described here.

If the `RTC_STS` and `RTC_EN` bits are not supported, OSPM will attempt to identify the RTC as a possible wake source; however, it might miss certain wake events. If implemented, the RTC wake feature is required to work in the following sleeping states: S1-S3. S4 wake is optional and supported through the `RTC_S4` flag within the FADT (if set, then the platform supports RTC wake in the S4 state)<sup>1</sup>.

When the RTC generates a wake event the `RTC_STS` bit will be set. If the `RTC_EN` bit is set, an RTC hardware power management event will be generated (which will wake the system from a sleeping state, provided the battery low signal is not asserted).

---

1. Notice that the G2/S5 “soft off” and the G3 “mechanical off” states are not sleeping states. The OS will disable the `RTC_EN` bit prior to entering the G2/S5 or G3 states regardless.

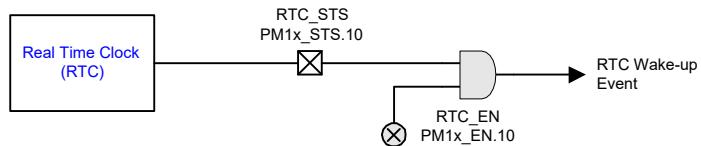**Figure 4-11 RTC Alarm**

The RTC wake event status and enable bits are an optional fixed hardware feature and a flag within the FADT (FIX\_RTC) indicates if the register bits are to be used by OSPM. If the RTC wake event status and enable bits are implemented in fixed hardware, OSPM can determine if the RTC was the source of the wake event without loading the entire OS. This also gives the platform the capability of indicating an RTC wake source without consuming a GPE bit, as would be required if RTC wake was not implemented using the fixed hardware RTC feature. If the fixed hardware feature event bits are not supported, then OSPM will attempt to determine this by reading the RTC's status field. If the platform implements the RTC fixed hardware feature, and this hardware consumes resources, the \_FIX method can be used to correlate these resources with the fixed hardware. See [Section 6.2.5, “\\_FIX \(Fixed Register Resource Provide”](#), for details.

OSPM supports enhancements over the existing RTC device (which only supports a 99 year date and 24-hour alarm). Optional extensions are provided for the following features:

### **Day Alarm.**

The DAY\_ALRM field points to an optional CMOS RAM location that selects the day within the month to generate an RTC alarm.

### **Month Alarm.**

The MON\_ALRM field points to an optional CMOS RAM location that selects the month within the year to generate an RTC alarm.

### **Centenary Value.**

The CENT field points to an optional CMOS RAM location that represents the centenary value of the date (thousands and hundreds of years).


The RTC\_STS bit may be set through the RTC interrupt (IRQ8 in IA-PC architecture systems). OSPM will insure that the periodic and update interrupt sources are disabled prior to sleeping. This allows the RTC's interrupt pin to serve as the source for the RTC\_STS bit generation. Note however that if the RTC interrupt pin is used for RTC\_STS generation, the RTC\_STS bit value may not be accurate when waking from S4. If this value is accurate when waking from S4, the platform should set the S4\_RTC\_STS\_VALID flag, so that OSPM can utilize the RTC\_STS information.

**Table 4-14 Alarm Field Decodings within the FADT**

Field	Value	Address (Location) in RTC CMOS RAM (Must be Bank 0)
DAY_ALRM	Eight bit value that can represent 0x01-0x31 days in BCD or 0x01-0x1F days in binary. Bits 6 and 7 of this field are treated as ignored by software. The RTC is initialized such that this field contains a “don’t care” value when the platform firmware switches from legacy to ACPI mode. A don’t care value can be any unused value (not 0x1-0x31 BCD or 0x01-0x1F hex) that the RTC reverts back to a 24 hour alarm.	The DAY_ALRM field in the FADT will contain a non-zero value that represents an offset into the RTC’s CMOS RAM area that contains the day alarm value. A value of zero in the DAY_ALRM field indicates that the day alarm feature is not supported.
MON_ALRM	Eight bit value that can represent 01-12 months in BCD or 0x01-0xC months in binary. The RTC is initialized such that this field contains a don’t care value when the platform firmware switches from legacy to ACPI mode. A “don’t care” value can be any unused value (not 1-12 BCD or x01-xC hex) that the RTC reverts back to a 24 hour alarm and/or 31 day alarm).	The MON_ALRM field in the FADT will contain a non-zero value that represents an offset into the RTC’s CMOS RAM area that contains the month alarm value. A value of zero in the MON_ALRM field indicates that the month alarm feature is not supported. If the month alarm is supported, the day alarm function must also be supported.
CENTURY	8-bit BCD or binary value. This value indicates the thousand year and hundred year (Centenary) variables of the date in BCD (19 for this century, 20 for the next) or binary (x13 for this century, x14 for the next).	The CENTURY field in the FADT will contain a non-zero value that represents an offset into the RTC’s CMOS RAM area that contains the Centenary value for the date. A value of zero in the CENTURY field indicates that the Centenary value is not supported by this RTC.

#### 4.8.2.5 Legacy/ACPI Select and the SCI Interrupt

As mentioned previously, power management events are generated to initiate an interrupt or hardware sequence. ACPI operating systems use the SCI interrupt handler to respond to events, while legacy systems use some type of transparent interrupt handler to respond to these events (that is, an SMI interrupt handler). ACPI-compatible hardware can choose to support both legacy and ACPI modes or just an ACPI mode. Legacy hardware is needed to support these features for non-ACPI-compatible operating systems. When the ACPI OS loads, it scans the platform firmware tables to determine that the hardware supports ACPI, and then if it finds the SCI\_EN bit reset (indicating that ACPI is not enabled), issues an ACPI activate command to the SMI handler through the SMI command port. The platform firmware acknowledges the switching to the ACPI model of power management by setting the SCI\_EN bit (this bit can also be used to switch over the event mechanism as illustrated below):

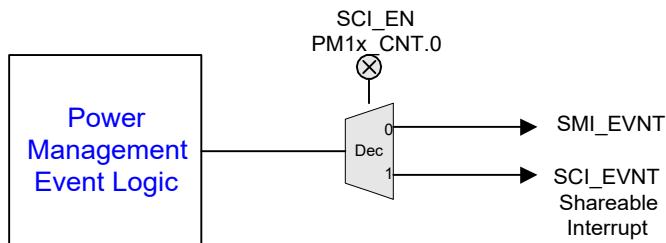

**Figure 4-12 Power Management Events to SMI/SCI Control Logic**

The interrupt events (those that generate SMIs in legacy mode and SCIs in ACPI mode) are sent through a decoder controlled by the SCI\_EN bit. For legacy mode this bit is reset, which routes the interrupt events to the SMI interrupt logic. For ACPI mode this bit is set, which routes interrupt events to the SCI interrupt logic. This bit always returns set for ACPI-compatible hardware that does not support a legacy power management mode (in other words, the bit is wired to read as “1” and ignore writes).

The SCI interrupt is defined to be a shareable interrupt and is connected to an OS visible interrupt that uses a shareable protocol. The FADT has an entry that indicates what interrupt the SCI interrupt is mapped to (see [Section 5.2.6](#), “System Description Table Header”).

If the ACPI platform supports both legacy and ACPI modes, it has a register that generates a hardware event (for example, SMI for IA-PC processors). OSPM uses this register to make the hardware switch in and out of ACPI mode. Within the FADT are three values that signify the address (SMI\_CMD) of this port and the data value written to enable the ACPI state (ACPI\_ENABLE), and to disable the ACPI state (ACPI\_DISABLE).

To transition an ACPI/Legacy platform from the Legacy mode to the ACPI mode the following would occur:

- ACPI driver checks that the SCI\_EN bit is zero, and that it is in the Legacy mode.
- OSPM does an OUT to the SMI\_CMD port with the data in the ACPI\_ENABLE field of the FADT.
- OSPM polls the SCI\_EN bit until it is sampled as SET.

To transition an ACPI/Legacy platform from the ACPI mode to the Legacy mode the following would occur:

- ACPI driver checks that the SCI\_EN bit is one, and that it is in the ACPI mode.
- OSPM does an OUT to the SMI\_CMD port with the data in the ACPI\_DISABLE field of the FADT.
- OSPM polls the SCI\_EN bit until it is sampled as RESET.

Platforms that only support ACPI always return a 1 for the SCI\_EN bit. In this case OSPM skips the Legacy to ACPI transition stated above.

#### 4.8.2.6 Processor Control

The ACPI specification defines several processor controls including power state control, throttling control, and performance state control. See [Section 8](#), “Processor Configuration and Control,” for a complete description of the processor controls.

## 4.8.3 Fixed Hardware Registers

The fixed hardware registers are manipulated directly by OSPM. The following sections describe fixed hardware features under the programming model. OSPM owns all the fixed hardware resource registers; these registers cannot be manipulated by AML code. Registers are accessed with any width up to its register width (byte granular).

### 4.8.3.1 PM1 Event Grouping

The PM1 Event Grouping has a set of bits that can be distributed between two different register blocks. This allows these registers to be partitioned between two chips, or all placed in a single chip. Although the bits can be split between the two register blocks (each register block has a unique pointer within the FADT), the bit positions are maintained. The register block with unimplemented bits (that is, those implemented in the other register block) always returns zeros, and writes have no side effects.

#### 4.8.3.1.1 PM1 Status Registers

Register Location: <PM1a\_EVT\_BLK / PM1b\_EVT\_BLK> System I/O or Memory Space

Default Value: 00h

Attribute: Read/Write

Size: PM1\_EVT\_LEN / 2

The PM1 status registers contain the fixed hardware feature status bits. The bits can be split between two registers: PM1a\_STS or PM1b\_STS. Each register grouping can be at a different 32-bit aligned address and is pointed to by the PM1a\_EVT\_BLK or PM1b\_EVT\_BLK. The values for these pointers to the register space are found in the FADT. Accesses to the PM1 status registers are done through byte or word accesses.

For ACPI/legacy systems, when transitioning from the legacy to the G0 working state this register is cleared by platform firmware prior to setting the SCI\_EN bit (and thus passing control to OSPM). For ACPI only platforms (where SCI\_EN is always set), when transitioning from either the mechanical off (G3) or soft-off state to the G0 working state this register is cleared prior to entering the G0 working state.

This register contains optional features enabled or disabled within the FADT. If the FADT indicates that the feature is not supported as a fixed hardware feature, then software treats these bits as ignored.

**Table 4-15 PM1 Status Registers Fixed Hardware Feature Status Bits**

Bit	Name	Description
0	TMR_STS	This is the timer carry status bit. This bit gets set any time the most significant bit of a 24/32-bit counter changes from clear to set or set to clear. While TMR_EN and TMR_STS are set, an interrupt event is raised.
1-3	Reserved	Reserved
4	BM_STS	This is the bus master status bit. This bit is set any time a system bus master requests the system bus, and can only be cleared by writing a “1” to this bit position. Notice that this bit reflects bus master activity, not CPU activity (this bit monitors any bus master that can cause an incoherent cache for a processor in the C3 state when the bus master performs a memory transaction).

Bit	Name	Description
5	GBL_STS	This bit is set when an SCI is generated due to the platform runtime firmware wanting the attention of the SCI handler. Platform runtime firmware will have a control bit (somewhere within its address space) that will raise an SCI and set this bit. This bit is set in response to the platform runtime firmware releasing control of the Global Lock and having seen the pending bit set.
6-7	Reserved	Reserved. These bits always return a value of zero.
8	PWRBTN_STS	<p>This optional bit is set when the Power Button is pressed. In the system working state, while PWRBTN_EN and PWRBTN_STS are both set, an interrupt event is raised. In the sleep or soft-off state, a wake event is generated when the power button is pressed (regardless of the PWRBTN_EN bit setting). This bit is only set by hardware and can only be reset by software writing a "1" to this bit position.</p> <p>ACPI defines an optional mechanism for unconditional transitioning a system that has stopped working from the G0 working state into the G2 soft-off state called the power button override. If the Power Button is held active for more than four seconds, this bit is cleared by hardware and the system transitions into the G2/S5 Soft Off state (unconditionally).</p> <p>Support for the power button is indicated by the PWR_BUTTON flag in the FADT being reset (zero). If the PWR_BUTTON flag is set or a power button device object is present in the ACPI Namespace, then this bit field is ignored by OSPM.</p> <p>If the power button was the cause of the wake (from an S1-S4 state), then this bit is set prior to returning control to OSPM.</p>
9	SLPBTN_STS	<p>This optional bit is set when the sleep button is pressed. In the system working state, while SLPBTN_EN and SLPBTN_STS are both set, an interrupt event is raised. In the sleep or soft-off states a wake event is generated when the sleeping button is pressed and the SLPBTN_EN bit is set. This bit is only set by hardware and can only be reset by software writing a "1" to this bit position.</p> <p>Support for the sleep button is indicated by the SLP_BUTTON flag in the FADT being reset (zero). If the SLP_BUTTON flag is set or a sleep button device object is present in the ACPI Namespace, then this bit field is ignored by OSPM.</p> <p>If the sleep button was the cause of the wake (from an S1-S4 state), then this bit is set prior to returning control to OSPM.</p>
10	RTC_STS	<p>This optional bit is set when the RTC generates an alarm (asserts the RTC IRQ signal). Additionally, if the RTC_EN bit is set then the setting of the RTC_STS bit will generate a power management event (an SCI, SMI, or resume event). This bit is only set by hardware and can only be reset by software writing a "1" to this bit position.</p> <p>If the RTC was the cause of the wake (from an S1-S3 state), then this bit is set prior to returning control to OSPM. If the RTC_S4 flag within the FADT is set, and the RTC was the cause of the wake from the S4 state), then this bit is set prior to returning control to OSPM.</p>
11	Ignore	This bit field is ignored by software.
12-13	Reserved	Reserved. These bits always return a value of zero.

Bit	Name	Description
14	PCIEXP_WAKE_STS	<p>This bit is optional for chipsets that implement PCI Express.</p> <p>This bit is set by hardware to indicate that the system woke due to a PCI Express wakeup event. A PCI Express wakeup event is defined as the PCI Express WAKE# pin being active, one or more of the PCI Express ports being in the beacon state, or receipt of a PCI Express PME message at a root port. This bit should only be set when one of these events causes the system to transition from a non-S0 system power state to the S0 system power state. This bit is set independent of the state of the PCIEXP_WAKE_DIS bit.</p> <p>Software writes a 1 to clear this bit. If the WAKE# pin is still active during the write, one or more PCI Express ports is in the beacon state or the PME message received indication has not been cleared in the root port, then the bit will remain active (i.e. all inputs to this bit are level-sensitive).</p> <p>Note: This bit does not itself cause a wake event or prevent entry to a sleeping state. Thus if the bit is 1 and the system is put into a sleeping state, the system will not automatically wake.</p>
15	WAK_STS	<p>This bit is set when the system is in the sleeping state and an enabled wake event occurs. Upon setting this bit system will transition to the working state. This bit is set by hardware and can only be cleared by software writing a "1" to this bit position.</p>

#### 4.8.3.1.2 PM1Enable Registers

Register Location: <PM1a\_EVT\_BLK / PM1b\_EVT\_BLK> + PM1\_EVT\_LEN / 2      System I/O or Memory Space

Default Value: 00h

Attribute: Read/Write

Size: PM1\_EVT\_LEN / 2

The PM1 enable registers contain the fixed hardware feature enable bits. The bits can be split between two registers: PM1a\_EN or PM1b\_EN. Each register grouping can be at a different 32-bit aligned address and is pointed to by the PM1a\_EVT\_BLK or PM1b\_EVT\_BLK. The values for these pointers to the register space are found in the FADT. Accesses to the PM1 Enable registers are done through byte or word accesses.

For ACPI/legacy systems, when transitioning from the legacy to the G0 working state the enables are cleared by platform firmware prior to setting the SCI\_EN bit (and thus passing control to OSPM). For ACPI-only platforms (where SCI\_EN is always set), when transitioning from either the mechanical off (G3) or soft-off state to the G0 working state this register is cleared prior to entering the G0 working state.

This register contains optional features enabled or disabled within the FADT. If the FADT indicates that the feature is not supported as a fixed hardware feature, then software treats the enable bits as write as zero.

**Table 4-16 PM1 Enable Registers Fixed Hardware Feature Enable Bits**

Bit	Name	Description
0	TMR_EN	This is the timer carry interrupt enable bit. When this bit is set then an SCI event is generated anytime the TMR_STS bit is set. When this bit is reset then no interrupt is generated when the TMR_STS bit is set.
4:1	<i>Reserved</i>	Reserved. These bits always return a value of zero.
5	GBL_EN	The global enable bit. When both the GBL_EN bit and the GBL_STS bit are set, an SCI is raised.
7:6	<i>Reserved</i>	Reserved
8	PWRBTN_EN	This optional bit is used to enable the setting of the PWRBTN_STS bit to generate a power management event (SCI or wake). The PWRBTN_STS bit is set anytime the power button is asserted. The enable bit does not have to be set to enable the setting of the PWRBTN_STS bit by the assertion of the power button (see description of the power button hardware).  Support for the power button is indicated by the PWR_BUTTON flag in the FADT being reset (zero). If the PWR_BUTTON flag is set or a power button device object is present in the ACPI Namespace, then this bit field is ignored by OSPM.
9	SLPBTN_EN	This optional bit is used to enable the setting of the SLPBTN_STS bit to generate a power management event (SCI or wake). The SLPBTN_STS bit is set anytime the sleep button is asserted. The enable bit does not have to be set to enable the setting of the SLPBTN_STS bit by the active assertion of the sleep button (see description of the sleep button hardware).  Support for the sleep button is indicated by the SLP_BUTTON flag in the FADT being reset (zero). If the SLP_BUTTON flag is set or a sleep button device object is present in the ACPI Namespace, then this bit field is ignored by OSPM.
10	RTC_EN	This optional bit is used to enable the setting of the RTC_STS bit to generate a wake event. The RTC_STS bit is set any time the RTC generates an alarm.
13:11	<i>Reserved</i>	Reserved. These bits always return a value of zero.
14	PCIEXP_WAKE_DIS	This bit is optional for chipsets that implement PCI Express.  This bit disables the inputs to the PCIEXP_WAKE_STS bit in the PM1 Status register from waking the system. Modification of this bit has no impact on the value of the PCIEXP_WAKE_STS bit. PCIEXP_WAKE_DIS bit. Software writes a 1 to clear this bit. If the WAKE# pin is still active during the write, one or more PCI Express ports is in the beacon state or the PME message received indication has not been cleared in the root port, then the bit will remain active (i.e. all inputs to this bit are level-sensitive). Note: This bit does not itself cause a wake event or prevent entry to a sleeping state. Thus if the bit is 1 and the system is put into a sleeping state, the system will not automatically wake.
15	<i>Reserved</i>	Reserved. These bits always return a value of zero.

### 4.8.3.2 PM1 Control Grouping

The PM1 Control Grouping has a set of bits that can be distributed between two different registers. This allows these registers to be partitioned between two chips, or all placed in a single chip. Although the bits can be split between the two register blocks (each register block has a unique pointer within the FADT), the bit positions specified here are maintained. The register block with unimplemented bits (that is, those implemented in the other register block) returns zeros, and writes have no side effects.

#### 4.8.3.2.1 PM1 Control Registers

Register Location: <PM1a\_CNT\_BLK / PM1b\_CNT\_BLK> System I/O or Memory Space

Default Value: 00h

Attribute: Read/Write

Size: PM1\_CNT\_LEN

The PM1 control registers contain the fixed hardware feature control bits. These bits can be split between two registers: PM1a\_CNT or PM1b\_CNT. Each register grouping can be at a different 32-bit aligned address and is pointed to by the PM1a\_CNT\_BLK or PM1b\_CNT\_BLK. The values for these pointers to the register space are found in the FADT. Accesses to PM1 control registers are accessed through byte and word accesses.

This register contains optional features enabled or disabled within the FADT. If the FADT indicates that the feature is not supported as a fixed hardware feature, then software treats these bits as ignored.

**Table 4-17 PM1 Control Registers Fixed Hardware Feature Control Bits**

Bit	Name	Description
0	SCI_EN	Selects the power management event to be either an SCI or SMI interrupt for the following events. When this bit is set, then power management events will generate an SCI interrupt. When this bit is reset power management events will generate an SMI interrupt. It is the responsibility of the hardware to set or reset this bit. OSPM always preserves this bit position.
1	BM_RLD	When set, this bit allows the generation of a bus master request to cause any processor in the C3 state to transition to the C0 state. When this bit is reset, the generation of a bus master request does not affect any processor in the C3 state.
2	GBL_RLS	This write-only bit is used by the ACPI software to raise an event to the platform runtime firmware, that is, generates an SMI to pass execution control to the platform runtime firmware for IA-PC platforms. Platform runtime firmware software has a corresponding enable and status bit to control its ability to receive ACPI events (for example, BIOS_EN and BIOS_STS). The GBL_RLS bit is set by OSPM to indicate a release of the Global Lock and the setting of the pending bit in the FACS memory structure.
8:3	Reserved	Reserved. These bits are reserved by OSPM.
9	Ignore	Software ignores this bit field.

Bit	Name	Description
12:10	SLP_TYPx	Defines the type of sleeping or soft-off state the system enters when the SLP_EN bit is set to one. This 3-bit field defines the type of hardware sleep state the system enters when the SLP_EN bit is set. The \_Sx object contains 3-bit binary values associated with the respective sleeping state (as described by the object). OSPM takes the two values from the \_Sx object and programs each value into the respective SLP_TYPx field.
13	SLP_EN	This is a write-only bit and reads to it always return a zero. Setting this bit causes the system to sequence into the sleeping state associated with the SLP_TYPx fields programmed with the values from the \_Sx object.
15:14	Reserved	Reserved. This field always returns zero.

#### 4.8.3.3 Power Management Timer (PM\_TMR)

Register Location: <PM\_TMR\_BLK> System I/O or Memory Space

Default Value: 00h

Attribute: Read-Only

Size: 32 bits

This optional read-only register returns the current value of the power management timer (PM timer) if it is implemented on the platform. The FADT has a flag called TMR\_VAL\_EXT that an OEM sets to indicate a 32-bit PM timer or reset to indicate a 24-bit PM timer. When the last bit of the timer toggles the TMR\_STS bit is set. This register is accessed as 32 bits.

This register contains optional features enabled or disabled within the FADT. If the FADT indicates that the feature is not supported as a fixed hardware feature, then software treats these bits as ignored.

**Table 4-18 PM Timer Bits**

Bit	Name	Description
23:0	TMR_VAL	This read-only field returns the running count of the power management timer. This is a 24-bit counter that runs off a 3.579545-MHz clock and counts while in the S0 working system state. The starting value of the timer is undefined, thus allowing the timer to be reset (or not) by any transition to the S0 state from any other state. The timer is reset (to any initial value), and then continues counting until the system's 14.31818 MHz clock is stopped upon entering its Sx state. If the clock is restarted without a reset, then the counter will continue counting from where it stopped.
31:24	E_TMR_VAL	This read-only field returns the upper eight bits of a 32-bit power management timer. If the hardware supports a 32-bit timer, then this field will return the upper eight bits; if the hardware supports a 24-bit timer then this field returns all zeros.

#### 4.8.3.4 PM2 Control (PM2\_CNT)

Register Location: <PM2\_CNT\_BLK> System I/O, System Memory, or Functional Fixed Hardware Space

Default Value: 00h

Attribute: Read/Write

Size: PM2\_CNT\_LEN

This register block is naturally aligned and accessed based on its length. For ACPI 1.0 this register is byte aligned and accessed as a byte.

This register contains optional features enabled or disabled within the FADT. If the FADT indicates that the feature is not supported as a fixed hardware feature, then software treats these bits as ignored.

**Table 4-19 PM2 Control Register Bits**

Bit	Name	Description
0	ARB_DIS	<p>This bit is used to enable and disable the system arbiter. When this bit is CLEAR the system arbiter is enabled and the arbiter can grant the bus to other bus masters. When this bit is SET the system arbiter is disabled and the default CPU has ownership of the system.</p> <p>OSPM clears this bit when using the C0, C1 and C2 power states.</p>
>0	Reserved	Reserved

#### 4.8.3.5 Processor Register Block (P\_BLK)

This optional register block is used to control each processor in the system. There is one unique processor register block per processor in the system. For more information about controlling processors and control methods that can be used to control processors, see [Section 8](#), “Processor Configuration and Control.” This register block is DWORD aligned and the context of this register block is not maintained across S3 or S4 sleeping states, or the S5 soft-off state.

##### 4.8.3.5.1 Processor Control (P\_CNT): 32

Register Location: Either <P\_BLK>: System I/O Space  
 or specified by \_PTC Object: System I/O, System Memory, or Functional Fixed Hardware Space

Default Value: 00h  
 Attribute: Read/Write  
 Size: 32 bits

This register is accessed as a DWORD. The CLK\_VAL field is where the duty setting of the throttling hardware is programmed as described by the DUTY\_WIDTH and DUTY\_OFFSET values in the FADT. Software treats all other CLK\_VAL bits as ignored (those not used by the duty setting value).

**Table 4-20 Processor Control Register Bits**

Bit	Name	Description
3:0	CLK_VAL	Possible locations for the clock throttling value.
4	THT_EN	This bit enables clock throttling of the clock as set in the CLK_VAL field. THT_EN bit must be reset LOW when changing the CLK_VAL field (changing the duty setting).
31:5	CLK_VAL	Possible locations for the clock throttling value.

##### 4.8.3.5.2 Processor LVL2 Register (P\_LVL2): 8

Register Location: Either <P\_BLK> + 4: System I/O Space  
 or specified by \_CST Object: System I/O, System Memory, or

Default Value:	00h	Functional Fixed Hardware Space
Attribute:	Read-Only	
Size:	8 bits	

This register is accessed as a byte.

**Table 4-21 Processor LVL2 Register Bits**

Bit	Name	Description
7:0	P_LVL2	Reads to this register return all zeros; writes to this register have no effect. Reads to this register also generate an “enter a C2 power state” to the clock control logic.

#### 4.8.3.5.3 Processor LVL3 Register (P\_LVL3): 8

Register Location:	Either <P_BLK> + 5: or specified by _CST Object:	System I/O Space System I/O, System Memory, or Functional Fixed Hardware Space
--------------------	---	--

Default Value:	00h
Attribute:	Read-Only
Size:	8 bits

This register is accessed as a byte.

**Table 4-22 Processor LVL3 Register Bits**

Bit	Name	Description
7:0	P_LVL3	Reads to this register return all zeros; writes to this register have no effect. Reads to this register also generate an “enter a C3 power state” to the clock control logic.

#### 4.8.3.6 Reset Register

The optional ACPI reset mechanism specifies a standard mechanism that provides a complete system reset. When implemented, this mechanism must reset the entire system. This includes processors, core logic, all buses, and all peripherals. From an OSPM perspective, asserting the reset mechanism is the logical equivalent to power cycling the system. Upon gaining control after a reset, OSPMI will perform actions in like manner to a cold boot.

The reset mechanism is implemented via an 8-bit register described by RESET\_REG in the FADT (always accessed via the natural alignment and size described in RESET\_REG). To reset the system, software will write a value (indicated in RESET\_VALUE in FADT) to the reset register. The RESET\_REG field in the FADT indicates the location of the reset register.

The reset register may exist only in I/O space, Memory space, or in PCI Configuration space on a function in bus 0. Therefore, the Address\_Space\_ID value in RESET\_REG must be set to System I/O space, System Memory space, or PCI Configuration space (with a bus number of 0). As the register is only 8 bits, Register\_Bit\_Width must be 8 and Register\_Bit\_Offset must be 0.

The system must reset immediately following the write to this register. OSPM assumes that the processor will not execute beyond the write instruction. OSPM should execute spin loops on the CPUs in the system following a write to this register.

#### 4.8.3.7 Sleep Control and Status Registers

The optional ACPI sleep registers (SLEEP\_CONTROL\_REG and SLEEP\_STATUS\_REG) specify a standard mechanism for system sleep state entry on HW-Reduced ACPI systems. When implemented, the Sleep registers are a replacement for the SLP\_TYP, SLP\_EN and WAK\_STS registers in the PM1\_BLK. Use of these registers is at the discretion of OSPM. OSPM can decide whether to enter sleep states on the platform based on the LOW\_POWER\_SO\_IDLE\_CAPABLE flag. Even when implemented, OSPM may use other provided options for hibernate and shutdown (e.g. UEFI ResetSystem()).

The HW-reduced Sleep mechanism is implemented via two 8-bit registers described by SLEEP\_CONTROL\_REG and SLEEP\_STATUS\_REG in the FADT (always accessed via the natural alignment and size described in SLEEP\_\*\_REG). To put the system into a sleep state, software will write the HW-reduced Sleep Type value (obtained from the \\_Sx object in the DSDT) and the SLP\_EN bit to the sleep control register. The OSPM then polls the WAK\_STS bit of the SLEEP\_STATUS\_REG waiting for it to be one (1), indicating that the system has been transitioned back to the Working state.

The Sleep registers may exist only in I/O space, Memory space, or in PCI Configuration space on a function in bus 0. Therefore, the Address\_Space\_ID value must be set to System I/O space, SystemMemory space, or PCI Configuration space (with a bus number of 0). As the registers are only 8 bits, Register\_Bit\_Width must be 8 and Register\_Bit\_Offset must be 0.

**Table 4-23 Sleep Control Register**

Field Name	Bit Length	Bit Offset	Description
<i>Reserved</i>	1	0	Reserved. This bit is reserved by OSPM.
Ignore	1	1	Software ignores this bit field.
SLP_TYPx	3	2	Defines the type of sleeping state the system enters when the SLP_EN bit is set to one. This 3-bit field defines the type of hardware sleep state the system enters when the SLP_EN bit is set. The \_Sx object contains 3-bit binary values associated with the respective sleeping state (as described by the object). OSPM takes the HW-reduced Sleep Type value from the _SX object and programs it into the SLP_TYPx field.
SLP_EN	1	5	This is a write-only bit and reads to it always return a zero. Setting this bit causes the system to sequence into the sleeping state associated with the SLP_TYPx fields programmed with the values from the \_Sx object.
<i>Reserved</i>	2	6	Reserved. This field always returns zero.

**Table 4-24 Sleep Status Register**

Field Name	Bit Length	Bit Offset	Description
Ignore	4	0	Software ignores this bit field.
<i>Reserved</i>	2	4	Reserved. These bits always return a value of zero.
Ignore	1	6	Software ignores this bit field.

WAK_STS	1	7	This bit is set when the system is in the sleeping state and an enabled wake event occurs. Upon setting this bit system will transition to the working state. This bit is set by hardware and can only be cleared by software writing a "1" to this bit position.
---------	---	---	---

#### 4.8.4 Generic Hardware Registers


ACPI provides a mechanism that allows a unique piece of “value added” hardware to be described to OSPM in the ACPI Namespace. There are a number of rules to be followed when designing ACPI-compatible hardware.

Programming bits can reside in any of the defined generic hardware address spaces (system I/O, system memory, PCI configuration, embedded controller, or SMBus), but the top-level event bits are contained in the general-purpose event registers. The general-purpose event registers are pointed to by the GPE0\_BLK and GPE1\_BLK register blocks, and the generic hardware registers can be in any of the defined ACPI address spaces. A device’s generic hardware programming model is described through an associated object in the ACPI Namespace, which specifies the bit’s function, location, address space, and address location.

The programming model for devices is normally broken into status and control functions. Status bits are used to generate an event that allows OSPM to call a control method associated with the pending status bit. The called control method can then control the hardware by manipulating the hardware control bits or by investigating child status bits and calling their respective control methods. ACPI requires that the top level “parent” event status and enable bits reside in either the GPE0\_STS or GPE1\_STS registers, and “child” event status bits can reside in generic address space.

The example below illustrates some of these concepts. The top diagram shows how the logic is partitioned into two chips: a chipset and an embedded controller.

- The chipset contains the interrupt logic, performs the power button (which is part of the fixed register space, and is not discussed here), the lid switch (used in portables to indicate when the clam shell lid is open or closed), and the RI# function (which can be used to wake a sleeping system).
- The embedded controller chip is used to perform the AC power detect and dock/undock event logic. Additionally, the embedded controller supports some system management functions using an OS-transparent interrupt in the embedded controller (represented by the EXTSMI# signal).

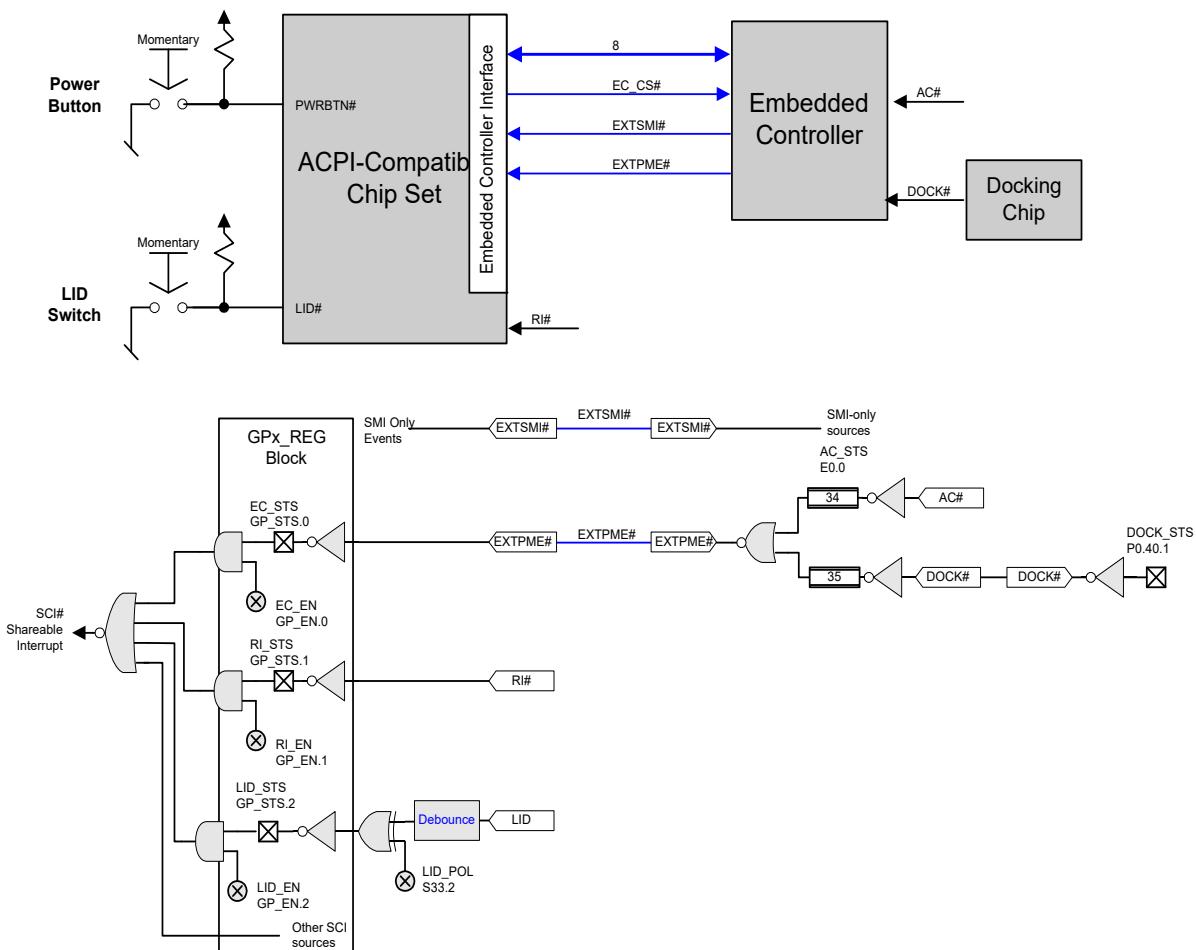

**Figure 4-13 Example of General-Purpose vs. Generic Hardware Events**

At the top level, the generic events in the GPEx\_STS register are the:

- Embedded controller interrupt, which contains two query events: one for AC detection and one for docking (the docking query event has a child interrupt status bit in the docking chip).
- Ring indicate status (used for waking the system).
- Lid status.

The embedded controller event status bit (EC\_STS) is used to indicate that one of two query events is active.

- A query event is generated when the AC# signal is asserted. The embedded controller returns a query value of 34 (any byte number can be used) upon a query command in response to this event; OSPM will then schedule for execution the control method associated with query value 34.

Another query event is for the docking chip that generates a docking event. In this case, the embedded controller will return a query value of 35 upon a query command from system software responding to an SCI from the embedded controller. OSPM will then schedule the control method associated with the query value of 35 to be executed, which services the docking event.

For each of the status bits in the GPEx\_STS register, there is a corresponding enable bit in the GPEx\_EN register. Notice that the child status bits do not necessarily need enable bits (see the DOCK\_STS bit).

The lid logic contains a control bit to determine if its status bit is set when the LID is open (LID\_POL is set and LID is set) or closed (LID\_POL is clear and LID is clear). This control bit resides in generic I/O space (in this case, bit 2 of system I/O space 33h) and would be manipulated with a control method associated with the lid object.

As with fixed hardware events, OSPM will clear the status bits in the GPEx register blocks. However, AML code clears all sibling status bits in the generic hardware.

Generic hardware features are controlled by OEM supplied control methods, encoded in AML. ACPI provides both an event and control model for development of these features. The ACPI specification also provides specific control methods for notifying OSPM of certain power management and Plug and Play events. [Section 5](#), “ACPI Software Programming Model,” provides information on the types of hardware functionality that support the different types of subsystems. The following is a list of features supported by ACPI. The list is not intended to be complete or comprehensive.

- Device insertion/ejection (for example, docking, device bay, A/C adapter)
- Batteries<sup>2</sup>
- Platform thermal subsystem
- Turning on/off power resources
- Mobile lid Interface
- Embedded controller
- System indicators
- OEM-specific wake events
- Plug and Play configuration

#### 4.8.4.1 General-Purpose Event Register Blocks

ACPI supports up to two general-purpose register blocks as described in the FADT (see [Section 5](#), “ACPI Software Programming Model”) and an arbitrary number of additional GPE blocks described as devices within the ACPI namespace. Each register block contains two registers: an enable and a status register. Each register block is 32-bit aligned. Each register in the block is accessed as a byte. It is up to the specific design to determine if these bits retain their context across sleeping or soft-off states. If they lose their context across a sleeping or soft-off state, then platform boot firmware resets the respective enable bit prior to passing control to the OS upon waking.

##### 4.8.4.1.1 General-Purpose Event 0 Register Block

This register block consists of two registers: The GPE0\_STS and the GPE0\_EN registers. Each register’s length is defined to be half the length of the GPE0 register block, and is described in the ACPI FADT’s GPE0\_BLK and GPE0\_BLK\_LEN operators. OSPM owns the general-purpose event resources and these bits are only manipulated by OSPM; AML code cannot access the general-purpose event registers.

It is envisioned that chipsets will contain GPE event registers that provide GPE input pins for various events.

---

2. ACPI operating systems assume the use of the Smart Battery System Implementers Forum defined standard for batteries, called the “Smart Battery Specification” (SBS). ACPI provides a set of control methods for use by OEMs that use a proprietary “control method” battery interface.

The platform designer would then wire the GPEs to the various value-added event hardware and the AML code would describe to OSPM how to utilize these events. As such, there will be the case where a platform has GPE events that are not wired to anything (they are present in the chip set), but are not utilized by the platform and have no associated AML code. In such, cases these event pins are to be tied inactive such that the corresponding SCI status bit in the GPE register is not set by a floating input pin.

#### 4.8.4.1.1.1 General-Purpose Event 0 Status Register

Register Location:	<GPE0_STS>	System I/O or System Memory Space
Default Value:	00h	
Attribute:	Read/Write	
Size:	GPE0_BLK_LEN/2	

The general-purpose event 0 status register contains the general-purpose event status bits in bank zero of the general-purpose registers. Each available status bit in this register corresponds to the bit with the same bit position in the GPE0\_EN register. Each available status bit in this register is set when the event is active, and can only be cleared by software writing a “1” to its respective bit position. For the general-purpose event registers, unimplemented bits are ignored by OSPM.

Each status bit can optionally wake the system if asserted when the system is in a sleeping state with its respective enable bit set. OSPM accesses GPE registers through byte accesses (regardless of their length).

#### 4.8.4.1.1.2 General-Purpose Event 0 Enable Register

Register Location:	<GPE0_EN>	System I/O or System Memory Space
Default Value:	00h	
Attribute:	Read/Write	
Size:	GPE0_BLK_LEN/2	

The general-purpose event 0 enable register contains the general-purpose event enable bits. Each available enable bit in this register corresponds to the bit with the same bit position in the GPE0\_STS register. The enable bits work similarly to how the enable bits in the fixed-event registers are defined: When the enable bit is set, then a set status bit in the corresponding status bit will generate an SCI bit. OSPM accesses GPE registers through byte accesses (regardless of their length).

#### 4.8.4.1.2 General-Purpose Event 1 Register Block

This register block consists of two registers: The GPE1\_STS and the GPE1\_EN registers. Each register's length is defined to be half the length of the GPE1 register block, and is described in the ACPI FADT's GPE1\_BLK and GPE1\_BLK\_LEN operators.

##### 4.8.4.1.2.1 General-Purpose Event 1 Status Register

Register Location:	<GPE1_STS>	System I/O or System Memory Space
Default Value:	00h	
Attribute:	Read/Write	
Size:	GPE1_BLK_LEN/2	

The general -purpose event 1 status register contains the general-purpose event status bits. Each available status bit in this register corresponds to the bit with the same bit position in the GPE1\_EN register. Each available status bit in this register is set when the event is active, and can only be cleared by software writing a “1” to its respective bit position. For the general-purpose event registers, unimplemented bits are ignored by the operating system.

Each status bit can optionally wake the system if asserted when the system is in a sleeping state with its respective enable bit set.

OSPM accesses GPE registers through byte accesses (regardless of their length).

#### 4.8.4.1.2.2 General-Purpose Event 1 Enable Register

**Register Location:** <GPE1\_EN> System I/O or System Memory Space

**Default Value:** 00h

**Attribute:** Read/Write

**Size:** GPE1\_BLK\_LEN/2

The general-purpose event 1 enable register contains the general-purpose event enable. Each available enable bit in this register corresponds to the bit with the same bit position in the GPE1\_STS register. The enable bits work similarly to how the enable bits in the fixed-event registers are defined: When the enable bit is set, a set status bit in the corresponding status bit will generate an SCI bit.

OSPM accesses GPE registers through byte accesses (regardless of their length).


#### 4.8.4.2 Example Generic Devices

This section points out generic devices with specific ACPI driver support.

##### 4.8.4.2.1 Lid Switch

The Lid switch is an optional feature present in most “clam shell” style mobile computers. It can be used by the OS as policy input for sleeping the system, or for waking the system from a sleeping state. If used, then the OEM needs to define the lid switch as a device with an \_HID object value of “PNPOCOD”, which identifies this device as the lid switch to OSPM. The Lid device needs to contain a control method that returns its status. The Lid event handler AML code reconfigures the lid hardware (if it needs to) to generate an event in the other direction, clear the status, and then notify OSPM of the event.

Example hardware and ASL code is shown below for such a design.

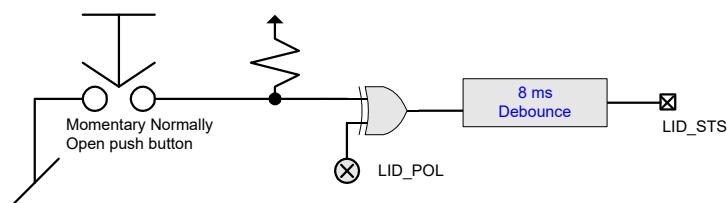

**Figure 4-14 Example Generic Address Space Lid Switch Logic**

This logic will set the Lid status bit when the button is pressed or released (depending on the LID\_POL bit).

The ASL code below defines the following:

- An operational region where the lid polarity resides in address space System address space in registers 0x201.
- A field operator to allow AML code to access this bit: Polarity control bit (LID\_POL) is called LPOL and is accessed at 0x201.0.
- A device named \\_SB.LID with the following:
  - A Plug and Play identifier “PNPOCOD” that associates OSPM with this object.

- Defines an object that specifies a change in the lid's status bit can wake the system from the S4 sleep state and from all higher sleep states (S1, S2, or S3).
- The lid switch event handler that does the following:
  - Defines the lid status bit (LID\_STS) as a child of the general-purpose event 0 register bit 1.
  - Defines the event handler for the lid (only event handler on this status bit) that does the following:
    - Flips the polarity of the LPOL bit (to cause the event to be generated on the opposite condition).
    - Generates a notify to the OS that does the following:
      - Passes the \\_SB.LID object.
      - Indicates a device specific event (notify value 0x80).

```
// Define a Lid switch
OperationRegion(\PH0, SystemIO, 0x201, 0x1)
Field(\PH0, ByteAcc, NoLock, Preserve) {
    LPOL, 1           // Lid polarity control bit
}

Device(\_SB.LID){
    Name(_HID, EISAID("PNPOCOD"))
    Method(_LID){Return(LPOL)}
    Name(_PRW, Package(2){
        1,             // bit 1 of GPE to enable Lid wakeup
        0x04}          // can wakeup from S4 state
    )
}
Scope(\_GPE){           // Root level event handlers
    Method(_L01){       // uses bit 1 of GPO_STS register
        Not(LPOL, LPOL) // Flip the lid polarity bit
        Notify(LID, 0x80) // Notify OS of event
    }
}
```

#### 4.8.4.2.2 Embedded Controller

ACPI provides a standard interface that enables AML code to define and access generic logic in “embedded controller space.” This supports current computer models where much of the value added hardware is contained within the embedded controller while allowing the AML code to access this hardware in an abstracted fashion.

- The embedded controller is defined as a device and must contain a set number of control methods:
- \_HID with a value of PNP0C09 to associate this device with the ACPI’s embedded controller’s driver.
- \_CRS to return the resources being consumed by the embedded controller.
- \_GPE that returns the general-purpose event bit that this embedded controller is wired to.

Additionally the embedded controller can support up to 255 generic events per embedded controller, referred to as query events. These query event handles are defined within the embedded controller’s device as control methods. An example of defining an embedded controller device is shown below:

```

Device(EC0) {
    // PnP ID
    Name(_HID, EISAID("PNPOC09"))
    // Returns the "Current Resources" of EC
    Name(_CRS,
        ResourceTemplate(){
            IO(Decode16, 0x62, 0x62, 0, 1)
            IO(Decode16, 0x66, 0x66, 0, 1)
        })
    // Indicate that the EC SCI is bit 0 of the GP_STS register
    Name(_GPE, 0)           // embedded controller is wired to bit 0 of GPE

    OperationRegion(\EC0, EmbeddedControl, 0, 0xFF)
    Field(EC0, ByteAcc, Lock, Preserve) {
        // Field definitions
    }
    // Query methods
    Method(_Q00){...}
    Method(_QFF){...}
}

```

For more information on the embedded controller, see [Section 12](#), “ACPI Embedded Controller Interface Specification.”

#### 4.8.4.2.3 Fan

ACPI has a device driver to control fans (active cooling devices) in platforms. A fan is defined as a device with the Plug and Play ID of “PNPOCOB.” It should then contain a list power resources used to control the fan.

For more information, see [Section 9](#), “ACPI-Defined Devices and Device Specific Objects.” .

# 5 ACPI Software Programming Model

ACPI defines a hardware register interface that an ACPI-compatible OS uses to control core power management features of a machine, as described in [Section 4](#), “ACPI Hardware Specification.” ACPI also provides an abstract interface for controlling the power management and configuration of an ACPI system. Finally, ACPI defines an interface between an ACPI-compatible OS and the platform runtime firmware.


To give hardware vendors flexibility in choosing their implementation, ACPI uses tables to describe system information, features, and methods for controlling those features. These tables list devices on the system board or devices that cannot be detected or power managed using some other hardware standard, plus their capabilities as described in [Section 3](#), “Overview.” They also list system capabilities such as the sleeping power states supported, a description of the power planes and clock sources available in the system, batteries, system indicator lights, and so on. This enables OSPM to control system devices without needing to know how the system controls are implemented.

Topics covered in this section are:

- The ACPI system description table architecture is defined, and the role of OEM-provided definition blocks in that architecture is discussed.
- The concept of the ACPI Namespace is discussed.

## 5.1 Overview of the System Description Table Architecture

The Root System Description Pointer (RSDP) structure is located in the system’s memory address space and is setup by the platform firmware. This structure contains the address of the Extended System Description Table (XSDT), which references other description tables that provide data to OSPM, supplying it with knowledge of the base system’s implementation and configuration (see [Figure 5-15](#)).

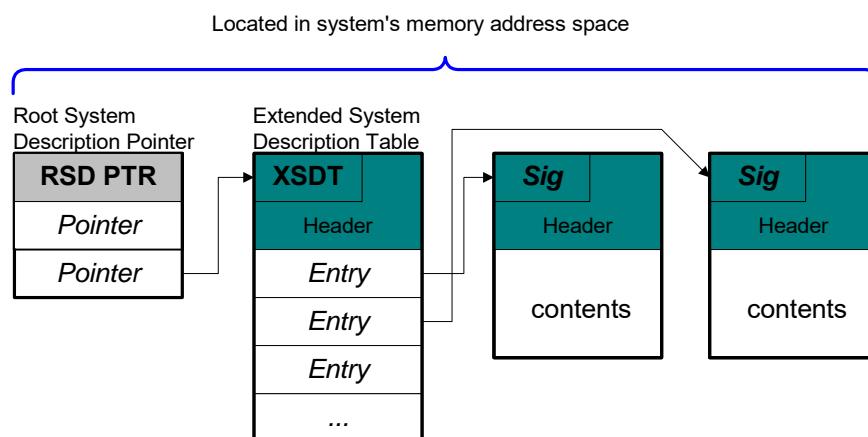


**Figure 5-15 Root System Description Pointer and Table**

All system description tables start with identical headers. The primary purpose of the system description tables is to define for OSPM various industry-standard implementation details. Such definitions enable

various portions of these implementations to be flexible in hardware requirements and design, yet still provide OSPM with the knowledge it needs to control hardware directly.

The Extended System Description Table (XSDT) points to other tables in memory. Always the first table, it points to the Fixed ACPI Description table (FADT). The data within this table includes various fixed-length entries that describe the fixed ACPI features of the hardware. The FADT table always refers to the Differentiated System Description Table (DSDT), which contains information and descriptions for various system features. The relationship between these tables is shown in [Figure 5-16](#).

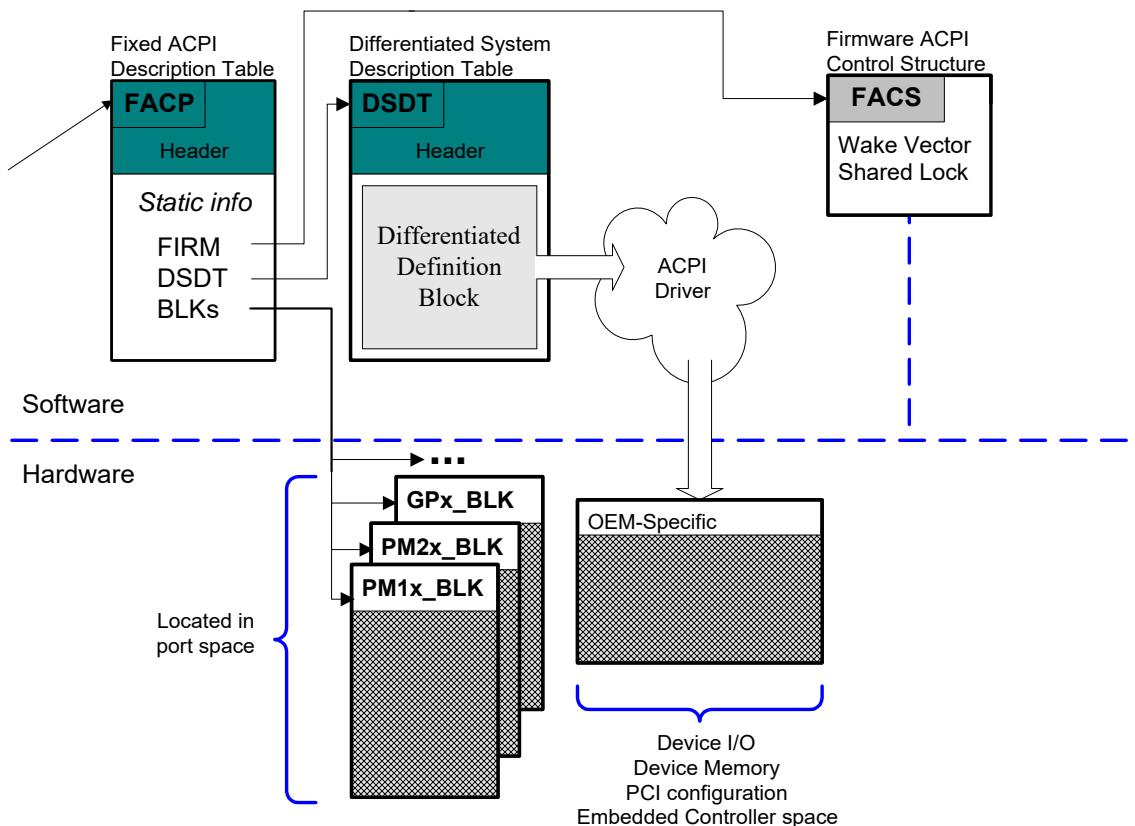

**Figure 5-16 Description Table Structures**

OSPM finds the RSDP structure as described in [Section 5.2.5.1](#) (“Finding the RSDP on IA-PC Systems”) or [Section 5.2.5.2](#) (“Finding the RSDP on UEFI Enabled Systems”).

When OSPM locates the structure, it looks at the physical address for the Root System Description Table or the Extended System Description Table. The Root System Description Table starts with the signature “RSDT”, while the Extended System Description Table starts with the signature “XSDT”. These tables contain one or more physical pointers to other system description tables that provide various information about the system. As shown in [Figure 5-16](#), there is always a physical address in the Root System Description Table for the Fixed ACPI Description table (FADT).

When OSPM follows a physical pointer to another table, it examines each table for a known signature. Based on the signature, OSPM can then interpret the implementation-specific data within the description table.

The purpose of the FADT is to define various static system information related to configuration and power management. The Fixed ACPI Description Table starts with the “FACP” signature. The FADT describes the implementation and configuration details of the ACPI hardware registers on the platform.

For a specification of the ACPI Hardware Register Blocks (PM1a\_EVT\_BLK, PM1b\_EVT\_BLK, PM1a\_CNT\_BLK, PM1b\_CNT\_BLK, PM2\_CNT\_BLK, PM\_TMR\_BLK, GPO\_BLK, GP1\_BLK, and one or more P\_BLKS), see [Section 4.8](#), “ACPI Register Model.” The PM1a\_EVT\_BLK, PM1b\_EVT\_BLK, PM1a\_CNT\_BLK, PM1b\_CNT\_BLK, PM2\_CNT\_BLK, and PM\_TMR\_BLK blocks are for controlling low-level ACPI system functions.

The GPE0\_BLK and GPE1\_BLK blocks provide the foundation for an interrupt-processing model for Control Methods. The P\_BLK blocks are for controlling processor features.

Besides ACPI Hardware Register implementation information, the FADT also contains a physical pointer to a data structure known as the Differentiated System Description Table (DSDT), which is encoded in Definition Block format (See [Section 5.2.11](#), “Definition Blocks”).

A Definition Block contains information about the platform’s hardware implementation details in the form of data objects arranged in a hierarchical (tree-structured) entity known as the “ACPI namespace”, which represents the platform’s hardware configuration. All definition blocks loaded by OSPM combine to form one namespace that represents the platform. Data objects are encoded in a format known as ACPI Machine Language or AML for short. Data objects encoded in AML are “evaluated” by an OSPM entity known as the AML interpreter. Their values may be static or dynamic. The AML interpreter’s dynamic data object evaluation capability includes support for programmatic evaluation, including accessing address spaces (for example, I/O or memory accesses), calculation, and logical evaluation, to determine the result. Dynamic namespace objects are known as “control methods”. OSPM “loads” an entire definition block as a logical unit – adding to or removing the associated objects from the namespace. The DSDT contains a Definition Block named the Differentiated Definition Block that contains implementation and configuration information OSPM can use to perform power management, thermal management, or Plug and Play functionality that goes beyond the information described by the ACPI hardware registers.

Definition Blocks can either define new system attributes or, in some cases, build on prior definitions. A Definition Block can be loaded from system memory address space. One use of a Definition Block is to describe and distribute platform version changes.

Definition blocks enable wide variations of hardware platform implementations to be described to the ACPI-compatible OS while confining the variations to reasonable boundaries. Definition blocks enable simple platform implementations to be expressed by using a few well-defined object names. In theory, it might be possible to define a PCI configuration space-like access method within a Definition Block, by building it from I/O space, but that is not the goal of the Definition Block specification. Such a space is usually defined as a “built in” operator.

Some operators perform simple functions and others encompass complex functions. The power of the Definition Block comes from its ability to allow these operations to be glued together in numerous ways, to provide functionality to OSPM. The operators present are intended to allow many useful hardware designs to be ACPI-expressed, not to allow all hardware designs to be expressed.

### 5.1.1 Address Space Translation

Some platforms may contain bridges that perform translations as I/O and/or Memory cycles pass through the bridges. This translation can take the form of the addition or subtraction of an offset. Or it can take the form of a conversion from I/O cycles into Memory cycles and back again. When translation takes place, the addresses placed on the processor bus by the processor during a read or write cycle are not the same addresses that are placed on the I/O bus by the I/O bus bridge. The address the processor places on the processor bus will be known here as the processor-relative address. And the address that the bridge places on the I/O bus will be known as the bus-relative address. Unless otherwise noted, all addresses used within this section are processor-relative addresses.

For example, consider a platform with two root PCI buses. The platform designer has several choices. One solution would be to split the 16-bit I/O space into two parts, assigning one part to the first root PCI bus and one part to the second root PCI bus. Another solution would be to make both root PCI buses decode the entire 16-bit I/O space, mapping the second root PCI bus's I/O space into memory space. In this second scenario, when the processor needs to read from an I/O register of a device underneath the second root PCI bus, it would need to perform a memory read within the range that the root PCI bus bridge is using to map the I/O space.

**Note:** *Industry standard PCs do not provide address space translations because of historical compatibility issues.*

## 5.2 ACPI System Description Tables

This section specifies the structure of the system description tables:

- Root System Description Pointer (RSDP)
- System Description Table Header
- Root System Description Table (RSDT)
- Fixed ACPI Description Table (FADT)
- Firmware ACPI Control Structure (FACS)
- Differentiated System Description Table (DSDT)
- Secondary System Description Table (SSDT)
- Multiple APIC Description Table (MADT)
- Smart Battery Table (SBST)
- Extended System Description Table (XSDT)
- Embedded Controller Boot Resources Table (ECDT)
- System Locality Distance Information Table (SLIT)
- System Resource Affinity Table (SRAT)
- Corrected Platform Error Polling Table (CPEP)
- Maximum System Characteristics Table (MSCT)
- ACPI RAS Feature Table (RASF)
- Memory Power StateTable (MPST)
- Platform Memory Topology Table (PMTT)
- Boot Graphics Resource Table (BGRT)
- Firmware Performance Data Table (FPDT)
- Generic Timer Description Table (GTDT)
- NVDIMM Firmware Interface Table (NFIT)
- Heterogeneous Memory Attributes Table (HMAT)

- Platform Debug Trigger Table (PDTT)
- Processor Properties Topology Table (PPTT)

All numeric values in ACPI-defined tables, blocks, and structures are always encoded in little endian format. Signature values are stored as fixed-length strings.

## 5.2.1 Reserved Bits and Fields

For future expansion, all data items marked as *reserved* in this specification have strict meanings. This section lists software requirements for *reserved* fields. Notice that the list contains terms such as ACPI tables and AML code defined later in this section of the specification.

### 5.2.1.1 Reserved Bits and Software Components

- OEM implementations of software and AML code return the bit value of 0 for all reserved bits in ACPI tables or in other software values, such as resource descriptors.
- For all reserved bits in ACPI tables and registers, OSPM implementations must:
  - Ignore all reserved bits that are read.
  - Preserve reserved bit values of read/write data items (for example, OSPM writes back reserved bit values it reads).
  - Write zeros to reserved bits in write-only data items.

### 5.2.1.2 Reserved Values and Software Components

- OEM implementations of software and AML code return only defined values and do not return reserved values.
- OSPM implementations write only defined values and do not write reserved values.

### 5.2.1.3 Reserved Hardware Bits and Software Components

- Software ignores all reserved bits read from hardware enable or status registers.
- Software writes zero to all reserved bits in hardware enable registers.
- Software ignores all reserved bits read from hardware control and status registers.
- Software preserves the value of all reserved bits in hardware control registers by writing back read values.

### 5.2.1.4 Ignored Hardware Bits and Software Components

- Software handles ignored bits in ACPI hardware registers the same way it handles reserved bits in these same types of registers.

## 5.2.2 Compatibility

All versions of the ACPI tables must maintain backward compatibility. To accomplish this, modifications of the tables consist of redefinition of previously reserved fields and values plus appending data to the 1.0 tables. Modifications of the ACPI tables require that the version numbers of the modified tables be incremented. The length field in the tables includes all additions and the checksum is maintained for the entire length of the table.

## 5.2.3 Address Format

Addresses used in the ACPI 1.0 system description tables were expressed as either system memory or I/O space. This was targeted at the IA-32 environment. Newer architectures require addressing mechanisms

beyond that defined in ACPI 1.0. To support these architectures ACPI must support 64-bit addressing and it must allow the placement of control registers in address spaces other than System I/O.

### 5.2.3.1 Functional Fixed Hardware

ACPI defines the fixed hardware low-level interfaces as a means to convey to the system OEM the minimum interfaces necessary to achieve a level of capability and quality for motherboard configuration and system power management. Additionally, the definition of these interfaces, as well as others defined in this specification, conveys to OS Vendors (OSVs) developing ACPI-compatible operating systems, the necessary interfaces that operating systems must manipulate to provide robust support for system configuration and power management.

While the definition of low-level hardware interfaces defined by ACPI 1.0 afforded OSPM implementations a certain level of stability, controls for existing and emerging diverse CPU architectures cannot be accommodated by this model as they can require a sequence of hardware manipulations intermixed with native CPU instructions to provide the ACPI-defined interface function. In this case, an ACPI-defined fixed hardware interface can be functionally implemented by the CPU manufacturer through an equivalent combination of both hardware and software and is defined by ACPI as Functional Fixed Hardware.

In IA-32-based systems, functional fixed hardware can be accommodated in an OS independent manner by using System Management Mode (SMM) based system firmware. Unfortunately, the nature of SMM-based code makes this type of OS independent implementation difficult if not impossible to debug. As such, this implementation approach is **not** recommended. In some cases, Functional Fixed Hardware implementations may require coordination with other OS components. As such, an OS independent implementation may not be viable.

OS-specific implementations of functional fixed hardware can be implemented using technical information supplied by the CPU manufacturer. The downside of this approach is that functional fixed hardware support must be developed for each OS. In some cases, the CPU manufacturer may provide a software component providing this support. In other cases support for the functional fixed hardware may be developed directly by the OS vendor.

The hardware register definition was expanded, in ACPI 2.0, to allow registers to exist in address spaces other than the System I/O address space. This is accomplished through the specification of an address space ID in the register definition (see [Section 5.2.3.2](#), “Generic Address Structure,” for more information). **When specifically directed by the CPU manufacturer**, the system firmware may define an interface as functional fixed hardware by indicating 0x7F (Functional Fixed Hardware), in the address space ID field for register definitions. It is emphasized that functional fixed hardware definitions may be declared in the ACPI system firmware **only as indicated by the CPU Manufacturer** for specific interfaces as the use of functional fixed hardware requires specific coordination with the OS vendor.

Only certain ACPI-defined interfaces may be implemented using functional fixed hardware and only when the interfaces are common across machine designs for example, systems sharing a common CPU architecture that does not support fixed hardware implementation of an ACPI-defined interface. OEMs are cautioned *not* to anticipate that functional fixed hardware support will be provided by OSPM differently on a system-by-system basis. The use of functional fixed hardware carries with it a reliance on OS specific software that must be considered. OEMs should consult OS vendors to ensure that specific functional fixed hardware interfaces are supported by specific operating systems.

**Note:** FFH is permitted and applicable to both full and HW-reduced ACPI implementations.

### 5.2.3.2 Generic Address Structure

The Generic Address Structure (GAS) provides the platform with a robust means to describe register locations. This structure, described below ([Table 5-25](#)), is used to express register addresses within tables defined by ACPI .

**Table 5-25 Generic Address Structure (GAS)**

Field	Byte Length	Byte Offset	Description																														
Address Space ID	1	0	<p>The address space where the data structure or register exists. Defined values are:</p> <table> <tr><td>0x00</td><td>System Memory space</td></tr> <tr><td>0x01</td><td>System I/O space</td></tr> <tr><td>0x02</td><td>PCI Configuration space</td></tr> <tr><td>0x03</td><td>Embedded Controller</td></tr> <tr><td>0x04</td><td>SMBus</td></tr> <tr><td>0x05</td><td>SystemCMOS</td></tr> <tr><td>0x06</td><td>PciBarTarget</td></tr> <tr><td>0x07</td><td>IPMI</td></tr> <tr><td>0x08</td><td>General PurposeIO</td></tr> <tr><td>0x09</td><td>GenericSerialBus</td></tr> <tr><td>0x0A</td><td>Platform Communications Channel (PCC)</td></tr> <tr><td>0x0B to 0x7E</td><td><i>Reserved</i></td></tr> <tr><td>0x7F</td><td>Functional Fixed Hardware</td></tr> <tr><td>0x80 to 0xBF</td><td><i>Reserved</i></td></tr> <tr><td>0xC0 to 0xFF</td><td>OEM Defined</td></tr> </table>	0x00	System Memory space	0x01	System I/O space	0x02	PCI Configuration space	0x03	Embedded Controller	0x04	SMBus	0x05	SystemCMOS	0x06	PciBarTarget	0x07	IPMI	0x08	General PurposeIO	0x09	GenericSerialBus	0x0A	Platform Communications Channel (PCC)	0x0B to 0x7E	<i>Reserved</i>	0x7F	Functional Fixed Hardware	0x80 to 0xBF	<i>Reserved</i>	0xC0 to 0xFF	OEM Defined
0x00	System Memory space																																
0x01	System I/O space																																
0x02	PCI Configuration space																																
0x03	Embedded Controller																																
0x04	SMBus																																
0x05	SystemCMOS																																
0x06	PciBarTarget																																
0x07	IPMI																																
0x08	General PurposeIO																																
0x09	GenericSerialBus																																
0x0A	Platform Communications Channel (PCC)																																
0x0B to 0x7E	<i>Reserved</i>																																
0x7F	Functional Fixed Hardware																																
0x80 to 0xBF	<i>Reserved</i>																																
0xC0 to 0xFF	OEM Defined																																
Register Bit Width	1	1	The size in bits of the given register. When addressing a data structure, this field must be zero.																														
Register Bit Offset	1	2	The bit offset of the given register at the given address. When addressing a data structure, this field must be zero.																														
Access Size	1	3	Specifies access size. Unless otherwise defined by the Address Space ID:																														
			<table> <tr><td>0</td><td>Undefined (legacy reasons)</td></tr> <tr><td>1</td><td>Byte access</td></tr> <tr><td>2</td><td>Word access</td></tr> <tr><td>3</td><td>Dword access</td></tr> <tr><td>4</td><td>QWord access</td></tr> </table>	0	Undefined (legacy reasons)	1	Byte access	2	Word access	3	Dword access	4	QWord access																				
0	Undefined (legacy reasons)																																
1	Byte access																																
2	Word access																																
3	Dword access																																
4	QWord access																																
Address	8	4	The 64-bit address of the data structure or register in the given address space (relative to the processor). (See below for specific formats.)																														

**Table 5-26 Address Space Format**

Address Space	Format	
0–System Memory	The 64-bit physical memory address (relative to the processor) of the register. 32-bit platforms must have the high DWORD set to 0.	
1–System I/O	The 64-bit I/O address (relative to the processor) of the register. 32-bit platforms must have the high DWORD set to 0.	
2–PCI Configuration Space	PCI Configuration space addresses must be confined to devices on PCI Segment Group 0, bus 0. This restriction exists to accommodate access to fixed hardware prior to PCI bus enumeration. The format of addresses are defined as follows:	
	WORD Location	Description
	Highest WORD	<i>Reserved</i> (must be 0)
	...	PCI Device number on bus 0
	...	PCI Function number
	Lowest WORD	Offset in the configuration space header
	For example: Offset 23h of Function 2 on device 7 on bus 0 segment 0 would be represented as: 0x000000700020023.	
0x7F–Functional Fixed Hardware	Use of GAS fields other than Address_Space_ID is specified by the CPU manufacturer. The use of functional fixed hardware carries with it a reliance on OS specific software that must be considered. OEMs should consult OS vendors to ensure that specific functional fixed hardware interfaces are supported by specific operating systems.	
0x0A–PCC		

## 5.2.4 Universally Unique Identifiers (UUIDs)

UUIDs (Universally Unique IDentifiers), also known as GUIDs (Globally Unique IDentifiers) are 128 bit long values that extremely likely to be different from all other UUIDs generated until 3400 A.D. UUIDs are used to distinguish between callers of ASL methods, such as \_DSM and \_OSC.

The format of both the binary and string representations of UUIDs along with an algorithm to generate them is specified in ISO/IEC 11578:1996 *Information technology - Open Systems Interconnection - Remote Procedure Call (RPC)* and can be found as part of the *Distributed Computing Environment 1.1: Remote Procedure Call* specification, which can be found in “Links to ACPI-Related Documents” (<http://uefi.org/acpi>) under the heading “Universal Uniform Identifiers (UUID)”.

## 5.2.5 Root System Description Pointer (RSDP)

During OS initialization, OSPM must obtain the Root System Description Pointer (RSDP) structure from the platform. When OSPM locates the Root System Description Pointer (RSDP) structure, it then locates the Root System Description Table (RSĐT) or the Extended Root System Description Table (XSDT) using the physical system address supplied in the RSDP.

### 5.2.5.1 Finding the RSDP on IA-PC Systems

OSPM finds the Root System Description Pointer (RSDP) structure by searching physical memory ranges on 16-byte boundaries for a valid Root System Description Pointer structure signature and checksum match as follows:

- The first 1 KB of the Extended BIOS Data Area (EBDA). For EISA or MCA systems, the EBDA can be found in the two-byte location 40:0Eh on the BIOS data area.
- The BIOS read-only memory space between 0E0000h and OFFFFFh.

### 5.2.5.2 Finding the RSDP on UEFI Enabled Systems

In Unified Extensible Firmware Interface (UEFI) enabled systems, a pointer to the RSDP structure exists within the EFI System Table. The OS loader is provided a pointer to the EFI System Table at invocation. The OS loader must retrieve the pointer to the RSDP structure from the EFI System Table and convey the pointer to OSPM, using an OS dependent data structure, as part of the hand off of control from the OS loader to the OS.

The OS loader locates the pointer to the RSDP structure by examining the EFI Configuration Table within the EFI System Table. EFI Configuration Table entries consist of Globally Unique Identifier (GUID)/table pointer pairs. The UEFI specification defines two GUIDs for ACPI; one for ACPI 1.0 and the other for ACPI 2.0 or later specification revisions.

The EFI GUID for a pointer to the ACPI 1.0 specification RSDP structure is:

- eb9d2d30-2d88-11d3-9a16-0090273fc14d.

The EFI GUID for a pointer to the ACPI 2.0 or later specification RSDP structure is:

- 8868e871-e4f1-11d3-bc22-0080c73c8881.

The OS loader for an ACPI-compatible OS will search for an RSDP structure pointer ([Table 5-27](#)) using the current revision GUID first and if it finds one, will use the corresponding RSDP structure pointer. If the GUID is not found then the OS loader will search for the RSDP structure pointer using the ACPI 1.0 version GUID.

The OS loader must retrieve the pointer to the RSDP structure from the EFI System Table **before** assuming platform control via the EFI ExitBootServices interface. See the UEFI Specification for more information.

### 5.2.5.3 Root System Description Pointer (RSDP) Structure

The revision number contained within the structure indicates the size of the table structure.

**Table 5-27 RSDP Structure**

Field	Byte Length	Byte Offset	Description
Signature	8	0	“RSD PTR ” (Notice that this signature must contain a trailing blank character.)
Checksum	1	8	This is the checksum of the fields defined in the ACPI 1.0 specification. This includes only the first 20 bytes of this table, bytes 0 to 19, including the checksum field. These bytes must sum to zero.
OEMID	6	9	An OEM-supplied string that identifies the OEM.
Revision	1	15	The revision of this structure. Larger revision numbers are backward compatible to lower revision numbers. The ACPI version 1.0 revision number of this table is zero. The ACPI version 1.0 RSDP Structure only includes the first 20 bytes of this table, bytes 0 to 19. It does not include the Length field and beyond. The current value for this field is 2.
RsdtaAddress	4	16	32 bit physical address of the RSDT.
Length*	4	20	The length of the table, in bytes, including the header, starting from offset 0. This field is used to record the size of the entire table. This field is not available in the ACPI version 1.0 RSDP Structure.
XsdtAddress*	8	24	64 bit physical address of the XSDT.
Extended Checksum*	1	32	This is a checksum of the entire table, including both checksum fields.
Reserved*	3	33	Reserved field

\* These fields are only valid when the Revision value is 2 or above.

### 5.2.6 System Description Table Header

All system description tables begin with the structure shown in [Table 5-28](#). The Signature field determines the content of the system description table. System description table signatures defined by this specification are listed in [Table 5-29](#).

**Table 5-28** DESCRIPTION\_HEADER Fields

Field	Byte Length	Byte Offset	Description
Signature	4	0	The ASCII string representation of the table identifier. Notice that if OSPM finds a signature in a table that is not listed in <a href="#">Table 5-29</a> , OSPM ignores the entire table (it is not loaded into ACPI namespace); OSPM ignores the table even though the values in the Length and Checksum fields are correct.
Length	4	4	The length of the table, in bytes, including the header, starting from offset 0. This field is used to record the size of the entire table.
Revision	1	8	The revision of the structure corresponding to the signature field for this table. Larger revision numbers are backward compatible to lower revision numbers with the same signature.
Checksum	1	9	The entire table, including the checksum field, must add to zero to be considered valid.
OEMID	6	10	An OEM-supplied string that identifies the OEM.
OEM Table ID	8	16	An OEM-supplied string that the OEM uses to identify the particular data table. This field is particularly useful when defining a definition block to distinguish definition block functions. The OEM assigns each dissimilar table a new OEM Table ID.
OEM Revision	4	24	An OEM-supplied revision number. Larger numbers are assumed to be newer revisions.
Creator ID	4	28	Vendor ID of utility that created the table. For tables containing Definition Blocks, this is the ID for the ASL Compiler.
Creator Revision	4	32	Revision of utility that created the table. For tables containing Definition Blocks, this is the revision for the ASL Compiler.

For OEMs, good design practices will ensure consistency when assigning OEMID and OEM Table ID fields in any table. The intent of these fields is to allow for a binary control system that support services can use. Because many support functions can be automated, it is useful when a tool can programmatically determine which table release is a compatible and more recent revision of a prior table on the same OEMID and OEM Table ID.

[Table 5-29](#) and [Table 5-30](#) contain the system description table signatures defined by this specification. These system description tables may be defined by ACPI and documented within this specification ([Table 5-29](#)) or they may be simply reserved by ACPI and defined by other industry specifications ([Table 5-30](#)). This allows OS and platform specific tables to be defined and pointed to by the RSDT/XSDT as needed. For tables defined by other industry specifications, the ACPI specification acts as gatekeeper to avoid collisions in table signatures.

Table signatures will be reserved by the ACPI promoters and posted independently of this specification in ACPI errata and clarification documents on the ACPI web site. Requests to reserve a 4-byte alphanumeric table signature should be sent to the email address [info@acpi.info](mailto:info@acpi.info) and should include the purpose of the table and reference URL to a document that describes the table format. Tables defined outside of the ACPI specification may define data value encodings in either little endian or big endian format. For the

purpose of clarity, external table definition documents should include the endian-ness of their data value encodings.

Since reference URLs can change over time and may not always be up-to-date in this specification, a separate document containing the latest known reference URLs can be found at “Links to ACPI-Related Documents” (<http://uefi.org/acpi>), which should conspicuously be placed in the same location as this specification.

**Table 5-29 DESCRIPTION\_HEADER Signatures for tables defined by ACPI**

Signature	Description	Reference
“APIC”	Multiple APIC Description Table	<a href="#">Section 5.2.12</a> , “Multiple APIC Description Table”
“BERT”	Boot Error Record Table	<a href="#">Section 18.3.1</a> , “Boot Error Source”
“BGRT”	Boot Graphics Resource Table	<a href="#">Section 5.2.22</a> , “Boot Graphics Resource Table”
“CPEP”	Corrected Platform Error Polling Table	<a href="#">Section 5.2.18</a> , “Corrected Platform Error Polling Table”
“DSDT”	Differentiated System Description Table	<a href="#">Section 5.2.11.1</a> , “Differentiated System Description Table”
“ECDT”	Embedded Controller Boot Resources Table	<a href="#">Section 5.2.15</a> “Embedded Controller Boot Resources Table”
“EINJ”	Error Injection Table	<a href="#">Section 18.6.1</a> , “Error Injection Table”
“ERST”	Error Record Serialization Table	<a href="#">Section 18.5</a> , “Error Serialization”
“FACP”	Fixed ACPI Description Table (FADT)	<a href="#">Section 5.2.9</a> , “Fixed ACPI Description Table”
“FACS”	Firmware ACPI Control Structure	<a href="#">Section 5.2.10</a> , “Firmware ACPI Control Structure”
“FPDT”	Firmware Performance Data Table	<a href="#">Section 5.2.23</a> , “Firmware Performance Data Table”
“GTDT”	Generic Timer Description Table	<a href="#">Section 5.2.24</a> , “Generic Timer Description Table”
“HEST”	Hardware Error Source Table	<a href="#">Section 18.3.2</a> , “ACPI Error Source”
“MSCT”	Maximum System Characteristics Table	<a href="#">Section 5.2.19</a> , “Maximum System Characteristics Table”
“MPST”	Memory Power StateTable	<a href="#">Section 5.2.21</a> , “Memory Power StateTable”
“NFIT”	NVDIMM Firmware Interface Table	<a href="#">Section 5.2.25</a> , “NVDIMM Firmware Interface Table (NFIT)”
“OEMx”	OEM Specific Information Tables	OEM Specific tables. All table signatures starting with “OEM” are reserved for OEM use.
“PCCT”	Platform Communications Channel Table	<a href="#">Section 14.1</a> “Platform Communications Channel Table”
“PMTT”	Platform Memory Topology Table	<a href="#">Section 5.2.21.12</a> , Memory Topology Table (PMTT)
“PSDT”	Persistent System Description Table	<a href="#">Section 5.2.11.3</a> , “Persistent System Description Table”
“RASF”	ACPI RAS FeatureTable	<a href="#">Section 5.2.20.3</a> , “ACPI RAS Feature Table”
“RSDT”	Root System Description Table	<a href="#">Section 5.2.7</a> , “Root System Description Table”

Signature	Description	Reference
"SBST"	Smart Battery Specification Table	<a href="#">Section 5.2.14</a> , "Smart Battery Table"
"SDEV"	Secure DEVices Table	<a href="#">Section 5.2.26</a> "Secure Devices (SDEV) Table"
"SLIT"	System Locality Distance Information Table	<a href="#">Section 5.2.16.6</a> , "System Locality Distance Information Table"
"SRAT"	System Resource Affinity Table	<a href="#">Section 5.2.16</a> , "System Resource Affinity Table"
"SSDT"	Secondary System Description Table	<a href="#">Section 5.2.11.2</a> , "Secondary System Description Table"
"XSDT"	Extended System Description Table	<a href="#">Section 5.2.8</a> , "Extended System Description Table"

**Table 5-30 DESCRIPTION\_HEADER Signatures for tables reserved by ACPI**

Signature	Description and External Reference
"BOOT"	Reserved Signature
"CDIT"	Component Distance Information Table See "Links to ACPI-Related Documents" ( <a href="http://uefi.org/acpi">http://uefi.org/acpi</a> ) under the heading "Component Distance Information Table"
"CRAT"	Component Resource Attribute Table See "Links to ACPI-Related Documents" ( <a href="http://uefi.org/acpi">http://uefi.org/acpi</a> ) under the heading "Component Resource Attribute Table"
"CSRT"	Core System Resource Table See "Links to ACPI-Related Documents" ( <a href="http://uefi.org/acpi">http://uefi.org/acpi</a> ) under the heading "Core System Resource Table".
"DBG2"	Debug Port Table 2 Microsoft Debug Port Table 2 Specification See "Links to ACPI-Related Documents" ( <a href="http://uefi.org/acpi">http://uefi.org/acpi</a> ) under the heading "Debug Port Table 2".
"DBGP"	Debug Port Table See "Links to ACPI-Related Documents" ( <a href="http://uefi.org/acpi">http://uefi.org/acpi</a> ) under the heading "Debug Port Table".
"DMAR"	DMA Remapping Table See "Links to ACPI-Related Documents" ( <a href="http://uefi.org/acpi">http://uefi.org/acpi</a> ) under the heading "DMA Remapping Table".
"DPPT"	DMA Protection Policy Table See "Links to ACPI-Related Documents" ( <a href="http://uefi.org/acpi">http://uefi.org/acpi</a> ) under the heading "DMA Protection Policy Table".
"DRTM"	Dynamic Root of Trust for Measurement Table See "Links to ACPI-Related Documents" ( <a href="http://uefi.org/acpi">http://uefi.org/acpi</a> ) under the heading "TCG D-RTM Architecture Specification".
"ETDT"	Event Timer Description Table (Obsolete) IA-PC Multimedia Timers Specification. This signature has been superseded by "HPET" and is now obsolete.
"HPET"	IA-PC High Precision Event Timer Table IA-PC High Precision Event Timer Specification See "Links to ACPI-Related Documents" ( <a href="http://uefi.org/acpi">http://uefi.org/acpi</a> ) under the heading "IA-PC High Precision Event Timer Table".
"IBFT"	iSCSI Boot Firmware Table See "Links to ACPI-Related Documents" ( <a href="http://uefi.org/acpi">http://uefi.org/acpi</a> ) under the heading "iSCSI Boot Firmware Table".

<b>Signature</b>	<b>Description and External Reference</b>
"IORT"	I/O Remapping Table See "Links to ACPI-Related Documents" ( <a href="http://uefi.org/acpi">http://uefi.org/acpi</a> ) under the heading "I/O Remapping Table"
"IVRS"	I/O Virtualization Reporting Structure See "Links to ACPI-Related Documents" ( <a href="http://uefi.org/acpi">http://uefi.org/acpi</a> ) under the heading "I/O Virtualization Reporting Structure".
"LPIT"	Low Power Idle Table See "Links to ACPI-Related Documents" ( <a href="http://uefi.org/acpi">http://uefi.org/acpi</a> ) under the heading "Low Power Idle Table".
"MCFG"	PCI Express memory mapped configuration space base address Description Table PCI Firmware Specification, Revision 3.0 See "Links to ACPI-Related Documents" ( <a href="http://uefi.org/acpi">http://uefi.org/acpi</a> ) under the heading "PCI Sig".
"MCHI"	Management Controller Host Interface Table DSP0256 Management Component Transport Protocol (MCTP) Host Interface Specification See "Links to ACPI-Related Documents" ( <a href="http://uefi.org/acpi">http://uefi.org/acpi</a> ) under the heading "Management Controller Host Interface Table".
"MSDM"	Microsoft Data Management Table See: Microsoft Data Management Table Specification See "Links to ACPI-Related Documents" ( <a href="http://uefi.org/acpi">http://uefi.org/acpi</a> ) under the heading "Microsoft Data Management Table".
"SDEI"	Software Delegated Exceptions Interface See "Links to ACPI-Related Documents" ( <a href="http://uefi.org/acpi">http://uefi.org/acpi</a> ) under the heading "Software Delegated Exceptions Interface."
"SLIC"	Microsoft Software Licensing Table Specification See "Links to ACPI-Related Documents" ( <a href="http://uefi.org/acpi">http://uefi.org/acpi</a> ) under the heading "Microsoft Software Licensing Table Specification".
"SPCR"	Serial Port Console Redirection Table Microsoft Serial Port Console Redirection Table See "Links to ACPI-Related Documents" ( <a href="http://uefi.org/acpi">http://uefi.org/acpi</a> ) under the heading "Serial Port Console Redirection Table".
"SPMI"	Server Platform Management Interface Table See "Links to ACPI-Related Documents" ( <a href="http://uefi.org/acpi">http://uefi.org/acpi</a> ) under the heading "Server Platform Management Interface Table".
"STAO"	_STA Override Table See "Links to ACPI-Related Documents" ( <a href="http://uefi.org/acpi">http://uefi.org/acpi</a> ) under the heading "_STA Override Table".
"TCPA"	Trusted Computing Platform Alliance Capabilities Table TCPA PC Specific Implementation Specification See "Links to ACPI-Related Documents" ( <a href="http://uefi.org/acpi">http://uefi.org/acpi</a> ) under the heading "Trusted Computing Platform Alliance Capabilities Table".

Signature	Description and External Reference
TPM2	Trusted Platform Module 2 Table See: Trusted Platform Module 2 Table Specification See "Links to ACPI-Related Documents" ( <a href="http://uefi.org/acpi">http://uefi.org/acpi</a> ) under the heading "Trusted Platform Module 2 Table".
"UEFI"	UEFI ACPI Data Table UEFI Specification See "Links to ACPI-Related Documents" ( <a href="http://uefi.org/acpi">http://uefi.org/acpi</a> ) under the heading "Unified Extensible Firmware Interface Specifications".
"WAET"	Windows ACPI Emulated Devices Table See "Links to ACPI-Related Documents" ( <a href="http://uefi.org/acpi">http://uefi.org/acpi</a> ) under the heading "Windows ACPI Emulated Devices Table".
"WDAT"	Watch Dog Action Table Requirements for Hardware Watchdog Timers Supported by Windows – Design Specification See "Links to ACPI-Related Documents" ( <a href="http://uefi.org/acpi">http://uefi.org/acpi</a> ) under the heading "Watchdog Action Table".
"WDRT"	Watchdog Resource Table Watchdog Timer Hardware Requirements for Windows Server 2003 See "Links to ACPI-Related Documents" ( <a href="http://uefi.org/acpi">http://uefi.org/acpi</a> ) under the heading "Watchdog Timer Resource Table (WDRT)".
"WPBT"	Windows Platform Binary Table See "Links to ACPI-Related Documents" ( <a href="http://uefi.org/acpi">http://uefi.org/acpi</a> ) under the heading "Windows Platform Binary Table".
"WSMT"	See "Links to ACPI-Related Documents" ( <a href="http://uefi.org/acpi">http://uefi.org/acpi</a> ) under the heading "Windows SMM Security Mitigation Table (WSMT)." .
"XENV"	Xen Project Table See "Links to ACPI-Related Documents" ( <a href="http://uefi.org/acpi">http://uefi.org/acpi</a> ) under the heading "Xen Project Table".

## 5.2.7 Root System Description Table (RSDT)

OSPM locates that Root System Description Table by following the pointer in the RSDP structure. The RSDT, shown in [Table 5-31](#), starts with the signature 'RSDT' followed by an array of physical pointers to other system description tables that provide various information on other standards defined on the current system. OSPM examines each table for a known signature. Based on the signature, OSPM can then interpret the implementation-specific data within the table.

Platforms provide the RSDT to enable compatibility with ACPI 1.0 operating systems. The XSDT, described in the next section, supersedes RSDT functionality.

**Table 5-31 Root System Description Table Fields (RSDT)**

Field	Byte Length	Byte Offset	Description
Header			

Field	Byte Length	Byte Offset	Description
Signature	4	0	'RSDT' Signature for the Root System Description Table.
Length	4	4	Length, in bytes, of the entire RSDT. The length implies the number of Entry fields ( $n$ ) at the end of the table.
Revision	1	8	1
Checksum	1	9	Entire table must sum to zero.
OEMID	6	10	OEM ID
OEM Table ID	8	16	For the RSDT, the table ID is the manufacture model ID. This field must match the OEM Table ID in the FADT.
OEM Revision	4	24	OEM revision of RSDT table for supplied OEM Table ID.
Creator ID	4	28	Vendor ID of utility that created the table. For tables containing Definition Blocks, this is the ID for the ASL Compiler.
Creator Revision	4	32	Revision of utility that created the table. For tables containing Definition Blocks, this is the revision for the ASL Compiler.
Entry	$4*n$	36	An array of 32-bit physical addresses that point to other DESCRIPTION_HEADERs. OSPM assumes at least the DESCRIPTION_HEADER is addressable, and then can further address the table based upon its Length field.

### 5.2.8 Extended System Description Table (XSDT)

The XSDT provides identical functionality to the RSDT but accommodates physical addresses of DESCRIPTION\_HEADERs that are larger than 32 bits. Notice that both the XSDT and the RSDT can be pointed to by the RSDP structure. An ACPI-compatible OS must use the XSDT if present.

**Table 5-32 Extended System Description Table Fields (XSDT)**

Field	Byte Length	Byte Offset	Description
Header			
Signature	4	0	'XSDT'. Signature for the Extended System Description Table.
Length	4	4	Length, in bytes, of the entire table. The length implies the number of Entry fields ( $n$ ) at the end of the table.
Revision	1	8	1
Checksum	1	9	Entire table must sum to zero.
OEMID	6	10	OEM ID
OEM Table ID	8	16	For the XSDT, the table ID is the manufacture model ID. This field must match the OEM Table ID in the FADT.
OEM Revision	4	24	OEM revision of XSDT table for supplied OEM Table ID.
Creator ID	4	28	Vendor ID of utility that created the table. For tables containing Definition Blocks, this is the ID for the ASL Compiler.

Field	Byte Length	Byte Offset	Description
Creator Revision	4	32	Revision of utility that created the table. For tables containing Definition Blocks, this is the revision for the ASL Compiler.
Entry	$8*n$	36	An array of 64-bit physical addresses that point to other DESCRIPTION_HEADERS. OSPM assumes at least the DESCRIPTION_HEADER is addressable, and then can further address the table based upon its Length field.

### 5.2.9 Fixed ACPI Description Table (FADT)

The Fixed ACPI Description Table (FADT) defines various fixed hardware ACPI information vital to an ACPI-compatible OS, such as the base address for the following hardware registers blocks: PM1a\_EVT\_BLK, PM1b\_EVT\_BLK, PM1a\_CNT\_BLK, PM1b\_CNT\_BLK, PM2\_CNT\_BLK, PM\_TMR\_BLK, GPE0\_BLK, and GPE1\_BLK.

The FADT also has a pointer to the DSDT that contains the Differentiated Definition Block, which in turn provides variable information to an ACPI-compatible OS concerning the base system design.

All fields in the FADT that provide hardware addresses provide processor-relative physical addresses.

**Note:** If the HW\_REDUCED\_ACPI flag in the table is set, OSPM will ignore fields related to the ACPI HW register interface: Fields at offsets 46 through 108 and 148 through 232, as well as FADT Flag bits 1, 2, 3, 7, 8, 13, 14, 16, and 17.

**Note:** In all cases where the FADT contains a 32-bit field and a corresponding 64-bit field the 64-bit field should always be preferred by the OSPM if the 64-bit field contains a non-zero value which can be used by the OSPM. In this case, the 32-bit field must be ignored regardless of whether or not it is zero, and whether or not it is the same value as the 64-bit field. The 32-bit field should only be used if the corresponding 64-bit field contains a zero value, or if the 64-bit value can not be used by the OSPM subject to e.g. CPU addressing limitations.

**Table 5-33 FADT Format**

Field	Byte Length	Byte Offset	Description
Header			
Signature	4	0	'FACP'. Signature for the Fixed ACPI Description Table. (This signature predates ACPI 1.0, explaining the mismatch with this table's name.)
Length	4	4	Length, in bytes, of the entire FADT.
FADT Major Version	1	8	6 Major Version of this FADT structure, in "Major.Minor" form, where 'Minor' is the value in the Minor Version Field (Byte offset 131 in this table)
Checksum	1	9	Entire table must sum to zero.
OEMID	6	10	OEM ID

Field	Byte Length	Byte Offset	Description																				
OEM Table ID	8	16	For the FADT, the table ID is the manufacturer model ID. This field must match the OEM Table ID in the RSDT.																				
OEM Revision	4	24	OEM revision of FADT for supplied OEM Table ID.																				
Creator ID	4	28	Vendor ID of utility that created the table. For tables containing Definition Blocks, this is the ID for the ASL Compiler.																				
Creator Revision	4	32	Revision of utility that created the table. For tables containing Definition Blocks, this is the revision for the ASL Compiler.																				
FIRMWARE_CTRL	4	36	Physical memory address of the FACS, where OSPM and Firmware exchange control information. See <a href="#">Section 5.2.6</a> , “Root System Description Table,” for a description of the FACS. If the X_FIRMWARE_CTRL field contains a non zero value which can be used by the OSPM, then this field must be ignored by the OSPM. If the HARDWARE_REDUCED_ACPI flag is set, and both this field and the X_FIRMWARE_CTRL field are zero, there is no FACS available.																				
DSDT	4	40	Physical memory address of the DSDT. If the X_DSDT field contains a non-zero value which can be used by the OSPM, then this field must be ignored by the OSPM.																				
Reserved	1	44	ACPI 1.0 defined this offset as a field named INT_MODEL, which was eliminated in ACPI 2.0. Platforms should set this field to zero but field values of one are also allowed to maintain compatibility with ACPI 1.0.																				
Preferred_PM_Profile	1	45	<p>This field is set by the OEM to convey the preferred power management profile to OSPM. OSPM can use this field to set default power management policy parameters during OS installation.</p> <p>Field Values:</p> <table> <tr><td>0</td><td>Unspecified</td></tr> <tr><td>1</td><td>Desktop</td></tr> <tr><td>2</td><td>Mobile</td></tr> <tr><td>3</td><td>Workstation</td></tr> <tr><td>4</td><td>Enterprise Server</td></tr> <tr><td>5</td><td>SOHO Server</td></tr> <tr><td>6</td><td>Appliance PC</td></tr> <tr><td>7</td><td>Performance Server</td></tr> <tr><td>8)</td><td>Tablet</td></tr> <tr><td>&gt;8</td><td><i>Reserved</i></td></tr> </table>	0	Unspecified	1	Desktop	2	Mobile	3	Workstation	4	Enterprise Server	5	SOHO Server	6	Appliance PC	7	Performance Server	8)	Tablet	>8	<i>Reserved</i>
0	Unspecified																						
1	Desktop																						
2	Mobile																						
3	Workstation																						
4	Enterprise Server																						
5	SOHO Server																						
6	Appliance PC																						
7	Performance Server																						
8)	Tablet																						
>8	<i>Reserved</i>																						

Field	Byte Length	Byte Offset	Description
SCI_INT	2	46	System vector the SCI interrupt is wired to in 8259 mode. On systems that do not contain the 8259, this field contains the Global System interrupt number of the SCI interrupt. OSPM is required to treat the ACPI SCI interrupt as a sharable, level, active low interrupt.
SMI_CMD	4	48	System port address of the SMI Command Port. During ACPI OS initialization, OSPM can determine that the ACPI hardware registers are owned by SMI (by way of the SCI_EN bit), in which case the ACPI OS issues the ACPI_ENABLE command to the SMI_CMD port. The SCI_EN bit effectively tracks the ownership of the ACPI hardware registers. OSPM issues commands to the SMI_CMD port synchronously from the boot processor. This field is reserved and must be zero on system that does not support System Management mode.
ACPI_ENABLE	1	52	The value to write to SMI_CMD to disable SMI ownership of the ACPI hardware registers. The last action SMI does to relinquish ownership is to set the SCI_EN bit. During the OS initialization process, OSPM will synchronously wait for the transfer of SMI ownership to complete, so the ACPI system releases SMI ownership as quickly as possible. This field is reserved and must be zero on systems that do not support Legacy Mode.
ACPI_DISABLE	1	53	The value to write to SMI_CMD to re-enable SMI ownership of the ACPI hardware registers. This can only be done when ownership was originally acquired from SMI by OSPM using ACPI_ENABLE. An OS can hand ownership back to SMI by relinquishing use to the ACPI hardware registers, masking off all SCI interrupts, clearing the SCI_EN bit and then writing ACPI_DISABLE to the SMI_CMD port from the boot processor. This field is reserved and must be zero on systems that do not support Legacy Mode.
S4BIOS_REQ	1	54	The value to write to SMI_CMD to enter the S4BIOS state. The S4BIOS state provides an alternate way to enter the S4 state where the firmware saves and restores the memory context. A value of zero in S4BIOS_F indicates S4BIOS_REQ is not supported. (See <a href="#">Table 5-37</a> )
PSTATE_CNT	1	55	If non-zero, this field contains the value OSPM writes to the SMI_CMD register to assume processor performance state control responsibility.
PM1a_EVT_BLK	4	56	System port address of the PM1a Event Register Block. See <a href="#">Section 4.8.3.1</a> , “PM1 Event Grouping,” for a hardware description layout of this register block. This is a required field. If the X_PM1a_CNT_BLK field contains a non zero value which can be used by the OSPM, then this field must be ignored by the OSPM.

Field	Byte Length	Byte Offset	Description
PM1b_EVT_BLK	4	60	System port address of the PM1b Event Register Block. See <a href="#">Section 4.8.3.1</a> , “PM1 Event Grouping,” for a hardware description layout of this register block. This field is optional; if this register block is not supported, this field contains zero. If the X_PM1b_EVT_BLK field contains a non zero value which can be used by the OSPM, then this field must be ignored by the OSPM.
PM1a_CNT_BLK	4	64	System port address of the PM1a Control Register Block. See <a href="#">Section 4.8.3.2</a> , “PM1 Control Grouping,” for a hardware description layout of this register block. This is a required field. If the X_PM1a_CNT_BLK field contains a non zero value which can be used by the OSPM, then this field must be ignored by the OSPM.
PM1b_CNT_BLK	4	68	System port address of the PM1b Control Register Block. See <a href="#">Section 4.8.3.2</a> , “PM1 Control Grouping,” for a hardware description layout of this register block. This field is optional; if this register block is not supported, this field contains zero. If the X_PM1b_CNT_BLK field contains a non zero value which can be used by the OSPM, then this field must be ignored by the OSPM.
PM2_CNT_BLK	4	72	System port address of the PM2 Control Register Block. See <a href="#">Section 4.8.3.4</a> , “PM2 Control (PM2_CNT),” for a hardware description layout of this register block. This field is optional; if this register block is not supported, this field contains zero. If the X_PM2_CNT_BLK field contains a non zero value which can be used by the OSPM, then this field must be ignored by the OSPM.
PM_TMR_BLK	4	76	System port address of the Power Management Timer Control Register Block. See <a href="#">Section 4.8.3.3</a> , “Power Management Timer (PM_TMR)” for a hardware description layout of this register block. This is an optional field; if this register block is not supported, this field contains zero. If the X_PM2_CNT_BLK field contains a non-zero value which can be used by the OSPM, then this field must be ignored by the OSPM.
GPE0_BLK	4	80	System port address of General-Purpose Event 0 Register Block. See <a href="#">Section 4.8.4.1</a> , “General-Purpose Event Register Blocks,” for a hardware description of this register block. This is an optional field; if this register block is not supported, this field contains zero. If the X_GPE0_BLK field contains a nonzero value which can be used by the OSPM, then this field must be ignored by the OSPM.
GPE1_BLK	4	84	System port address of General-Purpose Event 1 Register Block. See <a href="#">Section 4.8.4.1</a> , “General-Purpose Event Register Blocks,” for a hardware description of this register block. This is an optional field; if this register block is not supported, this field contains zero. If the X_GPE1_BLK field contains a nonzero value which can be used by the OSPM, then this field must be ignored by the OSPM.

Field	Byte Length	Byte Offset	Description
PM1_EVT_LEN	1	88	Number of bytes decoded by PM1a_EVT_BLK and, if supported, PM1b_EVT_BLK. This value is $\geq 4$ .
PM1_CNT_LEN	1	89	Number of bytes decoded by PM1a_CNT_BLK and, if supported, PM1b_CNT_BLK. This value is $\geq 2$ .
PM2_CNT_LEN	1	90	Number of bytes decoded by PM2_CNT_BLK. Support for the PM2 register block is optional. If supported, this value is $\geq 1$ . If not supported, this field contains zero.
PM_TMR_LEN	1	91	Number of bytes decoded by PM_TMR_BLK. If the PM Timer is supported, this field's value must be 4. If not supported, this field contains zero.
GPE0_BLK_LEN	1	92	Number of bytes decoded by GPE0_BLK. The value is a non-negative multiple of 2.
GPE1_BLK_LEN	1	93	Number of bytes decoded by GPE1_BLK. The value is a non-negative multiple of 2.
GPE1_BASE	1	94	Offset within the ACPI general-purpose event model where GPE1 based events start.
CST_CNT	1	95	If non-zero, this field contains the value OSPM writes to the SMI_CMD register to indicate OS support for the _CST object and C States Changed notification.
P_LVL2_LAT	2	96	The worst-case hardware latency, in microseconds, to enter and exit a C2 state. A value $> 100$ indicates the system does not support a C2 state.
P_LVL3_LAT	2	98	The worst-case hardware latency, in microseconds, to enter and exit a C3 state. A value $> 1000$ indicates the system does not support a C3 state.

Field	Byte Length	Byte Offset	Description
FLUSH_SIZE	2	100	<p>If WBINVD=0, the value of this field is the number of flush strides that need to be read (using cacheable addresses) to completely flush dirty lines from any processor's memory caches. Notice that the value in FLUSH_STRIDE is typically the smallest cache line width on any of the processor's caches (for more information, see the FLUSH_STRIDE field definition). If the system does not support a method for flushing the processor's caches, then FLUSH_SIZE and WBINVD are set to zero. Notice that this method of flushing the processor caches has limitations, and WBINVD=1 is the preferred way to flush the processors caches. This value is typically at least 2 times the cache size. The maximum allowed value for FLUSH_SIZE multiplied by FLUSH_STRIDE is 2 MB for a typical maximum supported cache size of 1 MB. Larger cache sizes are supported using WBINVD=1.</p> <p>This value is ignored if WBINVD=1.</p> <p>This field is maintained for ACPI 1.0 processor compatibility on existing systems. Processors in new ACPI-compatible systems are required to support the WBINVD function and indicate this to OSPM by setting the WBINVD field = 1.</p>
FLUSH_STRIDE	2	102	<p>If WBINVD=0, the value of this field is the cache line width, in bytes, of the processor's memory caches. This value is typically the smallest cache line width on any of the processor's caches. For more information, see the description of the FLUSH_SIZE field.</p> <p>This value is ignored if WBINVD=1.</p> <p>This field is maintained for ACPI 1.0 processor compatibility on existing systems. Processors in new ACPI-compatible systems are required to support the WBINVD function and indicate this to OSPM by setting the WBINVD field = 1.</p>
DUTY_OFFSET	1	104	The zero-based index of where the processor's duty cycle setting is within the processor's P_CNT register.

Field	Byte Length	Byte Offset	Description
DUTY_WIDTH	1	105	<p>The bit width of the processor's duty cycle setting value in the P_CNT register. Each processor's duty cycle setting allows the software to select a nominal processor frequency below its absolute frequency as defined by:</p> $\text{THTL\_EN} = 1$ $\text{BF} * \text{DC}/(2^{\text{DUTY\_WIDTH}})$ <p>Where:</p> <p>BF—Base frequency</p> <p>DC—Duty cycle setting</p> <p>When THTL_EN is 0, the processor runs at its absolute BF. A DUTY_WIDTH value of 0 indicates that processor duty cycle is not supported and the processor continuously runs at its base frequency.</p>
DAY_ALRM	1	106	The RTC CMOS RAM index to the day-of-month alarm value. If this field contains a zero, then the RTC day of the month alarm feature is not supported. If this field has a non-zero value, then this field contains an index into RTC RAM space that OSPM can use to program the day of the month alarm. See <a href="#">Section 4.8.2.4</a> “Real Time Clock Alarm,” for a description of how the hardware works.
MON_ALRM	1	107	The RTC CMOS RAM index to the month of year alarm value. If this field contains a zero, then the RTC month of the year alarm feature is not supported. If this field has a non-zero value, then this field contains an index into RTC RAM space that OSPM can use to program the month of the year alarm. If this feature is supported, then the DAY_ALRM feature must be supported also.
CENTURY	1	108	The RTC CMOS RAM index to the century of data value (hundred and thousand year decimals). If this field contains a zero, then the RTC centenary feature is not supported. If this field has a non-zero value, then this field contains an index into RTC RAM space that OSPM can use to program the centenary field.
IAPC_BOOT_ARCH	2	109	IA-PC Boot Architecture Flags. See <a href="#">Table 5-35</a> for a description of this field.
Reserved	1	111	Must be 0.
Flags	4	112	Fixed feature flags. See <a href="#">Table 5-34</a> for a description of this field.
RESET_REG	12	116	<p>The address of the reset register represented in Generic Address Structure format (See <a href="#">Section 4.8.3.6</a>, “Reset Register,” for a description of the reset mechanism.)</p> <p><b>Note:</b> Only System I/O space, System Memory space and PCI Configuration space (bus #0) are valid for values for Address_Space_ID. Also, Register_Bit_Width must be 8 and Register_Bit_Offset must be 0.</p>

Field	Byte Length	Byte Offset	Description
RESET_VALUE	1	128	Indicates the value to write to the RESET_REG port to reset the system. (See <a href="#">Section 4.8.3.6</a> , "Reset Register," for a description of the reset mechanism.)
ARM_BOOT_ARCH	2	129	ARM Boot Architecture Flags. See <a href="#">Table 5-36</a> for a description of this field.
FADT Minor Version	1	131	3 Minor Version of this FADT structure, in "Major.Minor" form, where 'Major' is the value in the Major Version Field (Byte offset 8 in this table).
X_FIRMWARE_CTRL	8	132	Extended physical address of the FACS. If this field contains a nonzero value which can be used by the OSPM, then the FIRMWARE_CTRL field must be ignored by the OSPM. If the HARDWARE_REDUCED_ACPI flag is set, and both this field and the FIRMWARE_CTRL field are zero, there is no FACS available.
X_DSDT	8	140	Extended physical address of the DSDT. If this field contains a nonzero value which can be used by the OSPM, then the DSDT field must be ignored by the OSPM.
X_PM1a_EVT_BLK	12	148	Extended address of the PM1a Event Register Block, represented in Generic Address Structure format. See <a href="#">Section 4.8.3.1</a> , "PM1 Event Grouping," for a hardware description layout of this register block. This is a required field. If this field contains a nonzero value which can be used by the OSPM, then the PM1a_EVT_BLK field must be ignored by the OSPM.
X_PM1b_EVT_BLK	12	160	Extended address of the PM1b Event Register Block, represented in Generic Address Structure format. See <a href="#">Section 4.8.3.1</a> , "PM1 Event Grouping," for a hardware description layout of this register block. This field is optional; if this register block is not supported, this field contains zero. If this field contains a nonzero value which can be used by the OSPM, then the PM1b_EVT_BLK field must be ignored by the OSPM.
X_PM1a_CNT_BLK	12	172	Extended address of the PM1a Control Register Block, represented in Generic Address Structure format. See <a href="#">Section 4.8.3.2</a> , "PM1 Control Grouping," for a hardware description layout of this register block. This is a required field. If this field contains a nonzero value which can be used by the OSPM, then the PM1a_CNT_BLK field must be ignored by the OSPM.

Field	Byte Length	Byte Offset	Description
X_PM1b_CNT_BLK	12	184	Extended address of the PM1b Control Register Block, represented in Generic Address Structure format. See <a href="#">Section 4.8.3.2</a> , “PM1 Control Grouping,” for a hardware description layout of this register block. This field is optional; if this register block is not supported, this field contains zero. If this field contains a nonzero value which can be used by the OSPM, then the PM1b_CNT_BLK field must be ignored by the OSPM.
X_PM2_CNT_BLK	12	196	Extended address of the PM2 Control Register Block, represented in Generic Address Structure format. See <a href="#">Section 4.8.3.4</a> “PM2 Control (PM2_CNT),” for a hardware description layout of this register block. This field is optional; if this register block is not supported, this field contains zero. If this field contains a nonzero value which can be used by the OSPM, then the PM2_CNT_BLK field must be ignored by the OSPM.
X_PM_TMR_BLK	12	208	Extended address of the Power Management Timer Control Register Block, represented in Generic Address Structure format. See <a href="#">Section 4.8.3.3</a> , “Power Management Timer (PM_TMR),” for a hardware description layout of this register block. This field is optional; if this register block is not supported, this field contains zero. If this field contains a nonzero value which can be used by the OSPM, then the PM_TMR_BLK field must be ignored by the OSPM.
X_GPE0_BLK	12	220	Extended address of the General-Purpose Event 0 Register Block, represented in Generic Address Structure format. See <a href="#">Section 4.8.4.1</a> “General-Purpose Event Register Blocks,” for a hardware description of this register block. This is an optional field; if this register block is not supported, this field contains zero. If this field contains a nonzero value which can be used by the OSPM, then the GPE0_BLK field must be ignored by the OSPM. If a non-zero value is present, then this field must be zero.
X_GPE1_BLK	12	232	Extended address of the General-Purpose Event 1 Register Block, represented in Generic Address Structure format. See <a href="#">Section 4.8.4.1</a> “General-Purpose Event Register Blocks,” for a hardware description of this register block. This is an optional field; if this register block is not supported, this field contains zero. If this field contains a nonzero value which can be used by the OSPM, then the GPE1_BLK field must be ignored by the OSPM.

Field	Byte Length	Byte Offset	Description
SLEEP_CONTROL_REG	12	244	The address of the Sleep register, represented in Generic Address Structure format (See <a href="#">Section 4.8.3.7</a> , "Sleep Control and Status Registers," for a description of the sleep mechanism.) Note: Only System I/O space, System Memory space and PCI Configuration space (bus #0) are valid for values for Address_Space_ID. Also, Register_Bit_Width must be 8 and Register_Bit_Offset must be 0.
SLEEP_STATUS_REG	12	256	The address of the Sleep status register, represented in Generic Address Structure format (See <a href="#">Section 4.8.3.7</a> , "Sleep Control and Status Registers," for a description of the sleep mechanism.) Note: Only System I/O space, System Memory space and PCI Configuration space (bus #0) are valid for values for Address_Space_ID. Also, Register_Bit_Width must be 8 and Register_Bit_Offset must be 0.
Hypervisor Vendor Identity	8	268	64-bit identifier of hypervisor vendor. All bytes in this field are considered part of the vendor identity. These identifiers are defined independently by the vendors themselves, usually following the name of the hypervisor product. Version information should NOT be included in this field - this shall simply denote the vendor's name or identifier. Version information can be communicated through a supplemental vendor-specific hypervisor API. Firmware implementers would place zero bytes into this field, denoting that no hypervisor is present in the actual firmware.

- Note:** [Hypervisor Vendor Identity] A firmware implementer would place zero bytes into this field, denoting that no hypervisor is present in the actual firmware.
- Note:** [Hypervisor Vendor Identity] A hypervisor vendor that presents ACPI tables of its own construction to a guest (for 'virtual' firmware or its 'virtual' platform), would provide its identity in this field.
- Note:** [Hypervisor Vendor Identity] If a guest operating system is aware of this field it can consult it and act on the result, based on whether it recognized the vendor and knows how to use the API that is defined by the vendor.

**Table 5-34 Fixed ACPI Description Table Fixed Feature Flags**

FACP - Flag	Bit Length	Bit Offset	Description
WBINVD	1	0	<p>Processor properly implements a functional equivalent to the WBINVD IA-32 instruction.</p> <p>If set, signifies that the WBINVD instruction correctly flushes the processor caches, maintains memory coherency, and upon completion of the instruction, all caches for the current processor contain no cached data other than what OSPM references and allows to be cached. If this flag is not set, the ACPI OS is responsible for disabling all ACPI features that need this function. This field is maintained for ACPI 1.0 processor compatibility on existing systems. Processors in new ACPI-compatible systems are required to support this function and indicate this to OSPM by setting this field.</p>
WBINVD_FLUSH	1	1	<p>If set, indicates that the hardware flushes all caches on the WBINVD instruction and maintains memory coherency, but does not guarantee the caches are invalidated. This provides the complete semantics of the WBINVD instruction, and provides enough to support the system sleeping states. If neither of the WBINVD flags is set, the system will require FLUSH_SIZE and FLUSH_STRIDE to support sleeping states. If the FLUSH parameters are also not supported, the machine cannot support sleeping states S1, S2, or S3.</p>
PROC_C1	1	2	A one indicates that the C1 power state is supported on all processors.
P_LVL2_UP	1	3	A zero indicates that the C2 power state is configured to only work on a uniprocessor (UP) system. A one indicates that the C2 power state is configured to work on a UP or multiprocessor (MP) system.

FACP - Flag	Bit Length	Bit Offset	Description
PWR_BUTTON	1	4	A zero indicates the power button is handled as a fixed feature programming model; a one indicates the power button is handled as a control method device. If the system does not have a power button, this value would be "1" and no power button device would be present.  Independent of the value of this field, the presence of a power button device in the namespace indicates to OSPM that the power button is handled as a control method device.
SLP_BUTTON	1	5	A zero indicates the sleep button is handled as a fixed feature programming model; a one indicates the sleep button is handled as a control method device.  If the system does not have a sleep button, this value would be "1" and no sleep button device would be present.  Independent of the value of this field, the presence of a sleep button device in the namespace indicates to OSPM that the sleep button is handled as a control method device.
FIX_RTC	1	6	A zero indicates the RTC wake status is supported in fixed register space; a one indicates the RTC wake status is not supported in fixed register space.
RTC_S4	1	7	Indicates whether the RTC alarm function can wake the system from the S4 state. The RTC must be able to wake the system from an S1, S2, or S3 sleep state. The RTC alarm can optionally support waking the system from the S4 state, as indicated by this value.
TMR_VAL_EXT	1	8	A zero indicates TMR_VAL is implemented as a 24-bit value. A one indicates TMR_VAL is implemented as a 32-bit value. The TMR_STS bit is set when the most significant bit of the TMR_VAL toggles.
DCK_CAP	1	9	A zero indicates that the system cannot support docking. A one indicates that the system can support docking. Notice that this flag does not indicate whether or not a docking station is currently present; it only indicates that the system is capable of docking.
RESET_REG_SUP	1	10	If set, indicates the system supports system reset via the FADT RESET_REG as described in <a href="#">Section 4.8.3.6</a> , "Reset Register."
SEALED_CASE	1	11	System Type Attribute. If set indicates that the system has no internal expansion capabilities and the case is sealed.
HEADLESS	1	12	System Type Attribute. If set indicates the system cannot detect the monitor or keyboard / mouse devices.
CPU_SW_SLP	1	13	If set, indicates to OSPM that a processor native instruction must be executed after writing the SLP_TYPx register.

FACP - Flag	Bit Length	Bit Offset	Description
PCI_EXP_WAK	1	14	If set, indicates the platform supports the PCIEXP_WAKE_STS bit in the PM1 Status register and the PCIEXP_WAKE_EN bit in the PM1 Enable register. This bit must be set on platforms containing chipsets that implement PCI Express and supports PM1 PCIEXP_WAK bits.
USE_PLATFORM_CLOCK	1	15	A value of one indicates that OSPM should use a platform provided timer to drive any monotonically non-decreasing counters, such as OSPM performance counter services. Which particular platform timer will be used is OSPM specific, however, it is recommended that the timer used is based on the following algorithm: If the HPET is exposed to OSPM, OSPM should use the HPET. Otherwise, OSPM will use the ACPI power management timer. A value of one indicates that the platform is known to have a correctly implemented ACPI power management timer. A platform may choose to set this flag if a internal processor clock (or clocks in a multi-processor configuration) cannot provide consistent monotonically non-decreasing counters. Note: If a value of zero is present, OSPM may arbitrarily choose to use an internal processor clock or a platform timer clock for these operations. That is, a zero does not imply that OSPM will necessarily use the internal processor clock to generate a monotonically non-decreasing counter to the system.
S4_RTC_STS_VALID	1	16	A one indicates that the contents of the RTC_STS flag is valid when waking the system from S4. See <a href="#">Table 4-15</a> – PM1 Status Registers Fixed Hardware Feature Status Bits for more information. Some existing systems do not reliably set this input today, and this bit allows OSPM to differentiate correctly functioning platforms from platforms with this errata.
REMOTE_POWER_ON_CAPABLE	1	17	A one indicates that the platform is compatible with remote power-on. That is, the platform supports OSPM leaving GPE wake events armed prior to an S5 transition. Some existing platforms do not reliably transition to S5 with wake events enabled (for example, the platform may immediately generate a spurious wake event after completing the S5 transition). This flag allows OSPM to differentiate correctly functioning platforms from platforms with this type of errata.

FACP - Flag	Bit Length	Bit Offset	Description
FORCE_APIC_CLUSTER_MODEL	1	18	A one indicates that all local APICs must be configured for the cluster destination model when delivering interrupts in logical mode.  If this bit is set, then logical mode interrupt delivery operation may be undefined until OSPM has moved all local APICs to the cluster model.  Note that the cluster destination model doesn't apply to Itanium™ Processor Family (IPF) local SAPICs. This bit is intended for xAPIC based machines that require the cluster destination model even when 8 or fewer local APICs are present in the machine.
FORCE_APIC_PHYSICAL_DESTINATION_MODE	1	19	A one indicates that all local xAPICs must be configured for physical destination mode. If this bit is set, interrupt delivery operation in logical destination mode is undefined. On machines that contain fewer than 8 local xAPICs or that do not use the xAPIC architecture, this bit is ignored.
HW_REDUCED_ACPI*	1	20	A one indicates that the Hardware-Reduced ACPI (section 4.1) is implemented, therefore software-only alternatives are used for supported fixed-features defined in chapter 4.
LOW_POWER_S0_IDLE_CAPABLE	1	21	A one informs OSPM that the platform is able to achieve power savings in S0 similar to or better than those typically achieved in S3. In effect, when this bit is set it indicates that the system will achieve no power benefit by making a sleep transition to S3.
Reserved	10	22	

\* The description of HW\_REDUCED\_ACPI provided here applies to ACPI specifications 5.0 and later.

### 5.2.9.1 Preferred PM Profile System Types

The following descriptions of preferred power management profile system types are to be used as a guide for setting the Preferred\_PM\_Profile field in the FADT. OSPM can use this field to set default power management policy parameters during OS installation.

#### Desktop

A single user, full featured, stationary computing device that resides on or near an individual's work area. Most often contains one processor. Must be connected to AC power to function. This device is used to perform work that is considered mainstream corporate or home computing (for example, word processing, Internet browsing, spreadsheets, and so on).

#### Mobile

A single-user, full-featured, portable computing device that is capable of running on batteries or other power storage devices to perform its normal functions. Most often contains one processor. This device performs the same task set as a desktop. However it may have limitations due to its size, thermal requirements, and/or power source life.

## Workstation

A single-user, full-featured, stationary computing device that resides on or near an individual's work area. Often contains more than one processor. Must be connected to AC power to function. This device is used to perform large quantities of computations in support of such work as CAD/CAM and other graphics-intensive applications.

## Enterprise Server

A multi-user, stationary computing device that frequently resides in a separate, often specially designed, room. Will almost always contain more than one processor. Must be connected to AC power to function. This device is used to support large-scale networking, database, communications, or financial operations within a corporation or government.

## SOHO Server

A multi-user, stationary computing device that frequently resides in a separate area or room in a small or home office. May contain more than one processor. Must be connected to AC power to function. This device is generally used to support all of the networking, database, communications, and financial operations of a small office or home office.

## Appliance PC

A device specifically designed to operate in a low-noise, high-availability environment such as a consumer's living rooms or family room. Most often contains one processor. This category also includes home Internet gateways, Web pads, set top boxes and other devices that support ACPI. Must be connected to AC power to function. Normally they are sealed case style and may only perform a subset of the tasks normally associated with today's personal computers.

## Performance Server

A multi-user stationary computing device that frequently resides in a separate, often specially designed room. Will often contain more than one processor. Must be connected to AC power to function. This device is used in an environment where power savings features are willing to be sacrificed for better performance and quicker responsiveness.

## Tablet

A full-featured, highly mobile computing device which resembles writing tablets and which users interact with primarily through a touch interface. The touch digitizer is the primary user input device, although a keyboard and/or mouse may be present. Tablet devices typically run on battery power and are generally only plugged into AC power in order to charge. This device performs many of the same tasks as Mobile; however battery life expectations of Tablet devices generally require more aggressive power savings especially for managing display and touch components.

### 5.2.9.2 System Type Attributes

This set of flags is used by the OS to assist in determining assumptions about power and device management. These flags are read at boot time and are used to make decisions about power management and device settings. For example, a system that has the SEALED\_CASE bit set may take a very aggressive low noise policy toward thermal management. In another example an OS might not load video, keyboard or mouse drivers on a HEADLESS system.

### 5.2.9.3 IA-PC Boot Architecture Flags

This set of flags is used by an OS to guide the assumptions it can make in initializing hardware on IA-PC platforms. These flags are used by an OS at boot time (before the OS is capable of providing an operating environment suitable for parsing the ACPI namespace) to determine the code paths to take during boot. In IA-PC platforms with reduced legacy hardware, the OS can skip code paths for legacy devices if none are present. For example, if there are no ISA devices, an OS could skip code that assumes the presence of these devices and their associated resources. These flags are used independently of the ACPI namespace. The presence of other devices must be described in the ACPI namespace as specified in [Section 6](#), “Configuration.” These flags pertain only to IA-PC platforms. On other system architectures, the entire field should be set to 0.

**Table 5-35 Fixed ACPI Description Table Boot IA-PC Boot Architecture Flags**

IAPC_BOOT_ARCH	Bit length	Bit offset	Description
LEGACY_DEVICES	1	0	If set, indicates that the motherboard supports user-visible devices on the LPC or ISA bus. User-visible devices are devices that have end-user accessible connectors (for example, LPT port), or devices for which the OS must load a device driver so that an end-user application can use a device. If clear, the OS may assume there are no such devices and that all devices in the system can be detected exclusively via industry standard device enumeration mechanisms (including the ACPI namespace).
8042	1	1	If set, indicates that the motherboard contains support for a port 60 and 64 based keyboard controller, usually implemented as an 8042 or equivalent micro-controller.
VGA Not Present	1	2	If set, indicates to OSPM that it must not blindly probe the VGA hardware (that responds to MMIO addresses A0000h-BFFFh and IO ports 3B0h-3BBh and 3C0h-3DFh) that may cause machine check on this system. If clear, indicates to OSPM that it is safe to probe the VGA hardware.
MSI Not Supported	1	3	If set, indicates to OSPM that it must not enable Message Signaled Interrupts (MSI) on this platform.
PCIe ASPM Controls	1	4	If set, indicates to OSPM that it must not enable OSPM ASPM control on this platform.
CMOS RTC Not Present	1	5	If set, indicates that the CMOS RTC is either not implemented, or does not exist at the legacy addresses. OSPM uses the Control Method Time and Alarm Namespace device instead.
Reserved	10	6	Must be 0.

### 5.2.9.4 ARM Architecture boot flags

These flags are used by an OS at boot time (before the OS is capable of providing an operating environment suitable for parsing the ACPI namespace) to determine the code paths to take during boot. For the PSCI flags, specifically, the flags describe if the platform is compliant with the PSCI specification.

The PSCI specification is found at *Links to ACPI-Related Document*" (<http://uefi.org/acpi>) under the heading *PSCI Specification*.

The ARM Architecture boot flags are described in [Table 5-36](#):

**Table 5-36 Fixed ACPI Description Table ARM Boot Architecture Flags**

ARM_BOOT_ARCH	Bit Length	Bit Offset	Description
PSCI_COMPLIANT	1	0	1 if PSCI is implemented.
PSCI_USE_HVC	1	1	1 if HVC must be used as the PSCI conduit instead of SMC.
Reserved	14	2	This value is zero.

## 5.2.10 Firmware ACPI Control Structure (FACS)

The Firmware ACPI Control Structure (FACS) is a structure in read/write memory that the platform boot firmware reserves for ACPI usage. This structure is optional if and only if the HARDWARE\_REDUCED\_ACPI flag in the FADT is set. The FACS is passed to an ACPI-compatible OS using the FADT. For more information about the FADT FIRMWARE\_CTRL field, see [Table 5.2.9](#), “Fixed ACPI Description Table (FADT).”

The platform boot firmware aligns the FACS on a 64-byte boundary anywhere within the system’s memory address space. The memory where the FACS structure resides must not be reported as system AddressRangeMemory in the system address map. For example, the E820 address map reporting interface would report the region as AddressRangeReserved. For more information about system address map reporting interfaces, see [Section 15](#), “System Address Map Interfaces.”

**Table 5-37 Firmware ACPI Control Structure (FACS)**

Field	Byte Length	Byte Offset	Description
Signature	4	0	‘FACS’
Length	4	4	Length, in bytes, of the entire Firmware ACPI Control Structure. This value is 64 bytes or larger.

Field	Byte Length	Byte Offset	Description
Hardware Signature	4	8	<p>The value of the system's "hardware signature" at last boot. This value is calculated by the platform boot firmware on a best effort basis to indicate the base hardware configuration of the system such that different base hardware configurations can have different hardware signature values. Although memory described using <code>EfiPersistentMemory</code> (<a href="#">Section 15</a>) is not saved/restored by OS during S4, any change to persistent memory that impacts any OS visible firmware interfaces must change hardware signature. Any change to the data in Persistent Memory itself should not be included in computing the hardware signature.</p> <p>OSPM uses this information in waking from an S4 state, by comparing the current hardware signature to the signature values saved in the non-volatile sleep image. If the values are not the same, OSPM assumes that the saved non-volatile image is from a different hardware configuration and cannot be restored.</p>
Firmware Waking Vector	4	12	<p>This field is superseded by the <code>X_Firmware_Waking_Vector</code> field. The 32-bit address field where OSPM puts its waking vector. Before transitioning the system into a global sleeping state, OSPM fills in this field with the physical memory address of an OS-specific wake function. During POST, the platform firmware first checks if the value of the <code>X_Firmware_Waking_Vector</code> field is non-zero and if so transfers control to OSPM as outlined in the <code>X_Firmware_Waking_vector</code> field description below. If the <code>X_Firmware_Waking_Vector</code> field is zero then the platform firmware checks the value of this field and if it is non-zero, transfers control to the specified address.</p> <p>On PCs, the wake function address is in memory below 1 MB and the control is transferred while in real mode. OSPM's wake function restores the processors' context.</p> <p>For IA-PC platforms, the following example shows the relationship between the physical address in the Firmware Waking Vector and the real mode address the BIOS jumps to. If, for example, the physical address is 0x12345, then the BIOS must jump to real mode address 0x1234:0x0005. In general this relationship is</p> <pre>Real-mode address = Physical address&gt;&gt;4 : Physical address and 0x000F</pre> <p>Notice that on IA-PC platforms, A20 must be enabled when the BIOS jumps to the real mode address derived from the physical address stored in the Firmware Waking Vector.</p>

Field	Byte Length	Byte Offset	Description
Global Lock	4	16	This field contains the Global Lock used to synchronize access to shared hardware resources between the OSPM environment and an external controller environment (for example, the SMI environment). This lock is owned exclusively by either OSPM or the firmware at any one time. When ownership of the lock is attempted, it might be busy, in which case the requesting environment exits and waits for the signal that the lock has been released. For example, the Global Lock can be used to protect an embedded controller interface such that only OSPM or the firmware will access the embedded controller interface at any one time. See <a href="#">Section 5.2.10.1</a> , “Global Lock,” for more information on acquiring and releasing the Global Lock.
Flags	4	20	Firmware control structure flags. See <a href="#">Table 5-38</a> for a description of this field.

Field	Byte Length	Byte Offset	Description
X Firmware Waking Vector	8	24	<p>64-bit physical address of OSPM's Waking Vector.</p> <p>Before transitioning the system into a global sleeping state, OSPM fills in this field and the OSPM Flags field to describe the waking vector. OSPM populates this field with the physical memory address of an OS-specific wake function. During POST, the platform firmware checks if the value of this field is non-zero and if so transfers control to OSPM by jumping to this address after creating the appropriate execution environment, which must be configured as follows:</p> <p>For 64-bit Itanium™ Processor Family (IPF) -based platforms: Interrupts must be disabled  The processor must have psr.i set to 0. See the <i>Intel® Itanium™ Architecture Software Developer's Manual</i> for more information. Memory address translation must be disabled  The processor must have psr.it, psr.dt, and psr.rt set to 0. See the <i>Intel® Itanium™ Architecture Software Developer's Manual</i> for more information.  For IA 32 and x64 platforms, platform firmware is required to support a 32 bit execution environment. Platform firmware can additionally support a 64 bit execution environment. If platform firmware supports a 64 bit execution environment, firmware inspects the OSPM Flags during POST. If the 64BIT_WAKE_F flag is set, the platform firmware creates a 64 bit execution environment. Otherwise, the platform firmware creates a 32 bit execution environment.  For 64 bit execution environment: Interrupts must be disabled EFLAGS.IF set to 0 Long mode enabled Paging mode is enabled and physical memory for waking vector is identity mapped (virtual address equals physical address) Waking vector must be contained within one physical page Selectors are set to be flat and are otherwise not used  For 32 bit execution environment: Interrupts must be disabled EFLAGS.IF set to 0 Memory address translation / paging must be disabled 4 GB flat address space for all segment registers</p>
Version	1	32	2-Version of this table
Reserved	3	33	This value is zero.

Field	Byte Length	Byte Offset	Description
OSPM Flags	4	36	OSPM enabled firmware control structure flags. Platform firmware must initialize this field to zero. See <a href="#">Table 5-39</a> for a description of the OSPM control structure feature flags.
Reserved	24	40	This value is zero.

**Table 5-38 Firmware Control Structure Feature Flags**

FACS – Flag	Bit Length	Bit Offset	Description
S4BIOS_F	1	0	Indicates whether the platform supports S4BIOS_REQ. If S4BIOS_REQ is not supported, OSPM must be able to save and restore the memory state in order to use the S4 state.
64BIT_WAKE_SUPPORTED_F	1	1	Indicates that the platform firmware supports a 64 bit execution environment for the waking vector. When set and the OSPM additionally set 64BIT_WAKE_F, the platform firmware will create a 64 bit execution environment before transferring control to the X_Firmware_Waking_Vector.
Reserved	30	2	The value is zero.

**Table 5-39 OSPM Enabled Firmware Control Structure Feature Flags**

FACS – Flag	Bit Length	Bit Offset	Description
64BIT_WAKE_F	1	0	OSPM sets this bit to indicate to platform firmware that the X_Firmware_Waking_Vector requires a 64 bit execution environment. This flag can only be set if platform firmware sets 64BIT_WAKE_SUPPORTED_F in the FACS flags field. This bit field has no affect on Itanium™ Processor Family (IPF) - based platforms, which require a 64 bit execution environment.
Reserved	31	1	The value is zero.

### 5.2.10.1 Global Lock

The purpose of the ACPI Global Lock is to provide mutual exclusion between the host OS and the platform runtime firmware. The Global Lock is a 32-bit (DWORD) value in read/write memory located within the FACS and is accessed and updated by both the OS environment and the SMI environment in a defined manner to provide an exclusive lock. Note: this is not a *pointer* to the Global Lock, it is the *actual* memory location of the lock. The FACS and Global Lock may be located anywhere in physical memory.

By convention, this lock is used to ensure that while one environment is accessing some hardware, the other environment is not. By this convention, when ownership of the lock fails because the other environment owns it, the requesting environment sets a “pending” state within the lock, exits its attempt to acquire the lock, and waits for the owning environment to signal that the lock has been released.

before attempting to acquire the lock again. When releasing the lock, if the pending bit in the lock is set after the lock is released, a signal is sent via an interrupt mechanism to the other environment to inform it that the lock has been released. During interrupt handling for the “lock released” event within the corresponding environment, if the lock ownership were still desired an attempt to acquire the lock would be made. If ownership is not acquired, then the environment must again set “pending” and wait for another “lock release” signal.

The table below shows the encoding of the Global Lock DWORD in memory.

**Table 5-40 Global Lock Structure within the FACS**

Field	Bit Length	Bit Offset	Description
Pending	1	0	Non-zero indicates that a request for ownership of the Global Lock is pending.
Owned	1	1	Non-zero indicates that the Global Lock is Owned.
<i>Reserved</i>	30	2	Reserved for future use.

The following code sequence is used by both OSPM and the firmware to acquire ownership of the Global Lock. If non-zero is returned by the function, the caller has been granted ownership of the Global Lock and can proceed. If zero is returned by the function, the caller has not been granted ownership of the Global Lock, the “pending” bit has been set, and the caller must wait until it is signaled by an interrupt event that the lock is available before attempting to acquire access again.

**Note:** In the examples that follow, the “GlobalLock” variable is a pointer that has been previously initialized to point to the 32-bit Global Lock location within the FACS.

Acquire Global Lock:

```

        mov    ecx, Global Lock          ; ecx = Address of Global Lock in FACS
acq10:   mov    eax, [ecx]           ; Get current value of Global Lock

        mov    edx, eax
        and    edx, not 1             ; Clear pending bit
        bts    edx, 1                ; Check and set owner bit
        adc    edx, 0                ; If owned, set pending bit

        lock cmpxchg dword ptr[ecx], edx ; Attempt to set new value
        jnz    short acq10           ; If not set, try again

        cmp    dl, 3                 ; Was it acquired or marked pending?
        sbb    eax, eax              ; acquired = -1, pending = 0

        ret

```

The following code sequence is used by OSPM and the firmware to release ownership of the Global Lock. If non-zero is returned, the caller must raise the appropriate event to the other environment to signal that the Global Lock is now free. Depending on the environment, this signaling is done by setting the either the GBL\_RLS or BIOS\_RLS within their respective hardware register spaces. This signal only occurs when the other environment attempted to acquire ownership while the lock was owned.

```

Rel easeGI obal Lock:
    mov    ecx, Global Lock          ; ecx = Address of Global Lock in FACS
rel 10:   mov    eax, [ecx]           ; Get current value of Global Lock

    mov    edx, eax
    and    edx, not 03h             ; Clear owner and pending field

    lock cmpxchg dword ptr[ecx], edx ; Attempt to set it
    jnz    short rel 10            ; If not set, try again

    and    eax, 1                  ; Was pending set?

; If one is returned (we were pending) the caller must signal that the
; Lock has been released using either GBL_RLS or BIOS_RLS as appropriate

ret

```

Although using the Global Lock allows various hardware resources to be shared, it is important to notice that its usage when there is ownership contention could entail a significant amount of system overhead as well as waits of an indeterminate amount of time to acquire ownership of the Global Lock. For this reason, implementations should try to design the hardware to keep the required usage of the Global Lock to a minimum.

The Global Lock is required whenever a logical register in the hardware is shared. For example, if bit 0 is used by ACPI (OSPM) and bit 1 of the same register is used by SMI, then access to that register needs to be protected under the Global Lock, ensuring that the register's contents do not change from underneath one environment while the other is making changes to it. Similarly if the entire register is shared, as the case might be for the embedded controller interface, access to the register needs to be protected under the Global Lock.

## 5.2.11 Definition Blocks

A Definition Block consists of data in AML format (see [Section 5.4](#) “Definition Block Encoding”) and contains information about hardware implementation details in the form of AML objects that contain data, AML code, or other AML objects. The top-level organization of this information after a definition block is loaded is name-tagged in a hierarchical namespace.

OSPM “loads” or “unloads” an entire definition block as a logical unit. OSPM will load a definition block either as a result of executing the AML **Load()** or **LoadTable()** operator or encountering a table definition during initialization. During initialization, OSPM loads the Differentiated System Description Table (DSDT), which contains the Differentiated Definition Block, using the DSDT pointer retrieved from the FADT. OSPM will load other definition blocks during initialization as a result of encountering Secondary System Description Table (SSDT) definitions in the RSDT/XSDT. The DSDT and SSDT are described in the following sections.

As mentioned, the AML **Load()** and **LoadTable()** operators make it possible for a Definition Block to load other Definition Blocks, either statically or dynamically, where they in turn can either define new system attributes or, in some cases, build on prior definitions. Although this gives the hardware the ability to vary widely in implementation, it also confines it to reasonable boundaries. In some cases, the Definition Block

format can describe only specific and well-understood variances. In other cases, it permits implementations to be expressible only by means of a specified set of “built in” operators. For example, the Definition Block has built in operators for I/O space.

In theory, it might be possible to define something like PCI configuration space in a Definition Block by building it from I/O space, but that is not the goal of the definition block. Such a space is usually defined as a “built in” operator.

Some AML operators perform simple functions, and others encompass complex functions. The power of the Definition block comes from its ability to allow these operations to be glued together in numerous ways, to provide functionality to OSPM.

The AML operators defined in this specification are intended to allow many useful hardware designs to be easily expressed, not to allow all hardware designs to be expressed.

Note: To accommodate addressing beyond 32 bits, the integer type was expanded to 64 bits in ACPI 2.0, see [Section 19.3.5](#), “ASL Data Types”. Existing ACPI definition block implementations may contain an inherent assumption of a 32-bit integer width. Therefore, to maintain backwards compatibility, OSPM uses the Revision field, in the header portion of system description tables containing Definition Blocks, to determine whether integers declared within the Definition Block are to be evaluated as 32-bit or 64-bit values. A Revision field value greater than or equal to 2 signifies that integers declared within the Definition Block are to be evaluated as 64-bit values. The ASL writer specifies the value for the Definition Block table header’s Revision field via the ASL Definition Block’s *ComplianceRevision* field. See [Section 19.6.28](#), “DefinitionBlock (Declare Definition Block)”, for more information. It is the responsibility of the ASL writer to ensure the Definition Block’s compatibility with the corresponding integer width when setting the *ComplianceRevision* field.

### 5.2.11.1 Differentiated System Description Table (DSDT)

The Differentiated System Description Table (DSDT) is part of the system fixed description. The DSDT is comprised of a system description table header followed by data in Definition Block format. See [Section 5.2.11](#), “Definition Blocks,” for a description of Definition Blocks. During initialization, OSPM finds the pointer to the DSDT in the Fixed ACPI Description Table (using the FADT’s DSDT or X\_DSDT fields) and then loads the DSDT to create the ACPI Namespace.

**Table 5-41 Differentiated System Description Table Fields (DSDT)**

Field	Byte Length	Byte Offset	Description
Header			
Signature	4	0	‘DSDT’ Signature for the Differentiated System Description Table.
Length	4	4	Length, in bytes, of the entire DSDT (including the header).
Revision	1	8	2. This field also sets the global integer width for the AML interpreter. Values less than two will cause the interpreter to use 32-bit integers and math. Values of two and greater will cause the interpreter to use full 64-bit integers and math.
Checksum	1	9	Entire table must sum to zero.

Field	Byte Length	Byte Offset	Description
OEMID	6	10	OEM ID
OEM Table ID	8	16	The manufacture model ID.
OEM Revision	4	24	OEM revision of DSDT for supplied OEM Table ID.
Creator ID	4	28	Vendor ID for the ASL Compiler.
Creator Revision	4	32	Revision number of the ASL Compiler.
Definition Block	n	36	<i>n</i> bytes of AML code (see <a href="#">Section 5.4</a> , “Definition Block Encoding”)

### 5.2.11.2 Secondary System Description Table (SSDT)

Secondary System Description Tables (SSDT) are a continuation of the DSDT. The SSDT is comprised of a system description table header followed by data in Definition Block format. There can be multiple SSDTs present. After OSPM loads the DSDT to create the ACPI Namespace, each secondary system description table listed in the RSDT/XSDT with a unique OEM Table ID is loaded.

**Note:** Additional tables can only add data; they cannot overwrite data from previous tables.

This allows the OEM to provide the base support in one table and add smaller system options in other tables. For example, the OEM might put dynamic object definitions into a secondary table such that the firmware can construct the dynamic information at boot without needing to edit the static DSDT. A SSDT can only rely on the DSDT being loaded prior to it.

**Table 5-42 Secondary System Description Table Fields (SSDT)**

Field	Byte Length	Byte Offset	Description
Header			
Signature	4	0	‘SSDT’ Signature for the Secondary System Description Table.
Length	4	4	Length, in bytes, of the entire SSDT (including the header).
Revision	1	8	2
Checksum	1	9	Entire table must sum to zero.
OEMID	6	10	OEM ID
OEM Table ID	8	16	The manufacture model ID.
OEM Revision	4	24	OEM revision of DSDT for supplied OEM Table ID.
Creator ID	4	28	Vendor ID for the ASL Compiler.
Creator Revision	4	32	Revision number of the ASL Compiler.
Definition Block	n	36	<i>n</i> bytes of AML code (see <a href="#">Section 5.4</a> , “Definition Block Encoding”)

### 5.2.11.3 Persistent System Description Table (PSDT)

The table signature, “PSDT” refers to the Persistent System Description Table (PSDT) defined in the ACPI 1.0 specification. The PSDT was judged to provide no specific benefit and as such has been deleted from follow-on versions of the ACPI specification. OSPM will evaluate a table with the “PSDT” signature in like manner to the evaluation of an SSDT as described in [Section 5.2.11.2](#), “Secondary System Description Table.”

### 5.2.12 Multiple APIC Description Table (MADT)

The ACPI interrupt model describes all interrupts for the entire system in a uniform interrupt model implementation. Supported interrupt models include the PC-AT-compatible dual 8259 interrupt controller, for Intel processor-based systems, the Intel Advanced Programmable Interrupt Controller (APIC) and Intel Streamlined Advanced Programmable Interrupt Controller (SAPIC), and, for ARM processor-based systems, the Generic Interrupt Controller (GIC). The choice of the interrupt model(s) to support is up to the platform designer. The interrupt model cannot be dynamically changed by the system firmware; OSPM will choose which model to use and install support for that model at the time of installation. If a platform supports multiple models, an OS will install support for only one of the models; it will not mix models. Multi-boot capability is a feature in many modern operating systems. This means that a system may have multiple operating systems or multiple instances of an OS installed at any one time. Platform designers must allow for this.

This section describes the format of the Multiple APIC Description Table (MADT), which provides OSPM with information necessary for operation on systems with APIC, SAPIC or GIC implementations.

ACPI represents all interrupts as "flat" values known as global system interrupts. Therefore to support APICs, SAPICs or GICs on an ACPI-enabled system, each used interrupt input must be mapped to the global system interrupt value used by ACPI. See [Section 5.2.13](#), “Global System Interrupts,” for a description of Global System Interrupts.

Additional support is required to handle various multi-processor functions that implementations might support (for example, identifying each processor's local interrupt controller ID).

All addresses in the MADT are processor-relative physical addresses.

**Table 5-43    Multiple APIC Description Table (MADT) Format**

Field	Byte Length	Byte Offset	Description
Header			
Signature	4	0	'APIC' Signature for the Multiple APIC Description Table.
Length	4	4	Length, in bytes, of the entire MADT.
Revision	1	8	5
Checksum	1	9	Entire table must sum to zero.
OEMID	6	10	OEM ID
OEM Table ID	8	16	For the MADT, the table ID is the manufacturer model ID.
OEM Revision	4	24	OEM revision of MADT for supplied OEM Table ID.

Field	Byte Length	Byte Offset	Description
Creator ID	4	28	Vendor ID of utility that created the table. For tables containing Definition Blocks, this is the ID for the ASL Compiler.
Creator Revision	4	32	Revision of utility that created the table. For tables containing Definition Blocks, this is the revision for the ASL Compiler.
Local Interrupt Controller Address	4	36	The 32-bit physical address at which each processor can access its local interrupt controller.
Flags	4	40	Multiple APIC flags. See <a href="#">Table 5-44</a> for a description of this field.
Interrupt Controller Structure[n]	—	44	A list of interrupt controller structures for this implementation. This list will contain all of the structures from <a href="#">Table 5-45</a> needed to support this platform. These structures are described in the following sections.

**Table 5-44** Multiple APIC Flags

Multiple APIC Flags	Bit Length	Bit Offset	Description
PCAT_COMPAT	1	0	A one indicates that the system also has a PC-AT-compatible dual-8259 setup. The 8259 vectors must be disabled (that is, masked) when enabling the ACPI APIC operation.
Reserved	31	1	This value is zero.

Immediately after the Flags value in the MADT is a list of interrupt controller structures that declare the interrupt features of the machine. The first byte of each structure declares the type of that structure and the second byte declares the length of that structure.

**Table 5-45** Interrupt Controller Structure Types

Value	Description	_MAT for Processor object <sup>a</sup>	_MAT for an I/O APIC object <sup>b</sup>	Reference
0	Processor Local APIC	yes	no	<a href="#">Section 5.2.12.2</a>
1	I/O APIC	no	yes	<a href="#">Section 5.2.12.3</a>
2	Interrupt Source Override	no	yes	<a href="#">Section 5.2.12.5</a>
3	Non-maskable Interrupt (NMI) Source	no	yes	<a href="#">Section 5.2.12.6</a>
4	Local APIC NMI	yes	no	<a href="#">Section 5.2.12.7</a>
5	Local APIC Address Override	no	no	<a href="#">Section 5.2.12.8</a>
6	I/O SAPIC	no	yes	<a href="#">Section 5.2.12.9</a>
7	Local SAPIC	yes	no	<a href="#">Section 5.2.12.9</a>
8	Platform Interrupt Sources	no	yes	<a href="#">Section 5.2.12.11</a>
9	Processor Local x2APIC	yes	no	<a href="#">Section 5.2.12.12</a>

0xA	Local x2APIC NMI	yes	no	<a href="#">Section 5.2.12.13</a>
0xB	GIC CPU Interface (GICC)	yes	no	<a href="#">Section 5.2.12.14</a>
0xC	GIC Distributor (GICD)	no	no	<a href="#">Section 5.2.12.15</a>
0xD	GIC MSI Frame	no	no	<a href="#">Section 5.2.12.16</a>
0xE	GIC Redistributor (GICR)	no	no	<a href="#">Section 5.2.12.17</a>
0xF	GIC Interrupt Translation Service (ITS)	no	no	<a href="#">Section 5.2.12.18</a>
0x10-0x7F	Reserved. OSPM skips structures of the reserved type.	no	no	
0x80-0xFF	Reserved for OEM use	no	no	

<sup>a</sup> When \_MAT (see [Section 6.2.10](#)) appears under a Processor Device object (see [Section 8.4](#)), OSPM processes the Interrupt Controller Structures returned by \_MAT with the types labeled "yes" and ignores other types.

<sup>b</sup> When \_MAT appears under an I/O APIC Device (see [Section 9.17](#)), OSPM processes the Interrupt Controller Structures returned by \_MAT with the types labeled "yes" and ignores other types.

### 5.2.12.1 MADT Processor Local APIC / SAPIC Structure Entry Order

OSPM implementations may limit the number of supported processors on multi-processor platforms. OSPM executes on the boot processor to initialize the platform including other processors. To ensure that the boot processor is supported post initialization, two guidelines should be followed. The first is that OSPM should initialize processors in the order that they appear in the MADT. The second is that platform firmware should list the boot processor as the first processor entry in the MADT.

The advent of multi-threaded processors yielded multiple logical processors executing on common processor hardware. ACPI defines logical processors in an identical manner as physical processors. To ensure that non multi-threading aware OSPM implementations realize optimal performance on platforms containing multi-threaded processors, two guidelines should be followed. The first is the same as above, that is, OSPM should initialize processors in the order that they appear in the MADT. The second is that platform firmware should list the first logical processor of each of the individual multi-threaded processors in the MADT before listing any of the second logical processors. This approach should be used for all successive logical processors.

Failure of OSPM implementations and platform firmware to abide by these guidelines can result in both unpredictable and non optimal platform operation.

### 5.2.12.2 Processor Local APIC Structure

When using the APIC interrupt model, each processor in the system is required to have a Processor Local APIC record in the MADT, and a processor device object in the DSDT. OSPM does not expect the information provided in this table to be updated if the processor information changes during the lifespan of an OS boot. While in the sleeping state, processors are not allowed to be added, removed, nor can their APIC ID or Flags change. When a processor is not present, the Processor Local APIC information is either not reported or flagged as disabled.

**Table 5-46 Processor Local APIC Structure**

Field	Byte Length	Byte Offset	Description
Type	1	0	0 Processor Local APIC structure
Length	1	1	8
ACPI Processor UID	1	2	The OS associates this Local APIC Structure with a processor object in the namespace when the _UID child object of the processor's device object (or the ProcessordId listed in the Processor declaration operator) evaluates to a numeric value that matches the numeric value in this field. Note that the use of the Processor declaration operator is deprecated. See the compatibility note in <a href="#">Section 5.2.12.2</a> and see <a href="#">Section 19.6.108</a> , "Processor (Declare Processor)."
APIC ID	1	3	The processor's local APIC ID.
Flags	4	4	Local APIC flags. See <a href="#">Table 5-47</a> for a description of this field.

**Table 5-47 Local APIC Flags**

LocalAPIC Flags	Bit Length	Bit Offset	Description
Enabled	1	0	If this bit is set the processor is ready for use. If this bit is clear and the Online Capable bit is set, system hardware supports enabling this processor during OS runtime. If this bit is clear and the Online Capable bit is also clear, this processor is unusable, and OSPM shall ignore the contents of the Processor Local APIC Structure.
Online Capable	1	1	The information conveyed by this bit depends on the value of the Enabled bit. If the Enabled bit is set, this bit is reserved and must be zero. Otherwise, if this this bit is set, system hardware supports enabling this processor during OS runtime.
Reserved	30	2	Must be zero.

### 5.2.12.3 I/O APIC Structure

In an APIC implementation, there are one or more I/O APICs. Each I/O APIC has a series of interrupt inputs, referred to as INTIn, where the value of n is from 0 to the number of the last interrupt input on the I/O APIC. The I/O APIC structure declares which global system interrupts are uniquely associated with the I/O APIC interrupt inputs. There is one I/O APIC structure for each I/O APIC in the system. For more information on global system interrupts see [Section 5.2.13](#), "Global System Interrupts."

**Table 5-48 I/O APIC Structure**

Field	Byte Length	Byte Offset	Description
Type	1	0	1 I/O APIC structure

Length	1	1	12
I/O APIC ID	1	2	The I/O APIC's ID.
Reserved	1	3	0
I/O APIC Address	4	4	The 32-bit physical address to access this I/O APIC. Each I/O APIC resides at a unique address.
Global System Interrupt Base	4	8	The global system interrupt number where this I/O APIC's interrupt inputs start. The number of interrupt inputs is determined by the I/O APIC's <i>Max Redir Entry</i> register.

#### 5.2.12.4 Platforms with APIC and Dual 8259 Support

Systems that support both APIC and dual 8259 interrupt models must map global system interrupts 0-15 to the 8259 IRQs 0-15, except where Interrupt Source Overrides are provided (see [Section 5.2.12.5, “Interrupt Source Override Structure” below](#)). This means that I/O APIC interrupt inputs 0-15 must be mapped to global system interrupts 0-15 and have identical sources as the 8259 IRQs 0-15 unless overrides are used. This allows a platform to support OSPM implementations that use the APIC model as well as OSPM implementations that use the 8259 model (OSPM will only use one model; it will not mix models).

When OSPM supports the 8259 model, it will assume that all interrupt descriptors reporting global system interrupts 0-15 correspond to 8259 IRQs. In the 8259 model all global system interrupts greater than 15 are ignored. If OSPM implements APIC support, it will enable the APIC as described by the APIC specification and will use all reported global system interrupts that fall within the limits of the interrupt inputs defined by the I/O APIC structures. For more information on hardware resource configuration see [Section 6, “Configuration.”](#)

#### 5.2.12.5 Interrupt Source Override Structure

Interrupt Source Overrides are necessary to describe variances between the IA-PC standard dual 8259 interrupt definition and the platform’s implementation.

It is assumed that the ISA interrupts will be identity-mapped into the first I/O APIC sources. Most existing APIC designs, however, will contain at least one exception to this assumption. The Interrupt Source Override Structure is provided in order to describe these exceptions. It is not necessary to provide an Interrupt Source Override for every ISA interrupt. Only those that are not identity-mapped onto the APIC interrupt inputs need be described.

**Note:** *This specification only supports overriding ISA interrupt sources.*

For example, if your machine has the ISA Programmable Interrupt Timer (PIT) connected to ISA IRQ 0, but in APIC mode, it is connected to I/O APIC interrupt input 2, then you would need an Interrupt Source Override where the source entry is ‘0’ and the Global System Interrupt is ‘2.’

**Table 5-49    Interrupt Source Override Structure**

Field	Byte Length	Byte Offset	Description
Type	1	0	2      Interrupt Source Override

Length	1	1	10
Bus	1	2	0 Constant, meaning ISA
Source	1	3	Bus-relative interrupt source (IRQ)
Global System Interrupt	4	4	The Global System Interrupt that this bus-relative interrupt source will signal.
Flags	2	8	MPS INTI flags. See <a href="#">Table 5-50</a> for a description of this field.

The MPS INTI flags listed in [Table 5-50](#) are identical to the flags used in Table 4-10 of the MPS version 1.4 specifications. The Polarity flags are the PO bits and the Trigger Mode flags are the EL bits.

**Table 5-50 MPS INTI Flags**

Local APIC - Flags	Bit Length	Bit Offset	Description
Polarity	2	0	Polarity of the APIC I/O input signals: 00 Conforms to the specifications of the bus (For example, EISA is active-low for level-triggered interrupts) 01 Active high 10 Reserved 11 Active low
Trigger Mode	2	2	Trigger mode of the APIC I/O Input signals: 00 Conforms to specifications of the bus (For example, ISA is edge-triggered) 01 Edge-triggered 10 Reserved 11 Level-triggered
Reserved	12	4	Must be zero.

Interrupt Source Overrides are also necessary when an identity mapped interrupt input has a non-standard polarity.

**Note:** You must have an interrupt source override entry for the IRQ mapped to the SCI interrupt if this IRQ is not identity mapped. This entry will override the value in SCI\_INT in FADT. For example, if SCI is connected to IRQ 9 in PIC mode and IRQ 9 is connected to INTIN11 in APIC mode, you should have 9 in SCI\_INT in the FADT and an interrupt source override entry mapping IRQ 9 to INTIN11.

### 5.2.12.6 Non-Maskable Interrupt (NMI) Source Structure

This structure allows a platform designer to specify which I/O (S)APIC interrupt inputs should be enabled as non-maskable. Any source that is non-maskable will not be available for use by devices.

**Table 5-51 NMI Source Structure**

Field	Byte Length	Byte Offset	Description
Type	1	0	3 NMI Source
Length	1	1	8
Flags	2	2	Same as MPS INTI flags
Global System Interrupt	4	4	The Global System Interrupt that this NMI will signal.

### 5.2.12.7 Local APIC NMI Structure

This structure describes the Local APIC interrupt input (LINTn) that NMI is connected to for each of the processors in the system where such a connection exists. This information is needed by OSPM to enable the appropriate local APIC entry.

Each Local APIC NMI connection requires a separate Local APIC NMI structure. For example, if the platform has 4 processors with ID 0-3 and NMI is connected LINT1 for processor 3 and 2, two Local APIC NMI entries would be needed in the MADT.

**Table 5-52 Local APIC NMI Structure**

Field	Byte Length	Byte Offset	Description
Type	1	0	4 Local APIC NMI Structure
Length	1	1	6
ACPI Processor UID	1	2	<p>Value corresponding to the _UID listed in the processor's device object, or the Processor ID corresponding to the ID listed in the processor object. A value of 0xFF signifies that this applies to all processors in the machine.</p> <p>Note that the use of the Processor declaration operator is deprecated. See the compatibility note in <a href="#">Section 5.2.12.12</a> and see <a href="#">Section 19.6.108</a>, "Processor (Declare Processor)."</p>
Flags	2	3	MPS INTI flags. See <a href="#">Table 5-50</a> for a description of this field.
Local APIC LINT#	1	5	Local APIC interrupt input LINTn to which NMI is connected.

### 5.2.12.8 Local APIC Address Override Structure

This optional structure supports 64-bit systems by providing an override of the physical address of the local APIC in the MADT's table header, which is defined as a 32-bit field.

If defined, OSPM must use the address specified in this structure for all local APICs (and local SAPICs), rather than the address contained in the MADT's table header. Only one Local APIC Address Override Structure may be defined.

**Table 5-53 Local APIC Address Override Structure**

Field	Byte Length	Byte Offset	Description
Type	1	0	5 Local APIC Address Override Structure
Length	1	1	12
Reserved	2	2	Reserved (must be set to zero)
Local APIC Address	8	4	Physical address of Local APIC. For Itanium™ Processor Family (IPF)-based platforms, this field contains the starting address of the Processor Interrupt Block. See the <i>Intel® Itanium™ Architecture Software Developer’s Manual</i> for more information.

### 5.2.12.9 I/O SAPIC Structure

The I/O SAPIC structure is very similar to the I/O APIC structure. If both I/O APIC and I/O SAPIC structures exist for a specific APIC ID, the information in the I/O SAPIC structure must be used.

The I/O SAPIC structure uses the I/O APIC ID field as defined in the I/O APIC table. The Global System Interrupt Base field remains unchanged but has been moved. The I/O APIC Address field has been deleted. A new address and reserved field have been added.

**Table 5-54 I/O SAPIC Structure**

Field	Byte Length	Byte Offset	Description
Type	1	0	6 I/O SAPIC Structure
Length	1	1	16
I/O APIC ID	1	2	I/O SAPIC ID
Reserved	1	3	Reserved (must be zero)
Global System Interrupt Base	4	4	The global system interrupt number where this I/O SAPIC’s interrupt inputs start. The number of interrupt inputs is determined by the I/O SAPIC’s <i>Max Redir Entry</i> register.
I/O SAPIC Address	8	8	The 64-bit physical address to access this I/O SAPIC. Each I/O SAPIC resides at a unique address.

If defined, OSPM must use the information contained in the I/O SAPIC structure instead of the information from the I/O APIC structure.

If both I/O APIC and an I/O SAPIC structures exist in an MADT, the OEM/platform firmware writer must prevent “mixing” I/O APIC and I/O SAPIC addresses. This is done by ensuring that there are at least as many I/O SAPIC structures as I/O APIC structures and that every I/O APIC structure has a corresponding I/O SAPIC structure (same APIC ID).

### 5.2.12.10 Local SAPIC Structure

The Processor local SAPIC structure is very similar to the processor local APIC structure. When using the SAPIC interrupt model, each processor in the system is required to have a Processor Local SAPIC record in

the MADT, and a processor device object in the DSDT. OSPM does not expect the information provided in this table to be updated if the processor information changes during the lifespan of an OS boot. While in the sleeping state, processors are not allowed to be added, removed, nor can their SAPIC ID or Flags change. When a processor is not present, the Processor Local SAPIC information is either not reported or flagged as disabled.

**Table 5-55 Processor Local SAPIC Structure**

Field	Byte Length	Byte Offset	Description
Type	1	0	7 Processor Local SAPIC structure
Length	1	1	Length of the Local SAPIC Structure in bytes.
ACPI Processor ID	1	2	OSPM associates the Local SAPIC Structure with a processor object declared in the namespace using the <b>Processor</b> statement by matching the processor object's ProcessorID value with this field. The use of the Processor statement is deprecated. See the compatibility note in <a href="#">Section 5.2.12.12</a> , and <a href="#">Section 19.6.108</a> , "Processor (Declare Processor)."
Local SAPIC ID	1	3	The processor's local SAPIC ID
Local SAPIC EID	1	4	The processor's local SAPIC EID
<i>Reserved</i>	3	5	Reserved (must be set to zero)
Flags	4	8	Local SAPIC flags. See <a href="#">Table 5-47</a> for a description of this field.
ACPI Processor UID Value	4	12	OSPM associates the Local SAPIC Structure with a processor object declared in the namespace using the <b>Device</b> statement, when the _UID child object of the processor device evaluates to a numeric value, by matching the numeric value with this field.
ACPI Processor UID String	>=1	16	OSPM associates the Local SAPIC Structure with a processor object declared in the namespace using the <b>Device</b> statement, when the _UID child object of the processor device evaluates to a string, by matching the string with this field. This value is stored as a null-terminated ASCII string.

### 5.2.12.11 Platform Interrupt Source Structure

The Platform Interrupt Source structure is used to communicate which I/O SAPIC interrupt inputs are connected to the platform interrupt sources.

Platform Management Interrupts (PMIs) are used to invoke platform firmware to handle various events (similar to SMI in IA-32). The Intel® Itanium™ architecture permits the I/O SAPIC to send a vector value in the interrupt message of the PMI type. This value is specified in the I/O SAPIC Vector field of the Platform Interrupt Sources Structure.

INIT messages cause processors to soft reset.

If a platform can generate an interrupt after correcting platform errors (e.g., single bit error correction), the interrupt input line used to signal such corrected errors is specified by the Global System Interrupt field in the following table. Some systems may restrict the retrieval of corrected platform error

information to a specific processor. In such cases, the firmware indicates the processor that can retrieve the corrected platform error information through the Processor ID and EID fields in the structure below. OSPM is required to program the I/O SAPIC redirection table entries with the Processor ID, EID values specified by the ACPI system firmware. On platforms where the retrieval of corrected platform error information can be performed on any processor, the firmware indicates this capability by setting the CPEI Processor Override flag in the Platform Interrupt Source Flags field of the structure below. If the CPEI Processor Override Flag is set, OSPM uses the processor specified by Processor ID, and EID fields of the structure below only as a target processor hint and the error retrieval can be performed on any processor in the system. However, firmware is required to specify valid values in Processor ID, EID fields to ensure backward compatibility.

If the CPEI Processor Override flag is clear, OSPM may reject a ejection request for the processor that is targeted for the corrected platform error interrupt. If the CPEI Processor Override flag is set, OSPM can retarget the corrected platform error interrupt to a different processor when the target processor is ejected.

Note that the \_MAT object can return a buffer containing Platform Interrupt Source Structure entries. It is allowed for such an entry to refer to a Global System Interrupt that is already specified by a Platform Interrupt Source Structure provided through the static MADT table, provided the value of platform interrupt source flags are identical.

Refer to the Itanium<sup>TM</sup> Processor Family System Abstraction Layer (SAL) Specification for details on handling the Corrected Platform Error Interrupt.

**Table 5-56 Platform Interrupt Source Structure**

Field	Byte Length	Byte Offset	Description
Type	1	0	8 Platform Interrupt Source structure
Length	1	1	16
Flags	2	2	MPS INTI flags. See <a href="#">Table 5-50</a> for a description of this field.
Interrupt Type	1	4	1 PMI 2 INIT 3 Corrected Platform Error Interrupt All other values are reserved.
Processor ID	1	5	Processor ID of destination.
Processor EID	1	6	Processor EID of destination.
I/O SAPIC Vector	1	7	Value that OSPM must use to program the vector field of the I/O SAPIC redirection table entry for entries with the PMI interrupt type.
Global System Interrupt	4	8	The Global System Interrupt that this platform interrupt will signal.
Platform Interrupt Source Flags	4	12	Platform Interrupt Source Flags. See <a href="#">Table 5-57</a> for a description of this field

**Table 5-57 Platform Interrupt Source Flags**

Platform Interrupt Source Flags	Bit Length	Bit Offset	Description
CPEI Processor Override	1	0	When set, indicates that retrieval of error information is allowed from any processor and OSPM is to use the information provided by the processor ID, EID fields of the Platform Interrupt Source Structure ( <a href="#">Table 5-56</a> ) as a target processor hint.
Reserved	31	1	Must be zero.

### 5.2.12.12 Processor Local x2APIC Structure

The Processor X2APIC structure is very similar to the processor local APIC structure. When using the X2APIC interrupt model, logical processors are required to have a processor device object in the DSDT and must convey the processor's APIC information to OSPM using the Processor Local X2APIC structure.

**Note:** *[Compatibility note] On some legacy OSes, Logical processors with APIC ID values less than 255 (whether in XAPIC or X2APIC mode) must use the Processor Local APIC structure to convey their APIC information to OSPM, and those processors must be declared in the DSDT using the Processor() keyword. Logical processors with APIC ID values 255 and greater must use the Processor Local x2APIC structure and be declared using the Device() keyword. See [Section 19.6.108 "Processor \(Declare Processor\)"](#) for more information.*

OSPM does not expect the information provided in this table to be updated if the processor information changes during the lifespan of an OS boot. While in the sleeping state, logical processors must not be added or removed, nor can their X2APIC ID or x2APIC Flags change. When a logical processor is not present, the processor local X2APIC information is either not reported or flagged as disabled.

The format of x2APIC structure is listed in [Table 5-58](#)

**Table 5-58 Processor Local x2APIC Structure**

Field	Byte Length	Byte Offset	Description
Type	1	0	9 Processor Local x2APIC structure
Length	1	1	16
Reserved	2	2	Reserved - Must be zero
X2APIC ID	4	4	The processor's local x2APIC ID.
Flags	4	8	Same as Local APIC flags. See <a href="#">Table 5-47</a> for a description of this field.
ACPI Processor UID	4	12	OSPM associates the X2APIC Structure with a processor object declared in the namespace using the Device statement, when the _UID child object of the processor device evaluates to a numeric value, by matching the numeric value with this field

### 5.2.12.13 Local x2APIC NMI Structure

The Local APIC NMI and Local x2APIC NMI structures describe the interrupt input (LINTn) that NMI is connected to for each of the logical processors in the system where such a connection exists. Each NMI

connection to a processor requires a separate NMI structure. This information is needed by OSPM to enable the appropriate APIC entry.

NMI connection to a logical processor with local x2APIC ID 255 and greater requires an X2APIC NMI structure. NMI connection to a logical processor with an x2APIC ID less than 255 requires a Local APIC NMI structure. For example, if the platform contains 8 logical processors with x2APIC IDs 0-3 and 256-259 and NMI is connected LINT1 for processor 3, 2, 256 and 257 then two Local APIC NMI entries and two X2APIC NMI entries must be provided in the MADT.

The Local APIC NMI structure is used to specify global LINTx for all processors if **all** logical processors have x2APIC ID less than 255. If the platform contains **any** logical processors with an x2APIC ID of 255 or greater then the Local X2APIC NMI structure must be used to specify global LINTx for **ALL** logical processors. The format of x2APIC NMI structure is listed in [Table 5-59](#).

**Table 5-59 Local x2APIC NMI Structure**

Field	Byte Length	Byte Offset	Description
Type	1	0	0AH Local x2APIC NMI Structure
Length	1	1	12
Flags	2	2	Same as MPS INTI flags. See <a href="#">Table 5-50</a> for a description of this field.
ACPI Processor UID	4	4	UID corresponding to the ID listed in the processor Device object. A value of 0xFFFFFFFF signifies that this applies to all processors in the machine.
Local x2APIC LINT#	1	8	Local x2APIC interrupt input LINTn to which NMI is connected.
Reserved	3	9	Reserved - Must be zero.

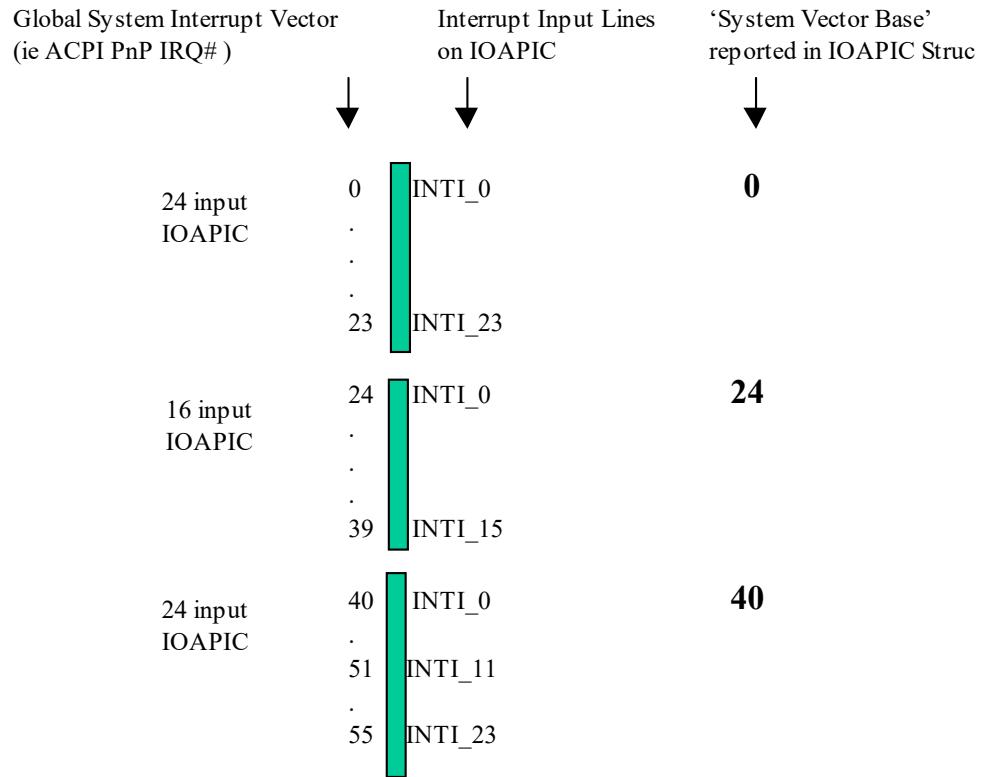


Figure 5-17 APIC–Global System Interrupts

### 5.2.12.14 GIC CPU Interface (GICC) Structure

In the GIC interrupt model, logical processors are required to have a Processor Device object in the DSDT, and must convey each processor's GIC information to the OS using the GICC structure.

The format of the GICC structure is shown in [Table 5-60](#).

**Table 5-60 GICC Structure**

Field	Byte Length	Byte Offset	Description
Type	1	0	0xB GICC structure
Length	1	1	80
<i>Reserved</i>	2	2	Reserved - Must be zero
CPU Interface Number	4	4	GIC's CPU Interface Number. In GICv1/v2 implementations, this value matches the bit index of the associated processor in the GIC distributor's GICD_ITARGETSR register. For GICv3/4 implementations this field must be provided by the platform, if compatibility mode is supported. If it is not supported by the implementation, then this field must be zero.
ACPI Processor UID	4	8	The OS associates this GICC Structure with a processor device object in the namespace when the _UID child object of the processor device evaluates to a numeric value that matches the numeric value in this field.
Flags	4	12	See <a href="#">Table 5-61</a> .
Parking Protocol Version	4	16	Version of the ARM-Processor Parking Protocol implemented. See <a href="http://uefi.org/acpi">http://uefi.org/acpi</a> . The document link is listed under "Multiprocessor Startup for ARM Platforms" For systems that support PSCI exclusively and do not support the parking protocol, this field must be set to 0.
Performance Interrupt GSIV	4	20	The GSIV used for Performance Monitoring Interrupts
Parked Address	8	24	The 64-bit physical address of the processor's Parking Protocol mailbox
Physical Base Address	8	32	On GICv1/v2 systems and GICv3/4 systems in GICv2 compatibility mode, this field holds the 64-bit physical address at which the processor can access this GIC CPU Interface. If provided here, the "Local Interrupt Controller Address" field in the MADT must be ignored by the OSPM.
GICV	8	40	Address of the GIC virtual CPU interface registers. If the platform is not presenting a GICv2 with virtualization extensions this field can be 0.

Field	Byte Length	Byte Offset	Description
GICH	8	48	Address of the GIC virtual interface control block registers. If the platform is not presenting a GICv2 with virtualization extensions this field can be 0.
VGIC Maintenance interrupt	4	56	GSIV for Virtual GIC maintenance interrupt
GICR Base Address	8	60	On systems supporting GICv3 and above, this field holds the 64-bit physical address of the associated Redistributor. If all of the GIC Redistributors are in the always-on power domain, GICR structures should be used to describe the Redistributors instead, and this field must be set to 0. If a GICR structure is present in the MADT then this field must be ignored by the OSPM.
MPIDR	8	68	<p>This fields follows the MPIDR formatting of ARM architecture. If the implements ARMv7 architecure then the format must be:</p> <p>Bits [63:24] Must be zero            Bits [23:16] Aff2 : Match Aff2 of target processor MPIDR            Bits [15:8] Aff1 : Match Aff1 of target processor MPIDR            Bits [7:0] Aff0 : Match Aff0 of target processor MPIDR</p> <p>For platforms implementing ARMv8 the format must be:            Bits [63:40] Must be zero            Bits [39:32] Aff3 : Match Aff3 of target processor MPIDR            Bits [31:24] Must be zero            Bits [23:16] Aff2 : Match Aff2 of target processor MPIDR            Bits [15:8] Aff1 : Match Aff1 of target processor MPIDR            Bits [7:0] Aff0 : Match Aff0 of target processor MPIDR</p>
Processor Power Efficiency Class	1	76	Describes the relative power efficiency of the associated processor. Lower efficiency class numbers are more efficient than higher ones (e.g. efficiency class 0 should be treated as more efficient than efficiency class 1). However, absolute values of this number have no meaning: 2 isn't necessarily half as efficient as 1.
Reserved	1	77	Must be zero.
SPE overflow Interrupt	2	78	Statistical Profiling Extension buffer overflow GSIV. This interrupt is a level triggered PPI. Zero if SPE is not supported by this processor.

**Table 5-61 GICC CPU Interface Flags**

GIC Flags	Bit Length	Bit Offset	Description
Enabled	1	0	If zero, this processor is unusable, and the operating system support will not attempt to use it.
Performance Interrupt Mode	1	1	0 - Level-triggered 1 - Edge-Triggered
VGIC Maintenance interrupt Mode Flags	1	2	0 - Level-triggered 1 - Edge-Triggered
Reserved	29	3	Must be zero.

### 5.2.12.15 GIC Distributor (GICD) Structure

ACPI represents all wired interrupts as “flat” values known as global system interrupts (GSIVs) as described in [Section 5.2.13](#). On ARM-based systems the Generic Interrupt Controller (GIC) manages interrupts on the system. Each interrupt is identified in the GIC by an interrupt identifier (INTID). ACPI GSIVs map one to one to GIC INTIDs for peripheral interrupts, whether shared (SPI) or private (PPI). The GIC distributor structure describes the GIC distributor to the OS. One, and only one, GIC distributor structure must be present in the MADT for an ARM based system.

The format of the GICD structure is listed in [Table 5-62](#).

**Table 5-62 GICD Structure**

Field	Byte Length	Byte Offset	Description
Type	1	0	0xC GICD structure
Length	1	1	24
Reserved	2	2	Reserved - Must be zero
GIC ID	4	4	This GIC Distributor’s hardware ID
Physical Base Address	8	8	The 64-bit physical address for this Distributor
System Vector Base	4	16	Reserved - Must be zero
GIC version	1	20	0x00: No GIC version is specified, fall back to hardware discovery for GIC version 0x01: GICv1 0x02: GICv2 0x03: GICv3 0x04: GICv4 0x05-0xFF, Reserved for future use.
Reserved	3	21	Must be zero

### 5.2.12.16 GIC MSI Frame Structure

Each GICv2m MSI frame consists of a 4k page which includes registers to generate message signaled interrupts to an associated GIC distributor. The frame also includes registers to discover the set of distributor lines which may be signaled by MSIs from that frame. A system may have multiple MSI frames, and separate frames may be defined for secure and non-secure access. This structure must only be used to describe non-secure MSI frames.

The format of the GIC MSI Frame Structure is listed in [Table 5-63](#).

**Table 5-63 GIC MSI Frame Structure**

Field	Byte Length	Byte Offset	Description
Type	1	0	0xD GIC MSI Frame structure
Length	1	1	24
<i>Reserved</i>	2	2	Reserved - Must be zero
GIC MSI Frame ID	4	4	GIC MSI Frame ID. In a system with multiple GIC MSI frames, this value must be unique to each one.
Physical Base Address	8	8	The 64-bit physical address for this MSI Frame
Flags	4	16	GIC MSI Frame Flags. See <a href="#">Table 5-64</a>
SPI Count	2	20	SPI Count used by this frame. Unless the SPI Count Select flag is set to 1 this value should match the lower 16 bits of the MSI_TYPER register in the frame.
SPI Base	2	22	SPI Base used by this frame. Unless the SPI Base Select flag is set to 1 this value should match the upper 16 bits of the MSI_TYPER register in the frame.

**Table 5-64 GIC MSI Frame Flags**

GIC MSI Frame Flags	Bit Length	Bit Offset	Description
SPI Count/Base Select	1	0	0: The SPI Count and Base fields should be ignored, and the actual values should be queried from the MSI_TYPER register in the associated GIC MSI frame. 1: The SPI Count and Base values override the values specified in the MSI_TYPER register in the associated GIC MSI frame.
Reserved	31	1	Must be zero.

### 5.2.12.17 GIC Redistributor (GICR) Structure

The GICR Structure is described in [Table 5-65](#). This structure enables the discovery of GIC Redistributor base addresses by providing the Physical Base Address of a page range containing the GIC Redistributors. More than one GICR Structure may be presented in the MADT. GICR structures should only be used when

describing GIC implementations which conform to version 3 or higher of the GIC architecture and which place all Redistributors in the always-on power domain. When a GICR structure is presented, the OSPM must ignore the GICR Base Address field of the GICC structures (see [Table 5-60](#)).

**Table 5-65 GICR Structure**

Field	Byte Length	Byte Offset	Description
Type	1	0	0xE GICR structure
Length	1	1	16
Reserved	2	2	Reserved - Must be zero
Discovery Range Base Address	8	4	The 64-bit physical address of a page range containing all GIC Redistributors
Discovery Range Length	4	12	Length of the GIC Redistributor Discovery page range.

### 5.2.12.18 GIC Interrupt Translation Service (ITS) Structure

The GIC ITS is optionally supported in GICv3/v4 implementations. The format of the GIC ITS Structure is listed in [Table 5-66](#):

**Table 5-66 GIC ITS Structure**

Field	Byte Length	Byte Offset	Description
Type	1	0	0xF GIC ITS structure
Length	1	1	20
Reserved	2	2	Reserved - Must be zero
GIC ITS ID	4	4	GIC ITS ID. In a system with multiple GIC ITS units, this value must be unique to each one.
Physical Base Address	8	8	The 64-bit physical address for the Interrupt Translation Service
Reserved	4	16	Reserved – Must be zero

### 5.2.13 Global System Interrupts


Global System Interrupts can be thought of as ACPI Plug and Play IRQ numbers. They are used to virtualize interrupts in tables and in ASL methods that perform resource allocation of interrupts. Do not confuse global system interrupts with ISA IRQs although in the case of the IA-PC 8259 interrupts they correspond in a one-to-one fashion.

There are two interrupt models used in ACPI-enabled systems.

The first model is the APIC model. In the APIC model, the number of interrupt inputs supported by each I/O APIC can vary. OSPM determines the mapping of the Global System Interrupts by determining how

many interrupt inputs each I/O APIC supports and by determining the global system interrupt base for each I/O APIC as specified by the I/O APIC Structure. OSPM determines the number of interrupt inputs by reading the Max Redirection register from the I/O APIC. The global system interrupts mapped to that I/O APIC begin at the global system interrupt base and extending through the number of interrupts specified in the Max Redirection register. This mapping is depicted in [Figure 5-17](#).

There is exactly one I/O APIC structure per I/O APIC in the system.

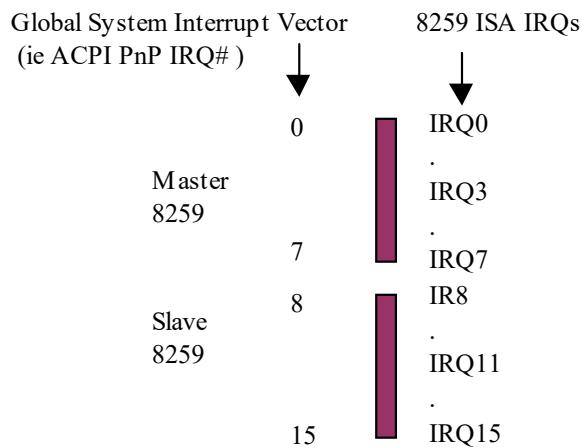

**Figure 5-18 8259–Global System Interrupts**

The other interrupt model is the standard AT style mentioned above which uses ISA IRQs attached to a master slave pair of 8259 PICs. The system vectors correspond to the ISA IRQs. The ISA IRQs and their mappings to the 8259 pair are part of the AT standard and are well defined. This mapping is depicted in [Figure 5-18](#).

### 5.2.14 Smart Battery Table (SBST)

If the platform supports batteries as defined by the Smart Battery Specification 1.0 or 1.1, then an Smart Battery Table (SBST) is present. This table indicates the energy level trip points that the platform requires for placing the system into the specified sleeping state and the suggested energy levels for warning the user to transition the platform into a sleeping state. Notice that while Smart Batteries can report either in current (mA/mAh) or in energy (mW/mWh), OSPM must set them to operate in energy (mW/mWh) mode so that the energy levels specified in the SBST can be used. OSPM uses these tables with the capabilities of the batteries to determine the different trip points. For more precise definitions of these levels, see [Section 3.9.3](#), “Battery Gas Gauge.”

**Table 5-67 Smart Battery Description Table (SBST) Format**

Field	Byte Length	Byte Offset	Description
Header			

Field	Byte Length	Byte Offset	Description
Signature	4	0	'SBST' Signature for the Smart Battery Description Table.
Length	4	4	Length, in bytes, of the entire SBST
Revision	1	8	1
Checksum	1	9	Entire table must sum to zero.
OEMID	6	10	OEM ID
OEM Table ID	8	16	For the SBST, the table ID is the manufacturer model ID.
OEM Revision	4	24	OEM revision of SBST for supplied OEM Table ID.
Creator ID	4	28	Vendor ID of utility that created the table. For tables containing Definition Blocks, this is the ID for the ASL Compiler.
Creator Revision	4	32	Revision of utility that created the table. For tables containing Definition Blocks, this is the revision for the ASL Compiler.
Warning Energy Level	4	36	OEM suggested energy level in milliWatt-hours (mWh) at which OSPM warns the user.
Low Energy Level	4	40	OEM suggested platform energy level in mWh at which OSPM will transition the system to a sleeping state.
Critical Energy Level	4	44	OEM suggested platform energy level in mWh at which OSPM performs an emergency shutdown.

### 5.2.15 Embedded Controller Boot Resources Table (ECDT)

This optional table provides the processor-relative, translated resources of an Embedded Controller. The presence of this table allows OSPM to provide Embedded Controller operation region space access before the namespace has been evaluated. If this table is not provided, the Embedded Controller region space will not be available until the Embedded Controller device in the AML namespace has been discovered and enumerated. The availability of the region space can be detected by providing a \_REG method object underneath the Embedded Controller device.

**Table 5-68 Embedded Controller Boot Resources Table Format**

Field	Byte Length	Byte Offset	Description
Header			
Signature	4	0	'ECDT' Signature for the Embedded Controller Table.
Length	4	4	Length, in bytes, of the entire Embedded Controller Table
Revision	1	8	1
Checksum	1	9	Entire table must sum to zero.
OEMID	6	10	OEM ID

Field	Byte Length	Byte Offset	Description
OEM Table ID	8	16	For the Embedded Controller Table, the table ID is the manufacturer model ID.
OEM Revision	4	24	OEM revision of Embedded Controller Table for supplied OEM Table ID.
Creator ID	4	28	Vendor ID of utility that created the table. For tables containing Definition Blocks, this is the ID for the ASL Compiler.
Creator Revision	4	32	Revision of utility that created the table. For tables containing Definition Blocks, this is the revision for the ASL Compiler.
EC_CONTROL	12	36	Contains the processor relative address, represented in Generic Address Structure format, of the Embedded Controller Command/Status register. <b>Note:</b> Only System I/O space and System Memory space are valid for values for Address_Space_ID.
EC_DATA	12	48	Contains the processor-relative address, represented in Generic Address Structure format, of the Embedded Controller Data register. <b>Note:</b> Only System I/O space and System Memory space are valid for values for Address_Space_ID.
UID	4	60	Unique ID—Same as the value returned by the _UID under the device in the namespace that represents this embedded controller.
GPE_BIT	1	64	The bit assignment of the SCI interrupt within the GPE_STS register of a GPE block described in the FADT that the embedded controller triggers.
EC_ID	Variable	65	ASCII, null terminated, string that contains a fully qualified reference to the namespace object that is this embedded controller device (for example, "\\_SB.PCI0.ISA.EC"). Quotes are omitted in the data field.

ACPI OSPM implementations supporting Embedded Controller devices must also support the ECDT. ACPI 1.0 OSPM implementation will not recognize or make use of the ECDT. The following example code shows how to detect whether the Embedded Controller operation regions are available in a manner that is backward compatible with prior versions of ACPI/OSPM.

```

Device(EC0) {
    Name(REGC, Ones)
    Method(_REG, 2) {
        If(Lequal(Arg0, 3)) {
            Store(Arg1, REGC)
        }
    }
}
Method(ECAV, 0) {
    If(Lequal(REGC, Ones)) {

```

```

If(LgreaterEqual (_REV, 2)) {
    Return(One)
}
Else {
    Return(Zero)
}
}
Else {
    Return(REGC)
}
}

```

To detect the availability of the region, call the ECAV method. For example:

```

If (\_SB.PCI0.ECO.ECAV()) {
    ...regions are available...
}
else {
    ...regions are not available...
}

```

## 5.2.16 System Resource Affinity Table (SRAT)

This optional table provides information that allows OSPM to associate the following types of devices with system locality / proximity domains and clock domains:

- processors,
- memory ranges (including those provided by hot-added memory devices), and
- generic initiators (e.g. heterogeneous processors and accelerators, GPUs, and I/O devices with integrated compute or DMA engines).

On NUMA platforms, SRAT information enables OSPM to optimally configure the operating system during a point in OS initialization when evaluation of objects in the ACPI Namespace is not yet possible.

OSPM evaluates the SRAT only during OS initialization. The Local APIC ID / Local SAPIC ID / Local x2APIC ID or the GICC ACPI Processor UID of all processors started at boot time must be present in the SRAT. If the Local APIC ID / Local SAPIC ID / Local x2APIC ID or the GICC ACPI Processor UID of a dynamically added processor is not present in the SRAT, a \_PXM object must exist for the processor's device or one of its ancestors in the ACPI Namespace.

**Note:** SRAT is the place where proximity domains are defined, and \_PXM provides a mechanism to associate a device object (and its children) to an SRAT-defined proximity domain.

See [Section 6.2.14 \(\\_PXM Proximity\)](#) for more information.

**Table 5-69 Static Resource Affinity Table Format**

Field	Byte Length	Byte Offset	Description
Header			
Signature	4	0	'SRAT'. Signature for the System Resource Affinity Table.
Length	4	4	Length, in bytes, of the entire SRAT. The length implies the number of Entry fields at the end of the table
Revision	1	8	3
Checksum	1	9	Entire table must sum to zero.
OEMID	6	10	OEM ID.
OEM Table ID	8	16	For the System Resource Affinity Table, the table ID is the manufacturer model ID.
OEM Revision	4	24	OEM revision of System Resource Affinity Table for supplied OEM Table ID.
Creator ID	4	28	Vendor ID of utility that created the table.
Creator Revision	4	32	Revision of utility that created the table.
<i>Reserved</i>	4	36	Reserved to be 1 for backward compatibility
<i>Reserved</i>	8	40	Reserved
Static Resource Allocation Structure[n]	---	48	A list of static resource allocation structures for the platform. See <a href="#">Section 5.2.16.1</a> , "Processor Local APIC/SAPIC Affinity Structure", <a href="#">Section 5.2.16.2</a> "Memory Affinity Structure", <a href="#">Section 5.2.16.3</a> "Processor Local x2APIC Affinity Structure", and <a href="#">Section 5.2.16.4</a> , "GICC Affinity Structure.

### 5.2.16.1 Processor Local APIC/SAPIC Affinity Structure

The Processor Local APIC/SAPIC Affinity structure provides the association between the APIC ID or SAPIC ID/EID of a processor and the proximity domain to which the processor belongs. [Table 5-70](#) provides the details of the Processor Local APIC/SAPIC Affinity structure.

**Table 5-70 Processor Local APIC/SAPIC Affinity Structure**

Field	Byte Length	Byte Offset	Description
Type	1	0	0 Processor Local APIC/SAPIC Affinity Structure
Length	1	1	16
Proximity Domain [7:0]	1	2	Bit [7:0] of the proximity domain to which the processor belongs.
APIC ID	1	3	The processor local APIC ID.
Flags	4	4	Flags – Processor Local APIC/SAPIC Affinity Structure. See <a href="#">Table 5-71</a> for a description of this field.
Local SAPIC EID	1	8	The processor local SAPIC EID.
Proximity Domain [31:8]	3	9	Bit [31:8] of the proximity domain to which the processor belongs.
Clock Domain	4	12	The clock domain to which the processor belongs. See <a href="#">Section 6.2.1, “_CDM (Clock Domain)”</a> .

**Table 5-71 Flags – Processor Local APIC/SAPIC Affinity Structure**

Field	Bit Length	Bit Offset	Description
Enabled	1	0	If clear, the OSPM ignores the contents of the Processor Local APIC/SAPIC Affinity Structure. This allows system firmware to populate the SRAT with a static number of structures but only enable them as necessary.
Reserved	31	1	Must be zero.

### 5.2.16.2 Memory Affinity Structure

The Memory Affinity structure provides the following topology information statically to the operating system:

- The association between a range of memory and the proximity domain to which it belongs
- Information about whether the range of memory can be hot-plugged.

[Table 5-72](#) provides the details of the Memory Affinity structure.

**Table 5-72 Memory Affinity Structure**

Field	Byte Length	Byte Offset	Description
Type	1	0	1 Memory Affinity Structure
Length	1	1	40
Proximity Domain	4	2	Integer that represents the proximity domain to which the "range of memory" belongs.
Reserved	2	6	Reserved
Base Address Low	4	8	Low 32 Bits of the Base Address of the memory range
Base Address High	4	12	High 32 Bits of the Base Address of the memory range
Length Low	4	16	Low 32 Bits of the length of the memory range.
Length High	4	20	High 32 Bits of the length of the memory range.
Reserved	4	24	Reserved.
Flags	4	28	Flags – Memory Affinity Structure. Indicates whether the region of memory is enabled and can be hot plugged. See <a href="#">Table 5-73</a> .
Reserved	8	32	Reserved.

**Table 5-73 Flags – Memory Affinity Structure**

Field	Bit Length	Bit Offset	Description
Enabled	1	0	If clear, the OSPM ignores the contents of the Memory Affinity Structure. This allows system firmware to populate the SRAT with a static number of structures but only enable them as necessary.
Hot Pluggable	1	1	The information conveyed by this bit depends on the value of the Enabled bit.  If the Enabled bit is set and the Hot Pluggable bit is also set. The system hardware supports hot-add and hot-remove of this memory region  If the Enabled bit is set and the Hot Pluggable bit is clear, the system hardware does not support hot-add or hot-remove of this memory region.  If the Enabled bit is clear, the OSPM will ignore the contents of the Memory Affinity Structure
NonVolatile	1	2	If set, the memory region represents Non-Volatile memory
Reserved	29	3	Must be zero.

### 5.2.16.3 Processor Local x2APIC Affinity Structure

The Processor Local x2APIC Affinity structure provides the association between the local x2APIC ID of a processor and the proximity domain to which the processor belongs. [Table 5-74](#) provides the details of the Processor Local x2APIC Affinity structure.

**Table 5-74 Processor Local x2APIC Affinity Structure**

Field	Byte Length	Byte Offset	Description
Type	1	0	2 Processor Local x2APIC Affinity Structure
Length	1	1	24
<i>Reserved</i>	2	2	Reserved – Must be zero
Proximity Domain	4	4	The proximity domain to which the logical processor belongs.
X2APIC ID	4	8	The processor local x2APIC ID.
Flags	4	12	Same as Processor Local APIC/SAPIC Affinity Structure flags. See <a href="#">Table 5-71</a> for a description of this field.
Clock Domain	4	16	The clock domain to which the logical processor belongs. See <a href="#">Section 6.2.1, “_CDM (Clock Domain)”).</a>
<i>Reserved</i>	4	20	Reserved.

On x86-based platforms, the OSPM uses the Hot Pluggable bit to determine whether it should shift into PAE mode to allow for insertion of hot-plug memory with physical addresses over 4 GB.

### 5.2.16.4 GICC Affinity Structure

The GICC Affinity Structure provides the association between the ACPI Processor UID of a processor and the proximity domain to which the processor belongs. [Table 5-75](#) provides the details of the GICC Affinity structure.

**Table 5-75 GICC Affinity Structure**

Field	Byte Length	Byte Offset	Description
Type	1	0	3 GICC Affinity Structure.
Length	1	1	18
Proximity Domain	4	2	The proximity domain to which the logical processor belongs.
ACPI Processor UID	4	6	The ACPI Processor UID of the associated GICC.
Flags	4	10	Flags – GICC Affinity Structure. See <a href="#">Table 5-76</a> for a description of this field.
Clock Domain	4	14	The clock domain to which the logical processor belongs. See <a href="#">Section 6.2.1, “_CDM (Clock Domain)”).</a>

**Table 5-76 Flags – GICC Affinity Structure**

Field	Bit Length	Bit Offset	Description
Enabled	1	0	If clear, the OSPM ignores the contents of the GICC Affinity Structure. This allows system firmware to populate the SRAT with a static number of structures but only enable them as necessary.
Reserved	31	1	Must be zero.

### 5.2.16.5 GIC Interrupt Translation Service (ITS) Affinity Structure

The GIC ITS Affinity Structure provides the association between a GIC ITS and a proximity domain. This enables the OSPM to discover the memory that is closest to the ITS, and use that in allocating its management tables and command queue. The ITS is identified using an ID matching a declaration of a GIC ITS in the MADT, see [Section 5.2.12.18](#) for details. The following table provides the details of the GIC ITS Affinity structure.

**Table 5-77 Architecture Specific Affinity Structure**

Field	Byte Length	Byte Offset	Description
Type	1	0	4 GIC ITS Affinity Structure
Length	1	1	12
Proximity domain	4	2	Integer that represents the proximity domain to which the GIC ITS belongs to.
Reserved	2	6	Reserved must be zero
ITS ID	4	8	ITS ID matching a GIC ITS entry in the MADT

### 5.2.16.6 Generic Initiator Affinity Structure

The Generic Initiator Affinity Structure provides the association between a generic initiator and the proximity domain to which the initiator belongs. See [Table 5-78](#) for details.

Support of Generic Initiator Affinity Structures by OSPM is optional, and the platform may query whether the OS supports it via the \_OSC method. See [Section 6.2.11.2](#).

**Table 5-78 Generic Initiator Affinity Structure**

Field	Byte Length	Byte Offset	Description
Type	1	0	5 Generic Initiator Structure.
Length	1	1	32
Reserved	1	2	Reserved and must be zero.
Device Handle Type	1	3	Device Handle Type: 0 – ACPI Device Handle 1 – PCI Device Handle 2-255 - Reserved
Proximity Domain	4	4	The proximity domain to which the generic initiator belongs.
Device Handle	16	8	Device Handle of the Generic Initiator. See <a href="#">Table 5-79</a> for a description of the ACPI Device Handle, and <a href="#">Table 5-80</a> for a description of the PCI Device Handle.
Flags	4	24	Flags – Generic Initiator Affinity Structure. See <a href="#">Table 5-81</a> for a description of this field.
Reserved	4	28	Reserved and must be zero.

**Table 5-79 Device Handle - ACPI**

Field	Byte Length	Byte Offset	Description
ACPI_HID	8	0	The _HID value
ACPI_UID	4	8	The _UID value
Reserved	4	12	Must be zero.

**Table 5-80 Device Handle - PCI**

Field	Byte Length	Byte Offset	Description
PCI Segment	2	0	PCI segment number. For systems with fewer than 255 PCI buses, this number must be 0.
PCI BDF Number	2	2	PCI Bus Number (Bits 7:0 of Byte 2) PCI Device Number (Bits 7:3 of Byte 3) PCI Function Number (Bits 2:0 of Byte 3)
Reserved	12	4	Must be zero

**Table 5-81 Flags – Generic Initiator Affinity Structure**

Field	Bit Length	Bit Offset	Description
Enabled	1	0	If clear, the OSPM ignores the contents of the Generic Initiator Affinity Structure. This allows system firmware to populate the SRAT
Reserved	31	1	Must be zero.

**Note for Implementors**

If a generic device with coherent memory is attached to the system, it is recommended to define affinity structures for both the device and memory associated with the device. They both may have the same proximity domain.

### 5.2.17 System Locality Distance Information Table (SLIT)

This optional table provides a matrix that describes the relative distance (memory latency) between all System Localities, which are also referred to as Proximity Domains. Systems employing a Non Uniform Memory Access (NUMA) architecture contain collections of hardware resources including for example, processors, memory, and I/O buses, that comprise what is known as a “NUMA node”. Processor accesses to memory or I/O resources within the local NUMA node is generally faster than processor accesses to memory or I/O resources outside of the local NUMA node.

The value of each Entry[i,j] in the SLIT table, where i represents a row of a matrix and j represents a column of a matrix, indicates the relative distances from System Locality / Proximity Domain i to every other System Locality j in the system (including itself).

The i,j row and column values correlate to Proximity Domain values in the System Resource Affinity Table (SRAT), and to values returned by \_PXM objects in the ACPI namespace. See [Section 5.2.16, “System Resource Affinity Table \(SRAT\)”](#), and [Section 6.2.14, “\\_PXM \(Proximity\)”](#) for more information.

The entry value is a one-byte unsigned integer. The relative distance from System Locality i to System Locality j is the  $i*N + j$  entry in the matrix, where N is the number of System Localities. Except for the relative distance from a System Locality to itself, each relative distance is stored twice in the matrix. This provides the capability to describe the scenario where the relative distances for the two directions between System Localities is different.

The diagonal elements of the matrix, the relative distances from a System Locality to itself are normalized to a value of 10. The relative distances for the non-diagonal elements are scaled to be relative to 10. For example, if the relative distance from System Locality i to System Locality j is 2.4, a value of 24 is stored in table entry  $i*N + j$  and in  $j*N + i$ , where N is the number of System Localities.

If one locality is unreachable from another, a value of 255 (0xFF) is stored in that table entry. Distance values of 0-9 are reserved and have no meaning.

**Table 5-82 SLIT Format**

Field	Byte Length	Byte Offset	Description
Header			
Signature	4	0	'SLIT'. Signature for the System Locality Distance Information Table.
Length	4	4	Length, in bytes, of the entire System Locality Distance Information Table.
Revision	1	8	1
Checksum	1	9	Entire table must sum to zero.
OEMID	6	10	OEM ID.
OEM Table ID	8	16	For the System Locality Information Table, the table ID is the manufacturer model ID.
OEM Revision	4	24	OEM revision of System Locality Information Table for supplied OEM Table ID.
Creator ID	4	28	Vendor ID of utility that created the table. For the DSDT, RSDT, SSDT, and PSDT tables, this is the ID for the ASL Compiler.
Creator Revision	4	32	Revision of utility that created the table. For the DSDT, RSDT, SSDT, and PSDT tables, this is the revision for the ASL Compiler.
Number of System Localities	8	36	Indicates the number of System Localities in the system.
Entry[0][0]	1	44	Matrix entry (0,0), contains a value of 10.
...			
Entry[0][Number of System Localities-1]	1		Matrix entry (0, Number of System Localities-1)
Entry[1][0]	1		Matrix entry (1,0)
.....			.....
Entry[Number of System Localities-1][Number of System Localities-1]	1		Matrix entry (Number of System Localities-1, Number of System Localities-1), contains a value of 10

### 5.2.18 Corrected Platform Error Polling Table (CPEP)

Platforms may contain the ability to detect and correct certain operational errors while maintaining platform function. These errors may be logged by the platform for the purpose of retrieval. Depending on the underlying hardware support, the means for retrieving corrected platform error information varies. If the platform hardware supports interrupt-based signaling of corrected platform errors, the MADT Platform Interrupt Source Structure describes the Corrected Platform Error Interrupt (CPEI). See

[Section 5.2.12.11](#), "Platform Interrupt Source Structure". Alternatively, OSPM may poll processors for corrected platform error information. Error log information retrieved from a processor may contain information for all processors within an error reporting group. As such, it may not be necessary for OSPM to poll all processors in the system to retrieve complete error information. This optional table provides information that allows OSPM to poll only the processors necessary for a complete report of the platform's corrected platform error information.

**Table 5-83 Corrected Platform Error Polling Table Format**

Field	Byte Length	Byte Offset	Description
Header			
Signature	4	0	'CPEP'. Signature for the Corrected Platform Error Polling Table.
Length	4	4	Length, in bytes, of the entire CPET. The length implies the number of Entry fields at the end of the table
Revision	1	8	1
Checksum	1	9	Entire table must sum to zero.
OEMID	6	10	OEM ID.
OEM Table ID	8	16	For the Corrected Platform Error Polling Table, the table ID is the manufacturer model ID.
OEM Revision	4	24	OEM revision of Corrected Platform Error Polling Table for supplied OEM Table ID.
Creator ID	4	28	Vendor ID of utility that created the table.
Creator Revision	4	32	Revision of utility that created the table.
Reserved	8	36	Reserved, must be 0.
CPEP Processor Structure[n]	---	44	A list of Corrected Platform Error Polling Processor structures for the platform. See <a href="#">Section 5.2.18.1</a> , "Corrected Platform Error Polling Processor Structure".

### 5.2.18.1 Corrected Platform Error Polling Processor Structure

The Corrected Platform Error Polling Processor structure provides information on the specific processors OSPM polls for error information. [Table 5-84](#) provides the details of the Corrected Platform Error Polling Processor structure.

**Table 5-84 Corrected Platform Error Polling Processor Structure**

Field	Byte Length	Byte Offset	Description
Type	1	0	0 Corrected Platform Error Polling Processor structure for APIC/SAPIC based processors
Length	1	1	8
Processor ID	1	2	Processor ID of destination.
Processor EID	1	3	Processor EID of destination.
Polling Interval	4	4	Platform-suggested polling interval (in milliseconds)

### 5.2.19 Maximum System Characteristics Table (MSCT)

This section describes the format of the Maximum System Characteristic Table (MSCT), which provides OSPM with information characteristics of a system's maximum topology capabilities. If the system maximum topology is not known up front at boot time, then this table is not present. OSPM will use information provided by the MSCT only when the System Resource Affinity Table (SRAT) exists. The MSCT must contain all proximity and clock domains defined in the SRAT.

**Table 5-85 Maximum System Characteristics Table (MSCT) Format**

Field	Byte Length	Byte Offset	Description
Header			
Signature	4	0	'MSCT' Signature for the Maximum System Characteristics Table.
Length	4	4	Length, in bytes, of the entire MSCT.
Revision	1	8	1
Checksum	1	9	Entire table must sum to zero.
OEMID	6	10	OEM ID
OEM Table ID	8	16	For the MSCT, the table ID is the manufacturer model ID.
OEM Revision	4	24	OEM revision of MSCT for supplied OEM Table ID.
Creator ID	4	28	Vendor ID of utility that created the table. For tables containing Definition Blocks, this is the ID for the ASL Compiler.
Creator Revision	4	32	Revision of utility that created the table. For tables containing Definition Blocks, this is the revision for the ASL Compiler.
Offset to Proximity Domain Information Structure [OffsetProxDomInfo]	4	36	Offset in bytes to the Proximity Domain Information Structure table entry.

Field	Byte Length	Byte Offset	Description
Maximum Number of Proximity Domains	4	40	Indicates the maximum number of Proximity Domains ever possible in the system. The number reported in this field is (maximum domains – 1). For example if there are 0x10000 possible domains in the system, this field would report 0xFFFF.
Maximum Number of Clock Domains	4	44	Indicates the maximum number of Clock Domains ever possible in the system. The number reported in this field is (maximum domains – 1). See <a href="#">Section 6.2.1, “_CDM (Clock Domain)”</a> .
Maximum Physical Address	8	48	Indicates the maximum Physical Address ever possible in the system. Note: this is the top of the reachable physical address.
Proximity Domain Information Structure[ <i>Maximum Number of Proximity Domains</i> ]	—	[OffsetProxDomInfo]	A list of Proximity Domain Information for this implementation. The structure format is defined in the Maximum Proximity Domain Information Structure section.

### 5.2.19.1 Maximum Proximity Domain Information Structure

The Maximum Proximity Domain Information Structure is used to report system maximum characteristics. It is likely that these characteristics may be the same for many proximity domains, but they can vary from one proximity domain to another. This structure optimizes to cover the former case, while allowing the flexibility for the latter as well. These structures must be organized in ascending order of the proximity domain enumerations. All proximity domains within the Maximum Number of Proximity Domains reported in the MSCT must be covered by one of these structures.

**Table 5-86 Maximum Proximity Domain Information Structure**

Field	Byte Length	Byte Offset	Description
Revision	1	0	1
Length	1	1	22
Proximity Domain Range (low)	4	2	The starting proximity domain for the proximity domain range that this structure is providing information.
Proximity Domain Range (high)	4	6	The ending proximity domain for the proximity domain range that this structure is providing information.
Maximum Processor Capacity	4	10	The Maximum Processor Capacity of each of the Proximity Domains specified in the range. A value of 0 means that the proximity domains do not contain processors. This field must be >= the number of processor entries for the domain in the SRAT.

Maximum Memory Capacity	8	14	The Maximum Memory Capacity (size in bytes) of the Proximity Domains specified in the range. A value of 0 means that the proximity domains do not contain memory.
-------------------------	---	----	---

## 5.2.20 ACPI RAS Feature Table (RASF)

The following table describes the structure of ACPI RAS Feature Table.

**Table 5-87 RASF Table format**

Field	Byte Length	Byte Offset	Description
Header			
Signature	4	0	'RASF' is Signature for RAS Feature Table
Length	4	4	Length in bytes for entire RASF. The length implies the number of Entry fields at the end of the table
Revision	1	8	1
Checksum	1	9	Entire table must sum to zero
OEMID	6	10	OEM ID
OEM Table ID	8	16	The table ID is the manufacturer model ID
OEM Revision	4	24	OEM revision of table for supplied OEM Table ID
Creator ID	4	28	Vendor ID of utility that created the table
Creator Revision	4	32	Revision of utility that created the table
RASF Specific Entries			
RASF Platform Communication Channel Identifier	12	36	Identifier of the RASF Platform Communication Channel. OSPM should use this value to identify the PCC Sub channel structure in the RASF table

### 5.2.20.1 RASF PCC Sub Channel Identifier

RASF PCC Sub Channel Identifier is used by the OSPM to identify the PCC Sub channel structure. RASF table references its PCC Subspace by this identifier as shown in [Table 5-87](#).

### 5.2.20.2 Using PCC registers

OSPM will write PCC registers by filling in the register value in PCC sub channel space and issuing a PCC Execute command. See [Table 5-89](#).

To minimize the cost of PCC transactions, OSPM should read or write all registers in the same PCC subspace via a single read or write command.

### 5.2.20.3 RASF Communication Channel

RASF Action Entries are defined in the PCC sub channel as below.

**Table 5-88 RASF Platform Communication Channel Shared Memory Region**

Field	Byte Length	Byte Offset	Description
Signature	4	0	The PCC Signature of 0x52415346 (corresponds to ASCII signature of RASF)
Command	2	4	PCC command field; see <a href="#">Table 5-89</a> and <a href="#">Section 14</a> .
Status	2	6	PCC status field, see <a href="#">Section 14</a> .
Communication Space			
Version	2	8	Byte 0 – Minor Version Byte 1 – Major Version
RAS Capabilities	16	10	Bit Map describing the platform RAS capabilities as shown in <a href="#">Section 5.2.20.4</a> .  The Platform populates this field. The OSPM uses this field to determine the RAS capabilities of the platform.
Set RAS Capabilities	16	26	Bit Map of the RAS features for which the OSPM is invoking the command. The Bit Map is described in <a href="#">Section 5.2.20.4</a> .  OSPM sets the bit corresponding to a RAS capability to invoke a command on that capability. The bitmap implementation allows OSPM to invoke a command on each RAS feature supported by the platform at the same time.
Number of RASF Parameter blocks	2	42	The Number of parameter blocks will depend on how many RAS Capabilities the Platform Supports. Typically, there will be one Parameter Block per RAS Feature, using which that feature can be managed by OSPM.
Set RAS Capabilities Status	4	44	Status 0000b = Success 0001b = Not Valid 0010b = Not Supported 0011b = Busy 0100b = Failed 0101b = Aborted 0110b = Invalid Data

Field	Byte Length	Byte Offset	Description
Parameter Blocks	Varies (N Bytes)	48	<p>Start of the parameter blocks, the structure of which is shown in <a href="#">Table 5-91</a>.</p> <p>These parameter blocks are used as communication mailbox between the OSPM and the platform, and there is 1 parameter block for each RAS feature.</p> <p>NOTE: There can be only one parameter block per type.</p>

**Table 5-89 PCC Command Codes used by RASF Platform Communication Channel**

Command	Description
0x00	Reserved
0x01	Execute RASF Command.
0x02-0xFF	All other values are reserved.

#### 5.2.20.4 Platform RAS Capabilities

The following table defines the Platform RAS capabilities:

**Table 5-90 Platform RAS Capabilities Bitmap**

Bit	RAS Feature	Description
0	Hardware based patrol scrub supported	Indicates that the platform supports hardware based patrol scrub of DRAM memory
1	Hardware based patrol scrub supported and exposed to software	Indicates that the platform supports hardware based patrol scrub of DRAM memory and platform exposes this capability to software using this RASF mechanism
2-127	Reserved	Reserved for future use

#### 5.2.20.5 Parameter Block

The following table describes the Parameter Blocks. The structure is used to pass parameters for controlling the corresponding RAS Feature.

Each RAS Feature is assigned a TYPE number, which is the bit index into the RAS capabilities bitmap described in [Table 5-90](#).

**Table 5-91 Parameter Block Structure for PATROL\_SCRUB**

Field	Byte Length	Byte Offset	Description
Type	2	0	0x0000 – Patrol scrub
Version	2	2	Byte 0 – Minor Version Byte 1 – Major Version
Length	2	4	Length, in bytes of the entire parameter block structure
Patrol Scrub Command (INPUT)	2	6	0x01 - GET_PATROL_PARAMETERS 0x02 - START_PATROL_SCRUBBER 0x03 – STOP_PATROL_SCRUBBER
Requested Address Range (INPUT)	16	8	OSPM Specifies the BASE (Bytes 7-0) and SIZE (Bytes 15-8) of the address range to be patrol scrubbed.  OSPM sets this parameter for the following commands GET_PATROL_PARAMETERS START_PATROL_SCRUBBER
Actual Address Range (OUTPUT)	16	24	The platform returns this value in response to GET_PATROL_PARAMETERS. The platform calculates the nearest patrol scrub boundary address from where it can start. This range should be a superset of the Requested Address Range.  BASE (Bytes 7-0) and SIZE (Bytes 15-8) of the address
Flags (OUTPUT)	2	40	The platform returns this value in response to GET_PATROL_PARAMETERS  Bit [0]: Will be set if patrol scrubber is already running for address range specified in "Actual Address Range"  Bits [3:1]: Current Patrol Speeds, if Bit [0] is set 000b – Slow 100b – Medium 111b – Fast All other combinations are reserved.  Bits [15:4]: RESERVED

Field	Byte Length	Byte Offset	Description
Requested Speed (INPUT)	1	42	<p>The OSPM Sets this field as follows, for the START_PATROL_SCRUBBER command</p> <p>Bit [0]: Will be set if patrol scrubber is already running for address range specified in "Actual Address Range"</p> <p>Bits [2:0]: Requested Patrol Speeds 000b – Slow 100b – Medium 111b – Fast All other combinations are reserved.</p> <p>Bits [7:3]: RESERVED</p>

### 5.2.20.5.1 Sequence of Operations:


The following sequence documents the steps for OSPM to identify whether the platform supports hardware based patrol scrub and invoke commands to request hardware to patrol scrub the specified address range.

1. Identify whether the platform supports hardware based patrol scrub and exposes the support to software by reading the RAS capabilities bitmap in RASF table
2. Call GET\_PATROL\_PARAMETERS, by setting the *Requested Address Range*.
3. Platform Returns *Actual Address Range* and *Flags*.
4. Based on the above two data, if the OSPM decides to start the patrol scrubber or change the speed of the patrol scrubber, then the OSPM calls START\_PATROL\_SCRUBBER, by setting the *Requested Address Range* and *Requested Speed*.

### 5.2.21 Memory Power State Table (MPST)

The following table describes the structure of new ACPI memory power state table (MPST). This table defines the memory power node topology of the configuration, as described earlier in [Section 1](#). The configuration includes specifying memory power nodes and their associated information. Each memory power node is specified using address ranges, supported memory power states. The memory power states will include both hardware controlled and software controlled memory power states. There can be multiple entries for a given memory power node to support non contiguous address ranges. MPST table also defines the communication mechanism between OSPM and platform runtime firmware for triggering software controlled memory powerstate transitions implemented in platform runtime firmware.

[Figure 5-19](#) below provides structure organization overview of MPST table.

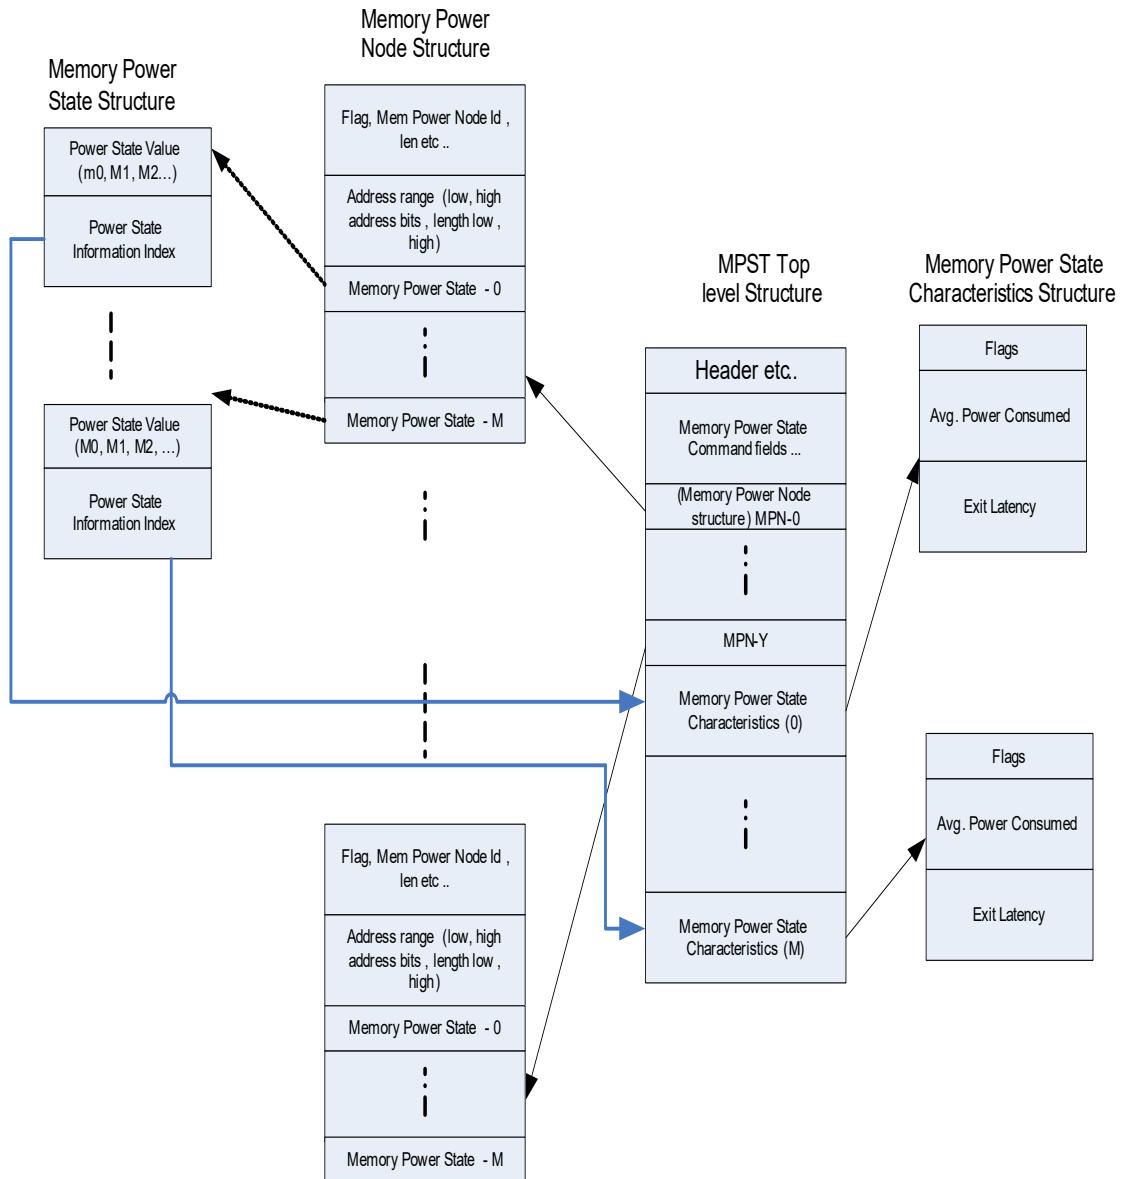

**Figure 5-19 MPST ACPI Table Overview**

**Table 5-92 MPST Table Structure**

Field	Byte Length	Byte Offset	Description
Header			
Signature	4	0	'MPST'. Signature for Memory Power State Table
Length	4	4	Length in bytes for entire MPST. The length implies the number of Entry fields at the end of the table
Revision	1	8	1
Checksum	1	9	Entire table must sum to zero
OEMID	6	10	OEM ID
OEM Table ID	8	16	For the memory power state table, the table ID is the manufacturer model ID
OEM Revision	4	24	OEM revision of memory power state Table for supplied OEM Table ID
Creator ID	4	28	Vendor ID of utility that created the table
Creator Revision	4	32	Revision of utility that created the table
Memory PCC			
MPST Platform Communication Channel Identifier	1	36	Identifier of the MPST Platform Communication Channel.
Reserved	3	37	Reserved
Memory Power Node			
Memory Power Node Count	2	40	Number of Memory power Node structure entries
Reserved	2	42	Reserved
Memory Power Node Structure[ Memory Power Node Count]	---	---	This field provides information on the memory power nodes present in the system. The information includes memory node id, power states supported & associated latencies. Further details of this field are specified in <a href="#">Section 5.2.21.4</a>
Memory Power State Characteristics			
Memory Power State Characteristics Count	2	---	Number of Memory power State Characteristics Structure entries
Reserved	2		Reserved
Memory Power State Characteristics Structure [m]	---	---	This field provides information of memory power states supported in the system. The information includes power consumed, transition latencies, relevant flags.

### 5.2.21.1 MPST PCC Sub Channel

The MPST PCC Sub Channel Identifier value provided by the platform in this field should be programmed to the Type field of PCC Communications Subspace Structure. The MPST table references its PCC Subspace in a given platform by this identifier, as shown in [Table 5-92](#).

#### 5.2.21.1.1 Using PCC registers

OSPM will write PCC registers by filling in the register value in PCC sub channel space and issuing a PCC Execute command. See [Table 5-93](#), below. All other command values are reserved.

**Table 5-93 PCC Command Codes used by MPST Platform Communication Channel**

Command	Description
0x00-0x02	All other values are reserved.
0x03	Execute MPST Command.
0x04-0xFF	All other values are reserved.

**Table 5-94 MPST Platform Communication Channel Shared Memory Region**

Field	Byte Length	Byte Offset	Description
Signature	4	0	The PCC signature. The signature of a subspace is computed by a bitwise-or of the value 0x50434300 with the subspace ID. For example, subspace 3 has signature 0x50434303.
Command	2	4	PCC command field, see <a href="#">Section 14</a> and <a href="#">Table 5-93</a> .
Status	2	6	PCC status field, see <a href="#">Section 14</a>
<b>Communication Space</b>			
MEMORY_POWER_COMMAND_REGISTER	4	8	Memory region for OSPM to write the requested memory power state. Write: 1 to this field to GET the memory power state 2 to this field to set the memory power state 3 – GET AVERAGE POWER CONSUMED 4 – GET MEMORY ENERGY CONSUMED

MEMORY_POWER_STATUS_REGISTER	4	12	<p>Bits [3:0]: Status (specific to MEMORY_POWER_COMMAND_REGISTER)</p> <ul style="list-style-type: none"> <li>• 0000b = Success</li> <li>• 0001b = Not Valid</li> <li>• 0010b = Not Supported</li> <li>• 0011b = Busy</li> <li>• 0100b = Failed</li> <li>• 0101b = Aborted</li> <li>• 0110b = Invalid Data</li> <li>• Other values reserved</li> </ul> <p>Bit [4]: Background Activity specific to the following MEMORY_POWER_COMMAND_REGISTER value:</p> <p>3 - GET AVERAGE POWER CONSUMED 4 - GET MEMORY ENERGY CONSUMED</p> <p>0b = inactive 1b = background memory activity is in progress</p> <p>Bits [31:5]: Reserved</p>
POWER STATE ID	4	16	On completion of a GET operation, OSPM reads the current platform state ID from this field. Prior to a SET operation, OSPM populates this field with the power state value which needs to be triggered. Power State values will be based on the platform capability
MEMORY_POWER_NODE_ID	4	20	This field identifies Memory power node number for the command.
MEMORY_ENERGY_CONSUMED	8	24	This field returns the energy consumed by the memory that constitutes the MEMORY_POWER_NODE_ID specified in the previous field. A value of all 1s in this field indicates that platform does not implement this field.
EXPECTED_AVERAGE_POWER_CONSUMED	8	32	This field returns the expected average power consumption for the memory constituted by MEMORY_POWER_NODE_ID. A value of all 1s in this field indicates that platform does not implement this field.

**Note:** OSPM should use the ratio of computed memory power consumed to expected average power consumed in determining the memory power management action.

### 5.2.21.2 Memory Power State


Memory Power State represents the state of a memory power node (which maps to a memory address range) while the platform is in the G0 working state. Memory power node could be in active state named MPS0 or in one of the power manage states MPS1-MPSn.

It should be noted that active memory power state (MPS0) does not preclude memory power management in that state. It only indicates that any active state memory power management in MPS0 is transparent to the OSPM and more importantly does not require assist from OSPM in terms of restricting memory occupancy and activity.

MPS1-MPSn states are characterized by non-zero exit latency for exit from the state to MPS0. These states could require explicit OSPM-initiated entry and exit, explicit OSPM-initiated entry but autonomous exit or autonomous entry and exit. In all three cases, these states require explicit OSPM action to isolate and free the memory address range for the corresponding memory power node.

Transitions to more aggressive memory power states (for example, from MPS1 to MPS2) can be entered on progressive idling but require transition through MPS0 (i.e. MPS1 → MPS0 → MPS2). Power state transition diagram is shown in [Figure 5-20](#).

It is possible that after OSPM request a memory power state, a brief period of activity returns the memory power node to MPS0 state. If platform is capable of returning to a memory power state on subsequent period of idle, the platform must treat the previously requested memory power state as a persistent hint.

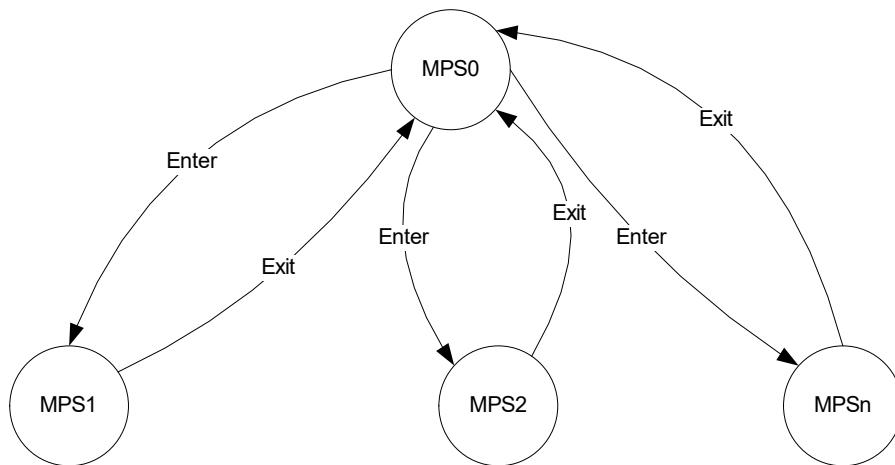

**Figure 5-20 Memory Power State Transitions**

The following table enumerates the power state values that a node can transition to.

**Table 5-95 Power state Values**

Value	State Name	Description
0	MPS0	This state value maps to active state of memory node (Normal operation). OSPM can access memory during this state.
1	MPS1	This state value can be mapped to any memory power state depending on the platform capability. The platform will inform the features of MPS1 state using the Memory Power State Structure. By convention, it is required that low value power state will have lower power savings and lower latencies than the higher valued power states.

2,3...n	MPS2, MPS3, ... MPSn	Same description as MPS1.
---------	----------------------------	---------------------------

The following provides the list of command status:

**Table 5-96 Command Status**

Field	Bit Length	Bit Offset	Description
Command Complete	1	0	If set, the platform has completed processing the last command.
SCI Doorbell	1	1	If set, then this PCC Sub-Channel has signaled the SCI door bell. In Response to this SCI, OSPM should probe the Command Complete and the Platform Notification fields to determine the cause of SCI.
Error	1	2	If set, an error occurred executing the last command.
Platform Notification	1	3	Indicates that the SCI doorbell was invoked by the platform.
Reserved	12	4	Reserved.

### 5.2.21.3 Action Sequence

**SetMemoryPowerState:** The following sequence needs to be done to set a memory power state

1. Write target POWER NODE ID value to MEMORY\_POWER\_NODE\_ID register of PCC sub channel.
2. Write desired POWER STATE ID value to POWER STATE ID register of PCC sub channel .
3. Write SET (See [Table 5-94](#)) to MEMORY\_POWER\_STATE register of PCC sub channel.
4. Write PCC EXECUTE (See [Table 5-93](#)) to PCC Command register for the PCC sub channel.
5. OSPM rings the door bell by writing to Doorbell register.
6. Platform completes the request and will generate SCI to indicate that the command is complete.
7. OSPM reads the Status register for the PCC sub channel and confirms that the command was successfully completed.

**GetMemoryPowerState:** The following sequence needs to be done to get the current memory power state

1. Write target POWER NODE ID value to MEMORY\_POWER\_NODE\_ID register of PCC sub channel.
2. Write GET (See [Table 5-94](#)) to MEMORY\_POWER\_STATE register of PCC sub channel.
3. Write PCC EXECUTE (See [Table 5-93](#)) to PCC Command register for the PCC sub channel.
4. OSPM rings the door bell by writing to Doorbell register.
5. Platform completes the request and will generate SCI to indicate that command is complete.

6. OSPM reads Status register for the PCC sub channel and confirms that the command was successfully completed.
7. OSPM reads POWER STATE from POWER\_STATE\_ID register of PCC sub channel.

#### 5.2.21.4 Memory Power Node

Memory Power Node is a representation of a logical memory region that needs to be transitioned in and out of a memory power state as a unit. This logical memory region is made up of one or more system memory address range(s). A Memory Power Node is uniquely identified by Memory Power Node ID.

Note that memory power node structure defined in [Table 5-97](#) can only represent a single address range. This address range should be 4K aligned. If a Memory Power Node contains more than one memory address range (i.e. non-contiguous range), firmware must construct a Memory power Node structure for each of the memory address ranges but specify the same Memory Power Node ID in all the structures.

Memory Power Nodes are not hierarchical. However, a given memory address range covered by a Memory power node could be fully covered by another memory power node if that nodes memory address range is inclusive of the other node's range. For example, memory power node MPN0 may cover memory address range 1G-2G and memory power node MPN1 covers 1-4G. Here MPN1 memory address range also comprehends the range covered by MPN0.

OSPM is expected to identify the memory power node(s) that corresponds to the maximum memory address range that OSPM is able to power manage at a given time. For example, if MPN0 covers 1G-2G and MPN1 covers 1-4G and OSPM is able to power manage 1-4G, it should select MPN1. If MPN0 is in a non-active memory power state, OSPM must move MPN0 to MPS0 (Active state) before placing MPN1 in desired Memory Power State. Further, MPN1 can support more power states than MPN0. If MPN1 is in such a state , say MPS3 , that MPN0 does not support, software must not query MPN0. If queried, MPN0 will return "not Valid" until MPN1 returns to MPS0.

**Note:** *[Implementation Note] In general, memory nodes corresponding to larger address space ranges correspond to higher memory aggregation (e.g. memory covered by a DIMM vs. memory covered by a memory channel) and hence typically present higher power saving opportunities.*

##### 5.2.21.4.1 Memory Power Node Structure

The following structure specifies the fields used for communicating memory power node information. Each entry in the MPST table will be having corresponding memory power node structure defined.

This structure communicates address range, number of power states implemented, information about individual power states, number of distinct physical components that comprise this memory power node.

The physical component identifiers can be cross-referenced against the memory topology table entries.

**Table 5-97    Memory Power Node Structure definition**

Field	Byte Length	Byte Offset	Description
Flag	1	0	The flag describes type of memory node. Refer to <a href="#">Table 5-98</a> for details.
Reserved	1	1	For future use

Field	Byte Length	Byte Offset	Description
Memory Power Node Id	2	2	This field provides memory power node number. This is a unique identification for Memory Power State Command and creation of freelists/cache lists in OSPM memory manager to bias allocation of non power managed nodes vs. power managed nodes.
Length	4	4	Length in bytes for Memory Power Node Structure. The length implies the number of Entry fields at the end of the table
Base Address Low	4	8	Low 32 bits of Base Address of the memory range.
Base Address High	4	12	High 32 bits of Base Address of the memory range.
Length Low	4	16	Low 32 bits of Length of the memory range. This field along with "Length High" field is used to derive the end physical address of this address range.
Length High	4	20	High 32 bits of Length of the memory range.
Number of Power States (n)	4	24	This field indicates number of power states supported for this memory power node and in turn determines the number of entries in memory power state structure.
Number of Physical Components	4	28	This field indicates the number of distinct Physical Components that constitute this memory power node. This field is also used to identify the number of entries of Physical Component Identifier entries present at end of this table.
Memory Power State Structure [n]	---	32	This field provides information of various power states supported in the system for a given memory power node
Physical Component Identifier1	2	---	2 byte identifier of distinct physical component that makes up this memory power node
.	...	...	
Physical Component Identifier m	2	---	2 byte identifier of distinct physical component that makes up this memory power node

**Table 5-98 Flag format**

Bit	Name	Description
0	Enabled	If clear, the OSPM ignores this Memory Power Node Structure. This allows system firmware to populate the MPST with a static number of structures but enable them as necessary.
1	Power Managed Flag	1 – Memory node is power managed 0 – Memory node is not power managed. For non power managed node, OSPM shall not attempt to transition node into low power state. System behavior is undefined if OSPM attempts this.  NOTE: If the memory range corresponding to the memory node includes platform firmware reserved memory that cannot be power managed, the platform should indicate such memory as “not power managed” to OSPM. This allows OSPM to ignore such ranges from its power optimization.
2	Hot Pluggable	This flag indicates that the memory node supports the hot plug feature. Refer to <a href="#">Section 5.2.21.10</a> for interaction with memory hot plug.
3-7	Reserved	Reserved for future use

### 5.2.21.5 Memory Power State Structure

**Table 5-99 Memory Power State Structure definition**

Field	Byte Length	Byte Offset	Description
Power State Value	1	0	This field provides value of power state. The specific value to be used is system dependent. However convention needs to be maintained where higher numbers indicates deeper power states with higher power savings and higher latencies. For example, a power state value of 2 will have higher power savings and higher latencies than a power state value of 1.
Power State Information Index	1	1	This field provides unique index into the memory power state characteristics entries which will provide details about the power consumed, power state characteristics and transition latencies. The indexing mechanism is to avoid duplication (and hence reduce potential for mismatch errors) of memory power state characteristics entries across multiple memory nodes.

### 5.2.21.6 Memory Power State Characteristics structure

The table below describes the power consumed, exit latency and the characteristics of the memory power state. This table is referenced by a memory power node.

**Table 5-100 Memory Power State Characteristics Structure**

Field	Byte Length		Byte Offset
Power State Structure ID	1	0	<p>Bit [5:0] = This field describes the format of table Structure</p> <p>Power State Structure ID Value = 1</p> <p>Bit [7:6] = Structure Revision</p> <p>Current revision is 1</p>
Flag	1	1	The flag describes the caveats associated with entering the specified power state. Refer to <a href="#">Table 5-101</a> for details.
<i>Reserved</i>	2	2	Reserved
Average Power Consumed in MPS0 state (in milli watts)	4	4	This field provides average power consumed for this memory power node in MPS0 state. This power is measured in milliWatts and signifies the total power consumed by this memory the given power state as measured in DC watts. Note that this value should be used as guideline only for estimating power savings and not as actual power consumed. Also memory power node can map to single or collection of RANKs/DIMMs. The actual power consumed is dependent on DIMM type, configuration and memory load.
Relative Power Saving to MPS0 state	4	8	This is a percentage of power saved in MPSx state relative to MPS0 state and should be calculated as $((\text{MPS0 power} - \text{MPSx power}) / \text{MPS0 Power}) * 100$ . When this entry is describing MPS0 state itself, OSPM should ignore this field.
Exit Latency (in ns) (MPSx → MPS0)	8	12	<p>This field provides latency of exiting out of a power state (MPSx) to active state (MPS0). The unit of this field is nanoseconds.</p> <p>When this entry is describing MPS0 state itself, OSPM should ignore this field.</p>
<i>Reserved</i>	8	20	Reserved for future use.

**Table 5-101 Flag format of Memory Power State Characteristics Structure**

Bit	Name	Description
0	Memory Content Preserved	If Bit [0] is set, it indicates memory contents will be preserved in the specified power state If Bit [0] is clear, it indicates memory contents will be lost in the specified power state (e.g. for states like offline)
1	Autonomous Memory Power State Entry	If Bit [1] is set, this field indicates that given memory power state entry transition needs to be triggered explicitly by OSPM by calling the Set Power State command. If Bit [1] is clear, this field indicates that given memory power state entry transition is automatically implemented in hardware and does not require a OSPM trigger. The role of OSPM in this case is to ensure that the corresponding memory region is idled from a software standpoint to facilitate entry to the state. Not meaningful for MPS0 – write it for this table
2	Autonomous Memory Power State Exit	If Bit [1] is set, this field indicates that given memory power state exit needs to be explicitly triggered by the OSPM before the memory can be accessed. System behavior is undefined if OSPM or other software agents attempt to access memory that is currently in a low power state. If Bit [1] is clear, this field indicates that given memory power state is exited automatically on access to the memory address range corresponding to the memory power node.
3-7	Reserved	Reserved for future use

### 5.2.21.6.1 Power Consumed

Average Power Consumed in MPS0 state indicates the power in milli Watts for the MPS0 state. Relative power savings to MPS0 indicates the savings in the MPSx state as a percentage of savings relative to MPS0 state.

### 5.2.21.6.2 Exit Latency

Exit Latency provided in the Memory Power Characteristics structure for a specific power state is inclusive of the entry latency for that state.

Exit latency must always be provided for a memory power state regardless of whether the memory power state entry and/or exit are autonomous or requires explicit trigger from OSPM.

### 5.2.21.7 Autonomous Memory Power Management

Not all memory power management states require OSPM to actively transition a memory power node in and out of the memory power state. Platforms may implement memory power states that are fully handled in hardware in terms of entry and exit transition. In such fully autonomous states, the decision to enter the state is made by hardware based on the utilization of the corresponding memory region and the decision to exit the memory power state is initiated in response to a memory access targeted to the corresponding memory region.

The role of OSPM software in handling such autonomous memory power states is to vacate the use of such memory regions when possible in order to allow hardware to effectively save power. No other OSPM initiated action is required for supporting these autonomously power managed regions. However, it is not an error for OSPM explicitly initiates a state transition to an autonomous entry memory power state through the MPST command interface. The platform may accept the command and enter the state immediately in which case it must return command completion with SUCCESS (00000b) status. If platform does not support explicit entry, it must return command completion with NOT SUPPORTED (00010b) status.

### 5.2.21.8 Handling BIOS Reserved Memory

Platform firmware may have regions of memory reserved for its own use that are unavailable to OSPM for allocation. Memory nodes where all (or a portion) of the memory is reserved by platform firmware may pose a problem for OSPM because it does not know whether the platform firmware reserved memory is in use.

If the platform firmware reserved memory impacts the ability of the memory power node to enter memory power state(s), the platform must indicate to OSPM (by clearing the Power Managed Flag – see [Table 5-98](#) for details) that this memory power node cannot be power managed. This allows OSPM to ignore such ranges from its memory power optimization.

### 5.2.21.9 Interaction with NUMA processor and memory affinity tables

The memory power state table describes address range for each of the memory power nodes specified. OSPM can use the address ranges information provided in MPST table and derive processor affinity of a given memory power node based on the SRAT entries created by the platform boot firmware. The association of memory power node to proximity domain can be used by OSPM to implement memory coalescing taking into account NUMA node topology for memory allocation/release and manipulation of different page lists in memory management code (implementation specific).

An example of policy which can be implemented in OSPM for memory coalescing is: OSPM can prefer allocating memory from local memory power nodes before going to remote memory power nodes. The later sections provide sample NUMA configurations and explain the policy for various memory power nodes.

### 5.2.21.10 Interaction with Memory Hot Plug

The hot pluggable memory regions are described using memory device objects (see [Section 9.13](#)). The memory address ranges of these memory device objects are defined using the \_CRS method.

```
Scope (\_SB) {
    Device (MEMO) {
        Name (_HID, EISAID ("PNPOC80"))
        Name (_CRS, ResourceTemplate () {
            QwordMemory (
                ResourceConsumer,
                ',
                MinFreed,
                MaxFreed,
                Cacheable,
                ReadWrite,
                0xFFFFFFFF,
```

```

        0x10000000,
        0x30000000,
        0, ...
    )
}
}
}

```

The memory power state table (MPST) is a static structure created for all memory objects independent of hot plug status (online or offline) during initialization. The OSPM will populate the MPST table during the boot. If hot-pluggable flag is set for a given memory power node in MPST table, OSPM will not use this node till physical presence of memory is communicated through ACPI notification mechanism.

The association between memory device object (e.g. MEM0) to the appropriate memory power node id in the MPST table is determined by comparing the address range specified using \_CRS method and address ranges configured in the MPST table entries. This association needs to be identified by OSPM as part of ACPI memory hot plug implementation. When memory device is hot added, as part of existing acpi driver for memory hot plug, OSPM will scan device object for \_CRS method and get the relevant address ranges for the given memory object, OSPM will determine the appropriate memory power node ids based on the address ranges from \_CRS and enable it for power management and memory coalescing.

Similarly when memory is hot removed, the corresponding memory power nodes will be disabled.

### 5.2.21.11 OS Memory Allocation Considerations

OSes (non-virtualized OS or a hypervisor/VMM) may need to allocate non-migratable memory. It is recommended that the OSes (if possible) allocate this memory from memory ranges corresponding to memory power nodes that indicate they are not power manageable. This allows OS to optimize the power manageable memory power nodes for optimal power savings.

OSes can assume that memory ranges that belong to memory power nodes that are power manageable (as indicated by the flag) are interleaved in a manner that does no impact the ability of that range to enter power managed states. For example, such memory is not cacheline interleaved.

Reference to memory in this document always refers to host physical memory. For virtualized environments, this requires hypervisors to be responsible for memory power management. Hypervisors also have the ability to create opportunities for memory power management by vacating appropriate host physical memory through remapping guest physical memory.

OSes can assume that the memory ranges included in MPST always refer to memory store – either volatile or non-volatile and never to MMIO or MMCFG ranges.

### 5.2.21.12 Memory Topology Table (PMTT)

This table describes the memory topology of the system to OSPM, where the memory topology can be logical or physical. The topology is provided to the last level physical component (e.g. DIMM).

**Table 5-102 Platform Memory Topology Table**

Field	Byte Length	Byte Offset	Description
Header			

Field	Byte Length	Byte Offset	Description
Signature	4	0	'PMTT'. Signature for Platform Memory Topology Table.
Length	4	4	Length in bytes of the entire PMTT. The length implies the number of Memory Aggregator structures at the end of the table.
Revision	1	8	1
Checksum	1	9	Entire table must sum to zero.
OEMID	6	10	OEM ID
OEM Table ID	8	16	For the PMTT, the table ID is the manufacturer model ID
OEM Revision	4	24	OEM revision of the PMTT for supplied OEM Table ID.
Creator ID	4	28	Vendor ID of utility that created the table.
Creator Revision	4	32	Revision of utility that created the table.
Reserved	4	36	Reserved, must be zero.
Memory Aggregator Device Structure [n]	---	40	A list of memory aggregator device structures for the platform. See <a href="#">Table 5-103</a> .

**Table 5-103 Common Memory Aggregator Device Structure**

Field	Byte Length	Byte Offset	Description
Type	1	0	The field describes type of the Memory Aggregator Device. 0 – Socket 1 – Memory Controller 2 – DIMM 3 – 0xFF - Reserved
Reserved	1	1	Reserved, must be zero.
Length	2	2	Length in bytes for this Structure. This length implies the length of the Type Specific Data at the end of the structure.
Flags	2	4	Bit [0] – set to 1 to indicate that this is a top level aggregator device. This device must be counted in the number of top level aggregator devices in PMTT table and must be surfaces via PMTT. Bit [0] – 0 indicates that this is not a top level aggregator device. Bit [1] - 1 indicates a physical element of the topology. 0 indicates a logical element of topology Bit [2] and [3] – <ul style="list-style-type: none"><li>• 00 - Indicates that all components aggregated by this device implement volatile memory</li><li>• 01 - Indicates that components aggregated by this device implement both volatile and non-volatile memory</li><li>• 10 - Indicates that all components aggregated by this device implement non-volatile memory</li><li>• 11 - Reserved</li></ul> Bits [15:4] Reserved, must be zero
Reserved	2	6	Reserved, must be zero.
Type Specific Data	—	8	Type specific data. Interpretation of this data is specific to the type of the memory aggregator device. See <a href="#">Table 5-104</a> , <a href="#">Table 5-105</a> , and <a href="#">Table 5-106</a> .

**Table 5-104 Socket Structure**

Field	Byte Length	Byte Offset	Description
Type	1	0	0 – Socket
<i>Reserved</i>	1	1	Reserved, must be zero.
Length	2	2	Length in bytes for this Structure. The length implies the number of memory controller structures at the end of this structure.
Flags	2	4	<p>Bit [0] – 1 indicates that this is a top level aggregator device.</p> <p>Bit [1] – Set to 1 since socket is a physical element of the topology</p> <p>Bit [2] and [3] –</p> <ul style="list-style-type: none"> <li>• 00 - Indicates that all components aggregated by this device implement volatile memory</li> <li>• 01 - Indicates that components aggregated by this device implement both volatile and non-volatile memory</li> <li>• 10 - Indicates that all components aggregated by this device implement non-volatile memory</li> <li>• 11 - Reserved</li> </ul> <p>Bit [4] – Bit [15] Reserved, must be zero</p>
<i>Reserved</i>	2	6	Reserved, must be zero.
Socket Identifier	2	8	Uniquely identifies the socket in the system.
<i>Reserved</i>	2	10	Reserved, must be zero.
Memory Controller Structure [n]	---	12	A list of Memory Controller Structures. This list provides information on the memory controllers present in the socket. See <a href="#">Table 5-105</a> .

**Table 5-105 Memory Controller Structure**

Field	Byte Length	Byte Offset	Description
Type	1	0	1 – Memory Controller
<i>Reserved</i>	1	1	Reserved, must be zero.
Length	2	2	Length in bytes for this Structure. The length implies the number of physical component identifier structures at the end of this structure.

Field	Byte Length	Byte Offset	Description
Flag	2	4	<p>Bit [0] – 1 indicates that this is a top level aggregator device.</p> <p>Bit [1] – 1 indicates a physical element of the topology.</p> <p>0 indicates a logical element of the topology</p> <p>Bit [2] and [3] –</p> <ul style="list-style-type: none"> <li>• 00 - Indicates that all components aggregated by this device implement volatile memory</li> <li>• 01 - Indicates that components aggregated by this device implement both volatile and non-volatile memory</li> <li>• 10 - Indicates that all components aggregated by this device implement non-volatile memory</li> <li>• 11 - Reserved</li> </ul> <p>Bit [4] – Bit [15] Reserved</p>
<i>Reserved</i>	2	6	Reserved, must be zero.
Read Latency (typical)	4	8	In nanoseconds as seen at the controller for a cacheline access.
Write latency (typical)	4	12	In nanoseconds as seen at the controller for a cacheline access.
Read Bandwidth (typical)	4	16	In MB/s
Write Bandwidth (typical)	4	20	In MB/s
Optimal access unit	2	24	In bytes
Optimal access alignment	2	26	In bytes
<i>Reserved</i>	2	28	Reserved , must be zero.
Number of Proximity Domains (m)	2	30	Number of Proximity Domains that immediately follow. A zero in this field indicates that proximity domain information is not provided by the platform and that no 4-byte domains follow
Proximity Domain [m]	4*m	32	Proximity domains for memory address space(s) spawned by this memory controller. Each proximity domain is a 4-byte entity as defined in the System Resource Allocation Table (SRAT).
Physical Component Identifier Structure [n]	—	-	A list of Physical Components structures for this memory controller. See <a href="#">Table 5-106</a> .

**Table 5-106 Physical Components Identifier Structure**

Field	Byte Length	Byte Offset	Description
Type	1	0	2 – DIMM
Reserved	1	1	Reserved, must be zero.
Length	2	2	Length in bytes for this Structure.
Flag	2	4	<p>Bit [0] – 0 indicates that this is not a top level memory aggregator. DIMM is typically behind a memory controller or a socket device or both.</p> <p>Bit [1] – 1 indicates a physical element of the topology. Set to 0 to indicate a logical element of the topology</p> <p>Bit [2] and [3] –</p> <ul style="list-style-type: none"> <li>• 00 - Indicates that all components aggregated by this device implement volatile memory</li> <li>• 01 - Indicates that components aggregated by this device implement both volatile and non-volatile memory</li> <li>• 10 - Indicates that all components aggregated by this device implement non-volatile memory</li> <li>• 11 - Reserved</li> </ul> <p>Bit [4] – Bit [15] Reserved</p>
Reserved	2	6	Reserved, must be zero.
Physical Component Identifier	2	8	Uniquely identifies the physical memory component in the system.
Reserved	2	10	Reserved, must be zero.
Size of DIMM	4	12	Size in MB of the DIMM device.
SMBIOS Handle	4	16	<p>Refers to Type 17 table handle of corresponding SMBIOS record. The platform indicates that this field is not valid by setting a value of 0xFFFFFFFF. If the platform provides a valid handle, the upper 2 bytes must be 0 (since SMBIOS handles are 2 bytes only).</p> <p>NOTE: The use of this handle is for management software to be able to cross-reference the physical DIMM described in SMBIOS against the topology described in this table. It is not expected that OSPM will utilize this field.</p>

## 5.2.22 Boot Graphics Resource Table (BGRT)

The Boot Graphics Resource Table (BGRT) is an optional table that provides a mechanism to indicate that an image was drawn on the screen during boot, and some information about the image.

The table is written when the image is drawn on the screen. This should be done after it is expected that any firmware components that may write to the screen are done doing so and it is known that the image is the only thing on the screen. If the boot path is interrupted (e.g., by a key press), the valid bit within the status field should be changed to 0 to indicate to the OS that the current image is invalidated.

This table is only supported on UEFI systems.

**Table 5-107 Boot Graphics Resource Table Fields**

Field	Byte Length	Byte Offset	Description
Header			
Signature	4	0	“BGRT” Signature for the table.
Length	4	4	Length, in bytes, of the entire table
Revision	1	8	1
Checksum	1	9	Entire table must sum to zero.
OEMID	6	10	OEM ID
OEM Table ID	8	16	The table ID is the manufacturer model ID.
OEM Revision	4	24	OEM revision for supplied OEM Table ID.
Creator ID	4	28	Vendor ID of utility that created the table.
Creator Revision	4	32	Revision of utility that created the table.
Version	2	36	2-bytes (16 bit) version ID. This value must be 1.
Status	1	38	1-byte status field indicating current status of the image. Bits [7:3] = Reserved ( <i>must be zero</i> ) Bits [2:1] = Orientation Offset. These bits describe the clockwise degree offset from the image’s default orientation. [00] = 0, no offset [01] = 90 [10] = 180 [11] = 270
Image Type	1	39	1-byte enumerated type field indicating format of the image. 0 = Bitmap 1 – 255 Reserved ( <i>for future use</i> )
Image Address	8	40	8-byte (64 bit) physical address pointing to the firmware’s in-memory copy of the image bitmap.
Image Offset X	4	48	A 4-byte (32-bit) unsigned long describing the display X-offset of the boot image. (X, Y) display offset of the top left corner of the boot image. The top left corner of the display is at offset (0, 0).
Image Offset Y	4	52	A 4-byte (32-bit) unsigned long describing the display Y-offset of the boot image. (X, Y) display offset of the top left corner of the boot image. The top left corner of the display is at offset (0, 0).

The BGRT is a dynamic ACPI table that enables boot firmware to provide OPSM with a pointer to the location in memory where the boot graphics image is stored.

### 5.2.22.1 Version

The version field identifies which revision of the BGRT table is implemented. The version field should be set to 1.

### 5.2.22.2 Status

**Table 5-108 Status Description Field**

Offset	Field Name
Bit 0	Displayed

The status field contains information about the current status of the table. The Valid bit is bit 0 of the lowest byte. It should be set to 1 while the image resource is displayed on the screen, and set to 0 while it is not displayed.

All other bits are reserved.

### 5.2.22.3 Image Type

**Table 5-109 Image Type Description Field**

Value	Definition
0	Image Type is Bitmap

The Image type field contains information about the format of the image being returned. If the value is 0, the Image Type is Bitmap. The format for a Bitmap is defined at the reference located in "Links to ACPI-Related Documents" (<http://uefi.org/acpi>) under the heading "Types of Bitmaps".

All other values not defined in the table are reserved for future use.

### 5.2.22.4 Image Address

The Image Address contains the location in memory where an in-memory copy of the boot image can be found. The image should be stored in EfiBootServicesData, allowing the system to reclaim the memory when the image is no longer needed.

Implementations must present the image in a 24 bit bitmap with pixel format 0xRRGGBB, or a 32-bit bitmap with the pixel format 0xrrRRGGBB, where 'rr' is reserved.

### 5.2.22.5 Image Offset

The Image Offset contains 2 consecutive 4 byte unsigned longs describing the (X, Y) display offset of the top left corner of the boot image. The top left corner of the display is at offset (0, 0).

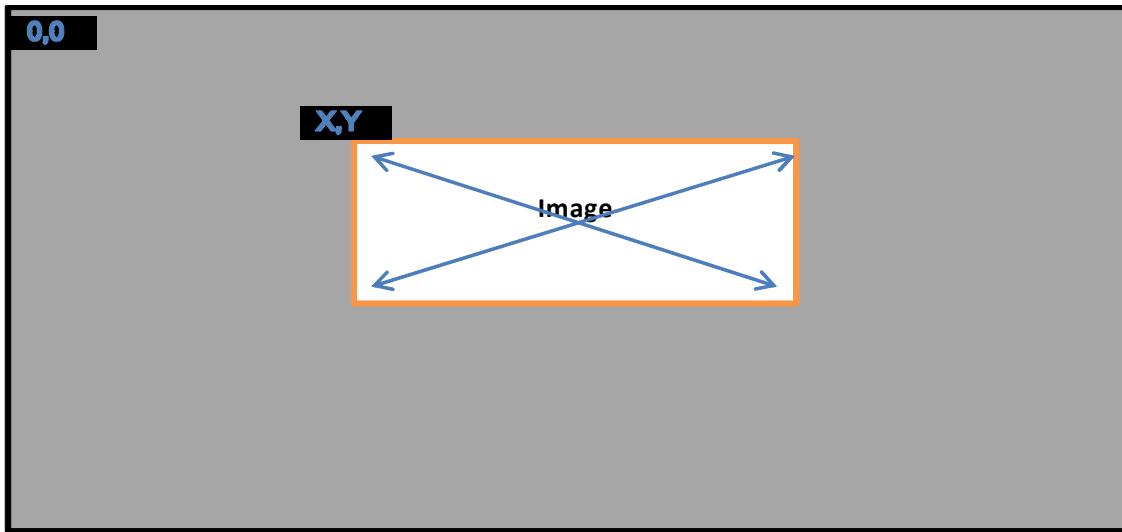


Figure 5-21 Image Offset

### 5.2.23 Firmware Performance Data Table (FPDT)

This section describes the format of the Firmware Performance Data Table (FPDT), which provides sufficient information to describe the platform initialization performance records. This information represents the boot performance data relating to specific tasks within the firmware boot process. The FPDT includes only those mileposts that are part of every platform boot process:

- End of reset sequence (Timer value noted at beginning of platform boot firmware initialization - typically at reset vector)
- Handoff to OS Loader

This information represents the firmware boot performance data set that would be used to track performance of each UEFI phase, and would be useful for tracking impacts resulting from changes due to hardware/software configuration.

All timer values are express in 1 nanosecond increments. For example, if a record indicates an event occurred at a timer value of 25678, this means that 25.678 microseconds have elapsed from the last reset of the timer measurement. All timer values will be required to have an accuracy of +/- 10%.

**Table 5-110 Firmware Performance Data Table (FPDT) Format**

Field	Byte Length	Byte Offset	Description
Header			
Signature	4	0	'FPDT' Signature for the Firmware Performance Data Table.
Length	4	4	The length of the table, in bytes, of the entire FPDT.

Field	Byte Length	Byte Offset	Description
Revision	1	8	The revision of the structure corresponding to the signature field for this table. For the Firmware Performance Data Table conforming to this revision of the specification, the revision is <b>1</b> .
Checksum	1	9	The entire table, including the checksum field, must add to zero to be considered valid.
OEMID	6	10	An OEM-supplied string that identifies the OEM.
OEM Table ID	8	16	An OEM-supplied string that the OEM uses to identify this particular data table.
OEM Revision	4	24	An OEM-supplied revision number.
Creator ID	4	28	The Vendor ID of the utility that created this table.
Creator Revision	4	32	The revision of the utility that created this table.
Performance Records	—	36	The set of Performance Records.

### 5.2.23.1 Performance Record Format

A performance record is comprised of a sub-header including a record type and length, and a set of data, which may include a timer. The format of the record layout is specific to the record type. In this manner, records are only as large as needed to contain the specific type of data to be conveyed.

**Table 5-111 Performance Record Structure**

Field	Byte Length	Byte Offset	Description
Performance Record Type	2	0	This value depicts the format and contents of the performance record.
Record Length	1	2	This value depicts the length of the performance record, in bytes.
Revision	1	3	This value is updated if the format of the record type is extended. Any changes to a performance record layout must be backwards-compatible in that all previously defined fields must be maintained if still applicable, but newly defined fields allow the length of the performance record to be increased. Previously defined record fields must not be redefined, but are permitted to be deprecated.
Data	—	4	The content of this field is defined by the Performance Record Type definition.

### 5.2.23.2 Performance Record Types

The table below describes the various types of records contained within the FPDT, and their associated Performance Record Type. Note that unless otherwise specified, multiple performance records are permitted in the FPDT for a given type, because some events can occur multiple times during the boot process.

**Table 5-112 Performance Record Types**

<b>Record Type Value</b>	<b>Type</b>	<b>Description</b>
0x0000	Firmware Basic Boot Performance Pointer Record	Record containing a pointer to the Basic Boot Performance Data Record.
0x0001	S3 Performance Table Pointer Record	Record containing a pointer to an S3 Performance Table.
0x0002 – 0x0FFF	Reserved	Reserved for ACPI specification usage.
0x1000 – 0x1FFF	Reserved	Reserved for Platform Vendor usage.
0x2000 – 0x2FFF	Reserved	Reserved for Hardware Vendor usage.
0x3000 – 0x3FFF	Reserved	Reserved for platform firmware Vendor usage.
0x4000 – 0xFFFF	Reserved	Reserved for future use

### 5.2.23.3 Runtime Performance Record Types

The table below describes the various types of runtime records and their associated Runtime Performance Record types. These Records are not contained within the FPDT; they are referenced by their respective pointer records in the FPDT.

**Table 5-113 Runtime Performance Record Types**

<b>Record Type Value</b>	<b>Type</b>	<b>Description</b>
0x0000	Basic S3 Resume Performance Record	Performance record describing minimal firmware performance metrics for S3 resume operations
0x0001	Basic S3 Suspend Performance Record	Performance record describing minimal firmware performance metrics for S3 suspend operations
0x0002	Firmware Basic Boot Performance Data Record	Performance record showing basic performance metrics for critical phases of the firmware boot process.
0x0003 – 0x0FFF	Reserved	Reserved for ACPI specification usage.
0x1000 – 0x1FFF	Reserved	Reserved for Platform Vendor usage.
0x2000 – 0x2FFF	Reserved	Reserved for Hardware Vendor usage.
0x3000 – 0x3FFF	Reserved	Reserved for platform firmware Vendor usage.
0x4000 – 0xFFFF	Reserved	Reserved for future use

#### 5.2.23.4 S3 Performance Table Pointer Record

The S3 Performance Table Pointer Record contains a pointer to the S3 Performance Table. The S3 Performance Table itself exists in a range of memory described as ACPI AddressRangeReserved in the system memory map. The record pointer is a required entry in the FPDT for any system supporting the S3 state, and the pointer must point to a valid static physical address. Only one of these records will be produced.

**Table 5-114 S3 Performance Table Pointer Record**

Field	Byte Length	Byte Offset	Description
Performance Record Type	2	0	1 - S3 Performance Table Record
Record Length	1	2	16 - This value depicts the length of the performance record, in bytes.
Revision	1	3	1 - Revision of this Performance Record
<i>Reserved</i>	4	4	Reserved
S3PT Pointer	8	8	64-bit processor-relative physical address of the S3 Performance Table

#### 5.2.23.5 Firmware Basic Boot Performance Pointer Record

The Firmware Basic Boot Performance Pointer Record contains a pointer to the Firmware Basic Boot Performance Data Record. The Firmware Basic Boot Performance Data Record itself exists in a range of memory described as ACPI AddressRangeReserved in the system memory map. The record pointer is a required entry in the FPDT for any system and the pointer must point to a valid static physical address. Only one of these records will be produced.

**Table 5-115 S4 Performance Table Pointer Record**

Field	Byte Length	Byte Offset	Description
Performance Record Type	2	0	0 – Firmware Basic Boot Performance Pointer Record
Record Length	1	2	16 - This value depicts the length of the performance record, in bytes.
Revision	1	3	1 - Revision of this Performance Record
<i>Reserved</i>	4	4	Reserved
FBPT Pointer	8	8	64-bit processor-relative physical address of the Firmware Basic Boot Performance Table

#### 5.2.23.6 S3 Performance Table

The S3 Performance Table resides outside of the FPDT. It includes a header, defined in [Table 5-117](#), and one or more Performance Records.

All event entries must be initialized to zero during the initial boot sequence, and overwritten during the platform runtime firmware S3 resume sequence. The S3 Performance Table must include the Basic S3 Resume Performance Record. Other entries are optional.

**Table 5-116 S3 Performance Table Header**

Field	Byte Length	Byte Offset	Description
Signature	4	0	'S3PT' is the signature to use.
Length	4	4	Length of the S3 Performance Table. This includes the header and allocated size of the subsequent records. This size would at minimum include the size of the header and the Basic S3 Resume Performance Record.

**Table 5-117 Basic S3 Resume Performance Record**

Field	Byte Length	Byte Offset	Description
Runtime Performance Record Type	2	0	0 - The Basic S3 Resume Performance Record Type. Zero to one of these records will be produced.
Record Length	1	2	24 - The value depicts the length of this performance record, in bytes.
Revision	1	3	1 - Revision of this Performance Record
Resume Count	4	4	A count of the number of S3 resume cycles since the last full boot sequence.
FullResume	8	8	Timer recorded at the end of platform runtime firmware S3 resume, just prior to handoff to the OS waking vector. Only the most recent resume cycle's time is retained.
AverageResume	8	16	Average timer value of all resume cycles logged since the last full boot sequence, including the most recent resume. Note that the entire log of timer values does not need to be retained in order to calculate this average. $\text{AverageResume}_{\text{new}} = (\text{AverageResume}_{\text{old}} * (\text{ResumeCount} - 1) + \text{FullResume}) / \text{ResumeCount}$

**Table 5-118 Basic S3 Suspend Performance Record**

Field	Byte Length	Byte Offset	Description
Runtime Performance Record Type	2	0	1 - The Basic S3 Suspend Performance Record Type. Zero to one of these records will be produced.
Record Length	1	2	20 - The value depicts the length of this performance record, in bytes.
Revision	1	3	1 - Revision of this Performance Record
SuspendStart	8	4	Timer value recorded at the OS write to SLP_TYP upon entry to S3. Only the most recent suspend cycle's timer value is retained.
SuspendEnd	8	12	Timer value recorded at the final firmware write to SLP_TYP (or other mechanism) used to trigger hardware entry to S3. Only the most recent suspend cycle's timer value is retained.

### 5.2.23.7 Firmware Basic Boot Performance Table

The Firmware Basic Boot Performance Table resides outside of the FPDT. It includes a header, defined in [Table 5-119](#), and one or more Performance Records.

All event entries will be overwritten during the platform runtime firmware S4 resume sequence. The Firmware Basic Boot Performance Table must include the Firmware Basic Boot Performance Table.

**Table 5-119 Firmware Basic Boot Performance Table Header**

Field	Byte Length	Byte Offset	Description
Signature	4	0	'FBPT' is the signature to use.
Length	4	4	Length of the Firmware Basic Boot Performance Table. This includes the header and allocated size of the subsequent records. This size would at minimum include the size of the header and the Firmware Basic Boot Performance Record.

### 5.2.23.8 Firmware Basic Boot Performance Data Record

A firmware basic boot performance data record which contains timer information associated with final OS loader activity as well as the data associated with starting and ending boot time information. Only one of these records will be produced.

**Table 5-120 Firmware Basic Boot Performance Data Record Structure**

Field	Byte Length	Byte Offset	Description
Performance Record Type	2	0	2 – Firmware Basic Boot Performance Data Record

Field	Byte Length	Byte Offset	Description
Record Length	1	2	48 - This value depicts the length of the performance record, in bytes.
Revision	1	3	2 - Revision of this Performance Record
<i>Reserved</i>	4	4	Reserved
Reset End	8	8	Timer value logged at the beginning of firmware image execution. This may not always be zero or near zero.
OS Loader LoadImage Start	8	16	Timer value logged just prior to loading the OS boot loader into memory. For non-UEFI compatible boots, this field must be zero.
OS Loader StartImage Start	8	24	Timer value logged just prior to launching the currently loaded OS boot loader image. For non-UEFI compatible boots, the timer value logged will be just prior to the INT 19h handler invocation.
ExitBootServices Entry	8	32	Timer value logged at the point when the OS loader calls the ExitBootServices function for UEFI compatible firmware. For non-UEFI compatible boots, this field must be zero.
ExitBootServices Exit	8	40	Timer value logged at the point just prior to the OS loader gaining control back from the ExitBootServices function for UEFI compatible firmware. For non-UEFI compatible boots, this field must be zero.

## 5.2.24 Generic Timer Description Table (GTDT)

This section describes the format of the Generic Timer Description Table (GTDT), which provides OSPM with information about a system's Generic Timers configuration. The Generic Timer (GT) is a standard timer interface implemented on ARM processor-based systems. The GT hardware specification can be found at [Links to ACPI-Related Documents \(<http://uefi.org/acpi>\)](http://uefi.org/acpi) under the heading *ARM Architecture*. The GTDT provides OSPM with information about a system's GT interrupt configurations, for both per-processor timers, and platform (memory-mapped) timers.

The GT specification defines the following per-processor timers:

- Secure EL1 timer,
- Non-Secure EL1 timer,
- EL2 timer,
- Virtual EL1 timer,
- Virtual EL2 timer,

and defines the following memory-mapped Platform timers:

- GT Block,
- Server Base System Architecture (SBSA) Generic Watchdog.

**Table 5-121 GTDT Table Structure**

Field	Byte Length	Byte Offset	Description
Header			
Signature	4	0	'GTDT'. Signature for the Generic Timer Description Table.
Length	4	4	Length, in bytes, of the entire Generic Timer Description Table.
Revision	1	8	3
Checksum	1	9	Entire table must sum to zero.
OEMID	6	10	OEM ID.
OEM Table ID	8	16	The manufacturer model ID.
OEM Revision	4	24	OEM revision for supplied OEM Table ID.
Creator ID	4	28	Vendor ID of utility that created the table.
Creator Revision	4	32	Revision of utility that created the table.
CntControlBase Physical Address	8	36	The 64-bit physical address at which the Counter Control block is located. This value is optional if the system implements EL3 (Security Extensions). If not provided, this field must be 0xFFFFFFFFFFFFFF.
Reserved	4	44	Must be zero
Secure EL1 Timer GSIV	4	48	GSIV for the secure EL1 timer. This value is optional, as an operating system executing in the non-secure world (EL2 or EL1), will ignore the content of these fields.

Field	Byte Length	Byte Offset	Description
Secure EL1 Timer Flags	4	52	Flags for the secure EL1 timer (defined below). This value is optional, as an operating system executing in the non-secure world (EL2 or EL1) will ignore the content of this field.
Non-Secure EL1 Timer GSIV	4	56	GSIV for the non-secure EL1 timer.
Non-Secure EL1 Timer Flags	4	60	Flags for the non-secure EL1 timer (defined below).
Virtual EL1 Timer GSIV	4	64	GSIV for the virtual EL1 timer.
Virtual EL1 Timer Flags	4	68	Flags for the virtual EL1 timer (defined below)
EL2 Timer GSIV	4	72	GSIV for the EL2 timer.
EL2 Timer Flags	4	76	Flags for the EL2 timer(defined below).
CntReadBase Physical Address	8	80	The 64-bit physical address at which the Counter Read block is located. This value is optional if the system implements EL3 (Security Extensions). If not provided, this field must be 0xFFFFFFFFFFFFFF.
Platform Timer Count	4	88	Number of entries in the Platform Timer Structure[] array
Platform Timer Offset	4	92	Offset to the Platform Timer Structure[] array from the start of this table
Virtual EL2 Timer GSIV	4	96	GSIV for the virtual EL2 timer. This field is mandatory for systems implementing ARMv8.1 VHE. For systems not implementing ARMv8.1 VHE, this field is 0.
Virtual EL2 Timer Flags	4	100	Flags for the virtual EL2 timer (defined below). This field is mandatory for systems implementing ARMv8.1 VHE. For systems not implementing ARMv8.1 VHE, this field is 0.
Platform Timer Structure[]	---	Platform Timer Offset	Array of Platform Timer Type structures describing memory-mapped Timers available on this platform. These structures are described in the below sections.

**Table 5-122 Flag Definitions: Secure EL1 Timer, Non-Secure EL1 Timer, EL2 Timer, Virtual EL1 Timer and Virtual EL2 Timer**

Secure EL1 Timer Flags, Non-Secure EL1 Timer Flags, EL2 Timer Flags, Virtual EL1 Timer Flags, and Virtual EL2 Timer Flags all have the same definition as follows.

Bit Field	Bit Offset	Number of bits	Description
Timer interrupt Mode	0	1	This bit indicates the mode of the timer interrupt 1: Interrupt is Edge triggered 0: Interrupt is Level triggered
Timer Interrupt polarity	1	1	This bit indicates the polarity of the timer interrupt 1: Interrupt is Active low 0: Interrupt is Active high
Always-on Capability	2	1	This bit indicates the always-on capability of the timer implementation. 1: This timer is guaranteed to assert its interrupt and wake a processor, regardless of the processor's power state. All of the methods by which an ARM Generic Timer may generate an interrupt must be supported, and must be capable of waking the processor. 0: This timer may lose context or may not be guaranteed to assert interrupts when its associated processor enters a low-power state
Reserved	3	29	Reserved, must be zero.

The GTDT Platform Timer Structure [] field is an array of Platform Timer Type structures, each of which describes the configuration of an available platform timer. These timers are in addition to the per-processor timers described above them in the GTDT.

**Table 5-123 Platform Timer Type Structures**

Value	Description
0	GT Block
1	SBSA Generic Watchdog
0x02-0xFF	Reserved for future use

The first byte of each structure declares the type of that structure and the second and third bytes declare the length of that structure.

### 5.2.24.1 GT Block Structure

The GT Block is a standard timer block that is mapped into the system address space. Each GT Block implements up to 8 GTs (GT0 – GT7).

The format of the GT Block structure is shown in [Table 5-124](#).

**Table 5-124 GT Block Structure Format**

Field	Byte Length	Byte Offset	Description
Type	1	0	0x0 GT Block
Length	2	1	20+n*40, where n is the number of timers implemented in the GT Block
Reserved	1	3	Must be zero
GT Block Physical address (CntCtlBase)	8	4	The 64-bit physical address at which the GT CntCTLBase Block is located
GT Block Timer Count	4	12	Number of Timers implemented in this GT Block ('n'). Must be less than or equal to 8.
GT Block Timer Offset	4	16	Offset to the Platform Timer Structure array from the start of this structure
GT Block Timer Structure[]	n*40	GT Block Timer Offset	Array of GT Block Timer Structures. See <a href="#">Table 5-125</a> .

**Table 5-125 GT Block Timer Structure Format**

Field	Byte Length	Byte Offset	Description
GT Frame Number	1	0	The frame number (0-7) for this timer ('x')
Reserved	3	1	Must be zero
GTx Physical Address (CntBaseX)	8	4	Physical Address at which the CntBase block for GTx is located
GTx Physical Address (CntELOBaseX)	8	12	Physical Address at which the CntELOBase block for GTx is located. If this block is not implemented for GTx, must be 0xFFFFFFFFFFFFFFF.
GTx Physical Timer GSIV	4	20	GSIV for the GTx physical timer
GTx Physical Timer Flags	4	24	Flags for the GTx physical timer. See <a href="#">Table 5-126</a>
GTx Virtual Timer GSIV	4	28	GSIV for the GTx virtual timer. If the Virtual Timer is not implemented for GTx, this field must be 0.

GTx Virtual Timer Flags	4	32	Flags for the GTx virtual timer, if implemented. See <a href="#">Table 5-126</a> .
GTx Common Flags	4	36	See <a href="#">Table 5-127</a> .

**Table 5-126 Flag Definitions: GT Block Physical Timers and Virtual Timers**

Bit Field	Bit Offset	Number of bits	Description
Timer interrupt Mode	0	1	This bit indicates the mode of the timer interrupt. • 1: Interrupt is Edge triggered. • 0: Interrupt is Level triggered.
Timer Interrupt polarity	1	1	This bit indicates the polarity of the timer interrupt 1: Interrupt is Active low 0: Interrupt is Active high
Reserved	2	30	Reserved, must be zero.

**Table 5-127 Flag Definitions: Common Flags**

Bit Field	Bit Offset	Number of bits	Description
Secure Timer	0	1	This bit indicates whether the timer is secure or non-secure 1: Timer is Secure 0: Timer is Non-secure
Always-on Capability	1	1	This bit indicates the always-on capability of the Physical and Virtual Timers implementation. 1: This timer is guaranteed to assert its interrupt and wake a processor, regardless of the processor's power state. All of the methods by which an ARM Generic Timer may generate an interrupt must be supported, and must be capable of waking the processor. 0: This timer may lose context or may not be guaranteed to assert interrupts when its associated processor enters a low-power state.
Reserved	2	30	Reserved, must be zero.

### 5.2.24.2 SBSA Generic Watchdog Structure

The SBSA Generic Watchdog is a Platform GT with built-in support for use as the Watchdog timer on Server Base System Architecture (SBSA)-compliant platforms.

The format of the SBSA Generic Watchdog structure is shown in [Table 5-128](#).

The link for SBSA is <http://infocenter.arm.com/help/index.jsp?topic=/com.arm.doc.den0029/index.html>.

**Table 5-128 SBSA Generic Watchdog Structure Format**

Field	Byte Length	Byte Offset	Description
Type	1	0	0x1 Watchdog GT
Length	2	1	28
Reserved	1	3	Must be zero
RefreshFrame Physical Address	8	4	Physical Address at which the RefreshFrame block is located
WatchdogControlFrame Physical Address	8	12	Physical Address at which the Watchdog Control Frame block is located
Watchdog Timer GSIV	4	20	GSIV for the SBSA Generic Watchdog timer
Watchdog Timer Flags	4	2 4	Flags for the SBSA Generic Watchdog timer. See <a href="#">Table 5-129</a>

**Table 5-129 Flag Definitions: SBSA Generic Watchdog Timer**

Bit Field	Bit Offset	Number of bits	Description
Timer interrupt Mode	0	1	This bit indicates the mode of the timer interrupt  1: Interrupt is Edge triggered 0: Interrupt is Level triggered
Timer Interrupt polarity	1	1	This bit indicates the polarity of the timer interrupt  1: Interrupt is Active low 0: Interrupt is Active high
Secure Timer	2	1	This bit indicates whether the timer is secure or non-secure  1: Timer is Secure 0: Timer is Non-secure
Reserved	3	29	Reserved, must be zero.

## 5.2.25 NVDIMM Firmware Interface Table (NFIT)

### 5.2.25.1 NFIT Overview


This optional table provides information that allows OSPM to enumerate NVDIMMs present in the platform and associate system physical address ranges created by the NVDIMMs. NVDIMMs are represented by zero or more NVDIMM devices under a single NVDIMM root device in ACPI namespace.

OSPM evaluates NFIT only during system initialization. Any changes to the NVDIMM state at runtime or information regarding hot added NVDIMMs are communicated using the \_FIT method (See [Section 6.5.9](#)) of the NVDIMM root device.

The NFIT consists of the following structures:

1. System Physical Address (SPA) Range Structure(s) (see [Section 5.2.25.2](#)) – Describes the SPA ranges occupied by NVDIMMs and the types of the SPA ranges.
2. NVDIMM Region Mapping Structure(s) (see [Section 5.2.25.3](#)) – Describes mappings of NVDIMM regions to SPA ranges and NVDIMM region properties.
3. Interleave Structure(s) (see [Section 5.2.25.4](#)) – Describes the various interleave options used by NVDIMM regions.
4. SMBIOS Management Information Structure(s) (see [Section 5.2.25.5](#)) – Describes SMBIOS Table entries for hot added NVDIMMs.
5. NVDIMM Control Region Structure(s) (see [Section 5.2.25.6](#)) – Describes NVDIMM function interfaces, and if applicable, their Block Control Windows.
6. NVDIMM Block Data Window Region Structure(s) (see [Section 5.2.25.7](#)) – Describes Block Data Windows for a NVDIMM function interfaces that have Block Control Windows.
7. Flush Hint Address Structure(s) (see [Section 5.2.25.8](#)) – Describes special system physical addresses that when written help achieve durability for writes to NVDIMM regions.
8. Platform Capabilities Structure (see [Section 5.2.25.9](#)) – Describes the Platform Capabilities to inform OSPM of platform-wide NVDIMM capabilities.

[Figure 5-22](#) illustrates the above structures and how they are associated with each other.

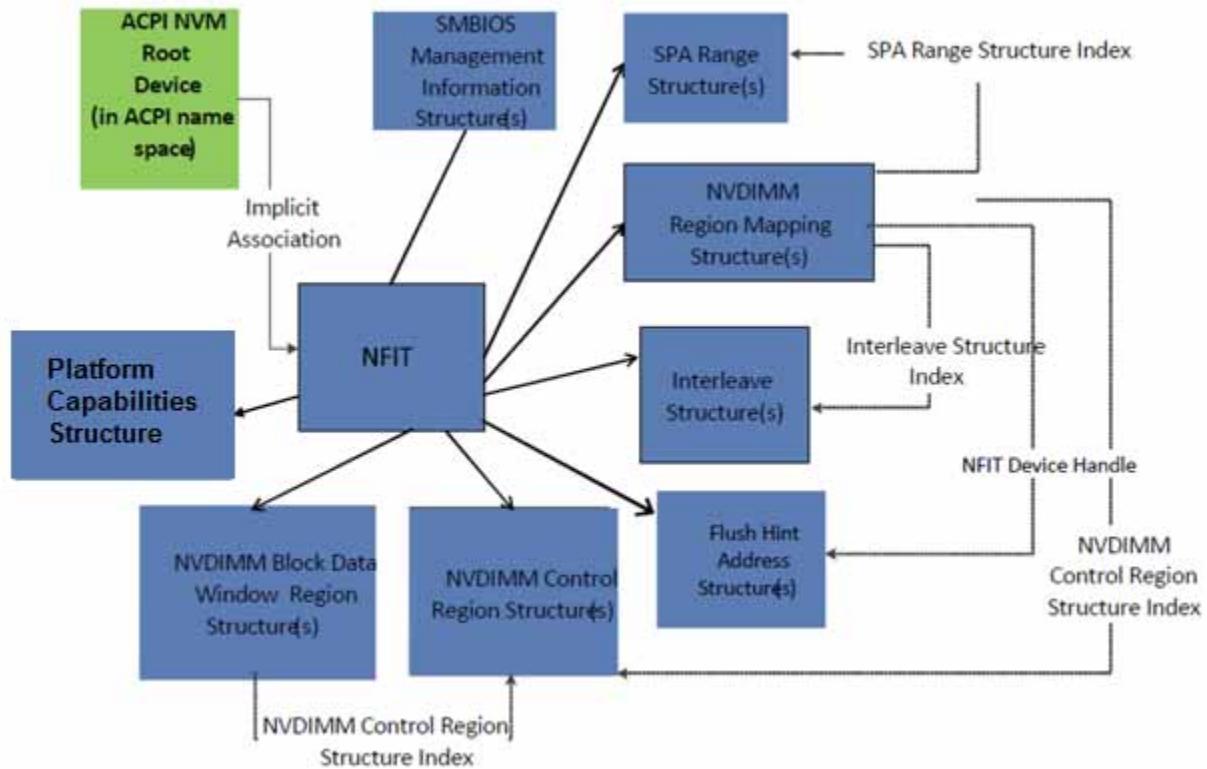

**Figure 5-22 NVDIMM Firmware Interface Table (NFIT) Overview**

The following table defines the NFIT.

**Table 5-130 NVDIMM Firmware Interface Table (NFIT)**

Field	Byte Length	Byte Offset	Description
Header			
Signature	4	0	'NFIT' is Signature for this table
Length	4	4	Length in bytes for entire table.
Revision	1	8	1
Checksum	1	9	Entire table must sum to zero
OEMID	6	10	OEM ID
OEM Table ID	8	16	The table ID is the manufacturer model ID
OEM Revision	4	24	OEM revision of table for supplied OEM Table ID
Creator ID	4	28	Vendor ID of utility that created the table
Creator Revision	4	32	Revision of utility that created the table
Reserved	4	36	
NFIT Structure[n]	—	40	A list of NFIT structures for this implementation.

Each NFIT Structure must start with a 2 byte Type field followed by a 2 byte length field. This allows OSPM to ignore unrecognized types. Supported NFIT Structure types are listed in [Table 5-131](#).

**Table 5-131 NFIT Structure Types**

Value	Description
0	System Physical Address (SPA) Range Structure
1	NVDIMM Region Mapping Structure
2	Interleave Structure
3	SMBIOS Management Information Structure
4	NVDIMM Control Region Structure
5	NVDIMM Block Data Window Region Structure
6	Flush Hint Address Structure
7	Platform Capabilities Structure
8-0xFFFF	Reserved

### 5.2.25.2 System Physical Address (SPA) Range Structure

This structure describes the system physical address ranges occupied by NVDIMMs, and their corresponding Region Types.

System physical address ranges described as Virtual CD or Virtual Disk shall be described as AddressRangeReserved in E820, and EFI Reserved Memory Type in the UEFI GetMemoryMap.

Platform is allowed to implement this structure just to describe system physical address ranges that describe Virtual CD and Virtual Disk. For Virtual CD Region and Virtual Disk Region (both volatile and persistent), the following fields - Proximity Domain, SPA Range Structure Index, Flags, and Address Range Memory Mapping Attribute, are not relevant and shall be set to 0.

The default mapping of the NVDIMM Control Region shall be UC memory attributes with AddressRangeReserved type in E820 and EfiMemoryMappedIO type in UEFI GetMemoryMap. The default mapping of the NVDIMM Block Data Window Region shall be WB memory attributes with AddressRangeReserved type in E820 and EfiMemoryMappedIO type in UEFI GetMemoryMap.

**Table 5-132 SPA Range Structure**

Field	Byte Length	Byte Offset	Description
Type	2	0	0 - SPA Range Structure
Length	2	2	Length in bytes for entire structure.
SPA Range Structure Index	2	4	Used by NVDIMM Region Mapping Structure to uniquely refer to this structure. Value of 0 is Reserved and shall not be used as an index.
Flags	2	6	Bit [0] set to 1 indicates that Control region is strictly for management during hot add/online operation. Bit [1] set to 1 to indicate that data in Proximity Domain field is valid. Bits [15:2] : Reserved
Reserved	4	8	Reserved
Proximity Domain	4	12	Integer that represents the proximity domain to which the memory belongs. This number must match with corresponding entry in the SRAT table.
Address Range Type GUID	16	16	GUID that defines the type of the Address Range Type. The GUID can be any of the values defined in this section, or a vendor defined GUID.
System Physical Address Range Base	8	32	Start Address of the System Physical Address Range
System Physical Address Range Length	8	40	Range Length of the region in bytes

Field	Byte Length	Byte Offset	Description																								
Address Range Memory Mapping Attribute	8	48	<p>Memory mapping attributes for this address range:</p> <table> <tr><td>EFI_MEMORY_UC</td><td>= 0x00000001</td></tr> <tr><td>EFI_MEMORY_WC</td><td>= 0x00000002</td></tr> <tr><td>EFI_MEMORY_WT</td><td>= 0x00000004</td></tr> <tr><td>EFI_MEMORY_WB</td><td>= 0x00000008</td></tr> <tr><td>EFI_MEMORY_UCE</td><td>= 0x00000010</td></tr> <tr><td>EFI_MEMORY_WP</td><td>= 0x00001000</td></tr> <tr><td>EFI_MEMORY_RP</td><td>= 0x00002000</td></tr> <tr><td>EFI_MEMORY_XP</td><td>= 0x00004000</td></tr> <tr><td>EFI_MEMORY_NV</td><td>= 0x00008000</td></tr> <tr><td>EFI_MEMORY_MORE_RELIABLE</td><td>= 0x00010000</td></tr> <tr><td>EFI_MEMORY_RO</td><td>= 0x00020000</td></tr> <tr><td>EFI_MEMORY_SP</td><td>= 0x00040000</td></tr> </table> <p>These types can be OR'd together as needed. Refer to UEFI Specification for memory attributes description</p>	EFI_MEMORY_UC	= 0x00000001	EFI_MEMORY_WC	= 0x00000002	EFI_MEMORY_WT	= 0x00000004	EFI_MEMORY_WB	= 0x00000008	EFI_MEMORY_UCE	= 0x00000010	EFI_MEMORY_WP	= 0x00001000	EFI_MEMORY_RP	= 0x00002000	EFI_MEMORY_XP	= 0x00004000	EFI_MEMORY_NV	= 0x00008000	EFI_MEMORY_MORE_RELIABLE	= 0x00010000	EFI_MEMORY_RO	= 0x00020000	EFI_MEMORY_SP	= 0x00040000
EFI_MEMORY_UC	= 0x00000001																										
EFI_MEMORY_WC	= 0x00000002																										
EFI_MEMORY_WT	= 0x00000004																										
EFI_MEMORY_WB	= 0x00000008																										
EFI_MEMORY_UCE	= 0x00000010																										
EFI_MEMORY_WP	= 0x00001000																										
EFI_MEMORY_RP	= 0x00002000																										
EFI_MEMORY_XP	= 0x00004000																										
EFI_MEMORY_NV	= 0x00008000																										
EFI_MEMORY_MORE_RELIABLE	= 0x00010000																										
EFI_MEMORY_RO	= 0x00020000																										
EFI_MEMORY_SP	= 0x00040000																										

The following GUIDs are used to describe the NVDIMM Region Types. Additional GUIDs can be generated to describe additional Address Range Types.

Persistent Memory (PM) Region:

```
{ 0x66F0D379, 0xB4F3, 0x4074, 0xAC, 0x43, 0x0D, 0x33, 0x18, 0xB7, 0x8C, 0xDB }
```

NVDIMM Control Region:

```
{ 0x92F701F6, 0x13B4, 0x405D, 0x91, 0x0B, 0x29, 0x93, 0x67, 0xE8, 0x23, 0x4C }
```

NVDIMM Block Data Window Region:

```
{ 0x91AF0530, 0x5D86, 0x470E, 0xA6, 0xB0, 0x0A, 0x2D, 0xB9, 0x40, 0x82, 0x49 }
```

RAM Disk supporting a Virtual Disk Region – Volatile (a volatile memory region that contains a raw disk format):

```
{ 0x77AB535A, 0x45FC, 0x624B, 0x55, 0x60, 0xF7, 0xB2, 0x81, 0xD1, 0xF9, 0x6E }
```

RAM Disk supporting a Virtual CD Region – Volatile (a volatile memory region that contains an ISO image):

```
{ 0x3D5ABD30, 0x4175, 0x87CE, 0x6D, 0x64, 0xD2, 0xAD, 0xE5, 0x23, 0xC4, 0xBB }
```

RAM Disk supporting a Virtual Disk Region – Persistent (a persistent memory region that contains a raw disk format):

```
{ 0x5CEA02C9, 0x4D07, 0x69D3, 0x26, 0x9F, 0x44, 0x96, 0xFB, 0xE0, 0x96, 0xF9 }
```

RAM Disk supporting a Virtual CD Region – Persistent (a persistent memory region that contains an ISO image):

```
{ 0x08018188, 0x42CD, 0xBB48, 0x10, 0x0F, 0x53, 0x87, 0xD5, 0x3D, 0xED, 0x3D }
```

**Note:** The Address Range Type GUID values used in the ACPI NFIT must match the corresponding values in the Disk Type GUID of the RAM Disk device path that describe the same RAM Disk Type. Refer to the UEFI specification for details.

### 5.2.25.3 NVDIMM Region Mapping Structure

The NVDIMM Region Mapping structure describes an NVDIMM region and its mapping, if any, to a SPA range.

**Table 5-133 NVDIMM Region Mapping Structure**

Field	Byte Length	Byte Offset	Description
Type	2	0	1 - NVDIMM Region Mapping Structure
Length	2	2	Length in bytes for entire structure.
NFIT Device Handle	4	4	The _ADR of the NVDIMM device (see <a href="#">Section 9.20.3</a> ) containing the NVDIMM region
NVDIMM Physical ID	2	8	Handle (i.e., instance number) for the SMBIOS* Memory Device (Type 17) structure describing the NVDIMM containing the NVDIMM region
NVDIMM Region ID	2	10	Unique identifier for the NVDIMM region. This identifier shall be unique across all the NVDIMM regions in the NVDIMM.  There could be multiple regions within the device corresponding to different address types. Also, for a given address type, there could be multiple regions due to interleave discontinuity.
SPA Range Structure Index	2	12	The SPA range, if any, associated with the NVDIMM region. 0x0000: The NVDIMM region does not map to a SPA range. The following fields are not valid and should be ignored: <ul style="list-style-type: none"> <li>• NVDIMM Region Size;</li> <li>• Region Offset;</li> <li>• NVDIMM Physical Address Region Base;</li> <li>• Interleave Structure Index; and</li> <li>• Interleave Ways.</li> </ul> Fields other than those (e.g., NFIT Device Handle, NVDIMM Physical ID, NVDIMM Region ID, and NVDIMM State Flags) are valid. 0x0001 to 0xFFFF: The index of the SPA Range Structure (see <a href="#">Section 5.2.25.2</a> ) for the NVDIMM region.
NVDIMM Control Region Structure Index	2	14	The index of the NVDIMM Control Region Structure (see <a href="#">Section 5.2.25.6</a> ) for the NVDIMM region.

Field	Byte Length	Byte Offset	Description
NVDIMM Region Size	8	16	<p>In bytes.</p> <p>The size of the NVDIMM region.</p> <p>If SPA Range Structure Index and Interleave Ways are both non-zero, this field shall match System Physical Address Range Length divided by Interleave Ways.</p> <p>NOTE: the size in SPA Range occupied by the NVDIMM for this region will not be the same as the NVDIMM Region Size when Interleave Ways is greater than 1.</p>
Region Offset	8	24	<p>In bytes.</p> <p>The Starting Offset for the NVDIMM region in the Interleave Set. This offset is with respect to System Physical Address Range Base in the SPA Range Structure.</p> <p>NOTE: The starting SPA of the NVDIMM region in the NVDIMM is provided by System Physical Address Range Base + Region Offset</p>
NVDIMM Physical Address Region Base	8	32	In bytes. The base physical address within the NVDIMM of the NVDIMM region.
Interleave Structure Index	2	40	The Interleave Structure (see <a href="#">Table 5.2.25.4</a> ), if any, for the NVDIMM region, as defined in <a href="#">Table 5-134</a> .
Interleave Ways	2	42	Number of NVDIMMs in the interleave set, including the NVDIMM containing the NVDIMM region, as defined in <a href="#">Table 5-134</a> .

Field	Byte Length	Byte Offset	Description
NVDIMM State Flags	2	44	<p>Bit [0] set to 1 indicates that the previous SAVE operation to the NVDIMM containing the NVDIMM region failed.</p> <p>Bit [0] set to 0 indicates that the previous SAVE succeeded, or there was no previous SAVE.</p> <p>Bit [1] set to 1 indicates that the last RESTORE operation from the NVDIMM containing the NVDIMM region failed.</p> <p>Bit [1] set to 0 indicates that the last RESTORE succeeded or there was no last RESTORE.</p> <p>Bit [2] set to 1 indicates that the platform flush of data to the NVDIMM containing the NVDIMM region before the previous SAVE failed. As a result, the restored data content may be inconsistent even if Bit [0] and Bit [1] do not indicate failure.</p> <p>Bit [2] set to 0 indicates that the platform flush succeeded, or there was no platform flush.</p> <p>Bit [3] set to 1 indicates that the NVDIMM containing the NVDIMM region is not able to accept persistent writes. For an energy-source backed NVDIMM device, Bit [3] is set if it is not armed or the previous ERASE operation did not complete.</p> <p>Bit [3] set to 0 indicates that the NVDIMM containing the NVDIMM region is armed.</p> <p>Bit [4] set to 1 indicates that the NVDIMM containing the NVDIMM region observed SMART and health events prior to OSPM handoff.</p> <p>Bit [5] set to 1 indicates that platform firmware is enabled to notify OSPM of SMART and health events related to the NVDIMM containing the NVDIMM region using Notify codes as specified in <a href="#">Table 5-174</a>.</p> <p>Bit [6] set to 1 indicates that the platform firmware did not map the NVDIMM containing the NVDIMM region into an SPA range. This could be due to various issues such as a device initialization error, device error, insufficient hardware resources to map the device, or a disabled device.</p> <p>Implementation Note: In case of device error, Bit [4] might be set along with Bit [6].</p> <p>Bit [7] to Bit [15] are reserved.</p> <p>Implementation Note: Platform firmware might report several set bits.</p>
Reserved	2	46	

\* See *DSP0134 System Management BIOS (SMBIOS) Reference Specification*, Version 3.0.0 (2015-02-12) by the Distributed Management Task Force, Inc. (DMTF) at <http://www.dmtf.org/standards/smbios>.

**Table 5-134 Interleave Structure Index and Interleave Ways definition**

Interleave Structure Index	Interleave Ways	Interpretation
0	0	Interleaving, if any, of the NVDIMM region is not reported
0	1	The NVDIMM region is not interleaved with other NVDIMMs (i.e., it is one-way interleaved)
0	> 1	The NVDIMM region is part of an interleave set with the number of NVDIMMs indicated in the Interleave Ways field, including the NVDIMM containing the NVDIMM region, but the Interleave Structure is not described.
> 0	> 1	The NVDIMM region is part of an interleave set with: a) the number of NVDIMMs indicated in the Interleave Ways field, including the NVDIMM containing the NVDIMM region; and b) the Interleave Structure (see <a href="#">Section 5.2.25.4</a> ) indicated by the Interleave Structure Index field.
All other combinations		Invalid case

**Note:** *Interleave Structure Index=0, Interleave Ways !=1 is to allow a PM range which is interleaved but the actual interleave is not described but only provides the physical Memory Devices (as described by SMBIOS Type 17) that contribute to the PM region. Typically, only block region requires the interleave structure since software has to undo the effect of interleave.*

#### 5.2.25.4 Interleave Structure

Memory from DIMMs/NVDIMMs could be interleaved across memory channels, memory controller and processor sockets. This structure describes the memory interleave for a given address range. Since interleave is a repeating pattern, this structure only describes the lines involved in the memory interleave before the pattern start to repeat.

**Table 5-135 Interleave Structure**

Field	Byte Length	Byte Offset	Description
Type	2	0	2 - Interleave Structure
Length	2	2	Length in bytes for entire structure.
Interleave Structure Index	2	4	Index Number uniquely identifies the interleave description – this allows reuse of interleave description across multiple NVDIMMs. Index must be non-zero.
Reserved	2	6	
Number of Lines Described (m)	4	8	Only need to describe the number of lines needed before the interleave pattern repeats
Line Size ( in bytes )	4	12	e.g. 64, 128, 256, 4096
Line 1 Offset	4	16	Line 1 Offset refers to the offset of the line, in multiples of Line Size, from the corresponding SPA Range Base for the NVDIMM region. Line 1 SPA = SPA Range Base + Region Offset + (Line 1 Offset*Line Size). Line SPA is naturally aligned to the Line size.
...	4		
Line m Offset	4	16+((m-1)*4)	Line m Offset refers to the offset of the line, in multiples of Line Size, from the corresponding SPA Range Base for the NVDIMM region. Line m SPA = SPA Range Base + Region Offset + (Line m Offset*Line Size) where m is the last line number before the pattern repeats. Line SPA is naturally aligned to the Line size.

### 5.2.25.5 SMBIOS Management Information Structure

This structure enables platform to communicate the additional SMBIOS entries beyond the entries provided by SMBIOS Table at boot to the OS (e.g. Type 17 entries corresponding to hot added NVDIMMs).

**Table 5-136 SMBIOS Management Information Structure**

Field	Byte Length	Byte Offset	Description
Type	2	0	3 - SMBIOS Management Information Structure
Length	2	2	Length in bytes for entire structure.
Reserved	4	4	
Data	–	8	SMBIOS Table Entries

### 5.2.25.6 NVDIMM Control Region Structure

The system shall include an NVDIMM Control Region Structure for every Function Interface in the NVDIMM.

**Table 5-137 NVDIMM Control Region Structure Mark**

Field	Byte Length	Byte Offset	Description
Type	2	0	4 - NVDIMM Control Region Structure
Length	2	2	Length in bytes for entire structure. The length of this structure is either 32 bytes or 80 bytes. The length of the structure can be 32 bytes only if the Number of Block Control Windows field has a value of 0.
NVDIMM Control Region Structure Index	2	4	Index Number uniquely identifies the NVDIMM Control Region Structure.
Vendor ID	2	6	Identifier indicating the vendor of the NVDIMM.  This field shall be set to the value of the NVDIMM SPD Module Manufacturer ID Code field <sup>a</sup> with byte 0 set to DDR4 SPD byte 320 and byte 1 set to DDR4 SPD byte 321.
Device ID	2	8	Identifier for the NVDIMM, assigned by the module vendor.  This field shall be set to the value of the NVDIMM SPD Module Product Identifier field <sup>b</sup> with byte 0 set to SPD byte 192 and byte 1 set to SPD byte 193.
Revision ID	2	10	Revision of the NVDIMM, assigned by the module vendor. Byte 1 of this field is reserved.  Byte 0 of this field shall be set to the value of the NVDIMM SPD Module Revision Code field <sup>a</sup> (i.e., SPD byte 349).
Subsystem Vendor ID	2	12	Vendor of the NVDIMM non-volatile memory subsystem controller <sup>c</sup> .  This field shall be set to the value of the NVDIMM SPD Non-Volatile Memory Subsystem Controller Vendor ID field <sup>b</sup> with byte 0 set to SPD byte 194 and byte 1 set to SPD byte 195.

Field	Byte Length	Byte Offset	Description
Subsystem Device ID	2	14	<p>Identifier for the NVDIMM non-volatile memory subsystem controller, assigned by the non-volatile memory subsystem controller vendor.</p> <p>This field shall be set to the value of the NVDIMM SPD Non-Volatile Memory Subsystem Controller Device ID field <sup>b</sup> with byte 0 set to SPD byte 196 and byte 1 set to SPD byte 197.</p>
Subsystem Revision ID	2	16	<p>Revision of the NVDIMM non-volatile memory subsystem controller, assigned by the non-volatile memory subsystem controller vendor.</p> <p>Byte 1 of this field is reserved.</p> <p>Byte 0 of this field shall be set to the value of the NVDIMM SPD Non-Volatile Memory Subsystem Controller Revision Code field <sup>b</sup> (i.e., SPD byte 198).</p>
Valid Fields	1	18	<p>Valid bits for fields defined after the initial NFIT definition in ACPI 6.0 within the initially defined lengths of 32 and 80 bytes.</p> <p>Bits [7-1]: Reserved</p> <p>Bit [0]: Manufacturing Location field and Manufacturing Date field</p> <p>Bit [0] set to one indicates that the Manufacturing Location field and Manufacturing Date field are valid. Bit [0] set to zero indicates that the Manufacturing Location field and Manufacturing Date field are not valid and should be ignored.</p> <p>Systems compliant with this specification shall set Bit [0] to one. Systems that were compliant with ACPI 6.0 had Bit [0] set to zero, meaning they did not have Manufacturing Location and Manufacturing Date fields.</p>
Manufacturing Location	1	19	<p>Manufacturing location for the NVDIMM, assigned by the module vendor.</p> <p>This field shall be set to the value of the NVDIMM SPD Module Manufacturing Location field <sup>a</sup> (SPD byte 322).</p> <p>Validity of this field is indicated in Valid Fields Bit [0].</p>

Field	Byte Length	Byte Offset	Description
Manufacturing Date	2	20	<p>Date the NVDIMM was manufactured, assigned by the module vendor.</p> <p>This field shall be set to the value of the NVDIMM SPD Module Manufacturing Date field <sup>a</sup> with byte 0 set to SPD byte 323 and byte 1 set to SPD byte 324.</p> <p>Validity of this field is indicated in Valid Fields Bit [0].</p>
Reserved	2	22	
Serial Number	4	24	<p>Serial number of the NVDIMM, assigned by the module vendor.</p> <p>This field shall be set to the value of the NVDIMM SPD Module Serial Number field <sup>a</sup> with byte 0 set to SPD byte 325, byte 1 set to SPD byte 326, byte 2 set to SPD byte 327, and byte 3 set to SPD byte 328.</p>
Region Format Interface Code	2	28	<p>Identifier for the programming interface.</p> <p>This field shall be set to the value of the NVDIMM SPD Function Interface descriptor <sup>b</sup> for the function interface represented by the NVDIMM Control Region structure, with:</p> <ul style="list-style-type: none"> <li>a) byte 0 bits 7:5 set to 000b;</li> <li>b) byte 0 bits 4:0 set to the Function Interface field (i.e., Function Interface descriptor bits 4:0);</li> <li>c) byte 1 bits 7:5 set to 000b; and</li> <li>d) byte 1 bits 4:0 set to the Function Class field (i.e., Function Interface descriptor bits 9:5).</li> </ul> <p>EXAMPLE: A Function Interface Descriptor of 0x8021 means:</p> <ul style="list-style-type: none"> <li>a) Function Interface Descriptor is implemented;</li> <li>b) there is no Extended Function Parameter Block;</li> <li>c) function class is byte-addressable energy backed (0x01); and</li> <li>d) function interface is byte addressable energy backed function interface 1 (0x01) <sup>d</sup>,</li> </ul> <p>and maps to a Region Format Interface Code of 0x0101.</p>
Number of Block Control Windows	2	30	Number of Block Control Windows must match the corresponding number of Block Data Windows. Fields that follow this field are valid only if the number of Block Control Windows is non-zero.
Size of Block Control Window	8	32	In Bytes

Field	Byte Length	Byte Offset	Description
Command Register Offset in Block Control Window	8	40	In Bytes. Logical offset. Refer to Note. The start of the subsequent Block Control Windows is calculated by adding Size of Block Control Window.
Size of Command Register in Block Control Windows	8	48	In Bytes
Status Register Offset in Block Control Window	8	56	In Bytes. Logical offset. Refer to Note1. The start of the subsequent Block Control Window is calculated by adding Size of Block Control Window.
Size of Status Register in Block Control Windows	8	64	In Bytes
NVDIMM Control Region Flag	2	72	Bit [0] – set to 1 to indicate that the Block Data Windows implementation is buffered. The content of the data window is only valid when so indicated by Status Register.
Reserved	6	74	

<sup>a</sup> See JEDEC Standard No. 21-C *JEDEC Configurations for Solid State Memories*, Annex L: Serial Presence Detect (SPD) for DDR4 SDRAM modules, DDR4 SPD Document Release 2.

<sup>b</sup> See JEDEC Standard No. 21-C *JEDEC Configurations for Solid State Memories*, Annex L: Serial Presence Detect (SPD) for DDR4 SDRAM modules, DDR4 SPD Document Release 3 (forthcoming).

<sup>c</sup> In an NVDIMM, the module contains a non-volatile memory subsystem controller.

<sup>d</sup> See JEDEC Standard No. 2233-22 *Byte Addressable Energy Backed Interface*, Version 1.0 (forthcoming).

**Note:** *Logical offset in structure above refers to offset from the start of NVDIMM Control Region. The logical offset is with respect to the device not with respect to system physical address space. Software should construct the device address space (accounting for interleave) before applying the block control start offset.*

### 5.2.25.7 NVDIMM Block Data Window Region Structure

This structure shall be provided only if the number of Block Data Windows is non-zero.

**Table 5-138 NVDIMM Block Data Windows Region Structure**

Field	Byte Length	Byte Offset	Description
Type	2	0	5 - NVDIMM Block Data Window Region Structure
Length	2	2	Length in bytes for entire structure.
NVDIMM Control Region Structure Index	2	4	Provides association for the corresponding NVDIMM Control Region. Shall be Non-zero.
Number of Block Data Windows	2	6	Number of Block Data Windows shall match the corresponding number of Block Control Windows.
Block Data Window Start Offset	8	8	In Bytes. Logical offset. Refer to Note2. The start of the subsequent Block Data Window is calculated by adding Size of Block Data Window.
Size of Block Data Window	8	16	In Bytes
Block Accessible Memory Capacity	8	24	In Bytes
Beginning address of first block in Block Accessible Memory	8	32	In Bytes. The address of the next block is obtained by adding the value of this field to Size of Block Data Window.

**Note:** *Logical offset in table above refers to offset from the start of NVDIMM Data Window Region. The logical offset is with respect to the device not with respect to system physical address space. Software should construct the device address space (accounting for interleave) before applying the Block Data Window start offset.*

### 5.2.25.8 Flush Hint Address Structure

Software needs an assurance of durability (i.e. a guarantee that the writes have reached the target NVDIMM) after writing to a NVDIMM region. The Flush Hint feature is platform specific and if supported, the platform exposes this durability mechanism to OSPM by providing a Flush Hint Address Structure.

For a given NVDIMM (as indicated by the NFIT Device Handle in the Flush Hint Address Structure), software can write to any one of these Flush Hint Addresses to cause any preceding writes to the NVDIMM region to be flushed out of the intervening platform buffers<sup>1</sup> to the targeted NVDIMM (to achieve durability).

---

1. Note that the platform buffers do not include processor cache(s)! Processors typically include ISA to flush data out of processor caches.

**Table 5-139 Flush Hint Address Structure**

Field	Byte Length	Byte Offset	Description
Type	2	0	6 - Flush Hint Address Structure
Length	2	2	Length in bytes for entire structure.
NFIT Device Handle	4	4	Indicates the NVDIMM supported by the Flush Hint Addresses in this structure.
Number of Flush Hint Addresses in this structure (m)	2	8	Number of Flush Hint Addresses in this structure.
Reserved	6	10	Reserved
Flush Hint Address 1	8	16	64-bit system physical address that needs to be written to cause durability flush. Software is allowed to write up to a cache line of data. The content of the data is not relevant to the functioning of the flush hint mechanism.
...	8	24	
Flush Hint Address m	8	16+ ((m-1)*8)	64-bit system physical address that needs to be written to cause durability flush. Software is allowed to write up to a cache line of data. The content of the data is not relevant to the functioning of the flush hint mechanism.

### 5.2.25.9 Platform Capabilities Structure

This structure informs OSPM of the NVDIMM platform capabilities.

**Table 5-140 Platform Capabilities Structure**

Field	Byte Length	Byte Offset	Description
Type	2	0	7 – Platform Capabilities Structure
Length	2	2	Length in bytes for entire structure.
Highest Valid Capability	1	4	The bit index of the highest valid capability implemented by the platform. The subsequent bits shall not be considered to determine the capabilities supported by the platform.
Reserved	3	5	Reserved (0)

Field	Byte Length	Byte Offset	Description
Capabilities	4	8	<p>Bit[0] – CPU Cache Flush to NVDIMM Durability on Power Loss Capable. If set to 1, indicates that platform ensures the entire CPU store data path is flushed to persistent memory on system power loss.</p> <p>Bit[1] – Memory Controller Flush to NVDIMM Durability on Power Loss Capable. If set to 1, indicates that platform provides mechanisms to automatically flush outstanding write data from the memory controller to persistent memory in the event of platform power loss. Note: If bit 0 is set to 1 then this bit shall be set to 1 as well.</p> <p>Bit[2] – Byte Addressable Persistent Memory Hardware Mirroring Capable. If set to 1, indicates that platform supports mirroring multiple byte addressable persistent memory regions together. If this feature is supported and enabled, healthy hardware mirrored interleave sets will have the EFI_MEMORY_MORE_RELIABLE Address Range Memory Mapping Attribute set in the System Physical Address Range structure in the NFIT table.</p> <p>Bits[31:3] - Reserved</p>
Reserved	4	12	Reserved (1)

### 5.2.25.10 NVDIMM Representation Format

If software or an NVDIMM manufacturer displays, prints on a label, or otherwise makes available an identifier for an NVDIMM (e.g., to uniquely identify the NVDIMM), then the following hexadecimal format should be used:

- If the Manufacturing Location and Manufacturing Date fields are valid:  
C language format string: "%02x%02x-%02x-%02x%02x-%02x%02x%02x%02x"

Format values:

1. Vendor ID byte 0 (including the parity bit)
  2. Vendor ID byte 1
  3. Manufacturing Location byte
  4. Manufacturing Date byte 0 (i.e., the year)
  5. Manufacturing Date byte 1 (i.e., the week)
  6. Serial Number byte 0
  7. Serial Number byte 1
  8. Serial Number byte 2
  9. Serial Number byte 3
- If the Manufacturing Location and Manufacturing Date fields are not valid:  
C language format string: "%02x%02x-%02x%02x%02x%02x"

Format values:

1. Vendor ID byte 0 (including the parity bit)
2. Vendor ID byte 1
3. Serial Number byte 0
4. Serial Number byte 1
5. Serial Number byte 2
6. Serial Number byte 3

This format matches the order of SPD bytes 320 to 328 from low to high (i.e., showing the lowest or first byte on the left).

### **5.2.26 Secure Devices (SDEV) ACPI Table**

The Secure DEVices (SDEV) table is a list of secure devices known to the system. The table is applicable to systems where a secure OS partition and a non-secure OS partition co-exist. A secure device is a device that is protected by the secure OS, preventing accesses from non-secure OS.

The table provides a hint as to which devices should be protected by the secure OS. The enforcement of the table is provided by the secure OS and any pre-boot environment preceding it. The table itself does not provide any security guarantees. It is the responsibility of the system manufacturer to ensure that the operating system is configured to enable security features that make use of the SDEV table.

There are three options for each device in the system:

- 1) Device is listed in SDEV. “Allow handoff...” flag is clear.

This provides a hint that the device should be always protected within the secure OS.

For example, the secure OS may require that a device used for user authentication must be protected to guard against tampering by malicious software.

- 2) Device is listed in SDEV. “Allow handoff...” flag is set.

This provides a hint that the device should be initially protected by the secure OS, but it is up to the discretion of the secure OS to allow the device to be handed off to the non-secure OS when requested. Any OS component that expected the device to be operating in secure mode would not correctly function after the handoff has been completed.

For example, a device may be used for variety of purposes, including user authentication. If the secure OS determines that the necessary components for driving the device are missing, it may release control of the device to the non-secure OS. In this case, the device cannot be used for secure authentication, but other operations can correctly function.

- 3) Device not listed in SDEV

For example, the status quo is that no hints are provided. Any OS component that expected the device to be in secure mode would not correctly function.

The OS vendor provides guidance on which devices can be listed in the SDEV table; in other words, which devices are compatible with the secure OS, and which devices should have the “allow handoff” flag set.

See table below for the SDEV ACPI definition.

**Table 5-141 SDEV ACPI Table**

Field	Byte Length	Byte Offset	Description
Header			
Signature	4	0	'SDEV'. Signature for the Table
Length	4	4	Length, in bytes, of the entire Table.
Revision	1	8	1
Checksum	1	9	Entire table must sum to zero.
OEM ID	6	10	OEM ID
OEM Table ID	8	16	For the SDEV Table, the table ID is the manufacturer model ID.
OEM Revision	4	24	OEM revision of SDEV Table for supplied OEM Table ID.
Creator ID	4	28	Vendor ID of utility that created the table.
Creator Revision	4	32	Revision of utility that created the table.
Secure Device Structures []	-	36	A list of structures containing one or more Secure Device Structures as defined in next section.

### 5.2.26.1 Secure Device Structures

Value	Description
1	PCIe Endpoint Device based Secure Device.
0	ACPI_NAMESPACE_DEVICE based Secure Device.
All Other Values	Reserved for future use. For forward compatibility, software skips structures it does not comprehend by skipping the appropriate number of bytes indicated by the Length field. All new device structures must include the Type, Flags, and Length fields as the first 3 fields respectively.

### 5.2.26.2 PCIe Endpoint Device Based Device Structure

Field	Byte Length	Byte Offset	Description
Type	1	0	0x01: PCIe Endpoint device.
Flags	1	1	Bit 0: Allow handoff to non-secure OS. All other bits are reserved and must be zero.
Length	2	2	Length of this Entry in Bytes.
PCI Segment Number	2	4	PCI segment number of the device .
Start Bus Number	2	6	This field describes the bus number (bus number of the first PCI Bus produced by the PCI Host Bridge) under which the secure device resides.
PCI Path Offset	2	8	<p>Pointer to the PCI path* entry offset in the Secure PCI Device Structure data region.</p> <p>A PCI Path describes the hierachal path from the Host Bridge to the device.</p> <p>For example, a device in an N-deep hierarchy is identified by N {PCI Device Number, PCI Function Number} pairs, where N is a positive integer. Even offsets contain the Device numbers, and odd offsets contain the Function numbers. The first {Device, Function} pair resides on the bus identified by the 'Start Bus Number' field. Each subsequent pair resides on the bus directly behind the bus of the device identified by the previous pair. The identity (Bus, Device and Function) of the target device is obtained by recursively walking down these N {Device, Function} pairs.</p>
PCI Path Length	2	10	Length of the PCI path entry.
Vendor specific data Offset	2	12	Offset of the data specific to the device.
Vendor specific data Length	2	14	Length of the data specific to the device.

Example:

The following table is an example for implementing a PCIe Endpoint Device Based Device Structure for a PCIe device (Bus 1, Dev 2, Function 1), that is a child of a PCIe Root Port (Bus 0, Dev 18, Function 0).

**Table 5-142 PCIe Endpoint Device Based Device Structure Example**

Field	Byte Length	Byte Offset	Value
Type	1	0	0x01: PCIe Endpoint device.
Flags	1	1	0x01
Length	2	2	0x18
PCI Segment Number	2	4	0x0
Start Bus Number	2	6	0x0
PCI Path Offset	2	8	0x10 (16 DEC)
PCI Path Length	2	10	0x4
Vendor specific data Offset	2	12	0x14 (20 DEC)
Vendor specific data Length	2	14	0x4
PCI Path			
PCI Device	1	16	0x12 (18 DEC)
PCI Function	1	17	0x0
PCI Device	1	18	0x2
PCI Function	1	19	0x1
Vendor specific data	4	20	0xDEADBEEF

### 5.2.26.3 ACPI\_NAMESPACE\_DEVICE based Secure Device Structure

Field	Byte Length	Byte Offset	Description
Type	1	0	0x00: ACPI integrated devices
Flags	1	1	Bit 0: Allow handoff to non-secure OS. All other bits are reserved and must be zero.
Length	2	2	Length of this entry in bytes.
Device Identifier Offset	2	4	Offset, in Secure ACPI Device structure of null terminated ASCII string that contains a fully qualified reference to the ACPI name-space object that is this device. (For example, "\\_SB.I2C0" represents the ACPI object name for an embedded I2C Device in southbridge; Quotes are omitted in the data field). Refer to ACPI specification for fully qualified references for ACPI name-space objects.
Device Identifier Length	2	6	Length of Device Identifier string in bytes, including the termination byte

Field	Byte Length	Byte Offset	Description
Vendor specific data Offset	2	8	Offset, in Secure ACPI Device Structure, of the data specific to the device supplied by the vendor
Vendor specific data Length	2	10	Length of the data specific to the device supplied by the vendor

## 5.2.27 Heterogeneous Memory Attribute Table (HMAT)

### 5.2.27.1 HMAT Overview

Heterogeneous Memory Attribute Table (HMAT) describes the memory attributes, such as memory side cache attributes and bandwidth and latency details, related to Memory Proximity Domains. The software is expected to use this information as hint for optimization.

OSPM evaluates HMAT only during system initialization. Any changes to the HMAT state at runtime or information regarding HMAT for hot plug are communicated using the \_HMA method (see [Section 6.2.18](#)).

The HMAT consists of the following structures:

1. Memory Proximity Domain Attributes Structure(s) (see [Section 5.2.27.3](#)) – Describes attributes of memory proximity domains.
2. System Locality Latency and Bandwidth Information Structure (s) (see [Section 5.2.27.4](#)) – Describes the memory access latency and bandwidth information from various memory access initiator proximity domains.
3. Memory Side Cache Information Structure(s) (see [Section 5.2.27.5](#)) – Describes memory side cache information for memory proximity domains if the memory side cache is present and the physical device (SMBIOS handle) forms the memory side cache.

These structures are illustrated by the following figure.

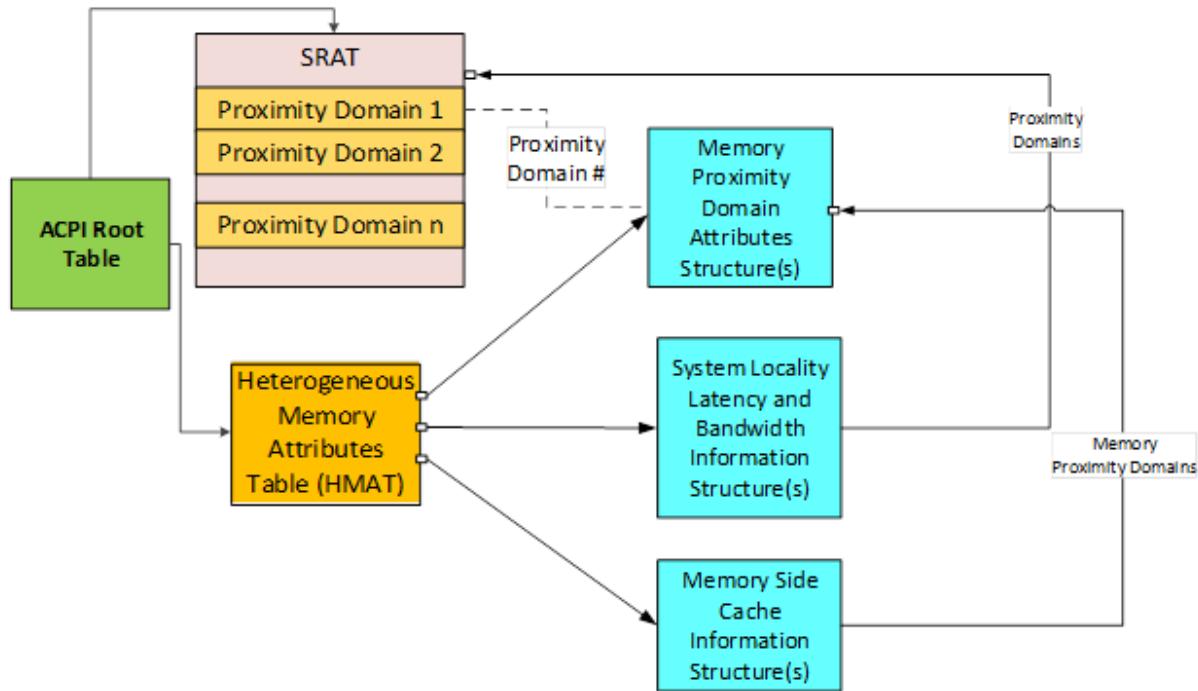


Figure 5-23 HMAT Representation

Table 5-143 Heterogeneous Memory Attribute Table Header


Field	Byte Length	Byte Offset	Description
Header			
Signature	4	0	'HMAT' is Signature for this table
Length	4	4	Length in bytes for entire table.
Revision	1	8	2
Checksum	1	9	Entire table must sum to zero
OEMID	6	10	OEM ID
OEM Table ID	8	16	The table ID is the manufacturer model ID
OEM Revision	4	24	OEM revision of table for supplied OEM Table ID
Creator ID	4	28	Vendor ID of utility that created the table
Creator Revision	4	32	Revision of utility that created the table
Reserved	4	36	To make the structures 8 byte aligned
HMAT Table Structures[n]	—	40	A list of HMAT table structures for this implementation.

**Table 5-144 HMAT Structure Types**

Value	Description
0	Memory Proximity Domain Attributes Structure
1	System Locality Latency and Bandwidth Information Structure
2	Memory Side Cache Information Structure
3-0xFFFF	Reserved

### 5.2.27.2 Memory Side Cache Overview

Memory side cache allows to optimize the performance of memory subsystems. [Table 5-24](#) shows an example of system physical address (SPA) range with memory side cache in front of actual memory that is seen by the software. When the software accesses an SPA, if it is present in the near memory (hit) it would be returned to the software, if it is not present in the near memory (miss) it would access the next level of memory and so on.

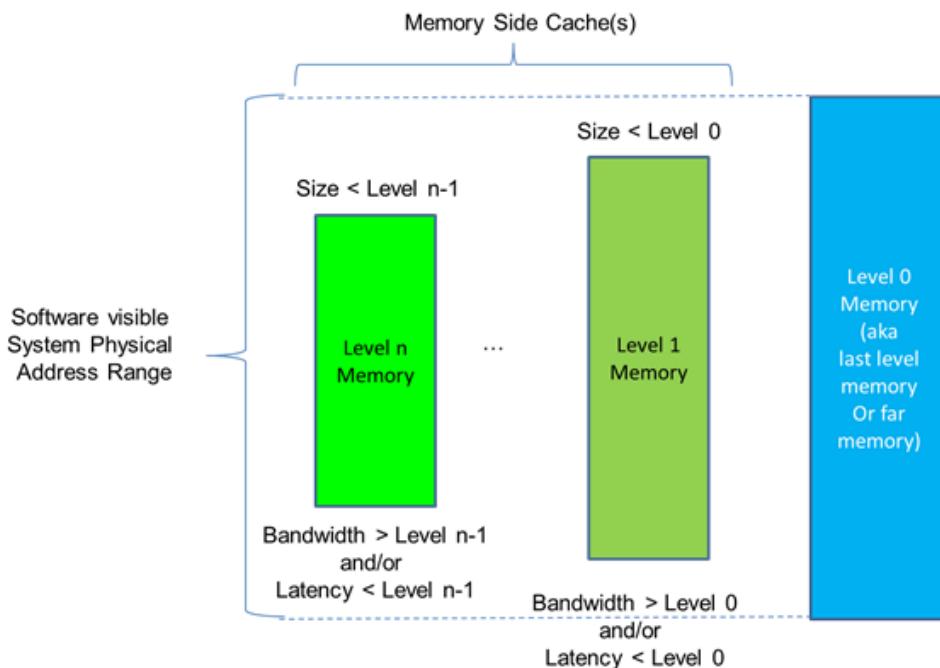**Figure 5-24 Memory Side Cache Example**

The term “far memory” is used to denote the last level memory (Level 0 Memory) in the memory hierarchy as shown in [Table 5-24](#). The Level n Memory acts as memory side cache to Level n-1 Memory and Level n-1 memory acts as memory side cache for Level n-2 memory and so on. If Non-Volatile memory is cached by memory side cache, then platform is responsible for persisting the modified contents of the memory side cache corresponding to the Non-Volatile memory area on power failure, system crash or other faults.

### 5.2.27.3 Memory Proximity Domain Attributes Structure

This structure describes the system physical address (SPA) range occupied by the memory subsystem and its associativity with processor proximity domain as well as hint for memory usage.

**Table 5-145 Memory Proximity Domain Attributes Structure**

Field	Byte Length	Byte Offset	Description
Type	2	0	0 - Memory Proximity Domain Attributes Structure
Reserved	2	2	
Length	4	4	40 - Length in bytes for entire structure.
Flags	2	8	<p>Bit [0]: set to 1 to indicate that data in the Proximity Domain for the Attached Initiator field is valid.</p> <p>Bit [1]: Reserved. Previously defined as Memory Proximity Domain field is valid. Deprecated since ACPI 6.3.</p> <p>Bit [2]: Reserved. Previously defined as Reservation Hint. Deprecated since ACPI 6.3.</p> <p>Bits [15:3] : Reserved.</p>
Reserved	2	10	
Proximity Domain for the Attached Initiator	4	12	<p>This field is valid only if the memory controller responsible for satisfying the access to memory belonging to the specified memory proximity domain is directly attached to an initiator that belongs to a proximity domain. In that case, this field contains the integer that represents the proximity domain to which the initiator (Generic Initiator or Processor) belongs. This number shall match the corresponding entry in the SRAT table's processor affinity structure (e.g., Processor Local APIC/SAPIC Affinity Structure, Processor Local x2APIC Affinity Structure, GICC Affinity Structure) if the initiator is a processor, or the Generic Initiator Affinity Structure if the initiator is a generic initiator.</p> <p>Note: this field provides additional information as to the initiator node that is closest (as in directly attached) to the memory address ranges within the specified memory proximity domain, and therefore should provide the best performance.</p>
Proximity Domain for the Memory	4	16	Integer that represents the memory proximity domain to which this memory belongs.
Reserved	4	20	

Reserved	8	24	Previously defined as the Start Address of the System Physical Address Range. Deprecated since ACPI Specification 6.3.
Reserved	8	32	Previously defined as the Range Length of the region in bytes. Deprecated since ACPI Specification 6.3.

**Note:** The Proximity Domain values must first be assigned and described in the SRAT table, the same values are then used in the SLIT, HMAT, MSCT, and NFIT tables when the associated characteristics need to be described for the matching Proximity Domains.

#### 5.2.27.4 System Locality Latency and Bandwidth Information Structure

This optional structure provides a matrix that describes the normalized memory read/write latency, read/write bandwidth between Initiator Proximity Domains (Processor or I/O) and Target Proximity Domains (Memory).

The Entry Base Unit for latency is in picoseconds. The Entry Base Unit for bandwidth is in megabytes per second (MB/s). The Initiator to Target Proximity Domain matrix entry can have one of the following values.

- 0: the corresponding latency or bandwidth information is not provided.
- 1–0xFFFF: the corresponding latency or bandwidth information expressed in multiples of Entry Base Unit.
- 0xFFFF: the initiator and target domains are unreachable from each other.

The represented latency or bandwidth value is determined as follows:

- Represented latency = (Initiator to Target Proximity Domain matrix entry value \* Entry Base Unit) picoseconds.
- Represented bandwidth = (Initiator to Target Proximity Domain matrix entry value \* Entry Base Unit) MB/s.

The following examples show how to report latency and throughput values:

- If the “Entry Base Unit” is 1 for latency and the matrix entry has the value of 10, the latency is 10 picoseconds.
- If the “Entry Base Unit” is 1000 for latency and the matrix entry has the value of 100, the latency is 100 nanoseconds.
- If the “Entry Base Unit” is 1 for BW and the matrix entry has the value of 10, the BW is 10 MB/s.
- If the “Entry Base Unit” is 1024 for BW and the matrix entry has the value of 100, the BW is 100 GB/s.

**Note:** *The lowest latency number represents best performance and the highest bandwidth number represents best performance. The latency and bandwidth numbers represented in this structure correspond to specification rated latency and bandwidth for the platform. The represented latency is determined by aggregating the specification rated latencies of the memory device and the interconnects from initiator to target. The represented bandwidth is determined by the lowest bandwidth among the specification rated bandwidth of the memory device and the interconnects from the initiator to target.*

**Table 5-146 System Locality Latency and Bandwidth Information Structure**

Field	Byte Length	Byte Offset	Description
Type	2	0	1 – System Locality Latency and Bandwidth Information Structure
Reserved	2	2	
Length	4	4	Length in bytes for entire structure.
Flags	1	8	<p>Bits [3:0] Memory Hierarchy:</p> <ul style="list-style-type: none"> <li>• 0 – Memory If the memory side cache is not present, this structure represents the memory performance. If memory side cache is present, this structure represents the memory performance when no hits occur in any of the memory side caches associated with the memory</li> <li>• 1 – 1st level memory side cache</li> <li>• 2 – 2nd level memory side cache</li> <li>• 3 – 3rd level memory side cache</li> </ul> <p>Other bits:</p> <ul style="list-style-type: none"> <li>• Bits[7:4] Reserved</li> </ul>
Data Type	1	9	<p>Type of data represented by this structure instance.</p> <p>If Memory Hierarchy = 0</p> <ul style="list-style-type: none"> <li>• 0 – Access Latency (if read and write latencies are same)</li> <li>• 1 – Read Latency</li> <li>• 2 – Write Latency</li> <li>• 3 – Access Bandwidth (if read and write bandwidth are same)</li> <li>• 4 – Read Bandwidth</li> <li>• 5 – Write Bandwidth</li> </ul> <p>If Memory Hierarchy = 1, 2, 3, or 4</p> <ul style="list-style-type: none"> <li>• 0 – Access Hit Latency (if read hit and write hit latencies are same)</li> <li>• 1 – Read Hit Latency</li> <li>• 2 – Write Hit Latency</li> <li>• 3 – Access Hit Bandwidth (if read hit and write hit latency are same)</li> <li>• 4 – Read Hit Bandwidth</li> <li>• 5 – Write Hit Bandwidth</li> </ul> <p>Other values reserved</p>
Reserved	2	10	
Number of Initiator Proximity Domains (s)	4	12	<p>Indicates total number of Proximity Domains that can initiate memory access requests to other proximity domains.</p> <p>This is typically the processor or I/O proximity domains.</p>
Number of Target Proximity Domains (t)	4	16	Indicates total number of Proximity Domains that can act as target. This is typically the Memory Proximity Domains.
Reserved	4	20	

Field	Byte Length	Byte Offset	Description
Entry Base Unit	8	24	Base unit for Matrix Entry Values (latency or bandwidth). Base unit for latency in picoseconds. Base unit for bandwidth in megabytes per second (MB/s). This field shall be non-zero.
Initiator Proximity Domain List[0]	4	32	
Initiator Proximity Domain List[1]	4		
...			
Initiator Proximity Domain List[s-1]	4		
Target Proximity Domain List[0]	4	32 + 4 x s	
Target Proximity Domain List[1]	4		
...			
Target Proximity Domain List[t-1]	4		
The following list of entries provides latency/bandwidth values. Total Number Entry shall be equal to Number of Initiator Proximity Domains * Number of Target Proximity Domains			
Entry[0][0]	2	32 + 4 x s + 4 x t	Matrix entry (Initiator Proximity Domain List[0], Target Proximity Domain List[0])
Entry[0][1]	2		Matrix entry (Initiator Proximity Domain List[0], Target Proximity Domain List[1])
....			
Entry[0][Number of Target Proximity Domains -1]	2		Matrix entry (Initiator Proximity Domain List[0], Target Proximity Domain List[t-1])
Entry[1][ 0]	2		Matrix entry (Initiator Proximity Domain List[1], Target Proximity Domain List[0])
Entry[1][1]	2		Matrix entry (Initiator Proximity Domain List[1], Target Proximity Domain List[1])
....			
Entry[1][ Number of Target Proximity Domains -1]	2		Matrix entry (Initiator Proximity Domain List[1], Target Proximity Domain List[t-1])
....			
Entry[Number of Initiator Proximity Domains - 1][ Number of Target Proximity Domains -1]	2		Matrix entry (Initiator Proximity Domain List[s-1], Target Proximity Domain List[t-1])

**Implementation Note:** The Flag field in this table allows read latency, write latency, read bandwidth and write bandwidth as well as Memory Hierarchy levels. Hence this structure could be repeated up to 4 x number of Memory Hierarchy levels if memory attributes expressed for each memory level.

If both SLIT table and the HMAT table with the memory latency information are present, the OSPM should attempt to use the data in the HMAT rather than the data in the SLIT.

### 5.2.27.5 Memory Side Cache Information Structure

System memory hierarchy could be constructed to have a large size of low performance far memory and smaller size of high performance near memory. [Table 5-147](#) describes memory side cache information for a given memory domain. The software could use this information to effectively place the data in memory to maximize the performance of the system memory that use the memory side cache.

**Table 5-147 Memory Side Cache Information Structure**

Field	Byte Length	Byte Offset	Description
Type	2	0	2 – Memory Side Cache Information Structure
Reserved	2	2	
Length	4	4	Length in bytes for entire structure.
Proximity Domain for the Memory	4	8	Integer that represents the memory proximity domain to which the memory side cache information applies. This number shall match the corresponding entry in the SRAT table's Memory Affinity Structure
Reserved	4	12	
Memory Side Cache Size	8	16	Size of memory side cache in bytes for the above memory proximity domain.

Field	Byte Length	Byte Offset	Description
Cache Attributes	4	24	<p>Bits [3:0] – Total Cache Levels for this Memory Proximity Domain</p> <ul style="list-style-type: none"> <li>• 0 – None</li> <li>• 1 – One level cache</li> <li>• 2 – Two level cache</li> <li>• 3 – Three level cache</li> <li>• Other values reserved</li> </ul> <p>Bits [7:4] : Cache Level described in this structure</p> <ul style="list-style-type: none"> <li>• 0 – None</li> <li>• 1 – One level cache</li> <li>• 2 – Two level cache</li> <li>• 3 – Three level cache</li> <li>• Other values reserved</li> </ul> <p>Bits [11:8] - Cache Associativity</p> <ul style="list-style-type: none"> <li>• 0 – None</li> <li>• 1 – Direct Mapped</li> <li>• 2 – Complex Cache Indexing (implementation specific)</li> <li>• Other values reserved</li> </ul> <p>Bits [15:12] - Write Policy</p> <ul style="list-style-type: none"> <li>• 0 – None</li> <li>• 1 – Write Back (WB)</li> <li>• 2 – Write Through (WT)</li> <li>• Other values reserved</li> </ul> <p>Bits [31:16] - Cache Line size in bytes Number of bytes accessed from next cache level on cache miss.</p>
Reserved	2	28	
Number of SMBIOS handles (n)	2	30	Number of SMBIOS handles that contributes to the memory side cache physical devices.
SMBIOS Handles	2xn	32	Refers to corresponding SMBIOS Type-17 Handles Structure that contains Physical Memory Component related information

Implementation Note: A proximity domain should contain only one set of memory attributes. If memory attributes differ, represent them in different proximity domains. If the Memory Side Cache Information Structure is present, the System Locality and Bandwidth Information Structure shall contain latency and bandwidth information for each memory side cache level.

## 5.2.28 Platform Debug Trigger Table (PDTT)

This section describes the format of the Platform Debug Trigger Table (PDTT) description table, which is an optional table that describes one or more PCC subspace identifiers that can be used to trigger/notify the platform specific debug facilities to capture non-architectural system state. This is intended as a standard mechanism for the OSPM to notify the platform of a fatal crash (e.g. kernel panic or bug check).

This table is intended for platforms that provide debug hardware facilities that can capture system info beyond the normal OS crash dump. This trigger could be used to capture platform specific state information (e.g. firmware state, on-chip hardware facilities, auxiliary controllers, etc.). This type of debug feature could be leveraged on mobile, client, and enterprise platforms.

Certain platforms may have multiple debug subsystems that must be triggered individually. This table accommodates such systems by allowing multiple triggers to be listed.

After triggering debug facilities, the CPU may continue to operate as expected so that the kernel may continue with crash processing/handling (e.g. possibly attempting to attach a debugger or proceed with a full crash dump prior to rebooting the system), depending on the value defined in Trigger order. Please refer to [Section 5.2.28.2](#) for more details.

After triggering debug facilities, the CPU must continue to operate as expected so that the kernel may continue with crash processing/handling (e.g. possibly attempting to attach a debugger or proceed with a full crash dump prior to rebooting the system).

On some platforms, the debug trigger may put some hardware components/peripherals into a frozen non-operational state, and so the debug trigger is not recommended to be used during normal run-time operation.

Other platforms may allow the debug trigger for capture system state to debug run-time behavioral issues (e.g. system performance and power issues), specified by the "Run-time" flag field in [Table 5-149](#).

When multiple triggers exist, the triggers within each of the two groups, defined by trigger order, will be executed in order. OSPM may need to wait for PCC completion before executing next trigger based on the "Wait for Completion" flag field in [Table 5-149](#).

**Note:** The mechanism by which this system debug state information is retrieved by the user is platform and vendor specific. This will most likely require special tools and privileges in order to access and parse the platform debug information captured by this trigger.

**Table 5-148** PDTT Structure

Field	Byte Length	Byte Offset	Description
Signature	4	0	'PDTT'
Length	4	4	Length in bytes of the entire Platform Debug Trigger Table
Revision	1	8	0
Checksum	1	9	Entire table must sum to zero.
OEM ID	6	10	OEM ID
OEM Table ID	8	16	The table ID is the manufacturer model ID.
OEM Revision	4	24	OEM revision for supplied OEM Table ID.
Creator ID	4	28	Vendor ID of utility that created the table.
Creator Revision	4	32	Revision of utility that created the table.
Trigger Count	1	36	Number of PDTT Platform Communication Channel Identifiers
Reserved	3	37	Must be zero
Trigger Identifier Array Offset	4	40	Offset to the "PDTT Platform Communication Channel Identifiers[]" Array
PDTT Platform Communication Channel Identifiers []	---	Trigger Identifier Array Offset	<p>Array of PDTT Platform Communication Channel Identifiers to notify various platform debug facilities. This identifier selects the PCC subspace index that must be listed in the PCCT. It also describes per trigger flags.</p> <p>Each Identifier is 2 bytes. Must provide a minimum of one identifier</p> <p>Described in <a href="#">Table 5-149</a> below.</p>

**Table 5-149** PDTT Platform Communication Channel Identifier Structure

Field	Bit Length	Bit Offset	Description
PDTT PCC Sub Channel Identifier	8	0	<p>PCC sub channel ID</p> <p><b>Note:</b> this must be an index listed in the PCCT</p>
Run-time	1	8	<p>0: Trigger must only be invoked in fatal crash scenarios. This debug trigger may put some hardware components/peripherals into a frozen non-operational state</p> <p>1: Trigger may be invoked at run-time as well as in fatal crash scenarios</p>
Wait for Completion	1	9	<p>0: OSPM may initiate next trigger immediately</p> <p>1: OSPM must wait for PCC complete prior to initiating the next trigger in the list</p>

Trigger Order	1	10	Used in fatal crash scenarios. 0: OSPM must initiate trigger before kernel crash dump processing 1: OSPM must initiate trigger at the end of crash dump processing.
Reserved	5	11	Must be zero

### 5.2.28.1 PDTT PCC Sub Channel

The PDTT PCC Sub Channel Identifier value provided by the platform in this field should be programmed to the Type field of PCC Communications Subspace Structure. The PDTT references its PCC Subspace in a given platform by this identifier, as shown in [Table 5-149](#).

#### 5.2.28.1.1 Using PCC registers

OSPM will write PCC registers by filling in the register value in PCC sub channel space and issuing a PCC execute platform debug trigger command. See [Table 5-150](#). All other command values are reserved.

**Table 5-150 PCC Commands Codes used by Platform Debug Trigger Table**

Command	Description
0x00	Execute Platform Debug Trigger (doorbell only – no command/response)
0x01	Execute Platform Debug Trigger (with vendor specific command in communication space)
0x01-0xFF	All other values are reserved.

**Table 5-151 PDTT Platform Communication Channel**

Field	Byte Length	Byte Offset	Description
Signature	4	0	The PCC signature. The signature of a subspace is computed by a bitwise-or of the value 0x50434300 with the subspace ID. For example, subspace 3 has signature 0x50434303.
Command	2	4	PCC command field, see Section 14 and Table YYY
Status	2	6	PCC status field, see Section 14
Communication Space			
Vendor Specific	variable	8	Optional vendor specific command/response area written by OSPM – must be zero if not supported

### 5.2.28.2 PDTT PCC Trigger Order

The trigger order defines two categories for triggers

Trigger Order 0: Triggers are invoked by OSPM before executing its crash dump processing functions.

Trigger Order 1: Triggers are invoked by OSPM at the end of crash dump processing functions, typically after the kernel has processed crash dumps.


Capturing platform specific debug information from certain IPs would require intrusive mechanism which may limit kernel operations after the operations. Trigger order allows the platform to define such operations that will be invoked at the end of kernel operations by OSPM.

### 5.2.28.3 Example: OS Invoking Multiple Debug Triggers

To illustrate how these debug triggers are intended to be used by the OS, consider this example of a system with 4 independent debug triggers as shown in [Table 5-25](#). These triggers are described to the OS via the PDTT example in [Table 5-152](#).

Note: This example assumes no vendor specific communication is required, so only PCC command 0x0 is used.

When the OS encounters a fatal crash, prior to collecting a crash dump and rebooting the system, the OS may choose to invoke the debug triggers in the order listed in the PDTT. The addresses of the doorbell register and the PCC general communication space (if needed) are retrieved from the PCCT, depending on the PCC subspace type (see [Table 14-365](#), [Table 14-366](#), or [Table 14-367](#)).

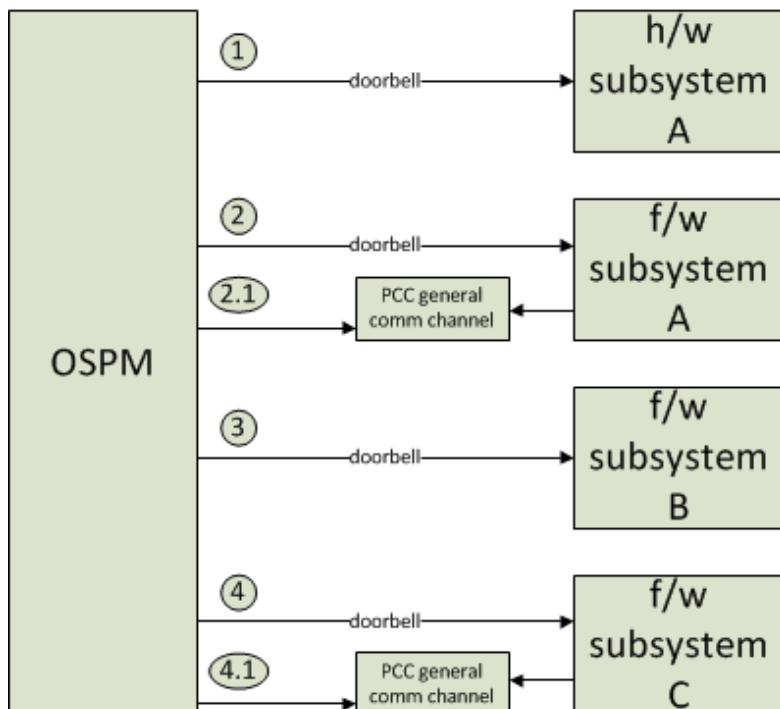

**Figure 5-25 Example: Platform with 4 debug triggers**

**Table 5-152 Example: Platform with 4 debug triggers**

Field	Value	Notes
Signature	'PDTT'	
...	...	...
Trigger Count	4	Describing the 4 triggers illustrated in Figure XXX above

Field	Value	Notes
Reserved	0	
Trigger Identifier Array Offset	44	
PDTT PCC Identifiers [0]	0x0004	[Bits 0:7] - 4 (channel subspace ID 4) [Bit 8] - 0 (Trigger may only be invoked in fatal crash scenarios) [Bit 9] - 0 (OSPM may initiate next trigger immediately)
PDTT PCC Identifiers [1]	0x0201	[Bits 0:7] – 1 (channel ID subspace 1) [Bit 8] - 0 (Trigger may only be invoked in fatal crash scenarios) [Bit 9] - 1 (OSPM must wait for PCC complete prior to initiating the next trigger in the list)
PDTT PCC Identifiers [2]	0x0002	[Bits 0:7] - 2 (channel ID subspace 2) [Bit 8] - 0 (Trigger may only be invoked in fatal crash scenarios) [Bit 9] - 0 (OSPM may initiate next trigger immediately)
PDTT PCC Identifiers [3]	0x0203	[Bits 0:7] - 3 (channel ID subspace 3) [Bit 8] - 0 (Trigger may only be invoked in fatal crash scenarios) [Bit 9] - 1 (OSPM must wait for PCC complete prior to initiating the next trigger in the list)

Walking through the list of triggers in the PDTT, the OS may execute the following steps:

1. For Trigger 0, retrieves doorbell register address from PCCT per PCC subspace ID 4 and writes to it with appropriate write/preserve mask. Since OS does not need to wait for completion, OS does not need to send a PCC command and should ignore the PCC subspace base address
2. For Trigger 1, retrieves doorbell register address and PCC subspace address from PCCT per PCC subspace ID 1. Since OS must wait for completion, OS must write PCC command (0x0) and write to the doorbell register per section 14 and poll for the completion bit.
3. For Trigger 2, , retrieves doorbell register address from PCCT per PCC subspace ID 2 and writes to it with appropriate write/preserve mask. Since OS does not need to wait for completion, OS does not need to send a PCC command and should ignore the PCC subspace base address
4. For Trigger 3, retrieves doorbell register address and PCC subspace address from PCCT per PCC subspace ID 3. Since OS must wait for completion, OS must write PCC command (0x0) and write to the doorbell register per section 14 and poll for the completion bit.

Note: When wait for completion is necessary, the OS must poll bit zero (completion bit) of the status field of that PCC channel (see [Table 14-367](#) and [Table 14-369](#)).

## 5.2.29 Processor Properties Topology Table (PPTT)

This optional table is used to describe the topological structure of processors controlled by the OSPM, and their shared resources, such as caches. The table can also describe additional information such as which nodes in the processor topology constitute a physical package. The structure of PPTT is described in [Table 5-153](#).

**Table 5-153 Processor Properties Topology Table**

Field	Byte Length	Byte Offset	Description
Header			
Signature	4	0	'PPTT' Processor Properties Topology Table
Length	4	4	Length of entire PPTT table in bytes
Revision	1	8	2
Checksum	1	9	The entire table must sum to zero.
OEMID	6	10	OEM ID.
OEM Table ID	8	16	OEM revision of table for supplied OEM Table ID
OEM Revision	4	24	OEM revision of the PPTT for the supplied OEM Table ID.
Creator ID	4	28	Vendor ID of utility that created the table
Creator Revision	4	32	Revision of utility that created the table
Body			
Processor topology structure[N]	-	36	List of processor topology structures

Processor topology structures are described in the following sections.

### 5.2.29.1 Processor hierarchy node structure (Type 0)


The processor hierarchy node structure is described in [Table 5-154](#). This structure can be used to describe a single processor or a group. To describe topological relationships, each processor hierarchy node structure can point to a parent processor hierarchy node structure. This allows representing tree like topology structures. Multiple trees may be described, covering for example multiple packages. For the root of a tree, the parent pointer should be 0.

If PPTT is present, one instance of this structure must be present for every individual processor presented through the MADT interrupt controller structures. In addition, an individual entry must be present for every instance of a group of processors that shares a common resource described in the PPTT. Resources are described in other PPTT structures such as Type 1 cache structures. Each physical package in the system must also be represented by a processor node structure.

Each processor node includes a list of resources that are private to that node. Resources are described in other PPTT structures such as Type 1 cache structures. The processor node's private resource list includes a reference to each of the structures that represent private resources to a given processor node. For example, an SoC level processor node might contain two references, one pointing to a Level 3 cache resource and another pointing to an ID structure. For compactness, separate instances of an identical

resource can be represented with a single structure that is listed as a resource of multiple processor nodes.

For example, is expected that in the common case all processors will have identical L1 caches. For these platforms a single L1 cache structure could be listed by all processors:

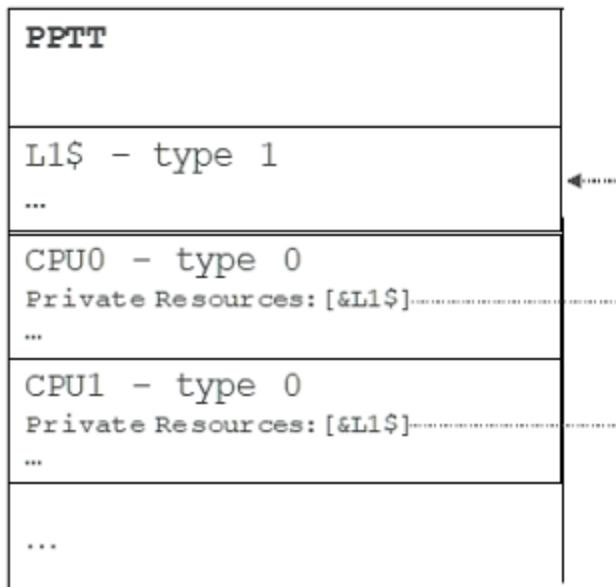

Note: though less space efficient, it is also acceptable to declare a node for each instance of a resource. In the example above, it would be legal to declare an L1 for each processor.

**Table 5-154 Processor Hierarchy Node Structure**

Field	Byte Length	Byte Offset	Description
Type	1	0	0 – processor structure
Length	1	1	Length of the local processor structure in bytes
Reserved	2	2	Must be zero
Flags	4	4	See <a href="#">Table 5-155</a>
Parent	4	8	Reference to parent processor hierarchy node structure. The reference is encoded as the difference between the start of the PPTT table and the start of the parent processor structure entry. A value of zero must be used where a node has no parent.
ACPI Processor ID	4	12	If the processor structure represents an actual processor, this field must match the value of ACPI processor ID field in the processor's entry in the MADT. If the processor structure represents a group of associated processors, the structure might match a processor container in the name space. In that case this entry will match the value of the _UID method of the associated processor container. Where there is a match it must be represented. The flags field, described in <a href="#">Table 5-155</a> includes a bit to describe whether the ACPI processor ID is valid.
Number of private resources	4	16	Number of resource structure references in Private Resources (below)
Private resources[N]	N*4	20	Each resource is a reference to another PPTT structure. The structure referred to must not be a processor hierarchy node. Each resource structure pointed to represents resources that are private to the processor hierarchy node. For example, for cache resources, the cache type structure represents caches that are private to the instance of processor topology represented by this processor hierarchy node structure. The references are encoded as the difference between the start of the PPTT table and the start of the resource structure entry.

Processor Structure Flags are described in [Table 5-155](#).

**Table 5-155 Processor Structure Flags**

Field	Bit Length	Bit Offset	Description
Physical package	1	0	<p>Set to 1 if this node of the processor topology represents the boundary of a physical package, whether socketed or surface mounted.</p> <p>Set to 0 if this instance of the processor topology does not represent the boundary of a physical package.</p> <p>Each valid processor must belong to exactly one package. That is, the leaf must itself be a physical package or have an ancestor marked as a physical package.</p>
ACPI Processor ID valid	1	1	<p>For non-leaf entries in the processor topology, the ACPI Processor ID entry can relate to a Processor container in the namespace. The processor container will have a matching ID value returned through the _UID method. As not every processor hierarchy node structure in PPTT may have a matching processor container, this flag indicates whether the ACPI processor ID points to valid entry. Where a valid entry is possible the ACPI Processor ID and _UID method are mandatory.</p> <p>For leaf entries in PPTT that represent processors listed in MADT, the ACPI Processor ID must always be provided and this flag must be set to 1.</p>
Processor is a Thread	1	2	<p>For leaf entries: must be set to 1 if the processing element representing this processor shares functional units with sibling nodes.</p> <p>For non-leaf entries: must be set to 0.</p>
Node is a Leaf	1	3	Must be set to 1 if node is a leaf in the processor hierarchy. Else must be set to 0.
Identical Implementation	1	4	<p>A value of 1 indicates that all children processors share an identical implementation revision.</p> <p>This field should be ignored on leaf nodes by the OSPM.</p> <p>Note: this implies an identical processor version and identical implementation reversion, not just a matching architecture revision.</p>
Reserved	27	5	Must be zero

Note: Threads sharing a core must be grouped under a unique Processor hierarchy node structure for each group of threads.

Note: processors may be marked as disabled in the MADT. In this case, the corresponding processor hierarchy node structures in PPTT should be considered as disabled. Additionally, all processor hierarchy node structures representing a group of processors with all child processors disabled should be considered as being disabled. All resources attached to disabled processor hierarchy node structures in PPTT should also be considered disabled.

### 5.2.29.2 Cache Type Structure - Type 1

The cache type structure is described in [Table 5-156](#). The cache type structure can be used to represent a set of caches that are private to a particular processor hierarchy node structure, that is, to a particular node in the processor topology tree. The set of caches is described as a NULL, or zero, terminated linked list. Only the head of the list needs to be listed as a resource by a processor node (and counted toward Number of Private Resources), as the cache node itself contains a link to the next level of cache.


Cache type structures are optional, and can be used to complement or replace cache discovery mechanisms provided by the processor architecture. For example, some processor architectures describe individual cache properties, but do not provide ways of discovering which processors share a particular cache. When cache structures are provided, all processor caches must be described in a cache type structure.

Each cache type structure includes a reference to the cache type structure that represents the next level cache. The level in this context must relate to the CPU architecture's definition of cache level. The list must include all caches that are private to a processor hierarchy node. It is not permissible to skip levels. That is, a cache node included in a given hierarchy processor node level must not point to a cache structure referred to by a processor node in a different level of the hierarchy.

For example, if a node represents a CPU that has a private L1 and private L2 cache, the list would contain both caches (L1->L2->0). If on the other hand the L2 cache was shared, the list would just include the L1 (L1->0), and a parent processor topology node, to all processors that share the L2, would contain the cache type structure that represents the shared L2.

Processors, or higher level nodes within the hierarchy, with separate instruction and data caches must describe the instruction and data caches with separate linked lists of cache type structures both listed as private resources of the relevant processor hierarchy node structure. If the separate instruction and data caches are unified at a higher level of cache then the linked lists should converge.

Consider the following example.

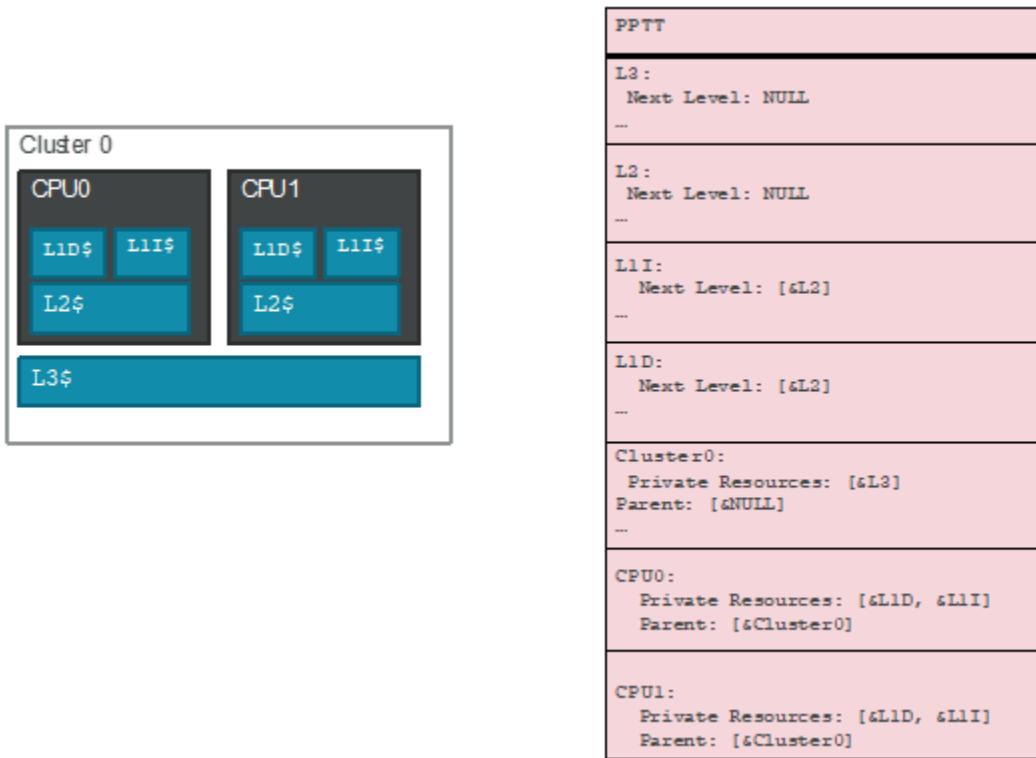

**Figure 5-26 Cache Type Structure - Type 1 Example**

In this example:

- Each processor has private L1 data, L1 instruction and L2 caches. The two processors are contained in a cluster which provides an L3 cache.
- Each processor's hierarchy node has two separate cache type structures as private resources for L1I and L1D
- Both the L1I and L1D cache structures point to the L2 cache structure as their next level of cache
- L2 cache type structure terminates the linked list of the CPU's caches. The resulting list denotes all private caches at the processor level
- Both processor nodes have their parent pointer pointing to node that represents the cluster.
- The cluster node includes the L3 cache as it's private resource. The L3 node in turn has no next level of cache.

An entry in the list indicates primarily that a cache exists at this node in the hierarchy. Where possible, cache properties should be discovered using processor architectural mechanisms, but the cache type structure may also provide the properties of the cache. A flag is provided to indicate whether properties provided in the table are valid, in which case the table content should be used in preference to processor architected discovery. On Arm-based systems, all cache properties must be provided in the table.

**Table 5-156 Cache Type Structure**

Field	Byte Length	Byte Offset	Description
Type	1	0	1 – Cache type structure
Length	1	1	24
Reserved	2	2	Must be zero
Flags	4	4	See <a href="#">Table 5-157</a>
Next Level of Cache	4	8	Reference to next level of cache that is private to the processor topology instance. The reference is encoded as the difference between the start of the PPTT table and the start of the cache type structure entry. This value will be zero if this entry represents the last cache level appropriate to the the processor hierarchy node structures using this entry.
Size	4	12	Size of the cache in bytes.
Number of sets	4	16	Number of sets in the cache
Associativity	1	20	Integer number of ways.
Attributes	1	21	Bits 1:0: Allocation type 0x0 - Read allocate 0x1 - Write allocate 0x2 or 0x3 indicate Read and Write allocate Bits:3:2: Cache type: 0x0 Data 0x1 Instruction 0x2 or 0x3 Indicate a unified cache Bits 4: Write policy: 0x0 Write back 0x1 Write through Bits:7:5 Reserved must be zero.
Line size	2	22	Line size in bytes

The cache type structure flags are described in [Table 5-157](#).

**Table 5-157 Cache Structure Flags**

Field	Bit Length	Bit Offset	Description
Size property valid	1	0	Set to 1 if the size properties described is valid. A value of 0 indicates that, where possible, processor architecture specific discovery mechanisms should be used to ascertain the value of this property.

Field	Bit Length	Bit Offset	Description
Number of sets valid	1	1	Set to 1 if the number of sets property described is valid. A value of 0 indicates that, where possible, processor architecture specific discovery mechanisms should be used to ascertain the value of this property.
Associativity valid	1	2	Set to 1 if the associativity property described is valid. A value of 0 indicates that, where possible, processor architecture specific discovery mechanisms should be used to ascertain the value of this property.
Allocation type valid	1	3	Set to 1 if the allocation type attribute described is valid. A value of 0 indicates that, where possible, processor architecture specific discovery mechanisms should be used to ascertain the value of this attribute.
Cache type valid	1	4	Set to 1 if the cache type attribute described is valid. A value of 0 indicates that, where possible, processor architecture specific discovery mechanisms should be used to ascertain the value of this attribute.
Write policy valid	1	5	Set to 1 if the write policy attribute described is valid. A value of 0 indicates that, where possible, processor architecture specific discovery mechanisms should be used to ascertain the value of this attribute.
Line size valid	1	6	Set to 1 if the line size property described is valid. A value of 0 indicates that, where possible, processor architecture specific discovery mechanisms should be used to ascertain the value of this property.
Reserved	25	7	Must be zero

### 5.2.29.3 ID structure – Type 2

The ID type structure is described in [Table 5-158](#). The ID structure can be used to provide an ID (or vendor specific part number) for a particular processor hierarchy node structure. The ID structure is optional, and may be used by software to determine special features and/or errata workarounds for that processor hierarchy node. This ID structure can also be used to identify all underlying hierarchy nodes and components, which may include identifying proprietary hardware components that are not explicitly described in this table.

This ID structure would typically be used to describe an ID of a physical package node, but may be optionally used at any node level.

Example: In the case where this ID structure is used to uniquely describe a physical package node, it could represent a single system-on-chip (SoC) on a single die and all nodes and components within that node (e.g. processors, caches, system buses and DMA engines, interrupt controllers, on-chip peripherals, etc.). The silicon vendor of this SoC has a known erratum with a particular hardware component in that SoC that could impact behavior and/or correctness. An operating system vendor may query this ID structure to first determine the silicon vendor, then later acquire the remaining ID fields to determine part

number, matching it against the part with a known erratum. The operating system may then remedy errata by either disabling relevant features or applying an appropriate software work around.

**Table 5-158 ID Type Structure**

Field	Byte Length	Byte Offset	Description
Type	1	0	2 – ID structure
Length	1	1	30
Reserved	2	2	Must be zero
VENDOR_ID	4	4	This identifies the node vendor using the vendor ACPI ID as described in the ACPI ID registry is available at <a href="http://www.uefi.org/acpi_id_list">http://www.uefi.org/acpi_id_list</a>
LEVEL_1_ID	8	8	Vendor specific value to identify first level unique node ID (e.g. chip family ID)
LEVEL_2_ID	8	16	Vendor specific value to identify second level unique node ID (e.g. chip ID)
MAJOR_REV	2	24	Vendor specific value to identify major revision of the node
MINOR_REV	2	26	Vendor specific value to identify minor revision of the node
SPIN_REV	2	28	Vendor specific value to identify spin revision of the node

## 5.3 ACPI Namespace

For all Definition Blocks, the system maintains a single hierarchical namespace that it uses to refer to objects. All Definition Blocks load into the same namespace. Although this allows one Definition Block to reference objects and data from another (thus enabling interaction), it also means that OEMs must take care to avoid any naming collisions<sup>2</sup>. A name collision in an attempt to load a Definition Block is considered fatal. The contents of the namespace changes only on a load operation.

The namespace is hierarchical in nature, with each name allowing a collection of names “below” it. The following naming conventions apply to all names:

- All names are a fixed 32 bits.
- The first byte of a name is inclusive of: ‘A’–‘Z’, ‘\_’, (0x41–0x5A, 0x5F).
- The remaining three bytes of a name are inclusive of: ‘A’–‘Z’, ‘0’–‘9’, ‘\_’, (0x41–0x5A, 0x30–0x39, 0x5F).
- By convention, when an ASL compiler pads a name shorter than 4 characters, it is done so with trailing underscores (‘\_’). See the language definition for AML NameSeg in the [ACPI Source Language \(ASL\) Reference](#) chapter.
- Names beginning with ‘\_’ are reserved by this specification. Definition Blocks can only use names beginning with ‘\_’ as defined by this specification.

2. For the most part, since the name space is hierarchical, typically the bulk of a dynamic definition file will load into a different part of the hierarchy. The root of the name space and certain locations where interaction is being designed are the areas in which extra care must be taken.

- A name proceeded with '\' causes the name to refer to the root of the namespace ('\ is not part of the 32-bit fixed-length name).
- A name proceeded with '^' causes the name to refer to the parent of the current namespace ('^' is not part of the 32-bit fixed-length name).

Except for names preceded with a '\', the current namespace determines where in the namespace hierarchy a name being created goes and where a name being referenced is found. A name is located by finding the matching name in the current namespace, and then in the parent namespace. If the parent namespace does not contain the name, the search continues recursively upwards until either the name is found or the namespace does not have a parent (the root of the namespace). This indicates that the name is not found<sup>3</sup>.

An attempt to access names in the parent of the root will result in the name not being found.

There are two types of namespace paths: an absolute namespace path (that is, one that starts with a '\' prefix), and a relative namespace path (that is, one that is relative to the current namespace). The namespace search rules discussed above, only apply to single NameSeg paths, which is a relative namespace path. For those relative name paths that contain multiple NameSegs or Parent Prefixes, '^', the search rules do not apply. If the search rules do not apply to a relative namespace path, the namespace object is looked up relative to the current namespace. For example:

```
ABCD      //search rules apply
^ABCD     //search rules do not apply
XYZ. ABCD //search rules do not apply
\XYZ. ABCD //search rules do not apply
```

All name references use a 32-bit fixed-length name or use a Name Extension prefix to concatenate multiple 32-bit fixed-length name components together. This is useful for referring to the name of an object, such as a control method, that is not in the scope of the current namespace.

Namepaths are used primarily for two purposes:

- To reference an existing object. In this case, all NameSegs within the Namepath must already exist.
- To create a new object. For example:

```
Device (XYZ. ABCD) {...}
OperationRegistration (\XYZ. ABCD, SystemMemory, 0, 0x200)
```

Each of these declarations is intended to create a new object with the name **ABCD** according the following rules:


- Object **XYZ** must already exist for the **ABCD** object to be created
- If **XYZ** does not exist, that will cause a fatal error

In general, it is only the final Nameseg that will be used as the name of the new object. If any other Nameseg along the Namepath does not exist, it is a fatal error. In this sense, the Namepath is similar to a file pathname in a filesystem consisting of some number of existing directories followed by a final filename.

---

3. Unless the operation being performed is explicitly prepared for failure in name resolution, this is considered an error and may cause the system to stop working.

The figure below shows a sample of the ACPI namespace after a Differentiated Definition Block has been loaded.

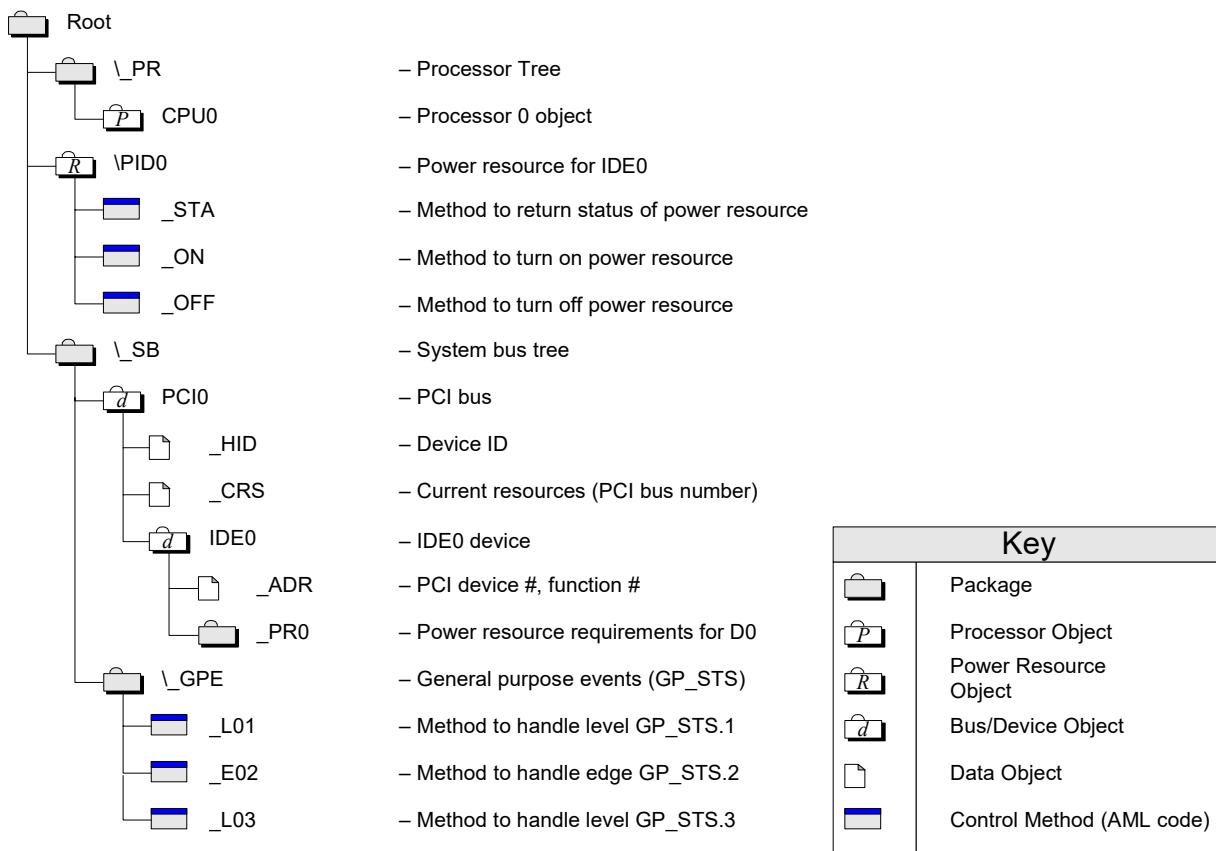

**Figure 5-27 Example ACPI NameSpace**

Care must be taken when accessing namespace objects using a relative single segment name because of the namespace search rules. An attempt to access a relative object recurses toward the root until the object is found or the root is encountered. This can cause unintentional results. For example, using the namespace described in Figure 5.5, attempting to access a **\_CRS** named object from within the **\\_SB\_.PCI0.IDE0** will have different results depending on if an absolute or relative path name is used. If an absolute pathname is specified (**\\_SB\_.PCI0.IDE0.\_CRS**) an error will result since the object does not exist. Access using a single segment name (**\_CRS**) will actually access the **\\_SB\_.PCI0.\_CRS** object. Notice that the access will occur successfully with no errors.

### 5.3.1 Predefined Root Namespaces

The following namespaces are defined under the namespace root.

**Table 5-159 Namespaces Defined Under the Namespace Root**

Name	Description
\_GPE	General events in GPE register block.
\_PR	ACPI 1.0 Processor Namespace. ACPI 1.0 requires all Processor objects to be defined under this namespace. ACPI 2.0 and later allow Processor object definitions under the \_SB namespace. Platforms may maintain the \_PR namespace for compatibility with ACPI 1.0 operating systems, but it is otherwise deprecated. see the compatibility note in <a href="#">Section 5.2.12.12</a> . An ACPI-compatible namespace may define Processor objects in either the \_SB or \_PR scope but not both. For more information about defining Processor objects, see <a href="#">Section 8</a> , “Processor Configuration and Control.”
\_SB	All Device/Bus Objects are defined under this namespace.
\_SI	System indicator objects are defined under this namespace. For more information about defining system indicators, see <a href="#">Section 9.2</a> , \_SI System Indicators.”
\_TZ	ACPI 1.0 Thermal Zone namespace. ACPI 1.0 requires all Thermal Zone objects to be defined under this namespace. Thermal Zone object definitions may now be defined under the \_SB namespace. ACPI-compatible systems may maintain the \_TZ namespace for compatibility with ACPI 1.0 operating systems. An ACPI-compatible namespace may define Thermal Zone objects in either the \_SB or \_TZ scope but not both. For more information about defining Thermal Zone objects, see <a href="#">Section 11</a> , “Thermal Management.”

### 5.3.2 Objects

All objects, except locals, have a global scope. Local data objects have a per-invocation scope and lifetime and are used to process the current invocation from beginning to end.

The contents of objects vary greatly. Nevertheless, most objects refer to data variables of any supported data type, a control method, or system software-provided functions.

Objects may contain a revision field. Successive ACPI specifications define object revisions so that they are backwards compatible with OSPM implementations that support previous specifications / object revisions. New object fields are added at the end of previous object definitions. OSPM interprets objects according to the revision number it supports including all earlier revisions. As such, OSPM expects that an object's length can be greater than or equal to the length of the known object revision. When evaluating objects with revision numbers greater than that known by OSPM, OSPM ignores internal object fields values that are beyond the defined object field range for the known revision.

## 5.4 Definition Block Encoding


This section specifies the encoding used in a Definition Block to define names (load time only), objects, and packages.

### 5.4.1 AML Encoding

The Definition Block is encoded as a stream from beginning to end. The lead byte in the stream comes from the AML encoding tables shown in [Section 19](#), “ACPI Source Language (ASL) Reference,” and signifies how to interpret some number of following bytes, where each following byte can in turn signify how to interpret some number of following bytes. For a full specification of the AML encoding, see [Section 19](#), “ACPI Source Language (ASL) Reference.”

Within the stream there are two levels of data being defined. One is the packaging and object declarations (load time), and the other is an object reference (package contents/run-time).

All encodings are such that the lead byte of an encoding signifies the type of declaration or reference being made. The type either has an implicit or explicit length in the stream. All explicit length declarations take the form shown below, where *PkgLength* is the length of the inclusive length of the data for the operation.



**Figure 5-28 AML Encoding**

Encodings of implicit length objects either have fixed length encodings or allow for nested encodings that, at some point, either result in an explicit or implicit fixed length.

The *PkgLength* is encoded as a series of 1 to 4 bytes in the stream with the most significant two bits of byte zero, indicating how many following bytes are in the *PkgLength* encoding. The next two bits are only used in one-byte encodings, which allows for one-byte encodings on a length up to 0x3F. Longer encodings, which do not use these two bits, have a maximum length of the following: two-byte encodings of 0xFFFF, three-byte encodings of 0xFFFFF, and four-byte length encodings of 0xFFFFFFFF.

It is fatal for a package length to not fall on a logical boundary. For example, if a package is contained in another package, then by definition its length must be contained within the outer package, and similarly for a datum of implicit length.

### 5.4.2 Definition Block Loading

At some point, the system software decides to “load” a Definition Block. Loading is accomplished when the system makes a pass over the data and populates the ACPI namespace and initializes objects accordingly. The namespace for which population occurs is either from the *current namespace location*, as defined by all nested packages or from the root if the name is preceded with ‘\’.

The first object present in a Definition Block must be a named control method. This is the Definition Block’s initialization control.

Packages are objects that contain an ordered reference to one or more objects. A package can also be considered a vertex of an array, and any object contained within a package can be another package. This permits multidimensional arrays of fixed or dynamic depths and vertices.

Unnamed objects are used to populate the contents of named objects. Unnamed objects cannot be created in the “root.” Unnamed objects can be used as arguments in control methods.

Control method execution may generate errors when creating objects. This can occur if a Method that creates named objects blocks and is reentered while blocked. This will happen because all named objects have an absolute path. This is true even if the object name specified is relative. For example, the following ASL code segments are functionally identical.

(1)

```
Method (DEAD, ) {
    Scope (\_SB_.FOO) {
        Name (BAR, ) // Run time definition
    }
}
```

(2)

```
Scope (\_SB_) {
    Name (\_SB_. FOO.BAR, ) // Load time definition
}
```

Notice that in the above example the execution of the DEAD method will always fail because the object \\_SB\_.FOO.BAR is created at load time.

The term of "Definition Block level" is used to refer to the AML byte streams that are not contained in any control method. Such AML byte streams can appear in the "root" scope or in the scopes created/opened by the "Device, PowerResource, Processor, Scope and ThermalZone" operators. Please refer to "[Section 19.6, ASL Operator Reference](#)" for detailed descriptions.

Not only the named objects, but all term objects (mathematical, logical, and conditional expressions, etc., see "[Section 20.2.5, Term Object Encoding](#)") are allowed at the Definition Block level. Allowing such executable AML opcodes at the Definition Block level allows BIOS writers to define dynamic object lists according to the system settings. For example:

```
DefinitionBlock ("DSDT.aml", "DSDT", 2, "OEM", "FOOBOOK", 0x1000)
{
    ...
    If (LEqual (CFG1 (), 1))
    {
        ...
        Scope (_SB.PCI0.XHC.RHUB)
        {
            ...
            If (LEqual (CFG2 (), 1))
            {
                ...
                Device (HS11)
                {
                    ...
                    If (LEqual (CFG3 (), 1))
                    {
                        ...
                        Device (CAM0)
                        {
                            ...
                            ...
                        }
                        ...
                    }
                }
            }
        }
    }
}
```

The interpretation of the definition block during the definition block loading is similar to the interpretation of the control method during the control method execution.

## 5.5 Control Methods and the ACPI Source Language (ASL)

OEMs and platform firmware vendors write definition blocks using the ACPI Source Language (ASL) and use a translator to produce the byte stream encoding described in [Section 5.4](#), “Definition Block Encoding”. For example, the ASL statements that produce the example byte stream shown in that earlier section are shown in the following ASL example. For a full specification of the ASL statements, see [Section 19](#), “ACPI Source Language (ASL) Reference.”

```

// ASL Example
DefineBlock(
    "forbook.aml",           // Output Filename
    "DSDT",                  // Signature
    0x02,                    // DSDT Compliance Revision
    "OEM",                   // OEMID
    "forbook",                // TABLE ID
    0x1000                   // OEM Revision
)
{
    // start of definition block
    OperationReg(\GIO, SystemIO, 0x125, 0x1)
    Field(\GIO, ByteAcc, NoLock, Preserve) {
        CT01, 1,
    }

    Scope(\_SB)                      // start of scope
    Device(PCI0) {                   // start of device
        PowerResource(FET0, 0, 0) {  // start of pwr
            Method (_ON) {
                Store (Ones, CT01)   // assert power
                Sleep (30)          // wait 30ms
            }
            Method (_OFF) {
                Store (Zero, CT01) // assert reset#
            }
            Method (_STA) {
                Return (CT01)
            }
        }
        // end of power
    } // end of device
} // end of scope
} // end of definition block

```

## 5.5.1 ASL Statements

ASL is principally a declarative language. ASL statements declare objects. Each object has three parts, two of which can be null:

```
Object := ObjectType FixedList VariableList
```

*FixedList* refers to a list of known length that supplies data that all instances of a given *ObjectType* must have. It is written as (a, b, c,), where the number of arguments depends on the specific *ObjectType*, and some elements can be nested objects, that is (a, b, (q, r, s, t), d). Arguments to a *FixedList* can have default values, in which case they can be skipped. Some *ObjectTypes* can have a null *FixedList*.

*VariableList* refers to a list, not of predetermined length, of child objects that help define the parent. It is written as {x, y, z, aa, bb, cc}, where any argument can be a nested object. *ObjectType* determines what terms are legal elements of the *VariableList*. Some *ObjectTypes* can have a null variable list.

For a detailed specification of the ASL language, see [Section 19](#), “ACPI Source Language (ASL) Reference.” For a detailed specification of the ACPI Control Method Machine Language (AML), upon which the output of the ASL translator is based, see [Section 20](#), “ACPI Machine Language (AML) Specification.”

## 5.5.2 Control Method Execution

OSPM evaluates control method objects as necessary to either interrogate or adjust the system-level hardware state. This is called an invocation.

A control method can use other internal, or well defined, control methods to accomplish the task at hand, which can include defined control methods provided by the operating software. Control Methods can reference any objects anywhere in the Namespace. Interpretation of a Control Method is not preemptive, but it can block. When a control method does block, OSPM can initiate or continue the execution of a different control method. A control method can only assume that access to global objects is exclusive for any period the control method does not block.

Global objects are those NameSpace objects created at table load time.

### 5.5.2.1 Arguments

Up to seven arguments can be passed to a control method. Each argument is an object that in turn could be a “package” style object that refers to other objects. Access to the argument objects is provided via the ASL **ArgTerm** (*ArgX*) language elements. The number of arguments passed to any control method is fixed and is defined when the control method package is created.

Method arguments can take one of the following forms:

- An ACPI name or namepath that refers to a named object. This includes the LocalX and ArgX names. In this case, the object associated with the name is passed as the argument.
- An ACPI name or namepath that refers to another control method. In this case, the method is invoked and the return value of the method is passed as the argument. A fatal error occurs if no object is returned from the method. If the object is not used after the method invocation it is automatically deleted.

- A valid ASL expression. In the case, the expression is evaluated and the object that results from this evaluation is passed as the argument. If this object is not used after the method invocation it is automatically deleted.

### 5.5.2.2 Method Calling Convention

The calling convention for control methods can best be described as *call-by-reference-constant*. In this convention, objects passed as arguments are passed by “reference”, meaning that they are not copied to new objects as they are passed to the called control method (A calling convention that copies objects or object *wrappers* during a call is known as *call-by-value* or *call-by-copy*).

This *call-by-reference-constant* convention allows internal objects to be shared across each method invocation, therefore reducing the number of object copies that must be performed as well as the number of buffers that must be copied. This calling convention is appropriate to the low-level nature of the ACPI subsystem within the kernel of the host operating system where non-paged dynamic memory is typically at a premium. The ASL programmer must be aware of the calling convention and the related side effects.

However, unlike a pure *call-by-reference* convention, the ability of the called control method to modify arguments is extremely limited. This reduces aliasing issues such as when a called method unexpectedly modifies a object or variable that has been passed as an argument by the caller. In effect, the arguments that are passed to control methods are passed as constants that cannot be modified except under specific controlled circumstances.

Generally, the objects passed to a control method via the ArgX terms cannot be directly written or modified by the called method. In other words, when an ArgX term is used as a target operand in an ASL statement, the existing ArgX object is not modified. Instead, the new object replaces the existing object and the ArgX term effectively becomes a LocalX term.

The only exception to the read-only argument rule is if an ArgX term contains an Object Reference created via the *RefOf* ASL operator. In this case, the use of the ArgX term as a target operand will cause any existing object stored at the ACPI name referred to by the *RefOf* operation to be overwritten.

In some limited cases, a new, writable object may be created that will allow a control method to change the value of an ArgX object. These cases are limited to Buffer and Package objects where the “value” of the object is represented indirectly. For Buffers, a writable Index or Field can be created that refers to the original buffer data and will allow the called method to read or modify the data. For Packages, a writable Index can be created to allow the called method to modify the contents of individual elements of the Package.

### 5.5.2.3 Local Variables and Locally Created Data Objects

Control methods can access up to eight local data objects. Access to the local data objects have shorthand encodings. On initial control method execution, the local data objects are NULL. Access to local objects is via the ASL LocalTerm language elements.

Upon control method execution completion, one object can be returned that can be used as the result of the execution of the method. The “caller” must either use the result or save it to a different object if it wants to preserve it. See the description of the Return ASL operator for additional details

NameSpace objects created within the scope of a method are dynamic. They exist only for the duration of the method execution. They are created when specified by the code and are destroyed on exit. A method

may create dynamic objects outside of the current scope in the NameSpace using the scope operator or using full path names. These objects will still be destroyed on method exit. Objects created at load time outside of the scope of the method are static. For example:

```
Scope (\XYZ) {
    Name (BAR, 5)           // Creates \XYZ.BAR
    Method (FOO, 1) {
        Store (BAR, CREG)   // same effect as Store (\XYZ.BAR, CREG)
        Name (BAR, 7)         // Creates \XYZ.FOO.BAR
        Store (BAR, DREG)   // same effect as Store (\XYZ.FOO.BAR, DREG
        Name (\XYZ.FOOB, 3) // Creates \XYZ.FOOB
    } // end method
} // end scope
```

The object \XYZ.BAR is a static object created when the table that contains the above ASL is loaded. The object \XYZ.FOO.BAR is a dynamic object that is created when the Name (BAR, 7) statement in the FOO method is executed. The object \XYZ.FOOB is a dynamic object created by the \XYZ.FOO method when the Name (\XYZ.FOOB, 3) statement is executed. Notice that the \XYZ.FOOB object is destroyed after the \XYZ.FOO method exits.

## 5.5.2.4 Access to Operation Regions

### 5.5.2.4.1 Operation Regions

Control Methods read and write data to locations in address spaces (for example, System memory and System I/O) by using the Field operator (see [Section 19.6.46 Field \(Declare Field Objects\)](#)) to declare a data element within an entity known as an “Operation Region” and then performing accesses using the data element name. An Operation Region is a specific region of operation within an address space that is declared as a subset of the entire address space using a starting address (offset) and a length (see [Section 19.6.98 “OperationRegion \(Declare Operation Region\)](#)). Control methods must have exclusive access to any address accessed via fields declared in Operation Regions. Control methods may not directly access any other hardware registers, including the ACPI-defined register blocks. Some of the ACPI registers, in the defined ACPI registers blocks, are maintained on behalf of control method execution. For example, the GPEx\_BLK is not directly accessed by a control method but is used to provide an extensible interrupt handling model for control method invocation.

**Note:** *Accessing an OpRegion may block, even if the OpRegion is not protected by a mutex. For example, because of the slow nature of the embedded controller, an embedded controller OpRegion field access may block.*

[Table 5-160](#) defines Operation Region spaces.

**Table 5-160 Operation Region Address Space Identifiers**

Value	Name ( <i>RegionSpace</i> Keyword)	
0	SystemMemory	
1	SystemIO	
2	PCI_Config	
3	EmbeddedControl	<a href="#">Section 12</a>
4	SMBus	<a href="#">Section 13</a>
5	SystemCMOS	<a href="#">Section 5.5.2.4.2</a>
6	PciBarTarget	<a href="#">Section 5.5.2.4.3</a>
7	IPMI	<a href="#">Section 5.5.2.4.4</a>
8	GeneralPurposeIO	<a href="#">Section 5.5.2.4.5</a>
9	GenericSerialBus	<a href="#">Section 5.5.2.4.6</a>
0x0A	PCC	<a href="#">Section 5.5.2.4.7</a>
0x0B-0x7F	<i>Reserved</i>	
0x80 to 0xFF	OEM defined	

### 5.5.2.4.2 CMOS Protocols

This section describes how CMOS battery-backed non-volatile memory can be accessed from ASL. Most computers contain an RTC/CMOS device that can be represented as a linear array of bytes of non-volatile memory. There is a standard mechanism for accessing the first 64 bytes of non-volatile RAM in devices that are compatible with the Motorola RTC/CMOS device used in the original IBM PC/AT. Existing RTC/CMOS devices typically contain more than 64 bytes of non-volatile RAM, and no standard mechanism exists for access to this additional storage area. To provide access to all of the non-volatile memory in these devices from AML, PnP IDs exist for each type of extension. These are PNP0B00, PNP0B01, and PNP0B02. The specific devices that these PnP IDs support are described in [Section 9.15](#), “PC/AT RTC/CMOS Device”, along with field definition ASL example code. The drivers corresponding to these device handle operation region accesses to the SystemCMOS operation region for their respective device types.

All bytes of CMOS that are related to the current time, day, date, month, year and century are read-only.

### 5.5.2.4.3 PCI Device BAR Target Protocols

This section describes how PCI devices' control registers can be accessed from ASL. PCI devices each have an address space associated with them called the Configuration Space. At offset 0x10 through offset 0x27, there are as many as six Base Address Registers, (BARs). These BARs contain the base address of a series of control registers (in I/O or Memory space) for the PCI device. Since a Plug and Play OS may change the values of these BARs at any time, ASL cannot read and write from these deterministically using I/O or Memory operation regions. Furthermore, a Plug and Play OS will automatically assign ownership of the I/O and Memory regions associated with these BARs to a device driver associated with the PCI device. An ACPI OS (which must also be a Plug and Play operating system) will not allow ASL to read and write regions that are owned by native device drivers.

If a platform uses a PCI BAR Target operation region, an ACPI OS will not load a native device driver for the associated PCI function. For example, if any of the BARs in a PCI function are associated with a PCI BAR Target operation region, then the OS will assume that the PCI function is to be entirely under the control of the ACPI system firmware. No driver will be loaded. Thus, a PCI function can be used as a platform controller for some task (hot-plug PCI, and so on) that the ACPI system firmware performs.

#### 5.5.2.4.3.1 Declaring a PCI BAR Target Operation Region

PCI BARs contain the base address of an I/O or Memory region that a PCI device's control registers lie within. Each BAR implements a protocol for determining whether those control registers are within I/O or Memory space and how much address space the PCI device decodes. (See the PCI Specification for more details.)

PCI BAR Target operation regions are declared by providing the offset of the BAR within the PCI device's PCI configuration space. The BAR determines whether the actual access to the device occurs through an I/O or Memory cycle, not by the declaration of the operation region. The length of the region is similarly implied.

In the term `OperationRegion(PBAR, PciBarTarget, 0x10, 0x4)`, the offset is the offset of the BAR within the configuration space of the device. This would be an example of an operation region that uses the first BAR in the device.

#### 5.5.2.4.3.2 PCI Header Types and PCI BAR Target Operation Regions

PCI BAR Target operation regions may only be declared in the scope of PCI devices that have a PCI Header Type of 0. PCI devices with other header types are bridges. The control of PCI bridges is beyond the scope of ASL.

#### 5.5.2.4.4 Declaring IPMI Operation Regions

This section describes the Intelligent Platform Management Interface (IPMI) address space and the use of this address space to communicate with the Baseboard Management Controller (BMC) hardware from AML.

Similar to SMBus, IPMI operation regions are command based, where each offset within an IPMI address space represent an IPMI command and response pair. Given this uniqueness, IPMI operation regions include restrictions on their field definitions and require the use of an IPMI-specific data buffer for all transactions. The IPMI interface presented in this section is intended for use with any hardware implementation compatible with the IPMI specification, regardless of the system interface type.

Support of the IPMI generic address space by ACPI-compatible operating systems is optional, and is contingent on the existence of an ACPI IPMI device, i.e. a device with the "IPI0001" plug and play ID. If present, OSPM should load the necessary driver software based on the system interface type as specified by the `_IFT` (IPMI Interface Type) control method under the device, and register handlers for accesses into the IPMI operation region space.

For more information, refer to the IPMI specification.

Each IPMI operation region definition identifies a single IPMI network function. Operation regions are defined only for those IPMI network functions that need to be accessed from AML. As with other regions, IPMI operation regions are only accessible via the **Field** term (see [Section 5.5.2.4.4.1](#), "Declaring IPMI Fields").

This interface models each IPMI network function as having a 256-byte linear address range. Each byte offset within this range corresponds to a single command value (for example, byte offset 0xC1 equates to command value 0xC1), with a maximum of 256 command values. By doing this, IPMI address spaces appear linear and can be processed in a manner similar to the other address space types.

The syntax for the **OperationRegion** term (from [Section 19.6.98](#), “OperationRegion (Declare Operation Region]”) is described below.

```
OperationRegion (
    RegionName,           // NameString
    RegionSpace,          // RegionSpaceKeyword
    Offset,               // TermArg=>Integer
    Length                // TermArg=>Integer
)
```

Where:

- *RegionName* specifies a name for this IPMI network function (for example, “POWR”).
- *RegionSpace* must be set to **IPMI** (operation region type value 0x07).
- *Offset* is a word-sized value specifying the network function and initial command value offset for the target device. The network function address is stored in the high byte and the command value offset is stored in the low byte. For example, the value 0x3000 would be used for a device with the network function of 0x06, and an initial command value offset of zero (0).
- *Length* is set to the 0x100 (256), representing the maximum number of possible command values, for regions with an initial command value offset of zero (0). The difference of these two values is used for regions with non-zero offsets. For example, a region with an *Offset* value of 0x3010 would have a corresponding *Length* of 0xF0 (0x100 minus 0x10).

For example, a Baseboard Management Controller will support power metering capabilities at the network function 0x30, and IPMI commands to query the BMC device information at the network function 0x06.

The following ASL code shows the use of the **OperationRegion** term to describe these IPMI functions:

```
Device (IPMI)
{
    Name(_HID, "IPMI 0001")                                // IPMI device
    Name(_IFT, 0x1)                                         // KCS system interface type
    OperationRegion(DEVC, IPMI, 0x0600, 0x100)             // Device info network function
    OperationRegion(POWR, IPMI, 0x3000, 0x100)             // Power network function
    :
}
```

Notice that these operation regions in this example are defined within the immediate context of the ‘owning’ IPMI device. This ensures the correct operation region handler will be used, based on the value returned by the *\_IFT* object. Each definition corresponds to a separate network function, and happens to use an initial command value offset of zero (0).

#### 5.5.2.4.4.1 Declaring IPMI Fields

As with other regions, IPMI operation regions are only accessible via the **Field** term. Each field element is assigned a unique command value and represents a virtual command for the targeted network function.

The syntax for the **Field** term (from [Section 19.6.40](#), “Event (Declare Event Synchronization Object]”) is described below.

```
Field(  
    RegionName,      // NameString=>OperationRegion  
    AccessType,      // AccessTypeKeyword - BufferAcc  
    LockRule,        // LockRuleKeyword  
    UpdateRule       // UpdateRuleKeyword - ignored  
) {FieldUnitList}
```

Where:

- *RegionName* specifies the operation region name previously defined for the network function.
- *AccessType* must be set to **BufferAcc**. This indicates that access to field elements will be done using a region-specific data buffer. For this access type, the field handler is not aware of the data buffer’s contents which may be of any size. When a field of this type is used as the source argument in an operation it simply evaluates to a buffer. When used as the destination, however, the buffer is passed bi-directionally to allow data to be returned from write operations. The modified buffer then becomes the response message of that command. This is slightly different than the normal case in which the execution result is the same as the value written to the destination. Note that the source is never changed, since it only represents a virtual register for a particular IPMI command.
- *LockRule* indicates if access to this operation region requires acquisition of the Global Lock for synchronization. This field should be set to **Lock** on system with firmware that may access the BMC via IPMI, and **NoLock** otherwise.
- *UpdateRule* is not applicable to IPMI operation regions since each virtual register is accessed in its entirety. This field is ignored for all IPMI field definitions.

IPMI operation regions require that all field elements be declared at command value granularity. This means that each virtual register cannot be broken down to its individual bits within the field definition.

Access to sub-portions of virtual registers can be done only outside of the field definition. This limitation is imposed both to simplify the IPMI interface and to maintain consistency with the physical model defined by the IPMI specification.

Since the system interface used for IPMI communication is determined by the `_IFT` object under the IPMI device, there is no need for using of the `AccessAs` term within the field definition. In fact its usage will be ignored by the operation handler.

For example, the register at command value `0xC1` for the power meter network function might represent the command to set a BMC enforced power limit, while the register at command value `0xC2` for the same network function might represent the current configured power limit. At the same time, the register at command value `0xC8` might represent the latest power meter measurement.

The following ASL code shows the use of the OperationRegion, Field, and Offset terms to represent these virtual registers:

```
OperationRegion(POWR, IPMI, 0x3000, 0x100) // Power network function
Field(POWR, BufferAcc, NoLock, Preserve)
{
    Offset(0xC1), // Skip to command value 0xC1
    SPWL, 8, // Set power limit [command value 0xC1]
    GPWL, 8, // Get power limit [command value 0xC2]
    Offset(0xC8), // Skip to command value 0xC8
    GPMM, 8 // Get power meter measurement [command
value 0xC8]
}
```

Notice that command values are equivalent to the field element's byte offset (for example, SPWL=0xC1, GPWL=0xC2, GPMM=0xC8).

#### 5.5.2.4.4.2 Declaring and Using IPMI Request and Response Buffer

Since each virtual register in the IPMI operation region represents an individual IPMI command, and the operation relies on use of bi-directional buffer, a common buffer structure is required to represent the request and response messages. The use of a data buffer for IPMI transactions allows AML to receive status and data length values.

The IPMI data buffer is defined as a fixed-length 66-byte buffer that, if represented using a 'C'-styled declaration, would be modeled as follows:

```
typedef struct
{
    BYTEStatus; // Byte 0 of the data buffer
    BYTELength; // Byte 1 of the data buffer
    BYTE[64]Data; // Bytes 2 through 65 of the data buffer
}
```

Where:

- *Status* (byte 0) indicates the status code of a given IPMI command. See [Section 5.5.2.4.4.3, "IPMI Status Code,"](#) for more information.
- *Length* (byte 1) specifies the number of bytes of valid data that exists in the data buffer. Valid *Length* values are 0 through 64. Before the operation is carried out, this value represents the length of the request data buffer. Afterwards, this value represents the length of the result response data buffer.
- *Data* (bytes 2-65) represents a 64-byte buffer, and is the location where actual data is stored. Before the operation is carried out, this represents the actual request message payload. Afterwards, this represents the response message payload as returned by the IPMI command.

For example, the following ASL shows the use of the IPMI data buffer to carry out a command for a power function. This code is based on the example ASL presented in [Section 5.5.2.4.4.1, "Declaring IPMI Fields,"](#) which lists the operation region and field definitions for relevant IPMI power metering commands.

```

/* Create the IPMI data buffer */

Name(BUFF, Buffer(66){})
CreateByteField(BUFF, 0x00, STAT)
CreateByteField(BUFF, 0x01, LENG)
CreateByteField(BUFF, 0x02, MODE)
CreateByteField(BUFF, 0x03, RESV)                                // Create IPMI data buffer as BUFF
                                                               // STAT = Status (Byte)
                                                               // LENG = Length (Byte)
                                                               // MODE = Mode      (Byte)
                                                               // RESV = Reserved (Byte)

Store(0x2, LENG)                                              // Request message is 2 bytes long
Store(0x1, MODE)                                               // Set Mode to 1

Store(Store(BUFF, GPMM), BUFF)                                 // Write the request into the GPMM
command,                                                       // then read the results

CreateByteField(BUFF, 0x02, CMPC)
CreateWordField(BUFF, 0x03, APOW)                               // CMPC = Completion code (Byte)
                                                               // APOW = Average power measurement
(Word)

If(LAnd(LEqual(STAT, 0x0), LEqual(CMPC, 0x0)))    // Successful ?
{
    Return(APOW)                                            // Return the average power measurement
}
Else
{
    Return(Ones)                                             // Return invalid
}

```

Notice the use of the **CreateField** primitives to access the data buffer's sub-elements (*Status*, *Length*, and *Data*), where *Data* (bytes 65-2) is 'typecast' into different fields (including the result completion code).

The example above demonstrates the use of the `Store()` operator and the bi-directional data buffer to invoke the actual IPMI command represented by the virtual register. The inner `Store()` writes the request message data buffer to the IPMI operation region handler, and invokes the command. The outer `Store()` takes the result of that command and writes it back into the data buffer, this time representing the response message.

#### 5.5.2.4.4.3 IPMI Status Code

Every IPMI command results in a status code returned as the first byte of the response message, contained in the bi-directional data buffer. This status code can indicate success, various errors, and possibly timeout from the IPMI operation handler. This is necessary because it is possible for certain IPMI commands to take up to 5 seconds to carry out, and since an AML `Store()` operation is synchronous by nature, it is essential to make sure the IPMI operation returns in a timely fashion so as not to block the AML interpreter in the OSPM.

**Note:** This status code is different than the IPMI completion code, which is returned as the first byte of the response message in the data buffer payload. The completion code is described in the complete IPMI specification.

**Table 5-161 IPMI Status Codes**

Status Code	Name	Description
00h	IPMI OK	Indicates the command has been successfully completed.
07h	IPMI Unknown Failure	Indicates failure because of an unknown IPMI error.
10h	IPMI Command Operation Timeout	Indicates the operation timed out.

### 5.5.2.4.5 Declaring GeneralPurposeIO Operation Regions

For GeneralPurposeIO Operation Regions, the syntax for the **OperationRegion** term (from section [Section 19.6.98, “OperationRegion \(Declare Operation Region\)“](#)) is described below.

```
OperationRegion (
    RegionName,          // NameString
    RegionSpace,         // RegionSpaceKeyword
    Offset,              // TermArg=>Integer
    Length               // TermArg=>Integer
)
```

Where:

- *RegionName* specifies a name for this GeneralPurposeIO region (for example, “GPI1”).
- *RegionSpace* must be set to **GeneralPurposeIO** (operation region type value 0x08).
- *Offset* is ignored for the GeneralPurposeIO RegionSpace.
- *Length* is the maximum number of GPIO IO pins to be included in the Operation Region, rounded up to the next byte.

GeneralPurposeIO OpRegions must be declared within the scope of the GPIO controller device being accessed.

#### 5.5.2.4.5.1 Declaring GeneralPurposeIO Fields

As with other regions, GeneralPurposeIO operation regions are only accessible via the Field term. Each field element represents a subset of the *length* bits declared in the OpRegion declaration. The pins within the OpRegion that are accessed via a given field name are defined by a Connection descriptor. The total number of defined field bits following a connection descriptor must equal the number of pins listed in the descriptor.

The syntax for the **Field** term (from [Section 19.6.46](#)) is described below.

```
Field(
    RegionName,      // NameString=>OperationRegion
    AccessType,      //AccessTypeKeyword
    LockRule,        // LockRuleKeyword
    UpdateRule      // UpdateRuleKeyword – ignored
) {FieldUnitList}
```

Where:

- *RegionName* specifies the operation region name previously declared.
- *AccessType* must be set to **ByteAcc**.
- *LockRule* indicates if access to this operation region requires acquisition of the Global Lock for synchronization. Note that, on HW-reduced ACPI platforms, this field must be set to **NoLock**.
- *UpdateRule* is not applicable to GeneralPurposeIO operation regions since **Preserve** is always required. This field is ignored for all GeneralPurposeIO field definitions.

The following ASL code shows the use of the OperationRegion, Field, and Offset terms as they apply to GeneralPurposeIO space.

```
Device(DEVA) //An Arbitrary Device Scope
{
    ...//Other required stuff for this device
    Name(GMOD, ResourceTemplate()) //An existing GPIO Connection (to be used later)
    {
        // Outputs that define the Power mode of the device
        GpioIo(Exclusive, PullDown, , , , "\\_SB.GPI2") {10, 12}
    }
} //End DEVA

Device (GPI2) //The OpRegion declaration, and the _REG method, must be in the
controller's namespace scope
{
    ...//Other required stuff for the GPIO controller
    OperationRegion(GP02, GeneralPurposeIO, 0, 1) // Note: length of 1 means region is
                                                    // less than 1 byte (8 pins) long
    (or
        Method(_REG, 2) {} // Track availability of GeneralPurposeIO space
    ) //End GPI2

    Device (DEVB) //Access some GPIO Pins from this device scope
                    //to change the device's power mode
    {
        ...//Other required stuff for this device
        Name(_DEP, Package() {"\\_SB.GPI2"}) //OpRegion Dependency hint for OSPM
        Field(\_SB.GPI2.GP02, ByteAcc, NoLock, Preserve)
        {
            Connection(GMOD),           // Re-Use an existing connection (defined elsewhere)
            MODE, 2,                   // Power Mode
            Connection(GpioIo(Exclusive, PullUp, , , , "\\_SB.GPI2") {7}),
        }
    }
}
```

```

STAT, 1,      // e.g. Status signal from the device
Connection(Gpio10 (Exclusive, PullUp, , , , "\\_SB.GPI2") {9}),
RSET, 1       // e.g. Reset signal to the device
}
Method(_PS3)
{
If (1) // Make sure General Purpose I/O Operation is available
{
  Store(0x03, MODE) // Set both MODE bits. Power Mode 3
}
}
} //End DEVB

```

#### 5.5.2.4.6 Declaring GenericSerialBus Operation Regions

For GenericSerialBus Operation Regions, the syntax for the **OperationRegion** term (from [Section 19.6.98, “OperationRegion \(Declare Operation Region\)”](#)) is described below.

```

OperationRegion (
  RegionName,          // NameString
  RegionSpace,         // RegionSpaceKeyword
  Offset,              // TermArg=>Integer
  Length               // TermArg=>Integer
)

```

Where:

- *RegionName* specifies a name for this region (for example, TOP1).
- *RegionSpace* must be set to **GenericSerialBus** (operation region type value 0x09).
- *Offset* specifies the initial command value offset for the target device. For example, the value 0x00 refers to a command value offset of zero (0). Raw protocols ignore this value.
- *Length* is set to the 0x100 (256), representing the maximum number of possible command values.

**Note:** The Operation Region must be declared within the scope of the Serial Bus controller device.

The following ASL code shows the use of the OperationRegion, Field, and Offset terms as they apply to SPB space.

```

<...>
Scope(\_SB.I2C){
  OperationRegion(TOP1, GenericSerialBus, 0x00, 0x100) // GenericSerialBus device
  at command                                         // offset 0x00

  Name (SDB0, ResourceTemplate() {
    I2CSerialBusV2(0x4a, 100000, "\\_SB.I2C", , , , RawDataBuffer(){1, 2, 3, 4, 5, 6})
  })

  Field(TOP1, BufferAcc, NoLock, Preserve)
  {
    Connection(SDB0) // Use the Resource Descriptor defined above
  }
}

```

```

AccessAs(BufferAcc, AttribWord)           // Use the GenericSerialBus Read/Write
Word protocol
  FLD0, 8,                                // Virtual register at command value 0.
  FLD1, 8                                // Virtual register at command value 1.
}

Field(TOP1, BufferAcc, NoLock, Preserve)
{
  Connection(I2CSerialBusV2(0x5a, , 100000, , "\_SB.I2C", , , , RawDataBuffer(){1, 6}))
  AccessAs(BufferAcc, AttribBytes (16))
    FLD2, 8                                // Virtual register at command value 0.
}

// Create the GenericSerialBus data buffer
Name(BUFF, Buffer(34){})                  // Create GenericSerialBus data buffer
as BUFF
CreateByteField(BUFF, 0x00, STAT)          // STAT = Status (Byte)
CreateWordField(BUFF, 0x02, DATA)           // DATA = Data (Word)
}
<...>

```

The Operation Region in this example is defined within the scope of the target controller device, I2C.

GenericSerialBus regions are only accessible via the Field term (see [Section 19.6.46 “Field \(Declare Field Objects\)](#)) GenericSerialBus protocols are assigned to field elements using the AccessAs term (see [Section 19.3.4 “ASL Macros”](#)) within the field definition.

**Table 5-162 Accessor Type Values**

Accessor Type	Value	Description
AttribQuick	0x02	Read/Write Quick Protocol
AttribSendReceive	0x04	Send/Receive Byte Protocol
AttribByte	0x06	Read/Write Byte Protocol
AttribWord	0x08	Read/Write Word Protocol
AttribBlock	0x0A	Read/Write Block Protocol
AttribBytes	0x0B	Read/Write N-Bytes Protocol
AttribProcessCall	0x0C	Process Call Protocol
AttribBlockProcessCall	0x0D	Write Block-Read Block Process Call Protocol
AttribRawBytes	0x0E	Raw Read/Write N-Bytes Protocol
AttribRawProcessBytes	0x0F	Raw Process Call Protocol

#### 5.5.2.4.6.1 Declaring GenericSerialBus Fields

As with other regions, GenericSerialBus operation regions are only accessible via the Field term. Each field element is assigned a unique command value and represents a virtual register on the targeted GenericSerialBus device.

The syntax for the **Field** term (see [Section 19.6.46](#) “Field (Declare Field Objects)”) is described below.

##### Field(

```
RegionName,           // NameString=>OperationRegion
AccessType,          // AccessTypeKeyword
LockRule,            // LockRuleKeyword – ignored for Hardware-reduced ACPI platforms
UpdateRule           // UpdateRuleKeyword – ignored
) {FieldUnitList}
```

Where:

- *RegionName* specifies the operation region name previously defined for the device.
- *AccessType* must be set to **BufferAcc**. This indicates that access to field elements will be done using a region-specific data buffer. For this access type, the field handler is not aware of the data buffer’s contents which may be of any size. When a field of this type is used as the source argument in an operation it simply evaluates to a buffer. When used as the destination, however, the buffer is passed bi-directionally to allow data to be returned from write operations. The modified buffer then becomes the execution result of that operation. This is slightly different than the normal case in which the execution result is the same as the value written to the destination. Note that the source is never changed, since it could be a read only object (see [Section 5.5.2.4.6.2](#), “Declaring an GenericSerialBus Data Buffer” and [Section 19.2.5](#), “Opcode Terms”).
- *LockRule* indicates if access to this operation region requires acquisition of the Global Lock for synchronization. This field should be set to **Lock** on system with firmware that may access the GenericSerialBus, and **NoLock** otherwise. On Hardware-reduced ACPI platforms, there is not a global lock so this parameter is ignored.
- *UpdateRule* is not applicable to GenericSerialBus operation regions since each virtual register is accessed in its entirety. This field is ignored for all GenericSerialBus field definitions.

GenericSerialBus operation regions require that all field elements be declared at command value granularity. This means that each virtual register cannot be broken down to its individual bits within the field definition.

Access to sub-portions of virtual registers can be done only outside of the field definition. This limitation is imposed to simplify the GenericSerialBus interface.

GenericSerialBus protocols are assigned to field elements using the AccessAs term within the field definition. The syntax for this term (from [Section 19.2.3](#), “ASL Root and SecondaryTerms”) is described below.

##### AccessAs(

```
AccessType,          //AccessTypeKeyword
AccessAttribute     //Nothing | ByteConst | AccessAttributeKeyword
)
```

Where:

- *AccessType* must be set to **BufferAcc**.
- *AccessAttribute* indicates the GenericSerialBus protocol to assign to command values that follow this term. See [Section 5.5.2.4.6.3](#), “Using the GenericSerialBus Protocols,” for a listing of the GenericSerialBus protocols.

An AccessAs term must appear in a field definition to set the initial GenericSerialBus protocol for the field elements that follow. A maximum of one GenericSerialBus protocol may be defined for each field element. Devices supporting multiple protocols for a single command value can be modeled by specifying multiple field elements with the same offset (command value), where each field element is preceded by an AccessAs term specifying an alternate protocol.

For GenericSerialBus operation regions, connection attributes must be defined for each set of field elements. GenericSerialBus resources are assigned to field elements using the Connection term within the field definition. The syntax for this term (from [Section 19.6.15](#) “Connection (Declare Field Connection Attributes)”) is described below.

### Connection (*ConnectionResourceObj*)

Where:

- *ConnectionResourceObj* points to a Serial Bus Resource Connection Descriptor (see [Section 6.4.3.8.2](#), “Serial Bus Connection Resource Descriptors” for valid types), or a named object that specifies a buffer field containing the connection resource information.

Each Field definition references the initial command offset specified in the operation region definition. The offset is iterated for each subsequent field element defined in that respective Field. If a new connection is described in the same Field definition, the offset will not be returned to its initial value and a new Field must be defined to inherit the initial command value offset from the operation region definition. The following example illustrates this point.

```
<...>
OperationRegion(TOP1, GenericSerialBus, 0x00, 0x100) //Initial offset is 0

Field(TOP1, BufferAcc, NoLock, Preserve)
{
  Connection(I2CSerialBusV2(0x5a, 100000, "\_SB.I2C", , , , RawDataBuffer(){1, 6}))
    Offset(0x0),
    AccessAs(BufferAcc, AttribBytes(4)),
    TFK1, 8, //TFK1 at command value offset 0
    TFK2, 8 //TFK2 at command value offset 1

  Connection(I2CSerialBusV2(0x5c, 100000, "\_SB.I2C", , , , RawDataBuffer(){3, 1}))
    Offset(0x0),
    AccessAs(BufferAcc, AttribBytes(12)),
    TS1, 8 //TS1 at command value offset 2
}
```

```

Field(TOP1, BufferAcc, NoLock, Preserve)
{
    Connection(I2CSerialBusV2(0x5b, 100000, "\_SB.I2C", , , , RawDataBuffer(){2, 9}))
        AccessAs(BufferAcc, Attribyte),
        TM1, 8
    }
}

<...>

```

#### 5.5.2.4.6.2 Declaring and Using a GenericSerialBus Data Buffer

The use of a data buffer for GenericSerialBus transactions allows AML to receive status and data length values, as well as making it possible to implement the Process Call protocol. The **BufferAcc** access type is used to indicate to the field handler that a region-specific data buffer will be used.

For GenericSerialBus operation regions, this data buffer is defined as an arbitrary length buffer that, if represented using a 'C'-styled declaration, would be modeled as follows:

```

typedef struct
{
    BYTESTatus; // Byte 0 of the data buffer
    BYTELlength; // Byte 1 of the data buffer
    BYTE[x-1]Data; // Bytes 2-x of the arbitrary length data buffer,
} // where x is the last index of the overall buffer

```

Where:

- *Status* (byte 0) indicates the status code of a given GenericSerialBus transaction.
- *Length* (byte 1) specifies the number of bytes of valid data that exists in the data buffer. Use of this field is only defined for the Read/Write Block protocol. For other protocols—where the data length is implied by the protocol—this field is reserved.
- *Data* (bytes 2-x) represents an arbitrary length buffer, and is the location where actual data is stored.

For example, the following ASL shows the use of the GenericSerialBus data buffer for performing transactions to a Smart Battery device.

```

/* Create the GenericSerial Bus data buffer */
Name(BUFF, Buffer(34){}) // Create GenericSerial Bus data buffer as BUFF
CreateByteField(BUFF, 0x00, STAT) // STAT = Status (Byte)
CreateByteField(BUFF, 0x01, LEN) // LEN = Length (Byte)
CreateWordField(BUFF, 0x02, DATW) // DATW = Data (Word – Bytes 2 & 3)
CreateField(BUFF, 0x10, 256, DBUF) // DBUF = Data (Block – Bytes 2-33)

/* Read the battery temperature */
Store(BTMP, BUFF) // Invoke Read Word transaction
If(LEqual(STAT, 0x00))
{
    // DATW = Battery temperature in 1/10th degrees
    // Kelvin
}

```

```

}

/* Read the battery manufacturer name */
Store(MFGN, BUFF)           // Invoke Read Block transaction
If(LEqual (STAT, 0x00))      // Successful ?
{
    // LEN = Length of the manufacturer name
    // DBUF = Manufacturer name (as a counted string)
}

```

Notice the use of the **CreateField** primitives to access the data buffer's sub-elements (*Status*, *Length*, and *Data*), where *Data* (bytes 2-33) is 'typecast' as both word (DATW) and block (DBUF) data.

The example above demonstrates the use of the `Store()` operator to invoke a Read Block transaction to obtain the name of the battery manufacturer. Evaluation of the source operand (MFGN) results in a 34-byte buffer that gets copied by `Store()` to the *destination* buffer (BUFF).

Capturing the results of a write operation, for example to check the status code, requires an additional `Store()` operator, as shown below.

```

Store(Store(BUFF, MFGN), BUFF) // Invoke Write Block transaction
If(LEqual (STAT, 0x00)) {...} // Transaction successful ?

```

Note that the outer `Store()` copies the results of the Write Block transaction back into BUFF. This is the nature of BufferAcc's bi-directionality. It should be noted that storing (or parsing) the result of a GenericSerialBus Write transaction is not required although useful for ascertaining the outcome of a transaction.

GenericSerialBus Process Call protocols require similar semantics due to the fact that only destination operands are passed bi-directionally. These transactions require the use of the double-`Store()` semantics to properly capture the return results.

#### 5.5.2.4.6.3 Using the GenericSerialBus Protocols

This section provides information and examples on how each of the GenericSerialBus protocols can be used to access GenericSerialBus devices from AML.

##### 5.5.2.4.6.3.1 Read/Write Quick (AttribQuick)

The GenericSerialBus Read/Write Quick protocol (AttribQuick) is typically used to control simple devices using a device-specific binary command (for example, ON and OFF). Command values are not used by this protocol and thus only a single element (at offset 0) can be specified in the field definition. This protocol transfers no data.

The following ASL code illustrates how a device supporting the Read/Write Quick protocol should be accessed:

```

OperationRegion(TOP1, GenericSerialBus, 0x00, 0x100) // GenericSerialBus device at
command value offset 0
Field(TOP1, BufferAcc, NoLock, Preserve)
{
    Connection(I2CSerialBusV2(0x5a, , 100000, , "\_SB.I2C", , , , RawDataBuffer(){1, 6}))
    AccessAs(BufferAcc, AttrbQuick) // Use the GenericSerialBus Read/Write Quick
protocol
    FLDO, 8                      // Virtual register at command value 0.
}

/* Create the GenericSerialBus data buffer */

Name(BUFF, Buffer(2){})           // Create GenericSerialBus data buffer as BUFF
CreateByteField(BUFF, 0x00, STAT)  // STAT = Status (Byte)

/* Signal device (e.g. OFF) */
Store(FLDO, BUFF)                // Invoke Read Quick transaction
If(LEqual(STAT, 0x00)) {...}      // Successful?

/* Signal device (e.g. ON) */
Store(BUFF, FLDO)                // Invoke Write Quick transaction

```

In this example, a single field element (FLDO) at offset 0 is defined to represent the protocol's read/write bit. Access to FLDO will cause a GenericSerialBus transaction to occur to the device. Reading the field results in a Read Quick, and writing to the field results in a Write Quick. In either case data is not transferred—access to the register is simply used as a mechanism to invoke the transaction.

#### 5.5.2.4.6.3.2 Send/Receive Byte (AttribSendReceive)

The GenericSerialBus Send/Receive Byte protocol (AttribSendReceive) transfers a single byte of data. Like Read/Write Quick, command values are not used by this protocol and thus only a single element (at offset 0) can be specified in the field definition.

The following ASL code illustrates how a device supporting the Send/Receive Byte protocol should be accessed:

```

OperationRegion(TOP1, GenericSerialBus, 0x00, 0x100) // GenericSerialBus device at
command value offset 0
Field(TOP1, BufferAcc, NoLock, Preserve)
{
    Connection(I2CSerialBusV2(0x5a, , 100000, , "\_SB.I2C", , , , RawDataBuffer(){1, 6}))
    AccessAs(BufferAcc, AttrbSendReceive) // Use the GenericSerialBus Send/Receive
                                         // Byte protocol
    FLDO, 8                          // Virtual register at command value 0.
}

// Create the GenericSerialBus data buffer
Name(BUFF, Buffer(3){})           // Create GenericSerialBus data buffer as BUFF
CreateByteField(BUFF, 0x00, STAT)  // STAT = Status (Byte)
CreateByteField(BUFF, 0x02, DATA)   // DATA = Data (Byte)
                                // Receive a byte of data from the device

```

```

Store(FLD0, BUFF)           // Invoke a Receive Byte transaction
If(LEqual (STAT, 0x00))     // Successful ?
{
    // DATA = Received byte...
}

// Send the byte '0x16' to the device
Store(0x16, DATA)          // Save 0x16 into the data buffer
Store(BUFF, FLD0)           // Invoke a Send Byte transaction

```

In this example, a single field element (FLD0) at offset 0 is defined to represent the protocol's data byte. Access to FLD0 will cause a GenericSerialBus transaction to occur to the device. Reading the field results in a Receive Byte, and writing to the field results in a Send Byte.

#### 5.5.2.4.6.3.3 Read/Write Byte (AttribByte)

The GenericSerialBus Read/Write Byte protocol (AttribByte) also transfers a single byte of data. But unlike Send/Receive Byte, this protocol uses a command value to reference up to 256 byte-sized virtual registers.

The following ASL code illustrates how a device supporting the Read/Write Byte protocol should be accessed:

```

OperationRegion(TOP1, GenericSerialBus, 0x00, 0x100) // GenericSerialBus device at
command value offset
Field(TOP1, BufferAcc, NoLock, Preserve)
{
    Connection(I2CSerialBusV2(0x5a, , 100000, , "\_SB.I2C", , , RawDataBuffer(){1, 6}))
    AccessAs(BufferAcc, AttribByte) // Use the GenericSerialBus Read/Write Byte
protocol
    FLD0, 8,                      // Virtual register at command value 0.
    FLD1, 8,                      // Virtual register at command value 1.
    FLD2, 8,                      // Virtual register at command value 2.
}

// Create the GenericSerial Bus data buffer
Name(BUFF, Buffer(3){})
// Create GenericSerial Bus data buffer as BUFF
CreateByteField(BUFF, 0x00, STAT) // STAT = Status (Byte)
CreateByteField(BUFF, 0x02, DATA) // DATA = Data (Byte)

// Read a byte of data from the device using command value 1
Store(FLD1, BUFF)             // Invoke a Read Byte transaction
If(LEqual (STAT, 0x00))        // Successful ?
{
    // DATA = Byte read from FLD1...
}

// Write the byte '0x16' to the device using command value 2
Store(0x16, DATA)             // Save 0x16 into the data buffer
Store(BUFF, FLD2)              // Invoke a Write Byte transaction

```

In this example, three field elements (FLD0, FLD1, and FLD2) are defined to represent the virtual registers for command values 0, 1, and 2. Access to any of the field elements will cause a GenericSerialBus transaction to occur to the device. Reading FLD1 results in a Read Byte with a command value of 1, and writing to FLD2 results in a Write Byte with command value 2.

#### 5.5.2.4.6.3.4 Read/Write Word (AttribWord)

The GenericSerialBus Read/Write Word protocol (AttribWord) transfers 2 bytes of data. This protocol also uses a command value to reference up to 256 word-sized virtual device registers.

The following ASL code illustrates how a device supporting the Read/Write Word protocol should be accessed:

```
OperationRegion(TOP1, GenericSerialBus, 0x00, 0x100) // GenericSerialBus device at
command value offset 0
Field(TOP1, BufferAcc, NoLock, Preserve)
{
    Connection(I2CSerialBusV2(0x5a, , 100000, , "\_SB.I2C", , , RawDataBuffer(){1, 6}))
    AccessAs(BufferAcc, AttribWord)// Use the GenericSerialBus Read/Write Word
protocol
    FLD0, 8,                      // Virtual register at command value 0.
    FLD1, 8,                      // Virtual register at command value 1.
    FLD2, 8,                      // Virtual register at command value 2.
}

// Create the GenericSerial Bus data buffer
Name(BUFF, Buffer(6){})          // Create GenericSerial Bus data buffer as BUFF
CreateByteField(BUFF, 0x00, STAT) // STAT = Status (Byte)
CreateWordField(BUFF, 0x02, DATA) // DATA = Data (Word)

// Read two bytes of data from the device using command value 1
Store(FLD1, BUFF)              // Invoke a Read Word transaction
If(LEqual(STAT, 0x00))          // Successful?
{
    // DATA = Word read from FLD1...
}
// Write the word '0x5416' to the device using command value 2
Store(0x5416, DATA)            // Save 0x5416 into the data buffer
Store(BUFF, FLD2)               // Invoke a Write Word transaction
```

In this example, three field elements (FLD0, FLD1, and FLD2) are defined to represent the virtual registers for command values 0, 1, and 2. Access to any of the field elements will cause a GenericSerialBus transaction to occur to the device. Reading FLD1 results in a Read Word with a command value of 1, and writing to FLD2 results in a Write Word with command value 2.

Notice that although accessing each field element transmits a word (16 bits) of data, the fields are listed as 8 bits each. The actual data size is determined by the protocol. Every field element is declared with a length of 8 bits so that command values and byte offsets are equivalent.

#### 5.5.2.4.6.3.5 Read/Write Block (AttribBlock)

The GenericSerialBus Read/Write Block protocol (AttribBlock) transfers variable-sized data. This protocol uses a command value to reference up to 256 block-sized virtual registers.

The following ASL code illustrates how a device supporting the Read/Write Block protocol should be accessed:

```

OperationRegistration(TOP1, GenericSerialBus, 0x00, 0x100)
Field(TOP1, BufferAcc, NoLock, Preserve)
{
    Connection(I2CSerialBusV2(0x5a,,100000,, "\_SB.I2C",,,, RawDataBuffer(){1,6}))
    Offset(0x0),
    AccessAs(BufferAcc, Attriblock),
    TFK1, 8,
    TFK2, 8
}

// Create the GenericSerialBus data buffer
Name(BUFF, Buffer(34){})           // Create Serial Bus buf as BUFF
CreateByteField(BUFF, 0x00, STAT)   // STAT = Status (Byte)
CreateBytefield(BUFF, 0x01, LEN)    // LEN = Length (Byte)
CreateWordField(BUFF, 0x03, DATW)   // DATW = Data (Word - Bytes 2 & 3, or 16 bits)
CreateField(BUFF, 16, 256, DBUF)    // DBUF = Data (Bytes 2-33)
CreateField(BUFF, 16, 32, DATD)    // DATD = Data (DWord)

// Read block of data from the device using command value 0
Store(TFK1, BUFF)
If(LNotEqual(STAT, 0x00)) {
    Return(0)
}
// Read block of data from the device using command value 1
Store(TFK2, BUFF)
If(LNotEqual(STAT, 0x00)) {
    Return(0)
}

<...>

```

In this example, two field elements (TFK1, and TFK2) are defined to represent the virtual registers for command values 0 and 1. Access to any of the field elements will cause a GenericSerialBus transaction to occur to the device.

Writing blocks of data requires similar semantics, such as in the following example.

```

Store(16, LEN) // In bits, so 4 bytes
Store(Store(BUFF, TFK1), BUFF)      // Invoke Write Block transaction
If(LEqual(STAT, 0x00)) {...}       // Transaction successful ?

```

This accessor is not viable for some SPBs because the bus may not support the appropriate functionality. In cases that variable length buffers are desired but the bus does not support block accessors, refer to the SerialBytes protocol.

### 5.5.2.4.6.3.6 Word Process Call (AttribProcessCall)

The GenericSerialBus Process Call protocol (AttribProcessCall) transfers 2 bytes of data bi-directionally (performs a Write Word followed by a Read Word as an atomic transaction). This protocol uses a command value to reference up to 256 word-sized virtual registers.

The following ASL code illustrates how a device supporting the Process Call protocol should be accessed:

```
OperationRegistration(TOP1, GenericSerialBus, 0x00, 0x100) // GenericSerialBus device at
slave address 0x42
Field(TOP1, BufferAcc, NoLock, Preserve)
{
    Connection(I2CSerialBusV2(0x5a, , 100000, , "\_SB.I2C", , , , RawDataBuffer(){1, 6}))
    AccessAs(BufferAcc, AttribProcessCall) // Use the GenericSerialBus Process
    Call protocol
    FLD0, 8, // Virtual register at command value 0.
    FLD1, 8, // Virtual register at command value 1.
    FLD2, 8, // Virtual register at command value 2.
}

// Create the GenericSerialBus data buffer
Name(BUFF, Buffer(6{})) // Create GenericSerialBus data buffer as BUFF
CreateByteField(BUFF, 0x00, STAT) // STAT = Status (Byte)
CreateWordField(BUFF, 0x02, DATA) // DATA = Data (Word)

// Process Call with input value '0x5416' to the device using command value 1
Store(0x5416, DATA) // Save 0x5416 into the data buffer
Store(Store(BUFF, FLD1), BUFF) // Invoke a Process Call transaction
If(LEqual(STAT, 0x00)) // Successful ?
{
    // DATA = Word returned from FLD1...
}
```

In this example, three field elements (FLD0, FLD1, and FLD2) are defined to represent the virtual registers for command values 0, 1, and 2. Access to any of the field elements will cause a GenericSerialBus transaction to occur to the device. Reading or writing FLD1 results in a Process Call with a command value of 1. Notice that unlike other protocols, Process Call involves both a write and read operation in a single atomic transaction. This means that the *Data* element of the GenericSerialBus data buffer is set with an input value before the transaction is invoked, and holds the output value following the successful completion of the transaction.

### 5.5.2.4.6.3.7 Block Process Call (AttribBlockProcessCall)

The GenericSerialBus Block Write-Read Block Process Call protocol (AttribBlockProcessCall) transfers a block of data bi-directionally (performs a Write Block followed by a Read Block as an atomic transaction). This protocol uses a command value to reference up to 256 block-sized virtual registers.

The following ASL code illustrates how a device supporting the Process Call protocol should be accessed:

```
OperationRegistration(TOP1, GenericSerialBus, 0x00, 0x100) // GenericSerialBus device at
// slave address 0x42
Field(TOP1, BufferAcc, NoLock, Preserve)
```

```

{
  Connection(I2CSerialBusV2(0x5a,,100000,, "\_SB.I2C",,,,RawDataBuffer(){1,6}))
    AccessAs(BufferAcc, AttribBlockProcessCall) // Use the Block Process Call
                                                // protocol
    FLD0, 8,                                     // Virtual register representing
                                                // a command value of 0
    FLD1, 8,                                     // Virtual register representing
                                                // a command value of 1
}

// Create the GenericSerialBus data buffer as BUFF
Name(BUFF, Buffer(35)())                      // Create GenericSerialBus data buffer as
BUFF
CreateByteField(BUFF, 0x00, STAT)                // STAT = Status (Byte)
CreateByteField(BUFF, 0x01, LEN)                 // LEN = Length (Byte)
CreateField(BUFF, 0x10, 256, DATA)               // Data (Block)

// Process Call with input value "ACPI" to the device using command value 1

Store("ACPI ", DATA)                          // Fill in outgoing data
Store(8, LEN)                                // Length of the valid data
Store(Store(BUFF, FLD1), BUFF)                // Execute the PC
if (LEqual(STAT, 0x00))                      // Test the status
{
  // BUFF now contains information returned from PC
  // LEN now equals size of data returned
}

```

#### 5.5.2.4.6.3.8 Read/Write N Bytes (AttribBytes)

The GenericSerialBus Read/Write N Bytes protocol (AttribBytes) transfers variable-sized data. The actual number of bytes to read or write is specified as part of the AccessAs attribute.

The following ASL code illustrates how a device supporting the Read/Write N Bytes protocol should be accessed:

```

OperationRegistration(TOP1, GenericSerialBus, 0x00, 0x100)
Field(TOP1, BufferAcc, NoLock, Preserve)
{
  Connection(I2CSerialBusV2(0x5a,,100000,, "\_SB.I2C",,,,RawDataBuffer(){1,6}))
    Offset(0x0),
    AccessAs(BufferAcc, AttribBytes (4)),
    TFK1, 8,                         //TFK1 at command value 0
    TFK2, 8,                         //TFK2 at command value 1

  Connection(I2CSerialBus(0x5b,,100000,, "\_SB.I2C",,,,RawDataBuffer(){2,9}))
    // same connection attribute, but different vendor data passed to driver
    AccessAs(BufferAcc, AttribByte)
    TM1, 8,                           //TM1 at command value 2
}

// Create the GenericSerialBus data buffer

```

```

Name(BUFF, Buffer(34){})          // Create Serial Bus buf as BUFF
CreateByteField(BUFF, 0x00, STAT)  // STAT = Status (Byte)
CreateByteField(BUFF, 0x01, LEN)   // LEN = Length (Byte)
CreateWordField(BUFF, 0x02, DATW)  // DATW = Data (Word - Bytes 2 & 3, or 16 bits)
CreateField(BUFF, 16, 256, DBUF)   // DBUF = Data (Bytes 2-34)
CreateField(BUFF, 16, 32, DATD)   // DATD = Data (DWord)

// Read block of data from the device using command value 0
Store(TFK1, BUFF)
If(LNotEqual(STAT, 0x00)) {
    Return(0)
}

// Write block of data to the device using command value 1
Store(Store(BUFF, TFK2), BUFF)
If(LNotEqual(STAT, 0x00)) {
    Return(0)
}

```

In this example, two field elements (TFK1, and TFK2) are defined to represent the virtual registers for command values 0 and 1. Access to any of the field elements will cause a GenericSerialBus transaction to occur to the device of the length specified in the AccessAttributes.

#### 5.5.2.4.6.3.9 Raw Read/Write N Bytes (AttribRawBytes)

The GenericSerialBus Raw Read/Write N Bytes protocol (AttribRawBytes) transfers variable-sized data. The actual number of bytes to read or write is specified as part of the AccessAs attribute. The initial command value specified in the operation region definition is ignored by Raw accesses.

The following ASL code illustrates how a device supporting the Read/Write N Bytes protocol should be accessed:

```

OperationRegion(TOP1, GenericSerialBus, 0x00, 0x100)
Field(TOP1, BufferAcc, NoLock, Preserve)
{
    Connection(I2CSerialBusV2(0x5a,,100000,, "\_SB.I2C",,,, rawDataBuffer(){1,6}))
        AccessAs(BufferAcc, AttribRawBytes(4))
        TFK1, 8
    }

// Create the GenericSerial Bus data buffer
Name(BUFF, Buffer(34){})          // Create Serial Bus buf as BUFF
CreateByteField(BUFF, 0x00, STAT)  // STAT = Status (Byte)
CreateByteField(BUFF, 0x01, LEN)   // LEN = Length (Byte)
CreateWordField(BUFF, 0x02, DATW)  // DATW = Data (Word - Bytes 2 & 3, or 16 bits)
CreateField(BUFF, 16, 256, DBUF)   // DBUF = Data (Bytes 2-34)
CreateField(BUFF, 16, 32, DATD)   // DATD = Data (DWord)

Store(0x0B, DATW)                // Store appropriate reference data for driver to
interpret

//Read from TFK1

```

```

Store(TFK1, BUFF)
If(LNotEqual(STAT, 0x00)) {
    Return(0)
}

//Write to TFK1
Store(Store(BUFF, TFK1), BUFF)
If(LNotEqual(STAT, 0x00)) {
    Return(0)
}

```

Access to any field elements will cause a GenericSerialBus transaction to occur to the device of the length specified in the AccessAttributes.

Raw accesses assume that the writer has knowledge of the bus that the access is made over and the device that is being accessed. The protocol may only ensure that the buffer is transmitted to the appropriate driver, but the driver must be able to interpret the buffer to communicate to a register.

#### 5.5.2.4.6.3.10 Raw Block Process Call (AttribRawProcessBytes)

The GenericSerialBus Raw Write-Read Block Process Call protocol (AttribRawProcessBytes) transfers a block of data bi-directionally (performs a Write Block followed by a Read Block as an atomic transaction). The initial command value specified in the operation region definition is ignored by Raw accesses.

The following ASL code illustrates how a device supporting the Process Call protocol should be accessed:

```

OperationRegion(TOP1, GenericSerialBus, 0x00, 0x100) // GenericSerialBus device at
// slave address 0x42
Field(TOP1, BufferAcc, NoLock, Preserve)
{
    Connection(I2CSerialBusV2(0x5a, , 100000, , "\_SB.I2C", , , , RawDataBuffer(){1, 6}))
    AccessAs(BufferAcc, AttribRawProcessBytes) // Use the Raw Bytes Process Call
protocol
    FLDO, 8
}

// Create the GenericSerialBus data buffer as BUFF
Name(BUFF, Buffer(34)) // Create GenericSerialBus data buffer as BUFF
CreateByteField(BUFF, 0x00, STAT) // STAT = Status (Byte)
CreateByteField(BUFF, 0x01, LEN) // LEN = Length (Byte)
CreateWordField(BUFF, 0x02, DATW) // Data (Bytes 2 and 3)
CreateField(BUFF, 0x10, 256, DATA) // Data (Block)

Store(0x0B, DATW) //Store appropriate reference data for driver to
interpret

// Process Call with input value "ACPI" to the device

Store("ACPI", DATA) // Fill in outgoing data
Store(8, LEN) // Length of the valid data
Store(Store(BUFF, FLDO), BUFF) // Execute the PC
if (LEqual(STAT, 0x00)) // Test the status

```

```
{
    // BUFF now contains information returned from PC
    // LEN now equals size of data returned
}
```

Raw accesses assume that the writer has knowledge of the bus that the access is made over and the device that is being accessed. The protocol may only ensure that the buffer is transmitted to the appropriate driver, but the driver must be able to interpret the buffer to communicate to a register.

### 5.5.2.4.7 Declaring PCC Operation Regions

The Platform Communication Channel (PCC) is described in Chapter 14. The PCC table, described in [Section 14.1](#), contains information about PCC subspaces implemented in a given platform, where each subspace is a unique channel.

#### 5.5.2.4.7.1 Overview

The PCC Operation Region works in conjunction with the PCC Table ([Section 14.1](#)). The PCC Operation Region is associated with the region of the shared memory that follows the PCC signature. PCC Operation Region must not be used for extended subspaces of Type 4 (Slave subspaces). PCC subspaces that are earmarked for use as PCC Operation Regions must not be used as PCC subspaces for standard ACPI features such as CPPC, RASF, PDTT and MPST. These standard features must always use the PCC Table instead.

#### 5.5.2.4.7.2 Declaring a PCC OperationRegion

The syntax for the `OperationRegion` term ([Section 19.6.98](#)) is described below:

```
OperationRegion (
    RegionName,          // NameString
    RegionSpace,         // RegionSpaceKeyword
    Offset,              // TermArg=>Integer
    Length               // TermArg=>Integer
)
```

The PCC Operation Region term in ACPI namespace will be defined thus:

```
OperationRegion ([subspace-name], PCC, [subspace-id], Length)
```

Where:

- `RegionName` is set to `[subspace-name]`, which is a unique name for this PCC subspace.
- `RegionSpace` must be set to `PCC`, operation region type `0x0A`
- `Offset` must be set to `[subspace-id]`, the subspace ID of this channel, as defined in the PCC table (PCCT).
- `Length` is the total size of the operation region, and is equal to the total size of the fields that succeed the PCC signature in the shared memory.

#### 5.5.2.4.7.3 Declaring message fields within a PCC OperationRegion

For all PCC subspace types, the PCC Operation Region pertains to the region of PCC subspace that succeeds the PCC signature. The layout of the Shared Memory Regions is specific to the PCC subspace.

The Operation Region handler must therefore obtain the subspace type first before it can comprehend and access individual fields within the subspace.

Fields within an Operation region are accessed using the **Field** keyword, and correspond to the fields that succeed the PCC signature in the subspace shared memory. The syntax for the **Field** term (from [Section 19.6.46](#)) is as follows:

```
Field (
    RegionName,
    AccessType,
    LockRule,
    UpdateRule
) {FieldUnitList}
```

For PCC Operation Regions:

- *RegionName* specifies the name of the operation region, declared above the field term.
- *AccessType* must be set to **ByteAcc**.
- *LockRule* indicates if access to this operation region requires acquisition of the Global lock for synchronization. This field must be set to **NoLock**.
- *UpdateRule* is not applicable to PCC operation regions, since each command region is accessed in its entirety.

The **FieldUnitList** specifies individual fields within the Shared Memory Region of the subspace, which depends on the type of subspace. The declaration of the fields must match the layout of the subspace. Accordingly, for the Generic Communications subspaces (Types 0-2), the **FieldUnitList** may be declared as follows:

```
Field(NAME, ByteAcc, NoLock, Preserve)
{
    CMD, 16,          // Command field
    STAT, 16,         // Status field, to be read on completion of the command
    DATA, [Size]      // Communication space of size [Size] bits
}
```

Likewise, for the Extended Communication subspaces (Type 3), the **FieldUnitList** may be declared as follows:

```
Field(NAME, ByteAcc, NoLock, Preserve)
{
    FLGS, 32,        // Command Flags field
    LEN, 32,          // Length field
    CMD, 32,          // Command field
    DATA, [Size]      // Communication space of size [Size] bits
}
```

#### 5.5.2.4.7.4 An Example of PCC Operation Region Declaration

As an example, if a platform feature uses PCC subspace with subspace ID of 0x02 of subspace Type 3 (Extended PCC communication channel), then the caller may declare the operation region as follows:

```

OperationRegion(PFRM, PCC, 0x02, 0x10C)
Field(PFRM, ByteAcc, NoLock, Preserve)
{
    Offset(4),           // Flags start at offset 4 from beginning of shared memory
    FLGS, 32,            // Command Flags field
    LGTH, 32,            // Length field
    COMD, 32,            // Command field
    COSP, 0x800          // Communication space of size 256 bytes
}

```

In this example, PFRM is the name of the subspace dedicated to the platform feature, and the size of the shared memory region is 0x10C bytes (256 bytes of communication space and 16 bytes of fields excluding the PCC Signature).

#### 5.5.2.4.7.5 Using a PCC OperationRegion

The PCC Operation Region handler begins transmission of the message on the channel when it detects a write to the **CMD** field. The caller must therefore update all other fields relevant to the operation region first, and then in the final step, write the command itself. As explained in [Section 5.5.2.4.7.3](#), the fields to be updated are specific to the subspace type.

For the Generic Communication subspace type (Types 0, 1 and 2), the order of Operation Region writes would be as follows:

1. Write the command payload into the **DATA** field.
2. Write the command into the **CMD** field.

For the Extended Communication subspace type (Type 3), the order of Operation Region writes would be as follows:

1. Write the command payload, length and flags into the **CMD**, **LEN** and **FLGS** fields, respectively, in any order of preference.
2. Write the command into the **CMD** field.

In the above steps, the fields are as described in [Section 5.5.2.4.7.4](#). When the platform completes processing the command, it uses the same subspace Shared Memory Region to return the response data. The caller can thus read the Operation Region to retrieve the response data.

If channel errors are encountered during transmission of the command or its response, the channel reports an error status in the Channel Status register. The caller must therefore first check the Channel Status register before processing the return data. For the Generic PCC Communication Subspaces, the Channel Status register is located in the Shared Memory Region itself, as described in [Section 14.2.2](#). The caller must thus check the **STAT** field in the Operation Region for the purpose. For the Extended PCC Communication Subspaces, the Channel Status register is located anywhere in system memory or IO, and pointed to by the Error Status register field within the Type 3 PCC Subspace structure, as described in [Section 14.1.6](#).

#### 5.5.2.4.7.6 Using the \_REG Method for PCC Operation Regions

It is possible for the OS to include PCC operation region handlers that only comprehend and support a subset of the possible subspaces defined in this specification. The OS can provide supplementary information in the **\_REG** method in order to indicate which exact subspace(s) are supported. To

accomplish this, the Arg0 parameter passed to the \_REG method must include both the Address Space ID (PCC) and a qualifying Address Space sub-type in Byte 1, as follows:

```
Arg0, Byte 0 = PCC = 0x0A
Arg0, Byte 1 = subspace type as defined in Section 14.1.2.
```

The OS may now indicate support for handling PCC operation region subspace Type 3 by invoking the \_REG method with Arg0=0x030A and Arg1 = 0x01.

#### 5.5.2.4.7.7 Example Use of a PCC OperationRegion

The following sample ACPI Power Meter ([Section 10.4](#)) implementation describes how a PCC Operation Region can be used to read a platform power sensor that is exposed through a platform services channel. In this sample system, the platform services channel is implemented as an Extended PCC Communication Channel (Type 3), and assigned a PCC subspace ID of 0x07 in the PCCT. The sample platform implements three sensors – two power sensors, associated with CPU cluster 0 and cluster 1 respectively, and a SoC-level thermal sensor. The power sensors are read using command 0x15 (READ\_POWER\_SENSOR), while the thermal sensor is read using command 0x16 (READ\_THERMAL\_SENSOR), both on the platform services channel. The READ\_POWER\_SENSOR command take two input parameters called **SensorInstance** and **MeasurementFormat**, which are appended together to the command as the payload. **SensorInstance** specifies which power sensor is being referenced. **MeasurementFormat** specifies the measurement unit (watts or milliwatts) in which the power consumption is expressed. The command payload is thus formatted as follows:

```
typedef struct
{
    BYTE   SensorInstance;    // Which instance of the sensor is being read
    BYTE   MeasurementFormat; // 0 = mW, 1 = W
} COMMAND_PAYLOAD;
```

The power sensor for CPU cluster 0 is read by setting **SensorInstance** to 0x01, while the power sensor for CPU cluster 1 is read by setting **SensorInstance** to 0x02.

The response to the command from the platform is of the form:

```
typedef struct
{
    DWORD   Readings;        // The sensor value read
    DWORD   Status;          // Status of the operation – 0: success, non-zero: error
} SENSOR_RESPONSE;
```

Here, the field **Status** pertains to the success or failure of the requested service. Channel errors can occur independent of the service, during transmission of the request. A generic placeholder register, **CHANNEL\_STATUS\_REG**, and an associated error status field, **ERROR\_STATUS\_BIT**, is used as an illustration of how the channel status register may be read to detect channel errors during transit.

The ACPI Power Meter object may now be implemented for this example platform as follows:

```

Device (PMT0)          // ACPI Power Meter object for CPU Cluster 0 Power
Sensor

{
    Name (_HID, "ACPI000D") // ACPI Power Meter device

    // The Operation Region declaration based on section 5.5.2.4.7.4
    OperationRegion (PFRM, PCC, 0x07, 0x8C)
    Field(PFRM, ByteAcc, NoLock, Preserve)
    {
        FLGS, 32,           // Command Flags field
        LEN, 32,            // Length field
        CMD, 32,            // Command field
        DATA, 0x400          // Communication space of size 128 bytes
    }

    Method (_REG, 2)      // Check if OS Op region handler is available
    {
        // Check if Arg0.Byte0 = 0xA, PCC Operation Region Supported?
        // Check if Arg0.Byte1 = 0x3, subchannel type 3 as defined in Table 14-357

        // Disallow further processing until support for Type 3 becomes available
    }

    Method (_PMM, 0, Serialized)
    {
        // Read a Power sensor

        // Create the command buffer
        Name(BUFF, Buffer(0x80){})           // Create PCC data buffer as BUFF
        Name(PAYL, Buffer(2) {0x02, 0x01})   // Instance = CPU cluster 1
                                              // Read power in units of Watts

        Store (PAYL, DATA)                  // Only first two bytes written
                                              // the rest default to 0

        // Update the length and status fields
        Store (0x06, LEN)                  // 4B (command) + 2B (payload)
        Store (0x01, FLGS)                 // Set Notify on Completion

        // All done. Now write to the command field to begin transmission of
        // the message over the PCC subspace. On receipt, the platform will
        // read power sensor of CPU cluster 0 and return the power consumption
        // reading in the Operation Region itself
        //
        Store (0x15, CMD)                  // READ_POWER_SENSOR command = 0x15

        If(LEqual ( LAnd (CHANNEL_STATUS_REG, ERROR_STATUS_BIT), 0x01)
        {
            Return (0nes).                // Return invalid, so that the caller
        }
    }
}

```

```

        can take remedial steps
    }

    Store (DATA, BUFF)
    CreateDWordField(BUFF, 0x00, PCL1) // Power consumed by CPU cluster 1
    CreateDWordField(BUFF, 0x01, STAT) // Return status
    If(LEqual (STAT, 0x0))
    {
        Return(PCL1) // Return the power measurement for CPU
                      // cluster 1
    }
    Else
    {
        Return(Ones) // Return invalid
    }
}

```

## 5.6 ACPI Event Programming Model

The ACPI event programming model is based on the SCI interrupt and General-Purpose Event (GPE) register. ACPI provides an extensible method to raise and handle the SCI interrupt, as described in this section.

Hardware-reduced ACPI platforms ([Section 4.1](#)) use GPIO Interrupt Connections to signal ACPI Events, described in [Section 5.6.5](#), or Interrupt-signaled ACPI Events, described in [Section 5.6.9](#). Note that any ACPI platform may utilize GPIO-signaled and/or Interrupts-signaled ACPI events (i.e. they are not limited to Hardware-reduced ACPI platforms).

### 5.6.1 ACPI Event Programming Model Components

The components of the ACPI event programming model are the following:

- OSPM
- FADT
- PM1a\_STS, PM1b\_STS and PM1a\_EN, PM1b\_EN fixed register blocks
- GPE0\_BLK and GPE1\_BLK register blocks
- GPE register blocks defined in GPE block devices
- SCI interrupt
- ACPI AML code general-purpose event model
- ACPI device-specific model events
- ACPI Embedded Controller event model

The role of each component in the ACPI event programming model is described in the following table.

**Table 5-163 ACPI Event Programming Model Components**

Component	Description
OSPM	Receives all SCI interrupts raised (receives all SCI events). Either handles the event or masks the event off and later invokes an OEM-provided control method to handle the event. Events handled directly by OSPM are fixed ACPI events; interrupts handled by control methods are general-purpose events.
FADT	Specifies the base address for the following fixed register blocks on an ACPI-compatible platform: PM1x_STS and PM1x_EN fixed registers and the GPEx_STS and GPEx_EN fixed registers.
PM1x_STS and PM1x_EN fixed registers	PM1x_STS bits raise fixed ACPI events. While a PM1x_STS bit is set, if the matching PM1x_EN bit is set, the ACPI SCI event is raised.
GPEx_STS and GPEx_EN fixed registers	GPEx_STS bits that raise general-purpose events. For every event bit implemented in GPEx_STS, there must be a comparable bit in GPEx_EN. Up to 256 GPEx_STS bits and matching GPEx_EN bits can be implemented. While a GPEx_STS bit is set, if the matching GPEx_EN bit is set, then the general-purpose SCI event is raised.
SCI interrupt	A level-sensitive, shareable interrupt mapped to a declared interrupt vector. The SCI interrupt vector can be shared with other low-priority interrupts that have a low frequency of occurrence.
ACPI AML code general-purpose event model	A model that allows OEM AML code to use GPEx_STS events. This includes using GPEx_STS events as “wake” sources as well as other general service events defined by the OEM (“button pressed,” “thermal event,” “device present/not present changed,” and so on).
ACPI device-specific model events	Devices in the ACPI namespace that have ACPI-specific device IDs can provide additional event model functionality. In particular, the ACPI embedded controller device provides a generic event model.
ACPI Embedded Controller event model	A model that allows OEM AML code to use the response from the Embedded Controller Query command to provide general-service event defined by the OEM.

## 5.6.2 Types of ACPI Events

At the ACPI hardware level, two types of events can be signaled by an SCI interrupt:

- Fixed ACPI events
- General-purpose events

In turn, the general-purpose events can be used to provide further levels of events to the system. And, as in the case of the embedded controller, a well-defined second-level event dispatching is defined to make a third type of typical ACPI event. For the flexibility common in today’s designs, two first-level general-purpose event blocks are defined, and the embedded controller construct allows a large number of embedded controller second-level event-dispatching tables to be supported. Then if needed, the OEM can also build additional levels of event dispatching by using AML code on a general-purpose event to sub-dispatch in an OEM defined manner.

### 5.6.3 Fixed Event Handling

When OSPM receives a fixed ACPI event, it directly reads and handles the event registers itself. The following table lists the fixed ACPI events. For a detailed specification of each event, see [Section 4](#), “ACPI Hardware Specification.”

**Table 5-164 Fixed ACPI Events**

Event	Comment
Power management timer carry bit set.	For more information, see the description of the TMR_STS and TMR_EN bits of the PM1x fixed register block in <a href="#">Section 4.8.3.1</a> , “PM1 Event Grouping,” as well as the TMR_VAL register in the PM_TMR_BLK in <a href="#">Section 4.8.3.3</a> , “Power Management Timer.”
Power button signal	A power button can be supplied in two ways. One way is to simply use the fixed status bit, and the other uses the declaration of an ACPI power device and AML code to determine the event. For more information about the alternate-device based power button, see <a href="#">Section 4.8.2.2.1.2</a> , Control Method Power Button. Notice that during the S0 state, both the power and sleep buttons merely notify OSPM that they were pressed. If the system does not have a sleep button, it is recommended that OSPM use the power button to initiate sleep operations as requested by the user.
Sleep button signal	A sleep button can be supplied in one of two ways. One way is to simply use the fixed status button. The other way requires the declaration of an ACPI sleep button device and AML code to determine the event.
RTC alarm	ACPI defines an RTC wake alarm function with a minimum of one-month granularity. The ACPI status bit for the device is optional. If the ACPI status bit is not present, the RTC status can be used to determine when an alarm has occurred. For more information, see the description of the RTC_STS and RTC_EN bits of the PM1x fixed register block in <a href="#">Section 4.8.3.1</a> , “PM1 Event Grouping.”
Wake status	The wake status bit is used to determine when the sleeping state has been completed. For more information, see the description of the WAK_STS and WAK_EN bits of the PM1x fixed register block in <a href="#">Section 4.8.3.1</a> , “PM1 Event Grouping.”
System bus master request	The bus-master status bit provides feedback from the hardware as to when a bus master cycle has occurred. This is necessary for supporting the processor C3 power savings state. For more information, see the description of the BM_STS bit of the PM1x fixed register block in <a href="#">Section 4.8.3.1</a> , “PM1 Event Grouping.”
Global release status	This status is raised as a result of the Global Lock protocol, and is handled by OSPM as part of Global Lock synchronization. For more information, see the description of the GBL_STS bit of the PM1x fixed register block in <a href="#">Section 4.8.3.1</a> , “PM1 Event Grouping.” For more information on Global Lock, see <a href="#">Section 5.2.10.1</a> , “Global Lock.”

### 5.6.4 General-Purpose Event Handling

When OSPM receives a general-purpose event, it either passes control to an ACPI-aware driver, or uses an OEM-supplied control method to handle the event. An OEM can implement up to 128 general-purpose event inputs in hardware per GPE block, each as either a level or edge event. It is also possible to implement a single 256-pin block as long as it’s the only block defined in the system.

An example of a general-purpose event is specified in [Section 4](#), “ACPI Hardware Specification,” where EC\_STS and EC\_EN bits are defined to enable OSPM to communicate with an ACPI-aware embedded controller device driver. The EC\_STS bit is set when either an interface in the embedded controller space has generated an interrupt or the embedded controller interface needs servicing. Notice that if a platform uses an embedded controller in the ACPI environment, then the embedded controller’s SCI output must be directly and exclusively tied to a single GPE input bit.

Hardware can cascade other general-purpose events from a bit in the GPEx\_BLK through status and enable bits in Operational Regions (I/O space, memory space, PCI configuration space, or embedded controller space). For more information, see the specification of the General-Purpose Event Blocks (GPEx\_BLK) in [Section 4.8.4.1](#), “General-Purpose Event Register Blocks.”

OSPM manages the bits in the GPEx blocks directly, although the source to those events is not directly known and is connected into the system by control methods. When OSPM receives a general-purpose event (the event is from either a GPEx\_BLK STS bit, a GPIO pin, or an Interrupt), OSPM does the following:

1. Disables the interrupt source
  - (GPEx\_BLK EN bit).
  - GPIO interrupt for GPIO-signaled events
  - Interrupt for Interrupt-signaled events
2. If an edge event, clears the status bit.
3. Performs one of the following:
  - Dispatches to an ACPI-aware device driver.
  - Queues the matching control method for execution.
  - Manages a wake event using device \_PRW objects.
4. If a level event, waits for the control method handler to complete and clears the status bit.
5. Enables the interrupt source.

For OSPM to manage the bits in the GPEx\_BLK blocks directly:

- Enable bits must be read/write.
- Status bits must be latching.
- Status bits must be read/clear, and cleared by writing a “1” to the status bit.

#### **5.6.4.1 \_Exx, \_Lxx, and \_Qxx Methods for GPE Processing**

The OEM AML code can perform OEM-specific functions custom to each event the particular platform might generate by executing a control method that matches the event. For GPE events, OSPM will execute the control method of the name `\_GPE._TXX` where *XX* is the hex value format of the event that needs to be handled and *T* indicates the event handling type (*T* must be either ‘E’ for an *edge* event or ‘L’ for a *level* event). The event values for status bits in GPE0\_BLK start at zero (`_T00`) and end at the `(GPE0_BLK_LEN / 2) - 1`. The event values for status bits in GPE1\_BLK start at GPE1\_BASE and end at `GPE1_BASE + (GPE1_BLK_LEN / 2) - 1`. GPE0\_BLK\_LEN, GPE1\_BASE, and GPE1\_BLK\_LEN are all defined in the FADT.

The `_Qxx` methods are used for the Embedded Controller and SMBus (below.)

### 5.6.4.1.1 Queuing the Matching Control Method for Execution

When a general-purpose event is raised, OSPM uses a naming convention to determine which control method to queue for execution and how the GPE EOI is to be handled. The GPE<sub>Ex</sub>\_STS bits in the GPE<sub>0</sub>\_BLK are indexed with a number from 0 through FF. The name of the control method to queue for an event raised from an enable status bit is always of the form \\_GPE.<sub>x</sub> where xx is the event value and T indicates the event EOI protocol to use (either 'E' for edge triggered, or 'L' for level triggered). The event values for status bits in GPE<sub>0</sub>\_BLK start at zero (\_T00), end at the (GPE<sub>0</sub>\_BLK\_LEN / 2) - 1, and correspond to each status bit index within GPE<sub>0</sub>\_BLK. The event values for status bits in GPE<sub>1</sub>\_BLK are offset by GPE\_BASE and therefore start at GPE<sub>1</sub>\_BASE and end at GPE<sub>1</sub>\_BASE + (GPE<sub>1</sub>\_BLK\_LEN / 2) - 1.

For example, suppose an OEM supplies a wake event for a communications port and uses bit 4 of the GPE<sub>0</sub>\_STS bits to raise the wake event status. In an OEM-provided Definition Block, there must be a Method declaration that uses the name \\_GPE.\_L04 or \GPE.\_E04 to handle the event. An example of a control method declaration using such a name is the following:

```
Method (\_GPE._L04) { // GPE 4 level wake handler
    Notify (\_SB.PCI0.COM0, 2)
}
```

The control method performs whatever action is appropriate for the event it handles. For example, if the event means that a device has appeared in a slot, the control method might acknowledge the event to some other hardware register and signal a change notify request of the appropriate device object. Or, the cause of the general-purpose event can result from more than one source, in which case the control method for that event determines the source and takes the appropriate action.

When a general-purpose event is raised from the GPE bit tied to an embedded controller, the embedded controller driver uses another naming convention defined by ACPI for the embedded controller driver to determine which control method to queue for execution. The queries that the embedded controller driver exchanges with the embedded controller are numbered from 0 through FF, yielding event codes 01 through FF. (A query response of 0 from the embedded controller is reserved for "no outstanding events.") The name of the control method to queue is always of the form \_Qxx where xx is the number of the query acknowledged by the embedded controller. An example declaration for a control method that handles an embedded controller query is the following:

```
Method(_Q34) { // embedded controller event for thermal
    Notify (\_SB.TZ0.THM1, 0x80)
}
```

When an SMBus alarm is handled by the SMBus driver, the SMBus driver uses a similar naming convention defined by ACPI for the driver to determine the control method to queue for execution. When an alarm is received by the SMBus host controller, it generally receives the SMBus address of the device issuing the alarm and one word of data. On implementations that use SMBALERT# for notifications, only the device address will be received. The name of the control method to queue is always of the form \_Qxx where xx is the SMBus address of the device that issued the alarm. The SMBus address is 7 bits long corresponding to hex values 0 through 7F, although some addresses are reserved and will not be used. The control method will always be queued with one argument that contains the word of data received with the alarm. An exception is the case of an SMBus using SMBALERT# for

notifications, in this case the argument will be 0. An example declaration for a control method that handles a SMBus alarm follows:

```
Method(_Q18, 1) {      // Thermal sensor device at address 001 1000
    // Arg0 contains notification value (if any)
    // Arg0 = 0 if device supports only SMBALERT#
    Notify (\_SB.TZ0.THM1, 0x80)
}
```

#### 5.6.4.1.2 Dispatching to an ACPI-Aware Device Driver

Certain device support, such as an embedded controller, requires a dedicated GPE to service the device. Such GPEs are dispatched to native OS code to be handled and not to the corresponding GPE-specific control method.

In the case of the embedded controller, an OS-native, ACPI-aware driver is given the GPE event for its device. This driver services the embedded controller device and determines when events are to be reported by the embedded controller by using the Query command. When an embedded controller event occurs, the ACPI-aware driver dispatches the requests to other ACPI-aware drivers that have registered to handle the embedded controller queries or queues control methods to handle each event. If there is no device driver to handle specific queries, OEM AML code can perform OEM-specific functions that are customized to each event on the particular platform by including specific control methods in the namespace to handle these events. For an embedded controller event, OSPM will queue the control method of the name \_QXX, where XX is the hex format of the query code. Notice that each embedded controller device can have query event control methods.

Similarly, for an SMBus driver, if no driver registers for SMBus alarms, the SMBus driver will queue control methods to handle these. Methods must be placed under the SMBus device with the name \_QXX where XX is the hex format of the SMBus address of the device sending the alarm.

#### 5.6.4.2 GPE Wake Events

An important use of the general-purpose events is to implement device wake events. The components of the ACPI event programming model interact in the following way:

- When a device asserts its wake signal, the general-purpose status event bit used to track that device is set.
- While the corresponding general-purpose enable bit is enabled, the SCI interrupt is asserted.
- If the system is sleeping, this will cause the hardware, if possible, to transition the system into the S0 state.
- Once the system is running, OSPM will dispatch the corresponding GPE handler.
- The handler needs to determine which device object has signaled wake and performs a wake Notify
- command on the corresponding device object(s) that have asserted wake.
- In turn OSPM will notify OSPM native driver(s) for each device that will wake its device to service it.

Events that wake may not be intermixed with non-wake (runtime) events on the same GPE input. The only exception to this rule is made for the special devices below. Only the following devices are allowed to utilize a single GPE for both wake and runtime events:

1. Button Devices
  - PNP0C0C — Power Button Device
  - PNP0C0D — Lid Device
  - PNP0C0E — Sleep Button Device
2. PCI Bus Wakeup Event Reporting (PME)
  - PNP0A03 — PCI Host Bridge

All wake events that are not exclusively tied to a GPE input (for example, one input is shared for multiple wake events) must have individual enable and status bits in order to properly handle the semantics used by the system.

#### **5.6.4.2.1 Managing a Wake Event Using Device \_PRW Objects**

A device's \_PRW object provides the zero-based bit index into the general-purpose status register block to indicate which general-purpose status bit from either GPE0\_BLK or GPE1\_BLK is used as the specific device's wake mask. Although the hardware must maintain individual device wake enable bits, the system can have multiple devices using the same general-purpose event bit by using OEM-specific hardware to provide second-level status and enable bits. In this case, the OEM AML code is responsible for the second-level enable and status bits.

OSPM enables or disables the device wake function by enabling or disabling its corresponding GPE and by executing its \_PSW control method (which is used to take care of the second-level enables). When the GPE is asserted, OSPM still executes the corresponding GPE control method that determines which device wakes are asserted and notifies the corresponding device objects. The native OS driver is then notified that its device has asserted wake, for which the driver powers on its device to service it.

If the system is in a sleeping state when the enabled GPE bit is asserted the hardware will transition the system into the S0 state, if possible.

#### **5.6.4.2.2 Determining the System Wake Source Using \_Wxx Control Methods**

After a transition to the S0 state, OSPM may evaluate the \_SWS object in the \\_GPE scope to determine the index of the GPE that was the source of the transition event. When a single GPE is shared among multiple devices, the platform provides a \_Wxx control method, where xx is GPE index as described in [Section 5.6.4.2.2](#), that allows the source device of the transition to be determined. If implemented, the \_Wxx control method must exist in the \\_GPE scope or in the scope of a GPE block device.

If \_Wxx is implemented, either hardware or firmware must detect and save the source device as described in [Section 7.4.3](#), “\_SWS (System Wake Source)”. During invocation, the \_Wxx control method determines the source device and issues a **Notify(<device>,0x2)** on the device that caused the system to transition to the S0 state. If the device uses a bus-specific method of arming for wakeup, then the **Notify** must be issued on the parent of the device that has a \_PRW method. The \_Wxx method must issue a **Notify(<device>,0x2)** only to devices that contain a \_PRW method within their device scope. OSPM's evaluation of the \_SWS and \_Wxx objects is indeterminate. As such, the platform must not rely on \_SWS or \_Wxx evaluation to clear any hardware state, including GPEx\_STS bits, or to perform any wakeup-related actions.

If the GPE index returned by the \_SWS object is only referenced by a single \_PRW object in the system, it is implied that the device containing that \_PRW is the wake source. In this case, it is not necessary for the platform to provide a \_Wxx method.

## 5.6.5 GPIO-signaled ACPI Events

On Hardware-reduced ACPI platforms, ACPI events can be signaled when a GPIO Interrupt is received by OSPM, and that GPIO Interrupt Connection is listed in a GPIO controller device's \_AEI object. OSPM claims all such GPIO interrupts, and maps them to the appropriate event method required by the ACPI event model.

### 5.6.5.1 Declaring GPIO Controller Devices

A GPIO controller is modeled as a device in the namespace, with \_HID or \_ADR and \_CRS objects, at a minimum. Optionally, the GPIO controller device scope may include GeneralPurposeIO OpRegion declarations ([Section 5.5.2.4.5](#)) and GPIO interrupt-to-ACPI Event mappings ([Section 5.6.5.2](#)). Note that for GPIO-signaled ACPI events, the corresponding event method (e.g. \_Exx, \_Lxx, or \_EVT) must also appear in the target GPIO controller's scope. For GPIO event numbers larger than 255 (0xFF), the \_EVT method is used.

Each pin on a GPIO Controller has a configuration (e.g. level-sensitive interrupt, de-bounced input, high-drive output, etc.), which is described to OSPM in the GPIO Interrupt or GPIO IO Connection resources claimed by peripheral devices or used in operation region accesses.

### 5.6.5.2 \_AEI Object for GPIO-signaled Events

The \_AEI object designates those GPIO interrupts that shall be handled by OSPM as ACPI events (See [Section 5.6.5](#)). This object appears within the scope of the GPIO controller device whose pins are to be used as GPIO-signaled events.

#### Arguments:

None

#### Return Value:

A resource template **Buffer** containing only GPIO Interrupt Connection descriptors.

#### Example:

```
Device (\_SB.GPI2)
{
    Name(_HID, "XYZ0003")
    Name(_UID, 2)           //Third instance of this controller on
                           //the platform
    Name(_CRS, ResourceTemplate ())
    {
        //Register Interface
        MEMORY32FIXED(ReadWrite, 0x30000000, 0x200, )
                           //Interrupt Line (GSI V 21)
        Interrupt(ResourceConsumer, Level, ActiveHigh, Exclusive) {21}
    }
    Name(_AEI, ResourceTemplate ())
```

```

{
    //Thermal Zone Event
    GpioInt(Edge, ActiveHigh, Exclusive, PullDown, , "\_SB.GPI2") {14}
        //Power Button
    GpioInt(Edge, ActiveLow, ExclusiveAndWake, PullUp, , "\_SB.GPI2") {36}
}
}

```

### 5.6.5.3 The Event (\_EVT) Method for Handling GPIO-signaled Events

GPIO Interrupt Connection Descriptors assign GPIO pins a controller-relative, 0-based pin number. GPIO Pin numbers can be as large as 65, 535. GPIO Interrupt Connections that are assigned by the platform to signal ACPI events are listed in the \_AEI object under the GPIO controller. Since the GPIO interrupt connection descriptor also provides the mode of the interrupt associated with an event, it gives OSPM all the information it needs to invoke a handler method for the event. No naming convention is required to encode the mode and pin number of the event. Instead, a handler for a GPIO-signaled event simply needs to have a well-known name and take the pin number of the event as a parameter. A single instance of the method handles all ACPI events for a given GPIO controller device.

For GPIO-signaled events, the Event (\_EVT) method is used.

\_EVT is defined as follows:

#### Arguments: (1)

**Arg0** - EventNumber. An Integer indicating the event number (Controller-relative zero-based GPIO pin number) of the current event. Must be in the range 0x0000 - 0xffff.

#### **Return Value:**

None

#### **Description**

The \_EVT method handles a GPIO-signaled event. It must appear within the scope of the GPIO controller device whose pins are used to signal the event.

OSPM handles GPIO-signaled events as follows:

- The GPIO interrupt is handled by OSPM because it is listed in the \_AEI object under a GPIO controller.
- When the event fires, OSPM handles the interrupt according to its mode and invokes the \_EVT method, passing it the pin number of the event.
- From this point on, handling is exactly like that for GPEs. The \_EVT method does a Notify() on the appropriate device, and OS-specific mechanisms are used to notify the driver of the event.

**Note:** For event numbers less than 255, \_Exx and \_Lxx methods may be used instead. In this case, they take precedence and \_EVT will not be invoked.

**Example:**

```

Scope (\_SB.GPI 2)
{
    Method (_EVT, 1) { // Handle all ACPI Events signalled by GPIO Controller GPI 2
        Switch (Arg0)
        {
            Case (300) {
                ...
                Notify (\_SB.DEVX, 0x80)
            }
            Case (1801) {
                ...
                Notify (\_SB.DEVY, 0x80)
            }
            Case (14...) {
                ...
                Notify (\_SB.DEVZ, 0x80)
            }
            ...
        }
    } //End of Method
} //End of Scope

```

## 5.6.6 Device Object Notifications

During normal operation, the platform needs to notify OSPM of various device-related events. These notifications are accomplished using the Notify operator, which indicates a target device, thermal zone, or processor object and a notification value that signifies the purpose of the notification. Notification values from 0 through 0x7F are common across all device object types. Notification values of 0xC0 and above are reserved for definition by hardware vendors for hardware specific notifications. Notification values from 0x80 to 0xBF are device-specific and defined by each such device. For more information on the Notify operator, see [Section 19.6.93, “Notify”](#).

**Table 5-165 Device Object Notification Values**

<b>Value</b>	<b>Description</b>
0	<b>Bus Check.</b> This notification is performed on a device object to indicate to OSPM that it needs to perform a Plug and Play re-enumeration operation on the device tree starting from the point where it has been notified. OSPM will typically perform a full enumeration automatically at boot time, but after system initialization it is the responsibility of the ACPI AML code to notify OSPM whenever a re-enumeration operation is required. The more accurately and closer to the actual change in the device tree the notification can be done, the more efficient the operating system's response will be; however, it can also be an issue when a device change cannot be confirmed. For example, if the hardware cannot recognize a device change for a particular location during a system sleeping state, it issues a Bus Check notification on wake to inform OSPM that it needs to check the configuration for a device change.
1	<b>Device Check.</b> Used to notify OSPM that the device either appeared or disappeared. If the device has appeared, OSPM will re-enumerate from the parent. If the device has disappeared, OSPM will invalidate the state of the device. OSPM may optimize out re-enumeration. If _DCK is present, then Notify( <i>object</i> ,1) is assumed to indicate an undock request. If the device is a bridge, OSPM may re-enumerate the bridge and the child bus.
2	<b>Device Wake.</b> Used to notify OSPM that the device has signaled its wake event, and that OSPM needs to notify OSPM native device driver for the device. This is only used for devices that support _PRW.
3	<b>Eject Request.</b> Used to notify OSPM that the device should be ejected, and that OSPM needs to perform the Plug and Play ejection operation. OSPM will run the _EJx method.
4	<b>Device Check Light.</b> Used to notify OSPM that the device either appeared or disappeared. If the device has appeared, OSPM will re-enumerate from the device itself, not the parent. If the device has disappeared, OSPM will invalidate the state of the device.
5	<b>Frequency Mismatch.</b> Used to notify OSPM that a device inserted into a slot cannot be attached to the bus because the device cannot be operated at the current frequency of the bus. For example, this would be used if a user tried to hot-plug a 33 MHz PCI device into a slot that was on a bus running at greater than 33 MHz.
6	<b>Bus Mode Mismatch.</b> Used to notify OSPM that a device has been inserted into a slot or bay that cannot support the device in its current mode of operation. For example, this would be used if a user tried to hot-plug a PCI device into a slot that was on a bus running in PCI-X mode.
7	<b>Power Fault.</b> Used to notify OSPM that a device cannot be moved out of the D3 state because of a power fault.
8	<b>Capabilities Check.</b> This notification is performed on a device object to indicate to OSPM that it needs to re-evaluate the _OSC control method associated with the device.
9	<b>Device _PLD Check.</b> Used to notify OSPM to reevaluate the _PLD object, as the Device's connection point has changed.
0xA	<i>Reserved.</i>
0xB	<b>System Locality Information Update.</b> Dynamic reconfiguration of the system may cause existing relative distance information to change. The platform sends the System Locality Information Update notification to a point on a device tree to indicate to OSPM that it needs to invoke the _SLI objects associated with the System Localities on the device tree starting from the point notified.

Value	Description
0x0C	<i>Reserved.</i>
0x0D	<b>System Resource Affinity Update.</b> Dynamic migration of devices may cause existing system resource affinity to change. The platform software issues the System Resource Affinity Update notification to a point on a device tree to indicate to OSPM that it needs to invoke the _PXM object of the notified device to update the resource affinity.
0x0E	<b>Heterogeneous Memory Attributes Update.</b> Dynamic reconfiguration of the system may cause existing latency, bandwidth or memory side caching attribute to change. The platform software issues the Heterogeneous Memory Attributes Update notification to a point on a device tree to indicate to OSPM that it needs to invoke the _HMA objects associated with the Heterogeneous Memory Attributes on the device tree starting from the point notified.
0x0F	<b>Error Disconnect Recover:</b> Used to notify OSPM of asynchronous removal of devices for error containment purposes. The notification is issued on a bus device that is still present, but one or more of its child device have been disconnected from the system due to an error condition. OSPM should invalidate the software state associated with the disconnected child devices without attempting to access these child devices. Subsequently, OSPM can optionally attempt to recover the disconnected child devices and, if possible, bring them back to functional state via bus specific methods. OSPM communicates the status of these recovery operations to the Firmware via the _OST method. <a href="#">Section 6.3.5.2</a> describes the associated _OST status codes. OSPM support for Error Disconnect Recover notification for a given type of bus is enumerated via a bus specific mechanism.
0x10-0xFF	<i>Reserved.</i>

Below are the notification values defined for specific ACPI devices. For more information concerning the object-specific notification, see the section on the corresponding device/object.

**Table 5-166 System Bus Notification Values**

Hex value	Description
0x80	Reserved.
0x81	<b>Graceful Shutdown Request.</b> Used to notify OSPM that a graceful shutdown of the operating system has been requested. Once the operating system has finished its graceful shutdown procedure it should initiate a transition to the G2 "soft off" state. The Notify operator must target the System Bus: (\_SB). See <a href="#">Section 6.3.5</a> for a description of shutdown processing.

**Table 5-167 Control Method Battery Device Notification Values**

Hex value	Description
0x80	<b>Battery Status Changed.</b> Used to notify OSPM that the Control Method Battery device status has changed.
0x81	<b>Battery Information Changed.</b> Used to notify OSPM that the Control Method Battery device information has changed. This only occurs when a battery is replaced.
0x82	<b>Battery Maintenance Data Status Flags Check.</b> Used to notify OSPM that the Control Method Battery device battery maintenance data status flags should be checked.
0x83-0xBF	<i>Reserved.</i>

**Table 5-168 Power Source Object Notification Values**

Hex value	Description
0x80	<b>Power Source Status Changed.</b> Used to notify OSPM that the power source status has changed.
0x81	<b>Power Source Information Changed.</b> Used to notify OSPM that the power source information has changed.
0x82-0xBF	<i>Reserved.</i>

**Table 5-169 Thermal Zone Object Notification Values**

Hex value	Description
0x80	<b>Thermal Zone Status Changed.</b> Used to notify OSPM that the thermal zone temperature has changed.
0x81	<b>Thermal Zone Trip points Changed.</b> Used to notify OSPM that the thermal zone trip points have changed.
0x82	<b>Device Lists Changed.</b> Used to notify OSPM that the thermal zone device lists (_ALx, _PSL, _TZD) have changed.
0x83	<b>Thermal / Active Cooling Relationship Table Changed.</b> Used to notify OSPM that values in the either the thermal relationship table or the active cooling relationship table have changed.
0x84-0xBF	<i>Reserved.</i>

**Table 5-170 Control Method Power Button Notification Values**

Hex value	Description
0x80	<b>S0 Power Button Pressed.</b> Used to notify OSPM that the power button has been pressed while the system is in the S0 state. Notice that when the button is pressed while the system is in the S1-S4 state, a Device Wake notification must be issued instead.
0x81-0xBF	<i>Reserved.</i>

**Table 5-171 Control Method Sleep Button Notification Values**

Hex value	Description
0x80	<b>S0 Sleep Button Pressed.</b> Used to notify OSPM that the sleep button has been pressed while the system is in the S0 state. Notice that when the button is pressed while the system is in the S1-S4 state, a Device Wake notification must be issued instead.
0x81-0xBF	Reserved.

**Table 5-172 Control Method Lid Notification Values**

Hex value	Description
0x80	<b>Lid Status Changed.</b> Used to notify OSPM that the control method lid device status has changed.
0x81-0xBF	Reserved.

**Table 5-173 NVDIMM Root Device Notification Values**

Hex Value	Description
0x80	<b>NFIT Update Notification.</b> Used to notify OSPM that it needs to re-evaluate the _FIT method under the NVDIMM root device (see <a href="#">Section 9.20.2</a> ).
0x81	<b>Unconsumed Uncorrectable Memory Error Detected.</b> Used to pro-actively notify OSPM of uncorrectable memory errors detected (for example a memory scrubbing engine that continuously scans the NVDIMMs memory). This is an optional notification. Only locations that were mapped in to SPA by the platform will generate a notification.
0x82	<b>ARS Stopped Notification.</b> This is an optional notification, used to notify OSPM when the platform completes ARS or when ARS has stopped prematurely for any ARS that was either started by the platform or by OSPM via <b>Start ARS</b> (see <a href="#">Section 9.20.7.5</a> ). The OSPM can evaluate <b>Query ARS Status</b> on receiving this event notification.
0x83-0xBF	Reserved

**Table 5-174 NVDIMM Device Notification Values**

Hex Value	Description
0x80	Reserved
0x81	<b>NFIT Health Event Notification.</b> Used to notify OSPM of health event(s) for the NVDIMM device (see <a href="#">Section 9.20.3</a> ). On receiving the NFIT Health Event Notification, the OSPM is required to determine new health event by re-enumerating the health of the corresponding NVDIMM device. This could be accomplished by evaluating _NCH method (see <a href="#">Section 9.20.8.1</a> ) or _DSM method under the NVDIMM device. This is also used to notify OSPM of a change in “Overall Health Status Attributes” field reported by _NCH method.
0x82-0xBF	Reserved

**Table 5-175 Processor Device Notification Values**

Hex value	Description
0x80	<b>Performance Present Capabilities Changed.</b> Used to notify OSPM that the number of supported processor performance states has changed. This notification causes OSPM to re-evaluate the _PPC object. See <a href="#">Section 8</a> “Processor Configuration and Control,” for more information.
0x81	<b>C States Changed.</b> Used to notify OSPM that the number or type of supported processor C States has changed. This notification causes OSPM to re-evaluate the _CST object. See <a href="#">Section 8</a> , “Processor Configuration and Control,” for more information.
0x82	<b>Throttling Present Capabilities Changed.</b> Used to notify OSPM that the number of supported processor throttling states has changed. This notification causes OSPM to re-evaluate the _TPC object. See <a href="#">Section 8</a> , “Processor Configuration and Control,” for more information.
0x83	<b>Guaranteed Changed.</b> Used to notify OSPM that the value of the CPPC Guaranteed Register has changed.
0x84	<b>Minimum Excursion.</b> Used to notify OSPM that an excursion to CPPC Minimum has occurred.
0x85	<b>Highest Performance Changed.</b> Used to notify OSPM that the value of the CPPC Highest Performance Register has changed.
0x86-0xBF	<i>Reserved.</i>

**Table 5-176 User Presence Device Notification Values**

Hex value	Description
0x80	<b>User Presence Changed.</b> Used to notify OSPM that a meaningful change in user presence has occurred, causing OSPM to re-evaluate the _UPD object.
0x81-0xBF	<i>Reserved.</i>

**Table 5-177 Ambient Light Sensor Device Notification Values**

Hex value	Description
0x80	<b>ALS Illuminance Changed.</b> Used to notify OSPM that a meaningful change in ambient light illuminance has occurred, causing OSPM to re-evaluate the _ALI object.
0x81	<b>ALS Color Temperature Changed.</b> Used to notify OSPM that a meaningful change in ambient light color temperature or chromaticity has occurred, causing OSPM to re-evaluate the _ALT and/or _ALC objects.
0x82	<b>ALS Response Changed.</b> Used to notify OSPM that the set of points used to convey the ambient light response has changed, causing OSPM to re-evaluate the _ALR object.
0x83-0xBF	<i>Reserved.</i>

**Table 5-178 Power Meter Object Notification Values**

Hex value	Description
0x80	<b>Power Meter Capabilities Changed.</b> Used to notify OSPM that the power meter information has changed.
0x81	<b>Power Meter Trip Points Crossed.</b> Used to notify OSPM that one of the power meter trip points has been crossed.
0x82	<b>Power Meter Hardware Limit Changed.</b> Used to notify OSPM that the hardware limit has been changed by the platform.
0x83	<b>Power Meter Hardware Limit Enforced.</b> Used to notify OSPM that the hardware limit has been enforced by the platform.
0x84	Power Meter Averaging Interval Changed. Used to notify OSPM that the power averaging interval has changed.
0x85-0xBF	<i>Reserved.</i>

**Table 5-179 Processor Aggregator Device Notification Values**

Hex value	Description
0x80	<b>Processor Utilisation Request.</b> Used to notify OSPM that OSPM evaluates the _PUR object which indicates to OSPM the number of logical processors to be idled.
0x81-0xBF	<i>Reserved.</i>

**Table 5-180 Error Device Notification Values**

Hex value	Description
0x80	<b>Notification For Generic Error Sources.</b> Used to notify OSPM to respond to this notification by checking the error status block of all generic error sources to identify the source reporting the error.
0x81-0xBF	<i>Reserved.</i>

**Table 5-181 Fan Device Notification Values**

Hex value	Description
0x80	<b>Low Fan Speed.</b> Used to notify OSPM of a low (errant) fan speed. Causes OSPM to re-evaluate the _FSL object.
0x81-0xBF	<i>Reserved.</i>

**Table 5-182 Memory Device Notification Values**

Hex value	Description
0x80	<b>Memory Bandwidth Low Threshold crossed.</b> Used to notify OSPM that bandwidth of memory described by the memory device has been reduced by the platform to less than the low memory bandwidth threshold.
0x81	<b>Memory Bandwidth High Threshold crossed.</b> Used to notify OSPM that bandwidth of memory described by the memory device has been increased by the platform to greater than or equal to the high memory bandwidth threshold.
0x82-0xBF	<i>Reserved.</i>

### 5.6.7 Device Class-Specific Objects

Most device objects are controlled through generic objects and control methods and they have generic device IDs. These generic objects, control methods, and device IDs are specified in [Section 6](#), through [Section 11](#). [Section 5.6.8](#), “Predefined ACPI Names for Objects, Methods, and Resources,” lists all the generic objects and control methods defined in this specification.

However, certain integrated devices require support for some device-specific ACPI controls. This section lists these devices, along with the device-specific ACPI controls that can be provided.

Some of these controls are for ACPI-aware devices and as such have Plug and Play IDs that represent these devices. The table below lists the Plug and Play IDs defined by the ACPI specification.

**Note:** *Plug and Play IDs that are not defined by the ACPI specification are defined and described in the “Links to ACPI-Related Documents” (<http://uefi.org/acpi>) under the heading “Legacy PNP Guidelines”.*

**Table 5-183 ACPI Device IDs**

Plug and Play ID	Description
PNP0C08	<b>ACPI.</b> Not declared in ACPI as a device. This ID is used by OSPM for the hardware resources consumed by the ACPI fixed register spaces, and the operation regions used by AML code. It represents the core ACPI hardware itself.
PNP0A05	<b>Generic Container Device.</b> A device whose settings are totally controlled by its ACPI resource information, and otherwise needs no device or bus-specific driver support. This was originally known as Generic ISA Bus Device. This ID should only be used for containers that do not produce resources for consumption by child devices. Any system resources claimed by a PNP0A05 device’s _CRS object must be consumed by the container itself.
PNP0A06	<b>Generic Container Device.</b> This device behaves exactly the same as the PNP0A05 device. This was originally known as Extended I/O Bus. This ID should only be used for containers that do not produce resources for consumption by child devices. Any system resources claimed by a PNP0A06 device’s _CRS object must be consumed by the container itself.
PNP0C09	<b>Embedded Controller Device.</b> A host embedded controller controlled through an ACPI-aware driver.

Plug and Play ID	Description
PNP0COA	<b>Control Method Battery.</b> A device that solely implements the ACPI Control Method Battery functions. A device that has some other primary function would use its normal device ID. This ID is used when the devices primary function is that of a battery.
PNP0C0B	<b>Fan.</b> A device that causes cooling when “on” (D0 device state).
PNP0C0C	<b>Power Button Device.</b> A device controlled through an ACPI-aware driver that provides power button functionality. This device is only needed if the power button is not supported using the fixed register space.
PNP0C0D	<b>Lid Device.</b> A device controlled through an ACPI-aware driver that provides lid status functionality. This device is only needed if the lid state is not supported using the fixed register space.
PNP0C0E	<b>Sleep Button Device.</b> A device controlled through an ACPI-aware driver that provides power button functionality. This device is optional.
PNP0C0F	<b>PCI Interrupt Link Device.</b> A device that allocates an interrupt connected to a PCI interrupt pin. See <a href="#">Section 6.</a> , “Device Configuration,” for more details.
PNP0C80	<b>Memory Device.</b> This device is a memory subsystem.
ACPI0001	<b>SMBus 1.0 Host Controller.</b> An SMBus host controller (SMB-HC) compatible with the embedded controller-based SMB-HC interface (as specified in <a href="#">Section 12.9</a> “SMBus Host Controller Interface via Embedded Controller”) and implementing the SMBus 1.0 Specification.
ACPI0002	<b>Smart Battery Subsystem.</b> The Smart battery Subsystem specified in <a href="#">Section 10</a> , “Power Source Devices.”
ACPI0003	<b>Power Source Device.</b> The Power Source device specified in <a href="#">Section 10</a> , “Power Source Devices.” This can represent either an AC Adapter (on mobile platforms) or a fixed Power Supply.
ACPI0004	<b>Module Device.</b> This device is a container object that acts as a bus node in a namespace. A Module Device without any of the _CRS, _PRS and _SRS methods behaves the same way as the Generic Container Devices (PNP0A05 or PNP0A06). If the Module Device contains a _CRS method, only these resources described in the _CRS are available for consumption by its child devices. Also, the Module Device can support _PRS and _SRS methods if _CRS is supported.
ACPI0005	<b>SMBus 2.0 Host Controller.</b> An SMBus host controller (SMB-HC compatible with the embedded controller-based SMB-HC interface (as specified in <a href="#">Section 12.9</a> , “SMBus Host Controller Interface via Embedded Controller”) and implementing the SMBus 2.0 Specification.
ACPI0006	<b>GPE Block Device.</b> This device allows a system designer to describe GPE blocks beyond the two that are described in the FADT.
ACPI0007	<b>Processor Device.</b> This device provides an alternative to declaring processors using the <b>Processor</b> ASL statement. See <a href="#">Section 8.4</a> , “Declaring Processors”, for more details.
ACPI0008	<b>Ambient Light Sensor Device.</b> This device is an ambient light sensor. See <a href="#">Section 9.3</a> , “Ambient Light Sensor Device”.

Plug and Play ID	Description
ACPI0009	<b>I/OxAPIC Device.</b> This device is an I/O unit that complies with both the APIC and SAPIC interrupt models.
ACPI000A	<b>I/O APIC Device.</b> This device is an I/O unit that complies with the APIC interrupt model.
ACPI000B	<b>I/O SAPIC Device.</b> This device is an I/O unit that complies with the SAPIC interrupt model.
ACPI000C	<b>Processor Aggregator Device.</b> This device provides a control point for all processors in the platform. See <a href="#">Section 8.5</a> , "Processor Aggregator Device".
ACPI000D	<b>Power Meter Device.</b> This device is a power meter. See <a href="#">Section 10.4</a> . "Power Meters".
ACPI000E	<b>Time and Alarm Device.</b> This device is a control method-based real-time clock and wake alarm. See <a href="#">Section 9.18</a> , "Time and Alarm Device".
ACPI000F	<b>User Presence Detection Device.</b> This device senses user presence (proximity). See <a href="#">Section 9.16</a> , "User Presence Detection Device")
ACPI0010	<b>Processor container device.</b> Used to declare hierarchical processor topologies (See <a href="#">Section 8.5</a> "Processor Hierarchy", and <a href="#">Section 8.4.3.1</a> , "Processor Container Device".)
ACPI0011	Generic Buttons Device. This device reports button events corresponding to Human Interface Device (HID) control descriptors. (See <a href="#">Section 9.19</a> , "Generic Button Device")
ACPI0012	NVDIMM Root Device. This device contains the NVDIMM devices. See <a href="#">Section 9.20</a> "NVDIMM Devices" and <a href="#">Section 5.2.25</a> for "NVDIMM Firmware Interface Table"
ACPI0013	<b>Generic Event Device.</b> This device maps Interrupt-signaled events. See Section 5.6.9.
ACPI0014	<b>Wireless Power Calibration Device.</b> This device uses user presence and notification.

## 5.6.8 Predefined ACPI Names for Objects, Methods, and Resources

The following table summarizes the predefined names for the ACPI namespace objects, control methods, and resource descriptor fields defined in this specification. Provided for each name is a short description and a reference to the section number and page number of the actual definition of the name. ACPI names that are predefined by other specifications are also listed along with their corresponding specification reference.

**Note:** All names that begin with an underscore are reserved for ACPI use only

**Table 5-184 Predefined ACPI Names**

Name	Description	Heading
_ACx	<b>Active Cooling</b> – returns the active cooling policy threshold values.	<a href="#">Section 11.4.1</a>
_ADR	<b>Address</b> – (1) returns the address of a device on its parent bus. (2) returns a unique ID for the display output device. (3) resource descriptor field.	<a href="#">Section 6.1.1</a> <a href="#">Section 6.1</a> <a href="#">Section 19.2.8</a>
_AEI	Designates those GPIO interrupts that shall be handled by OSPM as ACPI events	<a href="#">Section 5.6.5.2</a>
_ALC	<b>Ambient Light Chromaticity</b> – returns the ambient light color chromaticity.	<a href="#">Section 9.3.4</a>

Name	Description	Heading
_ALI	<b>Ambient Light Illuminance</b> – returns the ambient light brightness.	<a href="#">Section 9.3.2</a>
_ALN	<b>Alignment</b> – base alignment, resource descriptor field.	<a href="#">Section 19.2.8</a>
_ALP	<b>Ambient Light Polling</b> – returns the ambient light sensor polling frequency.	<a href="#">Section 9.3.6</a>
_ALR	<b>Ambient Light Response</b> – returns the ambient light brightness to display brightness mappings.	<a href="#">Section 9.3.5</a>
_ALT	<b>Ambient Light Temperature</b> – returns the ambient light color temperature.	<a href="#">Section 9.3.3</a>
_ALx	<b>Active List</b> – returns a list of active cooling device objects.	<a href="#">Section 11.4.2</a>
_ART	<b>Active cooling Relationship Table</b> – returns thermal relationship information between platform devices and fan devices.	<a href="#">Section 11.4.3</a>
_ASI	<b>Address Space Id</b> – resource descriptor field.	<a href="#">Section 19.2.8</a>
_ASZ	<b>Access Size</b> – resource descriptor field.	<a href="#">Section 19.2.8</a>
_ATT	<b>Type-Specific Attribute</b> – resource descriptor field.	<a href="#">Section 19.2.8</a>
_BAS	<b>Base Address</b> – range base address, resource descriptor field.	<a href="#">Section 19.2.8</a>
_BBN	<b>Bios Bus Number</b> – returns the PCI bus number returned by the platform firmware.	<a href="#">Section 6.5.5</a>
_BCL	<b>Brightness Control Levels</b> – returns a list of supported brightness control levels.	<a href="#">Section 6.2</a>
_BCM	<b>Brightness Control Method</b> – sets the brightness level of the display device.	<a href="#">Section 6.3</a>
_BCT	<b>Battery Charge Time</b> – returns time remaining to complete charging battery.	<a href="#">Section 10.2.2.10</a>
_BDN	<b>Bios Dock Name</b> – returns the Dock ID returned by the platform firmware.	<a href="#">Section 6.5.3</a>
_BIF	<b>Battery Information</b> – returns a Control Method Battery information block.	<a href="#">Section 10.2.2.1</a>
_BIX	<b>Battery Information Extended</b> – returns a Control Method Battery extended information block.	<a href="#">Section 10.2.2.2</a>
_BLT	<b>Battery Level Threshold</b> – set battery level threshold preferences.	<a href="#">Section 19.6.114</a>
_BM	<b>Bus Master</b> – resource descriptor field.	<a href="#">Section 19.2.8</a>
_BMA	<b>Battery Measurement Averaging Interval</b> – Sets battery measurement averaging interval.	<a href="#">Section 10.2.2.4</a>
_BMC	<b>Battery Maintenance Control</b> – Sets battery maintenance and control features.	<a href="#">Section 10.2.2.12</a>
_BMD	<b>Battery Maintenance Data</b> – returns battery maintenance, control, and state data.	<a href="#">Section 10.2.2.11</a>
_BMS	<b>Battery Measurement Sampling Time</b> – Sets the battery measurement sampling time.	<a href="#">Section 10.2.2.5</a>
_BQC	<b>Brightness Query Current</b> – returns the current display brightness level.	<a href="#">Section 6.4</a>
_BST	<b>Battery Status</b> – returns a Control Method Battery status block.	<a href="#">Section 10.2.2.6</a>

Name	Description	Heading
_BTH	Battery Throttle Limit - specifies the thermal throttle limit of battery for the firmware when engaging charging.	<a href="#">Section 10.2.2.7</a>
_BTM	<b><u>Battery Time</u></b> – returns the battery runtime.	<a href="#">Section 10.2.2.9</a>
_BTP	<b><u>Battery Trip Point</u></b> – sets a Control Method Battery trip point.	<a href="#">Section 10.2.2.8</a>
_CBA	<b><u>Configuration Base Address</u></b> – sets the CBA for a PCI Express host bridge. See the PCI Firmware Specification, Revision 3.0 at “Links to ACPI-Related Documents” ( <a href="http://uefi.org/acpi">http://uefi.org/acpi</a> ) under the heading "PCI Sig".	
_CCA	<b><u>Cache Coherency Attribute</u></b> -- specifies whether a device and its descendants support hardware managed cache coherency.	<a href="#">Section 6.2.17</a>
_CDM	<b><u>Clock Domain</u></b> – returns a logical processor’s clock domain identifier.	<a href="#">Section 6.2.1</a>
_CID	<b><u>Compatible ID</u></b> – returns a device’s Plug and Play Compatible ID list.	<a href="#">Section 6.1.2</a>
_CLS	<b><u>Class Code</u></b> – supplies OSPM with the PCI-defined class, subclass and programming interface for a device. Optional.	<a href="#">Section 6.1.3</a>
_CPC	<b><u>Continuous Performance Control</u></b> – declares an interface that allows OSPM to transition the processor into a performance state based on a continuous range of allowable values.	<a href="#">Section 8.4.7.1</a>
_CRS	<b><u>Current Resource Settings</u></b> – returns the current resource settings for a device.	<a href="#">Section 6.2.2</a>
_CRT	<b><u>Critical Temperature</u></b> – returns the shutdown critical temperature.	<a href="#">Section 11.4.4</a>
_CSD	<b><u>C State Dependencies</u></b> – returns a list of C-state dependencies.	<a href="#">Section 8.4.2.2</a>
_CST	<b><u>C States</u></b> – returns a list of supported C-states.	<a href="#">Section 8.4.2.1</a>
_CWS	<b><u>Clear Wake Status</u></b> – Clears the wake status of a Time and Alarm Control Method Device.	<a href="#">Section 9.18.6</a>
_DBT	<b><u>Debounce Timeout</u></b> -Debounce timeout setting for a GPIO input connection, resource descriptor field	<a href="#">Section 19.6.55</a>
_DCK	<b><u>Dock</u></b> – sets docking isolation. Presence indicates device is a docking station.	<a href="#">Section 6.5.2</a>
_DCS	<b><u>Display Current Status</u></b> – returns status of the display output device.	<a href="#">Section 6.6</a>
_DDC	<b><u>Display Data Current</u></b> – returns the EDID for the display output device.	<a href="#">Section 6.5</a>
_DDN	<b><u>Dos Device Name</u></b> – returns a device logical name.	<a href="#">Section 6.1.4</a>
_DEC	<b><u>Decode</u></b> – device decoding type, resource descriptor field.	<a href="#">Section 19.2.8</a>
_DEP	Operation Region <b><u>Dependencies</u></b> -- evaluates to a package and designates device objects that OSPM should assign a higher priority in start ordering due to future operation region accesses.	<a href="#">Section 6.5.8</a>
_DGS	<b><u>Display Graphics State</u></b> – returns the current state of the output device.	<a href="#">Section 6.7</a>
_DIS	<b><u>Disable</u></b> – disables a device.	<a href="#">Section 6.2.3</a>
_DLM	<b><u>Device Lock Mutex</u></b> - Designates a mutex as a Device Lock	<a href="#">Section 5.7.5</a>
_DMA	<b><u>Direct Memory Access</u></b> – returns a device’s current resources for DMA transactions.	<a href="#">Section 6.2.4</a>

Name	Description	Heading
_DOD	<b>Display Output Devices</b> – enumerate all devices attached to the display adapter.	<a href="#">Section 4.2</a>
_DOS	<b>Disable Output Switching</b> – sets the display output switching mode.	<a href="#">Section 4.1</a>
_DPL	<b>Device Selection Polarity</b> - The polarity of the Device Selection signal on a SPISerialBus connection, resource descriptor field	<a href="#">Section 19.6</a>
_DRS	<b>Drive Strength</b> – Drive strength setting for a GPIO output connection, resource descriptor field	<a href="#">Section 19.6.56</a>
_DSD	<b>Device Specific Data</b> – returns device-specific information.	<a href="#">Section 6.2.5</a>
_DSM	<b>Device Specific Method</b> – executes device-specific functions.	<a href="#">Section 9.1.1</a>
_DSS	<b>Device Set State</b> – sets the display device state.	<a href="#">Section 6.8</a>
_DSW	<b>Device Sleep Wake</b> – sets the sleep and wake transition states for a device.	<a href="#">Section 7.3.1</a>
_DTI	<b>Device Temperature Indication</b> – conveys native device temperature to the platform.	<a href="#">Section 11.4.6</a>
_Exx	<b>Edge GPE</b> – method executed as a result of a general-purpose event.	<a href="#">Section 5.6.4.1</a>
_EC	<b>Embedded Controller</b> – returns EC offset and query information.	<a href="#">Section 12.12</a>
_EDL	<b>Eject Device List</b> – returns a list of devices that are dependent on a device (docking).	<a href="#">Section 6.3.1</a>
_EJD	<b>Ejection Dependent Device</b> – returns the name of dependent (parent) device (docking).	<a href="#">Section 6.3.2</a>
_EJx	<b>Eject</b> – begin or cancel a device ejection request (docking).	<a href="#">Section 6.3.3</a>
_END	<b>Endian-ness</b> – Endian orientation of a UART SerialBus connection, resource descriptor field	<a href="#">Section 19.6</a>
_EVT	<b>Event Method</b> - Event method for GPIO-signaled events numbered larger than 255.	<a href="#">Section 5.6.5.3</a>
_FDE	<b>Floppy Disk Enumerate</b> – returns floppy disk configuration information.	<a href="#">Section 9.10.1</a>
_FDI	<b>Floppy Drive Information</b> – returns a floppy drive information block.	<a href="#">Section 9.10.2</a>
_FDM	<b>Floppy Drive Mode</b> – sets a floppy drive speed.	<a href="#">Section 9.10.3</a>
_FIF	<b>Fan Information</b> – returns fan device information.	<a href="#">Section 11.3.1.1</a>
_FIT	<b>Firmware Interface Table</b> - returns a list of NFIT Structures.	<a href="#">Section 6.5.9</a>
_FIX	<b>Fixed Register Resource Provider</b> – returns a list of devices that implement FADT register blocks.	<a href="#">Section 6.2.5</a>
_FLC	<b>Flow Control</b> – Flow Control mechanism for a UART SerialBus connection, resource descriptor field	<a href="#">Section 19.6</a>
_FPS	<b>Fan Performance States</b> – returns a list of supported fan performance states.	<a href="#">Section 11.3.1.2</a>
_FSL	<b>Fan Set Level</b> – Control method that sets the fan device's speed level (performance state).	<a href="#">Section 11.3.1.3</a>

Name	Description	Heading
_FST	<i>Fan Status</i> – returns current status information for a fan device.	<a href="#">Section 11.3.1.4</a>
_GAI	<i>Get Averaging Interval</i> – returns the power meter averaging interval.	<a href="#">Section 10.4.5</a>
_GCP	<i>Get Capabilities</i> – Returns the capabilities of a Time and Alarm Control Method Device	<a href="#">Section 9.18.2</a>
_GHL	<i>Get Hardware Limit</i> – returns the hardware limit enforced by the power meter.	<a href="#">Section 10.4.7</a>
_GL	<i>Global Lock</i> – OS-defined Global Lock mutex object.	<a href="#">Section 5.7.1</a>
_GLK	<i>Global Lock</i> – returns a device's Global Lock requirement for device access.	<a href="#">Section 6.5.7</a>
_GPD	<i>Get Post Data</i> – returns the value of the VGA device that will be posted at boot.	<a href="#">Section 4.4</a>
_GPE	<i>General Purpose Events</i> – (1) predefined Scope (\_GPE.) (2) Returns the SCI interrupt associated with the Embedded Controller.	<a href="#">Section 5.3.1</a> <a href="#">Section 12.11</a>
_GRA	<i>Granularity</i> – address space granularity, resource descriptor field.	<a href="#">Section 19.2.8</a>
_GRT	<i>Get Real Time</i> – Returns the current time from a Time and Alarm Control Method Device.	<a href="#">Section 9.18.3</a>
_GSB	<i>Global System Interrupt Base</i> – returns the GSB for a I/O APIC device.	<a href="#">Section 6.2.7</a>
_GTF	<i>Get Task File</i> – returns a list of ATA commands to restore a drive to default state.	<a href="#">Section 9.9.1.1</a>
_GTM	<i>Get Timing Mode</i> – returns a list of IDE controller timing information.	<a href="#">Section 9.9.2.1.1</a>
_GWS	<i>Get Wake Status</i> – Gets the wake status of a Time and Alarm Control Method Device.	<a href="#">Section 9.18.5</a>
_HE	<i>High-Edge</i> – interrupt triggering, resource descriptor field.	<a href="#">Section 19.2.8</a>
_HID	<i>Hardware ID</i> – returns a device's Plug and Play Hardware ID.	<a href="#">Section 6.1.5</a>
_HMA	Heterogeneous Memory Attributes - returns a list of HMAT structures.	<a href="#">Section 6.2.18</a>
_HOT	<i>Hot Temperature</i> – returns the critical temperature for sleep (entry to S4).	<a href="#">Section 11.4.7</a>
_HPP	<i>Hot Plug Parameters</i> – returns a list of hot-plug information for a PCI device.	<a href="#">Section 6.2.8</a>
_HPX	<i>Hot Plug Parameter Extensions</i> – returns a list of hot-plug information for a PCI device. Supersedes _HPP.	<a href="#">Section 6.2.9</a>
_HRV	<i>Hardware Revision</i> – supplies OSPM with the device's hardware revision. Optional	<a href="#">Section 6.1.6</a>
_IFT	<i>IPMI Interface Type</i> . See the Intelligent Platform Management Interface Specification at "Links to ACPI-Related Documents" ( <a href="http://uefi.org/acpi">http://uefi.org/acpi</a> ) under the heading "Server Platform Management Interface Table".	<a href="#">Section 19.6</a>
_INI	<i>Initialize</i> – performs device specific initialization.	<a href="#">Section 6.5.1</a>
_INT	<i>Interrupts</i> – interrupt mask bits, resource descriptor field.	<a href="#">Section 19.2.8</a>

Name	Description	Heading
_IOR	<b>IO Restriction</b> – IO restriction setting for a GPIO IO connection, resource descriptor field	<a href="#">Section 19.6.56</a>
_IRC	<b>Inrush Current</b> – presence indicates that a device has a significant inrush current draw.	<a href="#">Section 7.3.15</a>
_Lxx	<b>Level GPE</b> – Control method executed as a result of a general-purpose event.	<a href="#">Section 5.6.4.1</a>
_LCK	<b>Lock</b> – locks or unlocks a device (docking).	<a href="#">Section 6.3.4</a>
_LEN	<b>Length</b> – range length, resource descriptor field.	<a href="#">Section 19.2.8</a>
_LID	<b>Lid</b> – returns the open/closed status of the lid on a mobile system.	<a href="#">Section 9.5.1</a>
_LIN	<b>Lines in Use</b> - Handshake lines in use in a UART SerialBus connection, resource descriptor field	<a href="#">Section 19.6</a>
_LL	<b>Low Level</b> – interrupt polarity, resource descriptor field.	<a href="#">Section 19.2.8</a>
_LPI	<b>Low Power Idle States</b> – returns the list of low power idle states supported by a processor or processor container.	<a href="#">Section 8.4.4.3</a>
_LSI	<b>Label Storage Information</b> – Returns information about the Label Storage Area associated with the NVDIMM object, including its size.	<a href="#">Section 6.5.10.1</a>
_LSR	<b>Label Storage Read</b> – Returns label data from the Label Storage Area of the NVDIMM object.	<a href="#">Section 6.5.10.2</a>
_LSW	<b>Label Storage Write</b> – Writes label data in to the Label Storage Area of the NVDIMM object.	<a href="#">Section 6.5.10.3</a>
_MAF	<b>Maximum Address Fixed</b> – resource descriptor field.	<a href="#">Section 19.2.8</a>
_MAT	<b>Multiple Apic Table Entry</b> – returns a list of Interrupt Controller Structures.	<a href="#">Section 6.2.10</a>
_MAX	<b>Maximum Base Address</b> – resource descriptor field.	<a href="#">Section 19.2.8</a>
_MBM	<b>Memory Bandwidth Monitoring Data</b> – returns bandwidth monitoring data for a memory device.	<a href="#">Section 9.13.2.1</a>
_MEM	<b>Memory Attributes</b> – resource descriptor field.	<a href="#">Section 19.2.8</a>
_MIF	<b>Minimum Address Fixed</b> – resource descriptor field.	<a href="#">Section 19.2.8</a>
_MIN	<b>Minimum Base Address</b> – resource descriptor field.	<a href="#">Section 19.2.8</a>
_MLS	<b>Multiple Language String</b> – returns a device description in multiple languages.	<a href="#">Section 6.1.7</a>
_MOD	<b>Mode</b> –Resource descriptor field	<a href="#">Section 19.6, Section 19.6.55</a>
_MSG	<b>Message</b> – sets the system message waiting status indicator.	<a href="#">Section 9.2.2</a>
_MSM	<b>Memory Set Monitoring</b> – sets bandwidth monitoring parameters for a memory device.	<a href="#">Section 9.13.2.2</a>
_MTL	<b>Minimum Throttle Limit</b> – returns the minimum throttle limit of a specific thermal	<a href="#">Section 11.4.8</a>
_MTP	<b>Memory Type</b> – resource descriptor field.	<a href="#">Section 19.2.8</a>

Name	Description	Heading
_NTT	<b>Notification Temperature Threshold</b> – returns a threshold for device temperature change that requires platform notification.	<a href="#">Section 11.4.9</a>
_OFF	<b>Off</b> – sets a power resource to the off state.	<a href="#">Section 7.2.2</a>
_ON	<b>On</b> – sets a power resource to the on state.	<a href="#">Section 7.2.3</a>
_OS	<b>Operating System</b> – returns a string that identifies the operating system.	<a href="#">Section 5.7.3</a>
_OSC	<b>Operating System Capabilities</b> – inform AML of host features and capabilities.	<a href="#">Section 6.2.11</a>
_OSI	<b>Operating System Interfaces</b> – returns supported interfaces, behaviors, and features.	<a href="#">Section 5.7.2</a>
_OST	<b>Qspm Status Indication</b> – inform AML of event processing status.	<a href="#">Section 6.3.5</a>
_PAI	<b>Power Averaging Interval</b> – sets the averaging interval for a power meter.	<a href="#">Section 10.4.4</a>
_PAR	<b>Parity</b> – Parity for a UART SerialBus connection, resource descriptor field	<a href="#">Section 19.6</a>
_PCL	<b>Power Consumer List</b> – returns a list of devices powered by a power source.	<a href="#">Section 10.3.2</a>
_PCT	<b>Performance Control</b> – returns processor performance control and status registers.	<a href="#">Section 8.4.6.1</a>
_PDC	<b>Processor Driver Capabilities</b> – inform AML of processor driver capabilities.	<a href="#">Section 8.4.1</a>
_PDL	<b>P-state Depth Limit</b> – returns the lowest available performance P-state.	<a href="#">Section 8.4.6.6</a>
_PHA	<b>Clock Phase</b> – Clock phase for a SPISerialBus connection, resource descriptor field	<a href="#">Section 19.6</a>
_PIC	<b>PIC</b> – inform AML of the interrupt model in use.	<a href="#">Section 5.8.1</a>
_PIF	<b>Power Source Information</b> – returns a Power Source information block.	<a href="#">Section 10.3.3</a>
_PIN	<b>Pin List</b> – List of GPIO pins described, resource descriptor field.	<a href="#">Section 19.6.55</a>
_PLD	<b>Physical Location of Device</b> – returns a device's physical location information.	<a href="#">Section 6.1.8</a>
_PMC	<b>Power Meter Capabilities</b> – returns a list of Power Meter capabilities info.	<a href="#">Section 10.4.1</a>
_PMD	<b>Power Metered Devices</b> – returns a list of devices that are measured by the power meter device.	<a href="#">Section 10.4.8</a>
_PMM	<b>Power Meter Measurement</b> – returns the current value of the Power Meter.	<a href="#">Section 10.4.3</a>
_POL	<b>Polarity</b> – Resource descriptor field	<a href="#">Section 19.6</a> <a href="#">Section 19.6.55</a>
_PPC	<b>Performance Present Capabilities</b> – returns a list of the performance states currently supported by the platform.	<a href="#">Section 8.4.6.3</a>
_PPE	<b>Polling for Platform Error</b> – returns the polling interval to retrieve Corrected Platform Error information.	<a href="#">Section 8.4.8</a>
_PPI	<b>Pin Configuration</b> – Pin configuration for a GPIO connection, resource descriptor field	<a href="#">Section 19.6.55</a>

Name	Description	Heading
_PR	<b><u>Processor</u></b> – predefined scope for processor objects.	<a href="#">Section 5.3.1</a>
_PRO	<b><u>Power Resources for D0</u></b> – returns a list of dependent power resources to enter state D0 (fully on).	<a href="#">Section 7.3.8</a>
_PR1	<b><u>Power Resources for D1</u></b> – returns a list of dependent power resources to enter state D1.	<a href="#">Section 7.3.9</a>
_PR2	<b><u>Power Resources for D2</u></b> – returns a list of dependent power resources to enter state D2.	<a href="#">Section 7.3.10</a>
_PR3	<b><u>Power Resources for D3hot</u></b> – returns a list of dependent power resources to enter state D3hot.	<a href="#">Section 7.3.11</a>
_PRE	<b><u>Power Resources for Enumeration</u></b> - Returns a list of dependent power resources to enumerate devices on a bus.	<a href="#">Section 7.3.12</a>
_PRL	<b><u>Power Source Redundancy List</u></b> – returns a list of power source devices in the same redundancy grouping.	<a href="#">Section 10.3.4</a>
_PRR	<b><u>Power Resource for Reset</u></b> – executes a reset on the associated device or devices.	<a href="#">Section 7.3.26</a>
_PRS	<b><u>Possible Resource Settings</u></b> – returns a list of a device's possible resource settings.	<a href="#">Section 6.2.12</a>
_PRT	<b><u>Pci Routing Table</u></b> – returns a list of PCI interrupt mappings.	<a href="#">Section 6.2.13</a>
_PRW	<b><u>Power Resources for Wake</u></b> – returns a list of dependent power resources for waking.	<a href="#">Section 7.3.12</a>
_PS0	<b><u>Power State 0</u></b> – sets a device's power state to D0 (device fully on).	<a href="#">Section 7.3.2</a>
_PS1	<b><u>Power State 1</u></b> – sets a device's power state to D1.	<a href="#">Section 7.3.3</a>
_PS2	<b><u>Power State 2</u></b> – sets a device's power state to D2.	<a href="#">Section 7.3.4</a>
_PS3	<b><u>Power State 3</u></b> – sets a device's power state to D3 (device off).	<a href="#">Section 7.3.5</a>
_PSC	<b><u>Power State Current</u></b> – returns a device's current power state.	<a href="#">Section 7.3.6</a>
_PSD	<b><u>Power State Dependencies</u></b> – returns processor P-State dependencies.	<a href="#">Section 8.4.6.5</a>
_PSE	<b><u>Power State for Enumeration</u></b>	<a href="#">Section 7.3.14</a>
_PSL	<b><u>Passive List</u></b> – returns a list of passive cooling device objects.	<a href="#">Section 11.4.10</a>
_PSR	<b><u>Power Source</u></b> – returns the power source device currently in use.	<a href="#">Section 10.3.1</a>
_PSS	<b><u>Performance Supported States</u></b> – returns a list of supported processor performance states.	<a href="#">Section 8.4.6.2</a>
_PSV	<b><u>Passive</u></b> – returns the passive trip point temperature.	<a href="#">Section 11.4.11</a>
_PSW	<b><u>Power State Wake</u></b> – sets a device's wake function.	<a href="#">Section 7.3.14</a>
_PTC	<b><u>Processor Throttling Control</u></b> – returns throttling control and status registers.	<a href="#">Section 8.4.5.1</a>
_PTP	<b><u>Power Trip Points</u></b> – sets trip points for the Power Meter device.	<a href="#">Section 10.4.2</a>
_PTS	<b><u>Prepare To Sleep</u></b> – inform the platform of an impending sleep transition.	<a href="#">Section 7.4.1</a>

Name	Description	Heading
_PUR	<b><u>Processor Utilization Request</u></b> – returns the number of processors that the platform would like to idle.	<a href="#">Section 8.5.1.1</a>
_PXM	<b><u>Proximity</u></b> – returns a device's proximity domain identifier.	<a href="#">Section 6.2.14</a>
_Qxx	<b><u>Query</u></b> – Embedded Controller query and SMBus Alarm control method.	<a href="#">Section 5.6.4.1</a>
_RBO	<b><u>Register Bit Offset</u></b> – resource descriptor field.	<a href="#">Section 19.2.8</a>
_RBW	<b><u>Register Bit Width</u></b> – resource descriptor field.	<a href="#">Section 19.2.8</a>
_RDI	<b><u>Resource Dependencies for Idle</u></b> - returns the list of power resource dependencies for system level low power idle states.	<a href="#">Section 8.5</a>
_REG	<b><u>Region</u></b> – inform AML code of an operation region availability change.	<a href="#">Section 6.5.4</a>
_REV	<b><u>Revision</u></b> – returns the revision of the ACPI specification that is implemented.	<a href="#">Section 5.7.4</a>
_RMV	<b><u>Remove</u></b> – returns a device's removal ability status (docking).	<a href="#">Section 6.3.6</a>
_RNG	<b><u>Range</u></b> – memory range type, resource descriptor field.	<a href="#">Section 19.2.8</a>
_ROM	<b><u>Read-Only Memory</u></b> – returns a copy of the ROM data for a display device.	<a href="#">Section 4.3</a>
_RST	<b><u>Device Reset</u></b> – executes a reset on the associated device or devices.	<a href="#">Section 7.3.25</a>
_RT	<b><u>Resource Type</u></b> – resource descriptor field.	<a href="#">Section 19.2.8</a>
_RTV	<b><u>Relative Temperature Values</u></b> – returns temperature value information.	<a href="#">Section 11.4.12</a>
_RW	<b><u>Read-Write Status</u></b> – resource descriptor field.	<a href="#">Section 19.2.8</a>
_RXL	<b><u>Receive Buffer Size</u></b> - Size of the receive buffer in a UART Serialbus connection, resource descriptor field.	<a href="#">Section 19.6</a>
_S0	<b><u>S0 System State</u></b> – returns values to enter the system into the S0 state.	<a href="#">Section 7.4.2</a>
_S1	<b><u>S1 System State</u></b> – returns values to enter the system into the S1 state.	<a href="#">Section 7.4.2</a>
_S2	<b><u>S2 System State</u></b> – returns values to enter the system into the S2 state.	<a href="#">Section 7.4.2</a>
_S3	<b><u>S3 System State</u></b> – returns values to enter the system into the S3 state.	<a href="#">Section 7.4.2</a>
_S4	<b><u>S4 System State</u></b> – returns values to enter the system into the S4 state.	<a href="#">Section 7.4.2</a>
_S5	<b><u>S5 System State</u></b> – returns values to enter the system into the S5 state.	<a href="#">Section 7.4.2</a>
_S1D	<b><u>S1 Device State</u></b> – returns the highest D-state supported by a device when in the S1 state.	<a href="#">Section 7.3.16</a>
_S2D	<b><u>S2 Device State</u></b> – returns the highest D-state supported by a device when in the S2 state.	<a href="#">Section 7.3.17</a>
_S3D	<b><u>S3 Device State</u></b> – returns the highest D-state supported by a device when in the S3 state.	<a href="#">Section 7.3.18</a>
_S4D	<b><u>S4 Device State</u></b> – returns the highest D-state supported by a device when in the S4 state.	<a href="#">Section 7.3.19</a>
_S0W	<b><u>S0 Device Wake State</u></b> – returns the lowest D-state that the device can wake itself from S0.	<a href="#">Section 7.3.20</a>

Name	Description	Heading
_S1W	<b>S1 Device Wake State</b> – returns the lowest D-state for this device that can wake the system from S1.	<a href="#">Section 7.3.21</a>
_S2W	<b>S2 Device Wake State</b> – returns the lowest D-state for this device that can wake the system from S2.	<a href="#">Section 7.3.22</a>
_S3W	<b>S3 Device Wake State</b> – returns the lowest D-state for this device that can wake the system from S3.	<a href="#">Section 7.3.23</a>
_S4W	<b>S4 Device Wake State</b> – returns the lowest D-state for this device that can wake the system from S4.	<a href="#">Section 7.3.24</a>
_SB	<b>System Bus</b> – scope for device and bus objects.	<a href="#">Section 5.3.1</a>
_SBS	<b>Smart Battery Subsystem</b> – returns the subsystem configuration.	<a href="#">Section 10.1.3</a>
_SCP	<b>Set Cooling Policy</b> – sets the cooling policy (active or passive).	<a href="#">Section 11.4.13</a>
_SDD	<b>Set Device Data</b> – sets data for a SATA device.	<a href="#">Section 9.9.3.3.1</a>
_SEG	<b>Segment</b> – returns a device's PCI Segment Group number.	<a href="#">Section 6.5.6</a>
_SHL	<b>Set Hardware Limit</b> – sets the hardware limit enforced by the Power Meter.	<a href="#">Section 10.4.6</a>
_SHR	<b>Sharable</b> – interrupt share status, resource descriptor field.	<a href="#">Section 19.2.8</a>
_SI	<b>System Indicators</b> – predefined scope.	<a href="#">Section 5.3.1</a>
_SIZ	<b>Size</b> – DMA transfer size, resource descriptor field.	<a href="#">Section 19.2.8</a>
_SLI	<b>System Locality Information</b> – returns a list of NUMA system localities.	<a href="#">Section 6.2.15</a>
_SLV	<b>Slave Mode</b> – Slave mode setting for a SerialBus connection, resource descriptor field.	<a href="#">Section 19.6</a>
_SPD	<b>Set Post Device</b> – sets which video device will be posted at boot.	<a href="#">Section 4.5</a>
_SPE	<b>Connection Speed</b> – Connection speed for a SerialBus connection, resource descriptor field	<a href="#">Section 19.6</a>
_SRS	<b>Set Resource Settings</b> – sets a device's resource allocation.	<a href="#">Section 6.2.16</a>
_SRT	<b>Set Real Time</b> – Sets the current time to a Time and Alarm Control Method Device.	<a href="#">Section 9.18.4</a>
_SRV	<b>IPMI Spec Revision</b> . See the Intelligent Platform Management Interface Specification at "Links to ACPI-Related Documents" ( <a href="http://uefi.org/acpi">http://uefi.org/acpi</a> ) under the heading "Server Platform Management Interface Table".	
_SST	<b>System Status</b> – sets the system status indicator.	<a href="#">Section 9.2.1</a>
_STA	<b>Status</b> – (1) returns the current status of a device. (2) Returns the current on or off state of a Power Resource.	<a href="#">Section 6.3.7</a> <a href="#">Section 7.2.4</a>
_STB	<b>Stop Bits</b> - Number of stop bits used in a UART SerialBus connection, resource descriptor field	<a href="#">Section 19.6</a>
_STM	<b>Set Timing Mode</b> – sets an IDE controller transfer timings.	<a href="#">Section 9.9.2.1.2</a>

Name	Description	Heading
_STP	<i>Set Expired Timer Wake Policy</i> – sets expired timer policies of the wake alarm device.	<a href="#">Section 9.18.7</a>
_STR	<i>String</i> – returns a device's description string.	<a href="#">Section 6.1.10</a>
_STV	<i>Set Timer Value</i> – set timer values of the wake alarm device.	<a href="#">Section 9.18.8</a>
_SUB	Supplies OSPM with the device's Subsystem ID. Optional.	<a href="#">Section 6.1.9</a>
_SUN	<i>Slot User Number</i> – returns the slot unique ID number.	<a href="#">Section 6.1.11</a>
_SWS	<i>System Wake Source</i> – returns the source event that caused the system to wake.	<a href="#">Section 7.4.3</a>
_T_x	<i>Temporary</i> – reserved for use by ASL compilers.	<a href="#">Section 19.3.1.1</a>
_TC1	<i>Thermal Constant 1</i> – returns TC1 for the passive cooling formula.	<a href="#">Section 11.4.15</a>
_TC2	<i>Thermal Constant 2</i> – returns TC2 for the passive cooling formula.	<a href="#">Section 11.4.16</a>
_TDL	<i>T-State Depth Limit</i> – returns the _TSS entry number of the lowest power throttling state.	<a href="#">Section 8.4.5.5</a>
_TFP	<i>Thermal Fast Sampling Period</i> - returns the thermal sampling period for passive cooling.	<a href="#">Section 11.4.17</a>
_TIP	<i>Expired Timer Wake Policy</i> – returns timer policies of the wake alarm device.	<a href="#">Section 9.18.9</a>
_TIV	<i>Timer Values</i> – returns remaining time of the wake alarm device.	<a href="#">Section 9.18.10</a>
_TMP	<i>Temperature</i> – returns a thermal zone's current temperature.	<a href="#">Section 11.4.18</a>
_TPC	<i>Throttling Present Capabilities</i> – returns the current number of supported throttling states.	<a href="#">Section 8.4.5.3</a>
_TPT	<i>Trip Point Temperature</i> – inform AML that a devices' embedded temperature sensor has crossed a temperature trip point.	<a href="#">Section 11.4.19</a>
_TRA	<i>Translation</i> – address translation offset, resource descriptor field.	<a href="#">Section 19.2.8</a>
_TRS	<i>Translation Sparse</i> – sparse/dense flag, resource descriptor field.	<a href="#">Section 19.2.8</a>
_TRT	<i>Thermal Relationship Table</i> – returns thermal relationships between platform devices.	<a href="#">Section 11.4.20</a>
_TSD	<i>Throttling State Dependencies</i> – returns a list of T-state dependencies.	<a href="#">Section 8.4.5.4</a>
_TSF	<i>Type-Specific Flags</i> – resource descriptor field.	<a href="#">Section 19.2.8</a>
_TSN	<i>Thermal Sensor Device</i> - returns a reference to the thermal sensor reporting a zone temperature	<a href="#">Section 11.4.21</a>
_TSP	<i>Thermal Sampling Period</i> – returns the thermal sampling period for passive cooling.	<a href="#">Section 11.4.22</a>
_TSS	<i>Throttling Supported States</i> – returns supported throttling state information.	<a href="#">Section 8.4.5.2</a>
_TST	<i>Temperature Sensor Threshold</i> – returns the minimum separation for a device's temperature trip points.	<a href="#">Section 11.4.23</a>
_TPP	<i>Translation Type</i> – translation/static flag, resource descriptor field.	<a href="#">Section 19.2.8</a>

Name	Description	Heading
_TTs	<i>Transition To State</i> – inform AML of an S-state transition.	<a href="#">Section 7.4.4</a>
_TXL	<i>Transmit Buffer Size</i> – Size of the transmit buffer in a UART Serialbus connection, resource descriptor field	<a href="#">Section 19.6</a>
_TYP	<i>Type</i> – DMA channel type (speed), resource descriptor field.	<a href="#">Section 19.2.8</a>
_TZ	<i>Thermal Zone</i> – predefined scope: ACPI 1.0.	<a href="#">Section 5.3.1</a>
_TZD	<i>Thermal Zone Devices</i> – returns a list of device names associated with a Thermal Zone.	<a href="#">Section 11.4.24</a>
_TZM	<i>Thermal Zone Member</i> – returns a reference to the thermal zone of which a device is a member.	<a href="#">Section 11.4.25</a>
_TZP	<i>Thermal Zone Polling</i> – returns a Thermal zone's polling frequency.	<a href="#">Section 11.4.26</a>
_UID	<i>Unique ID</i> – return a device's unique persistent ID.	<a href="#">Section 6.1.12</a>
_UPC	<i>USB Port Capabilities</i> – returns a list of USB port capabilities.	<a href="#">Section 9.14</a>
_UPD	<i>User Presence Detect</i> – returns user detection information.	<a href="#">Section 9.16.1</a>
_UPP	<i>User Presence Polling</i> – returns the recommended user presence polling interval.	<a href="#">Section 9.16.2</a>
_VEN	<i>Vendor-defined Data</i> – Vendor-defined data for a GPIO or SerialBus connection, resource descriptor field	<a href="#">Section 19.6.55</a>
_VPO	<i>Video Post Options</i> – returns the implemented video post options.	<a href="#">Section 4.6</a>
_WAK	<i>Wake</i> – inform AML that the system has just awakened.	<a href="#">Section 7.4.5</a>
_WPC	<i>Wireless Power Calibration</i> - returns the notifier to wireless power controller	<a href="#">Section 10.5.1</a>
_WPP	<i>Wireless Power Polling</i> - returns the recommended polling frequency	<a href="#">Section 10.5.3</a>
_Wxx	<i>Wake Event</i> – method executed as a result of a wake event.	<a href="#">Section 5.6.4.2.2</a>

## 5.6.9 Interrupt-signaled ACPI events

ACPI 6.1 introduces support for generating ACPI events when an interrupt is received by the OSPM, and that interrupt is listed in the Generic Event Device (GED) \_CRS object. OSPM claims all such interrupts, and maps them to the appropriate event method required by the ACPI event model.

### 5.6.9.1 Declaring Generic Event Device

The Generic Event Device (GED) is modelled as a device in the namespace with a \_HID defined to be ACPI0013. The GED must also provide one \_CRS and \_EVT object for claiming interrupts and mapping them to ACPI events, as described in the following sections. The platform declare its support for the GED, and query whether an OS supports it, via the \_OSC method, see [Section 6.2.11.2](#).

### 5.6.9.2 \_CRS Object for Interrupt-signaled Events

The \_CRS object designates those interrupts that shall be handled by OSPM as ACPI events. This object appears within the scope of the GED whose interrupts sources are to be used as interrupt-signaled events.

**Arguments:**

None

**Return Value:**

A resource template **Buffer** containing only Interrupt Resource descriptors.

**Note:** For event numbers less than 255, `_Exx` and `_Lxx` methods may be used instead. In this case, they take precedence and `_EVT` will not be invoked.

**Example:**

```
Device (\_SB.GED1)
{
    Name(HID, "ACPI 0013")
    Name(_CRS, ResourceTemplate ())
    {
        Interrupt(ResourceConsumer, Level, ActiveHigh, Exclusive) {41}
        Interrupt(ResourceConsumer, Level, ActiveHigh, Shared) {42}
        Interrupt(ResourceConsumer, Level, ActiveHigh, ExclusiveAndWake) {43}
    })
    ...
} //End of Scope
```

**5.6.9.3 The Event (`_EVT`) Method for Handling Interrupt-signaled Events**

Interrupts that are assigned by the platform to signal ACPI events are listed in the `_CRS` object under the GED device. Since the interrupt descriptor also provides the mode of the interrupt associated with an event, it gives OSPM all the information it needs to invoke a handler method for the event. A single instance of the method handles all ACPI events for a given GED.

**Note:** Please refer to [Section 5.6.4](#) for the OSPM requirements of handling an event (steps 1 – 5).

For Interrupt-signaled events, the Event (`_EVT`) method is used.

`_EVT` is defined as follows:

**Arguments: (1)**

**Arg0** - EventNumber. An Integer indicating the event number (GSIV number) of the current event. Must be in the range 0x00000000 - 0xffffffff.

**Return Value:**

None

**Description**

The `_EVT` method handles an Interrupt-signaled event. It must appear within the scope of the GED whose interrupts are used to signal the event.

OSPM handles Interrupt-signaled events as follows:

- The interrupt is handled by OSPM because it is listed in the `_CRS` object under a GED.

- When the event fires, OSPM handles the interrupt according to its mode and invokes the \_EVT method, passing it the interrupt number of the event. In the case of level interrupts, the ASL within the \_EVT method must be responsible for clearing the interrupt at the device.
- From this point on, handling is exactly like that for GPEs. The \_EVT method may optionally call Notify() on the appropriate device, and OS-specific mechanisms are used to notify the driver of the event.

### Example:

```

Device (\_SB.GED1)
{
    Name(HID, "ACPI 0013")
    Name(_CRS, ResourceTemplate ())
    {
        Interrupt(ResourceConsumer, Level, ActiveHigh, Exclusive) {41}
        Interrupt(ResourceConsumer, Edge, ActiveHigh, Shared) {42}
        Interrupt(ResourceConsumer, Level, ActiveHigh, ExclusiveAndWake) {43}
    }
    Method (_EVT, 1) { // Handle all ACPI Events signaled by the Generic Event
Device(GED1)
        Switch(Arg0) // Arg0 = GSI/V of the interrupt
        {
            Case (41) { // interrupt 41
                Store(One, ISTS) // clear interrupt status register at
device X
                    // which is mapped via an operation region
                Notify (\_SB.DEVX, 0x0) // insertion request
            }
            Case (42) { // interrupt 42
                Notify (\_SB.DEVX, 0x3) // ejection request
            }
            Case (43) { // interrupt 43
                Store(One, ISTS) // clear interrupt status register at
device X
                    // which is mapped via an operation region
                Notify (\_SB.DEVX, 0x2) // wake event
            }
        }
    } //End of Method
} //End of GED1 Scope
Device (\_SB.DEVX)
{
    ...
    Name(_PRW, Package())
    {
        Package(2){ // EventInfo
            \_SB.GED1, // device reference
            0x2 // event (zero-based CRS index) = 2 (maps to interrupt 43)
        },
        0x03, // Can wake up from S3 state
        PWRA // PWRA must be ON for DEVX to wake system
    }
}

```

```

        })
...
} //End of DEVX Scope

```

#### 5.6.9.4 GED Wake Events

An important use of the interrupt-signaled events is to implement device wake events. Interrupt-based Wake Events are described in [Section 4.1.1.2](#). Note that the interrupt associated with that wake event must be wake-capable per the Extended Interrupt resource descriptor listed under the \_CRS object.

Consider the ASL example in the previous section, note that the interrupts that map to the wake event for DEVX are wake-capable. The components of the Interrupt-signaled ACPI event programming model interact in the following way:

- When a device asserts its wake signal and the interrupt has been enabled by the GED driver, the interrupt is asserted.
- If the system is sleeping, this will cause the hardware, if possible, to transition the system into the S0 state.
- Once the system is running, OSPM will dispatch the GED interrupt service routine.
- The GED needs to determine which interrupt has been asserted and may perform a Notify command on the corresponding device object(s) that have asserted wake.
- In turn OSPM will notify OSPM native driver(s) for each device that will wake its device to service it.

Wake events must be exclusively tied to a GED interrupt (for example, one interrupt cannot be shared by multiple wake events) in order to properly handle the semantics used by the system

Note that any ACPI platform may utilize GPIO-signaled and/or Interrupts-signaled ACPI events (i.e. they are not limited to Hardware-reduced ACPI platforms).

#### 5.6.10 Managing a Wake Event Using Device \_PRW Objects

A device's \_PRW object provides the zero-based bit index into the general-purpose status register block to indicate which general-purpose status bit from either GPE0\_BLK or GPE1\_BLK is used as the specific device's wake mask. Although the hardware must maintain individual device wake enable bits, the system can have multiple devices using the same general-purpose event bit by using OEM-specific hardware to provide second-level status and enable bits. In this case, the OEM AML code is responsible for the second-level enable and status bits.

A device's \_PRW object provides the zero-based index into the \_AEI object of a GPIO controller device or zero-based index into the \_CRS object of a Generic Event Device (GED).

OSPM enables or disables the device wake function by enabling or disabling its corresponding event and by executing its \_PSW control method (which is used to take care of the second-level enables). When the event is asserted, OSPM still executes the corresponding event control method that determines which device wakes are asserted and notifies the corresponding device objects. The native OS driver is then notified that its device has asserted wake, for which the driver powers on its device to service it.

If the system is in a sleeping state when the enabled event is asserted the hardware will transition the system into the S0 state, if possible.

## 5.7 Predefined Objects

The AML interpreter of an ACPI compatible operating system supports the evaluation of a number of predefined objects. The objects are considered “built in” to the AML interpreter on the target operating system.

A list of predefined object names are shown in the following table.

**Table 5-185 Predefined Object Names**

Name	Description
\_GL	Global Lock mutex
\_OS	Name of the operating system
\_OSI	Operating System Interface support
\_REV	Revision of the ACPI specification that is implemented

### 5.7.1 \\_GL (Global Lock Mutex)

This predefined object is a Mutex object that behaves like a Mutex as defined in [Section 19.6.87, “Mutex \(Declare Synchronization/Mutex Object\),”](#) with the added behavior that acquiring this Mutex also acquires the shared environment Global Lock defined in [Section 5.2.10.1, “Global Lock.”](#) This allows Control Methods to explicitly synchronize with the Global Lock if necessary.

### 5.7.2 \_OSI (Operating System Interfaces)

This method is used by the system firmware to query OSPM about interfaces and features that are supported by the host operating system. The usage and implementation model for this method is as follows:

- The \_OSI method is implemented within the operating system.
- \_OSI is called by the firmware AML code, usually during initialization (such as via \_INI method). Thus, \_OSI is actually an “up-call” from the firmware AML to the OS – exactly the opposite of other control methods.
- An \_OSI invocation by the firmware is a request to the operating system: “Do you support this interface/feature?”
- The host responds to this \_OSI request with a simple yes or no (Ones/Zero, TRUE/FALSE, Supported/NotSupported).

The \_OSI method requires one argument and returns an integer. The argument is a string that contains an optional ACPI-defined OsVendorString followed by a required FeatureGroupString. The feature group string can be either ACPI-defined or OS vendor defined.

\_OSI cannot and should not be used by the firmware in an attempt to identify the host operating system; rather, this method is intended to be used to identify specific features and interfaces that are supported by the OS. The example below illustrates this:

`_OSI ("Wi ndows 2009")`

In the \_OSI invocation above, “Windows” is the OsVendorString, and “2009” is the vendor-defined FeatureGroupString. A return value of TRUE (Ones) from this call does NOT indicate that the executing operating system is Windows. It simply indicates that the actual OS conforms to “Windows 2009” features and interfaces, and is thus compatible with Windows 2009. ACPI implementations other than Windows often reply TRUE to all Windows \_OSI requests.

The OsVendorString should always be accompanied by a FeatureGroupString. However, the OsVendorString itself is optional and can be omitted if the feature group string applies to all operating systems. The ACPI-defined feature group strings may be used in this standalone manner. For example:

\_OSI ("3.0 Thermal Model")

#### **Arguments:** (1)

Arg0 – A **String** containing the optional OS vendor prefix (as defined in [Table 5-186](#)) and/or the required Feature Group string (as ACPI-defined in [Table 5-187](#), or a vendor-defined custom feature/interface string). The optional OS vendor string is not needed in the case of the ACPI-defined feature group strings.

#### **Return Value:**

An **Integer** containing a Boolean that indicates whether the requested feature is supported:

0x0 (**Zero**) – The interface, behavior, or feature is not supported

**Ones** (-1) – The interface, behavior, or feature is supported. Note: The value of Ones is 0xFFFFFFFF in 32-bit mode (DSDT revision 1) or 0xFFFFFFFFFFFFFF in 64-bit mode (DSDT revision 2 and greater).

**Table 5-186 Predefined Operating System Vendor String Prefixes**

Operating System Vendor String Prefix	Description
“FreeBSD” < <i>FeatureGroupString</i> >	Free BSD OS features/interfaces
“HP-UX” < <i>FeatureGroupString</i> >	HP Unix Operating Environment OS features/interfaces
“Linux” < <i>FeatureGroupString</i> >	GNU/Linux Operating system OS features/interfaces
“OpenVMS” < <i>FeatureGroupString</i> >	HP OpenVMS Operating Environment OS features/ interfaces
“Windows” < <i>FeatureGroupString</i> >	Microsoft Windows OS features/interfaces

**Table 5-187 Standard ACPI-Defined Feature Group Strings**

Feature Group String	Description
“Module Device”	OSPM supports the declaration of module device (ACPI0004) in the namespace and will enumerate objects under the module device scope.
“Processor Device”	OSPM supports the declaration of processors in the namespace using the ACPI0007 processor device HID.
“3.0 Thermal Model”	OSPM supports the extensions to the ACPI thermal model in Revision 3.0.
“Extended Address Space Descriptor”	OSPM supports the Extended Address Space Descriptor

Feature Group String	Description
"3.0 _SCP Extensions"	OSPM evaluates _SCP with the additional acoustic limit and power limit arguments defined in ACPI 3.0.
"Processor Aggregator Device"	OSPM supports the declaration of the processor aggregator device in the namespace using the ACPI000C processor aggregator device HID.

OSPM may indicate support for multiple OS interface / behavior strings if the operating system supports the behaviors. For example, a newer version of an operating system may indicate support for strings from all or some of the prior versions of that operating system.

\_OSI provides the platform with the ability to support new operating system versions and their associated features when they become available. OSPM can choose to expose new functionality based on the \_OSI argument string. That is, OSPM can use the strings passed into \_OSI to ensure compatibility between older platforms and newer operating systems by maintaining known compatible behavior for a platform. As such, it is recommended that \_OSI be evaluated by the \\_SB.INI control method so that platform compatible behavior or features are available early in operating system initialization.

Since feature group functionality may be dependent on OSPM implementation, it may be required that OS vendor-defined strings be checked before feature group strings.

Platform developers should consult OS vendor specific information for OS vendor defined strings representing a set of OS interfaces and behaviors. ACPI defined strings representing an operating system and an ACPI feature group are listed in the following tables.

## **\_OSI Examples**

### **Use of standard ACPI-defined feature group strings:**

```
Scope (_SB)
{
    Name (PAD1, 0)
    Name (MDEV, 0)
    Method (_INI)
    {
        If (CondRefOf (\_OSI)      // Ensure _OSI exists in the OS
        {
            If (\_OSI ("Processor Aggregator Device")
            {
                Store (1, PAD1)
            }
            If (\_OSI ("Module Device")
            {
                // Expose PCI Root Bridge under Module Device -
                // OS support Module Device
                Store (0, MDEV1)
                Loadtable ("OEM1", "OEMID", "Table1")
            }
            Else
            {
                // Expose PCI Root Bridge under \_SB -
                // OS does not support Module Device
            }
        }
    }
}
```

```

        Store (1, MDEV1)
        Loadtable ("OEM2", "OEMID", "Table2")
    }
}
}
```

### Use of OS vendor-defined feature group strings:

```

//
// In this example, "Windows" is the OsVendorString, and the year strings
// (2009, 2012, and 2105) are the vendor-defined FeatureGroupStrings
//
Scope (_SB)
{
    Name (OSYS, 0x7D0)      // Type of OS indicating supported features
    Method (_INI)
    {
        If (CondRefOf (\_OSI)) // Ensure _OSI exists in the OS
        {
            If (\_OSI ("Windows 2009"))
            {
                Store (0x7D1, OSYS)
            }
            If (\_OSI ("Windows 2012"))
            {
                Store (0x7D1, OSYS)
            }
            If (\_OSI ("Windows 2015"))
            {
                Store (0x7D1, OSYS)
            }
        }
    }
}
```

### 5.7.3 \\_OS (OS Name Object)

This predefined object evaluates to a string that identifies the operating system. In robust OSPM implementations, \\_OS evaluates differently for each OS release. This may allow AML code to accommodate differences in OSPM implementations. This value does not change with different revisions of the AML interpreter.

#### Arguments:

None

#### Return Value:

A String containing the operating system name.

### 5.7.4 \\_REV (Revision Data Object)

This predefined object evaluates to an Integer (DWORD) representing the revision of the ACPI Specification implemented by the specified \\_OS.

#### Arguments:

None

#### Return Value:

An **Integer** representing the revision of the currently executing ACPI implementation.

1. Only ACPI 1 is supported, only 32-bit integers.
2. ACPI 2 or greater is supported. Both 32-bit and 64-bit integers are supported.  
Actual integer width depends on the revision of the DSDT (revision < 2 means 32-bit. >= 2 means 64-bit).

Other values - Reserved

### 5.7.5 \_DLM (DeviceLock Mutex)

This object appears in a device scope when AML access to the device must be synchronized with the OS environment. It is used in conjunction with a standard Mutex object. With \_DLM, the standard Mutex provides synchronization within the AML environment as usual, but also synchronizes with the OS environment.

\_DLM evaluates to a package of packages, each containing a reference to a Mutex and an optional resource template protected by the Mutex. If only the Mutex name is specified, then the sharing rules (i.e. which resources are protected by the lock) are defined by a predefined contract between the AML and the OS device driver. If the resource template is specified, then only those resources within the resource template are protected.

#### Arguments:

None

#### Return Value:

A variable-length **Package** containing sub-**packages** of Mutex **References** and resource templates. The resource template in each subpackage is optional.

#### Return Value Information

```
Package {
    DeviceLockInfo [0]    // Package
    .
    .
    DeviceLockInfo [n]    // Package
}
```

Each variable-length DeviceLockInfo sub-**Package** contains either one element or 2 elements, as described below:

```
Package {
    DeviceLockMutex    // Reference to a Mutex object
    Resources          // Buffer or Reference (Resource Template)
```

}

**Table 5-188 DeviceLockInfo Package Values**

Element	Object Type	Description
DeviceLockMutex	Reference	A reference to the mutex that is to be shared between the AML code and the host operating system.
Resources	<b>Buffer</b> (or reference to a Buffer)	Optional. Contains a Resource Template that describes the resources that are to be protected by the Device Lock Mutex.

**Example:**

```

Device (DEV1)
{
    Mutex (MTX1, 0)
    Name (RES1, ResourceTemplate ())
    {
        I2cSerialBusV2 (0x0400, DeviceInitiated, 0x00001000,
                        AddressingMode10Bit, "\\_SB.DEV1",
                        0, ResourceConsumer, I2C1)
    }
}

Name (_DLM, Package (1))
{
    Package (2)
    {
        MTX1,
        RES1
    }
}
}

Device (DEV2)
{
    Mutex (MTX2, 0)
    Mutex (MTX3, 0)
    Name (_DLM, Package (2))
    {
        Package (2)
        {
            \DEV2.MTX2,
            ResourceTemplate ()
            {
                I2cSerialBusV2 (0x0400, DeviceInitiated, 0x00001000,
                                AddressingMode10Bit, "\\_SB.DEV2",
                                0, ResourceConsumer, I2C2)
            }
        },
        Package (1) // Optional resource not needed
    }
}

```

```
\DEV2.MTX3
}
}
}
```

## 5.8 System Configuration Objects

### 5.8.1 \_PIC Method

The \\_PIC optional method is used to report to the platform runtime firmware the current interrupt model used by the OS. This control method returns nothing. The argument passed into the method signifies the interrupt model OSPM has chosen, PIC mode, APIC mode, or SAPIC mode. Notice that calling this method is optional for OSPM. If the platform CPU architecture supports PIC mode and the method is never called, the platform runtime firmware must assume PIC mode. It is important that the platform runtime firmware save the value passed in by OSPM for later use during wake operations.

#### Arguments: (1)

Arg0 – An **Integer** containing a code for the current interrupt model:

0 –	PIC mode
1 –	APIC mode
2 –	SAPIC mode
Other values –Reserved	

#### **Return Value:**

None

# 6 Device Configuration

---

This section specifies the objects OSPM uses to configure devices. There are three types of configuration objects:

Device identification objects associate platform devices with Plug and Play IDs.

- Device configuration objects declare and configure hardware resources and characteristics for devices enumerated via ACPI.
- Device insertion and removal objects provide mechanisms for handling dynamic insertion and removal of devices.

This section also defines the ACPI device–resource descriptor formats. Device–resource descriptors are used as parameters by some of the device configuration objects.

## 6.1 Device Identification Objects

Device identification objects associate each platform device with a Plug and Play device ID for each device. All the device identification objects are listed in the table below:

**Table 6-189 Device Identification Objects**

Object	Description
_ADR	Object that evaluates to a device's address on its parent bus.
_CID	Object that evaluates to a device's Plug and Play-compatible ID list.
_CLS	Object that evaluates to a package of coded device-class information.
_DDN	Object that associates a logical software name (for example, COM1) with a device.
_HID	Object that evaluates to a device's Plug and Play hardware ID.
_HRV	Object that evaluates to an integer hardware revision number.
_MLS	Object that provides a human readable description of a device in multiple languages.
_PLD	Object that provides physical location description information.
_PRD {deprecated}	Object that evaluates to a package of device property subpackages.
_SUB	Object that evaluates to a device's Plug and Play subsystem ID.
_SUN	Object that evaluates to the slot-unique ID number for a slot.
_STR	Object that contains a Unicode identifier for a device. Can also be used for thermal zones.
_UID	Object that specifies a device's unique persistent ID, or a control method that generates it.

For any device that is on a non-enumerable type of bus (for example, an ISA bus), OSPM enumerates the devices' identifier(s) and the ACPI system firmware must supply an \_HID object (plus one or more optional objects such as \_CID, \_CLS, \_HRV, \_SUB) for each device to enable OSPM to do that. For devices on an enumerable type of bus, such as a PCI bus, the ACPI system must identify which device on the enumerable bus is identified by a particular address; the ACPI system firmware must supply an \_ADR

object for each device to enable this. A device object must contain either an \_HID object or an \_ADR object, but should not contain both.

If any of these objects are implemented as control methods, these methods may depend on operation regions. Since the control methods may be evaluated before an operation region provider becomes available, the control method must be structured to execute in the absence of the operation region provider. (\_REG methods notify the platform runtime firmware of the presence of operation region providers.) When a control method cannot determine the current state of the hardware due to a lack of operation region provider, it is recommended that the control method should return the condition that was true at the time that control passed from the platform boot firmware to the OS. (The control method should return a default, boot value).

### 6.1.1 \_ADR (Address)

This object is used to supply OSPM with the address of a device on its parent bus. An \_ADR object must be used when specifying the address of any device on a bus that has a standard enumeration algorithm (see [Section 3.7](#), “Configuration and Plug and Play”, for the situations when these devices do appear in the ACPI namespace).

#### Arguments:

None

#### Return Value:

An **Integer** containing the address of the device

An \_ADR object can be used to provide capabilities to the specified address even if a device is not present. This allows the system to provide capabilities to a slot on the parent bus.

OSPM infers the parent bus and segment from the location of the \_ADR object’s device package in the ACPI namespace. For more information about the positioning of device packages in the ACPI namespace, see [Section 19.6.30](#), “Device (Declare Bus/Device Package)”

\_ADR object information must be static and can be defined for the following bus types listed in [Table 6-190](#).

**Table 6-190 ADR Object Address Encodings**

<b>BUS</b>	<b>Address Encoding</b>
EISA	EISA slot number 0–F
Floppy Bus	Drive select values used for programming the floppy controller to access the specified INT13 unit number. The _ADR Objects should be sorted based on drive select encoding from 0-3.
I3C	Bits [63:52] - Reserved Bits [51:48] - Master Instance Bits [47:0] - I3C Device Provisional ID, following encoding defined in the MIPI Specification for I3C (Version 1.0, section 5.1.4.1). If an I3C device supports a static address instead of a Provisional ID, then bits [47:7] are Reserved (zero), and bits [6:0] are the 7-bit static address.
IDE Controller	0–Primary Channel, 1–Secondary Channel
IDE Channel	0–Master drive, 1–Slave drive
Intel® High Definition Audio	High word – SDI (Serial Data In) ID of the codec that contains the function group. Low word – Node ID of the function group.
PCI	High word–Device #, Low word–Function #. (for example, device 3, function 2 is 0x00030002). To refer to all the functions on a device #, use a function number of FFFF).
PCMCIA	Socket #; 0–First Socket
PC CARD	Socket #; 0–First Socket
Serial ATA	SATA Port: High word—Root port #, Low word—port number off of a SATA port multiplier, or 0xFFFF if no port multiplier attached. (For example, root port 2 would be 0x0002FFFF. If instead a port multiplier had been attached to root port 2, the ports connected to the multiplier would be encoded 0x00020000, 0x00020001, etc.) The value 0xFFFFFFFF is reserved.
SMBus	Lowest Slave Address
USB Root HUB	Only one child of the host controller. It must have an _ADR of 0. No other children or values of _ADR are allowed.
USB Ports	Port number (1-n)
SDIO Bus	High word - Slot number (0-First Slot) Low word - Function number (see SD specification for definitions.)
NVDIMM	NFIT Device handle as defined by <a href="#">Section 5.2.25.3</a> (Memory Device to System Physical Address Range Mapping Structure)

### 6.1.2 \_CID (Compatible ID)

This optional object is used to supply OSPM with a device's Plug and Play-Compatible Device ID. Use `_CID` objects when a device has no other defined hardware standard method to report its compatible IDs.

#### Arguments:

None

#### Return Value:

An **Integer** or **String** containing a single CID or a **Package** containing a list of CIDs

A `_CID` object evaluates to either:

- A single Compatible Device ID
- A package of Compatible Device IDs for the device — in the order of preference, highest preference first.

Each Compatible Device ID must be either:

- A valid HID value (a 32-bit compressed EISA type ID or a string such as "ACPI0004").
- A string that uses a bus-specific nomenclature. For example, `_CID` can be used to specify the PCI ID. The format of a PCI ID string is one of the following:

```
"PCI\CC_ccss"
"PCI\CC_ccsspp"
"PCI\VEN_vvvv&DEV_dddd&SUBSYS_ssaaaa&REV_rr"
"PCI\VEN_vvvv&DEV_dddd&SUBSYS_ssaaaa"
"PCI\VEN_vvvv&DEV_dddd&REV_rr"
"PCI\VEN_vvvv&DEV_dddd"
```

Where:

cc	– hexadecimal representation of the Class Code byte
ss	– hexadecimal representation of the Subclass Code byte
pp byte	– hexadecimal representation of the Programming Interface
vvvv	– hexadecimal representation of the Vendor ID
dddd	– hexadecimal representation of the Device ID
ssaaaa	– hexadecimal representation of the Subsystem ID
rr	– hexadecimal representation of the Revision byte

A compatible ID retrieved from a `_CID` object is only meaningful if it is a non-NULL value.

#### **Example ASL:**

```
Device (XYZ) {
    Name (_HID, EISAID ("PNP0303"))      // PC Keyboard Controller
    Name (_CID, EISAID ("PNP030B"))
}
```

### 6.1.3 \_CLS (Class Code)

This object is used to supply OSPM with the PCI-defined base-class, sub-class and programming interface for a device. This object is optional. However, it may be useful for loading generic drivers on hardware that is compatible with PCI -defined device classes, but that is not implemented on the PCI bus (and is therefore enumerated by ACPI.)

#### Arguments:

None

#### **Return Value:**

A **Package** containing the PCI -defined class information as a list of **Integers**:

Package(3) {<Base-Class code>, <Sub-Class code>, <Programming Interface code>}

A list of available class codes and programming interface codes is provided by the PCI SIG. See "PCI Code and ID Assignment Specification", available from "Links to ACPI-Related Documents" (<http://uefi.org/acpi>) under the heading "PCI Code and ID Assignment Specification"

Example ASL:

```
Device(SATA) //AHCI - compatible SATA controller
{
  Name(_HID, ...)
  Name(_CLS, Package (3)
  {
    0x01, // Base Class (01h == Mass Storage)
    0x06, // Sub-Class (06h == SATA)
    0x01, // Programming Interface (01h == AHCI )
  })
  Name(_CRS, ResourceTemplate()
  {
    ... // AHCI -defined system resources
  })
}
```

### 6.1.4 \_DDN (DOS Device Name)

This object is used to associate a logical name (for example, COM1) with a device. This name can be used by applications to connect to the device.

#### Arguments:

None

#### **Return Value:**

A **String** containing the DOS device name

### 6.1.5 \_HID (Hardware ID)

This object is used to supply OSPM with the device's PNP ID or ACPI ID.<sup>1</sup>

When describing a platform, use of any \_HID objects is optional. However, a \_HID object must be used to describe any device that will be enumerated by OSPM. OSPM only enumerates a device when no bus enumerator can detect the device ID. For example, devices on an ISA bus are enumerated by OSPM. Use the \_ADR object to describe devices enumerated by bus enumerators other than OSPM.

### **Arguments:**

None

### **Return Value:**

An **Integer** or **String** containing the HID

A \_HID object evaluates to either a numeric 32-bit compressed EISA type ID or a string. If a string, the format must be an alphanumeric PNP or ACPI ID with no asterisk or other leading characters.

A valid PNP ID must be of the form "AAA##### where A is an uppercase letter and # is a hex digit.

A valid ACPI ID must be of the form "NNNN##### where N is an uppercase letter or a digit ('0'-'9') and # is a hex digit. This specification reserves the string "ACPI" for use only with devices defined herein. It further reserves all strings representing 4 HEX digits for exclusive use with PCI-assigned Vendor IDs.

### **Example ASL:**

```
Name (_HID, EISAID ("PNPOCOC"))      // Control -Method Power Button
Name (_HID, EISAID ("INT0800"))       // Firmware Hub
Name (_HID, "ACPI0003")              // AC adapter device
Name (_HID, "MSFT0003")              // Vendor-defined device
Name (_HID, "80860003")              // PCI -assigned device identifier
```

### **6.1.6 \_HRV (Hardware Revision)**

This object is used to supply OSPM with the device's hardware revision. The use of \_HRV is optional.

### **Arguments:**

None

### **Return Value:**

An **Integer (DWORD)** containing the hardware revision number

### **Example ASL:**

```
Name (_HRV, 0x0003) // Revision number 3 of this hardware device
```

### **6.1.7 \_MLS (Multiple Language String)**

The \_MLS object provides OSPM a human readable description of a device in multiple languages. This information may be provided to the end user when the OSPM is unable to get any other information about this device. Although this functionality is also provided by the \_STR object, \_MLS expands that functionality and provides vendors with the capability to provide multiple strings in multiple languages. The \_MLS object evaluates to a package of packages. Each sub-package consists of a Language identifier

---

1. PNP ID and ACPI ID Registry is at [http://www.uefi.org/PNP\\_ACPI\\_Registry](http://www.uefi.org/PNP_ACPI_Registry).

and corresponding unicode string for a given locale. Specifying a language identifier allows OSPM to easily determine if support for displaying the Unicode string is available. OSPM can use this information to determine whether or not to display the device string, or which string is appropriate for a user's preferred locale.

It is assumed that OSPM will always support the primary English locale to accommodate English embedded in a non-English string, such as a brand name.

If OSPM doesn't support the specific sub-language ID it may choose to use the primary language ID for displaying device text.

### **Arguments:**

None

### **Return Value:**

A variable-length **Package** containing a list of language descriptor **Packages** as described below.

### **Return Value Information**

```
Package {
    LanguageDescriptor[0]      // Package
    LanguageDescriptor[n]      // Package
}
```

Each Language Descriptor sub-**Package** contains the elements described below:

```
Package {
    LanguageId        // String
    UnicodeDescription // Buffer
}
```

*LanguageId* is a string identifying the language. This string follows the format specified in the Internet RFC 3066 document (Tags for the Identification of Languages). In addition to supporting the existing strings in RFC 3066, [Table 6-191](#) lists aliases that are also supported.

**Table 6-191 Additional Language ID Alias Strings**

RFC String	Supported Alias String
zh-Hans	zh-chs
zh-Hant	zh-cht

*UnicodeDescription* is a Buffer containing a Unicode (UTF-16) string. This string contains the language-specific description of the device corresponding to the *LanguageID*. The `Unicode()` ASL macro can be used to create this Buffer.

### **Example:**

```
Device (XYZ) {
    Name (_ADR, 0x00020001)
    Name (_MLS, Package(){(2){“en”, Unicode("ACME super DVD controller")}})
```

### 6.1.8 \_PLD (Physical Location of Device)


This optional object is a method that conveys to OSPM a general description of the physical location of a device's external connection point. The \_PLD may be child object for any ACPI Namespace object the system wants to describe. This information can be used by system software to describe to the user which specific connector or device input mechanism may be used for a given task or may need user intervention for correct operation. The \_PLD should only be evaluated when its parent device is present as indicated by the device's presence mechanism (i.e. \_STA or other)

An externally exposed device connection point can reside on any surface of a system's housing. The respective surfaces of a system's housing are identified by the "Panel" field (described below). The \_PLD method returns data to describe the location of where the device's connection point resides and a Shape (described below) that may be rendered at that position. One physical device may have several connection points. A \_PLD describes the offset and rotation of a single device connection point from an "origin" that resides in the lower left hand corner of its Panel.

All Panel references (Top, Bottom, Right, Left, etc.) are interpreted as though the user is facing the front of the system. For handheld mobile devices, the front panel is the one holding the display screen, and its origin is in the lower-left corner when the display is viewed in the Portrait orientation. For example, the Right Panel is the right side of the system as viewed from the front.


All "origin" references for a Panel are interpreted as its lower left corner when the user is facing the respective Panel. The Top Panel shall be viewed with the system is viewed resting on its Front Panel, and the Bottom Panel shall be viewed with the system resting on its Back Panel. All other Panels shall be viewed with the system resting on its Bottom Panel. Refer to [Figure 6-29](#) for more information.

**Figure 6-29 System Panel and Panel Origin Positions**

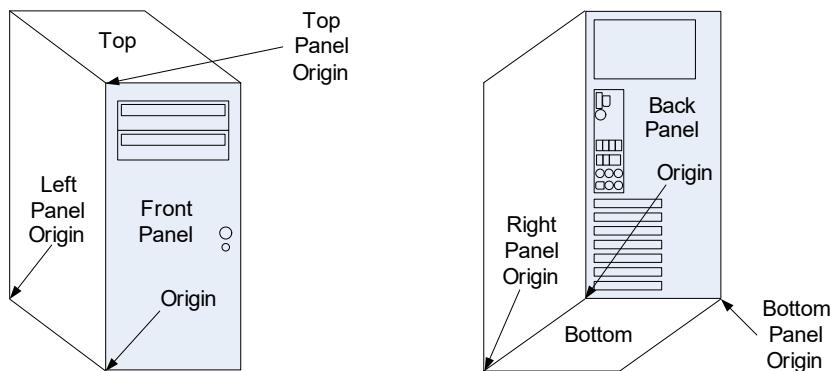

The data bits also assume that if the system is capable of opening up like a laptop that the device may exist on the base of the laptop system or on the lid. In the case of the latter, the "Lid" bit (described below) should be set indicating the device connection point is on the lid. If the device is on the lid, the description describes the device's connection point location when the system is opened with the lid up. If the device connection point is not on the lid, then the description describes the device's connection point location when the system with the lid closed.

**Figure 6-30 Laptop Panel and Panel Origin Positions**

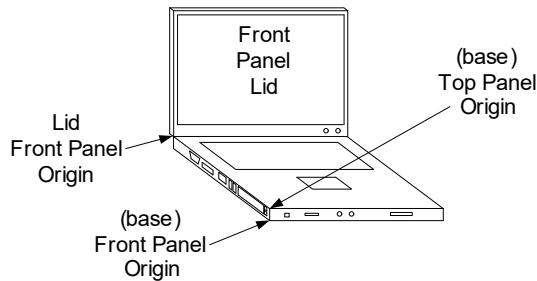

To render a view of a system Panel, all \_PLDs that define the same Panel and Lid values are collected. The \_PLDs are then sorted by the value of their Order field and the view of the panel is rendered by drawing the shapes of each connection point (in their correct Shape, Color, Horizontal Offset, Vertical Offset, Width, Height, and Orientation) starting with all Order = 0 \_PLDs first. Refer to [Figure 6-32](#) for an example.

The location of a device connection point may change as a result of the system connecting or disconnecting to a docking station or a port replicator. As such, Notify event of type 0x09 will cause OSPM to re-evaluate the \_PLD object residing under the particular device notified. If a platform is unable to detect the change of connecting or disconnecting to a docking station or port replicator, a \_PLD object should not be used to describe the device connection points that will change location after such an event.

### **Arguments:**

None

### **Return Value:**

A variable-length **Package** containing a list of **Buffers**

This method returns a package containing a single or multiple buffer entries. At least one buffer entry must be returned using the bit definitions below.

### **Buffer 0 Return Value**

Name	Definition	DWORD	Bit Offset (DWORD)	Bit Offset (Buffer)	Length (bits)
Revision	The current Revision is 0x2	0	0	0	7
Ignore Color	If this bit is set, the Color field is ignored, as the color is unknown.	0	7	7	1
Color	24-bit RGB value for the color of the device connection point. Bits [15:8]=red value Bits [23:16]=green value Bits [31:24]=blue value	0	8	8	24
Width	Width of the widest point of the device connection point, in millimeters	1	0	32	16

Name	Definition	DWORD	Bit Offset (DWORD)	Bit Offset (Buffer)	Length (bits)
Height	Height of the tallest point of the device connection point, in millimeters	1	16	48	16
User Visible	Set if the device connection point can be seen by the user without disassembly.	2	0	64	1
Dock	Set if the device connection point resides in a docking station or port replicator.	2		65	1
Lid	Set if this device connection point resides on the lid of laptop system.	2		66	1
Panel	Describes which panel surface of the system's housing the device connection point resides on.  0 – Top 1 – Bottom 2 – Left 3 – Right 4 – Front 5 – Back 6 – Unknown (Vertical Position and Horizontal Position will be ignored)	2		67	3
Vertical Position on the panel where the device connection point resides.	0 – Upper 1 – Center 2 – Lower	2		70	2
Horizontal Position on the panel where the device connection point resides.		2		72	2

Name	Definition	DWORD	Bit Offset (DWORD)	Bit Offset (Buffer)	Length (bits)
Shape	<p>Describes the shape of the device connection point. The Width and Height fields may be used to distort a shape, e.g. A Round shape will look like an Oval shape if the Width and Height are not equal. And a Vertical Rectangle or Horizontal Rectangle may look like a square if Width and Height are equal. Refer to <a href="#">Figure 6-31</a>.</p> <ul style="list-style-type: none"> <li>0 – Round</li> <li>1 – Oval</li> <li>2 – Square</li> <li>3 – Vertical Rectangle</li> <li>4 – Horizontal Rectangle</li> <li>5 – Vertical Trapezoid</li> <li>6 – Horizontal Trapezoid</li> <li>7 – Unknown – Shape rendered as a Rectangle with dotted lines</li> <li>8 – Chamfered</li> <li>15:9 – Reserved</li> </ul>	2		74	4
Group Orientation	if Set, indicates vertical grouping, otherwise horizontal is assumed.	2		78	1
Group Token	Unique numerical value identifying a group.	2		79	1
Group Position	Identifies this device connection point's position in the group (i.e. 1 <sup>st</sup> , 2 <sup>nd</sup> )	2		87	8
Bay	Set if describing a device in a bay or if device connection point is a bay.	2		95	1
Ejectable	Set if the device is ejectable. Indicates ejectability in the absence of _EJx objects.	2		96	1
OSPM Ejection required	OSPM Ejection required: Set if OSPM needs to be involved with ejection process. User-operated physical hardware ejection is not possible.	2		97	1
Cabinet Number	For single cabinet system, this field is always 0.	2		98	8
Card Cage Number	For single card cage system, this field is always 0.	2		106	8

Name	Definition	DWORD	Bit Offset (DWORD)	Bit Offset (Buffer)	Length (bits)
reference	if Set, this _PLD defines a “reference” shape that is used to help orient the user with respect to the other shapes when rendering _PLDs.	2		114	1
Rotation	Rotates the Shape clockwise in 45 degree steps around its origin where: 0 – 0° 1 – 45° 2 – 90° 3 – 135° 4 – 180° 5 – 225° 6 – 270° 7 – 315°	2		115	4
Order	Identifies the drawing order of the connection point described by a _PLD. Order = 0 connection points are drawn before Order = 1 connection points. Order = 1 before Order = 2, and so on. Order = 31 connection points are drawn last. Order should always start at 0 and be consecutively assigned.	2		119	5
Reserved	Reserved, must contain a value of 0.	2		124	4
Vertical Offset	Offset of Shape Origin from Panel Origin (in mm). A value of 0xFFFFFFFF indicates that this field is not supplied.	2		128	16
Horizontal Offset	Offset of Shape Origin from Panel Origin (in mm). A value of 0xFFFFFFFF indicates that this field is not supplied.	2		144	16

**Note:** All additional buffer entries returned may contain OEM-specific data, but must begin in a {GUID, data} pair. These additional data may provide complimentary physical location information specific to certain systems or class of machines.

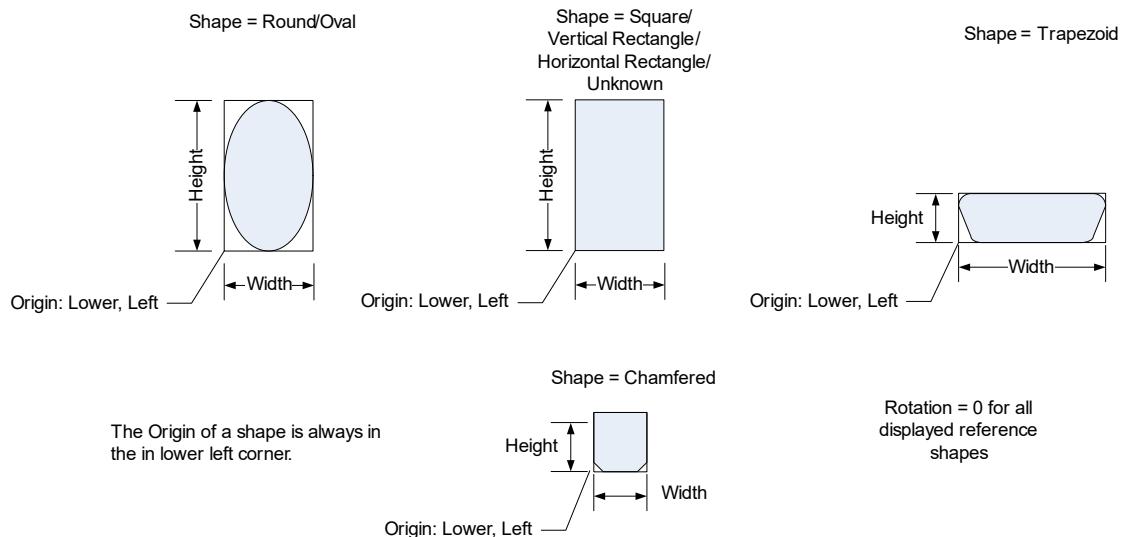


Figure 6-31 Default Shape Definitions

## Buffers 1 – N Return Value (Optional):

Buffer 1 Bit [127:0] – GUID 1

Buffer 2 Bit [127:0] – Data 1

Buffer 3 Bit [127:0] – GUID 2

Buffer 4 Bit [127:0] – Data 2

.....

[Figure 6-32](#) provides an example of a rendering of the external device connection points that may be conveyed to the user by \_PLD information. Note that three \_PLDs (*System Back Panel*, *Power Supply*, and *Motherboard (MB) Connector Area*) that are associated with the System Bus tree (\_SB) object. Their Reference flag is set indicating that are used to provide the user with visual queues for identifying the relative locations of the other device connection points.

The connection points (C1 through C16) are defined by \_PLD objects found in the System bus tree.

The following connection points all have their Panel and Lid fields set to Back and 0, respectively. And the Reference flag of the System Back Panel, Power Supply, and MB Connector Area connection points are set to 1. in this example are used to render [Figure 6-32](#):


**Table 6-192 PLD Back Panel Example Settings**

Name	Ignore Color	R	G	B	Width	Height	VOff	HOff	Shape	Notation	Group Position	Rotation
Back Panel	Yes	0	0	0	2032	4318	0	0	V Rect	1		0
MB Conn area	Yes	0	0	0	445	1556	1588	127	V Rect	2		0
Power Supply	Yes	0	0	0	1524	889	3302	127	H Rect	2		0
USB Port 1	No	0	0	0	125	52	2223	159	H Rect	C1	3	90
USB Port 2	No	0	0	0	125	52	2223	254	H Rect	C2	3	90
USB Port 3	No	0	0	0	125	52	2223	350	H Rect	C3	3	90
USB Port 4	No	0	0	0	125	52	2223	445	H Rect	C4	3	90
USB Port 5	No	0	0	0	125	52	2007	159	H Rect	C5	3	90
USB Port 6	No	0	0	0	125	52	2007	254	H Rect	C6	3	90
Ethernet	No	0	0	0	157	171	2007	350	V Rect	C7	3	90
Audio 1	No	FF	FF	FF	127	127	1945	151	Round	C8	3	90
Audio 2	No	151	247	127	127	127	1945	286	Round	C9	3	90
Audio 3	No	0	0	0	127	127	1945	427	Round	C10	3	90
SPDIF	No	0	0	0	112	126	1756	176	V Trap	C11	3	90
Audio 4	No	0	FF	0	127	127	1765	288	Round	C12	3	90
Audio 5	No	0	0	FF	127	127	1765	429	Round	C13	3	90
SATA	No	0	0	0	239	88	3091	159	H Rect	C14	3	90
1394	No	0	0	0	112	159	2890	254	H Trap	C15	3	0
Coax	No	0	0	0	159	159	2842	143	Round	C16	3	90
PCI 1	No	0	0	0	1016	127	127	127	H Rect	1	3	0

Name	Ignore Color	R	G	B	Width	Height	Voff	Hoff	Shape	Notation	Group Position	Rotation
PCI 2	No	0	0	0	1016	127	334	127	H Rect	2	3	0
PCI 3	No	0	0	0	1016	127	540	127	H Rect	3	3	0
PCI 4	No	0	0	0	1016	127	747	127	H Rect	4	3	0
PCI 5	No	0	0	0	1016	127	953	127	H Rect	5	3	0
PCI 6	No	0	0	0	1016	127	1159	127	H Rect	6	3	0
PCI 7	No	0	0	0	1016	127	1366	127	H Rect	7	3	0

Note that the origin is in the lower left hand corner of the Back Panel, where positive Horizontal and Vertical Offset values are to the right and up, respectively.

Figure 6-32 PLD Back Panel Rendering

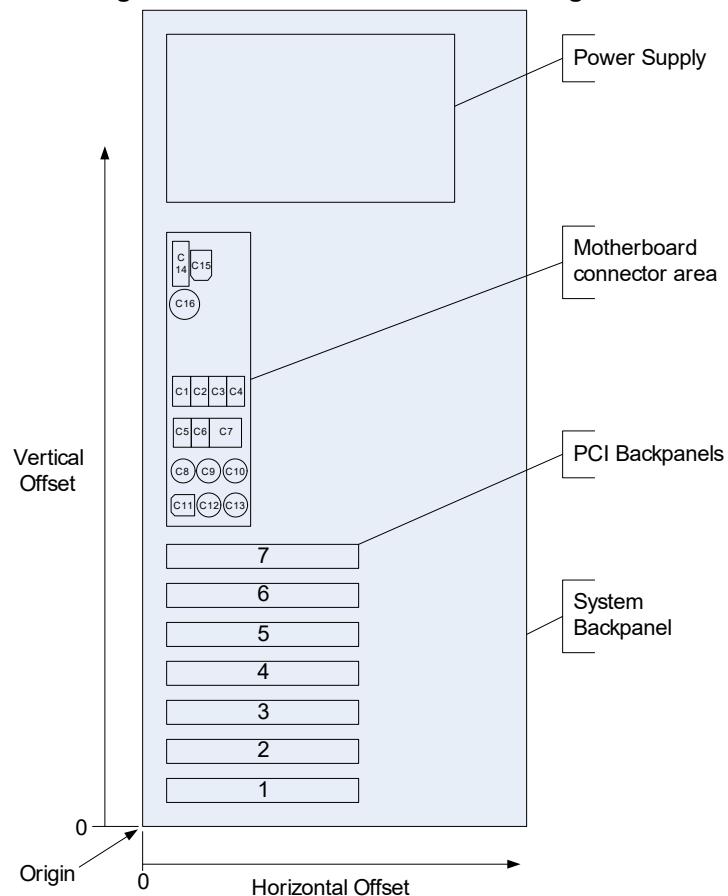

### 6.1.9 \_SUB (Subsystem ID)

This object is used to supply OSPM with the device's Subsystem ID. The use of \_SUB is optional.

#### Arguments:

None

#### Return Value:

A String containing the SUB

A \_SUB object evaluates to a string and the format must be a valid PNP or ACPI ID with no asterisk or other leading characters.

See the definition of \_HID ([Section 6.1.5](#)) for the definition of PNP and ACPI ID strings.

### Example ASL:

```
Name (_SUB, "MSFT3000")// Vendor-defined subsystem
```

### 6.1.10 \_STR (String)

The \_STR object evaluates to a Unicode string that describes the device or thermal zone. It may be used by an OS to provide information to an end user. This information is particularly valuable when no other information is available.

#### Arguments:

None

#### Return Value:

A Buffer containing a Unicode string that describes the device

### Example ASL:

```
Device (XYZ) {
    Name (_ADR, 0x00020001)
    Name (_STR, Unicode ("ACME super DVD controller"))
}
```

Then, when all else fails, an OS can use the info included in the \_STR object to describe the hardware to the user.

### 6.1.11 \_SUN (Slot User Number)

\_SUN is an object that evaluates to the slot-unique ID number for a slot. \_SUN is used by OSPM UI to identify slots for the user. For example, this can be used for battery slots, PCI slots, PCMCIA slots, or swappable bay slots to inform the user of what devices are in each slot. \_SUN evaluates to an integer that is the number to be used in the user interface.

#### Arguments:

None

#### Return Value:

An Integer containing the slot's unique ID

The \_SUN value is required to be unique among the slots of the same type. It is also recommended that this number match the slot number printed on the physical slot whenever possible.

### 6.1.12 \_UID (Unique ID)

This object provides OSPM with a logical device ID that does not change across reboots. This object is optional, but is required when the device has no other way to report a persistent unique device ID. The \_UID must be unique across all devices with either a common \_HID or \_CID. This is because a device needs to be uniquely identified to the OSPM, which may match on either a \_HID or a \_CID to identify the device. The uniqueness match must be true regardless of whether the OSPM uses the \_HID or the \_CID. OSPM typically uses the unique device ID to ensure that the device-specific information, such as network protocol binding information, is remembered for the device even if its relative location changes. For most integrated devices, this object contains a unique identifier.

A \_UID object evaluates to either a numeric value or a string.

#### Arguments:

None

#### Return Value:

An **Integer** or **String** containing the Unique ID

## 6.2 Device Configuration Objects

This section describes objects that provide OSPM with device specific information and allow OSPM to configure device operation and resource utilization.

OSPM uses device configuration objects to configure hardware resources for devices enumerated via ACPI. Device configuration objects provide information about current and possible resource requirements, the relationship between shared resources, and methods for configuring hardware resources.

**Note:** *these objects must only be provided for devices that cannot be configured by any other hardware standard such as PCI, PCMCIA, and so on.*

When OSPM enumerates a device, it calls \_PRS to determine the resource requirements of the device. It may also call \_CRS to find the current resource settings for the device. Using this information, the Plug and Play system determines what resources the device should consume and sets those resources by calling the device's \_SRS control method.

In ACPI, devices can consume resources (for example, legacy keyboards), provide resources (for example, a proprietary PCI bridge), or do both. Unless otherwise specified, resources for a device are assumed to be taken from the nearest matching resource above the device in the device hierarchy.

Some resources, however, may be shared amongst several devices. To describe this, devices that share a resource (resource consumers) must use the extended resource descriptors (0x7-0xA) described in [Section 6.4.3](#), “Large Resource Data Type.” These descriptors point to a single device object (resource producer) that claims the shared resource in its \_PRS. This allows OSPM to clearly understand the resource dependencies in the system and move all related devices together if it needs to change resources. Furthermore, it allows OSPM to allocate resources only to resource producers when devices that consume that resource appear.

The device configuration objects are listed in [Table 6-193](#)

**Table 6-193 Device Configuration Objects**

Object	Description
_CCA	Cache Coherency Attribute -- specifies whether a device and its descendants support hardware managed cache coherency.
_CDM	Object that specifies a clock domain for a processor.
_CRS	Object that specifies a device's <i>current</i> resource settings, or a control method that generates such an object.
_DIS	Control method that disables a device.
_DMA	Object that specifies a device's <i>current</i> resources for DMA transactions.
_DSD	Object that evaluates to device specific information
_FIX	Object used to provide correlation between the fixed-hardware register blocks defined in the FADT and the devices that implement these fixed-hardware registers.
_GSB	Object that provides the Global System Interrupt Base for a hot-plugged I/O APIC device.
_HMA	Object that provides updated HMAT structures.
_HPP	Object that specifies the cache-line size, latency timer, SERR enable, and PERR enable values to be used when configuring a PCI device inserted into a hot-plug slot or initial configuration of a PCI device at system boot.
_HPX	Object that provides device parameters when configuring a PCI device inserted into a hot-plug slot or initial configuration of a PCI device at system boot. Supersedes _HPP.
_MAT	Object that evaluates to a buffer of Interrupt Controller Structures.
_OSC	An object OSPM evaluates to convey specific software support / capabilities to the platform allowing the platform to configure itself appropriately.
_PRS	An object that specifies a device's <i>possible</i> resource settings, or a control method that generates such an object.
_PRT	Object that specifies the PCI interrupt routing table.
_PXM	Object that specifies a proximity domain for a device.
_SLI	Object that provides updated distance information for a system locality.
_SRS	Control method that sets a device's settings.

### 6.2.1 \_CDM (Clock Domain)

This optional object conveys the processor clock domain to which a processor belongs. A processor clock domain is a unique identifier representing the hardware clock source providing the input clock for a given set of processors. This clock source drives software accessible internal counters, such as the Time Stamp Counter, in each processor. Processor counters in the same clock domain are driven by the same hardware clock source. In multi-processor platforms that utilize multiple clock domains, such counters may exhibit drift when compared against processor counters on different clock domains.

The \_CDM object evaluates to an integer that identifies the device as belonging to a specific clock domain. OSPM assumes that two devices in the same clock domain are connected to the same hardware clock.

#### **Arguments:**

None

#### **Return Value:**

An **Integer** (DWORD) containing a clock domain identifier.

In the case the platform does not convey any clock domain information to OSPM via the SRAT or the \_CDM object, OSPM assumes all logical processors to be on a common clock domain. If the platform defines \_CDM object under a logical processor then it must define \_CDM objects under all logical processors whose clock domain information is not provided via the SRAT.

### **6.2.2 \_CRS (Current Resource Settings)**

This required object evaluates to a byte stream that describes the system resources currently allocated to a device. Additionally, a bus device must supply the resources that it decodes and can assign to its children devices. If a device is disabled, then \_CRS returns a valid resource template for the device, but the actual resource assignments in the return byte stream are ignored. If the device is disabled when \_CRS is called, it must remain disabled.

The format of the data contained in a \_CRS object follows the formats defined in [Section 6.4](#) “Resource Data Types for ACPI,” a compatible extension of the formats specified in the PNPBIOS specification.<sup>2</sup> The resource data is provided as a series of data structures, with each of the resource data structures having a unique tag or identifier. The resource descriptor data structures specify the standard PC system resources, such as memory address ranges, I/O ports, interrupts, and DMA channels.

#### **Arguments:**

None

#### **Return Value:**

A **Buffer** containing a resource descriptor byte stream

### **6.2.3 \_DIS (Disable)**

This control method disables a device. When the device is disabled, it must not be decoding any hardware resources. Prior to running this control method, OSPM will have already put the device in the D3 state.

When a device is disabled via the \_DIS, the \_STA control method for this device must return with the Disabled bit set.

#### **Arguments:**

None

---

2. Plug and Play BIOS Specification Version 1.0A, May 5, 1994, Compaq Computer Corp., Intel Corp., Phoenix Technologies Ltd.

**Return Value:**

None

**6.2.4 \_DMA (Direct Memory Access)**

This optional object returns a byte stream in the same format as a \_CRS object. \_DMA is only defined under devices that represent buses. It specifies the ranges the bus controller (bridge) decodes on the child-side of its interface. (This is analogous to the \_CRS object, which describes the resources that the bus controller decodes on the parent-side of its interface.) Any ranges described in the resources of a \_DMA object can be used by child devices for DMA or bus master transactions.

The \_DMA object is only valid if a \_CRS object is also defined. OSPM must re-evaluate the \_DMA object after an \_SRS object has been executed because the \_DMA ranges resources may change depending on how the bridge has been configured.

If the \_DMA object is not present for a bus device, the OS assumes that any address placed on a bus by a child device will be decoded either by a device on the bus or by the bus itself, (in other words, all address ranges can be used for DMA).

For example, if a platform implements a PCI bus that cannot access all of physical memory, it has a \_DMA object under that PCI bus that describes the ranges of physical memory that can be accessed by devices on that bus.

A \_DMA object is not meant to describe any “map register” hardware that is set up for each DMA transaction. It is meant only to describe the DMA properties of a bus that cannot be changed without reevaluating the \_SRS method.

**Arguments:**

None

**Return Value:**

A **Buffer** containing a resource descriptor byte stream

\_DMA Example ASL:

```
Device(BUS0)
{
    //
    // The _DMA method returns a resource template describing the
    // addresses that are decoded on the child side of this
    // bridge. The contained resource descriptors thus indicate
    // the address ranges that bus masters living below this
    // bridge can use to send accesses through the bridge toward a
    // destination elsewhere in the system (e.g. main memory).
    //
    // In our case, any bus master addresses need to fall between
    // 0 and 0x80000000 and will have 0x200000000 added as they
    // cross the bridge. Furthermore, any child-side accesses
    // falling into the range claimed in our _CRS will be
    // interpreted as a peer-to-peer traffic and will not be
    // forwarded upstream by the bridge.
}
```

```

// Our upstream address decoder will only claim one range from
// 0x20000000 to 0xffffffff in the _CRS. Therefore _DMA
// should return two QWORDMemory descriptors, one describing
// the range below and one describing the range above this
// "peer-to-peer" address range.
//

Method(_DMA, ResourceTemplate())
{
    QWORDMemory(
        ResourceConsumer,
        PosDecode,          // _DEC
        MinFixed,           // _MIF
        MaxFixed,           // _MAF
        Prefetchable,       // _MEM
        ReadWrite,          // _RW
        0,                  // _GRA
        0,                  // _MIN
        0xffffffff,         // _MAX
        0x200000000,        // _TRA
        0x200000000,        // _LEN
        ,
        ,
        )

    QWORDMemory(
        ResourceConsumer,
        PosDecode,          // _DEC
        MinFixed,           // _MIF
        MaxFixed,           // _MAF
        Prefetchable,       // _MEM
        ReadWrite,          // _RW
        0,                  // _GRA
        0x60000000,         // _MIN
        0x7fffffff,         // _MAX
        0x200000000,        // _TRA
        0x200000000,        // _LEN
        ,
        ,
        )
    ))
}

```

### **6.2.5 \_DSD (Device Specific Data)**

This optional object is used to provide device drivers (via OSPM) with additional device properties and information. `_DSD` returns a variable-length package containing a list of Device Data Descriptor structures each consisting of a UUID (see [Section 5.2.4](#)) and a package (Data Structure). The UUID is all that is needed to define the Data Structure. The UUID itself *may* place a restriction based on HID or the

optional \_CID, \_CLS, \_HRV, \_SUB objects, or \_HID and one of those optional objects. However, it also may not place such a restriction.

New UUIDs may be created by OEMs and IHVs or other interface or device governing bodies (e.g. the PCI SIG or the UEFI Forum), as long as the UUID is different from other published UUIDs.

The list of well-known UUIDs allocated for \_DSD and the definition of data formats associated with them is available in an auxiliary document hosted on the UEFI Forum: <http://www.uefi.org/acpi>.

### **Arguments:**

None

### **Return Value:**

A variable-length Package containing a list of Device Data Descriptor structures as described below.

### **Return Value Information**

```
Package ()
{
    Device Data Descriptor 0
    ...
    Device Data Descriptor n
}
```

Each Device Data Descriptor structure consists of two elements, as follows:

```
UUID           // Buffer (16 bytes)
Data Structure // Package (depending on UUID)
```

*UUID* uniquely determines the format of *Data Structure*.

*Data Structure* is a set of device specific data items the format of which is uniquely determined by the *UUID* and the meaning of which is uniquely determined by the *UUID* possibly in combination with a PNP or ACPI device ID.

Multiple Device Data Descriptor structures with the same *UUID* are not permitted.

\_DSD must return the same data each time it is evaluated. Firmware should not expect it to be evaluated every time (in case it is implemented as a method).

## Examples:

**Note:** The UUID used in the following examples is assumed to define the data format for Data Structure as a list of packages of length 2 (Properties) whose first element (Key) must be a String and the second element is a Value associated with that key. The set of valid Keys and the format and interpretation of the Values associated with them is then dependent on the PNP or ACPI device ID of the device.

```

Device (MDEV) {
    Name (_HID, "PNP#####")

    Name (_DSD, Package () {
        ToUUID("daffd814-6eba-4d8c-8a91-bc9bbf4aa301"),
        Package () {
            Package (2) {...}, // Property 1
            ...
            Package (2) {...} // Property n
        }
    })
}

// 
// PWM controller with two pins that can be driven and a device using
// those pins with the periods of 5000000 and 4500000 nanoseconds,
// respectively.
//
Device (\_SB.PCI0.PWM) {
    Name (_HID, "PNP#####")

    Name (_DSD, Package () {
        ToUUID("daffd814-6eba-4d8c-8a91-bc9bbf4aa301"),
        Package () {
            Package (2) {"#pwm-cell", 2}
        }
    })
}

Device (\_SB.PCI0.BL) {
    Name (_HID, "ACPI#####")

    Name (_DSD, Package () {
        ToUUID("daffd814-6eba-4d8c-8a91-bc9bbf4aa301"),
        Package () {
            Package (2) {
                "pwms",
                Package () {
                    \_SB.PCI0.PWM, 0, 5000000,
                    \_SB.PCI0.PWM, 1, 4500000
                }
            }
        }
    })
}
```

```

        }
    }

}

// 
// SPI controller using a fixed frequency clock represented by the CLK0
// device object.
//
Device (\_SB_.PCI0) {
    Device (CLK0) {
        Name (_HID, "PNP#####")
        Name (_DSD, Package () {
            ToUUID("daffd814-6eba-4d8c-8a91-bc9bbf4aa301"),
            Package () {
                Package (2) {"clock-cells", 0},
                Package (2) {"clock-frequency", 120000000}
            }
        })
    }

    Device (SPI0) {
        Name (_HID, "PNP#####")
        Name (_DSD, Package () {
            ToUUID("daffd814-6eba-4d8c-8a91-bc9bbf4aa301"),
            Package () {
                Package (2) {"clocks", Package () {1, ^CLK0}}
            }
        })
    }

    ...
}
}

```

## 6.2.6 \_FIX (Fixed Register Resource Provider)

This optional object is used to provide a correlation between the fixed-hardware register blocks defined in the FADT and the devices in the ACPI namespace that implement these fixed-hardware registers. This object evaluates to a package of Plug and Play-compatible IDs (32-bit compressed EISA type IDs) that correlate to the fixed-hardware register blocks defined in the FADT. The device under which \_FIX appears plays a role in the implementation of the fixed-hardware (for example, implements the hardware or decodes the hardware's address). \_FIX conveys to OSPM whether a given device can be disabled, powered off, or should be treated specially by conveying its role in the implementation of the ACPI fixed-hardware register interfaces. This object takes no arguments.

The \_CRS object describes a device's resources. That \_CRS object may contain a superset of the resources in the FADT, as the device may actually decode resources beyond what the FADT requires. Furthermore,

in a machine that performs translation of resources within I/O bridges, the processor-relative resources in the FADT may not be the same as the bus-relative resources in the \_CRS.

### Arguments:

None

### Return Value:

A variable-length **Package** containing a list of **Integers**, each containing a PNP ID

Each of fields in the FADT has its own corresponding Plug and Play ID, as shown below:

```

PNPOC20 - SMI_CMD
PNPOC21 - PM1a_EVT_BLK / X_ PM1a_EVT_BLK
PNPOC22 - PM1b_EVT_BLK / X_PM1b_EVT_BLK
PNPOC23 - PM1a_CNT_BLK / X_PM1a_CNT_BLK
PNPOC24 - PM1b_CNT_BLK / X_ PM1b_CNT_BLK
PNPOC25 - PM2_CNT_BLK / X_ PM2_CNT_BLK
PNPOC26 - PM_TMR_BLK / X_ PM_TMR_BLK
PNPOC27 - GPE0_BLK / X_GPE0_BLK
PNPOC28 - GPE1_BLK / X_ GPE1_BLK
PNPOB00 - FIXED_RTC
PNPOB01 - FIXED_RTC
PNPOB02 - FIXED_RTC

```

Example ASL for \_FIX usage:

```

Scope(\_SB) {
    Device(PCIO) { // Root PCI Bus
        Name(_HID, EISAID("PNPOA03")) // Need _HID for root device
        Method (_CRS, 0){ // Need current resources for root device
            // Return current resources for root bridge 0
        }
        Name(_PRT, Package(){ // Need PCI IRQ routing for PCI bridge
            // Package with PCI IRQ routing table information
        })
        Name(_FIX, Package(1) {
            EISAID("PNPOC25") // PM2 control ID
        })

        Device (PX40) { // ISA
            Name(_ADR, 0x00070000)
            Name(_FIX, Package(1) {
                EISAID("PNPOC20") // SMI command port
            })
            Device (NS17) { // NS17 (Nat. Semi 317, an ACPI part)
                Name(_HID, EISAID("PNPOC02"))
                Name(_FIX, Package(3) {
                    EISAID("PNPOC22"), // PM1b event ID
                    EISAID("PNPOC24"), // PM1b control ID
                    EISAID("PNPOC28") // GPE1 ID
                })
            }
        }
    }
}

```

```

        }
                // end PX40

        Device (PX43) {
                // PM Control
                Name (_ADR, 0x00070003)
                Name (_FIX, Package(4) {
                        EISAID("PNPOC21"),           // PM1a event ID
                        EISAID("PNPOC23"),           // PM1a control ID
                        EISAID("PNPOC26"),           // PM Timer ID
                        EISAID("PNPOC27")           // GPE0 ID
                })
        }
                // end PX43
                // end PCI0
}
        // end scope SB

```

### 6.2.7 \_GSB (Global System Interrupt Base)

`_GSB` is an optional object that evaluates to an integer that corresponds to the Global System Interrupt Base for the corresponding I/O APIC device. The I/O APIC device may either be bus enumerated (e.g. as a PCI device) or enumerated in the namespace as described in [Section 9.17, "I/O APIC Device"](#). Any I/O APIC device that either supports hot-plug or is not described in the MADT must contain a `_GSB` object.

If the I/O APIC device also contains a `_MAT` object, OSPM evaluates the `_GSB` object first before evaluating the `_MAT` object. By providing the Global System Interrupt Base of the I/O APIC, this object enables OSPM to process only the `_MAT` entries that correspond to the I/O APIC device. See [Section 6.2.10, "\\_MAT \(Multiple APIC Table Entry\)"](#). Since `_MAT` is allowed to potentially return all the MADT entries for the entire platform, `_GSB` is needed in the I/O APIC device scope to enable OSPM to identify the entries that correspond to that device.

If an I/O APIC device is activated by a device-specific driver, the physical address used to access the I/O APIC will be exposed by the driver and cannot be determined from the `_MAT` object. In this case, OSPM cannot use the `_MAT` object to determine the Global System Interrupt Base corresponding to the I/O APIC device and hence requires the `_GSB` object.

The Global System Interrupt Base is a 64-bit value representing the corresponding I/OAPIC device as defined in [Section 5.2.13, "Global System Interrupts"](#).

#### Arguments:

None

#### Return Value:

An **Integer** containing the interrupt base

Example ASL for `_GSB` usage for a non-PCI based I/O APIC Device:

```

Scope(\_SB) {
    ...
    Device(APIC) {
        // I/O APIC Device
        Name(_HID, "ACPI0009")      // ACPI ID for I/O APIC
        Name(_CRS, ResourceTemplate())
            { ...}                  // only one resource pointing to I/O APIC register base
        Method(_GSB){

```

```

        Return (0x10)          // Global System Interrupt Base for I/O APIC starts at 16
    }
}
}                                // end APIC
}                                // end scope SB

```

Example ASL for \_GSB usage for a PCI-based I/O APIC Device:

```

Scope(\_SB) {
    Device(PCIO)           // Host bridge
        Name(_HID, EISAID("PNPOA03")) // Need _HID for root device
    Device(PC1) {           // I/O APIC PCI Device
        Name(_ADR, 0x00070000)
    Method(_GSB){
        Return (0x18)          // Global System Interrupt Base for I/O APIC starts at 24
    }

}
}                                // end PC1
}                                // end PCIO
}                                // end scope SB

```

## 6.2.8 \_HPP (Hot Plug Parameters)

This optional object evaluates to a package containing the cache-line size, latency timer, SERR enable, and PERR enable values to be used when configuring a PCI device inserted into a hot-plug slot or for performing configuration of a PCI devices not configured by the platform boot firmware at system boot. The object is placed under a PCI bus where this behavior is desired, such as a bus with hot-plug slots. \_HPP provided settings apply to all child buses, until another \_HPP object is encountered.

### Arguments:

None

### Return Value:

A **Package** containing the **Integer** hot-plug parameters

### Example:

```

Method (_HPP, 0) {
    Return (Package(4){
        0x08,          // CacheLineSize in DWORDS
        0x40,          // LatencyTimer in PCI clocks
        0x01,          // Enable SERR (Boolean)
        0x00,          // Enable PERR (Boolean)
    })
}

```

**Table 6-194 HPP Package Contents**

Field	Object Type	Definition
Cache-line size	Integer	Cache-line size reported in number of DWORDS.

Latency timer	Integer	Latency timer value reported in number of PCI clock cycles.
Enable SERR	Integer	When set to 1, indicates that action must be performed to enable SERR in the command register.
Enable PERR	Integer	When set to 1, indicates that action must be performed to enable PERR in the command register.

### 6.2.8.1 Example: Using \_HPP

```

Scope(\_SB) {
    Device(PCIO) {           // Root PCI Bus
        Name(_HID, EISAID("PNP0A03")) // _HID for root device
        Method (_CRS, 0){         // Need current resources for root dev
            // Return current resources for root bridge 0
        }
        Name(_PRT, Package()){   // Need PCI IRQ routing for PCI bridge
            // Package with PCI IRQ routing table information
        })
        Device (P2P1) {          // First PCI-to-PCI bridge (No Hot Plug slots)
            Name(_ADR, 0x000C0000) // Device#Ch, Func#0 on bus PCIO
            Name(_PRT, Package()){ // Need PCI IRQ routing for PCI bridge
                // Package with PCI IRQ routing table information
            })
        }                       // end P2P1

        Device (P2P2) {          // Second PCI-to-PCI bridge (Bus contains Hot plug slots)
            Name(_ADR, 0x000E0000) // Device#Eh, Func#0 on bus PCIO
            Name(_PRT, Package()){ // Need PCI IRQ routing for PCI bridge
                // Package with PCI IRQ routing table information
            })
            Name(_HPP, Package(){0x08, 0x40, 0x01, 0x00})
        }

        // Device definitions for Slot 1- HOT PLUG SLOT
        Device (S1F0) {          // Slot 1, Func#0 on bus P2P2
            Name(_ADR, 0x00020000)
            Method(_EJ0, 1) {     // Remove all power to device}
        }
        Device (S1F1) {          // Slot 1, Func#1 on bus P2P2
            Name(_ADR, 0x00020001)
            Method(_EJ0, 1) {     // Remove all power to device}
        }
        Device (S1F2) {          // Slot 1, Func#2 on bus P2P2
            Name(_ADR, 0x00020002)
            Method(_EJ0, 1) {     // Remove all power to device}
        }
        Device (S1F3) {          // Slot 1, Func#3 on bus P2P2
            Name(_ADR, 0x00020003)
            Method(_EJ0, 1) {     // Remove all power to device}
        }
}
```

```

}
Device (S1F4) {          // Slot 1, Func#4 on bus P2P2
    Name(_ADR, 0x00020004)
    Method(_EJ0, 1) {    // Remove all power to device}
}
Device (S1F5) {          // Slot 1, Func#5 on bus P2P2
    Name(_ADR, 0x00020005)
    Method(_EJ0, 1) {    // Remove all power to device}
}
Device (S1F6) {          // Slot 1, Func#6 on bus P2P2
    Name(_ADR, 0x00020006)
    Method(_EJ0, 1) {    // Remove all power to device}
}
Device (S1F7) {          // Slot 1, Func#7 on bus P2P2
    Name(_ADR, 0x00020007)
    Method(_EJ0, 1) {    // Remove all power to device}
}

// Device definitions for Slot 2- HOT PLUG SLOT
Device (S2F0) {          // Slot 2, Func#0 on bus P2P2
    Name(_ADR, 0x00030000)
    Method(_EJ0, 1) {    // Remove all power to device}
}
Device (S2F1) {          // Slot 2, Func#1 on bus P2P2
    Name(_ADR, 0x00030001)
    Method(_EJ0, 1) {    // Remove all power to device}
}
Device (S2F2) {          // Slot 2, Func#2 on bus P2P2
    Name(_ADR, 0x00030002)
    Method(_EJ0, 1) {    // Remove all power to device}
}
Device (S2F3) {          // Slot 2, Func#3 on bus P2P2
    Name(_ADR, 0x00030003)
    Method(_EJ0, 1) {    // Remove all power to device}
}
Device (S2F4) {          // Slot 2, Func#4 on bus P2P2
    Name(_ADR, 0x00030004)
    Method(_EJ0, 1) {    // Remove all power to device}
}
Device (S2F5) {          // Slot 2, Func#5 on bus P2P2
    Name(_ADR, 0x00030005)
    Method(_EJ0, 1) {    // Remove all power to device}
}
Device (S2F6) {          // Slot 2, Func#6 on bus P2P2
    Name(_ADR, 0x00030006)
    Method(_EJ0, 1) {    // Remove all power to device}
}
Device (S2F7) {          // Slot 2, Func#7 on bus P2P2
    Name(_ADR, 0x00030007)
    Method(_EJ0, 1) {    // Remove all power to device}
}

```

```

        }
    }
}

// end P2P2
// end PCI0
// end Scope (\_SB)
}

```

OSPM will configure a PCI device on a card hot-plugged into slot 1 or slot 2, with a cache line size of 32 (Notice this field is in DWORDs), latency timer of 64, enable SERR, but leave PERR alone.

## 6.2.9 \_HPX (Hot Plug Parameter Extensions)

This optional object provides platform-specific information to the OSPM PCI driver component responsible for configuring PCI, PCI-X, or PCI Express Functions. The information conveyed applies to the entire hierarchy downward from the scope containing the \_HPX object. If another \_HPX object is encountered downstream, the settings conveyed by the lower-level object apply to that scope downward.

OSPM uses the information returned by \_HPX to determine how to configure PCI Functions that are hot-plugged into the system, to configure Functions not configured by the platform firmware during initial system boot, and to configure Functions any time they lose configuration space settings (e.g. OSPM issues a Secondary Bus Reset/Function Level Reset or Downstream Port Containment is triggered). The \_HPX object is placed within the scope of a PCI-compatible bus where this behavior is desired, such as a bus with hot-plug slots. It returns a single package that contains one or more sub-packages, each containing a single Setting Record. Each such Setting Record contains a Setting Type (INTEGER), a Revision number (INTEGER) and type/revision specific contents.

The format of data returned by the \_HPX object is extensible. The Setting Type and Revision number determine the format of the Setting Record. OSPM ignores Setting Records of types that it does not understand. A Setting Record with higher Revision number supersedes that with lower revision number, however, the \_HPX method can return both together, OSPM shall use the one with highest revision number that it understands. Type 3 records may have multiple records with the same revision or different revision (refer to the Revision field in [Table 6-198](#). Out of all the Type 3 records, the OSPM shall determine the highest revision number that it understands and use all Type 3 records with that revision.

\_HPX may return multiple types or Record Settings (each setting in a single sub-package.) OSPM is responsible for detecting the type of Function and for applying the appropriate settings. OSPM is also responsible for detecting the device / port type of the PCI Express Function and applying the appropriate settings provided. For example, the Secondary Uncorrectable Error Severity and Secondary Uncorrectable Error Mask settings of Type 2 record are only applicable to PCI Express to PCI-X/PCI Bridge whose device / port type is 1000b. Similarly, AER settings are only applicable to hot plug PCI Express devices that support the optional AER capability.

### Arguments:

None

### Return Value:

A variable-length **Package** containing a list of **Packages**, each containing a single PCI, PCI-X, PCI Express, or PCI Express Descriptor Record Setting as described below

The \_HPX object supersedes the \_HPP object. If the \_HPP and \_HPX objects exist within a device's scope, OSPM will only evaluate the \_HPX object.

**Note:** OSPM may override the settings provided by the \_HPX object's Type2 record (PCI Express Settings) or Type3 record (PCI Express Descriptor Settings) when OSPM has assumed native control of the corresponding feature. For example, if OSPM has assumed ownership of AER (via \_OSC), OSPM may override AER related settings returned by \_HPX.

**Note:** Since error status registers do not drive error signaling, OSPM is not required to clear error status registers as part of \_HPX handling.

**Note:** There are other mechanisms besides \_HPX that provide platform-specific information to the OSPM PCI driver component responsible for configuring PCI, PCI-X, or PCI Express Functions (e.g., \_DSM Definitions for Latency Tolerance Reporting as defined in the PCI Firmware Specification). System firmware should only provide platform-specific information via one of these mechanisms for any given register or feature (i.e., if Latency Tolerance Reporting information is provided via \_DSM Definitions for Latency Tolerance Reporting then no information related to Latency Tolerance Reporting should be provided by \_HPX and vice versa). Failure to do so will result in undefined behavior from the OSPM.

### 6.2.9.1 PCI Setting Record (Type 0)

The PCI setting record contains the setting type 0, the current revision 1 and the type/revision specific content: cache-line size, latency timer, SERR enable, and PERR enable values.

**Table 6-195 PCI Setting Record Content**

Field	Object Type	Definition
Header:		
Type	Integer	0x00: Type 0 (PCI) setting record.
Revision	Integer	0x01: Revision 1, defining the set of fields below.
Cache-line size	Integer	Cache-line size reported in number of DWORDS.
Latency timer	Integer	Latency timer value reported in number of PCI clock cycles.
Enable SERR	Integer	When set to 1, indicates that action must be performed to enable SERR in the command register.
Enable PERR	Integer	When set to 1, indicates that action must be performed to enable PERR in the command register.

If the hot plug device includes bridge(s) in the hierarchy, the above settings apply to the primary side (command register) of the hot plugged bridge(s). The settings for the secondary side of the bridge(s) (Bridge Control Register) are assumed to be provided by the bridge driver.

The Type 0 record is applicable to hot plugged PCI, PCI-X and PCI Express devices. OSPM will ignore settings provided in the Type0 record that are not applicable (for example, Cache-line size and Latency Timer are not applicable to PCI Express).

### 6.2.9.2 PCI-X Setting Record (Type 1)

The PCI-X setting record contains the setting type 1, the current revision 1 and the type/revision specific content: the maximum memory read byte count setting, the average maximum outstanding split transactions setting and the total maximum outstanding split transactions to be used when configuring PCI-X command registers for PCI-X buses and/or devices.

**Table 6-196 PCI-X Setting Record Content**

Field	Object Type	Definition
Header:		
Type	Integer	0x01: Type 1 (PCI-X) setting record.
Revision	Integer	0x01: Revision 1, defining the set of fields below.
Maximum memory read byte count	Integer	Maximum memory read byte count reported: Value 0: Maximum byte count 512 Value 1: Maximum byte count 1024 Value 2: Maximum byte count 2048 Value 3: Maximum byte count 4096
Average maximum outstanding split transactions	Integer	The following values are defined: Value 0: Maximum outstanding split transaction 1 Value 1: Maximum outstanding split transaction 2 Value 2: Maximum outstanding split transaction 3 Value 3: Maximum outstanding split transaction 4 Value 4: Maximum outstanding split transaction 8 Value 5: Maximum outstanding split transaction 12 Value 6: Maximum outstanding split transaction 16 Value 7: Maximum outstanding split transaction 32
Total maximum outstanding split transactions	Integer	See the definition for the average maximum outstanding split transactions.

For simplicity, OSPM could use the Average Maximum Outstanding Split Transactions value as the Maximum Outstanding Split Transactions register value in the PCI-X command register for each PCI-X device. Another alternative is to use a more sophisticated policy and the Total Maximum Outstanding Split Transactions Value to gain even more performance. In this case, the OS would examined each PCI-X device that is directly attached to the host bridge, determine the number of outstanding split transactions supported by each device, and configure each device accordingly. The goal is to ensure that the aggregate number of concurrent outstanding split transactions does not exceed the Total Maximum Outstanding Split Transactions Value: an integer denoting the number of concurrent outstanding split transactions the host bridge can support (the minimum value is 1).

This object does not address providing additional information that would be used to configure registers in bridge devices, whether architecturally-defined or specification-defined registers or device specific registers. It is expected that a driver for a bridge would be the proper implementation mechanism to address both of those issues. However, such a bridge driver should have access to the data returned by the \_HPX object for use in optimizing its decisions on how to configure the bridge. Configuration of a bridge is dependent on both system specific information such as that provided by the \_HPX object, as well as bridge specific information.

### 6.2.9.3 PCI Express Setting Record (Type 2)

The PCI Express setting record contains the setting type 2, the current revision 1 and the type/revision specific content (the control registers as listed in the table below) to be used when configuring registers in the Advanced Error Reporting Extended Capability Structure or PCI Express Capability Structure for the PCI Express devices.

The Type 2 Setting Record allows a PCI Express-aware OS that supports native hot plug to configure the specified registers of the hot plugged PCI Express device. A PCI Express-aware OS that has assumed ownership of native hot plug (via \_OSC) but does not support or does not have ownership of the AER register set must use the data values returned by the \_HPX object's Type 2 record to program the AER registers of a hot-added PCI Express device. However, since the Type 2 record also includes register bits that have functions other than AER, OSPM must ignore values contained within this setting record that are not applicable.

To support PCIe RsvdP semantics for reserved bits, two values for each register are provided: an “AND mask” and an “OR mask”. Each bit understood by firmware to be RsvdP shall be set to 1 in the “AND mask” and 0 in the “OR mask”. Each bit that firmware intends to be configured as 0 shall be set to 0 in both the “AND mask” and the “OR mask”. Each bit that firmware intends to be configured a 1 shall be set to 1 in both the “AND mask” and the “OR mask”.

When configuring a given register, OSPM uses the following algorithm:

1. Read the register's current value, which contains the register's default value.
2. Perform a bit-wise AND operation with the “AND mask” from the table below.
3. Perform a bit-wise OR operation with the “OR mask” from the table below.
4. Override the computed settings for any bits if deemed necessary. For example, if OSPM is aware of an architected meaning for a bit that firmware considers to be RsvdP, OSPM may choose to override the computed setting for that bit. Note that firmware sets the “AND value” to 1 and the “OR value” to 0 for each bit that it considers to be RsvdP.
5. Write the end result value back to the register.

Note that the size of each field in the following table matches the size of the corresponding PCI Express register.

**Table 6-197 PCI Express Setting Record Content**

Field	Object Type	Definition
Header:		
Type	Integer	0x02: Type 2 (PCI Express) setting record.
Revision	Integer	0x01: Revision 1, defining the set of fields below.
Uncorrectable Error Mask Register AND Mask	Integer	Bits [31:0] contain the “AND mask” to be used in the OSPM algorithm described above.
Uncorrectable Error Mask Register OR Mask	Integer	Bits [31:0] contain the “OR mask” to be used in the OSPM algorithm described above.
Uncorrectable Error Severity Register AND Mask	Integer	Bits [31:0] contain the “AND mask” to be used in the OSPM algorithm described above.

Field	Object Type	Definition
Uncorrectable Error Severity Register OR Mask	Integer	Bits [31:0] contain the “OR mask” to be used in the OSPM algorithm described above.
Correctable Error Mask Register AND Mask	Integer	Bits [31:0] contain the “AND mask” to be used in the OSPM algorithm described above.
Correctable Error Mask Register OR Mask	Integer	Bits [31:0] contain the “OR mask” to be used in the OSPM algorithm described above.
Advanced Error Capabilities and Control Register AND Mask	Integer	Bits [31:0] contain the “AND mask” to be used in the OSPM algorithm described above.
Advanced Error Capabilities and Control Register OR Mask	Integer	Bits [31:0] contain the “OR mask” to be used in the OSPM algorithm described above.
Device Control Register AND Mask	Integer	Bits [15 :0] contain the “AND mask” to be used in the OSPM algorithm described above.
Device Control Register OR Mask	Integer	Bits [15:0] contain the “OR mask” to be used in the OSPM algorithm described above.
Link Control Register AND Mask	Integer	Bits [15 :0] contain the “AND mask” to be used in the OSPM algorithm described above.
Link Control Register OR Mask	Integer	Bits [15 :0] contain the “OR mask” to be used in the OSPM algorithm described above.
Secondary Uncorrectable Error Severity Register AND Mask	Integer	Bits [31 :0] contain the “AND mask” to be used in the OSPM algorithm described above
Secondary Uncorrectable Error Severity Register OR Mask	Integer	Bits [31 :0] contain the “OR mask” to be used in the OSPM algorithm described above
Secondary Uncorrectable Error Mask Register AND Mask	Integer	Bits [31 :0] contain the “AND mask” to be used in the OSPM algorithm described above
Secondary Uncorrectable Error Mask Register OR Mask	Integer	Bits [31 :0] contain the “OR mask” to be used in the OSPM algorithm described above

#### 6.2.9.4 PCI Express Descriptor Setting Record (Type 3)

The PCI Express Descriptor setting record contains the setting type 3, the current revision 1 and the type/revision specific content (the control registers as listed in the tables below) to be used when configuring registers in PCI Express Functions. There may be multiple PCI Express Descriptor setting records in a single \_HPX object with the same or different revision. Each PCI Express Descriptor setting record shall contain at least one, and may contain more than one, PCI Express Register Descriptors as defined in [Table 6-199](#).

The Type 3 Setting Record allows a PCI Express-aware OS to configure the indicated registers of the PCI Express Function. A PCI Express-aware OS that does not support or does not have ownership of a register in this record must use the data values returned by the \_HPX object’s Type 3 record to program that register of a PCI Express Function that has lost its configuration space settings (e.g. a hot-added device, a device not configured by the platform firmware during initial system boot, a Device/Function that was reset via Secondary Bus Reset/Function Level Reset, Downstream Port Containment was triggered, etc.).

To support PCIe RsvdP semantics for reserved bits, two values for each register indicated by Write Register Offset are provided: a Write AND Mask and a Write OR Mask. Each bit understood by firmware to be RsvdP shall be set to 1 in the Write AND Mask and 0 in the Write OR Mask. Each bit that firmware intends to be configured as 0 shall be set to 0 in both the Write AND Mask and the Write OR Mask. Each bit that firmware intends to be configured a 1 shall be set to 1 in both the Write AND Mask and the Write OR Mask.

OSPM evaluates each PCI Express Register Descriptor in order starting with the first PCI Express Register Descriptor and continuing through the Nth PCI Express Register Descriptor as shown in [Table 6-198](#) for each PCI Express Function that has lost its configuration space settings (e.g. a hot-added device, a device not configured by the platform firmware during initial system boot, a Device/Function that was reset via Secondary Bus Reset/Function Level Reset, Downstream Port Containment was triggered, etc.) in the scope of the \_HPX method using the following algorithm:

1. Verify the PCI Express Register Descriptor applies to the PCI Express Function.
  - a. Read the PCI Express Function's Device Type/Port from its PCI Express Capabilities Register.
  - b. Read the bit corresponding to the PCI Express Function's Device Port/Type in the Device/Port Type from [Table 6-199](#) below.
    - If set to 0b, then the PCI Express Register Descriptor does not apply to the PCI Express Function and OSPM moves to the next Function in the scope of the \_HPX method or to the next PCI Express Register Descriptor if there are no more Functions.
    - If set to 1b, then continue to the next step.
  - c. Determine if the PCI Express Function is a non-SR-IOV Function, an SR-IOV Physical Function, or an SR-IOV Virtual Function.
  - d. Read the bit corresponding to the PCI Express Function's type in the Function Type from [Table 6-199](#) below.
    - If set to 0b, then the PCI Express Register Descriptor does not apply to the PCI Express Function and OSPM moves to the next Function in the scope of the \_HPX method or to the next PCI Express Register Descriptor if there are no more Functions.
    - If set to 1b, then the PCI Express Register Descriptor applies to the PCI Express Function and OSPM continues to the next step.
2. Read the Configuration Space Location from [Table 6-199](#) below.
  - a. If Configuration Space Location is 0, then the Match Register Offset and Write Register Offset field's byte offset is relative to offset 0 of the Function's configuration space.
  - b. If Configuration Space Location is 1, then the Match Register Offset and Write Register Offset field's byte offset is relative to the starting offset of the Capability Structure indicated by PCIe Capability ID.

If the Capability ID is 01h (PCI Power Management Capability Structure) or 10h (PCI Express Capability Structure) then OSPM shall check the Capability Version of the Function's Capability Structure against the PCIe Capability ID field. In the event that there are more than one PCI Express Register Descriptors for a given PCIe Capability ID with different PCIe Capability Versions, OSPM shall use the PCI Express Register Descriptors with the highest PCIe Capability Version supported by the Function.

There may be more than one instance of a Capability Structure that matches the indicated

PCIe Capability ID. Continue to step 3 for each such instance. If no Capability Structures indicated by PCIe Capability ID are found, then start back at step 1 above for the next Function in the scope of the \_HPX method or the next PCI Express Register Descriptor if there are no more Functions.

- c. If Configuration Space Location is 2, then the Match Register Offset and Write Register Offset field's byte offset is relative to the starting offset of the Extended Capability Structure indicated by PCIe Capability ID and PCIe Capability Version.

In the event that there are more than one PCI Express Register Descriptors for a given PCIe Capability ID with different PCIe Capability Versions, OSPM shall use the PCI Express Register Descriptors with the highest PCIe Capability Version supported by the Function.

There may be more than one instance of an Extended Capability Structure that matches the indicated PCIe Capability ID and PCIe Capability Version. Continue to step 3 for each such instance. If no Extended Capability Structures indicated by PCIe Capability ID and PCIe Capability Version are found, then start back at step 1 above for the next Function in the scope of the \_HPX method or the next PCI Express Register Descriptor if there are no more Functions.

- d. If Configuration Space Location is 3, then the Match Register Offset and Write Register Offset field's byte offset is relative to the starting offset of the Extended Capability Structure indicated by PCIe Capability ID, PCIe Capability Version, PCIe Vendor ID, VSEC ID, and VSEC Rev.

In the event that there are more than one PCI Express Register Descriptors for a given PCIe Capability ID with different PCIe Capability Versions, OSPM shall use the PCI Express Register Descriptors with the highest PCIe Capability Version supported by the Function.

Once the PCI Express Register Descriptors that match the PCIe Capability ID with the highest PCIe Capability Version supported by the Function are found, the OSPM shall use PCI Express Register Descriptors among those with the highest VSEC Rev supported by the Function.

There may be more than one instance of an Extended Capability Structure that matches the indicated PCIe Capability ID, PCIe Capability Version, PCIe Vendor ID, VSEC ID, and VSEC Rev. Continue to step 3 for each such instance. If no Extended Capability Structures indicated by PCIe Capability ID, PCIe Capability Version, PCIe Vendor ID, VSEC ID, and VSEC Rev are found, then start back at step 1 above for the next Function in the scope of the \_HPX method or the next PCI Express Register Descriptor if there are no more Functions.

- e. If Configuration Space Location is 4, then the Match Register Offset and Write Register Offset field's byte offset is relative to the starting offset of the Extended Capability Structure indicated by PCIe Capability ID, PCIe Capability Version, PCIe Vendor ID, DVSEC ID, and DVSEC Rev.

In the event that there are more than one PCI Express Register Descriptors for a given PCIe Capability ID with different PCIe Capability Versions, OSPM shall use the PCI Express Register Descriptors with the highest PCIe Capability Version supported by the Function.

Once the PCI Express Register Descriptors that match the PCIe Capability ID with the highest PCIe Capability Version supported by the Function are found, the OSPM shall use PCI Express Register Descriptors among those with the highest DVSEC Rev supported by the Function.

There may be more than one instance of an Extended Capability Structure that matches the indicated PCIe Capability ID, PCIe Capability Version, PCIe Vendor ID, DVSEC ID, and DVSEC Rev. Continue to step 3 for each such instance. If no Extended Capability Structures indicated by PCIe Capability ID, PCIe Capability Version, PCIe Vendor ID, DVSEC ID, and DVSEC Rev are found, then start back at step 1 above for the next Function in the scope of the \_HPX method or the next PCI Express Register Descriptor if there are no more Functions.

3. Check the Match Register to see if the Write Register should be updated.
  - a. Read the current value from the register indicated by the Match Register Offset.
  - b. Perform a bit-wise AND operation on the result of step 3a with the Match AND Mask.
  - c. Compare the result of step 3b with the Match Value. If they are equal then continue to step 4, else start back at step 1 above for the next Function
  - d. in the scope of the \_HPX method or the next PCI Express Register Descriptor if there are no more Functions.
4. Update the Write Register.
  - a. Read the current value from the register indicated by the Write Register Offset.
  - b. Perform a bit-wise AND operation on the result of step 4a with the Write AND Mask.
  - c. Perform a bit-wise OR operation on the result of step 4b with the Write OR Mask.
  - d. Override the computed settings from step 4c for any bits if deemed necessary. For example, if OSPM is aware of an architected meaning for a bit that firmware considers to be RsvdP, OSPM may choose to override the computed setting for that bit. Note that firmware sets the Write AND Mask to 1 and the Write OR Mask to 0 for each bit that it considers to be RsvdP.
  - e. Write the result of step 4d back to the register indicated by the Write Register Offset.

**Table 6-198 PCI Express Descriptor Setting Record Content**

Field	Object Type	Definition
Header:		
Type	Integer	0x03: Type 3 (PCI Express Descriptor) setting record.
Revision	Integer	0x01: Revision 1, defining the set of fields below.
PCI Express Register Descriptor Count	Integer	Number of Register Descriptors in this setting record.
First PCI Express Register Descriptor	PCI Express Register Descriptor	The first PCI Express Register Descriptor as defined in <a href="#">Table 6-199</a> .
Second PCI Express Register Descriptor	PCI Express Register Descriptor	The second PCI Express Register Descriptor as defined in <a href="#">Table 6-199</a> .
...	...	...

Field	Object Type	Definition
N <sup>th</sup> PCI Express Register Descriptor	PCI Express Register Descriptor	The N <sup>th</sup> PCI Express Register Descriptor as defined in <a href="#">Table 6-199</a> where N is equal to the PCI Express Register Descriptor Count.

**Table 6-199 PCI Express Register Descriptor**

Field	Object Type	Definition
Device/Port Type	Integer	<p>This field is a bitmask of Device/Port Types to which the PCI Express Register Descriptor applies. A bit is set to 1 to indicate the PCI Express Register Descriptor applies to the corresponding Device/Port Type and is set to 0 to indicate it does not apply to the corresponding Device/Port Type.</p> <p>At least one bit shall be set. More than one bit may be set.</p> <ul style="list-style-type: none"> <li>Bit [0]: PCI Express Endpoint</li> <li>Bit [1]: Legacy PCI Express Endpoint</li> <li>Bit [2]: RCiEP</li> <li>Bit [3]: Root Complex Event Collector</li> <li>Bit [4]: Root Port of PCI Express Root Complex</li> <li>Bit [5]: Upstream Port of PCI Express Switch</li> <li>Bit [6]: Downstream Port of PCI Express Switch</li> <li>Bit [7]: PCI Express to PCI/PCI-X Bridge</li> <li>Bit [8]: PCI/PCI-X to PCI Express Bridge</li> </ul> <p>All other bits are reserved.</p>
Function Type	Integer	<p>This field is a bitmask of Function Types to which the PCI Express Register Descriptor applies. A bit is set to 1 to indicate the PCI Express Register Descriptor applies to the corresponding Function Type and is set to 0 to indicate it does not apply to the corresponding Function Type.</p> <p>At least one bit shall be set. More than one bit may be set.</p> <ul style="list-style-type: none"> <li>Bit [0]: Non-SR-IOV Function</li> <li>Bit [1]: SR-IOV Physical Function</li> <li>Bit [2]: SR-IOV Virtual Function</li> </ul> <p>All other bits are reserved.</p>

Field	Object Type	Definition
Configuration Space Location	Integer	<p>A value of 0 indicates the Match Register Offset and Write Register Offset fields are relative to offset 0 of the Function's configuration space.</p> <p>A value of 1 indicates the Match Register Offset and Write Register Offset fields are located in a Capability Structure within the first 256 bytes of PCIe configuration space and are relative to offset 0 of the Capability Structure.</p> <p>A value of 2 indicates the Match Register Offset and Write Register Offset fields are located in an Extended Capability Structure beyond the first 256 bytes of PCI configuration space and are relative to offset 0 of the Extended Capability Structure.</p> <p>A value of 3 indicates the Match Register Offset and Write Register fields are located in a PCI Express Vendor-Specific Extended Capability and are relative to offset 0 of the Vendor-Specific Extended Capability.</p> <p>A value of 4 indicates the Match Register Offset and Write Register Offset fields are located in a PCI Express Designated Vendor-Specific Extended Capability and are relative to offset 0 of the Designated Vendor-Specific Extended Capability.</p> <p>All other values are reserved.</p>
PCIe Capability ID	Integer	PCIe Capability ID indicates the capability ID of the Capability Structure (if Configuration Space Location is 1) or Extended Capability Structure (if Configuration Space Location is 2) to which the PCI Express Register Descriptor applies. This field only applies if Configuration Space Location is 1 (Capability Structure), 2 (Extended Capability Structure), 3 (Vendor-Specific Extended Capability), or 4 (Designated Vendor-Specific Extended Capability).

Field	Object Type	Definition
PCIe Capability Version	Integer	<p>This field contains information about the Capability Version/Extended Capability Version and applies in the following conditions:</p> <p>Configuration Space Location is 1 (Capability Structure) and Capability ID is 01h (PCI Power Management Capability Structure); or</p> <p>Configuration Space Location is 1 (Capability Structure) and Capability ID is 10h (PCI Express Capability Structure); or Configuration Space Location is 2 (Extended Capability Structure); or</p> <p>Configuration Space Location is 3 (Vendor-Specific Extended Capability); or Configuration Space Location is 4 (Designated Vendor-Specific Extended Capability).</p> <p>Bit [4] indicates the applicability of the Capability Version/Extended Capability Version in bits [3:0]. Defined values are:</p> <ul style="list-style-type: none"> <li>0b</li> <li>The PCI Express Register Descriptor applies to Capability Structures/Extended Capability Structures with Capability Versions that are equal to the version in bits [3:0].</li> <li>1b</li> <li>The PCI Express Register Descriptor applies to Capability Structures/Extended Capability Structures with Capability Versions that are greater than or equal to the version in bits [3:0].</li> <li>Bits [3:0] indicate the Capability Version of the Capability Structures/Extended Capability Structure. Note that the version of the Capability Structure/Extended Capability Structure is always 4 bits except for the PCI Power Management Capability Structure whose Version field is only 3 bits. For the PCI Power Management Capability structure, this field shall contain the Version in bits [2:0] and bit [3] shall be 0b.</li> <li>All other bits are reserved.</li> </ul>

Field	Object Type	Definition
PCIe Vendor ID	Integer	If Configuration Space Location is 3 (Vendor-Specific Extended Capability Structure), this field indicates the vendor in the Vendor ID register at offset 0 of the Function's configuration space to which the PCI Express Register Descriptor applies. If Configuration Space Location is 4 (Designated Vendor-Specific Extended Capability Structure), this field indicates the vendor in the DVSEC Vendor ID register at offset 4 in the Designated Vendor-Specific Extended Capability Structure to which the PCI Express Register Descriptor applies. This field only applies if Configuration Space Location is 3 (Vendor-Specific Extended Capability Structure) or 4 (Designated Vendor-Specific Extended Capability Structure).
VSEC/DVSEC ID	Integer	If Configuration Space Location is 3 (Vendor-Specific Extended Capability Structure), this field indicates the vendor-defined ID number (VSEC ID) of the Vendor-Specific Extended Capability Structure to which the PCI Express Register Descriptor applies. If Configuration Space Location is 4 (Designated Vendor-Specific Extended Capability Structure), this field indicates the DVSEC ID of the Designated Vendor-Specific Extended Capability Structure to which the PCI Express Register Descriptor applies. This field only applies if Configuration Space Location is 3 (Vendor-Specific Extended Capability Structure) or 4 (Designated Vendor-Specific Extended Capability Structure).

Field	Object Type	Definition
VSEC/DVSEC Rev	Integer	<p>This field contains information about the VSEC/DVSEC Rev and only applies if Configuration Space Location is 3 (Vendor-Specific Extended Capability Structure) or 4 (Designated Vendor-Specific Extended Capability Structure).</p> <p>Bit [4] indicates the applicability of the VSEC/DVSEC Rev in bits [3:0]. Defined values are:</p> <ul style="list-style-type: none"> <li>0b      The PCI Express Register Descriptor applies to Vendor Specific Extended Capabilities/Designated Vendor-Specific Capabilities with VSEC/DVSEC Revs that are equal to the revision in bits [3:0].</li> <li>1b      The PCI Express Register Descriptor applies to Vendor Specific Extended Capabilities/Designated Vendor-Specific Capabilities with VSEC/DVSEC Revs that are greater than or equal to the revision in bits [3:0].</li> </ul> <p>Bits [3:0] - If Configuration Space Location is 3 (Vendor-Specific Extended Capability Structure), this field indicates the VSEC Rev of the Vendor-Specific Extended Capability Structure. If Configuration Space Location is 4 (Designated Vendor-Specific Extended Capability Structure), this field indicates the DVSEC Revision of the Designated Vendor-Specific Extended Capability Structure.</p> <p>All other bits are reserved.</p>
Match Register Offset	Integer	Byte offset of the PCIe configuration space register that is checked before the write. This offset shall be dword aligned (i.e. bits [1:0] are 00b).
Match AND Mask	Integer	Bits 0 to 31 contain the AND mask to be used by the operating system engine during the check.
Match Value	Integer	Bits 0 to 31 contain the value to be compared by Operating system engine before the write.
Write Register Offset	Integer	Byte offset of the PCIe configuration space register to be modified. This offset shall be dword aligned (i.e. bits [1:0] are 00b).
Write AND Mask	Integer	Bits 0 to 31 contain the AND mask to be used by the operating system engine to modify the value to be written to the register indicated by Write Register Offset.
Write OR Mask	Integer	Bits 0 to 31 contain the OR mask to be used by the operating system engine to modify the value to be written to the register indicated by Write Register Offset.

### 6.2.9.5 \_HPX Example

```

Method (_HPX, 0) {
    Return (Package(2){
        Package(6){ // PCI Setting Record
            0x00, // Type 0
            0x01, // Revision 1
            0x08, // CacheLineSize in DWORDS
            0x40, // LatencyTimer in PCI clocks
            0x01, // Enable SERR (Boolean)
            0x00 // Enable PERR (Boolean)
        },
        Package(5){ // PCI-X Setting Record
            0x01, // Type 1
            0x01, // Revision 1
            0x03, // Maximum Memory Read Byte Count
            0x04, // Average Maximum Outstanding Split Transactions
            0x07 // Total Maximum Outstanding Split Transactions
        }
    }
    Package(17){ // PCI Express Descriptor setting Record (Type 3)
        0x03, // Type 3
        0x01, // Revision 1
        0x01, // Number of Register Descriptors
        0x01FF, // Device/Port Type – All types in PCIe 4.0
        0x03, // Function Type – All but VFs
        0x01, // Configuration Space Location – Capability Structure
        0x10, // PCIe Capability ID – PCIe Express Cap Struct
        0x12, // PCIe Capability Version – Applies to rev 2 and higher
        0x0000, // PCIe Vendor ID – N/A
        0x00, // VSEC/DVSEC ID – N/A
        0x00, // VSEC/DVSEC Rev – N/A
        0x24, // Match Register Offset – Device Cap 2
        0x00000002, // Match AND Mask – Check Range B
        0x00000002 // Match Value – CTO Range B supported?
        0x28, // Write Register Offset – Device Ctrl 2
        0xFFFFFFF0, // Write AND Mask – Clear CTO Range
        0x00000006 // Write OR Mask – Set CTO range 65 ms to 210 ms
    }
    Package(17){ // PCI Express Descriptor setting Record (Type 3)
        0x03, // Type 3
        0x01, // Revision 1
        0x01, // Number of Register Descriptors
        0x01FF, // Device/Port Type – All types in PCIe 4.0
        0x03, // Function Type – All but VFs
        0x01, // Configuration Space Location – Capability Structure
        0x10, // PCIe Capability ID – PCIe Express Cap Struct
        0x12, // PCIe Capability Version – Applies to rev 2 and higher
        0x0000, // PCIe Vendor ID – N/A
        0x00, // VSEC/DVSEC ID – N/A
        0x00, // VSEC/DVSEC Rev – N/A
        0x24, // Match Register Offset – Device Cap 2
    }
}

```

```

        0x00000006,           // Match AND Mask – Check Range B/C
        0x00000004,           // Match Value – CTO Range B not supported but C is?
        0x28,                 // Write Register Offset – Device Ctrl 2
        0xFFFFFFF0,           // Write AND Mask – Clear CTO Range
        0x00000009             // Write OR Mask – Set CTO range 260 to 900 ms
    }
    Package(17){
        0x03,                 // PCI Express Descriptor setting Record (Type 3)
        0x01,                 // Type 3
        0x01,                 // Revision 1
        0x01,                 // Number of Register Descriptors
        0x01FF,               // Device/Port Type – All types in PCIe 4.0
        0x03,                 // Function Type – All but VFs
        0x01,                 // Configuration Space Location – Capability Structure
        0x10,                 // PCIe Capability ID – PCI Express Cap Struct
        0x12,                 // PCIe Capability Version – Applies to rev 2 and higher
        0x0000,               // PCIe Vendor ID – N/A
        0x00,                 // VSEC/DVSEC ID – N/A
        0x00,                 // VSEC/DVSEC Rev – N/A
        0x24,                 // Match Register Offset – Device Cap 2
        0x00000016,           // Match AND Mask – Check Range B/C and CTO Disable
        0x00000010,           // Match Value – CTO Disable support but no range B/C?
        0x28,                 // Write Register Offset – Device Ctrl 2
        0xFFFFFFF0,           // Write AND Mask – Don't mask anything
        0x00000010             // Write OR Mask – Set CTO Disable
    }
}
}
}

```

## 6.2.10 \_MAT (Multiple APIC Table Entry)

This optional object evaluates to a buffer returning data in the format of a series of Multiple APIC Description Table (MADT) APIC Structure entries. This object can appear under an I/O APIC or processor object definition as processors may contain Local APICs. Specific types of MADT entries are meaningful to (in other words, is processed by) OSPM when returned via the evaluation of this object as described in [Table 5-45](#). Other entry types returned by the evaluation of \_MAT are ignored by OSPM.

When \_MAT appears under a Processor object, OSPM uses the ACPI processor ID in the entries returned from the object's evaluation to identify the entries corresponding to either the ACPI processor ID of the Processor object or the value returned by the \_UID object under a Processor device.

### Arguments:

None

### Return Value:

A **Buffer** containing a list of Interrupt Controller Structures.

Example ASL for \_MAT usage:

```
Scope(\_SB) {
    Device(PCIO) { // Root PCI Bus
        Name(_HID, EISAID("PNPOA03")) // Need _HID for root device
        Device(P64A) { // P64A ACPI
            Name(_ADR, 0)
            OperationRegion(OPRM, SystemMemory,
                Offset in system memory of Interrupt Controller Structures,
                Length in bytes)
            Field(OPRM, ByteAcc, NoLock, Preserve) {
                MATD, Length in bits
            }
            Method(_MAT, 0){
                Return(MATD)
            }
            ...
        } // end P64A
        ...
    } // end PCIO
    ...
}
```

### 6.2.11 \_OSC (Operating System Capabilities)

This optional object is a control method that is used by OSPM to communicate to the platform the feature support or capabilities provided by a device's driver. This object is a child object of a device and may also exist in the \\_SB scope, where it can be used to convey platform wide OSPM capabilities. When supported, \_OSC is invoked by OSPM immediately after placing the device in the D0 power state. Device specific objects are evaluated *after* \_OSC invocation. This allows the values returned from other objects to be predicated on the OSPM feature support / capability information conveyed by \_OSC. OSPM may evaluate \_OSC multiple times to indicate changes in OSPM capability to the device but this may be precluded by specific device requirements. As such, \_OSC usage descriptions in [Section 9, "ACPI-Defined Devices and Device Specific Objects"](#), or other governing specifications describe superseding device specific \_OSC capabilities and / or preclusions.

\_OSC enables the platform to configure its ACPI namespace representation and object evaluations to match the capabilities of OSPM. This enables legacy operating system support for platforms with new features that make use of new namespace objects that if exposed would not be evaluated when running a legacy OS. \_OSC provides the capability to transition the platform to native operating system support of new features and capabilities when available through dynamic namespace reconfiguration. \_OSC also allows devices with Compatible IDs to provide superset functionality when controlled by their native (For example, \_HID matched) driver as appropriate objects can be exposed accordingly as a result of OSPM's evaluation of \_OSC.

#### Arguments: (4)

Arg0 – A **Buffer** containing a UUID

Arg1 – An **Integer** containing a Revision ID of the buffer format

Arg2 – An **Integer** containing a count of entries in Arg3

Arg3 – A **Buffer** containing a list of DWORD capabilities

#### **Return Value:**

A **Buffer** containing a list of capabilities

### **Argument Information**

Arg0: UUID – used by the platform in conjunction with Revision ID to ascertain the format of the Capabilities buffer.

Arg1: Revision ID – The revision of the Capabilities Buffer format. The revision level is specific to the UUID.

Arg2: Count – Number of DWORDs in the Capabilities Buffer in Arg3

Arg3: Capabilities Buffer – Buffer containing the number of DWORDs indicated by Count. The first DWORD of this buffer contains standard bit definitions as described below. Subsequent DWORDs contain UUID-specific bits that convey to the platform the capabilities and features supported by OSPM. Successive revisions of the Capabilities Buffer must be backwards compatible with earlier revisions. Bit ordering cannot be changed.

Capabilities Buffers are device-specific and as such are described under specific device definitions. See [Section 9](#), “ACPI Devices and Device Specific Objects” for any \_OSC definitions for ACPI devices. The format of the Capabilities Buffer and behavior rules may also be specified by OEMs and IHBs for custom devices and other interface or device governing bodies for example, the PCI SIG.

The first DWORD in the capabilities buffer is used to return errors defined by \_OSC. This DWORD must always be present and may not be redefined/reused by unique interfaces utilizing \_OSC.

- Bit [0]- Query Support Flag. If set, the \_OSC invocation is a query by OSPM to determine or negotiate with the platform the combination of capabilities for which OSPM may take control. In this case, OSPM sets bits in the subsequent DWORDs to specify the capabilities for which OSPM intends to take control. If clear, OSPM is attempting to take control of the capabilities corresponding to the bits set in subsequent DWORDs. OSPM may only take control of capabilities as indicated by the platform by the result of the query.
- Bit [1] – Always clear (0).
- Bit [2] – Always clear (0).
- Bit [3] – Always clear (0).
- All others – reserved.

### **Return Value Information**

Capabilities Buffer (Buffer) – The platform acknowledges the Capabilities Buffer by returning a buffer of DWORDs of the same length. Set bits indicate acknowledgment that OSPM may take control of the capability and cleared bits indicate that the platform either does not support the capability or that OSPM may not assume control.

The first DWORD in the capabilities buffer is used to return errors defined by \_OSC. This DWORD must always be present and may not be redefined/reused by unique interfaces utilizing \_OSC.

- Bit [0] – Reserved (not used)

- Bit [1] – \_OSC failure. Platform Firmware was unable to process the request or query. Capabilities bits may have been masked.
- Bit [2] – Unrecognized UUID. This bit is set to indicate that the platform firmware does not recognize the UUID passed in via Arg0. Capabilities bits are preserved.
- Bit [3] – Unrecognized Revision. This bit is set to indicate that the platform firmware does not recognize the Revision ID passed in via Arg1. Capabilities bits beyond those comprehended by the firmware will be masked.
- Bit [4] – Capabilities Masked. This bit is set to indicate that capabilities bits set by driver software have been cleared by platform firmware.
- All others – reserved.

**Note:** *OSPM must not use the results of \_OSC evaluation to choose a compatible device driver. OSPM must use \_HID, \_CID, or native enumerable bus device identification mechanisms to select an appropriate driver for a device.*

The platform may issue a **Notify**(device, 0x08) to inform OSPM to re-evaluate \_OSC when the availability of feature control changes. Platforms must **not** rely, however, on OSPM to evaluate \_OSC after issuing a **Notify** for proper operation as OSPM cannot guarantee the presence of a target entity to receive and process the **Notify** for the device. For example, a device driver for the device may not be loaded at the time the **Notify** is signaled. Further, the issuance and processing rules for notification of changes in the Capabilities Buffer is device specific. As such, the allowable behavior is governed by device specifications either in [Section 9](#), “ACPI-Specific Device Objects”, for ACPI-define devices, or other OEM, IHV, or device governing body’s device specifications.

It is permitted for \_OSC to return all bits in the Capabilities Buffer cleared. An example of this is when significant time is required to disable platform-based feature support. The platform may then later issue a Notify to tell OSPM to re-evaluate \_OSC to take over native control. This behavior is also device specific but may also rely on specific OS capability.

In general, platforms should support both OSPM taking and relinquishing control of specific feature support via multiple invocations of \_OSC but the required behavior may vary on a per device basis.

Since platform context is lost when the platform enters the S4 sleeping state, OSPM must re-evaluate \_OSC upon wake from S4 to restore the previous platform state. This requirement will vary depending on the device specific \_OSC functionality.

### 6.2.11.1 Rules for Evaluating \_OSC

This section defines when and how the OS must evaluate \_OSC, as well as restrictions on firmware implementation.

#### 6.2.11.1.1 Query Flag

If the Query Support Flag (Capabilities DWORD 1, bit 0 ) is set by the OS when evaluating \_OSC, no hardware settings are permitted to be changed by firmware in the context of the \_OSC call. It is strongly recommended that the OS evaluate \_OSC with the Query Support Flag set until \_OSC returns the Capabilities Masked bit clear, to negotiate the set of features to be granted to the OS for native support; a platform may require a specific combination of features to be supported natively by an OS before granting native control of a given feature.

### 6.2.11.1.2 Evaluation Conditions

The OS must evaluate `_OSC` under the following conditions:

During initialization of any driver that provides native support for features described in the section above. These features may be supported by one or many drivers, but should only be evaluated by the main bus driver for that hierarchy. Secondary drivers must coordinate with the bus driver to install support for these features. Drivers may not relinquish control of features previously obtained (i.e., bits set in Capabilities DWORD3 after the negotiation process must be set on all subsequent negotiation attempts.)

When a Notify(<device>, 8) is delivered to the PCI Host Bridge device.

Upon resume from S4. Platform firmware will handle context restoration when resuming from S1-S3.

### 6.2.11.1.3 Sequence of `_OSC` calls

The following rules govern sequences of calls to `_OSC` that are issued to the same host bridge and occur within the same boot.

- The OS is permitted to evaluate `_OSC` an arbitrary number of times.
- If the OS declares support of a feature in the Status Field in one call to `_OSC`, then it must preserve the set state of that bit (declaring support for that feature) in all subsequent calls.
- If the OS is granted control of a feature in the Control Field in one call to `_OSC`, then it must preserve the set state of that bit (requesting that feature) in all subsequent calls.
- Firmware may not reject control of any feature it has previously granted control to.
- There is no mechanism for the OS to relinquish control of a feature previously requested and granted.

## 6.2.11.2 Platform-Wide OSPM Capabilities

OSPM evaluates `\_SB._OSC` to convey platform-wide OSPM capabilities to the platform. Argument definitions are as follows:

### Arguments: (4)

Arg0 – UUID (**Buffer**): 0811B06E-4A27-44F9-8D60-3CBBC22E7B48

Arg1 – Revision ID (**Integer**): 1

Arg2 – Count of Entries in Arg3 (**Integer**): 2

Arg3 – DWORD capabilities (**Buffer**): First DWORD: as described in [Section 6.2.11](#), Second DWORD: See [Table 6-200](#)

**Table 6-200 Platform-Wide \_OSC Capabilities DWORD 2**

Bits	Field Name	Definition
0	Processor Aggregator Device Support	This bit is set if OSPM supports the Processor Aggregator device as described in <a href="#">Section 8.5</a> , “Processor Aggregator Device.”
1	_PPC _OST Processing Support	This bit is set if OSPM will evaluate the _OST object defined under a processor as a result of _PPC change notification (Notify 0x80).
2	_PR3 Support	This bit is set if OSPM supports reading _PR3and using power resources to switch power. Note this handshake translates to an operating model that the platform and OSPM supports both the power model containing both D3hot and D3.
3	Insertion / Ejection _OST Processing Support	This bit is set if OSPM will evaluate the _OST object defined under a device when processing insertion and ejection source event codes.
4	APEI Support	This bit is set if OSPM supports the ACPI Platform Error Interfaces. See <a href="#">Section 18</a> , “ACPI Platform Error Interfaces.”
5	CPPC Support	This bit is set if OSPM supports controlling processor performance via the interfaces described in the _CPC object.
6	CPPC 2 Support	This bit is set if OSPM supports revision 2 of the _CPC object.
7	Platform Coordinated Low Power Idle Support	This bit is set if OSPM supports platform coordinated low power idle states (see note below)*.
8	OS Initiated Low Power Idle Support	This bit is set if OSPM supports OS initiated low power idle states. *(see note, below).
9	Fast Thermal Sampling support	This bit is set if OSPM supports _TFP.
10	Greater Than 16 p-state support	This bit is set if OSPM supports greater than 16 p-states. If clear, no more than 16 p-states are supported.
11	Generic Event Device support	This bit is set if OSPM supports parsing of the generic event device.
12	Diverse CPPC Highest Optimization Support	This bit is set if OSPM can process processor device notifications for changes in CPPC Highest Performance. It also indicates support for optimizing for performance domains with diverse Highest Performance capabilities.  Potential OS optimizations for diverse CPPC highest performance include but are not limited to placement of work on specific logical processors yielding a performance or power benefit.  Note: These optimizations are independent of the platform’s existing ability to expose diverse Highest Performance to OSPM as well as OSPM support for the MADT GICC’s Processor Power Efficiency Class.
13	Interrupt ResourceSource support	This bit is set if OSPM supports the usage of the ResourceSource in the extended interrupt descriptor. As part of the handshake provided through _OSC, the platform will indicate to the OS whether or not it supports usage of ResourceSource. If not set, the OS may choose to ignore the ResourceSource parameter in the extended interrupt descriptor.

Bits	Field Name	Definition
14	Flexible Address Space for CPPC Registers	This bit is set if OSPM supports any CPPC register being located in PCC, SystemMemory, SystemIO, or Functional Fixed Hardware address spaces. If not set, per-register restrictions described in ACPI Specification 6.1 apply.
15	GHES_ASSIST Support	This bit is set if OSPM supports the GHES_ASSIS Flag in HEST Error Structures. See <a href="#">Section 18</a> , “ACPI Platform Error Interfaces”
16	Multi PCC channel support for CPPC	The OSPM sets this bit when it supports multiple PCC channels for the CPPC protocol.
17	Generic Initiator Support	This bit is set if OSPM supports the Generic Initiator Affinity Structure in SRAT.
31:18		Reserved (must be 0)

**Note:** \* As part of the handshake provided through \_OSC the OS will pass in flags to indicate whether it supports Platform Coordinated Low Power Idle or OS Initiated Low Power Idle or both (see “Idle State Coordination”, [Section 8.4.4.2](#)), through flags 7 and 8. The platform will indicate which of the modes it supports in its response by clearing flags that are not supported. If both are supported, the default is platform coordinated and OSPM can switch the platform to OS Initiated via a processor architecture specific mechanism. By setting either flag 7 or 8 or both, the OSPM is asserting it supports any objects associated with Low Power Idle states (see LPI in [Section 8.4.4.3](#), RDI in [Section 8.5](#), and passive power resources in [Section 7.2.5](#)), and supports processor containers (see [Section 8.4.3.1](#)).

## Return Value Information

Capabilities Buffer (Buffer) – The platform acknowledges the Capabilities Buffer by returning a buffer of DWORDs of the same length. Set bits indicate acknowledgment and cleared bits indicate that the platform does not support the capability.

### 6.2.11.3 {deprecated} OSC Implementation Example for PCI Host Bridge Devices

The following section is an excerpt from the PCI Firmware Specification Revision 3.0 and is reproduced with the permission of the PCI SIG.

**Note:** The PCI SIG owns the definition of \_OSC behavior and parameter bit definitions for PCI devices. In the event of a discrepancy between the following example and the PCI Firmware Specification, the latter has precedence.

The \_OSC interface defined in this section applies only to “Host Bridge” ACPI devices that originate PCI, PCI-X or PCI Express hierarchies. These ACPI devices must have a \_HID of (or \_CID including) either EISAID(“PNP0A03”) or EISAID(“PNP0A08”). For a host bridge device that originates a PCI Express hierarchy, the \_OSC interface defined in this section is required. For a host bridge device that originates a PCI/PCI-X bus hierarchy, inclusion of an \_OSC object is optional.

- The \_OSC interface for a PCI/PCI-X/PCI Express hierarchy is identified by the following UUID:  
33DB4D5B-1FF7-401C-9657-7441C03DD766

A revision ID of 1 encompasses fields defined in this section of this revision of this specification, comprised of 3 DWORDs, including the first DWORD described by the generic ACPI definition of \_OSC.

The first DWORD in the \_OSC Capabilities Buffer contain bits are generic to \_OSC and include status and error information.

The second DWORD in the \_OSC capabilities buffer is the Support Field. Bits defined in the Support Field provide information regarding OS supported features. Contents in the Support Field are passed one-way; the OS will disregard any changes to this field when returned. See [Table 6-196](#) for descriptions of capabilities bits in this field passed as a parameter into the \_OSC control method.

The third DWORD in the \_OSC Capabilities Buffer is the Control Field. Bits defined in the Control Field are used to submit request by the OS for control/handling of the associated feature, typically (but not excluded to) those features that utilize native interrupts or events handled by an OS-level driver. See [Table 6-200](#) for descriptions of capabilities bits in this field passed as a parameter into the \_OSC control method. If any bits in the Control Field are returned cleared (masked to zero) by the \_OSC control method, the respective feature is designated unsupported by the platform and must not be enabled by the OS. Some of these features may be controlled by platform firmware prior to OS boot or during runtime for a legacy OS, while others may be disabled/inoperative until native OS support is available. See the following table for descriptions of capabilities bits in this returned field.

If the \_OSC control method is absent from the scope of a host bridge device, then the OS must not enable or attempt to use any features defined in this section for the hierarchy originated by the host bridge. Doing so could contend with platform firmware operations, or produce undesired results. It is recommended that a machine with multiple host bridge devices should report the same capabilities for all host bridges, and also negotiate control of the features described in the Control Field in the same way for all host bridges.

**Table: Interpretation of \_OSC Support Field**

Support Field bit offset	Interpretation
0	<p>Extended PCI Config operation regions supported</p> <p>The OS sets this bit to 1 if it supports ASL accesses through PCI Config operation regions to extended configuration space (offsets greater than 0xFF). Otherwise, the OS sets this bit to 0.</p>
1	<p>Active State Power Management supported</p> <p>The OS sets this bit to 1 if it natively supports configuration of Active State Power Management registers in PCI Express devices. Otherwise, the OS sets this bit to 0.</p>
2	<p>Clock Power Management Capability supported</p> <p>The OS sets this bit to 1 if it supports the Clock Power Management Capability, and will enable this feature during a native hot plug insertion event if supported by the newly added device. Otherwise, the OS sets this bit to 0.</p> <p>Note: The Clock Power Management Capability is defined in an errata to the PCI Express Base Specification, 1.0.</p>
3	<p>PCI Segment Groups supported</p> <p>The OS sets this bit to 1 if it supports PCI Segment Groups as defined by the _SEG object, and access to the configuration space of devices in PCI Segment Groups as described by this specification. Otherwise, the OS sets this bit to 0.</p>

Support Field bit offset	Interpretation
4	MSI supported The OS sets this bit to 1 if it supports configuration of devices to generate message-signaled interrupts, either through the MSI Capability or the MSI-X Capability. Otherwise, the OS sets this bit to 0.
5-31	<i>Reserved</i>

**Table: Interpretation of \_OSC Control Field, Passed in via Arg3**

Control Field bit offset	Interpretation
0	PCI Express Native Hot Plug control The OS sets this bit to 1 to request control over PCI Express native hot plug. If the OS successfully receives control of this feature, it must track and update the status of hot plug slots and handle hot plug events as described in the PCI Express Base Specification.
1	SHPC Native Hot Plug control The OS sets this bit to 1 to request control over PCI/PCI-X Standard Hot-Plug Controller (SHPC) hot plug. If the OS successfully receives control of this feature, it must track and update the status of hot plug slots and handle hot plug events as described in the SHPC Specification.
2	PCI Express Native Power Management Events control The OS sets this bit to 1 to request control over PCI Express native power management event interrupts (PMEs). If the OS successfully receives control of this feature, it must handle power management events as described in the PCI Express Base Specification.
3	PCI Express Advanced Error Reporting (AER) control The OS sets this bit to 1 to request control over PCI Express AER. If the OS successfully receives control of this feature, it must handle error reporting through the AER Capability as described in the PCI Express Base Specification.
4	PCI Express Capability Structure control The OS sets this bit to 1 to request control over the PCI Express Capability Structures (standard and extended) defined in the PCI Express Base Specification version 1.1. These capability structures are the PCI Express Capability, the virtual channel extended capability, the power budgeting extended capability, the advanced error reporting extended capability, and the serial number extended capability. If the OS successfully receives control of this feature, it is responsible for configuring the registers in all PCI Express Capabilities in a manner that complies with the PCI Express Base Specification. Additionally, the OS is responsible for saving and restoring all PCI Express Capability register settings across power transitions when register context may have been lost.
5-31	<i>Reserved</i>

**Table: Interpretation of \_OSC Control Field, Returned Value**

Control Field bit offset	Interpretation
0	<p>PCI Express Native Hot Plug control</p> <p>The firmware sets this bit to 1 to grant control over PCI Express native hot plug interrupts. If firmware allows the OS control of this feature, then in the context of the _OSC method it must ensure that all hot plug events are routed to device interrupts as described in the PCI Express Base Specification. Additionally, after control is transferred to the OS, firmware must not update the state of hot plug slots, including the state of the indicators and power controller. If control of this feature was requested and denied or was not requested, firmware returns this bit set to 0.</p>
1	<p>SHPC Native Hot Plug control</p> <p>The firmware sets this bit to 1 to grant control over control over PCI/PCI-X Standard Hot-Plug Controller (SHPC)hot plug. If firmware allows the OS control of this feature, then in the context of the _OSC method it must ensure that all hot plug events are routed to device interrupts as described in the SHPC Specification. Additionally, after control is transferred to the OS, firmware must not update the state of hot plug slots, including the state of the indicators and power controller. If control of this feature was requested and denied or was not requested, firmware returns this bit set to 0.</p>
2	<p>PCI Express Native Power Management Events control</p> <p>The firmware sets this bit to 1 to grant control over control over PCI Express native power management event interrupts (PMEs). If firmware allows the OS control of this feature, then in the context of the _OSC method it must ensure that all PMEs are routed to root port interrupts as described in the PCI Express Base Specification. Additionally, after control is transferred to the OS, firmware must not update the PME Status field in the Root Status register or the PME Interrupt Enable field in the Root Control register. If control of this feature was requested and denied or was not requested, firmware returns this bit set to 0.</p>
3	<p>PCI Express Advanced Error Reporting control</p> <p>The firmware sets this bit to 1 to grant control over PCI Express Advanced Error Reporting. If firmware allows the OS control of this feature, then in the context of the _OSC method it must ensure that error messages are routed to device interrupts as described in the PCI Express Base Specification. Additionally, after control is transferred to the OS, firmware must not modify the Advanced Error Reporting Capability. If control of this feature was requested and denied or was not requested, firmware returns this bit set to 0.</p>
4	<p>PCI Express Capability Structure control</p> <p>The firmware sets this bit to 1 to grant control over the PCI Express Capability. If the firmware does not grant control of this feature, firmware must handle configuration of the PCI Express Capability Structure.</p> <p>If firmware grants the OS control of this feature, any firmware configuration of the PCI Express Capability may be overwritten by an OS configuration, depending on OS policy.</p>
5-31	<i>Reserved</i>

### 6.2.11.4 {deprecated} ASL Example

A sample \_OSC implementation for a mobile system incorporating a PCI Express hierarchy is shown below:

```

Device(PCIO) // Root PCI bus
{
    Name(_HID, EISAID("PNPOA08")) // PCI Express Root Bridge
    Name(_CID, EISAID("PNPOA03")) // Compatible PCI Root Bridge
    Name(SUPP, 0) // PCI _OSC Support Field value
    Name(CTRL, 0) // PCI _OSC Control Field value

    Method(_OSC, 4)
    {
        // Check for proper UUID
        If(LEqual(Arg0, ToUUID("33DB4D5B-1FF7-401C-9657-7441C03DD766")))
        {
            // Create DWord-addressable fields from the Capabilities Buffer
            CreateDWordField(Arg3, 0, CDW1)
            CreateDWordField(Arg3, 4, CDW2)
            CreateDWordField(Arg3, 8, CDW3)

            // Save Capabilities DWord2 & 3
            Store(CDW2, SUPP)
            Store(CDW3, CTRL)

            // Only allow native hot plug control if OS supports:
            // * ASPM
            // * Clock PM
            // * MSI/MSI-X
            If(LNotEqual(And(SUPP, 0x16), 0x16))
            {
                And(CTRL, 0x1E, CTRL) // Mask bit 0 (and undefined bits)
            }

            // Always allow native PME, AER (no dependencies)

            // Never allow SHPC (no SHPC controller in this system)
            And(CTRL, 0x1D, CTRL)

            If(LNot(And(CDW1, 1))) // Query flag clear?
            {
                // Disable GPEs for features granted native control.
                If(And(CTRL, 0x01)) // Hot plug control granted?
                {
                    Store(0, HPCE) // clear the hot plug SCI enable bit
                    Store(1, HPCS) // clear the hot plug SCI status bit
                }
                If(And(CTRL, 0x04)) // PME control granted?
                {
                    Store(0, PMCE) // clear the PME SCI enable bit
                    Store(1, PMCS) // clear the PME SCI status bit
                }
                If(And(CTRL, 0x10)) // OS restoring PCIe cap structure?
            }
        }
    }
}

```

```

        {
            // Set status to not restore PCIe cap structure
            // upon resume from S3
            Store(1, S3CR)
        }

    If(LNotEqual (Arg1, One))
    {
        // Unknown revision
        Or(CDW1, 0x08, CDW1)
    }

    If(LNotEqual (CDW3, CTRL))
    {
        // Capabilities bits were masked
        Or(CDW1, 0x10, CDW1)
    }
    // Update DWORD3 in the buffer
    Store(CTRL, CDW3)
    Return(Arg3)
} Else {
    Or(CDW1, 4, CDW1)    // Unrecognized UUID
    Return(Arg3)
}
} // End _OSC
} // End PCIO

```

## 6.2.12 \_PRS (Possible Resource Settings)

This optional object evaluates to a byte stream that describes the *possible* resource settings for the device. When describing a platform, specify a \_PRS for all the configurable devices. Static (non-configurable) devices do not specify a \_PRS object. The information in this package is used by OSPM to select a conflict-free resource allocation without user intervention. This method must not reference any operation regions that have not been declared available by a \_REG method.

The format of the data in a \_PRS object follows the same format as the \_CRS object (for more information, see the \_CRS object definition in [Section 6.2.2, “\\_CRS \(Current Resource Settings\)”](#)).

If the device is disabled when \_PRS is called, it must remain disabled.

### Arguments:

None

**Return Value:**

A **Buffer** containing a Resource Descriptor byte stream

**6.2.13 \_PRT (PCI Routing Table)**

PCI interrupts are inherently non-hierarchical. PCI interrupt pins are wired to interrupt inputs of the interrupt controllers. The **\_PRT** object provides a mapping from PCI interrupt pins to the interrupt inputs of the interrupt controllers. The **\_PRT** object is required under all PCI root bridges. **\_PRT** evaluates to a package that contains a list of packages, each of which describes the mapping of a PCI interrupt pin.

**Arguments:**

None

**Return Value:**

A **Package** containing variable-length list of PCI interrupt mapping packages, as described below

**Note:** *The PCI function number in the Address field of the **\_PRT** packages must be 0xFFFF, indicating “any” function number or “all functions”.*

The **\_PRT** mapping packages have the fields listed in [Table 6-201](#).

**Table 6-201 Mapping Fields**

Field	Type	Description
Address	DWORD	The address of the device (uses the same format as <b>_ADR</b> ).
Pin	Byte	The PCI pin number of the device (0–INTA, 1–INTB, 2–INTC, 3–INTD).
Source	NamePath Or Byte	Name of the device that allocates the interrupt to which the above pin is connected. The name can be a fully qualified path, a relative path, or a simple name segment that utilizes the namespace search rules. <b>Note:</b> This field is a NamePath and not a String literal, meaning that it should not be surrounded by quotes. If this field is the integer constant Zero (or a Byte value of 0), then the interrupt is allocated from the global interrupt pool.
Source Index	DWORD	Index that indicates which resource descriptor in the resource template of the device pointed to in the Source field this interrupt is allocated from. If the <b>Source</b> field is the Byte value zero, then this field is the global system interrupt number to which the pin is connected.

There are two ways that **\_PRT** can be used. Typically, the interrupt input that a given PCI interrupt is on is configurable. For example, a given PCI interrupt might be configured for either IRQ 10 or 11 on an 8259 interrupt controller. In this model, each interrupt is represented in the ACPI namespace as a PCI Interrupt Link Device.

These objects have **\_PRS**, **\_CRS**, **\_SRS**, and **\_DIS** control methods to allocate the interrupt. Then, OSPM handles the interrupts not as interrupt inputs on the interrupt controller, but as PCI interrupt pins. The driver looks up the device’s pins in the **\_PRT** to determine which device objects allocate the interrupts. To move the PCI interrupt to a different interrupt input on the interrupt controller, OSPM uses **\_PRS**, **\_CRS**, **\_SRS**, and **\_DIS** control methods for the PCI Interrupt Link Device.

In the second model, the PCI interrupts are hardwired to specific interrupt inputs on the interrupt controller and are not configurable. In this case, the Source field in \_PRT does not reference a device, but instead contains the value zero, and the Source Index field contains the global system interrupt to which the PCI interrupt is hardwired.

### 6.2.13.1 Example: Using \_PRT to Describe PCI IRQ Routing

The following example describes two PCI slots and a PCI video chip. Notice that the interrupts on the two PCI slots are wired differently (barber-poled).

```

Scope(\_SB) {
    Device(LNKA){
        Name(_HID, EISAID("PNPOCOF"))           // PCI interrupt link
        Name(_UID, 1)
        Name(_PRS, ResourceTemplate(){
            Interrupt(ResourceProducer,...) {10,11}    // IRQs 10,11
        })
        Method(_DIS) {...}
        Method(_CRS) {...}
        Method(_SRS, 1) {...}
    }
    Device(LNKB){
        Name(_HID, EISAID("PNPOCOF"))           // PCI interrupt link
        Name(_UID, 2)
        Name(_PRS, ResourceTemplate(){
            Interrupt(ResourceProducer,...) {11,12}    // IRQs 11,12
        })
        Method(_DIS) {...}
        Method(_CRS) {...}
        Method(_SRS, 1) {...}
    }
    Device(LNKC){
        Name(_HID, EISAID("PNPOCOF"))           // PCI interrupt link
        Name(_UID, 3)
        Name(_PRS, ResourceTemplate(){
            Interrupt(ResourceProducer,...) {12,14}    // IRQs 12,14
        })
        Method(_DIS) {...}
        Method(_CRS) {...}
        Method(_SRS, 1) {...}
    }
    Device(LNKD){
        Name(_HID, EISAID("PNPOCOF"))           // PCI interrupt link
        Name(_UID, 4)
        Name(_PRS, ResourceTemplate(){
            Interrupt(ResourceProducer,...) {10,15}    // IRQs 10,15
        })
        Method(_DIS) {...}
        Method(_CRS) {...}
        Method(_SRS, 1) {...}
    }
}
```

```

}
Device(PCIO){
...
    Name(_PRT, Package{ // A fully qualified pathname can be used,
                        // or a simple name segment utilizing the search rules.
        Package{0x0004FFFF, 0, \_SB_.LNKA, 0}, // Slot 1, INTA
        Package{0x0004FFFF, 1, \_SB_.LNKB, 0}, // Slot 1, INTB
        Package{0x0004FFFF, 2, \_SB_.LNKC, 0}, // Slot 1, INTC
        Package{0x0004FFFF, 3, \_SB_.LNKD, 0}, // Slot 1, INTD
        Package{0x0005FFFF, 0, LNKB, 0},        // Slot 2, INTA
        Package{0x0005FFFF, 1, LNKC, 0},         // Slot 2, INTB
        Package{0x0005FFFF, 2, LNKD, 0},         // Slot 2, INTC
        Package{0x0005FFFF, 3, LNKA, 0},         // Slot 2, INTD
        Package{0x0006FFFF, 0, LNKC, 0}          // Video, INTA
    })
}
}

```

## 6.2.14 \_PXM (Proximity)

This optional object is used to describe proximity domain associations within a machine. \_PXM evaluates to an integer that identifies a device as belonging to a Proximity Domain defined in the System Resource Affinity Table (SRAT). OSPM assumes that two devices in the same proximity domain are tightly coupled. OSPM could choose to optimize its behavior based on this. For example, in a system with four processors and six memory devices, there might be two separate proximity domains (0 and 1), each with two processors and three memory devices. In this case, the OS may decide to run some software threads on the processors in proximity domain 0 and others on the processors in proximity domain 1. Furthermore, for performance reasons, it could choose to allocate memory for those threads from the memory devices inside the proximity domain common to the processor and the memory device rather than from a memory device outside of the processor's proximity domain.

Children of a device belong to the same proximity domain as their parent unless they contain an overriding \_PXM. Proximity domains do not imply any ejection relationships.

OSPM shall make no assumptions about the proximity or nearness of different proximity domains. The difference between two integers representing separate proximity domains does not imply distance between the proximity domains (in other words, proximity domain 1 is not assumed to be closer to proximity domain 0 than proximity domain 6).

If the Local APIC ID / Local SAPIC ID / Local x2APIC ID or the GICC ACPI Processor UID of a dynamically added processor is not present in the System Resource Affinity Table (SRAT), a \_PXM object must exist for the processor's device or one of its ancestors in the ACPI Namespace. See [Section 5.2.16, “System Resource Affinity Table \(SRAT\)”](#) and [Section 6.2.14, “\\_PXM \(Proximity\)”](#) for more information.

### Arguments:

None

### Return Value:

An Integer (DWORD) containing a proximity domain identifier.

## 6.2.15 \_SLI (System Locality Information)

The System Locality Information Table (SLIT) table defined in [Section 5.2.16.6, “System Locality Distance Information Table \(SLIT\)”](#) provides relative distance information between all System Localities for use during OS initialization.

The  $i,j$  row and column values correlate to the value returned by the `_PXM` object in the ACPI namespace. The value of each Entry $[i,j]$  in the SLIT table, where  $i$  represents a row of a matrix and  $j$  represents a column of a matrix, indicates the relative distances from System Locality / Proximity Domain  $i$  to every other System Locality  $j$  in the system (including itself).

The  $i,j$  row and column values correlate to the value returned by the `_PXM` object in the ACPI namespace. See [Section 6.2.14, “\\_PXM \(Proximity\)”](#) for more information.

Dynamic runtime reconfiguration of the system may cause the distance between System Localities to change.

`_SLI` is an optional object that enables the platform to provide the OS with updated relative System Locality distance information at runtime. `_SLI` provide OSPM with an update of the relative distance from System Locality  $i$  to all other System Localities in the system.

### Arguments:

None

### Return Value:

A **Buffer** containing a system locality information table


If System Locality  $i \geq N$ , where  $N$  is the number of System Localities, the `_SLI` method returns a buffer that contains these relative distances:

$[(i, 0), (i, 1), \dots, (i, i-1), (i, i), (0, i), (1, i), \dots, (i-1, i), (i, i)]$

If System Locality  $i < N$ , the `_SLI` method returns a buffer that contains these relative distances:

$[(i, 0), (i, 1), \dots, (i, i), \dots, (i, N-1), (0, i), (1, i), \dots, (i, i), \dots, (N-1, i)]$

**Note:**  $(i, i)$  is always a value of 10.

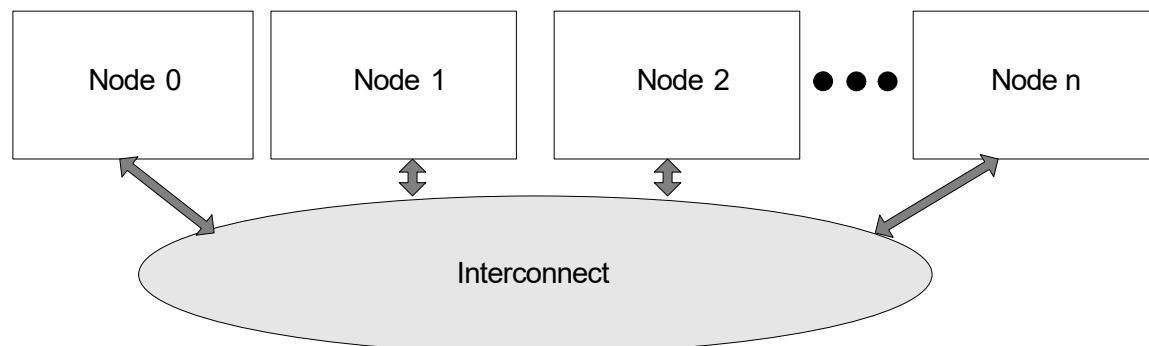

**Figure 6-33 System Locality information Table**

[Figure 6-33](#) diagrams a 4-node system where the nodes are numbered 0 through 3 (Node  $n = Node 3$ ) and the granularity is at the node level for the NUMA distance information. In this example we assign System

Localities / Proximity Domain numbers equal to the node numbers (0-3). The NUMA relative distances between proximity domains as implemented in this system are described in the matrix represented in [Table 6-202](#). Proximity Domains are represented by the numbers in the top row and left column. Distances are represented by the values in cells internal in the table from the domains.

**Table 6-202 Example Relative Distances Between Proximity Domains**

Proximity Domain	0	1	2	3
0	10	15	20	18
1	15	10	16	24
2	20	16	10	12
3	18	24	12	10

An example of these distances between proximity domains encoded in a System Locality Information Table for consumption by OSPM at boot time is described in [Table 6-203](#).

**Table 6-203 Example System Locality Information Table**

Field	Byte Length	Byte Offset	Description
Header			
Signature	4	0	'SLIT'.
Length	4	4	60
Revision	1	8	1
Checksum	1	9	Entire table must sum to zero.
OEMID	6	10	OEM ID.
OEM Table ID	8	16	For the System Locality Information Table, the table ID is the manufacturer model ID.
OEM Revision	4	24	OEM revision of System Locality Information Table for supplied OEM Table ID.
Creator ID	4	28	Vendor ID of utility that created the table. For the DSDT, RSDT, SSDT, and PSDT tables, this is the ID for the ASL Compiler.
Creator Revision	4	32	Revision of utility that created the table. For the DSDT, RSDT, SSDT, and PSDT tables, this is the revision for the ASL Compiler.
Number of System Localities	8	36	4
Entry[0][0]	1	44	10
Entry[0][1]	1	45	15
Entry[0][2]	1	46	20

Field	Byte Length	Byte Offset	Description
Entry[0][3]	1	47	18
Entry[1][0]	1	48	15
Entry[1][1]	1	49	10
Entry[1][2]	1	50	16
Entry[1][3]	1	51	24
Entry[2][0]	1	52	20
Entry[2][1]	1	53	16
Entry[2][2]	1	54	10
Entry[2][3]	1	55	12
Entry[3][0]	1	56	18
Entry[3][1]	1	57	24
Entry[3][2]	1	58	12
Entry[3][3]	1	59	10

If a new node, “Node 4”, is added, then [Table 6-204](#) represents the updated system’s NUMA relative distances of proximity domains.

**Table 6-204 Example Relative Distances Between Proximity Domains - 5 Node**

Proximity Domain	0	1	2	3	4
0	10	15	20	18	17
1	15	10	16	24	21
2	20	16	10	12	14
3	18	24	12	10	23
4	17	21	14	23	10

The new node’s \_SLI object would evaluate to a buffer containing [17,21,14,23,10,17,21,14,23,10].

**Note:** Some systems support interleave memory across the nodes. The SLIT representation of these systems is implementation specific.

### 6.2.16 \_SRS (Set Resource Settings)

This optional control method takes one byte stream argument that specifies a new resource allocation for a device. The resource descriptors in the byte stream argument must be specified exactly as listed in the \_CRS byte stream – meaning that the identical resource descriptors must appear in the identical order, resulting in a buffer of exactly the same length. Optimizations such as changing an IRQ descriptor to an IRQNoFlags descriptor (or vice-versa) must not be performed. Similarly, changing StartDependentFn to StartDependentFnNoPri is not allowed. A \_CRS object can be used as a template to

ensure that the descriptors are in the correct format. For more information, see the \_CRS object definition.

The settings must take effect before the \_SRS control method returns.

This method must not reference any operation regions that have not been declared available by a \_REG method.

If the device is disabled, \_SRS enables the device at the specified resources. \_SRS is not used to disable a device; use the \_DIS control method instead.

#### **Arguments:** (1)

Arg0 – A **Buffer** containing a Resource Descriptor byte stream

#### **Return Value:**

None

### **6.2.17 \_CCA (Cache Coherency Attribute)**

The \_CCA object returns whether or not a bus-master device supports hardware managed cache coherency. Expected values are 0 to indicate it is not supported, and 1 to indicate that it is supported. All other values are reserved.

On platforms for which existing default cache-coherency behavior of the OS is not adequate, \_CCA enables the OS to adapt to the differences. If used, \_CCA must be included under all bus-master-capable devices defined as children of \\_SB, to ensure that the operating system knows when it can rely on hardware managed cache coherency. The value of \_CCA is inherited by all descendants of these devices, so it need not be repeated for their children devices and will be ignored by OSPM if it is provided there. This includes slave devices on a shared DMA controller; thus these DMA controllers must also be defined in the namespace under the System Bus and include a \_CCA object.

If a device indicates it does not have hardware cache coherency support, then OSPM must use a software cache flushing algorithm to ensure stale or invalid data is not accessed from the caches.

\_CCA objects are only relevant for devices that can access CPU-visible memory, such as devices that are DMA capable. On ARM based systems, the \_CCA object must be supplied all such devices. On Intel platforms, if the \_CCA object is not supplied, the OSPM will assume the devices are hardware cache coherent.

#### **Arguments:**

None

#### **Return Value:**

An **Integer** indicating the device's support for hardware cache coherency

0 - The device does not have hardware managed cache coherency

1 - The device has hardware managed cache coherency

Other Values - Reserved

**Note:** There are restrictions related to when this object is evaluated which have implications for implementing this object as a control method. The \_CCA method must only access Operation Regions

that have been indicated to be available as defined by the \_REG method. The \_REG method is described in [Section 6.5.4, "\\_REG \(Region\)](#)."

### 6.2.17.1 \_CCA Example ASL:

```

Scope (\_SB) {
    ...
    Device (XHCI) {
        ...
        Name (_CCA, ZERO)      // Cache-incoherent bus-master, child of \_SB
        ...
    }
    ...
    Device (PCI0) {           // Root PCI Bus
        ...
        Name (_CCA, ONE)     // Cache-coherent bus-master, child of \_SB
        ...
        Device (PRT0) {
            ...
            // Bus-master-capable, not a child of \_SB
            ...
            // Will inherit coherency from PCI0, no _CCA required
            Device (NIC0) {
                ...
                // Bus-master-capable, not a child of \_SB
                ...
                // Will inherit coherency from PRT0, no _CCA required
            }
        }
        ...
        Device (SDHC) {
            ...
            Name (_CCA, ONE)     // Cache-coherent bus-master-capable, child of \_SB
            ...
        }
        ...
        Device (GPIO) {
            ...
            // Not bus-master-capable
            ...
            // _CCA not valid
        }
        ...
        Device (DMAC) {
            ...
            // DMA controller; _CCA must be specified
            Name (_CCA, ONE)     // Cache coherent bus-master, child of \_SB
            ...
        }
        ...
        Device (SPI1) {
            ...
            Name (_CRS, ResourceTemplate())
            {
                FixedDMA(...) // Sharing the DMA, thus inherits coherency from it
                ...
                ...
            }
        }
    }
}

```

```
        ...           // _CCA not valid  
    }  
}
```

### **6.2.18 \_HMA(Heterogeneous Memory Attributes)**

The Heterogeneous Memory Attributes Table (HMAT) defined in [Section 5.2.27](#) provides Heterogeneous Memory Attributes. Dynamic runtime reconfiguration of the system may cause proximities domains or memory attributes to change. If the “Reservation Hint” is set, new HMAT update shall not reset the “Reservation Hint” unless the memory range is removed.

`_HMA` is an optional object that enables the platform to provide the OS with updated Heterogeneous Memory Attributes information at runtime. `_HMA` provides OSPM with the latest HMAT in entirety overriding existing HMAT.

## Arguments:

None

## **Return Value:**

A **Buffer** containing entire HMAT.

Example ASL for \_HMA usage:

```
Scope (\_SB) {  
    Device (Dev1) {  
        ...  
    }  
    Device (Dev2) {  
        ...  
    }  
    Method (_HMA, 0  
        Return (HMAD)  
    }  
} // end of \_SB
```

## 6.3 Device Insertion, Removal, and Status Objects

The objects defined in this section provide mechanisms for handling dynamic insertion and removal of devices and for determining device and notification processing status.

Device insertion and removal objects are also used for docking and undocking mobile platforms to and from a peripheral expansion dock. These objects give information about whether or not devices are present, which devices are physically in the same device (independent of which bus the devices live on), and methods for controlling ejection or interlock mechanisms.

The system is more stable when removable devices have a software-controlled, VCR-style ejection mechanism instead of a “surprise-style” ejection mechanism. In this system, the eject button for a device does not immediately remove the device, but simply signals the operating system. OSPM then shuts down the device, closes open files, unloads the driver, and sends a command to the hardware to eject the device.

1. If the device is physically inserted while the system is in the working state (in other words, hot insertion), the hardware generates a general-purpose event.
2. The control method servicing the event uses the **Notify(device,0)** command to inform OSPM of the bus that the new device is on or the device object for the new device. If the Notify command points to the device object for the new device, the control method must have changed the device's status returned by \_STA to indicate that the device is now present. The performance of this process can be optimized by having the object of the Notify as close as possible, in the namespace hierarchy, to where the new device resides. The Notify command can also be used from the \_WAK control method (for more information about \_WAK, see [Section 7.4.5](#) “\\_WAK (System Wake)”) to indicate device changes that may have occurred while the system was sleeping. For more information about the Notify command, see [Section 5.6.3](#) “Device Object Notification.”
3. OSPM uses the identification and configuration objects to identify, configure, and load a device driver for the new device and any devices found below the device in the hierarchy.
4. If the device has a \_LCK control method, OSPM may later run this control method to lock the device.

The new device referred to in step 2 need not be a single device, but could be a whole tree of devices. For example, it could point to the PCI-PCI bridge docking connector. OSPM will then load and configure all devices it found below that bridge. The control method can also point to several different devices in the hierarchy if the new devices do not all live under the same bus. (in other words, more than one bus goes through the connector).

For removing devices, ACPI supports both hot removal (system is in the S0 state), and warm removal (system is in a sleep state: S1-S4). This is done using the \_EJx control methods. Devices that can be ejected include an \_EJx control method for each sleeping state the device supports (a maximum of 2 \_EJx objects can be listed). For example, hot removal devices would supply an \_EJ0; warm removal devices would use one of \_EJ1-EJ4. These control methods are used to signal the hardware when an eject is to occur.

The sequence of events for dynamically removing a device goes as follows:

1. The eject button is pressed and generates a general-purpose event. (If the system was in a sleeping state, it should wake the system).
2. The control method for the event uses the **Notify(device, 3)** command to inform OSPM which specific device the user has requested to eject. Notify does not need to be called for every device that may be ejected, but for the top-level device. Any child devices in the hierarchy or any ejection-dependent devices on this device (as described by \_EJD, below) are automatically removed.
3. The OS shuts down and unloads devices that will be removed.
4. If the device has a \_LCK control method, OSPM runs this control method to unlock the device.
5. The OS looks to see what \_EJx control methods are present for the device. If the removal event will cause the system to switch to battery power (in other words, an undock) and the battery is low, dead, or not present, OSPM uses the lowest supported sleep state \_EJx listed; otherwise it uses the highest state \_EJx. Having made this decision, OSPM runs the appropriate \_EJx control method to prepare the hardware for eject.
6. Warm removal requires that the system be put in a sleep state. If the removal will be a warm removal, OSPM puts the system in the appropriate Sx state. If the removal will be a hot removal, OSPM skips to step 8, below.

7. For warm removal, the system is put in a sleep state. Hardware then uses any motors, and so on, to eject the device. Immediately after ejection, the hardware transitions the system to S0. If the system was sleeping when the eject notification came in, the OS returns the system to a sleeping state consistent with the user's wake settings.
8. OSPM calls \_STA to determine if the eject successfully occurred. (In this case, control methods do not need to use the **Notify(device,3)** command to tell OSPM of the change in \_STA) If there were any mechanical failures, \_STA returns 3: device present and not functioning, and OSPM informs the user of the problem.

**Note:** *This mechanism is the same for removing a single device and for removing several devices, as in an undock.*

ACPI does not disallow surprise-style removal of devices; however, this type of removal is not recommended because system and data integrity cannot be guaranteed when a surprise-style removal occurs. Because the OS is not informed, its device drivers cannot save data buffers and it cannot stop accesses to the device before the device is removed. To handle surprise-style removal, a general-purpose event must be raised. Its associated control method must use the Notify command to indicate which bus the device was removed from.

The device insertion and removal objects are listed in [Table 6-205](#).

**Table 6-205 Device Insertion, Removal, and Status Objects**

Object	Description
_EDL	Object that evaluates to a package of namespace references of device objects that depend on the device containing _EDL.
_EJD	Object that evaluates to the name of a device object on which a device depends. Whenever the named device is ejected, the dependent device must receive an ejection notification.
_EJx	Control method that ejects a device.
_LCK	Control method that locks or unlocks a device.
_OST	Control method invoked by OSPM to convey processing status to the platform.
_RMV	Object that indicates that the given device is removable.
_STA	Control method that returns a device's status.

### 6.3.1 \_EDL (Eject Device List)

This object evaluates to a package of namespace references containing the names of device objects that depend on the device under which the \_EDL object is declared. This is primarily used to support docking stations. Before the device under which the \_EDL object is declared may be ejected, OSPM prepares the devices listed in the \_EDL object for physical removal.

#### Arguments:

None

#### **Return Value:**

A variable-length **Package** containing a list of namespace references

Before OSPM ejects a device via the device's \_EJx methods, all dependent devices listed in the package returned by \_EDL are prepared for removal. Notice that \_EJx methods under the dependent devices are not executed.

When describing a platform that includes a docking station, an \_EDL object is declared under the docking station device. For example, if a mobile system can attach to two different types of docking stations, \_EDL is declared under both docking station devices and evaluates to the packaged list of devices that must be ejected when the system is ejected from the docking station.

An ACPI-compliant OS evaluates the \_EDL method just prior to ejecting the device.

### 6.3.2 \_EJD (Ejection Dependent Device)

This object is used to specify the name of a device on which the device, under which this object is declared, is dependent. This object is primarily used to support docking stations. Before the device indicated by \_EJD is ejected, OSPM will prepare the dependent device (in other words, the device under which this object is declared) for removal.

#### Arguments:

None

#### Return Value:

A String containing the device name

\_EJD is evaluated once when the ACPI table loads. The EJx methods of the device indicated by \_EJD will be used to eject all the dependent devices. A device's dependents will be ejected when the device itself is ejected.

**Note:** *OSPM will not execute a dependent device's \_EJx methods when the device indicated by \_EJD is ejected.*

When describing a platform that includes a docking station, usually more than one \_EJD object will be needed. For example, if a dock attaches both a PCI device and an ACPI-configured device to a mobile system, then both the PCI device description package and the ACPI-configured device description package must include an \_EJD object that evaluates to the name of the docking station (the name specified in an \_ADR or \_HID object in the docking station's description package). Thus, when the docking connector signals an eject request, OSPM first attempts to disable and unload the drivers for both the PCI and ACPI configured devices.

**Note:** *An ACPI 1.0 OS evaluates the \_EJD methods only once during the table load process. This greatly restricts a table designer's freedom to describe dynamic dependencies such as those created in scenarios with multiple docking stations. This restriction is illustrated in the example below; the \_EJD information supplied via an ACPI 1.0-compatible namespace omits the IDE2 device from DOCK2's list of ejection dependencies. Starting in ACPI 2.0, OSPM is presented with a more in-depth view of the ejection dependencies in a system by use of the \_EDL methods.*

### Example

An example use of \_EJD and \_EDL is as follows:

```
Scope(\_SB.PCI0) {
```

```

Device(DOCK1) {           // Pass through dock - DOCK1
    Name(_ADR, ...)
    Method(_EJ0, 0) {...}
    Method(_DCK, 1) {...}
    Name(_BDN, ...)
    Method(_STA, 0) {0xF}
    Name(_EDL, Package( ) {      // DOCK1 has two dependent devices - IDE2 and CB2
        \_SB.PCI0.IDE2,
        \_SB.PCI0.CB2})
}
Device(DOCK2) {           // Pass through dock - DOCK2
    Name(_ADR, ...)
    Method(_EJ0, 0) {...}
    Method(_DCK, 1) {...}
    Name(_BDN, ...)
    Method(_STA, 0) {0x0}
    Name(_EDL, Package( ) {      // DOCK2 has one dependent device - IDE2
        \_SB.PCI0.IDE2})
}

Device(IDE1) {           // IDE Drive1 not dependent on the dock
    Name(_ADR, ...)
}

Device(IDE2) {           // IDE Drive2
    Name(_ADR, ...)
    Name(_EJD, "\_SB.PCI0.DOCK1") // Dependent on DOCK1
}

Device(CB2) {           // CardBus Controller
    Name(_ADR, ...)
    Name(_EJD, "\_SB.PCI0.DOCK1") // Dependent on DOCK1
}
}                         // end \_SB.PCI0

```

### 6.3.3 \_EJx (Eject)

These control methods are optional and are supplied for devices that support a software-controlled VCR-style ejection mechanism or that require an action be performed such as isolation of power/data lines before the device can be removed from the system. To support warm (system is in a sleep state) and hot (system is in S0) removal, an \_EJx control method is listed for each sleep state from which the device supports removal, where x is the sleeping state supported. For example, \_EJ0 indicates the device supports hot removal; \_EJ1–EJ4 indicate the device supports warm removal.

#### Arguments: (1)

Arg0 – An **Integer** containing a device ejection control

- 0 – Cancel a mark for ejection request (EJ0 will never be called with this value)
- 1 – Hot eject or mark for ejection

**Return Value:**

None

For hot removal, the device must be immediately ejected when OSPM calls the \_EJ0 control method. The \_EJ0 control method does not return until ejection is complete. After calling \_EJ0, OSPM verifies the device no longer exists to determine if the eject succeeded. For \_HID devices, OSPM evaluates the \_STA method. For \_ADR devices, OSPM checks with the bus driver for that device.

For warm removal, the \_EJ1–\_EJ4 control methods do not cause the device to be immediately ejected. Instead, they set proprietary registers to prepare the hardware to eject when the system goes into the given sleep state. The hardware ejects the device only after OSPM has put the system in a sleep state by writing to the SLP\_EN register. After the system resumes, OSPM calls \_STA to determine if the eject succeeded.

A device object may have multiple \_EJx control methods. First, it lists an EJx control method for the preferred sleeping state to eject the device. Optionally, the device may list an EJ4 control method to be used when the system has no power (for example, no battery) after the eject. For example, a hot-docking notebook might list \_EJ0 and \_EJ4.

### **6.3.4 \_LCK (Lock)**

This control method is optional and is required only for a device that supports a software-controlled locking mechanism. When the OS invokes this control method, the associated device is to be locked or unlocked based upon the value of the argument that is passed. On a lock request, the control method must not complete until the device is completely locked.

**Arguments: (1)**

Arg0 – An **Integer** containing a device lock control

- 0 – Unlock the device
- 1 – Lock the device

**Return Value:**

None

When describing a platform, devices use either a \_LCK control method or an \_EJx control method for a device.

### **6.3.5 \_OST (OSPM Status Indication)**

This object is an optional control method that is invoked by OSPM to indicate processing status to the platform. During device ejection, device hot add, Error Disconnect Recover, or other event processing, OSPM may need to perform specific handshaking with the platform. OSPM may also need to indicate to the platform its inability to complete a requested operation; for example, when a user presses an ejection button for a device that is currently in use or is otherwise currently incapable of being ejected. In this case, the processing of the ACPI **Eject Request** notification by OSPM fails. OSPM may indicate this failure to the platform through the invocation of the \_OST control method. As a result of the status notification indicating ejection failure, the platform may take certain action including reissuing the notification or perhaps turning on an appropriate indicator light to signal the failure to the user.

**Arguments: (3)**

Arg0 – An **Integer** containing the source event

Arg1 – An **Integer** containing the status code

Arg2 – A **Buffer** containing status information

**Return Value:**

None

### Argument Information:

Arg0 – *source\_event*: DWordConst

If the value of *source\_event* is <= 0xFF, this argument is the ACPI notification value whose processing generated the status indication. This is the value that was passed into the **Notify** operator.

If the value of *source\_event* is 0x100 or greater then the OSPM status indication is a result of an OSPM action as indicated in [Table 6-206](#). For example, a value of 0x103 will be passed into \_OST for this argument upon the failure of a user interface invoked device ejection.

If OSPM is unable to identify the originating notification value, OSPM invokes \_OST with a value that contains all bits set (ones) for this parameter.

Arg1 – Status Code: DWordConst. OSPM indicates a notification value specific status. See [Table 6-207](#), [Table 6-208](#), and [Table 6-210](#) for status code descriptions.

Arg2 – A buffer containing detailed OSPM-specific information about the status indication. This argument may be null.

**Table 6-206 OST Source Event Codes**

Source Event Code	Description
0-0xFF	Reserved for Notification Values
0x100	Operation System Shutdown Processing
0x101-0x102	<i>Reserved</i>
0x103	Ejection Processing
0x104-0x1FF	<i>Reserved</i>
0x200	Insertion Processing
0x201-0xFFFFFFFF	<i>Reserved</i>

**Table 6-207 General Processing Status Codes**

Status Code	Description
0	Success
1	Non-specific failure
2	Unrecognized Notify Code
3-0x7F	<i>Reserved</i>
0x80-0xFFFFFFFF	Notification value specific status codes

**Table 6-208 Operating System Shutdown Processing (Source Events : 0x100) Status Codes**

Status Code	Description
0x80	OS Shutdown Request denied
0x81	OS Shutdown in progress
0x82	OS Shutdown completed
0x83	OS Graceful Shutdown not supported
0x84-0xFFFFFFFF	<i>Reserved</i>

### 6.3.5.1 Processing Sequence for Graceful Shutdown Request:

Following receipt of the Graceful Shutdown Request (see [Table 5-166](#), value 0x81) the OS will be responsible for responding with one of the following status codes:

- 0x80 (OS Shutdown Request denied) –This value will be sent if the OS is not capable of performing a graceful shutdown.
- 0x81 (OS Shutdown in progress) – The OS has initiated the graceful shutdown procedure.
- 0x83 (OS Graceful Shutdown not supported) – The OS does not support the Graceful Shutdown Request.

If the OS does initiate a graceful shutdown it should continue to generate the “OS Shutdown in progress” message (\_OST source event 0x100 status code 0x81) every 10 seconds. This functions as a heartbeat so that the service which requested the graceful shutdown knows that the request is currently being processed. The platform should assume that the OS shutdown is not proceeding if it does not receive the “OS Shutdown in progress” message for 60 seconds.

When the graceful shutdown procedure has completed the OSPM will send the “OS Shutdown completed” message and then transition the platform to the G2 “soft-off” power state.

**Table 6-209 Ejection Request / Ejection Processing (Source Events: 0x03 and 0x103) Status Codes**

Status Code	Description
0x80	Device ejection not supported by OSPM
0x81	Device in use by application
0x82	Device Busy
0x83	Ejection dependency is busy or not supported for ejection by OSPM
0x84	Ejection is in progress (pending)
0x85-0xFFFFFFFF	<i>Reserved</i>

**Table 6-210 Insertion Processing (Source Event: 0x200) Status Codes**

Status Code	Description
0x80	Device insertion in progress (pending)
0x81	Device driver load failure
0x82	Device insertion not supported by OSPM
0x83-0x8F	<i>Reserved</i>
0x90-0x9F	Insertion failure – Resources Unavailable as described by the following bit encodings: Bit [3] Bus or Segment Numbers Bit [2] Interrupts Bit [1] I/O Bit [0] Memory
0xA0-0xFFFFFFFF	<i>Reserved</i>

It is possible for the platform to issue multiple notifications to OSPM and for OSPM to process the notifications asynchronously. As such, OSPM may invoke \_OST for notifications independent of the order the notification are conveyed by the platform or by software to OSPM.

The figure below provides and example event flow of device ejection on a platform employing the \_OST object.

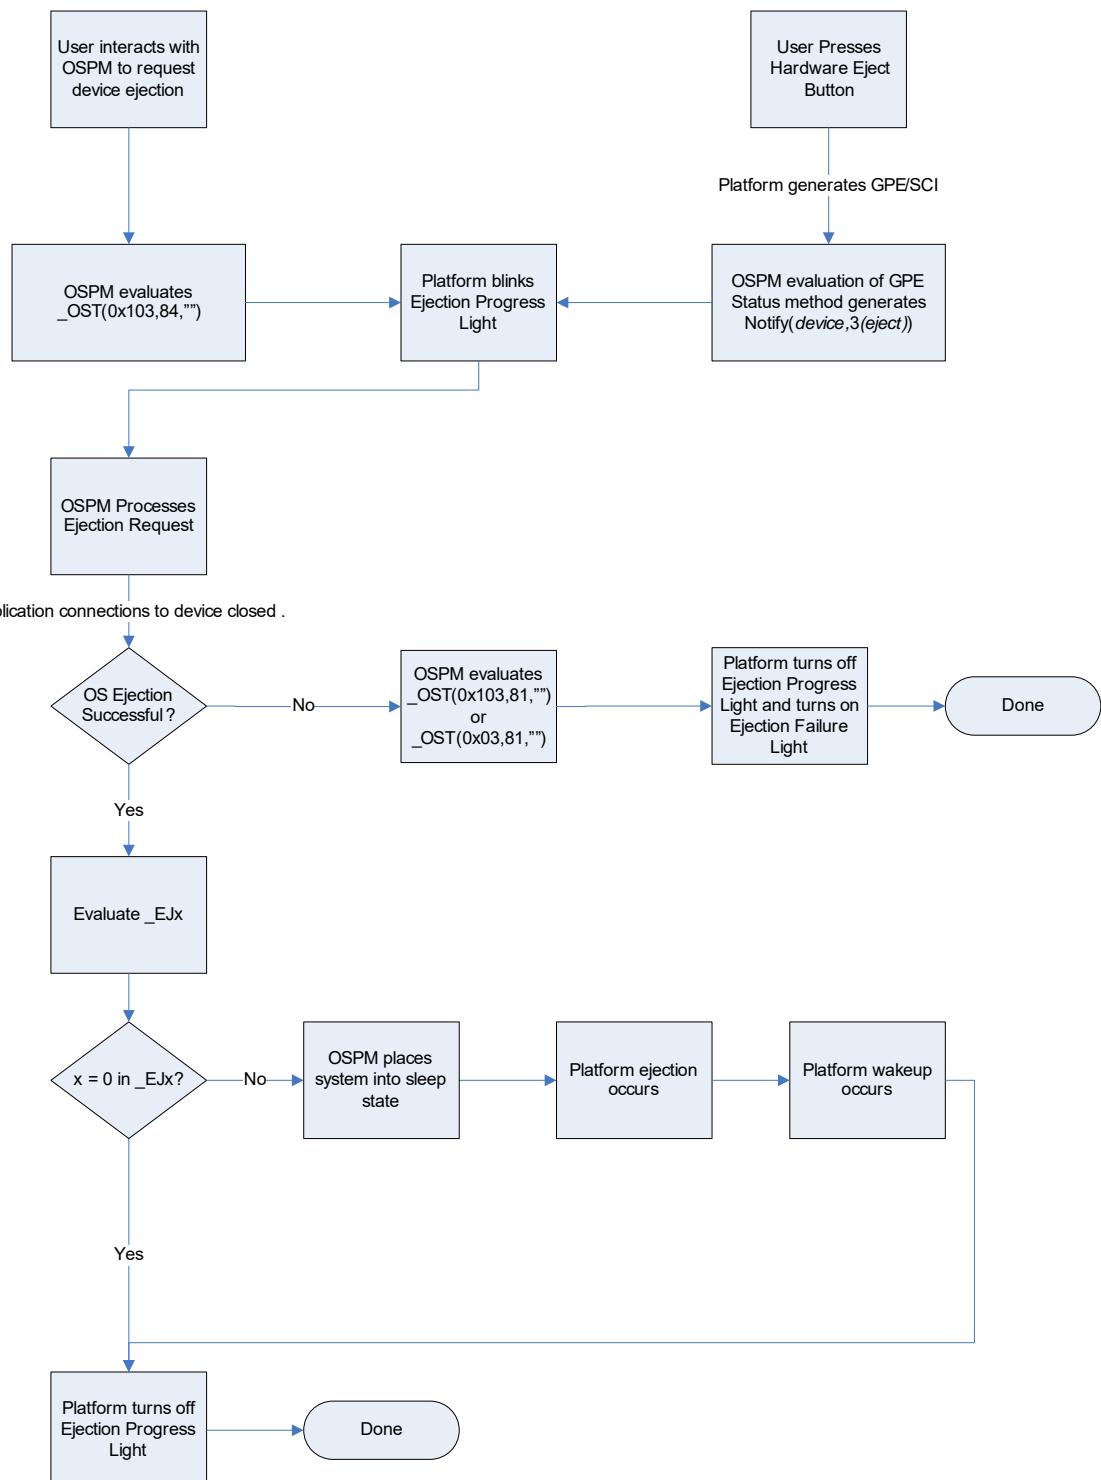


Figure 6-34 Device Ejection Flow Example Using \_OST

**Note:** To maintain compatibility with OSPM implementations of previous revisions of the ACPI specification, the platform must not rely on OSPM's evaluation of the \_OST object for proper platform operation.

Example ASL for \_OST usage:

```
External (\_SB.PCI4, DeviceObj)
```

```
Scope(\_SB.PCI4) {
    OperationRegion(LED1, SystemIO, 0x10C0, 0x20)
    Field(LED1, AnyAcc, NoLock, Preserve)
    { // LED controls
        SOLE, 1,           // Slot 0 Ejection Progress LED
        SOLF, 1,           // Slot 0 Ejection Failure LED
        S1LE, 1,           // Slot 1 Ejection Progress LED
        S1LF, 1,           // Slot 1 Ejection Failure LED
        S2LE, 1,           // Slot 2 Ejection Progress LED
        S2LF, 1,           // Slot 2 Ejection Failure LED
        S3LE, 1,           // Slot 3 Ejection Progress LED
        S3LF, 1           // Slot 3 Ejection Failure LED
    }

    Device(SLT3) { // hot plug device
        Name(_ADR, 0x000C0003)
        Method(_OST, 3, Serialized) { // OS calls _OST with notify code 3 or 0x103
            // and status codes 0x80-0x83
            // to indicate a hot remove request failure.
            // Status code 0x84 indicates an ejection
            // request pending.

            If(LEqual(Arg0, Ones)) // Unspecified event
            {
                // Perform generic event processing here
            }

            Switch(And(Arg0, 0xFF)) // Mask to retain low byte
            {
                Case(0x03) // Ejection request
                {
                    Switch(Arg1)
                    {
                        Case(Package(){0x80, 0x81, 0x82, 0x83}) // Ejection Failure for some reason
                        {
                            Store(Zero, ^S3LE) // Turn off Ejection Progress LED
                            Store(One, ^S3LF) // Turn on Ejection Failure LED
                        }
                        Case(0x84) // Eject request pending
                        {
                            Store(One, ^S3LE) // Turn on Ejection Request LED
                            Store(Zero, ^S3LF) // Turn off Ejection Failure LED
                        }
                    }
                }
            }
        }
    }
}
```

```

        }
    }
} // end _OST

Method(_EJ0, 1)           // Successful ejection sequence
{
    Store(Zero, ^S3LE)    // Turn off Ejection Progress LED
}
} // end SLT3
} // end scope \_SB.PCI4

Scope (\_GPE)
{
    Method(_E13)
    {
        Store(One, \_SB.PCI4.S3LE)      // Turn on ejection request LED
        Notify(\_SB.PCI4.SLT3, 3)       // Ejection request driven from GPE13
    }
}

```

### 6.3.5.2 Processing Sequence for Error Disconnect Recover

If the OS attempts recovery operation following the receipt of the Error Disconnect Recover Request (see [Table 5-161](#), value 0x0F) the OS will be responsible for invoking \_OST with one of the following status codes in the lower word of Arg1:

- 0x80 (Success) –This value will be sent if the OS successfully recovers all the child devices affected by Error Disconnect Recover, reconfigures them and brings them back to functional state. All child devices are accessible at the time \_OST is evaluated.
- 0x81 (Not recovered) – The OS did not successfully recover one or more child devices that were affected by Error Disconnect Recover. Access to the child devices affected by Error Disconnect Recover may be unreliable.

The upper word of Arg1 can be used to communicate bus-specific status information.

### 6.3.6 \_RMV (Remove)

The optional \_RMV object indicates to OSPM whether the device can be removed while the system is in the working state and does not require any ACPI system firmware actions to be performed for the device to be safely removed from the system (in other words, any device that only supports surprise-style removal). Any such removable device that does not have \_LCK or \_EJx control methods must have an \_RMV object. This allows OSPM to indicate to the user that the device can be removed and to provide a way for shutting down the device before removing it. OSPM will transition the device into D3 before telling the user it is safe to remove the device.

This method is reevaluated after a device-check notification.

#### Arguments:

None

**Return Value:**

An **Integer** containing the device removal status

- 0 – The device cannot be removed
- 1 – The device can be removed

**Note:** Operating Systems implementing ACPI 1.0 interpret the presence of this object to mean that the device is removable.

**6.3.7 \_STA (Status)**

This object returns the current status of a device, which can be one of the following: enabled, disabled, or removed.

OSPM evaluates the \_STA object before it evaluates a device \_INI method. The return values of the Present and Functioning bits determines whether \_INI should be evaluated and whether children of the device should be enumerated and initialized. See [Section 6.5.1, “\\_INI \(Init\)“](#).

If a device object describes a device that is not on an enumerable bus and the device object does not have an \_STA object, then OSPM assumes that the device is present, enabled, shown in the UI, and functioning.

This method must not reference any operation regions that have not been declared available by a \_REG method.

**Arguments:**

None

**Return Value:**

An **Integer** containing a device status bitmap:

- Bit [0] – Set if the device is present.
- Bit [1] – Set if the device is enabled and decoding its resources.
- Bit [2] – Set if the device should be shown in the UI.
- Bit [3] – Set if the device is functioning properly (cleared if device failed its diagnostics).
- Bit [4] – Set if the battery is present.
- Bits [31:5] – Reserved (must be cleared).

**Return Value Information**

If bit [0] is cleared, then bit 1 must also be cleared (in other words, a device that is not present cannot be enabled).

A device can only decode its hardware resources if both bits 0 and 1 are set. If the device is not present (bit [0] cleared) or not enabled (bit [1] cleared), then the device must not decode its resources.

If a device is present in the machine, but should not be displayed in OSPM user interface, bit 2 is cleared. For example, a notebook could have joystick hardware (thus it is present and decoding its resources), but the connector for plugging in the joystick requires a port replicator. If the port replicator is not plugged in, the joystick should not appear in the UI, so bit [2] is cleared.

`_STA` may return bit 0 clear (not present) with bit [3] set (device is functional). This case is used to indicate a valid device for which no device driver should be loaded (for example, a bridge device.) Children of this device may be present and valid. OSPM should continue enumeration below a device whose `_STA` returns this bit combination.

Bit [4] of `_STA` applies only to the Control Method Battery Device (PNP0C0A). For all other devices, OSPM must ignore this bit.

If a device object (including the processor object) does not have an `_STA` object, then OSPM assumes that all of the above bits are set (i.e., the device is present, enabled, shown in the UI, and functioning).

## 6.4 Resource Data Types for ACPI

The `_CRS`, `_PRS`, and `_SRS` control methods use packages of resource descriptors to describe the resource requirements of devices.

### 6.4.1 ASL Macros for Resource Descriptors

ASL includes some macros for creating resource descriptors. The ASL syntax for these macros is defined in [Section 19.6, “ASL Operator Reference”](#), along with the other ASL operators.

### 6.4.2 Small Resource Data Type

A small resource data type may be 2 to 8 bytes in size and adheres to the following format:

**Table 6-211 Small Resource Data Type Tag Bit Definitions**

Offset	Field		
Byte 0	Tag Bit [7]	Tag Bits [6:3]	Tag Bits [2:0]
	Type-0 (Small item)	Small item name	Length- <i>n</i> bytes
Bytes 1 to <i>n</i>	Data bytes (Length 0 – 7)		

The following small information items are currently defined for Plug and Play devices:

**Table 6-212 Small Resource Items**

Small Item Name	Value
Reserved	0x00-0x03
IRQ Format Descriptor	0x04
DMA Format Descriptor	0x05
Start Dependent Functions Descriptor	0x06
End Dependent Functions Descriptor	0x07
I/O Port Descriptor	0x08
Fixed Location I/O Port Descriptor	0x09
Fixed DMA Descriptor	0x0A
Reserved	0x0B-0x0D

Vendor Defined Descriptor	0x0E
End Tag Descriptor	0x0F

#### 6.4.2.1 IRQ Descriptor

##### Type 0, Small Item Name 0x4, Length = 2 or 3

The IRQ data structure indicates that the device uses an interrupt level and supplies a mask with bits set indicating the levels implemented in this device. For standard PC-AT implementation there are 15 possible interrupts so a two-byte field is used. This structure is repeated for each separate interrupt required.

**Table 6-213 IRQ Descriptor Definition**

Offset	Field Name
Byte 0	Value = 0x22 or 0x23 (0010001nB) – Type = 0, Small item name = 0x4, Length = 2 or 3
Byte 1	IRQ mask bits[7:0], <b>_INT</b> Bit [0] represents IRQ0, bit[1] is IRQ1, and so on.
Byte 2	IRQ mask bits[15:8], <b>_INT</b> Bit [0] represents IRQ8, bit[1] is IRQ9, and so on.
Byte 3	IRQ Information. Each bit, when set, indicates this device is capable of driving a certain type of interrupt. (Optional—if not included then assume edge sensitive, high true interrupts.) These bits can be used both for reporting and setting IRQ resources.  <b>Note:</b> This descriptor is meant for describing interrupts that are connected to PIC-compatible interrupt controllers, which can only be programmed for Active-High-Edge-Triggered or Active-Low-Level-Triggered interrupts. Any other combination is invalid. The Extended Interrupt Descriptor can be used to describe other combinations.  Bit [7:6] <i>Reserved</i> (must be 0) Bit [5] <b>Wake Capability, _WKC</b> 0x0 = Not Wake Capable: This interrupt is not capable of waking the system. 0x1 = Wake Capable: This interrupt is capable of waking the system from a low-power idle state or a system sleep state. Bit [4] <b>Interrupt Sharing, _SHR</b> 0x0 = Exclusive: This interrupt is not shared with other devices. 0x1 = Shared: This interrupt is shared with other devices. Bit [3] <b>Interrupt Polarity, _LL</b> 0 Active-High – This interrupt is sampled when the signal is high, or true 1 Active-Low – This interrupt is sampled when the signal is low, or false. Bit [2:1] <i>Ignored</i> Bit [0] <b>Interrupt Mode, _HE</b> 0 Level-Triggered – Interrupt is triggered in response to signal in a low state. 1 Edge-Triggered – Interrupt is triggered in response to a change in signal state from low to high.

**Note:** Low true, level sensitive interrupts may be electrically shared, but the process of how this might work is beyond the scope of this specification.

**Note:** If byte 3 is not included, High true, edge sensitive, non-shareable is assumed.

See [Section 19.6.65](#), “IRQ (Interrupt Resource Descriptor Macro),” and [Section 19.6.66](#), “IRQNoFlags (Interrupt Resource Descriptor Macro),” for a description of the ASL macros that create an IRQ descriptor.

#### 6.4.2.2 DMA Descriptor

##### Type 0, Small Item Name 0x5, Length = 2

The DMA data structure indicates that the device uses a DMA channel and supplies a mask with bits set indicating the channels actually implemented in this device. This structure is repeated for each separate channel required.

**Table 6-214 DMA Descriptor Definition**

Offset	Field Name
Byte 0	Value = 0xA2 (00101010B) – Type = 0, Small item name = 0x5, Length = 2
Byte 1	DMA channel mask bits [7:0] (channels 0 – 7), <b>_DMA</b> Bit [0] is channel 0, etc.
Byte 2	Bit [7] <i>Reserved</i> (must be 0) Bits [6:5] DMA channel speed supported, <b>_TYP</b> 00 Indicates compatibility mode 01 Indicates Type A DMA as described in the EISA 10 Indicates Type B DMA 11 Indicates Type F Bits [4:3] <i>Ignored</i> Bit [2] Logical device bus master status, <b>_BM</b> 0 Logical device is not a bus master 1 Logical device is a bus master Bits [1:0] DMA transfer type preference, <b>_SIZ</b> 00 8-bit only 01 8- and 16-bit 10 16-bit only 11 <i>Reserved</i>

See [Section 19.6.32](#), “DMA (DMA Resource Descriptor Macro),” for a description of the ASL macro that creates a DMA descriptor.

#### 6.4.2.3 Start Dependent Functions Descriptor

##### Type 0, Small Item Name 0x6, Length = 0 or 1

Each logical device requires a set of resources. This set of resources may have interdependencies that need to be expressed to allow arbitration software to make resource allocation decisions about the logical device. Dependent functions are used to express these interdependencies. The data structure

definitions for dependent functions are shown here. For a detailed description of the use of dependent functions refer to the next section.

**Table 6-215 Start Dependent Functions Descriptor Definition**

Offset	Field Name
Byte 0	Value = 0x30 or 0x31 (0011000nB) – Type = 0, small item name = 0x6, Length = 0 or 1

Start Dependent Function fields may be of length 0 or 1 bytes. The extra byte is optionally used to denote the compatibility or performance/robustness priority for the resource group following the Start DF tag. The compatibility priority is a ranking of configurations for compatibility with legacy operating systems. This is the same as the priority used in the PNPBIOS interface. For example, for compatibility reasons, the preferred configuration for COM1 is IRQ4, I/O 3F8-3FF. The performance/robustness performance is a ranking of configurations for performance and robustness reasons. For example, a device may have a high-performance, bus mastering configuration that may not be supported by legacy operating systems. The bus-mastering configuration would have the highest performance/robustness priority while its polled I/O mode might have the highest compatibility priority.

If the Priority byte is not included, this indicates the dependent function priority is ‘acceptable’. This byte is defined as:

**Table 6-216 Start Dependent Function Priority Byte Definition**

Bits	Definition
1:0	Compatibility priority. Acceptable values are: <ul style="list-style-type: none"> <li>0 Good configuration: Highest Priority and preferred configuration</li> <li>1 Acceptable configuration: Lower Priority but acceptable configuration</li> <li>2 Sub-optimal configuration: Functional configuration but not optimal</li> <li>3 Reserved</li> </ul>
3:2	Performance/robustness. Acceptable values are: <ul style="list-style-type: none"> <li>0 Good configuration: Highest Priority and preferred configuration</li> <li>1 Acceptable configuration: Lower Priority but acceptable configuration</li> <li>2 Sub-optimal configuration: Functional configuration but not optimal</li> <li>3 Reserved</li> </ul>
7:4	<i>Reserved</i> (must be 0)

Notice that if multiple Dependent Functions have the same priority, they are further prioritized by the order in which they appear in the resource data structure. The Dependent Function that appears earliest (nearest the beginning) in the structure has the highest priority, and so on.

See [Section 19.6.128](#), “StartDependentFn (Start Dependent Function Resource Descriptor Macro),” for a description of the ASL macro that creates a Start Dependent Function descriptor.

#### 6.4.2.4 End Dependent Functions Descriptor

##### Type 0, Small Item Name 0x7, Length = 0

Only one End Dependent Function item is allowed per logical device. This enforces the fact that Dependent Functions cannot be nested.

**Table 6-217 End Dependent Functions Descriptor Definition**

Offset	Field Name
Byte 0	Value = 0x38 (00111000B) – Type = 0, Small item name = 0x7, Length =0

See [Section 19.6.39](#), “EndDependentFn (End Dependent Function Resource Descriptor Macro,” for a description of the ASL macro that creates an End Dependent Functions descriptor.

#### 6.4.2.5 I/O Port Descriptor

##### Type 0, Small Item Name 0x8, Length = 7

There are two types of descriptors for I/O ranges. The first descriptor is a full function descriptor for programmable devices. The second descriptor is a minimal descriptor for old ISA cards with fixed I/O requirements that use a 10-bit ISA address decode. The first type descriptor can also be used to describe fixed I/O requirements for ISA cards that require a 16-bit address decode. This is accomplished by setting the range minimum base address and range maximum base address to the same fixed I/O value.

**Table 6-218 I/O Port Descriptor Definition**

Offset	Field Name	Definition
Byte 0	I/O Port Descriptor	Value = 0x47 (01000111B) – Type = 0, Small item name = 0x8, Length = 7
Byte 1	Information	Bits [7:1] <i>Reserved</i> and must be 0 Bit [0] <b>(_DEC)</b> 1 The logical device decodes 16-bit addresses 0 The logical device only decodes address bits[9:0]
Byte 2	Range minimum base address, <b>_MIN</b> bits[7:0]	Address bits [7:0] of the minimum base I/O address that the card may be configured for.
Byte 3	Range minimum base address, <b>_MIN</b> bits[15:8]	Address bits [15:8] of the minimum base I/O address that the card may be configured for.
Byte 4	Range maximum base address, <b>_MAX</b> bits[7:0]	Address bits [7:0] of the maximum base I/O address that the card may be configured for.
Byte 5	Range maximum base address, <b>_MAX</b> bits[15:8]	Address bits [15:8] of the maximum base I/O address that the card may be configured for.
Byte 6	Base alignment, <b>_ALN</b>	Alignment for minimum base address, increment in 1-byte blocks.
Byte 7	Range length, <b>_LEN</b>	The number of contiguous I/O ports requested.

See [Section 19.6.64](#), “IO (IO Resource Descriptor Macro,” for a description of the ASL macro that creates an I/O Port descriptor.

### 6.4.2.6 Fixed Location I/O Port Descriptor

#### Type 0, Small Item Name 0x9, Length = 3

This descriptor is used to describe 10-bit I/O locations.

**Table 6-219 Fixed-Location I/O Port Descriptor Definition**

Offset	Field Name	Definition
Byte 0	Fixed Location I/O Port Descriptor	Value = 0x4B (01001011B) – Type = 0, Small item name = 0x9, Length = 3
Byte 1	Range base address, <u>_BAS</u> bits[7:0]	Address bits [7:0] of the base I/O address that the card may be configured for. This descriptor assumes a 10-bit ISA address decode.
Byte 2	Range base address, <u>_BAS</u> bits[9:8]	Address bits [9:8] of the base I/O address that the card may be configured for. This descriptor assumes a 10-bit ISA address decode.
Byte 3	Range length, <u>_LEN</u>	The number of contiguous I/O ports requested.

See [Section 19.6.50](#), “FixedIO (Fixed I/O Resource Descriptor Macro),” for a description of the ASL macro that creates a Fixed I/O Port descriptor.

### 6.4.2.7 Fixed DMA Descriptor

#### Type 0, Small Item Name 0xA, Length = 5

The Fixed DMA descriptor provides a means for platforms to statically assign DMA request lines and channels to devices connected to a shared DMA controller. This descriptor differs from the DMA descriptor in that it supports many more DMA request lines and DMA controller channels, as well as a flexible mapping between the two. The width of the bus used for transfers to the device is also provided. This structure is repeated for each separate request line/channel pair required, and can only be used in the \_CRS object. (Dynamic arbitration of Fixed DMA resource is not supported.)

**Table 6-220 Fixed DMA Resource Descriptor**

Offset	Field Name
Byte 0	Value = 0x55 (01010101B) – Type = 0, Small item name = 0xA, Length = 0x5
Byte 1	DMA Request Line bits [7:0] <u>_DMA[7:0]</u> . A platform-relative number uniquely identifying the request line assigned. Request line-to-Controller mapping is done in a controller-specific OS driver.
Byte 2	DMA Request Line bits [15:8] <u>_DMA[15:8]</u>
Byte 3	DMA Channel bits[7:0] <u>_TYP[7:0]</u> . A controller-relative number uniquely identifying the controller’s logical channel assigned. Channel numbers can be shared by multiple request lines.
Byte 4	DMA Channel bits[15:8] <u>_TYP[15:8]</u>

Offset	Field Name
Byte 5	DMA Transfer Width. <u>_SIZ</u> . Bus width that the device connected to this request line supports. 0x00 8-bit 0x01 16-bit 0x02 32-bit 0x03 64-bit 0x04 128-bit 0x05 256-bit 0x06-0xFF Reserved

#### 6.4.2.8 Vendor-Defined Descriptor

##### Type 0, Small Item Name 0xE, Length = 1 to 7

The vendor defined resource data type is for vendor use.

**Table 6-221 Vendor-Defined Resource Descriptor Definition**

Offset	Field Name
Byte 0	Value = 0x71 – 0x77 (01110nnnB) – Type = 0, small item name = 0xE, Length = 1–7
Byte 1 to 7	Vendor defined

See [VendorShort](#) (page 1051) for a description of the ASL macro that creates a short vendor-defined resource descriptor.

#### 6.4.2.9 End Tag

##### Type 0, Small Item Name 0xF, Length = 1

The End tag identifies an end of resource data.

**Note:** If the checksum field is zero, the resource data is treated as if the checksum operation succeeded. Configuration proceeds normally.

**Table 6-222 End Tag Definition**

Offset	Field Name
Byte 0	Value = 0x79 (01111001B) – Type = 0, Small item name = 0xF, Length = 1
Byte 1	Checksum covering all resource data after the serial identifier. This checksum is generated such that adding it to the sum of all the data bytes will produce a zero sum.

The End Tag is automatically generated by the ASL compiler at the end of the [ResourceTemplate](#) statement.

#### 6.4.3 Large Resource Data Type

To allow for larger amounts of data to be included in the configuration data structure the large format is shown below. This includes a 16-bit length field allowing up to 64 KB of data.

**Table 6-223 Large Resource Data Type Tag Bit Definitions**

Offset	Field Name
Byte 0	Value = 1xxxxxxB – Type = 1 (Large item), Large item name = xxxxxxxxB
Byte 1	Length of data items bits[7:0]
Byte 2	Length of data items bits[15:8]
Bytes 3 to (Length + 2)	Actual data items

The following large information items are currently defined:

**Table 6-224 Large Resource Items**

Large Item Name	Value
<i>Reserved</i>	0x00
<a href="#">24-Bit Memory Range Descriptor</a>	0x01
<a href="#">Generic Register Descriptor</a>	0x02
<i>Reserved</i>	0x03
<a href="#">Vendor-Defined Descriptor</a>	0x04
<a href="#">32-Bit Memory Range Descriptor</a>	0x05
<a href="#">32-Bit Fixed Memory Range Descriptor</a>	0x06
<a href="#">Address Space Resource Descriptors</a>	0x07
<a href="#">Word Address Space Descriptor</a>	0x08
<a href="#">Extended Interrupt Descriptor</a>	0x09
<a href="#">QWord Address Space Descriptor</a>	0x0A
<a href="#">Extended Address Space Descriptor</a>	0x0B
<a href="#">GPIO Connection Descriptor</a>	0x0C
<a href="#">Pin Function Descriptor</a>	0x0D
<a href="#">GenericSerialBus Connection Descriptors</a>	0x0E
<a href="#">Pin Configuration Descriptor</a>	0x0F
<a href="#">Pin Group Descriptor</a>	0x10
<a href="#">Pin Group Function Descriptor</a>	0x11
<a href="#">Pin Group Configuration Descriptor</a>	0x12
<i>Reserved</i>	0x13 – 0x7F

### 6.4.3.1 24-Bit Memory Range Descriptor

#### Type 1, Large Item Value 0x1

The 24-bit memory range descriptor describes a device's memory range resources within a 24-bit address space

**Table 6-225 24-bit Memory Range Descriptor Definition.**

Offset	Field Name, ASL Field Name	Definition
Byte 0	24-bit Memory Range Descriptor	Value = 0x81 (10000001B) – Type = 1, Large item name = 0x01
Byte 1	Length, bits[7:0]	Value = 0x09 (9)
Byte 2	Length, bits[15:8]	Value = 0x00
Byte 3	Information	This field provides extra information about this memory. Bit [7:1] <i>Ignored</i> Bit [0] Write status, <b>_RW</b> 1 writeable (read/write) 0 non-writeable (read-only)
Byte 4	Range minimum base address, <b>_MIN</b> , bits[7:0]	Address bits [15:8] of the minimum base memory address for which the card may be configured.
Byte 5	Range minimum base address, <b>_MIN</b> , bits[15:8]	Address bits [23:16] of the minimum base memory address for which the card may be configured
Byte 6	Range maximum base address, <b>_MAX</b> , bits[7:0]	Address bits [15:8] of the maximum base memory address for which the card may be configured.
Byte 7	Range maximum base address, <b>_MAX</b> , bits[15:8]	Address bits [23:16] of the maximum base memory address for which the card may be configured
Byte 8	Base alignment, <b>_ALN</b> , bits[7:0]	This field contains the lower eight bits of the base alignment. The base alignment provides the increment for the minimum base address. (0x0000 = 64 KB)
Byte 9	Base alignment, <b>_ALN</b> , bits[15:8]	This field contains the upper eight bits of the base alignment. The base alignment provides the increment for the minimum base address. (0x0000 = 64 KB)
Byte 10	Range length, <b>_LEN</b> , bits[7:0]	This field contains the lower eight bits of the memory range length. The range length provides the length of the memory range in 256 byte blocks.
Byte 11	Range length, <b>_LEN</b> , bits[15:8]	This field contains the upper eight bits of the memory range length. The range length field provides the length of the memory range in 256 byte blocks.

**Note:** Address bits [7:0] of memory base addresses are assumed to be 0.

**Note:** A Memory range descriptor can be used to describe a fixed memory address by setting the range minimum base address and the range maximum base address to the same value.

**Note:** 24-bit Memory Range descriptors are used for legacy devices.

**Note:** Mixing of 24-bit and 32-bit memory descriptors on the same device is not allowed.

See [Section 19.6.80](#), “Memory24 (Memory Resource Descriptor Macro),” for a description of the ASL macro that creates a 24-bit Memory descriptor.

#### 6.4.3.2 Vendor-Defined Descriptor

##### Type 1, Large Item Value 0x4

The vendor defined resource data type is for vendor use.

**Table 6-226 Large Vendor-Defined Resource Descriptor Definition**

Offset	Field Name	Definition
Byte 0	Vendor Defined Descriptor	Value = 0x84 (10000100B) – Type = 1, Large item name = 0x04
Byte 1	Length, bits [7:0]	Lower eight bits of data length (UUID and vendor data)
Byte 2	Length, bits [15:8]	Upper eight bits of data length (UUID and vendor data)
Byte 3	UUID specific descriptor sub type	UUID specific descriptor sub type value
Byte 4-19	UUID	UUID Value
Byte 20- (Length+20)	Vendor Defined Data	Vendor defined data bytes

This specification (ACPI) defines the UUID specific descriptor subtype field and the UUID field to address potential collision of the use of this descriptor. It is strongly recommended that all newly defined vendor descriptors use these fields prior to Vendor Defined Data.

See [VendorLong](#) (page 1051) for a description of the ASL macro that creates a long vendor-defined resource descriptor.

#### 6.4.3.3 32-Bit Memory Range Descriptor

##### Type 1, Large Item Value 0x5

This memory range descriptor describes a device’s memory resources within a 32-bit address space.

**Table 6-227 32-Bit Memory Range Descriptor Definition**

Offset	Field Name	Definition
Byte 0	32-bit Memory Range Descriptor	Value = 0x85 (10000101B) – Type = 1, Large item name = 0x05
Byte 1	Length, bits [7:0]	Value = 0x11 (17)
Byte 2	Length, bits [15:8]	Value = 0x00

Offset	Field Name	Definition
Byte 3	Information	This field provides extra information about this memory. Bit [7:1] <i>Ignored</i> Bit [0] Write status, <b>_RW</b> 1 writeable (read/write) 0 non-writeable (read-only)
Byte 4	Range minimum base address, <b>_MIN</b> , bits [7:0]	Address bits [7:0] of the minimum base memory address for which the card may be configured.
Byte 5	Range minimum base address, <b>_MIN</b> , bits [15:8]	Address bits [15:8] of the minimum base memory address for which the card may be configured.
Byte 6	Range minimum base address, <b>_MIN</b> , bits [23:16]	Address bits [23:16] of the minimum base memory address for which the card may be configured.
Byte 7	Range minimum base address, <b>_MIN</b> , bits [31:24]	Address bits [31:24] of the minimum base memory address for which the card may be configured.
Byte 8	Range maximum base address, <b>_MAX</b> , bits [7:0]	Address bits [7:0] of the maximum base memory address for which the card may be configured.
Byte 9	Range maximum base address, <b>_MAX</b> , bits [15:8]	Address bits [15:8] of the maximum base memory address for which the card may be configured.
Byte 10	Range maximum base address, <b>_MAX</b> , bits [23:16]	Address bits [23:16] of the maximum base memory address for which the card may be configured.
Byte 11	Range maximum base address, <b>_MAX</b> , bits [31:24]	Address bits [31:24] of the maximum base memory address for which the card may be configured.
Byte 12	Base alignment, <b>_ALN</b> bits [7:0]	This field contains bits [7:0] of the base alignment. The base alignment provides the increment for the minimum base address.
Byte 13	Base alignment, <b>_ALN</b> bits [15:8]	This field contains bits [15:8] of the base alignment. The base alignment provides the increment for the minimum base address.
Byte 14	Base alignment, <b>_ALN</b> bits [23:16]	This field contains bits [23:16] of the base alignment. The base alignment provides the increment for the minimum base address.
Byte 15	Base alignment, <b>_ALN</b> bits [31:24]	This field contains bits [31:24] of the base alignment. The base alignment provides the increment for the minimum base address.
Byte 16	Range length, <b>_LEN</b> bits [7:0]	This field contains bits [7:0] of the memory range length. The range length provides the length of the memory range in 1-byte blocks.
Byte 17	Range length, <b>_LEN</b> bits [15:8]	This field contains bits [15:8] of the memory range length. The range length provides the length of the memory range in 1-byte blocks.

Offset	Field Name	Definition
Byte 18	Range length, _LEN bits [23:16]	This field contains Bits [23:16] of the memory range length. The range length provides the length of the memory range in 1-byte blocks.
Byte 19	Range length, _LEN bits [31:24]	This field contains Bits [31:24] of the memory range length. The range length provides the length of the memory range in 1-byte blocks.

**Note:** *Mixing of 24-bit and 32-bit memory descriptors on the same device is not allowed.*

See [Section 19.6.81](#), “Memory32 (Memory Resource Descriptor Macro),” for a description of the ASL macro that creates a 32-bit Memory descriptor.

#### 6.4.3.4 32-Bit Fixed Memory Range Descriptor

##### Type 1, Large Item Value 0x6

This memory range descriptor describes a device’s memory resources within a 32-bit address space.

**Table 6-228 32-bit Fixed-Location Memory Range Descriptor Definition**

Offset	Field Name	Definition
Byte 0	32-bit Fixed Memory Range Descriptor	Value = 0x86 (10000110B) – Type = 1, Large item name = 0x06
Byte 1	Length, bits [7:0]	Value = 0x09 (9)
Byte 2	Length, bits [15:8]	Value = 0x00
Byte 3	Information	This field provides extra information about this memory. Bit [7:1] <i>Ignored</i> Bit [0] Write status, <b>_RW</b> 1 writeable (read/write) 0 non-writeable (read-only))
Byte 4	Range base address, <b>_BAS</b> bits [7:0]	Address bits [7:0] of the base memory address for which the card may be configured.
Byte 5	Range base address, <b>_BAS</b> bits [15:8]	Address bits [15:8] of the base memory address for which the card may be configured.
Byte 6	Range base address, <b>_BAS</b> bits [23:16]	Address bits [23:16] of the base memory address for which the card may be configured.
Byte 7	Range base address, <b>_BAS</b> bits [31:24]	Address bits [31:24] of the base memory address for which the card may be configured.
Byte 8	Range length, <b>_LEN</b> bits [7:0]	This field contains bits [7:0] of the memory range length. The range length provides the length of the memory range in 1-byte blocks.
Byte 9	Range length, <b>_LEN</b> bits[15:8]	This field contains bits [15:8] of the memory range length. The range length provides the length of the memory range in 1-byte blocks.
Byte 10	Range length, <b>_LEN</b> bits [23:16]	This field contains bits [23:16] of the memory range length. The range length provides the length of the memory range in 1-byte blocks.
Byte 11	Range length, <b>_LEN</b> bits [31:24]	This field contains bits [31:24] of the memory range length. The range length provides the length of the memory range in 1-byte blocks.

**Note:** *Mixing of 24-bit and 32-bit memory descriptors on the same device is not allowed.*

See [Section 19.6.82](#), “Memory32Fixed (Memory Resource Descriptor),” for a description of the ASL macro that creates a 32-bit Fixed Memory descriptor.

#### 6.4.3.5 Address Space Resource Descriptors

The QWORD, DWORD, WORD, and Extended Address Space Descriptors are general-purpose structures for describing a variety of types of resources. These resources also include support for advanced server architectures (such as multiple root buses), and resource types found on some RISC processors. These descriptors can describe various kinds of resources. The following table defines the valid combination of each field and how they should be interpreted.

**Table 6-229 Valid combination of Address Space Descriptors fields**

<u>LEN</u>	<u>MIF</u>	<u>MAF</u>	<b>Definition</b>
0	0	0	Variable size, variable location resource descriptor for <u>PRS</u> . If <u>MIF</u> is set, <u>MIN</u> must be a multiple of ( <u>GRA</u> +1). If <u>MAF</u> is set, <u>MAX</u> must be (a multiple of ( <u>GRA</u> +1))-1.
0	0	1	
0	1	0	OS can pick the resource range that satisfies following conditions: If <u>MIF</u> is not set, start address is a multiple of ( <u>GRA</u> +1) and greater or equal to <u>MIN</u> . Otherwise, start address is <u>MIN</u> . If <u>MAF</u> is not set, end address is (a multiple of ( <u>GRA</u> +1))-1 and less or equal to <u>MAX</u> . Otherwise, end address is <u>MAX</u> .
0	1	1	(Invalid combination)
> 0	0	0	Fixed size, variable location resource descriptor for <u>PRS</u> . <u>LEN</u> must be a multiple of ( <u>GRA</u> +1). OS can pick the resource range that satisfies following conditions: Start address is a multiple of ( <u>GRA</u> +1) and greater or equal to <u>MIN</u> . End address is (start address+ <u>LEN</u> -1) and less or equal to <u>MAX</u> .
> 0	0	1	(Invalid combination)
> 0	1	0	(Invalid combination)
> 0	1	1	Fixed size, fixed location resource descriptor. <u>GRA</u> must be 0 and <u>LEN</u> must be ( <u>MAX</u> - <u>MIN</u> +1).

#### 6.4.3.5.1 QWord Address Space Descriptor

##### Type 1, Large Item Value 0xA

The QWORD address space descriptor is used to report resource usage in a 64-bit address space (like memory and I/O).

**Table 6-230 QWORD Address Space Descriptor Definition**

Offset	Field Name	Definition
Byte 0	QWORD Address Space Descriptor	Value = 0x8A (10001010B) – Type = 1, Large item name = 0x0A
Byte 1	Length, bits[7:0]	Variable length, minimum value = 0x2B (43)
Byte 2	Length, bits[15:8]	Variable length, minimum value = 0x00
Byte 3	Resource Type	Indicates which type of resource this descriptor describes. Defined values are: 0 Memory range 1 I/O range 2 Bus number range 3–191 Reserved 192–255 Hardware Vendor Defined

Offset	Field Name	Definition
Byte 4	General Flags	<p>Flags that are common to all resource types:</p> <p>Bits [7:4] <i>Reserved</i> (must be 0)</p> <p>Bit [3] Max Address Fixed, <b>_MAF</b>:</p> <ul style="list-style-type: none"> <li>1 The specified maximum address is fixed</li> <li>0 The specified maximum address is not fixed and can be changed</li> </ul> <p>Bit [2] Min Address Fixed, <b>_MIF</b>:</p> <ul style="list-style-type: none"> <li>1 The specified minimum address is fixed</li> <li>0 The specified minimum address is not fixed and can be changed</li> </ul> <p>Bit [1] Decode Type, <b>_DEC</b>:</p> <ul style="list-style-type: none"> <li>1 This bridge subtractively decodes this address (top level bridges only)</li> <li>0 This bridge positively decodes this address</li> </ul> <p>Bit [0] Ignored</p>
Byte 5	Type Specific Flags	Flags that are specific to each resource type. The meaning of the flags in this field depends on the value of the Resource Type field (see above).
Byte 6	Address space granularity, <b>_GRA</b> bits[7:0]	A set bit in this mask means that this bit is decoded. All bits less significant than the most significant set bit must be set. That is, the value of the full Address Space Granularity field (all 64 bits) must be a number ( $2^n - 1$ ).
Byte 7	Address space granularity, <b>_GRA</b> bits[15:8]	
Byte 8	Address space granularity, <b>_GRA</b> bits[23:16]	
Byte 9	Address space granularity, <b>_GRA</b> bits[31:24]	
Byte 10	Address space granularity, <b>_GRA</b> bits[39:32]	
Byte 11	Address space granularity, <b>_GRA</b> bits[47:40]	
Byte 12	Address space granularity, <b>_GRA</b> bits[55:48]	
Byte 13	Address space granularity, <b>_GRA</b> bits[63:56]	
Byte 14	Address range minimum, <b>_MIN</b> bits[7:0]	For bridges that translate addresses, this is the address space on the secondary side of the bridge.

Offset	Field Name	Definition
Byte 15	Address range minimum, <b>_MIN</b> bits[15:8]	
Byte 16	Address range minimum, <b>_MIN</b> bits[23:16]	
Byte 17	Address range minimum, <b>_MIN</b> bits[31:24]	
Byte 18	Address range minimum, <b>_MIN</b> bits[39:32]	
Byte 19	Address range minimum, <b>_MIN</b> bits[47:40]	
Byte 20	Address range minimum, <b>_MIN</b> bits[55:48]	
Byte 21	Address range minimum, <b>_MIN</b> bits[63:56]	
Byte 22	Address range maximum, <b>_MAX</b> bits[7:0]	For bridges that translate addresses, this is the address space on the secondary side of the bridge.
Byte 23	Address range maximum, <b>_MAX</b> bits[15:8]	
Byte 24	Address range maximum, <b>_MAX</b> bits[23:16]	
Byte 25	Address range maximum, <b>_MAX</b> bits[31:24]	
Byte 26	Address range maximum, <b>_MAX</b> bits[39:32]	For bridges that translate addresses, this is the address space on the secondary side of the bridge.
Byte 27	Address range maximum, <b>_MAX</b> bits[47:40]	
Byte 28	Address range maximum, <b>_MAX</b> bits[55:48]	
Byte 29	Address range maximum, <b>_MAX</b> bits[63:56]	
Byte 30	Address Translation offset, <b>_TRA</b> bits[7:0]	For bridges that translate addresses across the bridge, this is the offset that must be added to the address on the secondary side to obtain the address on the primary side. Non-bridge devices must list 0 for all Address Translation offset bits.
Byte 31	Address Translation offset, <b>_TRA</b> bits[15:8]	
Byte 32	Address Translation offset, <b>_TRA</b> bits[23:16]	

Offset	Field Name	Definition
Byte 33	Address Translation offset, _TRA bits[31:24]	
Byte 34	Address Translation offset, _TRA bits[39:32]	
Byte 35	Address Translation offset, _TRA bits[47:40]	
Byte 36	Address Translation offset, _TRA bits[55:48]	
Byte 37	Address Translation offset, _TRA bits[63:56]	
Byte 38	Address length, _LEN bits[7:0]	
Byte 39	Address length, _LEN, bits[15:8]	
Byte 40	Address length, _LEN bits[23:16]	
Byte 41	Address length, _LEN bits[31:24]	
Byte 42	Address length, _LEN bits[39:32]	
Byte 43	Address length, _LEN bits[47:40]	
Byte 44	Address length, _LEN bits[55:48]	
Byte 45	Address length, _LEN bits[63:56]	
Byte 46	Resource Source Index	<b>Reserved.</b> If the platform specifies “Interrupt ResourceSource support” in bit 13 of Platform-Wide _OSC Capabilities DWORD 2 ( <a href="#">Table 6-200</a> ), then this field must be zero.
String	Resource Source	(Optional) If present, the device that uses this descriptor consumes its resources from the resources produced by the named device object. If not present, the device consumes its resources out of a global pool.

See QWordIO (page 1025), QWordMemory (page 1027) and ASL\_QWordAddressSpace for a description of the ASL macros that creates a QWORD Address Space descriptor.

#### 6.4.3.5.2 DWord Address Space Descriptor

##### Type 1, Large Item Value 0x7

The DWORD address space descriptor is used to report resource usage in a 32-bit address space (like memory and I/O).

**Table 6-231 DWORD Address Space Descriptor Definition**

Offset	Field Name	Definition
Byte 0	DWORD Address Space Descriptor	Value = 0x87 (10000111B) – Type = 1, Large item name = 0x07
Byte 1	Length, bits [7:0]	Variable: Value = 23 (minimum)
Byte 2	Length, bits [15:8]	Variable: Value = 0 (minimum)
Byte 3	Resource Type	Indicates which type of resource this descriptor describes. Defined values are: 0 Memory range 1 I/O range 2 Bus number range 3–191 Reserved 192–255 Hardware Vendor Defined
Byte 4	General Flags	Flags that are common to all resource types: Bits [7:4] Reserved (must be 0) Bit [3] Max Address Fixed, <b>_MAF</b> : 1 The specified maximum address is fixed 0 The specified maximum address is not fixed and can be changed Bit [2] Min Address Fixed, <b>_MIF</b> : 1 The specified minimum address is fixed 0 The specified minimum address is not fixed and can be changed Bit [1] Decode Type, <b>_DEC</b> : 1 This bridge subtractively decodes this address (top level bridges only) 0 This bridge positively decodes this address Bit [0] Ignored
Byte 5	Type Specific Flags	Flags that are specific to each resource type. The meaning of the flags in this field depends on the value of the Resource Type field (see above).
Byte 6	Address space granularity, <b>_GRA</b> bits[7:0]	A set bit in this mask means that this bit is decoded. All bits less significant than the most significant set bit must be set. (in other words, the value of the full Address Space Granularity field (all 32 bits) must be a number ( $2^n - 1$ ).
Byte 7	Address space granularity, <b>_GRA</b> bits[15:8]	
Byte 8	Address space granularity, <b>_GRA</b> bits [23:16]	
Byte 9	Address space granularity, <b>_GRA</b> bits [31:24]	

Offset	Field Name	Definition
Byte 10	Address range minimum, <b>_MIN</b> bits [7:0]	For bridges that translate addresses, this is the address space on the secondary side of the bridge.
Byte 11	Address range minimum, <b>_MIN</b> bits [15:8]	
Byte 12	Address range minimum, <b>_MIN</b> bits [23:16]	
Byte 13	Address range minimum, <b>_MIN</b> bits [31:24]	
Byte 14	Address range maximum, <b>_MAX</b> bits [7:0]	For bridges that translate addresses, this is the address space on the secondary side of the bridge.
Byte 15	Address range maximum, <b>_MAX</b> bits [15:8]	
Byte 16	Address range maximum, <b>_MAX</b> bits [23:16]	
Byte 17	Address range maximum, <b>_MAX</b> bits [31:24]	
Byte 18	Address Translation offset, <b>_TRA</b> bits [7:0]	For bridges that translate addresses across the bridge, this is the offset that must be added to the address on the secondary side to obtain the address on the primary side. Non-bridge devices must list 0 for all Address Translation offset bits.
Byte 19	Address Translation offset, <b>_TRA</b> bits [15:8]	
Byte 20	Address Translation offset, <b>_TRA</b> bits [23:16]	
Byte 21	Address Translation offset, <b>_TRA</b> bits [31:24]	
Byte 22	Address Length, <b>_LEN</b> , bits [7:0]	
Byte 23	Address Length, <b>_LEN</b> , bits [15:8]	
Byte 24	Address Length, <b>_LEN</b> , bits [23:16]	
Byte 25	Address Length, <b>_LEN</b> , bits [31:24]	
Byte 26	Resource Source Index	(Optional) Only present if Resource Source (below) is present. This field gives an index to the specific resource descriptor that this device consumes from in the current resource template for the device object pointed to in Resource Source.

Offset	Field Name	Definition
String	Resource Source	(Optional) If present, the device that uses this descriptor consumes its resources from the resources produced by the named device object. If not present, the device consumes its resources out of a global pool. If not present, the device consumes this resource from its hierarchical parent.

See DWordIO (page 959), DWordMemory (page 961) and ASL\_DWordAddressSpace for a description of the ASL macro that creates a DWORD Address Space descriptor

#### 6.4.3.5.3 Word Address Space Descriptor

##### Type 1, Large Item Value 0x8

The WORD address space descriptor is used to report resource usage in a 16-bit address space (like memory and I/O).

**Note:** This descriptor is exactly the same as the DWORD descriptor specified in [Table 6-217](#); the only difference is that the address fields are 16 bits wide rather than 32 bits wide.

**Table 6-232 WORD Address Space Descriptor Definition**

Offset	Field Name	Definition
Byte 0	WORD Address Space Descriptor	Value = 0x88 (10001000B) – Type = 1, Large item name = 0x08
Byte 1	Length, bits [7:0]	Variable length, minimum value = 0x0D (13)
Byte 2	Length, bits [15:8]	Variable length, minimum value = 0x00
Byte 3	Resource Type	Indicates which type of resource this descriptor describes. Defined values are: 0 Memory range 1 I/O range 2 Bus number range 3–191 Reserved 192–255 Hardware Vendor Defined

Offset	Field Name	Definition
Byte 4	General Flags	<p>Flags that are common to all resource types:</p> <p>Bits [7:4] <i>Reserved</i> (must be 0)</p> <p>Bit [3] Max Address Fixed, <i>_MAF</i>:</p> <ul style="list-style-type: none"> <li>1 The specified maximum address is fixed</li> <li>0 The specified maximum address is not fixed and can be changed</li> </ul> <p>Bit [2] Min Address Fixed, <i>_MIF</i>:</p> <ul style="list-style-type: none"> <li>1 The specified minimum address is fixed</li> <li>0 The specified minimum address is not fixed and can be changed</li> </ul> <p>Bit [1] Decode Type, <i>_DEC</i>:</p> <ul style="list-style-type: none"> <li>1 This bridge subtractively decodes this address (top level bridges only)</li> <li>0 This bridge positively decodes this address</li> </ul> <p>Bit [0] Ignored</p>
Byte 5	Type Specific Flags	Flags that are specific to each resource type. The meaning of the flags in this field depends on the value of the Resource Type field (see above).
Byte 6	Address space granularity, <i>_GRA</i> bits[7:0]	A set bit in this mask means that this bit is decoded. All bits less significant than the most significant set bit must be set. (In other words, the value of the full Address Space Granularity field (all 16 bits) must be a number ( $2^n - 1$ ).
Byte 7	Address space granularity, <i>_GRA</i> bits[15:8]	
Byte 8	Address range minimum, <i>_MIN</i> , bits [7:0]	For bridges that translate addresses, this is the address space on the secondary side of the bridge.
Byte 9	Address range minimum, <i>_MIN</i> , bits [15:8]	
Byte 10	Address range maximum, <i>_MAX</i> , bits [7:0]	For bridges that translate addresses, this is the address space on the secondary side of the bridge.
Byte 11	Address range maximum, <i>_MAX</i> , bits [15:8]	
Byte 12	Address Translation offset, <i>_TRA</i> , bits [7:0]	For bridges that translate addresses across the bridge, this is the offset that must be added to the address on the secondary side to obtain the address on the primary side. Non-bridge devices must list 0 for all Address Translation offset bits.
Byte 13	Address Translation offset, <i>_TRA</i> , bits [15:8]	

Offset	Field Name	Definition
Byte 14	Address Length, <u>_LEN</u> , bits [7:0]	
Byte 15	Address Length, <u>_LEN</u> , bits [15:8]	
Byte 16	Resource Source Index	(Optional) Only present if Resource Source (below) is present. This field gives an index to the specific resource descriptor that this device consumes from in the current resource template for the device object pointed to in Resource Source.
String	Resource Source	(Optional) If present, the device that uses this descriptor consumes its resources from the resources produced by the named device object. If not present, the device consumes its resources out of a global pool. If not present, the device consumes this resource from its hierarchical parent.

See WordIO (page 1053), WordBusNumber (page 1052) and ASL\_WordAddressSpace for a description of the ASL macros that create a Word address descriptor.

#### 6.4.3.5.4 Extended Address Space Descriptor

##### Type 1, Large Item Value 0xB

The Extended Address Space descriptor is used to report resource usage in the address space (like memory and I/O).

**Table 6-233 Extended Address Space Descriptor Definition**

Offset	Field Name	Definition
Byte 0	Extended Address Space Descriptor	Value = 0x8B (10001011B) – Type = 1, Large item name = 0x0B
Byte 1	Length, bits[7:0]	Value = 0x35 (53)
Byte 2	Length, bits[15:8]	Value = 0x00
Byte 3	Resource Type	Indicates which type of resource this descriptor describes. Defined values are: 0 Memory range 1 I/O range 2 Bus number range 3-191 Reserved 192-255 Hardware Vendor Defined

Offset	Field Name	Definition
Byte 4	General Flags	<p>Flags that are common to all resource types:</p> <p>Bits [7:4] <i>Reserved</i> (must be 0)</p> <p>Bit [3] Max Address Fixed, <i>_MAF</i>:</p> <ul style="list-style-type: none"> <li>1 The specified maximum address is fixed</li> <li>0 The specified maximum address is not fixed and can be changed</li> </ul> <p>Bit [2] Min Address Fixed, <i>_MIF</i>:</p> <ul style="list-style-type: none"> <li>1 The specified minimum address is fixed</li> <li>0 The specified minimum address is not fixed and can be changed</li> </ul> <p>Bit [1] Decode Type, <i>_DEC</i>:</p> <ul style="list-style-type: none"> <li>1 This bridge subtractively decodes this address (top level bridges only)</li> <li>0 This bridge positively decodes this address</li> </ul> <p>Bit [0] Consumer/Producer:</p> <ul style="list-style-type: none"> <li>1—This device consumes this resource</li> <li>0—This device produces and consumes this resource</li> </ul>
Byte 5	Type Specific Flags	Flags that are specific to each resource type. The meaning of the flags in this field depends on the value of the Resource Type field (see above). For the Memory Resource Type, the definition is defined in <a href="#">Section 6.4.3.5.5</a> . For other Resource Types, refer to the existing definitions for the Address Space Descriptors.
Byte 6	Revision ID	Indicates the revision of the Extended Address Space descriptor. For ACPI 3.0, this value is 1.
Byte 7	<i>Reserved</i>	0
Byte 8	Address space granularity, <i>_GRA</i> bits[7:0]	A set bit in this mask means that this bit is decoded. All bits less significant than the most significant set bit must be set. That is, the value of the full Address Space Granularity field (all 64 bits) must be a number ( $2^n - 1$ ).
Byte 9	Address space granularity, <i>_GRA</i> bits[15:8]	
Byte 10	Address space granularity, <i>_GRA</i> bits[23:16]	
Byte 11	Address space granularity, <i>_GRA</i> bits[31:24]	
Byte 12	Address space granularity, <i>_GRA</i> bits[39:32]	
Byte 13	Address space granularity, <i>_GRA</i> bits[47:40]	

Offset	Field Name	Definition
Byte 14	Address space granularity, <b>_GRA</b> bits[55:48]	
Byte 15	Address space granularity, <b>_GRA</b> bits[63:56]	
Byte 16	Address range minimum, <b>_MIN</b> bits[7:0]	For bridges that translate addresses, this is the address space on the secondary side of the bridge.
Byte 17	Address range minimum, <b>_MIN</b> bits[15:8]	
Byte 18	Address range minimum, <b>_MIN</b> bits[23:16]	
Byte 19	Address range minimum, <b>_MIN</b> bits[31:24]	
Byte 20	Address range minimum, <b>_MIN</b> bits[39:32]	
Byte 21	Address range minimum, <b>_MIN</b> bits[47:40]	
Byte 22	Address range minimum, <b>_MIN</b> bits[55:48]	
Byte 23	Address range minimum, <b>_MIN</b> bits[63:56]	
Byte 24	Address range maximum, <b>_MAX</b> bits[7:0]	For bridges that translate addresses, this is the address space on the secondary side of the bridge.
Byte 25	Address range maximum, <b>_MAX</b> bits[15:8]	
Byte 26	Address range maximum, <b>_MAX</b> bits[23:16]	
Byte 27	Address range maximum, <b>_MAX</b> bits[31:24]	
Byte 28	Address range maximum, <b>_MAX</b> bits[39:32]	For bridges that translate addresses, this is the address space on the secondary side of the bridge.
Byte 29	Address range maximum, <b>_MAX</b> bits[47:40]	
Byte 30	Address range maximum, <b>_MAX</b> bits[55:48]	
Byte 31	Address range maximum, <b>_MAX</b> bits[63:56]	
Byte 32	Address Translation offset, <b>_TRA</b> bits[7:0]	For bridges that translate addresses across the bridge, this is the offset that must be added to the address on the secondary side to obtain the address on the primary side. Non-bridge devices must list 0 for all Address Translation offset bits.

Offset	Field Name	Definition
Byte 33	Address Translation offset, <b>_TRA</b> bits[15:8]	
Byte 34	Address Translation offset, <b>_TRA</b> bits[23:16]	
Byte 35	Address Translation offset, <b>_TRA</b> bits[31:24]	
Byte 36	Address Translation offset, <b>_TRA</b> bits[39:32]	
Byte 37	Address Translation offset, <b>_TRA</b> bits[47:40]	
Byte 38	Address Translation offset, <b>_TRA</b> bits[55:48]	
Byte 39	Address Translation offset, <b>_TRA</b> bits[63:56]	
Byte 40	Address length, <b>_LEN</b> bits[7:0]	
Byte 41	Address length, <b>_LEN</b> , bits[15:8]	
Byte 42	Address length, <b>_LEN</b> bits[23:16]	
Byte 43	Address length, <b>_LEN</b> bits[31:24]	
Byte 44	Address length, <b>_LEN</b> bits[39:32]	
Byte 45	Address length, <b>_LEN</b> bits[47:40]	
Byte 46	Address length, <b>_LEN</b> bits[55:48]	
Byte 47	Address length, <b>_LEN</b> bits[63:56]	
Byte 48	Type Specific Attribute, <b>_ATT</b> bits[7:0]	Attributes that are specific to each resource type. The meaning of the attributes in this field depends on the value of the Resource Type field (see above). For the Memory Resource Type, the definition is defined <a href="#">Section 6.4.3.5.4.1</a> . For other Resource Types, this field is reserved to 0.
Byte 49	Type Specific Attribute, <b>_ATT</b> bits[15:8]	
Byte 50	Type Specific Attribute, <b>_ATT</b> bits[23:16]	
Byte 51	Type Specific Attribute, <b>_ATT</b> bits[31:24]	
Byte 52	Type Specific Attribute, <b>_ATT</b> bits[39:32]	
Byte 53	Type Specific Attribute, <b>_ATT</b> bits[47:40]	
Byte 54	Type Specific Attribute, <b>_ATT</b> bits[55:48]	

Offset	Field Name	Definition
Byte 55	Type Specific Attribute, <b>_ATT</b> bits[63:56]	

See [Section 19.6.43](#), “ExtendedSpace (Extended Address Space Resource Descriptor Macro),” for a description of the ASL macro that creates an Extended Address Space descriptor.

#### 6.4.3.5.4.1 Type Specific Attributes

The meaning of the Type Specific Attributes field of the Extended Address Space Descriptor depends on the value of the Resource Type field in the descriptor. When Resource Type = 0 (memory resource), the Type Specific Attributes field values are defined per Memory Attribute Definitions in the *UEFI Specification* under section titled [GetMemoryMap\(\)](#).

#### 6.4.3.5.5 Resource Type Specific Flags

The meaning of the flags in the Type Specific Flags field of the Address Space Descriptors depends on the value of the Resource Type field in the descriptor. The flags for each resource type are defined in the following tables:

**Table 6-234 Memory Resource Flag (Resource Type = 0) Definitions**

Bits	Meaning
Bits [7:6]	Reserved (must be 0)
Bit [5]	Memory to I/O Translation, <b>_TTP</b> 1 TypeTranslation: This resource, which is memory on the secondary side of the bridge, is I/O on the primary side of the bridge. 0 TypeStatic: This resource, which is memory on the secondary side of the bridge, is also memory on the primary side of the bridge.
Bits [4:3]	Memory attributes, <b>_MTP</b> . These bits are only defined if this memory resource describes system RAM. For a definition of the labels described here, see <a href="#">Section 15</a> , “System Address Map Interfaces.” 0 AddressRangeMemory 1 AddressRangeReserved 2 AddressRangeACPI 3 AddressRangeNVS
Bits [2:1]	Memory attributes, <b>_MEM</b> 0 The memory is non-cacheable. 1 The memory is cacheable. 2 The memory is cacheable and supports write combining. 3 The memory is cacheable and prefetchable.  (Notice: OSPM ignores this field in the Extended address space descriptor. Instead it uses the Type Specific Attributes field to determine memory attributes)

Bits	Meaning
Bit [0]	Write status, <b>_RW</b> 1 This memory range is read-write. 0 This memory range is read-only.

**Table 6-235 I/O Resource Flag (Resource Type = 1) Definitions**

Bits	Meaning
Bits [7:6]	<i>Reserved</i> (must be 0)
Bit [5]	Sparse Translation, <b>_TRS</b> . This bit is only meaningful if Bit [4] is set. 1 SparseTranslation: The primary-side memory address of any specific I/O port within the secondary-side range can be found using the following function. <code>address = (((port &amp; 0xFFFc) &lt;&lt; 10)    (port &amp; 0FFF)) + _TRA</code> In the address used to access the I/O port, bits[11:2] must be identical to bits[21:12], this gives four bytes of I/O ports on each 4 KB page. 0 DenseTranslation: The primary-side memory address of any specific I/O port within the secondary-side range can be found using the following function. <code>address = port + _TRA</code>
Bit [4]	I/O to Memory Translation, <b>_TTP</b> 1 TypeTranslation: This resource, which is I/O on the secondary side of the bridge, is memory on the primary side of the bridge. 0 TypeStatic: This resource, which is I/O on the secondary side of the bridge, is also I/O on the primary side of the bridge.
Bit [3:2]	<i>Reserved</i> (must be 0)
Bit [1:0]	<b>_RNG</b> 3 Memory window covers the entire range 2 ISARangesOnly. This flag is for bridges on systems with multiple bridges. Setting this bit means the memory window specified in this descriptor is limited to the ISA I/O addresses that fall within the specified window. The ISA I/O ranges are: n000-nOFF, n400-n4FF, n800-n8FF, nC00-nCFF. This bit can only be set for bridges entirely configured through ACPI namespace. 1 NonISARangesOnly. This flag is for bridges on systems with multiple bridges. Setting this bit means the memory window specified in this descriptor is limited to the non-ISA I/O addresses that fall within the specified window. The non-ISA I/O ranges are: n100-n3FF, n500-n7FF, n900-nBFF, nD00-nFFF. This bit can only be set for bridges entirely configured through ACPI namespace. 0 <i>Reserved</i>

**Table 6-236 Bus Number Range Resource Flag (Resource Type = 2) Definitions**

Bits	Meaning
Bit [7:0]	<i>Reserved</i> (must be 0)

### 6.4.3.6 Extended Interrupt Descriptor

#### Type 1, Large Item Value 0x9

The Extended Interrupt Descriptor is necessary to describe interrupt settings and possibilities for systems that support interrupts above 15.

To specify multiple interrupt numbers, this descriptor allows vendors to list an array of possible interrupt numbers, any one of which can be used.

**Table 6-237 Extended Interrupt Descriptor Definition**

Offset	Field Name	Definition
Byte 0	Extended Interrupt Descriptor	Value = 0x89 (10001001B) – Type = 1, Large item name = 0x09
Byte 1	Length, bits [7:0]	Variable length, minimum value = 0x06
Byte 2	Length, bits [15:8]	Variable length, minimum value = 0x00
Byte 3	Interrupt Vector Flags	<p>Interrupt Vector Information.</p> <p>Bit [7:5] <i>Reserved</i> (must be 0)</p> <p>Bit [4] Wake Capability, <b>_WKC</b></p> <ul style="list-style-type: none"> <li>0x0 = Not Wake Capable: This interrupt is not capable of waking the system.</li> <li>0x1 = Wake Capable: This interrupt is capable of waking the system from a low-power idle state or a system sleep state.</li> </ul> <p>Bit [3] Interrupt Sharing, <b>_SHR</b></p> <ul style="list-style-type: none"> <li>0x0 = Exclusive: This interrupt is not shared with other devices.</li> <li>0x1 = Shared: This interrupt is shared with other devices.</li> </ul> <p>Bit [2] Interrupt Polarity, <b>_LL</b></p> <ul style="list-style-type: none"> <li>0 Active-High: This interrupt is sampled when the signal is high, or true.</li> <li>1 Active-Low: This interrupt is sampled when the signal is low, or false.</li> </ul> <p>Bit [1] Interrupt Mode, <b>_HE</b></p> <ul style="list-style-type: none"> <li>0 Level-Triggered: Interrupt is triggered in response to the signal being in either a high or low state.</li> <li>1 Edge-Triggered: This interrupt is triggered in response to a change in signal state, either high to low or low to high.</li> </ul> <p>Bit [0] Consumer/Producer:</p> <ul style="list-style-type: none"> <li>1 This device consumes this resource</li> <li>0 This device produces this resource</li> </ul>
Byte 4	Interrupt table length	Indicates the number of interrupt numbers that follow. When this descriptor is returned from <b>_CRS</b> , or when OSPM passes this descriptor to <b>_SRS</b> , this field must be set to 1.

Offset	Field Name	Definition
Byte $4n+5$	Interrupt Number, _INT bits [7:0]	Interrupt number
Byte $4n+6$	Interrupt Number, _INT bits [15:8]	
Byte $4n+7$	Interrupt Number, _INT bits [23:16]	
Byte $4n+8$	Interrupt Number, _INT bits [31:24]	
...	...	Additional interrupt numbers
Byte x	Resource Source Index	<b>Reserved.</b> If the platform specifies “Interrupt ResourceSource support” in bit 13 of Platform-Wide _OSC Capabilities DWORD 2 ( <a href="#">Table 6-200</a> ), then this field must be zero.
String	Resource Source	(Optional) If present, the device that uses this descriptor consumes its resources from the resources produced by the named device object. If not present, the device consumes its resources out of a global pool.

**Note:** Low true, level sensitive interrupts may be electrically shared, the process of how this might work is beyond the scope of this specification.

If the OS is running using the 8259 interrupt model, only interrupt number values of 0-15 will be used, and interrupt numbers greater than 15 will be ignored.

See Interrupt (page 987) for a description of the ASL macro that creates an Extended Interrupt descriptor.

#### 6.4.3.7 Generic Register Descriptor

##### Type 1, Large Item Value 0x2

The generic register descriptor describes the location of a fixed width register within any of the ACPI-defined address spaces. See [Table 6-238](#) for details.

**Table 6-238 Generic Register Descriptor Definition**

Offset	Field Name, ASL Field Name	Definition
Byte 0	Generic Register Descriptor	Value = 0x82 (10000010B) Type = 1, Large item name = 0x02
Byte 1	Length, bits[7:0]	Value = 0x0C (12)
Byte 2	Length, bits[15:8]	Value = 0x00
Byte 3	Address Space ID, <u>_ASI</u>	The address space where the data structure or register exists. Defined values are: 0x00 System Memory 0x01 System I/O 0x02 PCI Configuration Space 0x03 Embedded Controller 0x04 SMBus 0x05 SystemCMOS 0x06 PciBarTarget 0x07 IPMI 0x08 GeneralPurposeIO 0x09 GenericSerialBus 0x0A PCC 0x7F Functional Fixed Hardware
Byte 4	Register Bit Width, <u>_RBW</u>	Indicates the register width in bits.
Byte 5	Register Bit Offset, <u>_RBO</u>	Indicates the offset to the start of the register in bits from the Register Address.
Byte 6	Access Size, <u>_ASZ</u>	Specifies access size. 0 - Undefined (legacy reasons) 1 - Byte access 2 - Word access 3 - Dword access 4 - QWord access
Byte 7	Register Address, <u>_ADR</u> bits[7:0]	Register Address
Byte 8	Register Address, <u>_ADR</u> bits[15:8]	
Byte 9	Register Address, <u>_ADR</u> bits[23:16]	
Byte 10	Register Address, <u>_ADR</u> bits[31:24]	
Byte 11	Register Address, <u>_ADR</u> bits[39:32]	
Byte 12	Register Address, <u>_ADR</u> bits[47:40]	
Byte 13	Register Address, <u>_ADR</u> bits[55:48]	
Byte 14	Register Address, <u>_ADR</u> bits[63:56]	

See [Section 19.6.115](#) for a description of the Generic Register Resource Descriptor Macro.

#### 6.4.3.8 Connection Descriptors

General-purpose I/O (GPIO) and Simple Peripheral Bus (SPB) controllers are hardware resources provided in silicon solutions to enable flexible configuration of a broad range of system designs. These controllers can provide input, output, interrupt and serial communication connections to arbitrary devices in a system. The function to which one of these connections is put depends on the specific device involved and the needs of the platform design. In order to support mobile platform architectures, ACPI abstracts these connections as resources.

##### 6.4.3.8.1 GPIO Connection Descriptor

###### Type 1, Large Item Name 0xC

The GPIO Connection Descriptor describes connections between GPIO controllers and peripheral devices. Two types of GPIO connections can be described: IO connections and Interrupt connections, distinguished by the GPIO Connection Type value in the descriptor. GPIO controllers and the devices that connect to them may be located anywhere in the namespace, but the connection must be described in the peripheral device's resource objects (PRS, \_CRS, etc.).

**Table 6-239 GPIO Connection Descriptor Definition**

Offset	Field Name	Definition
Byte 0	GPIO Connection Descriptor	Value = 0x8C, (10001100B) – Type = 1, Large item name = 0xC
Byte 1	Length, bits[7:0]	Variable length, minimum value = 0x16 + L (22 + length of the Resource Source Name string)
Byte 2	Length, bits[15:8]	Variable length, minimum value = 0x00
Byte 3	Revision ID	Indicates the revision for the GPIO interrupt descriptor. This value must be 1.
Byte 4	GPIO Connection Type	Indicates the type of the descriptor: 0x00 = Interrupt Connection 0x01 = IO Connection 0x02 - 0xFF Reserved
Byte 5	General Flags, bits [7:0]	Flags. Bit [7:1] Reserved (must be 0) Bit [0] Consumer/Producer: 0x0 = This device produces and consumes this resource 0x1 = This device consumes this resource
Byte 6	General Flags, bits [15:8]	Bit [15:8] Reserved (must be 0).

Offset	Field Name	Definition
Byte 7	Interrupt and IO Flags, bits [7:0]	<p>For Interrupt Connections:</p> <p>Bit [7:5] Reserved (must be 0)</p> <p>Bit [4] Wake Capability, <b>_WKC</b> 0x0 = Not Wake Capable: This interrupt is not capable of waking the system. 0x1 = Wake Capable: This interrupt is capable of waking the system from a low-power idle state or a system sleep state.</p> <p>Bit [3] Interrupt Sharing, <b>_SHR</b> 0x0 = Exclusive: This interrupt is not shared with other devices. 0x1 = Shared: This interrupt is shared with other devices.</p> <p>Bit [2:1] Interrupt Polarity, <b>_POL</b> 0x0 = Active-High: This interrupt is sampled when the signal is high, or true. 0x1 = Active-Low: This interrupt is sampled when the signal is low, or false. 0x2 = Active-Both: This interrupt is sampled on both rising and falling edges. Interrupt mode must be set to Edge-triggered. 0x3 – Reserved (do not use)</p> <p>Bit [0] Interrupt Mode, <b>_MOD</b> 0x0 = Level-Triggered: Interrupt is triggered in response to the signal being in either a high or low state. 0x1 = Edge-Triggered: This interrupt is triggered in response to a change in signal state, either high to low or low to high.</p> <p>For IO Connections:</p> <p>Bit [7:4] Reserved (must be 0)</p> <p>Bit [3] IO Sharing, <b>_SHR</b> 0x0 = Exclusive: This IO connection is used exclusively by one device. 0x1 = Shared: This IO connection is shared by two or more devices.</p> <p>Bit [2] Reserved (must be 0)</p> <p>Bit [1:0] IO Restriction <b>_IOR</b> 0x0 = This pin or pins can be used for either Input or Output. 0x1 = This pin or pins can only be used for Input, and the pin configuration must be preserved while not in use. 0x2 = This pin or pins can only be used for Output, and the pin configuration must be preserved while not in use. 0x3 = This pin or pins can be used for either input or output, but the configuration must be preserved until explicitly changed.</p>
Byte 8	Interrupt and IO Flags, bits [15:8]	Bit [15:8] Reserved (must be 0)

Offset	Field Name	Definition
Byte 9	Pin Configuration	<p><b>_PPI</b></p> <p>0x00 = Default Configuration (no configuration is applied)      0x01 = Pull-up      0x02 = Pull-down      0x03 = No Pull      0x04 – 0x7F ; Reserved (do not use)      0x80 – 0xFF ; Vendor-defined values</p>
Byte 10	Output Drive Strength, bits [7:0]	The output-drive capability, in hundredths of milliamperes, to be applied when configuring the pin for output (high byte). <b>_DRS[7:0]</b>
Byte 11	Output Drive Strength, bits [15:8]	The output-drive capability, in hundredths of milliamperes, to be applied when configuring the pin for output (high byte). <b>_DRS[15:8]</b>
Byte 12	Debounce timeout, bits [7:0]	The debounce timeout, in hundredths of milliseconds, to be applied when configuring the pin for interrupt (low byte). <b>_DBT[7:0]</b>
Byte 13	Debounce timeout, bits [15:8]	The debounce timeout, in hundredths of milliseconds, to be applied when configuring the pin for interrupt (high byte). <b>_DBT[15:8]</b>
Byte 14	Pin Table Offset[7:0]	Offset to the start of the pin table (low byte). The offset is relative to the start of this descriptor.  NOTE: The number of pins in the table can be calculated from PinCount = (Resource Source Name Offset – Pin Table Offset) / 2
Byte 15	Pin Table Offset[15:8]	Offset to the start of the pin table (high byte). The offset is relative to the start of this descriptor.
Byte 16	Resource Source Index	Reserved for future use. This field must be 0.
Byte 17	Resource Source Name Offset[7:0]	Offset to the start of the resource source name (low byte). The offset is relative to the start of this descriptor.  NOTE: The length of the ResourceSource name string can be calculated from Length L = Vendor Data Offset – Resource Source Name Offset. The length includes the string's terminating NULL character (if present)
Byte 18	Resource Source Name Offset[15:8]	Offset to the start of the resource source name (high byte). The offset is relative to the start of this descriptor.
Byte 19	Vendor Data Offset[7:0]	(low byte) Offset to the start of the Vendor-defined Data (the last byte of the ResourceSource + 1). This value must always be valid to allow for length calculations. In the case where there is no Vendor Data, this offset still must refer to the last byte of the ResourceSource + 1.  The offset is relative to the start of this descriptor.

Offset	Field Name	Definition
Byte 20	Vendor Data Offset[15:8]	(high byte) Offset to the start of the Vendor-defined Data .(the last byte of the ResourceSource + 1). This value must always be valid to allow for length calculations. In the case where there is no Vendor Data, this offset still must refer to the last byte of the ResourceSource + 1. The offset is relative to the start of this descriptor.
Byte 21	Vendor Data Length [7:0]	Length of Vendor-defined Data (low-byte).
Byte 22	Vendor Data Length [15:8]	Length of Vendor-defined Data (high-byte).
Byte $\text{PinTableOffset}[15:0] + 2n$ (n is the index into the pin table)	Pin Number, bits [7:0]	GPIO controller-relative pin number (low byte). <u>_PIN[7:0]</u> . Pin numbers are zero-based. Pin number 0xFFFF = No Pin. OSPM will ignore this pin number.
Byte $\text{PinTableOffset}[15:0] + 2n + 1$ (n is the index into the pin table)	Pin Number, bits [15:8]	GPIO controller-relative pin number (high byte). <u>_PIN[15:8]</u> . Pin numbers are zero-based. Pin number 0xFFFF = No Pin. OSPM will ignore this pin number.
Byte $\text{ResourceSourceNameOffset}[15:0]$	Resource Source (length = L)	Name of the GPIO controller device to which this descriptor applies. The name can be a fully-qualified name, a relative name or a name segment that utilizes the namespace search rules.
Byte $\text{VendorDataOffset}[15:0]$	Vendor-defined Data	(Optional) Data specific to the GPIO controller device supplied by a vendor. This data is provided to the device driver for this GPIO Controller. <u>_VEN</u> .

#### 6.4.3.8.2 GenericSerialBus Connection Descriptors

##### Type 1, Large Item Value 0x0E

All Serial Bus Resource descriptors utilize the following format. For specific bus types, the type-specific fields are used.

**Table 6-240 GenericSerialBus Connection Descriptors**

Offset	Field Name	Definition
Byte 0	Serial Bus Type	Value = 0x8E (10001110B) – Type = 1, Large item name = 0x0E
Byte 1	Length, bits[7:0]	Variable length, minimum value = 0x09 + L(9 + ResourceSource string length)"
Byte 2	Length, bits[15:8]	Variable length, minimum value = 0x00
Byte 3	Revision ID	Indicates the revision of the Serial Bus Connection Descriptor. This value is 2.
Byte 4	Resource Source Index	<i>Reserved</i> (must be 0)

Offset	Field Name	Definition
Byte 5	Serial Bus Type	<p>Serial Bus Type</p> <p>Indicates which type of serial bus connection this descriptor describes. Defined values are:</p> <ul style="list-style-type: none"> <li>0</li> <li>1</li> <li>Reserved</li> <li>I2C</li> <li>2 SPI</li> <li>3 UART</li> <li>4-191 Reserved</li> <li>192-255 Hardware Vendor Defined</li> </ul>
Byte 6	General Flags [7:0]	<p>Flags that are common to all serial bus connection types.</p> <p>Bits [7:3]</p> <p><i>Reserved</i>. Must be 0.</p> <p>Bit [2]</p> <p>Connection Sharing, _SHR</p> <p>0x0: Exclusive: This Serial Bus connection is used exclusively by one device.</p> <p>0x1: Shared: This Serial Bus connection is shared by two or more devices.</p> <p>Bit [1]</p> <p>Consumer/Producer:</p> <p>0x1: This device consumes this resource</p> <p>0x0: This device produces and consumes this resource</p> <p>Bit [0]</p> <p>Slave Mode.</p> <p>0x0: The communication over this connection is initiated by the controller.</p> <p>0x1: The communication over this connection is initiated by the device.</p>
Byte 7	Type Specific Flags, bits[7:0]	Flags specific to the indicated Serial Bus Type (see above).

Offset	Field Name	Definition
Byte 8	Type Specific Flags, bits[15:8]	Flags specific to the indicated Serial Bus Type (see above).
Byte 9	Type Specific Revision ID	Revision ID for the data describing the serial bus connection specified by Serial Bus Type (see above).
Byte 10	Type Data Length, bits[7:0]	Variable length, minimum size depends on the indicated Serial Bus Type (see above).
Byte 11	Type Data Length, bits [15:8]	Variable length, minimum size depends on the indicated Serial Bus Type (see above).
Byte 12	Type Specific Data	(Optional) Data specific to the serial bus connection type indicated in Serial Bus Type (see above).
...	...	Additional data specific to the serial bus connection type.
String	Resource Source	Name of the serial bus controller device to which this connection descriptor applies. The name can be a fully qualified path, a relative path, or a simple name segment that utilizes the namespace search rules.

#### 6.4.3.8.2.1 I2C Serial Bus Connection Resource Descriptor

Table 6-241 I2C Serial Bus Connection Descriptor

Offset	Field Name	Definition
Byte 0	I2C Bus Connection Descriptor	Value = 0x8E (10001110B) – Type = 1, Large item name = 0x0E
Byte 1	Length, bits [7:0]	Variable length, minimum value = 0xF + L (15 + ResourceSource string length)
Byte 2	Length, bits [15:8]	Variable, length minimum value = 0x00
Byte 3	Revision ID	Indicates the revision for the I2C Resource Descriptor. This value is 2.
Byte 4	Resource Source Index	Master Instance. If the controller device specified in the Resource Source field in this structure supports more than one Master, this field describes the instance of the Master to which the I2C Slave is connected. The first Master Instance is 0.
Byte 5	Serial Bus Type	Serial Bus Type value must be 1 for I2C

Offset	Field Name	Definition
Byte 6	General Flags [7:0]	<p>Flags that are common to all serial bus connection types.</p> <p>Bits [7:2] <i>Reserved</i>. Must be 0.</p> <p>Bit [1] Consumer/Producer: 0x1: This device consumes this resource 0x0: This device produces and consumes this resource</p> <p>Bit [0] Slave Mode. <b>_SLV</b> 0x0: The communication over this connection is initiated by the controller. 0x1: The communication over this connection is initiated by the device.</p>
Byte 7	Type Specific Flags, bits[7:0]	<p>Bits[7:1] <i>Reserved</i>. Must be 0.</p> <p>Bit [0] 10-bit addressing mode. <b>_MOD</b> 0x1: The connection uses 10-bit addressing 0x0: The connection uses 7-bit addressing.</p> <p>Note: If this device is connected to an I3C Host Controller, <b>_MOD</b> must be 0.</p>
Byte 8	Type Specific Flags, bits[15:8]	<p>Legacy Virtual Register. <b>_LVR</b> This field is used to provide LVR data as specified in the MIPI I3C Specification for an I2C device connected to an I3C Host Controller. For I2C devices on an I2C bus, this field is Reserved and unused.</p>
Byte 9	Type Specific Revision ID	Indicates the revision of the I2C-specific Serial Bus Connection Descriptor Data. This value is 1.
Byte 10	Type Data Length, bits[7:0]	Variable length, minimum value = 0x6 (6).
Byte 11	Type Data Length, bits [15:8]	Variable length, minimum size = 0x0 (0)
Byte 12	Connection Speed, bits [7:0]	Connection speed bits [7:0] of the maximum speed in hertz supported by this connection. <b>_SPE[7:0]</b>
Byte 13	Connection Speed, bits [15:8]	Connection speed bits [15:8] of the maximum speed in hertz supported by this connection. <b>_SPE[15:8]</b>

Offset	Field Name	Definition
Byte 14	Connection Speed, bits [23:16]	Connection speed bits [23:16] of the maximum speed in hertz supported by this connection. <b>_SPE[23:16]</b>
Byte 15	Connection Speed, bits [31:24]	Connection speed bits [31:24] of the maximum speed in hertz supported by this connection. <b>_SPE[31:24]</b>
Byte 16	Slave Address, bits [7:0]	<p>Lower eight bits of the I2C bus address for this connection. <b>_ADR[7:0]</b></p> <p>Bit [7] In 7-bit addressing mode this is reserved and must be 0. In 10-bit addressing mode this is bit 7 of the address.</p> <p>Bits [6:0] The lowest 7 bits of the address. In 7-bit addressing mode this represents the complete address.</p>
Byte 17	Slave Address, bits[15:8]	<p>Upper eight bits of the I2C bus address for this connection. The upper eight bits are to support 10-bit addressing and should be set to 0 if 7-bit addressing is being used. <b>_ADR[15:8]</b></p> <p>Bits [15:10] <i>Reserved.</i> Must be 0.</p> <p>Bits [9:8] In 7-bit addressing mode these are reserved and must be 0. In 10-bit addressing mode these are the highest two bits of the address.</p>
Byte 18	Vendor-defined Data	(Optional) Data specific to the controller device supplied by a vendor. The number of bytes in this field is Type Data Length – 6.
...	...	(Optional) Additional vendor supplied data.
String	Resource Source (Length = L)	Name of the serial bus controller device to which this connection descriptor applies. The name can be a fully qualified path, a relative path, or a simple name segment that utilizes the namespace search rules

#### 6.4.3.8.2.2 SPI Serial Bus Connection Resource Descriptor

Table 6-242 SPI Serial Bus Connection Descriptor

Offset	Field Name	Definition
Byte 0	SPI Bus Connection Descriptor	Value = 0x8E (10001110B) – Type = 1, Large item name = 0x0E
Byte 1	Length, bits[7:0]	Variable length, minimum value = 0x12 + L (18 + Resource Source string length)
Byte 2	Length, bits[15:8]	Variable length, minimum value = 0x00

Offset	Field Name	Definition
Byte 3	Revision ID	Indicates the revision of the Serial Bus Connection Descriptor. This value is 1.
Byte 4	Resource Source Index	<i>Reserved</i> (must be 0)
Byte 5	Serial Bus Type	Serial Bus Type value must be 2 for SPI
Byte 6	General Flags[7:0]	<p>Flags that are common to all serial bus connection types.</p> <p>Bits [7:2]</p> <p>Reserved. Must be 0.</p> <p>Bit [1]</p> <p>Consumer/Producer:</p> <ul style="list-style-type: none"> <li>0x1: This device consumes this resource</li> <li>0x0: This device produces and consumes this resource</li> </ul> <p>Bit [0]</p> <p>Slave Mode. <b>_SLV</b></p> <ul style="list-style-type: none"> <li>0x0: The communication over this connection is initiated by the controller.</li> <li>0x1: The communication over this connection is initiated by the device.</li> </ul>
Byte 7	Type Specific Flags, bits[7:0]	<p>Bits [7:2]</p> <p>Reserved (must be 0)</p> <p>Bit [1]: Device Polarity. <b>_DPL</b></p> <ul style="list-style-type: none"> <li>1 – The device selection line is active high</li> <li>0 – The device selection line is active low</li> </ul> <p>Bit [0]: Wire Mode. <b>_MOD</b></p> <ul style="list-style-type: none"> <li>1 – The connection is over 3 wires</li> <li>0 – The connection is over 4 wires</li> </ul>
Byte 8	Type Specific Flags, bits[15:8]	<i>Reserved</i> . Must be 0.
Byte 9	Type Specific Revision ID	Indicates the revision of the SPI-specific Serial Bus Connection Descriptor Data. This value must be 1.
Byte 10	Type Data Length, bits[7:0]	Variable length, minimum value = 0x9 (9).
Byte 11	Type Data Length, bits [15:8]	Variable length, minimum size = 0x0 (0)
Byte 12	Connection Speed, bits [7:0]	Connection speed bits [7:0] of the maximum speed in hertz supported by this connection. <b>_SPE[7:0]</b>
Byte 13	Connection Speed, bits [15:8]	Connection speed bits [15:8] of the maximum speed in hertz supported by this connection. <b>_SPE[15:8]</b>
Byte 14	Connection Speed, bits [23:16]	Connection speed bits [23:16] of the maximum speed in hertz supported by this connection. <b>_SPE[23:16]</b>

Offset	Field Name	Definition
Byte 15	Connection Speed, bits [31:24]	Connection speed bits [31:24] of the maximum speed in hertz supported by this connection. <b>_SPE[31:24]</b>
Byte 16	Data Bit Length	The size in bits of the smallest transfer unit. <b>_LEN</b>
Byte 17	Phase	The phase (CPHA) of the clock pulse on which to capture data (the other being used to transmit). <b>_PHA</b> 0 – First phase 1 – Second phase
Byte 18	Polarity	The polarity of the clock (CPOL). This value indicates if the clock is low or high during the first phase (see Phase above). <b>_POL</b> 0 – Start Low 1 – Start High
Byte 19	Device Selection, bits [7:0]	Lower eight bits of the device selection value. This value is specific to the device and may refer to a chip-select line, GPIO line or other line selection mechanism. <b>_ADR[7:0]</b>
Byte 20	Device Selection, bits [15:8]	Upper eight bits of the device selection value. This value is specific to the device and may refer to a chip-select line, GPIO line or other line selection mechanism. <b>_ADR[15:8]</b>
Byte 21	Vendor Defined Data	(Optional) Data specific to the controller device supplied by a vendor. The number of bytes in this field is Type Data Length – 9.
...	...	(Optional) Additional vendor supplied data.
String	Resource Source (Length = L)	Name of the serial bus controller device to which this connection descriptor applies. The name can be a fully qualified path, a relative path, or a simple name segment that utilizes the namespace search rules.

#### 6.4.3.8.2.3 UART Serial Bus Connection Resource Descriptor

**Table 6-243** **UART Serial Bus Connection Descriptor**

Offset	Field Name	Definition
Byte 0	Serial Bus Connection Descriptor	Value = 0x8E (10001110B) – Type = 1, Large item name = 0x0E
Byte 1	Length, bits[7:0]	Variable length, minimum value = 0x13 + L (17 + Resource Source string length)
Byte 2	Length, bits[15:8]	Variable length, minimum value = 0x00
Byte 3	Revision ID	Indicates the revision of the Serial Bus Connection Descriptor. This value is 1.
Byte 4	Resource Source Index	<i>Reserved</i> (must be 0)
Byte 5	Serial Bus Type	Serial Bus Type value must be 3 for UART

Offset	Field Name	Definition
Byte 6	General Flags [7:0]	<p>Flags that are common to all serial bus connection types.</p> <p>Bits [17:2]</p> <p><i>Reserved.</i> Must be 0.</p> <p>Bit [1]</p> <p>Consumer/Producer:</p> <ul style="list-style-type: none"> <li>0x1: This device consumes this resource</li> <li>0x0: This device produces and consumes this resource</li> </ul> <p>Bit [0]</p> <p>Slave Mode. <b>_SLV</b></p> <ul style="list-style-type: none"> <li>0x0: The communication over this connection is initiated by the controller.</li> <li>0x1: The communication over this connection is initiated by the device.</li> </ul>
Byte 7	Type Specific Flags, bits[7:0]	<p>Bit [7] – Endian-ness. <b>_END</b></p> <ul style="list-style-type: none"> <li>Little Endian = 0</li> <li>Big Endian = 1</li> </ul> <p>Bit [6:4] – Data bits. Number of bits per byte. <b>_LEN</b></p> <ul style="list-style-type: none"> <li>000B – 5 bits</li> <li>001B – 6 bits</li> <li>010B – 7 bits</li> <li>011B – 8 bits</li> <li>100B – 9 bits</li> </ul> <p>Bits [3:2] – Stop Bits. Number of stop bits per character. <b>_STB</b></p> <ul style="list-style-type: none"> <li>00B (0) – none</li> <li>01B (1) – 1</li> <li>10B (2) – 1.5</li> <li>11B (3) – 2</li> </ul> <p>Bits [1:0] – Flow control. Indicates type of flow control for the connection. <b>_FLC</b></p> <ul style="list-style-type: none"> <li>00B (0) – None</li> <li>01B (1) – Hardware flow control</li> <li>10B (2) – XON/XOFF</li> </ul>
Byte 8	Type Specific Flags, bits[15:8]	<i>Reserved.</i> Must be 0.
Byte 9	Type Specific Revision ID	Indicates the revision of the UART-specific Serial Bus Connection Descriptor Data. This value must be 1.

Offset	Field Name	Definition
Byte 10	Type Data Length, bits[7:0]	Variable length, minimum value = 0x0A (10).
Byte 11	Type Data Length, bits [15:8]	Variable length, minimum size = 0x0 (0)
Byte 12	Default Baud rate, bits[7:0]	Default baud rate of connection, in bits-per-second. <b>_SPE[7:0]</b> Bits [7:0]
Byte 13	Default Baud rate, bits[15:8]	Default baud rate of connection, in bits-per-second. <b>_SPE[15:8]</b> Bits [15:8]
Byte 14	Default Baud rate, bits[23:16]	Default baud rate of connection, in bits-per-second. <b>_SPE[23:16]</b> Bits [23:16]
Byte 15	Default Baud rate, bits[31:24]	Default baud rate of connection, in bits-per-second. <b>_SPE[31:24]</b> Bits [31:24].
Byte 16	Rx FIFO, bits[7:0]	Maximum receive buffer, in bytes, supported by this connection. <b>_RXL[7:0]</b> Bits [7:0]
Byte 17	Rx FIFO, bits[15:8]	Maximum receive buffer, in bytes, supported by this connection. <b>_RXL[15:8]</b> Bits [15:8]
Byte 18	Tx FIFO, bits[7:0]	Maximum receive buffer, in bytes, supported by this connection. <b>_TXL[7:0]</b> Bits [7:0]
Byte 19	Tx FIFO, bits[15:8]	Maximum receive buffer, in bytes, supported by this connection. <b>_TXL[15:8]</b> Bits [15:8]
Byte 20	Parity	Parity. <b>_PAR</b> None = 0x00 Even = 0x01 Odd = 0x02 Mark = 0x03 Space = 0x04
Byte 21	Serial Lines Enabled	Serial lines enabled (Enabled = 1, Disabled = 0). <b>_LIN</b> Bit [7] – Request to Send (RTS) Bit [6] – Clear to Send (CTS) Bit [5] – Data Terminal Ready (DTR) Bit [4] – Data Set Ready (DSR) Bit [3] – Ring Indicator (RI) Bit [2] – Data Carrier Detect (DTD) Bit [1] – Reserved. Must be 0. Bit [0] – Reserved. Must be 0

Offset	Field Name	Definition
Byte 22	Vendor Defined Data	(Optional) Data specific to the controller device supplied by a vendor. The number of bytes in this field is Type Data Length – 10.
...	...	(Optional) Additional vendor supplied data.
String	Resource Source (Length = L)	Name of the serial bus controller device to which this connection descriptor applies. The name can be a fully qualified path, a relative path, or a simple name segment that utilizes the namespace search rules.

#### 6.4.3.9 Pin Function Descriptor

Table 6-244 Pin Function Description Definition

Byte Offset	Field Name	Description
Byte 0	Resource Identifier	Value = 0x8D, (10001101B) – Type = 1, Large item name = 0x0D
Byte 1	Length, bits[7:0]	Variable length, minimum value = 0x0F + L (15 + length of the Resource Source Name string)
Byte 2	Length, bits[15:8]	Variable length, minimum value = 0x00
Byte 3	Revision ID	Indicates the revision for the Pin Function Descriptor. This value is 1
Byte 4	Flags [7:0]	Bit [7:1] - <i>Reserved</i> . Must be 0. Bit [0] - IO Sharing, _SHR 0x0 = Exclusive: This function is used exclusively by one device. 0x1 = Shared: This function is shared by two or more devices.
Byte 5	Flags [15:8]	<i>Reserved</i> . Must be 0.
Byte 6	Pin pull configuration	Can be one of PullDefault, PullUp, PullDown, PullNone or a vendor-supplied value in the range 128-255.
Byte 7	Function number (low byte)	The function number in which the pin is configured. This number is provider-specific.
Byte 8	Function number (high byte)	The function number in which the pin is configured. This number is provider-specific.
Byte 9	Pin table offset (low byte)	Offset to the start of the pin table (low byte). The offset is relative to the start of this descriptor.

Byte Offset	Field Name	Description
Byte 10	Pin table offset (high byte)	Offset to the start of the pin table (high byte). The offset is relative to the start of this descriptor.
Byte 11	Resource source index	Reserved for future use. This field must be 0.
Byte 12	Resource source name index (low byte)	Offset to the start of the resource source name (low byte). The offset is relative to the start of this descriptor.
Byte 13	Resource source name index (high byte)	Offset to the start of the resource source name (high byte). The offset is relative to the start of this descriptor.
Byte 14	Vendor data offset (low byte)	(low byte) Offset to the start of the Vendor-defined Data (the last byte of the ResourceSource + 1). This value must always be valid to allow for length calculations. In the case where there is no Vendor Data, this offset still must refer to the last byte of the ResourceSource + 1. The offset is relative to the start of this descriptor.
Byte 15	Vendor data offset (high byte)	(high byte) Offset to the start of the Vendor-defined Data (the last byte of the ResourceSource + 1). This value must always be valid to allow for length calculations. In the case where there is no Vendor Data, this offset still must refer to the last byte of the ResourceSource + 1. The offset is relative to the start of this descriptor.
Byte 16	Vendor data length (low byte)	Length of Vendor-defined Data (low-byte).
Byte 17	Vendor data length (high byte)	Length of Vendor-defined Data (high-byte).
Byte $\text{PinTableOffset}[15:0] + 2n$ (n is the index into the pin table) Byte $\text{PinTableOffset}[15:0] + 2n + 1$ (n is the index into the pin table)	Pin Number, bits [15:8]	Provider-relative pin number (high byte). <b>_PIN[15:8]</b> . Pin numbers are zero-based.
Byte $\text{PinTableOffset}[15:0] + 2n + 1$ (n is the index into the pin table) Byte $\text{ResourceSourceNameOffset}[15:0]$	Resource Source (length = L)	Name of the function config provider to which this descriptor applies. The name can be a fully-qualified name, a relative name or a name segment that utilizes the namespace search
Byte $\text{VendorDataOffset}[15:0]$	Vendor-defined Data	(Optional)  Data specific to the GPIO controller device supplied by a vendor. This data is provided to the device driver for this GPIO Controller. <b>_VEN</b> .

### 6.4.3.10 Pin Configuration Descriptor

**Table 6-245 Pin Configuration Descriptor Definition**

Byte Offset	Field Name	Description
Byte 0	Resource Identifier	Value = 0x8F, (10001111B) – Type = 1, Large item name = 0x0F
Byte 1	Length, bits[7:0]	Variable length, minimum value = 0x13 + L (19 + length of the Resource Source Name string)
Byte 2	Length, bits[15:8]	Variable length, minimum value = 0x00
Byte 3	Revision ID	Indicates the revision for the Function Configuration Descriptor. This value is 1
Byte 4	Flags [7:0]	Bit [7:2] - Reserved. Must be 0. Bit [1] - Consumer/Producer 0x1: This device consumes this resource 0x0: This device produces and consumes this resource Bit [0] - IO Sharing, _SHR 0x0 = Exclusive: This function is used exclusively by one device. 0x1 = Shared: This function is shared by two or more devices.
Byte 5	Flags [15:8]	<i>Reserved.</i> Must be 0.
Byte 6	Pin Configuration Type, <b>_TYP</b>	The pin configuration type (see <a href="#">Table 19-434</a> ).
Byte 7	Pin Configuration Value, <b>_VAL</b> , bits [7:0]	The pin configuration value associated with the pin configuration type (see <a href="#">Table 19-434</a> ).
Byte 8	Pin Configuration Value, <b>_VAL</b> , bits [15:8]	The pin configuration value associated with the pin configuration type (see <a href="#">Table 19-434</a> ).
Byte 9	Pin Configuration Value, <b>_VAL</b> , bits [23:16]	The pin configuration value associated with the pin configuration type (see <a href="#">Table 19-434</a> ).
Byte 10	Pin Configuration Value, <b>_VAL</b> , bits [31:24]	The pin configuration value associated with the pin configuration type (see <a href="#">Table 19-434</a> ).
Byte 11	Pin Table Offset[7:0]	Offset to the start of the pin table (low byte). The offset is relative to the start of this descriptor.
Byte 12	Pin Table Offset[15:8]	Offset to the start of the pin table (high byte). The offset is relative to the start of this descriptor.

Byte Offset	Field Name	Description
Byte 13	Resource Source Index	Reserved for future use. This field must be 0.
Byte 14	Resource Source Name Offset[7:0]	Offset to the start of the resource source name (low byte). The offset is relative to the start of this descriptor.
Byte 15	Resource Source Name Offset[15:8]	Offset to the start of the resource source name (high byte). The offset is relative to the start of this descriptor.
Byte 16	Vendor Data Offset[7:0]	(low byte) Offset to the start of the Vendor-defined Data (the last byte of the ResourceSource + 1). This value must always be valid to allow for length calculations. In the case where there is no Vendor Data, this offset still must refer to the last byte of the ResourceSource + 1. The offset is relative to the start of this descriptor.
Byte 17	Vendor Data Offset[15:8]	(high byte) Offset to the start of the Vendor-defined Data (the last byte of the ResourceSource + 1). This value must always be valid to allow for length calculations. In the case where there is no Vendor Data, this offset still must refer to the last byte of the ResourceSource + 1. The offset is relative to the start of this descriptor.
Byte 18	Vendor Data Length [7:0]	Length of Vendor-defined Data (low-byte).
Byte 19	Vendor Data Length [15:8]	Length of Vendor-defined Data (high-byte).
Byte <i>PinTableOffset[15:0] + 2n</i> (n is the index into the pin table)	Pin Number, <b>_PIN</b> , bits [7:0]	Provider-relative pin number (low byte). Pin numbers are zero-based.
Byte <i>PinTableOffset[15:0] + 2n + 1</i> (n is the index into the pin table)	Pin Number, <b>_PIN</b> , bits [15:8]	Provider-relative pin number (high byte). Pin numbers are zero-based.
Byte <i>ResourceSourceNameOffset[15:0]</i>	Resource Source (length = <i>L</i> )	Name of the pin controller to which this descriptor applies. The name can be a fully-qualified name, a relative name or a name segment that utilizes the namespace search
Byte <i>VendorDataOffset[15:0]</i>	Vendor-defined Data, <b>_VEN</b>	(Optional) Data specific to the pin controller device supplied by a vendor. This data is provided to the device driver for this pin controller.

### 6.4.3.11 Pin Group Descriptor

**Table 6-246 Pin Group Descriptor Definition**

Byte Offset	Field Name	Description
Byte 0	Resource Identifier	Value = 0x90, (10010000B) – Type = 1, Large item name = 0x10
Byte 1	Length [7:0]	Variable length, minimum value = 0x0B + L (11 + length of the Resource Label)
Byte 2	Length [15:8]	Value = 0x00
Byte 3	Revision ID	Indicates the revision for the Pin Group Descriptor. This value is 1.
Byte 4	Flags [7:0]	<p>[7:1] Reserved. Must be 0.</p> <p>Bit [0] - Consumer/Producer 0x1: This device consumes this resource 0x0: This device produces and consumes this resource</p>
Byte 5	Flags [15:8]	Reserved. Must be 0.
Byte 6	Pin table offset [7:0]	Offset to the start of the pin table (low byte). The offset is relative to the start of this descriptor.
Byte 7	Pin table offset [15:8]	Offset to the start of the pin table (high byte). The offset is relative to the start of this descriptor.
Byte 8	Resource label offset [7:0]	<p>Offset to the start of the resource label (low byte). The offset is relative to the start of this descriptor.</p> <p>The length of the resource label string can be calculated from length L = Vendor data offset – Resource label offset. The length includes the string's terminating '\0' character.</p>
Byte 9	Resource label offset [15:8]	Offset to the start of the resource label (high byte). The offset is relative to the start of this descriptor.
Byte 10	Vendor data offset [7:0]	(low byte) Offset to the start of the Vendor-defined Data (the last byte of the Resource label offset (high byte) + 1). This value must always be valid to allow for length calculations. In the case where there is no Vendor Data, this offset still must refer to the last byte of the Resource label offset (high byte) + 1. The offset is relative to the start of this descriptor.

Byte Offset	Field Name	Description
Byte11	Vendor data offset [15:8]	(high byte) Offset to the start of the Vendor-defined Data (the last byte of the Pin table offset (high byte) + 1). This value must always be valid to allow for length calculations. In the case where there is no Vendor Data, this offset still must refer to the last byte of the Pin table offset (high byte) + 1. The offset is relative to the start of this descriptor.
Byte 12	Vendor data length [7:0]	Length of Vendor-defined Data (low-byte).
Byte 13	Vendor data length [15:8]	Length of Vendor-defined Data (high-byte).
Byte <i>PinTableOffset</i> [15:0] + 2n (n is the index into the pin table)	Pin Number, <u>PIN</u> [7:0]	Provider-relative pin number (low byte). Pin numbers are zero-based.
Byte <i>PinTableOffset</i> [15:0] + 2n + 1 (n is the index into the pin table)	Pin Number, <u>PIN</u> [15:8]	Provider-relative pin number (high byte). Pin numbers are zero-based.
Byte ResourceLabelOffset[15:0]	Resource Label (length = L)	Label for the resource (string). Can be any non-empty string and is used by resource consumers to refer to this resource by name. Always terminated by '\0'.
Byte VendorDataOffset[15:0]	Vendor-defined Data, <u>VEN</u>	(Optional) Data specific to the GPIO controller device supplied by a vendor. This data is provided to the device driver for this GPIO Controller.

#### 6.4.3.12 Pin Group Function Descriptor

Table 6-247 Pin Group Function Descriptor Definition

Byte Offset	Field Name	Description
Byte 0	Resource Identifier	Value = 0x91, (10010001B) – Type = 1, Large item name = 0x11
Byte 1	Length [7:0]	Variable length, minimum value = 0x0E + L1 + L2 (14 + length of the Resource Source Name string + length of the Resource Source Label string)
Byte 2	Length [15:8]	Variable length, minimum value = 0x00
Byte 3	Revision ID	Indicates the revision for the Pin Function Descriptor. This value is 1

Byte Offset	Field Name	Description
Byte 4	Flags [7:0]	<p>Bit [7:2] - <i>Reserved</i>. Must be 0.</p> <p>Bit [1] - Consumer/Producer 0x1: This device consumes this resource 0x0: This device produces and consumes this resource</p> <p>Bit [0] - IO Sharing, _SHR 0x0 = Exclusive: This function is used exclusively by one device. 0x1 = Shared: This function is shared by two or more devices.</p>
Byte 5	Flags [15:8]	<i>Reserved</i> . Must be 0.
Byte 6	Function number, <u>_FUN</u> [7:0]	The function number in which the pin is configured. This number is provider-specific.
Byte 7	Function number, <u>_FUN</u> [15:8]	The function number in which the pin is configured. This number is provider-specific.
Byte 8	Resource source index	Reserved for future use. This field must be 0.
Byte 9	Resource source name index [7:0]	Offset to the start of the resource source name (low byte). The offset is relative to the start of this descriptor.
Byte 10	Resource source name index [15:8]	Offset to the start of the resource source name (high byte). The offset is relative to the start of this descriptor.
Byte 11	Resource source label offset [7:0]	<p>Offset to the start of the Resource source label (low byte). The offset is relative to the start of this descriptor.</p> <p>The length of the resource source label string can be calculated from length L2 = Vendor data offset – Resource source label offset. The length includes the string's terminating '\0' character.</p>
Byte 12	Resource source label offset [15:8]	Offset to the start of the resource source label (high byte). The offset is relative to the start of this descriptor.

Byte Offset	Field Name	Description
Byte 13	Vendor data offset [7:0]	(low byte) Offset to the start of the Vendor-defined Data (the last byte of the ResourceSource + 1). This value must always be valid to allow for length calculations. In the case where there is no Vendor Data, this offset still must refer to the last byte of the ResourceSource + 1. The offset is relative to the start of this descriptor.
Byte 14	Vendor data offset [15:8]	(high byte) Offset to the start of the Vendor-defined Data (the last byte of the ResourceSource + 1). This value must always be valid to allow for length calculations. In the case where there is no Vendor Data, this offset still must refer to the last byte of the ResourceSource + 1. The offset is relative to the start of this descriptor.
Byte 15	Vendor data length [7:0]	Length of Vendor-defined Data (low-byte).
Byte 16	Vendor data length [15:8]	Length of Vendor-defined Data (high-byte).
Byte <i>ResourceSourceNameOffset</i> [15:0]	Resource Source (length = L1)	Name of the function config provider to which this descriptor applies. The name can be a fully-qualified name, a relative name or a name segment that utilizes the namespace search
Byte <i>ResourceSourceLabelOffset</i> [15:0]	Resource Source Label (length = L2)	This name refers to the PinGroup resource in the current resource template buffer of the GPIO controller. The PinGroup resource is matched by comparing its ResourceLabel string to this field. Always terminated by '\0'.
Byte VendorDataOffset[15:0]	Vendor-defined Data, _VEN	(Optional) Data specific to the GPIO controller device supplied by a vendor. This data is provided to the device driver for this GPIO Controller.

#### 6.4.3.13 Pin Group Configuration Descriptor

Table 6-248 Pin Group Configuration Descriptor Description

Byte Offset	Field Name	Description
Byte 0	Resource Identifier	Value = 0x92, (10010001B) – Type = 1, Large item name = 0x12

Byte Offset	Field Name	Description
Byte 1	Length, bits[7:0]	Variable length, minimum value = 0x11 + L1 + L2 (17 + length of the Resource Source Name string + length of the Resource Source Label string)
Byte 2	Length, bits[15:8]	Variable length, minimum value = 0x00
Byte 3	Revision ID	Indicates the revision for the Function Configuration Descriptor. This value is 1
Byte 4	Flags [7:0]	<p>Bit [7:2] - Reserved. Must be 0.</p> <p>Bit [1] - Consumer/Producer 0x1: This device consumes this resource 0x0: This device produces and consumes this resource</p> <p>Bit [0] - IO Sharing, _SHR 0x0 = Exclusive: This function is used exclusively by one device. 0x1 = Shared: This function is shared by two or more devices.</p>
Byte 5	Flags [15:8]	<i>Reserved.</i> Must be 0.
Byte 6	Pin Configuration Type, <b>_TYP</b>	The pin configuration type (see <a href="#">Table 19-435</a> ).
Byte 7	Pin Configuration Value, <b>_VAL</b> , bits [7:0]	The pin configuration value associated with the pin configuration type (see <a href="#">Table 19-435</a> ).
Byte 8	Pin Configuration Value, <b>_VAL</b> , bits [15:8]	The pin configuration value associated with the pin configuration type (see <a href="#">Table 19-435</a> ).
Byte 9	Pin Configuration Value, <b>_VAL</b> , bits [23:16]	The pin configuration value associated with the pin configuration type (see <a href="#">Table 19-435</a> ).
Byte 10	Pin Configuration Value, <b>_VAL</b> , bits [31:24]	The pin configuration value associated with the pin configuration type (see <a href="#">Table 19-435</a> ).
Byte 11	Resource Source Index	Reserved for future use. This field must be 0.
Byte 12	Resource Source Name Offset[7:0]	Offset to the start of the resource source name (low byte). The offset is relative to the start of this descriptor.

Byte Offset	Field Name	Description
Byte 13	Resource Source Name Offset[15:8]	Offset to the start of the resource source name (high byte). The offset is relative to the start of this descriptor.
Byte 14	Resource source label offset (low byte)	Offset to the start of the resource source label (low byte). The offset is relative to the start of this descriptor.  The length of the resource source label string can be calculated from length L2 = Vendor data offset – Resource source label offset. The length includes the string's terminating '\0' character.
Byte 15	Resource source label offset (high byte)	Offset to the start of the resource source label (high byte). The offset is relative to the start of this descriptor.
Byte 16	Vendor Data Offset[7:0]	(low byte) Offset to the start of the Vendor-defined Data (the last byte of the ResourceSource + 1). This value must always be valid to allow for length calculations. In the case where there is no Vendor Data, this offset still must refer to the last byte of the ResourceSource + 1. The offset is relative to the start of this descriptor.
Byte 17	Vendor Data Offset[15:8]	(high byte) Offset to the start of the Vendor-defined Data (the last byte of the ResourceSource + 1). This value must always be valid to allow for length calculations. In the case where there is no Vendor Data, this offset still must refer to the last byte of the ResourceSource + 1. The offset is relative to the start of this descriptor.
Byte 18	Vendor Data Length [7:0]	Length of Vendor-defined Data (low-byte).
Byte 19	Vendor Data Length [15:8]	Length of Vendor-defined Data (high-byte).
Byte <i>ResourceSourceNameOffset[15:0]</i>	Resource Source (length = L1)	Name of the pin controller to which this descriptor applies. The name can be a fully-qualified name, a relative name or a name segment that utilizes the namespace search
Byte <i>ResourceSourceLabelOffset[15:0]</i>	Resource Source Label (length = L2)	This name refers to the PinGroup resource in current resource template buffer of the GPIO controller. The PinGroup resource is matched by comparing its ResourceLabel string to this field. Always terminated by '\0'.

Byte Offset	Field Name	Description
Byte VendorDataOffset[15:0]	Vendor-defined Data, <b>_VEN</b>	(Optional) Data specific to the pin controller device supplied by a vendor. This data is provided to the device driver for this pin controller.

## 6.5 Other Objects and Control Methods

**Table 6-249 Other Objects and Methods**

Object	Description
<b>_BBN</b>	PCI bus number set up by the platform boot firmware.
<b>_BDN</b>	Correlates a docking station between ACPI and legacy interfaces.
<b>_DCK</b>	Indicates that the device is a docking station.
<b>_DEP</b>	Indicates device objects that OSPM should assign a higher priority in start ordering due to future operation region accesses.
<b>_FIT</b>	Object that evaluates to a buffer of NFIT Structures.
<b>_GLK</b>	Indicates the Global Lock must be acquired when accessing a device.
<b>_INI</b>	Device initialization method that is run shortly after ACPI has been enabled.
<b>_LSI</b>	Label Storage Information – Returns information about the Label Storage Area associated with the NVDIMM object, including its size.
<b>_LSR</b>	Label Storage Read – Returns label data from the Label Storage Area of the NVDIMM object.
<b>_LSW</b>	Label Storage Write – Writes label data in to the Label Storage Area of the NVDIMM object.
<b>_REG</b>	Notifies AML code of a change in the availability of an operation region.
<b>_SEG</b>	Indicates a bus segment location.

### 6.5.1 **\_INI** (Init)

**\_INI** is a device initialization object that performs device specific initialization. This control method is located under a device object and is run only when OSPM loads a description table. There are restrictions related to when this method is called and governing writing code for this method. The **\_INI** method must only access Operation Regions that have been indicated to available as defined by the **\_REG** method. The **\_REG** method is described in [Section 6.5.4](#), “**\_REG** (Region).” This control method is run before **\_ADR**, **\_CID**, **\_HID**, **\_SUN**, and **\_UID** are run.

#### **Arguments:**

None

#### **Return Value:**

None

Before evaluating the \_INI object, OSPM evaluates the \_STA object for the device. If the \_STA object does not exist for the device, the device is assumed to be both present and functional. If the \_STA method indicates that the device is present, OSPM will evaluate the \_INI for the device (if the \_INI method exists) and will examine each of the children of the device for \_INI methods. If the \_STA method indicates that the device is not present and is not functional, OSPM will not run the \_INI and will not examine the children of the device for \_INI methods. If the \_STA object evaluation indicates that the device is not present but is functional, OSPM will not evaluate the \_INI object, but will examine each of the children of the device for \_INI objects (see the description of \_STA for the explanation of this special case.) If the device becomes present after the table has already been loaded, OSPM will not evaluate the \_INI method, nor examine the children for \_INI methods.

The OSPM performed \_INI object actions based upon the \_STA Present and Functional bits are summarized in the table below.

**Table 6-250 OSPM \_INI Object Actions**

_STA Present Bit	_STA Functional Bit	Actions
0	0	Do not run _INI, do not examine device children
0	1	Do not run _INI, examine device children
1	0	Run _INI, examine device children
1	1	Run _INI, examine device children

The \_INI control method is generally used to switch devices out of a legacy operating mode. For example, platform boot firmware often configures CardBus controllers in a legacy mode to support legacy operating systems. Before enumerating the device with an ACPI operating system, the CardBus controllers must be initialized to CardBus mode. For such systems, the vendor can include an \_INI control method under the CardBus controller to switch the device into CardBus mode.

In addition to device initialization, OSPM unconditionally evaluates an \_INI object under the \\_SB namespace, if present, at the beginning of namespace initialization.

### 6.5.2 \_DCK (Dock)

This control method is located in the device object that represents the docking station (that is, the device object with all the \_EJx control methods for the docking station). The presence of \_DCK indicates to the OS that the device is really a docking station.

\_DCK also controls the isolation logic on the docking connector. This allows an OS to prepare for docking before the bus is activated and devices appear on the bus.

#### Arguments: (1)

Arg0 – An **Integer** containing a docking action code

- 0 – Undock (isolate from connector)
- 1 – Dock (remove isolation from connector)

#### **Return Value:**

An **Integer** containing the docking status code

- 1 – Successful

0 – Failed

**Note:** When \_DCK is called with 0, OSPM will ignore the return value. The \_STA object that follows the \_Ejx control method will notify whether or not the portable has been ejected.

### 6.5.3 \_BDN (BIOS Dock Name)

\_BDN is used to correlate a docking station reported via ACPI and the same docking station reported via legacy interfaces. It is primarily used for upgrading over non-ACPI environments.

#### Arguments:

None

#### **Return Value:**

An **Integer** that contains the EISA Dock ID

\_BDN must appear under a device object that represents the dock, that is, the device object with \_Ejx methods. This object must return a DWORD that is the EISA-packed DockID returned by the Plug and Play BIOS Function 5 (Get Docking Station Identifier) for a dock.

**Note:** If the machine does not support PNPBIOS, this object is not required.

### 6.5.4 \_REG (Region)

The OS runs \_REG control methods to inform AML code of a change in the availability of an operation region. When an operation region handler is unavailable, AML cannot access data fields in that region. (Operation region writes will be ignored and reads will return indeterminate data.)

#### Arguments: (2)

Arg0 – An **Integer** containing the Operation Region address space ID and optional supplementary qualifier (See [Section 5.5.2.4](#) and [Table 5-160](#).)

Arg1 – An **Integer** containing the handler connection code

- 0 – disconnect the handler
- 1 – connect the handler

#### Return Value:

None

Except for the cases shown below, control methods must assume all operation regions are inaccessible until the \_REG(RegionSpace, 1) method is executed, where RegionSpace is the address space ID, or the address space ID with an additional qualifier, depending on the operation region. For more information on which operation regions have address space qualifiers, see [Section 5.5.2.4](#). Once \_REG has been executed for a particular operation region, indicating that the operation region handler is ready, a control method can access fields in the operation region. Conversely, control methods must not access fields in operation regions when \_REG method execution has not indicated that the operation region handler is ready.

For example, until the Embedded Controller driver is ready, the control methods cannot access the Embedded Controller. Once OSPM has run \_REG(EmbeddedControl, 1), the control methods can then access operation regions in Embedded Controller address space. Furthermore, if OSPM executes

`_REG(EmbeddedControl, 0)`, control methods must stop accessing operation regions in the Embedded Controller address space.

The exceptions for the above rule are:

1. OSPM must guarantee that the following operation regions are always accessible:
  - PCI\_Config operation regions on a PCI root bus containing a `_BBN` object.
  - SystemIO operation regions.
  - SystemMemory operation regions when accessing memory returned by the System Address Map reporting interfaces.

Note: Since the region types above are permanently available, no `_REG` methods are required, nor will OSPM evaluate any `_REG` methods that appear in the same scope as the operation region declaration(s) of these types.

2. OSPM must make Embedded Controller operation regions, accessed via the Embedded Controllers described in ECDT, available before executing any control method. These operation regions may become inaccessible after OSPM runs `_REG(EmbeddedControl, 0)`.

Place `_REG` in the same scope as operation region declarations. The OS will run the `_REG` in a given scope when the operation regions declared in that scope are available for use.

## Example:

```

Scope(\_SB.PCI0) {
  OperationRegion(OPR1, PCI_Config, ...)
  Method(_REG, 2) {...} // OSPM executes this when PCI0 operation region handler
                        // status changes
  Device(PC11) {
    Method(2) {...}
    Device(ETH0) {
      OperationRegion(OPR2, PCI_Config, ...)
      Method(_REG, 2) {...}
    }
  }
}

Device(EC0) {
  Name(_HID, EISAID("PNPOC09"))
  OperationRegion(OPR4, EmbeddedControl, ...)
  Method(_REG, 2) {...} // OSPM executes this when EC operation region
                        // handler status changes
}
}
}

```

When the PCI0 operation region handler is ready, OSPM will run the `_REG` method declared in PCI0 scope to indicate that PCI Config space operation region access is available within the PCI0 scope (in other words, OPR1 access is allowed). Finally, when the Embedded Controller operation region handler is ready, OSPM will run the `_REG` method in the EC0 scope to indicate that EC space operation region access

is available within the ECO scope (in other words, OPR4 access is allowed). It should be noted that PCI Config Space Operation Regions are ready as soon the host controller or bridge controller has been programmed with a bus number. PCI1's \_REG method would not be run until the PCI-PCI bridge has been properly configured. At the same time, the OS will also run ETH0's \_REG method since its PCI Config Space would be also available. The OS will again run ETH0's \_REG method when the ETH0 device is started. Also, when the host controller or bridge controller is turned off or disabled, PCI Config Space Operation Regions for child devices are no longer available. As such, ETH0's \_REG method will be run when it is turned off and will again be run when PCI1 is turned off.

**Note:** *The OS only runs \_REG methods that appear in the same scope as operation region declarations that use the operation region type that has just been made available. For example, \_REG in the EC device would not be run when the PCI bus driver is loaded since the operation regions declared under EC do not use any of the operation region types made available by the PCI driver (namely, config space, I/O, and memory).*

### 6.5.5 \_BBN (Base Bus Number)

For multi-root PCI platforms, the \_BBN object evaluates to the PCI bus number that the platform boot firmware assigns. This is needed to access a PCI\_Config operation region for the specific bus. The \_BBN object is located under a PCI host bridge and must be unique for every host bridge within a segment since it is the PCI bus number.

**Arguments:**

None

**Return Value:**

An **Integer** that contains the PCI bus number. The lower 8 bits of \_BBN returned integer is the PCI Base Bus number. Other bits are reserved.

### 6.5.6 \_SEG (Segment)

The optional \_SEG object is located under a PCI host bridge and evaluates to an integer that describes the PCI Segment Group (see PCI Firmware Specification v3.0). If \_SEG does not exist, OSPM assumes that all PCI bus segments are in PCI Segment Group 0.

**Arguments:**

None

**Return Value:**

PCI Segment Group is purely a software concept managed by system firmware and used by OSPM. It is a logical collection of PCI buses (or bus segments). There is no tie to any physical entities. It is a way to logically group the PCI bus segments and PCI Express Hierarchies. \_SEG is a level higher than \_BBN.

PCI Segment Group supports more than 256 buses in a system by allowing the reuse of the PCI bus numbers. Within each PCI Segment Group, the bus numbers for the PCI buses must be unique. PCI buses in different PCI Segment Group are permitted to have the same bus number.

A PCI Segment Group contains one or more PCI host bridges.

The lower 16 bits of \_SEG returned integer is the PCI Segment Group number. Other bits are reserved.

### 6.5.6.1 Example

```

Device(NDO) { // this is a node 0
    Name(_HID, "ACPI 0004")

    // Returns the "Current Resources"
    Name(_CRS,
        ResourceTemplate() {
            ...
        }
    )
    Device(PCIO) {
        Name(_HID, EISAID("PNPOA03"))
        Name(_ADR, 0x00000000)
        Name(_SEG, 0) // The buses below the host bridge belong to PCI segment 0
        ...
        Name(_BBN, 0)
        ...
    }
    Device(PCI 1) {
        ...
        Name(_SEG, 0) // The buses below the host bridge belong to PCI segment 0
        ...
        Name(_BBN, 16)
        ...
    }
    ...
}

Device(ND1) { // this is a node 1
    Name(_HID, "ACPI 0004")

    // Returns the "Current Resources"
    Name(_CRS,
        ResourceTemplate() {
            ...
        }
    )
    Device(PCIO) {
        Name(_HID, EISAID("PNPOA03"))
        Name(_ADR, 0x00000000)
        Name(_SEG, 1) // The buses below the host bridge belong to PCI segment 1
        ...
        Name(_BBN, 0)
        ...
    }
    Device(PCI 1) {
        ...
        Name(_SEG, 1) // The buses below the host bridge belong to PCI segment 1
        ...
        Name(_BBN, 16)
        ...
    }
}

```

```
}
```

### 6.5.7 \_GLK (Global Lock)

This optional named object is located within the scope of a device object. This object returns a value that indicates to any entity that accesses this device (in other words, OSPM or any device driver) whether the Global Lock must be acquired when accessing the device. OS-based device accesses must be performed while in acquisition of the Global Lock when potentially contentious accesses to device resources are performed by non-OS code, such as System Management Mode (SMM)-based code in Intel architecture-based systems.

**Note:** *Default behavior: if \_GLK is not present within the scope of a given device, then the Global Lock is not required for that device.*

#### Arguments:

None

#### **Return Value:**

An **Integer** that contains the Global Lock requirement code

- 0 – The Global Lock is not required for this device
- 1 – The Global lock is required for this device

An example of device resource contention is a device driver for an SMBus-based device contending with SMM-based code for access to the Embedded Controller, SMB-HC, and SMBus target device. In this case, the device driver must acquire and release the Global Lock when accessing the device to avoid resource contention with SMM-based code that accesses any of the listed resources.

### 6.5.8 \_DEP (Operation Region Dependencies)

\_DEP evaluates to a package and designates device objects that OSPM should assign a higher priority in start ordering due to future operation region accesses.

To increase the likelihood that an SPB operation region handler is available when needed, OSPM needs to know in advance which methods will access it -- \_DEP provides OSPM with this information. While the \_DEP keyword may be used to determine start ordering, only the \_REG method ([Section 6.5.4](#)) callbacks can be relied upon to determine whether a region is accessible at a given point in time.

#### Arguments:

None.

#### **Return Value:**

A variable-length **Package** containing object references.

### 6.5.8.1 Example

```
Device(\_SB.TC3) {
    ...
    OperationRegion(OPRG,
        GenericSerialBus,
        0x00,
        0x100)
    ...
}

Device(\_SB.TP1) {
    ...
    Name (_DEP, Package() {\_SB.TC3})
    ...
}
```

### 6.5.9 \_FIT (Firmware Interface Table)

This method evaluates to a buffer returning data in the format of a series of NFIT Structures (See [Section 5.2.25](#)). This method may appear under the NVDIMM root device (see [Section 9.20.2](#)). The \_FIT method, when present, is always evaluated by OSPM.

\_FIT returns all the entries in the NFIT.

The NFIT Update Notification notification value for the NVDIMM root device (see [Table 5-173](#)) notifies OSPM that it needs to re-evaluate the \_FIT method.

**Note:** *NFIT is an ACPI table enumerated at OS boot. In case of hot plug of NVDIMMs, the corresponding NFIT structures will not be present in NFIT. \_FIT method is also used to provide these structures dynamically during hot plug.*

#### Arguments:

None

#### **Return Value:**

A Buffer containing a list of NFIT Structures

Example ASL for \_FIT usage:

```
Scope (\_SB) {
    Device (NVDR) {
        Name(_HID, "ACPI 0012")
        OperationRegion (OPRN, SystemMemory,
            Offset in system memory of NFIT Structures,
            Length in bytes)
        Field (OPRN, ByteAcc, NoLock, Preserve) {
            FITD, Length in bits
        }
        Method (_FIT, 0) {
            Return (FITD)
        }
    ...
}
```

```

}      // end NVDR
...
}      // end scope \_SB

```

## 6.5.10 NVDIMM Label Methods

The following table outlines the NVDIMM Label methods that are attached to the NVDIMM object.

**Table 6-251 NVDIMM Label Methods**

Object	Description
_LSI	<u>L</u> <u>e</u> <u>b</u> <u>S</u> <u>t</u> <u>o</u> <u>r</u> <u>a</u> <u>g</u> e <u>I</u> <u>n</u> <u>f</u> <u>o</u> <u>r</u> <u>m</u> <u>at</u> ion – Returns information about the Label Storage Area associated with the NVDIMM object, including its size.
_LSR	<u>L</u> <u>e</u> <u>b</u> <u>S</u> <u>t</u> <u>o</u> <u>r</u> <u>a</u> <u>g</u> e <u>R</u> <u>e</u> <u>d</u> – Returns label data from the Label Storage Area of the NVDIMM object.
_LSW	<u>L</u> <u>e</u> <u>b</u> <u>S</u> <u>t</u> <u>o</u> <u>r</u> <u>a</u> <u>g</u> e <u>W</u> <u>r</u> <u>i</u> <u>t</u> e – Writes label data in to the Label Storage Area of the NVDIMM object.

### 6.5.10.1 \_LSI (Label Storage Information)

This optional object returns information about the Label Storage Area for the requested device.

Arguments:

None.

Return Value:

A **Package** containing the Label Storage Area information as described below

Return Value Information:

\_LSI returns a package in the format below

```

Package {
    Status          // Integer (DWORD)
    Si zeOfLabelStorageArea// Integer (DWORD)
    MaxTransferLength // Integer (DWORD)
}

```

**Table 6-252 \_LSI Return Package Values**

Field	Format	Description
Status	<b>Integer</b> (DWORD)	Indicates the status of the _LSI request. 0x00000000 – Success – Returned package is valid 0x00000001 – Failure – The rest of the returned package is not valid
SizeOfLabelStorageArea	<b>Integer</b> (DWORD)	Size of the Label Storage Area in bytes

MaxTransferLength	<b>Integer</b> (DWORD)	Maximum amount of data in bytes supported by a single call to the <i>_LSR</i> and <i>_LSW</i> methods. This is the minimum of the platform supported transfer size and the transfer size supported by the NVDIMM.  0x00000000 - the NVDIMM does not support label storage.  A non-zero value – the NVDIMM supports label storage.
-------------------	---------------------------	---

### 6.5.10.2 \_LSR (Label Storage Read)

This optional object returns label data from the Label Storage Area starting at the specified offset.

Arguments:

Arg0 – Offset (**Integer**(DWORD)) the byte offset in the Label Storage Area to start reading from  
 Arg1 – TransferLength (**Integer**(DWORD)) the number of bytes to transfer from the Label Storage Area. A TransferLength of 0 reads no data.

Return Value:

A **Package** containing label data from the Label Storage Area as described below

Return Value Information:

\_LSR returns a package in the format below

```
Package {
    Status // Integer (DWORD)
    Label Data// Buffer
}
```

**Table 6-253 \_LSR Return Package Values**

Field	Format	Description
Status	Integer (DWORD)	<p>Indicates the status of the _LSR request.</p> <p>0x00000000 – Success            0x00000001 – Failure            0x00000002 – Invalid Input Parameters            -Offset &gt; SizeOfLabelStorageArea reported with _LSI            -Offset + TransferLength &gt; SizeOfLabelStorageArea reported with _LSI            -TransferLength &gt; MaxTransferLength reported with _LSI            0x00000003 – Label Storage Area is locked and cannot be accessed            0x00000004 – HW failure prevented data from being read            Note: Any other non-zero values reflect a failure</p>
LabelData	Buffer	Contains the returned label storage data. The size of the output is equal to <i>TransferLength</i> if <i>Status</i> is Success; otherwise, the contents of the output buffer shall be 0. The format of the Label Storage Area data is defined in UEFI.

### 6.5.10.3 \_LSW (Label Storage Write)

This optional object writes label data to the Label Storage Area starting at the specified offset.

Arguments:

- Arg0 – Offset (Integer(DWORD)) the byte offset in the Label Storage Area to which the Label Data is to be written to the target NVDIMM
- Arg1 – TransferLength (Integer(DWORD)) the number of bytes to transfer to the Label Storage Area. A TransferLength of 0 writes no data.
- Arg2 – LabelData (Buffer) the label data to write in to the Label Storage Area. The size of the LabelData is as indicated by TransferLength field above. The format of the Label Storage Area data is defined in UEFI.

Return Value:

An Integer (DWORD) containing the status of the \_LSW as follows:

0x00000000 – Success  
 0x00000001 – Failure  
 0x00000002 – Invalid Input Parameters  
 Offset > SizeOfLabelStorageArea reported with \_LSI  
 Offset + TransferLength > SizeOfLabelStorageArea reported with \_LSI  
 TransferLength > MaxTransferLength reported with \_LSI  
 0x00000003 – Label Storage Area is locked and cannot be accessed  
 0x00000004 – HW failure prevented data from being written

Note: Any other non-zero values reflect a failure.

# 7 Power and Performance Management

---

This section specifies the objects that support the device power management and system power management models described in [Section 3](#). OSPM uses these objects to manage the platform by achieving a desirable balance between performance and energy conservation goals.

The system state indicator objects are also specified in this section.

## 7.1 Power Resource Objects and the Power Management Models

A Power Resource object refers to a software-controllable power plane, clock plane, or other resource upon which an ACPI power-managed device might rely. The unique way that these power resources are distributed to the devices across a given system sets the constraints within which OSPM must optimize the use of power, by individual devices as well as by the system as a whole. ACPI defines objects that reference power resources (or device states that, in turn, reference power resources) to enable OSPM to discover the constraints and capabilities of a given system. As power is managed during system operation, power savings are obtained by turning power resources off and on at the appropriate times. The following table describes how objects from this section provide the information and control required by OSPM to implement and coordinate the power management models.

**Table 7-254 Power Resource Object Provisions for Information and Control**

Power management function to be performed	System entity performing it	Platform information required	Object providing information	Comments
Choose a supported device state to save power while device is idle	Device Power Policy Owner	List of states (D0 through D3hot, and D3cold) supported by the device	_PRx, PSx	D3cold support is indicated by explicitly providing _PR3. D3hot is assumed to be supported in all cases.
Choose a supported device state to enable a targeted system sleep or Low-power Idle state	Device Power Policy Owner	List of states (D0 through D3hot, and D3cold) supported by the device in the targeted system sleep state	_PRx, Power Resource Declaration, _SxD	_PRx maps device states to Power Resources, Power Resource definition maps Power Resources to system states.  _SxD provides the system state-to-device state mapping explicitly in case power resources do not produce the information.*(See Note, below.)

Power management function to be performed	System entity performing it	Platform information required	Object providing information	Comments
Choose a device state that supports Wake	Device Power Policy Owner	List of supported states, filtered by ability to cause a wake event	_PRW, _SxW	Addition of the requirement for additional power resources listed in _PRW cause wake-incapable states to be removed from the list of supported states (above) _SxW defines the mapping of wake capable device states to system states
Arm a device for wake	OSPM	Control mechanisms for enabling wake at the platform level	_PRW, Wake-capable device interrupt, _DSW	_PRW specifies the GPE bit to enable for wake. On HW-reduced platforms, the wake-capable attribute of a device interrupt indicates which interrupt to enable for wake  _DSW is optional, depending on the needs of the platform wake hardware
Enter a selected device state	OSPM	Control mechanisms for power resources	_ON, _OFF, _PSx	_ON and _OFF control the power resources  _PSx controls other platform hardware relevant to state changes but not exposed to OSPM as power resources.*(See Note, below.)
Choose a targeted system sleep state	System Power Policy Owner	List of supported system Sleep states (S1-S4)	_Sx	S0 and S5 are assumed to be supported in all cases
Enter a selected system state	OSPM	Control mechanisms for system states	_PTS, _TTS and _WAK	If _S5 exists, ACPI uses the SLP_TYP/SLP_EN bit fields in the PM1 Control Register (or the SLEEP_CONTROL/SLEEP_STATUS registers specified in the FADT) If _S5 is not specified, alternative methods are used to turn-off the system.

**Note:** \*Support for Low-power Idle states requires the use of power resources to describe the device state and wake dependencies. See [\\_RDI](#), [Section 8.5](#), and [\\_LPI](#), [Section 8.4.4.3I](#).

## 7.2 Declaring a Power Resource Object

An ASL **PowerResource** statement is used to declare a **PowerResource** object. A Power Resource object refers to a software-controllable power plane, clock plane, or other resource upon which an integrated

ACPI power-managed device might rely. Power resource objects can appear wherever is convenient in the namespace.

The syntax of a **PowerResource** statement is:

**PowerResource (resourcename, systemlevel, resourceorder) {TermList}**

where the *systemlevel* parameter is a number and the *resourceorder* parameter is a numeric constant (a WORD). For a formal definition of the **PowerResource** statement syntax, see [Section 19](#), “ACPI Source Language Reference.”

*Systemlevel* is the deepest system sleep level OSPM must maintain to keep this power resource on (0 equates to S0, 1 equates to S1, and so on).

Each power-managed ACPI device lists the resources it requires for its supported power states. OSPM multiplexes this information from all devices and then enables and disables the required Power Resources accordingly. The *resourceorder* field in the Power Resource object is a value per Power Resource that provides the system with the order in which Power Resources must be enabled or disabled. Each unique *resourceorder* value represents a level, and any number of power resources may have the same level. Power Resource levels are enabled from low values to high values and are disabled from high values to low values. The operating software enables or disables all Power Resources in any one *resourceorder* level at a time before moving on to the next ordered level. Putting Power Resources in different order levels provides power sequencing and serialization where required. Note that no ordering is guaranteed within each level (i.e. between Power Resources with the same *resourceorder* value).

A Power Resource can have named objects under its Namespace location. For a description of the ACPI-defined named objects for a Power Resource, see [Section 7.3](#), “Device Power Management Objects.”

The power management object list is encoded as TermList, so that rather than describing a static power management object list, it is possible to describe a dynamic power management object list according to the system settings. See “[Section 5.4.2](#), Definition Block Loading.”

The following block of ASL sample code shows a use of **PowerResource**.

```
PowerResource(PIDE, 0, 0) {
    Method(_STA) {
        Return (Xor (GIO. IDEI, One, Zero)) // inverse of isolation
    }
    Method(_ON) {
        Store (One, GIO. IDEP)           // assert power
        Sleep (10)                      // wait 10ms
        Store (One, GIO. IDER)          // de-assert reset#
        Stall (10)                     // wait 10us
        Store (Zero, GIO. IDEI)         // de-assert isolation
    }
    Method(_OFF) {
        Store (One, GIO. IDEI)           // assert isolation
        Store (Zero, GIO. IDER)          // assert reset#
        Store (Zero, GIO. IDEP)          // de-assert power
    }
}
```

### 7.2.1 Defined Methods for a Power Resource

[Table 7-255](#) below lists the control methods that may be defined under a power resource. \_ON, \_OFF and \_STA are required to allow basic control of each power resource. \_RST is required in cases where reset of devices is managed through a shared power resource. As OSPM changes the state of device objects in the system, the power resources that are needed will also change, causing OSPM to turn power resources on and off. To determine the initial power resource settings the \_STA method can be used. \_RST is required in cases where reset of devices is controlled through a shared Power Resource. See [Section 7.3.25](#).

**Table 7-255 Power Resource Methods**

Object	Description
_OFF	Set the resource off.
_ON	Set the resource on.
_RST	Object that executes a platform level reset of all devices that list this resource in their _PRR object. (See <a href="#">Section 7.3.25</a> for a description of this object.)
_STA	Object that evaluates to the current on or off state of the Power Resource. 0—OFF, 1—ON

### 7.2.2 \_OFF

This power resource control method puts the power resource into the OFF state. The control method must not complete until the power resource is off, including any required sequencing delays between, or after, operations on the power resource. OSPM is required to turn on or off only one resource at a time. The AML code can use Stall or Sleep within the method to cause the proper sequencing delays. OSPM is not required to run the \_STA method to confirm that the resource has been successfully turned off, and may run the \_OFF method repeatedly, even if the resource is already off.

**Arguments:**

None

**Return Value:**

None

### 7.2.3 \_ON

This power resource control method puts the power resource into the ON state. The control method must not complete until the power resource is on, including any required sequencing delays between, or after, operations on the power resource. OSPM is required to turn on or off only one resource at a time. The AML code can use Stall or Sleep within the method to cause the proper sequencing delays. OSPM is not required to run the \_STA method to confirm that the resource has been successfully turned on, and may run the \_ON method repeatedly, even if the resource is already on.

**Arguments:**

None

**Return Value:**

None

### 7.2.4 \_STA (Status)

Returns the current ON or OFF status for the power resource.

#### Arguments:

None

#### Return Value:

An **Integer** containing the current power status of the device

- 0 – The power resource is currently off
- 1 – The power resource is currently on

### 7.2.5 Passive Power Resources

In some platforms, certain power resources may be shared between devices and processors, requiring both to be in specific idle states before they can be turned off. Direct OSPM control of such resources is not possible while the OS is running because the processors depend on the resources being enabled whilst they are running. It is only when processors go idle that it may be possible to turn off these shared resources. For a given resource of this type this is only possible if, in addition to the processors being idle, any other devices that depend on the resource are in a state that allows powering it down. In these cases, the platform can manage the power resource as part of entry/exit from a Low Power Idle (LPI) state and OSPM can guide the decision on whether or not to turn off the resources with its LPI state request. In those cases the power resource \_ON/\_OFF/\_STA methods are completely redundant.

Passive power resources, which are just like traditional power resources except they do not include \_ON, \_OFF, or \_STA, are introduced to support this case. Omission of these methods reduces overhead by avoiding redundant evaluations and saves the platform from having to supply (working) methods which it does not need. Since OSPM cannot manage passive power resources directly via \_ON/\_OFF, passive power resources must be listed as a dependency of at least one LPI state where the platform will manipulate them. The dependencies between LPI states and power resources are described in the \_RDI object. See RDI [Section 8.4.4.4](#) for additional details.

## 7.3 Device Power Management Objects

For a device that is power-managed using ACPI, a Definition Block contains one or more of the objects found in the table below. Power management of a device is done using Power Resource control.

Power Resources are resources that could be shared amongst multiple devices. The operating software will automatically handle control of these devices by determining which particular Power Resources need to be in the ON state at any given time. This determination is made by considering the state of all devices connected to a Power Resource. At all times, OSPM ensures that any Power Resources no longer referenced by any device in the system is in the OFF state.

For systems that do not control device power states through power resource management (i.e. \_PSx controls power transitions), but whose devices support multiple D-states, more information is required by the OS to determine the S-state to D-state mapping for the device. The ACPI firmware can give this information to OSPM by way of the \_SxD methods. These methods tell OSPM for S-state “x”, the shallowest D-state supported by the device is “y.” OSPM is allowed to pick a deeper D-state for a given S-state, but OSPM is not allowed to go shallower than the given D-state.

Additional rules that apply to device power management objects are:

- A device cannot be in a deeper D-state than its parent device.
- If there exists an ACPI Object to set a device to D0 (either through \_PSx or \_PRx objects), then the corresponding object to set the device into a deeper Dx must also be declared, and vice versa.
- If any ACPI Object that controls power (\_PSx or \_PRx, where x = 0, 1, 2, or 3) exists, then methods to set the device into D0 and D3 device states (at least) must be present.
- If a mixture of \_PSx and \_PRx methods is declared for the device, then the device states supported through \_PSx methods must be identical to the device states supported through \_PRx methods.

When controlling power to devices which must wake the system during a system sleeping state:

- The device must declare its ability to wake the system by declaring either the \_PRW or \_PSW object.
- After OSPM has called \_PTS, it must call the device's \_PSW to enable wake.
- OSPM must transition a device into a D-state which is deeper than or equal to that specified by the device's \_SxD object (if present) to enable entry into Sx, but shallower than or equal to that specified by the device's \_SxW object so that it can still wake the system.
- OSPM may transition the system to the specified sleep state.

**Table 7-256 Device Power Management Child Objects**

Object	Description
_DSW	Control method that enables or disables the device's wake function for device-only wake.
_PS0	Control method that puts the device in the D0 device state (device fully on).
_PS1	Control method that puts the device in the D1 device state.
_PS2	Control method that puts the device in the D2 device state.
_PS3	Control method that puts the device in the D3 device state (device off).
_PSC	Object that evaluates to the device's current power state.
_PRO	Object that evaluates to the device's power requirements in the D0 device state (device fully on).
_PR1	Object that evaluates to the device's power requirements in the D1 device state. The only devices that supply this level are those that can achieve the defined D1 device state according to the related device class.
_PR2	Object that evaluates to the device's power requirements in the D2 device state. The only devices that supply this level are those that can achieve the defined D2 device state according to the related device class.
_PR3	Object that evaluates to the device's power requirements in the D3hot device state.
_PRW	Object that evaluates to the device's power requirements in order to wake the system from a system sleeping state.
_PSW	Control method that enables or disables the device's wake function.
_IRC	Object that signifies the device has a significant inrush current draw.

Object	Description
_S1D	Shallowest D-state supported by the device in the S1 state
_S2D	Shallowest D-state supported by the device in the S2 state
_S3D	Shallowest D-state supported by the device in the S3 state
_S4D	Shallowest D-state supported by the device in the S4 state
_S0W	Deepest D-state supported by the device in the S0 state which can wake the device
_S1W	Deepest D-state supported by the device in the S1 state which can wake the system.
_S2W	Deepest D-state supported by the device in the S2 state which can wake the system.
_S3W	Deepest D-state supported by the device in the S3 state which can wake the system.
_S4W	Deepest D-state supported by the device in the S4 state which can wake the system.
_RST	Control method that executes a function level reset of the device.
_PRR	Object that evaluates to the device's platform level reset requirements.

### 7.3.1 \_DSW (Device Sleep Wake)

In addition to \_PRW, this control method can be used to enable or disable the device's ability to wake a sleeping system. This control method can only access Operation Regions that are either always available while in a system working state or that are available when the Power Resources referenced by the \_PRW object are all ON. For example, do not put a power plane control for a bus controller within configuration space located behind the bus. The method should enable the device only for the last system state/device state combination passed in by OSPM. OSPM will only pass in combinations allowed by the \_SxD and \_SxW objects.

The arguments provided to \_DSW indicate the eventual Device State the device will be transitioned to and the eventual system state that the system will be transitioned to. The target system state is allowed to be the system working state (S0). The \_DSW method will be run before the device is placed in the designated state and also before the system is placed in the designated system state.

Compatibility Note: The \_PSW method was deprecated in ACPI 3.0. The \_DSW method should be used instead. OSPM will only use the \_PSW method if OSPM does not support \_DSW or if the \_DSW method is not present.

#### Arguments: (3)

Arg0 – An **Integer** that contains the device wake capability control

- 0 – Disable the device's wake capabilities
- 1 – Enable the device's wake capabilities

Arg1 – An **Integer** that contains the target system state (0-4)

Arg2 – An **Integer** that contains the target device state

- 0 – The device will remain in state **D0**
- 1 – The device will be placed in either state **D0** or **D1**
- 2 – The device will be placed in either state **D0**, **D1**, or **D2**

3 – The device will be placed in either state **D0**, **D1**, **D2**, or **D3**

**Return Value:**

None

**7.3.2 \_PS0 (Power State 0)**

This Control Method is used to put the specific device into its D0 state. This Control Method can only access Operation Regions that are either always available while in a system working state or that are available when the Power Resources references by the \_PRO object are all ON.

**Arguments:**

None

**Return Value:**

None

**7.3.3 \_PS1 (Power State 1)**

This control method is used to put the specific device into its D1 state. This control method can only access Operation Regions that are either always available while in the system working state (S0) or that are available when the Power Resources referenced by the \_PRO object are all ON.

**Arguments:**

None

**Return Value:**

None

**7.3.4 \_PS2 (Power State 2)**

This control method is used to put the specific device into its D2 state. This control method can only access Operation Regions that are either always available while in the system working state (S0) or that are available when the Power Resources referenced by the \_PRO and \_PR1 objects are all ON.

**Arguments:**

None

**Return Value:**

None

**7.3.5 \_PS3 (Power State 3)**

This control method is used to put the specific device into its D3 state. This control method can only access Operation Regions that are either always available while in the system working state (S0) or that are available when the Power Resources referenced by the \_PRO, \_PR1 and \_PR2 objects are all ON.

**Arguments:**

None

**Return Value:**

None

**7.3.6 \_PSC (Power State Current)**

This control method evaluates to the current device state. This control method is not required if the device state can be inferred by the Power Resource settings. This would be the case when the device does not require a \_PS0, \_PS1, \_PS2, or \_PS3 control method.

**Arguments:**

None

**Return Value:**

An Integer that contains a code for the current device state

The device state codes are shown in [Table 7-257](#).

**Table 7-257 PSC Device State Codes**

Return Value	Device State
0	D0
1	D1
2	D2
3	D3

**7.3.7 \_PSE (Power State for Enumeration)**

This control method is used to put a device into a powered mode appropriate for enumeration by its parent bus. This control method can only access Operation Regions that are either always available while in a system working state or that are available when the Power Resources referenced by the \_PRE object are all ON.

**Arguments: (1)**

Arg1 – An Integer indicating whether Enumeration power has been turned ON or will be turned OFF.

0 – OFF

1 – ON

**Return Value:**

None

**7.3.8 \_PR0 (Power Resources for D0)**

This object evaluates to a list of power resources that are dependent on this device. For OSPM to put the device in the D0 device state, the following must occur:

1. All Power Resources referenced by elements 1 through N must be in the ON state.
2. All Power Resources no longer referenced by any device in the system must be in the OFF state.

3. If present, the \_PS0 control method is executed to set the device into the D0 device state.

**Arguments:**

None

**Return Value:**

A variable-length **Package** containing a list of **References** to power resources

This object returns a package as defined below:

**Table 7-258 Power Resource Requirements Package**

Element	Object	Description
1	object reference	Reference to required Power Resource #0
N	object reference	Reference to required Power Resource #N

\_PR0 must return the same data each time it is evaluated. All power resources referenced must exist in the namespace.

### 7.3.9 \_PR1 (Power Resources for D1)

This object evaluates to a list of power resources upon which this device is dependent when it is in the D1 state. For OSPM to transition the device from the D0 state into the D1 state, the following must occur, in order:

1. If present, the \_PS1 control method is executed to set the device into the D1 device state.
2. All Power Resources referenced by elements 1 through N must be in the ON state.
3. All Power Resources no longer referenced by any device in the system must be in the OFF state.

**Arguments:**

None

**Return Value:**

A variable-length **Package** containing a list of **References** to power resources

This object evaluates to a package as defined in [Table 7-258](#).

\_PR1 must return the same data each time it is evaluated. All power resources referenced must exist in the namespace.

### 7.3.10 \_PR2 (Power Resources for D2)

This object evaluates to a list of power resources upon which this device is dependent when it is in the D2 state. For OSPM to transition the device into the D2 state, the following must occur, in order:

1. If present, the \_PS2 control method is executed to set the device into the D2 device state.
2. All Power Resources referenced by elements 1 through N must be in the ON state.
3. All Power Resources no longer referenced by any device in the system must be in the OFF state.

**Arguments:**

None

**Return Value:**

A variable-length **Package** containing a list of **References** to power resources

\_PR2 must return the same data each time it is evaluated. All power resources referenced must exist in the namespace.

**7.3.11 \_PR3 (Power Resources for D3hot)**

This object evaluates to a list of power resources upon which this device is dependent when it is in the D3hot state. For OSPM to transition the device into the D3hot state, the following must occur, in order:

1. If present, the \_PS3 control method is executed to set the device into the D3hot device state.
2. All Power Resources referenced by elements 1 through N must be in the ON state.
3. All Power Resources no longer referenced by any device in the system must be in the OFF state.

**Arguments:**

None

**Return Value:**

A variable-length **Package** containing a list of **References** to power resources

\_PR3 must return the same data each time it is evaluated. All power resources referenced must exist in the namespace.

Interaction between \_PR3 and entry to D3/D3hot (only applicable if platform and OSPM have performed the necessary handshake via \_OSC):

- Platform/drivers must assume that the device will have power completely removed when the device is placed into “D3” via \_PS3
- It is up to OSPM to determine whether to use D3 or D3hot. If there is a \_PR3 for the device, it is up to OSPM to decide whether to keep those power resources on or off after executing \_PS3. The decision may be based on other factors (e.g., being armed for wake).

**7.3.12 \_PRE (Power Resources for Enumeration)**

This object appears under a device and evaluates to a list of power resources that are required for enumeration of the device by its parent bus. For the bus driver to enumerate any devices while they are in the D3Cold device state, OSPM must ensure that the following occur:

1. All Power Resources referenced by elements 1 through N must be in the ON state.
2. If present, the \_PSE control method is executed to perform any actions on the device to make it accessible for enumeration.

**Arguments:**

None

**Return Value:**

A variable-length **Package** containing a list of **References** to power resources.

\_PRE must return the same data each time it is evaluated. All power resources referenced must exist in the namespace.

### 7.3.13 \_PRW (Power Resources for Wake)

This object evaluates to a list of power resources upon which this device depends for wake. It also contains additional information needed for wake, including wake events and sleep or soft-off state information. \_PRW is only required for devices that have the ability to wake the system from a system sleeping state.

Four types of general purpose events are supported:

- GPEs that are defined by a GPE block described within the FADT.
- GPEs that are defined by a GPE Block Device.
- GPIO-signaled events that are defined by \_AEI object of the GPIO controller device
- Interrupt-signaled events that are defined by \_CRS object of the Generic Event Device (GED)

The four types of events are differentiated by the type of the *EventInfo* object in the returned package. For FADT-based GPEs, *EventInfo* is an **Integer** containing a bit index. For Block Device-based GPEs, *EventInfo* is a **Package** containing a **Reference** to the parent block device and an **Integer** containing a bit index. For GPIO-signaled events, *EventInfo* is a **Package** containing a Reference to the GPIO controller device and an **Integer** containing the index of the event in the \_AEI object (starting from zero). For Interrupt-signaled events, *EventInfo* is a **Package** containing a **Reference** to the GED and an **Integer** containing the index of the event in the \_CRS object (starting from zero).

For HW-Reduced ACPI platforms that do not support wake on GPIO-signaled or Interrupt-signaled events, the *EventInfo* structure is an Integer with value of zero, and is ignored by OSPM. Therefore, \_PRW is only required on such platforms if power resources for wakeup must be managed by OSPM (e.g. the \_PRW provides a list of Power Resources). Instead, for a device to wake the system, its interrupt must be wake-capable and enabled by the driver. See [Section 3.11.1.1 "Interrupt-based Wake Events"](#).

#### Arguments:

None

#### Return Value:

A variable-length **Package** containing wake information and a list of **References** to power resources

#### Return Value Information

```
Package {
    EventInfo           // Integer or Package
    DeepestSleepState   // Integer
    PowerResource [0]    // Reference
    ...
    PowerResource [n]    // Reference
}
```

If *EventInfo* is a **Package**, it contains event block device information as described below:

```
Package {
    DeviceName          // Reference
    Index               // Integer
}
```

*EventInfo* may be either an **Integer** or a **Package**, depending on the event type:

- If it is an **Integer**, then it contains the bit index of the wake event within the FADT-based GPE enable register.
- If it is a **Package**, then the package contains event info for an event within either a GPE block device, GPIO controller device, or a GED. It contains a **Reference** to the device and an **Integer**. If *EventInfo* references a GPE block device, the integer contains the bit index of the wake GPE within the Block Device-based GPE enable register. If the *EventInfo* references a GPIO controller device, the integer contains the zero-based index of the event within the **\_AEI** object. If the *EventInfo* references a GED, the integer contains the zero-based index of the event within the **\_CRS** object.

*DeepestSleepState* is an **Integer** that contains the deepest power system sleeping state that can be entered while still providing wake functionality.

*PowerResource 0-n* are **References** to required power resource objects.

### Additional Information

For OSPM to have the defined wake capability properly enabled for the device, the following must occur:

1. All Power Resources referenced by elements 2 through N are put into the ON state.
  - a. If present, the **\_DSW** control method is executed to set the device-specific registers to enable the wake functionality of the device.
  - b. The D-state being entered must be deeper than or equal to that specified in the **\_SxD** state but shallower than or equal to that specified in the **\_SxW** state.

Then, if the system enters a sleeping state OSPM must ensure:

1. Interrupts are disabled.
2. The sleeping state being entered must be less than or equal to the power state declared in element 1 of the **\_PRW** object.
3. The proper general-purpose register bits are enabled.

The system sleeping state specified must be a state that the system supports (in other words, a corresponding **\\_Sx** object must exist in the namespace).

**\_PRW** must return the same data each time it is evaluated. All power resources referenced must exist in the namespace.

### 7.3.14 **\_PSW** (Power State Wake)

In addition to the **\_PRW** control method, this control method can be used to enable or disable the device's ability to wake a sleeping system. This control method can only access Operation Regions that are either always available while in a system working state or that are available when the Power Resources references by the **\_PRW** object are all ON. For example, do not put a power plane control for a bus controller within configuration space located behind the bus.

**Note:** Regarding compatibility--The \_PSW method was deprecated in ACPI 3.0. OSPM must use \_DSW if it is present. Otherwise, it may use \_PSW.

#### Arguments: (1)

Arg0 – An **Integer** containing a wake capability control

- 0 – Disable the device's wake capabilities
- 1 – Enable the device's wake capabilities

#### Return Value:

None

### 7.3.15 \_IRC (In Rush Current)

Indicates that this device can cause a significant in-rush current when transitioning to state **D0**.

#### Arguments:

None

#### Return Value:

None

The presence of this object signifies that transitioning the device to its D0 state causes a system-significant in-rush current load. In general, such operations need to be serialized such that multiple operations are not attempted concurrently. Within ACPI, this type of serialization can be accomplished with the *ResourceOrder* parameter of the device's Power Resources; however, this does not serialize ACPI-controlled devices with non-ACPI controlled devices. \_IRC is used to signify this fact outside of OSPM to OSPM such that OSPM can serialize all devices in the system that have in-rush current serialization requirements.

OSPM can only transition one device containing an \_IRC object within its device scope to the D0 state at a time.

It is important to note that OSPM does not evaluate the \_IRC object. It has no defined input arguments nor does it return any value. OSPM derives meaning simply from the existence of the \_IRC object.

### 7.3.16 \_S1D (S1 Device State)

This object evaluates to an integer that conveys to OSPM the shallowest D-state supported by this device in the S1 system sleeping state. \_S1D must return the same integer each time it is evaluated. This value overrides an S-state to D-state mapping OSPM may ascertain from the device's power resource declarations. See [Table 7-257](#) for valid return values.

#### Arguments:

None

#### Return Value:

An **Integer** containing the shallowest D-state supported in state **S1**

If the device can wake the system from the S1 system sleeping state (see \_PRW) then the device must support wake in the D-state returned by this object. However, OSPM cannot assume wake from the S1

system sleeping state is supported in any deeper D-state unless specified by a corresponding \_S1W object. The table below provides a mapping from Desired Actions to Resultant D-state entered based on the values returned from the \_S1D, \_PRW, and \_S1W objects if they exist . (D/C means Don't Care – evaluation is irrelevant, and N/A means Non Applicable – object does not exist).

**Table 7-259 S1 Action / Result Table**

Desired Action	_S1D	_PRW	_S1W	Resultant D-state
Enter S1	D/C	D/C	D/C	OSPM decides
Enter S1, No Wake	2	D/C	D/C	Enter D2 or D3
Enter S1, Wake	2	1	N/A	Enter D2
Enter S1, Wake	2	1	3	Enter D2 or D3
Enter S1, Wake	N/A	1	2	Enter D0,D1 or D2

### 7.3.17 \_S2D (S2 Device State)

This object evaluates to an integer that conveys to OSPM the shallowest D-state supported by this device in the S2 system sleeping state. \_S2D must return the same integer each time it is evaluated. This value overrides an S-state to D-state mapping OSPM may ascertain from the device's power resource declarations. See [Table 7-257](#) for valid return values.

#### Arguments:

None

#### Return Value:

An **Integer** containing the shallowest D-state supported in state **S2**

If the device can wake the system from the S2 system sleeping state (see \_PRW) then the device must support wake in the D-state returned by this object. However, OSPM cannot assume wake from the S2 system sleeping state is supported in any deeper D-state unless specified by a corresponding \_S2W object. The table below provides a mapping from Desired Actions to Resultant D-state entered based on the values returned from the \_S2D, \_PRW, and \_S2W objects if they exist . (D/C means Don't Care – evaluation is irrelevant, and N/A means Non Applicable – object does not exist).

**Table 7-260 S2 Action / Result Table**

Desired Action	_S2D	_PRW	_S2W	Resultant D-state
Enter S2	D/C	D/C	D/C	OSPM decides
Enter S2, No Wake	2	D/C	D/C	Enter D2 or D3
Enter S2, Wake	2	2	N/A	Enter D2
Enter S2, Wake	2	2	3	Enter D2 or D3
Enter S2, Wake	N/A	2	2	Enter D0,D1 or D2

### 7.3.18 \_S3D (S3 Device State)

This object evaluates to an integer that conveys to OSPM the shallowest D-state supported by this device in the S3 system sleeping state. \_S3D must return the same integer each time it is evaluated. This value overrides an S-state to D-state mapping OSPM may ascertain from the device's power resource declarations. See [Table 7-257](#) for valid return values.

#### Arguments:

None

#### Return Value:

An **Integer** containing the shallowest D-state supported in state **S3**

If the device can wake the system from the S3 system sleeping state (see \_PRW) then the device must support wake in the D-state returned by this object. However, OSPM cannot assume wake from the S3 system sleeping state is supported in any deeper D-state unless specified by a corresponding \_S3W object. The table below provides a mapping from Desired Actions to Resultant D-state entered based on the values returned from the \_S3D, \_PRW, and \_S3W objects if they exist. (D/C means Don't Care – evaluation is irrelevant, and N/A means Non Applicable – object does not exist).

**Table 7-261 S3 Action / Result Table**

Desired Action	_S3D	_PRW	_S3W	Resultant D-state
Enter S3	N/A	D/C	N/A	OSPM decides
Enter S3, No Wake	2	D/C	D/C	Enter D2 or D3
Enter S3, Wake	2	3	N/A	Enter D2
Enter S3, Wake	2	3	3	Enter D2 or D3
Enter S3, Wake	N/A	3	2	Enter D0, D1 or D2

### 7.3.19 \_S4D (S4 Device State)

This object evaluates to an integer that conveys to OSPM the shallowest D-state supported by this device in the S4 system sleeping state. \_S4D must return the same integer each time it is evaluated. This value overrides an S-state to D-state mapping OSPM may ascertain from the device's power resource declarations. See Table 7-3 for valid return values.

#### Arguments:

None

#### Return Value:

An **Integer** containing the shallowest D-state supported in state **S4**

If the device can wake the system from the S4 system sleeping state (see \_PRW) then the device must support wake in the D-state returned by this object. However, OSPM cannot assume wake from the S4 system sleeping state is supported in any deeper D-state unless specified by a corresponding \_S4W object. The table below provides a mapping from Desired Actions to Resultant D-state entered based on the values returned from the \_S4D, \_PRW, and \_S4W objects if they exist. (D/C means Don't Care – evaluation is irrelevant, and N/A means Non Applicable – object does not exist).

**Table 7-262 S4 Action / Result Table**

Desired Action	_S4D	_PRW	_S4W	Resultant D-state
Enter S4	N/A	D/C	N/A	OSPM decides
Enter S4, No Wake	2	D/C	D/C	Enter D2 or D3
Enter S4, Wake	2	4	N/A	Enter D2
Enter S4, Wake	2	4	3	Enter D2 or D3
Enter S4, Wake	N/A	4	2	Enter D0, D1 or D2

### 7.3.20 \_S0W (S0 Device Wake State)

This object evaluates to an integer that conveys to OSPM the deepest D-state supported by this device in the S0 system sleeping state *where the device can wake itself*.

#### Arguments:

None

#### Return Value:

An **Integer** containing the deepest D-state that supports wake in state **S0**. If OSPM has not indicated that it supports \_PR3 through the OSPM Platform-Wide Capabilities (see [Section 6.2.11.2](#)), then the value "3" corresponds to D3. If it has indicated \_PR3 support, the value "3" represents D3hot and the value "4" represents D3cold.

\_S0W must return the same integer each time it is evaluated. This value allows OSPM to choose the deepest power D-state and still achieve wake functionality. If object evaluates to zero, then the device cannot wake itself from any deeper D state.

### 7.3.21 \_S1W (S1 Device Wake State)

This object evaluates to an integer that conveys to OSPM the deepest D-state supported by this device in the S1 system sleeping state *that can wake the system*.

#### Arguments:

None

#### Return Value:

An Integer containing the deepest D-state that supports wake in state **S1**. If OSPM has not indicated that it supports \_PR3 through the OSPM Platform-Wide Capabilities (see [Section 6.2.11.2](#)), then the value "3" corresponds to D3. If it has indicated \_PR3 support, the value "3" represents D3hot and the value "4" represents D3cold.

\_S1W must return the same integer each time it is evaluated. This value allows OSPM to choose a deeper S-state to D-state mapping than specified by \_S1D. This value must always be greater than or equal to \_S1D, if \_S1D is present.

### 7.3.22 \_S2W (S2 Device Wake State)

This object evaluates to an integer that conveys to OSPM the deepest D-state supported by this device in the S2 system sleeping state *that can wake the system*.

**Arguments:**

None

**Return Value:**

An **Integer** containing the deepest D-state that supports wake in state **S2**. If OSPM has not indicated that it supports \_PR3 through the OSPM Platform-Wide Capabilities (see [Section 6.2.11.2](#)), then the value "3" corresponds to D3. If it has indicated \_PR3 support, the value "3" represents D3hot and the value "4" represents D3cold.

\_S2W must return the same integer each time it is evaluated. This value allows OSPM to choose a deeper S-state to D-state mapping than specified by \_S2D. This value must always be greater than or equal to \_S2D, if \_S2D is present.

### 7.3.23 \_S3W (S3 Device Wake State)

This object evaluates to an integer that conveys to OSPM the deepest D-state supported by this device in the S3 system sleeping state *that can wake the system*.

**Arguments:**

None

**Return Value:**

An **Integer** containing the deepest D-state that supports wake in state **S3**. If OSPM has not indicated that it supports \_PR3 through the OSPM Platform-Wide Capabilities (see [Section 6.2.11.2](#)), then the value "3" corresponds to D3. If it has indicated \_PR3 support, the value "3" represents D3hot and the value "4" represents D3cold.

\_S3W must return the same integer each time it is evaluated. This value allows OSPM to choose a deeper S-state to D-state mapping than specified by \_S3D. This value must always be greater than or equal to \_S3D, if \_S3D is present.

### 7.3.24 \_S4W (S4 Device Wake State)

This object evaluates to an integer that conveys to OSPM the deepest D-state supported by this device in the S4 system sleeping state *that can wake the system*.

**Arguments:**

None

**Return Value:**

An **Integer** containing the deepest D-state that supports wake in state **S4**. If OSPM has not indicated that it supports \_PR3 through the OSPM Platform-Wide Capabilities (see [Section 6.2.11.2](#)), then the value "3" corresponds to D3. If it has indicated \_PR3 support, the value "3" represents D3hot and the value "4" represents D3cold.

\_S4W must return the same integer each time it is evaluated. This value allows OSPM to choose a deeper S-state to D-state mapping than specified by \_S4D. This value must always be greater than or equal to \_S4D, if \_S4D is present.

### 7.3.25 \_RST (Device Reset)

This object executes a reset on the associated device or devices. If included in a device context, the reset must not affect any other ACPI-described devices; if included in a power resource for reset (\_PRR, [Section 7.3.26](#)) the reset must affect all ACPI-described devices that reference it.

When this object is described in a device context, it executes a function level reset that only affects the device it is associated with; neither parent nor children should be affected by the execution of this reset. Executing this must only result in this device resetting without the device appearing as if it has been removed from the bus altogether, to prevent OSPM re-enumeration of devices on hot-pluggable buses (e.g. USB).

If a device reset is supported by the platform, but cannot meet the function level and bus requirement, the device should instead implement a \_PRR ([Section 7.3.26](#)).

Devices can define both a \_RST and a \_PRR if supported by the hardware.

**Arguments:**

None

**Return Value:**

None

### 7.3.26 \_PRR (Power Resource for Reset)

This object evaluates to a single reference to a power resource. The power resource that this references must implement a \_RST method ([Section 7.3.25](#)).

**Arguments:**

None

**Return Value:**

A single element **Package** containing a **Reference** to the power reset resource.

## 7.4 OEM-Supplied System-Level Control Methods

An OEM-supplied Definition Block provides some number of controls appropriate for system-level management. These are used by OSPM to integrate to the OEM-provided features. The following table lists the defined OEM system controls that can be provided.

**Table 7-263 BIOS-Supplied Control Methods for System-Level Functions**

Object	Description
\_PTS	Control method used to notify the platform of impending sleep transition.
\_S0	Package that defines system \_S0 state mode.
\_S1	Package that defines system \_S1 state mode.
\_S2	Package that defines system \_S2 state mode.
\_S3	Package that defines system \_S3 state mode.

\_S4	Package that defines system \_S4 state mode.
\_S5	Package that defines system \_S5 state mode.
\_TTS	Control method used to prepare to sleep and run once awakened
\_WAK	Control method run once awakened.

**Note:** *Compatibility issue: The \_BFS (Back From Sleep) and \_GTS (Going To Sleep) methods were deprecated in ACPI 5.0A.*

#### 7.4.1 \\_PTS (Prepare To Sleep)

The \_PTS control method is executed by the OS during the sleep transition process for S1, S2, S3, S4, and for orderly S5 shutdown. The sleeping state value (For example, 1, 2, 3, 4 or 5 for the S5 soft-off state) is passed to the \_PTS control method. This method is called after OSPM has notified native device drivers of the sleep state transition and before the OSPM has had a chance to fully prepare the system for a sleep state transition. Thus, this control method can be executed a relatively long time before actually entering the desired sleeping state. If OSPM aborts the sleep state transition, OSPM should run the \_WAK method to indicate this condition to the platform.

**Arguments (1):**

Arg0 – An **Integer** containing the value of the sleeping state (1 for **S1**, 2 for **S2**, etc.)

**Return Value:**

None

The \_PTS control method cannot modify the current configuration or power state of any device in the system. For example, \_PTS would simply store the sleep type in the embedded controller in sequencing the system into a sleep state when the SLP\_EN bit is set.

The platform must not make any assumptions about the state of the machine when \_PTS is called. For example, operation region accesses that require devices to be configured and enabled may not succeed, as these devices may be in a non-decoding state due to plug and play or power management operations.

#### 7.4.2 \\_Sx (System States)

All system states supported by the system must provide a package containing the DWORD value of the following format in the static Definition Block. The system states, known as S0–S5, are referenced in the namespace as \\_S0–\\_S5 and for clarity the short Sx names are used unless specifically referring to the named \\_Sx object. For each Sx state, there is a defined system behavior.

**Arguments:**

None

**Return Value:**

A **Package** containing an **Integer** containing register values for sleeping

**Table 7-264 System State Package**

Byte Length	Byte Offset	Description
1	0	Value for PM1a_CNT.SLP_TYP register to enter this system state. On HW-reduced platforms, this is the HW-reduced Sleep Type value for SLEEP_CONTROL_REG.SLP_TYP.
1	1	Value for PM1b_CNT.SLP_TYP register to enter this system state. To enter any given state, OSPM must write the PM1a_CNT.SLP_TYP register before the PM1b_CNT.SLP_TYP register. On HW-reduced platforms, this value is ignored.
2	2	Reserved

States S1–S4 represent some system sleeping state. The S0 state is the system working state. Transition into the S0 state from some other system state (such as sleeping) is automatic, and, by virtue that instructions are being executed, OSPM assumes the system to be in the S0 state. Transition into any system sleeping state is only accomplished by the operating software directing the hardware to enter the appropriate state, and the operating software can only do this within the requirements defined in the Power Resource and Bus/Device Package objects.

All run-time system state transitions (for example, to and from the S0 state), except S4 and S5, are done similarly such that the code sequence to do this is the following:

```
/*
 *      Intel Architecture SetSleepingState example
 */

ULONG
SetSystemSleeping (
    IN     ULONG     NewState
)
{
    PROCESSOR_CONTEXT     Context;
    ULONG                 PowerSequence;
    BOOLEAN                FlushCaches;
    USHORT                 SleepTyp;

    // Required environment: Executing on the system boot
    // processor. All other processors stopped. Interrupts
    // disabled. All Power Resources (and devices) are in
    // corresponding device state to support NewState.

    // Get h/w attributes for this system state
    FlushCaches = SleepType[NewState].FlushCache;
    SleepTyp     = SleepType[NewState].SleepTyp & SLP_TYP_MASK;

    _asm {
        lea     eax, OsResumeContext
        push    eax                      ; Build real mode handler the resume
        push    offset sp50              ; context, with eip = sp50
        call   SaveProcessorState
    }
}
```

```

    mov    eax, ResumeVector      ; set firmware's resume vector
    mov    [eax], offset OsRealModeResumeCode

    mov    edx, PM1a_STS         ; Make sure wake status is clear
    mov    ax, WAK_STS           ; (cleared by asserting the bit
    out    dx, ax                ; in the status register)

    mov    edx, PM1b_STS         ;
    out    dx, ax                ;

    and    eax, not SLP_TYP_MASK
    or     eax, SLP_TYP          ; set SLP_TYP
    or     ax, SLP_EN            ; set SLP_EN

    cmp    FlushCaches, 0
    jz    short sp10             ; If needed, ensure no dirty data in

    call   FlushProcessorCaches ; the caches while sleeping

sp10:   mov    edx, PM1a_SLP_TYP
        out    dx, ax              ; get address for PM1a_SLP_TYP
        mov    edx, PM1b_SLP_TYP
        out    dx, ax              ; start h/w sequencing
        mov    edx, PM1a_STS        ; get address for PM1x_STS
        mov    ecx, PM1b_STS

sp20:   in    ax, dx              ; wait for WAK status
        xchg  edx, ecx
        test   ax, WAK_STS
        jz    short sp20

sp50:   }

// Done..
*ResumeVector = NULL;
return 0;
}

```

On HW-reduced ACPI platforms all run-time system state transitions (for example, to and from the S0 state) are done similarly, but include the following instead of PM1\*\_BLK register bit manipulation:

After ensuring that any desired wake-capable interrupts are enabled, OSPM writes the HW-reduced Sleep Type value to the Sleep Control Register and spins waiting for the WAK\_STS bit of the Sleep Status Register to be set, indicating a platform transition to the Working state.

#### 7.4.2.1 System \\_S0 State (Working)

While the system is in the S0 state, it is in the system working state. The behavior of this state is defined as:

- The processors are either running, or in a C-state, or in an LPI state. The processor-complex context is maintained and instructions are executed as defined by any of these processor states.
- Dynamic RAM context is maintained and is read/write by the processors.
- Devices states are individually managed by the operating software and can be in any device state (D0, D1, D2, D3hot, or D3).
- Power Resources are in a state compatible with the current device states.

Transition into the S0 state from some system sleeping state is automatic, and by virtue that instructions are being executed OSPM, assumes the system to be in the S0 state.

#### **7.4.2.2 System \\_S1 State (Sleeping with Processor Context Maintained)**

While the system is in the S1 sleeping state, its behavior is the following:

- The processors are not executing instructions. The processor-complex context is maintained.
- Dynamic RAM context is maintained.
- Power Resources are in a state compatible with the system S1 state. All Power Resources that supply a System-Level reference of S0 are in the OFF state.
- Devices states are compatible with the current Power Resource states. Only devices that solely reference Power Resources that are in the ON state for a given device state can be in that device state. In all other cases, the device is in the D3 (off) state<sup>1</sup>.
- Devices that are enabled to wake the system and that can do so from their current device state can initiate a hardware event that transitions the system state to S0. This transition causes the processor to continue execution where it left off.

To transition into the S1 state, the OSPM must flush all processor caches.

#### **7.4.2.3 System \\_S2 State**

The S2 sleeping state is logically deeper than the S1 state and is assumed to conserve more power. The behavior of this state is defined as:

- The processors are not executing instructions. The processor-complex context is not maintained.
- Dynamic RAM context is maintained.
- Power Resources are in a state compatible with the system S2 state. All Power Resources that supply a System-Level reference of S0 or S1 are in the OFF state.
- Devices states are compatible with the current Power Resource states. Only devices that solely reference Power Resources that are in the ON state for a given device state can be in that device state. In all other cases, the device is in the D3 (off) state.
- Devices that are enabled to wake the system and that can do so from their current device state can initiate a hardware event that transitions the system state to S0. This transition causes the processor to begin execution at its boot location. The platform runtime firmware performs initialization of core functions as needed to exit an S2 state and passes control to the firmware resume vector. See [Section 16.3.2](#) for more details on platform firmware initialization.

---

1. Or it is at least assumed to be in the D3 state by its device driver. For example, if the device doesn't explicitly describe how it can stay in some non-off state while the system is in a sleeping state, the operating software must assume that the device can lose its power and state.

Because the processor context can be lost while in the S2 state, the transition to the S2 state requires that the operating software flush all dirty cache to dynamic RAM (DRAM).

#### 7.4.2.4 System \\_S3 State

The S3 state is logically deeper than the S2 state and is assumed to conserve more power. The behavior of this state is defined as follows:

- The processors are not executing instructions. The processor-complex context is not maintained.
- Dynamic RAM context is maintained.
- Power Resources are in a state compatible with the system S3 state. All Power Resources that supply a System-Level reference of S0, S1, or S2 are in the OFF state.
- Devices states are compatible with the current Power Resource states. Only devices that solely reference Power Resources that are in the ON state for a given device state can be in that device state. In all other cases, the device is in the D3 (off) state.
- Devices that are enabled to wake the system and that can do so from their current device state can initiate a hardware event that transitions the system state to S0. This transition causes the processor to begin execution at its boot location. The platform runtime firmware performs initialization of core functions as necessary to exit an S3 state and passes control to the firmware resume vector. See [Section 16.3.2](#) for more details on platform firmware initialization.

From the software viewpoint, this state is functionally the same as the S2 state. The operational difference can be that some Power Resources that could be left ON to be in the S2 state might not be available to the S3 state. As such, additional devices may need to be in a deeper state for S3 than S2. Similarly, some device wake events can function in S2 but not S3.

Because the processor context can be lost while in the S3 state, the transition to the S3 state requires that the operating software flush all dirty cache to DRAM.

#### 7.4.2.5 System \\_S4 State

While the system is in this state, it is in the system S4 sleeping state. The state is logically deeper than the S3 state and is assumed to conserve more power. The behavior of this state is defined as follows:

- The processors are not executing instructions. The processor-complex context is not maintained.
- DRAM context is not maintained.
- Power Resources are in a state compatible with the system S4 state. All Power Resources that supply a System-Level reference of S0, S1, S2, or S3 are in the OFF state.
- Devices states are compatible with the current Power Resource states. In other words, all devices are in the D3 state when the system state is S4.
- Devices that are enabled to wake the system and that can do so from their device state in S4 can initiate a hardware event that transitions the system state to S0. This transition causes the processor to begin execution at its boot location.

After OSPM has executed the \_PTS control method and has put the entire system state into main memory, there are two ways that OSPM may handle the next phase of the S4 state transition; saving and restoring main memory. The first way is to use the operating system's drivers to access the disks and file system structures to save a copy of memory to disk and then initiate the hardware S4 sequence by

setting the SLP\_EN register bit. When the system wakes, the firmware performs a normal boot process and transfers control to the OS via the firmware\_waking\_vector loader. The OS then restores the system's memory and resumes execution.

The alternate method for entering the S4 state is to utilize the platform runtime firmware via the S4BIOS transition. The platform runtime firmware uses firmware to save a copy of memory to disk and then initiates the hardware S4 sequence. When the system wakes, the firmware restores memory from disk and wakes OSPM by transferring control to the FACS waking vector.

The S4BIOS transition is optional, but any system that supports this mechanism must support entering the S4 state via the direct OS mechanism. Thus the preferred mechanism for S4 support is the direct OS mechanism as it provides broader platform support. The alternate S4BIOS transition provides a way to achieve S4 support on operating systems that do not have support for the direct method.

#### 7.4.2.6 System \\_S5 State (Soft Off)

The S5 state is similar to the S4 state except that OSPM does not save any context. The system is in the soft off state and requires a complete boot when awakened (platform boot firmware and OS). Software uses a different state value to distinguish between this state and the S4 state to allow for initial boot operations within the platform boot firmware to distinguish whether or not the boot is going to wake from a saved memory image. OSPM does not disable wake events before setting the SLP\_EN bit when entering the S5 system state. This provides support for remote management initiatives by enabling Remote Start capability. An ACPI-compliant OS must provide an end user accessible mechanism for disabling all wake devices, with the exception of the system power button, from a single point in the user interface.

#### 7.4.3 \_SWS (System Wake Source)

This object provides a means for OSPM to definitively determine the source of an event that caused the system to enter the S0 state. General-purpose event and fixed-feature hardware registers containing wake event sources information are insufficient for this purpose as the source event information may not be available after transitions to the S0 state from all other system states (S1-S5).

To determine the source event that caused the system to transition to the S0 state, OSPM will evaluate the \_SWS object, when it exists, under the \\_GPE scope (for all fixed-feature general-purpose events from the GPE Blocks), under the \\_SB scope (for fixed-feature hardware events), and within the scope of a GPE Block device (for GPE events from this device). \_SWS objects may exist in any or all of these locations as necessary for the platform to determine the source event that caused the system to transition to the S0 state.

##### Arguments:

None

##### Return Value:

An Integer containing the *Source Event* as described below

The value of the *Source Event* is dependent on the location of the \_SWS object:

1. If \_SWS is evaluated under the \\_GPE scope, *Source Event* is the index of the GPE that caused the system to transition to S0.

2. If `_SWS` is evaluated within the scope of a GPE block device, `Source Event` is the index of the GPE that caused the system to transition to **S0**. In this case, the index is relative to the GPE block device and is not unique system-wide.
3. If `_SWS` is evaluated under the `\_SB` scope, `Source Event` is the the index in the PM1 status register that caused the system to transition to **S0**.

In all cases above, if the cause of the **S0** transition cannot be determined, `_SWS` returns **Ones** (-1).

To enable OSPM to determine the source of the S0 state transition via the `_SWS` object, the hardware or firmware should detect and save the event that caused the transition so that it can be returned during `_SWS` object evaluation. The single wake source for the system may be latched in hardware during the transition so that no false wake events can be returned by `_SWS`. An implementation that does not use hardware to latch a single wake source for the system and instead uses firmware to save the wake source must do so as quickly as possible after the wakeup event occurs, so that `_SWS` does not return values that correspond to events that occurred after the sleep-to-wake transition. Such an implementation must also take care to ensure that events that occur subsequent to the wakeup source being saved do not overwrite the original wakeup source.

The source event data returned by `_SWS` must be determined for each transition into the S0 state. The value returned by `_SWS` must also be persistent during the system's residency in the S0 state as OSPM may evaluate `_SWS` multiple times. In this case, the platform must return the same source event information for each invocation.

After evaluating an `_SWS` object within the `\_GPE` scope or within the scope of a GPE block device, OSPM will invoke the `_Wxx` control method corresponding to the GPE index returned by `_SWS` if it exists. This allows the platform to further determine source event if the GPE is shared among multiple devices. See [Section 5.6.4.2.2](#) for details.

#### 7.4.4 `\_TTS` (Transition To State)

The `_TTS` control method is executed by the OSPM at the beginning of the sleep transition process for S1, S2, S3, S4, and orderly S5 shutdown. OSPM will invoke `_TTS` before it has notified any native mode device drivers of the sleep state transition. The sleeping state value (For example, 1, 2, 3, 4 or 5 for the S5 soft-off state) is passed to the `_TTS` control method.

The `_TTS` control method is also executed by the OSPM at the end of any sleep transition process when the system transitions to S0 from S1, S2, S3, or S4. OSPM will invoke `_TTS` after it has notified any native mode device drivers of the end of the sleep state transition. The working state value (0) is passed to the `_TTS` control method.

##### **Arguments:** (1)

Arg0 – An **Integer** containing the value of the sleeping state (1 for S1, 2 for S2, etc.)

##### **Return Value:**

None

If OSPM aborts the sleep transition process, OSPM will still run `_TTS` for an S0 transition to indicate the OSPM has returned to the S0 state. The platform must assume that if OSPM invokes the `_TTS` control method for an S1, S2, S3, or S4 transition, that OSPM will invoke `_TTS` control method for an S0 transition before returning to the S0 state.

The platform must not make any assumptions about the state of the machine when \_TTS is called. For example, operation region accesses that require devices to be configured and enabled may not succeed, as these devices may be in a non-decoding state due to plug and play or power management operations.

### 7.4.5 \\_WAK (System Wake)

After the system wakes from a sleeping state, it will invoke the \\_WAK method and pass the sleeping state value that has ended. This operation occurs asynchronously with other driver notifications in the system and is not the first action to be taken when the system wakes. The AML code for this control method issues device, thermal, and other notifications to ensure that OSPM checks the state of devices, thermal zones, and so on, that could not be maintained during the system sleeping state. For example, if the system cannot determine whether a device was inserted or removed from a bus while in the S2 state, the \\_WAK method would issue a *devicecheck* type of notification for that bus when issued with the sleeping state value of 2 (for more information about types of notifications, see [Section 5.6.6](#), “Device Object Notifications”). Notice that a device check notification from the \\_SB node will cause OSPM to reenumerate the entire tree<sup>2</sup>.

Hardware is not obligated to track the state needed to supply the resulting status; however, this method must return status concerning the last sleep operation initiated by OSPM. The return values can be used to provide additional information to OSPM or user.

#### Arguments: (1)

Arg0 – An **Integer** containing the value of the sleeping state (1 for S1, 2 for S2, etc.)

#### Return Value:

A **Package** containing two **Integers** containing status and the power supply S-state

#### Return Value Information

\\_WAK returns a package with the following format:

Element 0 – An **Integer** containing a bitfield that represents conditions that occurred during sleep.

0x00000000 –	Wake was signaled and was successful
0x00000001 –	Wake was signaled but failed due to lack of power
0x00000002 –	Wake was signaled but failed due to thermal condition
Other values –	Reserved

Element 1 – An **Integer** containing the power supply S-state.

If non-zero, this is the effective S-state the power supply that was actually entered. This value is used to detect when the targeted S-state was not entered because of too much current being drawn from the power supply. For example, this might occur when some active device’s current consumption pushes the system’s power requirements over the low power supply mark, thus preventing the deeper system sleeping state from being entered as desired.


---

2. Only buses that support hardware-defined enumeration methods are done automatically at run-time. This would include ACPI-enumerated devices.

## 7.5 OSPM usage of \_PTS, \_TTS, and \_WAK

OSPM will invoke \_PTS, \_TTS, and \_WAK in the following order:

1. OSPM decides (through a policy scheme) to place the system into a sleeping state
2. \_TTS(Sx) is run, where Sx is the desired sleep state to enter
3. OSPM notifies all native device drivers of the sleep state transition
4. \_PTS is run
5. OSPM readies system for the sleep state transition
6. OSPM writes the sleep vector and the system enters the specified Sx sleep state
7. System Wakes up
8. OSPM readies system for the return from the sleep state transition
9. \_WAK is run
10. OSPM notifies all native device drivers of the return from the sleep state transition
11. \_TTS(0) is run to indicate the return to the S0 state

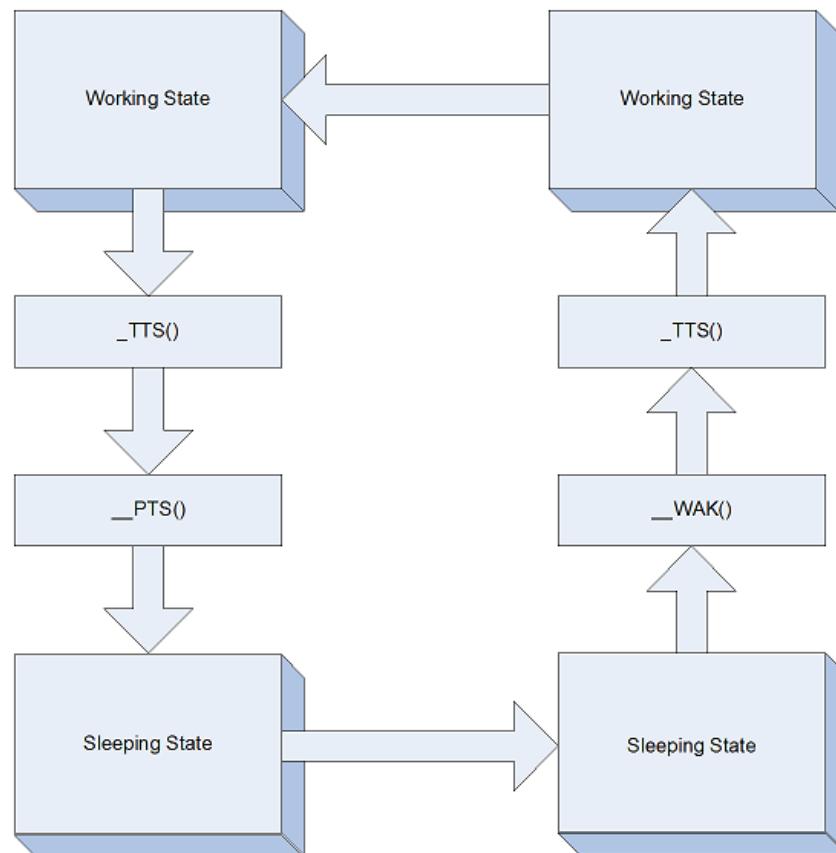

**Figure 7-35 Working / Sleeping State object evaluation flow**

# 8 Processor Configuration and Control

---

This section describes the configuration and control of the processor's power and performance states. The major controls over the processors are:

- Processor power states: C0, C1, C2, C3, ... Cn
- Processor clock throttling
- Processor performance states: P0, P1, ... Pn

These controls are used in combination by OSPM to achieve the desired balance of the following sometimes conflicting goals:

- Performance
- Power consumption and battery life
- Thermal requirements
- Noise-level requirements

Because the goals interact with each other, the operating software needs to implement a policy as to when and where tradeoffs between the goals are to be made<sup>1</sup>. For example, the operating software would determine when the audible noise of the fan is undesirable and would trade off that requirement for lower thermal requirements, which can lead to lower processing performance. Each processor configuration and control interface is discussed in the following sections along with how controls interacts with the various goals.

## 8.1 Processor Power States


ACPI defines the power state of system processors while in the G0 working state<sup>2</sup> as being either active (executing) or sleeping (not executing). Processor power states include are designated C0, C1, C2, C3, ...Cn. The C0 power state is an active power state where the CPU executes instructions. The C1 through Cn power states are processor sleeping states where the processor consumes less power and dissipates less heat than leaving the processor in the C0 state. While in a sleeping state, the processor does not execute any instructions. Each processor sleeping state has a latency associated with entering and exiting that corresponds to the power savings. In general, the longer the entry/exit latency, the greater the power savings when in the state. To conserve power, OSPM places the processor into one of its supported sleeping states when idle. While in the C0 state, ACPI allows the performance of the processor to be altered through a defined "throttling" process and through transitions into multiple performance

---

1. A thermal warning leaves room for operating system tradeoffs to occur (to start the fan or to reduce performance), but a critical thermal alert does not occur.

2. Notice that these CPU states map into the G0 working state. The state of the CPU is undefined in the G3 sleeping state, the Cx states only apply to the G0 state.

states (P-states). A diagram of processor power states is provided

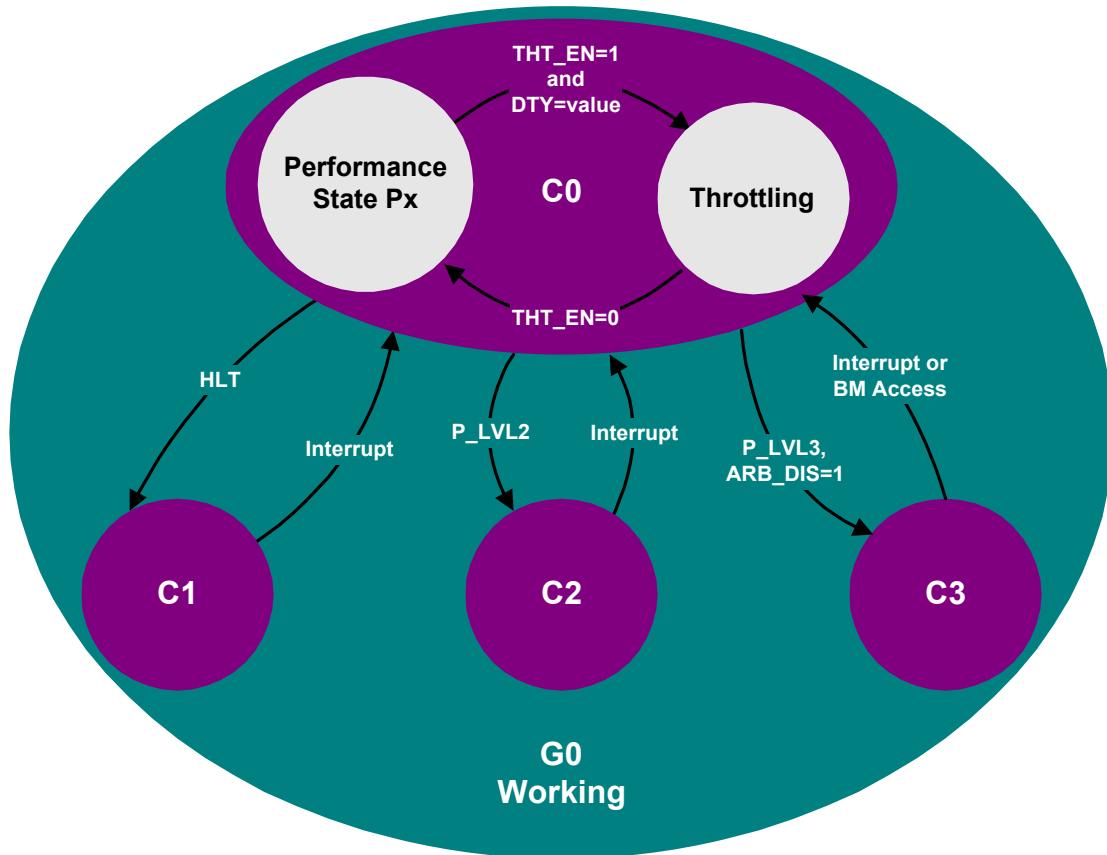

below.

**Figure 8-36 Processor Power States**

ACPI defines logic on a per-CPU basis that OSPM uses to transition between the different processor power states. This logic is optional, and is described through the FADT table and processor objects (contained in the hierarchical namespace). The fields and flags within the FADT table describe the symmetrical features of the hardware, and the processor object contains the location for the particular CPU's clock logic (described by the P\_BLK register block and \_CST objects).

The P\_LVL2 and P\_LVL3 registers provide optional support for placing the system processors into the C2 or C3 states. The P\_LVL2 register is used to sequence the selected processor into the C2 state, and the P\_LVL3 register is used to sequence the selected processor into the C3 state. Additional support for the C3 state is provided through the bus master status and arbiter disable bits (BM\_STS in the PM1\_STS register and ARB\_DIS in the PM2\_CNT register). System software reads the P\_LVL2 or P\_LVL3 registers to enter the C2 or C3 power state. The Hardware must put the processor into the proper clock state precisely on the read operation to the appropriate P\_LVLx register. The platform may alternatively define interfaces allowing OSPM to enter C-states using the \_CST object, which is defined in [Section 8.4.2.1, “\\_CST \(C States\)”](#).


Processor power state support is symmetric when presented via the FADT and P\_BLK interfaces; OSPM assumes all processors in a system support the same power states. If processors have non-symmetric power state support, then the platform runtime firmware will choose and use the lowest common power

states supported by all the processors in the system through the FADT table. For example, if the CPU0 processor supports all power states up to and including the C3 state, but the CPU1 processor only supports the C1 power state, then OSPM will only place idle processors into the C1 power state (CPU0 will never be put into the C2 or C3 power states). Notice that the C1 power state must be supported. The C2 and C3 power states are optional (see the PROC\_C1 flag in the FADT table description in [Section 5.2.6](#), "System Description Table Header").

The following sections describe processor power states in detail.

### 8.1.1 Processor Power State C0

While the processor is in the C0 power state, it executes instructions. While in the C0 power state, OSPM can generate a policy to run the processor at less than maximum performance. The clock throttling mechanism provides OSPM with the functionality to perform this task in addition to thermal control. The mechanism allows OSPM to program a value into a register that reduces the processor's performance to a percentage of maximum performance.

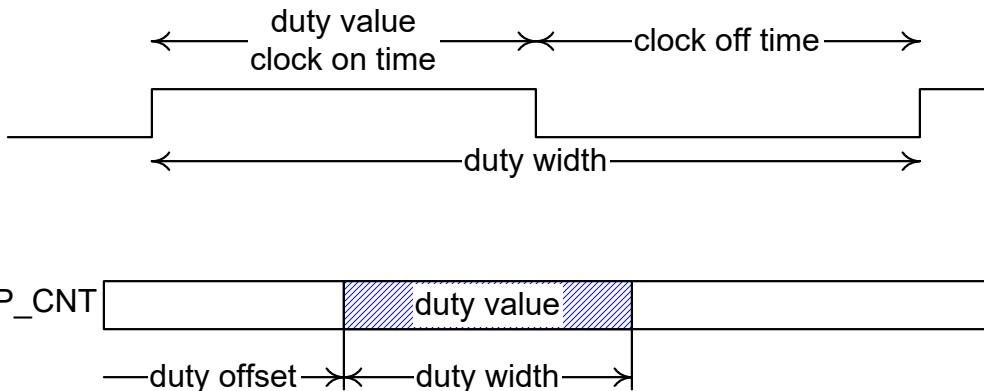

**Figure 8-37 Throttling Example**


The FADT contains the duty offset and duty width values. The duty offset value determines the offset within the P\_CNT register of the duty value. The duty width value determines the number of bits used by the duty value (which determines the granularity of the throttling logic). The performance of the processor by the clock logic can be expressed with the following equation:

$$\% \text{ Performance} = \frac{\text{duty setting}}{2^{\text{dutywidth}}} * 100\%$$

**Figure 8-38 Equation 1 Duty Cycle Equation**

Nominal performance is defined as "close as possible, but not below the indicated performance level." OSPM will use the duty offset and duty width to determine how to access the duty setting field. OSPM


will then program the duty setting based on the thermal condition and desired power of the processor object. OSPM calculates the nominal performance of the processor using the equation expressed in Equation 1. Notice that a *dutysetting* of zero is reserved. For example, the clock logic could use the stop grant cycle to emulate a divided processor clock frequency on an IA processor (through the use of the STPCLK# signal). This signal internally stops the processor's clock when asserted LOW. To implement logic that provides eight levels of clock control, the STPCLK# pin could be asserted as follows (to emulate the different frequency settings):

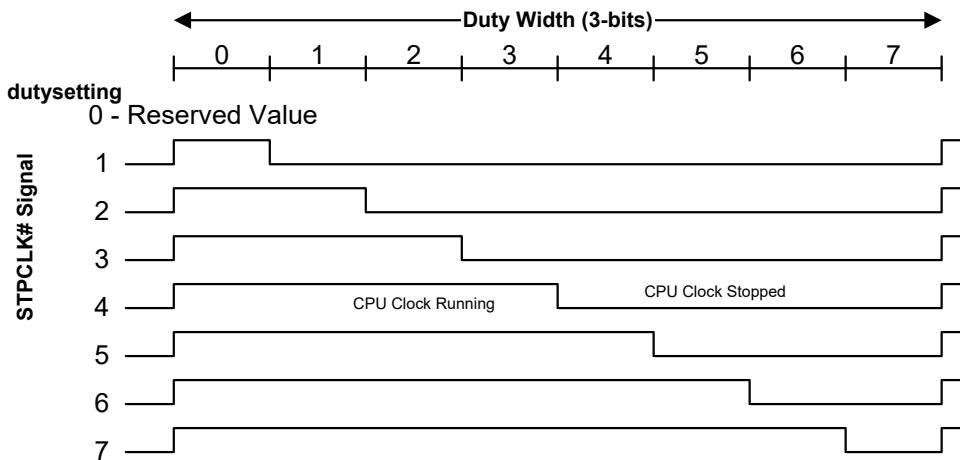

**Figure 8-39 Example Control for the STPCLK#**

To start the throttling logic OSPM sets the desired duty setting and then sets the THT\_EN bit HIGH. To change the duty setting, OSPM will first reset the THT\_EN bit LOW, then write another value to the duty setting field while preserving the other unused fields of this register, and then set the THT\_EN bit HIGH again.

The example logic model is shown below:

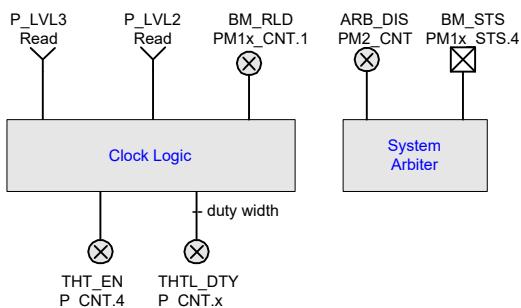

**Figure 8-40 ACPI Clock Logic (One per Processor)**

Implementation of the ACPI processor power state controls minimally requires the support a single CPU sleeping state (C1). All of the CPU power states occur in the G0/S0 system state; they have no meaning when the system transitions into the sleeping state(S1-S4). ACPI defines the attributes (semantics) of the different CPU states (defines four of them). It is up to the platform implementation to map an appropriate low-power CPU state to the defined ACPI CPU state.

ACPI clock control is supported through the optional processor register block (P\_BLK). ACPI requires that there be a unique processor register block for each CPU in the system. Additionally, ACPI requires that the clock logic for multiprocessor systems be symmetrical when using the P\_BLK and FADT interfaces; if the P0 processor supports the C1, C2, and C3 states, but P1 only supports the C1 state, then OSPM will limit all processors to enter the C1 state when idle.

The following sections define the different ACPI CPU sleeping states.

### 8.1.2 Processor Power State C1

All processors must support this power state. This state is supported through a native instruction of the processor (HLT for IA 32-bit processors), and assumes no hardware support is needed from the chipset. The hardware latency of this state must be low enough that OSPM does not consider the latency aspect of the state when deciding whether to use it. Aside from putting the processor in a power state, this state has no other software-visible effects. In the C1 power state, the processor is able to maintain the context of the system caches.

The hardware can exit this state for any reason, but must always exit this state when an interrupt is to be presented to the processor.

### 8.1.3 Processor Power State C2

This processor power state is optionally supported by the system. If present, the state offers improved power savings over the C1 state and is entered by using the P\_LVL2 command register for the local processor or an alternative mechanism as indicated by the \_CST object. The worst-case hardware latency for this state is declared in the FADT and OSPM can use this information to determine when the C1 state should be used instead of the C2 state. Aside from putting the processor in a power state, this state has no other software-visible effects. OSPM assumes the C2 power state has lower power and higher exit latency than the C1 power state.

The C2 power state is an optional ACPI clock state that needs chipset hardware support. This clock logic consists of an interface that can be manipulated to cause the processor complex to precisely transition into a C2 power state. In a C2 power state, the processor is assumed capable of keeping its caches coherent; for example, bus master and multiprocessor activity can take place without corrupting cache context.

The C2 state puts the processor into a low-power state optimized around multiprocessor and bus master systems. OSPM will cause an idle processor complex to enter a C2 state if there are bus masters or Multiple processor activity (which will prevent OSPM from placing the processor complex into the C3 state). The processor complex is able to snoop bus master or multiprocessor CPU accesses to memory while in the C2 state.

The hardware can exit this state for any reason, but must always exit this state whenever an interrupt is to be presented to the processor.

### 8.1.4 Processor Power State C3

This processor power state is optionally supported by the system. If present, the state offers improved power savings over the C1 and C2 state and is entered by using the P\_LVL3 command register for the local processor or an alternative mechanism as indicated by the \_CST object. The worst-case hardware latency for this state is declared in the FADT, and OSPM can use this information to determine when the C1 or C2 state should be used instead of the C3 state. While in the C3 state, the processor's caches

maintain state but the processor is not required to snoop bus master or multiprocessor CPU accesses to memory.

The hardware can exit this state for any reason, but must always exit this state when an interrupt is to be presented to the processor or when BM\_RLD is set and a bus master is attempting to gain access to memory.

OSPM is responsible for ensuring that the caches maintain coherency. In a uniprocessor environment, this can be done by using the PM2\_CNT.ARB\_DIS bus master arbitration disable register to ensure bus master cycles do not occur while in the C3 state. In a multiprocessor environment, the processors' caches can be flushed and invalidated such that no dynamic information remains in the caches before entering the C3 state.

There are two mechanisms for supporting the C3 power state:

- Having OSPM flush and invalidate the caches prior to entering the C3 state.
- Providing hardware mechanisms to prevent masters from writing to memory (uniprocessor-only support).

In the first case, OSPM will flush the system caches prior to entering the C3 state. As there is normally much latency associated with flushing processor caches, OSPM is likely to only support this in multiprocessor platforms for idle processors. Flushing of the cache is accomplished through one of the defined ACPI mechanisms (described below in [Section 8.2](#), "Flushing Caches").

In uniprocessor-only platforms that provide the needed hardware functionality (defined in this section), OSPM will attempt to place the platform into a mode that will prevent system bus masters from writing into memory while the processor is in the C3 state. This is accomplished by disabling bus masters prior to entering a C3 power state. Upon a bus master requesting an access, the CPU will awaken from the C3 state and re-enable bus master accesses.

OSPM uses the BM\_STS bit to determine the power state to enter when considering a transition to or from the C2/C3 power state. The BM\_STS is an optional bit that indicates when bus masters are active. OSPM uses this bit to determine the policy between the C2 and C3 power states: a lot of bus master activity demotes the CPU power state to the C2 (or C1 if C2 is not supported), no bus master activity promotes the CPU power state to the C3 power state. OSPM keeps a running history of the BM\_STS bit to determine CPU power state policy.

The last hardware feature used in the C3 power state is the BM\_RLD bit. This bit determines if the Cx power state is exited as a result of bus master requests. If set, then the Cx power state is exited upon a request from a bus master. If reset, the power state is not exited upon bus master requests. In the C3 state, bus master requests need to transition the CPU back to the C0 state (as the system is capable of maintaining cache coherency), but such a transition is not needed for the C2 state. OSPM can optionally set this bit when using a C3 power state, and clear it when using a C1 or C2 power state.

### 8.1.5 Additional Processor Power States

ACPI introduced optional processor power states beyond C3 starting in ACPI 2.0. These power states, C4...Cn, are conveyed to OSPM through the \_CST object defined in [Section 8.4.2.1](#), "\_CST (C-States)." These additional power states are characterized by equivalent operational semantics to the C1 through C3 power states, as defined in the previous sections, but with different entry/exit latencies and power savings. See [Section 8.4.2.1](#), "\_CST (C-States)," for more information.

## 8.2 Flushing Caches

To support the C3 power state without using the ARB\_DIS feature, the hardware must provide functionality to flush and invalidate the processors' caches (for an IA processor, this would be the WBINVD instruction). To support the S1, S2 or S3 sleeping states, the hardware must provide functionality to flush the platform caches. Flushing of caches is supported by one of the following mechanisms:

- Processor instruction to write back and invalidate system caches (WBINVD instruction for IA processors).
- Processor instruction to write back but not invalidate system caches (WBINVD instruction for IA processors and some chipsets with partial support; that is, they don't invalidate the caches).

The ACPI specification expects all platforms to support the local CPU instruction for flushing system caches (with support in both the CPU and chipset), and provides some limited "best effort" support for systems that don't currently meet this capability. The method used by the platform is indicated through the appropriate FADT fields and flags indicated in this section.

ACPI specifies parameters in the FADT that describe the system's cache capabilities. If the platform properly supports the processor's write back and invalidate instruction (WBINVD for IA processors), then this support is indicated to OSPM by setting the WBINVD flag in the FADT.

If the platform supports neither of the first two flushing options, then OSPM can attempt to manually flush the cache if it meets the following criteria:

- A cache-enabled sequential read of contiguous physical memory of not more than 2 MB will flush the platform caches.
- There are two additional FADT fields needed to support manual flushing of the caches:
- FLUSH\_SIZE, typically twice the size of the largest cache in the system.
- FLUSH\_STRIDE, typically the smallest cache line size in the system.

## 8.3 Power, Performance, and Throttling State Dependencies

Cost and complexity trade-off considerations have driven into the platform control dependencies between logical processors when entering power, performance, and throttling states. These dependencies exist in various forms in multi-processor, multi-threaded processor, and multi-core processor-based platforms. These dependencies may also be hierarchical. For example, a multi-processor system consisting of processors containing multiple cores containing multiple threads may have various dependencies as a result of the hardware implementation.

Unless OSPM is aware of the dependency between the logical processors, it might lead to scenarios where one logical processor is implicitly transitioned to a power, performance, or throttling state when it is unwarranted, leading to incorrect / non-optimal system behavior. Given knowledge of the dependencies, OSPM can coordinate the transitions between logical processors, choosing to initiate the transition when doing so does not lead to incorrect or non-optimal system behavior. This OSPM coordination is referred to as Software (SW) Coordination. Alternately, it might be possible for the underlying hardware to coordinate the state transition requests on multiple logical processors, causing the processors to transition to the target state when the transition is guaranteed to not lead to incorrect or non-optimal system behavior. This scenario is referred to as Hardware (HW) coordination. When hardware coordinates transitions, OSPM continues to initiate state transitions as it would if there were

no dependencies. However, in this case it is required that hardware provide OSPM with a means to determine actual state residency so that correct / optimal control policy can be realized.

Platforms containing logical processors with cross-processor dependencies in the power, performance, or throttling state control areas use ACPI defined interfaces to group logical processors into what is referred to as a dependency domain. The Coordination Type characteristic for a domain specifies whether OSPM or underlying hardware is responsible for the coordination. When OSPM coordinates, the platform may require that OSPM transition ALL (0xFC) or ANY ONE (0xFD) of the processors belonging to the domain into a particular target state. OSPM may choose at its discretion to perform coordination even though the underlying hardware supports hardware coordination. In this case, OSPM must transition all logical processors in the dependency domain to the particular target state.

There are no dependencies implied between a processor's C-states, P-states or T-states. Hence, for example it is possible to use the same dependency domain number for specifying dependencies between P-states among one set of processors and C-states among another set of processors without any dependencies being implied between the P-State transitions on a processor in the first set and C-state transitions on a processor in the second set.

## 8.4 Declaring Processors

Each processor in the system must be declared in the ACPI namespace in the \\_SB scope. Declaration of processors in the \\_PR scope was only required for platforms desiring compatibility with ACPI 1.0-based OSPM implementations. It is deprecated for all other uses. Processors are declared via the ASL **Device** statement. Declarations via the ASL **Processor statement** are deprecated. A **Device** definition for a processor is declared using the ACPI0007 hardware identifier (HID). Processor configuration information is provided exclusively by objects in the processor device's object list.

When the platform uses the APIC interrupt model, UID object values under a processor device are used to associate processor devices with entries in the MADT.

Processor-specific objects may be declared within the processor device's scope. These objects serve multiple purposes including processor performance state control. Other ACPI-defined device-related objects are also allowed under the processor device's scope (for example, the unique identifier object \_UID mentioned above).

With device-like characteristics attributed to processors, it is implied that a processor device driver will be loaded by OSPM to, at a minimum, process device notifications. OSPM will enumerate processors in the system using the ACPI Namespace, processor-specific native identification instructions, and the \_HID method.

For more information on the declaration of the processor device object, see [Section 19.6.30](#), "Device (Declare Device Package)." Processor-specific child objects are described in the following sections.

ACPI 6.0 introduces the notion of processor containers. Processor containers are declared using the **Processor Container Device**. A processor container can be used to describe a collection of associated processors that share common resources, such as shared caches, and which have power states that affect the processors in the collection. For more information see [Section 8.4.3.1](#) "Processor Container Device".

### 8.4.1 \_PDC (Processor Driver Capabilities)

This optional object is a method that is used by OSPM to communicate to the platform the level of processor power management support provided by OSPM. This object is a child object of the processor.

OSPM evaluates \_PDC prior to evaluating any other processor power management objects returning configuration information.

The \_PDC object provides OSPM a mechanism to convey to the platform the capabilities supported by OSPM for processor power management. This allows the platform to modify the ACPI namespace objects returning configuration information for processor power management based on the level of support provided by OSPM. Using this method provides a mechanism for OEMs to provide support for new technologies on legacy OSes, while also allowing OSPM to leverage new technologies on platforms capable of supporting them. This method is evaluated once during processor device initialization, and will not be re-evaluated during resume from a sleep state transition. The platform must preserve state information across S1-S3 sleep state transitions.

### **Arguments:** (1)

Arg0 – A variable-length **Buffer** containing a list of capabilities as described below

### **Return Value:**

None

The buffer argument contains a list of DWORDs in the following format:

RevisionId –	Revision of the buffer format
Count –	The number of capability values in the capabilities array
Capabilities[Count] –	Capabilities array

Each DWORD entry in the capabilities array is a bitfield that defines capabilities and features supported by OSPM for processor configuration and power management as specified by the CPU manufacturer.

The use of \_PDC is deprecated in ACPI 3.0 in favor of \_OSC. For backwards compatibility, \_PDC may be implemented using \_OSC as follows:

```
Method(_PDC, 1)
{
    CreateDWordField (Arg0, 0, REVS)
    CreateDWordField (Arg0, 4, SIZE)

    //
    // Local 0 = Number of bytes for Arg0
    //
    Store (SizeOf (Arg0), Local 0)

    //
    // Local 1 = Number of Capabilities bytes in Arg0
    //
    Store (Subtract (Local 0, 8), Local 1)

    //
    // TEMP = Temporary field holding Capability DWORDS
    //
    CreateField (Arg0, 64, Multiply (Local 1, 8), TEMP)
```

```

//
// Create the Status (STS0) buffer with the first DWORD = 0
// This is required to return errors defined by _OSC.
//
Name (STS0, Buffer () {0x00, 0x00, 0x00, 0x00})

//
// Concatenate the _PDC capabilities bytes to the STS0 Buffer
// and store them in a local variable for calling OSC
//
Concatenate (STS0, TEMP, Local 2)

//
// Note: The UUID passed into _OSC is CPU vendor specific. Consult CPU
// vendor documentation for UUID and Capabilities Buffer bit definitions
//
_OSC (ToUUID("4077A616-290C-47BE-9EBD-D87058713953"), REVS, SIZE, Local 2)
}

```

[Section 6.2.11](#), “\_OSC (Operating System Capabilities)”, describes the \_OSC object, which can be used to convey processor related OSPM capabilities to the platform. Consult CPU vendor specific documentation for the UUID and Capabilities Buffer bit definitions used by \_OSC for a specific processor.

#### 8.4.2 Processor Power State Control

ACPI defines multiple processor power state (C state) control interfaces. These are:

1. The Processor Register Block's (P\_BLK's) P\_LVL2 and P\_LVL3 registers coupled with FADT P\_LVlx\_LAT values and
2. The \_CST object in the processor's object list.
3. The \_LPI objects for processors and processor containers.

P\_BLK based C state controls are described in [Section 4](#), “ACPI Hardware Specification” and [Section 8.1](#), “Processor Power States”. \_CST based C state controls expand the functionality of the P\_BLK based controls allowing the number and type of C states to be dynamic and accommodate CPU architecture specific C state entry and exit mechanisms as indicated by registers defined using the Functional Fixed Hardware address space.

\_CST is an optional object that provides:

- The Processor Register Block's (P\_BLK's) P\_LVL2 and P\_LVL3 registers coupled with FADT P\_LVlx\_LAT values.
- The \_CST object in the processor's object list.

ACPI 6.0 introduces \_LPI, the low power idle state object. \_LPI provides more detailed power state information and can describe idle states at multiple levels of hierarchy in conjunction with Processor Containers. See [Section 8.4.4.3](#) for details.

### 8.4.2.1 \_CST (C States)

\_CST is an optional object that provides an alternative method to declare the supported processor power states (C States). Values provided by the \_CST object override P\_LVLx values in P\_BLK and P\_LVLx\_LAT values in the FADT. The \_CST object allows the number of processor power states to be expanded beyond C1, C2, and C3 to an arbitrary number of power states. The entry semantics for these expanded states, (in other words), the considerations for entering these states, are conveyed to OSPM by the C-state Type field and correspond to the entry semantics for C1, C2, and C3 as described in [Section 8.1.2](#) through [Section 8.1.4](#). \_CST defines ascending C-states characterized by lower power and higher entry/exit latency.

#### Arguments:

None

#### Return Value:

A variable-length **Package** containing a list of C-state information **Packages** as described below

### Return Value Information

\_CST returns a variable-length **Package** that contains the following elements:

- Count      An **Integer** that contains the number of CState sub-packages that follow
- CStates[]   A list of **Count** CState sub-packages

```
Package {
    Count          // Integer
    CStates[0]      // Package
    ...
    CStates[Count-1] // Package
}
```

Each fixed-length Cstate sub-**Package** contains the elements described below:

```
Package {
    Register        // Buffer (Resource Descriptor)
    Type            // Integer (BYTE)
    Latency         // Integer (WORD)
    Power           // Integer (DWORD)
}
```

**Table 8-265 Cstate Package Values**

Element	Object Type	Description
Register	Buffer	Contains a Resource Descriptor with a single <b>Register()</b> descriptor that describes the register that OSPM must read to place the processor in the corresponding C state.
Type	<b>Integer</b> (BYTE)	The C State type (1= <b>C1</b> , 2= <b>C2</b> , 3= <b>C3</b> ). This field conveys the semantics to be used by OSPM when entering/exiting the C state. Zero is not a valid value.
Latency	<b>Integer</b> (WORD)	The worst-case latency to enter and exit the C State (in microseconds). There are no latency restrictions.
Power	<b>Integer</b> (DWORD)	The average power consumption of the processor when in the corresponding C State (in milliwatts).

The platform must expose a \_CST object for either all or none of its processors. If the \_CST object exists, OSPM uses the C state information specified in the \_CST object in lieu of P\_LVL2 and P\_LVL3 registers defined in P\_BLK and the P\_LVLx\_LAT values defined in the FADT. Also notice that if the \_CST object exists and the \_PTC object does **not** exist, OSPM will use the Processor Control Register defined in P\_BLK and the C\_State\_Register registers in the \_CST object.

The platform may change the number or type of C States available for OSPM use dynamically by issuing a **Notify** event on the processor object with a notification value of 0x81. This will cause OSPM to re-evaluate any \_CST object residing under the processor object notified. For example, the platform might notify OSPM that the number of supported C States has changed as a result of an asynchronous AC insertion / removal event.

The platform must specify unique C\_State\_Register addresses for all entries within a given \_CST object.

\_CST eliminates the ACPI 1.0 restriction that all processors must have C State parity. With \_CST, each processor can have its own characteristics independent of other processors. For example, processor 0 can support C1, C2 and C3, while processor 1 supports only C1.

The fields in the processor structure remain for backward compatibility.

## Example

```

Processor (
  \_SB.CPU0,           // Processor Name
  1,                   // ACPI Processor number
  0x120,              // PBI k system IO address
  6 )                 // PBI kLen
{
  Name(_CST, Package())
  {
    4,                // There are four C-states defined here with three semantics
                      // The third and fourth C-states defined have the same C3 entry
    semantics
    Package() {ResourceTemplate() {Register(FFixedHW, 0, 0, 0)}, 1, 20, 1000},
    Package() {ResourceTemplate() {Register(SystemIO, 8, 0, 0x161)}, 2, 40, 750},
    Package() {ResourceTemplate() {Register(SystemIO, 8, 0, 0x162)}, 3, 60, 500},
    Package() {ResourceTemplate() {Register(SystemIO, 8, 0, 0x163)}, 3, 100, 250}
  }
}

```

}

Notice in the example above that OSPM should anticipate the possibility of a \_CST object providing more than one entry with the same C\_State\_Type value. In this case OSPM must decide which C\_State\_Register it will use to enter that C state.

## Example

This is an example usage of the \_CST object using the typical values as defined in ACPI 1.0.

```
Processor (
  \_SB.CPU0,           // Processor Name
  1,                  // ACPI Processor number
  0x120,              // PBLK system 10 address
  6 )                 // PBLK Len
{
  Name(_CST, Package())
  {
    2,                // There are two C-states defined here - C2 and C3
    Package() {ResourceTemplate() {Register(System10, 8, 0, 0x124)}, 2, 2, 750},
    Package() {ResourceTemplate() {Register(System10, 8, 0, 0x125)}, 3, 65, 500}
  }
}
```

The platform will issue a **Notify**(\\_SB.CPU0, 0x81) to inform OSPM to re-evaluate this object when the number of available processor power states changes.

### 8.4.2.2 \_CSD (C-State Dependency)

This optional object provides C-state control cross logical processor dependency information to OSPM. The \_CSD object evaluates to a packaged list of information that correlates with the C-state information returned by the \_CST object. Each packaged list entry identifies the C-state for which the dependency is being specified (as an index into the \_CST object list), a dependency domain number for that C-state, the coordination type for that C-state and the number of logical processors belonging to the domain for the particular C-state. It is possible that a particular C-state may belong to multiple domains. That is, it is possible to have multiple entries in the \_CSD list with the same CStateIndex value.

#### Arguments:

None

#### Return Value:

A variable-length Package containing a list of C-state dependency Packages as described below.

### Return Value Information

```
Package {
  CStateDependency[0]    // Package
  ...
  CStateDependency[n]    // Package
}
```

Each CstateDependency sub-Package contains the elements described below:

```
Package {
    NumEntries           // Integer
    Revision             // Integer (BYTE)
    Domain               // Integer (DWORD)
    CoordType             // Integer (DWORD)
    NumProcessors         // Integer (DWORD)
    Index                // Integer (DWORD)
}
```

**Table 8-266 CStateDependency Package Values**

Element	Object Type	Description
NumEntries	Integer	The number of entries in the <code>cstateDependency</code> package including this field. Current value is 6.
Revision	Integer (BYTE)	The revision number of the <code>cstateDependency</code> package format. Current value is 0.
Domain	Integer (DWORD)	The dependency domain number to which this C state entry belongs.
CoordType	Integer (DWORD)	The type of coordination that exists (hardware) or is required (software) as a result of the underlying hardware dependency. Could be either 0xFC (SW_ALL), 0xFD (SW_ANY) or 0xFE (HW_ALL) indicating whether OSPM is responsible for coordinating the C-state transitions among processors with dependencies (and needs to initiate the transition on all or any processor in the domain) or whether the hardware will perform this coordination.
Num Processors	Integer (DWORD)	The number of processors belonging to the domain for the particular C-state. OSPM will not start performing power state transitions to a particular C-state until this number of processors belonging to the same domain for the particular C-state have been detected and started.
Index	Integer (DWORD)	Indicates the index of the C-State entry in the <code>_CST</code> object for which the dependency applies.

Given that the number or type of available C States may change dynamically, ACPI supports Notify events on the processor object, with Notify events of type 0x81 causing OSPM to re-evaluate any `_CST` objects residing under the particular processor object notified. On receipt of Notify events of type 0x81, OSPM should re-evaluate any present `_CSD` objects also.

## Example

This is an example usage of the `_CSD` structure in a Processor structure in the namespace. The example represents a two processor configuration. The C1-type state can be independently entered on each processor. For the C2-type state, there exists dependence between the two processors, such that one processor transitioning to the C2-type state, causes the other processor to transition to the C2-type state. A similar dependence exists for the C3-type state. OSPM will be required to coordinate the C2 and C3

transitions between the two processors. Also OSPM can initiate a transition on either processor to cause both to transition to the common target C-state.

```


Processor (
  \_SB.CPU0,
  1,                                // Processor Name
  0x120,                             // ACPI Processor number
  6 )                                // PBI k system IO address
{
  Name (_CST, Package()
  {
    3,          // There are three C-states defined here with three semantics
    Package() {ResourceTemplate() {Register(FFixedHW, 0, 0, 0)}, 1, 20, 1000},
    Package() {ResourceTemplate() {Register(SystemIO, 8, 0, 0x161)}, 2, 40, 750},
    Package() {ResourceTemplate() {Register(SystemIO, 8, 0, 0x162)}, 3, 60, 500}
  })
  Name (_CSD, Package()
  {
    Package() {6, 0, 0, 0xFD, 2, 1}, // 6 entries, Revision 0, Domain 0, OSPM Coordinate
                                         // Initiate on Any Proc, 2 Procs, Index 1 (C2-type)
    Package() {6, 0, 0, 0xFD, 2, 2}  // 6 entries, Revision 0 Domain 0, OSPM Coordinate
                                         // Initiate on Any Proc, 2 Procs, Index 2 (C3-type)
  })
}
Processor (
  \_SB.CPU1,
  2,                                // Processor Name
  ,                                // ACPI Processor number
  ,                                // PBI k system IO address
  // PBI kLen
{
  Name (_CST, Package()
  {
    3,          // There are three C-states defined here with three semantics
    Package() {ResourceTemplate() {Register(FFixedHW, 0, 0, 0)}, 1, 20, 1000},
    Package() {ResourceTemplate() {Register(SystemIO, 8, 0, 0x161)}, 2, 40, 750},
    Package() {ResourceTemplate() {Register(SystemIO, 8, 0, 0x162)}, 3, 60, 500}
  })
  Name (_CSD, Package()
  {
    Package() {6, 0, 0, 0xFD, 2, 1}, // 6 entries, Revision 0, Domain 0, OSPM
    Coordinate
                                         // Initiate on any Proc, 2 Procs, Index 1 (C2-type)
    Package() {6, 0, 0, 0xFD, 2, 2}  // 6 entries, Revision 0, Domain 0, OSPM Coordinate
                                         // Initiate on any Proc, 2 Procs, Index 2 (C3-type)
  })
}

```

When the platform issues a **Notify**(\\_SB.CPU0, 0x81) to inform OSPM to re-evaluate \_CST when the number of available processor power states changes, OSPM should also evaluate \_CSD.

### 8.4.3 Processor Hierarchy

It is very typical for computing platforms to have a multitude of processors that share common resources, such as caches, and which have common power states that affect groups of processors. These are arranged in a hierarchical manner. For example, a system may contain a set of NUMA nodes, each with a number of sockets, which may contain multiple groups of processors, each of which may contain individual processor cores, each of which may contain multiple hardware threads. Different architectures use different terminology to denote logically associated processors, but terms such as package, cluster, module, and socket are typical examples. ACPI uses the term processor container to describe a group of associated processors. Processors are said to belong to a container if they are associated in some way, such as a shared cache or a low power mode which affects them all.

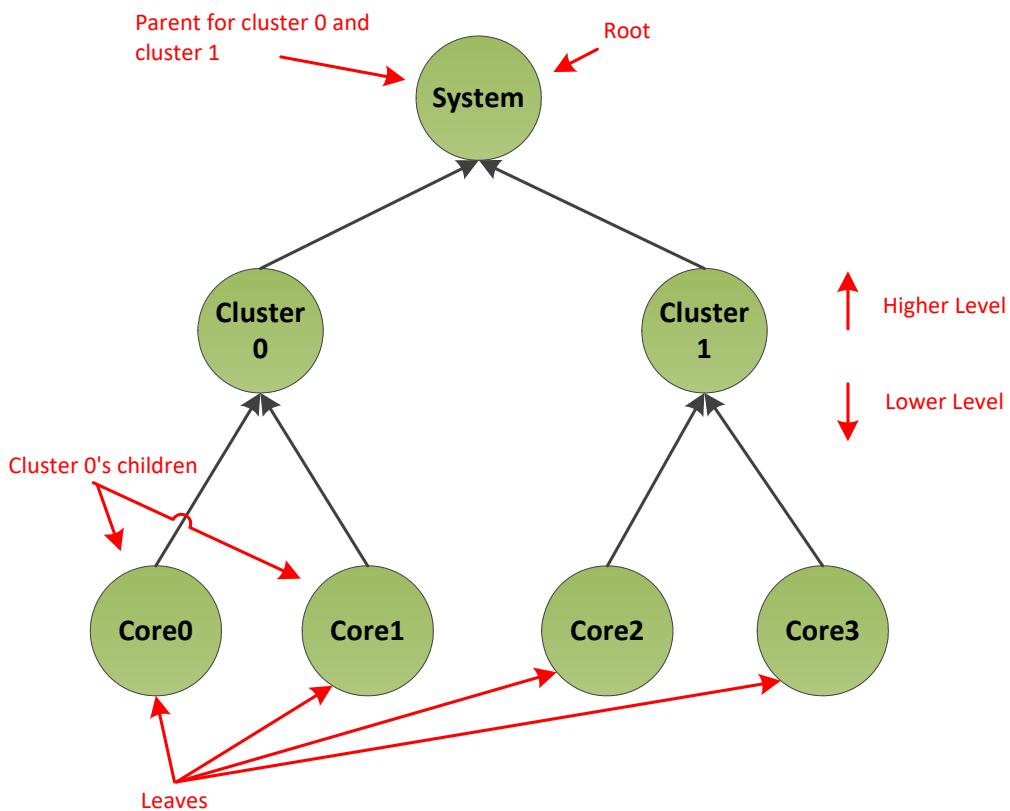

**Figure 8-41 Processor Hierarchy**

[Figure 8-41](#) depicts an example system, which comprises a system level processor container, which in turn contains two cluster processor containers, each of which contains two processors. The overall collection is called the processor hierarchy and standard tree terminology is used to refer to different parts of it. For example, an individual processor or container is called a node, the nodes which reside within a processor container are called children of that parent, etc. This example is symmetric but that is not a requirement. For example, a system may contain a different number of processors in different containers or an asymmetric hierarchy where one side of the topology tree is deeper than another. Also note that while this example includes a single top level processor container encompassing all processors, this is not a requirement. It is legal for a system to be described using a collection of trees.

The processor hierarchy can be used to describe a number of different characteristics of system topology. The main example is shared power states, see the Low Power Idle states in [Section 8.4.4](#) for details.

#### 8.4.3.1 Processor Container Device

This optional device is a container object that acts much like a bus node in a namespace. It may contain child objects that are either processor devices or other processor containers. This allows representing hierarchical processor topologies. Each processor container or processor in the hierarchy is herein referred to as a node. The processor container device is declared using the hardware identifier (\_HID) ACPI0010.

To aid support of operating systems which do not parse processor containers, a container can carry a Compatible ID (\_CID) of PNPOA05, which represents a generic container device (see [Section 5.6.7](#))

A processor container declaration must supply a \_UID method returning an ID that is unique in the processor container hierarchy. A processor container must contain either other processor containers or other processor devices declared within its scope. In addition, a processor container may also contain the following methods in its scope:

**Table 8-267 Processor Container Device Objects**

Object	Description
_LPI	Declares local power states for the hierarchy node represented by the processor container
_RDI	Declares power resource dependencies that affect system level power states
_STA	Determines the status of a processor container. See <a href="#">Section 5.6.7</a>

\_LPI may be present under a processor device, and is described in [Section 8.4.4.3](#) \_RDI can only be present under a singular top level processor container object, and is described below.

ACPI allows the definition of more than one root level processor container. In other words, it is possible to define multiple top level containers. For example, in a NUMA system if there are no idle states or other objects that need to be encapsulated at the system level, multiple NUMA-node level processor containers may be defined at the top level of the hierarchy.

Processor Container Device objects are only valid for implementations conforming to ACPI 6.0 or higher. A platform can ascertain whether an operating system supports parsing of processor container objects via the \_OSC method (see [Section 6.2.11.2](#)).

#### 8.4.4 Lower Power Idle States

ACPI 6.0 introduces Lower Power Idle states (LPI). This extends the specification to allow expression of idle states that, like C-states, are selected by the OSPM when a processor goes idle, but which may affect more than one processor, and may affect other system components. LPI extensions in the specification leverage the processor container device, and in this way can express which parts of the system are affected by a given LPI state.


LPI states are defined via the following objects:

- \_LPI objects define the states themselves, and may be declared inside a processor or a processor container device
- \_RDI allows expressing constraints on LPI usage borne out of device usage

#### 8.4.4.1 Hierarchical Idle States

Processor containers ([Section 8.4.3.1](#)) can be used in conjunction with \_LPI ([Section 8.4.4.3](#)) to describe idle states in a hierarchical manner. Within the processor hierarchy, each node has low power states that are specific to that node. ACPI refers to states that are specific to a node in the hierarchy as Local Power States. For example in the system depicted in [Figure 8-42](#), the local power states of CPU0 are clock gate, retention and power down.

When the OS running on a given processor detects there is no more work to schedule on that processor, it needs to select an idle state. The state may affect more than just that processor. A processor going idle could be the last one in the system, or in a processor container, and therefore may select a power state that affects multiple processors. In order to select such a state, the OS needs to choose a local power state for each affected level in the processor hierarchy.

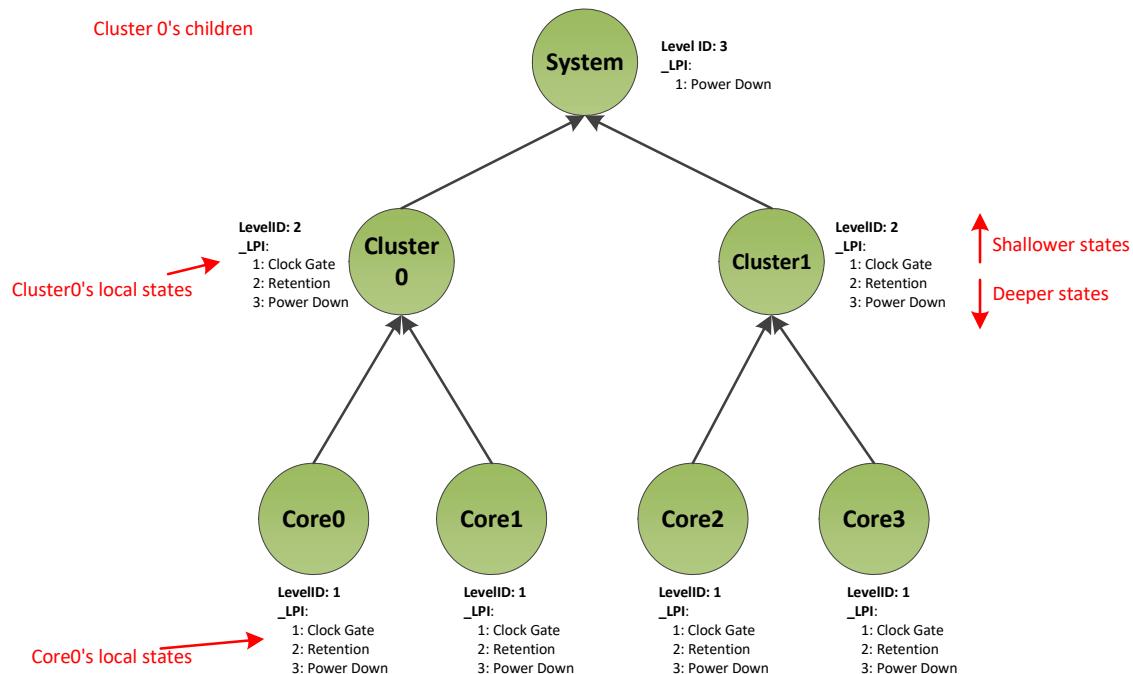

**Figure 8-42 Power states for processor hierarchy**

Consider a situation where Core 0 is the last active core depicted in the example system, [Figure 8-42](#). It may put the system into the lowest possible idle state. To do so, the OS chooses local state 3 (Power Down) for Core0, local state 3 (Power Down) for Cluster0, and local state 1 (Power Down) for the system. However, most HW architectures only support a single power state request from the OS to the platform. That is, it is not possible to make a separate local power state request per hierarchy node to the platform. Therefore, the OS must combine the per level local power states into a single Composite power state. The platform then acts on the Composite power state request.

A platform can only support a limited set of Composite power states, and not every combination of Local Power States across levels is valid. The valid power states in our example system are depicted in the following table:

**Table 8-268 Valid Local State Combinations in Figure 2 example system**

System Level Processor Container	Cluster level Processor Container	Processor
Running	Running	Clock Gated
Running	Running	Retention
Running	Running	Power Down
Running	Clock Gated	Clock Gated
Running	Clock Gated	Retention
Running	Clock Gated	Power Down
Running	Retention	Retention
Running	Retention	Power Down
Running	Power Down	Power Down
Power Down	Power Down	Power Down

#### 8.4.4.2 Idle State Coordination

With hierarchical idle states, multiple processors affect the idle state for any non-leaf hierarchy node. Taking our example system in [Figure 8-42](#), for cluster 0 to enter a low power state, both Core 0 and Core 1 must be idle. In addition, the power state selection done for Core 0 and Core 1 as they go idle has bearing on the state that can be used for Cluster 0. This requires coordination of idle state requests between the two processors. ACPI supports two different coordination schemes (detailed in subsections following):

- Platform coordinated
- OS initiated.

The OS and the platform can handshake on support for OS Initiated Idle or Platform Coordinated Idle using the \_OSC method as described in [Section 6.2.11.2](#). Note that an Architecture specific command may be required to enter OS Initiated mode, in which case please refer to architecture specific documentation. (For PSCI documentation see <http://uefi.org/acpi> under the heading “PSCI Specification”; for ARM FFH documentation, see <http://uefi.org/acpi> under the heading “ARM FFH Specification”.)

##### 8.4.4.2.1 Platform Coordinated

With the Platform Coordinated scheme, the platform is responsible for coordination of idle states across processors. OSPM makes a request for all levels of hierarchy from each processor meaning that each processor makes a vote by requesting a local power state for itself, its parent, its parent's parent, etc. (In some cases, the vote for a particular hierarchy level may be implicit – see the autopromotion discussion below for more details). When choosing idle states at higher levels, the OSPM on a processor may opt to keep a higher level node in a running state – this is still a vote for that node which the platform must respect. The vote expressed by the OSPM sets out the constraints on the local power state that the platform may choose for processor, and any parent nodes affected by the vote. In particular the vote expresses that the platform must not enter:

1. A deeper (lower power) local state than the requested one.

2. A local power state with a higher wake up latency than the requested one.
3. A local power state with power resource dependencies that the requested state does not have.

The platform looks across the votes for each hierarchy node from all underlying cores and chooses the deepest local state which satisfies all of the constraints associated with all of the votes. Normally, this just means taking the shallowest state that one of the cores voted for, since shallower states have lower wakeup latencies, lower minimum residencies, and fewer power resource dependencies. However, this may not always be the true, as state depth and latencies do not always increase together. For the sake of efficiency, the platform should generally not enter a power state with a higher minimum residency than the requested one. However, this is not a strict functional requirement. The platform may resolve to a state with higher minimum residency if it believes that is the most efficient choice based on the specific states and circumstances.

Using the above example in [Figure 8-42](#), a simple flow would look like this:

- Core0 goes idle – OS requests Core0 Power Down, Cluster0 Retention
- Platform receives Core0 requests – place Core0 in the Power Down state
- Core1 goes idle – OS requests Core1 Power Down, Cluster0 Power Down
- Platform receives Core1 request – puts Core1 in the Power Down state, and takes shallowest vote for Cluster0, thus placing it into the Retention state

If the OSPM wanted to request power states beyond the cluster level, then Core0 and Core1 would both vote for an idle state at System level too, and the platform would resolve the final state selection across their votes and votes from any other processors under the System hierarchy via the method described above.

As mentioned above, certain platforms support a mechanism called autopromotion where the votes for higher level states may be implicit rather than explicit. In this scheme, the platform provides OSPM with commands to request idle states at a lower level of the processor hierarchy which automatically imply a specific idle state request at the respective higher level of the hierarchy. There is no command to explicitly request entry into the higher level state, only the implicit request based on the lower level state.

For example, if the platform illustrated in [Figure 8-42](#) uses autopromotion for the Cluster0 Clock Gated state, neither Core0 nor Core1 can explicitly request it. However, a core level Clock Gate request from either Core0 or Core1 would imply a Cluster0 Clock Gate request. Therefore, if both cores request core clock gating (or deeper), Cluster0 will be clock gated automatically by the platform. Additional details on how autopromotion is supported by ACPI can be found in [Section 8.4.4.3.4](#).

#### 8.4.4.2.2 OS Initiated

In the OS Initiated coordination scheme, OSPM only requests an idle state for a particular hierarchy node when the last underlying processor goes to sleep. Obviously a processor always selects an idle state for itself, but idle states for higher level hierarchy nodes like clusters are only selected when the last processor in the cluster goes idle. The platform only considers the most recent request for a particular node when deciding on its idle state.

The main motivations for OS Initiated coordination are:

1. Avoid overhead of OSPM evaluating selection for higher level idle states which will not be used since other processors are still awake

2. Allow OSPM to make higher level idle state selections based on the latest information by taking only the most recent request for a particular node and ignoring requests from processors which went to sleep in the past (and may have been based on information which is now stale)

Using the above example in a simple flow would look like this:

<b>Step</b>		<b>OS View of power states</b>	<b>Platform view of power states</b>
0:	Cores 0 and 1 are both awake and running code	Core0: Running Core1: Running Cluster0: Running	Core0: Running Core1: Running Cluster0: Running
1	OS on Core0 requests Core0 PowerDown	Core0: PowerDown Core1: Running Cluster0: Running	Core0: Running Core1: Running Cluster0: Running
2	Platform observes request and places Core0 into power down	Core0: PowerDown Core1: Running Cluster0: Running	Core0: PowerDown Core1: Running Cluster0: Running
3	OS on Core1 requests Core1 PowerDown and Cluster0 PowerDown	Core0: PowerDown Core1: PowerDown Cluster0: PowerDown	Core0: PowerDown Core1: Running Cluster0: Running
4	Platform observes requests for Core1 and Cluster0 and processes them	Core0: PowerDown Core1: PowerDown Cluster0: PowerDown	Core0: PowerDown Core1: PowerDown Cluster0: PowerDown

Note that Core1 is making a cluster decision which affects both Core0 and Core1 so OSPM should consider expected sleep duration, wake up latency requirements, device dependencies, etc. for both cores and not just Core1 when requesting the cluster state.

The platform is still responsible for ensuring functional correctness. For example, if Core0 wakes back up, the cluster state requested by Core1 in the above example should be exited or the entry into the state should be aborted. OSPM has no responsibility to guarantee that the last core down is also the first core up, or that a core does not wake up just as another is requesting a higher level sleep state.

#### 8.4.4.2.2.1 OS Initiated Request Semantics

With OS Initiated coordination, the ordering of requests from different cores is critically important since the platform acts upon the latest one. If the platform does not process requests in the order the OS intended then it may put the platform into the wrong state. Consider this scenario in our example system in [Figure 8-42](#):

<b>Step</b>		<b>OS View of power states</b>	<b>Platform view of power states</b>
0:	Core0 in PowerDown, and Core1 is running	Core0: PowerDown Core1: Running Cluster0: Running	Core0: PowerDown Core1: Running Cluster0: Running

Step		OS View of power states	Platform view of power states
1	Core1 goes idle – the OSPM requests Core1 PowerDown and Cluster0 Retention	Core0: PowerDown Core1: PowerDown Cluster0: Retention	Core0: PowerDown Core1: Running Cluster0: Running
2	Core0 receives an interrupt and wakes up into platform	Core0: PowerDown Core1: PowerDown Cluster0: Retention	Core0: Running Core1: Running Cluster0: Running
3	Core0 moves into OSPM and starts processing interrupt	Core0: Running Core1: PowerDown Cluster0: Running	Core0: Running Core1: Running Cluster0: Running
4	Core0 goes idle and OSPM request Core0 Power Down, Cluster0 Power Down	Core0: PowerDown Core1: PowerDown Cluster0: PowerDown	Core0: Running Core1: Running Cluster0: Running
5	Core0's idle request "passes" Core1's request. Platform puts Core0 to Power Down but ignores cluster request since Core1 is still running	Core0: PowerDown Core1: PowerDown Cluster0: PowerDown	Core0: PowerDown Core1: Running Cluster0: Running
6	Core1's request is observed by the platform. Platform puts Core1 to Power Down and Cluster0 to retention.	Core0: PowerDown Core1: PowerDown <b>Cluster0: PowerDown!!</b> (See Note)	Core0: PowerDown Core1: PowerDown <b>Cluster0: Retention!!</b> (See Note)

**Note:** *Bold text here indicates mismatched states.*

The key issue here is the race condition between the requests from the two cores; there is no guarantee that they reach the platform in the same order the OS made them. It is not expected to be common, but Core0's request could "pass" Core1's for a variety of potential reasons – lower frequency, different cache behavior, handling of some non-OS visible event, etc. This sequence of events results in the platform incorrectly acting on the stale Cluster0 request from Core1 rather than the latest request from Core0. The net result is that Cluster0 is left in the wrong state until the next wakeup.

To address such race conditions and ensure that the platform and OS have a consistent view of the request ordering, OS Initiated idle state request semantics are enhanced to include a hierarchical dependency check. When the platform receives a request, it is responsible for checking whether the requesting core is really the last core down in the requested domain and rejecting the request if not. Note that even if OSPM and the platform are behaving correctly, they may not always agree on the state of the system due to various races. For example, the platform may see a core waking up before OSPM, and therefore see that core as running, whilst the OSPM still sees it as sleeping. The platform can start treating a particular core as being in a low power state, for the sake of the dependency check, once it has seen the core's request (so that it can be correctly ordered versus other OS requests). The platform must start treating a core as running before returning control to the OS after it wakes up from an idle state.

With this dependency check, the above example would change as follows:

Step		OS View of power states	Platform view of power states
0-4:	Same as above	Core0: PowerDown Core1: PowerDown Cluster0: PowerDown	Core0: Running Core1: Running Cluster0: Running
5	Core0's idle request "passes" Core1's request. <b>Platform rejects Core0's request since it includes Cluster0 but Core1 is still awake.</b>	Core0: PowerDown Core1: PowerDown Cluster0: PowerDown	Core0: Running Core1: Running Cluster0: Running
6	Core1's request is observed by the platform. <b>Platform rejects Core1's request since it includes Cluster0 but Core0 is still awake.</b>	Core0: PowerDown Core1: PowerDown Cluster0: PowerDown	Core0: Running Core1: Running Cluster0: Running
7	OS resumes on Core0	Core0: Running Core1: PowerDown Cluster0: Running	Core0: Running Core1: Running Cluster0: Running
8	OS resumes on Core1	Core0: Running Core1: Running Cluster0: Running	Core0: Running Core1: Running Cluster0: Running

Once control is returned to the OS, it can handle as it sees fit – likely just re-evaluating the idle state on both cores. When requests are received out of order, some overhead is introduced by rejecting the command and forcing the OS to re-evaluate, but this is expected to be rare. Requests sent by the OS should be seen by the platform in the same order the vast majority of the time, and in this case, the idle command will proceed as normal.

It is possible that the OS may choose to keep a particular hierarchy node running even if all CPUs underneath it are asleep. This gives rise to another potential corner case – see below.

Step		OS View of power states	Platform view of power states
0:	Core0 in PowerDown, and Core1 is running	Core0: PowerDown Core1: Running Cluster0: Running	Core0: PowerDown Core1: Running Cluster0: Running
1	Core1 goes idle – the OSPM OS requests Core1 PowerDown and Cluster0 Retention	Core0: PowerDown Core1: PowerDown Cluster0: Retention	Core0: PowerDown Core1: Running Cluster0: Running
2	Core0 receives an interrupt and wakes up into platform	Core0: PowerDown Core1: PowerDown Cluster0: Retention	Core0: Running Core1: Running Cluster0: Running

Step		OS View of power states	Platform view of power states
3	Core0 moves into OSPM and starts processing interrupt	Core0: Running Core1: PowerDown Cluster0: Running	Core0: Running Core1: Running Cluster0: Running
4	Core0 goes idle and OSPM request Core0 Power Down and <b>requests Cluster0 to stay running</b>	Core0: PowerDown Core1: PowerDown Cluster0: Running	Core0: Running Core1: Running Cluster0: Running
5	Core0's idle request "passes" Core1's request. Platform puts Core0 to PowerDown.  <b>Even though the OS made a request for the cluster to run, Platform does not know to reject Core0's request since it doesn't include a Cluster idle state</b>	Core0: PowerDown Core1: PowerDown Cluster0: Running	Core0: PowerDown Core1: Running Cluster0: Running
6	Core1's request is observed by the platform. Platform puts Core1 to Power Down and Cluster0 to retention.	Core0: PowerDown Core1: PowerDown <b>Cluster0: Running!!</b> (See Note, below)	Core0: PowerDown Core1: PowerDown <b>Cluster0: Retention!!</b> (See Note, below)

**Note:** *Bold text here indicates mismatched states.*

The fundamental issue is that the platform cannot infer what hierarchy level a request is for, based on what levels are being placed into a low power mode. To mitigate this, each idle state command must include a hierarchy parameter specifying the highest level hierarchy node for which the OS is making a request in addition to the normal idle state identifier. Even if the OS does not want some higher level hierarchy node to enter an idle state, it should indicate if the core is the last core down for that node. This allows the platform to understand the OS's view of the state of the hierarchy and ensure ordering of requests even if the OS requests a particular node to stay running.

This enhancement is illustrated in this example:

Step		OS View of power states	Platform view of power states
0:	Core0 in PowerDown, and Core1 is running	Core0: PowerDown Core1: Running Cluster0: Running	Core0: PowerDown Core1: Running Cluster0: Running
1	Core1 goes idle – the OSPM OS requests Core1 PowerDown and Cluster0 Retention and <b>identifies itself as last down in Cluster0</b>	Core0: PowerDown Core1: PowerDown Cluster0: Retention	Core0: PowerDown Core1: Running Cluster0: Running
2	Core0 receives an interrupt and wakes up into platform	Core0: PowerDown Core1: PowerDown Cluster0: Retention	Core0: Running Core1: Running Cluster0: Running

<b>Step</b>		<b>OS View of power states</b>	<b>Platform view of power states</b>
3	Core0 moves into OSPM and starts processing interrupt	Core0: Running Core1: PowerDown Cluster0: Running	Core0: Running Core1: Running Cluster0: Running
4	Core0 goes idle and OSPM request Core0 Power Down and requests Cluster0 to stay running <b>and identifies itself as last down in Cluster0</b>	Core0: PowerDown Core1: PowerDown Cluster0: Running	Core0: Running Core1: Running Cluster0: Running
5	Core0's idle request "passes" Core1's request. Platform rejects Core0's request <b>since it is a request for Cluster0</b> but Core1 is still awake.	Core0: PowerDown Core1: PowerDown Cluster0: PowerDown	Core0: Running Core1: Running Cluster0: Running
6	Core1's request is observed by the platform. Platform rejects Core1's request since it is a request for Cluster0 but Core0 is still awake.	Core0: PowerDown Core1: PowerDown Cluster0: PowerDown	Core0: Running Core1: Running Cluster0: Running
7	OS resumes on Core0	Core0: Running Core1: PowerDown Cluster0: Running	Core0: Running Core1: Running Cluster0: Running
8	OS resumes on Core1	Core0: Running Core1: Running Cluster0: Running	Core0: Running Core1: Running Cluster0: Running

As before, once control is returned to the OS, it can handle as it sees fit – likely just re-requesting the idle state on both cores.

#### 8.4.4.3 \_LPI (Low Power Idle States)

\_LPI is an optional object that provides a method to describe Low Power Idle states that defines the local power states for each node in a hierarchical processor topology. The OSPM uses the \_LPI object to select a local power state for each level of processor hierarchy in the system. These local state selections are then used to produce a composite power state request that is presented to the platform by the OSPM.

This object may be used inside a Processor Container or a processor declaration. \_LPI takes the following format:

##### **Arguments:**

None

**Return Value:**

A variable-length **Package** containing the local power states for the parent Processor or Processor Container device as described in the table following below. \_LPI evaluation returns the below format:

```
Package {
    Revision, // Integer (WORD)
    LevelID, // Integer (QWORD)
    Count, // Integer (WORD)
    LPI [1], // Package
    ...
    LPI [N] // Package
}
```

Element	Object Type	Description
Revision	<b>Integer</b> (WORD)	The revision number of the _LPI object. Current revision is 0.
LevelID	<b>Integer</b> (QWORD)	A platform defined number that identifies the level of hierarchy of the processor node to which the LPI states apply. This is used in composition of IDs for OS Initiated states described in <a href="#">Section 8.4.4.3.4</a> . In a platform that only supports platform coordinated mode, this field must be 0.
Count	<b>Integer</b> (WORD)	The count of following LPI packages.
LPI[1]	Package	A Package containing the definition of LPI state 1.
LPI[N]	Package	A Package containing the definition of LPI state N.

Each LPI sub-Package contains the elements described below:

```
Package() {
    Min Residency, // Integer (DWORD)
    Worst case wakeup latency, // Integer (DWORD)
    Flags, // Integer (DWORD)
    Arch. Context Lost Flags, // Integer (DWORD)
    Residency Counter Frequency, // Integer (DWORD)
    Enabled Parent State, // Integer (DWORD)
    Entry Method, // Buffer (ResourceDescriptor) or
                  // Integer (QWORD)
    Residency Counter Register // Buffer (ResourceDescriptor)
    Usage Counter Register // Buffer (ResourceDescriptor)
    State Name // String (ASCII Z)
}
```

**Table 8-269 Extended LPI fields**

Element	Object Type	Description
Min Residency	Integer (DWORD)	Minimum Residency – time in microseconds after which a state becomes more energy efficient than any shallower state. See <a href="#">Section 8.4.4.3.3</a> .

Element	Object Type	Description
Worst case wakeup latency	Integer (DWORD)	Worst case time in microseconds from a wake interrupt being asserted to the return to a running state of the owning hierarchy node (processor or processor container). See <a href="#">Section 8.4.4.3.3</a> .
Flags	Integer (DWORD)	Valid flags are described in <a href="#">Table 8-270</a>
Arch. Context Lost Flags	Integer (DWORD)	Architecture specific context loss flags. These flags may be used by a processor architecture to indicate processor context that may be lost by the power state and must be handled by OSPM. See <a href="#">Section 8.4.4.3.5</a> “Architecture Specific Context Loss Flags” for more detail.
Residency Counter Frequency	Integer (DWORD)	Residency counter frequency in cycles-per-second (Hz). Value 0 indicates that counter runs at an architectural-specific frequency. Valid only if a Residency Counter Register is defined.
Enabled Parent State	Integer (DWORD)	Every shallower power state in the parent is also enabled. 0 implies that no local idle states may be entered at the parent node.
Entry Method	Buffer or Integer (QWORD)	This may contain a resource descriptor or an integer A Resource Descriptor with a single Register() descriptor may be used to describe the register that must be read in order to enter the power state. Alternatively, an integer may be provided in which case the integer would be used in composing the final Register Value that must be used to enter this state. This composition process is described below in <a href="#">Section 8.4.4.3.4</a> “Entry Method and Composition”
Residency Counter Register	Buffer	Optional residency counter register which provides the amount of time the owning hierarchy node has been in this local power state. The time is provided in a frequency denoted by the Residency counter frequency field (see above). The register is optional. If the platform does not support it, then the following NULL register descriptor should be used: ResourceTemplate() {Register {{SystemMemory, 0, 0, 0, 0}}}
Usage Counter Register	Buffer	Optional register that provides the number of times the owning hierarchy node has been in this local power state. If the platform does not support this register, then the following NULL register descriptor should be used: ResourceTemplate() {Register {{SystemMemory, 0, 0, 0, 0}}}
State Name	String (ASCIIz)	String containing a human-readable identifier of this LPI state. This element is optional and an empty string (a null character) should be used if this is not supported.

**Table 8-270 Flags for LPI states**

Element	Bits	Description
Enabled	0	1 if the power state is enabled for use 0 if the power state is disabled

It is not required that all processors or processor containers include \_LPI objects. However, if a processor container includes an \_LPI object, then all children processors or processor containers must have \_LPI objects.

The following sections describe the more complex properties of LPI in more detail, as well as rules governing wakeup for LPI states.

#### 8.4.4.3.1 Disabling a State

When a local state is disabled by clearing the Enabled bit in the Flags field, any deeper states for that node are *not* renumbered. This allows other properties which rely on indexing into the state list for that node (Enabled Parent State for example) to not change.

Disabled states should not be requested by the OS and values returned by Residency/Usage Counter Registers are undefined.

#### 8.4.4.3.2 Enabled Parent State

As mentioned above, LPI represent local states, which must be combined into a composite state. However not every combination is possible. Consider the example system described in [Figure 8-42](#). In this system it would not be possible to simultaneously select clock gating as local state for Core0 and power down as local state for Cluster0. As Core0 is physically in Cluster0, power gating the cluster would imply power gating the core. The correct combinations of local states for this example system are described in [Table 8-268](#). LPI states support enumeration of the correct combinations through the Enabled Parent State (EPS) property.

LPI States are 1-indexed. Much like C and S states, LPI0 is considered to be a running state. For a given LPI, the EPS is a 1 based index into the processor containers' \_LPI states. The index points at the deepest local power state of the parent processor that the given LPI state enables. Every shallower power state in the parent is also enabled. Taking the system described in [Figure 8-42](#), the states and EPS value for the states is described in [Table 8-271](#).

**Table 8-271 Enabled Parent State values for example system**

System Level Processor Container LPI States		Enabled Parent State
0	Running	N/A
1	Power Down	0
Cluster Level Processor Container LPI States		
0	Running	N/A
1	Clock Gating	0 – System must be running if cluster is clock gated
2	Retention	0 – System must be running if cluster is in retention
3	Power Down	1 – System may be in power down if cluster is in power down
Core Level Processor Container LPI States		
0	Running	N/A
1	Clock Gating	1 – Cluster may be clock gated or running of core is clock gated
2	Retention	2 – Cluster may be running, or clock gated, or in retention if core is in retention
3	Power Down	3 – All states at cluster level are supported if the core is powered down

#### 8.4.4.3.3 Power, Minimum Residency, and Worst Case Wakeup Latency

Power is not included in \_LPI since relative power of different states (along with minimum residency to comprehend transition energy), and not absolute power, drive OSPM idle state decisions. To correctly convey relative power, local states in \_LPI must be declared in power consumption order. That is, the local states for a particular hierarchy node must be listed from highest power (shallowest) to lowest power (deepest).

The worst case wakeup latency (WCWL) for a particular local state is the longest time from when a wake interrupt is asserted, to when the hierarchy node can return to execution. Generally, the WCWL will be the idle state's exit latency plus some portion of its entry latency. How much of the entry flow is included depends on where (and if) the platform supports checking for pending wake events and aborting the idle state entry. For any given power state there will be a “point of no return” after which the entry into the power state cannot be reversed. This is illustrated in [Figure 8-43](#) below. The WCWL must include the time period from the point of no return to the time at which a wake up interrupt can be handled.

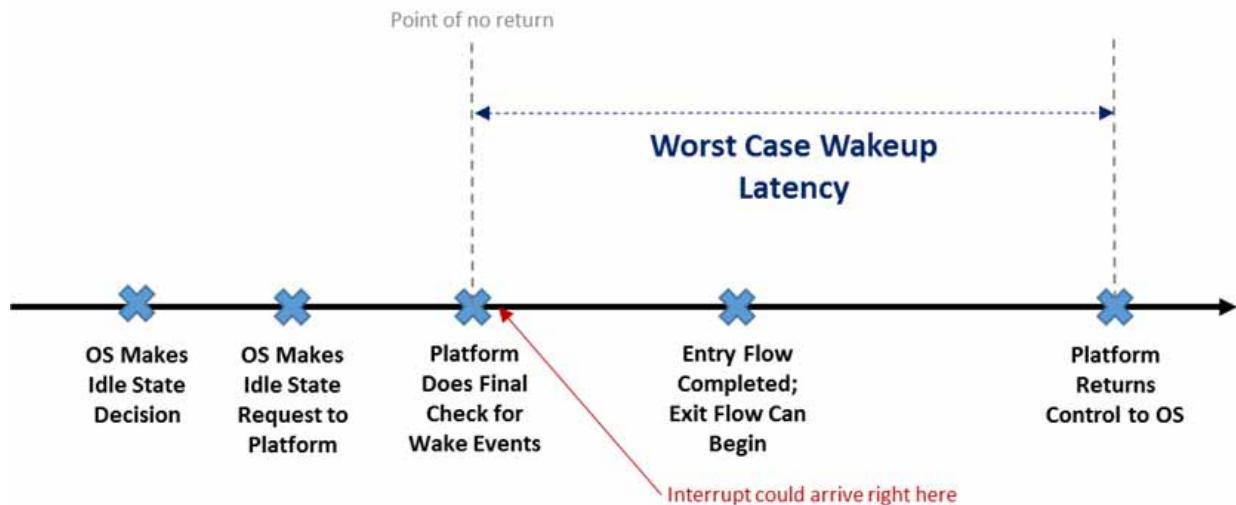


Figure 8-43 Worst case wake latency

Note that other worst case paths could end up determining the WCWL, but what is described above is expected to be the most common. For example, there could be another period between the OS making the idle request and the point of no return where the platform does not check for wake up events, and which is longer than the time taken to enter and exit the power state. In that case that period would become the worst case wakeup latency.

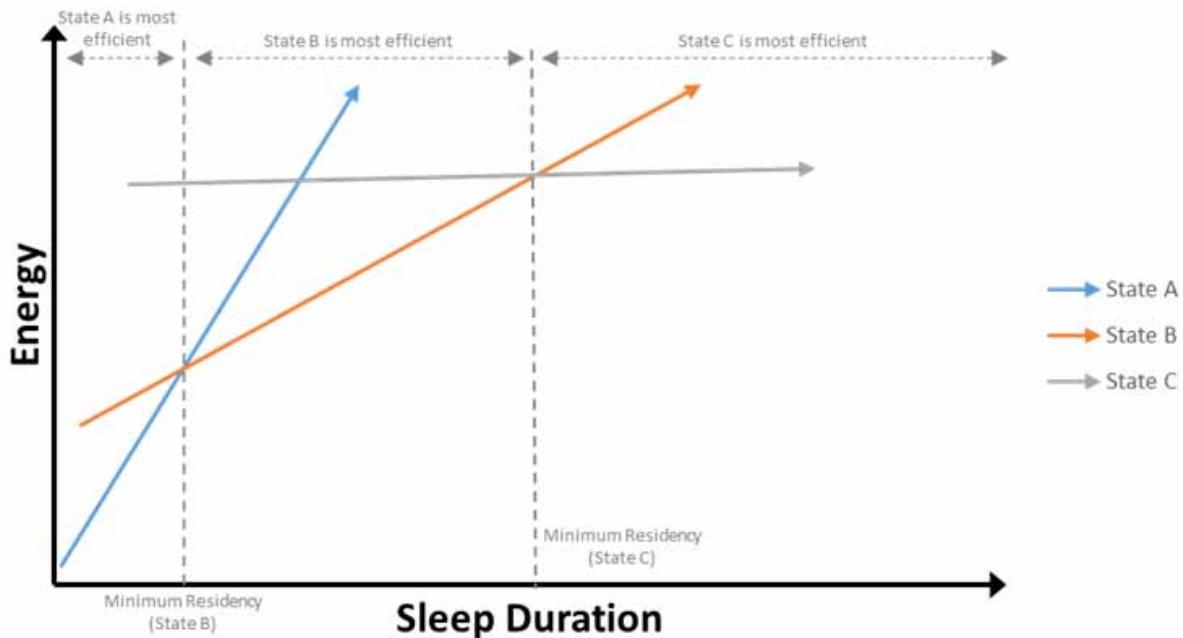


Figure 8-44 Energy of states A,B and C versus sleep duration

Minimum residency (MR) is the time after which a state becomes more energy efficient than any shallower state. This parameter answers the fundamental question: how long does the hierarchy node

need to stay in the idle state to overcome the energy cost of transitioning in/out, and make choosing that state a net win relative to shallower alternatives? Note that this also includes comparing against not entering an idle state and keeping the node running. This is illustrated in [Figure 8-44](#) which shows the energy associated with three different state choices as a function of the sleep duration. Note that State A's MR relative to keeping the node running is not pictured.

Generally minimum residency and worst case wakeup latency will be larger for deeper states, however this may not always be the case. Taking a different example to the above, consider two system level states, StateY and StateZ, with similar entry overhead but where StateZ saves more power than StateY. An abstract state list might look like:

```
StateX: MR = 100 us
StateY: MR = 1000 us
StateZ: MR = 800 us, power resource A must be OFF
```

From an energy perspective, StateZ is always preferred, but in this example, StateZ is only available when certain device dependencies are met. This makes StateY attractive when the dependencies cannot be met. Despite being the deeper (lower power) state, StateZ has a lower MR than StateY since the entry overheads are similar and StateZ's lower power more quickly amortizes the transition cost. Although the crossover, which sets MR, should generally be versus the next shallowest state, MR is defined relative to any shallower (higher power) state to deal with cases like this. In this case, StateZ's MR is set by the crossover with StateX since StateZ (if allowed based on device dependencies) is always preferred to StateY. To achieve the lowest energy, OSPM must select the deepest (lowest power) state for which all entry constraints are satisfied and should not assume that deeper states are not viable just because a shallower state's WCWL/MR threshold was not met.

Since WCWL may be used by OSPM to restrict idle state selection and guarantee response times to critical interrupts, it should be set conservatively (erring on the high side) so that OSPM is not surprised with worse than specified interrupt response time. On the other hand, MR helps OSPM make efficient decisions. If MR is inaccurate in a certain scenario and OSPM chooses a state which is deeper or shallower than optimal for a particular idle period, there may be some wasted energy but the system will not be functionally broken. This is not to say that MR doesn't matter –energy efficiency is important – just that the platform may choose to optimize MR based on the typical case rather than the worst case.

#### **8.4.4.3.3.1 Minimum Residency and Worst Case Wakeup Latency Combination Across Hierarchy Levels**

The WCWL in \_LPI is for a particular local state. When evaluating composite state choices versus system latency tolerance as part of idle state selection, OSPM will add wakeup latencies across hierarchy levels. For example, if a system has core powerdown with WCWL = 50 us and cluster powerdown with WCWL = 20 us then the core powerdown + cluster powerdown composite state latency is calculated as 70 us.

MRs defined in \_LPI apply to a particular hierarchy node. The implicit assumption is that each hierarchy node represents an independent power manageable domain and can be considered separately. For example, assume that a cluster retention state is legal if the underlying cores are in core powerdown or core retention. The MR for cluster retention is based on the energy cost of taking shared logic outside of the cores in and out of retention versus the steady state power savings achieved in that shared logic while in that state. The key is that the specific state chosen at the core level does not fundamentally affect the cluster level decision since it is tied to properties of shared logic outside the core. The energy

cost of entering/exiting the cluster state and the power savings it provides are independent of whether the core is in retention or powerdown. Based on this, MRs are considered independent per level in ACPI. That is, when comparing MR for different states to expected sleep duration for a particular node, OSPM uses the MRs defined in that node's \_LPI as is with no adjustment based on states at lower levels of hierarchy (though of course the state must be legal based on the lower level state's Enabled Parent State property).

#### 8.4.4.3.3.2 Known Limitations with Minimum Residency and Worst Case Wakeup Latency

Note that the WCWL and MR parameters are not perfect. For example, they do not scale with frequency, voltage, temperature, and various other factors which may affect them. Nor are the rules for how they combine across levels perfect. For example, cluster level MRs may move slightly based on core state choice since the entry latency of the core state will delay entry into the cluster state, derating the expected sleep duration. The cluster level MR can be adjusted to comprehend this, but if multiple core level states with different entry latencies enable the same cluster state, then its MR cannot perfectly comprehend them all. With that said, this set of parameters and combination scheme is believed to strike a good balance between simplicity/usability and accuracy.

#### 8.4.4.3.4 Entry Method and Composition

The OSPM combines Local LPI states to create an overall composite power state. Each LPI state provides an entry method field. These fields, for the selected local power states, are combined to create the entry method register that must be read in order to enter a given composite power state.

To derive the appropriate register address from the local states' entry methods, the following approach is used:

1. Local states for Processors always declare a register based entry method. This provides a base register.
2. Higher levels may use an integer or a register. If an Integer is used, then its value must be added to the base register obtained in step 1. If a register is used, then this becomes the new base register, overriding any previous value. Note that in this case, the selected LPI must imply specific local LPI selections for all lower level nodes.
3. In OS Initiated mode it is also necessary for the OSPM to tell the platform on which hierarchy level the calling processor is the last to go idle. This is done by adding the Level ID property of the hierarchy node's LPI to the base register.

The basic composition algorithm for entry state is shown in the pseudo-code below for a platform coordinated system:

```

Reg = SelectedLocalState(CurrentProcessor).EntryMethod
WCWL = SelectedLocalState(CurrentProcessor).WCWL
MR = SelectedLocalState(CurrentProcessor).MR

for level = Parent(Processor) to system
    LocalState = SelectedLocalState(level)
    if LocalState == Run
        break
    EM = LocalState.EntryMethod
    WCWL = WCWL + LocalState.WCWL
    MR = LocalState.MR
    if !IsInteger(EM)

```

```

Reg. Addr = Reg. Addr+ZeroExtend(EM)
Else
    // Entry method here overrides any previous method
    Reg = EM

CompositeState.EntryMethod = Reg
CompositeState.WCWL=WCWL
CompositeState.MR=MR

In OS Initiated mode it is also necessary for the OSPM to tell the platform on which hierarchy level the calling processor is the last to go idle and request a power state. To do this, the algorithm above is modified as follows:

Reg = SelectedLocalState(CurrentProcessor).EntryMethod
WCWL = SelectedLocalState(CurrentProcessor).WCWL
MR = SelectedLocalState(CurrentProcessor).MR

RegDecided = False
// Retrieve Level Index from Processor's _LPI object
LastLevel = GetLevelIDOfLevel(CurrentProcessor)

for level = Parent(CurrentProcessor) to system
    LocalState = SelectedLocalState(level)

    If LocalState == Run
        break
    EM = LocalState.EntryMethod
    WCWL = WCWL+ LocalState.WCWL

    EM = LocalState.EntryMethod
    If IsInteger(EM)
        Reg. Addr = Reg. Addr+ZeroExtend(EM)
    Else
        // Entry method is register
        Reg = EM

    If IsProcessorLastInLevel(CurrentProcessor, level)
        // If calling processor is last one to go idle in
        // current level, retrieve Level Index from
        // the container's _LPI object
        LastLevel = GetLevelIDOfLevel(level)

Reg. Addr = Reg. Addr+LastLevel
CompositeState.EntryMethod = Reg
CompositeState.WCWL=WCWL
CompositeState.MR=MR

```

In a platform coordinated system, it is possible for an LPI belonging to a hierarchy node above the processor level to use an integer value of zero as its entry method. Since entry method composition is done by addition, this results in the entry command for that state being the same as for a composite state

which only includes its children. An entry value of 0 essentially identifies a state as “autopromotable.” This means that the OS does not explicitly request entry into this state, but that the platform can automatically enter it when all children have entered states which allow the parent state based on their EPS properties. OSPM should follow normal composition procedure for other parameters (worst case wakeup latency, minimum residency, etc.) when including composite states involving autopromotable local states.

This is described in the following example:

```

Device (SYSM) { // System level states
    Name (_HID, "ACPI0010")
    Name (_UID, 0)
    Name (_LPI,
        Package() {
            0, // Version
            0, // Level ID
            1, // Count

            Package () { // Power gating state for system
                900, // Min residency (uS)
                400, // Wake latency (uS)
                0, // Enabled Parent State
                ... // (skipped fields). . .
                ResourceTemplate () {
                    // Register Entry method
                    Register(FFH, 0x20, 0x00, 0x00000000DECEA5ED, 0x3)
                },
                ... // (skipped fields). . .
            }
        }
    )

Device (CLU0) { // Package0 state
    Name (_HID, "ACPI0010")
    Name (_UID, 1)
    Name (_LPI,
        Package() {
            0, // Version
            0, // Level ID
            2, // Count
            Package () { // Retention state for Cluster
                40, // Min residency (uS)
                20, // Wake latency (uS)
                ... // (skipped fields). . .
                0, // System must be running
                0, // Integer Entry method
                ... // (skipped fields). . .
            },
            Package () { // Power Gating state for Cluster
                100, // Min residency (uS)
                80, // Wake latency (uS)
                ... // (skipped fields). . .
            }
        }
    )
}

```

```

        1, // System may power down
        0x1020000, // Integer Entry method
        ... // (skipped fields). . .
    }
}

Name(PLPI,
    Package() {
        0, // Version
        0, // Level ID
        2, // Count
        Package () { // Retention state for CPU
            40, // Min residency (uS)
            20, // Wake latency (uS)
            ... // (skipped fields). . .
            1, // Parent node can be
                // in retention or running
            ResourceTemplate () {
                // Register Entry method
                Register(FFH,
                    0x20, 0x00,
                    0x000000000000DEAF, 0x3),
                }
            ... // (skipped fields). . .
        },
        Package () { // Power Gating state for CPU
            100, // Min residency (uS)
            80, // Wake latency (uS)
            ... // (skipped fields). . .
            2, // Parent node can be in any state
            ResourceTemplate () {
                // Register Entry method
                Register(FFH,
                    0x20, 0x00,
                    0x000000000000DEAD, 0x3),
                }
            ... // (skipped fields). . .
        }
    }
}

Device (CPU0) { // Core0
    Name (_HID, "ACPI0007")
    Method (_LPI, 0, NotSerialized)
    {
        return(PLPI)
    }
}

Device (CPU1) { // Core1
}

```

```

        Name (_HID, "ACPI 0007")
        Method (_LPI, 0, NotSerialized)
    {
        return(PLPI)
    }
}

} // end of NODO

Device (CLU1) { // Package1 state
    Name (_HID, "ACPI 0010")
    Name (_UID, 2)

    ...
}

} // End of SYM

```

In the example above, the OSPM on CPU0 and CPU1 would be able to select the following composite states:

**Table 8-272 Entry method example**

Core LPI	Cluster LPI	System LPI	Composite State Entry Method
Retention Register: 0xDEAF	Run	Run	Core Retention Register: 0xDEAF
Power Down Register 0xDEAD	Run	Run	Core Power Down Register: 0xDEAD
Retention Register: 0xDEAF	Retention Integer: 0x0	Run	Core Retain Cluster Retention Register 0xDEAF+0x0 = 0xDEAF
Power Down Register: 0xDEAD	Retention Integer: 0x0	Run	Core Power Down Cluster Retention Register 0xDEAD+0x1020000 = 0xDEAD
Power Down Register: 0xDEAD	Power Down Integer: 0x1020000	Run	Core Power Down Cluster Power Down Register 0xDEAD+0x1020000 = 0x102DEAD
Power Down Register: 0xDEAD	Power Down Integer: 0x1020000	Power Down Register : 0xDECEA5ED	System Power Down Register 0xDECEA5ED

As can be seen in the example, the cluster level retention state defines the integer value of 0 as its entry method. By virtue of composition, this means that the entry methods for the composite states Core Power Down and Core Power Down|Cluster Retention are the same (FFH register 0xDEAD). Similarly the composite states for Core Retention and Core Retention|Cluster Retention are the same (FFH register

0xDEAF). Consequently, if both CPU0 and CPU1 are in either Power Down or Power Retention, then the platform may enter cluster CLU0 into Retention.

The example also shows how a register based entry method at a high level overrides entry method definitions of lower levels. As pointed above this is only possible if the selected LPI implies specific LPIs at all lower levels. In this example the System Power Down LPI, entered through FFH register 0xDECEA5ED, implies Power Down LPIs at core and cluster level since based on EPS, no other core/cluster local states could enable System Power Down.

#### 8.4.4.3.5 Architecture Specific Context Loss Flags

For Intel based systems the value of this flags register is 0.

For ARM based systems please refer to links to ACPI-Related Documents (<http://uefi.org/acpi>) under the heading "ARM FFH Specification".

#### 8.4.4.3.6 Residency and Entry Counter Registers

LPI state descriptions may optionally provide Residency and Usage Count registers to allow the OSPM to gather statistics about the platform usage of a given local state. Both registers provide running counts of their respective statistics. To measure a statistic over some time window, OSPM should sample at the beginning and end and calculate the delta. Whether the counters restart from 0 on various flavors of reset/S-state exit is implementation defined so OSPM should resynchronize its baseline on any reset or Sx exit.

The registers are optional, and if the feature is not present the platform must use a NULL register of the following form:

```
ResourceTemplate() {Register {(SystemMemory, 0, 0, 0, 0)}}
```

The Usage Count register counts how many times the local state has been used. Whether it counts entries or exits is implementation defined.

The Residency register counts how long the hierarchy node has been in the given LPI state, at a rate given by LPI's Residency Counter Frequency field. A frequency of 0 indicates that the counter runs at an architecture-specific frequency. Whether the Residency counter runs continuously while in a local state or updates only on exit is implementation defined. If OSPM wants to guarantee that the reading for a particular state is current, it should read from that processor itself (or one of the underlying child processors in the case of a higher level idle state).

#### 8.4.4.3.7 Wake from LPI States

With \_LPI, the platform can describe deep S0-idle states which may turn off fundamental resources like bus clocks, interrupt controllers, etc. so special care must be taken to ensure that the platform can be woken from these states. This section describes handling for device initiated wakes. There are other wake sources such as timers, which are described elsewhere.

For device wakes, the requirement is that OSPM must not enter any LPI state that would prevent a device enabled for wake from waking the system. This means not entering any LPI state for which any Power Resource listed in \_RDI (see the \_RDI section [Section 8.4.4.4](#)) is required to be ON. Note that on a platform coordinated system, the OSPM may choose to enter an \_LPI state even if there are resources listed in its companion RDI that are still on. However, if the OSPM has already enabled a device for wake,

and ensured the power resources needed for wake are on, the platform will demote the LPI state to one where said resources remain on.

The wake device uses the standard \_PRx and \_PRW methods to describe power resources it requires to be ON based on its D-state and wake enabled status. This further implies that any device enabled for wake which depends on a resource which may be turned off as part of an LPI state must describe that dependency via \_PRx/\_PRW => \_RDI => \_LPI.

This is illustrated in the following example:

```

PowerResource(PWRA, 0, 0) {...}
PowerResource(PWRB, 0, 0) {...}
PowerResource(PWRC, 0, 0) {...}
PowerResource(PWRD, 0, 0) {...}
PowerResource(PWRE, 0, 1) {...}

Device (F00) {
    Name(_SOW, 4)           // Device in D3Cold can wake system from S0-idle
    Name(_PRO, Package(){PWRA, PWRB, PWRC})
    Name(_PR2, Package(){PWRA, PWRB})
    Name(_PR3, Package(){PWRA})
    Name(_PRE, Package(){PWRD})
    Name(_PRW, Package(){0, 0, PWRD}) // PWRD must be ON for F00 to wake system
}

Device (BAR) {
    Name(_SOW, 3)           // Device in D3Hot can wake system from S0-idle
    Name(_PRO, Package(){PWRA, PWRB})
    Name(_PR3, Package(){PWRC})
    Name(_PRW, Package(){PWRC}) // PWRC must be ON for BAR to wake system
}

Device (BAH) {
    Name(_SOW, 0)           // This device can only wake the system from
                           // S0-idle if it is in D0
    Name(_PRO, Package(){PWRA, PWRB, PWRC})
}

Device (SYM) {
    Name(_RDI,
        Package() {
            0, // Version
            Package(){}           // Local State 1 is Shallow;
                           // Devices F00, BAR and BAH can wake
                           // the system if enabled for wake
            Package(){PWRA, PWRB} // RDI for Local State 2. State is deeper
                           // Device BAH cannot wake the system if this
                           // state is used, as it needs PWRA and PWRB
                           // to be able to wake the system
            Package(){PWRA, PWRB, PWRC} // RDI for Local State 3.
        }
    )
}

```

```

        // Devices BAH and BAR cannot wake
        // the system, BAH needs PWRA, PWRB
        // and PWRC, and BAR needs PWRC
        // for all devices
    Package() {PWRA, PWRB, PWRC, PWRD} // None of the devices listed
                                         // above could wake the system
}
...

```

The example above declares a set of power resources (PWRA/B/C/D). Additionally, it has four system level local states that have the following dependencies:

- LPI 1: Has no power resources dependencies
- LPI 2: Requires PWRA and PWRB to be off
- LPI 3: Requires PWRA, PWRB and PWRC to be off
- LPI 4: Requires all of the power resources in the example to be off

Device BAH can only wake the system if it is in the D0 state. To be in D0 it requires PWRA, PWRB and PWRC to be on. Therefore device BAH could only wake the system from LPI 1. If this device is enabled for wake, then the platform must not enter LPI 2 or deeper.

Device BAR can wake the system in whilst it is in any device state other than D3Cold. However, to do so, it requires PWRC to be on. Therefore it can only wake the system from LPI 1 or LPI 2. If this device is enabled for wake, then the platform must not enter LPI 3 or deeper.

Device FOO can wake the system whilst it is in any device state. However to do so, it requires PWRD to be on. Therefore it can only wake the system from LPI 1 or LPI 2 or LPI 3. If this device is enabled for wake, then the platform must not enter LPI 4.

#### 8.4.4.3.8 Default Idle State

The shallowest idle state for each leaf node in the hierarchy is the “default” idle state for that processor and is assumed to always be enterable. The worst case wakeup latency and minimum residency for this state must be low enough that OSPM need not consider them when deciding whether to use it. Aside from putting the processor in a power state, this state has no other software-visible effects. For example, it does not lose any context that OSPM must save/restore or have any device dependencies.

#### 8.4.4.4 \_RDI (Resource Dependencies for Idle)

Some platforms may have power resources that are shared between devices and processors. Abstractly, these resources are managed in two stages. First, the OS does normal power resource reference counting to detect when all device dependencies have been satisfied and the resource may be power managed from the device perspective. Then, when the processors also go idle, the OS requests entry into specific LPI states and the platform physically power manages the resources as part of the transition. The dependency between the power resources and the LPI state is described in \_RDI.

\_RDI objects may only be present at the root processor container that describes the processor hierarchy of the system. \_RDI is not supported in a system that has more than one root node. \_RDI is valid only in a singular top level container which encompasses all processors in the system.

The OSPM will ignore \_RDI objects that are present at any node other than the root node. This simplification avoids complicated races between processors in one part of the hierarchy choosing idle states with resource dependencies while another processor is changing device states/power resources.

**Arguments:**

None

**Return Value:**

A variable-length **Package** containing the resource dependencies with the following format:

Return Value Information

```
Package {
    Revision, // Integer (WORD)
    RDI [1], // Package
    ...
    RDI [N] // Package
}
```

Element	Object Type	Description
Revision	<b>Integer</b> (WORD)	The revision number of the _RDI object. Current revision is 0.
RDI[1]	Package	A variable length Package containing the power resource dependencies of system level power state 1.
RDI[N]	Package	A variable length Package containing the power resource dependencies of system level power state N.

Each RDI[x] sub-**Package** contains a variable number of **References** to power resources:

```
Package {
    Resource[0], // Object Reference to a Power Resource Object
    ...
    Resource[M] // Object Reference to a Power Resource Object
}
```

The **Package** contains as many RDI packages as there are system level power states in the root processor container node's \_LPI object. The indexing of LPI power states in this \_LPI object matches the indexing of the RDI packages in the \_RDI object. Thus the nth LPI state at the system level has resource dependencies listed in the nth RDI. Each RDI package returns a list of the power resource objects (passive or standard power resources) that must be in an OFF state to allow the platform to enter the LPI state. If a system level LPI does not have any resource dependencies, the corresponding RDI should be an empty **Package**.

Both traditional and passive power resources can be listed as dependencies in \_RDI. For traditional power resources, OSPM should ensure that the resource is OFF before requesting a dependent LPI state. For passive power resources, there are no \_ON/\_OFF/\_STA methods so the only requirement is to check that the reference count is 0 before requesting a dependent LPI state.

OSPM requirements for ordering between device/power resource transitions and power resource dependent LPI states differ based on the coordination scheme.

In a platform coordinated system the platform must guarantee correctness and demote the requested power state to one that will satisfy the resource and processor dependencies. OSPM may use the dependency info in \_RDI as it sees fit, and may select a dependent LPI state even if resources remain ON.

In an OS initiated system, OSPM must guarantee that all power resources are off (or reference counts are 0, for passive power resources) before requesting a dependent LPI state.

#### 8.4.4.1 Example

The following ASL describes a system that uses \_RDI to describe the dependencies between three power resources and system level power states:

```

PowerResource(PWRA, 0, 0) {      // power rail local to DEVA
    Method(_ON) {...}           // active power resource (_OFF turns rail off)
    Method(_OFF) {...}
    Method(_STA) {...}
}

PowerResource(PWRB, 0, 0) {      // power rail shared between DEVB and the processor
    Method(_ON) {...}           // active power resource (_OFF drives platform vote)
    Method(_OFF) {...}
    Method(_STA) {...}
}

PowerResource(PWRC, 0, 0) {}     // clock rail shared between DEVC and the processor
                                // passive power resource

Device (DEVA) {
    Name(_PRO, Package() {PWRA})
}

Device (DEVB) {
    Name(_PRO, Package() {PWRB})
}

Device (DEVC) {
    Name(_PRO, Package() {PWRC})
}

Device (SYM) {
    Name(_RDI,
        Package() {
            0,                      // Revision
            Package() {}           // Local State 1 has no power resource
                                    // dependencies
            Package() {PWRA}       // Local State 2 cannot be entered if DEVA
                                    // is in D0 due to PWRA
            Package() {PWRA, PWRB, PWRC} // Local State 3 cannot be entered if
        }
    )
}

```

```

    // DEVA is in D0 (due to PWRA), DEVB is in
    // D0 (due to PWRB) or DEVC is in D0
    // (due to PWRC)
  })
...

```

OSPM will turn the traditional power resource (PWRA) ON or OFF by waiting for the reference count to reach 0 (meaning DEVA has left D0) and running the \_OFF method. Similarly, PWRB is turned ON or OFF based on the state of DEVB. Note that because the CPUs require the shared power rail to be ON while they are running, PWRB's \_ON and \_OFF drive a vote rather than the physical HW controls for the power rail. In this case, \_STA reflects the status of the vote rather than the physical state of PWRB.

OSPM guarantees ordering between PWRA/PWRB's \_ON and \_OFF transitions and DEVA/DEVB's D-state transitions. That is, PWRA can only be turned OFF after DEVA has left D0, and must be turned ON before transitioning DEVA to D0. However, the OS requirements for ordering between power resource transitions and power resource dependent LPI states differ based on the coordination scheme.

In a platform coordinated system, OSPM may or may not track the power state of PWRA before selecting local state 2 or 3. The platform must independently guarantee that PWRA is OFF before entering local state 2 or 3, and must demote to a shallower state if OSPM selects local state 2 or 3 when PWRA is still on. Note that because OSPM is required to correctly sequence power resource transitions with device power transitions, the platform does not need to check the state of DEVA; it can rely on the state of PWRA to infer that DEVA is in an appropriate D-state.

Similarly, OSPM may or may not track the state of PWRB and PWRC before selecting local state 3, and the platform must independently guarantee that PWRB is off before entering either state. Because PWRC is a passive power resource, the platform does not know when the reference count on the power resource reaches 0 and instead must track DEVC's state itself. Unless the platform has other mechanisms to track the state of DEVC, PWRC should be defined as a traditional power resource so that the platform can use its \_ON and \_OFF methods to guarantee correctness of operation.

In an OS initiated system, OSPM is required to guarantee that PWRA is OFF before selecting either local state 2 or 3. OSPM may meet this guarantee by waiting until it believes a processor is the last man down in the system, before checking the state of PWRA, and only selecting local state 2 or 3 in this case. If the processor was the last man down, then the request to enter local state 2 or 3 is legal and the platform can honor it. If another processor woke up in the meantime and turned PWRA on, then this becomes a race between processors which is addressed in the OS Initiated Request Semantics section ([Section 8.4.4.2.2.1](#)). Similarly, OSPM must guarantee PWRB is off and PWRC's reference count is 0 before selecting local state 3.

In an OS initiated system, because OSPM guarantees that power resources are in their correct states before selecting system power states, the platform should use passive power resources unless there is additional runtime power savings to turning a power resource OFF. On a platform that only supports OS Initiated transitions, PWRB should be defined as a passive power resource because it is shared with processors and can only be turned off when the system power state is entered.

#### 8.4.4.5 Compatibility

In order to support older operating systems which do not support the new idle management infrastructure, the \_OSC method can be used to detect whether the OSPM supports parsing processor containers and objects associated with LPIs and (\_LPI, \_RDI). This is described in [Section 6.2.11.1](#).

A platform may choose to expose both \_CST and \_LPI for backward compatibility with operating systems which do not support \_LPI. In this case, if OSPM supports \_LPI, then it should be used in preference to \_CST. At run time only one idle state methodology should be used across the entire processor hierarchy - \_LPI or \_CST, but not a mixture of both.

## 8.4.5 Processor Throttling Controls

ACPI defines two processor throttling (T state) control interfaces. These are:

- The Processor Register Block's (P\_BLK's) P\_CNT register.
- The combined \_PTC, \_TSS, and \_TPC objects in the processor's object list.

P\_BLK based throttling state controls are described in [Section 4](#), “ACPI Hardware Specification” and [Section 8.1.1](#), “Processor Power State C0”. Combined \_PTC, \_TSS, and \_TPC based throttling state controls expand the functionality of the P\_BLK based control allowing the number of T states to be dynamic and accommodate CPU architecture specific T state control mechanisms as indicated by registers defined using the Functional Fixed Hardware address space. While platform definition of the \_PTC, \_TSS, and \_TPC objects is optional, all three objects must exist under a processor for OSPM to successfully perform processor throttling via these controls.

### 8.4.5.1 \_PTC (Processor Throttling Control)

\_PTC is an optional object that defines a processor throttling control interface alternative to the I/O address spaced-based P\_BLK throttling control register (P\_CNT) described in [Section 4](#), “ACPI Hardware Specification”. The processor throttling control register mechanism remains as defined in [Section 8.1.1](#), “Processor Power State C0.”

OSPM performs processor throttling control by writing the Control field value for the target throttling state (T-state), retrieved from the Throttling Supported States object (\_TSS), to the Throttling Control Register (THROTTLE\_CTRL) defined by the \_PTC object. OSPM may select any processor throttling state indicated as available by the value returned by the \_TPC control method.

Success or failure of the processor throttling state transition is determined by reading the Throttling Status Register (THROTTLE\_STATUS) to determine the processor's current throttling state. If the transition was successful, the value read from THROTTLE\_STATUS will match the “Status” field in the \_TSS entry that corresponds to the targeted processor throttling state.

#### Arguments:

None

#### Return Value:

A Package as described below

### Return Value Information

```
Package
{
    Control Register      // Buffer (Resource Descriptor)
    StatusRegister        // Buffer (Resource Descriptor)
}
```

**Table 8-273 PTC Package Values**

Element	Object Type	Description
Control Register	Buffer	Contains a Resource Descriptor with a single <b>Register()</b> descriptor that describes the throttling control register.
Status Register	Buffer	Contains a Resource Descriptor with a single <b>Register()</b> descriptor that describes the throttling status register.

The platform must expose a \_PTC object for either all or none of its processors. Notice that if the \_PTC object exists, the specified register is used instead of the P\_CNT register specified in the Processor term. Also notice that if the \_PTC object exists and the \_CST object does **not** exist, OSPM will use the processor control register from the \_PTC object and the P\_LVLx registers from the P\_BLK.

## Example

This is an example usage of the \_PTC object in a Processor object list:

```
Processor (
    \_SB.CPU0,           // Processor Name
    1,                  // ACPI Processor number
    0x120,              // PBLK system IO address
    6 )                // PBLK Len
{
    // Object List

    Name(_PTC, Package ()) // Processor Throttling Control object
    {
        ResourceTemplate(){Register(FixedHW, 0, 0, 0)},          // Throttling_CTRL
        ResourceTemplate(){Register(FixedHW, 0, 0, 0)}           // Throttling_STATUS
    }
}
} // End of Object List
```

## Example

This is an example usage of the \_PTC object using the values defined in ACPI 1.0. This is an illustrative example to demonstrate the mechanism with well-known values.

```
Processor (
    \_SB.CPU0,           // Processor Name
    1,                  // ACPI Processor number
    0x120,              // PBLK system IO address
    6 )                // PBLK Len
{
    // Object List

    Name(_PTC, Package ()) // Processor Throttling Control object -
                           // 32 bit wide IO space-based register at the <P_BLK>
address
    {
        ResourceTemplate(){Register(SystemIO, 32, 0, 0x120)}, // Throttling_CTRL
        ResourceTemplate(){Register(SystemIO, 32, 0, 0x120)}  // Throttling_STATUS
    }
}
} // End of Object List
```

### 8.4.5.2 \_TSS (Throttling Supported States)

This optional object indicates to OSPM the number of supported processor throttling states that a platform supports. This object evaluates to a packaged list of information about available throttling states including percentage of maximum internal CPU core frequency, maximum power dissipation, control register values needed to transition between throttling states, and status register values that allow OSPM to verify throttling state transition status after any OS-initiated transition change request. The list is sorted in descending order by power dissipation. As a result, the zeroth entry describes the highest performance throttling state (no throttling applied) and the ‘*n*th’ entry describes the lowest performance throttling state (maximum throttling applied).

When providing the \_TSS, the platform must supply a \_TSS entry whose **Percent** field value is 100. This provides a means for OSPM to disable throttling and achieve maximum performance.

#### Arguments:

None

#### Return Value:

A variable-length **Package** containing a list of Tstate sub-packages as described below

### Return Value Information

```
Package {
    TState [0]           // Package – Throttling state 0
    ...
    TState [n]           // Package – Throttling state n
}
```

Each Tstate sub-**Package** contains the elements described below:

```
Package {
    Percent             // Integer (DWORD)
    Power               // Integer (DWORD)
    Latency              // Integer (DWORD)
    Control              // Integer (DWORD)
    Status               // Integer (DWORD)
}
```

**Table 8-274 TState Package Values**

Element	Object Type	Description
Percent	Integer (DWORD)	Indicates the percent of the core CPU operating frequency that will be available when this throttling state is invoked. The range for this field is 1-100. This percentage applies independent of the processor’s performance state (P-state). That is, this throttling state will invoke the percentage of maximum frequency indicated by this field as applied to the <b>CoreFrequency</b> field of the _PSS entry corresponding to the P-state for which the processor is currently resident.

Element	Object Type	Description
Power	<b>Integer</b> (DWORD)	Indicates the throttling state's maximum power dissipation (in milliWatts). OSPM ignores this field on platforms that support P-states, which provide power dissipation information via the _PSS object.
Latency	<b>Integer</b> (DWORD)	Indicates the worst-case latency in microseconds that the CPU is unavailable during a transition from any throttling state to this throttling state.
Control	<b>Integer</b> (DWORD)	Indicates the value to be written to the Processor Control Register (THROTTLE_CTRL) in order to initiate a transition to this throttling state.
Status	<b>Integer</b> (DWORD)	Indicates the value that OSPM will compare to a value read from the Throttle Status Register (THROTTLE_STATUS) to ensure that the transition to the throttling state was successful. OSPM may always place the CPU in the lowest power throttling state, but additional states are only available when indicated by the _TPC control method. A value of zero indicates the transition to the Throttling state is asynchronous, and as such no status value comparison is required.

#### 8.4.5.3 \_TPC (Throttling Present Capabilities)

This optional object is a method that dynamically indicates to OSPM the number of throttling states currently supported by the platform. This method returns a number that indicates the \_TSS entry number of the highest power throttling state that OSPM can use at a given time. OSPM may choose the corresponding state entry in the \_TSS as indicated by the value returned by the \_TPC method or any lower power (higher numbered) state entry in the \_TSS.

##### Arguments:

None

##### Return Value:

An **Integer** containing the number of states supported:

- 0 – states 0 ... n<sup>th</sup> state available (all states available)
- 1 – state 1 ... n<sup>th</sup> state available
- 2 – state 2 ... n<sup>th</sup> state available
- ...
- n – state n available only

In order to support dynamic changes of \_TPC object, Notify events on the processor object of type 0x82 will cause OSPM to reevaluate any \_TPC object in the processor's object list. This allows AML code to notify OSPM when the number of supported throttling states may have changed as a result of an asynchronous event. OSPM ignores \_TPC Notify events on platforms that support P-states unless the platform has limited OSPM's use of P-states to the lowest power P-state. OSPM may choose to disregard any platform conveyed T-state limits when the platform enables OSPM usage of other than the lowest power P-state.

#### 8.4.5.4 \_TSD (T-State Dependency)

This optional object provides T-state control cross logical processor dependency information to OSPM. The \_TSD object evaluates to a packaged list containing a single entry that expresses the T-state control dependency among a set of logical processors.

##### Arguments:

None

##### Return Value:

A **Package** containing a single entry consisting of a T-state dependency **Package** as described below.

#### Return Value Information

```
Package {
    TStateDependency[0]    // Package
}
```

The TStateDependency sub-Package contains the elements described below:

```
Package {
    NumEntries          // Integer
    Revision            // Integer (BYTE)
    Domain              // Integer (DWORD)
    CoordType           // Integer (DWORD)
    NumProcessors       // Integer (DWORD)
}
```

**Table 8-275 TStateDependency Package Values**

Element	Object Type	Description
NumEntries	Integer	The number of entries in the <code>tstateDependency</code> package including this field. Current value is 5.
Revision	Integer (BYTE)	The revision number of the <code>tstateDependency</code> package format. Current value is 0.
Domain	Integer (DWORD)	The dependency domain number to which this T state entry belongs.
CoordType	Integer (DWORD)	The type of coordination that exists (hardware) or is required (software) as a result of the underlying hardware dependency. Could be either 0xFC (SW_ALL), 0xFD (SW_ANY) or 0xFE (HW_ALL) indicating whether OSPM is responsible for coordinating the T-state transitions among processors with dependencies (and needs to initiate the transition on all or any processor in the domain) or whether the hardware will perform this coordination.
Num Processors	Integer (DWORD)	The number of processors belonging to the domain for this logical processor's T-states. OSPM will not start performing power state transitions to a particular T-state until this number of processors belonging to the same domain have been detected and started.

## Example

This is an example usage of the \_TSD structure in a Processor structure in the namespace. The example represents a two processor configuration with three T-states per processor. For all T-states, there exists dependence between the two processors, such that one processor transitioning to a particular T-state, causes the other processor to transition to the same T-state. OSPM will be required to coordinate the T-state transitions between the two processors and can initiate a transition on either processor to cause both to transition to the common target T-state.

```

Processor (
    \_SB.CPU0,                                // Processor Name
    1,                                         // ACPI Processor number
    0x120,                                      // PBIk system IO address
    6)                                         // PBIkLen
{ //Object List

    Name(_PTC, Package() // Processor Throttling Control object -
                           // 32 bit wide IO space-based register at the <P_BLK>
address
    {
        ResourceTemplate(){Register(SystemIO, 32, 0, 0x120)}, // Throttling_CTRL
        ResourceTemplate(){Register(SystemIO, 32, 0, 0x120)} // Throttling_STATUS
    }) // End of _PTC object

    Name (_TSS, Package())
    {
        Package() {
            0x64,                                     // Frequency Percentage (100%, Throttling OFF
state)
            0x0,                                       // Power
            0x0,                                       // Transition Latency
            0x7,                                       // Control THT_EN: 0 THTL_DTY: 111
            0x0,                                       // Status
        }

        Package() {
            0x58,                                     // Frequency Percentage (87.5%)
            0x0,                                       // Power
            0x0,                                       // Transition Latency
            0xF,                                       // Control THT_EN: 1 THTL_DTY: 111
            0x0,                                       // Status
        }

        Package() {
            0x4B,                                     // Frequency Percentage (75%)
            0x0,                                       // Power
            0x0,                                       // Transition Latency
            0xE,                                       // Control THT_EN: 1 THTL_DTY: 110
            0x0,                                       // Status
        }
    })
}

```

```

Name (_TSD, Package())
{
    Package(){5, 0, 0, 0xFD, 2} // 5 entries, Revision 0, Domain 0,
                                // OSPM Coordinate, 2 Procs
}
                                // End of _TSD object

Method (_TPC, 0)           // Throttling Present Capabilities method
{
    If (\_SB.AC)
    {
        Return(0)          // All Throttle States are available for use.
    }
    Else
    {
        Return(2)          // Throttle States 0 and 1 won't be used.
    }
}
                                // End of _TPC method
} // End of processor object list

Processor (
    \_SB.CPU1,                // Processor Name
    2,                         // ACPI Processor number
    ,                          // PBIk system IO address
    )                         // PBIkLen
{ //Object List

    Name(_PTC, Package ())   // Processor Throttling Control object -
                            // 32 bit wide IO space-based register at the
                            // <P_BLK> address
    {
        ResourceTemplate(){Register(SystemIO, 32, 0, 0x120)}, // Throttling_CTRL
        ResourceTemplate(){Register(SystemIO, 32, 0, 0x120)} // Throttling_STATUS
    }
                                // End of _PTC object

    Name (_TSS, Package())
    {
        Package() {
            0x64,             // Frequency Percentage (100%, Throttling OFF
state)
            0x0,               // Power
            0x0,               // Transition Latency
            0x7,               // Control THT_EN:0 THTL_DTY: 111
            0x0,               // Status
        }
        Package() {
            0x58,             // Frequency Percentage (87.5%)
            0x0,               // Power
            0x0,               // Transition Latency
            0xF,               // Control THT_EN:1 THTL_DTY: 111
        }
    }
}

```

```

        0x0,                      // Status
    }

    Package() {
        0x4B,                    // Frequency Percentage (75%)
        0x0,                     // Power
        0x0,                     // Transition Latency
        0xE,                     // Control THT_EN: 1 THTL_DTY: 110
        0x0,                     // Status
    }
}

Name (_TSD, Package()
{
    Package(){5, 0, 0, 0xFD, 2} // 5 entries, Revision 0, Domain 0,
                                // OSPM Coordinate, 2 Procs
}
                                // End of _TSD object

Method (_TPC, 0)                // Throttling Present Capabilities method
{
    If (\_SB.AC)
    {
        Return(0)           // All Throttle States are available for use.
    }
    Else
    {
        Return(2)           // Throttle States 0 and 1 won't be used.
    }
}
                                // End of _TPC method
} // End of processor object list

```

#### 8.4.5.5 \_TDL (T-state Depth Limit)

This optional object evaluates to the \_TSS entry number of the lowest power throttling state that OSPM may use. \_TDL enables the platform to limit the amount of performance reduction that OSPM may invoke using processor throttling controls in an attempt to alleviate an adverse thermal condition. OSPM may choose the corresponding state entry in the \_TSS as indicated by the value returned by the \_TDL object or a higher performance (lower numbered) state entry in the \_TSS down to and including the \_TSS entry number returned by the \_TPC object or the first entry in the table (if \_TPC is not implemented). The value returned by the \_TDL object must be greater than or equal to the value returned by the \_TPC object or the corresponding value to the last entry in the \_TSS if \_TPC is not implemented. In the event of a conflict between the values returned by the evaluation of the \_TDL and \_TPC objects, OSPM gives precedence to the \_TPC object, limiting power consumption.

##### Arguments:

None

##### Return Value:

An **Integer** containing the Throttling Depth Limit \_TSS entry number:

0 – throttling disabled.

- 1 – state 1 is the lowest power T-state available.
- 2 – state 2 is the lowest power T-state available.
- ...
- $n$  – state  $n$  is the lowest power T-state available.

In order for the platform to dynamically indicate the limit of performance reduction that is available for OSPM use, Notify events on the processor object of type 0x82 will cause OSPM to reevaluate any \_TDL object in the processor's object list. This allows AML code to notify OSPM when the number of supported throttling states may have changed as a result of an asynchronous event. OSPM ignores \_TDL Notify events on platforms that support P-states unless the platform has limited OSPM's use of P-states to the lowest power P-state. OSPM may choose to disregard any platform conveyed T-state depth limits when the platform enables OSPM usage of other than the lowest power P-state.

## 8.4.6 Processor Performance Control

Processor performance control is implemented through three optional objects whose presence indicates to OSPM that the platform and CPU are capable of supporting multiple performance states. The platform must supply all three objects if processor performance control is implemented. The platform must expose processor performance control objects for either all or none of its processors. The processor performance control objects define the supported processor performance states, allow the processor to be placed in a specific performance state, and report the number of performance states currently available on the system.

In a multiprocessing environment, all CPUs must support the same number of performance states and each processor performance state must have identical performance and power-consumption parameters. Performance objects must be present under each processor object in the system for OSPM to utilize this feature.

Processor performance control objects include the '\_PCT' package, '\_PSS' package, and the '\_PPC' method as detailed below.

### 8.4.6.1 \_PCT (Performance Control)

This optional object declares an interface that allows OSPM to transition the processor into a performance state. OSPM performs processor performance transitions by writing the performance state-specific control value to a Performance Control Register (PERF\_CTRL).

OSPM may select a processor performance state as indicated by the performance state value returned by the \_PPC method, or any lower power (higher numbered) state. The control value to write is contained in the corresponding \_PSS entry's "Control" field.

Success or failure of the processor performance transition is determined by reading a Performance Status Register (PERF\_STATUS) to determine the processor's current performance state. If the transition was successful, the value read from PERF\_STATUS will match the "Status" field in the \_PSS entry that corresponds to the desired processor performance state.

#### Arguments:

None

#### Return Value:

A Package as described below

## Return Value Information

```
Package
{
    Control Register      // Buffer (Resource Descriptor)
    StatusRegister        // Buffer (Resource Descriptor)
}
```

**Table 8-276 PCT Package Values**

Element	Object Type	Description
Control Register	Buffer	Contains a Resource Descriptor with a single Register() descriptor that describes the performance control register.
Status Register	Buffer	Contains a Resource Descriptor with a single Register() descriptor that describes the performance status register.

## Example

```
Name (_PCT, Package()
{
    ResourceTemplate(){Perf_Ctrl_Register},           //Generic Register Descriptor
    ResourceTemplate(){Perf_Status_Register}           //Generic Register Descriptor
}) // End of _PCT
```

### 8.4.6.2 \_PSS (Performance Supported States)

This optional object indicates to OSPM the number of supported processor performance states that any given system can support. This object evaluates to a packaged list of information about available performance states including internal CPU core frequency, typical power dissipation, control register values needed to transition between performance states, and status register values that allow OSPM to verify performance transition status after any OS-initiated transition change request. The list is sorted in descending order by typical power dissipation. As a result, the zeroth entry describes the highest performance state and the ‘nth’ entry describes the lowest performance state.

#### Arguments:

None

#### Return Value:

A variable-length **Package** containing a list of Pstate sub-packages as described below

## Return Value Information

```
Package {
    PState [0]          // Package – Performance state 0
    ...
    PState [n]          // Package – Performance state n
}
```

Each Pstate sub-**Package** contains the elements described below:

```
Package {
    CoreFrequency      // Integer (DWORD)
    Power              // Integer (DWORD)
    Latency            // Integer (DWORD)
    BusMasterLatency   // Integer (DWORD)
    Control             // Integer (DWORD)
    Status              // Integer (DWORD)
}
```

**Table 8-277 PState Package Values**

Element	Object Type	Description
Core Frequency	<b>Integer</b> (DWORD)	Indicates the core CPU operating frequency (in MHz).
Power	<b>Integer</b> (DWORD)	Indicates the performance state's maximum power dissipation (in milliwatts).
Latency	<b>Integer</b> (DWORD)	Indicates the worst-case latency in microseconds that the CPU is unavailable during a transition from any performance state to this performance state.
Bus Master Latency	<b>Integer</b> (DWORD)	Indicates the worst-case latency in microseconds that Bus Masters are prevented from accessing memory during a transition from any performance state to this performance state.
Control	<b>Integer</b> (DWORD)	Indicates the value to be written to the Performance Control Register (PERF_CTRL) in order to initiate a transition to the performance state.
Status	<b>Integer</b> (DWORD)	Indicates the value that OSPM will compare to a value read from the Performance Status Register (PERF_STATUS) to ensure that the transition to the performance state was successful. OSPM may always place the CPU in the lowest power state, but additional states are only available when indicated by the _PPC method.

#### 8.4.6.3 \_PPC (Performance Present Capabilities)

This optional object is a method that dynamically indicates to OSPM the number of performance states currently supported by the platform. This method returns a number that indicates the \_PSS entry number of the highest performance state that OSPM can use at a given time. OSPM may choose the corresponding state entry in the \_PSS as indicated by the value returned by the \_PPC method or any lower power (higher numbered) state entry in the \_PSS.

##### Arguments:

None

##### Return Value:

An **Integer** containing the range of states supported

- 0 – States 0 through n<sup>th</sup> state are available (all states available)
- 1 – States 1 through n<sup>th</sup> state are available

2 – States 2 through  $n^{\text{th}}$  state are available

...

$n$  – State  $n$  is available only

In order to support dynamic changes of \_PPC object, Notify events on the processor object are allowed. Notify events of type 0x80 will cause OSPM to reevaluate any \_PPC objects residing under the particular processor object notified. This allows AML code to notify OSPM when the number of supported states may have changed as a result of an asynchronous event (AC insertion/removal, docked, undocked, and so on).

#### 8.4.6.3.1 OSPM \_OST Evaluation

When processing of the \_PPC object evaluation completes, OSPM evaluates the \_OST object, if present under the Processor device, to convey \_PPC evaluation status to the platform. \_OST arguments specific to \_PPC evaluation are described below.

##### Arguments: (2)

Arg0 – Source Event (Integer) : 0x80

Arg1 – Status Code (**Integer**) : see below

##### Return Value:

None

#### Argument Information:

Arg1 – Status Code

0: Success – OSPM is now using the performance states specified

1: Failure – OSPM has not changed the number of performance states in use.

#### 8.4.6.4 Processor Performance Control Example

##### Example

This is an example of processor performance control objects in a processor object list.

In this example, a uniprocessor platform that has processor performance capabilities with support for three performance states as follows:

1. 500 MHz (8.2W) supported at any time
2. 600 MHz (14.9W) supported only when AC powered
3. 650 MHz (21.5W) supported only when docked

It takes no more than 500 microseconds to transition from one performance state to any other performance state.

During a performance transition, bus masters are unable to access memory for a maximum of 300 microseconds.

The PERF\_CTRL and PERF\_STATUS registers are implemented as Functional Fixed Hardware.

The following ASL objects are implemented within the system:

```

\_SB.DOCK: Evaluates to 1 if system is docked, zero otherwise.

\_SB.AC: Evaluates to 1 if AC is connected, zero otherwise.

Processor (
    \_SB.CPU0,                                // Processor Name
    1,                                         // ACPI Processor number
    0x120,                                     // PBIk system IO address
    6 )                                         // PBI kLen

{
    Name(_PCT, Package ())                      // Performance Control
object
{
    ResourceTemplate(){Register(FFixedHW, 0, 0, 0)}, // PERF_CTRL
    ResourceTemplate(){Register(FFixedHW, 0, 0, 0)}   // PERF_STATUS
}) // End of _PCT object

    Name (_PSS, Package())
{
    Package(){650, 21500, 500, 300, 0x00, 0x08}, // Performance State
zero (P0)
    Package(){600, 14900, 500, 300, 0x01, 0x05}, // Performance State one
(P1)
    Package(){500, 8200, 500, 300, 0x02, 0x06}   // Performance State two
(P2)
}) // End of _PSS object

    Method (_PPC, 0)          // Performance Present Capabilities method
{
    If (\_SB.DOCK)
    {
        Return(0)           // All _PSS states available (650, 600, 500).
    }
    If (\_SB.AC)
    {
        Return(1)           // States 1 and 2 available (600, 500).
    }
    Else
    {
        Return(2)           // State 2 available (500)
    }
} // End of _PPC method
} // End of processor object list

```

The platform will issue a **Notify**(\\_SB.CPU0, 0x80) to inform OSPM to re-evaluate this object when the number of available processor performance states changes.

### 8.4.6.5 \_PSD (P-State Dependency)

This optional object provides performance control, P-state or CPPC, logical processor dependency information to OSPM. The \_PSD object evaluates to a packaged list containing a single entry that expresses the performance control dependency among a set of logical processors.

#### Arguments:

None

#### Return Value:

A **Package** with a single entry consisting of a P-state dependency **Package** as described below.

### Return Value Information

```
Package {
    PStateDependency[0]    // Package
}
```

The PStateDependency sub-**Package** contains the elements described below:

```
Package {
    NumEntries          // Integer
    Revision            // Integer (BYTE)
    Domain              // Integer (DWORD)
    CoordType            // Integer (DWORD)
    NumProcessors        // Integer (DWORD)
}
```

**Table 8-278 PStateDependency Package Values**

Element	Object Type	Description
NumEntries	Integer	The number of entries in the <code>PstateDependency</code> package including this field. Current value is 5.
Revision	Integer (BYTE)	The revision number of the <code>PstateDependency</code> package format. Current value is 0.
Domain	Integer (DWORD)	The dependency domain number to which this P state entry belongs.
CoordType	Integer (DWORD)	The type of coordination that exists (hardware) or is required (software) as a result of the underlying hardware dependency. Could be either 0xFC (SW_ALL), 0xFD (SW_ANY) or 0xFE (HW_ALL) indicating whether OSPM is responsible for coordinating the P-state transitions among processors with dependencies (and needs to initiate the transition on all or any processor in the domain) or whether the hardware will perform this coordination.

Num Processors	<b>Integer (DWORD)</b>	The number of processors belonging to the domain for this logical processor's P-states. OSPM will not start performing power state transitions to a particular P-state until this number of processors belonging to the same domain have been detected and started.
----------------	------------------------	---

## Example

This is an example usage of the \_PSD structure in a Processor structure in the namespace. The example represents a two processor configuration with three performance states per processor. For all performance states, there exists dependence between the two processors, such that one processor transitioning to a particular performance state, causes the other processor to transition to the same performance state. OSPM will be required to coordinate the P-state transitions between the two processors and can initiate a transition on either processor to cause both to transition to the common target P-state.

```

Processor (
    \_SB.CPU0,                                // Processor Name
    1,                                         // ACPI Processor number
    0x120,                                      // PBI k system I/O address
    6 )                                         // PBI kLen
{
    Name(_PCT, Package ())          // Performance Control object
    {
        ResourceTemplate(){Register(FFixedHW, 0, 0, 0)},           // PERF_CTRL
        ResourceTemplate(){Register(FFixedHW, 0, 0, 0)}           // PERF_STATUS
    }) // End of _PCT object

    Name (_PSS, Package())
    {
        Package(){650, 21500, 500, 300, 0x00, 0x08},      // Performance State zero
(P0)       Package(){600, 14900, 500, 300, 0x01, 0x05},      // Performance State one
(P1)       Package(){500, 8200, 500, 300, 0x02, 0x06}       // Performance State two
(P2)
    }) // End of _PSS object

    Method (_PPC, 0)          // Performance Present Capabilities method
    {
    } // End of _PPC method

    Name (_PSD, Package())
    {
        Package(){5, 0, 0, 0xFD, 2}   // 5 entries, Revision 0), Domain 0, OSPM
                                         // Coordinate, Initiate on any Proc, 2 Procs
    }) // End of _PSD object
} // End of processor object list

Processor (

```

```

        \_SB.CPU1,           // Processor Name
        2,                  // ACPI Processor number
        ,                  // PBI k system IO address
        )                  // PBI kLen
    {
        Name(_PCT, Package) // Performance Control object
        {
            ResourceTemplate(){Register(FFixedHW, 0, 0, 0)}, // PERF_CTRL
            ResourceTemplate(){Register(FFixedHW, 0, 0, 0)} // PERF_STATUS
        }) // End of _PCT object

        Name (_PSS, Package())
        {
            Package() {650, 21500, 500, 300, 0x00, 0x08}, // Performance State zero
(P0)
            Package() {600, 14900, 500, 300, 0x01, 0x05}, // Performance State one
(P1)
            Package() {500, 8200, 500, 300, 0x02, 0x06} // Performance State two
(P2)
        }) // End of _PSS object

        Method (_PPC, 0)           // Performance Present Capabilities method
        {
        }                         // End of _PPC method

        Name (_PSD, Package())
        {
            Package() {5, 0, 0, 0xFD, 2} // 5 entries, Revision 0, Domain 0, OSPM
                                         // Coordinate, Initiate on any Proc, 2 Procs
        }) // End of _PSD object
    } // End of processor object list

```

#### 8.4.6.6 \_PDL (P-state Depth Limit)

This optional object evaluates to the \_PSS entry number of the lowest performance P-state that OSPM may use when performing passive thermal control. OSPM may choose the corresponding state entry in the \_PSS as indicated by the value returned by the \_PDL object or a higher performance (lower numbered) state entry in the \_PSS down to and including the \_PSS entry number returned by the \_PPC object or the first entry in the table (if \_PPC is not implemented). The value returned by the \_PDL object must be greater than or equal to the value returned by the \_PPC object or the corresponding value to the last entry in the \_PSS if \_PPC is not implemented. In the event of a conflict between the values returned by the evaluation of the \_PDL and \_PPC objects, OSPM gives precedence to the \_PPC object, limiting power consumption.

##### Arguments:

None

##### Return Value:

An **Integer** containing the P-state Depth Limit \_PSS entry number:

- 0 – P0 is the only P-state available for OSPM use
- 1 – state 1 is the lowest power P-state available
- 2 – state 2 is the lowest power P-state available
- ...
- $n$  – state  $n$  is the lowest power P-state available

In order for the platform to dynamically indicate a change in the P-state depth limit, Notify events on the processor object of type 0x80 will cause OSPM to reevaluate any \_PDL object in the processor's object list. This allows AML code to notify OSPM when the number of supported performance states may have changed as a result of an asynchronous event.\

#### 8.4.7 Collaborative Processor Performance Control

Collaborative processor performance control defines an abstracted and flexible mechanism for OSPM to collaborate with an entity in the platform to manage the performance of a logical processor. In this scheme, the platform entity is responsible for creating and maintaining a performance definition that backs a continuous, abstract, unit-less performance scale. During runtime, OSPM requests desired performance on this abstract scale and the platform entity is responsible for translating the OSPM performance requests into actual hardware performance states. The platform may also support the ability to autonomously select a performance level appropriate to the current workload. In this case, OSPM conveys information to the platform that guides the platform's performance level selection.

Prior processor performance controls (P-states and T-states) have described their effect on processor performance in terms of processor frequency. While processor frequency is a rough approximation of the speed at which the processor completes work, workload performance isn't guaranteed to scale with frequency. Therefore, rather than prescribe a specific metric for processor performance, Collaborative Processor Performance Control leaves the definition of the exact performance metric to the platform. The platform may choose to use a single metric such as processor frequency, or it may choose to blend multiple hardware metrics to create a synthetic measure of performance. In this way the platform is free to deliver the OSPM requested performance level without necessarily delivering a specific processor frequency. OSPM must make no assumption about the exact meaning of the performance values presented by the platform, or how they may correlate to specific hardware metrics like processor frequency.

Platforms must use the same performance scale for all processors in the system. On platforms with heterogeneous processors, the performance characteristics of all processors may not be identical. In this case, the platform must synthesize a performance scale that adjusts for differences in processors, such that any two processors running the same workload at the same performance level will complete in approximately the same time. The platform should expose different capabilities for different classes of processors, so as to accurately reflect the performance characteristics of each processor.

The control mechanisms are abstracted by the \_CPC object method, which describes how to control and monitor processor performance in a generic manner. The register methods may be implemented in the Platform Communications Channel (PCC) interface (see [Section 14](#)). This provides sufficient flexibility that the entity OSPM communicates with may be the processor itself, the platform chipset, or a separate entity (e.g., a BMC).

In order to provide backward compatibility with existing tools that report processor performance as frequencies, the \_CPC object can optionally provide processor frequency range values for use by the OS.

If these frequency values are provided, the restrictions on \_CPC information usage still remain: the OSPM must make no assumption about the exact meaning of the performance values presented by the platform, and all functional decisions and interaction with the platform still happen using the abstract performance scale. The frequency values are only contained in the \_CPC object to allow the OS to present performance data in a simple frequency range, when frequency is not discoverable from the platform via another mechanism.

#### 8.4.7.1 \_CPC (Continuous Performance Control)

This optional object declares an interface that allows OSPM to transition the processor into a performance state based on a continuous range of allowable values. OSPM writes the desired performance value to the Desired Performance Register, and the platform maps the desired performance to an internal performance state.. If supported by the platform, OSPM may alternatively enable autonomous performance level selection while specifying minimum and maximum performance requirements.

Optional \_CPC package fields that are not supported by the platform should be encoded as follows:

- Integer fields: Integer 0
- Register fields: the following NULL register descriptor should be used:

```
ResourceTemplate() {Register {(SystemMemory, 0, 0, 0, 0)}}
```

#### Arguments:

None

#### Return Value:

A Package containing the performance control information.

The performance control package contains the elements described below:

```
Package
{
    NumEntries,                                // Integer
    Revision,                                 // Integer
    HighestPerformance,                      // Integer
    or Buffer (Resource Descriptor)
        NominalPerformance,                  // Integer
    or Buffer (Resource Descriptor)
        LowestNonlinearPerformance,          // Integer
    or Buffer (Resource Descriptor)
        LowestPerformance,                   // Integer
    or Buffer (Resource Descriptor)
        GuaranteedPerformanceRegister,       // Buffer
    (Resource Descriptor)
        DesiredPerformanceRegister,         // Buffer
    (Resource Descriptor)
        MinimumPerformanceRegister,        // Buffer
    (Resource Descriptor)
```

```

        MaximumPerformanceRegister,           // Buffer
        (Resource Descriptor)
        PerformanceReductionToleranceRegister,   // Buffer
        (Resource Descriptor)
        TimeWindowRegister,                  // Buffer
        (Resource Descriptor)
        CounterWraparoundTime,             // Integer
        or Buffer (Resource Descriptor)
        ReferencePerformanceCounterRegister, // Buffer
        (Resource Descriptor)
        DeliveredPerformanceCounterRegister, // Buffer
        (Resource Descriptor)
        PerformanceLimitedRegister,         // Buffer
        (Resource Descriptor)
        CPPCEnableRegister                // Buffer
        (Resource Descriptor)
        AutonomousSelectionEnable,          // Integer
        or Buffer (Resource Descriptor)
        AutonomousActivityWindowRegister,   // Buffer
        (Resource Descriptor)
        EnergyPerformancePreferenceRegister, // Buffer
        (Resource Descriptor)
        ReferencePerformance               // Integer
        or Buffer (Resource Descriptor)
        LowestFrequency,                  // Integer or Buffer
        (Resource Descriptor)
        NominalFrequency                 // Integer or Buffer
        (Resource Descriptor)
    }
}

```

Table 8-279 Continuous Performance Control Package Values

Element	Object Type	Description
NumEntries	Integer	The number of entries in the _CPC package, including this one. Current value is 23.
Revision	Integer (BYTE)	The revision number of the _CPC package format. Current value is 3.
Highest Performance	Integer (DWORD) or Buffer	Indicates the highest level of performance the processor is theoretically capable of achieving, given ideal operating conditions. If this element is an Integer, OSPM reads the integer value directly. If this element is a Buffer, it must contain a Resource Descriptor with a single Register() to read the value from.

Element	Object Type	Description
Nominal Performance	Integer (DWORD) or Buffer	Indicates the highest sustained performance level of the processor. If this element is an Integer, OSPM reads the integer value directly. If this element is a Buffer, it must contain a Resource Descriptor with a single Register() to read the value from.
Lowest Nonlinear Performance	Integer (DWORD) or Buffer	Indicates the lowest performance level of the processor with non-linear power savings. If this element is an Integer, OSPM reads the integer value directly. If this element is a Buffer, it must contain a Resource Descriptor with a single Register() to read the value from.
Lowest Performance	Integer (DWORD) or Buffer	Indicates the lowest performance level of the processor. If this element is an Integer, OSPM reads the integer value directly. If this element is a Buffer, it must contain a Resource Descriptor with a single Register() to read the value from.
Guaranteed Performance Register	Buffer	Optional. If supported, contains a resource descriptor with a single Register() descriptor that describes the register to read the current guaranteed performance from. See the section “Performance Limiting” for more details.
Desired Performance Register	Buffer	Contains a resource descriptor with a single Register() descriptor that describes the register to write the desired performance level. This register is optional when OSPM indicates support for CPPC2 in the platform-wide _OSC capabilities and the Autonomous Selection Enable register is Integer 1
Minimum Performance Register	Buffer	Optional. If supported, contains a resource descriptor with a single Register() descriptor that describes the register to write the minimum allowable performance level to. The value 0 is equivalent to Lowest Performance (no limit).
Maximum Performance Register	Buffer	Optional. If supported, contains a resource descriptor with a single Register() descriptor that describes the register to write the maximum allowable performance level to. All 1s is equivalent to Highest Performance (no limit).
Performance Reduction Tolerance Register	Buffer	Optional. If supported, contains a resource descriptor with a single Register() descriptor that describes the register to write the performance reduction tolerance.
Time Window Register	Buffer	Optional. If supported, contains a resource descriptor with a single Register() descriptor that describes the register to write the nominal length of time (in ms) between successive reads of the platform’s delivered performance register. See the section “Time Window Register” for more details.
Counter Wraparound Time	Integer (DWORD) or Buffer	Optional. If supported, indicates the minimum time to counter wraparound, in seconds. If this element is an Integer, OSPM reads the integer value directly. If this element is a Buffer (and supported), it must contain a Resource Descriptor with a single Register() to read the value from.

Element	Object Type	Description
Reference Performance Counter Register	Buffer	Contains a resource descriptor with a single Register() descriptor that describes the register to read a counter that accumulates at a rate proportional the reference performance of the processor.
Delivered Performance Counter Register	Buffer	Contains a resource descriptor with a single Register() descriptor that describes the register to read a counter that accumulates at a rate proportional to the delivered performance of the processor.
Performance Limited Register	Buffer	Contains a resource descriptor with a single Register() descriptor that describes the register to read to determine if performance was limited. A nonzero value indicates performance was limited. This register is sticky, and will remain set until reset or OSPM clears it by writing 0. See the section “Performance Limiting” for more details.
CPPC EnableRegister	Buffer	Optional. If supported, contains a resource descriptor with a single Register() descriptor that describes a register to which OSPM writes a One to enable CPPC on this processor. Before this register is set, the processor will be controlled by legacy mechanisms (ACPI P-states, firmware, etc.).
AutonomousSelectionEnable	Integer (DWORD) or Buffer	Optional. If supported, contains a resource descriptor with a single Register() descriptor that describes a register to which OSPM writes a One to enable autonomous performance level selection. Platforms that exclusively support Autonomous Selection must populate this field as an Integer with a value of 1.
AutonomousActivityWindowRegister	Buffer	Optional. If supported, contains a resource descriptor with a single Register() descriptor that describes a register to which OSPM writes a time value that indicates a moving utilization sensitivity window for the autonomous selection policy.
EnergyPerformancePreferenceRegister	Buffer	Optional. If supported, contains a resource descriptor with a single Register() descriptor that describes a register to which OSPM writes a value to control the Energy vs. Performance preference of the platform's energy efficiency and performance optimization policies when Autonomous Selection is enabled
Reference Performance	Integer (DWORD) or Buffer	Optional. If supported, indicates the performance level at which the Reference Performance Counter accumulates. If not supported, The Reference Performance Counter accumulates at the Nominal performance level. If this element is an Integer, OSPM reads the integer value directly. If this element is a Buffer (and supported), it must contain a Resource Descriptor with a single Register() to read the value from


Element	Object Type	Description
Lowest Frequency	Integer (DWORD) or Buffer	Optional. If supported, indicates the lowest frequency for this processor in MHz. It should correspond roughly to the Lowest Performance value, but is not guaranteed to have any precise correlation. This value should only be used for the purpose of reporting processor performance in absolute frequency rather than on an abstract scale, and not for functional decisions or platform communication. If this element is an Integer, OSPM reads the integer value directly. If this element is a Buffer (and supported), it must contain a Resource Descriptor with a single Register() to read the value from.
Nominal Frequency	Integer (DWORD) or Buffer	Optional. If supported, indicates the nominal frequency for this processor in MHz. It should correspond roughly to the Nominal Performance value, but is not guaranteed to have any precise correlation. This value should only be used for the purpose of reporting processor performance in absolute frequency rather than on an abstract scale, and not for functional decisions or platform communication. If this element is an Integer, OSPM reads the integer value directly. If this element is a Buffer (and supported), it must contain a Resource Descriptor with a single Register() to read the value from.

The \_CPC object provides OSPM with platform-specific performance capabilities / thresholds and control registers that OSPM uses to control the platform's processor performance settings. These are described in the following sections. While the platform may specify register sizes within an allowable range, the size of the capabilities / thresholds registers must be compatible with the size of the control registers. If the platform supports CPPC, the \_CPC object must exist under all processor objects. That is, OSPM is not expected to support mixed mode (CPPC & legacy PSS, \_PCT, \_PPC) operation.

Starting with ACPI Specification 6.2, all \_CPC registers can be in PCC, System Memory, System IO, or Functional Fixed Hardware address spaces. OSPM support for this more flexible register space scheme is indicated by the "Flexible Address Space for CPPC Registers" \_OSC bit.

#### 8.4.7.1.1 Performance Capabilities / Thresholds

Performance-based controls operate on a continuous range of processor performance levels, not discrete processor states. As a result, platform capabilities and OSPM requests are specified in terms of performance thresholds. [Figure 8-45](#) outlines the static performance thresholds of the platform and the dynamic guaranteed performance threshold.

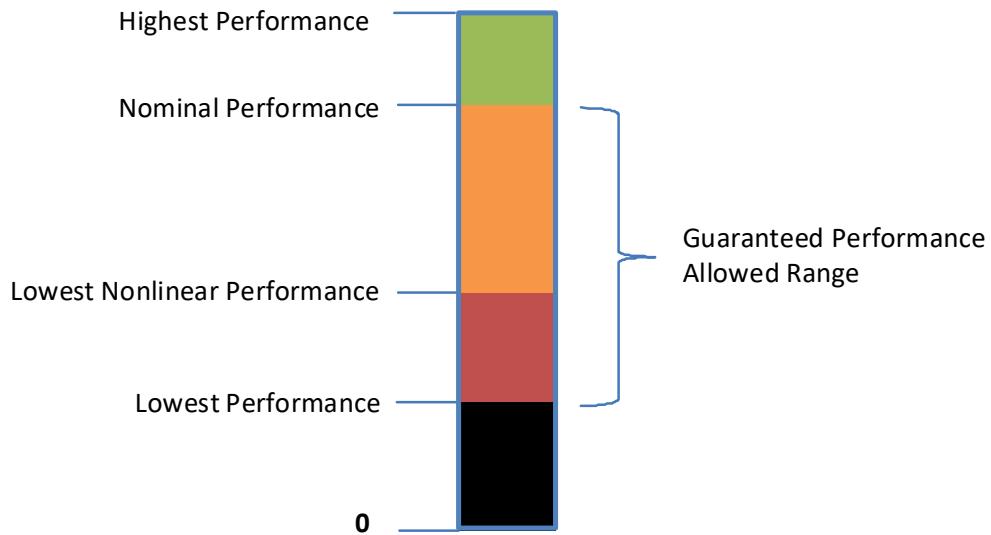

**Figure 8-45 Platform performance thresholds**

**Note:** Not all performance levels need be unique. A platform's nominal performance level may also be its highest performance level, for example.

#### 8.4.7.1.1.1 Highest performance

**Register or DWORD**  
**Attribute:** **Read**  
**Size:** **8-32 bits**

**Highest performance** is the absolute maximum performance an individual processor may reach, assuming ideal conditions. This performance level may not be sustainable for long durations, and may only be achievable if other platform components are in a specific state; for example, it may require other processors be in an idle state.

Notify events of type 0x85 to the processor device object cause OSPM to re-evaluate the Highest Performance Register, but only when it is encoded as a buffer. Note: OSPM will not re-evaluate the \_CPC object as a result of the notification.

#### 8.4.7.1.1.2 Nominal Performance

**Register or DWORD**  
**Attribute:** **Read**  
**Size:** **8-32 bits**

**Nominal Performance** is the maximum sustained performance level of the processor, assuming ideal operating conditions. In absence of an external constraint (power, thermal, etc.) this is the performance level the platform is expected to be able to maintain continuously. All processors are expected to be able to sustain their nominal performance state simultaneously.

#### 8.4.7.1.1.3 Reference Performance

**Optional**  
**Register or DWORD**  
**Attribute:** **Read**  
**Size:** **8-32 bits**

If supported by the platform, **Reference Performance** is the rate at which the Reference Performance Counter increments. If not implemented (or zero), the Reference Performance Counter increments at a rate corresponding to the Nominal Performance level.

#### 8.4.7.1.1.4 Lowest Nonlinear Performance

**Register or DWORD**  
**Attribute:** **Read**  
**Size:** **8-32 bits**

**Lowest Nonlinear Performance** is the lowest performance level at which nonlinear power savings are achieved, for example, due to the combined effects of voltage and frequency scaling. Above this threshold, lower performance levels should be generally more energy efficient than higher performance levels. In traditional terms, this represents the P-state range of performance levels.

This register effectively conveys the most efficient performance level to OSPM.

#### 8.4.7.1.1.5 Lowest Performance

**Register or DWORD**  
**Attribute:** **Read**  
**Size:** **8-32 bits**

**Lowest Performance** is the absolute lowest performance level of the platform. Selecting a performance level lower than the lowest nonlinear performance level may actually cause an efficiency penalty, but should reduce the instantaneous power consumption of the processor. In traditional terms, this represents the T-state range of performance levels.

#### 8.4.7.1.1.6 Guaranteed Performance Register

**Optional**  
**Attribute:** **Read**  
**Size:** **8-32 bits**

**Guaranteed Performance Register** conveys to OSPM a Guaranteed Performance level, which is the current maximum sustained performance level of a processor, taking into account all known external constraints (power budgeting, thermal constraints, AC vs DC power source, etc.). All processors are expected to be able to sustain their guaranteed performance levels simultaneously. The guaranteed performance level is required to fall in the range [Lowest Performance, Nominal performance], inclusive.

If this register is not implemented, and Autonomous Selection is not enabled, OSPM assumes guaranteed performance is always equal to nominal performance.

Notify events of type 0x83 to the processor device object will cause OSPM to re-evaluate the Guaranteed Performance Register. Changes to guaranteed performance should not be more frequent than once per second. If the platform is not able to guarantee a given performance level for a sustained period of time

(greater than one second), it should guarantee a lower performance level and opportunistically enter the higher performance level as requested by OSPM and allowed by current operating conditions.

#### 8.4.7.1.1.7 Lowest Frequency and Nominal Frequency

**Optional**

**Register or DWORD**

**Attribute:** Read


**Size:** 32 bits

If supported by the platform, **Lowest Frequency** and **Nominal Frequency** values convey the lowest and nominal CPU frequencies of the platform, respectively, in megahertz (MHz). They should correspond roughly to Lowest Performance and Nominal Performance on the CPPC abstract performance scale but precise correlation is not guaranteed. See [Section 8.4.7.1.1.5](#) and [Section 8.4.7.1.1.2](#) for definitions of lowest and nominal performance.

These values should not be used for functional decision making or platform communication which are based on the CPPC abstract performance scale. They are only intended to enable CPPC platforms to be backwards compatible with OSs that report performance as CPU frequencies. The OS should use Lowest Frequency/Performance and Nominal Frequency/Performance as anchor points to create a linear mapping of CPPC abstract performance to CPU frequency, interpolating between Lowest and Nominal, and extrapolating from Nominal to Highest. Note that this mapping is not guaranteed to be accurate since CPPC abstract performance is not required to be based purely on CPU frequency, but it is better than no data if the OS must report performance as CPU frequency. Platforms should provide these values when they must work with OSs which need to report CPU frequency, and there is no alternate mechanism to discover this information.

### 8.4.7.1.2 Performance Controls

Under CPPC, OSPM has several performance settings it may use in conjunction to control/influence the performance of the platform. These control inputs are outlined in [Figure 8-46](#).

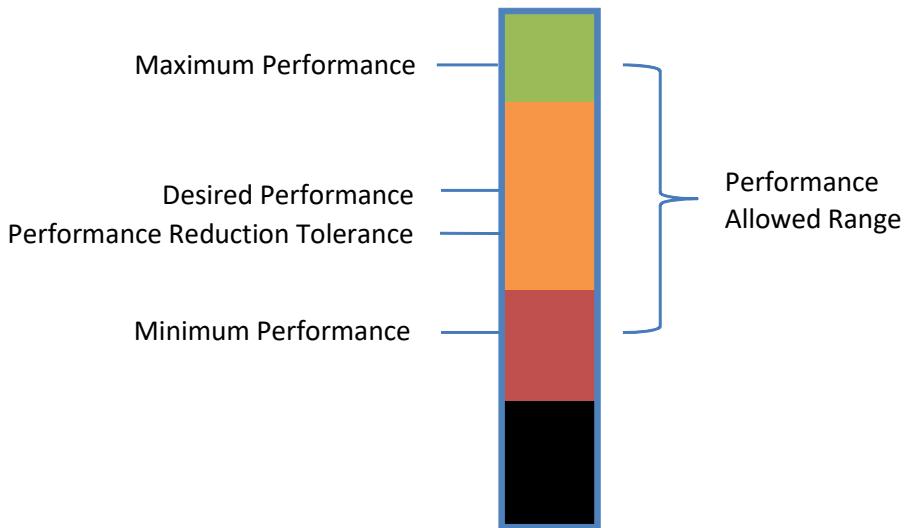

**Figure 8-46 OSPM performance controls**

OSPM may select any performance value within the continuous range of values supported by the platform. Internally, the platform may implement a small number of discrete performance states and may not be capable of operating at the exact performance level desired by OSPM. If a platform-internal state does not exist that matches OSPM's desired performance level, the platform should round desired performance as follows:

- If OSPM has selected a desired performance level greater than or equal to guaranteed performance, the platform may round up or down. The result of rounding must not be less than guaranteed performance.
- If OSPM has selected a desired performance level less than guaranteed performance and a maximum performance level not less than guaranteed performance, the platform must round up.

If OSPM has selected both desired performance level and maximum performance level less than guaranteed performance, the platform must round up if rounding up does not violate the maximum performance level. Otherwise, round down. OSPM must tolerate the platform rounding down if it chooses to set the maximum performance level less than guaranteed performance. This approach favors performance, except in the case where performance has been limited due to a platform or OSPM constraint.

When Autonomous Selection is enabled, OSPM limits the processor's performance selection by writing appropriate constraining values to the Minimum and Maximum Performance registers. Setting Minimum and Maximum to the same value effectively disables Autonomous selection.

**Note:** When processors are within the same dependency domain, Maximum performance may only be actually limited when allowed by hardware coordination.

#### 8.4.7.1.2.1 Maximum Performance Register

<b>Optional</b>	
<b>Attribute:</b>	<b>Read/Write</b>
<b>Size:</b>	<b>8-32 bits</b>

**Maximum Performance Register** conveys the maximum performance level at which the platform may run. Maximum performance may be set to any performance value in the range [Lowest Performance, Highest Performance], inclusive.

The value written to the Maximum Performance Register conveys a request to limit maximum performance for the purpose of energy efficiency or thermal control and the platform limits its performance accordingly as possible. However, the platform may exceed the requested limit in the event it is necessitated by internal package optimization. For Example, hardware coordination among multiple logical processors with interdependencies.

OSPM's use of this register to limit performance for the purpose of thermal control must comprehend multiple logical processors with interdependencies. i.e. the same value must be written to all processors within a domain to achieve the desired result.

The platform must implement either **both** the Minimum Performance and Maximum Performance registers or neither register. If neither register is implemented and Autonomous Selection is disabled, the platform must always deliver the desired performance.

#### 8.4.7.1.2.2 Minimum Performance Register

<b>Optional</b>	
<b>Attribute:</b>	<b>Read/Write</b>
<b>Size:</b>	<b>8-32 bits</b>

The **Minimum Performance Register** allows OSPM to convey the minimum performance level at which the platform may run. Minimum performance may be set to any performance value in the range [Lowest Performance, Highest Performance], inclusive but must be set to a value that is less than or equal to that specified by the **Maximum Performance Register**.

In the presence of a physical constraint, for example a thermal excursion, the platform may not be able to successfully maintain minimum performance in accordance with that set via the **Minimum Performance Register**. In this case, the platform issues a Notify event of type 0x84 to the processor device object and sets the Minimum\_Excursion bit within the **Performance Limited Register**.

The platform must implement either **both** the Minimum Performance and Maximum Performance registers or neither register. If neither register is implemented and Autonomous Selection is disabled, the platform must always deliver the desired performance.

#### 8.4.7.1.2.3 Desired Performance Register

**Optional (depending on Autonomous Selection support)**

**Attribute:** **Read/Write**

**Size:** **8-32 bits**

When Autonomous Selection is disabled, the **Desired Performance Register** is required and conveys the performance level OSPM is requesting from the platform. Desired performance may be set to any performance value in the range [Minimum Performance, Maximum Performance], inclusive. Desired performance may take one of two meanings, depending on whether the desired performance is above or below the guaranteed performance level.

- Below the guaranteed performance level, desired performance expresses the average performance level the platform must provide subject to the Performance Reduction Tolerance.
- Above the guaranteed performance level, the platform must provide the guaranteed performance level. The platform should attempt to provide up to the desired performance level, if current operating conditions allow for it, but it is not required to do so

When Autonomous Selection is enabled, it is not necessary for OSPM to assess processor workload performance demand and convey a corresponding performance delivery request to the platform via the Desired Register. If the Desired Performance Register exists, OSPM may provide an explicit performance requirement hint to the platform by writing a non-zero value. In this case, the delivered performance is not bounded by the Performance Reduction Tolerance Register, however, OSPM can influence the delivered performance by writing appropriate values to the Energy Performance Preference Register. Writing a zero value to the Desired Performance Register or the non-existence of the Desired Performance Register causes the platform to autonomously select a performance level appropriate to the current workload.

**Note:** *The Desired Performance Register is optional only when OSPM indicates support for CPPC2 in the platform-wide \_OSC capabilities and the Autonomous Selection Enable field is encoded as an Integer with a value of 1.*

#### 8.4.7.1.2.4 Performance Reduction Tolerance Register

**Optional**

**Attribute:** **Read/Write**

**Size:** **8-32 bits**

The **Performance Reduction Tolerance Register** is used by OSPM to convey the deviation below the Desired Performance that is tolerable. It is expressed by OSPM as an absolute value on the performance scale. Performance Tolerance must be less than or equal to the Desired Performance. If the platform supports the Time Window Register, the Performance Reduction Tolerance conveys the minimal performance value that may be delivered on average over the Time Window. If this register is not implemented, the platform must assume Performance Reduction Tolerance = Desired Performance.

When Autonomous Selection is enabled, values written to the Performance Reduction Tolerance Register are ignored.

#### 8.4.7.1.2.5 Time Window Register

<b>Optional</b>	
<b>Attribute:</b>	<b>Read/Write</b>
<b>Size:</b>	<b>8-32 bits</b>
<b>Units:</b>	<b>milliseconds</b>

When Autonomous Selection is not enabled, OSPM may write a value to the **Time Window Register** to indicate a time window over which the platform must provide the desired performance level (subject to the Performance Reduction Tolerance). OSPM sets the time window when electing a new desired performance. The time window represents the minimum time duration for OSPM's evaluation of the platform's delivered performance (see [Section 8.4.7.1.3.1](#) "Performance Counters" for details on how OSPM computes delivered performance). If OSPM evaluates delivered performance over an interval smaller than the specified time window, it has no expectations of the performance delivered by the platform. For any evaluation interval equal to or greater than the time window, the platform must deliver the OSPM desired performance within the specified tolerance bound.

If OSPM specifies a time window of zero or if the platform does not support the time window register, the platform must deliver performance within the bounds of Performance Reduction Tolerance irrespective of the duration of the evaluation interval.

When Autonomous Selection is enabled, values written to the Time Window Register are ignored. Reads of the Time Window register indicate minimum length of time (in ms) between successive reads of the platform's performance counters. If the Time Window register is not supported then there is no minimum time requirement between successive reads of the platform's performance counters.

#### 8.4.7.1.3 Performance Feedback

The platform provides performance feedback via set of performance counters, and a performance limited indicator.

##### 8.4.7.1.3.1 Performance Counters

To determine the actual performance level delivered over time, OSPM may read a set of performance counters from the Reference Performance Counter Register and the Delivered Performance Counter Register.

OSPM calculates the delivered performance over a given time period by taking a beginning and ending snapshot of both the reference and delivered performance counters, and calculating:

$$\text{delivered performance} = \frac{\Delta \text{delivered performance counter}}{\Delta \text{reference performance counter}}$$

The delivered performance should always fall in the range [Lowest Performance, Highest Performance], inclusive. OSPM may use the delivered performance counters as a feedback mechanism to refine the desired performance state it selects.

When Autonomous Selection is not enabled, there are constraints that govern how and when the performance delivered by the platform may deviate from the OSPM Desired Performance. Corresponding

to OSPM setting a Desired Performance: at any time after that, the following constraints on delivered performance apply

- Delivered performance can be higher than the OSPM requested desired performance if the platform is able to deliver the higher performance at same or lower energy than if it were delivering the desired performance.
- Delivered performance may be higher or lower than the OSPM desired performance if the platform has discrete performance states and needed to round down performance to the nearest supported performance level in accordance to the algorithm prescribed in the OSPM controls section.
- Delivered performance may be lower than the OSPM desired performance if the platform's efficiency optimizations caused the delivered performance to be less than desired performance. However, the delivered performance should never be lower than the OSPM specified.
- Performance Reduction Tolerance. The Performance Reduction Tolerance provides a bound to the platform on how aggressive it can be when optimizing performance delivery. The platform should not perform any optimization that would cause delivered performance to be lower than the OSPM specified Performance Reduction Tolerance.

#### 8.4.7.1.3.1.1 Reference Performance Counter Register

**Attribute:** **Read**  
**Size:** **32 or 64 bits**

The Reference Performance Counter Register counts at a fixed rate any time the processor is active. It is not affected by changes to Desired Performance, processor throttling, etc. If Reference Performance is supported, the Reference Performance Counter accumulates at a rate corresponding to the Reference Performance level. Otherwise, the Reference Performance Counter accumulates at the Nominal performance level.

#### 8.4.7.1.3.1.2 Delivered Performance Counter Register

**Attribute:** **Read**  
**Size:** **32 or 64 bits**

The Delivered Performance Counter Register increments any time the processor is active, at a rate proportional to the current performance level, taking into account changes to Desired Performance. When the processor is operating at its reference performance level, the delivered performance counter must increment at the same rate as the reference performance counter.

#### 8.4.7.1.3.1.3 Counter Wraparound Time

**Optional**  
**Register or DWORD**  
**Attribute:** **Read**  
**Size:** **32 or 64 bits**  
**Units:** **seconds**

Counter Wraparound Time provides a means for the platform to specify a rollover time for the Reference/Delivered performance counters. If greater than this time period elapses between OSPM querying the feedback counters, the counters may wrap without OSPM being able to detect that they have done so.

If not implemented (or zero), the performance counters are assumed to never wrap during the lifetime of the platform.

#### 8.4.7.1.3.2 Performance Limited Register

**Attribute:** **Read/Write**  
**Size:** **>=2 bit(s)**

In the event that the platform must constrain the delivered performance to less than the minimum performance or the desired performance (or, less than the guaranteed performance, if desired performance is greater than guaranteed performance) due to an unpredictable event, the platform must set the performance limited indicator to a non-zero value. This indicates to OSPM that an unpredictable event has limited processor performance, and the delivered performance may be less than desired / minimum performance.

**Table 8-280 Performance Limited Register Status Bits**

Bit	Name	Description
0	Desired_Excursion	Set when Delivered Performance has been constrained to less than Desired Performance (or, less than the guaranteed performance, if desired performance is greater than guaranteed performance). This bit is not utilized when Autonomous Selection is enabled.
1	Minimum_Excursion	Set when Delivered Performance has been constrained to less than Minimum Performance
2-n	Reserved	Reserved

Bits within the **Performance Limited Register** are sticky, and will remain non-zero until OSPM clears the bit. The platform should only issue a Notify when Minimum Excursion transitions from 0 to 1 to avoid repeated events when there is sustained or recurring limiting but OSPM has not cleared the previous indication.

**Note:** *All accesses to the Performance Limited Register must be made using interlocked operations, by both accessing entities.*

The performance limited register should only be used to report short term, unpredictable events (e.g., PROCHOT being asserted). If the platform is capable of identifying longer term, predictable events that limit processor performance, it should use the guaranteed performance register to notify OSPM of this limitation. Changes to guaranteed performance should not be more frequent than once per second. If the platform is not able to guarantee a given performance level for a sustained period of time (greater than one second), it should guarantee a lower performance level and opportunistically enter the higher performance level as requested by OSPM and allowed by current operating conditions.

#### 8.4.7.1.4 CPPC Enable Register

**Optional**  
**Attribute:** **Read/Write**  
**Size:** **>=1 bit(s)**

If supported by the platform, OSPM writes a one to this register to enable CPPC on this processor.

If not implemented, OSPM assumes the platform always has CPPC enabled.

#### 8.4.7.1.5 Autonomous Selection Enable Register

**Optional**  
**Register or DWORD**  
**Attribute:**      **Read/Write**  
**Size:**              **>=1 bit(s)**

If supported by the platform, OSPM writes a one to this register to enable Autonomous Performance Level Selection on this processor. CPPC must be enabled via the CPPC Enable Register to enable Autonomous Performance Level Selection. Platforms that exclusively support Autonomous Selection must populate this field as an Integer with a value of 1.

When Autonomous Selection is enabled, the platform is responsible for selecting performance states. OSPM is not required to assess processor workload performance demand and convey a corresponding performance delivery request to the platform via the Desired Performance Register.

#### 8.4.7.1.6 Autonomous Activity Window Register

**Optional**  
**Attribute:**      **Read/Write**  
**Size:**              **10 bit(s)**  
**Units:**              **Bits 06:00 - Significand, Bits 09:07 - Exponent, Base\_Time\_Unit = 1E-6 seconds (1 microsecond)**

If supported by the platform, OSPM may write a time value (10^3-bit exp \* 7-bit mantissa in 1μsec units: 1us to 1270 sec) to this field to indicate a moving utilization sensitivity window to the platform's autonomous selection policy. Combined with the Energy Performance Preference Register value, the Activity Window influences the rate of performance increase / decrease of the platform's autonomous selection policy. OSPM writes a zero value to this register to enable the platform to determine an appropriate Activity Window depending on the workload.

Writes to this register only have meaning when Autonomous Selection is enabled.

#### 8.4.7.1.7 Energy Performance Preference Register

**Optional**  
**Attribute:**      **Read/Write**  
**Size:**              **4-8 bit(s)**

If supported by the platform, OSPM may write a range of values from 0 (performance preference) to 0xFF (energy efficiency preference) that influences the rate of performance increase /decrease and the result of the hardware's energy efficiency and performance optimization policies. This provides a means for OSPM to limit the energy efficiency impact of the platform's performance-related optimizations / control policy and the performance impact of the platform's energy efficiency-related optimizations / control policy.

Writes to this register only have meaning when Autonomous Selection is enabled.

#### 8.4.7.1.8 OSPM Control Policy

##### 8.4.7.1.8.1 In-Band Thermal Control

A processor using performance controls may be listed in a thermal zone's \_PSL list. If it is and the thermal zone engages passive cooling as a result of passing the \_PSV threshold, OSPM will apply the ΔP[%] to

modify the value in the desired performance register. Any time that passive cooling is engaged, OSPM must also set the maximum performance register equal to the desired performance register, to enforce the platform does not exceed the desired performance opportunistically.

**Note:** *In System-on-Chip-based platforms where the SoC is comprised of multiple device components in addition to the processor, OSPM's use of the Desired and Maximum registers for thermal control may not produce an optimal result because of SoC device interaction. The use of proprietary package level thermal controls (if they exist) may produce more optimal results.*

#### 8.4.7.1.9 Using PCC Registers

If the PCC register space is used, all PCC registers, for all processors in the same performance domain (as defined by \_PSD), must be defined to be in the same subspace. If \_PSD is not used, the restriction applies to all registers within a given \_CPC object. OSPM will write registers by filling in the register value and issuing a PCC write command (see [Table 8-281](#)). It may read static registers, counters, and the performance limited register by issuing a read command (see [Table 8-281](#)). To amortize the cost of PCC transactions, OSPM should read or write all PCC registers via a single read or write command when possible.

**Table 8-281 PCC Commands Codes used by Collaborative Processor Performance Control**

Command	Description
0x00	Read registers. Executed to request the platform update all registers for all enabled processors with their current value.
0x01	Write registers. Executed to notify the platform one or more read/write registers for an enabled processor has been updated.
0x02-0xFF	All other values are reserved.

#### 8.4.7.1.10 Relationship to other ACPI-defined Objects and Notifications

If \_CPC is present, its use supersedes the use of the following existing ACPI objects:

- The P\_BLK P\_CNT register
- \_PTC
- \_TSS
- \_TPC
- \_TSD
- \_TDL
- \_PCT
- \_PSS
- \_PPC
- \_PDL
- Notify 0x80 on the processor device
- Notify 0x82 on the processor device

The \_PSD object may be used to specify domain dependencies between processors. On a system with heterogeneous processors, all processors within a single domain must have the same performance capabilities.

#### 8.4.7.1.11 \_CPC Implementation Example

This example shows a two processor implementation of the \_CPC interface via the PCC interface, in PCC subspace 2. This implementation uses registers to describe the processor's capabilities, and does not support the Minimum Performance, Maximum Performance, or Time Window registers.

```

Processor (\_SB.CPU0, 1, 0, 0)
{
    Name(_CPC, Package())
    {
        21,    // NumEntries
        2,     // Revision
        ResourceTemplate(){Register(PCC, 32, 0, 0x120, 2)},
                // Highest Performance
        ResourceTemplate(){Register(PCC, 32, 0, 0x124, 2)},
                // Nominal Performance
        ResourceTemplate(){Register(PCC, 32, 0, 0x128, 2)},
                // Lowest Nonlinear Performance
        ResourceTemplate(){Register(PCC, 32, 0, 0x12C, 2)},
                // Lowest Performance
        ResourceTemplate(){Register(PCC, 32, 0, 0x130, 2)},
                // Guaranteed Performance Register
        ResourceTemplate(){Register(PCC, 32, 0, 0x110, 2)},
                // Desired Performance Register
        ResourceTemplate(){Register(SystemMemory, 0, 0, 0, 0)},
                // Minimum Performance Register
        ResourceTemplate(){Register(SystemMemory, 0, 0, 0, 0)},
                // Maximum Performance Register
        ResourceTemplate(){Register(SystemMemory, 0, 0, 0, 0)},
                // Performance Reduction Tolerance Register
        ResourceTemplate(){Register(SystemMemory, 0, 0, 0, 0)},
                // Time Window Register
        ResourceTemplate(){Register(PCC, 8, 0, 0x11B, 2)},
                // Counter Wraparound Time
        ResourceTemplate(){Register(PCC, 32, 0, 0x114, 2)},
                // Reference Performance Counter Register
        ResourceTemplate(){Register(PCC, 32, 0, 0x116, 2)},
                // Delivered Performance Counter Register
        ResourceTemplate(){Register(PCC, 8, 0, 0x11A, 2)},
                // Performance Limited Register
        ResourceTemplate(){Register(PCC, 1, 0, 0x100, 2)},
                // CPPC Enable Register
        ResourceTemplate(){Register(SystemMemory, 0, 0, 0, 0)},
                // Autonomous Selection Enable
        ResourceTemplate(){Register(SystemMemory, 0, 0, 0, 0)},
                // Autonomous Activity Window Register
        ResourceTemplate(){Register(SystemMemory, 0, 0, 0, 0)},
                // Energy Performance Preference Register
    }
}

```

```

        ResourceTemplate(){Register(SystemMemory, 0, 0, 0, 0)}
            // Reference Performance
    })
}

Processor (\_SB.CPU1, 2, 0, 0)
{
    Name(_CPC, Package())
    {
        21,   // NumEntries
        2,    // Revision
        ResourceTemplate(){Register(PCC, 32, 0, 0x220, 2)},
            // Highest Performance
        ResourceTemplate(){Register(PCC, 32, 0, 0x224, 2)},
            // Nominal Performance
        ResourceTemplate(){Register(PCC, 32, 0, 0x228, 2)},
            // Lowest Nonlinear Performance
        ResourceTemplate(){Register(PCC, 32, 0, 0x22C, 2)},
            // Lowest Performance
        ResourceTemplate(){Register(PCC, 32, 0, 0x230, 2)},
            // Guaranteed Performance Register
        ResourceTemplate(){Register(PCC, 32, 0, 0x210, 2)},
            // Desired Performance Register
        ResourceTemplate(){Register(SystemMemory, 0, 0, 0, 0)},
            // Minimum Performance Register
        ResourceTemplate(){Register(SystemMemory, 0, 0, 0, 0)},
            // Maximum Performance Register
        ResourceTemplate(){Register(SystemMemory, 0, 0, 0, 0)},
            // Performance Reduction Tolerance Register
        ResourceTemplate(){Register(SystemMemory, 0, 0, 0, 0)},
            // Time Window Register
        ResourceTemplate(){Register(PCC, 8, 0, 0x21B, 2)},
            // Counter Wraparound Time
        ResourceTemplate(){Register(PCC, 32, 0, 0x214, 2)},
            // Reference Performance Counter Register
        ResourceTemplate(){Register(PCC, 32, 0, 0x216, 2)},
            // Delivered Performance Counter Register
        ResourceTemplate(){Register(PCC, 8, 0, 0x21A, 2)},
            // Performance Limited Register
        ResourceTemplate(){Register(PCC, 1, 0, 0x200, 2)},
            // CPPC Enable Register
        ResourceTemplate(){Register(SystemMemory, 0, 0, 0, 0)},
            // Autonomous Selection Enable
        ResourceTemplate(){Register(SystemMemory, 0, 0, 0, 0)},
            // Autonomous Activity Window Register
        ResourceTemplate(){Register(SystemMemory, 0, 0, 0, 0)},
            // Energy Performance Preference Register
}

```

```

        ResourceTemplate(){Register(SystemMemory, 0, 0, 0, 0)}
        // Reference Performance
    })

```

### 8.4.8 \_PPE (Polling for Platform Errors)

This optional object, when present, is evaluated by OSPM to determine if the processor should be polled to retrieve corrected platform error information. This object augments /overrides information provided in the CPEP , if supplied. See [Section 5.2.18](#) “Corrected Platform Error Polling Table (CPEP)”.

#### Arguments:

None

#### Return Value:

An **Integer** containing the recommended polling interval in milliseconds.

- 0 – OSPM should not poll this processor.
- Other values – OSPM should poll this processor at <= the specified interval.

OSPM evaluates the \_PPE object during processor object initialization and Bus Check notification processing.

## 8.5 Processor Aggregator Device

The following section describes the definition and operation of the optional Processor Aggregator device. The Processor Aggregator Device provides a control point that enables the platform to perform specific processor configuration and control that applies to **all** processors in the platform.

The Plug and Play ID of the Processor Aggregator Device is ACPI000C.

**Table 8-282 Processor Aggregator Device Objects**

Object	Description
_PUR	Requests a number of logical processors to be placed in an idle state

### 8.5.1 Logical Processor Idling

In order to reduce the platform’s power consumption, the platform may direct OSPM to remove a logical processor from the operating system scheduler’s list of processors where non-processor affinitized work is dispatched. This capability is known as Logical Processor Idling and provides a means to reduce platform power consumption without undergoing processor ejection / insertion processing overhead. Interrupts directed to a logical processor and processor affinitized workloads will impede the effectiveness of logical processor idling in reducing power consumption as OSPM is not expected to re-target this work when a logical processor is idled.

#### 8.5.1.1 PUR (Processor Utilization Request)

The \_PUR object is an optional object that may be declared under the Processor Aggregator Device and provides a means for the platform to indicate to OSPM the number of logical processors to be idled. OSPM evaluates the \_PUR object as a result of the processing of a Notify event on the Processor Aggregator device object of type 0x80.

**Arguments:**

None

**Return Value:**

A Package as described below.

**Return Value Information**

```
Package
{
    RevisionID      // Integer: Current value is 1
    NumProcessors   // Integer
}
```

The NumProcessors package element conveys the number of logical processors that the platform wants OSPM to idle. This number is an absolute value. OSPM increments or decrements the number of logical processors placed in the idle state to equal the NumProcessors value as possible. A NumProcessors value of zero causes OSPM to place all logical processor in the active state as possible.

OSPM uses internal logical processor to physical core and package topology knowledge to idle logical processors successively in an order that maximizes power reduction benefit from idling requests. For example, all SMT threads constituting logical processors on a single processing core should be idled to allow the core to enter a low power state before idling SMT threads constituting logical processors on another core.

**8.5.2 OSPM \_OST Evaluation**

When processing of the \_PUR object evaluation completes, OSPM evaluates the \_OST object, if present under the Processor Aggregator device, to convey \_PUR evaluation status to the platform. \_OST arguments specific to \_PUR evaluation are described below.

**Arguments: (3)**

Arg0 – Source Event (**Integer**) : 0x80

Arg1 – Status Code (**Integer**) : see below

Arg2 – Idled Procs (**Buffer**) : see below

**Return Value:**

None

**Argument Information:**

Arg1 – Status Code

0: success – OSPM idled the number of logical processors indicated by the value of Arg2

1: no action was performed

Arg2 – A 4-byte buffer that represents a DWORD that is the number of logical processors that are now idled)

The platform may request a number of logical processors to be idled that exceeds the available number of logical processors that can be idled from an OSPM context for the following reasons:

- The requested number is larger than the number of logical processors currently defined.
- Not all the defined logical processors were onlined by the OS (for example, for licensing reasons)

Logical processors critical to OS function (for example, the BSP) cannot be idled.

# 9 ACPI-Defined Devices and Device-Specific Objects

---

This section describes ACPI defined devices and device-specific objects. The system status indicator objects, declared under the `\_SI` scope in the ACPI Namespace, are also specified in this section.

## 9.1 Device Object Name Collision

Devices containing both `_HID` and `_CID` may have device specific control methods pertaining to both the device ID in the `_HID` and the device ID in the `_CID`. These device specific control methods are defined by the device owner (a standard body or a vendor or a group of vendor partners). Since these object names are not controlled by a central authority, there is a likelihood that the names of objects will conflict between two defining parties. The `_DSM` object described in the next section solves this conflict.

### 9.1.1 `_DSM` (Device Specific Method)

This optional object is a control method that enables devices to provide device specific control functions that are consumed by the device driver.

#### Arguments: (4)

Arg0 – A **Buffer** containing a UUID

Arg1 – An **Integer** containing the Revision ID

Arg2 – An **Integer** containing the Function Index

Arg3 – A **Package** that contains function-specific arguments

#### Return Value:

If Function Index = 0, a **Buffer** containing a function index bitfield. Otherwise, the return value and type depends on the UUID and revision ID (see below).

#### Argument Information:

Arg0: *UUID* – A Buffer containing the UUID (see [Section 5.2.4](#)) (16 Bytes)

Arg1: *Revision ID* – the function's revision. This revision is specific to the UUID.

Arg2: *Function Index* – Represents a specific function whose meaning is specific to the UUID and Revision ID. Function indices should start with 1. Function number zero is a query function (see the special return code defined below).

Arg3: *Function Arguments* – a package containing the parameters for the function specified by the *UUID*, *Revision ID* and *Function Index*.

Successive revisions of *Function Arguments* must be backward compatible with earlier revisions. New UUIDs may also be created by OEMs and IHVs for custom devices and other interface or device governing bodies (e.g. the PCI SIG), as long as the UUID is different from other published UUIDs. Only the issuer of a UUID can authorize a new *Function Index*, *Revision ID* or *Function Argument* for that UUID.

### Return Value Information:

If *Function Index* is zero, the return is a buffer containing one bit for each function index, starting with zero. Bit 0 indicates whether there is support for any functions other than function 0 for the specified UUID and Revision ID. If set to zero, no functions are supported (other than function zero) for the specified UUID and Revision ID. If set to one, at least one additional function is supported. For all other bits in the buffer, a bit is set to zero to indicate if that function index is not supported for the specific UUID and Revision ID. (For example, bit 1 set to 0 indicates that function index 1 is not supported for the specific UUID and Revision ID.)

If the bit representing a particular function index would lie outside of the buffer, it should be assumed to be 0 (that is, not supported).

If *Function Index* is non-zero, the return is any data object. The type and meaning of the returned data object depends on the *UUID*, *Revision ID*, *Function Index*, and *Function Arguments*.

**Note:** For backward compatibility, \_DSM requires that each Revision ID support all of the functions defined by all previous Revision IDs for the same UUID.

### Implementation Note

Since the purpose of the \_DSM method is to avoid the namespace collision, the implementation of this method shall not use any other method or data object which is not defined in this specification unless its driver and usage is completely under the control of the platform vendor.

### Example:

```
// _DSM - Device Specific Method
//
// Arg0: UUID Unique function identifier
// Arg1: Integer Revision Level
// Arg2: Integer Function Index (0 = Return Supported Functions)
// Arg3: Package Parameters
Function(_DSM, {IntObj, BuffObj}, {BuffObj, IntObj, IntObj, PkgObj})
{
    //
    // Switch based on which unique function identifier was passed in
    //
    switch(Arg0)
    {
        //
        // First function identifier
        //
        case(ToUUID("893f00a6-660c-494e-bcf0-3043f4fb67c0"))
        {
            switch(Arg2)
            {
                //
                // Function 0: Return supported functions, based on revision
                //
                case(0)
                {

```

```

swi tch(Arg1)
{
    // revision 0: functions 1-4 are supported
    case(0) {return (Buffer() {0x1F})}
    // revision 1: functions 1-5 are supported
    case(1) {return (Buffer() {0x3F})}
}
// revision 2+: functions 1-7 are supported
return (Buffer() {0xFF})
}

//
// Function 1:
//
case(1)
{
    ... function 1 code ...
    Return(Zero)
}
//
// Function 2:
//
case(2)
{
    ... function 2 code ...
    Return(Buffer() {0x00})
}
case(3) { ... function 3 code ... }
case(4) { ... function 4 code ... }
case(5) { if (LLess(Arg1, 1) BreakPoint; ... function 5 code ... } }
case(6) { if (LLess(Arg1, 2) BreakPoint; ... function 6 code ... } )
case(7) { if (LLess(Arg1, 3) BreakPoint; ... function 7 code ... } )
default {BreakPoint }
}

}

//
// Second function identifier
//
case(ToUUID("107ededd-d381-4fd7-8da9-08e9a6c79644"))
{
    //
    // Function 0: Return supported functions (there is only one revision)
    //
    if (LEqual(Arg2, Zero))
        return (Buffer() {0x3}) // only one function supported
    //
    // Function 1
    //
    if (LEqual(Arg2, One))
    {
        ... function 1 code ...
        Return(UniCode("text"))
    }
}

```

```

}
//
// Function 2+: Runtime Error
//
else
    BreakPoint;
}
}
//
// If not one of the UUIDs we recognize, then return a buffer
// with bit 0 set to 0 indicating no functions supported.
//
return(Buffer(){0})
}

```

## 9.2 \\_SI System Indicators

ACPI provides an interface for a variety of simple and icon-style indicators on a system. All indicator controls are in the \\_SI portion of the namespace. The following table lists all defined system indicators. (Notice that there are also per-device indicators specified for battery devices).

**Table 9-283 System Indicator Control Methods**

Object	Description
_SST	System status indicator
_MSG	Messages waiting indicator
_BLT	Battery Level Threshold

### 9.2.1 \_SST (System Status)

This optional object is a control method that OSPM invokes to set the system status indicator as desired.

#### Arguments: (1)

Arg0 – An **Integer** containing the system status indicator identifier

- 0 – No system state indication. Indicator off
- 1 – Working
- 2 – Waking
- 3 – Sleeping. Used to indicate system state S1, S2, or S3
- 4 – Sleeping with context saved to non-volatile storage

#### Return Value:

None

### 9.2.2 \_MSG (Message)

This control method sets the system's message-waiting status indicator.

**Arguments:** (1)

Arg0 – An **Integer** containing the number of waiting messages

**Return Value:**

None

**9.2.3 \_BLT (Battery Level Threshold)**

This optional control method is used by OSPM to indicate to the platform the user's preference for various battery level thresholds. This method allows platform battery indicators to be synchronized with OSPM provided battery notification levels. Note that if \_BLT is implemented on a multi-battery system, it is required that the power unit for all batteries must be the same. See [Section 10.2](#) for more details on battery levels.

**Arguments:** (3)

Arg0 – An **Integer** containing the preferred threshold for the battery warning level

Arg1 – An **Integer** containing the preferred threshold for the battery low level

Arg2 – An **Integer** containing the preferred threshold for the battery wake level

**Return Value:**

None

**Additional Information**

The battery warning level in the range 0x00000001 – 0x7FFFFFFF (in units of mWh or mAh, depending on the *Power Units* value) is the user's preference for battery warning. If the level specified is less than the design capacity of warning, it may be ignored by the platform so that the platform can ensure a successful wake on low battery.

The battery low level in the range 0x00000001 – 0x7FFFFFFF (in units of mWh or mAh, depending on the *Power Units* value) is the user's preference for battery low. If this level is less than the design capacity of low, it may be ignored by the platform.

The battery wake level in the range 0x00000001 – 0x7FFFFFFF (in units of mWh or mAh, depending on the *Power Units* value) is the user's preference for battery wake. If this level is less than the platform's current wake on low battery level, it may be ignored by the platform. If the platform does not support a configurable wake on low battery level, this may be ignored by the platform.

**9.3 Ambient Light Sensor Device**

The following section illustrates the operation and definition of the control method-based Ambient Light Sensor (ALS) device.

The ambient light sensor device can optionally support power management objects (e.g. \_PS0, \_PS3) to allow the OS to manage the device's power consumption.

The Plug and Play ID of an ACPI control method ambient light sensor device is ACPI0008.

**Table 9-284 Control Method Ambient Light Sensor Device**

<b>Object</b>	<b>Description</b>
_ALI	The current ambient light illuminance reading in lux (lumen per square meter). [Required]
_ALC	The current ambient light color chromaticity reading, specified using x and y coordinates per the CIE Yxy color model. [Optional]
_ALT	The current ambient light color temperature reading in degrees Kelvin. [Optional]
_ALR	Returns a set of ambient light illuminance to display brightness mappings that can be used by an OS to calibrate its ambient light policy. [Required]
_ALP	Ambient light sensor polling frequency in tenths of seconds. [Optional]

### 9.3.1 Overview

This definition provides a standard interface by which the OS may query properties of the ambient light environment the system is currently operating in, as well as the ability to detect meaningful changes in these values when the environment changes. Two ambient light properties are currently supported by this interface: *illuminance* and *color*.

Ambient light illuminance readings are obtained via the \_ALI method. Illuminance readings indicate the amount of light incident upon (falling on) a specified surface area. Values are specified in *lux* (lumen per square meter) and give an indication of how “bright” the environment is. For example, an overcast day is roughly 1000 lux, a typical office environment 300-400 lux, and a dimly-lit conference room around 10 lux.

A possible use of ambient light illuminance data by the OS is to automatically adjust the brightness (or *luminance*) of the display device – e.g. increase display luminance in brightly-lit environments and decrease display luminance in dimly-lit environments. Note that Luminance is a measure of light radiated (reflected, transmitted, or emitted) by a surface, and is typically measured in *nits*. The \_ALR method provides a set of ambient light illuminance to display luminance mappings that can be used by an OS to calibrate its policy for a given platform configuration.

Ambient light color readings are obtained via the \_ALT and/or \_ALC methods. Two methods are defined to allow varying types/complexities of ambient light sensor hardware to be used. \_ALT returns color temperature readings in degrees Kelvin. Color temperature values correlate a light source to a standard black body radiator and give an indication of the type of light source present in a given environment (e.g. daylight, fluorescent, incandescent). ALC returns color chromaticity readings per the CIE Yxy color model. Chromaticity x and y coordinates provide a more straightforward indication of ambient light color characteristics. Note that the CIE Yxy color model is defined by the International Commission on Illumination (abbreviated as CIE from its French title Commission Internationale de l'Eclairage) and is based on human perception instead of absolute color.

A possible use of ambient light color data by the OS is to automatically adjust the color of displayed images depending on the environment the images are being viewed in. This may be especially important for reflective/transflective displays where the type of ambient light may have a large impact on the colors perceived by the user.

### 9.3.2 \_ALI (Ambient Light Illuminance)

This control method returns the current ambient light illuminance reading in lux (lumen per square meter). Expected values range from ~1 lux for a dark room, ~300 lux for a typical office environment, and 10,000+ lux for daytime outdoor environments – although readings may vary depending on the location of the sensor to the light source. Special values are reserved to indicate out of range conditions (see below).

#### Arguments:

None

#### Return Value:

An **Integer** containing the ambient light brightness in lux (lumens per square meter)

- 0 – The current reading is below the supported range or sensitivity of the sensor.
- Ones (-1) – The current reading is above the supported range or sensitivity of the sensor.
- Other values – The current ambient light brightness in lux (lumens per square meter)

### 9.3.3 \_ALT (Ambient Light Temperature)

This optional control method returns the current ambient light color temperature reading in degrees Kelvin (°K). Lower color temperatures imply warmer light (emphasis on yellow and red); higher color temperatures imply a colder light (emphasis on blue). This value can be used to gauge various properties of the lighting environment – for example, the type of light source. Expected values range from ~1500°K for candlelight, ~3000°K for a 200-Watt incandescent bulb, and ~5500°K for full sunlight on a summer day – although readings may vary depending on the location of the sensor to the light source. Special values are reserved to indicate out of range conditions (see below).

#### Arguments:

None

#### Return Value:

An **Integer** containing the ambient light temperature in degrees Kelvin

- 0 – The current reading is below the supported range or sensitivity of the sensor
- Ones (-1) – The current reading is above the supported range or sensitivity of the sensor
- Other values – The current ambient light temperature in degrees Kelvin

### 9.3.4 \_ALC (Ambient Light Color Chromaticity)

This optional control method returns the current ambient light color chromaticity readings per the CIE Xy color model. The x and y (chromaticity) coordinates are specified using a fixed  $10^{-4}$  notation due to the lack of floating point values in ACPI. Valid values are within the range 0 (0x0000) through 1 (0x2710).

A single 32-bit integer value is used, where the x coordinate is stored in the high word and the y coordinate in the low word. For example, the value 0x0C370CDA would be used to specify the white point for the CIE Standard Illuminant D65 (a standard representation of average daylight) with x = 0.3127 and y = 0.3290. Special values are reserved to indicate out of range conditions (see below).

#### Arguments:

None

#### Return Value:

An **Integer** containing the ambient light temperature in degrees Kelvin

0 – of	The current reading is below the supported range or sensitivity of the sensor
Ones (-1) – of	The current reading is above the supported range or sensitivity of the sensor
Other values –	The current ambient light color chromaticity x and y coordinate values, per the CIE Yxy color model

### 9.3.5 \_ALR (Ambient Light Response)

This object evaluates to a package of *ambient light illuminance* to *display luminance* mappings that can be used by an OS to calibrate its ambient light policy for a given sensor configuration. The OS can use this information to extrapolate an ALS response curve - noting that these values may be treated differently depending on the OS implementation but should be used in some form to calibrate ALS policy.

#### Arguments:

None

#### Return Value:

A variable-length **Package** containing a list of luminance mapping **Packages**. Each mapping package consists of two **Integers**.


The return data is specified as a package of packages, where each tuple (inner package) consists of the pair of **Integer** values of the form:

{<display luminance adjustment>, <ambient light illuminance>}

Package elements should be listed in monotonically increasing order based upon the ambient light illuminance value (the Y-coordinate on the graph) to simplify parsing by the OS.

Ambient light illuminance values are specified in lux (lumens per square meter). Display luminance (or brightness) adjustment values are specified using relative percentages in order to simplify the means by which these adjustments are applied in lieu of changes to the user's display brightness preference. A value of 100 is used to indicate no (0%) display brightness adjustment given the lack of signed data types in ACPI. Values less than 100 indicate a negative adjustment (dimming); values greater than 100 indicate

a positive adjustment (brightening). For example, a display brightness adjustment value of 75 would be interpreted as a -25% adjustment, and a value of 110 as a +10% adjustment.

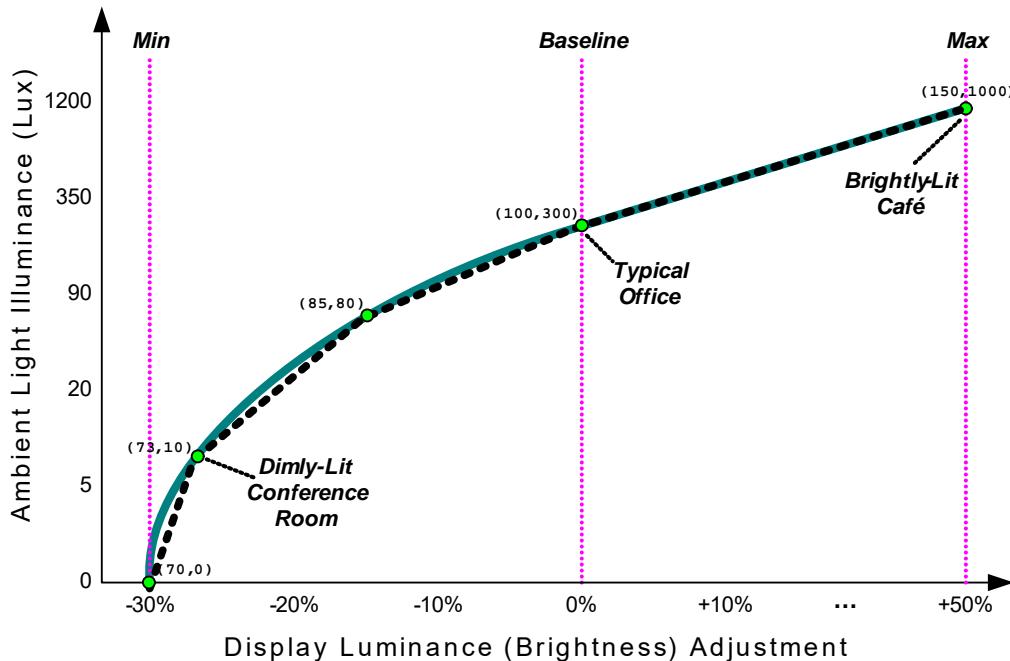

**Figure 9-47 A five-point ALS Response Curve**


[Figure 9-47](#) illustrates the use of five points to approximate an example response curve, where the dotted line represents an approximation of the desired response (solid curve). Extrapolation of the values between these points is OS-specific – although for the purposes of this example we'll assume a piecewise linear approximation. The ALS response curve (\_ALR) would be specified as follows:

```
Name(_ALR, Package() {
    Package{70, 0}, // Min (-30% adjust at 0 lux)
    Package{73, 10}, // (-27% adjust at 10 lux)
    Package{85, 80}, // (-15% adjust at 80 lux)
    Package{100, 300}, // Baseline (0% adjust at 300 lux)
    Package{150, 1000} // Max (+50% adjust at 1000 lux)
})
```

Within this data set exist three points of particular interest: *baseline*, *min*, and *max*. The *baseline* value represents an ambient light illuminance value (in lux) for the environment where this system is most likely to be used. When the system is operating in this ambient environment the ALS policy will apply no (0%) adjustment to the default display brightness setting. For example, given a system with a 300 lux *baseline*, operating in a typical office ambient environment (~300 lux), configured with a default display brightness setting of 50% (e.g. 60 nits), the ALS policy would apply no backlight adjustment, resulting in an absolute display brightness setting of 60 nits.

*Min* and *max* are used to indicate cutoff points in order to prevent an over-zealous response by the ALS policy and to influence the policy's mode of operation. For example, the *min* and *max* points from the figure above would be specified as (70,0) and (150,1000) respectively – where *min* indicates a maximum negative adjustment of 30% and *max* represents a maximum positive adjustment of 50%. Using a large display brightness adjustment for *max* allows an ALS response that approaches a fully-bright display (100% absolute) in very bright ambient environments regardless of the user's display brightness preference. Using a small value for *max* (e.g. 0% @ 300 lux) would influence the ALS policy to limit the use of this technology solely as a power-saving feature (never brighten the display). Conversely, setting *min* to a 0% adjustment instructs ALS policy to brighten but never dim.

A minimum of two data points are required in the return package, interpreted as *min* and *max*. Note that the *baseline* value does not have to be explicitly stated; it can be derived from the response curve. Addition elements can be provided to fine-tune the response between these points. [Figure 9-48](#) illustrates the use of two data points to achieve a response similar to (but simpler than) that described in [Figure 9-47](#).

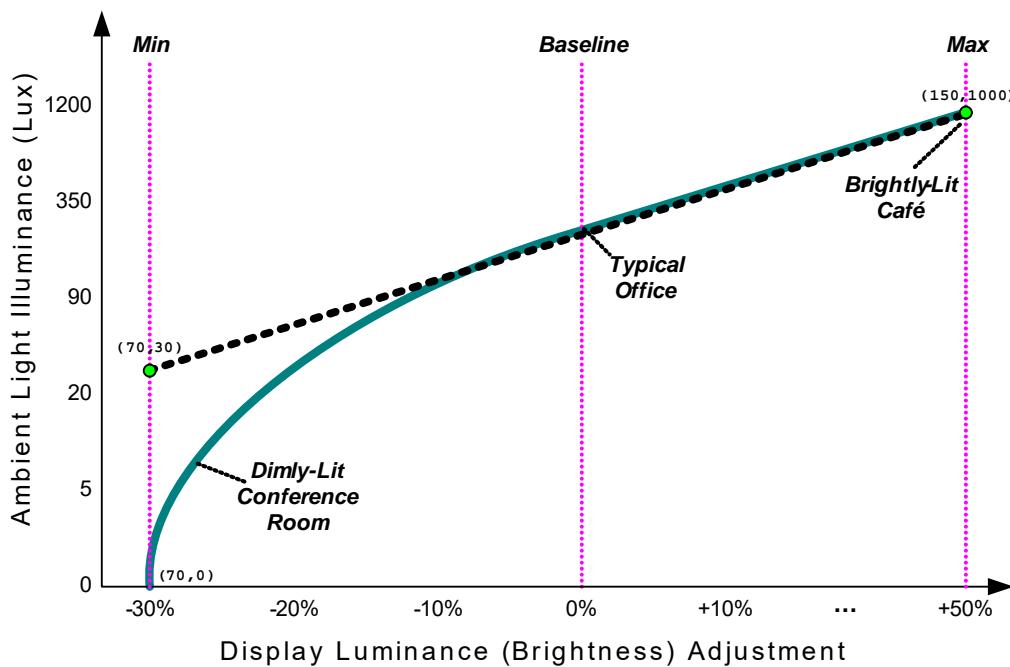


**Figure 9-48 A two-point ALS Response Curve**

This example lacks an explicit *baseline* and includes a *min* with an ambient light value above 0 lux. The *baseline* can easily be extrapolated by ALS Policy (e.g. 0% adjustment at ~400 lux). All ambient light brightness settings below *min* (20 lux) would be treated in a similar fashion by ALS policy (e.g. -30% adjustment). This two-point response curve would be modeled as:

```
Name(_ALR, Package() {
    Package{70, 30}, // Min   ( -30% adj ust at 30 lux)
    Package{150, 1000} // Max   ( +50% adj ust at 1000 lux)
})
```

This model can be used to convey a wide range of ambient light to display brightness responses. For example, a transreflective display – a technology where illumination of the display can be achieved by reflecting available ambient light, but also augmented in dimly-lit environments with a backlight – could be modeled as illustrated in [Figure 9-49](#).

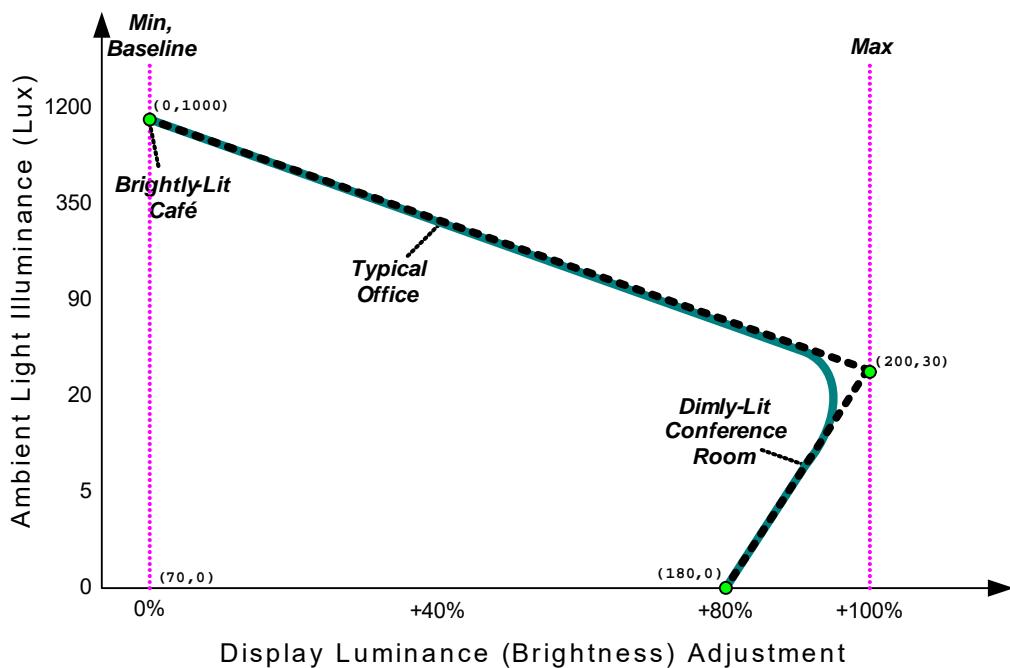

**Figure 9-49 Example Response Curve for a Transreflective Display**

This three-point approximation would result in an ALS response that allows the backlight to increase as the ambient lighting decreases. In this example, no backlight adjustment is needed in bright environments (1000+ lux), maximum backlight may be needed in dim environments (~30 lux), but a lower backlight setting may be used in a very-dark room (~0 lux) – resulting in an elbow around 30 lux. This response would be modeled in `_ALR` as follows:

```
Name(_ALR, Package() {
    Package{180, 0}      // +80% adjust at 0 lux
    Package{200, 30},   // Max (+100% adjust at 30 lux)
    Package{0, 1000},   // Min ( 0% adjust at 1,000 lux)
})
```

Note the ordering of package elements: monotonically increasing from the lowest ambient light value (0 lux) to the highest ambient light value (1000 lux).

The transreflective display example also highlights the need for non-zero values for the user's display brightness preference – which we'll refer to as the *reference* display brightness value. This requirement is derived from the model's use of relative adjustments. For example, applying any adjustment to a 0% reference display brightness value always results in a 0% absolute display brightness setting. Likewise,

using a very small reference display brightness (e.g. 5%) results in a muted response (e.g. +30% of 5% = 6.5% absolute). The solution is to apply a reasonably large value (e.g. 50%) as the reference display brightness setting – even in the case where no backlight is applied. This allows relative adjustments to be applied in a meaningful fashion while conveying to the user that the display is still usable (via reflected light) under typical ambient conditions.

The OS derives the user's display brightness preference (this *reference* value) either from the Brightness Control Levels (\_BCL) object or another OS-specific mechanism. See [Section 9.3.8](#), “Relationship to Backlight Control Methods”, for more information.

### 9.3.6 \_ALP (Ambient Light Polling)

This optional object evaluates to a *recommended* polling frequency (in tenths of seconds) for this ambient light sensor. A value of zero – or the absence of this object when other ALS objects are defined – indicates that OSPM does not need to poll the sensor in order to detect meaningful changes in ambient light (the hardware is capable of generating asynchronous notifications).

The use of polling is allowed but strongly discouraged by this specification. OEMs should design systems that asynchronously notify OSPM whenever a meaningful change in the ambient light occurs—relieving the OS of the overhead associated with polling.

This value is specified as tenths of seconds. For example, a value of 10 would be used to indicate a 1 second polling frequency. As this is a *recommended* value, OSPM will consider other factors when determining the actual polling frequency to use.

#### Arguments:

None

#### Return Value:

An **Integer** containing the recommended polling frequency in tenths of seconds

0 –	Polling by the host OS is not required
Other –	The recommended polling frequency in tenths of seconds

### 9.3.7 Ambient Light Sensor Events

To communicate meaningful changes in ALS illuminance to OSPM, AML code should issue a **Notify(als\_device, 0x80)** whenever the lux reading changes more than 10% (from the last reading that resulted in a notification). OSPM receives this notification and evaluates the \_ALI control method to determine the current ambient light status. The OS then adjusts the display brightness based upon its ALS policy (derived from \_ALR).

The definition of what constitutes a *meaningful change* is left to the system integrator, but should be at a level of granularity that provides an appropriate response without overly taxing the system with unnecessary interrupts. For example, an ALS configuration may be tuned to generate events for all changes in ambient light illuminance that result in a minimum ±5% display brightness response (as defined by \_ALR).

To communicate meaningful changes in ALS color temperature to OSPM, AML code should issue a **Notify(als\_device, 0x81)** whenever the lux reading changes more than 10% (from the last reading that resulted in a notification). OSPM receives this notification and evaluates the \_ALT and \_ALC control method to determine the current ambient light color temperature.

To communicate meaningful changes in ALS response to OSPM, AML code should issue a `Notify(als_device, 0x82)` whenever the set of points used to convey ambient light response has changed. OSPM receives this notification and evaluates the \_ALR object to determine the current response points.

### 9.3.8 Relationship to Backlight Control Methods

The Brightness Control Levels (\_BCL) method – described in section 0 – can be used to indicate user-selectable display brightness levels. The information provided by this method indicates the available display brightness settings, the recommended default brightness settings for AC and DC operation, and the absolute maximum and minimum brightness settings. These values indirectly influence the operation of the OSPM’s ALS policy.

Display brightness adjustments produced by ALS policy are relative to the current user backlight setting, and the resulting absolute value must be mapped (rounded) to one of the levels specified in \_BCL. This introduces the requirement for fine-grain display brightness control in order to achieve a responsive ALS system – which typically materializes as a need for additional entries in the \_BCL list in order to provide reasonable resolution to the OS (e.g. 3-10% granularity). Note that user brightness controls (e.g. hotkeys) are not required to make use of all levels specified in \_BCL.

## 9.4 Battery Device

A battery device is required to either have an ACPI Smart Battery Table or a Control Method Battery interface. In the case of an ACPI Smart Battery Table, the Definition Block needs to include a Bus/Device Package for the SMBus host controller. This will install an OS specific driver for the SMBus, which in turn will locate the Smart Battery System Manager or Smart Battery Selector and Smart Battery Charger SMBus devices.

The Control Method Battery interface is defined in [Section 10.2](#), “Control Method Batteries.”

## 9.5 Control Method Lid Device

Platforms containing lids convey lid status (open / closed) to OSPM using a Control Method Lid Device.

To implement a control method lid device, AML code should issue a `Notify(lid_device, 0x80)` for the device whenever the lid status has changed. The \_LID control method for the lid device must be implemented to report the current state of the lid as either opened or closed.

The lid device can support \_PRW and \_PSW methods to select the wake functions for the lid when the lid transitions from closed to opened.

The Plug and Play ID of an ACPI control method lid device is PNPOC0D.

**Table 9-285 Control Method Lid Device**

Object	Description
_LID	Returns the current status of the lid.

### 9.5.1 \_LID

Evaluates to the current status of the lid.

**Arguments:**

None

**Return Value:**

An **Integer** containing the current lid status

0 –	The lid is closed
Non-zero –	The lid is open

## 9.6 Control Method Power and Sleep Button Devices

The system’s power or sleep button can either be implemented using the fixed register space as defined in [Section 4.8.2.2](#), “Buttons,” or implemented in AML code as a control method power button device. In either case, the power button override function or similar unconditional system power or reset functionality is still implemented in external hardware.

To implement a control method power-button or sleep-button device, implement AML code that delivers two types of notifications concerning the device. The first is `Notify(Object, 0x80)` to signal that the button was pressed while the system was in the S0 state to indicate that the user wants the machine to transition from S0 to some sleeping state. The other notification is `Notify(Object, 0x2)` to signal that the button was pressed while the system was in an S1 to S4 state and to cause the system to wake. When the button is used to wake the system, the wake notification (`Notify(Object, 0x2)`) must occur after OSPM actually wakes, and a button-pressed notification (`Notify(Object, 0x80)`) must not occur.

The Wake Notification indicates that the system is awake because the user pressed the button and therefore a complete system resume should occur (for example, turn on the display immediately, and so on).

## 9.7 Embedded Controller Device

Operation of the embedded controller host controller register interface requires that the embedded controller driver has ACPI-specific knowledge. Specifically, the driver needs to provide an “operational region” of its embedded controller address space, and needs to use an ACPI event to service the host controller interface. For more information about an ACPI-compatible embedded controller device, see [Section 12](#), “ACPI Embedded Controller Interface Specification.”

The embedded controller device object provides the \_HID of an ACPI-integrated embedded controller device of PNPOC09 and the host controller register locations using the device standard methods. In addition, the embedded controller must be declared as a named device object that includes a set of control methods. For more information, see [Section 12.11](#), “Defining an Embedded Controller Device in ACPI Namespace”).

## 9.8 Generic Container Device

A generic container device is a bridge that does not require a special OS driver because the bridge does not provide or require any features not described within the normal ACPI device functions. The resources the bridge requires are specified via normal ACPI resource mechanisms. Device enumeration for child devices is supported via ACPI namespace device enumeration and OS drivers require no other features of the bus. Such a bridge device is identified with the Plug and Play ID of PNP0A05 or PNP0A06.

A generic bus bridge device is typically used for integrated bridges that have no other means of controlling them and that have a set of well-known devices behind them. For example, a portable computer can have a “generic bus bridge” known as an EIO bus that bridges to some number of Super-I/O devices. The bridged resources are likely to be positively decoded as either a function of the bridge or the integrated devices. In this example, a generic bus bridge device would be used to declare the bridge then child devices would be declared below the bridge; representing the integrated Super-I/O devices.

## 9.9 ATA Controller Devices

There are two types of ATA Controllers: IDE controllers (also known as ATA controllers) and Serial ATA (SATA) controllers. IDE controllers are those using the traditional IDE programming interface, and may support Parallel ATA (P-ATA) or SATA connections. SATA controllers may be designed to operate in emulation mode only, native mode only, or they may be designed to support both native and non-native SATA modes. Regardless of the mode supported, SATA controllers are designed to work solely with drives supporting the Serial ATA physical interface. As described below, SATA controllers are treated similarly but not identically to traditional IDE controllers.

Platforms that contain controllers that support native and non-native SATA modes must take steps to ensure the proper objects are placed in the namespace for the mode in which they are operating.

**Table 9-286 ATA Specific Objects**

Object	Description	Controller Type
_GTF	Optional object that returns the ATA task file needed to re-initialize the drive to boot up defaults.	Both
_GTM	Optional object that returns the IDE controller timing information.	IDE-only
_STM	Optional control method that sets the IDE controller’s transfer timing settings.	IDE-only
_SDD	Optional control method that informs the platform of the type of device attached to a port.	SATA-only

### 9.9.1 Objects for Both ATA and SATA Controllers

#### 9.9.1.1 \_GTF (Get Task File)

This optional object returns a buffer containing the ATA commands used to restore the drive to boot up defaults (that is, the state of the drive after POST). The returned buffer is an array with each element in the array consisting of seven 8-bit register values (56 bits) corresponding to ATA task registers 1F1 thru 1F7. Each entry in the array defines a command to the drive.

**Arguments:**

None

**Return Value:**

A **Buffer** containing a byte stream of ATA commands for the drive

This object may appear under SATA port device objects or under IDE channel objects.

ATA task file array definition:

- Seven register values for command 1
  - Reg values: (1F1, 1F2, 1F3, 1F4, 1F5, 1F6, 1F7)
- Seven register values for command 2
  - Reg values: (1F1, 1F2, 1F3, 1F4, 1F5, 1F6, 1F7)
- Seven register values for command 3
  - Reg values: (1F1, 1F2, 1F3, 1F4, 1F5, 1F6, 1F7)
- Etc.

After powering up the drive, OSPM will send these commands to the drive, in the order specified. On SATA HBAs, OSPM evaluates \_SDD before evaluating \_GTF. The IDE driver may modify some of the feature commands or append its own to better tune the drive for OSPM features before sending the commands to the drive.

This Control Method is listed under each drive device object. OSPM must evaluate the \_STM object or the \_SDD object before evaluating the \_GTF object.

Example of the return from \_GTF:

```
Method(_GTF, 0x0, NotSerialized)
{
  Return(GTF0)
}
Name(GTF0, Buffer(0x1c)
{
  0x03, 0x00, 0x00, 0x00, 0x00, 0xa0, 0xef, 0x03, 0x00, 0x00, 0x00, 0x00,
  0xa0, 0xef, 0x00, 0x10, 0x00, 0x00, 0x00, 0xa0, 0xc6, 0x00, 0x00, 0x00,
  0x00, 0x00, 0xa0, 0x91
}
```

## 9.9.2 IDE Controller Device

Most device drivers can save and restore the registers of their device. For IDE controllers and drives, this is not true because there are several drive settings for which ATA does not provide mechanisms to read. Further, there is no industry standard for setting timing information for IDE controllers. Because of this, ACPI interface mechanisms are necessary to provide the operating system information about the current settings for the drive and channel, and for setting the timing for the channel.

OSPM and the IDE driver will follow these steps when powering off the IDE subsystem:

1. The IDE driver will call the \_GTM control method to get the current transfer timing settings for the IDE channel. This includes information about DMA and PIO modes.
2. The IDE driver will call the standard OS services to power down the drives and channel.
3. As a result, OSPM will execute the appropriate \_PS3 methods and turn off unneeded power resources.

To power on the IDE subsystem, OSPM and the IDE driver will follow these steps:

1. The IDE driver will call the standard OS services to turn on the drives and channel.

2. As a result, OSPM will execute the appropriate \_PS0 methods and turn on required power resources.
3. The IDE driver will call the \_STM control method passing in transfer timing settings for the channel, as well as the ATA drive ID block for each drive on the channel. The \_STM control method will configure the IDE channel based on this information.
4. For each drive on the IDE channel, the IDE driver will run the \_GTF to determine the ATA commands required to reinitialize each drive to boot up defaults.
5. The IDE driver will finish initializing the drives by sending these ATA commands to the drives, possibly modifying or adding commands to suit the features supported by the operating system.

The following shows the namespace for these objects:

```
\_SB      // System bus
PCI0    // PCI bus
IDE1    // First IDE channel
  _ADR   // Indicates address of the channel on the PCI bus
  _GTM   // Control method to get current IDE channel settings
  _STM   // Control method to set current IDE channel settings
  _PRO   // Power resources needed for D0 power state
DRV1    // Drive 0
  _ADR   // Indicates address of master IDE device
  _GTF   // Control method to get task file
DRV2    // Drive 1
  _ADR   // Indicates address of slave IDE device
  _GTF   // Control method to get task file
IDE2    // Second IDE channel
  _ADR   // Indicates address of the channel on the PCI bus
  _GTM   // Control method to get current IDE channel settings
  _STM   // Control method to set current IDE channel settings
  _PRO   // Power resources needed for D0 power state
DRV1    // Drive 0
  _ADR   // Indicates address of master IDE device
  _GTF   // Control method to get task file
DRV2    // Drive 1
  _ADR   // Indicates address of slave IDE device
  _GTF   // Control method to get task file
```

The sequential order of operations is as follows:

#### **Powering down:**

- Call \_GTM.
- Power down drive (calls \_PS3 method and turns off power planes).

#### **Powering up:**

- Power up drive (calls \_PS0 method if present and turns on power planes).
- Call \_STM passing info from \_GTM (possibly modified), with ID data from each drive.
- Initialize the channel.
- May modify the results of \_GTF.

- For each drive:
  - Call \_GTM.
  - Execute task file (possibly modified).

### 9.9.2.1 IDE Controller-specific Objects

#### 9.9.2.1.1 \_GTM (Get Timing Mode)

This Control Method exists under each channel device object and returns the current settings for the IDE channel.

##### Arguments:

None

##### Return Value:

A **Buffer** containing the current IDE channel timing information block as described in [Table 9-287](#) below.

\_GTM returns a buffer with the following format

```
Buffer () {
  PIO Speed 0      //DWORD
  DMA Speed 0      //DWORD
  PIO Speed 1      //DWORD
  DMA Speed 1      //DWORD
  Flags            //DWORD
}
```

**Table 9-287 GTM Method Result Codes**

Field	Format	Description
PIO Speed 0	DWORD	The PIO bus-cycle timing for drive 0 in nanoseconds. 0xFFFFFFFF indicates that this mode is not supported by the channel. If the chipset cannot set timing parameters independently for each drive, this field represents the timing for both drives.
DMA Speed 0	DWORD	The DMA bus-cycle for drive 0 timing in nanoseconds. If bit 0 of the Flags register is set, this DMA timing is for UltraDMA mode, otherwise the timing is for multi-word DMA mode. 0xFFFFFFFF indicates that this mode is not supported by the channel. If the chipset cannot set timing parameters independently for each drive, this field represents the timing for both drives.
PIO Speed 1	DWORD	The PIO bus-cycle timing for drive 1 in nanoseconds. 0xFFFFFFFF indicates that this mode is not supported by the channel. If the chipset cannot set timing parameters independently for each drive, this field must be 0xFFFFFFFF.
DMA Speed 1	DWORD	The DMA bus-cycle timing for drive 1 in nanoseconds. If bit 0 of the Flags register is set, this DMA timing is for UltraDMA mode, otherwise the timing is for multi-word DMA mode. 0xFFFFFFFF indicates that this mode is not supported by the channel. If the chipset cannot set timing parameters independently for each drive, this field must be 0xFFFFFFFF.

Field	Format	Description
Flags	DWORD	<p>Mode flags</p> <p>Bit [0]: 1 indicates using UltraDMA on drive 0</p> <p>Bit [1]: 1 indicates IOChannelReady is used on drive 0</p> <p>Bit [2]: 1 indicates using UltraDMA on drive 1</p> <p>Bit [3]: 1 indicates IOChannelReady is used on drive 1</p> <p>Bit [4]: 1 indicates chipset can set timing independently for each drive</p> <p>Bits [31:5]: reserved (must be 0)</p>

### 9.9.2.1.2 \_STM (Set Timing Mode)

This Control Method sets the IDE channel's transfer timings to the setting requested. The AML code is required to convert and set the nanoseconds timing to the appropriate transfer mode settings for the IDE controller. \_STM may also make adjustments so that \_GTF control methods return the correct commands for the current channel settings.

This control method takes three arguments: Channel timing information (as described in Table 9-6), and the ATA drive ID block for each drive on the channel. The channel timing information is not guaranteed to be the same values as returned by \_GTM; the OS may tune these values as needed.

#### Arguments: (3)

Arg0 – A **Buffer** containing a channel timing information block (described in Table 9-6)

Arg1 – A **Buffer** containing the ATA drive ID block for channel 0

Arg2 – A **Buffer** containing the ATA drive ID block for channel 1

#### Return Value:

None

The ATA drive ID block is the raw data returned by the Identify Drive ATA command, which has the command code “0ECh.” The \_STM control method is responsible for correcting for drives that misreport their timing information.

## 9.9.3 Serial ATA (SATA) Controller Device

### 9.9.3.1 Definitions

<b><u>HBA</u></b>	Host Bus Adapter
<b><u>Native SATA aware</u></b>	Refers to system software (platform firmware, option ROM, operating system, etc) that comprehends a particular SATA HBA implementation and understands its programming interface and power management behavior.
<b><u>Non-native SATA aware</u></b>	Refers to system software (platform firmware, option ROM, operating system, etc) that does not comprehend a particular SATA HBA implementation and does not understand its programming interface or power management behavior. Typically, non-native SATA aware software will use a SATA HBA's emulation interface (e.g. task file registers) to control the HBA and access its devices.

<b><u>Emulation mode</u></b>	Optional mode supported by a SATA HBA. Allows non-native SATA aware software to access SATA devices via traditional task file registers.
<b><u>Native mode</u></b>	Optional mode supported by a SATA HBA. Allows native SATA aware software to access SATA devices via registers that are specific to the HBA.
<b><u>Hybrid Device</u></b>	Refers to a SATA HBA that implements both an emulation and a native programming interface.

### 9.9.3.2 Overview

A SATA HBA differs from an IDE controller in a number of ways. First, it can save its complete device context. Second, it replaces IDE channels, which may support up to 2 attached devices, with ports, which support only a single attached device, unless a port multiplier is present. See the SATA spec at "Links to ACPI-Related Documents" (<http://uefi.org/acpi>) under the heading "SATA Specification" for more information. Finally, SATA does not require timing information from the platform, allowing a simplification in how SATA controllers are represented in ACPI. (\_GTM and \_STM are replaced by the simpler \_SDD method.)

All ports, even those attached off a port multiplier, are represented as children directly under the SATA controller device. This is practical because the SATA specification does not allow a port multiplier to be attached to a port multiplier. Each port's \_ADR indicates to which root port they are connected, as well as the port multiplier location, if applicable. (See [Table 6-190](#) for \_ADR format.)

Since this specification only covers the configuration of motherboard devices, it is also the case that the control methods defined in this section cannot be used to send taskfiles to devices attached via either an add-in SATA HBA, or attached via a motherboard SATA HBA, if used with a port multiplier that is not also on the motherboard.

The following shows an example SATA namespace:

```
\_SB - System bus
PCIO - PCI bus
SATA - SATA Controller device
    ADR - Indicates address of the controller on the PCI bus
    PRO - Power resources needed for D0 power state
    PRT0 - Port 0 device
        _ADR - Indicates physical port and port multiplier topology
        _SDD - Identify information for drive attached to this port
        _GTF - Control method to get task file
    PRTn - Port n device
        _ADR - Indicates physical port and port multiplier topology
        _SDD - Identify information for drive attached to this port
        _GTF - Control method to get task file
```

### 9.9.3.3 SATA controller-specific control methods

In order to ensure proper interaction between OSPM, the firmware, and devices attached to the SATA controller, it is a requirement that OSPM execute the \_SDD and \_GTF control methods when certain events occur. OSPM's response to events must be as follows:

## **COMRESET, Initial OS load, device insertion, HBA D3 to D0 transition, asynchronous loss of signal:**

1. OSPM sends IDENTIFY DEVICE or IDENTIFY PACKET DEVICE command to the attached device.
2. OS executes \_SDD. \_SDD control method requires 1 argument that consists of the data block received from an attached device as a result of a host issued IDENTIFY DEVICE or IDENTIFY PACKET DEVICE command.
3. After the \_SDD method completes, the OS executes the \_GTF method. Using the task file information provided by \_GTF, the OS then sends the \_GTF taskfiles to the attached device.

## **Device removal and HBA D0 to D3 transition:**

1. No OSPM action required.

### **9.9.3.3.1 \_SDD (Set Device Data)**

This optional object is a control method that conveys to the platform the type of device connected to the port. The \_SDD object may exist under a SATA port device object. The platform typically uses the information conveyed by the \_SDD object to construct the values returned by the \_GTF object.

OSPM conveys to the platform the ATA drive ID block, which is the raw data returned by the Identify (Packet) Device, ATA command (command code “0ech.”). Please see the ATA/ATAPI-6 specification for more details.

#### **Arguments: (1)**

Arg0 – A **Buffer** containing an ATA drive identify block, contents described by the ATA specification

#### **Return Value:**

None

## **9.10 Floppy Controller Device Objects**

### **9.10.1 \_FDE (Floppy Disk Enumerate)**

Enumerating devices attached to a floppy disk controller is a time-consuming function. In order to speed up the process of floppy enumeration, ACPI defines an optional enumeration object that is defined directly under the device object for the floppy disk controller. It returns a buffer of five 32-bit values. The first four values are Boolean values indicating the presence or absence of the four floppy drives that are potentially attached to the controller. A non-zero value indicates that the floppy device is present. The fifth value returned indicates the presence or absence of a tape controller. Definitions of the tape presence value can be found in [Table 9-288](#).

#### **Arguments:**

None

#### **Return Value:**

A **Buffer** containing a floppy drive information block, as decribed below

```
Buffer () {
    Floppy 0      // Boolean DWORD
    Floppy 1      // Boolean DWORD
```

```

Floppy 2      // Boolean DWORD
Floppy 3      // Boolean DWORD
Tape          // DWORD – See table below
}

```

**Table 9-288 Tape Presence**

Value	Description
0	Device presence is unknown or unavailable
1	Device is present
2	Device is never present
>2	<i>Reserved</i>

### 9.10.2 \_FDI (Floppy Disk Information)

This object returns information about a floppy disk drive. This information is the same as that returned by the INT 13 Function 08H on IA-PCs.

#### Arguments:

None

#### Return Value:

A **Package** containing the floppy disk information as a list of **Integers**

```

Package {
  Drive Number      // Integer (BYTE)
  Device Type       // Integer (BYTE)
  Maximum Cylinder Number // Integer (WORD)
  Maximum Sector Number // Integer (WORD)
  Maximum Head Number // Integer (WORD)
  disk_specify_1    // Integer (BYTE)
  disk_specify_2    // Integer (BYTE)
  disk_motor_wait   // Integer (BYTE)
  disk_sector_size  // Integer (BYTE)
  disk_eot          // Integer (BYTE)
  disk_rw_gap       // Integer (BYTE)
  disk_dtl          // Integer (BYTE)
  disk_formt_gap    // Integer (BYTE)
  disk_fifl          // Integer (BYTE)
  disk_head_sttl    // Integer (BYTE)
  disk_motor strt   // Integer (BYTE)
}

```

**Table 9-289 ACPI Floppy Drive Information**

Package Element	Element Object Type	Actual Valid Data Width
00 – Drive Number	Integer	BYTE

Package Element	Element Object Type	Actual Valid Data Width
01 – Device Type	Integer	BYTE
02 – Maximum Cylinder Number	Integer	WORD
03 – Maximum Sector Number	Integer	WORD
04 – Maximum Head Number	Integer	WORD
05 – Disk_specify_1	Integer	BYTE
06 – Disk_specify_2	Integer	BYTE
07 – Disk_motor_wait	Integer	BYTE
08 – Disk_sector_siz	Integer	BYTE
09 – Disk_eot	Integer	BYTE
10 – Disk_rw_gap	Integer	BYTE
11 – Disk_dtl	Integer	BYTE
12 – Disk_formt_gap	Integer	BYTE
13 – Disk_fill	Integer	BYTE
14 – Disk_head_sttl	Integer	BYTE
15 – Disk_motor strt	Integer	BYTE

### 9.10.3 \_FDM (Floppy Disk Drive Mode)

This control method switches the mode (300 RPM or 360 RPM) of all floppy disk drives attached to this controller. If this control method is implemented, the platform must reset the mode of all drives to 300RPM mode after a Dx to D0 transition of the controller.

#### Arguments: (1)

Arg0 – An **Integer** containing the new drive mode

- 0 – Set the mode of all drives to 300 RPM mode
- 1 – Set the mode of all drives to 360 RPM mode

#### Return Value:

None

## 9.11 GPE Block Device

The GPE Block device is an optional device that allows a system designer to describe GPE blocks beyond the two that are described in the FADT. Control methods associated with the GPE pins of GPE block devices exist as children of the GPE Block device, not within the `\_GPE` namespace. Because GPE block devices are meant as an extension to the GPE blocks defined in the FADT, and that portion of the FADT is to be ignored in hardware-reduced ACPI, GPE block devices are not supported in hardware-reduced ACPI.

A GPE Block device consumes I/O or memory address space, as specified by its `_PRS` or `_CRS` child objects. The interrupt vector used by the GPE block does not need to be the same as the `SCI_INT` field. The interrupt used by the GPE block device is specified in the `_CRS` and `_PRS` methods associated with the

GPE block. The \_CRS of a GPE Block device may only specify a single register address range, either I/O or memory. This range contains two registers: the GPE status and enable registers. Each register's length is defined as half of the length of the \_CRS-defined register address range.

A GPE Block device must have a \_HID or a \_CID of “ACPI0006.”

**Note:** A system designer must describe the GPE block necessary to bootstrap the system in the FADT as a GPE0/GPE1 block. GPE Block devices cannot be used to implement these GPE inputs.

A GPE Block Device must contain the \_Lxx, \_Exx, \_Wxx, \_CRS, \_PRS, and \_SRS methods required to use and program that block.

To represent the GPE block associated with the FADT, the system designer should include in the namespace a Device object with the ACPI0006 \_HID that contains no \_CRS, \_PRS, \_SRS, \_Lxx, \_Exx, or \_Wxx methods. OSPM assumes that the first such ACPI0006 device is the GPE Block Device that is associated with the FADT GPEs. (See the example below).

```
// ASL example of a standard GPE block device
Device(\_SB.PCI0.GPE1) {
    Name(_HID, "ACPI0006")
    Name(_UID, 2)
    Name(_CRS, Buffer () {
        IO(Decode16, FC00, FC03, 4, 4)
        IRQ(Level, ActiveHigh, Shared,) { 5 }
    })
    Method(_L02) { ... }
    Method(_E07) { ... }
    Method(_W04) { ... }
}

// ASL example of a GPE block device that refers to the FADT GPEs.
// Cannot contain any _Lxx, _Exx, _Wxx, _CRS, _PRS, or _SRS methods.
Device(\_SB.PCI0.GPE0) {
    Name(_HID, "ACPI0006")
    Name(_UID, 1)
}
```

Notice that it is legal to replace the I/O descriptors with Memory descriptors if the register is memory mapped.

If the system must run any GPEs to bootstrap the system (for example, when Embedded Controller events are required), the associated block of GPEs must be described in the FADT. This register block is not relocatable and will always be available for the life of the operating system boot.

A GPE block associated with the ACPI0006 \_HID can be stopped, ejected, reprogrammed, and so on. The system can also have multiple such GPE blocks.

### 9.11.1 Matching Control Methods for Events in a GPE Block Device

When a GPE Device raises an interrupt, OSPM executes a corresponding control method (as described in [Section 5.6.4.1.1](#), “Queuing the Matching Control Method for Execution”). These control methods (of the

form \_Lxx, \_Exx, and \_Wxx) for GPE Devices are not within the \\_GPE namespace. They are children of the GPE Block device.

For example:

```
Device(GPE5) {
    Name(_HID, "ACPI0006")

    Method(_L02) { ... }
    Method(_E07) { ... }
    Method(_W04) { ... }
}
```

## 9.12 Module Device

This optional device is a container object that acts as a bus node in a namespace. It may contain child objects that are devices or buses. The module device is declared using the ACPI0004 hardware identifier (HID).

If the module device contains a \_CRS object, the “bus” described by this object is assumed to have these resources available for consumption by its child devices. If a \_CRS object is present, any resources not produced in the module device’s \_CRS object may not be allocated to child devices.

Providing a \_CRS object is undesirable in some module devices. For example, consider a module device used to describe an add-in board containing multiple host bridges without any shared resource decoding logic. In this case the resource ranges available to the host bridges are not controlled by any entity residing on the add-in board, implying that a \_CRS object in the associated module device would not describe any real feature of the underlying hardware. A module device must contain a \_CRS object if the device contains any PCI host bridge devices.

To account for cases like this, the system designer may optionally omit the module device’s \_CRS object. If no \_CRS object is present, OSPM will assume that the module device is a simple container object that does not produce the resources consumed by its child devices. In this case, OSPM will assign resources to the child devices as if they were direct children of the module device’s parent object.

For an example with a module device \_CRS object present, consider a Module Device containing three child memory devices. If the \_CRS object for the Module Device contains memory from 2 GB through 6 GB, then the child memory devices may only be assigned addresses within this range.

### Example:

```
Device (\_SB.NODO) {
    Name (_HID, "ACPI0004")      // Module device
    Name (_UID, 0)
    Name (_PRS, ResourceTemplate() {
        WordIO (
            ResourceProducer,
            MinFxed,      // _MIF
            MaxFxed...,   // _MAF
            0x0000,       // _GRA
            0x0000,       // _MIN
            0x7FFF,       // _MAX
            0x0,          // _TRA
    })
```

```

0x8000)      // _LEN
DWordMemory (
    ResourceProducer,, // For Main Memory + PCI
    MinNotFixed, // _MIF
    MaxNotFixed, // _MAF
    Cacheable, // _MEM
    ReadWrite, // _RW
    0xFFFFFFFF, // _GRA
    0x40000000, // _MIN
    0x7FFFFFFF, // _MAX
    0x0, // _TRA
    0x00000000) // _LEN
))
Method (_SRS, 1) { ... }
Method (_CRS, 0) { ... }

Device (MEMO) { // Main Memory (256MB module)
    Name (_HID, EISAID("PNPOC80"))
    Name (_UID, 0)
    Method (_STA, 0) { // If memory not present --> Return(0x00)
        // Else if memory is disabled --> Return(0x0D)
        // Else --> Return(0x0F)
    }
    Name (_PRS, ResourceTemplate () {
        DWordMemory (,,,
            Cacheable, // _MEM
            ReadWrite, // _RW
            0xFFFFFFFF, // _GRA
            0x40000000, // _MIN
            0x7FFFFFFF, // _MAX
            0x0, // _TRA
            0x10000000) // _LEN
    })
    Method (_CRS, 0) { ... }
    Method (_SRS, 1) { ... }
    Method (_DIS, 0) { ... }
}
Device (MEM1) { // Main Memory (512MB module)
    Name (_HID, EISAID("PNPOC80"))
    Name (_UID, 1)
    Method (_STA, 0) { // If memory not present --> Return(0x00)
        // Else if memory is disabled --> Return(0x0D)
        // Else --> Return(0x0F)
    }
    Name (_PRS, ResourceTemplate () {
        DWordMemory (,,,
            Cacheable, // _MEM
            ReadWrite, // _RW
            0x1FFFFFFF, // _GRA
            0x40000000, // _MIN
            0x7FFFFFFF, // _MAX

```

```

    0x0,      // _TRA
    0x20000000) // _LEN
})
Method (_CRS, 0) { ... }
Method (_SRS, 1) { ... }
Method (_DIS, 0) { ... }
}
Device (PCI0) { // PCI Root Bridge
    Name (_HID, EISAID("PNPOA03"))
    Name (_UID, 0)
    Name (_BBN, 0x00)
    Name (_PRS, ResourceTemplate () {
        WordBusNumber (
            ResourceProducer,
            MinFixed, // _MIF
            MaxFixed,, // _MAF
            0x00, // _GRA
            0x00, // _MIN
            0x7F, // _MAX
            0x0, // _TRA
            0x80) // _LEN
        WordIO (
            ResourceProducer,
            MinFixed, // _MIF
            MaxFixed,, // _MAF
            0x0000, // _GRA
            0x0000, // _MIN
            0x0CF7, // _MAX
            0x0, // _TRA
            0x0CF8) // _LEN
        WordIO (
            ResourceProducer,
            MinFixed, // _MIF
            MaxFixed,, // _MAF
            0x0000, // _GRA
            0x0D00, // _MIN
            0x7FFF, // _MAX
            0x0, // _TRA
            0x7300) // _LEN

        DWordMemory (
            ResourceProducer, ,
            MinNotFixed, // _MIF
            MaxNotFixed, // _MAF
            NonCacheable, // _MEM
            ReadWrite, // _RW
            0xFFFFFFFF, // _GRA
            0x40000000, // _MIN
            0x7FFFFFFF, // _MAX
            0x0, // _TRA
            0x00000000) // _LEN
    })
}

```

```

    })
Method (_CRS, 0) { ... }
Method (_SRS, 1) { ... }
}
}

```

## 9.13 Memory Devices

Memory devices allow a platform to convey dynamic properties of memory to OSPM and are required when a platform supports the addition or removal of memory while the system is active or when the platform supports memory bandwidth monitoring and reporting (see [Section 9.13.2](#), Memory Bandwidth Monitoring and Reporting). Memory devices may describe exactly the same physical memory that the System Address Map interfaces describe (see chapter 15, [System Address Map Interfaces](#)). They do not describe how that memory is, or has been, used. If a region of physical memory is marked in the System Address Map interface as AddressRangeReserved or AddressRangeNVS and it is also described in a memory device, then it is the responsibility of the OS to guarantee that the memory device is never disabled.

It is not necessary to describe all memory in the system with memory devices if there is some memory in the system that is static in nature. If, for instance, the memory that is used for the first 16 MB of system RAM cannot be ejected, inserted, or disabled, that memory may only be represented by the System Address Map interfaces. But if memory can be ejected, inserted, or disabled, or if the platform supports memory bandwidth monitoring and reporting, the memory must be represented by a memory device.

### 9.13.1 Address Decoding

Memory devices must provide a \_CRS object that describes the physical address space that the memory decodes. If the memory can decode alternative ranges in physical address space, the devices may also provide \_PRS, \_SRS and \_DIS objects. Other device objects may also apply if the device can be ejected.

### 9.13.2 Memory Bandwidth Monitoring and Reporting

During platform operation, an adverse condition external to the platform may arise whose remedy requires a reduction in the platform's available memory bandwidth. For example, a server management controller's detection of an adverse thermal condition or the need to reduce the total power consumption of platforms in the data center to stay within acceptable limits. Providing OSPM with knowledge of a platform induced reduction of memory bandwidth enables OSPM to provide more robust handling of the condition. The following sections describe objects OSPM uses to configure platform-based memory bandwidth monitoring and to ascertain available memory bandwidth when the platform performs memory bandwidth throttling.

#### 9.13.2.1 \_MBM (Memory Bandwidth Monitoring Data)

The optional \_MBM object provides memory bandwidth monitoring information for the memory device.

##### Arguments:

None

**Return Value:**

A **Package** containing memory device status information as described in [Table 9-290](#) below

**Return Value Information:**

\_MBM evaluation returns a package of the following format:

```
Package () {
    Revision,      // Integer
    WindowSize,    // Integer DWORD
    SamplingInterval, // Integer DWORD
    MaximumBandwidth, // Integer DWORD
    AverageBandwidth, // Integer DWORD
    LowBandwidth,   // Integer DWORD
    LowNotificationThreshold, // Integer DWORD
    HighNotificationThreshold // Integer DWORD
}
```

**Table 9-290 MBM Package Details**

Field	Format	Description
Revision	Integer	Current revision is: 0
Window Size	Integer (DWORD)	This field indicates the size of the averaging window (in seconds) that the platform uses to report average bandwidth.
Sampling Interval	Integer (DWORD)	This field indicates the sampling interval (in seconds) that the platform uses to record bandwidth during the averaging window.
Maximum Bandwidth	Integer (DWORD)	This field indicates the maximum memory bandwidth (in megabytes per second) for the memory described by this memory device.
Average Bandwidth	Integer (DWORD)	This field indicates the moving average memory bandwidth (in percent) for the averaging window.
Low Bandwidth	Integer (DWORD)	This field indicates the lowest memory bandwidth (in percent) recorded for the averaging window.
Low Notification Threshold	Integer (DWORD)	The platform to issues a Notify (0x80) on the memory device when the moving average memory bandwidth value (in percent) falls below the value indicated by this field.
High Notification Threshold	Integer (DWORD)	The platform to issues a Notify (0x81) on the memory device when the moving average memory bandwidth value (in percent) increases to or exceeds the value indicated by this field.

**9.13.2.2 \_MSM (Memory Set Monitoring)**

This optional object sets the memory bandwidth monitoring parameters described in [Table 9-290](#).

**Arguments: (4)**

Arg0 – WindowSize (**Integer(DWORD)**): indicates the window size in seconds.

Arg1 – SamplingInterval (**Integer(DWORD)**): indicates the sampling interval in seconds.

Arg2 – LowNotificationThreshold (**Integer(DWORD)**): indicates the low notification threshold in percent. Must be <= HighNotificationThreshold.

Arg3 – HighNotificationThreshold (**Integer(DWORD)**): indicates the high notification threshold in percent. Must be >= LowNotificationThreshold.

#### **Return Value:**

An **Integer (DWORD)** containing a bit encoded result code as follows:

0x00000000 – Succeeded to set all memory bandwidth monitoring parameters.

Non-Zero – At least one memory bandwidth monitoring parameter value could not be set as follows:

**Table 9-291 MSM Result Encoding**

Bits	Definition
0	If clear indicates WindowSize was set successfully. If set, indicates invalid WindowSize argument.
1	If clear indicates SamplingInterval was set successfully. If set, indicates invalid SamplingInterval argument.
2	If clear indicates LowNotificationThreshold was set successfully. If set, indicates invalid LowNotificationThreshold argument.
3	If clear indicates HighNotificationThreshold was set successfully. If set, indicates invalid HighNotificationThreshold argument.
31:4	<i>Reserved</i> (must be 0)

### **9.13.3 \_OSC Definition for Memory Device**

OSPM evaluates \_OSC under the Memory Device to convey OSPM capabilities to the platform. Argument definitions are as follows:

#### **Arguments: (4)**

Arg0 – UUID (**Buffer**): **03B19910-F473-11DD-87AF-0800200C9A66**

Arg1 – Revision ID (**Integer**): 1

Arg2 – Count of Entries in Arg3 (**Integer**): 2

Arg3 – DWORD capabilities (**Buffer**):

- First DWORD: as described in [Section 6.2.10](#)
- Second DWORD: See [Table 6-231](#).

#### **Return Value:**

A **Buffer** containing platform capabilities

**Table 9-292 Memory Device \_OSC Capabilities DWORD number 2**

Bits	Field Name	Definition
------	------------	------------

0	Memory Bandwidth Change Notifications	This bit is set if OSPM supports the processing of memory bandwidth change notifications. If the platform supports the ability to issue a notification when Memory Bandwidth changes, it may only do so after _OSC has been evaluated with this bit set. _OSC evaluation with this bit clear will cause the platform to cease issuing notifications if previously enabled.
31:1		<i>Reserved</i> (must be 0)

### Return Value Information

Capabilities Buffer (Buffer) – The platform acknowledges the Capabilities Buffer by returning a buffer of DWORDs of the same length. Set bits indicate acknowledgement and cleared bits indicate that the platform does not support the capability.

### 9.13.4 Example: Memory Device

```
Scope (\_SB){
  Device (MEMO) {
    Name (_HID, EISAID ("PNP0C80"))
    Name (_CRS, ResourceTemplate () {
      QWordMemory
      ResourceConsumer,
      ,
      MinFixed,
      MaxFixed,
      Cacheable,
      ReadWrite,
      0xFFFFFFF,
      0x10000000,
      0x30000000,
      0,
      ..
    })
  }
}
```

## 9.14 \_UPC (USB Port Capabilities)

This optional object is a method that allows the platform to communicate to the operating system, certain USB port capabilities that are not provided for through current USB host bus adaptor specifications (e.g. UHCI, OHCI and EHCI). If implemented by the platform, this object will be present for each USB port (child) on a given USB host bus adaptor; operating system software can examine these characteristics at boot time in order to gain knowledge about the system's USB topology, available USB ports, etc. This method is applicable to USB root hub ports as well as ports that are implemented through integrated USB hubs.

### Arguments:

None

### Return Value:

A Package as described below

**Return Value Information:**

```

Package {
    Connectable // Integer (BYTE)
    Type // Integer (BYTE)
    Reserved0 // Integer
    Reserved1 // Integer)
}

```

**Table 9-293 UPC Return Package Values**

Element	Object Type	Description
Connectable	Integer (BYTE)	If this value is non-zero, then the port is connectable. If this value is zero, then the port is not connectable.
Type	Integer (BYTE)	Specifies the host connector type. It is ignored by OSPM if the port is not user visible: 0x00: Type 'A' connector 0x01: Mini-AB connector 0x02: ExpressCard 0x03: USB 3 Standard-A connector 0x04: USB 3 Standard-B connector 0x05: USB 3 Micro-B connector 0x06: USB 3 Micro-AB connector 0x07: USB 3 Power-B connector 0x08: Type C connector - USB2-only 0x09: Type C connector - USB2 and SS with Switch 0x0A: Type C connector - USB2 and SS without Switch 0x0B–0xFE: Reserved 0xFF: Proprietary connector
Reserved0	Integer	This value is reserved for future use and must be zero.
Reserved1	Integer	This value is reserved for future use and must be zero.

**Additional Notes:**

The definition of a 'connectable' port is dependent upon the implementation of the USB port within a particular platform. For example,

- If a USB port is user visible (as indicated by the \_PLD object) and connectable, then an end user can freely connect and disconnect USB devices to the USB port.
- If a USB port is not user visible and is connectable, then an end user cannot freely connect and disconnect USB devices to the USB port. A USB device that is directly "hard-wired" to a USB port is an example of a USB port that is not user visible and is connectable.
- If a USB port is not user visible and is not connectable, then the USB port is physically implemented by the USB host controller, but is not being used by the platform and therefore cannot be accessed by an end user.

A USB port cannot be specified as both visible and not connectable.

The pins of a Type-C connector support one USB2 signal pair (D+/D-) and two SuperSpeed signal pairs (SSTXp1/SSTXn1 and SSRXp2/SSRXn2). The use of two SS signal pairs allows the CC wire and USB SuperSpeed data bus wires to be used for signaling within the cable track without regard to the orientation and twist of the cable.

### Type C connector - USB2 USB2-only receptacles

These only implement the USB2 signal pair, and do not implement the SS signal pairs.

### Type C connector - USB2 and SS with Switch receptacles

These implement the USB2 signal pair, and a Functional Switch with a physical Multiplexer that is used to dynamically connect one of the two receptacle SuperSpeed signal pairs to a single USB Host Controller port as function of the Type-C plug orientation.

### Type C connector - USB2 and SS without Switch receptacles

These implement the USB2 signal pair and a Functional Switch by connecting each receptacle SuperSpeed signal pair to a separate USB Host Controller port.

**Note:** Refer to section 4.5.1.1 in the USB Type-C Specification for more information.

### Example

The following is an example of a port characteristics object implemented for a USB host controller's root hub where:

- Three Ports are implemented; Port 1 is not user visible/not connectable and Ports 2 and 3 are user visible and connectable.
- Port 2 is located on the back panel
- Port 3 has an integrated 2 port hub. Note that because this port hosts an integrated hub, it is therefore not sharable with another host controller (e.g. If the integrated hub is a USB2.0 hub, the port can never be shared with a USB1.1 companion controller).
- The ports available through the embedded hub are located on the front panel and are adjacent to one another.

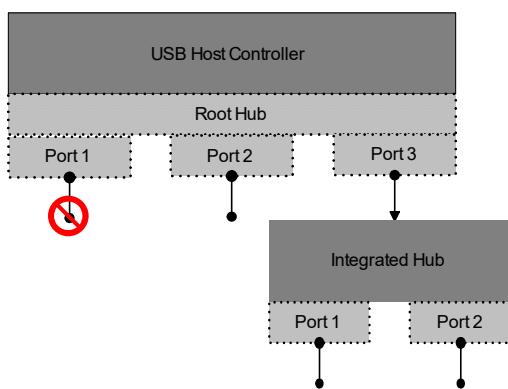


Figure 9-50 USB ports

```

//  

// Root hub device for this host controller. This controller implements 3 root hub  

ports.
  
```

```

//  

Device( RHUB ) {  

    Name( _ADR, 0x00000000) // Value of 0 is reserved for root HUB  

    // Root hub, port 1  

Device( PRT1 ) {  

    // Address object for port 1. This value must be 1  

    Name( _ADR, 0x00000001)  

    // USB port capabilities object. This object returns the system  

    // specific USB port configuration information for port number 1  

    // Because this port is not connectable it is assumed to be not visible.  

    // Therefore a _PLD descriptor is not required.  

    Name( _UPC, Package(){  

        0x00,           // Port is not connectable  

        0xFF,           // Connector type (N/A for non-visible ports)  

        0x00000000,     // Reserved 0 – must be zero  

        0x00000000})   // Reserved 1 – must be zero  

    }               // Device( PRT1 )

    //  

    // Root Hub, Port 2
    //  

Device( PRT2 ) {  

    // Address object for port 2. This value must be 2  

    Name( _ADR, 0x00000002)  

    Name( _UPC, Package(){  

        0xFF,           // Port is connectable  

        0x00,           // Connector type – Type 'A'  

        0x00000000,     // Reserved 0 – must be zero  

        0x00000000})   // Reserved 1 – must be zero

    // provide physical port location info
    Name( _PLD, Package(1) {
        Buffer(0x14) {
            0x82, 0x00, 0x00, 0x00, // Revision 2, Ignore color
            // Color (ignored), width and height not
            0x00, 0x00, 0x00, 0x00, // required as this is a standard USB 'A' type
            // connector

            0x69, 0x0c, 0x00, 0x00, // User visible, Back panel, Vertical
            // Center, shape = vert. rectangle
            0x03, 0x00, 0x00, 0x00, // ejectable, requires OPSM eject assistance
            0xFF, 0xFF, 0xFF, 0xFF}}) // Vert. and Horiz. Offsets not supplied
    }               // Device( PRT2 )

    //  

    // Root Hub, Port 3
    //  

Device( PRT3 ) {  

    // This device is the integrated USB hub.  

    // Address object for port 3. This value must be 3
}

```

```

Name(_ADR, 0x00000003)
// Because this port is not connectable it is assumed to be not visible.
// Therefore a _PLD descriptor is not required.
Name( _UPC, Package(){
    0xFF,          // Port is connectable
    0xFF,          // Connector type (N/A for non-visible ports)
    0x00000000,    // Reserved 0 – must be zero
    0x00000000})   // Reserved 1 - must be zero

    //
    // Integrated hub, port 1
    //
Device( PRT1) {
// Address object for the port. Because the port is implemented on
// integrated hub port #1, this value must be 1
Name( _ADR, 0x00000001)
// USB port characteristics object. This object returns the system
// specific USB port configuration information for integrated hub port
// number 1
Name( _UPC, Package(){
    0xFF,          // Port is connectable
    0x00,          // Connector type – Type 'A'
    0x00000000,    // Reserved 0 – must be zero
    0x00000000})   // Reserved 1 – must be zero

        // provide physical port location info
Name( _PLD, Package(1) {
    Buffer(0x14) {
        0x82, 0x00, 0x00, 0x00,,  // Revision 2, Ignore color
        // Color (ignored), width and height not
        0x00, 0x00, 0x00, 0x00,  // required as this is a standard USB 'A' type
        // connector

        0xa1, 0x10, 0x00, 0x00,      // User visible, front panel, Vertical
        // lower, horz. Left, shape = horz. rectangle
        0x03, 0x00, 0x00, 0x00,  // ejectable, requires OPSM eject assistance
        0xFF, 0xFF, 0xFF, 0xFF}}) // Vert. and Horiz. Offsets not supplied
}      // Device( PRT1)

    //
    // Integrated hub, port 2
    //
Device( PRT2) {
// Address object for the port. Because the port is implemented on
// integrated hub port #2, this value must be 2
Name( _ADR, 0x00000002)
// USB port characteristics object. This object returns the system
// specific USB port configuration information for integrated hub port
// number 2
Name( _UPC, Package(){
    0xFF,          // Port is connectable

```

```

0x00,      // Connector type – Type 'A'
0x00000000,    // Reserved 0 – must be zero
0x00000000}) // Reserved 1 – must be zero
Name( _PLD, Package(1) {
  Buffer(0x14) {
    0x82, 0x00, 0x00, 0x00, // Revision 2, Ignore color
    // Color (ignored), width and height not
    0x00, 0x00, 0x00, 0x00, // required as this is a standard USB 'A' type
    // connector

    0xa1, 0x12, 0x00, 0x00, // User visible, front panel, Vertical
    // Lower, horz. right, shape = horz. rectangle
    0x03, 0x00, 0x00, 0x00, // ejectable, requires OPSM eject assistance
    0xFF, 0xFF, 0xFF, 0xFF}) // Vert. and Hori z. Offsets not supplied
  }          // Device( PRT2)
}            // Device( PRT3)
}            // Device( RHUB)

```

### 9.14.1 USB 2.0 Host Controllers and \_UPC and \_PLD

Platforms implementing USB2.0 host controllers that consist of one or more USB1.1 compliant companion controllers (e.g. UHCI or OHCI) must implement a \_UPC and a \_PLD object for each port USB port that can be routed between the EHCI host controller and its associated companion controller. This is required because a USB Port Capabilities object implemented for a port that is a child of an EHCI host controller may not be available if the OSPM disables the parent host controller. For example, if root port 1 on an EHCI host controller is routable to root port 1 on its companion controller, then the namespace must provide a \_UPC and a \_PLD object under each host controller's associated port 1 child object.

#### Example

```

Scope( \_SB) {
...
Device(PCIO) {
...
  // Host controller (EHCI)
Device( USBO) {
  // PCI device#/Function# for this HC. Encoded as specified in the ACPI
  // specification
  Name(_ADR, 0xyyyyyyyy)
  // Root hub device for this HC #1.
Device(RHUB) {
  Name(_ADR, 0x00000000) // must be zero for USB root hub
  // Root hub, port 1
Device(PRT1) {
  Name(_ADR, 0x00000001)

  // USB port configuration object. This object returns the system
  // specific USB port configuration information for port number 1
  // Must match the _UPC declaration for USB1.RHUB.PRT1 as it is this
  // host controller's companion
  Name( _UPC, Package()){

```

```

0xFF,          // Port is connectable
0x00,          // Connector type - Type 'A'
0x00000000,    // Reserved 0 - must be zero
0x00000000})   // Reserved 1 - must be zero

// provide physical port location info for port 1
// Must match the _UPC declaration for USB1.RHUB.PRT1 as it is this
// host controller's companion
Name( _PLD, Package(1) {
    Buffer(0x14) {
        0x82, 0x00, 0x00, 0x00, // Revision 2, Ignore color
        // Color (ignored), width and height not
        0x00, 0x00, 0x00, 0x00, // required as this is a standard USB 'A'
        // type connector

        0xa1, 0x10, 0x00, 0x00, // User visible, front panel, Vertical
        // lower, horz. Left, shape = horz. Rect.
        0x03, 0x00, 0x00, 0x00, // ejectable, needs OPSM eject assistance
        0xFF, 0xFF, 0xFF})} // Vert. and Horiz. Offsets not supplied

}      // Device( PRT1)
//
// Define other ports, control methods, etc
...
...
}      // Device( RHUB)
}      // Device( USBO)

// Companion Host controller (OHCI or UHCI)
Device( USB1) {
    // PCI device#/Function# for this HC. Encoded as specified in the ACPI
    // specification
    Name(_ADR, 0xyyyyzzzz)
    // Root hub device for this HC #1.
    Device(RHUB) {
        Name(_ADR, 0x00000000) // must be zero for USB root hub
        // Root hub, port 1
    Device(PRT1) {
        Name(_ADR, 0x00000001)
        // USB port configuration object. This object returns the system
        // specific USB port configuration information for port number 1
        // Must match the _UPC declaration for USBO.RHUB.PRT1 as this host
        // controller is a companion to the EHCI host controller
        // provide physical port location info for port 1
        Name( _UPC, Package()){
            0xFF,          // Port is connectable
            0x00,          // Connector type - Type 'A'
            0x00000000,    // Reserved 0 - must be zero
            0x00000000})   // Reserved 1 - must be zero

        // Must match the _PLD declaration for USBO.RHUB.PRT1 as this host
    }
}

```

```

// controller is a companion to the EHCI host controller
Name( _PLD, Package(1) {
    Buffer( 0x14) {
        0x82, 0x00, 0x00, 0x00, // Revision 2, Ignore color
        // Color (ignored), width and height not
        0x00, 0x00, 0x00, 0x00, // required as this is a standard USB 'A'
        // type connector

        0xa1, 0x10, 0x00, 0x00, // User visible, front panel, Vertical
        // lower, horz. Left, shape = horz. Rect.
        0x03, 0x00, 0x00, 0x00, // ejectable, requires OPSM eject assistance
        0xFF, 0xFF, 0xFF, 0xFF})} // Vert. and Horiz. Offsets not supplied
} // Device( PRT1)
//
// Define other ports, control methods, etc
...
...
} // Device( RHUB)
} // Device( USB1)
} // Device( PCIO)
} // Scope( _\SB)

```

## 9.15 PC/AT RTC/CMOS Devices

Most computers contain an RTC device which also contains battery-backed RAM represented as a linear array of bytes. There is a standard mechanism for accessing the first 64 bytes of non-volatile RAM in devices that are compatible with the Motorola RTC/CMOS device that was in the IBM PC/AT. Newer devices usually contain at least 128 bytes of battery-backed RAM. New PNP IDs were assigned for these devices.

Certain bytes within the battery-backed RAM have pre-defined values. In particular, the time, date, month, year, century, alarm time and RTC periodic interrupt are read-only.

### 9.15.1 PC/AT-compatible RTC/CMOS Devices (PNP0B00)

The standard PC/AT-compatible RTC/CMOS device is denoted by the PnP ID PNP0B00. If an ACPI platform uses a device that is compatible with this device, it may describe this in its ACPI namespace. ASL may then read and write this as a linear 64-byte array. If PNP0B00 is used, ASL and ACPI operating systems may not assume that any extensions to the CMOS exist.

**Note:** This means that the CENTURY field in the Fixed ACPI Description Table may only contain values between 0 and 63.

#### Example:

This is an example of how this device could be described:

```

Device (RTC0) {
    Name(_HID, EISAID("PNP0B00"))

    Name (_FIX, Package(1) {

```

```

EI SAI D("PNP0B00") }
)
Name(_CRS, ResourceTemplate() {
    IO(Decode16, 0x70, 0x70, 0x1, 0x2)
}

Operati onRegi on(CMS1, SystemCMOS, 0, 0x40)

Fi el d(CMS1, ByteAcc, NoLock, Preserve) {
    AccessAs(ByteAcc, 0),
    CM00, 8,
    , 256,
    CM01, 8,
    CM02, 16,
    , 216,
    CM03, 8
}

```

### 9.15.2 Intel PIIX4-compatible RTC/CMOS Devices (PNP0B01)

The Intel PIIX4 contains an RTC/CMOS device that is compatible with the one in the PC/AT. But it contains 256 bytes of non-volatile RAM. The first 64 bytes are accessed via the same mechanism as the 64 bytes in the PC/AT. The upper 192 bytes are accessed through an interface that is only used on Intel chips. (See [82371AB PCI-TO-ISA / IDECELERATOR \(PIIX4\)](#) for details.)

Any platform containing this device or one that is compatible with it may use the PNP ID PNP0B01. This will allow an ACPI-compatible OS to recognize the RTC/CMOS device as using the programming interface of the PIIX4. Thus, the array of bytes that ASL can read and write with this device is 256 bytes long.

**Note:** *This also means that the CENTURY field in the Fixed ACPI Description Table may contain values between 0 and 255.*

#### Example:

This is an example of how this device could be described:

```

Device (RTCO) {
    Name(_HID, EI SAI D("PNP0B01"))

    Name (_FIX, Package(1) {
        EI SAI D("PNP0B01")
    )
    Name(_CRS, ResourceTemplate() {
        IO(Decode16, 0x70, 0x70, 0x1, 0x2)
        IO(Decode16, 0x72, 0x72, 0x1, 0x2)
    }

    Operati onRegi on(CMS1, SystemCMOS, 0, 0x100)

    Fi el d(CMS1, ByteAcc, NoLock, Preserve) {
        AccessAs(ByteAcc, 0),
        CM00, 8,

```

```

, 256,
CM01, 8,
CM02, 16,
, 224,
CM03, 8,
, 184,
CENT, 8
}

```

### 9.15.3 Dallas Semiconductor-compatible RTC/CMOS Devices (PNP0B02)

Dallas Semiconductor RTC/CMOS devices are compatible with the one in the PC/AT, but they contain 256 bytes of non-volatile RAM or more. The first 64 bytes are accessed via the same mechanism as the 64 bytes in the PC/AT. The upper bytes are accessed through an interface that is only used on Dallas Semiconductor chips.

Any platform containing this device or one that is compatible with it may use the PNP ID PNP0B02. This will allow an ACPI-compatible OS to recognize the RTC/CMOS device as using the Dallas Semiconductor programming interface. Thus, the array of bytes that ASL can read and write with this device is 256 bytes long.

Description of these devices is similar to the PIIX4 example above, and the CENTURY field of the FADT may also contain values between 0 and 255.

## 9.16 User Presence Detection Device

The following section illustrates the operation and definition of the control method-based User Presence Detection (UPD) device.

The user presence detection device can optionally support power management objects (e.g. \_PS0, \_PS3) to allow the OS to manage the device's power consumption.

The Plug and Play ID of an ACPI control method user presence detection device is ACPI000F.

**Table 9-294 User Presence Detection Device**

Object	Description
_UPD	The current user presence detection reading. [Required]
_UPP	User presence detection polling frequency in tenths of seconds. [Optional]

### 9.16.1 \_UPD (User Presence Detect)

This control method returns the user presence detection reading, indicating whether or not the user is currently present from the perspective of this sensor. Three states are currently defined for UPD sensor readings: *absent*, *present*, and *unknown*, represented by the values 0x00, 0x01, and 0xFF respectively. The unknown state is used to convey that the sensor is currently unable to determine user presence due to some environmental or other transient factor. All other values are reserved.

**Arguments:**

None

**Return Value:**

An **Integer** containing the user presence code:

0x00 –*Absent*: A user is *not* currently detected by this sensor.

0x01 –*Present*: A user is currently detected by this sensor.

0xFF –*Unknown*: The sensor is currently unable to determine if a user is present or absent.

## 9.16.2 \_UPP (User Presence Polling)

This optional object evaluates to a *recommended* polling frequency (in tenths of seconds) for this user presence sensor. A value of zero – or the absence of this object when other UPD objects are defined – indicates that the OS does not need to poll the sensor in order to detect meaningful changes in user presence (the hardware is capable of generating asynchronous notifications).

**Arguments:**

None

**Return Value:**

An **Integer** containing the recommended polling frequency in tenths of seconds. A value of zero indicates that polling is not required.

The use of polling is allowed but strongly discouraged by this specification. OEMs should design systems that asynchronously notify OSPM whenever a meaningful change in user presence occurs—relieving the OS of the overhead associated with polling.

This value is specified as tenths of seconds. For example, a value of 10 would be used to indicate a 1 second polling frequency. As this is a recommended value, OSPM will consider other factors when determining the actual polling frequency to use.

## 9.16.3 User Presence Sensor Events

To communicate changes in user presence to OSPM, AML code should issue a **Notify**(*upd\_device*, 0x80) whenever a change in user presence has occurred. The OS receives this notification and calls the \_UPD control method to determine the current user presence status.

UPD notifications should be generated whenever a transition occurs between one of the user presence states (absent, present, or unknown) – but at a level of granularity that provides an appropriate response without overly taxing the system with unnecessary interrupts.

## 9.17 I/O APIC Device

This optional device describes a discrete I/O APIC device that is not bus enumerated (e.g., as a PCI device). Describing such a device in the ACPI namespace is only necessary if hot plug of this device is supported. If hot plug of this device is not supported, an MADT I/O APIC ([Section 5.2.12.3](#), “I/O APIC Structure”) entry or I/O SAPIC ([Section 5.2.12.9](#), “I/O SAPIC Structure”) entry is sufficient to describe this device.

An I/O APIC device is an I/O unit that complies with either of the APIC interrupt models supported by ACPI. These interrupt models are described [Section 5.2.12.3, "I/O APIC Structure"](#) and [Section 5.2.12.9, "I/O SAPIC Structure"](#). If the device is an I/O unit that complies with the APIC interrupt model, it is declared using the ACPI000A identifier. If this device is an I/O unit that complies with the SAPIC interrupt model, it is declared using the ACPI000B identifier. If this device complies with both the APIC and SAPIC interrupt models (I/OxAPIC), it is declared using the ACPI0009 identifier.

An I/O APIC device declared using any of the above identifiers must contain a \_GSB object as defined in [Section 6.2.7, "\\_GSB \(Global System Interrupt Base\)"](#) to report its Global System Interrupt Base. It must also contain a \_CRS object that reports the base address of the I/O APIC device. The \_CRS object is required to contain only one resource, a memory resource pointing to the I/O APIC register base.

**Note:** Because the \_CRS and \_GSB methods provide sufficient information, it is not necessary to provide \_MAT under an I/O APIC device.

For an I/O APIC device that is described both in the MADT and in the namespace, the base address described in the MADT entry must be the same as the base address in the IO APIC device \_CRS at boot time. OSPM must use the information from the MADT until such a time as the \_CRS and \_GSB methods in the namespace device can be processed. At this point OSPM must ignore the MADT entry.

## 9.18 Time and Alarm Device

The following sections define the operation and definition of the optional control method-based Time and Alarm device, which provides a hardware independent abstraction and a more robust alternative to the Real Time Clock (RTC). See [Section 9.15, "PC/AT RTC/CMOS Devices"](#).

The time capabilities of the time and alarm device maintain the time of day information across platform power transitions, and keep track of time even when the platform is turned off. It is expected that the time on the platform will be consistent when different firmware interfaces are used to query the platform time. For example, a UEFI call to get the time should return the same time as if the OSPM used the time and alarm device at the same point in time.

The Time and Alarm device can optionally support power management objects (e.g. \_PS0, \_PS3) to allow the OS to manage the device's power consumption.

The Time and Alarm device must support control method \_PRW for being enabled to wake up the system. It might support \_DSW or \_PSW to provide the functionality to enable or disable the device's ability to wake a sleep system. On Hardware-reduced ACPI platforms, \_PRW is only required if the device depends on ACPI-defined power resources. \_PRW's *GPEInfo* structure is ignored by OSPM. For enabling Wakeup, \_DSW and \_SxW are used, and the wakeup event is signaled by the GPIO-signaled ACPI event mechanism ([Section 5.6.5](#)).

The Plug and Play ID of the Time and Wake Alarm device is ACPI000E.

**Table 9-295 Time and Alarm Device**

Object	Description
_GCP	Get the capabilities of the time and alarm device
_GRT	Get the Real time
_SRT	Set the Real time

_GWS	Get Wake status
_CWS	Clear Wake Status
_STP	Sets expired timer wake policy for the specified timer.
_STV	Sets the value in the specified timer.
_TIP	Returns the current expired timer policy setting of the specified timer.
_TIV	Returns the remaining time of the specified timer.

## 9.18.1 Overview


The Time and Alarm device provides an alternative to the real time clock (RTC), which is defined as a fixed feature hardware device. The wake timers allow the system to transition from the S3 (or optionally S4/S5) state to S0 state after a time period elapses. In comparison with the Real Time Clock (RTC) Alarm, the Time and Alarm device provides a larger scale of flexibility in the operation of the wake timers, and allows the implementation of the time source to be abstracted from the OSPM.

Time and Alarm device provides the OSPM with a firmware abstraction of time and alarm services that can be applicable to a variety of hardware designs. The methods for setting and getting real time provide an alternative to the (RTC).

Time and Alarm devices that implement AC/DC wake service contain two programmable timers that can be configured to wake the system depending on the platform's current power source (AC or DC) when the timers expire. The two timers, which are referred to as the AC timer and the DC timer, are independent in that they are individually programmable and applicable without interfering each other. Each of the timers can be programmed with the number of seconds to elapse from the time the timer is programmed until a wake is requested. When a timer expires, the Time and Alarm device decides whether to wake the system based on the current power source. If the current power source is consistent with the timer type that expired, a wake signal will be asserted. Otherwise, the wake signal will not be asserted.

Time and Alarm devices that implement the AC only (power independent) wake contain one programmable timer that can be configured to wake up the system regardless of the platform's power source when the timer expires. To simplify the programming interface the AC wake will use the AC timer portion of the AC/DC wake; writes to the DC timer when AC only wake is supported will be ignored.

To simplify the programming interface for the time and alarm device, timer expiration events will persist. This means that if the OSPM programs a wake timer that expires before the OSPM completes the transition into S3 (or S4/S5 if supported) the time and alarm device will wake the system immediately after the OSPM completes the transition. [Figure 9-52](#) illustrates this behavior.

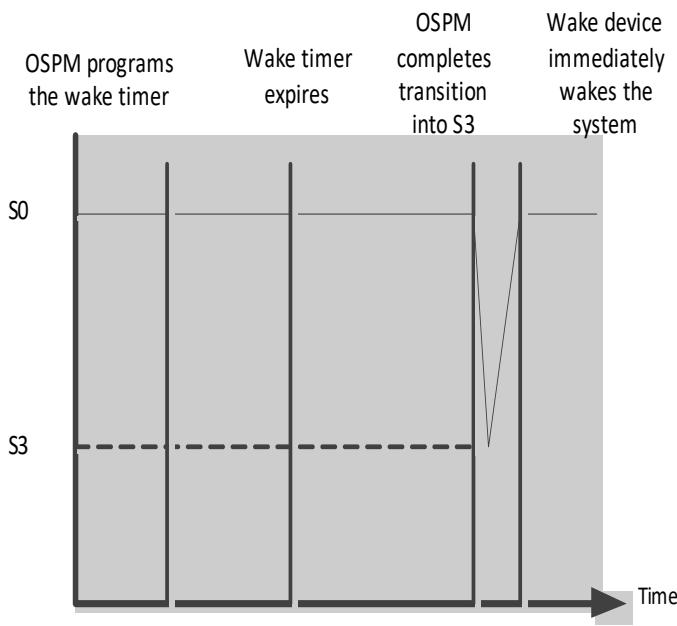


**Figure 9-51 Persistence of expired timer events**

The time and alarm device will provide the OSPM with an interface to query the status of the wake timers and discover what timers have expired. This interface enables the OSPM to discover the wake source. The status of wake timers can be reset by setting the wake alarm; the OSPM may clear the alarm status using the clear wake status method. All expired wake timer must be cleared if the OSPM requires the platform to stay in S3 (S4/S5), otherwise the expired timers will immediately wake up the system.

For the AC/DC wake services, and in case the current power source is inconsistent with the timer type that expires, an expired timer wake policy value, in units of seconds, is defined that enables the time and alarm device to wake the system when the power source corresponding to the expired timer becomes active (wake either immediately, after some time period, or never). The expired timer wake policy is applicable only on devices that support AC/DC wake and only when the timer expires and the power source is not consistent with the timer type. The expired timer policy is applied in conjunction with expired timer persistence described earlier.


For example, if a mobile platform programs the AC timer to be 2 hours long and DC timer to be 4 hours long and then transitions from the S0 state to S3 state at 1:00 AM, the AC timer is set to expire at 3:00 AM and the DC timer is set to expire at 5:00 AM. For the AC Timer, a expired timer wake policy value is programmed as 60 seconds.

If the platform is unplugged from AC power at 1:40 AM and remains unplugged, the Time and Alarm Device will not wake up the system at 3:00 AM. If the platform remains on DC power until 5:00 AM when the DC timer expires, a wake signal will then be asserted. The following graph illustrates the above example.

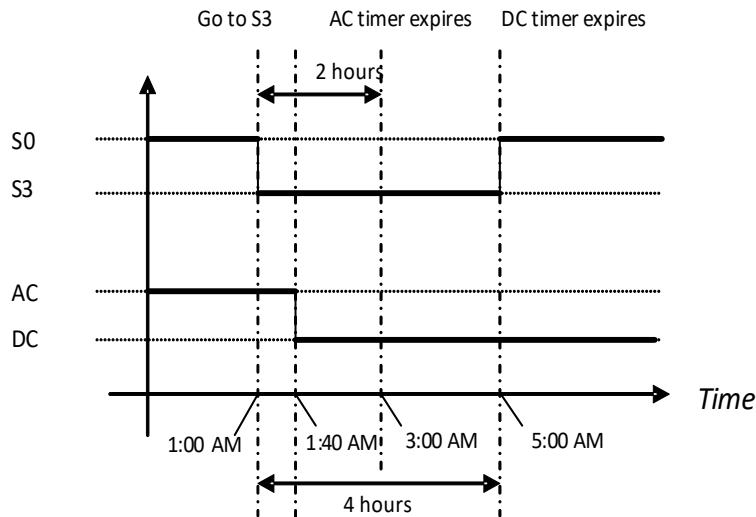

**Figure 9-52 System transitions with WakeAlarm -- Timer**

If the AC power is plugged in again at 4:00 AM, then the system will be woken up at 4:01 AM due to the AC expired timer wake policy value setting. The following graph illustrates this.

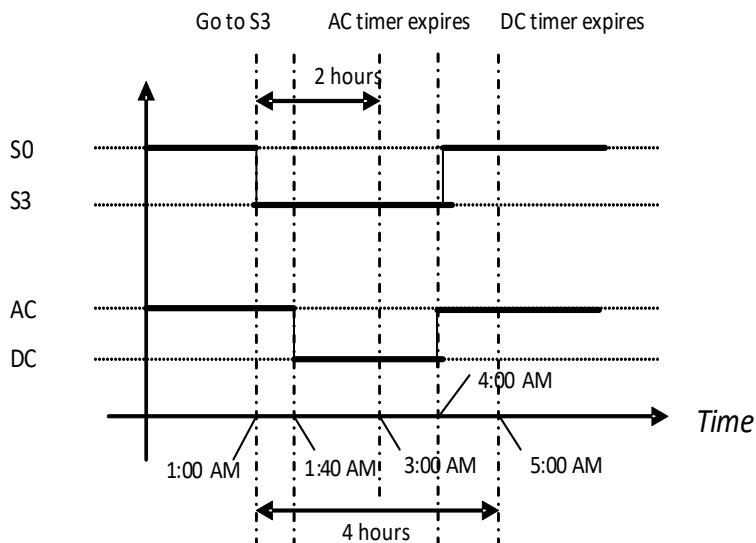

**Figure 9-53 System transitions with WakeAlarm -- Policy**

The Time and Alarm device can support a range of services, the OSPM evaluates the \_GCP object to get the supported capabilities of the device. If the capabilities indicate that the device supports time services, the OSPM evaluates the \_GRT and \_SRT objects to get and set time respectively.

If alarm services are supported by the device, the OSPM evaluates the \_STV object to program both the AC and DC timer values. The values, which are in units of seconds, indicate the elapsed time before the timer expires. OSPM evaluates the \_TIV object to read the current AC and DC timer values (seconds remaining until expiration).

OSPM evaluates the \_STP object to set timer policies for both the AC and DC timers. OSPM reads the current timer policy by evaluating the \_TIP object, which return policy settings for both the AC and DC timer.

The OSPM evaluates the \_GWS object to identify expired timers that may have waked the platform. The OSPM must evaluate the \_CWS object to clear any expired timer events that can prevent the system from performing a sleep transition according the expired timer wake policy, and the expired timer persistence described above.

The Time and Alarm device, if implemented with wake support, must support waking up the system from S3. Waking from S4/S5 support is optional.

### **9.18.2 \_GCP (Get Capability)**

This object is required and provides the OSPM with a bit mask of the device capabilities. The device can implement the time function in addition to the wake function. The capabilities bitmask will indicate to the OSPM what support is implemented. If the platform implements both AC and DC timers then it is capable of waking up based on the power source.

**Arguments: (0)**

**Return Value:**

A 32-bit integer containing a result bitmask as follows:

- Bit [0] - 1 = AC wake implemented, 0 = not supported
- Bit [1] - 1 = DC wake implemented, 0 = not supported
- Bit [2] - 1 = Get/Set real time features implemented, 0 = not supported
- Bit [3] - 1 = Real time accuracy in milliseconds, 0 = Real time accuracy in seconds
- Bit [4] - 1 = \_GWS returns correct values for wakes from S4/S5 caused by timer. 0 = not supported
- Bit [5] - 1 = Wake supported from S4 on AC, 0 = Wake not supported from S4 on AC
- Bit [6] - 1 = Wake supported from S5 on AC, 0 = Wake not supported from S5 on AC
- Bit [7] - 1 = Wake supported from S4 on DC, 0 = Wake not supported from S4 on DC
- Bit [8] - 1 = Wake supported from S5 on DC, 0 = Wake not supported from S5 on DC
- Bit [9] to Bit [31] are reserved and must be 0.

### **9.18.3 \_GRT (Get Real Time)**

This object is required if the capabilities bit 2 is set to 1. The OSPM can use this object to get time. The return value is a buffer containing the time information as described below.

**Arguments: (0)**

**Return Value:**

A buffer containing the time information, in the following format

```
Buffer(){
WORD Year;           // 1900 - 9999
BYTE Month;          // 1 - 12
BYTE Day;            // 1 - 31
BYTE Hour;           // 0 - 23
BYTE Minute;         // 0 - 59
BYTE Second;         // 0 - 59
BYTE Valid;          // 0 - Time is not valid (request failed); 1 - Time is valid
WORD milliseconds;   // 1-1000
WORD TimeZone;       // -1440 to 1440 or 2047 (unspecified)
BYTE Daylight;
BYTE Pad2[3];         // Reserved, must be zero
}
```

### 9.18.4 \_SRT (Set Real Time)

This object is required if the capabilities bit 2 is set to 1. The OSPM can use this object to set the time. The argument is a buffer containing the time information, as defined above.

#### Arguments: (1)

A buffer containing the time information, in the following format:

```
Buffer(){
WORD Year;           // 1900 - 9999
BYTE Month;          // 1 - 12
BYTE Day;            // 1 - 31
BYTE Hour;           // 0 - 23
BYTE Minute;         // 0 - 59
BYTE Second;         // 0 - 59
BYTE Pad1;
WORD milliseconds;   // 1-1000
WORD TimeZone;       // -1440 to 1440 or 2047 (unspecified)
BYTE Daylight;
BYTE Pad2[3];         // Reserved, must be zero
}
```

#### Return Value:

An Integer:

0 - success

0xFFFFFFFF- Failed

**Note:** Time is maintained using a battery backed time device (e.g. a real time clock)

**Note:** The time will always be local time; the time zone value can be used to determine the offset from UTC.

**Note:** Time zone field is the number of minutes that the local time lags behind the UTC time. (i.e. time zone = UTC - local time). The time zone is in 2's complement format.

**Note:** Time zone value of 2047, means that time zone value is not specified, and no relation to UTC can be inferred.

**Note:** Daylight is a bitmask containing the daylight savings time information for the time, as follows:

Bit [0]: 1 = the time is affected by daylight savings time, 0= time is not affected by daylight savings. This value does not indicate that the time has been adjusted for daylight savings time. It indicates only that it should be adjusted when the time enters daylight savings time.

Bit [1]: 1= the time has been adjusted for daylight savings time, 0= the time hasn't been adjusted for daylight savings.

All other bits must be zero.

When entering daylight saving time, if the time is affected, but hasn't been adjusted (DST = 1), use the new calculation:

- The date/time should be increased by the appropriate amount.
- The TimeZone should be decreased by the appropriate amount (EX: +480 changes to +420 when moving from PST to PDT).
- The Daylight value changes to 3.

When exiting daylight saving time, if the time is affected and has been adjusted (DST = 3), use the new calculation:

- The date/time should be decreased by the appropriate amount.
- The TimeZone should be increased by the appropriate amount.
- The Daylight value changes to 1.

### 9.18.5 \_GWS (Get Wake alarm status)

This object is required and enables the OSPM to read the status of wake alarms. Expired wake timers will wake the platform even if the transition to a sleep state was completed after the wake timer has expired. This method enables the OSPM to retrieve the status of wake timers and clear any of them if needed.

#### Arguments: (1)

Arg0 - Timer Identifier (Integer (DWORD)): indicates the timer to be cleared:

0x00000000 - AC Timer

0x00000001 - DC Timer

#### Return Value:

An Integer (DWORD) containing current expired timers in bit field

Bit [0]- 1 = timer expired, 0 = timer did not expire

Bit [ 1]- 1= timer caused a platform wake, 0 = timer did not cause a platform wake

Bit [31:2] reserved and should be 0.

### 9.18.6 \_CWS (Clear Wake alarm status)

This object is required and enables the OSPM to clear the status of wake alarms. Expired wake timers will wake the platform even if the transition to a sleep state was completed after the wake timer has expired. This method enables the OSPM to clear the status of expired wake timers.

#### Arguments: (1)

Arg0 - Timer Identifier (Integer (DWORD)): indicates the timer to be cleared:

0x00000000 - AC Timer

0x00000001 - DC Timer

#### Return Value:

An Integer (DWORD) containing current expired timer wake policy:

0x00000000 - Success

0x00000001 - Failure

### 9.18.7 \_STP (Set Expired Timer Wake Policy)

This object is required and sets the expired timer wake policy. The policy is applied when a corresponding timer expired but the wake signal was not asserted as a result of the power source. The platform accumulates elapsed time on the power source and asserts the wake signal when the elapsed timer on the power source exceeds the expired timer wake policy value. Power source transitions do not reset the expired timer wake policy values. When the Wake Alarm device asserts the wake, the expired timer wake policy values of both the AC timer and DC timer are reset to 0xFFFFFFFF automatically by hardware.

#### Arguments: (2)

Arg0 – TimerIdentifier (Integer(DWORD)): indicates the timer to be set:

0x00000000 – AC Timer

0x00000001 – DC Timer

Arg1 – ExpiredTimerWakePolicy (Integer(DWORD)): indicates the expired timer wake policy:

0x00000000 – The timer will wake up the system instantly after the power source changes.

0x00000001 – 0xFFFFFFF: time between the power source changes and the timer wakes up the system (in units of second).

0xFFFFFFFF – The timer will never wake up the system after the power source changes.

#### Return Value:

An Integer containing a result code as follows:

0x00000000 – Succeeded to set the expired timer wake policy.

0x00000001 – Failed to set the timer policy. Actual timer policy unknown.

### 9.18.8 \_STV (Set Timer Value)

This object is required and sets the timer to the specified value. As defined in \_TIV, the value indicates the number of seconds between the time when the timer is programmed and the time when it expires. When

the Wake Alarm device asserts the wake signal, the timer value is automatically reset to 0xFFFFFFFF (disabled).

#### **Arguments:** (2)

Arg0 – TimerIdentifier (**Integer (DWORD)**): indicates the timer to be set:

- 0x00000000 – AC Timer
- 0x00000001 – DC Timer

Arg1 – TimerValue (**Integer**): indicates the value to be set.

#### **Return Value:**

An **Integer** containing a result code as follows:

- 0x00000000 – Succeeded to set timer value.
- 0x00000001 – Failed to set timer value. Actual timer value unknown.

### **9.18.9 \_TIP (Expired Timer Wake Policy)**

This object is required and returns the current expired timer wake policy setting of the specified timer.

#### **Arguments:** (1)

Arg0 – TimerIdentifier (**Integer (DWORD)**): indicates the timer to be read:

- 0x00000000 – AC Timer
- 0x00000001 – DC Timer

#### **Return Value:**

An **Integer (DWORD)** containing current expired timer wake policy:

- 0x00000000 – The timer will wake up the system instantly after the power source changes
- 0x00000001 – 0xFFFFFFF: Time between the power source changes and the timer wakes up the system (in units of seconds)
- 0xFFFFFFFF – The timer will never wake up the system after the power source changes

### **9.18.10 \_TIV (Timer Values)**

This object is required and returns the remaining time of the specified timer before it expires.

#### **Arguments:** (1)

Arg0 – TimerIdentifier (**Integer(DWORD)**): indicates the timer to be read:

- 0x00000000 – AC Timer
- 0x00000001 – DC Timer

#### **Return Value:**

An **Integer** containing the current timer value. A value of 0xFFFFFFFF indicates that the timer is disabled.

### **9.18.11 ACPI Wakeup Alarm Events**

The Wake Alarm device as a generic hardware, supports control methods \_PSW and \_PRW to wake up the system and issues a Notify(<device>, 0x2) on the wakeup alarm device.

### 9.18.12 Relationship to Real Time Clock Alarm

Though both of the devices support wakeup timers to wake up system from sleeping state, they work independently. The Real Time Clock Alarm is defined as a fixed feature hardware whereas Time and Alarm device is defined as a generic hardware and can replace or coexist with the real time clock. OSPM may choose which device to utilize to provide timed wake capability.

### 9.18.13 Time and Alarm device as a replacement to the RTC

The Time and Alarm device can be an alternative to the RTC on some platforms where the legacy RTC hardware is not available, on these platforms the OSPM can use the Time and Alarm device to obtain time and set wake alarms. For platforms that don't require AC/DC wake service (e.g. a platform that have one power source only) the AC timer can be used to provide all the functions that were traditionally provided by the RTC. Using the capabilities object the Time and Alarm device can provide a scalable range of services to the OSPM.

### 9.18.14 Relationship to UEFI time source

The Time and Alarm device must be driven from the same time source as UEFI time services. This ensures that the platform has a consistent value of real time (time of day) and wake alarms. The OSPM can interact with this value using either ACPI or UEFI.

- OSPM must use only one runtime interface to configure/query the platform alarm(s); undefined behavior may occur if the two wakeup interfaces are used on the same hardware.
- If OSPM is trying to set an alarm using EFI runtime services, the alarm should be honored regardless of the power source (i.e. if the platform has an independent timer for each power source, they should both be configured with that alarm).

### 9.18.15 Example ASL code

The following ASL code serves as an example of how the Time and Alarm Device could be implemented. It is beyond the capability and the scope of this specification to provide a complete hardware implementation example.

#### Example 1: Define an ACPI Wake Alarm device

```
Device(\_SB.AWAK){
  Name(_HID, "ACPI000E") //device ID
  Name(_PRW, Package(){...})//enable or disable to wake up the system
  OperationRegion(CMOP, EmbeddedControl, ...)
  Field(CMOP, ByteAcc, ...){
    ..... //timer status and policies
  }
  Method(_GCP) {
    Return(0x03) //Both AC and DC alarms are implemented; Time capability is NOT
    supported
  }
  Method(_STP, 2){
    If(LEqual(Arg0, 0) {
      Store(Arg1, ...) //Set AC timer policy
    }
    Else {

```

```
Store(Arg1, ...) //Set DC timer policy
}
Return(0)
}
Method(_TIP, 1){
If(LEqual(Arg0, 1) {
Store(..., Local 0) //Get DC timer policy
}
Else {
Store(..., Local 0) //Get AC timer policy
}
Return (Local 0)
}
Method(_STV, 2){
If(LEqual(Arg0, 0) {
Store(Arg1, ...) //Set AC timer value
}
Else {
Store(Arg1, ...) //Set DC timer value
}
Return(0)
}

Method(_TIV, 1){
If(LEqual(Arg0, 1) {
Store(..., Local 0) //Get DC timer value
}
Else {
Store(..., Local 0) //Get AC timer value
}
Return (Local 0)
}

Method(_GWS, 1){
If(LEqual(Arg0, 1) {
Store(..., Local 0) //Get DC timer wake status
}
Else {
Store(..., Local 0) //Get AC timer wake status
}
Return (Local 0)
}
Method(_CWS, 2){
If(LEqual(Arg0, 0) {
Store(0, ...) //Clear AC Wake status
}
Else {
Store(0, ...) //Clear DC Wake status
}
Return(0)
```

```

}
}      // end of ACPI Wake Alarm device object
Scope(\_GPE) { // Root level event handlers
Method(_Lxx){
Store(One, ...)
Notify(\_SB.AWA, 0x2) //notify the OSPM of device wake
}
}      // end of \_GPE scope

```

**Example 2: Define an ACPI Real Time device on a HW-Reduced ACPI platform**

```

Device(\_SB.I2C1) //The controller used to access the RTC hardware
{
Name (_HID, ...)
...// Other objects required for this I2C controller
// Track status of SPB OpRegion availability for this controller
Name(AVBL, 0)
Method(_REG, 2)
{
/* 9 is the OpRegion type for SPB. (8 == GPIO, etc) */
If (Lequal(Arg0, 9))
{
  Store(Arg1, ^AVBL)
}
}
Device(\_SB.TAAD) //The Time and Alarm Device
{
Name (_HID, "ACPI000E")
Scope(\_SB.I2C1) //OpRegion declaration must appear under the controller
{
OperationRegion(TOP1, GenericSerialBus, 254, 0x100)
Field(TOP1, BufferAcc, NoLock, Preserve)
{
  Connection(I2CSerialBusV2(0x4a, 400000, "\_SB.I2C1", ,)), //Connection to the
controller for the following field accesses
  AccessAs(BufferAcc, AttribWord), //AccessProtocol for the following field(s)
  Y, 8,
  AccessAs(BufferAcc, AttribByte),
  M, 8,
  D, 8,
  H, 8,
  Mi, 8,
  S, 8,
  P, 8,
  AccessAs(BufferAcc, AttribWord),
  Ms, 8,
  Tz, 8,
  AccessAs(BufferAcc, AttribByte),
  DI, 8,
  P2, 8
}
}
```

```

}

Method (_GCP, 0x0, NotSerialized)
{
    Return(0x4)      //Implements Real Time interface, but no alarms
}

Method(_GRT, 0x0, NotSerialized)
{
    If(LNotEqual (\_SB.TC1.AVBL, 1)) // Verify that SPB OpRegion is available for this
access
{
    Return(0)
}
Name(BUFF, Buffer(4){}) // Create Serial Bus data buffer as BUFF
CreateByteField(BUFF, 0x00, STAT) // STAT = Status (Byte)
CreateWordField(BUFF, 0x02, DATA) // DATA = Data (Byte)
Name(BUF2, Buffer(0x10){}) // Create buffer to hold the Real Time structure as BUF2
CreateWordField(BUF2, 0x0,Y) //year
CreateByteField(BUF2, 0x2,M) //Month
...
CreateByteField(BUF2, 0xc, DI) //DI
CreateByteField(BUF2, 0xd, P2) //Pad2
Store(\_SB.I2C1.Y, BUFF) //Get each member from the OpRegion and store in the
structure
Store(DATA, Y)
Store(\_SB.I2C1.M, BUFF)
Store(DATA, M)
...
Store(\_SB.I2C1.DI, BUFF)
Store(DATA, DI)
Store(\_SB.I2C1.P2, BUFF)
Store(DATA, P2)
Return(BUF2) // Success -> return what was last in buffer
}

Method(_SRT, 0x1, NotSerialized)
{
    Name(BUFF, Buffer(4){}) // Create Serial Bus data buffer as BUFF
    CreateByteField(BUFF, 0x00, STAT) // STAT = Status (Byte)
    CreateWordField(BUFF, 0x02, DATA) // DATA = Data (Byte)
// Verify that SPB OpRegion is available for this access
    If(LNotEqual (\_SB.I2C1.AVBL, 1))
{
    Return(0)
}
CreateWordField(Arg0, 0x0, Y) //Create Fields to access each member of the input data
...
CreateByteField(Arg0, 0xd, P2)

Store(Store(Y, \_SB.I2C1.Y), BUFF) //Store each input member into the hardware, and
//set the transaction status into BUFF
If(LEqual (STAT, 0x00)) //Transaction was _NOT_successful
{

```

```

        Return(0xFFFFFFFF)
    }

    ...

    Store(Store(P2, \_SB.I2C1.P2), BUFF)
    If(LEqual(STAT, 0x00)) //Transaction was _NOT_successful
{
    Return(0xFFFFFFFF)
}
}

Name(_DEP, Package() {"\\_SB.I2C1"}) //Identify the OpRegion dependency for this
device
}

```

## 9.19 Generic Buttons Device

The Generic Button device is a standard device for reporting button events via hardware interrupts, and mapping those interrupts to specific usages defined in the Human Interface Device (HID) specification. In order to express the functionality of a button to the OS, two pieces of information are required: Usage of the HID Control, and Usage of the HID Collection that the Control belongs to. A Usage is a combination of a Usage Page and Usage ID. For example, the Volume Up button is identified as the Volume Up Usage (Usage Page 0x0C, Usage Id 0xE9) in the Consumer Control Collection (Usage Page 0x0C, Usage Id 0x01).

The Plug and Play ID of the Generic Button device is ACPI0011.

**Note:** *If the Power button is described using this device, it must also support the Power Button Override feature defined in [Section 4.8.2.2.1 Power Button Override](#).*

**Table 9-296 Generic Buttons Device Child Objects**

Object	Description
_CRS	Lists the resources consumed by the Generic Button device. Only interrupt resources (GpioInt() and Interrupt() ) are valid for this device. Each interrupt listed must signal one distinct button event.
_DSD	Provides a list of HID Button Descriptors, as defined by UUID FA6BD625-9CE8-470D-A2C7-B3CA36C4282E. (See <a href="http://www.uefi.org/sites/default/files/resources/_DSD-HID-buttondescriptor-UUID.pdf">http://www.uefi.org/sites/default/files/resources/_DSD-HID-buttondescriptor-UUID.pdf</a> ). Only HID 2-state button usages are valid for the descriptors returned for this device.

**Note:** *If there are more HID Button Descriptors returned by \_DSD than there are interrupts listed in \_CRS, behavior is OS-specific.*

### 9.19.1 Button Interrupts

Interrupts for the Generic Buttons Device are required to be edge-triggered and not level-triggered since there is no interface defined for the driver to quiesce the interrupt line once the interrupt is received. The polarity (ActiveLow/High vs. ActiveBoth) of the interrupt is determined by the Usage Type of the HID Usage associated with the interrupt, as described in [Table 9-297](#).

**Table 9-297 Usage Types and Interrupt Polarity**

Usage Type	Interrupt Polarity	Explanation
OSC - One Shot Control	ActiveHigh/ ActiveLow	An interrupt should be triggered on a button press. This is for a toggle button. On every such event (interrupt), the Operating System will toggle the internal property of the entity that it controls. Example: Mute button
MC - Momentary Control	ActiveBoth	An interrupt should be triggered on both the button press and release. Example: Left mouse button.
RTC - Re-trigger Control	ActiveBoth	An interrupt should be triggered on both the button press and release. While the button is pressed, the Operating System will repeatedly re-execute the action that it would take when the button is pressed. Example: A Volume Up button when pressed and held, will repeatedly increment the Volume.
OOC - On/Off Control	ActiveHigh/ ActiveLow OR ActiveBoth	ActiveHigh/ActiveLow polarity should be specified if implemented as a button that goes back to its initial state automatically. E.g. A Push Button or a spring-loaded Slider switch. Only one interrupt should be fired for press/release pair.  Example: A spring-loaded Wireless Radio Slider Switch.  ActiveBoth polarity should be specified if implemented as a button that stays in its state until the user moves it again. E.g. A button that stays in pressed state, or a Slider switch that sticks to its position. Example: Wireless Radio Slider Switch.

## 9.19.2 Button Usages and Collections

The HID Usage tables have an extensive list of Standardized Usages for various kinds of buttons. Some of the common buttons found on Computing devices and their Usages are listed in [Table 9-298](#).

For the full list, see "HID Usage Tables", available from "Links to ACPI-Related Documents" (<http://uefi.org/acpi>) under the heading "HID Usage Tables".

Buttons are grouped under a HID Collection. Several HID Collections are commonly understood by Operating Systems, e.g., Keyboard Collection, Consumer Controls Collection, Wireless Radio Controls Collection, etc.

**Table 9-298 Common HID Button Usages**

Button	Usage Page / Usage	Usage Type	Interrupt Polarity	Spec Reference
Power	Generic Desktop Page (0x01) System Power Down (0x01)	OSC	ActiveBoth <sup>1</sup>	<a href="#">HID Usage Tables 1.12</a> Section 4
Volume Up	Consumer Page (0x0C) Volume Increment (0xE9)	RTC	ActiveBoth	<a href="#">HID Usage Tables 1.12</a> Section 15

Button	Usage Page / Usage	Usage Type	Interrupt Polarity	Spec Reference
Volume Down	Consumer Page (0x0C) Volume Decrement (0xEA)	RTC	ActiveBoth	<a href="#">HID Usage Tables 1.12</a> Section 15
Camera Shutter	Camera Control Page (0x90) Camera Shutter (0x21)	OSC	Active High/ ActiveLow	Camera Shutter Usage 0x21 is planned for a future version of the HID Usage Tables.
Display Brightness Up	Consumer Page (0x0C) Display Brightness Increment (0x6F)	RTC	ActiveBoth	<a href="#">Review Request 41</a> Display Brightness Controls
Display Brightness Down	Consumer Page (0x0C) Display Brightness Decrement (0x6F)	RTC	ActiveBoth	<a href="#">Review Request 41</a> Display Brightness Controls
Wireless Radio Button	Generic Desktop Page (0x01) Wireless Radio Button (0xC6)	OOC	ActiveHigh/ ActiveLow	<a href="#">Review Request 40</a> HID Radio On/Off Usages
Wireless Radio Slider Switch	Generic Desktop Page (0x01) Wireless Radio Slider Switch (0xC8)	OOC	ActiveBoth	<a href="#">Review Request 40</a> HID Radio On/Off Usages

<sup>1</sup> The System Power Down Usage (Page:01, ID: 81) has Type OSC, although its interrupt must be ActiveBoth in order to allow drivers to perform functions based on “hold-down” timing. This is an exception to the Usage Type Rules for Interrupt Polarity ([Table 9-297](#)).

### 9.19.3 Example

```
Device(BTNS)
{
    Name(_HID, "ACPI0011")
    Name(_CRS, ResourceTemplate() {
        GpioInt(Edge, ActiveBoth...) {pin} //Vol Down
        GpioInt(Edge, ActiveBoth...) {pin} //Vol Up
        GpioInt(Edge, ActiveBoth,...) {pin} //Power (MUST BE
        //ACTIVEHIGH! )
    })
    Name(_DSD, Package(2) {
        //UUID for HID Button Descriptors:
        ToUUID("FA6BD625-9CE8-470D-A2C7-B3CA36C4282E"),
        //Data structure for this UUID:
        Package() {
            Package(5) {
                0, //Declare a Collection
                1, //Unique ID for this collection
                0, //It is a top-level collection
                0x0c, //Usage Page ("Consumer")
            }
        }
    })
}
```

```

        0x01 //Usage ("Consumer Control")
    },
    Package(5) {
        0, //Declare another Collection
        2, //Unique ID for this collection
        0, //Also a top-level collection
        0x01, // Usage Page ("Generic Desktop")
        0x80 //Usage ("System Control")
    },
    Package(5) {
        1, //Declare a Control
        0, //Interrupt index in _CRS for Vol Down
        1, //In the "Consumer Control" collection
        0x0c, //Usage Page ("Consumer")
        0xEA //Usage ("Volume Decrement")
    },
    Package(5) {
        1, //Declare another Control
        2, //Interrupt index for the Power Button
        2, //In the "System Control" collection
        0x01, //Usage Page ("Generic Desktop")
        0x81 //Usage ("System Power Down")
    },
    Package(5) {
        1, //Declare another Control
        1, //Interrupt index for the Vol Up button
        1, //In the "Consumer Control" collection
        0x0c, //Usage Page ("Consumer")
        0xE9 //Usage ("Volume Increment")
    },
    Package(5) {
        1, //Another Control
        0xFF, //No Interrupt for this one... e.g. OS-
// specific signalling for Rotation Lock
        1, //In the "Consumer Control" collection
        0x0C, //Usage Page ("Consumer")
        0x245 //Usage ("AC Rotate")
    }
}
})
} // End Device

```

## 9.20 NVDIMM Devices

### 9.20.1 Overview

In order to handle NVDIMMs, the OS must first be able to detect and enumerate the NVDIMMs. To facilitate the plug and play discovery of NVDIMM and driver loading, ACPI namespace devices are used.

### 9.20.2 NVDIMM Root Device

The NVDIMM root device is represented by an ACPI namespace device with a \_HID of "ACPI0012" (see [Section 6.1.5](#) and [Table 5-183](#)). If the platform supports NVDIMMs, then platform firmware shall report one NVDIMM root device in the \SB scope (see [Section 5.3.1](#)). This device allows the OS to trigger enumeration of NVDIMMs through NFIT (see [Section 5.2.25](#)) at boot time and re-enumeration at root level via the \_FIT method (see [Section 6.5.9](#)) during runtime.

[Table 5-173](#) defines NFIT Update Notification notification values for the NVDIMM root device.

For each NVDIMM present or intended to be supported by platform, platform firmware also exposes an NVDIMM device (see [Section 9.20.3](#)) under the NVDIMM root device.

### 9.20.3 NVDIMM Device

Each NVDIMM is represented by an ACPI namespace device under the NVDIMM root device (see [Section 9.20.2](#)) with an \_ADR (see [Section 6.1.1](#)) containing the NFIT Device Handle.

The NFIT Device Handle is constructed as follows:

- Bits [3:0] DIMM number within the memory channel
- Bits [7:4] memory channel number within the memory controller
- Bits [11:8] memory controller ID within the socket
- Bits [15:12] socket ID within the node controller, if any
- Bits [27:16] node controller ID, if any
- Bits [31:28] Reserved

[Table 5-174](#) defines NVDIMM Device Notification Values for an NVDIMM device.

Information about the Label Storage Area on the NVDIMM is provided by the \_LSI (see [Section 6.5.10.1](#)) method. The OSPM uses the methods \_LSR (see [Section 6.5.10.2](#)) and \_LSW (see [Section 6.5.10.3](#)) to read and write to the Label Storage Area. The format of the Label Storage Area data is defined in UEFI.

### 9.20.4 Example

An example name space is shown below for a platform containing one NVDIMM:

```
Scope (\_SB){
  Device (NVDI MM root devi ce
  {
    Name (_HID, "ACPI 0012")
    Method (_STA) {...}
    Method (_FIT) {...}
    Method (_DSM, ...) {
      ...
    }
  }
}
```

```

Device (NVD) // NVDIMM device
{
    Name(_ADR, h) //where h is NFIT Device Handle for this NVDIMM
    Method (_DSM, ...) {
        ...
    }
}
}
}

```

### 9.20.5 Loading NVDIMM drivers

While using ACPI namespace devices allows for OS handling of NVDIMMs in a standard manner, the format of the address ranges described by this scheme may still vary depending on the vendor (or even different NVDIMM version of the vendor). For example, the command and status values supported by a Block Control Window are vendor specific and possibly even vary for a given vendor.

The NVDIMM Control Region Structure (see [Section 5.2.25.6](#)) includes a Vendor ID, Device ID, and Revision ID. Because an NVDIMM could be a combination device consisting of different region types (e.g., Persistent Memory and Block), a Region Format Interface Code is also included to indicate the region type as well as the specific implementation within that type. This allows for variability across vendors as well as within vendor offerings.

These fields enable loading of drivers for managing the NVDIMM as well as for handling the address ranges supported by the NVDIMM. The Region Format Interface Code is used to load generic drivers for the following: management driver, persistent memory driver and block driver. A vendor specific driver for each of the above can be loaded by matching on Vendor ID, Device ID and Revision ID (in addition to the Region Format Interface Code).

Region Format Interface Code requirements shall be met by all compliant NVDIMMs. Any Vendor specific extensions are only allowed to extend on top of the Region Format Interface Code requirements.

It is assumed that the OSPM is capable of loading the Region Format Interface Code specific driver or vendor specific drivers based on such discovery. This scheme is as shown in [Figure 9-54](#).

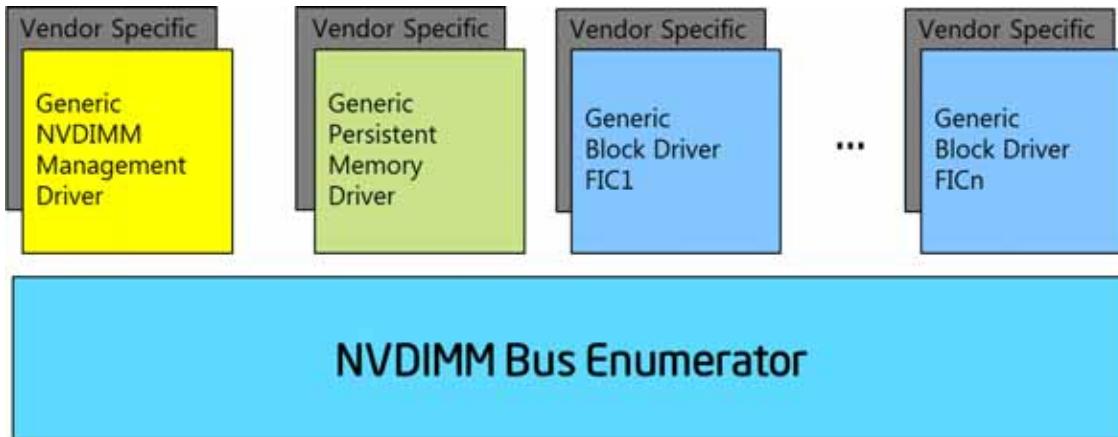


Figure 9-54 Vendor/Device Specific Driver Loading

The Subsystem Vendor ID, Subsystem Device ID and Subsystem Revision ID fields allow selection of specific solution provider drivers that may span across devices from multiple vendors.

## 9.20.6 Hot Plug Support

The NVDIMM memory hot plug representation of the ACPI Name Space is described in this section. The NVDR device is the NVDIMM root device, the NVD1 and NVD2 are NVDIMM devices, the MEMO is memory module device corresponding to the NVD1 and NVD2 devices. The \_FIT method under NVDR device returns all NFIT entries including the hot added devices.

```

Device (NVDR) // Root device
{
    Name (_HID, "ACPI 0012")
    Method (_STA) {...}
    Method (_FIT) {...}
    Method (_DSM, ...) {
        ...
    }
    Device (NVD1) // NVDIMM1
    {
        Name(_ADR, h1) //where h1 is NFIT Device Handle for this NVDIMM1
        Method (_DSM, ...) {
            ...
        }
    }
    Device (NVD2) // NVDIMM2
    {
        Name(_ADR, h2) //where h2 is NFIT Device Handle for this NVDIMM2
        Method (_DSM, ...) {
            ...
        }
    }
}

Device (MEMO) // Memory module
{
    Name (_HID, EISAID ("PNPOC80"))
    Method (_STA) {...}
    Method (_CRS) {...}
}

Scope (\_GPE)
{
    Method (_L00) {
        Notify (\_SB.NVDR, 0x80) // Notify to NVDIMM root device
        Notify (\_SB.MEMO, 1) // Device Check to Memory Module
    }
}

```

Hot Plugged memory is indicated to OS using ACPI Name Space device with PNPID of PNP0C80. The NFIT entries created by the hot plug NVDIMM are communicated by the ACPI Name Space device with ACPI0012.

NVDIMM hot add flow:

1. Prior to hot add of the NVDIMM, the corresponding ACPI Name Space devices, NVD1, NVD2 return an address from \_ADR object (NFIT Device handle) which does not match any entries present in NFIT (either the static or from \_FIT) indicating that the corresponding NVDIMM is not present. Further ACPI Name Space Device MEM0 returns \_STA status of 0 indicating that the devices are not present, not enabled and not functioning.
2. On hot add
  - a Send Notify 0x80 to NVDR to cause NVDIMM bus driver to enumerate all the devices under the root hierarchy
  - b NVDIMM bus driver evaluates the \_FIT method under the NVDR device and identifies the changes to the NVDIMM devices present (by identifying new NFIT Device handles that have been added).
  - c NVDIMM bus driver now finds matching entries for addresses returned by \_ADR objects of NVD1 and NVD2 and loads the corresponding drivers.
  - d Send Notify Device Check to MEM0 to cause re-enumeration of device causing the memory manager to add \_CRS range to the memory pool.
3. MEM0 will now report all the memory ranges now created and made visible.

## 9.20.7 NVDIMM Root Device \_DSMs

A device specific method (\_DSM) for NVDIMM root devices (see [Section 9.20.2](#)) is described in this section.

### 9.20.7.1 Input Parameters:

Arg0 – *UUID* (see [Section 5.2.4](#)) (set to 2f10e7a4-9e91-11e4-89d3-123b93f75cba)

Arg1 – *Revision ID* (set to 1)

Arg2 – *Function Index*

**Table 9-299 NVDIMM Root Device Function Index**

Function Index	Description
0	Query command implemented (see <a href="#">Section 9.1.1</a> )
1	Query Address Range Scrub (ARS) Capabilities (see <a href="#">Section 9.20.7.4</a> )
2	Start Address Range Scrub (ARS) (see <a href="#">Section 9.20.7.5</a> )
3	Query Address Range Scrub (ARS) Status (see <a href="#">Section 9.20.7.6</a> )
4	Clear Uncorrectable Error (see <a href="#">Section 9.20.7.7</a> )
5	Translate SPA
6	Reserved

7	ARS Error Inject
8	ARS Error Inject Clear
9	ARS Error Inject Status Query
0xA	Query ARS Error Inject Capabilities
0xB – 0xFFFF	Reserved

Arg3 – a package containing parameters for the function specified by the *UUID*, *Revision ID* and *Function Index*. The layout of the package for each command along with the corresponding output is illustrated in the following tables. The input and output package are a list of bytes (Buffer).

### 9.20.7.2 Address Range Scrubbing (ARS) Overview

ARS allows the platform to communicate memory errors to system software. This capability allows system software to prevent accesses to addresses with uncorrectable errors in memory.

The ARS functions are system scope and are not specific to a single NVDIMM, i.e., they manage all NVDIMMs present in the system.

The **Query ARS Capabilities** function indicates if ARS is supported for an address range and to discover system-wide attributes, such as the maximum amount of data that can be returned from a **Query ARS Status** function and whether the platform provides an asynchronous ACPI notification that a new uncorrectable error has been discovered.

Only one scrub can be in progress system wide at any given time. OSPM should first issue a **Query ARS Status** function and ensure no ARS is in progress before issuing a **Start ARS** function. If a successful status is returned, the extended status of the **Query ARS Status** function indicates to OSPM one of the following:

- An ARS has been completed and ARS results are returned. These results should be processed by OSPM before issuing another **Start ARS** function. When a new address range scrub operation is started, the previous ARS results are lost.
- An ARS is in progress and no ARS results are returned. A **Start ARS** function fails while an ARS is in progress. OSPM should periodically issue **Query ARS Status** functions until the ARS is no longer in progress.
- There has been no ARS since the platform was booted so there are no ARS results returned. A new **Start ARS** function may be issued.
- An ARS stopped prematurely and partial results are returned. If the platform has more data to return than will fit in the **Max Query ARS Status Output Buffer Size** (see [Section 9.20.7.4](#)), OSPM may issue **Start ARS** and **Query ARS Status** functions in a loop and retrieve all of the ARS Error Records, modifying the ARS Start SPA Address and length with each iteration.

If a **Start ARS** function is issued, the OSPM provides the ARS Start SPA Address and ARS Length for the range to be scrubbed. If the previous ARS stopped prematurely, these fields should be set to the values from the Restart ARS Start SPA Address and Restart ARS Length from the previous **Query ARS Status** output buffer. For any **Start ARS** function, OSPM may optionally set the Flags Bit[0] to indicate to the platform that the ARS is a priority and may cause delays in other processing, such as when booting. The output from a successful **Start ARS** function provides an estimated time for the scrub to complete as a hint to the OSPM regarding when to issue a **Query ARS Status** function.

As indicated in the **Query ARS Capabilities** function output, a platform may issue the asynchronous event notification 0x81 (Unconsumed Uncorrectable Memory Error Detected Notification) when new uncorrectable errors are detected. Upon receiving the notification, the OSPM may decide to issue a **Start ARS** with Flags Bit [1] set to prepare for the retrieval of existing records and issue the **Query ARS Status** function to retrieve the records. The OSPM can pass the entire range of persistent memory as 'ARS Start SPA Address' and 'ARS Length' for Start ARS, even if the persistent memory range is not contiguous. Alternatively, the OSPM may decide to ignore event notification 0x81. If the memory range is accessed before OSPM can process the ARS data, default platform error handing sequences, such as Machine Check, may occur.

Platforms may support the ability for OSPM to clear an error previously reported from an ARS. OSPM should only issue the **Clear Uncorrectable Error** function for a memory address range if that the address range has been retired from further use or if valid error-free data is written to the range before those locations are read. If the **Clear Uncorrectable Error** function is not supported by the platform or if a **Clear Uncorrectable Error** function for an address range fails, the OSPM should continue to prevent accesses to the address ranges.

The ARS related functions use the following convention for the Status and Extended Status fields.

### 9.20.7.3 Address Range Scrub (ARS) Error Injection Overview

The expected OSPM ARS Error Injection flow is:

1. Inject an error with ARS Error Inject.
2. Optionally and if ARS Unconsumed Uncorrectable Memory Error Detected Notification is supported by the host, system firmware triggers an ACPI NVDIMM root device notification 0x81 for the OSPM.
3. Use Start ARS with Flags Bit[1] set for OSPM acknowledgment of the notification to system firmware and use ARS Query Status to query ARS status.
4. Optionally, use ARS Error Inject Status Query to query the error injected ranges.
5. Use ARS Error Inject Clear to clear the ARS error injected ranges. Until the error is cleared, system firmware will report the error in the ARS Query Status output buffer.

**Table 9-300 Status and Extended Status Field Generic Interpretations**

Bytes	Field Name	Description
1-0	Status	0 – Success 1 – Function Not Supported 2 – Invalid Input Parameters 3 – Hardware Error 4 – Retry Suggested; it is up to the OSPM regarding the number of retries to perform. 5 – Error – Unknown Reason 6 – Function-Specific Error Code 7 - FFFFh Reserved for errors
3-2	Extended Status	Function Specific

**Note:** If Status is nonzero, the Output Buffer for all the functions in this \_DSM (see [Section 9.1.1](#)) is limited to only the Status and Extended Status fields.

#### 9.20.7.4 Function Index 1 - Query ARS Capabilities

This function provides ARS capabilities for a given address range. The format of the input and output for this function is given below.

##### 9.20.7.4.1 Function Input

**Table 9-301 Query ARS Capabilities – Input Buffer**

Field	Byte Length	Byte Offset	Description
ARS Start SPA Address	8	0	Starting of System Physical Address of ARS
ARS Length	8	8	In bytes

##### 9.20.7.4.2 Function Output

**Table 9-302 Query ARS Capabilities – Output Buffer**

Field	Byte Length	Byte Offset	Description
Status	2	0	Defined in <a href="#">Table 9-300</a> . All other fields in this structure are Reserved if Status is not set to 0 (i.e., Success).
Extended Status	2	2	Bit[0] – If set to 1, indicates scrub of Volatile Memory is supported. Volatile memory is any region that is not marked as Persistent Memory in UEFI or in an ACPI Address Range Type. Bit[1] – If set to 1, indicates scrub of Persistent Memory is supported. Persistent Memory is any region that has one of the following memory range types: <ul style="list-style-type: none"><li>• UEFI memory type of EfiPersistentMemory</li><li>• Any UEFI memory type that has the EFI_MEMORY_NV memory attribute set</li><li>• ACPI Address Range Type of AddressRangePersistentMemory</li></ul> Bits[15:2] – Reserved
Max Query ARS Status Output Buffer Size	4	4	In bytes. Maximum size of buffer (including the Status and Extended Status fields) returned by the Query ARS Status function. This can be used to calculate the maximum number of ARS Error Records that are supported. This value shall be a constant for the platform, independent of the input SPA range. As long as a valid input SPA range is specified, the value returned for this shall always be the same.

Field	Byte Length	Byte Offset	Description
Clear Uncorrectable Error Range Length Unit Size	4	8	<p>In bytes.</p> <p>This field describes the uncorrectable error clearing unit size. This value shall be a power of two.</p> <p>The Clear Uncorrectable Error Range Length argument to the Clear Uncorrectable Errors LSM function shall be an integer multiple of this unit size.</p> <p>The Query ARS Status ARS Error Record Format “Length” field shall be an integer multiple of this unit size.</p> <p>This value shall be a constant for the platform, independent of the input SPA range.</p>
Flags	2	12	<p>Bit[0] – Unconsumed Uncorrectable Memory Error Detected Notification flag. If set to 1, indicates platform supports the ACPI NVDIMM Root Device Unconsumed Error Notification (0x81) as described in <a href="#">Table 5-173</a>. If set to 0, the platform doesn’t support this notification mechanism.</p> <p>Bit[1] – ARS Stopped Notification flag. If set to 1, indicates the platform supports ARS Stopped Notification (0x82) as described in <a href="#">Table 5-173</a>. If set to 0, the platform does not support this notification.</p> <p>Bit[15:2] - Reserved.</p>
Reserved	2	14	

### 9.20.7.5 Function Index 2 - Start ARS

The Start ARS function triggers an Address Range Scrub for the given range of memory. Address scrubbing can be done for volatile memory, persistent memory, or both. For the given input ARS Start SPA and length, there may be one or more ranges, including gaps between them for the given Type parameter.

#### 9.20.7.5.1 Function Input

**Table 9-303 Start ARS – Input Buffer**

Field	Byte Length	Byte Offset	Description
ARS Start SPA Address	8	0	In bytes
ARS Length	8	8	In bytes
Type	2	16	<p>Bit[0] – If set to 1, Scrub Volatile Memory</p> <p>Bit[1] – If set to 1, Scrub Persistent Memory</p> <p>Bits[15:2] Reserved</p> <p>Note: If the range provided includes both volatile and persistent sub-ranges, only the types indicated here will be scrubbed.</p>

Flags	1	18	Bit[0] – If set to 1 specifies that the platform may cause delays in processing other operations while performing the ARS (e.g., for use during system boot). If set to 0 specifies that the platform shall not cause delays in processing other operations while performing the ARS (e.g., for use during run time). Bit[1]: If set to 1 the firmware shall return data from a previous scrub, if any, without starting a new scrub. If set to 0 firmware shall start a new ARS.
Reserved	5	19	

### 9.20.7.5.2 Function Output

**Table 9-304 Start ARS – Output Buffer**

Field	Byte Length	Byte Offset	Description
Status	2	0	6 – ARS already in progress All other values defined in <a href="#">Table 9-300</a>
Extended Status	2	2	Reserved
Estimated Time for Scrub	4	4	In seconds Estimated time to scrub the given address range.

### 9.20.7.6 Function Index 3 - Query ARS Status

The *Query ARS Status* command allows software to get the status of ARS.

If the platform supports ARS error injection, then it shall also include injected errors as part of its payload.

#### 9.20.7.6.1 Function Input

None

### 9.20.7.6.2 Function Output

**Table 9-305 Query ARS Status – Output Buffer**

Field	Byte Length	Byte Offset	Interpretation
Status	2	0	Defined in <a href="#">Table 9-300</a>
Extended Status	2	2	0 – ARS complete 1 – ARS in progress. Any returned ARS data shall be all zeros. 2 – No ARS performed for current boot. Any returned ARS data shall be all zeros. 3 – ARS Stopped Prematurely – This may occur when the implementation reaches the maximum number of errors that can be reported. 4 ..0xFFFF – Reserved. Any returned ARS Data shall be all zeros.
ARS Data	Varies	4	See <a href="#">Table 9-306</a> .

The output SPA range return indicates the scope of the ARS scrub for the specified type.

**Table 9-306 ARS Data**

Field	Byte Length	Byte Offset	Interpretation
Output (Size)	4	0	Size of Output Buffer in bytes, including this field.
Start SPA	8	4	In bytes
Length	8	12	In bytes ARS performed range is from Start SPA to Start SPA + Length
Restart ARS Start SPA Address	8	20	Starting SPA to restart the ARS if Status is Success and Extended Status was reported as ARS Stopped Prematurely. The value specified here is used without modification as the ARS Start SPA Address when calling Start ARS to continue an ARS that stopped prematurely before completing the requested ARS Length. Note: It is not required to continue an ARS that has stopped prematurely.
Restart ARS Length	8	28	SPA Length to restart the ARS if Status is Success and Extended Status was reported as ARS Stopped Prematurely. The value specified here is used without modification as the ARS Length when calling Start ARS to continue an ARS that stopped prematurely before completing the requested ARS Length.

Field	Byte Length	Byte Offset	Interpretation
Type	2	36	Bit[0] – Volatile Memory range if set to 1 Bit[1] – Persistent Memory range if set to 1 If both bit[0] and bit[1] are set, both Persistent Memory and volatile memory are in this range. Bits[15:2] – Reserved
Flags	2	38	Bit[0] – If set to 1, indicates an overflow condition has occurred. This means that more errors were reported in the error log than will fit in the maximum total buffer size of Max Query ARS Status Data Size from the Query ARS Capabilities. The returned Extended Status should be ARS Stopped Prematurely when this bit is set to 1. Bits[15:1] Reserved
Number of Error Records	4	40	Number of ARS Error Record structures reported
ARS Error Records	Varies	44	Refer to <a href="#">Table 9-307</a> for the format of the error record.

**Table 9-307 ARS Error Record Format**

Field	Byte Length	Byte Offset	Description
NFIT Handle	4	0	NFIT Handle indicates the specific NVDIMM at Start SPA of Error Location (offset 8)
Reserved	4	4	Reserved
Start SPA of Error Location	8	8	Start of System Physical Address of the error.
Length	8	16	Length indicates the consecutive bytes from Start SPA of Error Location that are in error. Due to interleaving, the range covered by Start SPA of Error Location and Length may include addresses that are present in other NVDIMMs in an interleave set.  In case of overflow, the address range indicated by Start SPA of Error Location and Length will cover the NVDIMM interleave set that is impacted by the error.  The range covered by Start SPA of Error Location and Length may exceed the requested scrub range due to platform limitations.

### 9.20.7.7 Function Index 4 - Clear Uncorrectable Error

The Clear Uncorrectable Error Function allows system software to clear uncorrectable errors from the NVDIMM based on System Physical Address (SPA). Uncorrectable errors reported by the Query ARS Status function can be cleared utilizing this mechanism.

For each uncorrectable error range length covered by the specified SPA range that contains an uncorrectable error, platform software shall clear the error and may modify the data at those addresses. For each uncorrectable error range length covered by the specified SPA range that does not contain an uncorrectable error, platform software shall do nothing.

The Clear Uncorrectable Error SPA Range Base shall be aligned to the Clear Uncorrectable Error Range Length Unit Size and the Clear Uncorrectable Error Range Length must be an integer multiple of the Clear Uncorrectable Error Range Length Unit Size. The Clear Uncorrectable Error request shall result in an Invalid Parameter error status if these rules are not followed.

Attempting to clear an error with a range length that overruns the end of a region shall result in an Invalid Parameter error status.

Attempting to clear an error with a range length that is greater than the range of uncorrectable errors is not considered a failure.

Attempting to clear an error from an address that does not currently have an uncorrectable error is not considered a failure.

**Note:** *The data contained in the locations that are cleared with this command are indeterminate. Care must be taken when using this command since once the error has been cleared, subsequent reads of those cleared locations will cause silent data corruption if software is unaware that the original contents were lost. Software should only utilize this command if it can guarantee that the locations have been retired from further use or will be written with valid data before the locations are read.*

OSPM may call **Clear Uncorrectable Error** on an ARS error range that was injected via the ARS Error Inject function. If the platform supports this, it should ultimately treat it as if the **ARS Error Inject Clear** function was called. If the platform does not support this, it should fail with an Invalid Input Parameter error.

### 9.20.7.7.1 Function Input

**Table 9-308 Clear Uncorrectable Error – Input Buffer**

Field	Byte Length	Byte Offset	Description
Clear Uncorrectable Error SPA Range Base	8	0	In bytes  Starting location from which to clear the uncorrectable error. This address should be aligned to the Clear Uncorrectable Error Range Length Unit Size reported in the Query ARS Capabilities function (see <a href="#">Section 9.20.7.4</a> ).
Clear Uncorrectable Error Range Length	8	8	In bytes  Length of the region to clear the uncorrectable error from. This length should be an integer multiple of the Clear Uncorrectable Error Range Length Unit Size reported in the Query ARS Capabilities function (see <a href="#">Section 9.20.7.4</a> ).

### 9.20.7.7.2 Function Output

**Table 9-309 Clear Uncorrectable Error – Output Buffer**

Field	Byte Length	Byte Offset	Description
Status	2	0	Defined in <a href="#">Table 9-300</a>
Extended Status	2	2	Reserved
Reserved	4	4	Reserved
Cleared Uncorrectable Error Range Length	8	8	<p>The range of errors actually cleared by the platform, starting from the requested Clear Uncorrectable Error SPA Range Base. This length shall be an integer multiple of the Clear Uncorrectable Error Range Length Unit Size reported in the Query ARS Capabilities function (see <a href="#">Section 9.20.7.4</a>).</p> <p>Note: This range length may be smaller than the length requested by the input range length.</p>

### 9.20.7.8 Function Index 5 - Translate SPA

This command instructs the platform to translate the requested System Physical Address (SPA) in to one or more NVDIMM devices consisting of an NFIT Device Handle and DIMM Physical Address (DPA) on that device.

- The SPA address to translate must lie within one of the SPA ranges described in the NFIT System Physical Address Range table.
- For non-mirrored interleave sets, the SPA address will translate to a single NVDIMM and single DPA.
- For a HW mirrored interleave set, the Flags Bit[0] - Mirrored SPA Location bit is set and all NVDIMM Devices the SPA translates to are included in the returned NVDIMM Device List.

#### Function Input

The following table outlines the expected input payload for this command.

**Table 9-310 Translate SPA - Input Payload Format**

Field	Byte Length	Byte Offset	Description
SPA	8	0	System Physical Address to translate. This is a byte aligned address and all bits are considered valid. No masking or shifting occurs.

## Function Output

The following tables outline the expected output payload for this command.

**Table 9-311 Translate SPA - Output Payload Format**

Field	Byte Length	Byte Offset	Description
Status	2	0	<p>Defined in <a href="#">Table 9-300</a>.</p> <p>If the SPA does not lie within one of the SPA ranges described in the NFIT System Physical Address Range table, a status of 2, Invalid Input Parameter, is returned.</p> <p>All other fields in this structure are Reserved if Status is not set to 0 (i.e., Success).</p>
Extended Status	2	2	Extended Status Field (Vendor Defined)
Flags	1	4	<p>Bit[0] – Mirrored SPA Location - If set to 1, indicates the SPA location maps to one or more NVDIMMs that are mirrored together and contributing to a single SPA range.</p> <p>All NVDIMMs currently contributing to the HW Mirror shall be reported and the Number of NVDIMMs shall report all of the devices in the Mirrored SPA range.</p>
Reserved	3	5	Must be 0
Translated Length	8	8	<p>The number of bytes the returned SPA translation applies to.</p> <p>The SPA range defined by the input SPA + output Translated Length -1 will yield an address translation with a constant Translated NVDIMM Device List containing a constant set of NFIT Device Handles.</p>
Number of NVDIMMs	4	16	<p>The number of NVDIMM devices being returned in the list of Translated NVDIMM Devices.</p> <p>This is typically 1 for a given SPA location but for Mirrored SPA Locations, it is possible to have multiple NVDIMMs that provide the same SPA.</p>
Translated NVDIMM Device List	Varies	20	List of one or more Translated NVDIMM Devices

## Translated NVDIMM Device

**Table 9-312 Translate SPA – Translated NVDIMM Device List Output Payload Format**

Field	Byte Length	Byte Offset	Description
NFIT Device Handle	4	0	Handle to physical NVDIMM that the SPA maps to. This handle can be utilized to retrieve other NFIT table data that further describes the physical device.
Reserved	4	4	Returned as zero
DPA	8	8	DIMM Physical Address that the SPA translates to.

### 9.20.7.9 Function Index 7 - ARS Error Inject

ARS Error Inject allows the injection of an error for the memory range in the defined input payload. Input is a package containing a single buffer, where the buffer is formatted as shown in [Table 9-313](#).

#### 9.20.7.9.1 Input (Arg3)

**Table 9-313 ARS Error Inject – Input Format**

Field	Byte Length	Byte Offset	Description
ARS Error Inject SPA Range Base	8	0	Starting location from which to inject the error.
ARS Error Inject SPA Range Length	8	8	In bytes Length of the region to inject the error from. If Length makes the range cross NVDIMM SPA ranges, the system firmware implementation may report more than one ARS error record in the output buffer of the ARS Query Status _DSM function.
ARS Error Inject Options	1	16	Bit 0: Unconsumed Uncorrectable Memory Error Detected Notification. Set to 1 Firmware shall notify the OSPM. Set to 0 the notification will not occur. Bit 1: Force Overflow. Set to 1 to trigger a Query ARS Status overflow condition with this range. A value of 0 is ignored. See below for details. Bit 2: Persistent Error. Set to 1 to persist this error across reboots. These are uncorrectable errors injected to specified memory locations. Set to 0 to ensure this error is cleared on reboot. Bits 7-3: Reserved.

OSPM can trigger a Query ARS Status overflow condition by setting the Force Overflow bit (bit 1) in the ARS Error Inject Options in the input structure.

If the Force Overflow bit is set to 0 then the platform may still trigger an overflow condition if necessary (e.g. the number of error records to return from Query ARS Status exceeds Query ARS Status Data Size).

The typical sequence to force an overflow condition is as follows:

1. OSPM calls ARS Error Inject to inject an error for a particular range and sets the following fields in the input structure:
  - a. ARS Error Inject Options bit 0 to 0 so that the Unconsumed Uncorrectable Memory Error Detected notification does not occur for this range.
  - b. ARS Error Inject Options bit 1 set to 1 to indicate system firmware should force an overflow condition when it encounters this range.
2. OSPM injects a second error with ARS Error inject, setting ARS Error Inject Options bit 0 to 1 and clearing bit 1 to 0.
3. System firmware notifies the OSPM of the new errors with the Unconsumed Uncorrectable Memory Error Detected notification.
4. OSPM calls Query ARS Status in response to the notification.
5. When system firmware encounters the first injected range, it sees that ARS Error Inject Options bit 1 was set and sets Flags bit 0 to 1 in the output ARS Data to indicate an overflow condition. System firmware also sets the Restart ARS Start SPA Address and Restart ARS Length accordingly.
6. OSPM calls Start ARS with the following fields set in the input structure:
  - a. Flags bit 1 set to 1 to indicate it does not want to initiate a new scrub.
  - b. ARS Start SPA Address set to the Restart ARS Start SPA Address from the Query ARS Status output.
  - c. ARS Length set to the Restart ARS Length from the Query ARS Status output.
7. OSPM calls Query ARS Status.
8. System firmware returns the second injected range.

When the Persistent Error bit is set, the error range and the ARS Error Inject Options bits should persist across reboots.

### 9.20.7.9.2 Output

Return Value for this function is a buffer formatted as shown in [Table 9-314](#).

**Table 9-314 ARS Error Inject – Output Format**

Field	Byte Length	Byte Offset	Description
Status	2	0	Bytes[1-0] 0 – Success 1 – Not Supported. The ARS Error Inject method is not supported by the platform. 2 – Invalid Input Parameters. Platform reports that the SPA range parameters passed to the ARS Error Inject method are invalid or if notification is not supported.
Extended Status	2	2	Reserved

### 9.20.7.10 Function Index 8 - ARS Error Inject Clear

ARS Error Clear allows the clearing of the injected error state in the persistent memory range in the defined input payload.

#### 9.20.7.10.1 Input (Arg3)

Input is a package containing a single buffer, where the buffer is formatted as shown in [Table 9-315](#).

**Table 9-315 ARS Error Inject Clear – Input Format**

Field	Byte Length	Byte Offset	Description
ARS Error Inject Clear SPA Range Base	8	0	
ARS Error Inject Clear SPA Range Length	8	8	In bytes

#### 9.20.7.10.2 Output

Return Value for this function is a buffer formatted as shown in [Table 9-316](#).

**Table 9-316 ARS Error Inject Clear – Output Format**

Field	Byte Length	Byte Offset	Description
Status	2	0	Bytes[1-0] 0 – Success 1 – Not Supported. The ARS Error Inject Clear method is not supported by the platform. 2 – Invalid Input Parameters. Platform reports that the SPA range parameters passed to the ARS Error Inject method are invalid or the specified range does not have an injected error.
Extended Status	2	2	Reserved

### 9.20.7.11 Function Index 9 - ARS Error Inject Status Query

The maximum buffer size returned by the ARS Error Inject Status Query function is the same as the Max Query ARS Status Output Buffer Size reported by the Query ARS Capabilities function.

This ARS Error Inject Status Query allows the OSPM to list the currently active injected errors in the persistent memory ranges presented in the output buffer payload.

#### 9.20.7.11.1 Input (Arg3)

None.

#### 9.20.7.11.2 Output

Return Value for this function is a buffer, formatted as shown below.

**Table 9-317 ARS Error Inject Status Query – Output Format**

Field	Byte Length	Byte Offset	Description
Status	2	0	Bytes[1-0] 0 – Success. 1 – Not Supported. The ARS Error Inject Status Query method is not supported by the platform.
Extended Status	2	2	Reserved
Injected Error Record Count	4	4	Number of Error Records in the following array of Error Records. If no ARS injected error, the Injected Error Count field is 0.
ARS Error Inject Status Query Error Records	Varies	8	Refer to <a href="#">Table 9-318</a> , ARS Error Inject Status Query – Error Record Format for the format of the ARS Error Inject Status Query Error Record.

The ARS Error Status Query Error Record is defined as follows.

**Table 9-318 ARS Error Inject Status Query – Error Record Format**

Field	Byte Length	Byte Offset	Description
ARS Error Inject Status Query Error Record SPA Range Base	8	0	Starting SPA range of an injected error.
ARS Error Inject Status Query Error Record SPA Range Length	8	8	Length in bytes of the injected error starting at the SPA range.

### 9.20.7.12 Function Index 0xA – Query ARS Error Inject Capabilities

Query ARS Error Inject Capabilities is used by software to detect the system platforms capabilities related to injecting ARS errors.

#### 9.20.7.12.1 Function Input (Arg3)

None.

### 9.20.7.12.2 Function Output

**Table 9-319 ARS Error Inject Options Support**

Field	Byte Length	Byte Offset	Description
Status	2	0	Defined in <a href="#">Table 9-299</a>
Extended Status	2	2	Reserved
Platform Support	4	4	Bit 0: Injected ARS Error Persistence. This bit only applies if Bit 2 of the ARS Error Inject Options Support, Persistent Error Support, is 0. If set to 1, all injected ARS errors persist across reboots and the OSPM must explicitly clear them. These are uncorrectable errors injected to specified memory locations. If set to 0, all injected ARS errors are cleared on reboot. Bits 31-1: Reserved
ARS Error Inject Options Support	1	8	Bit 0: Unconsumed Uncorrectable Memory Error Detected Notification Support. If set to 1, indicates system platform supports Bit 0 in the ARS Error Inject Options field in the ARS Error Inject input structure. Bit 1: Force Overflow Support. If set to 1, indicates system platform supports Bit 1 in the ARS Error Inject Options field in the ARS Error Inject input structure. Bit 2: Persistent Error Support. If set to 1, indicates system platform supports Bit 2 in the ARS Error Inject Options field in the ARS Error Inject input structure. Bits 7-3: Reserved

### 9.20.8 NVDIMM Device Methods

The return status codes for NVDIMM device methods is described in the following table.

**Table 9-320 NVDIMM Device Method Return Status Code**

Field	Byte Length	Byte Offset	Description
Status	2	0	0 – Success 1 – Not Implemented 2 – Invalid Input Parameters 3 – Hardware Error 4 – Retry Suggested 5 – Error – Unknown Reason 6 – Method Specific Error Code 7 – FFFFh Reserved
Extended Status	2	2	Method Specific

### 9.20.8.1 \_NCH (Get NVDIMM Current Health Information)

This method provides current health information of the NVDIMM device. The platform notifies OSPM by NVDIMM Device NFIT Health Event Notification (see [Table 5-174](#)) whenever anything happens that can impact health of NVDIMM device (see [Table 9-321](#)). When OSPM receives the notification, it can get the current health information by calling this method. Regardless of health notification, OSPM can call this method at any time to get the current health of the NVDIMM device.

During boot time, the OSPM can call this method to get the current health of NVDIMM device and take appropriate action. During OSPM runtime, if a health problem gets corrected then also the platform shall notify OSPM by the NVDIMM Device NFIT Health Event Notification.

#### Arguments:

None

#### Return Value:

A buffer containing the current health information as described below

#### Return Value Information:

**Table 9-321 \_NCH Return Value**

Field	Byte Length	Byte Offset	Description
Status	2	0	See <a href="#">Table 9-320</a>
Extended Status	2	2	Reserved
Validation Flags	2	4	Bit [0] – Set to 1 to indicate that the Overall Health Status Flags field is valid. This bit is set to 1. Bit [1] – Set to 1 to indicate that the Overall Health Status Attributes field is valid. Bit [2-15] – Reserved

			Multiple bits may be set as appropriate. A bit set to 0 means the respective health problem does not exist or the bit is not applicable to the NVDIMM. If all bits are 0, the NVDIMM is healthy.  Bit [0] – MAINTENANCE NEEDED. This bit is set to 1 to indicate that maintenance is required e.g. temperature alarm tripped, energy source lifetime alarm tripped.  Bit [1] – PERFORMANCE DEGRADED. This bit is set to 1 to indicate that performance is degraded.  Bit [2-7] - Reserved  Following bits indicate situations where the OSPM should assume write persistency loss but reads still function properly:  Bit [8] – WRITE PERSISTENCY LOSS IN EVENT OF POWER LOSS. This bit is set to 1 to indicate that the OSPM should assume that all the writes since last time the NVDIMM was brought online may be lost in event of power loss.  Bit [9] – WRITE PERSISTENCY LOSS IN EVENT OF OFFLINE. This bit is set to 1 to indicate that the OSPM should assume that all the writes since last time the NVDIMM was brought online may be lost when any subsequent offline operation is attempted.  Bit [10] – WRITE PERSISTENCY LOSS IMMINENT. This bit is set to 1 to indicate that the OSPM should assume that subsequent writes may not persist.  Bit [11-15] - Reserved  Following bits indicate situations where the OSPM should assume all data loss:  Bit [16] - ALL DATA LOSS IN THE EVENT OF POWER LOSS. This bit is set to 1 to indicate that the OSPM should assume that all data may be lost in the event of power loss.  Bit [17] – ALL DATA LOSS IN THE EVENT OF OFFLINE. This bit is set to 1 to indicate that the OSPM should assume that all data may be lost when any subsequent offline operation is attempted.  Bit [18] – ALL DATA LOSS IMMINENT. This bit is set to 1 to indicate that the OSPM should assume that subsequent reads may fail or return invalid data and subsequent writes may not persist.  Bit [19-31] – Reserved
Overall Health Status Attributes	4	10	Bit [0] – PERMANENT HEALTH CONDITION - This bit is set to 1 to indicate that the health problem(s) reported in Overall Health Status Flags are permanent. If all the bits of Overall Health Status Flags are 0's, then NVDIMM is healthy and this bit shall be ignored by OSPM.  Bit [1-31] – Reserved
Reserved	50	14	Reserved

*Note: These fields do not track data loss during the previous shutdown or any failures during boot time. If the condition that caused those failures still exists when \_NCH method is called, then platform shall reflect appropriately in the fields of this method.*

### 9.20.8.2 \_NBS (Get NVDIMM Boot Status)

This method provides information about NVDIMM device's status at boot time. The information provided by this method is updated by the platform during boot and remains unchanged during runtime.

#### Arguments:

None

#### Return Value:

A buffer containing device boot status information as described below

#### Return Value Information:

**Table 9-322 \_NBS Return Value**

Field	Byte Length	Byte Offset	Description
Status	2	0	See <a href="#">Table 9-320</a>
Extended Status	2	2	Reserved
Validation Flags	2	4	Bit [0] – Set to 1 to indicate that Data Loss Count field is valid. This bit is set to 1. Bit [1-15] – Reserved
Data Loss Count	4	6	A monotonically increasing counter which is incremented whenever the NVDIMM device fails to save and/or flush data to the persistent media. This also includes any data corruption or loss which is not signaled to the OSPM by any other architected means.  This counter is intended for the OSPM to compare against one previously saved by the OSPM in determining the possibility of catastrophic data loss. For example, since data loss counter is monotonically increasing, OSPM can detect data loss if another OSPM was booted on the machine between the shutdown and boot of the original OSPM.
Reserved	54	10	Reserved

### 9.20.8.3 \_NIC (Get NVDIMM Health Error Injection Capabilities)

This method reports health error injection capabilities that are supported by the platform. The health errors mentioned in table 9-320 are same as those mentioned in \_NCH method (see Section 10.20.8.1).

#### Arguments:

None

#### Return Value:

See [Table 9-323](#) below.

**Table 9-323 \_NIC Output Buffer**

Field	Byte Length	Byte Offset	Description
Status	2	0	See <a href="#">Table 9-320</a>
Extended Status	2	2	Reserved
Health Error Injection Capabilities	4	4	<p>A bit is set to 1 if the respective health error injection is supported, otherwise the bit is set to 0.</p> <p>Bit [0] – MAINTENANCE NEEDED</p> <p>Bit [1] – PERFORMANCE DEGRADED</p> <p>Bit [2-7] - Reserved</p> <p>Bit [8] – WRITE PERSISTENCY LOSS IN EVENT OF POWER LOSS</p> <p>Bit [9] – WRITE PERSISTENCY LOSS IN EVENT OF OFFLINE</p> <p>Bit [10] – WRITE PERSISTENCY LOSS IMMINENT</p> <p>Bit [11-15] - Reserved</p> <p>Bit [16] - ALL DATA LOSS IN THE EVENT OF POWER LOSS</p> <p>Bit [17] – ALL DATA LOSS IN THE EVENT OF OFFLINE</p> <p>Bit [18] – ALL DATA LOSS IMMINENT</p> <p>Bit[19-31] – Reserved</p>
Overall Health Status Attributes Capabilities	4	8	<p>Bit [0] – PERMANENT HEALTH CONDITION. This bit is set to 1 if permanent health errors can be injected, otherwise the bit is set to 0.</p> <p>Bit [1-31] – Reserved</p>
Reserved	52	12	

#### 9.20.8.4 \_NIH (NVDIMM Inject/Clear Health Errors)

This method has two modes: Inject mode and Clear mode. The OSPM should use this method for health error injection only after verifying that the NVDIMM device has no real health errors.

In Inject mode, the OSPM can request the platform to:

- inject one or more health errors
- set one or more “Overall Health Status Attributes”

The OSPM can request either or both the items mentioned above in a single call. Unless errors are cleared, the platform shall accumulate the injected errors and attributes through subsequent calls of this method.

If platform can inject at least one error or set at least one attribute, then the platform shall send NVDIMM Device Health Event Notification if supported (see [Table 5-174](#)). The OSPM can call \_NCH (see [Section 9.20.8.1](#)) and the platform shall report the currently injected errors and attributes in the return buffer.

If a platform can inject only a subset of OSPM requested errors or set only a subset of OSPM requested attributes, then the platform shall return an output buffer with Status set to 6 (see [Table 9-320](#)) and Extended Status set to 1 (see [Table 9-325](#)). At that time, the OSPM can call the \_NIG method (see

[Section 9.20.8.5](#)) to get currently injected errors. If the OPSM requests to inject errors which is already injected, then the platform shall return Success. If the OPSM requests to inject an error or set an attribute which is not supported by method \_NIC, then that method shall return output buffer with Status set to 2 (see [Table 9-320](#)).

The impact of the injected errors on fields reported by the method \_NCH, NVDIMM State Flags of NVDIMM Region Mapping Structure (see [Table 5-133](#)) and on fields reported by NVDIMM device method \_NBS (see [Section 9.20.8.2](#)) after a reset is implementation specific.

In Clear mode, the OPSM can request the platform to:

clear one or more currently injected errors

- clear one or more “Overall Health Status Attributes” of currently injected error(s)
- The OPSM can request either or both the items mentioned above in a single call.

If platform can clear at least one error or one attribute, then it shall send NVDIMM Device Health Event Notification (see [Table 5-174](#)) if supported. The OPSM can call \_NCH (see [Section 9.20.8.1](#)) and the platform shall report any remaining injected errors and the attributes in the return buffer.

If a platform can clear only a subset of OPSM requested errors and attributes, then the platform shall return an output buffer with Status set to 6 (see [Table 9-320](#)) and Extended Status set to 1 (see [Table 9-325](#)). At that time, the OPSM can call \_NIG method (see [Section 9.20.8.5](#)) to get currently injected errors. If the OPSM requests to clear error(s) which are not currently injected or requests to clear attribute(s) which are not currently set, then the platform shall return Success. If the OPSM requests to clear an error or clear an attribute which is not supported by method \_NIC, then this method shall return output buffer with Status set to 2 (see [Table 9-320](#)).

One implementation of the health error injection is to emulate at firmware level without injecting any errors in real hardware.

#### Arguments:

**Table 9-324 \_NIH Input Buffer**

Field	Byte Length	Byte Offset	Description
Mode	1	0	0 – Reserved 1 – Inject error(s) 2 – Clear error(s) 3 – 255 – Reserved
Reserved	3	1	Reserved

Overall Health Status Errors	4	4	<p>These bits are used to inject/clear health error(s) reported by _NIC method (see Section 9.20.8.4). If Mode is set to 1, a bit is set to 1 to inject the respective error. OSPM can set one or more error bits to 1.</p> <p>If Mode is set to 2, a bit is set to 1 to clear the respective error. OSPM can set one or more error bits to 1.</p> <p>Bit [0] – MAINTENANCE NEEDED      Bit [1] – PERFORMANCE DEGRADED      Bit [2-7] – Reserved      Bit [8] – WRITE PERSISTENCY LOSS IN EVENT OF POWER LOSS      Bit [9] – WRITE PERSISTENCY LOSS IN EVENT OF OFFLINE      Bit [10] – WRITE PERSISTENCY LOSS IMMINENT      Bit [11-15] – Reserved      Bit [16] - ALL DATA LOSS IN THE EVENT OF POWER LOSS      Bit [17] – ALL DATA LOSS IN THE EVENT OF OFFLINE      Bit [18] – ALL DATA LOSS IMMINENT      Bit [19-31] – Reserved</p>
Overall Health Status Attributes	4	8	<p>Bit [0] – PERMANENT HEALTH CONDITION. If Mode is set to 1, this bit is set to 1 to inject health errors as permanent errors, otherwise the bit is set to 0. If Mode is set to 2, this bit is set to 1 to clear the “Permanent Health Condition” of the injected errors.</p> <p>Bit [1-31] – Reserved</p>
Reserved	52	12	Reserved

**Return Value:****Table 9-325 \_NIH Output Buffer**

Field	Byte Length	Byte Offset	Description
Status	2	0	Set <a href="#">Table 9-320</a>
Extended Status	2	2	<p>0 – Reserved</p> <p>1 – If Mode is 1, only a subset of requested errors is injected or only a subset of requested attributes is set. If Mode is 2, only a subset of requested errors is cleared or only a subset of requested attributes is cleared.</p> <p>2 – FFFFh Reserved</p>

**9.20.8.5 \_NIG (Get NVDIMM Inject Health Error Status)**

This method reports currently active health errors and their error attributes that are injected by NVDIMM device method \_NIH (see [Section 9.20.8.4](#)).

**Arguments:**

None

**Return Value:****Table 9-326 \_NIG Output Buffer**

Field	Byte Length	Byte Offset	Description
Status	2	0	See <a href="#">Table 9-320</a>
Extended Status	2	2	Reserved
Validation Flags	2	4	<p>Bit [0] – Set to 1 to indicate that the “Injected Overall Health Status Flags” field is valid. This bit is set to 1.</p> <p>Bit [1] – Set to 1 to indicate that the “Overall Health Status Attributes of Injected Errors” field is valid.</p> <p>Bit [2-15] – Reserved</p>
Injected Overall Health Status Errors	4	6	<p>If a bit is set to 1 then the respective error is currently injected.</p> <p>Bit [0] – MAINTENANCE NEEDED</p> <p>Bit [1] – PERFORMANCE DEGRADED</p> <p>Bit [2-7] - Reserved</p> <p>Bit [8] – WRITE PERSISTENCY LOSS IN EVENT OF POWER LOSS</p> <p>Bit [9] – WRITE PERSISTENCY LOSS IN EVENT OF OFFLINE</p> <p>Bit [10] – WRITE PERSISTENCY LOSS IMMINENT</p> <p>Bit [11-15] - Reserved</p> <p>Bit [16] - ALL DATA LOSS IN THE EVENT OF POWER LOSS</p> <p>Bit [17] – ALL DATA LOSS IN THE EVENT OF OFFLINE</p> <p>Bit [18] – ALL DATA LOSS IMMINENT</p> <p>Bit [19-31] – Reserved</p>
Overall Health Status Attributes of Injected Errors	4	10	<p>Bit [0] – PERMANENT HEALTH CONDITION. This bit is set to 1 to indicate that the injected error(s) are permanent health error(s), otherwise the bit is set to 0.</p> <p>Bit [1-31] – Reserved</p>
Reserved	50	14	Reserved

# 10 Power Source and Power Meter Devices

---

This section specifies the battery, AC adapter, and power source device objects OSPM uses to manage power resources, as well as the power meter device objects OSPM uses to measure power consumption.

A battery device is required to either have a Smart Battery subsystem or a Control Method Battery interface as described in this section. OSPM is required to be able to connect and manage a battery on either of these interfaces. This section describes these interfaces.

In the case of a compatible ACPI Smart Battery Table, the Definition Block needs to include a Bus/Device package for the SMB-HC. This will install an OS-specific driver for the SMBus, which in turn will locate the components of the Smart Battery subsystem. In addition to the battery or batteries, the Smart Battery subsystem includes a charger and a manager device to handle subsystems with multiple batteries.

The Smart Battery System Manager is one implementation of a manager device that is capable of arbitrating among the available power sources (AC power and batteries) for a system. It provides a superset of the Smart Battery Selector functionality, such as safely responding to power events (AC versus battery power), inserting and removing batteries and notifying the OS of all such changes. Additionally, the Smart Battery System Manager is capable of handling configurations including simultaneous charging and discharging of multiple batteries. Unlike the Smart Battery Selector that shares responsibility for configuring the battery system with OSPM, the Smart Battery System Manager alone controls the safe configuration of the battery system and simply issues status changes to OSPM when the configuration changes. Smart Battery System Manager is the recommended solution for handling multiple-battery systems.

A Power Meter device is the logical representation of a platform sensor that measures the power consumption of one or more devices in the system. A basic platform implementation implements interfaces that query the current power consumption and get the currently configured power consumption hardware limit, while more advance power meter device implementations provide interfaces that support OSPM configurable power consumption trip points that trigger SCI events, or enable configuration of the underlying hardware to enforce a hard limit on the maximum amount of power that can be consumed.

## 10.1 Smart Battery Subsystems

The Smart Battery subsystem is defined by the:

- System Management Bus Specification (SMBS)
- Smart Battery Data Specification (SBDS)
- Smart Battery Charger Specification (SBCS)
- Smart Battery System Manager Specification (SBSM)
- Smart Battery Selector Specification (SBSS)

An ACPI-compatible Smart Battery subsystem consists of:

- An SMB-HC (CPU to SMB-HC) interface
- At least one Smart Battery
- A Smart Battery Charger

- Either a Smart Battery System Manager or a Smart Battery Selector if more than one Smart Battery is supported

In such a subsystem, a standard way of communicating with a Smart Battery and Smart Battery Charger is through the SMBus physical protocols. The Smart Battery System Manager or Smart Battery Selector provides event notification (battery insertion/removal, and so on) and charger SMBus routing capability for any Smart Battery subsystem. A typical Smart Battery subsystem is illustrated below:

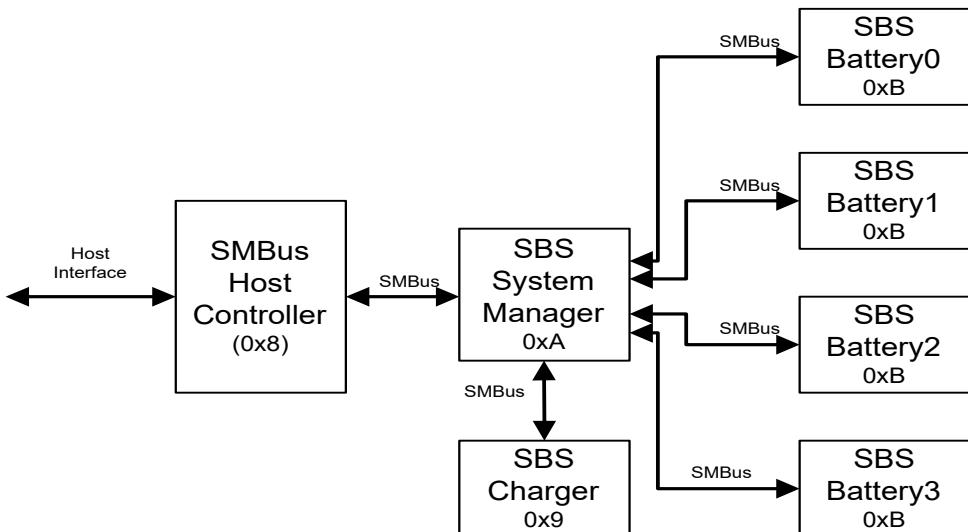


Figure 10-55 Typical Smart Battery Subsystem (SBS)

SMBus defines a fixed 7-bit slave address per device. This means that all batteries in the system have the same address (defined to be 0xB). The slave addresses associated with Smart Battery subsystem components are shown in the following table.

Table 10-327 Example SMBus Device Slave Addresses

SMBus Device Description	SMBus Slave Address (A0-A6)
SMBus Host Slave Interface	0x8
Smart Battery Charger/Charger Selector or Charger System Manager	0x9
Smart Battery System Manager or Smart Battery Selector	0xA
Smart Battery	0xB

Each SMBus device has up to 256 registers that are addressed through the SMBus protocol's *Command* value. SMBus devices are addressed by providing the slave address with the desired register's *Command* value. Each SMBus register can have non-linear registers; that is, command register 1 can have a 32-byte string, while command register 2 can have a byte, and command register 3 can have a word.

The SMBus host slave interface provides a standard mechanism for the host CPU to generate SMBus protocol commands that are required to communicate with SMBus devices (in other words, the Smart Battery components). ACPI defines such an SMB-HC that resides in embedded controller address space; however, an OS can support any SMB-HC that has a native SMB-HC device driver.

- Event notification for battery insertion and removal

- Event notification for AC power connected or disconnected
- Status of which Smart Battery is communicating with the SMB-HC
- Status of which Smart Battery(s) are powering the system
- Status of which Smart Battery(s) are connected to the charger
- Status of which Smart Batteries are present in the system
- Event notification when the Smart Battery System Manager switches from one power source to another
- Hardware-switching to an alternate Smart Battery when the Smart Battery supplying power runs low
- Hardware switching between battery-powered and AC-powered powered operation
- 

The Smart Battery System Manager function can reside in a standalone SMBus slave device (Smart Battery System Manager that responds to the 0xA slave address), may be present within a smart charger device (Smart Battery Charger that responds to the 0x9 slave address), or may be combined within the embedded controller (that responds to the 0xA slave address). If both a Smart Battery Charger and a standalone Smart Battery System Manager are present in the same Smart Battery subsystem, then the driver assumes that the standalone Smart Battery System Manager is wired to the batteries.

The Smart Battery charger is an SMBus device that provides a standard programming model to control the charging of Smart Batteries present in a Smart Battery subsystem. For single battery systems, the Smart Battery Charger is also responsible for notifying the system of the battery and AC status.

The Smart Battery provides intelligent chemistry-independent power to the system. The Smart Battery is capable of informing the Smart Battery charger of its charging requirements (which provides chemistry independence) and providing battery status and alarm features needed for platform battery management.

### **10.1.1 ACPI Smart Battery Status Change Notification Requirements**

The Smart Battery System Manager, the Smart Battery Selector, and the Smart Battery Charger each have an optional mechanism for notifying the system that the battery configuration or AC status has changed. ACPI requires that this interrupt mechanism be through the SMBus Alarm Notify mechanism.

For systems using an embedded controller as the SMBus host, a battery system device issues a status change notification by either mastering the SMBus to send the notification directly to the SMBus host, or by emulating it in the embedded controller. In either case, the process is the same. After the notification is received or emulated, the embedded controller asserts an SCI. The source of the SCI is identified by a GPE that indicates the SCI was caused by the embedded controller. The embedded controller's status register alarm bit is set, indicating that the SMBus host received an alarm message. The Alarm Address Register contains the address of the SMBus device that originated the alarm and the Alarm Data Registers contain the contents of that device's status register.

#### **10.1.1.1 Smart Battery Charger**

This requires a Smart Battery Charger, on a battery or AC status change, to generate an SMBus Alarm Notify. The contents of the Smart Battery Charger's ChargerStatus() command register (0x13) is placed in the embedded controller's Alarm Data Registers, the Smart Battery Charger's slave address<sup>1</sup> (0x09) is placed in the embedded controller's Alarm Address Register and the EC's Status Register's Alarm bit is set. The embedded controller then asserts an SCI.

### 10.1.1.2 Smart Battery Charger with optional System Manager or Selector

A Smart Battery Charger that contains the optional System Manager or Selector function (as indicated by the ChargerSpecInfo() command register, 0x11, bit 4) is required to generate an SMBus Alarm Notify on a battery or AC status change. The content of the Smart Battery Charger with an optional System Manager, the BatterySystemState() command register (0x21) (or in the case of an optional Selector, the SelectorState() (0x01)), is placed in the EC's Alarm Data Registers, the Smart Battery Charger's slave address (0x09) is placed in the embedded controller's Alarm Address Register, and the embedded controller's Status Register's Alarm bit is set. The embedded controller then asserts an SCI.

### 10.1.1.3 Smart Battery System Manager

The Smart Battery System Manager is required to generate an SMBus Alarm Notify on a battery or AC status change. The content of the Smart Battery System Manager's BatterySystemState() command register (0x01) is placed in the EC's Alarm Data Registers, the Smart Battery System Manager's slave address (0x0A) is placed in the EC's Alarm Address Register, and the embedded controller's Status Register's Alarm bit is set. The embedded controller then asserts an SCI.

### 10.1.1.4 Smart Battery Selector

The requirements for the Smart Battery Selector are the same as the requirements for the Smart Battery System Manager, with the exception that the contents of the SelectorState() command register (0x01) are used instead of BatterySystemState(). The Smart Battery Selector is a subset of the Smart Battery System Manager and does not have the added support for simultaneous charge/discharge of multiple batteries. The System Manager is the preferred implementation.

## 10.1.2 Smart Battery Objects

The Smart Battery subsystem requires a number of objects to define its interface. These are summarized below:

**Table 10-328 Smart Battery Objects**

Object	Description
_HID	This is the hardware ID named object that contains a string. For Smart Battery subsystems, this object returns the value of "ACPI0002." This identifies the Smart Battery subsystem to the Smart Battery driver.
_SBS	This is the Smart Battery named object that contains a DWORD. This named object returns the configuration of the Smart Battery.

### 10.1.3 \_SBS (Smart Battery Subsystem)

The \_SBS control method returns the configuration of the Smart Battery subsystem. This named object returns a DWORD value with a number from 0 to 4. If the number of batteries is greater than 0, then the

- 
1. Notice that the 1.0 SMBus protocol specification is ambiguous about the definition of the "slave address" written into the command field of the host controller. In this case, the slave address is actually the combination of the 7-bit slave address and the Write protocol bit. Therefore, bit 0 of the initiating device's slave address is aligned to bit 1 of the host controller's slave command register, bit 1 of the slave address is aligned to bit 2 of the controller's slave command register, and so on.

Smart Battery driver assumes that a Smart Battery System Manager or Smart Battery Selector is present. If 0, then the Smart Battery driver assumes a single Smart Battery and neither a Smart Battery System Manager nor Smart Battery Selector is present.

The DWORD returned by `_SBS` is encoded as follows:

- 0 – Maximum of one Smart Battery and no Smart Battery System Manager or Smart Battery Selector.
- 1 – Maximum of one Smart Battery and a Smart Battery System Manager or Smart Battery Selector.
- 2 – Maximum of two Smart Batteries and a Smart Battery System Manager or Smart Battery Selector.
- 3 – Maximum of three Smart Batteries and a Smart Battery System Manager or Smart Battery Selector.
- 4 – Maximum of four Smart Batteries and a Smart Battery System Manager or Smart Battery Selector.

### **Arguments:**

None

### **Return Value:**

An **Integer** containing the Smart Battery subsystem configuration:

- 0 – Maximum 1 Smart Battery, system manager/selector not present
- 1 – Maximum 1 Smart Battery, system manager/selector present
- 2 – Maximum 2 Smart Batteries, system manager/selector present
- 3 – Maximum 3 Smart Batteries, system manager/selector present
- 4 – Maximum 4 Smart Batteries, system manager/selector present


The maximum number of batteries is for the entire system. Therefore, if the platform is capable of supporting four batteries, but only two are normally present in the system, then this field should return 4. Notice that a value of 0 indicates a maximum support of one battery and there is no Smart Battery System Manager or Smart Battery Selector present in the system

As the SMBus is not an enumerable bus, all devices on the bus must be declared in the ACPI name-space. As the Smart Battery driver understands Smart Battery, Smart Battery Charger, and Smart Battery System Manager or Smart Battery Selector; only a single device needs to be declared per Smart Battery subsystem. The driver gets information about the subsystem through the hardware ID (which defines a Smart Battery subsystem) and the number of Smart Batteries supported on this subsystem (`_SBS` named object). The ACPI Smart Battery table indicates the energy levels of the platform at which the system should warn the user and then enter a sleeping state. The Smart Battery driver then reflects these as threshold alarms for the Smart Batteries.

A Smart Battery device declaration in the ACPI namespace requires the `_GLK` object if potentially contentious accesses to device resources are performed by non-OS code. See [Section 6.5.7 “`\_GLK` \(Global Lock\),](#) for details about the `_GLK` object.

### 10.1.3.1 Example: Single Smart Battery Subsystem

This section illustrates how to define a Smart Battery subsystem containing a single Smart Battery and charger. The platform implementation is illustrated below:

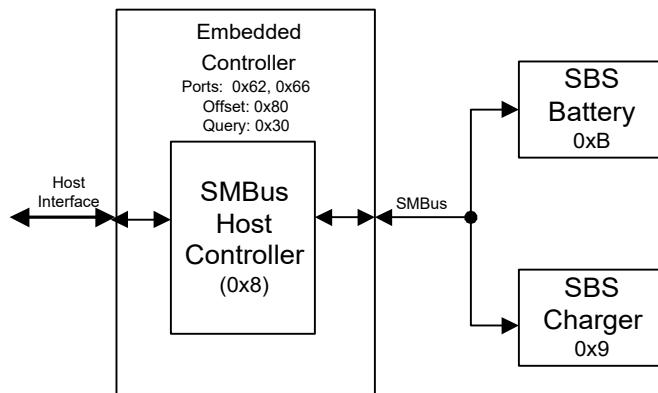

**Figure 10-56 Single Smart Battery Subsystem**

In this example, the platform is using an SMB-HC that resides within the embedded controller and meets the ACPI standard for an embedded controller interface and SMB-HC interface. The embedded controller interface sits at system I/O port addresses 0x62 and 0x66. The SMB-HC is at base address 0x80 within embedded controller address space (as defined by the ACPI embedded controller specification) and responds to events on query value 0x30.


In this example the Smart Battery subsystem only supports a single Smart Battery. The ASL code for describing this interface is shown below:

```

Device (EC0) {
    Name (_HID, EISAID("PNPOC09"))
    Name (_CRS,
        ResourceTemplate () { // port 0x62 and 0x66
            IO (Decode16, 0x62, 0x62, 0, 1),
            IO (Decode16, 0x66, 0x66, 0, 1)
        }
    )
    Name (_GPE, 0)
    Device (SMBO) {
        Name (_HID, "ACPI 0001") // Smart Battery Host Controller
        Name (_EC, 0x8030) // EC offset (0x80), Query (0x30)
        Device (SBS0){
            Name (_HID, "ACPI 0002") // Smart Battery Subsystem ID
            Name (_SBS, 0x1) // Indicates support for one battery
        } // end of SBS0
    } // end of SMBO
} // end of EC
  
```

### 10.1.3.2 Multiple Smart Battery Subsystem: Example

This section illustrates how to define a Smart Battery subsystem that contains three Smart Batteries, a Smart Battery System Manager, and a Smart Battery Charger. The platform implementation is illustrated below:

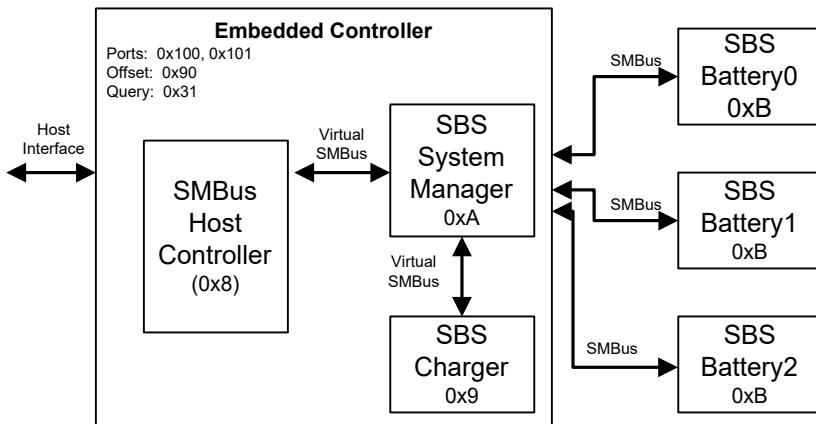

**Figure 10-57 Smart Battery Subsystem**

In this example, the platform is using an SMB-HC that resides within the embedded controller and meets the ACPI standard for an embedded controller interface and SMB-HC interface. The embedded controller interface sits at system I/O port addresses 0x100 and 0x101. The SMB-HC resides at base address 0x90 within embedded controller address space (as defined by the ACPI embedded controller specification) and responds to events on query value 0x31.

In this example the Smart Battery subsystem supports three Smart Batteries. The Smart Battery Charger and Smart Battery System Manager reside within the embedded controller, meet the Smart Battery System Manager and Smart Battery Charger interface specification, and respond to their 7-bit addresses (0xA and 0x9 respectively). The ASL code for describing this interface is shown below:

```

Device (EC1) {
    Name (_HID, EISAID("PNPOC09"))
    Name (_CRS,
        ResourceTemplate () {
            IO(Decode16, 0x100, 0x100, 0, 2)
        }
    )
    Name (_GPE, 1)
    Device (SMB1) {
        Name (_HID, "ACPI 0001")
        Name (_EC, 0x9031)
        Device (SBS1){
            Name (_HID, "ACPI 0002")
            Name (_SBS, 0x3)
        } // end of SBS1
    } // end of SMB1
}
  
```

// Smart Battery Host Controller  
 // EC offset (0x90), Query (0x31)  
 // Smart Battery Subsystem  
 // Smart Battery Subsystem ID  
 // Indicates support for three batteries

```
} // end of EC
```

## 10.2 Control Method Batteries

The following section illustrates the operation and definition of the Control Method Battery.

### 10.2.1 Battery Events

The AML code handling an SCI for a battery event notifies the system of which battery's status may have changed. The OS uses the \_BST control method to determine the current status of the batteries and what action, if any, should be taken (for more information about the \_BST control method, see [Section 10.2.2](#), "Battery Control Methods"). The typical action is to notify applications monitoring the battery status to provide the user with an up-to-date display of the system battery state. But in some cases, the action may involve generating an alert or even forcing a system into a sleeping state. In any case, any changes in battery status should generate an SCI in a timely manner to keep the system power state UI consistent with the actual state of the system battery (or batteries).

Unlike most other devices, when a battery is inserted or removed from the system, the device itself (the battery bay) is still considered to be present in the system. For most systems, the \_STA for this device will always return a value with bits 0-3 set and will toggle bit 4 to indicate the actual presence of a battery (see [Section 6.3.7](#), "\_STA [Status]"). When this insertion or removal occurs, the AML code handler for this event should issue a **Notify(battery\_device, 0x81)** to indicate that the static battery information has changed. For systems that have battery slots in a docking station or batteries that cannot be surprise-removed, it may be beneficial or necessary to indicate that the entire device has been removed. In this case, the standard methods and notifications described in [Section 6.3](#), "Device Insertion, Removal, and Status Objects," should be used.

When the present state of the battery has changed or when the trip point set by the \_BTP control method is reached or crossed, the hardware will assert a general purpose event. The AML code handler for this event issues a **Notify(battery\_device, 0x80)** on the battery device. This notification is also sent when the Status Flags returned from \_BMD change.

In the case where the remaining battery capacity becomes critically low, the AML code handler issues a **Notify(battery\_device, 0x80)** and reports the battery critical flag in the \_BST object. The OS performs an emergency shutdown. For a full description of the critical battery state, see [Section 3.9.4](#), "Low Battery Levels."

Sometimes the value to be returned from \_BST or \_BIF will be temporarily unknown. In this case, the method may return the value 0xFFFFFFFF as a placeholder. When the value becomes known, the appropriate notification (0x80 for \_BST or 0x81 for BIF) should be issued, in like manner to any other change in the data returned by these methods. This will cause OSPM to re-evaluate the method—obtaining the correct data value.

When one or more of the status flags returned by the \_BMD control method change, AML code issues a **Notify(battery\_device, 0x82)** on the battery device unless this change occurs during a call to \_BMC and the value of the status flags in \_BMD match the value passed in to \_BMC. If the value of the status bits cannot be set to reflect the action requested by the executing \_BMC, the AML code will issue this notification. For example, calling \_BMC with bit 0 set to initiate a calibration cycle while AC power is not available will cause AML to issue a **Notify(battery\_device, 0x82)**.

## 10.2.2 Battery Control Methods

The Control Method Battery is a battery with an AML code interface between the battery and the host PC. The battery interface is completely accessed by AML code control methods, allowing the OEM to use any type of battery and any kind of communication interface supported by ACPI. OSPM requires accurate battery data to perform optimal power management policy and to provide the end user with a meaningful estimation of remaining battery life. As such, control methods that return battery information should calculate this information rather than return hard coded data.

A Control Method Battery is described as a device object. Each device object supporting the Control Method Battery interface contains the following additional control methods. When there are two or more batteries in the system, each battery will have an independent device object in the namespace.

**Table 10-329 Battery Control Methods**

Object	Description
_BIF	Returns static information about a battery (in other words, model number, serial number, design voltage, and so on).
_BIX	Returns extended static information about a battery (in other words, model number, serial number, design voltage, and so on).
_OSC	OSPM Capabilities conveyance for batteries.
_BMA	Sets the averaging interval of the battery capacity measurement, in milliseconds.
_BMS	Sets the sampling time of the battery capacity measurement, in milliseconds.
_BST	Returns the current battery status (in other words, dynamic information about the battery, such as whether the battery is currently charging or discharging, an estimate of the remaining battery capacity, and so on).
_BTH	Communicates battery thermal throttle limit set by battery thermal zone.
_BTP	Sets the Battery Trip point, which generates an SCI when batterycapacity reaches the specified point.
_PCL	List of pointers to the device objects representing devices powered by the battery.
_STA	Returns general status of the battery (for a description of the _STA control method, see <a href="#">Section 6.3.7, “_STA (Status)”).</a>
_BTM	Returns battery estimated runtime at the present average rate of drain, or the runtime at a specified rate.
_BCT	Returns battery estimated charging time.
_BMD	Returns battery information related to battery recalibration and charging control.
_BMC	Control calibration and charging.

A Control Method Battery device declaration in the ACPI namespace requires the \_GLK object if potentially contentious accesses to device resources are performed by non-OS code. See [Section 6.5.7, “\\_GLK \(Global Lock\),”](#) for details about the \_GLK object.

### 10.2.2.1 \_BIF (Battery Information)

This object returns the static portion of the Control Method Battery information. This information remains constant until the battery is changed. This object is deprecated in ACPI 4.0. The \_BIX object provides expanded battery information and includes all of the information provided by \_BIF. See [Section 10.2.2.2](#), “Battery Information Extended”).

#### Arguments:

None

#### **Return Value:**

A **Package** containing the battery information as described below.

#### **Return Value Information:**

\_BIF returns a package in the format below

```
Package {
    Power Unit          // Integer (DWORD)
    Design Capacity      // Integer (DWORD)
    Last Full Charge Capacity // Integer (DWORD)
    Battery Technology   // Integer (DWORD)
    Design Voltage       // Integer (DWORD)
    Design Capacity of Warning // Integer (DWORD)
    Design Capacity of Low // Integer (DWORD)
    Battery Capacity Granularity 1 // Integer (DWORD)
    Battery Capacity Granularity 2 // Integer (DWORD)
    Model Number         // String (ASCII Z)
    Serial Number        // String (ASCII Z)
    Battery Type         // String (ASCII Z)
    OEM Information      // String (ASCII Z)
}
```

**Table 10-330 BIF Return Package Values**

Field	Format	Description
Power Unit	Integer (DWORD)	Indicates the units used by the battery to report its capacity and charge/discharge rate information to the OS. 0x00000000 – Capacity information is reported in [mWh] and charge/discharge rate information in [mW]. 0x00000001 – Capacity information is reported in [mAh] and charge/discharge rate information in [mA].
Design Capacity	Integer (DWORD)	Battery's design capacity. Design Capacity is the nominal capacity of a new battery. The <i>Design Capacity</i> value is expressed as power [mWh] or current [mAh] depending on the <i>Power Unit</i> value. 0x00000000 – 0x7FFFFFFF (in [mWh] or [mAh]) 0xFFFFFFFF – Unknown design capacity

Field	Format	Description
Last Full Charge Capacity	<b>Integer</b> (DWORD)	Predicted battery capacity when fully charged. The <i>Last Full Charge Capacity</i> value is expressed as power (mWh) or current (mAh) depending on the <i>Power Unit</i> value. 0x00000000h – 0x7FFFFFFF (in [mWh] or [mAh]) 0xFFFFFFFF – Unknown last full charge capacity
Battery Technology	<b>Integer</b> (DWORD)	0x00000000 – Primary (for example, non-rechargeable) 0x00000001 – Secondary (for example, rechargeable)
Design Voltage	<b>Integer</b> (DWORD)	Nominal voltage of a new battery. 0x000000000 – 0x7FFFFFFF in [mV] 0xFFFFFFFF – Unknown design voltage
Design capacity of Warning	<b>Integer</b> (DWORD)	OEM-designed battery warning capacity. See <a href="#">Section 3.9.4</a> , “Low Battery Levels.” 0x000000000 – 0x7FFFFFFF in [mWh] or [mAh]
Design Capacity of Low	<b>Integer</b> (DWORD)	OEM-designed low battery capacity. See <a href="#">Section 3.9.4</a> , “Low Battery Levels.” 0x000000000 – 0x7FFFFFFF in [mWh] or [mAh]
Battery Capacity Granularity 1	<b>Integer</b> (DWORD)	Battery capacity granularity between low and warning in [mAh] or [mWh]. That is, this is the smallest increment in capacity that the battery is capable of measuring. See note below for more details
Battery Capacity Granularity 2	<b>Integer</b> (DWORD)	Battery capacity granularity between warning and Full in [mAh] or [mWh]. That is, this is the smallest increment in capacity that the battery is capable of measuring. This may be a different value than Battery Capacity Granularity 1 to accommodate systems where the granularity accuracy may change depending on the battery level. See note below for more details.
Model Number	<b>String</b> (ASCIIZ)	OEM-specific Control Method Battery model number
Serial Number	<b>String</b> (ASCIIZ)	OEM-specific Control Method Battery serial number
Battery Type	<b>String</b> (ASCIIZ)	The OEM-specific Control Method Battery type
OEM Information	<b>String</b> (ASCIIZ)	OEM-specific information for the battery that the UI uses to display the OEM information about the Battery. If the OEM does not support this information, this field should contain a NULL string.

## Additional Notes:

- A secondary-type battery should report the corresponding capacity (except for Unknown).
- On a multiple-battery system, all batteries in the system should return the same granularity.
- Operating systems prefer these control methods to report data in terms of power (watts).
- On a multiple-battery system, all batteries in the system must use the same power unit.
- The definition of battery capacity granularity has been clarified. For OSPM to determine if systems support the clarified definition of battery capacity granularity, OSPM may evaluate an

\_OSC method at the battery scope to indicate support for this capability, and for the platform to indicate if it supports these extended capabilities.

### 10.2.2.2 \_BIX (Battery Information Extended)

The \_BIX object returns the static portion of the Control Method Battery information. This information remains constant until the battery is changed. The \_BIX object returns all information available via the \_BIF object plus additional battery information. The \_BIF object is deprecated in lieu of \_BIX in ACPI 4.0.

#### Arguments:

None

#### **Return Value:**

A Package containing the battery information as described below

#### **Return Value Information:**

\_BIX returns a package in the format below

```
Package {
    // ASCIIIZ is ASCII character string terminated with a 0x00.
    Revision          //Integer
    Power Unit        //Integer (DWORD)
    Design Capacity   //Integer (DWORD)
    Last Full Charge Capacity //Integer (DWORD)
    Battery Technology //Integer (DWORD)
    Design Voltage    //Integer (DWORD)
    Design Capacity of Warning //Integer (DWORD)
    Design Capacity of Low //Integer (DWORD)
    Cycle Count       //Integer (DWORD)
    Measurement Accuracy //Integer (DWORD)
    Max Sampling Time //Integer (DWORD)
    Min Sampling Time //Integer (DWORD)
    Max Averaging Interval //Integer (DWORD)
    Min Averaging Interval //Integer (DWORD)
    Battery Capacity Granularity 1 //Integer (DWORD)
    Battery Capacity Granularity 2 //Integer (DWORD)
    Model Number      //String (ASCIIIZ)
    Serial Number     //String (ASCIIIZ)
    Battery Type      //String (ASCIIIZ)
    OEM Information   //String (ASCIIIZ)
    Battery Swapping Capability //Integer (DWORD)
}
```

**Table 10-331 BIX Return Package Values**

Field	Format	Description
Revision	Integer	Current revision is: 1

Field	Format	Description
Power Unit	<b>Integer</b> (DWORD)	Indicates the units used by the battery to report its capacity and charge/discharge rate information to the OS. <ul style="list-style-type: none"> <li>• 0x00000000 – Capacity information is reported in [mWh] and charge/discharge rate information in [mW].</li> <li>• 0x00000001 – Capacity information is reported in [mAh] and charge/discharge rate information in [mA].</li> </ul>
Design Capacity	<b>Integer</b> (DWORD)	Battery's design capacity. Design Capacity is the nominal capacity of a new battery. The <i>Design Capacity</i> value is expressed as power [mWh] or current [mAh] depending on the <i>Power Unit</i> value. <ul style="list-style-type: none"> <li>• 0x0000000000 – 0x7FFFFFFF (in [mWh] or [mAh] )</li> <li>• 0xFFFFFFFF – Unknown design capacity</li> </ul>
Last Full Charge Capacity	<b>Integer</b> (DWORD)	Predicted battery capacity when fully charged. The <i>Last Full Charge Capacity</i> value is expressed as power (mWh) or current (mAh) depending on the <i>Power Unit</i> value. <ul style="list-style-type: none"> <li>• 0x0000000000h – 0x7FFFFFFF (in [mWh] or [mAh] )</li> <li>• 0xFFFFFFFF – Unknown last full charge capacity</li> </ul>
Battery Technology	<b>Integer</b> (DWORD)	<ul style="list-style-type: none"> <li>• 0x00000000 – Primary (for example, non-rechargeable)</li> <li>• 0x00000001 – Secondary (for example, rechargeable)</li> </ul>
Design Voltage	<b>Integer</b> (DWORD)	Nominal voltage of a new battery. <ul style="list-style-type: none"> <li>• 0x0000000000 – 0x7FFFFFFF in [mV]</li> <li>• 0xFFFFFFFF – Unknown design voltage</li> </ul>
Design capacity of Warning	<b>Integer</b> (DWORD)	OEM-designed battery warning capacity. See <a href="#">Section 3.9.4</a> , “Low Battery Levels.” <ul style="list-style-type: none"> <li>• 0x0000000000 – 0x7FFFFFFF in [mWh] or [mAh]</li> </ul>
Design Capacity of Low	<b>Integer</b> (DWORD)	OEM-designed low battery capacity. See <a href="#">Section 3.9.4</a> , “Low Battery Levels.” <ul style="list-style-type: none"> <li>• 0x0000000000 – 0x7FFFFFFF in [mWh] or [mAh]</li> </ul>
Cycle Count	<b>Integer</b> (DWORD)	The number of cycles the battery has experienced. A cycle is defined as: An amount of discharge approximately equal to the value of Design Capacity. <ul style="list-style-type: none"> <li>• 0x0000000000 – 0xFFFFFFFF</li> <li>• 0xFFFFFFFF – Unknown cycle count</li> </ul>
Measurement Accuracy	<b>Integer</b> (DWORD)	The accuracy of the battery capacity measurement, in thousandth of a percent. (0% - 100.000%) For example, The value 80000 would mean 80% accuracy.

Field	Format	Description
Max Sampling Time	<b>Integer</b> (DWORD)	The sampling time is the duration between two consecutive measurements of the battery's capacities specified in _BST, such as present rate and remaining capacity. If the OSPM makes two succeeding readings through _BST beyond the duration, two different results will be returned.  The Max Sampling Time is the maximum sampling time the battery can support, in milliseconds.  0xFFFFFFFF is returned if the information is unavailable.
Min Sampling Time	<b>Integer</b> (DWORD)	The Min Sampling Time is the minimum sampling time the battery can support, in milliseconds.  0xFFFFFFFF is returned if the information is unavailable.
Max Averaging Interval	<b>Integer</b> (DWORD)	The Average Interval is the length of time (in milliseconds) within which the battery averages the capacity measurements specified in _BST, such as remaining capacity and present rate.  The Sampling time specifies the frequency of measurements, and the average interval specifies the width of the time window of every measurement.  This field indicates the maximum Average Interval that the battery supports.
Min Averaging Interval	<b>Integer</b> (DWORD)	This field indicates the minimum Average Interval that the battery supports
Battery Capacity Granularity 1	<b>Integer</b> (DWORD)	Battery capacity granularity between low and warning in [mAh] or [mWh]. That is, this is the smallest increment in capacity that the battery is capable of measuring. See note below for more details
Battery Capacity Granularity 2	<b>Integer</b> (DWORD)	Battery capacity granularity between warning and Full in [mAh] or [mWh]. That is, this is the smallest increment in capacity that the battery is capable of measuring. This may be a different value than Battery Capacity Granularity 1 to accommodate systems where the granularity accuracy may change depending on the battery level. See note below for more details.
Model Number	<b>String</b> (ASCIIz)	OEM-specific Control Method Battery model number
Serial Number	<b>String</b> (ASCIIz)	OEM-specific Control Method Battery serial number
Battery Type	<b>String</b> (ASCIIz)	The OEM-specific Control Method Battery type
OEM Information	<b>String</b> (ASCIIz)	OEM-specific information for the battery that the UI uses to display the OEM information about the Battery. If the OEM does not support this information, this field should contain a NULL string.

Field	Format	Description
Battery Swapping Capability	Integer (DWORD)	<ul style="list-style-type: none"> <li>• 0x00000000 Non swappable battery (for example, sealed internal battery not accessible to user)</li> <li>• 0x00000001 Cold swappable battery, i.e. batteries that require system to be shut down in order to replace the battery while on DC power (for example, phone and laptop batteries accessible to user)</li> <li>• 0x00000010 Hot swappable battery, i.e. batteries that do not require the system to be shut down in order to replace/remove the battery while on DC power (for example, accessory batteries, cd tray batteries, external batteries, dock batteries, keyboard batteries)</li> </ul>

**Note:** A secondary-type battery should report the corresponding capacity (except for Unknown).

**Note:** On a multiple-battery system, all batteries in the system should return the same granularity.

**Note:** Operating systems prefer these control methods to report data in terms of power (watts).

**Note:** On a multiple-battery system, all batteries in the system must use the same power unit.

**Note:** The definition of battery capacity granularity has been clarified. For OSPM to determine if systems support the clarified definition of battery capacity granularity, OSPM may evaluate an \_OSC method at the battery scope to indicate support for this capability, and for the platform to indicate if it supports these extended capabilities.

### 10.2.2.3 \_OSC Definition for Control Method Battery

\_OSC for control method battery is uniquely identified by the UUID:

**F18FC78B-0F15-4978-B793-53F833A1D35B**

The Revision 1 capabilities described under this \_OSC are defined in [Table 10-332](#).

**Table 10-332 Control Method Battery \_OSC Capabilities DWORD2 Bit Definitions**

Capabilities DWORD2 bits	Interpretation
0	0 – OS does not support revised battery granularity definition. 1 – OS supports revised battery granularity definition.
1	0 – OS does not support specifying wake on low battery user preference. 1 – OS supports specifying wake on low battery user preference, See <a href="#">Section 9.2.3, _BLT Battery Level Threshold</a> for more information.
2-31	Reserved

Bits defined in Capabilities DWORD2 provide information regarding OS supported features. Contents in DWORD2 are passed one-way; the OS will disregard the corresponding bits of DWORD2 in the Return Code.

### 10.2.2.4 \_BMA (Battery Measurement Averaging Interval)

This object is used to set the averaging interval of the battery capacity measurement, in milliseconds. The Battery Measurement Averaging Interval is the length of time within which the battery averages the capacity measurements specified in \_BST, such as remaining capacity and present rate.

The OSPM may read the Max Average Interval and Min Average Interval with \_BIX during boot time, and set a specific average interval within the range with \_BMA.

#### **Arguments:** (1)

Arg0 – AveragingInterval (**Integer(DWORD)**) the averaging interval of battery capacity measurement:

0x00000001 – 0xFFFFFFFF (in units of millisecond)

#### **Return Value:**

An **Integer (DWORD)** containing a result code as follows:

0x00000000 – Success.

0x00000001 – Failure to set Battery Measurement Averaging Interval because it is out of the battery's measurement capability.

0x00000002 – 0xFFFFFFFF – Reserved.

### **10.2.2.5 \_BMS (Battery Measurement Sampling Time)**

This object is used to set the sampling time of the battery capacity measurement, in milliseconds.

The Sampling Time is the duration between two consecutive measurements of the battery's capacities specified in \_BST, such as present rate and remaining capacity. If the OSPM makes two succeeding readings through \_BST beyond the duration, two different results will be returned.

The OSPM may read the Max Sampling Time and Min Sampling Time with \_BIX during boot time, and set a specific sampling time within the range with \_BMS.

#### **Arguments:** (1)

Arg0 – SamplingTime (**Integer(DWORD)**) the sampling time of battery capacity measurement:

0x00000001 – 0xFFFFFFFF (in units of millisecond)

#### **Return Value:**

An **Integer (DWORD)** containing a result code as follows:

0x00000000 – Success.

0x00000001 – Failure to set Battery Measurement Sampling Time because it is out of the battery's measurement capability.

0x00000002 – 0xFFFFFFFF – Reserved.

### **10.2.2.6 \_BST (Battery Status)**

This object returns the present battery status. Whenever the *Battery State* value changes, the system will generate an SCI to notify the OS.

#### **Arguments:**

None

#### **Return Value:**

A **Package** containing the battery status as described below

## Return Value Information:

\_BST returns a package in the format below

```
Package {
    Battery State           // Integer (DWORD)
    Battery Present Rate   // Integer (DWORD)
    Battery Remaining Capacity // Integer (DWORD)
    Battery Present Voltage // Integer (DWORD)
}
```

**Table 10-333 BST Return Package Values**

Element	Format	Description
Battery State	<b>Integer</b> (DWORD)	<p>Bit values. Notice that the <i>Charging</i> bit and the <i>Discharging</i> bit are mutually exclusive and must not both be set at the same time. Even in critical state, hardware should report the corresponding charging/discharging state.</p> <ul style="list-style-type: none"> <li>• Bit [0] – 1 indicates the battery is discharging.</li> <li>• Bit [1] – 1 indicates the battery is charging.</li> <li>• Bit [2] – 1 indicates the battery is in the critical energy state (see <a href="#">Section 3.9.4</a>, “Low Battery Levels”). This does not mean battery failure.</li> </ul>
Battery Present Rate	<b>Integer</b> (DWORD)	<p>Returns the power or current being supplied or accepted through the battery’s terminals (direction depends on the <i>Battery State</i> value). The <i>Battery Present Rate</i> value is expressed as power [mWh] or current [mAh] depending on the <i>Power Unit</i> value.</p> <p>Batteries that are rechargeable and are in the discharging state are required to return a valid <i>Battery Present Rate</i> value.</p> <ul style="list-style-type: none"> <li>• 0x00000000 – 0x7FFFFFFF in [mW] or [mA]</li> <li>• 0xFFFFFFFF – Unknown rate</li> </ul>
Battery Remaining Capacity	<b>Integer</b> (DWORD)	<p>Returns the estimated remaining battery capacity. The <i>Battery Remaining Capacity</i> value is expressed as power [mWh] or current [mAh] depending on the <i>Power Unit</i> value.</p> <p>Batteries that are rechargeable are required to return a valid <i>Battery Remaining Capacity</i> value.</p> <ul style="list-style-type: none"> <li>• 0x00000000 – 0x7FFFFFFF in [mWh] or [mAh]</li> <li>• 0xFFFFFFFF – Unknown capacity</li> </ul>
Battery Present Voltage	<b>Integer</b> (DWORD)	<p>Returns the voltage across the battery’s terminals.</p> <p>Batteries that are rechargeable must report <i>Battery Present Voltage</i>.</p> <ul style="list-style-type: none"> <li>• 0x00000000 – 0x7FFFFFFF in [mV]</li> <li>• 0xFFFFFFFF – Unknown voltage</li> </ul> <p><b>Note:</b> Only a primary battery can report unknown voltage.</p>

Notice that when the battery is a primary battery (a non-rechargeable battery such as an Alkaline-Manganese battery) and cannot provide accurate information about the battery to use in the calculation of the remaining battery life, the Control Method Battery can report the percentage directly to OS. It does so by reporting the Last Full Charged Capacity =100 and BatteryPresentRate=0xFFFFFFFF. This

means that Battery Remaining Capacity directly reports the battery's remaining capacity [%] as a value in the range 0 through 100 as follows:

$$\text{Remaining Battery Percentage[%]} = \frac{\text{Battery Remaining Capacity [=0 ~ 100]}}{\text{Last Full Charged Capacity [=100]}} * 100$$

**Figure 10-58 Remaining Battery Percent Formula**

$$\text{Remaining Battery Life [h]} = \frac{\text{Battery Remaining Capacity [mAh/mWh]}}{\text{Battery Present Rate [=0xFFFFFFFF]}} = \text{unknown}$$

**Figure 10-59 Remaining Battery Life Formula**

### 10.2.2.7 \_BTH (Battery Throttle Limit)

This method will communicate to the platform firmware the thermal throttle limit set by on the battery.

#### Arguments:

Arg0 – An integer from 0 to 100 containing the battery thermal throttle limit in percentage. At 100%, the battery can be charged at maximum current.

#### Return Value:

None.

**Note:** Firmware is responsible for taking the current thermal throttle limit into account when engaging charging.

#### Example:

```
Scope(\_SB) {
  Scope(\_SB.PCI0.I SA0) {
    Device(EC0) {
      Name(_HID, EISAID("PNPOC09"))           // ID for this EC
                                                // current resource description for
      this EC
      Name(_CRS, ResourceTemplate() {
        IO(Decode16, 0x62, 0x62, 0, 1)
        IO(Decode16, 0x66, 0x66, 0, 1)
      })
      Name(_GPE, 0)                           // GPE index for this EC
                                                // create EC's region and field for thermal support
      OperationRegion(EC0, EmbeddedControl, 0, 0xFF)
      Field(EC0, ByteAcc, Lock, Preserve) {
        TMP, 16,                                // current temp
        PSV, 16,                                // passive cooling temp
        BTW, 16,                                // battery charge rate limit
      }
      // following is a method that OSPM will schedule after
      // it receives an SCI and queries the EC to receive value 7
      Method(_007) {
    }
  }
}
```

```

        Notify (\_SB.PCI0.ISA0.ECO.TZ0, 0x80)           } // end of Notify method
        // create a thermal zone
        Thermal Zone (TZ0) {
            Method(_TMP) { Return (\_SB.PCI0.ISA0.ECO.TMP) } // get current
temp
            Method(_PSV) { Return (\_SB.PCI0.ISA0.ECO.PSV) } // passive
cooling temp
            Name(_TZA, Package (){\_SB.PCI0.ISA0.ECO.BAT0}) // passive
cooling devices
            Name(_TC1, 4) // bogus
example constant
            Name(_TC2, 3) // bogus
example constant
            Name(_TSP, 150) // passive
sampling = 15 sec
        } // end of TZ0
        Device (BAT0) {
            Name(_HID, "PNPOCOA")
            Name(_UID, One)
            Method (_BTH, 0x1, NotSerialized) {
                Store(Arg0, \_SB.PCI0.ISA0.ECO.BTH)
            }
            // additional battery objects
        }
    }
}
\_SB.PCI0.ISA0 scope
}
scope

```

### 10.2.2.8 \_BTP (Battery Trip Point)

This object is used to set a trip point to generate an SCI whenever the *Battery Remaining Capacity* reaches or crosses the value specified in the \_BTP object. Specifically, if *Battery Remaining Capacity* is less than the last argument passed to \_BTP, a notification must be issued when the value of *Battery Remaining Capacity* rises to be greater than or equal to this trip-point value. Similarly, if *Battery Remaining Capacity* is greater than the last argument passed to \_BTP, a notification must be issued when the value of *Battery Remaining Capacity* falls to be less than or equal to this trip-point value. The last argument passed to \_BTP will be kept by the system.

If the battery does not support this function, the \_BTP control method is not located in the namespace. In this case, the OS must poll the *Battery Remaining Capacity* value.

#### Arguments: (1)

Arg0 – An **Integer** containing the new battery trip point

- 0 – Clear the trip point
- 1 – 0x7FFFFFFF – New trip point, in units of **mWh** or **mAh** depending on the *Power Units* value

#### **Return Value:**

None

### 10.2.2.9 \_BTM (Battery Time)

This optional object returns the estimated runtime of the battery while it is discharging.

#### Arguments: (1)

Arg0 – An **Integer** containing the rate at which the battery is expected to discharge

- 0 – Indicates that the battery will continue discharging at the current rate. The rate should be based on the average rate of drain, not the current rate of drain.
- 1 – 0x7FFFFFFFThe discharge rate (in mA or mW)

#### Return Value:

An **Integer** containing the estimated remaining runtime

- 0 – The input discharge rate (Arg0) is too large for the battery or batteries to supply. If the input argument was 0, this value indicates that the battery is critical.
- 1 – 0xFFFFFFF –Estimated runtime in seconds
- 0xFFFFFFFF –Runtime is unknown

### 10.2.2.10 \_BCT (Battery Charge Time)

When the battery is charging, this optional object returns the estimated time from present to when it is charged to a given percentage of Last Full Charge Capacity.

#### Arguments:

Arg0 – ChargeLevel (**Integer (DWORD)**): The queried charge level in units of percent of Last Full Charge Capacity. For example: 96 refers to 96% of Last Full Charge Capacity. Valid values are 1 – 100 (0x00000001 – 0x00000064).

#### Return Value:

An **Integer (DWORD)** containing a result code as follows:

- 0x00000000 –Specified targeted charging capacity is smaller than the current remaining capacity or larger than 100% of Last Full Charge Capacity.
- 0x00000001 –0xFFFFFFF – Estimated charging time in seconds
- 0xFFFFFFFF –Charging time is unknown

### 10.2.2.11 \_BMD (Battery Maintenance Data)

This optional object returns information about the battery's capabilities and current state in relation to battery calibration and charger control features. If the **\_BMC** object (defined below) is present under a battery device, this object must also be present. Whenever the **Status Flags** value changes, AML code will issue a **Notify(battery\_device, 0x82)**. In addition, AML will issue a **Notify(battery\_device, 0x82)** if evaluating **\_BMC** did not result in causing the **Status Flags** to be set as indicated in that argument to **\_BMC**. AML is not required to issue **Notify(battery\_device, 0x82)** if the **Status Flags** change while evaluating **\_BMC** unless the change does not correspond to the argument passed to **\_BMC**.

#### Arguments:

None

**Return Value:**

A **Package** containing the battery maintenance data as described below

**Return Value Information:**

\_BMD returns a package in the format below:

```
Package {
    Status Flags          // Integer (DWORD)
    Capability Flags      // Integer (DWORD)
    Recalibrate Count     // Integer (DWORD)
    Quick Recalibrate Time // Integer (DWORD)
    Slow Recalibrate Time // Integer (DWORD)
}
```

**Table 10-334 BMD Return Package Values**

Field	Format	Description
Status Flags	Integer (DWORD)	<p>Bit values. Bit [0] is mutually exclusive with bit [1] and bit [2]. If the charger is being manually controlled, there cannot be an AML controlled calibration cycle.</p> <ul style="list-style-type: none"> <li>• Bit [0] – 1 indicates the battery is running an AML controlled calibration cycle</li> <li>• Bit [1] – 1 indicates that charging has been disabled.</li> <li>• Bit [2] – 1 indicates the battery is configured to discharge while AC power is available.</li> <li>• Bit [3] – 1 indicates that the battery should be recalibrated.</li> <li>• Bit [4] – 1 indicates that the OS should put the system into standby to speed charging during a calibration cycle. This is optional (based on user preference) if “Slow Recalibrate Time” is not equal to 0x00000000.</li> <li>• Bit [31:5] – reserved.</li> </ul>
Capability Flags	Integer (DWORD)	<p>Bit values that describe the capabilities of the battery system. These bits allows a battery system with more limited capabilities to still be calibrated by OSPM.</p> <ul style="list-style-type: none"> <li>• Bit [0] – 1 indicates that an AML controlled calibration cycle is supported.</li> <li>• Bit [1] – 1 indicates that disabling the charger is supported.</li> <li>• Bit [2] – 1 indicates that discharging while running on AC is supported.</li> <li>• Bit [3] – 1 indicates that calling _BMC for one battery will affect the state of all batteries in the system. This is for battery systems that cannot control batteries individually.</li> <li>• Bit [4] – 1 indicates that calibration should be done by first fully charging the battery and then discharging it. Not setting this bit will indicate that calibration can be done by simply discharging the battery.</li> <li>• Bit [31:5] – reserved.</li> </ul>
Recalibrate Count	Integer (DWORD)	<p>This is used by battery systems that can't detect when calibration is required, but wish to recommend that the battery should be calibrated after a certain number of cycles. Counting the number of cycles and partial cycles is done by the OS.</p> <ul style="list-style-type: none"> <li>• 0x00000000 – Only calibrate when Status Flag bit [3] is set.</li> <li>• 0x00000000 – 0xFFFFFFFF – calibrate battery after detecting this many battery cycles.</li> </ul>

Field	Format	Description
Quick Recalibrate Time	Integer (DWORD)	Returns the estimated time it will take to calibrate the battery if the system is put into standby whenever <i>Status Flags</i> bit [4] is set. While the AML controlled calibration cycle is in progress, this returns the remaining time in the calibration cycle. <ul style="list-style-type: none"> <li>• 0x0000000000 – indicates that standby while calibrating the battery is not supported. The system should remain in S0 until calibration is completed.</li> <li>• 0x00000001 – 0xFFFFFFFF – estimated recalibration time in seconds.</li> <li>• 0xFFFFFFFF – indicates that the estimated time to recalibrate the battery is unknown.</li> </ul>
Slow Recalibrate Time	Integer (DWORD)	Returns the estimated time it will take to calibrate the battery if <i>Status Flag Bit</i> [4] is ignored. While the AML controlled calibration cycle is in progress, this returns the remaining time in the calibration cycle. <ul style="list-style-type: none"> <li>• 0x0000000000 – indicates that battery calibration may not be successful if <i>Status Flags Bit</i> [4] is ignored.</li> <li>• 0x00000001 – 0xFFFFFFFF – estimated recalibration time in seconds.</li> <li>• 0xFFFFFFFF – indicates that the estimated time to recalibrate the battery is unknown.</li> </ul>

See [Section 3.9.5](#), “Battery Calibration” for an overview of Battery Calibration.

The *Capability Flags* and *Recalibration Count* are used to indicate what functions are controlled by AML and what functions are controlled by OSPM as described in section 3.9.5, “Battery Calibration”. If the system does not implement an AML controlled calibration cycle (bit [0]), it may indicate using bit [1] and bit [2] that the OS can control a generic calibration cycle without prompting the user to remove the power cord. *Recalibration Count* may be used to indicate that the platform runtime firmware cannot determine when calibration should be preformed so bit 3 of the *Status Flags* will never be set. In that case, OSPM will attempt to count the number of cycles.

Bit [3] is used by systems that do not have individual control over the batteries and can only perform calibration on all batteries in the system at once. On such a system, if one battery requests calibration and another battery does not, the OS may suggest that the user remove the battery that doesn’t need calibration, before initiating the calibration cycle. When this bit is set, reading the Recalibrate Time from either battery should give the time to recalibrate all batteries present in the system.

### 10.2.2.12 \_BMC (Battery Maintenance Control)

This object is used to initiate calibration cycles or to control the charger and whether or not a battery is powering the system. This object is only present under a battery device if the *\_BMD Capabilities Flags* field has bit 0, 1, or 2 set.

#### Arguments: (1)

Arg0 – An **Integer** containing feature control flags

- Bit [0] – Set to initiate an AML controlled calibration cycle. Clear to end the calibration cycle
- Bit [1] – Set to disable charging. Clear to enable charging
- Bit [2] – Set to allow the battery to discharge while AC power is available. Clear to prevent discharging while AC power is available

**Return Value:**

None

See [Section 3.9.5](#) for an overview of Battery Calibration.

Evaluating this object with bit0 set will initiate an AML controlled recalibration cycle if `_BMD` indicates that this is supported. The calibration cycle is controlled by the platform and will typically include disabling the AC adapter and discharging the battery, then charging the battery. While the battery is charging, the platform runtime firmware should set Bit [4] of the Status flags returned by `_BMD` if it is possible to put the system into standby during calibration to speed up charging. Evaluating this with Bit [0] equal to 0 will abort the calibration cycle if one is in process. If the platform runtime firmware determines that the calibration cycle must be aborted (for example AC power is lost), or the calibration completes successfully, the platform runtime firmware will end the cycle automatically, clear the `_BMD Status Flag` Bit [0], and send a notify 0x82. While the calibration cycle is in process, the battery will report data normally, so the OS must disable battery alarms.

Bit [1] and Bit [2] may not be used in conjunction with the AML controlled calibration cycle. Having Bit [0] set will override Bit [1] and Bit [2]. Bit [1] will prevent the battery from charging even though AC power is connected. Bit [2] will allow the system to draw its power from the battery even though AC power is available. When the battery is no longer capable of delivering current, this setting is automatically cleared, and the system will continue running off AC power without interruption. In addition, if AC power is lost this bit will be cleared. When AC power comes back, the OS must set the bit again if the user wants to continue discharging. When the system clears this bit automatically, it will result in a change in the `Status Flags` returned by `_BMD`. This will cause a notify 0x82. Bit [1] is only cleared automatically if an AML controlled calibration cycle is initiated.

When a battery is discharging because Bit [2] is set, the `_PSR` method of the AC adapter device will report that AC is offline because the system is not running off of the AC adapter. If the batteries are controlled individually (Bit [3] of the `_BMD Capabilities Flags`), setting either battery to discharge will cause `_PSR` to report AC offline. If more than one battery in the system has Bit [2] set to discharge the battery, it is up to the system to decide which battery to discharge, so only on a system that discharges the batteries one at a time, a battery with Bit2 set may not be discharging if another battery in the system is being discharged.

If Batteries are not controlled individually, calling `_BMC` will initiate calibration, disable charge, and/or allow discharge on all batteries in the system. The state of these batteries will be reflected in the `_BMD Status Flags` for all batteries.

## 10.3 AC Adapters and Power Source Objects

The Power Source objects describe the system's power source. These objects may be defined under a Power Source device which is declared using a hardware identifier (`_HID`) of "**ACPI0003**". Typically there will be a power source device for each physical power supply contained within the system. However, in cases where the power supply is shared, as in a blade server configuration, this may not be possible. Instead the firmware can choose to expose a virtual power supply that represents one or more of the physical power supplies.

**Table 10-335 Power Source Objects**

Object	Description
_PSR	Returns whether this power source device is currently online.
_PCL	List of pointers to devices this power source is powering.
_PIF	Returns static information about a power source.
_PRL	List of pointers to all the other power source devices that belong in the same redundancy group of which the power supply device is a member.

### 10.3.1 \_PSR (Power Source)

Returns whether the power source device is currently in use. This can be used to determine if system is running off this power supply or adapter. On mobile systems this will report that the system is not running on the AC adapter if any of the batteries in the system is being forced to discharge. In systems that contains multiple power sources, this object reports the power source's online or offline status.

**Arguments:**

None

**Return Value:**

An **Integer** containing the power source status

0 – Off-line (not on AC power)

1 – On-line

### 10.3.2 \_PCL (Power Consumer List)

This object evaluates to a list of pointers, each pointing to a device or a bus powered by the power source device. Pointing to a bus indicates that all devices under the bus are powered by the power source device.

**Arguments:**

None

**Return Value:**

A variable-length **Package** containing a list of **References** to devices or buses

### 10.3.3 \_PIF (Power Source Information)

This object returns information about the Power Source, which remains constant until the Power Source is changed. When the power source changes, the platform issues a Notify(0x0) (Bus Check) to the Power Source device to indicate that OSPM must re-evaluate the \_PIF object.

**Arguments:**

None

**Return Value:**

A **Package** with the following format:

```
Package {
    Power Source State           // Integer (DWORD)
    Maximum Output Power         // Integer (DWORD)
    Maximum Input Power          // Integer (DWORD)
    Model Number                 // String (ASCIIIZ)
    Serial Number                // String (ASCIIIZ)
    OEM Information              // String (ASCIIIZ)
}
```

**Table 10-336 PIF Method Result Codes**

Element	Object Type	Description
Power Source State	<b>Integer</b> (DWORD)	Bit values that describe the type of this Power Source. These bits are especially useful in server scenarios. Bit [0] – indicates the power source is a redundant one. If this bit is set, this Power Source device should have a _PRL object. Bit [1] – indicates the power source is being shared across multiple machines. Bit [31:2] – Reserved.
Maximum Output Power	<b>Integer</b> (DWORD)	The maximum rated output wattage of the power source device. [mW] 0xFFFFFFFF is returned if the information is unavailable.
Maximum Input Power	<b>Integer</b> (DWORD)	The maximum rated input wattage of the power source device. [mW] 0xFFFFFFFF is returned if the information is unavailable.
Model Number	<b>String</b> (ASCIIIZ)	OEM-specific Power Source model number. This element is optional and an empty string (a null character) should be used if this is not supported.
Serial Number	<b>String</b> (ASCIIIZ)	OEM-specific Power Source serial number. This element is optional and an empty string (a null character) should be used if this is not supported.
OEM Information	<b>String</b> (ASCIIIZ)	OEM-specific information that the UI uses to display about the Power Source device. This element is optional and a NULL string should be used if this is not supported.

#### 10.3.4 \_PRL (Power Source Redundancy List)

This optional object evaluates to a list of Power Source devices that are in the same redundancy grouping as Power Source device under which this object is defined. A redundancy grouping is a group of power supplies that together provide redundancy. For example, on a system that contains two power supplies that each could independently power the system, both power supplies would be part of the same redundancy group. This is used in conjunction with the *Power Source State* values specified by the *\_PIF* object.

The entries should be in the format of a fully qualified ACPI namespace path.

**Arguments:**

None

**Return Value:**

A variable-length **Package** containing a list of **References** to power source devices. It has the following format:

```
Package {
    Power source[0],          // Reference
    Power source[1],          // Reference
    ...
    Power source[n]           // Reference
}
```

## 10.4 Power Meters

The following section describes Power Metering objects. These objects may be defined under a Power Meter device which is declared using the ACPI000D hardware identifier (\_HID).

**Table 10-337 Power Meter Objects**

Object	Description
_GAI	Gets the averaging interval used by the power meter.
_GHL	Gets the hardware power consumption limit that is enforced by the Power Meter.
_PAI	Sets the power averaging interval used by the Power Meter.
_PMC	Returns Power Meter capabilities.
_PMD	Returns a list of devices whose power consumption is measured by the Power Meter.
_PMM	Returns the power consumption measured by the Power Meter.
_PTP	Sets Power Meter device trip points.
_SHL	Sets the hardware power consumption limit that is enforced by the Power Meter.

### 10.4.1 \_PMC (Power Meter Capabilities)

This object returns the capabilities of a power meter. This information remains constant unless either the power meter's firmware or the BMC hardware changes, at which time the platform is required to send **Notify(power\_meter, 0x80)** for the OSPM to re-evaluate **\_PMC**.

**Arguments:**

None

**Return Value:**

A **Package** with the following format:

```
Package {
    Supported Capabilities      // Integer (DWORD)
    Measurement Unit            // Integer (DWORD)
```

```

Measurement Type           // Integer (DWORD)
Measurement Accuracy      // Integer (DWORD)
Measurement Sampling Time // Integer (DWORD)
Minimum Averaging Interval // Integer (DWORD)
Maximum Averaging Interval // Integer (DWORD)
Hysteresis Margin         // Integer (DWORD)
Hardware Limit Is Configurable // Boolean (DWORD)
Min Configurable Hardware Limit // Integer (DWORD)
Max Configurable Hardware Limit // Integer (DWORD)
Model Number               // String
Serial Number              // String
OEM Information            // String
}

```

**Table 10-338 PMC Method Result Codes**

Element	Object Type	Description
Supported Capabilities	Integer (DWORD)	A bitmask that represents the capability flags: Bit [0] – indicates the power meter supports measurement. Bit [1] – indicates the power meter supports trip points. Bit [2] – indicates the power meter supports hardware enforced limit. Bit [3] – indicates that the power meter supports notifications when the hardware limit is enforced. Bit [7:4] – reserved. Bit [8] – indicates the power meter only reports data when discharging. This applies to power meters that are battery-type devices. Bit [9:31] Reserved
Measurement Unit	Integer (DWORD)	The units used by the power meter to report measurement and configure trip points and hardware enforced limits. 0x00000000 – indicates measurements are reported in [mW].
Measurement Type	Integer (DWORD)	The type of measurement the power meter is measuring. A power meter may measure either input or output power, not both. 0x00000000 – indicates the power meter is measuring input power. 0x00000001 – indicates the power meter is measuring output power.
Measurement Accuracy	Integer (DWORD)	The accuracy of the power meter device, in thousandth of a percent. (0% - 100.000%) For example, The value 80000 would mean 80% accuracy.
Measurement Sampling Time	Integer (DWORD)	The sampling time of the power meter device, in milliseconds. This is the minimum amount of time at which the measurement value will change. In other words, the same reading will be returned by _PMM if OSPM makes 2 consecutive reads within a measurement sampling time. 0xFFFFFFFF is returned if the information is unavailable.
Minimum Averaging Interval	Integer (DWORD)	This is the minimum length of time (in milliseconds) within which the power meter firmware is capable of averaging the measurements within it.

Element	Object Type	Description
Maximum Averaging Interval	Integer (DWORD)	This is the maximum length of time (in milliseconds) within which the power meter firmware is capable of averaging the measurements within it.
Hysteresis Margin	Integer (DWORD)	The margin used by the BMC for hysteresis, in the unit of [Measurement Unit / Measurement Sampling Time]. This indicates the margin built around the trip points and hardware limit notifications. This margin prevents unnecessary notifies to the OSPM when the reading is fluctuating very close to one of the trip points or the hardware limit. 0xFFFFFFFF is returned if the information is unavailable.
Hardware Limit Is Configurable	Integer (DWORD)	This boolean value represents whether hardware enforced limit is configurable by the OSPM. 0x00000000 (zeros) – indicates the limit is read-only. 0xFFFFFFFF (ones) – indicates the limit is writable.
Minimum Configurable Hardware Limit	Integer (DWORD)	The minimum value that can be configured into the hardware enforced limit, expressed in the units as specified by Measurement Unit.
Maximum Configurable Hardware Limit	Integer (DWORD)	The maximum value that can be configured into the hardware enforced limit, expressed in the units as specified by Measurement Unit.
Model Number	String (ASCIIz)	OEM-specific Power meter model number. This element is optional and an empty string (a null character) should be used if this is not supported.
Serial Number	String (ASCIIz)	OEM-specific Power meter serial number. This element is optional and an empty string (a null character) should be used if this is not supported.
OEM Information	String (ASCIIz)	OEM-specific information that the UI uses to display about the Power meter device. This element is optional and a NULL string should be used if this is not supported.

### 10.4.2 \_PTP (Power Trip Points)

This object sets the upper and lower trip points for the power meter device. These 2 trip points define a hysteresis range for which the OSPM can tolerate without re-reading the current measurement via \_PMM. When the power meter draw goes outside the range, a **Notify(power\_meter, 0x81)** should be sent to notify the OSPM, at which time the OSPM should re-evaluate \_PMM and also set a pair of trip points around the newest reading. If the latest value measured by the power meter is outside of the range defined by the trip points by the time \_PTP is called, a result code is returned.

#### Arguments: (2)

Arg0 (**Integer**) : Upper Trip Point

Arg1 (**Integer**) : Lower Trip Point

#### Return Value:

An **Integer** containing the status of the operation:

- 0x00000000 – Success
- 0x00000001 – Failure to set trip points because latest measurement is out of range
- 0x00000002 – Failure to set trip points due to hardware timeout
- 0x00000003 – Failure to set trip points due to unknown hardware error
- 0x00000004 – 0xFFFFFFFF - Reserved

### 10.4.3 \_PMM (Power Meter Measurement)

This object returns the latest measurement reading from the power meter device. The value returned represents real power (i.e. power factor is included in the value). In most cases this is a rolling average value that is computed by the firmware over an averaging interval. On systems where this interval can be configured, the \_PAI object should be present under the power meter device (see [Section 10.4.4](#)).

#### Arguments:

None

#### Return Value:

An **Integer** is returned to represent the latest measurement reading from the power meter device. This value should be in the unit specified in the power meter capabilities (typically in milliwatts), and is required to be the RMS value if the power meter is measuring in AC. If an error occurs while obtaining the meter reading or if the value is not available then an Integer with all bits set is returned.

### 10.4.4 \_PAI (Power Averaging Interval)

This object sets the averaging interval used by the power meter. The averaging interval is the total time the power meter will take instantaneous measurement samples for, before averaging them to produce the average power measurement as returned by \_PMM. If the platform changes the averaging interval independently from OSPM, the platform must issue a Notify(power\_meter, 0x84) to indicate the change to the OSPM. Upon receiving the notification, OSPM evaluates the \_GAI object to read the new averaging interval.

#### Arguments: (1)

Arg0 – An **Integer** that represents the desired value OSPM chose to be the power averaging interval, in milliseconds. This value needs to be within the minimum and maximum averaging interval as specified by \_PMC. Otherwise, a failure result code is returned.

#### Return Value:

An **Integer** containing the status of the operation:

- 0x00000000 – Success
- 0x00000001 – Failure to set power averaging interval because it is out of range
- 0x00000002 – Failure to set power averaging interval due to hardware timeout
- 0x00000003 – Failure to set power averaging interval due to unknown hardware error
- 0x00000004 – 0xFFFFFFFF - Reserved

### **10.4.5 \_GAI (Get Averaging Interval)**

This object gets the averaging interval used by the power meter. The averaging interval is the total time the power meter will take instantaneous measurement samples for, before averaging them to produce the average power measurement as returned by \_PMM. If the platform changes the averaging interval independently from OSPM, the platform must issue a Notify(power\_meter, 0x84) to indicate the change to the OSPM. Upon receiving the notification, OSPM evaluates the \_GAI object to read the new averaging interval.

#### **Arguments:**

None

#### **Return Value:**

An **Integer** containing the currently configured power averaging interval, in milliseconds. If an error occurs while obtaining the averaging interval or if the value is not available then an Integer with all bits set is returned.

### **10.4.6 \_SHL (Set Hardware Limit)**

This object sets the hardware limit enforced by the power meter. This limit, if supported, will be enforced by the circuitry on the platform hardware, to the best of its effort. This value is typically also configurable via other out-of-band management mechanism. When the enforcement happens, the platform should send a Notify(power\_meter, 0x83) to the OSPM.

#### **Arguments: (1)**

Arg0 – An **Integer** value that represent the desired value OSPM chose as the hardware enforced limit of this power meter, in the unit specified in \_PMC. This value needs to be within the minimum and maximum hardware limit as specified by \_PMC. Otherwise, a failure result code is returned.

#### **Return Value:**

An **Integer** containing the status of the operation:

- 0x00000000 – Success
- 0x00000001 – Failure to set hardware limit because it is out of range
- 0x00000002 – Failure to set hardware limit due to the hardware timeout
- 0x00000003 – Failure to set hardware limit due to unknown hardware error
- 0x00000004 – 0xFFFFFFFF - Reserved

### **10.4.7 \_GHL (Get Hardware Limit)**

This object gets the hardware limit enforced by the power meter. This limit can be changed by either the OSPM or by the platform through some out-of-band mechanism. When this value is changed, a Notify(power\_meter, 0x82) should be sent to notify the OSPM to re-read the hardware limit. If an error occurs while obtaining the hardware limit or if the value is not available then an Integer with all bits set is returned.

#### **Arguments:**

None

**Return Value:**

An **Integer** is returned to represent the currently configured hardware enforced limit of the power meter, in the unit specified in \_PMC.

**10.4.8 \_PMD (Power Metered Devices)**

This object evaluates to a package of device names. Each name corresponds to a device in the ACPI namespace that is being measured by the power meter device. The measurement reported by the power meter is roughly correspondent to the total power draw of all the devices returned.

If this control method is present, the package needs to contain at least 1 device. On a system that supports power metering, a system power meter that measures the power draw of the entire system should always be present and have a \_PMD that contains \\_SB as its sole entry.

**Arguments:**

None

**Return Value:**

A variable-length **Package** consisting of references to devices being measured by the power meter.

```
Package {
    Power Meter[0]           // NamePath
    Power Meter[1]           // NamePath
    ...
    Power Meter[n]           // NamePath
}
```

**10.5 Wireless Power Controllers**

FCC regulations dictate reduced output power levels for wireless devices in the presence of a human body. To get platform certifications and for regulatory compliance, wireless devices put static transmit power limit data in device memory (either EEPROM or flash) and apply it on a per band/country basis. FCC regulations allow devices to dynamically reduce Effective Isotropically Radiated Power (EIRP) when in close proximity to a human body to mitigate its adverse effects.

On current platforms, a dedicated Specific Absorption Rate (SAR) sensor for each wireless device is used for notifying the wireless device that the system is in close proximity to a human body. This solution requires multiple SAR sensors for systems that have multiple wireless devices, and doesn't provide any mechanism for the wireless devices to collaborate for better efficiency.

The idea is to create a well-defined Wireless Power Calibration ACPI device with an ACPI event which can constitute the basis for notifying the Operating System (OS) and all other wireless devices on a given system. Wireless Power Calibration device event can be triggered from any proximity sensor device or by wireless device to mitigate interference from other wireless devices as well. The OS can then map specific notifications to each wireless device to invoke specific actions.

1. Define Plug and play ID for Wireless Power Calibration device(**ACPI0014**)

Wireless Power Calibration Device. This device can have a control method to sense proximity using platform defined sensor such as SAR, depth camera, touch device etc.

- Device can also have control method to broadcast other wireless device notifying the user proximity change or in band interference.
2. Define a notification value for the device  
Notifying the Wireless Power Calibration device with specific ACPI notify event id will enable wireless device or platform drivers to notify if EIRP needs to be regulated.

**Table 10-339 Wireless Power Calibration**

Object	Description
_WPC	Indicate the WPC device current operational state.[Required]
_WPP	Evaluate the WPC object and return the status of last operational state.[Optional]

### 10.5.1 Wireless Power Calibration Device

The following sections illustrate the operation and definition of the control method based Wireless Power Calibration Device (WPC).

#### 10.5.2 Wireless Power Calibration (\_WPC)

The wireless power calibration can support the \_WPC methods per participant device to calibrate power and notify the participant device as the case me be. (i.e. Either direct proximity based power calibration or notification for interference mitigation).

The \_WPC method of the WPC device functions as a notifier to the participant wireless devices and indicates either the messaging is for interference mitigation or direct power calibration.

##### Return Value:

- 0x00 – Direct Proximity Power Control
- 0x01 – Interference Mitigation Control
- 0x02 – Operational Band Change Control
- 0xFF – Reserved

#### 10.5.3 Wireless Power Polling (\_WPP)

This optional method evaluates the recommended polling frequency (in tenths of seconds) for this Wireless Power Calibration device. A value of zero – or the absence of this object when other WPC objects are defined – indicates that the OS does not need to poll the WPC device in order to detect meaningful changes in Wireless power calibration (the hardware is capable of generating asynchronous notifications).

##### Argument:

None

##### Return:

An Integer containing the recommended polling frequency in tenths of seconds. A value of zero indicates that polling is not required.

## 10.6 Wireless Power Calibration Event

To communicate the changes in wireless power transmission or interference mitigation to the OSPM. AML code should issue a **Notify (wpc\_device, 0xXX)** whenever a change in power calibration or interference mitigation is required to happen. The OS receives this notification and may call the \_WPD control method to determine the notification action associated with it. Event generated may contain the information related to associate action that recipient devices need to take.

WPD notification should occur whenever a change in power transmission needed either as a result of human proximity or interference mitigation. The granularity of the interference mitigation and power transmission can be address as per the operational device characteristics.


The WPC notification for interference mitigation will generate pairwise event among participant devices or multicast is if the interference is observed in all the bands of operations involving the wireless devices.

**Table 10-340 Wireless Power Control Notification Values:**

Hex Value	Description
0x80	Proximity based power calibration
0x81	Interference mitigation between Wifi (802.11) and Bluetooth devices
0x82-85	Reserved for Wifi/BT interference mitigation for later use
0x86	Interference mitigation between Wifi (802.11) and LTE/3GPP bands
0x87-90	Reserved for Wifi/LTE/3GPP interference mitigation for later use
0x91	Interference mitigation between Bluetooth and LTE/3GPP devices
0x92-0x95	Reserved for Bluetooth and LTE/3GPP interference mitigation for later use

## 10.7 Example: Power Source and Power Meter Namespace

[Figure 10-60](#) below shows the ACPI namespace for a computer with a power meter, AC adapter and two batteries associated with a docking station which itself has an AC adapter.

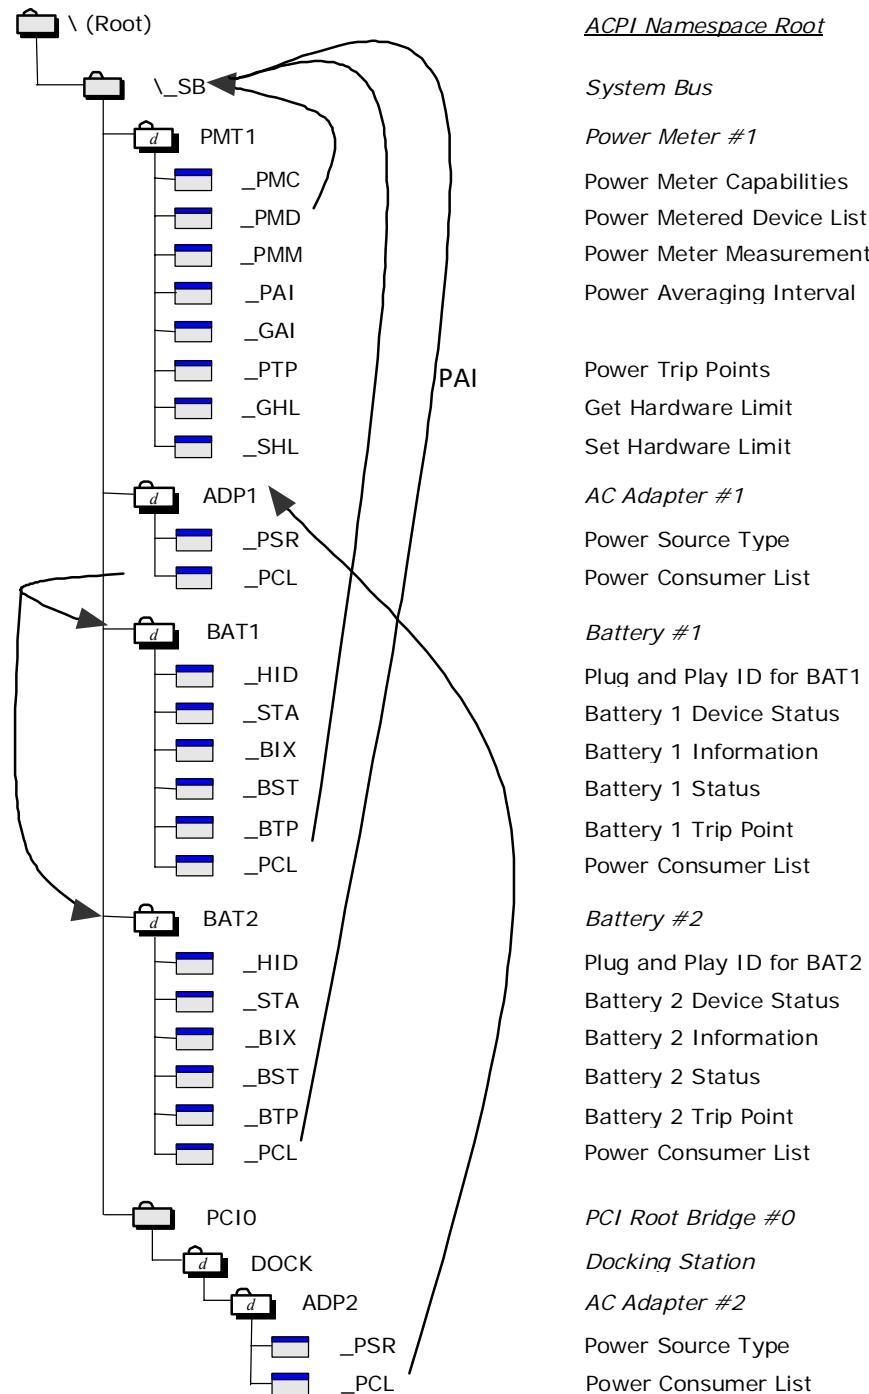ACPI Namespace Root*System Bus**Power Meter #1*

- Power Meter Capabilities
- Power Metered Device List
- Power Meter Measurement
- Power Averaging Interval

*Power Trip Points*

- Get Hardware Limit
- Set Hardware Limit

*AC Adapter #1*

- Power Source Type
- Power Consumer List

*Battery #1*

- Plug and Play ID for BAT1
- Battery 1 Device Status
- Battery 1 Information
- Battery 1 Status
- Battery 1 Trip Point
- Power Consumer List

*Battery #2*

- Plug and Play ID for BAT2
- Battery 2 Device Status
- Battery 2 Information
- Battery 2 Status
- Battery 2 Trip Point
- Power Consumer List

*PCI Root Bridge #0**Docking Station**AC Adapter #2*

- Power Source Type
- Power Consumer List

**Figure 10-60 Power Meter and Power Source/Docking Namespace Example**

# 11 Thermal Management

---

This section describes the ACPI thermal model and specifies the ACPI Namespace objects OSPM uses for thermal management of the platform.

## 11.1 Thermal Control

ACPI defines interfaces that allow OSPM to be proactive in its system cooling policies. With OSPM in control of the operating environment, cooling decisions can be made based on the system's application load, the user's preference towards performance or energy conservation, and thermal heuristics. Graceful shutdown of devices or the entire system at critical heat levels becomes possible as well. The following sections describe the ACPI thermal model and the ACPI Namespace objects available to OSPM to apply platform thermal management policy.

The ACPI thermal model is based around conceptual platform regions called *thermal zones* that physically contain devices, thermal sensors, and cooling controls. Generally speaking, the entire platform is one large thermal zone, but the platform can be partitioned into several ACPI thermal zones if necessary to enable optimal thermal management.

ACPI Thermal zones are a logical collection of interfaces to temperature sensors, trip points, thermal property information, and thermal controls. Thermal zone interfaces apply either thermal zone wide or to specific devices, including processors, contained within the thermal zone. ACPI defines namespace objects that provide the thermal zone-wide interfaces in [Section 11.3, "Thermal Objects"](#). A subset of these objects may also be defined under devices. OS implementations compatible with the ACPI 3.0 thermal model, interface with these objects but also support OS native device driver interfaces that perform similar functions at the device level. This allows the integration of devices with embedded thermal sensors and controls, perhaps not accessible by AML, to participate in the ACPI thermal model through their inclusion in the ACPI thermal zone. OSPM is responsible for applying an appropriate thermal policy when a thermal zone contains both thermal objects and native OS device driver interfaces for thermal control.

Some devices in a thermal zone may be comparatively large producers of thermal load in relation to other devices in the thermal zone. Devices may also have varying degrees of thermal sensitivity. For example, some devices may tolerate operation at a significantly higher temperature than other devices. As such, the platform can provide OSPM with information about the platform's device topology and the resulting influence of one device's thermal load generation on another device. This information must be comprehended by OSPM for it to achieve optimal thermal management through the application of cooling controls.

ACPI expects all temperatures to be represented in tenths of degrees. This resolution is deemed sufficient to enable OSPM to perform robust platform thermal management.

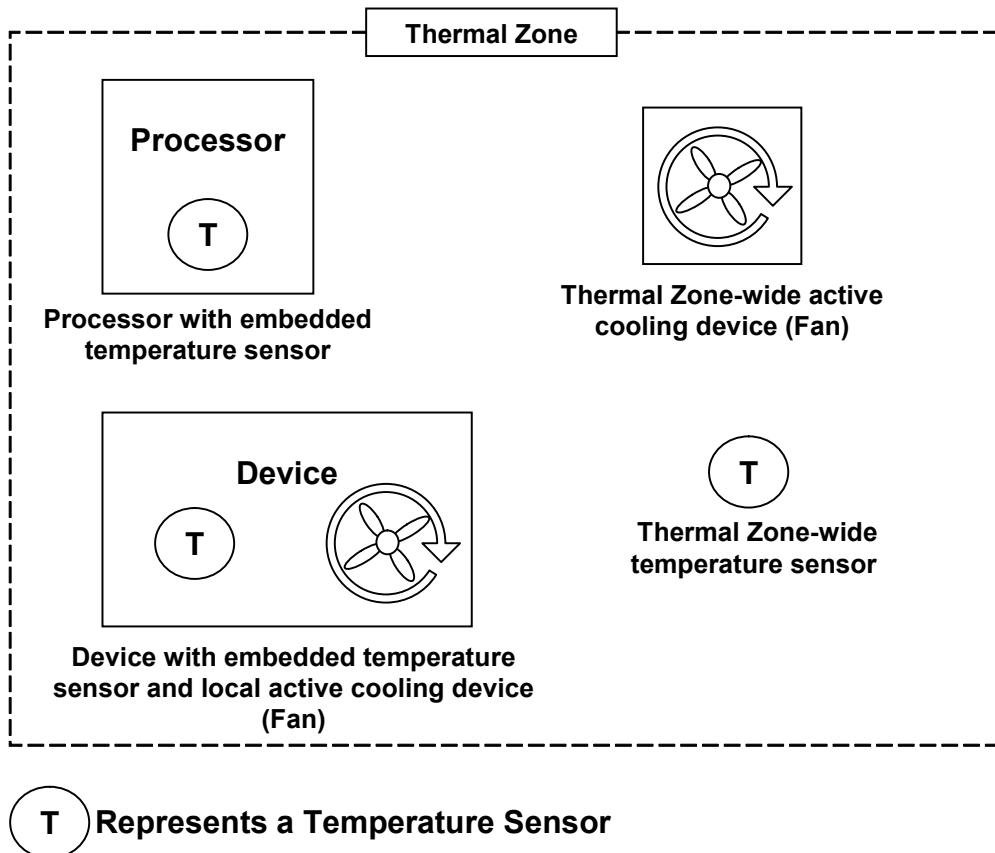


Figure 11-61 ACPI Thermal Zone

### 11.1.1 Active, Passive, and Critical Policies

There are three cooling policies that OSPM uses to control the thermal state of the hardware. The policies are *active*, *passive* and *critical*.

- **Active Cooling.** OSPM takes a direct action such as turning on one or more fans. Applying active cooling controls typically consume power and produce some amount of noise, but are able to cool a thermal zone without limiting system performance. Active cooling temperature trip points declare the temperature thresholds OSPM uses to decide when to start or stop different active cooling devices.
- **Passive Cooling.** OSPM reduces the power consumption of devices to reduce the temperature of a thermal zone, such as slowing (throttling) the processor clock. Applying passive cooling controls typically produces no user-noticeable noise. Passive cooling temperature trip points specify the temperature thresholds where OSPM will start or stop passive cooling.
- **Critical Trip Points.** These are threshold temperatures at which OSPM performs an orderly, but critical, shutdown of a device or the entire system. The `_HOT` object declares the critical temperature at which OSPM may choose to transition the system into the S4 sleeping state, if supported, The `_CRT` object declares the critical temperature at which OSPM must perform a critical shutdown.

When a thermal zone appears in the ACPI Namespace or when a new device becomes a member of a thermal zone, OSPM retrieves the temperature thresholds (trip points) at which it executes a cooling policy. When OSPM receives a temperature change notification, it evaluates the thermal zone's temperature interfaces to retrieve current temperature values. OSPM compares the current temperature values against the temperature thresholds. If any temperature is greater than or equal to a corresponding active trip point then OSPM will perform active cooling. If any temperature is greater than or equal to a corresponding passive trip point then OSPM will perform passive cooling. If the \_TMP object returns a value greater than or equal to the value returned by the \_HOT object then OSPM may choose to transition the system into the S4 sleeping state, if supported. If the \_TMP object returns a value greater than or equal to the value returned by the \_CRT object then OSPM must shut the system down. Embedded Hot and Critical trip points may also be exposed by individual devices within a thermal zone. Upon passing of these trip points, OSPM must decide whether to shut down the device or the entire system based upon device criticality to system operation. OSPM must also evaluate the thermal zone's temperature interfaces when any thermal zone appears in the namespace (for example, during system initialization) and must initiate a cooling policy as warranted independent of receipt of a temperature change notification. This allows OSPM to cool systems containing a thermal zone whose temperature has already exceeded temperature thresholds at initialization time.

An optimally designed system that uses several thresholds can notify OSPM of thermal increase or decrease by raising an event every several degrees. This enables OSPM to anticipate thermal trends and incorporate heuristics to better manage the system's temperature.

To implement a preference towards performance or energy conservation, OSPM can request that the platform change the priority of active cooling (performance) versus passive cooling (energy conservation/silence) by evaluating the \_SCP (Set Cooling Policy) object for the thermal zone or a corresponding OS-specific interface to individual devices within a thermal zone.

### 11.1.2 Dynamically Changing Cooling Temperature Trip Points

The platform or its devices can change the active and passive cooling temperature trip points and notify OSPM to reevaluate the trip point interfaces to establish the new policy threshold settings. The following are the primary uses for this type of thermal notification:

- When OSPM changes the platform's cooling policy from one cooling mode to another.
- When a swappable bay device is inserted or removed. A swappable bay is a slot that can accommodate several different devices that have identical form factors, such as a CD-ROM drive, disk drive, and so on. Many mobile PCs have this concept already in place.
- After the crossing of an active or passive trip point is signaled to implement hysteresis.

In each situation, OSPM must be notified to re-evaluate the thermal zone's trip points via the AML code execution of a **Notify(thermal\_zone, 0x81)** statement or via an OS specific interface invoked by device drivers for zone devices participating in the thermal model.

#### 11.1.2.1 OSPM Change of Cooling Policy

When OSPM changes the platform's cooling policy from one cooling mode to the other, the following occurs:

1. OSPM notifies the platform of the new cooling mode by running the Set Cooling Policy (\_SCP) control method in all thermal zones and invoking the OS-specific Set Cooling Policy interface to all participating devices in each thermal zone.

2. Thresholds are updated in the hardware and OSPM is notified of the change.
3. OSPM re-evaluates the active and passive cooling temperature trip points for the zone and all devices in the zone to obtain the new temperature thresholds.

### **11.1.2.2 Resetting Cooling Temperatures to Adjust to Bay Device Insertion or Removal**

The platform can adjust the thermal zone temperature to accommodate the maximum operating temperature of a bay device as necessary. For example:

1. Hardware detects that a device was inserted into or removed from the bay, updates the temperature thresholds, and then notifies OSPM of the thermal policy change and device insertion events.
2. OSPM re-enumerates the devices and re-evaluates the active and passive cooling temperature trip points.

### **11.1.2.3 Resetting Cooling Temperatures to Implement Hysteresis**

An OEM can build hysteresis into platform thermal design by dynamically resetting cooling temperature thresholds. For example:

1. When the temperature increases to the designated threshold, OSPM will turn on the associated active cooling device or perform passive cooling.
2. The platform resets the threshold value to a lower temperature (to implement hysteresis) and notifies OSPM of the change. Because of this new threshold value, the fan will be turned off at a lower temperature than when it was turned on (therefore implementing a negative hysteresis).
3. When the temperature hits the lower threshold value, OSPM will turn off the associated active cooling device or cease passive cooling. The hardware will reset \_ACx to its original value and notify OSPM that the trip points have once again been altered.

## **11.1.3 Detecting Temperature Changes**

The ability of the platform and its devices to asynchronously notify an ACPI-compatible OS of meaningful changes in the thermal zone's temperature is a highly desirable capability that relieves OSPM from implementing a poll-based policy and generally results in a much more responsive and optimal thermal policy implementation. Each notification instructs OSPM to evaluate whether a trip point has been crossed and allows OSPM to anticipate temperature trends for the thermal zone.

It is recognized that much of the hardware used to implement thermal zone functionality today is not capable of generating ACPI-visible notifications (SCIs) or only can do so with wide granularity (for example, only when the temperature crosses the critical threshold). In these environments, OSPM must poll the thermal zone's temperature periodically to implement an effective policy.

While ACPI specifies a mechanism that enables OSPM to poll thermal zone temperature, platform reliance on thermal zone polling is strongly discouraged by this specification. OEMs should design systems that asynchronously notify OSPM whenever a meaningful change in the zone's temperature occurs – relieving OSPM of the overhead associated with polling. In some cases, embedded controller firmware can overcome limitations of existing thermal sensor capabilities to provide the desired asynchronous notification.

Notice that the \_TZP (thermal zone polling) object is used to indicate whether a thermal zone must be polled by OSPM, and if so, a recommended polling frequency. See [Section 11.4.26, “\\_TZP,”](#) for more information.

### 11.1.3.1 Temperature Change Notifications

Thermal zone-wide temperature sensor hardware that supports asynchronous temperature change notifications does so using an SCI. The AML code that responds to this SCI must execute a **Notify(thermal\_zone, 0x80)** statement to inform OSPM that a meaningful change in temperature has occurred. Alternatively, devices with embedded temperature sensors may signal their associated device drivers and the drivers may use an OS-specific interface to signal OSPM’s thermal policy driver. A device driver may also invoke a device specific control method that executes a **Notify(thermal\_zone, 0x80)** statement. When OSPM receives this thermal notification, it will evaluate the thermal zone’s temperature interfaces to evaluate the current temperature values. OSPM will then compare the values to the corresponding cooling policy trip point values (either zone-wide or device-specific). If the temperature has crossed over any of the policy thresholds, then OSPM will actively or passively cool (or stop cooling) the system, or shut the system down entirely.

Both the number and granularity of thermal zone trip points are OEM-specific. However, it is important to notice that since OSPM can use heuristic knowledge to help cool the system, the more events OSPM receives the better understanding it will have of the system’s thermal characteristic.

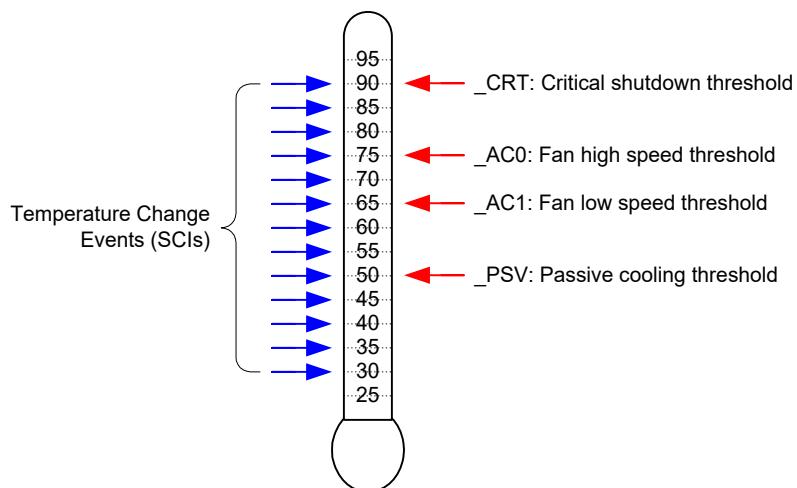


Figure 11-62 Thermal Events

For example, the simple thermal zone illustrated above includes hardware that will generate a temperature change notification using a 5° Celsius granularity. All thresholds (\_PSV, \_AC1, \_AC0, and \_CRT) exist within the monitored range and fall on 5 boundaries. This granularity is appropriate for this system as it provides sufficient opportunity for OSPM to detect when a threshold is crossed as well as to understand the thermal zone’s basic characteristics (temperature trends).

**Note:** The ACPI specification defines Kelvin as the standard unit for absolute temperature values. All thermal zone objects must report temperatures in Kelvin when reporting absolute temperature values. All figures and examples in this section of the specification use Celsius for reasons of clarity. ACPI allows Kelvin to be declared in precision of 1/10<sup>th</sup> of a degree (for example, 310.5). Kelvin is expressed as  $\theta/K = T/^\circ C + 273.2$ .

### 11.1.3.2 Polling

Temperature sensor hardware that is incapable of generating thermal change events, or that can do so for only a few thresholds should inform OSPM to implement a poll-based policy. OSPM does this to ensure that temperature changes across threshold boundaries are always detectable.

Polling can be done in conjunction with hardware notifications. For example, thermal zone hardware that only supports a single threshold might be configured to use this threshold as the critical temperature trip point. Assuming that hardware monitors the temperature at a finer granularity than OSPM would, this environment has the benefit of being more responsive when the system is overheating.

A thermal zone advertises the need to be polled by OSPM via the \_TZP object. See [Section 11.4.26, “\\_TZP,”](#) for more information.

### 11.1.4 Active Cooling

Active cooling devices typically consume power and produce some amount of noise when enabled. These devices attempt to cool a thermal zone through the removal of heat rather than limiting the performance of a device to address an adverse thermal condition.

The active cooling interfaces in conjunction with the active cooling lists or the active cooling relationship table (\_ART) allow the platform to use an active device that offers varying degrees of cooling capability or multiple cooling devices. The active cooling temperature trip points designate the temperature where Active cooling is engaged or disengaged (depending upon the direction in which the temperature is changing). For thermal zone-wide active cooling controls, the \_ALx object evaluates to a list of devices that actively cool the zone or the \_ART object evaluates to describe the entire active cooling relationship of various devices. For example:

- If a standard single-speed fan is the Active cooling device, then \_AC0 evaluates to the temperature where active cooling is engaged and the fan is listed in \_AL0.
- If the zone uses two independently controlled single-speed fans to regulate the temperature, then \_AC0 will evaluate to the maximum cooling temperature using two fans, and \_AC1 will evaluate to the standard cooling temperature using one fan.
- If a zone has a single fan with a low speed and a high speed, the \_AC0 will evaluate to the temperature associated with running the fan at high-speed, and \_AC1 will evaluate to the temperature associated with running the fan at low speed. \_AL0 and \_AL1 will both point to different device objects associated with the same physical fan, but control the fan at different speeds.
- If the zone uses two independently controlled multiple-speed fans to regulate the temperature, \_AC0 of the target devices evaluates to the temperature at which OSPM will engage fan devices described by the \_ART object as needed up to a maximum capability level.

For ASL coding examples that illustrate these points, see [Section 11.6, “Thermal Zone Interface Requirements,”](#) and [Section 11.7, “Thermal Zone Examples.”](#)


## 11.1.5 Passive Cooling

Passive cooling controls are able to cool a thermal zone without creating noise and without consuming additional power (actually saving power), but do so by decreasing the performance of the devices in the zone.

### 11.1.5.1 Processor Clock Throttling

The processor passive cooling threshold ( $_PSV$ ) in conjunction with the processor list ( $_PSL$ ) allows the platform to indicate the temperature at which a passive control, for example clock throttling, will be applied to the processor(s) residing in a given thermal zone. Unlike other cooling policies, during passive cooling of processors OSPM may take the initiative to actively monitor the temperature in order to cool the platform.

On an ACPI-compatible platform that properly implements CPU throttling, the temperature transitions will be similar to the following figure, in a coolable environment, running a coolable workload:

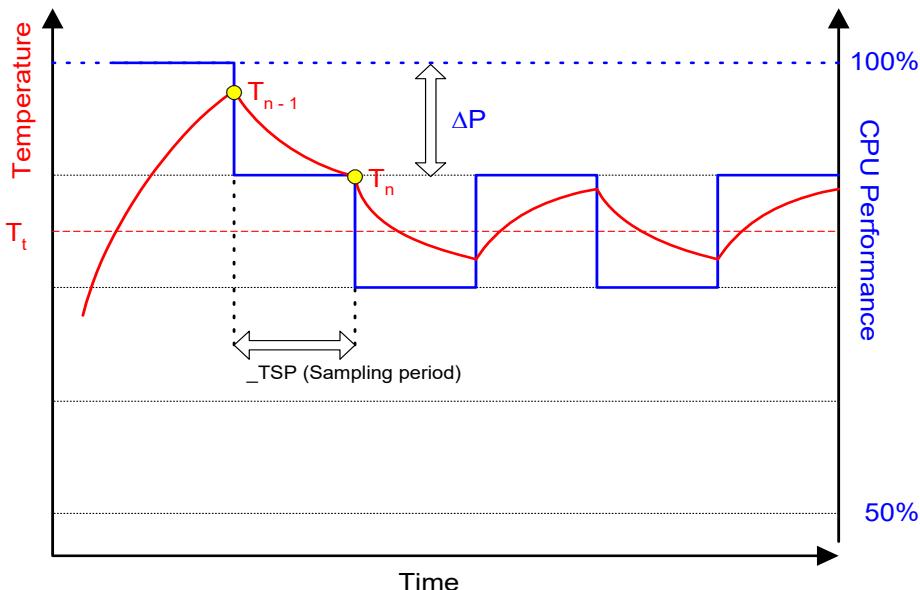

**Figure 11-63 Temperature and CPU Performance Versus Time**

The following equation should be used by OSPM to assess the optimum CPU performance change necessary to lower the thermal zone's temperature:

#### Equation #1:

$$\Delta P [\%] = _{TC1} * (T_n - T_{n-1}) + _{TC2} * (T_n - T_t)$$

Where:

$T_n$  = current temperature

$T_t$  = target temperature ( $_PSV$ )

The two coefficients  $_TC1$  and  $_TC2$  and the sampling period  $_TSP$  are hardware-dependent constants the OEM must supply to OSPM (for more information, see [Section 11.4](#), "Thermal Objects"). The  $_TSP$

object contains a time interval that OSPM uses to poll the hardware to sample the temperature. Whenever the time value returned by \_TSP has elapsed, OSPM will evaluate \_TMP to sample the current temperature (shown as  $T_n$  in the above equation). Then OSPM will use the sampled temperature and the passive cooling temperature trip point (\_PSV) (which is the target temperature  $T_t$ ) to evaluate the equation for  $\Delta P$ . The granularity of  $\Delta P$  is determined by the CPU duty width of the system.

**Note:** *Equation #1 has an implied formula.*

#### Equation #2:

$$P_n = P_{n-1} + \text{HW}[- ?P] \text{ where } \text{Minimum}\% \leq P_n \leq 100\%$$

For Equation #2, whenever  $P_{n-1} + ?P$  lies outside the range  $\text{Minimum}_0$ -100%, then  $P_n$  will be truncated to  $\text{Minimum}_0$ -100%.  $\text{Minimum}\%$  is the \_MTL limit, or 0% if \_MTL is not defined. For hardware that cannot assume all possible values of  $P_n$  between  $\text{Minimum}_0$  and 100%, a hardware specific mapping function HW is used.

In addition, the hardware mapping function in Equation #2 should be interpreted as follows:

For absolute temperatures:

1. If the right hand side of Equation #1 is negative,  $\text{HW}[\Delta P]$  is rounded to the next available higher setting of frequency.
2. If the right hand side of Equation #1 is positive,  $\text{HW}[\Delta P]$  is rounded to the next available lower setting of frequency.

For relative temperatures:

1. If the right hand side of Equation #1 is positive,  $\text{HW}[\Delta P]$  is rounded to the next available higher setting of frequency.
2. If the right hand side of Equation #1 is negative,  $\text{HW}[\Delta P]$  is rounded to the next available lower setting of frequency.
- The calculated  $P_n$  becomes  $P_{n-1}$  during the next sampling period.
- For more information about CPU throttling, see [Section 8.1.1](#), Processor Power State C0." A detailed explanation of this thermal feedback equation is beyond the scope of this specification.

### 11.1.6 Critical Shutdown

When the thermal zone-wide temperature sensor value reaches the threshold indicated by \_CRT, OSPM must immediately shut the system down. The system must disable the power either after the temperature reaches some hardware-determined level above \_CRT or after a predetermined time has passed. Before disabling power, platform designers should incorporate some time that allows OSPM to run its critical shutdown operation. There is no requirement for a minimum shutdown operation window that commences immediately after the temperature reaches \_CRT. This is because:

- Temperature might rise rapidly in some systems and slowly on others, depending on casing design and environmental factors.
- Shutdown can take several minutes on a server and only a few seconds on a hand-held device.

Because of this indistinct discrepancy and the fact that a critical heat situation is a remarkably rare occurrence, ACPI does not specify a target window for a safe shutdown. It is entirely up to the OEM to build in a safe buffer that it sees fit for the target platform.


## 11.2 Cooling Preferences

A robust OSPM implementation provides the means for the end user to convey a preference (or a level of preference) for either performance or energy conservation to OSPM. Allowing the end user to choose this preference is most critical to mobile system users where maximizing system run-time on a battery charge often has higher priority over realizing maximum system performance. For example, if a user is taking notes on her PC in a quiet environment, such as a library or a corporate meeting, she may want the system to emphasize passive cooling so that the system operates quietly, even at the cost of system performance.

A user preference towards performance corresponds to the Active cooling mode while a user's preference towards energy conservation or quiet corresponds to the Passive cooling mode. ACPI defines an interface to convey the cooling mode to the platform. Active cooling can be performed with minimal OSPM thermal policy intervention. For example, the platform indicates through thermal zone parameters that crossing a thermal trip point requires a fan to be turned on. Passive cooling requires OSPM thermal policy to manipulate device interfaces that reduce performance to reduce thermal zone temperature.

Either cooling mode will be activated only when the thermal condition requires it. When the thermal zone is at an optimal temperature level where it does not warrant any cooling, both modes result in a system operating at its maximum potential with all fans turned off.

Thermal zones supporting the Set Cooling Policy interface allow the user to switch the system's cooling mode emphasis. See [Section 11.4.13, “\\_SCP,”](#) for more information.

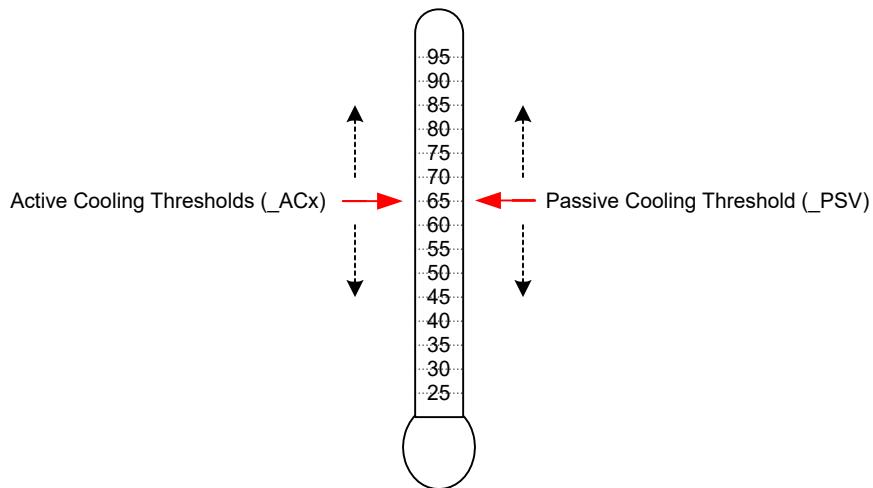


**Figure 11-64 Active and Passive Threshold Values**

As illustrated in [Figure 11-64](#), the platform must convey the value for each threshold to instruct OSPM to initiate the cooling policies at the desired target temperatures. The platform can emphasize active or passive cooling modes by assigning different threshold values. Generally, if `_ACx` is set lower than `_PSV`, then the system emphasizes active cooling. Conversely, if `_PSV` is set lower than `_ACx`, then the emphasis is placed on passive cooling.

For example, a thermal zone that includes a processor and one single-speed fan may use `_PSV` to indicate the temperature value at which OSPM would enable passive cooling and `_AC0` to indicate the temperature at which the fan would be turned on. If the value of `_PSV` is less than `_AC0` then the system

will favor passive cooling (for example, CPU clock throttling). On the other hand, if `_AC0` is less than `_PSV` the system will favor active cooling (in other words, using the fan). See [Figure 11-65](#) below.

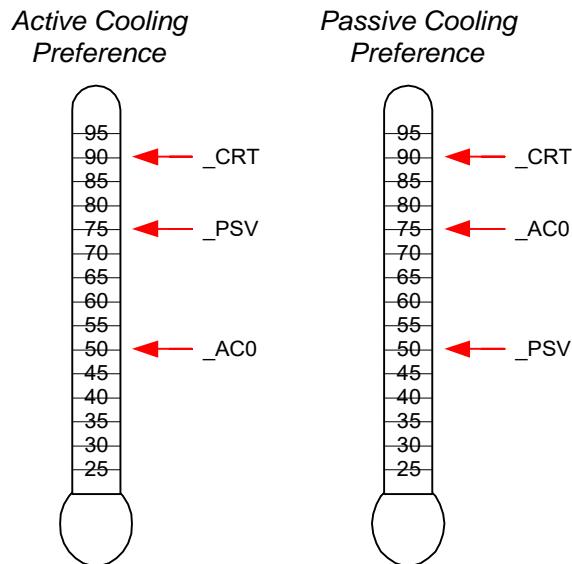

**Figure 11-65 Cooling Preferences**

The example on the left enables active cooling (for example, turn on a fan) when OSPM detects the temperature has risen above 50°. If for some reason the fan does not reduce the system temperature, then at 75° OSPM will initiate passive cooling (for example, CPU throttling) while still running the fan. If the temperature continues to climb, OSPM will quickly shut the system down when the temperature reaches 90°C. The example on the right is similar but the `_AC0` and `_PSV` threshold values have been swapped to emphasize passive cooling.

The ACPI thermal model allows flexibility in the thermal zone design. An OEM that needs a less elaborate thermal implementation may consider using only a single threshold (for example, `_CRT`). Complex thermal implementations can be modeled using multiple active cooling thresholds and devices, or through the use of additional thermal zones.

### 11.2.1 Evaluating Thermal Device Lists

The `Notify(thermal_zone, 0x82)` statement is used to inform OSPM that a change has been made to the thermal zone device lists. This thermal event instructs OSPM to re-evaluate the `_ALx`, `_PSL`, and `_TZD` objects.

For example, a system that supports the dynamic insertions of processors might issue this notification to inform OSPM of changes to `_PSL` following the insertion or removal of a processor. OSPM would re-evaluate all thermal device lists and adjust its policy accordingly.

Notice that this notification can be used with the `Notify(thermal_zone, 0x81)` statement to inform OSPM to both re-evaluate all device lists and all thresholds.

Alternatively, devices may include the \_TZM (Thermal Zone Member) object their device scope to convey their thermal zone association to OSPM. [Section 11.4.25, “\\_TZM \(Thermal Zone Member\)”](#), for more information.

### 11.2.2 Evaluating Device Thermal Relationship Information

The **Notify(thermal\_zone, 0x83)** statement is used to inform OSPM that a change has been made to the thermal relationship information. This thermal event instructs OSPM to re-evaluate the \_TRT and \_ART objects. The thermal influence between devices may change when active cooling moves air across device packages as compared to when only passive cooling controls are applied. Similarly, the active cooling relationship may change as various fans are engaged to actively cool a platform or if user preferences change.

### 11.2.3 Fan Device Notifications

Notify events of type 0x80 will cause OSPM to evaluate the \_FST object to evaluate the fan's current speed.

## 11.3 Fan Device

ACPI 1.0 defined a simple fan device that is assumed to be in operation when it is in the D0 state. Thermal zones reference fan device(s) as being responsible primarily for cooling within that zone. Notice that multiple fan devices can be present for any one thermal zone. They might be actual different fans, or they might be used to implement one fan of multiple speeds (for example, by turning both “fans” on the one fan will run full speed).

ACPI 4.0 defines additional fan device interface objects enabling OSPM to perform more robust active cooling thermal control. These objects are summarized in [Table 11-341](#). OSPM requires that all of the objects listed in [Table 11-341](#) be defined under a fan device to enable advanced active cooling control. The absence of any of these objects causes OSPM to perform ACPI 1.0 style simple fan control .

The Plug and Play ID of a fan device is PNPOCOB.

**Table 11-341 Fan Specific Objects**

Object	Description
_FIF	Returns fan device information.
_FPS	Returns a list of supported fan performance states.
_FSL	Control method that sets the fan device's speed level (performance state).
_FST	Returns current status information for a fan device.

While the Fan Device and its associated objects are optional, if the Fan Device is implemented by the platform, all objects listed in [Table 11-341](#) are required and must be provided.

## 11.3.1 Fan Objects

### 11.3.1.1 \_FIF (Fan Information)

The optional \_FIF object provides OSPM with fan device capability information.

#### Arguments:

None

#### Return Value:

A **Package** containing the fan device parameters as described in [Table 11-342](#) below

\_FIF evaluation returns a package of the following format:

```
Package () {
    Revision,                                // Integer
    FineGrainControl,                         // Integer Boolean
    StepSize,                                  // Integer DWORD
    LowSpeedNotificationSupport                // Integer Boolean
}
```

**Table 11-342 FIF Package Details**

Field	Format	Description
Revision	Integer	Current revision is: 0
Fine Grain Control	<b>Integer</b> (Boolean)	A non zero value in this field indicates OSPM may evaluate the fan device's _FSL object with a Level argument value in the range of 0-100, which represents a percentage of maximum speed. A zero value in this field indicates that OSPM may evaluate the fan device's _FSL object with a Level argument value that is a Control field value from a package in the _FPS object's package list only.
Step Size	<b>Integer</b> (DWORD)	The recommended minimum step size in percentage points to be used when OSPM performs fine-grained fan speed control. OSPM may utilize the value of this field if the FineGrainControl field is non-zero the value in this field is between 1 and 9.
Low Speed Notification Support	<b>Integer</b> (Boolean)	A non zero value in this field indicates that the platform will issue a Notify (0x80) to the fan device if a low (errant) fan speed is detected.

If a fan device supports fine-grained control, OSPM may evaluate a fan device's \_FSL object with any Level argument value that is less than or equal to the Control field value specified in the package of the \_FPS object's package list that corresponds to the active cooling trip point that has been exceeded. This capability provides OSPM access to one hundred fan speed settings thus enabling fine-grained fan speed control. The platform uses the StepSize field to help OSPM optimize its fan level selection policy by fine-grained fan speed control. The platform uses the StepSize field to help OSPM optimize its fan level selection policy by indicating recommended increments in the fan speed level value that are appropriate for the fan when one percent increments are not optimal. In the event OSPM's incremental selections of Level using the StepSize field value do not sum to 100%, OSPM may select an appropriate ending Level increment to reach 100%. OSPM should use the same residual step value first when reducing Level.

### 11.3.1.2 \_FPS (Fan Performance States)

The optional \_FPS object evaluates to a variable-length package containing a list of packages that describe the fan device's performance states. A temperature reading above an active cooling trip point defined by an \_ACx object in a thermal zone or above a native active cooling trip point of a device within the thermal zone causes OSPM thermal control to engage the appropriate corresponding fan performance state from the list of fan performance states described by the \_FPS object if the fan device is present in the corresponding \_ALx device list or if an entry exists for the fan and trip point in the active cooling relationship table (\_ART).

OSPM assumes a linear relationship for the acoustic impact and power consumption values between successive entries in the fan performance state list. Notice that the acoustic impact measurement unit (Decibels) is inherently non-linear. As such, the platform should populate \_FPS entries as necessary to enable OSPM to achieve optimal results.

#### Arguments:

None

#### Return Value:

A variable-length **Package** containing a Revision ID and a list of **Packages** that describe the fan device's performance states as described in [Table 11-343](#) below.

### Return Value Information

```
Package {
    Revision,           // Integer - Current revision is: 0
    FanPState[0],       // Package
    ...
    FanPState[n]        // Package
}
```

Each FanPState sub-**Package** contains the elements described below:

```
Package ()           // Fan P-State
{
    Control,          // Integer DWORD
    TripPoint,         // Integer DWORD
    Speed,             // Integer DWORD
    NoiseLevel,        // Integer DWORD
    Power              // Integer DWORD
}
```

**Table 11-343 FPS FanPstate Package Details**

Field	Format	Description
Control	<b>Integer</b> (DWORD)	Indicates the value to be used to set the fan speed to a specific level using the _FSL object. If the fan device supports fine-grained control as indicated by the _FIF object, this value is a percentage (0-100) of maximum speed level. If the fan device does not support fine-grained control, this field is an opaque value that OSPM must simply use in its evaluation of the _FSL object to set the level to this performance state.
TripPoint	<b>Integer</b> (DWORD)	0-9: The active cooling trip point number that corresponds to this performance state. If the _ART object is defined, OSPM may optionally use information provided by the _ART object and _FPS objects to select alternative fan performance states. Only one entry per unique trip point number is allowed in the _FPS. 0x0A- 0xFFFFFFF: Reserved 0xFFFFFFFF: Indicates that this performance state does not correspond with a specific active cooling trip point.
Speed	<b>Integer</b> (DWORD)	Indicates the speed of the fan in revolutions per minute in this performance state.
NoiseLevel	<b>Integer</b> (DWORD)	This optional field indicates the audible noise emitted by the fan in this performance state. The value represents the noise in 10ths of decibels. For example, if the fan emits noise at 28.3dB in this performance state, the value of this field would be 283. A value of 0xFFFFFFFF indicates that this field is not populated.
Power	<b>Integer</b> (DWORD)	This optional field indicates the power consumption (in milliwatts) of the fan in this performance state. For example, if the fan consumes .5W in this performance state, the value of this field would be 500. A value of 0xFFFFFFFF indicates that this field is not populated.

### 11.3.1.3 \_FSL (Fan Set Level)

The optional \_FSL object is a control method that OSPM evaluates to set a fan device's speed (performance state) to a specific level

#### Arguments: (1)

Arg0 – Level (**Integer**): conveys to the platform the fan speed level to be set.

#### Return Value:

None

### Argument Information

Arg0: Level. If the fan supports fine-grained control, Level is a percentage of maximum level (0-100) that the platform is to engage the fan. If the fan does not support fine-grained control, Level is a Control field value from a package in the \_FPS object's package list. A Level value of zero causes the platform to turn off the fan.

### 11.3.1.4 \_FST (Fan Status)

The optional \_FST object provides status information for the fan device.

#### Arguments:

None

#### Return Value:

A **Package** containing fan device status information as described in [Table 11-344](#) below

\_FST evaluation returns a package of the following format:

```
Package () {
    Revision,           // Integer
    Control,           // Integer DWORD
    Speed              // Integer DWORD
}
```

**Table 11-344 FST Package Details**

Field	Format	Description
Revision	Integer	Current revision is: 0
Control	<b>Integer</b> (DWORD)	The current control value used to operate the Fan. If the fan is not operating Control will be zero. If the fan is operating, Control is the Level argument passed in the evaluation of the _FSL object.
Speed	<b>Integer</b> (DWORD)	The current fan speed in revolutions per minute at which the fan is rotating. A value of 0xFFFFFFFF indicates that the fan does not support speed reporting.

## 11.4 Thermal Objects

Objects related to thermal management are listed in the following table.

**Table 11-345 Thermal Objects**

Object	Description
_ACx	Returns active cooling policy threshold values in tenths of degrees.
_ALx	List of active cooling device objects.
_ART	Table of values that convey the Active Cooling Relationship between devices
_CRT	Returns critical trip point in tenths of degrees where OSPM must perform a critical shutdown.
_HOT	Returns critical trip point in tenths of degrees where OSPM may choose to transition the system into S4.
_MTL	Returns the minimum throttle limit of a zone, when defined under a thermal zone. T
_NTT	Returns the temperature change threshold for devices containing native temperature sensors to cause evaluation of the _TPT object
_PSL	List of processor device objects for clock throttling.

Object	Description
_PSV	Returns the passive cooling policy threshold value in tenths of degrees.
_RTV	Conveys whether temperatures are expressed in terms of absolute or relative values.
_SCP	Sets platform cooling policy (active or passive).
_STR	String name for this thermal zone.
_TC1	Thermal constant for passive cooling.
_TC2	Thermal constant for passive cooling.
_TFP	Thermal fast sampling period for Passive cooling in milliseconds.
_TMP	Returns the thermal zone's current temperature in tenths of degrees.
_TPT	Conveys the temperature of a devices internal temperature sensor to the platform when a temperature trip point is crossed or a meaningful change in temperature occurs.
_TRT	Table of values that convey the Thermal Relationship between devices
_TSN	Returns a reference to the thermal sensor device used to monitor the temperature of the thermal zone (when defined under a thermal zone).
_TSP	Thermal sampling period for Passive cooling in tenths of seconds.
_TST	Conveys the minimum separation for a devices' programmable temperature trip points.
_TZD	List of devices whose temperature is measured by this thermal zone.
_TZM	Returns the thermal zone for which a device is a member.
_TZP	Thermal zone polling frequency in tenths of seconds.

With the exception of \_TPT, \_TST, and the \_TZM objects, the objects described in the following sections may exist under a thermal zone. Devices with embedded thermal sensors and controls may contain static cooling temperature trip points or dynamic cooling temperature trip points that must be programmed by the device's driver. In this case, thermal objects defined under a device serve to convey the platform specific values for these settings to the devices driver.

### 11.4.1 \_ACx (Active Cooling)

This optional object, if present under a thermal zone, returns the temperature trip point at which OSPM must start or stop Active cooling, where  $x$  is a value between 0 and 9 that designates multiple active cooling levels of the thermal zone. If the Active cooling device has one cooling level (that is, "on") then that cooling level must be defined as \_AC0. If the cooling device has two levels of capability, such as a high fan speed and a low fan speed, then they must be defined as \_AC0 and \_AC1 respectively. The smaller the value of  $x$ , the greater the cooling strength \_ACx represents. In the above example, \_AC0 represents the greater level of cooling (the faster fan speed) and \_AC1 represents the lesser level of cooling (the slower fan speed). For every \_ACx method, there must be a matching \_ALx object or a corresponding entry in an \_ART object's active cooling relationship list.

If this object it present under a device, the device's driver evaluates this object to determine the device's corresponding active cooling temperature trip point. This value may then be used by the device's driver to program an internal device temperature sensor trip point. When this object is present under a device, the device must contain a native OS device driver interface supporting a corresponding active cooling

control, a matching \_ALx object under the thermal zone of which the device is a member must exist, or a corresponding entry in an \_ART object's active cooling relationship list must.

#### **Arguments:**

None

#### **Return Value:**

An **Integer** containing the active cooling temperature threshold in tenths of degrees Kelvin

The return value is an integer that represents tenths of degrees Kelvin. For example, 300.0K is represented by the integer 3000.

### **11.4.2 \_ALx (Active List)**

This object is defined under a thermal zone and evaluates to a list of Active cooling devices to be turned on when the corresponding \_ACx temperature threshold is exceeded. For example, these devices could be fans.

#### **Arguments:**

None

#### **Return Value:**

A variable-length **Package** containing a list of **References** to active cooling devices

The return value is a package consisting of references to all active cooling devices that should be engaged when the associated active cooling threshold (\_ACx) is exceeded.

When the returned package consists of references to an active cooling device that is a fan device and the fan device implements \_FPS and \_FSL objects, OSPM activates the identified fan at a capability level matching the level identified by this object. For example, if the system has a fan that implements \_FPS object with 5 levels, and if \_AL3 is evaluated by the OSPM causing it to return this fan's reference, then the fan is activated by evaluating \_FSL with the value from the Control field of an \_FPS entry whose TripPoint field value equals 3.

If a thermal zone has the \_ART object defined, then it is not necessary to have any \_ALx objects implemented.

**Note:** *If a thermal zone has \_ART object defined as well as \_ALx defined, the OSPM ignores \_ALx objects and uses \_ART exclusively.*

### **11.4.3 \_ART (Active Cooling Relationship Table)**

The optional \_ART object evaluates to a variable-length package containing a list of packages each of which describes the active cooling relationship between a device within a thermal zone and an active cooling device. OSPM uses the combined information about the active cooling relationships of all devices in the thermal zone to make active cooling policy decisions.

If \_ART is implemented within a thermal zone, OSPM ignores all \_ALx objects as \_ART conveys a mapping for each of the \_ACx trip points to active cooling devices.

The platform can dynamically change the \_ART object by notifying the thermal zone object with a Notify code of 0x83, which will cause OSPM to re-evaluate both the \_TRT and \_ART objects. This allows the platform to change the capability level mapping to various \_ACx trip points dynamically at run time.

### **Arguments:**

None

### **Return Value:**

A variable-length **Package** containing a Revision ID and a list of Active Relationship **Packages** as described below:

## **Return Value Information**

```
Package {
    Revision,                                // Integer – Current revision is: 0
    ActiveRelationshipp[0]                     // Package
    ...
    ActiveRelationshipp[n]                     // Package
}
```

Each ActiveRelationship sub-**Package** contains the elements described below:

```
Package {
    SourceDevice,                            // Object Reference to a Fan Device Object
    TargetDevice,                            // Object Reference to a Device Object
    Weight,                                  // Integer
    AC0MaxLevel,                            // Integer
    AC1MaxLevel,                            // Integer
    AC2MaxLevel,                            // Integer
    AC3MaxLevel,                            // Integer
    AC4MaxLevel,                            // Integer
    AC5MaxLevel,                            // Integer
    AC6MaxLevel,                            // Integer
    AC7MaxLevel,                            // Integer
    AC8MaxLevel,                            // Integer
    AC9MaxLevel,                            // Integer
}
```

**Table 11-346 Thermal Relationship Package Values**

<b>Element</b>	<b>Object Type</b>	<b>Description</b>
SourceDevice	<b>Reference</b> (to a device)	The fan device that has an impact on the cooling of the device indicated by <i>TargetDevice</i> .
TargetDevice	<b>Reference</b> (to a device)	The device that is impacted by the fan device indicated by <i>SourceDevice</i> .

Element	Object Type	Description
Weight	Integer	Indicates the SourceDevice's contribution to the platform's TargetDevice total cooling capability when the fans of all entries in the _ART with the same target device are engaged at their highest (maximum capability) performance state. This is represented as a percentage value (0-100).
AC0MaxLevel	<b>Integer</b> (DWORD)	Indicates the maximum fans speed level in percent (0-100) that OSPM may engage on the <i>SourceDevice</i> when a temperature exceeds the _AC0 trip point value. A value of 0xFFFFFFFF in this field indicates that the SourceDevice is not to be engaged for the trip point.
AC1MaxLevel	<b>Integer</b> (DWORD)	Indicates the maximum fans speed level in percent (0-100) that OSPM may engage on the <i>SourceDevice</i> when a temperature exceeds the _AC1 trip point value. A value of 0xFFFFFFFF in this field indicates that the SourceDevice is not to be engaged for the trip point.
AC2MaxLevel	<b>Integer</b> (DWORD)	Indicates the maximum fans speed level in percent (0-100) that OSPM may engage on the <i>SourceDevice</i> when a temperature exceeds the _AC2 trip point value. A value of 0xFFFFFFFF in this field indicates that the SourceDevice is not to be engaged for the trip point.
AC3MaxLevel	<b>Integer</b> (DWORD)	Indicates the maximum fans speed level in percent (0-100) that OSPM may engage on the <i>SourceDevice</i> when a temperature exceeds the _AC3 trip point value. A value of 0xFFFFFFFF in this field indicates that the SourceDevice is not to be engaged for the trip point.
AC4MaxLevel	<b>Integer</b> (DWORD)	Indicates the maximum fans speed level in percent (0-100) that OSPM may engage on the <i>SourceDevice</i> when a temperature exceeds the _AC4 trip point value. A value of 0xFFFFFFFF in this field indicates that the SourceDevice is not to be engaged for the trip point.
AC5MaxLevel	<b>Integer</b> (DWORD)	Indicates the maximum fans speed level in percent (0-100) that OSPM may engage on the <i>SourceDevice</i> when a temperature exceeds the _AC5 trip point value. A value of 0xFFFFFFFF in this field indicates that the SourceDevice is not to be engaged for the trip point.
AC6MaxLevel	<b>Integer</b> (DWORD)	Indicates the maximum fans speed level in percent (0-100) that OSPM may engage on the <i>SourceDevice</i> when a temperature exceeds the _AC6 trip point value. A value of 0xFFFFFFFF in this field indicates that the SourceDevice is not to be engaged for the trip point.

Element	Object Type	Description
AC7MaxLevel	<b>Integer</b> (DWORD)	Indicates the maximum fans speed level in percent (0-100) that OSPM may engage on the <i>SourceDevice</i> when a temperature exceeds the _AC7 trip point value. A value of 0xFFFFFFFF in this field indicates that the <i>SourceDevice</i> is not to be engaged for the trip point.
AC8MaxLevel	<b>Integer</b> (DWORD)	Indicates the maximum fans speed level in percent (0-100) that OSPM may engage on the <i>SourceDevice</i> when a temperature exceeds the _AC8 trip point value. A value of 0xFFFFFFFF in this field indicates that the <i>SourceDevice</i> is not to be engaged for the trip point.
AC9MaxLevel	<b>Integer</b> (DWORD)	Indicates the maximum fans speed level in percent (0-100) that OSPM may engage on the <i>SourceDevice</i> when a temperature exceeds the _AC9 trip point value. A value of 0xFFFFFFFF in this field indicates that the <i>SourceDevice</i> is not to be engaged for the trip point.

In the case multiple active cooling trip points have been exceeded and \_ART entries indicate various maximum limits for the same *SourceDevice*, OSPM may operate the *SourceDevice* up to the highest ACxMaxLevel value indicated for all exceeded trip points.

#### 11.4.4 \_CRT (Critical Temperature)

This object, when defined under a thermal zone, returns the critical temperature at which OSPM must shutdown the system. If this object is present under a device, the device's driver evaluates this object to determine the device's critical cooling temperature trip point. This value may then be used by the device's driver to program an internal device temperature sensor trip point.

##### Arguments:

None

##### **Return Value:**

An **Integer** containing the critical temperature threshold in tenths of degrees Kelvin

The result is an integer value that represents the critical shutdown threshold in tenths of degrees. For example, 300.0K is represented by the integer 3000.

#### 11.4.5 \_CR3 (Warm/Standby Temperature)

This object, when defined under a thermal zone, returns the critical temperature at which OSPM may choose to transition the system into a low power state with a faster exit latency than S4 sleeping state (e.g. S3, or an equivalent low power state if the LOW\_POWER\_S0\_IDLE\_CAPABLE FADT flag is set). The platform vendor should define \_CR3 to be sufficiently below \_CRT so as to allow enough time to transition the system into this low power state. It may be sufficient to define either \_CR3 or \_HOT depending on the type and thermal characteristics of the specific thermal zone under consideration. If this object is present under a device, the device's driver evaluates this object to determine the device's warm/standby cooling temperature trip point. This value may then be used by the device's driver to program an internal device temperature sensor trip point.

**Arguments:**

None

**Return Value:**

An **Integer** containing the critical temperature threshold in tenths of degrees Kelvin

The result is an integer value that represents the critical shutdown threshold in tenths of degrees. For example, 300.0K is represented by the integer 3000.

**11.4.6 \_DTI (Device Temperature Indication)**

This optional object may be present under a device and is evaluated by OSPM when the device's native (driver managed) temperature sensor has crossed a cooling temperature trip point or when a meaningful change in temperature (as indicated by evaluation of the \_NTT object) has occurred. OSPM evaluation of the \_DTI object enables the platform to take action as a result of these events. For example, the platform may choose to implement fan control hysteresis based on the conveyed value or signal the reevaluation of the \_TDL or \_PDL objects.

**Arguments: (1)**

Arg0 – An **Integer** containing the current value of the temperature sensor (in tenths Kelvin)

**Return Value:**

None

**11.4.7 \_HOT (Hot Temperature)**

This optional object, when defined under a thermal zone, returns the critical temperature at which OSPM may choose to transition the system into the S4 sleeping state. The platform vendor should define \_HOT to be far enough below \_CRT so as to allow OSPM enough time to transition the system into the S4 sleeping state. While dependent on the amount of installed memory, on typical platforms OSPM implementations can transition the system into the S4 sleeping state in tens of seconds. If this object is present under a device, the device's driver evaluates this object to determine the device's hot cooling temperature trip point. This value may then be used by the device's driver to program an internal device temperature sensor trip point.

**Arguments:**

None

**Return Value:**

An **Integer** containing the critical temperature threshold in tenths of degrees Kelvin

The return value is an integer that represents the critical sleep threshold tenths of degrees Kelvin. For example, 300.0K is represented by the integer 3000.

**11.4.8 \_MTL (Minimum Throttle Limit)**

This object, when defined under a thermal zone, returns the minimum throttle limit of a zone. This will determine how much a thermal zone limits the performance of its controlled devices. This value can be used by OSPM to calculate the changes in performance limits it applies to the devices of the thermal zone.

**Arguments:**

None

**Return Value:**

An **Integer** value with the current minimum throttle limit, expressed as a percentage

### 11.4.9 \_NTT (Notification Temperature Threshold)

This optional object may be defined under devices containing native temperature sensors and evaluates to the temperature change threshold for the device where the platform requires notification of the change via evaluation of the \_TPT object.

**Arguments:**

None

**Return Value:**

An **Integer** containing the temperature threshold in tenths of degrees Kelvin.

The return value is an integer that represents the amount of change in device temperature that is meaningful to the platform and for which the platform requires notification via evaluation of the \_TPT object.

### 11.4.10 \_PSL (Passive List)

This object is defined under a thermal zone and evaluates to a list of processor objects to be used for passive cooling.

**Arguments:**

None

**Return Value:**

A variable-length **Package** containing a list of **References** to processor objects

The return value is a package consisting of references to all processor objects that will be used for passive cooling when the zone's passive cooling threshold (\_PSV) is exceeded.

### 11.4.11 \_PSV (Passive)

This optional object, if present under a thermal zone, evaluates to the temperature at which OSPM must activate passive cooling policy.

**Arguments:**

None

**Return Value:**

An **Integer** containing the passive cooling temperature threshold in tenths of degrees Kelvin

The return value is an integer that represents tenths of degrees Kelvin. For example, 300.0 Kelvin is represented by 3000.

If this object is present under a device, the device's driver evaluates this object to determine the device's corresponding passive cooling temperature trip point. This value may then be used by the device's driver to program an internal device temperature sensor trip point. When this object is present under a device, the device must contain a native OS device driver interface supporting a passive cooling control.

### 11.4.12 \_RTV (Relative Temperature Values)

This optional object may be present under a device or a thermal zone and is evaluated by OSPM to determine whether the values returned by temperature trip point and current operating temperature interfaces under the corresponding device or thermal zone represent absolute or relative temperature values.

#### Arguments:

None

#### **Return Value:**

An Integer containing a relative versus absolute indicator

0	Temperatures are absolute
Other	Temperatures are relative

The return value is an integer that indicates whether values returned by temperature trip point and current operating temperature interfaces represent absolute or relative temperature values.

If the \_RTV object is not present or is present and evaluates to zero then OSPM assumes that all values returned by temperature trip point and current operating temperature interfaces under the device or thermal zone represent absolute temperature values expressed in tenths of degrees Kelvin.

If the \_RTV object is present and evaluates to a non zero value then all values returned by temperature trip point and current operating temperature interfaces under the corresponding device or thermal zone represent temperature values relative to a zero point that is defined as the maximum value of the device's or thermal zone's critical cooling temperature trip point. In this case, temperature trip point and current operating temperature interfaces return values in units that are tenths of degrees **below** the zero point.

OSPM evaluates the \_RTV object before evaluating any other temperature trip point or current operating temperature interfaces.

### 11.4.13 \_SCP (Set Cooling Policy)

This optional object is a control method that OSPM invokes to set the platform's cooling mode policy setting. The platform may use the evaluation of \_SCP to reassign \_ACx and \_PSV temperature trip points according to the mode or limits conveyed by OSPM. OSPM will automatically evaluate \_ACx and \_PSV objects after executing \_SCP. This object may exist under a thermal zone or a device.

#### Arguments: (3)

Arg0 – Mode	An <b>Integer</b> containing the cooling mode policy code
Arg1 – AcousticLimit	An <b>Integer</b> containing the acoustic limit
Arg2 – PowerLimit	An <b>Integer</b> containing the power limit

**Return Value:**

None

**Argument Information:**

*Mode* – 0 = Active, 1 = Passive

*Acoustic Limit* – Specifies the maximum acceptable acoustic level that active cooling devices may generate. Values are 1 to 5 where 1 means no acoustic tolerance and 5 means maximum acoustic tolerance.

*Power Limit* – Specifies the maximum acceptable power level that active cooling devices may consume. Values are from 1 to 5 where 1 means no power may be used to cool and 5 means maximum power may be used to cool.

**Example:**

```
// Fan Control is defined as follows:
// Speed 1 (Fan is Off):    Acoustic Limit 1, Power Limit 1, <= 64C
// Speed 2:                 Acoustic Limit 2, Power Limit 2, 65C - 74C
// Speed 3:                 Acoustic Limit 3, Power Limit 3, 75C - 84C
// Speed 4:                 Acoustic Limit 4, Power Limit 4, 85C - 94C
// Speed 5:                 Acoustic Limit 5, Power Limit 5, >= 95C

// _SCP Notifies the platform the current cooling mode.
// Arg0 = Mode
//      0 - Active cooling
//      1 - Passive cooling
// Arg1 = Acoustic Limit
//      1 = No acoustic tolerance
//      ...
//      5 = maximum acoustic tolerance
// Arg2 = Power Limit
//      1 = No power may be used to cool
//      ...
//      5 = maximum power may be used to cool

Method(_SCP, 3, Serialized)
{
    // Store the Cooling Mode in NVS and use as needed in
    // the rest of the ASL Code.
    Store(Arg0, CTYP)

    // Set PSVT to account for a Legacy OS that does not pass
    // either the acoustic limit or Power Limit.
    If(Arg0)
    {
        Store(60, PSVT)
    }
    Else
    {
        Store(97, PSVT)
    }
}
```

```

If (CondRefOf (_OSI , Local 0))
{
    If (\_OSI ("3.0 _SCP Extensions"))
    {
        // Determine Power Limit.
        //
        // NOTE1: PSVT = Passive Cooling Trip Point stored
        // in NVS in Celsius.
        //
        // NOTE2: 4 Active Cooling Trips Points correspond to 5
        // unique Power Limit regions and 5 unique acoustic limit
        // regions.

        //
        // NOTE3: This code will define Passive cooling so that
        // CPU throttling will be initiated within the Power Limit
        // Region passed in such that the next higher Power Limit
        // Region will not be reached.
        Switch(Arg2)
        {

            Case(1)           // Power Limit = 1.
            {
                // Stay in Acoustic Limit 1.
                Store(60,PSVT) // Passive = 60C.
            }
            Case(2)           // Power Limit = 2.
            {
                // Store Highest supported Acoustic Level
                // at this Power Limit (1 or 2).
                Store(70,PSVT)
                If(Lequal(Arg1,1))
                {
                    // Stay in Acoustic Level 1.
                    Store(60,PSVT)
                }
            }
            Case(3)           // Power Limit = 3.
            {
                // Store Highest supported Acoustic Level
                // at this Power Limit (1, 2, or 3).
                Store(80,PSVT)
                If(Lequal(Arg1,2))
                {
                    // Stay in Acoustic Level 1 or 2.
                    Store(70,PSVT)
                }
                If(Lequal(Arg1,1))
                {
                    // Stay in Acoustic Level 1.
                }
            }
        }
    }
}

```

```

        Store(60, PSVT)
    }
}

Case(4)           // Power Limit = 4.
{
    // Store Highest supported Acoustic Level
    // at this Power Limit (1, 2, 3, or 4).
    Store(90, PSVT)
    If(Lequal(Arg1, 3))
    {
        // Stay in Acoustic Level 1 or 2.
        Store(80, PSVT)
    }
    If(Lequal(Arg1, 2))
    {
        // Stay in Acoustic Level 1 or 2.
        Store(70, PSVT)
    }
    If(Lequal(Arg1, 1))
    {
        // Stay in Acoustic Level 1.
        Store(60, PSVT)
    }
}
Case(5)           // Power Limit = 5.
{
    // Store Highest supported Acoustic Level
    // at this Power Limit (1, 2, 3, 4, or 5).
    Store(97, PSVT)
    If(Lequal(Arg1, 4))
    {
        // Stay in Acoustic Level 1 or 2.
        Store(90, PSVT)
    }
    If(Lequal(Arg1, 3))
    {
        // Stay in Acoustic Level 1 or 2.
        Store(80, PSVT)
    }
    If(Lequal(Arg1, 2))
    {
        // Stay in Acoustic Level 1 or 2.
        Store(70, PSVT)
    }
    If(Lequal(Arg1, 1))
    {
        // Stay in Acoustic Level 1.
        Store(60, PSVT)
    }
}
} // Case 5
} // Switch Arg 2
}
```

```

} // _OSI - Extended _SCP
} // CondRefOf _OSI
} // Method _SCP

```

### 11.4.14 \_STR (String)

This optional object, when defined under a thermal zone, returns a string name for this thermal zone. See [Section 6.1.10](#) for full definition of \_STR.

### 11.4.15 \_TC1 (Thermal Constant 1)

This object evaluates to the constant \_TC1 for use in the Passive cooling formula:

$$\Delta\text{Performance} [\%] = \text{_TC1} * (\text{Tn} - \text{Tn-1}) + \text{_TC2} * (\text{Tn} - \text{Tt})$$

#### Arguments:

None

#### **Return Value:**

An **Integer** containing Thermal Constant #1

### 11.4.16 \_TC2 (Thermal Constant 2)

This object evaluates to the constant \_TC2 for use in the Passive cooling formula:

$$\Delta\text{Performance} [\%] = \text{_TC1} * (\text{Tn} - \text{Tn-1}) + \text{_TC2} * (\text{Tn} - \text{Tt})$$

#### Arguments:

None

#### **Return Value:**

An **Integer** containing Thermal Constant #2

### 11.4.17 \_TFP (Thermal fast Sampling Period)

This object evaluates to a thermal sampling period (in milliseconds) used by OSPM to implement the Passive cooling equation. This value, along with \_TC1 and \_TC2, will enable OSPM to provide the proper hysteresis required by the system to accomplish an effective passive cooling policy.

#### Arguments:

None

#### **Return Value:**

An **Integer** containing the sampling period in milliseconds

The granularity of the sampling period is 1 milliseconds. For example, if the sampling period is 30.0 seconds, then \_TFP needs to report 30,000; if the sampling period is 0.5 seconds, then it will report 500. OSPM can normalize the sampling over a longer period if necessary.

If both \_TFP and \_TSP are present in a Thermal Zone, \_TFP overrides \_TSP. Platforms which need to support legacy operating systems from before \_TFP in ACPI 6.0, must specify a \_TSP if a sampling period is required. OS support for \_TFP can be discovered via \_OSC (see [Table 6-200](#)).

### 11.4.18 \_TMP (Temperature)

This control method returns the thermal zone's current operating temperature.

#### **Arguments:**

None

#### **Return Value:**

An **Integer** containing the current temperature of the thermal zone (in tenths of degrees Kelvin)

The return value is the current temperature of the thermal zone in tenths of degrees Kelvin. For example, 300.0K is represented by the integer 3000.

### 11.4.19 \_TPT (Trip Point Temperature)

This optional object may be present under a device and is invoked by OSPM to indicate to the platform that the devices' embedded temperature sensor has crossed a cooling temperature trip point. After invocation, OSPM immediately evaluates the devices' Active and Passive cooling temperature trip point values. This enables the platform to implement hysteresis.

#### **Arguments:** (1)

Arg0 – An **Integer** containing the current value of the temperature sensor (in tenths Kelvin)

#### **Return Value:**

None

The \_TPT object is deprecated in ACPI 4.0. The \_DTI object , [Section 11.4.6 “\\_DTI \(Device Temperature Indication\)”](#), should be used instead.

### 11.4.20 \_TRT (Thermal Relationship Table)

This object evaluates to a package of packages each of which describes the thermal relationship between devices within a thermal zone. OSPM uses the combined information about the thermal relationships of all devices in the thermal zone to make thermal policy decisions.

#### **Arguments:**

None

#### **Return Value:**

A variable-length **Package** containing a list of Thermal Relationship **Packages** as described below

#### **Return Value Information**

```
Package {
    Thermal Relationship p[0]          // Package
    ...
    Thermal Relationship p[n]          // Package
}
```

Each ThermalRelationship sub-Package contains the elements described below:

```
Package {
```

```

SourceDevice,           // Object Reference to a Device Object
TargetDevice,          // Object Reference to a Device Object
Influence,             // Integer
SamplingPeriod,        // Integer
Reserved1,             // Integer
Reserved2,             // Integer
Reserved3,             // Integer
Reserved4              // Integer
},

```

**Table 11-347 Thermal Relationship Package Values**

Element	Object Type	Description
<b>Source Device</b>	<b>Reference (to a device)</b>	The device that is influencing the device indicated by <i>TargetDevice</i> .
Target Device	Reference (to a device)	The device that is influenced by the device indicated by <i>SourceDevice</i> .
Influence	Integer	The thermal influence of <i>SourceDevice</i> on <i>TargetDevice</i> - represented as tenths of degrees Kelvin that the device indicated by <i>SourceDevice</i> raises the temperature of the device indicated by <i>TargetDevice</i> per watt of thermal load that <i>SourceDevice</i> generates.
Sampling Period	Integer	The minimum period of time in tenths of seconds that OSPM should wait after applying a passive control to the device indicated by <i>SourceDevice</i> to detect its impact on the device indicated by <i>TargetDevice</i> .
Reserved (1-4)	Integer	Reserved for future use.

### 11.4.21 \_TSN (Thermal Sensor Device)

This object, when defined under a thermal zone, returns a reference to the thermal sensor device used to monitor the temperature of the thermal zone. For Native OS Device Driver Thermal Interfaces, see [Table 11.5](#).

#### Arguments:

None

#### **Return Value:**

A single Reference to the namespace device object that monitors the temperature of the thermal zone.

### 11.4.22 \_TSP (Thermal Sampling Period)

This object evaluates to a thermal sampling period (in tenths of seconds) used by OSPM to implement the Passive cooling equation. This value, along with \_TC1 and \_TC2, will enable OSPM to provide the proper hysteresis required by the system to accomplish an effective passive cooling policy.

#### Arguments:

None

**Return Value:**

An **Integer** containing the sampling period in tenths of seconds

The granularity of the sampling period is 0.1 seconds. For example, if the sampling period is 30.0 seconds, then \_TSP needs to report 300; if the sampling period is 0.5 seconds, then it will report 5. OSPM can normalize the sampling over a longer period if necessary.

If both \_TFP and \_TSP are present in a Thermal Zone, \_TFP overrides \_TSP. Platforms which need to support legacy operating systems from before \_TFP in ACPI 6.0 must specify a \_TSP if a sampling period is required. OS support for \_TFP can be discovered via \_OSC (see [Table 6-200](#)).

### 11.4.23 \_TST (Temperature Sensor Threshold)

This optional object may be present under a device and is evaluated by OSPM to determine the minimum separation for a devices' programmable temperature trip points. When a device contains multiple programmable temperature trip points, it may not be necessary for OSPM to poll the device's temperature after crossing a temperature trip point when performing passive cooling control policy.

**Arguments:**

None

**Return Value:**

An **Integer** containing the sensor threshold (in tenths of degrees Kelvin)

To eliminate polling, the device can program intermediate trip points of interest (higher or lower than the current temperature) and signal the crossing of the intermediate trip points to OSPM. The distance between the current temperature and these intermediate trip points may be platform specific and must be set far enough away from the current temperature so as to not miss the crossing of a meaningful temperature point. The \_TST object conveys the recommended minimum separation between the current temperature and an intermediate temperature trip point to OSPM.

### 11.4.24 \_TZD (Thermal Zone Devices)

This optional object evaluates to a package of device names. Each name corresponds to a device in the ACPI namespace that is associated with the thermal zone. The temperature reported by the thermal zone is roughly correspondent to that of each of the devices.

**Arguments:**

None

**Return Value:**

A variable-length **Package** containing a list of **References** to thermal zone devices

The list of devices returned by the control method need not be a complete and absolute list of devices affected by the thermal zone. However, the package should at least contain the devices that would uniquely identify where this thermal zone is located in the machine. For example, a thermal zone in a docking station should include a device in the docking station, a thermal zone for the CD-ROM bay, should include the CD-ROM.

### 11.4.25 \_TZM (Thermal Zone Member)

This optional object may exist under any device definition and evaluates to a reference to the thermal zone of which the device is a member.

#### Arguments:

None

#### **Return Value:**

A **Reference** to the parent device

### 11.4.26 \_TZP (Thermal Zone Polling)

This optional object evaluates to a *recommended* polling frequency (in tenths of seconds) for this thermal zone. A value of zero indicates that OSPM does not need to poll the temperature of this thermal zone in order to detect temperature changes (the hardware is capable of generating asynchronous notifications).

#### Arguments:

None

#### **Return Value:**

An **Integer** containing the recommended polling frequency in tenths of seconds

The return value contains the recommended polling frequency, in tenths of seconds. A value of zero indicates that polling is not necessary.

The use of polling is allowed but strongly discouraged by this specification. OEMs should design systems that asynchronously notify OSPM whenever a meaningful change in the zone's temperature occurs—relieving the OS of the overhead associated with polling. See [Section 11.1.3](#), “Detecting Temperature Changes,” for more information.

This value is specified as tenths of seconds with a 1 second granularity. A minimum value of 30 seconds (\_TZP evaluates to 300) and a maximum value of 300 seconds (in other words, 5 minutes) (\_TZP evaluates to 3000) may be specified. As this is a *recommended* value, OSPM will consider other factors when determining the actual polling frequency to use.

## 11.5 Native OS Device Driver Thermal Interfaces

OS implementations compatible with the ACPI 3.0 thermal model, interface with the thermal objects of a thermal zone but also comprehend the thermal zone devices' OS native device driver interfaces that perform similar functions to the thermal objects at the device level.

The recommended native OS device driver thermal interfaces that enable OSPM to perform optimal performance / thermal management include:

- Reading a value from a device's embedded thermal sensor
- Reading a value that indicates whether temperature and trip point values are reported in absolute or relative temperatures
- Setting the platform's cooling mode policy setting
- Reading the embedded thermal sensor's threshold
- Reading the device's active and passive cooling temperature trip points

- Reading the device's association to a thermal zone
- Signaling the crossing of a thermal trip point
- Reading the desired polling frequency at which to check the device's temperature if the device cannot signal OSPM or signal OSPM optimally (both before and after a temperature trip point is crossed)
- Setting / limiting a device's performance / throttling states
- Engaging / disengaging a device's active cooling controls

These interfaces are OS specific and as such the OS vendor defines the exact interface definition for each target operating system.

## 11.6 Thermal Zone Interface Requirements

While not all thermal zone interfaces are required to be present in each thermal zone, OSPM levies conditional requirements for the presence of specific thermal zone interfaces based on the existence of other related thermal zone interfaces. These interfaces may be implemented by thermal zone-wide objects or by OS-specific device driver exposed thermal interfaces. The requirements are outlined below:

- A thermal zone must contain at least one temperature interface; either the \_TMP object or a member device temperature interface.
- A thermal zone must contain at least one trip point (critical, near critical, active, or passive).
- If \_ACx is defined then an associated \_ALx must be defined (e.g. defining \_AC0 requires \_AL0 also be defined).
- If \_PSV is defined then either the \_PSL or \_TZD objects must exist. The \_PSL and \_TZD objects may both exist.
- If \_PSL is defined then:
  - If a linear performance control register is defined (via either P\_BLK or the \_PTC, \_TSS, \_TPC objects) for a processor defined in \_PSL or for a processor device in the zone as indicated by \_TZM then the \_TC1, \_TC2, and objects must exist. A\_TFP or \_TSP object must also be defined if the device requires polling.
  - If a linear performance control register is not defined (via either P\_BLK or the \_PTC, \_TSS, \_TPC objects) for a processor defined in \_PSL or for a processor device in the zone as indicated by \_TZM then the processor must support processor performance states (in other words, the processor's processor object must include \_PCT, \_PSS, and \_PPC).
- If \_PSV is defined and \_PSL is not defined then at least one device in thermal zone, as indicated by either the \_TZD device list or devices' \_TZM objects, must support device performance states.
- \_SCP is optional.
- \_TZD is optional outside of the \_PSV requirement outlined above.
- If \_HOT is defined then the system must support the S4 sleeping state.

## 11.7 Thermal Zone Examples

### 11.7.1 Example: The Basic Thermal Zone

The following ASL describes a basic configuration where the entire system is treated as a single thermal zone. Cooling devices for this thermal zone consist of a processor and one single-speed fan. This is an example only.

Notice that this thermal zone object (TZ0) is defined in the \\_SB scope. Thermal zone objects should appear in the namespace under the portion of the system that comprises the thermal zone. For example, a thermal zone that is isolated to a docking station should be defined within the scope of the docking station device. Besides providing for a well-organized namespace, this configuration allows OSPM to dynamically adjust its thermal policy as devices are added or removed from the system.

```

Scope(\_SB) {
    Device(CPU0) {
        Name(_HID, "ACPI0007")
        Name(_UID, 1)
    }
    <...>

    Scope(\_SB.PCI0.ISAO) {
        Device(EC0) {
            Name(_HID, EISAID("PNPOC09"))           // ID for this EC
            Name(_CRS, ResourceTemplate() {          // current resource description for this EC
                IO(Decode16, 0x62, 0x62, 0, 1)
                IO(Decode16, 0x66, 0x66, 0, 1)
            })
            Name(_GPE, 0)                         // GPE index for this EC

            // create EC's region and field for thermal support
            OperationRegion(EC0, EmbeddedControl, 0, 0xFF)
            Field(EC0, ByteAcc, Lock, Preserve) {
                MODE, 1,                           // thermal policy (quiet/perform)
                FAN, 1,                            // fan power (on/off)
                , 6,                               // reserved
                TMP, 16,                           // current temp
                ACO, 16,                           // active cooling temp (fan high)
                , 16,                             // reserved
                PSV, 16,                           // passive cooling temp
                HOT, 16,                           // critical S4 temp
                CRT, 16,                           // critical temp
            }
        }

        // following is a method that OSPM will schedule after
        // it receives an SCI and queries the EC to receive value 7
        Method(_007) {
            Notify (\_SB.PCI0.ISAO.ECO.TZ0, 0x80)
        } // end of Notify method

        // fan cooling on/off - engaged at ACO temp
        PowerResource(PFAN, 0, 0) {
            Method(_STA) { Return (\_SB.PCI0.ISAO.ECO.FAN) }      // check power state
            Method(_ON) { Store (One, \_SB.PCI0.ISAO.ECO.FAN) }     // turn on fan
            Method(_OFF) { Store (Zero, \_SB.PCI0.ISAO.ECO.FAN) }   // turn off fan
        }

        // Create FAN device object
    }
}

```

```

Device (FAN) {
    // Device ID for the FAN
    Name(_HID, EISAID("PNPOCOB"))
    // List power resource for the fan
    Name(_PRO, Package() {PFAN})
}

// create a thermal zone
Thermal Zone (TZ0) {
    Method(_TMP) { Return (\_SB.PCI0.ISA0.ECO.TMP) } // get current temp
    Method(_AC0) { Return (\_SB.PCI0.ISA0.ECO.AC0) } // fan high temp
    Name(_AL0, Package() {\_SB.PCI0.ISA0.ECO.FAN}) // fan is act cool dev
    Method(_PSV) { Return (\_SB.PCI0.ISA0.ECO.PSV) } // passive cooling temp
    Name(_PSL, Package () {\_SB.CPU0}) // passive cooling devices
    Method(_HOT) { Return (\_SB.PCI0.ISA0.ECO.HOT) } // get critical S4 temp
    Method(_CRT) { Return (\_SB.PCI0.ISA0.ECO.CRT) } // get critical temp
    Method(_SCP, 1) { Store (Arg1, \_SB.PCI0.ISA0.ECO.MODE) } // set cooling mode
    Name(_TC1, 4) // bogus example
    constant
        Name(_TC2, 3) // bogus example
    constant
        Name(_TSP, 150) // passive sampling
    = 15 sec
        Name(_TYP, 0) // polling not required
        Name (_STR, Unicode ("System thermal zone"))
    } // end of TZ0

}
} // end of ECO
scope- // end of \_SB.PCI0.ISA0
}

} // end of \_SB scope

```

### 11.7.2 Example: Multiple-Speed Fans

The following ASL describes a thermal zone consisting of a processor and one dual-speed fan. As with the previous example, this thermal zone object (TZ0) is defined in the \\_SB scope and represents the entire system. This is an example only.

```

Scope(\_SB) {
    Device(CPU0) {
        Name(_HID, "ACPI 0007")
        Name(_UID, 1) // unique number for this processor
    }
<...>

Scope(\_SB.PCI0.ISA0) {
    Device(ECO) {
        Name(_HID, EISAID("PNPOCO9")) // ID for this EC
        // current resource description for this EC
        Name(_CRS, ResourceTemplate) {

```

```

        IO(Decode16, 0x62, 0x62, 0, 1)
        IO(Decode16, 0x66, 0x66, 0, 1)
    })
    Name(_GPE, 0)           // GPE index for this EC

    // create EC's region and field for thermal support
    OperationRegion(EC0, EmbeddedControl, 0, 0xFF)
    Field(EC0, ByteAcc, Lock, Preserve) {
        MODE,      1,          // thermal policy (quiet/perform)
        FANO,      1,          // fan strength high/off
        FAN1,      1,          // fan strength low/off
        ,          5,          // reserved
        TMP,       16,         // current temp
        ACO,       16,         // active cooling temp (high)
        AC1,       16,         // active cooling temp (low)
        PSV,       16,         // passive cooling temp
        HOT,      18,         // critical S4 temp
        CRT,      16,         // critical temp
    }

    // following is a method that OSPM will schedule after it
    // receives an SCI and queries the EC to receive value 7
    Method(_007) {
        Notify (\_SB.PCI0.ISA0.EC0.TZ0, 0x80)
    } end of Notify method

    // fan cooling mode high/off - engaged at ACO temp
    PowerResource(FN10, 0, 0) {
        Method(_STA) { Return (\_SB.PCI0.ISA0.EC0.FANO) }           // check power
    }
    state high
    Method(_ON) { Store (One, \_SB.PCI0.ISA0.EC0.FANO) }           // turn on fan at
    Method(_OFF) { Store (Zero, \_SB.PCI0.ISA0.EC0.FANO) }           // turn off fan
}

    // fan cooling mode low/off - engaged at AC1 temp
    PowerResource(FN11, 0, 0) {
        Method(_STA) { Return (\_SB.PCI0.ISA0.EC0.FAN1) }           // check power
    }
    state low
    Method(_ON) { Store (One, \_SB.PCI0.ISA0.EC0.FAN1) }           // turn on fan at
    Method(_OFF) { Store (Zero, \_SB.PCI0.ISA0.EC0.FAN1) }           // turn off fan
}

// Following is a single fan with two speeds. This is represented
// by creating two logical fan devices. When FN2 is turned on then
// the fan is at a low speed. When FN1 and FN2 are both on then
// the fan is at high speed.
//

```

```

// Create FAN device object FN1
Device (FN1) {
    // Device ID for the FAN
    Name(_HID, EISAID("PNPOCOB"))
    Name(_UID, 0)
    Name(_PRO, Package() {FN10, FN11})
}

// Create FAN device object FN2
Device (FN2) {
    // Device ID for the FAN
    Name(_HID, EISAID("PNPOCOB"))
    Name(_UID, 1)
    Name(_PRO, Package() {FN10})
}

// create a thermal zone
Thermal Zone (TZ0) {
    Method(_TMP) { Return (\_SB.PCI0.ISA0.ECO.TMP) }           // get current temp
    Method(_AC0) { Return (\_SB.PCI0.ISA0.ECO.AC0) }             // fan high temp
    Method(_AC1) { Return (\_SB.PCI0.ISA0.ECO.AC1) }             // fan low temp
    Name(_AL0, Package() {\_SB.PCI0.ISA0.ECO.FN1})              // active cooling
    (high)          Name(_AL1, Package() {\_SB.PCI0.ISA0.ECO.FN2}) // active cooling
    (low)           Method(_PSV) { Return (\_SB.PCI0.ISA0.ECO.PSV) } // passive cooling
    temp            Name(_PSL, Package() {\_SB.CPU0})                // passive cooling
    devices         Method(_HOT) { Return (\_SB.PCI0.ISA0.ECO.HOT) } // get critical S4
    temp            Method(_CRT) { Return (\_SB.PCI0.ISA0.ECO.CRT) } // get crit. temp
    Method(_SCP, 1) { Store (Arg1, \_SB.PCI0.ISA0.ECO.MODE) }      // set cooling mode
    Name(_TC1, 4)                                // bogus example
    constant          Name(_TC2, 3)                                // bogus example
    constant          Name(_TSP, 150)                               // passive sampling
    = 15 sec
        Name(_TZP, 0)                                         // polling not required
    } // end of TZ0

} // end of ECO
} // end of \_SB.PCI0.ISA0 scope

} // end of \_SB scope

```

### 11.7.3 Example: Thermal Zone with Multiple Devices

```
Scope(\_SB) {
```

```

Device(CPU0) {

    Name(_HID, "ACPI 0007")
    Name(_UID, 0)

    //
    // Load additional objects if 3.0 Thermal model support is available
    //
    Method(_INI, 0) {
        If (\_OSI("3.0 Thermal Model")) {
            LoadTable("OEM1", "PmRef", "Cpu0", "\\_SB.CPU0") // 3.0 Thermal Model
        }
    }

    // For brevity, most processor objects have been excluded
    // from this example (such as _PSS, _CST, _PCT, _PPC, etc.)

    // Processor Throttle Control object
    Name(_PTC, ResourceTemplate() {
        Register(SystemIO, 32, 0, 0x120) // Processor Control
        Register(SystemIO, 32, 0, 0x120) // Processor Status
    })

    // Throttling Supported States
    // The values shown are for exemplary purposes only
    Name(_TSS, Package() {
        // Read: freq percentage, power, latency, control, status
        Package() {0x64, 1000, 0x0, 0x7, 0x0}, // Throttle off (100%)
        Package() {0x58, 800, 0x0, 0xF, 0x0}, // 87.5%
        Package() {0x4B, 600, 0x0, 0xE, 0x0}, // 75%
        Package() {0x3F, 400, 0x0, 0xD, 0x0} // 62.5%
    })

    // Throttling Present Capabilities
    // The values shown are for exemplary purposes only
    Method(_TPC) {
        If(\_SB.AC) {
            Return(0) // All throttle states available
        } Else {
            Return(2) // Throttle states >= 2 are available
        }
    }
} // end of CPU0 scope

Device(CPU1) {

    Name(_HID, "ACPI 0007")
    Name(_UID, 1)

    //
    // Load additional objects if 3.0 Thermal model support is available
}

```

```

// Method(_INI, 0) {
    If (\_OSI("3.0 Thermal Model")) {
        LoadTable("OEM1", "PmRef", "Cpu1", "\\_SB.CPU1") // 3.0 Thermal Model
    }
}

// For brevity, most processor objects have been excluded
// from this example (such as _PSS, _CST, _PCT, _PPC, _PTC, etc.)

// Processor Throttle Control object
Name(_PTC, ResourceTemplate() {
    Register(SystemIO, 32, 0, 0x120)           // Processor Control
    Register(SystemIO, 32, 0, 0x120)           // Processor Status
})

// Throttling Supported States
// The values shown are for exemplary purposes only
Name(_TSS, Package() {
    // Read: freq percentage, power, latency, control, status
    Package() {0x64, 1000, 0x0, 0x7, 0x0},      // Throttle off (100%)
    Package() {0x58, 800, 0x0, 0xF, 0x0},       // 87.5%
    Package() {0x4B, 600, 0x0, 0xE, 0x0},       // 75%
    Package() {0x3F, 400, 0x0, 0xD, 0x0}        // 62.5%
})

// Throttling Present Capabilities
// The values shown are for exemplary purposes only
Method(_TPC) {
    If(\_SB.AC) {
        Return(0)                                // All throttle states available
    } Else {
        Return(2)                                // Throttle states >= 2 are
available
    }
}

Scope(\_SB.PCI0.ISAO) {
    Device(EC0) {
        Name(_HID, EISAID("PNPOC09"))          // ID for this EC
    }

    //
    // Load additional objects if 3.0 Thermal model support is available
    //
    Method(_INI, 0) {
        If (\_OSI("3.0 Thermal Model")) {
            LoadTable("OEM1", "PmRef", "Tz3", "\\_SB.PCI0.ISAO.ECO") // 3.0 Tz
        }
    }
}

```

```

// Current resource description for this EC
Name(_CRS,
    ResourceTemplate() {
        IO(Decode16, 0x62, 0x62, 0, 1)
        IO(Decode16, 0x66, 0x66, 0, 1)
    })

Name(_GPE, 0)           // GPE index for this EC

// Create EC's region and field for thermal support
OperationRegion(EC0, EmbeddedControl, 0, 0xFF)
Field(EC0, ByteAcc, Lock, Preserve) {
    MODE,      1,          // thermal policy (quiet/perform)
    FANO,      1,          // fan strength high/off
    ,          6,          // reserved
    TMP,       16,         // current temp
    ACO,       16,         // active cooling temp
    PSV,       16,         // passive cooling temp
    HOT,       16,         // critical S4 temp
    CRT,       16,         // critical temp
}

// Following is a method that OSPM will schedule after it
// fan cooling mode high/off - engaged at ACO temp
PowerResource(FN10, 0, 0) {
    Method(_STA) { Return (\_SB.PCI0.ISA0.ECO.FANO) }          // check power state
    Method(_ON) { Store (One, \_SB.PCI0.ISA0.ECO.FANO) }        // turn on fan at high
    Method(_OFF) { Store (Zero, \_SB.PCI0.ISA0.ECO.FANO) }      // turn off fan
}

// Following is a single fan with one speed.
// Create FAN device object FN1
Device (FN1) {
    // Device ID for the FAN
    Name(_HID, EISAID("PNPOCOB"))
    Name(_UID, 0)
    Name(_PRO, Package(){FN10})
}

// Receives an SCI and queries the EC to receive value 7
Method(_007) {
    Notify (\_SB.PCI0.ISA0.ECO.TZ0, 0x80)
} // end of Notify method

// Create standard specific thermal zone
ThermalZone (TZ0) {
    Method(_TMP) { Return (\_SB.PCI0.ISA0.ECO.TMP) }           // get current temp
    Name(_PSL, Package() {\_SB.CPU0, \_SB.CPU1})                // passive cooling
}

devices
    Name(_AL0, Package() {\_SB.PCI0.ISA0.ECO.FN1})             // active cooling
    Method(_AC0) { Return (\_SB.PCI0.ISA0.ECO.ACO) }            // fan temp (high)
}

```

```

        Method(_AC1) { Return (\_SB.PCI0.I SA0.ECO.AC1) }           // fan temp (low)
        Method(_PSV) { Return (\_SB.PCI0.I SA0.ECO.PSV) }           // passive cooling
temp
        Method(_HOT) { Return (\_SB.PCI0.I SA0.ECO.HOT) }           // get critical S4
temp
        Method(_CRT) { Return (\_SB.PCI0.I SA0.ECO.CRT) }           // get crit. temp
        Name(_TC1, 4)                                              // bogus example
constant
        Name(_TC2, 3)                                              // bogus example
constant
        Method(_SCP, 1) { Store (Arg0, \_SB.PCI0.I SA0.ECO.MODE) } // set cooling mode
        Name(_TSP, 150)                                            // passive sampling
= 15 sec
    } // end of TZ0

    } // end of ECO
} // end of \_SB.PCI0.I SA0 scope
} // end of \_SB scope

// 
// ACPI 3.0 Thermal Model SSDT
//
DefinitionBlock (
    "TZASSDT.aml",
    "OEM1",
    0x01,
    "PmRef",
    "Tz3",
    0x3000
)
{
    External (\_SB.PCI0.I SA0.ECO, DeviceObj )
    External (\_SB.CPU0, DeviceObj )
    External (\_SB.CPU1, DeviceObj )

    Scope(\_SB.PCI0.I SA0.ECO)
    {
        // Create an ACPI 3.0 specific thermal zone
        Thermal Zone (TZ0) {
            // This TRT is for exemplary purposes only
            Name(_TRT, Package() {
                // Thermal relationship package data. A package is generated for
                // each permutation of device sets. 2 devices = 4 entries.
                // Read: source, target, thermal influence, sampling period, 4 reserved
                Package () {\_SB.CPU0, \_SB.CPU0, 20, 1, 0, 0, 0, 0},
                Package () {\_SB.CPU0, \_SB.CPU1, 10, 15, 0, 0, 0, 0},
                Package () {\_SB.CPU1, \_SB.CPU0, 10, 15, 0, 0, 0, 0},
                Package () {\_SB.CPU1, \_SB.CPU1, 20, 1, 0, 0, 0, 0}
            }) // end of TRT
        } // end of TZ0
    } // end of ECO Scope
}

```

```

} // end of SSDT

//
// CPU0 3.0 Thermal Model SSDT
//
Defini ti onBl ock (
    "CPU0SSDT. aml",
    "OEM1",
    0x01,
    "PmRef",
    "CPU0",
    0x3000
)
{
    External (\_SB. CPU0, Devi ceObj )
    External (\_SB. PCI0. ISAO. TZ0, Thermal ZoneObj )

    Scope(\_SB. CPU0)
    {
        //
        // Add the objects required for 3.0 extended thermal support
        //
        // Create a region and fields for thermal support; the platform
        // fills in the values and traps on writes to enable hysteresis.
        // The Operation Region location is invalid
        OperationRegion(CP00, SystemMemory, 0x00000000, 0xA)
        Field(CP00, ByteAcc, Lock, Preserve) {
            SCP,     1,           // thermal policy (passive/active)
            RTV,     1,           // absolute or relative temperature
            ,       6,           // reserved
            ACO,     16,          // active cooling temp
            PSV,     16,          // passive cooling temp
            CRT,     16,          // critical temp
            TPT,     16,          // Temp trip point crossed
            TST,     8,           // Temp sensor threshold
        }
        Method(_TZM, 0) { Return(\_SB. PCI0. ISAO. TZ0) } // thermal zone member

        // Some thermal zone methods are now located under the
        // thermal device participating in the 3.0 thermal model.
        // These methods provide device specific thermal information
        Method(_SCP, 1) { Store (Arg0, \_SB. CPU0. SCP) }      // set cooling mode
        Method(_RTV) { Return (\_SB. CPU0. RTV) }             // absolute or relative temp
        Method(_ACO) { Return (\_SB. CPU0. ACO) }             // active cooling (fan) temp
        Method(_PSV) { Return (\_SB. CPU0. PSV) }             // passive cooling temp
        Method(_CRT) { Return (\_SB. CPU0. CRT) }             // critical temp
        Name(_TC1, 4)                                         // thermal constant 1 (INVALID)
        Name(_TC2, 3)                                         // thermal constant 2 (INVALID)
        Method(_TPT, 1) { Store (Arg0, \_SB. CPU0. TPT) }      // trip point temp
    }
}

```

```

Method(_TST) { Return (\_SB.CPU0.TST) }           // temp sensor threshold

} // end of CPU0 scope
} // end of SSDT

//
// CPU1 3.0 Thermal Model SSDT
//
DefinitionBlock (
    "CPU1SSDT.aml",
    "OEM1",
    0x01,
    "PmRef",
    "CPU1",
    0x3000
)
{
    External (\_SB.CPU1, DeviceObj)
    External (\_SB.PCI0.ISA0.TZ0, ThermalZoneObj)

Scope(\_SB.CPU1)
{
    //
    // Add the objects required for 3.0 extended thermal support
    //
    // Create a region and fields for thermal support; the platform
    // fills in the values and traps on writes to enable hysteresis.
    // The Operation Region location is invalid
    OperationRegion(CP01, SystemIO, 0x00000008, 0xA)
    Field(CP01, ByteAcc, Lock, Preserve) {
        SCP, 1,          // thermal policy (passive/active)
        RTV, 1,          // absolute or relative temperature
        , 6,            // reserved
        ACO, 16,         // active cooling temp
        PSV, 16,         // passive cooling temp
        CRT, 16,         // critical temp
        TPT, 16,         // Temp trip point crossed
        TST, 8           // Temp sensor threshold
    }

    Method(_TZM, 0) { Return(\_SB.PCI0.ISA0.TZ0) } // thermal zone member

    //
    // Some thermal zone methods are now located under the
    // thermal device participating in the 3.0 thermal model.
    // These methods provide device specific thermal information
    Method(_SCP, 1) { Store(Arg0, \_SB.CPU1.SCP) } // set cooling mode
    Method(_RTV) { Return (\_SB.CPU1.RTV) }          // absolute or relative temp
    Method(_ACO) { Return (\_SB.CPU1.ACO) }          // active cooling (fan) temp
    Method(_PSV) { Return (\_SB.CPU1.PSV) }          // passive cooling temp
    Method(_CRT) { Return (\_SB.CPU1.CRT) }          // critical temp
}

```

```
Name(_TC1, 4)                                // thermal constant 1 (INVALID)
Name(_TC2, 3)                                // thermal constant 2 (INVALID)
Method(_TPC, 1) { Store (Arg0, \_SB.CPU1.TPT)} // trip point temp
Method(_TST) { Return (\_SB.CPU1.TST) }        // temp sensor threshold

}

}                                                 // end of CPU1 scope
                                                // end of SSDT
```

# 12 ACPI Embedded Controller Interface Specification

---

ACPI defines a standard hardware and software communications interface between an OS driver and an embedded controller. This allows any OS to provide a standard driver that can directly communicate with an embedded controller in the system, thus allowing other drivers within the system to communicate with and use the resources of system embedded controllers. This in turn enables the OEM to provide platform features that the OS OSPM and applications can take advantage of.

ACPI also defines a standard hardware and software communications interface between an OS driver and an Embedded Controller-based SMB-HC (EC-SMB-HC).

The ACPI standard supports multiple embedded controllers in a system, each with its own resources. Each embedded controller has a flat byte-addressable I/O space, currently defined as 256 bytes. Features implemented in the embedded controller have an event “query” mechanism that allows feature hardware implemented by the embedded controller to gain the attention of an OS driver or ASL/AML code handler. The interface has been specified to work on the most popular embedded controllers on the market today, only requiring changes in the way the embedded controller is “wired” to the host interface.

Two interfaces are specified:

- A private interface, exclusively owned by the embedded controller driver.
- A shared interface, used by the embedded controller driver and some other driver.

This interface is separate from the traditional PC keyboard controller. Some OEMs might choose to implement the ACPI Embedded Controller Interface (ECI) within the same embedded controller as the keyboard controller function, but the ECI requires its own unique host resources (interrupt event and access registers).

This interface does support sharing the ECI with an inter-environment interface (such as SMI) and relies on the ACPI-defined “Global Lock” protocol. Note, however, that HW-reduced ACPI platforms, which do not support the Global Lock, cannot share the EC interface. For information about the Global Lock interface, see [Section 5.2.10.1](#), “Global Lock.” Both the shared and private EC interfaces are described in the following sections.


The ECI has been designed such that a platform can use it in either the legacy or ACPI modes with minimal changes between the two operating environments. This is to encourage standardization for this interface to enable faster development of platforms as well as opening up features within these controllers to higher levels of software.

## 12.1 Embedded Controller Interface Description

Embedded controllers are the general class of microcontrollers used to support OEM-specific implementations. The ACPI specification supports embedded controllers in any platform design, as long as the microcontroller conforms to one of the models described in this section. The embedded controller is a unique feature in that it can perform complex low-level functions through a simple interface to the host microprocessor(s).

Although there is a large variety of microcontrollers in the market today, the most commonly used embedded controllers include a host interface that connects the embedded controller to the host data bus, allowing bi-directional communications. A bi-directional interrupt scheme reduces the host processor latency in communicating with the embedded controller.

Currently, the most common host interface architecture incorporated into microcontrollers is modeled after the standard IA-PC architecture keyboard controller. This keyboard controller is accessed at 0x60 and 0x64 in system I/O space. Port 0x60 is termed the data register, and allows bi-directional data transfers to and from the host and embedded controller. Port 0x64 is termed the command/status register; it returns port status information upon a read, and generates a command sequence to the embedded controller upon a write. This same class of controllers also includes a second decode range that shares the same properties as the keyboard interface by having a command/status register and a data register. The following diagram graphically depicts this interface.

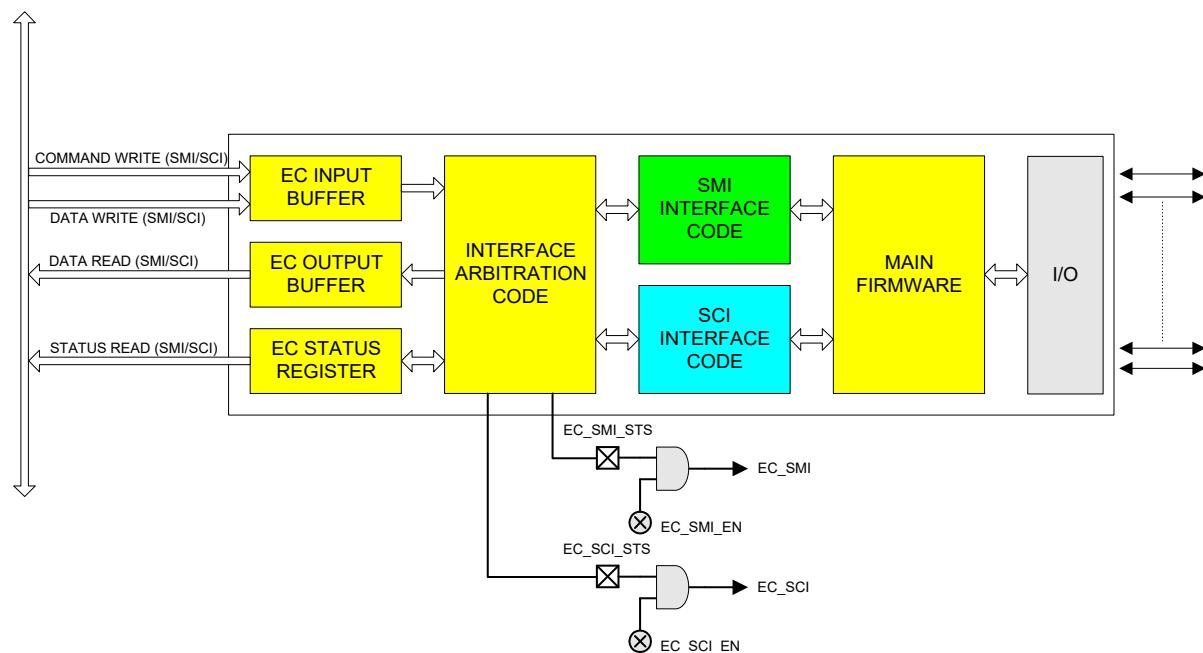

**Figure 12-66 Shared Interface**

The diagram above depicts the general register model supported by the ACPI Embedded Controller Interface.

The first method uses an embedded controller interface shared between OSPM and the system management code, which requires the Global Lock semaphore overhead to arbitrate ownership. The second method is a dedicated embedded controller decode range for sole use by OSPM driver. The following diagram illustrates the embedded controller architecture that includes a dedicated ACPI interface.

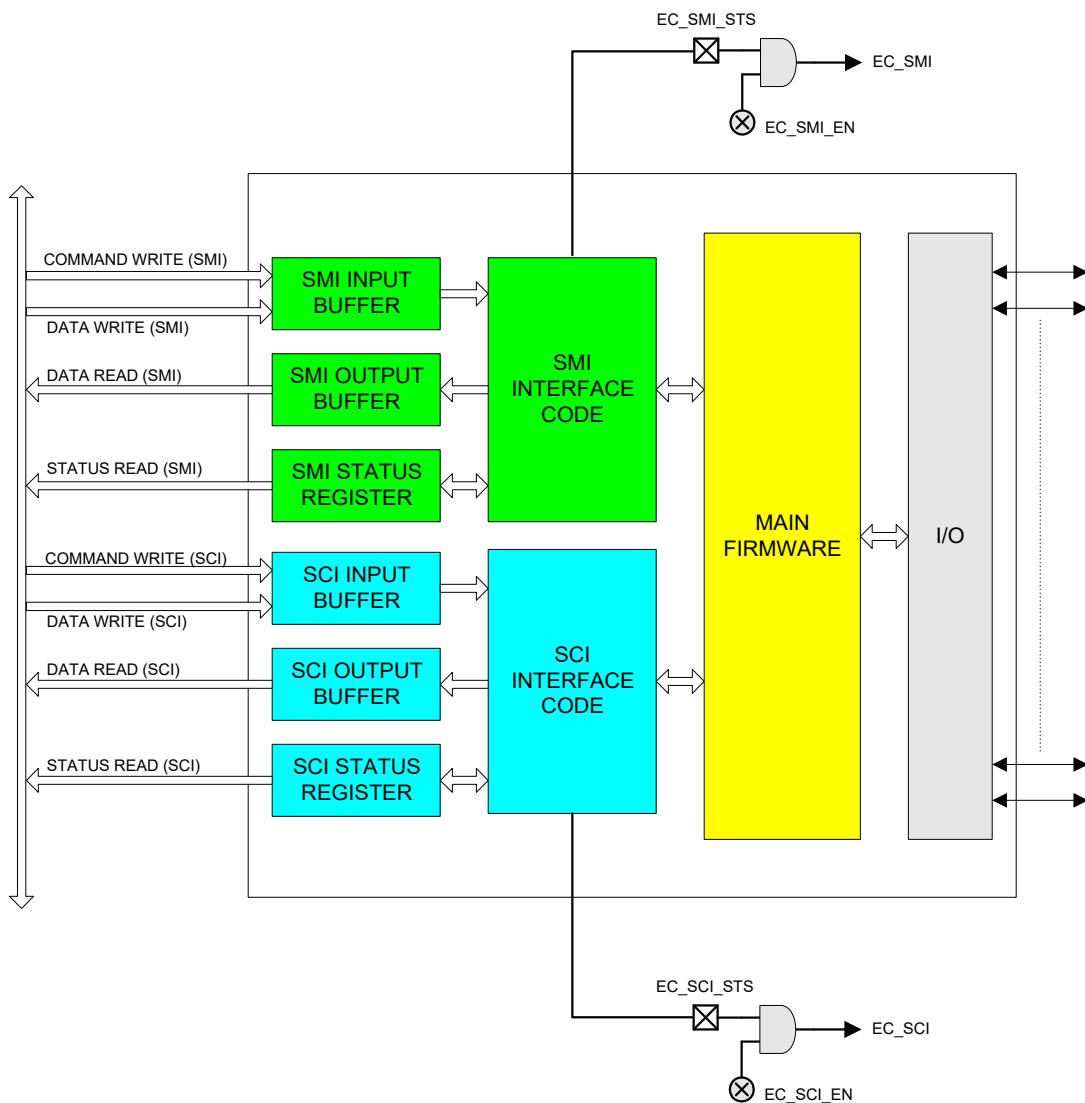


Figure 12-67 Private Interface

The private interface allows OSPM to communicate with the embedded controller without the additional software overhead associated with using the Global Lock. Several common system configurations can provide the additional embedded controller interfaces:

- Non-shared embedded controller. This will be the most common case where there is no need for the system management handler to communicate with the embedded controller when the system transitions to ACPI mode. OSPM processes all normal types of system management events, and the system management handler does not need to take any actions.
- Integrated keyboard controller and embedded controller. This provides three host interfaces as described earlier by including the standard keyboard controller in an existing component (chip set, I/O controller) and adding a discrete, standard embedded controller with two interfaces for system management activities.

- Standard keyboard controller and embedded controller. This provides three host interfaces by providing a keyboard controller as a distinct component, and two host interfaces are provided in the embedded controller for system management activities.
- Two embedded controllers. This provides up to four host interfaces by using two embedded controllers; one controller for system management activities providing up to two host interfaces, and one controller for keyboard controller functions providing up to two host interfaces.
- Embedded controller and no keyboard controller. Future platforms might provide keyboard functionality through an entirely different mechanism, which would allow for two host interfaces in an embedded controller for system management activities.

To handle the general embedded controller interface (as opposed to a dedicated interface) model, a method is available to make the embedded controller a shareable resource between multiple tasks running under the operating system's control and the system management interrupt handler. This method, as described in this section, requires several changes:

- Additional external hardware
- Embedded controller firmware changes
- System management interrupt handler firmware changes
- Operating software changes

Access to the shared embedded controller interface requires additional software to arbitrate between the operating system's use of the interface and the system management handler's use of the interface. This is done using the Global Lock as described in [Section 5.2.10.1](#), "Global Lock", but is not supported on HW-reduced ACPI platforms.

This interface sharing protocol also requires embedded controller firmware changes, in order to ensure that collisions do not occur at the interface. A collision could occur if a byte is placed in the system output buffer and an interrupt is then generated. There is a small window of time when the incorrect recipient could receive the data. This problem is resolved by ensuring that the firmware in the embedded controller does not place any data in the output buffer until it is requested by OSPM or the system management handler.

More detailed algorithms and descriptions are provided in the following sections.

## 12.2 Embedded Controller Register Descriptions

The embedded controller contains three registers at two address locations: EC\_SC and EC\_DATA. The EC\_SC, or Embedded Controller Status/Command register, acts as two registers: a status register for reads to this port and a command register for writes to this port. The EC\_DATA (Embedded Controller Data register) acts as a port for transferring data between the host CPU and the embedded controller.

### 12.2.1 Embedded Controller Status, EC\_SC (R)

This is a read-only register that indicates the current status of the embedded controller interface.

**Table 12-348 Read only register table**

Bit7	Bit6	Bit5	Bit4	Bit3	Bit2	Bit1	Bit0
IGN	SMI_EVT	SCI_EVT	BURST	CMD	IGN	IBF	OBF

Where:

**Table 12-349 Register details**

IGN:	Ignored
SMI_EVT:	1 – Indicates SMI event is pending (requesting SMI query). 0 – No SMI events are pending.
SCI_EVT:	1 – Indicates SCI event is pending (requesting SCI query). 0 – No SCI events are pending.
BURST:	1 – Controller is in burst mode for polled command processing. 0 – Controller is in normal mode for interrupt-driven command processing.
CMD:	1 – Byte in data register is a command byte (only used by controller). 0 – Byte in data register is a data byte (only used by controller).
IBF:	1 – Input buffer is full (data ready for embedded controller). 0 – Input buffer is empty.
OBF:	1 – Output buffer is full (data ready for host). 0 – Output buffer is empty.

The Output Buffer Full (OBF) flag is set when the embedded controller has written a byte of data into the command or data port but the host has not yet read it. After the host reads the status byte and sees the OBF flag set, the host reads the data port to get the byte of data that the embedded controller has written. After the host reads the data byte, the OBF flag is cleared automatically by hardware. This signals the embedded controller that the data has been read by the host and the embedded controller is free to write more data to the host.

The Input Buffer Full (IBF) flag is set when the host has written a byte of data to the command or data port, but the embedded controller has not yet read it. After the embedded controller reads the status byte and sees the IBF flag set, the embedded controller reads the data port to get the byte of data that the host has written. After the embedded controller reads the data byte, the IBF flag is automatically cleared by hardware. This is the signal to the host that the data has been read by the embedded controller and that the host is free to write more data to the embedded controller.

The SCI event (SCI\_EVT) flag is set when the embedded controller has detected an internal event that requires the operating system's attention. The embedded controller sets this bit in the status register, and generates an SCI to OSPM. OSPM needs this bit to differentiate command-complete SCIs from notification SCIs. OSPM uses the query command to request the cause of the SCI\_EVT and take action. For more information, see [Section 12.3, “Embedded Controller Command Set.”](#)

The SMI event (SMI\_EVT) flag is set when the embedded controller has detected an internal event that requires the system management interrupt handler's attention. The embedded controller sets this bit in the status register before generating an SMI.

The Burst (BURST) flag indicates that the embedded controller has received the burst enable command from the host, has halted normal processing, and is waiting for a series of commands to be sent from the

host. This allows OSPM or system management handler to quickly read and write several bytes of data at a time without the overhead of SCIs between the commands.

### 12.2.2 Embedded Controller Command, EC\_SC (W)

This is a write-only register that allows commands to be issued to the embedded controller. Writes to this port are latched in the input data register and the input buffer full flag is set in the status register. Writes to this location also cause the command bit to be set in the status register. This allows the embedded controller to differentiate the start of a command sequence from a data byte write operation.

### 12.2.3 Embedded Controller Data, EC\_DATA (R/W)

This is a read/write register that allows additional command bytes to be issued to the embedded controller, and allows OSPM to read data returned by the embedded controller. Writes to this port by the host are latched in the input data register, and the input buffer full flag is set in the status register. Reads from this register return data from the output data register and clear the output buffer full flag in the status register.

## 12.3 Embedded Controller Command Set

The embedded controller command set allows OSPM to communicate with the embedded controllers. ACPI defines the commands and their byte encodings for use with the embedded controller that are shown in the following table.

**Table 12-350 Embedded Controller Commands**

Embedded Controller Command	Command Byte Encoding
Read Embedded Controller (RD_EC)	0x80
Write Embedded Controller (WR_EC)	0x81
Burst Enable Embedded Controller (BE_EC)	0x82
Burst Disable Embedded Controller (BD_EC)	0x83
Query Embedded Controller (QR_EC)	0x84

### 12.3.1 Read Embedded Controller, RD\_EC (0x80)

This command byte allows OSPM to read a byte in the address space of the embedded controller. This command byte is reserved for exclusive use by OSPM, and it indicates to the embedded controller to generate SCIs in response to related transactions (that is, IBF=0 or OBF=1 in the EC Status Register), rather than SMIs. This command consists of a command byte written to the Embedded Controller Command register (EC\_SC), followed by an address byte written to the Embedded Controller Data register (EC\_DATA). The embedded controller then returns the byte at the addressed location. The data is read at the data port after the OBF flag is set.

### 12.3.2 Write Embedded Controller, WR\_EC (0x81)

This command byte allows OSPM to write a byte in the address space of the embedded controller. This command byte is reserved for exclusive use by OSPM, and it indicates to the embedded controller to generate SCIs in response to related transactions (that is, IBF=0 or OBF=1 in the EC Status Register), rather than SMIs. This command allows OSPM to write a byte in the address space of the embedded

controller. It consists of a command byte written to the Embedded Controller Command register (EC\_SC), followed by an address byte written to the Embedded Controller Data register (EC\_DATA), followed by a data byte written to the Embedded Controller Data Register (EC\_DATA); this is the data byte written at the addressed location.

### **12.3.3 Burst Enable Embedded Controller, BE\_EC (0x82)**

This command byte allows OSPM to request dedicated attention from the embedded controller and (except for critical events) prevents the embedded controller from doing tasks other than receiving command and data from the host processor (either the system management interrupt handler or OSPM). This command is an optimization that allows the host processor to issue several commands back to back, in order to reduce latency at the embedded controller interface. When the controller is in the burst mode, it should transition to the burst disable state if the host does not issue a command within the following guidelines:

- First Access – 400 microseconds
- Subsequent Accesses – 50 microseconds each
- Total Burst Time – 1 millisecond

In addition, the embedded controller can disengage the burst mode at any time to process a critical event. If the embedded controller disables burst mode for any reason other than the burst disable command, it should generate an SCI to OSPM to indicate the change.

While in burst mode, the embedded controller follows these guidelines for OSPM driver:

SCIs are generated as normal, including IBF=0 and OBF=1.

Accesses should be responded to within 50 microseconds.

Burst mode is entered in the following manner:

OSPM driver writes the Burst Enable Embedded Controller, BE\_EC (0x82) command byte and then the Embedded Controller will prepare to enter the Burst mode. This includes processing any routine activities such that it should be able to remain dedicated to OSPM interface for ~ 1 microsecond.

The Embedded Controller sets the Burst bit of the Embedded Controller Status Register, puts the Burst Acknowledge byte (0x90) into the SCI output buffer, sets the OBF bit, and generates an SCI to signal OSPM that it is in Burst mode.

Burst mode is exited the following manner:

OSPM driver writes the Burst Disable Embedded Controller, BD\_EC (0x83) command byte and then the Embedded Controller will exit Burst mode by clearing the Burst bit in the Embedded Controller Status register and generating an SCI signal (due to IBF=0).

The Embedded Controller clears the Burst bit of the Embedded Controller Status Register.

### **12.3.4 Burst Disable Embedded Controller, BD\_EC (0x83)**

This command byte releases the embedded controller from a previous burst enable command and allows it to resume normal processing. This command is sent by OSPM or system management interrupt handler after it has completed its entire queued command sequence to the embedded controller.

### 12.3.5 Query Embedded Controller, QR\_EC (0x84)

OSPM driver sends this command when the SCI\_EVT flag in the EC\_SC register is set. When the embedded controller has detected a system event that must be communicated to OSPM, it first sets the SCI\_EVT flag in the EC\_SC register, generates an SCI, and then waits for OSPM to send the query (QR\_EC) command. OSPM detects the embedded controller SCI, sees the SCI\_EVT flag set, and sends the query command to the embedded controller. Upon receipt of the QR\_EC command byte, the embedded controller places a notification byte with a value between 0-255, indicating the cause of the notification. The notification byte indicates which interrupt handler operation should be executed by OSPM to process the embedded controller SCI. The query value of zero is reserved for a spurious query result and indicates “no outstanding event.”

## 12.4 SMBus Host Controller Notification Header (Optional), OS\_SMB\_EVT

This query command notification header is the special return code that indicates events with an SMBus controller implemented within an embedded controller. These events include:

- Command completion
- Command error
- Alarm reception

The actual notification value is declared in the EC-SMB-HC device object in the ACPI Namespace.

## 12.5 Embedded Controller Firmware


The embedded controller firmware must obey the following rules in order to be ACPI-compatible:

- **SMI Processing.** Although it is not explicitly stated in the command specification section, a shared embedded controller interface has a separate command set for communicating with each environment it plans to support. In other words, the embedded controller knows which environment is generating the command request, as well as which environment is to be notified upon event detection, and can then generate the correct interrupts and notification values. This implies that a system management handler uses commands that parallel the functionality of all the commands for ACPI including query, read, write, and any other implemented specific commands.
- **SCI/SMI Task Queuing.** If the system design is sharing the interface between both a system management interrupt handler and OSPM, the embedded controller should always be prepared to queue a notification if it receives a command. The embedded controller only sets the appropriate event flag in the status (EC\_SC) register if the controller has detected an event that should be communicated to the OS or system management handler. The embedded controller must be able to field commands from either environment without loss of the notification event. At some later time, the OS or system management handler issues a query command to the embedded controller to request the cause of the notification event.
- **Notification Management.** The use of the embedded controller means using the query (QR\_EC) command to notify OSPM of system events requiring action. If the embedded controller is shared with the operating system, the SMI handler uses the SMI\_EVT flag and an SMI query command (not defined in this document) to receive the event notifications. The embedded controller doesn't place event notifications into the output buffer of a shared

interface unless it receives a query command from OSPM or the system management interrupt handler.

## 12.6 Interrupt Model

The EC Interrupt Model uses pulsed interrupts to speed the clearing process. The Interrupt is firmware generated using an EC general-purpose output and has the waveform shown in [Figure 12-68](#). The embedded controller SCI is always wired directly to a GPE input or a GPIO pin, and OSPM driver treats this as an edge event (the EC SCI cannot be shared).

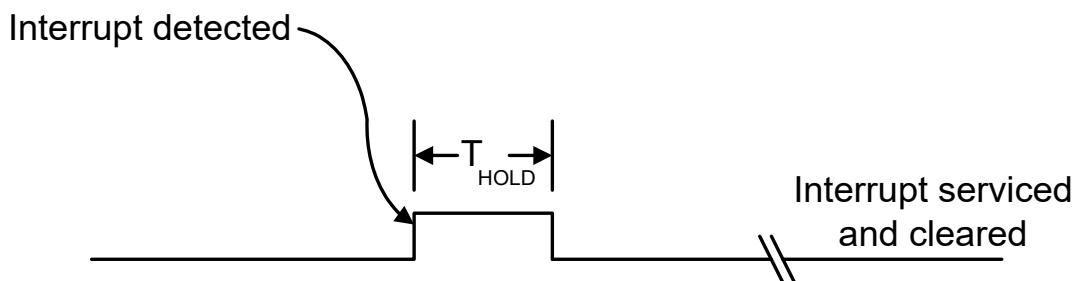

**Figure 12-68 Interrupt Model**

### 12.6.1 Event Interrupt Model

The embedded controller must generate SCIs for the events listed in the following table.

**Table 12-351 Events for Which Embedded Controller Must Generate SCIs**

Event	Description
IBF=0	Signals that the embedded controller has read the last command or data from the input buffer and the host is free to send more data.
OBF=1	Signals that the embedded controller has written a byte of data into the output buffer and the host is free to read the returned data.
SCI_EVT=1	Signals that the embedded controller has detected an event that requires OS attention. OSPM should issue a query (QR_EC) command to find the cause of the event.

### 12.6.2 Command Interrupt Model

The embedded controller must generate SCIs for commands as follows:

**Table 12-352 Read Command (3 Bytes)**

Byte #1	(Command byte Header)	Interrupt on IBF=0
Byte #2	(Address byte to read)	No Interrupt
Byte #3	(Data read to host)	Interrupt on OBF=1

**Table 12-353 Write Command (3 Bytes)**

Byte #1	(Command byte Header)	Interrupt on IBF=0
Byte #2	(Address byte to write)	Interrupt on IBF=0
Byte #3	(Data to read )	Interrupt on IBF=0

**Table 12-354 Query Command (2 Bytes)**

Byte #1	(Command byte Header)	No Interrupt
Byte #2	(Query value to host)	Interrupt on OBF=1

**Table 12-355 Burst Enable Command (2 Bytes)**

Byte #1	(Command byte Header)	No Interrupt
Byte #2	(Burst acknowledge byte)	Interrupt on OBF=1

**Table 12-356 Burst Disable Command (1 Byte)**

Byte #1	(Command byte Header)	Interrupt on IBF=0
---------	-----------------------	--------------------

## 12.7 Embedded Controller Interfacing Algorithms

To initiate communications with the embedded controller, OSPM or system management handler acquires ownership of the interface. This ownership is acquired through the use of the Global Lock (described in [Section 5.2.10.1](#), “Global Lock”), or is owned by default by OSPM as a non-shared resource (and the Global Lock is not required for accessibility).

After ownership is acquired, the protocol always consists of the passing of a command byte. The command byte will indicate the type of action to be taken. Following the command byte, zero or more data bytes can be exchanged in either direction. The data bytes are defined according to the command byte that is transferred.

The embedded controller also has two status bits that indicate whether the registers have been read. This is used to ensure that the host or embedded controller has received data from the embedded controller or host. When the host writes data to the command or data register of the embedded controller, the input buffer flag (IBF) in the status register is set within 1 microsecond. When the embedded controller reads this data from the input buffer, the input buffer flag is reset. When the embedded controller writes data into the output buffer, the output buffer flag (OBF) in the status register is set. When the host processor reads this data from the output buffer, the output buffer flag is reset.

## 12.8 Embedded Controller Description Information

Certain aspects of the embedded controller’s operation have OEM-definable values associated with them. The following is a list of values that are defined in the software layers of the ACPI specification:

- Status flag indicating whether the interface requires the use of the Global Lock.
- Bit position of embedded controller interrupt in general-purpose status register.
- Decode address for command/status register.
- Decode address for data register.

- Base address and query value of any EC-SMBus controller.

For implementation details of the above listed information, see [Section 12.11](#), “Defining an Embedded Controller Device in ACPI Namespace,” and [Section 12.12](#), “Defining an EC SMBus Host Controller in ACPI Namespace.”

An embedded controller will require the inclusion of the GLK method in its ACPI namespace if potentially contentious accesses to device resources are performed by non-OS code. See [Section 6.5.7](#), “\_GLK (Global Lock)” for details about the \_GLK method.

## 12.9 SMBus Host Controller Interface via Embedded Controller

This section specifies a standard interface that an ACPI-compatible OS can use to communicate with embedded controller-based SMBus host controllers (EC-SMB-HC). This interface allows the host processor (under control of OSPM) to manage devices on the SMBus. Typical devices residing on the SMBus include Smart Batteries, Smart Battery Chargers, contrast/backlight control, and temperature sensors.

The EC-SMB-HC interface consists of a block of registers that reside in embedded controller space. These registers are used by software to initiate SMBus transactions and receive SMBus notifications. By using a well-defined register set, OS software can be written to operate with any vendor’s embedded controller hardware.

Certain SMBus segments have special requirements that the host controller filters certain SMBus commands (for example, to prevent an errant application or virus from potentially damaging the battery subsystem). This is most easily accomplished by implementing the host interface controller through an embedded controller—as embedded controller can easily filter out potentially problematic commands.

Notice that an EC-SMB-HC interface will require the inclusion of the GLK method in its ACPI namespace if potentially contentious accesses to device resources are performed by non-OS code. See [Section 6.5.7](#), “\_GLK (Global Lock)” for details on using the \_GLK method.

### 12.9.1 Register Description

The EC-SMBus host interface is a flat array of registers that are arranged sequentially in the embedded controller address space.

#### 12.9.1.1 Status Register, SMB\_STS

This register indicates general status on the SMBus. This includes SMB-HC command completion status, alarm received status, and error detection status (the error codes are defined later in this section). This register is cleared to zeroes (except for the ALRM bit) whenever a new command is issued using a write to the protocol (SMB\_PRTCL) register. This register is always written with the error code before clearing the protocol register. The SMB-HC query event (that is, an SMB-HC interrupt) is raised after the clearing of the protocol register.

**Note:** OSPM must ensure the ALRM bit is cleared after it has been serviced by writing '00' to the SMB\_STS register.

Bit7	Bit6	Bit5	Bit4	Bit3	Bit2	Bit1	Bit0
DONE	ALRM	RES			STATUS		

Where:

DONE:	Indicates the last command has completed and no error.
ALRM:	Indicates an SMBus alarm message has been received.
RES:	<i>Reserved</i>
STATUS:	Indicates SMBus communication status for one of the reasons listed in the following table.

**Table 12-357 SMBus Status Codes**

Status Code	Name	Description
00h	SMBus OK	Indicates the transaction has been successfully completed.
07h	SMBus Unknown Failure	Indicates failure because of an unknown SMBus error.
10h	SMBus Device Address Not Acknowledged	Indicates the transaction failed because the slave device address was not acknowledged.
11h	SMBus Device Error Detected	Indicates the transaction failed because the slave device signaled an error condition.
12h	SMBus Device Command Access Denied	Indicates the transaction failed because the SMBus host does not allow the specific command for the device being addressed. For example, the SMBus host might not allow a caller to adjust the Smart Battery Charger's output.
13h	SMBus Unknown Error	Indicates the transaction failed because the SMBus host encountered an unknown error.
17h	SMBus Device Access Denied	Indicates the transaction failed because the SMBus host does not allow access to the device addressed. For example, the SMBus host might not allow a caller to directly communicate with an SMBus device that controls the system's power planes.
18h	SMBus Timeout	Indicates the transaction failed because the SMBus host detected a timeout on the bus.
19h	SMBus Host Unsupported Protocol	Indicates the transaction failed because the SMBus host does not support the requested protocol.
1Ah	SMBus Busy	Indicates that the transaction failed because the SMBus host reports that the SMBus is presently busy with some other transaction. For example, the Smart Battery might be sending charging information to the Smart Battery Charger.

Status Code	Name	Description
1Fh	SMBus PEC (CRC-8) Error	Indicates that a Packet Error Checking (PEC) error occurred during the last transaction.

All other error codes are reserved.

### 12.9.1.2 Protocol Register, SMB\_PRTCL

This register determines the type of SMBus transaction generated on the SMBus. In addition to indicating the protocol type to the SMB-HC, a write to this register initiates the transaction on the SMBus. Notice that bit 7 of the protocol value is used to indicate whether packet error checking should be employed. A value of 1 (one) in this bit indicates that PEC format should be used for the specified protocol, and a value of 0 (zero) indicates the standard (non-PEC) format should be used.

Bit7	Bit6	Bit5	Bit4	Bit3	Bit2	Bit1	Bit0
PEC	PROTOCOL						

Where:

PROTOCOL:	0x00 – Controller Not In Use
	0x01 – Reserved
	0x02 – Write Quick Command
	0x03 – Read Quick Command
	0x04 – Send Byte
	0x05 – Receive Byte
	0x06 – Write Byte
	0x07 – Read Byte
	0x08 – Write Word
	0x09 – Read Word
	0x0A – Write Block
	0x0B – Read Block
	0x0C – Process Call
	0x0D – Block Write-Block Read Process Call

For example, the protocol value of 0x09 would be used to communicate to a device that supported the standard *read word* protocol. If this device also supported packet error checking for this protocol, a value of 0x89 (*read word with PEC*) could optionally be used. See the SMBus specification for more information on packet error checking.

When OSPM initiates a new command such as write to the SMB\_PRTCL register, the SMBus controller first updates the SMB\_STS register and then clears the SMB\_PRTCL register. After the SMB\_PRTCL register is cleared, the host controller query value is raised.

All other protocol values are reserved.

### 12.9.1.3 Address Register, SMB\_ADDR

This register contains the 7-bit address to be generated on the SMBus. This is the first byte to be sent on the SMBus for all of the different protocols.

Bit7	Bit6	Bit5	Bit4	Bit3	Bit2	Bit1	Bit0
ADDRESS (A6:A0)							RES

Where:

RES:	<i>Reserved</i>
ADDRESS:	7-bit SMBus address. This address is not zero aligned (in other words, it is only a 7-bit address (A6:A0) that is aligned from bit 1-7).

### 12.9.1.4 Command Register, SMB\_CMD

This register contains the command byte that will be sent to the target device on the SMBus and is used for the following protocols: send byte, write byte, write word, read byte, read word, process call, block read and block write. It is not used for the quick commands or the receive byte protocol, and as such, its value is a “don’t care” for those commands.

Bit7	Bit6	Bit5	Bit4	Bit3	Bit2	Bit1	Bit0
COMMAND							

Where:

### 12.9.1.5 Data Register Array, SMB\_DATA[i], i=0-31

COMMAND:	Command byte to be sent to SMBus device.
----------	--

This bank of registers contains the remaining bytes to be sent or received in any of the different protocols that can be run on the SMBus. The SMB\_DATA[i] registers are defined on a per-protocol basis and, as such, provide efficient use of register space.

Bit7	Bit6	Bit5	Bit4	Bit3	Bit2	Bit1	Bit0
DATA							

Where:

DATA:	One byte of data to be sent or received (depending upon protocol).
-------	--

### 12.9.1.6 Block Count Register, SMB\_BCNT

This register contains the number of bytes of data present in the SMB\_DATA[i] registers preceding any write block and following any read block transaction. The data size is defined on a per protocol basis.

Bit7	Bit6	Bit5	Bit4	Bit3	Bit2	Bit1	Bit0
RES	BCNT						

### 12.9.1.7 Alarm Address Register, SMB\_ALRM\_ADDR

This register contains the address of an alarm message received by the host controller, at slave address 0x8, from the SMBus master that initiated the alarm. The address indicates the slave address of the device on the SMBus that initiated the alarm message. The status of the alarm message is contained in the SMB\_ALRM\_DATAx registers. Once an alarm message has been received, the SMB-HC will not receive additional alarm messages until the ALRM status bit is cleared.

Bit7	Bit6	Bit5	Bit4	Bit3	Bit2	Bit1	Bit0
ADDRESS (A6:A0)	RES						

Where:

RES:	Reserved
ADDRESS:	Slave address (A6:A0) of the SMBus device that initiated the SMBus alarm message.

### 12.9.1.8 Alarm Data Registers, SMB\_ALRM\_DATA[0], SMB\_ALRM\_DATA[1]

These registers contain the two data bytes of an alarm message received by the host controller, at slave address 0x8, from the SMBus master that initiated the alarm. These data bytes indicate the specific reason for the alarm message, such that OSPM can take actions. Once an alarm message has been received, the SMB-HC will not receive additional alarm messages until the ALRM status bit is cleared.

Bit7	Bit6	Bit5	Bit4	Bit3	Bit2	Bit1	Bit0
DATA (D7:D0)							

Where:

DATA:	Data byte received in alarm message.
-------	--------------------------------------

The alarm address and alarm data registers are not read by OSPM until the alarm status bit is set. OSPM driver then reads the 3 bytes, and clears the alarm status bit to indicate that the alarm registers are now available for the next event.

## 12.9.2 Protocol Description

This section describes how to initiate the different protocols on the SMBus through the interface described in [Section 12.9.1](#), “Register Descriptions.” The registers should all be written with the appropriate values before writing the protocol value that starts the SMBus transaction. All transactions can be completed in one pass.

### 12.9.2.1 Write Quick

#### Data Sent:

SMB_ADDR:	Address of SMBus device.
SMB_PRTCL:	Write 0x02 to initiate the write quick protocol.

#### Data Returned:

SMB_STS:	Status code for transaction.
SMB_PRTCL:	0x00 to indicate command completion.

### 12.9.2.2 Read Quick

#### Data Sent:

SMB_ADDR:	Address of SMBus device.
SMB_PRTCL:	Write 0x03 to initiate the read quick protocol.

#### Data Returned:

SMB_STS:	Status code for transaction.
SMB_PRTCL:	0x00 to indicate command completion.

### 12.9.2.3 Send Byte

#### Data Sent:

SMB_ADDR:	Address of SMBus device.
SMB_CMD:	Command byte to be sent.
SMB_PRTCL:	Write 0x04 to initiate the send byte protocol, or 0x84 to initiate the send byte protocol with PEC.

#### Data Returned:

SMB_STS:	Status code for transaction.
SMB_PRTCL:	0x00 to indicate command completion.

### 12.9.2.4 Receive Byte

#### Data Sent:

SMB_ADDR:	Address of SMBus device.
-----------	--------------------------

SMB_PRTCL:	Write 0x05 to initiate the receive byte protocol, or 0x85 to initiate the receive byte protocol with PEC.
------------	---

**Data Returned:**

SMB_DATA[0]:	Data byte received.
SMB_STS:	Status code for transaction.
SMB_PRTCL:	0x00 to indicate command completion.

**12.9.2.5 Write Byte****Data Sent:**

SMB_ADDR:	Address of SMBus device.
SMB_CMD:	Command byte to be sent.
SMB_DATA[0]:	Data byte to be sent.
SMB_PRTCL:	Write 0x06 to initiate the write byte protocol, or 0x86 to initiate the write byte protocol with PEC.

**Data Returned:**

SMB_STS:	Status code for transaction.
SMB_PRTCL:	0x00 to indicate command completion.

### 12.9.2.6 Read Byte

#### Data Sent:

SMB_ADDR:	Address of SMBus device.
SMB_CMD:	Command byte to be sent.
SMB_PRTCL:	Write 0x07 to initiate the read byte protocol, or 0x87 to initiate the read byte protocol with PEC.

#### Data Returned:

SMB_DATA[0]:	Data byte received.
SMB_STS:	Status code for transaction.
SMB_PRTCL:	0x00 to indicate command completion.

### 12.9.2.7 Write Word

#### Data Sent:

SMB_ADDR:	Address of SMBus device.
SMB_CMD:	Command byte to be sent.
SMB_DATA[0]:	Low data byte to be sent.
SMB_DATA[1]:	High data byte to be sent.
SMB_PRTCL:	Write 0x08 to initiate the write word protocol, or 0x88 to initiate the write word protocol with PEC.

#### Data Returned:

SMB_STS:	Status code for transaction.
SMB_PRTCL:	0x00 to indicate command completion.

### 12.9.2.8 Read Word

#### Data Sent:

SMB_ADDR:	Address of SMBus device.
SMB_CMD:	Command byte to be sent.
SMB_PRTCL:	Write 0x09 to initiate the read word protocol, or 0x89 to initiate the read word protocol with PEC.

**Data Returned:**

SMB_DATA[0]:	Low data byte received.
SMB_DATA[1]:	High data byte received.
SMB_STS:	Status code for transaction.
SMB_PRTCL:	0x00 to indicate command completion.

**12.9.2.9 Write Block****Data Sent:**

SMB_ADDR:	Address of SMBus device.
SMB_CMD:	Command byte to be sent.
SMB_DATA[0-31]:	Data bytes to write (1-32).
SMB_BCN:	Number of data bytes (1-32) to be sent.
SMB_PRTCL:	Write 0x0A to initiate the write block protocol, or 0x8A to initiate the write block protocol with PEC.

**Data Returned:**

SMB_PRTCL:	0x00 to indicate command completion.
SMB_STS:	Status code for transaction.

**12.9.2.10 Read Block****Data Sent:**

SMB_ADDR:	Address of SMBus device.
SMB_CMD:	Command byte to be sent.
SMB_PRTCL:	Write 0x0B to initiate the read block protocol, or 0x8B to initiate the read block protocol with PEC.

**Data Returned:**

SMB_BCN:	Number of data bytes (1-32) received.
SMB_DATA[0-31]:	Data bytes received (1-32).
SMB_STS:	Status code for transaction.
SMB_PRTCL:	0x00 to indicate command completion.

### 12.9.2.11 Process Call

#### Data Sent:

SMB_ADDR:	Address of SMBus device.
SMB_CMD:	Command byte to be sent.
SMB_DATA[0]:	Low data byte to be sent.
SMB_DATA[1]:	High data byte to be sent.
SMB_PRTCL:	Write 0x0C to initiate the process call protocol, or 0x8C to initiate the process call protocol with PEC.

#### Data Returned:

SMB_DATA[0]:	Low data byte received.
SMB_DATA[1]:	High data byte received.
SMB_STS:	Status code for transaction.
SMB_PRTCL:	0x00 to indicate command completion.

### 12.9.2.12 Block Write-Block Read Process Call

#### Data Sent:

SMB_ADDR:	Address of SMBus device.
SMB_CMD:	Command byte to be sent.
SMB_DATA[0-31]:	Data bytes to write (1-31).
SMB_BCNT:	Number of data bytes (1-31) to be sent.
SMB_PRTCL:	Write 0x0D to initiate the write block-read block process call protocol, or 0x8D to initiate the write block-read block process call protocol with PEC.

#### Data Returned:

SMB_BCNT:	Number of data bytes (1-31) received.
SMB_DATA[0-31]:	Data bytes received (1-31).
SMB_STS:	Status code for transaction.
SMB_PRTCL:	0x00 to indicate command completion.

**Note:** The following restrictions apply: The aggregate data length of the write and read blocks must not exceed 32 bytes and each block (write and read) must contain at least 1 byte of data.

### 12.9.2.13 SMBus Register Set

The register set for the SMB-HC has the following format. All registers are 8 bit.

**Table 12-358 SMB EC Interface**

<b>Location</b>	<b>Register Name</b>	<b>Description</b>
BASE+0	SMB_PRTCL	Protocol register
BASE+1	SMB_STS	Status register
BASE+2	SMB_ADDR	Address register
BASE+3	SMB_CMD	Command register
BASE+4	SMB_DATA[0]	Data register zero
BASE+5	SMB_DATA[1]	Data register one
BASE+6	SMB_DATA[2]	Data register two
BASE+7	SMB_DATA[3]	Data register three
BASE+8	SMB_DATA[4]	Data register four
BASE+9	SMB_DATA[5]	Data register five
BASE+10	SMB_DATA[6]	Data register six
BASE+11	SMB_DATA[7]	Data register seven
BASE+12	SMB_DATA[8]	Data register eight
BASE+13	SMB_DATA[9]	Data register nine
BASE+14	SMB_DATA[10]	Data register ten
BASE+15	SMB_DATA[11]	Data register eleven
BASE+16	SMB_DATA[12]	Data register twelve
BASE+17	SMB_DATA[13]	Data register thirteen
BASE+18	SMB_DATA[14]	Data register fourteen
BASE+19	SMB_DATA[15]	Data register fifteen
BASE+20	SMB_DATA[16]	Data register sixteen
BASE+21	SMB_DATA[17]	Data register seventeen
BASE+22	SMB_DATA[18]	Data register eighteen
BASE+23	SMB_DATA[19]	Data register nineteen
BASE+24	SMB_DATA[20]	Data register twenty
BASE+25	SMB_DATA[21]	Data register twenty-one
BASE+26	SMB_DATA[22]	Data register twenty-two
BASE+27	SMB_DATA[23]	Data register twenty-three
BASE+28	SMB_DATA[24]	Data register twenty-four
BASE+29	SMB_DATA[25]	Data register twenty-five
BASE+30	SMB_DATA[26]	Data register twenty-six
BASE+31	SMB_DATA[27]	Data register twenty-seven

Location	Register Name	Description
BASE+32	SMB_DATA[28]	Data register twenty-eight
BASE+33	SMB_DATA[29]	Data register twenty-nine
BASE+34	SMB_DATA[30]	Data register thirty
BASE+35	SMB_DATA[31]	Data register thirty-one
BASE+36	SMB_BCNT	Block Count Register
BASE+37	SMB_ALRM_ADDR	Alarm address
BASE+38	SMB_ALRM_DATA[0]	Alarm data register zero
BASE+39	SMB_ALRM_DATA[1]	Alarm data register one

## 12.10 SMBus Devices

The embedded controller interface provides the system with a standard method to access devices on the SMBus. It does not define the data and/or access protocol(s) used by any particular SMBus device. Further, the embedded controller can (and probably will) serve as a gatekeeper to prevent accidental or malicious access to devices on the SMBus.

Some SMBus devices are defined by their address and a specification that describes the data and the protocol used to access that data. For example, the Smart Battery System devices are defined by a series of specifications including:

- Smart Battery Data specification
- Smart Battery Charger specification
- Smart Battery Selector specification
- Smart Battery System Manager specification

The embedded controller can also be used to emulate (in part or totally) any SMBus device.

### 12.10.1 SMBus Device Access Restrictions

In some cases, the embedded controller interface will not allow access to a particular SMBus device. Some SMBus devices can and do communicate directly between themselves. Unexpected accesses can interfere with their normal operation and cause unpredictable results.

### 12.10.2 SMBus Device Command Access Restriction

There are cases where part of an SMBus device's commands are public while others are private. Extraneous attempts to access these commands might cause interference with the SMBus device's normal operation.

The Smart Battery and the Smart Battery Charger are good examples of devices that should not have their entire command set exposed. The Smart Battery commands the Smart Battery Charger to supply a specific charging voltage and charging current. Attempts by anyone to alter these values can cause damage to the battery or the mobile system. To protect the system's integrity, the embedded controller interface can restrict access to these commands by returning one of the following error codes: Device Command Access Denied (0x12) or Device Access Denied (0x17).

## 12.11 Defining an Embedded Controller Device in ACPI Namespace

An embedded controller device is created using the named device object. The embedded controller's device object requires the following elements:

**Table 12-359 Embedded Controller Device Object Control Methods**

Object	Description
_CRS	<p>Named object that returns the Embedded Controller's current resource settings. Embedded Controllers are considered static resources; hence only return their defined resources. The embedded controller resides only in system I/O or memory space.</p> <p>The first address region returned is the data port, and the second address region returned is the status/command port for the embedded controller. If the EC is used on a HW-Reduced ACPI platform, a third resource is required, which is the GPIO Interrupt Connection resource for the EC's SCI Interrupt.</p> <p>CRS is a standard device configuration control method defined in <a href="#">Section 6.2.2</a>, “_CRS (Current Resource Settings).”</p>
_HID	<p>Named object that provides the Embedded Controller's Plug and Play identifier. This value is set to PNPOC09. _HID is a standard device configuration control method defined in <a href="#">Section 6.1.5</a>, “_HID (Hardware ID).”</p>
_GPE	<p>Named Object that evaluates to either an integer or a package. If _GPE evaluates to an integer, the value is the bit assignment of the SCI interrupt within the GPEx_STS register of a GPE block described in the FADT that the embedded controller will trigger.</p> <p>If _GPE evaluates to a package, then that package contains two elements. The first is an object reference to the GPE Block device that contains the GPE register that will be triggered by the embedded controller. The second element is numeric (integer) that specifies the bit assignment of the SCI interrupt within the GPEx_STS register of the GPE Block device referenced by the first element in the package. This control method is specific to the embedded controller.</p> <p>This method is not required on Hardware-reduced ACPI platforms.</p>

### 12.11.1 Example: EC Definition ASL Code

Example ASL code that defines an embedded controller device is shown below:

```
Device(EC0) {
    // PnP ID
    Name(_HID, EISAID("PNPOC09"))
        // Returns the "Current Resources" of EC
    Name(_CRS,
        ResourceTemplate() {
            // port 0x62 and 0x66
            IO(Decode16, 0x62, 0x62, 0, 1),
            IO(Decode16, 0x66, 0x66, 0, 1)
        /* For HW-Reduced ACPI Platforms, include a GPIO Interrupt Connection
        resource,
           e.g. GPIO controller #2, pin 43.
           GpioInt(Edge, ActiveHigh, ExclusiveAndWake, PullUp 0, "\_SB.GPI2") {43}
    )
}
```

```

        */
    }
}

// Define that the EC SCI is bit 0 of the GP_STS
register
Name(_GPE, 0) // Not required for HW-Reduced ACPI platforms

OperationRegion(ECOR, EmbeddedControl, 0, 0xFF)
Field(ECOR, ByteAcc, Lock, Preserve) {
    // Field definitions go here
}
}

```

## 12.12 Defining an EC SMBus Host Controller in ACPI Namespace

An EC-SMB-HC device is defined using the named device object. The EC-SMB- HC's device object requires the following elements:

**Table 12-360 EC SMBus HC Device Objects**

Object	Description
_HID	Named object that provides the EC-SMB- HC's Plug and Play identifier. This value is be set to ACPI0001. _HID is a standard device configuration control method defined in <a href="#">Section 6.1.5</a> , “_HID (Hardware ID).”
_EC	Named object that evaluates to a WORD that defines the SMBus attributes needed by the SMBus driver. _EC is the Embedded Controller Offset Query Control Method. The most significant byte is the address offset in embedded controller space of the SMBus controller; the least significant byte is the query value for all SMBus events.

### 12.12.1 Example: EC SMBus Host Controller ASL-Code

Example ASL code that defines an SMB-HC from within an embedded controller device is shown below:

```

Device(EC0)
{
    Name(_HID, EISAID("PNPOC09"))
    Name(_CRS, ResourceTemplate()
    {
        IO(Decode16, 0x62, 0x62, 0, 1), // Status port
        IO(Decode16, 0x66, 0x66, 0, 1) // command port
    })
    Name(_GPE, 0)

Device (SMBO)
{
    Name(_HID, "ACPI0001") // EC-SMB-HC
    Name(_UID, 0) // Unique device identifier
    Name(_EC, 0x2030) // EC offset 0x20, query bit 0x30
}

```

```
:  
}  
Device (SMB1)  
{  
    Name(_HID, "ACPI0001")           // EC-SMB-HC  
    Name(_UID, 1)                   // Unique device identifier  
    Name(_EC, 0x8031)              // EC offset 0x80, query bit 0x31  
:  
}  
} // end of ECO.
```

# 13 ACPI System Management Bus Interface Specification

---

This section describes the System Management Bus (SMBus) generic address space and the use of this address space to access SMBus devices from AML.

Unlike other address spaces, SMBus operation regions are inherently *non-linear*, where each offset within an SMBus address space represents a variable-sized (from 0 to 32 bytes) field. Given this uniqueness, SMBus operation regions include restrictions on their field definitions and require the use of an SMBus-specific data buffer for all transactions.

The SMBus interface presented in this section is intended for use with any hardware implementation compatible with the SMBus specification. SMBus hardware is broadly classified as either non-EC-based or EC-based. EC-based SMBus implementations comply with the standard register set defined in [Section 12](#), *ACPI Embedded Controller Interface Specification*.

Non-EC SMBus implementations can employ any hardware interface and are typically used for their cost savings when SMBus security is not required. Non-EC-based SMBus implementations require the development of hardware specific drivers for each OS implementation. See [Section 13.2.1](#), “Declaring SMBus Host Controller Objects,” for more information.

Support of the SMBus generic address space by ACPI-compatible operating systems is optional. As such, the Smart Battery System Implementer’s Forum (SBS-IF) has defined an SMBus interface based on a standard set of control methods. This interface is documented in the *SMBus Control Method Interface Specification*, available at “Links to ACPI-Related Documents” (<http://uefi.org/acpi>) under the heading “Smart Battery System Components and SMBus Specification”.

## 13.1 SMBus Overview

SMBus is a two-wire interface based upon the I<sup>2</sup>C protocol. The SMBus is a low-speed bus that provides positive addressing for devices, as well as bus arbitration. For more information, refer to the complete set of SMBus specifications published by the SBS-IF.

### 13.1.1 SMBus Slave Addresses

Slave addresses are specified using a 7-bit non-shifted notation. For example, the slave address of the Smart Battery Selector device would be specified as 0x0A (1010b), not 0x14 (10100b) as might be found in other documents. These two different forms of addresses result from the format in which addresses are transmitted on the SMBus.

During transmission over the physical SMBus, the slave address is formatted in an 8-bit block with bits 7-1 containing the address and bit 0 containing the read/write bit. ASL code, on the other hand, presents the slave address simply as a 7-bit value making it the responsibility of the OS (driver) to shift the value if needed. For example, the ASL value would have to be shifted left 1 bit before being written to the SMB\_ADDR register in the EC based SMBus as described in [Section 12.9.1.3](#), “Address Register, SMB\_ADDR.”

### 13.1.2 SMBus Protocols

There are seven possible *command protocols* for any given SMBus slave device, and a device may use any or all of the protocols to communicate. The protocols and associated access type indicators are listed below. Notice that the protocols values are similar to those defined for the EC-based SMBus in [Section 12.9.1.2](#), “Protocol Register, SMB\_PRTCL,” except that protocol pairs (for example, Read Byte, Write Byte) have been joined.


**Table 13-361 SMBus Protocol Types**

Value	Type	Description
0x02	SMBQuick	SMBus Read/Write Quick Protocol
0x04	SMBSendReceive	SMBus Send/Receive Byte Protocol
0x06	SMBByte	SMBus Read/Write Byte Protocol
0x08	SMBWord	SMBus Read/Write Word Protocol
0x0A	SMBBlock	SMBus Read/Write Block Protocol
0x0C	SMBProcessCall	SMBus Process Call Protocol
0x0D	SMBBlockProcessCall	SMBus Write Block-Read Block Process Call Protocol

All other protocol values are reserved.

Notice that bit 7 of the protocol value is used by this interface to indicate to the SMB-HC whether or not packet error checking (PEC) should be employed for a transaction. Packet error checking is described in section 7.4 of the *System Management Bus Specification, Version 1.1*. This highly desirable capability improves the reliability and robustness of SMBus communications.

The bit encoding of the protocol value is shown below. For example, the value 0x86 would be used to specify the PEC version of the SMBus Read/Write Byte protocol.

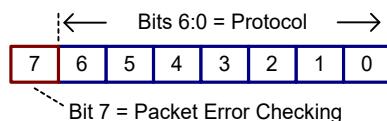

**Figure 13-69 Bit Encoding Example**

Notice that bit 0 of the protocol value is always zero (even number hexadecimal values). In a manner similar to the slave address, software that implements the SMBus interface is responsible for setting this bit to indicate whether the transaction is a read (for example, Read Byte) or write (for example, Write Byte) operation.

For example, software implanting this interface for EC-SMBus segments would set bit 0 for read transactions. For the SMBByte protocol (0x06), this would result in the value 0x07 being placed into the SMB\_PRTCL register (or 0x87 if PEC is requested) for write transactions.

### 13.1.3 SMBus Status Codes

The use of status codes helps AML determine whether an SMBus transaction was successful. In general, a status code of zero indicates success, while a non-zero value indicates failure. The SMBus interface uses the same status codes defined for the EC-SMBus (see [Section 12.9.1.1](#), “Status Register, SMB\_STS”).

### 13.1.4 SMBus Command Values

SMBus devices may optionally support up to 256 device-specific commands. For these devices, each *command value* supported by the device is modeled by this interface as a separate *virtual register*. Protocols that do not transmit a command value (for example, Read/Write Quick and Send/Receive Byte) are modeled using a single virtual register (with a command value = 0x00).

## 13.2 Accessing the SMBus from ASL Code

The following sections demonstrate how to access and use the SMBus from ASL code.

### 13.2.1 Declaring SMBus Host Controller Objects

EC-based SMBus 1.0-compatible HCs should be modeled in the ACPI namespace as described in [Section 12.11](#), “Defining an Embedded Controller SMBus Host Controller in ACPI Namespace.” An example definition is given below. Using the HID value “ACPI0001” identifies that this SMB-HC is implemented on an embedded controller using the standard SMBus register set defined in [Section 12.9](#), SMBus Host Controller Interface via Embedded Controller.”

```
Device (SMBO)
{
    Name(_HID, "ACPI0001")           // EC-based SMBus 1.0 compatible Host Controller
    Name(_EC, 0x2030)                // EC offset 0x20, query bit 0x30
    :
}
```

EC-based SMBus 2.0-compatible host controllers should be defined similarly in the namespace as follows:

```
Device (SMBO)
{
    Name(_HID, "ACPI0005")           // EC-based SMBus 2.0 compatible Host Controller
    Name(_EC, 0x2030)                // EC offset 0x20, query bit 0x30
    :
}
```

Non-EC-based SMB-HCs should be modeled in a manner similar to the EC-based SMBus HC. An example definition is given below. These devices use a vendor-specific hardware identifier (HID) to specify the type of SMB-HC (do not use “ACPI0001” or “ACPI0005”). Using a vendor-specific HID allows the correct software to be loaded to service this segment’s SMBus address space.

```

Device(SMB0)
{
    Name(_HID, "<Vendor-Specific HID>")      // Vendor-Specific HID
    :
}

```

Regardless of the type of hardware, some OS software element (for example, the SMBus HC driver) must register with OSPM to support all SMBus operation regions defined for the segment. This software allows the generic SMBus interface defined in this section to be used on a specific hardware implementation by translating between the conceptual (for example, SMBus address space) and physical (for example, process of writing/reading registers) models. Because of this linkage, SMBus operation regions must be defined immediately within the scope of the corresponding SMBus device.

### 13.2.2 Declaring SMBus Devices

The SMBus, as defined by the SMBus 1.0 Specification, is not an enumerable bus. As a result, an SMBus 1.0-compatible SMB-HC driver cannot discover child devices on the SMBus and load the appropriate corresponding device drivers. As such, SMBus 1.0-compatible devices are declared in the ACPI namespace, in like manner to other motherboard devices, and enumerated by OSPM.

The SMBus 2.0 specification adds mechanisms enabling device enumeration on the bus while providing compatibility with existing devices. ACPI defines and associates the "ACPI0005" HID value with an EC-based SMBus 2.0-compatible host controller. OSPM will enumerate SMBus 1.0-compatible devices when declared in the namespace under an SMBus 2.0-compatible host controller.

The responsibility for the definition of ACPI namespace objects, required by an SMBus 2.0-compatible host controller driver to enumerate non-bus-enumerable devices, is relegated to the Smart Battery System Implementers Forum. See "Links to ACPI-Related Documents" (<http://uefi.org/acpi>) under the heading "Smart Battery System Components and SMBus Specification"..

Starting in ACPI 2.0, \_ADR is used to associate SMBus devices with their lowest SMBus slave address.

### 13.2.3 Declaring SMBus Operation Regions

Each SMBus operation region definition identifies a single SMBus slave address. Operation regions are defined only for those SMBus devices that need to be accessed from AML. As with other regions, SMBus operation regions are only accessible via the **Field** term (see [Section 13.2.2](#), "Declaring SMBus Fields").

This interface models each SMBus device as having a 256-byte linear address range. Each byte offset within this range corresponds to a single command value (for example, byte offset 0x12 equates to command value 0x12), with a maximum of 256 command values. By doing this, SMBus address spaces appear linear and can be processed in a manner similar to the other address space types.

The syntax for the **OperationRegion** term (from [Section 19.6.98](#), "OperationRegion (Declare Operation Region]") is described below.

```


OperationRegion (
    RegionName,           // NameString
    RegionSpace,          // RegionSpaceKeyword
    Offset,               // TermArg=>Integer
    Length                // TermArg=>Integer
)

```

Where:

- *RegionName* specifies a name for this slave device (for example, “SBDO”).
- *RegionSpace* must be set to **SMBus** (operation region type value 0x04).
- *Offset* is a word-sized value specifying the slave address and initial command value offset for the target device. The slave address is stored in the high byte and the command value offset is stored in the low byte. For example, the value 0x4200 would be used for an SMBus device residing at slave address 0x42 with an initial command value offset of zero (0).
- *Length* is set to the 0x100 (256), representing the maximum number of possible command values, for regions with an initial command value offset of zero (0). The difference of these two values is used for regions with non-zero offsets. For example, a region with an *Offset* value of 0x4210 would have a corresponding *Length* of 0xF0 (0x100 minus 0x10).

For example, the Smart Battery Subsystem (illustrated below) consists of the Smart Battery Charger at slave address 0x09, the Smart Battery System Manager at slave address 0x0A, and one or more batteries (multiplexed) at slave address 0x0B. (Notice that Figure 13-2 represents the logical connection of a Smart Battery Subsystem. The actual physical connections of the Smart Battery(s) and the Smart Battery Charger are made through the Smart Battery System Manager.) All devices support the Read/Write Word protocol. Batteries also support the Read/Write Block protocol.

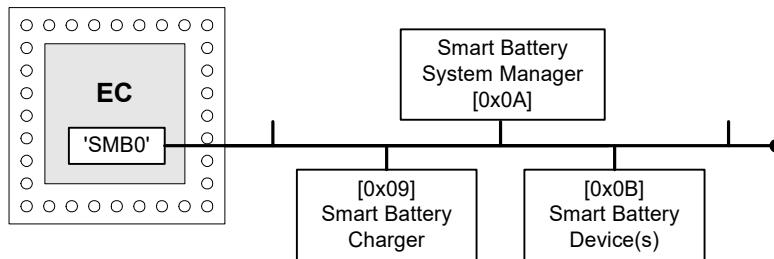

**Figure 13-70 Smart Battery Subsystem Devices**

The following ASL code shows the use of the OperationRegion term to describe these SMBus devices:

```

Device (SMB0)
{
    Name (_HID, "ACPI 0001")                                // EC-SMBus Host Controller
    Name (_EC, 0x2030)                                         // EC offset 0x20, query bit 0x30

    OperationRegion(SBC0, SMBus, 0x0900, 0x100)                // Smart Battery Charger
    OperationRegion(SBS0, SMBus, 0x0A00, 0x100)                // Smart Battery Selector
    OperationRegion(SBD0, SMBus, 0x0B00, 0x100)                // Smart Battery Device(s)
    :
}

```

Notice that these operation regions in this example are defined within the immediate context of the ‘owning’ EC-SMBus device. Each definition corresponds to a separate slave address (device), and happens to use an initial command value offset of zero (0).

### 13.2.4 Declaring SMBus Fields

As with other regions, SMBus operation regions are only accessible via the Field term. Each field element is assigned a unique command value and represents a virtual register on the targeted SMBus device.

The syntax for the **Field** term (from [Section 19.6.40](#), “Event (Declare Event Synchronization Object]”) is described below.

```
Field(
    RegionName,           // NameString=>OperationRegion
   AccessType,            // AccessTypeKeyword
    LockRule,             // LockRuleKeyword
    UpdateRule           // UpdateRuleKeyword – ignored
) {FieldUnitList}
```

Where:

- *RegionName* specifies the operation region name previously defined for the device.
- *AccessType* must be set to **BufferAcc**. This indicates that access to field elements will be done using a region-specific data buffer. For this access type, the field handler is not aware of the data buffer’s contents which may be of any size. When a field of this type is used as the source argument in an operation it simply evaluates to a buffer. When used as the destination, however, the buffer is passed bi-directionally to allow data to be returned from write operations. The modified buffer then becomes the execution result of that operation. This is slightly different than the normal case in which the execution result is the same as the value written to the destination. Note that the source is never changed, since it could be a read only object (see [Section 13.2.5](#), “Declaring an SMBus Data Buffer” and [Section 19.2.5](#), “Opcode Terms”).
- *LockRule* indicates if access to this operation region requires acquisition of the Global Lock for synchronization. This field should be set to **Lock** on system with firmware that may access the SMBus, and **NoLock** otherwise.
- *UpdateRule* is not applicable to SMBus operation regions since each virtual register is accessed in its entirety. This field is ignored for all SMBus field definitions.

SMBus operation regions require that all field elements be declared at command value granularity. This means that each virtual register cannot be broken down to its individual bits within the field definition.

Access to sub-portions of virtual registers can be done only outside of the field definition. This limitation is imposed both to simplify the SMBus interface and to maintain consistency with the physical model defined by the SMBus specification.

SMBus protocols are assigned to field elements using the AccessAs term within the field definition. The syntax for this term (from [Section 19.2.3](#), “ASL Root and SecondaryTerms”) is described below.

```
AccessAs(
    AccessType,           //AccessTypeKeyword
    AccessAttribute       //Nothing | ByteConst | AccessAttribKeyword
)
```


Where:

- *AccessType* must be set to **BufferAcc**.

- *AccessAttribute* indicates the SMBus protocol to assign to command values that follow this term. See [Section 13.1.2, “SMBus Protocols,”](#) for a listing of the SMBus protocol types and values.

An *AccessAs* term must appear as the first entry in a field definition to set the initial SMBus protocol for the field elements that follow. A maximum of one SMBus protocol may be defined for each field element. Devices supporting multiple protocols for a single command value can be modeled by specifying multiple field elements with the same offset (command value), where each field element is preceded by an *AccessAs* term specifying an alternate protocol.

For example, the register at command value 0x08 for a Smart Battery device (illustrated below) represents a word value specifying the battery temperature (in degrees Kelvin), while the register at command value 0x20 represents a variable-length (0 to 32 bytes) character string specifying the name of the company that manufactured the battery.

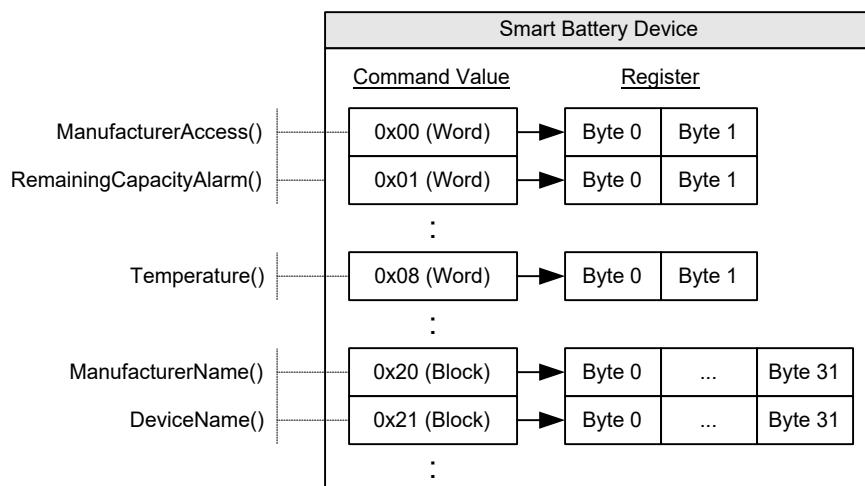

**Figure 13-71 Smart Battery Device Virtual Registers**

The following ASL code shows the use of the *OperationRegion*, *Field*, *AccessAs*, and *Offset* terms to represent these Smart Battery device virtual registers:

```

OperationRegion(SBDO, SMBus, 0x0B00, 0x0100)
Field(SBDO, BufferAcc, NoLock, Preserve)
{
    AccessAs(BufferAcc, SMBWord)      // Use the SMBWord protocol for the following...
    MFGA, 8,                         // ManufacturerAccess() [command value 0x00]
    RCAP, 8,                         // RemainingCapacityAlarm() [command value 0x01]
    Offset(0x08)                     // Skip to command value 0x08...
    BTMP, 8,                         // Temperature() [command value 0x08]
    Offset(0x20)                     // Skip to command value 0x20...
    AccessAs(BufferAcc, SMBBlock)     // Use the SMBBlock protocol for the following...
    MFGN, 8,                         // ManufacturerName() [command value 0x20]
    DEVN, 8,                         // DeviceName() [command value 0x21]
}

```

Notice that command values are equivalent to the field element's byte offset (for example, MFGA=0, RCAP=1, BTMP=8). The **AccessAs** term indicates which SMBus protocol to use for each command value.

### 13.2.5 Declaring and Using an SMBus Data Buffer

The use of a data buffer for SMBus transactions allows AML to receive status and data length values, as well as making it possible to implement the Process Call protocol. As previously mentioned, the **BufferAcc** access type is used to indicate to the field handler that a region-specific data buffer will be used.

For SMBus operation regions, this data buffer is defined as a fixed-length 34-byte buffer that, if represented using a 'C'-styled declaration, would be modeled as follows:

```
typedef struct
{
    BYTE      Status;        // Byte 0 of the data buffer
    BYTE      Length;        // Byte 1 of the data buffer
    BYTE[32]   Data;         // Bytes 2 through 33 of the data buffer
}
```

Where:

- *Status* (byte 0) indicates the status code of a given SMBus transaction. See [Section 13.1.3, "SMBus Status Code,"](#) for more information.
- *Length* (byte 1) specifies the number of bytes of valid data that exists in the data buffer. Use of this field is only defined for the Read/Write Block protocol, where valid *Length* values are 0 through 32. For other protocols—where the data length is implied by the protocol—this field is reserved.
- *Data* (bytes 33-2) represents a 32-byte buffer, and is the location where actual data is stored.

For example, the following ASL shows the use of the SMBus data buffer for performing transactions to a Smart Battery device. This code is based on the example ASL presented in [Section 13.2.4, "Declaring SMBus Fields,"](#) which lists the operation region and field definitions for the Smart Battery device.

```
/* Create the SMBus data buffer */
Name(BUFF, Buffer(34){})                                // Create SMBus data buffer as BUFF
CreateByteField(BUFF, 0x00, 0B1)                          // 0B1 = Status (Byte)
CreateByteField(BUFF, 0x01, 0B2)                          // 0B2 = Length (Byte)
CreateWordField(BUFF, 0x02, 0B3)                          // 0B3 = Data (Word – Bytes 2 & 3)
CreateField(BUFF, 0x10, 256, 0B4)                         // 0B4 = Data (Block – Bytes 2-33)

/* Read the battery temperature */
Store(BTMP, BUFF)                                       // Invoke Read Word transaction
If(LEqual(0B1, 0x00))                                    // Successful ?
{
    Kelvin                                              // 0B3 = Battery temperature in 1/10th degrees
}

/* Read the battery manufacturer name */
```

```

Store(MFGN, BUFF)           // Invoke Read Block transaction
If(LEqual(0B1, 0x00))       // Successful ?
{
    // 0B2 = Length of the manufacturer name
    // 0B4 = Manufacturer name (as a counted string)
}

```

Notice the use of the **CreateField** primitives to access the data buffer's sub-elements (*Status*, *Length*, and *Data*), where *Data* (bytes 33-2) is 'typecast' as both word (OB3) and block (OB4) data.

The example above demonstrates the use of the `Store()` operator to invoke a Read Block transaction to obtain the name of the battery manufacturer. Evaluation of the *source* operand (MFGN) results in a 34-byte buffer that gets copied by `Store()` to the *destination* buffer (BUFF).

Capturing the results of a write operation, for example to check the status code, requires an additional `Store()` operator, as shown below.

```

Store(Store(BUFF, MFGN), BUFF)      // Invoke Write Block transaction
If(LEqual(0B1, 0x00)) {...}        // Transaction successful ?

```

Note that the outer `Store()` copies the results of the Write Block transaction back into BUFF. This is the nature of BufferAcc's bi-directionality described in [Section 13.2.4](#), "Declaring SMBus Fields". It should be noted that storing (or parsing) the result of an SMBus Write transaction is not required although useful for ascertaining the outcome of a transaction.

SMBus Process Call protocols require similar semantics due to the fact that only destination operands are passed bi-directionally. These transactions require the use of the double-`Store()` semantics to properly capture the return results.

## 13.3 Using the SMBus Protocols

This section provides information and examples on how each of the SMBus protocols can be used to access SMBus devices from AML.

### 13.3.1 Read/Write Quick (SMBQuick)

The SMBus Read/Write Quick protocol (SMBQuick) is typically used to control simple devices using a device-specific binary command (for example, ON and OFF). Command values are not used by this protocol and thus only a single element (at offset 0) can be specified in the field definition. This protocol transfers no data.

The following ASL code illustrates how a device supporting the Read/Write Quick protocol should be accessed:

```

OperationRegistration(SMBD, SMBus, 0x4200, 0x100) // SMBus device at slave address 0x42
Field(SMBD, BufferAcc, NoLock, Preserve)
{
    AccessAs(BufferAcc, SMBQuick)           // Use the SMBus Read/Write Quick
    protocol                           // Virtual register at command value 0.
    FLDO, 8                            // Virtual register at command value 0.

/* Create the SMBus data buffer */

```

```

Name(BUFF, Buffer(34){})
CreateByteField(BUFF, 0x00, 0B1) // Create SMBus data buffer as BUFF
                                // 0B1 = Status (Byte)

/* Signal device (e.g. OFF) */
Store(FLD0, BUFF) // Invoke Read Quick transaction
If(LEqual(0B1, 0x00)) {...} // Successful?

/* Signal device (e.g. ON) */
Store(BUFF, FLD0) // Invoke Write Quick transaction

```

In this example, a single field element (FLD0) at offset 0 is defined to represent the protocol's read/write bit. Access to FLD0 will cause an SMBus transaction to occur to the device. Reading the field results in a Read Quick, and writing to the field results in a Write Quick. In either case data is not transferred—access to the register is simply used as a mechanism to invoke the transaction.

### 13.3.2 Send/Receive Byte (SMBSendReceive)

The SMBus Send/Receive Byte protocol (SMBSendReceive) transfers a single byte of data. Like Read/Write Quick, command values are not used by this protocol and thus only a single element (at offset 0) can be specified in the field definition.

The following ASL code illustrates how a device supporting the Send/Receive Byte protocol should be accessed:

```

OperationRegion(SMBD, SMBus, 0x4200, 0x100) // SMBus device at slave address 0x42
Field(SMBD, BufferAcc, NoLock, Preserve)
{
    AccessAs(BufferAcc, SMBSendReceive) // Use the SMBus Send/Receive Byte
    protocol
    FLD0, 8 // Virtual register at command value 0.
}

// Create the SMBus data buffer

Name(BUFF, Buffer(34){})
CreateByteField(BUFF, 0x00, STAT) // Create SMBus data buffer as BUFF
CreateByteField(BUFF, 0x02, DATA) // STAT = Status (Byte)
                                // DATA = Data (Byte)

// Receive a byte of data from the device
Store(FLD0, BUFF)
If(LEqual(STAT, 0x00))
{
    // DATA = Received byte...
}

// Send the byte '0x16' to the device
Store(0x16, DATA)
Store(BUFF, FLD0) // Save 0x16 into the data buffer
                  // Invoke a Send Byte transaction

```

In this example, a single field element (FLD0) at offset 0 is defined to represent the protocol's data byte. Access to FLD0 will cause an SMBus transaction to occur to the device. Reading the field results in a Receive Byte, and writing to the field results in a Send Byte.

### 13.3.3 Read/Write Byte (SMBByte)

The SMBus Read/Write Byte protocol (SMBByte) also transfers a single byte of data. But unlike Send/Receive Byte, this protocol uses a command value to reference up to 256 byte-sized virtual registers.

The following ASL code illustrates how a device supporting the Read/Write Byte protocol should be accessed:

```
OperationRegion(SMBD, SMBus, 0x4200, 0x100)      // SMBus device at slave address 0x42
Field(SMBD, BufferAcc, NoLock, Preserve)
{
    AccessAs(BufferAcc, SMBByte)                  // Use the SMBus Read/Write Byte protocol
    FLD0, 8,                                     // Virtual register at command value 0.
    FLD1, 8,                                     // Virtual register at command value 1.
    FLD2, 8,                                     // Virtual register at command value 2.

}

Name(BUFF, Buffer(34){})                         // Create the SMBus data buffer
CreateByteField(BUFF, 0x00, STAT)                 // Create SMBus data buffer as BUFF
CreateByteField(BUFF, 0x02, DATA)                  // STAT = Status (Byte)
                                                // DATA = Data (Byte)

// Read a byte of data from the device using command value 1
Store(FLD1, BUFF)                                // Invoke a Read Byte transaction
If(LEqual(STAT, 0x00))                            // Successful ?
{
    // DATA = Byte read from FLD1...
}

// Write the byte '0x16' to the device using command value 2
Store(0x16, DATA)                                // Save 0x16 into the data buffer
Store(BUFF, FLD2)                                 // Invoke a Write Byte transaction
```

In this example, three field elements (FLD0, FLD1, and FLD2) are defined to represent the virtual registers for command values 0, 1, and 2. Access to any of the field elements will cause an SMBus transaction to occur to the device. Reading FLD1 results in a Read Byte with a command value of 1, and writing to FLD2 results in a Write Byte with command value 2.

### 13.3.4 Read/Write Word (SMBWord)

The SMBus Read/Write Word protocol (SMBWord) transfers 2 bytes of data. This protocol also uses a command value to reference up to 256 word-sized virtual device registers.

The following ASL code illustrates how a device supporting the Read/Write Word protocol should be accessed:

```
OperationRegion(SMBD, SMBus, 0x4200, 0x100)      // SMBus device at slave address 0x42
Field(SMBD, BufferAcc, NoLock, Preserve)
```

```

{
    AccessAs(BufferAcc, SMBWord)           // Use the SMBus Read/Write Word
protocol
    FLD0, 8,                                // Virtual register at command value 0.
    FLD1, 8,                                // Virtual register at command value 1.
    FLD2, 8,                                // Virtual register at command value 2.
}

// Create the SMBus data buffer
Name(BUFF, Buffer(34){})                  // Create SMBus data buffer as BUFF
CreateByteField(BUFF, 0x00, STAT)          // STAT = Status (Byte)
CreateWordField(BUFF, 0x02, DATA)          // DATA = Data (Word)

// Read two bytes of data from the device using command value 1
Store(FLD1, BUFF)                       // Invoke a Read Word transaction
If(LEqual(STAT, 0x00))                   // Successful ?
{
    // DATA = Word read from FLD1...
}
// Write the word '0x5416' to the device using command value 2
Store(0x5416, DATA)                     // Save 0x5416 into the data buffer
Store(BUFF, FLD2)                        // Invoke a Write Word transaction

```

In this example, three field elements (FLD0, FLD1, and FLD2) are defined to represent the virtual registers for command values 0, 1, and 2. Access to any of the field elements will cause an SMBus transaction to occur to the device. Reading FLD1 results in a Read Word with a command value of 1, and writing to FLD2 results in a Write Word with command value 2.

Notice that although accessing each field element transmits a word (16 bits) of data, the fields are listed as 8 bits each. The actual data size is determined by the protocol. Every field element is declared with a length of 8 bits so that command values and byte offsets are equivalent.

### 13.3.5 Read/Write Block (SMBBlock)

The SMBus Read/Write Block protocol (SMBBlock) transfers variable-sized (0-32 bytes) data. This protocol uses a command value to reference up to 256 block-sized virtual registers.

The following ASL code illustrates how a device supporting the Read/Write Block protocol should be accessed:

```

OperationRegion(SMBD, SMBus, 0x4200, 0x100) // SMBus device at slave address 0x42
Field(SMBD, BufferAcc, NoLock, Preserve)
{
    AccessAs(BufferAcc, SMBBlock)           // Use the SMBus Read/Write Block
protocol
    FLD0, 8,                                // Virtual register at command value 0.
    FLD1, 8,                                // Virtual register at command value 1.
    FLD2, 8,                                // Virtual register at command value 2.
}

```

```

// Create the SMBus data buffer
Name(BUFF, Buffer(34){})
CreateByteField(BUFF, 0x00, STAT)
CreateByteField(BUFF, 0x01, SIZE)
CreateField(BUFF, 0x10, 256, DATA)           // Create SMBus data buffer as BUFF
                                            // STAT = Status (Byte)
                                            // SIZE = Length (Byte)
                                            // DATA = Data (Block)

// Read block data from the device using command value 1
Store(FLD1, BUFF)                         // Invoke a Read Block transaction
If(LEqual(STAT, 0x00))                     // Successful ?
{
    // SIZE = Size (number of bytes) of the block data read from FLD1...
    // DATA = Block data read from FLD1...
}

// Write the block 'TEST' to the device using command value 2
Store("TEST", DATA)                       // Save "TEST" into the data buffer
Store(4, SIZE)                            // Length of valid data in the data buffer
Store(BUFF, FLD2)                          // Invoke a Write Word transaction

```

In this example, three field elements (FLD0, FLD1, and FLD2) are defined to represent the virtual registers for command values 0, 1, and 2. Access to any of the field elements will cause an SMBus transaction to occur to the device. Reading FLD1 results in a Read Block with a command value of 1, and writing to FLD2 results in a Write Block with command value 2.

### 13.3.6 Word Process Call (SMBProcessCall)

The SMBus Process Call protocol (SMBProcessCall) transfers 2 bytes of data bi-directionally (performs a Write Word followed by a Read Word as an atomic transaction). This protocol uses a command value to reference up to 256 word-sized virtual registers.

The following ASL code illustrates how a device supporting the Process Call protocol should be accessed:

```

OperationRegion(SMBD, SMBus, 0x4200, 0x100) // SMBus device at slave address 0x42
Field(SMBD, BufferAcc, NoLock, Preserve)
{
    AccessAs(BufferAcc, SMBProcessCall)      // Use the SMBus Process Call protocol
    FLD0, 8,                                // Virtual register at command value 0.
    FLD1, 8,                                // Virtual register at command value 1.
    FLD2, 8,                                // Virtual register at command value 2.
}

Name(BUFF, Buffer(34){})                   // Create the SMBus data buffer
CreateByteField(BUFF, 0x00, STAT)          // Create SMBus data buffer as BUFF
CreateWordField(BUFF, 0x02, DATA)           // STAT = Status (Byte)
                                            // DATA = Data (Word)

// Process Call with input value '0x5416' to the device using command value 1
Store(0x5416, DATA)                      // Save 0x5416 into the data buffer
Store(Store(BUFF, FLD1), BUFF)             // Invoke a Process Call transaction
If(LEqual(STAT, 0x00))                    // Successful ?
{

```

```
// DATA = Word returned from FLD1...
}
```

In this example, three field elements (FLD0, FLD1, and FLD2) are defined to represent the virtual registers for command values 0, 1, and 2. Access to any of the field elements will cause an SMBus transaction to occur to the device. Reading or writing FLD1 results in a Process Call with a command value of 1. Notice that unlike other protocols, Process Call involves both a write and read operation in a single atomic transaction. This means that the *Data* element of the SMBus data buffer is set with an input value before the transaction is invoked, and holds the output value following the successful completion of the transaction.

### 13.3.7 Block Process Call (SMBBlockProcessCall)

The SMBus Block Write-Read Block Process Call protocol (SMBBlockProcessCall) transfers a block of data bi-directionally (performs a Write Block followed by a Read Block as an atomic transaction). The maximum aggregate amount of data that may be transferred is limited to 32 bytes. This protocol uses a command value to reference up to 256 block-sized virtual registers.

The following ASL code illustrates how a device supporting the Process Call protocol should be accessed:

```
OperationRegion(SMBD, SMBus, 0x4200, 0x100)           // SMBus device at slave address
0x42
Field(SMBD, BufferAcc, NoLock, Preserve)
{
    AccessAs(BufferAcc, SMBBlockProcessCall) // Use the Block Process Call
protocol
    FLD0, 8,      // Virtual register representing a command value of 0
    FLD1, 8      // Virtual register representing a command value of 1
}

// Create the SMBus data buffer as BUFF
Name(BUFF, Buffer(34)())                         // Create SMBus data buffer as BUFF
CreateByteField(BUFF, 0x00, STAT)                  // STAT = Status (Byte)
CreateByteField(BUFF, 0x01, SIZE)                  // SIZE = Length (Byte)
CreateField(BUFF, 0x10, 256, DATA)                 // Data (Block)

// Process Call with input value "ACPI" to the device using command value 1
Store("ACPI ", DATA)                            // Fill in outgoing data
Store(8, SIZE)                                 // Length of the valid data
Store(Store(BUFF, FLD1), BUFF)                  // Execute the PC
if (LEqual(STAT, 0x00))                        // Test the status
{
    // BUFF now contains information returned from PC
    // SIZE now equals size of data returned
}
```

# 14 Platform Communications Channel (PCC)

---

The platform communication channel is a generic mechanism for OSPM to communicate with an entity in the platform (e.g. a platform controller, or a Baseboard Management Controller (BMC)). Neither the entity that OSPM communicates with, nor any aspects of the information passed back and forth is defined in this section. That information is defined by the actual interface that employs PCC register address space as the communication channel.

PCC defines a new address space type (PCC Space, 0xA), which is implemented as one or more independent communications channels, or subspaces.

This chapter is arranged as follows:

- [Section 14.1](#) and [Section 14.2](#) provide reference information covering the PCCT table, and expected data structures used with PCC.
- [Section 14.4](#), [Section 14.5](#), and [Section 14.6](#) describe how communications takes place between the OSPM and the platform over PCC.

The interface is described in the following ACPI system description table.

## 14.1 Platform Communications Channel Table

**Table 14-362 Platform Communications Channel Table (PCCT)**

Field	Byte Length	Byte Offset	Description
Header			
Signature	4	0	'PCCT' Signature for the Platform Communications Channel Table.
Length	4	4	Length, in bytes, of the entire PCCT.
Revision	1	8	2
Checksum	1	9	Entire table must sum to zero.
OEMID	6	10	OEM ID
OEM Table ID	8	16	For the PCCT, the table ID is the manufacturer model ID.
OEM Revision	4	24	OEM revision of PCCT for supplied OEM Table ID.
Creator ID	4	28	Vendor ID of utility that created the table. For tables containing Definition Blocks, this is the ID for the ASL Compiler.
Creator Revision	4	32	Revision of utility that created the table. For tables containing Definition Blocks, this is the revision for the ASL Compiler.
Flags	4	36	Platform Communications Channel Global flags, described in <a href="#">Table 14-363</a> .
Reserved	8	40	Reserved

PCC Subspace Structure[n] (n = subspace ID)	—	48	A list of Platform Communications Channel Subspace structures for this platform. This structure is described in the following section. At most 256 subspaces are supported.
--	---	----	---

### 14.1.1 Platform Communications Channel Global Flags

Table 14-363 Platform Communications Channel Global Flags

PCC Global Flags	Bit Length	Bit Offset	Description
Platform Interrupt	1	0	If set, the platform is capable of generating an interrupt to indicate completion of a command.
Reserved	31	1	Must be zero.

### 14.1.2 Platform Communications Channel Subspace Structures

PCC Subspaces are described by the PCC Subspace structure in the PCCT table. The subspace ID of a PCC subspace is its index in the array of subspace structures, starting with subspace 0. All subspaces have a common header, followed by a set of type-specific fields:

Table 14-364 Generic PCC Subspace Structure

Field	Byte Length	Byte Offset	Description
Type	1	0	The type of subspace.
Length	1	1	Length of the subspace structure, in bytes. The next subspace structure begins <i>length</i> bytes after the start of this one.
Type specific fields	variable	2	See specific subspace types for more details

This specification defines the following subspaces:

- Type 0, the Generic Communications Subspace,
- Types 1 to 2, HW-Reduced Communications Subspaces,
- Types 3 and 4 are extended PCC subspaces.

All other subspace types are reserved.

### 14.1.3 Generic Communications Subspace Structure (type 0)

Table 14-365 PCC Subspace Structure type 0 (Generic Communications Subspace)

Field	Byte Length	Byte Offset	Description
Type	1	0	0 (Generic Communications Subspace)
Length	1	1	62
Reserved	6	2	Reserved

Field	Byte Length	Byte Offset	Description
Base Address	8	8	Base Address of the shared memory range, described in <a href="#">Table 14-369</a> .
Length	8	16	Length of the memory range. Must be > 8.
Doorbell Register	12	24	Contains the processor relative address, represented in Generic Address Structure format, of the PCC doorbell. <b>Note:</b> Only System I/O space and System Memory space are valid for values for Address_Space_ID.
Doorbell Preserve	8	36	Contains a mask of bits to preserve when writing the doorbell register.
Doorbell Write	8	44	Contains a mask of bits to set when writing the doorbell register.
Nominal Latency	4	52	Expected latency to process a command, in microseconds.
Maximum Periodic Access Rate	4	56	The maximum number of periodic requests that the subspace channel can support, reported in commands per minute. 0 indicates no limitation.
Minimum Request Turnaround Time	2	60	The minimum amount of time that OSPM must wait after the completion of a command before issuing the next command, in microseconds.

**Note:** Inaccurate values for the Maximum Periodic Access Rate and Minimum Request Turnaround Time fields can result in punitive side effects for features that rely on the PCC interface. The Platform should report accurate values that allow for maximum channel efficiency while maintaining maximum channel stability.

**Note:** The Maximum Periodic Access Rate is used by OSPM to determine the maximum rate for periodic evaluation of commands. Infrequent, event driven commands are not restricted by the maximum periodic access rate.

#### 14.1.4 HW-Reduced Communications Subspace Structure (type 1)

The HW-Reduced Communications Subspace is defined in [Table 14-366](#). It is intended for use on HW-Reduced ACPI Platforms, which do not support the SCI. Aside from the interrupt change, and the allowed use of the Functional Fixed HW address space for the Doorbell Register, this subspace is identical to the Generic Communications Subspace described in [Section 14.2](#) and [Section 14.4](#).

**Table 14-366 PCC Subspace Structure type 1 (HW-Reduced Communications Subspace)**

Field	Byte Length	Byte Offset	Description
Type	1	0	1 (HW-Reduced Communications Subspace)
Length	1	1	62
Platform Interrupt	4	2	GSIV of the interrupt used for the PCC platform interrupt for this Subspace.

Field	Byte Length	Byte Offset	Description
Platform Interrupt Flags	1	6	<p>Bit [2-7] Reserved</p> <p>Bit [1] Platform interrupt mode</p> <p>1: Interrupt is Edge triggered 0: Interrupt is Level triggered</p> <p>Bit [0] Platform interrupt polarity</p> <p>1: Interrupt is Active low 0: Interrupt is Active high</p>
Reserved	1	7	Reserved
Base Address	8	8	Base Address of the shared memory range, described in <a href="#">Table 14-369</a> .
Length	8	16	Length of the memory range. Must be > 8.
Doorbell Register	12	24	<p>Contains the processor relative address, represented in Generic Address Structure format, of the PCC doorbell.</p> <p><b>Note:</b> Only the System I/O, System Memory, and Functional Fixed Hardware spaces are valid for values for Address_Space_ID.</p>
Doorbell Preserve	8	36	Contains a mask of bits to preserve when writing the doorbell register.
Doorbell Write	8	44	Contains a mask of bits to set when writing the doorbell register.
Nominal Latency	4	52	Expected latency to process a command, in microseconds.
Maximum Periodic Access Rate	4	56	The maximum number of periodic requests that the subspace channel can support, reported in commands per minute. 0 indicates no limitation.
Minimum Request Turnaround Time	2	60	The minimum amount of time that OSPM must wait after the completion of a command before issuing the next command, in microseconds.

**Note:** Inaccurate values for the Maximum Periodic Access Rate and Minimum Request Turnaround Time fields can result in punitive side effects for features that rely on the PCC interface. The Platform should report accurate values that allow for maximum channel efficiency while maintaining maximum channel stability.

**Note:** The Maximum Periodic Access Rate is used by OSPM to determine the maximum rate for periodic evaluation of commands. Infrequent, event driven commands are not restricted by the maximum periodic access rate.

**Note:** Type 1 subspaces do not support a level triggered platform interrupt as no method is provided to clear the interrupt. Where level interrupts are required, type 2 or type 3 subspaces should be used.

#### 14.1.5 HW-Reduced Communications Subspace Structure (type 2)

The HW-Reduced Communications Subspace is defined in [Table 14-367](#). It is intended for use on HW-Reduced ACPI Platforms, which require read-modify-write sequence to acknowledge Platform Interrupt. Aside from three Platform Ack fields at the bottom of the table, this subspace is identical to the HW-Reduced Communications Subspace Structure (type 1) described above.

**Table 14-367 PCC Subspace Structure type 2 (HW-Reduced Communications Subspace)**

Field	Byte Length	Byte Offset	Description
Type	1	0	2 (HW-Reduced Communications Subspace)
Length	1	1	90
Platform Interrupt	4	2	GSIV of the interrupt used for the PCC platform interrupt for this Subspace.
Platform Interrupt Flags	1	6	Bit [2-7] Reserved Bit [1] Platform interrupt mode 1: Interrupt is Edge triggered 0: Interrupt is Level triggered Bit [0] Platform interrupt polarity 1: Interrupt is Active low 0: Interrupt is Active high
Reserved	1	7	Reserved
Base Address	8	8	Base Address of the shared memory range, described in <a href="#">Section 14-369</a> .
Length	8	16	Length of the memory range. Must be > 8.

Field	Byte Length	Byte Offset	Description
Doorbell Register	12	24	Contains the processor relative address, represented in Generic Address Structure format, of the PCC doorbell. <b>Note:</b> Only the System I/O, System Memory, and Functional Fixed Hardware spaces are valid for values for Address_Space_ID.
Doorbell Preserve	8	36	Contains a mask of bits to preserve when writing the doorbell register.
Doorbell Write	8	44	Contains a mask of bits to set when writing the doorbell register.
Nominal Latency	4	52	Expected latency to process a command, in microseconds.
Maximum Periodic Access Rate	4	56	The maximum number of periodic requests that the subspace channel can support, reported in commands per minute. 0 indicates no limitation.
Minimum Request Turnaround Time	2	60	The minimum amount of time that OSPM must wait after the completion of a command before issuing the next command, in microseconds.
Platform Interrupt Ack Register	12	62	Contains the processor relative address, represented in Generic Address Structure format, of the platform interrupt ack register. <b>Note:</b> Only the System I/O, System Memory, and Functional Fixed Hardware spaces are valid for values for Address_Space_ID.
Platform Interrupt Ack Preserve	8	74	Contains a mask of bits to preserve when writing the platform interrupt ack register.
Platform Interrupt Ack Write	8	82	Contains a mask of bits to set when writing the platform interrupt ack register.

**Note:** Inaccurate values for the Maximum Periodic Access Rate and Minimum Request Turnaround Time fields can result in punitive side effects for features that rely on the PCC interface. The Platform should report accurate values that allow for maximum channel efficiency while maintaining maximum channel stability.

**Note:** The Maximum Periodic Access Rate is used by OSPM to determine the maximum rate for periodic evaluation of commands. Infrequent, event driven commands are not restricted by the maximum periodic access rate

#### 14.1.6 Extended PCC subspaces (types 3 and 4)

Extended PCC communication subspaces are of two types:

Type 3 Master subspace: used by the OSPM to communicate with the platform.

Type 4 Slave subspace: Used by the platform to send asynchronous notifications to the OSPM.

Master subspaces are not substantially different to type 0,1, or 2 subspaces, the most notable difference is that a type 3 master subspace does not support asynchronous notifications. Slave subspaces, type 4,

provide those notifications, and cannot be used by the OSPM to send messages to the platform. Together a master and slave pair create a bidirectional interface between the OSPM and the platform.

The format for PCCT entries describing master (type 3), and slave (type 4) subspaces is shown in the following table.

**Table 14-368 PCC Subspace Structure type 3 and type 4, master and slave respectively**

Field	Byte Length	Byte Offset	Description
Type	1	0	3 – Master subspace 4 - Slave subspace
Length	1	1	170
Platform Interrupt	4	2	<p>GSIV of an interrupt triggered by the platform:</p> <ul style="list-style-type: none"> <li>For master subspaces (type 3) this is raised when a command is completed on this subspace.</li> <li>For slave subspaces (type 4) this is raised when platform sends a notification.</li> </ul> <p>For a master subspace this field is ignored if the platform interrupt flag (table 14-137) of the PCCT is set to zero. If a slave subspace is present in the PCCT, then the global Platform Interrupt flag (<a href="#">Table 14-363</a>) must be set to 1.</p> <p>Note that if interrupts are edge triggered, then each subspace must have its own unique interrupt. If interrupt are level, a GSIV may be shared by multiple subspaces, but each one must have unique Platform interrupt Ack preserve and Ack Set masks (see below)</p>
Platform Interrupt Flags	1	6	<p>Bit 7:2Reserved</p> <p>Bit 1:Platform interrupt mode</p> <ul style="list-style-type: none"> <li>Set to 1 if interrupt is Edge triggered</li> <li>Set to 0 if interrupt Level triggered</li> <li>Bit 0: Platform interrupt polarity</li> <li>Set to 1 if interrupt is Active low</li> <li>Set to 0 if interrupt is Active high</li> </ul>
Reserved	1	7	Reserved must be zero
Base Address	8	16	Base Address of the shared memory range, described in <a href="#">Table 14-372</a> .
Length	4	24	Length of the memory range. Must be $\geq 16$ .
Doorbell Register	12	28	<p>Contains the processor relative address, represented in Generic Address Structure (GAS) format, of the PCC doorbell.</p> <p><b>Note:</b> Only the System I/O, System Memory, and Functional Fixed Hardware spaces are valid values for Address_Space_ID</p> <p>For slave subspaces this field is optional, if not present the field should just contain zeros.</p>
Doorbell Preserve	8	40	Contains a mask of bits to preserve when writing the doorbell register.
Doorbell Write	8	48	Contains a mask of bits to set when writing the doorbell register.
Nominal Latency	4	56	Expected latency to process a command, in microseconds. This field is only relevant for master subspaces.

Field	Byte Length	Byte Offset	Description
Maximum Periodic Access Rate	4	60	The maximum number of periodic requests that the subspace subspace can support, reported in commands per minute. 0 indicates no limitation. This field is only relevant for master subspaces.
Minimum Request Turnaround Time	4	64	The minimum amount of time that OSPM must wait after the completion of a command before issuing the next command, in microseconds. This field is only relevant for master subspaces.
Platform interruptAck Register	12	68	<p>Contains the processor relative address, represented in Generic Address Structure (GAS) format, of the platform interrupt acknowledge register.</p> <p><b>Note:</b> Only the System I/O, System Memory, and Functional Fixed Hardware spaces are valid for values for Address_Space_ID.</p> <p>If the subspace does not support interrupts or the interrupt is edge driven the register may be omitted. A value of 0x0 on all 12 bytes of the GAS structure indicates the register is not present.</p> <p>If the subspace does support interrupts, and these are level, this register must be supplied. And is used to clear the interrupt by using a read, modify, write sequence.</p>
Platform interruptAck Preserve	8	80	Contains a mask of bits to preserve when writing the platform interrupt ack register.
Platform interruptAck Set	8	88	Contains a mask of bits to set when writing the platform interrupt ack register.
Reserved	8	96	Reserved must be zero
Command complete check register address	12	104	<p>Contains the processor relative address, represented in Generic Address Structure (GAS) format, of the Command complete check register.</p> <p><b>Note:</b> Only the System I/O, System Memory, and Functional Fixed Hardware spaces are valid for values for Address_Space_ID</p>
Command complete check mask	8	116	Mask to determine whether a command is complete, using the command complete check register. A command is complete if the value of the register when combined through a logical AND with this mask, yields a non-zero value
Command complete update register address	12	128	<p>Contains the processor relative address, represented in Generic Address Structure (GAS) format, of the command complete update register.</p> <p><b>Note:</b> Only the System I/O, System Memory, and Functional Fixed Hardware spaces are valid for values for Address_Space_ID</p>
Command complete update preserve mask	8	136	Mask of bits to preserve in the command complete update register, when updating command complete in this subspace.

Field	Byte Length	Byte Offset	Description
Command complete update set mask	8	142	Mask of bits to set in the command complete update register, when updating command complete in this subspace. For master subspaces the mask must indicate how to clear the command complete bit. For slave subspaces the mask must indicate how set the command complete bit
Error status register	12	150	Contains the processor relative address, represented in Generic Address Structure (GAS) format, of the Error status register. This field is ignored by the OSPM on slave channels <b>Note:</b> Only the System I/O, System Memory, and Functional Fixed Hardware spaces are valid for values for Address_Space_ID <b>Note:</b> this register can be the same as the command complete check register.
Error status mask	8	162	The mask contained here can be combined through a logical AND with content of the Error status register to ascertain whether an error occurred in the transmission of the command through the subspace. The logical NOT of this mask is be used to clear the error. The inverted mask is combined through a logical AND with the content of the Error status register, and the result is written back into said register. This field is ignored for slave channels.

**Note:** Inaccurate values for the Maximum Periodic Access Rate and Minimum Request Turnaround Time fields can result in punitive side effects for features that rely on the PCC interface. The Platform should report accurate values that allow for maximum channel efficiency while maintaining maximum channel stability.

Slave subspaces may be used by the platform to send asynchronous notifications to the OSPM. Slave subspace entries in the PCCT share the same format as master subspaces, with the following modifications:

- Type is set to 4 – slave subspace
- The doorbell may be zero and if so must be ignored by the OSM. If present, the platform can request that the OSPM writes to the doorbell after it has processed a notification.

A slave subspace is associated with a master, that is both a master/slave pair will connect the OSPM to the same processing entity in the platform.

If a slave subspace is included in the PCCT then the global Platform Interrupt flag ([Table 14-363](#)) must be set to 1.

## 14.2 Generic Communications Channel Shared Memory Region

**Table 14-369 Generic Communications Channel Shared Memory Region**

Field	Byte Length	Byte Offset	Description
Signature	4	0	The PCC signature. The signature of a subspace is computed by a bitwise-or of the value 0x50434300 with the subspace ID. For example, subspace 3 has the signature 0x50434303.
Command	2	4	PCC command field, described in <a href="#">Table 14-370</a> .
Status	2	6	PCC status field, described in <a href="#">Table 14-371</a> .
Communication Space	—	8	Memory region for reading/writing PCC data. The size of this region is 8 bytes smaller than the size of the shared memory region (specified in the General Communications Subspace structure). The first byte of this field represents PCC address 0.

### 14.2.1 Generic Communications Channel Command Field

For channels of type 0 to 2, this 16-bit field is used to select one of the defined commands for the platform to perform. OSPM is responsible for populating this field before each command invocation.

**Table 14-370 Generic Communications Channel Command Field**

Field	Bit Length	Bit Offset	Description
Command	8	0	Command code to execute. Command codes are application specific and defined by the consumer of this interface.
Reserved	7	8	Reserved.
Notify on completion	1	15	If set, the platform should generate a Doorbell interrupt at the completion of this command. The interrupt is an SCI for a Type 0 subspace structure, or as described by the Doorbell Interrupt field for Type 1 and Type 2 subspace structures.  If the Doorbell bit is not set in the PCC global flags, this bit must be cleared.

### 14.2.2 Generic Communications Channel Status Field

**Table 14-371 Generic Communications Channel Status Field**

Field	Bit Length	Bit Offset	Description
Command Complete	1	0	If set, the platform has completed processing the last command.

Platform interrupt	1	1	If set, the platform has issued a Platform Interrupt to this subspace. OSPM must check the Command Complete and Platform Notification fields to determine the cause of the Interrupt.
Error	1	2	If set, an error occurred executing the last command.
Platform Notification	1	3	If set, indicates the platform is issuing an asynchronous notification to OSPM.
Reserved	12	4	Reserved.

**Note:** *OSPM (either in an Interrupt handler or via polling) is required to detect that the Command Complete bit has been set and to clear it before issuing another command. While waiting for this bit to be set, OSPM must not modify any portion of the shared memory region.*

**Note:** *The Platform Interrupt bit is required to be cleared in OSPM's Interrupt handler so that a new event can be detected.*

## 14.3 Extended PCC Subspace Shared Memory Region

**Table 14-372 Master Slave Communications Channel Shared Memory Region**

Field	Byte Length	Byte Offset	Description
Signature	4	0	The PCC signature. The signature of a subspace is computed by a bitwise-or of the value 0x50434300 with the subspace ID. For example, subspace 3 has the signature 0x50434303.
Flags	4	4	See <a href="#">Table 14-373</a> below.
Length	4	8	Length of payload being transmitted including command field.
Command	4	12	Command being sent over the subspace.
Communication subspace	--	16	Memory region for reading/writing PCC data. The maximum size of this region is 16 bytes smaller than the size of the shared memory region (specified in the Master slave Communications Subspace structure). When a command is sent to or received from the platform, the size of the data in this space will be Length (expressed above) minus the 4 bytes taken up by the command.

The 32-bit command field is used to select one of the defined commands for the platform to perform. On master subspaces the OSPM is responsible for populating this field, alongside the command's payload, length and flags. For slave subspaces, the OSPM is responsible for interpreting the command and payload fields to ascertain the nature of the notification that was sent. The format for the flags field is shown in [Table 14-373](#)


**Table 14-373 Master Slave Communications Channel Flags**

Field	Bit Length	Bit Offset	Description

Notify on completion	1	0	<p>For master subspaces this field indicates to the platform that it must generate an interrupt when the command has completed.</p> <ul style="list-style-type: none"> <li>Setting this bit to 1 when sending a command, requests that completion of the command is signaled via the platform interrupt.</li> <li>Setting it to 0 when sending a command, requests that no interrupt is asserted when the command is completed.</li> </ul> <p>For slave subspaces, if the doorbell field of the slave subspace is non zero, and this flag is set, the OSPM must access the doorbell once it has processed the notification.</p> <p>This bit is ignored by the platform if the Platform Interrupt field of the PCC flags (<a href="#">Table 14-363</a>) is set to zero.</p>
Reserved	31	1	

## 14.4 Doorbell Protocol

Other than on slave subspaces, the doorbell is used by OSPM to notify the platform that the shared memory region contains a valid command that is ready to be processed. A doorbell consists of a hardware register that is accessed via I/O or memory mapped I/O, abstracted in the doorbell field of the PCC subspace structure. OSPM rings the doorbell by performing a read/modify/write cycle on the specified register, preserving and setting the bits specified in the preserve and write mask of the PCC subspace structure.

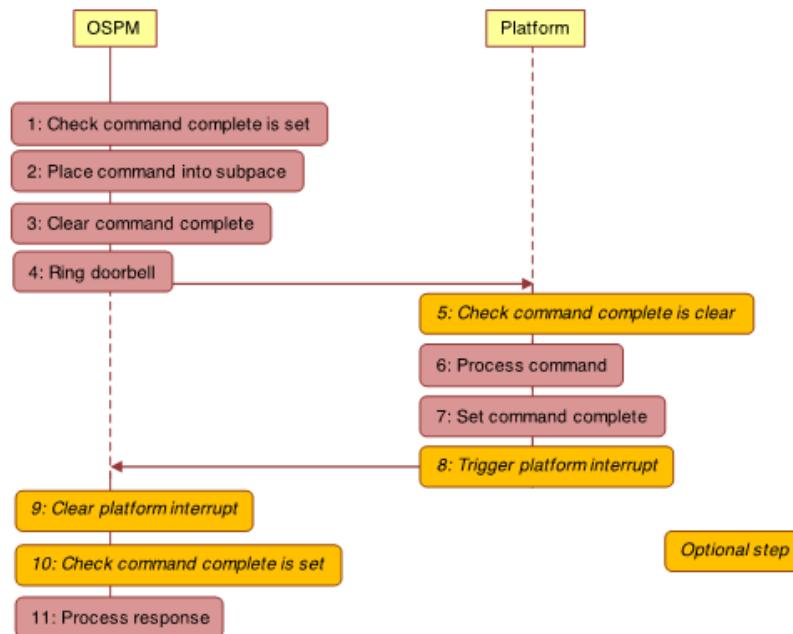

**Figure 14-72 Communication flow of the doorbell protocol**

[Figure 14-72](#) illustrates the steps that the OSPM takes to send message to the platform over a PCC subspace.

1. Firstly the OSPM checks that there is no command pending completion on the subspace, indicating that the subspace is free for use. This is done by checking that the command complete bit is set in the status field of the subspace. If the bit is set the subspace is free for use, and the shared memory associated with the subspace is exclusively owned by the OSPM.
2. The OSPM places a command into the shared memory of the subspace to update the flags, length, command and payload fields (see [Table 14-369](#)). If the platform indicates support for platform interrupts in the PCCT (see [Table 14-363](#)), then the OSPM can request that the platform generate an interrupt once it has completed processing the command. This is requested by setting the Notify on completion bit in the flags (see [Table 14-363](#) and [Table 14-373](#)).
3. The OSPM then clears the command complete bit. This step transfers ownership of the shared memory to the platform.
4. OSPM rings the doorbell by performing a read/modify/write cycle on the specified register, preserving and setting the bits specified in the preserve and write mask of the PCC subspace structure.

The management of the command complete bit differs slightly between subspaces of types 0-2 and those of type 3. For the former, the command complete bit is in a status register which follows a specific format described in [Section 14.2.2](#). Type 3 subspaces still use a single command complete bit, however allow the platform to dictate the location and format of the register holding it. Therefore, PCCT structures describing type 3 subspaces use masks and an address to describe how to set the bit. Equally, masks are used for describing how to clear the bit. For these subspaces to check if the command complete bit is set, the OSPM combines the content of command complete check register, through a bitwise AND, with the command complete check mask. A non-zero value indicates the command complete bit is set. Clearing the command complete bit is done through the command complete update register, which can differ in address from the command complete check register. In this case the content of the update register is combined through a bitwise AND with the preserve mask, the result is then combined through a bitwise inclusive OR with the set mask, and that result is written back to the update register.

For subspaces of type 1-3, the command complete bit must be initialized to one, command complete set, prior to OSPM sending a command. On type 0 channels, whether the platform sets command complete when the subspace is initialized is implementation defined. On these subspaces, the OSPM does not have to check for command complete to be set before sending the first command.

[Figure 14-72](#) illustrates the steps the platform takes when it receives the command:

5. For robustness the platform might optionally check that command complete bit is clear
6. Processes the command
7. Sets the command complete bit
8. Triggers the platform interrupt indicated by the GSIV of the subspace's PCCT entry ([Table 14-368](#)). This will only occur if an interrupt has been requested in step 2, and interrupts are supported by the platform. A platform can indicate support for interrupts through the Platform interrupt flag ([Table 14-363](#)).

OSPM can detect command completion either by polling on the command complete bit or via a platform interrupts. When the OSPM detects that the command has completed it proceeds with the following steps:

9. If necessary clears platform interrupt. This step applies if:
  - Platform interrupts are supported by the platform on command completion ([Table 14-363](#))

- The interrupt was requested by the OSPM through the Notify on completion flag (see [Table 14-369](#) and [Table 14-373](#)).
  - The interrupt is described as being a level triggered through the Platform Interrupt flags, and Platform Interrupt Ack register address, and associated masks are provided by the subspace PCCT entry (see table entries for types 2 and 3).
10. If detecting command completion via interrupt, optionally checks command is complete
  11. Processes the command response

To ensure correct operation, it is necessary to ensure that all memory updates performed by the OSPM in step 2 are observable by the platform before step 3 completes. Equally all memory updates performed by the platform in step 6 must be observable by the OSPM before step 7 completes.

**Note:** *For subspace types 0 to 2, all accesses to the Status Field must be made using interlocked operations, by both entities sharing the subspace. Types 3-4 avoid this requirement. This requirement will be removed for subspace types 0 to 2 as part of deprecation of platform async notifications in a future spec revision – see [Section 14.5](#).*

## 14.5 Platform Notification

The following sections describe platform notifications on subspace types 0-2 and types 3-4.

### 14.5.1 Platform Notification for Subspace Types 0, 1 and 2

The doorbell protocol is a synchronous notification from OSPM to the platform to process a command. If the platform wants to notify OSPM of an event asynchronously, it may set the Platform Interrupt and Platform Notification status bits and issue a Platform Interrupt. OSPM will service the Interrupt, clear the Platform Interrupt and Platform Notification bits, and service the platform notification. The meaning of the platform notification and the steps required to service it are defined by the individual components utilizing the PCC interface.

The platform must wait until OSPM has issued a consumer defined command that serves to notify the platform that OSPM is ready to service Platform Notifications. The command is subspace specific and may not be supported by all subspaces. Platform Notifications must be used in conjunction with an interrupt. Polling for Platform Notifications is not supported.


The platform may not modify any portion of the shared memory region other than the status field when issuing a platform notification.

Platform notifications for subspace types 0, 1, and 2 will be deprecated in a future revision of the specification. Implementers requiring the platform be able to send asynchronous notifications to OSPM should use master/slave subspaces.

**Note:** *All accesses to the Status Field must be made using interlocked operations, by both entities sharing the subspace. This requirement will be removed for subspace types 0 to 2 as part of deprecation of platform async notifications in a future spec revision.*

### 14.5.2 Platform Notification for slave PCC subspaces (type 4)

Master and subspaces only allow synchronous communication from the OSPM to the platform, and do not use the platform notification mechanism provided for subspaces of types 0 to 2. Instead a master subspace can be paired with a slave subspace, type 4, which is specifically provided for platform to OSPM communications.

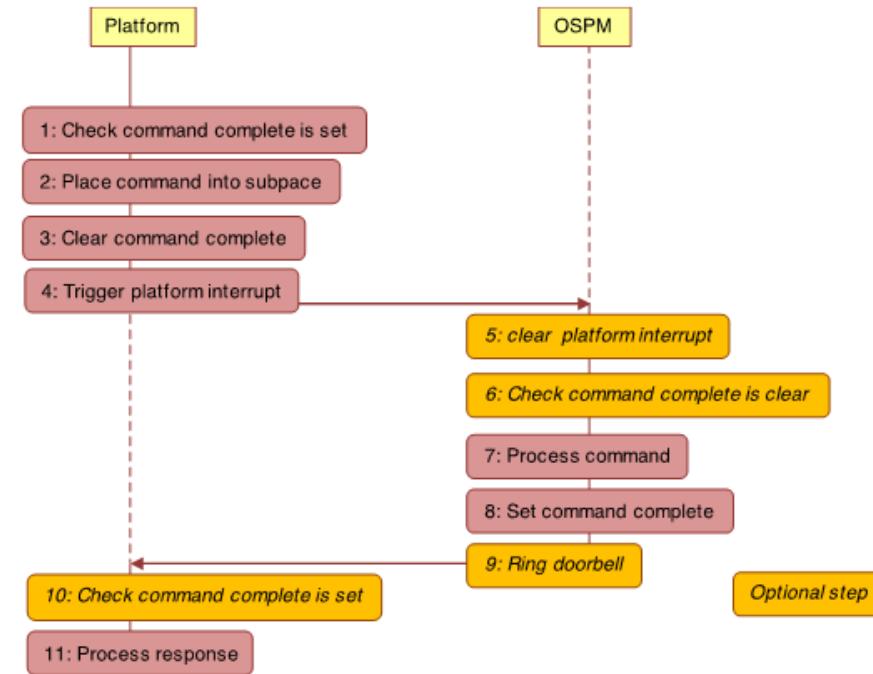

**Figure 14-73 Communication flow for notifications on slave subspaces**

Like type 3 master subspaces, type 4 slave subspaces include a command complete bit. Slave subspaces are owned by the OSPM by default, and therefore it must set the set the command complete bit when it is ready to receive notifications from the platform.

The flow of communications for a notification is illustrated in [Figure 14-73](#). As can be seen the communication flow is very similar to that of a master subspace, shown in [Figure 14-72](#), except that the roles of the platform and the OSPM are reversed. The steps are as follows:

1. Firstly, the platform checks that there no command pending completion on the subspace, indicating that the subspace is free for use. This is done by checking that the command complete bit is set in the status field of the subspace. If the bit is set the subspace is free for use, and the shared memory associated with the subspace is exclusively owned by the platform.
2. The platform places a notification command into the shared memory in the subspace, updating the flags, length, command and payload fields (see [Table 14-372](#)). The platform can request the OSPM rings the doorbell once it has completed processing the notification command by setting the Generate Signal bit in the flags (see [Table 14-373](#)).
3. The platform then clears the command complete bit. This transfers ownership of the shared memory to the OSPM.
4. The platform raises the platform interrupt indicated by the GSIV of the slave subspace.

When the OSPM receives the interrupt it executes the following steps:

5. Clears the platform interrupt. This is required if the interrupt is described as being a level triggered through the Platform Interrupt flags, and Platform Interrupt Ack register address, and associated masks are provided by the subspace PCCT entry (see [Table 14-368](#)).
6. Optionally checks the command complete bit is clear.
7. Processes the notification command.
8. Sets the command complete bit using the command complete update register and masks.
9. Rings the doorbell. This is required if the doorbell ring was requested by the platform in step 2 above. This also requires that the PCCT entry for the subspace has a non-zero doorbell register address.

The platform can check whether a notification has been processed by the OSPM either by polling the command complete bit, or where supported through receiving a doorbell interrupt from the OSPM. When the platform detects that the notification has been processed by the OSPM, the platform takes the following steps:

10. If polling check command complete is set. If using a doorbell this step is optional.
11. Processes the command response

The platform must ensure that any writes in step 2, are observable by the OSPM application processors before writes in step 3. Similarly, the OSPM must ensure that any writes in step 7 are observable by the platform before step 8 completes.

Individual protocols that use PCC define the meaning of notifications.

## 14.6 Referencing the PCC address space

An individual PCC register may be referenced by the Generic Address Structure or in a Generic Register Descriptor by using the Address Space ID PCC (0xA). When using the PCC address space, the Access Size field is redefined to Subspace ID, and identifies which PCC subspace the descriptor refers to.

As an example, the following resource template refers to the field occupying bits 8 through 15 at address 0x30 in PCC subspace 9:

```
ResourceTemplate()
{
  Register (
    PCC,      //AddressSpaceKeyword
    8,        //RegisterBitWidth
    8,        //RegisterBitOffset
    0x30,    //RegisterAddress
    9        //AccessSize (subspace ID)
  )
}
```

Note that the PCC address space may not be used in any resource template or register unless the register/resource field explicitly allows the use of the PCC address space.

# 15 System Address Map Interfaces

---

This section explains how an ACPI-compatible system conveys its memory resources/type mappings to OSPM. There are three ways for the system to convey memory resources /mappings to OSPM. The first is an INT 15 BIOS interface that is used in IA-PC-based systems to convey the system's initial memory map. UEFI enabled systems use the UEFI **GetMemoryMap()** boot services function to convey memory resources to the OS loader. These resources must then be conveyed by the OS loader to OSPM. See the UEFI Specification for more information on UEFI services.

Lastly, if memory resources may be added or removed dynamically, memory devices are defined in the ACPI Namespace conveying the resource information described by the memory device (see [Section 9.13](#), "Memory Devices").

ACPI defines the following address range types.

**Table 15-374 Address Range Types**

Value	Mnemonic	Save in S4	Description
1	AddressRangeMemory	Yes	This range is available RAM usable by the operating system.
2	AddressRangeReserved	No	This range of addresses is in use or reserved by the system and is not to be included in the allocatable memory pool of the operating system's memory manager.
3	AddressRangeACPI	Yes	ACPI Reclaim Memory. This range is available RAM usable by the OS after it reads the ACPI tables.
4	AddressRangeNVS	Yes	ACPI NVS Memory. This range of addresses is in use or reserved by the system and must not be used by the operating system. This range is required to be saved and restored across an NVS sleep.
5	AddressRangeUnusable	No	This range of addresses contains memory in which errors have been detected. This range must not be used by OSPM.
6	AddressRangeDisabled	No	This range of addresses contains memory that is not enabled. This range must not be used by OSPM.
7	AddressRangePersistentMemory	No	OSPM must comprehend this memory as having non-volatile attributes and handle distinct from conventional volatile memory. The memory region supports byte-addressable non-volatility.  NOTE: Extended Attributes (see <a href="#">Table 15-378</a> ) for the memory reported using AddressRangePersistentMemory should set Bit [0] to 1.

Value	Mnemonic	Save in S4	Description
8 - 11	Undefined	No	Reserved for future use. OSPM must treat any range of this type as if the type returned was <i>AddressRangeReserved</i> .
12	OEM defined	No	An OS should not use a memory type in the vendor-defined range because collisions may occur between different vendors.
13 to 0xFFFF FFF	Undefined	No	Reserved for future use. OSPM must treat any range of this type as if the type returned was <i>AddressRangeReserved</i> .
0xF0000 000 to 0xFFFF FFF	OEM defined	No	An OS should not use a memory type in the vendor-defined range because collisions may occur between different vendors.

Platform runtime firmware can use the *AddressRangeReserved* address range type to block out various addresses as not suitable for use by a programmable device. Some of the reasons a platform runtime firmware would do this are:

- The address range contains system ROM.
- The address range contains RAM in use by the ROM.
- The address range is in use by a memory-mapped system device.
- The address range is, for whatever reason, unsuitable for a standard device to use as a device memory space.
- The address range is within an NVRAM device where reads and writes to memory locations are no longer successful, that is, the device was worn out.

**Note:** OSPM will not save or restore memory reported as *AddressRangeReserved*, *AddressRangeUnusable*, *AddressRangeDisabled*, or *AddressRangePersistentMemory* when transitioning to or from the S4 sleeping state.

**Note:** Platform boot firmware must ensure that contents of memory that is reported as *AddressRangePersistentMemory* is retained after a system reset or a power cycle event.

## 15.1 INT 15H, E820H - Query System Address Map

This interface is used in real mode only on IA-PC-based systems and provides a memory map for all of the installed RAM, and of physical memory ranges reserved by the BIOS. The address map is returned through successive invocations of this interface; each returning information on a single range of physical addresses. Each range includes a type that indicates how the range of physical addresses is to be treated by the OSPM.

If the information returned from E820 in some way differs from INT-15 88 or INT-15 E801, the information returned from E820 supersedes the information returned from INT-15 88 or INT-15 E801. This replacement allows the BIOS to return any information that it requires from INT-15 88 or INT-15 E801 for compatibility reasons. For compatibility reasons, if E820 returns any *AddressRangeACPI* or *AddressRangeNVS* memory ranges below 16 MiB, the INT-15 88 and INT-15 E801 functions must return the top of memory below the *AddressRangeACPI* and *AddressRangeNVS* memory ranges.

The memory map conveyed by this interface is not required to reflect any changes in available physical memory that have occurred after the BIOS has initially passed control to the operating system. For example, if memory is added dynamically, this interface is not required to reflect the new system memory configuration.

**Table 15-375 Input to the INT 15h E820h Call**

Register	Contents	Description
EAX	Function Code	E820h
EBX	Continuation	Contains the continuation value to get the next range of physical memory. This is the value returned by a previous call to this routine. If this is the first call, EBX must contain zero.
ES:DI	Buffer Pointer	Pointer to an Address Range Descriptor structure that the BIOS fills in.
ECX	Buffer Size	The length in bytes of the structure passed to the BIOS. The BIOS fills in the number of bytes of the structure indicated in the ECX register, maximum, or whatever amount of the structure the BIOS implements. The minimum size that must be supported by both the BIOS and the caller is 20 bytes. Future implementations might extend this structure.
EDX	Signature	'SMAP' Used by the BIOS to verify the caller is requesting the system map information to be returned in ES:DI.

**Table 15-376 Output from the INT 15h E820h Call**

Register	Contents	Description
CF	Carry Flag	Non-Carry – Indicates No Error
EAX	Signature	'SMAP.' Signature to verify correct BIOS revision.
ES:DI	Buffer Pointer	Returned Address Range Descriptor pointer. Same value as on input.
ECX	Buffer Size	Number of bytes returned by the BIOS in the address range descriptor. The minimum size structure returned by the BIOS is 20 bytes.
EBX	Continuation	Contains the continuation value to get the next address range descriptor. The actual significance of the continuation value is up to the discretion of the BIOS. The caller must pass the continuation value unchanged as input to the next iteration of the E820 call in order to get the next Address Range Descriptor. A return value of zero means that this is the last descriptor.  <b>Note:</b> the BIOS can also indicate that the last descriptor has already been returned during previous iterations by returning the carry flag set. The caller will ignore any other information returned by the BIOS when the carry flag is set.

**Table 15-377 Address Range Descriptor Structure**

Offset in Bytes	Name	Description

0	BaseAddrLow	Low 32 Bits of Base Address
4	BaseAddrHigh	High 32 Bits of Base Address
8	LengthLow	Low 32 Bits of Length in Bytes
12	LengthHigh	High 32 Bits of Length in Bytes
16	Type	Address type of this range
20	Extended Attributes	See <a href="#">Table 15-378</a>

The *BaseAddrLow* and *BaseAddrHigh* together are the 64-bit base address of this range. The base address is the physical address of the start of the range being specified.

The *LengthLow* and *LengthHigh* together are the 64-bit length of this range. The length is the physical contiguous length in bytes of a range being specified.

The *Type* field describes the usage of the described address range as defined in [Table 15-374](#).

**Table 15-378 Extended Attributes for Address Range Descriptor Structure**

Bit	Mnemonic	Description
0	<i>Reserved</i>	Reserved, must be set to 1.
2:1	Reserved	Reserved, must be set to 0.
3	AddressRangeErrorLog	If set, the address range descriptor represents memory used for logging hardware errors.
31:4	<i>Reserved</i>	Reserved for future use.

**Note:** Bit [1] and [2] were deprecated as of ACPI 6.1. Bit [3] is used only on PC-AT BIOS systems to pinpoint the error log in memory. On UEFI-based systems, either UEFI Hardware Error Record *HwErrRec####* runtime UEFI variable interface or the Error Record Serialization Actions 0xD, 0xE and 0xF for the APEI ERST interface must be implemented for the error logs.

## 15.2 E820 Assumptions and Limitations

- The platform boot firmware returns address ranges describing baseboard memory.
- The platform boot firmware does *not* return a range description for the memory mapping of PCI devices, ISA Option ROMs, and ISA Plug and Play cards because the OS has mechanisms available to detect them.
- The platform boot firmware returns chip set-defined address holes that are not being used by devices as reserved.
- Address ranges defined for baseboard memory-mapped I/O devices, such as APICs, are returned as reserved.
- All occurrences of the system platform boot firmware are mapped as reserved, including the areas below 1 MB, at 16 MB (if present), and at end of the 4-GB address space.
- Standard PC address ranges are not reported. For example, video memory at A0000 to BFFFF physical addresses are not described by this function. The range from E0000 to EFFFF is specific to the baseboard and is reported as it applies to that baseboard.

- All of lower memory is reported as normal memory. The OS must handle standard RAM locations that are reserved for specific uses, such as the interrupt vector table (0:0) and the platform boot firmware data area (40:0).

## 15.3 UEFI GetMemoryMap() Boot Services Function

EFI enabled systems use the UEFI **GetMemoryMap( )** boot services function to convey memory resources to the OS loader. These resources must then be conveyed by the OS loader to OSPM.

The GetMemoryMap interface is only available at boot services time. It is not available as a run-time service after OSPM is loaded. The OS or its loader initiates the transition from boot services to run-time services by calling **ExitBootServices( )**. After the call to **ExitBootServices( )** all system memory map information must be derived from objects in the ACPI Namespace.

The **GetMemoryMap( )** interface returns an array of UEFI memory descriptors. These memory descriptors define a system memory map of all the installed RAM, and of physical memory ranges reserved by the firmware. Each descriptor contains a type field that dictates how the physical address range is to be treated by the operating system. [Table 15-379](#) defines the mapping from UEFI memory types (see UEFI Specification) to ACPI address range types (see [Table 15-374](#)) that:

- Platform boot firmware shall follow if describing the memory range in both UEFI and legacy BIOS modes; and
- an OS loader should use if it conveys that information to the OS using an ACPI E820h system address map table.

**Table 15-379 UEFI Memory Types and mapping to ACPI address range types**

Type	Mnemonic	ACPI Address Range Type
0	EfiReservedMemoryType	AddressRangeReserved
1	EfiLoaderCode	AddressRangeMemory
2	EfiLoaderData	AddressRangeMemory
3	EfiBootServicesCode	AddressRangeMemory
4	EfiBootServicesData	AddressRangeMemory
5	EfiRuntimeServiceCode	AddressRangeReserved
6	EfiRuntimeServicesData	AddressRangeReserved
7	EfiConventionalMemory	AddressRangeMemory
8	EfiUnusableMemory	AddressRangeReserved
9	EfiACPIReclaimMemory	AddressRangeACPI
10	EfiACPIMemoryNVS	AddressRangeNVS
11	EfiMemoryMappedIO	AddressRangeReserved
12	EfiMemoryMappedIOPortSpace	AddressRangeReserved
13	EfiPalCode	AddressRangeReserved
14	EfiPersistentMemory	AddressRangePersistentMemory

Type	Mnemonic	ACPI Address Range Type
15 to 0x6FFFFFFF	Reserved.	AddressRangeReserved
0x70000000 to 0x7FFFFFFF	Reserved for OEM use	An OS should not use a memory type in the vendor-defined range because collisions may occur between different vendors.
0x80000000 to 0xFFFFFFFF	Reserved for use by UEFI OS loaders that are provided by operating system vendors	OSV defined

**Note:** [Table 15-379](#) applies to system firmware that supports legacy BIOS mode plus UEFI mode, and OS loaders.

## 15.4 UEFI Assumptions and Limitations

- The firmware returns address ranges describing the current system memory configuration.
- The firmware does *not* return a range description for the memory mapping of PCI devices, ISA Option ROMs, and ISA Plug and Play cards because the OS has mechanisms available to detect them.
- The firmware does not return a range description for address space regions that are not backed by physical hardware except those mentioned above. Regions that are backed by physical hardware, but are not supposed to be accessed by the OS, must be returned as reserved. Herein 'reserved' is the definition of the term as noted by the ACPI specification as ACPI address range reserved. OS may use addresses of memory ranges that are not described in the memory map at its own discretion
- Address ranges defined for baseboard memory-mapped I/O devices, such as APICs, are returned as reserved.
- All occurrences of the system firmware are mapped as reserved, including the areas below 1 MB, at 16 MB (if present), and at end of the 4-GB address space. This can include PAL code on Itanium™ Processor Family (IPF)- based platforms.
- Standard PC address ranges are not reported. For example, video memory at A0000 to BFFFF physical addresses are not described by this function. The range from E0000 to EFFFF is specific to the baseboard and is reported as it applies to that baseboard.
- All of lower memory is reported as normal memory. The OS must handle standard RAM locations that are reserved for specific uses, such as the interrupt vector table (0:0) and the platform boot firmware data area (40:0). To preserve backward compatibility, platform should avoid using persistent memory to materialize the lower memory. If persistent memory is used for lower memory, platform boot firmware must report the lower memory address range using AddressRangeMemory and must not report using AddressRangePersistentMemory.
- EFI contains descriptors for memory mapped I/O and memory mapped I/O port space to allow for virtual mode calls to UEFI run-time functions. The OS must never use these regions.

## 15.5 Example Address Map

This sample address map (for an Intel processor-based system) describes a machine that has 128 MiB of RAM, 640 KiB of base memory and 127 MiB of extended memory. The base memory has 639 KiB available for the user and 1 KiB for an extended BIOS data area. A 4-MiB Linear Frame Buffer (LFB) is based at 12 MiB. The memory hole created by the chip set is from 8 MiB to 16 MiB. Memory-mapped APIC devices

are in the system. The I/O Unit is at FEC00000 and the Local Unit is at FEE00000. The system BIOS is remapped to 1 GB–64 KiB.

The 639-KiB endpoint of the first memory range is also the base memory size reported in the BIOS data segment at 40:13. The following table shows the memory map of a typical system.

**Table 15-380 Sample Memory Map**

Base (Hex)	Length	Type	Description
0000 0000	639 KiB	AddressRangeMemory	Available Base memory. Typically the same value as is returned using the INT 12 function.
0009 FC00	1 KiB	AddressRangeReserved	Memory reserved for use by the BIOS(s). This area typically includes the Extended BIOS data area.
000F 0000	64 KiB	AddressRangeReserved	System BIOS
0010 0000	7 MiB	AddressRangeMemory	Extended memory, which is not limited to the 64-MiB address range.
0080 0000	4 MiB	AddressRangeReserved	Chip set memory hole required to support the LFB mapping at 12 MiB.
0100 0000	60 MiB	AddressRangeMemory	Baseboard RAM relocated above a chip set memory hole.
04C0 0000	60 MiB	AddressRangePersistent Memory	Persistent memory that has non-volatile attributes located in this region.
FEC0 0000	4 KiB	AddressRangeReserved	I/O APIC memory mapped I/O at FEC00000.
FEE0 0000	4 KiB	AddressRangeReserved	Local APIC memory mapped I/O at FEE00000.
FFFF 0000	64 KiB	AddressRangeReserved	Remapped System BIOS at end of address space.

## 15.6 Example: Operating System Usage

The following code segment illustrates the algorithm to be used when calling the Query System Address Map function. It is an implementation example and uses non-standard mechanisms.

```
E820Present = FALSE;
Reg.ebx = 0;
do {
    Reg.eax = 0xE820;
    Reg.es = SEGMENT(&Descriptor);
    Reg.di = OFFSET(&Descriptor);
    Reg.ecx = si zeof(Descriptor);
    Reg.edx = 'SMAP';

    _int(15, regs);

    if ((Regs.eflags & EFLAG_CARRY) || Regs.eax != 'SMAP') {
        break;
    }
}
```

```
}

if (Regs.ecx < 20 || Reg.ecx > sizeof (Descriptor) ) {
    // bug in bios - all returned descriptors must be
    // at least 20 bytes long, and cannot be larger than
    // the input buffer.

    break;
}

E820Present = TRUE;

.

.

Add address range Descriptor.BaseAddress through
Descriptor.BaseAddress + Descriptor.Length
as type Descriptor.Type

.

.

}

while (Regs.ebx != 0);

if (!E820Present) {

.

.

call INT-15 88 and/or INT-15 E801 to obtain old style
memory information

.

.

}
```

# 16 Waking and Sleeping

---

ACPI defines a mechanism to transition the system between the working state (G0) and a sleeping state (G1) or the soft-off (G2) state. During transitions between the working and sleeping states, the context of the user's operating environment is maintained. ACPI defines the quality of the G1 sleeping state by defining the system attributes of four types of ACPI sleeping states (S1, S2, S3, and S4). Each sleeping state is defined to allow implementations that can tradeoff cost, power, and wake latencies. Additionally, ACPI defines the sleeping states such that an ACPI platform can support multiple sleeping states, allowing the platform to transition into a particular sleeping state for a predefined period of time and then transition to a lower power/higher wake latency sleeping state (transitioning through the G0 state)<sup>1</sup>.

ACPI defines a programming model that provides a mechanism for OSPM to initiate the entry into a sleeping or soft-off state (S1-S5); this consists of a 3-bit field SLP\_TYPx<sup>2</sup> that indicates the type of sleep state to enter, and a single control bit SLP\_EN to start the sleeping process. On HW-reduced ACPI systems, the register described by the SLEEP\_CONTROL\_REG field in the FADT is used instead of the fixed SLP\_TYPx and SLP\_EN register bit fields.

**Note:** *Systems containing processors without a hardware mechanism to place the processor in a low-power state may additionally require the execution of appropriate native instructions to place the processor in a low-power state after OSPM sets the SLP\_EN bit. The hardware may implement a number of low-power sleeping states and then associate these states with the defined ACPI sleeping states (through the SLP\_TYPx fields). The ACPI system firmware creates a sleeping object associated with each supported sleeping state (unsupported sleeping states are identified by the lack of the sleeping object). Each sleeping object contains two constant 3-bit values that OSPM will program into the SLP\_TYPa and SLP\_TYPb fields (in fixed register space), or, on HW-reduced ACPI platforms, a single 3-bit value that OSPM will write to the register specified by the FADT's SLEEP\_CONTROL\_REG field.*

On systems that are not HW-reduced ACPI platforms, an alternate mechanism for entering and exiting the S4 state is defined. This mechanism passes control to the platform runtime firmware to save and restore platform context. Context ownership is similar in definition to the S3 state, but hardware saves and restores the context of memory to non-volatile storage (such as a disk drive), and OSPM treats this as an S4 state with implied latency and power constraints. This alternate mechanism of entering the S4 state is referred to as the S4BIOS transition.

Prior to entering a sleeping state (S1-S4), OSPM will execute OEM-specific AML/ASL code contained in the \_PTS (Prepare To Sleep) control method. One use of the \_PTS control method is that it can indicate to the

- 
1. OSPM uses the RTC wakeup feature or the Time and Alarm Namespace device to program in the time transition delay. Prior to sleeping, OSPM will program the alarm to the closest (in time) wakeup event: either a transition to a lower power sleeping state, or a calendar event (to run some application).
  2. Notice that there can be two fixed PM1x\_CNT registers, each pointing to a different system I/O space region. Normally a register grouping only allows a bit or bit field to reside in a single register group instance (a or b); however, each platform can have two instances of the SLP\_TYP (one for each grouping register: a and b). The \\_Sx control method gives a package with two values: the first is the SLP\_TYPa value and the second is the SLP\_TYPb value.

embedded controller what sleeping state the system will enter. The embedded controller can then respond by executing the proper power-plane sequencing upon sleep state entry.

The \_WAK (Wake) control method is then executed. This control method again contains OEM-specific AML/ASL code. One use of the \_WAK control method requests OSPM to check the platform for any devices that might have been added or removed from the system while the system was asleep. For example, a PC Card controller might have had a PC Card added or removed, and because the power to this device was off in the sleeping state, the status change event was not generated.

This section discusses the system initialization sequence of an ACPI-enabled platform. This includes the boot sequence, different wake scenarios, and an example to illustrate how to use the system address map reporting interfaces. This sequence is part of the ACPI event programming model.

**Note:** HW-reduced ACPI platforms do not implement the Legacy Mode nor the S4BIOS state described below.

For detailed information on the power management control methods described above, see [Section 7](#), "Power and Performance Management."

## 16.1 Sleeping States

The illustration below shows the transitions between the working state, the sleeping states, and the Soft Off state.

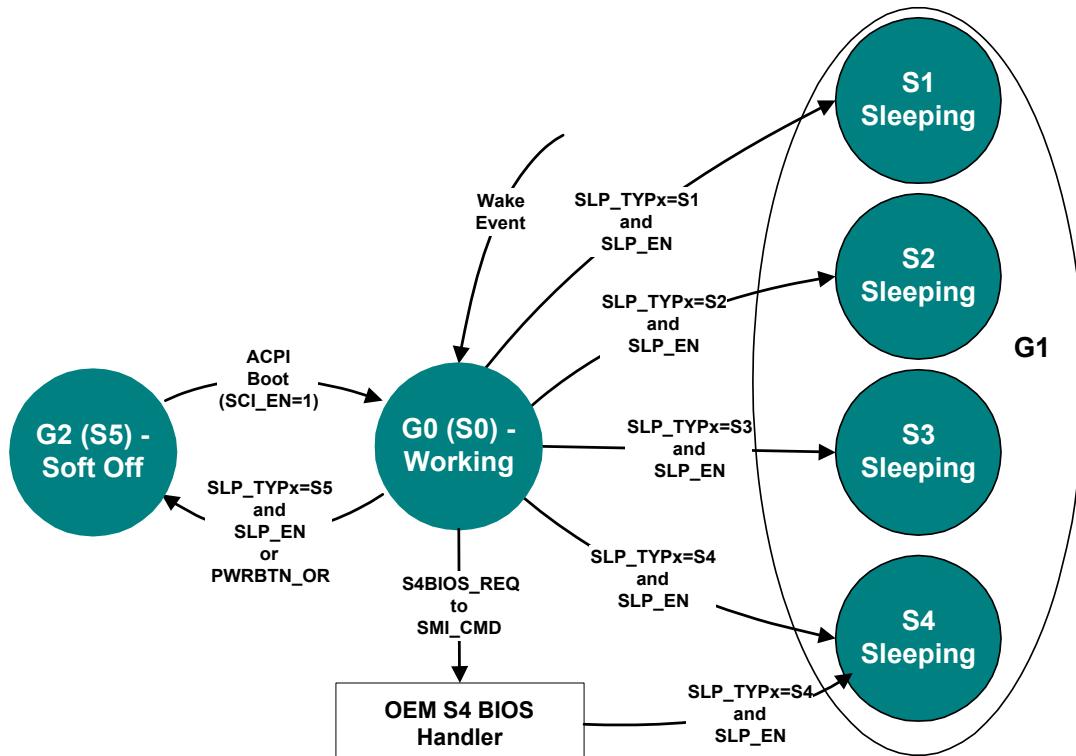


Figure 16-74 Example Sleeping States

ACPI defines distinct differences between the G0 and G1 system states.

- In the G0 state, work is being performed by the OS/application software and the hardware. The CPU or any particular hardware device could be in any one of the defined power states (C0-C3 or D0-D3); however, some work will be taking place in the system.
- In the G1 state, the system is assumed to be doing no work. Prior to entering the G1 state, OSPM will place devices in a device power state compatible with the system sleeping state to be entered; if a device is enabled to wake the system, then OSPM will place these devices into the lowest Dx state from which the device supports wake. This is defined in the power resource description of that device object. This definition of the G1 state implies:
  - The CPUs execute no instructions in the G1 state.
  - Hardware devices are not operating (except possibly to generate a wake event).
  - If not HW-reduced, ACPI registers are affected as follows:
  - Wake event bits are enabled in the corresponding fixed or general-purpose registers according to enabled wake options.
  - PM1 control register is programmed for the desired sleeping state.
  - WAK\_STS is set by hardware in the sleeping state.

All sleeping states have these specifications. ACPI defines additional attributes that allow an ACPI platform to have up to four different sleeping states, each of which has different attributes. The attributes were chosen to allow differentiation of sleeping states that vary in power, wake latency, and implementation cost tradeoffs.

Running processors at reduced levels of performance is not an ACPI sleeping state (G1); this is a working (G0) state-defined event.

The CPU cannot execute any instructions when in the sleeping state; OSPM relies on this fact. A platform designer might be tempted to support a sleeping system by reducing the clock frequency of the system, which allows the platform to maintain a low-power state while at the same time maintaining communication sessions that require constant interaction (as with some network environments). This is definitely a G0 activity where an OS policy decision has been made to turn off the user interface (screen) and run the processor in a reduced performance mode. This type of reduced performance state as a sleeping state is not defined by the ACPI specification; ACPI assumes no code execution during sleeping states.

ACPI defines attributes for four sleeping states: S1, S2, S3 and S4. (Notice that S4 and S5 are very similar from a hardware standpoint.) ACPI-compatible platforms can support multiple sleeping states. ACPI specifies that a 3-bit binary number be associated with each sleeping state (these numbers are given objects within ACPI's root namespace: \\_S0, \\_S1, \\_S2, \\_S3, \\_S4 and \\_S5). When entering a system sleeping state, OSPM will do the following:

1. Pick the deepest sleeping state supported by the platform and enabled waking devices.
2. Execute the \_PTS control method (which passes the type of intended sleep state to OEM AML code).
3. If OS policy decides to enter the S4 state and chooses to use the S4BIOS mechanism and S4BIOS is supported by the platform, OSPM will pass control to the platform runtime firmware software by writing the S4BIOS\_REQ value to the SMI\_CMD port.
4. If not using the S4BIOS mechanism, OSPM gets the SLP\_TYPx value from the associated sleeping object (\\_S1, \\_S2, \\_S3, \\_S4 or \\_S5).
5. Program the SLP\_TYPx fields with the values contained in the selected sleeping object.

**Note:** *Compatibility Note: The \_GTS method is deprecated in ACPI 5.0A. For earlier versions, execute the \_GTS control method, passing an argument that indicates the sleeping state to be entered (1, 2, 3, or 4 representing S1, S2, S3, and S4).*

6. If entering S1, S2, or S3, flush the processor caches.
7. If not entering S4BIOS, set the SLP\_EN bit to start the sleeping sequence. (This actually occurs on the same write operation that programs the SLP\_TYPx field in the PM1\_CNT register.) If entering S4BIOS, write the S4BIOS\_REQ value into the SMI\_CMD port.
8. If HW-reduced, program the register indicated by the SLEEP\_CONTROL\_REG FADT field with the HW-reduced ACPI Sleep Type value (retrieved from the sleep state object in step 4 above) and with the SLP\_EN bit set to one.
9. On systems containing processors without a hardware mechanism to place the processor in a low-power state, execute appropriate native instructions to place the processor in a low-power state.

The \_PTS control method provides the platform runtime firmware a mechanism for performing some housekeeping, such as writing the sleep type value to the embedded controller, before entering the system sleeping state. Control method execution occurs “just prior” to entering the sleeping state and is not an event synchronized with the write to the PM1\_CNT register. Execution can take place several seconds prior to the system actually entering the sleeping state. As such, no hardware power-plane sequencing takes place by execution of the \_PTS control method.

**Note:** *Compatibility Note: The \_BFS method is deprecated in ACPI 5.0A. In earlier versions, on waking, the \_BFS control method is executed. OSPM then executes the \_WAK control method. This control method executes OEM-specific ASL/AML code that can search for any devices that have been added or removed during the sleeping state.*

The following sections describe the sleeping state attributes.

### 16.1.1 S1 Sleeping State

The S1 state is defined as a low wake-latency sleeping state. In this state, all system context is preserved with the exception of CPU caches. Before entering S1, OSPM will flush the system caches. If the platform supports the WBINVD instruction (as indicated by the WBINVD and WBINVD\_FLUSH flags in the FADT), OSPM will execute the WBINVD instruction. The hardware is responsible for maintaining all other system context, which includes the context of the CPU, memory, and chipset.

Examples of S1 sleeping state implementation alternatives follow.

#### 16.1.1.1 Example 1: S1 Sleeping State Implementation

This example references an IA processor that supports the stop grant state through the assertion of the STPCLK# signal. When SLP\_TYPx is programmed to the S1 value (the OEM chooses a value, which is then placed in the \\_S1 object) and the SLP\_ENx bit is subsequently set, or when the HW-reduced ACPI Sleep Type value for S1 and the SLP\_EN bit are written to the Sleep Control Register, the hardware can implement an S1 state by asserting the STPCLK# signal to the processor, causing it to enter the stop grant state.

In this case, the system clocks (PCI and CPU) are still running. Any enabled wake event causes the hardware to de-assert the STPCLK# signal to the processor whereby OSPM must first invalidate the CPU caches and then transition back into the working state.

### 16.1.1.2 Example 2: S1 Sleeping State Implementation

When SLP\_TYPx is programmed to the S1 value and the SLP\_ENx bit is subsequently set, or the HW-reduced ACPI Sleep Type value for S1 and the SLP\_EN bit are written to the Sleep Control Register, the hardware will implement an S1 sleeping state transition by doing the following:

1. Placing the processor into the stop grant state.
2. Stopping the processor's input clock, placing the processor into the stop clock state.
3. Placing system memory into a self-refresh or suspend-refresh state. Refresh is maintained by the memory itself or through some other reference clock that is not stopped during the sleeping state.
4. Stopping all system clocks (asserts the standby signal to the system PLL chip). Normally the RTC will continue running.

In this case, all clocks in the system have been stopped (except for the RTC). Hardware must reverse the process (restarting system clocks) upon any enabled wake event whereby OSPM must first invalidate the CPU caches and then transition back into the working state.

### 16.1.2 S2 Sleeping State

The S2 state is defined as a low wake latency sleep state. This state is similar to the S1 sleeping state where any context except for system memory may be lost. Additionally, control starts from the processor's reset vector after the wake event. Before entering S2 the SLP\_EN bit, OSPM will flush the system caches. If the platform supports the WBINVD instruction (as indicated by the WBINVD and WBINVD\_FLUSH flags in the FADT), OSPM will execute the WBINVD instruction. The hardware is responsible for maintaining chip set and memory context. An example of an S2 sleeping state implementation follows.

#### 16.1.2.1 Example: S2 Sleeping State Implementation

When the SLP\_TYPx register(s) are programmed to the S2 value (found in the \\_S2 object) and the SLP\_EN bit is set, or the HW-reduced ACPI Sleep Type value for S2 and the SLP\_EN bit are written to the Sleep Control Register, the hardware will implement an S2 sleeping state transition by doing the following:

1. Stopping system clocks (the only running clock is the RTC).
2. Placing system memory into a self-refresh or suspend-refresh state.
3. Powering off the CPU and cache subsystem.

In this case, the CPU is reset upon detection of the wake event; however, core logic and memory maintain their context. Execution control starts from the CPU's boot vector. The platform boot firmware is required to:

- Program the initial boot configuration of the CPU (such as the CPU's MSR and MTRR registers).
- Initialize the cache controller to its initial boot size and configuration.
- Enable the memory controller to accept memory accesses.
- Jump to the waking vector.

### 16.1.3 S3 Sleeping State

The S3 state is defined as a low wake-latency sleep state. From the software viewpoint, this state is functionally the same as the S2 state. The operational difference is that some Power Resources that may

have been left ON in the S2 state may not be available to the S3 state. As such, some devices may be in a lower power state when the system is in S3 state than when the system is in the S2 state. Similarly, some device wake events can function in S2 but not S3. An example of an S3 sleeping state implementation follows.

#### 16.1.3.1 Example: S3 Sleeping State Implementation

When the SLP\_TYPx register(s) are programmed to the S3 value (found in the \\_S3 object) and the SLP\_EN bit is set, or the HW-reduced ACPI Sleep Type value for S3 and the SLP\_EN bit are written to the Sleep Control Register, the hardware will implement an S3 sleeping state transition by doing the following:

1. Placing the memory into a low-power auto-refresh or self-refresh state.
2. Devices that are maintaining memory isolating themselves from other devices in the system.
3. Removing power from the system. At this point, only devices supporting memory are powered (possibly partially powered). The only clock running in the system is the RTC clock.

In this case, the wake event repowers the system and resets most devices (depending on the implementation).

Execution control starts from the CPU's boot vector. The platform boot firmware is required to:

4. Program the initial boot configuration of the CPU (such as the MSR and MTRR registers).
5. Initialize the cache controller to its initial boot size and configuration.
6. Enable the memory controller to accept memory accesses.
7. Jump to the waking vector.

Notice that if the configuration of cache memory controller is lost while the system is sleeping, the platform boot firmware is required to reconfigure it to either the pre-sleeping state or the initial boot state configuration. The platform boot firmware can store the configuration of the cache memory controller into the reserved memory space, where it can then retrieve the values after waking. OSPM will call the \_PTS method once per session (prior to sleeping).

The platform boot firmware is also responsible for restoring the memory controller's configuration. If this configuration data is destroyed during the S3 sleeping state, then the platform boot firmware needs to store the pre-sleeping state or initial boot state configuration in a non-volatile memory area (as with RTC CMOS RAM) to enable it to restore the values during the waking process.

When OSPM re-enumerates buses coming out of the S3 sleeping state, it will discover any devices that have been inserted or removed, and configure devices as they are turned on.

#### 16.1.4 S4 Sleeping State

The S4 sleeping state is the lowest-power, longest wake-latency sleeping state supported by ACPI. In order to reduce power to a minimum, it is assumed that the hardware platform has powered off all devices. Because this is a sleeping state, the platform context is maintained. Depending on how the transition into the S4 sleeping state occurs, the responsibility for maintaining system context changes. S4 supports two entry mechanisms: OS initiated and platform runtime firmware-initiated. The OSPM-initiated mechanism is similar to the entry into the S1-S3 sleeping states; OSPM driver writes the SLP\_TYPx fields and sets the SLP\_EN bit, or writes the HW-reduced ACPI Sleep Type value for S3 and the SLP\_EN bit to the Sleep Control Register. The platform runtime firmware-initiated mechanism occurs by

OSPM transferring control to the platform runtime firmware by writing the S4BIOS\_REQ value to the SMI\_CMD port, and is not supported on HW-reduced ACPI platforms.

In OSPM-initiated S4 sleeping state, OSPM is responsible for saving all system context. Before entering the S4 state, OSPM will save context of all memory as specified in [Section 15](#). See [Section 15](#), "System Address Map Interfaces" for more information.

Upon waking, OSPM shall then restore the system context. When OSPM re-enumerates buses coming out of the S4 sleeping state, it will discover any devices that have come and gone, and configure devices as they are turned on.

In the platform runtime firmware-initiated S4 sleeping state, OSPM is responsible for the same system context as described in the S3 sleeping state (platform runtime firmware restores the memory and some chip set context). The S4BIOS transition transfers control to the platform runtime firmware, allowing it to save context to non-volatile memory (such as a disk partition).

#### 16.1.4.1 Operating System-Initiated S4 Transition

If OSPM supports OSPM-initiated S4 transition, it will not generate a platform firmware-initiated S4 transition. Platforms that support the platform firmware-initiated S4 transition also support OSPM-initiated S4 transition.

OSPM-initiated S4 transition is initiated by OSPM by saving system context, writing the appropriate values to the SLP\_TYPx register(s), and setting the SLP\_EN bit, or writes the HW-reduced ACPI Sleep Type value for S4 and the SLP\_EN bit to the Sleep Control Register. Upon exiting the S4 sleeping state, the platform boot firmware restores the chipset to its POST condition, updates the hardware signature (described later in this section), and passes control to OSPM through a normal boot process.

When the platform boot firmware builds the ACPI tables, it generates a hardware signature for the system. If the hardware configuration has changed during an OS-initiated S4 transition, the platform boot firmware updates the hardware signature in the FACS table. A change in hardware configuration is defined to be any change in the platform hardware that would cause the platform to fail when trying to restore the S4 context; this hardware is normally limited to boot devices. For example, changing the graphics adapter or hard disk controller while in the S4 state should cause the hardware signature to change. On the other hand, removing or adding a PC Card device from a PC Card slot should not cause the hardware signature to change.

#### 16.1.4.2 The S4BIOS Transition

This transition is not supported on HW-reduced ACPI platforms. On other systems, the platform runtime firmware-initiated S4 transition begins with OSPM writing the S4BIOS\_REQ value into the SMI\_CMD port (as specified in the FADT). Once gaining control, the platform runtime firmware then saves the appropriate memory and chip set context, and then places the platform into the S4 state (power off to all devices).

In the FACS memory table, there is the S4BIOS\_F bit that indicates hardware support for the platform runtime firmware-initiated S4 transition. If the hardware platform supports the S4BIOS state, it sets the S4BIOS\_F flag within the FACS memory structure prior to booting the OS. If the S4BIOS\_F flag in the FACS table is set, this indicates that OSPM can request the platform runtime firmware to transition the platform into the S4BIOS sleeping state by writing the S4BIOS\_REQ value (found in the FADT) to the SMI\_CMD port (identified by the SMI\_CMD value in the FADT).

Upon waking the platform boot firmware restores memory context and jumps to the waking vector (similar to wake from an S3 state). Coming out of the S4BIOS state, the platform boot firmware must only configure boot devices (so it can read the disk partition where it saved system context). When OSPM re-enumerates buses coming out of the S4BIOS state, it will discover any devices that have come and gone, and configure devices as they are turned on.

### 16.1.5 S5 Soft Off State

OSPM places the platform in the S5 soft off state to achieve a logical off. Notice that *the S5 state is not a sleeping state* (it is a G2 state) and no context is saved by OSPM or hardware but power may still be applied to parts of the platform in this state and as such, it is not safe to disassemble. Also notice that from a hardware perspective, the S4 and S5 states are nearly identical. When initiated, the hardware will sequence the system to a state similar to the off state. The hardware has no responsibility for maintaining any system context (memory or I/O); however, it does allow a transition to the S0 state due to a power button press or a Remote Start. Upon start-up, the platform boot firmware performs a normal power-on reset, loads the boot sector, and executes (but not the waking vector, as all ACPI table context is lost when entering the S5 soft off state).

The \_TTS control method allows the platform runtime firmware a mechanism for performing some housekeeping, such as storing the targeted sleep state in a “global” variable that is accessible by other control methods (such as \_PS3 and \_DSW).

### 16.1.6 Transitioning from the Working to the Sleeping State

On a transition of the system from the working to the sleeping state, the following occurs:

1. OSPM decides (through a policy scheme) to place the system into the sleeping state.
2. OSPM invokes the \_TTS method to indicate the deepest possible system state the system will transition to (1, 2, 3, or 4 representing S1, S2, S3, and S4).
3. OSPM examines all devices enabled to wake the system and determines the deepest possible sleeping state the system can enter to support the enabled wake functions. The \_PRW named object under each device is examined, as well as the power resource object it points to.
4. OSPM places all device drivers into their respective Dx state. If the device is enabled for wake, it enters the Dx state associated with the wake capability. If the device is not enabled to wake the system, it enters the D3 state.
5. OSPM executes the \_PTS control method, passing an argument that indicates the desired sleeping state (1, 2, 3, or 4 representing S1, S2, S3, and S4).
6. OSPM saves any other processor’s context (other than the local processor) to memory.
7. OSPM writes the waking vector into the FACS table in memory.

**Note:** *Compatibility Note: The \_GTS method is deprecated in ACPI 5.0A. For earlier versions, OSPM executes the \_GTS control method, passing an argument that indicates the sleeping state to be entered (1, 2, 3, or 4 representing S1, S2, S3, and S4).*

8. If not a HW-reduced ACPI platform, OSPM clears the WAK\_STS in the PM1a\_STS and PM1b\_STS registers. On HW-reduced ACPI platforms, OSPM clears the WAK\_STS bit in the Sleep Status Register.
9. OSPM saves the local processor’s context to memory.
10. OSPM flushes caches (only if entering S1, S2 or S3).

11. OSPM sets GPE enable registers or enables wake-capable interrupts to ensure that all appropriate wake signals are armed
12. If entering an S4 state using the S4BIOS mechanism, OSPM writes the S4BIOS\_REQ value (from the FADT) to the SMI\_CMD port. This passes control to the platform runtime firmware, which then transitions the platform into the S4BIOS state.
13. If not entering an S4BIOS state, and not a HW-reduced ACPI platform, then OSPM writes SLP\_TYPa (from the associated sleeping object) with the SLP\_ENa bit set to the PM1a\_CNT register.
14. OSPM writes SLP\_TYPb with the SLP\_EN bit set to the PM1b\_CNT register, or writes the HW-reduced ACPI Sleep Type value and the SLP\_EN bit to the Sleep Control Register.
15. On systems containing processors without a hardware mechanism to place the processor in a low-power state, OSPM executes appropriate native instructions to place the processor in a low-power state.
16. OSPM loops on the WAK\_STS bit, either in both the PM1a\_CNT and PM1b\_CNT registers, or in the SLEEP\_STATUS\_REG, in the case of HW-reduced ACPI platforms
17. The system enters the specified sleeping state.

**Note:** This is accomplished after step 14 or 15 above.

### 16.1.7 Transitioning from the Working to the Soft Off State

On a transition of the system from the working to the soft off state, the following occurs:

1. OSPM executes the \_PTS control method, passing the argument 5.
2. OSPM prepares its components to shut down (flushing disk caches).

**Note:** *Compatibility Note: The \_GTS method is deprecated in ACPI 5.0A. For earlier versions, OSPM executes the \_GTS control method, passing the argument 5.*

3. If not a HW-reduced ACPI platform, OSPM writes SLP\_TYPa (from the \\_S5 object) with the SLP\_ENa bit set to the PM1a\_CNT register.
4. OSPM writes SLP\_TYPb (from the \\_S5 object) with the SLP\_ENb bit set to the PM1b\_CNT register, or writes the HW-reduced ACPI Sleep Type value for S5 and the SLP\_EN bit to the Sleep Control Register.
5. The system enters the Soft Off state.

## 16.2 Flushing Caches

Before entering the S1, S2 or S3 sleeping states, OSPM is responsible for flushing the system caches. ACPI provides a number of mechanisms to flush system caches. These include:

- Using a native instruction (for example, the IA-32 architecture WBINVD instruction) to flush and invalidate platform caches.  
WBINVD\_FLUSH flag set (1) in the FADT indicates the system provides this support level.
- Using the IA-32 instruction WBINVD to flush but **not** invalidate the platform caches.  
WBINVD flag set (1) in the FADT indicates the system provides this support level.

The manual flush mechanism has two caveats:

- Largest cache is 1 MB in size (FLUSH\_SIZE is a maximum value of 2 MB).

- No victim caches (for which the manual flush algorithm is unreliable).

Processors with built-in victim caches will not support the manual flush mechanism and are therefore required to support the WBINVD mechanism to use the S2 or S3 state.

The manual cache-flushing mechanism relies on the two FADT fields:

- **FLUSH\_SIZE**. Indicates twice the size of the largest cache in bytes.
- **FLUSH\_STRIDE**. Indicates the smallest line size of the caches in bytes.

The cache flush size value is typically twice the size of the largest cache size, and the cache flush stride value is typically the size of the smallest cache line size in the platform. OSPM will flush the system caches by reading a contiguous block of memory indicated by the cache flush size.

## 16.3 Initialization

This section covers the initialization sequences for an ACPI platform. After a reset or wake from an S2, S3, or S4 sleeping state (as defined by the ACPI sleeping state definitions), the CPU will start execution from its boot vector. At this point, the initialization software has many options, depending on what the hardware platform supports. This section describes at a high level what should be done for these different options. [Figure 16-75](#) illustrates the flow of the boot-up software.

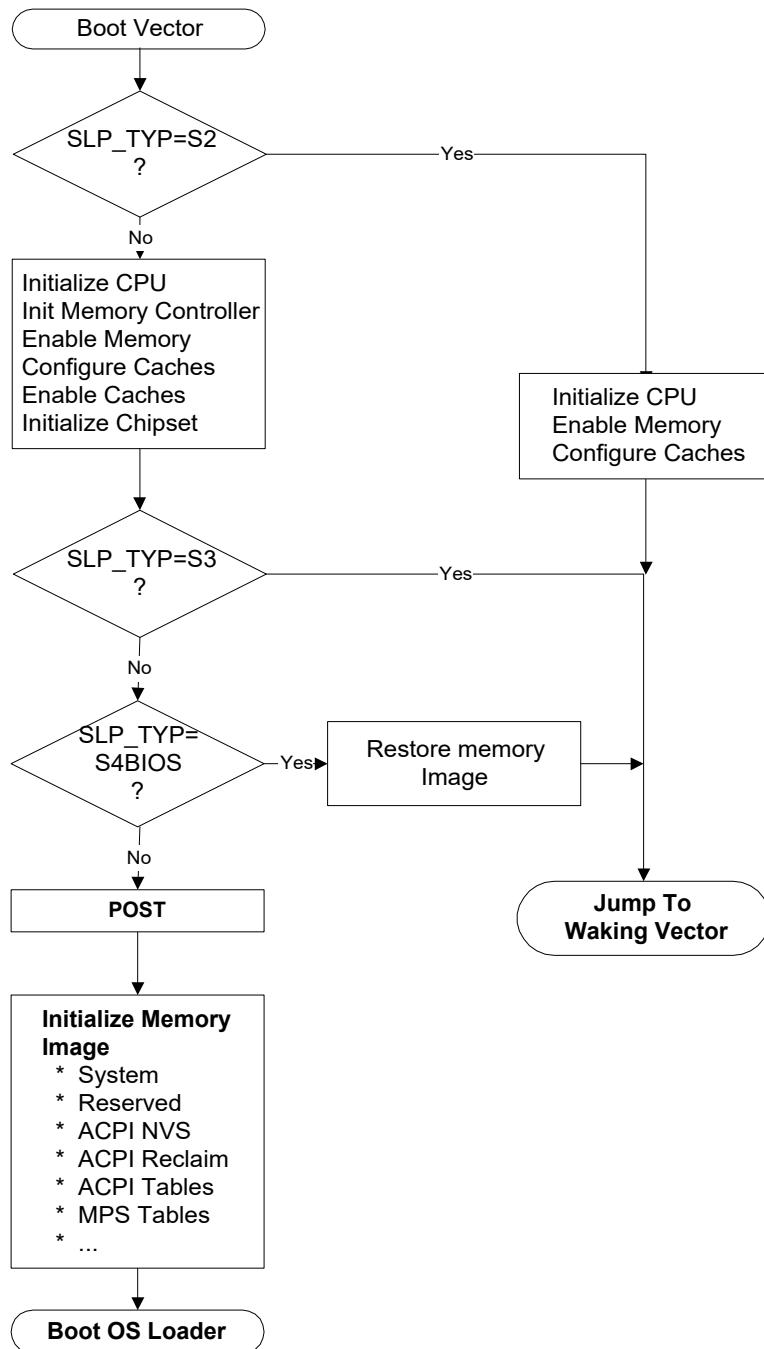


Figure 16-75 Platform Firmware Initialization

The processor will start executing at its power-on reset vector when waking from an S2, S3, or S4 sleeping state, during a power-on sequence, or as a result of a hard or soft reset.

When executing from the power-on reset vector as a result of a power-on sequence, a hard or soft reset, or **waking from an S4 sleep state**, the platform firmware performs complete hardware initialization;

placing the system in a boot configuration. The firmware then passes control to the operating system boot loader.

When executing from the power-on reset vector as a result of waking from an S2 or S3 sleep state, the platform firmware performs only the hardware initialization required to restore the system to either the state the platform was in prior to the initial operating system boot, or to the pre-sleep configuration state. In multiprocessor systems, non-boot processors should be placed in the same state as prior to the initial operating system boot. The platform firmware then passes control back to OSPM system by jumping to either the Firmware\_Waking\_Vector or the X\_Firmware\_Waking\_Vector in the FACS (see [Table 5-37](#) for more information). The contents of operating system memory contents may not be changed during the S2 or S3 sleep state.

First, the platform runtime firmware determines whether this is a wake from S2 or S3 by examining the SLP\_TYP register value, which is preserved between sleeping sessions. If this is an S2 or S3 wake, then the platform runtime firmware restores minimum context of the system before jumping to the waking vector. This includes:

- **CPU configuration.** Platform runtime firmware restores the pre-sleep configuration or initial boot configuration of each CPU (MSR, MTRR, firmware update, SMBASE, and so on). Interrupts must be disabled (for IA-32 processors, disabled by CLI instruction).
- **Memory controller configuration.** If the configuration is lost during the sleeping state, the platform runtime firmware initializes the memory controller to its pre-sleep configuration or initial boot configuration.
- **Cache memory configuration.** If the configuration is lost during the sleeping state, the platform runtime firmware initializes the cache controller to its pre-sleep configuration or initial boot configuration.
- **Functional device configuration.** The platform runtime firmware doesn't need to configure/restore context of functional devices such as a network interface (even if it is physically included in chipset) or interrupt controller. OSPM is responsible for restoring all context of these devices. The only requirement for the hardware and platform runtime firmware is to ensure that interrupts are not asserted by devices when the control is passed to OS.
- **ACPI registers.** SCI\_EN bit must be set on non-HW-reduced ACPI platforms, and all event status/enable bits (PM1x\_STS, PM1x\_EN, GPEx\_STS and GPEx\_EN) must not be changed by platform runtime firmware.

**Note:** *The platform runtime firmware may reconfigure the CPU, memory controller and cache memory controller to either the pre-sleeping configuration or the initial boot configuration. OSPM must accommodate both configurations.*

When waking from an S4BIOS sleeping state, the platform boot firmware initializes a minimum number of devices such as CPU, memory, cache, chipset and boot devices. After initializing these devices, the platform boot firmware restores memory context from non-volatile memory such as hard disk, and jumps to waking vector.

As mentioned previously, waking from an S4 state is treated the same as a cold boot: the platform boot firmware runs POST and then initializes memory to contain the ACPI system description tables. After it has finished this, it can call OSPM loader, and control is passed to OSPM.

When waking from S4 (either S4OS or S4BIOS), the platform boot firmware may optionally set SCI\_EN bit before passing control to OSPM. In this case, interrupts must be disabled (for IA-32 processors, disabled CLI instruction) until the control is passed to OSPM and the chipset must be configured in ACPI mode.

### 16.3.1 Placing the System in ACPI Mode

When a platform initializes from a cold boot (mechanical off or from an S4 or S5 state), the hardware platform may be configured in a legacy configuration, if not a HW-reduced ACPI platform. From these states, the platform boot firmware software initializes the computer as it would for a legacy operating system. When control is passed to the operating system, OSPM will check the SCI\_EN bit and if it is not set will then enable ACPI mode by first finding the ACPI tables, and then by generating a write of the ACPI\_ENABLE value to the SMI\_CMD port (as described in the FADT). The hardware platform will set the SCI\_EN bit to indicate to OSPM that the hardware platform is now configured for ACPI.

**Note:** *Before SCI is enabled, no SCI interrupt can occur. Nor can any SCI interrupt occur immediately after ACPI is on. The SCI interrupt can only be signaled after OSPM has enabled one of the GPE/PM1 enable bits.*

When the platform is waking from an S1, S2 or S3 state, and from S4 and S5 on HW-reduced ACPI platforms, OSPM assumes the hardware is already in the ACPI mode and will not issue an ACPI\_ENABLE command to the SMI\_CMD port

### 16.3.2 Platform Boot Firmware Initialization of Memory

During a power-on reset, an exit from an S4 sleeping state, or an exit from an S5 soft-off state, the platform boot firmware needs to initialize memory. This section explains how the platform boot firmware should configure memory for use by a number of features including:

- ACPI tables.
- Platform firmware memory that wants to be saved across S4 sleeping sessions and should be cached.
- Platform firmware memory that does not require saving and should be cached.


For example, the configuration of the platform's cache controller requires an area of memory to store the configuration data. During the wake sequence, the platform boot firmware will re-enable the memory controller and can then use its configuration data to reconfigure the cache controllers. To support these three items, IA-PC-based systems contain system address map reporting interfaces that return the following memory range types:

- **ACPI Reclaim Memory.** Memory identified by the platform boot firmware that contains the ACPI tables. This memory can be any place above 8 MB and contains the ACPI tables. When OSPM is finished using the ACPI tables, it is free to reclaim this memory for system software use (application space).
- **ACPI Non-Volatile-Sleeping Memory (NVS).** Memory identified by the BIOS as being reserved by the platform boot firmware for its use. OSPM is required to tag this memory as cacheable, and to save and restore its image before entering an S4 state. Except as directed by control methods, OSPM is not allowed to use this physical memory. OSPM will call the \_PTS control method some time before entering a sleeping state, to allow the platform's AML code to update this memory image before entering the sleeping state. After the system awakes from

an S4 state, OSPM will restore this memory area and call the \_WAK control method to enable the platform boot firmware to reclaim its memory image.

**Note:** *The memory information returned from the system address map reporting interfaces should be the same before and after an S4 sleep.*

When the system is first booting, OSPM will invoke E820 interfaces on IA-PC-based legacy systems or the GetMemoryMap() interface on UEFI-enabled systems to obtain a system memory map (see [Section 15](#), “System Address Map Interfaces,” for more information). As an example, the following memory map represents a typical IA-PC-based legacy platform’s physical memory map.

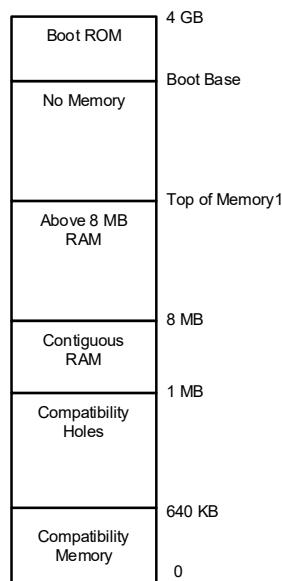


**Figure 16-76 Example Physical Memory Map**

The names and attributes of the different memory regions are listed below:

- **0–640 KB.** Compatibility Memory. Application executable memory for an 8086 system.
- **640 KB–1 MB.** Compatibility Holes. Holes within memory space that allow accesses to be directed to the PC-compatible frame buffer (A0000h-BFFFFh), to adapter ROM space (C0000h-DFFFFh), and to system platform firmware space (E0000h-FFFFFh).
- **1 MB–8 MB.** Contiguous RAM. An area of contiguous physical memory addresses. Operating systems may require this memory to be contiguous in order for its loader to load the OS properly on boot up. (No memory-mapped I/O devices should be mapped into this area.)
- **8 MB–Top of Memory1.** This area contains memory to the “top of memory1” boundary. In this area, memory-mapped I/O blocks are possible.
- **Boot Base–4 GB.** This area contains the bootstrap ROM.

The platform boot firmware should decide where the different memory structures belong, and then configure the E820 handler to return the appropriate values.

For this example, the platform boot firmware will report the system memory map by E820 as shown in Figure 15-4. Notice that the memory range from 1 MB to top of memory is marked as system memory, and then a small range is additionally marked as ACPI reclaim memory. A legacy OS that does not support the E820 extensions will ignore the extended memory range calls and correctly mark that memory as system memory.

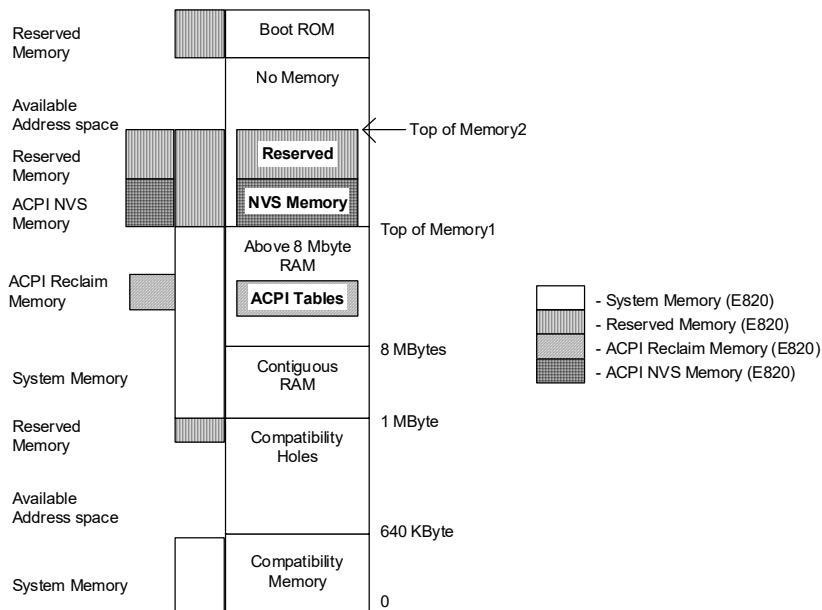

**Figure 16-77 Memory as Configured after Boot**

Also, from the Top of Memory1 to the Top of Memory2, the platform boot firmware has set aside some memory for its own use and has marked as reserved both ACPI NVS Memory and Reserved Memory. A legacy OS will throw out the ACPI NVS Memory and correctly mark this as reserved memory (thus preventing this memory range from being allocated to any add-in device).

OSPM will call the \_PTS control method prior to initiating a sleep (by programming the sleep type, followed by setting the SLP\_EN bit). During a catastrophic failure (where the integrity of the AML code interpreter or driver structure is questionable), if OSPM decides to shut the system off, it will not issue a \_PTS, but will immediately issue a SLP\_TYP of "soft off" and then set the SLP\_EN bit, or directly write the HW-reduced ACPI Sleep Type value and the SLP\_EN bit to the Sleep Control Register. Hence, the hardware should not rely solely on the \_PTS control method to sequence the system to the "soft off" state. After waking from an S4 state, OSPM will restore the ACPI NVS memory image and then issue the \_WAK control method that informs platform runtime firmware that its memory image is back.

### 16.3.3 OS Loading

At this point, the platform boot firmware has passed control to OSPM, either by using OSPM boot loader (a result of waking from an S4/S5 or boot condition) or OSPM waking vector (a result of waking from an S2 or S3 state). For the Boot OS Loader path, OSPM will get the system address map via one of the mechanisms describe in [Section 15](#), "System Address Map Interfaces." If OSPM is booting from an S4

state, it will then check the NVS image file's hardware signature with the hardware signature within the FACS table (built by platform boot firmware) to determine whether it has changed since entering the sleeping state (indicating that the platforms fundamental hardware configuration has changed during the current sleeping state). If the signature has changed, OSPM will not restore the system context and can boot from scratch (from the S4 state). Next, for an S4 wake, OSPM will check the NVS file to see whether it is valid. If valid, then OSPM will load the NVS image into system memory. Next, if not a HW-reduced ACPI platform, OSPM will check the SCI\_EN bit and if it is not set, will write the ACPI\_ENABLE value to the SMI\_CMD register to switch into the system into ACPI mode and will then reload the memory image from the NVS file.

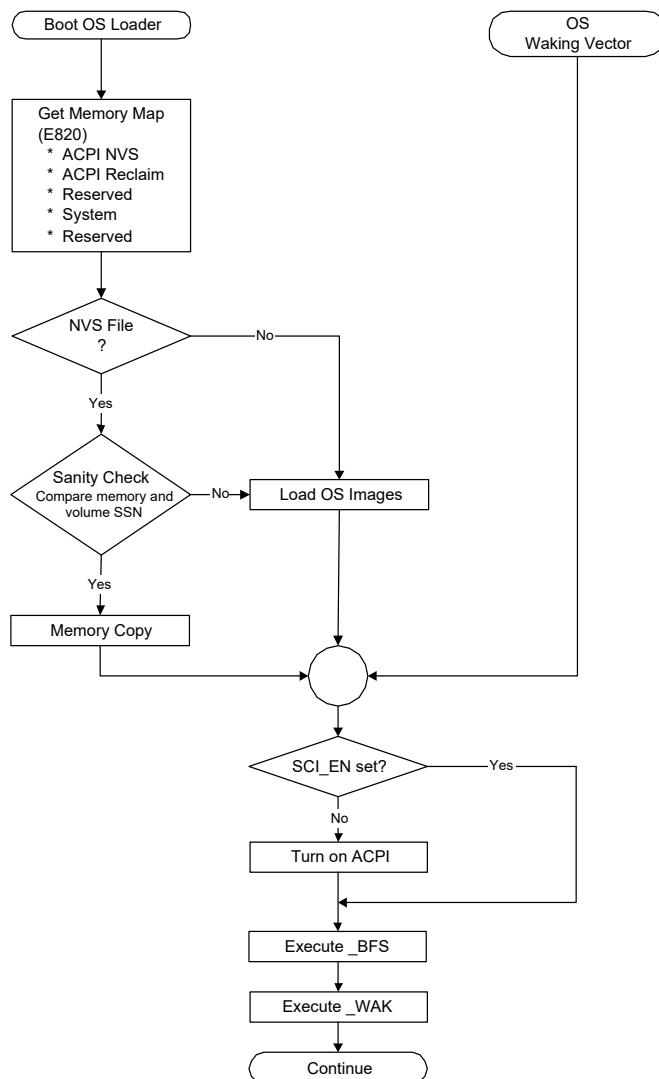


Figure 16-78 OS Initialization

If an NVS image file did not exist, then OSPM loader will load OSPM from scratch. At this point, OSPM will generate a \_WAK call that indicates to the platform runtime firmware that its ACPI NVS memory image has been successfully and completely updated.

#### 16.3.4 Exiting ACPI Mode

For machines that do not boot in ACPI mode, ACPI provides a mechanism that enables the OS to disable ACPI. The following occurs:

1. OSPM unloads all ACPI drivers (including the ACPI driver).
2. OSPM disables all ACPI events.
3. OSPM finishes using all ACPI registers.
4. OSPM issues an I/O access to the port at the address contained in the SMI\_CMD field (in the FADT) with the value contained in the ACPI\_DISABLE field (in the FADT).
5. Platform runtime firmware then remaps all SCI events to legacy events and resets the SCI\_EN bit.
6. Upon seeing the SCI\_EN bit cleared, the ACPI OS enters the legacy OS mode.

When and if the legacy OS returns control to the ACPI OS, if the legacy OS has not maintained the ACPI tables (in reserved memory and ACPI NVS memory), the ACPI OS will reboot the system to allow the platform runtime firmware to re-initialize the tables.

# 17 Non-Uniform Memory Access (NUMA) Architecture Platforms

---

Systems employing a Non Uniform Memory Access (NUMA) architecture contain collections of hardware resources including processors, memory, and I/O buses, that comprise what is commonly known as a “NUMA node”. Two or more NUMA nodes are linked to each other via a high-speed interconnect. Processor accesses to memory or I/O resources within the local NUMA node are generally faster than processor accesses to memory or I/O resources outside of the local NUMA node, accessed via the node interconnect. ACPI defines interfaces that allow the platform to convey NUMA node topology information to OSPM both statically at boot time and dynamically at run time as resources are added or removed from the system.

## 17.1 NUMA Node

A conceptual model for a node in a NUMA configuration may contain one or more of the following components:

- Processor
- Memory
- I/O Resources
- Networking, Storage
- Chipset

The components defined as part of the model are intended to represent all possible components of a NUMA node. A specific node in an implementation of a NUMA platform may not provide all of these components. At a minimum, each node must have a chipset with an interface to the interconnect between nodes.

The defining characteristic of a NUMA system is a coherent global memory and / or I/O address space that can be accessed by all of the processors. Hence, at least one node must have memory, at least one node must have I/O resources and at least one node must have processors. Other than the chipset, which must have components present on every node, each is implementation dependent. In the ACPI namespace, NUMA nodes are described as module devices. See [Section 9.12, “Module Device”](#).

## 17.2 System Locality

A collection of components that are presented to OSPM as a Symmetrical Multi-Processing (SMP) unit belong to the same System Locality, also known as a Proximity Domain. The granularity of a System Locality is typically at the NUMA Node level although the granularity can also be at the sub-NUMA node level or the processor, memory and host bridge level.

A System Locality is reported to the OSPM using Proximity Domain entries in the System Resource Affinity Table (SRAT), or using \_PXM methods in the ACPI namespace. If OSPM only needs to know a near/far distinction among the System Localities, comparing Proximity Domain values is sufficient. See [Section 5.2.16, “System Resource Affinity Table \(SRAT\)”](#), and [Section 6.2.14, “\\_PXM \(Proximity\)”](#) for more information.

OSPM makes no assumptions about the proximity or nearness of different proximity domains. The difference between two integers representing separate proximity domains does not imply distance between the proximity domains (in other words, proximity domain 1 is not assumed to be closer to proximity domain 0 than proximity domain 6).

### **17.2.1 System Resource Affinity Table Definition**

This optional System Resource Affinity Table (SRAT) provides the boot time description of the processor and memory ranges belonging to a system locality. OSPM will consume the SRAT only at boot time. For any devices not in the SRAT, OSPM should use \_PXM for them or their ancestors that are hot-added into the system after boot up.

The SRAT describes the system locality that all processors and memory present in a system belong to at system boot. This includes memory that can be hot-added (that is memory that can be added to the system while it is running, without requiring a reboot). OSPM can use this information to optimize the performance of NUMA architecture systems. For example, OSPM could utilize this information to optimize allocation of memory resources and the scheduling of software threads.

### **17.2.2 System Resource Affinity Update**

Dynamic migration of the devices may cause the relative system resource affinity information (if the optional SRAT is present) to change. If this occurs, The System Resource Affinity Update notification (Notify event of type 0x0D) may be generated by the platform to a device at a point on the device tree that represents a System Resource Affinity. This indicates to OSPM to invoke the \_PXM object of the notified device to update the resource affinity.

## **17.3 System Locality Distance Information**

Optionally, OSPM may further optimize a NUMA architecture system using information about the relative memory latency distances among the System Localities. This may be useful if the distance between multiple system localities is significantly different. In this case, a simple near/far distinction may be insufficient. This information is contained in the optional System Locality Information Table (SLIT) and is returned from the evaluation of the \_SLI object.

The SLIT is a matrix that describes the relative distances between all System Localities. To include devices that are not in the System Resource Affinity Table (SRAT), support for the \_PXM object is required. The Proximity Domain values from SRAT, or the values returned by the \_PXM objects are used as the row and column indices of the matrix.

**Implementation Note:** The size of the SLIT is determined by the largest Proximity Domain value used in the system. Hence, to minimize the size of the SLIT, the Proximity Domain values assigned by the system firmware should be in the range 0, ..., N-1, where N is the number of System Localities. If Proximity Domain values are not packed into this range, the SLIT will still work, but more memory will have to be allocated to store the “Entries” portion of the SLIT for the matrix.

The static SLIT table provides the boot time description of the relative distances among all System Localities. For hot-added devices and dynamic reconfiguration of the system localities, the \_SLI object must be used for runtime update.

The \_SLI method is an optional object that provides the runtime update of the relative distances from the System Locality *i* to all other System Localities in the system. Since \_SLI method is providing additional relative distance information among System Localities, if implemented, it is provided alongside with the \_PXM method.

### **17.3.1 Online Hot Plug**

In the case of online device addition, the Bus Check notification (0x0) is performed on a device object to indicate to OSPM that it needs to perform the Plug and Play re-enumeration operation on the device tree starting from the point where it has been notified. OSPM needs to evaluate all \_PXM objects associated with the added devices, or \_SLI objects if the SLIT is present.

In the case of online device removal, OSPM needs to perform the Plug and Play ejection operation when it receives the Eject Request notification (0x03). OSPM needs to remove the relative distance information from its internal data structure for the removed devices.

### **17.3.2 Impact to Existing Localities**

Dynamic reconfiguration of the system may cause the relative distance information (if the optional SLIT is present) to become stale. If this occurs, the System Locality Information Update notification (Notify event of type 0xB) may be generated by the platform to a device at a point on the device tree that represents a System Locality. This indicates to OSPM that it needs to invoke the \_SLI objects associated with the System Localities on the device tree starting from the point where it has been notified.

## **17.4 Heterogeneous Memory Attributes Information**

Optionally, OSPM may further optimize a NUMA architecture system using the Heterogeneous Memory Attributes. This may be useful if the memory latency and bandwidth attributes between system localities is significantly different. In this case, the information is contained in the optional Heterogeneous Memory Attributes (HMAT) and is returned from the evaluation of the \_HMA object.

The HMAT structure describes the latency and bandwidth information between memory access Initiator and memory Target System Localities. System Locality proximity domain identifiers, as defined by Proximity Domain entries in the System Resource Affinity Table (SRAT), or as returned by \_PXM object, are used in the HMAT structure.

**Implementation Note:** The size of the HMAT table is determined by number of memory initiator System Localities and the memory target System Localities. The static HMAT table provides the boot time description of the memory latency and bandwidth among all memory access Initiator and memory Target System Localities. For hot-added devices and dynamic reconfiguration of the system localities, the \_HMA object must be used for runtime update.

The \_HMA method is an optional object that provides the runtime update of the latency and bandwidth from the memory access Initiator System Locality “*i*” to all other memory Target System Localities “*j*” in the system.

Since \_HMA method is providing additional memory latency and bandwidth information among System Localities, if implemented, it is provided alongside with the \_PXM method.

### **17.4.1 Online Hot Plug**

In the case of online device addition, the Bus Check notification (0x0) is performed on a device object to indicate to OSPM that it needs to perform the Plug and Play re-enumeration operation on the device tree starting from the point where it has been notified. OSPM needs to evaluate all \_PXM objects associated with the added devices, or \_HMA objects if the HMAT is present.

In the case of online device removal, OSPM needs to perform the Plug and Play ejection operation when it receives the Eject Request notification (0x03). OSPM needs to remove the ejected System Localities related information from its internal data structure for the removed devices.

### **17.4.2 Impact to Existing Localities**

Dynamic reconfiguration of the system may cause the memory latency and bandwidth information (if the optional HMAT is present) to become stale. If this occurs, the Heterogeneous Memory Attributes Update notification (Notify event of type 0xE) may be generated by the platform to a device at a point on the device tree that represents a System Locality. This indicates to OSPM that it needs to invoke the \_HMA objects associated with the System Localities on the device tree starting from the point where it has been notified.

# 18 ACPI Platform Error Interfaces (APEI)

---

This section describes the ACPI Platform Error Interfaces (APEI), which provide a means for the platform to convey error information to OSPM. APEI extends existing hardware error reporting mechanisms and brings them together as components of a coherent hardware error infrastructure. APEI takes advantage of the additional hardware error information available in today's hardware devices and integrates much more closely with the system firmware.

As a result, APEI provides the following benefits:

- Allows for more extensive error data to be made available in a standard error record format for determining the root cause of hardware errors.
- Is extensible, so that as hardware vendors add new and better hardware error reporting mechanisms to their devices, APEI allows the platform and the OSPM to gracefully accommodate the new mechanisms.

This provides information to help system designers understand basic issues about hardware errors, the relationship between the firmware and OSPM, and information about error handling and the APEI architecture components.

APEI consists of four separate tables:

- Error Record Serialization Table (ERST)
- Boot Error Record Table (BERT)
- Hardware Error Source Table (HEST)
- Error Injection Table (EINJ)

## 18.1 Hardware Errors and Error Sources

A hardware error is a recorded event related to a malfunction of a hardware component in a computer platform. The hardware components contain error detection mechanisms that detect when a hardware error condition exists. Hardware errors can be classified as either corrected errors or uncorrected errors as follows:

- A corrected error is a hardware error condition that has been corrected by the hardware or by the firmware by the time the OSPM is notified about the existence of the error condition.
- An uncorrected error is a hardware error condition that cannot be corrected by the hardware or by the firmware. Uncorrected errors are either fatal or non-fatal.
  - A fatal hardware error is an uncorrected or uncontained error condition that is determined to be unrecoverable by the hardware. When a fatal uncorrected error occurs, the system is restarted to prevent propagation of the error.
  - A non-fatal hardware error is an uncorrected error condition from which OSPM can attempt recovery by trying to correct the error. These are also referred to as correctable or recoverable errors.

Central to APEI is the concept of a hardware error source. A hardware error source is any hardware unit that alerts OSPM to the presence of an error condition. Examples of hardware error sources include the following:

- Processor machine check exception (for example, MC#)

- Chipset error message signals (for example, SCI, SMI, SERR#, MCERR#)
- I/O bus error reporting (for example, PCI Express root port error interrupt)
- I/O device errors

A single hardware error source might handle aggregate error reporting for more than one type of hardware error condition. For example, a processor's machine check exception typically reports processor errors, cache and memory errors, and system bus errors.

A hardware error source is typically represented by the following:

- One or more hardware error status registers.
- One or more hardware error configuration or control registers.
- A signaling mechanism to alert OSPM to the existence of an error condition.

In some situations, there is not an explicit signaling mechanism and OSPM must poll the error status registers to test for an error condition. However, polling can only be used for corrected error conditions since uncorrected errors require immediate attention by OSPM.

## 18.2 Relationship between OSPM and System Firmware

Both OSPM and system firmware play important roles in hardware error handling. APEI improves the methods by which both of these can contribute to the task of hardware error handling in a complementary fashion. APEI allows the hardware platform vendor to determine whether the firmware or OSPM will own key hardware error resources. APEI also allows the firmware to pass control of hardware error resources to OSPM when appropriate.

## 18.3 Error Source Discovery

Platforms enumerate error sources to OSPM via a set of tables that describe the error sources. OSPM may also support non-ACPI enumerated error sources such as: Machine Check Exception, Corrected Machine Check, NMI, PCI Express AER, and on Itanium™ Processor Family (IPF) platforms the INIT error source. Non-ACPI error sources are not described by this specification.

During initialization, OSPM examines the tables and uses this information to establish the necessary error handlers that are responsible for processing error notifications from the platform.

### 18.3.1 Boot Error Source

Under normal circumstances, when a hardware error occurs, the error handler receives control and processes the error. This gives OSPM a chance to process the error condition, report it, and optionally attempt recovery. In some cases, the system is unable to process an error. For example, system firmware or a management controller may choose to reset the system or the system might experience an uncontrolled crash or reset.

The boot error source is used to report unhandled errors that occurred in a previous boot. This mechanism is described in the BERT table. The boot error source is reported as a 'one-time polled' type error source. OSPM queries the boot error source during boot for any existing boot error records. The platform will report the error condition to OSPM via a Common Platform Error Record (CPER) compliant error record. The CPER format is described in the appendices of the UEFI Specification.

The Boot Error Record Table (BERT) format is shown in [Table 18-381](#).

**Table 18-381 Boot Error Record Table (BERT) Table**

Field	Byte length	Byte offset	Description
Header Signature	4	0	'BERT'. Signature for the Boot Error Record Table.
Length	4	4	Length, in bytes, of BERT.
Revision	1	8	1
Checksum	1	9	Entire table must sum to zero.
OEMID	6	10	OEM ID.
OEM Table ID	8	16	The manufacturer model ID.
OEM Revision	4	24	OEM revision of the BERT for the supplied OEM table ID.
Creator ID	4	28	Vendor ID of the utility that created the table.
Creator Revision	4	32	Revision of the utility that created the table.
Boot Error Region Length	4	36	The length in bytes of the boot error region.
Boot Error Region	8	40	64-bit physical address of the Boot Error Region.

The Boot Error Region is a range of addressable memory OSPM can access during initialization to determine if an unhandled error condition occurred. System firmware must report this memory range as firmware reserved. The format of the Boot Error Region follow that of an Error Status Block, this is defined in [Section 18.3.2.7](#). The format of the error status block is described by [Table 18-391](#).

For details of some of the fields defined in [Table 18-392](#), please refer to the definition of Section Descriptors provided in the appendices of the UEFI Specification under the description of the Common Platform Error Record.

### 18.3.2 ACPI Error Source

The hardware error source describes a standardized mechanism platforms may use to describe their error sources. Use of this interface is the preferred way for platforms to describe their error sources as it is platform and processor-architecture independent and allows the platform to describe the operational parameters associated with error sources.

This mechanism allows for the platform to describe error sources in detail; communicating operational parameters (i.e. severity levels, masking bits, and threshold values) to OSPM as necessary. It also allows the platform to report error sources for which OSPM would typically not implement support (for example, chipset-specific error registers).

The Hardware Error Source Table provides the platform firmware a way to describe a system's hardware error sources to OSPM. The format of the Hardware Error Source Table is shown in [Table 18-382](#).

**Table 18-382 Hardware Error Source Table (HEST)**

Field	Byte length	Byte offset	Description
Header Signature	4	0	“HEST”. Signature for the Hardware Error Source Table.
Length	4	4	Length, in bytes, of entire HEST. Entire table must be contiguous.
Revision	1	8	1
Checksum	1	9	Entire table must sum to zero.
OEMID	6	10	OEM ID.
OEM Table ID	8	16	The manufacturer model ID.
OEM Revision	4	24	OEM revision of the HEST for the supplied OEM table ID.
Creator ID	4	28	Vendor ID of the utility that created the table.
Creator Revision	4	32	Revision of the utility that created the table.
Error Source Count	4	36	The number of error source descriptors.
Error Source Structure[n]	-	40	A series of Error Source Descriptor Entries.

The following sections detail each of the specific error source descriptors.

**Note:** *Error source types 3, 4, and 5 are reserved for legacy reasons and must not be used.*

### 18.3.2.1 IA-32 Architecture Machine Check Exception

Processors implementing the IA-32 Instruction Set Architecture employ a machine check exception mechanism to alert OSPM to the presence of an uncorrected hardware error condition. The information in this table is used by OSPM to configure the machine check exception mechanism for each processor in the system.

Only one entry of this type is permitted in the HEST. OSPM applies the information specified in this entry to all processors.

**Table 18-383 IA-32 Architecture Machine Check Exception Structure**

Field	Byte Length	Byte Offset	Description
Type	2	0	0 – IA-32 Architecture Machine Check Exception Structure.
Source Id	2	2	This value serves to uniquely identify this error source against other error sources reported by the platform.
Reserved	2	4	Reserved.

Field	Byte Length	Byte Offset	Description
Flags	1	6	<p>Bit [0] - FIRMWARE_FIRST: If set, this bit indicates to the OSPM that system firmware will handle errors from this source first.</p> <p>Bit [2] - GHES_ASSIST: If set, this bit indicates that although OSPM is responsible for directly handling the error (as expected when FIRMWARE_FIRST is not set), system firmware reports additional information in the context of an exception generated by the error. The additional information is reported in a Generic Hardware Error Source structure with a matching Related Source Id.</p> <p><b>NOTE:</b> If FIRMWARE_FIRST is set, this bit is reserved. All other bits are reserved.</p>
Enabled	1	7	Specifies whether MCE is to be enabled. If set to 1, this field indicates this error source is to be enabled. If set to 0, this field indicates that the error source is not to be enabled.
Number of Records To Pre-allocate	4	8	Indicates the number of error records to pre-allocate for this error source.
Max Sections Per Record	4	12	Indicates the maximum number of error sections included in an error record created as a result of an error reported by this error source.
Global Capability Init Data	8	16	Indicates the value of the machine check global capability register.
Global Control Init Data	8	24	Indicates the value to be written to the machine check global control register.
Number Of Hardware Banks	1	32	Indicates the number of hardware error reporting banks.
Reserved	7	33	Reserved.
Machine Check Bank Structure[n]	-	40	A list of Machine Check Bank structures defined in <a href="#">Section 18.3.2.1.1</a>

### 18.3.2.1.1 IA-32 Architecture Machine Check Bank Structure

This table describes the attributes of a specific IA-32 architecture machine check hardware error bank.

**Table 18-384 IA-32 Architecture Machine Check Error Bank Structure**

Field	Byte Length	Byte Offset	Description
Bank Number	1	0	Zero-based index identifies the machine check error bank.
Clear Status On Initialization	1	1	If set, indicates the status information in this machine check bank is to be cleared during system initialization as follows: 0 – Clear 1 – Don't clear

Field	Byte Length	Byte Offset	Description
Status Data Format	1	2	Identifies the format of the data in the status register: 0 – IA-32 MCA 1 – Intel® 64 MCA 2 – AMD64MCA All other values are reserved
<i>Reserved</i>	1	3	Reserved.
Control Register MSR Address	4	4	Address of the hardware bank's control MSR. Ignored if zero.
Control Init Data	8	8	This is the value the OSPM will program into the machine check bank's control register.
Status Register MSR Address	4	16	Address of the hardware bank's MCi_STAT MSR. Ignored if zero.
Address Register MSR Address	4	20	Address of the hardware bank's MCi_ADDR MSR. Ignored if zero.
Misc Register MSR Address	4	24	Address of the hardware bank's MCi_MISC MSR. Ignored if zero.

### 18.3.2.2 IA-32 Architecture Corrected Machine Check

Processors implementing the IA-32 Instruction Set Architecture may report corrected processor errors to OSPM. The information in this table allows platform firmware to communicate key parameters of the corrected processor error reporting mechanism to OSPM, including whether CMC processing should be enabled.

Only one entry of this type is permitted in the HEST. OSPM applies the information specified in this entry to all processors.

**Table 18-385 IA-32 Architecture Corrected Machine Check Structure**

Field	Byte Length	Byte Offset	Description
Type	2	0	1 – IA-32 Architecture Corrected Machine Check Structure.
Source Id	2	2	Uniquely identifies the error source.
<i>Reserved</i>	2	4	Reserved

Field	Byte Length	Byte Offset	Description
Flags	1	6	<p>Bit [0] - FIRMWARE_FIRST: If set, this bit indicates that system firmware will handle errors from this source first.</p> <p>Bit [2] - GHES_ASSIST: If set, this bit indicates that although OSPM is responsible for directly handling the error (as expected when FIRMWARE_FIRST is not set), system firmware reports additional information in the context of an interrupt generated by the error. The additional information is reported in a Generic Hardware Error Source structure with a matching Related Source Id.</p> <p><b>NOTE:</b> If FIRMWARE_FIRST is set, this bit is reserved. All other bits must be set to zero.</p>
Enabled	1	7	<p>If the field value is 1, indicates this error source is to be enabled. If the field value is 0, indicates that the error source is not to be enabled.</p> <p>If FIRMWARE_FIRST is set in the flags field, the Enabled field is ignored by OSPM.</p>
Number of Records To Pre-allocate	4	8	Indicates the number of error records to pre-allocate for this error source. Must be $\geq 1$ .
Max Sections Per Record	4	12	Indicates the maximum number of error sections included in an error record created as a result of an error reported by this error source. Must be $\geq 1$ .
Notification Structure	28	16	Hardware Error Notification Structure as defined in <a href="#">Table 18-394</a>
Number Of Hardware Banks	1	44	The number of hardware error reporting banks.
Reserved	3	45	Reserved.
Machine Check Bank Structure[n]	-	48	A list of Machine Check Bank structures defined in <a href="#">Section 18.3.2.1.1</a> .

### 18.3.2.3 IA-32 Architecture Non-Maskable Interrupt

Uncorrected platform errors are typically reported using the Non-Maskable Interrupt (NMI) vector (for example, INT 2). This table allows platform firmware to communicate parameters regarding the configuration and handling of NMI error conditions.

Only one entry of this type is permitted in the HEST.

**Table 18-386 IA-32 Architecture NMI Error Structure**

Field	Byte Length	Byte Offset	Description
Type	2	0	2 – IA-32 Architecture NMI Structure.

Field	Byte Length	Byte Offset	Description
Source Id	2	2	Uniquely identifies this error source.
<i>Reserved</i>	4	4	Must be zero.
Number of Records To Pre-allocate	4	8	Indicates number of error records to pre-allocate for this error source. Must be $\geq 1$ .
Max Sections Per Record	4	12	Indicates maximum number of error sections included in an error record created as a result of an error reported by this error source. Must be $\geq 1$ .
Max Raw Data Length	4	16	The size in bytes of the NMI error data.

#### 18.3.2.4 PCI Express Root Port AER Structure

PCI Express (PCIe) root ports may implement PCIe Advanced Error Reporting (AER) support. This table contains information platform firmware supplies to OSPM for configuring AER support on a given root port.

The HEST may contain one entry of this type for each PCI Express root port if none of the entries has the GLOBAL flag set. If the GLOBAL flag is set, there may only be one entry of this type and the information contained in that entry is applied to all PCIe root ports.

**Table 18-387 PCI Express Root Port AER Structure**

Field	Byte Length	Byte Offset	Description
Type	2	0	6 – AER Root Port.
Source Id	2	2	Uniquely identifies the error source.
<i>Reserved</i>	2	4	Reserved.
Flags	1	6	Bit [0] - FIRMWARE_FIRST: If set, this bit indicates to the OSPM that system firmware will handle errors from this source first. Bit [1] - GLOBAL: If set, indicates that the settings contained in this structure apply globally to all PCI Express Devices. All other bits must be set to zero.
Enabled	1	7	If the field value is 1, indicates this error source is to be enabled. If the field value is 0, indicates that the error source is not to be enabled. If FIRMWARE_FIRST is set in the flags field, the Enabled field is ignored by the OSPM.
Number of Records To Pre-allocate	4	8	Indicates the number error records to pre-allocate for this error source. Must be $\geq 1$ .
Max Sections Per Record	4	12	Indicates the maximum number of error sections included in an error record created as a result of an error reported by this error source. Must be $\geq 1$ .

Field	Byte Length	Byte Offset	Description
Bus	4	16	Identifies the PCI Bus and Segment of the root port. The Bus is encoded in bits [7:0]. For systems that expose multiple PCI segment groups, the segment number is encoded in bits [23:8] and bits [31:24] must be zero. For systems that do not expose multiple PCI segment groups, bits [31:8] must be zero. If the GLOBAL flag is specified, this field is ignored.
Device	2	20	Identifies the PCI Device Number of the root port. If the <i>GLOBAL</i> flag is specified, this field is ignored.
Function	2	22	Identifies the PCI Function number of the root port. If the <i>GLOBAL</i> flag is specified, this field is ignored.
Device Control	2	24	Device control bits with which to initialize the device.
<i>Reserved</i>	2	26	Must be zero.
Uncorrectable Error Mask	4	28	Value to write to the root port's Uncorrectable Error Mask register.
Uncorrectable Error Severity	4	32	Value to write to the root port's Uncorrectable Error Severity register.
Correctable Error Mask	4	36	Value to write to the root port's Correctable Error Mask register.
Advanced Error Capabilities and Control	4	40	Value to write to the root port's Advanced Error Capabilities and Control Register.
Root Error Command	4	44	Value to write to the root port's Root Error Command Register.

### 18.3.2.5 PCI Express Device AER Structure

PCI Express devices may implement AER support. This table contains information platform firmware supplies to OSPM for configuring AER support on a given PCI Express device.

The HEST may contain one entry of this type for each PCI Express endpoint device if none of the entries has the GLOBAL flag set. If the GLOBAL flag is set, there may only be one entry of this type and the information contained in that entry will be applied to all PCI Express endpoint devices.

**Table 18-388 PCI Express Device AER Structure**

Field	Byte Length	Byte Offset	Description
Type	2	0	7 – AER Endpoint.
Source Id	2	2	Uniquely identifies the error source.
<i>Reserved</i>	2	4	Reserved.

Field	Byte Length	Byte Offset	Description
Flags	1	6	Bit [0] - FIRMWARE_FIRST: If set, indicates that system firmware will handle errors from this source first. Bit [1] – GLOBAL: If set, indicates that the settings contained in this structure apply globally to all PCI Express Devices. All other bits must be set to zero.
Enabled	1	7	If the field value is 1, indicates this error source is to be enabled. If the field value is 0, indicates that the error source is not to be enabled. If FIRMWARE_FIRST is set in the flags field, the Enabled field is ignored by the OSPM.
Number of Records To Pre-allocate	4	8	Indicates the number of error records to pre-allocate for this error source. Must be $\geq 1$ .
Max Sections Per Record	4	12	Indicates the maximum number of error sections included in an error record created as a result of an error reported by this error source. Must be $\geq 1$ .
Bus	4	16	Identifies the PCI Bus and Segment of the device. The Bus is encoded in bits [7:0]. For systems that expose multiple PCI segment groups, the segment number is encoded in bits [23:8] and bits [31:24] must be zero. For systems that do not expose multiple PCI segment groups, bits 8-31 must be zero. If the GLOBAL flag is specified, this field is ignored.
Device	2	20	Identifies the PCI Device Number of the device. If the GLOBAL flag is specified, this field is ignored.
Function	2	22	Identifies the PCI Function Number of the device. If the GLOBAL flag is specified, this field is ignored.
Device Control	2	24	Device control bits with which to initialize the device.
Reserved	2	26	Must be zero.
Uncorrectable Error Mask	4	28	Value to write to the root port's Uncorrectable Error Mask register.
Uncorrectable Error Severity	4	32	Value to write to the root port's Uncorrectable Error Severity register.
Correctable Error Mask	4	36	Value to write to the root port's Correctable Error Mask register.
Advanced Error Capabilities and Control	4	40	Value to write to the root port's Advanced Error Capabilities and Control Register.

### 18.3.2.6 PCI Express/PCI-X Bridge AER Structure

PCI Express/PCI-X bridges that implement AER support implement fields that control the behavior how errors are reported across the bridge.

The HEST may contain one entry of this type for each PCI Express/PCI-X bridges if none of the entries has the GLOBAL flag set. If the GLOBAL flag is set, there may only be one entry of this type and the information contained in that entry will be applied to all PCI Express/ PCI-X bridges.

**Table 18-389 PCI Express Bridge AER Structure**

Field	Byte Length	Byte Offset	Description
Type	2	0	8 – AER Bridge.
Source Id	2	2	Uniquely identifies the error source.
<i>Reserved</i>	2	4	Reserved.
Flags	1	6	Bit [0] - FIRMWARE_FIRST: If set, indicates that system firmware will handle errors from this source first. Bit [1] – GLOBAL: If set, indicates that the settings contained in this structure apply globally to all PCI Express Bridges. All other bits must be set to zero.
Enabled	1	7	If the field value is 1, indicates this error source is to be enabled. If the field value is 0, indicates that the error source is not to be enabled. If FIRMWARE_FIRST is set in the flags field, the Enabled field is ignored by the OSPM.
Number of Records To Pre-allocate	4	8	Indicates the number of error records to pre-allocate for this error source. Must be $\geq 1$ .
Max Sections Per Record	4	12	Indicates the maximum number of error sections included in an error record created as a result of an error reported by this error source. Must be $\geq 1$ .
Bus	4	16	Identifies the PCI Bus and Segment of the bridge. The Bus is encoded in bits [7:0]. For systems that expose multiple PCI segment groups, the segment number is encoded in bits [23:8] and bits [31:24] must be zero. For systems that do not expose multiple PCI segment groups, bits 8-31 must be zero. If the GLOBAL flag is specified, this field is ignored.
Device	2	20	Identifies the PCI device number of the bridge. If the GLOBAL flag is specified, this field is ignored.
Function	2	22	Identifies the PCI function number of the bridge. If the GLOBAL flag is specified, this field is ignored.
Device Control	2	24	Device control bits with which to initialize the device.
<i>Reserved</i>	2	26	This value must be zero.
Uncorrectable Error Mask	4	28	Value to write to the bridge's Uncorrectable Error Mask register.
Uncorrectable Error Severity	4	32	Value to write to the bridge's Uncorrectable Error Severity register.

Field	Byte Length	Byte Offset	Description
Correctable Error Mask	4	36	Value to write to the bridge's Correctable Error Mask register.
Advanced Error Capabilities and Control	4	40	Value to write to the bridge's Advanced Error Capabilities and Control Register.
Secondary Uncorrectable Error Mask	4	44	Value to write to the bridge's secondary uncorrectable error mask register.
Secondary Uncorrectable Error Severity	4	48	Value to write to the bridge's secondary uncorrectable error severity register.
Secondary Advanced Capabilities and Control	4	52	Value to write to the bridge's secondary advanced capabilities and control register.

### 18.3.2.7 Generic Hardware Error Source

The platform may describe a generic hardware error source to OSPM using the Generic Hardware Error Source structure. A generic hardware error source is an error source that either notifies OSPM of the presence of an error using a non-standard notification mechanism or reports error information that is encoded in a non-standard format.

Using the information in a Generic Hardware Error Source structure, OSPM configures an error handler to read the error data from an error status block – a range of memory set aside by the platform for recording error status information.

As the generic hardware error source is non-standard, OSPM does not implement built-in support for configuration and control operations. The error source must be configured by system firmware during boot.

Some platforms may describe multiple Generic Hardware Error Source structures with different notification types, as defined in [Table 18-390](#). For example, a platform may describe one error source for the handling of synchronous errors (e.g. MCE or SEA), and a second source for handling asynchronous errors (e.g. SCI or External Interrupt).

**Table 18-390 Generic Hardware Error Source Structure**

Field	Byte Length	Byte Off-set	Description
Type	2	0	9 – Generic Hardware Error Source Structure.
Source Id	2	2	Uniquely identify the error source.

Field	Byte Length	Byte Off-set	Description
Related Source Id	2	4	This field represents the Source Id of an alternate error source for which the platform:  (a) Requires Firmware-First handling (FIRMWARE_FIRST flag is set on alternate error source). See Section 18.4, “Firmware First Error Handling”.  (b) Provides additional information in the context of a generated exception or interrupt (GHES_ASSIST flag is set on alternate error source).  If this generic error source does not represent an alternate source, this field must be set to 0xFFFF.
Flags	1	6	Reserved.
Enabled	1	7	If the field value is 1, indicates this error source is to be enabled. If the field value is 0, indicates that the error source is not to be enabled.
Number of Records To Pre-allocate	4	8	Indicates the number of error records to pre-allocate for this error source. Must be $\geq 1$ .
Max Sections Per Record	4	12	Indicates the maximum number of error sections included in an error record created as a result of an error reported by this error source. Must be $\geq 1$ .
Max Raw Data Length	4	16	Indicates the size in bytes of the error data recorded by this error source.
Error Status Address	12	20	Generic Address Structure as defined in <a href="#">Section 5.2.3.2</a> .  This field specifies the location of a register that contains the physical address of a block of memory that holds the error status data for this error source. This range of memory must reside in firmware reserved memory. OSPM maps this range into system address space and reads the error status information from the mapped address.
Notification Structure	28	32	Hardware Error Notification Structure as defined in <a href="#">Table 18-394</a> . This structure specifies how this error source notifies OSPM that an error has occurred.
Error Status Block Length	4	60	Identifies the length in bytes of the error status data block.

The *Error Status Address* field specifies the location of an 8-byte memory-mapped register that holds the physical address of the error status block. This error status block must reside in a range of memory reported to OSPM as firmware reserved. OSPM maps the error status buffer into system address space in order to read the error data.

### 18.3.2.7.1 Generic Error Data

The *Error Status Block* contains the error status information for a given generic error source. OSPM provides an error handler that formats one or more of these blocks as necessary for the specific operating system.

The generic error status block includes two levels of information. The top level is a *Generic Error Status Block* structure and is defined in [Table 18-391](#). Following the Generic Error Status Block structure are one or more *Generic Error Data Entry* structures, defined in [Table 18-392](#).

**Table 18-391 Generic Error Status Block**

Field	Byte Length	Byte Off-set	Description
Block Status	4	0	<p>Indicates the type of error information reported in the error packet.</p> <p>Bit [0] - Uncorrectable Error Valid: If set to one, indicates that an uncorrectable error condition exists.</p> <p>Bit [1] - Correctable Error Valid: If set to one, indicates that a correctable error condition exists.</p> <p>Bit [2] - Multiple Uncorrectable Errors: If set to one, indicates that more than one uncorrectable errors have been detected.</p> <p>Bit [3] - Multiple Correctable Errors: If set to one, indicates that more than one correctable errors have been detected.</p> <p>Bit [13:4] - Error Data Entry Count: This value indicates the number of Error Data Entries found in the <i>Data</i> section.</p> <p>Bit [31:14] - Reserved</p>
Raw Data Offset	4	4	Offset in bytes from the beginning of the Error Status Block to raw error data. The raw data must follow any <i>Generic Error Data Entries</i> .
Raw Data Length	4	8	Length in bytes of the raw data.
Data Length	4	12	Length in bytes of the generic error data.
Error Severity	4	16	<p>Identifies the error severity of the reported error:</p> <p>0 – Recoverable 1 – Fatal 2 – Corrected 3 – None</p> <p>Note: This is the error severity of the entire event. Each Generic Error Data Entry also includes its own Error Severity field.</p>
Generic Error Data Entries	Data Length	20	The information contained in this field is a collection of zero or more Generic Error Data Entries (see <a href="#">Table 18-392</a> ).

One or more *Generic Error Data Entry* structures may be recorded in the *Generic Error Data Entries* field of the *Generic Error Status Block* structure. This allows the platform to accumulate information for multiple hardware components related to a given error event. For example, if the generic error source represents an error that occurs on a device on the secondary side of a PCI Express / PCI-X Bridge, it is useful to record error information from the PCI Express Bridge and from the PCI-X device. Utilizing two *Generic Error Data Entry* structures enables this. [Table 18-392](#) defines the layout of a Generic Error Data Entry.

For details of some of the fields defined in [Table 18-392](#). Please refer to the definition of Section Descriptors provided in the appendices of the UEFI Specification under the description of the Common Platform Error Record.

**Table 18-392 Generic Error Data Entry**

<b>Field</b>	<b>Byte Length</b>	<b>Byte Offset</b>	<b>Description</b>
Section Type	16	0	Identifies the type of error data in this entry. See the <i>Section Type</i> field of the Section Descriptor in the <i>UEFI Specification</i> .
Error Severity	4	16	Identifies the severity of the reported error. 0 – Recoverable 1 – Fatal 2 – Corrected 3 – None
Revision	2	20	The revision number is 0x300. See the <i>Revision</i> field of the Section Descriptor in the <i>UEFI Specification</i> .
Validation Bits	1	22	Identifies whether certain fields are populated with valid data. This field indicates the validity of the following fields: Bit 0 - If 1, the FRUID field contains valid information. Bit 1 - If 1, the FRUString FRU Text field contains valid information. Bit 2 - If 1, the TimeStamp field contains valid information. Bit 7:3 - Reserved, must be zero..
Flags	1	23	Flags describing the error data. See the <i>Flags</i> field of the Section Descriptor in the <i>UEFI Specification</i> appendix titled "Common Platform Error Record".
Error Data Length	4	24	Length in bytes of the generic error data. It is valid to have a <i>Data Length</i> of zero. This would be used for instance in firmware-first error handling where the platform reports errors to the OSPM using NMI.
FRU Id	16	28	Identifies the Field Replaceable Unit. See the <i>FRU Id</i> field of the Section Descriptor in the <i>UEFI Specification</i> appendix titled "Common Platform Error Record".
FRU Text	20	44	Text field describing the Field Replaceable Unit. See the <i>FRU Text</i> field of the Section Descriptor in the <i>UEFI Specification</i> appendix titled "Common Platform Error Record".

Timestamp	8	64	If marked valid per the validation bits field, this field correlates to the time when the error information was collected by the system software and may not necessarily represent the time of the error event. The timestamp contains the local time in BCD format.  See the <i>Timestamp</i> field of the Error Record Header section in the <i>EFI Specification</i> appendix titled "Common Platform Error Record".
Data	Error Data Length	64	Generic error data. The information contained in this field must match one of the error record section types defined in the <i>UEFI Specification</i> appendix, "Common Platform Error Record".

### 18.3.2.7.2 Event Notification For Generic Error Sources

An event notification is recommended for corrected errors where latency in processing error reports is not critical to proper system operation. The implementation of Event notification requires the platform to define a device with PNP ID PNP0C33 in the ACPI namespace, referred to as the error device. This device is used to notify the OSPM that a generic error source is reporting an error. Since multiple generic error sources can use event notification, it is the responsibility of the OSPM to scan the list of these generic error sources and check the block status field ([Table 18-391](#)) to identify the source that reported the error.

The platform is responsible for providing a control method that issues a NOTIFY on the error device (PNP0C33), with a notification code of type 0x80.

For traditional ACPI platforms the event signaling follows the model described in [Section 5.6.4.1.1](#). The platform implements a general purpose event (GPE) for the error notification, and the GPE has an associated control method.

An example of a GPE control method for error notification is the following:

```
Method (\_GPE._L08) { // GPE 8 level error notification
    Notify (error_device, 0x80)
}
```

For HW-reduced ACPI platforms, the event signaling follows the model described in [Section 5.6.5](#) and [Section 5.6.9](#). The platform implements a notification of error events via interrupts or a GPIO pin. In both cases these are associated with an \_EVT control method.

An example of an \_EVT control method for GPIO-based error notification is the following:

```
Method (\_EVT) { // GPIO pin 300 error notification
    Switch (Arg1) {
        Case (300) {
            Notify (error_device, 0x80)
        }
    }
}
```

The overall flow when the platform uses the event notification is:

- The platform enumerates the error source with event as the notification method using the format in [Table 18-390](#) and [Table 18-391](#)
- The platform surfaces an error device, PNP ID PNP0C33, to the OSPM
- When the platform is ready to report an error, the platform populates the error status block including the block status field ([Table 18-391](#))

Traditional ACPI platforms signal the error using an SCI, on the appropriate GPE:


- The OSPM evaluates the GPE control method associated with this event as indicated on [Section 5.6.4.1.1](#)
- OSPM responds to this notification by checking the error status block of all generic error sources with the SCI Generic notification type to identify the source reporting the error

HW-reduced ACPI platforms signal the error using a GPIO interrupt or another interrupt declared under a generic event device ([Section 5.6.9](#)). In the case of GPIO-signaled events, an \_AEI object lists the appropriate GPIO pin, while for Interrupt-signaled events a \_CRS object is used to list the interrupt:

- The OSPM evaluates the control method associated with this event as indicated in [Section 5.6.5.3](#) and [Section 5.6.9.3](#).
- OSPM responds to this notification by checking the error status block of all generic error sources with the GPIO-Signal notification or Interrupt-signaled notification types to identify the source reporting the error.

### 18.3.2.8 Generic Hardware Error Source version 2 (GHESv2 - Type 10)

This is an extension to the Generic Hardware Error source structure ([Section 18.3.2.7](#)) for hardware-reduced platforms that rely on RAS controllers for generation of generic error records. A RAS controller may be a hardware or firmware entity that may execute in parallel with OS execution (e.g., a RAS controller may be firmware running on an independent microcontroller, or it could be in the form of platform firmware that runs on one of the application processors). Platforms with RAS controllers must prevent concurrent accesses to the *Error Status Block* (i.e., the RAS controller must not overwrite the Error Status Block before the OS has completed reading it). [Figure 18-79](#) provides a high level example of how the RAS controller might interact with the OS.

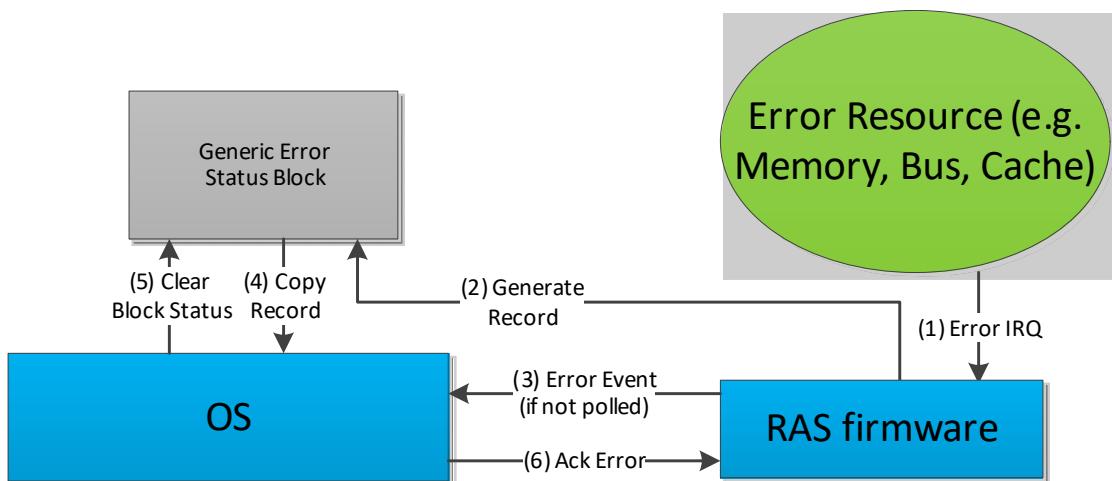

**Figure 18-79 APEI error flow example with external RAS controller**

For GHESv2 error sources, the OSPM must acknowledge the consumption of the *Error Status Block* by writing to the “Read Ack Register” listed in the GHESv2 structure (described in [Table 18-393](#)).

For platforms that describe multiple Generic Hardware Error Sources: The platform must provide a unique memory region for the *Error Status Block* of each error source.

**Table 18-393 Generic Hardware Error Source version 2 (GHESv2) Structure**

Name	Byte Length	Byte Offset	Description
Type	2	0	10 – Generic Hardware Error Source (version 2) structure
Equivalent fields in <a href="#">Table 18-390</a> (Generic Hardware Error Source Structure)	62	2	Same format as fields in <a href="#">Table 18-390</a> (Generic Hardware Error Source Structure) starting from Source Id and ending in Error Status Block Length inclusive
Read Ack Register	12	64	Generic Address Structure as defined in <a href="#">Section 5.2.3.2</a> . This field specifies the location of the Read Ack Register used to notify the RAS controller that OSPM has processed the <i>Error Status Block</i> . The OSPM writes the bit(s) specified in Read Ack Write, while preserving the bit(s) specified in Read Ack Preserve.
Read Ack Preserve	8	76	Contains a mask of bits to preserve when writing the Read Ack register.
Read Ack Write	8	84	Contains a mask of bits to set when writing the Read Ack register.

These are the steps the OS must take once detecting an error from a particular GHESv2 error source:

- OSPM detects error (via interrupt/exception or polling the block status)
- OSPM copies the error status block
- OSPM clears the block status field of the error status block
- OSPM acknowledges the error via Read Ack register. For example:
  - OSPM reads the Read Ack register → X
  - OSPM writes → (( X & ReadAckPreserve ) | ReadAckWrite)

### 18.3.2.9 Hardware Error Notification

This table describes the notification mechanism associated with a hardware error source.

**Table 18-394 Hardware Error Notification Structure**

Field	Byte Length	Byte Offset	Description
Type	1	0	<p>Identifies the notification type:</p> <ul style="list-style-type: none"> <li>0 – Polled</li> <li>1 – External Interrupt</li> <li>2 – Local Interrupt</li> <li>3 – SCI</li> <li>4 – NMI</li> <li>5 - CMCI</li> <li>6 - MCE</li> <li>7 - GPIO-Signal</li> <li>8 - ARMv8 SEA</li> <li>9 - ARMv8 SEI</li> <li>10 - External Interrupt - GSIV</li> <li>11 - Software Delegated Exception – See Links to ACPI-Related Documents (<a href="http://uefi.org/acpi">http://uefi.org/acpi</a>) under the heading, “SDEI Specification.”</li> </ul> <p>All other values are reserved</p>
Length	1	1	Total length of the structure in bytes.
Configuration Write Enable	2	2	<p>This field indicates whether configuration parameters may be modified by OSPM. If the bit for the associated parameter is set, the parameter is writeable by OSPM:</p> <ul style="list-style-type: none"> <li>Bit [0]: Type</li> <li>Bit [1]: Poll Interval</li> <li>Bit [2]: Switch To Polling Threshold Value</li> <li>Bit [3]: Switch To Polling Threshold Window</li> <li>Bit [4]: Error Threshold Value</li> <li>Bit [5]: Error Threshold Window</li> </ul> <p>All other bits are reserved.</p>
Poll Interval	4	4	Indicates the poll interval in milliseconds OSPM should use to periodically check the error source for the presence of an error condition.
Vector	4	8	Interrupt vector. For type 10 “External Interrupt – GSIV”, this field specifies the GSIV triggered by the error source.
Switch To Polling Threshold Value	4	12	The number of error interrupts that must occur within <i>Switch To Polling Threshold Interval</i> before OSPM switches the error source to polled mode.
Switch To Polling Threshold Window	4	16	Indicates the time interval in milliseconds that <i>Switch To Polling Threshold Value</i> interrupts must occur within before OSPM switches the error source to polled mode.

Field	Byte Length	Byte Offset	Description
Error Threshold Value	4	20	Indicates the number of error events that must occur within <i>Error Threshold Interval</i> before OSPM processes the event as an error condition.
Error Threshold Window	4	24	Indicates the time interval in milliseconds that <i>Error Threshold Value</i> errors must occur within before OSPM processes the event as an error condition.

### 18.3.2.10 IA-32 Architecture Deferred Machine Check

Processors implementing the IA-32 Instruction Set Architecture may report Deferred errors to OSPM. These errors indicate that data has been corrupted but not consumed. The information in this table allows platform firmware to communicate key parameters of the deferred processor error reporting mechanism to OSPM, including whether Deferred Machine Check (DMC) processing should be enabled.

Only one entry of this type is permitted in the HEST. OSPM applies the information specified in this entry to all processors.

**Table 18-395 Architecture Deferred Machine Check Structure**

Field	Byte Length	Byte Off-set	Description
Type	2	0	<b>11</b> – IA-32 Architecture Deferred Machine Check Structure.
Source Id	2	2	This value serves to uniquely identify this error source against other error sources reported by the platform.
Reserved	2	4	Reserved.
Flags	1	6	<p>Bit [0] - FIRMWARE_FIRST: If set, this bit indicates to the OSPM that system firmware will handle errors from this source first.</p> <p>Bit [2] - GHES_ASSIST: If set, this bit indicates that although OSPM is responsible for directly handling the error (as expected when FIRMWARE_FIRST is not set), system firmware reports additional information in the context of an interrupt generated by the error. The additional information is reported in a Generic Hardware Error Source structure with a matching Related Source Id.</p> <p><b>NOTE:</b> If FIRMWARE_FIRST is set, this bit is reserved.</p> <p>All other bits must be set to zero.</p>
Enabled	1	7	If the field value is 1, indicates this error source is to be enabled. If the field value is 0, indicates that the error source is not to be enabled. If FIRMWARE_FIRST is set in the flags field, the Enabled field is ignored by OSPM.
Number of Records To Pre-allocate	4	8	Indicates the number of error records to pre-allocate for this error source. Must be $\geq 1$ .

Field	Byte Length	Byte Offset	Description
Max Sections Per Record	4	12	Indicates the maximum number of error sections included in an error record created as a result of an error reported by this error source. Must be $\geq 1$ .
Notification Structure	28	16	Hardware Error Notification Structure as defined in <a href="#">Table 18-345</a>
Number Of Hardware Banks	1	44	Indicates the number of hardware error reporting banks.
Reserved	3	45	Reserved.
Machine Check Bank Structure[n]	-	48	A list of Machine Check Bank structures defined in <a href="#">Section 18.3.2.1.1</a> .

## 18.4 Firmware First Error Handling

It may be necessary for the platform to process certain classes of errors in firmware before relinquishing control to OSPM for further error handling. Errata management and error containment are two examples where firmware-first error handling is beneficial. Generic hardware error sources support this model through the related source ID.

The platform reports the original error source to OSPM via the hardware error source table (HEST) and sets the FIRMWAREFIRST flag for this error source. In addition, the platform must report a generic error source with a related source ID set to the original source ID. This generic error source is used to notify OSPM of the errors on the original source and their status after the firmware first handling.

There are different notification strategies that can be used in firmware first handling; the following options are available to the platform:

- Traditional ACPI platforms may use NMI to notify the OSPM of both corrected and uncorrected errors for a given error source
- Traditional ACPI platforms may use NMI to report uncorrected errors and the SCI to report corrected errors
- Traditional ACPI platforms may use NMI to report uncorrected errors and polling to notify the OSPM of corrected errors
- HW-reduced ACPI platforms may use GPIO-signaled events, Interrupt-signaled events, or polling to report corrected errors.

### 18.4.1 Example: Firmware First Handling Using NMI Notification

If the platform chooses to use NMI to report errors, which is the recommended method for uncorrected errors, the platform follows these steps:

1. System firmware configures the platform to trigger a firmware handler when the error occurs
2. System firmware identifies the error source for which it will handle errors via the error source enumeration interface by setting the FIRMWARE\_FIRST flag
3. System firmware describes the generic error source, and the associated error status block, as described in [Section 18.3.2.7](#). System firmware identifies the relation between the generic error source and the original error source by using the original source ID in the related source ID of [Table 18-390](#).

4. When a hardware error reported by the error source occurs, system firmware gains control and handles the error condition as required. Upon completion system firmware should do the following:
  - a Extract the error information from the error source and fill in the error information in the data block of the generic error source it identified as an alternate in step 3. The error information format follows the specification in [Section 18.3.2.7.1](#)
  - b Set the appropriate bit in the block status field ([Table 18-391](#)) to indicate to the OSPM that a valid error condition is present.
  - c Clears error state from the hardware.
  - d Generates an NMI.

At this point, the OSPM NMI handler scans the list of generic error sources to find the error source that reported the error and processes the error report

## 18.5 Error Serialization

- The error record serialization feature is used to save and retrieve hardware error information to and from a persistent store. OSPM interacts with the platform through a platform interface. If the Error record Serialization Table (ERST) defined in [Section 18-396](#) is present, OSPM uses the ACPI solution described below. Otherwise, OSPM uses the UEFI runtime variable services to carry out error record persistence operations on UEFI based platforms.
- For error persistence across boots, the platform must implement some form of non-volatile store to save error records. The amount of space required depends on the platform's processor architecture. Typically, this store will be flash memory or some other form of non-volatile RAM.
- Serialized errors are encoded according to the Common Platform Error Record (CPER) format, which is described in the appendices of the UEFI Specification. These entries are referred to as *error records*.
- The Error Record Serialization Interface is designed to be sufficiently abstract to allow hardware vendors flexibility in how they implement their error record serialization hardware. The platform provides details necessary to communicate with its serialization hardware by populating the ERST with a set of Serialization Instruction Entries. One or more serialization instruction entries comprise a Serialization Action. OSPM carries out serialization operations by executing a series of Serialization Actions. Serialization Actions and Serialization Instructions are described in detail in the following sections.

[Table 18-396](#) details the layout of the ERST which system firmware is responsible for building.

**Table 18-396 Error Record Serialization Table (ERST)**

Field	Byte Length	Byte Offset	Description
<b>ACPI Standard Header</b>			
Header Signature	4	0	"ERST". Signature for the Error Record Serialization Table.
Length	4	4	Length, in bytes, of entire ERST. Entire table must be contiguous.
Revision	1	8	1
Checksum	1	9	Entire table must sum to zero.
OEMID	6	10	OEM ID.
OEM Table ID	8	16	The manufacturer model ID.
OEM Revision	4	24	OEM revision of the ERST for the supplied OEM table ID.
Creator ID	4	28	Vendor ID of the utility that created the table.
Creator Revision	4	32	Revision of the utility that created the table.
<b>Serialization Header</b>			
Serialization Header Size	4	36	Length in bytes of the serialization header.
<i>Reserved</i>	4	40	Must be zero.
Instruction Entry Count	4	44	The number of Serialization Instruction Entries in the Serialization Action Table.
<b>Serialization Action Table</b>			
Serialization Instruction Entries		48	A series of error logging instruction entries.

## 18.5.1 Serialization Action Table

A Serialization Action is defined as a series of Serialization Instructions on registers that result in a well known action. A Serialization Instruction is a Serialization Action primitive and consists of either reading or writing an abstracted hardware register. The Serialization Action Table contains Serialization Instruction Entries for all the Serialization Actions the platform supports.

In most cases, a Serialization Action comprises only one Serialization Instruction, but it is conceivable that a more complex device will require more than one Serialization Instruction. When an action does comprise more than one instruction, the instructions must be listed consecutively and they will consequently be performed sequentially, according to their placement in the Serialization Action Table.

### 18.5.1.1 Serialization Actions

This section identifies the Serialization Actions that comprise the Error Record Serialization interface. [Table 18-397](#) identifies the supported error record Serialization Actions.

**Table 18-397 Error Record Serialization Actions**

Value	Name	Description
0x0	BEGIN_WRITE_OPERATION	Indicates to the platform that an error record write operation is beginning. This allows the platform to set its operational context.
0x1	BEGIN_READ_OPERATION	Indicates to the platform that an error record read operation is beginning. This allows the platform to set its operational context.
0x2	BEGIN_CLEAR_OPERATION	Indicates to the platform that an error record clear operation is beginning. This allows the platform to set its operational context.
0x3	END_OPERATION	Indicates to the platform that the current error record operation has ended. This allows the platform to clear its operational context.
0x4	SET_RECORD_OFFSET	Sets the offset from the base of the <i>Error Log Address Range</i> to or from which the platform is to transfer an error record.
0x5	EXECUTE_OPERATION	Instructs the platform to carry out the current operation based on the current operational context.
0x6	CHECK_BUSY_STATUS	Returns the state of the current operation. Once an operation has been executed through the EXECUTE_OPERATION action, the platform is required to return an indication that the operation is in progress until the operation completes. This allows the OS to poll for completion by repeatedly executing the CHECK_BUSY_STATUS action until the platform indicates that the operation not busy.
0x7	GET_COMMAND_STATUS	Returns the status of the current operation. The platform is expected to maintain a status code for each operation. See <a href="#">Section 18-398</a> for a list of valid command status codes.
0x8	GET_RECORD_IDENTIFIER	Returns the record identifier of an existing error record on the persistent store. The error record identifier is a 64-bit unsigned value as defined in the appendices of the UEFI Specification. If the record store is empty, this action must return 0xFFFFFFFFFFFFFF.
0x9	SET_RECORD_IDENTIFIER	Sets the record identifier. The error record identifier is a 64-bit unsigned value as defined in the appendices of the UEFI Specification.
0xA	GET_RECORD_COUNT	Retrieves the number of error records currently stored on the platforms persistent store. The platform is expected to maintain a count of the number of error records resident in its persistent store.
0xB	BEGIN_DUMMY_WRITE_OPERATION	Indicates to the platform that a dummy error record write operation is beginning. This allows the platform to set its operational context. A dummy error record write operation performs no actual transfer of information from the <i>Error Log Address Range</i> to the persistent store.
0xC	RESERVED	Reserved.
0xD	GET_ERROR_LOG_ADDRESS_RANGE	Returns the 64-bit physical address OSPM uses as the buffer for reading/writing error records.

Value	Name	Description
0xE	GET_ERROR_LOG_ADDRESS_RANGE_LENGTH	Returns the length in bytes of the Error Log Address Range
0xF	GET_ERROR_LOG_ADDRESS_RANGE_ATTRIBUTES	Returns attributes that describe the behavior of the error log address range. Bit [0] (0x1) – Reserved. Bit [1] (0x2) – Non-Volatile: Indicates that the error log address range is in non-volatile RAM. Bit [2] (0x4) – Slow: Indicates that the memory in which the error log address range is located has slow access times. All other bits reserved.
0x10	GET_EXECUTE_OPERATION_TIMINGS	Returns an encoded QWORD : [63:32] value in microseconds that the platform expects would be the maximum amount of time it will take to process and complete an EXECUTE_OPERATION. [31:0] value in microseconds that the platform expects would be the nominal amount of time it will take to process and complete an EXECUTE_OPERATION.

[Table 18-398](#) below defines the serialization action status codes returned from GET\_COMMAND\_STATUS.

**Table 18-398 Command Status Definition**

Value	Description
0x00	Success
0x01	Not Enough Space
0x02	Hardware Not Available
0x03	Failed
0x04	Record Store Empty
0x05	Record Not Found

### 18.5.1.2 Serialization Instruction Entries

Each Serialization Action consists of a series of one or more Serialization Instructions. A Serialization Instruction represents a primitive operation on an abstracted hardware register represented by the register region as defined in a Serialization Instruction Entry.

A Serialization Instruction Entry describes a region in a serialization hardware register and the serialization instruction to be performed on that region. [Table 18-399](#) details the layout of a Serialization Instruction Entry.

**Table 18-399** Serialization Instruction Entry

Field	Byte Length	Byte Offset	Description
Serialization Action	1	N+0	The serialization action that this serialization instruction is a part of.
Instruction	1	N+1	Identifies the instruction to execute. See <a href="#">Table 18-400</a> for a list of valid serialization instructions.
Flags	1	N+2	Flags that qualify the instruction.
Reserved	1	N+3	Must be zero.
Register Region	12	N+4	Generic Address Structure as defined in <a href="#">Section 5.2.3.2</a> to describe the address and bit.
Value	8	N+16	Value used with READ_REGISTER_VALUE and WRITE_REGISTER_VALUE instructions.
Mask	8	N+24	The bit mask required to obtain the bits corresponding to the serialization instruction in a given bit range defined by the register region.

Register Region is described as a generic address structure. This structure describes the physical address of a register as well as the bit range that corresponds to a desired region of the register. The bit range is defined as the smallest set of consecutive bits that contains every bit in the register that is associated with the Serialization Instruction. If bits [6:5] and bits [3:2] all correspond to a Serialization Instruction, the bit range for that instruction would be [6:2].

Because a bit range could contain bits that do not pertain to a particular Serialization Instruction (i.e. bit 4 in the example above), a bit mask is required to distinguish all the bits in the region that correspond to the instruction. The Mask field is defined to be this bit mask with a bit set to '1' for each bit in the bit range (defined by the register region) corresponding to the Serialization Instruction. Note that bit 0 of the bit mask corresponds to the lowest bit in the bit range. In the example used above, the mask would be 11011b or 0x1B.

The Instruction field identifies the operation to be performed on the register region by the instruction entry. [Table 18-400](#) identifies the instructions that are supported.

**Table 18-400** Serialization Instructions

Value	Name	Description
0x00	READ_REGISTER	A READ_REGISTER instruction reads the designated information from the specified Register Region.
0x01	READ_REGISTER_VALUE	A READ_REGISTER_VALUE instruction reads the designated information from the specified Register Region and compares the results with the contents of the Value field. If the information read matches the contents of the Value field, TRUE is returned, else FALSE is returned.
0x02	WRITE_REGISTER	A WRITE_REGISTER instruction writes a value to the specified Register Region. The Value field is ignored.

Value	Name	Description
0x03	WRITE_REGISTER_VALUE	A WRITE_REGISTER_VALUE instruction writes the contents of the Value field to the specified Register Region.
0x04	NOOP	This instruction is a NOOP.
0x05	LOAD_VAR1	Loads the VAR1 variable from the register region.
0x06	LOAD_VAR2	Loads the VAR2 variable from the register region.
0x07	STORE_VAR1	Stores the value in VAR1 to the indicate register region.
0x08	ADD	Adds VAR1 and VAR2 and stores the result in VAR1.
0x09	SUBTRACT	Subtracts VAR1 from VAR2 and stores the result in VAR1.
0x0A	ADD_VALUE	Adds the contents of the specified register region to Value and stores the result in the register region.
0x0B	SUBTRACT_VALUE	Subtracts Value from the contents of the specified register region and stores the result in the register region.
0x0C	STALL	Stall for the number of microseconds specified in Value.
0x0D	STALL_WHILE_TRUE	OSPM continually compares the contents of the specified register region to Value until the values are not equal. OSPM stalls between each successive comparison. The amount of time to stall is specified by VAR1 and is expressed in microseconds.
0x0E	SKIP_NEXT_INSTRUCTION_IF_TRUE	This is a control instruction which compares the contents of the register region with Value. If the values match, OSPM skips the next instruction in the sequence for the current action.
0x0F	GOTO	OSPM will go to the instruction specified by Value. The instruction is specified as the zero-based index. Each instruction for a given action has an index based on its relative position in the array of instructions for the action.
0x10	SET_SRC_ADDRESS_BASE	Sets the SRC_BASE variable used by the MOVE_DATA instruction to the contents of the register region.
0x11	SET_DST_ADDRESS_BASE	Sets the DST_BASE variable used by the MOVE_DATA instruction to the contents of the register region.
0x12	MOVE_DATA	Moves VAR2 bytes of data from SRC_BASE + Offset to DST_BASE + Offset, where Offset is the contents of the register region.

The Flags field allows qualifying flags to be associated with the instruction. [Table 18-401](#) identifies the flags that can be associated with Serialization Instructions.

**Table 18-401 Instruction Flags**

Value	Name	Description
0x01	PRESERVE_REGISTER	For WRITE_REGISTER and WRITE_REGISTER_VALUE instructions, this flag indicates that bits within the register that are not being written must be preserved rather than destroyed. For READ_REGISTER instructions, this flag is ignored.

### 18.5.1.2.1 READ\_REGISTER\_VALUE

A read register value instruction reads the register region and compares the result with the specified value. If the values are not equal, the instruction failed. This can be described in pseudo code as follows:

```
X = Read(register)
X = X >> Bit Offset described in Register Region
X = X & Mask
If (X != Value) FAIL
SUCCEED
```

### 18.5.1.2.2 READ\_REGISTER

A read register instruction reads the register region. The result is a generic value and should not be compared with Value. Value will be ignored. This can be described in pseudo code as follows:

```
X = Read(register)
X = X >> Bit Offset described in Register Region
X = X & Mask
Return X
```

### 18.5.1.2.3 WRITE\_REGISTER\_VALUE

A write register value instruction writes the specified value to the register region. If PRESERVE\_REGISTER is set in Instruction Flags, then the bits not corresponding to the write value instruction are preserved. If the register is preserved, the write value instruction requires a read of the register. This can be described in pseudo code as follows:

```
X = Value & Mask
X = X << Bit Offset described in Register Region
If (Preserve Register)
    Y = Read(register)
    Y = Y & ~(Mask << Bit Offset)
    X = X | Y
Write(X, Register)
```

### 18.5.1.2.4 WRITE\_REGISTER

A write register instruction writes a value to the register region. Value will be ignored. If PRESERVE\_REGISTER is set in Instruction Flags, then the bits not corresponding to the write instruction are preserved. If the register is preserved, the write value instruction requires a read of the register. This can be described in pseudo code as follows:

```
X = supplied value
X = X & Mask
X = X << Bit Offset described in Register Region
If (Preserve Register)
```

```

Y = Read(register)
Y = Y & ~(Mask << Bit Offset)
X = X | Y
Write(X, Register)

```

### 18.5.1.3 Error Record Serialization Information

The APEI error record includes an 8 byte field called OSPM Reserved. [Table 18-402](#) defines the layout of this field. The error record serialization information is a small buffer the platform can use for serialization bookkeeping. The platform is free to use the 48 bits starting at bit offset 16 for its own purposes. It may use these bits to indicate the busy/free status of an error record, to record an internal identifier, etc.

**Table 18-402 Error Record Serialization Info**

Field	Bit Length	Bit Offset	Description
Signature	16	0	16-bit signature ('ER') identifying the start of the error record serialization data.
Platform Serialization Data	48	16	Platform private error record serialization information.

## 18.5.2 Operations

The error record serialization interface comprises three operations: Write, Read, and Clear. OSPM uses the Write operation to write a single error record to the persistent store. The Read operation is used to retrieve a single error record previously recorded to the persistent store using the write operation. The Clear operation allows OSPM to notify the platform that a given error record has been fully processed and is no longer needed, allowing the platform to recover the storage associated with a cleared error record.

Where the *Error Log Address Range* is NVRAM, significant optimizations are possible since transfer from the *Error Log Address Range* to a separate storage device is unnecessary. The platform may still, however, copy the record from NVRAM to another device, should it choose to. This allows, for example, the platform to copy error records to private log files. In order to give the platform the opportunity to do this, OSPM must use the Write operation to persist error records even when the *Error Log Address Range* is NVRAM. The Read and Clear operations, however, are unnecessary in this case as OSPM is capable of reading and clearing error records without assistance from the platform.

### 18.5.2.1 Writing

To write a single HW error record, OSPM executes the following steps:

1. Initializes the error record's serialization info. OSPM must fill in the *Signature*.
2. Writes the error record to be persisted into the *Error Log Address Range*.
3. Executes the BEGIN\_WRITE\_OPERATION action to notify the platform that a record write operation is beginning.
4. Executes the SET\_RECORD\_OFFSET action to inform the platform where in the *Error Log Address Range* the error record resides.

6. Executes the EXECUTE\_OPERATION action to instruct the platform to begin the write operation.
7. Busy waits by continually executing CHECK\_BUSY\_STATUS action until FALSE is returned.
8. Executes a GET\_COMMAND\_STATUS action to determine the status of the write operation. If an error is indicated, the OS
9. PM may retry the operation.
10. Executes an END\_OPERATION action to notify the platform that the record write operation is complete.

When OSPM performs the EXECUTE\_OPERATION action in the context of a record write operation, the platform attempts to transfer the error record from the designated offset in the *Error Log Address Range* to a persistent store of its choice. If the *Error Log Address Range* is non-volatile RAM, no transfer is required.

Where the platform is required to transfer the error record from the *Error Log Address Range* to a persistent store, it performs the following steps in response to receiving a write command:

1. Sets some internal state to indicate that it is busy. OSPM polls by executing a CHECK\_BUSY\_STATUS action until the operation is completed.
2. Reads the error record's
3. *Record ID* field to determine where on the storage medium the supplied error record is to be written. The platform attempts to locate the specified error record on the persistent store.
  - a If the specified error record does not exist, the platform attempts to write a new record to the persistent store.
  - b If the specified error record does exists, then if the existing error record is large enough to be overwritten by the supplied error record, the platform can do an in-place replacement. If the existing record is not large enough to be overwritten, the platform must attempt to locate space in which to write the new record. It may mark the existing record as Free and coalesce adjacent free records in order to create the necessary space.
4. Transfers the error record to the selected location on the persistent store.
5. Updates an internal
6. *Record Count* if a new record was written.
7. Records the status of the operation so OSPM can retrieve the status by executing a GET\_COMMAND\_STATUS action.
8. Modifies internal busy state as necessary so when OS
9. PM executes CHECK\_BUSY\_STATUS, the result indicates that the operation is complete.

If the *Error Log Address Range* resides in NVRAM, the minimum steps required of the platform are:

1. Sets some internal state to indication that it is busy. OSPM polls by executing a CHECK\_BUSY\_STATUS action until the operation is completed.
2. Records the status of the o
3. peration so OSPM can retrieve the status by executing a GET\_COMMAND\_STATUS action.
4. Clear internal busy state so when OS
5. PM executes CHECK\_BUSY\_STATUS, the result indicates that the operation is complete.

### 18.5.2.2 Reading

During boot, OSPM attempts to retrieve all serialized error records from the persistent store. If the *Error Log Address Range* does not reside in NVRAM, the following steps are executed by OSPM to retrieve all error records:

1. Executes the BEGIN\_READ\_OPERATION action to notify the platform that a record read operation is beginning.
2. Executes the SET\_RECORD\_OFFSET action to inform the platform at what offset in the *Error Log Address Range* the error record is to be transferred.
3. Executes the SET\_RECORD\_IDENTIFIER action to inform the platform which error record is to be read from its persistent store.
4. Executes the EXECUTE\_OPERATION action to instruct the platform to begin the read operation.
5. Busy waits by continually executing CHECK\_BUSY\_STATUS action until FALSE is returned.
6. Executes a GET\_COMMAND\_STATUS action to determine the status of the read operation.
  - a If the status is *Record Store Empty* (0x04), continue to step 7.
  - b If an error occurred reading a valid error record, the status will be *Failed* (0x03), continue to step 7.
  - c If the status is *Record Not Found* (0x05), indicating that the specified error record does not exist, OSPM retrieves a valid identifier by executing a GET\_RECORD\_IDENTIFIER action. The platform will return a valid record identifier.
  - d If the status is *Success*, OSPM transfers the retrieved record from the *Error Log Address Range* to a private buffer and then executes the GET\_RECORD\_IDENTIFIER action to determine the identifier of the next record in the persistent store.
7. Execute an END\_OPERATION to notify the platform that the record read operation is complete.

The steps performed by the platform to carry out a read request are as follows:

1. Sets some internal state to indicate that it is busy. OSPM polls by executing a CHECK\_BUSY\_STATUS action until the operation is completed.
2. Using the record identifier supplied by OSPM through the SET\_RECORD\_IDENTIFIER operation, determine which error record to read:
  - a If the identifier is 0x0 (unspecified), the platform reads the ‘first’ error record from its persistent store. First, in this is implementation specific.
  - b If the identifier is non-zero, the platform attempts to locate the specified error record on the persistent store.
  - c If the specified error record does not exist, set the status register’s
  - d *Status to Record Not Found* (0x05), and update the status register’s *Identifier* field with the identifier of the ‘first’ error record.
3. Transfer the record from the persistent store to the offset specified by OSPM from the base of the *Error Log Address Range*.
4. Record the *Identifier* of the ‘next’ valid error record that resides on the persistent store. This allows OSPM to retrieve a valid record identifier by executing a GET\_RECORD\_IDENTIFIER operation.

5. Record the status of the operation so OSPM can retrieve the status by executing a GET\_COMMAND\_STATUS action.
6. Clear internal busy state so when OSPM executes CHECK\_BUSY\_STATUS, the result indicates that the operation is complete.

Where the *Error Log Address Range* does reside in NVRAM, OSPM requires no platform support to read persisted error records. OSPM can scan the *Error Log Address Range* on its own and retrieve the error records it previously persisted.

### 18.5.2.3 Clearing

After OSPM has finished processing an error record, it will notify the platform by clearing the record. This allows the platform to delete the record from the persistent store or mark it such that the space is free and can be reused. The following steps are executed by OSPM to clear an error record:

1. Executes a BEGIN\_CLEAR\_OPERATION action to notify the platform that a record clear operation is beginning.
2. Executes a SET\_RECORD\_IDENTIFIER action to inform the platform which error record is to be cleared. This value must not be set to 0x0 (unspecified).
3. Executes an EXECUTE\_OPERATION action to instruct the platform to begin the clear operation.
4. Busy waits by continually executing CHECK\_BUSY\_STATUS action until FALSE is returned.
5. Executes a GET\_COMMAND\_STATUS action to determine the status of the clear operation.
6. Execute an END\_OPERATION to notify the platform that the record read operation is complete.

The platform carries out a clear request by performing the following steps:

1. Sets some internal state to indication that it is busy. OSPM polls by executing a CHECK\_BUSY\_STATUS action until the operation is completed.
2. Using the record identifier supplied by OSPM through the SET\_RECORD\_IDENTIFIER operation, determine which error record to clear. This value may not be 0x0 (unspecified).
3. Locate the specified error record on the persistent store.
4. Mark the record as free by updating the Attributes in its serialization header.
5. Update internal record count.
6. Clear internal busy state so when OS
7. PM executes CHECK\_BUSY\_STATUS, the result indicates that the operation is complete.

When the *Error Log Address Range* resides in NVRAM, the OS requires no platform support to Clear error records.

### 18.5.2.4 Usage

This section describes several possible ways the error record serialization mechanism might be implemented.

#### 18.5.2.4.1 Error Log Address Range Resides in NVRAM

If the *Error Log Address Range* resides in NVRAM, then when OSPM writes a record into the logging range, the record is automatically persistent and the busy bit can be cleared immediately. On a

subsequent boot, OSPM can read any persisted error records directly from the persistent store range. The size of the persistent store, in this case, is expected to be enough for several error records.

#### 18.5.2.4.2 Error Log Address Range Resides in (volatile) RAM

In this implementation, the *Error Log Address Range* describes an intermediate location for error records. To persist a record, OSPM copies the record into the *Error Log Address Range* and sets the *Execute*, at which time the platform runs necessary code (SMM code on non-UEFI based systems and UEFI runtime code on UEFI-enabled systems) to transfer the error record from main memory to some persistent store. To read a record, OSPM asks the platform to copy a record from the persistent store to a specified offset within the *Error Log Address Range*. The size of the *Error Log Address Range* is at least large enough for one error record.

#### 18.5.2.4.3 Error Log Address Range Resides on Service Processor

In this type of implementation, the *Error Log Address Range* is really MMIO. When OSPM writes an error record to the *Error Log Address Range*, it is really writing to memory on a service processor. When the OSPM sets the *Execute* control bit, the platform knows that the OSPM is done writing the record and can do something with it, like move it into a permanent location (i.e. hard disk) on the service processor. The size of the persistent store in this type of implementation is typically large enough for one error record.

#### 18.5.2.4.4 Error Log Address Range is Copied Across Network

In this type of implementation, the *Error Log Address Range* is an intermediate cache for error records. To persist an error record, OSPM copies the record into the *Error Log Address Range* and set the *Execute* control bit, and the platform runs code to transmit this error record over the wire. The size of the *Error Log Address Range* in this type of implementation is typically large enough for one error record.

## 18.6 Error Injection

This section outlines an ACPI table mechanism, called EINJ, which allows for a generic interface mechanism through which OSPM can inject hardware errors to the platform without requiring platform specific OSPM level software. The primary goal of this mechanism is to support testing of OSPM error handling stack by enabling the injection of hardware errors. Through this capability OSPM is able to implement a simple interface for diagnostic and validation of errors handling on the system.

### 18.6.1 Error Injection Table (EINJ)

The Error Injection Table provides a generic interface mechanism through which OSPM can inject hardware errors to the platform without requiring platform specific OSPM software. System firmware is responsible for building this table, which is made up of Injection Instruction entries. [Table 18-403](#) details the layout of the table.

**Table 18-403 Error Injection Table (EINJ)**

Field	Byte length	Byte offset	Description
<b>ACPI Standard Header</b>			
Header Signature	4	0	EINJ. Signature for the Error Record Injection Table.

Field	Byte length	Byte offset	Description
Length	4	4	Length, in bytes, of entire EINJ. Entire table must be contiguous.
Revision	1	8	1
Checksum	1	9	Entire table must sum to zero.
OEMID	6	10	OEM ID.
OEM Table ID	8	16	The manufacturer model ID.
OEM Revision	4	24	OEM revision of EINJ.
Creator ID	4	28	Vendor ID of the utility that created the table.
Creator Revision	4	32	Revision of the utility that created the table.
<b>Injection Header</b>			
Injection Header Size	4	36	Length in bytes of the Injection Interface header.
Injection Flags	1	40	Reserved. Must be zero
Reserved	3	41	Must be zero.
Injection Entry Count	4	44	The number of Instruction Entries in the Injection Action Table
<b>Injection Action Table</b>			
Injection Instruction Entries		48	A series of error injection instruction entries

[Table 18-404](#) identifies the supported error injection actions.

**Table 18-404 Error Injection Actions**

Value	Name	Description
0x0	BEGIN_INJECTION_OPERATION	Indicates to the platform that an error injection is beginning. This allows the platform to set its operational context.
0x1	GET_TRIGGER_ERROR_ACTION_TABLE	Returns a 64-bit physical memory pointer to the TRIGGER_ERROR action table.  The TRIGGER_ERROR action instructions when executed by software trigger the error that was injected by the immediately prior SET_ERROR_TYPE action.
0x2	SET_ERROR_TYPE	Type of error to Inject. Only one ERROR_TYPE can be injected at any given time. If there is request for multiple injections at the same time, then the platform will return an error condition.
0x3	GET_ERROR_TYPE	Returns the error injection capabilities of the platform.
0x4	END_OPERATION	Indicates to the platform that the current injection operation has ended. This allows the platform to clear its operational context.

Value	Name	Description
0x5	EXECUTE_OPERATION	Instructs the platform to carry out the current operation based on the current operational context.
0x6	CHECK_BUSY_STATUS	Returns the state of the current operation. Once an operation has been executed through the EXECUTE_OPERATION action, the platform is required to return an indication that the operation is busy until the operation is completed. This allows software to poll for completion by repeatedly executing the CHECK_BUSY_STATUS action until the platform indicates that the operation is complete by setting not busy. The lower most bit (bit0) of the returned value indicates the busy status by setting it to 1 and not busy status by setting it to 0.
0x7	GET_COMMAND_STATUS	Returns the status of the current operation. The platform is expected to maintain a status code for each operation. Bits [8:1] of the returned value indicate the command status. See <a href="#">Table 18-408</a> for a list of valid command status codes.
0x8	SET_ERROR_TYPE_WITH_ADDRESS	Type of error to Inject, and the address to inject. Only one Error type can be injected at any given time. If there is request for multiple injections at the same time, then the platform will return an error condition.  Both this Action and the SET_ERROR_TYPE action will be present as part of this EINJ action table. OSPM is free to choose either of these two actions to inject an error. The platform will give precedence to SET_ERROR_TYPE_WITH_ADDRESS. In other words, if a non-zero value is set using SET_ERROR_TYPE_WITH_ADDRESS, then any error type value set by SET_ERROR_TYPE will be ignored. If, on the other hand, if no error type is specified using SET_ERROR_TYPE_WITH_ADDRESS, then the platform will use SET_ERROR_TYPE to identify the error type to inject.  The RegisterRegion field (See <a href="#">Table 18-405</a> ) in SET_ERROR_TYPE_WITH_ADDRESS points to a data structure whose format is defined in <a href="#">Table 18-410</a> .  Note that calling set error type with address without specifying address has the same behavior as calling SET_ERROR_TYPE.
0x9	GET_EXECUTE_OPERATION_TIMINGS	Returns an encoded QWORD : [63:32] value in microseconds that the platform expects would be the maximum amount of time it will take to process and complete an EXECUTE_OPERATION. [31:0] value in microseconds that the platform expects would be the nominal amount of time it will take to process and complete an EXECUTE_OPERATION.
0xFF	TRIGGER_ERROR	This is not a true error injection action. In response to error injection, the platform returns a trigger error action table.  This table consists of a series of injection instruction entries where the injection action is set to TRIGGER_ERROR to distinguish such entries.

## 18.6.2 Injection Instruction Entries

An Injection action consists of a series of one or more Injection Instructions. An Injection Instruction represents a primitive operation on an abstracted hardware register, represented by the register region as defined in an Injection Instruction Entry.

An Injection Instruction Entry describes a region in an injection hardware register and the injection instruction to be performed on that region.

[Table 18-405](#) details the layout of an Injection Instruction Entry.

**Table 18-405** Injection Instruction Entry

Field	Byte length	Byte offset	Description
Injection Action	1	N+0	The injection action that this instruction is a part of. See <a href="#">Table 18-404</a> for supported injection actions.
Instruction	1	N+1	Identifies the instruction to execute. See <a href="#">Table 18-407</a> for a list of valid instructions.
Flags	1	N+2	Flags that qualify the instruction.
Reserved	1	N+3	Must be zero.
Register Region	12	N+4	Generic Address Structure as defined in <a href="#">Section 5.2.3.2</a> to describe the address and bit. Address_Space_ID must be 0 (System Memory) or 1 (System IO). This constraint is an attempt to ensure that the registers are accessible in the presence of hardware error conditions.
Value	8	N+16	This is the value field that is used by the instruction READ or WRITE_REGISTER_VALUE.
Mask	8	N+24	The bit mask required to obtain the bits corresponding to the injection instruction in a given bit range defined by the register region.

Register Region is described as a generic address structure. This structure describes the physical address of a register as well as the bit range that corresponds to a desired region of the register. The bit range is defined as the smallest set of consecutive bits that contains every bit in the register that is associated with the injection Instruction. If bits [6:5] and bits [3:2] all correspond to an Injection Instruction, the bit range for that instruction would be [6:2].

Because a bit range could contain bits that do not pertain to a particular injection Instruction (i.e. bit 4 in the example above), a bit mask is required to distinguish all the bits in the region that correspond to the instruction. The Mask field is defined to be this bit mask with a bit set to a '1' for each bit in the bit range (defined by the register region) corresponding to the Injection Instruction. Note that bit 0 of the bit mask corresponds to the lowest bit in the bit range. In the example used above, the mask would be 11011b or 0x1B.

**Table 18-406** Instruction Flags

Value	Name	Description

0x01	PRESERVE_REGISTER	For WRITE_REGISTER and WRITE_REGISTER_VALUE instructions, this flag indicates that bits within the register that are not being written must be preserved rather than destroyed. For READ_REGISTER instructions, this flag is ignored.
------	-------------------	--

### 18.6.3 Injection Instructions

[Table 18-407](#) lists the supported Injection Instructions for Injection Instruction Entries.

**Table 18-407 Injection Instructions**

Opcode	Instruction name	Description
0x00	READ_REGISTER	A READ_REGISTER instruction reads the value from the specified register region.
0x01	READ_REGISTER_VALUE	A READ_REGISTER_VALUE instruction reads the designated information from the specified Register Region and compares the results with the contents of the Value field. If the information read matches the contents of the Value field, TRUE is returned, else FALSE is returned.
0x02	WRITE_REGISTER	A WRITE_REGISTER instruction writes a value to the specified Register Region. The Value field is ignored.
0x03	WRITE_REGISTER_VALUE	A WRITE_REGISTER_VALUE instruction writes the contents of the Value field to the specified Register Region.
0x04	NOOP	No operation.

[Table 18-408](#) below defines the error injection status codes returned from GET\_COMMAND\_STATUS.

**Table 18-408 Command Status Definition**

Value	Description
0x0	Success
0x1	Unknown Failure
0x2	Invalid Access

[Table 18-409](#) below defines the error type codes returned from GET\_ERROR\_TYPE.

**Table 18-409 Error Type Definition**

Bit	Description
0	Processor Correctable
1	Processor Uncorrectable non-fatal
2	Processor Uncorrectable fatal
3	Memory Correctable
4	Memory Uncorrectable non-fatal

Bit	Description
5	Memory Uncorrectable fatal
6	PCI Express Correctable
7	PCI Express Uncorrectable non-fatal
8	PCI Express Uncorrectable fatal
9	Platform Correctable
10	Platform Uncorrectable non-fatal
11	Platform Uncorrectable fatal
12:30	RESERVED
31	Vendor Defined Error Type. If this bit is set, then the Error types and related data structures are defined by the Vendor, as shown in <a href="#">Table 18-411</a> .

**Table 18-410 SET\_ERROR\_TYPE\_WITH\_ADDRESS Data Structure**

Field	Byte Length	Byte Offset	Description
Error Type	4	0x0	Bit map of error types to inject. Refer <a href="#">Table 18-409</a> . This field is cleared by the platform once it is consumed.
Vendor Error Type Extension Structure Offset	4	4	Specifies the offset from the beginning of the table to the vendor error type extension structure. If no vendor error type extension is present, bit31 in error type must be clear and this field must be set to 0.
Flags	4	0x8	Bit [0] – Processor Identification Field Valid Bit [1] – Memory Address and Memory address Mask Field Valid Bit [2] – PCIe SBDF field valid Bit [31:3] – RESERVED  This field is cleared by the platform once it is consumed.
<b>Processor Error</b>			
Processor Identification	4	0x0C	Optional field: on non-ARM architectures, this is the physical APIC ID or the X2APIC ID of the processor which is a target for the injection; on ARM systems, this is the ACPI Processor UID value as used in the MADT.
<b>Memory Error</b>			

Field	Byte Length	Byte Offset	Description
Memory Address	8	0x10	Optional field which specifies the physical address of the memory which is the target for the injection. Valid if Bit [1] of the <i>Flags</i> field is set.
Memory Address Range	8	0x18	Optional field which provided a range mask for the address field. Valid if Bit [1] of the <i>Flags</i> field is set. If the OSPM doesn't want to provide a range of address, then this field should be zero.
PCIe SBDF	4	0x20	Byte 3 – PCIe Segment Byte 2 – Bus Number Byte 1 – Device Number [Bits 7:3], Function Number Bits [2:0] Byte 0 – RESERVED

**Table 18-411 Vendor Error Type Extension Structure**

Field	Byte Length	Byte Offset	Attribute	Description
Length	4	0x0	Set by software. RO for Platform	
SBDF	4	0x04	Set by Platform. RO for Software	This provides a PCIe Segment, Bus, Device and Function number which can be used to read the Vendor ID, Device ID and Rev ID, so that software can identify the system for error injection purposes.  The platform sets this field and is RO for Software
Vendor ID	2	0x08	Set by Platform. RO for Software	Vendor ID which identifies the device manufacturer. This is same as the PCI SIG defined Vendor ID  The platform sets this field and is RO for Software
Device ID	2	0x0A	Set by Platform. RO for Software	This 16-bit ID is assigned by the manufacturer that identifies this device.  The platform sets this field and is RO for Software
Rev ID	1	0x0C	Set by Platform. RO for Software	This 8-bit value is assigned by the manufacturer and identifies the revision number of the device.  The platform sets this field and is RO for Software
Reserved	3	0x0D	Set by Platform. RO for Software	Reserved

OEM Defined structure	N	0x10		The rest of the fields are defined by the OEM.
-----------------------	---	------	--	--

#### 18.6.4 Trigger Action Table

Error injection operation is a two-step process where the error is injected into the platform and subsequently triggered. After software injects an error into the platform using **SET\_ERROR\_TYPE** action, it needs to trigger the error. In order to trigger the error, the software invokes

**GET\_TRIGGER\_ERROR\_ACTION\_TABLE** action which returns a pointer to a Trigger Error Action table. The format of the table is as shown in [Table 18-412](#). Software executes the instruction entries specified in the Trigger Error Action Table in order to trigger the injected error.

**Table 18-412 Trigger Error Action**

TRIGGER_ERROR Header	Byte Length	Byte Offset	Description
Header Size	4	0	Length in bytes of this header.
Revision	4	4	
Table Size	4	8	Size in Bytes of the entire table.
Entry Count	4	12	The number of Instruction Entries in the TRIGGER_ERROR Action Sequence (See Note 1)
<b>Action Table</b>			
TRIGGER_ERROR Instruction Entries (See Note 2)		16	A series of error injection instruction entries as defined in <a href="#">Table 18-405</a> .

**Note:** If the “Entry Count” field above is ZERO, then there are no action structures in the TRIGGER\_ERROR action table. The platform may make this field ZERO in situations where there is no need for a TRIGGER\_ERROR action (for example, in cases where the error injection action seeds as well as consumes the error).

**Note:** The format of TRIGGER\_ERROR Instructions Entries is the same as Injection Instruction entries as described in [Table 18-407](#).

#### 18.6.5 Error Injection Operation

Before OSPM can use this mechanism to inject errors, it must discover the error injection capabilities of the platform by executing a GET\_ERROR\_TYPE. See [Table 18-409](#) for definition of error types.

After discovering the error injection capabilities, OSPM can inject and trigger an error according to the sequence described below.

Note that injecting an error into the platform does not automatically consume the error. In response to an error injection, the platform returns a trigger error action table. The software that injected the error must execute the actions in the trigger error action table in order to consume the error. If a specific error type is such that it is automatically consumed on injection, the platform will return a trigger error action table consisting of NO\_OP.

1. Executes a BEGIN\_INJECTION\_OPERATION action to notify the platform that an error injection operation is beginning.
2. Executes a GET\_ERROR\_TYPE action to determine the error injection capabilities of the system. This action returns a DWORD bit map of the error types supported by the platform. See [Table 18-409](#) for definition of error types.
3. If GET\_ERROR\_TYPE returns the DWORD with Bit [31] set, it means that vendor defined error types are present, apart from the standard error types defined in [Table 18-409](#).
4. OSPM chooses the type of error to inject.
  - a If the OSPM chooses to inject one of the supported standard error types, then it sets the corresponding bit in the “Error Type” field (see [Table 18-410](#)), by executing a SET\_ERROR\_TYPE\_WITH\_ADDRESS command. For example, if OSPM chooses to inject “Memory Correctable” error, then the OSPM executes SET\_ERROR\_TYPE\_WITH\_ADDRESS with an “Error Type” value of 0x0000\_0080.
  - Optionally, the OSPM can choose the target of the injection, such as a memory range, PCIe Segment/Device/Function or Processor APIC ID, depending on the type of error. The OSPM does this by filling in the appropriate fields of the “SET\_ERROR\_TYPE\_WITH\_ADDRESS Data structure”. See [Table 18-410](#) for details.
  - b If the OSPM chooses to inject one of the vendor defined error types, then it executes SET\_ERROR\_TYPE\_WITH\_ADDRESS with Bit[31] of “Error Type” field set.
  - OSPM gets of the location of the “Vendor Error Type Extension Structure”, by reading the “Vendor Error Type Extension Structure Offset” (see [Table 18-411](#)).
    - OSPM reads the Vendor ID, Device ID and Rev ID from the PCI config space whose path (PCIe Segment/Device/Function) is provided in the “SBDF” field of the Vendor Error Type Extension Structure.
    - If the Vendor ID/Device ID and Rev IDs match, then the OSPM can identify the platform it is running on and would know the Vendor error types that are supported by this platform
    - The OSPM writes the vendor error type to inject in the “OEM Defined Structure” field. (see [Table 18-411](#))
  - Optionally, the OSPM can choose the target of the injection, such as a memory range, PCIe Segment/Device/Function or Processor APIC ID, depending on the type of error. The OSPM does this by filling in the appropriate fields of the “SET\_ERROR\_TYPE\_WITH\_ADDRESS Data structure”. See [Table 18-410](#) for details
5. Executes an EXECUTE\_OPERATION action to instruct the platform to begin the injection operation.
6. Busy waits by continually executing CHECK\_BUSY\_STATUS action until the platform indicates that the operation is complete by clearing the abstracted *Busy* bit.
7. Executes a GET\_COMMAND\_STATUS action to determine the status of the read operation.
8. If the status indicates that the platform cannot inject errors, stop.
9. Executes a GET\_TRIGGER\_ERROR\_ACTION\_TABLE operation to get the physical pointer to the TRIGGER\_ERROR action table. This provides the flexibility in systems where injecting an error is a two (or more) step process.
10. Executes the actions specified in the TRIGGER\_ERROR action table.
11. Execute an END\_OPERATION to notify the platform that the error injection operation is complete.

# 19 ACPI Source Language (ASL) Reference

---

This section formally defines the ACPI Source Language (ASL). ASL is a source language for defining ACPI objects including writing ACPI control methods. OEMs and platform firmware developers define objects and write control methods in ASL and then use a translator tool (compiler) to generate ACPI Machine Language (AML) versions of the control methods. For a formal definition of AML, see the [ACPI Machine Language \(AML\) Specification](#) chapter.

AML and ASL are *different languages* though they are closely related.

Every ACPI-compatible OS must support AML. A given user can define some arbitrary source language (to replace ASL) and write a tool to translate it to AML.

An OEM or platform firmware vendor needs to write ASL and be able to single-step AML for debugging. (Debuggers and similar tools are expected to be AML-level tools, not source-level tools.) An ASL translator implementer must understand how to read ASL and generate AML. An AML interpreter author must understand how to execute AML.

This section has two parts:

- The ASL grammar, which is the formal ASL specification and also serves as a quick reference.
- A full ASL reference, which includes for each ASL operator: the operator invocation syntax, the type of each argument, and a description of the action and use of the operator.

## 19.1 ASL 2.0 Symbolic Operators and Expressions

For the math and logical operations, ASL supports standard symbolic operators and expressions that are similar to the C language. Compound assignment operators are also supported. The AML code that is generated from the symbolic operators and expressions is identical to the AML code generated for the equivalent legacy ASL operators.

The table below summarizes the ASL 2.0 support for symbolic operators.

### ASL 2.0 Syntax   Legacy ASL Equivalent

<i>// Math operators</i>	
<i>Z = X + Y</i>	Add (X, Y, Z)
<i>Z = X / Y</i>	Divide (X, Y, , Z)
<i>Z = X % Y</i>	Mod (X, Y, Z)
<i>Z = X * Y</i>	Multiply (X, Y, Z)
<i>Z = X - Y</i>	Subtract (X, Y, Z)
<i>Z = X &lt;&lt; Y</i>	ShiftLeft (X, Y, Z)
<i>Z = X &gt;&gt; Y</i>	ShiftRight (X, Y, Z)
<i>Z = X &amp; Y</i>	And (X, Y, Z)
<i>Z = X   Y</i>	Or (X, Y, Z)
<i>Z = X ^ Y</i>	Xor (X, Y, Z)
<i>Z = ~X</i>	Not (X, Z)

```

X++           Increment (X)
X--Decrement (X)

// Logical operators

(X == Y)      LEqual (X, Y)
(X != Y)      LNotEqual (X, Y)
(X < Y)       LLess (X, Y)
(X > Y)       LGreater (X, Y)
(X <= Y)      LLessEqual (X, Y)
(X >= Y)      LGreaterEqual (X, Y)
(X && Y)      LAnd (X, Y)
(X || Y)      LOr (X, Y)

!X            LNot (X)

// Assignment and Compound Assignment operations

X = Y         Store (Y, X)

X += Y        Add (X, Y, X)
X /= Y        Divide (X, Y, , X)
X %= Y        Mod (X, Y, X)
X *= Y        Multiply (X, Y, X)
X -= Y        Subtract (X, Y, X)

X <= Y        ShiftLeft (X, Y, X)
X >= Y        ShiftRight (X, Y, X)

X &= Y        And (X, Y, X)
X |= Y        Or (X, Y, X)
X ^= Y        Xor (X, Y, X)

// Miscellaneous

Z = X[Y]      Index (X, Y, Z)

```

## 19.2 ASL Language Grammar

The purpose of this section is to state unambiguously the grammar rules used by the syntax checker of an ASL compiler.

ASL statements declare objects. Each object has three parts, two of which might not be present.

```
Object ::= ObjectType FixedList VariableList
```

**FixedList** refers to a list, of known length, that supplies data that all instances of a given **ObjectType** must have. A fixed list is written as (**a**, **b**, **c**, ...) where the number of arguments depends on the specific **ObjectType**, and some elements can be nested objects, that is (**a**, **b**, (**q**, **r**, **s**, **t**), **d**). Arguments to a **FixedList** can have default values, in which case they can be skipped. Thus, (**a,,c**) will cause the default value for the second argument to be used. Some **ObjectTypes** can have a null **FixedList**, which is simply

omitted. Trailing arguments of some object types can be left out of a fixed list, in which case the default value is used.

**VariableList** refers to a list, not of predetermined length, of child objects that help define the parent. It is written as { **x, y, z, aa, bb, cc** } where any argument can be a nested object. **ObjectType** determines what terms are legal elements of the **VariableList**. Some **ObjectTypes** may have a null variable list, which is simply omitted.

Other rules for writing ASL statements are the following:

- Multiple blanks are the same as one. Blank, (, ), ‘’ and newline are all token separators.
- // marks the beginning of a comment, which continues from the // to the end of the line.
- /\* marks the beginning of a comment, which continues from the /\* to the next \*/.
- “” (quotes) surround an ASCII string.
- Numeric constants can be written in three ways: ordinary decimal, octal (using 0<sup>ddd</sup>) or hexadecimal, using the notation 0x<sup>dd</sup>.
- **Nothing** indicates an empty item. For example, { **Nothing** } is equivalent to {}.

### 19.2.1 ASL Grammar Notation

The notation used to express the ASL grammar is specified in the following table.

**Table 19-413 ASL Grammar Notation**

Notation Convention	Description	Example
Term := Term Term ...	The term to the left of := can be expanded into the sequence of terms on the right.	aterm := bterm cterm means that aterm can be expanded into the two-term sequence of bterm followed by cterm.
Angle brackets (< > )	Used to group items.	<a b>   <c d> means either a b or c d.
Arrow (=>)	Indicates required run-time reduction of an ASL argument to an AML data type. Means “reduces to” or “evaluates to” at run-time.	“TermArg => Integer” means that the argument must be an ASL <b>TermArg</b> that must resolve to an <b>Integer</b> data type when it is evaluated by an AML interpreter.
Bar symbol (   )	Separates alternatives.	aterm := bterm   <cterm dterm> means the following constructs are possible: <ul style="list-style-type: none"> <li>• bterm</li> <li>• cterm dterm</li> </ul> aterm := <bterm   cterm> dterm means the following constructs are possible: <ul style="list-style-type: none"> <li>• bterm dterm</li> <li>• cterm dterm</li> </ul>
Term Term Term	Terms separated from each other by spaces form an ordered list.	N/A

Notation Convention	Description	Example
Word in <b>bold</b>	Denotes the name of a term in the ASL grammar, representing any instance of such a term. ASL terms are not case-sensitive.	In the following ASL term definition: <b>ThermalZone</b> ( <i>ZoneName</i> ) {TermList} the item in bold is the name of the term.
Word in <i>italics</i>	Names of arguments to objects that are replaced for a given instance.	In the following ASL term definition: <b>ThermalZone</b> ( <i>ZoneName</i> ) {TermList} the italicized item is an argument. The item that is not bolded or italicized is defined elsewhere in the ASL grammar.
Single quotes (' )	Indicate constant characters.	'A'
0xdd	Refers to a byte value expressed as two hexadecimal digits.	0x21 means a value of hexadecimal 21, or decimal 37. Notice that a value expressed in hexadecimal must start with a leading zero (0).
Dash character ( - )	Indicates a range.	1-9 means a single digit in the range 1 to 9 inclusive.

## 19.2.2 ASL Name and Pathname Terms

// Name and path characters supported

```

LeadNameChar :=
  'A' -'Z' | 'a' -'z' | '_'
Di gitChar :=
  '0' -'9'
NameChar :=
  Di gitChar | LeadNameChar
RootChar :=
  '\'
ParentPrefixChar :=
  '^'
PathSeparatorChar :=
  '.'
CommaChar :=
  ','
Semi colonDelimiter :=
Nothing | ';'

// Names and paths

NameSeg :=
  <LeadNameChar> |
  <LeadNameChar NameChar> |
  <LeadNameChar NameChar NameChar> |
  <LeadNameChar NameChar NameChar NameChar>

```

```

NameString :=
    <RootChar NamePath> | <ParentPrefi xChar PrefixPath NamePath> | NonEmptyNamePath
NamePath :=
    Nothing | <NameSeg NamePathTail>
NamePathTail :=
    Nothing | <PathSeparatorChar NameSeg NamePathTail>
NonEmptyNamePath :=
    NameSeg | <NameSeg NamePathTail>
PrefixPath :=
    Nothing | <ParentPrefi xChar PrefixPath>

```

### 19.2.3 ASL Root and Secondary Terms

// Root Term

```

ASLCode :=
    DefineTimelineBlockList
DefineTimelineBlockList :=
    DefineTimelineBlockTerm | <DefineTimelineBlockTerm DefineTimelineBlockList>

```

// Major Terms

```

SuperName :=
    NameString | ArgTerm | LocalTerm | DebugTerm | Type60pcode | MethodInvocationTerm
Target :=
    Nothing | SuperName
TermArg :=
    Type20pcode | DataObject | ArgTerm | LocalTerm | NameString | SymbolicExpression
MethodInvocationTerm :=
    NameString( // NameString => Method
        ArgList
    ) => Nothing | DataRefObject

```

// List Terms

```

ArgList :=
    Nothing | <TermArg ArgListTail>
ArgListTail :=
    Nothing | <CommaChar TermArg ArgListTail>

ByteList :=
    Nothing | <ByteConstExpr ByteListTail>
ByteListTail :=
    Nothing | <CommaChar ByteConstExpr ByteListTail>

```

```

DWordList :=
    Nothing | <DWordConstExpr DWordListTail>
DWordListTail :=
    Nothing | <CommaChar DWordConstExpr DWordListTail>

```

```

ExtendedAccessAttributeTerm :=  

    ExtendedAccessAttributeKeyword ( AccessLength //ByteConst )  

)  

FieldUnitList :=  

    Nothing | <FieldUnit FieldUnitListTail>  

FieldUnitListTail :=  

    Nothing | <CommaChar FieldUnit FieldUnitListTail>  

FieldUnit :=  

    FieldUnitEntry | OffsetTerm | AccessAsTerm | ConnectionTerm  

FieldUnitEntry :=  

    <Nothing | NameSeg> CommaChar Integer  

PackageList :=  

    Nothing | <PackageElement PackageListTail>  

PackageListTail :=  

    Nothing | <CommaChar PackageElement PackageListTail>  

PackageElement :=  

    DataObject | NameString  

ParameterTypePackage :=  

    ObjectKeyword | {Nothing | ParameterTypePackageList}  

ParameterTypePackageList :=  

    ObjectKeyword | <ObjectKeyword CommaChar ParameterTypePackageList>  

ParameterTypesPackage :=  

    ObjectKeyword | {Nothing | ParameterTypesPackageList}  

ParameterTypesPackageList :=  

    ParameterTypePackage | <ParameterTypePackage CommaChar ParameterTypesPackageList>  

TermList :=  

    Nothing | <Term SemicolonDelimiter TermList>  

Term :=  

    Object | Type10opcode | Type20opcode | SymbolicExpression  

Object :=  

    CompilerDirective | NamedObject | NamespaceModifier  

// Conditional Execution List Terms  

CaseTermList :=  

    Nothing | CaseTerm | DefaultTerm DefaultTermList | CaseTerm CaseTermList  

DefaultTermList :=  

    Nothing | CaseTerm | CaseTerm DefaultTermList  

IfElseTerm :=  

    IfTerm ElseTerm

```

## 19.2.4 ASL Data and Constant Terms

*// Numeric Value Terms*

```

LeadDigitChar :=
    '1' - '9'
HexDigitChar :=
    DigitChar | 'A' - 'F' | 'a' - 'f'
OctalDigitChar :=
    '0' - '7'
NullChar :=
    0x00

// Data Terms

DataObject :=
    BufferData | PackageData | IntegerData | StringData
DataRefObject :=
    DataObject | ObjectReference | DDBHandle

ComputationalData :=
    BufferData | IntegerData | StringData
BufferData :=
    Type50opcode | BufferTerm
IntegerData :=
    Type30opcode | Integer | ConstTerm
PackageData :=
    PackageTerm
StringData :=
    Type40opcode | String

// Integer Terms

Integer :=
    DecimalConst | OctalConst | HexConst
DecimalConst :=
    LeadDigitChar | <DecimalConst DigitChar>
OctalConst :=
    '0' | <OctalConst OctalDigitChar>
HexConst :=
    <0x HexDigitChar> | <0X HexDigitChar> | <HexConst HexDigitChar>
ByteConst :=
    Integer => 0x00-0xFF
WordConst :=
    Integer => 0x0000-0xFFFF
DWordConst :=
    Integer => 0x00000000-0xFFFFFFFF
QWordConst :=
    Integer => 0x0000000000000000-0xFFFFFFFFFFFFFF

ByteConstExpr :=
    <Type30opcode | ConstExprTerm | Integer> => ByteConst
WordConstExpr :=
    <Type30opcode | ConstExprTerm | Integer> => WordConst

```

```

DWordConstExpr :=
    <Type30pcode | ConstExprTerm | Integer> => DWordConst
QWordConstExpr :=
    <Type30pcode | ConstExprTerm | Integer> => QWordConst

ConstTerm :=
    ConstExprTerm | Revision
ConstExprTerm :=
    Zero | One | Ones

// String Terms

String :=
    '''' Utf8CharList '''
Utf8CharList :=
    Nothing | <EscapeSequence Utf8CharList> | <Utf8Char Utf8CharList>
Utf8Char :=
    0x01-0x21 |
    0x23-0x5B |
    0x5D-0x7F |
    0xC2-0xDF 0x80-0xBF |
    0xE0 0xA0-0xBF 0x80-0xBF |
    0xE1-0xEC 0x80-0xBF 0x80-0xBF |
    0xED 0x80-0x9F 0x80-0xBF |
    0xEE-0xEF 0x80-0xBF 0x80-0xBF |
    0xF0 0x90-0xBF 0x80-0xBF 0x80-0xBF |
    0xF1-0xF3 0x80-0xBF 0x80-0xBF 0x80-0xBF

// Escape sequences

EscapeSequence :=
    SimpleEscapeSequence | OctalEscapeSequence | HexEscapeSequence
HexEscapeSequence :=
    \x HexDigitChar |
    \x HexDigitChar HexDigitChar
SimpleEscapeSequence :=
    \' | \" | \a | \b | \f | \n | \r | \t | \v | \\
OctalEscapeSequence :=
    \ OctalDigitChar |
    \ OctalDigitChar OctalDigitChar |
    \ OctalDigitChar OctalDigitChar OctalDigitChar

// Miscellaneous Data Type Terms

DDBHandle :=
    Integer
ObjectReference :=
    Integer
Boolean :=
    True | False

```

```

True :=  

  Ones  

False :=  

  Zero  

// Symbolic Operator terms
Operators :=  

  '+' | '-' | '*' | '/' | '%' | '&' | '|' | '^' | '~' | '<' | '>' | '!' | '='
CompoundOperators :=  

  "<<" | ">>" | "++" | "--" | "==" | "!=" | "<=" | ">=" | "&&" | "||" | "+=" | "-="
  | "*=" |
  "/=" | "%=" | "<==" | ">==" | "&=" | "|=" | "^="

```

## 19.2.5 ASL Opcode Terms

Compi leDirective :=  
 IncludeTerm | ExternalTerm

NamedObject :=  
 BankFieldTerm | CreateBitFieldTerm | CreateByteFieldTerm | CreateDWordFieldTerm |  
 CreateFieldTerm | CreateQWordFieldTerm | CreateWordFieldTerm | DataRegionTerm |  
 DeviceTerm | EventTerm | FieldTerm | FunctionTerm | IndexFieldTerm | MethodTerm |  
 MutexTerm | OpRegionTerm | PowerResTerm | ProcessorTerm | ThermalZoneTerm

NameSpaceModifier :=  
 AliasTerm | NameTerm | ScopeTerm

SymbolicExpressionTerm :=  
 ( TermArg ) |  
 AddSymbolicTerm | AndSymbolicTerm | DecSymbolicTerm | DivideSymbolicTerm |  
 IncSymbolicTerm |  
 LAndSymbolicTerm | LEqualSymbolicTerm | LGreaterEqualSymbolicTerm |  
 LGreaterSymbolicTerm |  
 LLessEqualSymbolicTerm | LLessSymbolicTerm | LNotEqualSymbolicTerm |  
 LNotSymbolicTerm |  
 LOrSymbolicTerm | ModSymbolicTerm | MultiplySymbolicTerm | NotSymbolicTerm |  
 OrSymbolicTerm | ShiftLeftSymbolicTerm | ShiftRightSymbolicTerm |  
 SubtractSymbolicTerm |  
 XorSymbolicTerm

SymbolicAssignmentTerm :=  
 StoreSymbolicTerm | AddCompoundTerm | AndCompoundTerm | DivideCompoundTerm |  
 ModCompoundTerm | MultiplyCompoundTerm | OrCompoundTerm | ShiftLeftCompoundTerm |  
 ShiftRightCompoundTerm | SubtractCompoundTerm | XorCompoundTerm

Type10opcode :=  
 BreakTerm | BreakPointTerm | ContinueTerm | FatalTerm | ForTerm | IfElseTerm |  
 LoadTerm |  
 NoOpTerm | NotifyTerm | ReleaseTerm | ResetTerm | ReturnTerm | SignalTerm |  
 SleepTerm | StalITerm | SwitchTerm | UnloadTerm | WhileTerm

A Type 1 opcode term does not return a value and can only be used stand alone on a line of ASL code. Since these opcodes do not return a value they cannot be used as a term in an expression.

```
Type2opcode :=  
    AcquireTerm | AddTerm | AndTerm | ConcatTerm | ConcatResTerm | CondRefOfTerm |  
    CopyObjectTerm | DecTerm | DerefOfTerm | DivideTerm | FindSetLeftBitTerm |  
    FindSetRightBitTerm | FprintfTerm | FromBCDTerm | IncTerm | IndexTerm | LandTerm |  
    LEqualTerm | LGreaterTerm | LGreaterEqualTerm | LLessTerm | LLessEqualTerm |  
    LNotTerm |  
    LNotEqualTerm | LoadTableTerm | LOrTerm | MatchTerm | MidTerm | ModTerm |  
    MultiplyTerm |  
    NAndTerm | NOrTerm | NotTerm | ObjectTerm | OrTerm | PrintfTerm | RefOfTerm |  
    ShiftLeftTerm | ShiftRightTerm | SizeOfTerm | StoreTerm | SubtractTerm | TimerTerm  
|  
    ToBCDTerm | ToBufferTerm | ToDecimalStringTerm | ToHexStringTerm | ToIntegerTerm |  
    ToStringTerm | WaitTerm | XorTerm | MethodInvocationTerm | SymbolicExpressionTerm  
|  
    SymbolicAssignmentTerm
```

A Type 2 opcode returns a value and can be used in an expression.

```
Type3opcode :=  
    AddTerm | AndTerm | DecTerm | DerefOfTerm | DivideTerm | EISADTerm |  
    FindSetLeftBitTerm | FindSetRightBitTerm | FromBCDTerm | IncTerm | LandTerm |  
    LEqualTerm | LGreaterTerm | LGreaterEqualTerm | LLessTerm | LLessEqualTerm |  
    LNotTerm |  
    LNotEqualTerm | LOrTerm | MatchTerm | ModTerm | MultiplyTerm | NAndTerm | NOrTerm  
|  
    NotTerm | OrTerm | ShiftLeftTerm | ShiftRightTerm | SubtractTerm | ToBCDTerm |  
    ToIntegerTerm | XorTerm | SymbolicExpressionTerm
```

The Type 3 opcodes are a subset of Type 2 opcodes that return an Integer value and can be used in an expression that evaluates to a constant. These opcodes may be evaluated at ASL compile-time. To ensure that these opcodes will evaluate to a constant, the following rules apply: The term cannot have a destination (target) operand, and must have either a Type30opcode, Type40opcode, Type50opcode, ConstExprTerm, Integer, BufferTerm, Package, or String for all arguments.

```
Type40opcode :=  
    ConcatTerm | DerefOfTerm | FprintfTerm | MidTerm | PrintfTerm |  
    ToDecimalStringTerm |  
    ToHexStringTerm | ToStringTerm
```

The Type 4 opcodes are a subset of Type 2 opcodes that return a String value and can be used in an expression that evaluates to a constant. These opcodes may be evaluated at ASL compile-time. To ensure that these opcodes will evaluate to a constant, the following rules apply: The term cannot have a destination (target) operand, and must have either a Type30opcode, Type40opcode, Type50opcode, ConstExprTerm, Integer, BufferTerm, Package, or String for all arguments.

```
Type50opcode :=
    ConcatTerm | ConcatResTerm | Deref0fTerm | MidTerm | ResourceTemplateTerm |
    ToBufferTerm | ToPLDTerm | ToUUIDTerm | UnicodeTerm
```

The Type 5 opcodes are a subset of Type 2 opcodes that return a Buffer value and can be used in an expression that evaluates to a constant. These opcodes may be evaluated at ASL compile-time. To ensure that these opcodes will evaluate to a constant, the following rules apply: The term cannot have a destination (target) operand, and must have either a Type30opcode, Type40opcode, Type50opcode, ConstExprTerm, Integer, BufferTerm, Package, or String for all arguments.

```
Type60opcode :=
    Ref0fTerm | Deref0fTerm | IndexTerm | IndexSymbolicTerm | UserTermObj
```

The Type 6 opcodes are a subset of Type 2 opcodes that return a Reference value and can be used in an expression. They cannot be evaluated at compile time. Type 6 also includes the UserTerm, which is a control method invocation.

## 19.2.6 ASL Primary (Terminal) Terms

```
AccessAsTerm :=
    AccessAs (
        AccessType,           //AccessTypeKeyword
        AccessAttribute       //Nothing | ByteConstExpr |
                               //AccessAttributeKeyword | ExtendedAccessAttributeTerm
    )
AcquireTerm :=
    Acquire (
        SyncObject,          //SuperName => Mutex
        TimeoutValue         //WordConstExpr
    ) => Boolean           //True means the operation timed out and the Mutex was not
                           //acquired
```

```
AddCompoundTerm :=
    Addend1-Result      //TermArg => Integer => Target
    +=                  //
    Addend2             //TermArg => Integer
    => Integer
```

```
AddSymbolicTerm :=
    Addend1              //TermArg => Integer
    +
    Addend2              //TermArg => Integer
    => Integer
```

```
AddTerm :=
    Add (
        Addend1,            //TermArg => Integer
        Addend2,            //TermArg => Integer
        Result              //Target
    ) => Integer
```

```

AliasTerm :=

  Alias (
    SourceObject,           // NameString
    AliasObject             // NameString
  )

AndCompoundTerm :=

  Source1-Result          // TermArg => Integer => Target
  &=
  Source2                 // TermArg => Integer
  => Integer

AndSymbolicTerm :=

  Source1                 // TermArg => Integer
  &
  Source2                 // TermArg => Integer
  => Integer

AndTerm :=

  And (
    Source1,               // TermArg => Integer
    Source2,               // TermArg => Integer
    Result                 // Target
  ) => Integer

ArgTerm :=

  Arg0 | Arg1 | Arg2 | Arg3 | Arg4 | Arg5 | Arg6

BankFieldTerm :=

  BankField (
    OperationName,          // NameString => OperationRegi on
    BankName,                // NameString => FieldUnit
    BankValue,               // TermArg => Integer
   AccessType,               // AccessTypeKeyword
    LockRule,                // LockRuleKeyword
    UpdateRule               // UpdateRuleKeyword
  ) {FieldUnitList}

BreakPointTerm :=

  BreakPoint

BreakTerm :=

  Break

BufferTerm :=

  Buffer (
    BuffSize                // Nothing | TermArg => Integer
  ) {StringData | ByteList} => Buffer

```

```

CaseTerm := 
  Case (
    Value          // DataObject
  ) {TermList}

ConcatResTerm := 
  ConcatenateResTemplate (
    Source1,        // TermArg => Buffer
    Source2,        // TermArg => Buffer
    Result         // Target
  ) => Buffer

ConcatTerm := 
  Concatenate (
    Source1,        // TermArg => SuperName
    Source2,        // TermArg => SuperName
    Result         // Target
  ) => Buffer | String

ConnectionTerm := 
  Connection (
    ConnectionResource // NameString | ResourceMacroTerm
  )

CondRef0fTerm := 
  CondRef0f (
    Source          // NameString | ArgTerm | LocalTerm | Deref0fTerm
    Destination     // Target
  ) => Boolean

ContinueTerm := 
  Continue

CopyObjectTerm := 
  CopyObject (
    Source,
    Result,        // TermArg => DataRefObject
    ) => DataRefObject

    // NameString | LocalTerm | ArgTerm

CreateBitFieldTerm := 
  CreateBitField (
    SourceBuffer,   // TermArg => Buffer
    BitIndex,       // TermArg => Integer
    BitFieldName    // NameString
  )

CreateByteFieldTerm := 
  CreateByteField (
    SourceBuffer,   // TermArg => Buffer
    ByteIndex,      // TermArg => Integer
  )

```

```

        ByteField dName      // NameString
    )

CreateDWordFieldTerm := CreateDWordField (
    SourceBuffer,           // TermArg => Buffer
    ByteIndex,             // TermArg => Integer
    DWordFieldName         // NameString
)

CreateFieldTerm := CreateField (
    SourceBuffer,           // TermArg => Buffer
    BitIndex,              // TermArg => Integer
    NumBits,               // TermArg => Integer
    FieldName              // NameString
)

CreateQWordFieldTerm := CreateQWordField (
    SourceBuffer,           // TermArg => Buffer
    ByteIndex,              // TermArg => Integer
    QWordFieldName         // NameString
)

CreateWordFieldTerm := CreateWordField (
    SourceBuffer,           // TermArg => Buffer
    ByteIndex,              // TermArg => Integer
    WordFieldName          // NameString
)

DataRegionTerm := DataTableRegion (
    RegionName,            // NameString
    SignatureString,       // TermArg => String
    OemIDString,          // TermArg => String
    OemTableIDString       // TermArg => String
)

DebugTerm := Debug

DecSymbolicTerm := Mnuend           // SuperName => Integer
--=> Integer

DecTerm := Decrement (

```

```

        Mi nuend           // SuperName
    ) => Integer

DefaultTerm := Default {TermList}

DefinitionBlockTerm :=
    DefinitionBlock (
        AMLFileName,          // String
        TableSignature,       // String
        ComplianceRevision, // ByteConst
        OEMID,               // String
        TableID,              // String
        OEMRevision         // DWordConst
    ) {TermList}

DerefOfTerm :=
    DerefOf (
        Source      // NameString | ArgTerm | LocalTerm | RefOfTerm | CondRefOfTerm
        // IndexTerm | MethodInvocationTerm
    ) => DataRefObject

DeviceTerm :=
    Device (
        DeviceName        // NameString
    ) {TermList}

DeviceCompoundTerm :=
    Dividend-Result     // TermArg => Integer => Target
    /=
    Divisor            // TermArg => Integer
    => Integer

DeviceSymbolicTerm :=
    Dividend           // TermArg => Integer
    /
    Divisor            // TermArg => Integer
    => Integer

DeviceTerm :=
    Device (
        Dividend,        // TermArg => Integer
        Divisor,         // TermArg => Integer
        Remainder,       // Target
        Result           // Target
    ) => Integer           // Returns Result

EISALDTerm :=
    EISALD (
        EisalddString   // StringData
    ) => DWordConst

```

```

El sel fTerm :=
  El sel f (
    Predicate // TermArg => Integer
  ) {TermList} El seTerm

El seTerm :=
  El se {TermList} | El sel fTerm | Nothing

EventTerm :=
  Event (
    EventName // NameString
  )

External Term :=
  External (
    ObjName, // NameString
    ObjType, // Nothing | Obj ectTypeKeyword
    ResultType, // Nothing | ParameterTypePackage
    ParameterTypes // Nothing | ParameterTypesPackage
  )

Fatal Term :=
  Fatal (
    Type, // ByteConstExpr
    Code, // DWordConstExpr
    Arg // TermArg => Integer
  )

FieldTerm :=
  Field (
    Regi onName, // NameString => OperationRegi on
    AccessType, // AccessTypeKeyword
    LockRule, // LockRule Keyword
    UpdateRule // UpdateRule Keyword
  ) {FieldUnitList}

FindSetLeftBi tTerm :=
  FindSetLeftBi t (
    Source, // TermArg => Integer
    Resul t // Target
  ) => Integer

FindSetRi ghtBi tTerm :=
  FindSetRi ghtBi t (
    Source, // TermArg => Integer
    Resul t // Target
  ) => Integer

ForTerm :=
  For (

```

```

Initialise, // Nothing | TermArg => ComputationalData
Predicate, // Nothing | TermArg => ComputationalData
Update // Nothing | TermArg => ComputationalData
) {TermList}

FprintfTerm :=
Fprintf (
    TermArg,
    String,
    PrintfArgList
) => String

FromBCDTerm :=
FromBCD (
    BCDValue,
    Result
) => Integer
// TermArg => Integer
// Target

FunctionTerm :=
Function (
    FunctionName,
    ReturnType,
    ParameterTypes
) {TermList}
// NameString
// Nothing | ParameterTypePackage
// Nothing | ParameterTypesPackage

IfTerm :=
If (
    Predicate
) {TermList}
// TermArg => Integer

IncludeTerm :=
Include (
    FilePathName
)
// StringData

IncSymbolicTerm :=
Addend
++
=> Integer
// SuperName => Integer

IncTerm :=
Increment (
    Addend
) => Integer
// SuperName

IndexFieldTerm :=
IndexField (
    IndexName,
    DataName,
    AccessType,
    LockRule,
)
// NameString => FieldUnit
// NameString => FieldUnit
// AccessTypeKeyword
// LockRuleKeyword

```

```

UpdateRule                                // UpdateRuleKeyword
) {File dUnitList}

IndexSymbolicTerm := 
  Source                                         // TermArg => <String | Buffer | PackageTerm>
  [ Index ]                                     // TermArg => Integer
  => ObjectReference

IndexTerm := 
  Index (                                         // Target
    Source,                                       // TermArg => <String | Buffer | PackageTerm>
    Index,                                         // TermArg => Integer
    Destination                                    // TermArg => <String | Buffer | PackageTerm>
  ) => ObjectReference

LAndSymbolicTerm := 
  Source1                                         // TermArg => Integer
  &&
  Source2                                         // TermArg => Integer
  => Boolean

LAndTerm := 
  LAnd (                                         // TermArg => Integer
    Source1,                                       // TermArg => Integer
    Source2
  ) => Boolean

LEqualSymbolicTerm := 
  Source1                                         // TermArg => Computational Data
  ==
  Source2                                         // TermArg => Computational Data
  => Boolean

LEqualTerm := 
  LEqual (                                         // TermArg => Computational Data
    Source1,                                       // TermArg => Computational Data
    Source2
  ) => Boolean

LGreaterEqualSymbolicTerm := 
  Source1                                         // TermArg => Computational Data
  >=
  Source2                                         // TermArg => Computational Data
  => Boolean

LGreaterEqualTerm := 
  LGreaterEqual (                                 // TermArg => Computational Data
    Source1,                                       // TermArg => Computational Data
    Source2
  ) => Boolean

```

```

LGreaterSymbol i cTerm :=

  Source1                                // TermArg => Computational Data
  >
  Source2                                // TermArg => Computational Data
  => Boolean

LGreaterTerm :=

  LGreater (
    Source1,                                // TermArg => Computational Data
    Source2                                // TermArg => Computational Data
  ) => Boolean

LLessEqualSymbol i cTerm :=

  Source1                                // TermArg => Computational Data
  <=
  Source2                                // TermArg => Computational Data
  => Boolean

LLessEqualTerm :=

  LLessEqual (
    Source1,                                // TermArg => Computational Data
    Source2                                // TermArg => Computational Data
  ) => Boolean

LLessSymbol i cTerm :=

  Source1                                // TermArg => Computational Data
  <
  Source2                                // TermArg => Computational Data
  => Boolean

LLessTerm :=

  LLess (
    Source1,                                // TermArg => Computational Data
    Source2                                // TermArg => Computational Data
  ) => Boolean

LNotEqualTerm :=

  LNotEqual (
    Source1,                                // TermArg => Computational Data
    Source2                                // TermArg => Computational Data
  ) => Boolean

LNotEqualSymbol i cTerm :=

  Source1                                // TermArg => Computational Data
  !=
  Source2                                // TermArg => Computational Data
  => Boolean

LNotSymbol i cTerm :=

  !                                     // TermArg => Integer
  Source

```

```

=> Bool ean

LNotTerm :=
  LNot (
    Source,                                // TermArg => Integer
  ) => Bool ean

LOrSymbolicTerm :=
  Source1                                 // TermArg => Integer
  ||
  Source2                                 // TermArg => Integer
=> Bool ean

LoadTableTerm :=
  LoadTable (
    SignatureString,          // TermArg => String
    OemIDString,              // TermArg => String
    OemTableIDString,         // TermArg => String
    RootPathString,           // Nothing | TermArg => String
    ParameterPathString,      // Nothing | TermArg => String
    ParameterData,             // Nothing | TermArg => DataRefObject
  ) => DDBHandle

LoadTerm :=
  Load (
    Object,                               // NameString
    DDBHandle                            // SuperName
  )

LocalTerm :=
  Local 0 | Local 1 | Local 2 | Local 3 | Local 4 | Local 5 | Local 6 | Local 7

LOrTerm :=
  LOr (
    Source1,                                // TermArg => Integer
    Source2                                // TermArg => Integer
  ) => Bool ean

MatchTerm :=
  Match (
    SearchPackage,                         // TermArg => Package
    Op1,                                    // MatchOpKeyword
    MatchObject1,                          // TermArg => ComputationalData
    Op2,                                    // MatchOpKeyword
    MatchObject2,                          // TermArg => ComputationalData
    StartIndex,                            // TermArg => Integer
  ) => <Ones | Integer>

MethodTerm :=
  Method (
    MethodName,                            // NameString
  )

```

```

NumArgs,                                // Nothing | ByteConstExpr
SerializeRule,                         // Nothing | SerialRuleKeyword
SyncLevel,                             // Nothing | ByteConstExpr
ReturnType,                            // Nothing | ParameterTypePackage
ParameterTypes                          // Nothing | ParameterTypesPackage
) {TermList}

Mi dTerm := 
Mi d (
Source,                               // TermArg => <Buffer | String>
Index,                                // TermArg => Integer
Length,                               // TermArg => Integer
Result                                 // Target
) => <Buffer | String>

ModCompoundTerm := 
Dividend-Result                      // TermArg => Integer => Target
%=
Divisor                                // TermArg => Integer
=> Integer

ModSymbolicTerm := 
Dividend                                // TermArg => Integer
%
Divisor                                // TermArg => Integer
=> Integer

ModTerm := 
Mod (
Dividend,                            // TermArg => Integer
Divisor,                             // TermArg => Integer
Result                                 // Target
) => Integer                                // Returns Result

Multipli yCompoundTerm := 
Multiplicand-Result                   // TermArg => Integer => Target
*=
Multiplier                            // TermArg => Integer
=> Integer

Multipli ySymbolicTerm := 
Multiplicand                          // TermArg => Integer
*
Multiplier                            // TermArg => Integer
=> Integer

Multipli yTerm := 
Multipli (
Multiplicand,                      // TermArg => Integer
Multiplier,                         // TermArg => Integer

```

```

    Result          // Target
  ) => Integer

MutexTerm := 
  Mutex (
    MutexName,      // NameString
    SyncLevel       // ByteConstExpr
  )

NameTerm := 
  Name (
    ObjectName,    // NameString
    Object          // DataObject
  )

NAndTerm := 
  NAnd (
    Source1,        // TermArg => Integer
    Source2,        // TermArg => Integer
    Result          // Target
  ) => Integer

NoOpTerm := 
  NoOp

NorTerm := 
  Nor (
    Source1,        // TermArg => Integer
    Source2,        // TermArg => Integer
    Result          // Target
  ) => Integer

NotifyTerm := 
  Notify (
    Object,         // SuperName => <Thermal Zone | Processor | Device>
    NotificationValue // TermArg => Integer
  )

NotSymbolicTerm := 
  ~
  Source          // TermArg => Integer
=> Integer

NotTerm := 
  Not (
    Source,         // TermArg => Integer
    Result          // Target
  ) => Integer

```

```

ObjectTypeTerm :=
  ObjectType (
    Object
  ) => Integer
                                // NameString | ArgTerm | LocalTerm | DebugTerm |
                                // RefOfTerm | DerefOfTerm | IndexTerm

OffsetTerm :=
  Offset (
    ByteOffset
  )                                // IntegerData

OpRegionTerm :=
  OperationRegion (
    RegionName,
    RegionSpace,
    Offset,
    Length
  )
                                // NameString
                                // RegionSpaceKeyword
                                // TermArg => Integer
                                // TermArg => Integer

OrCompoundTerm :=
  Source1-Result
  |=
  Source2
  => Integer
                                // TermArg => Integer => Target
                                // TermArg => Integer

OrSymbolicTerm :=
  Source1
  |
  Source2
  => Integer
                                // TermArg => Integer
                                // TermArg => Integer

OrTerm :=
  Or (
    Source1,
    Source2,
    Result
  ) => Integer
                                // TermArg => Integer
                                // TermArg => Integer
                                // Target

PackageTerm :=
  Package (
    NumElements
  ) {PackageList} => Package
                                // Nothing | ByteConstExpr | TermArg => Integer

PLDKeyword :=
  PLD_Revision | PLD_IgnoreColor | PLD_Red | PLD_Green | PLD_Blue |
  PLD_Width | PLD_Height | PLD_UserVisible | PLD_Dock | PLD_Lid | PLD_Panel |
  PLD_VerticalPosition | PLD_HorizontalPosition | PLD_Shape |
  PLD_GroupOrientation | PLD_GroupToken | PLD_GroupPosition | PLD_Bay
  PLD_Ejectable | PLD_EjectRequired | PLD_CabinetNumber

```

```

PLDKeywordList :=
    PLDKeyword = StringData | PLDKeyword = IntegerData |
    PLDKeyword = StringData, PLDKeywordList, PLDKeyword = IntegerData, PLDKeywordList

PowerResTerm :=
    PowerResource (
        ResourceName,                                // NameString
        SystemLevel,                                 // ByteConstExpr
        ResourceOrder                                // WordConstExpr
    ) {TermList}

PrintfArgList :=
    TermArg | TermArg , PrintfArgList

PrintfTerm :=
    Printf (
        String,
        PrintfArgList
    ) => String

ProcessorTerm :=
    Processor (
        ProcessorName,                            // NameString
        ProcessorID,                             // ByteConstExpr
        PBlockAddress,                           // DWordConstExpr | Nothing (=0)
        PBlockLength,                           // ByteConstExpr | Nothing (=0)
    ) {TermList}

RawDataBufferTerm :=
    RawDataBuffer (
        BuffSize,                                // Nothing | WordConst
    ) {ByteList} => RawDataBuffer

RefOfTerm :=
    RefOf (
        Source,                                  // NameString | ArgTerm | LocalTerm | DerefOfTerm
    ) => ObjectReference

ReleaseTerm :=
    Release (
        SyncObject,                             // SuperName
    )

ResetTerm :=
    Reset (
        SyncObject,                             // SuperName
    )

ReturnTerm :=
    Return (

```

```

        Arg                                // Nothing | TermArg => DataRefObject
    )

ScopeTerm :=
  Scope (
    Location                         // NameString
  ) {TermList}

ShiftLeftCompoundTerm :=
  Source-Result                      // TermArg => Integer => Target
  <<=
  ShiftCount                        // TermArg => Integer
  => Integer

ShiftLeftSymbolicTerm :=
  Source                             // TermArg => Integer
  <<
  ShiftCount                        // TermArg => Integer
  => Integer

ShiftLeftTerm :=
  ShiftLeft (
    Source,                           // TermArg => Integer
    ShiftCount,                      // TermArg => Integer
    Result                           // Target
  ) => Integer

ShiftRightCompoundTerm :=
  Source-Result                      // TermArg => Integer => Target
  >>=
  ShiftCount                        // TermArg => Integer
  => Integer

ShiftRightSymbolicTerm :=
  Source                            // TermArg => Integer
  >>
  ShiftCount                        // TermArg => Integer
  => Integer

ShiftRightTerm :=
  ShiftRight (
    Source,                           // TermArg => Integer
    ShiftCount,                      // TermArg => Integer
    Result                           // Target
  ) => Integer

SignalTerm :=
  Signal (
    SyncObject                      // SuperName
  )

```

```

SizeOfTerm :=  

  SizeOf ( // SuperName => <String | Buffer | Package>  

    DataObject  

  ) => Integer

SleepTerm :=  

  Sleep ( // TermArg => Integer  

    MilliSeconds  

  )

StallTerm :=  

  Stall ( // TermArg => Integer  

    MicroSeconds  

  )

StoreSymbolicTerm :=  

  Destination // SuperName  

  =  

  Source // TermArg => DataRefObject  

  => DataRefObject

StoreTerm :=  

  Store ( // TermArg => DataRefObject  

    Source, // SuperName  

    Destination  

  ) => DataRefObject

SubtractCompoundTerm :=  

  Minuend-Result // TermArg => Integer => Target  

  -=  

  Subtrahend // TermArg => Integer  

  => Integer

SubtractSymbolicTerm :=  

  Minuend // TermArg => Integer  

  -  

  Subtrahend // TermArg => Integer  

  => Integer

SubtractTerm :=  

  Subtract ( // TermArg => Integer  

    Minuend, // TermArg => Integer  

    Subtrahend, // Target  

    Result  

  ) => Integer

SwitchTerm :=  

  Switch ( // TermArg => Computational Data  

    Predicate  

  ) {CaseTermList}

```

```

ThermalZoneTerm :=  

  ThermalZone (ThermalZoneName) {TermList} // NameString

TimerTerm :=  

  Timer => Integer

ToBCDTerm :=  

  ToBCD (Value, Result) => Integer // TermArg => Integer  

                                         // Target

ToBufferTerm :=  

  ToBuffer (Data, Result) => ComputationalData // TermArg => Computational Data  

                                         // Target

ToDecimalStringTerm :=  

  ToDecimalString (Data, Result) => String // TermArg => Computational Data  

                                         // Target

ToHexStringTerm :=  

  ToHexString (Data, Result) => String // TermArg => Computational Data  

                                         // Target

ToIntegerTerm :=  

  ToInteger (Data, Result) => Integer // TermArg => Computational Data  

                                         // Target

ToPLDTerm :=  

  ToPLD (PLDKeywordList) => Buffer

ToStringTerm :=  

  ToString (Source, Length, Result) => String // TermArg => Buffer  

                                         // Nothing | TermArg => Integer  

                                         // Target

```

```

ToUUIDTerm :=  

  ToUUID (  

    String  

  ) => Buffer  

  // StringData

UnicodeTerm :=  

  Unicode (  

    String  

  ) => Buffer  

  // StringData

UnloadTerm :=  

  Unload (  

    DDBHandle  

  )  

  // SuperName

WaitTerm :=  

  Wait (  

    SyncObject,  

    TimeoutValue  

  ) => Boolean  

  // SuperName => Event  

  // TermArg => Integer  

  // True means timed-out

WhileTerm :=  

  While (  

    Predicate  

) {TermList}  

  // TermArg => Integer

XorCompoundTerm :=  

  Source1-Result  

^=  

  Source2  

=> Integer  

  // TermArg => Integer => Target

XorSymbolicTerm :=  

  Source1  

^  

  Source2  

=> Integer  

  // TermArg => Integer

XorTerm :=  

  Xor (  

    Source1,  

    Source2,  

    Result  

  ) => Integer  

  // TermArg => Integer  

  // TermArg => Integer  

  // Target

```

## 19.2.7 ASL Parameter Keyword Terms

**AccessAttri bKeyword** :=  
     AttribQuick | AttribSendReceive | AttribByte | AttribBytes (n) | AttribRawBytes  
     (n) |  
     AttribRawProcessBytes (n) | AttribWord | AttribBlock | AttribProcessCall |  
     AttribBlockProcessCall // *Note: Used for SMBus and Generic Serial Bus BufferAcc only*

**AccessTypeKeyword** :=  
     AnyAcc | ByteAcc | WordAcc | DWordAcc | QWordAcc | BufferAcc

**AddressKeyword** :=  
     AddressRangeMemory | AddressRangeReserved | AddressRangeNVS | AddressRangeACPI

**AddressSpaceKeyword** :=  
     RegionSpaceKeyword | FixedHW

**AddressingModeKeyword** :=  
     AddressingMode7Bit | AddressingMode10Bit

**ByteLengthKeyword** :=  
     DataBitsFive | DataBitsSix | DataBitsSeven | DataBitsEight | DataBitsNine

**BusMasterKeyword** :=  
     BusMaster | NotBusMaster

**ClockPhaseKeyword** :=  
     ClockPhaseFirst | ClockPhaseSecond

**ClockPolarityKeyword** :=  
     ClockPolarityLow | ClockPolarityHigh

**DecodeKeyword** :=  
     SubDecode | PosDecode

**EndianKeyword** :=  
     BigEndi aning | LittleEndi an

**ExtendedAccessAttribKeyword** :=  
     AttribBytes | AttribRawBytes | AttribRawProcessBytes  
     // *Note: Used for Generic Serial Bus BufferAcc only.*

**FlowControl Keyword** :=  
     FlowControlNone | FlowControlXon | FlowControlHardware

**InterruptTypeKeyword** :=  
     Edge | Level

**InterruptLevel** :=  
     ActiveHigh | ActiveLow

**InterruptLevel Keyword** :=  
     ActiveHigh | ActiveLow | ActiveBoth

**I0DecodeKeyword** :=  
     Decode16 | Decode10

**IoRestrictionKeyword** :=  
     IoRestrictionNone | IoRestrictionInputOnly | IoRestrictionOutputOnly |  
     IoRestrictionNoneAndPreserve

**LockRuleKeyword** :=  
     Lock | NoLock

**MatchOpKeyword** :=  
     MTR | MEQ | MLE | MLT | MGE | MGT

**MaxKeyword** :=  
     MaxFixed | MaxNotFixed

**MemTypeKeyword** :=  
     Cacheable | WriteCombining | Prefetchable | NonCacheable

```

Mi nKeyword := Mi nFi xed | Mi nNotFi xed
Obj ectTypeKeyword := UnknownObj | IntObj | StrObj | BuffObj | PkgObj | Fi el dUni tObj | Devi ceObj |
EventObj | MethodObj | MutexObj | OpRegi onObj | PowerResObj | ProcessorObj |
Thermal ZoneObj | BuffFi el dObj | DDBHandl eObj
Pari tyKeyword := Pari tyTypeNone | Pari tyTypeSpace | Pari tyTypeMark | Pari tyTypeOdd | Pari tyTypeEven
Pi nConfi gKeyword := Pul l Default | Pul l Up | Pul l Down | Pul l None
Pol ari tyKeyword := Pol ari tyHigh | Pol ari tyLow
RangeTypeKeyword := ISAOnI yRanges | NonISAOnI yRanges | Enti reRange
ReadWri teKeyword := ReadWri te | Read0nI y
Regi onSpaceKeyword := SystemI0 | SystemMemory | PCI_Config | EmbeddedControl | SMBus | SystemCMOS |
Pci BarTarget | IPMI | General PurposeI0 | GenericSerial Bus | PCC
ResourceTypeKeyword := ResourceConsumer | ResourceProducer
Seri al i zeRul eKeyword := Seri al i zed | NotSeri al i zed
ShareTypeKeyword := Shared | Excl usi ve | SharedAndWake | Excl usi veAndWake
Sl aveModeKeyword := Control lerInitiated | Devi cel Initiated
StopBi tsKeyword := StopBi tsZero | StopBi tsOne | StopBi tsOnePlusHalf | StopBi tsTwo
TransferWi dthKeyword := Wi dth8Bit | Wi dth16Bit | Wi dth32Bit | Wi dth64Bit | Wi dth128Bit | Wi dth256Bit
Transl ationKeyword := SparseTransl ation | DenseTransl ation
TypeKeyword := TypeTransl ation | TypeStatic
UpdateRul eKeyword := Preserve | Wri teAs0nes | Wri teAsZeros
UserDefRegi onSpace := IntegerData => 0x80 - 0xFF
XferTypeKeyword := Transfer8 | Transfer16 | Transfer8_16
Wi reModeKeyword := ThreeWi reMode | FourWi reMode

```

## 19.2.8 ASL Resource Template Terms

```

ResourceMacroList :=  

    Nothing | <ResourceMacroTerm ResourceMacroList>

ResourceMacroTerm := DMATerm | DWordIOTerm | DWordMemoryTerm | DWordSpaceTerm |  

EndDependentFnTerm | ExtendedIOTerm | ExtendedMemoryTerm | ExtendedSpaceTerm |  

FixedDMATerm | FixedIOTerm | GpioIntTerm | GpioIOTerm | I2CSerialBusTerm |  

InterruptTerm | IOTerm | IRQNoFlagsTerm | IRQTerm | Memory24Term | Memory32FixedTerm |  

Memory32Term | PinConfigTerm | PinFunctionTerm | PinGroupTerm | PinGroupConfigTerm |  

PinGroupFunctionTerm | QWordIOTerm | QWordMemoryTerm | QWordSpaceTerm | RegisterTerm |  

SPISerialBusTerm | StartDependentFnTerm | StartDependentFnNoPriorityTerm |  

UARTSerialBusTerm | VendorLongTerm | VendorShortTerm | WordBusNumberTerm | WordIOTerm  

| WordSpaceTerm

DMATerm :=  

    DMA (  

        DMAType,  

        BusMaster,  

        XferType,  

        DescriptorName  

    ) {ByteList}                                // DMATypeKeyword (_TYP)  

                                                // BusMasterKeyword (_BM)  

                                                // XferTypeKeyword (_SIZ)  

                                                // Nothing | NameString  

                                                // List of channels (0-7 bytes)

DWordIOTerm :=  

    DWordIO (  

        ResourceUsage,  

        ResourceTypeKeyword  

        MiType,  

        MaxType,  

        Decode,  

        RangeType,  

        _RNG  

        AddressGranularity,  

        MinAddress,  

        MaxAddress,  

        AddressTranslation,  

        AddressLength,  

        ResourceSourceIndex,  

        ResourceSource,  

        DescriptorName,  

        TranslationType,  

        TranslationDensity  

    )                                         // Nothing (ResourceConsumer) |  

                                                // Nothing (MinNotFixed) | MinKeyword (_MIF)  

                                                // Nothing (MaxNotFixed) | MaxKeyword (_MAF)  

                                                // Nothing (PosDecode) | DecodeKeyword (_DEC)  

                                                // Nothing (EntireRange) | RangeTypeKeyword  

                                                // DWordConstExpr (_GRA)  

                                                // DWordConstExpr (_MIN)  

                                                // DWordConstExpr (_MAX)  

                                                // DWordConstExpr (_TRA)  

                                                // DWordConstExpr (_LEN)  

                                                // Nothing | ByteConstExpr  

                                                // Nothing | StringData  

                                                // Nothing | NameString  

                                                // Nothing | TypeKeyword (_TP)  

                                                // Nothing | TranslationKeyword (_TRS)

DWordMemoryTerm :=  

    DWordMemory (  

        ResourceUsage,  

        ResourceTypeKeyword  

        Decode,  

        MiType,  

        MaxType,  

        _RNG  

    )                                         // Nothing (ResourceConsumer) |  

                                                // Nothing (PosDecode) | DecodeKeyword (_DEC)  

                                                // Nothing (MinNotFixed) | MinKeyword (_MIF)  

                                                // Nothing (MaxNotFixed) | MaxKeyword (_MAF)

```

```

MemType,                                // Nothing (NonCacheable) | MemTypeKeyword
(_MEM)
ReadWriteType,                         // ReadWriteKeyword (_RW)
AddressGranularity,                   // DWordConstExpr (_GRA)
MinAddress,                           // DWordConstExpr (_MIN)
MaxAddress,                           // DWordConstExpr (_MAX)
AddressTranslation,                  // DWordConstExpr (_TRA)
AddressLength,                        // DWordConstExpr (_LEN)
ResourceSourceIndex,                 // Nothing | ByteConstExpr
ResourceSource,                       // Nothing | StringData
DescriptorName,                      // Nothing | NameString
MemoryRangeType,                     // Nothing | AddressKeyword (_MTP)
TranslationType                      // Nothing | TypeKeyword (_TP)
)

DWordSpaceTerm := 
  DWordSpace (
    ResourceType,                      // ByteConstExpr (_RT), 0xC0 – 0xFF
    ResourceUsage,                    // Nothing (ResourceConsumer) |
  ResourceTypeKeyword
    Decode,                           // Nothing (PosDecode) | DecodeKeyword (_DEC)
    MinType,                          // Nothing (MinNotFixed) | MinKeyword (_MIF)
    MaxType,                          // Nothing (MaxNotFixed) | MaxKeyword (_MAF)
    TypeSpecifcFlags,                // ByteConstExpr (_TSF)
    AddressGranularity,              // DWordConstExpr (_GRA)
    MinAddress,                      // DWordConstExpr (_MIN)
    MaxAddress,                      // DWordConstExpr (_MAX)
    AddressTranslation,              // DWordConstExpr (_TRA)
    AddressLength,                   // DWordConstExpr (_LEN)
    ResourceSourceIndex,            // Nothing | ByteConstExpr
    ResourceSource,                 // Nothing | StringData
    DescriptorName                   // Nothing | NameString
  )
)

EndDependentFnTerm := 
  EndDependentFn ()

ExtendedIOTerm := 
  ExtendedIO (
    ResourceUsage,                  // Nothing (ResourceConsumer) |
  ResourceTypeKeyword
    MinType,                        // Nothing (MinNotFixed) | MinKeyword (_MIF)
    MaxType,                        // Nothing (MaxNotFixed) | MaxKeyword (_MAF)
    Decode,                          // Nothing (PosDecode) | DecodeKeyword (_DEC)
    RangeType,                      // Nothing (EntireRange) | RangeTypeKeyword
  (_RNG)
    AddressGranularity,            // QWordConstExpr (_GRA)
    MinAddress,                   // QWordConstExpr (_MIN)
    MaxAddress,                   // QWordConstExpr (_MAX)
    AddressTranslation,           // QWordConstExpr (_TRA)
    AddressLength,                // QWordConstExpr (_LEN)
  )
)

```

```

TypeSpecifcAttributes,
DescriptorName,
Translati onType,
Translati onDensi ty
)

ExtendedMemoryTerm :=

  ExtendedMemory (
    ResourceUsage,
    ResourceTypeKeyword
      Decode,
      Mi nType,
      MaxType,
      MemType,
    (_MEM)
      ReadWri teType,
      AddressGranul arity,
      Mi nAddress,
      MaxAddress,
      AddressTranslati on,
      AddressLength,
      TypeSpecifcAttributes,
      DescriptorName,
      MemoryRangeType,
      Translati onType
  )
)

ExtendedSpaceTerm :=

  ExtendedSpace (
    ResourceType,
    ResourceUsage,
    ResourceTypeKeyword
      Decode,
      Mi nType,
      MaxType,
      TypeSpecifcFlags,
      AddressGranul arity,
      Mi nAddress,
      MaxAddress,
      AddressTranslati on,
      AddressLength,
      TypeSpecifcAttributes,
      DescriptorName
  )
)

```

```

// Nothing | QWordConstExpr
// Nothing | NameString
// Nothing | TypeKeyword (_TP)
// Nothing | TranslationKeyword (_TRS)

// Nothing (ResourceConsumer) |
// Nothing (PosDecode) | DecodeKeyword (_DEC)
// Nothing (Mi nNotFi xed) | Mi nKeyword (_MIF)
// Nothing (MaxNotFi xed) | MaxKeyword (_MAF)
// Nothing (NonCacheable) | MemTypeKeyword

// ReadWri teKeyword (_RW)
// QWordConstExpr (_GRA)
// QWordConstExpr (_MIN)
// QWordConstExpr (_MAX)
// QWordConstExpr (_TRA)
// QWordConstExpr (_LEN)
// Nothing | QWordConstExpr
// Nothing | NameString
// Nothing | AddressKeyword (_MTP)
// Nothing | TypeKeyword (_TP)

// ByteConstExpr (_RT), 0xC0 – 0xFF
// Nothing (ResourceConsumer) |

// Nothing (PosDecode) | DecodeKeyword (_DEC)
// Nothing (Mi nNotFi xed) | Mi nKeyword (_MIF)
// Nothing (MaxNotFi xed) | MaxKeyword (_MAF)
// ByteConstExpr (_TSF)
// QWordConstExpr (_GRA)
// QWordConstExpr (_MIN)
// QWordConstExpr (_MAX)
// QWordConstExpr (_TRA)
// QWordConstExpr (_LEN)
// Nothing | QwordConstExpr (_ATT)
// Nothing | NameString

```

```

Fix edDMATerm := 
  Fix edDMA (
    DMAReq,
    Channel ,
    XferWidth,
    (_SIZ)
    DescriptorName,
  )
    //WordConstExpr (_DMA)
    //WordConstExpr (_TYP)
    //Nothing (Width32Bit) | TransferWidthKeyword
    //Nothing | NameString

Fix edIOTerm := 
  Fix edIO (
    AddressBase,
    RangeLength,
    DescriptorName
  )
    // WordConstExpr (_BAS)
    // ByteConstExpr (_LEN)
    // Nothing | NameString

GpioIntTerm := 
  GpioInt(
    InterruptType,
    InterruptLevel ,
    ShareType,
    PinConfig,
    DebounceTime
    ResourceSource,
    ResourceSourceIndex,
    ResourceUsage,
    ResourceTypeKeyword
    DescriptorName,
    VendorData
  ) {DWordList}
    // InterruptTypeKeyword (_MOD)
    // InterruptLevel Keyword (_POL)
    // Nothing (Exclusive) | ShareTypeKeyword (_SHR)
    // PinConfigKeyword | ByteConstExpr (_PPI)
    // Nothing | WordConstExpr (_DBT)
    // StringData
    // Nothing (0) | ByteConstExpr
    // Nothing (ResourceConsumer) |
    // Nothing | NameString
    // Nothing | RawDataBuffer (_VEN)
    // List of GPIO pins (_PIN)

GpioITerm := 
  GpioIO (
    ShareType,
    PinConfig,
    DebounceTime
    DriveStrength
    IORestriction
    ResourceSource,
    ResourceSourceIndex,
    ResourceUsage,
    ResourceTypeKeyword
    DescriptorName,
    VendorData
  ) {DWordList}
    // Nothing (Exclusive) | ShareTypeKeyword (_SHR)
    // PinConfigKeyword | ByteConstExpr (_PPI)
    // Nothing | WordConstExpr (_DBT)
    // Nothing | WordConstExpr (_DRS)
    // Nothing (None) | IORestrictionKeyword (_IOR)
    // StringData
    // Nothing (0) | ByteConstExpr
    // Nothing (ResourceConsumer) |
    // Nothing | NameString
    // Nothing | RawDataBuffer (_VEN)
    // List of GPIO pins (_PIN)

```

```

I2CSerialBusTerm :=

  I2CSerialBusV2 (
    SlaveAddress,
    SlaveMode,
    SlaveModeKeyword (_SLV)
      ConnectionSpeed,
      AddressingMode,
    AddressModeKeyword (_MOD)
      ResourceSource,
      ResourceSourceIndex,
      ResourceUsage,
    ResourceTypeKeyword
      DescriptorName,
      ShareType,
      VendorData
  )

InterruptTerm :=

  Interrupt (
    ResourceType,
    ResourceTypeKeyword
      InterruptType,
      InterruptLevel,
      ShareType,
      ResourceSourceIndex,
      ResourceSource,
      DescriptorName
  ) {DWordList}

IOTerm :=

  IO (
    IODecode,
    MinAddress,
    MaxAddress,
    Alignment,
    RangeLength,
    DescriptorName
  )

IRQNoFlagsTerm :=

  IRQNoFlags (
    DescriptorName
  ) {ByteList}

```

// WordConstExpr (\_ADR)  
 // Nothing (ControllerInitiated) |  
 // DWordConstExpr (\_SPE)  
 // Nothing (AddressingMode7Bit) |  
 // StringData  
 // Nothing | ByteConstExpr  
 // Nothing (ResourceConsumer) |  
 // Nothing | NameString  
 // Nothing (Exclusive) | ShareTypeKeyword (\_SHR)  
 // Nothing | RawDataBuffer (\_VEN)

// Nothing (ResourceConsumer) |  
 // InterruptTypeKeyword (\_LL, \_HE)  
 // InterruptLevel Keyword (\_LL, \_HE)  
 // Nothing (Exclusive) ShareTypeKeyword (\_SHR)  
 // Nothing | ByteConstExpr  
 // Nothing | StringData  
 // Nothing | NameString  
 // List of interrupts (\_INT)

// IODecodeKeyword (\_DEC)  
 // WordConstExpr (\_MIN)  
 // WordConstExpr (\_MAX)  
 // ByteConstExpr (\_ALN)  
 // ByteConstExpr (\_LEN)  
 // Nothing | NameString

// Nothing | NameString  
 // List of interrupts (0-15 bytes)

```

IRQTerm := 
  IRQ (
    InterruptType,
    InterruptLevel,
    ShareType,
    (_SHR)
    DescriptorName
  ) {ByteList}                                // Nothing | NameString
                                                // List of interrupts (0-15 bytes)

Memory24Term := 
  Memory24 (
    ReadWriteType,
    MinAddress[23:8],
    MaxAddress[23:8],
    Alignment,
    RangeLength,
    DescriptorName
  )                                                 // ReadWriteKeyword (_RW)
                                                // WordConstExpr (_MIN)
                                                // WordConstExpr (_MAX)
                                                // WordConstExpr (_ALN)
                                                // WordConstExpr (_LEN)
                                                // Nothing | NameString

Memory32FixedTerm := 
  Memory32Fixed (
    ReadWriteType,
    AddressBase,
    RangeLength,
    DescriptorName
  )                                                 // ReadWriteKeyword (_RW)
                                                // DWordConstExpr (_BAS)
                                                // DWordConstExpr (_LEN)
                                                // Nothing | NameString

Memory32Term := 
  Memory32 (
    ReadWriteType,
    MinAddress,
    MaxAddress,
    Alignment,
    RangeLength,
    DescriptorName
  )                                                 // ReadWriteKeyword (_RW)
                                                // DWordConstExpr (_MIN)
                                                // DWordConstExpr (_MAX)
                                                // DWordConstExpr (_ALN)
                                                // DWordConstExpr (_LEN)
                                                // Nothing | NameString

PinConfigTerm := 
  PinConfig (
    ShareType, // Nothing (Exclusive) | ShareTypeKeyword (_SHR)
    PinConfigType, // ByteData (_TYP)
    PinConfigValue, // ByteData (_VAL)
    ResourceSource, // StringData
    ResourceSourceIndex, // Nothing (0) | ByteConstExpr
    ResourceUsage, // Nothing (ResourceConsumer) | ResourceTypeKeyword
    DescriptorName, // Nothing | NameString
    VendorData // Nothing | RawDataBuffer (_VEN)
  ) {DWordList} (_PIN)

```

```

PinFunctionTerm :=

PinFunction (
    ShareType, // Nothing (Exclusive) | ShareTypeKeyword (_SHR)
    PinPulConfiguration, // PinConfigKeyword | ByteConstExpr (_PPI)
    FunctionNumber, // WordData
    ResourceSource, // StringData
    ResourceSourceIndex, // Nothing (0) | ByteConstExpr
    ResourceUsage, // Nothing (ResourceConsumer) | ResourceTypeKeyword
    DescriptorName, // Nothing | NameString
    VendorData // Nothing | RawDataBuffer (_VEN)
) {DWordList} (_PIN)

```

```

PinGroupTerm :=

PinGroup (
    ResourceLabel, // StringData
    ResourceUsage, // Nothing (ResourceConsumer) | ResourceTypeKeyword
    DescriptorName, // Nothing | NameString
    VendorData // Nothing | RawDataBuffer (_VEN)
) {DWordList} (_PIN)

```

```

PinGroupConfigTerm :=

PinGroupConfig (
    ShareType, // Nothing (Exclusive) | ShareTypeKeyword (_SHR)
    PinConfigType, // ByteData (_TYP)
    PinConfigValue, // ByteData (_VAL)
    ResourceSource, // StringData
    ResourceSourceIndex, // Nothing (0) | ByteConstExpr
    ResourceSourceLabel, // StringData
    ResourceUsage, // Nothing (ResourceConsumer) | ResourceTypeKeyword
    DescriptorName, // Nothing | NameString
    VendorData // Nothing | RawDataBuffer (_VEN)
)

```

```

PinGroupFunctionTerm :=

PinGroupFunction (
    ShareType, // Nothing (Exclusive) | ShareTypeKeyword (_SHR)
    FunctionNumber, // WordData (_FUN)
    ResourceSource, // StringData
    ResourceSourceIndex, // Nothing (0) | ByteConstExpr
    ResourceSourceLabel, // StringData
    ResourceUsage, // Nothing (ResourceConsumer) | ResourceTypeKeyword
    DescriptorName, // Nothing | NameString
    VendorData // Nothing | RawDataBuffer (_VEN)
)

```

```

QWordI0Term :=

    QWordI0 (
        ResourceUsage,                                // Nothing (ResourceConsumer) |
        ResourceTypeKeyword
            MinType,                                     // Nothing (MinNotFixed) | MinKeyword (_MIF)
            MaxType,                                     // Nothing (MaxNotFixed) | MaxKeyword (_MAF)
            Decode,                                      // Nothing (PosDecode) | DecodeKeyword (_DEC)
            RangeType,                                    // Nothing (EntireRange) | RangeTypeKeyword

        (_RNG)
            AddressGranularity,
            MinAddress,
            MaxAddress,
            AddressTranslation,
            AddressLength,
            ResourceSourceIndex,
            ResourceSource,
            DescriptorName,
            TranslationType,
            TranslationDensity
        )

QWordMemoryTerm :=

    QWordMemory (
        ResourceUsage,                                // Nothing (ResourceConsumer) |
        ResourceTypeKeyword
            Decode,                                     // Nothing (PosDecode) | DecodeKeyword (_DEC)
            MinType,                                    // Nothing (MinNotFixed) | MinKeyword (_MIF)
            MaxType,                                    // Nothing (MaxNotFixed) | MaxKeyword (_MAF)
            MemType,                                     // Nothing (NonCacheable) | MemTypeKeyword

        (_MEM)
            ReadWriteType,
            AddressGranularity,
            MinAddress,
            MaxAddress,
            AddressTranslation,
            AddressLength,
            ResourceSourceIndex,
            ResourceSource,
            DescriptorName,
            MemoryRangeType,
            TranslationType
        )
    )

```

```

QWordSpaceTerm :=

    QWordSpace (
        ResourceType,
        ResourceUsage,
        ResourceTypeKeyword
            Decode,
            MinType,
            MaxType,
            TypeSpecificationFlags,
            AddressGranularity,
            MinAddress,
            MaxAddress,
            AddressTranslation,
            AddressLength,
            ResourceSourceIndex,
            ResourceSource,
            DescriptorName
    )

RawDataBufferTerm :=

    RawDataBuffer (
        (BufferSize)
    ) {ByteList} => ByteList
        // Nothing | Integer

RegisterTerm :=

    Register (
        AddressSpaceID,
        RegisterWidth,
        RegisterOffset,
        RegisterAddress,
        AccessSize,
        DescriptorName
    )

SPI Serial BusTerm :=

    SPI Serial BusV2 (
        DeviceSelection,
        DeviceSelectionPriority,
        (_DPL)
            WriteMode,
            DataBitLength,
            SlaveMode,
            SlaveModeKeyword (_SLV)
                ConnectionSpeed,
                ClockPriority,
                ClockPhase,
                ResourceSource,
                ResourceSourceIndex,
                ResourceUsage,
                ResourceTypeKeyword
                    DescriptorName,
                    // ByteConstExpr (_RT), 0xC0 – 0xFF
                    // Nothing (ResourceConsumer) |
                    // Nothing (PosDecode) | DecodeKeyword (_DEC)
                    // Nothing (MinNotFixed) | MinKeyword (_MIF)
                    // Nothing (MaxNotFixed) | MaxKeyword (_MAF)
                    // ByteConstExpr (_TSF)
                    // QWordConstExpr (_GRA)
                    // QWordConstExpr (_MIN)
                    // QWordConstExpr (_MAX)
                    // QWordConstExpr (_TRA)
                    // QWordConstExpr (_LEN)
                    // Nothing | ByteConstExpr
                    // Nothing | StringData
                    // Nothing | NameString
    )
        // AddressSpaceKeyword (_ASI)
        // ByteConstExpr (_RBW)
        // ByteConstExpr (_RBO)
        // QWordConstExpr (_ADR)
        // ByteConstExpr (_ASZ)
        // Nothing | NameString

        // WordConstExpr (_ADR)
        // Nothing (PriorityLow) | DevicePriorityKeyword

        // Nothing (FourWriteMode) | WriteModeKeyword (_MOD)
        // ByteConstExpr (_LEN)
        // Nothing (ControllerInitiated) |

        // DWordConstExpr (_SPE)
        // ClockPriorityKeyword (_POL)
        // ClockPhaseKeyword (_PHA)
        // StringData
        // Nothing | ByteConstExpr
        // Nothing (ResourceConsumer) |

        // Nothing | NameString

```

```

        ShareType,
        VendorData
    )

StartDependentFnNoPriTerm :=
    StartDependentFnNoPri () {ResourceMacroList}

StartDependentFnTerm :=
    StartDependentFn (
        CompatPriority,
        PerfRobustPriority
    ) {ResourceMacroList}

UARTSerialBusTerm :=
    UARTSerialBusV2(
        InitialBaudRate,
        BitsPerByte,
        (_LEN)
            StopBits,
            LinesInUse,
            IsBigEndian,
        (_END)
            Parity,
        (_PAR)
            FlowControl,
        (_FLC)
            ReceiveBufferSize,
            TransmitBufferSize,
            ResourceSource,
            ResourceSourceIndex,
            ResourceUsage,
        ResourceTypeKeyword
            DescriptorName,
            ShareType,
            VendorData
    )

VendorLongTerm :=
    VendorLong (
        DescriptorName
    ) {ByteList}

VendorShortTerm :=
    VendorShort (
        DescriptorName
    ) {ByteList}

```

// Nothing (Exclusive) | ShareTypeKeyword (\_SHR)  
 // Nothing | RawDataBuffer (\_VEN)

// ByteConstExpr (0-2)  
 // ByteConstExpr (0-2)

// DwordConstExpr (\_SPE)  
 // Nothing (DataBitsEight) | DataBitsKeyword  
 // Nothing (StopBitsOne) | StopBitsKeyword (\_STB)  
 // ByteConstExpr (\_LIN)  
 // Nothing (LittleEndian) | EndianessKeyword  
 // Nothing (ParityTypeNone) | ParityTypeKeyword  
 // Nothing (FlowControlNone) | FlowControlKeyword  
 // WordConstExpr (\_RXL)  
 // WordConstExpr (\_TXL)  
 // StringData  
 // Nothing | ByteConstExpr  
 // Nothing (ResourceConsumer)|  
 // Nothing | NameString  
 // Nothing (Exclusive) | ShareTypeKeyword (\_SHR)  
 // Nothing | Object (\_VEN)

// Nothing | NameString

// Nothing | NameString  
 // Up to 7 bytes

```

WordBusNumberTerm :=

    WordBusNumber (
        ResourceUsage,
        ResourceTypeKeyword
            MinType,
            MaxType,
            Decode,
            AddressGranularity,
            MinAddress,
            MaxAddress,
            AddressTranslation,
            AddressLength,
            ResourceSourceIndex,
            ResourceSource,
            DescriptorName
    )
)

WordI0Term :=

    WordI0 (
        ResourceUsage,
        ResourceTypeKeyword
            MinType,
            MaxType,
            Decode,
            RangeType,
            AddressGranularity,
            MinAddress,
            MaxAddress,
            AddressTranslation,
            AddressLength,
            ResourceSourceIndex,
            ResourceSource,
            DescriptorName,
            TranslationType,
            TranslationDensity
    )
)

// Nothing (ResourceConsumer) |
// Nothing (MinNotFixed) | MinKeyword (_MIF)
// Nothing (MaxNotFixed) | MaxKeyword (_MAF)
// Nothing (PosDecode) | DecodeKeyword (_DEC)
// WordConstExpr (_GRA)
// WordConstExpr (_MIN)
// WordConstExpr (_MAX)
// WordConstExpr (_TRA)
// WordConstExpr (_LEN)
// Nothing | ByteConstExpr
// Nothing | StringData
// Nothing | NameString
// Nothing (EntireRange) | RangeTypeKeyword (_RNG)
// WordConstExpr (_GRA)
// WordConstExpr (_MIN)
// WordConstExpr (_MAX)
// WordConstExpr (_TRA)
// WordConstExpr (_LEN)
// Nothing | ByteConstExpr
// Nothing | StringData
// Nothing | NameString
// Nothing | TypeKeyword (_TTP)
// Nothing | TranslationKeyword (_TRS)

```

```

WordSpaceTerm := 
  WordSpace (
    ResourceType,
    ResourceUsage,
    Decode,
    MinType,
    MaxType,
    TypeSpecifiedFlags,
    AddressGranularity,
    MinAddress,
    MaxAddress,
    AddressTranslation,
    AddressLength,
    ResourceSourceIndex,
    ResourceSource,
    DescriptorName
  )
    // ByteConstExpr (_RT), 0xC0 – 0xFF
    // Nothing (ResourceConsumer) | ResourceTypeKeyword
    // Nothing (PosDecode) | DecodeKeyword (_DEC)
    // Nothing (MinNotFixed) | MinKeyword (_MIN)
    // Nothing (MaxNotFixed) | MaxKeyword (_MAX)
    // ByteConstExpr (_TSF)
    // WordConstExpr (_GRA)
    // WordConstExpr (_MIN)
    // WordConstExpr (_MAX)
    // WordConstExpr (_TRA)
    // WordConstExpr (_LEN)
    // Nothing | ByteConstExpr
    // Nothing | StringData
    // Nothing | NameString
  )

```

## 19.3 ASL Concepts

This reference section is for developers who are writing ASL code while developing definition blocks for platforms.

### 19.3.1 ASL Names

This section describes how to encode object names using ASL.

The following table lists the characters legal in any position in an ASL object name. ASL names are not case-sensitive and will be converted to upper case.

**Table 19-414 Named Object Reference Encodings**

Value	Description	Title
0x41-0x5A, 0x5F, 0x61-0x7A	Lead character of name ('A'–'Z', '_', 'a'–'z')	LeadNameChar
0x30-0x39, 0x41-0x5A, 0x5F, 0x61-0x7A	Non-lead (trailing) character of name ('A'–'Z', '_', 'a'–'z', '0'–'9')	NameChar

The following table lists the name modifiers that can be prefixed to an ASL name.

**Table 19-415 Definition Block Name Modifier Encodings**

Value	Description	NamePrefix :=	Followed by ...
0x5C	Namespace root ('\')	RootPrefix	Name
0x5E	Parent namespace (^)	ParentPrefix	ParentPrefix or Name

### 19.3.1.1 \_T\_x Reserved Object Names

The ACPI specification reserves object names with the prefix `_T` for internal use by the ASL compiler. The ASL compiler may, for example, use these objects to store temporary values when implementing translation of complicated control structures into AML. The ASL compiler must declare `_T_x` objects normally (using `Name`) and must not define them more than once within the same scope.

### 19.3.2 ASL Literal Constants

This section describes how to encode integer and string constants using ASL.

#### 19.3.2.1 Integers

```

DigitChar      := '0' - '9'
LeadDigitChar  := '1' - '9'
OctalDigitChar := '0' - '7'
HexDigitChar   := DigitChar | 'A' - 'F' | 'a' - 'f'

Integer        := DecimalConst | OctalConst | HexConst
DecimalConst   := LeadDigitChar | <DecimalConst DigitChar>
OctalConst     := '0' | <OctalConst OctalDigitChar>
HexConst       := <0x HexDigitChar> | <0X HexDigitChar> | <HexConst HexDigitChar>
ByteConst      := Integer => 0x00-0xFF
WordConst      := Integer => 0x0000-0xFFFF
DWordConst    := Integer => 0x00000000-0xFFFFFFFF
QWordConst    := Integer => 0x0000000000000000-0xFFFFFFFFFFFF
  
```

Numeric constants can be specified in decimal, octal, or hexadecimal. Octal constants are preceded by a leading zero (0), and hexadecimal constants are preceded by a leading zero and either a lower or upper case ‘x’. In some cases, the grammar specifies that the number must evaluate to an integer within a limited range, such as 0x00–0xFF, and so on.

#### 19.3.2.2 Strings

```

String          := ' ' ' Utf8CharList ' '
Utf8CharList   := Nothing | <EscapeSequence Utf8CharList> | <Utf8Char Utf8CharList>
Utf8Char        := 0x01-0x21 |
                  0x23-0x5B |
                  0x5D-0x7F |
                  0xC2-0xDF 0x80-0xBF |
                  0xE0 0xA0-0xBF 0x80-0xBF |
                  0xE1-0xEC 0x80-0xBF 0x80-0xBF |
                  0xED 0x80-0x9F 0x80-0xBF |
                  0xEE-0xEF 0x80-0xBF 0x80-0xBF |
                  0xF0 0x90-0xBF 0x80-0xBF 0x80-0xBF |
                  0xF1-0xF3 0x80-0xBF 0x80-0xBF 0x80-0xBF |
                  0xF4 0x80-0x8F 0x80-0xBF 0x80-0xBF
EscapeSeq       := SimpleEscapeSeq | OctalEscapeSeq | HexEscapeSeq
SimpleEscapeSeq := \' | \" | \a | \b | \f | \n | \r | \t | \v | \\
OctalEscapeSeq := \ OctalDigitChar |
                  \ OctalDigitChar OctalDigitChar |  
```

```
\ Octal Di gi tChar Octal Di gi tChar Octal Di gi tChar
HexEscapeSeq   := \x HexDi gi tChar |
                \x HexDi gi tChar HexDi gi tChar
Nul l Char    := 0x00
```

String literals consist of zero or more ASCII characters surrounded by double quotation marks (""). A string literal represents a sequence of characters that, taken together, form a null-terminated string. After all adjacent strings in the constant have been concatenated, a null character is appended.

Strings in the source file may be encoded using the UTF-8 encoding scheme as defined in the Unicode 4.0 specification. UTF-8 is a byte-oriented encoding scheme, where some characters take a single byte and others take multiple bytes. The ASCII character values 0x01-0x7F take up exactly one byte.

However, only one operator currently supports UTF-8 strings: `Unicode`. Since string literals are defined to contain only non-null character values, both Hex and Octal escape sequence values must be non-null values in the ASCII range 0x01 through 0xFF. For arbitrary byte data (outside the range of ASCII values), the `Buffer` object should be used instead.

Since the backslash is used as the escape character and also the namespace root prefix, any string literals that are to contain a fully qualified namepath from the root of the namespace must use the double backslash to indicate this:

```
Name (_EJD, "\\_SB.PCI0.DOCK1")
```

The double backslash is only required within quoted string literals.

Since double quotation marks are used close a string, a special escape sequence (\") is used to allow quotation marks within strings. Other escape sequences are listed in the table below:

**Table 19-416 ASL Escape Sequences**

Escape Sequence	ASCII Character
\a	0x07 (BEL)
\b	0x08 (BS)
\f	0x0C (FF)
\n	0x0A (LF)
\r	0x0D (CR)
\t	0x09 (TAB)
\v	0x0B (VT)
\"	0x22 (")
\'	0x27 (')
\\\	0x5C (\)

Since literal strings are read-only constants, the following ASL statement (for example) is not supported:

```
Store ("ABC", "DEF")
```

However, the following sequence of statements is supported:

```
Name (STR, "DEF")
...
Store ("ABC", STR)
```

### 19.3.3 ASL Resource Templates

ASL includes some macros for creating resource descriptors. The ResourceTemplate macro creates a Buffer in which resource descriptor macros can be listed. The ResourceTemplate macro automatically generates an End descriptor and calculates the checksum for the resource template. The format for the ResourceTemplate macro is as follows:

```
ResourceTemplate ()
{
    // List of resource macros
}
```

The following is an example of how these macros can be used to create a resource template that can be returned from a \_PRS control method:

```
Name (PRSO, ResourceTemplate ())
{
    StartDependentFn (1, 1)
    {
        IRQ (Level, ActiveLow, Shared) {10, 11}
        DMA (TypeF, NotBusMaster, Transfer16) {4}
        IO (Decode16, 0x1000, 0x2000, 0, 0x100)
        IO (Decode16, 0x5000, 0x6000, 0, 0x100, 101)
    }
    StartDependentFn (1, 1)
    {
        IRQ (Level, ActiveLow, Shared) {}
        DMA (TypeF, NotBusMaster, Transfer16){5}
        IO (Decode16, 0x3000, 0x4000, 0, 0x100)
        IO (Decode16, 0x5000, 0x6000, 0, 0x100, 102)
    }
    EndDependentFn ()
})
```

Occasionally, it is necessary to change a parameter of a descriptor in an existing resource template at run-time (i.e., during a method execution.) To facilitate this, the descriptor macros optionally include a name declaration that can be used later to refer to the descriptor. When a name is declared with a descriptor, the ASL compiler will automatically create field names under the given name to refer to individual fields in the descriptor.

The offset returned by a reference to a resource descriptor field name is either in units of bytes (for 8-, 16-, 32-, and 64-bit field widths) or in bits (for all other field widths). In all cases, the returned offset is the

integer offset (in either bytes or bits) of the name from the first byte (offset 0) of the parent resource template.

For example, given the above resource template, the following code changes the minimum and maximum addresses for the I/O descriptor named IO2:

```
CreateWordField (PRSO, IO2._MIN, IMIN)
Store (0xA000, IMIN)
```

```
CreateWordField (PRSO, IO2._MAX, IMAX)
Store (0xB000, IMAX)
```

The resource template macros for each of the resource descriptors are listed below, after the table that defines the resource descriptor. The resource template macros are formally defined in [Section 6.4.1](#), “ASL Macros for Resource Descriptors.”

The reserved names (such as \_MIN and \_MAX) for the fields of each resource descriptor are defined in the appropriate table entry of the table that defines that resource descriptor.

### 19.3.4 ASL Macros

ASL compilers support built in macros to assist in various ASL coding operations. These macros do not have a corresponding AML opcode, but are instead fully processed by the compiler itself, and may result in the generation of AML opcodes for other ASL/AML operators. The following table lists some of the supported directives and an explanation of their function.

The ASL language provides a wide variety of data types and operators that manipulate data. It also provides mechanisms for both explicit and implicit conversion between the data types when used with ASL operators.

Each of the available ASL macros are described below.

#### EISAID (TextID)

Converts and compresses the 7-character text argument into its corresponding 4-byte numeric EISA ID encoding (Integer). This can be used when declaring IDs for devices that are EISA IDs.

#### For (Initialize, Predicate, Update) {TermList}

Converts a format string to a series of string Concatenate operations and stores the result to a Named Object (Target).

#### Fprintf (Target, FormatString, FormatArgs)

Implements a standard For() loop by converting the For() arguments and TermList into an AML While loop.

#### Printf (FormatString, FormatArgs)

Converts a format string to a series of string Concatenate operations and automatically stores the result to the Debug Object.

#### ResourceTemplate ()

Used to supply Plug and Play resource descriptor information in human readable form, which is then translated into the appropriate binary Plug and Play resource descriptor encodings in a

Resource Template Buffer object. For more information about resource descriptor encodings, see Section 6.4, "Resource Data Types for ACPI."

### ToPLD (PLDKeywordList)

Converts a PLD (Physical Location of Device) Keyword List into a \_PLD Buffer object.

### ToUUID (AsciiString)

Converts an ASCII UUID or GUID string to an encoded 128-bit Buffer object.

### Unicode (StringData)

Converts a standard ASCII string to a Unicode string returned in a Buffer object.

## 19.3.5 ASL Data Types

ASL provides a wide variety of data types and operators that manipulate data. It also provides mechanisms for both explicit and implicit conversion between the data types when used with ASL operators.

The table below describes each of the available data types.

**Table 19-417 Summary of ASL Data Types**

ASL Data Type	Description
[Uninitialized]	No assigned type or value. This is the type of all control method LocalX variables and unused ArgX variables at the beginning of method execution, as well as all uninitialized Package elements. Uninitialized objects must be initialized (via Store or CopyObject) before they may be used as source operands in ASL expressions.
Buffer	An array of bytes. Uninitialized elements are zero by default.
Buffer Field	Portion of a buffer created using CreateBitField, CreateByteField, CreateWordField, CreateQWordField, CreateField, or returned by the Index operator.
DDB Handle	Definition block handle returned by the Load operator
Debug Object	Debug output object. Formats an object and prints it to the system debug port. Has no effect if debugging is not active.
Device	Device or bus object
Event	Event synchronization object
Field Unit (within an Operation Region)	Portion of an address space, bit-aligned and of one-bit granularity. Created using Field, BankField, or IndexField.
Integer	An $n$ -bit little-endian unsigned integer. In ACPI 1.0 this was 32 bits. In ACPI 2.0 and later, this is 64 bits. The Integer (DWORD) designation indicates that only the lower 32 bits have meaning and the upper 32 bits of 64-bit integers must be zero (masking of upper bits is not required).
Integer Constant	Created by the ASL terms "Zero", "One", "Ones", and "Revision".
Method	Control Method (Executable AML function)
Mutex	Mutex synchronization object

ASL Data Type	Description
Object Reference	Reference to an object created using the RefOf, Index, or CondRefOf operators
Operation Region	Operation Region (A region within an Address Space)
Package	Collection of ASL objects with a fixed number of elements (up to 255).
Power Resource	Power Resource description object
Processor	Processor description object
RawDataBuffer	An array of bytes. Uninitialized elements are zero by default. RawDataBuffer does not contain any AML encoding bytes, only the raw bytes.
String	Null-terminated ASCII string.
Thermal Zone	Thermal Zone description object

**Note:** (*Compatibility Note*) The ability to store and manipulate object references was first introduced in ACPI 2.0. In ACPI 1.0 references could not be stored in variables, passed as parameters or returned from functions.

### 19.3.5.1 Data Type Conversion Overview

ASL provides two mechanisms to convert objects from one data type to another data type at run-time (during execution of the AML interpreter). The first mechanism, **Explicit Data Type Conversion**, allows the use of explicit ASL operators to convert an object to a different data type. The second mechanism, **Implicit Data Type Conversion**, is invoked by the AML interpreter when it is necessary to convert a data object to an expected data type before it is used or stored.

The following general rules apply to data type conversions:

- Input parameters are always subject to implicit data type conversion (also known as implicit source operand conversion) whenever the operand type does not match the expected input type.
- Output (target) parameters for all operators except the explicit data conversion operators are subject to implicit data type conversion (also known as implicit result object conversion) whenever the target is an existing named object or named field that is of a different type than the object to be stored.
- Output parameters for the explicit data conversion operators, as well as output parameters that refer to a method local or argument (LocalX or ArgX) are not subject to implicit type conversion.

Both of these mechanisms (explicit and implicit conversion) are described in detail in the sections that follow.

### 19.3.5.2 Explicit Data Type Conversions

The following ASL operators are provided to *explicitly* convert an object from one data type to another:

#### ToBuffer

Convert an Integer, String, or Buffer to an object of type Buffer

**ToDecimalString**

Convert an Integer, String, or Buffer to an object of type String. The string contains the ASCII representation of the decimal value of the source operand.

**ToHexString**

Convert an Integer, String, or Buffer to an object of type String. The string contains the ASCII representation of the hexadecimal value of the source operand.

**ToInteger**

Convert an Integer, String, or Buffer to an object of type Integer.

**ToCString**

Copy directly and convert a Buffer to an object of type String.

The following ASL operator is provided to copy and transfer objects with an explicit result conversion of the type of the target to match the type of the source object:

**CopyObject**

Explicitly store a copy of the operand object to the target name. No implicit type conversion is performed. (This operator is used to avoid the implicit conversion inherent in the ASL Store operator.)

**19.3.5.3 Implicit Data Type Conversions**

Automatic or *Implicit* type conversions can take place at two different times during the execution of an ASL operator. First, it may be necessary to convert one or more of the source operands to the data type(s) expected by the ASL operator. Second, the result of the operation may require conversion before it is stored into the destination. (Many of the ASL operators can store their result optionally into an object specified by the last parameter. In these operators, if the destination is specified, the action is exactly as if a Store operator had been used to place the result in the destination.)

Such data conversions are performed by an AML interpreter during execution of AML code and are known collectively as *Implicit Operand Conversions*. As described briefly above, there are two different types of implicit operand conversion:

1. Conversion of a source operand from a mismatched data type to the correct data type required by an ASL operator, called *Implicit Source Conversion*. This conversion occurs when a source operand must be converted to the operand type expected by the operator. Any or all of the source operands may be converted in this manner before the execution of the ASL operator can proceed.
2. Conversion of the result of an operation to the existing type of a target operand before it is stored into the target operand, called *Implicit Result Conversion*. This conversion occurs when the target is a fixed type such as a named object or a field. When storing to a method Local or Arg, no conversion is performed or required because these data types are of variable type (the store simply overwrites any existing object and the existing type).

The following ASL operator is provided to copy and transfer objects with an implicit result conversion to the existing type of the target object:

## Store

Store a copy of the operand object to the target name. Implicit result conversion is performed if the target name is of a fixed data type (see above). However, Stores to method locals and arguments do not perform implicit conversion and are therefore the same as using CopyObject.

### 19.3.5.4 Implicit Source Operand Conversion

During the execution of an ASL operator, each source operand is processed by the AML interpreter as follows:

- If the operand is of the type expected by the operator, no conversion is necessary.
- If the operand type is incorrect, attempt to convert it to the proper type.
- For the Concatenate operator and logical operators (LEqual, LGreater, LGreaterEqual, LLess, LLessEqual, and LNotEqual), the data type of the first operand dictates the required type of the second operand, and for Concatenate only, the type of the result object. (The second operator is implicitly converted, if necessary, to match the type of the first operand.)
- If conversion is impossible, abort the running control method and issue a fatal error.

An implicit source conversion will be attempted anytime a source operand contains a data type that is different than the type expected by the operator. For example:

```
Store ("5678", Local 1)
Add (0x1234, Local 1, BUF1)
```

In the Add statement above, *Local1* contains a String object and must undergo conversion to an Integer object before the Add operation can proceed.

In some cases, the operator may take more than one type of operand (such as Integer and String). In this case, depending on the type of the operand, the highest priority conversion is applied. The table below describes the source operand conversions available. For example:

```
Store (Buffer (1) {}, Local 0)
Name (ABCD, Buffer (10) {1, 2, 3, 4, 5, 6, 7, 8, 9, 0})
CreateDWordField (ABCD, 2, XYZ)
Name (MNOP, "1234")
Concatenate (XYZ, MNOP, Local 0)
```

The Concatenate operator can take an Integer, Buffer or String for its first two parameters and the type of the first parameter determines how the second parameter will be converted. In this example, the first parameter is of type Buffer Field (from the CreateDWordField operator). What should it be converted to: Integer, Buffer or String? According to [Table 19-419](#), the highest priority conversion is to Integer. Therefore, both of the following objects will be converted to Integers:

```
XYZ (0x05040302)
MNOP (0x31, 0x32, 0x33, 0x34)
```

And will then be joined together and the resulting type and value will be:

Buffer (0x02, 0x03, 0x04, 0x05, 0x31, 0x32, 0x33, 0x34)

### 19.3.5.5 Implicit Result Object Conversion

For all ASL operators that generate and store a result value (including the Store operator), the result object is processed and stored by the AML interpreter as follows:

- If the ASL operator is one of the *explicit* conversion operators (ToString, Tolnteger, etc., and the CopyObject operator), no conversion is performed. (In other words, the result object is stored directly to the target and completely overwrites any existing object already stored at the target.)
- If the target is a method local or argument (LocalX or ArgX), no conversion is performed and the result is stored directly to the target.
- If the target is a fixed type such as a named object or field object, an attempt is made to convert the source to the existing target type before storing.
- If conversion is impossible, abort the running control method and issue a fatal error.

An implicit result conversion can occur anytime the result of an operator is stored into an object that is of a fixed type. For example:

```
Name (BUF1, Buffer (10))
Add (0x1234, 0x789A, BUF1)
```

Since BUF1 is a named object of fixed type *Buffer*, the Integer result of the Add operation must be converted to a Buffer before it is stored into BUF1.

### 19.3.5.6 Data Types and Type Conversions

The following table lists the available ASL data types and the available data type conversions (if any) for each. The entry for each data type is fully cross-referenced, showing both the types to which the object may be converted as well as all other types that may be converted to the data type.

The allowable conversions apply to both explicit and implicit conversions.

ASL Data Type	Can be implicitly or explicitly converted <u>to</u> these Data Types: (In priority order)	Can be implicitly or explicitly converted <u>from</u> these Data Types:
[Uninitialized]	None. Causes a fatal error when used as a source operand in any ASL statement.	Integer, String, Buffer, Package, DDB Handle, Object Reference
Buffer	Integer, String, Debug Object	Integer, String
Buffer Field	Integer, Buffer, String, Debug Object	Integer, Buffer, String
DDB Handle	Integer, Debug Object	Integer
Debug Object	None. Causes a fatal error when used as a source operand in any ASL statement.	Integer, String, Buffer, Package, Field Unit, Buffer Field, DDB Handle
Device	None	None

Event	None	None
Field Unit (within an Operation Region)	Integer, Buffer, String, Debug Object	Integer, Buffer, String
Integer	Buffer, Buffer Field, DDB Handle, Field Unit, String, Debug Object	Buffer, String
Integer Constant	Integer, Debug Object	None. Also, storing any object to a constant is a no-op, not an error.
Method	None	None
Mutex	None	None
Object Reference	None	None
Operation Region	None	None
Package	Debug Object	None
String	Integer, Buffer, Debug Object	Integer, Buffer
Power Resource	None	None
Processor	None	None
RawDataBuffer	None	None
Thermal Zone	None	None

### 19.3.5.7 Data Type Conversion Rules

The following table presents the detailed data conversion rules for each of the allowable data type conversions. These conversion rules are implemented by the AML Interpreter and apply to all conversion types — explicit conversions, implicit source conversions, and implicit result conversions.

**Table 19-419 Object Conversion Rules**

<b>To convert from an object of this Data Type</b>	<b>To an object of this Data Type</b>	<b>This action is performed by the AML Interpreter:</b>
Buffer	Buffer Field	<p>The contents of the buffer are copied to the Buffer Field. If the buffer is smaller than the size of the buffer field, it is zero extended. If the buffer is larger than the size of the buffer field, the upper bits are truncated.</p> <p>Compatibility Note: This conversion was first introduced in ACPI 2.0. The behavior in ACPI 1.0 was undefined.</p>
	Debug Object	Each buffer byte is displayed as a hexadecimal integer, delimited by spaces and/or commas.
	Field Unit	The entire contents of the buffer are copied to the Field Unit. If the buffer is larger (in bits) than the size of the Field Unit, it is broken into pieces and completely written to the Field Unit, lower chunks first. If the buffer (or the last piece of the buffer, if broken up) is smaller than the size of the Field Unit, it is zero extended before being written.
	Integer	If no integer object exists, a new integer is created. The contents of the buffer are copied to the Integer, starting with the least-significant bit and continuing until the buffer has been completely copied — up to the maximum number of bits in an Integer. The size of an Integer is indicated by the Definition Block table header's Revision field. A Revision field value less than 2 indicates that the size of an Integer is 32 bits. A value greater than or equal to 2 signifies that the size of an Integer is 64 bits. If the buffer is smaller than the size of an integer, it is zero extended. If the buffer is larger than the size of an integer, it is truncated. Conversion of a zero-length buffer to an integer is not allowed.
	String	If no string object exists, a new string is created. If the string already exists, it is completely overwritten and truncated or extended to accommodate the converted buffer exactly. The entire contents of the buffer are converted to a string of two-character hexadecimal numbers, each separated by a space. A zero-length buffer will be converted to a null (zero-length) string.
Buffer Field	[See the Integer and Buffer Rules]	If the Buffer Field is smaller than or equal to the size of an Integer (in bits), it will be treated as an Integer. Otherwise, it will be treated as a Buffer. The size of an Integer is indicated by the Definition Block table header's Revision field. A Revision field value less than 2 indicates that the size of an Integer is 32 bits. A value greater than or equal to 2 signifies that the size of an Integer is 64 bits. (See the conversion rules for the Integer and Buffer data types.)
DDB Handle	[See the Integer Rule]	The object is treated as an Integer (See conversion rules for the Integer data type.)
Field Unit	[See the Integer and Buffer Rules]	If the Field Unit is smaller than or equal to the size of an Integer (in bits), it will be treated as an Integer. If the Field Unit is larger than the size of an Integer, it will be treated as a Buffer. The size of an Integer is indicated by the Definition Block table header's Revision field. A Revision field value less than 2 indicates that the size of an Integer is 32 bits. A value greater than or equal to 2 signifies that the size of an Integer is 64 bits. (See the conversion rules for the Integer and Buffer data types.)

<b>To convert from an object of this Data Type</b>	<b>To an object of this Data Type</b>	<b>This action is performed by the AML Interpreter:</b>
Integer	Buffer	If no buffer object exists, a new buffer object is created based on the size of the integer (4 bytes for 32-bit integers and 8 bytes for 64-bit integers). If a buffer object already exists, the Integer overwrites the entire Buffer object. If the integer requires more bits than the size of the Buffer, then the integer is truncated before being copied to the Buffer. If the integer contains fewer bits than the size of the buffer, the Integer is zero-extended to fill the entire buffer.
	Buffer Field	The Integer overwrites the entire Buffer Field. If the integer is smaller than the size of the buffer field, it is zero-extended. If the integer is larger than the size of the buffer field, the upper bits are truncated. Compatibility Note: This conversion was first introduced in ACPI 2.0. The behavior in ACPI 1.0 was undefined.
	Debug Object	The integer is displayed as a hexadecimal value.
	Field Unit	The Integer overwrites the entire Field Unit. If the integer is smaller than the size of the buffer field, it is zero-extended. If the integer is larger than the size of the buffer field, the upper bits are truncated.
	String	If no string object exists, a new string object is created based on the size of the integer (8 characters for 32-bit integers and 16 characters for 64-bit integers). If the string already exists, it is completely overwritten and truncated or extended to accommodate the converted integer exactly. In either case, the entire integer is converted to a string of hexadecimal ASCII characters.
Package	Package	If no package object exists, a new package object is created. If the package already exists, it is completely overwritten and truncated or extended to accommodate the source package exactly. Any and all existing valid (non-null) package elements of the target package are deleted, and the entire contents of the source package are copied into the target package.
	Debug Object	Each element of the package is displayed based on its type.

<u>To convert from an object of this Data Type</u>	<u>To an object of this Data Type</u>	<b>This action is performed by the AML Interpreter:</b>
String	Buffer	If no buffer object exists, a new buffer object is created. If a buffer object already exists, it is completely overwritten. If the string is longer than the buffer, the string is truncated before copying. If the string is shorter than the buffer, the remaining buffer bytes are set to zero. In either case, the string is treated as a buffer, with each ASCII string character copied to one buffer byte, including the null terminator. A null (zero-length) string will be converted to a zero-length buffer.
	Buffer Field	The string is treated as a buffer. If this buffer is smaller than the size of the buffer field, it is zero extended. If the buffer is larger than the size of the buffer field, the upper bits are truncated. Compatibility Note: This conversion was first introduced in ACPI 2.0. The behavior in ACPI 1.0 was undefined.
	Debug Object	Each string character is displayed as an ASCII character.
	Field Unit	Each character of the string is written, starting with the first, to the Field Unit. If the Field Unit is less than eight bits, then the upper bits of each character are lost. If the Field Unit is greater than eight bits, then the additional bits are zeroed.
	Integer	If no integer object exists, a new integer is created. The integer is initialized to the value zero and the ASCII string is interpreted as a hexadecimal constant. Each string character is interpreted as a hexadecimal value ('0'-'9', 'A'-'F', 'a'-'f'), starting with the first character as the most significant digit, and ending with the first non-hexadecimal character, end-of-string, or when the size of an integer is reached (8 characters for 32-bit integers and 16 characters for 64-bit integers). Note: the first non-hex character terminates the conversion without error, and a "0x" prefix is not allowed. Conversion of a null (zero-length) string to an integer is not allowed.

### 19.3.5.8 Rules for Storing and Copying Objects

The table below lists the actions performed when storing objects to different types of named targets. ASL provides the following types of “store” operations:

- The Store operator is used to explicitly store an object to a location, with implicit conversion support of the source object.
- Many of the ASL operators can store their result optionally into an object specified by the last parameter. In these operators, if the destination is specified, the action is exactly as if a Store operator had been used to place the result in the destination.
- The CopyObject operator is used to explicitly store a copy of an object to a location, with no implicit conversion support.

**Table 19-420 Object Storing and Copying Rules**

<b>When Storing an object of any data type to this type of Target location</b>	<b>This action is performed by the <u>Store</u> operator or any ASL operator with a <u>Target</u> operand:</b>	<b>This action is performed by the <u>CopyObject</u> operator:</b>
Method ArgX variable	The object is copied to the destination with no conversion applied, with one exception. If the ArgX contains an Object Reference, an automatic de-reference occurs and the object is copied to the target of the Object Reference instead of overwriting the contents of ArgX	
Method LocalX variable	The object is copied to the destination with no conversion applied. Even if LocalX contains an Object Reference, it is overwritten.	
Field Unit or Buffer Field	The object is copied to the destination after implicit result conversion is applied	Fields permanently retain their type and cannot be changed. Therefore, CopyObject can only be used to copy an object of type Integer or Buffer to fields.
Named data object	The object is copied to the destination after implicit result conversion is applied to match the existing type of the named location	The object and type are copied to the named location.

### 19.3.5.9 Rules for Reading and Writing Objects

In the descriptions below, read operations always return the actual object, not a copy of the object in order that constructs of the form:

Add (Local 1, Local 2, Local 3)

do not create unnecessary copies of Local1 or Local2. Also, this behavior enables the call-by-reference semantics of control method invocation.

#### 19.3.5.9.1 ArgX Objects

1. Read from ArgX parameters
  - **ObjectReference** - Automatic dereference, return the target of the reference. Use of DeRefOf returns the same.
  - **Buffer** – Return the Buffer. Can create an Index, Field, or Reference to the buffer.
  - **Package** – Return the Package. Can create an Index or Reference to the package.
  - **All other object types** – Return the object.

Example method invocation for the table below:

MTHD (RefOf (Obj), Buf, Pkg, Obj)

**Table 19-421 Reading from ArgX Objects**

Parameter	MTHD ArgX Type	Read operation on ArgX	Result of read
RefOf ( <i>Obj</i> ),	Reference to object <i>Obj</i>	Store (Arg0, ...) CopyObject (Arg0, ...) DeRefOf (Arg0)	Obj Obj Obj
Buf,	Buffer	Store (Arg1, ...) CopyObject (Arg1, ...) Index (Arg1, ...) Field (Arg1, ...)	Buf Buf Index ( <i>Buf</i> ) Field ( <i>Buf</i> )
Pkg	Package	Store (Arg2, ...) CopyObject (Arg2, ...) Index (Arg2, ...)	Pkg Pkg Index ( <i>Pkg</i> )
Obj	All other object types	Store (Arg3, ...) CopyObject (Arg3, ...)	Obj Obj

2. Store to ArgX parameters

- **ObjectReference** objects - Automatic dereference, copy the object and overwrite the final target.
- **All other object types**- Copy the object and overwrite the ArgX variable. (Direct writes to buffer or package ArgX parameters will also simply overwrite ArgX)

**Table 19-422 Writing to ArgX Objects**

Current type of ArgX	Object to be written	Write operation on ArgX	Result of write (in ArgX)
RefOf ( <i>OldObj</i> )	Obj (Any type)	Store (... , ArgX) CopyObject (... , ArgX)	RefOf (copy of <i>Obj</i> ) RefOf (copy of <i>Obj</i> )
All other object types	Obj (Any type)	Store (... , ArgX) CopyObject (... , ArgX)	Copy of <i>Obj</i> Copy of <i>Obj</i>

**Note:** RefOf (ArgX) returns a reference to ArgX.

### 19.3.5.9.2 LocalX Objects

1. Read from LocalX variables

- **ObjectReference** - If performing a DeRefOf return the target of the reference. Otherwise, return the reference.
- **All other object types** - Return a the object

**Table 19-423 Reading from LocalX Objects**

Current LocalX Type	Read operation on LocalX	Result of read
RefOf ( <i>Obj</i> )	Store (LocalX, ...) CopyObject (LocalX, ...) DeRefOf (LocalX)	RefOf ( <i>Obj</i> ) RefOf ( <i>Obj</i> ) Obj
<i>Obj</i> (All other types)	Store (LocalX, ...) CopyObject (LocalX, ...)	Obj Obj

2. Store to LocalX variables

- **All object types** - Delete any existing object in LocalX first, then store a copy of the object.

**Table 19-424 Writing to LocalX Objects**

Current LocalX Type	Object to be written	Write operation on LocalX	Result of write (in LocalX)
All object types	Obj (Any type)	Store (... , LocalX) CopyObject (... , LocalX)	Copy of <i>Obj</i> Copy of <i>Obj</i>

### 19.3.5.9.3 Named Objects

1. Read from Named object

- **ObjectReference** - If performing a DeRefOf return the target of the reference. Otherwise, return the reference.
- **All other object types** - Return the object

**Table 19-425 Reading from Named Objects**

Current NAME Type	Read operation on NAME	Result of read
RefOf ( <i>Obj</i> )	Store (NAME, ...) CopyObject (NAME, ...) DeRefOf (NAME)	RefOf ( <i>Obj</i> ) RefOf ( <i>Obj</i> ) Obj
<i>Obj</i> (All other types)	Store (NAME, ...) CopyObject (NAME, ...)	Obj Obj

2. Store to Named object

- **All object types** - Delete any existing object in NAME first, then store a copy of the object. The Store operator will perform an implicit conversion to the existing type in NAME. CopyObject does not perform an implicit store.

**Table 19-426 Writing to Named Objects**

<b>Current NAME Type</b>	<b>Object to be written</b>	<b>Write operation on NAME</b>	<b>Result of write (in NAME)</b>
Any (Any Type)	Obj (Any type)	Store (... , NAME) CopyObject (... , NAME)	Copy of <i>Obj</i> (converted to match existing type of NAME) Copy of <i>Obj</i> (No conversion)

## 19.4 ASL Operator Summary

<b>Operator Name</b>	<b>Location</b>	<b>Description</b>
AccessAs	page 942	Change Field Access
Acquire	page 943	Acquire a mutex
Add	page 943	Integer Add
Alias	page 943	Define a name alias
And	page 944	Integer Bitwise And
ArgX	page 944	Method argument data objects
BankField	page 944	Declare fields in a banked configuration object
Break	page 946	Continue following the innermost enclosing While
BreakPoint	page 946	Used for debugging, stops execution in the debugger
Buffer	page 946	Declare Buffer object
Case	page 948	Expression for conditional execution
Concatenate	page 948	Concatenate two strings, integers or buffers
ConcatenateResTemplate	page 950	Concatenate two resource templates
CondRefOf	page 950	Conditional reference to an object
Connection	page 951	Declare Field Connection Attributes
Continue	page 952	Continue innermost enclosing While loop
CopyObject	page 952	Copy and existing object
CreateBitField	page 952	Declare a bit field object of a buffer object
CreateByteField	page 952	Declare a byte field object of a buffer object
CreateDWordField	page 953	Declare a DWord field object of a buffer object
CreateField	page 953	Declare an arbitrary length bit field of a buffer object
CreateQWordField	page 953	Declare a QWord field object of a buffer object
CreateWordField	page 954	Declare a Word field object of a buffer object
DataTableRegion	page 954	Declare a Data Table Region
Debug	page 954	Debugger output
Decrement	page 955	Decrement an Integer

<b>Operator Name</b>	<b>Location</b>	<b>Description</b>
Default	page 955	Default execution path in Switch()
DefinitionBlock	page 956	Declare a Definition Block
DerefOf	page 956	Dereference an object reference
Device	page 957	Declare a bus/device object
Divide	page 958	Integer Divide
DMA	page 958	DMA Resource Descriptor macro
DWordIO	page 959	DWord IO Resource Descriptor macro
DWordMemory	page 961	DWord Memory Resource Descriptor macro
DWordSpace	page 963	DWord Space Resource Descriptor macro
Eisald	page 964	EISA ID String to Integer conversion macro
Else	page 964	Alternate conditional execution
Elseif	page 965	Conditional execution
EndDependentFn	page 966	End Dependent Function
Event	page 966	Resource Descriptor macro
ExtendedIO	page 967	Declare an event synchronization object
ExtendedMemory	page 968	Extended IO Resource Descriptor macro
ExtendedSpace	page 970	Extended Space Resource Descriptor macro
External	page 971	Declare external objects
Fatal	page 972	Fatal error check
Field	page 972	Declare fields of an operation region object
FindSetLeftBit	page 975	Index of first least significant bit set
FindSetRightBit	page 975	Index of first most significant bit set
FixedDMA	page 980	Fixed DMA Resource Descriptor macro
FixedIO	page 976	Fixed I/O Resource Descriptor macro
<b>Fprintf</b>	page 978	Stores formatted string to a Named Object
FromBCD	page 978	Convert from BCD to numeric
Function	page 978	Declare control method
GpioInt	page 980	GPIO Interrupt Connection Resource Descriptor macro
Gpiolo	page 981	GPIO IO Connection Resource Descriptor macro
I2CSerialBusV2	page 982	I2C Serialbus Connection Resource Descriptor (Version 2) macro
If	page 983	Conditional execution
Include	page 983	Include another ASL file
Increment	page 984	Increment a Integer

<b>Operator Name</b>	<b>Location</b>	<b>Description</b>
Index	page 986	Indexed Reference to member object
IndexField	page 987	Declare Index/Data Fields
Interrupt	page 987	Interrupt Resource Descriptor macro
IO	page 989	IO Resource Descriptor macro
IRQ	page 990	Interrupt Resource Descriptor macro
IRQNoFlags	page 990	Short Interrupt Resource Descriptor macro
LAnd	page 990	Logical And
LEqual	page 991	Logical Equal
LGreater	page 991	Logical Greater
LGreaterEqual	page 991	Logical Not less
LLess	page 992	Logical Less
LLessEqual	page 992	Logical Not greater
LNot	page 993	Logical Not
LNotEqual	page 993	Logical Not equal
Load	page 993	Load differentiating definition block
LoadTable	page 994	Load Table from RSDT/XSDT
LocalX	page 995	Method local data objects
LOr	page 995	Logical Or
Match	page 995	Search for match in package array
Memory24	page 996	Memory Resource Descriptor macro
Memory32	page 997	Memory Resource Descriptor macro
Memory32Fixed	page 998	Memory Resource Descriptor macro
Method	page 999	Declare a control method
Mid	page 1000	Return a portion of buffer or string
Mod	page 1001	Integer Modulo
Multiply	page 1001	Integer Multiply
Mutex	page 1001	Declare a mutex synchronization object
Name	page 1002	Declare a Named object
<b>NAnd</b>	page 1003	Integer Bitwise Nand
NoOp	page 1003	No operation
NOOr	page 1003	Integer Bitwise Nor
Not	page 1003	Integer Bitwise Not
Notify	page 1004	Notify Object of event

<b>Operator Name</b>	<b>Location</b>	<b>Description</b>
ObjectType	page 1004	Type of object
Offset	page 1004	Set Field Offset within operation range
One	page 1005	Constant One Object (1)
Ones	page 1005	Constant Ones Object (-1)
<b>OperationRegion</b>	page 1006	Declare an operational region
Or	page 1007	Integer Bitwise Or
Package	page 1007	Declare a package object
PowerResource	page 1023	Declare a power resource object
<b>Printf</b>	page 1023	Stores formatted string to Debug Object
Processor	page 1024	Declare a processor package
QWordIO	page 1025	QWord IO Resource Descriptor macro
QWordMemory	page 1027	QWord Memory Resource Descriptor macro
QWordSpace	page 1028	Qword Space Resource Descriptor macro
RawDataBuffer	page 1030	Declare a RawDataBuffer
RefOf	page 1030	Create Reference to an object
Register	page 1031	Generic register Resource Descriptor macro
Release	page 1032	Release a synchronization object
Reset	page 1032	Reset a synchronization object
ResourceTemplate	page 1033	Resource to buffer conversion macro
Return	page 1033	Return from method execution
Revision	page 1032	Constant revision object
Scope	page 1033	Open named scope
ShiftLeft	page 1035	Integer shift value left
ShiftRight	page 1035	Integer shift value right
Signal	page 1035	Signal a synchronization object
SizeOf	page 1036	Get the size of a buffer, string, or package
Sleep	page 1036	Sleep n milliseconds (yields the processor)
SPISerialbusV2	page 1036	SPI Serialbus Connection Resource Descriptor (Version 2) macro
Stall	page 1037	Delay n microseconds (does not yield the processor)
StartDependentFn	page 1038	Start Dependent Function Resource Descriptor macro
StartDependentFnNoPri	page 1038	Start Dependent Function Resource Descriptor macro
Store	page 1039	Store object Integer
Subtract	page 1039	Subtract

<b>Operator Name</b>	<b>Location</b>	<b>Description</b>
Switch	page 1040	Select code to execute based on expression value
ThermalZone	page 1042	Declare a thermal zone package.
Timer	page 1042	Get 64-bit timer value
<b>ToBCD</b>	page 1043	Convert Integer to BCD
ToBuffer	page 1043	Convert data type to buffer
ToDecimalString	page 1044	Convert data type to decimal string
ToHexString	page 1044	Convert data type to hexadecimal string
ToInteger	page 1043	Convert data type to integer
<b>ToPLD</b>	page 1045	Converts a PLD Keyword List into a _PLD buffer
ToString	page 1047	Copy ASCII string from buffer
ToUUID	page 1047	Convert ASCII string to UUID
Unicode	page 1050	String to Unicode conversion macro
UARTSerialBusV2	page 1048	UART SerialBus Connection Resource Descriptor (version2) macro
VendorLong	page 1050	Vendor Resource Descriptor
VendorShort	page 1051	Vendor Resource Descriptor
Wait	page 1051	Wait on an Event
While	page 1052	Conditional loop
WordBusNumber	page 1052	Word Bus number Resource Descriptor macro
WordIO	page 1053	Word IO Resource Descriptor macro
WordSpace	page 1055	Word Space Resource Descriptor macro
<b>Xor</b>	page 1057	Integer Bitwise Xor
Zero	page 1057	Constant Zero object 0

## 19.5 ASL Operator Summary by Type

<b>// ASL compiler controls</b>		
External	page 971	Declare external objects
Include	page 983	Include another ASL file
<b>// ACPI table management</b>		
DefinitionBlock	page 956	Declare a Definition Block
Load	page 994	Load definition block
LoadTable	page 995	Load Table from RSDT/XSDT
<b>// Miscellaneous named object creation</b>		

Alias	page 944	Define a name alias
Buffer	page 946	Declare Buffer object
Device	page 957	Declare a bus/device object
Function	page 978p	Declare a control method
Method	age 999pa ge 1002	Declare a control method
Name	page 1007	Declare a Named object
Package	page 1023	Declare a package object
PowerResource	page 1024	Declare a power resource object
Processor	page 1030	Declare a processor package
RawDataBuffer	page 1033	Declare a RawDataBuffer
Scope	page 1042	Open named scope
ThermalZone		Declare a thermal zone package.
<b>// Operation Regions and Fields</b>		
AccessAs	page 942	Change Field Access
BankField	page 945	Declare fields in a banked configuration object
Connection	page 951	Declare Field Connection Attributes
DataTableRegion	page 954p	Declare a Data Table Region
Field	age 972pa ge 986	Declare fields of an operation region object
IndexField	page 1004	Declare Index/Data Fields
Offset	page 1006	Set Field offset within operation region
OperationRegion		Declare an operational region
<b>// Buffer Fields</b>		
CreateBitField	page 952	Declare a bit field object of a buffer object
CreateByteField	page 952p	Declare a byte field object of a buffer object
CreateDWordField	age 953	Declare a DWord field object of a buffer object
CreateField	page 953p	Declare an arbitrary length bit field of a buffer object
CreateQWordField	age 953pa ge 954	Declare a QWord field object of a buffer object
CreateWordField		Declare a Word field object of a buffer object
<b>// Synchronization</b>		
Acquire	page 943p	Acquire a mutex
Event	age 966	Declare an event synchronization object
Mutex	page 1001	Declare a mutex synchronization object
Notify	page 1004	Notify Object of event
Release	page 1032	Release a synchronization object
Reset	page 1035	Reset a synchronization object
Signal	page 1051	Signal a synchronization object
Wait		Wait on an Event
<b>// Object references</b>		

CondRefOf	page 950	Conditional reference to an object
DerefOf	page 956p	Dereference an object reference
RefOf	age 1030	Create Reference to an object
<b>// Integer arithmetic</b>		
Add	page 943	Integer Add
And	page 944	Integer Bitwise And
Decrement	page 955	Decrement an Integer
Divide	page 958	Integer Divide
FindSetLeftBit	page 975	Index of first least significant bit set
FindSetRightBit	page 984	Index of first most significant bit set
Increment	page 1001	Increment a Integer
Mod	page 1003	Integer Modulo
Multiply	page 1003	Integer Multiply
NAnd	page 1003	Integer Bitwise Nand
NOOr	page 1007	Integer Bitwise Nor
Not	page 1035	Integer Bitwise Not
Or	page 1039	Integer Bitwise Or
ShiftLeft	page 1057	Integer shift value left
ShiftRight		Integer shift value right
Subtract		Integer Subtract
Xor		Integer Bitwise Xor
<b>// Logical operators</b>		
LAnd	page 990	Logical And
LEqual	page 991	Logical Equal
LGreater	page 991	Logical Greater
LGreaterEqual	page 991	Logical Not less
LLess	page 992	Logical Less
LLessEqual	page 993	Logical Not greater
LNot	page 993	Logical Not
LNotEqual	page 995	Logical Not equal
LOr		Logical Or
<b>// Method execution control</b>		

Break	page 946	Continue following the innermost enclosing While
BreakPoint	page 946	Used for debugging, stops execution in the debugger
Case	page 948	Expression for conditional execution
Continue	page 952	Continue innermost enclosing While loop
Default	page 955	Default execution path in Switch()
Else	page 965	Alternate conditional execution
Elseif	page 972	Conditional execution
Fatal	page 983	Fatal error check
If	page 1003	Conditional execution
NoOp	page 1033	No operation
Return	page 1036	Return from method execution
Sleep	page 1040	Sleep n milliseconds (yields the processor)
Stall	page 1052	Delay in microseconds (does not yield the processor)
Switch		Select code to execute based on expression value
While		Conditional loop
<b>// Data type conversion and manipulation</b>		
Concatenate	page 948p	Concatenate two strings,integers or buffers
CopyObject	age 952pa	Copy an existing object
Debug	ge 954pag	Debugger output
Eisald	e 964	EISA ID String to Integer conversion macro
Fprintf	page 978	Stores formatted string to a Named Object
FromBCD	page 978	Convert from BCD to numeric
Index	page 986p	Indexed Reference to member object
Match	age 995pa	Search for match in package array
Mid	ge 1000pa	Return a portion of buffer or string
ObjectType	ge 1004	Type of object
Printf	page 1023	Stores formatted string to Debug Object
SizeOf	page 1036	Get the size of a buffer, string, or package
Store	page 1039	Store object
Timer	page 1042	Get 64-bit timer value
ToBCD	page 1043	Convert Integer to BCD
ToBuffer	page 1043	Convert data type to buffer
ToDecimalString	page 1044	Convert data type to decimal string
ToHexString	page 1044	Convert data type to hexadecimal string
ToInteger	page 1043	Convert data type to integer
ToPLD	page 1045	Converts a PLD Keyword List into a _PLD buffer
ToString	page 1047	Copy ASCII string from buffer
ToUUID	page 1047	Convert ASCII string to UUID
Unicode	page 1050	String to Unicode conversion macro

<b>// Resource Descriptor macros</b>		
ConcatenateResTemplate	page 950	Concatenate two resource templates
DMA	page 958	DMA Resource Descriptor macro
DWordIO	page 959	DWord IO Resource Descriptor macro
DWordMemory	page 961	DWord Memory Resource Descriptor macro
DWordSpace	page 963	DWord Space Resource Descriptor macro
EndDependentFn	page 966	End Dependent Function Resource Descriptor macro Extended I/O
ExtendedIO	page 967	Resource Descriptor macro
ExtendedMemory	page 968	Extended Memory Resource Descriptor macro
ExtendedSpace	page 970	Extended Space Resource Descriptor macro
FixedDMA	page 976	Fixed DMA resource Descriptor macro
FixedIO	page 980	Fixed I/O Resource Descriptor macro
GpioInt	page 981	GPIO Interrupt Connection Resource Descriptor macro
GpioIO	page 982	GPIO IO Connection Resource Descriptor macro
I2CSerialBusV2	page 987	I2C SerialBus Connection Resource Descriptor (Version 2) macro
Interrupt	page 989	Interrupt Resource Descriptor macro
IO	page 990	IO Resource Descriptor macro
IRQ	page 990	Interrupt Resource Descriptor macro
IRQNoFlags	page 996	Short Interrupt Resource Descriptor macro
Memory24	page 997	Memory Resource Descriptor macro
Memory32	page 998	Memory Resource Descriptor macro
Memory32Fixed	page 1025	Memory Resource Descriptor macro
QWordIO	page 1027	Memory Resource Descriptor macro
QWordMemory	page 1028	Memory Resource Descriptor macro
QWordSpace	page 1031	QWord IO Resource Descriptor macro
Register	page 1033	QWord Memory Resource Descriptor macro
ResourceTemplate	page 1036	Qword Space Resource Descriptor macro
SPISerialBusV2	page 1038	Generic register Resource Descriptor macro
StartDependentFn	page 1038	Resource to buffer conversion macro
StartDependentFnNoPri	page 1048	SPI SerialBus Connection Resource Descriptor (Version 2) macro
UARTSerialBusV2	page 1050	Start Dependent Function Resource Descriptor macro
VendorLong	page 1051	Start Dependent Function Resource Descriptor macro
VendorShort	page 1052	UART SerialBus Connection Resource Descriptor (Version 2) macro
WordBusNumber	page 1053	Vendor Resource Descriptor
WordIO	page 1055	Vendor Resource Descriptor
WordSpace		Word Bus number Resource Descriptor macro
		Word IO Resource Descriptor macro
		Word Space Resource Descriptor macro
<b>// Constants</b>		

One	page 1005	Constant One Object (1)
Ones	page 1005	Constant Ones Object (-1)
Revision	page 1032	Constant revision object
Zero	page 1057	Constant Zero object (0)
<b>// Control method objects</b>		
ArgX	page 944	Method argument data objects
LocalX	page 995	Method local data objects

## 19.6 ASL Operator Reference

This section describes each of the ASL operators. The syntax for each operator is given, with a description of each argument and an overall description of the operator behavior. Example ASL code is provided for the more complex operators.

ASL operators can be categorized as follows:

- Named Object creation
- Method execution control (If, Else, While, etc.)
- Integer math
- Logical operators
- Resource Descriptor macros
- Object conversion
- Utility/Miscellaneous

### 19.6.1 AccessAs (Change Field Unit Access)

#### Syntax

`AccessAs (AccessType, AccessAttribute)`

`AccessAs (AccessType, AccessAttribute (AccessLength))`

#### Arguments

`AccessType` is an `AccessTypeKeyword` that specifies the type of access desired (`ByteAcc`, `WordAcc`, etc.). `AccessAttribute` is an optional argument of type `AccessAttributeKeyword` that specifies additional protocols to be used, such as `AttribQuick`, `AttribSendReceive`, etc. `AccessLength` is a required argument for some of the Access Attributes.

#### Description

The `AccessAs` operator is used within a `FieldList` to specify the Access Type, Access Attributes, and Access Length for the remaining `FieldUnits` within the list (or until another `AccessAs` operator is encountered.) It allows `FieldUnits` to have different access types within a single `Field` definition.

Supported `AccessType`s:

- AnyAcc
- ByteAcc
- WordAcc
- DwordAcc

- QWordAcc
- BufferAcc

Supported simple *AccessAttributes* (with SMBus synonyms):

- AttribQuick (*SMBQuick*)
- AttribSendReceive (*SMBSendReceive*)
- AttribByte (*SMBByte*)
- AttribWord (*SMBWord*)
- AttribBlock (*SMBBlock*)
- AttribProcessCall (*SMBProcessCall*)
- AttribBlockProcessCall (*SMBBlockProcessCall*)

Access Attributes that require an *AccessLength* argument:

- AttribBytes (*AccessLength*)
- AttribRawBytes (*AccessLength*)
- AttribRawProcessBytes (*AccessLength*)

## 19.6.2 Acquire (Acquire a Mutex)

### Syntax

**Acquire** (*SyncObject*, *TimeoutValue*) => Boolean

### Arguments

*SyncObject* must be a mutex synchronization object. *TimeoutValue* is evaluated as an Integer.

### Description

Ownership of the Mutex is obtained. If the Mutex is already owned by a different invocation, the current execution thread is suspended until the owner of the Mutex releases it or until at least *TimeoutValue* milliseconds have elapsed. A Mutex can be acquired more than once by the same invocation.

**Note:** For Mutex objects referenced by a \_DLM object, the host OS may also contend for ownership.

This operation returns **True** if a timeout occurred and the mutex ownership was not acquired. A *TimeoutValue* of 0xFFFF (or greater) indicates that there is no timeout and the operation will wait indefinitely.

## 19.6.3 Add (Integer Add)

### Syntax

**Add** (*Addend1*, *Addend2*, *Result*) => Integer

*Result* = *Addend1* + *Addend2* => Integer

*Result* += *Addend* => Integer

### Arguments

*Addend1* and *Addend2* are evaluated as Integers.

## Description

The operands are added and the result is optionally stored into *Result*. Overflow conditions are ignored and the result of overflows simply loses the most significant bits.

### 19.6.4 Alias (Declare Name Alias)

#### Syntax

**Alias** (*SourceObject*, *AliasObject*)

#### Arguments

*SourceObject* is any named object. *AliasObject* is a NameString.

#### Description

Creates a new object named *AliasObject* that refers to and acts exactly the same as *SourceObject*.

*AliasObject* is created as an alias of *SourceObject* in the namespace. The *SourceObject* name must already exist in the namespace. If the alias is to a name within the same definition block, the *SourceObject* name must be logically ahead of this definition in the block.

#### Example

The following example shows the use of an **Alias** term:

```
Ali as (\SUS. SET. EVEN, SSE)
```

### 19.6.5 And (Integer Bitwise And)

#### Syntax

**And** (*Source1*, *Source2*, *Result*) => Integer

*Result* = *Source1* & *Source2* => Integer

*Result* &= *Source* => Integer

#### Arguments

*Source1* and *Source2* are evaluated as Integers.

#### Description

A bitwise AND is performed and the result is optionally stored into *Result*.

### 19.6.6 Argx (Method Argument Data Objects)

#### Syntax

Arg0 | Arg1 | Arg2 | Arg3 | Arg4 | Arg5 | Arg6

## Description

Up to 7 argument-object references can be passed to a control method. On entry to a control method, only the argument objects that are passed are usable.

### 19.6.7 BankField (Declare Bank/Data Field)

#### Syntax

**BankField** (*RegionName*, *BankName*, *BankValue*, *AccessType*, *LockRule*, *UpdateRule*) {*FieldUnitList*}

#### Arguments

*RegionName* is evaluated as a Namestring, and is the name of the host Operation Region.

*BankName* is evaluated as a Namestring, and is the name of the bank selection register.

*BankValue* is the bank selection ID (Integer) that is written to the *BankName* register before the *FieldUnitList* is accessed.

The *AccessType*, *LockRule*, *UpdateRule*, and *FieldUnitList* are the same format as the **Field** operator.

## Description

Accessing the contents of a banked field data object will occur automatically through the proper bank setting, with synchronization occurring on the operation region that contains the *BankName* data variable, and on the Global Lock if specified by the *LockRule*.

This operator creates data field objects. The contents of the created objects are obtained by a reference to a bank selection register.

This encoding is used to define named data field objects whose data values are fields within a larger object selected by a bank-selected register.

## Example

The following is a block of ASL sample code using *BankField*:

- Creates a 4-bit bank-selected register in system I/O space.
- Creates overlapping fields in the same system I/O space that are selected via the bank register.

```
//  
// Define a 256-byte operational region in SystemI0 space  
// and name it G100  
  
OperationRegion (G100, SystemI0, 0x125, 0x100)  
  
// Create some fields in G10 including a 4-bit bank select register  
  
Field (G100, ByteAcc, NoLock, Preserve) {  
    GLB1, 1,  
    GLB2, 1,  
    Offset (1),           // Move to offset for byte 1  
    BNK1, 4  
}
```

```

// Create FETO & FET1 in bank 0 at byte offset 0x30

BankField (GI00, BNK1, 0, ByteAcc, NoLock, Preserve) {
    Offset (0x30),
    FETO, 1,
    FET1, 1
}

// Create BLVL & BAC in bank 1 at the same offset

BankField (GI00, BNK1, 1, ByteAcc, NoLock, Preserve) {
    Offset (0x30),
    BLVL, 7,
    BAC, 1
}

```

## 19.6.8 Break (Break from While)

### Syntax

Break

### Description

**Break** causes execution to continue immediately following the innermost enclosing **While** or **Switch** scope, in the current Method. If there is no enclosing **While** or **Switch** within the current Method, a fatal error is generated.

**Compatibility Note:** In ACPI 1.0, the Break operator continued immediately following the innermost “code package.” Starting in ACPI 2.0, the Break operator was changed to exit the innermost “While” or “Switch” package. This should have no impact on existing code, since the ACPI 1.0 definition was, in practice, useless.

## 19.6.9 BreakPoint (Execution Break Point)

### Syntax

BreakPoint

### Description

Used for debugging, the **Breakpoint** opcode stops the execution and enters the AML debugger. In the non-debug version of the AML interpreter, **BreakPoint** is equivalent to **Noop**.

## 19.6.10 Buffer (Declare Buffer Object)

### Syntax

Buffer (*BufferSize*) {*Initializer*} => Buffer

## Arguments

Declares a Buffer of optional size *BufferSize* and an optional initial value of *Initializer*. The *Initializer* is must be either a *ByteList* or a *String*.

## Description

The optional *BufferSize* argument specifies the size of the buffer and an optional initial value of the buffer is specified via the *Initializer*. The initial value can be either an ASCII String or a list of byte values separated by commas. Strings are automatically null terminated with a single zero byte.

The relationship between the *BufferSize* and the *Initializer* is summarized by the rules below.

In the typical case, the *BufferSize* is identical to the length of the *Initializer*:

```
Name (BUFO, Buffer(4) {0x01, 0x02, 0x03, 0x04}) // Length = 4
```

If the *BufferSize* is not specified, the length of the *Initializer* is used as the buffer size:

```
Name (BUF1, Buffer() {0, 1, 2, 3, 4, 5})// Length = 6
Name (BUF2, Buffer() {"abcde"}) // Length = 6
```

If the *BufferSize* is larger than the length of the *Initializer*, the *BufferSize* is used as the final buffer size. At runtime, the AML interpreter will automatically pad zeros to the *Initializer* to match the *BufferSize*:

```
Name (BUF3, Buffer(1024) {4, 5, 6, 7, 8})// Length = 1024
Name (BUF4, Buffer(1024) {"abcde"})// Length = 1024
```

If the *BufferSize* is smaller than the length of the *Initializer*, the length of the *Initializer* is used as the buffer size:

```
Name (BUF5, Buffer(1) {5, 4, 3, 2, 1}) // Length = 5
```

If the *Initializer* is not specified, the AML interpreter creates a buffer containing all zeros, the length of which matches the *BufferSize*:

```
Name (BUF6, Buffer(32) {}) // Length = 32
```

If neither the *BufferSize* nor the *Initializer* are specified, a buffer of zero length is created:

```
Name (BUF7, Buffer() {}) // Length = 0
```

### 19.6.11 Case (Expression for Conditional Execution)

#### Syntax

**Case** (*Value*) {*TermList*}

#### Arguments

*Value* specifies an Integer, Buffer, String or Package object. *TermList* is a sequence of executable ASL expressions.

#### Description

Execute code based upon the value of a **Switch** statement.

If the **Case Value** is an Integer, Buffer or String, then control passes to the statement that matches the value of the enclosing **Switch (Value)**. If the **Case** value is a Package, then control passes if any member of the package matches the **Switch (Value)**. The **Switch CaseTermList** can include any number of **Case** instances, but no two **Case Values** (or members of a *Value*, if *Value* is a Package) within the same **Switch** statement can contain the same value.

Execution of the statement body begins at the start of the *TermList* and proceeds until the end of the *TermList* body or until a **Break** or **Continue** operator transfers control out of the body.

### 19.6.12 Concatenate (Concatenate Data)

#### Syntax

**Concatenate** (*Source1*, *Source2*, *Result*) => Buffer or String

#### Arguments

*Source1* and *Source2* must each evaluate to any valid ACPI object. For the basic data object types (Integer, String, or Buffer), the value of the object is used in the concatenation. For all other object types (see table 19-378 below), a string object is created that contains the name (type) of the object. This string object is then concatenated according to the rules in [Table 19-427](#).

The data type of *Source1* dictates the required type of *Source2* and the type of the result object. *Source2* is implicitly converted if necessary (and possible) to match the type of *Source1*.

#### Description

*Source2* is concatenated to *Source1* and the result data is optionally stored into *Result*.

**Table 19-427 Concatenate Data Types**

Source1 Data Type	Source2 Data Type (→ Converted Type)	Result Data Type
Integer	Integer/String/Buffer → Integer	Buffer
String	Integer/String/Buffer/All other types → String	String
Buffer	Integer/String/Buffer/All other types → Buffer	Buffer
All other types → String	Integer/String/Buffer/All other types → String	String

For the *Source1/Integer* case, a String or Buffer that cannot be implicitly converted to an Integer will generate a fatal error.

**Table 19-428 Concatenate Object Types**

Data Object Type	Name	Resolved to Value
1	Integer	Integer value of the object
2	String	String value of the object
3	Buffer	Buffer value of the object
Other Object Types	Name	Resolved to String
0	Uninitialized	"[Uninitialized Object]"
4	Package	"[Package]"
5	Field Unit	"[Field]"
6	Device	"[Device]"
7	Event	"[Event]"
8	Control Method	"[Control Method]"
9	Mutex	"[Mutex]"
10	Operation Region	"[Operation Region]"
11	Power Resource	"[Power Resource]"
12	Processor	"[Processor]"
13	Thermal Zone	"[Thermal Zone]"
14	Buffer Field	"[Buffer Field]"
15	DDB Handle	"[DDB Handle]"
16	Debug Object	"[Debug Object]"

## Examples

```

Device (DEVX) {}
Name (PKGX, Package () {1,2,3,"Battery1"})

Method (MTHX, 2)
{
    Concatenate ("My Object: ", DEVX, Debug) // MyObject: Device

    Printf ("PKGX %o contains %o elements\n", PKGX, SizeOf
(PKGX))

    Printf ("Arg0: %o\n", Arg0)
}

```

### 19.6.13 ConcatenateResTemplate (Concatenate Resource Templates)

#### Syntax

**ConcatenateResTemplate** (*Source1*, *Source2*, *Result*) => Buffer

#### Arguments

*Source1* and *Source2* are evaluated as Resource Template buffers.

#### Description

The resource descriptors from *Source2* are appended to the resource descriptors from *Source1*. Then a new end tag and checksum are appended and the result is stored in *Result*, if specified. If either *Source1* or *Source2* is exactly 1 byte in length, a run-time error occurs. An empty buffer is treated as a resource template with only an end tag.

### 19.6.14 CondRefOf (Create Object Reference Conditionally)

#### Syntax

**CondRefOf** (*Source*, *Result*) => Boolean

#### Arguments

Attempts to create a reference to the *Source* object. The *Source* of this operation can be any object type (for example, data package, device object, and so on), and the result data is optionally stored into *Result*.

#### Description

On success, the *Destination* object is set to refer to *Source* and the execution result of this operation is the value **True**. On failure, *Destination* is unchanged and the execution result of this operation is the value **False**. This can be used to reference items in the namespace that may appear dynamically (for example, from a dynamically loaded definition block).

**CondRefOf** is equivalent to **RefOf** except that if the *Source* object does not exist, it is fatal for **RefOf** but not for **CondRefOf**.

## 19.6.15 Connection (Declare Field Connection Attributes)

### Syntax

**Connection** (*ConnectionResourceObj*)

### Arguments

*ConnectionResourceObj* is a GPIO or Serial Bus Connection Descriptor depending on the Operation Region type, or a named object containing the Descriptor

See [Section 6.4.3.8.2](#), "Connection Resource Descriptors" and [Section 19.6.46](#) "Field (Declare Field Objects)" for more information.

### Examples

OperationRegion(TOP1, GenericSerialBus, 0x00, 0x100)// GenericSerialBus device at command value offset zero

```
Name (I2C, ResourceTemplate){
    I2CSerialBusV2(0x5a,,100000,, "\_SB.I2C",,,,RawDataBuffer(){1,6})
}

Field(TOP1, BufferAcc, NoLock, Preserve)
{
    Connection(I2C)                                // Specify connection resource
    information
    AccessAs(BufferAcc, AttribWord)                  // Use the GenericSerialBus
                                                       // Read/Write Word protocol
    FLD0, 8,                                         // Virtual register at command value
0.
    FLD1, 8,                                         // Virtual register at command value
1.

Field(TOP1, BufferAcc, NoLock, Preserve)
{
    Connection(I2CSerialBusV2(0x5b,,100000,, "\_SB.I2C",,,,RawDataBuffer(){3,9}))
    AccessAs(BufferAcc, AttribBytes(16))             // Virtual register at command value
    FLD2, 8
0.
}

// Create the GenericSerialBus data buffer
Name(BUFF, Buffer(34){})                           // Create GenericSerialBus data
buffer as BUFF
CreateByteField(BUFF, 0x00, STAT)                  // STAT = Status (Byte)
CreateWordField(BUFF, 0x02, DATA)                  // DATA = Data (Word)
```

### Description

The Connection macro declares the connection attributes for subsequent fields defined within the Field declaration.

## 19.6.16 Continue (Continue Innermost Enclosing While)

### Syntax

Continue

### Description

**Continue** causes execution to continue at the start of the innermost enclosing **While** scope, in the currently executing Control Method, at the point where the condition is evaluated. If there is no enclosing **While** within the current Method, a fatal error is generated.

## 19.6.17 CopyObject (Copy and Store Object)

### Syntax

**CopyObject** (*Source*, *Destination*) => DataRefObject

### Arguments

Converts the contents of the *Source* to a DataRefObject using the conversion rules in 18.2.5 and then copies the results without conversion to the object referred to by *Destination*.

### Description

If *Destination* is already an initialized object of type DataRefObject, the original contents of *Destination* are discarded and replaced with *Source*. Otherwise, a fatal error is generated.

**Note:** (*Compatibility Note*) The **CopyObject** operator was first introduced new in ACPI 2.0.

## 19.6.18 CreateBitField (Create 1-Bit Buffer Field)

### Syntax

**CreateBitField** (*SourceBuffer*, *BitIndex*, *BitFieldName*)

### Arguments

*SourceBuffer* is evaluated as a buffer. *BitIndex* is evaluated as an integer. *BitFieldName* is a NameString.

### Description

A new buffer field object named *BitFieldName* is created for the bit of *SourceBuffer* at the bit index of *BitIndex*. The bit-defined field within *SourceBuffer* must exist. *BitFieldName* is created for the bit of *SourceBuffer* at the bit index of *BitIndex*. The bit-defined field within *SourceBuffer* must exist.

## 19.6.19 CreateByteField (Create 8-Bit Buffer Field)

### Syntax

**CreateByteField** (*SourceBuffer*, *ByteIndex*, *ByteFieldName*)

## Arguments

*SourceBuffer* is evaluated as a buffer. *ByteIndex* is evaluated as an integer. *ByteFieldName* is a NameString.

## Description

A new buffer field object named *ByteFieldName* is created for the byte of *SourceBuffer* at the byte index of *ByteIndex*. The byte-defined field within *SourceBuffer* must exist.

### 19.6.20 CreateDWordField (Create 32-Bit Buffer Field)

#### Syntax

**CreateDWordField** (*SourceBuffer*, *ByteIndex*, *DWordFieldName*)

#### Arguments

*SourceBuffer* is evaluated as a buffer. *ByteIndex* is evaluated as an integer. *DWordFieldName* is a NameString.

## Description

A new buffer field object named *DWordFieldName* is created for the DWord of *SourceBuffer* at the byte index of *ByteIndex*. The DWord-defined field within *SourceBuffer* must exist.

### 19.6.21 CreateField (Create Arbitrary Length Buffer Field)

#### Syntax

**CreateField** (*SourceBuffer*, *BitIndex*, *NumBits*, *FieldName*)

#### Arguments

*SourceBuffer* is evaluated as a buffer. *BitIndex* and *NumBits* are evaluated as integers. *FieldName* is a NameString.

## Description

A new buffer field object named *FieldName* is created for the bits of *SourceBuffer* at *BitIndex* for *NumBits*. The entire bit range of the defined field within *SourceBuffer* must exist. If *NumBits* evaluates to zero, a fatal exception is generated.

### 19.6.22 CreateQWordField (Create 64-Bit Buffer Field)

#### Syntax

**CreateQWordField** (*SourceBuffer*, *ByteIndex*, *QWordFieldName*)

#### Arguments

*SourceBuffer* is evaluated as a buffer. *ByteIndex* is evaluated as an integer. *QWordFieldName* is a NameString.

## Description

A new buffer field object named *QWordFieldName* is created for the QWord of *SourceBuffer* at the byte index of *ByteIndex*. The QWord-defined field within *SourceBuffer* must exist.

### 19.6.23 CreateWordField (Create 16-Bit Buffer Field)

#### Syntax

**CreateWordField** (*SourceBuffer*, *ByteIndex*, *WordFieldName*)

#### Arguments

*SourceBuffer* is evaluated as a buffer. *ByteIndex* is evaluated as an integer. *WordFieldName* is a NameString.

## Description

A new bufferfield object named *WordFieldName* is created for the word of *SourceBuffer* at the byte index of *ByteIndex*. The word-defined field within *SourceBuffer* must exist.

### 19.6.24 DataTableRegion (Create Data Table Operation Region)

#### Syntax

**DataTableRegion** (*RegionName*, *SignatureString*, *OemIDString*, *OemTableIDString*)

#### Arguments

Creates a new region named *RegionName*. *SignatureString*, *OemIDString* and *OemTableIDString* are evaluated as strings.

## Description

A Data Table Region is a special Operation Region whose RegionSpace is SystemMemory. Any table referenced by a Data Table Region must be in memory marked by AddressRangeReserved or AddressRangeNVS.

The memory referred to by the Data Table Region is the memory that is occupied by the table referenced in XSDT that is identified by *SignatureString*, *OemIDString* and *OemTableIDString*. Any Field object can reference *RegionName*.

The base address of a Data Table region is the address of the first byte of the header of the table identified by *SignatureString*, *OemIDString* and *OemTableIDString*. The length of the region is the length of the table.

### 19.6.25 Debug (Debugger Output)

#### Syntax

Debug

## Description

The debug data object is a virtual data object. Writes to this object provide debugging information. On at least debug versions of the interpreter, any writes into this object are appropriately displayed on the system's native kernel debugger. All writes to the debug object are otherwise benign. If the system is in use without a kernel debugger, then writes to the debug object are ignored. The following table relates the ASL term types that can be written to the Debug object to the format of the information on the kernel debugger display.

**Table 19-429 Debug Object Display Formats**

ASL Term Type	Display Format
Numeric data object	All digits displayed in hexadecimal format.
String data object	String is displayed.
Object reference	Information about the object is displayed (for example, object type and object name), but the object is not evaluated.

The Debug object is a write-only object; attempting to read from the debug object is not supported.

## 19.6.26 Decrement (Integer Decrement)

### Syntax

**Decrement (Minuend) => Integer**

*Minuend*-- => Integer

### Arguments

*Minuend* is evaluated as an Integer.

## Description

This operation decrements the *Minuend* by one and the result is stored back to *Minuend*. Equivalent to **Subtract (Minuend, 1, Minuend)**. Underflow conditions are ignored and the result is Ones.

## 19.6.27 Default (Default Execution Path in Switch)

### Syntax

**Default {TermList}**

### Arguments

*TermList* is a sequence of executable ASL expressions.

## Description

Within the body of a **Switch** (page 1040) statement, the statements specified by *TermList* will be executed if no **Case** (page 948) statement value matches the Switch statement value. If **Default** is omitted and no **Case** match is found, none of the statements in the Switch body are executed. There can be at most one **Default** statement in the immediate scope of the parent Switch statement. The **Default** statement can appear anywhere in the body of the **Switch** statement.

## 19.6.28 DefinitionBlock (Declare Definition Block)

### Syntax

**DefinitionBlock** (*AMLFileName*, *TableSignature*, *ComplianceRevision*, *OEMID*, *TableID*, *OEMRevision*)  
 {*TermList*}

### Arguments

*AMLFileName* is a string that specifies the desired name of the translated output AML file. If the *AMLFileName* is a NULL (zero length) string, the ASL compiler will automatically create the filename (typically generated from the input filename/pathname). *TableSignature* is a string that contains the 4-character ACPI signature. *ComplianceRevision* is an 8-bit value. *OEMID* is a 6-character string, *TableID* is an 8-character string, and *OEMRevision* is a 32-bit value. *TermList* is a sequence of executable ASL expressions.

If multiple **DefinitionBlocks** are defined in the same ASL file, the first **DefinitionBlock** defines the output *AMLFileName* as per the rule above.

### Description

The **DefinitionBlock** term specifies the unit of data and/or AML code that the OS will load as part of the Differentiated Definition Block or as part of an additional Definition Block.

This unit of data and/or AML code describes either the base system or some large extension (such as a docking station). The entire **DefinitionBlock** will be loaded and compiled by the OS as a single unit.

System software loads a definition block by referencing the objects in the *TermList* package in order. The object list is encoded as *TermList*, so that rather than describing a static object list, it is possible to describe a dynamic object list according to the system settings. See "[Section 5.4.2](#), Definition Block Loading."

Note: For compatibility with ACPI versions before ACPI 2.0, the bit width of Integer objects is dependent on the *ComplianceRevision* of the DSDT. If the *ComplianceRevision* is less than 2, all integers are restricted to 32 bits. Otherwise, full 64-bit integers are used. The version of the DSDT sets the global integer width for all integers, including integers in SSDTs.

## 19.6.29 DerefOf (Dereference an Object Reference)

### Syntax

**DerefOf** (*Source*) => Object

### Arguments

Returns the object referred by the *Source* object reference.

### Description

If the *Source* evaluates to an object reference, the actual contents of the object referred to are returned. If the *Source* evaluates to a string, the string is evaluated as an ASL name (relative to the current scope) and the contents of that object are returned. If the object specified by *Source* does not exist then a fatal error is generated. If the object specified is a reference generated by the Index() operator and refers to an uninitialized package element, then a fatal error is generated.

**Note:** (*Compatibility Note*) The use of a String with *DerefOf* was first introduced in ACPI 2.0.

### 19.6.30 Device (Declare Device Package)

#### Syntax

**Device** (*DeviceName*) {*TermList*}

#### Arguments

Creates a Device object of name *DeviceName*, which represents a processor, a bus or a device, or any other similar hardware. Device opens a name scope.

#### Description

A Device Package is one of the basic ways the Differentiated Definition Block describes the hardware devices in the system to the operating software. Each Device Package is defined somewhere in the hierarchical namespace corresponding to that device's location in the system. Within the namespace of the device are other names that provide information and control of the device, along with any sub-devices that in turn describe sub-devices, and so on.

For any device, the platform runtime firmware provides only information that is added to the device in a non-hardware standard manner. This type of value-added function is expressible in the ACPI Definition Block such that operating software can use the function.

The platform runtime firmware supplies Device Objects only for devices that are obtaining some system-added function outside the device's normal capabilities and for any Device Object required to fill in the tree for such a device. For example, if the system includes a PCI device (integrated or otherwise) with no additional functions such as power management, the platform runtime firmware would not report such a device; however, if the system included an integrated ISA device below the integrated PCI device (device is an IS bridge), then the system would include a Device Package for the ISA device with the minimum feature being added being the ISA device's ID and configuration information and the parent PCI device, because it is required to get the ISA Device Package placement in the namespace correct.

The device object list is encoded as *TermList*, so that rather than describing a static device object list, it is possible to describe a dynamic device object list according to the system settings. See "[Section 5.4.2, Definition Block Loading](#)."

#### Example

The following block of ASL sample code shows a nested use of Device objects to describe an IDE controller connected to the root PCI bus.

```
Device (IDEO) {                                // primary controller
    Name (_ADR, 0)                            // put PCI Address (device/function) here
                                                // define region for IDE mode register
    OperationRegion (PCI_C, PCI_Config, 0x50, 0x10)
    Field (PCI_C, AnyAcc, NoLock, Preserve) {
        ...
    }
}
```

```

Device (PRIM) {           // Primary adapter
    Name (_ADR, 0)        // Primary adapter = 0
    ...
    Method (_STM, 2) {
        ...
    }
    Method (_GTM) {
        ...
    }
    Device (MSTR) {       // master channel
        Name (_ADR, 0)
        Name (_PRO, Package () {0, PIDE})
        ...
        Name (_GTF) {
            ...
        }
    }
    Device (SLAV) {
        Name (_ADR, 1)
        Name (_PRO, Package () {0, PIDE})
        Name (_GTF) {
            ...
        }
    }
}
}

```

### 19.6.31 Divide (Integer Divide)

#### Syntax

**Divide** (*Dividend*, *Divisor*, *Remainder*, *Result*) => Integer

*Result* = *Dividend* / *Divisor* => Integer

*Result* /= *Divisor* => Integer

#### Arguments

*Dividend* and *Divisor* are evaluated as Integers.

#### Description

*Dividend* is divided by *Divisor*, then the resulting remainder is optionally stored into *Remainder* and the resulting quotient is optionally stored into *Result*. Divide-by-zero exceptions are fatal.

The function return value is the *Result* (*quotient*).

### 19.6.32 DMA (DMA Resource Descriptor Macro)

#### Syntax

**DMA** (*DmaType*, *IsBusMaster*, *DmaTransferSize*, *DescriptorName*) {*DmaChannelList*} => Buffer

## Arguments

*DmaType* specifies the type of DMA cycle: ISA compatible (**Compatibility**), EISA Type A (**TypeA**), EISA Type B (**TypeB**) or EISA Type F (**TypeF**). The 2-bit field *DescriptorName.\_TYP* is automatically created to refer to this portion of the resource descriptor, where '0' is Compatibility, '1' is TypeA, '2' is TypeB and '3' is TypeF.

*IsBusMaster* specifies whether this device can generate DMA bus master cycles (**BusMaster**) or not (**NotBusMaster**). If nothing is specified, then BusMaster is assumed. The 1-bit field *DescriptorName.\_BM* is automatically created to refer to this portion of the resource descriptor, where '0' is NotBusMaster and '1' is BusMaster.

*DmaTransferSize* specifies the size of DMA cycles the device is capable of generating: 8-bit (**Transfer8**), 16-bit (**Transfer16**) or both 8 and 16-bit (**Transfer8\_16**). The 2-bit field *DescriptorName.\_SIZ* is automatically created to refer to this portion of the resource descriptor, where '0' is Transfer8, '1' is Transfer8\_16 and '2' is Transfer16.

*DescriptorName* is an optional argument that specifies a name for an integer constant that will be created in the current scope that contains the offset of this resource descriptor within the current resource template buffer. The predefined descriptor field names may be appended to this name to access individual fields within the descriptor via the Buffer Field operators.

*DmaChannelList* is a comma-delimited list of integers in the range 0 through 7 that specify the DMA channels used by the device. There may be no duplicates in the list.

## Description

The **DMA** macro evaluates to a buffer which contains a DMA resource descriptor. The format of the DMA resource descriptor can be found in "DMA Descriptor" (page 420). The macro is designed to be used inside of a ResourceTemplate (page 1033).

### 19.6.33 DWordIO (DWord IO Resource Descriptor Macro)

#### Syntax

**DWordIO** (*ResourceUsage*, *IsMinFixed*, *IsMaxFixed*, *Decode*, *ISARanges*, *AddressGranularity*, *AddressMinimum*, *AddressMaximum*, *AddressTranslation*, *RangeLength*, *ResourceSourceIndex*, *ResourceSource*, *DescriptorName*, *TranslationType*, *TranslationDensity*)

#### Arguments

*ResourceUsage* specifies whether the I/O range is consumed by this device (**ResourceConsumer**) or passed on to child devices (**ResourceProducer**). If nothing is specified, then ResourceConsumer is assumed.

*IsMinFixed* specifies whether the minimum address of this I/O range is fixed (**MinFixed**) or can be changed (**MinNotFixed**). If nothing is specified, then MinNotFixed is assumed. The 1-bit field *DescriptorName.\_MIF* is automatically created to refer to this portion of the resource descriptor, where '1' is MinFixed and '0' is MinNotFixed.

*IsMaxFixed* specifies whether the maximum address of this I/O range is fixed (**MaxFixed**) or can be changed (**MaxNotFixed**). If nothing is specified, then MaxNotFixed is assumed. The 1-bit field

*DescriptorName.\_MAF* is automatically created to refer to this portion of the resource descriptor, where '1' is MaxFixed and '0' is MaxNotFixed.

*Decode* specifies whether or not the device decodes the I/O range using positive (**PosDecode**) or subtractive (**SubDecode**) decode. If nothing is specified, then PosDecode is assumed. The 1-bit field *DescriptorName.\_DEC* is automatically created to refer to this portion of the resource descriptor, where '1' is SubDecode and '0' is PosDecode.

*ISARanges* specifies whether the I/O ranges specifies are limited to valid ISA I/O ranges (**ISAOnly**), valid non-ISA I/O ranges (**NonISAOnly**) or encompass the whole range without limitation (**EntireRange**). The 2-bit field *DescriptorName.\_RNG* is automatically created to refer to this portion of the resource descriptor, where '1' is NonISAOnly, '2' is ISAOnly and '0' is EntireRange.

*AddressGranularity* evaluates to a 32-bit integer that specifies the power-of-two boundary (- 1) on which the I/O range must be aligned. The 32-bit field *DescriptorName.\_GRA* is automatically created to refer to this portion of the resource descriptor.

*AddressMinimum* evaluates to a 32-bit integer that specifies the lowest possible base address of the I/O range. The value must have '0' in all bits where the corresponding bit in *AddressGranularity* is '1'. For bridge devices which translate addresses, this is the address on the secondary bus. The 32-bit field *DescriptorName.\_MIN* is automatically created to refer to this portion of the resource descriptor.

*AddressMaximum* evaluates to a 32-bit integer that specifies the highest possible base address of the I/O range. The value must have '0' in all bits where the corresponding bit in *AddressGranularity* is '1'. For bridge devices which translate addresses, this is the address on the secondary bus. The 32-bit field *DescriptorName.\_MAX* is automatically created to refer to this portion of the resource descriptor.

*AddressTranslation* evaluates to a 32-bit integer that specifies the offset to be added to a secondary bus I/O address which results in the corresponding primary bus I/O address. For all non-bridge devices or bridges which do not perform translation, this must be '0'. The 32-bit field *DescriptorName.\_TRA* is automatically created to refer to this portion of the resource descriptor.

*RangeLength* evaluates to a 32-bit integer that specifies the total number of bytes decoded in the I/O range. The 32-bit field *DescriptorName.\_LEN* is automatically created to refer to this portion of the resource descriptor.

*ResourceSourceIndex* is an optional argument which evaluates to an 8-bit integer that specifies the resource descriptor within the object specified by *ResourceSource*. If this argument is specified, the *ResourceSource* argument must also be specified.

*ResourceSource* is an optional argument which evaluates to a string containing the path of a device which produces the pool of resources from which this I/O range is allocated. If this argument is specified, but the *ResourceSourceIndex* argument is not specified, a value of zero is assumed.

*DescriptorName* is an optional argument that specifies a name for an integer constant that will be created in the current scope that contains the offset of this resource descriptor within the current resource template buffer. The predefined descriptor field names may be appended to this name to access individual fields within the descriptor via the Buffer Field operators.

*TranslationType* is an optional argument that specifies whether the resource type on the secondary side of the bus is different (**TypeTranslation**) from that on the primary side of the bus or the same (**TypeStatic**). If TypeTranslation is specified, then the primary side of the bus is Memory. If TypeStatic is specified, then the primary side of the bus is I/O. If nothing is specified, then TypeStatic is assumed. The

1-bit field *DescriptorName.\_TTP* is automatically created to refer to this portion of the resource descriptor, where '1' is TypeTranslation and '0' is TypeStatic. See *\_TTP* (page 443) for more information

*TranslationDensity* is an optional argument that specifies whether or not the translation from the primary to secondary bus is sparse (**SparseTranslation**) or dense (**DenseTranslation**). It is only used when *TranslationType* is **TypeTranslation**. If nothing is specified, then DenseTranslation is assumed. The 1-bit field *DescriptorName.\_TRS* is automatically created to refer to this portion of the resource descriptor, where '1' is SparseTranslation and '0' is DenseTranslation. See *\_TRS* (page 444) for more information.

## Description

The **DWordIO** macro evaluates to a buffer which contains a 32-bit I/O range resource descriptor. The format of the 32-bit I/O range resource descriptor can be found in "DWord Address Space Descriptor" (page 435). The macro is designed to be used inside of a ResourceTemplate (page 1033).

### 19.6.34 DWordMemory (DWord Memory Resource Descriptor Macro)

#### Syntax

**DWordMemory** (*ResourceUsage*, *Decode*, *IsMinFixed*, *IsMaxFixed*, *Cacheable*, *ReadAndWrite*, *AddressGranularity*, *AddressMinimum*, *AddressMaximum*, *AddressTranslation*, *RangeLength*, *ResourceSourceIndex*, *ResourceSource*, *DescriptorName*, *MemoryRangeType*, *TranslationType*)

#### Arguments

*ResourceUsage* specifies whether the Memory range is consumed by this device (**ResourceConsumer**) or passed on to child devices (**ResourceProducer**). If nothing is specified, then ResourceConsumer is assumed.

*Decode* specifies whether or not the device decodes the Memory range using positive (**PosDecode**) or subtractive (**SubDecode**) decode. If nothing is specified, then PosDecode is assumed. The 1-bit field *DescriptorName.\_DEC* is automatically created to refer to this portion of the resource descriptor, where '1' is SubDecode and '0' is PosDecode.

*IsMinFixed* specifies whether the minimum address of this Memory range is fixed (**MinFixed**) or can be changed (**MinNotFixed**). If nothing is specified, then MinNotFixed is assumed. The 1-bit field *DescriptorName.\_MIF* is automatically created to refer to this portion of the resource descriptor, where '1' is MinFixed and '0' is MinNotFixed.

*IsMaxFixed* specifies whether the maximum address of this Memory range is fixed (**MaxFixed**) or can be changed (**MaxNotFixed**). If nothing is specified, then MaxNotFixed is assumed. The 1-bit field *DescriptorName.\_MAF* is automatically created to refer to this portion of the resource descriptor, where '1' is MaxFixed and '0' is MaxNotFixed.

*Cacheable* specifies whether or not the memory region is cacheable (**Cacheable**), cacheable and write-combining (**WriteCombining**), cacheable and prefetchable (**Prefetchable**) or uncacheable (**NonCacheable**). If nothing is specified, then NonCacheable is assumed. The 2-bit field *DescriptorName.\_MEM* is automatically created to refer to this portion of the resource descriptor, where '1' is Cacheable, '2' is WriteCombining, '3' is Prefetchable and '0' is NonCacheable.

*ReadAndWrite* specifies whether or not the memory region is read-only (**ReadOnly**) or read/write (**ReadWrite**). If nothing is specified, then ReadWrite is assumed. The 1-bit field *DescriptorName.\_RW* is

automatically created to refer to this portion of the resource descriptor, where '1' is ReadWrite and '0' is ReadOnly.

*AddressGranularity* evaluates to a 32-bit integer that specifies the power-of-two boundary (- 1) on which the Memory range must be aligned. The 32-bit field *DescriptorName.\_GRA* is automatically created to refer to this portion of the resource descriptor.

*AddressMinimum* evaluates to a 32-bit integer that specifies the lowest possible base address of the Memory range. The value must have '0' in all bits where the corresponding bit in *AddressGranularity* is '1'. For bridge devices which translate addresses, this is the address on the secondary bus. The 32-bit field *DescriptorName.\_MIN* is automatically created to refer to this portion of the resource descriptor.

*AddressMaximum* evaluates to a 32-bit integer that specifies the highest possible base address of the Memory range. The value must have '0' in all bits where the corresponding bit in *AddressGranularity* is '1'. For bridge devices which translate addresses, this is the address on the secondary bus. The 32-bit field *DescriptorName.\_MAX* is automatically created to refer to this portion of the resource descriptor.

*AddressTranslation* evaluates to a 32-bit integer that specifies the offset to be added to a secondary bus I/O address which results in the corresponding primary bus I/O address. For all non-bridge devices or bridges which do not perform translation, this must be '0'. The 32-bit field *DescriptorName.\_TRA* is automatically created to refer to this portion of the resource descriptor.

*RangeLength* evaluates to a 32-bit integer that specifies the total number of bytes decoded in the Memory range. The 32-bit field *DescriptorName.\_LEN* is automatically created to refer to this portion of the resource descriptor.

*ResourceSourceIndex* is an optional argument which evaluates to an 8-bit integer that specifies the resource descriptor within the object specified by *ResourceSource*. If this argument is specified, the *ResourceSource* argument must also be specified.

*ResourceSource* is an optional argument which evaluates to a string containing the path of a device which produces the pool of resources from which this Memory range is allocated. If this argument is specified, but the *ResourceSourceIndex* argument is not specified, a zero value is assumed.

*DescriptorName* is an optional argument that specifies a name for an integer constant that will be created in the current scope that contains the offset of this resource descriptor within the current resource template buffer. The predefined descriptor field names may be appended to this name to access individual fields within the descriptor via the Buffer Field operators.

*MemoryRangeType* is an optional argument that specifies the memory usage. The memory can be marked as normal (**AddressRangeMemory**), used as ACPI NVS space (**AddressRangeNVS**), used as ACPI reclaimable space (**AddressRangeACPI**) or as system reserved (**AddressRangeReserved**). If nothing is specified, then AddressRangeMemory is assumed. The 2-bit field *DescriptorName.\_MTP* is automatically created in order to refer to this portion of the resource descriptor, where '0' is AddressRangeMemory, '1' is AddressRangeReserved, '2' is AddressRangeACPI and '3' is AddressRangeNVS.

*TranslationType* is an optional argument that specifies whether the resource type on the secondary side of the bus is different (**TypeTranslation**) from that on the primary side of the bus or the same (**TypeStatic**). If TypeTranslation is specified, then the primary side of the bus is I/O. If TypeStatic is specified, then the primary side of the bus is Memory. If nothing is specified, then TypeStatic is assumed. The 1-bit field *DescriptorName.\_TTP* is automatically created to refer to this portion of the resource descriptor, where '1' is TypeTranslation and '0' is TypeStatic. See *\_TTP* (page 443) for more information.

## Description

The **DWordMemory** macro evaluates to a buffer which contains a 32-bit memory resource descriptor. The format of the 32-bit memory resource descriptor can be found in “DWord Address Space Descriptor” (page 435). The macro is designed to be used inside of a ResourceTemplate (page 1033).

### 19.6.35 DWordSpace (DWord Space Resource Descriptor Macro)

#### Syntax

**DWordSpace** (*ResourceType*, *ResourceUsage*, *Decode*, *IsMinFixed*, *IsMaxFixed*, *TypeSpecificFlags*, *AddressGranularity*, *AddressMinimum*, *AddressMaximum*, *AddressTranslation*, *RangeLength*, *ResourceSourceIndex*, *ResourceSource*, *DescriptorName*)

#### Arguments

*ResourceType* evaluates to an 8-bit integer that specifies the type of this resource. Acceptable values are 0xC0 through 0xFF.

*ResourceUsage* specifies whether the Memory range is consumed by this device (**ResourceConsumer**) or passed on to child devices (**ResourceProducer**). If nothing is specified, then ResourceConsumer is assumed.

*Decode* specifies whether or not the device decodes the Memory range using positive (**PosDecode**) or subtractive (**SubDecode**) decode. If nothing is specified, then PosDecode is assumed. The 1-bit field *DescriptorName.\_DEC* is automatically created to refer to this portion of the resource descriptor, where ‘1’ is SubDecode and ‘0’ is PosDecode.

*IsMinFixed* specifies whether the minimum address of this Memory range is fixed (**MinFixed**) or can be changed (**MinNotFixed**). If nothing is specified, then MinNotFixed is assumed. The 1-bit field *DescriptorName.\_MIF* is automatically created to refer to this portion of the resource descriptor, where ‘1’ is MinFixed and ‘0’ is MinNotFixed.

*IsMaxFixed* specifies whether the maximum address of this Memory range is fixed (**MaxFixed**) or can be changed (**MaxNotFixed**). If nothing is specified, then MaxNotFixed is assumed. The 1-bit field *DescriptorName.\_MAF* is automatically created to refer to this portion of the resource descriptor, where ‘1’ is MaxFixed and ‘0’ is MaxNotFixed.

*TypeSpecificFlags* evaluates to an 8-bit integer. The flags are specific to the *ResourceType*.

*AddressGranularity* evaluates to a 32-bit integer that specifies the power-of-two boundary (- 1) on which the Memory range must be aligned. The 32-bit field *DescriptorName.\_GRA* is automatically created to refer to this portion of the resource descriptor.

*AddressMinimum* evaluates to a 32-bit integer that specifies the lowest possible base address of the Memory range. The value must have ‘0’ in all bits where the corresponding bit in *AddressGranularity* is ‘1’. For bridge devices which translate addresses, this is the address on the secondary bus. The 32-bit field *DescriptorName.\_MIN* is automatically created to refer to this portion of the resource descriptor.

*AddressMaximum* evaluates to a 32-bit integer that specifies the highest possible base address of the Memory range. The value must have ‘0’ in all bits where the corresponding bit in *AddressGranularity* is ‘1’. For bridge devices which translate addresses, this is the address on the secondary bus. The 32-bit field *DescriptorName.\_MAX* is automatically created to refer to this portion of the resource descriptor.

*AddressTranslation* evaluates to a 32-bit integer that specifies the offset to be added to a secondary bus I/O address which results in the corresponding primary bus I/O address. For all non-bridge devices or bridges which do not perform translation, this must be ‘0’. The 32-bit field *DescriptorName.\_TRA* is automatically created to refer to this portion of the resource descriptor.

*RangeLength* evaluates to a 32-bit integer that specifies the total number of bytes decoded in the Memory range. The 32-bit field *DescriptorName.\_LEN* is automatically created to refer to this portion of the resource descriptor.

*ResourceSourceIndex* is an optional argument which evaluates to an 8-bit integer that specifies the resource descriptor within the object specified by *ResourceSource*. If this argument is specified, the *ResourceSource* argument must also be specified.

*ResourceSource* is an optional argument which evaluates to a string containing the path of a device which produces the pool of resources from which this Memory range is allocated. If this argument is specified, but the *ResourceSourceIndex* argument is not specified, a zero value is assumed.

*DescriptorName* is an optional argument that specifies a name for an integer constant that will be created in the current scope that contains the offset of this resource descriptor within the current resource template buffer. The predefined descriptor field names may be appended to this name to access individual fields within the descriptor via the Buffer Field operators.

## Description

The **DWordSpace** macro evaluates to a buffer which contains a 32-bit Address Space resource descriptor. The format of the 32-bit Address Space resource descriptor can be found in “DWord Address Space Descriptor” (page 435). The macro is designed to be used inside of a ResourceTemplate (page 1033).

### 19.6.36 EISAID (EISA ID String To Integer Conversion Macro)

#### Syntax

**EISAID** (*EisaidString*) => DWordConst

#### Arguments

The *EisaidString* must be a String object of the form “UUUNNNN”, where “U” is an uppercase letter and “N” is a hexadecimal digit. No asterisks or other characters are allowed in the string.

#### Description

Converts *EisaidString*, a 7-character text string argument, into its corresponding 4-byte numeric EISA ID encoding. It can be used when declaring IDs for devices that have EISA IDs.

#### Example

EISAID (“PNPOC09”) // This is a valid invocation of the macro.

### 19.6.37 Else (Alternate Execution)

#### Syntax

**Else** {TermList}

## Arguments

*TermList* is a sequence of executable ASL statements.

## Description

If *Predicate* evaluates to 0 in an **If** statement, then control is transferred to the **Else** portion, which can consist of zero or more **Elseif** statements followed by zero or one **Else** statements. If the *Predicate* of any **Elseif** statement evaluates to non-zero, the statements in its term list are executed and then control is transferred past the end of the final **Else** term. If no *Predicate* evaluates to non-zero, then the statements in the **Else** term list are executed.

## Example

The following example checks Local0 to be zero or non-zero. On non-zero, CNT is incremented; otherwise, CNT is decremented.

```
If (LGreater (Local 0, 5)
{
    Increment (CNT)
} Else If (Local 0) {
    Add (CNT, 5, CNT)
}
Else
{
    Decrement (CNT)
}
```

## 19.6.38 Elseif (Alternate/Conditional Execution)

### Syntax

**Elseif** (*Predicate*) {*TermList*}

### Arguments

*Predicate* is evaluated as an Integer.

### Description

If the *Predicate* of any **Elseif** statement evaluates to non-zero, the statements in its term list are executed and then control is transferred past the end of the final **Else**. If no *Predicate* evaluates to non-zero, then the statements in the **Else** term list are executed.

**Note:** *(Compatibility Note)* The **Elseif** operator was first introduced in ACPI 2.0, but is backward compatible with the ACPI 1.0 specification. An ACPI 2.0 and later ASL compiler must synthesize **Elseif** from the **If** and **Else** opcodes available in 1.0. For example:

```
If (predicate1)
{
    ...statements1...
}
Elseif (predicate2)
```

```
{
    ...statements2...
}
Else
{
    ...statements3...
}
```

is translated to the following:

```
If (predicate1)
{
    ...statements1...
}
Else
{
    If (predicate2)
    {
        ...statements2...
    }
    Else
    {
        ...statements3...
    }
}
```

## 19.6.39 EndDependentFn (End Dependent Function Resource Descriptor Macro)

### Syntax

`EndDependentFn () => Buffer`

### Description

The `EndDependentFn` macro generates an end-of-dependent-function resource descriptor buffer inside of an `ResourceTemplate` (page 1033). It must be matched with a `StartDependentFn` (page 1038) or `StartDependentFnNoPri` (page 1038) macro.

## 19.6.40 Event (Declare Event Synchronization Object)

### Syntax

`Event (EventName)`

### Arguments

Creates an event synchronization object named *EventName*.

### Description

For more information about the uses of an event synchronization object, see the ASL definitions for the `Wait`, `Signal`, and `Reset` function operators.

## 19.6.41 ExtendedIO (Extended IO Resource Descriptor Macro)

### Syntax

**ExtendedIO** (*ResourceUsage*, *IsMinFixed*, *IsMaxFixed*, *Decode*, *ISARanges*, *AddressGranularity*, *AddressMinimum*, *AddressMaximum*, *AddressTranslation*, *RangeLength*, *TypeSpecificAttributes*, *DescriptorName*, *TranslationType*, *TranslationDensity*)

### Arguments

*ResourceUsage* specifies whether the Memory range is consumed by this device (**ResourceConsumer**) or passed on to child devices (**ResourceProducer**). If nothing is specified, then ResourceConsumer is assumed.

*IsMinFixed* specifies whether the minimum address of this I/O range is fixed (**MinFixed**) or can be changed (**MinNotFixed**). If nothing is specified, then MinNotFixed is assumed. The 1-bit field *DescriptorName.\_MIF* is automatically created to refer to this portion of the resource descriptor, where '1' is MinFixed and '0' is MinNotFixed.

*IsMaxFixed* specifies whether the maximum address of this I/O range is fixed (**MaxFixed**) or can be changed (**MaxNotFixed**). If nothing is specified, then MaxNotFixed is assumed. The 1-bit field *DescriptorName.\_MAF* is automatically created to refer to this portion of the resource descriptor, where '1' is MaxFixed and '0' is MaxNotFixed.

*Decode* specifies whether or not the device decodes the I/O range using positive (**PosDecode**) or subtractive (**SubDecode**) decode. If nothing is specified, then PosDecode is assumed. The 1-bit field *DescriptorName.\_DEC* is automatically created to refer to this portion of the resource descriptor, where '1' is SubDecode and '0' is PosDecode.

*ISARanges* specifies whether the I/O ranges specifies are limited to valid ISA I/O ranges (**ISAOnly**), valid non-ISA I/O ranges (**NonISAOnly**) or encompass the whole range without limitation (**EntireRange**). The 2-bit field *DescriptorName.\_RNG* is automatically created to refer to this portion of the resource descriptor, where '1' is NonISAOnly, '2' is ISAOnly and '0' is EntireRange.

*AddressGranularity* evaluates to a 64-bit integer that specifies the power-of-two boundary (- 1) on which the I/O range must be aligned. The 64-bit field *DescriptorName.\_GRA* is automatically created to refer to this portion of the resource descriptor.

*AddressMinimum* evaluates to a 64-bit integer that specifies the lowest possible base address of the I/O range. The value must have '0' in all bits where the corresponding bit in *AddressGranularity* is '1'. For bridge devices which translate addresses, this is the address on the secondary bus. The 64-bit field *DescriptorName.\_MIN* is automatically created to refer to this portion of the resource descriptor.

*AddressMaximum* evaluates to a 64-bit integer that specifies the highest possible base address of the I/O range. The value must have '0' in all bits where the corresponding bit in *AddressGranularity* is '1'. For bridge devices which translate addresses, this is the address on the secondary bus. The 64-bit field *DescriptorName.\_MAX* is automatically created to refer to this portion of the resource descriptor.

*AddressTranslation* evaluates to a 64-bit integer that specifies the offset to be added to a secondary bus I/O address which results in the corresponding primary bus I/O address. For all non-bridge devices or bridges which do not perform translation, this must be '0'. The 64-bit field *DescriptorName.\_TRA* is automatically created to refer to this portion of the resource descriptor.

*RangeLength* evaluates to a 64-bit integer that specifies the total number of bytes decoded in the I/O range. The 64-bit field *DescriptorName.\_LEN* is automatically created to refer to this portion of the resource descriptor.

*TypeSpecificAttributes* is an optional argument that specifies attributes specific to this resource type. See [Section 6.4.3.5.4.1, "Type Specific Attributes"](#).

*DescriptorName* is an optional argument that specifies a name for an integer constant that will be created in the current scope that contains the offset of this resource descriptor within the current resource template buffer. The predefined descriptor field names may be appended to this name to access individual fields within the descriptor via the Buffer Field operatorsDescription

The **ExtendedIO** macro evaluates to a buffer which contains a 64-bit I/O resource descriptor, which describes a range of I/O addresses. The format of the 64-bit I/O resource descriptor can be found in “Extended Address Space Descriptor” (page 425). The macro is designed to be used inside of a ResourceTemplate (page 1033).

*TranslationType* is an optional argument that specifies whether the resource type on the secondary side of the bus is different (**TypeTranslation**) from that on the primary side of the bus or the same (**TypeStatic**). If TypeTranslation is specified, then the primary side of the bus is Memory. If TypeStatic is specified, then the primary side of the bus is I/O. If nothing is specified, then TypeStatic is assumed. The 1-bit field *DescriptorName.\_TTP* is automatically created to refer to this portion of the resource descriptor, where ‘1’ is TypeTranslation and ‘0’ is TypeStatic. See *\_TTP* (page 443) for more information

*TranslationDensity* is an optional argument that specifies whether or not the translation from the primary to secondary bus is sparse (**SparseTranslation**) or dense (**DenseTranslation**). It is only used when *TranslationType* is **TypeTranslation**. If nothing is specified, then DenseTranslation is assumed. The 1-bit field *DescriptorName.\_TRS* is automatically created to refer to this portion of the resource descriptor, where ‘1’ is SparseTranslation and ‘0’ is DenseTranslation. See *\_TRS* (page 444) for more information.

## 19.6.42 ExtendedMemory (Extended Memory Resource Descriptor Macro)

### Syntax

**ExtendedMemory** (*ResourceUsage*, *Decode*, *IsMinFixed*, *IsMaxFixed*, *Cacheable*, *ReadAndWrite*, *AddressGranularity*, *AddressMinimum*, *AddressMaximum*, *AddressTranslation*, *RangeLength*, *TypeSpecificAttributes*, *DescriptorName*, *MemoryRangeType*, *TranslationType*)

### Arguments

*ResourceUsage* specifies whether the Memory range is consumed by this device (**ResourceConsumer**) or passed on to child devices (**ResourceProducer**). If nothing is specified, then ResourceConsumer is assumed.

*Decode* specifies whether or not the device decodes the Memory range using positive (**PosDecode**) or subtractive (**SubDecode**) decode. If nothing is specified, then PosDecode is assumed. The 1-bit field *DescriptorName.\_DEC* is automatically created to refer to this portion of the resource descriptor, where ‘1’ is SubDecode and ‘0’ is PosDecode.

*IsMinFixed* specifies whether the minimum address of this Memory range is fixed (**MinFixed**) or can be changed (**MinNotFixed**). If nothing is specified, then MinNotFixed is assumed. The 1-bit field

*DescriptorName.\_MIF* is automatically created to refer to this portion of the resource descriptor, where '1' is MinFixed and '0' is MinNotFixed.

*IsMaxFixed* specifies whether the maximum address of this Memory range is fixed (**MaxFixed**) or can be changed (**MaxNotFixed**). If nothing is specified, then MaxNotFixed is assumed. The 1-bit field

*DescriptorName.\_MAF* is automatically created to refer to this portion of the resource descriptor, where '1' is MaxFixed and '0' is MaxNotFixed.

*Cacheable* specifies whether or not the memory region is cacheable (**Cacheable**), cacheable and write-combining (**WriteCombining**), cacheable and prefetchable (**Prefetchable**) or uncachable (**NonCacheable**). If nothing is specified, then NonCacheable is assumed. The 2-bit field

*DescriptorName.\_MEM* is automatically created to refer to this portion of the resource descriptor, where '1' is Cacheable, '2' is WriteCombining, '3' is Prefetchable and '0' is NonCacheable.

*ReadAndWrite* specifies whether or not the memory region is read-only (**ReadOnly**) or read/write (**ReadWrite**). If nothing is specified, then ReadWrite is assumed. The 1-bit field *DescriptorName.\_RW* is automatically created to refer to this portion of the resource descriptor, where '1' is ReadWrite and '0' is ReadOnly.

*AddressGranularity* evaluates to a 64-bit integer that specifies the power-of-two boundary (- 1) on which the Memory range must be aligned. The 64-bit field *DescriptorName.\_GRA* is automatically created to refer to this portion of the resource descriptor.

*AddressMinimum* evaluates to a 64-bit integer that specifies the lowest possible base address of the Memory range. The value must have '0' in all bits where the corresponding bit in *AddressGranularity* is '1'. For bridge devices which translate addresses, this is the address on the secondary bus. The 64-bit field *DescriptorName.\_MIN* is automatically created to refer to this portion of the resource descriptor.

*AddressMaximum* evaluates to a 64-bit integer that specifies the highest possible base address of the Memory range. The value must have '0' in all bits where the corresponding bit in *AddressGranularity* is '1'. For bridge devices which translate addresses, this is the address on the secondary bus. The 64-bit field *DescriptorName.\_MAX* is automatically created to refer to this portion of the resource descriptor.

*AddressTranslation* evaluates to a 64-bit integer that specifies the offset to be added to a secondary bus I/O address which results in the corresponding primary bus I/O address. For all non-bridge devices or bridges which do not perform translation, this must be '0'. The 64-bit field *DescriptorName.\_TRA* is automatically created to refer to this portion of the resource descriptor.

*RangeLength* evaluates to a 64-bit integer that specifies the total number of bytes decoded in the Memory range. The 64-bit field *DescriptorName.\_LEN* is automatically created to refer to this portion of the resource descriptor.

*TypeSpecificAttributes* is an optional argument that specifies attributes specific to this resource type. See [Section 6.4.3.5.4.1](#), "Type Specific Attributes".

*DescriptorName* is an optional argument that specifies a name for an integer constant that will be created in the current scope that contains the offset of this resource descriptor within the current resource template buffer. The predefined descriptor field names may be appended to this name to access individual fields within the descriptor via the Buffer Field operators.

*MemoryRangeType* is an optional argument that specifies the memory usage. The memory can be marked as normal (**AddressRangeMemory**), used as ACPI NVS space (**AddressRangeNVS**), used as ACPI reclaimable space (**AddressRangeACPI**) or as system reserved (**AddressRangeReserved**). If nothing is

specified, then AddressRangeMemory is assumed. The 2-bit field *DescriptorName*. \_MTP is automatically created in order to refer to this portion of the resource descriptor, where '0' is AddressRangeMemory, '1' is AddressRangeReserved, '2' is AddressRangeACPI and '3' is AddressRangeNVS.

*TranslationType* is an optional argument that specifies whether the resource type on the secondary side of the bus is different (**TypeTranslation**) from that on the primary side of the bus or the same (**TypeStatic**). If TypeTranslation is specified, then the primary side of the bus is I/O. If TypeStatic is specified, then the primary side of the bus is Memory. If nothing is specified, then TypeStatic is assumed. The 1-bit field *DescriptorName*. \_TTP is automatically created to refer to this portion of the resource descriptor, where '1' is TypeTranslation and '0' is TypeStatic. See \_TTP (page 443) for more information.

## Description

The **ExtendedMemory** macro evaluates to a buffer which contains a 64-bit memory resource descriptor, which describes a range of memory addresses. The format of the 64-bit memory resource descriptor can be found in "Extended Address Space Descriptor" (page 439). The macro is designed to be used inside of a ResourceTemplate (page 1033).

### 19.6.43 ExtendedSpace (Extended Address Space Resource Descriptor Macro)

#### Syntax

**ExtendedSpace** (*ResourceType*, *ResourceUsage*, *Decode*, *IsMinFixed*, *IsMaxFixed*, *TypeSpecificFlags*, *AddressGranularity*, *AddressMinimum*, *AddressMaximum*, *AddressTranslation*, *RangeLength*, *TypeSpecificAttributes*, *DescriptorName*)

#### Arguments

*ResourceType* evaluates to an 8-bit integer that specifies the type of this resource. Acceptable values are 0xC0 through 0xFF.

*ResourceUsage* specifies whether the Memory range is consumed by this device (**ResourceConsumer**) or passed on to child devices (**ResourceProducer**). If nothing is specified, then ResourceConsumer is assumed.

*Decode* specifies whether or not the device decodes the Memory range using positive (**PosDecode**) or subtractive (**SubDecode**) decode. If nothing is specified, then PosDecode is assumed. The 1-bit field *DescriptorName*. \_DEC is automatically created to refer to this portion of the resource descriptor, where '1' is SubDecode and '0' is PosDecode.

*IsMinFixed* specifies whether the minimum address of this Memory range is fixed (**MinFixed**) or can be changed (**MinNotFixed**). If nothing is specified, then MinNotFixed is assumed. The 1-bit field *DescriptorName*. \_MIF is automatically created to refer to this portion of the resource descriptor, where '1' is MinFixed and '0' is MinNotFixed.

*IsMaxFixed* specifies whether the maximum address of this Memory range is fixed (**MaxFixed**) or can be changed (**MaxNotFixed**). If nothing is specified, then MaxNotFixed is assumed. The 1-bit field *DescriptorName*. \_MAF is automatically created to refer to this portion of the resource descriptor, where '1' is MaxFixed and '0' is MaxNotFixed.

*TypeSpecificFlags* evaluates to an 8-bit integer. The flags are specific to the *ResourceType*.

*AddressGranularity* evaluates to a 64-bit integer that specifies the power-of-two boundary (- 1) on which the Memory range must be aligned. The 64-bit field *DescriptorName.\_GRA* is automatically created to refer to this portion of the resource descriptor.

*AddressMinimum* evaluates to a 64-bit integer that specifies the lowest possible base address of the Memory range. The value must have ‘0’ in all bits where the corresponding bit in *AddressGranularity* is ‘1’. For bridge devices which translate addresses, this is the address on the secondary bus. The 64-bit field *DescriptorName.\_MIN* is automatically created to refer to this portion of the resource descriptor.

*AddressMaximum* evaluates to a 64-bit integer that specifies the highest possible base address of the Memory range. The value must have ‘0’ in all bits where the corresponding bit in *AddressGranularity* is ‘1’. For bridge devices which translate addresses, this is the address on the secondary bus. The 64-bit field *DescriptorName.\_MAX* is automatically created to refer to this portion of the resource descriptor.

*AddressTranslation* evaluates to a 64-bit integer that specifies the offset to be added to a secondary bus I/O address which results in the corresponding primary bus I/O address. For all non-bridge devices or bridges which do not perform translation, this must be ‘0’. The 64-bit field *DescriptorName.\_TRA* is automatically created to refer to this portion of the resource descriptor.

*RangeLength* evaluates to a 64-bit integer that specifies the total number of bytes decoded in the Memory range. The 64-bit field *DescriptorName.\_LEN* is automatically created to refer to this portion of the resource descriptor.

*TypeSpecificAttributes* is an optional argument that specifies attributes specific to this resource type. See [Section 6.4.3.5.4.1](#), “Type Specific Attributes”.

*DescriptorName* is an optional argument that specifies a name for an integer constant that will be created in the current scope that contains the offset of this resource descriptor within the current resource template buffer. The predefined descriptor field names may be appended to this name to access individual fields within the descriptor via the Buffer Field operators.

## Description

The **ExtendedSpace** macro evaluates to a buffer which contains a 64-bit Address Space resource descriptor, which describes a range of addresses. The format of the 64-bit AddressSpace descriptor can be found in “Extended Address Space Descriptor” (page 439). The macro is designed to be used inside of a ResourceTemplate (page 1033).

### 19.6.44 External (Declare External Objects)

#### Syntax

**External** (*ObjectName*, *ObjectType*, *ReturnType*, *ParameterTypes*)

#### Arguments

*ObjectName* is a NameString.

*ObjectType* is an optional *ObjectTypeKeyword* (e.g. **IntObj**, **PkgObj**, etc.). If not specified, “**UnknownObj**” type is assumed.

*ReturnType* is optional. If the specified *ObjectType* is **MethodObj**, then this specifies the type or types of object returned by the method. If the method does not return an object, then nothing is specified or **UnknownObj** is specified. To specify a single return type, simply use the *ObjectTypeKeyword*. To specify

multiple possible return types, enclose the comma-separated *ObjectTypeKeywords* with braces. For example: { **IntObj** , **BuffObj** }.

*ParameterTypes* is optional. If the specified *ObjectType* is **MethodObj**, this specifies both the number and type of the method parameters. It is a comma-separated, variable-length list of the expected object type or types for each of the method parameters, enclosed in braces. For each parameter, the parameter type consists of either an *ObjectTypeKeyword* or a comma-separated sub-list of *ObjectTypeKeywords* enclosed in braces. There can be no more than seven parameters in total.

The **External** directive informs the ASL compiler that the object is declared external to this table so that no errors will be generated for an undeclared object. The ASL compiler will create the external object at the specified place in the namespace (if a full path of the object is specified), or the object will be created at the current scope of the **External** term.

For external control methods, the ASL compiler can emit an External AML opcode that contains the name of the method and the number of required arguments. This information may be used by AML disassemblers to properly disassemble the AML to the correct ASL code.

**External** is especially useful for use in secondary SSDTs, when the required scopes and objects are declared in the main DSDT.

## Example

This example shows the use of **External** in conjunction with **Scope** within an SSDT:

```
Defini ti onBl ock ("ssdt.aml", "SSDT", 2, "X", "Y", 0x00000001)
{
    External (\_SB.PCI0, Devi ceObj)

    Scope (\_SB.PCI0)
    {
    }
}
```

## 19.6.45 Fatal (Fatal Error Check)

### Syntax

**Fatal** (*Type*, *Code*, *Arg*)

### Arguments

This operation is used to inform the OS that there has been an OEM-defined fatal error.

### Description

In response, the OS must log the fatal event and perform a controlled OS shutdown in a timely fashion.

## 19.6.46 Field (Declare Field Objects)

### Syntax

**Field** (*RegionName*, *AccessType*, *LockRule*, *UpdateRule*) {*FieldUnitList*}

## Arguments

*RegionName* is evaluated as a Namestring that refers to the host operation region.

*AccessType* is optional and defines the default access width of the field definition and is any one of the following: **AnyAcc**, **ByteAcc**, **WordAcc**, **DWordAcc**, or **QWordAcc**. In general, accesses within the parent object are performed naturally aligned. If desired, *AccessType* set to a value other than **AnyAcc** can be used to force minimum access width. Notice that the parent object must be able to accommodate the *AccessType* width. For example, an access type of **WordAcc** cannot read the last byte of an odd-length operation region. The exceptions to natural alignment are the access types used for a non-linear SMBus device. These will be discussed in detail below. Not all access types are meaningful for every type of operational region. If not specified, the default is **AnyAcc**.

*LockRule* is optional and indicates whether the Global Lock is to be used when accessing this field and is one of the following: **Lock** or **NoLock**. If *LockRule* is set to **Lock**, accesses to modify the component data objects will acquire and release the Global Lock. If both types of locking occur, the Global Lock is acquired after the parent object Mutex. On Hardware-reduced ACPI platforms, Lock is not supported. If not specified, the default is **NoLock**.

*UpdateRule* is optional and specifies how the unmodified bits of a field are treated, and can be any one of the following: **Preserve**, **WriteAsOnes**, or **WriteAsZeros**. For example, if a field defines a component data object of 4 bits in the middle of a **WordAcc** region, when those 4 bits are modified the *UpdateRule* specifies how the other 12 bits are treated. If not specified, the default is **Preserve**.

*FieldUnitList* is a variable-length list of individual field unit definitions, separated by commas. Each entry in the field unit list is one of the following:

**Table 19-430 Field Unit list entries**

<i>FieldUnitName</i> , <i>BitLength</i>
<i>Offset</i> ( <i>ByteOffset</i> )
<i>AccessAs</i> ( <i>AccessType</i> , <i>AccessAttribute</i> )
<i>Connection</i> ( <i>ConnectionResourceObj</i> )

*FieldUnitName* is the ACPI name for the field unit (1 to 4 characters), and *BitLength* is the length of the field unit in bits. **Offset** is used to specify the byte offset of the next defined field unit. This can be used instead of defining the bit lengths that need to be skipped. **AccessAs** is used to define the access type and attributes for the remaining field units within the list. **Connection** is used to identify the connection resource of the field access. This is necessary for GenericSerialBus and GeneralPurposeIO operation region address spaces only.

## Description

Declares a series of named data objects whose data values are fields within a larger object. The fields are parts of the object named by *RegionName*, but their names appear in the same scope as the **Field** term.

For example, the field operator allows a larger operation region that represents a hardware register to be broken down into individual bit fields that can then be accessed by the bit field names. Extracting and combining the component field from its parent is done automatically when the field is accessed.

When reading from a **FieldUnit**, returned values are normalized (shifted and masked to the proper length.) The data type of an individual FieldUnit can be either a **Buffer** or an **Integer**, depending on the bit length of the FieldUnit. If the FieldUnit is smaller than or equal to the size of an Integer (in bits), it will be treated as an Integer. If the FieldUnit is larger than the size of an Integer, it will be treated as a Buffer. The size of an Integer is indicated by the DSDT header's *Revision* field. A revision less than 2 indicates that the size of an Integer is 32 bits. A value greater than or equal to 2 signifies that the size of an Integer is 64 bits. For more information about data types and FieldUnit type conversion rules, see [Section 19.3.5.7, "Data Type Conversion Rules"](#).

Accessing the contents of a field data object provides access to the corresponding field within the parent object. If the parent object supports Mutex synchronization, accesses to modify the component data objects will acquire and release ownership of the parent object around the modification.

The following table relates region types declared with an OperationRegion term to the different access types supported for each region.

**Table 19-431 OperationRegion Address Spaces and Access Types**

Address Space	Permitted Access Type(s)	Description
SystemMemory	ByteAcc, WordAcc, DWordAcc, QWordAcc, or AnyAcc	All access allowed
SystemIO	ByteAcc, WordAcc, DWordAcc, QWordAcc, or AnyAcc	All access allowed
PCI_Config	ByteAcc, WordAcc, DWordAcc, QWordAcc, or AnyAcc	All access allowed
EmbeddedControl	ByteAcc	Byte access only
SMBus	BufferAcc	Reads and writes to this operation region involve the use of a region specific data buffer. (See below.)
SystemCMOS	ByteAcc	Byte access only
PciBarTarget	ByteAcc, WordAcc, DWordAcc, QWordAcc, or AnyAcc	All access allowed
IPMI	BufferAcc	Reads and writes to this operation region involve the use of a region specific data buffer. (See below.)
GeneralPurposeIO	ByteAcc	Byte access only
GenericSerialBus	BufferAcc	Reads and writes to this operation region involve the use of a region-specific data buffer. (See below.)
PCC	ByteAcc	Reads and writes to this operation region are performed in units of bytes.

The named FieldUnit data objects are provided in the FieldList as a series of names and bit widths. Bits assigned no name (or NULL) are skipped. The ASL compiler supports the **Offset (ByteOffset)** macro within

a FieldList to skip to the bit position of the supplied byte offset, and the **AccessAs** macro to change access within the field list.

GenericSerialBus, SMBus and IPMI regions are inherently non-linear, where each offset within the respective address space represents a variable sized (0 to 32 bytes) field. Given this uniqueness, these operation regions include restrictions on their field definitions and require the use of a region-specific data buffer when initiating transactions. For more information on the SMBus data buffer format, see [Section 13](#), "ACPI System Management Bus Interface Specification,". For more information on the IPMI data buffer format, see [Section 5.5.2.4.4](#), "Declaring IPMI Operation Regions". For more information on the Generic Serial Bus data buffer format, see [Section 5.5.2.4.6](#) "Declaring Generic Serial Bus Operation Regions."

For restrictions on the use of Fields with GeneralPurposeIO OpRegions, see [Section 5.5.2.4.5](#), "Declaring General PurposeIO Operation Regions".

## Example

```
OperationRegion (MIOC, PCI_Config, Zero, 0xFF)
Field (MIOC, AnyAcc, NoLock, Preserve)
{
    Offset  (0x58),
    HXGB,   32,
    HXGT,   32,
    GAPE,   8,
    MROA,   4,
    MROB,   4
}
```

### 19.6.47 FindSetLeftBit (Find First Set Left Bit)

#### Syntax

**FindSetLeftBit** (*Source*, *Result*) => Integer

#### Arguments

*Source* is evaluated as an Integer.

#### Description

The one-based bit location of the first MSb (most significant set bit) is optionally stored into *Result*. The result of 0 means no bit was set, 1 means the left-most bit set is the first bit, 2 means the left-most bit set is the second bit, and so on.

### 19.6.48 FindSetRightBit (Find First Set Right Bit)

#### Syntax

**FindSetRightBit** (*Source*, *Result*) => Integer

#### Arguments

*Source* is evaluated as an Integer.

## Description

The one-based bit location of the most LSb (least significant set bit) is optionally stored in *Result*. The result of 0 means no bit was set, 32 means the first bit set is the thirty-second bit, 31 means the first bit set is the thirty-first bit, and so on.

### 19.6.49 FixedDMA (DMA Resource Descriptor Macro)

#### Syntax

**FixedDMA (DmaRequestLine, Channel, DmaTransferWidth, DescriptorName) => Buffer**

#### Arguments

*DmaRequestLine* is a system-relative number uniquely identifying the request line statically assigned to the device.. The bit field name *\_DMA* is automatically created to refer to this portion of the resource descriptor.

*Channel* is a controller-relative number uniquely identifying the channel statically assigned to this *DMARequestLine*. Channels can be shared by reusing Channel numbers across descriptors. The bit field name *\_TYP* is automatically created to refer to this portion of the resource descriptor.

*DmaTransferWidth* is an optional argument specifying the width of data transfer for which the device is configured. Valid values are **Width8Bit**, **Width16Bit**, **Width32Bit**, **Width64Bit**, **Width 128Bit** or **Width256Bit**. If not specified, **Width32Bit** is assumed. The bit field name *\_SIZ* is automatically created to refer to this portion of the resource descriptor.

*DescriptorName* is an optional argument that specifies a name for an integer constant that will be created in the current scope that contains the offset of this resource descriptor within the current resource template buffer. The predefined descriptor field names may be appended to this name to access individual fields within the descriptor via the Buffer Field operators.

## Description

The FixedDMA macro evaluates to a buffer that contains a Fixed DMA Descriptor ([Section 6.4.3](#)).

### 19.6.50 FixedIO (Fixed IO Resource Descriptor Macro)

#### Syntax

**FixedIO (AddressBase, RangeLength, DescriptorName) => Buffer**

#### Arguments

*AddressBase* evaluates to a 16-bit integer. It describes the starting address of the fixed I/O range. The field *DescriptorName.\_BAS* is automatically created to refer to this portion of the resource descriptor.

*RangeLength* evaluates to an 8-bit integer. It describes the length of the fixed I/O range. The field *DescriptorName.\_LEN* is automatically created to refer to this portion of the resource descriptor.

*DescriptorName* evaluates to a name string which refers to the entire resource descriptor.

## Description

The **FixedIO** macro evaluates to a buffer which contains a fixed I/O resource descriptor. The format of the fixed I/O resource descriptor can be found in “Fixed Location I/O Port Descriptor” (page 423). The macro is designed to be used inside of a ResourceTemplate (page 1033).

### 19.6.51 For (Conditional Loop)

#### Syntax

**For** (*Initialize*, *Predicate*, *Update*) {TermList}

#### Arguments

*Initialize*. This optional expression is evaluated once before the loop is entered. If not specified, no initialization takes place.

*Predicate*. The list of terms within the TermList are executed until the predicate evaluates to zero (FALSE). If this argument is not specified, the For macro is equivalent to **While(1)**.

*Update*. This optional expression is evaluated once per execution of the loop, after all other terms within the TermList have been executed.

#### Description

**For** is a macro that creates a loop by converting the input arguments to the equivalent ASL **While** loop.

**Note:** Creation of a named object more than once in a given scope is not allowed. As such, unconditionally creating named objects within a For loop must be avoided. A fatal error will be generated on the second iteration of the loop, during the attempt to create the same named object a second time.

#### Example

The following example shows the use of the **For** macro to create a loop, followed by the equivalent **While** loop that is actually emitted by the ASL compiler:

```

for (local0 = 0, local0 < 8, local0++)
{
}

Local0 = 0
While (Local0 < 8)
{
    Local0++
}

```

## 19.6.52 Fprintf (Create and Store formatted string)

### Syntax

**Fprintf** (*Destination*, *FormatString*, *FormatArgs*) => String

### Arguments

**Fprintf** is a macro that converts the evaluated *FormatString* into a series of string **Concatenate** operations, storing the result in *Destination*.

*FormatString* is a string literal which may contain one or more uses of the format specifier, %o, to indicate locations in the string where an object may be inserted. %o is the only format specifier supported since the resulting object is a string and type conversion is handled automatically by Concatenate.

*FormatArgs* is a comma separated list of Named Objects, Locals, or Args that can be evaluated to a string. Each argument is added to the *FormatString* using the **Concatenate** operation at the location specified by %o in order of appearance.

### Description

**Fprintf** is a macro that converts the evaluated *FormatString* into a series of string **Concatenate** operations, storing the result in *Destination*

### Example

The following ASL example uses **Fprintf** to write a formatted string of Arg0 and Arg1 to the Named Object STR1.

```
Fprintf (STR1, "%o: %o Successful", Arg1, Arg0)
```

This Fprintf macro expression evaluates to the following ASL operation.

```
Store (Concatenate (Concatenate (Concatenate (Concatenate
    ("", Arg1), ": "), Arg0), " Successful"), STR1)
```

## 19.6.53 FromBCD (Convert BCD To Integer)

### Syntax

**FromBCD** (*BCDValue*, *Result*) => Integer

### Arguments

*BCDValue* is evaluated as an Integer in Binary Coded Decimal format.

### Description

The **FromBCD** operation converts *BCDValue* to a numeric format, and optionally stores the numeric value into *Result*.

## 19.6.54 Function (Declare Control Method)

### Syntax

**Function** (*FunctionName*, *ReturnType*, *ParameterTypes*) {*TermList*}

### Arguments

*ReturnType* is optional and specifies the type(s) of the object(s) returned by the method. If the method does not return an object, then nothing is specified or **UnknownObj** is specified. To specify a single return type, simply use the *ObjectTypeKeyword* (e.g. **IntObj**, **PkgObj**, etc.). To specify multiple possible return types, enclose the comma-separated *ObjectTypeKeywords* with braces. For example: { **IntObj**, **BuffObj** }.

*ParameterTypes* is optional and specifies both the number and type of the method parameters. It is a comma-separated, variable-length list of the expected object type or types for each of the method parameters, enclosed in braces. For each parameter, the parameter type consists of either an *ObjectTypeKeyword* or a comma-separated sub-list of *ObjectTypeKeywords* enclosed in braces. There can be no more than seven parameters in total.

### Description

**Function** declares a named package containing a series of terms that collectively represent a control method. A control method is a procedure that can be invoked to perform computation. **Function** opens a name scope.

System software executes a control method by executing the terms in the package in order. For more information on method execution, see [Section 5.5.2](#), “Control Method Execution.”

The current namespace location used during name creation is adjusted to be the current location on the namespace tree. Any names created within this scope are “below” the name of this package. The current namespace location is assigned to the method package, and all namespace references that occur during control method execution for this package are relative to that location.

Functions are equivalent to a **Method** that specifies **NotSerialized**. As such, a function should not create any named objects, since a second thread that might re-enter the function will cause a fatal error if an attempt is made to create the same named object twice.

**Note:** (*Compatibility Note*) New for ACPI 3.0

### Example

The following block of ASL sample code shows the use of **Function** for defining a control method:

```
Function (EXAM, IntObj, {StrObj, {IntObj, StrObj}})
{
    Name (Temp, "")
    Store (Arg0, Temp)           // could have used Arg1
    Return (SizeOf (Concatenate (Arg1, Temp)))
}
```

This declaration is equivalent to:

```
Method (EXAM, 2, NotSerialized, 0, IntObj, {StrObj, {IntObj, StrObj}})
{
...
}
```

## 19.6.55 GpioInt (GPIO Interrupt Connection Resource Descriptor Macro)

**GpioInt** (*EdgeLevel*, *ActiveLevel*, *Shared*, *PinConfig*, *DebounceTimeout*, *ResourceSource*, *ResourceSourceIndex*, *ResourceUsage*, *DescriptorName*, *VendorData*) {*PinList*}

### Arguments

*EdgeLevel* can be either **Edge** or **Level**. The bit field name *\_MOD* is automatically created to refer to this portion of the resource descriptor.

*ActiveLevel* can be one of **ActiveHigh**, **ActiveLow** or **ActiveBoth**. **ActiveBoth** can be specified only if *EdgeLevel* is **Edge**. The bit field name *\_POL* is automatically created to refer to this portion of the resource descriptor.

*Shared* is an optional argument and can be one of **Shared**, **Exclusive**, **SharedAndWake** or **ExclusiveAndWake**. If not specified, **Exclusive** is assumed. The "Wake" designation indicates that the interrupt is capable of waking the system from a low-power idle state or a system sleep state. The bit field name *\_SHR* is automatically created to refer to this portion of the resource descriptor.

*PinConfig* can be one of **PullDefault**, **PullUp**, **PullDown**, **PullNone** or a vendor-supplied value in the range 128-255. The bit field name *\_PPI* is automatically created to refer to this portion of the resource descriptor.

*DebounceTimeout* is an optional argument specifying the **debounce wait time**, in hundredths of milliseconds. The bit field name *\_DBT* is automatically created to refer to this portion of the resource descriptor.

*ResourceSource* is a string which uniquely identifies the **GPIO controller** referred to by this descriptor. *ResourceSource* can be a fully-qualified name, a relative name or a name segment that utilizes the namespace search rules.

*ResourceSourceIndex* is an optional argument and is assumed to be 0 for this revision.

*ResourceUsage* is an optional argument and is assumed to be **ResourceConsumer** for this revision.

*DescriptorName* is an optional argument that specifies a name for an integer constant that will be created in the current scope that contains the offset of this resource descriptor within the current resource template buffer. The predefined descriptor field names may be appended to this name to access individual fields within the descriptor via the Buffer Field operators.

*VendorData* is an optional argument that specifies a RawDataBuffer containing vendor-defined byte data to be decoded by the OS driver. The bit field name *\_VEN* is automatically created to refer to this portion of the resource descriptor.

*PinList* is a list of (zero-based) pin numbers on the *ResourceSource* that are described by this descriptor. For interrupt pin descriptors, only one pin is allowed. The bit field name *\_PIN* is automatically created to refer to this portion of the resource descriptor.

## Description

The **GpioInt** macro evaluates to a buffer that contains a GPIO Interrupt Connection resource descriptor. The format of the GPIO Interrupt Connection resource descriptor can be found in "GPIO Connection Descriptor" ([Section 6.4.3.8.1](#)). The macro is designed to be used inside of a Resource Template ([Section 19.3.3](#)).

## 19.6.56 Gpiolo (GPIO Connection IO Resource Descriptor Macro)

**Gpiolo** (*Shared*, *PinConfig*, *DebounceTimeout*, *DriveStrength*, *IORestriction*, *ResourceSource*, *ResourceSourceIndex*, *ResourceUsage*, *DescriptorName*, *VendorData*) {*PinList*}

### Arguments

*Shared* is an optional argument and can be either **Shared** or **Exclusive**. If not specified, **Exclusive** is assumed. The bit field name *\_SHR* is automatically created to refer to this portion of the resource descriptor.

*PinConfig* can be one of **PullDefault**, **PullUp**, **PullDown**, **PullNone** or a vendor-supplied value in the range 128-255. The bit field name *\_PPI* is automatically created to refer to this portion of the resource descriptor.

*DebounceTimeout* is an optional argument specifying the hardware **debounce wait time**, in hundredths of milliseconds. The bit field name *\_DBT* is automatically created to refer to this portion of the resource descriptor.

*DriveStrength* is an optional argument specifying the **output drive** capability of the pin, in hundredths of milliamperes. The bit field name *\_DRS* is automatically created to refer to this portion of the resource descriptor.

*IORestriction* is an optional argument and can be **IoRestrictionInputOnly**, **IoRestrictionOutputOnly**, **IoRestrictionNone**, or **IORestrictionNoneAndPreserve**. IORestrictions limit the mode in which the pin can be accessed (Input or Output). They also ensure that the pin configuration is preserved during periods when the driver is unloaded or the resource has been disconnected by the driver. If not specified, **IoRestrictionNone** is assumed. The bit field name *\_IOR* is automatically created to refer to this portion of the resource descriptor.

**ResourceSource** is a string which uniquely identifies the **GPIO controller** referred to by this descriptor. **ResourceSource** can be a fully-qualified name, a relative name or a name segment that utilizes the namespace search rules.

**ResourceSourceIndex** is an optional argument and is always **0** for this revision.

**ResourceUsage** is an optional argument and is always **ResourceConsumer** for this revision.

*DescriptorName* is an optional argument that specifies a name for an integer constant that will be created in the current scope that contains the offset of this resource descriptor within the current resource template buffer. The predefined descriptor field names may be appended to this name to access individual fields within the descriptor via the Buffer Field operators.

*VendorData* is an optional argument that specifies a RawDataBuffer containing vendor-defined byte data to be decoded by the OS driver. The bit field name *\_VEN* is automatically created to refer to this portion of the resource descriptor.

*PinList* is a list of **pin numbers** on the ResourceSource that are described by this descriptor. The bit field name *\_PIN* is automatically created to refer to this portion of the resource descriptor.

## Description

The **Gpiolo** macro evaluates to a buffer that contains a GPIO IO Connection resource descriptor. The format of the GPIO IO Connection resource descriptor can be found in "GPIO Connection Descriptor" ([Section 6.4.3.8.1](#)). The macro is designed to be used inside of a Resource Template ([Section 19.3.3](#)).

## 19.6.57 I2CSerialBusV2 (I2C Serial Bus Connection Resource Descriptor (Version 2) Macro)

### Syntax

**I2CSerialBusV2** (*SlaveAddress*, *SlaveMode*, *ConnectionSpeed*, *AddressingMode*, *ResourceSource*, *ResourceSourceIndex*, *ResourceUsage*, *DescriptorName*, *Shared*, *VendorData*)

### Arguments

*SlaveAddress* is the I2C bus address for this connection. The bit field name *\_ADR* is automatically created to refer to this portion of the resource descriptor.

*SlaveMode* is an optional argument and can be either **ControllerInitiated** or **DeviceInitiated**. ControllerInitiated is the default. The bit field name *\_SLV* is automatically created to refer to this portion of the resource descriptor.

*ConnectionSpeed* is the maximum connection speed supported by this connection, in hertz. The bit field name *\_SPE* is automatically created to refer to this portion of the resource descriptor.

*AddressingMode* is an optional argument and can be either **AddressingMode7Bit** or **AddressingMode10Bit**. AddressingMode7Bit is the default. The bit field name *\_MOD* is automatically created to refer to this portion of the resource descriptor.

*ResourceSource* is a string which uniquely identifies the **I2C bus controller** referred to by this descriptor. *ResourceSource* can be a fully-qualified name, a relative name or a name segment that utilizes the namespace search rules.

*ResourceSourceIndex* is an optional argument and is assumed to be 0 for this revision.

*ResourceUsage* is an optional argument and is assumed to be **ResourceConsumer** for this revision.

*DescriptorName* is an optional argument that specifies a name for an integer constant that will be created in the current scope that contains the offset of this resource descriptor within the current resource template buffer. The predefined descriptor field names may be appended to this name to access individual fields within the descriptor via the Buffer Field operators.

*Shared* is an optional argument and can be either **Shared** or **Exclusive**. If not specified, **Exclusive** is assumed. The bit field name *\_SHR* is automatically created to refer to this portion of the resource descriptor.

*VendorData* is an optional argument that specifies an object to be decoded by the OS driver. It is a RawDataBuffer. The bit field name *\_VEN* is automatically created to refer to this portion of the resource descriptor.

## Description

The **I2CSerialBusV2** macro evaluates to a buffer that contains an I2C Serial Bus resource descriptor (Version 2). The macro is designed to be used inside of a ResourceTemplate (see [Section 19.3.3](#)).

### 19.6.58 If (Conditional Execution)

#### Syntax

**If** (*Predicate*) {*TermList*}

#### Arguments

*Predicate* is evaluated as an Integer.

## Description

If the *Predicate* is non-zero, the term list of the **If** term is executed.

#### Example

The following examples all check for bit 3 in **Local0** being set, and clear it if set.

```
// example 1

If (And (Local 0, 4))
{
    XOr (Local 0, 4, Local 0)
}
```

```
// example 2

Store (4, Local 2)
If (And (Local 0, Local 2))
{
    XOr (Local 0, Local 2, Local 0)
}
```

### 19.6.59 Include (Include Additional ASL File)

#### Syntax

**Include** (*FilePathName*)

#### Arguments

*FilePathname* is a StringData data type that contains the full OS file system path.

## Description

Include another file that contains ASL terms to be inserted in the current file of ASL terms. The file must contain elements that are grammatically correct in the current scope.

#### Example

```
I ncl ude ("dataobj . asl ")
```

## 19.6.60 Increment (Integer Increment)

### Syntax

**Increment (Addend)** => Integer

*Destination* = *Source* [*Index*] => ObjectReference

*Addend*++ => Integer

### Arguments

*Addend* is evaluated as an Integer.

### Description

Add one to the Addend and place the result back in Addend. Equivalent to **Add (Addend, 1, Addend)**. Overflow conditions are ignored and the result of an overflow is zero.

## 19.6.61 Index (Indexed Reference To Member Object)

### Syntax

**Index (Source, Index, Destination)** => ObjectReference

*Destination* = *Source* [*Index*] => ObjectReference

### Arguments

*Source* is evaluated to a buffer, string, or package data type. *Index* is evaluated to an integer. The reference to the *n*th object (where *n* = *Index*) within *Source* is optionally stored as a reference into *Destination*.

### Description

When *Source* evaluates to a Buffer, Index returns a reference to a Buffer Field containing the *n*th byte in the buffer. When *Source* evaluates to a String, Index returns a reference to a Buffer Field containing the *n*th character in the string. When *Source* evaluates to a Package, Index returns a reference to the *n*th object in the package.

#### 19.6.61.1 Index with Packages

The following example ASL code shows a way to use the **Index** term to store into a local variable the sixth element of the first package of a set of nested packages:

```
Name (I00D, Package () {
    Package () {
        0x01, 0x03F8, 0x03F8, 0x01, 0x08, 0x01, 0x25, 0xFF, 0xFE, 0x00, 0x00
    },
    Package () {
        0x01, 0x02F8, 0x02F8, 0x01, 0x08, 0x01, 0x25, 0xFF, 0xBE, 0x00, 0x00
    },
    Package () {
        0x01, 0x03E8, 0x03E8, 0x01, 0x08, 0x01, 0x25, 0xFF, 0xFA, 0x00, 0x00
    }
})
```

```

    },
    Package () {
        x01, 0x02E8, 0x02E8, 0x01, 0x08, 0x01, 0x25, 0xFF, 0xBA, 0x00, 0x00
    },
    Package() {
        0x01, 0x0100, 0x03F8, 0x08, 0x08, 0x02, 0x25, 0x20, 0x7F, 0x00, 0x00
    }
}

// Get the 6th element of the first package

Store (DeRefOf (Index (DeRefOf (Index (100D, 0)), 5)), Local0)

```

**Note:** *DeRefOf* is necessary in the first operand of the **Store** operator in order to get the actual object, rather than just a reference to the object. If *DeRefOf* were not used, then *Local0* would contain an object reference to the sixth element in the first package rather than the number 1.

#### 19.6.61.2 Index with Buffers

The following example ASL code shows a way to store into the third byte of a buffer:

```

Name (BUFF, Buffer () {0x01, 0x02, 0x03, 0x04, 0x05})

// Store 0x55 into the third byte of the buffer

Store (0x55, Index (BUFF, 2))

```

The **Index** operator returns a reference to an 8-bit Buffer Field (similar to that created using **CreateByteField**).

If *Source* is evaluated to a buffer data type, the *ObjectReference* refers to the byte at *Index* within *Source*. If *Source* is evaluated to a buffer data type, a **Store** operation will only change the byte at *Index* within *Source*.

The following example ASL code shows the results of a series of **Store** operations:

```

Name (SRCB, Buffer () {0x10, 0x20, 0x30, 0x40})
Name (BUFF, Buffer () {0x1, 0x2, 0x3, 0x4})

```

The following will store 0x78 into the 3<sup>rd</sup> byte of the destination buffer:

```
Store (0x12345678, Index (BUFF, 2))
```

The following will store 0x10 into the 2<sup>nd</sup> byte of the destination buffer:

```
Store (SRCB, Index (BUFF, 1))
```

The following will store 0x41 (an 'A') into the 4<sup>th</sup> byte of the destination buffer:

```
Store ("ABCDEFGH", Index (BUFF, 3))
```

**Note:** **(Compatibility Note)** First introduced in ACPI 2.0. In ACPI 1.0, the behavior of storing data larger than 8-bits into a buffer using Index was undefined.

### 19.6.61.3 Index with Strings

The following example ASL code shows a way to store into the 3<sup>rd</sup> character in a string:

```
Name (STR, "ABCDEFGHIJKL")
// Store 'H' (0x48) into the third character to the string
Store ("H", Index (STR, 2))
```

The **Index** operator returns a reference to an 8-bit Buffer Field (similar to that created using **CreateByteField**).

**Note:** **(Compatibility Note)** First introduced in ACPI 2.0.

### 19.6.62 IndexField (Declare Index/Data Fields)

#### Syntax

**IndexField (IndexName, DataName, AccessType, LockRule, UpdateRule) {FieldUnitList}**

#### Arguments

*IndexName* is evaluated as a Namestring and refers to a Field Unit object.

*DataName* is evaluated as a Namestring and refers to a Field Unit object.

*AccessType*, *LockRule*, *UpdateRule*, and *FieldList* are the same format as the **Field** term.

#### Description

Creates a series of named data objects whose data values are fields within a larger object accessed by an index/data-style reference to *IndexName* and *DataName*.

This encoding is used to define named data objects whose data values are fields within an index/data register pair. This provides a simple way to declare register variables that occur behind a typical index and data register pair.

Accessing the contents of an indexed field data object will automatically occur through the *DataName* object by using an *IndexName* object aligned on an *AccessType* boundary, with synchronization occurring on the operation region that contains the index data variable, and on the Global Lock if specified by *LockRule*.

The value written to the *IndexName* register is defined to be a byte offset that is aligned on an *AccessType* boundary. For example, if *AccessType* is **DWordAcc**, valid index values are 0, 4, 8, etc. This value is always a byte offset and is independent of the width or access type of the *DataName* register.

#### Example

The following is a block of ASL sample code using **IndexField**:

Creates an index/data register in system I/O space made up of 8-bit registers.

- Creates a FETO field within the indexed range.

```

Method (EX1) {
    // Define a 256-byte operational region in SystemI0 space
    // and name it GI00

    OperationRegion (GI00, 1, 0x125, 0x100)

    // Create a field named Preserve structured as a sequence
    // of index and data bytes

    Field (GI00, ByteAcc, NoLock, WriteAsZeros) {
        IDX0, 8,
        DAT0, 8,
        .
        .
        .
    }
    // Create an IndexField within IDX0 & DAT0 which has
    // FETs in the first two bits of indexed offset 0,
    // and another 2 FETs in the high bit on indexed
    // 2F and the low bit of indexed offset 30

    IndexField (IDX0, DAT0, ByteAcc, NoLock, Preserve) {
        FET0, 1,
        FET1, 1,
        Offset (0x2f),           // skip to byte offset 2f
        , 7,                     // skip another 7 bits
        FET3, 1,
        FET4, 1
    }

    // Clear FET3 (index 2F, bit 7)

    Store (Zero, FET3)
}

} // End EX1

```

## 19.6.63 Interrupt (Interrupt Resource Descriptor Macro)

### Syntax

**Interrupt** (*ResourceUsage*, *EdgeLevel*, *ActiveLevel*, *Shared*, *ResourceSourceIndex*, *ResourceSource*, *DescriptorName*) {*InterruptList*} => Buffer

### Arguments

*ResourceUsage* describes whether the device consumes the specified interrupt (**ResourceConsumer**) or produces it for use by a child device (**ResourceProducer**). If nothing is specified, then ResourceConsumer is assumed.

*EdgeLevel* describes whether the interrupt is edge triggered (**Edge**) or level triggered (**Level**). The field *DescriptorName.\_HE* is automatically created to refer to this portion of the resource descriptor, where '1' is Edge and '0' is Level.

*ActiveLevel* describes whether the interrupt is active-high (**ActiveHigh**) or active-low (**ActiveLow**). The field *DescriptorName.\_LL* is automatically created to refer to this portion of the resource descriptor, where '1' is ActiveHigh and '0' is ActiveLow.

*Shared* describes whether the interrupt can be shared with other devices (**Shared**) or not (**Exclusive**), and whether it is capable of waking the system from a low-power idle or system sleep state (**SharedAndWake** or **ExclusiveAndWake**). The field *DescriptorName.\_SHR* is automatically created to refer to this portion of the resource descriptor, where '1' is Shared and '0' is Exclusive. If nothing is specified, then Exclusive is assumed.

*ResourceSourceIndex* evaluates to an integer between 0x00 and 0xFF and describes the resource source index. If it is not specified, then it is not generated. If this argument is specified, the *ResourceSource* argument must also be specified.

*ResourceSource* evaluates to a string which uniquely identifies the resource source. If it is not specified, it is not generated. If this argument is specified, but the *ResourceSourceIndex* argument is not specified, a zero value is assumed.

*DescriptorName* evaluates to a name string which refers to the entire resource descriptor.

*InterruptList* is a comma-delimited list on integers, at least one value is required. Each integer represents a 32-bit interrupt number. At least one interrupt must be defined, and there may be no duplicates in the list. The field "*DescriptorName.\_INT*" is automatically created to refer to this portion of the resource descriptor.

## Description

The **Interrupt** macro evaluates to a buffer that contains an interrupt resource descriptor. The format of the interrupt resource descriptor can be found in [Section 6.4.3.6](#), Extended Interrupt Descriptor. The macro is designed to be used inside of a ResourceTemplate (page 1033).

### 19.6.64 IO (IO Resource Descriptor Macro)

#### Syntax

**IO** (*Decode*, *AddressMin*, *AddressMax*, *AddressAlignment*, *RangeLength*, *DescriptorName*) => Buffer

#### Argument

*Decode* describes whether the I/O range uses 10-bit decode (**Decode10**) or 16-bit decode (**Decode16**). The field *DescriptorName.\_DEC* is automatically created to refer to this portion of the resource descriptor, where '1' is **Decode16** and '0' is **Decode10**.

*AddressMin* evaluates to a 16-bit integer that specifies the minimum acceptable starting address for the I/O range. It must be an even multiple of *AddressAlignment*. The field *DescriptorName.\_MIN* is automatically created to refer to this portion of the resource descriptor.

*AddressMax* evaluates to a 16-bit integer that specifies the maximum acceptable starting address for the I/O range. It must be an even multiple of *AddressAlignment*. The field *DescriptorName.\_MAX* is automatically created to refer to this portion of the resource descriptor.

*AddressAlignment* evaluates to an 8-bit integer that specifies the alignment granularity for the I/O address assigned. The field *DescriptorName.\_ALN* is automatically created to refer to this portion of the resource descriptor.

*RangeLength* evaluates to an 8-bit integer that specifies the number of bytes in the I/O range. The field *DescriptorName.\_LEN* is automatically created to refer to this portion of the resource descriptor.

*DescriptorName* is an optional argument that specifies a name for an integer constant that will be created in the current scope that contains the offset of this resource descriptor within the current resource template buffer. The predefined descriptor field names may be appended to this name to access individual fields within the descriptor via the Buffer Field operators.

## Description

The **IO** macro evaluates to a buffer which contains an IO resource descriptor. The format of the IO descriptor can be found in “I/O Port Descriptor” (page 419). The macro is designed to be used inside of a ResourceTemplate (page 1033).

### 19.6.65 IRQ (Interrupt Resource Descriptor Macro)

#### Syntax

**IRQ** (*EdgeLevel*, *ActiveLevel*, *Shared*, *DescriptorName*) {*InterruptList*} => Buffer

#### Arguments

*EdgeLevel* describes whether the interrupt is edge triggered (**Edge**) or level triggered (**Level**). The field *DescriptorName.\_HE* is automatically created to refer to this portion of the resource descriptor, where ‘1’ is **Edge** and **ActiveHigh** and ‘0’ is **Level** and **ActiveLow**.

*ActiveLevel* describes whether the interrupt is active-high (**ActiveHigh**) or active-low (**ActiveLow**). The field *DescriptorName.\_LL* is automatically created to refer to this portion of the resource descriptor, where ‘1’ is **Edge** and **ActiveHigh** and ‘0’ is **Level** and **ActiveLow**.

*Shared* describes whether the interrupt can be shared with other devices (**Shared**) or not (**Exclusive**), and whether it is capable of waking the system from a low-power idle or system sleep state (**SharedAndWake** or **ExclusiveAndWake**). The field *DescriptorName.\_SHR* is automatically created to refer to this portion of the resource descriptor, where ‘1’ is **Shared** and ‘0’ is **Exclusive**. If nothing is specified, then **Exclusive** is assumed.

*DescriptorName* is an optional argument that specifies a name for an integer constant that will be created in the current scope that contains the offset of this resource descriptor within the current resource template buffer. The predefined descriptor field names may be appended to this name to access individual fields within the descriptor via the Buffer Field operators.

*InterruptList* is a comma-delimited list of integers in the range 0 through 15, at least one value is required. There may be no duplicates in the list.

## Description

The **IRQ** macro evaluates to a buffer that contains an IRQ resource descriptor. The format of the IRQ descriptor can be found in “IRQ Descriptor” ((page 419). The macro produces the three-byte form of the descriptor. The macro is designed to be used inside of a ResourceTemplate (page 1033).

### 19.6.66 IRQNoFlags (Interrupt Resource Descriptor Macro)

#### Syntax

**IRQNoFlags** (*DescriptorName*) {*InterruptList*} => Buffer

#### Arguments

*DescriptorName* is an optional argument that specifies a name for an integer constant that will be created in the current scope that contains the offset of this resource descriptor within the current resource template buffer.

*InterruptList* is a comma-delimited list of integers in the range 0 through 15, at least one value is required. There may be no duplicates in the list Description

The **IRQNoFlags** macro evaluates to a buffer which contains an active-high, edge-triggered IRQ resource descriptor. The format of the IRQ descriptor can be found in IRQ Descriptor (page 419). The macro produces the two-byte form of the descriptor. The macro is designed to be used inside of a ResourceTemplate (page 1033).

### 19.6.67 LAnd (Logical And)

#### Syntax

**LAnd** (*Source1*, *Source2*) => Boolean

*Source1* && *Source2* => Boolean

#### Arguments

*Source1* and *Source2* are evaluated as integers.

#### Description

If both values are non-zero, True is returned: otherwise, False is returned.

### 19.6.68 LEQaul (Logical Equal)

#### Syntax

**LEqual** (*Source1*, *Source2*) => Boolean

*Source1* == *Source2* => Boolean

#### Arguments

*Source1* and *Source2* must each evaluate to an integer, a string, or a buffer. The data type of *Source1* dictates the required type of *Source2*. *Source2* is implicitly converted if necessary to match the type of *Source1*.

## Description

If the values are equal, True is returned; otherwise, False is returned. For integers, a numeric compare is performed. For strings and buffers, True is returned only if both lengths are the same and the result of a byte-wise compare indicates exact equality.

### 19.6.69 LGreater (Logical Greater)

#### Syntax

**LGreater** (*Source1*, *Source2*) => Boolean

*Source1* > *Source2* => Boolean

#### Arguments

*Source1* and *Source2* must each evaluate to an integer, a string, or a buffer. The data type of *Source1* dictates the required type of *Source2*. *Source2* is implicitly converted if necessary to match the type of *Source1*.

## Description

If *Source1* is greater than *Source2*, True is returned; otherwise, False is returned. For integers, a numeric comparison is performed. For strings and buffers, a lexicographic comparison is performed. **True** is returned if a byte-wise (unsigned) compare discovers at least one byte in *Source1* that is numerically greater than the corresponding byte in *Source2*. **False** is returned if at least one byte in *Source1* is numerically less than the corresponding byte in *Source2*. In the case of byte-wise equality, **True** is returned if the length of *Source1* is greater than *Source2*, **False** is returned if the length of *Source1* is less than or equal to *Source2*.

### 19.6.70 LGreaterEqual (Logical Greater Than Or Equal)

#### Syntax

**LGreaterEqual** (*Source1*, *Source2*) => Boolean

*Source1* >= *Source2* => Boolean

#### Arguments

*Source1* and *Source2* must each evaluate to an integer, a string, or a buffer. The data type of *Source1* dictates the required type of *Source2*. *Source2* is implicitly converted if necessary to match the type of *Source1*.

## Description

If *Source1* is greater than or equal to *Source2*, True is returned; otherwise, False is returned. Equivalent to **LNot** (**LLess** ( ) ). See the description of the **LLess** operator.

### 19.6.71 LLess (Logical Less)

#### Syntax

**LLess** (*Source1*, *Source2*) => Boolean

*Source1* < *Source2* => Boolean

### Arguments

*Source1* and *Source2* must each evaluate to an integer, a string, or a buffer. The data type of *Source1* dictates the required type of *Source2*. *Source2* is implicitly converted if necessary to match the type of *Source1*.

### Description

If *Source1* is less than *Source2*, True is returned; otherwise, False is returned. For integers, a numeric comparison is performed. For strings and buffers, a lexicographic comparison is performed. **True** is returned if a byte-wise (unsigned) compare discovers at least one byte in *Source1* that is numerically less than the corresponding byte in *Source2*. **False** is returned if at least one byte in *Source1* is numerically greater than the corresponding byte in *Source2*. In the case of byte-wise equality, **True** is returned if the length of *Source1* is less than *Source2*, **False** is returned if the length of *Source1* is greater than or equal to *Source2*.

## 19.6.72 LLessEqual (Logical Less Than Or Equal)

### Syntax

**LLessEqual** (*Source1*, *Source2*) => Boolean

*Source1* <= *Source2* => Boolean

### Arguments

*Source1* and *Source2* must each evaluate to an integer, a string, or a buffer. The data type of *Source1* dictates the required type of *Source2*. *Source2* is implicitly converted if necessary to match the type of *Source1*.

### Description

If *Source1* is less than or equal to *Source2*, True is returned; otherwise False is returned. Equivalent to **LNot (LGreater ( ))**. See the description of the LGreater operator.

## 19.6.73 LNot (Logical Not)

### Syntax

**LNot** (*Source*) => Boolean

!*Source* => Boolean

### Arguments

*Source* is evaluated as an integer.

### Description

If the value is zero True is returned; otherwise, False is returned.

## 19.6.74 LNotEqual (Logical Not Equal) )

### Syntax

**LNotEqual (Source1, Source2) => Boolean**

*Source1* != *Source2* => Boolean

### Arguments

*Source1* and *Source2* must each evaluate to an integer, a string, or a buffer. The data type of *Source1* dictates the required type of *Source2*. *Source2* is implicitly converted if necessary to match the type of *Source1*.

### Description

If *Source1* is not equal to *Source2*, True is returned; otherwise False is returned. Equivalent to `LNot (LEqual ( ))`. See the description of the LEqual operator.

## 19.6.75 Load (Load Definition Block)

### Syntax

**Load (Object, DDBHandle)**

### Arguments

The Object parameter can refer to one of the following object types:

1. An operation region field
2. An operation region directly
3. An ASL Buffer object

If the object is an operation region, the operation region must be in SystemMemory space. The Definition Block should contain an ACPI DESCRIPTION\_HEADER of type SSDT.

The Definition Block must be totally contained within the supplied operation region, operation region field, or Buffer object. OSPM reads this table into memory, the checksum is verified, and then it is loaded into the ACPI namespace.

### Description

Performs a run-time load of a Definition Block. Any table loaded via an operation region must be in memory marked as AddressRangeReserved or AddressRangeNVS. The OS can also check the OEM Table ID and Revision ID against a database for a newer revision Definition Block of the same OEM Table ID and load it instead.

The default namespace location to load the Definition Block is relative to the root of the namespace. The new Definition Block can override this by specifying absolute names or by adjusting the namespace location using the **Scope** operator.

Loading a Definition Block is a synchronous operation. Upon completion of the operation, the Definition Block has been loaded. The control methods defined in the Definition Block are not executed during load time.

## 19.6.76 LoadTable (Load Definition Block From XSDT)

### Syntax

```
LoadTable (SignatureString, OEMIDString, OEMTableIDString, RootPathString, ParameterPathString, ParameterData) => DDBHandle
```

### Arguments

The XSDT is searched for a table where the *Signature* field matches *SignatureString*, the OEM ID field matches *OEMIDString*, and the OEM Table ID matches *OEMTableIDString*. All comparisons are case sensitive. If the *SignatureString* is greater than four characters, the *OEMIDString* is greater than six characters, or the *OEMTableID* is greater than eight characters, a run-time error is generated. The OS can also check the OEM Table ID and Revision ID against a database for a newer revision Definition Block of the same OEM Table ID and load it instead.

The *RootPathString* specifies the root of the Definition Block. It is evaluated using normal scoping rules, assuming that the scope of the **LoadTable** instruction is the current scope. The new Definition Block can override this by specifying absolute names or by adjusting the namespace location using the **Scope** operator. If *RootPathString* is not specified, "\\" is assumed

If *ParameterPathString* and *ParameterData* are specified, the data object specified by *ParameterData* is stored into the object specified by *ParameterPathString* after the table has been added into the namespace. If the first character of *ParameterPathString* is a backslash ('\\') or caret ('^') character, then the path of the object is *ParameterPathString*. Otherwise, it is *RootPathString.ParameterPathString*. If the specified object does not exist, a run-time error is generated.

The handle of the loaded table is returned. If no table matches the specified signature, then 0 is returned.

### Description

Performs a run-time load of a Definition Block from the XSDT. Any table referenced by **LoadTable** must be in memory marked by AddressRangeReserved or AddressRangeNVS.

**Note:** OSPM loads the DSDT and all SSDTs during initialization. As such, Definition Blocks to be conditionally loaded via **LoadTable** must contain signatures other than "SSDT".

Loading a Definition Block is a synchronous operation. Upon completion of the operation, the Definition Block has been loaded. The control methods defined in the Definition Block are not executed during load time.

### Example

```
Store (LoadTable ("OEM1", "MYOEM", "TABLE1", "\\_SB.PCI0", "MYD",
                  Package () {0, "\\_SB.PCI0"}), Local0)
```

This operation would search through the RSDT or XSDT for a table with the signature "OEM1," the OEM ID of "MYOEM," and the table ID of "TABLE1." If not found, it would store **Zero** in Local0. Otherwise, it will store a package containing 0 and "\\\_SB.PCI0" into the variable at \\\_SB.PCI0.MYD.

## 19.6.77 Localx (Method Local Data Objects)

### Syntax

`Local0 | Local1 | Local2 | Local3 | Local4 | Local5 | Local6 | Local7`

### Description

Up to 8 local objects can be referenced in a control method. On entry to a control method, these objects are uninitialized and cannot be used until some value or reference is stored into the object. Once initialized, these objects are preserved in the scope of execution for that control method.

## 19.6.78 LOr (Logical Or)

### Syntax

`LOr (Source1, Source2) => Boolean`

`Source1 || Source2 => Boolean`

### Arguments

`Source1` and `Source2` are evaluated as integers.

### Description

If either value is non-zero, True is returned; otherwise, False is returned.

## 19.6.79 Match (Find Object Match)

### Syntax

`Match (SearchPackage, Op1, MatchObject1, Op2, MatchObject2, StartIndex) => Ones | Integer`

### Arguments

`SearchPackage` is evaluated to a package object and is treated as a one-dimension array. Each package element must evaluate to either an integer, a string, or a buffer. Uninitialized package elements and elements that do not evaluate to integers, strings, or buffers are ignored. `Op1` and `Op2` are match operators. `MatchObject1` and `MatchObject2` are the objects to be matched and must each evaluate to either an integer, a string, or a buffer. `StartIndex` is the starting index within the `SearchPackage`.

### Description

A comparison is performed for each element of the package, starting with the index value indicated by `StartIndex` (0 is the first element). If the element of `SearchPackage` being compared against is called `P[i]`, then the comparison is:

`if (P[i] Op1 MatchObject1) and (P[i] Op2 MatchObject2) then Match => i` is returned.

If the comparison succeeds, the index of the element that succeeded is returned; otherwise, the constant object `Ones` is returned. The data type of the MatchObject dictates the required type of the package element. If necessary, the package element is implicitly converted to match the type of the MatchObject. If the implicit conversion fails for any reason, the package element is ignored (no match.)

*Op1* and *Op2* have the values and meanings listed in the following table.

**Table 19-432 Match Term Operator Meanings**

Operator	Encoding	Macro
<b>TRUE</b> – A don't care, always returns TRUE	0	MTR
<b>EQ</b> – Returns TRUE if $P[i] == \text{MatchObject}$	1	MEQ
<b>LE</b> – Returns TRUE if $P[i] \leq \text{MatchObject}$	2	MLE
<b>LT</b> – Returns TRUE if $P[i] < \text{MatchObject}$	3	MLT
<b>GE</b> – Returns TRUE if $P[i] \geq \text{MatchObject}$	4	MGE
<b>GT</b> – Returns TRUE if $P[i] > \text{MatchObject}$	5	MGT

## Example

Following are some example uses of **Match**:

```
Name (P1,
    Package () {1981, 1983, 1985, 1987, 1989, 1990, 1991, 1993, 1995, 1997, 1999,
2001}
)

// match 1993 == P1[i]
Match (P1, MEQ, 1993, MTR, 0, 0)           // -> 7, since P1[7] == 1993

// match 1984 == P1[i]
Match (P1, MEQ, 1984, MTR, 0, 0)           // -> ONES (not found)

// match P1[i] > 1984 and P1[i] <= 2000
Match (P1, MGT, 1984, MLE, 2000, 0)         // -> 2, since P1[2]>1984 and P1[2]<=2000

// match P1[i] > 1984 and P1[i] <= 2000, starting with 3rd element
Match (P1, MGT, 1984, MLE, 2000, 3)         // -> 3, first match at or past Start
```

## 19.6.80 Memory24 (Memory Resource Descriptor Macro)

### Syntax

**Memory24** (*ReadWrite*, *AddressMinimum*, *AddressMaximum*, *AddressAlignment*, *RangeLength*, *DescriptorName*)

### Arguments

*ReadWrite* specifies whether or not the memory region is read-only (**ReadOnly**) or read/write (**ReadWrite**). If nothing is specified, then *ReadWrite* is assumed. The 1-bit field *DescriptorName.\_RW* is automatically created to refer to this portion of the resource descriptor, where '1' is *ReadWrite* and '0' is *ReadOnly*.

*AddressMinimum* evaluates to a 16-bit integer that specifies bits [8:23] of the lowest possible base address of the memory range. All other bits are assumed to be zero. The value must be an even multiple of *AddressAlignment*. The 16-bit field *DescriptorName.\_MIN* is automatically created to refer to this portion of the resource descriptor.

*AddressMaximum* evaluates to a 16-bit integer that specifies bits [8:23] of the highest possible base address of the memory range. All other bits are assumed to be zero. The value must be an even multiple of *AddressAlignment*. The 16-bit field *DescriptorName.\_MAX* is automatically created to refer to this portion of the resource descriptor.

*AddressAlignment* evaluates to a 16-bit integer that specifies bits [0:15] of the required alignment for the memory range. All other bits are assumed to be zero. The address selected must be an even multiple of this value. The 16-bit field *DescriptorName.\_ALN* is automatically created to refer to this portion of the resource descriptor.

*RangeLength* evaluates to a 16-bit integer that specifies the total number of bytes decoded in the memory range. The 16-bit field *DescriptorName.\_LEN* is automatically created to refer to this portion of the resource descriptor. The range length provides the length of the memory range in 256 byte blocks.

*DescriptorName* is an optional argument that specifies a name for an integer constant that will be created in the current scope that contains the offset of this resource descriptor within the current resource template buffer. The predefined descriptor field names may be appended to this name to access individual fields within the descriptor via the Buffer Field operators.

## Description

The **Memory24** macro evaluates to a buffer which contains a 24-bit memory descriptor. The format of the 24-bit memory descriptor can be found in “24-Bit Memory Range Descriptor” (page 426). The macro is designed to be used inside of a ResourceTemplate (page 1033).

**Note:** The use of **Memory24** is deprecated and should not be used in new designs.

### 19.6.81 Memory32 (Memory Resource Descriptor Macro)

#### Syntax

**Memory32 (ReadWrite, AddressMinimum, AddressMaximum, AddressAlignment, RangeLength, DescriptorName)**

#### Arguments

*ReadWrite* specifies whether or not the memory region is read-only (**ReadOnly**) or read/write (**ReadWrite**). If nothing is specified, then **ReadWrite** is assumed. The 1-bit field *DescriptorName.\_RW* is automatically created to refer to this portion of the resource descriptor, where ‘1’ is **ReadWrite** and ‘0’ is **ReadOnly**.

*AddressMinimum* evaluates to a 32-bit integer that specifies the lowest possible base address of the memory range. The value must be an even multiple of *AddressAlignment*. The 32-bit field *DescriptorName.\_MIN* is automatically created to refer to this portion of the resource descriptor.

*AddressMaximum* evaluates to a 32-bit integer that specifies the highest possible base address of the memory range. The value must be an even multiple of *AddressAlignment*. The 32-bit field *DescriptorName.\_MAX* is automatically created to refer to this portion of the resource descriptor.

*AddressAlignment* evaluates to a 32-bit integer that specifies the required alignment for the memory range. The address selected must be an even multiple of this value. The 32-bit field *DescriptorName*.\_ALN is automatically created to refer to this portion of the resource descriptor.

*RangeLength* evaluates to a 32-bit integer that specifies the total number of bytes decoded in the memory range. The 32-bit field *DescriptorName*.\_LEN is automatically created to refer to this portion of the resource descriptor. The range length provides the length of the memory range in 1 byte blocks.

*DescriptorName* is an optional argument that specifies a name for an integer constant that will be created in the current scope that contains the offset of this resource descriptor within the current resource template buffer. The predefined descriptor field names may be appended to this name to access individual fields within the descriptor via the Buffer Field operators.

## Description

The **Memory32** macro evaluates to a buffer which contains a 32-bit memory descriptor, which describes a memory range with a minimum, a maximum and an alignment. The format of the 32-bit memory descriptor can be found in “32-Bit Memory Range Descriptor” (page 427). The macro is designed to be used inside of a ResourceTemplate (page 1033).

### 19.6.82 Memory32Fixed (Memory Resource Descriptor Macro)

#### Syntax

**Memory32Fixed** (*ReadWrite*, *AddressBase*, *RangeLength*, *DescriptorName*)

#### Arguments

*ReadWrite* specifies whether or not the memory region is read-only (**ReadOnly**) or read/write (**ReadWrite**). If nothing is specified, then *ReadWrite* is assumed. The 1-bit field *DescriptorName*.\_RW is automatically created to refer to this portion of the resource descriptor, where ‘1’ is *ReadWrite* and ‘0’ is *ReadOnly*.

*AddressBase* evaluates to a 32-bit integer that specifies the base address of the memory range. The 32-bit field *DescriptorName*.\_BAS is automatically created to refer to this portion of the resource descriptor.

*RangeLength* evaluates to a 32-bit integer that specifies the total number of bytes decoded in the memory range. The 32-bit field *DescriptorName*.\_LEN is automatically created to refer to this portion of the resource descriptor.

*DescriptorName* is an optional argument that specifies a name for an integer constant that will be created in the current scope that contains the offset of this resource descriptor within the current resource template buffer. The predefined descriptor field names may be appended to this name to access individual fields within the descriptor via the Buffer Field operators.

## Description

The **Memory32Fixed** macro evaluates to a buffer which contains a 32-bit memory descriptor, which describes a fixed range of memory addresses. The format of the fixed 32-bit memory descriptor can be found in 32-Bit Fixed Memory Range Descriptor (page 429). The macro is designed to be used inside of a ResourceTemplate (page 1033).

## 19.6.83 Method (Declare Control Method)

### Syntax

**Method** (*MethodName*, *NumArgs*, *SerializeRule*, *SyncLevel*, *ReturnType*, *ParameterTypes*) {*TermList*}

### Arguments

*MethodName* is evaluated as a Namestring data type.

*NumArgs* is optional and is the required number of arguments to be passed to the method, evaluated as an Integer data type. If not specified, the default value is zero arguments. Up to 7 arguments may be passed to a method. These arguments may be referenced from within the method as **Arg0** through **Arg6**.

*SerializeRule* is optional and is a flag that defines whether the method is serialized or not and is one of the following: **Serialized** or **NotSerialized**. A method that is serialized cannot be reentered by additional threads. If not specified, the default is **NotSerialized**.

*SyncLevel* is optional and specifies the synchronization level for the method (0 – 15). If not specified, the default sync level is zero.

*ReturnType* is optional and specifies the type(s) of the object(s) returned by the method. If the method does not return an object, then nothing is specified or **UnknownObj** is specified. To specify a single return type, simply use the *ObjectTypeKeyword* (e.g. **IntObj**, **PkgObj**, etc.). To specify multiple possible return types, enclose the comma-separated *ObjectTypeKeywords* with braces. For example: {**IntObj**, **BuffObj**}.

*ParameterTypes* is optional and specifies the type of the method parameters. It is a comma-separated, variable-length list of the expected object type or types for each of the method parameters, enclosed in braces. For each parameter, the parameter type consists of either an *ObjectTypeKeyword* or a comma-separated sub-list of *ObjectTypeKeywords* enclosed in braces. If *ParameterTypes* is specified, the number of parameters must match *NumArgs*.

*TermList* is a variable-length list of executable ASL statements representing the body of the control method.

### Description

Creates a new control method of name *MethodName*. This is a named package containing a series of object references that collectively represent a control method, which is a procedure that can be invoked to perform computation. **Method** opens a name scope.

System software executes a control method by referencing the objects in the package in order. For more information on method execution, see [Section 5.5.2](#), “Control Method Execution.”

The current namespace location used during name creation is adjusted to be the current location on the namespace tree. Any names created within this scope are “below” the name of this package. The current namespace location is assigned to the method package, and all namespace references that occur during control method execution for this package are relative to that location.

If a method is declared as **Serialized**, an implicit mutex associated with the method object is acquired at the specified *SyncLevel*. If no *SyncLevel* is specified, *SyncLevel 0* is assumed. The serialize rule can be used to prevent reentering of a method. This is especially useful if the method creates namespace objects.

Without the serialize rule, the reentering of a method will fail when it attempts to create the same namespace object.

There are eight local variables automatically available for each method, referenced as **Local0** through **Local7**. These locals may be used to store any type of ASL object.

Also notice that all namespace objects created by a method have temporary lifetime. When method execution exits, the created objects will be destroyed.

## Examples

The following block of ASL sample code shows a use of **Method** for defining a control method that turns on a power resource.

```
Method (_ON) {
    Store (One, GI0.IDEP)           // assert power
    Sleep (10)                     // wait 10ms
    Store (One, GI0.IDER)          // de-assert reset#
    Stall (10)                     // wait 10us
    Store (Zero, GI0.IDEI)         // de-assert isolation
}
```

This method is an implementation of **\_SRS** (Set Resources). It shows the use of a method argument and two method locals.

```
Method (_SRS, 1, NotSerialized)
{
    CreateWordField (Arg0, One, IRQW)
    Store (\_SB.PCI0.PID1.IENA, Local 1)
    Or (IRQW, Local 1, Local 1)
    Store (Local 1, \_SB.PCI0.PID1.IENA)
    FindSetRightBit (IRQW, Local 0)
    If (Local 0)
    {
        Decrement (Local 0)
        Store (Local 0, \_SB.PCI0.PID1.IN01)
    }
}
```

### 19.6.84 Mid (Extract Portion of Buffer or String)

#### Syntax

**Mid (Source, Index, Length, Result)** => Buffer or String

#### Arguments

*Source* is evaluated as either a Buffer or String. *Index* and *Length* are evaluated as Integers.

## Description

If *Source* is a buffer, then *Length* bytes, starting with the *Index*th byte (zero-based) are optionally copied into *Result*. If *Index* is greater than or equal to the length of the buffer, then the result is an empty buffer. Otherwise, if *Index + Length* is greater than or equal to the length of the buffer, then only bytes up to and including the last byte are included in the result.

If *Source* is a string, then *Length* characters, starting with the *Index*th character (zero-based) are optionally copied into *Result*. If *Index* is greater than or equal to the length of the buffer, then the result is an empty string. Otherwise, if *Index + Length* is greater than or equal to the length of the string, then only bytes up to and including the last character are included in the result.

## 19.6.85 Mod (Integer Modulo)

### Syntax

**Mod (Dividend, Divisor, Result) => Integer**

*Result* = *Dividend* % *Divisor* => Integer

*Result* %= *Divisor* => Integer

### Arguments

*Dividend* and *Divisor* are evaluated as Integers.

## Description

The *Dividend* is divided by *Divisor*, and then the resulting remainder is optionally stored into *Result*. If *Divisor* evaluates to zero, a fatal exception is generated.

## 19.6.86 Multiply (Integer Multiply)

### Syntax

**Multiply (Multiplicand, Multiplier, Result) => Integer**

*Result* = *Multiplicand* \* *Multiplier* => Integer

*Result* \*= *Multiplier* => Integer

### Arguments

*Multiplicand* and *Multiplier* are evaluated as Integers.

## Description

The *Multiplicand* is multiplied by *Multiplier* and the result is optionally stored into *Result*. Overflow conditions are ignored and results are undefined.

## 19.6.87 Mutex (Declare Synchronization/Mutex Object)

### Syntax

**Mutex (MutexName, SyncLevel)**

## Arguments

The *MutexName* is evaluated as a Namestring data type.

The *SyncLevel* is optional and specifies the logical nesting level of the Mutex synchronization object. The current sync level is maintained internally for a thread, and represents the greatest *SyncLevel* among mutex objects that are currently acquired by the thread. The *SyncLevel* of a thread, before acquiring any mutexes, is zero. The *SyncLevel* of the Global Lock (\\_GL) is zero. If not specified, the default sync level value is zero.

## Description

Creates a data mutex synchronization object named *MutexName*, with a synchronization level from 0 to 15 as specified by the Integer *SyncLevel*.

A mutex synchronization object provides a control method with a mechanism for waiting for certain events. To prevent deadlocks, wherever more than one synchronization object must be owned, the synchronization objects must always be released in the order opposite the order in which they were acquired.

The *SyncLevel* parameter declares the logical nesting level of the synchronization object. The *current sync level* is maintained internally for a thread, and represents the greatest *SyncLevel* among mutex objects that are currently acquired by the thread. The *SyncLevel* of a thread before acquiring any mutexes is zero. The *SyncLevel* of the Global Lock (\\_GL) is zero.

All **Acquire** terms must refer to a synchronization object with a *SyncLevel* that is equal or greater than the current level, and all **Release** terms must refer to a synchronization object with a *SyncLevel* that is equal to the current level.

Mutex synchronization provides the means for mutually exclusive ownership. Ownership is acquired using an **Acquire** term and is released using a **Release** term. Ownership of a Mutex must be relinquished before completion of any invocation. For example, the top-level control method cannot exit while still holding ownership of a Mutex. Acquiring ownership of a Mutex can be nested (can be acquired multiple times by the same thread).

## 19.6.88 Name (Declare Named Object)

### Syntax

**Name** (*ObjectName*, *Object*)

### Arguments

Creates a new object named *ObjectName*. Attaches *Object* to *ObjectName* in the Global ACPI namespace.

### Description

Creates *ObjectName* in the namespace, which references the *Object*.

### Example

The following example creates the name PTTX in the root of the namespace that references a package.

Name (\PTTX, // Port to Port Translate Table

```
    Package () {Package () {0x43, 0x59}, Package) {0x90, 0xFF}}
```

The following example creates the name CNT in the root of the namespace that references an integer data object with the value 5.

```
Name (\CNT, 5)
```

## 19.6.89 NAnd (Integer Bitwise Nand)

### Syntax

**NAnd** (*Source1, Source2, Result*) => Integer

### Arguments

*Source1* and *Source2* are evaluated as Integers.

### Description

A bitwise **NAND** is performed and the result is optionally stored in *Result*.

## 19.6.90 NoOp Code (No Operation)

### Syntax

```
NoOp
```

### Description

This operation has no effect.

## 19.6.91 NOR (Integer Bitwise Nor)

### Syntax

**NOr** (*Source1, Source2, Result*) => Integer

### Arguments

*Source1* and *Source2* are evaluated as Integers.

### Description

A bitwise **NOR** is performed and the result is optionally stored in *Result*.

## 19.6.92 Not (Integer Bitwise Not)

### Syntax

**Not** (*Source, Result*) => Integer

*Result* =  $\sim$  *Source* => Integer

### Arguments

*Source* is evaluated as an integer data type.

## Description

A bitwise **NOT** is performed and the result is optionally stored in *Result*.

### 19.6.93 Notify (Notify Object of Event)

#### Syntax

**Notify** (*Object*, *NotificationValue*)

#### Arguments

Notifies the OS that the *NotificationValue* for the *Object* has occurred. *Object* must be a reference to a device, processor, or thermal zone object.

## Description

*Object* type determines the notification values. For example, the notification values for a thermal zone object are different from the notification values used for a device object. Undefined notification values are treated as reserved and are ignored by the OS.

For lists of defined Notification values, see [Section 5.6.6](#), “Device Object Notifications.”

### 19.6.94 Offset (Change Current Field Unit Offset)

#### Syntax

**Offset** (*ByteOffset*)

#### Arguments

*ByteOffset* is the new offset (in bytes) for the next FieldUnit within a FieldList.

## Description

The **Offset** operator is used within a *FieldList* to specify the *byteOffset* of the next defined field within its parent operation region. This can be used instead of defining the bit lengths that need to be skipped. All offsets are defined starting from zero, based at the starting address of the parent region.

### 19.6.95 ObjectType (Get Object Type)

#### Syntax

**ObjectType** (*Object*) => Integer

#### Arguments

*Object* is any valid object.

## Description

The execution result of this operation is an integer that has the numeric value of the object type for *Object*.

The object type codes are listed in Table 18-20. Notice that if this operation is performed on an object reference such as one produced by the **Alias**, **Index**, or **RefOf** statements, the object type of the base

object is returned. For typeless objects such as predefined scope names (in other words, `\_SB`, `\_GPE`, etc.), the type value 0 (**Uninitialized**) is returned.

**Table 19-433 TValues Returned By the ObjectType Operator**

Value	Object
0	Uninitialized
1	Integer
2	String
3	Buffer
4	Package
5	Field Unit
6	Device
7	Event
8	Method
9	Mutex
10	Operation Region
11	Power Resource
12	Processor
13	Thermal Zone
14	Buffer Field
15	DDB Handle
16	Debug Object
>16	Reserved

## 19.6.96 One (Constant One Integer)

### Syntax

`One=> Integer`

### Description

The **One** operator returns an Integer with the value 1. Writes to this object are not allowed. The use of this operator can reduce AML code size, since it is represented by a one-byte AML opcode.

## 19.6.97 Ones (Constant Ones Integer)

### Syntax

`Ones=> Integer`

## Description

The **Ones** operator returns an Integer with all bits set to 1. Writes to this object are not allowed. The use of this operator can reduce AML code size, since it is represented by a one-byte AML opcode.

**Note:** *The actual value of the integer returned by the **Ones** operator depends on the integer width of the DSDT. If the revision of the DSDT is 1 or less, the integer width is 32 bits and **Ones** returns 0xFFFFFFFF. If the revision of the DSDT is 2 or greater, the integer width is 64 bits and **Ones** returns 0xFFFFFFFFFFFFFF. This difference must be considered when performing comparisons against the **Ones** Integer.*

### 19.6.98 OperationRegion (Declare Operation Region)

#### Syntax

**OperationRegion** (*RegionName*, *RegionSpace*, *Offset*, *Length*)

#### Arguments

Declares an operation region named *RegionName*. *Offset* is the offset within the selected *RegionSpace* at which the region starts (byte-granular), and *Length* is the length of the region in bytes.

#### Description

An Operation Region is a type of data object where read or write operations to the data object are performed in some hardware space. For example, the Definition Block can define an Operation Region within a bus, or system I/O space. Any reads or writes to the named object will result in accesses to the I/O space.

Operation regions are regions in some space that contain hardware registers for *exclusive* use by ACPI control methods. In general, no hardware register (at least byte-granular) within the operation region accessed by an ACPI control method can be shared with any accesses from any other source, with the exception of using the Global Lock to share a region with the firmware. The entire Operation Region can be allocated for exclusive use to the ACPI subsystem in the host OS.

Operation Regions that are defined within the scope of a method are the exception to this rule. These Operation Regions are known as “Dynamic” since the OS has no idea that they exist or what registers they use until the control method is executed. Using a Dynamic SystemIO or SystemMemory Operation Region is not recommended since the OS cannot *guarantee* exclusive access. All other types of Operation Regions may be Dynamic.

Operation Regions define the overall base address and length of a hardware region, but they cannot be accessed directly by AML code. A **Field** object containing one or more **FieldUnits** is used to overlay the Operation Region in order to access individual areas of the Region. An individual FieldUnit within an Operation Region may be as small as one bit, or as large as the length of the entire Region. FieldUnit values are normalized (shifted and masked to the proper length.) The data type of a FieldUnit can be either a **Buffer** or an **Integer**, depending on the bit length of the FieldUnit. If the FieldUnit is smaller than or equal to the size of an Integer (in bits), it will be treated as an Integer. If the FieldUnit is larger than the size of an Integer, it will be treated as a Buffer. The size of an Integer is indicated by the DSDT header’s *Revision* field. A revision less than 2 indicates that the size of an Integer is 32 bits. A value greater than or equal to 2 signifies that the size of an Integer is 64 bits. For more information about data types and FieldUnit type conversion rules, see [Section 19.3.5.7](#), “Data Type Conversion Rules”.

An Operation Region object implicitly supports Mutex synchronization. Updates to the object, or a **Field** data object for the region, will automatically synchronize on the Operation Region object; however, a control method may also explicitly synchronize to a region to prevent other accesses to the region (from other control methods). Notice that according to the control method execution model, control method execution is non-preemptive. Because of this, explicit synchronization to an Operation Region needs to be done only in cases where a control method blocks or yields execution and where the type of register usage requires such synchronization.

The predefined Operation Region types specified in ACPI are shown in the [Table 5-160 on page 275](#).

## Example

The following example ASL code shows the use of **OperationRegion** combined with **Field** to describe IDE 0 and 1 controlled through general I/O space, using one FET.

```
OperationRegion (GIO, SystemIO, 0x125, 0x1)
Field (GIO, ByteAcc, NoLock, Preserve) {
    IDEI,      1,          // IDEISO_EN - isolation buffer
    IDEP,      1,          // IDE_PWR_EN - power
    IDER,      1,          // IDERST#_EN - reset#
}
```

## 19.6.99 Or (Integer Bitwise Or)

### Syntax

**Or** (*Source1*, *Source2*, *Result*) => Integer

*Result* = *Source1* | *Source2* => Integer

*Result* |= *Source1* => Integer

### Arguments

*Source1* and *Source2* are evaluated as Integers.

### Description

A bitwise **OR** is performed and the result is optionally stored in *Result*.

## 19.6.100 Package (Declare Package Object)

### Syntax

**Package** (*NumElements*) {*PackageList*} => Package

### Arguments

*NumElements* is evaluated as an Integer. *PackageList* is an initializer list of objects.

## Description

Declares an unnamed aggregation of named data items, constants, and/or references to non-data namespace objects. The size of the package is *NumElements*. The *PackageList* contains the data items, constants, and/or object references used to initialize the package.

If *NumElements* is absent, it is automatically set by the ASL compiler to match the number of elements in the *PackageList*. If *NumElements* is present and greater than the number of elements in the *PackageList*, the default entry of type Uninitialized (see **ObjectType**) is used to initialize the package elements beyond those initialized from the *PackageList*.

There are three types of package elements allowed in the *PackageList*: ConstantData Objects(Integers, Strings, Buffers, and Packages), named references that resolve to Data Objects (Integers, Strings, Buffers, and Packages), and named references to objects other than Data Objects.

These constant terms are resolved at ASL compile time:

- Integer Constant
- String Constant
- Buffer Constant
- Package Constant

These Named References to Data Objects are resolved to actual data by the AML Interpreter at runtime:

- Integer reference
- String reference
- Buffer reference
- Buffer Field reference
- Field Unit reference
- Package reference

These Named References to non-Data Objects cannot be resolved to values. They are instead returned in the package as references:

- Device reference
- Event reference
- Method reference
- Mutex reference
- Operation Region reference
- Power Resource reference
- Processor reference
- Thermal Zone reference

**Note:** For Package elements of type Package (defining a subpackage), individual elements of the subpackage are resolved according to the rules above, both compile-time and runtime.

Evaluating an uninitialized element will yield a runtime error, but elements can be assigned values at runtime to define them (via the Index operator). It is a compile time error for *NumElements* to be less than the number of elements defined in the *PackageList*.

The ASL compiler can emit two different AML opcodes for a Package declaration, either *PackageOp* or *VarPackageOp*. For small, fixed-length packages, the *PackageOp* is used and this opcode is compatible with ACPI 1.0. A *VarPackageOp* will be emitted if any of the following conditions are true:

- The *NumElements* argument is a TermArg that can only be resolved at runtime.
- At compile time, *NumElements* resolves to a constant that is larger than 255.
- The *PackageList* contains more than 255 initializer elements.

## Example

```
Name (INT1, 0x1234)
Processor (CPU0, 0, 0x1010, 6) {}
PowerResource (PWR1, 0, 0) {}

Name (PKG1, Package () {
    0x3400,           // Integer Constant, resolved at compile time
    "Processor"      // String Constant, resolved at compile time
    \INT1            // Integer Reference, resolved to value at
                     // runtime
    \CPU0            // Object Reference, returned as a reference
                     // object
    Package () {    // Package Constant. Elements are resolved at
                     // both compile time and runtime
        0x4321,       // Integer Constant, resolved at compile time
        \INT1,         // Integer Reference, resolved to value at
                     // runtime
        \PWR1
    }
})
```

The runtime values of the parent package and subpackages are:

```
Package [Contains 0x05 Elements]
(00) Integer 0x0000000000003400
(01) String [0x09] "Processor"
(02) Integer 0x000000000001234
(03) Reference [Named Object] [CPU0] Processor
(04) Package [Contains 0x03 Elements]
(00) Integer 0x000000000004321
(01) Integer 0x000000000001234
(02) Reference [Named Object] [PWR1] Power
}
```

### 19.6.101 Pin Configuration

#### Syntax

Macro:

**PinConfig** (Shared/Exclusive, PinConfigType, PinConfigValue, ResourceSource, ResourceSourceIndex, ResourceUsage, DescriptorName, VendorData) {Pin List}

## Arguments

- Shared is an optional argument and can be either Shared or Exclusive. If not specified, Exclusive is assumed. The bit field name \_SHR is automatically created to refer to this portion of the resource descriptor.
- PinConfigType can be one of the configuration types described below in [Table 19-434](#). The bit field \_TYP is automatically created to refer to this portion of the resource descriptor.
- PinConfigValue is one of the configurations values described below in [Table 19-434](#). The bit field \_VAL is automatically created to refer to this portion of the resource descriptor.
- ResourceSource is a string which uniquely identifies the pin controller referred to by this descriptor. ResourceSource can be a fully-qualified name, a relative name or a name segment that utilizes the namespace search rules.
- ResourceSourceIndex is an optional argument and is assumed to be 0 for this revision.
- ResourceUsage is an optional argument and is assumed to be ResourceConsumer for this revision.
- DescriptorName is an optional argument that specifies a name for an integer constant that will be created in the current scope that contains the offset of this resource descriptor within the current resource template buffer. The predefined descriptor field names may be appended to this name to access individual fields within the descriptor via the Buffer Field operators.
- VendorData is an optional argument that specifies a RawDataBuffer containing vendor-defined byte data to be decoded by the OS driver. The bit field name \_VEN is automatically created to refer to this portion of the resource descriptor.
- PinList is a list of pin numbers on the ResourceSource that are described by this descriptor. The bit field name \_PIN is automatically created to refer to this portion of the resource descriptor.

**Table 19-434 Pin Configuration Types and Values**

Pin Configuration Type	Pin Configuration Value	Description
0x00 = Default	N/A	Default configuration. No configuration is applied.
0x01 = Bias Pull-Up	Pull up resistance, in Ohms.	This means the pin is pulled up with a certain number of Ohms to an implicitly supplied VDD rail.
0x02 = Bias Pull-down	Pull down resistance, in Ohms.	This means the pin is pulled down with a certain number of Ohms, toward the GND rail.
0x03 = Bias Default	N/A	If the silicon has a default biasing mode, reset the pin to this mode.
0x04 = Bias Disable	N/A	Any software-selectable bias settings on the pin will be disabled.
0x05 = Bias High Impedance	N/A	This means that the pin is configured into a high impedance mode and essentially shut off from the outside world. It will not influence the signal state if a rail is connected to the pin, hence a good default mode.
0x06 = Bias Bus Hold	N/A	This will make the pin in a weak latch state where it weakly drives the last value on a tristate bus.
0x07 = Drive Open Drain	N/A	This will configure the pin into open drain (open collector) state.

Pin Configuration Type	Pin Configuration Value	Description
0x08 = Drive Open Source	N/A	This will configure the pin into open source (open emitter) state.
0x09 = Drive Push Pull	N/A	This will configure the pin into explicit push-pull state. This is useful if the power-on default state is e.g. open drain or high impedance state.
0x0A = Drive Strength	Drive strength in milliamperes	This will set the output driver of the pin to supply a certain number of milliamperes, usually by activating several driver stages.
0x0B = Slew Rate	Custom format	This controls the slew rate of the pin, affecting speed but also sharpness of edges and thus noisiness on the board. The hardware-specific argument tells what slew rate to configure
0x0C = Input Debounce	Debounce time in microseconds.	This will enable debouncing (for e.g. key inputs) of the pin signal.
0x0D = Input Schmitt Trigger	Enabled = 1, Disabled = 0	This will enable Schmitt trigger support for the line.
0x0E – 0x7F = Reserved	Reserved	Reserved
0x80 – 0xFF = Vendor defined values	Custom base	From this point, vendor and Hardware-specific configurations are listed.

## Description

The PinConfig macro evaluates to a buffer that contains a Pin Configuration resource descriptor. The format of the Pin Configuration resource descriptor can be found in [“Pin Configuration Descriptor” on page 462](#). The macro is designed to be used inside of an ASL Resource Template ([Section 19.3.3](#)).

**Note:** There is some overlap between the properties set by Gpiolo/Gpioint/ PinFunction and PinConfig descriptors. For example, both are setting properties such as pull-ups. If the same property is specified by multiple descriptors for the same pins, the order in which these properties are applied is undetermined. To avoid any conflicts, Gpioint/Gpiolo/PinFunction should provide a default value for these properties when PinConfig is used. If PinConfig is used to set pin bias, PullDefault should be used for Gpiolo/Gpioint/ PinFunction. If PinConfig is used to set debounce timeout, 0 should be used for Gpiolo/Gpioint. If PinConfig is used to set drive strength, 0 should be used for Gpiolo.

## Example

```

//
// Description: GPIO
//
Device (GPIO)
{
    Name (_HID, "PNPFFFE")
    Name (_UID, 0x0)
    Method (_STA)
    {
        Return(0xf)
    }
    Method (_CRS, 0x0, NotSerialized)
    {
        Name (RBUF, ResourceTemplate()
        {
            Memory32Fixed(ReadWrite, 0x4FE00000, 0x20)
            Interrupt(ResourceConsumer, Level, ActiveHigh,
Shared) {0x54}
        })
        Return(RBUF)
    }
}

//
// Description: I2C controller 1
//
Device (I2C1)
{
    Name (_HID, "PNPFFFF")
    Name (_UID, 0x0)
    Method (_STA)
    {
        Return(0xf)
    }
    Method (_CRS, 0x0, NotSerialized)
    {
        Name (RBUF, ResourceTemplate()
        {
            Memory32Fixed(ReadWrite, 0x4F800000, 0x20)
            Interrupt(ResourceConsumer, Level, ActiveHigh,
Shared) {0x55}
            PinFunction(Exclusive, PullDefault, 0x5,
"\_SB.GPIO", 0, ResourceConsumer, ) {2, 3}
            // Configure 10k Pull up for I2C SDA/SCL pins
            PinConfig(Exclusive, 0x01, 10000, "\_SB.GPIO", 0,
ResourceConsumer, ) {2, 3}
    }
}

```

```

        })
        Return(RBUF)
    }

}

// Description: Physical display panel
//


Device (SDIO)
{
    Name (_HID, "PNPFFFFD")
    Name (_UID, 0x0)
    Method (_STA)
    {
        Return(0xf)
    }
    Method (_CRS, 0x0, NotSerialized)
    {
        Name (RBUF, ResourceTemplate()
        {
            Memory32Fixed(ReadWrite, 0x4F900000, 0x20)
            Interrupt(ResourceConsumer, Level, ActiveHigh,
Shared) {0x57}
            GpioIo(Shared, PullDefault, 0, 0, IoRestrictionNone,
"\_SB.GPIO", ) {2, 3}
                // Configure 20k Pull down
                PinConfig(Exclusive, 0x02, 20000, "\_SB.GPIO", 0,
ResourceConsumer, ) {2, 3}
                // Enable Schmitt-trigger
                PinConfig(Exclusive, 0x0D, 1, "\_SB.GPIO", 0,
ResourceConsumer, ) {2, 3}
                // Set slew rate to custom value 3
                PinConfig(Exclusive, 0x0B, 3, "\_SB.GPIO", 0,
ResourceConsumer, ) {2, 3}
            }
            Return(RBUF)
        }
    }
}

```

## 19.6.102 Pin Function

### Syntax

Macro:

**PinFunction**(Shared/Exclusive, PinPullConfiguration, FunctionNumber, ResourceSource, ResourceSourceIndex, ResourceUsage, DescriptorName, VendorData) {Pin List}

## Arguments

- Shared is an optional argument and can be one of Shared, Exclusive. If not specified, Exclusive is assumed. The bit field name \_SHR is automatically created to refer to this portion of the resource descriptor.
- PinPullConfiguration can be one of PullDefault, PullUp, PullDown, PullNone or a vendor-supplied value in the range 128-255.
- FunctionNumber is a provider-specific integer that designates which function is being described.
- ResourceSource is a string which uniquely identifies the GPIO controller referred to by this descriptor. ResourceSource can be a fully-qualified name, a relative name or a name segment that utilizes the namespace search rules.
- ResourceSourceIndex is an optional argument and is assumed to be 0 for this revision.
- ResourceUsage is an optional argument and is assumed to be ResourceConsumer for this revision.
- DescriptorName is an optional argument that specifies a name for an integer constant that will be created in the current scope that contains the offset of this resource descriptor within the current resource template buffer. The predefined descriptor field names may be appended to this name to access individual fields within the descriptor via the Buffer Field operators.
- VendorData is an optional argument that specifies a RawDataBuffer containing vendor-defined byte data to be decoded by the OS driver. The bit field name \_VEN is automatically created to refer to this portion of the resource descriptor.
- PinList is a non-empty list of (zero-based) pin numbers on the ResourceSource that are described by this descriptor. The bit field name \_PIN is automatically created to refer to this portion of the resource descriptor.

## Description

The PinFunction macro evaluates to a buffer that contains a Pin Function resource descriptor, as described in this section. The macro is designed to be used inside of a Resource Template ([Section 19.3.3](#)).

**Note:** PinFunction macro allows for maximum flexibility to define the desired function of each pin individually. It is the responsibility of the firmware writer to take into account any platform-level restrictions where pin function must be applied at a coarser granularity. Thus, if the platform design requires the functions for a set of pins to be configured as group, the firmware writer must ensure this is done in the corresponding PinFunction description by specifying all relevant pins in a single PinFunction. In the multi-pin scenario, the OSPM must honor the PinFunction requirements for all of the specified pins on an “all-or-nothing” basis.

**Note:** The Pin Function descriptor is intended for scenarios where non-GPIO functions are desired. For GPIO-based functionalities, the firmware should always specify the appropriate GpioIo or GpioInt descriptor.

## Example:

```
//  
// Description: GPIO  
  
Device (GPIO)  
{  
    Name (_HID, "PNPFFFE")  
    Name (_UID, 0x0)  
    Method (_STA)  
    {  
        Return(0xf)  
    }  
    Method (_CRS, 0x0, NotSerialized)  
    {  
        Name (RBUF, ResourceTemplate()  
        {  
            Memory32Fixed(ReadWrite, 0x4FE00000, 0x20)  
            Interrupt(ResourceConsumer, Level, ActiveHigh,  
Shared) {0x54}  
        })  
        Return(RBUF)  
    }  
  
    //  
    // Description: I2C controller 1  
    //  
  
    Device (I2C1)  
{  
    Name (_HID, "PNPFFFF")  
    Name (_UID, 0x0)  
    Method (_STA)  
    {  
        Return(0xf)  
    }  
    Method (_CRS, 0x0, NotSerialized)  
    {  
        Name (RBUF, ResourceTemplate()  
        {  
            Memory32Fixed(ReadWrite, 0x4F800000, 0x20)  
            Interrupt(ResourceConsumer, Level, ActiveHigh,  
Shared) {0x55}  
            PinFunction(Exclusive, PullUp, 0x5, "\\_SB.GPIO", 0,  
ResourceConsumer, ) {2, 3}  
        })  
        Return(RBUF)  
    }
```

```
}

// Description: I2C controller 2
//

Device (I2C2)
{
    Name (_HID, "PNPFFFF")
    Name (_UID, 0x1)
    Method (_STA)
    {
        Return(0xf)
    }
    Method (_CRS, 0x0, NotSerialized)
    {
        Name (RBUF, ResourceTemplate()
        {
            Memory32Fixed(ReadWrite, 0x4F900000, 0x20)
            Interrupt(ResourceConsumer, Level, ActiveHigh,
Shared) {0x56}
            PinFunction(Exclusive, PullUp, 0x0, 0x4,
"\\"_SB.GPIO", 0, ResourceConsumer, ) {2, 3}
        })
        Return(RBUF)
    }
}

// Description: Physical display panel
//


Device (DISP)
{
    Name (_HID, "PNPFFFD")
    Name (_UID, 0x0)
    Method (_STA)
    {
        Return(0xf)
    }
    Method (_CRS, 0x0, NotSerialized)
    {
        Name (RBUF, ResourceTemplate()
        {
            Memory32Fixed(ReadWrite, 0x4F900000, 0x20)
            Interrupt(ResourceConsumer, Level, ActiveHigh,
Shared) {0x57}
```

```

        GpioIo(Shared, PullDefault, 0, 0, IoRestrictionNone,
"\\_SB.GPIO",) {2, 3}
    }
    Return(RBUF)
}
}

```

### 19.6.103 Pin Group

#### Syntax

Macro:

**PinGroup** (ResourceLabel, ResourceUsage, DescriptorName, VendorData) { Pin List }

Arguments

- ResourceUsage is an optional argument and is assumed to be ResourceProducer for this revision.
- ResourceLabel is an arbitrary, non-empty string that uniquely identifies this particular PinGroup resource from others within a resource template buffer. This label is used by resource consumers to refer to this resource.
- DescriptorName is an optional argument that specifies a name for an integer constant that will be created in the current scope that contains the offset of this resource descriptor within the current resource template buffer. The predefined descriptor field names may be appended to this name to access individual fields within the descriptor via the Buffer Field operators.
- VendorData is an optional argument that specifies a RawDataBuffer containing vendor-defined byte data to be decoded by the OS driver. The bit field name \_VEN is automatically created to refer to this portion of the resource descriptor.
- PinList is a non-empty list of (zero-based) pin numbers on the ResourceSource that are described by this descriptor. The bit field name \_PIN is automatically created to refer to this portion of the resource descriptor.

#### Description

The PinGroup macro evaluates to a buffer that contains a Pin Group resource descriptor. The format of the Pin Group resource descriptor can be found in "Pin Group Descriptor" ([Section 6.4.3.11](#)). The macro is designed to be used inside of a Resource Template ([Section 19.3.3](#)).

PinGroup resource descriptors must be declared within the scope of the pin controller device to which the pins belong.

### 19.6.104 Pin Group Configuration

#### Syntax

Macro:

**PinGroupConfig** (Shared/Exclusive, PinConfigType, PinConfigValue, ResourceSource, ResourceSourceIndex, ResourceSourceLabel, ResourceUsage, DescriptorName, VendorData)

Arguments:

- Shared is an optional argument and can be either Shared or Exclusive. If not specified, Exclusive is assumed. The bit field name \_SHR is automatically created to refer to this portion of the resource descriptor.
- PinConfigType can be one of the configuration types described below in [Table 19-435](#). The bit field name \_TYP is automatically created to refer to this portion of the resource descriptor.
- PinConfigValue is one of the configurations values described below in [Table 19-435](#). The bit field name \_VAL is automatically created to refer to this portion of the resource descriptor.
- ResourceSource is a string that uniquely identifies the GPIO controller which includes the PinGroup resource referenced by this descriptor. ResourceSource can be a fully-qualified name, a relative name or a name segment that utilizes the namespace search rules.
- ResourceSourceLabel is a non-empty string argument that matches ResourceLabel of the PinGroup resource in the current resource template buffer of the GPIO controller referenced in ResourceSource.
- DescriptorName is an optional argument that specifies a name for an integer constant that will be created in the current scope that contains the offset of this resource descriptor within the current resource template buffer. The predefined descriptor field names may be appended to this name to access individual fields within the descriptor via the Buffer Field operators.
- ResourceSourceIndex is an optional argument and is assumed to be 0 for this revision.
- ResourceUsage is an optional argument and is assumed to be ResourceConsumer for this revision.
- VendorData is an optional argument that specifies a RawDataBuffer containing vendor-defined byte data to be decoded by the OS driver. The bit field name \_VEN is automatically created to refer to this portion of the resource descriptor.

**Table 19-435 Pin Group Configuration Types and Values**

Pin Configuration Type	Pin Configuration Value	Description
0x00 = Default	N/A	Default configuration. No configuration is applied).
0x01 = Bias Pull-Up	Pull up resistance, in Ohms.	This means the pin is pulled up with a certain number of Ohms to an implicitly supplied VDD rail.
0x02 = Bias Pull-down	Pull down resistance, in Ohms.	This means the pin is pulled down with a certain number of Ohms, toward the GND rail.
0x03 = Bias Default	N/A	If the silicon has a default biasing mode, reset the pin to this mode.
0x04 = Bias Disable	N/A	Any software-selectable bias settings on the pin will be disabled.
0x05 = Bias High Impedance	N/A	This means that the pin is configured into a high impedance mode and essentially shut off from the outside world. It will not influence the signal state if a rail is connected to the pin, hence a good default mode.

Pin Configuration Type	Pin Configuration Value	Description
0x06 = Bias Bus Hold	N/A	This will make the pin in a weak latch state where it weakly drives the last value on a tristate bus.
0x07 = Drive Open Drain	N/A	This will configure the pin into open drain (open collector) state.
0x08 = Drive Open Source	N/A	This will configure the pin into open source (open emitter) state.
0x09 = Drive Push Pull	N/A	This will configure the pin into explicit push-pull state. This is useful if the power-on default state is e.g. open drain or high impedance state.
0x0A = Drive Strength	Drive strength in milliamperes	This will set the output driver of the pin to supply a certain number of milliamperes, usually by activating several driver stages.
0x0B = Slew Rate	Custom format	This controls the slew rate of the pin, affecting speed but also sharpness of edges and thus noisiness on the board. The hardware-specific argument tells what slew rate to configure
0x0C = Input Debounce	Debounce time in microseconds.	This will enable debouncing (for e.g. key inputs) of the pin signal.
0x0D = Input Schmitt Trigger	Enabled = 1, Disabled = 0	This will enable Schmitt trigger support for the line.
0x0E – 0x7F = Reserved	Reserved	Reserved
0x80 – 0xFF = Vendor defined values	Custom base	From this point, vendor and Hardware-specific configurations are listed.

## Description

The PinGroupConfig macro evaluates to a buffer that contains a Pin Group Configuration resource descriptor. The format of the Pin Group Configuration resource descriptor can be found in "Pin Group Configuration Descriptor" ([Section 6.4.3.13](#)). The macro is designed to be used inside of a Resource Template ([Section 19.3.3](#)).

## Example

```
//  
// Description: GPIO  
//  
  
Device (GPIO)  
{  
    Name (_HID, "PNPFFFE")
```

```

Name (_UID, 0x0)
Method (_STA)
{
    Return(0xf)
}
Method (_CRS, 0x0, NotSerialized)
{
    Name (RBUF, ResourceTemplate()
    {
        Memory32Fixed(ReadWrite, 0x4FE00000, 0x20)
        Interrupt(ResourceConsumer, Level, ActiveHigh,
Shared) {0x54}
        PinGroup("group1", ResourceProducer) {2, 3}
    })
    Return(RBUF)
}

//
// Description: I2C controller 1
//

Device (I2C1)
{
    Name (_HID, "PNPFFFF")
    Name (_UID, 0x0)
    Method (_STA)
    {
        Return(0xf)
    }
    Method (_CRS, 0x0, NotSerialized)
    {
        Name (RBUF, ResourceTemplate()
        {
            Memory32Fixed(ReadWrite, 0x4F800000, 0x20)
            Interrupt(ResourceConsumer, Level, ActiveHigh,
Shared) {0x55}
            // Set function I2C1 for SDA/SCL pins
            PinGroupFunction(Exclusive, 0x5, "\\_SB.GPIO0, 0,
"group1", ResourceConsumer, )
            // Configure 10k Pull up for SDA/SCL pins
            PinGroupConfig(Exclusive, 0x01, 10000, "\\_SB.GPIO0",
0, "group1", ResourceConsumer, )
        })
        Return(RBUF)
    }
}

```

```

//
// Description: I2C controller 2
//

Device (I2C2)
{
    Name (_HID, "PNPFFFF")
    Name (_UID, 0x1)
    Method (_STA)
    {
        Return(0xf)
    }
    Method (_CRS, 0x0, NotSerialized)
    {
        Name (RBUF, ResourceTemplate()
        {
            Memory32Fixed(ReadWrite, 0x4F900000, 0x20)
            Interrupt(ResourceConsumer, Level, ActiveHigh,
Shared) {0x56}
                // Set function I2C2 for SDA/SCL pins
                PinGroupFunction(Exclusive, 0x4, "\\_SB.GPIO ", 0,
"group1", ResourceConsumer, )
                    // Configure 10k Pull up for SDA/SCL pins
                    PinGroupConfig(Exclusive, 0x01, 10000, "\\_SB.GPIO ",
0, "group1", ResourceConsumer, )
            })
        Return(RBUF)
    }
}

//
// Description: Physical display panel
//


Device (DISP)
{
    Name (_HID, "PNPFFFD")
    Name (_UID, 0x0)
    Method (_STA)
    {
        Return(0xf)
    }
    Method (_CRS, 0x0, NotSerialized)
    {
        Name (RBUF, ResourceTemplate()
        {
            Memory32Fixed(ReadWrite, 0x4F900000, 0x20)

```

```

        Interrupt(ResourceConsumer, Level, ActiveHigh,
Shared) {0x57}
        // Set function GPIO for pin group group1
        PinGroupFunction(Exclusive, 0x1, "\\_SB.GPIO ", 0,
"group1", ResourceConsumer, )
        // Configure 20k Pull down
        PinGroupConfig (Exclusive, 0x02, 20000, "\\_SB.GPIO
", 0, "group1", ResourceConsumer, )
        //Enable Schmitt-trigger
        PinGroupConfig (Exclusive, 0x0D, 1, "\\_SB.GPIO ", 0,
"group1", ResourceConsumer, )
        //Set slew rate to custom value 3
        PinGroupConfig (Exclusive, 0x0B, 3, "\\_SB.GPIO ", 0,
"group1", ResourceConsumer, )
    }
    Return(RBUF)
}
}

```

### 19.6.105 Pin Group Function

#### Syntax

Macro:

**PinGroupFunction** (Shared/Exclusive, FunctionNumber, ResourceSource, ResourceSourceIndex, ResourceSourceLabel, ResourceUsage, DescriptorName, VendorData)

#### Arguments

- Shared is an optional argument and can be one of Shared, Exclusive. If not specified, Exclusive is assumed. The bit field name \_SHR is automatically created to refer to this portion of the resource descriptor.
- FunctionNumber is a provider-specific integer which designates which function is being described. The bit field name \_FUN is automatically created to refer to this portion of the resource descriptor.
- ResourceSource is a string that uniquely identifies the GPIO controller which includes the PinGroup resource referenced by this descriptor. ResourceSource can be a fully-qualified name, a relative name or a name segment that utilizes the namespace search rules.
- ResourceSourceLabel is a non-empty string argument that matches ResourceLabel of a PinGroup resource in the current resource template buffer of the GPIO controller referenced in ResourceSource.
- DescriptorName is an optional argument that specifies a name for an integer constant that will be created in the current scope that contains the offset of this resource descriptor within the current resource template buffer. The predefined descriptor field names may be appended to this name to access individual fields within the descriptor via the Buffer Field operators.
- ResourceSourceIndex is an optional argument and is assumed to be 0 for this revision.
- ResourceUsage is an optional argument and is assumed to be ResourceConsumer for this revision.

- VendorData is an optional argument that specifies a RawDataBuffer containing vendor-defined byte data to be decoded by the OS driver. The bit field name \_VEN is automatically created to refer to this portion of the resource descriptor.

## Description

The PinGroupFunction macro evaluates to a buffer that contains a Pin Function resource descriptor. The format of the Pin Function resource descriptor can be found in [“Pin Function Descriptor” on page 460](#). The macro is designed to be used inside of an ASL Resource Template ([Section 19.3.3](#)).

### 19.6.106 PowerResource (Declare Power Resource)

#### Syntax

**PowerResource** (*ResourceName*, *SystemLevel*, *ResourceOrder*) {TermList}

#### Arguments

Declares a power resource named *ResourceName*. **PowerResource** opens a name scope.

## Description

For a definition of the **PowerResource** term, see [Section 7.2](#), “Declaring a Power Resource Object.”

The power management object list is encoded as TermList, so that rather than describing a static power management object list, it is possible to describe a dynamic power management object list according to the system settings. See “[Section 5.4.2](#), Definition Block Loading.”

### 19.6.107 Printf (Create and Store formatted string)

#### Syntax

**Printf** (*FormatString*, *FormatArgs*) => String

#### Arguments

**Printf** is a macro that converts the evaluated *FormatString* into a series of string **Concatenate** operations, storing the result in the **Debug** object.

*FormatString* is a string literal which may contain one or more uses of the format specifier, %o, to indicate locations in the string where an object may be inserted. %o is the only format specifier supported since the resulting object is a string and type conversion is handled automatically by **Concatenate**.

*FormatArgs* is a comma separated list of Named Objects, Locals, or Args that can be evaluated to a string. Each argument is added to the *FormatString* using the **Concatenate** operation at the location specified by %o in order of appearance.

## Description

The **Printf** macro converts a format string into a series of cascading string **Concatenate** operations, and stores the result in the Debug object

## Example

The following ASL example uses **Printf** to write a formatted string with the values of Arg0, Arg1, Arg2, and Arg3 to the Debug Object.

```
Printf ("%o: Unexpected value for %o, %o at line %o",
        Arg0, Arg1, Arg2, Arg3)
```

This **Printf** macro expression evaluates to the following ASL operation.

```
Store (Concatenate (Concatenate (Concatenate (Concatenate
    (Concatenate (Concatenate (Concatenate ("", Arg0),
        ": Unexpected value for "), Arg1), ", "), Arg2),
    " at line "), Arg3), Debug)
```

## 19.6.108 Processor (Declare Processor)

This Operator is deprecated.

Declare Processors using the Device operator. See [Section 19.6.30](#), "Device (Declare Device Package)".

Note that this Operator may be required for compatibility with some legacy OSes, and can be used for that purpose.

## Syntax

**Processor** (*ProcessorName*, *ProcessorID*, *PBlockAddress*, *PblockLength*) {TermList}

### Arguments

Declares a named processor object named *ProcessorName*. **Processor** opens a name scope. Each processor is required to have a unique *ProcessorID* value that is unique from any other *ProcessorID* value.

For each processor in the system, the ACPI system firmware declares one processor object in the namespace anywhere within the `\_SB` scope. For compatibility with operating systems implementing ACPI 1.0, the processor object may also be declared under the `\_PR` scope. An ACPI-compatible namespace may define Processor objects in either the `\_SB` or `\_PR` scope but not both.

*PBlockAddress* provides the system I/O address for the processors register block. Each processor can supply a different such address. *PBlockLength* is the length of the processor register block, in bytes and is either 0 (for no P\_BLK) or 6. With one exception, all processors are required to have the same *PBlockLength*. The exception is that the boot processor can have a non-zero *PBlockLength* when all other processors have a zero *PBlockLength*. It is valid for every processor to have a *PBlockLength* of 0.

## Description

The following block of ASL sample code shows a use of the **Processor** term.

```
Processor (
    \_PR.CPU0,           // Namespace name
    1,
    0x120,              // PBI k system I/O address
    6                   // PBI kLen
```

) {ObjectList}

The TermList is an optional list that may contain an arbitrary number of ASL Objects. Processor-specific objects that may be included in the TermList include \_PTC, \_CST, \_PCT, \_PSS, \_PPC, \_PSD, \_TSD, \_CSD, \_PDC, \_TPC, \_TSS, and \_OSC. These processor-specific objects can only be specified when the processor object is declared within the \\_SB scope. For a full definition of these objects, see [Section 8](#), “Processor Configuration and Control.”

The optional processor object list is encoded as TermList, so that rather than describing a static processor object list, it is possible to describe a dynamic processor object list according to the system settings. See [“Section 5.4.2, Definition Block Loading.”](#)

## 19.6.109 QWordIO (QWord IO Resource Descriptor Macro)

### Syntax

**QWordIO** (*ResourceUsage*, *IsMinFixed*, *IsMaxFixed*, *Decode*, *ISARanges*, *AddressGranularity*, *AddressMinimum*, *AddressMaximum*, *AddressTranslation*, *RangeLength*, *ResourceSourceIndex*, *ResourceSource*, *DescriptorName*, *TranslationType*, *TranslationDensity*)

### Arguments

*ResourceUsage* specifies whether the I/O range is consumed by this device (**ResourceConsumer**) or passed on to child devices (**ResourceProducer**). If nothing is specified, then ResourceConsumer is assumed.

*IsMinFixed* specifies whether the minimum address of this I/O range is fixed (**MinFixed**) or can be changed (**MinNotFixed**). If nothing is specified, then MinNotFixed is assumed. The 1-bit field *DescriptorName.\_MIF* is automatically created to refer to this portion of the resource descriptor, where ‘1’ is MinFixed and ‘0’ is MinNotFixed.

*IsMaxFixed* specifies whether the maximum address of this I/O range is fixed (**MaxFixed**) or can be changed (**MaxNotFixed**). If nothing is specified, then MaxNotFixed is assumed. The 1-bit field *DescriptorName.\_MAF* is automatically created to refer to this portion of the resource descriptor, where ‘1’ is MaxFixed and ‘0’ is MaxNotFixed.

*Decode* specifies whether or not the device decodes the I/O range using positive (**PosDecode**) or subtractive (**SubDecode**) decode. If nothing is specified, then PosDecode is assumed. The 1-bit field *DescriptorName.\_DEC* is automatically created to refer to this portion of the resource descriptor, where ‘1’ is SubDecode and ‘0’ is PosDecode.

*ISARanges* specifies whether the I/O ranges specifies are limited to valid ISA I/O ranges (**ISAOnly**), valid non-ISA I/O ranges (**NonISAOnly**) or encompass the whole range without limitation (**EntireRange**). The 2-bit field *DescriptorName.\_RNG* is automatically created to refer to this portion of the resource descriptor, where ‘1’ is NonISAOnly, ‘2’ is ISAOnly and ‘0’ is EntireRange.

*AddressGranularity* evaluates to a 64-bit integer that specifies the power-of-two boundary (- 1) on which the I/O range must be aligned. The 64-bit field *DescriptorName.\_GRA* is automatically created to refer to this portion of the resource descriptor.

*AddressMinimum* evaluates to a 64-bit integer that specifies the lowest possible base address of the I/O range. The value must have ‘0’ in all bits where the corresponding bit in *AddressGranularity* is ‘1’. For

bridge devices which translate addresses, this is the address on the secondary bus. The 64-bit field *DescriptorName.\_MIN* is automatically created to refer to this portion of the resource descriptor.

*AddressMaximum* evaluates to a 64-bit integer that specifies the highest possible base address of the I/O range. The value must have '0' in all bits where the corresponding bit in *AddressGranularity* is '1'. For bridge devices which translate addresses, this is the address on the secondary bus. The 64-bit field *DescriptorName.\_MAX* is automatically created to refer to this portion of the resource descriptor.

*AddressTranslation* evaluates to a 64-bit integer that specifies the offset to be added to a secondary bus I/O address which results in the corresponding primary bus I/O address. For all non-bridge devices or bridges which do not perform translation, this must be '0'. The 64-bit field *DescriptorName.\_TRA* is automatically created to refer to this portion of the resource descriptor.

*RangeLength* evaluates to a 64-bit integer that specifies the total number of bytes decoded in the I/O range. The 64-bit field *DescriptorName.\_LEN* is automatically created to refer to this portion of the resource descriptor.

*ResourceSourceIndex* is an optional argument which evaluates to an 8-bit integer that specifies the resource descriptor within the object specified by *ResourceSource*. If this argument is specified, the *ResourceSource* argument must also be specified.

*ResourceSource* is an optional argument which evaluates to a string containing the path of a device which produces the pool of resources from which this I/O range is allocated. If this argument is specified, but the *ResourceSourceIndex* argument is not specified, a zero value is assumed.

*DescriptorName* is an optional argument that specifies a name for an integer constant that will be created in the current scope that contains the offset of this resource descriptor within the current resource template buffer. The predefined descriptor field names may be appended to this name to access individual fields within the descriptor via the Buffer Field operators.

*TranslationType* is an optional argument that specifies whether the resource type on the secondary side of the bus is different (**TypeTranslation**) from that on the primary side of the bus or the same (**TypeStatic**). If **TypeTranslation** is specified, then the primary side of the bus is Memory. If **TypeStatic** is specified, then the primary side of the bus is I/O. If nothing is specified, then **TypeStatic** is assumed. The 1-bit field *DescriptorName.\_TTP* is automatically created to refer to this portion of the resource descriptor, where '1' is **TypeTranslation** and '0' is **TypeStatic**. See *\_TTP* (page 443) for more information

*TranslationDensity* is an optional argument that specifies whether or not the translation from the primary to secondary bus is sparse (**SparseTranslation**) or dense (**DenseTranslation**). It is only used when *TranslationType* is **TypeTranslation**. If nothing is specified, then **DenseTranslation** is assumed. The 1-bit field *DescriptorName.\_TRS* is automatically created to refer to this portion of the resource descriptor, where '1' is **SparseTranslation** and '0' is **DenseTranslation**. See *\_TRS* (page 444) for more information.

## Description

The **QWordIO** macro evaluates to a buffer which contains a 64-bit I/O resource descriptor, which describes a range of I/O addresses. The format of the 64-bit I/O resource descriptor can be found in QWord Address Space Descriptor (page 431). The macro is designed to be used inside of a ResourceTemplate (page 1033).

## 19.6.110 QWordMemory (QWord Memory Resource Descriptor Macro)

### Syntax

**QWordMemory** (*ResourceUsage*, *Decode*, *IsMinFixed*, *IsMaxFixed*, *Cacheable*, *ReadAndWrite*, *AddressGranularity*, *AddressMinimum*, *AddressMaximum*, *AddressTranslation*, *RangeLength*, *ResourceSourceIndex*, *ResourceSource*, *DescriptorName*, *MemoryRangeType*, *TranslationType*)

### Arguments

*ResourceUsage* specifies whether the Memory range is consumed by this device (**ResourceConsumer**) or passed on to child devices (**ResourceProducer**). If nothing is specified, then ResourceConsumer is assumed.

*Decode* specifies whether or not the device decodes the Memory range using positive (**PosDecode**) or subtractive (**SubDecode**) decode. If nothing is specified, then PosDecode is assumed. The 1-bit field *DescriptorName.\_DEC* is automatically created to refer to this portion of the resource descriptor, where '1' is SubDecode and '0' is PosDecode.

*IsMinFixed* specifies whether the minimum address of this Memory range is fixed (**MinFixed**) or can be changed (**MinNotFixed**). If nothing is specified, then MinNotFixed is assumed. The 1-bit field *DescriptorName.\_MIF* is automatically created to refer to this portion of the resource descriptor, where '1' is MinFixed and '0' is MinNotFixed.

*IsMaxFixed* specifies whether the maximum address of this Memory range is fixed (**MaxFixed**) or can be changed (**MaxNotFixed**). If nothing is specified, then MaxNotFixed is assumed. The 1-bit field *DescriptorName.\_MAF* is automatically created to refer to this portion of the resource descriptor, where '1' is MaxFixed and '0' is MaxNotFixed.

*Cacheable* specifies whether or not the memory region is cacheable (**Cacheable**), cacheable and write-combining (**WriteCombining**), cacheable and prefetchable (**Prefetchable**) or uncachable (**NonCacheable**). If nothing is specified, then NonCacheable is assumed. The 2-bit field *DescriptorName.\_MEM* is automatically created to refer to this portion of the resource descriptor, where '1' is Cacheable, '2' is WriteCombining, '3' is Prefetchable and '0' is NonCacheable.

*ReadAndWrite* specifies whether or not the memory region is read-only (**ReadOnly**) or read/write (**ReadWrite**). If nothing is specified, then ReadWrite is assumed. The 1-bit field *DescriptorName.\_RW* is automatically created to refer to this portion of the resource descriptor, where '1' is ReadWrite and '0' is ReadOnly.

*AddressGranularity* evaluates to a 64-bit integer that specifies the power-of-two boundary (- 1) on which the Memory range must be aligned. The 64-bit field *DescriptorName.\_GRA* is automatically created to refer to this portion of the resource descriptor.

*AddressMinimum* evaluates to a 64-bit integer that specifies the lowest possible base address of the Memory range. The value must have '0' in all bits where the corresponding bit in *AddressGranularity* is '1'. For bridge devices which translate addresses, this is the address on the secondary bus. The 64-bit field *DescriptorName.\_MIN* is automatically created to refer to this portion of the resource descriptor.

*AddressMaximum* evaluates to a 64-bit integer that specifies the highest possible base address of the Memory range. The value must have '0' in all bits where the corresponding bit in *AddressGranularity* is '1'. For bridge devices which translate addresses, this is the address on the secondary bus. The 64-bit field *DescriptorName.\_MAX* is automatically created to refer to this portion of the resource descriptor.

*AddressTranslation* evaluates to a 64-bit integer that specifies the offset to be added to a secondary bus I/O address which results in the corresponding primary bus I/O address. For all non-bridge devices or bridges which do not perform translation, this must be ‘0’. The 64-bit field *DescriptorName.\_TRA* is automatically created to refer to this portion of the resource descriptor.

*RangeLength* evaluates to a 64-bit integer that specifies the total number of bytes decoded in the Memory range. The 64-bit field *DescriptorName.\_LEN* is automatically created to refer to this portion of the resource descriptor.

*ResourceSourceIndex* is an optional argument which evaluates to an 8-bit integer that specifies the resource descriptor within the object specified by *ResourceSource*. If this argument is specified, the *ResourceSource* argument must also be specified.

*ResourceSource* is an optional argument which evaluates to a string containing the path of a device which produces the pool of resources from which this Memory range is allocated. If this argument is specified, but the *ResourceSourceIndex* argument is not specified, a zero value is assumed.

*DescriptorName* is an optional argument that specifies a name for an integer constant that will be created in the current scope that contains the offset of this resource descriptor within the current resource template buffer. The predefined descriptor field names may be appended to this name to access individual fields within the descriptor via the Buffer Field operators.

*MemoryRangeType* is an optional argument that specifies the memory usage. The memory can be marked as normal (**AddressRangeMemory**), used as ACPI NVS space (**AddressRangeNVS**), used as ACPI reclaimable space (**AddressRangeACPI**) or as system reserved (**AddressRangeReserved**). If nothing is specified, then AddressRangeMemory is assumed. The 2-bit field *DescriptorName.\_MTP* is automatically created in order to refer to this portion of the resource descriptor, where ‘0’ is AddressRangeMemory, ‘1’ is AddressRangeReserved, ‘2’ is AddressRangeACPI and ‘3’ is AddressRangeNVS.

*TranslationType* is an optional argument that specifies whether the resource type on the secondary side of the bus is different (**TypeTranslation**) from that on the primary side of the bus or the same (**TypeStatic**). If TypeTranslation is specified, then the primary side of the bus is I/O. If TypeStatic is specified, then the primary side of the bus is Memory. If nothing is specified, then TypeStatic is assumed. The 1-bit field *DescriptorName.\_TTP* is automatically created to refer to this portion of the resource descriptor, where ‘1’ is TypeTranslation and ‘0’ is TypeStatic. See *\_TTP* (page 443) for more information.

## Description

The **QWordMemory** macro evaluates to a buffer which contains a 64-bit memory resource descriptor, which describes a range of memory addresses. The format of the 64-bit memory resource descriptor can be found in “QWord Address Space Descriptor” (page 431). The macro is designed to be used inside of a ResourceTemplate (page 1033).

### 19.6.111 QWordSpace (QWord Space Resource Descriptor Macro)

#### Syntax

**QWordSpace** (*ResourceType*, *ResourceUsage*, *Decode*, *IsMinFixed*, *IsMaxFixed*, *TypeSpecificFlags*, *AddressGranularity*, *AddressMinimum*, *AddressMaximum*, *AddressTranslation*, *RangeLength*, *ResourceSourceIndex*, *ResourceSource*, *DescriptorName*)

## Arguments

*ResourceType* evaluates to an 8-bit integer that specifies the type of this resource. Acceptable values are 0xC0 through 0xFF.

*ResourceUsage* specifies whether the Memory range is consumed by this device (**ResourceConsumer**) or passed on to child devices (**ResourceProducer**). If nothing is specified, then ResourceConsumer is assumed.

*Decode* specifies whether or not the device decodes the Memory range using positive (**PosDecode**) or subtractive (**SubDecode**) decode. If nothing is specified, then PosDecode is assumed. The 1-bit field *DescriptorName.\_DEC* is automatically created to refer to this portion of the resource descriptor, where '1' is SubDecode and '0' is PosDecode.

*IsMinFixed* specifies whether the minimum address of this Memory range is fixed (**MinFixed**) or can be changed (**MinNotFixed**). If nothing is specified, then MinNotFixed is assumed. The 1-bit field *DescriptorName.\_MIF* is automatically created to refer to this portion of the resource descriptor, where '1' is MinFixed and '0' is MinNotFixed.

*IsMaxFixed* specifies whether the maximum address of this Memory range is fixed (**MaxFixed**) or can be changed (**MaxNotFixed**). If nothing is specified, then MaxNotFixed is assumed. The 1-bit field *DescriptorName.\_MAF* is automatically created to refer to this portion of the resource descriptor, where '1' is MaxFixed and '0' is MaxNotFixed.

*TypeSpecificFlags* evaluates to an 8-bit integer. The flags are specific to the *ResourceType*.

*AddressGranularity* evaluates to a 64-bit integer that specifies the power-of-two boundary (- 1) on which the Memory range must be aligned. The 64-bit field *DescriptorName.\_GRA* is automatically created to refer to this portion of the resource descriptor.

*AddressMinimum* evaluates to a 64-bit integer that specifies the lowest possible base address of the Memory range. The value must have '0' in all bits where the corresponding bit in *AddressGranularity* is '1'. For bridge devices which translate addresses, this is the address on the secondary bus. The 64-bit field *DescriptorName.\_MIN* is automatically created to refer to this portion of the resource descriptor.

*AddressMaximum* evaluates to a 64-bit integer that specifies the highest possible base address of the Memory range. The value must have '0' in all bits where the corresponding bit in *AddressGranularity* is '1'. For bridge devices which translate addresses, this is the address on the secondary bus. The 64-bit field *DescriptorName.\_MAX* is automatically created to refer to this portion of the resource descriptor.

*AddressTranslation* evaluates to a 64-bit integer that specifies the offset to be added to a secondary bus I/O address which results in the corresponding primary bus I/O address. For all non-bridge devices or bridges which do not perform translation, this must be '0'. The 64-bit field *DescriptorName.\_TRA* is automatically created to refer to this portion of the resource descriptor.

*RangeLength* evaluates to a 64-bit integer that specifies the total number of bytes decoded in the Memory range. The 64-bit field *DescriptorName.\_LEN* is automatically created to refer to this portion of the resource descriptor.

*ResourceSourceIndex* is an optional argument which evaluates to an 8-bit integer that specifies the resource descriptor within the object specified by *ResourceSource*. If this argument is specified, the *ResourceSource* argument must also be specified.

*ResourceSource* is an optional argument which evaluates to a string containing the path of a device which produces the pool of resources from which this Memory range is allocated. If this argument is specified, but the *ResourceSourceIndex* argument is not specified, a zero value is assumed.

*DescriptorName* is an optional argument that specifies a name for an integer constant that will be created in the current scope that contains the offset of this resource descriptor within the current resource template buffer. The predefined descriptor field names may be appended to this name to access individual fields within the descriptor via the Buffer Field operators.

## Description

The **QWordSpace** macro evaluates to a buffer which contains a 64-bit Address Space resource descriptor, which describes a range of addresses. The format of the 64-bit AddressSpace descriptor can be found in “QWord Address Space Descriptor” (page 431). The macro is designed to be used inside of a ResourceTemplate (page 1033).

### 19.6.112 RawDataBuffer

#### Syntax

**RawDataBuffer** (*RDBufferSize*) {*ByteList*} => RawDataBuffer

#### Arguments

Declares a **RawDataBuffer** of size *RDBufferSize* and optional initial value of *ByteList*.

#### Description

The optional *RDBufferSize* parameter specifies the size of the buffer and must be a word constant. The initial value is specified in *Initializer* *ByteList*. If *RDBufferSize* is not specified, it defaults to the size of initializer. If the count is too small to hold the value specified by initializer, the initializer size is used.

Note that a RawDataBuffer is not encoded as a Buffer (Opcode, Package length bytes, etc), but rather contains only the raw bytes specified.

### 19.6.113 RefOf (Create Object Reference)

#### Syntax

**RefOf** (*Object*) => ObjectReference

#### Arguments

*Object* can be any object type (for example, a package, a device object, and so on).

#### Description

Returns an object reference to *Object*. If the *Object* does not exist, the result of a **RefOf** operation is fatal. Use the **CondRefOf** term in cases where the *Object* might not exist.

The primary purpose of **RefOf()** is to allow an object to be passed to a method as an argument to the method without the object being evaluated at the time the method was loaded.

## 19.6.114 Register (Generic Register Resource Descriptor Macro)

### Syntax

**Register** (*AddressSpaceKeyword*, *RegisterBitWidth*, *RegisterBitOffset*, *RegisterAddress*, *AccessSize*, *DescriptorName*)

### Arguments

*AddressSpaceKeyword* specifies the address space where the register exists. The register can be one of the following:

- I/O space (SystemIO)
- System Memory (SystemMemory)
- PCI configuration space (PCI\_Config)
- Embedded controller space (EmbeddedControl)
- SMBus (SMBus)
- CMOS (SystemCMOS)
- PCI Bar target (PciBarTarget)
- IPMI (IPMI)
- General purpose I/O (GeneralPurposeIO)
- Generic serial bus (GenericSerialBus)
- Platform Communications Channel (PCC)
- Fixed-feature hardware (FFixedHW)

The 8-bit field *DescriptorName.\_ASI* is automatically created in order to refer to this portion of the resource descriptor. See the Address Space ID definition in [Table 6-238](#) for more information, including a list of valid values and their meanings.

*RegisterBitWidth* evaluates to an 8-bit integer that specifies the number of bits in the register. The 8-bit field *DescriptorName.\_RBW* is automatically created in order to refer to this portion of the resource descriptor. See the *\_RBW* definition in [Table 6-238](#) for more information.

*RegisterBitOffset* evaluates to an 8-bit integer that specifies the offset in bits from the start of the register indicated by *RegisterAddress*. The 8-bit field *DescriptorName.\_RBO* is automatically created in order to refer to this portion of the resource descriptor. See the *\_RBO* definition in [Table 6-238](#) for more information.

*RegisterAddress* evaluates to a 64-bit integer that specifies the register address. The 64-bit field *DescriptorName.\_ADR* is automatically created in order to refer to this portion of the resource descriptor. See the *\_ADR* definition in [Table 6-238](#) for more information.

*AccessSize* evaluates to an 8-bit integer that specifies the size of data values used when accessing the address space as follows:

- 0 - Undefined (legacy)
- 1 - Byte access
- 2 - Word access
- 3 - DWord access
- 4 - QWord access

The 8-bit field *DescriptorName*.\_ASZ is automatically created in order to refer to this portion of the resource descriptor. See the \_ASZ definition in [Table 6-238](#) for more information. For backwards compatibility, the *AccessSize* parameter is optional when invoking the Register macro. If the *AccessSize* parameter is not supplied then the *AccessSize* field will be set to zero. In this case, OSPM will assume the access size.

*DescriptorName* is an optional argument that specifies a name for an integer constant that will be created in the current scope that contains the offset of this resource descriptor within the current resource template buffer. The predefined descriptor field names may be appended to this name to access individual fields within the descriptor via the Buffer Field operators.

## Description

The **Register** macro evaluates to a buffer that contains a generic register resource descriptor. The format of the generic register resource descriptor can be found in [Table 6-238](#). The macro is designed to be used inside of the ResourceTemplate ([Section 19.6.117](#)).

### 19.6.115 Release (Release a Mutex Synchronization Object)

#### Syntax

**Release** (*SyncObject*)

#### Arguments

*SyncObject* must be a mutex synchronization object.

## Description

If the mutex object is owned by the current invocation, ownership for the Mutex is released once. It is fatal to release ownership on a Mutex unless it is currently owned. A Mutex must be totally released before an invocation completes.

### 19.6.116 Reset (Reset an Event Synchronization Object)

#### Syntax

**Reset** (*SyncObject*)

#### Arguments

*SyncObject* must be an Event synchronization object.

## Description

This operator is used to reset an event synchronization object to a non-signaled state. See also the Wait and Signal function operator definitions.

## 19.6.117 ResourceTemplate (Resource To Buffer Conversion Macro)

### Syntax

**ResourceTemplate () {*ResourceMacroList*}** => Buffer

### Description

For a full definition of the ResourceTemplateTerm macro, see [Section 19.3.3](#), “ASL Resource Templates”.

## 19.6.118 Return (Return from Method Execution)

### Syntax

Return

**Return ()**

**Return (*Arg*)**

### Arguments

*Arg* is optional and can be any valid object or reference.

### Description

Returns control to the invoking control method, optionally returning a copy of the object named in *Arg*. If no *Arg* object is specified, a Return(**Zero**) is generated by the ASL compiler.

**Note:** In the absence of an explicit **Return ()** statement, the return value to the caller is undefined.

## 19.6.119 Revision (Constant Revision Integer)

### Syntax

**Revision** => Integer

### Description

The **Revision** operator returns an Integer containing the current revision of the AML interpreter. Writes to this object are not allowed.

## 19.6.120 Scope (Open Named Scope)

### Syntax

**Scope (*Location*) {*ObjectList*}**

### Arguments

Opens and assigns a base namespace scope to a collection of objects. All object names defined within the scope are created relative to *Location*. Note that *Location* does not have to be below the surrounding scope, but can refer to any location within the namespace. The **Scope** term itself does not create objects, but only locates objects within the namespace; the actual objects are created by other ASL terms.

## Description

The object referred to by *Location* must already exist in the namespace and be one of the following object types that has a namespace scope associated with it:

- A predefined scope such as: \ (root), \\_SB, \GPE, \\_PR, \\_TZ, etc.
- Device
- Processor
- Thermal Zone
- Power Resource

The **Scope** term alters the current namespace location to the existing *Location*. This causes the defined objects within *TermList* to be created relative to this new location in the namespace.

The object list is encoded as *TermList*, so that rather than describing a static object list, it is possible to describe a dynamic object list according to the system settings. See "[Section 5.4.2](#), Definition Block Loading."

**Note:** When creating secondary SSDTs, it is often required to use the **Scope** operator to change the namespace location in order create objects within some part of the namespace that has been defined by the main DSDT. Use the **External** operator to declare the scope location so that the ASL compiler will not issue an error for an undefined *Location*.

## Examples

The following example ASL code uses the **Scope** operator and creates several objects:

```
Scope (\PCI0)
{
    Name (X, 3)
    Scope (\)
    {
        Method (RQ) {Return (0)}
    }
    Name (^Y, 4)
}
```

The created objects are placed in the ACPI namespace as shown:

```
\PCI0.X
\RQ
\Y
```

This example shows the use of **External** in conjunction with **Scope** within an SSDT:

```
DefinitionBlock ("ssdt.aml", "SSDT", 2, "X", "Y", 0x00000001)
{
    External (\_SB.PCI0, DeviceObj)
```

```

Scope (\_SB.PCI0)
{
}
}

```

### 19.6.121 ShiftLeft (Integer Shift Left)

#### Syntax

**ShiftLeft** (*Source*, *ShiftCount*, *Result*) => Integer

*Result* = *Source* << *ShiftCount* => Integer

*Result* <<= *ShiftCount* => Integer

#### Arguments

*Source* and *ShiftCount* are evaluated as Integers.

#### Description

*Source* is shifted left with the least significant bit zeroed *ShiftCount* times. The result is optionally stored into *Result*.

### 19.6.122 ShiftRight (Integer Shift Right)

#### Syntax

**ShiftRight** (*Source*, *ShiftCount*, *Result*) => Integer

*Result* = *Source* >> *ShiftCount* => Integer

*Result* >>= *ShiftCount* => Integer

#### Arguments

*Source* and *ShiftCount* are evaluated as Integers.

#### Description

*Source* is shifted right with the most significant bit zeroed *ShiftCount* times. The result is optionally stored into *Result*.

### 19.6.123 Signal (Signal a Synchronization Event)

#### Syntax

**Signal** (*SyncObject*)

#### Arguments

*SyncObject* must be an Event synchronization object.

#### Description

The Event object is signaled once, allowing one invocation to acquire the event.

## 19.6.124 SizeOf (Get Data Object Size)

### Syntax

**SizeOf** (*ObjectName*) => Integer

### Arguments

*ObjectName* must be a buffer, string or package object.

### Description

Returns the size of a buffer, string, or package data object.

For a buffer, it returns the size in bytes of the data. For a string, it returns the size in bytes of the string, not counting the trailing NULL. For a package, it returns the number of elements. For an object reference, the size of the referenced object is returned. Other data types cause a fatal run-time error.

## 19.6.125 Sleep (Milliseconds Sleep)

### Syntax

**Sleep** (*MilliSeconds*)

### Arguments

The **Sleep** term is used to implement long-term timing requirements. Execution is delayed for at least the required number of milliseconds.

### Description

The implementation of **Sleep** is to round the request up to the closest sleep time supported by the OS and relinquish the processor.

## 19.6.126 SPISerialBusV2 (SPI Serial Bus Connection Resource Descriptor (Version 2) Macro)

### Syntax

**SPISerialBusV2** (*DeviceSelection*, *DeviceSelectionPolarity*, *WireMode*, *DataBitLength*, *SlaveMode*, *ConnectionSpeed*, *ClockPolarity*, *ClockPhase*, *ResourceSource*, *ResourceSourceIndex*, *ResourceUsage*, *DescriptorName*, *Shared*, *VendorData*)

### Arguments

*DeviceSelection* is the device selection value. This value may refer to a chip-select line, GPIO line or other line selection mechanism. *\_ADR* is automatically created to refer to this portion of the resource descriptor.

*DeviceSelectionPolarity* is an optional argument and can be either *PolarityHigh* or *PolarityLow* to indicate that the device is active. *PolarityLow* is the default. The bit field *\_DPL* is automatically created to refer to this portion of the resource descriptor.

*WireMode* is an optional argument and can be either ThreeWireMode or FourWireMode. FourWireMode is the default. The bit field name \_MOD is automatically created to refer to this portion of the resource descriptor.

*DataBitLength* is the size, in bits, of the smallest transfer unit for this connection. \_LEN is automatically created to refer to this portion of the resource descriptor.

*SlaveMode* is an optional argument and can be either ControllerInitiated or DeviceInitiated. ControllerInitiated is the default. The bit field name \_SLV is automatically created to refer to this portion of the resource descriptor.

*ConnectionSpeed* is the maximum connection speed supported by this connection, in hertz. The bit field name \_SPE is automatically created to refer to this portion of the resource descriptor.

*ClockPolarity* can be either ClockPolarityLow or ClockPolarityHigh. \_POL is automatically created to refer to this portion of the resource descriptor.

*ClockPhase* can be either ClockPhaseFirst or ClockPhaseSecond. \_PHA is automatically created to refer to this portion of the resource descriptor.

*ResourceSource* is a string which uniquely identifies the SPI bus controller referred to by this descriptor. ResourceSource can be a fully-qualified name, a relative name or a name segment that utilizes the namespace search rules.

*ResourceSourceIndex* is an optional argument and is assumed to be 0 for this revision.

*ResourceUsage* is an optional argument and is assumed to be ResourceConsumer for this revision. *DescriptorName* is an optional argument that specifies a name for an integer constant that will be created in the current scope that contains the offset of this resource descriptor within the current resource template buffer. The predefined descriptor field names may be appended to this name to access individual fields within the descriptor via the Buffer Field operators.

*Shared* is an optional argument and can be either **Shared** or **Exclusive**. If not specified, **Exclusive** is assumed. The bit field name \_SHR is automatically created to refer to this portion of the resource descriptor.

*VendorData* is an optional argument that specifies an object to be decoded by the OS driver. It is a RawDataBuffer. The bit field name \_VEN is automatically created to refer to this portion of the resource descriptor.

## Description

The **SPISerialBusV2** macro evaluates to a buffer that contains a SPI Serial Bus resource descriptor (Version 2). The macro is designed to be used inside of a ResourceTemplate (see [Section 19.3.3](#)).

### 19.6.127 Stall (Stall for a Short Time)

#### Syntax

**Stall (MicroSeconds)**

#### Arguments

The **Stall** term is used to implement short-term timing requirements. Execution is delayed for at least the required number of microseconds.

## Description

The implementation of **Stall** is OS-specific, but must not relinquish control of the processor. Because of this, delays longer than 100 microseconds must use **Sleep** instead of **Stall**.

### 19.6.128 StartDependentFn (Start Dependent Function Resource Descriptor Macro)

#### Syntax

**StartDependentFn** (*CompatibilityPriority*, *PerformancePriority*) {*ResourceList*}

#### Arguments

*CompatibilityPriority* indicates the relative compatibility of the configuration specified by *ResourceList* relative to the PC/AT. 0 = Good, 1 = Acceptable, 2 = Sub-optimal.

*PerformancePriority* indicates the relative performance of the configuration specified by *ResourceList* relative to the other configurations. 0 = Good, 1 = Acceptable, 2 = Sub-optimal.

*ResourceList* is a list of resources descriptors which must be selected together for this configuration.

#### Description

The **StartDependentFn** macro evaluates to a buffer which contains a start dependent function resource descriptor, which describes a group of resources which must be selected together. Each subsequent StartDependentFn or StartDependentFnNoPri resource descriptor introduces a new choice of resources for configuring the device, with the last choice terminated with an EndDependentFn resource descriptor. The format of the start dependent function resource descriptor can be found in “Start Dependent Functions Descriptor” (page 420). This macro generates the two-byte form of the resource descriptor. The macro is designed to be used inside of a ResourceTemplate (page 1033).

### 19.6.129 StartDependentFnNoPri (Start Dependent Function Resource Descriptor Macro)

#### Syntax

**StartDependentFnNoPri** () {*ResourceList*}

#### Description

The **StartDependentFnNoPri** macro evaluates to a buffer which contains a start dependent function resource descriptor, which describes a group of resources which must be selected together. Each subsequent StartDependentFn or StartDependentFnNoPri resource descriptor introduces a new choice of resources for configuring the device, with the last choice terminated with an EndDependentFn resource descriptor. The format of the start dependent function resource descriptor can be found in “Start Dependent Functions Descriptor” (page 421). This macro generates the one-byte form of the resource descriptor. The macro is designed to be used inside of a ResourceTemplate (page 1033).

This is similar to StartDependentFn (page 1038) with both *CompatibilityPriority* and *PerformancePriority* set to 1, but is one byte shorter.

## 19.6.130 Store (Store an Object)

### Syntax

**Store (Source, Destination)** => DataRefObject

*Destination* = *Source* => DataRefObject

### Arguments

This operation evaluates *Source*, converts it to the data type of *Destination*, and writes the result into *Destination*. For information on automatic data-type conversion, see [Section 19.3.5](#), “ASL Data Types.”

### Description

Stores to OperationRegion Field data types may relinquish the processor depending on the address space.

All stores (of any type) to the constant **Zero**, constant **One**, or constant **Ones** object are not allowed. Stores to read-only objects are fatal. The execution result of the operation depends on the type of *Destination*. For any type other than an operation region field, the execution result is the same as the data written to *Destination*. For operation region fields with an *AccessType* of **ByteAcc**, **WordAcc**, **DWordAcc**, **QWordAcc** or **AnyAcc**, the execution result is the same as the data written to *Destination* as in the normal case, but when the *AccessType* is **BufferAcc**, the operation region handler may modify the data when it is written to the *Destination* so that the execution result contains modified data.

### Example

The following example creates the name CNT that references an integer data object with the value 5 and then stores CNT to Local0. After the Store operation, Local0 is an integer object with the value 5.

```
Name (CNT, 5)
Store (CNT, Local 0)
```

## 19.6.131 Subtract (Integer Subtract)

### Syntax

**Subtract (Minuend, Subtrahend, Result)** => Integer

*Result* = *Minuend* - *Subtrahend* => Integer

*Result* -= *Subtrahend* => Integer

### Arguments

*Minuend* and *Subtrahend* are evaluated as Integers.

### Description

*Subtrahend* is subtracted from *Minuend*, and the result is optionally stored into *Result*. Underflow conditions are ignored and the result simply loses the most significant bits.

## 19.6.132 Switch (Select Code To Execute Based On Expression)

### Syntax

**Switch (Expression) {CaseTermList}**

### Arguments

*Expression* is an ASL expression that evaluates to an Integer, String or Buffer.

### Description

The **Switch**, **Case** and **Default** statements help simplify the creation of conditional and branching code. The **Switch** statement transfers control to a statement within the enclosed body of executable ASL code

If the **Case Value** is an Integer, Buffer or String, then control passes to the statement that matches the value of **Switch (Expression)**. If the **Case** value is a Package, then control passes if any member of the package matches the **Switch (Value)**. The **Switch CaseTermList** can include any number of **Case** instances, but no two **Case Values** (or members of a **Value**, if **Value** is a Package) within the same **Switch** statement can have the same value.

Execution of the statement body begins at the selected TermList and proceeds until the TermList end of body or until a **Break** or **Continue** statement transfers control out of the body.

The **Default** statement is executed if no **Case Value** matches the value of **Switch (expression)**. If the **Default** statement is omitted, and no **Case** match is found, none of the statements in the **Switch** body are executed. There can be at most one **Default** statement. The **Default** statement can appear anywhere in the body of the **Switch** statement.

A **Case** or **Default** term can only appear inside a **Switch** statement. Switch statements can be nested.

**(Compatibility Note)** The **Switch**, **Case**, and **Default** terms were first introduced in ACPI 2.0. However, their implementation is backward compatible with ACPI 1.0 AML interpreters.

### Example

Use of the **Switch** statement usually looks something like this:

```
Switch (expression)
{
    Case (value) {
        Statements executed if Lequal (expression, value)
    }
    Case (Package () {value, value, value}) {
        Statements executed if Lequal (expression, any value in package)
    }
    Default {
        Statements executed if expression does not equal
        any case constant-expression
    }
}
```

**Note:** (**Compiler Note**) The following example demonstrates how the Switch statement should be translated into ACPI 1.0-compatible AML:

```
Switch (Add (ABCD( ), 1)
{
    Case (1) {
        ...statements1...
    }
    Case (Package () {4, 5, 6}) {
        ...statements2...
    }
    Default {
        ...statements3...
    }
}
```

is translated as:

```
Name (_T_I, 0) // Create Integer temporary variable for result
While (One)
{
    Store (Add (ABCD (), 1), _T_I)
    If (LEqual (_T_I, 1)) {
        ...statements1...
    }
    Else {
        If (LNotEqual (Match (Package () {4, 5, 6}, MEQ, _T_I, MTR, 0, 0), Ones)) {
            ...statements2...
        }
        Else {
            ...statements3...
        }
        Break
    }
}
```

The **While (One)** is emitted to enable the use of **Break** and **Continue** within the Switch statement. Temporary names emitted by the ASL compiler should appear at the top level of the method, since the Switch statement could appear within a loop and thus attempt to create the name more than once.

**Note:** If the ASL compiler is unable to determine the type of the expression, then it will generate a warning and assume a type of Integer. The warning will indicate that the code should use one of the type conversion operators (Such as ToInteger, ToBuffer, ToDecimalString or ToHexString). Caution: Some of these operators are defined starting with ACPI 2.0 and as such may not be supported by ACPI 1.0b compatible interpreters.

For example:

```
Switch (ABCD ())
{
    ...case statements...
```

}

will generate a warning and the following code:

```
Name (_T_I, 0)
Store (ABCD (), _T_I)
```

To remove the warning, the code should be:

```
Switch (ToInteger (ABCD ()))
{
    ...case statements...
}
```

## 19.6.133 ThermalZone (Declare Thermal Zone)

### Syntax

**ThermalZone** (*ThermalZoneName*) {TermList}

### Arguments

Declares a Thermal Zone object named *ThermalZoneName*. **ThermalZone** opens a name scope.

Each use of a **ThermalZone** term declares one thermal zone in the system. Each thermal zone in a system is required to have a unique *ThermalZoneName*.

### Description

A thermal zone may be declared in the namespace anywhere within the `\_SB` scope. For compatibility with operating systems implementing ACPI 1.0, a thermal zone may also be declared under the `\_TZ` scope. An ACPI-compatible namespace may define Thermal Zone objects in either the `\_SB` or `\_TZ` scope but not both.

For example ASL code that uses a **ThermalZone** statement, see [Section 11](#), “Thermal Management.”

The thermal object list is encoded as TermList, so that rather than describing a static thermal object list, it is possible to describe a dynamic thermal object list according to the system settings. See “[Section 5.4.2](#), Definition Block Loading.”

## 19.6.134 Timer (Get 64-Bit Timer Value)

### Syntax

**Timer** => Integer

### Description

The timer opcode returns a monotonically increasing value that can be used by ACPI methods to measure time passing, this enables speed optimization by allowing AML code to mark the passage of time independent of OS ACPI interpreter implementation.

The **Sleep** opcode can only indicate waiting for longer than the time specified.

The value resulting from this opcode is 64 bits. It is monotonically increasing, but it is not guaranteed that every result will be unique, i.e. two subsequent instructions may return the same value. The only guarantee is that each subsequent evaluation will be greater-than or equal to the previous ones.

The period of this timer is 100 nanoseconds. While the underlying hardware may not support this granularity, the interpreter will do the conversion from the actual timer hardware frequency into 100 nanosecond units.

Users of this opcode should realize that a value returned only represents the time at which the opcode itself executed. There is no guarantee that the next opcode in the instruction stream will execute in any particular time bound.

The OSPM can implement this using the ACPI Timer and keep track of overrun. Other implementations are possible. This provides abstraction away from chipset differences

**Note:** *(Compatibility Note)* New for ACPI 3.0

### 19.6.135 ToBCD (Convert Integer to BCD)

#### Syntax

**ToBCD** (*Value*, *Result*) => Integer

#### Arguments

*Value* is evaluated as an integer

#### Description

The **ToBCD** operator is used to convert *Value* from a numeric (Integer) format to a BCD format and optionally store the numeric value into *Result*.

### 19.6.136 ToBuffer (Convert Data to Buffer)

#### Syntax

**ToBuffer** (*Data*, *Result*) => Buffer

#### Arguments

*Data* must be an Integer, String, or Buffer data type.

#### Description

*Data* is converted to buffer type and the result is optionally stored into *Result*. If *Data* is an integer, it is converted into n bytes of buffer (where n is 4 if the definition block has defined integers as 32 bits or 8 if the definition block has defined integers as 64 bits as indicated by the Definition Block table header's Revision field), taking the least significant byte of integer as the first byte of buffer. If *Data* is a buffer, no conversion is performed. If *Data* is a string, each ASCII string character is copied to one buffer byte, including the string null terminator. A null (zero-length) string will be converted to a zero-length buffer.

### 19.6.137 ToDecimalString (Convert Data to Decimal String)

#### Syntax

**ToDecimalString (Data, Result) => String**

#### Arguments

*Data* must be an Integer, String, or Buffer data type.

#### Description

*Data* is converted to a decimal string, and the result is optionally stored into *Result*. If *Data* is already a string, no action is performed. If *Data* is a buffer, it is converted to a string of decimal values separated by commas. (Each byte of the buffer is converted to a single decimal value.) A zero-length buffer will be converted to a null (zero-length) string.

### 19.6.138 ToHexString (Convert Data to Hexadecimal String)

#### Syntax

**ToHexString (Data, Result) => String**

#### Arguments

*Data* must be an Integer, String, or Buffer data type.

#### Description

*Data* is converted to a hexadecimal string, and the result is optionally stored into *Result*. If *Data* is already a string, no action is performed. If *Data* is a buffer, it is converted to a string of hexadecimal values separated by commas. A zero-length buffer will be converted to a null (zero-length) string.

### 19.6.139 ToInteger (Convert Data to Integer)

#### Syntax

**ToInteger (Data, Result) => Integer**

#### Arguments

*Data* must be an Integer, String, or Buffer data type.

#### Description

*Data* is converted to integer type and the result is optionally stored into *Result*. If *Data* is a string, it must be either a decimal or hexadecimal numeric string (in other words, prefixed by “0x”) and the value must not exceed the maximum of an integer value. If the value is exceeding the maximum, the result of the conversion is unpredictable. A null (zero-length) string is illegal. If *Data* is a Buffer, the first 8 bytes of the buffer are converted to an integer, taking the first byte as the least significant byte of the integer. A zero-length buffer is illegal. If *Data* is an integer, no action is performed.

## 19.6.140 ToPLD (Creates a \_PLD Buffer Object)

### Syntax

**ToPLD** (*PLDKeywordList*) => \_PLD Buffer Object

### Arguments

*PLDKeywordList* is a list of *PLDKeyword* types that describe elements of a Physical Layer Description (\_PLD) buffer that can be assigned values. The table below shows the available *PLDKeyword* types and their assignable types. Refer to the \_PLD section for a description of the \_PLD method object.

**Table 19-436 PLD Keywords and Assignment Types**

PLDKeyword	Assignment Type
PLD_Revision	Integer
PLD.IgnoreColor	Integer
PLD_Red	Integer
PLD_Green	Integer
PLD_Blue	Integer
PLD_Width	Integer
PLD_Height	Integer
PLD_UserVisible	Integer
PLD_Dock	Integer
PLD_Lid	Integer
PLD_Panel	Integer or String
PLD_VerticalPosition	Integer or String
PLD_HorizontalPosition	Integer or String
PLD_Shape	Integer or String
PLD_GroupOrientation	Integer
PLD_GroupToken	Integer
PLD_GroupPosition	Integer
PLD_Bay	Integer
PLD_Ejectable	Integer
PLD_EjectRequired	Integer
PLD_CabinetNumber	Integer
PLD_CardCageNumber	Integer
PLD_Reference	Integer
PLD_Rotation	Integer

PLDKeyword	Assignment Type
PLD_Order	Integer
PLD_VerticalOffset	Integer
PLD_HorizontalOffset	Integer

A subset of PLDKeyword types can be assigned string values for improved readability. Those types and their assignable values are shown in the table below.

**Table 19-437 PLD Keywords and assignable String Values**

PLDKeyword	Assignable String Values
PLD_Panel	"TOP", "BOTTOM", "LEFT", "RIGHT", "FRONT", "BACK", "UNKNOWN"
PLD_VerticalPosition	"UPPER", "CENTER", "LOWER"
PLD_HorizontalPosition	"LEFT", "CENTER", "RIGHT"
PLD_Shape	"ROUND", "OVAL", "SQUARE", "VERTICALRECTANGLE", "HORIZONTALRECTANGLE", "VERTICALTRAPEZOID", "HORIZONTALTRAPEZOID", "UNKNOWN"

## Description

The `ToPLD` macro converts a list of `PLDKeyword` types into a `_PLD` buffer object.

## Example

The following ASL shows an example using `ToPLD` to construct a `_PLD` buffer/package object.

```
Name (_PLD, Package (0x01) // _PLD: Physical Location of Device
{
    ToPLD (
        PLD_Revision      = 0x2,
        PLD_IgnoreColor   = 0x1,
        PLD_Red           = 0x37,
        PLD_Green          = 0x44,
        PLD_Blue          = 0xFF,
        PLD_Width          = 0x4,
        PLD_Height         = 0x19,
        PLD_UserVisible    = 0x1,
        PLD_Dock           = 0x0,
        PLD_Lid             = 0x1,
        PLD_Panel           = "TOP",
        PLD_VerticalPosition = "CENTER",
        PLD_HorizontalPosition = "RIGHT",
        PLD_Shape            = "VERTICALRECTANGLE",
        PLD_GroupOrientation = 0x1,
```

```

PLD_GroupToken      = 0xA,
PLD_GroupPosition   = 0x21,
PLD_Bay             = 0x1,
PLD_Ejectable       = 0x0,
PLD_EjectRequired   = 0x1,
PLD_CabinetNumber   = 0x1E,
PLD_CardCageNumber  = 0x17,
PLD_Reference        = 0x0,
PLD_Rotation         = 0x7,
PLD_Order            = 0x3,
PLD_VerticalOffset   = 0x141,
PLD_HorizontalOffset = 0x2C)
})

```

### 19.6.141 ToString (Convert Buffer To String)

#### Syntax

**ToString (Source, Length, Result) => String**

#### Arguments

*Source* is evaluated as a buffer. *Length* is evaluated as an integer data type.

#### Description

Starting with the first byte, the contents of the buffer are copied into the string until the number of characters specified by *Length* is reached or a null (0) character is found. If *Length* is not specified or is **Ones**, then the contents of the buffer are copied until a null (0) character is found. If the source buffer has a length of zero, a zero length (null terminator only) string will be created. The result is copied into the *Result*.

### 19.6.142 ToUUID (Convert String to UUID Macro)

#### Syntax

**ToUUID (AsciiString) => Buffer**

#### Arguments

*AsciiString* is evaluated as a String data type.

#### Description

This macro will convert an ASCII string to a 128-bit buffer. The string must have the following format:

aabbccdd-eeff-ghhh-ijjj-kkllmmmnnoopp

where *aa – pp* are one byte hexadecimal numbers, made up of hexadecimal digits. The resulting buffer has the following format:

**Table 19-438 UUID Buffer Format**

String	Offset In Buffer
aa	3
bb	2
cc	1
dd	0
ee	5
ff	4
gg	7
hh	6
ii	8
jj	9
kk	10
ll	11
mm	12
nn	13
oo	14
pp	15

**Note:** (*Compatibility Note*) New for ACPI 3.0

### 19.6.143 UARTSerialBusV2 (UART Serial Bus Connection Resource Descriptor (Version 2) Macro)

#### Syntax

**UARTSerialBusV2** (*InitialBaudRate*, *BitsPerByte*, *StopBits*, *LinesInUse*, *IsBigEndian*, *Parity*, *FlowControl*, *ReceiveBufferSize*, *TransmitBufferSize*, *ResourceSource*, *ResourceSourceIndex*, *ResourceUsage*, *DescriptorName*, *Shared*, *VendorData*)

#### Arguments

*InitialBaudRate* evaluates to a 32-bit integer that specifies the default or initial connection speed in bytes per second that the device supports. The bit field *\_SPE* is automatically created to refer to this portion of the resource descriptor.

*BitsPerByte* is an optional argument that specifies whether five bits (**DataBitsFive**), six bits (**DataBitsSix**), seven bits (**DataBitsSeven**), eight bits (**DataBitsEight**) or nine bits (**DataBitsNine**) contain data during transfer of a single packet or character. *DataBitsEight* is the default. The bit field *DescriptorName.\_LEN* is automatically created to refer to this portion of the resource descriptor.

*StopBits* is an optional argument that specifies whether there are two bits (**StopBitsTwo**), one and a half bits (**StopBitsOnePlusHalf**), one bit (**StopBitsOne**) or no bits (**StopBitsZero**) used to signal the end of a

packet or character. StopBitsOne is the default. The bit field \_STB is automatically created to refer to this portion of the resource descriptor.

*LinesInUse* evaluates to an integer representing 8 1-bit flags representing the presence ('1') or absence ('0') of a particular line. The bit field \_LIN is automatically created to refer to this portion of the resource descriptor.

Bit Mask	UART Line
Bit 7 (0x80)	Request To Send (RTS)
Bit 6 (0x40)	Clear To Send (CTS)
Bit 5 (0x20)	Data Terminal Ready (DTR)
Bit 4 (0x10)	Data Set Ready (DSR)
Bit 3 (0x08)	Ring Indicator (RI)
Bit 2 (0x04)	Data Carrier Detect (DTD)
Bit 1 (0x02)	<i>Reserved.</i> Must be 0.
Bit 0 (0x01)	<i>Reserved.</i> Must be 0.

*IsBigEndian* is an optional argument that specifies whether the device is expecting big endian (**BigEndian**) or little endian (**LittleEndian**) data formats. LittleEndian is the default. The bit field \_END is automatically created to refer to this portion of the resource descriptor.

*Parity* is an optional argument that specifies whether the type of parity bits included after the data in a packet are to be interpreted as space parity (ParityTypeSpace), mark parity (ParityTypeMark), odd parity (ParityTypeOdd), even parity (ParityTypeEven) or no parity (ParityTypeNone). ParityTypeNone is the default. The bit field PAR is automatically created to refer to this portion of the resource descriptor.

*FlowControl* is an optional argument that specifies whether there is hardware-based flow control (**FlowControlHardware**), software-based flow control (**FlowControlXON**) or no flow control (**FlowControlNone**) used when communicating with the device. FlowControlNone is the default. The bit field \_FLC is automatically created to refer to this portion of the resource descriptor.

*ReceiveBufferSize* evaluates to a 16-bit integer that specifies the upper limit in bytes of the receive buffer that can be optimally utilized while communicating with this device. The bit field \_RXL is automatically created to refer to this portion of the resource descriptor.

*TransmitBufferSize* evaluates to a 16-bit integer that specifies the upper limit in bytes of the transmit buffer that can be optimally utilized while communicating with this device. The bit field \_TXL is automatically created to refer to this portion of the resource descriptor.

*ResourceSource* is a string which uniquely identifies the **UART bus controller** referred to by this descriptor. *ResourceSource* can be a fully-qualified name, a relative name or a name segment that utilizes the namespace search rules.

*ResourceSourceIndex* is an optional argument and is assumed to be **0** for this revision.

*ResourceUsage* is an optional argument and is assumed to be **ResourceConsumer** for this revision.

*DescriptorName* is an optional argument that specifies a name for an integer constant that will be created in the current scope that contains the offset of this resource descriptor within the current

resource template buffer. The predefined descriptor field names may be appended to this name to access individual fields within the descriptor via the Buffer Field operators.

*Shared* is an optional argument and can be either Shared or Exclusive. If not specified, Exclusive is assumed. The bit field name \_SHR is automatically created to refer to this portion of the resource descriptor.

*VendorData* is an optional argument that specifies an object to be decoded by the OS driver. It is a RawDataBuffer. The bit field name \_VEN is automatically created to refer to this portion of the resource descriptor.

## Description

The **UARTSerialBusV2** macro evaluates to a buffer that contains a UART Serial Bus resource descriptor (Version 2). The macro is designed to be used inside of a ResourceTemplate (see[Section 19.3.3](#) ).

### 19.6.144 Unicode (String To Unicode Conversion Macro)

#### Syntax

**Unicode** (*String*) => Buffer

#### Arguments

This macro will convert a string to a Unicode (UTF-16) string contained in a buffer. The format of the Unicode string is 16 bits per character, with a 16-bit null terminator.

### 19.6.145 VendorLong (Long Vendor Resource Descriptor)

#### Syntax

**VendorLong** (*DescriptorName*) {*VendorByteList*}

#### Arguments

*DescriptorName* is an optional argument that specifies a name for an integer constant that will be created in the current scope that contains the offset of this resource descriptor within the current resource template buffer.

*VendorByteList* evaluates to a comma-separated list of 8-bit integer constants, where each byte is added verbatim to the body of the VendorLong resource descriptor. A maximum of n bytes can be specified. UUID and UUID specific descriptor subtype are part of the *VendorByteList*.

## Description

The **VendorLong** macro evaluates to a buffer which contains a vendor-defined resource descriptor. The format of the long form of the vendor-defined resource descriptor can be found in [Vendor-Defined Descriptor](#) (page 424). The macro is designed to be used inside of a ResourceTemplate (page 1033).

This is similar to [VendorShort](#) (page 1051), except that the number of allowed bytes in *VendorByteList* is 65,533 (instead of 7).

## 19.6.146 {deprec ated} Unload (Unload Definition Block)

### Syntax

Unload (Handle)

### Arguments

Handle is evaluated as a DDBHandle data type.

### Description

Performs a run-time unload of a Definition Block that was loaded using a Load term or LoadTable term. Loading or unloading a Definition Block is a synchronous operation, and no control method execution occurs during the function. On completion of the Unload operation, the Definition Block has been unloaded (all the namespace objects created as a result of the corresponding Load operation will be removed from the namespace).

## 19.6.147 VendorShort (Short Vendor Resource Descriptor)

### Syntax

**VendorShort** (*DescriptorName*) {*VendorByteList*}

### Arguments

*DescriptorName* is an optional argument that specifies a name for an integer constant that will be created in the current scope that contains the offset of this resource descriptor within the current resource template buffer.

### Description

The **VendorShort** macro evaluates to a buffer which contains a vendor-defined resource descriptor. The format of the short form of the vendor-defined resource descriptor can be found in “Vendor-Defined Descriptor” (page 424). The macro is designed to be used inside of a ResourceTemplate (page 1033).

This is similar to VendorLong (page 1050), except that the number of allowed bytes in *VendorByteList* is 7 (instead of 65,533).

## 19.6.148 Wait (Wait for a Synchronization Event)

### Syntax

**Wait** (*SyncObject*, *TimeoutValue*) => Boolean

### Arguments

*SyncObject* must be an event synchronization object. *TimeoutValue* is evaluated as an Integer. The calling method blocks while waiting for the event to be signaled.

### Description

The pending signal count is decremented. If there is no pending signal count, the processor is relinquished until a signal count is posted to the Event or until at least *TimeoutValue* milliseconds have elapsed.

This operation returns a non-zero value if a timeout occurred and a signal was not acquired. A *TimeoutValue* of 0xFFFF (or greater) indicates that there is no time out and the operation will wait indefinitely.

## 19.6.149 While (Conditional Loop)

### Syntax

**While (Predicate) {TermList}**

### Arguments

*Predicate* is evaluated as an integer.

### Description

If the *Predicate* is non-zero, the list of terms in TermList is executed. The operation repeats until the *Predicate* evaluates to zero.

**Note:** *Creation of a named object more than once in a given scope is not allowed. As such, unconditionally creating named objects within a **While** loop must be avoided. A fatal error will be generated on the second iteration of the loop, during the attempt to create the same named object a second time.*

## 19.6.150 WordBusNumber (Word Bus Number Resource Descriptor Macro)

### Syntax

**WordBusNumber (ResourceUsage, IsMinFixed, IsMaxFixed, Decode, AddressGranularity, AddressMinimum, AddressMaximum, AddressTranslation, RangeLength, ResourceSourceIndex, ResourceSource, DescriptorName)**

### Arguments

*ResourceUsage* specifies whether the bus range is consumed by this device (**ResourceConsumer**) or passed on to child devices (**ResourceProducer**). If nothing is specified, then ResourceConsumer is assumed.

*IsMinFixed* specifies whether the minimum address of this bus number range is fixed (**MinFixed**) or can be changed (**MinNotFixed**). If nothing is specified, then MinNotFixed is assumed. The 1-bit field *DescriptorName.\_MIF* is automatically created to refer to this portion of the resource descriptor, where '1' is MinFixed and '0' is MinNotFixed.

*IsMaxFixed* specifies whether the maximum address of this bus number range is fixed (**MaxFixed**) or can be changed (**MaxNotFixed**). If nothing is specified, then MaxNotFixed is assumed. The 1-bit field *DescriptorName.\_MAF* is automatically created to refer to this portion of the resource descriptor, where '1' is MaxFixed and '0' is MaxNotFixed.

*Decode* specifies whether or not the device decodes the bus number range using positive (**PosDecode**) or subtractive (**SubDecode**) decode. If nothing is specified, then PosDecode is assumed. The 1-bit field *DescriptorName.\_DEC* is automatically created to refer to this portion of the resource descriptor, where '1' is SubDecode and '0' is PosDecode.

*AddressGranularity* evaluates to a 16-bit integer that specifies the power-of-two boundary (- 1) on which the bus number range must be aligned. The 16-bit field *DescriptorName.\_GRA* is automatically created to refer to this portion of the resource descriptor.

*AddressMinimum* evaluates to a 16-bit integer that specifies the lowest possible bus number for the bus number range. The value must have ‘0’ in all bits where the corresponding bit in *AddressGranularity* is ‘1’. For bridge devices which translate addresses, this is the address on the secondary bus. The 16-bit field *DescriptorName.\_MIN* is automatically created to refer to this portion of the resource descriptor.

*AddressMaximum* evaluates to a 16-bit integer that specifies the highest possible bus number for the bus number range. The value must have ‘0’ in all bits where the corresponding bit in *AddressGranularity* is ‘1’. For bridge devices which translate addresses, this is the address on the secondary bus. The 16-bit field *DescriptorName.\_MAX* is automatically created to refer to this portion of the resource descriptor.

*AddressTranslation* evaluates to a 16-bit integer that specifies the offset to be added to a secondary bus bus number which results in the corresponding primary bus bus number. For all non-bridge devices or bridges which do not perform translation, this must be ‘0’. The 16-bit field *DescriptorName.\_TRA* is automatically created to refer to this portion of the resource descriptor.

*RangeLength* evaluates to a 16-bit integer that specifies the total number of bus numbers decoded in the bus number range. The 16-bit field *DescriptorName.\_LEN* is automatically created to refer to this portion of the resource descriptor.

*ResourceSourceIndex* is an optional argument which evaluates to an 8-bit integer that specifies the resource descriptor within the object specified by *ResourceSource*. If this argument is specified, the *ResourceSource* argument must also be specified.

*ResourceSource* is an optional argument which evaluates to a string containing the path of a device which produces the pool of resources from which this I/O range is allocated. If this argument is specified, but the *ResourceSourceIndex* argument is not specified, a zero value is assumed.

*DescriptorName* is an optional argument that specifies a name for an integer constant that will be created in the current scope that contains the offset of this resource descriptor within the current resource template buffer. The predefined descriptor field names may be appended to this name to access individual fields within the descriptor via the Buffer Field operators.

## Description

The **WordBusNumber** macro evaluates to a buffer which contains a 16-bit bus-number resource descriptor. The format of the 16-bit bus number resource descriptor can be found in “Word Address Space Descriptor” (page 437). The macro is designed to be used inside of a *ResourceTemplate* (page 1033).

### 19.6.151 WordIO (Word IO Resource Descriptor Macro)

#### Syntax

**WordIO** (*ResourceUsage*, *IsMinFixed*, *IsMaxFixed*, *Decode*, *ISARanges*, *AddressGranularity*, *AddressMinimum*, *AddressMaximum*, *AddressTranslation*, *RangeLength*, *ResourceSourceIndex*, *ResourceSource*, *DescriptorName*, *TranslationType*, *TranslationDensity*)

## Arguments

*ResourceUsage* specifies whether the I/O range is consumed by this device (**ResourceConsumer**) or passed on to child devices (**ResourceProducer**). If nothing is specified, then ResourceConsumer is assumed.

*IsMinFixed* specifies whether the minimum address of this I/O range is fixed (**MinFixed**) or can be changed (**MinNotFixed**). If nothing is specified, then MinNotFixed is assumed. The 1-bit field *DescriptorName.\_MIF* is automatically created to refer to this portion of the resource descriptor, where '1' is MinFixed and '0' is MinNotFixed.

*IsMaxFixed* specifies whether the maximum address of this I/O range is fixed (**MaxFixed**) or can be changed (**MaxNotFixed**). If nothing is specified, then MaxNotFixed is assumed. The 1-bit field *DescriptorName.\_MAF* is automatically created to refer to this portion of the resource descriptor, where '1' is MaxFixed and '0' is MaxNotFixed.

*Decode* specifies whether or not the device decodes the I/O range using positive (**PosDecode**) or subtractive (**SubDecode**) decode. If nothing is specified, then PosDecode is assumed. The 1-bit field *DescriptorName.\_DEC* is automatically created to refer to this portion of the resource descriptor, where '1' is SubDecode and '0' is PosDecode.

*ISARanges* specifies whether the I/O ranges specified are limited to valid ISA I/O ranges (**ISAOnly**), valid non-ISA I/O ranges (**NonISAOnly**) or encompass the whole range without limitation (**EntireRange**). The 2-bit field *DescriptorName.\_RNG* is automatically created to refer to this portion of the resource descriptor, where '1' is NonISAOnly, '2' is ISAOnly and '0' is EntireRange.

*AddressGranularity* evaluates to a 16-bit integer that specifies the power-of-two boundary (- 1) on which the I/O range must be aligned. The 16-bit field *DescriptorName.\_GRA* is automatically created to refer to this portion of the resource descriptor.

*AddressMinimum* evaluates to a 16-bit integer that specifies the lowest possible base address of the I/O range. The value must have '0' in all bits where the corresponding bit in *AddressGranularity* is '1'. For bridge devices which translate addresses, this is the address on the secondary bus. The 16-bit field *DescriptorName.\_MIN* is automatically created to refer to this portion of the resource descriptor.

*AddressMaximum* evaluates to a 16-bit integer that specifies the highest possible base address of the I/O range. The value must have '0' in all bits where the corresponding bit in *AddressGranularity* is '1'. For bridge devices which translate addresses, this is the address on the secondary bus. The 16-bit field *DescriptorName.\_MAX* is automatically created to refer to this portion of the resource descriptor.

*AddressTranslation* evaluates to a 16-bit integer that specifies the offset to be added to a secondary bus I/O address which results in the corresponding primary bus I/O address. For all non-bridge devices or bridges which do not perform translation, this must be '0'. The 16-bit field *DescriptorName.\_TRA* is automatically created to refer to this portion of the resource descriptor.

*RangeLength* evaluates to a 16-bit integer that specifies the total number of bytes decoded in the I/O range. The 16-bit field *DescriptorName.\_LEN* is automatically created to refer to this portion of the resource descriptor.

*ResourceSourceIndex* is an optional argument which evaluates to an 8-bit integer that specifies the resource descriptor within the object specified by *ResourceSource*. If this argument is specified, the *ResourceSource* argument must also be specified.

*ResourceSource* is an optional argument which evaluates to a string containing the path of a device which produces the pool of resources from which this I/O range is allocated. If this argument is specified, but the *ResourceSourceIndex* argument is not specified, a zero value is assumed.

*DescriptorName* is an optional argument that specifies a name for an integer constant that will be created in the current scope that contains the offset of this resource descriptor within the current resource template buffer. The predefined descriptor field names may be appended to this name to access individual fields within the descriptor via the Buffer Field operators.

*TranslationType* is an optional argument that specifies whether the resource type on the secondary side of the bus is different (**TypeTranslation**) from that on the primary side of the bus or the same (**TypeStatic**). If TypeTranslation is specified, then the primary side of the bus is Memory. If TypeStatic is specified, then the primary side of the bus is I/O. If nothing is specified, then TypeStatic is assumed. The 1-bit field *DescriptorName*.\_TTP is automatically created to refer to this portion of the resource descriptor, where '1' is TypeTranslation and '0' is TypeStatic. See \_TTP (page 444) for more information

*TranslationDensity* is an optional argument that specifies whether or not the translation from the primary to secondary bus is sparse (**SparseTranslation**) or dense (**DenseTranslation**). It is only used when *TranslationType* is **TypeTranslation**. If nothing is specified, then DenseTranslation is assumed. The 1-bit field *DescriptorName*.\_TRS is automatically created to refer to this portion of the resource descriptor, where '1' is SparseTranslation and '0' is DenseTranslation. See \_TRS (page 444) for more information.

## Description

The **WordIO** macro evaluates to a buffer which contains a 16-bit I/O range resource descriptor. The format of the 16-bit I/O range resource descriptor can be found in "Word Address Space Descriptor" (page 437). The macro is designed to be used inside of a ResourceTemplate (page 1033).

### 19.6.152 WordSpace (Word Space Resource Descriptor Macro) )

#### Syntax

**WordSpace** (*ResourceType*, *ResourceUsage*, *Decode*, *IsMinFixed*, *IsMaxFixed*, *TypeSpecificFlags*, *AddressGranularity*, *AddressMinimum*, *AddressMaximum*, *AddressTranslation*, *RangeLength*, *ResourceSourceIndex*, *ResourceSource*, *DescriptorName*)

#### Arguments

*ResourceType* evaluates to an 8-bit integer that specifies the type of this resource. Acceptable values are 0xC0 through 0xFF.

*ResourceUsage* specifies whether the bus range is consumed by this device (**ResourceConsumer**) or passed on to child devices (**ResourceProducer**). If nothing is specified, then ResourceConsumer is assumed.

*Decode* specifies whether or not the device decodes the bus number range using positive (**PosDecode**) or subtractive (**SubDecode**) decode. If nothing is specified, then PosDecode is assumed. The 1-bit field *DescriptorName*.\_DEC is automatically created to refer to this portion of the resource descriptor, where '1' is SubDecode and '0' is PosDecode.

*IsMinFixed* specifies whether the minimum address of this bus number range is fixed (**MinFixed**) or can be changed (**MinNotFixed**). If nothing is specified, then MinNotFixed is assumed. The 1-bit field

*DescriptorName.\_MIF* is automatically created to refer to this portion of the resource descriptor, where '1' is MinFixed and '0' is MinNotFixed.

*IsMaxFixed* specifies whether the maximum address of this bus number range is fixed (**MaxFixed**) or can be changed (**MaxNotFixed**). If nothing is specified, then MaxNotFixed is assumed. The 1-bit field *DescriptorName.\_MAF* is automatically created to refer to this portion of the resource descriptor, where '1' is MaxFixed and '0' is MaxNotFixed.

*TypeSpecificFlags* evaluates to an 8-bit integer. The flags are specific to the *ResourceType*.

*AddressGranularity* evaluates to a 16-bit integer that specifies the power-of-two boundary (- 1) on which the bus number range must be aligned. The 16-bit field *DescriptorName.\_GRA* is automatically created to refer to this portion of the resource descriptor.

*AddressMinimum* evaluates to a 16-bit integer that specifies the lowest possible bus number for the bus number range. The value must have '0' in all bits where the corresponding bit in *AddressGranularity* is '1'. For bridge devices which translate addresses, this is the address on the secondary bus. The 16-bit field *DescriptorName.\_MIN* is automatically created to refer to this portion of the resource descriptor.

*AddressMaximum* evaluates to a 16-bit integer that specifies the highest possible bus number for the bus number range. The value must have '0' in all bits where the corresponding bit in *AddressGranularity* is '1'. For bridge devices which translate addresses, this is the address on the secondary bus. The 16-bit field *DescriptorName.\_MAX* is automatically created to refer to this portion of the resource descriptor.

*AddressTranslation* evaluates to a 16-bit integer that specifies the offset to be added to a secondary bus bus number which results in the corresponding primary bus bus number. For all non-bridge devices or bridges which do not perform translation, this must be '0'. The 16-bit field *DescriptorName.\_TRA* is automatically created to refer to this portion of the resource descriptor.

*RangeLength* evaluates to a 16-bit integer that specifies the total number of bus numbers decoded in the bus number range. The 16-bit field *DescriptorName.\_LEN* is automatically created to refer to this portion of the resource descriptor.

*ResourceSourceIndex* is an optional argument which evaluates to an 8-bit integer that specifies the resource descriptor within the object specified by *ResourceSource*. If this argument is specified, the *ResourceSource* argument must also be specified.

*ResourceSource* is an optional argument which evaluates to a string containing the path of a device which produces the pool of resources from which this I/O range is allocated. If this argument is specified, but the *ResourceSourceIndex* argument is not specified, a zero value is assumed.

*DescriptorName* is an optional argument that specifies a name for an integer constant that will be created in the current scope that contains the offset of this resource descriptor within the current resource template buffer. The predefined descriptor field names may be appended to this name to access individual fields within the descriptor via the Buffer Field operators.

## Description

The **WordSpace** macro evaluates to a buffer which contains a 16-bit Address Space resource descriptor. The format of the 16-bit Address Space resource descriptor can be found in "Word Address Space Descriptor" (page 437). The macro is designed to be used inside of a ResourceTemplate (page 1033).

## 19.6.153 XOr (Integer Bitwise Xor)

### Syntax

**XOr** (*Source1*, *Source2*, *Result*) => Integer

*Result* = *Source1* ^ *Source2* => Integer

*Result* ^= *Source* => Integer

### Arguments

*Source1* and *Source2* are evaluated as Integers.

### Description

A bitwise **XOR** is performed and the result is optionally stored into *Result*.

## 19.6.154 Zero (Constant Zero Integer)

### Syntax

**Zero** => Integer

### Description

The **Zero** operator returns an Integer with the value 0. Writes to this object are not allowed. The use of this operator can reduce AML code size, since it is represented by a one-byte AML opcode.

## 20 ACPI Machine Language (AML) Specification

---

This section formally defines the ACPI Control Method Machine Language (AML) language. AML is the ACPI Control Method virtual machine language, machine code for a virtual machine that is supported by an ACPI-compatible OS. ACPI control methods can be written in AML, but humans ordinarily write control methods in ASL.

AML is the language processed by the ACPI AML interpreter. It is primarily a declarative language. It's best not to think of it as a stream of code, but rather as a set of declarations that the ACPI AML interpreter will compile into the ACPI Namespace at definition block load time. For example, notice that DefByte allocates an anonymous integer variable with a byte-size initial value in ACPI namespace, and passes in an initial value. The byte in the AML stream that defines the initial value is *not* the address of the variable's storage location.

An OEM or platform firmware vendor needs to write ASL and be able to single-step AML for debugging. (Debuggers and other ACPI control method language tools are expected to be AML-level tools, not source-level tools.) An ASL translator implementer must understand how to read ASL and generate AML. An AML interpreter author must understand how to execute AML.

AML and ASL are *different languages*, though they are closely related.

All ACPI-compatible operating systems must support AML. A given user can define some arbitrary source language (to replace ASL) and write a tool to translate it to AML. However, the ACPI group will support a single translator for a single language, ASL.

### 20.1 Notation Conventions

The notation conventions in the table below help the reader to interpret the AML formal grammar.

**Table 20-439 AML Grammar Notation Conventions**

Notation Convention	Description	Example
0xdd	Refers to a byte value expressed as 2 hexadecimal digits.	0x21
Number in bold.	Denotes the encoding of the AML term.	
Term => Evaluated Type	Shows the resulting type of the evaluation of Term.	
Single quotes (' )	Indicate constant characters.	'A' => 0x41
Term := Term Term ...	The term to the left of := can be expanded into the sequence of terms on the right.	aterm := bterm cterm means that aterm can be expanded into the two-term sequence of bterm followed by cterm.
Term Term Term ...	Terms separated from each other by spaces form an ordered list.	
Angle brackets (< > )	Used to group items.	<a b>   <c d> means either a b or c d.

Notation Convention	Description	Example
Bar symbol (   )	Separates alternatives.	aterm := bterm   [cterm dterm] means the following constructs are possible: bterm cterm dterm aterm := [bterm   cterm] dterm means the following constructs are possible: bterm dterm cterm dterm
Dash character ( - )	Indicates a range.	1-9 means a single digit in the range 1 to 9 inclusive.
Parenthesized term following another term.	The parenthesized term is the repeat count of the previous term.	aterm(3) means aterm aterm aterm. bterm( <i>n</i> ) means <i>n</i> number of bterms.

## 20.2 AML Grammar Definition

This section defines the byte values that make up an AML byte stream.

The AML encoding can be categorized in the following groups:

- Table and Table Header encoding
- Name objects encoding
- Data objects encoding
- Package length encoding
- Term objects encoding
- Miscellaneous objects encoding

### 20.2.1 Table and Table Header Encoding

```

AMLCode      := DefBlockHeader TermList

DefBlockHeader := TableSignature TableLength SpecCompliance CheckSum OEMID
                  OEMTableID OEMRevision CreatorID CreatorRevision

TableSignature := DWordData // As defined in section 5.2.3.
TableLength   := DWordData // Length of the table in bytes including
                      // the block header.
SpecCompliance := ByteData // The revision of the structure.
Checksum      := ByteData // Byte checksum of the entire table.
OEMID         := ByteData(6) // OEM ID of up to 6 characters. If the OEM
                           // ID is shorter than 6 characters, it
                           // can be terminated with a NULL
                           // character.
OEMTableID    := ByteData(8) // OEM Table ID of up to 8 characters. If
                           // the OEM Table ID is shorter than 8
                           // characters, it can be terminated with
                           // a NULL character.
OEMRevision   := DWordData // OEM Table Revision.
CreatorID     := DWordData // Vendor ID of the ASL compiler.
CreatorRevision := DWordData // Revision of the ASL compiler.

```

## 20.2.2 Name Objects Encoding

```

LeadNameChar      := 'A' - 'Z' | '_'
DigitChar         := '0' - '9'
NameChar          := DigitChar | LeadNameChar
RootChar          := '\'
ParentPrefixChar := '^'

'A' - 'Z'        := 0x41 - 0x5A
'_'              := 0x5F
'0' - '9'        := 0x30 - 0x39
'\\'             := 0x5C
'^'              := 0x5E

NameSeg           := <LeadNameChar NameChar NameChar NameChar>
                    // Notice that NameSegs shorter than 4 characters are filled with
                    // trailing underscores ('_').
NameString         := <RootChar NamePath> | <PrefixPath NamePath>
PrefixPath         := Nothing | <'^' PrefixPath>
NamePath           := NameSeg | DualNamePath | MultiNamePath | NullName

DualNamePath       := DualNamePrefix NameSeg NameSeg
DualNamePrefix     := 0x2E
MultiNamePath      := MultiNamePrefix SegCount NameSeg(SegCount)
MultiNamePrefix    := 0x2F

SegCount           := ByteData

```

**Note:** *SegCount* can be from 1 to 255. For example: *MultiNamePrefix(35)* is encoded as 0x2f 0x23 and followed by 35 *NameSegs*. So, the total encoding length will be  $1 + 1 + 35 * 4 = 142$ . Notice that: *DualNamePrefix NameSeg NameSeg* has a smaller encoding than the encoding of: *MultiNamePrefix(2) NameSeg NameSeg*

```

SimpleName         := NameString | ArgObj | LocalObj
SuperName          := SimpleName | DebugObj | Type60pcode
NullName           := 0x00
Target             := SuperName | NullName

```

## 20.2.3 Data Objects Encoding

```

ComputationalData := ByteConst | WordConst | DWordConst | QWordConst | String |
                     ConstObj | RevisionOp | DefBuffer
DataObject          := ComputationalData | DefPackage | DefVarPackage
DataRefObject        := DataObject | ObjectReference | DDBHandle

ByteConst           := BytePrefix ByteData
BytePrefix          := 0x0A
WordConst           := WordPrefix WordData
WordPrefix          := 0x0B
DWordConst          := DWordPrefix DWordData
DWordPrefix         := 0x0C
QWordConst          := QWordPrefix QWordData
QWordPrefix         := 0x0E
String              := StringPrefix AsciiCharList NullChar
StringPrefix        := 0x0D

```

```

ConstObj      := ZeroOp | OneOp | OnesOp
ByteList      := Nothing | <ByteData ByteList>
ByteData      := 0x00 - 0xFF
WordData      := ByteData[0: 7] ByteData[8: 15]
                  // 0x0000-0xFFFF
DWordData    := WordData[0: 15] WordData[16: 31]
                  // 0x00000000-0xFFFFFFFF
QWordData    := DWordData[0: 31] DWordData[32: 63]
                  // 0x0000000000000000-0xFFFFFFFFFFFFFF
AsciiCharList := Nothing | <AsciiChar AsciiCharList>
AsciiChar     := 0x01 - 0x7F
NullChar      := 0x00
ZeroOp        := 0x00
OneOp         := 0x01
OnesOp        := 0xFF
RevisionOp   := ExtOpPrefix 0x30
ExtOpPrefix  := 0x5B

```

## 20.2.4 Package Length Encoding

```

PkgLength     := PkgLeadByte |
                  <PkgLeadByte ByteData> |
                  <PkgLeadByte ByteData ByteData> |
                  <PkgLeadByte ByteData ByteData ByteData>

PkgLeadByte   := <bit 7-6: ByteData count that follows (0-3)>
                  <bit 5-4: Only used if PkgLength < 63>
                  <bit 3-0: Least significant package length nybble>

```

**Note:** The high 2 bits of the first byte reveal how many follow bytes are in the **PkgLength**. If the **PkgLength** has only one byte, bit 0 through 5 are used to encode the package length (in other words, values 0-63). If the package length value is more than 63, more than one byte must be used for the encoding in which case bit 4 and 5 of the **PkgLeadByte** are reserved and must be zero. If the multiple bytes encoding is used, bits 0-3 of the **PkgLeadByte** become the least significant 4 bits of the resulting package length value. The next ByteData will become the next least significant 8 bits of the resulting value and so on, up to 3 ByteData bytes. Thus, the maximum package length is  $2^{**}28$ .

## 20.2.5 Term Objects Encoding

```

Object        := NameSpaceModifierObj | NamedObj
TermObj       := Object | Type10opcode | Type20opcode
TermList      := Nothing | <TermObj TermList>

TermArg       := Type20opcode | DataObject | ArgObj | LocalObj
MethodInvocation := NameString TermArgList
TermArgList   := Nothing | <TermArg TermArgList>

```

### 20.2.5.1 Namespace Modifier Objects Encoding

```
NameSpaceModifierObj := DefAlias | DefName | DefScope
```

```

DefAlias          := AliasOp NameString NameString
AliasOp          := 0x06

DefName           := NameOp NameString DataRefObject
NameOp           := 0x08

DefScope          := ScopeOp PkgLength NameString TermList
ScopeOp          := 0x10

```

## 20.2.5.2 Named Objects Encoding

```

NamedObj          := DefBankField | DefCreateBitField | DefCreateByteField | DefCreateDWordField |
                    DefCreateField | DefCreateQWordField | DefCreateWordField | DefDataRegion |
                    DefExternal | DefOpRegion | DefPowerRes | DefProcessor | DefThermalZone

DefBankField      := BankFieldOp PkgLength NameString NameString BankValue FieldFlags FieldList
BankFieldOp       := ExtOpPrefix 0x87
BankValue         := TermArg => Integer
FieldFlags        := ByteData // bit 0-3:AccessType
                    // 0 AnyAcc
                    // 1 ByteAcc
                    // 2 WordAcc
                    // 3 DWordAcc
                    // 4 QWordAcc
                    // 5 BufferAcc
                    // 6 Reserved
                    // 7-15 Reserved
                    // bit 4: LockRule
                    // 0 NoLock
                    // 1 Lock
                    // bit 5-6: UpdateRule
                    // 0 Preserve
                    // 1 WriteAsOnes
                    // 2 WriteAsZeros
                    // bit 7: Reserved (must be 0)

FieldList         := Nothing | <FieldElement FieldList>
NamedField        := NameSeg PkgLength
ReservedField     := 0x00 PkgLength
AccessType         := 0x01 AccessType AccessAttrib
AccessType         := ByteData // Bits 0:3 - Same as AccessType bits of FieldFlags.
                    // Bits 4:5 - Reserved
                    // Bits 7:6 - 0 = AccessAttrib = Normal Access Attributes
                    //             1 = AccessAttrib = AttribBytes (x)
                    //             2 = AccessAttrib = AttribRawBytes (x)
                    //             3 = AccessAttrib = AttribRawProcessBytes (x)
                    //
                    // 'x' is encoded as bits 0:7 of the AccessAttrib byte.

AccessAttrib      := ByteData // If AccessType is BufferAcc for the SMB or
                    // GPIO OpRegions, AccessAttrib can be one of
                    // the following values:
                    // 0x02 AttribQuick
                    // 0x04 AttribSendReceive
                    // 0x06 AttribByte

```

```

//          0x08      AttribWord
//          0x0A      AttribBlock
//          0x0C      AttribProcessCall
//          0x0D      AttribBlockProcessCall

ConnectField      := <0x02 NameString> | <0x02 BufferData>

DefCreateBtField := CreateBtFieldOp SourceBuff BtIndex NameString
CreateBtFieldOp  := 0x8D
SourceBuff        := TermArg => Buffer
BtIndex          := TermArg => Integer

DefCreateByteField := CreateByteFieldOp SourceBuff ByteIndex NameString
CreateByteFieldOp := 0x8C
ByteIndex         := TermArg => Integer

DefCreateDWordField := CreateDWordFieldOp SourceBuff ByteIndex NameString
CreateDWordFieldOp := 0x8A

DefCreateField    := CreateFieldOp SourceBuff BtIndex NumBits NameString
CreateFieldOp     := ExtOpPrefix 0x13
NumBits          := TermArg => Integer

DefCreateQWordField := CreateQWordFieldOp SourceBuff ByteIndex NameString
CreateQWordFieldOp := 0x8F

DefCreateWordField := CreateWordFieldOp SourceBuff ByteIndex NameString
CreateWordFieldOp := 0x8B

DefDataRegion     := DataRegionOp NameString TermArg TermArg TermArg
DataRegionOp      := ExtOpPrefix 0x88

DefDevice         := DeviceOp PkgLength NameString TermList
DeviceOp          := ExtOpPrefix 0x82

DefEvent          := EventOp NameString
EventOp           := ExtOpPrefix 0x02

DefExternal        := ExternalOp NameString ObjectType ArgumentCount
ExternalOp         := 0x15
ObjectType         := ByteData
ArgumentCount     := ByteData (0 - 7)

DefField           := FieldOp PkgLength NameString FieldFlags FieldList
FieldOp            := ExtOpPrefix 0x81

DefIndexField     := IndexFieldOp PkgLength NameString NameString FieldFlags FieldList
IndexFieldOp       := ExtOpPrefix 0x86

DefMethod          := MethodOp PkgLength NameString MethodFlags TermList
MethodOp           := 0x14
MethodFlags        := ByteData // bit 0-2:      ArgCount (0-7)
                           // bit 3:      SerializFlag
                           //             0      NotSerialized

```

```

//           1   Serialized
// bit 4-7: SyncLevel (0x00-0x0f)

DefMutex          := MutexOp NameString SyncFlags
MutexOp          := ExtOpPrefix 0x01
SyncFlags         := ByteData    // bit 0-3:      SyncLevel (0x00-0x0f)
                    // bit 4-7:      Reserved (must be 0)

DefOpRegion       := OpRegionOp NameString RegionSpace RegionOffset RegionLen
OpRegionOp        := ExtOpPrefix 0x80
RegionSpace        := ByteData    // 0x00      SystemMemory
                           // 0x01      SystemIO
                           // 0x02      PCI_Config
                           // 0x03      EmbeddedControl
                           // 0x04      SMBus
                           // 0x05      SystemCMOS
                           // 0x06      Pci_BarTarget
                           // 0x07      IPMI
                           // 0x08      General_PurposeI0
                           // 0x09      GenericSerialBus
                           // 0x0A      PCC
                           // 0x80-0xFF: OEM Defined
RegionOffset      := TermArg => Integer
RegionLen         := TermArg => Integer

DefPowerRes       := PowerResOp PkgLength NameString SystemLevel ResourceOrder TermList
PowerResOp        := ExtOpPrefix 0x84
SystemLevel        := ByteData
ResourceOrder      := WordData

DefProcessor       := ProcessorOp PkgLength NameString ProcID PblkAddr PblkLen TermList
ProcessorOp        := ExtOpPrefix 0x83
ProcID            := ByteData
PblkAddr          := DWordData
PblkLen            := ByteData

DefThermalZone    := ThermalZoneOp PkgLength NameString TermList
ThermalZoneOp     := ExtOpPrefix 0x85

ExtendedAccessField := 0x03 AccessType ExtendedAccessAttrib AccessLength

ExtendedAccessAttrib := ByteData // 0x0B      AttribBytes
                           // 0x0E      AttribRawBytes
                           // 0x0F      AttribRawProcess

FieldElement       := NamedField | ReservedField | AccessField | ExtendedAccessField |
                     ConnectField

```

### 20.2.5.3 Type 1 Opcodes Encoding

Type1opcode	<code>:= DefBreak   DefBreakPoint   DefContinue   DefFatal   DefElse   DefLoad   DefNoop   DefNotify   DefRelease   DefReset   DefReturn   DefSignal   DefSleep   DefStall   DefWhile</code>
DefBreak	<code>:= BreakOp</code>
BreakOp	<code>:= 0xA5</code>
DefBreakPoint	<code>:= BreakPointOp</code>
BreakPointOp	<code>:= 0xCC</code>
DefContinue	<code>:= ContinueOp</code>
ContinueOp	<code>:= 0x9F</code>
DefElse	<code>:= Nothing   &lt;ElseOp PkgLength TermList&gt;</code>
ElseOp	<code>:= 0xA1</code>
DefFatal	<code>:= FatalOp FatalType FatalCode FatalArg</code>
FatalOp	<code>:= ExtOpPrefix 0x32</code>
FatalType	<code>:= ByteData</code>
FatalCode	<code>:= DWordData</code>
FatalArg	<code>:= TermArg =&gt; Integer</code>
DefIfElse	<code>:= IfOp PkgLength Predicate TermList DefElse</code>
IfOp	<code>:= 0xA0</code>
Predicate	<code>:= TermArg =&gt; Integer</code>
DefLoad	<code>:= LoadOp NameString DDBHandleObjEject</code>
LoadOp	<code>:= ExtOpPrefix 0x20</code>
DDBHandleObjEject	<code>:= SuperName</code>
DefNoop	<code>:= NoopOp</code>
NoopOp	<code>:= 0xA3</code>
DefNotify	<code>:= NotifyOp NotifyObjEject NotifyValue</code>
NotifyOp	<code>:= 0x86</code>
NotifyObjEject	<code>:= SuperName =&gt; ThermalZone   Processor   Device</code>
NotifyValue	<code>:= TermArg =&gt; Integer</code>
DefRelease	<code>:= ReleaseOp MutexObjEject</code>
ReleaseOp	<code>:= ExtOpPrefix 0x27</code>
MutexObjEject	<code>:= SuperName</code>
DefReset	<code>:= ResetOp EventObjEject</code>
ResetOp	<code>:= ExtOpPrefix 0x26</code>
EventObjEject	<code>:= SuperName</code>
DefReturn	<code>:= ReturnOp ArgObjEject</code>
ReturnOp	<code>:= 0xA4</code>
ArgObjEject	<code>:= TermArg =&gt; DataRefObjEject</code>
DefSignal	<code>:= SignalOp EventObjEject</code>
SignalOp	<code>:= ExtOpPrefix 0x24</code>
DefSleep	<code>:= SleepOp MsecTime</code>

SIeepOp	<code>:= ExtOpPrefix 0x22</code>
MsecTime	<code>:= TermArg =&gt; Integer</code>
DefStall	<code>:= StallOp UsecTime</code>
StallOp	<code>:= ExtOpPrefix 0x21</code>
UsecTime	<code>:= TermArg =&gt; ByteData</code>
DefWhile	<code>:= WhileOp PkgLength Predicate TermList</code>
WhileOp	<code>:= 0xA2</code>

#### 20.2.5.4 Type 2 Opcodes Encoding

Type2Opcode	<code>:= DefAcquire   DefAdd   DefAnd   DefBuffer   DefConcat   DefConcatRes   DefCondRefOp   DefCopyObj   DefDecrement   DefDerefOp   DefDivide   DefFindSetLeftBit   DefFindSetRightBit   DefFromBCD   DefIncrement   DefIndex   DefLAnd   DefLEqual   DefLGreater   DefLGreaterEqual   DefLLess   DefLLessEqual   DefMid   DefLNot   DefLNotEqual   DefLoadTable   DefLOr   DefMatch   DefMod   DefMultiply   DefNAnd   DefNOr   DefNot   DefObjType   DefOr   DefPackage   DefVarPackage   DefRefOp   DefShiftLeft   DefShiftRight   DefSizeOp   DefStore   DefSubtract   DefTimer   DefToBCD   DefToBuffer   DefToDecimalString   DefToHexString   DefToInteger   DefToString   DefWait   DefXOr   MethodInvocation</code>
Type6Opcode	<code>:= DefRefOp   DefDerefOp   DefIndex   UserTermObj</code>
DefAcquire	<code>:= AcquireOp MutexObj   Timeout</code>
AcquireOp	<code>:= ExtOpPrefix 0x23</code>
Timeout	<code>:= WordData</code>
DefAdd	<code>:= AddOp Operand Operand Target</code>
AddOp	<code>:= 0x72</code>
Operand	<code>:= TermArg =&gt; Integer</code>
DefAnd	<code>:= AndOp Operand Operand Target</code>
AndOp	<code>:= 0x7B</code>
DefBuffer	<code>:= BufferOp PkgLength BufferSize ByteList</code>
BufferOp	<code>:= 0x11</code>
BufferSize	<code>:= TermArg =&gt; Integer</code>
DefConcat	<code>:= ConcatOp Data Data Target</code>
ConcatOp	<code>:= 0x73</code>
Data	<code>:= TermArg =&gt; ComputationalData</code>
DefConcatRes	<code>:= ConcatResOp BufData BufData Target</code>
ConcatResOp	<code>:= 0x84</code>
BufData	<code>:= TermArg =&gt; Buffer</code>
DefCondRefOp	<code>:= CondRefOp SuperName Target</code>
CondRefOp	<code>:= ExtOpPrefix 0x12</code>
DefCopyObj	<code>:= CopyObj Op TermArg SimpleName</code>
CopyObj	<code>:= 0x9D</code>
DefDecrement	<code>:= DecrementOp SuperName</code>

DecrementOp	<code>:= 0x76</code>
DefDerefOp	<code>:= DerefOp Op Reference</code>
DerefOp	<code>:= 0x83</code>
Obj Reference	<code>:= TermArg =&gt; Obj ectReference   String</code>
DefDivide	<code>:= DivideOp DivideOp DivideOp DivideOp Remainder Quotient</code>
DivideOp	<code>:= 0x78</code>
DivideOp	<code>:= TermArg =&gt; Integer</code>
DivideOp	<code>:= TermArg =&gt; Integer</code>
Remainder	<code>:= Target</code>
Quotient	<code>:= Target</code>
DefFindSetLeftBit	<code>:= FindSetLeftBitOp Operand Target</code>
FindSetLeftBitOp	<code>:= 0x81</code>
DefFindSetRightBit	<code>:= FindSetRightBitOp Operand Target</code>
FindSetRightBitOp	<code>:= 0x82</code>
DefFromBCD	<code>:= FromBCDOp BCDValue Target</code>
FromBCDOp	<code>:= ExtOpPrefix 0x28</code>
BCDValue	<code>:= TermArg =&gt; Integer</code>
DefIncrement	<code>:= IncrementOp SuperName</code>
IncrementOp	<code>:= 0x75</code>
DefIndex	<code>:= IndexOp BuffPkgStrObj IndexValue Target</code>
IndexOp	<code>:= 0x88</code>
BuffPkgStrObj	<code>:= TermArg =&gt; Buffer, Package or String</code>
IndexValue	<code>:= TermArg =&gt; Integer</code>
DefLand	<code>:= LandOp Operand Operand</code>
LandOp	<code>:= 0x90</code>
DefLEqual	<code>:= LequalOp Operand Operand</code>
LequalOp	<code>:= 0x93</code>
DefLGreater	<code>:= LgreaterOp Operand Operand</code>
LgreaterOp	<code>:= 0x94</code>
DefLGreaterEqual	<code>:= LgreaterEqualOp Operand Operand</code>
LgreaterEqualOp	<code>:= LnotOp LessOp</code>
DefLLess	<code>:= LessOp Operand Operand</code>
LessOp	<code>:= 0x95</code>
DefLLessEqual	<code>:= LessEqualOp Operand Operand</code>
LessEqualOp	<code>:= LnotOp LgreaterOp</code>
DefLNot	<code>:= LnotOp Operand</code>
LnotOp	<code>:= 0x92</code>
DefLNotEqual	<code>:= LnotEqualOp Operand Operand</code>
LnotEqualOp	<code>:= LnotOp LequalOp</code>

DefLoadTable	<code>:= LoadTableOp TermArg TermArg TermArg TermArg TermArg TermArg TermArg</code>
LoadTableOp	<code>:= ExtOpPrefix 0x1F</code>
DefLogicalOr	<code>:= LogicalOp Operand Operand</code>
LogicalOp	<code>:= 0x91</code>
DefMatch	<code>:= MatchOp SearchPkg MatchOpCode Operand MatchOpCode Operand StartIndex</code>
MatchOp	<code>:= 0x89</code>
SearchPkg	<code>:= TermArg =&gt; Package</code>
MatchOpCode	<code>:= ByteData // 0 MTR // 1 MEQ // 2 MLE // 3 MLT // 4 MGE // 5 MGT</code>
StartIndex	<code>:= TermArg =&gt; Integer</code>
DefMemory	<code>:= MemoryOp MemoryObj TermArg TermArg Target</code>
MemoryOp	<code>:= 0x9E</code>
MemoryObj	<code>:= TermArg =&gt; Buffer   String</code>
DefMod	<code>:= ModOp Divider Divisor Target</code>
ModOp	<code>:= 0x85</code>
DefMultiply	<code>:= MultiplyOp Operand Operand Target</code>
MultiplyOp	<code>:= 0x77</code>
DefNAnd	<code>:= NandOp Operand Operand Target</code>
NandOp	<code>:= 0x7C</code>
DefNor	<code>:= NorOp Operand Operand Target</code>
NorOp	<code>:= 0x7E</code>
DefNot	<code>:= NotOp Operand Target</code>
NotOp	<code>:= 0x80</code>
DefObjectGetType	<code>:= ObjectGetTypeOp &lt;SimpleName   DebugObject   DefRefOf   DefDerefOf   DefIndex&gt;</code>
ObjectGetTypeOp	<code>:= 0x8E</code>
DefOr	<code>:= OrOp Operand Operand Target</code>
OrOp	<code>:= 0x7D</code>
DefPackage	<code>:= PackageOp PkgLength NumElements PackageElementList</code>
PackageOp	<code>:= 0x12</code>
DefVarPackage	<code>:= VarPackageOp PkgLength VarNumElements PackageElementList</code>
VarPackageOp	<code>:= 0x13</code>
NumElements	<code>:= ByteData</code>
VarNumElements	<code>:= TermArg =&gt; Integer</code>
PackageElementList	<code>:= Nothing   &lt;PackageElement PackageElementList&gt;</code>
PackageElement	<code>:= DataRefObject   NameString</code>
DefRefOf	<code>:= RefOfOp SuperName</code>
RefOfOp	<code>:= 0x71</code>

```

DefShiftLeft      := ShiftLeftOp Operand ShiftCount Target
ShiftLeftOp      := 0x79
ShiftCount        := TermArg => Integer

DefShiftRight     := ShiftRightOp Operand ShiftCount Target
ShiftRightOp     := 0x7A

DefSizeof          := SizeofOp SuperName
SizeofOp          := 0x87

DefStore           := StoreOp TermArg SuperName
StoreOp           := 0x70

DefSubtract        := SubtractOp Operand Operand Target
SubtractOp        := 0x74

DefTimer            := TimerOp
TimerOp           := 0x5B 0x33

DefToBCD           := ToBCDOp Operand Target
ToBCDOp           := ExtOpPrefix 0x29

DefToBuffer         := ToBufferOp Operand Target
ToBufferOp         := 0x96

DefToDecimalString := ToDecimalStringOp Operand Target
ToDecimalStringOp := 0x97

DefToHexString       := ToHexStringOp Operand Target
ToHexStringOp       := 0x98

DefToInteger         := ToIntegerOp Operand Target
ToIntegerOp         := 0x99

DefToString          := ToStringOp TermArg LengthArg Target
LengthArg          := TermArg => Integer
ToStringOp          := 0x9C

DefWait              := WaitOp EventObject Operand
WaitOp              := ExtOpPrefix 0x25

DefXor               := XorOp Operand Operand Target
XorOp              := 0x7F

```

## 20.2.6 Miscellaneous Objects Encoding

Miscellaneous objects include:

- Arg objects
- Local objects
- Debug objects

### 20.2.6.1 Arg Objects Encoding

```

ArgObj   := Arg0Op | Arg1Op | Arg2Op | Arg3Op | Arg4Op | Arg5Op | Arg6Op
Arg0Op  := 0x68
Arg1Op  := 0x69
Arg2Op  := 0x6A
Arg3Op  := 0x6B
Arg4Op  := 0x6C
Arg5Op  := 0x6D
Arg6Op  := 0x6E

```

### 20.2.6.2 Local Objects Encoding

```

Local Obj   := Local 0Op | Local 1Op | Local 2Op | Local 3Op | Local 4Op | Local 5Op | Local 6Op |
Local 7Op
Local 0Op  := 0x60
Local 1Op  := 0x61
Local 2Op  := 0x62
Local 3Op  := 0x63
Local 4Op  := 0x64
Local 5Op  := 0x65
Local 6Op  := 0x66
Local 7Op  := 0x67

```

### 20.2.6.3 Debug Objects Encoding

```

DebugObj   := DebugOp
DebugOp    := ExtOpPrefix 0x31

```

## 20.3 AML Byte Stream Byte Values

The following table lists all the byte values that can be found in an AML byte stream and the meaning of each byte value. This table is useful for debugging AML code.

**Table 20-440 AML Byte Stream Byte Values**

Encoding Value	Encoding Name	Encoding Group	Fixed List Arguments	Variable List Arguments
0x00	ZeroOp	Data Object	—	—
0x01	OneOp	Data Object	—	—
0x02-0x05	—	—	—	—
0x06	AliasOp	Term Object	NameString NameString	—
0x07	—	—	—	—
0x08	NameOp	Term Object	NameString DataRefObject	—
0x09	—	—	—	—
0x0A	BytePrefix	Data Object	ByteData	—
0x0B	WordPrefix	Data Object	WordData	—

Encoding Value	Encoding Name	Encoding Group	Fixed List Arguments	Variable List Arguments
0x0C	DWordPrefix	Data Object	DWordData	—
0x0D	StringPrefix	Data Object	AsciiCharList NullChar	—
0x0E	QWordPrefix	Data Object	QWordData	—
0x0F	—	—	—	—
0x10	ScopeOp	Term Object	NameString	TermList
0x11	BufferOp	Term Object	TermArg	ByteList
0x12	PackageOp	Term Object	ByteData	Package TermList
0x13	VarPackageOp	Term Object	TermArg	Package TermList
0x14	MethodOp	Term Object	NameString ByteData	TermList
0x15	ExternalOp	Name Object	NameString ByteData ByteData	—
0x16-0x2D	—	—	—	—
0x2E ('.')	DualNamePrefix	Name Object	NameSeg NameSeg	—
0x2F ('/')	MultiNamePrefix	Name Object	ByteData NameSeg(N)	—
0x30-0x39 ('0'- '9')	DigitChar—	Name Object—	—	—
0x3A-0x40	—	—	—	—
0x41-0x5A ('A'-‘Z’)	NameChar	Name Object	—	—
0x5B ('[')	ExtOpPrefix	—	ByteData	—
0x5B 0x00	—	—	—	—
0x5B 0x01	MutexOp	Term Object	NameString ByteData	—
0x5B 0x02	EventOp	Term Object	NameString	—
0x5B 0x12	CondRefOfOp	Term Object	SuperName SuperName	—
0x5B 0x13	CreateFieldOp	Term Object	TermArg TermArg TermArg NameString	—
0x5B 0x1F	LoadTableOp	Term Object	TermArg TermArg TermArg TermArg TermArg TermArg	—

Encoding Value	Encoding Name	Encoding Group	Fixed List Arguments	Variable List Arguments
0x5B 0x20	LoadOp	Term Object	NameString SuperName	—
0x5B 0x21	StallOp	Term Object	TermArg	—
0x5B 0x22	SleepOp	Term Object	TermArg	—
0x5B 0x23	AcquireOp	Term Object	SuperName WordData	—
0x5B 0x24	SignalOp	Term Object	SuperName	—
0x5B 0x25	WaitOp	Term Object	SuperName TermArg	—
0x5B 0x26	ResetOp	Term Object	SuperName	—
0x5B 0x27	ReleaseOp	Term Object	SuperName	—
0x5B 0x28	FromBCDOp	Term Object	TermArg Target	—
0x5B 0x29	ToBCD	Term Object	TermArg Target	—
0x5B 0x2A	Reserved	—	—	—
0x5B 0x30	RevisionOp	Data Object	—	—
0x5B 0x31	DebugOp	Debug Object	—	—
0x5B 0x32	FatalOp	Term Object	ByteData DWordData TermArg	—
0x5B 0x33	TimerOp	Term Object	—	—
0x5B 0x80	OpRegionOp	Term Object	NameString ByteData TermArg TermArg	—
0x5B 0x81	FieldOp	Term Object	NameString ByteData	FieldList
0x5B 0x82	DeviceOp	Term Object	NameString	TermList
0x5B 0x83	ProcessorOp	Term Object	NameString ByteData DWordData ByteData	TermList
0x5B 0x84	PowerResOp	Term Object	NameString ByteData WordData	TermList
0x5B 0x85	ThermalZoneOp	Term Object	NameString	TermList
0x5B 0x86	IndexFieldOp	Term Object	NameString NameString ByteData	FieldList

Encoding Value	Encoding Name	Encoding Group	Fixed List Arguments	Variable List Arguments
0x5B 0x87	BankFieldOp	Term Object	NameString NameString TermArg ByteData	FieldList
0x5B 0x88	DataRegionOp	Term Object	NameString TermArg TermArg TermArg	—
0x5B 0x80 - 0x5B 0xFF	—	—	—	—
0x5C ('\'')	RootChar	Name Object	—	—
0x5D	—	—	—	—
0x5E ('^')	ParentPrefixChar	Name Object	—	—
0x5F(' '_')	NameChar—	Name Object	—	—
0x60 ('`')	Local0Op	Local Object	—	—
0x61 ('a')	Local1Op	Local Object	—	—
0x62 ('b')	Local2Op	Local Object	—	—
0x63 ('c')	Local3Op	Local Object	—	—
0x64 ('d')	Local4Op	Local Object	—	—
0x65 ('e')	Local5Op	Local Object	—	—
0x66 ('f')	Local6Op	Local Object	—	—
0x67 ('g')	Local7Op	Local Object	—	—
0x68 ('h')	Arg0Op	Arg Object	—	—
0x69 ('i')	Arg1Op	Arg Object	—	—
0x6A ('j')	Arg2Op	Arg Object	—	—
0x6B ('k')	Arg3Op	Arg Object	—	—
0x6C ('l')	Arg4Op	Arg Object	—	—
0x6D ('m')	Arg5Op	Arg Object	—	—
0x6E ('n')	Arg6Op	Arg Object	—	—
0x6F	—	—	—	—
0x70	StoreOp	Term Object	TermArg SuperName	—
0x71	RefOfOp	Term Object	SuperName	—
0x72	AddOp	Term Object	TermArg TermArg Target	—
0x73	ConcatOp	Term Object	TermArg TermArg Target	—

Encoding Value	Encoding Name	Encoding Group	Fixed List Arguments	Variable List Arguments
0x74	SubtractOp	Term Object	TermArg TermArg Target	—
0x75	IncrementOp	Term Object	SuperName	—
0x76	DecrementOp	Term Object	SuperName	—
0x77	MultiplyOp	Term Object	TermArg TermArg Target	—
0x78	DivideOp	Term Object	TermArg TermArg Target Target	—
0x79	ShiftLeftOp	Term Object	TermArg TermArg Target	—
0x7A	ShiftRightOp	Term Object	TermArg TermArg Target	—
0x7B	AndOp	Term Object	TermArg TermArg Target	—
0x7C	NandOp	Term Object	TermArg TermArg Target	—
0x7D	OrOp	Term Object	TermArg TermArg Target	—
0x7E	NorOp	Term Object	TermArg TermArg Target	—
0x7F	XorOp	Term Object	TermArg TermArg Target	—
0x80	NotOp	Term Object	TermArg Target	—
0x81	FindSetLeftBitOp	Term Object	TermArg Target	—
0x82	FindSetRightBitOp	Term Object	TermArg Target	—
0x83	DerefOfOp	Term Object	TermArg	—
0x84	ConcatResOp	Term Object	TermArg TermArg Target	—
0x85	ModOp	Term Object	TermArg TermArg Target	—
0x86	NotifyOp	Term Object	SuperName TermArg	—
0x87	SizeOfOp	Term Object	SuperName	—
0x88	IndexOp	Term Object	TermArg TermArg Target	—

Encoding Value	Encoding Name	Encoding Group	Fixed List Arguments	Variable List Arguments
0x89	MatchOp	Term Object	TermArg ByteData TermArg ByteData TermArg TermArg	—
0x8A	CreateDWordFieldOp	Term Object	TermArg TermArg NameString	—
0x8B	CreateWordFieldOp	Term Object	TermArg TermArg NameString	—
0x8C	CreateByteFieldOp	Term Object	TermArg TermArg NameString	—
0x8D	CreateBitFieldOp	Term Object	TermArg TermArg NameString	—
0x8E	ObjectTypeOp	Term Object	SuperName	—
0x8F	CreateQWordFieldOp	Term Object	TermArg TermArg NameString	—
0x90	LandOp	Term Object	TermArg TermArg	—
0x91	LorOp	Term Object	TermArg TermArg	—
0x92	LnotOp	Term Object	TermArg	—
0x92 0x93	LNotEqualOp	Term Object	TermArg TermArg	—
0x92 0x94	LLessEqualOp	Term Object	TermArg TermArg	—
0x92 0x95	LGreaterEqualOp	Term Object	TermArg TermArg	—
0x93	LEqualOp	Term Object	TermArg TermArg	—
0x94	LGreaterOp	Term Object	TermArg TermArg	—
0x95	LLessOp	Term Object	TermArg TermArg	—
0x96	ToBufferOp	Term Object	TermArg Target	—
0x97	ToDecimalStringOp	Term Object	TermArg Target	—
0x98	ToHexStringOp	Term Object	TermArg Target	—
0x99	ToIntegerOp	Term Object	TermArg Target	—
0x9A-0x9B	—	—	—	—
0x9C	ToStringOp	Term Object	TermArg TermArg Target	—
0x9D	CopyObjectOp	Term Object	TermArg SimpleName	—
0x9E	MidOp	Term Object	TermArg TermArg TermArg Target	—
0x9F	ContinueOp	Term Object	—	—

Encoding Value	Encoding Name	Encoding Group	Fixed List Arguments	Variable List Arguments
0xA0	IfOp	Term Object	TermArg	TermList
0xA1	ElseOp	Term Object	—	TermList
0xA2	WhileOp	Term Object	TermArg	TermList
0xA3	NoopOp	Term Object	—	—
0xA4	ReturnOp	Term Object	TermArg	—
0xA5	BreakOp	Term Object	—	—
0xA6-0xCB	—	—	—	—
0xCC	BreakPointOp	Term Object	—	—
0xCD-0xFE	—	—	—	—
0xFF	OnesOp	Data Object	—	—

## 20.4 AML Encoding of Names in the Namespace

Assume the following namespace exists:



Assume further that a definition block is loaded that creates a node \S0.CPU.SET, and loads a block using it as a root. Assume the loaded block contains the following names:

```

STP1
^GET
^^PCI0
^^PCI0.SBS
\S2
\S2.ISA.COM1
^^^S3
^^^S2.MEM
^^^S2.MEM.SET
Scope(\S0.CPU.SET.STP1) {
  XYZ
  ^ABC
  ^ABC.DEF
}

```

This will be encoded in AML as:

```
'STP1'  
ParentPrefi xChar 'GET_'  
ParentPrefi xChar ParentPrefi xChar 'PCI0'  
ParentPrefi xChar ParentPrefi xChar Dual NamePrefi x 'PCI0' 'SBS_'  
RootChar 'S2__'  
RootChar Multi NamePrefi x 3 'S2__' 'ISA_' 'COM1'  
ParentPrefi xChar ParentPrefi xChar ParentPrefi xChar 'S3__'  
ParentPrefi xChar ParentPrefi xChar ParentPrefi xChar Dual NamePrefi x 'S2__' 'MEM_'  
ParentPrefi xChar ParentPrefi xChar ParentPrefi xChar Multi NamePrefi x 3 'S2__' 'MEM_' 'SET_'
```

After the block is loaded, the namespace will look like this (names added to the namespace by the loading operation are shown in bold):

```
\\\  
S0  
  MEM  
    SET  
    GET  
  CPU  
    SET  
      STP1  
        XYZ  
        ABC  
        DEF  
    GET  
  PCIO  
    SBS  
S1  
  MEM  
    SET  
    GET  
  CPU  
    SET  
    GET  
S2  
  ISA  
    COM1  
  MEM  
    SET  
S3
```

# 21 ACPI Data Tables and Table Definition Language

---

There are two fundamental types of ACPI tables:

- Tables that contain AML code produced from the ACPI Source Language (ASL). These include the DSDT, any SSDTs, and sometimes OEM-specific tables (OEMx).
- Tables that contain simple data and no AML byte code. These types of tables are known as ACPI Data Tables. They include tables such as the FADT, MADT, ECDT, SRAT, etc. - essentially any table other than a DSDT or SSDT.
- The first type of table is generated using an ASL compiler and this language is specified in section 18.

The second type of table, the ACPI Data Table, is addressed by this section.

This section describes a simple language (the Table Definition Language or TDL) that can be used to generate any ACPI data table. It simplifies the table generation for platform firmware vendors and can automatically generate fields such as table lengths, subtable lengths, checksums, flag fields, etc.

## 21.1 Types of ACPI Data Tables

In the context of a compiler for the Table Definition Language (TDL), there are two types of ACPI Data Tables:

- ACPI tables that are "known" to the compiler. These would typically include all of the basic ACPI tables defined in the ACPI specification such as the FADT, MADT, ECDT, etc. Since these tables are fully specified (usually via the ACPI specification, but from other sources as well), the TDL compiler knows all details of these tables -- including all required data types, optional or required sub-tables, etc.
- ACPI tables that are unknown to the compiler. These may include tables that are not defined in the ACPI specification such as MCFG, DBGP, etc., or simply new ACPI tables that have not yet been implemented in the compiler.

One of the goals of the ACPI Table Definition Language is to support both cases above. Most ACPI tables will be known to the compiler (and will be the easiest to specify in TDL), but the language is general enough to allow the definition of new ACPI tables that are unknown or unimplemented in the compiler.

An additional goal of TDL is to support the output of a disassembler that formats an existing table into TDL. This enables disassembler/change/compile operations.

## 21.2 ACPI Table Definition Language Specification

The following section defines the ACPI Table Definition Language (TDL). The grammar notation follows the same rules as the ASL source language (See [Section 19.2.1](#), ASL Grammar Notation.) Full definition of the various data types follows the grammar specification.

## 21.2.1 Overview of the Table Definition Language (TDL)

Most ACPI tables share the following structure (all except FACS):

- A common, 36 byte header containing the table signature, length, checksum, revision, and other data.
- A table body which contains the specific table data.

The Table Definition Language allows the definition of an ACPI table via a collection of *fields*. Each line of TDL source code is a field, and corresponds to a single data item in the definition of the table.

For example, the C definition of the common ACPI table header is as follows:

```
typedef struct acpi_table_header
{
    char             Signature[4];
    UI NT32          Length;
    UI NT8           Revision;
    UI NT8           Checksum;
    char             OemId[6];
    char             OemTableId[8];
    UI NT32          OemRevision;
    char             AslCompilerId[4];
    UI NT32          AslCompilerRevision;

} ACPI_TABLE_HEADER;
```

In the Table Definition Language, an ACPI table header can be described as follows:

```
: "ECDT"
: 00000000
: 01
: 00
: "OEM "
: "MACHINE1"
: 00000001
: ""
: 00000000
```

Additionally and optionally, it can also be described with accompanying field names:

```
Signature : "ECDT"      [Embedded Controller Boot Resources Table]
Table Length : 00000000
Revision : 01
Checksum : 00
Oem ID : "OEM "
Oem Table ID : "MACHINE1"
Oem Revision : 00000001
Asl Compiler ID : ""
Asl Compiler Revision : 00000000
```

**Note:** In the ACPI table header, the *TableLength*, *Checksum*, *AslCompilerId*, and the *AslCompilerRevision* fields are all output fields that are filled in automatically by the compiler during table generation. Also, the field names are output by a disassembler that formats existing tables into TDL code.

## 21.2.2 TDL Grammar Specification

```

// Root Term
//
DataTable := FieldList

//
// Field Terms
//
FieldList := Field | <Field FieldList>

Field := <FieldDefinition OptionalFieldComment> | CommentField

FieldDefinition :=

    // Fields for predefined (known) ACPI tables
    <OptionalFieldName ':' FieldValue> |

    // Generic data types (used for custom or undefined ACPI tables)
    <'UINT8' ':' IntegerExpression> | // 8-bit unsigned integer
    <'UINT16' ':' IntegerExpression> | // 16-bit unsigned integer
    <'UINT24' ':' IntegerExpression> | // 24-bit unsigned integer
    <'UINT32' ':' IntegerExpression> | // 32-bit unsigned integer
    <'UINT40' ':' IntegerExpression> | // 40-bit unsigned integer
    <'UINT48' ':' IntegerExpression> | // 48-bit unsigned integer
    <'UINT56' ':' IntegerExpression> | // 56-bit unsigned integer
    <'UINT64' ':' IntegerExpression> | // 64-bit unsigned integer
    <'String' ':' String> | // Quoted ASCII string
    <'Unicode' ':' String> | // Quoted ASCII string -> Unicode string
    <'Buffer' ':' ByteConstList> | // Raw buffer of 8-bit unsigned integers
    <'GUID' ':' Guid> | // In GUID format
    <'Label' ':' Label> | // ASCII Label - unquoted string

OptionalFieldName :=
    Nothing | AsciiCharList // Optional field name/description

FieldValue :=
    IntegerExpression | String | Buffer | Flags | Label

```

```

OptionalFieldComment :=  

    Nothing |  

    <'[' AsciiCharList ']'>

CommentField :=  

    <'// AsciiCharList NewLine> |  

    <'* AsciiCharList '*'> |  

    <'[' AsciiCharList ']'>

//  

// Data Expressions  

//  

IntegerExpression :=  

    Integer |  

    <IntegerExpression IntegerOperator IntegerExpression> |  

    <'(' IntegerExpression ')'>

//  

// Operators below are shown in precedence order. The precedence rules  

// are the same as the C language. Parentheses have precedence over  

// all operators.  

//  

IntegerOperator :=  

    '!' | '^' | '*' | '/' | '%' | '+' | '-' | '<<' | '>>' |  

    '<' | '>' | '<=' | '>=' | '==' | '!=\' | '&' | '^' | '|' |  

    '&&' | '||' |

//  

// Data Types  

//  

String :=  

    <' "' AsciiCharList '"'>
Buffer :=  

    ByteConstList
Guid :=  

    <DWordConst '-' WordConst '-' WordConst '-' WordConst '-' Const48>
Label :=  

    AsciiCharList

//  

// Data Terms  

//  

Integer :=  

    ByteConst | WordConst | Const24 | DWordConst | Const40 | Const48 | Const56 |  

    QWordConst | LabelReference

LabelReference :=  

    <'$' Label>

```

```

Flags :=  

    OneBit | TwoBits

ByteConstList :=  

    ByteConst |  

    <Byte Const ' ' ByteConstList>

AsciiCharList :=  

    Nothing |  

    PrintableAsciiChar |  

    <PrintableAsciiChar AsciiCharList>

//  

// Terminals  

//  

ByteConst :=  

    0x00-0xFF
WordConst :=  

    0x0000 - 0xFFFF
Const24 :=  

    0x000000 - 0xFFFFFFF
DWordConst :=  

    0x00000000 - 0xFFFFFFFF
Const40 :=  

    0x000000000000 - 0xFFFFFFFFFFFF
Const48 :=  

    0x0000000000000000 - 0xFFFFFFFFFFFFFF
Const56 :=  

    0x00000000000000000000 - 0xFFFFFFFFFFFFFF
QWordConst :-  

    0x000000000000000000000000 - 0xFFFFFFFFFFFFFF

OneBit :=  

    0 - 1
TwoBits :=  

    0 - 3

PrintableAsciiChar :=  

    0x20 - 0x7E
NewLine :=  

    '\n'

```

## 21.2.3 Data Types

### 21.2.3.1 Integers

All integers in ACPI are unsigned. Four major types of unsigned integers are supported by the compiler: *Bytes*, *Words*, *DWords* and *QWords*. In addition, for special cases, there are some odd sized integers such as 24-bit and 56-bit. The actual required width of an integer is defined by the ACPI table. If an integer is specified that is numerically larger than the width of the target field within the input source, an error is

issued by the compiler. Integers are expected by the data table compiler to be entered in hexadecimal with no "hex" prefix.

## Examples:

[001]	Revision : 04// Byte (8-bit)
[002]	C2 Latency : 0000// Word (16-bit)
[004]	DSDT Address : 00000001// DWord (32-bit)
[008]	Address : 0000000000000001// QWord (64-bit)

Length of non-power-of-two examples:

[003]	Reserved : 000000// 24 bits
[007]	Capabilities : 0000000000000000 // 56 bits

### 21.2.3.2 Integer Expressions

Expressions are supported in all fields that require an integer value.

Supported operators (Standard C meanings, in precedence order):

()	Parentheses
!	Logical NOT
~	Bitwise ones compliment (NOT)
*	Multiply
/	Divide
%	Modulo
+	Add
-	Subtract
<<	Shift left
>>	Shift right
<	Less than
>	Greater than
<=	Less than or equal
>=	Greater than or equal
==	Equal
!=	Not Equal
&	Bitwise AND
^	bitwise Exclusive OR
	Bitwise OR
&&	Logical AND
	Logical OR

**Examples:**

[001]  
[002]

Revision : 04 \* (4 + 7) // Byte (8-bit)  
C2 Latency : 0032 + 8 // Word (16-bit)

**21.2.3.3 Flags**

Many ACPI tables contain flag fields. For these fields, only the individual flag bits need to be specified to the compiler. The individual bits are aggregated into a single integer of the proper size by the compiler.

**Examples:**

[002]

Flags (decoded below) : 0005  
Polarity : 1  
Trigger Mode : 1

In this example, only the Polarity and Trigger Mode fields need to be specified to the compiler (as either zero or one). The compiler then creates the final 16-bit Flags field for the ACPI table.

**21.2.3.4 Strings**

Strings must always be surrounded by quotes. The actual string that is generated by the compiler may or may not be null-terminated, depending on the table definition in the ACPI specification. For example, the OEM ID and OEM Table ID in the common ACPI table header (shown above) are fixed at six and eight characters, respectively. They are not necessarily null terminated. Most other strings, however, are of variable-length and are automatically null terminated by the compiler. If a string is specified that is too long for a fixed-length string field, an error is issued. String lengths are specified in the definition for each relevant ACPI table.

Escape sequences within a quoted string are not allowed. The backslash character '\' refers to the root of the ACPI namespace.

**Examples:**

[008]  
[006]

Oem Table ID : "TEMPLATE" // Fixed Length  
Processor UID String : "\CPU0" // Variable Length

**21.2.3.5 Buffers**

A buffer is typically used whenever the required binary data is larger than a QWord, or the data does not fit exactly into one of the standard integer widths. Examples include UUIDs and byte data defined by the SLIT table.

**Examples:**

// SLIT entry

[032] Locality 0 : 0A 10 16 17 18 19 1A 1B 1C 1D 1E 1F 20 21 22 23 \  
24 25 26 27 28 29 2A 2B 2C 2D 2E 2F 30 31 32 33

// DMAR entry

[002] PCI Path : 1F 07

Each hexadecimal byte should be entered separately, separated by a space. The continuation character (backslash) may be used to continue the buffer data to more than one line.

#### 21.2.4 Fields Set Automatically by the Compiler

There are several types of ACPI table fields that are set automatically by the compiler. This simplifies the process of ACPI table development by relieving the programmer from these tasks.

Checksums:	All ACPI table checksums are computed and inserted automatically. This includes the main checksum that appears in the standard ACPI table header, as well as any additional checksum fields such as the extended checksum that appears in the ACPI 2.0 RSDP.
Table and Subtable Lengths:	All ACPI table lengths are computed and inserted automatically. This includes the master table length that appears in the common ACPI table header, and the length of any internal subtables as applicable.

#### Examples:

[004]	Table Length : 000000F4
[001]	Subtable Type : 08 <Platform Interrupt Sources>
[001]	Length : 10
[001]	Subtable Type : 01 <Memory Affinity>
[001]	Length : 28
Flags:	As described in the previous section, individual flags are aggregated automatically by the compiler and inserted into the ACPI table as the correctly sized and valued integer.
Compiler IDs:	The data table compiler automatically inserts the ID and current revision for iASL into the common ACPI table header for each table during compilation.

#### 21.2.5 Special Fields

Reserved Fields:	All fields that are declared as Reserved by the table definition within the ACPI (or other) specification should be set to zero.
Table Revision:	This field in the common ACPI table header is often very important and defines the structure of the remaining table. The developer should take care to ensure that this value is correct and current. This field is not set automatically by the compiler. It is instead used to indicate which version of the table is being compiled.
Table Signature:	There are several table signatures within ACPI that are either different from the table name, or have unusual length:
FADT - signature is "FACP".	
MADT - signature is "APIC".	

RSDP - signature is "RSD PTR " (with trailing space)

## 21.2.6 TDL Generic Data Types

These data types are used to construct ACPI tables that are not predefined (known) by the TDL compiler.

UINT8	Generates an 8-bit unsigned integer
UINT16	Generates a 16-bit unsigned integer
UINT24	Generates a 24-bit unsigned integer
UINT32	Generates a 32-bit unsigned integer
UINT40	Generates a 40-bit unsigned integer
UINT48	Generates a 48-bit unsigned integer
UINT56	Generates a 56-bit unsigned integer
UINT64	Generates a 64-bit unsigned integer
String	Generates a null-terminated ASCII string (ASCIIZ)
Unicode	Generates a null terminated Unicode (UTF-16) string
Buffer	Generates a buffer of 8-bit unsigned integers
GUID	Generates an encoded GUID in a 16-byte buffer
Label	Generates a Label at the current location (offset) within the table.  This label can be referenced within integer expressions by prepending the label with a '\$' sign.

## 21.2.7 Defining a Known ACPI Table in TDL

It is expected that most ACPI tables that will be created via the TDL compiler are ACPI tables that are known to the compiler. This means that the compiler contains the required structure and definition of the table, as per the ACPI specification or other specification for that table.

For these known ACPI tables, specifying the data for the table involves simply defining the value for each field in the table. The compiler automatically types the data, performs range and any value checks, and generates the appropriate output.

The starting point for any of the known ACPI tables is the document that specifies the format of the table (usually the ACPI specification), or a table template file generated by an ASL compiler, or even the output of an AML disassembler. Writing the TDL code involves implementing one line of code for each data item specified in the table definition itself.

For example, the table header for an ACPI table can be defined as simply a sequence of strings and integers. The TDL compiler will format these data items into a 36-byte ACPI header.

```
: "ECDT"
: 00000000
: 01
: 00
: "OEM      "
```

```

: "MACHI NE1"
: 00000001
: ""
: 00000000

```

## 21.2.8 Defining an Unknown or New ACPI table in TDL

For ACPI tables that are new or whose formats are otherwise unknown to the compiler, "generic" data types are introduced to allow the definition of these tables using explicit data types.

### Examples of Generic Data Types:

```

Label : StartRecord
UINT8 : 11
UINT16 : $EndRecord - $StartRecord // Record Length
UINT24 : 112233
UINT32 : 11223344
UINT56 : 11223344556677
UINT64 : 1122334455667788

String : "This is a string"
DevicePath : "\Pci Root(0)\Pci (0x1f, 1)\Usb(0, 0)"
Uni code : "This string will be encoded to Uni code"

Buffer : AA 01 32 4C 77
GUID : 11223344-5566-7788-99aa-bbccddeeff00
Label : EndRecord

```

## 21.2.9 Table Definition Language Examples

### 21.2.9.1 ECDT Disassembler Output

The output of the iASL disassembler may be used as direct input to the TDL compiler:

```

[000h 0000 4]           Signature : "ECDT" [Embedded Controller Data Table]
[004h 0004 4]           Table Length : 0000004E
[008h 0008 1]           Revision : 01
[009h 0009 1]           Checksum : F4
[00Ah 0010 6]           Oem ID : "INTEL "
[010h 0016 8]           Oem Table ID : "TEMPLATE"
[018h 0024 4]           Oem Revision : 00000001
[01Ch 0028 4]           Asl Compiler ID : "INTL"
[020h 0032 4]           Asl Compiler Revision : 20110316

[024h 0036 12]          Command/Status Register : [Generic Address Structure]
[024h 0036 1]           Space ID : 01 [SystemIO]
[025h 0037 1]           Bit Width : 08
[026h 0038 1]           Bit Offset : 00
[027h 0039 1]           Encoded Access Width : 00 [Undefined/Legacy]
[028h 0040 8]           Address : 0000000000000006

[030h 0048 12]          Data Register : [Generic Address Structure]

```

[030h 0048 1]	Space ID : 01 [SystemI 0]
[031h 0049 1]	Bit Width : 08
[032h 0050 1]	Bit Offset : 00
[033h 0051 1]	Encoded Access Width : 00 [Undefined/Legacy]
[034h 0052 8]	Address : 00000000000000062
[03Ch 0060 4]	UID : 00000000
[040h 0064 1]	GPE Number : 09
[041h 0065 13]	Namepath : "\_SB.PCI0.EC"

Raw Table Data: Length 78 (0x4E)

```

0000: 45 43 44 54 4E 00 00 00 01 F4 49 4E 54 45 4C 20 ECDTN....INTEL
0010: 54 45 4D 50 4C 41 54 45 01 00 00 00 49 4E 54 4C TEMPLATE....INTL
0020: 16 03 11 20 01 08 00 00 66 00 00 00 00 00 00 00 ....f.....
0030: 01 08 00 00 62 00 00 00 00 00 00 00 00 00 00 00 ....b.....
0040: 09 5C 5F 53 42 2E 50 43 49 30 2E 45 43 00 .\_SB.PCI0.EC.

```

### 21.2.9.2 ECDT Definition with Field Comments

Similar to the disassembler output but simpler:

Signature : "ECDT" [Embedded Controller Data Table]
Table Length : 0000004E
Revision : 01
Checksum : F4
Oem ID : "INTEL "
Oem Table ID : "TEMPLATE"
Oem Revision : 00000001
Asl Compiler ID : "INTL"
Asl Compiler Revision : 20110316

Command/Status Register : [Generic Address Structure]
Space ID : 01 [SystemI 0]
Bit Width : 08
Bit Offset : 00
Encoded Access Width : 00 [Undefined/Legacy]
Address : 00000000000000062

Data Register : [Generic Address Structure]
Space ID : 01 [SystemI 0]
Bit Width : 08
Bit Offset : 00
Encoded Access Width : 00 [Undefined/Legacy]
Address : 00000000000000062
UID : 00000000
GPE Number : 09
Namepath : "\_SB.PCI0.EC"

## 21.2.10 Minimal ECDT Definition

An example of a minimal ECDT definition with no Field Names:

```
: "ECDT"      [Embedded Controller Boot Resources Table]
: 0000004E
: 01
: F4
: "INTEL "
: "TEMPLATE"
: 00000001
: "INTL"
: 20110316

: [Generic Address Structure]
: 01 [SystemIO]
: 08
: 00
: 00 [Undefined/Legacy]
: 0000000000000066

: [Generic Address Structure]
: 01 [SystemIO]
: 08
: 00
: 00 [Undefined/Legacy]
: 0000000000000062

: 00000000
: 09
: "\_SB.PCI0.EC"
```

### 21.2.10.1 Generic ACPI Table Definition

Tables that are not known to the TDL compiler can be defined by using the generic data types. All ACPI tables are assumed to have the common ACPI header, however:

```
Signature          : "OEMZ"  
Table Length      : 00000052  
Revision          : 01  
Checksum          : 6C  
Oem ID            : "TEST"  
Oem Table ID      : "CUSTOM "  
Oem Revision      : 00000001  
Asl Compiler ID   : "INTL  
Asl Compiler Revision : 00000001  
  
UINT8             : 01  
UINT8             : 08  
UINT8             : 00  
UINT8             : 00  
UINT64            : 0000000000000006  
UINT32            : 00000000  
UINT8             : 12  
String            : "Hello World!"
```

# Appendix A: Device Class Specifications

---

This section defines the behavior of devices as that behavior relates to power management and, specifically, to the four device power states defined by ACPI. The goal is enabling device vendors to design power-manageable products that meet the basic needs of OSPM and can be utilized by any ACPI-compatible operating system.

## A.1 Overview

The power management of individual devices is the responsibility of a *policy owner* in the operating system. This software element will implement a power management policy that is appropriate for the type (or *class*) of device being managed. Device power management policy typically operates in conjunction with a global system power policy implemented in the operating system.

In general, the device-class power management policy strives to reduce power consumption while the system is working by transitioning among various available power states according to device usage. The challenge facing policy owners is to minimize power consumption without adversely impacting the system's usability. This balanced approach provides the user with both power savings and good performance.

Because the policy owner has very specific knowledge about when a device is in use or potentially in use, there is no need for hardware timers or such to determine when to make these transitions. Similarly, this level of understanding of device usage makes it possible to use fewer device power states. Generally, intermediate states attempt to draw a compromise between latency and consumption because of the uncertainty of actual device usage. With the increased knowledge in the OS, good decisions can be made about whether the device is needed at all. With this ability to turn devices off more frequently, the benefit of having intermediate states diminishes.

The policy owner also determines what class-specific events can cause the system to transition from sleeping to working states, and enables this functionality based on application or user requests. Notice that the definition of the wake events that each class supports will influence the system's global power policy in terms of the level of power management a system sleeping state can attain while still meeting wake latency requirements set by applications or the user.

## A.2 Device Power States

The following definitions apply to devices of all classes:

- **D0.** State in which device is on and running. It is receiving full power from the system and is delivering full functionality to the user.
- **D1.** Class-specific low-power state (defined in the following section) in which device context may or may not be lost. Buses in D1 cannot do anything to the bus that would force devices on that bus to lose context.
- **D2.** Class-specific low-power state (defined in the following section) in which device context may or may not be lost. Attains greater power savings than D1. Buses in D2 can cause devices on that bus to lose some context (for example, the bus reduces power supplied to the bus). Devices in D2 must be prepared for the bus to be in D2 or higher.

- **D3.** State in which device is off and not running. Device context is lost. Power can be removed from the device.

Device power-state transitions are typically invoked through bus-specific mechanisms (for example, ATA Standby, USB Suspend, and so on). In some cases, bus-specific mechanisms are not available and device-specific mechanisms must be used. Notice that the explicit command for entering the D3 state might be the removal of power.

It is the responsibility of the policy owner (or other software) to restore any lost device context when returning to the D0 state.

### A.2.1 Bus Power Management

Policy owners for bus devices (for example, PCI, USB, Small Computer System Interface [SCSI]) have the additional responsibility of tracking the power states of all devices on the bus and for transitioning the bus itself to only those power states that are consistent with those of its devices. This means that the bus state can be no lower than the highest state of one of its devices. However, enabled wake events can affect this as well. For example, if a particular device is in the D2 state and set to wake the system and the bus can only forward wake requests while in the D1 state, then the bus must remain in the D1 state even if all devices are in a lower state.

Below are summaries of relevant bus power management specifications with references to the sources.

### A.2.2 Display Power Management

Refer to the *Display Power Management Signaling Specification (DPMS)*, available from:

Video Electronics Standards Association (VESA)  
2150 North First Street  
Suite 440  
San Jose, CA 95131-2029

A DPMS-compliant video controller and DPMS-compliant monitor use the horizontal and vertical sync signals to control the power mode of the monitor. There are 4 modes of operation: normal, standby, suspend and off. DPMS-compliant video controllers toggle the sync lines on or off to select the power mode.

### A.2.3 PCMCIA/PCCARD/CardBus Power Management

PCMCIA and PCCARD devices do not have device power states defined. The only power states available are on and off, controlled by the host bus controller. The CardBus specification is a superset of the PCCARD specification, incorporating the power management specification for PCI bus. Power management capabilities query, state transition commands and wake event reporting are identical.

### A.2.4 PCI Power Management

Refer to the PCI Special Interest Group (PCISIG) Web site, at "Links to ACPI-Related Documents" (<http://uefi.org/acpi>) under the heading "PCI Sig".

- **PCI Bus Power Management Capabilities Query.** PCI Bus device capabilities are reported via the optional Capabilities List registers, which are accessed via the Cap\_Ptr.

- **PCI Bus Power Management State Transition Commands.** PCI Bus device power states are controlled and queried via the standard Power Management Status/Control Register (PMCSR).
- **PCI Bus Wakeup Event Reporting.** PCI wake events are reported on the optional PME# signal, with setting of the Wake\_Int bit in the PMCSR. Wake event reporting is controlled by the Wake\_En bit in the PMCSR register.

## A.2.5 USB Power Management

Refer to the Universal Serial Bus Implementers Forum (USB-IF) Web site, at "Links to ACPI-Related Documents" (<http://uefi.org/acpi>) under the heading "Universal Serial Bus Power Management".

- **USB Power Management Capabilities Query.** USB device capabilities are reported to the USB Host via the standard Power Descriptors. These address power consumption, latency time, wake support, and battery support and status notification.
- **USB Power Management State Transition Commands.** USB device power states are controlled by the USB Host via the standard SET FEATURE command. USB device power states are queried via the standard USB GET STATUS command.
- **USB Wakeup Event Reporting.** USB wake event reporting is controlled using the SET FEATURE command, with value DEVICE\_REMOTE\_WAKEUP. USB wake events are reported by sending remote wake resume signaling.

## A.2.6 Device Classes

Below is a list of the class-specific device power management definitions available in this specification. Notice that there exists a default device class definition that applies to all devices, even if there is a separate, class-specific section that adds additional requirements.

- **Audio Device Class.** Applies to audio devices.
- **COM Port Device Class.** Applies to COM ports devices.
- **Display Device Class.** Applies to CRT monitors, LCD panels, and video controllers for those devices.
- **Input Device Class.** Applies to standard types of input devices such as keyboards, keypads, mice, pointing devices, joysticks, and game pads, plus new types of input devices such as virtual reality devices.
- **Modem Device Class.** Applies to modem and modem-like (for example, ISDN terminal adapters) devices.
- **Network Device Class.** Applies specifically to Ethernet and token ring adapters. ATM and ISDN adapters are not supported by this specification.
- **PC Card Controller Device Class.** Applies to PC Card controllers and slots.
- **Storage Device Class.** Applies specifically to ATA hard disks, floppy disks, ATAPI and SCSI CD-ROMs, and the IDE channel.

## A.3 Default Device Class

The requirements expressed in this section apply to all devices, even if there is a separate, class-specific power management definition that identifies additional requirements.

**Table A-1 Default Power State Definitions**

State	Definition
D0	Device is on and running. It is receiving full power from the system, and is delivering full functionality to the user.
D1	This state is not defined and not used by the default device class.
D2	This state is not defined and not used by the default device class.
D3	Device is off and not running. Device context is assumed lost, and there is no need for any of it to be preserved in hardware. This state should consume the minimum power possible. Its only requirement is to recognize a bus-specific command to re-enter D0. Power can be removed from the device while in D3. If power is removed, the device will receive a bus-specific hardware reset upon reapplication of power, and should initialize itself as in a normal power on.

### A.3.1 Default Power Management Policy

Present State	Next State	Cause
D0	D3	Device determined by the OS to not be needed by any applications or the user. System enters a sleeping state.
D3	D0	Device determined by the OS to be needed by some application or the user.

### A.3.2 Default Wake Events

There are no default wake events, because knowledge of the device is implicit in servicing such events. Devices can expose wake capabilities to OSPM, and device-specific software can enable these, but there is no generic application-level or OS-wide support for undefined wake events.

### A.3.3 Minimum Power Capabilities

All devices must support the D0 and D3 states. Functionality available in D0 must be available after returning to D0 from D3 without requiring a system reboot or any user intervention. This requirement applies whether or not power is removed from the device during D3.

## A.4 Audio Device Class

The requirements expressed in this section apply to audio devices

### A.4.1 Power State Definitions

State	Status	Definition
D0	Required	Power is on. Device is operating.
D1	Optional	Power consumption is less than D0 state. Device must be able to transition between D0 and D1 states within 100 ms. No audio samples may be lost by entering and leaving this state.
D2	Required	Power consumption is less than D0 state. Device must be able to transition between D0 and D2 states within 100 ms. Audio samples may be lost by entering and leaving this state.
D3	Required	The device is completely off or drawing minimal power. For example, a stereo will be off, but a light-emitting diode (LED) may be on and the stereo may be listening to IR commands.

If a device is in the D1 or D2 state it must resume within 100 ms. A device in the D3 state may take as long as it needs to power up. It is the responsibility of the policy owner to advertise to the system how long a device requires to power up.

All audio devices must be capable of D0, D2 and D3 states. It is desirable that an audio device be capable of D1 state. The difference between D1 and D2 is that a device capable of D1 can maintain complete state information in reduced power mode. The policy owner or other software must save all states for D2-capable devices. Some audio samples may be lost in transitioning into and out of the D2 state.

Notice that the D1 state was added to allow digital signal processor (DSP)-equipped audio hardware to exploit low-power modes in the DSP. For example, a DSP may be used to implement Dolby AC-3 Decode. When paused it stops playing audio, but the DSP may contain thousands of bytes worth of state information. If the DSP supports a low-power state, it can shut down and later resume from exactly the audio sample where it paused without losing state information.

### A.4.2 Power Management Policy

For the purpose of the following state transition policy, the following device-specific operational states are defined:

- **Playing.** Audio is playing.
- **Recording:**
- **Foreground.** Normal application is recording. Recording is considered foreground unless specifically designated low priority.
- **Background.** Speech recognition or speech activity detection is running. Recording may be preempted by foreground recording or playing. Any audio recording may be designated as background.
- **Full Duplex.** Device is simultaneously playing and recording.
- **Paused.** File handle is open. Only devices that are playing, foreground recording or in full duplex operation may be paused. Background recording may not be paused. State is static and never lost. The paused state assumes that a device must transition to the resumed state rapidly. Playing or recording must be resumed within 100 ms. No audio samples may be lost between the device is paused and later resumed.
- **Closed.** No file handle is open.

Present State	Next State	Cause
D3	D0	Audio device moves from closed to open state or paused when the device receives the resume command.
D0	D1	Audio device receives pause command. If device is D1 capable, this state is preferred. If not, the device driver will preserve context, and the device will be set to D2.
D2/D1	D0	Audio device receives a resume command.
D0	D2	Audio device is closed. Audio inactivity timer started.
D2	D3	Audio inactivity timer expires.
D0	D3	Audio device is in background record mode and receives power-down command.

When an audio device is in the D0 state it will refuse system requests to transition to D3 state unless it is in background record mode. When an audio device is paused (D1 or D2) and it receives a request to transition to the D3 state, it will save the state of the audio device and transition to the D3 state.

Since multimedia applications often open and close audio files in rapid succession, it is recommended that an inactivity timer be employed by the policy owner to prevent needless shutdowns (D3 transitions) of the audio hardware. For example, frequent power cycling may damage audio devices powered by vacuum tubes.

#### A.4.3 Wake Events

An audio device may be a wake device. For example, a USB microphone designed for security applications might use the USB wake mechanism to signal an alarm condition.

#### A.4.4 Minimum Power Capabilities

All audio devices must be capable of D0, D2 and D3 power states. If the device is capable of maintaining context while in a low-power state it should advertise support for D1. Transitional latency for the D2 or D3 states must be less than 100 ms. There are no latency restrictions for D3 transitions, but the policy owner should advertise the amount of time required.

### A.5 COM Port Device Class

The requirements expressed in this section apply to Universal Asynchronous Receiver/Transmitters (UARTs) such as the common NS16550 buffered serial port and equivalents.

The two required states for any power-managed COM Port are full on (D0) and full off (D3). This in turn requires that the COM port hardware be power-manageable by ACPI control methods for COM ports that are on system boards, or by standard bus power management controls for COM ports that are on add-in cards (for example, PCI). Because of this, ISA-based COM port add-in cards will not be able to meet this requirement, and therefore cannot be compliant with this specification.

### A.5.1 Power State Definitions

State	Status	Definition
D0	Required	Line drivers are on. UART context is preserved.
D1	N/A	This state is not defined for COM Ports. Use the D3 state instead.
D2	N/A	This state is not defined for COM Ports. Use the D3 state instead.
D3	Required	Line drivers are off (unpowered; outputs isolated from devices attached to the port). UART context is lost. Latency to return to D0 is less than 1 second.

### A.5.2 Power Management Policy

Present State	Next State	Cause
D3	D0	Power-on reset COM port opened by an application
D0	D3	COM port closed System enters sleeping state while wake is disabled on this device. System enters sleeping state while wake is enabled on this device and the device is capable of generating wake to the system from state D3.

### A.5.3 Wake Events

If the COM port is capable of generating wake events, asserting the “ring indicator” line (V.24 circuit 125) will cause the COM port to assert a wake event. There are two common mechanisms that may be employed (either one or both) for performing machine wake using COM ports.

The first provides a solution that is capable of waking the PC whether the UART is powered (D0) or not (D3). Here, the “ring indicator” line (from V.24 circuit 125) is commonly connected directly to the system wake device in addition to being connected to the UART. While this implementation is normative for COM ports located on system motherboards (see the ACPI specification), it could also be done by add-in cards with COM ports that reside on buses supporting system wake from devices in D3 (for example, PME# signal on PCI).

The second mechanism requires that the UART be powered (D0) to use the UART’s interrupt output pin to generate the wake event instead. When using this method, the OS COM port policy owner or power management control methods are expected to configure the UART. Although any UART interrupt source (for example, ‘data ready’) could theoretically be used to wake the system, these methods are beyond the scope of this document.

### A.5.4 Minimum Power Capabilities

A COM port conforming to this specification must support the D0 and D3 states.

## A.6 Display Device Class

The requirements expressed in this section apply to all devices engaged in the display of program content, which includes full screen display devices, display controllers, and graphics adapters. This class

does not include video capture devices unless they are children of the graphics adapter. This class does not include edge displays or hardware indicators for device states.

While saving power from the display and adapter are primary goals of Display Device Class power management definitions, the definitions are also intended to ensure that the user perceives the system as "off" during system sleeping states, as required above. When the system enters a lower power state, the screen must go black so the user knows the system is idle. This is important because devices that cannot actually save power (standard televisions, for example) can still support the user notice of system idle by going black.

## A.6.1 Power State Definitions

### A.6.1.1 CRT Monitors (not including other full screen displays)

State	Status	Definition
D0	Required	<p>This state is equivalent to the "On" state defined in the VESA DPMS specification (see Related Documents) and is signaled to the display using the DPMS method.</p> <p>Display is fully on</p> <p>Video image is active</p>
D1	Optional	<p>This state is equivalent to the "Standby" state defined in the VESA DPMS and is signaled to the display using the DPMS method.</p> <p>Display is functional but may be conserving energy</p> <p>Video image is blank</p> <p>Latency to return to D0 must be less than 5 seconds</p>
D2	Required	<p>This state is equivalent to the "Suspend" state defined in the VESA DPMS specification and is signaled to the display using the DPMS method.</p> <p>Display is functional and conserving energy</p> <p>Video image is blank</p> <p>Latency to return to D0 is less than 10 seconds</p>
D3	Required	<p>This state is equivalent to the "Off" state defined in the VESA DPMS specification and is signaled to the display using the DPMS method.</p> <p>Display is non-functional</p> <p>Video image is blank</p>

CRT Monitors are a special case in power management. On the one hand, they support a common defined method (DPMS) for changing power states. On the other hand, that procedure and the CRT support is extremely slow and out of keeping with other faster power control methods used by other forms of display. This definition should not preclude the use of faster and more effective methods of transitioning the CRT if they are available and known to the controller. DPMS is not recommended as solution for new display devices in the future.

### A.6.1.2 Internal Flat Panel Devices

State	Status	Definition
D0	Required	<p>This state is equivalent to the “On” state for a DPMS device, but is signaled to the panel by the correct application of power and/or controller specific signaling.</p> <p>Display is fully on</p> <p>Backlight (if present) is fully on (subject to performance state requirements – see below)</p> <p>Video image is active</p>
D1	Optional	<p>This state is not required to be physically different than a D3 state if the device is able to meet the resume requirement and the driver is able to restore state.</p> <p>Display retains internal state but may be conserving energy</p> <p>Backlight (if present) is fully off</p> <p>Video image is blank</p> <p>Latency to return to D0 must be less than 500 milliseconds</p>
D2	Optional	<p>This state is not required to be physically different than a D3 state if the device is able to meet the resume requirement and the driver is able to restore state.</p> <p>Display retains state but is conserving energy</p> <p>Backlight (if present) is fully off;</p> <p>Video image is blank</p> <p>Latency to return to D0 is less than 500 milliseconds</p>
D3	Required	<p>This state is equivalent to the “Off” state defined in the VESA DPMS specification. It is signaled by the removal of power or possibly by controller-specific signaling.</p> <p>Display is non-functional</p> <p>Backlight (if present) is fully off.</p> <p>Video image is blank</p> <p>Latency to return to D0 is less than 500 milliseconds</p>

Internal flat panels (also known as local flat panels or sometimes as LCDs) do not normally support or require DPMS signaling to change power states. Instead, controllers capable of managing such panels tend to provide vendor-specific methods to control internal flat panels, often involving special sequencing of power signals to the panel. Some may be managed only by the application or removal of power.

Backlight control for power management states is likewise controller and even platform specific. Note that on-off backlight control for power management states is often unrelated to backlight intensity or brightness control that is used while in the D0 state.

The 500 milliseconds is only to allow some existing hardware to function . The target for new devices should be 100 milliseconds.

### A.6.1.3 DVI Displays (Digital Flat Panels and DVI Monitors)

State	Status	Definition
D0	Required	<p>This state is equivalent to the “On” state for a DPMS device, but is signaled to the display by the correct application of power and/or controller specific signaling.</p> <p>Display is fully on</p> <p>Video image is active</p>
D1	Optional	<p>This state is not required to be physically different than a D3 state if the device is able to meet the resume requirement and the driver is able to restore state. It is signaled by the removal of display output and time expiring. The physical state entered is no different than D2.</p> <p>Display retains internal state but may be conserving energy</p> <p>Video image is blank</p> <p>Latency to return to D0 must be less than 250 milliseconds</p>
D2	Optional	<p>This state is not required to be physically different than a D3 state if the device is able to meet the resume requirement and the driver is able to restore state. It is signaled by the removal of display output and time expiring. The physical state entered is no different than D1.</p> <p>Display retains state but is conserving energy</p> <p>Video image is blank</p> <p>Latency to return to D0 is less than 250 milliseconds</p>
D3	Required	<p>This state is equivalent to the “Off” state defined in the VESA DPMS specification. It is signaled by the removal of display output and time expiring</p> <p>Display is non-functional</p> <p>Video image is blank</p> <p>Latency to return to D0 is less than 250 milliseconds</p>

Although 250 milliseconds is shown here because not all devices in this group are fast now, the target resume for a new device should be 100 milliseconds.

### A.6.1.4 Standard TV Devices (and Analog HDTVs)

State	Status	Definition
D0	Required	This state is equivalent to the “On” state for a DPMS device. Display is fully on Video image is active
D1	Optional	Video image is blank Latency to return to D0 must be less than 100 milliseconds
D2	Optional	Video image is blank Latency to return to D0 must be less than 100 milliseconds
D3	Required	This state is not equivalent to the “Off” state defined in the VESA DPMS specification because not power is actually saved. Video image is blank Latency to return to D0 is less than 100 milliseconds

### A.6.1.5 Other (new) Full Screen Devices

Some devices not specifically defined here already exist, such as projectors that emulate CRTs or HDTVs. Others may be coming. It is important for any device used for full screen display to support power transitions and power management states, but the primary requirement for the method should be low overhead.

State	Status	Definition
D0	Required	This state is equivalent to the “On” state for a DPMS device, but is signaled to the panel by the correct application of power and/or device specific signaling known to the controller. Display is fully on Video image is active
D1	Optional	This state is not required to be physically different than a D3 state if the device is able to meet the resume requirement and the driver is able to restore state. It is signaled to the panel by the correct application of power and/or device specific signaling known to the controller. Display retains internal state but may be conserving energy Video image is blank Latency to return to D0 must be less than 100 milliseconds

State	Status	Definition
D2	Optional	<p>This state is not required to be physically different than a D3 state if the device is able to meet the resume requirement and the driver is able to restore state. It is signaled to the panel by the correct application of power and/or device specific signaling known to the controller.</p> <p>Display retains state but is conserving energy</p> <p>Video image is blank</p> <p>Latency to return to D0 is less than 100 milliseconds</p>
D3	Required	<p>This state is equivalent to the “Off” state defined in the VESA DPMS specification. It is signaled by the removal of display output and/or device specific methods known to the controller.</p> <p>Display is non-functional</p> <p>Video image is blank</p> <p>Latency to return to D0 is less than 250 milliseconds</p>

Although 250 milliseconds is shown here because not all devices in this group are fast now, the target resume for a new device should be 100 milliseconds.

### A.6.1.6 Video Controllers (Graphics Adapters)

State	Status	Definition
D0	Required	<p>Back-end is on</p> <p>Video controller context is preserved</p> <p>Video memory contents are preserved</p>
D1	Optional	<p>Back-end is off, except for CRT control signaling (DPMS)</p> <p>Video controller context is preserved</p> <p>Video memory contents is preserved</p> <p>Latency to return to D0 is less than 100 milliseconds</p>
D2	Optional	<p>Back-end is off, except for CRT control signaling (DPMS)</p> <p>Video controller context is lost</p> <p>Video memory contents is lost</p> <p>Latency to return to D0 is less than 200 milliseconds</p>
D3	Required	<p>Back-end is off</p> <p>Video controller context is lost (power removed)</p> <p>Video memory contents is lost (power removed)</p> <p>Latency to return to D0 is less than 200 milliseconds</p>

### A.6.1.7 Display Codecs

Like the displays they control, display codecs are children of the adapter and cannot be in a higher state than the adapter or a lower state than the displays they control . It is generally not helpful to deal with codecs entirely separately from the adapter or the displays they control. While it may vary from device to

device, a codec will either be safely powered down when its display is powered down or it may require power as long as the adapter receives power.

## A.6.2 Power Management Policy for the Display Class

Present State	Next State	Cause
D0	D1	User inactivity for a period of time (T1)
D1	D2	User inactivity for a period of time (T2 > T1)
D2	D3	User inactivity for a period of time (T3 > T2)
D1/D2/D3	D0	User activity or application UI change (for example, dialog pop-up)

These state transition definitions apply to both the full screen display and the video controller. However, the control of the two devices is independent, except that a video controller will never be put into a lower power state than its full screen display. Also, while full screen displays can transition directly from D1 to D3 or from D2 to D3, the adapters require a transition to D0 from D1 or D2 before entering D3.

Transitions for the video controller are commanded via the bus-specific control mechanism for device states. Monitor/LCD transitions are commanded by signaling from the video controller and are only generated as a result of explicit commands from the policy-owner. Full screen display power control is functionally independent from any other interface the monitor may provide (such as USB). For instance, Hubs and HID devices in the monitor enclosure may be power-managed by their driver over the USB bus, but the Monitor/LCD device itself may not; it must be power-managed from the video controller using the methods above.

## A.6.3 Wake Events

Display devices incorporating a system power switch should generate a wake event when the switch is pressed while the system is sleeping.

## A.6.4 Minimum Power Capabilities

A CRT monitor conforming to this specification must support the D0, D2, and D3 states. Other full screen displays only need to support D0 and D3. Support for the D1 state is optional in all cases. Transitional latencies for the D1 or D2 state must meet the requirements above.

A video controller conforming to this specification must support the D0 and D3 states. Support for the D1 and D2 states is optional. Transitional latencies for the D1 must be less than 100 milliseconds while D2 and D3 must transition to D0 in less than 200 milliseconds.

## A.6.5 Performance States for Display Class Devices

Performance states for display devices and adapters have one clear difference from defined power management states. There is no display in any power management state higher than D0. However, performance states are all applied within D0, which means they save power while continuing to display. Not all display class devices will support performance states, but in all cases, they must allow continued display where they exist.

### A.6.5.1 Common Requirements for Display Class Performance States

The definition of each state (up the line toward the OSPM) must include maximum latency information on transitions into the state and transitions out of the state. (For states other than DPS1, it may be necessary to indicate whether the latency is the time from DPS0 to DPSx or only from DPSx-1 to DPSx.)

Each state has to have a relative weight indicator or a relative power savings indicator (i.e., it can make a difference in OSPM policies whether DPS1 saves 2% power and DPS2 save 75% power even if latency is longer.)

While ASL NameSpace structures may provide some of this information, it is recommended that display class performance states be entered and exited by driver and not by control method wherever possible.

### A.6.5.2 Performance states for Full Screen Displays

#### A.6.5.2.1 CRT Performance States

Some CRTs (in theory) have the capability for "reduced on" -- a mode which displays but uses less power than full performance. Even without this capability, a CRT may be able to use reduced refresh or other methods to reduce the total power of displaying.

#### A.6.5.2.2 Internal Flat Panel

In general, panels consume a fixed amount of power. However, some panels are also capable of supporting reduced refresh. More important, the amount of backlight brightness is a major factor in system power. This clearly needs to be coordinated with direct ASL control methods for brightness and with ambient light sensing when present. However, a performance state may be achieved by offsetting the brightness value computed by other methods, either by a fixed amount or a fixed percentage.

#### A.6.5.2.3 DVI Full Screen Devices

DVI Devices are normally capable of frequency control and may be able to benefit by frequency control. However, because of sensitivity to signal loss, DVI devices may have limitations on other types of performance control.

#### A.6.5.2.4 Standard TV and Analog HDTVs

Standard TV and Analog HDTVs do not appear capable of performance states. Codecs controlling them may be capable of power saving, however.

#### A.6.5.2.5 New Devices

The ability to reduce power while continuing to display will be increasingly important.

### A.6.5.3 Performance States for Video Controllers/Display Adapters

Adapters are somewhat limited during performance states because they have to continue to support display on one or more full screen devices. However, they can still do a number of things to support performance states, including

- Changes to basic display and render capabilities, including speed or frequency range supported.

- Feature/Capability/Quality Control – limiting specific hardware features, limiting refresh rates, limiting resolutions.

The limiting factor on what can be supported may sometimes be in the OSPM. If the OSPM support dynamic changes in these features during a performance state change (even if no other time), more opportunities arise.

Once again, the latency on transitions and the power saved by specific states have to be made available to the OSPM in order to use these options effectively.

## A.7 Input Device Class

The requirements expressed in this section apply to standard types of input devices such as keyboards, keypads, mice, pointing devices, joysticks, game pads, to devices that combine these kinds of input functionality (composite devices, and so on), and to new types of input devices such as virtual reality devices, simulation devices, and so on.

## A.7.1 Power State Definitions

State	Status	Definition
D0	Required	Device is receiving full power from its power source, delivering full functionality to the user, and preserving applicable context and state information.
D1	Optional	<p>Input device power consumption is greatly reduced. In general, device is in a power management state and is not delivering any functionality to the user except wake functionality if applicable. Device status, state, or other information indicators (for example, LEDs, LCD displays, and so on) are turned off to save power.</p> <p>The following device context and state information should be preserved by the policy owner or other software:</p> <p><b>Keyboard.</b> Num, caps, scroll lock states (and Compose and Kana states if applicable) and associated LED/indicator states, repeat delay, and repeat rate.</p> <p><b>Joystick.</b> Forced feedback effects (if applicable).</p> <p><b>Any input device.</b> All context and state information that cannot be preserved by the device when it's conserving power.</p>
D2	N/A	This state is not defined for input devices, use D1 as the power management state instead.
D3	Required	Input device is off and not running. In general, the device is not delivering any functionality to the user except wake functionality if applicable. Device context and state information is lost.

## A.7.2 Power Management Policy

Present State	Next State	Cause
D3	D0	Requested by the system
D0	D1/D3*	Requested by the system (for example, system goes to sleep with wake enabled)
D0/D1	D3	Requested by the system (for example, system goes to sleep with wake disabled) Power is removed
D1/D3	D0	Device with enabled wake capability requests transition by generating a wake event Requested by the system

**Note:** \*Depends on capability of device (if it features D1 or D3 wake capability or not); device will be put in state with the lowest possible power consumption.

## A.7.3 Wake Events

It is recommended, but not required, that input devices implement and support bus-specific wake mechanisms if these are defined for their bus type. This is recommended because a user typically uses an input device of some kind to wake the system when it is in a power management state (for example, when the system is sleeping).

The actual input data (particular button or key pressed) that's associated with a wake event should never be discarded by the device itself, but should always be passed along to the policy owner or other

software for further interpretation. This software implements a policy for how this input data should be interpreted, and decides what should be passed along to higher-level software, and so on.

It is recommended that the device button(s) or key(s) used for power management purposes are clearly labeled with text and/or icons. This is recommended for keyboards and other input devices on which all buttons or keys are typically labeled with text and/or icons that identify their usage.

For example, a keyboard could include a special-purpose power management button (for example, "Power") that, when pressed during a system sleeping state, generates a wake event. Alternatively, the button(s) on mice and other pointing devices could be used to trigger a wake event.

Examples of more advanced wake events include keyboard wake signaling when any key is pressed, mouse wake signaling on detection of X/Y motion, joystick wake signaling on X/Y motion, and so on. However, in order to avoid accidental or unintentional wake of the system, and to give the user some control over which input events will result in a system wake, it's suggested that more advanced types of wake events are implemented as features that can be turned on or off by the user (for example, as part of the OSPM user interface).

## A.7.4 Minimum Power Capabilities

An input device conforming to this specification must support the D0 and D3 states. Support for the D1 state is optional.

## A.8 Modem Device Class

- The requirements expressed in this section apply to modems and similar devices, such as USB controlled ISDN Terminal Adapters ("digital modems") and computer-connected telephone devices ("CT phones"). This specification will refer to these devices as "modems"; the same considerations apply to digital modems and CT phones unless explicitly stated otherwise.
- The scope of this section is further restricted to modems that support power management using methods defined by the relevant PC-modem connection bus. These include PCI, USB, PCCARD (PCMCIA), CardBus, and modems on the system motherboard described by ACPI system firmware control methods. The scope does not include bus-specific means for devices to alert the host PC (for example, how to deliver a "ringing" message), nor does it address how those alerting operations are controlled.

### A.8.1 Technology Overview

Modems are traditionally serial devices, but today modems may be attached to a PC by many different means. Further, many new modems expose a software serial interface, where the modem controller function is implemented in software. This specification addresses three different connection types:

- Traditional connections without power-managed connections (for example, COM, LPT, ISA)
- Power managed connections (for example, PCCARD, CardBus, PCI, USB)
- Motherboard modems

For some of the above modem connection types mentioned, there are three different modem architectures possible:

- Traditional modem (DAA, DSP, and controller in hardware)
- Controller-less design (DAA and DSP in hardware)

- "Soft modem" design (DAA and CODEC only in hardware)

The hardware components of the modem shall be controlled by the relevant bus commands, where applicable (USB, PCI, CardBus). The software components are dependent on the power state of the CPU.

### A.8.1.1 Traditional Connections

In older methods (COM, LPT, ISA) the modem is controlled primarily by serialized ASCII command strings (for example, V.25ter) and traditional V.24 (RS-232) out-of-band leads. In these legacy devices, there are no common means for power management other than the power switch for the device, or the entire system unit.

An external modem connected to a COM port or LPT port typically has its own power supply. An LPT port modem might run from the current on the LPT port +5V supply. For COM or LPT port modems, power is typically controlled by a user switch.

The most common modem type is an ISA card with an embedded COM port. From a software standpoint, they are logically identical to external modems, but the modems are powered by the PC system unit. Power is drawn from the ISA bus without independent power switching.

### A.8.1.2 Power-Managed Connections

PCMCIA, PCCARD and CardBus slots are powered and power-managed by the system, using means defined in the relevant bus specifications. For PCMCIA and PCCARD devices, only D0 and D3 states are available, via Socket Services in the OS and/or ACPI system firmware. CardBus adds intermediate states, using the same mechanisms defined for PCI Bus.

PCI bus slots are powered and power-managed by the system, using means defined in the PCI specification.

USB devices may be powered by the USB itself (100mA or 500mA), or have their own external power supply. All USB devices are power-managed by the USB bus master, using means defined in the USB specification.

### A.8.1.3 Motherboard Modems

A modem embedded in the motherboard is powered by controls on the motherboard. It should be power-managed by using control methods exposed via ACPI system firmware tables.

## A.8.2 Power State Definitions

State	Status	Definition
D0	Required	Phone interface is on (may be on or off hook) Speaker is on Controller Context is preserved
D1	N/A	Not defined (do not use)
D2	Optional	Phone interface is not powered by the host (on hook) Speaker is off Controller context is preserved 2 seconds maximum restore time
D3	Required	Phone interface is not powered by host (on hook) Speaker is off Controller context may be lost 5 seconds maximum restore time

## A.8.3 Power Management Policy

Present State	Next State	Cause
D2/D3	D0	System issues a bus command to enter the D0 state (for example, an application is answering or originating a call).
D0	D2	System issues a bus command to enter the D2 state. (for example, an application is listening for an incoming call).
D0	D3	System issues a bus command to enter the D3 state (for example, all applications have closed the Modem device).

## A.8.4 Wake Events

For any type of modem device, wake events (if supported and enabled) are only generated in response to detected “ringing” from an incoming call. All other events associated with modems (V.8bis messages, and so on) require that the PC be in the “working” state to capture them. The methods and signals used to generate the wake may vary as a function of the modem connection (bus) type and modem architecture.

Machine wake is allowed from any modem power state (D0, D2, and D3), and is accomplished by methods described in the appropriate bus power management specification (PCI, USB, PCCARD), or by ACPI system board control methods (for Modem on Motherboard implementations).

If the specific modem implementation or connection type does not enable it to assert system wake signaling, these modems will not be able to wake the machine. The OS modem policy owner will have to retain the PC in the “working” state to perform *all* types of event detection (including ringing).

## A.8.5 Minimum Power Capabilities

A modem or similar device conforming to this specification must support the D0 and D3 states. Support of the D2 state is optional.

## A.9 Network Device Class

The requirements expressed in this section apply to Ethernet and token ring adapters. ATM and ISDN adapters are not supported by this specification.

### A.9.1 Power State Definitions

For the purpose of the following state definitions “no bus transmission” means that transmit requests from the host processor are not honored, and “no bus reception” means that received data are not transferred to host memory.

State	Status	Definition
D0	Required	<p>Device is on and running and is delivering full functionality and performance to the user</p> <p>Device is fully compliant with the requirements of the attached network</p>
D1	Optional	<p>No bus transmission allowed</p> <p>No bus reception allowed</p> <p>No interrupts can occur</p> <p>Device context may be lost</p>
D2	Optional	<p>No bus transmission allowed</p> <p>No bus reception allowed</p> <p>No interrupts can occur</p> <p>Device context may be lost</p>
D3	Required	<p>Device context is assumed to be lost</p> <p>No bus transmission allowed</p> <p>No bus reception allowed</p> <p>No interrupts can occur</p>

This document does not specify maximum power and maximum latency requirements for the sleeping states because these numbers are very different for different network technologies. The device must meet the requirements of the bus that it attaches to.

Although the descriptions of states D1 and D2 are the same, the choice of whether to implement D1 or D2 or both may depend on bus services required, power requirements, or time required to restore the physical layer. For example, a device designed for a particular bus might include state D1 because it needs a bus service such as a bus clock to support Magic Packet™ wake, and that service is available in the bus device’s D1 power state but not in D2. Also, a device might include both state D1 and state D2 to provide a choice between lower power and lower latency.

## A.9.2 Power Management Policy

Present State	Next State	Cause
D0	Dx	System enters sleep state. If wake is enabled, Dx is the lowest power state (for example, D1, D2, D3) from which the network device supports system wake. An appropriate time-out has elapsed after a “link down” condition was detected. Dx is the lowest power state in which the network device can detect “link up.”
D0	D3	System initiated network shutdown. System enters sleep state and wake is either not enabled or the network device is capable of waking from D3.
D1/D2/D3	D0	System wake (transition to S0), including a wake caused by a network wake event.

## A.9.3 Wake Events

Network wake events are generally the result of either a change in the *link status* or the reception of a *wake frame* from the network.

### A.9.3.1 Link Status Events

Link status wake events are useful to indicate a change in the network’s availability, particularly when this change may impact the level at which the system should re-enter the sleeping state. For example, a transition from “link off” to “link on” may trigger the system to re-enter sleep at a higher level (for example, S2 versus S3) so that wake frames can be detected. Conversely, a transition from “link on” to “link off” may trigger the system to re-enter sleep at a deeper level (for example, S3 versus S2) since the network is not currently available. The network device should implement an internal delay to avoid unnecessary transitions when the link status toggles on or off momentarily.

### A.9.3.2 Wake Frame Events

Wake frame events are used to wake the system whenever *meaningful* data is presented to the system over the network. Examples of meaningful data include the reception of a Magic Packet™, a management request from a remote administrator, or simply network traffic directly targeted to the local system. In all of these cases the network device was pre-programmed by the policy owner or other software with information on how to identify wake frames from other network traffic. The details of how this information is passed between software and network device depend on the OS and therefore are not described in this specification.

## A.9.4 Minimum Power Capabilities

A network device conforming to this specification must support the D0 and D3 states. Support for the D1 and D2 states is optional.

## A.10 PC Card Controller Device Class

The requirements expressed in this section apply to PC Card controller devices and the PC Card slots.

Power management of *PC Cards* is not defined by this specification. PC Card power management is defined by the relevant power management specification for the card's device class (for example, network, modem, and so on), in conjunction with the PC Card standard (for 16-bit cards) or the PCI Power Management Specification (for CardBus cards).

## A.10.1 Power State Definitions

State	Status	Definition
D0	Required	<p>Card status change interrupts are fully functional.</p> <p>Card functional interrupts are fully functional.</p> <p>Controller context (for example, memory, I/O windows) is fully functional.</p> <p>Controller interface is fully functional (processor can access cards).</p> <p>Power to cards (slots) is available (may be on or off under software control).</p> <p>The controller is at its highest power consumption level.</p> <p>Bus command response time is at its fastest level.</p> <p>PC Cards can be in any Dx power state (D0-D3).</p> <p><b>Note:</b> In D0 state, CSTSCHG interrupts can be passed to a system from a powered down PC Card (for more detail, refer to section 5.2.11.2 of PC Card Standard, Electrical Specification).</p>
D1	Optional	<p>Card status change interrupts are disabled. CSTSCHG interrupt events are still detectable by the controller and cause the bus-specific wake signal to be asserted if wake is enabled on the controller.</p> <p>Card functional interrupts are disabled.</p> <p>Controller context is preserved (all register contents must be maintained but memory and I/O windows need not be functional).</p> <p>Controller interface is non-functional (processor cannot access cards).</p> <p>Power to cards (slots) is available (may be on or off; retains power setting it had at time of entry to D1).</p> <p>Power-level consumption for the controller is high but less than D0.</p> <p>The time required to restore the function from the D1 state to the D0 state is quicker than resumption from D3.</p> <p>Bus command response time is equal to or slower than in D0.</p> <p>PC Cards can be in the D1, D2, or D3 power states (not D0).</p> <p><b>Note:</b> In D1 state, CSTSCHG interrupts can be passed to a system from a powered-down PC Card (for more detail, refer to section 5.2.11.2 of PC Card Standard, Electrical Specification).</p>
D2	Optional	Functionally the same as D1 (may be implemented instead of D1 in order to allow bus and/or system to enter a lower-power state).

State	Status	Definition
D3	Required	<p>Card status change interrupt: Disabled and need not be detected.</p> <p>Card functional interrupt: Disabled and need not be detected.</p> <p>Controller context (for example, memory, I/O windows): Lost.</p> <p>Controller interface: Non-functional (processor can not access cards).</p> <p>Clock to controller: Off.</p> <p>Power to cards (slots): Off (card context lost).</p> <p><b>Note:</b> If Vcc is removed (for example, PCI Bus B3) while the device is in the D3 state, a bus-specific reset (for example, PCI RST#) must be asserted when power is restored and functions will then return to the D0 state with a full power-on reset sequence. Whenever the transition from D3 to D0 is initiated through assertion of a bus-specific reset, the power-on defaults will be restored to the function by hardware just as at initial power up. The function must then be fully initialized and reconfigured by software.</p>

## A.10.2 Power Management Policy

The PC Card controller is a bus controller. As such, its power state is dependent on the devices plugged into the bus (child devices). OSPM will track the state of all devices on the bus and will put the bus into the best possible power state based on the current device requirements on that bus. For example, if the PC Card cards are all in the D1 state, OSPM will put the PC Card controller in the D1 state.

Present State	Next State	Cause
D2/D3	D0	Any card in any slot needing to transition to state D0 due to a wake event or because of system usage.
D0	D1	No card in any slot is in state D0.
D0	D2	No card in any slot is in state D0 or D1.
D0	D3	All cards in all slots are in state D3.

## A.10.3 Wake Events

A wake event is any event that would normally assert the controller's status change interrupt (for example, card insertion, card battery state change, card ReqAttn event, and so on) or ring-indicate signal.

## A.10.4 Minimum Power Capabilities

A PC Card controller device conforming to this specification must support the D0 and D3 states. Support for the D1 or D2 states is optional.

## A.11 Storage Device Class

The requirements expressed in this section apply to ATA hard disks, floppy disks, ATAPI and SCSI CD-ROMs, and the IDE channel.

## A.11.1 Power State Definitions

### A.11.1.1 Hard Disk, CD-ROM and IDE/ATAPI Removable Storage Devices

State	Status	Definition
D0	Required	Drive controller (for example, interface and control electronics) is functional. Interface mode context (for example, communications timings) is programmed.
D1	Optional	Drive controller (for example, interface and control electronics) is functional. Interface mode context (for example, communications timings) is preserved. Drive motor (for example, spindle) is stopped, with fast-start mode enabled, if available. Laser (if any) is off. Recommended latency to return to D0 is less than 5 seconds. Power consumption in D1 should be no more than 80% of power consumed in D0. <b>Note:</b> For ATA devices, this state is invoked by the Standby Immediate command.
D2	N/A	This state is not defined for storage devices.
D3	Required	Drive controller (for example, interface and control electronics) is not functional; context is lost. Interface mode (for example, communications timings) is not preserved. Drive motor (for example, spindle) is stopped. Laser (if any) is off. Power consumption in D3 is no more than 10% of power consumed in D0. <b>Note:</b> For ATA devices, this state is invoked by the “sleep” command.

### A.11.1.2 Floppy Disk Devices

State	Status	Definition
D0	Required	Drive controller (for example, interface and control electronics) is functional. Drive motor (for example, spindle) is turning.
D1	N/A	This state is not defined for floppy disk drives.
D2	N/A	This state is not defined for floppy disk drives.
D3	Required	Drive controller (for example, interface and control electronics) is not functional; context is lost. Drive motor (for example, spindle) is stopped.

### A.11.1.3 IDE Channel Devices

State	Status	Definition
D0	Required	Adapter is functional. Adapter interface mode (for example, communications timings) is programmed. Power is applied to the bus (and all devices connected to it).

D1	N/A	This state is not defined for the IDE Channel.
D2	N/A	This state is not defined for the IDE Channel.
D3	Required	Adapter is non-functional. Adapter interface mode (for example, communications timings) is not preserved. Power to the bus (and all devices connected to it) may be off.

## A.11.2 Power Management Policy

### A.11.2.1 Hard Disk, Floppy Disk, CD-ROM and IDE/ATAPI Removable Storage Devices

Present State	Next State	Cause
D3	D0	Device usage (high-priority I/O).
D0	D1*	Device inactivity (no high-priority I/O) for some period of time (T1).
D0	D3	Device inactivity (no high-priority I/O) for a period of time (T2=>T1). System enters sleeping state.
D1*	D0	Device usage (High-priority I/O).

**Note:** \* If supported.

**Note:** For ATA, the D3-to-D0 transition requires a reset of the IDE channel. This means that both devices on a channel must be placed into D3 at the same time.

### A.11.2.2 IDE Channel Devices

Present State	Next State	Cause
D3	D0	Any device on the channel needing to transition to a state other than state D3.
D0	D3	All devices on the channel in state D3.

## A.11.3 Wake Events

Storage devices with removable media can, optionally, signal wake upon insertion of media using their bus-specific notification mechanism. There are no other wake events defined for Storage devices.

## A.11.4 Minimum Power Capabilities

A hard disk, CD-ROM or IDE/ATAPI removable storage device conforming to this specification must support the D0 and D3 states. Support for the D1 state is optional.

A floppy disk and IDE channel device conforming to this specification must support the D0 and D3 states.

# Appendix B: Video Extensions

---

## B.1 ACPI Extensions for Display Adapters: Introduction

This section of the document describes a number of specialized ACPI methods to support motherboard graphics devices.

In many cases, system manufacturers need to add special support to handle multiple output devices such as panels and TV-out capabilities, as well as special power management features. This is particularly true for notebook manufacturers. The methods described here have been designed to enable interaction between the platform firmware, video driver, and OS to smoothly support these features.

Systems containing a built-in display adapter are required to implement the ACPI Extensions for Display Adapters.

**Table B-1 Video Extension Object Requirements**

Method	Description	Requirement
_DOS	Enable/Disable output switching	Required if system supports display switching or LCD brightness levels
_DOD	Enumerate all devices attached to display adapter	Required if integrated controller supports output switching
_ROM	Get ROM Data	Required if ROM image is stored in proprietary format
_GPD	Get POST Device	Required if _VPO is implemented
_SPD	Set POST Device	Required if _VPO is implemented
_VPO	Video POST Options	Required if system supports changing post VGA device
_ADR	Return the unique ID for this device	Required
_BCL	Query list of brightness control levels supported	Required if embedded LCD supports brightness control
_BCM	Set the brightness level	Required if _BCL is implemented
_DDC	Return the EDID for this device	Required if embedded LCD does not support return of EDID via standard interface
_DCS	Return status of output device	Required if the system supports display switching (via hotkey)
_DGS	Query graphics state	Required if the system supports display switching (via hotkey)
_DSS	Device state set	Required if the system supports display switching (via hotkey).

## B.2 Definitions

- **Built-in display adapter.** This is a graphics chip that is built into the motherboard and cannot be replaced. ACPI information is valid for such built-in devices.
- 
- **Add-in display adapter.** This is a graphics chip or board that can be added to or removed from the computer. Because the platform firmware cannot have specific knowledge of add-in boards, ACPI information is not available for add-in devices.
- 
- **Boot-up display adapter.** This is the display adapter programmed by the platform boot firmware during machine power-on self-test (POST). It is the device upon which the machine will show the initial operating system boot screen, as well as any platform boot firmware messages.
- The system can change the boot-up display adapter, and it can switch between the built-in adapter and the add-in adapter.
- **Display device.** This is a synonym for the term display adapter discussed above.
- **Output device.** This is a device, which is a recipient of the output of a display device. For example, a CRT or a TV is an output device.

## B.3 ACPI Namespace

This is an example of the display-related namespace on an ACPI system:

```

GPE           // ACPI General -purpose HW event
    _L0x      // Notify(VGA, 0x80) to tell OSPM of the event, when user
presses
// the hot key to switch the output status of the monitor.
// Notify(VGA, 0x81) to tell the event to OSPM, when there are any
// changes on the sub-devices for the VGA controller

SB
|- PCI
  |- VGA          // Define the VGA controller in the namespace
    |- _PS0 / PRO
    |- _PS1 / PR1
    |- _PS3
    |- _DOS         // Method to control display output switching
    |- _DOD         // Method to retrieve information about child output devices
    |- _ROM         // Method to retrieve the ROM image for this device
    |- _GPD         // Method for determining which VGA device will post
    |- _SPD         // Method for controlling which VGA device will post
    |- _VPO         // Method for determining the post options
    |- CRT          // Child device CRT
      |- _ADR        // Hardware ID for this device
      |- _DDC        // Get EDID information from the monitor device
      |- _DCS        // Get current hardware status
      |- _DGS        // Query desired hardware active \ inactive state
      |- _DSS        // Set hardware active \ inactive state
      |- _PS0  \

```

```

    | - _PS1      - Power methods
    | - _PS2      - for the output device
    | - _PS3      /
|- LCD          // Child device LCD
    | - _ADR      // Hardware ID for this device
    | - _DDC      // Get EDID information from the monitor device
    | - _DCS      // Get current hardware status
    | - _DGS      // Query desired hardware active \ inactive state
    | - _DSS      // Set hardware active \ inactive state
    | - _BCL      // Brightness control levels
    | - _BCM      // Brightness control method
    | - _BQC      // Brightness Query Current Level
    | - _PS0      \
    | - _PS1      - Power methods
    | - _PS2      - for the output device
    | - _PS3      /
|- TV           // Child Device TV
    | - _ADR      // Hardware ID for this device
    | - _DDC      // Get EDID information from the monitor device
    | - _DCS      // Get current hardware status
    | - _DGS      // Query desired hardware active \ inactive state
    | - _DSS      // Set hardware active \ inactive state

```

The LCD device represents the built-in output device. Mobile PCs will always have a built-in LCD display, but desktop systems that have a built-in graphics adapter generally don't have a built-in output device.

## B.4 Display-specific Methods

The methods described in this section are all associated with specific display devices. This device-specific association is represented in the namespace example in the previous section by the positioning of these methods in a device tree.

### B.4.1 \_DOS (Enable/Disable Output Switching)

Many ACPI machines currently reprogram the active display output automatically when the user presses the display toggle switch on the keyboard. This is done because most video device drivers are currently not capable of being notified synchronously of such state changes. However, this behavior violates the ACPI specification, because the system modifies some graphics device registers.

The existence of the \_DOS method indicates that the platform runtime firmware is capable of automatically switching the active display output or controlling the brightness of the LCD. If it exists at all, the \_DOS method must be present for all display output devices. This method is required if the system supports display switching or LCD brightness control.

#### Arguments: (1)

Arg0 – An **Integer** containing the encoded switching controls (see below)

#### Return Value:

None

## Additional Argument Information:

Bits [1:0]

- 0 – The platform runtime firmware should not automatically switch (toggle) the active display output, but instead just save the desired state change for the display output devices in variables associated with each display output, and generate the display switch event. OSPM can query these state changes by calling the \_DGS method.
- 1 – The platform runtime firmware should automatically switch (toggle) the active display output, with no interaction required on the OS part. The display switch event should not be generated in this case.
- 2 – The \_DGS values should be locked. It's highly recommended that the platform runtime firmware do nothing when hotkey pressed. No switch, no notification.
- 3 – The platform runtime firmware should not automatically switch (toggle) the active display output, but instead generate the display switch event notify codes 0x82, 0x83, or 0x84. OSPM will determine what display output state should be set, and change the display output state without further involvement from the platform runtime firmware.

Bit [2]

- 0 – The platform runtime firmware should automatically control the brightness level of the LCD when the power changes from AC to DC.
- 1 – The platform runtime firmware should not automatically control the brightness level of the LCD when the power changes from AC to DC.

The \_DOS method controls this automatic switching behavior. This method should do so by saving the parameter passed to this method in a global variable somewhere in the platform runtime firmware data segment. The platform runtime firmware then checks the value of this variable when doing display switching. This method is also used to control the generation of the display switching **Notify(VGA, 0x80/0x81)**.

The platform runtime firmware, when doing switching of the active display, must verify the state of the variable set by the \_DOS method. The default value of this variable must be 1.

### B.4.2 \_DOD (Enumerate All Devices Attached to the Display Adapter)

This method is used to enumerate devices attached to the display adapter. This method is required if integrated controller supports output switching.

On many laptops today, a number of devices can be connected to the graphics adapter in the machine. These devices are on the motherboard and generally are not directly enumerable by the video driver; for this reason, all motherboard VGA attached devices are listed in the ACPI namespace.

These devices fall into two categories:

- **Video output devices.** For example, a machine with a single display device on the motherboard can have three possible output devices attached to it, such as a TV, a CRT, or a panel.
- **Non-video output devices.** For example, TV Tuner, DVD decoder, Video Capture. They just attach to VGA and their power management closely relates to VGA.

Both ACPI and the video driver have the ability to program and configure output devices. This means that both ACPI and the video driver must enumerate the devices using the same IDs. To solve this problem, the \_DOD method returns a list of devices attached to the graphics adapter, along with device-specific

configuration information. This information will allow the cooperation between ACPI components and the video driver.

Every child device enumerated in the ACPI namespace under the graphics adapter must be specified in this list of devices. Each display device must have its own ID, which is unique with respect to any other attachable devices enumerated.

**Arguments:**

None

**Return Value:**

A **Package** containing a variable-length list of **Integers**, each of which contains the 32-bit device attribute of a child device (See [Table B-2](#))


**Example:**

```
Method (_DOD, 0) {
    Return (
        Package()
    {
        0x00000110, // Primary LCD panel, not detectable by firmware
        0x80000100, // CRT type display, not detectable by firmware
        0x80000220, // TV type display, not detectable by the firmware
        0x80000411, // Secondary LCD panel, not detectable by firmware
    }
)
}
```

**Table B-2 Video Output Device Attributes**

<b>Bits</b>	<b>Definition</b>								
15:0	<p><b>Device ID.</b> The device ID must match the ID's specified by Video Chip Vendors. They must also be unique under VGA namespace.</p> <table> <tr> <td>Bit [3:0]</td><td><b>Display Index</b> A zero-based instance of the Display, when multiple displays of the same type are attached, regardless of where it is associated. Starting from the first adapter and its first display of the type on the first integrated internal device and then incrementing per device-function according to its relative port number.</td></tr> <tr> <td>Bit [7:4]</td><td><b>Display Port Attachment</b> This field differentiates displays of the same type attached at different points of one adapter. The zero-based number scheme is specific to each Video Chip Vendors' implementation.</td></tr> <tr> <td>Bit [11:8]</td><td><b>Display Type</b> Describes the specific type of Display Technology in use. 0 – Other 1 – VGA* CRT or VESA* Compatible Analog Monitor 2 – TV/HDTV or other Analog-Video Monitor 3 – External Digital Monitor (See Note 1.) 4 – Internal/Integrated Digital Flat Panel (See Note 2.) 5~15 – Reserved for future use</td></tr> <tr> <td>Bit [15:12]</td><td>Chipset Vendor Specific.</td></tr> </table>	Bit [3:0]	<b>Display Index</b> A zero-based instance of the Display, when multiple displays of the same type are attached, regardless of where it is associated. Starting from the first adapter and its first display of the type on the first integrated internal device and then incrementing per device-function according to its relative port number.	Bit [7:4]	<b>Display Port Attachment</b> This field differentiates displays of the same type attached at different points of one adapter. The zero-based number scheme is specific to each Video Chip Vendors' implementation.	Bit [11:8]	<b>Display Type</b> Describes the specific type of Display Technology in use. 0 – Other 1 – VGA* CRT or VESA* Compatible Analog Monitor 2 – TV/HDTV or other Analog-Video Monitor 3 – External Digital Monitor (See Note 1.) 4 – Internal/Integrated Digital Flat Panel (See Note 2.) 5~15 – Reserved for future use	Bit [15:12]	Chipset Vendor Specific.
Bit [3:0]	<b>Display Index</b> A zero-based instance of the Display, when multiple displays of the same type are attached, regardless of where it is associated. Starting from the first adapter and its first display of the type on the first integrated internal device and then incrementing per device-function according to its relative port number.								
Bit [7:4]	<b>Display Port Attachment</b> This field differentiates displays of the same type attached at different points of one adapter. The zero-based number scheme is specific to each Video Chip Vendors' implementation.								
Bit [11:8]	<b>Display Type</b> Describes the specific type of Display Technology in use. 0 – Other 1 – VGA* CRT or VESA* Compatible Analog Monitor 2 – TV/HDTV or other Analog-Video Monitor 3 – External Digital Monitor (See Note 1.) 4 – Internal/Integrated Digital Flat Panel (See Note 2.) 5~15 – Reserved for future use								
Bit [15:12]	Chipset Vendor Specific.								
16	Platform boot firmware can detect the device.								
17	Non-VGA output device whose power is related to the VGA device. This can be used when specifying devices like TV Tuner, DVD decoder, Video Capture ... etc.								
20:18	For VGA multiple-head devices, this specifies head or pipe ID e.g. for Dual-Pipe*, Dual-Display*, Duo-View*, TwinView*, Triple-View* ... etc, beginning with 0 for head 0 or single-head device and increasing for each additional head.								
30:21	<i>Reserved (must be 0)</i>								
31	<b>Device ID Scheme</b> 1 – Uses the bit-field definitions above (bits 15:0) 0 – Other scheme, contact the Video Chip Vendor								

As mentioned in the above table, a “Pipe” or “Head” refers to a unique display content stream e.g. at a particular color-depth, resolution, and refresh-rate. The “Port” refers to the display output device attachment and may include a DAC, encoder or other mechanism required to support a given display end-point. The “Display Type” describes the generalized class of display output technology, and the means of integration. The “Display Index” is then an index that assists in creating a unique identifier display end-points in scenarios where other attributes are the same.

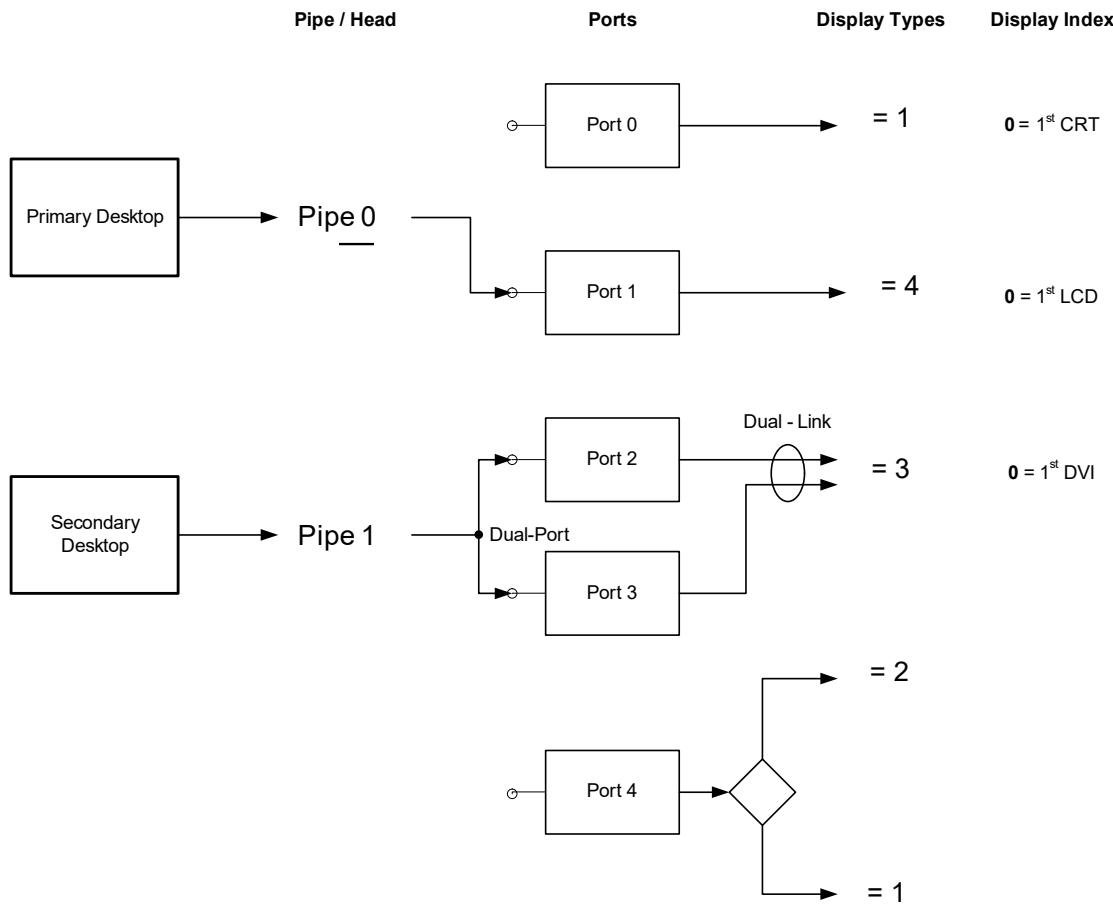**Figure B-1 Example Display Architecture****Table B-3 Example Device Ids**

Bits	Definition
0x000xxxxx	Bit [31] = 0. Other proprietary scheme - 0x110 Device ID is an exception. (See Note 3)
0x000000110	Integrated LCD Panel #1 using a common, backwards compatible ID
0x800000100	Integrated VGA CRT or VESA compatible Monitor #1 on Port0
0x800000240	Integrated TV #1 on Port4
0x800000410	Integrated Internal LCD Panel #1 on Port1
0x800000421	LVDS Panel #2 Dual-Link using Port2 & 3. (See Note 4)
0x800000131	VGA CRT or VESA compatible Monitor #2 on Port3
0x800000121	Dual-Link VGA CRT or VESA compatible Monitor #2 using Port2 & 3. (See Note 4.)
0x800000320	DVI Monitor #1 on Port2 (shares Port2 with a Dual-Function DVI/TV Encoder). (See Note 5)
0x800000331	DVI Monitor #2 on Port3

Bits	Definition
0x80000330	Dual-Link DVI Monitor #1 using Port2 & 3
0x80000231	TV #2 on Port2 (shares Port2 with a Dual-Function DVI/TV Encoder). (See Note 5)

- Note:** An “External Digital Monitor” is an external display device attachable via a user-accessible connector standard (e.g. DFP\* or DVI\* Compatible Monitors).
- Note:** An “Internal Flat Panel” is a non-detachable fixed pixel display device, including a backlight, and is internally associated, without user-accessible connectors, to the Video Chip (e.g. TFT LCD via TMDS\*, LVDS\* interface).
- Note:** When Bit [31] is 0, no assumptions can be made on which ID will be used for any particular display type. Contact the Video Chip vendor for details of the ID scheme employed.
- Note:** In certain cases multiple Displays Ports may be combined to increase bandwidth for a particular Display in higher-resolution modes. In this situation, the Display Type and Port Number should remain the same in order to retain a consistent ID for the same device, regardless of the selected display mode.
- Note:** In certain cases, more than one type of display (and connector) may be supportable on a single Port (e.g. DVI + TV + CRT on a single Display Encoder device), while only one display is selectable at any time. In this case the Port Number field of the ID may be the same as other Display ID's however the other fields (e.g. Display Type) provide uniqueness.

### B.4.3 \_ROM (Get ROM Data)

This method is used to get a copy of the display devices’ ROM data. This method is required when the ROM image is stored in a proprietary format such as stored in the platform firmware ROM. This method is not necessary if the ROM image can be read through a standard PCI interface (using ROM BAR). If \_ROM is present, it is preferred over the image read through the standard PCI interface, in order to allow platform runtime firmware to provide re-configured ROM data via the method.

The video driver can use the data returned by this method to program the device. The format of the data returned by this function is a large linear buffer limited to 4 KB. The content of the buffer is defined by the graphics independent hardware vendor (IHV) that builds this device. The format of this ROM data will traditionally be compatible with the ROM format of the normal PCI video card, which will allow the video driver to program its device, independently of motherboard versus add-in card issues.

The data returned by the \_ROM method is implementation-specific data that the video driver needs to program the device. This method is defined to provide this data as motherboard devices typically don’t have a dedicated option ROM. This method will allow a video driver to get the key implementation specific data it needs so that it can fully control and program the device without platform runtime firmware support.

#### Arguments: (2)

Arg0 – An **Integer** containing the offset of the display device ROM data

Arg1 – An **Integer** containing the size of the buffer to fill in (up to 4K).

#### Return Value:

A **Buffer** containing the requested ROM data

## B.4.4 \_GPD (Get POST Device)

This method is required if the \_VPO method is implemented.

This method is used as a mechanism for the OS to query a CMOS value that determines which VGA device will be posted at boot. A zero return value indicates the motherboard VGA will be posted on the next boot, a 1 indicates a PCI VGA device will be posted, and a 2 indicates an AGP VGA device will be posted.

### Arguments:

None

### Return Value:

An **Integer** containing encoded post information (32 bits valid)

Bits [1:0]

- 00 – Post the motherboard VGA device
  - 01 – Post an add-in PCI VGA device
  - 10 – Post an add-in AGP VGA device
  - 11 – Post an add-in PCI-Express VGA device
- Bits [31:2] – Reserved (must be 0)

## B.4.5 \_SPD (Set POST Device)

This method is required if the \_VPO method is implemented.

This method is used as a mechanism for the OS to update a CMOS value that determines which video device will be posted at boot. A zero argument will cause the “motherboard” to be posted on the next boot, a 1 will cause an add-in PCI device to be posted, and a 2 will cause an add-in AGP device to be posted.

### Arguments: (1)

Arg0 – An **Integer** containing encode post information (32 bits valid)

Bits [1:0]

- 00 – Post the motherboard VGA device
  - 01 – Post an add-in PCI VGA device
  - 10 – Post an add-in AGP VGA device
  - 11 – Post an add-in PCI-Express VGA device
- Bits [31:2] – Reserved (must be 0)

### Return Value:

An **Integer** containing the status of the operation

0 – Operation was successful

Non-zero –Operation failed

## Example

```
Method (_SPD, 1){ // Make the motherboard device the device to post }
```

### B.4.6 \_VPO (Video POST Options)

This method is required for systems with video devices built onto the motherboard and support changing post-VGA device.

This method is used as a mechanism for the OS to determine what options are implemented. This method will be used in conjunction with \_GPD and \_SPD

#### Arguments:

None

#### Return Value:

An **Integer** containing the options that are implemented and available

- Bit [0] – Posting the motherboard VGA device is an option. (Bit [0] should always be set)
- Bit [1] – Posting a PCI VGA device is an option.
- Bit [2] – Posting an AGP VGA device is an option.
- Bit [3] – Posting a PCI-Express VGA device is an option.
- Bits [31:4] – Reserved (must be zero)

## B.5 Notifications for Display Devices

Display devices may need to know about external, asynchronous events. In order to accommodate that, the following notifications are defined.

The event number is standardized because the event will be handled by the OS directly under certain circumstances (see \_DOS method in this specification).

These notifications are valid for Display Devices

**Table B-4     Notifications for Display Devices.**

Value	Description
0x80	<b>Cycle Output Device.</b> Used to notify OSPM whenever the state of one of the output devices attached to the VGA controller has been switched or toggled. This event will, for example, be generated when the user presses a hotkey to switch the active display output from the LCD panel to the CRT.
0x81	<b>Output Device Status Change.</b> Used to notify OSPM whenever the state of any output devices attached to the VGA controller has been changed. This event will, for example, be generated when the user plugs-in or remove a CRT from the VGA port. In this case, OSPM will re-enumerate all devices attached to VGA
0x82	<b>Cycle Display Output Hotkey Pressed.</b> Used to notify OSPM whenever the user has pressed the Cycle display hotkey.

Value	Description
0x83	<b>Next Display Output Hotkey Pressed.</b> Used to notify OSPM whenever the user has pressed the Next display hotkey.
0x84	<b>Previous Display Output Hotkey Pressed.</b> Used to notify OSPM whenever the user has pressed the Previous display hotkey.

## B.6 Output Device-specific Methods

The methods in this section are methods associated with the display output device.

### B.6.1 \_ADR (Return the Unique ID for this Device)

This method returns a unique ID representing the display output device. All output devices must have a unique hardware ID. This method is required for all. The IDs returned by this method will appear in the list of hardware IDs returned by the \_DOD method.

#### Arguments:

None

#### Return Value:

An Integer containing the device ID (32 bits)

#### Example:

```
Method (_ADR, 0) {
    return(0x0100) // device ID for this CRT
}
```

This method is required for all output display devices.

### B.6.2 \_BCL (Query List of Brightness Control Levels Supported)

This method allows the OS to query a list of brightness level supported by built-in display output devices. (This method is not allowed for externally connected displays.) This method is required if an integrated LCD is present and supports brightness levels.

Each brightness level is represented by a number between 0 and 100, and can be thought of as a percentage. For example, 50 can be 50% power consumption or 50% brightness, as defined by the OEM.

The OEM may define the number 0 as "Zero brightness" that can mean to turn off the lighting (e.g. LCD panel backlight) in the device. This may be useful in the case of an output device that can still be viewed using only ambient light, for example, a transreflective LCD. If Notify(Output Device, 0x85) for "Zero brightness" is issued, OSPM may be able to turn off the lighting by calling \_BCM(0).

#### Arguments:

None

**Return Value:**

A variable-length **Package** containing a list of **Integers** representing the supported brightness levels. Each integer has 8 bits of significant data.

**Example:**

```
Method (_BCL, 0) {
    // List of supported brightness levels
    Return (Package(7){
        80,          // Level when machine has full power
        50,          // Level when machine is on batteries
        // other supported levels:
        20, 40, 60, 80, 100}
    }
}
```

The first number in the package is the level of the panel when full power is connected to the machine. The second number in the package is the level of the panel when the machine is on batteries. All other numbers are treated as a list of levels OSPM will cycle through when the user toggles (via a keystroke) the brightness level of the display.

These levels will be set using the `_BCM` method described in the following section.

**B.6.3 \_BCM (Set the Brightness Level)**

This method allows OSPM to set the brightness level of a built-in display output device.

The OS will only set levels that were reported via the `_BCL` method. This method is required if `_BCL` is implemented.

**Arguments: (1)**

Arg0 – An **Integer** containing the new brightness level

**Return Value:**

None

**Example:**

```
Method (_BCM, 1) { // Set the requested level }
```

The method will be called in response to a power source change or at the specific request of the end user, for example, when the user presses a function key that represents brightness control.

**B.6.4 \_BQC (Brightness Query Current level)**

This optional method returns the current brightness level of a built-in display output device. If present, it must be set by the platform for initial brightness.

**Arguments:**

None

**Return Value:**

An **Integer** containing the current brightness level (must be one of the values returned from the \_BCL method)

**B.6.5 \_DDC (Return the EDID for this Device)**

This method returns an EDID (Extended Display Identification Data) structure that represents the display output device. This method is required for integrated LCDs that do not have another standard mechanism for returning EDID data.

**Arguments:**

Arg0 – An **Integer** containing a code for the return data length:

- 1 – Return 128 bytes of data
- 2 – Return 256 bytes of data

**Return Value:**

Either a **Buffer** containing the requested data (of the length specified in Arg0), or an **Integer** (value 0) if Arg0 was invalid

**Example:**

```
Method (_DDC, 2) {
    If (LEqual (Arg0, 1)) { Return (Buffer(128){ .... }) }
    If (LEqual (Arg0, 2)) { Return (Buffer(256){ .... }) }
    Return (0)
}
```

The buffer will later be interpreted as an EDID data block. The format of this data is defined by the VESA EDID specification.

**B.6.6 \_DCS (Return the Status of Output Device)**

This method is required if hotkey display switching is supported.

**Arguments:**

None

**Return Value:**

An **Integer** containing the device status (32 bits) (See [Table B-5](#))

**Table B-5     Device Status**

Bits	Definition
0	Output connector exists in the system now
1	Output is activated
2	Output is ready to switch

Bits	Definition
3	Output is not defective (it is functioning properly)
4	Device is attached (this is optional)
31:5	<i>Reserved</i> (must be zero)

**Example:**

- If the output signal is activated by \_DSS, \_DCS returns 0x1F or 0x0F.
- If the output signal is inactivated by \_DSS, \_DCS returns 0x1D or 0x0D.
- If the device is not attached or cannot be detected, \_DCS returns 0x0xxxx and should return 0x1xxxx if it is attached.
- If the output signal cannot be activated, \_DCS returns 0x1B or 0x0B.
- If the output connector does not exist (when undocked), \_DCS returns 0x00.

**B.6.7 \_DGS (Query Graphics State)**

This method is used to query the state (active or inactive) of the output device. This method is required if hotkey display switching is supported.

**Arguments:**

None

**Return Value:**

An **Integer** containing the device state (32 bits) (See [Table B-6](#))

**Table B-6 Device State for \_DGS**

Bits	Definition
0	0 – Next desired state is inactive 1 – Next desired state is active
31:1	<i>Reserved</i> (must be zero)

The desired state represents what the user wants to activate or deactivate, based on the special function keys the user pressed. OSPM will query the desired state when it receives the display toggle event (described earlier).

**B.6.8 \_DSS (Device Set State)**

OSPM will call this method when it determines the outputs can be activated or deactivated. OSPM will manage this to avoid flickering as much as possible. This method is required if hotkey display switching is supported.

**Arguments: (1)**

Arg0 – An **Integer** containing the new device state (32 bits) (See [Table B-7](#))

**Return Value:**

None

**Table B-7 Device State for \_DSS**

Bits	Definition
0	0 – Set output device to inactive state 1 – Set output device to active state
30	0 – Do whatever Bit [31] requires 1 – Don't do actual switching, but need to change _DGS to next state
31	0 – Don't do actual switching, just cache the change 1 – If Bit [30] = 0, commit actual switching, including any _DSS with MSB=0 called before If Bit [30] = 1, don't do actual switching, change _DGS to next state
29:1	<i>Reserved</i> (must be zero)

**Example Usage:**

OS may call in such an order to turn off CRT, and turn on LCD

```
CRT._DSS(0);
LCD._DSS(80000001L);
```

or

```
LCD._DSS(1);
CRT._DSS(80000000L);
```

OS may call in such an order to force platform runtime firmware to make \_DGS jump to next state without actual CRT, LCD switching

```
CRT._DSS(40000000L);
LCD._DSS(C0000001L);
```

## B.7 Notifications Specific to Output Devices

Output devices may need to know about external, asynchronous events. In order, each of these events corresponds to accommodate that, pressing a key or button on the following machine. Using these notifications is not appropriate if no physical device exists that is associated with them. OSPM may ignore any of these notifications if, for example the current user does not have permission to change the state of the output device.

These notifications are only valid for Output Devices.

**Table B-8 Notification Values for Output Devices**

Value	Description
0x85	<b>Cycle Brightness.</b> Used to notify OSPM that the output device brightness should be increased by one level. Used to notify OSPM that the user pressed a button or key that is associated with cycling brightness. A useful response by OSPM would be to increase output device brightness by one or more levels. (Levels are defined in _BCL.) If the brightness level is currently at the maximum value, it should be set to the minimum level.

Value	Description
0x86	<b>Increase Brightness.</b> Used to notify OSPM that the output device brightness should be increased by one or more levels as defined by the _BCL object. Used to notify OSPM that the user pressed a button or key that is associated with increasing brightness. If the brightness level is currently at the maximum value, OSPM may ignore the notification.
0x87	<b>Decrease Brightness.</b> Used to notify OSPM that the output device brightness should be decreased by one or more levels as defined by the _BCL object. Used to notify OSPM that the user pressed a button or key that is associated with decreasing device brightness. If the brightness level is currently at the minimum value, OSPM may ignore the notification.
0x88	<b>Zero Brightness.</b> Used to notify OSPM that the output device brightness should be zeroed, effectively turning off any lighting that is associated with the device. Used to notify OSPM that the user pressed a button or key associated with zeroing device brightness. This is not to be confused with putting the device in a D3 state. While the brightness may be decreased to zero, the device may still be displaying, using only ambient light.
0x89	<b>Display Device Off.</b> Used to notify OSPM that the device should be put in an off state, one that is not active or visible to the user, usually D3, but possibly D1 or D2. Used to notify OSPM that the user pressed a low power button or key associated with putting the device in an off state. There is no need for a corresponding “device on” notification, for two reasons. First, OSPM may choose to toggle device state when this event is pressed multiple times. Second, OSPM may (and probably will) choose to turn the monitor on whenever the user types on the keyboard, moves the mouse, or otherwise indicates that he or she is attempting to interact with the machine.

## B.8 Notes on State Changes

It is possible to have any number of simultaneous active output devices. It is possible to have 0, 1, 2 ... and so on active output devices. For example, it is possible for both the LCD device and the CRT device to be active simultaneously. It is also possible for all display outputs devices to be inactive (this could happen in a system where multiple graphics cards are present).

The state of the output device is separate from the power state of the device. The “active” state represents whether the image being generated by the graphics adapter would be sent to this particular output device. A device can be powered off or in a low-power mode but still be the active output device. A device can also be in an off state but still be powered on.

Example of the display-switching mechanism:

The laptop has three output devices on the VGA adapter. At this moment in time, the panel and the TV are both active, while the CRT is inactive. The automatic display-switching capability has been disabled by OSPM by calling \_DOS(0), represented by global variable display\_switching = 0.

The platform runtime firmware, in order to track the state of these devices, will have three global variable to track the state of these devices. There are currently initialized to:

```
crt_active - 0
panel_active - 1
tv_active - 1
```

The user now presses the display toggle switch, which would switch the TV output to the CRT.

The platform runtime firmware first updates three temporary variables representing the desired state of output devices:

```
want_crt_active = 1  
want_panel_active = 1  
want_tv_active = 0
```

Then the platform runtime firmware checks the display\_switching variable. Because this variable is set to zero, the platform runtime firmware does not do any device reprogramming, but instead generates a **Notify(VGA, 0x80/0x81)** event for the display. This event will be sent to OSPM.

OSPM will call the \_DGS method for each enumerated output device to determine which devices should now be active. OSPM will determine whether this is possible, and will reconfigure the internal data structure of the OS to represent this state change. The graphics modes will be recomputed and reset.

Finally, OSPM will call the \_DSS method for each output device it has reconfigured.

**Note:** *OSPM may not have called the \_DSS routines with the same values and the \_DGS routines returned, because the user may be overriding the default behavior of the hardware-switching driver or operating system-provided UI. The data returned by the \_DGS method (the want\_XXX values) are only a hint to the OS as to what should happen with the output devices.*

If the display-switching variable is set to 1, then the platform runtime firmware would not send the event, but instead would automatically reprogram the devices to switch outputs. Any legacy display notification mechanism could also be performed at this time.

# Appendix C: Deprecated Content

---

## C.1 Description

This section will display content (if any) that are planned to be deprecated from the ACPI specification. The deprecation is highlighted in this appendix because the main specification contents haven't been changed.

The deprecation items listed in this appendix serve as a warning that in the next released revision of the specification, the corresponding contents will be removed from the main portion of the specification.

## C.2 Deprecated Content

Device Identification Objects ([Table 6-189](#)):

Object	Description
_PRD	Object that evaluates to a package of device property subpackages.

---

### 19.6.146 Unload (Unload Definition Block)

#### Syntax

Unload (Handle)

#### Arguments

Handle is evaluated as a DDBHandle data type.

#### Description

Performs a run-time unload of a Definition Block that was loaded using a Load term or LoadTable term. Loading or unloading a Definition Block is a synchronous operation, and no control method execution occurs during the function. On completion of the Unload operation, the Definition Block has been unloaded (all the namespace objects created as a result of the corresponding Load operation will be removed from the namespace).

---

### 6.2.11.3 OSC Implementation Example for PCI Host Bridge Devices

The following section is an excerpt from the PCI Firmware Specification Revision 3.0 and is reproduced with the permission of the PCI SIG.

**Note:** *The PCI SIG owns the definition of \_OSC behavior and parameter bit definitions for PCI devices. In the event of a discrepancy between the following example and the PCI Firmware Specification, the latter has precedence.*

The \_OSC interface defined in this section applies only to "Host Bridge" ACPI devices that originate PCI, PCI-X or PCI Express hierarchies. These ACPI devices must have a \_HID of (or \_CID including either

EISAID("PNP0A03") or EISAID("PNP0A08"). For a host bridge device that originates a PCI Express hierarchy, the \_OSC interface defined in this section is required. For a host bridge device that originates a PCI/PCI-X bus hierarchy, inclusion of an \_OSC object is optional.

- The \_OSC interface for a PCI/PCI-X/PCI Express hierarchy is identified by the following UUID:  
33DB4D5B-1FF7-401C-9657-7441C03DD766

A revision ID of 1 encompasses fields defined in this section of this revision of this specification, comprised of 3 DWORDs, including the first DWORD described by the generic ACPI definition of \_OSC.

The first DWORD in the \_OSC Capabilities Buffer contain bits are generic to \_OSC and include status and error information.

The second DWORD in the \_OSC capabilities buffer is the Support Field. Bits defined in the Support Field provide information regarding OS supported features. Contents in the Support Field are passed one-way; the OS will disregard any changes to this field when returned. See [Table 6-196](#) for descriptions of capabilities bits in this field passed as a parameter into the \_OSC control method.

The third DWORD in the \_OSC Capabilities Buffer is the Control Field. Bits defined in the Control Field are used to submit request by the OS for control/handling of the associated feature, typically (but not excluded to) those features that utilize native interrupts or events handled by an OS-level driver. See [Table 6-200](#) for descriptions of capabilities bits in this field passed as a parameter into the \_OSC control method. If any bits in the Control Field are returned cleared (masked to zero) by the \_OSC control method, the respective feature is designated unsupported by the platform and must not be enabled by the OS. Some of these features may be controlled by platform firmware prior to OS boot or during runtime for a legacy OS, while others may be disabled/inoperative until native OS support is available. See the following table for descriptions of capabilities bits in this returned field.

If the \_OSC control method is absent from the scope of a host bridge device, then the OS must not enable or attempt to use any features defined in this section for the hierarchy originated by the host bridge. Doing so could contend with platform firmware operations, or produce undesired results. It is recommended that a machine with multiple host bridge devices should report the same capabilities for all host bridges, and also negotiate control of the features described in the Control Field in the same way for all host bridges.

**Table: Interpretation of \_OSC Support Field**

Support Field bit offset	Interpretation
0	Extended PCI Config operation regions supported The OS sets this bit to 1 if it supports ASL accesses through PCI Config operation regions to extended configuration space (offsets greater than 0xFF). Otherwise, the OS sets this bit to 0.
1	Active State Power Management supported The OS sets this bit to 1 if it natively supports configuration of Active State Power Management registers in PCI Express devices. Otherwise, the OS sets this bit to 0.

Support Field bit offset	Interpretation
2	<p>Clock Power Management Capability supported</p> <p>The OS sets this bit to 1 if it supports the Clock Power Management Capability, and will enable this feature during a native hot plug insertion event if supported by the newly added device. Otherwise, the OS sets this bit to 0.</p> <p>Note: The Clock Power Management Capability is defined in an errata to the PCI Express Base Specification, 1.0.</p>
3	<p>PCI Segment Groups supported</p> <p>The OS sets this bit to 1 if it supports PCI Segment Groups as defined by the _SEG object, and access to the configuration space of devices in PCI Segment Groups as described by this specification. Otherwise, the OS sets this bit to 0.</p>
4	<p>MSI supported</p> <p>The OS sets this bit to 1 if it supports configuration of devices to generate message-signaled interrupts, either through the MSI Capability or the MSI-X Capability. Otherwise, the OS sets this bit to 0.</p>
5-31	<i>Reserved</i>

Table: Interpretation of \_OSC Control Field, Passed in via Arg3

Control Field bit offset	Interpretation
0	<p>PCI Express Native Hot Plug control</p> <p>The OS sets this bit to 1 to request control over PCI Express native hot plug. If the OS successfully receives control of this feature, it must track and update the status of hot plug slots and handle hot plug events as described in the PCI Express Base Specification.</p>
1	<p>SHPC Native Hot Plug control</p> <p>The OS sets this bit to 1 to request control over PCI/PCI-X Standard Hot-Plug Controller (SHPC) hot plug. If the OS successfully receives control of this feature, it must track and update the status of hot plug slots and handle hot plug events as described in the SHPC Specification.</p>
2	<p>PCI Express Native Power Management Events control</p> <p>The OS sets this bit to 1 to request control over PCI Express native power management event interrupts (PMEs). If the OS successfully receives control of this feature, it must handle power management events as described in the PCI Express Base Specification.</p>
3	<p>PCI Express Advanced Error Reporting (AER) control</p> <p>The OS sets this bit to 1 to request control over PCI Express AER. If the OS successfully receives control of this feature, it must handle error reporting through the AER Capability as described in the PCI Express Base Specification.</p>

Control Field bit offset	Interpretation
4	<p>PCI Express Capability Structure control</p> <p>The OS sets this bit to 1 to request control over the PCI Express Capability Structures (standard and extended) defined in the PCI Express Base Specification version 1.1. These capability structures are the PCI Express Capability, the virtual channel extended capability, the power budgeting extended capability, the advanced error reporting extended capability, and the serial number extended capability. If the OS successfully receives control of this feature, it is responsible for configuring the registers in all PCI Express Capabilities in a manner that complies with the PCI Express Base Specification. Additionally, the OS is responsible for saving and restoring all PCI Express Capability register settings across power transitions when register context may have been lost.</p>
5-31	<i>Reserved</i>

**Table: Interpretation of \_OSC Control Field, Returned Value**

Control Field bit offset	Interpretation
0	<p>PCI Express Native Hot Plug control</p> <p>The firmware sets this bit to 1 to grant control over PCI Express native hot plug interrupts. If firmware allows the OS control of this feature, then in the context of the _OSC method it must ensure that all hot plug events are routed to device interrupts as described in the PCI Express Base Specification. Additionally, after control is transferred to the OS, firmware must not update the state of hot plug slots, including the state of the indicators and power controller. If control of this feature was requested and denied or was not requested, firmware returns this bit set to 0.</p>
1	<p>SHPC Native Hot Plug control</p> <p>The firmware sets this bit to 1 to grant control over control over PCI/PCI-X Standard Hot-Plug Controller (SHPC)hot plug. If firmware allows the OS control of this feature, then in the context of the _OSC method it must ensure that all hot plug events are routed to device interrupts as described in the SHPC Specification. Additionally, after control is transferred to the OS, firmware must not update the state of hot plug slots, including the state of the indicators and power controller. If control of this feature was requested and denied or was not requested, firmware returns this bit set to 0.</p>
2	<p>PCI Express Native Power Management Events control</p> <p>The firmware sets this bit to 1 to grant control over control over PCI Express native power management event interrupts (PMEs). If firmware allows the OS control of this feature, then in the context of the _OSC method it must ensure that all PMEs are routed to root port interrupts as described in the PCI Express Base Specification. Additionally, after control is transferred to the OS, firmware must not update the PME Status field in the Root Status register or the PME Interrupt Enable field in the Root Control register. If control of this feature was requested and denied or was not requested, firmware returns this bit set to 0.</p>

Control Field bit offset	Interpretation
3	<p>PCI Express Advanced Error Reporting control</p> <p>The firmware sets this bit to 1 to grant control over PCI Express Advanced Error Reporting. If firmware allows the OS control of this feature, then in the context of the _OSC method it must ensure that error messages are routed to device interrupts as described in the PCI Express Base Specification. Additionally, after control is transferred to the OS, firmware must not modify the Advanced Error Reporting Capability. If control of this feature was requested and denied or was not requested, firmware returns this bit set to 0.</p>
4	<p>PCI Express Capability Structure control</p> <p>The firmware sets this bit to 1 to grant control over the PCI Express Capability. If the firmware does not grant control of this feature, firmware must handle configuration of the PCI Express Capability Structure.</p> <p>If firmware grants the OS control of this feature, any firmware configuration of the PCI Express Capability may be overwritten by an OS configuration, depending on OS policy.</p>
5-31	<i>Reserved</i>

#### 6.2.11.4 ASL Example

A sample \_OSC implementation for a mobile system incorporating a PCI Express hierarchy is shown below:

```

Device(PCIO) // Root PCI bus
{
    Name(_HID, EISAID("PNPOA08")) // PCI Express Root Bridge
    Name(_CID, EISAID("PNPOA03")) // Compatible PCI Root Bridge
    Name(SUPP, 0) // PCI _OSC Support Field value
    Name(CTRL, 0) // PCI _OSC Control Field value

    Method(_OSC, 4)
    {
        // Check for proper UUID
        If(LEqual(Arg0, ToUUID("33DB4D5B-1FF7-401C-9657-7441C03DD766")))
        {
            // Create DWord-addressable fields from the Capabilities Buffer
            CreateDWordField(Arg3, 0, CDW1)
            CreateDWordField(Arg3, 4, CDW2)
            CreateDWordField(Arg3, 8, CDW3)

            // Save Capabilities DWord2 & 3
            Store(CDW2, SUPP)
            Store(CDW3, CTRL)

            // Only allow native hot plug control if OS supports:
            // * ASPM
            // * Clock PM
            // * MSI/MSI-X
            If(LNotEqual(And(SUPP, 0x16), 0x16))
            {
                And(CTRL, 0x1E, CTRL) // Mask bit 0 (and undefined bits)
            }
        }
    }
}

```

```

}

// Always allow native PME, AER (no dependencies)

// Never allow SHPC (no SHPC controller in this system)
And(CTRL, 0x1D, CTRL)

If(LNot(And(CDW1, 1))) // Query flag clear?
{
    // Disable GPEs for features granted native control.
    If(And(CTRL, 0x01)) // Hot plug control granted?
    {
        Store(0, HPCE) // clear the hot plug SCI enable bit
        Store(1, HPCS) // clear the hot plug SCI status bit
    }
    If(And(CTRL, 0x04)) // PME control granted?
    {
        Store(0, PMCE) // clear the PME SCI enable bit
        Store(1, PMCS) // clear the PME SCI status bit
    }
    If(And(CTRL, 0x10)) // OS restoring PCIe cap structure?
    {
        // Set status to not restore PCIe cap structure
        // upon resume from S3
        Store(1, S3CR)
    }
}

If(LNotEqual(Arg1, One))
{
    // Unknown revision
    Or(CDW1, 0x08, CDW1)
}

If(LNotEqual(CDW3, CTRL))
{
    // Capabilities bits were masked
    Or(CDW1, 0x10, CDW1)
}
// Update DWORD3 in the buffer
Store(CTRL, CDW3)
Return(Arg3)
} Else {
    Or(CDW1, 4, CDW1) // Unrecognized UUID
    Return(Arg3)
}
}

// End _OSC
} // End PCIO

```

# Index

## Symbols

\_EJx 409  
??? 164  
??? 164

## A

AC adapter  
    device ID 319  
    power source objects 695  
AC status notification 675  
access, device 771  
AccessAs term 286, 781  
acoustics See noise  
ACPI  
    definition 23  
    device ID 318, 336  
    goals 8  
ACPI Hardware See hardware  
ACPI Machine Language See AML  
ACPI mode  
    entering 825  
    exiting 829  
ACPI Namespace  
    AML encoding 1076  
    control method access 274  
    definition 23  
    display adapters 1119  
    embedded controller device definition 772  
    generic hardware registers 102  
    Modifier Objects encoding, AML 1061  
    naming conventions 265  
    root namespaces 268  
    SMBus host controller objects 777  
ACPI Source Language See ASL  
ACPI System Description tables See tables  
ACPI-compatible hardware See hardware  
Acquire (Acquire a Mutex) 943  
Acquire terms 1002  
active cooling  
    \_ACx object 709, 722  
    control methods 712  
    definition 708  
    engaging 712

preferences 60, 715  
threshold values 715  
active line printer (LPT) ports 51  
Active List (\_ALx) object 723  
Add (Integer Add) 943  
add-in display adapter, definition 1119  
Address (\_ADR) object 343  
address register (SMB\_ADDR) 763  
Address Space Descriptors  
    DWORD resource descriptor format 434  
    Extended 439  
    QWORD resource descriptor format 431, 1026, 1028, 1030  
    resource specific flags 443  
    WORD resource descriptor format 437  
Address Space Resource Descriptors  
    valid combinations 430  
addresses  
    alarm fields 91  
    BARs (Base Address Registers) 275  
    blocking, BIOS 806  
    bus types 344, 348, 355, 401, 402  
    control methods 274  
    decoding 616  
    FACS 142  
    format 113  
    functional fixed hardware 114  
    Generic Address Structure (GAS) 115  
    generic hardware 66, 73  
    I/O (S)APIC 158, 471  
    map samples 810  
    mixed, preventing 158, 471  
    registers 80  
    reset register 100, 101  
    slave 674, 775  
    system description tables 110  
Advanced Configuration and Power Interface See ACPI  
Advanced Programmable Interrupt Controller See APIC  
alarm address register (SMB\_ALRM\_ADDR) 764  
alarm data register (SMB\_ALRM\_DATA) 764  
alarm events 89  
Alias (Declare Name Alias) 944  
allocation, device resources 402  
Ambient Light Sensor devices 319, 320  
AML  
    Arg Objects encoding 1070  
    battery events 680  
    byte values 1070

code event handler 68  
compiling 66  
Control Method Battery 681  
data buffers, SMBus 287, 782  
Data Objects encoding 1060  
Debug Objects encoding 1070  
definition 23  
grammar 1059  
Local Objects encoding 1070  
Name Objects encoding 1059, 1060  
Named Objects encoding 1062  
Namespace encoding 1076  
Namespace Modifier Objects encoding 1061  
notation conventions 1058  
Package Length encoding 1061  
purpose of 66  
sleep button code example 87  
SMBus device access protocols 288, 783  
Term Objects encoding 1061  
Type 1 Opcodes encoding 1065  
Type 2 Opcodes encoding 1066  
And (Integer Bitwise And) 944  
angle brackets  
    AML 1058  
    ASL notation 877  
answering phones  
    modem example 50  
APIC  
    \_MAT (Multiple APIC Table Entry) 385  
    definition 23  
    I/O 28, 154  
    local 28  
    multiple description table (MADT) 29  
    NMI 157  
    Processor Local 153, 183  
    structure types 152  
    support 155  
APM BIOS 40  
appliance PCs 140  
ARB\_DIS 99  
architecture, system description tables 109  
Arg Objects encoding, AML 1070  
arguments, control methods 273  
Argx (Method Argument Data Objects) 944  
arrow symbol  
    ASL notation 877  
ASL

\_FIX usage example 366  
\_HPP example 369  
case sensitivity 916  
CMOS protocols 275  
converting to AML 66  
data and constant terms 880  
data types 921  
definition 24  
Definition Block terms 956  
EC-SMB-HC device code 773  
embedded controller device code 772  
grammar 876  
grammar notation 877  
index with buffers example code 985  
IPMI data buffer code 279  
IPMI devices 277  
lid status code example 106  
macros 920  
modifiers 916  
multiple Smart Battery subsystem code 679  
name and pathname terms 878  
nested packages sample code 984  
object names 916  
objects, declaring 272  
opcode terms 883  
opcodes 883  
operator reference 942  
operator summary 933  
operator summary by type 937  
parameter keyword terms 903  
parameters 923  
Power Resource statements 482  
primary terms 885  
reserved object names 917  
resource template terms 905, 1048  
root and secondary terms 879  
SMBBlock code 292, 294, 295, 786  
SMBBlockProcessCall code 293, 296, 788  
SMBByte code 290, 785  
SMBProcessCall code 293, 787  
SMBQuick code 288, 783  
SMBSendReceive code 289, 784  
SMBus data buffer code 287, 782  
SMBus devices 779  
SMBWord code 291, 785  
storing results 923  
thermal zone examples 739

virtual register code 279, 282, 283, 781  
AT interrupt model 169  
ATA hard disks See storage devices  
audible output See noise  
audio devices, power management 1094, 1095  
aware device drivers 307

## B

BankField (Declare Bank/Data Field) 945  
bar symbol  
    AML notation 1059  
    ASL notation 877  
BARs (Base Address Registers) 275  
Base Bus Number (\_BBN) object 474  
batteries  
    Control Method Batteries 680  
    emergency shutdown 57  
    events 680  
    low-level warnings 56  
    management 54  
    multiple 54  
    remaining capacity 690  
    types supported 48  
batteries See also Smart Batteries  
Battery Charge Time (\_BCT) object 692  
Battery Information (\_BIF) object 682  
Battery Information Extended(\_BIX) object 684  
Battery Maintenance Control (\_BMC) object 694  
Battery Maintenance Data (\_BMD) object 692  
Battery Measurement Averaging Interval (\_BMA) object 687  
Battery Measurement Sampling Time (\_BMS) object 688  
Battery Status (\_BST) object 688  
Battery Time (\_BTM) object 692  
Battery Trip Point (\_BTP) object 691  
bay devices 710  
BIOS  
    address range types 806  
    configuring boot devices 53  
    determining ACPI support 91  
    Device Objects 957  
    devices, switching 1133  
    Dock Name (\_BDN) 472  
    initialization 823  
    legacy functions 40  
    legacy specifications 21  
    memory initialization 825  
    relation to ACPI 12

resetting enable bits 104  
bits  
alarm 91  
child 73, 102  
child status 104  
control 102  
enable 77  
general-purpose events 104  
generic hardware registers 102  
ignored 27, 74  
interrupt status 73  
lid status 106  
parent 73, 102  
PM timer 98  
PM1 Control registers 97  
PM1 Enable registers 96  
PM1 Status registers 93, 581  
PM2 Control register 99  
processor control register 99  
processor LVL2 100  
processor LVL3 100  
register notation 69  
reserved 31, 74, 113  
reset register 100, 101  
SMBus protocol encoding 776  
status 77, 102  
system event signals 54  
write-only 74  
blanks 877  
block count register (SMB\_BCNT) 764  
block devices, GPE 611  
Block Write-Read Block Process Call (SMBBlockProcessCall) protocol 293, 788  
blocking, control methods 272  
blocks, register 78  
BM\_RLD 97  
BM\_STS 93  
bold  
    AML notation 1058  
    ASL notation 878  
boot architecture flags, IA-PC 141  
boot devices 53  
boot resources, embedded controller 170  
bootstrap ROM 826  
boot-up 822  
brackets, angle  
    AML notation 1058  
    ASL notation 877

Break (Break from While) 946  
BreakPoint (Execution Break Point) 946  
bridges  
    Base Bus Number (\_BBN) 474  
    DWORD 436  
    flags 444  
    ISA bus device 602, 957  
    purpose 112  
    QWORD 433, 441  
    WORD 438  
Brightness Control Levels Supported, Query List of (\_BCL) 1128  
brightness control, LCDs 1118  
Brightness Level, Set (\_BCM) 1129  
Buffer (Declare Buffer Object) 946  
Buffer field data type, ASL 921, 925  
buffers, IPMI 279  
buffers, SMBus 287, 782  
built-in display adapter, definition 1119  
Burst Disable Embedded Controller (BD\_EC) 756  
Burst Enable Embedded Controller (BE\_EC) 756  
Burst flags 755  
burst mode 756  
Bus/Device packages 957  
buses  
    power management standards 1093  
    segment locations 474  
    setting power states 48  
button control models 83  
buttons See power button  
byte values, AML 1070

## C

C0 processor power state  
    definition 38  
    implementation 511  
C1 processor power state  
    definition 38  
    implementation 513  
C2 processor power state  
    definition 38  
    implementation 513  
C3 processor power state  
    definition 38  
    implementation 513  
cache controller configuration 824  
caches, flushing 515, 821  
capacity, battery

calculating 55  
low-level warnings 57  
remaining 690  
status information 48  
CardBus mode 471  
Case (Conditional Execution) 948  
case sensitivity, ASL 916  
category names 13  
Celsius scale 711  
centenary value, RTC alarm 90  
Central Processing Unit See CPU  
CENTURY 91  
channels, DMA 420, 423  
chemistry independence 675  
child bits 73, 102  
child objects, ASL statements 877  
child status bits 104  
CityplaceEnterprise servers 140  
CLK\_VAL 99  
clock logic 511  
CMOS protocols 275  
cold boots 100, 101, 824  
cold insertion and removal 406  
COM port devices, power management 50, 1094, 1097  
command protocols, SMBus 776  
command register (SMB\_CMD) 763  
commands, embedded controller interface 755  
comments, ASL 877  
compatibility memory 826  
compatibility, compiler 1040  
Compatible ID (\_CID) object 345  
compiling, ASL to AML 66, 1040  
composite battery 54  
Concatenate (Concatenate Data) 948  
ConcatenateResTemplate (Concatenate Resource Templates) 950  
CondRefOf (Conditional Reference Of) 950  
configuration objects, device 358  
configuring  
  BIOS initialization 824  
  boot devices 53  
  modem example 53  
  Plug and Play devices 53  
context, device 25  
context, system  
  definition 32  
  during emergency shutdown 58  
  S4 sleeping state 819

sleep states lost in 37  
contiguous RAM 826  
Continue (Continue Innermost Enclosing While) 952  
control bits  
    functions 102  
    symbol 68  
Control Method Battery 54  
Control Method placeBattery 318, 319, 680  
control methods  
    \_ADR (Return the Unique ID for this Device) 1128  
    \_BCL (Query List of Brightness Control Levels Supported) 1128  
     BCM (Set the Brightness Level) 1129  
    \_BDN (BIOS Dock Name) 472  
    \_DCK (Dock) 471  
    \_DCS (Return the Status of Output Device) 1130  
    \_DDC (Return the EDID for this Device) 1130  
    \_DDS (PlaceNameDevice PlaceNameSet PlaceTypeState)PlaceName 1131  
    \_DGS (PlaceNameQuery PlaceNameGraphics PlaceTypeState)PlaceName 1131  
    \_DOD (Enumerate All Devices Attached to the Display Adapter) 1121  
    \_DOS (Enable/Disable Output Switching) 1120  
    \_GPD (Get POST Device) 1126  
    \_LID (lid device) 595, 596, 601, 628, 637, 638, 639  
    \_MSG (Message) 592, 593  
    \_OFF 484  
    \_PSO (PlaceNamePower PlaceTypeState 0) 488  
    \_PSO (Power State 0) 489  
    \_PS1 (PlaceNamePower PlaceTypeState 1) 488  
    \_PS2 (PlaceNamePower PlaceTypeState 2) 488  
    \_PS3 (PlaceNamePower PlaceTypeState 3) 488  
    \_PSC (PlaceNamePower PlaceTypeState Current) 489  
    \_PSW 493  
     PTS (Prepare To Sleep) 500  
    \_REG (Region) 472  
    \_ROM (Get Rom Data) 1125  
    \_SCP (Set Cooling Policy) 729  
    \_SPD (Set POST Device) 1126  
    \_STM (Set Timing Mode) 607  
    \_TMP (Temperature) 709, 734  
    \_VPO (Video POST Options) 1127  
    \_WAK (System Wake) 507  
ASL, writing 875  
battery 681  
device identification 343  
device removal 406  
initialization (\_INI) 470  
lid device 586, 593, 601, 628  
OEM-supplied 499

overview 272  
power button 85, 602  
Power Resource objects 484  
power source 696, 698  
reserved names 320  
resources 358  
sleep button 87, 602  
system indicators 592  
thermal management 721  
video extensions 1118  
control methods See also objects  
control registers 77  
controllers, embedded  
    definition 25  
    interface 25  
conversion, data types 921  
cooling modes 59, 708  
cooling preferences 60, 715  
CopyObject (Copy an Object) 952  
core logic, system events 54  
CPU  
    boot configuration 824  
    boot-up 822  
    cache flushing 515  
    clock logic 511  
    definition 24  
    fixed hardware control 66, 114  
    multiple performance state control 559  
    non-symmetric power state support 511  
    passive cooling 713  
    performance states 38  
    processor power states 509  
    thermal management 59  
    throttling 511, 551  
    waking operations 48  
crashed systems 84  
CreateBitField (Create 1-Bit Buffer Field) 952  
CreateByteField (Create 8-Bit Buffer Field) 952  
CreateDWordField (Create 32-Bit Buffer Field) 953  
CreateField (Create Arbitrary Length Buffer Field) 953  
CreateQWordField (Create 64-Bit Buffer Field) 953  
CreateWordField (Create 16-Bit Buffer Field) 954  
Critical battery state 57  
Critical Temperature (\_CRT) object 714, 726  
critical temperature shutdowns 708, 714  
Cross Device Dependency 74  
CRT monitors, power management 1098

C-States (processor power) 514, 519  
CT phones See modems  
Current Resource Settings (\_CRS) objects 360, 589

**D**

D0-Fully On  
control method 488, 489  
definition 36  
In Rush Current (\_IRC) object 494  
power resource object 489  
transitioning to 490  
D1 Device State  
definition 36  
transitioning to 490  
D1 PlaceNameDevice PlaceTypeState  
control methods 488  
D1 PlaceNameplaceDevice PlaceTypeState  
power resource objects 490  
D2 Device State  
definition 36  
transitioning to 491  
D2 PlaceNameDevice PlaceTypeState  
control methods 488  
D2 PlaceNameplaceDevice PlaceTypeState  
power resource objects 490, 491  
D3-Off  
control methods 488  
definition 35  
dash character  
  AML notation 1059  
  ASL notation 878  
data buffers, IPMI 279  
data buffers, SMBus 287, 782  
Data Objects encoding, AML 1060  
data objects, ASL  
  Buffer 946  
  Package 1007  
data register array (SMB\_DATA) 763  
data types  
  ASL 921  
  concatenate 931, 932, 933, 948  
data types, resource See resource data types  
DataTableRegion (Create Data Table Operation Region) 954  
day alarm 90  
day mode 44  
DAY\_ALRM 91  
DDB Handle data type, ASL 921, 925

DDT, Plug and Play devices 53  
Debug (Debugger Output) 954  
Debug Object data type, ASL 921, 925  
Debug Objects encoding, AML 1070  
debugging  
    requirements for 875  
decimals, notation 877  
Decrement (Integer Decrement) 955  
Default (Default Execution Path in Switch) 955  
Definition Blocks  
    ASL code 916  
    encoding 268  
    loading 148  
    loading from XSDT 994  
DefinitionBlock (Declare Definition Block) 956  
definitions See terminology  
degrees, Kelvin 711  
dependencies, device 74, 420  
DerefOf (Dereference an Object Reference) 956  
description tables See tables  
design guides 13  
desktop PCs  
    profile system type 139  
Device (Declare Bus/Device Package) 957  
device and processor performance states 38, 52  
Device Class Power Management specifications 47  
Device data type, ASL 921, 925  
device drivers, ACPI-Aware 307  
Device Name (\_DDN) object 346  
device power  
    management 44  
    modem example 49  
    objects 485  
    requirements 1094  
    standards 46  
    states 35  
devices  
    audio, power management 1095  
    class-specific objects 318  
    COM port, power management 1097  
    context, definition 25  
    definition 25  
    graphics 1118  
    identification objects 342  
    input, power management 1106  
    insertion and removal objects 405  
    interference 74

modems, power management 1108  
network, power management 1111  
object notification 311  
PC Card controllers, power management 1113  
Plug and Play IDs 318  
power states 35  
resource allocation 402  
resource control method 358  
SMBus, declaring 778  
storage, power management 1115  
waking system 492  
Devices Attached to the Display Adapter (\_DOD) 1121  
Differentiated Definition Block  
    Bus/Device packages 957  
    determining device power capabilities 47  
    modem example 51  
Differentiated Description Block  
    isolation logic 51  
Differentiated System Description Table See DSDT  
digital modems See modems  
Direct Memory Access (\_DMA) object 361  
Disable (\_DIS) object 360  
Disable Output Switching (\_DOS) 1120  
display adapters  
    ACPI Namespace 1119  
    control methods 1118  
    definitions 1119  
    switching devices 1133  
display devices, power management 1094, 1098  
Display Power Management Signaling Specification (DPMS) 1093  
Divide (Integer Divide) 958  
DMA resource descriptor format 420, 423  
DMA Resource Descriptor Macro 958, 976  
Dock (\_DCK) control method 471  
docking  
    control methods 405, 471  
    event signals 54  
    objects 407  
    query events 103  
documentation  
    organization 18  
    supplemental 21  
drain rates, battery 56  
drivers  
    interference 74  
    restoration 36  
DSDT

definition 25, 149  
purpose 111  
dual 8259 155  
dual-button model 83  
duty cycle 511  
DVD decoders 1121  
DWORD 99  
DWORD resource descriptor format 434  
DWordIO (DWord IO Resource Descriptor Macro) 959  
DWordMemory (DWord Memory Resource Descriptor Macro) 961  
DWordSpace (DWord Space Resource Descriptor Macro) 963  
dynamic insertion and removal 405  
dynamic objects 274  
dynamic Operation Regions 1006  
dynamic transitioning 70

## E

E\_TMR\_VAL 98  
E820 mapping 806  
EC\_DATA (embedded controller data register) 755  
EC\_SC (R) (embedded controller status register) 753  
EC\_SC (W) (embedded controller command register) 755  
ECDT 170  
ECI See embedded controller interface  
EC-SMB-HC 760, 773  
EDID control methods (\_DDC) 1130  
EFI  
    GetMemoryMap interface 809  
    RSDP location 117  
EISA ID 347  
EISAID (EISA ID String To Integer Conversion Macro) 964  
Eject (\_EJx) object 409  
Eject Device List (\_EDL) object 407  
Ejection Dependent Device (\_EJD) object 408  
ejection mechanisms 405  
Else (Alternate Execution) 964  
Elseif (Alternate/Conditional Execution) 965  
embedded controller  
    boot resources table 170  
    burst mode 756  
    device ID 318  
    device object 602  
    event control example 102  
    multiple 750  
    operations 107  
    queuing events 306, 307  
    region control method 473

embedded controller interface  
    ACPI Namespace objects 772  
    algorithms 759  
    ASL code, device 772  
    bi-directional communications 751  
    Burst flag 755  
    command interrupt model 758  
    command register (EC\_SC (W)) 755  
    command set 755  
    commands, restricted 771  
    configurations, additional 752  
    data register (EC\_DATA) 755  
    definition 25  
    firmware requirements 757  
    Input Buffer Full (IBF) flag 754, 759  
    objects 772  
    OEM-definable values 759  
    Output Buffer Full (OBF) flag 754, 759  
    registers 753  
    shared 751, 753  
    SMBus host controller 760  
    SMBus notification header (OS\_SMB\_EVT) 757  
    SMBus protocol descriptions 764  
    SMBus registers 760  
    specifications 750  
emergency shutdown 57  
enable bits  
    corresponding status bits 104  
    resetting 104  
    symbol 68  
enable register 54  
Enable/Disable Output Switch (\_DOS) 1120  
encoding  
    AML 1059  
    Definition Blocks 268  
    object names, ASL 916  
    tables 113  
End Dependent Functions resource descriptor format 422  
end tag resource descriptor format 424  
EndDependentFn End Dependent Functions Descriptor Macro) 966  
energy conservation See power management  
Enumerate All Devices Attached to the Display Adapter (\_DOD) 1121  
enumeration, enabling 778  
errors, fatal 972  
Ethernet adapters See network devices  
Event (Declare Event Synchronization Object) 966  
Event data type, ASL 921, 926

events  
    alarm 89  
    AML code handler 68  
    battery 680  
    button 83  
    enable register 54  
    fixed feature 26  
    fixed handling 304  
    general model 54  
    general-purpose registers 27, 102  
    hardware 71  
    interrupt 71, 92  
    link status 1112  
    OS-transparent 72  
    power button 85  
    power button override 86  
    programming model 302  
    query 103  
    shared 73  
    status register 54  
    synchronization objects 1035  
    synchronization, waiting for 1051  
    user-initiated 83  
    wake frame 1112  
exiting ACPI mode 829  
extended I/O bus 318  
Extended Interrupt resource descriptor format 445  
Extended IO Resource Descriptor Macro 967  
Extended Memory Resource Descriptor Macro 968  
Extended resource descriptor format 439  
Extended Root Systems Description Table See XSDT  
Extended Space Resource Descriptor Macro 970  
External (Declare External Objects) 971

## F

FACS  
    definition 26  
    flags 146  
    Global Lock 146  
    table fields 142

FADT  
    alarm bits 90  
    cache flushing 515, 822  
    definition 26  
    flags 101  
    optional feature bits 93  
    Plug and Play IDs 366

processor power states 510  
reset register location 100, 101  
SCI interrupt mapping 92  
fans  
    active cooling 60  
    device operations 717  
    noise preferences 60  
    Plug and Play ID 108  
    thermal zone example 740  
Fatal (Fatal Error Check) 972  
fatal errors 972  
features  
    fixed 26  
    generic 27  
    generic hardware 104  
Field (Declare Field Objects) 972  
fields  
    alarm 91  
    cache flushing 822  
    declaring objects 972  
    embedded controller boot resources 170  
    FACS 142  
    FADT 126, 366  
    I/O APIC 154  
    IPMI 277  
    MADT 151, 182, 209  
    NMI 157  
    Processor Local APIC 154, 161, 210, 212, 213, 214  
    reserved 113  
    RSDT 124  
    SBST 169  
    SMBus 281, 285, 780  
    Start Dependent Functions 420  
FindSetLeftBit (Find First Set Left Bit) 975  
FindSetRightBit (Find First Set Right Bit) 975  
firmware  
    ACPI System 13  
    embedded controller requirements 757  
    OSPM controls 41  
    SMM functional fixed hardware implementation 114  
Firmware ACPI Control Structure See FACS  
Fixed ACPI Description Table See FADT  
fixed event handling 304  
fixed features  
    definition 26  
    events 26  
    registers 27

fixed hardware  
    definition 64  
    feature control bits 97  
    feature enable bits 95  
    feature status bits 93  
    features 75  
    functional implementation 66  
    interfaces 114  
    power button 84  
    programming model 65  
    register blocks 78  
    registers 77, 93  
    sleep button 86  
fixed location I/O port descriptor resource descriptor format 423  
Fixed Register Resource Provider (\_FIX) 365  
fixed width registers 446  
FixedIO (Fixed IO Resource Descriptor) 976  
FixedList 877  
flags  
    Burst 755  
    DWORD 435  
    FACS 146  
    FADT 101  
    I/O resource 444  
    IA-PC boot architecture 141  
    Input Buffer Full (IBF) 754, 759  
    interrupt vector 445  
    local APIC 154  
    MADT 152  
    memory resource 443  
    MPS INTI 156  
    Output Buffer Full (OBF) 754, 759  
    QWORD 432, 440  
    SMI event (SMI\_EVT) 754  
    system type 140  
    WORD 438  
floppy controller device objects 609  
Floppy Disk Drive Mode (\_FDM) control method 611  
Floppy Disk Enumerate (\_FDE) object 609  
Floppy Disk Information (\_FDI) object 610  
floppy disks See storage devices  
flushing caches 515, 821  
frequency mismatch 312  
FromBCD (Convert BCD To Integer) 978  
Function (Declare Control Method) 979  
functional device configuration 824  
functions

End Dependent 422  
Start Dependent 420

**G**

G0 Working state  
behavior during 814  
definition 34  
properties 34  
transitioning to 69  
transitioning to Sleeping state 820  
transitioning to Soft-Off 821

G1 Sleeping state  
definition 34  
properties 35  
transitioning to 814

G2 Soft Off  
definition 33  
properties 35  
transitioning to 70

G3 Mechanical Off  
definition 33  
properties 35  
transitioning from 69  
transitioning to 43

game pads See input devices

GAS See Generic Address Structure

GBL\_EN 96  
GBL\_RLS 97  
GBL\_STS 94

general event model 54

general-purpose event registers  
addresses 81, 102  
blocks 82, 104  
definition 27  
event 0 104  
event 0 enable 105  
event 0 status 105  
event 1 105  
event 1 enable 106  
event 1 status 105  
grouping 80

general-purpose events  
\_Exx, \_Lxx, and \_Qxx methods 305  
handling 304, 309  
wake 307

generic address space, SMBus 775

Generic Address Structure (GAS) 115

generic events  
example 103, 508  
top-level 103  
generic feature, definition 27  
generic hardware  
definition 64  
features 75, 104  
power button control 85  
registers 66, 77, 102  
sleep button control 87  
generic ISA bus device 602  
generic register resource descriptor format 446  
Get POST Device (\_GPD) 1126  
Get ROM Data (\_ROM) 1125  
Get Task File (\_GTF) control method 603  
Get Timing Mode (\_GTM) control method 606  
GetMemoryMap 809  
Global Lock 146  
Global Lock (\_GLK) object 476  
Global Lock Mutex 335  
Global Lock Structure 147  
global standby timer 73  
global system interrupts 155, 168  
global system states  
transitioning 42, 71, 349, 354, 1124  
goals  
ACPI 8  
OSPM 8  
power management 9  
GPE  
block devices 319, 611  
control method 307  
grammar  
AML 1059  
ASL 876  
grammar notation  
AML 1058  
ASL 877  
graphics devices, requirements for 1118  
Green PCs, power management for 44  
groupings, register See register groupings  
guides, design 13

## H

hardware  
ACPI interfaces 11  
definition 23

events 71  
features 75  
fixed 65  
ignored bits 74  
interfaces 13  
legacy 73  
legacy vs. ACPI 10  
OEM implementation 10  
OS-independent 67, 114  
OSPM model 69  
register definitions 66  
registers 77  
reserved bits 74  
value-added 66  
hardware ID (\_HID) object 346, 347, 676  
headers, long 124  
headers, table 110  
heat management See thermal management  
hexadecimals, notation 877  
holes, compatibility 826  
home PCs, power management for 44  
host controller objects, SMBus 777  
hot insertion and removal 409  
Hot Plug Parameters (\_HPP) object 368, 372, 374  
Hot Temperature (\_HOT) object 727  
hung systems 84  
hysteresis 710

## I

I/O APIC  
  \_MAT (Multiple APIC Table Entry 385  
  definition 28  
  Global System Interrupts 169  
  mixed addresses, preventing 158, 471  
  structure 154  
I/O port resource descriptor format 422  
I/O resource flag 444  
I/O SAPIC  
  definition 28  
  mixed addresses, preventing 158, 471  
  Platform Interrupt Source structure 159, 161  
  structure 158  
I/O space 112  
IA (Intel Architecture) specifications 21, 22  
IA-32 systems 114  
IA-PC  
  boot architecture flags 141

definition 28  
interrupt models 155  
memory map system 806  
RSDP location 117  
ID, Compatible (\_CID object) 345  
IDE  
    controller device 604  
    drives 67  
IDE devices See storage devices  
identification objects, device 342  
idle loops, CPU 52  
idle timers, legacy 73  
IDs, Plug and Play 318, 343  
If (Conditional Execution) 983  
ignored bits  
    definition 27, 74  
    PM1 Status register 94  
implementation requirements  
    OEM 10  
    OS 17  
    OSPM 17  
In Rush Current (\_IRC) object 494  
Include (Include Additional ASL File) 983  
Increment (Integer Increment) 984  
independence, OS  
    functional fixed hardware 114  
    generic hardware 67  
Index (Indexed Reference To Member Object) 984  
Index with Buffers 985  
Index with Packages 984  
Index with Strings 986  
IndexField (Declare Index/Data Fields) 986  
indicators, system 592  
initialization  
    BIOS 823  
    boot-up 822  
    OS 828  
initialization object (\_INI) 470  
Input Buffer Full (IBF) flag 754, 759  
input devices, power management 1094, 1106  
Input/Output See I/O  
insertion and removal objects 405  
insertion and removal, batteries 680  
INT 15 mapping 806  
Integer data type, ASL 921, 926  
Integers 917  
Intel Architecture specifications 21, 22

Intel Architecture-Personal Computer See IA-PC  
interdependent resources 420  
interfaces  
    ACPI 11  
    battery 54  
    BIOS, legacy 40  
    Control Method Battery 681  
    design guides 13  
    EC-SMB-HC 760  
    embedded controller 25  
    fixed hardware 114  
    hardware 13  
    sharing protocols 753  
    SMBus 32, 775  
interference, device 74  
Interrupt (Extended Interrupt Descriptor Macro) 987  
interrupt events  
    logic 71  
    SCI 92  
    shareable 92  
    SMI 92  
Interrupt Source Overrides 155  
interrupt sources, non-maskable (NMIs) 156  
interrupt status bits 73  
interrupts  
    Extended Interrupt resource descriptor format 445  
    models 151, 155, 168, 182, 216  
    Platform Interrupt Source structure 159  
    PMIs 159  
invocation, control methods 274  
IO (I/O Port Resource Descriptor Macro) 988  
IPMI  
    data buffers 279  
    fields, declaring 277  
    operation regions 276  
IRQ (Interrupt Resource Descriptor Macro) 989  
IRQNoFlags (Interrupt Resource Descriptor Macro) 990  
IRQs  
    mapping 155, 156  
    PCI routing 398  
    resource descriptor format 419  
ISA  
    bus device 318, 336, 602  
    Device Objects code 957  
    interrupt sources 155  
    old cards 422  
ISDN Terminal Adapters See modems

isolation logic 51  
italics, ASL notation 878

## J

joysticks See input devices

## K

Kelvin scale 711  
kernel 12  
key, logic diagrams 68  
keyboard controllers 750  
keyboards See input devices

## L

LAnd (Logical And) 990  
large resource resource descriptor format 294, 297, 424  
latency  
    acceptable 42, 349, 354, 1124  
    global power states 34  
    processor power states 509  
LCD panels  
    brightness control 1118  
    power management 1098  
legacy BIOS interfaces 40  
legacy hardware  
    BIOS specification 21  
    boot flags 141  
    converting to fixed 65  
    definition 28  
    interrupt handlers 91  
    support 10  
legacy OS, definition 28  
legacy systems  
    definition 28  
    power button functions 43  
    power management 73  
    power state transitions 69  
    switching devices out of 471  
    transitioning to ACPI 92  
LEqual (Logical Equal) 990  
LGreater (Logical Greater) 991  
LGreaterEqual (Logical Greater Than Or Equal) 991  
lid device 319  
lid status notification values 315, 316, 317  
lid switch 106  
life, battery 56

link status events 1112  
LINT 157  
LLess (Logical Less) 991  
LLessEqual (Logical Less Than Or Equal) 992  
LNot (Logical Not) 992  
LNotEqual (Logical Not Equal) 993  
Load (Load Definition Block) 993  
loading Definition Blocks 148, 994  
LoadTable (Load Definition Block From XSDT) 994  
local APIC, definition 28  
Local Objects encoding, AML 1070  
Localx (Method Local Data Objects) 995  
Lock (\_LCK) object 410  
Lock, Global 146  
logic  
    fixed power button 84  
    lid switch 106  
    sleep button 86  
    sleeping/wake control 88  
LOr (Logical Or) 995  
low-level warnings, battery 56  
LPT ports 51

## M

macros, ASL  
    24-bit Memory Resource Descriptor 996  
    32-bit Fixed Memory Resource Descriptor 998  
    32-bit Memory Resource Descriptor 997  
    coding 920  
    DMA Resource Descriptor 958, 976  
    DWordIO Resource Descriptor 959  
    DWordMemory Resource Descriptor 961  
    DWordSpace Resource Descriptor 963  
    EISAID Conversion 964  
    End Dependent Functions Resource Descriptor 966  
    Extended Interrupt Resource Descriptor 987  
    ExtendedIO Resource Descriptor 967  
    ExtendedMemory Resource Descriptor 968  
    ExtendedSpace Resource Descriptor 970  
    FixedIO Resource Descriptor 976  
    I/O Port Resource Descriptor 988  
    IRQ Interrupt Resource Descriptor 989  
    IRQNoFlags Interrupt Resource Descriptor 990  
    QWordIO Resource Descriptor 1025  
    QWordMemory Resource Descriptor 1027  
    QWordSpace Resource Descriptor 1028  
    Register Resource Descriptor 1031

ResourceTemplate 1033  
Start Dependent Function NoPri Resource Descriptor 1038  
Start Dependent Function Resource Descriptor 1038  
Unicode Conversion 1050  
UUID Conversion 1047  
VendorLong Resource Descriptor 1050  
VendorShort Resource Descriptor 1051  
WordBusNumber Resource Descriptor 1052  
WordIO Resource Descriptor 1053  
WordSpace Resource Descriptor 1055

MADT  
  \_MAT object 385  
  definition 29  
  flags 152  
  interrupt models 151, 182, 216  
  table fields 151, 182, 209

Magic Packet wake 1111

management See power management

mapping  
  E820 806  
  EFI GetMemoryMap 809  
  INT 15 806  
  IRQs 155, 156  
  Query System Address Map function 811  
  samples 810

Match (Find Object Match) 995

Mechanical Off  
  definition 33  
  properties 35  
  transitioning from 69  
  transitioning to 43

memory  
  BIOS initialization 825  
  controller configuration 824  
  descriptor macros 998  
  devices 616  
  map sample 810  
  NVS 826  
  resource flag 443

memory device 319

memory range descriptors  
  24-Bit 426  
  32-Bit 427  
  32-Bit Fixed Location 429  
  purpose 427

Memory24 (Memory Resource Descriptor Macro) 996

Memory32 (Memory Resource Descriptor Macro) 997

Memory32Fixed (Memory Resource Descriptor Macro) 998  
Message (\_MSG) control method 592, 593  
Method (Declare Control Method) 999  
Method data type, ASL 921, 926  
methods, control See control methods  
mice See input devices  
Microsoft Device Class Power Management specifications 47  
Mid (Extract Portion of Buffer or String) 1000  
mobile PCs  
    lid switch 106  
    power management 43  
    profile system type 139  
Mod (Integer Modulo) 1001  
modems  
    configuration example 53  
    power management 1094, 1108  
    power management example 49  
modifiers  
    ASL names 916  
Module Device 319, 613  
MON-ALRM 91  
monitors See display devices  
month alarm 90  
motherboard device configurations  
    ACPI goals 8  
    controlled by OSPM 40  
    modems 1109  
MPS INTI flags 156  
Multiple APIC Description Table See MADT  
Multiple APIC Table Entry (\_MAT) object 385  
multiple Smart Battery Subsystem 679  
Multiply (Integer Multiply) 1001  
multiprocessor PCs  
    performance control 559  
    power management for 44  
mutex  
    acquiring 943  
    Global Lock 335  
    release synchronization objects 1032  
Mutex (Declare Synchronization/Mutex Object) 1001  
Mutex data type, ASL 921, 926

## N

Name (Declare Named Object) 1002  
Name Objects encoding, AML 1059, 1060  
name terms, ASL 878  
Named Objects encoding, AML 1062

names, object 29  
Namespace See ACPI Namespace  
naming conventions 265  
NAnd (Integer Bitwise Nand) 1003  
nested packages 984  
network devices, power management 1094, 1111  
NMIs 156, 157  
noise, active cooling 60  
non-linear address spaces 276, 775  
Non-Maskable Interrupt Sources (NMIs) 156, 157  
non-visible states, device power 35  
Non-Volatile Sleeping memory (NVS) 826  
NoOp Code (No Operation) 1003  
NOOr (Integer Bitwise Nor) 1003  
Not (Integer Bitwise Not) 1003  
notation  
    AML 1058  
    ASL 877  
        numeric constants 877  
        register bits 69  
Nothing 877  
notification  
    battery removal 680  
    power button control 85  
    Smart Battery status 675  
    temperature changes 711  
Notification Temperature Threshold (\_NTT) object 728  
Notify (Notify Object of Event) 1004  
numeric constants, notation 877  
NVS files  
    checking validity 828  
NVS memory 826

## O

object name, definition 29  
Object Reference data type, ASL 922, 926  
objects  
    \_BMC (Battery Maintenance Control) 694  
    \_ACx (Active Cooling) 709, 722  
    \_ADR (Address) 343  
    \_BBN (Base Bus Number) 474  
    \_BCT (Battery Charge Time) 692  
    \_BIF (Battery Information) 682  
    \_BIX (Battery Information Extended) 684  
    \_BMA (Battery Measurement Averaging Interval) 687  
    \_BMD (Battery Maintenance Data) 692  
    \_BMS (Battery Measurement Sampling Time) 688

\_BST (Battery Status) 688  
\_BTM (Battery Time) 692  
\_BTP (Battery Trip Point) 691  
\_CID (Compatible ID) 345  
\_CRS (Current Resource Settings) 360, 589  
\_CRT (Critical Temperature) 714, 726  
\_CST (C States) 519  
\_DDN (Device Name) 346  
\_DIS (Disable) 360  
\_DMA (Direct Memory Access) 361  
\_EDL (Eject Device List) 407  
\_EJD (Ejection Dependent Device) 408  
\_EJx (Eject) 409  
\_FDE (Floppy Disk Enumerate) 609  
\_FIX (Fixed Register Resource Provider) 365  
\_GLK (Global Lock) 476  
\_HID (hardware ID) 346, 347, 676  
\_HOT (Hot Temperature) 727  
\_HPP (Hot Plug Parameters) 368, 372, 374  
\_INI (Init) 470  
\_IRC (In Rush Current) 494  
\_LCK (Lock) 410  
\_MAT (Multiple APIC Table Entry) 385  
\_NTT (Notification Temperature Threshold) 728  
\_PCL (Power Consumer List) 696  
\_PCT (Performance Control) 559  
\_PPC (Performance Present Capabilities) 561  
\_PRO (Power Resources for D0) 489  
\_PR1 (Power Resources for D1) 490  
\_PR2 (Power Resources for D2) 490, 491  
\_PRS (Possible Resource Settings) 396  
\_PRW (Power Resources for Wake) 308, 492  
\_PSL (Passive List) 728  
\_PSR (Power Source) 696  
\_PSS (Performance Supported States) 521, 555, 560, 564  
\_PSV (Passive) 709, 728  
\_PTC (Processor Throttling Control) 551  
\_RMV (Remove) 416  
\_S1D 494  
\_S2D 495  
\_S3D 496  
\_S4D 496  
\_SBS (Smart Battery Subsystem) 676  
\_SEG (Segment) 474  
\_SRS (Set Resource Settings) 402  
\_STA (Status) 485  
\_STR (String) 357

\_SUN (Slot User Number) 357  
\_TC1 (Thermal Constant 1) 733  
\_TC2 (Thermal Constant 2) 733  
\_TSP (Thermal Sampling Period) 735  
\_TZD (Thermal Zone Devices) 736  
\_TZP (Thermal Zone Polling) 600, 629, 637, 733, 737  
\_UID (Unique ID) 358  
ASL encoding 916  
ASL statements 877  
ASL, declaring 272  
control methods 272  
definition 29  
device identification 342  
device insertion and removal 405  
device power resource 489  
dynamic 274  
EC-SMB-HC 773  
embedded controller interface 772  
floppy controller 609  
global scope 268  
initialization 470  
Module Device 613  
names, reserved 917  
Notify operator 311  
OS-defined 335  
Power Resource 482  
processor 516  
reserved and predefined 320  
revision data 339  
Smart Battery 676  
SMBus host controller 777  
static 274  
thermal management 721  
unnamed 269  
objects See also control methods  
ObjectType 877  
ObjectType (Get Object Type) 1004  
OEM implementation 10  
OEM-supplied control methods 499  
OFF 484  
off See Mechanical Off  
ON 484  
One (Constant One Object) 1005  
Ones (Constant Ones Object) 1005  
opcodes  
    Type 1, AML 1065  
    Type 2, AML 1066

Operating System See OS  
Operation Region data type, ASL 922, 926  
Operation Region Field Unit data type, ASL 921  
operation regions  
    IPMI 276  
    SMBus 775  
OperationRegion (Declare Operation Region) 274, 1006  
operator reference, ASL 942  
operator summary by type, ASL 937  
operator summary, ASL 933  
operators, ASL 921  
Or (Integer Bitwise Or) 1007  
organization, document 18  
original equipment manufacturer See OEM  
OS  
    AML support, required 875  
    boot flags 141  
    compatibility requirements 17  
    defined object names 335  
    device power management 47  
    drivers, embedded controller interface 750  
    functional fixed hardware implementation 114  
    independent generic hardware 67  
    legacy hardware interaction 10  
    loading 827  
    name object 338  
    policy owner, device power management 1092  
    power management 9  
    transparent events 72  
OSPM  
    caches, flushing 821  
    cooling policy changes 709  
    cooling preferences 60  
    device insertion and removal 405  
    event handlers 73  
    exclusive controls 41  
    fixed hardware access 66  
    fixed hardware registers 93  
    functions 40  
    general-event register access 104  
    generic hardware model 67  
    goals 8  
    hardware model 69  
    implementation requirements 17  
    passive cooling 713  
    performance states 52  
    PlaceNameplaceSet PlaceNamePower PlaceTypeState operation 48

power state control 42  
Real Time Clock Alarm (RTC) 89  
resetting system 100, 101  
SMBus registration 778  
thermal management 707  
transitioning to sleeping states 815  
transitioning working to sleeping states 820  
transitioning working to soft-off state 821  
Output Buffer Full (OBF) flag 754, 759  
output devices  
    control methods 1130  
    definition 1119  
    switching 1133  
    types of 1121  
override, power button 86

## P

P\_BLK 99  
P\_LVL2 100  
P\_LVL3 100  
P0 performance state, definition 38  
P1 performance state, definition 39  
Package (Declare Package Object) 1007  
Package data type, ASL 922, 926  
packages  
    definition 29  
    length 269  
    length encoding, AML 1061  
    nested 984  
packet error checking (PEC) 776  
parameters, ASL 923  
parent bits 73, 102  
parent objects, ASL statements 877  
parentheses, AML notation 1059  
Passive (\_PSV) object 709, 728  
passive cooling  
    definition 59, 708  
    preferences 60, 715  
    processor clock throttling 713  
    threshold values 715  
Passive List (\_PSL) object 728  
PC Card controllers, power management 1094, 1113  
PC keyboard controllers 750  
PCCARD 1093  
PCI  
    BAR target operations 275  
    bus number 474

buses, address space translation 112  
Device Objects code 957  
device power management 1093  
interrupt pins 397  
IRQ routing 398  
power management 1093  
PCI configuration space 66  
PCI Interrupt Link device 319  
PCISIG 1093  
PCMCIA 1093  
PEC (packet error checking) 762, 776  
Performance Control (\_PCT) object 559  
Performance Present Capabilities (\_PPC) object 561  
performance states  
    definitions 38  
    device 52  
Performance Supported States (\_PSS) object 521, 555, 560, 564  
performance, energy conservation vs. 60  
Persistent System Description Table (PSDT) 151  
phones, answering  
    modem example 50  
PIC method 341  
pins  
    general event model 54  
    GPE 104  
PlaceNameAddress PlaceTypeRange types 805  
PlaceNameDevice PlaceNameSet PlaceTypeState (\_DSS) 1131  
PlaceNameGraphics PlaceTypeState, Query (\_DGS) 1131  
PlaceNameSet PlaceNamePower PlaceTypeState 48  
placeSOHO servers 140  
platform  
    implementation 13  
Platform Interrupt Source structure 159, 161  
Platform Management Interrupts (PMIs) 159  
Plug and Play devices  
    ACPI control 53  
    IDs 318, 343  
    large resource items 425  
    resource control method 358  
    small resource items 418  
    specifications 21  
PM timer  
    bits 98  
    function 73  
    idle time, determining 52  
    operations 82  
    register address 80

register blocks 82  
PM1 Control registers  
    addresses 80  
    bits 97  
    blocks 81  
    grouping 79, 97  
PM1 Enable registers 93  
PM1 Event registers  
    addresses 80  
    blocks 81  
    grouping 79, 93  
PM1 Status registers 93  
PM2 Control registers  
    addresses 80  
    bits 98  
    blocks 81  
PM2 Controller register grouping 79  
PMIs 159  
Pn performance state, definition 39  
PNPBIOS 40  
Polarity flags 156  
policy owner 1092  
port descriptors, I/O 422  
Possible Resource Settings (\_PRS) object 396  
POST Device control methods 1126  
power button  
    ASL code example 85  
    control methods 85, 602  
    definition 30  
    device ID 319  
    dual-button model 84  
    fixed hardware 84  
    functions 43  
    object notification values 314  
    override 86, 89  
    single-button model 84  
Power Consumer List (\_PCL) object 696  
power consumption  
    device and processor performance states 38  
    global power states 34  
power loss  
    Mechanical Off 69  
power management  
    audio devices 1095  
    buses 1093  
    COM port devices 1097  
    cooling, relationship to 60

definition 30  
desktop PCs 43  
device 44, 1094  
device objects 485  
display devices 1098  
display standards 1093  
goals 9  
input devices 1106  
legacy 73  
mobile PCs 43  
modem devices 1108  
modem example 49  
multiprocessor PCs 44  
network devices 1111  
PC Card controllers 1113  
PCI 1093  
PCMCIA 1093  
performance states 52  
performance vs. energy conservation 60  
preferred system types 139  
servers 44  
setting device power states 48  
storage devices 1115  
power management (PM) timer  
    function 73  
    idle time, determining 52  
    operations 82  
    register address 80  
    register blocks 82  
Power Resource data type, ASL 922, 926  
power resources  
    battery management 673  
    child objects 484  
    definition 30  
    device objects 489  
    isolation logic 51  
    objects 482  
    shared 51  
    wake system object 492  
Power Source (\_PSR) object 696  
power sources  
    AC adapter 695  
    definition 31  
    object notification values 314, 317  
power states  
    control methods 488, 489  
    controlled by OSPM 42

device 35  
global 33  
non-symmetric processor 511  
objects 488, 489  
processor 509  
sleeping 37  
transitioning 69  
PowerResource (Declare Power Resource) 1023  
predefined ACPI names 320  
preferences, user  
  performance vs. energy conservation 60, 715  
  power button 43  
preferred PM profile system 139  
Prepare to Sleep (\_PTS) control method 500  
Process Call (SMBProcessCall) protocol 293, 787  
Processor (Declare Processor) 1024  
processor and device performance states 38  
processor control block 82  
processor control registers  
  addresses 80  
  bits 99  
Processor data type, ASL 922, 926  
processor device notification values 316  
Processor devices 319  
Processor Local APIC 153, 157, 183  
Processor Local SAPIC 158  
processor LVL2 register 99, 510  
processor LVL3 register 100, 510  
processor objects 516  
processor See CPU  
Processor Throttling Control (\_PTC) object 551  
programming models  
  events 302  
  feature summary 75  
  fixed 65  
  generic 66  
protocol register (SMB\_PRTCL) 762  
protocols  
  BARs (Base Address Registers) 275  
  CMOS 275  
  SMBus 764, 776, 783  
Proximity (\_PXM) object 359, 399  
PSDT 151  
pseudocode language See AML  
pulsed interrupts 758  
PWRBTN\_EN 96  
PWRBTN\_STS 94

**Q**

Query Embedded Controller (QR\_EC) 757  
query events 103  
query value, definition 68  
quotes  
    AML notation 1058  
    ASL notation 878  
QWord IO Resource Descriptor Macro 1025  
QWord Memory Resource Descriptor Macro 1027  
QWORD resource descriptor format 431, 1026, 1028, 1030  
QWord Space Resource Descriptor Macro 1028

**R**

Read Embedded Controller (RD\_EC) 755  
Read/Write Block (SMBBlock) protocol 786  
Read/Write Byte (SMBByte) protocol 290, 785  
Read/Write Quick (SMBQuick) protocol 288, 783  
Read/Write Word (SMBWord) protocol 291, 785  
reclaim memory 825  
RefOf (Create Object Reference) 1030  
Region (\_REG) control method 472  
register bits, notation 69  
register blocks 78  
register definitions, hardware 114  
Register Generic Register Descriptor Macro) 1031  
register groupings  
    definition 31, 77  
    list of 79  
registers  
    BARs (Base Address Registers) 275  
    control 77  
    EC-SMB-HC 760  
    embedded controller interface 753  
    enable 54  
    fixed feature 27  
    fixed hardware 93  
    general-purpose event 27  
    reset 100, 101  
    SMB-HC 769  
    status 54  
    virtual 279, 282, 283, 777, 781  
related device interference 74  
Release (Release a Mutex Synchronization Object) 1032  
Release terms 1002  
Remaining Battery Percentage 55, 690  
removal objects 405

removal, batteries 680  
Remove (\_RMV) object 416  
requirements, implementation  
    OS 17  
    OSPM 17  
reserved ACPI names 320  
reserved bits  
    definition 31  
    hardware 74  
    PM1 Control registers 97  
    PM1 Enable registers 96  
    PM1 Status register 94  
    software requirements 113  
reserved object names 917  
reserved SMBus protocol values 776  
Reset (Reset an Event Synchronization Object) 1032  
reset register 100, 101  
resource data types  
    Address Space Resource Descriptors 430  
    control methods 418  
    DMA 420, 423  
    End Dependent Functions 422  
    end tag 424  
    IRQ 419  
    large 294, 297, 424  
    large vendor defined 427  
    memory range descriptors 426  
    small 418  
    small vendor defined 424  
    Start Dependent Functions 420  
    vendor defined 427  
resources  
    allocation 402  
    control method 358  
    interdependencies 420  
resources, power See power resources  
ResourceTemplate Resource To Buffer Conversion Macro) 1033  
restoring system context 819  
results, storing 923  
Return (Return from Method Execution) 1033  
Revision (Constant Revision Object) 1033  
revision data object 339  
RISC processors 430  
RISC systems 43  
ROM control methods 1125  
Root System Description Pointer See RSDP  
Root System Description Table See RSDT

RSDP  
  definition 31  
  location 116  
  table structure 118  
RSDT  
  definition 31  
  table fields 124  
RTC\_EN 96  
RTC\_STS 94  
RTC/CMOS protocols 275

## S

S0 State (Working) 502  
S1 Sleeping state  
  \_S1D object 494  
  behavior during 503  
  definition 37  
  implementation 816  
  transitioning 501  
  waking using RTC 89  
S2 Sleeping state  
  \_S2D object 495  
  behavior during 503  
  definition 37  
  implementation 817  
  transitioning 501  
  waking using RTC 89  
S3 Sleeping state  
  \_S3D object 496  
  behavior during 504  
  definition 37  
  implementation 817  
  transitioning 501  
  waking using RTC 89  
S4 Sleeping state  
  \_S4D object 496  
  behavior during 504  
  definition 37  
  implementation 818  
  low-level battery 57  
  waking using RTC 89  
S5 Soft-Off  
  behavior during 820  
  definition 33, 37  
  properties 35  
  transitioning to 821  
SAPIC

definition 32  
I/O 28, 158  
local 28  
NMI 156  
Processor Local 158  
SATA  
    controller device 608  
saving system context  
    during emergency shutdown 58  
    S4 Non-Volatile Sleep state 819  
SBST 169  
SCI  
    definition 32  
    embedded controller events 758  
    interrupt handlers 71, 91  
SCI\_EN 91, 93, 97  
Scope (Open Named Scope) 1033  
SCSI, power management 1093  
Secondary System Description Table See SSDT  
Segment (\_SEG) object 474  
Send/Receive Byte (SMBSendReceive) protocol 289, 784  
separators, ASL 877  
Serialized methods 979, 1000  
server machines, power management 44  
Set Cooling Policy (SCP) control method 729  
Set POST Device (\_SPD) 1126  
Set Resource Settings (\_SRS) object 402  
Set the Brightness Level (\_BCM) 1129  
Set Timing Mode (\_STM) control method 607  
settings, user  
    performance vs. energy conservation 60, 715  
    power button 43  
shareable interrupts 92  
shared interface, embedded controller 751, 753  
ShiftLeft (Integer Shift Left) 1035  
ShiftRight (Integer Shift Right) 1035  
Short Vendor-Defined Resource Descriptor macro 1051  
shutdown, emergency 57, 714  
shutting down See Mechanical Off  
Signal (Signal a Synchronization Event) 1035  
signatures  
    collisions, avoiding 120, 122  
    interpreting 111, 124  
    values, storing 113  
single quotes  
    AML notation 1058  
    ASL notation 878

SizeOf (Get Data Object Size) 1036  
slave addresses, SMBus 674, 775  
Sleep (Milliseconds Sleep) 1036  
sleep button  
    ASL code example 87  
    control methods 87, 602  
    definition 31  
    device ID 319  
    fixed hardware 86  
    object notification values 315  
    support 86  
Sleeping states  
    behavior during 503  
    button logic 87  
    definitions 34, 37  
    entering 815  
    logic controlling 88  
    objects 495  
    power consumption 34  
    properties 35  
    transitioning 42, 349, 354, 501, 1124  
    user settings 43  
    waking using RTC 89  
Slot User Number (\_SUN) object 357  
SLP\_EN 98, 815  
SLP\_EN field 89  
SLP\_TYPx 98, 815  
SLP\_TYPx field 78, 89  
SLPBTN\_EN 96  
SLPBTN\_STS 94  
small resource data type 418  
Smart Batteries  
    (\_SBS object 676  
    definition 31  
    device ID 319  
    multiple battery subsystem 679  
    single battery subsystem 678  
    SMBus data buffers 287, 782  
    SMBus devices 779  
    specifications 22  
    status notification 675  
    subsystem 54, 673  
    supported 48  
    table 32  
    table formats 169  
Smart Battery Charger  
    functions 675

status notification 675  
Smart Battery Selector 676  
Smart Battery System Manager  
    functions 674  
    status notification 676  
SMB-HC 674, 679, 769  
SMBus  
    address register (SMB\_ADDR) 763  
    alarm address register (SMB\_ALRM\_ADDR) 764  
    block count register (SMB\_BCNT) 764  
    Block Write-Read Block Process Call (SMBBlockProcessCall) protocol 293, 788  
    commands, restricted 771  
    data buffers 287, 782  
    data register array (SMB\_DATA) 763  
    definition 32  
    device enumeration, enabling 778  
    device ID 319  
    embedded controller interface 760  
    encoding, bit 776  
    fields, declaring 281, 285, 780  
    host controller notification header (OS\_SMB\_EVT) 757  
    host controller objects, declaring 777  
    interface 32  
    operation regions 775, 778  
    PEC (packet error checking) 776  
    Process Call (SMBProcessCall) protocol 293, 787  
    protocol register (SMB\_PRTCL) 762  
    protocols 764, 776, 783  
    Read/Write Block (SMBBlock) protocol 786  
    Read/Write Byte (SMBByte) protocol 290, 785  
    Read/Write Quick (SMBQuick) 288, 783  
    Read/Write Word (SMBWord) protocol 291, 785  
    Send/Receive Byte (SMBSendReceive) protocol 289, 784  
    slave addresses 674, 775  
    specifications 22  
    status codes 777  
    status register (SMB\_STS) 760  
    transactions 777  
    virtual registers 777  
SMBus devices 319  
SMI  
    definition 32  
    embedded controller firmware 757  
    interrupt events 71, 92  
SMM firmware 114  
Soft-Off  
    behavior during 505, 820

definition 33, 37  
properties 35  
transitioning crashed systems to 84  
transitioning to 70, 821  
sources, power See power sources  
SSDT 31, 150  
Stall (Stall for a Short Time) 1037  
standards  
    device power states 46  
Start Dependent functions resource descriptor format 420  
StartDependentFn Start Dependent Function Resource Descriptor Macro) 1038  
StartDependentFnNoPri Start Dependent Function Resource Descriptor Macro) 1038  
statements  
    ElseIf 965  
    If 965  
    Power Resource 483  
    Processor 516  
statements, ASL 877  
states See power states  
static objects 274  
Status (\_STA) 485  
Status (\_STA) object 417  
status bits  
    corresponding enable bits 104  
    functions 102  
    symbol 68  
status codes, SMBus 777  
status notification, Smart Battery 675  
status register 54  
status register (SMB\_STS) 760  
sticky status bit, definition 68  
storage devices, power management 1094, 1115  
Store (Store an Object) 1039  
storing results, ASL operators 923  
Streamlined Advanced Programmable Interrupt Controller See SAPIC  
String (\_STR) object 357  
String data type, ASL 922, 926  
strings, ASL 917  
Subtract (Integer Subtract) 1039  
supplemental documentation 21  
surprise-style removal 405, 416  
Switch (Select Code To Execute Based On Expression) 1040  
switching, output devices 1133  
Sx states See Sleeping states  
syntax  
    OperationRegion 277, 778  
    Power Resource statements 483

syntax, ASL 876  
system context  
    definition 32  
    during emergency shutdown 58  
    S4 Sleeping state 819  
    sleep states lost in 37  
System Control Interrupt See SCI  
system description tables See tables  
system events, general model 54  
system indicators 592  
System Management Bus See SMBus  
System Management Interrupt See SMI  
System Management Mode See SMM  
System Status (\_SST) control method 592  
System Wake (\_WAK) control method 507

## T

tables  
    address format 113  
    compatibility 113  
    DSDT 149  
    embedded controller boot resources 170  
    encoding format 113  
    FACS 142  
    headers 110, 118  
    MADT 151, 182, 209  
    overview 109  
    RSDP 118  
    RSDT 124  
    SBST (Smart Battery Description) 169  
    signatures 120, 122  
    SSDT 150  
Temperature (\_TMP) control method 709, 734  
temperature changes, detecting 710  
temperature management See thermal management  
Term Objects encoding, AML 1061  
terminology  
    design guides 13  
    device power states 35  
    general 23  
    performance states 38  
    sleeping states 37  
terms  
    AML 1058  
    ASL notation 877  
Thermal Constant 1 (\_TC1) object 733  
Thermal Constant 2 (\_TC2) object 733

thermal management  
control methods 721  
energy conservation, optimizing 60  
notification of temperature changes 711  
objects 721  
OSPM controlled 707  
performance, optimizing 60  
polling 710, 712  
temperature changes, detecting 710  
threshold settings, dynamically changing 709  
trip points 711  
Thermal Sampling Period (\_TSP) object 735  
thermal states, definition 32  
Thermal Zone data type, ASL 922, 926  
Thermal Zone Devices (\_TZD) object 736  
Thermal Zone Polling (\_TZP) object 600, 629, 637, 733, 737  
thermal zones  
basic configuration 738, 742  
examples 738, 742  
mobile PC example 59  
multiple-speed fan example 740  
object notification values 314  
object requirements 738  
ThermalZone (Declare Thermal Zone) 1042  
thirty-two bit fixed location memory range resource descriptor format 429  
thirty-two bit memory range resource descriptor format 427  
throttling 511, 551  
THT\_EN 99  
Timer (Get 64-Bit Timer Value) 1042  
timers  
global standby 73  
idle 73  
power management (PM) 73, 82  
TMR-field 83  
TMR\_EN 96  
TMR\_STS 93, 581  
TMR\_VAL 98  
ToBCD (Convert Integer to BCD) 1043  
ToBuffer (Convert Data to Buffer) 1043  
ToDecimalString (Convert Data to Decimal String) 1044  
ToHexString (Convert Data to Hexadecimal String) 1044  
ToInteger (Convert Data to Integer) 1044  
token ring adapters See network devices  
top of memory 826  
ToString (Convert Buffer To String) 1047  
transactions, SMBus  
data buffers 287, 782

status codes 777  
transitioning  
    crashed systems 84  
    device power states 1093  
    Legacy mode to ACPI 92  
    power states 42, 69, 349, 354, 1124  
    working to sleeping states 820  
    working to soft-off states 821  
transparent events 72  
transparent switching, device power states 37, 578  
trap monitors 73  
Trigger Mode flags 156  
trip points, thermal 711  
turning off See Mechanical Off  
TVs 1121  
twenty-four bit memory range resource descriptor format 426  
Type 1 Opcodes, AML encoding 1065  
Type 2 Opcodes, AML encoding 1066

## U

UARTs, power management 1097  
Unicode (String To Unicode Conversion Macro) 1050  
Uninitialized data type, ASL 921, 925  
Unique ID (\_UID) object 358  
unnamed objects 269  
unrelated device interference 74  
upper case, ASL names 916  
USB, power management 1093, 1094  
user preferences  
    performance vs. energy conservation 60, 715  
    power button 43  
user-visible power states 42  
UUID (Convert String to UUID Macro) 1047

## V

value-added hardware  
    enabling OSPM 66  
    registers 102  
Variable List 877  
VCR-style ejection mechanism 405  
vendor defined large resource descriptor format 427  
vendor defined resource data types 427  
vendor defined small resource descriptor format 424  
VendorLong Long Vendor-Defined Descriptor macro) 1050  
VendorShort Vendor Defined Resource Descriptor Macro) 1051  
VESA specifications 1093

VGA 1121, 1126  
video controllers, power management 1098  
Video Electronics Standards Associations (VESA) 1093  
Video POST Options (\_VPO) 1127  
virtual data objects 954  
virtual registers 279, 282, 283, 777, 781  
visible states  
    global system 33

## W

Wait (Wait for a Synchronization Event) 1051  
WAK\_STS (Wake Status) 89, 95  
wake frame events 1112  
waking  
    \_WAK control method 507  
    audio devices 1097  
    COM ports 1098  
    device power resource object (\_PRW) 492  
    devices 1095  
    disabling system-waking devices 493  
    display devices 1104  
    initialization 822  
    input devices 1107  
    latency time 42, 349, 354, 1124  
    lid switch 106  
    logic controlling 88  
    modem devices 1110  
    network devices 1112  
    OS operations 48  
    PC Card controllers 1115  
    Real Time Clock Alarm (RTC) 89  
    resetting lost enable bits 104  
    storage devices 1117  
warm insertion and removal 409  
warnings, battery 56  
WBINVD 821  
web sites  
    Intel Architecture 21, 22  
    Microsoft 21  
    PCISIG 1093  
    PCMCIA 1093  
    Smart Battery System 22  
    SMBus specification 775  
    USB-IF 1094  
While (Conditional Loop) 1052  
WORD resource descriptor format 437  
WordBusNumber (Word Bus Number Resource Descriptor Macro) 1052

WordIO (Word IO Resource Descriptor Macro) 1053  
WordSpace (Word Space Resource Descriptor Macro) 1055  
Working state  
    behavior during 814  
    definition 34  
    properties 34  
    transitioning to 69  
    transitioning to Sleeping state 820  
    transitioning to Soft-Off 821  
workstations 140  
Write Embedded Controller (WR\_EC) 755  
write-only bits  
    control 68  
    definition 74

**X**

XOr (Integer Bitwise Xor) 1057

XSDT  
    definition 33  
    loading Definition Block 994  
    location 110

**Z**

Zero (Constant Zero Object) 1057  
Zero, One, Ones data type, ASL 921, 926  
zones, thermal See thermal zones