
# Technical Documentation

Crab Tracker

## Noah Strong

Revision 1.1-WIP May 26, 2018

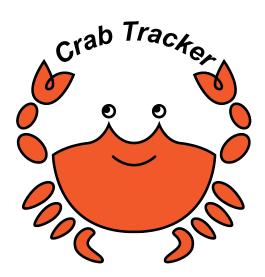

## Contents

1	Intr	roduction	2
2	Bac	ckground and Overview	2
	2.1	Motivation For The Project	2
	2.2	Description of Components	2
3	Elec	ctronics Hardware	3
	3.1	Transmitters	4
	3.2	Receivers	4
4	Con	mputer Hardware	5
	4.1	Timestamp Recorder	5
	4.2	Data Processor	5
	4.3	Wiring Diagram	6
5	Soft	tware	7
	5.1	Timestamp Recorder Software	7
		5.1.1 Storage, Setup and Loop	7
		5.1.2 SPI Handling	7
		5.1.3 Pin Change Detection and Timestamping	8
	5.2	Data Procesesor Software	9
		5.2.1 Overview of Files	9
		5.2.2 Processing and Structure	10
$\mathbf{G}$	lossa	ury	11

## 1 Introduction

The Crab Tracker project was designed as a cost-effective means of remotely tracking crabs through acoustic signals. Small piezoelectric transmitters can be waterproofed and attached to crabs, and their intermittent signals can then be received by a set of four piezoelectric receivers configured in a square array.

Because this product was built with very few "off-the-shelf" components, it is somewhat complex and many of the finer details may be difficult for future collaborators to infer based on the existing documentation. This document aims to provide a technical overview of the project, including the rationale for some of the design choices, in hopes of giving the reader a deeper insight into the inner workings of the product.

## 2 Background and Overview

### 2.1 Motivation For The Project

While solutions already exist to aid in the tracking of aquatic animals, they are often prohibitively expensive without significant financial resources. The Crab Tracker product has been designed with cost and simplicity in mind, so a majority of the components, including both hardware and software, are custom-made. However, much of the product, especially the software, has been designed in a "modular" fashion, meaning that the various components are not tightly coupled. Simply put, future researchers should be able to exchange various components to better fit their needs with relative ease.

## 2.2 Description of Components

Our solution uses high-frequency audio broadcasts to transmit data about each crab to a central receiving station (likely mounted on a kayak or similar water vessel). At the receiving station we have four piezoelectric receivers, or "hydrophones," which are tuned to detect the signals that the crabs' transmitters broadcast. These hydrophones are arranged in a square shape with equidistant side lengths, and all are to be submerged an equal depth into the water.

As acoustic transmissions reach the hydrophone receivers, two distinct processes must be run. The first process is to detect incoming signals and label them with accurate timestamp values. Once this is done, software must run calculations using these timestamps to decode the unique identifiers of the broadcasting transmitter(s) and to determine the direction from which the sound(s) originated. Because the latter task requires a mild amount of computation time, and because the former task requires low-latency monitoring of the input devices, these two tasks are to be performed on separate physical computers.

The first of the two devices, referred to as the Timestamp Recorder (4.1, has the simple but important task of timestamp incoming data. As of the current revision of this document, we

have tested the system with an Arduino Nano, a small, inexpensive microcontroller with a clock speed of 16MHz. Once broadcasts are detected and labeled with a timestamp, the device can send this data to the Data Processor (4.2) that will run the calculations. We originally investigated using the popular Inter-Integrated Circuit (I<sup>2</sup>C) protocol for this, but unfortunately I<sup>2</sup>C can't be interrupted during a transfer, and therefore the device would be effectively frozen (and therefore unable to detect incoming data) any time a transfer was in progress. If any data were to come into the device during a transfer, its timestamp would be delayed and therefore inaccurate. Instead, we opted to use a similar protocol, Serial Peripheral Interface (SPI). The advantage of SPI is that data can be placed into a separate physical bus on the device when it is ready to be transmitted, and the other machine can fetch that data without affecting the detection and timestamp code.

The Data Processor (4.2), which runs calculations and displays results to the user, is a slightly more powerful computer. We opted to use a Raspberry Pi Model 3B for this task, as these machines are inexpensive, reasonably powerful, well-supported, SPI-compatible, and easy to develop on. We also purchased a 7-inch touchscreen made specifically for the Pi as a means for the user to interact with the system in the field. The Pi is directly wired to the Arduino for SPI. See Figure 1 for an illustration of these components.

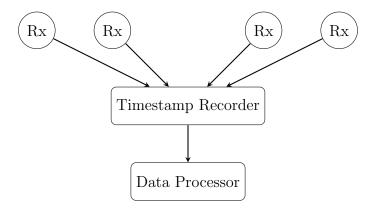


Figure 1: A simple diagram detailing the main components. Each circle labeled Rx is a receiver.

For a more detailed version of this figure, see the Wiring Diagram (3) in Section 4.3.

### 3 Electronics Hardware

While both the Arduino and the Raspberry Pi were off-the-shelf products, the transmitter and receiver hardware was all custom designed and fabricated for use in this project. Clearer specifications, including detailed diagrams, are detailed in other documents and therefore many details will not be repeated here.

#### 3.1 Transmitters

The transmitters are small piezoelectric transducers that oscillate at an ultrasonic frequency. In our work, this frequency has been in the 40-60kHz range, depending on the resonant frequency of the transducer itself. Though we have not established bounds on our range of potential frequencies, the actual frequency shouldn't matter so long as the receiving hardware is appropriately tuned to pick up this frequency (through filtering, hardware characteristics, and so on). For example, our hardware was limited to roughtly 150kHz, because the microcontrollers we used don't have a high enough clock speed to drive the receivers at that rate.

Each transmitter is attached to a small Printed Circuit Board (PCB) designed specifically for the project. The PCB can power the transducer by feeding it a current, effectively turning it off or on as needed. Each board will be programmed with a unique identifier (a numeric value). The ID determines the pattern of pulses that the transmitter should emit. For more details on this, see the iCRAB Transmission Protocol document.

#### 3.2 Receivers

The receivers include small piezoelectric transducers that are able to detect vibrations in the same range as the transmitters. A preamplifier steps up the signal from the transducer before sending this signal along to a band-pass filter. The band-pass filter restricts the frequencies that the hardware will detect, meaning that a lot of irrelevant noise can be discarded. After being filtered, the signal is then amplified. A potentiometer on the board allows for variable amplification. Next, the signal is rectified (effectively producing the absolute value of the incoming sine wave). The low pass filter transforms the signal from a sinusoidal wave into a single pulse. Finally, the Schmitt Trigger acts as a variable threshold, preventing the rising or falling edge from being interpreted as a series of short rising and falling edges. See Figure 2 for details on this pipeline.

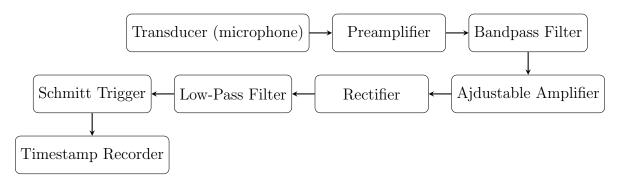


Figure 2: The receiver hardware pipeline.

The resulting digital signal is sent over a wire to the timestamp recorder detailed in section 4.1.

## 4 Computer Hardware

Signals detected through the receiving hardware described in Section 3 are delivered to more advanced microcontrollers and computers using common General Purpose Input Output (GPIO) pins. Two separate devices are used for the signal processing. The first, referred to in this document as the Timestamp Recorder (4.1), provides a low-latency means of detecting the time of an incoming signal. This device must be able to reliably detect when a signal arrives with sub-millisecond precision. Once timestamped, the data can be transferred to the Data Processor (4.2). This device decodes the ID from each transmission and displays the crab's direction to the user.

## 4.1 Timestamp Recorder

The timestamp recorder reads a digital signal on a GPIO pin and records the "time" at which the signal changed from low to high or vice versa. In this case, the "time" need not have any meaningful relationship to "wall clock" time, so long as the timestamps have some meaning relative to each other. For example, the time associated with a state change could be measured in microseconds since the board reset. Since the software (described in Section 5.2) is primarily concerned with the time separation between events, the epoch is irrelevant. It is important, however, that the Timestamp Recorder and the Data Processor computers agree on the units used, because some of the later processing will be based on the speed of sound in water, measured in meters per second.

In addition to providing reliable timing measurements when input pin states change, the timestamp recorder must also be able to communicate the timestamped data to another device. Use of a non-blocking protocol such as SPI is necessary here so that the data transfers do not have a large negative impact on the device's ability to continuously detect changes.

#### 4.2 Data Processor

The majority of the processing software exists on a separate device, referred to as the Data Processor. This machine reads timestamped data from the Timestamp Recorder (4.1) and stores it in its own local storage until it has enough data to run some calculations. This device is also the user's primary interface for interacting with the system in most use cases. Equipped with a touch-screen or other means of displaying data, the computer is able to display the unique identification numbers and relative locations of crabs as they are detected.

The software written for this project assumes that the Data Processor is a Linux-based machine with an SPI interface. Specifically, it has been tested on a Raspberry Pi 3B, which is a very suitable device given its low cost, built-in GPIO pins, and adequate processing power.

## 4.3 Wiring Diagram

This section demonstrates in greater detail how the various components are connected to each other. Note that though we use a 7" touchscreen from AdaFruit built specifically for projects with the Pi, wiring for the screen is not included in the following diagram. In Figure 3, the Pi, Arduino, and a receiver are shown. Note that each of the other receivers could be connected in the same way that Receiver 1 is connected; that is, they need to be tied to the common ground and they need their signal pin attached to the appropriate input pin on the Arduino.

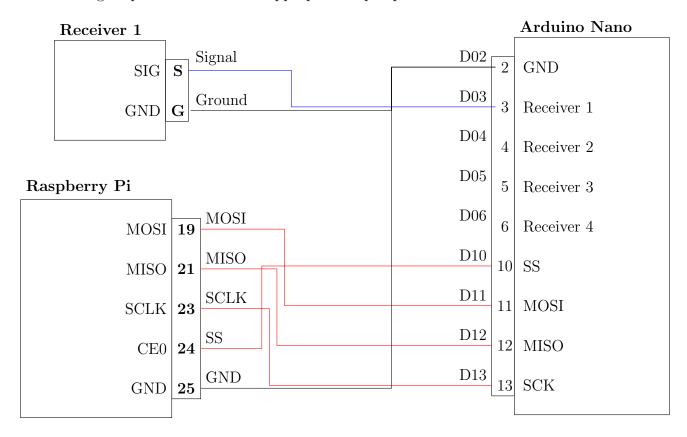


Figure 3: A wiring diagram for the devices at the receiving station.

SPI uses four shared wires. Briefly, the purpose of each is:

- MOSI Master-In-Slave-Out data from the slave to the master (such as timestamps and pin values).
- MISO Master-Out-Slave-In data from the master to the slave (used for flags, in our case).
- SCLK The clock. Driven by the master node.
- SS or CE is the Slave Select or Chip Enable line. SPI supports multiple slave devices, so the master node uses the Chip Enable line to turn on one slave at a time to communicate. In our case, since there is only one slave device, we know that the CEO line will always be active during a transfer.

## 5 Software

Wherever possible, the software for this project was written in such a way that various elements may be altered or entirely replaced without requiring major changes to the rest of the codebase. The hope is that it is flexible enough to be adapted for new scenarios and hardware setups in the future. That said, it has only been tested with the hardware detailed elsewhere in this document, so its portability and modularity is unproven.

In this section, we will examine the software that runs on the two devices described in Section 4.

### 5.1 Timestamp Recorder Software

The relevant source code can be found here: src/arduino-src/arduino-src.ino in the project source or on GitHub.

The Timestamp Recorder (4.1) software has two primary functions: (1) record timestamps of signal changes (i.e. when a pin goes high or low) and (2) transfer the timestamps and pin values to the Data Processor.

The arduino-src.ino file is heavily documented, so this document will step through the major sections without providing extensive detail about individual lines. Instead, we will examine in broad strokes the data formatting, data transfer, and input pin change detection.

#### 5.1.1 Storage, Setup and Loop

Data is stored in a bounded buffer where each entry contains a timestamp value and the state of the pins at that timestamp (i.e. which pins were high and which were low). The timestamp is a 32-bit unsigned long and the pin values are all stored in a single byte where each bit corresponds to a single pin. The pinvals are shifted such that the lowest order bit corresponds to pin D3. A 1 in position 0 means that pin D3 is high; 0 means low. (Note that a few of the low-order pins on the board are reserved for special purposes, so the receivers are to be attached to pins D3 through D6.)

The setup() function sets the GPIO pins on Port D (pins 0-7) as input pins, meaning that another device (in this case, a receiver, as described in section 3) can drive the line high or low. The Timestamp Recorder can detect these changes when the pins are in input mode.

The loop() function runs indefinitely and on each iteration it can fill the SPI data register and/or detect and timestamp a change on one of the pins. We will examine both of these primary functions in more detail in the following two sections.

#### 5.1.2 SPI Handling

SPI is a synchronous serial communication interface that is natively supported by both the Arduino and the Raspberry Pi. It supports a single "master" node and multiple "slave" nodes. When the

master node is ready to transfer data, it selects one of the slave devices by making its Chip Enable/Slave Select line active and then begins pulsing the clock. More details about the SPI protocol can be found online.

The Arduino Nano has a built-in SPI bus that supports 8-bit data transfers. On a transfer, the master node provides a clock pulse and on every pulse, one bit is shifted out of the data register (sent to the master) and one bit is shifted in (sent from the master).

On each iteration of the loop, the Arduino checks to see if the "End of Transmission" flag is set, which indicates that a transfer has completed. If it is set, the board can fill the Data Register with the next byte to be sent. The next time the master requests data, the newly-loaded byte will be shifted out to that device.

As mentioned, the built-in SPI hardware supports 8-bit data transfers. However, each segment of data that we wish to transfer contains a 32-bit timestamp and an 8-bit state, meaning that it takes 5 individual transfers to send a segment (or "block") of data. When the master node requests data, the slave sends the pin values on the first transfer, and then sends the timestamp in 8-bit chunks over the course of the next four transfers, starting with the lowest order byte and working up to the highest order byte. Note that this means both the master and slave nodes must be in sync with each other, as there is nothing to indicate what kind of data is sent in a single transfer. The two devices may get out of sync if one is interrupted between transfers, such as when the master's software is stopped unexpectedly. In this case, when the master's software restarts, it will expect to read pin values on the first transfer, even though the slave node may be prepared to send part of a timestamp.

To solve this issue, the SPI master node can send flags to the slave that will alter the slave's state or behavior. Certain values that the master can send will induce specific behaviors on the slave. For example, the SPI\_ECHO\_REQUEST flag, when sent, will cause the slave to send the SPI\_ECHO\_RESPONSE value on the next transfer. This is used when the master's program starts up in order to ensure that the two devices are correctly connected. The SPI\_RESET flag will re-position the de-facto "read heads", meaning that it will send a new state starting with the pin values on the next transfer. This functionality is utilized to ensure that the two devices stay in sync when one of them restarts while the other runs.

#### 5.1.3 Pin Change Detection and Timestamping

Pin change detection is comparatively straightforward. Each time the loop runs, the current state of the relevant pins (D3..D6) is compared with the state recorded from the previous iteration. If the two states differ, this indicates that at least one pin changed from low to high or vice versa. When this is the case, the device stores the new state in a circular buffer along with the current time.

As of the current revision of the document, the timestamp is generated from the TCNTO clock, which increments every four milliseconds. This is an inadequate granularity for the purposes of this project, so future revisions of the code will instead read from a source that can generate ticks at a higher rate (for example, a clock cycle counter, or a timer set up to increment every few microseconds).

Note that no matter the units used, we should expect to store no more than 32 bits of information for any given timestamp. Therefore,  $2^{32} \approx 4.3$  million is the highest value we can represent. Limited precision means that a source that increments frequently will overflow more rapidly than a slower source, which leads to an important trade-off. A 4-millisecond timer will overflow every  $4 \times (4.3 \times 10^6)$  milliseconds, or roughly once every 4,772 hours. However, a timer that increments once per microsecond will overflow every 1.1 hours (or roughly 72 minutes). Currently, overflowing timer values are not handled by any part of the software; instead, any such data will automatically be thrown out. In other words, if a transmission is received while an overflow occurs, such that some timestamps have extremely high values while others have extremely low (near-0) values, that transmission will be ignored. No attempt is made to account for the overflow, though to do so is well within the realm of possibility for future work.

#### 5.2 Data Processor Software

The relevant source code can be found in multiple files in src/pi-src/ in the project source or on GitHub.

#### 5.2.1 Overview of Files

The primary functions of the various files are as follows:

- main.cpp The main loop of the program. This file periodically polls the SPI slave device and then runs routines to process any data that is fetched.
- data\_collection.cpp When SPI data is read, the functions in this file parse and store the data in more meaningful structures. For example, when a rising and subsequent falling edge are detected on a given pin, a ping object is stored containing these timestamps. The data collection code also steps through the collected data to determine if enough pings have been collected for the direction algorithm to run. For more details, see Section 5.2.2.
- direction.cpp Using an algorithm developed by one of the team's developers, Chloe Yugawa, this code determines the relative direction of a crab given the timestamps of its pings. That is, it performs a type of Time Difference On Arrival calculation based on ping times. It returns a direction relative to the front of the boat in cylindrical coordinates in the form  $(r, \theta, z)$ . For more information, see the following document: **TODO:** link to document when it is pushed to master
- spi.cpp This file facilitates and abstracts away the communication with the SPI slave device. Routines in this file can determine if the devices are properly connected and will also ensure that the master and slave devices are in sync with each other.
- uid.cpp Each transmitter broadcasts in a specific pattern based on its unique identifier. The code in this file examines the duration of and delay between two pings in order to determine which transmitter created a given broadcast.
- util.cpp Various helper methods are located here.

#### 5.2.2 Processing and Structure

Each file contains extensive documentation, so the finer details about various functions and variables will not be duplicated in this document. Instead, we'll take a broad look at how these pieces fit together.

When data is read from the Timestamp Recorder, it is translated from raw pin states into something more meaningful, such as a "ping" (that is, a single broadcast as measured by the rising and falling edges of a signal on a single pin). Pings are collected in a set of buffers, with one buffer for each pin. These buffers are managed by the data\_collection.cpp code. Since the iCRAB Transmission Protocol protocol mandates that every transmission consists of two pings, no calculations are performed until a pair of pings is detected by all four hydrophones. Each time a new ping is detected, these arrays are searched for matching pairs. If there are two pings in every buffer, and they all share the same ID and are spaced apart correctly (temporally, based on iCRAB Transmission Protocol specifications), they are all returned as a set of 8 pings to the main loop of the program, which then runs the direction calculation algorithm. If the direction algorithm is able to determine an approximate location for the signal\*, the direction and associated ID can be reported to the user.

\* Note that the direction algorithm will intentionally fail if it is given impossible data. That is, if the timestamps are too wildly separated temporally, it will assume that the measurements are not from the same transmission and will therefore cease to calculate a direction.

## Glossary

 ${\bf GPIO}\,$  General Purpose Input Output. 4, 5, 7

 ${f I}^2{f C}$  Inter-Integrated Circuit. 3

iCRAB Transmission Protocol Our custom encoding protocol for transmitters. 4, 10

PCB Printed Circuit Board. 4

**SPI** Serial Peripheral Interface. 3, 5–9