# LAB 1: Exploring Digital Sampling, Fourier Filtering, and Heterodyne Mixers

# Contents

1	Introduction	2
2	Goals	2
3	Schedule	3
4	Software Engineering	3
5	Digitally Sampling a Sine Wave (Lab Activity, Week 1)  5.1 Handouts and Software	5 5 5 6
	5.4 Leakage Power	7 7 7 8
6	6.3 Power Spectra and Discrete Fourier Transforms	9 10 10 11
7	7.1 The Double-SideBand (DSB) Mixer  7.2 Intermodulation Products in Real Mixers  7.3 The Single-Sideband Mixer (SSB Mixer)  7.3.1 Reverting to a DSB Mixer	12 13 13 14 14
8	8.1 The Heterodyne Process	14 14 14 16
9	Writing the Lab Report (Week 3)	18

#### 1. Introduction

In this lab, we experimentally investigate digital samplers, discrete Fourier Transforms, and mixers. These are tools of the trade in radio astronomy, and you use them every day when you use a cell phone, listen to the radio, or watch television. Did you know that WiFi was invented by a radio astronomer?

To get firm footing in the methods of radio astronomy, you will perform a series of experiments that illustrate the utility and hazards of these various techniques. You will configure equipment in the lab, acquire and analyze data, and store and illustrate the results. The signal processing pipeline you build in this lab will be re-used in Lab 2 to observe 21-cm line emission from hydrogen in the Milky Way, so put in the time to make it work and understand it. The effort you invest now will pay dividends later in the class.

This first lab is an excellent time to establish good research and laboratory practices. Remember that your grade is determined by the report you turn in three weeks from now. All of the exercises that fallow are aimed at building your understanding and giving you the raw materials (and data) out of which to build that report. You don't have to finish everything, or proceed in the in order presented, but you do have to write a quality report that addresses the goals in §2.

Here are some specific suggestions for turning these lab instructions into a successful report:

- Keep careful notes, preferably in a **lab notebook** that you write in as you hook things up. Good notes document how the data are derived from the experimental setup so you can describe it accurately and track down mistakes. If you show your knowledgable GSI a head-scratcher of a plot but cannot remember which port of the mixer you plugged the noise into, they may have trouble diagnosing your problem.
- Back up (or revision control) your data, code, and plots. Nothing is more demoralizing than re-doing work or being unable to find the combination of parameters that reproduce a result.
- Start your report early. If you plan for which equipment, data, and plots you need for your report, your time in the lab will be spent more efficiently and you will avoid the panic that comes from writing up at the last minute.
- Formal lectures, the pages linked on AstroBaki, and these lab instructions are resources to help you write a strong report. As in real-life research, there is no one text book containing everything you need to know. Explore, take notes, and show me what you learned in your report. Remember, I can only grade you on what you write down. Make sure what you write down is your own work, in your own words. Cite sources external to this class (no need to cite AstroBaki, lecture, or the lab instructions).
- Your reports will be in the style of scientific publications. They are narratives of explanation and discovery that bring the reader—a science colleague—to the point of being able to understand and have confidence in your results. You may be presenting your work, but this report is about the reader's journey, not yours. It is a presentation of synthesized results with the background and salient details necessary to understand them. It is not a play-by-play of everything you did, all the plots you made, and all the wrong turns along the way.

#### 2. Goals

The goals of this lab—the results your report should demonstrate you have achieved—are as follows.

- Learn how to sample electronic signals and convert them into digital signals. Demonstrate the phenomenon of aliasing and quantitatively relate that to the Nyquist criterion.
- Learn how to correctly use and display Discrete Fourier Transforms (DFTs) to determine the frequency power spectrum of a time series. Correctly calculate and label frequency and power axes in plots and demonstrate understanding of how frequency ranges and resolutions are determined from the duration and cadence of samples in a time series.
- Learn about negative frequencies. Motivate and measure how complex inputs to a Fourier Transform break the positive/negative frequency degeneracy.
- Learn about the origin of noise in electronic measurements and explore how the noise behaves under the Fourier Transform.
- Learn about the convolution/correlation theorem, demonstrate how spectral leakage in a power spectrum can be understood in this framework, and identify the relationship between autocorrelation functions and power spectra.
- Learn the basics of mixing for frequency conversion (the heterodyne technique) and explore
  how electronic mixers differ from ideal ones. Construct double- and single-sideband mixers and use measurements to demonstrate the theoretical and practical differences in their
  operation.

In order to achieve these goals, you will be developing technical skills that are crucial, but need not be written about explicitly in your report. (The quality of the report itself will demonstrate your growing proficiency.) These include:

- Using the Python programming language for analysis, signal processing, and plotting,
- Learning enough LATEX to write up your results in a formal lab report that including an abstract, captioned figures, tables, and citations.
- Gaining familiarity with configuring laboratory equipment and navigating the computing environment.

#### 3. Schedule

This is an ambitious lab with a steep learning curve. It is important not to get behind or backload your work schedule. In particular, writing the report takes a lot longer than you might think.

- 1. Week 1. Finish §5 and read the accompanying material in §6. Be prepared to show work, software, and results to the class.
- 2. Week 2. Finish §7 and read §8. Again, be prepared to present to the class.
- 3. Week 3. Read the handouts in §9 and write your formal report. Refer to our handouts and linked material for tips on how to structure a scientific paper. You will be graded on the degree to which your report addresses the specific goals in §2 and conforms to standards of a quality scientific publication.

## 4. Software Engineering

The programming required to complete these labs will increase in scale throughout the semester. As it does, you will need to learn to organize, document, test, and stabilize your code. The process of building sound code is broadly referred to as software engineering, and it may be one of the most marketable skills you learn in this class.

Learning to engineer good software can take a lifetime, but let us start with a few principles in this lab.

- Package your code. Keep files containing code together in directories that are separate from the data you acquire. Organize your code into functions and classes, and put the definitions in separate, importable files called modules. Modules separate the definition of the code from the scripts and notebooks you use to execute code with changeable parameters. Packaging code vastly improves organization, testability, and the degree to which you can re-use good code. Functions, classes, modules, and installable **packages** are easy to implement in Python, and there are many resources online to teach you how to use them.
- Code (at least) twice. It is nearly impossible to write well-organized code while figuring something out for the first time. You need room to hack at the problem, try and fail, learn and iterate. Code once to get a sense of how your program should work, then re-code it to get the organization and interfaces right. Time spent organizing and testing code up front will pay dividends later.
- Test your code. How do you know your code is doing what it should? Yes, it may run without raising an exception, but that doesn't mean it did what you intended. In software as in science, you can only trust something to the extent that you have tested it. Keep your tests organized so that you know what you have tested, and how. Modular testing (a.k.a unit testing) is the key to success in large software projects, particularly ones involving multiple people. The unittest module is commonly used in Python, but other modules have their own merits.
- Control your revisions. Revision control uses a specialized program (git is popular) to track the changes made to your code. They allow you to edit code with impunity, knowing that you can always ask for a report on what you changed and where, and you can always backtrack to a previously committed state of the code if you screw something up. I suggest opening a (free) GitHub account, initializing a project for this class, and then committing to it regularly. GitHub works with git to back up your work remotely, and it also allows you to easily synchronize your work across multiple computers. It is seriously worth the learning curve.

Advanced software engineering combines all of the steps outlined above, using online repositories to hold various branches of a software project, and when any of a community of coders push their changes, a continuous integration system runs unit tests on the code to make sure that nothing was broken, that the new codes defines new tests it must pass, and that all the code conforms to reasonable documentation and legibility standards. Code reviews examine changes that are made and submitted through pull requests, and then the changes (often multiple in parallel) are merged into the master code base of the project.

We don't need the advanced machinery for this class, but it is good to be aware of how coding communities work and to start down the path of good coding practices yourself. Try to improve your software engineering practices using the suggestions above.

At a minimum, firmly separate data acquisition (the code that runs and interacts with equipment in the lab and at the telescope) from data analysis. For the former, scripts that run from the command line are most appropriate. For the latter, jupyter notebooks are a fantastic tool. If you have code that needs to run under both environments, write modules that you can import into

either.

## 5. Digitally Sampling a Sine Wave (Lab Activity, Week 1)

#### 5.1. Handouts and Software

Your work this first week will require you to navigate the Linux operating system, using your (Vi/Emacs/3rd party) text editor to write Python. On Astrobaki<sup>1</sup> we have linked primers on Linux/Unix, Python Installation and Basic Programming, Unix Text Editors, and Revision Control. You can also review the key course content for this week: Nyquist Sampling and the Fourier Transform.

## 5.1.1. The ugradio Python Package

Modules are a way to distribute and reuse Python code. They are themselves just bundles code that you import into your program, where you can access everything as if you'd written it yourself. Packages are bundles of modules that can all be installed together. For this class, we will be using the ugradio package to provide supporting code for your labs. This package is already installed on the lab computers (you can test this by opening ipython and typing import ugradio). If you ever need to install it on another computer, all of the code is on GitHub and linked to from the course website.

You will make use of two modules inside of the ugradio package: pico, and dft. Take a minute to browse the code in these two modules so that you understand how to use it.

- ugradio.pico runs the PicoSampler Analog-to-Digital Converter to digitally sample signals. This is essential.
- ugradio.dft provides code for doing arbitrary Discrete Fourier Transforms. This contrasts the functionality of numpy.fft, which can only do certain kinds of Discrete Fourier Transforms, but can do them very fast.

#### 5.2. Your First Digital Sampling: the Nyquist Criterion

In class, we learned about the Nyquist criterion for sampling discretely in time. Sampling too slowly results in a signal being aliased, but oversampling generates excessively large data files. Let us determine the optimal balance by sampling a sine wave and comparing the recovered signal to the original for different ratios of the signal frequency ( $\nu_0$ ) and the sampling frequency ( $\nu_s$ ).

In the lab, we will sample signals using a PicoSampler 2000 Analog-to-Digital Converter (ADC). The sampling frequency is set during data acquisition with the capture\_data function in ugradio.pico module, but the ADC only samples at quantized values of 62.5 MHz/N, where N (set by the divisor parameter) is a small integer. However, we can set  $\nu_0$  with arbitrarily high precision using a signal generator, so instead of trying different sample frequencies for a fixed  $\nu_0$ , we will do the reverse:

- Pick a convenient sampling frequency  $\nu_s$ , then
- Set the synthesizer to frequency  $\nu_0 = (0.1, 0.2, 0.3, \dots, 0.9) \nu_s$  and take data.

<sup>&</sup>lt;sup>1</sup>https://casper.ssl.berkeley.edu/astrobaki/index.php/Undergraduate\\_Radio\\_Lab

We suggest using a co-axial T joint so you can put a copy of the signal you are sampling into an oscilloscope. Good science is about inspection, verification, and documentation. In that spirit, inspect the signal you are sampling at each step with the oscilloscope, verify that it matches that amplitude and period you set on the function generator, and document the settings used and files generated in your lab notebook.

Use ugradio.pico.capture\_data to get your data, which will appear in the form of a numpy array. You should save this array to a file with numpy.save or numpy.savez. Your analysis scripts can then load data from this file with numpy.load. The sampler gives you nsamples=16000 samples, which is to say that you can change how many samples you request, but it defaults to 16000. Be sure to set the peak-to-peak voltage of the ADC so the input signal does not saturate it, but is much bigger than the quantized states of the ADC.

For each dataset, use the matplotlib.pyplot package (typically imported as import matplotlib.pyplot as plt to plot the digitally sampled waveform versus time. For plotting, it is easier to visualize fewer samples, so if you load a waveform from file into a variable data, you can slice off the first, say, 200 samples with the command data = data[:200]. Make the plot informative by putting the x axis in time units (e.g. plt.plot(times, data) instead of plt.plot(data)). Does the period match what you expected?

If you would like to use this (or any) plot in your report, make sure you label both axes (with appropriate units to avoid tiny or huge numbers) give it a title, and restrict the range to an appropriate scale where you can clearly see the signal shape and frequency. You will also need to come up with an appropriate caption that stands alone as a description of the plot and what it demonstrates.

For each of the datasets you take, derive and plot the Fourier power spectrum (e.g. the square magnitude of the voltage spectrum; see §6.2 and §6.3). You can use numpy.fft to do the Fourier transform, but we suggest using our homegrown ugradio.dft version until you have mastered dealing with Fourier units and the subtleties of fftshift.

Now, examining the results, draw your own conclusion: what is the minimum sampling rate  $(\nu_{s,min})$  that accurately reproduces the spectral frequency  $\nu_0$  in the sampled data? That is **Nyquist's criterion**.

#### 5.3. Voltage Spectra and Power Spectra

Power spectra show which frequencies are occupied by signal power by telling us about the magnitudes of the complex numbers in the Fourier transform. Voltage spectra, by contrast, give us phase information, with real and imaginary parts.

What does it mean, that the voltage spectra are complex? What do the real and imaginary parts represent? Is the imaginary part less 'real' than the real part? What does it mean, for frequencies to be negative versus positive? These are questions your lab report could try to answer.

For one of your data captures in the previous section, plot the real and imaginary parts (e.g. spec.real and spec.imag) of the voltage spectrum on the same panel in different colors. Do the plotted points exhibit any symmetry between negative and positive frequencies?

Repeat this process on independent data streams to ensure the result is not a fluke. When you compare the plots for several independent data captures of the same sine wave, do the voltage spectra repeat identically? Why not? What is happening when sometimes the real portions are

positive or negative? When the imaginary portions have more amplitude than the real ones?

For the power spectra, repeat this symmetry examination and the test for repeatability. What kind of symmetry do the power spectral points exhibit? Why might we use power spectra instead of voltage spectra, and vice versa?

Choose a power spectrum and take its inverse Fourier transform. For this to work, you need to make sure dft.idft correctly infers the frequencies corresponding to each bins in your power spectrum array, Separately, calculate the autocorrelation function (ACF) directly from the voltage time series manually with dft/idft, with numpy.correlate, and with scipy.signal.correlate. According to the correlation theorem, the Fourier transform of the power spectrum should equal the ACF. Does it? Explain any differences.

## 5.4. Leakage Power

By default, dft calculates a power spectrum at N frequencies for a signal with N time samples, each frequency separated by  $\Delta \nu = \nu_s/N$ . (For Fast Fourier Transform (FFT) operations like numpy.fft, this correspondence between time and frequency samples is hard-coded.) For some of the waveforms you captured above, calculate the power spectrum with  $N_{\text{freq}} \gg N$ , contrary to the recommendations in §6.2. Use dft and choose frequency increments much smaller than  $\Delta \nu = \nu_s/N$ . Use a logrithmic vertical axis to see if there is nonzero power at frequencies other than  $\nu_0$ . This is evidence of spectral leakage, which affects all power spectra calculated using Fourier techniques.

Can you explain mathematically why you might find power at  $\nu \neq \nu_0$  using a Discrete Fourier Transform?

#### 5.5. Frequency Resolution

If you had two spectral lines (sine waves), how closely spaced in frequency could they be and still be resolvable? Investigate this experimentally by combining the output of two function generators in a power splitter. (A splitter run backward is a combiner.) Use two frequencies very close together and plot the power spectrum again using points more closely spaced in frequency than the  $\Delta \nu = \nu_s/N$ .

How close together can the two frequencies be for you to still distinguish them? This is called the **frequency resolution.** How does it depend on the number of samples used in the DFT? In particular, how does it compare to time interval that those samples span?

Can you explain your findings mathematically?

## 5.6. Nyquist Windows

Above, we calculated spectra for frequencies in the range  $\pm \nu_s/2$ . What happens if we increase this range?

Explore by taking a Nyquist-sampled time series and calculating the power spectrum for a much larger frequency range,  $\pm W\nu_s/2$ , where W is at least 4, centered on the original frequency interval. Each value of W gives you a spectrum in a different **Nyquist window**. How do the spectra in different Nyquist windows compare? Note that, for W > 1, you are calculating power spectra for frequencies that violate the Nyquist criterion, yet the results are sensible, in their way. In Lab 4, we will use a digital spectrometer that samples the  $12^{th}$  Nyquist window.

This shows that the strictly correct statement of the Nyquist criterion is that the bandwidth—the frequency range of the signal *including negative frequencies*—must not exceed  $\nu_s$ . For the first Nyquist window this is equivalent to the simpler statement of the Nyquist criterion we first explored.

#### 5.7. Fourier Transforms of Noise

Noise comes into our data from a variety of sources. Here, we restrict the term noise to refer to random fluctuations with a known statistical distribution (in our cases, this is almost always a Gaussian with mean zero). We are careful to distinguish this from such things as: systematic contributions to error, bias, ambiguity, and posterior likelihood. Unlike how we use the term colloquially, noise has a specific meaning in science, so be careful with it.

Many of the astronomical signals we observe are, in fact, noise. Blackbodies are noise sources: a blackbody at temperature T emits statistically random electromagnetic waves with specific intensity (power per area per Hz per solid angle) given by the Planck function

$$B_{\nu} = \frac{2h\nu^3}{c^2} \frac{1}{e^{h\nu/kT} - 1}.\tag{1}$$

As radio astronomers, we operate in the regime where  $h\nu/kT\ll 1$  (the Rayleigh-Jeans limit), so the blackbody formula simplifies to:

$$B_{\nu} \approx \frac{2kT}{\lambda^2}.\tag{2}$$

Notice, the noise power depends linearly on T.

For a number of good reasons, radio astronomers choose to measure noise power in units of temperature and define a brightness temperature  $T_B$  such that  $I \equiv 2kT_B/\lambda^2$  for an observed specific intensity, even if the radiation source is, say, the galactic synchrotron and not even remotely thermal.

Using this framework, all sources of power in our measurement can be related to a temperature, including the receiver noise that is added to our incoming astronomical signal by the thermal motion of electrons in our amplifiers and resistors (otherwise known as **Johnson** noise). This noise (which, by the Central Limit Theorem, is almost always Gaussian) has a variance that is characterized by receiver temperature,  $T_{rx}$ , and adds onto the brightness temperature,  $T_B$ , that characterizes the variance of signal coming through the antenna feed of the telescope.

For calibration and testing, we have laboratory sources of noise. Explore the properties of digitally sampled noise:

- Connect the noise generator to a ~ 6-MHz wide bandpass filter (the MiniCircuits SBP-21.4 filter) and take a 16000-point time series with the ADC. These samples are voltages. What is the mean voltage over this sample? What is the variance? The standard deviation (which, for a zero-mean signal, is the same as the root-mean-square, or rms)?
- Plot a histogram of the sampled voltages (see numpy.histogram—for documentation, type numpy.histogram? in IPython). The histogram should look Gaussian, with a width equal to the rms voltage. Overplot this theoretically-expected Gaussian. Does it look like your observed distribution?
- Take 32 blocks of 16000 samples with the ADC. Compute the power spectrum of each block, as well as the average of all 32 power spectra.

- Plot the power spectrum for a single block and compare to the above average. Do the same for the average of N blocks, where N = (2, 4, 8, 16) What you are doing here is looking at how integration time affects the signal-to-noise ratio (SNR): the 'signal' is the relatively smooth distribution that emerges with long integration times. The 'noise' is the scatter you see around that value. How does SNR depend on N? (Hint: SNR is proportional to  $N^x$  for some value of x.)
- Calculate the ACF (by manually computing Fourier transforms and by using numpy/scipy's version) for all 16000 samples in a block. Zoom in on delays of  $\leq 2000$  samples. Also derive the power spectrum from this ACF and compare with the Fourier-transform-derived power spectrum for the same block. Are they identical? Compare the width (full-width half-max, or FWHM) of the ACF ( $\Delta \tau_{FWHM}$ ) with the FWHM of the power spectrum ( $\Delta F_{FWHM}$ ). Are they related?

## 6. Fourier Transforms, Analytic and Discrete (At Home, Week 1)

## 6.1. The Analytic Fourier Transform

A Fourier transform maps a function between two complementary coordinates which for now are usually time, t, and spectral frequency,  $\nu$ . The input to a forward Fourier transform is a signal versus time, E(t); the output is a signal versus frequency,  $\tilde{E}(\nu)$ , which is computed as

$$\tilde{E}(\nu) = \int_{-T/2}^{T/2} E(t)e^{2\pi i\nu t} dt \ . \tag{3}$$

The input signal E(t) is multiplied by a complex exponential and integrated, so the  $\tilde{E}(\nu)$  is a complex-valued function. Of particular importance is that the Fourier Transform is **invertible**: you can get back to the time domain using the inverse transform

$$E(t) = \frac{1}{B} \int_{-B/2}^{B/2} \tilde{E}(\nu) e^{-2\pi i \nu t} d\nu .$$
 (4)

This works because (complex) sine waves form a **basis** over the space of functions. Any function can be expressed exactly and uniquely by its Fourier coefficients  $^2$ 

For those of you looking for applications of that linear algebra class you took, the Fourier transform (FT) is a linear matrix operation akin to a rotation. As such, it has nice properties like:

- 1. linearity: the FT of a sum is the sum of the FTs,
- 2. invertibility: there is no information loss in the FT; it can be undone, and
- 3. unitarity: the FT is power-preserving.

 $<sup>^2</sup>$ You may wonder how the integration limits B and T are defined above. In the proper analytic formulation, they are both infinity. We emphasize their boundedness here because, in practice, neither can be infinity, and this necessarily introduces spectral leakage. Also note that, according to the Fourier conventions we've written here, our forward FT does not divide by the integration interval, but the inverse FT does. These conventions match the numpy.fft and ifft conventions.

## 6.2. The Discrete Fourier Transform (DFT)

The difference between an analytic Fourier transform and a discrete Fourier transform is that signals sampled at discrete intervals are no longer continuous. This means that integrals become somes, and the Nyquist criterion applies.

You have multiple discrete Fourier transform implementations at your disposal. Eventually, we would like you to use numpy.fft, which is fast (it can handle millions of points), but does not allow you to choose which frequencies are in your output. It also has the (sensible but confusing) feature that, in the output spectrum puts the zero frequency in the 0th array index, counts upward through the positive frequencies, then switches in the middle to the most negative frequency and continues counting in the positive direction toward zero. The inverse Fourier transform numpy.fft.ifft requires the input spectrum to be in this order to work properly.

However sensible, this arrangement of frequencies is not ideal for plotting. There is a function fftshift that will swap the order to a plot-friendly negative-to-positive order. However, once you apply this shift to your array, ifft no longer works as you expect. For this reason, I suggest only using fftshift in plotting calls to avoid confusion. See our "DFT's with DFT's" handout for details.

You should also take a look at fftfreq, which calculates the frequencies of the numpy.fft output.

For this class, we also provide the ugradio.dft module. It is slow, but it allows you to manually specify which output frequencies are desired, and it accepts and returns coordinate arrays (time and frequency, respectively) to facilitate clarity and transparency. We recommend using this module in the first week and for applications where you need to oversample the output frequencies. Otherwise, migrate to numpy.fft.

To use ugradio.dft, here are some recommendations:

- The set of sample times, N. Modern FFT libraries allow for arbitrary N, but performance improves if N has small prime factors. It is also advantageous to use even values of N, so that the zero frequency falls in the center of a bin. Powers of two are common. Our dft module is slow, though, and this won't help.
- Define the time range so that t=0 falls at the center of the range. For N even, there is no center time, so make the times run from  $-\frac{N}{2}/\nu_s$  to  $(\frac{N}{2}-1)/\nu_s$ .
- In specifying the frequencies for which you want the output  $\tilde{E}(\nu)$ , I suggest that you first calculate the output for N frequencies running from  $-\frac{\nu_s}{2}$  to  $+\frac{\nu_s}{2}\left(1-\frac{2}{N}\right)$ . This makes the frequency increment equal to  $\Delta\nu = \nu_s/N$  over a total range of just under  $\nu_s$ .

To find out how to use the DFT, you can type ugradio.dft.<tab> to see an auto-complete of what is available in the module. You can also type ugradio.dft?? to see the code, and of course, you can type ugradio.dft.dft? to see the documentation for the DFT function inside the dft module.

#### 6.3. Power Spectra and Discrete Fourier Transforms

We are often interested in the output **power spectrum**,  $P_{\nu}$ . Power is proportional to voltage squared. For complex quantities, the squaring operation means we want the sum of the squares of the real and imaginary parts. We obtain this by multiplying the voltage by its complex conjugate

(denoted by '\*'), 
$$P_{\nu} = \tilde{E}(\nu)\tilde{E}^*(\nu) \ . \eqno(5)$$

In Python, there are two ways to get this product. One is to use the conj function, i.e. P = E \* E.conj(). Should the imaginary part of P be zero? (answer: yes! Why is this?) Is it? (answer: not always! Why not?) To get rid of this annoying and extraneous imaginary part, try casting your array as a float.

The other (more convenient and suggested) way is to square the length of the complex vector, i.e. P = numpy.abs(E)\*\*2. The result is automatically real.

#### 6.4. The Power Spectrum and the Autocorrelation Function (ACF)

Facility with the **convolution theorem** and its cousin, the **correlation theorem**, is a requirement for radio astronomy.

The convolution of two functions E and F (here arbitrarily taken to be functions of time) is

$$[E * F](\tau) = \int_{-T/2}^{+T/2} E(t)F(\tau - t) dt, \tag{6}$$

and the correlation of the two functions is

$$[E \star F](\tau) = \int_{-T/2}^{+T/2} E(t)F(\tau + t) dt.$$
 (7)

Conceptually, these two functions describe sliding F over E by changing the delay parameter,  $\tau$ , which describes a time shift between the two functions. The only difference between convolution and correlation is the sign of t in the argument of F.

Using our definition of the Fourier transform from Equation 3, the convolution theorem states:

$$[\widetilde{E*F}](\nu) \equiv \int_{-T/2}^{T/2} [E*F](\tau) \ e^{2\pi i \tau \nu} d\tau = \widetilde{E}(\nu) \cdot \widetilde{F}(\nu)$$
(8)

and the correlation theorem:

$$\widetilde{[E \star F]}(\nu) \equiv \int_{-T/2}^{T/2} [E \star F](\tau) \ e^{2\pi i \tau \nu} d\tau = \widetilde{E}(\nu) \cdot \widetilde{F}^*(\nu)$$
 (9)

In words, the theorem states that the Fourier transform of the convolution/correlation of two functions is equal to the product of their Fourier transforms (with one complex-conjugated for correlation). If F(t) is symmetric, then the imaginary part of its Fourier transform is zero, which means  $\tilde{F}^*(\nu) = \tilde{F}^{(\nu)}(\nu)$ , and two theorems become identical.

An important application of this theorem is the case when E(t) = F(t), in which the correlation function becomes the **Autocorrelation function**  $ACF(\tau)$ , and equation 9 states that the power spectrum is equal to the Fourier transform of the ACF.

Because of end/wrap-around effects, these theorems apply strictly only in the limit  $T \to \infty$ . When calculating a digital version of the correlation function, you have to worry about end effects. Suppose you are calculating an ACF for N samples with delays  $\Delta N$  ranging up to N/2. Then the number of terms in the sum is always smaller than N because the delays spill over the edge of the available samples.

# 7. Mixers (Lab Activity, Week 2)

## 7.1. The Double-SideBand (DSB) Mixer

In this section, you will build a double sideband (DSB) mixer (Figure 1). A mixer is an electronic device that multiplies the two input signals. It is simple: the radio frequency (RF) signal goes into one mixer port, the local oscillator (LO) goes into the second mixer port, and the intermediate frequency (IF) product is output through the third port.

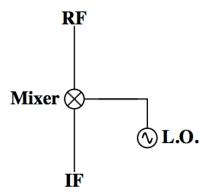


Fig. 1.— A DSB mixer. In the text, we sometimes refer to the RF input as the 'signal'.

Our mixer will be a Mini-Circuits ZAD-1, which has three BNC connectors and works well at these frequencies. The ZAD-1, like nearly all mixers, has its ports labeled R, L, and X or I, corresponding to the RF, LO, and IF, respectively. The ZAD-1 is a balanced mixer, so the R and L ports are identical, and it will not couple to DC or very low frequencies. To find out the frequency ranges a ZAD-1 supports on each input, look up its datasheet online.

Use the ZAD-1 to build a DSB. Assign a signal generator to be your LO with frequency  $\nu_{LO}$  and another to be your RF signal with frequency  $\nu_{RF} = \nu_{LO} \pm \Delta \nu$ . Here, you choose the frequency difference  $\Delta \nu$  and you set the two signal generators for each of two cases:  $\nu_{RF} = \nu_{LO} + \Delta \nu$  and  $\nu_{RF} = \nu_{LO} - \nu$ . Make  $\Delta \nu$  small ( $\sim 5\%$ ) compared to  $\nu_{LO}$ . For the input power level, a good choice is 0 dBm<sup>3</sup> for both synthesizers. The output consists of both the sum and difference frequencies, so choose the ports appropriately.

Digitally sample the mixer output and identify the sum and difference frequencies. Consider the Nyquist criterion and choose a sample rate. If you want enough samples per period to produce a reasonable facsimile of the analog sine wave, you may wish to sample at twice Nyquist, or even faster. Another parameter to consider is the number of points sampled, which must be large enough to capture a few periods of the slowest sine wave.

For the two cases  $\nu_{RF} = \nu_{LO} \pm \Delta \nu$ , plot the power spectra versus frequency. Explain why the plots look the way they do. In your explanation include the terms upper sideband and lower sideband.

For one of the cases, plot the waveform. Does it look like the oscilloscope trace? Also, take the Fourier transform (not the power spectrum) of the waveform and remove the sum frequency component by zeroing both the real and imaginary portions (this is **Fourier filtering**). Recreate

<sup>&</sup>lt;sup>3</sup>What does this "dBm" mean? It is the power relative to 1 milliwatt, expressed in decibels (dB).

the signal from the filtered transform by taking the inverse transform and plot the filtered signal versus time. Explain what you see.

#### 7.2. Intermodulation Products in Real Mixers

An ideal mixer multiplies two input signals, but real mixers are not ideal. Inside, nonlinear diodes are used to perform an approximate multiplication, but deviations from ideal behavior produce harmonics of the input signals and harmonics of the sum, and harmonics of harmonics. These undesired products are called **intermodulation products**. When a well-designed mixer is operated with the proper input signal levels, the intermods have much less power than the main product, but they can nevertheless ruin sensitive measurements.

Examine one of the power spectra obtained above using a logarithmic vertical axis. Do you see the forest of lines? See if you can identify how some of the stronger ones originate as harmonics of the main lines.

#### 7.3. The Single-Sideband Mixer (SSB Mixer)

A single sideband (SSB) mixer (Figure 2) is a little more complicated than the DSB mixer. It consists of two identical DSB mixers fed by an LO that is 90° phase shifted in the right-hand mixer. Hence, we can regard the left-hand output as being mixed with a cosine while the right-hand side extracts the sine component. together, they produce the real and imaginary components of a complex function that can now produce power spectra that contain different information at postive and negative frequencies. Engineers call this IQ sampling.

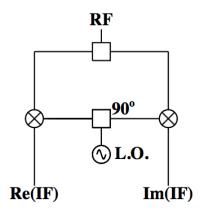


Fig. 2.— An SSB mixer. The important part is the 90° phase delay in the right-hand LO, which is normally produced with a quadrature splitter, but we can make it with a  $\lambda/4$  piece of cable.

From the block diagram in Figure 2, construct an SSB mixer that achieves the phase delay with a cable<sup>4</sup>. We will use it to experiment with no phase delay (a short cable) and a 90° phase delay (a long cable). For experimentation with this two-output mixer, use two frequency synthesizers, as before.

<sup>&</sup>lt;sup>4</sup>Somewhere around the lab we have labelled a cable as being  $\lambda/4$  at 21 MHz.

## 7.3.1. Reverting to a DSB Mixer

First see what happens when the phase delay cable is short (ideally zero), so that the two halves of the SSB are essentially identical. Pick a value for  $\pm \Delta \nu$  and take time series data for the two corresponding values of  $\nu_{RF}$  (i.e., the upper and lower sidebands). Calculate the power spectra. When taking the Fourier transform, be sure to make assign the inputs to the real and imaginary parts of a complex numpy array. Looking at the power spectra alone, can you distinguish between positive and negative  $\Delta \nu$ ?

#### 7.3.2. The SSB Mixer

Now see what happens when the phase delay cable introduces a phase delay of 90° in the LO going to the right mixer. Repeating the steps in §7.3.1, can you distinguish between positive and negative  $\Delta\nu$  in the power spectra now?

If you have the time and inclination, verify the phase difference between the two mixer outputs. Why does it behave this way?

#### 8. On Mixers and the Heterodyne Process (At Home, Week 2)

## 8.1. The Heterodyne Process

Mixers allow us to shift the frequency of the whole input spectrum by a uniform amount. They do this by multiplying the input signal by a sine-wave **local oscillator** (LO) with frequency  $\nu_{LO}$  (though we will often use angular frequency,  $\omega_{LO}$ , for cleaner notation).

This is an important tool for RF signal chains (astronomical and otherwise) because *antennas* must be tuned to the frequency of the incoming radiation they target, but our filters, amplifiers, and samplers often must work at far lower frequencies.

AM (amplitude-modulated) radio stations, for example, broadcast signals in the 1-MHz range (for frequency-modulated FM stations, it is 100 MHz), but the information content is music at audio (kHz) frequencies. A mixer is used to shift the frequencies of the AM station down to the audio region, where they are filtered off, amplified, and sent to a speaker that converts the voltage fluctuations into pressure-wave fluctuations that your ear is sensitive to. When you tune in to a station, you are simply changing the LO frequency; the rest of the signal chain can stay the same.

Such receivers are called **heterodyne** receivers, and they are used in consumer radios, television (even modern digital ones), and cellphones, as well as in more noble pursuits, like radio astronomy.

#### 8.2. Single Sideband (SSB) Mixer Theory

Even though we construct the SSB Mixer after the DSB in the lab, the theory of it is easier to understand, provided we use complex numbers and **negative frequencies**. Negative frequencies might seem weird. How can something oscillate a negative number of times per second?

To understand, let us use Euler's formula to write a complex sinusoid as

$$Ae^{iwt} = A\cos(\omega t) + i \cdot A\sin(\omega t). \tag{10}$$

In some ways, this complex sinusoid is the "true" sine wave. The real-valued versions are built out of pairs of complex sine waves:

$$\cos(\omega t) = \frac{1}{2} (e^{i\omega t} + e^{-i\omega t}) \tag{11}$$

$$\sin(\omega t) = \frac{1}{2i} (e^{i\omega t} - e^{-i\omega t}) \tag{12}$$

Now, once we have defined a complex sine wave (which henceforth will just be called a "sine wave"), we can switch  $-\omega$  for  $\omega$ ,

$$Ae^{i(-w)t} = A\cos(\omega t) - i \cdot A\sin(\omega t), \tag{13}$$

which is to say that the negation of a frequency swaps the sign of the imaginary component. So rather than thinking of a negative frequency as "negative Hertz", let us instead think of it as a phase relationship between the sine and cosine components.

Now let's take an idealized SSB mixer that has a LO that is a complex sinusoid  $e^{-i\omega_0 t}$  of unity amplitude with a negative frequency. This LO is mixed (multiplied) by an input signal. As an example, let's take an input signal that is the sum of two real-valued sine waves,

$$E(t) = A\sin(\omega_0 - \Delta\omega)t + B\sin(\omega_0 + \Delta\omega)t. \tag{14}$$

We can then use Euler's formula to express the product output by the mixer as

$$E(t) \cdot e^{-i\omega_0 t} = A\sin(\omega_0 - \Delta\omega)t \cdot e^{-i\omega_0 t} + B\sin(\omega_0 + \Delta\omega)t \cdot e^{-i\omega_0 t}$$
(15)

$$= \frac{A}{2i} \left[ e^{i(\omega_0 - \Delta\omega)t} - e^{-i(\omega_0 - \Delta\omega)t} \right] e^{-i\omega_0 t} + \frac{B}{2i} \left[ e^{i(\omega_0 + \Delta\omega)t} - e^{-i(\omega_0 + \Delta\omega)t} \right] e^{-i\omega_0 t}$$
 (16)

$$= \frac{A}{2i} \left[ e^{-i\Delta\omega t} - e^{-i(2\omega_0 - \Delta\omega)t} \right] + \frac{B}{2i} \left[ e^{i\Delta\omega t} - e^{-i(2\omega_0 + \Delta\omega)t} \right]. \tag{17}$$

After mixing, each component sine wave in E(t) has a beat-frequency term  $e^{\pm i\Delta\omega t}$ , as well as a component at much higher frequency  $(2\omega_0)$ . These higher-frequency components are typically filtered off using a low-pass filter (LPF), leaving just the beat-frequency terms

$$LPF\left[E(t) \cdot e^{-i\omega_0 t}\right] = \frac{A}{2i}e^{-i\Delta\omega t} + \frac{B}{2i}e^{i\Delta\omega t}.$$
 (18)

These terms retain the amplitude and frequency offset of their original signal, but have been shifted to lower frequencies where they can be easily sampled and processed<sup>5</sup>.

Furthermore, so long as we retain both the real and imaginary components (which, in reality, are just the components of the original signal that were multiplied by the cosine and sine components of the LO, respectively), we can distinguish between the A and B signal components by whether they appear at positive or negative frequencies. This ability to distinguish between positive and negative **sidebands** is why we call this a single-sideband mixer: we can look at each sideband

<sup>&</sup>lt;sup>5</sup>For a radio station, the signal is speech or music which spans a range of  $\Delta\omega$ . In astronomy, (e.g. the 21-cm line), the signal is a Doppler broadened line, which again has a broad range of  $\Delta\omega$ . In both cases, a mixer with a well-chosen LO frequency can be used to mix the signal down to lower frequencies where it can be sent to a speaker (if you are listening to the radio, or if you are Jodie Foster's character *Ellie* in *Contact*.

separately. If we didn't have both the cosine and sine components, we would not be able to distinguish positive and negative frequencies. Signals A and B would then sit on top of each other, and we would have no choice but to look at both sidebands simultaneously.

Figure 2 shows a block diagram of the SSB mixer. The RF input and the LO are each split by a power splitter so that we have two identical mixers, one on the left and one on the right, whose outputs are labelled  $\mathbf{Re(IF)}$  and  $\mathbf{Im(IF)}$ , respectively. The one on the left is identical to the DSB mixer in figure 1. The one on the right differs in only one way, which is crucial: its LO is delayed by 90° relative to that on the left. With this, the  $\mathbf{Im(IF)}$  output lags the  $\mathbf{Re(IF)}$ , becoming a sine wave to the  $\mathbf{Re(IF)}$ 's cosine.

#### 8.3. Double Sideband (DSB) Mixer Theory

We now turn to the theory of the DSB mixer, which is very straightforward to build (the LO is just a real-valued sine wave, as is the RF, so we only require one mixing circuit), but is more complicated to understand.

Let us repeat the SSB derivation, but instead of using  $e^{-i\omega_0 t}$  as our LO, we will use  $\sin \omega_0 t$ . If we take our signal to be  $E(t) = A\sin(\omega_0 + \Delta\omega)t$ . In this case, the output of our mixer becomes

$$E(t) \cdot \sin \omega_0 t = A \sin(\omega_0 + \Delta \omega) t \cdot \sin(\omega_0 t) \tag{19}$$

$$= \frac{A}{2i} \left[ e^{i(\omega_0 + \Delta\omega)t} - e^{-i(\omega_0 + \Delta\omega)t} \right] \cdot \frac{1}{2i} \left[ e^{i\omega_0 t} - e^{-i\omega_0 t} \right]$$
 (20)

$$= \frac{A}{2} \left[ e^{i\Delta\omega t} + e^{-i\Delta\omega_0 t} - e^{i(2\omega_0 + \Delta\omega)t} - e^{-i(2\omega_0 + \Delta\omega)t} \right]$$
 (21)

$$= A \left[\cos \Delta \omega t - \cos(2\omega_0 + \Delta)t\right]. \tag{22}$$

As in the SSB, the mixer output has two components: a beat frequency (our desired output) and a component near  $2\omega_0$  (which we remove using a LPF).

The unfortunate part about the DSB mixer becomes obvious if we consider the case we used for the SSB mixer, where  $E(t) = A\sin(\omega_0 + \Delta\omega)t + B\sin(\omega_0 - \Delta\omega)t$ . Repeating our algebra above, we find that

$$E(t) \cdot \sin \omega_0 t = A \left[ \cos \Delta \omega t - \cos(2\omega_0 + \Delta) t \right] + B \left[ \cos(-\Delta \omega) t - \cos(2\omega_0 - \Delta) t \right]. \tag{23}$$

But  $\cos(-\Delta\omega)t = \cos\Delta\omega t$ , so after filtering off the high-frequency components, we end up with

$$LPF [E(t) \cdot \sin \omega_0 t] = (A+B) \cos \Delta \omega t, \tag{24}$$

which has signals that were at two different frequencies  $(\omega_0 + \Delta\omega)$  and  $\omega_0 - \Delta\omega$  stacked on top of each other.

The DSB mixer, though simpler to build, cannot distinguish between positive and negative deviations around the LO frequency. It stacks them right on top of each other, so that any frequency you look at in the output can be the sum of two different signals. This is what lends it the name "double sideband".

Figure 3 illustrates the result. The top panel shows the original RF spectrum, which consists of signals above the LO (the upper sideband; USB signal) and below (the lower sideband; LSB). Suppose you use a filter to eliminate the LSB, leaving only the USB. The second panel shows the

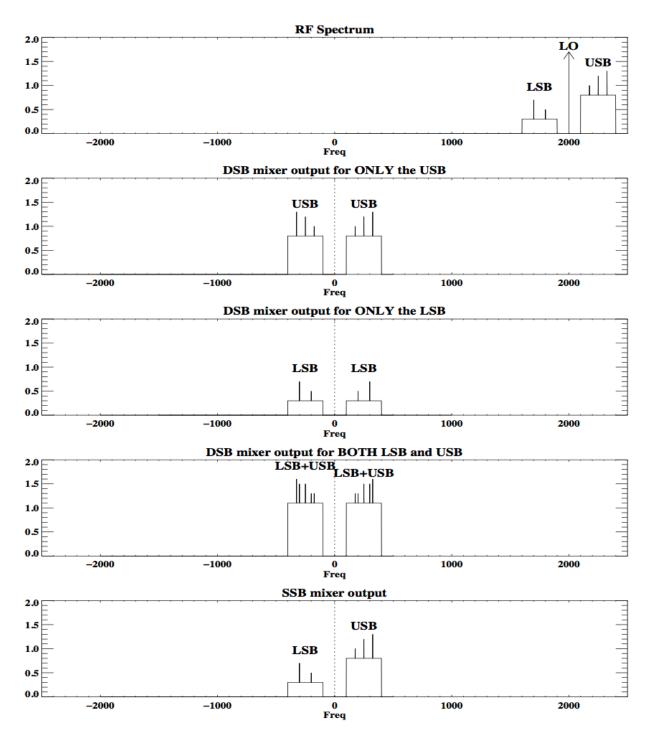


Fig. 3.— Upper (USB) and lower (LSB) sidebands in DSB and SSB mixers for a set of test tones on top of broad level noise spectra. Panel 1 illustrates the RF spectrum; panels 2 and 3 show the USB and LSB individually when they undergo the DSB mixing process; panel 4 shows how they both add together; panel 5 shows how the SSB mixer keeps them separate.

IF spectrum after DSB mixing: the USB appears at both negative and positive frequencies and the spectrum is symmetric, meaning that the negative frequencies give exactly the same result as the positive ones.

Now use a filter to eliminate the USB, leaving only the LSB; the third panel shows the resulting IF spectrum.

Without any filters, then both the LSB and the USB would appear in the IF spectrum, as in the fourth panel. With a DSB mixer, you can't distinguish between LSB and USB. They are inextricably mixed into a sum in the power spectrum. However, the bottom panel shows that SSB mixing retains the sideband separation.

## 9. Writing the Lab Report (Week 3)

Please review the resources linked on AstroBaki and the guidelines offered in class for generating your report. Remember that your write-up is the basis for the majority of your grade in this class; make sure to include high-quality plots and description, providing adequate background and discussion such that one of your peers who has not taken this class would be able to understand your findings and conclusions. Take the opportunity to show off what you have learned so far!

Your report should directly address the goals listed in §2, but please ensure that you do so in a narrative that is directed toward the goal of conveying high-level results. It would be a mistake to make this report a laundry-list of the things you did during the last couple of weeks. Not every plot you made needs to be in this report, nor should every wrong turn be documented. A scientific publication documents process, but only insofar as is necessary to generate the results presented.

Finally, heed the warning that write-up takes longer than you think it will. Get started early and allow yourself plenty of time.