

# **Multicopter Design and Control Practice**

—— A Series Experiments Based on MATLAB and Pixhawk

Lesson 09 Attitude Controller Design Experiment

Quan Quan, Associate Professor, qq\_buaa@buaa.edu.cn School of Automation Science and Electrical Engineering, BeihangUniversity, Beijing 100191, China.






#### **Outline**

- 1. Preliminary
- 2. Basic Experiment
- 3. Analysis Experiment
- 4. Design Experiment
- 5. Summary



#### **□** Basic concepts

#### (1) System characteristics in time domain

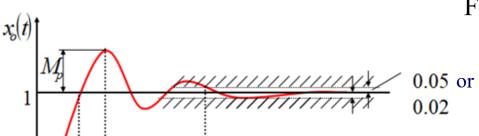

For Second-order system

$$G(s) = \frac{\omega_n^2}{s^2 + 2\varsigma\omega_n s + \omega_n^2}$$

where  $0 < \xi < 1$ , the step response is shown on the left.

1) overshoot 
$$M_p = \frac{x_o(t_p) - x_o(\infty)}{x_o(\infty)} * 100\% = e^{-\xi \pi / \sqrt{1 - \xi^2}} * 100\%$$

2) setting time when  $\xi < 0.8$ , the settling time is


$$t_s = \frac{3.5}{\xi \omega_n}$$
 or  $t_s = \frac{4.5}{\xi \omega_n}$ 



### **□** Basic concepts

#### (2) Bode plot and steady-state error

Bode plot draws the characteristics of open-loop amplitude and phase on logarithmic coordinates. The logarithm stability criterion judges the stability of the closed-loop system according to the relationship between the open-loop logarithm amplitude frequency and the logarithm phase frequency curve.

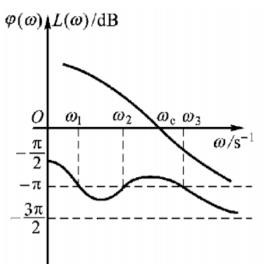

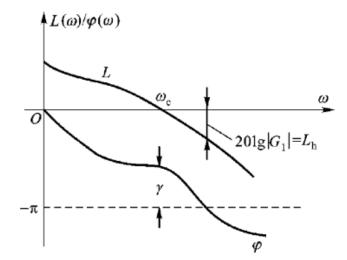


Figure: Stability Margin Figure: logarithm phase frequency curve

Phase margin  $\gamma$ : when  $L(\omega) = 0 \, dB$ , the difference value between the phase curve and  $-\pi$ , i.e.,

$$\gamma = \angle G(j\omega_{c})H(j\omega_{c}) - (-180^{\circ})$$
  $L(\omega_{c}) = 0 \,dB$ 

Where  $\omega_c$  represents the cut-off frequency.

Gain Margin h: When  $\angle G(j\omega_1)H(j\omega_1) = -\pi$ 

$$h(dB) = 20 \lg \left| \frac{1}{G(j\omega_1)H(j\omega_1)} \right| = -20 \lg \left| G(j\omega_1)H(j\omega_1) \right|$$


When the closed-loop system is stable, the larger the phase and gain margin is, the more stable the system is. The stability margin also reflects the smoothness of the system, such as the overshoot and so on. General requirements:

$$\gamma > 40^{\circ}$$
 $h > 6$ dB



#### ☐ Framework of Low-Level Flight Control of Multicopters

Low-level fight control

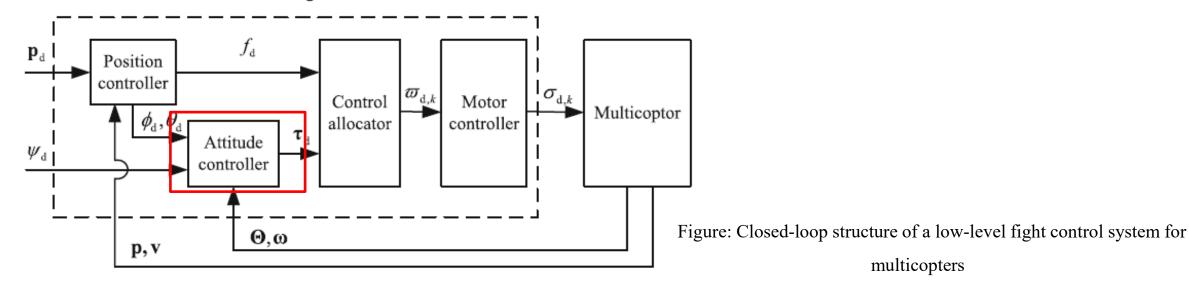

The multicopter is underactuated because the system has six outputs (position  $\mathbf{p} \in R^3$  and attitude  $\mathbf{\Theta} \in R^3$ ), but only four independent inputs (total thrust  $f \in R$  and three-axis moment  $\mathbf{\tau} \in R^3$ ). In the design of multicopter flight controller, the control strategy of inner and outer loops can be used, in which the inner loop controls the attitude angle, while the outer loop controls the position. The inner and outer loop control is used to realize the lifting, hovering, side flying and other flight modes of the multicopter.



#### **□** Attitude Control

For multicopters, the attitude control is the basis of the position control. At present, the commonly-used attitude representations for a rigid body include the Euler angles

and rotation matrix.

Table: Comparison of two attitude representations

Attitude representations	Advantages	Disadvantages
Euler angles	No redundant parameter; Clear physical meaning	Singularity problem when the pitch angle is 0; Plenty of transcendental function operation; Gimbal Lock
Rotation matrix	No singularity problem; No transcendental function operation; Applicability for the continuous rotation; Global and unique; Easy to interpolate.	Six redundant parameters





#### **□** Attitude control

The attitude control objective is: given the desired attitude angle  $\Theta_d \triangleq \left[\Theta_{hd}^T \psi_d\right]^T$ , design a controller  $\tau \in R^3$  such that  $\lim_{t\to\infty} \|e_{\Theta}(t)\| = 0$ , where  $e_{\Theta} \triangleq \Theta - \Theta_d$ . Here,  $\Theta_{hd}$  is generated by the position controller and  $\psi_d$  is given by the mission planner. To achieve that, according to

$$\dot{\Theta} = \omega$$

The desired angle velocity  $\omega_d$  is designed as

$$\omega_{\rm d} = -\mathbf{K}_{\mathbf{\Theta}} \mathbf{e}_{\mathbf{\Theta}}$$

Where  $K_{\Theta} \geq 0$ . Then according to

$$J\dot{\omega} = \tau$$

The PID controller is designed as

$$\mathbf{\tau}_{\mathrm{d}} = -\mathbf{K}_{\omega \mathrm{p}} \mathbf{e}_{\omega} - \mathbf{K}_{\omega \mathrm{i}} \int \mathbf{e}_{\omega} - \mathbf{K}_{\omega \mathrm{d}} \dot{\mathbf{e}}_{\omega}$$

Where  $\mathbf{e}_{\omega} \triangleq \boldsymbol{\omega} - \boldsymbol{\omega}_{d}$   $\mathbf{K}_{\omega p}, \mathbf{K}_{\omega i}, \mathbf{K}_{\omega d} \in \mathbb{R}^{3 \times 3}$ 



#### **□** The control system compensation

The following mainly introduces the series compensation. The structure of the system with series compensation is shown in the figure. Where Gc(s) is the transfer function of the series compensator, and G(s) is the transfer function of the invariant part of the system. In engineering practice, the commonly used series compensation includes lead compensation, lag compensation and lag lead compensation.

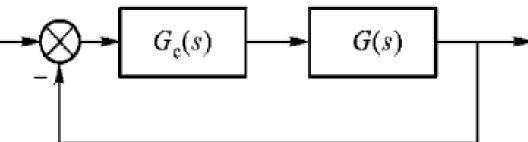


Figure: System with series compensation



#### **□** The control system compensation

#### (1) Phase-Lead compensation

$$G_c(s) = \frac{1 + aTs}{1 + Ts}(a > 1)$$

Phase-lead compensation occurs in  $\left(\frac{1}{aT}, \frac{1}{T}\right)$ 

The maximum lead-phase is  $\varphi_m = \arcsin \frac{a-1}{a+1}$ 

This maximum value occurs at the geometric center of the logarithmic frequency characteristic curve, and the corresponding angular frequency is:

$$\omega_m = \frac{1}{\sqrt{a}T}$$

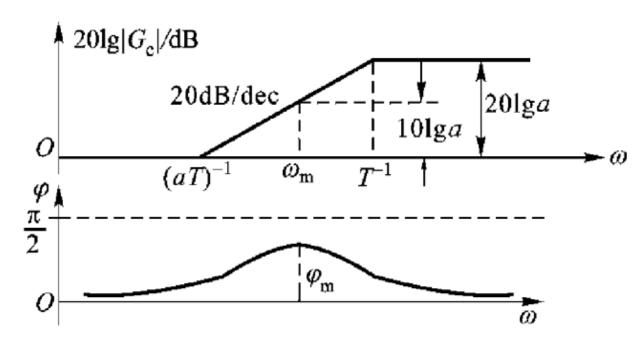



Figure: Phase-Lead compensation curve



#### **□** The control system compensation

#### (2) Phase-lag compensation


$$G_c(s) = \frac{1 + bTs}{1 + Ts} (b < 1)$$

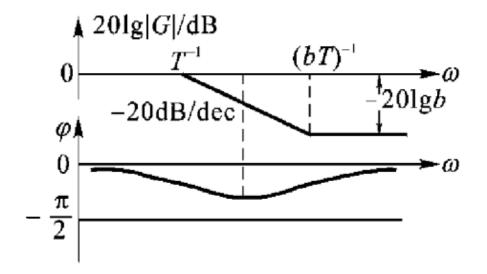

#### (3) Phase lead-and-lag compensation

$$G_c(s) = \frac{(1+bT_1s)(1+aT_2s)}{(1+T_1s)(1+T_2s)}$$

Where a > 1, b > 1, and  $bT_1 > aT_2$ 

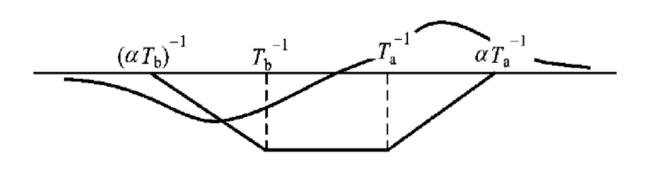



#### **□** Control Allocation

Briefly, the control allocation problem can be described as:  $\mathbf{u}_{v}(t)$ 


given  $\delta(t)$  to satisfy

$$\mathbf{u}_{\mathbf{v}}(t) = g(\boldsymbol{\delta}(t))$$

Where  $g: \mathbb{R}^m \to \mathbb{R}^n$  is the mapping from control inputs of actuators in controlled systems to the pseudo control command. In particular, the linear control allocation problem is based on

$$\mathbf{u}_{v}(t) = \mathbf{B}\boldsymbol{\delta}(t)$$

Where  $\mathbf{B} \in \mathbb{R}^{m \times n}$  is the known control efficiency matric.

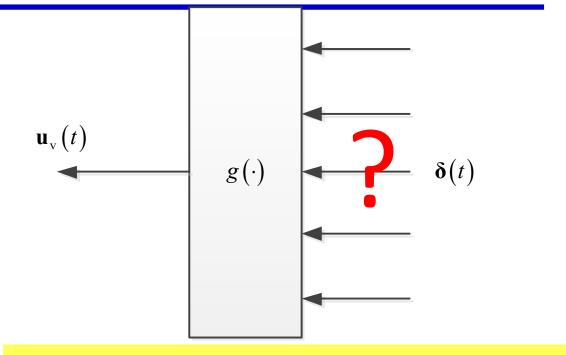

- Separation of upper control and lower control
- Effective allocation to prevent saturation
- Improve robustness to faults and damages through allocation
- •




#### **□** Control Allocation

The control effectiveness models for a quadcopter with the x-configuration

$$\begin{bmatrix} f \\ \tau_{x} \\ \tau_{y} \\ \tau_{z} \end{bmatrix} = \begin{bmatrix} c_{T} & c_{T} & c_{T} & c_{T} \\ -\frac{\sqrt{2}}{2}dc_{T} & \frac{\sqrt{2}}{2}dc_{T} & \frac{\sqrt{2}}{2}dc_{T} & -\frac{\sqrt{2}}{2}dc_{T} \\ \frac{\sqrt{2}}{2}dc_{T} & -\frac{\sqrt{2}}{2}dc_{T} & \frac{\sqrt{2}}{2}dc_{T} & -\frac{\sqrt{2}}{2}dc_{T} \\ c_{M} & c_{M} & -c_{M} & -c_{M} \end{bmatrix} \begin{bmatrix} \varpi_{1}^{2} \\ \varpi_{2}^{2} \\ \varpi_{3}^{2} \\ \varpi_{4}^{2} \end{bmatrix}$$

$$\begin{bmatrix} f \\ \tau_x \\ \tau_y \\ \tau_z \end{bmatrix} = \begin{bmatrix} c_T & 0 & 0 & 0 \\ 0 & dc_T & 0 & 0 \\ 0 & 0 & dc_T & 0 \\ 0 & 0 & 0 & c_M \end{bmatrix} \begin{bmatrix} 1 & 1 & 1 & 1 \\ -\frac{\sqrt{2}}{2} & \frac{\sqrt{2}}{2} & \frac{\sqrt{2}}{2} & -\frac{\sqrt{2}}{2} \\ \frac{\sqrt{2}}{2} & -\frac{\sqrt{2}}{2} & \frac{\sqrt{2}}{2} & -\frac{\sqrt{2}}{2} \\ \frac{\sqrt{2}}{2} & -\frac{\sqrt{2}}{2} & \frac{\sqrt{2}}{2} & -\frac{\sqrt{2}}{2} \end{bmatrix} \begin{bmatrix} \varpi_1^2 \\ \varpi_2^2 \\ \varpi_3^2 \\ \varpi_4^2 \end{bmatrix}$$

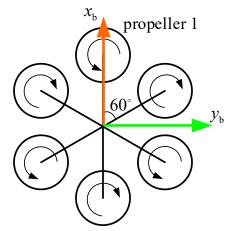

$$\begin{bmatrix} \tau_{x} \\ \tau_{y} \\ \tau_{z} \end{bmatrix} = \begin{bmatrix} 2 & \text{M} & 2 & \text{M} & 2 & \text{M} & 2 & \text{M} \\ \frac{\sqrt{2}}{2} dc_{T} & -\frac{\sqrt{2}}{2} dc_{T} & \frac{\sqrt{2}}{2} dc_{T} \\ c_{M} & c_{M} & -c_{M} & -c_{M} \end{bmatrix} \begin{bmatrix} \varpi_{2}^{2} \\ \varpi_{3}^{2} \end{bmatrix} \begin{bmatrix} \varpi_{2}^{2} \\ \varpi_{4}^{2} \end{bmatrix} \begin{bmatrix} \varpi_{1}^{2} \\ dc_{T} \end{bmatrix} \begin{bmatrix} \sigma_{1}^{2} \\ dc_{T} \end{bmatrix} \begin{bmatrix} \sigma_{1$$



#### **□** Control Allocation

The control effectiveness model:

$$\begin{bmatrix} f \\ \tau_{x} \\ \tau_{y} \\ \tau_{z} \end{bmatrix} = \begin{bmatrix} c_{T} & c_{T} & \cdots & c_{T} \\ -dc_{T}\sin\varphi_{1} & -dc_{T}\sin\varphi_{2} & \cdots & -dc_{T}\sin\varphi_{n_{r}} \\ dc_{T}\cos\varphi_{1} & dc_{T}\cos\varphi_{2} & \cdots & dc_{T}\cos\varphi_{n_{r}} \\ c_{M}\delta_{1} & c_{M}\delta_{2} & \cdots & c_{M}\delta_{n_{r}} \end{bmatrix} \begin{bmatrix} \boldsymbol{\sigma}_{1}^{2} \\ \boldsymbol{\sigma}_{2}^{2} \\ \vdots \\ \boldsymbol{\sigma}_{n_{r}}^{2} \end{bmatrix}$$

For a quadcopter,  $\mathbf{M}_4 \in \mathbb{R}^{4\times 4}$  is nonsingular, the control allocation matrix can be directly obtained by matrix can be directly obtained by matrix inversion, namely

$$\mathbf{P}_4 = \mathbf{M}_4^{-1}$$

where  $P_4 \in \mathbb{R}^{4\times 4}$ . The allocation is unique. Furthermore, if a multicopter has more than four propellers, the allocation may be non-unique. In open source autopilots, the control allocation matrix is often obtained by calculating the pseudo-inverse, that is

$$\mathbf{P}_{n} = \mathbf{M}_{n}^{\dagger}$$



#### **□** Implementation of Control Allocation in Autopilots

After the desired thrust  $f_d$  and the desired moment  $\tau_d$  have been obtained, the desired propeller angular speeds are obtained as follows:

$$\begin{pmatrix} \boldsymbol{\sigma}_{d,1}^{2} \\ \boldsymbol{\sigma}_{d,2}^{2} \\ \vdots \\ \boldsymbol{\sigma}_{d,n_{r}}^{2} \end{pmatrix} = \mathbf{P}_{n_{r}} \begin{pmatrix} f_{d} \\ \mathbf{\tau}_{d} \end{pmatrix}$$
Relative to the parameters

We can obtain the desired speed for each propeller  $\varpi_{d,i}$ ,  $i = 1, 2, \dots, n_r$ 

In the engineering practice, the parameters in  $M_{n_r}$  are unknown. Under this condition, a question arises: how is the control allocation conducted?



#### **Implementation of Control Allocation in Autopilots**

In order to answer this question, the control effectiveness matrix for a standard multicopter is defined as a function matrix that

$$\mathbf{M}_{n_{r}}(c_{T}, c_{M}, d) = \begin{bmatrix} c_{T} & c_{T} & \cdots & c_{T} \\ -dc_{T}\sin\varphi_{1} & -dc_{T}\sin\varphi_{2} & \cdots & -dc_{T}\sin\varphi_{n_{r}} \\ dc_{T}\cos\varphi_{1} & dc_{T}\cos\varphi_{2} & \cdots & dc_{T}\cos\varphi_{n_{r}} \\ c_{M}\sigma_{1} & c_{M}\sigma_{2} & \cdots & c_{M}\sigma_{n_{r}} \end{bmatrix}$$

Which satisfied

$$\mathbf{M}_{n_{\mathrm{a}}}\left(c_{\mathrm{T}},c_{\mathrm{M}},d\right) = \mathbf{P}_{\mathrm{a}}\mathbf{M}_{n_{\mathrm{a}}}\left(1,1,1\right)$$

Where  $P_a = \text{diag}(c_T dc_T dc_T c_M)$ . Thus, the following relation exists

$$\mathbf{M}_{n_{r}}^{\dagger}(c_{T}, c_{M}, d) = \mathbf{M}_{n_{r}}^{\dagger}(1, 1, 1) \mathbf{P}_{a}^{-1}$$
Parameters known yet

Unknown parameters





#### Implementation of Control Allocation in Autopilots

Taking the hexacopter for example  $\mathbf{M}_{6}(c_{\mathrm{T}}, c_{\mathrm{M}}, d)$  is


$$\mathbf{M}_{6}(c_{\mathrm{T}},c_{\mathrm{M}},d) = \begin{bmatrix} c_{\mathrm{T}} & c_{\mathrm{T}} & c_{\mathrm{T}} & c_{\mathrm{T}} & c_{\mathrm{T}} & c_{\mathrm{T}} & c_{\mathrm{T}} \\ 0 & -\frac{\sqrt{3}dc_{\mathrm{T}}}{2} & -\frac{\sqrt{3}dc_{\mathrm{T}}}{2} & 0 & \frac{\sqrt{3}dc_{\mathrm{T}}}{2} & \frac{\sqrt{3}dc_{\mathrm{T}}}{2} \\ dc_{\mathrm{T}} & \frac{dc_{\mathrm{T}}}{2} & -\frac{dc_{\mathrm{T}}}{2} & -dc_{\mathrm{T}} & -\frac{dc_{\mathrm{T}}}{2} & \frac{dc_{\mathrm{T}}}{2} \\ c_{\mathrm{M}} & -c_{\mathrm{M}} & c_{\mathrm{M}} & -c_{\mathrm{M}} & c_{\mathrm{M}} & -c_{\mathrm{M}} \end{bmatrix}$$

$$\mathbf{M}_{6}^{\dagger}(1,1,1) = \frac{1}{6} \begin{bmatrix} 1 & 0 & 2 & 1 \\ 1 & -\sqrt{3} & 1 & -1 \\ 1 & 0 & -2 & -1 \\ 1 & \sqrt{3} & -1 & 1 \\ 1 & \sqrt{3} & 1 & -1 \end{bmatrix}$$



$$\mathbf{M}_{6}^{\dagger}(1,1,1) = \frac{1}{6} \begin{bmatrix} 1 & -\sqrt{3} & 1 & -1 \\ 1 & -\sqrt{3} & -1 & 1 \\ 1 & 0 & -2 & -1 \\ 1 & \sqrt{3} & -1 & 1 \\ 1 & \sqrt{3} & 1 & -1 \end{bmatrix}$$

$$\begin{pmatrix} \boldsymbol{\sigma}_{d,1}^{2} \\ \boldsymbol{\sigma}_{d,2}^{2} \\ \vdots \\ \boldsymbol{\sigma}_{d,6}^{2} \end{pmatrix} = \mathbf{M}_{6}^{\dagger} (1,1,1) \mathbf{P}_{a}^{-1} \begin{pmatrix} f_{d} \\ \boldsymbol{\tau}_{d} \end{pmatrix} = \mathbf{M}_{6}^{\dagger} (1,1,1) \begin{pmatrix} f_{d}/c_{T} \\ \boldsymbol{\tau}_{dx}/dc_{T} \\ \boldsymbol{\tau}_{dy}/dc_{T} \\ \boldsymbol{\tau}_{dz}/c_{M} \end{pmatrix}$$

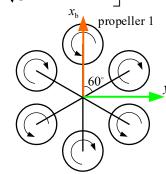



In order to make this chapter self-contained, the experiment preliminary is from Chapter. 11 of "Quan Quan. Introduction to Multicopter Design and Control. Springer, Singapore, 2017".



#### **■** Experimental Objectives

#### **■** Things to prepare

- (1) Hardware: Multicopter System, Pixhawk Autopilot System;
- (2) Software: MATLAB 2017b and above, Simulink-based Controller Design and Simulation Platform, HIL(Hardware in the loop) Simulation Platform, Experiment Instruction Package "e5.1" (https://flyeval.com/course).

#### Objectives

- (1) Repeat the Simulink simulation of a quadcopter to analyze the functions of the control allocator;
- (2) Record the step response of the attitude, and sweep the open-loop attitude control system to obtain the Bode plot and further analyze the stability margin of the closed-loop control system;
- (3) Perform the HIL simulation.



#### **□** Simulation procedure

#### (1) Step1:SIL simulation – control allocator

1) Parameter Initialization

Run the file "e5/e5.1/Init\_control.m"

to initialize the parameters. Next,

the Simulink file"AttitudeControl\_

Sim" will open automatically as shown on the right.

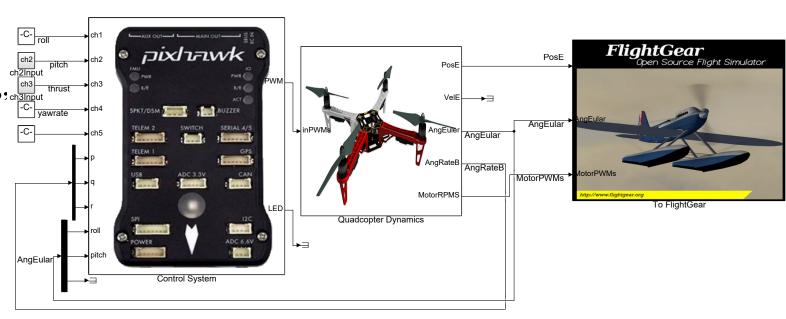


Figure: Simulink model"AttitudeControl Sim.slx"



# **□** Simulation procedure

#### 2) Run the simulation

Open the file "FlightGear-F450" and click on the Simulink "Run" button to run "AttitudeControl\_Sim.slx". Subsequently, the motion of the quadcopter is observed in FlightGear, as shown on the right. The quadcopter in FlightGear climbs up for a short time, and then flies against the screen, corresponding to the  $-o_b x_b$  axis.

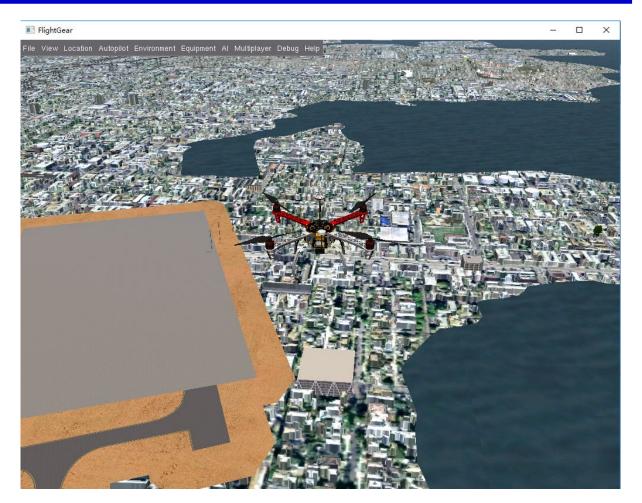


Figure: Quadcopter in FlightGear



#### **□** Simulation procedure

3) Simulation results

Set the input of the pitch channel of RC to 1600 with a delay time of 3 seconds.

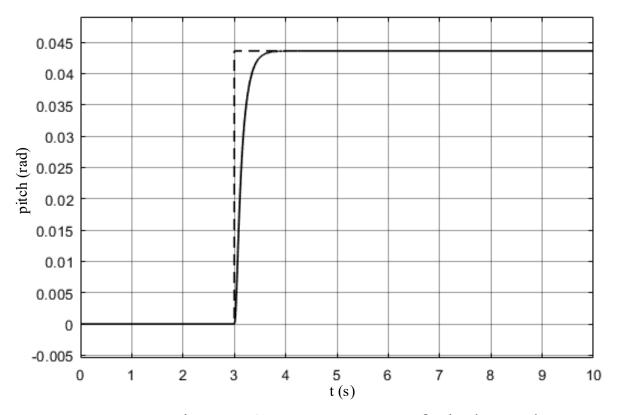


Figure: Step response of pitch angle



#### **□** Simulation procedure

#### 4) Control allocator function

The control allocator receives roll, pitch, yaw, and thrust control inputs and assigns them to four motors, as shown on the right.

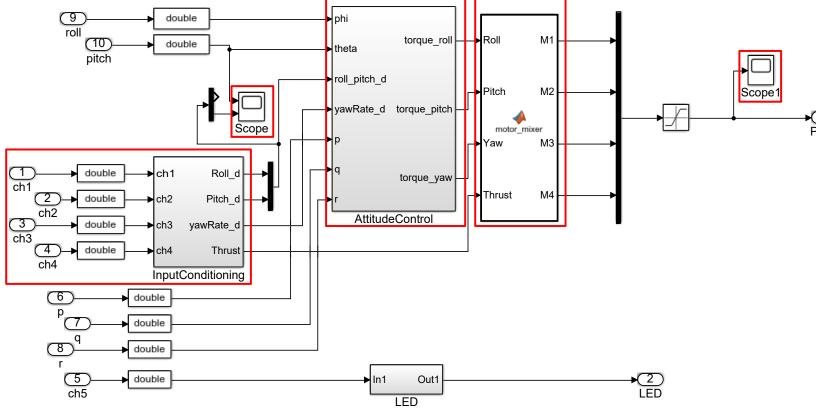


Figure: Structure of "Control System" module





#### **□** Simulation procedure

#### 4) Control allocator function

When the pitch channel is given a value of 1600, the output of "Scope1" can be derived from the right picture. The control signals for motors #1 and #2 increase, and the control signals for motors #3 and #4 decrease.

$$\begin{cases} \varpi_{1}^{2} = \sigma_{1} - \sigma_{3} + \sigma_{2} + \sigma_{4} \\ \varpi_{2}^{2} = \sigma_{1} + \sigma_{3} - \sigma_{2} + \sigma_{4} \\ \varpi_{3}^{2} = \sigma_{1} + \sigma_{3} + \sigma_{2} - \sigma_{4} \\ \varpi_{4}^{2} = \sigma_{1} - \sigma_{3} - \sigma_{2} - \sigma_{4} \end{cases}$$

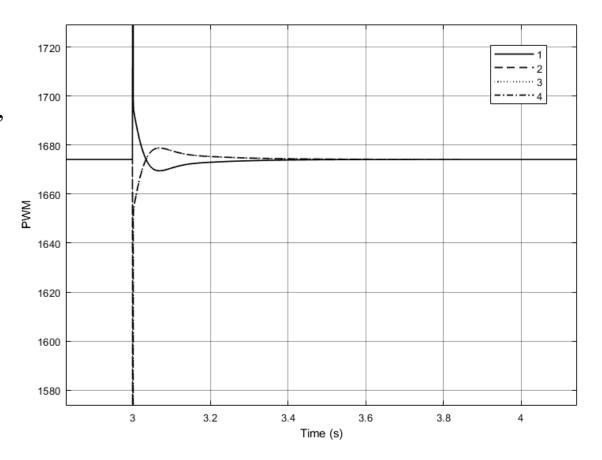


Figure: PWM values after control allocation



#### **□** Simulation procedure

(2) Step2: SIL simulation—stability margin

1) Open the file

"e5/e5.1/tune/AttitudeControl\_tune.

slx" as shown on the right.

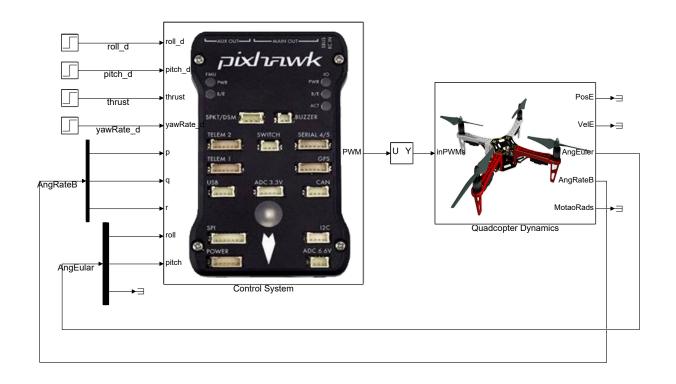


Figure: Simulink model "AttitudeControl tune.slx"



#### **□** Simulation procedure

2) Specify signals as input and output for sweeping

The module of the attitude control system can be found in the submodule "Control System"- "Attitude Control".

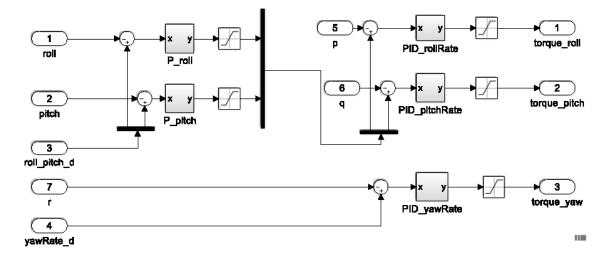


Figure: Simulink model "AttitudeControl\_tune.slx"

There are four channels in the attitude control system, namely roll, pitch, yaw, and thrust channels. Here, the thrust channel is set to 0.6085(thrust percentage is 60.85%), which is the thrust value for hovering.



#### **□** Simulation procedure

#### 2) Specify signals as input and output for sweeping

Choose one of the other three channels such as the pitch channel for sweeping.

Specify a signal as the input using the following procedure. In the "Simulink Editor", right-click on the signal and then select "Linear Analysis Points" - "Open-loop Input" from the context menu.

Specify a signal as the output. Using the procedure followed for setting: it is the same as the input signal, but select "Open-loop Output" as shown on the right.

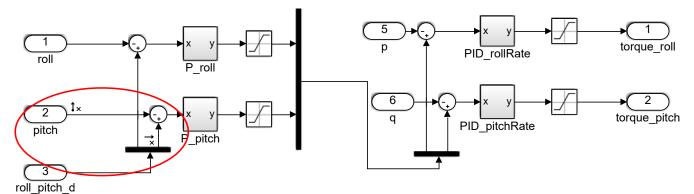


Figure: Specified Signals





#### **□** Simulation procedure

#### 3) Get the Bode plot

In the top menu of the model, select "Analysis" - "Control Design" - "Linear Analysis", then,

from the context menu, select "Linear Analysis" and click "Bode" to get the Bode plot.

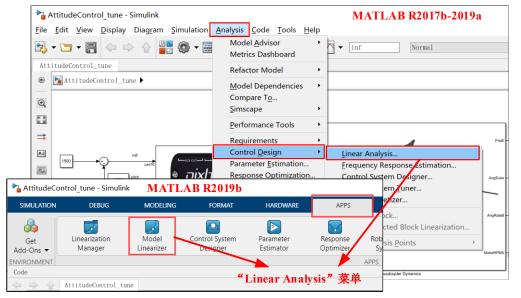

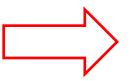

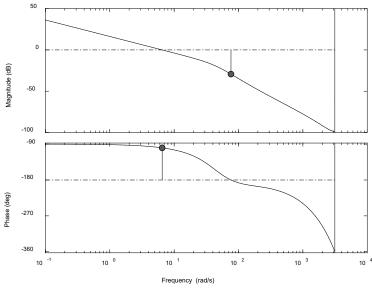


Figure: Way to open "Linear Analysis"

Figure: Open-loop Bode plot of pitch angle loop





#### **□** Simulation procedure

# (3) Step3: SIL simulation—Step response

1) Specify signals as input and output to obtain a step response curve of the pitch channel

Specify a signal as the input using the following procedure. In "Simulink Editor", right-click the signal, then select "Linear Analysis Points" - "Open-loop Input" from the context menu.

Then, specify a signal as the output same as the way like the input setting procedure expect for selecting "Output Measurement".

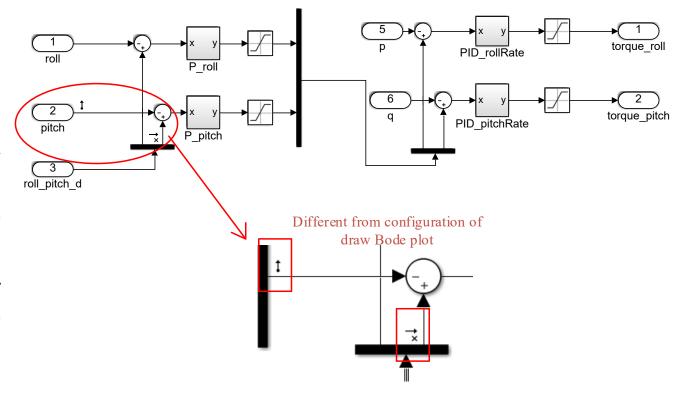


Figure: Specified signals of SIL simulation



#### **□** Simulation procedure

2) Obtain the pitch step response

Go to "Linear Analysis" in Simulink and click

"Step" to get the step response, as shown on the right.

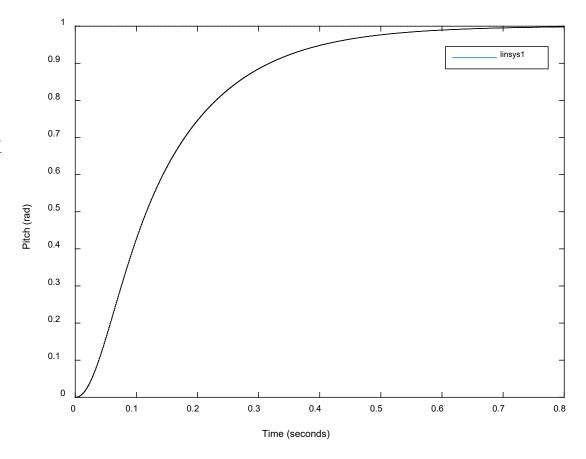


Figure: Pitch angle step response



#### **□** Simulation procedure

- (4) Step4: HIL simulation
- 1) Open Simulink file for HIL

Open the Simulink file"e5/e5.1/HIL/AttitudeControlHIL.slx", as shown on the right. It should be noted that "Control System" here is the same as that in the SIL simulation.

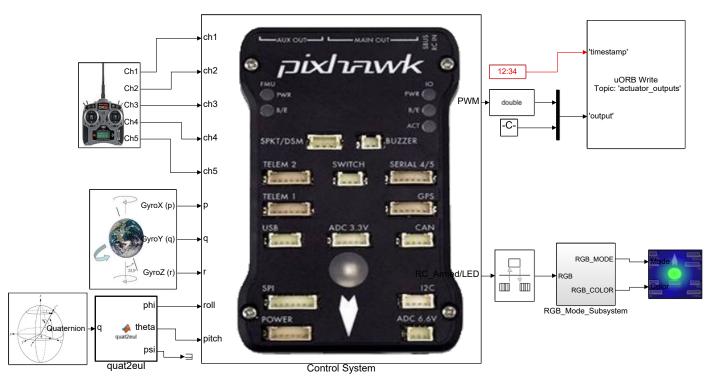


Figure: Simulink model"AttitudeControlHIL.slx"



**□** Simulation procedure

2) Connect hardware

It should be noted that the airframe type

"HIL Quadcopter X" should be selected in HIL simulation.



Figure: Connection between Pixhawk hardware and RC receiver



#### **□**Simulation procedure

3) Compile and upload code

Compile the HIL simulation model and upload the file to the given Pixhawk autopilot. Later, the designed attitude control program can be run on Pixhawk autopilot.

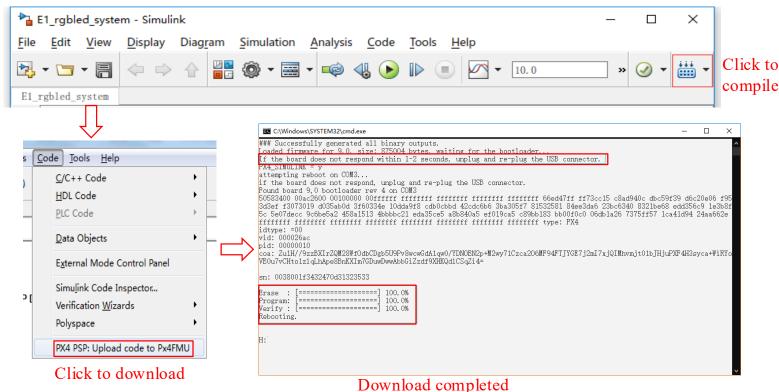


Figure: Code compilation and upload process





#### **□** Simulation procedure

#### 4) Configure CopterSim

Double-click on the desktop shortcut CopterSim to open it. Readers can choose different propulsion systems using the following procedure. Click on "Model Parameters" to customize the model parameters and, then click on "Store and use the parameters" to make them available. The software will automatically match the serial port number. Readers would click the "Run" button to enter the HIL simulation mode. After that, readers could see the message returned by the Pixhawk autopilot in the lower-left corner of the interface.

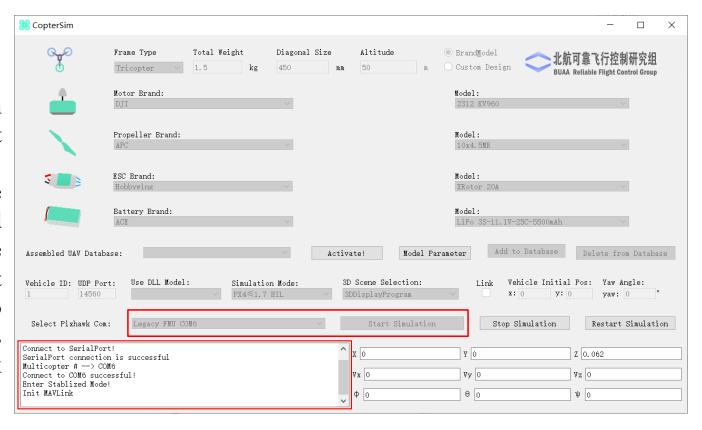


Figure: User interface of CopterSim



### **□Simulation procedure**

5) Open 3DDisplay

Double-click on the desktop shortcut 3DDisply to open it.

6) Simulation performance

Arm the quadcopter for manual control using the given RC transmitter. As shown on the right. The quadcopter flight status is displayed on the left side of 3DDisplay's interface, the real-time flight data is plotted in the upper right corner, and the multicopter motion trajectory is plotted in the lower right corner.

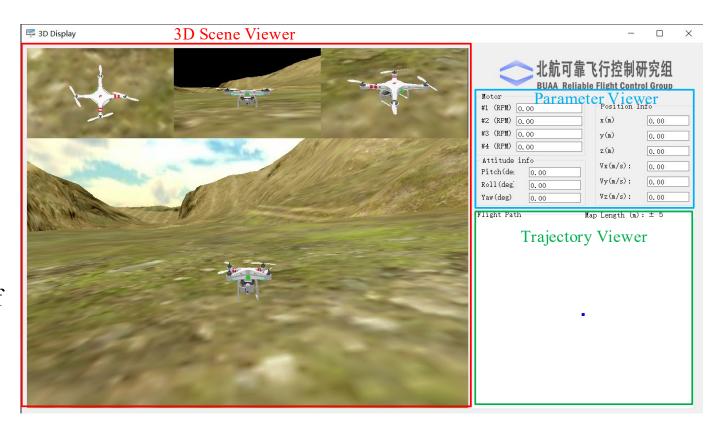


Figure: User interface of 3DDisplay



# **Analysis Experiment**

# **□** Experimental Objectives

#### **■** Things to prepare

(1) Software: MATLAB 2017b and above, Simulink-based Controller Design and Simulation Platform, Experimental Instruction Package "e5.2" (https://flyeval.com/course).

#### **■** Objectives

- (1) Adjust the PID controller parameters to improve the control performance, record the overshoot and settling time, and obtain a group of satisfied parameters;
- (2) Using the satisfied parameters, sweep the system to draw the Bode plot. Observe the system amplitude versus frequency response curve and the phase versus frequency response curve; finally, analyze the stability margin.





# **Analysis Experiment**

#### **□** Simulation Procedure

# (1) Step1:Initial model setup

In this section, to adjust PID controller parameters, the Simulink-based controller design and simulation platform in the basic experiment should be simplified. The modified model is shown in the file"e5/e5.2/AttitudeControl\_tune .slx".

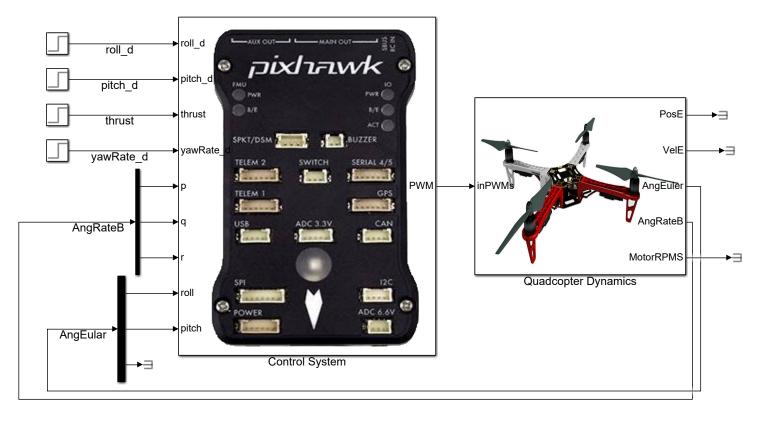


Figure: Simulink model "AttitudeControl\_tune.slx"





#### **□** Simulation Procedure

#### (1) Step1:Initial model setup

As the quadcopter is symmetrical, the PID parameters for the roll angle and pitch angle are the same. Hence, only one group of the roll or pitch angle parameters needs to be adjusted. The adjustment of PID parameters of the pitch angle is described below. First, let the quadcopter hover at an initial altitude of 100m by setting the thrust value to 0.6085 (thrust percentage is 60.85 %) and the initial speed of the motor to 557.1420rad/s. Modify the corresponding parameters in the file "Init control.m".

ModelInit\_PosE=[0,0,-100]; ModelInit\_VelB=[0,0,0]; ModelInit\_AngEuler=[0,0,0]; ModelInit\_RateB=[0,0,0]; ModelInit\_RPM=557.1420;



#### **□** Simulation Procedure

#### (2) Step2: Adjust the PID parameters for the angular velocity control loop

In the file "AttitudeControltune.slx", replace the desired angular velocity with the step input and left-click on "q" signal line(corresponding to the angular velocity) and step input line, select "Enable Data Logging" to get the step response.

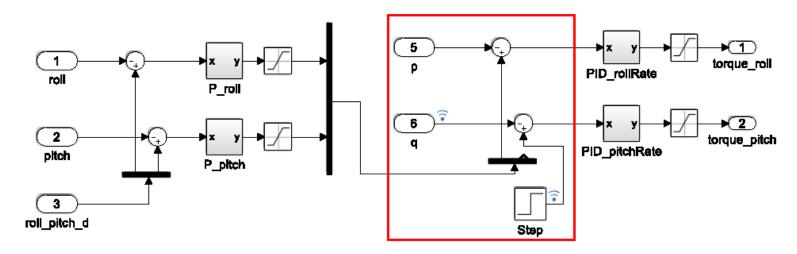


Figure: Angle velocity control loop model



#### **□** Simulation Procedure

# (2) Step2: Adjust the PID parameters for the angular velocity control loop

First, adjust the proportional term parameter and set the integral and derivative term parameters to 0. Later, run the file "Init\_control.m" (this file must be run every time to update any altered parameters). Click on Simulink's "Run" button to view the input and output in the "Simulation Data Inspector". The proportional term parameter is gradually increased from a small value to a large value, which corresponds to increase "Kp\_PITCH\_AngleRate" variable in the file "Init\_control.m".

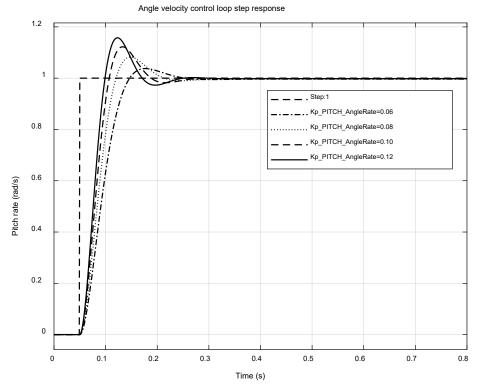


Figure: Step response with different proportional term parameters





#### **□** Simulation Procedure

# (2) Step2: Adjust the PID parameters for the angular velocity control loop

Next, adjust the integral and derivative term parameters, i.e., "Ki\_PITCH\_AgngleRate", "Kd\_PITCH\_AgngleRate" variables in the file "Init\_control.m". Finally, fine tune the proportional term parameter with the resulting response shown on the right.

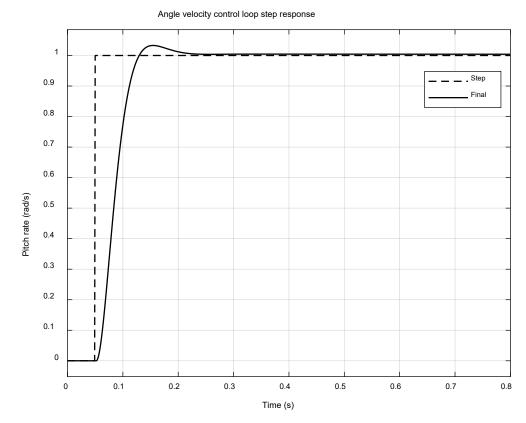


Figure: Step response with a group of satisfied PID parameters



#### **□** Simulation Procedure

#### (3) Step3: Adjust the PID parameters

#### for the angle control loop

Adjust the proportional term for the angle control loop, corresponding to the variable "Kp\_PITCH\_ANGLE" in the file "Init\_control.m". Based on the angular velocity control loop parameters obtained in Step 2, replace the desired pitch angle with a step input and set the "pitch" signal line and the step input as "Enable Data Logging".

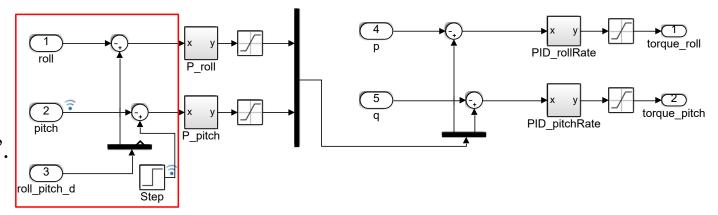


Figure: Angle control loop tune model




#### **□** Simulation Procedure

#### (3) Step3: Adjust the PID parameters for the angle control loop

Increase the proportional term parameter gradually and observe the step response in the "Simulation Data

Inspector".

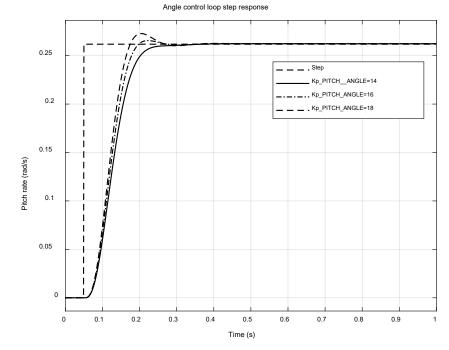

 $Kp_RP_ANGLE = 14;$ 

**Kp\_RP\_AgngleRate = 0.10;** 

 $Ki_RP_AgngleRate = 0.02;$ 

Kd\_RP\_AgngleRate = 0.001;

Figure: Pitch angle step response with different parameters





#### **■** Simulation Procedure

#### (4) Step4: Sweep to get the Bode plot

Specify signals as the input and the output for Bode plot. Specify the desired pitch angle input line as "Open-loop Input", and the actual output as "Open-loop Output". The Bode plot obtained using these values is shown on the right.

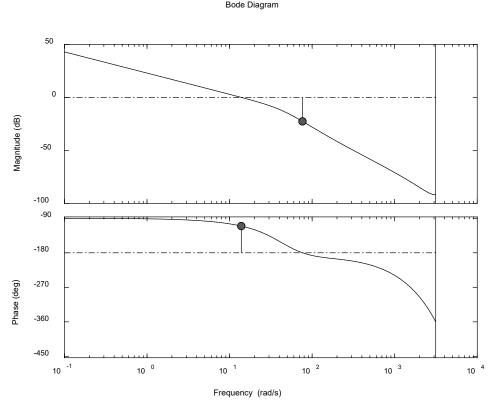


Figure: Bode plot of open loop pitch angle control loop



#### **■** Experimental Objectives

#### ■ Things to prepare

- (1) Hardware: Multicopter Hardware System, Pixhawk Autopilot System;
- (2) Software: MATLAB 2017b and above, Simulink-based Controller Design and Simulation Platform, HIL Simulation Platform, Experiment Instruction Package "e5.3" (https://flyeval.com/course)

#### **■** Objectives

- (1) Establish the transfer function model of the attitude control loop, and then design a compensator for the attitude angular velocity control loop satisfying the following conditions: steady-state error  $e_{rss} \le 0.01$ , phase margin > 65 and cut-off frequency > 10rad/s. The attitude angle control loop is satisfied when cut-off frequency > 5rad/s, phase margin > 60;
  - (2) Complete the SIL, HIL simulation and flight test experiments with the designed controller





#### **□** Design Procedure

#### (1) Step1: Simplify the overall structure

Take the pitch channel for example. The simplified model is shown below.

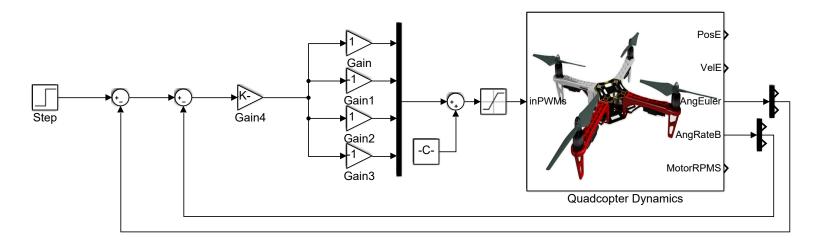


Figure: Simulink model "AttitudeControl tune.slx"





#### **□** Design Procedure

#### (2) Step2: Angle velocity-control loop analysis

The input and output are the desired angular velocity and the angular velocity, respectively.

Specify these signals as the input and output for the Bode plot, as shown on the right.

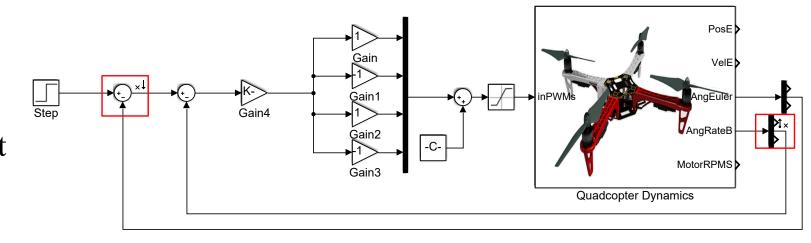


Figure: Specified signals as input and output



#### **□** Design Procedure

#### (3) Step3: Obtain the transfer

#### function model

After the Bode plot is obtained, a variable, "linsys1" appears, in the "Linear Analysis Workspace". The transfer function model can be obtained using the operation shown on the right.

$$\frac{20538}{(s+9.132e-07)(s+50)} \longrightarrow \frac{410.76}{s(0.02s+1)}$$

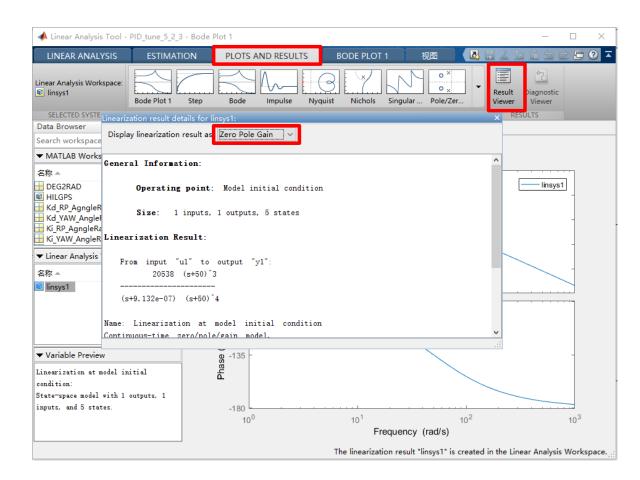


Figure: Transfer function of angular velocity control loop



#### **□** Design Procedure

#### (4) Step4: Adjust open-loop gain

First, the open-loop gain is adjusted according to the steady-state error. When there is no compensator, the steady-state error of the system  $e_{rss}$  with an input r(t) = t can be obtained by the final value theorem as

$$e_{rss} = \frac{1}{K}$$

where K is the open-loop gain. Because  $e_{rss} \le 0.01$ ,  $K \ge 100$ , no adjustment is needed because its open-loop K = 410.76.



## (5) Step5: Design a compensator for the angular velocity control loop

First, draw a Bode plot of the initial system, as shown on the right.

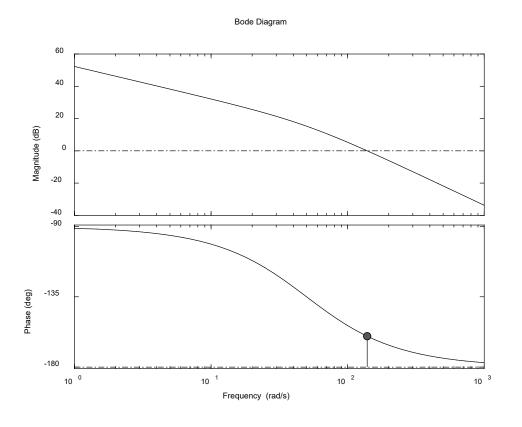


Figure: Angle velocity control open-loop Bode plot without compensation



#### (5) Step5: Design a compensator for the angular velocity control loop

In the Bode plot, it can be observed that the phase margin  $_{\gamma=19.8^{\circ}}$  does not meet the requirements. Consider designing a phase-lag compensator as it not only ensures that the phase margin meets the specified requirements but also improves the system's ability to suppress high-frequency noise. Consider setting the cut-off frequency at  $\omega_c = 12.9 rad / s$ , where the phase margin is  $76^{\circ}$  which satisfies the requirements, the gain margin is 29.8 dB. At a frequency  $\omega_c$ , the corresponding amplitude should be 0dB after compensation. Based on the typical lag-lead compensation Bode plot, we can obtain the following relationship.

$$20\lg b + 20\lg \left| G(j\omega_c') \right| = 0$$

Thus, b=0.0324. To reduce the phase lag effect of the compensator on the curve at frequency  $\omega_c$ , the cutoff frequency of the compensator  $(bT)^{-1}$ should be located ten decades away from  $\omega_c$ , i.e.,

$$(bT)^{-1} = 0.1\omega_c'$$

Hence, T = 23.9558. The transfer function of the compensator is given as follows.

$$G_c(s) = \frac{1+bTs}{1+Ts} = \frac{1+0.775194s}{1+23.955779s}$$





#### **□**Design Procedure

#### (5) Step5: Design a compensator for the angular velocity control loop

The Bode plot obtained after adding the compensator is shown below.

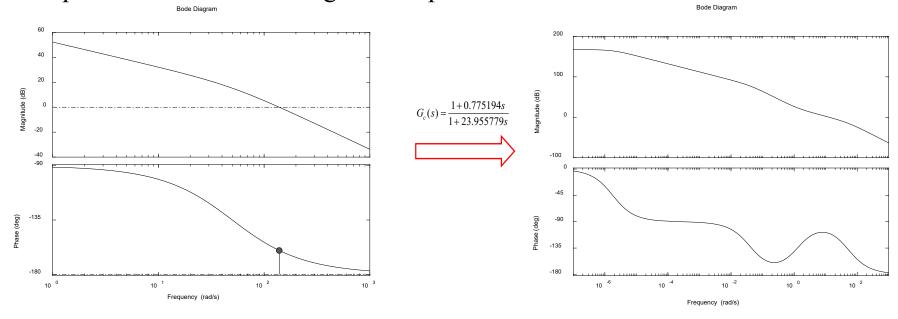


Figure: Angle velocity control open-loop Bode plot before and after compensation





#### **□**Design Procedure

#### (6) Step6: Design a compensator for the angle control loop

The angle control loop is also designed as a feedback closed loop, based on which, a compensator is designed. Specify signals as the input and the output, as shown below.

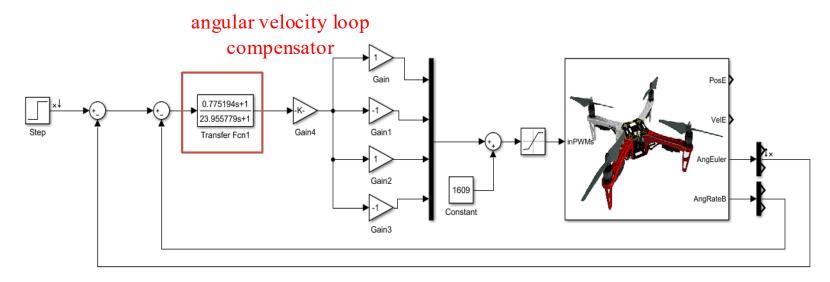


Figure: Simulink model "AttitudeControl\_tune.slx"





## **□**Design Procedure

## (6) Step6: Design a compensator for the angle control loop

The resultant open-loop Bode plot is obtained shown on the right.

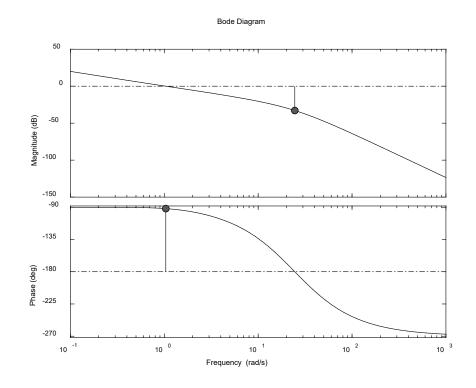


Figure: Angle open-loop Bode plot without compensation



#### **□**Design Procedure

#### (6) Step6: Design a compensator for the angle control loop

It can be observed that the cut-off frequency is 1.04 rad/s at a phase margin of 88.1. According to the design requirements of the attitude angle control loop, consider increasing the open-loop gain. According to the figure, we hope to locate the new cut-off frequency at  $\omega$ =5.3rad/s, where the corresponding mplitude is -14dB. This implies that after adding the compensator, the amplitude of Bode plot at the frequency  $\omega$ =5.3rad/s needs to be 0dB. Then,

$$20\lg(K_2) = 14$$

Thus,  $K_2 = 5.0119$ 



## **□** Design Procedure

(6) Step6: Design a compensator for the angle control loop

The Bode plot obtained after adding the compensator, where the cut-off frequency is 5.3 rad/s and the amplitude margin is 67.1°.

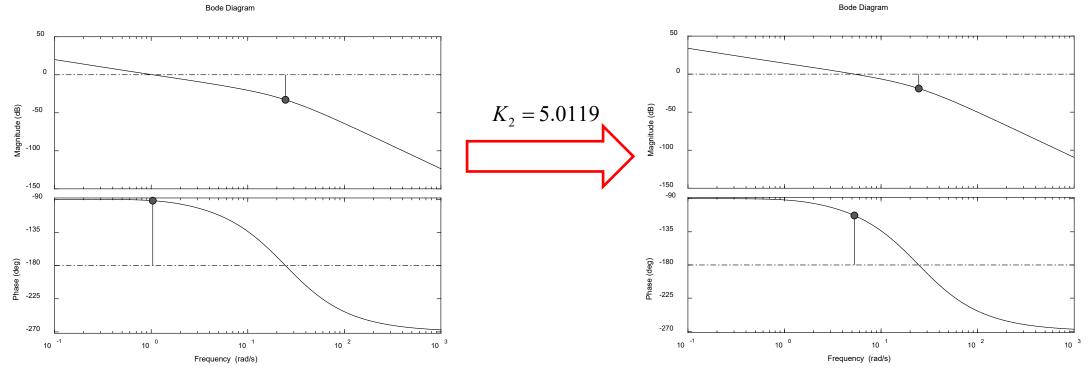


Figure: Angle control open=loop Bode plot after compensation





#### **□** Simulation procedure

#### (1) Step1: Discretize the continuous-time compensator

The designed compensator is an stransfer function, which has to be discretized so that it can be run on the Pixhawk autopilot, a digital computer. The "c2d" function in MATLAB is used as:

$$H = tf([num], [den])$$

$$Hd = c2d(H, Ts, 'foh')$$

Here, "num" is the transfer function numerator coefficient vector, "den" is the transfer function denominator coefficient vector, and "Ts" is the sample time, "Ts= 0.004s".

The s transfer function is converted into a z transfer function as follows

$$G_c(s) = \frac{1 + 0.775194s}{1 + 23.955779s} \rightarrow G_c(z) = \frac{0.03236 \text{ z} - 0.03219}{\text{z} - 0.9998}$$



#### **□** Simulation procedure

(2) Step2: Replace the control model

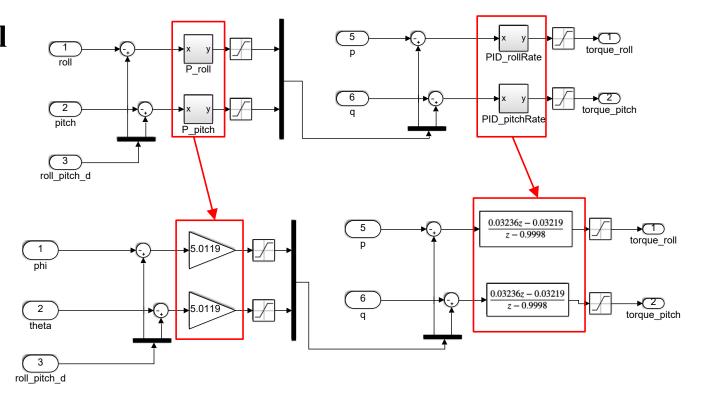


Figure: PID controller replaced in the HIL simulation model



## **□** Simulation procedure

#### Step3: HIL simulation

It is observed that by releasing of the control stick, the quadcopter can

quickly return to its previous stable state without significant oscillations.

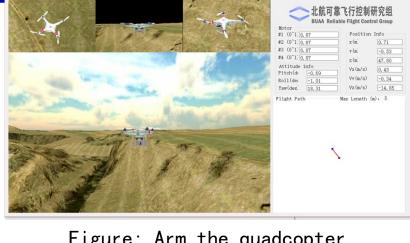


Figure: Arm the quadcopter



Figure: Move the control stick to change roll angle



Figure: Move the control stick to change pitch angle



## **□** Flight Test Procedure

#### (1) Step1: Quadcopter configuration

The multicopter used in the outdoor flight tests is an F450 quadcopter For outdoor flight tests, the airframe of Pixhawk should be changed from "HIL Quadcopter X" to "DJI Flame Wheel F450" in QGC and all sensors should also be calibrated in QGC.



Figure: F450 airframe schematic



## **□** Flight Test Procedure

(2) Step2: Simulink model for flight test

Compared with the model in the HIL experiment, the flight test model is changed the PWM output. A new data recording module is added to the model, A "invalid.msg.specified" warning block appears automatically when the Simulink model is opened.

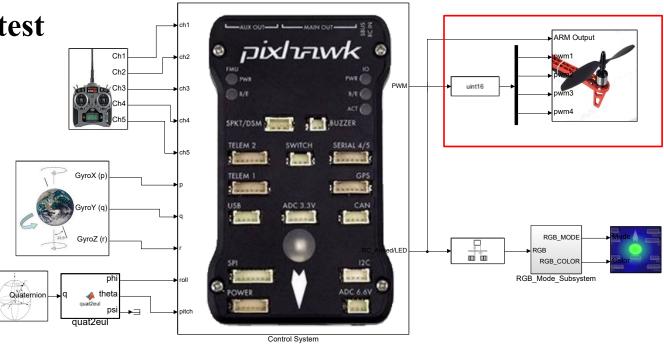


Figure: Model for flight test, Simulink model "AttitudeControl FIY.slx"





## **□** Flight Test Procedure

#### (2) Step2: Simulink model for flight test

- 1) Customize the message file. Establish the file "costom\_attctrl\_e5.msg" Save the file to the folder "C:\PX4PSP\Firmware\ msg"("C:\PX4PSP" is the default software package installing directory).
- 2) Open the file "C:\PX4PSP\Firmware\msg\CmakeLists.txt" and add "costom\_attctrl\_e5.msg" to the bottom line of "set()".
- 3) Open the file "C:\PX4PSP\Firmware\src\modules\logger\logger.cpp" and add "add\_topic("costom\_attctrl\_e5",250)" to the bottom line of "add\_common\_topic()", where "costom\_attctrl\_e5" represents the name of the message, and "250" means written frequency.

The modified file can be found in file "e5\e5.1\PSPfile\". Subsequently, the warning block disappears.

1	#attitude data
2	float32[2] euler_rp
3	float32 yawrate
4	#desired attitude data
5	float32[2] euler_rp_d
6	float32 yawrate_d



## **□** Flight Test Procedure


#### (3) Step3: Upload code

This process is similar to that used for compiling and uploading the code in HIL simulation.

#### (4) Step4: No propellers test

#### 1) Thrust channel

- Remove the propellers and, then connect the battery supply
- Turn on the RC and switch the RC CH5 stick to arm the quadcopter
- Pull up the left-hand stick on the RC transmitter (CH3) and observe if the motors rotate correctly

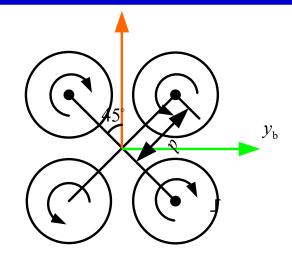

#### 2) Roll channel

- Move the right-hand stick on the RC transmitter (CH1) to the left
- Observe whether the speeds of the motors #1 and #4 increase or the speeds of the motors #2 and #3 decrease




#### ☐ Flight Test Procedure

#### (4) Step4: No propellers test

- 3) Pitch channel
- Pull up the right-hand stick on the RC transmitter (CH2)
- Observe whether the speeds of motors #2 and #4 increase or the speeds of motors #1 and #3 decrease.

#### 4) Yaw channel

- Move the left-hand stick on the RC transmitter (CH4) to the right.
- Observe whether the speeds of motors #1 and #2 increase or if the speeds of motors #3 and #4 decrease.

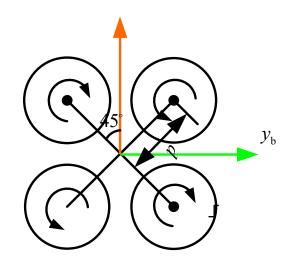




## **□** Flight Test Procedure

#### (4) Step4: No propellers test

- 5) Autonomous control test
- Keep the CH3 channel control stick in the middle and hold the quadcopter horizontally. In next step, tilt the quadcopter to the left. Observe whether the speeds of motors #2 and #3 increase or the speeds of motors #1 and #4 decrease.
- Keep the quadcopter horizontal. Tilt it forward. Observe whether the speeds of motors #1 and #3 increase or the speeds of motors #2 and #4 decrease.

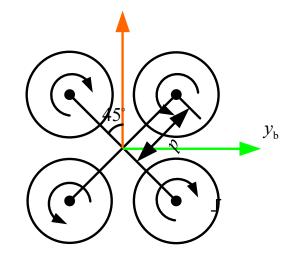

• Keep the quadcopter horizontal. Yaw the quadcopter to the right and observe if the speeds of the motors #1 and #2 decrease or the speeds of motors #3 and #4 increase.

If the quadcopter performs well in all the steps, then it is considered that the flight controller can accurately control the attitude of quadcopter.





## ☐ Flight Test Procedure

#### (5) Step5: Indoor stand test

Install the quadcopter on a test stand and install the propeller as shown on the right. Arm the quadcopter and test the flight.



Figure: A quadcopter on a test stand



#### **□** Flight Test Procedure

#### (6) Step6: Outdoor flight test

To ensure safety, a rope is tethered to the quadcopter, and the other end is tethered to a heavy object. The remote pilot maintains a safe distance from the quadcopter during flight. Notice that it may be difficult to control the altitude as there is no position feedback. Do not rotate the thrust control stick too fast. Furthermore, it is better to let the stick be near the middle position, and rotate the stick smoothly.



Figure: Outdoor flight test



## **□** Flight Test Procedure

#### (7) Step7. Analyze the data

- 1) Take out the SD card in Pixhawd, read out the logger file "log001.ulg", and then copy the file to "E5/e5.4/";
- 2) And use function "ulog2csv" to convert "ULG" file to "CSV" file for analysis. For example, run the function "ulog2csv('log001.ulg','log001')" can extract the contents of the file "log001.ulg" to the folder "log001". And the customized message data is in the file "log001\_costom\_attctrl\_e5\_0.csv".

The stand test data is shown on the right.

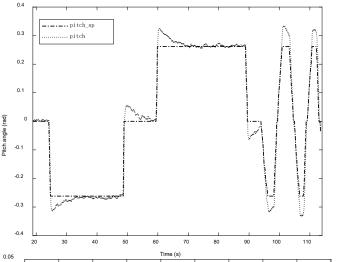


Figure: Pitch step response of a quadcopter on a test stand

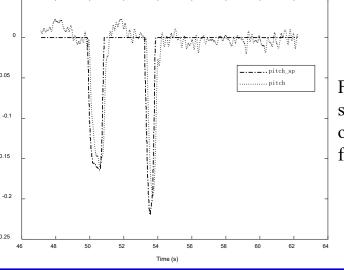


Figure: Pitch step response of outdoor flight test



#### Summary

- (1) Based on the attitude model of the quadcopter, a widely-used PID control method is used, and the design of the attitude controller is completed in Simulink and MATLAB. The simulation performance is displayed in FlightGear.
- (2) Use the PSP tool of Simulink to generate the embedded code and upload it to the Pixhawk autopilot for HIL simulation.
- (3) Adjust the parameters of the PID controller, try to obtain the satisfied parameters, and use the "System Analysis Tool" in MATLAB to obtain the Bode plot of the entire open-loop system to see the phase margin and gain margin of the corresponding closed-loop system.
- (4) Lead-and-lag compensators are designed for both the angle control loop and angular velocity control loop. Furthermore, the design is verified by HIL simulation and flight test.



## **Thanks**