Electrical and Computer Engineering (ECE) Operating Systems and System Programming ECE254 Laboratory Manual

by

Yiqing Huang Paul A.S. Ward

Electrical and Computer Engineering Department University of Waterloo

Waterloo, Ontario, Canada, June 24, 2014

© Y. Huang, and P.A.S. Ward 2014

Contents

Li	st of	Tables	vii
Li	${ m st}$ of	Figures	X
Pı	refac	\mathbf{e}	1
Ι	La	ab Administration	1
II	${f L}$	ab Projects	5
1	Lab	ol: Introduction to Linux System Programming	6
	1.1	Objective	6
	1.2	Starter Files	6
	1.3	Pre-lab Preparation	7
	1.4	Warm-up Exercises	7
	1.5	Lab1 Assignment	8
		1.5.1 Man Page	8
		1.5.2 Hints	10
	1.6	Deliverables	10
		1.6.1 Pre-lab Deliverables	10
		1.6.2 Post-lab Deliverables	10
	1.7	Marking Rubric	11

2		Lab2: Introduction to ARM RL-RTX Kernel and Application Program-		
	min	$_{ m 1g}$	L 2	
	2.1	Objective	12	
	2.2	Starter Files	12	
	2.3	Pre-lab Preparation	13	
	2.4	Warm-up Exercises	13	
		2.4.1 Build and Run the HelloWorld Application	13	
	2.5	Real-time Executive Exercises	18	
		2.5.1 Manual of RL-RTX	19	
		2.5.2 Creating a Real-time Executive Application	20	
		2.5.3 Building an RL-RTX Library for Cortex-M3	23	
		2.5.4 Creating a Multi-project Workspace	26	
		2.5.5 Making an RTX Application with a Self-built RTX Library	28	
	2.6	Lab2 Assignment	30	
		2.6.1 Questions	30	
		2.6.2 Programming Project Description	30	
		2.6.3 Adding a New Function to the RTX Library	31	
		2.6.4 Using the Newly Created RTX Function	33	
	2.7	Deliverables	34	
		2.7.1 Pre-lab Deliverables	34	
		2.7.2 Post-lab Deliverables	34	
	2.8	Marking Rubric	34	
3	Lab	o3: Task Management in RL-RTX	35	
	3.1	Objective	35	
	3.2	Starter files	35	
	3.3	Pre-lab Preparation	36	
	3.4	Lab3 Assignment	36	
		3.4.1 Questions	36	
		3.4.2 Programming Project	38	

		3.4.3 Source Code File Organization Convention	41
	3.5	Deliverables	42
		3.5.1 Pre-Lab Deliverables	42
		3.5.2 Post-Lab Deliverables	42
	3.6	Marking Rubric	43
4	Lab	4: Inter-process Communication by Message Passing	44
	4.1	Objective	44
5	Lab	5: Thread Concurrency Control	45
	5.1	Objective	45
IJ	I I	Development Environment Quick Reference Guide	46
6	Intr	roduction to ECE Linux Programming Environment	47
	6.1	Linux Hardware Environment	47
	6.2	How to Connect to Linux Servers	47
	6.3	Work Environment Setup	48
		6.3.1 Setting up Remote Linux Graphic Support	48
		6.3.2 Mapping Linux Account on Nexus	49
	6.4	Basic Software Development Tools	51
		6.4.1 Editor	51
		6.4.2 C Compiler	52
		6.4.3 Debugger	52
	6.5	More on Development Tools	53
		6.5.1 How to Automate Build	53
		6.5.2 Version Control Software	55
		6.5.3 Integrated Development Environment	56

7	Kei	l Softw	vare Development Tools	58			
	7.1	Creati	ng an Application in μ Vision4 IDE	58			
		7.1.1	Create a New Project	59			
		7.1.2	Managing Project Components	59			
		7.1.3	Build and Download	63			
	7.2	Debug	gging	65			
		7.2.1	Disabling CRP	66			
		7.2.2	Simulation	66			
		7.2.3	Configure In-Memory Execution Using ULINK Cortex Debugger	66			
8	Pro	gramn	ning MCB1700	70			
	8.1	The T	humb-2 Instruction Set Architecture	70			
	8.2	ARM	Architecture Procedure Call Standard (AAPCS)	70			
	8.3	Cortex	x Microcontroller Software Interface Standard (CMSIS)	73			
		8.3.1	CMSIS files	74			
		8.3.2	Cortex-M Core Peripherals	74			
		8.3.3	System Exceptions	76			
		8.3.4	Intrinsic Functions	76			
		8.3.5	Vendor Peripherals	76			
	8.4	Access	sing C Symbols from Assembly	77			
	8.5	SVC I	Programming: Writing an RTX API Function	79			
A	For	ms		82			
В	MD	K-AR	M Installation	84			
\mathbf{C}	Kei	l MCE	31700 Hardware Environment	86			
	C.1	MCB1	700 Board Overview	86			
	C.2	2.2 Cortex-M3 Processor					
		C.2.1	Registers	89			
		C.2.2	Processor mode and privilege levels	91			

Refere	nces		98
C.5	Data	Types	97
	C.4.4	Exception Return	96
	C.4.3	EXC_RETURN Value	96
	C.4.2	Exception Entry	93
	C.4.1	Vector Table	93
C.4	Excep	otions and Interrupts	93
C.3	Memo	ory Map	92
	C.2.3	Stacks	92

List of Tables

1	Project Deliverable Weight of the Course Grade and Deadlines. Replace the "id" in "Gid" with the two digit group ID	3
2.1	Lab2 Marking Rubric	34
3.1	Lab3 Marking Rubric	43
6.1	Programming Steps and Tools	51
8.1	Assembler instruction examples	71
8.2	Core Registers and AAPCS Usage	72
8.3	CMSIS intrinsic functions	77
C.1	Summary of processor mode, execution privilege level, and stack use options	92
C.2	LPC1768 Memory Map	93
C.3	LPC1768 Exception and Interrupt Table	94
C.4	EXC_RETURN bit fields	96
C.5	EXC RETURN Values on Cortex-M3	96

List of Figures

2.1	Keil IDE: List of Targets	13
2.2	Keil IDE: Target Option Button	14
2.3	Keil IDE: Target Default Memory Map Configuration	14
2.4	Keil IDE: Simulator Debugger Configuration	15
2.5	Keil IDE: Build Button	15
2.6	Keil IDE: Start/Stop Debug Session Button	15
2.7	Keil IDE: Evaluation Mode Code Size Warning Dialog Box	15
2.8	Keil IDE: Enable UART Window View	16
2.9	Keil IDE: UART Window View and Run Button	16
2.10	Keil IDE: Target In-Memory Execution Memory Map Configuration	17
2.11	Keil IDE: ULINK2/ME Cortex Debugger Configuration	17
2.12	Keil IDE: RL-RTX Manual	19
2.13	Keil IDE: Using RTX Kernel	22
2.14	Keil IDE: RTX HelloWorld Project Files	22
2.15	Configuring RTX Kernel	23
2.16	RTX Library Source Files for Cortex-M3	24
2.17	RTX Library Project Components for Cortex-M3	25
2.18	RTX Library Project Optimization Level Setting	26
2.19	Keil IDE: Create New Multi-Project Worksapce	26
2.20	Keil IDE: Naming a New Multi-Project Worksapce	27
2.21	Keil IDE: Adding a μV ision Project into Worksapce	27
2.22	Keil IDE: Adding RTX_CM_Lib.uvproj into Worksapce	28

2.23	Keil IDE: Workspace with Two Projects
2.24	Keil IDE: Batch Build
2.25	Keil IDE: Set an Active Project
2.26	Keil IDE: Removing Linkage with Stocked RTX Library
2.27	Keil IDE: Adding Your Own RTX Library
3.1	Keil IDE: Search 37
3.2	Keil IDE: Location of Test Specification File
6.1	Invoking Terminal Clients on an ECE Nexus PC
6.2	Invoking Xming on an ECE Nexus Computer
6.3	SSH Secure Shell Client X11 Setting
6.4	PuTTY X11 Forwarding Setting
6.5	SSH Secure Shell Client X11 Setting
7.1	Keil IDE: Create a New Project
7.2	Keil IDE: Choose MCU
7.3	Keil IDE: Copy Startup Code
7.4	Keil IDE: A default new project
7.5	Keil IDE: Manage Project Components
7.6	Keil IDE: Manage Components Window
7.7	Keil IDE: Updated Project Profile
7.8	Keil IDE: Add Source File to Source Group
7.9	Keil IDE: Updated Project Profile
7.10	Keil IDE: Create New File
7.11	Keil IDE: Final Project Setting
7.12	Keil IDE: Selecting Output Folder
7.13	Keil IDE: Build Target
7.14	Keil IDE: Build Target
	Keil IDE: Download Target to Flash
7.16	Keil IDE: Debugging

7.17	startup_LPC17xx.s excerpt	67
7.18	Keil IDE: Using Simulator for Debugging	67
7.19	Keil IDE: Using Simulator for Debugging	68
7.20	Keil IDE: Using ULINK Cortex Debugger	68
7.21	Keil IDE: Configure for In-Memory Execution	68
8.1	Role of CMSIS	73
8.2	CMSIS Organization	74
8.3	CMSIS Organization	75
8.4	CMSIS NVIC Functions	75
8.5	SVC as a Gateway for OS Functions [6]	79
В.1	MDK-ARM Installation Steps: Choose Example Projects	84
B.2	MDK-ARM Installation Steps: Finish	85
В.3	MDK-ARM Installation Steps: ULINK Pro Driver	85
C.1	MCB1700 Board Components	87
C.2	MCB1700 Board Block Diagram	87
C.3	LPC1768 Block Diagram	88
C.4	Simplified Cortex-M3 Block Diagram	89
C.5	Cortex-M3 Registers	90
C.6	Cortex-M3 Operating Mode and Privilege Level	91
C.7	Cortex-M3 Exception Stack Frame	95

Preface

Two operating systems are used in laboratories. One is the general purpose operating system Linux that supports Intel processors on personal computers. The second is the ARM RL-RTX that supports ARM Cortex-M3 processors on Keil MCB1700 boards.

The Linux computing environment is for practising system programming aspect of the course. The ARM RL-RTX, a real-time operating system library, is for practising the operating system kernel programming aspect of the course.

The first purpose of this document is to provide the descriptions of each laboratory project. The second purpose of this document is a quick reference guide of the relevant development tools for completing laboratory projects.

Who Should Read This Lab Manual?

This lab manual is written for students who are taking Electrical and Computer Engineering (ECE) Operating Systems and System programming course ECE254 in the University of Waterloo.

What is in This Lab Manual?

This manual is divided into three parts.

Part I describes the lab administration policies

Part II is a set of course laboratory projects as follows.

- Lab0A: Introduction to Linux system programming
- Lab0B: Introduction to ARM RL-RTX kernel and application programming
- Lab1: Task management in ARM RL-RTX

- Lab2: Inter-process communication by message passing
- Lab3: Concurrency control

Part III is the reference guide of the development tools for Linux and ARM RL-RTX. The main topics are as follows.

- Software Development Tools on Linux
 - Linux hardware environment
 - Editors
 - Compiler
 - Debugger
 - Utility to automate build
 - Utility for version control
- Keil MCB1700 Development Hardware Environment and Software Tools
 - Keil MCB1700 hardware environment
 - Keil MCB1700 software development Tools
 - Programming MCB1700 with ARM RL-RTX
 - * Building an RTX application
 - * Building a customized ARM RL-RTX library
 - * Creating an application with customized ARM RL-RTX library
 - Programming MCB1700

Acknowledgments

We would like to sincerely thank our students who took ECE254 and MTE241 ¹ courses in the past two years. They provided constructive feedback every term to make the manual more useful to address problems that students would encounter when working on each lab assignment.

Special thank goes to Dr. Thomas Reidemeister who shared his prototyping work in SE350 2 course project on Keil MCB1700 boards with us.

¹MTE241 is the course number for Introduction to Real-time Systems in the University of Waterloo Mechatronics Engineering program.

²SE350 is the course number for Operating Systems in the University of Waterloo Software Engineering Program.

We are grateful to teaching assistants Bo Zhu, Dr. Nabil Drawil, Pei Wang, Shasha Zhu, Zheng Wu and Zack Newsham who provided valuable feedback and improved lab tutorials.

Dr. Ajit Singh, Dr. Rodolfo Pellizzoni, and Douglas W. Harder in the Electrical and Computer Engineering department have provided valuable laboratory project improvement feedback. Dr. Pellizzoni proof-read the entire manual meticulously. Douglas W. Harder also carefully proof-read descriptions of each lab. We warmly acknowledge their contributions.

The project and manual won't be possible without lab facilities. Thank Roger Sanderson for providing us with lab tools and resources. Our gratitude also goes out to Eric Praetzel who sets up the Keil boards in lab and maintains the Keil software on Nexus machines; Laura Winger who managed to customize the boards so that we have the neat plastic cover to protect our hardware. We appreciate that Bernie Roehl and Rasoul Keshavarzi-Valdani have shared their valuable Keil board experiences with us. Bob Boy from ARM always answers our questions in a detailed and timely manner. Thank everyone who has helped.

Part I Lab Administration

Lab Administration Policy

Group Lab Policy

- Group Size. All labs are done in a group of two. A size of three is only considered in a lab section that has an odd number of students and only one group is allowed to have a size of three. All group of three requests are processed on a first-come first-served basis. A group size of one is not permitted except that your group is split up. There is no workload reduction if you do the labs individually. Everyone in the group normally gets the same mark. The Learn at URL http://learn.uwaterloo.ca is used to signup for groups. The lab group signup is due by 4:30pm on the First Friday of the academic term. Late group sign-up incurs a 5% per day final lab mark deduction.
- Group Split-up. If you notice workload imbalance, try to solve it as soon as possible within your group or split-up the group as the last resort. Group split-up is only allowed once. You are allowed to join a one member group after the split-up. But you are not allowed to split up from the newly formed group again. There is one grace day deduction penalty to be applied to each member in the old group. We highly recommend everyone to stay with your group members as much as possible, for the ability to do team work will be an important skill in your future career. Please choose your lab partners carefully. A copy of the code and documentation completed before the group split-up will be given to each individual in the group.
- Group Split-up Deadline. To split from your group for a particular lab, you need to notify the lab instructor in writing and sign the group slip-up form (see Appendix). Labn (n=1,2,3,4) group split-up form needs to be submitted to the lab instructor by 4:30pm Thursday in the week that Labn has scheduled lab sessions. If you are late to submit the split-up form, then you need to finish Labn as a group and submit your split-up form during the week where Lab(n+1) has scheduled sessions and split starting from Lab(n+1).

Deliverable	Weight	Due Date	File Name
Group Sign-up		04:30pm May. 09th	
LAB1	2%	11:59pm May. 13th	LAB1_Gid.zip
LAB2	2%	11:59pm May. 27th	LAB2_Gid.zip
LAB3	6%	11:59pm Jun. 26th	LAB3_Gid.zip
LAB4	4%	11:59pm Jul. 08th	LAB4_Gid.zip
LAB5	6%	11:59pm Jul. 22nd	LAB5_Gid.zip

Table 1: Project Deliverable Weight of the Course Grade and Deadlines. Replace the "id" in "Gid" with the two digit group ID

Lab Assignments Grading and Deadline Policy

Labs are graded by lab TAs based on the rubric listed in each lab. The weight of each lab towards your final course grade is listed in Table 1.

- Lab Assignment Preparation and Due Dates. Students are required to prepare the lab well before they come to the schedule lab session. Pre-lab deliverable for each lab is due before the scheduled lab session starts. During the scheduled lab session, we either provide in lab help or conduct lab assignment evaluation or do both at the same time. Table 1 lists the Post-lab deliverable deadlines. Please be advised that lab sessions during the midterm week are cancelled.
- Lab Assignment Late Submissions. There are five grace days ³ that can be used for some Post-lab deliverables late submissions. A Post-lab deliverable that does not accept a late submission will be clearly stated in the lab assignment description. Normally grace days are for lab reports. Labs whose evaluation involves demonstrations do not accept late submissions of the code. A group split-up will consume one grace day. After all grace days are consumed, your late submission will automatically get a grade of zero.

Lab Assignments Solution Internet Policy

It is not permitted to post your lab assignment solution source code or lab report on the internet freely for public to access. For example, it is not acceptable to host a public repository on GitHub that contains your lab assignment solutions. A warning with instructions

³Grace days are calendar days. Days in weekends are counted.

to take the lab assignment solutions off the internet will be sent out upon the first offence. If the no action is taken from the offender within twenty-four hours, then a lab grade zero will automatically be assigned to the offender.

Seeking Help Outside Scheduled Lab Hours

- Discussion Forum. We recommend students to use the Learn discussion forum to ask the teaching team questions instead of sending individual emails to lab teaching staff. For questions related to lab projects, our target response time is one business day before the deadline of the particular lab in question. ⁴. After the deadline, there is no guarantee on the response time.
- Office Hours. During weeks where there are no scheduled labs, lab teaching staff hold bi-weekly office hours. The Learn system calendar gives the office hour details.
- Appointments. Students can also make appointments with lab teaching staff should their problems are not resolved by discussion forum or during office hours. When you request an appointment, please specify three preferred times and roughly how long you would like the appointment to be. On average, an appointment is fifteen minutes per project group.

Lab Facility After Hour Access Policy

After hour access to the lab will be given to the class when we start to use the Keil boards in lab. However please be advised that the after hour access is a privilege. Students are required to keep the lab equipment and furniture in good conditions to maintain this privilege.

No food or drink is allowed in the lab (water is permitted). Please be informed that you may share the lab with other classes. When resources become too tight, certain cooperation is required such as taking turns to use the stations in the lab.

⁴Our past experiences show that the number of questions spike when deadline is close. The teaching staff will not be able to guarantee one business day response time when workload is above average, though we always try our best to provide timely response.

Part II Lab Projects

Chapter 1

Lab1: Introduction to Linux System Programming

1.1 Objective

This lab is to introduce the general Linux Development Environment at ECE department and basic Linux system programming procedures to students. After finishing this lab, students will have a good understanding of the following:

- How to use the gcc compiler on Linux.
- How to use the make utility on Linux.
- How to use the ddd debugger on Linux.
- How to read Linux manual page.
- How to write a C program to obtain file attributes.

1.2 Starter Files

The starter file is on GitHub at http://github.com/yqh/ECE254/ under directory lab1/starter. It contains three sub-directories where we have example source code to help you started:

• the cmd_arg demonstrates how to capture command line input arguments;

- the ls demonstrates how to list all files under a directory and obtain owner permission and file types; and
- the pointer demonstrates how to use pointers to access C structure.

Using the code in the starter files is permitted and will not be considered as plagiarism.

1.3 Pre-lab Preparation

Read Chapter 6.

1.4 Warm-up Exercises

This exercise is to practice a few basic UNIX commands on Linux.

- 1. Use the SSH Secure Shell Client to login onto ecelinux.uwaterloo.ca. You are now inside the Linux shell.
- 2. Use the ls command to list all files in your current working directory.
- 3. Read the online manual of the ls command by issuing man ls command to the shell.
 - Which option of ls produces output in long listing format, which includes the file type, permission, ownership, group ownership, size, time of the last modification and file name?
 - What does -a option do?
 - What does -lau option do?
 - What does -lac option do?
- 4. Create a directory as the work space of ECE254 labs. Name the newly created directory as ece254. Read the man page of the command mkdir to see how to do it.
- 5. Change directory to the newly create directory of ece254. The command is cd. Read the man page to find out the exact syntax of the command.
- 6. Clone the entire repository by using the command: git clone https://github.com/yqh/ECE254.git

1.5 Lab1 Assignment

This assignment is to program a command called myls, which is a simplified version of the Linux ls command. You should use the stat, lstat and fstat family of system calls to obtain file attributes. To use system or exec family system calls to execute the ls command directly from C code is not an accepted solution to this programming assignment.

1.5.1 Man Page

Name

myls - list directory contents

Synopsis

myls OPTION DIRECTORY

Description

List information of files in <code>DIRECTORY</code>. The order of the files are listed is not specified. The command will show file type ¹, permissions, ownership, group ownership, size in bytes, time stamp and the file name. The time stamp shown depends on the value of the <code>OPTION</code>:

- -u: last access time.
- -c: last change time.
- -1: last modification time.

Exit status is 0 if OK, 1 if problem.

Expected Output Format

The output format is similar to ls -1 except that the command does not print the number of hard links of a file, which is the second column of the ls -1 output. To be more specific, the myls OPTION DIRECTORY will output eight columns and they are:

¹we only require the program to identify directory, regular file and symbolic link types.

- column 1: standard ten character string to show file type and permissions. For example drwx---- means the file is a directory, user has read, write and execute permissions, and group or others have no permissions;
- column 2: owner user name;
- column 3: group name;
- column 4: size in bytes;
- column 5: abbreviated month name of the time stamp;
- column 6: the day of the month as a decimal number of the time stamp with leading zeros removed:
- column 7: the hour and minute of the time stamp in 24 hour format if the file is created in the current year; or the year in decimal number (four digits) if the year of the time stamp is older than the current year;
- column 8: file name. For a symbolic link, the file name should be followed by " -> " and the file the symbolic link points to.

Each column is separated by white space(s) 2 .

A Sample Program Run

```
[ecelinux1:]myls -u ./
           yqhuang
                                8 May 6 16:14 main.c -> ls_GNU.c
lrwxrwxrwx
                      users
           yqhuang
                              441 May 6 14:25 Makefile
-rw----
                      users
-rw-----
           yqhuang
                      users 4852 Dec 13 2013 ls_GNU.c
lrwxrwxrwx
                               18 May 12 16:12 mybin -> /home/yqhuang/bin/
           yqhuang
                      users
drwx----
           yqhuang
                            4096 Dec 13
                                          2013 ..
                      users
           yqhuang
                      users 10264 May 6 16:14 main.o
-rw-----
           yqhuang
                            4096 Dec 13
                                        2013 .
drwx----
                      users
           yqhuang
                             4930 May 6 16:16 myls.c
-rw-----
                      users
                                       6 16:14 main.out
-rwx----
           yqhuang
                      users 14375 May
           yqhuang
                      users 15156 May
                                       6 16:16 myls
-rw----
           yqhuang
                      users 11008 May
                                      6 16:16 myls.o
                                      6 22:37 test_dir
drwx----
           yqhuang
                      users
                            4096 May
```

²It will be nicer to align each column by padding extra spaces, though this is not a requirement.

1.5.2 Hints

- From the OS point of view, a directory is a file. But it is a special file. Read the man page of opendir(), readdir(), closedir(). Can open()/close() system call open/close a directory? Can you read a directory file by the read() system call? Read the man page of perror(3), which prints a system error message. Use perror() to print out system error when a call fails is a good programming practice.
- The stat(), fstat() and lstat() system calls can be used to obtain file attribute information. Read the man page (section 2) of these system calls. Which one of these system calls gives information about a symbolic link file?
- Execute the Linux "ls -lau /bin", "ls -lac /bin", "ls -la /bin", and "stat <filename>" commands and see the output.
- Study ls_fname.c, ls_ftype.c and ls_fperm.c starter files. The example files show how command line arguments are passed to the main function and how to interpret the st_mode value in the system defined struct stat by using system defined macros.
- Study the man pages of strcmp(3), strcat(3), strlen(3), sprintf(3), readlink(2), getpwuid(3), getgrgid(3), localtime(3), strftime(3) and ctime(3).

1.6 Deliverables

1.6.1 Pre-lab Deliverables

There is no pre-lab deliverable.

1.6.2 Post-lab Deliverables

Here are the steps to create your post-lab deliverable submission.

- Create a directory and name it lab1.
- Put the entire source code with a Makefile under the directory lab1. We expect that typing make in lab1 directory will generate the executable file with name myls. We expect that by typing make clean, all object code and myls file are removed.
- Use zip command to zip up the contents of lab1 directory and name it lab1.zip

Submit the lab1.zip file to Lab1 Dropbox in Learn.

1.7 Marking Rubric

TA will test your source code on one of the ecelinux machines. Total mark is 10. You will get full mark is all required file attributes are displayed correctly. Partial mark will be given based on the portion of the correctly displayed file attributes if not all required attributes are displayed correctly.

Chapter 2

Lab2: Introduction to ARM RL-RTX Kernel and Application Programming

2.1 Objective

This Lab is to introduce the Keil μ Vision4 IDE and ARM RL-RTX development. Students will build the ARM RL-RTX from source. After this lab, students will have a good understanding of the following:

- How to create a μ Vision RTX project;
- How to build an RL-RTX library from source;
- How to create an application with self-built RTX Library;
- How to use SVC as the gateway to program OS functions.

2.2 Starter Files

In https://github.com/yqh/ECE254 GitHub repository, the lab2/starter/ directory contains the following:

- Startup/: frequently used source code; and
- HelloWorld/: a μ Vision project that prints "Hello World!" to UARTO.

2.3 Pre-lab Preparation

• Read Chapters 7 and Section 8.5.

2.4 Warm-up Exercises

Change to the directory where you have the ece254 lab repository. Use "git pull" command to fetch any newly updated files from https://github.com/yqh/ECE254.

Notes

• The Keil IDE does not tolerate space(s) in the path name on Nexus. For example, a project in a directory which contains My Documents as part of the path name sometimes will give you error saying certain files could not be created.

2.4.1 Build and Run the HelloWorld Application

This exercise is to familiarize you with the simulator target and in-memory execution target executions. When you open the provided HellowWorld project, you will see the following two targets as shown in Figure 2.1.



Figure 2.1: Keil IDE: List of Targets

- The HelloWorld SIM target is to use simulator to debug the target with the default memory map.
- The Helloworld RAM target is to use the hardware ULINK/ME Cortex debugger to debug the target. The memory map is reconfigured (see 7.2.3) to relocate everything to RAM and a debugger initialization file (see 7.1) is required.



Figure 2.2: Keil IDE: Target Option Button

Execution of the HelloWorld SIM Target

Open the HelloWorld application and follow the steps listed below.

- 1. Click the Target Option button (see figure 2.2) to verify the following:
 - the default memory map is used (see figure 2.3); and

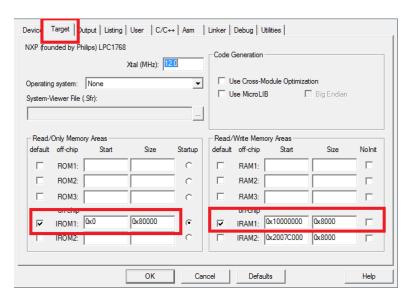


Figure 2.3: Keil IDE: Target Default Memory Map Configuration

- the simulator is used (see figure 2.4).
- 2. Build the HelloWorld SIM Target by pressing the Build button or F7 (see Figure 2.5).
- 3. Click the Start/Stop Debug Session button or press Ctrl-F5 to enter the simulator (see Figure 2.6).



Figure 2.4: Keil IDE: Simulator Debugger Configuration

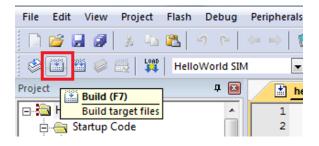


Figure 2.5: Keil IDE: Build Button

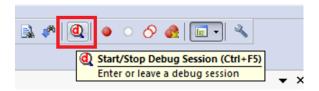


Figure 2.6: Keil IDE: Start/Stop Debug Session Button

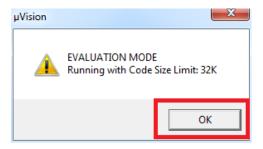


Figure 2.7: Keil IDE: Evaluation Mode Code Size Warning Dialog Box

- 4. Click OK when you are prompt with the code size limit of 32K in evaluation mode warning dialogue box (see Figure 2.7).
- 5. Choose UART#1 from the Serial Windows button (see Figure 2.8). You will see the UART#1 window shown up at the bottom right part of the screen (see Figure 2.9).
- 6. Click the Run button or press F5 key to execute the program under simulator (see

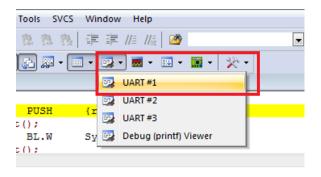


Figure 2.8: Keil IDE: Enable UART Window View

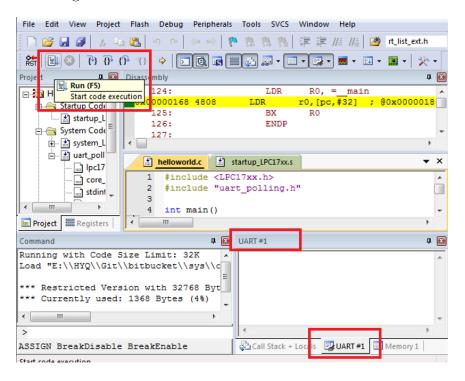


Figure 2.9: Keil IDE: UART Window View and Run Button

Figure 2.9). You will see "Hello World!" appearing in the UART#1 window in the simulator.

7. Click the Start/Stop Debug Session button or press Ctrl-F5 to exit from the simulator (see Figure 2.6).

Execution of the HelloWorld RAM Target

Open the HelloWorld application and follow the steps listed below.

- 1. Click the Target Option button (see figure 2.2) to verify the following:
 - the in-memory exectuion memory map is used (see figure 2.10); and

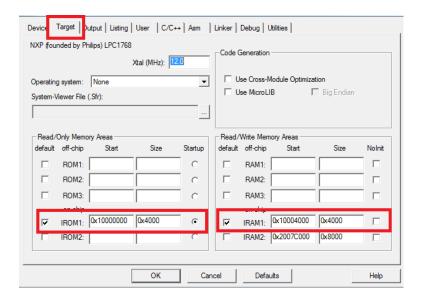


Figure 2.10: Keil IDE: Target In-Memory Execution Memory Map Configuration


• the ULINK2/ME Cortex Debugger is selected with a valid initialization file (see figure 2.11).



Figure 2.11: Keil IDE: ULINK2/ME Cortex Debugger Configuration

2. Build the HelloWorld RAM Target by pressing the Build button or F7 (see Figure 2.5).

- 3. Click the Start/Stop Debug Session button or press Ctrl-F5 to enter a debug session (see Figure 2.6). This target uses the hardware ULINK2/ME Cortex Debugger. Note you should not click the Download button to load the code to the board. When you start a debug session, the debugger initialization file (i.e. RAM.ini) will execute the LOAD command to load the code to the board.
- 4. Click OK when you are prompt with the code size limit of 32K in evaluation mode warning dialogue box (see Figure 2.7).
- 5. Start a PuTTY terminal and make sure you have the correct configuration as shown in Figures 2.12(a) and 2.12(b).

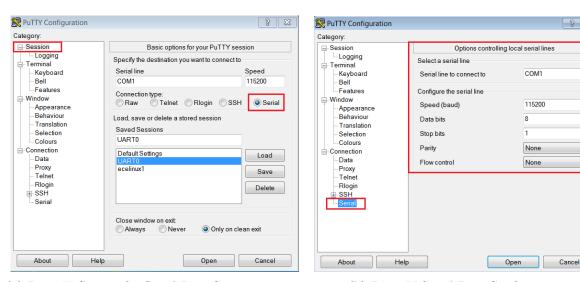

(a) PuTTY Session for Serial Port Communication

(b) PuTTY Serial Port Configuration

- 6. Click the Run button or press F5 key to execute the program on the board and you should see "Hello World!" displayed on PuTTY. Note that nothing will appear in the UART#1 window because we are not using the simulator to debug.
- 7. Click the Start/Stop Debug Session button or press Ctrl-F5 to exit from the debug session (see Figure 2.6).

2.5 Real-time Executive Exercises

The Keil MDK-ARM contains the RealView Real-Time Library (RL-ARM), which has a Real-time Executive (RTX) named RL-RTX. The RTX kernel is a real time operating

system (RTOS) that enables one to create applications that simultaneously perform multiple functions or tasks (statically created processes). Tasks can be assigned execution priorities. The RTX kernel uses the execution priorities to select the next task to run (preemptive scheduling). It provides additional functions for inter-task communication, memory management and peripheral management.

RTX programs are written using standard C constructs and compiled with the RealView Compiler. The RTL.h header file defines the RTX functions and macros that allow you to easily declare tasks and access all RTOS features.

2.5.1 Manual of RL-RTX

The manual of the RL-RTX is accessible through the Keil MDK-ARM Help (see Figure 2.12). The highlighted sections are highly recommended to read through.

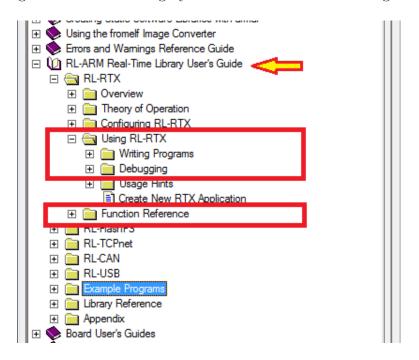


Figure 2.12: Keil IDE: RL-RTX Manual

2.5.2 Creating a Real-time Executive Application

Overview

Our goal is to create an application that simultaneously run two tasks which output to UART. The first task displays the value of a loop variable i every one second. The second task displays "Task2: Hellow World!" every three seconds. By using the task management and time management functions provided by RL-RTX, we could create such an application very easily.

Listing 2.1 shows the source code of the modified helloworld.c which now calls RTX API functions. Two tasks are defined. A task is a function whose prototype starts with the keyword __task. A task function normally never terminates. If a task function needs to terminate, then os_tsk_delete_self() is required to be called. Otherwise undefined behaviour will happen and will cost lots of your time to debug without any clue.

```
/**
* @file: helloworld.c
* Obrief: Two simple tasks running pseduo-parallelly
*/
#include <LPC17xx.h>
#include <RTL.h>
#include <stdio.h>
#include "uart_polling.h"
__task void task1()
 unsigned int i = 0;
 for(;; i++)
 {
   printf("Task1: %d\n", i);
   os_dly_wait(100);
 }
}
__task void task2()
 while(1)
```

```
printf("Task2: HelloWorld!\n");
    os_dly_wait(300);
}

__task void init(void)
{
    os_tsk_create(task1, 1); // task1 at priority 1
    os_tsk_create(task2, 1); // task2 at priority 1
    os_tsk_delete_self(); // must delete itself before exiting
}

int main ()
{
    SystemInit();
    uart0_init();
    os_sys_init(init);
}
```

Listing 2.1: RTX HelloWorld C Source Code

Detailed Steps

To create an RL-RTX application for MCB1700 boards, first you need to follow the same steps as you create a regular μ Vision application. We already have a HelloWorld application from the warm-up exercises. So this step is done. Next you will need to do three extra steps to make the application an RTX application and the steps are:

1. To include the RTX Library header file RTL.h in the source code.

All the RTX kernel APIs are listed in RTL.h file which is by default located at ARM\RV31\INC\ under the Keil software installation directory. You will need to include this file in your C file before you can call any RL-RTX API functions. Adding the following line in your source code helloworld.c after the #include <LPC17xx.h> line:

```
#include <RTL.h>
```

2. To tell the linker to link with the RTX library.

The RL-RTX kernel comes in the form of a pre-compiled library, which by default is located at ARM\RV31\LIB\ under the Keil software installation directory. In order to use the functions in this library, one needs to link the application with RTX kernel library. This is achieved by specifying "RTX kernel" under Operating system in the target option setting (see Figure 2.13).

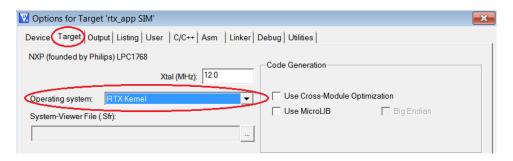


Figure 2.13: Keil IDE: Using RTX Kernel

3. To configure the RTX kernel by modifying source code of RTX_Conf_CM.c. Figure 2.14 is the HelloWorld RTX project setup. Comparing it with the non-RTX μ Vision HelloWorld application used in the warm-up exercises, RTX_Conf_CM.c and Retarget.c 1 are two new files added to the project.

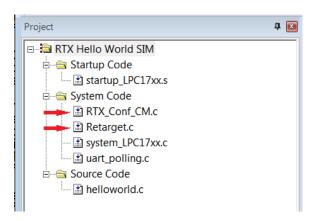


Figure 2.14: Keil IDE: RTX HelloWorld Project Files

The RTX_Conf_CM.c is for RTX kernel configuration such as how big the stack a task needs, how long the time slice should be and what is the CPU frequency et. al..

¹These two files are located in the lab2 starter/Startup directory on GitHub. You should copy these two files to the HelloWorld/src directory where the source code files of the project are located and then add the copied files to the project group. Directly adding these two files to the project group from the starter/Startup folder is not a good programming practice.

The configuration is at source code level through the Configuration Wizard in the μ Vision editing window (see Figure 2.15). Special attention should be paid to the following setting to avoid hard to debug problems:

- Do remember to configure the CPU speed to 100 MHZ through the RTX_Conf_CM.c configuration wizard. Otherwise you will get wrong timing result.
- The default stack size is 200 bytes. Using printf() family functions such as sprintf() can easily cause a stack overflow. Normally 512B would be sufficient. If you are not tight on memory, 1 KB is safer.
- The number of concurrent running tasks is the maximum active tasks the application is allowed to have. If the code has more active tasks than this number, your application will run into undefined hard to debug behaviour.

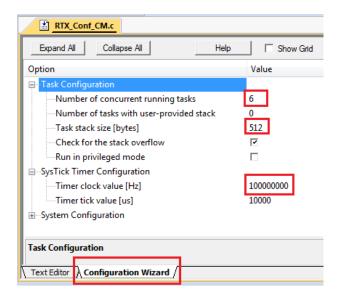


Figure 2.15: Configuring RTX Kernel

The Retarget.c is not RTX application specific. This file implements the low-level I/O functions that higher level I/O functions in C library such as printf() needs. With this file, your RTX task can call C library functions such as printf() and the output will appear in UARTO.

Build the project and execute it both inside the simulator and on the actual board.

2.5.3 Building an RL-RTX Library for Cortex-M3

The ARM RL-RTX kernel comes with source code. You can modify the source code and build your own modified ARM RL-RTX Library. The simplest way to do this is to make a

copy of the existing RTX library project for Cortex-M processors and then start to make modifications. Here are detailed steps:

- 1. Create a folder to hold your RTX Cortex-M3 library project. Let's name the folder RTX_CM3.
- 2. Go to ARM\RL\RTX under the Keil software installation directory and copy the following items to your RTX Cortex-M3 library project folder of RTX_CM3. Note you need to preserve the original directory structure when you make the copy of all the files listed below. Note that the CM directory needs to be put under SRC directory.
 - RTX_Lib_CM.uvopt
 - RTX_Lib_CM.uvproj
 - SRC\CM

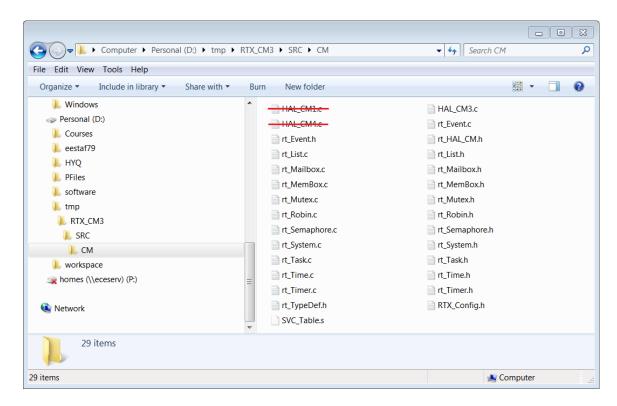


Figure 2.16: RTX Library Source Files for Cortex-M3

3. Start working on your own copy of the RTX library from now on. Remove <code>HAL_CM1.c</code> and <code>HAL_CM4.c</code> files that are under <code>RTX_CM3\SRC\CM</code> directory (see figure 2.16). These two files are for Cortex-M1 and Cortex-M4 processors which is not the hardware in the lab.

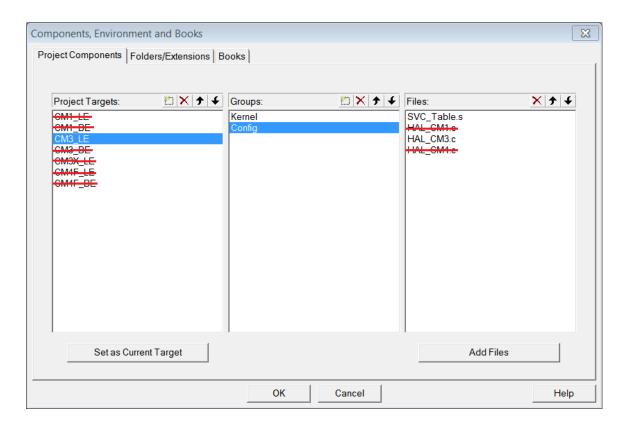


Figure 2.17: RTX Library Project Components for Cortex-M3

- 4. Open RTX_Lib_CM.uvproj under your RTX_CM3 directory that you newly created. Right click the CM3_LE target under the project window to bring up the menu and click "Manage Components". You will only need the CM3_LE target, which supports NXP1768 on MCB1700 boards. Remove all other targets in the Project Targets window. You also need to remove the HAL_CM1.c and HAL_CM4.c files in the Files window (see Figure 2.17).
- 5. Click the Target Option button and activate the C/C++ tab. Set the optimization to Level 0 (-00) in the Language / Code Generation section (see Figure 2.18). Turning off the compiler optimization will allow the debugger to provide useful debugging information during the development.
- 6. Click the Build button to build the library. You will notice a .lib file is created under CM3_LE folder and this is the RTX library for Cortex-M3 processor you just built. The RTX library cannot be executed. You will need to create an RTX Application which calls some of the functions inside the RTX library file in order to see the effect of the library. We will further discuss how to do this in Section 2.5.5.

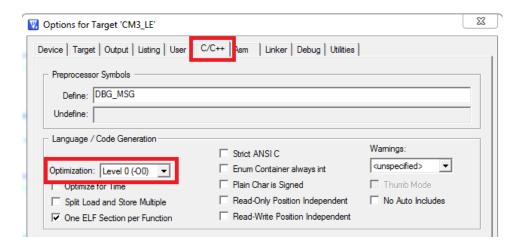


Figure 2.18: RTX Library Project Optimization Level Setting

2.5.4 Creating a Multi-project Workspace

We now have two RTX related projects. One is the RTX HelloWorld application that uses the RL-RTX built by ARM. The second is the self built RTX library for Cortex-M3 processors. We would like to create a workspace so that we can work on these two projects in the same IDE window. The steps are as follows.

- 1. Put the HelloWorld RTX application and the self-built RTX library for Cortex-M3 project in the same folder.
- 2. Click Project \rightarrow New Multi-Project Workspace (see Figure 2.19).



Figure 2.19: Keil IDE: Create New Multi-Project Worksapce

A new window appears to ask you to give a name for the multi-project workspace and let's call it helloworld_rtxlib.uvmpw (see Figure 2.20) and press the Save button.



Figure 2.20: Keil IDE: Naming a New Multi-Project Worksapce

3. A new dialogue box will pop up to ask you add μ Vision projects into the workspace. Click the New button to start adding a project and click the Browse button to select a project file (see Figure 2.21).



Figure 2.21: Keil IDE: Adding a μ Vision Project into Worksapce

Add the RTX_CM_Lib.uvproj to the workspace first(see Figure 2.22). Similarly, add the RTX_HelloWorld.uvproj to the workspace. Click the OK button to finish adding projects into the workspace.

- 4. Two projects appear under the Project Window (see Figure 2.23. Click the Batch Build button (see Figure 2.23 to bring up the Batch Build window.
 - Select all the targets you want to build in a batch (see Figure 2.24). By setting up batch build, multiple targets can be built by a single click of the Build button inside the batch build dialogue box ².

²Whenever you make a change in the RTX Library project, you need to rebuild the library and the application that uses the library. So batch build will make multiple builds easy to carry out.



Figure 2.22: Keil IDE: Adding RTX_CM_Lib.uvproj into Worksapce



Figure 2.23: Keil IDE: Workspace with Two Projects

2.5.5 Making an RTX Application with a Self-built RTX Library

Having finished the workspace setup, we now start to modify the RTX HelloWorld application so that it links with the self-built RTX Library instead of the pre-built RTX library provided by ARM. The steps are as follows.

- 1. Activate the RTX_HelloWorld project by highlighting the project name and right click. Then click the Set as Active Project (see Figure 2.25).
- 2. Remove the pre-built RTX library by ARM from the target option setting (see Figure 2.26).



Figure 2.24: Keil IDE: Batch Build

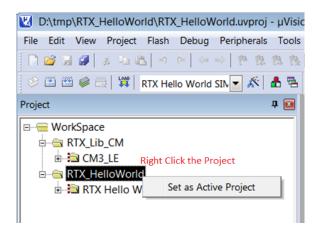


Figure 2.25: Keil IDE: Set an Active Project

3. Add the RTX library we built (i.e. RTX_CM3.lib) to the project (see Figure 2.27).

Build and download the updated HelloWorld RTX application. Verify it works both under simulator and on the board.



Figure 2.26: Keil IDE: Removing Linkage with Stocked RTX Library

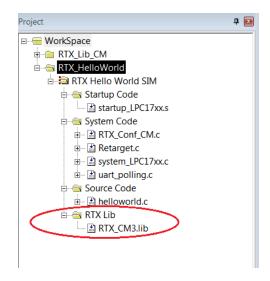


Figure 2.27: Keil IDE: Adding Your Own RTX Library

2.6 Lab2 Assignment

2.6.1 Questions

- 1. The RTX_lib.c is located at ARM\RV31\INC under the default Keil installation directory. What does os_active_TCB array in RTX_lib.c contain?
- 2. Is the TCB of os idle task an element in the os_active_TCB?
- 3. For a task with task ID n, what is the index of this task's TCB in the os_active_TCB array?

2.6.2 Programming Project Description

1. Add a function to RL-RTX API to return the number of active tasks in the system.

int os_tsk_count_get (void);

A task is considered active when its state is not set to INACTIVE in the TCB. Note that the os idle task is a valid task that you should check the state as well. You need to use the SVC as the gateway to access the kernel data structure.

2. Write five simple tasks. One of the tasks calls the os_tsk_count_get function to test the number of active tasks in the system returned by the function.

2.6.3 Adding a New Function to the RTX Library

The self-built RTX library for Cortex-M3 for now provides the same functionality as the pre-built RTX Library provided by ARM for Cortex-M3 processors. In this lab programming project, you are asked to add one new function to the RTX Library. This means you need to modify the source code of the RTX library project.

The default RTL.h file is the RTX user interface. When a new RTX API function is added to the RTX, the corresponding user level interface of the function needs to be added to this file. However to make the newly added function easy to view, we instead will create a new RTL_ext.h file which contains the user level interface of the newly added functions. A good place to put this new header file will be in the directory where the RTX_CM3 library project is resided. Let's create a directory and name it INC. Inside this directory, create a file named RTL_ext.h. Listing 2.2 gives the user interface of the required new function.

Then we need to create the corresponding kernel functions which does the actual work of calculating how many tasks are not in the INACTIVE state. Since this function is related to task management, it is natural to add the kernel function rt_tsk_count_get() implementation in rt_Task.h and rt_Task.c files. However, for the same reason for easy to view the changes we will make to the kernel, we will create two new kernel source code files in the RTX_CM3\SRC\CM directory and name them as rt_Task_ext.h (see Listing 2.3) and rt_Task_ext.c (see Listing 2.4). The rt_Task_ext.c should be added to the RTX library project under the kernel group.

```
/**
* Ofile: RTL_ext.h
*/
#ifndef __RTL_EXT_H__
#define __RTL_EXT_H__
#ifdef __cplusplus
extern "C" {
#endif
typedef unsigned int U32;
#if !(__TARGET_ARCH_6S_M || __TARGET_ARCH_7_M || __TARGET_ARCH_7E_M)
     Functions ARM
#else
     Functions Cortex-M
/* ECE254 Comment: added for lab2 */
extern int rt_tsk_count_get(void);
#define os_tsk_count_get() _os_tsk_get((U32)rt_tsk_count_get)
extern int _os_tsk_get (U32 p) __SVC_0;
#ifdef __cplusplus
}
#endif
#endif
#endif
/* end of file */
```

Listing 2.2: The RTL_ext.h C Source Code

```
/**
 * @file: rt_Task_ext.h
 */
extern int rt_tsk_count_get (void);
/* end of file */
```

Listing 2.3: The rt_Task_ext.h C Source Code

```
/**
* Ofile: rt_Task_ext.c
*/
#include "rt_TypeDef.h"
#include "RTX_Config.h"
#include "rt_System.h"
#include "rt_Task.h"
#include "rt_List.h"
#include "rt_MemBox.h"
#include "rt_Robin.h"
#include "rt_HAL_CM.h"
#include "rt_Task_ext.h"
int rt_tsk_count_get (void) {
   /* add your own code here */
   /* change the following line to return the number of active tasks */
   return 0;
/* end of file */
```

Listing 2.4: The rt_Task_ext.c Template C Source Code

2.6.4 Using the Newly Created RTX Function

To use the newly created function, you will need to include the newly created RTL_ext.h header file in the C source code. Then a task can call this function to obtain the number of tasks that are not in INACTIVE state. The following is an example code excerpt.

```
#include "../../RTX_CM3/INC/RTL_ext.h"
//...
__task void task1()
{
    int num;
    while (1) {
        // ...
        num = os_tsk_count_get();
        printf("number of tasks: %d.\n", num);
        // ...
}
```

Points	Description			
3	Answers to lab assignment questions			
2	Building a multi-project workspace that contains a self-built RTX and an application that links with			
	this RTX			
3	Implementation of os_tsk_count_get			
2	Implementation of testing tasks to test			
	os_tsk_count_get()			

Table 2.1: Lab2 Marking Rubric

2.7 Deliverables

2.7.1 Pre-lab Deliverables

There is no pre-lab deliverable.

2.7.2 Post-lab Deliverables

Submit a compressed archive file that contains the following:

- 1. Answers to questions in Section 2.6.1.
- 2. The entire folder that contains the multi-project workspace where the modified RTX library project and the RTX application project source code to solve the programming project (see Section 2.6.2) are located. Include a README (any useful instructions for evaluation TA) in the folder.

Name the file lab2_Gid.zip, where id is your two digit Group ID, and submit it to Lab2 Dropbox in Learn.

2.8 Marking Rubric

Table 2.1 shows the rubric for marking the lab.

Chapter 3

Lab3: Task Management in RL-RTX

3.1 Objective

This lab is to learn about, and gain practical experience in ARM RL-RTX kernel programming. In particular, you will add three functions to ARM RL-RTX library. After this lab, students will have a good understanding of:

- how to program an RTX function to read kernel task control block related data structure; and
- how to block and unblock a task by using context switching related kernel functions.

3.2 Starter files

The lab3/starter directory in the ECE254 GitHub repository contains a template lab3 project, which is a multi-project workspace that contains one RTX library project and one RTX application that uses the RTX library built by the first RTX library project. In the RTX Library project there two files modified from the original ARM RL-RTX source code so that the ret_val in TCB is changed to U32 and the corresponding assembly code affected due to this changed is modified accordingly. It is very important that you use these modified files rather than the original ones from ARM. These two files are

- the modified HAL_CM3.c; and
- the modified rt_TypeDef.h.

In the RTX application project, you are provided with the following code:

• lab3_main.c

which has the subroutine to map a function pointer address to the function name.

3.3 Pre-lab Preparation

None

3.4 Lab3 Assignment

This lab requires students to read the existing ARM RL-RTX source code and then use the relevant kernel routines to accomplish a programming project (see Section 3.4.1). Reading source code and answer the questions in Section 3.4.1 will help you to complete the programming project.

3.4.1 Questions

- 1. Read the rt_TypeDef.h file and answer the following questions.
 - What is the purpose of the p_lnk variable in the struct OS_TCB?
 - What is the purpose of ret_val in the struct OS_TCB?
 - What is the purpose of tsk_stack and stack variables in struct OS_TCB?
 - If you have a variable with type of struct OS_XCB, will casting this variable to struct OS_TCB keep the p_lnk field?
- 2. Read the rt_Task.c and RTX_lib.c files and answer the following question.
 - What is the purpose of variables mp_tcb and mp_stk?

You may want to search the entire source code to further explore how these variables are set and used (see Figure 3.1).

- 3. Read the rt_init_stack() and rt_get_PSP() functions in HAL_CM3.c file and answer the following questions.
 - What registers are saved on the task stack?
 - How to determine the start and end address of a task stack?

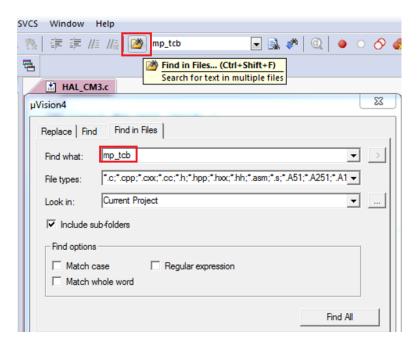


Figure 3.1: Keil IDE: Search

- How to determine the current stack pointer of a task that is *not* in RUNNING state?
- How to determine the current stack pointer of a task that is in RUNNING state?
- 4. Read the RTX Library Reference in the Keil IDE Help and answer the following questions:
 - In an RTX application, how to declare a memory pool named "mympool" that has 20 blocks of memory with block size of 12 bytes?
 - Write one line of code to initialize the "mympool".
 - What is the corresponding kernel function of _alloc_box()?
 - What is the corresponding kernel function of _free_box()?
- 5. Read the rt_List.c file and answer the following questions:
 - What does the rt_put_prio() function do?
 - What does the rt_get_first() function do?

You may want to further explore other functions in the rt_List.c file.

6. Read the rt_Task.c file and answer the following questions:

- What does the rt_block() function do?
- What does the rt_dispatch() function do?
- 7. How to set the return value of a function becomes a bit tricky when context switching is involved. One such example is os_mbx_wait() function. This function will return OS_R_MBX if the task has waited until a message was put in the mailbox (i.e. the task was blocked to wait for a message to arrive and then unblocked when the message arrives). Read the rt_Mailbox.c file and find the lines where the return value of OS_R_MBX is set. Why the corresponding kernel function rt_mbx_wait() does not have a line to set the return value to OS_R_MBX? You may skip the code in functions isr_mbx_receive() and rt_mbx_psh() for the purpose of completing this assignment.
- 8. To block a task, you will need to create a queue that the blocked tasks can stay. There are two global queues for now in the kernel and they are os_rdy and os_dly. What data structure these two queues are using?

3.4.2 Programming Project

Part A

To get familiar with kernel source code, a good start is to write a function to retrieve a kernel data structure. In this assignment, you are to implement a primitive to obtain the task status information from the RTX at runtime given the task id. The function description is as follows.

```
• OS_RESULT os_tsk_get (OS_TID task_id, RL_TASK_INFO *buffer)
```

The primitive returns information about a task. The system call returns a rl_task_info structure, which contains the following fields:

```
typedef struct rl_task_info {
                   /* Task state
 U8
      state:
                                                            */
 U8
                   /* Execution priority
                                                            */
      prio;
                   /* Task ID value for optimized TCB access */
 U8
      task_id;
      stack_usage; /* Stack usage percent value. eg.=58 if 58% */
 void (*ptask)(); /* Task entry address
                                                            */
} RL_TASK_INFO;
```

The state field describes the state of this task and is one of:

INACTIVE

Tasks which have not been started or tasks which have been deleted are in INACTIVE state.

READY

Tasks which are ready to run are in the READY state.

RUNNING

The task that is currently running is in the RUNNING state. Only one task at a time can be in this state.

WAIT_DLY

Tasks which are waiting for a delay to expire are in the WAIT_DLY state. The task is switched to the READY state once the delay has expired.

WAIT_SEM

Tasks which are waiting for a semaphore are in the WAIT_SEM state. When the token is obtained from the semaphore, the task is switched to the READY state.

WAIT_MUT

Tasks which are waiting for a free mutex are in the WAIT_MUT state. When a mutex is released, the task acquires the mutex and switches to the READY state.

WAIT_MBX

Tasks which are waiting for a mailbox message are in the WAIT_MBX state. Once the message has arrived, the task is switched to the READY state. Tasks waiting to send a message when the mailbox is full are also put into the WAIT_MBX state. When the message is read out from the mailbox, the task is switched to the READY state.

WAIT_MEM

Tasks which are waiting for memory are in the WAIT_MEM state. Once the memory is available, the task is switched to READY state. The os_mem_alloc() function is used to place a task in WAIT_MEM state.

These states are described in details in the RL-ARM Real-Time Library User's Guide → Theory of Operation → Task Management section except for WAIT_MEM state. Read Lab3 Assignment Programming Project Part B regarding how tasks are blocked upon calling os_mem_alloc() function.

The prio field describes the priority of this task.

The task_id field describes the id of task assigned by the OS.

The stack_usage describes how much stack space is used by this task. The value is the percent value. For example, if 58% of this task stack is used, stack_usage is set to 58.

The ptask field describes the entry address of this task function.

The function returns OS_R_OK on success and OS_R_NOK otherwise.

Part B

You are to write two memory management RTX functions to manage a memory pool for tasks. You many assume there is only one user-defined memory pool in the system. The memory pool is declared by _declare_box() and further initialized by _init_box(), which are existing RTX functions.

The function you are going to add are described as follows.

```
void *os_mem_alloc (void *box_mem)
```

The primitive allocates a fixed-size of memory to the calling task from the memory pool pointed by box_mem and returns a pointer to the allocated memory. When there is not enough memory available, the calling task is blocked until enough memory becomes available. If several tasks are waiting for memory and memory becomes available, the highest priority waiting task will get the memory. Within the same priority waiting tasks, the one that waits longest will get the memory.

```
• OS_RESULT os_mem_free (void *box_mem, void *box)
```

The primitive returns a memory block whose address is box to memory pool with starting address of box_mem. Note the box is allocated by os_mem_alloc from the meory pool of box_mem. It returns OS_R_OK on success and OS_R_NOK otherwise.

If several tasks are waiting for memory and memory becomes available, the highest priority waiting task will get the memory and be unblocked. Preemption may happen if the unblocked task has higher priority than the task that calls this function to free up the memory.

Create a set of testing tasks to demonstrate that you have successfully implemented the required functions in Parts A and B. Your test tasks should do the following tests.

- A task periodically prints task status of each task in the system.
- A task can allocate a fixed size of memory.
- A task will get blocked if there is no memory available when os_mem_alloc() is called.
- A blocked on memory task will be resumed once enough memory is available in the system.
- Create a testing scenario that multiple tasks with different priorities are all blocked waiting for memory. When memory becomes available, test whether it is the highest priority task that waits the longest that gets the memory first.

3.4.3 Source Code File Organization Convention

To make the changes you have made to the RTX library obvious to the grading teaching assistant. We would like to impose the following source code file organization convention.

- The newly added RTX function user interface is in RTL_ext.h file.
- The corresponding kernel function of an os_xxx() function should be named as rt_xxx() in the kernel space.
- All extended task management related kernel functions are in rt_Task_ext.[ch] files.
- All extended memory management related kernel functions are in rt_MemBox_ext. [ch] files.
- When you want to add extra code to an existing rt_xxx.[ch] file, create new rt_xxx_ext.[ch] files instead and put the code in these new files.
- For any miscellaneous source code that you cannot figure out where to put, create rt_lab3_misc.[ch] files and put the code in these files.

• You should try to avoid changing existing RTX library source code. If you are not able to do so, then write detailed comments in the existing source code where you make the changes and what the changes are. The comments should look like the following:

```
/* Start: ECE254 Lab3 Changes by GroupID */
/* Detailed comments about the changes ...*/
// Changed source code appear here
/* End: ECE254 Lab3 Changes by GroupID */
```

3.5 Deliverables

3.5.1 Pre-Lab Deliverables

None

3.5.2 Post-Lab Deliverables

Submit a compressed archive file that contains the following:

- 1. A lab3_QA.txt file which contains answer to questions in Section 3.4.1.
- 2. Your entire multi-project workspace to solve lab3 programming project.
- 3. A test description file to describe what each testing task does. Name the file lab3_test_spec.txt. This file is added to the RTX application project as shown in Figure 3.2.

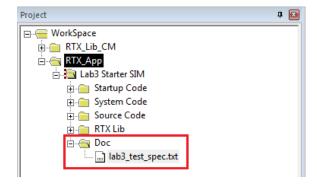


Figure 3.2: Keil IDE: Location of Test Specification File.

Points	Sub-total	Description	
20		Answers to questions	
30		Part A Implementation	
	15	os_tsk_get function implementation	
	10	self-implemented testing cases to test Part A API	
		function	
	5	Third-party testing case result	
50		Part B Implementation	
	20	os_mem_alloc and os_mem_free implementation	
	20	self-implemented testing cases to test the correct-	
		ness of Part B API functions	
	10	Third-party testing case result	

Table 3.1: Lab3 Marking Rubric

4. A README file to describe what you have submitted and how to build and run your project(s).

Name the file lab3_Gid.zip, where id is your two digit Group ID, and submit it to Lab3 Dropbox in Learn.

3.6 Marking Rubric

Table 3.1 shows the marking rubric for this lab.

Chapter 4

Lab4: Inter-process Communication by Message Passing

4.1 Objective

This lab is to learn about, and gain practical experience in message passing for the purpose of inter-process communication. In particular, you will use the POSIX message queue facility in a general Linux environment and the mailbox APIs in RL-RTX on the Keil LPC1768 board.

After this lab, students will have a good understanding of, and ability to program with

- the fork() and exec() system calls, and their use for creating a new child process on the Linux platform;
- the wait() family system calls, and their use to obtain the status-change information of a child process;
- the POSIX message queue facility (<mqueue.h>) on the Linux platform for interprocess communication.

Chapter 5

Lab5: Thread Concurrency Control

5.1 Objective

This lab is to learn about, and gain practical experience in concurrency control for the purpose of inter-thread communication by shared memory and compare its performance with inter-process/task communication by message passing. In particular, you will use the POSIX pthread library in a general Linux environment and RL-RTX on the Keil LPC1768 board.

Sharing data among threads in a general Linux environment is straight forward because threads share the same memory [5]. For the Keil RL-RTX tasks, they share the same addressing space, hence behave similar as threads.

The challenging part of sharing memory is to avoid race conditions. In a general Linux environment, pthread semaphore and mutex library calls are to be used for thread mutual exclusion. In RL-RTX, semaphore and mutex management functions are to be used for task communication mutual exclusion.

After this lab, students will have a good understanding of, and ability to program with

- the pthread pthread_create() and pthread_join() to create and join threads,
- the pthread sem_int(), sem_post() and sem_wait() library calls for inter-thread communication concurrency control in a general Linux environment.

Part III

Development Environment Quick Reference Guide

Chapter 6

Introduction to ECE Linux Programming Environment

6.1 Linux Hardware Environment

There are ten Linux servers that are open to ECE undergraduate students. They are ecelinux1.uwaterloo.ca - ecelinux4.uwaterloo.ca and ecelinux6.uwaterloo.ca - ecelinux11.uwaterloo.ca. The ecelinux1-4 can be accessed off-campus as well as on campus. The rest of these machines are only accessible on-campus and consoles are located at E5-5038 whose door code is printed in the welcome message when you login onto any one of the Linux workstations. Linux CentOS is installed on all these machines.

6.2 How to Connect to Linux Servers

The servers are accessed by remote login. You will need to have a terminal client that supports secure shell (ssh) installed before you can log onto one of the ecelinux servers. Two popular terminal clients are:

- Windows secure shell client and
- PuTTY.

Both terminal clients are installed on ECE Nexus machines. Use your WatIAM credential to login onto these machines.

To use the SSH Secure shell windows client, click Start \rightarrow All Programs \rightarrow Internet Tools \rightarrow **Secure shell client**. Figure 6.1(a) is a screen shot taken on a Nexus computer.

To use the PuTTY, click Start \rightarrow All Programs \rightarrow Portable PuTTY \rightarrow **PuTTY**. Figure 6.1(b) is a screen shot taken on a Nexus computer.

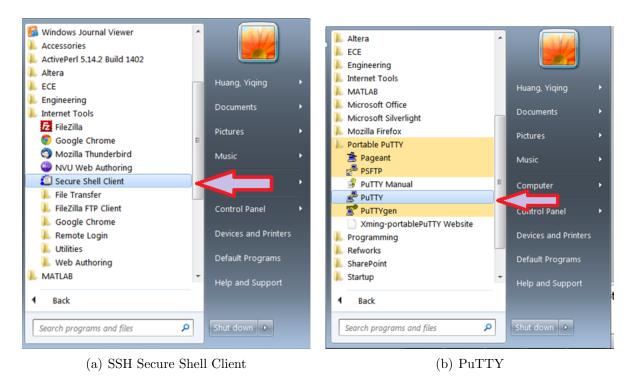


Figure 6.1: Invoking Terminal Clients on an ECE Nexus PC

6.3 Work Environment Setup

6.3.1 Setting up Remote Linux Graphic Support

After you login, you will notice that you are in a command line shell environment, one where GUI applications cannot be run. For example the ddd debugger is an important GUI application you will most likely want to use. You will need to configure your environment to support GUI application to be able to display graphics on your terminal.

First start the X server on your local machine. Xming is a popular and free X server which is installed on ECE Nexus computers. Start Xming by clicking All Programs \rightarrow Xming (see Figure 6.2).

The second step is to configure the terminal client so that X11 forwarding is enabled.



Figure 6.2: Invoking Xming on an ECE Nexus Computer



Figure 6.3: SSH Secure Shell Client X11 Setting

For SSH secure shell client, select Edit \rightarrow Settings to bring up the setting dialog window (see Figure 6.3(a)). Go to Profile Settings \rightarrow Tunneling and put a check mark beside the Tunnel X11 connection item (see Figure 6.3(b)).

For PuTTY, go to Connection \rightarrow SSH \rightarrow X11 and put a check mark beside the Enable X11 forwarding item (see Figure 6.4).

6.3.2 Mapping Linux Account on Nexus

Your ECE Linux files can be access through network drive mapping on Nexus machines. Open My Computer \rightarrow Tools \rightarrow Map Network Drive (see Figure 6.5(a)). Under Driver,



Figure 6.4: PuTTY X11 Forwarding Setting

pick a drive letter, say P. Under Folder, type \\ecserv\homes. Put a check mark beside Reconnect at logon item and click Finish (see Figure 6.5(b)). You will use your WatIAM credential to authenticate yourself.

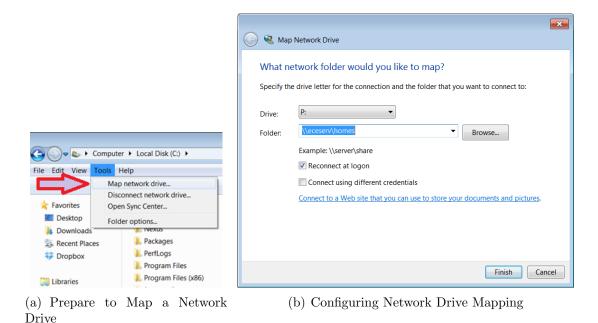


Figure 6.5: SSH Secure Shell Client X11 Setting

6.4 Basic Software Development Tools

To develop a program, there are three important steps. First, a program is started from source code written by programmers. Second, the source code is then compiled into object code, which is a binary. Non-trivial project normally contains more than one source file. Each source file is compiled into one object code and the linker would finally link all the object code to generate the final target, which is the executable that runs. People refer to compiling and linking as building a target. It is very rare that the target will run perfectly the first time it is built. Most of time you need to fix defects and bugs in your code and the this is the third step. The debugger is a tool to help you identify the bug and fix it. Table 6.1 shows the key steps in programming work flow, the corresponding tools are needed and some example tools provided by a general purpose Linux operating system.

Task	Tool	Examples
Editing the source code	Editor	vi, emacs
Compiling the source code	Compiler	gcc
Debugging the program	Debugger	gdb, ddd

Table 6.1: Programming Steps and Tools

At each development step, you will have a choice of tools to get the work done. Most of you probably are more familiar with a certain Integrated Development Environment (IDE) which integrates all these tools into a single environment. For example Eclipse and Visual Studio. However another choice is that you pick your favorite tool in each programming step and build your own tool chain. Many seasoned Linux programmers build their own tool chains. A few popular tools are introduced in the following subsections.

6.4.1 Editor

Some editors are designed to better suit programmers' needs than others. The vi (vim and gvim belong to the vi family) and emacs (xemacs belongs to emacs family) are the two most popular editors for programming purposes.

Two simple notepad editors *pico* and *nano* are also available for a simple editing job. These editors are not designed for serious programming activity. To use one of them to write your first *Hello World* program is fine though.

After you finish editing the C source code, give the file name an extension of .c. Listing 6.1 is the source code of printing "Hello World!" to the screen.

```
#include <stdio.h>
#include <stdlib.h>

int main()
{
   printf("Hello World!\n");
   exit(0);
}
```

Listing 6.1: HelloWorld C source Code

Next we will compile and execute the program.

6.4.2 C Compiler

The executable gcc is the GNU project C and C++ compiler. To compile the HelloWorld source code in Listing 6.1, type the following command at the prompt:

```
gcc helloworld.c
```

You will notice that a new file named a.out is generated. This is the executable generated from the source code. To run it, type the following command at the prompt and hit Enter.

```
./a.out
```

The result is "Hello World!" appearing on the screen.

You can also instruct the compiler to name the executable another name instead of the default a.out. The -o option in gcc allows one to name the executable a name. For example, the following command will generate an executable named "helloworld.out".

```
gcc helloworld.c -o helloworld.out
```

although there is no requirement that the name ends in .out.

6.4.3 Debugger

The GNU debugger gdb is a command line debugger. Many GUI debugger uses gdb as the back-end engine. One GNU GUI debugger is ddd. It has a powerful data display functionality.

GDB needs to read debugging information from the binary in order to be able to help one to debug the code. The -g option in gcc tells the compiler to produce such debugging information in the generated executable. In order to use gdb to debug our simple HelloWorld program, we need to compile it with the following command:

```
gcc -g helloworld.c -o helloworld.out
```

The following command calls gdb to debug the helloworld.out

```
gdb helloworld.out
```

This starts a gdb session. At the (gdb) prompt, you can issue gdb command such as b main to set up a break point at the entry point of main function. The 1 lists source code. The n steps to the next statement in the same function. The s steps into a function. The p prints a variable value provided you supply the name of the variable. Type h to see more gdb commands.

Compared to gdb command line interface, the ddd GUI interface is more user friendly and easy to use. To start a ddd session, type the command

ddd

and click File \rightarrow Open Program to open an executable such as helloworld.out. You will then see gdb console in the bottom window with the source window on top of the gdb console window. You could see the value of variables of the program through the data window, which is on top of the source code window. Select View \rightarrow to toggle all these three windows.

6.5 More on Development Tools

For any non-trivial software project, it normally contains multiple source code files. Developers need tools to manage the project build process. Also project normally are done by several developers. A version control tool is also needed.

6.5.1 How to Automate Build

Make is an utility to automate the build process. Compilation is a cpu-intensive job and one only wants to re-compile the file that has been changed when you build a target instead of re-compile all source file regardless. The make utility uses a Makefile to specify

the dependency of object files and automatically recompile files that has been modified after the last target is built.

In a Makefile, one specifies the targets to be built, what prerequisites the target depends on and what commands are used to build the target given these prerequisites. These are the *rules* contained in Makefile. The Makefile has its own syntax and is a good reference on Make. The general form of a Makefile rule is:

```
target ...: prerequisites ...
recipe
...
```

One important note is that each recipe line starts with a TAB key rather than white spaces.

Listing 6.2 is our first attempt to write a very simple Makefile.

```
helloworld.out: helloworld.c
gcc —o helloworld.out helloworld.c
```

Listing 6.2: Hello World Makefile: First Attempt

Our second attempt is to break the single line gcc command into two steps. First is to compile the source code into object code of file. Second is to link the object code to one final executable binary. Listing 6.3 is our second attempted version of Makefile.

```
helloworld.out: helloworld.o
gcc —o helloworld.out helloworld.o
helloworld.o: helloworld.c
gcc —c helloworld.c
```

Listing 6.3: Hello World Makefile: Second Attempt

When a project contains multiple files, separating object code compilation and linking stages would give a clear dependency relationship among code. Assume that we now need to build a project that contains two source files src1.c and src2.c and we want the final executable to be named as app.out. Listing 6.4 is a typical example Makefile that is closer to what you will see in the real world.

```
all: app.out

app.out: src1.o src2.o
gcc -o app.out src1.o src2.o
src1.o: src1.c
gcc -c src1.c
```

```
src2.o: src2.c
gcc -c src2.c
clean:
rm *.o app.out
```

Listing 6.4: A More Real Makefile: First Attempt

We also have added a target named clean so that make clean will clean the build.

So far we have seen the Makefile contains explicit rules. Makefile can also contain implicit rules, variable definitions, directives and comments. Listing 6.5 is a Makefile that is used in the real world.

```
# Makefile to build app.out

CC=gcc

CFLAGS=-Wall -g

LD=gcc

LDFLAGS=-g

OBJS=src1.o src2.o

all: app.out

app.out: $(OBJS)

$(LD) $(CFLAGS) $(LDFLAGS) -o $@ $(OBJS)

.c.o:

$(CC) $(CFLAGS) -c $<

.PHONY: clean

clean:

rm -f *.o *.out
```

Listing 6.5: A Real World Makefile

Line 1 is a comment. Lines 2-7 are variable definitions. Line 12 is an implicit rule to generate of file for each of file. See http://www.gnu.org/software/make/manual/make.html if you want to explore more of makefile.

6.5.2 Version Control Software

ECE Linux has the following version control software installed.

- CVS
- SVN
- Git

Choose your favourite one. Any one of them will be able to help you manage ECE254 code repository. Git is getting more and more popularity these days. If you decide to use GitHub to host your repository, please make sure it is a private one. Go to http://github.com/edu to see how to obtain five private repositories for two years on GitHub for free.

6.5.3 Integrated Development Environment

Eclipse with C/C++ Plug-in has been installed on all ECE Linux servers. You will need to first set up the X Window support properly (see section 6.3.1, then type the following command to bring up the eclipse frontend.

/opt/eclipse64/eclipse

This eclipse is not the same as the default eclipse under /usr/bin directory. You may find running eclipse over network performs poorly at home though. It depends on how fast your network speed is.

If you have Linux operating system installed on your own personal computer, then you can download the eclipse with C/C++ plugin from the eclipse web site and then run it from your own local computer. However you should always make sure the program will also work on ecclinux machines, which is the environment TAs would be using to test your code.

6.6 Man Page

Linux provides manual pages. You can use the command man followed by the specific command or function you are interested in to obtain detailed information.

Mange pages are grouped into sections. We list frequently used sections here:

- Section 1 contains user commands.
- Section 2 contains system calls
- Section 3 contains library functions
- Section 7 covers conventions and miscellany.

To specify which section you want to see, provide the section number after the man command. For example,

man 2 stat

shows the system call stat man page. If you omit the 2 in the command, then it will return the command stat man page.

You can also use man -k or apropos followed by a string to obtain a list of man pages that contain the string. The Whatis database is searched and now run man whatis to see more details of Whatis.

Chapter 7

Keil Software Development Tools

The Keil MDK-ARM development tools are used for MCB1700 boards in our lab. The tools include

- μ Vision4 IDE which combines the project manager, source code editor and program debugger into one environment;
- ARM compiler, assembler, linker and utilities;
- Real-Time Library which includes an RTX Real-Time Kernel with source code;
- ULINK USB-JTAG Adapter which allows you to debug the embedded programs running on the board.

The MDK-Lite is the evaluation version and does not require a license. However it has a code size limit of 32KB, which is adequate for your course projects. The MDK-Lite version 4.60.0.0 ¹ is installed on all lab computers. If you want to install the software on your own computer, Appendix B gives detailed instruction.

7.1 Creating an Application in μ Vision4 IDE

To get started with the Keil IDE, the MDK-ARM Primer

http://www.keil.com/support/man/docs/gsac/

¹The latest version is 5.1.0.0 We have not fully tested the supplied sample code with this version. This manual is based on version 4.60.0.0.

is a good place to start. We will walk you through the IDE by developing a simple HelloWorld application which displays Hello World through the UART0 that is connected to the lab PC. Note the HelloWorld example uses polling rather than interrupt.

7.1.1 Create a New Project

- 1. Create a folder named HelloWorld on your computer ². Then create HelloWorld\src sub-folder.
- 2. Copy the following files to HelloWorld\src folder from lab2\starter\Startup folder:
 - startup_LPC17xx.s
 - system_LPC17xx.c
 - uart_polling.c
 - uart_polling.h
- 3. Create a new μ Vision project by click
 - Project \rightarrow New μ Vision Project (See Figure 7.1)

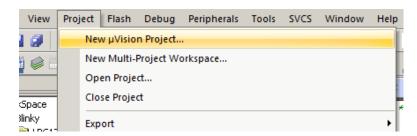


Figure 7.1: Keil IDE: Create a New Project

- Choose NXP(Founded by Philips) \rightarrow LPC1768 (See Figure 7.2(a) and Figure 7.2(b))
- Answer "No" when you are asked to copy the startup code (See Figure 7.3).

7.1.2 Managing Project Components

You just finished creating a new project. One the left side of the IDE is the Project window and expand all objects, you will see the default project setup as shown in Figure 7.4.

²The folder path name should not contain spaces on Nexus computers.



Figure 7.2: Keil IDE: Choose MCU

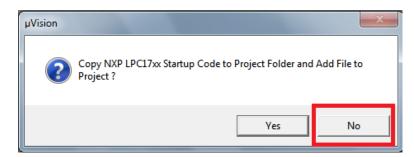


Figure 7.3: Keil IDE: Copy Startup Code

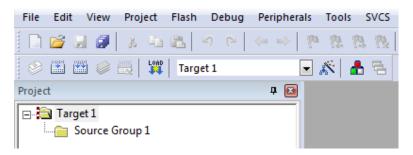


Figure 7.4: Keil IDE: A default new project

1. Rename the Target

The "Target 1" is the default name of the project build target and you can rename

it by clicking the target name to highlight it and then click the highlighted name to input a new target name, say "HelloWorld SIM"

2. Rename the Source Group

The IDE allows you to group source files to different groups to better manage the source code. By default "Source Group 1" is created. You can rename the source group by clicking the source group name to highlight it and then click again to input a new name, say "Startup Code".

3. Add a New Source Group

You can add new source groups to your project. Click Project \rightarrow Manage \rightarrow Components, Environment, Books... (See Figure 7.5). You can now add new source groups



Figure 7.5: Keil IDE: Manage Project Components

to the project. Let's add "System Code" and "Source Code" source groups to the project (See Figure 7.6. Your project will now look like Figure 7.7



Figure 7.6: Keil IDE: Manage Components Window

4. Add Source Code to a Source Group

Now add system_LPC17xx.c to System Code group by double clicking the source group name and choose the file from the file window. Double clicking the file name will add the file to the source group. Or you can select the file and click the "Add" button at the lower right corner of the window (See Figure 7.8).

Similarly, add uart_polling.c to System Code group and startup_LPC17xx.s to Startup Code group. Your project will now look like Figure 7.9.



Figure 7.7: Keil IDE: Updated Project Profile

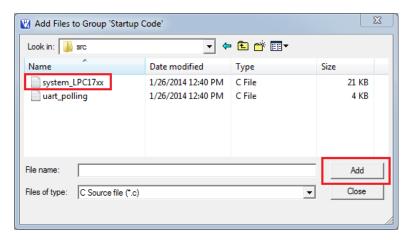


Figure 7.8: Keil IDE: Add Source File to Source Group

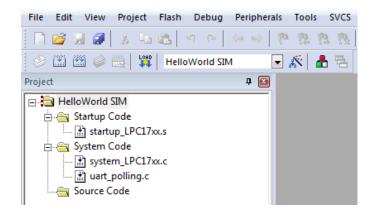


Figure 7.9: Keil IDE: Updated Project Profile

5. Create a new source file

The project does not have a main function yet. We now create a new file by clicking

the "New" button (See Figure 7.10). Before typing anything to the file, save the file




Figure 7.10: Keil IDE: Create New File

and name it helloworld.c. Write the following code to the helloworld.c file:

```
#include <LPC17xx.h>
#include "uart_polling.h"
int main() {
    SystemInit();
    uart0_init();
    uart0_put_string("Hello World!\n\r");
    return 0;
}
```

Then add helloworld.c to the Source Code group. Your final project would look like the screen shot in Figure 7.11.

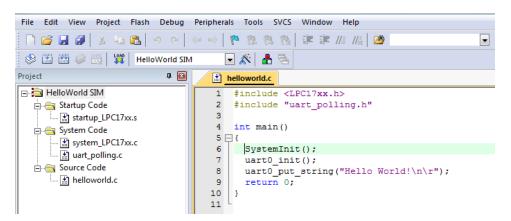


Figure 7.11: Keil IDE: Final Project Setting

7.1.3 Build and Download

Follow the following steps to configure your project for build:

- Create the following folders to hold different build-related files for the two targets.
 - HelloWorld\build\FLASH
 - HelloWorld\build\RAM
- Click the Target Option button and select the Output tab. Click the "Select the Folders for Objects" button to bring up the Browse for Folder dialogue box (see Figure 7.12). You will chose the FLASH folder if you want to build the HelloWorld SIM target and RAM folder if you want to build the HelloWorld RAM target. Similarly, you could select the Listing tab to specify the location of the listing files.



Figure 7.12: Keil IDE: Selecting Output Folder

To build the target, click the "Build" button (see Figure 7.13). If nothing is wrong, the

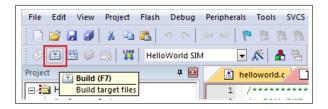


Figure 7.13: Keil IDE: Build Target

build output window at the bottom of the IDE will show a log similar like the one shown in Figure 7.14

```
Build Output

Build target 'HelloWorld SIM'
assembling startup LPC17xx.s...
compiling system LPC17xx.c...
compiling uart polling.c...
compiling helloworld.c...
linking...

Program Size: Code=1128 RO-data=236 RW-data=4 ZI-data=612
".\build\FLASH\HelloWorld.axf" - 0 Error(s), 0 Warning(s).
```

Figure 7.14: Keil IDE: Build Target



Figure 7.15: Keil IDE: Download Target to Flash


To download the code to the board, click the "Load" button (see Figure 7.15). The download is through the ULINK-ME.

You will need a terminal emulator such as PuTTY that talks directly to COM ports in order to see output of the serial port. Open up the PuTTY on your PC and choose COM1. An example PuTTY Serial configuration is shown in Figures 7.16(a) and 7.16(b). Press the Reset button on the board and you should see "Hello World!" displayed on PuTTY.

7.2 Debugging

You can use either the simulator within the IDE or the ULINK Cortex Debugger to debug your program. To start a debug session, click Debug—Start/Stop Debug Session from the IDE menu bar or press Ctrl+F5. Figure 7.16 shows the a typical debug session interface.

As any other GUI debugger, the IDE allows you to set up break points and step through your source code. It also shows the registers, which is very helpful for debugging low level code. Click View, Debug and Peripherals from the IDE menu bar and explore the functionality of the debugger.

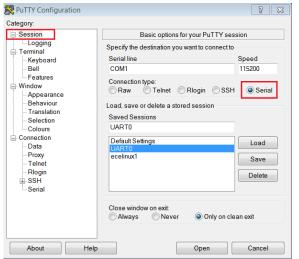



(a) PuTTY Session for Serial Port Communication

(b) PuTTY Serial Port Configuration

7.2.1 Disabling CRP

In order to avoid stealing firmware, the LPC1768 provides Code Read Protection (CRP) that allows fine-grain control about which areas of the memory can be read. A detailed description is found in Section 32.6 of [4]. In essence if the Assembler Directive NO_CRP is not present, the hardware is initialized to only make the firmware read-only (see Figure 7.17)

Since it is advisable to change values on the fly when debugging, the CRP should be disabled during prototyping. Open up the target option window and click the Asm tab. Put "NO_CRP" as shown in Figure 7.18

7.2.2 Simulation

Most of the development normally is done under the simulation mode. The default setting of the project uses the simulator to debug as shown in the target option (see Figure 7.19 Instead of load the program to the board for execution, you can run the code using the debugger under simulation mode.

7.2.3 Configure In-Memory Execution Using ULINK Cortex Debugger

When you debug hardware related problems, you most likely will find the ULINK Cortex Debugger is helpful. You need to configure the debugger as shown in Figure 7.20.

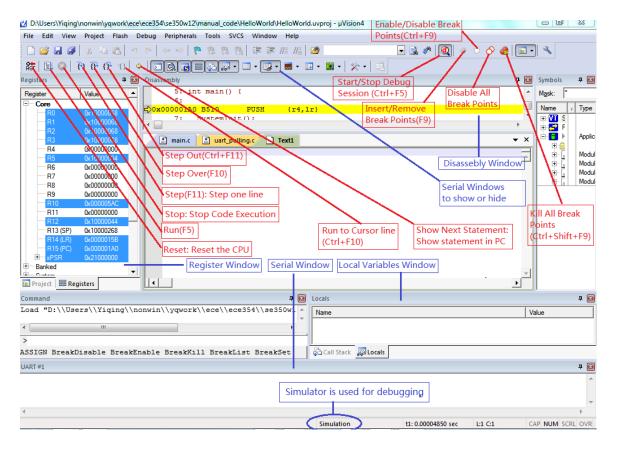


Figure 7.16: Keil IDE: Debugging

```
110
                              :LNOT::DEF:NO CRP
                     AREA
                              |.ARM. at 0x02FC|, CODE, READONLY
111
112
   CRP_Key
                     DCD
                              0xffffffff
113
                     ENDIF
114
115
                              |.text|, CODE, READONLY
116
                     AREA
```

Figure 7.17: startup_LPC17xx.s excerpt



Figure 7.18: Keil IDE: Using Simulator for Debugging

The default image memory map setting is that the code is executed from the ROM (see Figure 7.21(a). Since the ROM portion of the code needs to be flashed in order to



Figure 7.19: Keil IDE: Using Simulator for Debugging



Figure 7.20: Keil IDE: Using ULINK Cortex Debugger

be executed on the board, this incurs wear-and-tear on the on-chip flash of the LPC1768. Since most attempts to write a functioning RTX will eventually require some more or less elaborate debugging, the flash memory might wear out quickly. Unlike the flash memory stick file systems where the wear is aimed to be uniformly distributed across the memory portion, this flash memory will get used over and over again in the same portion.

The ARM compiler can be configured to have a different starting address. We can create a RAM target where the code starting address is in RAM (see Figure 7.21(b). An initialization file RAM.ini (see Listing 7.1) is needed to do the proper setting of SP, PC and vector table offset register.

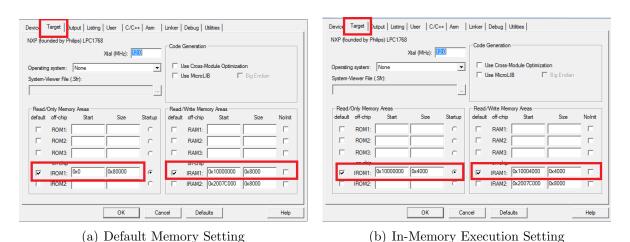


Figure 7.21: Keil IDE: Configure for In-Memory Execution

Listing 7.1: The RAM.ini file

To download the code to the board, one should not use the download button. Instead, the debug button is used to initiate a debug session and the command

LOAD build\RAM\HelloWorld.axf INCREMENTAL

in the RAM.ini file will load the code to the board. You will need to edit this command so that the path of the .axf reflects the actual path of your .axf location.

Chapter 8

Programming MCB1700

8.1 The Thumb-2 Instruction Set Architecture

The Cortex-M3 supports only the Thumb-2 (and traditional Thumb) instruction set. With support for both 16-bit and 32-bit instructions in the Thumb-2 instruction set, there is no need to switch the processor between Thumb state (16-bit instructions) and ARM state (32-bit instructions).

In the RTOS lab, you will need to program a little bit in the assembler language. We introduce a few assembly instructions that you most likely need to use in your project in this section.

The general formatting of the assembler code is as follows:

label

opcode operand1, operand2, ...; Comments

The label is optional. Normally the first operand is the destination of the operation (note STR is one exception).

Table 8.1 lists some assembly instructions that the RTX project may use. For complete instruction set reference, we refer the reader to Section 34.2 (ARM Cortex-M3 User Guide: Instruction Set) in [4].

8.2 ARM Architecture Procedure Call Standard (AAPCS)

The AAPCS (ARM Architecture Procedure Call Standard) defines how subroutines can be separately written, separately compiled, and separately assembled to work together. The

Mnemonic	Operands/Examples	Description
LDR	Rt, [Rn, #offset]	Load Register with word
	LDR R1, [R0, #24]	Load word value from an memory address R0+24 into R1
LDM	$Rn\{!\}$, reglist	Load Multiple registers
	LDM R4, $\{RO-R1\}$	Load word value from memory address R4 to R0, increment the
		address, load the value from the updated address to R1.
STR	Rt, [Rn, #offset]	Store Register word
	STR R3, [R2, R6]	Store word in R3 to memory address R2+R6
	STR R1, [SP, #20]	Store word in R1 to memory address SP+20
MRS	$Rd, spec_reg$	Move from special register to general register
	MRS RO, MSP	Read MSP into R0
	MRS RO, PSP	Read PSP into R0
MSR	$spec_reg, Rm$	Move from general register to special register
	MSR MSP, RO	Write R0 to MSP
	MSR PSP, RO	Write R0 to PSP
PUSH	reglist	Push registers onto stack
	$\mathtt{PUSH}~\{\mathtt{R4-R11},\mathtt{LR}\}$	push in order of decreasing the register numbers
POP	reglist	Pop registers from stack
	$\mathtt{POP}~\{\mathtt{R4-R11},\mathtt{PC}\}$	pop in order of increasing the register numbers
BL	label	Branch with Link
	BL funC	Branch to address labeled by funC, return address stored in LR
BLX	Rm	Branch indirect with link
	BLX R12	Branch with link and exchange (Call) to an address stored in R12
BX	Rm	Branch indirect
	BX LR	Branch to address in LR, normally for function call return

Table 8.1: Assembler instruction examples

C compiler follows the AAPCS to generate the assembly code. Table 8.2 lists registers used by the AAPCS.

Register	Synonym	Special	Role in the procedure call standard	
r15		PC	The Program Counter.	
r14		LR	The Link Register.	
r13		SP	The Stack Pointer (full descending stack).	
r12		IP	The Intra-Procedure-call scratch register.	
r11	v8		Variable-register 8.	
r10	v7		Variable-register 7.	
r9		v6	Platform register.	
		SB	The meaning of this register is defined by platform standard.	
		TR		
r8	v5		Variable-register 5.	
r7	v4		Variable-register 4.	
r6	v3		Variable-register 3.	
r5	v2		Variable-register 2.	
r4	v1		Variable-register 1.	
r3	a4		argument / scratch register 4	
r2	a3		argument / scratch register 3	
r1	a2		argument / result / scratch register 2	
r0	a1		argument / result / scratch register 1	

Table 8.2: Core Registers and AAPCS Usage

Registers R0-R3 are used to pass parameters to a function and they are not preserved. The compiler does not generate assembler code to preserve the values of these registers. R0 is also used for return value of a function.

Registers R4-R11 are preserved by the called function. If the compiler generated assembler code uses registers in R4-R11, then the compiler generate assembler code to automatically push/pop the used registers in R4-R11 upon entering and exiting the function.

R12-R15 are special purpose registers. A function that has the __svc_indirect keyword makes the compiler put the first parameter in the function to R12 followed by an SVC instruction. R13 is the stack pointer (SP). R14 is the link register (LR), which normally is used to save the return address of a function. R15 is the program counter (PC).

Note that the exception stack frame automatically backs up R0-R3, R12, LR and PC together with the xPSR. This allows the possibility of writing the exception handler in purely C language without the need of having a small piece of assembly code to save/restore R0-R3, LR and PC upon entering/exiting an exception handler routine.

8.3 Cortex Microcontroller Software Interface Standard (CMSIS)

The Cortex Microcontroller Software Interface Standard (CMSIS) was developed by ARM. It provides a standardized access interface for embedded software products (see Figure 8.1). This improves software portability and re-usability. It enables software solution suppliers to develop products that can work seamlessly with device libraries from various silicon vendors [2].

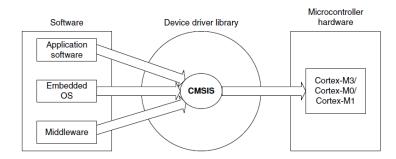


Figure 8.1: Role of CMSIS[6]

The CMSIS uses standardized methods to organize header files that makes it easy to learn new Cortex-M microcontroller products and improve software portability. With the <device>.h (e.g. LPC17xx.h) and system startup code files (e.g., startup_LPC17xx.s), your program has a common way to access

- Cortex-M processor core registers with standardized definitions for NVIC, SysTick, MPU registers, System Control Block registers, and their core access functions (see core_cm * .[ch] files).
- system exceptions with standardized exception number and handler names to allow RTOS and middleware components to utilize system exceptions without having compatibility issues.
- intrinsic functions with standardized name to produce instructions that cannot be generated by IEC/ISO C.
- system initialization by common methods for each MCU. Fore example, the standardized SystemInit() function to configure clock.
- system clock frequency with standardized variable named as SystemFrequency defined in the device driver.

• vendor peripherals with standardized C structure.

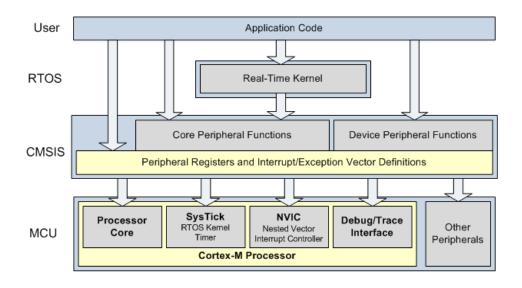


Figure 8.2: CMSIS Organization[2]

8.3.1 CMSIS files

The CMSIS is divided into multiple layers (See Figure 8.2). For each device, the MCU vendor provides a device header file <device>.h (e.g., LPC17xx.h) which pulls in additional header files required by the device driver library and the Core Peripheral Access Layer (see Figure 8.3).

By including the <device>.h (e.g., LPC17xx.h) file into your code file. The first step to initialize the system can be done by calling the CMSIS function as shown in Listing 8.1.

The CMSIS compliant device drivers also contain a startup code (e.g., startup_LPC17xx.s), which include the vector table with standardized exception handler names (See Section 8.3.3.

8.3.2 Cortex-M Core Peripherals

We only introduce the NVIC programming in this section. The Nested Vectored Interrupt Controller (NVIC) can be accessed by using CMSIS functions (see Figure 8.4). As an



Figure 8.3: CMSIS Organization[2]

	Function definition	Description
void	NVIC_SystemReset (void)	Resets the whole system including peripherals.
void	NVIC_SetPriorityGrouping (uint32_t priority_grouping)	Sets the priority grouping.
uint32_t	NVIC_GetPriorityGrouping (void)	Returns the value of the current priority grouping.
void	NVIC_EnableIRQ (IRQn_Type IRQn)	Enables the interrupt IRQn.
void	NVIC_DisableIRQ (IRQn_Type IRQn)	Disables the interrupt IRQn.
void	NVIC_SetPriority (IRQn_Type IRQn, int32_t priority)	Sets the priority for the interrupt IRQn.
uint32_t	NVIC_GetPriority (IRQn_Type IRQn)	Returns the priority for the specified interrupt.
void	NVIC_SetPendingIRQ (IRQn_Type IRQn)	Sets the interrupt IRQn pending.
IRQn_Type	NVIC_GetPendingIRQ (IRQn_Type IRQn)	Returns the pending status of the interrupt IRQn.
void	NVIC_ClearPendingIRQ (IRQn_Type	Clears the pending status of the interrupt IRQn, if it is not already running or active.
IRQn_Type	NVIC_GetActive (IRQn_Type IRQn)	Returns the active status for the interrupt IRQn.

Figure 8.4: CMSIS NVIC Functions[2]

example, the following code enables the UART0 and TIMER0 interrupt

```
NVIC_EnableIRQ(UARTO_IRQn); // UARTO_IRQn is defined in LPC17xx.h
NVIC_EnableIRQ(TIMERO_IRQn); // TIMERO_IRQn is defined in LPC17xx.h
```

8.3.3 System Exceptions

Writing an exception handler becomes very easy. One just defines a function that takes no input parameter and returns void. The function takes the name of the standardized exception handler name as defined in the startup code (e.g., startup_LPC17xx.s). The following listing shows an example to write the UARTO interrupt handler entirely in C.

```
void UARTO_Handler (void)
{
    // write your IRQ here
}
```

Another way is to use the embedded assembly code:

```
__asm void UARTO_Handler(void)
{
    ; do some asm instructions here
    BL __cpp(a_c_function) ; a_c_function is a regular C function
    ; do some asm instructions here,
}
```

8.3.4 Intrinsic Functions

ANSI cannot directly access some Cortex-M3 instructions. The CMSIS provides intrinsic functions that can generate these instructions. The CMSIS also provides a number of functions for accessing the special registers using MRS and MSR instructions. The intrinsic functions are provided by the RealView Compiler. Table 8.3 lists some intrinsic functions that your RTOS project most likely will need to use. We refer the reader to Tables 613 and 614 one page 650 in Section 34.2.2 of [4] for the complete list of intrinsic functions.

8.3.5 Vendor Peripherals

All vendor peripherals are organized as C structure in the <device>.h file (e.g., LPC17xx.h). For example, to read a character received in the RBR of UARTO, we can use the following code.

```
unsigned char ch;
ch = LPC_UARTO->RBR; // read UARTO RBR and save it in ch
```

Instruction		CMSIS Intrinsic Function
CPSIE I		$\verb"voidenable_irq(\verb"void")"$
CPSID I		<pre>voiddisable_irq(void)</pre>
Special Register	Access	CMSIS Function
CONTROL	Read	uinit32_tget_CONTROL(void)
	Write	<pre>voidset_CONTROL(uint32_t value)</pre>
MSP	Read	<pre>uinit32_tget_MSP(void)</pre>
	Write	${\tt void} \; _{\tt set_MSP}({\tt uint32_t} \; {\tt value})$
PSP	Read	uinit32_tget_PSP(void)
	Write	<pre>voidset_PSP(uint32_t value)</pre>

Table 8.3: CMSIS intrinsic functions defined in core_cmFunc.h

8.4 Accessing C Symbols from Assembly

Only embedded assembly is support in Cortex-M3 (i.e. inline assembly is not supported). To write an embedded assembly function, you need to use the _asm keyword. For example the function "embedded_asm_function" in Listing 8.2 is an embedded assembly function. You can only put assembly instructions inside this function. Note that inline assembly is not supported in Cortex-M3.

The _cpp keyword allows one to access C compile-time constant expressions, including the addresses of data or functions with external linkage, from the assembly code. The expression inside the _cpp can be one of the followings:

• A global variable defined in C

}

Listing 8.2: Example of accessing global variable from assembly

• A C function

```
extern void a_c_function(void);
...
__asm embedded_asm_function(void) {
    ;.....
BL __cpp(a_c_function) ; a_c_function is regular C function
    ;.....
}
```

• A constant expression in the range of 0-255 defined in C.

```
uint8_t const g_flag;

__asm embedded_asm_function(void) {
    ;.....
    MOV R4, #_cpp(g_flag) ; load g_flag value to R4
    ;.....
}
```

Note the MOV instruction only applies to immediate constant value in the range of 0-255.

You can also use the IMPORT directive to import a C symbol in the embedded assembly function and then start to use the imported symbol just as a regular assembly symbol. For example

```
void a_c_function (void) {
    // do something
}

__asm embedded_asm_add(void) {
    IMPORT a_c_function ; a_c_function is a regular C function
    BL a_c_function ; branch with link to a_c_function
}
```

Names in the __cpp expression are looked up in the C context of the __asm function. Any names in the result of the __cpp expression are mangled as required and automatically have IMPORT statements generated from them.

8.5 SVC Programming: Writing an RTX API Function

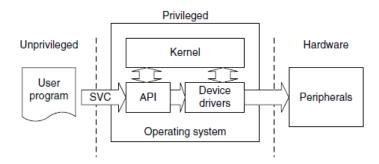


Figure 8.5: SVC as a Gateway for OS Functions [6]

A function in RTX API requires a service from the operating system. It needs to be implemented through the proper gateway by *trapping* from the user level into the kernel level. On Cortex-M3, the SVC instruction is used to achieve this purpose.

The basic idea is that when a function in RTX API is called from the user level, this function will trigger an SVC instruction. The SVC_Handler, which is the CMSIS standardized exception handler for SVC exception will then invoke the a kernel function that provides the actual service (see Figure 8.5). Effectively, the RTX API function is a wrapper that invokes SVC exception handler and passes corresponding kernel service operation information to the SVC handler.

To generate an SVC instruction, there are two methods. One is a direct method and the other one is an indirect method.

The direct method is to program at assembly instruction level. We can use the embedded assembly mechanism and write SVC assembly instruction inside the embedded assembly function. The ARM RL-RTX API functions that are not started with the os_ prefix are implemented in this way. Examples are _alloc_box and _free_box defined in HAL_CM3.c. Listing 8.3 shows the code snippet of the _alloc_box.

```
__asm void *_alloc_box(void *box_mem) {
   LDR R12,=__cpp(rt_alloc_box)
   ; privileged mode code handling omitted for brevity reason
   SVC 0
   BX LR
   ALIGN
}
```

Listing 8.3: Code Snippet of _alloc_box

The corresponding kernel function is the C function rt_alloc_box defined in rt_MemBox.c. This function entry point is loaded to r12. Then SVC 0 causes an SVC exception with immediate number 0. In the SVC exception handler, we can then branch with link and exchange to the address stored in r12. Listing 8.4 is an excerpt of the SVC_handler in HAL_CM3.c from the ARM RL-RTX source code.

```
__asm void SVC_Handler(void) {
   MRS RO, PSP

;Extract SVC number, if SVC 0, then do the following

LDM RO, {RO-R3, R12}; Read RO-R3, R12 from stack
   BLX R12; R12 contains the kernel function entry point

;Code to handle context switching is omitted

MVN LR, #:NOT:OxFFFFFFFD; set EXC_RETURN, thread mode, PSP
   BX LR ;

;User SVC code is omitted
}
```

Listing 8.4: Code Snippet of SVC_Handler

The indirect method is to ask the compiler to generate the SVC instruction from C code. The ARM compiler provides an intrinsic keyword named __svc_indirect which passes an operation code to the SVC handler in r12[3]. This keyword is a function qualifier. The two input we need to provide to the compiler is

- svc_num, the immediate value used in the SVC instruction and
- op_num, the value passed in r12 to the handler to determine the function to perform. The following is the syntax of an indirect SVC.

```
__svc_indirect(int svc_num)
    return_type function_name(int op_num[, argument-list]);
```

The system handler must make use of the r12 value to select the required operation. For example The RL-RTX provide the following user level function to terminate a task:

```
#include <rt1.h>
OS_RESULT os_tsk_delete (OS_TID taskid)
```

In RTL.h, the following code is revelent to the implementation of the function.

The compiler generates two assembly instructions

```
LDR.W r12, [pc, #offset]; Load rt_tsk_delete in r12
SVC 0x00
```

The SVC_handler in Listing 8.4 then can be used to handle the SVC 0 exception.

Appendix A

Forms

Lab administration related forms are given in this appendix.

ECE254 Request to Leave a Project Group Form

Name:	
Quest ID:	
Student ID:	
Lab Assignment ID	
Group ID:	
Name of Other Group Members:	
Provide the reason for leaving the project	group here:

Date

Signature

Appendix B

MDK-ARM Installation

There is only a windows port for the Keil MDK-ARM for now. The MDK-ARM V4.60.0.0 direct download link is inside the Learn (http://learn.uwaterloo.ca) ¹.

During the process of the installation of the MDK-ARM, you will be asked to add example code. Choose Keil(NXP) MCB1xxx Boards example projects (see Figure B.1).

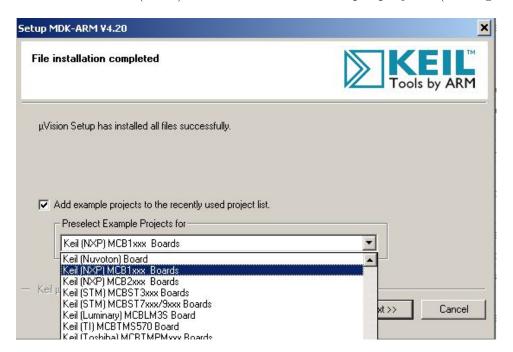


Figure B.1: MDK-ARM Installation Steps: Choose Example Projects

¹The latest version of MDK-ARM is at Keil website http://www.keil.com/download/product/. However the lab manual is written for V4.60.0.0. We haven't tested the latest version.



Figure B.2: MDK-ARM Installation Steps: Finish

At the last step of MDK-ARM installation, be sure that the launch the "ULINK Pro Driver



Figure B.3: MDK-ARM Installation Steps: ULINK Pro Driver

V1.0" driver installation check box is checked (see Figure B.2. Once you click "Finish" button, the ULINK Pro Driver installation starts. Click "Install" button to install the driver (see Figure B.3).

Appendix C

Keil MCB1700 Hardware Environment

C.1 MCB1700 Board Overview

The Keil MCB1700 board is populated with *NXP LPC1768* Microcontroller. Figure C.1 shows the important interface and hardware components of the MCB1700 board.

Figure C.2 is the hardware block diagram that helps you to understand the MCB1700 board components. Note that our lab will only use a small subset of the components which include the LPC1768 CPU, COM and Dual RS232.

The LPC1768 is a 32-bit ARM Cortex-M3 microcontroller for embedded applications requiring a high level of integration and low power dissipation. The LPC1768 operates at up to an 100 MHz CPU frequency. The peripheral complement of LPC1768 includes 512KB of on-chip flash memory, 64KB of on-chip SRAM and a variety of other on-chip peripherals. Among the on-chip peripherals, there are system control block, pin connect block, 4 UARTs and 4 general purpose timers, some of which will be used in your RTX course project. Figure C.3 is the simplified LPC1768 block diagram [4], where the components to be used in your RTX project are circled with red. Note that this manual will only discuss the components that are relevant to the RTX course project. The LPC17xx User Manual is the complete reference for LPC1768 MCU.

C.2 Cortex-M3 Processor

The Cortex-M3 processor is the central processing unit (CPU) of the LPC1768 chip. The processor is a 32-bit microprocessor with a 32-bit data path, a 32-bit register bank, and



Figure C.1: MCB1700 Board Components [1]

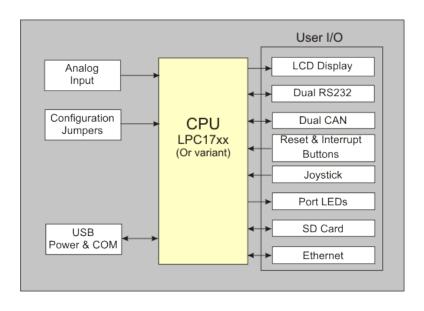


Figure C.2: MCB1700 Board Block Diagram [1]



Figure C.3: LPC1768 Block Diagram



Figure C.4: Simplified Cortex-M3 Block Diagram[6]

32-bit memory interfaces. Figure C.4 is the simplified block diagram of the Cortex-M3 processor [6]. The processor has private peripherals which are system control block, system timer, NVIC (Nested Vectored Interrupt Controller) and MPU (Memory Protection Unit). The MPU programming is not required in the course project. The processor includes a number of internal debugging components which provides debugging features such as breakpoints and watchpoints.

C.2.1 Registers

The processor core registers are shown in Figure C.5. For detailed description of each register, Chapter 34 in [4] is the complete reference.

- R0-R12 are 32-bit general purpose registers for data operations. Some 16-bit Thumb instructions can only access the low registers (R0-R7).
- R13(SP) is the stack pointer alias for two banked registers shown as follows:
 - Main Stack Pointer (MSP): This is the default stack pointer and also reset value. It is used by the OS kernel and exception handlers.
 - Process Stack Pointer (PSP): This is used by user application code.



Figure C.5: Cortex-M3 Registers[4]

On reset, the processor loads the MSP with the value from address 0x000000000. The lowest 2 bits of the stack pointers are always 0, which means they are always word aligned.

In Thread mode, when bit[1] of the CONTROL register is 0, MSP is used. When bit[1] of the CONTROL register is 1, PSP is used.

- R14(LR) is the link register. The return address of a subroutine is stored in the link register when the subroutine is called.
- R15(PC) is the program counter. It can be written to control the program flow.
- Special Registers are as follows:
 - Program Status registers (PSRs)
 - Interrupt Mask registers (PRIMASK, FAULTMASK, and BASEPRI)
 - Control register (CONTROL)

When at privilege level, all the registers are accessible. When at unprivileged (user) level, access to these registers are limited.

C.2.2 Processor mode and privilege levels

The Cortex-M3 processor supports two modes of operation, Thread mode and Handler mode.

- Thread mode is entered upon Reset and is used to execute application software.
- Handler mode is used to handle exceptions. The processor returns to Thread mode when it has finished exception handling.

Software execution has two access levels, Privileged level and Unprivileged (User) level.

- Privileged

 The software can use all instructions and has access to all resources. Your RTOS kernel functions are running in this mode.
- Unprivileged (User)
 The software has limited access to MSR and MRS instructions and cannot use the CPS instruction. There is no access to the system timer, NVIC, or system control block. The software might also have restricted access to memory or peripherals. User processes such as the wall clock process should run at this level.

When the processor is in Handler mode, it is at the privileged level. When the processor is in Thread mode, it can run at privileged or unprivileged (user) level. The bit[0] in CONTROL register determines the execution privilege level. Figure C.6 illustrate the mode and privilege level of the processor.

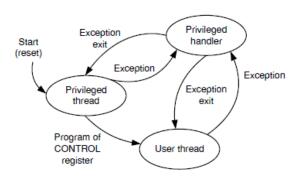


Figure C.6: Cortex-M3 Operating Mode and Privilege Level[6]

Note that only privileged software can write to the CONTROL register to change the privilege level for software execution in Thread mode. Unprivileged software can use the

SVC instruction to make a supervisor call to transfer control to privileged software. Another way to change between Privileged Thread mode and Unprivileged thread mode is to modify the EXC_RETURN value in the LR (R14) when returning from an exception. You probably want to use this mechanism for context switching.

C.2.3 Stacks

The processor uses a full descending stack. This means the stack pointer indicates the last stacked item on the stack memory. When the processor pushes a new item onto the stack, it decrements the stack pointer and then writes the item to the new memory location.

The processor implements two stacks, the main stack and the process stack. One of these two stacks is banked out depending on the stack in use. This means only one stack is visible at a time as R13. In Handler mode, the main stack is always used. The bit[1] in CONTROL register reads as zero and ignores writes in Handler mode. In Thread mode, the bit[1] setting in CONTROL register determines whether the main stack or the process stack is currently used. Table C.1 summarizes the processor mode, execution privilege level, and stack use options.

Processor	Used to	Privilege level for	CON	ГROL	Stack used
mode	execute	software execution	Bit[0]	Bit[1]	
Thread	Applications	Privileged	0	0	Main Stack
		Unprivileged	1	1	Process Stack
Handler	Exception handlers	Privileged	-	0	Main Stack

Table C.1: Summary of processor mode, execution privilege level, and stack use options

C.3 Memory Map

The Cortex-M3 processor has a single fixed 4GB address space. Table C.2 shows how this space is used on the LPC1768.

Note that the memory map is not continuous. For memory regions not shown in the table, they are reserved. When accessing reserved memory region, the processor's behavior is not defined. All the peripherals are memory-mapped and the LPC17xx.h file defines the data structure to access the memory-mapped peripherals in C.

Address Range	General Use	Address range details	Description
0x0000 0000 to	On-chip non-volatile	0x0000 0000 - 0x0007 FFFF	512 KB flash memory
0x1FFF FFFF	memory		
	On-chip SRAM	$0x1000\ 0000 - 0x1000\ 7FFF$	32 KB local SRAM
	Boot ROM	$0x1FFF\ 0000-0x1FFF\ 1FFF$	8 KB Boot ROM
0x2000 0000 to	On-chip SRAM	0x2007 C000 — 0x2007 FFFF	AHB SRAM - bank0 (16 KB)
0x3FFF FFFF	(typically used for	$0x2008\ 0000 - 0x2008\ 3FFF$	AHB SRAM - bank1 (16 KB)
	peripheral data)		
	GPIO	0x2009 C000 - 0x2009 FFFF	GPIO
0x4000 0000 to	APB Peripherals	0x4000 0000 — 0x4007 FFFF	APB0 Peripherals
0x5FFF FFFF		$0x4008\ 0000 - 0x400F\ FFFF$	APB1 Peripherals
	AHB peripherals	$0x5000\ 0000 - 0x501F\ FFFF$	DMA Controller, Ethernet
			interface, and USB interface
0xE000 0000 to	Cortex-M3 Private	0xE000 0000 — 0xE00F FFFF	Cortex-M3 private registers(NVIC,
OxEOOF FFFF	Peripheral Bus (PPB)		MPU and SysTick Timer et. al.)

Table C.2: LPC1768 Memory Map

C.4 Exceptions and Interrupts

The Cortex-M3 processor supports system exceptions and interrupts. The processor and the Nested Vectored Interrupt Controller (NVIC) prioritize and handle all exceptions. The processor uses *Handler mode* to handle all exceptions except for reset.

C.4.1 Vector Table

Exceptions are numbered 1-15 for system exceptions and 16 and above for external interrupt inputs. LPC1768 NVIC supports 35 vectored interrupts. Table C.3 shows system exceptions and some frequently used interrupt sources. See Table 50 and Table 639 in [4] for the complete exceptions and interrupts sources. On system reset, the vector table is fixed at address 0x00000000. Privileged software can write to the VTOR (within the System Control Block) to relocate the vector table start address to a different memory location, in the range 0x00000080 to 0x3FFFFF80.

C.4.2 Exception Entry

Exception entry occurs when there is a pending exception with sufficient priority and either

• the processor is in Thread mode

Exception	IRQ	Vector address	Exception	Priority	C PreFix
number	number	or offset	type		
1		0x00000004	Reset	-3, the highest	
2	-14	80000000x0	NMI	-2,	NMI_{-}
3	-13	0x000000C	Hard fault	-1	$HardFault_{-}$
4	-12	0x0000010	Memory	Configurable	$MemManage_{-}$
			management fault		
:					
11	-5	0x0000002C	SVCall	Configurable	SVC
	-0	0.00000020	5 v Can	Comigurable	D V O =
:					
14	-2	0x00000038	PendSV	Configurable	$\mathrm{PendSVC}_{-}$
15	-1	0x000003C	SysTick	Configurable	$SysTick_{-}$
16	0	0x00000040	WDT	Configurable	WDT_IRQ
17	1	0x00000044	Timer0	Configurable	TIMER0_IRQ
18	2	0x00000048	Timer1	Configurable	TIMER1_IRQ
19	3	0x0000004C	Timer2	Configurable	TIMER2_IRQ
20	4	0x00000050	Timer3	Configurable	TIMER3_IRQ
21	5	0x00000054	UART0	Configurable	UART0_IRQ
22	6	0x00000058	UART1	Configurable	UART1_IRQ
23	7	0x0000005C	UART2	Configurable	UART2_IRQ
24	8	0x00000060	UART3	Configurable	UART3_IRQ
:					
•					

Table C.3: LPC1768 Exception and Interrupt Table

• the processor is in Handler mode and the new exception is of higher priority than the exception being handled, in which case the new exception preempts the original exception (This is the nested exception case which is not required in our RTOS lab).

When an exception takes place, the following happens

• Stacking

When the processor invokes an exception (except for tail-chained or a late-arriving exception, which are not required in the RTOS lab), it automatically stores the following eight registers to the SP:

- R0-R3, R12
- PC (Program Counter)
- PSR (Processor Status Register)
- LR (Link Register, R14)

Figure C.7 shows the exception stack frame. Note that by default the stack frame is aligned to double word address starting from Cortex-M3 revision 2. The alignment feature can be turned off by programming the STKALIGN bit in the System Control Block (SCB) Configuration Control Register (CCR) to 0. On exception entry, the processor uses bit[9] of the stacked PSR to indicate the stack alignment. On return from the exception, it uses this stacked bit to restore the correct stack alignment.



Figure C.7: Cortex-M3 Exception Stack Frame [6]

• Vector Fetching

While the data bus is busy stacking the registers, the instruction bus fetches the exception vector (the starting address of the exception handler) from the vector table. The stacking and vector fetch are performed on separate bus interfaces, hence they can be carried out at the same time.

• Register Updates

After the stacking and vector fetch are completed, the exception vector will start to execute. On entry of the exception handler, the following registers will be updated as follows:

- SP: The SP (MSP or PSP) will be updated to the new location during stacking. Stacking from the privileged/unprivileged thread to the first level of the exception handler uses the MSP/PSP. During the execution of exception handler routine, the MSP will be used when stack is accessed.
- PSR: The IPSR will be updated to the new exception number

- PC: The PC will change to the vector handler when the vector fetch completes and starts fetching instructions from the exception vector.
- LR: The LR will be updated to a special value called EXC_RETURN. This indicates which stack pointer corresponds to the stack frame and what operation mode the processor was in before the exception entry occurred.
- Other NVIC registers: a number of other NVIC registers will be updated .For example the pending status of exception will be cleared and the active bit of the exception will be set.

C.4.3 EXC_RETURN Value

EXC_RETURN is the value loaded into the LR on exception entry. The exception mechanism relies on this value to detect when the processor has completed an exception handler. The EXC_RETURN bits [31:4] is always set to 0xfffffff by the processor. When this value is loaded into the PC, it indicates to the processor that the exception is complete and the processor initiates the exception return sequence. Table C.4 describes the EXC_RETURN bit fields. Table C.5 lists Cortex-M3 allowed EXC_RETURN values.

Bits	31:4	3	2	1	0
Description	OxFFFFFFF	Return mode	Return stack	Reserved;	Process state
		(Thread/Handler)		must be 0	(Thumb/ARM)

Table C.4: EXC_RETURN bit fields [6]

Value		Description	
	Return	Exception return	SP after return
	Mode	gets state from	
0xFFFFFFF1	Handler	MSP	MSP
0xFFFFFFF9	Thread	MSP	MSP
OxFFFFFFFD	Thread	PSP	PSP

Table C.5: EXC_RETURN Values on Cortex-M3

C.4.4 Exception Return

Exception return occurs when the processor is in Handler mode and executes one of the following instructions to load the EXC_RETURN value into the PC:

- a POP instruction that includes the PC. This is normally used when the EXC_RETURN in LR upon entering the exception is pushed onto the stack.
- a BX instruction with any register. This is normally used when LR contains the proper EXC_RETURN value before the exception return, then BX LR instruction will cause an exception return.
- a LDR or LDM instruction with the PC as the destination. This is another way to load PC with the EXC_RETURN value.

Note unlike the ColdFire processor which has the RTE as the special instruction for exception return, in Cortex-M3, a normal return instruction is used so that the whole interrupt handler can be implemented as a C subroutine.

When the exception return instruction is executed, the following exception return sequences happen:

- Unstacking: The registers (i.e. exception stack frame) pushed to the stack will be restored. The order of the POP will be the same as in stacking. The SP will also be changed back.
- NVIC register update: The active bit of the exception will be cleared. The pending bit will be set again if the external interrupt is still asserted, causing the processor to reenter the interrupt handler.

C.5 Data Types

The processor supports 32-bit words, 16-bit halfwords and 8-bit bytes. It supports 64-bit data transfer instructions. All data memory accesses are managed as little-endian.

Bibliography

- [1] MCB1700 User's Guide. http://www.keil.com/support/man/docs/mcb1700. 87
- [2] MDK Primer. http://www.keil.com/support/man/docs/gsac. 73, 74, 75
- [3] Realview compilation tools version 4.0: Compiler reference guide, 2007-2010. 80
- [4] LPC17xx User Manual, Rev2.0, 2010. 66, 70, 76, 86, 89, 90, 93
- [5] M. Mitchell, J. Oldham, and A. Samuel. Advanced linux programming. Available on-line at http://advancedlinuxprogramming.com, 2001. 45
- [6] J. Yiu. The Definitive Guide to the ARM Cortex-M3. Newnes, 2009. x, 73, 79, 89, 91, 95, 96