

Sitronix

ST7565P

65 x 132 Dot Matrix LCD Controller/Driver

FEATURES

- Directly display RAM data through Display Data RAM
- RAM capacity: 65 x 132 = 8580 bits
- Display duty selectable by select pin 1/65 duty: 65 common x 132 segment 1/49 duty: 49 common x 132 segment 1/33 duty: 33 common x 132 segment 1/55 duty: 55 common x 132 segment 1/53 duty: 53 common x 132 segment
- High-speed 8-bit MPU interface: ST7565P can be connected directly to both the 80x86 series MPUs and the 6800 series MPUs. Serial interface (SPI-4) is also supported.
- Abundant command functions:
 Display data read/write, display ON/OFF, Normal/
 Reverse display mode, page address set, display start line set, column address set, status read, display all points ON, LCD bias set, electronic volume, read-modify-write, set segment driver direction, power save mode, set common output direction, set V0 regulator internal resistor ratio.
- Built-in low power consumption power circuits: Booster, Regulator and Follower.

- Booster circuit supports 2X/3X/4X/5X/6X boost level.
 External reference voltage (VDD2) for booster circuits.
- High-accuracy Regulator with contrast control (EV) and built-in V0 voltage regulator resistors.
 (Thermal gradient = -0.05%/°C)
- Built-in Follower for LCD bias voltages.
- Embedded R-C oscillation circuit.
 Support external clock input.
- Extremely low power consumption:
 60uA (operating, bare chip with internal power)
 (V_{DD}-V_{SS} = V_{DD2}-V_{SS} = 3V, Booster x4, V0 = 11V).
 Condition: display pattern is "OFF": use normal mode.
- Wide application voltage range:
 Logic power: V_{DD} V_{SS} = 1.8V to 3.3V (typical)
 Analog power: V_{DD2} V_{SS} = 2.4V to 3.3V (typical)
 Maximum Booster limitation: V_{OUT} = 13.5V
 LCD Vop: V0 V_{SS} = 3.0V to 12.0V
- Wide operation temperature range: −30 to 85℃
- CMOS process.
- Package type: Bare chip (COG) and TCP.
- ST7565P is not designed for resistance to light or resistance to radiation.

GENERAL DESCRIPTION

ST7565P is a single-chip dot-matrix LCD driver that can be connected directly to a microprocessor bus. 8-bit parallel or serial display data sent from the microprocessor is stored in the internal Display Data RAM and this chip generates LCD driving signals independent of the microprocessor. Each data bits (65x132) of the internal Display Data RAM is 1-to-1 correspondence with each pixels (65x132) on the LCD panel, therefore, ST7565P enables displays with a high degree of freedom.

Moreover, the display area can be extended horizontally by using Master/Slave feature.

With the abundant embedded circuits (2~6 times booster circuit, V0 regulator with contrast control for LCD voltage adjustment, voltage follower with bias selection and R-C oscillation circuit), ST7565P can be used to create a display system with the lowest power consumption and the fewest external components for high-performance portable devices.

PART NO.	VRS temperature gradient	VRS range
ST7565P	-0.05%/℃	$2.1V \pm 0.03V$

ST7565P

6800, 8080, 4-Line interface




Sitronix Technology Corp. reserves the right to change the contents in this document without prior notice.

ST7565P Pad Arrangement(COG)

PAD No	Bump Size
001~012, 103~114, 129~276	40μm x 90μm
013~102	56μm x 60μm
115, 290	90μm x 25.5μm
116~128, 277~289	90μm x 40μm

Chip Size		
9,336µm x 1,000µm		
Bump Pitch		
58μm (Min.)		
Bump Height		
17µm (Typ)		
Chip Thickness		
635µm		

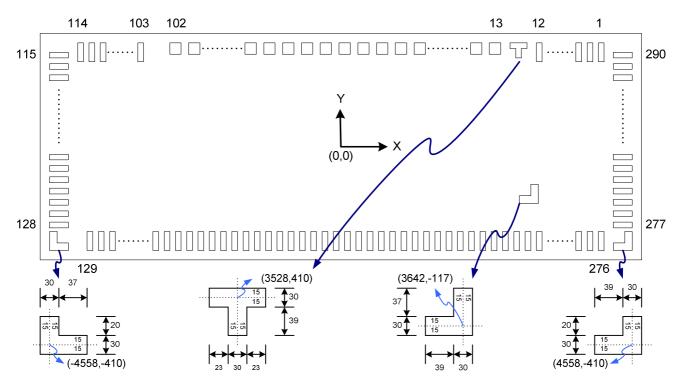

Use select pin to define display duty as following table:

SEL 3, 2, 1	DUTY	BIAS
0,0,0	1/65	1/9 or 1/7
0,0,1	1/49	1/8 or 1/6
0,1,0	1/33	1/6 or 1/5
0,1,1	1/55	1/8 or 1/6
1,0,0	1/53	1/8 or 1/6
1, X,X		

Pad Center Coordinates (1/65 Duty)

PAD No.	PIN Name	Х	Υ
1	COM[53]	4241	374
2	COM[54]	4183	374
3	COM[55]	4125	374
4	COM[56]	4067	374
5	COM[57]	4009	374
6	COM[58]	3951	374
7	COM[59]	3893	374
8	COM[60]	3835	374
9	COM[61]	3777	374
10	COM[62]	3719	374
11	COM[63]	3661	374
12	COMS1	3603	374
13	FRS	3443	389
14	FR	3369	389
15	CL	3295	389
16	/DOF	3221	389
17	VSS	3147	389
18	/CS1	3073	389
19	CS2	2999	389
20	VDD	2925	389
21	/RES	2851	389
22	A0	2777	389
23	VSS	2703	389
24	/WR(R/W)	2629	389
25	/RD(E)	2555	389
26	VDD	2481	389
27	D0	2407	389
28	D1	2333	389
29	D2	2259	389
30	D3	2185	389
31	D4	2111	389
32	D5	2037	389
33	D6	1963	389
34	D7	1889	389
35	VDD	1815	389
36	VDD2	1741	389
37	VDD2	1667	389
38	VSS	1593	389
39	VSS	1519	389
40	VSS	1445	389
41	VSS	1371	389
42	VOUT	1297	389
43	VOUT	1223	389
44	CAP5P	1149	389
45	CAP5P	1075	389
46	CAP1N	1001	389
47	CAP1N	927	389

			Units: µm
PAD No.	PIN Name	Х	Y
48	CAP3P	853	389
49	CAP3P	779	389
50	CAP1N	705	389
51	CAP1N	631	389
52	CAP1P	557	389
53	CAP1P	483	389
54	CAP2P	409	389
55	CAP2P	335	389
56	CAP2N	261	389
57	CAP2N	187	389
58	CAP4P	113	389
59	CAP4P	39	389
60	VSS	-35	389
61	VSS	-109	389
62	VRS	-183	389
63	VRS	-257	389
64	VDD2	-331	389
65	VDD	-405	389
66	V4	-479	389
67	V4	-553	389
68	V3	-627	389
69	V3	-701	389
70	V2	-775	389
71	V2	-849	389
72	V1	-923	389
73	V1	-997	389
74	V0	-1071	389
75	V0	-1145	389
76	VR	-1219	389
77	VR	-1293	389
78	VDD	-1367	389
79	VDD2	-1441	389
80	TEST0	-1515	389
81	TEST1	-1589	389
82	TEST2	-1663	389
83	TEST3	-1737	389
84	TEST4	-1811	389
85	TEST5	-1885	389
86	VDD	-1959	389
87	M/S	-2033	389
88	CLS	-2107	389
89	VSS	-2181	389
90	C86	-2255	389
91	P/S	-2329	389
92	VDD	-2403	389
93	/HPM	-2477	389
94	VSS	-2551	389

PAD	PIN Name	Х	Y
No.			
95	IRS	-2625	389
96	VDD	-2699	389
97	SEL1	-2773	389
98	VSS	-2847	389
99	SEL2	-2921	389
100	VDD	-2995	389
101	SEL3	-3069	389
102	VSS	-3143	389
103	COM[31]	-3606	374
104	COM[30]	-3664	374
105	COM[29]	-3722	374
106	COM[28]	-3780	374
107	COM[27]	-3838	374
108	COM[26]	-3896	374
109	COM[25]	-3954	374
110	COM[24]	-4012	374
111	COM[23]	-4070	374
112	COM[22]	-4128	374
113	COM[21]	-4186	374
114	COM[20]	-4244	374
115	(NC)	-4542	404
116	COM[19]	-4542	351
117	COM[18]	-4542	293
118	COM[17]	-4542	235
119	COM[16]	-4542	177
120	COM[15]	-4542	119
121	COM[14]	-4542	61
122	COM[13]	-4542	3
123	COM[12]	-4542	-55
124	COM[11]	-4542	-113
125	COM[10]	-4542	-171
126	COM[9]	-4542	-229
127	COM[8]	-4542	-287
128	COM[7]	-4542	-345
129	COM[6]	-4267	-374
130	COM[5]	-4209	-374
131	COM[4]	-4151	-374
132	COM[3]	-4093	-374
133	COM[2]	-4035	-374
134	COM[1]	-3977	-374
135	COM[0]	-3919	-374
136	COMS2	-3861	-374
137	SEG[0]	-3803	-374
138	SEG[1]	-3745	-374
139	SEG[2]	-3687	-374
140	SEG[3]	-3629	-374
141	SEG[4]	-3571	-374
142	SEG[5]	-3513	-374
143	SEG[6]	-3455	-374
144	SEG[7]	-3397	-374
145	SEG[8]	-3339	-374
146	SEG[9]	-3281	-374

PAD No.	PIN Name	X	Υ
147	SEG[10]	-3223	-374
148	SEG[11]	-3165	-374
149	SEG[12]	-3107	-374
150	SEG[13]	-3049	-374
151	SEG[14]	-2991	-374
152	SEG[15]	-2933	-374
153	SEG[16]	-2875	-374
154	SEG[17]	-2817	-374
155	SEG[18]	-2759	-374
156	SEG[19]	-2701	-374
157	SEG[20]	-2643	-374
158	SEG[21]	-2585	-374
159	SEG[22]	-2527	-374
160	SEG[23]	-2469	-374
161	SEG[24]	-2411	-374
162	SEG[25]	-2353	-374
163	SEG[26]	-2295	-374
164	SEG[27]	-2237	-374
165	SEG[28]	-2179	-374
166	SEG[29]	-2121	-374
167	SEG[30]	-2063	-374
168	SEG[31]	-2005	-374
169	SEG[32]	-1947	-374
170	SEG[33]	-1889	-374
171	SEG[34]	-1831	-374
172	SEG[35]	-1773	-374
173	SEG[36]	-1715	-374
174	SEG[37]	-1657	-374
175	SEG[38]	-1599	-374
176	SEG[39]	-1541	-374
177	SEG[40]	-1483	-374
178	SEG[41]	-1425	-374
179	SEG[42]	-1367	-374
180	SEG[43]	-1309	-374
181	SEG[44]	-1251	-374
182	SEG[45]	-1193	-374
183	SEG[46]	-1135	-374
184	SEG[47]	-1077	-374
185	SEG[48]	-1019	-374
186	SEG[49]	-961	-374
187	SEG[50]	-903	-374
188	SEG[51]	-845	-374
189	SEG[52]	-787	-374
190	SEG[53]	-729	-374
191	SEG[54]	-671	-374
192	SEG[55]	-613	-374
193	SEG[56]	-555	-374
194	SEG[57]	-497	-374
195	SEG[58]	-439	-374
196	SEG[59]	-381	-374
197	SEG[60]	-323	-374
198	SEG[61]	-265	-374
100	رادار	200	Ο, τ

PAD	PIN Name	X	Y
No. 199	SEG[62]	-207	-374
200	SEG[62]	-149	-374
201	SEG[64]	-149	-374
202	SEG[65]	-33	-374
202	SEG[66]	25	-374
204	SEG[67]	83	-374
205	SEG[68]	141	-374
206		199	-374
207	SEG[69]	257	-374
208	SEG[70]	315	-374
	SEG[71]	+	-374
209	SEG[72]	373	-374
210	SEG[73]	431	-374
211	SEG[74]	489	-374
212	SEG[75]	547	
213	SEG[76]	605	-374
214	SEG[77]	663	-374
215	SEG[78]	721	-374
216	SEG[79]	779	-374
217	SEG[80]	837	-374
218	SEG[81]	895	-374
219	SEG[82]	953	-374
220	SEG[83]	1011	-374
221	SEG[84]	1069	-374
222	SEG[85]	1127	-374
223	SEG[86]	1185	-374
224	SEG[87]	1243	-374
225	SEG[88]	1301	-374
226	SEG[89]	1359	-374
227	SEG[90]	1417	-374
228	SEG[91]	1475	-374
229	SEG[92]	1533	-374
230	SEG[93]	1591	-374
231	SEG[94]	1649	-374
232	SEG[95]	1707	-374
233	SEG[96]	1765	-374
234	SEG[97]	1823	-374
235	SEG[98]	1881	-374
236	SEG[99]	1939	-374
237	SEG[100]	1997	-374
238	SEG[101]	2055	-374
239	SEG[102]	2113	-374
240	SEG[103]	2171	-374
241	SEG[104]	2229	-374
242	SEG[105]	2287	-374
243	SEG[106]	2345	-374
244	SEG[107]	2403	-374
245	SEG[108]	2461	-374

PAD No.	PIN Name	Х	Υ
246	SEG[109]	2519	-374
247	SEG[110]	2577	-374
248	SEG[111]	2635	-374
249	SEG[112]	2693	-374
250	SEG[113]	2751	-374
251	SEG[114]	2809	-374
252	SEG[115]	2867	-374
253	SEG[116]	2925	-374
254	SEG[117]	2983	-374
255	SEG[118]	3041	-374
256	SEG[119]	3099	-374
257	SEG[120]	3157	-374
258	SEG[121]	3215	-374
259	SEG[122]	3273	-374
260	SEG[123]	3331	-374
261	SEG[124]	3389	-374
262	SEG[125]	3447	-374
263	SEG[126]	3505	-374
264	SEG[127]	3563	-374
265	SEG[128]	3621	-374
266	SEG[129]	3679	-374
267	SEG[130]	3737	-374
268	SEG[131]	3795	-374
269	COM[32]	3853	-374
270	COM[33]	3911	-374
271	COM[34]	3969	-374
272	COM[35]	4027	-374
273	COM[36]	4085	-374
274	COM[37]	4143	-374
275	COM[38]	4201	-374
276	COM[39]	4259	-374
277	COM[40]	4542	-345
278	COM[41]	4542	-287
279	COM[42]	4542	-229
280	COM[43]	4542	-171
281	COM[44]	4542	-113
282	COM[45]	4542	-55
283	COM[46]	4542	3
284	COM[47]	4542	61
285	COM[48]	4542	119
286	COM[49]	4542	177
287	COM[50]	4542	235
288	COM[51]	4542	293
289	COM[52]	4542	351
290	(NC)	4542	404

Pad Center Coordinates (1/49 Duty)

PAD No.	PIN Name	Х	Υ
1	COM[37]	4241	374
2	COM[38]	4183	374
3	COM[39]	4125	374
4	COM[40]	4067	374
5	COM[41]	4009	374
6	COM[42]	3951	374
7	COM[43]	3893	374
8	COM[44]	3835	374
9	COM[45]	3777	374
10	COM[46]	3719	374
11	COM[47]	3661	374
12	COMS1	3603	374
13	FRS	3443	389
14	FR	3369	389
15	CL	3295	389
16	/DOF	3221	389
17	VSS	3147	389
18	/CS1	3073	389
19	CS2	2999	389
20	VDD	2925	389
21	/RES	2851	389
22	A0	2777	389
23	VSS	2703	389
24	/WR(R/W)	2629	389
25	/RD(E)	2555	389
26	VDD	2481	389
27	D0	2407	389
28	D1	2333	389
29	D2	2259	389
30	D3	2185	389
31	D4	2111	389
32	D5	2037	389
33	D6	1963	389
34	D7	1889	389
35	VDD	1815	389
36	VDD2	1741	389
37	VDD2	1667	389
38	VSS	1593	389
39	VSS	1519	389
40	VSS	1445	389
41	VSS	1371	389
42	VOUT	1297	389
43	VOUT	1223	389
44	CAP5P	1149	389
45	CAP5P	1075	389
46	CAP1N	1001	389
47	CAP1N	927	389

PAD No. PIN Name X 48 CAP3P 853 49 CAP3P 779 50 CAP1N 705 51 CAP1N 631 52 CAP1P 557 53 CAP1P 483 54 CAP2P 409 55 CAP2P 335 56 CAP2N 261 57 CAP2N 187 58 CAP4P 113 59 CAP4P 39 60 VSS -35 61 VSS -109 62 VRS -183	Y 389 389 389 389 389 389 389 389 389 389
No. 48 CAP3P 853 49 CAP3P 779 50 CAP1N 705 51 CAP1N 631 52 CAP1P 557 53 CAP1P 483 54 CAP2P 409 55 CAP2P 335 56 CAP2N 261 57 CAP2N 187 58 CAP4P 113 59 CAP4P 39 60 VSS -35 61 VSS -109	389 389 389 389 389 389 389 389 389
49 CAP3P 779 50 CAP1N 705 51 CAP1N 631 52 CAP1P 557 53 CAP1P 483 54 CAP2P 409 55 CAP2P 335 56 CAP2N 261 57 CAP2N 187 58 CAP4P 113 59 CAP4P 39 60 VSS -35 61 VSS -109	389 389 389 389 389 389 389 389 389
50 CAP1N 705 51 CAP1N 631 52 CAP1P 557 53 CAP1P 483 54 CAP2P 409 55 CAP2P 335 56 CAP2N 261 57 CAP2N 187 58 CAP4P 113 59 CAP4P 39 60 VSS -35 61 VSS -109	389 389 389 389 389 389 389 389
51 CAP1N 631 52 CAP1P 557 53 CAP1P 483 54 CAP2P 409 55 CAP2P 335 56 CAP2N 261 57 CAP2N 187 58 CAP4P 113 59 CAP4P 39 60 VSS -35 61 VSS -109	389 389 389 389 389 389 389
52 CAP1P 557 53 CAP1P 483 54 CAP2P 409 55 CAP2P 335 56 CAP2N 261 57 CAP2N 187 58 CAP4P 113 59 CAP4P 39 60 VSS -35 61 VSS -109	389 389 389 389 389 389 389
53 CAP1P 483 54 CAP2P 409 55 CAP2P 335 56 CAP2N 261 57 CAP2N 187 58 CAP4P 113 59 CAP4P 39 60 VSS -35 61 VSS -109	389 389 389 389 389 389
54 CAP2P 409 55 CAP2P 335 56 CAP2N 261 57 CAP2N 187 58 CAP4P 113 59 CAP4P 39 60 VSS -35 61 VSS -109	389 389 389 389 389
55 CAP2P 335 56 CAP2N 261 57 CAP2N 187 58 CAP4P 113 59 CAP4P 39 60 VSS -35 61 VSS -109	389 389 389 389
56 CAP2N 261 57 CAP2N 187 58 CAP4P 113 59 CAP4P 39 60 VSS -35 61 VSS -109	389 389 389
57 CAP2N 187 58 CAP4P 113 59 CAP4P 39 60 VSS -35 61 VSS -109	389 389
58 CAP4P 113 59 CAP4P 39 60 VSS -35 61 VSS -109	389
59 CAP4P 39 60 VSS -35 61 VSS -109	
60 VSS -35 61 VSS -109	389
60 VSS -35 61 VSS -109	
	389
	389
	389
63 VRS -257	389
64 VDD2 -331	389
65 VDD -405	389
66 V4 -479	389
67 V4 -553	389
68 V3 -627	389
69 V3 -701	389
70 V2 -775	
	389
	389
72 V1 -923	389
73 V1 -997	389
74 V0 -1071	389
75 V0 -1145	
76 VR -1219	-
77 VR -1293	
78 VDD -1367	+
79 VDD2 -1441	389
80 TEST0 -1515	
81 TEST1 -1589	389
82 TEST2 -1663	389
83 TEST3 -1737	389
84 TEST4 -1811	389
85 TEST5 -1885	389
86 VDD -1959	389
87 M/S -2033	389
88 CLS -2107	389
89 VSS -2181	389
90 C86 -2255	389
91 P/S -2329	389
92 VDD -2403	
93 /HPM -2477	
94 VSS -2551	389

PAD	PIN Name	Х	Y
No.			
95	IRS	-2625	389
96	VDD	-2699	389
97	SEL1	-2773	389
98	VSS	-2847	389
99	SEL2	-2921	389
100	VDD	-2995	389
101	SEL3	-3069	389
102	VSS	-3143	389
103	Reserve	-3606	374
104	Reserve	-3664	374
105	Reserve	-3722	374
106	Reserve	-3780	374
107	Reserve	-3838	374
108	Reserve	-3896	374
109	Reserve	-3954	374
110	Reserve	-4012	374
111	COM[23]	-4070	374
112	COM[22]	-4128	374
113	COM[21]	-4186	374
114	COM[20]	-4244	374
115	(NC)	-4542	404
116	COM[19]	-4542	351
117	COM[18]	-4542	293
118	COM[17]	-4542	235
119	COM[16]	-4542	177
120	COM[15]	-4542	119
121	COM[14]	-4542	61
122	COM[13]	-4542	3
123	COM[12]	-4542	-55
124	COM[11]	-4542	-113
125	COM[10]	-4542	-171
126	COM[9]	-4542	-229
127	COM[8]	-4542	-287
128	COM[7]	-4542	-345
129	COM[6]	-4267	-374
130	COM[5]	-4209	-374
131	COM[4]	-4151	-374
132	COM[3]	-4093	-374
133	COM[2]	-4035	-374
134	COM[1]	-3977	-374
135	COM[0]	-3919	-374
136	COMS2	-3861	-374
137	SEG[0]	-3803	-374
138	SEG[1]	-3745	-374
139	SEG[2]	-3687	-374
140	SEG[3]	-3629	-374
141	SEG[4]	-3571	-374
142	SEG[5]	-3513	-374
143	SEG[6]	-3455	-374
144	SEG[7]	-3397	-374
145	SEG[8]	-3339	-374
146	SEG[9]	-3281	-374

PAD No.	PIN Name	X	Υ
147	SEG[10]	-3223	-374
148	SEG[11]	-3165	-374
149	SEG[12]	-3107	-374
150	SEG[13]	-3049	-374
151	SEG[14]	-2991	-374
152	SEG[15]	-2933	-374
153	SEG[16]	-2875	-374
154	SEG[17]	-2817	-374
155	SEG[18]	-2759	-374
156	SEG[19]	-2701	-374
157	SEG[20]	-2643	-374
158	SEG[21]	-2585	-374
159	SEG[22]	-2527	-374
160	SEG[23]	-2469	-374
161	SEG[24]	-2411	-374
162	SEG[25]	-2353	-374
163	SEG[26]	-2295	-374
164	SEG[27]	-2237	-374
165	SEG[28]	-2179	-374
166	SEG[29]	-2121	-374
167	SEG[30]	-2063	-374
168	SEG[31]	-2005	-374
169	SEG[32]	-1947	-374
170	SEG[33]	-1889	-374
171	SEG[34]	-1831	-374
172	SEG[35]	-1773	-374
173	SEG[36]	-1715	-374
174	SEG[37]	-1657	-374
175	SEG[38]	-1599	-374
176	SEG[39]	-1541	-374
177	SEG[40]	-1483	-374
178	SEG[41]	-1425	-374
179	SEG[42]	-1367	-374
180	SEG[43]	-1309	-374
181	SEG[44]	-1251	-374
182	SEG[45]	-1193	-374
183	SEG[46]	-1135	-374
184	SEG[47]	-1077	-374
185	SEG[48]	-1017	-374
186	SEG[49]	-961	-374
187	SEG[50]	-903	-374
188	SEG[51]	-845	-374
189	SEG[51]	-787	-374
190	SEG[52]	-729	-374
191	SEG[54]	-671	-374
192	SEG[54]	-613	-374
193	SEG[55]	-555	-374
194	SEG[50]	-497	-374
195	SEG[57]	-439	-374
195	SEG[56] SEG[59]	- 4 39 -381	-374
196	SEG[59] SEG[60]	-323	-374
197	SEG[60] SEG[61]		-374
190	SEG[01]	-265	-314

PAD	PIN Name	Х	Υ
No. 199	SEG[62]	-207	-374
200	SEG[63]	-149	-374
201	SEG[64]	-91	-374
202	SEG[65]	-33	-374
202	SEG[66]	25	-374
203	SEG[67]	83	-374
205	SEG[68]	141	-374
206		199	-374
207	SEG[69]	257	-374
208	SEG[70]	315	-374
	SEG[71]	+	
209	SEG[72]	373	-374
210	SEG[73]	431	-374
211	SEG[74]	489	-374
212	SEG[75]	547	-374
213	SEG[76]	605	-374
214	SEG[77]	663	-374
215	SEG[78]	721	-374
216	SEG[79]	779	-374
217	SEG[80]	837	-374
218	SEG[81]	895	-374
219	SEG[82]	953	-374
220	SEG[83]	1011	-374
221	SEG[84]	1069	-374
222	SEG[85]	1127	-374
223	SEG[86]	1185	-374
224	SEG[87]	1243	-374
225	SEG[88]	1301	-374
226	SEG[89]	1359	-374
227	SEG[90]	1417	-374
228	SEG[91]	1475	-374
229	SEG[92]	1533	-374
230	SEG[93]	1591	-374
231	SEG[94]	1649	-374
232	SEG[95]	1707	-374
233	SEG[96]	1765	-374
234	SEG[97]	1823	-374
235	SEG[98]	1881	-374
236	SEG[99]	1939	-374
237	SEG[100]	1997	-374
238	SEG[101]	2055	-374
239	SEG[102]	2113	-374
240	SEG[103]	2171	-374
241	SEG[104]	2229	-374
242	SEG[105]	2287	-374
243	SEG[106]	2345	-374
244	SEG[107]	2403	-374
245	SEG[108]	2461	-374

PAD No.	PIN Name	X	Υ
246	SEG[109]	2519	-374
247	SEG[110]	2577	-374
248	SEG[111]	2635	-374
249	SEG[112]	2693	-374
250	SEG[113]	2751	-374
251	SEG[114]	2809	-374
252	SEG[115]	2867	-374
253	SEG[116]	2925	-374
254	SEG[117]	2983	-374
255	SEG[118]	3041	-374
256	SEG[119]	3099	-374
257	SEG[120]	3157	-374
258	SEG[121]	3215	-374
259	SEG[122]	3273	-374
260	SEG[123]	3331	-374
261	SEG[124]	3389	-374
262	SEG[125]	3447	-374
263	SEG[126]	3505	-374
264	SEG[127]	3563	-374
265	SEG[128]	3621	-374
266	SEG[129]	3679	-374
267	SEG[130]	3737	-374
268	SEG[131]	3795	-374
269	Reserve	3853	-374
270	Reserve	3911	-374
271	Reserve	3969	-374
272	Reserve	4027	-374
273	Reserve	4085	-374
274	Reserve	4143	-374
275	Reserve	4201	-374
276	Reserve	4259	-374
277	COM[24]	4542	-345
278	COM[25]	4542	-287
279	COM[26]	4542	-229
280	COM[27]	4542	-171
281	COM[28]	4542	-113
282	COM[29]	4542	-55
283	COM[30]	4542	3
284	COM[31]	4542	61
285	COM[32]	4542	119
286	COM[33]	4542	177
287	COM[34]	4542	235
288	COM[35]	4542	293
289	COM[36]	4542	351
290	(NC)	4542	404
_50	()	1012	

Pad Center Coordinates (1/33 Duty)

PAD No.	PIN Name	Х	Y
1	COM[21]	4241	374
2	COM[22]	4183	374
3	COM[23]	4125	374
4	COM[24]	4067	374
5	COM[25]	4009	374
6	COM[26]	3951	374
7	COM[27]	3893	374
8	COM[28]	3835	374
9	COM[29]	3777	374
10	COM[30]	3719	374
11	COM[31]	3661	374
12	COMS1	3603	374
13	FRS	3443	389
14	FR	3369	389
15	CL	3295	389
16	/DOF	3221	389
17	VSS	3147	389
18	/CS1	3073	389
19	CS2	2999	389
20	VDD	2925	389
21	/RES	2851	389
22	A0	2777	389
23	VSS	2703	389
24	/WR(R/W)	2629	389
25	/RD(E)	2555	389
26	VDD	2481	389
27	D0	2407	389
28	D1	2333	389
29	D2	2259	389
30	D3	2185	389
31	D4	2111	389
32	D5	2037	389
33	D6	1963	389
34	D7	1889	389
35	VDD	1815	389
36	VDD2	1741	389
37	VDD2	1667	389
38	VSS	1593	389
39	VSS	1519	389
40	VSS	1445	389
41	VSS	1371	389
42	VOUT	1297	389
43	VOUT	1223	389
44	CAP5P	1149	389
45	CAP5P	1075	389
46	CAP1N	1001	389
47	CAP1N	927	389

			Units: µm
PAD	PIN Name	Х	Υ
No.			-
48	CAP3P	853	389
49	CAP3P	779	389
50	CAP1N	705	389
51	CAP1N	631	389
52	CAP1P	557	389
53	CAP1P	483	389
54	CAP2P	409	389
55	CAP2P	335	389
56	CAP2N	261	389
57	CAP2N	187	389
58	CAP4P	113	389
59	CAP4P	39	389
60	VSS	-35	389
61	VSS	-109	389
62	VRS	-183	389
63	VRS	-257	389
64	VDD2	-331	389
65	VDD	-405	389
66	V4	-479	389
67	V4	-553	389
68	V3	-627	389
69	V3	-701	389
70	V2	-775	389
71	V2	-849	389
72	V1	-923	389
73	V1	-997	389
74	V0	-1071	389
75	VO	-1145	389
76	VR	-1219	389
77	VR	-1213	389
78	VDD	-1367	389
79	VDD2	-1441	389
80	TEST0	-1515	389
81	TEST1	-1515	389
82	TEST2	-1663	389
—			
83 84	TEST3 TEST4	-1737 -1811	389
			389
85	TEST5	-1885 -1050	389
86	VDD M/S	-1959	389
87		-2033	389
88	CLS	-2107	389
89	VSS	-2181	389
90	C86	-2255	389
91	P/S	-2329	389
92	VDD	-2403	389
93	/HPM	-2477	389
94	VSS	-2551	389

No. Fin Name A T 95 IRS -2625 389 96 VDD -2699 389 97 SEL1 -2773 389 98 VSS -2847 389 99 SEL2 -2921 389 100 VDD -2995 389 101 SEL3 -3069 389 102 VSS -3143 389 103 Reserve -3606 374 104 Reserve -3606 374 105 Reserve -3722 374 106 Reserve -3780 374 107 Reserve -3838 374 108 Reserve -3896 374 109 Reserve -3954 374 110 Reserve -4012 374 111 Reserve -4070 374 111 Reserve -4128 374	PAD			
96 VDD -2699 389 97 SEL1 -2773 389 98 VSS -2847 389 99 SEL2 -2921 389 100 VDD -2995 389 101 SEL3 -3069 389 102 VSS -3143 389 103 Reserve -3606 374 104 Reserve -3664 374 105 Reserve -3780 374 106 Reserve -3780 374 107 Reserve -3896 374 109 Reserve -3896 374 109 Reserve -4012 374 110 Reserve -4012 374 111 Reserve -4012 374 111 Reserve -4070 374 112 Reserve -4128 374 113 Reserve -4244 374		PIN Name	Х	Y
97 SEL1 -2773 389 98 VSS -2847 389 99 SEL2 -2921 389 100 VDD -2995 389 101 SEL3 -3069 389 102 VSS -3143 389 103 Reserve -3606 374 104 Reserve -3664 374 105 Reserve -3780 374 106 Reserve -3780 374 107 Reserve -3838 374 108 Reserve -3896 374 109 Reserve -3954 374 110 Reserve -4012 374 110 Reserve -4012 374 111 Reserve -4012 374 111 Reserve -4070 374 111 Reserve -4186 374 111 Reserve -4244 374 <td>95</td> <td>IRS</td> <td>-2625</td> <td>389</td>	95	IRS	-2625	389
98 VSS -2847 389 99 SEL2 -2921 389 100 VDD -2995 389 101 SEL3 -3069 389 102 VSS -3143 389 103 Reserve -3606 374 104 Reserve -3664 374 105 Reserve -3780 374 106 Reserve -3780 374 107 Reserve -3838 374 108 Reserve -3896 374 109 Reserve -3954 374 110 Reserve -4012 374 110 Reserve -4012 374 111 Reserve -4012 374 111 Reserve -4012 374 111 Reserve -4128 374 111 Reserve -4244 374 114 Reserve -4542 351	96	VDD	-2699	389
99 SEL2 -2921 389 100 VDD -2995 389 101 SEL3 -3069 389 102 VSS -3143 389 103 Reserve -3606 374 104 Reserve -3664 374 105 Reserve -3780 374 106 Reserve -3780 374 107 Reserve -3838 374 108 Reserve -3896 374 109 Reserve -3954 374 110 Reserve -3954 374 110 Reserve -4012 374 111 Reserve -4012 374 111 Reserve -4012 374 111 Reserve -4128 374 112 Reserve -4186 374 113 Reserve -4244 374 114 Reserve -4542 351 <td>97</td> <td>SEL1</td> <td>-2773</td> <td>389</td>	97	SEL1	-2773	389
100 VDD -2995 389 101 SEL3 -3069 389 102 VSS -3143 389 103 Reserve -3606 374 104 Reserve -3664 374 105 Reserve -3780 374 106 Reserve -3780 374 107 Reserve -3838 374 108 Reserve -3896 374 109 Reserve -3954 374 110 Reserve -4012 374 110 Reserve -4012 374 111 Reserve -4012 374 111 Reserve -4012 374 111 Reserve -4128 374 112 Reserve -4128 374 113 Reserve -4128 374 114 Reserve -4244 374 115 (NC) -4542 351 <td>98</td> <td>VSS</td> <td>-2847</td> <td>389</td>	98	VSS	-2847	389
101 SEL3 -3069 389 102 VSS -3143 389 103 Reserve -3606 374 104 Reserve -3664 374 105 Reserve -3722 374 106 Reserve -3780 374 107 Reserve -3838 374 108 Reserve -3896 374 109 Reserve -3954 374 110 Reserve -4012 374 110 Reserve -4012 374 111 Reserve -4070 374 111 Reserve -4128 374 111 Reserve -4128 374 112 Reserve -4128 374 113 Reserve -4244 374 114 Reserve -4542 351 115 (NC) -4542 351 117 Reserve -4542 23	99	SEL2	-2921	389
102 VSS -3143 389 103 Reserve -3606 374 104 Reserve -3664 374 105 Reserve -3722 374 106 Reserve -3780 374 107 Reserve -3838 374 108 Reserve -3896 374 109 Reserve -3954 374 110 Reserve -4012 374 111 Reserve -4070 374 111 Reserve -4070 374 112 Reserve -4128 374 113 Reserve -4128 374 114 Reserve -4244 374 115 (NC) -4542 404 116 Reserve -4542 351 117 Reserve -4542 235 118 Reserve -4542 177 120 COM[15] -4542 <td< td=""><td>100</td><td>VDD</td><td>-2995</td><td>389</td></td<>	100	VDD	-2995	389
103 Reserve -3606 374 104 Reserve -3664 374 105 Reserve -3722 374 106 Reserve -3780 374 107 Reserve -3838 374 108 Reserve -3896 374 109 Reserve -3954 374 110 Reserve -4012 374 111 Reserve -4012 374 111 Reserve -4070 374 112 Reserve -4128 374 113 Reserve -4186 374 114 Reserve -4186 374 115 (NC) -4542 404 116 Reserve -4244 374 115 (NC) -4542 351 117 Reserve -4542 235 118 Reserve -4542 235 119 Reserve -4542 <t< td=""><td>101</td><td>SEL3</td><td>-3069</td><td>389</td></t<>	101	SEL3	-3069	389
104 Reserve -3664 374 105 Reserve -3722 374 106 Reserve -3780 374 107 Reserve -3838 374 108 Reserve -3896 374 109 Reserve -3954 374 110 Reserve -4012 374 111 Reserve -4070 374 111 Reserve -4128 374 112 Reserve -4128 374 113 Reserve -4186 374 114 Reserve -4244 374 115 (NC) -4542 404 116 Reserve -4244 374 115 (NC) -4542 351 117 Reserve -4542 293 118 Reserve -4542 235 119 Reserve -4542 177 120 COM[15] -4542 <t< td=""><td>102</td><td>VSS</td><td>-3143</td><td>389</td></t<>	102	VSS	-3143	389
105 Reserve -3722 374 106 Reserve -3780 374 107 Reserve -3838 374 108 Reserve -3896 374 109 Reserve -3954 374 110 Reserve -4012 374 111 Reserve -4070 374 112 Reserve -4128 374 113 Reserve -4128 374 113 Reserve -4186 374 114 Reserve -4244 374 115 (NC) -4542 404 116 Reserve -4542 351 117 Reserve -4542 293 118 Reserve -4542 235 119 Reserve -4542 177 120 COM[15] -4542 119 121 COM[14] -4542 3 122 COM[13] -4542 <	103	Reserve	-3606	374
106 Reserve -3780 374 107 Reserve -3838 374 108 Reserve -3896 374 109 Reserve -3954 374 110 Reserve -4012 374 111 Reserve -4070 374 111 Reserve -4128 374 112 Reserve -4128 374 113 Reserve -4186 374 114 Reserve -4244 374 115 (NC) -4542 404 116 Reserve -4542 351 117 Reserve -4542 351 117 Reserve -4542 293 118 Reserve -4542 235 119 Reserve -4542 177 120 COM[15] -4542 119 121 COM[14] -4542 3 122 COM[13] -4542 <	104	Reserve	-3664	374
107 Reserve -3838 374 108 Reserve -3896 374 109 Reserve -3954 374 110 Reserve -4012 374 111 Reserve -4070 374 111 Reserve -4128 374 112 Reserve -4186 374 113 Reserve -4186 374 114 Reserve -4244 374 115 (NC) -4542 404 116 Reserve -4542 351 117 Reserve -4542 351 117 Reserve -4542 293 118 Reserve -4542 235 119 Reserve -4542 177 120 COM[15] -4542 177 120 COM[14] -4542 61 122 COM[13] -4542 3 123 COM[11] -4542 <t< td=""><td>105</td><td>Reserve</td><td>-3722</td><td>374</td></t<>	105	Reserve	-3722	374
107 Reserve -3838 374 108 Reserve -3896 374 109 Reserve -3954 374 110 Reserve -4012 374 111 Reserve -4070 374 112 Reserve -4128 374 112 Reserve -4186 374 113 Reserve -4186 374 114 Reserve -4244 374 115 (NC) -4542 404 116 Reserve -4542 351 117 Reserve -4542 235 118 Reserve -4542 235 119 Reserve -4542 177 120 COM[15] -4542 119 121 COM[14] -4542 61 122 COM[13] -4542 3 123 COM[14] -4542 -171 126 COM[9] -4542 <t< td=""><td>106</td><td>Reserve</td><td>-3780</td><td>374</td></t<>	106	Reserve	-3780	374
108 Reserve -3896 374 109 Reserve -3954 374 110 Reserve -4012 374 111 Reserve -4070 374 112 Reserve -4128 374 113 Reserve -4186 374 114 Reserve -4244 374 115 (NC) -4542 404 116 Reserve -4542 351 117 Reserve -4542 293 118 Reserve -4542 235 119 Reserve -4542 177 120 COM[15] -4542 119 121 COM[14] -4542 61 122 COM[13] -4542 3 123 COM[14] -4542 -113 125 COM[10] -4542 -171 126 COM[9] -4542 -229 127 COM[8] -4542 <	107		-3838	374
109 Reserve -3954 374 110 Reserve -4012 374 111 Reserve -4070 374 112 Reserve -4128 374 113 Reserve -4186 374 114 Reserve -4244 374 115 (NC) -4542 404 116 Reserve -4542 351 117 Reserve -4542 293 118 Reserve -4542 293 118 Reserve -4542 235 119 Reserve -4542 177 120 COM[15] -4542 119 121 COM[14] -4542 61 122 COM[13] -4542 3 123 COM[12] -4542 -113 125 COM[10] -4542 -113 126 COM[9] -4542 -229 127 COM[8] -4542 <	108		-3896	374
111 Reserve -4070 374 112 Reserve -4128 374 113 Reserve -4186 374 114 Reserve -4244 374 115 (NC) -4542 404 116 Reserve -4542 351 117 Reserve -4542 293 118 Reserve -4542 235 119 Reserve -4542 177 120 COM[15] -4542 119 121 COM[14] -4542 61 122 COM[13] -4542 3 123 COM[12] -4542 -55 124 COM[11] -4542 -113 125 COM[10] -4542 -171 126 COM[9] -4542 -229 127 COM[8] -4542 -287 128 COM[7] -4542 -345 129 COM[6] -4267 <	109		-3954	374
111 Reserve -4070 374 112 Reserve -4128 374 113 Reserve -4186 374 114 Reserve -4244 374 115 (NC) -4542 404 116 Reserve -4542 351 117 Reserve -4542 293 118 Reserve -4542 235 119 Reserve -4542 177 120 COM[15] -4542 119 121 COM[14] -4542 61 122 COM[13] -4542 3 123 COM[12] -4542 -55 124 COM[11] -4542 -113 125 COM[10] -4542 -171 126 COM[9] -4542 -229 127 COM[8] -4542 -287 128 COM[7] -4542 -345 129 COM[6] -4267 <	110	Reserve	-4012	374
113 Reserve -4186 374 114 Reserve -4244 374 115 (NC) -4542 404 116 Reserve -4542 351 117 Reserve -4542 293 118 Reserve -4542 235 119 Reserve -4542 177 120 COM[15] -4542 119 121 COM[14] -4542 61 122 COM[13] -4542 3 123 COM[12] -4542 -55 124 COM[11] -4542 -113 125 COM[10] -4542 -171 126 COM[9] -4542 -229 127 COM[8] -4542 -287 128 COM[7] -4542 -345 129 COM[6] -4267 -374 130 COM[5] -4209 -374 131 COM[6] -4267 <	111	Reserve	-4070	374
114 Reserve -4244 374 115 (NC) -4542 404 116 Reserve -4542 351 117 Reserve -4542 293 118 Reserve -4542 235 119 Reserve -4542 177 120 COM[15] -4542 119 121 COM[14] -4542 61 122 COM[13] -4542 3 123 COM[12] -4542 -55 124 COM[12] -4542 -55 124 COM[10] -4542 -113 125 COM[10] -4542 -171 126 COM[9] -4542 -229 127 COM[8] -4542 -287 128 COM[7] -4542 -345 129 COM[6] -4267 -374 130 COM[5] -4209 -374 131 COM[6] -4151 <	112	Reserve		
114 Reserve -4244 374 115 (NC) -4542 404 116 Reserve -4542 351 117 Reserve -4542 293 118 Reserve -4542 235 119 Reserve -4542 177 120 COM[15] -4542 119 121 COM[14] -4542 61 122 COM[13] -4542 3 123 COM[12] -4542 -55 124 COM[12] -4542 -55 124 COM[10] -4542 -113 125 COM[10] -4542 -171 126 COM[9] -4542 -229 127 COM[8] -4542 -287 128 COM[7] -4542 -345 129 COM[6] -4267 -374 130 COM[5] -4209 -374 131 COM[6] -4151 <	113	Reserve	-4186	374
115 (NC) -4542 404 116 Reserve -4542 351 117 Reserve -4542 293 118 Reserve -4542 235 119 Reserve -4542 177 120 COM[15] -4542 119 121 COM[14] -4542 61 122 COM[13] -4542 3 123 COM[12] -4542 -55 124 COM[11] -4542 -113 125 COM[10] -4542 -171 126 COM[9] -4542 -229 127 COM[8] -4542 -287 128 COM[7] -4542 -345 129 COM[6] -4267 -374 130 COM[5] -4209 -374 131 COM[4] -4151 -374 132 COM[3] -4093 -374 134 COM[1] -3977 <		Reserve		
117 Reserve -4542 293 118 Reserve -4542 235 119 Reserve -4542 177 120 COM[15] -4542 119 121 COM[14] -4542 61 122 COM[13] -4542 3 123 COM[12] -4542 -55 124 COM[11] -4542 -113 125 COM[10] -4542 -171 126 COM[9] -4542 -229 127 COM[8] -4542 -287 128 COM[7] -4542 -345 129 COM[6] -4267 -374 130 COM[5] -4209 -374 131 COM[4] -4151 -374 132 COM[3] -4093 -374 133 COM[2] -4035 -374 134 COM[0] -3919 -374 135 COM[0] -3919	-	(NC)	-4542	
117 Reserve -4542 293 118 Reserve -4542 235 119 Reserve -4542 177 120 COM[15] -4542 119 121 COM[14] -4542 61 122 COM[13] -4542 3 123 COM[12] -4542 -55 124 COM[11] -4542 -113 125 COM[10] -4542 -171 126 COM[9] -4542 -229 127 COM[8] -4542 -287 128 COM[7] -4542 -345 129 COM[6] -4267 -374 130 COM[5] -4209 -374 131 COM[4] -4151 -374 132 COM[3] -4093 -374 133 COM[2] -4035 -374 134 COM[0] -3919 -374 135 COM[0] -3919		. ,		
118 Reserve -4542 235 119 Reserve -4542 177 120 COM[15] -4542 119 121 COM[14] -4542 61 122 COM[13] -4542 3 123 COM[12] -4542 -55 124 COM[11] -4542 -113 125 COM[10] -4542 -171 126 COM[9] -4542 -229 127 COM[8] -4542 -287 128 COM[7] -4542 -345 129 COM[6] -4267 -374 130 COM[5] -4209 -374 131 COM[4] -4151 -374 132 COM[3] -4093 -374 133 COM[2] -4035 -374 134 COM[0] -3919 -374 135 COM[0] -3919 -374			-4542	
119 Reserve -4542 177 120 COM[15] -4542 119 121 COM[14] -4542 61 122 COM[13] -4542 3 123 COM[12] -4542 -55 124 COM[11] -4542 -113 125 COM[10] -4542 -171 126 COM[9] -4542 -229 127 COM[8] -4542 -287 128 COM[7] -4542 -345 129 COM[6] -4267 -374 130 COM[6] -4267 -374 131 COM[4] -4151 -374 132 COM[3] -4093 -374 133 COM[2] -4035 -374 134 COM[1] -3977 -374 135 COM[0] -3919 -374			-4542	
120 COM[15] -4542 119 121 COM[14] -4542 61 122 COM[13] -4542 3 123 COM[12] -4542 -55 124 COM[11] -4542 -113 125 COM[10] -4542 -171 126 COM[9] -4542 -229 127 COM[8] -4542 -287 128 COM[7] -4542 -345 129 COM[6] -4267 -374 130 COM[5] -4209 -374 131 COM[4] -4151 -374 132 COM[3] -4093 -374 133 COM[2] -4035 -374 134 COM[1] -3977 -374 135 COM[0] -3919 -374	119		-4542	
121 COM[14] -4542 61 122 COM[13] -4542 3 123 COM[12] -4542 -55 124 COM[11] -4542 -113 125 COM[10] -4542 -171 126 COM[9] -4542 -229 127 COM[8] -4542 -287 128 COM[7] -4542 -345 129 COM[6] -4267 -374 130 COM[5] -4209 -374 131 COM[4] -4151 -374 132 COM[3] -4093 -374 133 COM[2] -4035 -374 134 COM[1] -3977 -374 135 COM[0] -3919 -374	120		-4542	
123 COM[12] -4542 -55 124 COM[11] -4542 -113 125 COM[10] -4542 -171 126 COM[9] -4542 -229 127 COM[8] -4542 -287 128 COM[7] -4542 -345 129 COM[6] -4267 -374 130 COM[5] -4209 -374 131 COM[4] -4151 -374 132 COM[3] -4093 -374 133 COM[2] -4035 -374 134 COM[1] -3977 -374 135 COM[0] -3919 -374			-4542	61
124 COM[11] -4542 -113 125 COM[10] -4542 -171 126 COM[9] -4542 -229 127 COM[8] -4542 -287 128 COM[7] -4542 -345 129 COM[6] -4267 -374 130 COM[5] -4209 -374 131 COM[4] -4151 -374 132 COM[3] -4093 -374 133 COM[2] -4035 -374 134 COM[1] -3977 -374 135 COM[0] -3919 -374	122	COM[13]	-4542	3
124 COM[11] -4542 -113 125 COM[10] -4542 -171 126 COM[9] -4542 -229 127 COM[8] -4542 -287 128 COM[7] -4542 -345 129 COM[6] -4267 -374 130 COM[5] -4209 -374 131 COM[4] -4151 -374 132 COM[3] -4093 -374 133 COM[2] -4035 -374 134 COM[1] -3977 -374 135 COM[0] -3919 -374	123	COM[12]	-4542	-55
126 COM[9] -4542 -229 127 COM[8] -4542 -287 128 COM[7] -4542 -345 129 COM[6] -4267 -374 130 COM[5] -4209 -374 131 COM[4] -4151 -374 132 COM[3] -4093 -374 133 COM[2] -4035 -374 134 COM[1] -3977 -374 135 COM[0] -3919 -374	124	COM[11]	-4542	-113
127 COM[8] -4542 -287 128 COM[7] -4542 -345 129 COM[6] -4267 -374 130 COM[5] -4209 -374 131 COM[4] -4151 -374 132 COM[3] -4093 -374 133 COM[2] -4035 -374 134 COM[1] -3977 -374 135 COM[0] -3919 -374	125	COM[10]	-4542	-171
127 COM[8] -4542 -287 128 COM[7] -4542 -345 129 COM[6] -4267 -374 130 COM[5] -4209 -374 131 COM[4] -4151 -374 132 COM[3] -4093 -374 133 COM[2] -4035 -374 134 COM[1] -3977 -374 135 COM[0] -3919 -374	126	COM[9]	-4542	-229
129 COM[6] -4267 -374 130 COM[5] -4209 -374 131 COM[4] -4151 -374 132 COM[3] -4093 -374 133 COM[2] -4035 -374 134 COM[1] -3977 -374 135 COM[0] -3919 -374	127		-4542	-287
129 COM[6] -4267 -374 130 COM[5] -4209 -374 131 COM[4] -4151 -374 132 COM[3] -4093 -374 133 COM[2] -4035 -374 134 COM[1] -3977 -374 135 COM[0] -3919 -374	128	COM[7]	-4542	-345
131 COM[4] -4151 -374 132 COM[3] -4093 -374 133 COM[2] -4035 -374 134 COM[1] -3977 -374 135 COM[0] -3919 -374	129		-4267	-374
132 COM[3] -4093 -374 133 COM[2] -4035 -374 134 COM[1] -3977 -374 135 COM[0] -3919 -374	130	COM[5]	-4209	-374
133 COM[2] -4035 -374 134 COM[1] -3977 -374 135 COM[0] -3919 -374	131		-4151	-374
134 COM[1] -3977 -374 135 COM[0] -3919 -374	132	COM[3]	-4093	-374
135 COM[0] -3919 -374	133	COM[2]	-4035	-374
	134	COM[1]	-3977	-374
1 T	135	COM[0]	-3919	-374
136 COMS2 -3861 -374	136	COMS2	-3861	-374
137 SEG[0] -3803 -374	137	SEG[0]	-3803	-374
138 SEG[1] -3745 -374	138	SEG[1]	-3745	-374
139 SEG[2] -3687 -374	139	SEG[2]	-3687	-374
140 SEG[3] -3629 -374	140	SEG[3]	-3629	-374
141 SEG[4] -3571 -374	141	SEG[4]	-3571	-374
142 SEG[5] -3513 -374	142	SEG[5]	-3513	-374
143 SEG[6] -3455 -374	143	SEG[6]	-3455	-374
144 SEG[7] -3397 -374	144	SEG[7]	-3397	-374
145 SEG[8] -3339 -374	145	SEG[8]	-3339	-374
146 SEG[9] -3281 -374	146	SEG[9]	-3281	-374

PAD No.	PIN Name	X	Υ
147	SEG[10]	-3223	-374
148	SEG[11]	-3165	-374
149	SEG[12]	-3107	-374
150	SEG[13]	-3049	-374
151	SEG[14]	-2991	-374
152	SEG[15]	-2933	-374
153	SEG[16]	-2875	-374
154	SEG[17]	-2817	-374
155	SEG[18]	-2759	-374
156	SEG[19]	-2701	-374
157	SEG[20]	-2643	-374
158	SEG[21]	-2585	-374
159	SEG[22]	-2527	-374
160	SEG[23]	-2469	-374
161	SEG[24]	-2411	-374
162	SEG[25]	-2353	-374
163	SEG[26]	-2295	-374
164	SEG[27]	-2237	-374
165	SEG[28]	-2179	-374
166	SEG[29]	-2121	-374
167	SEG[30]	-2063	-374
168	SEG[31]	-2005	-374
169	SEG[32]	-1947	-374
170	SEG[33]	-1889	-374
171	SEG[34]	-1831	-374
172	SEG[35]	-1773	-374
173	SEG[36]	-1715	-374
174	SEG[37]	-1657	-374
175	SEG[38]	-1599	-374
176	SEG[39]	-1541	-374
177	SEG[40]	-1483	-374
178	SEG[41]	-1425	-374
179	SEG[42]	-1367	-374
180	SEG[43]	-1309	-374
181	SEG[44]	-1251	-374
182	SEG[45]	-1193	-374
183	SEG[46]	-1135	-374
184	SEG[47]	-1077	-374
185	SEG[48]	-1019	-374
186	SEG[49]	-961	-374
187	SEG[50]	-903	-374
188	SEG[51]	-845	-374
189	SEG[51]	-787	-374
190	SEG[52]	-729	-374
191	SEG[54]	-671	-374
192	SEG[55]	-613	-374
193	SEG[55]	-555	-374
193	SEG[56]	-497	-374
194	SEG[57] SEG[58]	-497	-374
	SEG[56] SEG[59]	- 4 39 -381	-374
196 197		-381	-374
197	SEG[60]		-374
190	SEG[61]	-265	-3/4

PAD	PIN Name	Х	Υ
No. 199	SEG[62]	-207	-374
200	SEG[63]	-149	-374
201	SEG[64]	-91	-374
202	SEG[65]	-33	-374
202	SEG[66]	25	-374
203	SEG[67]	83	-374
205	SEG[68]	141	-374
206		199	-374
207	SEG[69]	257	-374
208	SEG[70]	315	-374
	SEG[71]	+	
209	SEG[72]	373	-374
210	SEG[73]	431	-374
211	SEG[74]	489	-374
212	SEG[75]	547	-374
213	SEG[76]	605	-374
214	SEG[77]	663	-374
215	SEG[78]	721	-374
216	SEG[79]	779	-374
217	SEG[80]	837	-374
218	SEG[81]	895	-374
219	SEG[82]	953	-374
220	SEG[83]	1011	-374
221	SEG[84]	1069	-374
222	SEG[85]	1127	-374
223	SEG[86]	1185	-374
224	SEG[87]	1243	-374
225	SEG[88]	1301	-374
226	SEG[89]	1359	-374
227	SEG[90]	1417	-374
228	SEG[91]	1475	-374
229	SEG[92]	1533	-374
230	SEG[93]	1591	-374
231	SEG[94]	1649	-374
232	SEG[95]	1707	-374
233	SEG[96]	1765	-374
234	SEG[97]	1823	-374
235	SEG[98]	1881	-374
236	SEG[99]	1939	-374
237	SEG[100]	1997	-374
238	SEG[101]	2055	-374
239	SEG[102]	2113	-374
240	SEG[103]	2171	-374
241	SEG[104]	2229	-374
242	SEG[105]	2287	-374
243	SEG[106]	2345	-374
244	SEG[107]	2403	-374
245	SEG[108]	2461	-374

PAD No.	PIN Name	Х	Y
246	SEG[109]	2519	-374
247	SEG[110]	2577	-374
248	SEG[111]	2635	-374
249	SEG[112]	2693	-374
250	SEG[113]	2751	-374
251	SEG[114]	2809	-374
252	SEG[115]	2867	-374
253	SEG[116]	2925	-374
254	SEG[117]	2983	-374
255	SEG[118]	3041	-374
256	SEG[119]	3099	-374
257	SEG[120]	3157	-374
258	SEG[121]	3215	-374
259	SEG[122]	3273	-374
260	SEG[123]	3331	-374
261	SEG[124]	3389	-374
262	SEG[125]	3447	-374
263	SEG[126]	3505	-374
264	SEG[127]	3563	-374
265	SEG[128]	3621	-374
266	SEG[129]	3679	-374
267	SEG[130]	3737	-374
268	SEG[131]	3795	-374
269	Reserve	3853	-374
270	Reserve	3911	-374
271	Reserve	3969	-374
272	Reserve	4027	-374
273	Reserve	4085	-374
274	Reserve	4143	-374
275	Reserve	4201	-374
276	Reserve	4259	-374
277	Reserve	4542	-345
278	Reserve	4542	-287
279	Reserve	4542	-229
280	Reserve	4542	-171
281	Reserve	4542	-113
282	Reserve	4542	-55
283	Reserve	4542	3
284	Reserve	4542	61
285	COM[16]	4542	119
286	COM[17]	4542	177
287	COM[18]	4542	235
288	COM[19]	4542	293
289	COM[20]	4542	351
290	(NC)	4542	404

Pad Center Coordinates (1/55 Duty)

PAD No.	PIN Name	Х	Y
1	COM[43]	4241	374
2	COM[44]	4183	374
3	COM[45]	4125	374
4	COM[46]	4067	374
5	COM[47]	4009	374
6	COM[48]	3951	374
7	COM[49]	3893	374
8	COM[50]	3835	374
9	COM[51]	3777	374
10	COM[52]	3719	374
11	COM[53]	3661	374
12	COMS1	3603	374
13	FRS	3443	389
14	FR	3369	389
15	CL	3295	389
16	/DOF	3221	389
17	VSS	3147	389
18	/CS1	3073	389
19	CS2	2999	389
20	VDD	2925	389
21	/RES	2851	389
22	A0	2777	389
23	VSS	2703	389
24	/WR(R/W)	2629	389
25	/RD(E)	2555	389
26	VDD	2481	389
27	D0	2407	389
28	D1	2333	389
29	D2	2259	389
30	D3	2185	389
31	D4	2111	389
32	D5	2037	389
33	D6	1963	389
34	D7	1889	389
35	VDD	1815	389
36	VDD2	1741	389
37	VDD2	1667	389
38	VSS	1593	389
39	VSS	1519	389
40	VSS	1445	389
41	VSS	1371	389
42	VOUT	1297	389
43	VOUT	1223	389
44	CAP5P	1149	389
45	CAP5P	1075	389
46	CAP1N	1001	389
47	CAP1N	927	389
		II.	

			Units: µm
PAD	PIN Name	Х	Υ
No.			-
48	CAP3P	853	389
49	CAP3P	779	389
50	CAP1N	705	389
51	CAP1N	631	389
52	CAP1P	557	389
53	CAP1P	483	389
54	CAP2P	409	389
55	CAP2P	335	389
56	CAP2N	261	389
57	CAP2N	187	389
58	CAP4P	113	389
59	CAP4P	39	389
60	VSS	-35	389
61	VSS	-109	389
62	VRS	-183	389
63	VRS	-257	389
64	VDD2	-331	389
65	VDD	-405	389
66	V4	-479	389
67	V4	-553	389
68	V3	-627	389
69	V3	-701	389
70	V2	-775	389
71	V2	-849	389
72	V1	-923	389
73	V1	-997	389
74	V0	-1071	389
75	VO	-1145	389
76	VR	-1219	389
77	VR	-1213	389
78	VDD	-1367	389
79	VDD2	-1441	389
80	TEST0	-1515	389
81	TEST1	-1515	389
82	TEST2	-1663	389
—			
83 84	TEST3 TEST4	-1737 -1811	389
			389
85	TEST5	-1885 -1050	389
86	VDD M/S	-1959	389
87		-2033	389
88	CLS	-2107	389
89	VSS	-2181	389
90	C86	-2255	389
91	P/S	-2329	389
92	VDD	-2403	389
93	/HPM	-2477	389
94	VSS	-2551	389

PAD	DINI NI		
No.	PIN Name	Х	Y
95	IRS	-2625	389
96	VDD	-2699	389
97	SEL1	-2773	389
98	VSS	-2847	389
99	SEL2	-2921	389
100	VDD	-2995	389
101	SEL3	-3069	389
102	VSS	-3143	389
103	Reserve	-3606	374
104	Reserve	-3664	374
105	Reserve	-3722	374
106	Reserve	-3780	374
107	Reserve	-3838	374
108	COM[26]	-3896	374
109	COM[25]	-3954	374
110	COM[24]	-4012	374
111	COM[23]	-4070	374
112	COM[22]	-4128	374
113	COM[21]	-4186	374
114	COM[20]	-4244	374
115	(NC)	-4542	404
116	COM[19]	-4542	351
117	COM[18]	-4542	293
118	COM[17]	-4542	235
119	COM[16]	-4542	177
120	COM[15]	-4542	119
121	COM[14]	-4542	61
122	COM[13]	-4542	3
123	COM[12]	-4542	-55
124	COM[11]	-4542	-113
125	COM[10]	-4542	-171
126	COM[9]	-4542	-229
127	COM[8]	-4542	-287
128	COM[7]	-4542	-345
129	COM[6]	-4267	-374
130	COM[5]	-4209	-374
131	COM[4]	-4151	-374
132	COM[3]	-4093	-374
133	COM[2]	-4035	-374
134	COM[1]	-3977	-374
135	COM[0]	-3919	-374
136	COMS2	-3861	-374
137	SEG[0]	-3803	-374
138	SEG[1]	-3745	-374
139	SEG[2]	-3687	-374
140	SEG[3]	-3629	-374
141	SEG[4]	-3571	-374
142	SEG[5]	-3513	-374
143	SEG[6]	-3455	-374
144	SEG[7]	-3397	-374
145	SEG[8]	-3339	-374
146	SEG[9]	-3281	-374

PAD No.	PIN Name	X	Υ
147	SEG[10]	-3223	-374
148	SEG[11]	-3165	-374
149	SEG[12]	-3107	-374
150	SEG[13]	-3049	-374
151	SEG[14]	-2991	-374
152	SEG[15]	-2933	-374
153	SEG[16]	-2875	-374
154	SEG[17]	-2817	-374
155	SEG[18]	-2759	-374
156	SEG[19]	-2701	-374
157	SEG[20]	-2643	-374
158	SEG[21]	-2585	-374
159	SEG[22]	-2527	-374
160	SEG[23]	-2469	-374
161	SEG[24]	-2411	-374
162	SEG[25]	-2353	-374
163	SEG[26]	-2295	-374
164	SEG[27]	-2237	-374
165	SEG[28]	-2179	-374
166	SEG[29]	-2121	-374
167	SEG[30]	-2063	-374
168	SEG[31]	-2005	-374
169	SEG[32]	-1947	-374
170	SEG[33]	-1889	-374
171	SEG[34]	-1831	-374
172	SEG[35]	-1773	-374
173	SEG[36]	-1715	-374
174	SEG[37]	-1657	-374
175	SEG[38]	-1599	-374
176	SEG[39]	-1541	-374
177	SEG[40]	-1483	-374
178	SEG[41]	-1425	-374
179	SEG[42]	-1367	-374
180	SEG[43]	-1309	-374
181	SEG[44]	-1251	-374
182	SEG[45]	-1193	-374
183	SEG[46]	-1135	-374
184	SEG[47]	-1077	-374
185	SEG[48]	-1019	-374
186	SEG[49]	-961	-374
187	SEG[50]	-903	-374
188	SEG[51]	-845	-374
189	SEG[51]	-787	-374
190	SEG[52]	-729	-374
191	SEG[54]	-671	-374
192	SEG[55]	-613	-374
193	SEG[55]	-555	-374
193	SEG[56]	-497	-374
194	SEG[57] SEG[58]	-497	-374
	SEG[56] SEG[59]	- 4 39 -381	-374
196 197		-381	-374
197	SEG[60]		-374
190	SEG[61]	-265	-3/4

PAD	PIN Name	Х	Υ
No. 199	SEG[62]	-207	-374
200	SEG[63]	-149	-374
201	SEG[64]	-91	-374
202	SEG[65]	-33	-374
202	SEG[66]	25	-374
203	SEG[67]	83	-374
205	SEG[68]	141	-374
206		199	-374
207	SEG[69]	257	-374
208	SEG[70]	315	-374
	SEG[71]	+	
209	SEG[72]	373	-374
210	SEG[73]	431	-374
211	SEG[74]	489	-374
212	SEG[75]	547	-374
213	SEG[76]	605	-374
214	SEG[77]	663	-374
215	SEG[78]	721	-374
216	SEG[79]	779	-374
217	SEG[80]	837	-374
218	SEG[81]	895	-374
219	SEG[82]	953	-374
220	SEG[83]	1011	-374
221	SEG[84]	1069	-374
222	SEG[85]	1127	-374
223	SEG[86]	1185	-374
224	SEG[87]	1243	-374
225	SEG[88]	1301	-374
226	SEG[89]	1359	-374
227	SEG[90]	1417	-374
228	SEG[91]	1475	-374
229	SEG[92]	1533	-374
230	SEG[93]	1591	-374
231	SEG[94]	1649	-374
232	SEG[95]	1707	-374
233	SEG[96]	1765	-374
234	SEG[97]	1823	-374
235	SEG[98]	1881	-374
236	SEG[99]	1939	-374
237	SEG[100]	1997	-374
238	SEG[101]	2055	-374
239	SEG[102]	2113	-374
240	SEG[103]	2171	-374
241	SEG[104]	2229	-374
242	SEG[105]	2287	-374
243	SEG[106]	2345	-374
244	SEG[107]	2403	-374
245	SEG[108]	2461	-374

PAD No.	PIN Name	Х	Υ
246	SEG[109]	2519	-374
247	SEG[110]	2577	-374
248	SEG[111]	2635	-374
249	SEG[112]	2693	-374
250	SEG[113]	2751	-374
251	SEG[114]	2809	-374
252	SEG[115]	2867	-374
253	SEG[116]	2925	-374
254	SEG[117]	2983	-374
255	SEG[118]	3041	-374
256	SEG[119]	3099	-374
257	SEG[120]	3157	-374
258	SEG[121]	3215	-374
259	SEG[122]	3273	-374
260	SEG[123]	3331	-374
261	SEG[124]	3389	-374
262	SEG[125]	3447	-374
263	SEG[126]	3505	-374
264	SEG[127]	3563	-374
265	SEG[128]	3621	-374
266	SEG[129]	3679	-374
267	SEG[130]	3737	-374
268	SEG[131]	3795	-374
269	Reserve	3853	-374
270	Reserve	3911	-374
271	Reserve	3969	-374
272	Reserve	4027	-374
273	Reserve	4085	-374
274	COM[27]	4143	-374
275	COM[28]	4201	-374
276	COM[29]	4259	-374
277	COM[30]	4542	-345
278	COM[31]	4542	-287
279	COM[32]	4542	-229
280	COM[33]	4542	-171
281	COM[34]	4542	-113
282	COM[35]	4542	-55
283	COM[36]	4542	3
284	COM[37]	4542	61
285	COM[38]	4542	119
286	COM[39]	4542	177
287	COM[40]	4542	235
288	COM[41]	4542	293
289	COM[42]	4542	351
290	(NC)	4542	404

Pad Center Coordinates (1/53 Duty)

PAD No.	PIN Name	Х	Y
1	COM[41]	4241	374
2	COM[42]	4183	374
3	COM[43]	4125	374
4	COM[44]	4067	374
5	COM[45]	4009	374
6	COM[46]	3951	374
7	COM[47]	3893	374
8	COM[48]	3835	374
9	COM[49]	3777	374
10	COM[50]	3719	374
11	COM[51]	3661	374
12	COMS1	3603	374
13	FRS	3443	389
14	FR	3369	389
15	CL	3295	389
16	/DOF	3221	389
17	VSS	3147	389
18	/CS1	3073	389
19	CS2	2999	389
20	VDD	2925	389
21	/RES	2851	389
22	A0	2777	389
23	VSS	2703	389
24	/WR(R/W)	2629	389
25	/RD(E)	2555	389
26	VDD	2481	389
27	D0	2407	389
28	D1	2333	389
29	D2	2259	389
30	D3	2185	389
31	D4	2111	389
32	D5	2037	389
33	D6	1963	389
34	D7	1889	389
35	VDD	1815	389
36	VDD2	1741	389
37	VDD2	1667	389
38	VSS	1593	389
39	VSS	1519	389
40	VSS	1445	389
41	VSS	1371	389
42	VOUT	1297	389
43	VOUT	1223	389
44	CAP5P	1149	389
45	CAP5P	1075	389
46	CAP1N	1001	389
47	CAP1N	927	389

			Units: µm
PAD	PIN Name	X	Υ
No.			-
48	CAP3P	853	389
49	CAP3P	779	389
50	CAP1N	705	389
51	CAP1N	631	389
52	CAP1P	557	389
53	CAP1P	483	389
54	CAP2P	409	389
55	CAP2P	335	389
56	CAP2N	261	389
57	CAP2N	187	389
58	CAP4P	113	389
59	CAP4P	39	389
60	VSS	-35	389
61	VSS	-109	389
62	VRS	-183	389
63	VRS	-257	389
64	VDD2	-331	389
65	VDD	-405	389
66	V4	-479	389
67	V4	-553	389
68	V3	-627	389
69	V3	-701	389
70	V2	-775	389
71	V2	-849	389
72	V1	-923	389
73	V1	-997	389
74	V0	-1071	389
75	V0	-1145	389
76	VR	-1219	389
77	VR	-1293	389
78	VDD	-1367	389
79	VDD2	-1441	389
80	TEST0	-1515	389
81	TEST1	-1589	389
82	TEST2	-1663	389
83	TEST3	-1737	389
84	TEST4	-1811	389
85	TEST5	-1885	389
86	VDD	-1959	389
87	M/S	-2033	389
88	CLS	-2003	389
89	VSS	-2181	389
90	C86	-2255	389
91	P/S	-2329	389
92	VDD	-2329	389
	/HPM	-2403 -2477	
93	VSS		389
94	VSS	-2551	389


PAD	PIN Name	Х	Υ
No.	IDC	2625	389
95	IRS VDD	-2625	
96		-2699	389
97	SEL1	-2773	389
98	VSS	-2847	389
99	SEL2	-2921	389
100	VDD	-2995	389
101	SEL3	-3069	389
102	VSS	-3143	389
103	Reserve	-3606	374
104	Reserve	-3664	374
105	Reserve	-3722	374
106	Reserve	-3780	374
107	Reserve	-3838	374
108	Reserve	-3896	374
109	COM[25]	-3954	374
110	COM[24]	-4012	374
111	COM[23]	-4070	374
112	COM[22]	-4128	374
113	COM[21]	-4186	374
114	COM[20]	-4244	374
115	(NC)	-4542	404
116	COM[19]	-4542	351
117	COM[18]	-4542	293
118	COM[17]	-4542	235
119	COM[16]	-4542	177
120	COM[15]	-4542	119
121	COM[14]	-4542	61
122	COM[13]	-4542	3
123	COM[12]	-4542	-55
124	COM[11]	-4542	-113
125	COM[10]	-4542	-171
126	COM[9]	-4542	-229
127	COM[8]	-4542	-287
128	COM[7]	-4542	-345
129	COM[6]	-4267	-374
130	COM[5]	-4209	-374
131	COM[4]	-4151	-374
132	COM[3]	-4093	-374
133	COM[2]	-4035	-374
134	COM[1]	-3977	-374
135	COM[0]	-3919	-374
136	COMS2	-3861	-374
137	SEG[0]	-3803	-374
138	SEG[1]	-3745	-374
139	SEG[2]	-3687	-374
140	SEG[3]	-3629	-374
141	SEG[4]	-3571	-374
142	SEG[5]	-3513	-374
143	SEG[6]	-3455	-374
144	SEG[7]	-3397	-374
145	SEG[8]	-3339	-374
146	SEG[9]	-3281	-374
	["]		

PAD No.	PIN Name	X	Υ
147	SEG[10]	-3223	-374
148	SEG[11]	-3165	-374
149	SEG[12]	-3107	-374
150	SEG[13]	-3049	-374
151	SEG[14]	-2991	-374
152	SEG[15]	-2933	-374
153	SEG[16]	-2875	-374
154	SEG[17]	-2817	-374
155	SEG[18]	-2759	-374
156	SEG[19]	-2701	-374
157	SEG[20]	-2643	-374
158	SEG[21]	-2585	-374
159	SEG[22]	-2527	-374
160	SEG[23]	-2469	-374
161	SEG[24]	-2411	-374
162	SEG[25]	-2353	-374
163	SEG[26]	-2295	-374
164	SEG[27]	-2237	-374
165	SEG[28]	-2179	-374
166	SEG[29]	-2121	-374
167	SEG[30]	-2063	-374
168	SEG[31]	-2005	-374
169	SEG[32]	-1947	-374
170	SEG[33]	-1889	-374
171	SEG[34]	-1831	-374
172	SEG[35]	-1773	-374
173	SEG[36]	-1715	-374
174	SEG[37]	-1657	-374
175	SEG[38]	-1599	-374
176	SEG[39]	-1541	-374
177	SEG[40]	-1483	-374
178	SEG[41]	-1425	-374
179	SEG[42]	-1367	-374
180	SEG[43]	-1309	-374
181	SEG[44]	-1251	-374
182	SEG[45]	-1193	-374
183	SEG[46]	-1135	-374
184	SEG[47]	-1077	-374
185	SEG[48]	-1017	-374
186	SEG[49]	-961	-374
187	SEG[50]	-903	-374
188	SEG[51]	-845	-374
189	SEG[51]	-787	-374
190	SEG[52]	-729	-374
191	SEG[54]	-671	-374
192	SEG[55]	-613	-374
193	SEG[55]	-555	-374
194	SEG[50]	-497	-374
195	SEG[57]	-439	-374
195	SEG[56] SEG[59]	- 4 39 -381	-374
196	SEG[59] SEG[60]	-323	-374
197	SEG[60] SEG[61]		-374
190	SEG[01]	-265	-314

PAD	PIN Name	Х	Υ
No. 199	SEG[62]	-207	-374
200	SEG[63]	-149	-374
201	SEG[64]	-91	-374
202	SEG[65]	-33	-374
202	SEG[66]	25	-374
203	SEG[67]	83	-374
205	SEG[68]	141	-374
206		199	-374
207	SEG[69]	257	-374
208	SEG[70]	315	-374
	SEG[71]	+	
209	SEG[72]	373	-374
210	SEG[73]	431	-374
211	SEG[74]	489	-374
212	SEG[75]	547	-374
213	SEG[76]	605	-374
214	SEG[77]	663	-374
215	SEG[78]	721	-374
216	SEG[79]	779	-374
217	SEG[80]	837	-374
218	SEG[81]	895	-374
219	SEG[82]	953	-374
220	SEG[83]	1011	-374
221	SEG[84]	1069	-374
222	SEG[85]	1127	-374
223	SEG[86]	1185	-374
224	SEG[87]	1243	-374
225	SEG[88]	1301	-374
226	SEG[89]	1359	-374
227	SEG[90]	1417	-374
228	SEG[91]	1475	-374
229	SEG[92]	1533	-374
230	SEG[93]	1591	-374
231	SEG[94]	1649	-374
232	SEG[95]	1707	-374
233	SEG[96]	1765	-374
234	SEG[97]	1823	-374
235	SEG[98]	1881	-374
236	SEG[99]	1939	-374
237	SEG[100]	1997	-374
238	SEG[101]	2055	-374
239	SEG[102]	2113	-374
240	SEG[103]	2171	-374
241	SEG[104]	2229	-374
242	SEG[105]	2287	-374
243	SEG[106]	2345	-374
244	SEG[107]	2403	-374
245	SEG[108]	2461	-374

PAD No.	PIN Name	X	Υ
246	SEG[109]	2519	-374
247	SEG[110]	2577	-374
248	SEG[111]	2635	-374
249	SEG[112]	2693	-374
250	SEG[113]	2751	-374
251	SEG[114]	2809	-374
252	SEG[115]	2867	-374
253	SEG[116]	2925	-374
254	SEG[117]	2983	-374
255	SEG[118]	3041	-374
256	SEG[119]	3099	-374
257	SEG[120]	3157	-374
258	SEG[121]	3215	-374
259	SEG[122]	3273	-374
260	SEG[123]	3331	-374
261	SEG[124]	3389	-374
262	SEG[125]	3447	-374
263	SEG[126]	3505	-374
264	SEG[127]	3563	-374
265	SEG[128]	3621	-374
266	SEG[129]	3679	-374
267	SEG[130]	3737	-374
268	SEG[131]	3795	-374
269	Reserve	3853	-374
270	Reserve	3911	-374
271	Reserve	3969	-374
272	Reserve	4027	-374
273	Reserve	4085	-374
274	Reserve	4143	-374
275	COM[26]	4201	-374
276	COM[27]	4259	-374
277	COM[28]	4542	-345
278	COM[29]	4542	-287
279	COM[30]	4542	-229
280	COM[31]	4542	-171
281	COM[32]	4542	-113
282	COM[33]	4542	-55
283	COM[34]	4542	3
284	COM[35]	4542	61
285	COM[36]	4542	119
286	COM[37]	4542	177
287	COM[38]	4542	235
288	COM[39]	4542	293
289	COM[40]	4542	351
290	(NC)	4542	404

BLOCK DIAGRAM

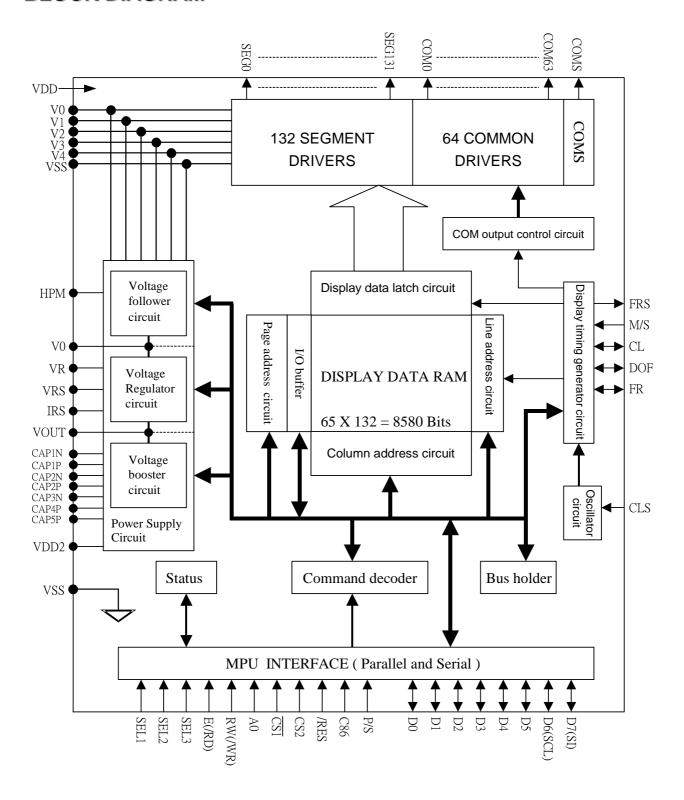

PIN DESCRIPTIONS

Power Supply Pins

Pin Name	I/O	Function	No. of Pins
VDD	Power Supply	Power supply	13
VDD2	Power Supply	Power supply	10
VSS	Power Supply	Ground	2
VRS	Power Supply	This is the internal-output VREG power supply for the LCD power supply voltage regulator.	
V0, V1, V2, V3, V4,Vss	Power Supply	This is a multi-level power supply for the liquid crystal drive. The voltage Supply applied is determined by the liquid crystal cell, and is changed through the use of a resistive voltage divided or through changing the impedance using an op. amp. Voltage levels are determined based on Vss, and must maintain the relative magnitudes shown below. $ V0 \ge V1 \ge V2 \ge V3 \ge V4 \ge Vss $ When the power supply turns ON, the internal power supply circuits produce the V1 to V4 voltages shown below. The voltage settings are selected using the LCD bias set command. $ \hline $	10

LCD Power Supply Pins

Pin Name	I/O	Function	No. of Pins
CAP1P	0	DC/DC voltage converter. Connect a capacitor between this terminal and the CAP1N terminal.	4
CAP1N	0	DC/DC voltage converter. Connect a capacitor between this terminal and the CAP1P terminal.	2
CAP2P	0	DC/DC voltage converter. Connect a capacitor between this terminal and the CAP2N terminal.	2
CAP2N	0	DC/DC voltage converter. Connect a capacitor between this terminal and the CAP2P terminal.	2
CAP3P	0	DC/DC voltage converter. Connect a capacitor between this terminal and the CAP1N terminal.	2
CAP4P	0	DC/DC voltage converter. Connect a capacitor between this terminal and the CAP2N terminal.	2
CAP5P	0	DC/DC voltage converter. Connect a capacitor between this terminal and the CAP1N terminal.	2
VOUT	0	DC/DC voltage converter. Connect a capacitor between this terminal and VSS or VDD	2
VR	I	Output voltage regulator terminal. Provides the voltage between VSS and V0 through a resistive voltage divider. IRS = "L": the V0 voltage regulator internal resistors are not used. IRS = "H": the V0 voltage regulator internal resistors are used.	2

System Bus Connection Pins

	Pin Name	I/O			Fun	ction			No. of Pins	
	D5 to D0 D6 (SCL) D7 (SI)	I/O	MPU data When the D7 : seria D0 to D5 When the	serial interface (SI) data input (SI); should be connected this select is not	SPI-4) is select D6: the serial ted to VDD or active, D0 to	eted (P/S = "L" al clock input of floating. D7 are set to) : (SCL). high impedan	ce.	8	
	RS: 表示 AO	I	determine A0 = "H":	onnect to the least es whether the data Indicates that D0 t Indicates that D0 t	a bits are data to D7 are disp	a or command olay data.		ess bus, and it	1	
	/RES	1		ES is set to "L", the operation is perfo					1	
共同组成片选	/CS1 CS2	ļ		s is the chip select signal. When /CS1 = "L" and CS2 = "H", then the chip select omes active, and data/command I/O is enabled.						
	/RD (E)	When connected to 8080 series MPU, this pin is treated as the "/RD" signal of the 8080 MPU and is LOW-active. The data bus is in an output status when this signal is "L". When connected to 6800 series MPU, this pin is treated as the "E" signal of the 6800 MPU and is HIGH-active. This is the enable clock input terminal of the 6800 Series MPU.								
	/WR (R/W)	ı	• When co 8080 MPI The signa • When co 6800 MPI When R/V	When connected to 8080 series MPU, this pin is treated as the "/WR" signal of the 80 MPU and is LOW-active. e signals on the data bus are latched at the rising edge of the /WR signal. When connected to 6800 series MPU, this pin is treated as the "R/W" signal of the 00 MPU and decides the access type: hen R/W = "H": Read. hen R/W = "L": Write.						
	C86	I	C86 = "H' C86 = "L"	e MPU interface se ': 6800 Series MPU : 8080 Series MPU	J interface. J interface.				1	
	P/S	ı	This pin c P/S = "H". P/S = "L": The follov P/S "H" "L" When P/S /RD (E) a	"H" A0 D0 to D7 /RD, /WR X						

Ver 2.1b 20/71 2009/09/14

Pin Name	I/O			Func	tion			No. of Pins		
CLS	I	Selection pin to er CLS = "H" : use in CLS = "L" : use e: When CLS = "L", i	ternal oscillato xternal clock ir	or circuit . nput (interr	nal oscillat	or is disab	led).	1		
M/S	I	Master operation while slave operat That synchronized M/S = "H" Master M/S = "L" Slave op	is terminal selects the master/slave operation for the ST7565P Series chips. Inster operation outputs the timing signals that are required for the LCD display, so that are required for the LCD display, so the slave operation input the timing signals required for the liquid crystal display. The supply of the liquid crystal display system between Master and Slave. See "H" Master operation See "L" Slave operation Oscillator Power Supply CL FR DOF							
		"L" Enabl	Circuit	Output	Output	Output				
		"H" "L" Disab	ed Enabled	Input	Output	Output				
			ed Disabled Disabled	Input Input	Input Input	Input Input				
CL	I/O	"H" "H" O			and CLS	status.		1		
		"L" I	nput							
FR /DOF	0	This is the liquid c			signal ter	minal.		1		
FRS	0	This is the LCD black	anking control	terminai.				1		
IRS	ı	This terminal selecting in the served IRS = "H": Use the IRS = "L": Do not use gulated by an expension of the served in the serv	internal resisuse the interna	tors al resistors	s. The V0 v	oltage leve	el is	1		
/HPM	Ι	This is the power of /HPM = "H": Norm /HPM = "L": High p	control termina al mode power mode	al for the p			or liquid crystal drive.	1		
		These pins are D	UTY selection DUTY		BIAS	7				
		SEL 3, 2, 1 0, 0, 0	1/65		or 1/7					
OEL 2		0,0,1	1/49		3 or 1/6					
SEL3 SEL2	1	0,1,0	1/33		or 1/5			3		
SEL1	'	0,1,1	1/55		3 or 1/6	_				
		1,0,0	1/53		3 or 1/6					
		1, X,X								
TEST0 ~ 5	I	These are termina They are set to op		ıg.				6		

LCD Driver Pins

Pin Name	I/O			Fund	ction		No. of Pins		
		These are the LCD segment drive outputs. Through a combination of the contents of the display RAM and with the FR signal, a single level is selected from Vss, V3, V2 and V0.							
		RAM DATA	FR	Output	Output Voltage				
SEG0		KAWI DATA	FK	Normal Display	Reverse Display				
to	0	Н	Н	V0	V2		132		
SEG131		Н	H L Vss V3						
		L	Н	V2	V0				
		L	L	V3	Vss	Vss			
		Power save		V	'ss				
				on of the contents o		with the FR signal, a			
		Scan Data	FR	Output Voltage					
COM0		Н	Н	Vss					
to COMn	0	Н	L	Vo			67		
COMIT		L	Н	V1					
		L	L	V4					
		Power save		Vss					
COMS	0	signal.	hese are the COM output terminals for the indicator. Both terminals output the same ignal. eave these open if they are not used.						

ST7565P I/O PIN ITO Resister Limitation

PIN Name	ITO Resister
TEST05	Floating
V _{DD} , V _{DD2} , V _{SS} , V _{OUT} , VR, VRS	<100Ω
V0, V1, V2, V3, V4, CAP1P, CAP1N, CAP2P, CAP2N, CAP3P, CAP4P, CAP5P	<500Ω
/CS1, CS2, CL, E, R/W, A0, D0D7,	<1ΚΩ
FR, /DOF, C86, P/S, M/S, /HPM,SEL1SEL3, CLS, IRS	<5ΚΩ
/RES	<10ΚΩ

DESCRIPTION OF FUNCTIONS

The MPU Interface

Selecting the Interface Type

With the ST7565P chips, data transfers are done through an 8-bit parallel data bus (D7 to D0) or through a serial data input (SI). By setting the P/S terminal to "H" or "L", it sets the

access mode to be either parallel or serial mode as shown in Table 1.

Table 1

P/S	/CS1	CS2	Α0	/RD	/WR	C86	D7	D6	D5~D0
H: Parallel mode	/CS1	CS2	A0	/RD	/WR	C86	D7	D6	D5~D0
L: Serial mode	/CS1	CS2	A0	_	_	_	SI	SCL	(HZ)

[&]quot;—" indicates fixed to either "H" or to "L"

The Parallel Interface 并行

When the parallel interface has been selected (P/S ="H"), the interface can be connected directly to either 8080 or

6800 Series MPU (as shown in Table 2) by setting the C86 terminal to either "H" or "L".

Table 2

C86 (P/S=H)	/CS1	CS2	Α0	E(/RD)	R/W(/WR)	D7~D0
H: 6800 Series	/CS1	CS2	A0	Е	R/W	D7~D0
L: 8080 Series	/CS1	CS2	A0	/RD	/WR	D7~D0

Moreover, data bus signals are recognized according to the combination of A0, /RD (E), /WR (R/W) signals.

The functions are shown as below in Table 3.

Table 3

Shared	6800 Series	8080	Series	Function		
A0	R/W	/RD /WR		T unction		
1	1	0	1	Reads the display data		
1	0	1	0	Writes the display data		
0	1	0	1	Status read		
0	0	1	0	Write control data (command)		

The Serial Interface ^{串行}

When the serial interface has been selected (P/S = "L") then when the chip is in active state (/CS1 = "L" and CS2 = "H") the serial data input (SI) and the serial clock input (SCL) can be received. The serial data is read from the serial data input pin in the rising edge of the serial clocks D7, D6 through D0, in this order. This data is converted to 8 bits parallel data in the rising edge of the eighth serial clock for the processing.

The A0 input is used to determine whether or the serial data input is display data or command data; when A0 = "H", the data is display data, and when A0 = "L" then the data is command data. The A0 input is read and used for detection every 8th rising edge of the serial clock after the chip becomes active. Figure 1 is a serial interface signal chart.

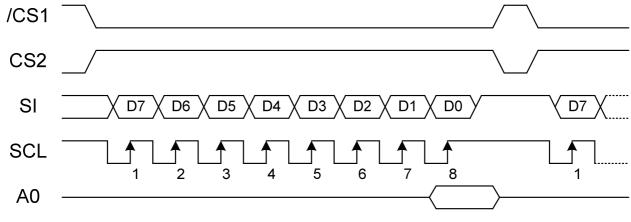


Figure 1

- * When the chip is not active, the shift registers and the counter are reset to their initial states.
- * Reading is not possible while in serial interface mode.
- * Caution is required on the SCL signal when it comes to line-end reflections and external noise. We recommend that operation be rechecked on the actual equipment.

The Chip Select ^{片选}

The ST7565P have two chip select terminals: /CS1 and CS2. The MPU interface or the serial interface is enabled only when /CS1 = "L" and CS2 = "H".

When the chip select is inactive, D0 to D7 enter a high impedance state, and the A0, /RD, and /WR inputs are inactive. When the serial interface is selected, the shift register and the counter are reset.

The Accessing the Display Data RAM and the Internal Registers

Data transfer at a higher speed is ensured since the MPU is required to satisfy the cycle time (tCYC) requirement alone in accessing the ST7565P. Wait time may not be considered. And, in the ST7565P, each time data is sent from the MPU, a type of pipeline process between LSIs is performed through the bus holder attached to the internal data bus. Internal data bus.

For example, when the MPU writes data to the display data RAM, once the data is stored in the bus holder, then it is written to the display data RAM before the next data write cycle. Moreover, when the MPU reads the display data RAM,

the first data read cycle (dummy) stores the read data in the bus holder, and then the data is read from the bus holder to the system bus at the next data read cycle.


There is a certain restriction in the read sequence of the display data RAM. Please be advised that data of the specified address is not generated by the read instruction issued immediately after the address setup. This data is generated in data read of the second time. Thus, a dummy read is required whenever the address setup or write cycle operation is conducted.


This relationship is shown in Figure 2.

The Busy Flag

When the busy flag is "1" it indicates that the ST7565P is running internal processes, and at this time no command aside from a status read will be received. The busy flag is outputted to D7 pin with the read instruction. If the cycle time

(tCYC) is maintained, it is not necessary to check for this flag before each command. This makes vast improvements in MPU processing capabilities possible.

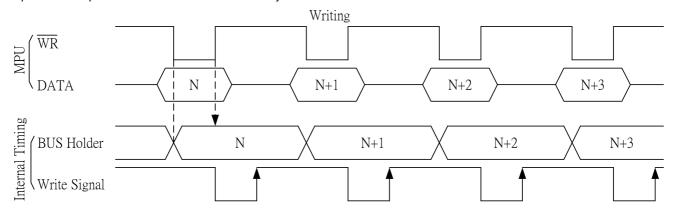

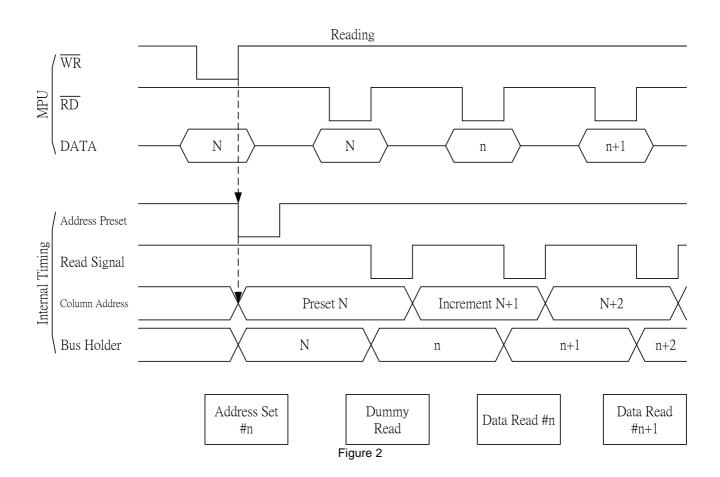


Display Data RAM

The display data RAM stores the dot data for the LCD. It has a 65 (8 page x 8 bit +1) x 132 bit structure. As is shown in Figure 3, the D7 to D0 display data from the MPU corresponds to the LCD display common direction; there are few constraints at the time of display data transfer when multiple ST7565P are used, thus and display structures can be created easily and with a high degree of freedom.

Display data RAM

Moreover, reading from and writing to the display RAM from the MPU side is performed through the I/O buffer, which is an independent operation from signal reading for the liquid crystal driver. Consequently, even if the display data RAM is accessed asynchronously during liquid crystal display, it will not cause adverse effects on the display (such as flickering).

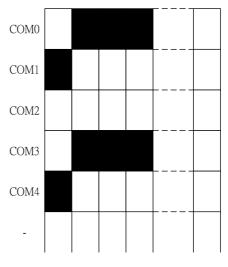

Liquid crystal display

Figure 3

The Page Address Circuit 页地址

Page address of the display data RAM is specified through the Page Address Set Command. The page address must be specified again when changing pages to perform access. Page address 8 (D3, D2, D1, D0 = 1, 0, 0, 0) is a special RAM for icons, and only display data D0 is used (refer to Figure 4)

The Column Addresses 列地址

The display data RAM column address is specified by the Column Address Set command. The specified column address is incremented (+1) with each display data read/write command. This allows the MPU display data to be accessed continuously. Moreover, the incrementing of column addresses stops with 83H. Because the column address is independent of the page address, when moving, for example, from page 0 column 83H to page 1 column 00H,

it is necessary to respective both the page address and the column address.

Furthermore, as is shown in Table 4, the ADC command (segment driver direction select command) can be used to reverse the relationship between the display data RAM column address and the segment output. Because of this, the constraints on the IC layout when the LCD module is assembled can be minimized. As is shown in Figure 4.


Table 4

SEG Output ADC	SEG0	SEG 131
(D0) "0"	0 (H) → Column Address	→ 83 (H)
(D0) "1"	83 (H) ← Column Address	← 0 (H)

The Line Address Circuit 行地址

The line address circuit, as shown in Table 4, specifies the line address relating to the COM output when the contents of the display data RAM are displayed. Using the display start line address set command, what is normally the top line of the display can be specified (this is the COM0 output when the common output mode is normal, and the COM63 output

for ST7565P, the detail is shown page.11 The display area is a 65 line area for the ST7565P. If the line addresses are changed dynamically using the display start line address set command, screen scrolling, page swapping, etc. can be performed.

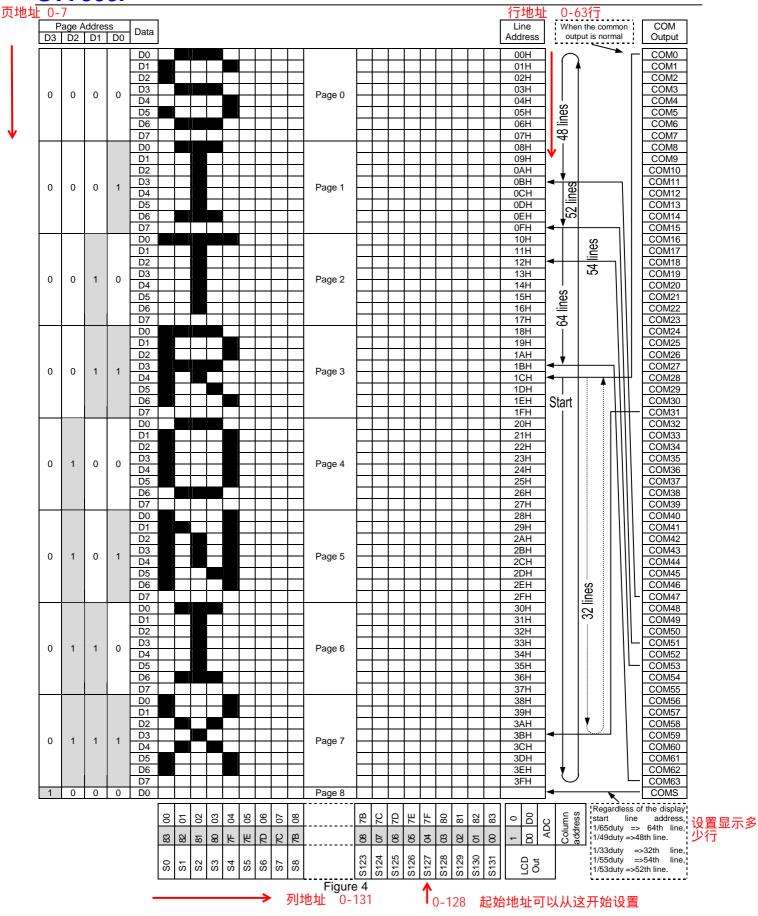

The Display Data Latch Circuit

The display data latch circuit is a latch that temporarily stores the display data that is output to the liquid crystal driver circuit from the display data RAM.

Because the display normal/reverse status, display ON/OFF status, and display all points ON/OFF commands control only the data within the latch, they do not change the data within the display data RAM itself.

The Oscillator Circuit

This is a CR-type oscillator that produces the display clock. The oscillator is only enabled when M/S= "H" and CLS = "H".

When CLS = "L" the oscillation stops, and the external clock is input through the CL terminal.

Display Timing Generator Circuit

The display timing generator circuit generates the timing signal to the line address circuit and the display data latch circuit using the display clock. The display data is latched into the display data latch circuit synchronized with the display clock, and is output to the data driver output terminal. Reading to the display data liquid crystal driver circuits is completely independent of accesses to the display data RAM by the MPU. Consequently, even if the display data

RAM is accessed asynchronously during liquid crystal display, there is absolutely no adverse effect (such as flickering) on the display.

Moreover, the display timing generator circuit generates the common timing and the liquid crystal alternating current signal (FR) from the display clock. It generates a drive wave form using a 2 frame alternating current drive method, as is shown in Figure 5, for the liquid crystal drive circuit.

Two-frame alternating current drive waveform

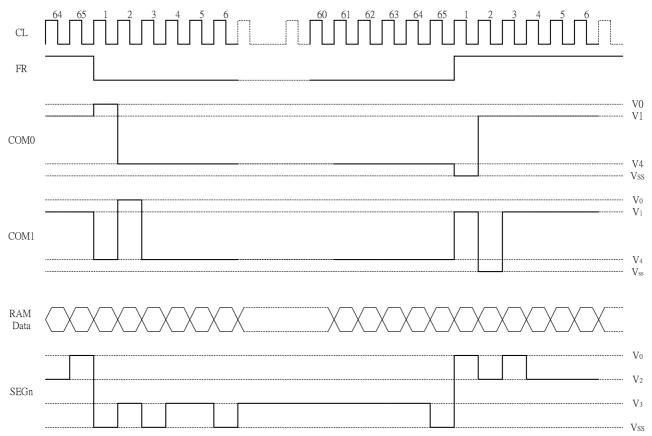


Figure 5

The Common Output Status Select Circuit

In the ST7565P chips, the COM output scan direction can be selected by the common output status select command.


Table 6

Status	COM Scan Direction								
	1/65 DUTY	1/49 DUTY	1/33 DUTY	1/55 DUTY	1/53 DUTY				
Normal	COM0 → COM63	COM0 → COM47	COM0 → COM31	COM0 → COM53	COM0 → COM51				
Reverse	COM63 → COM0	COM47 → COM0	COM31 → COM0	COM53 → COM0	COM51 → COM0				

Duty	СОМ	Common output pins									
Duty	dir	COM[0:15]	COM[16:23]	COM[24:26]	COM[27:36]	COM[37:39]	COM[40:47]	COM[48:63]	COMS		
1/65	0			COM[0:63]							
1/03	1		COM[63:0]								
1/49	0	COM	[0:23]		reserve		COM[24:47]	COMS		
1/49	1	COM[47:24]		reserve		COM	COM[23:0]			
1/33	0	COM[0:15]			reserve			COM[16:31]	COMS		
1/33	1	COM[31:16]			reserve			COM[15:0]	COMS		
1/55	0		COM[0:26]		reserve		COM[27:53]		COMS		
1/33	1		COM[53:27]		reserve		COM[26:0]				
1/53	0		COM[0:25]			reserve COM[26:51]					
1/33	1		COM[51:26]		reserve COM[25:0]						

The LCD Driver Circuits

The LCD driver circuits generates four voltage levels to drive the LCD. The combination of the display data, the COM scan signal and the FR signal produces the drive voltage of LCD. Figure 6 shows examples of the SEG and COM output wave form

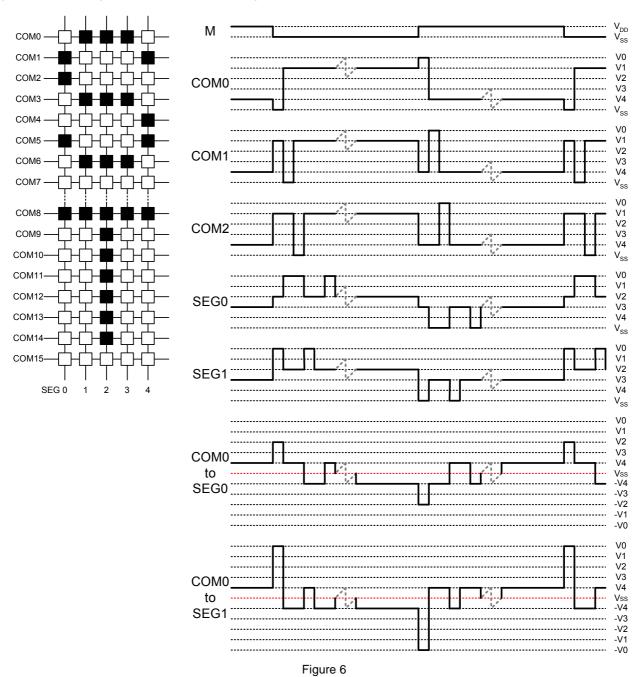

The Power Supply Circuits

The power supply circuits are low-power consumption power supply circuits that generate the voltage levels required for the LCD drivers. They are Booster circuits, voltage regulator circuits, and voltage follower circuits. They are only enabled in master operation. The power supply circuits can turn the Booster circuits, the voltage regulator circuits, and the

voltage follower circuits ON or OFF independently through the use of the Power Control Set command. Consequently, it is possible to make an external power supply and the internal power supply function somewhat in parallel. Table 7 shows the Power Control Set Command 3-bit data control function, and Table 8 shows reference combinations.

Table 7

bit	function	Sta "1"	tus "0"
D2 D1 D0	Booster circuit control bit Voltage regulator circuit control bit (V/R circuit) Voltage follower circuit control bit (V/F circuit)	ON ON ON	OFF OFF

The Control Details of Each Bit of the Power Control Set Command

Table 8

Use Settings	D2	D1	D0	Voltage booster	Voltage regulator	Voltage follower	External voltage input	Step-up voltage
Only the internal power supply is used	1	1	1	ON	ON	ON	VDD2	Used
Only the voltage regulator circuit and the voltage follower circuit are used	0	1	1	OFF	ON	ON	VOUT, VDD2	Open
Only the V/F circuit is used	0	0	1	OFF	OFF	ON	V0, VDD2	Open
Only the external power supply is used	0	0	0	OFF	OFF	OFF	V ₀ to V ₄	Open

Reference Combinations

The Step-up Voltage Circuits

Using the step-up voltage circuits equipped within the ST7565P chips it is possible to product a 2X,3X,4X,5X or 6X step-up of the VSS – VDD2 voltage levels.

The step-up voltage relationships are shown in Figure 7.

6X step-up: Connect capacitor C1 between CAP1N and

CAP1P, between CAP2N and CAP2P, between CAP1N and CAP3P, between CAP2N and CAP4P, between CAP1N and CAP5P, and between VDD2 and VOUT, to produce a voltage level in the positive direction at the VOUT terminal that is 6 times the voltage level between VSS and VDD2.

5X step-up:

Connect capacitor C1 between CAP1N and CAP1P, between CAP2N and CAP2P, between CAP1N and CAP3P, between CAP2N and CAP4P, and between VDD2 and VOUT, to produce a voltage level in the positive direction at the VOUT terminal that is 5 times the voltage level between VSS and VDD2.

4X step-up: Connect capacitor C1 between CAP1N and

CAP1P, between CAP2N and CAP2P, between CAP1N and CAP3P, and between VDD2 and VOUT, to produce a voltage level in the positive direction at the VOUT terminal that is 4 times the voltage level between VSS and VDD2.

3X step-up: Connect capacitor C1 between CAP1N and

CAP1P, between CAP2N and CAP2P and between VDD2 and VOUT, and short between CAP3P and VOUT to produce voltages level in the positive direction at the VOUT terminal that is 3 times the voltage difference between


VSS and VDD2.

2X step-up: Connect capacitor C1 between CAP1N and

CAP1P, and between VDD2 and VOUT, leave CAP2N open, and short between CAP2P, CAP3P and VOUT to produce a voltage in the positive direction at the VOUT terminal that Is twice the voltage between VSS and VDD2.

^{*} The "step-up system terminals" refer CAP1N, CAP1P, CAP2N, CAP2P, and CAP3N.

^{*} While other combinations, not shown above, are also possible, these combinations are not recommended because they have no practical use.

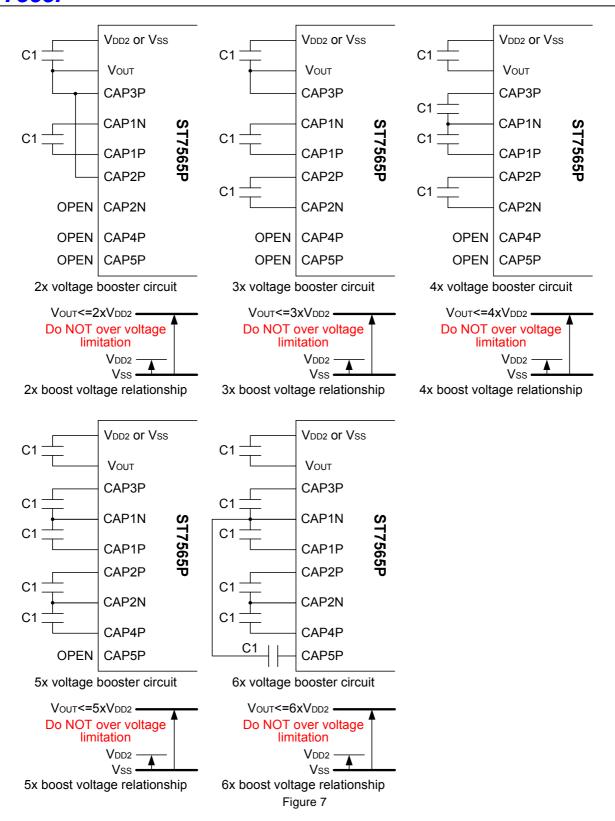

^{*} The VDD2 voltage range must be set so that the VOUT terminal voltage does not exceed the absolute maximum rated value.

VMAX: CAP5P > CAP4P > CAP3P > CAP2P > CAP1P > CAP2N = CAP1N.

^{*} The maximum voltage of the booster capacitor terminals are :

The Voltage Regulator Circuit

The step-up voltage generated at VOUT outputs the LCD driver voltage V0 through the voltage regulator circuit. Because the ST7565P chips have an internal high-accuracy fixed voltage power supply with a 64-level electronic volume

function and internal resistors for the V0 voltage regulator, systems can be constructed without having to include high-accuracy voltage regulator circuit components. (VREG thermal gradients approximate -0.05%/°C)

(A) When the V0 Voltage Regulator Internal Resistors Are Used


Through the use of the V0 voltage regulator internal resistors and the electronic volume function the liquid crystal power supply voltage V0 can be controlled by commands alone (without adding any external resistors), making it possible to

adjust the liquid crystal display brightness. The V0 voltage can be calculated using equation A-1 over the range where |V0| < |VOUT|.

$$Vo = \left(1 + \frac{Rb}{Ra}\right) \bullet VEV$$

$$= \left(1 + \frac{Rb}{Ra}\right) \bullet \left(1 - \frac{\alpha}{162}\right) \bullet VREG$$

$$\begin{bmatrix} \therefore VEV = \left(1 - \frac{\alpha}{162}\right) \bullet VREG \end{bmatrix}$$

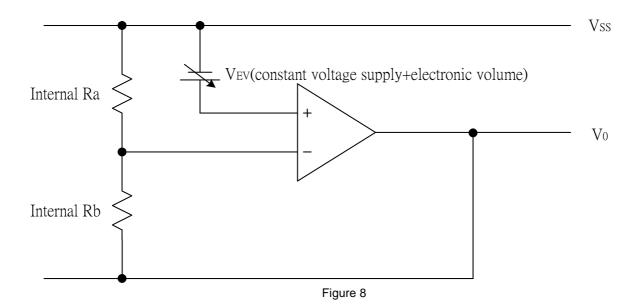

VREG is the IC-internal fixed voltage supply, and its voltage at Ta = 25°C is as shown in Table 9.

Table 9

Part no. Equipment Type		Thermal Gradient	VREG
ST7565P	Internal Power Supply	-0.05 %/℃	2.1V

 α is set to 1 level of 64 possible levels by the electronic volume function depending on the data set in the 6-bit electronic volume registers. Table 10 shows the value for α depending on the electronic volume register settings.

Rb/Ra is the V0 voltage regulator internal resistor ratio, and can be set to 8 different levels through the V0 voltage regulator internal resistor ratio set command. The (1 + Rb/Ra) ratio assumes the values shown in Table 11 depending on the 3-bit data settings in the V0 voltage regulator internal resistor ratio register.

Table 10

D5	D4	D3	D2	D1	D0	α
0	0	0	0	0	0	63
0	0	0	0	0	1	62
0	0	0	0	1	0	61
		:				:
		:				:
1	1	1	1	0	1	2
1	1	1	1	1	0	1
1	1	1	1	1	1	0

V0 voltage regulator internal resistance ratio register value and (1 + Rb/Ra) ratio (Reference value)

Table 11

Register			ST7565P
D2	D1	D0	(1) −0.05 %/℃
0	0	0	3.0
0	0	1	3.5
0	1	0	4.0
0	1	1	4.5
1	0	0	5.0
1	0	1	5.5
1	1	0	6.0
1	1	1	6.5

Figures 9, 10 show V0 voltage measured by values of the internal resistance ratio resistor for V0 voltage adjustment and electric volume resister for each temperature grade model.

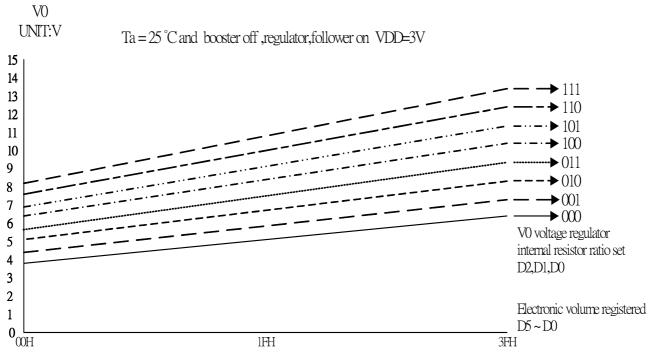


Figure 9 : (1) For ST7565P the Thermal Gradient = -0.05%/°C

The V0 voltage as a function of the V0 voltage regulator internal resistor ratio register and the electronic volume register.

Setup example: When selecting Ta = 25°C and V0 = 7V f or an ST7565P on which Temperature gradient = -0.05%/°C. Using Figure 9 and the equation A-1, the following setup is enabled.

At this time, the variable range and the notch width of the V0 voltage is, as shown Table 13, as dependent on the electronic volume.

Ta	abl	e	12
----	-----	---	----

Contents		Register					
		D4	D3	D2	D1	DO	
For Vo voltage regulator	_			- 0	1	0	
Electronic Volume	1	0	0	1	0	1	

Table 13

Vo	Min	Тур	Max	Units
Variable Range Notch width	5.1 (63 levels)	7.0 (central value) 51	8.4 (0 level)	[V] [mV]

(B) When an External Resistance is Used (The V0 Voltage Regulator Internal Resistors Are Not Used) (1)

The liquid crystal power supply voltage V0 can also be set without using the V0 voltage regulator internal resistors (IRS terminal = "L") by adding resistors Ra' and Rb' between VDD and VR, and between VR and V0, respectively. When this is done, the use of the electronic volume function makes it possible to adjust the brightness of the liquid crystal display

by controlling the liquid crystal power supply voltage V0 through commands.

In the range where | V0 | < | VOUT |, the V0 voltage can be calculated using equation B-1 based on the external resistances Ra' and Rb'.

$$V_0 = \left(1 + \frac{Rb'}{Ra'}\right) \bullet V_{EV}$$

$$= \left(1 + \frac{Rb'}{Ra'}\right) \bullet \left(1 - \frac{\alpha}{162}\right) \bullet V_{REG}$$

$$\left[\because V_{EV} = \left(1 - \frac{\alpha}{162}\right) \bullet V_{REG}\right]$$

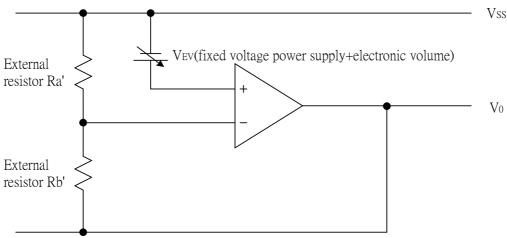


Figure 11

Setup example: When selecting Ta = 25°C and V0 = 7 V for ST7565P the temperature gradient = -0.05%/°C. When the central value of the electron volume register is (D5, D4, D3, D2, D1, D0) = (1, 0, 0, 0, 0, 0), then α = 31 and VREG = 2.1V so, according to equation B-1,

$$Vo = \left(1 + \frac{Rb'}{Ra'}\right) \bullet \left(1 - \frac{\alpha}{162}\right) \bullet V_{REG}$$

$$7V = \left(1 + \frac{Rb'}{Ra'}\right) \bullet \left(1 - \frac{31}{162}\right) \bullet (2.1)$$

Moreover, when the value of the current running through Ra' and Rb' is set to 5 uA,

Ra' + Rb' =
$$1.4M\Omega$$
 (Equation B-3)

Consequently, by equations B-2 and B-3,

$$\frac{Rb'}{Ra'} = 3.12$$

$$Ra' = 340k\Omega$$

$$Rb' = 1060k\Omega$$

At this time, the V0 voltage variable range and notch width, based on the electron volume function, is as given in Table 14.

Table 14

V0	Min	Тур	Тур Мах	
Variable Range Notch width	5.3 (63 levels)	7.0 (central value) 52	8.6 (0 level)	[V] [mV]

(C) When External Resistors are Used (The V0 Voltage Regulator Internal Resistors Are Not Used) (2)

When the external resistor described above are used, adding a variable resistor as well makes it possible to perform fine adjustments on Ra' and Rb', to set the liquid crystal drive voltage V0. In this case, the use of the electronic volume function makes it possible to control the liquid crystal power supply voltage V0 by commands to adjust the liquid crystal display brightness.

In the range where \mid V0 \mid < \mid VOUT \mid the V0 voltage can be calculated by equation C-1 below based on the R1 and R2 (variable resistor) and R3 settings, where R2 can be subjected to fine adjustments (\triangle R2).

$$V_0 = \left(1 + \frac{R3 + R2 - \Delta R2}{R1 + \Delta R2}\right) \bullet V_{EV}$$

$$= \left(1 + \frac{R3 + R2 - \Delta R2}{R1 + \Delta R2}\right) \bullet \left(1 - \frac{\alpha}{162}\right) \bullet V_{REG}$$

$$\int \therefore V_{EV} = \left(1 - \frac{\alpha}{162}\right) \bullet V_{REG}$$

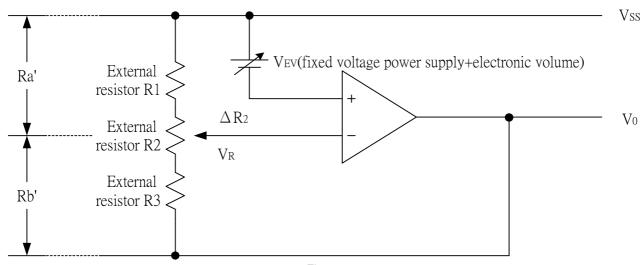


Figure 12

Setup example: When selecting $Ta = 25^{\circ}C$ and V0 = 5 to 9 V (using R2) for an ST7565P the temperature gradient = -0.05%/C.

When the central value for the electronic volume register is set at (D5, D4, D3, D2, D1, D0) = (1, 0, 0, 0, 0, 0), then α = 31 and VREG = 2.1 V so, according to equation C-1, when $\Delta R2$ = 0 $\Omega,$ in order to make V0 = 9 V,

$$9V = \left(1 + \frac{R3 + R2}{R1}\right) \bullet \left(1 - \frac{31}{162}\right) \bullet (2.1)$$

When $\triangle R2 = R2$, in order to make V = -5 V,

$$5V = \left(1 + \frac{R3}{R1 + R2}\right) \bullet \left(1 - \frac{31}{162}\right) \bullet (2.1)$$

When the current flowing VDD and V0 is set to 5 uA,

$$R1 + R2 + R3 = 1.4M\Omega$$
 (Equation C-4)

With this, according to equation C-2, C-3 and C-4,

$$R1 = 264k\Omega$$

$$R2 = 211k\Omega$$

$$R3 = 925k\Omega$$

The V0 voltage variable range and notch width based on the electron volume function is as shown in Table 15.

Table 15

V0	Min	Тур	Max	Units
Variable Range	5.5 (63 levels)	7.3 (central value)	9 (0 level)	[V]
Notch width		56		[mV]

ST7565P

- * When the V0 voltage regulator internal resistors or the electronic volume function is used, it is necessary to at least set the voltage regulator circuit and the voltage follower circuit to an operating mode using the power control set commands. Moreover, it is necessary to provide a voltage from VOUT when the Booster circuit is OFF.
- * The VR terminal is enabled only when the V0 voltage regulator internal resistors are not used (i.e. the IRS terminal = "L"). When the V0 voltage regulator internal resistors are used (i.e. when the IRS terminal = "H"), then the VR terminal is left open. * Because the input impedance of the VR terminal is high, it is necessary to take into consideration short leads, shield cables,
- etc. to handle noise.

The LCD Voltage Generator Circuit

The V0 voltage is produced by a resistive voltage divider within the IC, and can be produced at the V1, V2, V3, and V4 voltage levels required for liquid crystal driving. Moreover,

when the voltage follower changes the impedance, it provides V1, V2, V3 and V4 to the liquid crystal drive circuit.

High Power Mode

The power supply circuit equipped in the ST7565P chips has very low power consumption (normal mode: HPM = "H"). However, for LCD panels with large loads (size), this low-power power supply may cause display quality to degrade. When this occurs, set the HPM terminal to "L" (high power mode) can improve the display quality.

SITRONIX recommends that the display should be checked on actual equipment to determine whether or not to use this mode. Moreover, if the improvement to the display is inadequate even after high power mode has been set, then it is necessary to add a liquid crystal drive power supply externally.

The Internal Power Supply Shutdown Command Sequence

The sequence shown in Figure 13 is recommended for shutting down the internal power supply, first placing the


power supply in power saver mode and then turning the power supply OFF.




Figure 13


Reference Circuit Examples 参考电路实例


- 1. When used all of the step-up circuit, voltage regulating circuit and V/F circuit
- (1) When the voltage regulator internal resistor is used. (Example where VDD2 = VDD, with 4x step-up)
- (2) When the voltage regulator internal resistor is not used. (Example where VDD2 = VDD, with 4x step-up)

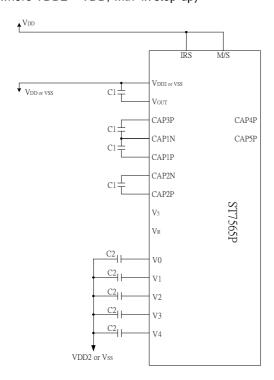

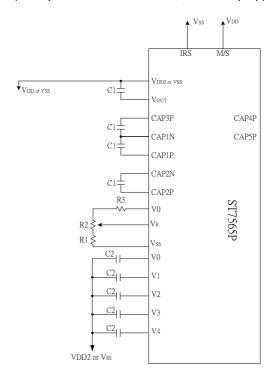


- 2. When the voltage regulator circuit and V/F circuit alone are used
- (1) When the V0 voltage regulator internal resistor is NOT (2) When the V0 voltage regulator internal resistor is used.

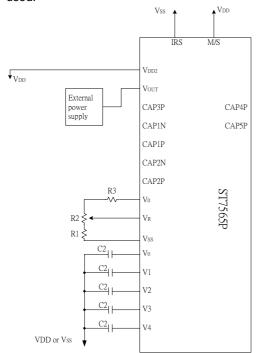

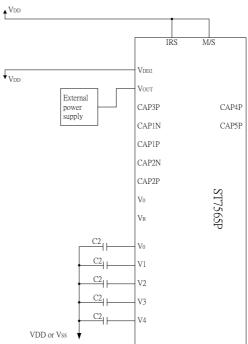

(3) When the V/F circuit alone is used

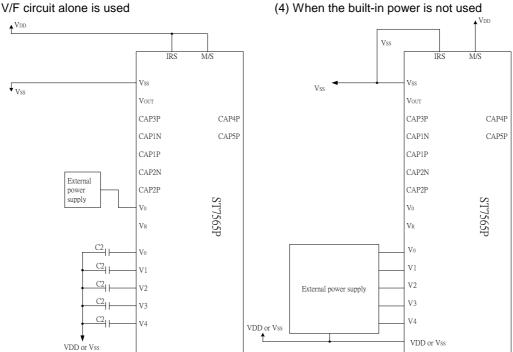

Item	Set value	units
C1 C2	1.0 to 4.7 0.1 to 4.7	uF uF

C1 and C2 are determined by the size of the LCD being driven.

- * 1. Because the VR terminal input impedance is high, use short leads and shielded lines.
- * 2. C1 and C2 are determined by the size of the LCD being driven. Select a value that will stabilize the liquid crystal drive voltage.

Example of the process which determines the capacitor values:

- * Turn the voltage regulator circuit and voltage follower circuit ON and supply a voltage to VOUT from the outside.
- * Determine C2 by displaying an LCD pattern with a heavy load (such as horizontal stripes) and selecting a C2 that stabilizes the liquid crystal drive voltages (V0 to V4). Note that all C2 capacitors must have the same capacitance value.
- * Next turn all the power supplies ON and determine C1.

The Reset Circuit ^{复位电路}

When the /RES input comes to the "L" level, these LSIs return to the default state. Their default states are as follows:

- Display OFF
- 2. Normal display
- 3. ADC select: Normal (ADC command D0 = "L")
- 4. Power control register: (D2, D1, D0) = (0, 0, 0)
- 5. Serial interface internal register data clear
- LCD power supply bias rate: 1/65 DUTY = 1/9 bias 1/49,1/55,1/53 DUTY = 1/8 bias 1/33 DUTY = 1/6 bias
- All-indicator lamps-on OFF (All-indicator lamps ON/OFF command D0 = "L")
- 8. Power saving clear
- V0 voltage regulator internal resistors Ra and Rb separation
- Output conditions of SEG and COM terminals SEG=VSS . COM=VSS
- 11. Read modify write OFF
- 12. Display start line set to first line
- 13. Column address set to Address 0
- 14. Page address set to Page 0
- 15. Common output status normal
- V0 voltage regulator internal resistor ratio set mode clear
- 17. Clear Electronic volume register: (D5, D4, D3, D2, D1, D0) = (1, 0. 0, 0, 0, 0)
- 18. Test mode clear

On the other hand, when the reset command is used, the above default settings from 11 to 18 are only executed.

When the power is turned on, the IC internal state becomes unstable, and it is necessary to initialize it using the /RES terminal. After the initialization, each input terminal should be controlled normally.

Moreover, when the control signal from the MPU is in the high impedance, an over current may flow to the IC. After applying a current, it is necessary to take proper measures to prevent the input terminal from getting into the high impedance state.

If the internal liquid crystal power supply circuit is not used on ST7565P,it is necessary that /RES is "H" when the external liquid crystal power supply is turned on. This IC has the function to discharge V0 when /RES is "L," and the external power supply short-circuits to Vss when /RES is "L." This means that an internal resistor is connected between VSS and V0.

While /RES is "L," the oscillator works but the display timing generator stops, and the CL, FR and /DOF terminals are fixed to "H." The terminals D0 to D7 are not affected. The VSS level is output to SEG and COM output terminals after a success hardware reset.

COMMANDS

In the 8080 MPU interface, commands are launched by inputting a low pulse to the RD terminal for reading, and inputting a low pulse to the /WR terminal for writing. In the 6800 Series MPU interface, the interface is placed in a read mode when an "H" signal is input to the R/W terminal and placed in a write mode when a "L" signal is input to the R/W terminal and then the command is launched by inputting a high pulse to the E terminal. Consequently, the 6800 Series MPU interface is different than the 80x86 Series MPU interface in that in the explanation of commands and the display commands the status read and display data read /RD (E) becomes "1(H)". In the explanations below the commands are explained using the 8080 Series MPU interface as the example. When the serial interface is selected, the data is input in sequence starting with D7.

<Explanation of Commands>

Display ON/OFF

This command turns the display ON and OFF.

	E	R/W									
A0	/RD	/WR	D7	D6	D5	D4	D3	D2	D1	D0	Setting
0	1	0	1	0	1	0	1	1	1	1	Display ON
										0	Display OFF

When the display OFF command is executed when in the display all points ON mode, power saver mode is entered. See the section on the power saver for details.

Display Start Line Set

This command is used to specify the display start line address of the display data RAM shown in Figure 4. For further details see the explanation of this function in "The Line Address Circuit".

	E	R/W									
A0	/RD	/WR	D7	D6	D5	D4	D3	D2	D1	D0	Line address
0	1	0	0	1	0	0	0	0	0	0	0
					0	0	0	0	0	1	1
					0	0	0	0	1	0	2
							1	,			\downarrow
					1	1	1	1	1	0	62
					1	1	1	1	1	1	63

Page Address Set

This command specifies the page address corresponding to the low address when the MPU accesses the display data RAM (see Figure 4). Specifying the page address and column address enables to access a desired bit of the display data RAM. Changing the page address does not accompany a change in the status display.

	E	R/W									
Α0	/RD	/WR	D7	D6	D5	D4	D3	D2	D1	D0	Page address
0	1	0	1	0	1	1	0	0	0	0	0
							0		0	1	1
							0	0	1	0	2
							1	,			\downarrow
							0	1	1	1	7
							1	0	0	0	8

Column Address Set 设置列地址

This command specifies the column address of the display data RAM shown in Figure 4. The column address is split into two sections (the higher 4 bits and the lower 4 bits) when it is set (fundamentally, set continuously). Each time the display data RAM is accessed, the column address automatically increments (+1), making it possible for the MPU to continuously read from/write to the display data. The column address increment is topped at 83H. This does not change the page address continuously. See the function explanation in "The Column Address Circuit," for details.

		Е	R/W																	Column
	Α0	/RD	/WR	D7	D6	D5	D4	D3	D2	D1	D0	Α7	A6	A5	A4	А3	A2	A 1	Α0	address
High bits →	0	1	0	0	0	0	1	Α7		A5		0	0	-8-	0	0	0	0	0	0
Low bits \rightarrow							0	АЗ	A2	Α1	Α0	4	0	0	0	0	0	0	1	1
												0	0	0	0	0	0	1	0	2
																\downarrow				\downarrow
												1	0	0	0	0	0	1	0	130
												1	0	0	0	0	0	1	1	131

Status Read 状态读取

	E	R/W								
A0	/RD	/WR	D7	D6	D5	D4	D3	D2	D1	D0
0	0	1	BUSY	ADC	ON/OFF	RESET	0	0	0	0

BUSY	BUSY = 1: it indicates that either processing is occurring internally or a reset condition is in process. BUSY = 0: A new command can be accepted. if the cycle time can be satisfied, there is no need to check for BUSY conditions.
ADC	This shows the relationship between the column address and the segment driver. 0: Reverse (column address 131-n ↔ SEG n) 1: Normal (column address n ↔ SEG n) (The ADC command switches the polarity.)
ON/OFF	ON/OFF: indicates the display ON/OFF state. 0: Display ON 1: Display OFF (This display ON/OFF command switches the polarity.)
RESET	This indicates that the chip is in the process of initialization either because of a /RES signal or because of a reset command. 0: Operating state 1: Reset in progress

Display Data Write

This command writes 8-bit data to the specified display data RAM address. Since the column address is automatically incremented by "1" after the write, the MPU can write the display data.

	Е	R/W	
Α0	/RD	/WR	D7 D6 D5 D4 D3 D2 D1 D0
1	1	0	Write data

Display Data Read

This command reads 8-bit data from the specified display data RAM address. Since the column address is automatically incremented by "1" after the read, the CPU can continuously read multiple-word data. One dummy read is required immediately after the column address has been set. See the function explanation in "Display Data RAM" for the explanation of accessing the internal registers. When the serial interface is used, reading of the display data becomes unavailable.

	E	R/W	
Α0	/RD	/WR	D7 D6 D5 D4 D3 D2 D1 D0
1	0	1	Read data

ADC Select (Segment Driver Direction Select)

This command can reverse the correspondence between the display RAM data column address and the segment driver output. Thus, sequence of the segment driver output pins may be reversed by the command. See the column address circuit for the detail. Increment of the column address (by "1") accompanying the reading or writing the display data is done according to the column address indicated in Figure 4.

	E	R/W									
Α0	/RD	/WR	D7	D6	D5	D4	D3	D2	D1	D0	Setting
0	1	0	1	0	1	0	0	0	0	0 1	Normal Reverse

Display Normal/Reverse

This command can reverse the lit and unlit display without overwriting the contents of the display data RAM. When this is done the display data RAM contents are maintained.

	E	R/W									
A0	/RD	/WR	D7	D6	D5	D4	D3	D2	D1	D0	Setting
0	1	0	1	0	1	0	0	1	1	0	RAM Data "H" LCD ON voltage (normal) RAM Data "L" LCD ON voltage (reverse)

Display All Points ON/OFF

This command makes it possible to force all display points ON regardless of the content of the display data RAM. The contents of the display data RAM are maintained when this is done. This command takes priority over the display normal/reverse command.

	E	R/W									
Α0	/RD	/WR	D7	D6	D5	D4	D3	D2	D1	D0	Setting
0	1	0	1	0	1	0	0	1	0	0	Normal display mode Display all points ON

When the display is in an OFF mode, executing the display all points ON command will place the display in power save mode. For details, see the Power Save section.

LCD Bias Set

This command selects the voltage bias ratio required for the liquid crystal display.

	E	R/W										S	elect Statu	ıs	
Α0	/RD	/WR	D7	D6	D5	D4	D3	D2	D1	D0	1/65duty	1/49duty	1/33duty	1/55duty	1/53duty
0	1	0	1	0	1	0	0	0	1	0	1/9 bias	1/8 bias	1/6 bias	1/8 bias	1/8 bias
	ı	U								1	1/7 bias	1/6 bias	1/5 bias	1/6 bias	1/6 bias

Read/Modify/Write

This command is used paired with the "END" command. Once this command has been input, the display data read command does not change the column address, but only the display data write command increments (+1) the column address. This mode is maintained until the END command is input. When the END command is input, the column address returns to the address it was at when the read/modify/write command was entered. This function makes it possible to reduce the load on the MPU when there are repeating data changes in a specified display region, such as when there is a blanking cursor.

	Ε	R/W								
Α0	/RD	/WR	D7	D6	D5	D4	D3	D2	D1	D0
0	1	0	1	1	1	0	0	0	0	0


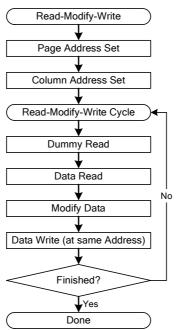


Figure 24 Command Sequence For read modify write

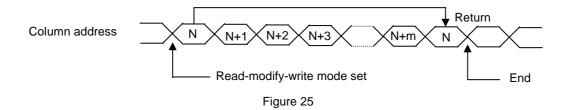

End

This command releases the read/modify/write mode, and returns the column address to the address it was at when the mode was entered.

	Е	R/W								
Α0	/RD	/WR	D7	D6	D5	D4	D3	D2	D1	D0
0	1	0	1	1	1	0	1	1	1	0

Reset

This command initializes the display start line, the column address, the page address, the common output mode, the V0 voltage regulator internal resistor ratio, the electronic volume, and the static indicator are reset, and the read/modify/write mode and test mode are released. There is no impact on the display data RAM. See the function explanation in "Reset" for details. The reset operation is performed after the reset command is entered.

	Е	R/W								
Α0	/RD	/WR	D7	D6	D5	D4	D3	D2	D1	D0
0	1	0	1	1	1	0	0	0	1	0

The initialization when the power supply is applied must be done through applying a reset signal to the /RES terminal. The reset command must not be used instead.

Common Output Mode Select

This command can select the scan direction of the COM output terminal. For details, see the function explanation in "Common Output Mode Select Circuit."

		R/W											Sele	cted Mode		
A0	/RD	/WR	D7	D6	D5	D4	D3	D2	D1	D0		1/65duty	1/49duty	1/33duty	1/55duty	1/53duty
^	1	^	1	1	0	0	0	*	*	*	Normal	COM0→COM63	COM0→COM47	COM0→COM31	COM0→COM53	COM0→COM51
0	- 1	U					1				Reverse	COM63→COM0	COM47→COM0	COM31→COM0	COM53→COM0	COM51→COM0

^{*} Disabled bit

Power Controller Set

This command sets the power supply circuit functions. See the function explanation in "The Power Supply Circuit," for details.

	Е	R/W									
Α0	/RD	/WR	D7	D6	D5	D4	D3	D2	D1	D0	Selected Mode
			0	0	1	0	1	0			Booster circuit: OFF
								1			Booster circuit: ON
_	1	0							0		Voltage regulator circuit: OFF
0	'	U							1		Voltage regulator circuit: ON
										0	Voltage follower circuit: OFF
										1	Voltage follower circuit: ON

V0 Voltage Regulator Internal Resistor Ratio Set

This command sets the V0 voltage regulator internal resistor ratio. For details, see the function explanation is "The Voltage Regulator circuit" and Table 11.

	Е	R/W									
A0	/RD	/WR	D7	D6	D5	D4	D3	D2	D1	D0	Rb/Ra Ratio
			0	0	1	0	0	0	0	0	Small
								0	0	1	
	4	0						0	1	0	
0	1	0							\downarrow		\downarrow
								1	1	1	
								1	1	1	Large

The Electronic Volume (Double Byte Command)

This command makes it possible to adjust the brightness of the liquid crystal display by controlling the LCD drive voltage V0 through the output from the voltage regulator circuits of the internal liquid crystal power supply. This command is a two byte command used as a pair with the electronic volume mode set command and the electronic volume register set command, and both commands must be issued one after the other.

The Electronic Volume Mode Set

When this command is input, the electronic volume register set command becomes enabled. Once the electronic volume mode has been set, no other command except for the electronic volume register command can be used. Once the electronic volume register set command has been used to set data into the register, then the electronic volume mode is released.

	Е	R/W								
A0	/RD	/WR	D7	D6	D5	D4	D3	D2	D1	D0

Electronic Volume Register Set


By using this command to set six bits of data to the electronic volume register, the liquid crystal drive voltage V0 assumes one of the 64 voltage levels. When this command is input, the electronic volume mode is released after the electronic volume register has been set.

ſ		Е	R/W									
	Α0	/RD	/WR	D7	D6	D5	D4	D3	D2	D1	D0	Vo
Γ				*	*	0	0	0	0	0	1	Small
				*	*	0	0	0	0	1	0	
	0	4	0	*	*	0	0	0	0	1	1	
	U	1	U									\downarrow
				*	*	1	1	1	1	1	0	
				*	*	1	1	1	1	1	1	Large

^{*} Inactive bit (set "0")

When the electronic volume function is not used, set this to (1, 0, 0, 0, 0, 0)


The Electronic Volume Register Set Sequence

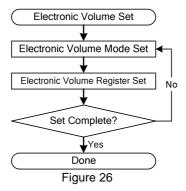

Power Save (Compound Command)

When the display all points ON is performed while the display is in the OFF mode, the power saver mode is entered, thus greatly reducing power consumption.

The power saver mode has two different modes: the sleep mode and the standby mode. When the static indicator is OFF, it is the sleep mode that is entered. When the static indicator is ON, it is the standby mode that is entered. In the sleep mode and in the standby mode, the display data is saved as is the operating mode that was in effect before the power saver mode was initiated, and the MPU is still able to access the display data RAM. Refer to figure 28 for power save off sequence.

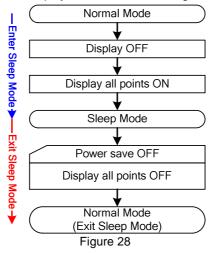

Sleep Mode

This stops all operations in the LCD display system, and as long as there are no accesses from the MPU, the consumption current is reduced to a value near the static current. The internal modes during sleep mode are as follows:

- 1. The oscillator circuit and the LCD power supply circuit are halted.
- 2. All liquid crystal drive circuits are halted, and the segment in common drive outputs output a VSS level.
- 3. The static drive system does not operate.

The Booster Ratio (Double Byte Command)

This command makes it possible to select step-up ratio. It is used when the power control set have turn on the internal booster circuit. This command is a two byte command used as a pair with the booster ratio select mode set command and the booster ratio register set command, and both commands must be issued one after the other.

Booster Ratio Select Mode Set

When this command is input, the Booster ratio register set command becomes enabled. Once the booster ratio select mode has been set, no other command except for the booster ratio register command can be used. Once the booster ratio register set command has been used to set data into the register, then the booster ratio select mode is released.

	Е	R/W								
Α0	/RD	/WR	D7	D6	D5	D4	D3	D2	D1	D0
0	1	0	1	1	1	1	1	0	0	0

Booset Ratio Register Set

By using this command to set two bits of data to the booster ratio register, it can be select what kind of the booster ratio can be used. When this command is input, the booster ratio select mode is released after the booster ratio register has been set.

Α0	E /RD	R/W /WR	D7	D6	D5	D4	D3	D2	D1	D0	Booster ratio select
			*	*	*	*	*	*	0	0	2x,3x,4x 5x
0	1	0	*	*	*	*	*	*	0	1	5x
			*	*	*	*	*	*	1	1	6x

^{*} Inactive bit (set "0")

When the booster ratio select function is not used, set this to (0, 0) 2x,3x,4x step-up mode.

The booster ratio Register Set Sequence

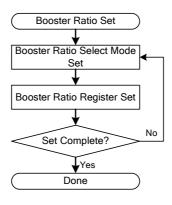


Figure 29

NOP

Non-Operation Command

	E	R/W								
A0	/RD	/WR	D7	D6	D5	D4	D3	D2	D1	D0
0	1	0	1	1	1	0	0	0	1	1

Test

This is a command for IC chip testing. Please do not use it. If the test command is used by accident, it can be cleared by applying a "L" signal to the /RES input by the reset command or by using an NOP.

	E	R/W								
Α0	/RD	/WR	D7	D6	D5	D4	D3	D2	D1	D0
0	1	0	1	1	1	1	1	1	*	*

^{*} Inactive bit

Note: The ST7565P maintain their operating modes until something happens to change them. Consequently, excessive external noise, etc., can change the internal modes of the ST7565P. Thus in the packaging and system design it is necessary to suppress the noise or take measure to prevent the noise from influencing the chip. Moreover, it is recommended that the operating modes be refreshed periodically to prevent the effects of unanticipated noise.

			Ta	ble 16	: Tab	le of	ST	7565	SP C	omn	nan	ds	(Note) *: disabled data
	Command		A0 /RD /WR 0 1 0			mma	ınd (Code)				Function
	Communa	Α0	/RD	/WR	D7		D5	D4	D3	D2	D1	D0	
开启显示	(1) Display ON/OFF	0	1	0	1	0	1	0	1	1	1	0 1	LCD display ON/OFF 0: OFF, 1: ON
显示位置	(2) Display start line set	0	1	0	0	1	Di	ispla	y sta	art ac	ddre	ss	Sets the display RAM display start line address
	(3) Page address set	0	1	0	1	0	1	1	Pa	ge a	ddre	ess	Sets the display RAM page address
显示位置	(4) Column address set upper bit Column address set lower bit	0	1	0	0	0	0	1	colu Lea	st sig ımn a st siç ımn a	add gnifi	ress cant	Sets the most significant 4 bits of the display RAM column address. Sets the least significant 4 bits of the display RAM column address.
	(5) Status read	0	0	1		St	atus		0	0	0	0	Reads the status data
	(6) Display data write	1	1	0					e dat	a			Writes to the display RAM
	(7) Display data read	1	0	1				Rea	d dat	a			Reads from the display RAM
左右方向	(8) ADC select	0	1	0	1	0	1	0	0	0	0	0	Sets the display RAM address SEG output correspondence 0: normal, 1: reverse
字体颜色 背景颜色	(9) Display normal/ reverse	0	1	0	1	0	1	0	0	1	1	0	Sets the LCD display normal/ reverse 0: normal, 1: reverse
像素显示	(10) Display all points ON/OFF	0	1	0	1	0	1	0	0	1	0	0	Display all points 0: normal display 1: all points ON
偏压	(11) LCD bias set	0	1	0	1	0	1	0	0	0	1	0	Sets the LCD drive voltage bias ratio 0: 1/9 bias, 1: 1/7 bias (ST7565P)
	(12) Read/modify/write	0	1	0	1	1	1	0	0	0	0	0	Column address increment At write: +1 At read: 0
	(13) End	0	1	0	1	1	1	0	1	1	1	0	Clear read/modify/write
	(14) Reset	0	1	0	1	1	1	0	0	0	1	0	Internal reset
上下方向	(15) Common output mode select	0	1	0	1	1	0	0	0 1	*	*	*	Select COM output scan direction 0: normal direction 1: reverse direction
	(16) Power control set	0	1	0	0	0	1	0	1	Op- mo	erat de	ing	Select internal power supply operating mode
选择调节电阻率	(17) Vo voltage regulator internal resistor ratio set	0	1	0	0	0	1	0	0	Res ra		or	Select internal resistor ratio(Rb/Ra) mode
背景光对比度	(18) Electronic volume mode set Electronic volume register set	0	1	0	1 0	0 0	0 Ele	0 ctro	0 nic v	0 olum	0 ie va	1 alue	Set the Vo output voltage electronic volume register
选择增压方式	(20) Booster ratio set	0	1	0	1 0	1 0	1	1 0	1 0	0		0 o-up lue	select booster ratio 00: 2x,3x,4x 01: 5x 11: 6x
	(21) Power saver												Display OFF and display all points ON compound command
	(22) NOP	0	1	0	1	1	1	0	0	0	1	1	Command for non-operation
	(23) Test	0	1	0	1	1	1	1	*	*	*	*	Command for IC test. Do not use this command


COMMAND DESCRIPTION

Instruction Setup: Reference

(1) Initialization

Note: With this IC, when the power is applied, LCD driving non-selective potentials V2 and V3 (SEG pin) and V1 and V4 (COM pin) are output through the LCD driving output pins SEG and COM. When electric charge is remaining in the smoothing capacitor connecting between the LCD driving voltage output pins (V0 ~ V4) and the VSS pin, the picture on the display may become totally dark instantaneously when the power is turned on. To avoid occurrence of such a failure, we recommend the following flow when turning on the power.

1. When the built-in power is being used immediately after turning on the power:

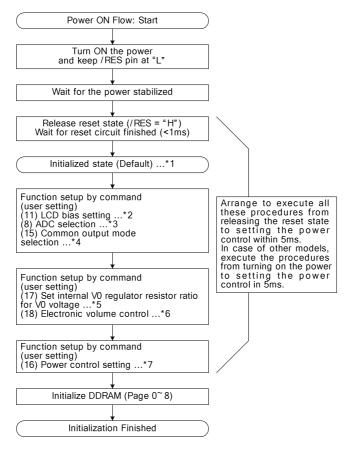


^{*} The target time of 5ms will result to vary depending on the panel characteristics and the capacitance of the smoothing capacitor. Therefore, we suggest you to conduct an operation check using the actual equipment.

Notes: Refer to respective sections or paragraphs listed below.

- *1: Description of functions; Resetting circuit
- *2: Command description; LCD bias setting
- *3: Command description; ADC selection
- *4: Command description; Common output state selection
- *5: Description of functions; Power circuit & Command description; Setting the built-in resistance radio for regulation of the V0 voltage
- *6: Description of functions; Power circuit & Command description; Electronic volume control
- *7: Description of functions; Power circuit & Command description; Power control setting

2. When the built-in power is not being used immediately after turning on the power:

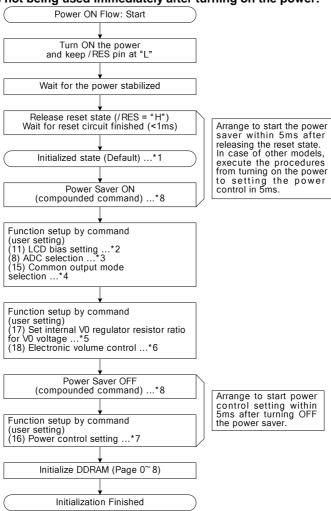


^{*} The target time of 5ms will result to vary depending on the panel characteristics and the capacitance of the smoothing capacitor. Therefore, we suggest you to conduct an operation check using the actual equipment.

Notes: Refer to respective sections or paragraphs listed below.

- *1: Description of functions; Resetting circuit
- *2: Command description; LCD bias setting
- *3: Command description; ADC selection
- *4: Command description; Common output state selection
- *5: Description of functions; Power circuit & Command description; Setting the built-in resistance radio for regulation of the V0 voltage
- *6: Description of functions; Power circuit & Command description; Electronic volume control
- *7: Description of functions; Power circuit & Command description; Power control setting
- *8: The power saver ON state can either be in sleep state or stand-by state. Command description; Power saver START (multiple commands)

(2) Data Display

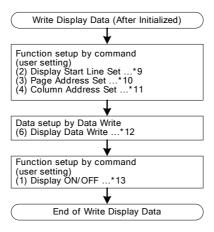


Notes: Reference items

- *9: Command Description; Display start line set
- *10: Command Description; Page address set
- *11: Command Description; Column address set
- *12: Command Description; Display data write
- *13: Command Description; Display ON/OFF

Avoid displaying all the data at the data display start (when the display is ON) in white.

(3) Power OFF *14

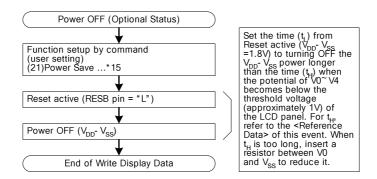


Notes: Reference items

- *14: The logic circuit of this IC's power supply VDD Vss controls the driver of the LCD power supply Vss Vo. So, if the power supply VDD Vss is cut off when the LCD power supply Vss Vo has still any residual voltage, the driver (COM. SEG) may output any uncontrolled voltage. When turning off the power, observe the following basic procedures:
 - After turning off the internal power supply, make sure that the potential Vo ~ V4 has become below the threshold voltage of the LCD panel, and then turn off this IC's power supply (VDD Vss). 6. Description of Function, 6.7 Power Circuit
- *15: After inputting the power save command, be sure to reset the function using the /RES terminal until the power supply VDD Vss is turned off. 7. Command Description (20) Power Save
- *16: After inputting the power save command, do not reset the function using the /RES terminal until the power supply VDD Vss is turned off. 7. Command Description (20) Power Save

Refresh


It is recommended to turn on the refresh sequence regularly at a specified interval.

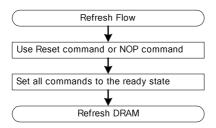

Precautions on Turning off the power

- <Turning the power (VDD Vss) off>
- 1) Power Save (The LCD powers (Vo Vss) are off.) → Reset input → Power (VDD Vss) OFF
- Observe $t_L > t_H$.
- When $t_L < t_H$, an irregular display may occur.


Set t_L on the MPU according to the software. t_H is determined according to the external capacitor C2 (smoothing capacitor of $V_0 \sim V_4$) and the driver's discharging capacity.

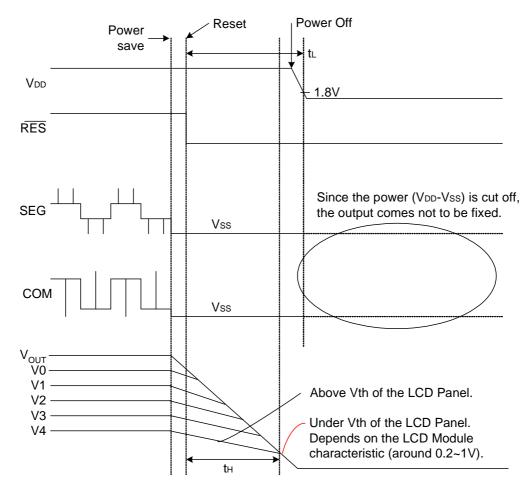

- <Turning the power (VDD VSS) off : When command control is not possible.>
- 2) Reset (The LCD powers (VDD Vss) are off.) → Power (VDD Vss) OFF
- Observe $t_L > t_H$.
- When $t_L < t_H$, an irregular display may occur.

For t_L, make the power (VDD - Vss) falling characteristics longer or consider any other method.

th is determined according to the external capacity C2 (smoothing capacity of Vo to V4) and the driver's discharging capacity.

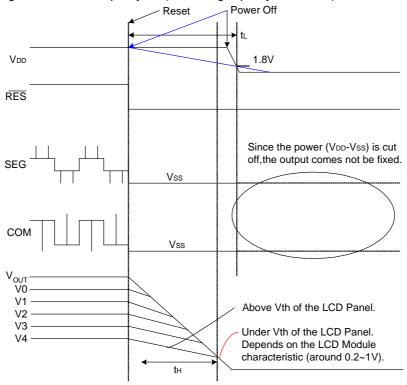

<Reference Data>

Vo voltage falling (discharge) time (t H) after the process of operation \rightarrow power save \rightarrow reset. Vo voltage falling (discharge) time (t H) after the process of operation \rightarrow reset.

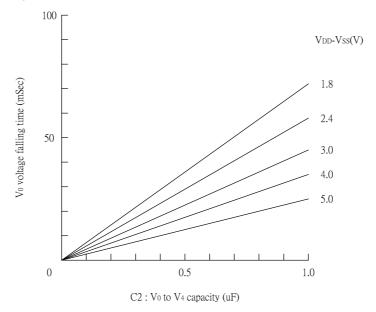


Figure 31

ABSOLUTE MAXIMUM RATINGS

Unless otherwise specified, VSS = 0V

Parameter		Symbol	Conditions	Unit
Power Supply Voltage		V_{DD}	-0.3 ~ 3.6	V
Power supply voltage (VDD star	ndard)	V_{DD2}	-0.3 ~ 3.6	V
Power supply voltage (VDD stan	dard)	V0, VOUT	− 0.3 ~ 14.5	V
Power supply voltage (VDD stan	dard)	V1, V2, V3, V4	-0.3 ~ V0+0.3	V
Input Voltage	(Digital Dada)	V _{IN}	−0.3 ~ VDD+0.3	V
Output Voltage	(Digital Pads)	Vo	−0.3 ~ VDD+0.3	V
Operating temperature	Dana akia	T _{OPR}	-30 to +85	C
Storage temperature	Bare chip	T _{STR}	-65 to +150	L.

Table 17

Notes and Cautions

- 1. The voltages are relative to Vss = 0V unless otherwise specified.
- The voltages are relative to vss = 6 v unless otherwise specified.
 The ranges listed in this section are stress only. It is recommended that the normal operating condition of this device should be in the ranges listed in "DC Characteristics" (the next section).
 Stress over the listed ranges in "Absolute Maximum Ratings" may cause permanent damage to this device.
- 4. If this device is operated out of these conditions and ranges, it may not only result in malfunctions, but may have a negative impact on the reliability as well.
- 5. Insure that the voltage levels of V1, V2, V3, and V4 are always such that $Vout \ge V0 \ge V1 \ge V2 \ge V3 \ge V4$.

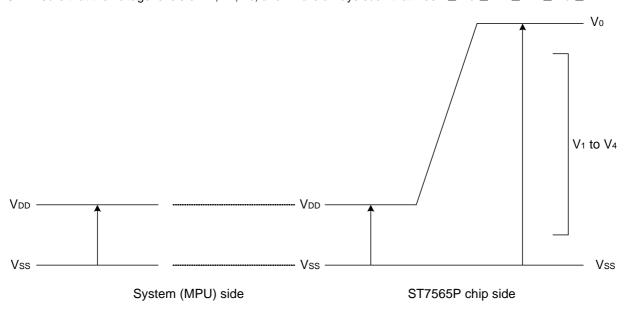


Figure 30

ST7565P

DC CHARACTERISTICS

Internal

Oscillator

External

Internal

Oscillator

External

Input

Input

Oscillator

Frequency

Unless otherwise specified, Vss = 0 V, Vdd = 3.0 V \pm 10%, Ta = -30 to 85°C **Table 18**

 f_{OSC}

 f_{CL}

 f_{OSC}

 f_{CL}

1/65 duty

1/33 duty

1/49 duty 1/53 duty 1/55 duty

ltom	Cumbal	Con	dition		Rating		Units	Applicable
Item	Symbol	Con	uition	Min.	Тур.	Max.	Units	Pin
Operating Voltage (1)	V_{DD}			1.8		3.3	V	V _{SS} *1
Operating Voltage (2)	V_{DD2}	(Related to \	V _{SS})	2.4	_	3.3	V	V _{SS}
High-level Input Voltage	V_{IHC}			0.8 x V _{DD}	_	V_{DD}	V	*3
Low-level Input Voltage	V _{ILC}			V _{SS}	_	0.2 x V _{DD}	V	*3
High-level Output Voltage	V _{OHC}	$I_{OH} = -1 \text{ mA}$		0.8 x V _{DD}	_	V_{DD}	V	*4
Low-level Output Voltage	V _{OLC}	I _{OL} = 1 mA		V _{SS}	_	0.2 x V _{DD}	V	*4
Input leakage current	ILI	V _{IN} = VDD o	r VSS	-1.0	_	1.0	μA	*5
Output leakage current	I _{LO}	V _{IN} = VDD o	r VSS	-3.0	_	3.0	μA	*6
Liquid Crystal Driver ON	В	Ta = 25℃	V0 = 13.0V	_	2.0	3.5	ΚΩ	SEGn
Resistance	R _{ON}	(Related to V _{SS})	V0 = 8.0V	_	3.2	5.4	K12	COMn *7
Static Consumption Current	I _{SSQ}	V0 = 13.0 V		_	0.01	2	μA	V_{DD} , V_{DD2}
Output Leakage Current	I _{5Q}	(Related to	V _{SS})	_	0.01	10	μA	V0
Input Terminal Capacitance	C _{IN}	Ta = 25℃ ,	f = 1 MHz	_	5.0	8.0	pF	
		+		1				

Ta = 25℃

Ta = 25℃

17

17

25

25

20

20

30

30

24

24

35

35

kHz

kHz

kHz

kHz

*8

 CL

*8

 CL

Table 19

	Item	Symbol	Condition		Rating		Units	Applicable
	item	Symbol	Condition	Min.	Тур.	Max.	Units	Pin
	Input voltage	VDD2	(Relative to Vss)	2.4	_	3.3	V	Vss
_	Supply Step-up output voltage Circuit	Vouт	(Relative to Vss)	_	_	13.5	V	Vоит
al Power	Voltage regulator Circuit Operating Voltage	Vout	(Relative to Vss)	6.0	l	13.5	V	Vouт
Internal	Voltage Follower Circuit Operating Voltage	V0	(Relative to Vss)	4.0	ı	13.0	V	V0 * 9
	Base Voltage	VR	Ta = 25 $^{\circ}$ C, (Relative to V ss) $-0.05\%/^{\circ}$ C	2.07	2.10	2.13	٧	*10

• Dynamic Consumption Current : During Display, with the Internal Power Supply OFF Current consumed by total ICs when an external power supply is used .

Table 20

To at most and	Complete	Condition		Rating		Units	Mataa
Test pattern Symbol		Condition	Min.	Тур.	Max.	Units	Notes
Display Pattern OFF	I _{DD}	$V_{DD} = 3.0 \text{ V},$ $V0 - V_{SS} = 11.0 \text{ V}$	_	16	27	μΑ	*11
Display Pattern Checker	I _{DD}	$V_{DD} = 3.0 \text{ V},$ $V0 - V_{SS} = 11.0 \text{ V}$	_	19	32	μA	*11

• Dynamic Consumption Current : During Display, with the Internal Power Supply ON Table 21

Test pattern	Symbol	Condition			Rating		Units	Notes
rest pattern	Зуппоот	Condition	Condition				Ullits	Notes
Display		$V_{DD} = 3.0 \text{ V},$	Normal Mode	1	90	130		*40
Pattern OFF	I _{DD}	Quad step-up voltage. V0 –V _{SS} = 11.0 V	High-Power Mode		128	193	μA	*12
Display Pattern	L	V _{DD} = 3.0 V, Quad step-up voltage.	Normal Mode		100	147	μA	*12
Checker	I _{DD}	V0 –V _{SS} = 11.0 V	High-Power Mode		135	205	μΑ	12

• Consumption Current at Time of Power Saver Mode : $VSS = -3.0 \text{ V} \pm 10\%$

Table 22

Item	Symbol	Condition		Rating	Units	Notes	
item	Syllibol	Condition	Min.	Тур.	Max.	Ullits	Notes
Sleep mode	I _{DD}	Ta = 25℃	_	0.1	4	uА	
Standby Mode	I _{DD}	Ta = 25℃	_	5	10	μΑ	

• The Relationship Between Oscillator Frequency fosc, Display Clock Frequency fc∟ and the Liquid Crystal Frame Rate Frequency fFR

Table 23

	Item	fcL	fFR
1/65 DUTY	Used internal oscillator circuit	fOSC / 4	fOSC / (4*65)
1/03 DUTT	Used externa l display clock	External input (fcL)	fCL / 260
1/49 DUTY	Used internal oscillator circuit	fOSC / 4	fOSC / (4*49)
1/49 DOTT	Used external display clock	External input (fcL)	fCL / 196
1/33 DUTY	Used internal oscillator circuit	fOSC / 8	fOSC / (8*33)
1/33 DUTT	Used external display clock	External input (fcL)	fCL / 264
1/55 DUTY	Used internal oscillator circuit	fOSC / 4	fOSC / (4*55)
1/55 DUTT	Used external display clock	External input (fcL)	fCL / 220
1/53 DUTY	Used internal oscillator circuit	fosc / 4	fOSC / (4*53)
1/33 DUTT	Used external display clock	External input (fcL)	fCL / 212

(ffr is the liquid crystal alternating current period, and not the FR signal period.)

References for items market with *

- *1 While a broad range of operating voltages is guaranteed, performance cannot be guaranteed if there are sudden fluctuations to the voltage while the MPU is being accessed.
- *2 The operating voltage range for the Vss system and the Vo system is. This applies when the external power supply is being used.
- *3 The A0, D0 to D5, D6 (SCL), D7 (SI), /RD (E), /WR (R/W), /CS1, CS2, CLS, CL, FR, M/S, C86, P/S, /DOF, /RES, IRS, and /HPM terminals.
- *4 The D0 to D7, FR, /DOF, and CL terminals.
- *5 The A0, /RD (E), /WR (R/W), /CS1, CS2, CLS, M/S, C86, P/S, /RES, IRS, and /HPM terminals.
- *6 Applies when the D0 to D5, D6 (SCL), D7 (SI), CL, FR, and /DOF terminals are in a high impedance state.
- *7 These are the resistance values for when a 0.1 V voltage is applied between the output terminal SEGn or COMn and the various power supply terminals (V1, V2, V3, and V4). These are specified for the operating voltage (3) range. Ron = 0.1 V / \(\Delta \) I (Where \(\Delta \) I is the current that flows when 0.1 V is applied while the power supply is ON.)
- *8 See Table 23 for the relationship between the oscillator frequency and the frame rate frequency.
- *9 The V0 voltage regulator circuit regulates within the operating voltage range of the voltage follower.
- *10 This is the internal voltage reference supply for the V0 voltage regulator circuit. In the ST7565P, the temperature range approximately −0.05%/℃.
- *11, 12 It indicates the current consumed on ICs alone when the internal oscillator circuit and display are turned on. The ST7565P is 1/9 biased. Does not include the current due to the LCD panel capacity and wiring capacity. Applicable only when there is no access from the MPU.
- *12 It is the value on a ST7565P having the VREG temperature gradient is −0.05%/℃ when the V o voltage regulator internal resistor is used.

TIMING CHARACTERISTICS

System Bus Read/Write Characteristics 1 (For the 8080 Series MPU)

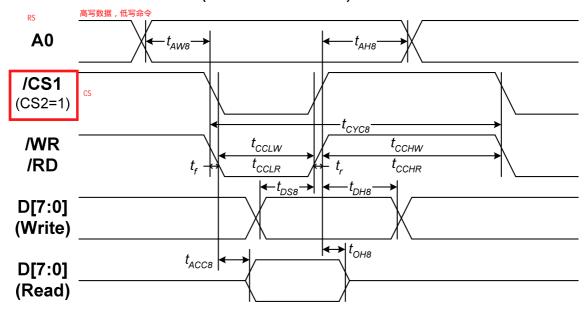


Figure 37

Table 24

(VDD = 3.3V. Ta = -30 to 85%)

Item	Signal	Symbol	Condition	Rati		Units
item	Signal	Symbol	Condition	Min.	Max.	Units
Address hold time		t AH8		0	_	
Address setup time	A0	t AW8		0	_	
System cycle time		tcyc8		240	_	
Write L pulse width	AMD	tCCLW		80	_	
Write H pulse width	/WR	tcchw		80	_	
Read L pulse width	/DD	t CCLR		140	_	Ns
Read H pulse width	- /RD	t CCHR		80		
Write Data setup time		tDS8		40	_	
Write Address hold time	D0 to D7	tDH8		0	_	
Read access time	יע טו טע ד	tACC8	CL = 100 pF	_	70	
Read Output disable time		tOH8	CL = 100 pF	5	50	

Table 25

(VDD = 2.7V, Ta = -30 to 85%)

Item	Signal	Symbol	Condition	Rat		Units
item	Signal	Symbol	Condition	Min.	Max.	Units
Address hold time		t AH8		0	_	
Address setup time	A0	t AW8		0	_	
System cycle time		tcyc8		400	_	
Write L pulse width	WR	tCCLW		220	_	
Write H pulse width	VVK	tcchw		180	_	
Read L pulse width	RD	t CCLR		220	_	ns
Read H pulse width	, KD	t CCHR		180	_	
Write Data setup time		tDS8		40	_	
Write Address hold time	D0 to D7	tDH8		0	_	
Read access time	ים טויטם י	tACC8	CL = 100 pF	_	140	
Read Output disable time		tOH8	CL = 100 pF	10	100	

Table 26

(VDD = 1.8V, Ta = -30 to 85%)

ltem	Cianal	Symbol	Condition	Rati		Units
item	Signal	Symbol	Condition	Min.	Max.	Ullits
Address hold time		t AH8		0	_	
Address setup time	A0	t AW8		0	_	
System cycle time		tcyc8		640	_	
Write L pulse width	WR	tCCLW		360	_	
Write H pulse width	VVIX	t CCHW		280	_	
Read L pulse width	RD	t CCLR		360	_	ns
Read H pulse width	, KD	t CCHR		280		
Write Data setup time		tDS8		80	_	
Write Address hold time	D0 to D7	tDH8		0	_	
Read access time	יט וויט טו	tACC8	CL = 100 pF	_	240	
Read Output disable time		tOH8	CL = 100 pF	10	200	

^{*1} The input signal rise time and fall time (tr, tf) is specified at 15 ns or less. When the system cycle time is extremely fast, $(t_r + t_f) \le (t_{CYC8} - t_{CCLW} - t_{CCHW})$ for $(t_r + t_f) \le (t_{CYC8} - t_{CCLR} - t_{CCHR})$ are specified.

^{*2} All timing is specified using 20% and 80% of VDD as the reference.

^{*3} tccLw and tccLR are specified as the overlap between /CS1 being "L" (CS2 = "H") and /WR and /RD being at the "L" level.

System Bus Read/Write Characteristics 2 (For the 6800 Series MPU)

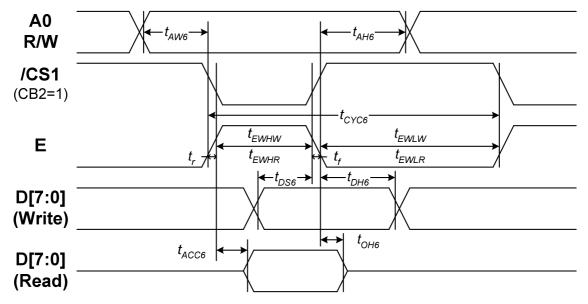


Figure 38

Table 27

(VDD = 3.3V, Ta = -30 to 85℃)

Item	Signal	Symbol	Condition	Rat	ing	Units
item	Signal	Symbol	Condition	Min.	Max.	Ullits
Address hold time		t AH6		0	_	
Address setup time	A0	tAW6		0	_	
System cycle time		tcyc6		240	_	
Enable L pulse width (WRITE)		t EWLW		80	_	
Enable H pulse width (WRITE)		tEWHW		80	_	
Enable L pulse width (READ)	E	t EWLR		80	_	ns
Enable H pulse width (READ)		t EWHR		140		
WRITE Data setup time		tDS6		40	_	
WRITE Address hold time	D0 to D7	tDH6		0	_	
READ access time		tACC6	CL = 100 pF	_	70	
READ Output disable time		tOH6	CL = 100 pF	5	50	

Table 28

(VDD = 2.7V, Ta = -30 to 85%)

Item	Signal	Symbol	Condition	Rat		Units
item	Signal	Symbol	Condition	Min.	Max.	Units
Address hold time		t AH6		0	_	
Address setup time	A0	t AW6		0	_	
System cycle time		tcyc6		400	_	
Enable L pulse width (WRITE)		t EWLW		220	_	
Enable H pulse width (WRITE)	_	tEWHW		180	_	
Enable L pulse width (READ)	E	t EWLR		220	_	ns
Enable H pulse width (READ)		t EWHR		180	_	
WRITE Data setup time		tDS6		40	_	
WRITE Address hold time	D0 to D7	tDH6		0	_	
READ access time		tACC6	CL = 100 pF	_	140	
READ Output disable time		tOH6	CL = 100 pF	10	100	

Table 29

(VDD = 1.8V, Ta = -30 to 85%)

ltem	Signal	Symbol	Condition	Rati		Units
item	Signal	Syllibol	Condition	Min.	Max.	Ullits
Address hold time		t AH6		0	_	
Address setup time	A0	t AW6		0	_	
System cycle time		tcyc6		640	_	
Enable L pulse width (WRITE)		t EWLW		360	_	
Enable H pulse width (WRITE)	E	tEWHW		280	_	
Enable L pulse width (READ)		t EWLR		360	_	ns
Enable H pulse width (READ)		t EWHR		280	_	
WRITE Data setup time		tDS6		80	_	
WRITE Address hold time	D0 to D7	tDH6		0	_	
READ access time	D0 to D7	tACC6	CL = 100 pF	_	240	
READ Output disable time		tOH6	CL = 100 pF	10	200	

^{*1} The input signal rise time and fall time (tr, tf) is specified at 15 ns or less. When the system cycle time is extremely fast, $\label{eq:tr+tf} (\text{tr}+\text{tf}) \leqq (\text{tCYC6}-\text{tEWLW}-\text{tEWHW}) \text{ for } (\text{tr}+\text{tf}) \leqq (\text{tCYC6}-\text{tEWLR}-\text{tEWHR}) \text{ are specified.}$

^{*3} tewlw and tewlr are specified as the overlap between $\overline{\text{CS1}}$ being "L" (CS2 = "H") and E.

The Serial Interface

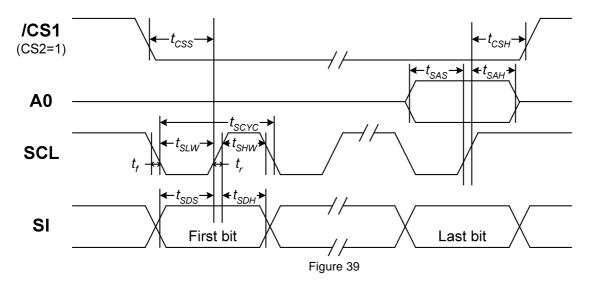


Table 30

(VDD = 3.3V, Ta = -30 to 85%)

			, ,,,	Rat		
Item	Signal	Symbol	Condition	Min.	Max.	Units
Serial Clock Period		tscyc		50	_	
SCL "H" pulse width	SCL	t _{SHW}		25	_	
SCL "L" pulse width		t _{SLW}		25	_	
Address setup time	40	t _{SAS}		20	_	
Address hold time	A0	t _{SAH}		10	_	ns
Data setup time	SI	t _{SDS}		20	_	
Data hold time	31	t _{SDH}		10	_	
CS-SCL time	CC	t _{CSS}		20	_	
CS-SCL time	CS	tcsH		40	_	

Table 31

(VDD = 2.7V, Ta = -30 to 85 €)

Item	Cianal	Symbol	Condition	Rat	ing	Units
item	Signal	Syllibol	Condition	Min.	Max.	Ullits
Serial Clock Period		t _{SCYC}		100	_	
SCL "H" pulse width	SCL	t _{SHW}		50	_	
SCL "L" pulse width		t _{SLW}		50	_	
Address setup time	40	t _{SAS}		30	_	
Address hold time	A0	t _{SAH}		20	_	ns
Data setup time	SI	t _{SDS}		30	_	
Data hold time	31	t _{SDH}		20	_	
CS-SCL time	CS	t _{CSS}		30	_	
CS-SCL time		t _{CSH}		60	_	

Table 32

(VDD = 1.8V, Ta = -30 to 85%)

Item	Cianal	Symbol	Condition	Rati		Units
item	Signal	Symbol	Condition	Min.	Max.	Units
Serial Clock Period		t _{SCYC}		200	_	
SCL "H" pulse width	SCL	t _{SHW}		80	_	
SCL "L" pulse width		t _{SLW}		80	_	
Address setup time	A0	t _{SAS}		60	_	
Address hold time	AU	t _{SAH}		30	_	ns
Data setup time	SI	t _{SDS}		60	_	
Data hold time	31	t _{SDH}		30	_	
CS-SCL time	CS	t _{CSS}		40	_	
CS-SCL time	03	t _{CSH}		100	_	

 $^{^{\}star}1$ The input signal rise and fall time (fr, ff) are specified at 15 ns or less. $^{\star}2$ All timing is specified using 20% and 80% of VDD as the standard.

Reset Timing

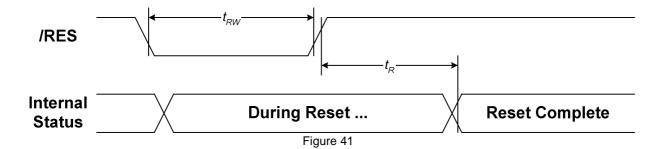


Table 36

(VDD = 3.3V, Ta = -30 to 85℃)

Item	Signal	nal Symbol Condition		Ì	Rating		
item	Signal	Зушьог	Condition	Min.	Тур.	Max.	Units
Reset time	/RES	t _R		_		1.0	μs
Reset "L" pulse width	/KES	t _{RW}		1.0	_	_	μs

Table 37

(VDD = 2.7V, Ta = -30 to 85 %)

Item	Signal	Symbol	Condition	,	Rating		Units
item	Signal	Зушьог	Condition	Min.	Тур.	Max.	Ullits
Reset time	/RES	t _R			_	2.0	μs
Reset "L" pulse width	/NES	t _{RW}		2.0	_	_	μs

Table 38

(VDD = 1.8V, Ta = -30 to 85%)

Item	Signal	Symbol	Condition		Rating		Units
item	Signal	Syllibol	Condition	Min.	Тур.	Max.	Ullits
Reset time	/RES	t _R			_	3.0	μs
Reset "L" pulse width	/KES	t _{RW}		3.0	_	_	μs

 $^{^{*}1}$ All timing is specified with 20% and 80% of VDD as the standard.

THE MPU INTERFACE (REFERENCE EXAMPLES)

ST7565P can be connected to either 80X86 series MPUs or 68000 series MPU. Moreover, by using the serial interface, it is possible to operate ST7565P with fewer signal pins.

The display area can be extended horizontally by using two ST7565P chips. Two chip select signals can be used to select the individual ICs to access.

(1) 8080 Series MPUs

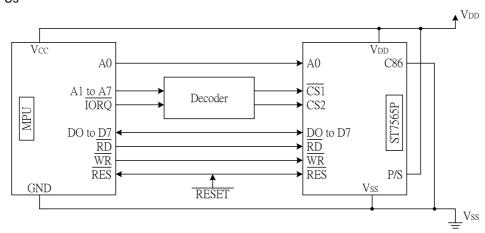


Figure 42-1

(2) 6800 Series MPUs

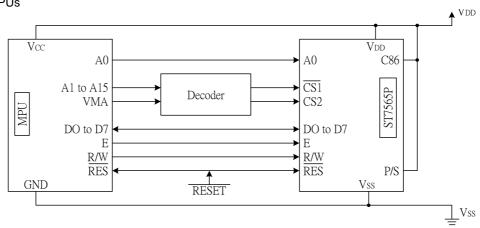


Figure 42-2

(3) Using the Serial Interface


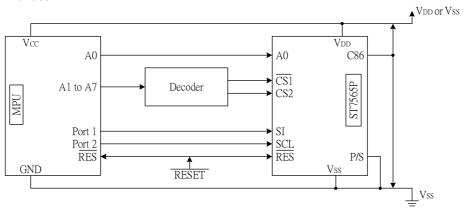


Figure 42-3


CONNECTIONS BETWEEN LCD DRIVERS (REFERENCE EXAMPLE)


The display area of LCD panel can be extended horizontally by using two ST7565P chips. Use a same equipment type.

(1) ST7565P (master) \rightarrow ST7565P (slave)

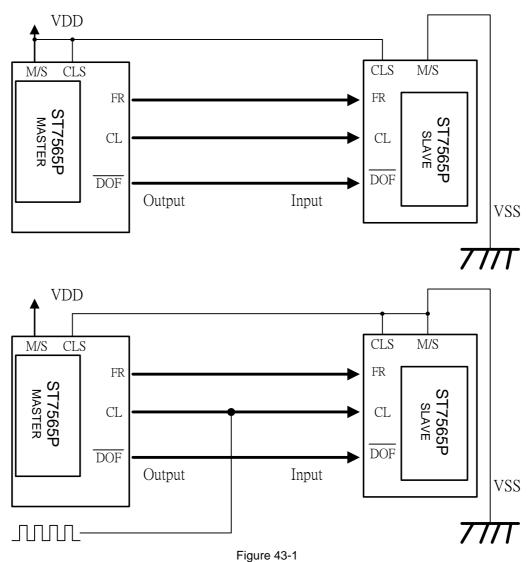

(2) Single-chip Structure

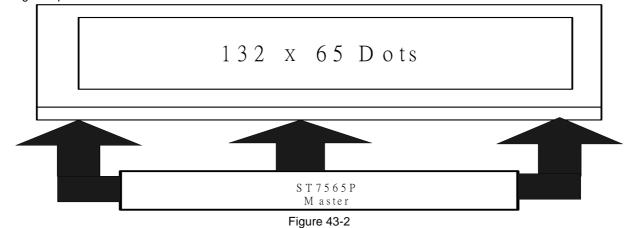

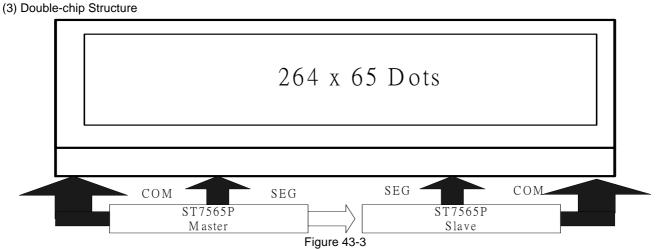

Change Notes

2004.05.05 Ver 1.2a			
2004.05.31 Ver 1.4 ● Add I/O pin ITO resistor limitation. 2004.06.24 Ver 1.5 ● Modify Page 2 PAD Diagram. 2004.07.14 Ver 1.6 ● Modify Page 19 V1-V4 voltage setting with different bias set command. 2004.07.14 Ver 1.6 ● Modify Page 19 V1-V4 voltage setting with different bias set command. 2005.09.22 Ver 1.7 ● Modify Page 19 V1-V4 voltage setting with different bias set command. 2005.09.22 Ver 1.7 ● Modify Page 2 information: Page 28; Modify Ta of DC Characteristics and Reset Timing; ● Remove redundant Page 28; Modify reference voltage to Vss (Page 58, 59). Modify reference voltage to Vss (Page 58, 59). Modify the description of DC characteristics. Modify function description. Redraw figures. Redraw figures. Redraw figures. Redraw figures. Put emphasis on the power OFF procedure (Page 56-57). Pix Ver 1.9a Fix Ver 1.8: Booster Circuit mistake (Booster X6, Page 32). 2008/02/19 Ver 1.9b Modify Page 2 information: PAD 115, 290 and alignment mark of PAD DIAGRAM. (Page 2). 2008/02/19 Ver 1.9c Modify Page 2 information: branker: alignment mark coordinate.			
2004.06.24 Ver 1.5 ■ Modify Page 2 PAD Diagram. 2004.07.14 Ver 1.6 ■ Modify Page 19 V1-V4 voltage setting with different bias set command. 2005.09.22 Ver 1.7 ■ Modify Feature Description; Modify operating temperature; Modify PIN Name: PAD 80~85 to TEST0~5; 2005.09.22 Ver 1.7 ■ Modify Absolute Maximum Ratings; Modify Ta of DC Characteristics and Reset Timing; Remove redundant Page 28; Modify reference voltage to Vss (Page 58, 59). 2006.02.13 ■ Modify the description of DC characteristics. 4 Modify function description. 5 Redraw figures. 6 Redraw figures. 7 Redraw figures. 8 Redraw figures. 9 Redraw figures. 9 Redraw figures. 1 Redraw figures. <td>2004.05.18</td> <td>Ver 1.3</td> <td></td>	2004.05.18	Ver 1.3	
2004.07.14 Ver 1.6	2004.05.31		Add I/O pin ITO resistor limitation.
Modify Feature Description; Modify operating temperature; Modify operating temperature; Modify Plan Name: PAD 80~85 to TEST0~5; Modify Absolute Maximum Ratings; Modify Ta of DC Characteristics and Reset Timing; Remove redundant Page 28; Modify the description of DC characteristics. Modify function description. Redraw figures. Redraw figures. Redraw the PAD DIAGRAM. Highlight the HPM (High Power Mode) description. Put emphasis on the power OFF procedure (Page 56-57). Put emphasis on the power OFF procedure (Page 56-57). Modify PAD pitch between COM[40] and alignment mark of PAD DIAGRAM. Page 2). Modify PAD pitch between COM[40] and alignment mark of PAD DIAGRAM. Page 2). Modify Page 2 information: PAD 115, 290 and alignment mark drawing. Modify Some description for easy understanding. Modify Some description in Absolute Maximum Ratings. Modify description in Absolute Maximum Ratings. Remove Static Indicator function and command. Reserved FRS pin function. Reserved FRS pin function. Page 2 (PAD 115, 290. PAD 115, 290. PAD	2004.06.24	Ver 1.5	 Modify Page 2 PAD Diagram.
Modify operating temperature; Modify PIN Name: PAD 80~85 to TEST0~5; Modify PIN Name: PAD 80~85 to TEST0~5; Modify Ta of DC Characteristics and Reset Timing; Remove redundant Page 28; Modify teference voltage to Vss (Page 58, 59). Modify the description of DC characteristics. Modify function description.	2004.07.14	Ver 1.6	 Modify Page 19 V1~V4 voltage setting with different bias set command.
Ver 1.7 Modify PIN Name: PAD 80~85 to TEST0~5; Modify Absolute Maximum Ratings; Modify Ta of DC Characteristics and Reset Timing; Remove redundant Page 28; Modify reference voltage to Vss (Page 58, 59). Modify the description of DC characteristics. Modify function description. Redraw figures. Redraw the PAD DIAGRAM. Highlight the HPM (High Power Mode) description. Put emphasis on the power OFF procedure (Page 56-57). 2006/03/10 Ver 1.9 Ver 1.9a Wer 1.9b Modify PAD pitch between COM[40] and alignment mark of PAD DIAGRAM. (Page 2). Modify Page 2 information: PAD 115, 290 and alignment mark drawing. Modify Some description for easy understanding. Modify Ver 1.9c mistake: alignment mark coordinate. Add V _{IN} and V _O in Absolute Maximum Ratings. Modify description in Absolute Maximum Ratings. Remove Static Indicator function and command. Reserved FRS pin function. Truncated Alignment mark coordinate. Rewrite some description. Update timing figures and naming. 2008/07/15 Ver 2.1 Modify Page 2 information: bump size of PAD 115, 290. Modify Page 2 information: bump size of PAD 115, 290.			Modify Feature Description;
Ver 1.7			 Modify operating temperature;
Modify Ta of DC Characteristics and Reset Timing; Remove redundant Page 28; Modify reference voltage to Vss (Page 58, 59). Modify the description of DC characteristics. Modify function description. Redraw figures. Redraw figures. Redraw the PAD DIAGRAM. Highlight the HPM (High Power Mode) description. Put emphasis on the power OFF procedure (Page 56-57). Fix Ver. 1.8: Booster Circuit mistake (Booster X6, Page 32). Modify PAD pitch between COM[40] and alignment mark of PAD DIAGRAM. (Page 2). Modify Page 2 information: PAD 115, 290 and alignment mark drawing. Modify some description for easy understanding. Modify Ver 1.9c Modify Ver 1.9c mistake: alignment mark coordinate. Add V _{IN} and V _O in Absolute Maximum Ratings. Remove Static Indicator function and command. Reserved FRS pin function. Truncated Alignment mark coordinate. Rewrite some description. Update timing figures and naming. 2008/07/15 Ver 2.1 Modify Page 2 information: bump size of PAD 115, 290. Modify page 2 information: bump size of PAD 115, 290.			 Modify PIN Name: PAD 80~85 to TEST0~5;
Remove redundant Page 28; Modify reference voltage to Vss (Page 58, 59). Modify the description of DC characteristics. Modify function description. Redraw figures. Redraw the PAD DIAGRAM. Highlight the HPM (High Power Mode) description. Put emphasis on the power OFF procedure (Page 56-57). Fix Ver 1.9a Wer 1.9a Wer 1.9a Wodify PAD pitch between COM[40] and alignment mark of PAD DIAGRAM. (Page 2). Modify Page 2 information: PAD 115, 290 and alignment mark drawing. Modify some description for easy understanding. Modify Ver 1.9c in Absolute Maximum Ratings. Modify description in Absolute Maximum Ratings. Remove Static Indicator function and command. Reserved FRS pin function. Truncated Alignment mark coordinate. Rewrite some description. Update timing figures and naming. Modify Page 2 information: bump size of PAD 115, 290. Modify description in bump size of PAD 115, 290. Modify description. Update timing figures and naming.	2005.09.22	Ver 1.7	 Modify Absolute Maximum Ratings;
 Modify reference voltage to Vss (Page 58, 59). Modify the description of DC characteristics. Modify function description. Redraw figures. Redraw the PAD DIAGRAM. Highlight the HPM (High Power Mode) description. Put emphasis on the power OFF procedure (Page 56-57). 2006/03/10 Ver 1.9 Fix Ver. 1.8: Booster Circuit mistake (Booster X6, Page 32). Modify PAD pitch between COM[40] and alignment mark of PAD DIAGRAM. (Page 2). Modify Page 2 information: PAD 115, 290 and alignment mark drawing. Modify Page 2 information for easy understanding. Modify Ver 1.9c Modify Page 2 information mark drawing at Ingian mark drawing modify description in Absolute Maximum Ratings. Remove Static Indicator function and command. Reserved FRS pin function. Truncated Alignment mark coordinate. Rewrite some description. Update timing figures and naming. Modify Page 2 information: bump size of PAD 115, 290. Modify Page 2 information: bump size of PAD 115, 290. 			 Modify Ta of DC Characteristics and Reset Timing;
Modify the description of DC characteristics.			Remove redundant Page 28;
Modify the description of DC characteristics.			 Modify reference voltage to Vss (Page 58, 59).
Per 1.8 Redraw figures. Redraw the PAD DIAGRAM. Highlight the HPM (High Power Mode) description. Put emphasis on the power OFF procedure (Page 56-57). Put emphasis on the power OFF procedure (Page 56-57). Put emphasis on the power OFF procedure (Page 56-57). Put emphasis on the power OFF procedure (Page 56-57). Put emphasis on the power OFF procedure (Page 56-57). Fix Ver 1.8: Booster Circuit mistake (Booster X6, Page 32). Modify PAD pitch between COM[40] and alignment mark of PAD DIAGRAM. (Page 2). Modify Page 2 information: PAD 115, 290 and alignment mark drawing. Modify some description for easy understanding. Modify Ver 1.9c mistake: alignment mark coordinate. Add V _{IN} and V _O in Absolute Maximum Ratings. Modify description in Absolute Maximum Ratings. Remove Static Indicator function and command. Reserved FRS pin function. Truncated Alignment mark coordinate. Rewrite some description. Update timing figures and naming. 2008/07/15 Ver 2.1 Modify Page 2 information: bump size of PAD 115, 290. Modify mistake of Status Read.			
Redraw the PAD DIAGRAM. Highlight the HPM (High Power Mode) description. Put emphasis on the power OFF procedure (Page 56-57). Put emphasis on the power OFF procedure (Page 56-57). Put emphasis on the power OFF procedure (Page 56-57). Fix Ver. 1.8: Booster Circuit mistake (Booster X6, Page 32). Modify PAD pitch between COM[40] and alignment mark of PAD DIAGRAM. (Page 2). Modify Page 2 information: PAD 115, 290 and alignment mark drawing. Modify some description for easy understanding. Modify Ver 1.9c mistake: alignment mark coordinate. Add V _{IN} and V _O in Absolute Maximum Ratings. Modify description in Absolute Maximum Ratings. Remove Static Indicator function and command. Reserved FRS pin function. Truncated Alignment mark coordinate. Rewrite some description. Update timing figures and naming. 2008/07/15 Ver 2.1 Modify Page 2 information: bump size of PAD 115, 290. Modify mistake of Status Read.			Modify function description.
 Redraw the PAD DIAGRAM. Highlight the HPM (High Power Mode) description. Put emphasis on the power OFF procedure (Page 56-57). 2006/03/10 Ver 1.9 Fix Ver. 1.8: Booster Circuit mistake (Booster X6, Page 32). Modify PAD pitch between COM[40] and alignment mark of PAD DIAGRAM. (Page 2). Modify Page 2 information: PAD 115, 290 and alignment mark drawing. Modify some description for easy understanding. Modify Ver 1.9c mistake: alignment mark coordinate. Add V_{IN} and V_O in Absolute Maximum Ratings. Modify description in Absolute Maximum Ratings. Remove Static Indicator function and command. Reserved FRS pin function. Truncated Alignment mark coordinate. Rewrite some description. Update timing figures and naming. 2008/07/15 Ver 2.1 Modify Page 2 information: bump size of PAD 115, 290. Modify mistake of Status Read. 	2006 02 12	Vor 1 9	Redraw figures.
Put emphasis on the power OFF procedure (Page 56-57). Put emphasis on the power OFF procedure (Page 56-57). Put emphasis on the power OFF procedure (Page 56-57). Fix Ver. 1.8: Booster Circuit mistake (Booster X6, Page 32). Modify PAD pitch between COM[40] and alignment mark of PAD DIAGRAM. (Page 2). Modify Page 2 information: PAD 115, 290 and alignment mark drawing. Modify some description for easy understanding. Modify Ver 1.9c mistake: alignment mark coordinate. Add V _{IN} and V _O in Absolute Maximum Ratings. Modify description in Absolute Maximum Ratings. Remove Static Indicator function and command. Reserved FRS pin function. Truncated Alignment mark coordinate. Rewrite some description. Update timing figures and naming. 2008/07/15 Ver 2.1 Modify Page 2 information: bump size of PAD 115, 290. Modify mistake of Status Read.	2000.02.13	vei i.o	Redraw the PAD DIAGRAM.
2006/03/10 Ver 1.9 Fix Ver. 1.8: Booster Circuit mistake (Booster X6, Page 32). 2007/11/06 Ver 1.9a Modify PAD pitch between COM[40] and alignment mark of PAD DIAGRAM. (Page 2). 2008/02/19 Ver 1.9b Modify Page 2 information: PAD 115, 290 and alignment mark drawing. Modify some description for easy understanding. Modify Ver 1.9c mistake: alignment mark coordinate. Add V _{IN} and V _O in Absolute Maximum Ratings. Modify description in Absolute Maximum Ratings. Remove Static Indicator function and command. Reserved FRS pin function. Truncated Alignment mark coordinate. Rewrite some description. Update timing figures and naming. 2008/07/15 Ver 2.1 Modify Page 2 information: bump size of PAD 115, 290. Modify mistake of Status Read.			 Highlight the HPM (High Power Mode) description.
2007/11/06Ver 1.9aModify PAD pitch between COM[40] and alignment mark of PAD DIAGRAM. (Page 2).2008/02/19Ver 1.9bModify Page 2 information: PAD 115, 290 and alignment mark drawing. Modify some description for easy understanding.2008/03/14Ver 1.9cModify Ver 1.9c mistake: alignment mark coordinate. Add V _{IN} and V _O in Absolute Maximum Ratings. Modify description in Absolute Maximum Ratings.2008/04/10Remove Static Indicator function and command. Reserved FRS pin function. Truncated Alignment mark coordinate. Rewrite some description. Update timing figures and naming.2008/07/15Ver 2.1Modify Page 2 information: bump size of PAD 115, 290.2009/02/23Ver 2.1aModify mistake of Status Read.			 Put emphasis on the power OFF procedure (Page 56-57).
Ver 1.9b Wodify Page 2 information: PAD 115, 290 and alignment mark drawing. Modify some description for easy understanding. Modify Ver 1.9c mistake: alignment mark coordinate.	2006/03/10	Ver 1.9	
Ver 1.9b Modify Page 2 information: PAD 115, 290 and alignment mark drawing. Modify some description for easy understanding. Modify Ver 1.9c mistake: alignment mark coordinate. Add V _{IN} and V _O in Absolute Maximum Ratings. Modify description in Absolute Maximum Ratings. Remove Static Indicator function and command. Reserved FRS pin function. Truncated Alignment mark coordinate. Rewrite some description. Update timing figures and naming. 2008/07/15 Ver 2.1 Modify Page 2 information: bump size of PAD 115, 290. Modify mistake of Status Read.	2007/11/06	Vor 1 00	 Modify PAD pitch between COM[40] and alignment mark of PAD DIAGRAM.
Modify some description for easy understanding. Modify Ver 1.9c mistake: alignment mark coordinate. Add V _{IN} and V _O in Absolute Maximum Ratings. Modify description in Absolute Maximum Ratings. Remove Static Indicator function and command. Reserved FRS pin function. Truncated Alignment mark coordinate. Rewrite some description. Update timing figures and naming. 2008/07/15 Ver 2.1 Modify Page 2 information: bump size of PAD 115, 290. Modify mistake of Status Read.	2007/11/00	vei i.sa	
Modify some description for easy understanding. Modify Ver 1.9c mistake: alignment mark coordinate. Add V _{IN} and V _O in Absolute Maximum Ratings. Modify description in Absolute Maximum Ratings. Remove Static Indicator function and command. Reserved FRS pin function. Truncated Alignment mark coordinate. Rewrite some description. Update timing figures and naming. 2008/07/15 Ver 2.1 Modify Page 2 information: bump size of PAD 115, 290. Modify mistake of Status Read.	2008/02/10	Vor 1 0h	 Modify Page 2 information: PAD 115, 290 and alignment mark drawing.
2008/03/14 Ver 1.9c Add V _{IN} and V _O in Absolute Maximum Ratings. Modify description in Absolute Maximum Ratings. Remove Static Indicator function and command. Reserved FRS pin function. Truncated Alignment mark coordinate. Rewrite some description. Update timing figures and naming. 2008/07/15 Ver 2.1 Modify Page 2 information: bump size of PAD 115, 290. Modify mistake of Status Read.	2000/02/19	V GI 1.30	
 Modify description in Absolute Maximum Ratings. Remove Static Indicator function and command. Reserved FRS pin function. Truncated Alignment mark coordinate. Rewrite some description. Update timing figures and naming. Wer 2.1 Modify Page 2 information: bump size of PAD 115, 290. Modify mistake of Status Read. 			 Modify Ver 1.9c mistake: alignment mark coordinate.
Remove Static Indicator function and command. Reserved FRS pin function. Truncated Alignment mark coordinate. Rewrite some description. Update timing figures and naming. Ver 2.1 Modify Page 2 information: bump size of PAD 115, 290. Modify mistake of Status Read.	2008/03/14	Ver 1.9c	
 Ver 2.0 Ver 2.0 Reserved FRS pin function. Truncated Alignment mark coordinate. Rewrite some description. Update timing figures and naming. 2008/07/15 Ver 2.1 Modify Page 2 information: bump size of PAD 115, 290. Modify mistake of Status Read. 			 Modify description in Absolute Maximum Ratings.
2008/04/10 Ver 2.0 Truncated Alignment mark coordinate. Rewrite some description. Update timing figures and naming. 2008/07/15 Ver 2.1 Modify Page 2 information: bump size of PAD 115, 290. 2009/02/23 Ver 2.1a Modify mistake of Status Read.			
Rewrite some description. Update timing figures and naming. 2008/07/15 Ver 2.1 • Modify Page 2 information: bump size of PAD 115, 290. 2009/02/23 Ver 2.1a • Modify mistake of Status Read.			
Update timing figures and naming. 2008/07/15 Ver 2.1 ● Modify Page 2 information: bump size of PAD 115, 290. 2009/02/23 Ver 2.1a ● Modify mistake of Status Read.	2008/04/10	Ver 2.0	
2008/07/15 Ver 2.1 ● Modify Page 2 information: bump size of PAD 115, 290. 2009/02/23 Ver 2.1a ● Modify mistake of Status Read.			
2009/02/23 Ver 2.1a ● Modify mistake of Status Read.			
	2008/07/15		
2000/00/14 Vor 2.1b Modify the mistake of The Poset Circuit	2009/02/23	Ver 2.1a	,
2003/03/14 Vel 2.10 Viloully the inistake of the Keset Circuit.	2009/09/14	Ver 2.1b	Modify the mistake of The Reset Circuit.