Summer Term 2020

### Prof. Dr.-Ing. Bernd-Christian Renner | Research Group smartPORT (E-EXK2)

# **Peripherals**

#### Building and using Libraries for In- and Output

May 5<sup>th</sup>, 2020



The work on this sheet should be finished within **two** lab sessions!

In this and the upcoming exercises, you will create several drivers and modules for the peripherals of the SES board. Those will be reused in later (also graded) exercises to create more and more complex systems. To enable reuse of all the basic functionality, you will put your drivers (starting with LED, Buttons and ADC in this exercise) into a library, which will be referenced by upcoming projects as needed. Additionally, you will learn to include and use precompiled libraries for textual outputs using UART and LCD.



Even though this exercise is not graded, the created library is part of later submissions and the grading, so coding style is important!

#### Task 2.1: A SES library

As a first step, download and extract the sheet2\_templates.zip (libuart.a, liblcd.a, ses\_button.h, ses\_common.h, ses\_uart.h, ses\_lcd.h, ses\_led.h, and ses\_led.c) archive from the Stud.IP page and copy the files to folder ./lib/ses/ in your workspace (please use the prepared workspace from your Git repository as described in Task 1.1).

For the next lab sessions, you should upload your sources to your Git repository. Instructions can be found in the Git Tutorial. Please make sure that you only commit source and header files.



Keep the structure of your lib/ses directory flat, i.e., do not use subdirectories there!

### Task 2.2: Add a new Project to your Workspace

Testing is an important part of the software development process. For this reason, you will write a very basic test application that will be filled with further functionality in the next tasks. The applications should be located in own projects. You are free to decide to use one folder for this sheet (task\_2) or one folder per task, e. g., task\_2-3 and task\_2-6.



The main-function of each project must be in the file main.c in the folder src.

To create a new project you have to follow these steps:

- Create a new folder in your workspace, e. g., task\_2.
- Copy the file *platformio.ini* from a previous project to this folder.
- Add the folder *src* including the file *main.c* to the folder from the first step.
- Open Visual Studio Code, and add the folder from the first step to your workspace (File -> Add Folder to Workspace..).
- Reload Visual Studio Code. Afterwards, the folders .pio and .vscode should appear.

Figure 1 depicts two possible workspace structures.

The template folder (sheet2 templates.zip) contains two precompiled libraries (libuart.a, liblcd.a). To link these libraries extent the platformio.ini file to

Summer Term 2020

Prof. Dr.-Ing. Bernd-Christian Renner | Research Group smartPORT (E-EXK2)

```
[env:ses_avr]
platform = atmelavr
board_mcu = atmegal28rfa1
board_f_cpu = 16000000L

lib_extra_dirs = ../lib
build_flags =
    -L../lib/ses/
    -l uart
    -l lcd
```

```
      > task_-1-1

      > task_1-2

      > task_1-3

      > task_1-4to6

      ✓ lib

      ✓ ses

      E libuart.a
      U

      E README.txt
      U

      C ses_adc.h
      U

      C ses_button.h
      U

      C ses_fed.h
      U

      C ses_led.h
      U

      C ses_led.h
      U

      V task_2
      > pio

      > vscode
      ✓ src

      C main.c
      U

      Ø platformio.ini
      U
```

(a) Workspace with one project per sheet



(b) Workspace with one project per task

Figure 1: Examples for possible workspace structures in Visual Studio Code.

### Task 2.3: Start-up Messages

- Open the *main.c* file in the folder *src* in your current project.
- Include ses\_lcd.h and ses\_uart.h in the main.c.

```
#include "ses_lcd.h"
#include "ses_uart.h"
```

■ Add the lines

```
uart_init(57600);
lcd_init();
```

to the initialization section of the main function, followed by an empty infinite while loop.

■ To print a message to UART and LCD, use the statements

# Summer Term 2020

Prof. Dr.-Ing. Bernd-Christian Renner | Research Group smartPORT (E-EXK2)

```
fprintf(uartout, "START\n");}
fprintf(lcdout, "START");
```

Don't forget adding a delay when using the outputs in the while loop.

■ After this you can compile and flash to test the program. You can restart your program using the **Reset** button on the SES Development Board (or the **Reset MCU** in the remote builder interface).

After compiling and flashing, the microcontroller sends the message via the UART to the PC. To see the serial output of your SES board, you have to press **Play** in the remote builder interface.

- There is a small delay of the image from the webcam. You can switch on and off the light in the control environment to get a feeling for it.
- The UART and LCD libraries define FILE descriptors, which can be used together with fprintf. If you want to use printf, then add the line stdout=uartout; right after the initialization of the UART. Please note that you can either use the UART or the LCD with printf, but not both at the same time.

#### Task 2.4: Writing an LED Device Driver

In the first exercise one LED was accessed using bit operations. Obviously, this is not very handy. Furthermore, this way of using LEDs is no good solution from a software-engineering point of view at all. As a result, we will develop a driver for using the LEDs. The driver consists of three parts: the header files  $ses\_common.h$ ,  $ses\_led.h$  and the source file  $ses\_led.c$ . These files should be copied to your newly created ses library project.

The given header files already define all constants, e.g., the port and the LED pins. Furthermore, the header files contain all function declarations and the desired functionality of the functions. In this exercise you have to implement the given function prototypes! Empty functions are already present in ses led.c.

- Use the macro DDR\_REGISTER(x) from *ses\_common.h* to calculate the data direction register for a given port x. This macro helps to avoid redundancy.
- The LEDs are *active low* (a logical *high* will turn them off).
- For each operation ensure that all other bits remain unchanged!

#### Task 2.5: Buttons

The states of the two buttons on the SES board can be read as digital signals. The button of the rotary encoder is located on the lower right of the module and is connected to pin 6 of port B. The joystick button is located on the lower left and is connected to pin 7 of port B.

- In the library project, create a file <u>ses\_button.c</u> and provide the implementation of the functions declared in the <u>ses\_button.h</u> (from template folder).
- Create macros for the button connection analogously to the ones in the ses\_led.c.
- The function

```
void button_init(void)
```

initializes the button library.

Summer Term 2020

Prof. Dr.-Ing. Bernd-Christian Renner | Research Group smartPORT (E-EXK2)

- ◆ Configure the pin of each button as an input (write a 0 to the corresponding bit of the data direction register (DDRB))
- ◆ Activate the internal pull-up resistor for each of the buttons <sup>1</sup> (write a 1 to the corresponding bits of the buttons' port PORTB)
- When the button is pressed, the corresponding pin is grounded and the input can be read as logic *low* level via PINB. The functions

```
bool button_isJoystickPressed(void)
bool button_isRotaryPressed(void)
```

return the status of the joystick and rotary button.



When setting or clearing bits in any register, be sure to leave all other bits unchanged!



You can use the PIN\_REGISTER(x) and DDR\_REGISTER(x) macro from *ses\_common.h* to calculate the pin and data direction register for a given port x. These macros help to avoid redundancy.

#### Task 2.6: Superloop

Extend the file *main.c* from the application project so that it conducts the following tasks:

- While the rotary button is pressed, light up the red LED
- While the joystick button is pressed, light up the green LED
- Show the seconds since reset on the LCD
- The buttons in the remote builder interface have the same behavior compared to the simple buttons. When the button is pressed, a relay in the lab is closed. This behavior enables to hold the button over a longer period.
- This subtask is mainly meant to illustrate the pain of superloops. Unless you provide a very clever implementation, the buttons will show bad responsiveness and/or the timings are not accurate. Do not bother yourself with this too much, you will learn about a much better approach in future exercise.

### **Analog to Digital Converter**

The Analog-to-Digital Converter converts an analog input voltage to a digital value. The ATmega128RFA1 features an ADC with 10 bit resolution, yielding  $2^{10}$  distinct digital values, which correspond to analog voltages<sup>2</sup>. The ADC is connected via a multiplexer to one of 8 external channels and a few internal channels. On the SES board, the following peripherals are connected to the ADC:

- A temperature sensor at pin 2 of port F.
- A light sensor at pin 4 of port F.
- The joystick at pin 5 of port F.
- A microphone is connected differential to the pins 0 and 1 of port F.<sup>3</sup>

<sup>&</sup>lt;sup>1</sup>A pull-up resistor ensures a logic *high* level in the electric circuit, when a high-impedance device like an open switch or button is connected.

<sup>&</sup>lt;sup>2</sup>In this exercise, a reference voltage of 1.6 V is used, thus the ADC output corresponds to analog voltages from the interval  $[0\ V, 1.6\ V - \frac{1.6V}{210}]$ 

<sup>&</sup>lt;sup>3</sup>The microphone is not used in this exercise, however

### **Summer Term 2020** Prof. Dr.-Ing. Bernd-Christian Renner | Research Group smartPORT (E-EXK2)

All components output an analog voltage between 0 V and 1.6 V. More information is provided in the ATmega128RFA1 datasheet in chapter 27. ADC - Analog to Digital Converter.

#### Task 2.7: ADC (Initialization and reading)

Write an abstraction layer for the ADC of the SES board according to the following description! The initialization of the ADC should be done in

void adc\_init(void)

- Configure the data direction registers (temperature, light, microphone, joystick) and deactivate their internal pull-up resistors.
- Disable power reduction mode for the ADC module. This is done by clearing the PRADC bit in register PRR0.
- To define the used reference voltage, set the macro ADC\_VREF\_SRC (in the file ses\_adc.c). The reference voltage should be set to 1.6 V.
- Use the ADC\_VREF\_SRC macro to configure the voltage reference in register ADMUX.
- Configure the ADLAR bit, which should set the ADC result right adjusted.
- The ADC operates on its own clock, which is derived from the CPU clock via a prescaler. It must be 2 MHz or less for full 10 bit resolution. Find an appropriate prescaler setting, which sets the operation within this range at fastest possible operation! Set the prescaler in the macro ADC\_PRESCALE in the corresponding header file.
- Use the macro ADC\_PRESCALE to configure the prescaler in register ADCSRA.
- Do not select auto triggering (ADATE).
- Enable the ADC (ADEN).

After the initialization the ADC is ready for the voltage conversion. The following function triggers the conversion and returns the result:

```
uint16_t adc_read(uint8_t adc_channel)
```

adc\_channel contains the sensor type (enum ADChannels). By now, the ADC is configured in a run once mode, which will be started for the configured channel in ADMUX. If an invalid channel is provided as parameter, ADC\_INVALID\_CHANNEL shall be returned.

A conversion can be started by setting ADSC in ADCSRA. The conversion will start in parallel to program execution. When the conversion is finished, the microcontroller hardware will reset the ADSC bit to zero. You can interrupt the program flow and use polling to check the ADSC bit.<sup>4</sup> The result is readable from the 16 bit register ADC, which is automatically combined from the 8 bit registers ADCL and ADCH.



If you use ADCL and ADCH to read out the ADC, make sure that you always read from ADCH after you have read from ADCL, otherwise the data register will be blocked and conversion results are lost.

<sup>&</sup>lt;sup>4</sup>A better possibility would be to use interrupts to avoid stopping the program flow or to put the controller in noise reduction mode. The concept of interrupts will be introduced in the next exercise.

Summer Term 2020


Prof. Dr.-Ing. Bernd-Christian Renner | Research Group smartPORT (E-EXK2)

#### Task 2.8: ADC Peripheral Abstractions

Usually, the raw ADC value is not very useful. Instead provide abstractions to calculate the corresponding physical measure for the temperature sensor. For the light sensor, use the raw value. For testing purposes, write the results to the UART or the LCD.

```
int16_t adc_getTemperature(void)
```

For the temperature sensor, the ADC values have to be converted to  $^{\circ}$ C. The component used for temperature measurement is an NTC thermistor with a temperature dependent resistance  $R_{\rm T}$ . It is connected to the ADC as given in the following circuit diagram.

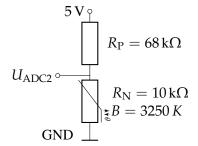

According to the voltage divider rule, the voltage  $U_{ADC2}$  at ADC pin 2 is

$$U_{\text{ADC2}} = 5 \,\text{V} \cdot \frac{R_{\text{T}}}{R_{\text{T}} + R_{\text{P}}}.$$

Thereby, the resistance of the thermistor can be calculated and used to get the current temperature in Kelvin as given by

$$T = \frac{B \cdot 298.15 \,\mathrm{K}}{B + \ln\left(\frac{R_{\mathrm{T}}}{R_{\mathrm{N}}}\right) \cdot 298.15 \,\mathrm{K}},$$

with B and  $R_{\rm N}$  being characteristics of the thermistor as given in the schematic<sup>5</sup>. Your task is to provide a function that converts the raw ADC value to the corresponding temperature. The unit of the return value int16\_t shall be  $\frac{1}{10}$  °C, i.e., a value of 10 represents 1.0 °C.

However, since the computational power of the ATmega128RFA1 is limited and floating point operations are quite expensive, linear interpolation should be used instead of applying above formulas directly. For this purpose, calculate the raw ADC values for two temperature values (e.g.  $40^{\circ}$ C and  $20^{\circ}$ C) and use the following code to calculate interpolated values. A suitable ADC\_TEMP\_FACTOR is necessary to avoid rounding the slope to zero.

```
int16_t adc = adc_read(ADC_TEMP_CH);
int16_t slope = (ADC_TEMP_MAX - ADC_TEMP_MIN) / (ADC_TEMP_RAW_MAX - ADC_TEMP_RAW_MIN);
int16_t offset = ADC_TEMP_MAX - (ADC_TEMP_RAW_MAX * slope);
return (adc * slope + offset) / ADC_TEMP_FACTOR;
```

Extend your superloop with the following functionality:

■ Every 2500 milliseconds, read the values of the temperature and the light and write them to the UART.

The light sensor has a low resolution. Do not worry about noisy raw values. As a practical example, the sensor could be used to turn the LCD light on and off.

 $<sup>^{5}</sup>R_{\mathrm{T}}$  is the resistance of the thermistor at the temperature T (in K).  $R_{\mathrm{N}}$  is the resistance at a reference temperature of  $T=298.15\,\mathrm{K}=25\,\mathrm{^{\circ}C}$ .

# Task 2.9: Logic Analyzer (optional)

In the previous task it was required to display new ADC values every 2.5 seconds. To achieve this with the function \_delay\_ms, the execution time of other functions (ADC read and LCD display) are neglected. However, these function has an execution time in the millisecond range.

One approach to measure the execution time on an embedded device is to indicate start and stop of commands using output signals (e.g. LEDs) and then measure the time with an external device such as an oscilloscopes or logic analyzers.

Due to the restrictions of the remote builder interface, the following code was flashed to a SES board (an hex image version is also available in Stud.IP).

```
#include <stdint.h>
#include <util/delay.h>
#include "ses_lcd.h"
#include "ses_uart.h"
#include "ses_led.h"
#define BAUDRATE 57600
/**
* Print the time since boot on the LCD
* @timeBoot Time since boot in seconds
void printTime(uint16_t timeBoot) {
    lcd_clear();
    // first row
    lcd_setCursor(0,0);
    fprintf(lcdout, "Time since reset:");
    // second row
    lcd_setCursor(0,1);
    fprintf(lcdout,"%4u seconds",timeBoot);
}
* Write the time since boot to the UART
* @timeBoot Time since boot in seconds
void sendTime(uint16_t timeBoot) {
    fprintf(uartout, "%4u seconds since reset.\n", timeBoot);
}
/**
* main function
int main (void) {
    led_redInit();
    led_greenInit();
    led_yellowInit();
    lcd_init();
    uart_init(BAUDRATE);
    uint16_t timeBoot = 0; // time since boot in seconds
```

**Summer Term 2020** 

Prof. Dr.-Ing. Bernd-Christian Renner | Research Group smartPORT (E-EXK2)

```
// set all LED outputs to a low level
    led_redOn();  // pin PG1
led_yellowOn();  // pin PF7
led_greenOn();  // pin PF6
     // superloop
    while (1) {
         // 1 second delay
         led_redOff();
         _{\rm delay\_ms(1000)};
         timeBoot++;
         led_redOn();
         // print on LCD
         led_yellowOff();
         printTime(timeBoot);
         led_yellow0n();
         // write to UART
         led_greenOff();
         sendTime(timeBoot);
         led_greenOn();
    }
     return 0;
}
```



Figure 2: Setup to measure timings with the help of a logic analyzer.

**Summer Term 2020** 

## Prof. Dr.-Ing. Bernd-Christian Renner | Research Group smartPORT (E-EXK2)

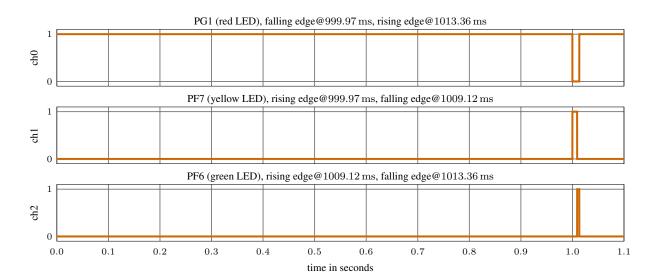


Figure 3: Recorded logic channels (trigger was set to a rising edge on channel 0).

In addition, a logic analyzer was connected to the LED pins (see Fig. 2) and recorded one cycle of the while-loop. The logic analyzer sampled with 10 MHz and the trigger was set to start the recording, when a rising edge on channel 0 (connected to pin PG1) was detected. Figure 3 depicts the measured signals.

Try to give an answer to the following points:

- What is the drift of the implemented timer?
- What happens, if you extent the number of tasks in the superloop?
- Think about a better implementation.