MICROCONTROLLER AND EMBEDDED SYSTEM (18CS44)

MODULE - 1

1.1 MICROPROCESSORS AND MICROCONTROLLERS

Microprocessor		Microcontrolle	r	
Arithmetic and logic				
unit		ALU	Timer/ Counter	IO Ports
Accumulator Working Registers		Accumulator Registers	Internal ROM	Interrupt Circuits
1 Counter		Internal RAM		Clock
Circuit	1 D : 4	Stack Pointer		
	ck Pointer		Program Counter	.
	rupt circuit			
Block diagram of microprocessor		Block diagram of microcontroller		
Microprocessor contains ALU, Government registers, stack pointer, program timing circuit, interrupt circuit		-		n it has built in
It has many instructions to movememory and CPU	ve data between	It has few inst memory and CP		ve data between
Few bit handling instruction		It has many bit handling instructions		
Less number of pins are multifunctional		More number of pins are multifunctional		
Single memory map for data and code (program)		Separate memory map for data and code (program)		
Access time for memory and IO a	re more	Less access time for built in memory and IO.		

Microprocessor based system requires additional hardware	It requires less additional hardwares
More flexible in the design point of view	Less flexible since the additional circuits which is residing inside the microcontroller is fixed for a particular microcontroller
Large number of instructions with flexible addressing modes	Limited number of instructions with few addressing modes

1.2. RISC AND CISC CPU ARCHITECTURES

Microcontrollers with small instruction set are called reduced instruction set computer (RISC) machines and those with complex instruction set are called complex instruction set computer (CISC). Intel 8051 is an example of CISC machine whereas microchip PIC 18F87X is an example of RISC machine.

RISC	CISC
Instruction takes one or two cycles	Instruction takes multiple cycles
Only load/store instructions are used to access memory	In additions to load and store instructions, memory access is possible with other instructions also.
Instructions executed by hardware	Instructions executed by the micro program
Fixed format instruction	Variable format instructions
Few addressing modes	Many addressing modes
Few instructions	Complex instruction set
Most of the have multiple register banks	Single register bank
Highly pipelined	Less pipelined
Complexity is in the compiler	Complexity in the microprogram

1.2. HARVARD & VON- NEUMANN CPU ARCHITECTURE

Von-Neumann (Princeton architecture)	Harvard architecture		
Data Program Memory Data Address Bus Data Memory	Data Data Memory Address Bus Program Memory Address Bus		
Von-Neumann (Princeton architecture)	Harvard architecture		
It uses single memory space for both instructions and data.	It has separate program memory and data memory		
It is not possible to fetch instruction code and data	Instruction code and data can be fetched simultaneously		
Execution of instruction takes more machine cycle	Execution of instruction takes less machine cycle		
Uses CISC architecture	Uses RISC architecture		
Instruction pre-fetching is a main feature	Instruction parallelism is a main feature		
Also known as control flow or control driven computers	Also known as data flow or data driven computers		
Simplifies the chip design because of single memory space	Chip design is complex due to separate memory space		
Eg. 8085, 8086, MC6800	Eg. General purpose microcontrollers, special DSP chips etc.		

1.3 COMPUTER SOFTWARE

A set of instructions written in a specific sequence for the computer to solve a specific task is called a program and software is a collection of such programs.

The program stored in the computer memory in the form of binary numbers is called machine instructions. The *machine language* program is called *object code*.

An assembly language is a mnemonic representation of machine language. Machine language and assembly language are low level languages and are processor specific.

The assembly language program the programmer enters is called *source code*. The source code (assembly language) is translated to object code (machine language) using *assembler*.

Programs can be written in *high level languages* such as C, C++ etc. High level language will be converted to machine language using *compiler or interpreter*. Compiler reads the entire program and translate into the object code and then it is executed by the processor. Interpreter takes one statement of the high level language as input and translate it into object code and then executes.


1.4 THE 8051 ARCHITECTURE Introduction

Salient features of 8051 microcontroller are given below.

- Eight bit CPU
- On chip clock oscillator
- 4Kbytes of internal program memory (code memory) [ROM]
- 128 bytes of internal data memory [RAM]
- 64 Kbytes of external program memory address space.
- 64 Kbytes of external data memory address space.
- 32 bi directional I/O lines (can be used as four 8 bit ports or 32 individually addressable I/O lines)
- Two 16 Bit Timer/Counter: T0, T1
- Full Duplex serial data receiver/transmitter

 Four Register banks with 8 registers in each bank.
- Sixteen bit Program counter (PC) and a data pointer (DPTR)
- 8 Bit Program Status Word (PSW)
- 8 Bit Stack Pointer
- Five vector interrupt structure (RESET not considered as an interrupt.)
- 8051 CPU consists of 8 bit ALU with associated registers like accumulator 'A', B register, PSW, SP, 16 bit program counter, stack pointer.
- ALU can perform arithmetic and logic functions on 8 bit variables.
- 8051 has 128 bytes of internal RAM which is divided into Working registers [00 1F] Bit addressable memory area [20 2F] General purpose memory area (Scratch pad memory) [30-7F]

The 8051 architecture.

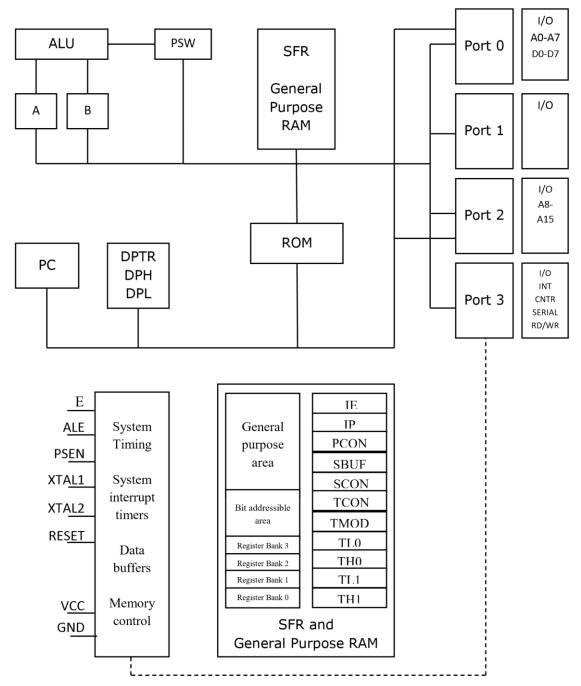

- 8051 has 4 K Bytes of internal ROM. The address space is from 0000 to 0FFFh. If the program size is more than 4 K Bytes 8051 will fetch the code automatically from external memory.
- Accumulator is an 8 bit register widely used for all arithmetic and logical operations.
 Accumulator is also used to transfer data between external memory. B register is used along
 with Accumulator for multiplication and division. A and B registers together is also called
 MATH registers.
- PSW (Program Status Word). This is an 8 bit register which contains the arithmetic status of ALU and the bank select bits of register banks.

CY AC F0	RS1 RS0	OV - P
----------	---------	--------

CY - carry flag

AC - auxiliary carry flag


FO - available to the user for general purpose

RS1,RS0 - register bank select bits

OV - overflow P - parity

- Stack Pointer (SP) it contains the address of the data item on the top of the stack. Stack may reside anywhere on the internal RAM. On reset, SP is initialized to 07 so that the default stack will start from address 08 onwards.
- Data Pointer (DPTR) DPH (Data pointer higher byte), DPL (Data pointer lower byte). This is a 16 bit register which is used to furnish address information for internal and external program memory and for external data memory.
- Program Counter (PC) 16 bit PC contains the address of next instruction to be executed. On reset PC will set to 0000. After fetching every instruction PC will increment by one.

1.5 PIN DIAGRAM

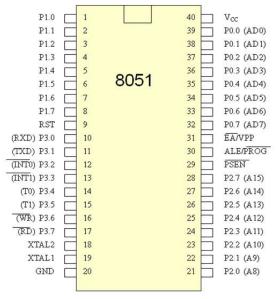

Pinout Description

Pins 1-8	PORT 1. Each of these pins can be configured as an input or an output.			
Pin 9	RESET . A logic one on this pin disables the microcontroller and clears the contents of most registers. In other words, the positive voltage on this pin resets the microcontroller. By applying logic zero to this pin, the program starts execution from the beginning.			
Pins10-17	PORT 3 . Similar to port 1, each of these pins can serve as general input or output. Besides, all of them have alternative functions			

Pin 10	RXD. Serial asynchronous communication input or Serial synchronous communication output.				
Pin 11	TXD. Serial asynchronous communication output or Serial synchronous communication clock output.				
Pin 12	INTO.External Interrupt 0 input				
Pin 13	INT1. External Interrupt 1 input				
Pin 14	TO. Counter 0 clock input				
Pin 15	T1. Counter 1 clock input				
Pin 16	WR. Write to external (additional) RAM				
Pin 17	RD. Read from external RAM				
Pin 18, 19	XTAL2, XTAL1. Internal oscillator input and output. A quartz crystal which specifies operating frequency is usually connected to these pins.				
Pin 20	GND. Ground.				
Pin 21-28	Port 2 . If there is no intention to use external memory then these port pins are configured as general inputs/outputs. In case external memory is used, the higher address byte, i.e. addresses A8-A15 will appear on this port. Even though memory with capacity of 64Kb is not used, which means that not all eight port bits are used for its addressing, the rest of them are not available as inputs/outputs.				
Pin 29	PSEN. If external ROM is used for storing program then a logic zero (0) appears on it every time the microcontroller reads a byte from memory.				
Pin 30	ALE. Prior to reading from external memory, the microcontroller puts the lower address byte (A0-A7) on P0 and activates the ALE output. After receiving signal from the ALE pin, the external latch latches the state of P0 and uses it as a memory chip address. Immediately after that, the ALE pin is returned its previous logic state and P0 is now used as a Data Bus.				
Pin 31	EA . By applying logic zero to this pin, P2 and P3 are used for data and address transmission with no regard to whether there is internal memory or not. It means that even there is a program written to the microcontroller, it will not be executed. Instead, the program written to external ROM will be executed. By applying logic one to the EA pin, the microcontroller will use both memories, first internal then external (if exists).				
Pin 32-39	PORT 0 . Similar to P2, if external memory is not used, these pins can be used as general inputs/outputs. Otherwise, P0 is configured as address output (A0-A7) when the ALE pin is driven high (1) or as data output (Data Bus) when the ALE pin is driven low (0).				
Pin 40	VCC. +5V power supply.				

Microcontrollers

1.6 MEMORY ORGANIZATION

Internal RAM organization

	R7 1F				7F			78
	R6 1E	3	I					
	R5 1D	│ ≱		2F	77			70
11/1:		BANK 3		2E			-	
Microco	R3 1B	$ \mathbf{B} $		20	6F			68
	R2 1A			2D	OF			00
	R1 19			2C	67			60
	R0 18				5F			58
	R7 17				ЭГ			30
	R6 16	2		2B	57			50
	R5 15	🛱		2A				
	R4 14	BANK 2						
	R3 13	B.		29	4F		4	48
	R2 12							
	R1 11			28	47			40
	R0 10							
	R7 0F		· I	27	3F	\vdash	-	38
	R6 0E	-						
	R5 0D	BANK		26	37			30
	R4 0C	¥	•					
	R3 0B	B		25	2F	-	+	28
	R2 OA	ш						
	R1 09		ı	24	27			20
	R0 08							
	R7 07		i	23	1F			18
	R6 06	BANK 0	1					
	R5 05	😤	ı	22	17			10
	R4 04	[
	R3 03	^m	Ī	21	0F		\perp	08
	R2 02							
	R1 01				07			00
	RO 00							

7F	
7E	
•	2
•	
•	
•	
•	
•	
32	
31	
30	

General purpose memory

Bit addressable memory

Working Registers

Register Banks: 00h to 1Fh. The 8051 uses 8 general-purpose registers R0 through R7 (R0, R1, R2, R3, R4, R5, R6, and R7). There are four such register banks. Selection of register bank can be done through RS1,RS0 bits of PSW. On reset, the default Register Bank 0 will be selected.

Bit Addressable RAM: 20h to 2Fh . The 8051 supports a special feature which allows access to bit variables. This is where individual memory bits in Internal RAM can be set or cleared. In all there are 128 bits numbered 00h to 7Fh. Being bit variables any one variable can have a value 0 or 1. A bit variable can be set with a command such as SETB and cleared with a command such as CLR.

Example instructions are:

SETB 25h; sets the bit 25h (becomes 1)

CLR 25h; clears bit 25h (becomes 0)

Note, bit 25h is actually bit 5 of Internal RAM location 24h.

The Bit Addressable area of the RAM is just 16 bytes of Internal RAM located between 20h and 2Fh.

General Purpose RAM: 30h to 7Fh. Even if 80 bytes of Internal RAM memory are available for general-purpose data storage, user should take care while using the memory location from 00 -2Fh since these locations are also the default register space, stack space, and bit addressable space. It is a


good practice to use general purpose memory from 30 – 7Fh. The general purpose RAM can be accessed using direct or indirect addressing modes.

1.7 EXTERNAL MEMORY INTERFACING

Eg. Interfacing of 16 K Byte of RAM and 32 K Byte of EPROM to 8051

Number of address lines required for 16 Kbyte memory is 14 lines and that of 32Kbytes of memory is 15 lines.

The connections of external memory is shown below.

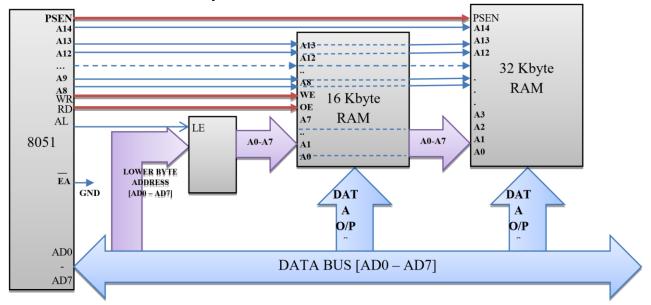

The lower order address and data bus are multiplexed. De-multiplexing is done by the latch. Initially the address will appear in the bus and this latched at the output of latch using ALE signal. The output of the latch is directly connected to the lower byte address lines of the memory. Later data will be available in this bus. Still the latch output is address it self. The higher byte of address bus is directly connected to the memory. The number of lines connected depends on the memory size.

The RD and WR (both active low) signals are connected to RAM for reading and writing the data.

PSEN of microcontroller is connected to the output enable of the ROM to read the data from the memory.

EA (active low) pin is always grounded if we use only external memory. Otherwise, once the program size exceeds internal memory the microcontroller will automatically switch to external memory.

1.8 STACK

A stack is a last in first out memory. In 8051 internal RAM space can be used as stack. The address of the stack is contained in a register called stack pointer. Instructions PUSH and POP are used for stack

operations. When a data is to be placed on the stack, the stack pointer increments before storing the data on the stack so that the stack grows up as data is stored (pre-increment). As the data is retrieved from the stack the byte is read from the stack, and then SP decrements to point the next available byte of stored data (post decrement). The stack pointer is set to 07 when the 8051 resets. So that default stack memory starts from address location 08 onwards (to avoid overwriting the default register bank ie., bank 0).

Eg; Show the stack and SP for the following.

	[SP]=07	//CONTENT OF SP IS 07 (I	DEFAULT VALUE)
MOV R6, #25H	[R6]=25H	//CONTENT OF R6 IS 25H	I
MOV R1, #12H	[R1]=12H	//CONTENT OF R1 IS 12H	I
MOV R4, #0F3H	[R4]=F3H	//CONTENT OF R4 IS F3H	I
PUSH 6	[SP]=08	[08]=[06]=25H	//CONTENT OF 08 IS 25H
PUSH 1	[SP]=09	[09]=[01]=12H	//CONTENT OF 09 IS 12H
PUSH 4	[SP]=0A	[0A]=[04]=F3H	//CONTENT OF 0A IS F3H
POP 6	[06]=[0A]=F3H	[SP]=09 //CONT	ENT OF 06 IS F3H
POP 1	[01]=[09]=12H	[SP]=08 //CONT	ENT OF 01 IS 12H
POP 4	[04]=[08]=25H	[SP]=07 //CONT	ENT OF 04 IS 25H

2.1 INSTRUCTION SYNTAX.

General syntax for 8051 assembly language is as follows.

LABEL: OPCODE OPERAND ; COMMENT

LABEL: (*THIS IS NOT NECESSARY UNLESS THAT SPECIFIC LINE HAS TO BE ADDRESSED*). The label is a symbolic address for the instruction. When the program is assembled, the label will be given specific address in which that instruction is stored. Unless that specific line of instruction is needed by a branching instruction in the program, it is not necessary to label that line.

OPCODE: Opcode is the symbolic representation of the operation. The assembler converts the opcode to a unique binary code (machine language).

OPERAND: While opcode specifies what operation to perform, operand specifies where to perform that action. The operand field generally contains the source and destination of the data. In some cases only source or destination will be available instead of both. The operand will be either address of the data, or data itself.

COMMENT: Always comment will begin with ; or // symbol. To improve the program quality, programmer may always use comments in the program.

2.2 ADDRESSING MODES

Various methods of accessing the data are called addressing modes.

8051 addressing modes are classified as follows.

- 1. Immediate addressing.
- 2. Register addressing.
- 3. Direct addressing.
- 4. Indirect addressing.
- 5. Relative addressing.
- 6. Absolute addressing.
- 7. Long addressing.
- 8. Indexed addressing.
- 9. Bit inherent addressing.
- 10. Bit direct addressing.

1. Immediate addressing.

In this addressing mode the data is provided as a part of instruction itself. In other words data immediately follows the instruction.

Eg. MOV A,#30H ADD A, #83

Symbol indicates the data is immediate.

2. Register addressing.

In this addressing mode the register will hold the data. One of the eight general registers (R0 to R7) can be used and specified as the operand.

Eg. MOV A,R0 ADD A.R6

R0 - R7 will be selected from the current selection of register bank. The default register bank will be bank 0.

3. Direct addressing

There are two ways to access the internal memory. Using direct address and indirect address. Using direct addressing mode we can not only address the internal memory but SFRs also. In direct addressing, an 8 bit internal data memory address is specified as part of the instruction and hence, it can specify the address only in the range of 00H to FFH. In this addressing mode, data is obtained directly from the memory.

Eg. MOV A,60h ADD A,30h

4. Indirect addressing

The indirect addressing mode uses a register to hold the actual address that will be used in data movement. Registers R0 and R1 and DPTR are the only registers that can be used as data pointers. Indirect addressing cannot be used to refer to SFR registers. Both R0 and R1 can hold 8 bit address and DPTR can hold 16 bit address.

Eg. MOV A,@R0
ADD A,@R1 MOVX
A,@DPTR

5. Indexed addressing.

In indexed addressing, either the program counter (PC), or the data pointer (DTPR)—is used to hold the base address, and the A is used to hold the offset address. Adding the value of the base address to the value of the offset address forms the effective address. Indexed addressing is used with JMP or MOVC instructions. Look up tables are easily implemented with the help of index addressing. Eg. MOVC A, @A+DPTR // copies the contents of memory location pointed by the sum of the accumulator A and the DPTR into accumulator A.

MOVC A, @A+PC // copies the contents of memory location pointed by the sum of the accumulator A and the program counter into accumulator A.

6. Relative Addressing.

Relative addressing is used only with conditional jump instructions. The relative address, (offset), is an 8 bit signed number, which is automatically added to the PC to make the address of the next instruction. The 8 bit signed offset value gives an address range of +127 to -128 locations. The jump destination is usually specified using a label and the assembler calculates the jump offset accordingly. The advantage of relative addressing is that the program code is easy to relocate and the address is relative to position in the memory.

```
Eg. SJMP LOOP1
JC BACK
```

7. Absolute addressing

Absolute addressing is used only by the AJMP (Absolute Jump) and ACALL (Absolute Call) instructions. These are 2 bytes instructions. The absolute addressing mode specifies the lowest 11 bit of the memory address as part of the instruction. The upper 5 bit of the destination address are the upper 5 bit of the current program counter. Hence, absolute addressing allows branching only within the current 2 Kbyte page of the program memory.

```
Eg. AJMP LOOP1
ACALL LOOP2
```

8. Long Addressing

The long addressing mode is used with the instructions LJMP and LCALL. These are 3 byte instructions. The address specifies a full 16 bit destination address so that a jump or a call can be made to a location within a 64 Kbyte code memory space.

```
Eg. LJMP FINISH LCALL DELAY
```

9. Bit Inherent Addressing

In this addressing, the address of the flag which contains the operand, is implied in the opcode of the instruction.

```
Eg. CLR C; Clears the carry flag to 0
```

10. Bit Direct Addressing

In this addressing mode the direct address of the bit is specified in the instruction. The RAM space 20H to 2FH and most of the special function registers are bit addressable. Bit address values are between 00H to 7FH.

```
Eg. CLR 07h ; Clears the bit 7 of 20h RAM space SETB 07H ; Sets the bit 7 of 20H RAM space.
```

2.3 INSTRUCTION SET.

1. Instruction Timings

The 8051 internal operations and external read/write operations are controlled by the oscillator clock.

T-state, Machine cycle and Instruction cycle are terms used in instruction timings.

T-state is defined as one subdivision of the operation performed in one clock period. The terms 'Tstate' and 'clock period' are often used synonymously.

Machine cycle is defined as 12 oscillator periods. A machine cycle consists of six states and each state lasts for two oscillator periods. An instruction takes one to four machine cycles to execute an instruction. **Instruction cycle** is defined as the time required for completing the execution of an instruction. The 8051 instruction cycle consists of one to four machine cycles.

Eg. If 8051 microcontroller is operated with 12 MHz oscillator, find the execution time for the following four instructions.

- 1. ADD A, 45H
- 2. SUBB A, #55H
- 3. MOV DPTR, #2000H
- 4. MUL AB

Since the oscillator frequency is 12 MHz, the clock period is, Clock period = 1/12 MHz = 0.08333 μ S. Time for 1 machine cycle = 0.08333 μ S x 12 = 1 μ S.

	Instruction	No. of machine cycles		Execution time
1.	ADD A, 45H	1		1 μs
2.	SUBB A, #55H	2		2 μs
3.	MOV DPTR, #2000H	2	2 μs	
4.	MUL AB	4	4 μs	

2. 8051 Instructions

The instructions of 8051 can be broadly classified under the following headings.

- 1. Data transfer instructions
- 2. Arithmetic instructions
- 3. Logical instructions
- 4. Branch instructions
- 5. Subroutine instructions
- 6. Bit manipulation instructions

Data transfer instructions.

In this group, the instructions perform data transfer operations of the following types.

- a. Move the contents of a register Rn to A
 - i. MOV A,R2 ii. MOV A,R7
- b. Move the contents of a register A to Rn

i. MOV R4,A *ii.* MOV R1.A

- c. Move an immediate 8 bit data to register A or to Rn or to a memory location(direct or indirect)
 - i. MOV A, #45H iv. MOV @R0, #0E8H
 - ii. MOV R6, #51H v. MOV DPTR, #0F5A2H
 - iii. MOV 30H, #44H vi. MOV DPTR, #5467H
- *d.* Move the contents of a memory location to A or A to a memory location using direct and indirect addressing
 - *i.* MOV A, 65H *iii.* MOV 45H, A *ii.* MOV A, @RO *iv.* MOV @R1, A
- *e.* Move the contents of a memory location to Rn or Rn to a memory location using direct addressing
 - *i.* MOV R3, 65H *ii*. MOV 45H, R2
- f. Move the contents of memory location to another memory location using direct and indirect addressing
 - i. MOV 47H, 65H
 - ii. MOV 45H, @R0
- g. Move the contents of an external memory to A or A to an external memory
 - i. MOVX A,@R1 iii. MOVX A,@DPTR
 - ii. MOVX @RO,A iv. MOVX@DPTR,A
 - *h.* Move the contents of program memory to A
 - i. MOVC A, @A+PC ii. MOVC A, @A+DPTR

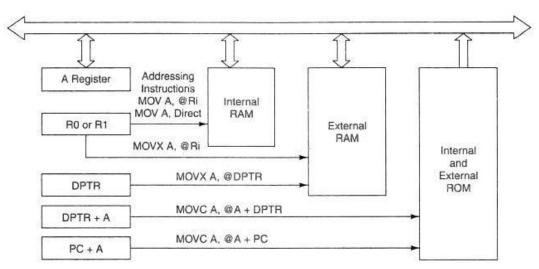


FIG. Addressing Using MOV, MOVX and MOVC

i. Push and Pop instructions

[SP]=07 //CONTENT OF SP IS 07 (DEFAULT VALUE)
MOV R6, #25H [R6]=25H //CONTENT OF R6 IS 25H

MOV R1, #12H	[R1]=12H	//CONTENT O	FR1 IS 12H
MOV R4, #0F3H	[R4]=F3H	//CONTENT O	F R4 IS F3H
PUSH 6	[SP]=08	[08]=[06]=25H	I //CONTENT OF 08 IS 25H
PUSH 1	[SP]=09	[09]=[01]=12H	I //CONTENT OF 09 IS 12H
PUSH 4	[SP]=0A	[0A]=[04]=F3H	I //CONTENT OF 0A IS F3H
POP 6	[06]=[0A]=F3H	I [SP]=09	//CONTENT OF 06 IS F3H
POP 1	[01]=[09]=12H	I [SP]=08	//CONTENT OF 01 IS 12H
POP 4	[04]=[08]=25H	I [SP]=07	//CONTENT OF 04 IS 25H

j. Exchange instructions

The content of source ie., register, direct memory or indirect memory will be exchanged with the contents of destination ie., accumulator.

- i. XCH A,R3
- ii. XCH A,@R1
- iii. XCH A,54h
- k. Exchange digit. Exchange the lower order nibble of Accumulator (A0-A3) with lower order nibble of the internal RAM location which is indirectly addressed by the register.
 - i. XCHD A,@R1 ii. XCHD A,@R0

Arithmetic instructions.

The 8051 can perform addition, subtraction. Multiplication and division operations on 8 bit numbers.

Addition

In this group, we have instructions to

- *i.* Add the contents of A with immediate data with or without carry.
 - i. ADD A, #45H
 - ii. ADDC A, #OB4H
- *ii.* Add the contents of A with register Rn with or without carry.
 - i. ADD A, R5
 - ii. ADDC A, R2
- *iii.* Add the contents of A with contents of memory with or without carry using direct and indirect addressing
 - i. ADD A, 51H
 - ii. ADDC A, 75H
 - iii. ADD A, @R1
 - iv. ADDC A, @R0

CY AC and OV flags will be affected by this operation.

Subtraction

In this group, we have instructions to

- *i.* Subtract the contents of A with immediate data with or without carry.
 - i. SUBB A, #45H
 - ii. SUBB A, #OB4H
- *ii.* Subtract the contents of A with register Rn with or without carry.
 - i. SUBB A, R5 ii. SUBB A, R2
- *iii.* Subtract the contents of A with contents of memory with or without carry using direct and indirect addressing
 - i. SUBB A, 51H ii. SUBB A, 75H
 - iii. SUBB A, @R1 iv.

SUBB A, @R0

CY AC and OV flags will be affected by this operation.

Multiplication

MUL AB. This instruction multiplies two 8 bit unsigned numbers which are stored in A and B register. After multiplication the lower byte of the result will be stored in accumulator and higher byte of result will be stored in B register.

```
Eg. MOV A,#45H ;[A]=45H MOV B,#0F5H ;[B]=F5H
```

MUL AB $;[A] \times [B] = 45 \times F5 = 4209$

 $;[A]=09H,\,[B]=42H$

Division

DIV AB. This instruction divides the 8 bit unsigned number which is stored in A by the 8 bit unsigned number which is stored in B register. After division the result will be stored in accumulator and remainder will be stored in B register.

```
Eg. MOV A,#45H ;[A]=0E8H MOV B,#0F5H ;[B]=1BH
```

DIV AB ;[A]/[B] = E8/1B = 08 H with remainder 10H

;[A] = 08H, [B] = 10H

DA A (Decimal Adjust After Addition).

When two BCD numbers are added, the answer is a non-BCD number. To get the result in BCD, we use DA A instruction after the addition. DA A works as follows.

- If lower nibble is greater than 9 or auxiliary carry is 1, 6 is added to lower nibble.
- If upper nibble is greater than 9 or carry is 1, 6 is added to upper nibble.

```
Eg 1: MOV A,#23H
MOV R1,#55H
ADD A,R1 // [A]=78
DA A // [A]=78 no changes in the accumulator after da a
```

Eg 2: MOV A,#53H

MOV R1,#58H

ADD A,R1 //[A]=ABh

DA A // [A]=11, C=1. ANSWER IS 111. Accumulator data is changed after DA A

Increment: increments the operand by one.

INC A INC Rn INC DIRECT INC @Ri INC DPTR

INC increments the value of source by 1. If the initial value of register is FFh, incrementing the value will cause it to reset to 0. The Carry Flag is not set when the value "rolls over" from 255 to 0.

In the case of "INC DPTR", the value two-byte unsigned integer value of DPTR is incremented. If the initial value of DPTR is FFFFh, incrementing the value will cause it to reset to 0.

Decrement: decrements the operand by one.

DEC A DEC Rn DEC DIRECT DEC @Ri

DEC decrements the value of *source* by 1. If the initial value of is 0, decrementing the value will cause it to reset to FFh. The Carry Flag is not set when the value "rolls over" from 0 to FFh.

Logical Instructions

Logical AND

ANL destination, source: ANL does a bitwise "AND" operation between *source* and *destination*, leaving the resulting value in *destination*. The value in source is not affected. "AND" instruction logically AND the bits of source and destination.

ANL A,#DATA ANL A, Rn ANL A,DIRECT ANL A,@Ri ANL DIRECT,A ANL DIRECT, #DATA

Logical OR

ORL destination, source: ORL does a bitwise "OR" operation between *source* and *destination*, leaving the resulting value in *destination*. The value in source is not affected. "OR" instruction logically OR the bits of source and destination.

ORL A,#DATA ORL A, Rn ORL A,DIRECT ORL A,@Ri ORL DIRECT,A ORL DIRECT, #DATA

Logical Ex-OR

XRL destination, source: XRL does a bitwise "EX-OR" operation between *source* and *destination*, leaving the resulting value in *destination*. The value in source is not affected. "XRL" instruction logically EX-OR the bits of source and destination.

XRL A,#DATA XRL A,Rn XRL A,DIRECT XRL A,@Ri

XRL DIRECT,A XRL DIRECT, #DATA

Logical NOT

CPL complements *operand*, leaving the result in *operand*. If *operand* is a single bit then the state of the bit will be reversed. If *operand* is the Accumulator then all the bits in the Accumulator will be reversed.

CPL A, CPL C, CPL bit address

SWAP A – Swap the upper nibble and lower nibble of A.

Rotate Instructions


RR A

This instruction is rotate right the accumulator. Its operation is illustrated below. Each bit is shifted one location to the right, with bit 0 going to bit 7.




RL A

Rotate left the accumulator. Each bit is shifted one location to the left, with bit 7 going to bit 0




RRC A

Rotate right through the carry. Each bit is shifted one location to the right, with bit 0 going into the carry bit in the PSW, while the carry was at goes into bit 7



RLC A

Rotate left through the carry. Each bit is shifted one location to the left, with bit 7 going into the carry bit in the PSW, while the carry goes into bit 0.



Branch (JUMP) Instructions

Jump and Call Program Range


There are 3 types of jump instructions. They are:- 1.

Relative Jump

- 2. Short Absolute Jump
- 3. Long Absolute Jump

Relative Jump

Jump that replaces the PC (program counter) content with a new address that is greater than (the address following the jump instruction by 127 or less) or less than (the address following the jump by 128 or less) is called a relative jump. Schematically, the relative jump can be shown as follows: -

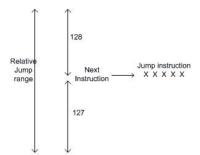

The advantages of the relative jump are as follows:-

- 1. Only 1 byte of jump address needs to be specified in the 2's complement form, ie. For jumping ahead, the range is 0 to 127 and for jumping back, the range is -1 to -128.
- 2. Specifying only one byte reduces the size of the instruction and speeds up program execution.
- 3. The program with relative jumps can be relocated without reassembling to generate absolute jump addresses.

Disadvantages of the absolute jump: -

1. Short jump range (-128 to 127 from the instruction following the jump instruction)

Instructions that use Relative Jump

SJMP < relative address>; this is unconditional jump

The remaining relative jumps are conditional jumps

JC <relative address>
JNC <relative address>
JB bit, <relative address>
JNB bit, <relative address>
JBC bit, <relative address>
JBC bit, <relative address>
CJNE <destination byte>, <source byte>, <relative address>
DJNZ <byte>, <relative address>
JZ <relative address>

Short Absolute Jump

JNZ <relative address>

In this case only 11bits of the absolute jump address are needed. The absolute jump address is calculated in the following manner.

In 8051, 64 kbyte of program memory space is divided into 32 pages of 2 kbyte each. The hexadecimal addresses of the pages are given as follows:-

Page (Hex)	Address (Hex)		
00	0000 - 07FF		
01	0800 - 0FFF		
02	1000 - 17FF		
03	1800 - 1FFF		
1E	F000 - F7FF		
1F	F800 - FFFF		

It can be seen that the upper 5bits of the program counter (PC) hold the page number and the lower 11bits of the PC hold the address within that page. Thus, an absolute address is formed by taking page numbers of the instruction (from the program counter) following the jump and attaching the specified 11bits to it to form the 16-bit address.

Advantage: The instruction length becomes 2 bytes.

```
Example of short absolute jump: -
ACALL <address 11>
AJMP <address 11>
```

Long Absolute Jump/Call

Applications that need to access the entire program memory from 0000H to FFFFH use long absolute jump. Since the absolute address has to be specified in the op-code, the instruction length is 3 bytes (except for JMP @ A+DPTR). This jump is not re-locatable.

Example: -

```
LCALL <address 16>
LJMP <address 16>
JMP @A+DPTR
```

Another classification of jump instructions is

- 1. Unconditional Jump
- 2. Conditional Jump
- 1. **The unconditional jump** is a jump in which control is transferred unconditionally to the target location.
 - a. **LJMP** (long jump). This is a 3-byte instruction. First byte is the op-code and second and third bytes represent the 16-bit target address which is any memory location from 0000 to FFFFH *eg: LJMP* **3000H**
 - b. **AJMP:** this causes unconditional branch to the indicated address, by loading the 11 bit address to 0 -10 bits of the program counter. The destination must be therefore within the same 2K blocks.

c. **SJMP** (short jump). This is a 2-byte instruction. First byte is the op-code and second byte is the relative target address, 00 to FFH (forward +127 and backward -128 bytes from the current PC value). To calculate the target address of a short jump, the second byte is added to the PC value which is address of the instruction immediately below the jump.

2. Conditional Jump instructions.

```
IBC
              Jump if bit = 1 and clear bit
INB
                       Jump if bit = 0
ΙB
                       Jump if bit = 1
INC
                       Jump if CY = 0
                       Jump if CY = 1
IC
CINE reg,#data
                       Jump if byte ≠ #data
CINE A,byte
              Jump if A ≠ byte
DINZ
                       Decrement and Jump if A \neq 0
INZ
                       Jump if A \neq 0
ΙZ
                       Jump if A = 0
```

All conditional jumps are short jumps.

Bit level jump instructions:

Bit level JUMP instructions will check the conditions of the bit and if condition is true, it jumps to the address specified in the instruction. All the bit jumps are relative jumps.

JB bit, rel ; jump if the direct bit is set to the relative address specified.
 JNB bit, rel ; jump if the direct bit is clear to the relative address specified.
 JBC bit, rel ; jump if the direct bit is set to the relative address specified and then clear the bit.

Subroutine CALL And RETURN Instructions

Subroutines are handled by CALL and RET instructions

There are two types of CALL instructions

1. LCALL address(16 bit)

This is long call instruction which unconditionally calls the subroutine located at the indicated 16 bit address. This is a 3 byte instruction. The LCALL instruction works as follows.

- a. During execution of LCALL, [PC] = [PC]+3; (if address where LCALL resides is say, 0x3254; during execution of this instruction [PC] = 3254h + 3h = 3257h
- b. [SP]=[SP]+1; (if SP contains default value 07, then SP increments and [SP]=08
- c. [[SP]] = [PC₇₋₀]; (lower byte of PC content ie., 57 will be stored in memory location 08.
- d. [SP]=[SP]+1; (SP increments again and [SP]=09)
- e. $[[SP]] = [PC_{15-8}]$; (higher byte of PC content ie., 32 will be stored in memory location 09.

With these the address (0x3254) which was in PC is stored in stack.

f. [PC]= address (16 bit); the new address of subroutine is loaded to PC. No flags are affected.

2. ACALL address(11 bit)

This is absolute call instruction which unconditionally calls the subroutine located at the indicated 11 bit address. This is a 2 byte instruction. The SCALL instruction works as follows.

- a. During execution of SCALL, [PC] = [PC]+2; (if address where LCALL resides is say, 0x8549; during execution of this instruction [PC] = 8549h + 2h = 854Bh
- b. [SP]=[SP]+1; (if SP contains default value 07, then SP increments and [SP]=08
- c. [[SP]] = [PC₇₋₀]; (lower byte of PC content ie., 4B will be stored in memory location 08.
- d. [SP]=[SP]+1; (SP increments again and [SP]=09)
- e. $[[SP]] = [PC_{15-8}]$; (higher byte of PC content ie., 85 will be stored in memory location 09.

With these the address (0x854B) which was in PC is stored in stack.

f. $[PC_{10-0}]$ = address (11 bit); the new address of subroutine is loaded to PC. No flags are affected.

RET instruction

RET instruction pops top two contents from the stack and load it to PC.

```
g. [PC_{15-8}] = [[SP]] ;content of current top of the stack will be moved to higher byte of PC. h. [SP]=[SP]-1; (SP decrements)
```

- i. $[PC_{7-0}] = [[SP]]$; content of bottom of the stack will be moved to lower byte of PC.
- j. [SP]=[SP]-1; (SP decrements again)

Bit manipulation instructions.

8051 has 128 bit addressable memory. Bit addressable SFRs and bit addressable PORT pins. It is possible to perform following bit wise operations for these bit addressable locations.

1. LOGICAL AND

```
    a. ANL C,BIT(BIT ADDRESS); 'LOGICALLY AND' CARRY AND CONTENT OF BIT ADDRESS, STORE RESULT IN CARRY
    b. ANL C, /BIT; 'LOGICALLY AND' CARRY AND COMPLEMENT OF CONTENT OF BIT ADDRESS, STORE RESULT IN CARRY
```

2. LOGICAL OR

```
a. ORL C,BIT(BIT ADDRESS); 'Logically or' carry and content of bit address, store result in carry

b. ORL C, /BIT; ; 'Logically or' carry and complement of content of bit address, store result in carry

3. CLR bit

CONTENT OF BIT ADDRESS SDECIFIED WILL BE CLEARED.
```

```
a. CLR bit ; CONTENT OF BIT ADDRESS SPECIFIED WILL BE CLEARED.

b. CLR C ; CONTENT OF CARRY WILL BE CLEARED.

4. CPL bit
```

a. CPL bit ; CONTENT OF BIT ADDRESS SPECIFIED WILL BE COMPLEMENTED.
b. CPL C ; CONTENT OF CARRY WILL BE COMPLEMENTED.

UNIT 3

3.1 ASSEMBLER DIRECTIVES.

Assembler directives tell the assembler to do something other than creating the machine code for an instruction. In assembly language programming, the assembler directives instruct the assembler to

- 1. Process subsequent assembly language instructions
- 2. Define program constants
- 3. Reserve space for variables

The following are the widely used 8051 assembler directives.

ORG (origin)

The ORG directive is used to indicate the starting address. It can be used only when the program counter needs to be changed. The number that comes after ORG can be either in hex or in decimal.

Eg: ORG 0000H ;Set PC to 0000.

EQU and **SET**

EQU and SET directives assign numerical value or register name to the specified symbol name.

EQU is used to define a constant without storing information in the memory. The symbol defined with EQU should not be redefined.

SET directive allows redefinition of symbols at a later stage.

DB (DEFINE BYTE)

The DB directive is used to define an 8 bit data. DB directive initializes memory with 8 bit values. The numbers can be in decimal, binary, hex or in ASCII formats. For decimal, the 'D' after the decimal number is optional, but for binary and hexadecimal, 'B' and 'H' are required. For ASCII, the number is written in quotation marks ('LIKE This).

DATA1: DB 40H ; hex
DATA2: DB 01011100B ; b i n ary
DATA3: DB 48 ; decimal
DATA4: DB 'HELLOW' ; ASCII

END

The END directive signals the end of the assembly module. It indicates the end of the program to the assembler. Any text in the assembly file that appears after the END directive is ignored. If the END statement is missing, the assembler will generate an error message.

3.2 ASSEMBLY LANGUAGE PROGRAMS.

1. Write a program to add the values of locations 50H and 51H and store the result in locations in 52h and 53H.

ORG 0000H ; Set program counter 0000H

MOV A,50H ; Load the contents of Memory location 50H into A ADD ADD A,51H

; Add the contents of memory 51H with CONTENTS A MOV

52H,A; Save the LS byte of the result in 52H

MOV A, #00 ; Load 00H into A

ADDC A, #00 ; Add the immediate data and carry to A MOV 53H,A ; Save the MS byte of the result in location 53h

END

2. Write a program to store data FFH into RAM memory locations 50H to 58H using direct addressing mode

ORG 0000H; Set program counter 0000H

MOV A, #0FFH; Load FFH into A

MOV 50H, A ; Store contents of A in location 50H ; Store contents of A in location 5IH MOV 51H. A MOV 52H, A ; Store contents of A in location 52H MOV 53H, A ; Store contents of A in location 53H MOV 54H, A : Store contents of A in location 54H MOV 55H. A ; Store contents of A in location 55H MOV 56H, A ; Store contents of A in location 56H : Store contents of A in location 57H MOV 57H, A MOV 58H. A ; Store contents of A in location 58H

END

3. Write a program to subtract a 16 bit number stored at locations 51H-52H from 55H-56H and store the result in locations 40H and 41H. Assume that the least significant byte of data or the result is stored in low address. If the result is positive, then store 00H, else store 01H in 42H.

ORG 0000H ; Set program counter 0000H

MOV A, 55H ; Load the contents of memory location 55 into A

CLR C ; Clear the borrow flag

SUBB A,51H ; Sub the contents of memory 51H from contents of A

MOV 40H, A : Save the LSByte of the result in location 40H

MOV A, 56H; Load the contents of memory location 56H into A SUBB A, 52H; Subtract the content of memory 52H from the content A MOV 41H,; Save the MSbyte of the result in location

415.

MOV A, #00 ; Load 005 into A

ADDC A, #00 ; Add the immediate data and the carry flag to A MOV 42H, A ; If result is positive, store00H, else store 0lH in 42H

END

4. Write a program to add two 16 bit numbers stored at locations 51H-52H and 55H-56H and store the result in locations 40H, 41H and 42H. Assume that the least significant byte of data and the result is stored in low address and the most significant byte of data or the result is stored in high address.

ORG 0000H ; Set program counter 0000H MOV A,51H ; Load the contents of memory location 51H into A ; Add the contents of 55H with contents of A ADD A,55H MOV 40H,A : Save the LS byte of the result in location 40H MOV A,52H ; Load the contents of 52H into A ADDC A.56H ; Add the contents of 56H and CY flag with A ; Save the second byte of the result in 41H MOV 41H,A MOV A,#00 ; Load 00H into A ADDC A,#00; Add the immediate data 00H and CY to A

MOV 42H,A ; Save the MS byte of the result in location 42H

END

5. Write a program to store data FFH into RAM memory locations 50H to 58H using indirect addressing mode.

> **ORG 0000H** ; Set program counter 0000H

MOV A, #0FFH ; Load FFH into A MOV RO, #50H ; Load pointer, R0-50H MOV R5, #08H ; Load counter, R5-08H

Start:MOV @RO, A ; Copy contents of A to RAM pointed by R0

> INC RO ; Increment pointer DJNZ R5, start; Repeat until R5 is zero

END

6. Write a program to add two Binary Coded Decimal (BCD) numbers stored at locations 60H and 61H and store the result in BCD at memory locations 52H and 53H. Assume that the least significant byte of the result is stored in low address.

ORG 0000H ; Set program counter 00004

MOV A,60H ; Load the contents of memory location 6.0 H into A

; Add the contents of memory location 61H with contents of A ADD A,61H

DA A ; Decimal adjustment of the sum in A

MOV 52H, A; Save the least significant byte of the result in location 52H

MOV A,#00 ; Load 00H into .A

ADDC A.#00H ; Add the immediate data and the contents of carry flag to A MOV 53H,A ; Save the most significant byte of the result in location

53:, **END**

7. Write a program to clear 10 RAM locations starting at RAM address 1000H.

ORG 0000H ;Set program counter 0000H MOV DPTR, #1000H ;Copy address 1000H to DPTR

;Clear A CLR A

MOV R6, #0AH :Load OAH to R6 again: MOVX @DPTR,A ;Clear RAM location pointed by DPTR INC DPTR ;Increment **DPTR**

DJNZ R6, again ;Loop until counter R6=0

END

8. Write a program to compute 1 + 2 + 3 + N (say N=15) and save the sum at 70H

ORG 0000H ; Set program counter 0000H

N EQU 15

MOV R0,#00 ; Clear R0

 $\begin{array}{ccc} \text{CLR A} & & \text{; Clear A} \\ \text{again: INC R0} & & \text{; Increment R0} \end{array}$

ADD A, RO; Add the contents of RO with A

CINE R0, #N, again; Loop until counter, R0, N

MOV 70H,A ; Save the result in location 70H END

9. Write a program to multiply two 8 bit numbers stored at locations 70H and 71H and store the result at memory locations 52H and 53H. Assume that the least significant byte of the result is stored in low address.

ORG 0000H; Set program counter 00 OH

MOV A, 70H; Load the contents of memory location 70h into A MOV B, 71H; Load the contents of memory location 71H into B

MUL AB ; Perform multiplication

MOV 52H,A; Save the least significant byte of the result in location 52H MOV 53H,B; Save the most

significant byte of the result in location 53

END

10. Ten 8 bit numbers are stored in internal data memory from location 5oH. Write a program to increment the data.

Assume that ten 8 bit numbers are stored in internal data memory from location 50H, hence R0 or R1 must be used as a pointer.

The program is as follows. OPT

0000H

MOV R0,#50H

MOV R3,#0AH

Loopl: INC @R0

INC RO

DJNZ R3, loopl END

END

11. Write a program to find the average of five 8 bit numbers. Store the result in H. (Assume that after adding five 8 bit numbers, the result is 8 bit only).

ORG 0000H

MOV 40H,#05H

MOV 41H,#55H

MOV 42H,#06H

MOV 43H,#1AH

MOV 44H,#09H

MOV R0,#40H

MOV R5,#05H

MOV B,R5

CLR A

Loop: ADD A,@RO

INC RO

DJNZ R5,Loop

DIV AB

MOV 55H,A END

12. Write a program to find the cube of an 8 bit number program is as follows

ORG 0000H MOV R1,#N MOV A,R1 MOV B,R1

MUL AB //SQUARE IS COMPUTED

MOV R2, B MOV B, R1 MUL AB MOV 50,A MOV 51,B MOV A,R2 MOV B, R1 MUL AB ADD A, 51H MOV 51H, A MOV 52H, B MOV A, # 00H ADDC A, 52H

MOV 52H, A //CUBE IS STORED IN

END 52H,51H,50H

13. Write a program to exchange the lower nibble of data present in external memory 6000H and 6001H

ORG 0000H ; S et progra m cou nt er 00h

MOV DPTR, #6000H; Copy address 6000H to DPTR

MOVX A, @DPTR ; Copycontentsof60008toA

MOV R0, #45H ; Load pointer, R0=45H

MOV @RO, A ; Copy cont of A to RAM pointed by 80

INC DPL ; I nc rem en t p o i nt e r

MOVX A, @DPTR ; Copycontentsof60018toA

XCHD A, @RO ; Exchangelowernibble of A with RAMpointed by RO

MOVX @DPTR, A ; C o p y c o nt ent s o f A t o 6 0 0 1 8

DEC DPL ; Decrement pointer

MOV A, @RO; Copy cont of RAM pointed by R0 to A

MOVX @DPTR, A ; CopycontofAtoRAMpointedbyDPTR

END

14. Write a program to count the number of and o's of 8 bit data stored in location 6000H.

ORG 00008 ; Set program counter 00008

MOV DPTR, #6000h ; Copy address 6000H to DPTR

MOVX A, @DPTR ; Copy number to A

MOV R0,#08 ; Copy 08 in RO

MOV R2,#00 ; Copy 00 in R2

MOV R3,#00 ; Clear carry flag

```
BACK: RLC A ; Rotate Athrough carry flag

JC NEXT ; If C F = 1, branchtonext

INC R2 ; If C F = 0, increment R 2 AJMP NEXT2

NEXT: INC R3 ; If C F = 1, increment R 3

NEXT2: DJNZ RO,BACK ; Repeatuntil R O is zero END
```

15. Write a program to shift a 24 bit number stored at 57H-55H to the left logically four places. Assume that the least significant byte of data is stored in lower address.

ORG 0000H ; Set program counter 0000h MOV R1,#04 ; Set up loop count to 4

again: MOV A,55H ; Place the least significant byte of data in A

CLR C ; Clear tne carry flag

RLC A ; Rotate contents of A (55h) left through carry

MOV 55H,A MOV A,56H

RLC A ; Rotate contents of A (56H) left through carry

MOV 56H,A MOV A,57H

RLC A ; Rotate contents of A (57H) left through carry

MOV 57H,A

DJNZ R1, again; Repeat until R1 is zero

END

16. Two 8 bit numbers are stored in location 1000h and 1001h of external data memory. Write a program to find the GCD of the numbers and store the result in 2000h.

ALGORITHM

```
Step 1
                              :Initialize external data memory with data and DPTR with address
                              :Load A and TEMP with the operands
                 Step 2
                 Step 3
                              :Are the two operands equal? If yes, go to step 9
                 Step 4
                              :Is (A) greater than (TEMP)? If yes, go to step 6
                              :Exchange (A) with (TEMP) such that A contains the bigger number
                 Step 5
                 Step 6
                              :Perform division operation (contents of A with contents of TEMP)
                 Step 7
                              :If the remainder is zero, go to step 9
                 Step 8
                              :Move the remainder into A and go to step 4
                Step 9
                              :Save the contents 'of TEMP in memory and terminate the program
                ORG 0000H
                                         ; Set program counter 0000H
                TEMP EQU 70H
                TEMPI EQU 71H
                MOV DPTR, #1000H
                                         ; Copy address 100011 to DPTR
                MOVX A, @DPTR
                                         : Copy First number to A
                                         ; Copy First number to temp INC DPTR
                MOV TEMP, A
                MOVX A. @DPTR
                                         ; Copy Second number to A
LOOPS: CJNE A, TEMP, LOOP1; (A) /= (TEMP) branch to LOOP1
                AJMP LOOP2
                                                  ; (A) = (TEMP) branch to L00P2
LOOP1:
                INC LOOP3
                                                  ; (A) > (TEMP) branch to LOOP3
                                         ; (A) < (TEMP) exchange (A) with (TEMP)
                NOV TEMPI, A
                MOV A, TEMP
                MOV TEMP, TEMPI
LOOP3:
                MOV B, TEMP
```

DIV AB ; Divide (A) by (TEMP)

MOV A, B ; Move remainder to A

CINE A,#00, LOOPS (A)/=00 branch to LOOPS

LOOP2: MOV A, TEMP

MOV DPTR, #2000H

MOVX @DPTR, A ; Store the result in 2000H

END

5.1 BASICS OF INTERRUPTS.

During program execution if peripheral devices needs service from microcontroller, device will generate interrupt and gets the service from microcontroller. When peripheral device activate the interrupt signal, the processor branches to a program called interrupt service routine. After executing the interrupt service routine the processor returns to the main program.

Steps taken by processor while processing an interrupt:

- 1. It completes the execution of the current instruction.
- 2. PSW is pushed to stack.
- 3. PC content is pushed to stack.
- 4. Interrupt flag is reset.
- 5. PC is loaded with ISR address.

ISR will always ends with RETI instruction. The execution of RETI instruction results in the following.

- 1. POP the current stack top to the PC.
- 2. POP the current stack top to PSW.

Classification of interrupts.

1. External and internal interrupts.

External interrupts are those initiated by peripheral devices through the external pins of the microcontroller.

Internal interrupts are those activated by the internal peripherals of the microcontroller like timers, serial controller etc.)

2. Maskable and non-maskable interrupts.

The category of interrupts which can be disabled by the processor using program is called maskable interrupts.

Non-maskable interrupts are those category by which the programmer cannot disable it using program.

3. Vectored and non-vectored interrupt.

Starting address of the ISR is called interrupt vector. In vectored interrupts the starting address is predefined. In non-vectored interrputs, the starting address is provided by the peripheral as follows.

- Microcontroller receives an interrupt request from external device.
- Controller sends an acknowledgement (INTA) after completing the execution of current instruction.
- The peripheral device sends the interrupt vector to the microcontroller.

5.2 8051 INTERRUPT STRUCTURE.

8051 has five interrupts. They are maskable and vectored interrupts. Out of these five, two are external interrupt and three are internal interrupts.

Interrupt source	Туре	Vector address	Priority
External interrupt 0	External	0003	Highest
Timer 0 interrupt	Internal	000B	
External interrupt 1	External	0013	
Timer 1 interrupt	Internal	001B	
Serial interrupt	Internal	0023	Lowest

8051 makes use of two registers to deal with interrupts.

1. IE Register

This is an 8 bit register used for enabling or disabling the interrupts. The structure of IE register is shown below.

ET1

EX1

ET0

EX0

IE: Interrupt Enable Register (Bit Addressable)

If the bit is 0, the corresponding interrupt is disabled. If the bit is 1, the corresponding interrupt is enabled.

EA

EA	IE.7	Disables all interrupts. If $EA = 0$, no interrupt will be acknowledged. If $EA = 1$, interrupt source is individually enable or disabled by setting or clearing its enable bit.
-	IE.6	Not implemented, reserved for future use*.
-	IE.5	Not implemented, reserved for future use*.
ES	IE.4	Enable or disable the Serial port interrupt.
ET1	IE.3	Enable or disable the Timer 1 overflow interrupt.
EX1	IE.2	Enable or disable External interrupt 1.
ЕТ0	IE.I	Enable or disable the Timer 0 overflow interrupt.
EX0	IE.0	Enable or disable External Interrupt 0.

ES

2. IP Register.

This is an 8 bit register used for setting the priority of the interrupts.

IP: Interrupt Priority Register (Bit Addressable)

If the bit is 0, the corresponding interrupt has a lower priority and if the bit is the corresponding interrupt has a higher priority.


		=	-	-	PS	PT1	PX1	PT0	PX0	
-	IP.7	Not	Not implemented, reserved for future use*.							
-	IP.6	Not	Not implemented, reserved for future use*.							
2	IP.5	Not	implemente	ed, reserve	d for future	use*.				
PS	IP.4	Def	Defines the Serial Port interrupt priority level.							
PT1	IP.3	Def	Defines the Timer 1 Interrupt priority level.							
PX1	IP.2	Def	ines Externa	al Interrupt	priority le	vel.				
PT0	IP.1	Def	ines the Tin	ner 0 interr	upt priority	level.				
PX0	IP.0	Def	ines the Ext	ernal Inter	rupt 0 prior	ity level.				

5.2 TIMERS AND COUNTERS

Timers/Counters are used generally for

- Time reference
- Creating delay
- Wave form properties measurement
- Periodic interrupt generation
- Waveform generation

8051 has two timers, Timer 0 and Timer 1.

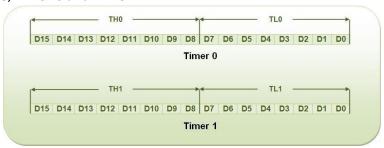

Timer in 8051 is used as timer, counter and baud rate generator. Timer always counts up irrespective of whether it is used as timer, counter, or baud rate generator: Timer is always incremented by the microcontroller. The time taken to count one digit up is based on master clock frequency.

```
If Master CLK=12 MHz,

Timer Clock frequency = Master CLK/12 = 1 MHz

Timer Clock Period = 1micro second

This indicates that one increment in count will take 1 micro second.
```

The two timers in 8051 share two SFRs (TMOD and TCON) which control the timers, and each timer also has two SFRs dedicated solely to itself (TH0/TL0 and TH1/TL1).

The following are timer related SFRs in 8051.

SFR Name	Description				SFR Address
TH0	Timer 0 High Byte			8Ch	
TLO	Timer 0 Low Byte			8Ah TH1	
	Timer 1 High Byte		8Dh TL1		
Timer 1	Low Byte	8Bh			
TCON	Tin	ner Control			88h

TMOD Timer Mode 89h

TMOD Register

TMOD: Timer/Counter Mode Control Register (Not Bit Addressable)

GATE	C/T	M1	M0	GATE	C/T	M1	M0
				2			
TIMER 1					TIM	ER 0	

GATE When TRx (in TCON) is set and GATE = 1, TIMER/COUNTERx will run only while INTx pin is high (hardware control). When GATE = 0, TIMER/COUNTERx will run only while TRx = 1 (software control).

C/T Timer or Counter selector. Cleared for Timer operation (input from internal system clock). Set for Counter operation (input from Tx input pin).

M1 Mode selector bit (NOTE 1).
M0 Mode selector bit (NOTE 1).

TF1

Note 1:

M1	M0	OPER	ATING MODE
0	0	0	13-bit Timer
0	1	1	16-bit Timer/Counter
1	0	2	8-bit Auto-Reload Timer/Counter
1	1	3	(Timer 0) TL0 is an 8-bit Timer/Counter controlled by the standard Timer 0 control bits, TH0 is an 8-bit Timer and is controlled by Timer 1 control bits.
1	1	3	(Timer 1) Timer/Counter 1 stopped.

TR0

TCON Register

TCON: Timer/Counter Control Register (Bit Addressable)

TF0

TR1

TF1	TCON.7	Timer 1 overflow flag. Set by hardware when the Timer/Counter 1 overflows. Cleared by hardware as processor vectors to the interrupt service routine.
TR1	TCON.6	Timer 1 run control bit. Set/cleared by software to turn Timer/Counter ON/OFF.
TF0	TCON.5	Timer 0 overflow flag. Set by hardware when the Timer/Counter 0 overflows. Cleared by hardware as processor vectors to the service routine.
TR0	TCON.4	Timer 0 run control bit. Set/cleared by software to turn Timer/Counter 0 ON/OFF.
IE1	TCON.3	External Interrupt 1 edge flag. Set by hardware when External interrupt edge is detected. Cleared by hardware when interrupt is processed.
IT1	TCON.2	Interrupt 1 type control bit. Set/cleared by software to specify falling edge/flow level triggered External Interrupt.
IE0	TCON.1	External Interrupt 0 edge flag. Set by hardware when External Interrupt edge detected. Cleared by hardware when interrupt is processed.
IT0	TCON.0	Interrupt 0 type control bit. Set/cleared by software to specify falling edge/low level triggered External Interrupt.


IE1

ITI

IE0

IT0

Timer/Counter Control Logic.

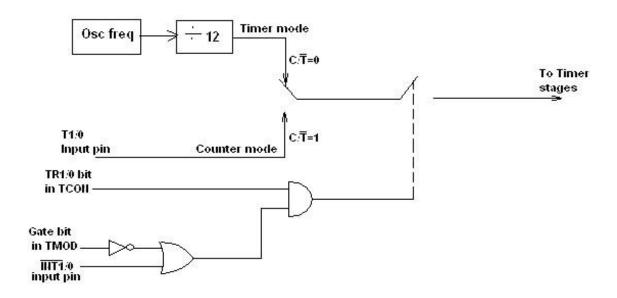

TIMER MODES

Timers can operate in four different modes. They are as follows

Timer Mode-0: In this mode, the timer is used as a 13-bit UP counter as follows.




Fig. Operation of Timer on Mode-0

The lower 5 bits of TLX and 8 bits of THX are used for the 13 bit count. Upper 3 bits of TLX are ignored. When the counter rolls over from all 0's to all 1's, TFX flag is set and an interrupt is generated. The input pulse is obtained from the previous stage. If TR1/0 bit is 1 and Gate bit is 0, the counter continues counting up. If TR1/0 bit is 1 and Gate bit is 1, then the operation of the counter is controlled by input. This mode is useful to measure the width of a given pulse fed to input.

Timer Mode-1: This mode is similar to mode-0 except for the fact that the Timer operates in 16-bit mode.




Fig: Operation of Timer in Mode 1

Timer Mode-2: (Auto-Reload Mode): This is a 8 bit counter/timer operation. Counting is performed in TLX while THX stores a constant value. In this mode when the timer overflows i.e. TLX becomes FFH, it is fed with the value stored in THX. For example if we load THX with 50H then the timer in mode 2 will count from 50H to FFH. After that 50H is again reloaded. This mode is useful in applications like fixed time sampling.




Fig: Operation of Timer in Mode 2

Timer Mode-3: Timer 1 in mode-3 simply holds its count. The effect is same as setting TR1=0. Timer 0 in mode-3 establishes TL0 and TH0 as two separate counters.

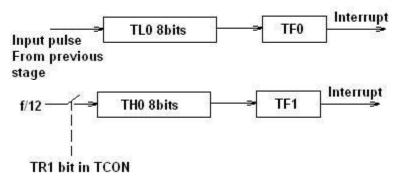


Fig: Operation of Timer in Mode 3

Control bits TR1 and TF1 are used by Timer-0 (higher 8 bits) (TH0) in Mode-3 while TR0 and TF0 are available to Timer-0 lower 8 bits(TL0).

5.2 PROGRAMMING 8051 TIMERS IN ASSEMBLY

In order to program 8051 timers, it is important to know the calculation of initial count value to be stored in the timer register. The calculations are as follows.

In any mode, Timer Clock period = 1/Timer Clock Frequency.
= 1/(Master Clock Frequency/12)

- a. Mode 1 (16 bit timer/counter)
 - Value to be loaded in decimal = 65536 (Delay Required/Timer clock period) Convert the answer into hexadecimal and load onto THx and TLx register. ($65536_D = FFFF_H+1$)
- b. Mode 0 (13 bit timer/counter) Value to be loaded in decimal = 8192 – (Delay Required/Timer clock period) Convert the answer into hexadecimal and load onto THx and TLx register. ($8192_D = 1FFF_{H}+1$)
- c. Mode 2 (8 bit auto reload) Value to be loaded in decimal = 256 – (Delay Required/Timer clock period) Convert the answer into hexadecimal and load onto THx register. Upon starting the timer this value from THx will be reloaded to TLx register. ($256_D = FF_H + 1$)

Steps for programming timers in 8051

Mode 1:

- Load the TMOD value register indicating which timer (0 or 1) is to be used and which timer mode is selected.
- Load registers TL and TH with initial count values.
- Start the timer by the instruction "SETB TR0" for timer 0 and "SETB TR1" for timer 1.
- Keep monitoring the timer flag (TF) with the "JNB TFx,target" instruction to see if it is raised. Get out of the loop when TF becomes high.
- Stop the timer with the instructions "CLR TR0" or "CLR TR1", for timer 0 and timer 1, respectively.
- Clear the TF flag for the next round with the instruction "CLR TF0" or "CLR TF1", for timer 0 and timer 1, respectively.
- Go back to step 2 to load TH and TL again.

Mode 0:

The programming techniques mentioned here are also applicable to counter/timer mode 0. The only difference is in the number of bits of the initialization value.

Mode 2:

- Load the TMOD value register indicating which timer (0 or 1) is to be used; select timer mode 2.
- Load TH register with the initial count value. As it is an 8-bit timer, the valid range is from 00 to FFH.
- Start the timer.
- Keep monitoring the timer flag (TFx) with the "JNB TFx,target" instruction to see if it is raised. Get out of the loop when TFx goes high.
- Clear the TFx flag.
- Go back to step 4, since mode 2 is auto-reload.

1. Write a program to continuously generate a square wave of 2 kHz frequency on pin P1.5 using timer 1. Assume the crystal oscillator frequency to be 12 MHz.

```
The period of the square wave is T = 1/(2 \text{ kHz}) = 500 \, \Box s. Each half pulse = 250 \Box s. The value n for 250 \Box s is: 250 \Box s /1 \Box s = 250 65536 - 250 = FF06H. TL = 06H and TH = 0FFH.
```

```
MOV TMOD,#10 ;Timer 1, mode 1 AGAIN: MOV TL1,#06H ;TL0 = 06H MOV TH1,#0FFH ;TH0 = FFH
```

SETB TR1 ;Start timer 1

BACK: JNB TF1,BACK ;Stay until timer rolls over
CLR TR1 ;Stop timer 1
CPL P1.5 ;Complement P1.5 to get Hi, Lo
CLR TF1 ;Clear timer flag 1
SJMP AGAIN ;Reload timer

2. Write a program segment that uses timer 1 in mode 2 to toggle P1.0 once whenever the counter reaches a count of 100. Assume the timer clock is taken from external source P3.5 (T1).

The TMOD value is 60HThe initialization value to be loaded into TH1 is 256 - 100 = 156 = 9CH

;Counter1, mode 2, C/T'=1MOV TMOD,#60h MOV TH1,#9Ch ;Counting 100 pulses **SETB P3.5** :Make T1 input ;Start timer 1 SETB TR1 ;Keep doing it if TF = 0BACK: INB TF1,BACK CPL P1.0 ;Toggle port bit CLR TF1 ;Clear timer overflow flag SJMP BACK ;Keep doing it

UNIT 6

6.1 SERIAL COMMUNICATION.


6.1.1. DATA COMMUNICATION

The 8051 microcontroller is parallel device that transfers eight bits of data simultaneously over eight data lines to parallel I/O devices. Parallel data transfer over a long is very expensive. Hence, a serial communication is widely used in long distance communication. In serial data communication, 8-bit data is converted to serial bits using a parallel in serial out shift register and then it is transmitted over a single data line. The data byte is always transmitted with least significant bit first.

6.1.2. BASICS OF SERIAL DATA COMMUNICATION,

Communication Links

1. Simplex communication link: In simplex transmission, the line is dedicated for transmission. The transmitter sends and the receiver receives the data.



2. *Half duplex communication link:* In half duplex, the communication link can be used for either transmission or reception. Data is transmitted in only one direction at a time.




3. Full duplex communication link: If the data is transmitted in both ways at the same time, it is a full duplex i.e. transmission and reception can proceed simultaneously. This communication link requires two wires for data, one for transmission and one for reception.




Types of Serial communication:

Serial data communication uses two types of communication.

1. Synchronous serial data communication: In this transmitter and receiver are synchronized. It uses a common clock to synchronize the receiver and the transmitter. First the synch character is sent and then the data is transmitted. This format is generally used for high speed transmission. In Synchronous serial data communication a block of data is transmitted at a time.



2. Asynchronous Serial data transmission: In this, different clock sources are used for transmitter and receiver. In this mode, data is transmitted with start and stop bits. A transmission begins with start bit, followed by data and then stop bit. For error checking purpose parity bit is included just prior to stop bit. In Asynchronous serial data communication a single byte is transmitted at a time.



Baud rate:

The rate at which the data is transmitted is called baud or transfer rate. The baud rate is the reciprocal of the time to send one bit. In asynchronous transmission, baud rate is not equal to number of bits per second. This is because; each byte is preceded by a start bit and followed by parity and stop bit.

For example, in synchronous transmission, if data is transmitted with 9600 baud, it means that 9600 bits are transmitted in one second. For bit transmission time = 1 second / 9600 = 0.104 ms.

6.1.3. 8051 SERIAL COMMUNICATION

The 8051 supports a full duplex serial port.

Three special function registers support serial communication.

- 1. SBUF Register: Serial Buffer (SBUF) register is an 8-bit register. It has separate SBUF registers for data transmission and for data reception. For a byte of data to be transferred via the TXD line, it must be placed in SBUF register. Similarly, SBUF holds the 8-bit data received by the RXD pin and read to accept the received data.
- 2. SCON register: The contents of the Serial Control (SCON) register are shown below. This register contains mode selection bits, serial port interrupt bit (TI and RI) and also the ninth data bit for transmission and reception (TB8 and RB8).

	Seri	al Port	Contr	ol (SC	ON) Re	gister	0
D7	D6	D5	D4	D3	D2	D1	D0
SM0	SM1	SM2	REN	TB8	RB8	TI	RI

SM0 (SCON.7): Serial communication mode selection bit
 SM1 (SCON.6): Serial communication mode selection bit

SM0	SM1	Mode	Description	Baud rate		
0	0	Mode 0	8-bit shift register mode	Fosc / 12		
0	1	Mode 1	8-bit UART	Variable (set by timer 1)		
1	0	Mode 2	9-bit UART	Fosc/ 32 or Fosc/64		
1	1	Mode 3	9-bit UART	Variable (set by timer 1)		

- SM2 (SCON.5): Multiprocessor communication bit. In modes 2 and 3, if set this will enable multiprocessor communication.
- o REN (SCON.4): Enable serial reception
- $\circ~$ TB8 (SCON.3) : This is 9^{th} bit that is transmitted in mode 2 $\,$ & 3.
- $\circ~$ RB8 (SCON.2) ; 9^{th} data bit is received in modes 2 & 3.
- TI (SCON.1) : Transmit interrupt flag, set by hardware must be cleared by software.
- RI (SCON.0) : Receive interrupt flag, set by hardware must be cleared by software.
- 3. PCON register: The SMOD bit (bit 7) of PCON register controls the baud rate in asynchronous mode transmission.

	Powe	er mod	le Con	trol (PC	ON) Re	egister	
D7	D6	D5	D4	D3	D2	D1	D0
SMOD				GF1	GF0	PD	IDL

- SMD (PCON.7): Serial rate modify bit. Set to 1 by program to double baud rate using timer 1 for modes 1, 2, and 3. cleared by program to use timer 1 baud rate.
- o GF1 (PCON.3): General Purpose user flag bit.
- o GF0 (PCON.2) : General Purpose user flag bit.
- PD (PCON.1) : Power down bit. Set to 1 by program to enter power down configuration for CHMOS processors.
- IDL (PCON.0): Idle mode bit. Set to 1 by program to enter idle mode configuration for CHMOS processors.

6.1.4. SERIAL COMMUNICATION MODES

1. Mode 0

In this mode serial port runs in synchronous mode. The data is transmitted and received through RXD pin and TXD is used for clock output. In this mode the baud rate is 1/12 of clock frequency.

2. Mode 1

In this mode SBUF becomes a 10 bit full duplex transceiver. The ten bits are 1 start bit, 8 data bit and 1 stop bit. The interrupt flag TI/RI will be set once transmission or reception is over. In this mode the baud rate is variable and is determined by the timer 1 overflow rate.

Baud rate = $[2^{\text{smod}}/32]$ x Timer 1 overflow Rate

= $[2^{\text{smod}}/32]$ x [Oscillator Clock Frequency] / $[12 \times [256 - [TH1]]]$

3. Mode 2

This is similar to mode 1 except 11 bits are transmitted or received. The 11 bits are, 1 start bit, 8 data bit, a programmable 9th data bit, 1 stop bit.

Baud rate = $[2^{\text{smod}}/64]$ x Oscillator Clock Frequency

4. Mode 3

This is similar to mode 2 except baud rate is calculated as in mode 1


6.1.5. CONNECTIONS TO RS-232

RS-232 standards:

To allow compatibility among data communication equipment made by various manufactures, an interfacing standard called RS232 was set by the Electronics Industries Association (EIA) in 1960. Since the standard was set long before the advent of logic family, its input and output voltage levels are not TTL compatible.

In RS232, a logic one (1) is represented by -3 to -25V and referred as MARK while logic zero (0) is represented by +3 to +25V and referred as SPACE. For this reason to connect any RS232 to a microcontroller system we must use voltage converters such as MAX232 to convert the TTL logic level to RS232 voltage levels and vice-versa. MAX232 IC chips are commonly referred as line drivers.

In RS232 standard we use two types of connectors. DB9 connector or DB25 connector.




The pin description of DB9 and DB25 Connectors are as follows

DB-25 Pin No.	DB-9 Pin No.	Abbreviation	Full Name	
Pin 2	Pin 3	TD	Transmit Data	
Pin 3	Pin 2	RD	Receive Data	
Pin 4	Pin 7	RTS	Request To Send	
Pin 5	Pin 8	CTS	Clear To Send	
Pin 6	Pin 6	DSR	Data Set Ready	
Pin 7	Pin 5	SG	Signal Ground	
Pin 8	Pin 1	CD	Carrier Detect	
Pin 20	Pin 4	DTR	Data Terminal Ready	
Pin 22	Pin 9	RI	Ring Indicator	

The 8051 connection to MAX232 is as follows.

The 8051 has two pins that are used specifically for transferring and receiving data serially. These two pins are called TXD, RXD. Pin 11 of the 8051 (P3.1) assigned to TXD and pin 10 (P3.0) is designated as RXD. These pins TTL compatible; therefore they require line driver (MAX 232) to make them RS232 compatible. MAX 232 converts RS232 voltage levels to TTL voltage levels and vice versa. One advantage of the MAX232 is that it uses a +5V power source which is the same as the source voltage for the 8051. The typical connection diagram between MAX 232 and 8051 is shown below.

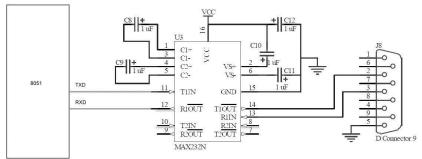

6.1.6. SERIAL COMMUNICATION PROGRAMMING IN ASSEMBLY AND C.

Steps to programming the 8051 to transfer data serially

- 1. The TMOD register is loaded with the value 20H, indicating the use of the Timer 1 in mode 2 (8-bit auto reload) to set the baud rate.
- 2. The TH1 is loaded with one of the values in table 5.1 to set the baud rate for serial data transfer.
- 3. The SCON register is loaded with the value 50H, indicating serial mode 1, where an 8-bit data is framed with start and stop bits.
- 4. TR1 is set to 1 start timer 1.
- 5. TI is cleared by the "CLR TI" instruction.
- 6. The character byte to be transferred serially is written into the SBUF register.
- 7. The TI flag bit is monitored with the use of the instruction JNB TI, target to see if the character has been transferred completely. 8. To transfer the next character, go to step 5.

Example 1. Write a program for the 8051 to transfer letter 'A' serially at 4800- baud rate, 8 bit data, 1 stop bit continuously.

ORG 0000H LJMP START ORG 0030H

START: MOV TMOD, #20H ; select timer 1 mode 2

MOV TH1, #0FAH ; load count to get baud rate of 4800

MOV SCON, #50H ; initialize UART in mode 2 ; 8 bit data and 1 stop bit

SETB TR1 ; start timer

AGAIN: MOV SBUF, #'A'; load char 'A' in SBUF
BACK: JNB TI, BACK; Check for transmit interrupt flag
CLR TI; clear transmit interrupt flag

SIMP AGAIN

END

Example 2. Write a program for the 8051 to transfer the message 'EARTH' serially at 9600 baud, 8 bit data, 1 stop bit continuously.

ORG 0000H LJMP START

ORG 0030H

START: MOV TMOD, #20H ; select timer 1 mode 2

MOV TH1, #0FDH ; load count to get reqd. baud rate of 9600 MOV

SCON, #50H ; initialise uart in mode 2

; 8 bit data and 1 stop bit

SETB TR1 ; start timer

LOOP: MOV A, #'E' ; load 1st letter 'E' in a

ACALL LOAD ; call load subroutine

MOV A, #'A' ; load 2nd letter 'A' in a

ACALL LOAD ; call load subroutine

MOV A, #'R' ; load 3rd letter 'R' in a

ACALL LOAD ; call load subroutine

MOV A, #'T'; load 4th letter 'T' in a

ACALL LOAD ; call load subroutine MOV A, #'H' ; load 4th letter 'H' in a

ACALL LOAD ; call load subroutine

SJMP LOOP ; repeat steps

LOAD: MOV SBUF, A

HERE: JNB TI, HERE; Check for transmit interrupt flag

CLR TI ; Clear transmit interrupt flag RET

END


6.2 8255A PROGRAMMABLE PERIPHERAL INTERFACE

Introduction

The 8255A programmable peripheral interface (PPI) implements a general-purpose I/O interface to connect peripheral equipment to a microcomputer system bus.

Features

- Three 8-bit Peripheral Ports Ports A, B, and C
- Three programming modes for Peripheral Ports: Mode 0 (Basic Input/Output), Mode 1 (Strobed Input/Output), and Mode 2 (Bidirectional)
- Total of 24 programmable I/O lines
- 8-bit bidirectional system data bus with standard microprocessor interface controls **6.2.1. ARCHITECTURE OF 8255A**

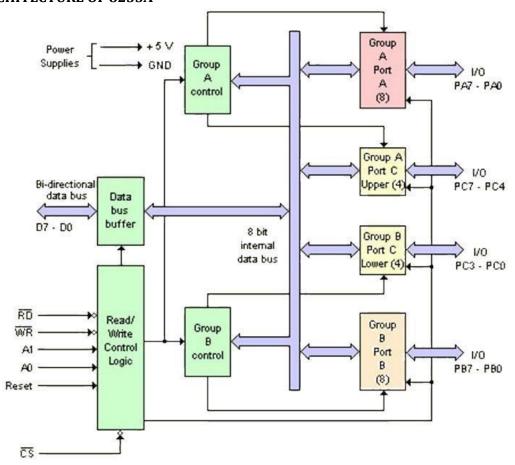

Read/Write Control Logic has six connections.

Read, Write: This control signal enables the Read/Write operation. When the signal is low, the controller reads/writes data from/to a selected I/O Port of the 8255.


RESET: This is an active high signal; it clears the control register and sets all ports in the input mode.

CS, **A0** and **A1**: Theses are device select signals. Chip Select is connected to a decoded address, and A0 and A1 are generally connected to MPU address lines A0 and A1 respectively

(CS)	$\mathbf{A_1}$	A ₀	Selected
0	0	0	Port A
0	0	1	PortB
0	1	0	Port C
0	1	1	Control Register
1	х	х	Not Selected

Control register is an 8 bit register. The contents of this register called control word. This register can be accessed to write a control word when A0 and A1 are at logic 1. This control register is not accessible for a read operation.

Bit D7 of the control register specifies either I/O function or the Bit Set/Reset function. If bit D7=1, bits D6-D0 determines I/O functions in various modes. If bit D7=0, Port C operates in the Bit Set/Reset (BSR) mode. The BSR control word does not affect the functions of Port A and Port B.

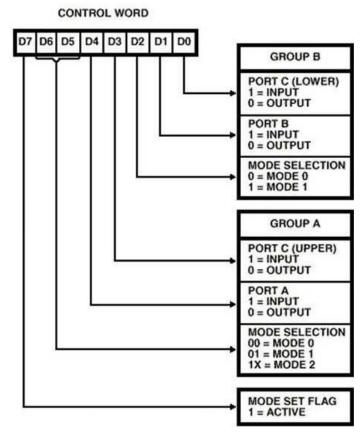

6.2.2. I/O ADDRESSING

8051 can be interfaced with the processor by two methods \square

Isolated I/O, I/O mapped I/O.

In this addressing method, IN,OUT instructions (microprocessors) are used to access the input/output devices.

☐ Memory mapped I/O.

The instructions used to access the memory itself will be used for accessing I/O devices. The I/O devices are connected to the addresses where it can be accessed using simple memory accessing mechanism.

ADDITIONAL NOTES

THEORY RELATED TO ADC

ADC Devices:


Analog to digital converters are among the most widely used devices for data acquisitions. Digital computers use binary (discrete) value but in physical world everything is analog (continuous). A physical quantity is converted to electrical signals using device called transducer or also called as sensors. Sensors and many other natural quantities produce an output that is voltage (or current). Therefore we need an analog - to - digital converter to translate the analog signal to digital numbers so that the microcontroller can read and process them.

An ADC has an n bit resolution where n can be 8, 10, 16, 0r even 24 bits. The higher resolution ADC provides a smaller step size, where step size is smallest change that can be discerned by an ADC. This is shown below.

n - bit	Number of steps	Step Size (mV)
8	256	5/256 = 19.53
10	1024	5/1024 = 4.88
12	4096	5/4096 = 1.2
16	65536	5/65536 = 0.076

In addition to resolution, conversion time is another major factor in judging an ADC. Conversion time is defined as the time it takes the ADC to convert the analog input to digital (binary) number. The ADC chips are either parallel or serial. In parallel ADC, we have 8 or more pins dedicated to bring out the binary data, but in serial ADC we have only one pin for data out.

ADC 0808

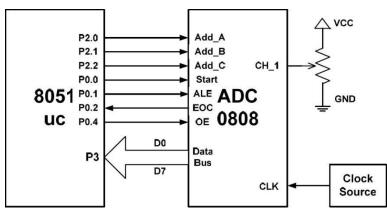

ADC0808, has 8 analog inputs. ADC0808 allows us to monitor up to 8 different analog inputs using only a single chip. ADC0808 has an 8-bit data output. The 8 analog inputs channels are multiplexed and selected according to table given below using three address pins, A, B, and C.


Select Analog Channel	C	В	A
INO	0	0	0
IN1	0	0	1
IN2	0	1	0
IN3	0	1	1
IN4	1	0	0
IN5	1	0	1
IN6	1	1	0
IN7	1	1	1

In ADC0808 Vref (+) and Vref (-) set the reference voltage. If Vref (-) = Gnd and Vref (+) = 5V, the step size is 5V/256 = 19.53 mV. Therefore,to get a 10 mV step size we need to set Vref (+) = 2.56V and Vref(-) = Gnd. ALE is used to latch in the address. SC for start conversion. EOC is for end-ofconversion, and OE is for output enable (READ). Table shows the step size relation to the Vref Voltage.

V _{ref} (v)	V _{in} (V)	Step Size (mV)
Not connected	0 to 5	5/256 = 19.53
4.0	0 to 4	4/256 = 15.32
3.0	0 to 3	3/256 = 11.71
2.56	0 to 2.56	2.56/256 = 10
2.0	0 to 2	2/256 = 7.81
1	0 to 1	1/ 256 = 3.90

Steps to access data from ADC0808

- 1. Select an analog channel by providing bits to A, B, and C addresses according to table.
- 2. Activate the ALE (address latch enable) pin. It needs an L-to-H pulse to latch in the address.
- 3. Activate SC (start conversion) by an L-to-H pulse to initiate conversion.
- 4. Monitor EOC (end of conversion) to see whether conversion is finished. H-to-l output indicates that data is converted and ready to be picked up.
- 5. Activate OE (output enable) to read data out of ADC chip. An L-to-H pulse to the OE pin will bring digital data out of the chip. Also notice that the OE is the same as the RD pin in other ADC chip.



UNIT 7: Motivation for MSP430microcontrollers

- Low Power embedded systems, On-chip peripherals (analog and digital), low-power RF capabilities. Target applications (Single-chip, low cost, low power, high performance system design). 2 Hrs

MSP430 RISC CPU architecture, Compiler-friendly features, Instruction set, Clock system, Memory subsystem. Key differentiating factors between different MSP430 families. 2 Hrs.

Introduction to Code Composer Studio (CCS v4). Understanding how to use CCS for Assembly, C, Assembly+C projects for MSP430 microcontrollers. Interrupt programming. 3 Hrs

Digital I/O – I/O ports programming using C and assembly, Understanding the muxing scheme of the MSP430 pins. 2 Hrs

UNIT 8: On-chip peripherals. Watchdog Timer,

Comparator, Op-Amp, Basic Timer, Real Time Clock (RTC), ADC, DAC, SD16, LCD, DMA. 2 Hrs

Using Low-power features of MSP430. Clock system, low-power modes, Clock request feature, Lowpower programming and Interrupt. 2 Hrs

Interfacing LED, LCD, External memory. Seven segment LED modules interfacing. Example – Realtime clock. 2 Hrs

Case Studies of applications of MSP430 - Data acquisition system, Wired Sensor network, Wireless sensor network with Chipcon RF interfaces. 3 Hrs

LOW POWER EMBEDDED SYSTEMS

1. EMBEDDED SYSTEM DESIGN CYCLE

Market requirements > Functional Specification> Architecture > Component Design > System Integration > Testing

2. NEED FOR LOW-POWER EMBEDDED SYSTEMS

- a. Why Low-Power is important
 - Longer battery life
 - Smaller products
 - Simpler power supplies
 - Less EMI simplifies PCB
 - Permanent battery
 - Environmental Stewardship

b. Examples of low power applications

- RFID based forest monitoring
- Structural monitoring
- Wildlife habitat monitoring

3. POWER AWARE ARCHITECTURE

- **a.** Sources of power consumption Dynamic power: Charging and discharging of capacitors and on switching activity Short circuit power
 - o Leakage leaking diodes and transistors

b. Trade-off between power and speed.

- o Power consumption of CMOS circuits (ignoring leakage), $P = \alpha C_L V_{dd}^2 f$, Where, α = parameter on switching activity, C = load capacitance, V_{dd} = supply voltage, f = frequency
- Decreasing voltage reduces power consumption(quadratically)

• Higher supply voltages reduce delay but increase power consumption (due to quadratic relation)

c. Power saving techniques

- $\circ \quad \text{Trade-off performance to save power} \circ \quad \text{Reduce power} \\ \text{supply voltage} \circ \quad \quad \text{Reduce frequency}$
- Structural power saving techniques
 Disable peripheral when not in use (E.g. Clock Gating)
- Disconnect modules from power supply when not in use (E.g. Power Gating) Clock gating Deactivate clocks to unused registers Signal gating Deactivate signals that cause activity if not in use Power gating Deactivate Vdd for unused HW blocks

Pin diagram of the MSP430F2003 and F2013

v _{cc} □	10	14	□ V _{ss}
P1.0/TACLK/ACLK/A0+	2	13	■ XIN/P2.6/TA1
P1.1/TA0/A0-/A4+	3	12	I I XOUT/P2.7
P1.2/TA1/A1+/A4-	4	11	TEST/SBWTCK TEST/
P1.3/VREF/A1− 	5	10	■ RST /NMI/SBWTDIO
P1.4/SMCLK/A2+/TCK	6	9	
P1.5/TA0/A2-/SCLK/TMS	7	8	P1.6/TA1/A3+/SDO/SCL/TDI/TCLK

- 4. VCC and VSS are the supply voltage and ground for the whole device (the analog and digital supplies are separate in the 16-pin package).
- 5. P1.0-P1.7, P2.6, and P2.7 are for digital input and output, grouped into ports P1 and P2.
- 6. TACLK, TAO, and TA1 are associated with Timer_A; TACLK can be used as the clock input to the timer, while TAO and TA1 can be either inputs or outputs. These can be used on several pins because of the importance of the timer.
- 7. A0-, A0+, and so on, up to A4±, are inputs to the analog-to-digital converter. It has four differential channels, each of which has negative and positive inputs. VREF is the reference voltage for the converter.
- 8. ACLK and SMCLK are outputs for the microcontroller's clock signals. These can be used to supply a clock to external components or for diagnostic purposes.
- 9. SCLK, SDO, and SCL are used for the universal serial interface, which communicates with external devices using the serial peripheral interface (SPI) or inter-integrated circuit (I2C) bus.
- 10. XIN and XOUT are the connections for a crystal, which can be used to provide an accurate, stable clock frequency.
- 11. RST is an active low reset signal. *Active low* means that it remains high near *VCC* for normal operation and is brought low near *VSS* to reset the chip. Alternative notations to show the active low nature are _RST and /RST.
- 12. NMI is the non-maskable interrupt input, which allows an external signal to interrupt the normal operation of the program.
- 13. TCK, TMS, TCLK, TDI, TDO, and TEST form the full JTAG interface, used to program and debug the device
- 14. SBWTDIO and SBWTCK provide the Spy-Bi-Wire interface, an alternative to the usual JTAG connection that saves pins.


Architecture of MSP 430

Block diagram of the MSP430F2003 and F2013, taken from data sheet.

The main features of the MSP RISC CPU architecture are,

- 1. On the left is the CPU and its supporting hardware, including the clock generator. The emulation, JTAG interface and Spy-Bi-Wire are used to communicate with a desktop computer when downloading a program and for debugging
- 2. Clock generator generates up to three different clocks (MCLK, ACLK & SMCLK) using four different sources (VCO, DCO, LFXT1 and XT2).
- 3. The main blocks are linked by the *memory address bus* (MAB) and *memory data bus* (MDB).
- 4. These devices have flash memory, 1KB in the F2003 or 2KB in the F2013, and 128 bytes of RAM.
- 5. Six blocks are shown for peripheral functions (there are many more in larger devices). a. Input/output ports,

- b. Timer_A,
- c. Watchdog timer (resets the processor if program becomes stuck in the infinite loop).
- d. The universal serial interface (USI) (SPI, I²C, RS232, USB, CAN etc...)
- e. Sigma-delta analog-to-digital converter (SD16_A)

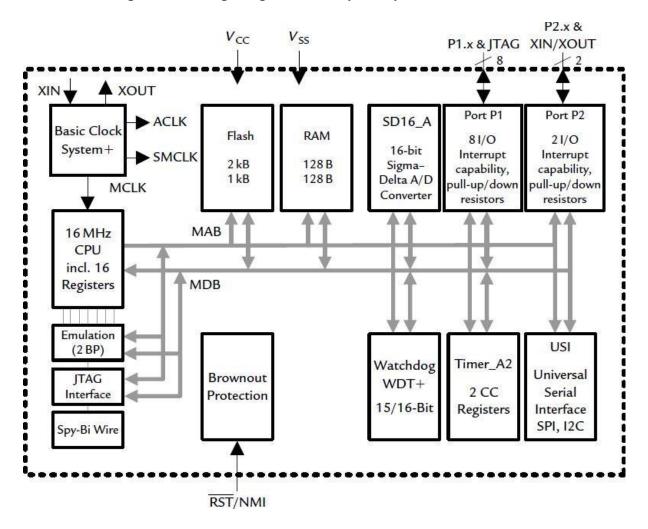

- 6. The brownout protection comes into action if the supply voltage drops to a dangerous level. Most devices include this but not some of the MSP430x1xx family.
- 7. There are ground and power supply connections. Ground is labeled VSS and is taken to define 0V. The supply connection is VCC which is mostly in the range of 1.8–3.6V.

REGISTERS OF MSP 430

MSP 430 has sixteen 16-bit registers. These registers do not have address in the main memory map. First four registers have dedicated alternate functions and the remaining 12 registers are used as working registers for general purposes.

R0/PC (PROGRAM COUNTER)
R1/SP (STACK POINTER)
R2/SR (STATUS REGISTER)

R8 (GENERAL PURPOSE)
R9 (GENERAL PURPOSE)
R10 (GENERAL PURPOSE)

R3/CG (CONSTANT GENERATOR)
R4 (GENERAL PURPOSE)
R5 (GENERAL PURPOSE)
R6 (GENERAL PURPOSE)
R7 (GENERAL PURPOSE)

Program counter, PC: This contains the address of the next instruction to be executed

Stack pointer, SP: MSP430 uses the top (high addresses) of the main RAM as stack memory. The stack pointer holds the address of the most recently added word and is automatically adjusted as the stack grows downward in memory or shrinks upward.

Status register, SR: This contains a set of flags (single bits), whose functions fall into three categories. The most commonly used flags are C, Z, N, and V, which give information about the result of the last arithmetic or logical operation. The Z flag is set if the result was zero and cleared if it was nonzero, for instance. Setting the GIE bit enables maskable interrupts. The final group of bits is CPUOFF, OSCOFF, SCGO, and SCG1, which control the mode of operation of the MCU. All systems are active when all bits are clear.


Constant generator: This provides the six most frequently used values so that they need not be fetched from memory whenever they are needed. It uses both R2 and R3 to provide a range of useful values by exploiting the CPU's addressing modes.

General purpose registers: The remaining 12 registers, R4–R15, are general working registers. They may be used for either data or addresses because both are 16-bit values, which simplify the operation significantly.

COMPILER FRIENDLY FEATURES

MSP430 stems from its recent introduction is that it is designed with compilers in mind. Most small microcontrollers are now programmed in C, and it is important that a compiler can produce compact, efficient code. The MSP430 has 16 registers in its CPU, which enhances efficiency because they can be used for local variables, parameters passed to subroutines, and either addresses or data. This is a typical feature of a RISC, but unlike a "pure" RISC, it can perform arithmetic directly on values in main memory. Microcontrollers typically spend much of their time on such operations.

MEMORY ADDRESS SPACE

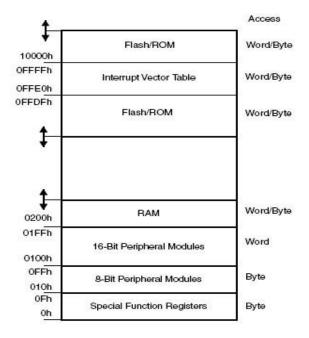

• The MSP430 von Neumann architecture has one address space shared with \circ special function registers (SFRs),

```
o peripherals, o
RAM, and o
Flash/ROM
memory
```

- Code access are always performed on even addresses.
- Data can be accessed as bytes or words.
- The addressable memory space is 64 KB

Flash/ROM

- The start address depends on the amount of Flash/ROM present and varies by device.
- The end address is 0FFFFh for devices with less than 60kB of Flash/ROM; otherwise, it is device dependent.
- Flash can be used for both code and data.
- Word or byte tables can be stored and used without the need to copy the tables to RAM before using them
- The interrupt vector table is mapped into the upper 16 words of address space, with the highest priority interrupt vector at address (0FFFEh).

RAM

- RAM starts at 0200h.
- End address depends on the amount of RAM present and varies by device.
- RAM can be used for both code and data.

Peripheral Modules

- 0100 to 01FFh is reserved for 16-bit peripheral modules.
- Accessed with word instructions.
- If Byte instructions are used ,then high byte of the result is always 0.
- 010h to 0FFh is reserved for 8-bit peripheral modules.
- These modules should be accessed with byte instructions.
- Accessed using word instructions results in unpredictable data in the high byte.
- If word data is written to a byte module only the low byte is written into the peripheral register, ignoring the high byte.

SFRs

- Peripheral functions are configured in the SFRs.
- Located in the lower 16 bytes of the address space and are organized by byte.
- SFRs must be accessed using byte instructions only

ADDRESSING MODES

1. Register addressing mode. The address is formed by adding a constant base address to the contents of a CPU register; the value in the register is not changed.

Eg: **MOV R10, R11**

Length: One or two words

Operation: Move the content of R10 to R11. R10 is not affected.

 Before:
 After:

 R10 - 0A023h
 R10 - 0A023h

 R11 - 0FA15h
 R11 - 0A023h

 PC - PC old
 PC - PC old + 2

2. Indexed addressing mode. In this case the program counter PC is used as the base address, so the constant is the offset to the data from the PC.

Eg: MOV 2(R5),6(R6)

Length: 2 or 3 words

Operation: Move the contents of the source address (contents of R5 + 2) to the destination address (contents of R6 + 6).

3. Symbolic Mode (PC Relative)

In this case the program counter PC is used as the base address, so the constant is the offset to the data from the PC

Eg: MOV EDE, TONI

Length: Two or three words

Operation: Move the contents of the source address EDE (contents of PC + X) to the destination address TONI (contents of PC + Y).

4. Absolute Mode: The constant in this form of indexed addressing is the absolute address of the data. This is already the complete address required so it should be added to a register that contains 0. Absolute addressing is shown by the prefix & and should be used for special function and peripheral registers, whose addresses are fixed in the memory map.

Eg: mov.b &P1IN ,R6; copies the port 1 input register into register R6

5. Indirect Register Mode:

Eg: MOV @R10,0(R11)

Operation: Move the contents of the source whose address is in (R10) to the destination address (R11). Indirect addressing cannot be used for the destination.

6. Indirect Auto increment Mode: This is available only for the source and is shown by the symbol @ in front of a register with a + sign after it, such as @R5+. It uses the value in R5 as a pointer and automatically increments it afterward by 1 if a byte has been fetched or by 2 for a word.

Eg: MOV @R10+,0(R11)

7. Immediate Mode


Eg: MOV #45h,TONI: Operation: Move the immediate constant 45h, which is contained in the word following the instruction, to destination address TONI. When fetching the source, the program counter points to the word following the instruction and moves the contents to the destination.

CLOCK SYSTEM

Figure below shows a simplified diagram of the Basic Clock Module+ (BCM+) for the MSP430F2xx family. The clock module provides three outputs:

- Master clock, MCLK is used by the CPU and a few peripherals.
- Sub-system master clock, SMCLK is distributed to peripherals.
- Auxiliary clock, ACLK is also distributed to peripherals.

Most peripherals can choose either SMCLK, which is often the same as MCLK and in the megahertz range, or ACLK, which is typically much slower and usually 32 KHz. A few peripherals, such as analog-to-digital converters, can also use MCLK and some, such as timers, have their own clock inputs. The frequencies of all three clocks can be divided in the BCM+ as shown in figure.

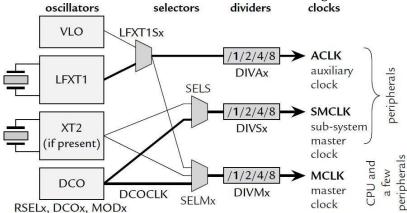


Up to four sources are available for the clock, depending on the family and variant:

Low- or high-frequency crystal oscillator, LFXT1: Available in all devices. It is usually used with a low-frequency crystal (32 KHz) but can also run with a high-frequency crystal (typically a few MHz) in most devices. An external clock signal can be used instead of a crystal if it is important to synchronize the MSP430 with other devices in the system.

High-frequency crystal oscillator, XT2: Similar to LFXT1 except that it is restricted to high frequencies. It is available in only a few devices and LFXT1 (or VLO) is used instead if XT2 is missing. **Internal very low-power, low-frequency oscillator, VLO:** Available in only the more recent MSP430F2xx devices. It provides an alternative to LFXT1 when the accuracy of a crystal is not needed. **Digitally controlled oscillator, DCO:** Available in all devices and one of the highlights of the MSP430. It is basically a highly controllable RC oscillator that starts in less than 1µs in newer devices.

WATCH DOG TIMERS.


The main purpose of the watchdog timer is to protect the system against failure of the software, such as the program becoming trapped in an unintended, infinite loop. Watchdog counts up and resets the MSP430 when it reaches its limit. The code must therefore keep clearing the counter before the limit is reached to prevent a reset. The operation of the watchdog is controlled by the 16-bit register WDTCTL

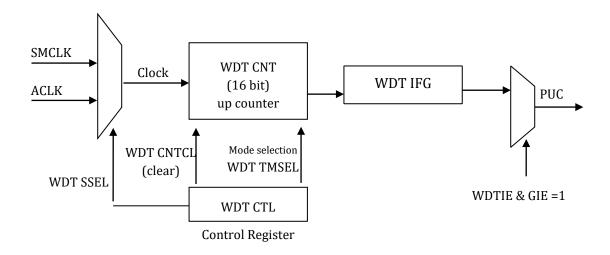

The watchdog counter is a 16-bit register WDTCNT, which is not visible to the user. It is clocked from either SMCLK (default) or ACLK, according to the WDTSSEL bit. The watchdog is always active after the MSP430 has been reset. By default the clock is SMCLK, which is in turn derived from the DCO at about 1 MHz. The default period of the watchdog is the maximum value of 32,768 counts, which is therefore around 32 ms. We must clear, stop, or reconfigure the watchdog before this time has elapsed. If the watchdog is left running, the counter must be repeatedly cleared to prevent it counting up as far as its limit. This is done by setting the WDTCNTCL bit in WDTCTL. The watchdog timer sets the WDTIFG flag in the special function register IFG1. This is cleared by a power-on reset but its value is preserved during a PUC. Thus a program can check this bit to find out whether a reset arose from the watchdog.

BASIC TIMER.

Basic Timer1 is present in all MSP430xF4xx devices. It provides the clock for the LCD module and generates periodic interrupts. A simplified block diagram of basic timer is shown in figure below. Newer devices contain a real-time clock driven by a signal at 1Hz from Basic Timer1. The register BTCTL controls most of the functions of Basic Timer1 but there are also bits in the special function registers IFG2 and IE2 for interrupts.

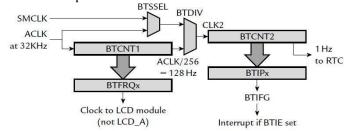

Simplified block diagram of Basic Timer1.




The Basic Timer1 control register BTCTL.

REAL TIME CLOCK.

ADC10 SAR PERIPHERAL MODULE

Figure below shows a simplified block diagram of the ADC10 in the F20x2; there are more inputs in larger devices.

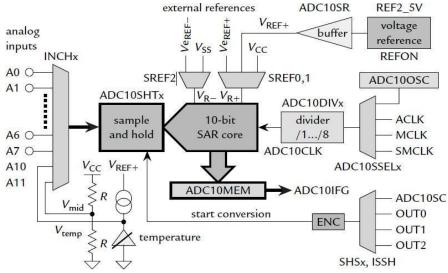

The ADC10 module of the MSP430F2274 supports fast 10 bit analogue-to-digital conversions; The module contains:

- 10-bit SAR core; The ADC100N bit enables the core and a flag ADC10BUSY is set while sampling and conversion is in progress. The result is written to ADC10MEM in a choice of two formats, selected with the ADC10DF bit.
- Clock; This can be taken from MCLK, SMCLK, ACLK, or the module's internal oscillator ADC100SC, selected with the ADC10SSELx bits.
- **Sample-and-Hold Unit:** This is shown separately in the block diagram. The time is chosen with the ADC10SHTx bits, which allow 4, 8, 16, or 64 cycles of ADC10CLK.
- **Input Selection:** A multiplexer selects the input from eight external pins A0–A7 (more in larger MSP430s) and four internal connections.
- Conversion Trigger; A conversion can be triggered in two ways provided that the ENC bit is set. The first is by setting the ADC10SC bit from software (it clears again automatically).

DIGITAL I/O PORTS

There are 10 to 80 input/output pins on different devices in the current portfolio of MSP430s; the F20xx has one complete 8-pin port and 2 pins on a second port, while the largest devices have ten full ports. Almost all pins can be used either for digital input/output or for other functions and their operation must be configured when the device starts up. Up to eight registers are associated with the digital input/output functions for each pin. Here are the registers for port P1 on a MSP430F2xx, which has the maximum number. Each pin can be configured and controlled individually; thus some pins can be digital inputs, some outputs, some used for analog functions, and so on.

- Port P1 input, P1IN: reading returns the logical values on the inputs if they are configured for digital input/output. This register is read-only and volatile. It does not need to be initialized because its contents are determined by the external signals.
- Port P1 output, P10UT: writing sends the value to be driven to each pin if it is configured
 as a digital output. If the pin is not currently an output, the value is stored in a buffer and

- appears on the pin if it is later switched to be an output. This register is not initialized and you should therefore write to P10UT before configuring the pin for output.
- Port P1 direction, P1DIR: clearing a bit to 0 configures a pin as an input, which is the
 default in most cases. Writing a 1 switches the pin to become an output. This is for digital
 input and output; the register works differently if other functions are selected using
 P1SEL.
- Port P1 resistor enable, P1REN: setting a bit to 1 activates a pull-up or pull-down resistor on a pin. Pull-ups are often used to connect a switch to an input as in the section "Read Input from a Switch" on page 80. The resistors are inactive by default (0). When the resistor is enabled (1), the corresponding bit of the P1OUT register selects whether the resistor pulls the input up to VCC (1) or down to VSS (0).
- **Port P1 selection, P1SEL:** selects either digital input/output (0, default) or an alternative function (1). Further registers may be needed to choose the particular function.
- Port P1 interrupt enable, P1IE: enables interrupts when the value on an input pin changes. This feature is activated by setting appropriate bits of P1IE to 1. Interrupts are off (0) by default. The whole port shares a single interrupt vector although pins can be enabled individually.
- Port P1 interrupt edge select, P1IES: can generate interrupts either on a positive edge (0), when the input goes from low to high, or on a negative edge from high to low (1). It is not possible to select interrupts on both edges simultaneously but this is not a problem because the direction can be reversed after each transition. Care is needed if the direction is changed while interrupts are enabled because a spurious interrupt may be generated. This register is not initialized and should therefore be set up before interrupts are enabled.
- Port P1 interrupt flag, P1IFG: a bit is set when the selected transition has been detected
 on the input. In addition, an interrupt is requested if it has been enabled. These bits can
 also be set by software, which provides a mechanism for generating a software interrupt
 (SWI).

Additional Questions:

- 1. Explain the following instructions.
 - a) DADD: DECIMAL ADD *source* and carry to the destination.

- b) BIC: BIC(.b or .w) src, dst: not src and dst to dst.
- c) CMP: CMP(.b or .w) src, dst: compare source and destination.
- d) SXT dst. Extend bit 7 to bit 8-bit15 (sign extended destination.)
- e) CALL (.b or .w) dst: SP-2 > SP, PC+2 > @SP, dst > PC (subroutine call to destination)

Missing 8255 Notes

Eg: interface 8255A with 8051 microcontroller such that the control register is selected for the address 1003H. find the address of port A,B and C Solution

The control register is selected for the address 1003H. Address lines A15 to A0 for ports and control register is as follows.

A15	A14	A13	A12	A11	A10	A9	A8	A7	A6	A5	A4	А3	A2	A1	A0	
0	0	0	1	0	0	0	0	0	0	0	0	0	0	0	0	PORT A
0	0	0	1	0	0	0	0	0	0	0	0	0	0	0	1	PORT B
0	0	0	1	0	0	0	0	0	0	0	0	0	0	1	0	PORT C
0	0	0	1	0	0	0	0	0	0	0	0	0	0	1	1	CR

Address of Port A is 1000h, Port B is 1001h, port C is 1002h and control word is 1003h. RD and WR pins of 8051 is connected to RD and WR pins of 8255 as shown in fig. A0 and A1 from 8255 are directly connected to address lines of 8051. Remaining address lines are connected to the decoder 74LS138 and the output of the decoder is connected to the CS pin of 8255. Data pins of 8255 is directly connected to the data bus of 8051 microcontroller.