libDaisy

Generated by Doxygen 1.8.13

## **Contents**

1	libda	aisy	1
	1.1	Using libdaisy	1
		1.1.1 daisy.h	2
		1.1.2 daisy_seed.h	2
		1.1.3 daisy_platform.h	2
2	Mod	dule Index	3
	2.1	Modules	3
3	Nam	nespace Index	5
	3.1	Namespace List	5
4	Clas	ss Index	7
	4.1	Class List	7
5	File	Index	9
	5.1	File List	9
6	Mod	dule Documentation	11
	6.1	LIBDAISY	11
		6.1.1 Detailed Description	11
	6.2	HUMAN_INTERFACE	12
		6.2.1 Detailed Description	12
	6.3	AUDIO	13
		6.3.1 Detailed Description	13
		6.3.2 Typedef Documentation	13

ii CONTENTS

		6.3.2.1	dsy_audio_callback	13
		6.3.2.2	dsy_audio_mc_callback	13
	6.3.3	Enumera	tion Type Documentation	13
		6.3.3.1	anonymous enum	13
	6.3.4	Function	Documentation	14
		6.3.4.1	dsy_audio_enter_bypass()	14
		6.3.4.2	dsy_audio_exit_bypass()	14
		6.3.4.3	dsy_audio_init()	14
		6.3.4.4	dsy_audio_passthru()	14
		6.3.4.5	dsy_audio_set_blocksize()	15
		6.3.4.6	dsy_audio_set_callback()	15
		6.3.4.7	dsy_audio_set_mc_callback()	15
		6.3.4.8	dsy_audio_silence()	15
		6.3.4.9	dsy_audio_start()	15
		6.3.4.10	dsy_audio_stop()	15
6.4	CONT	ROLS		16
	6.4.1	Detailed	Description	17
	6.4.2		tion Type Documentation	
		Enumera	tilon Type Documentation	17
		6.4.2.1	Curve	17 17
		6.4.2.1	Curve	17
		6.4.2.1 6.4.2.2	Curve	17 17
	6.4.3	6.4.2.1 6.4.2.2 6.4.2.3 6.4.2.4	Curve	17 17 17
	6.4.3	6.4.2.1 6.4.2.2 6.4.2.3 6.4.2.4	Curve          Polarity          Pull          Type	17 17 17 18
	6.4.3	6.4.2.1 6.4.2.2 6.4.2.3 6.4.2.4 Function	Curve	17 17 17 18
	6.4.3	6.4.2.1 6.4.2.2 6.4.2.3 6.4.2.4 Function 6.4.3.1	Curve            Polarity            Pull            Type            Documentation            AnalogControl()	17 17 17 18 18
	6.4.3	6.4.2.1 6.4.2.2 6.4.2.3 6.4.2.4 Function 6.4.3.1 6.4.3.2	Curve            Polarity            Pull            Type            Documentation            AnalogControl()            Debounce() [1/2]	17 17 17 18 18 18
	6.4.3	6.4.2.1 6.4.2.2 6.4.2.3 6.4.2.4 Function 6.4.3.1 6.4.3.2 6.4.3.3	Curve	17 17 17 18 18 18 18
	6.4.3	6.4.2.1 6.4.2.2 6.4.2.3 6.4.2.4 Function 6.4.3.1 6.4.3.2 6.4.3.3	Curve	17 17 17 18 18 18 18 18

CONTENTS

		6.4.3.8	Init() [2/5]	19
		6.4.3.9	<b>Init()</b> [3/5]	19
		6.4.3.10	<b>Init()</b> [4/5]	20
		6.4.3.11	Init() [5/5]	20
		6.4.3.12	InitBipolarCv()	21
		6.4.3.13	Parameter()	21
		6.4.3.14	Pressed() [1/2]	21
		6.4.3.15	Pressed() [2/2]	21
		6.4.3.16	Process() [1/2]	22
		6.4.3.17	Process() [2/2]	22
		6.4.3.18	RisingEdge() [1/2]	22
		6.4.3.19	RisingEdge() [2/2]	22
		6.4.3.20	TimeHeldMs() [1/2]	22
		6.4.3.21	TimeHeldMs() [2/2]	22
		6.4.3.22	Value() [1/2]	23
		6.4.3.23	Value() [2/2]	23
		6.4.3.24	~AnalogControl()	23
		6.4.3.25	~Parameter()	23
6.5	FEEDE	BACK		24
	6.5.1	Detailed	Description	24
	6.5.2	Enumera	ation Type Documentation	24
		6.5.2.1	Pins	24
	6.5.3	Function	Documentation	25
		6.5.3.1	DrawPixel()	25
		6.5.3.2	Fill()	25
		6.5.3.3	Init() [1/3]	25
		6.5.3.4	Init() [2/3]	26
		6.5.3.5	Init() [3/3]	26
		6.5.3.6	Set() [1/2]	26
		6.5.3.7	Set() [2/2]	27

iv CONTENTS

		6.5.3.8	SetColor()	. 27
		6.5.3.9	SetCursor()	. 27
		6.5.3.10	Update() [1/3]	. 28
		6.5.3.11	Update() [2/3]	. 28
		6.5.3.12	Update() [3/3]	. 28
		6.5.3.13	WriteChar()	. 28
		6.5.3.14	WriteString()	. 29
6.6	EXTER	RNAL		. 30
	6.6.1	Detailed	Description	. 31
	6.6.2	Enumera	ation Type Documentation	. 31
		6.6.2.1	MidiInputMode	. 31
		6.6.2.2	MidiMessageType	. 31
		6.6.2.3	MidiOutputMode	. 31
	6.6.3	Function	Documentation	. 33
		6.6.3.1	AsControlChange()	. 33
		6.6.3.2	AsNoteOn()	. 33
		6.6.3.3	HasEvents()	. 33
		6.6.3.4	Init()	. 33
		6.6.3.5	Listen()	. 34
		6.6.3.6	Parse()	. 34
		6.6.3.7	PopEvent()	. 34
		6.6.3.8	StartReceive()	. 34
	6.6.4	Variable	Documentation	. 34
		6.6.4.1	<b>channel</b> [1/3]	. 35
		6.6.4.2	<b>channel</b> [2/3]	. 35
		6.6.4.3	<b>channel</b> [3/3]	. 35
		6.6.4.4	control_number	. 35
		6.6.4.5	data	. 35
		6.6.4.6	note	. 35
		6.6.4.7	type	. 35

CONTENTS

		6.6.4.8	value	 35
		6.6.4.9	velocity	 35
6.7	PERIP	HERAL .		 36
	6.7.1	Detailed	Description	 38
	6.7.2	Enumera	ation Type Documentation	 38
		6.7.2.1	anonymous enum	 38
		6.7.2.2	dsy_audio_bitdepth	 39
		6.7.2.3	dsy_audio_device	 39
		6.7.2.4	dsy_audio_dir	 39
		6.7.2.5	dsy_audio_sai	 40
		6.7.2.6	dsy_audio_samplerate	 40
		6.7.2.7	dsy_audio_sync	 40
		6.7.2.8	dsy_dac_bitdepth	 41
		6.7.2.9	dsy_dac_channel	 41
		6.7.2.10	dsy_dac_mode	 41
		6.7.2.11	dsy_gpio_mode	 41
		6.7.2.12	dsy_gpio_pull	 42
		6.7.2.13	dsy_i2c_periph	 42
		6.7.2.14	dsy_i2c_pin	 42
		6.7.2.15	dsy_i2c_speed	 43
		6.7.2.16	dsy_qspi_device	 43
		6.7.2.17	dsy_qspi_mode	 43
		6.7.2.18	dsy_qspi_pin	 44
		6.7.2.19	dsy_sai_pin	 44
		6.7.2.20	MuxPin	 44
		6.7.2.21	OverSampling	 45
		6.7.2.22	SdmmcBitWidth	 45
		6.7.2.23	SdmmcMode	 46
		6.7.2.24	SdmmcSpeed	 46
		6.7.2.25	SpiPeriph	 46

vi

	6.7.2.26	SpiPin	46
6.7.3	Function	Documentation	47
	6.7.3.1	BlockingTransmit()	47
	6.7.3.2	CheckError()	47
	6.7.3.3	dsy_dac_init()	47
	6.7.3.4	dsy_dac_start()	48
	6.7.3.5	dsy_dac_write()	48
	6.7.3.6	dsy_gpio_deinit()	48
	6.7.3.7	dsy_gpio_init()	49
	6.7.3.8	dsy_gpio_read()	49
	6.7.3.9	dsy_gpio_toggle()	49
	6.7.3.10	dsy_gpio_write()	50
	6.7.3.11	dsy_i2c_init()	50
	6.7.3.12	dsy_qspi_deinit()	50
	6.7.3.13	dsy_qspi_erase()	50
	6.7.3.14	dsy_qspi_erasesector()	51
	6.7.3.15	dsy_qspi_init()	51
	6.7.3.16	dsy_qspi_write()	52
	6.7.3.17	dsy_qspi_writepage()	52
	6.7.3.18	dsy_sai_init()	52
	6.7.3.19	dsy_sai_init_from_handle()	53
	6.7.3.20	dsy_tim_delay_ms()	53
	6.7.3.21	dsy_tim_delay_tick()	53
	6.7.3.22	dsy_tim_delay_us()	54
	6.7.3.23	dsy_tim_get_ms()	54
	6.7.3.24	dsy_tim_get_tick()	54
	6.7.3.25	dsy_tim_get_us()	55
	6.7.3.26	dsy_tim_init()	55
	6.7.3.27	dsy_tim_start()	55
	6.7.3.28	FlushRx()	55

CONTENTS vii

		6.7.3.29	Get()	55
		6.7.3.30	GetFloat()	56
		6.7.3.31	GetMux()	56
		6.7.3.32	GetMuxFloat()	56
		6.7.3.33	GetMuxPtr()	57
		6.7.3.34	GetPtr()	57
		6.7.3.35	Init() [1/4]	58
		6.7.3.36	Init() [2/4]	58
		6.7.3.37	<b>Init()</b> [3/4]	58
		6.7.3.38	Init() [4/4]	58
		6.7.3.39	InitMux()	58
		6.7.3.40	InitSingle()	59
		6.7.3.41	PollReceive()	59
		6.7.3.42	PollTx()	59
		6.7.3.43	PopRx()	61
		6.7.3.44	Readable()	61
		6.7.3.45	RxActive()	61
		6.7.3.46	Start()	61
		6.7.3.47	StartRx()	61
		6.7.3.48	Stop()	62
	6.7.4	Variable	Documentation	62
		6.7.4.1	bitdepth	62
		6.7.4.2	kUartMaxBufferSize	62
		6.7.4.3	mux_channels	62
		6.7.4.4	mux_pin	62
		6.7.4.5	pin	62
		6.7.4.6	speed	62
6.8	SYSTE	М		63
	6.8.1	Detailed	Description	63
	6.8.2	Function	Documentation	63

viii CONTENTS

	6.8.2.1	dsy_dma_init()	. 63
	6.8.2.2	dsy_system_delay()	. 63
	6.8.2.3	dsy_system_getnow()	. 64
	6.8.2.4	dsy_system_init()	. 64
	6.8.2.5	dsy_system_jumpto()	. 64
	6.8.2.6	dsy_system_jumptoqspi()	. 64
6.9 DEVIC	E		. 65
6.9.1	Detailed De	escription	. 65
6.10 SHIFT	REGISTER		. 66
6.10.1	Detailed De	escription	. 66
6.10.2	Enumeration	on Type Documentation	. 66
	6.10.2.1 a	anonymous enum	. 66
6.10.3	Function D	ocumentation	. 67
	6.10.3.1	dsy_sr_4021_init()	. 67
	6.10.3.2	dsy_sr_4021_state()	. 67
	6.10.3.3	dsy_sr_4021_update()	. 67
6.11 FLASH	4		. 68
6.11.1	Detailed De	escription	. 71
6.11.2	Macro Defi	inition Documentation	. 71
	6.11.2.1 E	BLOCK_ERASE_32K_CMD [1/2]	. 71
	6.11.2.2 E	BLOCK_ERASE_32K_CMD [2/2]	. 72
	6.11.2.3	CLEAR_FLAG_STATUS_REG_CMD [1/2]	. 72
	6.11.2.4	CLEAR_FLAG_STATUS_REG_CMD [2/2]	. 72
	6.11.2.5	DIE_ERASE_CMD [1/2]	. 72
	6.11.2.6	DIE_ERASE_CMD [2/2]	. 72
	6.11.2.7	DUAL_IN_FAST_PROG_CMD [1/2]	. 72
	6.11.2.8	DUAL_IN_FAST_PROG_CMD [2/2]	. 72
	6.11.2.9	DUAL_INOUT_FAST_READ_4_BYTE_ADDR_CMD [1/2]	. 72
	6.11.2.10	DUAL_INOUT_FAST_READ_4_BYTE_ADDR_CMD [2/2]	. 73
	6.11.2.11	DUAL_INOUT_FAST_READ_CMD [1/2]	. 73

CONTENTS

6.11.2.12 DUAL_INOUT_FAST_READ_CMD [2/2]	73
6.11.2.13 DUAL_INOUT_FAST_READ_DTR_CMD [1/2]	73
6.11.2.14 DUAL_INOUT_FAST_READ_DTR_CMD [2/2]	73
6.11.2.15 DUAL_OUT_FAST_READ_4_BYTE_ADDR_CMD [1/2]	73
6.11.2.16 DUAL_OUT_FAST_READ_4_BYTE_ADDR_CMD [2/2]	73
6.11.2.17 DUAL_OUT_FAST_READ_CMD [1/2]	73
6.11.2.18 DUAL_OUT_FAST_READ_CMD [2/2]	74
6.11.2.19 DUAL_OUT_FAST_READ_DTR_CMD [1/2]	74
6.11.2.20 DUAL_OUT_FAST_READ_DTR_CMD [2/2]	74
6.11.2.21 ENTER_4_BYTE_ADDR_MODE_CMD [1/2]	74
6.11.2.22 ENTER_4_BYTE_ADDR_MODE_CMD [2/2]	74
6.11.2.23 ENTER_QUAD_CMD [1/2]	74
6.11.2.24 ENTER_QUAD_CMD [2/2]	74
6.11.2.25 EXIT_4_BYTE_ADDR_MODE_CMD [1/2]	74
6.11.2.26 EXIT_4_BYTE_ADDR_MODE_CMD [2/2]	75
6.11.2.27 EXIT_QUAD_CMD [1/2]	75
6.11.2.28 EXIT_QUAD_CMD [2/2]	75
6.11.2.29 EXT_DUAL_IN_FAST_PROG_CMD [1/2]	75
6.11.2.30 EXT_DUAL_IN_FAST_PROG_CMD [2/2]	75
6.11.2.31 EXT_QUAD_IN_FAST_PROG_CMD [1/2]	75
6.11.2.32 EXT_QUAD_IN_FAST_PROG_CMD [2/2]	75
6.11.2.33 FAST_READ_4_BYTE_ADDR_CMD [1/2]	75
6.11.2.34 FAST_READ_4_BYTE_ADDR_CMD [2/2]	76
6.11.2.35 FAST_READ_CMD [1/2]	76
6.11.2.36 FAST_READ_CMD [2/2]	76
6.11.2.37 FAST_READ_DTR_CMD [1/2]	76
6.11.2.38 FAST_READ_DTR_CMD [2/2]	76
6.11.2.39 IS25LP064A_EAR_HIGHEST_SE	76
6.11.2.40 IS25LP064A_EAR_LOWEST_SEG	76
6.11.2.41 IS25LP064A EAR SECOND SEG	76

CONTENTS

6.11.2.42 IS25LP064A_EAR_THIRD_SEG	77
6.11.2.43 IS25LP064A_EVCR_DTRP	77
6.11.2.44 IS25LP064A_EVCR_DUAL	77
6.11.2.45 IS25LP064A_EVCR_ODS	77
6.11.2.46 IS25LP064A_EVCR_QUAD	77
6.11.2.47 IS25LP064A_EVCR_RH	77
6.11.2.48 IS25LP064A_FSR_ERERR	77
6.11.2.49 IS25LP064A_FSR_ERSUS	77
6.11.2.50 IS25LP064A_FSR_NBADDR	78
6.11.2.51 IS25LP064A_FSR_PGERR	78
6.11.2.52 IS25LP064A_FSR_PGSUS	78
6.11.2.53 IS25LP064A_FSR_PRERR	78
6.11.2.54 IS25LP064A_FSR_READY	78
6.11.2.55 IS25LP064A_NVCR_DTRP	78
6.11.2.56 IS25LP064A_NVCR_DUAL	78
6.11.2.57 IS25LP064A_NVCR_NB_DUMMY	78
6.11.2.58 IS25LP064A_NVCR_NBADDR	79
6.11.2.59 IS25LP064A_NVCR_ODS	79
6.11.2.60 IS25LP064A_NVCR_QUAB	79
6.11.2.61 IS25LP064A_NVCR_RH	79
6.11.2.62 IS25LP064A_NVCR_SEGMENT	79
6.11.2.63 IS25LP064A_NVCR_XIP	79
6.11.2.64 IS25LP064A_SR_QE	79
6.11.2.65 IS25LP064A_SR_SRWREN	79
6.11.2.66 IS25LP064A_SR_WIP	30
6.11.2.67 IS25LP064A_SR_WREN	30
6.11.2.68 IS25LP064A_VCR_NB_DUMMY	30
6.11.2.69 IS25LP064A_VCR_WRAP	30
6.11.2.70 IS25LP064A_VCR_XIP	30
6.11.2.71 IS25LP080D_EAR_HIGHEST_SE	30

CONTENTS xi

6.11.2.72 IS25LP080D_EAR_LOWEST_SEG	80
6.11.2.73 IS25LP080D_EAR_SECOND_SEG	81
6.11.2.74 IS25LP080D_EAR_THIRD_SEG	81
6.11.2.75 IS25LP080D_EVCR_DTRP	81
6.11.2.76 IS25LP080D_EVCR_DUAL	81
6.11.2.77 IS25LP080D_EVCR_ODS	81
6.11.2.78 IS25LP080D_EVCR_QUAD	81
6.11.2.79 IS25LP080D_EVCR_RH	81
6.11.2.80 IS25LP080D_FSR_ERERR	81
6.11.2.81 IS25LP080D_FSR_ERSUS	82
6.11.2.82 IS25LP080D_FSR_NBADDR	82
6.11.2.83 IS25LP080D_FSR_PGERR	82
6.11.2.84 IS25LP080D_FSR_PGSUS	82
6.11.2.85 IS25LP080D_FSR_PRERR	82
6.11.2.86 IS25LP080D_FSR_READY	82
6.11.2.87 IS25LP080D_NVCR_DTRP	82
6.11.2.88 IS25LP080D_NVCR_DUAL	82
6.11.2.89 IS25LP080D_NVCR_NB_DUMMY	83
6.11.2.90 IS25LP080D_NVCR_NBADDR	83
6.11.2.91 IS25LP080D_NVCR_ODS	83
6.11.2.92 IS25LP080D_NVCR_QUAB	83
6.11.2.93 IS25LP080D_NVCR_RH	83
6.11.2.94 IS25LP080D_NVCR_SEGMENT	83
6.11.2.95 IS25LP080D_NVCR_XIP	83
6.11.2.96 IS25LP080D_SR_QE	83
6.11.2.97 IS25LP080D_SR_SRWREN	84
6.11.2.98 IS25LP080D_SR_WIP	84
6.11.2.99 IS25LP080D_SR_WREN	84
6.11.2.100S25LP080D_VCR_NB_DUMMY	84
6.11.2.101IS25LP080D_VCR_WRAP	84

xii CONTENTS

6.11.2.10 <b>2</b> S25LP080D_VCR_XIP	84
6.11.2.103MULTIPLE_IO_READ_ID_CMD [1/2]	84
6.11.2.104MULTIPLE_IO_READ_ID_CMD [2/2]	85
6.11.2.105PAGE_PROG_4_BYTE_ADDR_CMD [1/2]	85
6.11.2.106PAGE_PROG_4_BYTE_ADDR_CMD [2/2]	85
6.11.2.107PAGE_PROG_CMD [1/2]	85
6.11.2.108PAGE_PROG_CMD [2/2]	85
6.11.2.109PROG_ERASE_RESUME_CMD [1/2]	85
6.11.2.110PROG_ERASE_RESUME_CMD [2/2]	85
6.11.2.111PROG_ERASE_SUSPEND_CMD [1/2]	85
6.11.2.112PROG_ERASE_SUSPEND_CMD [2/2]	86
6.11.2.113PROG_OTP_ARRAY_CMD [1/2]	86
6.11.2.114PROG_OTP_ARRAY_CMD [2/2]	86
6.11.2.115QUAD_IN_FAST_PROG_4_BYTE_ADDR_CMD [1/2]	86
6.11.2.116QUAD_IN_FAST_PROG_4_BYTE_ADDR_CMD [2/2]	86
6.11.2.117QUAD_IN_FAST_PROG_CMD [1/2]	86
6.11.2.118QUAD_IN_FAST_PROG_CMD [2/2]	86
6.11.2.119QUAD_INOUT_FAST_READ_4_BYTE_ADDR_CMD [1/2]	86
6.11.2.120QUAD_INOUT_FAST_READ_4_BYTE_ADDR_CMD [2/2]	87
6.11.2.121QUAD_INOUT_FAST_READ_CMD [1/2]	87
6.11.2.122QUAD_INOUT_FAST_READ_CMD [2/2]	87
6.11.2.123QUAD_INOUT_FAST_READ_DTR_CMD [1/2]	87
6.11.2.124QUAD_INOUT_FAST_READ_DTR_CMD [2/2]	87
6.11.2.125QUAD_OUT_FAST_READ_4_BYTE_ADDR_CMD [1/2]	87
6.11.2.126QUAD_OUT_FAST_READ_4_BYTE_ADDR_CMD [2/2]	87
6.11.2.127QUAD_OUT_FAST_READ_CMD [1/2]	87
6.11.2.128QUAD_OUT_FAST_READ_CMD [2/2]	88
6.11.2.129QUAD_OUT_FAST_READ_DTR_CMD [1/2]	88
6.11.2.130QUAD_OUT_FAST_READ_DTR_CMD [2/2]	88
6.11.2.131READ_4_BYTE_ADDR_CMD [1/2]	88

CONTENTS xiii

6.11.2.132READ_4_BYTE_ADDR_CMD [2/2]	88
6.11.2.133READ_CMD [1/2]	88
6.11.2.134READ_CMD [2/2]	88
6.11.2.135READ_ENHANCED_VOL_CFG_REG_CMD [1/2]	88
6.11.2.136READ_ENHANCED_VOL_CFG_REG_CMD [2/2]	89
6.11.2.137READ_EXT_ADDR_REG_CMD [1/2]	89
6.11.2.138READ_EXT_ADDR_REG_CMD [2/2]	89
6.11.2.139READ_FLAG_STATUS_REG_CMD [1/2]	89
6.11.2.140READ_FLAG_STATUS_REG_CMD [2/2]	89
6.11.2.141READ_ID_CMD [1/2]	89
6.11.2.142READ_ID_CMD [2/2]	89
6.11.2.143READ_ID_CMD2 [1/2]	89
6.11.2.144READ_ID_CMD2 [2/2]	90
6.11.2.145READ_LOCK_REG_CMD [1/2]	90
6.11.2.146READ_LOCK_REG_CMD [2/2]	90
6.11.2.147READ_NONVOL_CFG_REG_CMD [1/2]	90
6.11.2.148READ_NONVOL_CFG_REG_CMD [2/2]	90
6.11.2.149READ_OTP_ARRAY_CMD [1/2]	90
6.11.2.150READ_OTP_ARRAY_CMD [2/2]	90
6.11.2.151READ_READ_PARAM_REG_CMD [1/2]	90
6.11.2.152READ_READ_PARAM_REG_CMD [2/2]	91
6.11.2.153READ_SERIAL_FLASH_DISCO_PARAM_CMD [1/2]	91
6.11.2.154READ_SERIAL_FLASH_DISCO_PARAM_CMD [2/2]	91
6.11.2.155READ_STATUS_REG_CMD [1/2]	91
6.11.2.156READ_STATUS_REG_CMD [2/2]	91
6.11.2.157RESET_ENABLE_CMD [1/2]	91
6.11.2.158RESET_ENABLE_CMD [2/2]	91
6.11.2.159RESET_MEMORY_CMD [1/2]	91
6.11.2.160RESET_MEMORY_CMD [2/2]	92
6.11.2.161SECTOR_ERASE_4_BYTE_ADDR_CMD [1/2]	92

XIV

	6.11.2.162SECTOR_ERASE_4_BYTE_ADDR_CMD [2/2]	92
	6.11.2.163SECTOR_ERASE_CMD [1/2]	92
	6.11.2.164SECTOR_ERASE_CMD [2/2]	92
	6.11.2.165SUBSECTOR_ERASE_4_BYTE_ADDR_CMD [1/2]	92
	6.11.2.166SUBSECTOR_ERASE_4_BYTE_ADDR_CMD [2/2]	92
	6.11.2.167SUBSECTOR_ERASE_CMD [1/2]	92
	6.11.2.16&SUBSECTOR_ERASE_CMD [2/2]	93
	6.11.2.16%SUBSECTOR_ERASE_QPI_CMD [1/2]	93
	6.11.2.170SUBSECTOR_ERASE_QPI_CMD [2/2]	93
	6.11.2.171WRITE_DISABLE_CMD [1/2]	93
	6.11.2.172WRITE_DISABLE_CMD [2/2]	93
	6.11.2.173WRITE_ENABLE_CMD [1/2]	93
	6.11.2.174WRITE_ENABLE_CMD [2/2]	93
	6.11.2.175WRITE_ENHANCED_VOL_CFG_REG_CMD [1/2]	93
	6.11.2.176WRITE_ENHANCED_VOL_CFG_REG_CMD [2/2]	94
	6.11.2.177WRITE_EXT_ADDR_REG_CMD [1/2]	94
	6.11.2.178WRITE_EXT_ADDR_REG_CMD [2/2]	94
	6.11.2.179WRITE_LOCK_REG_CMD [1/2]	94
	6.11.2.180WRITE_LOCK_REG_CMD [2/2]	94
	6.11.2.181WRITE_NONVOL_CFG_REG_CMD [1/2]	94
	6.11.2.182WRITE_NONVOL_CFG_REG_CMD [2/2]	94
	6.11.2.183WRITE_READ_PARAM_REG_CMD [1/2]	94
	6.11.2.184WRITE_READ_PARAM_REG_CMD [2/2]	95
	6.11.2.185WRITE_STATUS_REG_CMD [1/2]	95
	6.11.2.186WRITE_STATUS_REG_CMD [2/2]	95
6.12 C	ODEC	96
6.	12.1 Detailed Description	96
6.	12.2 Typedef Documentation	96
	6.12.2.1 sa_audio_callback	96
6.	12.3 Function Documentation	96

CONTENTS xv

		6.12.3.1 codec_ak4556_init()
		6.12.3.2 codec_pcm3060_init()
		6.12.3.3 codec_wm8731_enter_bypass()
		6.12.3.4 codec_wm8731_exit_bypass()
		6.12.3.5 codec_wm8731_init()
6.13	LED .	
	6.13.1	Detailed Description
	6.13.2	Enumeration Type Documentation
		6.13.2.1 anonymous enum
	6.13.3	Function Documentation
		6.13.3.1 dsy_led_driver_color_by_name()
		6.13.3.2 dsy_led_driver_init()
		6.13.3.3 dsy_led_driver_set_led()
		6.13.3.4 dsy_led_driver_update()
6.14	SDRAM	M
	6.14.1	Detailed Description
	6.14.2	Macro Definition Documentation
		6.14.2.1 DSY_SDRAM_BSS
		6.14.2.2 DSY_SDRAM_DATA
	6.14.3	Enumeration Type Documentation
		6.14.3.1 anonymous enum
		6.14.3.2 dsy_sdram_pin
		6.14.3.3 dsy_sdram_state
	6.14.4	Function Documentation
		6.14.4.1 dsy_sdram_init()
6.15	DAISY	
	6.15.1	Detailed Description
	6.15.2	Macro Definition Documentation
		6.15.2.1 DMA_BUFFER_MEM_SECTION
		6.15.2.2 DTCM_MEM_SECTION

xvi CONTENTS

6.15.3	Enumeration	on Type Documentation	 107
	6.15.3.1	anonymous enum	 107
	6.15.3.2	anonymous enum	 108
	6.15.3.3	anonymous enum	 108
	6.15.3.4	anonymous enum	 108
	6.15.3.5	Ctrl	 109
	6.15.3.6	dsy_gpio_port	 109
	6.15.3.7 I	FootswitchLed	 110
	6.15.3.8	GateInput	 110
	6.15.3.9 H	Knob [1/2]	 110
	6.15.3.10 H	Knob [2/2]	 111
	6.15.3.11 F	RingLed	 111
	6.15.3.12	Sw [1/2]	 112
	6.15.3.13	Sw [2/2]	 112
6.15.4	Function D	Documentation	 112
	6.15.4.1	AudioBlockSize() [1/3]	 112
	6.15.4.2	AudioBlockSize() [2/3]	 112
	6.15.4.3	AudioBlockSize() [3/3]	 113
	6.15.4.4	AudioCallbackRate() [1/3]	 113
	6.15.4.5	AudioCallbackRate() [2/3]	 113
	6.15.4.6	AudioCallbackRate() [3/3]	 113
	6.15.4.7	AudioSampleRate() [1/4]	 113
	6.15.4.8	AudioSampleRate() [2/4]	 113
	6.15.4.9	AudioSampleRate() [3/4]	 113
	6.15.4.10	AudioSampleRate() [4/4]	 113
	6.15.4.11	ChangeAudioCallback() [1/3]	 113
	6.15.4.12	ChangeAudioCallback() [2/3]	 114
	6.15.4.13	ChangeAudioCallback() [3/3]	 114
	6.15.4.14	ClearLeds() [1/2]	 114
	6.15.4.15	ClearLeds() [2/2]	 114

CONTENTS xvii

6.15.4.16 Configure()
6.15.4.17 cube()
6.15.4.18 daisy_field_init()
6.15.4.19 DaisyPatch()
6.15.4.20 DaisyPetal()
6.15.4.21 DebounceControls() [1/3]
6.15.4.22 DebounceControls() [2/3]
6.15.4.23 DebounceControls() [3/3]
6.15.4.24 DelayMs() [1/3]
6.15.4.25 DelayMs() [2/3]
6.15.4.26 DelayMs() [3/3]
6.15.4.27 DisplayControls()
6.15.4.28 dsy_pin()
6.15.4.29 dsy_pin_cmp()
6.15.4.30 f2s16()
6.15.4.31 f2s24()
6.15.4.32 GetCtrlValue()
6.15.4.33 GetExpression()
6.15.4.34 GetKnobValue() [1/2]
6.15.4.35 GetKnobValue() [2/2]
6.15.4.36 GetPin()
6.15.4.37 Init() [1/4]
6.15.4.38 Init() [2/4]
6.15.4.39 Init() [3/4]
6.15.4.40 Init() [4/4]
6.15.4.41 s162f()
6.15.4.42 s242f()
6.15.4.43 SetAudioBlockSize() [1/4]
6.15.4.44 SetAudioBlockSize() [2/4]
6.15.4.45 SetAudioBlockSize() [3/4]

xviii CONTENTS

	6.15.4.46	SetAudioBlockSize() [4/4]	 121
	6.15.4.47	7 SetFootswitchLed()	 122
	6.15.4.48	3 SetLed()	 122
	6.15.4.49	9 SetRingLed()	 122
	6.15.4.50	O SetTestPoint()	 122
	6.15.4.51	StartAdc() [1/3]	 123
	6.15.4.52	2 StartAdc() [2/3]	 123
	6.15.4.53	3 StartAdc() [3/3]	 123
	6.15.4.54	4 StartAudio() [1/4]	 123
	6.15.4.55	5 StartAudio() [2/4]	 123
	6.15.4.56	6 StartAudio() [3/4]	 123
	6.15.4.57	7 StartAudio() [4/4]	 124
	6.15.4.58	3 UpdateAnalogControls() [1/3]	 124
	6.15.4.59	O UpdateAnalogControls() [2/3]	 124
	6.15.4.60	UpdateAnalogControls() [3/3]	 124
	6.15.4.61	UpdateLeds() [1/2]	 124
	6.15.4.62	2 UpdateLeds() [2/2]	 125
	6.15.4.63	3 ∼DaisyPatch()	 125
	6.15.4.64	4 ∼DaisyPetal()	 125
6.15.5	Variable [	Documentation	 125
	6.15.5.1	adc	 125
	6.15.5.2	audio_handle	 125
	6.15.5.3	button1	 125
	6.15.5.4	button2	 125
	6.15.5.5	buttons	 126
	6.15.5.6	controls	 126
	6.15.5.7	cvs	 126
	6.15.5.8	dac_handle	 126
	6.15.5.9	display	 126
	6.15.5.10	) encoder [1/3]	 126

CONTENTS xix

6.15.5.11 encoder [2/3]
6.15.5.12 encoder [3/3]
6.15.5.13 expression
6.15.5.14 footswitch_led
6.15.5.15 gate_in
6.15.5.16 gate_input
6.15.5.17 gate_out
6.15.5.18 gate_output
6.15.5.19 i2c1_handle
6.15.5.20 i2c2_handle
6.15.5.21 keyboard_sr
6.15.5.22 knob
6.15.5.23 knob1
6.15.5.24 knob2
6.15.5.25 knobs [1/2]
6.15.5.26 knobs [2/2]
6.15.5.27 led1
6.15.5.28 led2
6.15.5.29 midi
6.15.5.30 qspi_handle
6.15.5.31 ring_led
6.15.5.32 sai_handle
6.15.5.33 sdram_handle
6.15.5.34 seed [1/4]
6.15.5.35 seed [2/4]
6.15.5.36 seed [3/4]
6.15.5.37 seed [4/4]
6.15.5.38 switches [1/2]
6.15.5.39 switches [2/2]
6.15.5.40 usb_handle

CONTENTS

6.	16 UTILIT	Y
	6.16.1	Detailed Description
	6.16.2	Macro Definition Documentation
		6.16.2.1 BSP_SD_CardInfo
		6.16.2.2 MSD_ERROR
		6.16.2.3 MSD_ERROR_SD_NOT_PRESENT
		6.16.2.4 MSD_OK
		6.16.2.5 SD_DATATIMEOUT
		6.16.2.6 SD_NOT_PRESENT
		6.16.2.7 SD_PRESENT
		6.16.2.8 SD_TRANSFER_BUSY
		6.16.2.9 SD_TRANSFER_OK
	6.16.3	Enumeration Type Documentation
		6.16.3.1 PresetColor
	6.16.4	Function Documentation
		6.16.4.1 Blue()
		6.16.4.2 BSP_SD_AbortCallback()
		6.16.4.3 BSP_SD_Erase()
		6.16.4.4 BSP_SD_GetCardInfo()
		6.16.4.5 BSP_SD_GetCardState()
		6.16.4.6 BSP_SD_Init()
		6.16.4.7 BSP_SD_lsDetected()
		6.16.4.8 BSP_SD_ITConfig()
		6.16.4.9 BSP_SD_ReadBlocks()
		6.16.4.10 BSP_SD_ReadBlocks_DMA()
		6.16.4.11 BSP_SD_ReadCpltCallback()
		6.16.4.12 BSP_SD_WriteBlocks()
		6.16.4.13 BSP_SD_WriteBlocks_DMA()
		6.16.4.14 BSP_SD_WriteCpltCallback()
		6.16.4.15 capacity() [1/2]

CONTENTS xxi

6.16.4.16 capacity() [2/2]
6.16.4.17 dsy_get_unique_id()
6.16.4.18 dsy_hal_map_get_i2c()
6.16.4.19 dsy_hal_map_get_pin()
6.16.4.20 dsy_hal_map_get_port()
6.16.4.21 Flush() [1/2]
6.16.4.22 Flush() [2/2]
6.16.4.23 Green()
6.16.4.24 ImmediateRead() [1/4]
6.16.4.25 ImmediateRead() [2/4]
6.16.4.26 ImmediateRead() [3/4]
6.16.4.27 ImmediateRead() [4/4]
6.16.4.28 Init() [1/4]
6.16.4.29 Init() [2/4]
6.16.4.30 Init() [3/4]
6.16.4.31 Init() [4/4]
6.16.4.32 Overwrite() [1/4]
6.16.4.33 Overwrite() [2/4]
6.16.4.34 Overwrite() [3/4]
6.16.4.35 Overwrite() [4/4]
6.16.4.36 Read() [1/2]
6.16.4.37 Read() [2/2]
6.16.4.38 readable() [1/2]
6.16.4.39 readable() [2/2]
6.16.4.40 Red()
6.16.4.41 Swallow()
6.16.4.42 writable() [1/2]
6.16.4.43 writable() [2/2]
6.16.4.44 Write() [1/2]
6.16.4.45 Write() [2/2]

xxii CONTENTS

6.16.5	Variable Documentation	47
	6.16.5.1 Font_11x18	47
	6.16.5.2 Font_16x26	47
	6.16.5.3 Font_6x8	47
	6.16.5.4 Font_7x10	48
	6.16.5.5 hi2c1	48
	6.16.5.6 hi2c2	48
	6.16.5.7 hi2c3	48
	6.16.5.8 hi2c4	48
6.17 USBD_	CDC_IF 1	49
6.17.1	Detailed Description	49
6.18 USBD_	CDC_IF_Exported_Defines	50
6.19 USBD_	CDC_IF_Exported_Types	51
6.19.1	Detailed Description	51
6.19.2	Typedef Documentation	51
	6.19.2.1 CDC_ReceiveCallback	51
6.20 USBD_	CDC_IF_Exported_Macros	52
6.21 USBD_	CDC_IF_Exported_Variables	53
6.21.1	Detailed Description	53
6.21.2	Variable Documentation	53
	6.21.2.1 USBD_Interface_fops_FS	53
	6.21.2.2 USBD_Interface_fops_HS	53
6.22 USBD_	CDC_IF_Exported_FunctionsPrototype	54
6.22.1	Detailed Description	54
6.22.2	Function Documentation	54
	6.22.2.1 CDC_Set_Rx_Callback_FS()	54
	6.22.2.2 CDC_Transmit_FS()	54
	6.22.2.3 CDC_Transmit_HS()	54
6.23 USBD_	CONF	55
6.23.1	Detailed Description	55

CONTENTS xxiii

6.24 USBD_CONF_Exported_Variables
6.25 USBD_CONF_Exported_Defines
6.25.1 Detailed Description
6.25.2 Macro Definition Documentation
6.25.2.1 DEVICE_FS
6.25.2.2 DEVICE_HS
6.25.2.3 USBD_DEBUG_LEVEL
6.25.2.4 USBD_LPM_ENABLED
6.25.2.5 USBD_MAX_NUM_CONFIGURATION
6.25.2.6 USBD_MAX_NUM_INTERFACES
6.25.2.7 USBD_MAX_STR_DESC_SIZ
6.25.2.8 USBD_SELF_POWERED
6.25.2.9 USBD_SUPPORT_USER_STRING
6.26 USBD_CONF_Exported_Macros
6.26.1 Detailed Description
6.26.2 Macro Definition Documentation
6.26.2.1 USBD_DbgLog
6.26.2.2 USBD_Delay
6.26.2.3 USBD_ErrLog
6.26.2.4 USBD_free
6.26.2.5 USBD_malloc
6.26.2.6 USBD_memcpy
6.26.2.7 USBD_memset
6.26.2.8 USBD_UsrLog
6.27 USBD_CONF_Exported_Types
6.28 USBD_CONF_Exported_FunctionsPrototype
6.29 USBD_DESC
6.29.1 Detailed Description
6.30 USBD_DESC_Exported_Constants
6.30.1 Detailed Description

xxiv CONTENTS

	6.30.2	Macro Definition Documentation	4
		6.30.2.1 DEVICE_ID1	4
		6.30.2.2 DEVICE_ID2	4
		6.30.2.3 DEVICE_ID3	4
		6.30.2.4 USB_SIZ_STRING_SERIAL	4
6.31	USBD_	DESC_Exported_Defines	5
6.32	USBD_	DESC_Exported_TypesDefinitions	6
6.33	USBD_	DESC_Exported_Macros	7
6.34	USBD_	DESC_Exported_Variables	8
	6.34.1	Detailed Description	8
	6.34.2	Variable Documentation	8
		6.34.2.1 FS_Desc	8
		6.34.2.2 HS_Desc	8
6.35	USBD_	DESC_Exported_FunctionsPrototype	9
6.36	Externa	ıls	0
6.37	STM32	_USB_OTG_DEVICE_LIBRARY	1
	6.37.1	Detailed Description	1
6.38	USBD_	OTG_DRIVER	2
	6.38.1	Detailed Description	2
Nam	espace	Documentation 17	3
7.1	daisy N	amespace Reference	3
	7.1.1	Detailed Description	4

7

CONTENTS xxv

8	Clas	s Docum	mentation	175
	8.1	daisy::A	AdcChannelConfig Struct Reference	175
		8.1.1	Detailed Description	175
	8.2	daisy::A	AdcHandle Class Reference	175
		8.2.1	Detailed Description	176
	8.3	daisy::A	AnalogControl Class Reference	176
		8.3.1	Detailed Description	177
	8.4	codec_f	frame_t Struct Reference	177
		8.4.1	Detailed Description	177
		8.4.2	Member Data Documentation	177
			8.4.2.1 I	177
			8.4.2.2 r	178
	8.5	color St	truct Reference	178
		8.5.1	Detailed Description	178
		8.5.2	Member Data Documentation	178
			8.5.2.1 blue	178
			8.5.2.2 green	178
			8.5.2.3 red	179
	8.6	daisy::C	Color Class Reference	179
		8.6.1	Detailed Description	179
	8.7	daisy::C	ControlChangeEvent Struct Reference	179
		8.7.1	Detailed Description	180
	8.8	daisy::d	daisy_field Struct Reference	180
		8.8.1	Detailed Description	180
	8.9	daisy::D	DaisyPatch Class Reference	180
		8.9.1	Detailed Description	181
	8.10	daisy::D	DaisyPetal Class Reference	181
		8.10.1	Detailed Description	182
	8.11	daisy::D	DaisyPod Class Reference	183
		8.11.1	Detailed Description	183

xxvi CONTENTS

8.12	daisy::I	DaisySeed Class Reference	84
	8.12.1	Detailed Description	84
8.13	dsy_au	udio_handle Struct Reference	84
	8.13.1	Detailed Description	85
	8.13.2	Member Data Documentation	85
		8.13.2.1 block_size	85
		8.13.2.2 dev0_i2c	85
		8.13.2.3 dev1_i2c	85
		8.13.2.4 sai	85
8.14	dsy_da	ac_handle Struct Reference	85
	8.14.1	Detailed Description	86
	8.14.2	Member Data Documentation	86
		8.14.2.1 bitdepth	86
		8.14.2.2 mode	86
		8.14.2.3 pin_config	86
8.15	dsy_gp	pio Struct Reference	86
	8.15.1	Detailed Description	86
	8.15.2	Member Data Documentation	87
		8.15.2.1 mode	87
		8.15.2.2 pin	87
		8.15.2.3 pull	87
8.16	dsy_gp	oio_pin Struct Reference	87
	8.16.1	Detailed Description	87
	8.16.2	Member Data Documentation	87
		8.16.2.1 pin	88
		8.16.2.2 port	88
8.17	dsy_i20	c_handle Struct Reference	88
		Detailed Description	
		Member Data Documentation	
		8.17.2.1 periph	

CONTENTS xxvii

		8.17.2.2	pi	n_co	nfig						 	 		 		 			188
		8.17.2.3	sp	oeed							 	 		 		 			189
8.18	dsy_qs	pi_handle	e Str	ruct F	Refere	enc	e.				 	 		 		 			189
	8.18.1	Detailed	Des	scrip	tion						 	 	 	 		 			189
	8.18.2	Member	Dat	ta Do	ocume	enta	atior	n			 	 	 	 		 			189
		8.18.2.1	de	evice							 	 	 	 		 			189
		8.18.2.2	m	ode							 	 	 	 		 			189
		8.18.2.3	pi	n_co	nfig						 	 	 	 		 			190
8.19	dsy_sa	i_handle S	Stru	ıct R	efere	nce	١				 	 	 	 		 			190
	8.19.1	Detailed	Des	scrip	tion						 	 		 		 			190
	8.19.2	Member	Dat	ta Do	ocume	enta	atior	n			 	 	 	 		 			190
		8.19.2.1	a_	_dire	ction						 	 	 	 		 			190
		8.19.2.2	b_	_dire	ction						 	 	 	 		 			190
		8.19.2.3	bi	tdep	th .						 	 	 	 		 			191
		8.19.2.4	de	evice							 	 	 	 		 			191
		8.19.2.5	in	it .							 	 	 	 		 			191
		8.19.2.6	sa	ai1_p	oin_co	onfiç	g.				 	 	 	 		 			191
		8.19.2.7	sa	ai2_p	oin_co	onfiç	g.				 	 	 	 		 			191
		8.19.2.8	sa	ample	erate						 	 	 	 		 			191
		8.19.2.9	Sy	/nc_c	config	<b>j</b> .					 	 	 	 		 			191
8.20	DSY_S	D_CardIn	nfoT	уреГ	ef St	ruc	t Re	efere	enc	е.	 	 	 	 		 			192
	8.20.1	Detailed	Des	scrip	tion						 	 	 	 		 			192
	8.20.2	Member	Dat	ta Do	ocume	enta	atior	n			 	 	 	 		 			192
		8.20.2.1	ВІ	lockN	Nbr .						 	 	 	 		 			192
		8.20.2.2	ВІ	lockS	Size						 	 	 	 		 			192
		8.20.2.3	C	ardS	peed						 	 	 	 		 			192
		8.20.2.4	C	ardT <sub>!</sub>	ype .						 	 	 	 		 			193
		8.20.2.5	C	ardV	ersior	n.					 	 	 	 		 			193
		8.20.2.6	C	lass							 	 	 	 		 			193
		8.20.2.7	Lo	ogBlo	ockNt	or.					 	 	 	 		 			193

xxviii CONTENTS

8.20.2.8 LogBlockSize
8.20.2.9 RelCardAdd
8.21 dsy_sdram_handle Struct Reference
8.21.1 Detailed Description
8.21.2 Member Data Documentation
8.21.2.1 pin_config
8.21.2.2 state
8.22 dsy_sr_4021_handle Struct Reference
8.22.1 Detailed Description
8.22.2 Member Data Documentation
8.22.2.1 clk
8.22.2.2 cs
8.22.2.3 data
8.22.2.4 num_daisychained
8.22.2.5 num_parallel
8.22.2.6 pin_config
8.22.2.7 states
8.23 daisy::Encoder Class Reference
8.23.1 Detailed Description
8.24 FontDef Struct Reference
8.24.1 Detailed Description
8.24.2 Member Data Documentation
8.24.2.1 data
8.24.2.2 FontHeight
8.24.2.3 FontWidth
8.25 daisy::GateIn Class Reference
8.25.1 Detailed Description
8.25.2 Constructor & Destructor Documentation
8.25.2.1 Gateln()
8.25.2.2 ~GateIn()

CONTENTS xxix

	0.05.0	Member Function Decumentation	100
	8.25.3	Member Function Documentation	198
		8.25.3.1 Init()	198
		8.25.3.2 Trig()	199
8.26	daisy::L	ed Class Reference	199
	8.26.1	Detailed Description	199
8.27	daisy::N	AidiEvent Struct Reference	199
	8.27.1	Detailed Description	200
8.28	daisy::N	/lidiHandler Class Reference	200
	8.28.1	Detailed Description	201
8.29	daisy::N	NoteOnEvent Struct Reference	201
	8.29.1	Detailed Description	201
8.30	daisy::C	DledDisplay Class Reference	201
	8.30.1	Detailed Description	202
8.31	daisy::F	Parameter Class Reference	202
	8.31.1	Detailed Description	202
8.32	daisy::F	RgbLed Class Reference	203
	8.32.1	Detailed Description	203
8.33	daisy::F	RingBuffer< T, size > Class Template Reference	203
	8.33.1	Detailed Description	203
8.34	daisy::F	RingBuffer< T, 0 > Class Template Reference	204
	8.34.1	Detailed Description	204
8.35	daisy::S	SdmmcHandler Class Reference	204
	8.35.1	Detailed Description	204
8.36	daisy::S	SdmmcHandlerInit Struct Reference	205
	8.36.1	Detailed Description	205
8.37	ShiftRe	gister595 Class Reference	205
	8.37.1	Detailed Description	205
	8.37.2	Member Enumeration Documentation	205
		8.37.2.1 Pins	
		Member Function Documentation	
	3.57.0	mondo: andion bookmontation	_00

CONTENTS

8.37.3.1 Init()	:06
8.37.3.2 Set()	:06
8.37.3.3 Write()	:06
8.38 daisy::SpiHandle Class Reference	:07
8.38.1 Detailed Description	:07
8.39 daisy::Switch Class Reference	:07
8.39.1 Detailed Description	:07
8.40 daisy::UartHandler Class Reference	:08
8.40.1 Detailed Description	:08
8.41 UsbHandle Class Reference	:08
8.41.1 Detailed Description	:09
8.41.2 Member Typedef Documentation	:09
8.41.2.1 ReceiveCallback [1/2]	:09
8.41.2.2 ReceiveCallback [2/2]	:09
8.41.3 Member Enumeration Documentation	:09
8.41.3.1 UsbPeriph [1/2]	:09
8.41.3.2 UsbPeriph [2/2]	:10
8.41.4 Member Function Documentation	:10
8.41.4.1 Init() [1/2]	10
8.41.4.2 Init() [2/2]	10
8.41.4.3 SetReceiveCallback() [1/2]	11:
8.41.4.4 SetReceiveCallback() [2/2]	!11
8.41.4.5 TransmitExternal() [1/2]	!11
8.41.4.6 TransmitExternal() [2/2]	12
8.41.4.7 TransmitInternal() [1/2]	12
8.41.4.8 TransmitInternal() [2/2]	12
8.42 WAV_FormatTypeDef Struct Reference	:13
8.42.1 Detailed Description	13
8.42.2 Member Data Documentation	13
8.42.2.1 AudioFormat	13

CONTENTS xxxi

	8.42.2.2 BitPerSample	13
	8.42.2.3 BlockAlign	13
	8.42.2.4 ByteRate	14
	8.42.2.5 Chunkld	14
	8.42.2.6 FileFormat	14
	8.42.2.7 FileSize	14
	8.42.2.8 NbrChannels	14
	8.42.2.9 SampleRate	14
	8.42.2.10 SubChunk1ID	14
	8.42.2.11 SubChunk1Size	14
	8.42.2.12 SubChunk2ID	15
	8.42.2.13 SubCHunk2Size	15
8.43 daisy::	VavFileInfo Struct Reference	15
8.43.1	Detailed Description	15
8.43.2	Member Data Documentation	15
	8.43.2.1 name	15
	8.43.2.2 raw_data	16
8.44 daisy::	VavPlayer Class Reference	16
8.44.1	Detailed Description	16
8.44.2	Member Function Documentation	16
	8.44.2.1 Close()	16
	8.44.2.2 GetCurrentFile()	17
	8.44.2.3 GetLooping()	17
	8.44.2.4 GetNumberFiles()	17
	8.44.2.5 Init()	17
	8.44.2.6 Open()	17
	8.44.2.7 Prepare()	18
	8.44.2.8 Restart()	18
	8.44.2.9 SetLooping()	18
	8.44.2.10 Stream()	18

xxxii CONTENTS

9	File	Docume	entation	219
	9.1	src/ffcc	onf.h File Reference	219
		9.1.1	Detailed Description	220
		9.1.2	Macro Definition Documentation	220
			9.1.2.1 _CODE_PAGE	220
			9.1.2.2 _FFCONF	220
			9.1.2.3 _FS_EXFAT	221
			9.1.2.4 _FS_LOCK	221
			9.1.2.5 _FS_MINIMIZE	221
			9.1.2.6 _FS_NOFSINFO	221
			9.1.2.7 _FS_NORTC	221
			9.1.2.8 _FS_READONLY	221
			9.1.2.9 _FS_REENTRANT	222
			9.1.2.10 _FS_RPATH	222
			9.1.2.11 _FS_TIMEOUT	222
			9.1.2.12 _FS_TINY	222
			9.1.2.13 _LFN_UNICODE	222
			9.1.2.14 _MAX_LFN	222
			9.1.2.15 _MAX_SS	223
			9.1.2.16 _MIN_SS	223
			9.1.2.17 _MULTI_PARTITION	223
			9.1.2.18 _NORTC_MDAY	223
			9.1.2.19 _NORTC_MON	223
			9.1.2.20 _NORTC_YEAR	223
			9.1.2.21 _STR_VOLUME_ID	224
			9.1.2.22 _STRF_ENCODE	224
			9.1.2.23 _SYNC_t	224
			9.1.2.24 _USE_CHMOD	224
			9.1.2.25 _USE_EXPAND	224
			9.1.2.26 _USE_FASTSEEK	224

CONTENTS xxxiii

		3.1.2.21	_USE_F	IND .			 	 ٠.	 	٠.	٠.	 	 	•	225
		9.1.2.28	_USE_F	ORWAI	RD		 	 	 			 	 		225
		9.1.2.29	_USE_L	ABEL			 	 	 			 	 		225
		9.1.2.30	_USE_L	FN			 	 	 			 	 		225
		9.1.2.31	_USE_M	KFS.			 	 	 			 	 		225
		9.1.2.32	_USE_S	TRFUN	C		 	 	 			 	 		225
		9.1.2.33	_USE_T	RIM .			 	 	 			 	 		225
		9.1.2.34	_VOLUM	IE_STF	RS		 	 	 			 	 		226
		9.1.2.35	_VOLUM	IES .			 	 	 			 	 		226
		9.1.2.36	ff_free				 	 	 			 	 		226
		9.1.2.37	ff_malloc				 	 	 			 	 		226
9.2	src/hid	_gatein.h I	File Refere	ence .			 	 	 			 	 		226
9.3	src/hid	_wavplaye	er.h File Re	ference			 	 	 			 	 		227
	9.3.1	Macro De	efinition Do	ocumen	tation		 	 	 			 	 		227
		9.3.1.1	DSY_WA	AVPLAY	/ER_H		 	 	 			 	 		227
		9.3.1.2	WAV_FII	LENAM	E_MAX	<b>&lt;</b>	 	 	 			 	 		227
9.4	src/usk	od_cdc_if.h	n File Refe	rence			 	 	 			 	 		227
	9.4.1	Detailed	Descriptio	n			 	 	 			 	 		228
9.5	src/usk	od_conf.h I	File Refere	ence .			 	 	 			 	 		228
	9.5.1	Detailed	Descriptio	n			 	 	 			 	 		229
9.6	src/usk	od_desc.h	File Refer	ence .			 	 	 			 	 		229
	9.6.1	Detailed	Descriptio	n			 	 	 			 	 		230
Index															231

## **Chapter 1**

## libdaisy

Multi-layer hardware abstraction library for Daisy Product family

On STM32H7 MCUs

Lower-levels use STM32 HAL (local copy w/ modifications in Drivers/)

Prefixes and their meanings:

- sys System level configuration (clocks, dma, etc.)
- per Peripheral level, internal to MCU (i2c, spi, etc.)
- · dev External device support (external flash chips, DACs, codecs, etc.)
- hid User level interface elements (encoders, switches, audio, etc.)
- util library level elements used within the library (not included via daisy.h)
- daisy core API files (specific boards, platforms have extended user APIs that configure libdaisy more below).

Also included is a core/ folder containing:

- a generic Makefile that can be included in a project Makefile to simplify getting started
- · a linker script for defining the sections of memory used by the firmware
- core files for starting the hardware (system\_stm32h7xx.c, startup\_stm32h750xx.s, etc.)

## 1.1 Using libdaisy

Due to the amount of hardware configuration and flexibility of the daisy platform, (in the present, and the future), a user can use libdaisy to define their own custom hardware, or include one of our supported board files to jumpstart the creativity, and hack on an existing piece of hardware.

If you are getting started, and have one of the Daisy Family Products, you can skip ahead to that section below.

2 libdaisy

#### 1.1.1 daisy.h

The base-level include file. This is all you need to include to create your own custom hardware that uses libdaisy.

daisy\_seed.h is an example of a board level file that utilizes libdaisy to define some hardware, and provide flexible access.

#### 1.1.2 daisy\_seed.h

The SOM-level include file. This can be used with any boards that use the Daisy Seed hardware.

Additional configuration files, with more specific hardware access are provided below for our supported hardware platforms.

#### 1.1.3 daisy\_platform.h

Several other pairs of files exist in the repo for each of the supported hardware platforms that work with Daisy Seed.

These are:

- · daisy\_field
- · daisy\_patch
- · daisy\_petal
- · daisy\_pod

With these files a number of additional initialization, and configuration is done by the library.

This allows a user to jump right into their new product with a simple api to do things without having a full understanding of what's going on under the hood.

With this flexible approach to the hardware configuration, we hope to promote a lot of fantastic hardware along with code to go with it.

# **Chapter 2**

# **Module Index**

## 2.1 Modules

Here is a list of all modules:	
LIBDAISY	11
HUMAN_INTERFACE	12
AUDIO	13
CONTROLS	16
FEEDBACK	24
EXTERNAL	30
PERIPHERAL	36
SYSTEM	63
DEVICE	65
SHIFTREGISTER	66
FLASH	
CODEC	
LED	
SDRAM	
DAISY	
UTILITY	131
Externals	
STM32_USB_OTG_DEVICE_LIBRARY	171
USBD_CDC_IF	149
USBD_CDC_IF_Exported_Defines	
USBD_CDC_IF_Exported_Types	151
USBD_CDC_IF_Exported_Macros	
USBD_CDC_IF_Exported_Variables	153
USBD_CDC_IF_Exported_FunctionsPrototype	154
USBD_DESC	163
USBD_DESC_Exported_Constants	164
USBD_DESC_Exported_Defines	
USBD_DESC_Exported_TypesDefinitions	166
USBD_DESC_Exported_Macros	167
USBD_DESC_Exported_Variables	168
USBD_DESC_Exported_FunctionsPrototype	169
USBD_OTG_DRIVER	172
USBD CONF	155
USBD CONF Exported Variables	156
USBD_CONF_Exported_Defines	
USBD_CONF_Exported_Macros	159
USBD_CONF_Exported_Types	161

4 Module Index

# **Chapter 3**

# Namespace Index

3.1	Nar	nesi	pac	e Li	ist
• • •					

Here is a list of all documented	d namespaces with brief descriptions:
----------------------------------	---------------------------------------

daisy

Hardware defines and helpers for daisy field platform		173
---	--	-----

6 Namespace Index

# Chapter 4

# **Class Index**

## 4.1 Class List

Here are the classes, structs, unions and interfaces with brief descriptions:

daisy::AdcChannelConfig	
daisy::AnalogControl	
Hardware Interface for control inputs	
Primarily designed for ADC input controls such as	
potentiometers, and control voltage.	
176	
codec_frame_t	177
color	
daisy::Color	179
daisy::ControlChangeEvent	179
daisy::daisy_field	180
daisy::DaisyPatch	
Class that handles initializing all of the hardware specific to the Daisy Patch Board.	
Helper funtions are also in place to provide easy access to built-in controls and peripherals	180
daisy::DaisyPetal	
Helpers and hardware definitions for daisy petal	181
daisy::DaisyPod	
Class that handles initializing all of the hardware specific to the Daisy Patch Board.	
Helper funtions are also in place to provide easy access to built-in controls and peripherals	183
daisy::DaisySeed	
This is the higher-level interface for the Daisy board.	
All basic peripheral configuration/initialization is setup here	184
dsy_audio_handle	
dsy dac handle	
<b>,</b> — —	
7—01	
·	
dsy sai handle	
DSY SD CardInfoTypeDef	
dsy sdram handle	
dsy sr 4021 handle	
daisy::Encoder	104
Generic Class for handling Quadrature Encoders	
Inspired/influenced by Mutable Instruments (pichenettes) Encoder classes	196
mopriod/initiational by initiation instruments (pleneticity <u>Filodor</u> diasses	100

8 Class Index

FontDef	196
daisy::GateIn	
Generic Class for handling gate inputs through GPIO	197
daisy::Led	
LED Class providing simple Software PWM ability, etc	
Eventually this will work with hardware PWM, and external LED Driver devices as well	199
daisy::MidiEvent	199
daisy::MidiHandler	
Simple MIDI Handler	
Parses bytes from an input into valid MidiEvents.	
The MidiEvents fill a FIFO queue that the user can pop messages from	200
daisy::NoteOnEvent	201
daisy::OledDisplay	201
daisy::Parameter	202
daisy::RgbLed	203
daisy::RingBuffer< T, size >	203
daisy::RingBuffer $<$ T, 0 $>$	204
daisy::SdmmcHandler	204
daisy::SdmmcHandlerInit	205
ShiftRegister595	
Device Driver for 8-bit shift register.	
CD74HC595 - 8-bit serial to parallel output shift	
daisy::SpiHandle	207
daisy::Switch	207
daisy::UartHandler	208
UsbHandle	
Interface for initializing and using the USB Peripherals on the daisy	208
WAV_FormatTypeDef	213
daisy::WavFileInfo	215
daisv: WayPlayer	216

# **Chapter 5**

# File Index

## 5.1 File List

Here is a list of all documented files with brief descriptions:

src/ <b>daisy.h</b>	
src/daisy_core.h	
	??
<b>7</b> = 1	??
7-1	??
/ <del></del>	??
<b>/-</b>	??
	??
src/dev_codec_pcm3060.h	??
<b>–</b>	??
src/dev_codec_wm8731_frame.h	??
src/dev_flash_IS25LP064A.h	??
src/dev_flash_IS25LP080D.h	??
src/dev_leddriver.h	??
	??
	??
src/ <b>dev_sr_595.h</b>	??
src/ <b>fatfs.h</b>	??
src/ffconf.h	19
src/hid_audio.h	?
src/hid_ctrl.h	??
src/hid_encoder.h	??
src/hid_gatein.h	26
src/hid_led.h	??
src/hid_midi.h	?
src/hid_oled_display.h	??
src/hid_parameter.h	??
src/hid_rgb_led.h	??
src/hid_switch.h	??
src/hid_usb.h	??
src/hid_wavplayer.h	27
src/ <b>per_adc.h</b>	?
src/ <b>per_dac.h</b>	??
src/ <b>per_gpio.h</b>	??
src/per i2c h	2

10 File Index

c/per_qspi.h	<b>?</b> '
c/per_sai.h	
c/per_sdmmc.h	?'
c/per_spi.h	
c/per_tim.h	
 //per_uart.h	
 c/stm32h7xx_hal_conf.h	?'
c/sys_dma.h	
∵/sys system.h	
c/usbd cdc if.h	
: Header for usbd cdc if.c file	22
c/usbd conf.h	
: Header for usbd conf.c file	22
c/usbd_desc.h	
: Header for usbd conf.c file	22
c/util_bsp_sd_diskio.h	?'
c/util_color.h	
c/util_hal_map.h	
:/util_oled_fonts.h	
:/util_ringbuffer.h	
:/util_sd_diskio.h	
c/util unique id.h	
vutil way formath	2

# **Chapter 6**

# **Module Documentation**

#### 6.1 LIBDAISY

The daisy library.

#### **Modules**

• HUMAN\_INTERFACE

Interface with the world.

PERIPHERAL

Peripheral devices, not meant for human interaction.

SYSTEM

Deals with system. DMA, clocks, etc.

• DEVICE

Low level devices. Led drivers, codecs, etc.

• DAISY

Daisy devices. Pod, seed, etc.

• UTILITY

General utilities. Ringbuffers, LED colors, OLED stuff, etc.

## 6.1.1 Detailed Description

The daisy library.

## 6.2 HUMAN\_INTERFACE

Interface with the world.

#### **Modules**

• AUDIO

Embedded Audio Engine.

• CONTROLS

Hardware Controls.

• FEEDBACK

Screens, leds, etc.

• EXTERNAL

External interface devices.

## 6.2.1 Detailed Description

Interface with the world.

6.3 AUDIO 13

#### 6.3 AUDIO

Embedded Audio Engine.

- enum { DSY\_AUDIO\_INTERNAL, DSY\_AUDIO\_EXTERNAL, DSY\_AUDIO\_LAST }
- typedef void(\* dsy\_audio\_callback) (float \*, float \*, size\_t)
- typedef void(\* dsy\_audio\_mc\_callback) (float \*\*, float \*\*, size\_t)
- void dsy\_audio\_init (dsy\_audio\_handle \*handle)
- · void dsy audio set callback (uint8 t intext, dsy audio callback cb)
- · void dsy audio set mc callback (dsy audio mc callback cb)
- void dsy\_audio\_set\_blocksize (uint8\_t intext, size\_t blocksize)
- void dsy audio start (uint8 t intext)
- void dsy\_audio\_stop (uint8\_t intext)
- void dsy\_audio\_enter\_bypass (uint8\_t intext)
- void dsy audio exit bypass (uint8 t intext)
- void dsy\_audio\_passthru (float \*in, float \*out, size\_t size)
- void dsy\_audio\_silence (float \*in, float \*out, size\_t size)

#### 6.3.1 Detailed Description

Embedded Audio Engine.

#### 6.3.2 Typedef Documentation

```
6.3.2.1 dsy_audio_callback
```

```
typedef void(* dsy_audio_callback) (float *, float *, size_t)
```

These are user-defineable callbacks that are called when audio data is ready to be received/transmitted. Function to define for using a single Stereo device for I/O audio is packed as: { LEFT | RIGHT | LEFT | RIGHT }

```
6.3.2.2 dsy_audio_mc_callback
```

```
typedef void(* dsy_audio_mc_callback) (float **, float **, size_t)

Defaults to 4 channels, and is fixed for now.
(still works for stereo, but will still fill buffers)
audio is packed as:
{ LEFT | LEFT + 1 | ... | LEFT + SIZE | RIGHT | RIGHT + 1 | ... | RIGHT + SIZE }
```

#### 6.3.3 Enumeration Type Documentation

#### 6.3.3.1 anonymous enum

```
anonymous enum
```

Internally, there are two separate 'audio blocks' that can be configured together or separately

#### Enumerator

DSY_AUDIO_INTERNAL	&
DSY_AUDIO_EXTERNAL	&
DSY_AUDIO_LAST	&

#### 6.3.4 Function Documentation

#### 6.3.4.1 dsy\_audio\_enter\_bypass()

If the device supports hardware bypass, enter that mode.

#### 6.3.4.2 dsy\_audio\_exit\_bypass()

If the device supports hardware bypass, exit that mode.

#### 6.3.4.3 dsy\_audio\_init()

Initializes the Audio Engine using configurations set to the sai\_handle i2c\_handles can be set to NULL if not needed.

#### 6.3.4.4 dsy\_audio\_passthru()

A few useful stereo-interleaved callbacks Passes the input to the output

6.3 AUDIO 15

#### 6.3.4.5 dsy\_audio\_set\_blocksize()

Sets the number of samples (per-channel) to be handled in a single audio frame.

#### 6.3.4.6 dsy\_audio\_set\_callback()

Sets the user defined, interleaving callback to be called when audio data is ready. intext is a specifier for DSY\_AUDIO\_INT/EXT (which audio peripheral to use). When using this, each 'audio block' can have completely independent callbacks.

#### 6.3.4.7 dsy\_audio\_set\_mc\_callback()

```
void dsy_audio_set_mc_callback ( {\tt dsy\_audio\_mc\_callback}\ cb\ )
```

Sets the user defined, non-interleaving callback to be called when audio data is ready. This will always use both DSY\_AUDIO\_INT and DSY\_AUDIO\_EXT blocks together. To ensure clean audio you'll want to make sure the two SAIs are set to the same samplerate

#### 6.3.4.8 dsy\_audio\_silence()

sets outputs to 0 without stopping the Audio Engine

#### 6.3.4.9 dsy\_audio\_start()

Starts Audio Engine, callbacks will begin getting called.

When using with dsy\_audio\_mc\_callback (for 4 channels), this function should be called for both audio blocks

#### 6.3.4.10 dsy\_audio\_stop()

Stops transmitting/receiving audio on the specified audio block.

#### 6.4 CONTROLS

Hardware Controls.

#### Classes

· class daisy::AnalogControl

```
Hardware Interface for control inputs
Primarily designed for ADC input controls such as
potentiometers, and control voltage.
```

· class daisy::Encoder

Generic Class for handling Quadrature Encoders Inspired/influenced by Mutable Instruments (pichenettes) Encoder classes.

- class daisy::Parameter
- · class daisy::Switch

#### **Enumerations**

- enum daisy::Parameter::Curve {
   daisy::Parameter::LINEAR, daisy::Parameter::EXPONENTIAL, daisy::Parameter::LOGARITHMIC, daisy::
   Parameter::CUBE,
   daisy::Parameter::LAST }
- enum daisy::Switch::Type { daisy::Switch::TYPE TOGGLE, daisy::Switch::TYPE MOMENTARY }
- enum daisy::Switch::Polarity { daisy::Switch::POLARITY\_NORMAL, daisy::Switch::POLARITY\_INVERTED }
- enum daisy::Switch::Pull { daisy::Switch::PULL\_UP, daisy::Switch::PULL\_DOWN, daisy::Switch::PULL\_N
  ONE }

#### **Functions**

- daisy::AnalogControl::AnalogControl ()
- daisy::AnalogControl::~AnalogControl ()
- void daisy::AnalogControl::Init (uint16\_t \*adcptr, float sr, bool flip=false, bool invert=false, float slew\_←
  seconds=0.002f)
- void daisy::AnalogControl::InitBipolarCv (uint16 t \*adcptr, float sr)
- float daisy::AnalogControl::Process ()
- float daisy::AnalogControl::Value () const
- void daisy::Encoder::Init (dsy\_gpio\_pin a, dsy\_gpio\_pin b, dsy\_gpio\_pin click, float update\_rate)
- void daisy::Encoder::Debounce ()
- int32 t daisy::Encoder::Increment () const
- bool daisy::Encoder::RisingEdge () const
- bool daisy::Encoder::FallingEdge () const
- · bool daisy::Encoder::Pressed () const
- float daisy::Encoder::TimeHeldMs () const
- daisy::Parameter::Parameter ()
- daisy::Parameter:: $\sim$ Parameter ()
- void daisy::Parameter::Init (AnalogControl input, float min, float max, Curve curve)
- float daisy::Parameter::Process ()
- float daisy::Parameter::Value ()
- void daisy::Switch::Init (dsy\_gpio\_pin pin, float update\_rate, Type t, Polarity pol, Pull pu)
- void daisy::Switch::Init (dsy\_gpio\_pin pin, float update\_rate)
- void daisy::Switch::Debounce ()
- · bool daisy::Switch::RisingEdge () const
- bool daisy::Switch::FallingEdge () const
- bool daisy::Switch::Pressed () const
- float daisy::Switch::TimeHeldMs () const

6.4 CONTROLS 17

## 6.4.1 Detailed Description

Hardware Controls.

## 6.4.2 Enumeration Type Documentation

#### 6.4.2.1 Curve

enum daisy::Parameter::Curve

Curves are applied to the output signal

#### Enumerator

LINEAR	Linear curve
EXPONENTIAL	Exponential curve
LOGARITHMIC	Logarithmic curve
CUBE	Cubic curve
LAST	Final enum element.

#### 6.4.2.2 Polarity

enum daisy::Switch::Polarity

Specifies whether the pressed is HIGH or LOW.

#### Enumerator

POLARITY_NORMAL	&
POLARITY_INVERTED	&

#### 6.4.2.3 Pull

enum daisy::Switch::Pull

Specifies whether to use built-in Pull Up/Down resistors to hold button at a given state when not engaged.

#### Enumerator

PULL_UP	&
PULL_DOWN	&
PULL NONE	&

#### 6.4.2.4 Type

```
enum daisy::Switch::Type
```

Specifies the expected behavior of the switch

#### Enumerator

TYPE_TOGGLE	&
TYPE_MOMENTARY	&

#### 6.4.3 Function Documentation

#### 6.4.3.1 AnalogControl()

```
daisy::AnalogControl::AnalogControl ( ) [inline]
```

Constructor

#### **6.4.3.2** Debounce() [1/2]

```
void daisy::Encoder::Debounce ( )
```

Called at update\_rate to debounce and handle timing for the switch. In order for events not to be missed, its important that the Edge/Pressed checks be made at the same rate as the debounce function is being called.

#### **6.4.3.3 Debounce()** [2/2]

```
void daisy::Switch::Debounce ( )
```

Called at update\_rate to debounce and handle timing for the switch. In order for events not to be missed, its important that the Edge/Pressed checks be made at the same rate as the debounce function is being called.

## **6.4.3.4 FallingEdge()** [1/2]

```
bool daisy::Encoder::FallingEdge ( ) const [inline]
```

Returns true if the encoder was just released.

6.4 CONTROLS 19

```
6.4.3.5 FallingEdge() [2/2]
```

```
bool daisy::Switch::FallingEdge ( ) const [inline]
```

#### Returns

true if the button was just released

#### 6.4.3.6 Increment()

```
int32_t daisy::Encoder::Increment ( ) const [inline]
```

Returns +1 if the encoder was turned clockwise, -1 if it was turned counter-clockwise, or 0 if it was not just turned.

```
6.4.3.7 Init() [1/5]
```

Initializes the encoder with the specified hardware pins. Update rate should be the rate at which Debounce() gets called in Hertz.

```
6.4.3.8 Init() [2/5]
```

initialize a parameter using an hid\_ctrl object.

#### **Parameters**

input	- object containing the direct link to a hardware control source.
min	- bottom of range. (when input is 0.0)
max	- top of range (when input is 1.0)
curve	- the scaling curve for the input->output transformation.

```
6.4.3.9 Init() [3/5]
```

```
\verb"void daisy":: \verb"AnalogControl":: \verb"Init" (
```

```
uint16_t * adcptr,
float sr,
bool flip = false,
bool invert = false,
float slew_seconds = 0.002f)
```

#### Initializes the control

#### **Parameters**

*adcptr	is a pointer to the raw adc read value – This can be acquired with dsy_adc_get_rawptr(), or dsy_adc_get_mux_rawptr()
sr	is the samplerate in Hz that the Process function will be called at.
flip	determines whether the input is flipped (i.e. 1.f - input) or not before being processed.1
invert	determines whether the input is inverted (i.e1.f * input) or note before being processed.
slew_seconds	is the slew time in seconds that it takes for the control to change to a new value.

#### **6.4.3.10 Init()** [4/5]

Initializes the switch object with a given port/pin combo.

#### **Parameters**

pin	port/pin object to tell the switch which hardware pin to use.	
update_rate	the rate at which the Debounce() function will be called. (used for timing).	
t	switch type – Default: TYPE_MOMENTARY	
pol	switch polarity – Default: POLARITY_INVERTED	
pu	switch pull up/down - Default: PULL_UP	

```
6.4.3.11 Init() [5/5]
```

#### Simplified Init.

6.4 CONTROLS 21

#### **Parameters**

pin	port/pin object to tell the switch which hardware pin to use.
update_rate	the rate at which the Debounce() function will be called. (used for timing).

#### 6.4.3.12 InitBipolarCv()

```
void daisy::AnalogControl::InitBipolarCv (  \mbox{uint16\_t} \ * \ adcptr,   \mbox{float} \ sr \ )
```

This Initializes the AnalogControl for a -5V to 5V inverted input All of the Init details are the same otherwise

#### **Parameters**

*adcptr	Pointer to analog digital converter
sr	Audio engine sample rate

#### 6.4.3.13 Parameter()

```
daisy::Parameter::Parameter ( ) [inline]
```

#### Constructor

#### **6.4.3.14** Pressed() [1/2]

```
bool daisy::Encoder::Pressed ( ) const [inline]
```

Returns true while the encoder is held down.

```
6.4.3.15 Pressed() [2/2]
```

```
bool daisy::Switch::Pressed ( ) const [inline]
```

#### Returns

true if the button is held down (or if the toggle is on)

```
6.4.3.16 Process() [1/2]
```

float daisy::Parameter::Process ( )

processes the input signal, this should be called at the samplerate of the hid ctrl passed in.

#### Returns

a float with the specified transformation applied.

```
6.4.3.17 Process() [2/2] float daisy::AnalogControl::Process ( )
```

Filters, and transforms a raw ADC read into a normalized range. this should be called at the rate of specified by samplerate at Init time. Default Initializations will return 0.0 -> 1.0 Bi-polar CV inputs will return -1.0 -> 1.0

```
6.4.3.18 RisingEdge() [1/2] bool daisy::Encoder::RisingEdge ( ) const [inline]
```

Returns true if the encoder was just pressed.

```
6.4.3.19 RisingEdge() [2/2]
bool daisy::Switch::RisingEdge ( ) const [inline]
```

#### Returns

true if a button was just pressed.

```
6.4.3.20 TimeHeldMs() [1/2] float daisy::Encoder::TimeHeldMs ( ) const [inline]
```

Returns the time in milliseconds that the encoder has been held down.

```
6.4.3.21 TimeHeldMs() [2/2]
float daisy::Switch::TimeHeldMs ( ) const [inline]
```

#### Returns

the time in milliseconds that the button has been held (or toggle has been on)

6.4 CONTROLS 23

```
6.4.3.22 Value() [1/2]
float daisy::Parameter::Value ( ) [inline]
```

#### Returns

the current value from the parameter without processing another sample. this is useful if you need to use the value multiple times, and don't store

the output of process in a local variable.

```
float daisy::AnalogControl::Value ( ) const [inline]

Returns the current stored value, without reprocessing

6.4.3.24 ~AnalogControl()

daisy::AnalogControl::~AnalogControl ( ) [inline]

destructor

6.4.3.25 ~Parameter()
```

daisy::Parameter::~Parameter ( ) [inline]

Destructor

#### 6.5 FEEDBACK

Screens, leds, etc.

#### Classes

· class daisy::Led

LED Class providing simple Software PWM ability, etc Eventually this will work with hardware PWM, and external LED Driver devices as well.

- class daisy::OledDisplay
- · class daisy::RgbLed

#### **Enumerations**

enum daisy::OledDisplay::Pins { daisy::OledDisplay::DATA\_COMMAND, daisy::OledDisplay::RESET, daisy::OledDisplay::NUM\_PINS }

#### **Functions**

- void daisy::Led::Init (dsy\_gpio\_pin pin, bool invert, float samplerate=1000.0f)
- void daisy::Led::Set (float val)
- void daisy::Led::Update ()
- void daisy::OledDisplay::Init (dsy\_gpio\_pin \*pin\_cfg)
- void daisy::OledDisplay::Fill (bool on)
- void daisy::OledDisplay::DrawPixel (uint8\_t x, uint8\_t y, bool on)
- char daisy::OledDisplay::WriteChar (char ch, FontDef font, bool on)
- char daisy::OledDisplay::WriteString (char \*str, FontDef font, bool on)
- void daisy::OledDisplay::SetCursor (uint8\_t x, uint8\_t y)
- void daisy::OledDisplay::Update ()
- void daisy::RgbLed::Init (dsy\_gpio\_pin red, dsy\_gpio\_pin green, dsy\_gpio\_pin blue, bool invert)
- void daisy::RgbLed::Set (float r, float g, float b)
- void daisy::RgbLed::SetColor (Color c)
- void daisy::RgbLed::Update ()

#### 6.5.1 Detailed Description

Screens, leds, etc.

#### 6.5.2 Enumeration Type Documentation

#### 6.5.2.1 Pins

enum daisy::OledDisplay::Pins

GPIO Pins that need to be used independent of peripheral used.

6.5 FEEDBACK 25

#### Enumerator

DATA_COMMAND	Data command pin.
RESET	Reset pin
NUM_PINS	Num pins

#### 6.5.3 Function Documentation

#### 6.5.3.1 DrawPixel()

Sets the pixel at the specified coordinate to be on/off.

#### **Parameters**

Х	x Coordinate
У	y coordinate
on	on or off

#### 6.5.3.2 Fill()

```
void daisy::OledDisplay::Fill (
          bool on )
```

Fills the entire display with either on/off.

#### **Parameters**

```
on Sets on or off.
```

```
6.5.3.3 Init() [1/3]
```

```
dsy_gpio_pin blue,
bool invert )
```

Initializes 3x GPIO Pins as red, green, and blue elements of an RGB LED

#### **Parameters**

red	Red element
green	Green element
blue	Blue element
invert	Flips led polarity

Initializes an LED using the specified hardware pin.

#### **Parameters**

pin	chooses LED pin	
invert	will set whether to internally invert the brightness due to hardware config.	
samplerate	sets the rate at which 'Update()' will be called (used for software PWM)	

Takes an argument for the pin cfg

#### **Parameters**

```
pin_cfg should be a pointer to an array of OledDisplay::NUM_PINS dsy_gpio_pins
```

```
6.5.3.6 Set() [1/2] void daisy::RgbLed::Set ( float r,
```

6.5 FEEDBACK 27

```
float g,
float b )
```

Sets each element of the LED with a floating point number 0-1

#### **Parameters**

r	Red element
g	Green element
b	Blue element

```
6.5.3.7 Set() [2/2]
```

```
void daisy::Led::Set (
     float val )
```

Sets the brightness of the Led.

#### **Parameters**

val

will be cubed for gamma correction, and then quantized to 8-bit values for Software PWM 8-bit is for more flexible update rate options, as 12-bit or more would require faster update rates.

#### 6.5.3.8 SetColor()

```
void daisy::RgbLed::SetColor ( Color c )
```

Sets the RGB using a Color object.

#### Parameters

```
c Color object to set.
```

#### 6.5.3.9 SetCursor()

Moves the 'Cursor' position used for WriteChar, and WriteStr to the specified coordinate.

#### **Parameters**

Х	x pos
У	y pos

```
6.5.3.10 Update() [1/3]
void daisy::RgbLed::Update ( )
```

Updates the PWM of the LED based on the current values. Should be called at a regular interval. (i.e. 1kHz/1ms)

```
6.5.3.11 Update() [2/3] void daisy::Led::Update ( )
```

This processes the pwm of the LED sets the hardware accordingly.

```
6.5.3.12 Update() [3/3] void daisy::OledDisplay::Update ( )
```

Writes the current display buffer to the OLED device using SPI or I2C depending on how the object was initialized.

#### 6.5.3.13 WriteChar()

Writes the character with the specific FontDef to the display buffer at the current Cursor position.

#### **Parameters**

ch	character to be written
font	font to be written in
on	on or off

#### Returns

&

6.5 FEEDBACK 29

#### 6.5.3.14 WriteString()

Similar to WriteChar, except it will handle an entire String. Wrapping does not happen automatically, so the width of the string must be kept within the dimensions of the screen.

#### **Parameters**

str	string to be written
font	font to use
on	on or off

#### Returns

&

#### 6.6 EXTERNAL

External interface devices.

#### Classes

- · struct daisy::NoteOnEvent
- · struct daisy::ControlChangeEvent
- struct daisy::MidiEvent
- · class daisy::MidiHandler

Simple MIDI Handler

Parses bytes from an input into valid MidiEvents.

The MidiEvents fill a FIFO queue that the user can pop messages from.

#### **Enumerations**

- enum daisy::MidiMessageType {
   daisy::NoteOff, daisy::NoteOn, daisy::PolyphonicKeyPressure, daisy::ControlChange,
   daisy::ProgramChange, daisy::ChannelPressure, daisy::PitchBend, daisy::MessageLast }
- enum daisy::MidiHandler::MidiInputMode { daisy::MidiHandler::INPUT\_MODE\_NONE = 0x00, daisy::Midi↔ Handler::INPUT\_MODE\_UART1 = 0x01, daisy::MidiHandler::INPUT\_MODE\_USB\_INT = 0x02, daisy::Midi↔ Handler::INPUT\_MODE\_USB\_EXT = 0x04 }
- enum daisy::MidiHandler::MidiOutputMode { daisy::MidiHandler::OUTPUT\_MODE\_NONE = 0x00, daisy
   ::MidiHandler::OUTPUT\_MODE\_UART1 = 0x01, daisy::MidiHandler::OUTPUT\_MODE\_USB\_INT = 0x02, daisy::MidiHandler::OUTPUT\_MODE\_USB\_EXT = 0x04 }

#### **Functions**

- NoteOnEvent daisy::MidiEvent::AsNoteOn ()
- ControlChangeEvent daisy::MidiEvent::AsControlChange ()
- void daisy::MidiHandler::Init (MidiInputMode in\_mode, MidiOutputMode out\_mode)
- void daisy::MidiHandler::StartReceive ()
- void daisy::MidiHandler::Listen ()
- void daisy::MidiHandler::Parse (uint8\_t byte)
- · bool daisy::MidiHandler::HasEvents () const
- MidiEvent daisy::MidiHandler::PopEvent ()

#### **Variables**

- int daisy::NoteOnEvent::channel
- · uint8 t daisy::NoteOnEvent::note
- uint8 t daisy::NoteOnEvent::velocity
- · int daisy::ControlChangeEvent::channel
- · uint8\_t daisy::ControlChangeEvent::control\_number
- uint8 t daisy::ControlChangeEvent::value
- MidiMessageType daisy::MidiEvent::type
- int daisy::MidiEvent::channel
- uint8\_t daisy::MidiEvent::data [2]

6.6 EXTERNAL 31

#### 6.6.1 Detailed Description

External interface devices.

#### 6.6.2 Enumeration Type Documentation

#### 6.6.2.1 MidilnputMode

enum daisy::MidiHandler::MidiInputMode

Input and Output can be configured separately Multiple Input modes can be selected by OR'ing the values.

#### Enumerator

INPUT_MODE_NONE	&
INPUT_MODE_UART1	&
INPUT_MODE_USB_INT	
INPUT_MODE_USB_EXT	

#### 6.6.2.2 MidiMessageType

enum daisy::MidiMessageType

Parsed from the Status Byte, these are the common Midi Messages that can be handled. At this time only 3-byte messages are correctly parsed into MidiEvents.

#### Enumerator

NoteOff	&
NoteOn	&
PolyphonicKeyPressure	&
ControlChange	&
ProgramChange	&
ChannelPressure	&
PitchBend	&
MessageLast	&

#### 6.6.2.3 MidiOutputMode

enum daisy::MidiHandler::MidiOutputMode

Output mode

6.6 EXTERNAL 33

#### Enumerator

OUTPUT_MODE_NONE	
OUTPUT_MODE_UART1	
OUTPUT_MODE_USB_INT	
OUTPUT_MODE_USB_EXT	&

#### 6.6.3 Function Documentation

#### 6.6.3.1 AsControlChange()

```
ControlChangeEvent daisy::MidiEvent::AsControlChange ( ) [inline]
```

Returns the data within the MidiEvent as a NoteOnEvent struct.

#### 6.6.3.2 AsNoteOn()

```
NoteOnEvent daisy::MidiEvent::AsNoteOn ( ) [inline]
```

Returns the data within the MidiEvent as a NoteOnEvent struct

#### 6.6.3.3 HasEvents()

```
bool daisy::MidiHandler::HasEvents ( ) const [inline]
```

Checks if there are unhandled messages in the queue

#### Returns

True if there are events to be handled, else false.

#### 6.6.3.4 Init()

Initializes the MidiHandler

#### **Parameters**

in_mode	Input mode	
out mode	Output mode	

Generated by Doxygen

# 6.6.3.5 Listen() void daisy::MidiHandler::Listen ( ) Start listening 6.6.3.6 Parse() void daisy::MidiHandler::Parse (

uint8\_t byte )

Feed in bytes to state machine from a queue. Populates internal FIFO queue with MIDI Messages For example with uart: midi.Parse(uart.PopRx());

#### **Parameters**



#### 6.6.3.7 PopEvent()

```
MidiEvent daisy::MidiHandler::PopEvent ( ) [inline]
```

Pops the oldest unhandled MidiEvent from the internal queue

#### Returns

The event to be handled

#### 6.6.3.8 StartReceive()

```
void daisy::MidiHandler::StartReceive ( )
```

Starts listening on the selected input mode(s). MidiEvent Queue will begin to fill, and can be checked with

#### 6.6.4 Variable Documentation

6.6 EXTERNAL 35

```
6.6.4.1 channel [1/3]
int daisy::NoteOnEvent::channel
6.6.4.2 channel [2/3]
int daisy::ControlChangeEvent::channel
&
6.6.4.3 channel [3/3]
int daisy::MidiEvent::channel
6.6.4.4 control_number
uint8_t daisy::ControlChangeEvent::control_number
&
6.6.4.5 data
uint8_t daisy::MidiEvent::data[2]
6.6.4.6 note
uint8_t daisy::NoteOnEvent::note
6.6.4.7 type
MidiMessageType daisy::MidiEvent::type
&
6.6.4.8 value
uint8_t daisy::ControlChangeEvent::value
6.6.4.9 velocity
uint8_t daisy::NoteOnEvent::velocity
&
```

#### 6.7 PERIPHERAL

Peripheral devices, not meant for human interaction.

#### **Classes**

- · struct daisy::AdcChannelConfig
- · class daisy::AdcHandle
- · struct dsy dac handle
- struct dsy\_gpio
- · struct dsy\_i2c\_handle
- struct dsy\_qspi\_handle
- · struct dsy\_sai\_handle
- · struct daisy::SdmmcHandlerInit
- · class daisy::SdmmcHandler
- class daisy::SpiHandle
- · class daisy::UartHandler

#### **Enumerations**

- enum daisy::AdcChannelConfig::MuxPin { daisy::AdcChannelConfig::MUX\_SEL\_0, daisy::AdcChannelConfig::MUX\_SEL\_1, daisy::AdcChannelConfig::MUX\_SEL\_2, daisy::AdcChannelConfig::MUX\_SEL\_LAST }
- enum daisy::AdcHandle::OverSampling {
   daisy::AdcHandle::OVS\_NONE, daisy::AdcHandle::OVS\_4, daisy::AdcHandle::OVS\_8, daisy::AdcHandle
   ::OVS\_16.
  - daisy::AdcHandle::OVS\_32, daisy::AdcHandle::OVS\_64, daisy::AdcHandle::OVS\_128, daisy::AdcHandle::←OVS\_256.
- daisy::AdcHandle::OVS\_512, daisy::AdcHandle::OVS\_1024, daisy::AdcHandle::OVS\_LAST }
- enum dsy\_dac\_mode { DSY\_DAC\_MODE\_POLLING, DSY\_DAC\_MODE\_LAST }
- enum dsy\_dac\_bitdepth { DSY\_DAC\_BITS\_8, DSY\_DAC\_BITS\_12, DSY\_DAC\_BITS\_LAST }
- enum dsy\_dac\_channel { DSY\_DAC\_CHN1, DSY\_DAC\_CHN2, DSY\_DAC\_CHN\_LAST, DSY\_DAC\_CH
   N BOTH }
- enum dsy\_gpio\_mode {
   DSY\_GPIO\_MODE\_INPUT, DSY\_GPIO\_MODE\_OUTPUT\_PP, DSY\_GPIO\_MODE\_OUTPUT\_OD, DSY
   \_GPIO\_MODE\_ANALOG,
   DSY\_GPIO\_MODE\_LAST }
- enum dsy\_gpio\_pull { DSY\_GPIO\_NOPULL, DSY\_GPIO\_PULLUP, DSY\_GPIO\_PULLDOWN }
- enum dsy\_i2c\_periph { DSY\_I2C\_PERIPH\_1, DSY\_I2C\_PERIPH\_2, DSY\_I2C\_PERIPH\_3, DSY\_I2C\_PE

  RIPH\_4 }
- enum dsy\_i2c\_pin { DSY\_I2C\_PIN\_SCL, DSY\_I2C\_PIN\_SDA, DSY\_I2C\_PIN\_LAST }
- enum dsy\_i2c\_speed { DSY\_I2C\_SPEED\_100KHZ, DSY\_I2C\_SPEED\_400KHZ, DSY\_I2C\_SPEED\_1MHZ, DSY\_I2C\_SPEED\_LAST }
- enum dsy\_qspi\_pin {
   DSY\_QSPI\_PIN\_IO0, DSY\_QSPI\_PIN\_IO1, DSY\_QSPI\_PIN\_IO2, DSY\_QSPI\_PIN\_IO3,
   DSY\_QSPI\_PIN\_CLK, DSY\_QSPI\_PIN\_NCS, DSY\_QSPI\_PIN\_LAST }
- enum dsy\_qspi\_device { DSY\_QSPI\_DEVICE\_IS25LP080D, DSY\_QSPI\_DEVICE\_IS25LP064A, DSY\_Q↔ SPI\_DEVICE\_LAST }
- enum dsy\_audio\_sai {
   DSY\_AUDIO\_INIT\_SAI1, DSY\_AUDIO\_INIT\_SAI2, DSY\_AUDIO\_INIT\_BOTH, DSY\_AUDIO\_INIT\_NONE,
   DSY\_AUDIO\_INIT\_LAST }

- enum dsy\_audio\_sync { DSY\_AUDIO\_SYNC\_MASTER, DSY\_AUDIO\_SYNC\_SLAVE, DSY\_AUDIO\_SY→ NC\_LAST }
- enum dsy\_audio\_dir { DSY\_AUDIO\_RX, DSY\_AUDIO\_TX }
- enum dsy\_sai\_pin {

DSY\_SAI\_PIN\_MCLK, DSY\_SAI\_PIN\_FS, DSY\_SAI\_PIN\_SCK, DSY\_SAI\_PIN\_SIN, DSY\_SAI\_PIN\_SOUT, DSY\_SAI\_PIN\_LAST }

• enum dsy audio device {

DSY\_AUDIO\_NONE, DSY\_AUDIO\_DEVICE\_PCM3060, DSY\_AUDIO\_DEVICE\_WM8731, DSY\_AUDIO\_← DEVICE AK4556,

DSY AUDIO DEVICE LAST }

- enum { DSY\_SAI\_1, DSY\_SAI\_2, DSY\_SAI\_LAST }
- enum daisy::SdmmcMode { daisy::SDMMC MODE FATFS }
- enum daisy::SdmmcBitWidth { daisy::SDMMC\_BITS\_1, daisy::SDMMC\_BITS\_4 }
- enum daisy::SdmmcSpeed { daisy::SDMMC\_SPEED\_400KHZ, daisy::SDMMC\_SPEED\_12MHZ }
- enum daisy::SpiPeriph { daisy::SPI\_PERIPH\_1, daisy::SPI\_PERIPH\_3, daisy::SPI\_PERIPH\_6 }
- enum daisy::SpiPin { daisy::SPI\_PIN\_CS, daisy::SPI\_PIN\_SCK, daisy::SPI\_PIN\_MOSI, daisy::SPI\_PIN\_←
  MISO }

#### **Functions**

- void daisy::AdcChannelConfig::InitSingle (dsy gpio pin pin)
- void daisy::AdcChannelConfig::InitMux (dsy\_gpio\_pin adc\_pin, dsy\_gpio\_pin mux\_0, dsy\_gpio\_pin mux\_1, dsy\_gpio\_pin mux\_2, size\_t channels)
- void daisy::AdcHandle::Init (AdcChannelConfig \*cfg, size\_t num\_channels, OverSampling ovs=OVS\_32)
- void daisy::AdcHandle::Start ()
- void daisy::AdcHandle::Stop ()
- uint16 t daisy::AdcHandle::Get (uint8 t chn)
- uint16\_t \* daisy::AdcHandle::GetPtr (uint8\_t chn)
- float daisy::AdcHandle::GetFloat (uint8\_t chn)
- uint16\_t daisy::AdcHandle::GetMux (uint8\_t chn, uint8\_t idx)
- uint16\_t \* daisy::AdcHandle::GetMuxPtr (uint8\_t chn, uint8\_t idx)
- float daisy::AdcHandle::GetMuxFloat (uint8\_t chn, uint8\_t idx)
- void dsy\_dac\_init (dsy\_dac\_handle \*dsy\_hdac, dsy\_dac\_channel channel)
- void dsy\_dac\_start (dsy\_dac\_channel channel)
- void dsy\_dac\_write (dsy\_dac\_channel channel, uint16\_t val)
- void dsy\_gpio\_init (dsy\_gpio \*p)
- void dsy\_gpio\_deinit (dsy\_gpio \*p)
- uint8\_t dsy\_gpio\_read (dsy\_gpio \*p)
- void dsy\_gpio\_write (dsy\_gpio \*p, uint8\_t state)
- void dsy\_gpio\_toggle (dsy\_gpio \*p)
- void dsy i2c init (dsy i2c handle \*dsy hi2c)
- int dsy qspi init (dsy qspi handle \*hqspi)
- int dsy\_qspi\_deinit ()
- int dsy\_qspi\_writepage (uint32\_t adr, uint32\_t sz, uint8\_t \*buf)
- int dsy qspi write (uint32 t address, uint32 t size, uint8 t \*buffer)
- int dsy qspi erase (uint32 t start adr, uint32 t end adr)
- int dsy qspi erasesector (uint32 t addr)
- void dsy\_sai\_init (dsy\_audio\_sai init, dsy\_audio\_samplerate sr[2], dsy\_audio\_bitdepth bitdepth[2], dsy\_audio\_sync sync\_config[2], dsy\_gpio\_pin \*sai1\_pin\_list, dsy\_gpio\_pin \*sai2\_pin\_list)
- void dsy\_sai\_init\_from\_handle (dsy\_sai\_handle \*hsai)

- · void daisy::SdmmcHandler::Init ()
- void daisy::SpiHandle::Init ()
- void daisy::SpiHandle::BlockingTransmit (uint8\_t \*buff, size\_t size)
- void dsy\_tim\_init ()
- void dsy\_tim\_start ()
- uint32\_t dsy\_tim\_get\_tick ()
- · void dsy\_tim\_delay\_tick (uint32\_t cnt)
- uint32\_t dsy\_tim\_get\_ms ()
- void dsy\_tim\_delay\_ms (uint32\_t cnt)
- uint32\_t dsy\_tim\_get\_us ()
- · void dsy tim delay us (uint32 t cnt)
- void daisy::UartHandler::Init ()
- int daisy::UartHandler::PollReceive (uint8\_t \*buff, size\_t size, uint32\_t timeout)
- int daisy::UartHandler::StartRx (size\_t size)
- bool daisy::UartHandler::RxActive ()
- int daisy::UartHandler::FlushRx ()
- int daisy::UartHandler::PollTx (uint8\_t \*buff, size\_t size)
- uint8 t daisy::UartHandler::PopRx ()
- size\_t daisy::UartHandler::Readable ()
- int daisy::UartHandler::CheckError ()

#### **Variables**

- dsy\_gpio daisy::AdcChannelConfig::pin\_
- dsy gpio daisy::AdcChannelConfig::mux pin [MUX SEL LAST]
- · uint8\_t daisy::AdcChannelConfig::mux\_channels\_
- SdmmcBitWidth daisy::SdmmcHandlerInit::bitdepth
- SdmmcSpeed daisy::SdmmcHandlerInit::speed
- const size t daisy::kUartMaxBufferSize = 32

## 6.7.1 Detailed Description

Peripheral devices, not meant for human interaction.

General Purpose IO driver

# 6.7.2 Enumeration Type Documentation

#### 6.7.2.1 anonymous enum

anonymous enum

Index for the several arrays in the sai\_handle struct below.

DSY_SAI_1	&
DSY_SAL_2	&
DSY_SAI_LAST	&

## 6.7.2.2 dsy\_audio\_bitdepth

enum dsy\_audio\_bitdepth

Specifies the bitdepth of the hardware connected to the SAI peripheral

## Enumerator

DSY_AUDIO_BITDEPTH_16	&
DSY_AUDIO_BITDEPTH_24	&
DSY_AUDIO_BITDEPTH_LAST	&

## 6.7.2.3 dsy\_audio\_device

enum dsy\_audio\_device

List of devices with built in support. Devices not listed here, will need to have initialization done externally.

#### Enumerator

DSY_AUDIO_NONE	For unsupported, or custom devices.
DSY_AUDIO_DEVICE_PCM3060	&
DSY_AUDIO_DEVICE_WM8731	&
DSY_AUDIO_DEVICE_AK4556	&
DSY_AUDIO_DEVICE_LAST	&

# 6.7.2.4 dsy\_audio\_dir

enum dsy\_audio\_dir

Each SAI has two datalines, they can independently be configured as inputs or outputs.

DSY_AUDIO_RX	&
DSY_AUDIO_TX	&

## 6.7.2.5 dsy\_audio\_sai

enum dsy\_audio\_sai

Driver for the SAI peripheral Supports SAI1 and SAI2 with several configuration options selects which SAI (or both/none) to initialize

## Enumerator

DSY_AUDIO_INIT_SAI1	&
DSY_AUDIO_INIT_SAI2	&
DSY_AUDIO_INIT_BOTH	&
DSY_AUDIO_INIT_NONE	&
DSY_AUDIO_INIT_LAST	&

# 6.7.2.6 dsy\_audio\_samplerate

enum dsy\_audio\_samplerate

Currently Sample Rates are not correctly supported. All audio is currently run at 48kHz

## Enumerator

DSY_AUDIO_SAMPLERATE_32K	&
DSY_AUDIO_SAMPLERATE_48K	&
DSY_AUDIO_SAMPLERATE_96K	&
DSY_AUDIO_SAMPLERATE_LAST	&

## 6.7.2.7 dsy\_audio\_sync

enum dsy\_audio\_sync

Setting for each SAI that sets whether the processor is generating the MCLK signal or not.

DSY_AUDIO_SYNC_MASTER	No Crystal
DSY_AUDIO_SYNC_SLAVE	Crystal
DSY_AUDIO_SYNC_LAST	&

## 6.7.2.8 dsy\_dac\_bitdepth

 $\verb"enum dsy_dac_bitdepth"$ 

Sets the bit depth of the DAC output This can be set independently for each channel.

#### Enumerator

DSY_DAC_BITS_8	&
DSY_DAC_BITS_12	&
DSY_DAC_BITS_LAST	&

# 6.7.2.9 dsy\_dac\_channel

enum dsy\_dac\_channel

Sets which channel(s) are initialized with the settings chosen.

#### Enumerator

DSY_DAC_CHN1	&
DSY_DAC_CHN2	&
DSY_DAC_CHN_LAST	&
DSY_DAC_CHN_BOTH	&

#### 6.7.2.10 dsy\_dac\_mode

enum dsy\_dac\_mode

Driver for the built in DAC on the STM32 The STM32 has 2 Channels of independently configurable DACs, with up to 12-bit resolution. Currently only Polling is supported.

#### Enumerator

DSY_DAC_MODE_POLLING	Polling mode
DSY_DAC_MODE_LAST	3

# 6.7.2.11 dsy\_gpio\_mode

enum dsy\_gpio\_mode

Sets the mode of the GPIO

## Enumerator

DSY_GPIO_MODE_INPUT	&
DSY_GPIO_MODE_OUTPUT_PP	Push-Pull
DSY_GPIO_MODE_OUTPUT_OD	Open-Drain
DSY_GPIO_MODE_ANALOG	&
DSY_GPIO_MODE_LAST	&

6.7.2.12 dsy\_gpio\_pull

enum dsy\_gpio\_pull

Configures whether an internal Pull up or Pull down resistor is used

#### Enumerator

DSY_GPIO_NOPULL	&
DSY_GPIO_PULLUP	&
DSY_GPIO_PULLDOWN	&

6.7.2.13 dsy\_i2c\_periph

enum dsy\_i2c\_periph

Driver for controlling I2C devices Specifices the internal peripheral to use (these are mapped to different pins on the hardware).

# Enumerator

DSY_I2C_PERIPH↔	&
_1	
DSY_I2C_PERIPH←	&
_2	
DSY_I2C_PERIPH←	&
_3	
DSY_I2C_PERIPH ↔	&
_4	

6.7.2.14 dsy\_i2c\_pin

enum dsy\_i2c\_pin

List of pins associated with the peripheral. These must be set in the handle's pin\_config.

#### Enumerator

DSY_I2C_PIN_SCL	&
DSY_I2C_PIN_SDA	&
DSY_I2C_PIN_LAST	&

## 6.7.2.15 dsy\_i2c\_speed

enum dsy\_i2c\_speed

Rate at which the clock/data will be sent/received. The device being used will have maximum speeds. 1MHZ Mode is currently 886kHz\*\*

## Enumerator

DSY_I2C_SPEED_100KHZ	
DSY_I2C_SPEED_400KHZ	
DSY_I2C_SPEED_1MHZ	
DSY_I2C_SPEED_LAST	

#### 6.7.2.16 dsy\_qspi\_device

enum dsy\_qspi\_device

Flash Devices supported. (Both of these are more-or-less the same, just different sizes).

#### Enumerator

DSY_QSPI_DEVICE_IS25LP080D	
DSY_QSPI_DEVICE_IS25LP064A	
DSY_QSPI_DEVICE_LAST	&

## 6.7.2.17 dsy\_qspi\_mode

enum dsy\_qspi\_mode

Modes of operation. Memory Mapped mode: QSPI configured so that the QSPI can be read from starting address 0x90000000. Writing is not possible in this mode.

Indirect Polling mode: Device driver enabled. Read/Write possible via dsy\_qspi\_\* functions

## Enumerator

DSY_QSPI_MODE_DSY_MEMORY_MAPPED	
DSY_QSPI_MODE_INDIRECT_POLLING	&
DSY_QSPI_MODE_LAST	&

6.7.2.18 dsy\_qspi\_pin

 $\verb"enum dsy_qspi_pin"$ 

Driver for QSPI peripheral to interface with external flash memory. Currently supported QSPI Devices: IS25LP080DList of Pins used in QSPI (passed in during Init)

#### Enumerator

DSY_QSPI_PIN_IO0	&
DSY_QSPI_PIN_IO1	
DSY_QSPI_PIN_IO2	&
DSY_QSPI_PIN_IO3	
DSY_QSPI_PIN_CLK	
DSY_QSPI_PIN_NCS	
DSY_QSPI_PIN_LAST	

6.7.2.19 dsy\_sai\_pin

enum dsy\_sai\_pin

List of the pins that need to be initialized SIN/SOUT is a bit misleading, and should be turned into A/B since it is possible to configure two inputs or two outputs on a single SAI.

#### Enumerator

DSY_SAI_PIN_MCLK	
DSY_SAI_PIN_FS	&
DSY_SAI_PIN_SCK	&
DSY_SAI_PIN_SIN	
DSY_SAI_PIN_SOUT	
DSY_SAI_PIN_LAST	&

6.7.2.20 MuxPin

enum daisy::AdcChannelConfig::MuxPin

Which pin to use for multiplexing

## Enumerator

MUX_SEL_0	&
MUX_SEL_1	&
MUX_SEL_2	&
MUX_SEL_LAST	&

# 6.7.2.21 OverSampling

enum daisy::AdcHandle::OverSampling

Supported oversampling amounts

# Enumerator

OVS_NONE	&
OVS_4	&
OVS_8	&
OVS_16	&
OVS_32	&
OVS_64	&
OVS_128	&
OVS_256	&
OVS_512	&
OVS_1024	&
OVS_LAST	&

## 6.7.2.22 SdmmcBitWidth

enum daisy::SdmmcBitWidth

Sets whether 4-bit mode or 1-bit mode is used for the SDMMC

SDMMC_BITS↔	&
_1	
SDMMC_BITS⊷	&
_4	

## 6.7.2.23 SdmmcMode

enum daisy::SdmmcMode

Operating Mode. Currently only FatFS is supported.

#### Enumerator

```
SDMMC_MODE_FATFS &
```

# 6.7.2.24 SdmmcSpeed

enum daisy::SdmmcSpeed

Sets the desired clock speed of the SD card bus. Initialization is always done at or below 400kHz, and then the user speed is set.

#### Enumerator

SDMMC_SPEED_400KHZ	&
SDMMC_SPEED_12MHZ	&

## 6.7.2.25 SpiPeriph

enum daisy::SpiPeriph

SPI peripheral enum

## Enumerator

SPI_PERIPH↔	SPI peripheral 1
_1	
SPI_PERIPH ←	SPI peripheral 3
_3	
SPI_PERIPH ←	SPI peripheral 3
_6	

# 6.7.2.26 SpiPin

enum daisy::SpiPin

SPI pins

#### Enumerator

SPI_PIN_CS	CS pin
SPI_PIN_SCK	SCK pin
SPI_PIN_MOSI	MOSI pin
SPI_PIN_MISO	MISO pin

# 6.7.3 Function Documentation

# 6.7.3.1 BlockingTransmit()

## Blocking transmit

#### **Parameters**

*buff	input buffer
size	buffer size

## 6.7.3.2 CheckError()

```
int daisy::UartHandler::CheckError ( )
```

## Returns

the result of HAL\_UART\_GetError() to the user.

# 6.7.3.3 dsy\_dac\_init()

Initializes the specified channel(s) of the DAC

## **Parameters**

*dsy_hdac	Dac to initialize
channel	Channels to init

## 6.7.3.4 dsy\_dac\_start()

Turns on the DAC and turns on any internal timer if necessary.

## **Parameters**

channel	Channel to start
---------	------------------

## 6.7.3.5 dsy\_dac\_write()

Sets the specified channel of the dac to the value (within bitdepth) resolution. When set to 8-bit, val should be 0-255 When set to 12-bit, val should be 0-4095

#### **Parameters**

channel	Channel to write to
val	Value to write

# 6.7.3.6 dsy\_gpio\_deinit()

Deinitializes the gpio pin

#### **Parameters**

*p	Pin pointer

# 6.7.3.7 dsy\_gpio\_init()

Initializes the gpio with the settings configured.

#### **Parameters**

```
*p Pin pointer
```

# 6.7.3.8 dsy\_gpio\_read()

Reads the state of the gpio pin

#### **Parameters**

```
*p Pin pointer
```

#### Returns


1 if the pin is HIGH, and 0 if the pin is LOW

## 6.7.3.9 dsy\_gpio\_toggle()

```
void dsy_gpio_toggle ( {\tt dsy\_gpio} \ *\ p\ )
```

Toggles the state of the pin so that it is not at the same state as it was previously.

#### **Parameters**

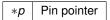

## 6.7.3.10 dsy\_gpio\_write()

Writes the state to the gpio pin Pin will be set to 3v3 when state is 1, and 0V when state is 0

## **Parameters**

* <i>p</i>	Pin pointer
state	State to write

# 6.7.3.11 dsy\_i2c\_init()

Initializes an I2C peripheral with the data given from the handle.

#### **Parameters**

```
*dsy_hi2c Required to initialize.
```

#### 6.7.3.12 dsy\_qspi\_deinit()

```
int dsy_qspi_deinit ( )
```

Deinitializes the peripheral This should be called before reinitializing QSPI in a different mode.

## Returns

```
DSY_MEMORY_OK or DSY_MEMORY_ERROR
```

# 6.7.3.13 dsy\_qspi\_erase()

Erases the area specified on the chip. Erasures will happen by 4K, 32K or 64K increments. Smallest erase possible is 4kB at a time. (on IS25LP\*)

## **Parameters**

start_adr	Address to begin erasing from
end_adr	Address to stop erasing at

#### Returns

DSY\_MEMORY\_OK or DSY\_MEMORY\_ERROR

## 6.7.3.14 dsy\_qspi\_erasesector()

```
int dsy_qspi_erasesector ( \mbox{uint32\_t} \ \ \mbox{\it addr} \ )
```

Erases a single sector of the chip. TODO: Document the size of this function.

## **Parameters**

#### Returns

DSY\_MEMORY\_OK or DSY\_MEMORY\_ERROR

## 6.7.3.15 dsy\_qspi\_init()

Initializes QSPI peripheral, and Resets, and prepares memory for access.

#### **Parameters**

hqspi should be populated with the mode, device and pin\_config before calling this function.

## Returns

DSY\_MEMORY\_OK or DSY\_MEMORY\_ERROR

# 6.7.3.16 dsy\_qspi\_write()

Writes data in buffer to to the QSPI. Starting at address to address+size

#### **Parameters**

address	Address to write to
size	Buffer size
buffer	Buffer to write

## Returns

```
DSY_MEMORY_OK or DSY_MEMORY_ERROR
```

# 6.7.3.17 dsy\_qspi\_writepage()

Writes a single page to to the specified address on the QSPI chip. For IS25LP\* page size is 256 bytes.

#### **Parameters**

adr	Address to write to
SZ	Buff size
buf	Buffer to write

## Returns

```
DSY_MEMORY_OK or DSY_MEMORY_ERROR
```

# 6.7.3.18 dsy\_sai\_init()

```
dsy_gpio_pin * sai1_pin_list,
dsy_gpio_pin * sai2_pin_list )
```

Intializes the SAI peripheral(s) with the specified settings. Pinlists should be arrays of DSY\_SAI\_PIN\_LAST elements

## **Parameters**

init	&
sr[]	Sample rate per chan: 0, 1
bitdepth[]	Bitdepth per chan: 0, 1
sync_config[]	& sync config per chan: 0, 1
*sai1_pin_list	&
*sai2_pin_list	&

## 6.7.3.19 dsy\_sai\_init\_from\_handle()

Uses the data within \*hsai to initialize the peripheral(s)

# **Parameters**

hsai &

## 6.7.3.20 dsy\_tim\_delay\_ms()

blocking delay of cnt milliseconds.

#### **Parameters**

```
cnt Delay time in ms
```

#### 6.7.3.21 dsy\_tim\_delay\_tick()

blocking delay of cnt timer ticks.

#### **Parameters**

```
cnt Number of ticks
```

#### 6.7.3.22 dsy\_tim\_delay\_us()

blocking delay of cnt microseconds.

#### **Parameters**

```
cnt Delay time in us
```

# 6.7.3.23 dsy\_tim\_get\_ms()

```
uint32_t dsy_tim_get_ms ( )
```

These functions are converted to use milliseconds as their time base.

#### Returns

the number of milliseconds through the timer period.

# 6.7.3.24 dsy\_tim\_get\_tick()

```
uint32_t dsy_tim_get_tick ( )
```

These functions are specific to the actual clock ticks at the timer frequency which is currently fixed at 200MHz

## Returns

a number 0x00000000-0xfffffff of the current tick

```
6.7.3.25 dsy_tim_get_us()
```

```
uint32_t dsy_tim_get_us ( )
```

These functions are converted to use microseconds as their time base.

Returns

the number of microseconds through the timer period.

```
6.7.3.26 dsy_tim_init()
```

```
void dsy_tim_init ( )
```

General purpose timer for delays and general timing. initializes the TIM2 peripheral with maximum counter autoreload, and no prescalers.

```
6.7.3.27 dsy_tim_start()
```

```
void dsy_tim_start ( )
```

Starts the timer ticking.

#### 6.7.3.28 FlushRx()

```
int daisy::UartHandler::FlushRx ( )
```

Flushes the Receive Queue

Returns

OK or ERROR

## 6.7.3.29 Get()

Single channel getter

## **Parameters**

chn | channel to get

#### Returns

Converted value

# 6.7.3.30 GetFloat()

Get floating point from single channel

#### **Parameters**

chn	Channel to get from
-----	---------------------

## Returns

Floating point converted value

# 6.7.3.31 GetMux()

Getters for multiplexed inputs on a single channel (up to 8 per ADC input).

#### **Parameters**

chn	Channel to get from
idx	&

# Returns

data

## 6.7.3.32 GetMuxFloat()

Getters for multiplexed inputs on a single channel (up to 8 per ADC input).

## **Parameters**

chn	Channel to get from
idx	&

# Returns

Floating point data

# 6.7.3.33 GetMuxPtr()

Getters for multiplexed inputs on a single channel. (Max 8 per chan)

## **Parameters**

chn	Channel to get from
idx	&

# Returns

Pointer to data

## 6.7.3.34 GetPtr()

Get pointer to a value from a single channel

# **Parameters**

chn

#### **Returns**

Pointer to converted value

```
6.7.3.35 Init() [1/4]

void daisy::UartHandler::Init ( )
Initializes the UART Peripheral

6.7.3.36 Init() [2/4]

void daisy::SpiHandle::Init ( )
Initializes handler

6.7.3.37 Init() [3/4]

void daisy::SdmmcHandler::Init ( )
Initializes the SD Card Interface For now all settings are fixed (See todo at top of section)

6.7.3.38 Init() [4/4]
```

Initializes the ADC with the pins passed in.

AdcChannelConfig \* cfg, size\_t num\_channels,

OverSampling  $ovs = OVS_32$ )

void daisy::AdcHandle::Init (

## **Parameters**

*cfg	an array of AdcChannelConfig of the desired channel
num_channels	number of ADC channels to initialize
ovs	Oversampling amount - Defaults to OVS_32

# 6.7.3.39 InitMux()

Initializes a single ADC pin as a Multiplexed ADC. Requires a CD4051 Multiplexor connected to the pin Internal Callbacks handle the pin addressing.

#### **Parameters**

channels	must be 1-8
mux_0	First mux pin
mux_1	Second mux pin
mux_2	Third mux pin
adc_pin	&

# 6.7.3.40 InitSingle()

Initializes a single ADC pin as an ADC.

#### **Parameters**

```
pin Pin to init.
```

## 6.7.3.41 PollReceive()

Reads the amount of bytes in blocking mode with a 10ms timeout.

## **Parameters**

*buff	Buffer to read to
size	Buff size
timeout	How long to timeout for (10ms?)

## Returns

Data received

## 6.7.3.42 PolITx()

Sends an amount of data in blocking mode.

#### **Parameters**

*buff	Buffer of data to send
size	Buffer size

#### Returns

OK or ERROR

```
6.7.3.43 PopRx()
uint8_t daisy::UartHandler::PopRx ( )
Pops the oldest byte from the FIFO.
Returns
     Popped byte
6.7.3.44 Readable()
size_t daisy::UartHandler::Readable ( )
Checks if there are any unread bytes in the FIFO
Returns
     1 or 0 ??
6.7.3.45 RxActive()
bool daisy::UartHandler::RxActive ( )
Returns
     whether Rx DMA is listening or not.
6.7.3.46 Start()
void daisy::AdcHandle::Start ( )
Starts reading from the ADC
```

Starts a DMA Receive callback to fill a buffer of specified size. Data is populated into a FIFO queue, and can be queried with the functions below. Maximum Buffer size is defined above. If a value outside of the maximum is specified, the size will be set to the maximum.

6.7.3.47 StartRx()

```
Parameters
```

```
size Queue size
```

Returns

&

OK or ERROR

```
6.7.3.48 Stop()
void daisy::AdcHandle::Stop ( )
Stops reading from the ADC
6.7.4 Variable Documentation
6.7.4.1 bitdepth
SdmmcBitWidth daisy::SdmmcHandlerInit::bitdepth
&
6.7.4.2 kUartMaxBufferSize
const size_t daisy::kUartMaxBufferSize = 32
Maximum Queue buffer size
6.7.4.3 mux_channels_
uint8_t daisy::AdcChannelConfig::mux_channels_
&
6.7.4.4 mux_pin_
dsy_gpio daisy::AdcChannelConfig::mux_pin_[MUX_SEL_LAST]
6.7.4.5 pin_
dsy_gpio daisy::AdcChannelConfig::pin_
&
6.7.4.6 speed
SdmmcSpeed daisy::SdmmcHandlerInit::speed
```

6.8 SYSTEM 63

# 6.8 SYSTEM

Deals with system. DMA, clocks, etc.

#### **Functions**

- void dsy\_dma\_init (void)
- void dsy\_system\_init ()
- void dsy\_system\_jumpto (uint32\_t addr)
- void dsy\_system\_jumptoqspi ()
- uint32\_t dsy\_system\_getnow ()
- void dsy\_system\_delay (uint32\_t delay\_ms)

## 6.8.1 Detailed Description

Deals with system. DMA, clocks, etc.

Low level System Configuration

#### 6.8.2 Function Documentation

## 6.8.2.1 dsy\_dma\_init()

```
void dsy_dma_init (
     void )
```

Initializes the Direct Memory Access Peripheral used by many internal elements of libdaisy. Initializes the DMA (specifically for the modules used within the library)

## 6.8.2.2 dsy\_system\_delay()

Blocking Delay that uses the SysTick (1ms callback) to wait.

## **Parameters**

delay_ms   Time to delay in ms
--------------------------------

#### 6.8.2.3 dsy\_system\_getnow()

```
uint32_t dsy_system_getnow ( )
```

#### Returns

a uint32\_t value of milliseconds since the SysTick started Note! This is a HAL GetTick()

## 6.8.2.4 dsy\_system\_init()

```
void dsy_system_init ( )
```

Initializes Clock tree, MPU, and internal memories voltage regulators. This function *must* be called at the beginning of any program using libdaisy Higher level daisy\_files call this through the DaisySeed object.

# 6.8.2.5 dsy\_system\_jumpto()

```
void dsy_system_jumpto ( \mbox{uint32\_t } \mbox{\it addr} \mbox{\it )}
```

Jump to an address within the internal memory

This may not work correctly, and may not be very useful with the single sector of memory on the stm32h750\*\*

#### **Parameters**

addr Address to jump to

# 6.8.2.6 dsy\_system\_jumptoqspi()

```
void dsy_system_jumptoqspi ( )
```

Jumps to the first address of the external flash chip (0x9000000) If there is no code there, the chip will likely fall through to the while() loop TODO: Documentation/Loader for using external flash coming soon.

6.9 DEVICE 65

# 6.9 DEVICE

Low level devices. Led drivers, codecs, etc.

# **Modules**

• SHIFTREGISTER

Digital shift registers.

FLASH

Flash memory.

• CODEC

Audio codecs.

• LED

LED driver devices.

• SDRAM

SDRAM devices.

# 6.9.1 Detailed Description

Low level devices. Led drivers, codecs, etc.

## 6.10 SHIFTREGISTER

Digital shift registers.

#### **Classes**

- struct dsy\_sr\_4021\_handle
- · class ShiftRegister595

Device Driver for 8-bit shift register. CD74HC595 - 8-bit serial to parallel output shift.

## **Enumerations**

```
    enum {
        DSY_SR_4021_PIN_CS, DSY_SR_4021_PIN_CLK, DSY_SR_4021_PIN_DATA, DSY_SR_4021_PIN_D
        ATA2,
        DSY_SR_4021_PIN_LAST }
```

## **Functions**

- void dsy\_sr\_4021\_init (dsy\_sr\_4021\_handle \*sr)
- void dsy\_sr\_4021\_update (dsy\_sr\_4021\_handle \*sr)
- uint8\_t dsy\_sr\_4021\_state (dsy\_sr\_4021\_handle \*sr, uint8\_t idx)

# 6.10.1 Detailed Description

Digital shift registers.

Device driver for the CD4021. Bit-banged serial shift input.

# 6.10.2 Enumeration Type Documentation

## 6.10.2.1 anonymous enum

anonymous enum

Pins that need to be configured to use. DATA2 only needs to be set if num parallel is > 1

DSY_SR_4021_PIN_CS	CS Pin
DSY_SR_4021_PIN_CLK	CLK Pin
DSY_SR_4021_PIN_DATA	DATA pin
DSY_SR_4021_PIN_DATA2	DATA2 Pin, optional
DSY SR 4021 PIN LAST	Enum Last

6.10 SHIFTREGISTER 67

# 6.10.3 Function Documentation

# 6.10.3.1 dsy\_sr\_4021\_init()

Initialize CD4021 with settings from sr\_4021\_handle

#### **Parameters**

```
sr handle to initialize
```

# 6.10.3.2 dsy\_sr\_4021\_state()

Returns the state of a pin at a given index.

## **Parameters**

* <i>sr</i>	Handle containing desired pin
idx	Pin index

## 6.10.3.3 dsy\_sr\_4021\_update()

Fills internal states with CD4021 data states.

#### **Parameters**

*sr Handle to update	•
----------------------	---

## **6.11 FLASH**

Flash memory.

#### **Macros**

- #define RESET ENABLE CMD 0x66
- #define RESET\_MEMORY\_CMD 0x99
- #define READ\_ID\_CMD 0x9E
- #define READ ID CMD2 0x9F
- #define MULTIPLE\_IO\_READ\_ID\_CMD 0xAF
- #define READ SERIAL FLASH DISCO PARAM CMD 0x5A
- #define READ CMD 0x03
- #define READ\_4\_BYTE\_ADDR\_CMD 0x13
- #define FAST READ CMD 0x0B
- #define FAST READ DTR CMD 0x0D
- #define FAST READ 4 BYTE ADDR CMD 0x0C
- #define DUAL\_OUT\_FAST\_READ\_CMD 0x3B
- #define DUAL\_OUT\_FAST\_READ\_DTR\_CMD 0x3D
- #define DUAL\_OUT\_FAST\_READ\_4\_BYTE\_ADDR\_CMD 0x3C
- #define DUAL INOUT FAST READ CMD 0xBB
- #define DUAL INOUT FAST READ DTR CMD 0xBD
- #define DUAL INOUT FAST READ 4 BYTE ADDR CMD 0xBC
- #define QUAD OUT FAST READ CMD 0x6B
- #define QUAD\_OUT\_FAST\_READ\_DTR\_CMD 0x0D
- #define QUAD\_OUT\_FAST\_READ\_4\_BYTE\_ADDR\_CMD 0x6C
- #define QUAD\_INOUT\_FAST\_READ\_CMD 0xEB
- #define QUAD\_INOUT\_FAST\_READ\_DTR\_CMD 0xED
- #define QUAD\_INOUT\_FAST\_READ\_4\_BYTE\_ADDR\_CMD 0xEC
- #define WRITE\_ENABLE\_CMD 0x06
- #define WRITE DISABLE CMD 0x04
- #define READ STATUS REG CMD 0x05
- #define WRITE STATUS REG CMD 0x01
- #define READ LOCK REG CMD 0xE8
- #define WRITE\_LOCK\_REG\_CMD 0xE5
- #define READ FLAG STATUS REG CMD 0x70
- #define CLEAR\_FLAG\_STATUS\_REG\_CMD 0x50
- #define READ\_NONVOL\_CFG\_REG\_CMD 0xB5
- #define WRITE\_NONVOL\_CFG\_REG\_CMD 0xB1
- #define READ\_READ\_PARAM\_REG\_CMD 0x61
- #define WRITE\_READ\_PARAM\_REG\_CMD 0xC0
- #define READ\_ENHANCED\_VOL\_CFG\_REG\_CMD 0x81
- #define WRITE\_ENHANCED\_VOL\_CFG\_REG\_CMD 0x85
- #define READ EXT ADDR REG CMD 0xC8
- #define WRITE EXT ADDR REG CMD 0xC5
- #define PAGE\_PROG\_CMD 0x02
- #define PAGE\_PROG\_4\_BYTE\_ADDR\_CMD 0x12
- #define DUAL\_IN\_FAST\_PROG\_CMD 0xA2
- #define EXT\_DUAL\_IN\_FAST\_PROG\_CMD 0xD2
- #define QUAD IN FAST PROG CMD 0x32
- #define EXT\_QUAD\_IN\_FAST\_PROG\_CMD 0x38
- #define QUAD IN FAST PROG 4 BYTE ADDR CMD 0x34
- #define SUBSECTOR\_ERASE\_CMD 0xd7

6.11 FLASH 69

- #define SUBSECTOR ERASE QPI CMD 0x20
- #define SUBSECTOR\_ERASE\_4\_BYTE\_ADDR\_CMD 0x21
- #define SECTOR ERASE CMD 0xD8
- #define SECTOR ERASE 4 BYTE ADDR CMD 0xDC
- #define BLOCK ERASE 32K CMD 0x52
- #define DIE ERASE CMD 0xC4
- #define PROG\_ERASE\_RESUME\_CMD 0x7A
- #define PROG ERASE SUSPEND CMD 0x75
- #define READ OTP ARRAY CMD 0x4B
- #define PROG OTP ARRAY CMD 0x42
- #define ENTER 4 BYTE ADDR MODE CMD 0xB7
- #define EXIT 4 BYTE ADDR MODE CMD 0xE9
- #define ENTER\_QUAD\_CMD 0x35
- #define EXIT\_QUAD\_CMD 0xF5
- #define IS25LP064A\_SR\_WIP ((uint8\_t)0x01)

#### IS25LP08D Registers.

- #define IS25LP064A\_SR\_WREN ((uint8\_t)0x02)
- #define IS25LP064A\_SR\_SRWREN ((uint8\_t)0x80)
- #define IS25LP064A SR QE ((uint8 t)0x40)
- #define IS25LP064A NVCR NBADDR ((uint16 t)0x0001)
- #define IS25LP064A NVCR SEGMENT ((uint16 t)0x0002)
- #define IS25LP064A\_NVCR\_DUAL ((uint16\_t)0x0004)
- #define IS25LP064A NVCR QUAB ((uint16 t)0x0008)
- #define IS25LP064A NVCR RH ((uint16 t)0x0010)
- #define IS25LP064A\_NVCR\_DTRP ((uint16\_t)0x0020)
- #define IS25LP064A\_NVCR\_ODS ((uint16 t)0x01C0)
- #define IS25LP064A\_NVCR\_XIP ((uint16\_t)0x0E00)
- #define IS25LP064A\_NVCR\_NB\_DUMMY ((uint16\_t)0xF000)
- #define IS25LP064A\_VCR\_WRAP ((uint8\_t)0x03)
- #define IS25LP064A\_VCR\_XIP ((uint8\_t)0x08)
- #define IS25LP064A VCR NB DUMMY ((uint8 t)0xF0)
- #define IS25LP064A EAR HIGHEST SE ((uint8 t)0x03)
- #define IS25LP064A\_EAR\_THIRD\_SEG ((uint8\_t)0x02)
- #define IS25LP064A EAR SECOND SEG ((uint8 t)0x01)
- #define IS25LP064A EAR LOWEST SEG ((uint8 t)0x00)
- #define IS25LP064A EVCR ODS ((uint8 t)0x07)
- #define IS25LP064A\_EVCR\_RH ((uint8\_t)0x10)
- #define IS25LP064A EVCR DTRP ((uint8 t)0x20)
- #define IS25LP064A\_EVCR\_DUAL ((uint8\_t)0x40)
- #define IS25LP064A\_EVCR\_QUAD ((uint8\_t)0x80)
- #define IS25LP064A\_FSR\_NBADDR ((uint8\_t)0x01)
- #define IS25LP064A FSR PRERR ((uint8 t)0x02)
- #define IS25LP064A\_FSR\_PGSUS ((uint8\_t)0x04)
- #define IS25LP064A\_FSR\_PGERR ((uint8\_t)0x10)
- #define IS25LP064A\_FSR\_ERERR ((uint8\_t)0x20)
- #define IS25LP064A\_FSR\_ERSUS ((uint8\_t)0x40)
- #define IS25LP064A\_FSR\_READY ((uint8\_t)0x80)
- #define RESET\_ENABLE\_CMD 0x66
- #define RESET\_MEMORY\_CMD 0x99
- #define READ\_ID\_CMD 0x9E
- #define READ\_ID\_CMD2 0x9F
- #define MULTIPLE IO READ ID CMD 0xAF
- #define READ SERIAL FLASH DISCO PARAM CMD 0x5A
- #define READ\_CMD 0x03

- #define READ 4 BYTE ADDR CMD 0x13
- #define FAST READ CMD 0x0B
- #define FAST\_READ\_DTR\_CMD 0x0D
- #define FAST READ 4 BYTE ADDR CMD 0x0C
- #define DUAL OUT FAST READ CMD 0x3B
- #define DUAL\_OUT\_FAST\_READ\_DTR\_CMD 0x3D
- #define DUAL OUT FAST READ 4 BYTE ADDR CMD 0x3C
- #define DUAL\_INOUT\_FAST\_READ\_CMD 0xBB
- #define DUAL\_INOUT\_FAST\_READ\_DTR\_CMD 0xBD
- #define DUAL INOUT FAST READ 4 BYTE ADDR CMD 0xBC
- #define QUAD OUT FAST READ CMD 0x6B
- #define QUAD OUT FAST READ DTR CMD 0x0D
- #define QUAD\_OUT\_FAST\_READ\_4\_BYTE\_ADDR\_CMD 0x6C
- #define QUAD INOUT FAST READ CMD 0xEB
- #define QUAD\_INOUT\_FAST\_READ\_DTR\_CMD 0xED
- #define QUAD\_INOUT\_FAST\_READ\_4\_BYTE\_ADDR\_CMD 0xEC
- #define WRITE ENABLE CMD 0x06
- #define WRITE DISABLE CMD 0x04
- #define READ STATUS REG CMD 0x05
- #define WRITE\_STATUS\_REG\_CMD 0x01
- #define READ\_LOCK\_REG\_CMD 0xE8
- #define WRITE\_LOCK\_REG\_CMD 0xE5
- #define READ FLAG STATUS REG CMD 0x70
- #define CLEAR\_FLAG\_STATUS\_REG\_CMD 0x50
- #define READ NONVOL CFG REG CMD 0xB5
- #define WRITE\_NONVOL\_CFG\_REG\_CMD 0xB1
- #define READ READ PARAM REG CMD 0x61
- #define WRITE\_READ\_PARAM\_REG\_CMD 0xC0
- #define READ\_ENHANCED\_VOL\_CFG\_REG\_CMD 0x81
- #define WRITE\_ENHANCED\_VOL\_CFG\_REG\_CMD 0x85
- #define READ\_EXT\_ADDR\_REG\_CMD 0xC8
- #define WRITE EXT ADDR REG CMD 0xC5
- #define PAGE\_PROG\_CMD 0x02
- #define PAGE\_PROG\_4\_BYTE\_ADDR\_CMD 0x12
- #define DUAL\_IN\_FAST\_PROG\_CMD 0xA2
- #define EXT\_DUAL\_IN\_FAST\_PROG\_CMD 0xD2
- #define QUAD\_IN\_FAST\_PROG\_CMD 0x32
- #define EXT\_QUAD\_IN\_FAST\_PROG\_CMD 0x38
- #define QUAD\_IN\_FAST\_PROG\_4\_BYTE\_ADDR\_CMD 0x34
- #define SUBSECTOR ERASE CMD 0xd7
- #define SUBSECTOR ERASE QPI CMD 0x20
- #define SUBSECTOR\_ERASE\_4\_BYTE\_ADDR\_CMD 0x21
- #define SECTOR\_ERASE\_CMD 0xD8
- #define SECTOR\_ERASE\_4\_BYTE\_ADDR\_CMD 0xDC
- #define BLOCK\_ERASE\_32K\_CMD 0x52
- #define DIE ERASE CMD 0xC4
- #define PROG ERASE RESUME CMD 0x7A
- #define PROG\_ERASE\_SUSPEND\_CMD 0x75
- #define READ\_OTP\_ARRAY\_CMD 0x4B
- #define PROG\_OTP\_ARRAY\_CMD 0x42
- #define ENTER 4 BYTE ADDR MODE CMD 0xB7
- #define EXIT\_4\_BYTE\_ADDR\_MODE\_CMD 0xE9
- #define ENTER QUAD CMD 0x35
- #define EXIT QUAD CMD 0xF5
- #define IS25LP080D\_SR\_WIP ((uint8\_t)0x01)

6.11 FLASH 71

#### IS25LP08D Registers.

- #define IS25LP080D\_SR\_WREN ((uint8\_t)0x02)
- #define IS25LP080D\_SR\_SRWREN ((uint8\_t)0x80)
- #define IS25LP080D SR QE ((uint8 t)0x40)
- #define IS25LP080D NVCR NBADDR ((uint16 t)0x0001)
- #define IS25LP080D\_NVCR\_SEGMENT ((uint16\_t)0x0002)
- #define IS25LP080D NVCR DUAL ((uint16 t)0x0004)
- #define IS25LP080D\_NVCR\_QUAB ((uint16\_t)0x0008)
- #define IS25LP080D\_NVCR\_RH ((uint16\_t)0x0010)
- #define IS25LP080D NVCR DTRP ((uint16 t)0x0020)
- #define IS25LP080D\_NVCR\_ODS ((uint16\_t)0x01C0)
- #define IS25LP080D\_NVCR\_XIP ((uint16\_t)0x0E00)
- #define IS25LP080D NVCR NB DUMMY ((uint16 t)0xF000)
- #define IS25LP080D VCR WRAP ((uint8 t)0x03)
- #define IS25LP080D\_VCR\_XIP ((uint8\_t)0x08)
- #define IS25LP080D\_VCR\_NB\_DUMMY ((uint8\_t)0xF0)
- #define IS25LP080D\_EAR\_HIGHEST\_SE ((uint8\_t)0x03)
- #define IS25LP080D\_EAR\_THIRD\_SEG ((uint8\_t)0x02)
- #define IS25LP080D\_EAR\_SECOND\_SEG ((uint8\_t)0x01)
- #define IS25LP080D\_EAR\_LOWEST\_SEG ((uint8\_t)0x00)
- #define IS25LP080D EVCR ODS ((uint8 t)0x07)
- #define IS25LP080D\_EVCR\_RH ((uint8\_t)0x10)
- #define IS25LP080D EVCR DTRP ((uint8 t)0x20)
- #define IS25LP080D EVCR DUAL ((uint8 t)0x40)
- #define IS25LP080D\_EVCR\_QUAD ((uint8\_t)0x80)
- #define IS25LP080D\_FSR\_NBADDR ((uint8\_t)0x01)
- #define IS25LP080D\_FSR\_PRERR ((uint8\_t)0x02)
- #define IS25LP080D\_FSR\_PGSUS ((uint8\_t)0x04)
- #define IS25LP080D\_FSR\_PGERR ((uint8\_t)0x10)
- #define IS25LP080D\_FSR\_ERERR ((uint8\_t)0x20)
- #define IS25LP080D FSR ERSUS ((uint8 t)0x40)
- #define IS25LP080D\_FSR\_READY ((uint8\_t)0x80)

## 6.11.1 Detailed Description

Flash memory.

IS25LP08D Commands.

## 6.11.2 Macro Definition Documentation

6.11.2.1 BLOCK\_ERASE\_32K\_CMD [1/2]

#define BLOCK\_ERASE\_32K\_CMD 0x52

&

```
6.11.2.2 BLOCK_ERASE_32K_CMD [2/2]
#define BLOCK_ERASE_32K_CMD 0x52
6.11.2.3 CLEAR_FLAG_STATUS_REG_CMD [1/2]
#define CLEAR_FLAG_STATUS_REG_CMD 0x50
6.11.2.4 CLEAR_FLAG_STATUS_REG_CMD [2/2]
#define CLEAR_FLAG_STATUS_REG_CMD 0x50
6.11.2.5 DIE_ERASE_CMD [1/2]
#define DIE_ERASE_CMD 0xC4
6.11.2.6 DIE_ERASE_CMD [2/2]
#define DIE_ERASE_CMD 0xC4
&
6.11.2.7 DUAL_IN_FAST_PROG_CMD [1/2]
#define DUAL_IN_FAST_PROG_CMD 0xA2
&
6.11.2.8 DUAL_IN_FAST_PROG_CMD [2/2]
#define DUAL_IN_FAST_PROG_CMD 0xA2
&
6.11.2.9 DUAL_INOUT_FAST_READ_4_BYTE_ADDR_CMD [1/2]
#define DUAL_INOUT_FAST_READ_4_BYTE_ADDR_CMD 0xBC
```

&

```
6.11.2.10 DUAL_INOUT_FAST_READ_4_BYTE_ADDR_CMD [2/2]
#define DUAL_INOUT_FAST_READ_4_BYTE_ADDR_CMD 0xBC
&
6.11.2.11 DUAL_INOUT_FAST_READ_CMD [1/2]
#define DUAL_INOUT_FAST_READ_CMD 0xBB
6.11.2.12 DUAL_INOUT_FAST_READ_CMD [2/2]
#define DUAL_INOUT_FAST_READ_CMD 0xBB
6.11.2.13 DUAL_INOUT_FAST_READ_DTR_CMD [1/2]
#define DUAL_INOUT_FAST_READ_DTR_CMD 0xBD
6.11.2.14 DUAL_INOUT_FAST_READ_DTR_CMD [2/2]
#define DUAL_INOUT_FAST_READ_DTR_CMD 0xBD
&
6.11.2.15 DUAL OUT FAST READ 4 BYTE ADDR CMD [1/2]
#define DUAL_OUT_FAST_READ_4_BYTE_ADDR_CMD 0x3C
&
6.11.2.16 DUAL_OUT_FAST_READ_4_BYTE_ADDR_CMD [2/2]
#define DUAL_OUT_FAST_READ_4_BYTE_ADDR_CMD 0x3C
&
6.11.2.17 DUAL_OUT_FAST_READ_CMD [1/2]
#define DUAL_OUT_FAST_READ_CMD 0x3B
&
```

```
6.11.2.18 DUAL_OUT_FAST_READ_CMD [2/2]
#define DUAL_OUT_FAST_READ_CMD 0x3B
6.11.2.19 DUAL_OUT_FAST_READ_DTR_CMD [1/2]
#define DUAL_OUT_FAST_READ_DTR_CMD 0x3D
6.11.2.20 DUAL_OUT_FAST_READ_DTR_CMD [2/2]
#define DUAL_OUT_FAST_READ_DTR_CMD 0x3D
6.11.2.21 ENTER_4_BYTE_ADDR_MODE_CMD [1/2]
#define ENTER_4_BYTE_ADDR_MODE_CMD 0xB7
4-byte Address Mode Operations
6.11.2.22 ENTER_4_BYTE_ADDR_MODE_CMD [2/2]
#define ENTER_4_BYTE_ADDR_MODE_CMD 0xB7
4-byte Address Mode Operations
6.11.2.23 ENTER_QUAD_CMD [1/2]
#define ENTER_QUAD_CMD 0x35
Quad Operations
6.11.2.24 ENTER_QUAD_CMD [2/2]
#define ENTER_QUAD_CMD 0x35
Quad Operations
6.11.2.25 EXIT_4_BYTE_ADDR_MODE_CMD [1/2]
#define EXIT_4_BYTE_ADDR_MODE_CMD 0xE9
```

&

```
6.11.2.26 EXIT_4_BYTE_ADDR_MODE_CMD [2/2]
#define EXIT_4_BYTE_ADDR_MODE_CMD 0xE9
6.11.2.27 EXIT_QUAD_CMD [1/2]
#define EXIT_QUAD_CMD 0xF5
6.11.2.28 EXIT_QUAD_CMD [2/2]
#define EXIT_QUAD_CMD 0xF5
6.11.2.29 EXT_DUAL_IN_FAST_PROG_CMD [1/2]
#define EXT_DUAL_IN_FAST_PROG_CMD 0xD2
6.11.2.30 EXT_DUAL_IN_FAST_PROG_CMD [2/2]
#define EXT_DUAL_IN_FAST_PROG_CMD 0xD2
&
6.11.2.31 EXT_QUAD_IN_FAST_PROG_CMD [1/2]
#define EXT_QUAD_IN_FAST_PROG_CMD 0x38
&
6.11.2.32 EXT_QUAD_IN_FAST_PROG_CMD [2/2]
#define EXT_QUAD_IN_FAST_PROG_CMD 0x38
&
6.11.2.33 FAST_READ_4_BYTE_ADDR_CMD [1/2]
#define FAST_READ_4_BYTE_ADDR_CMD 0x0C
&
```

```
6.11.2.34 FAST_READ_4_BYTE_ADDR_CMD [2/2]
#define FAST_READ_4_BYTE_ADDR_CMD 0x0C
6.11.2.35 FAST_READ_CMD [1/2]
#define FAST_READ_CMD 0x0B
6.11.2.36 FAST_READ_CMD [2/2]
#define FAST_READ_CMD 0x0B
6.11.2.37 FAST_READ_DTR_CMD [1/2]
#define FAST_READ_DTR_CMD 0x0D
6.11.2.38 FAST_READ_DTR_CMD [2/2]
\#define FAST_READ_DTR\_CMD 0x0D
&
6.11.2.39 IS25LP064A EAR HIGHEST SE
#define IS25LP064A_EAR_HIGHEST_SE ((uint8_t)0x03)
Select the Highest 128Mb segment
6.11.2.40 IS25LP064A_EAR_LOWEST_SEG
#define IS25LP064A_EAR_LOWEST_SEG ((uint8_t)0x00)
Select the Lowest 128Mb segment (default)
6.11.2.41 IS25LP064A_EAR_SECOND_SEG
#define IS25LP064A_EAR_SECOND_SEG ((uint8_t)0x01)
```

Select the Second 128Mb segment

# 6.11.2.42 IS25LP064A\_EAR\_THIRD\_SEG

Select the Third 128Mb segment

6.11.2.43 IS25LP064A\_EVCR\_DTRP

#define IS25LP064A\_EVCR\_DTRP ((uint8\_t)0x20)

#define IS25LP064A\_EAR\_THIRD\_SEG ((uint8\_t)0x02)

Double transfer rate protocol

6.11.2.44 IS25LP064A\_EVCR\_DUAL

#define IS25LP064A\_EVCR\_DUAL ((uint8\_t)0x40)

Dual I/O protocol

6.11.2.45 IS25LP064A\_EVCR\_ODS

#define IS25LP064A\_EVCR\_ODS ((uint8\_t)0x07)

Output driver strength

6.11.2.46 IS25LP064A\_EVCR\_QUAD

#define IS25LP064A\_EVCR\_QUAD ((uint8\_t)0x80)

Quad I/O protocol

6.11.2.47 IS25LP064A\_EVCR\_RH

#define IS25LP064A\_EVCR\_RH ((uint8\_t)0x10)

Reset/hold

6.11.2.48 IS25LP064A\_FSR\_ERERR

#define IS25LP064A\_FSR\_ERERR ((uint8\_t)0x20)

Erase error

6.11.2.49 IS25LP064A\_FSR\_ERSUS

#define IS25LP064A\_FSR\_ERSUS ((uint8\_t)0x40)

Erase operation suspended

```
6.11.2.50 IS25LP064A_FSR_NBADDR
#define IS25LP064A_FSR_NBADDR ((uint8_t)0x01)
3-bytes or 4-bytes addressing
6.11.2.51 IS25LP064A_FSR_PGERR
#define IS25LP064A_FSR_PGERR ((uint8_t)0x10)
Program error
6.11.2.52 IS25LP064A_FSR_PGSUS
#define IS25LP064A_FSR_PGSUS ((uint8_t)0x04)
Program operation suspended
6.11.2.53 IS25LP064A_FSR_PRERR
#define IS25LP064A_FSR_PRERR ((uint8_t)0x02)
Protection error
6.11.2.54 IS25LP064A_FSR_READY
#define IS25LP064A_FSR_READY ((uint8_t)0x80)
Ready or command in progress
6.11.2.55 IS25LP064A_NVCR_DTRP
#define IS25LP064A_NVCR_DTRP ((uint16_t)0x0020)
Double transfer rate protocol
6.11.2.56 IS25LP064A_NVCR_DUAL
#define IS25LP064A_NVCR_DUAL ((uint16_t)0x0004)
Dual I/O protocol
6.11.2.57 IS25LP064A_NVCR_NB_DUMMY
#define IS25LP064A_NVCR_NB_DUMMY ((uint16_t)0xF000)
```

Number of dummy clock cycles

```
6.11.2.58 IS25LP064A_NVCR_NBADDR
#define IS25LP064A_NVCR_NBADDR ((uint16_t)0x0001)
3-bytes or 4-bytes addressing
6.11.2.59 IS25LP064A_NVCR_ODS
#define IS25LP064A_NVCR_ODS ((uint16_t)0x01C0)
Output driver strength
6.11.2.60 IS25LP064A_NVCR_QUAB
#define IS25LP064A_NVCR_QUAB ((uint16_t)0x0008)
Quad I/O protocol
6.11.2.61 IS25LP064A_NVCR_RH
#define IS25LP064A_NVCR_RH ((uint16_t)0x0010)
Reset/hold
6.11.2.62 IS25LP064A_NVCR_SEGMENT
#define IS25LP064A_NVCR_SEGMENT ((uint16_t)0x0002)
Upper or lower 128Mb segment selected by default
6.11.2.63 IS25LP064A_NVCR_XIP
#define IS25LP064A_NVCR_XIP ((uint16_t)0x0E00)
XIP mode at power-on reset
6.11.2.64 IS25LP064A_SR_QE
#define IS25LP064A_SR_QE ((uint8_t)0x40)
&
6.11.2.65 IS25LP064A_SR_SRWREN
#define IS25LP064A_SR_SRWREN ((uint8_t)0x80)
Status register write enable/disable
```

```
6.11.2.66 IS25LP064A_SR_WIP
#define IS25LP064A_SR_WIP ((uint8_t)0x01)
IS25LP08D Registers.
Write in progress
6.11.2.67 IS25LP064A_SR_WREN
#define IS25LP064A_SR_WREN ((uint8_t)0x02)
Write enable latch
6.11.2.68 IS25LP064A_VCR_NB_DUMMY
#define IS25LP064A_VCR_NB_DUMMY ((uint8_t)0xF0)
Number of dummy clock cycles
6.11.2.69 IS25LP064A_VCR_WRAP
#define IS25LP064A_VCR_WRAP ((uint8_t)0x03)
Wrap
6.11.2.70 IS25LP064A_VCR_XIP
#define IS25LP064A_VCR_XIP ((uint8_t)0x08)
XIP
6.11.2.71 IS25LP080D_EAR_HIGHEST_SE
#define IS25LP080D_EAR_HIGHEST_SE ((uint8_t)0x03)
Select the Highest 128Mb segment
6.11.2.72 IS25LP080D_EAR_LOWEST_SEG
#define IS25LP080D_EAR_LOWEST_SEG ((uint8_t)0x00)
```

Select the Lowest 128Mb segment (default)

```
6.11.2.73 IS25LP080D_EAR_SECOND_SEG
#define IS25LP080D_EAR_SECOND_SEG ((uint8_t)0x01)
Select the Second 128Mb segment
6.11.2.74 IS25LP080D_EAR_THIRD_SEG
#define IS25LP080D_EAR_THIRD_SEG ((uint8_t)0x02)
Select the Third 128Mb segment
6.11.2.75 IS25LP080D_EVCR_DTRP
#define IS25LP080D_EVCR_DTRP ((uint8_t)0x20)
Double transfer rate protocol
6.11.2.76 IS25LP080D_EVCR_DUAL
#define IS25LP080D_EVCR_DUAL ((uint8_t)0x40)
Dual I/O protocol
6.11.2.77 IS25LP080D_EVCR_ODS
#define IS25LP080D_EVCR_ODS ((uint8_t)0x07)
Output driver strength
6.11.2.78 IS25LP080D_EVCR_QUAD
#define IS25LP080D_EVCR_QUAD ((uint8_t)0x80)
Quad I/O protocol
6.11.2.79 IS25LP080D_EVCR_RH
#define IS25LP080D_EVCR_RH ((uint8_t)0x10)
Reset/hold
#define IS25LP080D_FSR_ERERR ((uint8_t)0x20)
```

Erase error

```
#define IS25LP080D_FSR_ERSUS ((uint8_t)0x40)
Erase operation suspended
#define IS25LP080D_FSR_NBADDR ((uint8_t)0x01)
3-bytes or 4-bytes addressing
6.11.2.83 IS25LP080D_FSR_PGERR
#define IS25LP080D_FSR_PGERR ((uint8_t)0x10)
Program error
6.11.2.84 IS25LP080D_FSR_PGSUS
#define IS25LP080D_FSR_PGSUS ((uint8_t)0x04)
Program operation suspended
#define IS25LP080D_FSR_PRERR ((uint8_t)0x02)
Protection error
6.11.2.86 IS25LP080D_FSR_READY
#define IS25LP080D_FSR_READY ((uint8_t)0x80)
Ready or command in progress
#define IS25LP080D_NVCR_DTRP ((uint16_t)0x0020)
Double transfer rate protocol
6.11.2.88 IS25LP080D_NVCR_DUAL
#define IS25LP080D_NVCR_DUAL ((uint16_t)0x0004)
```

Dual I/O protocol

```
6.11.2.89 IS25LP080D_NVCR_NB_DUMMY
#define IS25LP080D_NVCR_NB_DUMMY ((uint16_t)0xF000)
Number of dummy clock cycles
#define IS25LP080D_NVCR_NBADDR ((uint16_t)0x0001)
3-bytes or 4-bytes addressing
6.11.2.91 IS25LP080D_NVCR_ODS
#define IS25LP080D_NVCR_ODS ((uint16_t)0x01C0)
Output driver strength
6.11.2.92 IS25LP080D_NVCR_QUAB
#define IS25LP080D_NVCR_QUAB ((uint16_t)0x0008)
Quad I/O protocol
6.11.2.93 IS25LP080D_NVCR_RH
#define IS25LP080D_NVCR_RH ((uint16_t)0x0010)
Reset/hold
6.11.2.94 IS25LP080D_NVCR_SEGMENT
#define IS25LP080D_NVCR_SEGMENT ((uint16_t)0x0002)
Upper or lower 128Mb segment selected by default
#define IS25LP080D_NVCR_XIP ((uint16_t)0x0E00)
XIP mode at power-on reset
6.11.2.96 IS25LP080D_SR_QE
#define IS25LP080D_SR_QE ((uint8_t)0x40)
&
```

```
#define IS25LP080D_SR_SRWREN ((uint8_t)0x80)
Status register write enable/disable
6.11.2.98 IS25LP080D_SR_WIP
#define IS25LP080D_SR_WIP ((uint8_t)0x01)
IS25LP08D Registers.
Status Register Write in progress
6.11.2.99 IS25LP080D_SR_WREN
#define IS25LP080D_SR_WREN ((uint8_t)0x02)
Write enable latch
6.11.2.100 IS25LP080D_VCR_NB_DUMMY
#define IS25LP080D_VCR_NB_DUMMY ((uint8_t)0xF0)
Number of dummy clock cycles
#define IS25LP080D_VCR_WRAP ((uint8_t)0x03)
Wrap
#define IS25LP080D_VCR_XIP ((uint8_t)0x08)
XIP
6.11.2.103 MULTIPLE_IO_READ_ID_CMD [1/2]
#define MULTIPLE_IO_READ_ID_CMD 0xAF
```

&

```
6.11.2.104 MULTIPLE_IO_READ_ID_CMD [2/2]
#define MULTIPLE_IO_READ_ID_CMD 0xAF
&
6.11.2.105 PAGE_PROG_4_BYTE_ADDR_CMD [1/2]
#define PAGE_PROG_4_BYTE_ADDR_CMD 0x12
6.11.2.106 PAGE_PROG_4_BYTE_ADDR_CMD [2/2]
#define PAGE_PROG_4_BYTE_ADDR_CMD 0x12
6.11.2.107 PAGE_PROG_CMD [1/2]
#define PAGE_PROG_CMD 0x02
Program Operations
6.11.2.108 PAGE_PROG_CMD [2/2]
#define PAGE_PROG_CMD 0x02
Program Operations
6.11.2.109 PROG_ERASE_RESUME_CMD [1/2]
#define PROG_ERASE_RESUME_CMD 0x7A
&
6.11.2.110 PROG_ERASE_RESUME_CMD [2/2]
#define PROG_ERASE_RESUME_CMD 0x7A
&
6.11.2.111 PROG_ERASE_SUSPEND_CMD [1/2]
#define PROG_ERASE_SUSPEND_CMD 0x75
&
```

```
6.11.2.112 PROG_ERASE_SUSPEND_CMD [2/2]
#define PROG_ERASE_SUSPEND_CMD 0x75
&
6.11.2.113 PROG_OTP_ARRAY_CMD [1/2]
#define PROG_OTP_ARRAY_CMD 0x42
6.11.2.114 PROG_OTP_ARRAY_CMD [2/2]
#define PROG_OTP_ARRAY_CMD 0x42
6.11.2.115 QUAD_IN_FAST_PROG_4_BYTE_ADDR_CMD [1/2]
#define QUAD_IN_FAST_PROG_4_BYTE_ADDR_CMD 0x34
\textbf{6.11.2.116} \quad \textbf{QUAD\_IN\_FAST\_PROG\_4\_BYTE\_ADDR\_CMD} \quad [2/2]
\verb|#define QUAD_IN_FAST_PROG_4_BYTE_ADDR_CMD 0x34|
&
6.11.2.117 QUAD_IN_FAST_PROG_CMD [1/2]
#define QUAD_IN_FAST_PROG_CMD 0x32
&
6.11.2.118 QUAD_IN_FAST_PROG_CMD [2/2]
#define QUAD_IN_FAST_PROG_CMD 0x32
&
6.11.2.119 QUAD_INOUT_FAST_READ_4_BYTE_ADDR_CMD [1/2]
#define QUAD_INOUT_FAST_READ_4_BYTE_ADDR_CMD 0xEC
&
```

```
6.11.2.120 QUAD_INOUT_FAST_READ_4_BYTE_ADDR_CMD [2/2]
#define QUAD_INOUT_FAST_READ_4_BYTE_ADDR_CMD 0xEC
&
6.11.2.121 QUAD_INOUT_FAST_READ_CMD [1/2]
#define QUAD_INOUT_FAST_READ_CMD 0xEB
6.11.2.122 QUAD_INOUT_FAST_READ_CMD [2/2]
#define QUAD_INOUT_FAST_READ_CMD 0xEB
&
6.11.2.123 QUAD_INOUT_FAST_READ_DTR_CMD [1/2]
#define QUAD_INOUT_FAST_READ_DTR_CMD 0xED
6.11.2.124 QUAD_INOUT_FAST_READ_DTR_CMD [2/2]
#define QUAD_INOUT_FAST_READ_DTR_CMD 0xED
&
6.11.2.125 QUAD OUT FAST READ 4 BYTE ADDR CMD [1/2]
#define QUAD_OUT_FAST_READ_4_BYTE_ADDR_CMD 0x6C
&
6.11.2.126 QUAD_OUT_FAST_READ_4_BYTE_ADDR_CMD [2/2]
#define QUAD_OUT_FAST_READ_4_BYTE_ADDR_CMD 0x6C
&
6.11.2.127 QUAD_OUT_FAST_READ_CMD [1/2]
#define QUAD_OUT_FAST_READ_CMD 0x6B
&
```

```
6.11.2.128 QUAD_OUT_FAST_READ_CMD [2/2]
#define QUAD_OUT_FAST_READ_CMD 0x6B
6.11.2.129 QUAD_OUT_FAST_READ_DTR_CMD [1/2]
#define QUAD_OUT_FAST_READ_DTR_CMD 0x0D
6.11.2.130 QUAD_OUT_FAST_READ_DTR_CMD [2/2]
#define QUAD_OUT_FAST_READ_DTR_CMD 0x0D
6.11.2.131 READ_4_BYTE_ADDR_CMD [1/2]
#define READ_4_BYTE_ADDR_CMD 0x13
6.11.2.132 READ_4_BYTE_ADDR_CMD [2/2]
#define READ_4_BYTE_ADDR_CMD 0x13
&
6.11.2.133 READ_CMD [1/2]
#define READ_CMD 0x03
Read Operations
6.11.2.134 READ_CMD [2/2]
#define READ_CMD 0x03
Read Operations
6.11.2.135 READ_ENHANCED_VOL_CFG_REG_CMD [1/2]
#define READ_ENHANCED_VOL_CFG_REG_CMD 0x81
```

&

```
6.11.2.136 READ_ENHANCED_VOL_CFG_REG_CMD [2/2]
#define READ_ENHANCED_VOL_CFG_REG_CMD 0x81
&
6.11.2.137 READ_EXT_ADDR_REG_CMD [1/2]
#define READ_EXT_ADDR_REG_CMD 0xC8
6.11.2.138 READ_EXT_ADDR_REG_CMD [2/2]
#define READ_EXT_ADDR_REG_CMD 0xC8
6.11.2.139 READ_FLAG_STATUS_REG_CMD [1/2]
#define READ_FLAG_STATUS_REG_CMD 0x70
6.11.2.140 READ_FLAG_STATUS_REG_CMD [2/2]
#define READ_FLAG_STATUS_REG_CMD 0x70
&
6.11.2.141 READ_ID_CMD [1/2]
#define READ_ID_CMD 0x9E
Identification Operations
6.11.2.142 READ_ID_CMD [2/2]
#define READ_ID_CMD 0x9E
Identification Operations
6.11.2.143 READ_ID_CMD2 [1/2]
#define READ_ID_CMD2 0x9F
```

```
6.11.2.144 READ_ID_CMD2 [2/2]
#define READ_ID_CMD2 0x9F
6.11.2.145 READ_LOCK_REG_CMD [1/2]
#define READ_LOCK_REG_CMD 0xE8
6.11.2.146 READ_LOCK_REG_CMD [2/2]
#define READ_LOCK_REG_CMD 0xE8
6.11.2.147 READ_NONVOL_CFG_REG_CMD [1/2]
#define READ_NONVOL_CFG_REG_CMD 0xB5
6.11.2.148 READ_NONVOL_CFG_REG_CMD [2/2]
#define READ_NONVOL_CFG_REG_CMD 0xB5
&
6.11.2.149 READ_OTP_ARRAY_CMD [1/2]
#define READ_OTP_ARRAY_CMD 0x4B
One-Time Programmable Operations
6.11.2.150 READ_OTP_ARRAY_CMD [2/2]
#define READ_OTP_ARRAY_CMD 0x4B
One-Time Programmable Operations
6.11.2.151 READ_READ_PARAM_REG_CMD [1/2]
#define READ_READ_PARAM_REG_CMD 0x61
```

&

```
6.11.2.152 READ_READ_PARAM_REG_CMD [2/2]
#define READ_READ_PARAM_REG_CMD 0x61
&
6.11.2.153 READ_SERIAL_FLASH_DISCO_PARAM_CMD [1/2]
#define READ_SERIAL_FLASH_DISCO_PARAM_CMD 0x5A
6.11.2.154 READ_SERIAL_FLASH_DISCO_PARAM_CMD [2/2]
#define READ_SERIAL_FLASH_DISCO_PARAM_CMD 0x5A
6.11.2.155 READ_STATUS_REG_CMD [1/2]
#define READ_STATUS_REG_CMD 0x05
Register Operations
6.11.2.156 READ_STATUS_REG_CMD [2/2]
#define READ_STATUS_REG_CMD 0x05
Register Operations
6.11.2.157 RESET_ENABLE_CMD [1/2]
#define RESET_ENABLE_CMD 0x66
Reset Operations
6.11.2.158 RESET_ENABLE_CMD [2/2]
#define RESET_ENABLE_CMD 0x66
Reset Operations
6.11.2.159 RESET_MEMORY_CMD [1/2]
#define RESET_MEMORY_CMD 0x99
&
```

```
6.11.2.160 RESET_MEMORY_CMD [2/2]
#define RESET_MEMORY_CMD 0x99
&
6.11.2.161 SECTOR_ERASE_4_BYTE_ADDR_CMD [1/2]
#define SECTOR_ERASE_4_BYTE_ADDR_CMD 0xDC
6.11.2.162 SECTOR_ERASE_4_BYTE_ADDR_CMD [2/2]
#define SECTOR_ERASE_4_BYTE_ADDR_CMD 0xDC
6.11.2.163 SECTOR_ERASE_CMD [1/2]
#define SECTOR_ERASE_CMD 0xD8
6.11.2.164 SECTOR_ERASE_CMD [2/2]
#define SECTOR_ERASE_CMD 0xD8
&
6.11.2.165 SUBSECTOR ERASE 4 BYTE ADDR CMD [1/2]
#define SUBSECTOR_ERASE_4_BYTE_ADDR_CMD 0x21
&
6.11.2.166 SUBSECTOR_ERASE_4_BYTE_ADDR_CMD [2/2]
#define SUBSECTOR_ERASE_4_BYTE_ADDR_CMD 0x21
&
6.11.2.167 SUBSECTOR_ERASE_CMD [1/2]
#define SUBSECTOR_ERASE_CMD 0xd7
```

**Erase Operations** 

```
6.11.2.168 SUBSECTOR_ERASE_CMD [2/2]
#define SUBSECTOR_ERASE_CMD 0xd7
Erase Operations
6.11.2.169 SUBSECTOR_ERASE_QPI_CMD [1/2]
#define SUBSECTOR_ERASE_QPI_CMD 0x20
6.11.2.170 SUBSECTOR_ERASE_QPI_CMD [2/2]
#define SUBSECTOR_ERASE_QPI_CMD 0x20
6.11.2.171 WRITE_DISABLE_CMD [1/2]
#define WRITE_DISABLE_CMD 0x04
6.11.2.172 WRITE_DISABLE_CMD [2/2]
\#define\ WRITE\_DISABLE\_CMD\ 0x04
&
6.11.2.173 WRITE_ENABLE_CMD [1/2]
#define WRITE_ENABLE_CMD 0x06
Write Operations
6.11.2.174 WRITE_ENABLE_CMD [2/2]
#define WRITE_ENABLE_CMD 0x06
Write Operations
6.11.2.175 WRITE_ENHANCED_VOL_CFG_REG_CMD [1/2]
#define WRITE_ENHANCED_VOL_CFG_REG_CMD 0x85
&
```

```
6.11.2.176 WRITE_ENHANCED_VOL_CFG_REG_CMD [2/2]
#define WRITE_ENHANCED_VOL_CFG_REG_CMD 0x85
&
6.11.2.177 WRITE_EXT_ADDR_REG_CMD [1/2]
#define WRITE_EXT_ADDR_REG_CMD 0xC5
6.11.2.178 WRITE_EXT_ADDR_REG_CMD [2/2]
#define WRITE_EXT_ADDR_REG_CMD 0xC5
6.11.2.179 WRITE_LOCK_REG_CMD [1/2]
#define WRITE_LOCK_REG_CMD 0xE5
6.11.2.180 WRITE_LOCK_REG_CMD [2/2]
#define WRITE_LOCK_REG_CMD 0xE5
&
6.11.2.181 WRITE_NONVOL_CFG_REG_CMD [1/2]
#define WRITE_NONVOL_CFG_REG_CMD 0xB1
&
6.11.2.182 WRITE_NONVOL_CFG_REG_CMD [2/2]
#define WRITE_NONVOL_CFG_REG_CMD 0xB1
&
6.11.2.183 WRITE_READ_PARAM_REG_CMD [1/2]
#define WRITE_READ_PARAM_REG_CMD 0xC0
```

&

# 6.11.2.184 WRITE\_READ\_PARAM\_REG\_CMD [2/2]

#define WRITE\_READ\_PARAM\_REG\_CMD 0xC0

8

# **6.11.2.185** WRITE\_STATUS\_REG\_CMD [1/2]

#define WRITE\_STATUS\_REG\_CMD 0x01

&

# **6.11.2.186** WRITE\_STATUS\_REG\_CMD [2/2]

#define WRITE\_STATUS\_REG\_CMD 0x01

&

## **6.12 CODEC**

Audio codecs.

#### **Classes**

• struct codec\_frame\_t

## **Typedefs**

typedef void(\* sa\_audio\_callback) (codec\_frame\_t \*, codec\_frame\_t \*, size\_t)

#### **Functions**

- void codec\_ak4556\_init (dsy\_gpio\_pin reset\_pin)
- void codec\_pcm3060\_init (dsy\_i2c\_handle \*hi2c)
- uint8\_t codec\_wm8731\_init (dsy\_i2c\_handle \*hi2c, uint8\_t mcu\_is\_master, int32\_t sample\_rate, uint8\_
   t bitdepth)
- uint8\_t codec\_wm8731\_enter\_bypass (dsy\_i2c\_handle \*hi2c)
- uint8\_t codec\_wm8731\_exit\_bypass (dsy\_i2c\_handle \*hi2c)

# 6.12.1 Detailed Description

Audio codecs.

WM8731 Codec framework.

Driver for the WM8731 Codec.

Driver for the PCM3060 Codec.

Driver for the AK4556 Stereo Codec.

# 6.12.2 Typedef Documentation

```
6.12.2.1 sa_audio_callback
```

```
typedef void(* sa_audio_callback) (codec_frame_t *, codec_frame_t *, size_t)
&
```

#### 6.12.3 Function Documentation

```
6.12.3.1 codec_ak4556_init()
```

# Resets the AK4556

6.12 CODEC 97

#### **Parameters**

reset\_pin | should be a dsy\_gpio\_pin that is connected to the RST pin of the AK4556

# 6.12.3.2 codec\_pcm3060\_init()

## Resets the PCM060

#### **Parameters**

\*hi2c | array of pins handling i2c?

## 6.12.3.3 codec\_wm8731\_enter\_bypass()

## Put codec into bypass mode

#### **Parameters**

\*hi2c pins handling i2c

## 6.12.3.4 codec\_wm8731\_exit\_bypass()

## Take codec out of bypass mode

#### **Parameters**

\*hi2c pins handling i2c

# 6.12.3.5 codec\_wm8731\_init()

## Resets the WM8731

# **Parameters**

*hi2c	array of pins handling i2c?
mcu_is_master	&
sample_rate	Sample rate to run codec at
bitdepth	Bit depth to run codec at

6.13 LED 99

## 6.13 LED

LED driver devices.

#### **Classes**

• struct color

#### **Enumerations**

```
    enum {
        LED_COLOR_RED, LED_COLOR_GREEN, LED_COLOR_BLUE, LED_COLOR_WHITE,
        LED_COLOR_PURPLE, LED_COLOR_CYAN, LED_COLOR_GOLD, LED_COLOR_OFF,
        LED_COLOR_LAST }
```

# **Functions**

- void dsy\_led\_driver\_init (dsy\_i2c\_handle \*dsy\_i2c, uint8\_t \*addr, uint8\_t addr\_cnt)
- void dsy\_led\_driver\_update ()
- void dsy\_led\_driver\_set\_led (uint8\_t idx, float bright)
- color \* dsy\_led\_driver\_color\_by\_name (uint8\_t name)

# 6.13.1 Detailed Description

LED driver devices.

Device driver for PCA9685 16-channel 12-bit PWM generator.

# 6.13.2 Enumeration Type Documentation

#### 6.13.2.1 anonymous enum

anonymous enum

## Different Led colors

## Enumerator

LED_COLOR_RED	&
LED_COLOR_GREEN	&
LED_COLOR_BLUE	&
LED_COLOR_WHITE	&
LED_COLOR_PURPLE	&
LED_COLOR_CYAN	&
LED_COLOR_GOLD	&
Generateld EppoologelnOR_OFF	&
LED_COLOR_LAST	&

# 6.13.3 Function Documentation

# 6.13.3.1 dsy\_led\_driver\_color\_by\_name()

Passing in one of the preset colors will return a pointer to a color struct

#### **Parameters**

name   Preset color
---------------------

# 6.13.3.2 dsy\_led\_driver\_init()

Initializes the LED Driver(s) on the specified I2C Bus

#### **Parameters**

*dsy_i2c	should be any dsy_i2c_handle with pins and speed configured.
addr	is either a pointer to 1 device address, or an array of addresses for multiple devices
addr_cnt	is the number of addresses passed in (use '1' for a single device)

# 6.13.3.3 dsy\_led\_driver\_set\_led()

sets the LED at the index to the specified brightness (0-1) Index is sequential so device 0 will have idx 0-15, while device 1 will have idx 16-31, etc.

## **Parameters**

idx	Index
bright	Brightness

6.13 LED 101

# 6.13.3.4 dsy\_led\_driver\_update()

```
void dsy_led_driver_update ( )
```

Updates the LED Driver with the values set using the set function Currently only updates one driver at a time due to the time it takes to update all of the devices. This can likely be set up to use DMA so that the function doesn't block for so long.

#### 6.14 SDRAM

SDRAM devices.

## Classes

• struct dsy\_sdram\_handle

#### **Macros**

- #define DSY\_SDRAM\_DATA \_\_attribute\_\_((section(".sdram\_data")))
- #define DSY\_SDRAM\_BSS \_\_attribute\_\_((section(".sdram\_bss")))

#### **Enumerations**

- enum { DSY\_SDRAM\_OK, DSY\_SDRAM\_ERR }
- enum dsy\_sdram\_state { DSY\_SDRAM\_STATE\_ENABLE, DSY\_SDRAM\_STATE\_DISABLE, DSY\_SDR
   AM STATE LAST }
- enum dsy sdram pin { DSY SDRAM PIN SDNWE, DSY SDRAM PIN LAST }

## **Functions**

uint8\_t dsy\_sdram\_init (dsy\_sdram\_handle \*dsy\_hsdram)

# 6.14.1 Detailed Description

SDRAM devices.

## 6.14.2 Macro Definition Documentation

```
6.14.2.1 DSY_SDRAM_BSS
```

```
#define DSY_SDRAM_BSS __attribute__((section(".sdram_bss")))
```

Variables placed here will not be initialized.

Usage

E.g. int DSY\_SDRAM\_BSS uninitialized\_var;

```
6.14.2.2 DSY_SDRAM_DATA
```

```
#define DSY_SDRAM_DATA __attribute__((section(".sdram_data")))
```

## Usage:

E.g. int DSY\_SDRAM\_DATA initialized\_var = 1;

# 6.14.3 Enumeration Type Documentation

## 6.14.3.1 anonymous enum

anonymous enum

6.14 SDRAM 103

## Enumerator

DSY_SDRAM_OK	
DSY_SDRAM_ERR	&

## 6.14.3.2 dsy\_sdram\_pin

```
enum dsy_sdram_pin
```

This is PH5 on Daisy

#### Enumerator

DSY_SDRAM_PIN_SDNWE	
DSY_SDRAM_PIN_LAST	

# 6.14.3.3 dsy\_sdram\_state

```
enum dsy_sdram_state
```

Determines whether chip is initialized, and activated.

#### Enumerator

DSY_SDRAM_STATE_ENABLE	
DSY_SDRAM_STATE_DISABLE	
DSY_SDRAM_STATE_LAST	&

## 6.14.4 Function Documentation

# 6.14.4.1 dsy\_sdram\_init()

Initializes the SDRAM peripheral

#### 6.15 DAISY

Daisy devices. Pod, seed, etc.

#### Classes

- struct dsy\_gpio\_pin
- · struct daisy::daisy\_field
- · class daisy::DaisyPatch

Class that handles initializing all of the hardware specific to the Daisy Patch Board. Helper funtions are also in place to provide easy access to built-in controls and peripherals.

· class daisy::DaisyPetal

Helpers and hardware definitions for daisy petal.

class daisy::DaisyPod

Class that handles initializing all of the hardware specific to the Daisy Patch Board.

Helper funtions are also in place to provide easy access to built-in controls and peripherals.

class daisy::DaisySeed

This is the higher-level interface for the Daisy board.
All basic peripheral configuration/initialization is setup here.

#### **Macros**

- #define DMA\_BUFFER\_MEM\_SECTION \_\_attribute\_\_((section(".sram1\_bss")))
- #define DTCM MEM SECTION attribute ((section(".dtcmram bss")))

#### **Enumerations**

```
enum dsy_gpio_port {
 DSY GPIOA, DSY GPIOB, DSY GPIOC, DSY GPIOD,
 DSY GPIOE, DSY GPIOF, DSY GPIOG, DSY GPIOH,
 DSY_GPIOI, DSY_GPIOJ, DSY_GPIOK, DSY_GPIOX,
 DSY GPIO LAST }
enum { daisy::SW 2, daisy::SW 1, daisy::SW 3, daisy::SW LAST }
 daisy::KNOB 1, daisy::KNOB 3, daisy::KNOB 5, daisy::KNOB 2,
 daisy::KNOB_4, daisy::KNOB_6, daisy::KNOB_7, daisy::KNOB_8,
 daisy::KNOB_LAST }
enum {
 CV_1, daisy::CV_2, daisy::CV_3, daisy::CV_4,
 daisy::CV LAST }
enum {
 daisy::LED_KEY_A8, daisy::LED_KEY_A7, daisy::LED_KEY_A6, daisy::LED_KEY_A5,
 daisy::LED_KEY_A4, daisy::LED_KEY_A3, daisy::LED_KEY_A2, daisy::LED_KEY_A1,
 daisy::LED KEY B1, daisy::LED KEY B2, daisy::LED KEY B3, daisy::LED KEY B4,
 daisy::LED_KEY_B5, daisy::LED_KEY_B6, daisy::LED_KEY_B7, daisy::LED_KEY_B8,
 daisy::LED_KNOB_1, daisy::LED_KNOB_2, daisy::LED_KNOB_3, daisy::LED_KNOB_4,
 daisy::LED KNOB 5, daisy::LED KNOB 6, daisy::LED KNOB 7, daisy::LED KNOB 8,
 daisy::LED SW 1, daisy::LED SW 2, daisy::LED LAST }
enum daisy::DaisyPatch::Ctrl {
 CTRL_1, CTRL_2, CTRL_3, CTRL_4,
 CTRL LAST }

    enum daisy::DaisyPatch::GateInput { GATE_IN_1, GATE_IN_2, daisy::DaisyPatch::GATE_IN_LAST }
```

**6.15 DAISY** 105

```
enum daisy::DaisyPetal::Sw {
 daisy::DaisyPetal::SW 1, daisy::DaisyPetal::SW 2, daisy::DaisyPetal::SW 3, daisy::DaisyPetal::SW 4,
 daisy::DaisyPetal::SW_5, daisy::DaisyPetal::SW_6, daisy::DaisyPetal::SW_7, daisy::DaisyPetal::SW_LAST }
enum daisy::DaisyPetal::Knob {
 daisy::DaisyPetal::KNOB_1, daisy::DaisyPetal::KNOB_2, daisy::DaisyPetal::KNOB_3, daisy::DaisyPetal::K⊷
 NOB_4,
 daisy::DaisyPetal::KNOB 5, daisy::DaisyPetal::KNOB 6, daisy::DaisyPetal::KNOB LAST }
enum daisy::DaisyPetal::RingLed {
 daisy::DaisyPetal::RING_LED_1, daisy::DaisyPetal::RING_LED_2, daisy::DaisyPetal::RING_LED_3, daisy↔
 ::DaisyPetal::RING LED 4,
 daisy::DaisyPetal::RING_LED_5, daisy::DaisyPetal::RING_LED_6, daisy::DaisyPetal::RING_LED_7, daisy↔
 ::DaisyPetal::RING_LED_8,
 daisy::DaisyPetal::RING_LED_LAST }

    enum daisy::DaisyPetal::FootswitchLed {

 daisy::DaisyPetal::FOOTSWITCH_LED_1, daisy::DaisyPetal::FOOTSWITCH_LED_2, daisy::DaisyPetal::
 FOOTSWITCH LED 3, daisy::DaisyPetal::FOOTSWITCH LED 4,
 daisy::DaisyPetal::FOOTSWITCH LED LAST }

    enum daisy::DaisyPod::Sw { BUTTON 1, daisy::DaisyPod::BUTTON 2, daisy::DaisyPod::BUTTON LAST }

    enum daisy::DaisyPod::Knob { KNOB 1, daisy::DaisyPod::KNOB 2, daisy::DaisyPod::KNOB LAST }
```

#### **Functions**

```
• FORCE INLINE float s162f (int16 t x)

    FORCE INLINE int16 t f2s16 (float x)

    FORCE_INLINE float s242f (int32_t x)

    FORCE INLINE int32 t f2s24 (float x)

    FORCE INLINE float cube (float x)

    FORCE_INLINE dsy_gpio_pin dsy_pin (dsy_gpio_port port, uint8_t pin)

• FORCE_INLINE uint8_t dsy_pin_cmp (dsy_gpio_pin *a, dsy_gpio_pin *b)

    FORCE_INLINE void daisy::daisy_field_init (daisy_field *p)

    daisy::DaisyPatch::DaisyPatch ()

    daisy::DaisyPatch::~DaisyPatch ()

    void daisy::DaisyPatch::Init ()

    void daisy::DaisyPatch::DelayMs (size_t del)

    void daisy::DaisyPatch::SetAudioBlockSize (size t size)

    void daisy::DaisyPatch::StartAudio (dsy audio mc callback cb)

    void daisy::DaisyPatch::ChangeAudioCallback (dsy_audio_callback cb)

    void daisy::DaisyPatch::StartAdc ()

    float daisy::DaisyPatch::AudioSampleRate ()

    size t daisy::DaisyPatch::AudioBlockSize ()

    float daisy::DaisyPatch::AudioCallbackRate ()

    void daisy::DaisyPatch::UpdateAnalogControls ()

    float daisy::DaisyPatch::GetCtrlValue (Ctrl k)

    void daisy::DaisyPatch::DebounceControls ()

    void daisy::DaisyPatch::DisplayControls (bool invert=true)

    daisy::DaisyPetal::DaisyPetal ()

    daisy::DaisyPetal::~DaisyPetal ()

    void daisy::DaisyPetal::Init ()

    void daisy::DaisyPetal::DelayMs (size_t del)

    void daisy::DaisyPetal::SetAudioBlockSize (size_t size)

    void daisy::DaisyPetal::StartAudio (dsy audio callback cb)
```

void daisy::DaisyPetal::ChangeAudioCallback (dsy\_audio\_callback cb)

void daisy::DaisyPetal::StartAdc ()

float daisy::DaisyPetal::AudioSampleRate ()

- size t daisy::DaisyPetal::AudioBlockSize ()
- float daisy::DaisyPetal::AudioCallbackRate ()
- · void daisy::DaisyPetal::UpdateAnalogControls ()
- float daisy::DaisyPetal::GetKnobValue (Knob k)
- float daisy::DaisyPetal::GetExpression ()
- void daisy::DaisyPetal::DebounceControls ()
- void daisy::DaisyPetal::ClearLeds ()
- · void daisy::DaisyPetal::UpdateLeds ()
- void daisy::DaisyPetal::SetRingLed (RingLed idx, float r, float g, float b)
- · void daisy::DaisyPetal::SetFootswitchLed (FootswitchLed idx, float bright)
- void daisy::DaisyPod::Init ()
- void daisy::DaisyPod::DelayMs (size t del)
- void daisy::DaisyPod::SetAudioBlockSize (size t size)
- void daisy::DaisyPod::StartAudio (dsy audio callback cb)
- void daisy::DaisyPod::ChangeAudioCallback (dsy\_audio\_callback cb)
- void daisy::DaisyPod::StartAdc ()
- float daisy::DaisyPod::AudioSampleRate ()
- size t daisy::DaisyPod::AudioBlockSize ()
- float daisy::DaisyPod::AudioCallbackRate ()
- void daisy::DaisyPod::UpdateAnalogControls ()
- float daisy::DaisyPod::GetKnobValue (Knob k)
- void daisy::DaisyPod::DebounceControls ()
- void daisy::DaisyPod::ClearLeds ()
- void daisy::DaisyPod::UpdateLeds ()
- void daisy::DaisySeed::Configure ()
- void daisy::DaisySeed::Init ()
- dsy gpio pin daisy::DaisySeed::GetPin (uint8 t pin idx)
- void daisy::DaisySeed::StartAudio (dsy audio callback cb)
- void daisy::DaisySeed::SetLed (bool state)
- void daisy::DaisySeed::SetTestPoint (bool state)
- float daisy::DaisySeed::AudioSampleRate ()
- void daisy::DaisySeed::SetAudioBlockSize (size t blocksize)

#### **Variables**

- · daisy::DaisySeed daisy::daisy field::seed
- daisy::Switch daisy::daisy field::switches [SW LAST]
- dsy\_gpio daisy::daisy\_field::gate\_in
- · dsy gpio daisy::daisy field::gate out
- dsy sr 4021 handle daisy::daisy field::keyboard sr
- AnalogControl daisy::daisy\_field::knobs [KNOB\_LAST]
- AnalogControl daisy::daisy\_field::cvs [CV\_LAST]
- DaisySeed daisy::DaisyPatch::seed
- · Encoder daisy::DaisyPatch::encoder
- AnalogControl daisy::DaisyPatch::controls [CTRL\_LAST]
- GateIn daisy::DaisyPatch::gate\_input [GATE\_IN\_LAST]
- · MidiHandler daisy::DaisyPatch::midi
- OledDisplay daisy::DaisyPatch::display
- · dsy\_gpio daisy::DaisyPatch::gate\_output
- · DaisySeed daisy::DaisyPetal::seed
- · Encoder daisy::DaisyPetal::encoder
- AnalogControl daisy::DaisyPetal::knob [KNOB\_LAST]
- · AnalogControl daisy::DaisyPetal::expression
- Switch daisy::DaisyPetal::switches [SW\_LAST]

6.15 DAISY 107

- RgbLed daisy::DaisyPetal::ring\_led [8]
- Led daisy::DaisyPetal::footswitch\_led [4]
- · DaisySeed daisy::DaisyPod::seed
- · Encoder daisy::DaisyPod::encoder
- · AnalogControl daisy::DaisyPod::knob1
- AnalogControl daisy::DaisyPod::knob2
- AnalogControl \* daisy::DaisyPod::knobs [KNOB LAST]
- · Switch daisy::DaisyPod::button1
- Switch daisy::DaisyPod::button2
- Switch \* daisy::DaisyPod::buttons [BUTTON LAST]
- RgbLed daisy::DaisyPod::led1
- RgbLed daisy::DaisyPod::led2
- dsy\_sdram\_handle daisy::DaisySeed::sdram\_handle
- dsy\_qspi\_handle daisy::DaisySeed::qspi\_handle
- dsy\_audio\_handle daisy::DaisySeed::audio\_handle
- dsy\_sai\_handle daisy::DaisySeed::sai\_handle
- dsy\_i2c\_handle daisy::DaisySeed::i2c1\_handle
- dsy\_i2c\_handle daisy::DaisySeed::i2c2\_handle
- · AdcHandle daisy::DaisySeed::adc
- dsy\_dac\_handle daisy::DaisySeed::dac\_handle
- UsbHandle daisy::DaisySeed::usb\_handle

## 6.15.1 Detailed Description

Daisy devices. Pod, seed, etc.

#### 6.15.2 Macro Definition Documentation

# 6.15.2.1 DMA\_BUFFER\_MEM\_SECTION

```
#define DMA_BUFFER_MEM_SECTION __attribute__((section(".sram1_bss")))
```

Macro for area of memory that is configured as cacheless This should be used primarily for DMA buffers, and the like.

## 6.15.2.2 DTCM\_MEM\_SECTION

```
#define DTCM_MEM_SECTION __attribute__((section(".dtcmram_bss")))
```

THE DTCM RAM section is also non-cached. However, is not suitable for DMA transfers. Performance is on par with internal SRAM w/ cache enabled.

## 6.15.3 Enumeration Type Documentation

#### 6.15.3.1 anonymous enum

anonymous enum

enums for controls, etc.

# Enumerator

SW_2	tactile switch
SW_1	tactile switch
SW_3	toggle
SW_LAST	&

# 6.15.3.2 anonymous enum

anonymous enum

All knobs connect to ADC1\_INP10 via CD4051 mux

## Enumerator

KNOB_1	&
KNOB_3	&
KNOB_5	&
KNOB_2	&
KNOB_4	&
KNOB_6	&
KNOB_7	&
KNOB_8	&
KNOB_LAST	&

# 6.15.3.3 anonymous enum

anonymous enum

## Enumerator

CV_2	Connected to ADC1_INP17
CV_3	Connected to ADC1_INP15
CV_4	Connected to ADC1_INP4
CV_LAST	Connected to ADC1_INP11 &

# 6.15.3.4 anonymous enum

anonymous enum

### Enumerator

LED_KEY_A8	&
LED_KEY_A7	&
LED_KEY_A6	&
LED_KEY_A5	&
LED_KEY_A4	&
LED_KEY_A3	&
LED_KEY_A2	&
LED_KEY_A1	&
LED_KEY_B1	&
LED_KEY_B2	&
LED_KEY_B3	&
LED_KEY_B4	&
LED_KEY_B5	&
LED_KEY_B6 LED_KEY_B7	&
LED_KEY_B7	&
LED_KEY_B8	&
LED_KNOB←	&
_1	
LED_KNOB←	&
_2	
LED_KNOB↔	&
_3	
LED_KNOB↔	&
_4	
LED_KNOB⊷	&
5	_
LED_KNOB↔	&
_6	
LED_KNOB↔	&
_7 LED KNOB↔	&
LED_KNOB⇔	ά
LED SW 1	&
LED_SW_1	- &
LED_SW_2	& &
LLD_LAST	α

6.15.3.5 Ctrl

enum daisy::DaisyPatch::Ctrl

Enum of Ctrls to represent the four CV/Knob combos on the Patch

6.15.3.6 dsy\_gpio\_port

enum dsy\_gpio\_port

Enums and a simple struct for defining a hardware pin on the MCU These correlate with the stm32 datasheet, and are used to configure the hardware.

### Enumerator

DSY_GPIOA	&
DSY_GPIOB	&
DSY_GPIOC	&
DSY_GPIOD	&
DSY_GPIOE	&
DSY_GPIOF	&
DSY_GPIOG	&
DSY_GPIOH	&
DSY_GPIOI	&
DSY_GPIOJ	&
DSY_GPIOK	&
DSY_GPIO_LAST	This is a non-existant port for unsupported bits of hardware.

### 6.15.3.7 FootswitchLed

enum daisy::DaisyPetal::FootswitchLed

footswitch leds

### Enumerator

FOOTSWITCH_LED_1	&
FOOTSWITCH_LED_2	&
FOOTSWITCH_LED_3	&
FOOTSWITCH_LED_4	&
FOOTSWITCH_LED_LAST	&

### 6.15.3.8 GateInput

enum daisy::DaisyPatch::GateInput

Daisy patch gate inputs

Enumerator

GATE\_IN\_LAST <

**6.15.3.9** Knob [1/2]

enum daisy::DaisyPod::Knob

### Knobs

### Enumerator

KNOB_2	&
KNOB_LAST	&

**6.15.3.10** Knob [2/2]

enum daisy::DaisyPetal::Knob

### Knobs

### Enumerator

KNOB_1	&
KNOB_2	&
KNOB_3	&
KNOB_4	&
KNOB_5	&
KNOB_6	&
KNOB_LAST	&

6.15.3.11 RingLed

enum daisy::DaisyPetal::RingLed

Leds in ringled

## Enumerator

RING_LED_1	&
RING_LED_2	&
RING_LED_3	&
RING_LED_4	&
RING_LED_5	&
RING_LED_6	&
RING_LED_7	&
RING_LED_8	&
RING_LED_LAST	&

```
6.15.3.12 Sw [1/2]
```

enum daisy::DaisyPetal::Sw

#### Switches

### Enumerator

SW_1	Footswitch
SW_2	Footswitch
SW_3	Footswitch
SW_4	Footswitch
SW_5	Toggle
SW_6	Toggle
SW_7	Toggle
SW_LAST	Last enum item

### **6.15.3.13** Sw [2/2]

enum daisy::DaisyPod::Sw

### Switches

#### Enumerator

BUTTON_2	&
BUTTON LAST	&

## 6.15.4 Function Documentation

```
6.15.4.1 AudioBlockSize() [1/3]
```

size\_t daisy::DaisyPod::AudioBlockSize ( )

#### Get block size

### **6.15.4.2** AudioBlockSize() [2/3]

size\_t daisy::DaisyPatch::AudioBlockSize ( )

### Get block size

```
6.15.4.3 AudioBlockSize() [3/3]
size_t daisy::DaisyPetal::AudioBlockSize ( )
Get audio block size
6.15.4.4 AudioCallbackRate() [1/3]
float daisy::DaisyPod::AudioCallbackRate ( )
Get callback rate
6.15.4.5 AudioCallbackRate() [2/3]
float daisy::DaisyPatch::AudioCallbackRate ( )
Get callback rate
6.15.4.6 AudioCallbackRate() [3/3]
float daisy::DaisyPetal::AudioCallbackRate ( )
Get callback rate
6.15.4.7 AudioSampleRate() [1/4]
float daisy::DaisyPod::AudioSampleRate ( )
Get sample rate
6.15.4.8 AudioSampleRate() [2/4]
float daisy::DaisySeed::AudioSampleRate ( )
Returns the audio sample rate in Hz as a floating point number.
6.15.4.9 AudioSampleRate() [3/4]
float daisy::DaisyPatch::AudioSampleRate ( )
Get sample rate
6.15.4.10 AudioSampleRate() [4/4]
float daisy::DaisyPetal::AudioSampleRate ( )
Device audio sample rate.
6.15.4.11 ChangeAudioCallback() [1/3]
void daisy::DaisyPod::ChangeAudioCallback (
              dsy_audio_callback cb )
Switch callback functions
```

#### **Parameters**

```
cb New callback function.
```

```
6.15.4.12 ChangeAudioCallback() [2/3]
```

Change to a different callback function.

#### **Parameters**

cb New callback function.

```
6.15.4.13 ChangeAudioCallback() [3/3]
```

Change callback function

#### **Parameters**

```
cb New callback function.
```

```
6.15.4.14 ClearLeds() [1/2]
```

```
void daisy::DaisyPod::ClearLeds ( )
```

### Reset Leds

```
6.15.4.15 ClearLeds() [2/2]
```

```
void daisy::DaisyPetal::ClearLeds ( )
```

### Turn all leds off

### 6.15.4.16 Configure()

```
void daisy::DaisySeed::Configure ( )
```

Configures the settings for all internal peripherals, but does not initialize them. This allows for modification of the configuration handles prior to initialization.&

## 6.15.4.17 cube()

```
FORCE_INLINE float cube ( float x )
```

Computes cube.

#### **Parameters**

```
x Number to be cubed
```

#### Returns

x ^ 3

### 6.15.4.18 daisy\_field\_init()

```
FORCE_INLINE void daisy::daisy_field_init ( \label{eq:daisy_field} \mbox{daisy_field} \ *\ p\ )
```

Initializes daisy field

## Parameters

p daisy\_field struct to initialize

- < &
- < &
- < &
- < &
- < &
- < &
- < &
- < &

```
< &
< &
< &
< &
< &
< &
< &
< &
< &
< &
6.15.4.19 DaisyPatch()
daisy::DaisyPatch::DaisyPatch ( ) [inline]
Constructor
6.15.4.20 DaisyPetal()
daisy::DaisyPetal::DaisyPetal ( ) [inline]
Constructor
6.15.4.21 DebounceControls() [1/3]
void daisy::DaisyPod::DebounceControls ( )
&
6.15.4.22 DebounceControls() [2/3]
void daisy::DaisyPatch::DebounceControls ( )
Debounce analog controls. Call at same rate as reading controls.
6.15.4.23 DebounceControls() [3/3]
void daisy::DaisyPetal::DebounceControls ( )
Debounce inputs.
6.15.4.24 DelayMs() [1/3]
void daisy::DaisyPod::DelayMs (
             size_t del )
```

Wait for a bit

#### **Parameters**

```
del Time to wait in ms.
```

Wait some ms before going on.

#### **Parameters**

```
del Delay time in ms.
```

```
6.15.4.26 DelayMs() [3/3]
```

Wait before moving on.

### **Parameters**

```
del Delay time in ms.
```

## 6.15.4.27 DisplayControls()

Control the display

### 6.15.4.28 dsy\_pin()

Helper for creating pins from port/pin combos easily

```
6.15.4.29 dsy_pin_cmp()
FORCE_INLINE uint8_t dsy_pin_cmp (
               dsy_gpio_pin * a,
              dsy_gpio_pin * b)
Helper for testing sameness of two dsy_gpio_pins
Returns
     1 if same, 0 if different
6.15.4.30 f2s16()
FORCE_INLINE int16_t f2s16 (
               float x )
& < close to 1.0f-LSB at 16 bit
< - (1 - LSB)
< close to 1.0f-LSB at 16 bit
< - (1 - LSB)
< close to 1.0f-LSB at 16 bit
< close to 1.0f-LSB at 16 bit
< (2 ** 15) - 1
6.15.4.31 f2s24()
FORCE_INLINE int32_t f2s24 (
              float x )
& < close to 1.0f-LSB at 16 bit
< - (1 - LSB)
< close to 1.0f-LSB at 16 bit
< - (1 - LSB)
< close to 1.0f-LSB at 16 bit
< close to 1.0f-LSB at 16 bit
< 2 ** 23
6.15.4.32 GetCtrlValue()
```

Get value for a partiular control

float daisy::DaisyPatch::GetCtrlValue (  $Ctrl \ k$  )

#### **Parameters**

```
k Which control to get
```

float daisy::DaisyPetal::GetKnobValue (

### Parameters

```
k Which knob to get
```

#### Returns

Floating point knob position.

### 6.15.4.36 GetPin()

Returns the gpio\_pin corresponding to the index 0-31. For the given GPIO on the Daisy Seed (labeled 1-32 in docs).

```
6.15.4.37 Init() [1/4] void daisy::DaisyPod::Init ( )
```

Init related stuff.

```
6.15.4.38 Init() [2/4] void daisy::DaisyPatch::Init ( )
```

Initializes the daisy seed, and patch hardware.

```
6.15.4.39 Init() [3/4]

void daisy::DaisySeed::Init ( )
```

Initializes the Daisy Seed and the following peripherals: SDRAM, QSPI, 24-bit 48kHz Audio via AK4556, Internal USB, as well as the built-in LED and Testpoint.

ADCs, DACs, and other special peripherals (such as I2C, SPI, etc.) can be initialized using their specific initializers within libdaisy for a specific application.

```
6.15.4.40 Init() [4/4]

void daisy::DaisyPetal::Init ( )
Initialize daisy petal
6.15.4.41 s162f()
```

```
FORCE_INLINE float s162f ( int16\_t \ x )
```

Scales float by  $1/(2 ^ 15)$ 

**Parameters** 

```
x Number to be scaled.
```

#### Returns

Scaled number.

```
< 1 / (2** 15)
```

### 6.15.4.42 s242f()

#### 6.15.4.43 SetAudioBlockSize() [1/4]

Audio Block size defaults to 48. Change it using this function before StartingAudio.

### **Parameters**

```
size Block size to set.
```

#### 6.15.4.44 SetAudioBlockSize() [2/4]

Audio Block size defaults to 48. Change it using this function before StartingAudio

#### **Parameters**

size Audio block size.

#### **6.15.4.45** SetAudioBlockSize() [3/4]

Sets the number of samples processed per channel by the audio callback.

### 6.15.4.46 SetAudioBlockSize() [4/4]

Set size of audio blocks.

#### **Parameters**

size Audio block size

### 6.15.4.47 SetFootswitchLed()

### Set footswitch LED

#### **Parameters**

idx	Led Index
bright	Brightness

### 6.15.4.48 SetLed()

#### Sets the state of the built in LED

### 6.15.4.49 SetRingLed()

```
void daisy::DaisyPetal::SetRingLed (
    RingLed idx,
    float r,
    float g,
    float b)
```

## Set ring LED colors

### **Parameters**

idx	Index to set
r	Red value
g	Green value
b	Blue value

### 6.15.4.50 SetTestPoint()

Sets the state of the test point near pin 10

```
6.15.4.51 StartAdc() [1/3]
void daisy::DaisyPod::StartAdc ( )
Start analog to digital conversion.
6.15.4.52 StartAdc() [2/3]
void daisy::DaisyPatch::StartAdc ( )
Start analog to digital conversion.
6.15.4.53 StartAdc() [3/3]
void daisy::DaisyPetal::StartAdc ( )
Start analog to digital conversion.
6.15.4.54 StartAudio() [1/4]
void daisy::DaisyPod::StartAudio (
              dsy_audio_callback cb )
Start audio callback
Parameters
      Callback function.
6.15.4.55 StartAudio() [2/4]
void daisy::DaisySeed::StartAudio (
              dsy_audio_callback cb )
Begins the audio for the seeds builtin audio. the specified callback will get called whenever new data is ready to be
prepared.
6.15.4.56 StartAudio() [3/4]
```

Start audio output.

void daisy::DaisyPatch::StartAudio (

dsy\_audio\_mc\_callback cb )

```
Parameters
```

```
cb Audio callback function
```

```
6.15.4.57 StartAudio() [4/4]
```

Start audio callback

### **Parameters**

```
cb Callback function.
```

```
6.15.4.58 UpdateAnalogControls() [1/3]
```

```
void daisy::DaisyPod::UpdateAnalogControls ( )
```

Call at same rate as analog reads for smooth reading.

```
6.15.4.59 UpdateAnalogControls() [2/3]
```

```
void daisy::DaisyPatch::UpdateAnalogControls ( )
```

Call at same rate as reading controls for good reads.

```
6.15.4.60 UpdateAnalogControls() [3/3]
```

```
void daisy::DaisyPetal::UpdateAnalogControls ( )
```

Call at the same frequency as controls are read for stable readings.

```
6.15.4.61 UpdateLeds() [1/2]
```

```
void daisy::DaisyPod::UpdateLeds ( )
```

Update Leds to set colors

```
6.15.4.62 UpdateLeds() [2/2]
void daisy::DaisyPetal::UpdateLeds ( )
Update Leds to values you had set.
6.15.4.63 \sim DaisyPatch()
daisy::DaisyPatch::~DaisyPatch ( ) [inline]
Destructor
6.15.4.64 ∼ DaisyPetal()
daisy::DaisyPetal::~DaisyPetal ( ) [inline]
Destructor
6.15.5 Variable Documentation
6.15.5.1 adc
AdcHandle daisy::DaisySeed::adc
6.15.5.2 audio_handle
dsy_audio_handle daisy::DaisySeed::audio_handle
&
6.15.5.3 button1
Switch daisy::DaisyPod::button1
6.15.5.4 button2
Switch daisy::DaisyPod::button2
&
```

```
6.15.5.5 buttons
Switch * daisy::DaisyPod::buttons[BUTTON_LAST]
&
6.15.5.6 controls
AnalogControl daisy::DaisyPatch::controls[CTRL_LAST]
Array of controls
6.15.5.7 cvs
AnalogControl daisy::daisy_field::cvs[CV_LAST]
Array of cv ins
6.15.5.8 dac_handle
dsy_dac_handle daisy::DaisySeed::dac_handle
6.15.5.9 display
OledDisplay daisy::DaisyPatch::display
&
6.15.5.10 encoder [1/3]
Encoder daisy::DaisyPod::encoder
&
6.15.5.11 encoder [2/3]
Encoder daisy::DaisyPatch::encoder
Encoder object
6.15.5.12 encoder [3/3]
Encoder daisy::DaisyPetal::encoder
&
```

```
6.15.5.13 expression
AnalogControl daisy::DaisyPetal::expression
&
6.15.5.14 footswitch_led
Led daisy::DaisyPetal::footswitch_led[4]
6.15.5.15 gate_in
dsy_gpio daisy::daisy_field::gate_in
Gate input.
6.15.5.16 gate_input
GateIn daisy::DaisyPatch::gate_input[GATE_IN_LAST]
Gate inputs
6.15.5.17 gate_out
dsy_gpio daisy::daisy_field::gate_out
Gate output
6.15.5.18 gate_output
dsy_gpio daisy::DaisyPatch::gate_output
&
6.15.5.19 i2c1_handle
dsy_i2c_handle daisy::DaisySeed::i2c1_handle
&
6.15.5.20 i2c2_handle
dsy_i2c_handle daisy::DaisySeed::i2c2_handle
&
```

```
6.15.5.21 keyboard_sr
dsy_sr_4021_handle daisy::daisy_field::keyboard_sr
Keyboard shift register
6.15.5.22 knob
AnalogControl daisy::DaisyPetal::knob[KNOB_LAST]
6.15.5.23 knob1
AnalogControl daisy::DaisyPod::knob1
6.15.5.24 knob2
AnalogControl daisy::DaisyPod::knob2
6.15.5.25 knobs [1/2]
AnalogControl * daisy::DaisyPod::knobs[KNOB_LAST]
&
6.15.5.26 knobs [2/2]
AnalogControl daisy::daisy_field::knobs[KNOB_LAST]
Array of hardware knobs
6.15.5.27 led1
RgbLed daisy::DaisyPod::led1
&
6.15.5.28 led2
RgbLed daisy::DaisyPod::led2
&
```

```
6.15.5.29 midi
MidiHandler daisy::DaisyPatch::midi
Handles midi
6.15.5.30 qspi_handle
dsy_qspi_handle daisy::DaisySeed::qspi_handle
6.15.5.31 ring_led
RgbLed daisy::DaisyPetal::ring_led[8]
6.15.5.32 sai_handle
dsy_sai_handle daisy::DaisySeed::sai_handle
6.15.5.33 sdram_handle
dsy_sdram_handle daisy::DaisySeed::sdram_handle
&
6.15.5.34 seed [1/4]
DaisySeed daisy::DaisyPod::seed
Public Members #
6.15.5.35 seed [2/4]
DaisySeed daisy::DaisyPatch::seed
Seed object
6.15.5.36 seed [3/4]
daisy::DaisySeed daisy::daisy_field::seed
Daisy seed
```

```
6.15.5.37 seed [4/4]

DaisySeed daisy::DaisyPetal::seed

&
6.15.5.38 switches [1/2]

daisy::Switch daisy::daisy_field::switches[SW_LAST]

Array of hardware switches

6.15.5.39 switches [2/2]

Switch daisy::DaisyPetal::switches[SW_LAST]

< &
6.15.5.40 usb_handle

UsbHandle daisy::DaisySeed::usb_handle

&</pre>
```

6.16 UTILITY 131

### 6.16 UTILITY

General utilities. Ringbuffers, LED colors, OLED stuff, etc.

#### Classes

- struct DSY\_SD\_CardInfoTypeDef
- · class daisy::Color
- struct FontDef
- class daisy::RingBuffer< T, size >
- class daisy::RingBuffer< T, 0 >
- struct WAV\_FormatTypeDef

### **Macros**

- #define BSP\_SD\_CardInfo DSY\_SD\_CardInfoTypeDef
- #define MSD OK ((uint8 t)0x00)
- #define MSD\_ERROR ((uint8\_t)0x01)
- #define MSD ERROR SD NOT PRESENT ((uint8 t)0x02)
- #define SD TRANSFER OK ((uint8 t)0x00)
- #define SD\_TRANSFER\_BUSY ((uint8\_t)0x01)
- #define SD PRESENT ((uint8 t)0x01)
- #define SD\_NOT\_PRESENT ((uint8\_t)0x00)
- #define SD\_DATATIMEOUT ((uint32\_t)100000000)

### **Enumerations**

```
    enum daisy::Color::PresetColor {
        daisy::Color::RED, daisy::Color::GREEN, daisy::Color::BLUE, daisy::Color::WHITE,
        daisy::Color::PURPLE, daisy::Color::CYAN, daisy::Color::GOLD, daisy::Color::OFF,
        daisy::Color::LAST }
```

### **Functions**

- uint8 t BSP SD Init (void)
- uint8 t BSP SD ITConfig (void)
- uint8\_t BSP\_SD\_ReadBlocks (uint32\_t \*pData, uint32\_t ReadAddr, uint32\_t NumOfBlocks, uint32\_t Timeout)
- uint8\_t BSP\_SD\_WriteBlocks (uint32\_t \*pData, uint32\_t WriteAddr, uint32\_t NumOfBlocks, uint32\_t Timeout)
- uint8\_t BSP\_SD\_ReadBlocks\_DMA (uint32\_t \*pData, uint32\_t ReadAddr, uint32\_t NumOfBlocks)
- uint8\_t BSP\_SD\_WriteBlocks\_DMA (uint32\_t \*pData, uint32\_t WriteAddr, uint32\_t NumOfBlocks)
- uint8 t BSP SD Erase (uint32 t StartAddr, uint32 t EndAddr)
- uint8 t BSP SD GetCardState (void)
- void BSP\_SD\_GetCardInfo (DSY\_SD\_CardInfoTypeDef \*CardInfo)
- uint8\_t BSP\_SD\_IsDetected (void)
- void BSP\_SD\_AbortCallback (void)
- void BSP\_SD\_WriteCpltCallback (void)
- void BSP\_SD\_ReadCpltCallback (void)
- void daisy::Color::Init (PresetColor c)
- void daisy::Color::Init (float red, float green, float blue)

```
· float daisy::Color::Red () const
· float daisy::Color::Green () const
· float daisy::Color::Blue () const
• GPIO_TypeDef * dsy_hal_map_get_port (dsy_gpio_pin *p)
uint16_t dsy_hal_map_get_pin (dsy_gpio_pin *p)

    I2C HandleTypeDef * dsy hal map get i2c (dsy i2c handle *p)

    void daisy::RingBuffer< T, size >::Init ()

• size_t daisy::RingBuffer< T, size >::capacity () const
• size t daisy::RingBuffer< T, size >::writable () const
• size_t daisy::RingBuffer< T, size >::readable () const

    void daisy::RingBuffer< T, size >::Write (T v)

    void daisy::RingBuffer< T, size >::Overwrite (T v)

• T daisy::RingBuffer< T, size >::Read ()
• T daisy::RingBuffer< T, size >::ImmediateRead ()

    void daisy::RingBuffer< T, size >::Flush ()

    void daisy::RingBuffer< T, size >::Swallow (size t n)

    void daisy::RingBuffer< T, size >::ImmediateRead (T *destination, size_t num_elements)

• void daisy::RingBuffer< T, size >::Overwrite (const T *source, size t num elements)

    void daisy::RingBuffer< T, 0 >::Init ()

• size t daisy::RingBuffer< T, 0 >::capacity () const
• size t daisy::RingBuffer< T, 0 >::writable () const
• size t daisy::RingBuffer< T, 0 >::readable () const

    void daisy::RingBuffer< T, 0 >::Write (T v)

    void daisy::RingBuffer< T, 0 >::Overwrite (T v)

    T daisy::RingBuffer< T, 0 >::Read ()

    T daisy::RingBuffer< T, 0 >::ImmediateRead ()

    void daisy::RingBuffer< T, 0 >::Flush ()

• void daisy::RingBuffer< T, 0 >::ImmediateRead (T *destination, size_t num_elements)
```

• void daisy::RingBuffer< T, 0 >::Overwrite (const T \*source, size t num elements)

void dsy get unique id (uint32 t \*w0, uint32 t \*w1, uint32 t \*w2)

#### Variables

- I2C\_HandleTypeDef hi2c1
- I2C\_HandleTypeDef hi2c2
- I2C\_HandleTypeDef hi2c3
- I2C\_HandleTypeDef hi2c4
- FontDef Font\_6x8
- FontDef Font\_7x10
- FontDef Font\_11x18
- FontDef Font\_16x26

### 6.16.1 Detailed Description

General utilities. Ringbuffers, LED colors, OLED stuff, etc.

#### 6.16.2 Macro Definition Documentation

6.16 UTILITY 133

```
6.16.2.1 BSP_SD_CardInfo
#define BSP_SD_CardInfo DSY_SD_CardInfoTypeDef
6.16.2.2 MSD_ERROR
#define MSD_ERROR ((uint8_t)0x01)
6.16.2.3 MSD_ERROR_SD_NOT_PRESENT
\#define MSD_ERROR_SD_NOT_PRESENT ((uint8_t)0x02)
6.16.2.4 MSD_OK
#define MSD_OK ((uint8_t)0x00)
6.16.2.5 SD_DATATIMEOUT
#define SD_DATATIMEOUT ((uint32_t)100000000)
&
6.16.2.6 SD_NOT_PRESENT
#define SD_NOT_PRESENT ((uint8_t)0x00)
&
6.16.2.7 SD_PRESENT
#define SD_PRESENT ((uint8_t)0x01)
&
6.16.2.8 SD_TRANSFER_BUSY
#define SD_TRANSFER_BUSY ((uint8_t)0x01)
&
```

### 6.16.2.9 SD\_TRANSFER\_OK

```
#define SD_TRANSFER_OK ((uint8_t)0x00)
```

&

## 6.16.3 Enumeration Type Documentation

### 6.16.3.1 PresetColor

```
enum daisy::Color::PresetColor
```

List of colors that have a preset RGB value

#### Enumerator

RED	&
GREEN	&
BLUE	&
WHITE	&
PURPLE	&
CYAN	&
GOLD	&
OFF	&
LAST	&

## 6.16.4 Function Documentation

### 6.16.4.1 Blue()

```
float daisy::Color::Blue ( ) const [inline]
```

Returns the 0-1 value for Blue

## 6.16.4.2 BSP\_SD\_AbortCallback()

These functions can be modified in case the current settings (e.g. DMA stream) need to be changed for specific application needs /n

Abort the callback

6.16 UTILITY 135

### 6.16.4.3 BSP\_SD\_Erase()

### Erase a section of memory

### **Parameters**

StartAddr	Address to start erasing at
EndAddr	Address to stop erasing at

#### Returns

card state, ERROR, etc.

### 6.16.4.4 BSP\_SD\_GetCardInfo()

### **Parameters**

*CardInfo	Pointer to write card info to
-----------	-------------------------------

#### **Parameters**

CardInfo &

## 6.16.4.5 BSP\_SD\_GetCardState()

### Returns

card state, ERROR, etc.

# 6.16.4.6 BSP\_SD\_Init()

#### Returns

card state, ERROR, etc.

## 6.16.4.7 BSP\_SD\_IsDetected()

#### Returns

Is card detected

## 6.16.4.8 BSP\_SD\_ITConfig()

#### Returns

card state, ERROR, etc.

### 6.16.4.9 BSP\_SD\_ReadBlocks()

### **Parameters**

*pData	&
ReadAddr	Address to read from
NumOfBlocks	Number of blocks to be read
Timeout	Timeout len in ms

6.16 UTILITY 137

#### Returns

OK ERROR, etc.

### 6.16.4.10 BSP\_SD\_ReadBlocks\_DMA()

### No timeout

#### **Parameters**

*pData	&
ReadAddr	Address to read from
NumOfBlocks	Number of blocks to be read

#### Returns

card state, ERROR, etc.

### 6.16.4.11 BSP\_SD\_ReadCpltCallback()

Write complete callback

### 6.16.4.12 BSP\_SD\_WriteBlocks()

#### **Parameters**

*pData	&
WriteAddr	Address to write to
NumOfBlocks	Number of blocks to be written
Timeout	Timeout len in ms

#### Returns

card state, ERROR, etc.

### 6.16.4.13 BSP\_SD\_WriteBlocks\_DMA()

### No timeout

#### **Parameters**

*pData	&
WriteAddr	Address to write to
NumOfBlocks	Number of blocks to be read

#### Returns

card state, ERROR, etc.

### 6.16.4.14 BSP\_SD\_WriteCpltCallback()

### Read complete callback

```
6.16.4.15 capacity() [1/2]
```

```
template<typename T, size_t size>
size_t daisy::RingBuffer< T, size >::capacity ( ) const [inline]
```

### Returns

The total size of the ring buffer

6.16 UTILITY 139

```
6.16.4.16 capacity() [2/2]

template<typename T >
size_t daisy::RingBuffer< T, 0 >::capacity ( ) const [inline]
```

Returns

0

## 6.16.4.17 dsy\_get\_unique\_id()

Returns 96-bit Unique ID of the MCU

**Author** 

shensley

Date

May 2020 fills the three pointer arguments with the unique ID of the MCU.

### **Parameters**

*w0	First pointer
*W1	Second pointer
* <i>w2</i>	Third pointer

## 6.16.4.18 dsy\_hal\_map\_get\_i2c()

### **Parameters**

```
*p dsy_i2c_handle to get
```

### Returns

The I2C\_HandleTypeDef for the given \*p

### 6.16.4.19 dsy\_hal\_map\_get\_pin()

### **Parameters**

```
*p Pin pin to get
```

#### Returns

HAL GPIO Pin as used in the HAL from a dsy\_gpio\_pin input.

### 6.16.4.20 dsy\_hal\_map\_get\_port()

#### **Parameters**

```
*p Pin pin to get
```

#### Returns

HAL GPIO\_TypeDef as used in the HAL from a dsy\_gpio\_pin input.

## 6.16.4.21 Flush() [1/2]

```
template<typename T, size_t size>
void daisy::RingBuffer< T, size >::Flush ( ) [inline]
```

Flushes unread elements from the ring buffer

```
6.16.4.22 Flush() [2/2]
```

```
template<typename T >
void daisy::RingBuffer< T, 0 >::Flush ( ) [inline]
```

### Flush the buffer

6.16 UTILITY 141

#### 6.16.4.23 Green()

```
float daisy::Color::Green ( ) const [inline]
```

Returns the 0-1 value for Green

```
6.16.4.24 ImmediateRead() [1/4]
```

```
template<typename T, size_t size>
T daisy::RingBuffer< T, size >::ImmediateRead ( ) [inline]
```

Reads next element from ring buffer immediately

#### Returns

read value

### 6.16.4.25 ImmediateRead() [2/4]

Reads a number of elements into a buffer immediately

## Parameters

destination	buffer to write to
num_elements	number of elements in buffer

## **6.16.4.26** ImmediateRead() [3/4]

```
template<typename T >
T daisy::RingBuffer< T, 0 >::ImmediateRead ( ) [inline]
```

#### Returns

Read value

## **6.16.4.27** ImmediateRead() [4/4]

6.16 UTILITY 143

#### **Parameters**

destination	&
num_elements	&

```
6.16.4.28 Init() [1/4]
```

```
template<typename T, size_t size>
void daisy::RingBuffer< T, size >::Init () [inline]
```

Initializes the Ring Buffer

Initializes the Color with a given preset.

#### **Parameters**

```
c Color to init to
```

```
6.16.4.30 Init() [3/4]
```

Initializes the Color with a specific RGB value red, green, and blue should be floats between 0 and 1

## **Parameters**

red	Red value
green	Green value
blue	Blue value

```
6.16.4.31 Init() [4/4]
```

```
template<typename T >
void daisy::RingBuffer< T, 0 >::Init () [inline]
```

### Initialize ringbuffer

Writes the new element to the ring buffer, overwriting unread data if necessary.

#### Parameters 2 4 1

```
v Value to overwrite
```

### **6.16.4.33** Overwrite() [2/4]

Overwrites a number of elements using the source buffer as input.

#### **Parameters**

source	Input buffer
num_elements	Number of elements in source

### **6.16.4.34** Overwrite() [3/4]

### **Parameters**

```
v Value to overwrite
```

### **6.16.4.35** Overwrite() [4/4]

```
template<typename T >
void daisy::RingBuffer< T, 0 >::Overwrite (
```

6.16 UTILITY 145

```
const T * source,
size_t num_elements ) [inline]
```

#### **Parameters**

source	3
num_elements	&

### 6.16.4.36 Read() [1/2]

```
template<typename T, size_t size>
T daisy::RingBuffer< T, size >::Read ( ) [inline]
```

Reads the first available element from the ring buffer

### Returns

read value

```
6.16.4.37 Read() [2/2]
```

```
template<typename T >
T daisy::RingBuffer< T, 0 >::Read ( ) [inline]
```

### Returns

Read value

```
6.16.4.38 readable() [1/2]
```

```
template<typename T, size_t size>
size_t daisy::RingBuffer< T, size >::readable ( ) const [inline]
```

### Returns

number of unread elements in ring buffer

```
6.16.4.39 readable() [2/2]
template<typename T >
size_t daisy::RingBuffer< T, 0 >::readable ( ) const [inline]
Returns
     0
6.16.4.40 Red()
float daisy::Color::Red ( ) const [inline]
Returns the 0-1 value for Red
6.16.4.41 Swallow()
template<typename T, size_t size>
void daisy::RingBuffer< T, size >::Swallow (
             size_t n ) [inline]
Read enough samples to make it possible to read 1 sample.
Parameters
     Size of T?
6.16.4.42 writable() [1/2]
template<typename T, size_t size>
size_t daisy::RingBuffer< T, size >::writable () const [inline]
```

the number of samples that can be written to ring buffer without overwriting unread data.

```
6.16.4.43 writable() [2/2]

template<typename T >
size_t daisy::RingBuffer< T, 0 >::writable ( ) const [inline]

Returns
```

Returns

0

Generated by Doxygen

6.16 UTILITY 147

```
6.16.4.44 Write() [1/2]
```

Writes the value to the next available position in the ring buffer

### **Parameters**

```
v Value to write
```

```
6.16.4.45 Write() [2/2]
```

### **Parameters**

V Value to write

### 6.16.5 Variable Documentation

```
6.16.5.1 Font_11x18
```

FontDef Font\_11x18

&

6.16.5.2 Font\_16x26

FontDef Font\_16x26

&

6.16.5.3 Font\_6x8

FontDef Font\_6x8

These are the different sizes of fonts (width x height in pixels per character)

6.16.5.4 Font\_7x10

FontDef Font\_7x10

ጼ

6.16.5.5 hi2c1

I2C\_HandleTypeDef hi2c1

global structs, and helper functions for interfacing with the stm32 HAL library while it remains a dependancy. This file should only be included from source files (c/cpp) Including it from a header within libdaisy would expose the entire HAL to the users. This should be an option for users, but should not be required.externs of HAL handles...

6.16.5.6 hi2c2

I2C\_HandleTypeDef hi2c2

externs of HAL handles...

6.16.5.7 hi2c3

I2C\_HandleTypeDef hi2c3

externs of HAL handles...

6.16.5.8 hi2c4

I2C\_HandleTypeDef hi2c4

externs of HAL handles...

6.17 USBD\_CDC\_IF 149

# 6.17 USBD\_CDC\_IF

Usb VCP device module.

### **Modules**

• USBD\_CDC\_IF\_Exported\_Defines

Defines.

• USBD\_CDC\_IF\_Exported\_Types

Types.

• USBD\_CDC\_IF\_Exported\_Macros

Aliases.

• USBD\_CDC\_IF\_Exported\_Variables

Public variables.

• USBD\_CDC\_IF\_Exported\_FunctionsPrototype

Public functions declaration.

## 6.17.1 Detailed Description

Usb VCP device module.

6.18	USBD	CDC	IF	<b>Exported</b>	<b>Defines</b>
------	------	-----	----	-----------------	----------------

Defines.

Defines.

# 6.19 USBD\_CDC\_IF\_Exported\_Types

Types.

## **Typedefs**

• typedef void(\* CDC\_ReceiveCallback) (uint8\_t \*buf, uint32\_t \*size)

## 6.19.1 Detailed Description

Types.

## 6.19.2 Typedef Documentation

### 6.19.2.1 CDC\_ReceiveCallback

typedef void(\* CDC\_ReceiveCallback) (uint8\_t \*buf, uint32\_t \*size)

### **Parameters**

buf	buffer	
size	buffer size	

# 6.20 USBD\_CDC\_IF\_Exported\_Macros

Aliases.

Aliases.

# 6.21 USBD\_CDC\_IF\_Exported\_Variables

Public variables.

### **Variables**

- USBD\_CDC\_ItfTypeDef USBD\_Interface\_fops\_FS
- USBD\_CDC\_ltfTypeDef USBD\_Interface\_fops\_HS

### 6.21.1 Detailed Description

Public variables.

### 6.21.2 Variable Documentation

### 6.21.2.1 USBD\_Interface\_fops\_FS

USBD\_CDC\_ItfTypeDef USBD\_Interface\_fops\_FS

CDC Interface callback.

### 6.21.2.2 USBD\_Interface\_fops\_HS

USBD\_CDC\_ItfTypeDef USBD\_Interface\_fops\_HS

CDC Interface callback.

# 6.22 USBD\_CDC\_IF\_Exported\_FunctionsPrototype

Public functions declaration.

### **Functions**

```
• void CDC_Set_Rx_Callback_FS (CDC_ReceiveCallback cb)
```

- uint8\_t CDC\_Transmit\_FS (uint8\_t \*Buf, uint16\_t Len)
- uint8\_t CDC\_Transmit\_HS (uint8\_t \*Buf, uint16\_t Len)

### 6.22.1 Detailed Description

Public functions declaration.

### 6.22.2 Function Documentation

```
6.22.2.1 CDC_Set_Rx_Callback_FS()
```

&

### 6.22.2.2 CDC\_Transmit\_FS()

&

### 6.22.2.3 CDC\_Transmit\_HS()

&

6.23 USBD\_CONF 155

# 6.23 USBD\_CONF

Configuration file for Usb otg low level driver.

### **Modules**

• USBD\_CONF\_Exported\_Variables

Public variables.

• USBD\_CONF\_Exported\_Defines

Defines for configuration of the Usb device.

• USBD\_CONF\_Exported\_Macros

Aliases.

• USBD\_CONF\_Exported\_Types

Types.

• USBD\_CONF\_Exported\_FunctionsPrototype

Declaration of public functions for Usb device.

## 6.23.1 Detailed Description

Configuration file for Usb otg low level driver.

# 6.24 USBD\_CONF\_Exported\_Variables

Public variables.

Public variables.

# 6.25 USBD\_CONF\_Exported\_Defines

Defines for configuration of the Usb device.

#### **Macros**

- #define USBD\_MAX\_NUM\_INTERFACES 1U
- #define USBD\_MAX\_NUM\_CONFIGURATION 1U
- #define USBD\_MAX\_STR\_DESC\_SIZ 512U
- #define USBD\_SUPPORT\_USER\_STRING 0U
- #define USBD\_DEBUG\_LEVEL 3U
- #define USBD\_LPM\_ENABLED 0U
- #define USBD SELF POWERED 1U
- #define DEVICE\_FS 0
- #define DEVICE\_HS 1

### 6.25.1 Detailed Description

Defines for configuration of the Usb device.

### 6.25.2 Macro Definition Documentation

### 6.25.2.1 DEVICE\_FS

#define DEVICE\_FS 0

FS and HS identification

### 6.25.2.2 DEVICE\_HS

#define DEVICE\_HS 1

ጴ

### 6.25.2.3 USBD\_DEBUG\_LEVEL

#define USBD\_DEBUG\_LEVEL 3U

&

### 6.25.2.4 USBD\_LPM\_ENABLED

#define USBD\_LPM\_ENABLED OU

&

### 6.25.2.5 USBD\_MAX\_NUM\_CONFIGURATION

#define USBD\_MAX\_NUM\_CONFIGURATION 1U

&

### 6.25.2.6 USBD\_MAX\_NUM\_INTERFACES

#define USBD\_MAX\_NUM\_INTERFACES 1U

&

### 6.25.2.7 USBD\_MAX\_STR\_DESC\_SIZ

#define USBD\_MAX\_STR\_DESC\_SIZ 512U

&

## 6.25.2.8 USBD\_SELF\_POWERED

#define USBD\_SELF\_POWERED 1U

&

### 6.25.2.9 USBD\_SUPPORT\_USER\_STRING

 $\verb|#define USBD_SUPPORT_USER_STRING 0U|\\$ 

&

# 6.26 USBD\_CONF\_Exported\_Macros

Aliases.

### **Macros**

- #define USBD\_malloc malloc
- #define USBD\_free free
- #define USBD\_memset memset
- #define USBD\_memcpy memcpy
- #define USBD\_Delay HAL\_Delay
- #define USBD\_UsrLog(...)
- #define USBD\_ErrLog(...)
- #define USBD\_DbgLog(...)

### 6.26.1 Detailed Description

Aliases.

### 6.26.2 Macro Definition Documentation

```
6.26.2.1 USBD_DbgLog
```

### Value:

```
printf("DEBUG : "); \
    printf(__VA_ARGS__); \
    printf("\n");
```

&

### 6.26.2.2 USBD\_Delay

#define USBD\_Delay HAL\_Delay

Alias for delay.

```
6.26.2.3 USBD_ErrLog
```

Value:

```
printf("ERROR: "); \
   printf(__VA_ARGS__); \
   printf("\n");
```

&

### 6.26.2.4 USBD\_free

```
#define USBD_free free
```

Alias for memory release.

### 6.26.2.5 USBD\_malloc

```
#define USBD_malloc malloc
```

Alias for memory allocation.

### 6.26.2.6 USBD\_memcpy

```
#define USBD_memcpy memcpy
```

Alias for memory copy.

### 6.26.2.7 USBD\_memset

```
#define USBD_memset memset
```

Alias for memory set.

### 6.26.2.8 USBD\_UsrLog

### Value:

```
\begin{array}{c} \text{printf}(\underline{\hspace{0.1cm}} \text{VA\_ARGS}\underline{\hspace{0.1cm}}); \ \backslash \\ \text{printf}("\n"); \end{array}
```

&

# 6.27 USBD\_CONF\_Exported\_Types

Types.

Types.

# 6.28 USBD\_CONF\_Exported\_FunctionsPrototype

Declaration of public functions for Usb device.

Declaration of public functions for Usb device.

6.29 USBD\_DESC 163

# 6.29 USBD\_DESC

Usb device descriptors module.

### **Modules**

• USBD\_DESC\_Exported\_Constants

Constants.

• USBD\_DESC\_Exported\_Defines

Defines.

• USBD\_DESC\_Exported\_TypesDefinitions

Types.

• USBD\_DESC\_Exported\_Macros

Aliases.

• USBD\_DESC\_Exported\_Variables

Public variables.

• USBD\_DESC\_Exported\_FunctionsPrototype

Public functions declaration.

## 6.29.1 Detailed Description

Usb device descriptors module.

# 6.30 USBD\_DESC\_Exported\_Constants

Constants.

### **Macros**

```
• #define DEVICE_ID1 (UID_BASE)
```

- #define DEVICE\_ID2 (UID\_BASE + 0x4)
- #define DEVICE\_ID3 (UID\_BASE + 0x8)
- #define USB\_SIZ\_STRING\_SERIAL 0x1A

### 6.30.1 Detailed Description

Constants.

### 6.30.2 Macro Definition Documentation

```
6.30.2.1 DEVICE_ID1
```

#define DEVICE\_ID1 (UID\_BASE)

&

## 6.30.2.2 DEVICE\_ID2

```
#define DEVICE_ID2 (UID_BASE + 0x4)
```

&

## 6.30.2.3 DEVICE\_ID3

#define DEVICE\_ID3 (UID\_BASE + 0x8)

&

### 6.30.2.4 USB\_SIZ\_STRING\_SERIAL

#define USB\_SIZ\_STRING\_SERIAL 0x1A

&

# 6.31 USBD\_DESC\_Exported\_Defines

Defines.

Defines.

6.32 USBD DESC Exported TypesDefinition	6.32	USBD	DESC	<b>Exported</b>	<b>TypesDefinition</b>
---	------	------	------	-----------------	------------------------

Types.

Types.

# 6.33 USBD\_DESC\_Exported\_Macros

Aliases.

Aliases.

# 6.34 USBD\_DESC\_Exported\_Variables

Public variables.

### **Variables**

- USBD\_DescriptorsTypeDef HS\_Desc
- USBD\_DescriptorsTypeDef FS\_Desc

### 6.34.1 Detailed Description

Public variables.

### 6.34.2 Variable Documentation

6.34.2.1 FS\_Desc

USBD\_DescriptorsTypeDef FS\_Desc

Descriptor for the Usb device.

6.34.2.2 HS\_Desc

USBD\_DescriptorsTypeDef HS\_Desc

Descriptor for the Usb device.

# 6.35 USBD\_DESC\_Exported\_FunctionsPrototype

Public functions declaration.

Public functions declaration.

# 6.36 Externals

# 6.37 STM32\_USB\_OTG\_DEVICE\_LIBRARY

For Usb device.

### **Modules**

- USBD\_CDC\_IF
  - Usb VCP device module.
- USBD\_DESC

Usb device descriptors module.

## 6.37.1 Detailed Description

For Usb device.

< Define to prevent recursive inclusion -----

# 6.38 USBD\_OTG\_DRIVER

## Modules

• USBD\_CONF

Configuration file for Usb otg low level driver.

6.38.1 Detailed Description

# **Chapter 7**

# **Namespace Documentation**

## 7.1 daisy Namespace Reference

Hardware defines and helpers for daisy field platform.

### Classes

- · struct AdcChannelConfig
- · class AdcHandle
- class AnalogControl

Hardware Interface for control inputs Primarily designed for ADC input controls such as potentiometers, and control voltage.

- · class Color
- struct ControlChangeEvent
- · struct daisy\_field
- · class DaisyPatch

Class that handles initializing all of the hardware specific to the Daisy Patch Board. Helper funtions are also in place to provide easy access to built-in controls and peripherals.

class DaisyPetal

Helpers and hardware definitions for daisy petal.

class DaisyPod

Class that handles initializing all of the hardware specific to the Daisy Patch Board. Helper funtions are also in place to provide easy access to built-in controls and peripherals.

· class DaisySeed

This is the higher-level interface for the Daisy board.
All basic peripheral configuration/initialization is setup here.

class Encoder

Generic Class for handling Quadrature Encoders
Inspired/influenced by Mutable Instruments (pichenettes) Encoder classes.

· class GateIn

Generic Class for handling gate inputs through GPIO.

• class Led

LED Class providing simple Software PWM ability, etc Eventually this will work with hardware PWM, and external LED Driver devices as well.

struct MidiEvent

· class MidiHandler

Simple MIDI Handler

Parses bytes from an input into valid MidiEvents.

The MidiEvents fill a FIFO queue that the user can pop messages from.

- struct NoteOnEvent
- class OledDisplay
- · class Parameter
- class RgbLed
- · class RingBuffer
- class RingBuffer< T, 0 >
- class SdmmcHandler
- struct SdmmcHandlerInit
- · class SpiHandle
- · class Switch
- · class UartHandler
- struct WavFileInfo
- class WavPlayer

#### **Enumerations**

```
enum { SW 2, SW 1, SW 3, SW LAST }
enum {
 KNOB_1, KNOB_3, KNOB_5, KNOB_2,
 KNOB_4, KNOB_6, KNOB_7, KNOB_8,
 KNOB LAST }
enum {
 CV_1, CV_2, CV_3, CV_4,
 CV_LAST }
• enum {
 LED_KEY_A8, LED_KEY_A7, LED_KEY_A6, LED_KEY_A5,
 LED_KEY_A4, LED_KEY_A3, LED_KEY_A2, LED_KEY_A1,
 LED KEY B1, LED KEY B2, LED KEY B3, LED KEY B4,
 LED KEY B5, LED KEY B6, LED KEY B7, LED KEY B8,
 LED_KNOB_1, LED_KNOB_2, LED_KNOB_3, LED_KNOB_4,
 LED_KNOB_5, LED_KNOB_6, LED_KNOB_7, LED_KNOB_8,
 LED SW 1, LED SW 2, LED LAST }
enum MidiMessageType {
 NoteOff, NoteOn, PolyphonicKeyPressure, ControlChange,
 ProgramChange, ChannelPressure, PitchBend, MessageLast }

    enum SdmmcMode { SDMMC MODE FATFS }

• enum SdmmcBitWidth { SDMMC BITS 1, SDMMC BITS 4 }

    enum SdmmcSpeed { SDMMC SPEED 400KHZ, SDMMC SPEED 12MHZ }

enum SpiPeriph { SPI_PERIPH_1, SPI_PERIPH_3, SPI_PERIPH_6 }
• enum SpiPin { SPI PIN CS, SPI PIN SCK, SPI PIN MOSI, SPI PIN MISO }
```

### **Functions**

• FORCE\_INLINE void daisy\_field\_init (daisy\_field \*p)

### **Variables**

• const size t kUartMaxBufferSize = 32

### 7.1.1 Detailed Description

Hardware defines and helpers for daisy field platform.

# **Chapter 8**

# **Class Documentation**

# 8.1 daisy::AdcChannelConfig Struct Reference

```
#include <per_adc.h>
```

## **Public Types**

enum MuxPin { MUX\_SEL\_0, MUX\_SEL\_1, MUX\_SEL\_2, MUX\_SEL\_LAST }

### **Public Member Functions**

- void InitSingle (dsy\_gpio\_pin pin)
- void InitMux (dsy\_gpio\_pin adc\_pin, dsy\_gpio\_pin mux\_0, dsy\_gpio\_pin mux\_1, dsy\_gpio\_pin mux\_2, size
   \_t channels)

### **Public Attributes**

- dsy\_gpio pin\_
- dsy\_gpio mux\_pin\_ [MUX\_SEL\_LAST]
- uint8\_t mux\_channels\_

### 8.1.1 Detailed Description

Configuration Structure for a given channel

The documentation for this struct was generated from the following file:

• src/per\_adc.h

## 8.2 daisy::AdcHandle Class Reference

```
#include <per_adc.h>
```

176 Class Documentation

### **Public Types**

```
    enum OverSampling {
        OVS_NONE, OVS_4, OVS_8, OVS_16,
        OVS_32, OVS_64, OVS_128, OVS_256,
        OVS_512, OVS_1024, OVS_LAST }
```

#### **Public Member Functions**

```
    void Init (AdcChannelConfig *cfg, size_t num_channels, OverSampling ovs=OVS_32)
    void Start ()
```

```
• void Stop ()
```

- uint16\_t Get (uint8\_t chn)
- uint16\_t \* GetPtr (uint8\_t chn)
- float GetFloat (uint8\_t chn)
- uint16\_t GetMux (uint8\_t chn, uint8\_t idx)
- uint16\_t \* GetMuxPtr (uint8\_t chn, uint8\_t idx)
- float GetMuxFloat (uint8 t chn, uint8 t idx)

### 8.2.1 Detailed Description

Handler for analog to digital conversion

The documentation for this class was generated from the following file:

· src/per adc.h

# 8.3 daisy::AnalogControl Class Reference

```
Hardware Interface for control inputs
Primarily designed for ADC input controls such as
potentiometers, and control voltage.
.
```

```
#include <hid_ctrl.h>
```

### **Public Member Functions**

- AnalogControl ()
- ∼AnalogControl ()
- void Init (uint16\_t \*adcptr, float sr, bool flip=false, bool invert=false, float slew\_seconds=0.002f)
- void InitBipolarCv (uint16\_t \*adcptr, float sr)
- float Process ()
- float Value () const

### 8.3.1 Detailed Description

Hardware Interface for control inputs Primarily designed for ADC input controls such as potentiometers, and control voltage.

**Author** 

Stephen Hensley

Date

November 2019

The documentation for this class was generated from the following file:

· src/hid\_ctrl.h

# 8.4 codec\_frame\_t Struct Reference

```
#include <dev_codec_wm8731_frame.h>
```

### **Public Attributes**

- short I
- short r

## 8.4.1 Detailed Description

&

### 8.4.2 Member Data Documentation

### 8.4.2.1 I

```
short codec_frame_t::1
```

&

178 Class Documentation

### 8.4.2.2 r

```
short codec_frame_t::r
```

&

The documentation for this struct was generated from the following file:

• src/dev\_codec\_wm8731\_frame.h

## 8.5 color Struct Reference

```
#include <dev_leddriver.h>
```

### **Public Attributes**

- uint16\_t red
- uint16\_t green
- uint16\_t blue

## 8.5.1 Detailed Description

Simple color struct Different from util\_color only in type (0-4095 vs 0-1) This could easily be migrated to work with those instead.

### 8.5.2 Member Data Documentation

### 8.5.2.1 blue

uint16\_t color::blue

&

### 8.5.2.2 green

uint16\_t color::green

&

### 8.5.2.3 red

```
uint16_t color::red
```

8

The documentation for this struct was generated from the following file:

· src/dev\_leddriver.h

# 8.6 daisy::Color Class Reference

```
#include <util_color.h>
```

### **Public Types**

enum PresetColor {
 RED, GREEN, BLUE, WHITE,
 PURPLE, CYAN, GOLD, OFF,
 LAST }

### **Public Member Functions**

- void Init (PresetColor c)
- void Init (float red, float green, float blue)
- · float Red () const
- float Green () const
- · float Blue () const

### 8.6.1 Detailed Description

Class for handling simple colors

The documentation for this class was generated from the following file:

· src/util color.h

# 8.7 daisy::ControlChangeEvent Struct Reference

```
#include <hid_midi.h>
```

### **Public Attributes**

- int channel
- uint8\_t control\_number
- uint8\_t value

180 Class Documentation

### 8.7.1 Detailed Description

Struct containing control number, and value for a given channel. Can be made from MidiEvent

The documentation for this struct was generated from the following file:

· src/hid\_midi.h

## 8.8 daisy::daisy\_field Struct Reference

```
#include <daisy_field.h>
```

#### **Public Attributes**

- · daisy::DaisySeed seed
- daisy::Switch switches [SW\_LAST]
- dsy\_gpio gate\_in
- dsy\_gpio gate\_out
- dsy\_sr\_4021\_handle keyboard\_sr
- AnalogControl knobs [KNOB LAST]
- AnalogControl cvs [CV\_LAST]

### 8.8.1 Detailed Description

Struct containing hardware defines and daisy seed

The documentation for this struct was generated from the following file:

· src/daisy\_field.h

## 8.9 daisy::DaisyPatch Class Reference

Class that handles initializing all of the hardware specific to the Daisy Patch Board. Helper funtions are also in place to provide easy access to built-in controls and peripherals.

```
#include <daisy_patch.h>
```

### **Public Types**

```
    enum Ctrl {
        CTRL_1, CTRL_2, CTRL_3, CTRL_4,
        CTRL_LAST }
    enum GateInput { GATE_IN_1, GATE_IN_2, GATE_IN_LAST }
```

### **Public Member Functions**

- DaisyPatch ()
- ∼DaisyPatch ()
- void Init ()
- void DelayMs (size\_t del)
- void SetAudioBlockSize (size t size)
- void StartAudio (dsy\_audio\_mc\_callback cb)
- void ChangeAudioCallback (dsy\_audio\_callback cb)
- void StartAdc ()
- float AudioSampleRate ()
- size t AudioBlockSize ()
- float AudioCallbackRate ()
- void UpdateAnalogControls ()
- float GetCtrlValue (Ctrl k)
- void DebounceControls ()
- void DisplayControls (bool invert=true)

### **Public Attributes**

- DaisySeed seed
- · Encoder encoder
- AnalogControl controls [CTRL LAST]
- GateIn gate\_input [GATE\_IN\_LAST]
- · MidiHandler midi
- OledDisplay display
- dsy\_gpio gate\_output

### 8.9.1 Detailed Description

Class that handles initializing all of the hardware specific to the Daisy Patch Board. Helper funtions are also in place to provide easy access to built-in controls and peripherals.

**Author** 

Stephen Hensley

Date

November 2019

The documentation for this class was generated from the following file:

src/daisy\_patch.h

## 8.10 daisy::DaisyPetal Class Reference

Helpers and hardware definitions for daisy petal.

#include <daisy\_petal.h>

## **Public Types**

```
enum Sw {
    SW_1, SW_2, SW_3, SW_4,
    SW_5, SW_6, SW_7, SW_LAST }
enum Knob {
    KNOB_1, KNOB_2, KNOB_3, KNOB_4,
    KNOB_5, KNOB_6, KNOB_LAST }
enum RingLed {
    RING_LED_1, RING_LED_2, RING_LED_3, RING_LED_4,
    RING_LED_5, RING_LED_6, RING_LED_7, RING_LED_8,
    RING_LED_LAST }
enum FootswitchLed {
    FOOTSWITCH_LED_1, FOOTSWITCH_LED_2, FOOTSWITCH_LED_3, FOOTSWITCH_LED_4,
    FOOTSWITCH_LED_LAST }
```

## **Public Member Functions**

```
· DaisyPetal ()
```

- ∼DaisyPetal ()
- void Init ()
- void DelayMs (size\_t del)
- void SetAudioBlockSize (size t size)
- void StartAudio (dsy\_audio\_callback cb)
- void ChangeAudioCallback (dsy\_audio\_callback cb)
- void StartAdc ()
- float AudioSampleRate ()
- size\_t AudioBlockSize ()
- float AudioCallbackRate ()
- void UpdateAnalogControls ()
- float GetKnobValue (Knob k)
- float GetExpression ()
- void DebounceControls ()
- void ClearLeds ()
- void UpdateLeds ()
- void SetRingLed (RingLed idx, float r, float g, float b)
- · void SetFootswitchLed (FootswitchLed idx, float bright)

### **Public Attributes**

- · DaisySeed seed
- Encoder encoder
- AnalogControl knob [KNOB\_LAST]
- AnalogControl expression
- · Switch switches [SW LAST]
- RgbLed ring\_led [8]
- Led footswitch\_led [4]

### 8.10.1 Detailed Description

Helpers and hardware definitions for daisy petal.

The documentation for this class was generated from the following file:

src/daisy\_petal.h

## 8.11 daisy::DaisyPod Class Reference

Class that handles initializing all of the hardware specific to the Daisy Patch Board. Helper funtions are also in place to provide easy access to built-in controls and peripherals.

```
#include <daisy_pod.h>
```

## **Public Types**

- enum Sw { BUTTON\_1, BUTTON\_2, BUTTON\_LAST }
- enum Knob { KNOB\_1, KNOB\_2, KNOB\_LAST }

#### **Public Member Functions**

- void Init ()
- void DelayMs (size\_t del)
- void SetAudioBlockSize (size\_t size)
- void StartAudio (dsy\_audio\_callback cb)
- void ChangeAudioCallback (dsy\_audio\_callback cb)
- void StartAdc ()
- float AudioSampleRate ()
- size\_t AudioBlockSize ()
- float AudioCallbackRate ()
- · void UpdateAnalogControls ()
- float GetKnobValue (Knob k)
- void DebounceControls ()
- void ClearLeds ()
- · void UpdateLeds ()

### **Public Attributes**

- DaisySeed seed
- · Encoder encoder
- · AnalogControl knob1
- AnalogControl knob2
- AnalogControl \* knobs [KNOB\_LAST]
- Switch button1
- Switch button2
- Switch \* buttons [BUTTON\_LAST]
- RgbLed led1
- · RgbLed led2

### 8.11.1 Detailed Description

Class that handles initializing all of the hardware specific to the Daisy Patch Board. Helper funtions are also in place to provide easy access to built-in controls and peripherals.

### Author

Stephen Hensley

Date

November 2019

The documentation for this class was generated from the following file:

src/daisy\_pod.h

## 8.12 daisy::DaisySeed Class Reference

This is the higher-level interface for the Daisy board.

All basic peripheral configuration/initialization is setup here.

```
#include <daisy_seed.h>
```

### **Public Member Functions**

- void Configure ()
- void Init ()
- dsy\_gpio\_pin GetPin (uint8\_t pin\_idx)
- void StartAudio (dsy\_audio\_callback cb)
- void SetLed (bool state)
- void SetTestPoint (bool state)
- float AudioSampleRate ()
- void SetAudioBlockSize (size\_t blocksize)

### **Public Attributes**

- dsy\_sdram\_handle sdram\_handle
- · dsy qspi handle qspi handle
- dsy\_audio\_handle audio\_handle
- · dsy\_sai\_handle sai\_handle
- dsy\_i2c\_handle i2c1\_handle
- dsy\_i2c\_handle i2c2\_handle
- AdcHandle adc
- dsy dac handle dac handle
- UsbHandle usb\_handle

## 8.12.1 Detailed Description

This is the higher-level interface for the Daisy board.

All basic peripheral configuration/initialization is setup here.

The documentation for this class was generated from the following file:

• src/daisy\_seed.h

## 8.13 dsy\_audio\_handle Struct Reference

```
#include <hid_audio.h>
```

### **Public Attributes**

- · size t block size
- dsy\_sai\_handle \* sai
- dsy i2c handle \* dev0 i2c
- dsy\_i2c\_handle \* dev1\_i2c

## 8.13.1 Detailed Description

Simple config struct that holds peripheral drivers.

## 8.13.2 Member Data Documentation

```
8.13.2.1 block_size

size_t dsy_audio_handle::block_size

&

8.13.2.2 dev0_i2c

dsy_i2c_handle* dsy_audio_handle::dev0_i2c

&

8.13.2.3 dev1_i2c

dsy_i2c_handle* dsy_audio_handle::dev1_i2c

&

8.13.2.4 sai

dsy_sai_handle* dsy_audio_handle::sai

&
```

The documentation for this struct was generated from the following file:

• src/hid\_audio.h

## 8.14 dsy\_dac\_handle Struct Reference

```
#include <per_dac.h>
```

### **Public Attributes**

- dsy\_dac\_mode mode
- dsy\_dac\_bitdepth bitdepth
- dsy\_gpio\_pin pin\_config [DSY\_DAC\_CHN\_LAST]

## 8.14.1 Detailed Description

Configuration structure for DAC initialization and settings. pin\_config must be filled out. However, the DACs are pretty consistently on pins PA4, and PA5 across all STM32 MCUs that I've used.

#### 8.14.2 Member Data Documentation

```
8.14.2.1 bitdepth
dsy_dac_bitdepth dsy_dac_handle::bitdepth
&
8.14.2.2 mode
dsy_dac_mode dsy_dac_handle::mode
&
8.14.2.3 pin_config
dsy_gpio_pin dsy_dac_handle::pin_config[DSY_DAC_CHN_LAST]
```

The documentation for this struct was generated from the following file:

• src/per\_dac.h

# 8.15 dsy\_gpio Struct Reference

```
#include <per_gpio.h>
```

## **Public Attributes**

- dsy\_gpio\_pin pin
- dsy\_gpio\_mode mode
- dsy\_gpio\_pull pull

## 8.15.1 Detailed Description

Struct for holding the pin, and configuration

## 8.15.2 Member Data Documentation

```
8.15.2.1 mode

dsy_gpio_mode dsy_gpio::mode

&
8.15.2.2 pin

dsy_gpio_pin dsy_gpio::pin

&
8.15.2.3 pull

dsy_gpio_pull dsy_gpio::pull

&
```

The documentation for this struct was generated from the following file:

• src/per\_gpio.h

# 8.16 dsy\_gpio\_pin Struct Reference

```
#include <daisy_core.h>
```

## **Public Attributes**

- dsy\_gpio\_port port
- uint8\_t pin

## 8.16.1 Detailed Description

Hardware define pins

### 8.16.2 Member Data Documentation

```
8.16.2.1 pin

uint8_t dsy_gpio_pin::pin

number 0-15

8.16.2.2 port

dsy_gpio_port dsy_gpio_pin::port
```

The documentation for this struct was generated from the following file:

· src/daisy\_core.h

# 8.17 dsy\_i2c\_handle Struct Reference

```
#include <per_i2c.h>
```

## **Public Attributes**

&

- dsy\_i2c\_periph periph
- dsy\_gpio\_pin pin\_config [DSY\_I2C\_PIN\_LAST]
- dsy\_i2c\_speed speed

## 8.17.1 Detailed Description

this object will be used to initialize the I2C interface, and can be passed to dev\_drivers that require I2C.

### 8.17.2 Member Data Documentation

```
8.17.2.1 periph

dsy_i2c_periph dsy_i2c_handle::periph

&

8.17.2.2 pin_config

dsy_gpio_pin dsy_i2c_handle::pin_config[DSY_I2C_PIN_LAST]
```

### 8.17.2.3 speed

```
dsy_i2c_speed dsy_i2c_handle::speed
```

&

The documentation for this struct was generated from the following file:

· src/per\_i2c.h

# 8.18 dsy\_qspi\_handle Struct Reference

```
#include <per_qspi.h>
```

### **Public Attributes**

- dsy\_qspi\_mode mode
- dsy\_qspi\_device device
- dsy\_gpio\_pin pin\_config [DSY\_QSPI\_PIN\_LAST]

## 8.18.1 Detailed Description

Configuration structure for interfacing with QSPI Driver

### 8.18.2 Member Data Documentation

```
8.18.2.1 device
```

```
dsy_qspi_device dsy_qspi_handle::device
```

&

### 8.18.2.2 mode

dsy\_qspi\_mode dsy\_qspi\_handle::mode

&

### 8.18.2.3 pin\_config

```
dsy_gpio_pin dsy_qspi_handle::pin_config[DSY_QSPI_PIN_LAST]
```

8

The documentation for this struct was generated from the following file:

· src/per\_qspi.h

## 8.19 dsy\_sai\_handle Struct Reference

```
#include <per_sai.h>
```

### **Public Attributes**

- · dsy\_audio\_sai init
- dsy\_audio\_samplerate samplerate [DSY\_SAI\_LAST]
- dsy\_audio\_bitdepth bitdepth [DSY\_SAI\_LAST]
- dsy audio dir a direction [DSY SAI LAST]
- dsy\_audio\_dir b\_direction [DSY\_SAI\_LAST]
- dsy\_audio\_sync sync\_config [DSY\_SAI\_LAST]
- dsy\_audio\_device device [DSY\_SAI\_LAST]
- dsy\_gpio\_pin sai1\_pin\_config [DSY\_SAI\_PIN\_LAST]
- dsy\_gpio\_pin sai2\_pin\_config [DSY\_SAI\_PIN\_LAST]

### 8.19.1 Detailed Description

&

Configuration structure for SAI contains all above settings, and passes them to internal structure for hardware initialization.

### 8.19.2 Member Data Documentation

```
8.19.2.1 a_direction

dsy_audio_dir dsy_sai_handle::a_direction[DSY_SAI_LAST]

&
8.19.2.2 b_direction

dsy_audio_dir dsy_sai_handle::b_direction[DSY_SAI_LAST]
```

```
8.19.2.3 bitdepth
dsy_audio_bitdepth dsy_sai_handle::bitdepth[DSY_SAI_LAST]
8.19.2.4 device
dsy_audio_device dsy_sai_handle::device[DSY_SAI_LAST]
&
8.19.2.5 init
dsy_audio_sai dsy_sai_handle::init
&
8.19.2.6 sai1_pin_config
dsy_gpio_pin dsy_sai_handle::sail_pin_config[DSY_SAI_PIN_LAST]
&
8.19.2.7 sai2_pin_config
dsy_gpio_pin dsy_sai_handle::sai2_pin_config[DSY_SAI_PIN_LAST]
&
8.19.2.8 samplerate
dsy_audio_samplerate dsy_sai_handle::samplerate[DSY_SAI_LAST]
&
8.19.2.9 sync_config
dsy_audio_sync dsy_sai_handle::sync_config[DSY_SAI_LAST]
&
The documentation for this struct was generated from the following file:
    · src/per_sai.h
```

# 8.20 DSY\_SD\_CardInfoTypeDef Struct Reference

```
#include <util_bsp_sd_diskio.h>
```

## **Public Attributes**

- uint32\_t CardType
- uint32\_t CardVersion
- uint32\_t Class
- uint32\_t RelCardAdd
- uint32\_t BlockNbr
- uint32\_t BlockSize
- uint32\_t LogBlockNbr
- uint32\_t LogBlockSize
- uint32\_t CardSpeed

### 8.20.1 Detailed Description

Functions for handling DisklO via SDMMC These are usually configured through the FatFS driver/interface, and won't need to be accessed directly often.

## 8.20.2 Member Data Documentation

### 8.20.2.1 BlockNbr

```
uint32_t DSY_SD_CardInfoTypeDef::BlockNbr
```

## Specifies the Card Capacity in blocks

## 8.20.2.2 BlockSize

uint32\_t DSY\_SD\_CardInfoTypeDef::BlockSize

## Specifies one block size in bytes

## 8.20.2.3 CardSpeed

uint32\_t DSY\_SD\_CardInfoTypeDef::CardSpeed

### Specifies the card Speed

### 8.20.2.4 CardType

uint32\_t DSY\_SD\_CardInfoTypeDef::CardType

Specifies the card Type

### 8.20.2.5 CardVersion

uint32\_t DSY\_SD\_CardInfoTypeDef::CardVersion

Specifies the card version

### 8.20.2.6 Class

uint32\_t DSY\_SD\_CardInfoTypeDef::Class

Specifies the class of the card class

### 8.20.2.7 LogBlockNbr

uint32\_t DSY\_SD\_CardInfoTypeDef::LogBlockNbr

Specifies the Card logical Capacity in blocks

## 8.20.2.8 LogBlockSize

uint32\_t DSY\_SD\_CardInfoTypeDef::LogBlockSize

Specifies logical block size in bytes

## 8.20.2.9 RelCardAdd

uint32\_t DSY\_SD\_CardInfoTypeDef::RelCardAdd

### Specifies the Relative Card Address

The documentation for this struct was generated from the following file:

· src/util bsp sd diskio.h

## 8.21 dsy\_sdram\_handle Struct Reference

#include <dev\_sdram.h>

## **Public Attributes**

- dsy\_sdram\_state state
- dsy\_gpio\_pin pin\_config [DSY\_SDRAM\_PIN\_LAST]

## 8.21.1 Detailed Description

Configuration struct for passing to initialization

### 8.21.2 Member Data Documentation

```
8.21.2.1 pin_config

dsy_gpio_pin dsy_sdram_handle::pin_config[DSY_SDRAM_PIN_LAST]
&
8.21.2.2 state
```

dsy\_sdram\_state dsy\_sdram\_handle::state

&

The documentation for this struct was generated from the following file:

· src/dev sdram.h

## 8.22 dsy\_sr\_4021\_handle Struct Reference

```
#include <dev_sr_4021.h>
```

## **Public Attributes**

- dsy\_gpio\_pin pin\_config [DSY\_SR\_4021\_PIN\_LAST]
- uint8\_t num\_parallel
- uint8\_t num\_daisychained
- dsy\_gpio cs
- dsy\_gpio clk
- dsy\_gpio data [2]
- uint8\_t states [8 \*1 \*2]

### 8.22.1 Detailed Description

configuration strucutre for 4021 pin config is used to initialize the dsy\_gpio num\_parallel is the number of devices connected that share the same clk/cs, etc. but have independent data num\_daisychained is the number of devices in a daisy-chain configuration

### 8.22.2 Member Data Documentation

```
8.22.2.1 clk
dsy_gpio dsy_sr_4021_handle::clk
clk pin
8.22.2.2 cs
dsy_gpio dsy_sr_4021_handle::cs
cs pin
8.22.2.3 data
dsy_gpio dsy_sr_4021_handle::data[2]
array of data pins
8.22.2.4 num_daisychained
uint8_t dsy_sr_4021_handle::num_daisychained
Number of devices daisy chained
8.22.2.5 num_parallel
uint8_t dsy_sr_4021_handle::num_parallel
number of devices connected
8.22.2.6 pin_config
dsy_gpio_pin dsy_sr_4021_handle::pin_config[DSY_SR_4021_PIN_LAST]
used to initialize the dsy_gpio
```

#### 8.22.2.7 states

```
uint8_t dsy_sr_4021_handle::states[8 * 1 * 2]
```

#### array of states

The documentation for this struct was generated from the following file:

src/dev sr 4021.h

## 8.23 daisy::Encoder Class Reference

Generic Class for handling Quadrature Encoders Inspired/influenced by Mutable Instruments (pichenettes) Encoder classes.

```
#include <hid_encoder.h>
```

### **Public Member Functions**

- void Init (dsy\_gpio\_pin a, dsy\_gpio\_pin b, dsy\_gpio\_pin click, float update\_rate)
- void Debounce ()
- int32\_t Increment () const
- bool RisingEdge () const
- bool FallingEdge () const
- bool Pressed () const
- float TimeHeldMs () const

### 8.23.1 Detailed Description

Generic Class for handling Quadrature Encoders Inspired/influenced by Mutable Instruments (pichenettes) Encoder classes.

Author

Stephen Hensley

Date

December 2019

The documentation for this class was generated from the following file:

· src/hid\_encoder.h

### 8.24 FontDef Struct Reference

#include <util\_oled\_fonts.h>

## **Public Attributes**

- const uint8\_t FontWidth
- uint8\_t FontHeight
- const uint16\_t \* data

## 8.24.1 Detailed Description

Utility for displaying fonts on OLED displays Migrated to work with libdaisy from stm32-ssd1306

**Author** 

afiskon on github. Font struct

### 8.24.2 Member Data Documentation

### 8.24.2.1 data

const uint16\_t\* FontDef::data

Pointer to data font data array

## 8.24.2.2 FontHeight

uint8\_t FontDef::FontHeight

Font height in pixels

## 8.24.2.3 FontWidth

const uint8\_t FontDef::FontWidth

Font width in pixels

The documentation for this struct was generated from the following file:

· src/util\_oled\_fonts.h

# 8.25 daisy::GateIn Class Reference

Generic Class for handling gate inputs through GPIO.

#include <hid\_gatein.h>

## **Public Member Functions**

```
• GateIn ()
```

- ∼GateIn ()
- void Init (dsy\_gpio\_pin \*pin\_cfg)
- bool Trig ()

### 8.25.1 Detailed Description

Generic Class for handling gate inputs through GPIO.

Author

Stephen Hensley

Date

March 2020

## 8.25.2 Constructor & Destructor Documentation

```
8.25.2.1 GateIn()
```

```
daisy::GateIn::GateIn ( ) [inline]
```

**GateIn** Constructor

```
8.25.2.2 \sim GateIn()
```

```
daisy::GateIn::~GateIn ( ) [inline]
```

 $\mathsf{GateIn}{\sim}\,\mathsf{Destructor}$ 

### 8.25.3 Member Function Documentation

```
8.25.3.1 Init()
```

Init Initializes the gate input with specified hardware pin

### 8.25.3.2 Trig()

```
bool daisy::GateIn::Trig ( )
```

Trig Checks current state of gate input.

#### Returns

FALSE if pin is low, and TRUE if high

The documentation for this class was generated from the following file:

· src/hid\_gatein.h

## 8.26 daisy::Led Class Reference

LED Class providing simple Software PWM ability, etc Eventually this will work with hardware PWM, and external LED Driver devices as well.

```
#include <hid_led.h>
```

#### **Public Member Functions**

- void Init (dsy\_gpio\_pin pin, bool invert, float samplerate=1000.0f)
- · void Set (float val)
- void Update ()

### 8.26.1 Detailed Description

LED Class providing simple Software PWM ability, etc Eventually this will work with hardware PWM, and external LED Driver devices as well.

### **Author**

shensley

Date

March 2020

The documentation for this class was generated from the following file:

• src/hid\_led.h

## 8.27 daisy::MidiEvent Struct Reference

```
#include <hid_midi.h>
```

### **Public Member Functions**

- NoteOnEvent AsNoteOn ()
- ControlChangeEvent AsControlChange ()

### **Public Attributes**

- MidiMessageType type
- · int channel
- uint8\_t data [2]

### 8.27.1 Detailed Description

Simple MidiEvent with message type, channel, and data[2] members.

The documentation for this struct was generated from the following file:

• src/hid\_midi.h

## 8.28 daisy::MidiHandler Class Reference

Simple MIDI Handler

Parses bytes from an input into valid MidiEvents.

The MidiEvents fill a FIFO queue that the user can pop messages from.

```
#include <hid_midi.h>
```

### **Public Types**

- enum MidiInputMode { INPUT\_MODE\_NONE = 0x00, INPUT\_MODE\_UART1 = 0x01, INPUT\_MODE\_US

  B\_INT = 0x02, INPUT\_MODE\_USB\_EXT = 0x04 }
- enum MidiOutputMode { OUTPUT\_MODE\_NONE = 0x00, OUTPUT\_MODE\_UART1 = 0x01, OUTPUT\_M
   ODE\_USB\_INT = 0x02, OUTPUT\_MODE\_USB\_EXT = 0x04 }

### **Public Member Functions**

- void Init (MidiInputMode in\_mode, MidiOutputMode out\_mode)
- void StartReceive ()
- void Listen ()
- void Parse (uint8 t byte)
- bool HasEvents () const
- MidiEvent PopEvent ()

### 8.28.1 Detailed Description

Simple MIDI Handler

Parses bytes from an input into valid MidiEvents.

The MidiEvents fill a FIFO queue that the user can pop messages from.

**Author** 

shensley

Date

March 2020

The documentation for this class was generated from the following file:

· src/hid\_midi.h

## 8.29 daisy::NoteOnEvent Struct Reference

```
#include <hid_midi.h>
```

### **Public Attributes**

- · int channel
- uint8\_t note
- · uint8\_t velocity

## 8.29.1 Detailed Description

Struct containing note, and velocity data for a given channel. Can be made from MidiEvent

The documentation for this struct was generated from the following file:

• src/hid\_midi.h

## 8.30 daisy::OledDisplay Class Reference

```
#include <hid_oled_display.h>
```

## **Public Types**

• enum Pins { DATA\_COMMAND, RESET, NUM\_PINS }

### **Public Member Functions**

```
void Init (dsy_gpio_pin *pin_cfg)
```

- void Fill (bool on)
- void DrawPixel (uint8 t x, uint8 t y, bool on)
- char WriteChar (char ch, FontDef font, bool on)
- char WriteString (char \*str, FontDef font, bool on)
- void SetCursor (uint8\_t x, uint8\_t y)
- void Update ()

## 8.30.1 Detailed Description

Human Interface Driver for using an OLED Display (SSD1309) For all bool on arguments: true is on, false is off. Credit to Aleksander Alekseev (github.com/afiskon/stm32-ssd1306) on github for a great starting point. adapted for SSD1309 and H7 by shensley, 2020

The documentation for this class was generated from the following file:

· src/hid\_oled\_display.h

## 8.31 daisy::Parameter Class Reference

```
#include <hid_parameter.h>
```

## **Public Types**

enum Curve {
 LINEAR, EXPONENTIAL, LOGARITHMIC, CUBE,
 LAST }

### **Public Member Functions**

- Parameter ()
- ∼Parameter ()
- void Init (AnalogControl input, float min, float max, Curve curve)
- float Process ()
- float Value ()

### 8.31.1 Detailed Description

Simple parameter mapping tool that takes a 0-1 input from an hid\_ctrl.

The documentation for this class was generated from the following file:

• src/hid\_parameter.h

## 8.32 daisy::RgbLed Class Reference

```
#include <hid_rgb_led.h>
```

### **Public Member Functions**

- void Init (dsy\_gpio\_pin red, dsy\_gpio\_pin green, dsy\_gpio\_pin blue, bool invert)
- void Set (float r, float g, float b)
- void SetColor (Color c)
- void Update ()

## 8.32.1 Detailed Description

3x LEDs configured as an RGB for ease of use.

The documentation for this class was generated from the following file:

· src/hid\_rgb\_led.h

## 8.33 daisy::RingBuffer < T, size > Class Template Reference

```
#include <util_ringbuffer.h>
```

#### **Public Member Functions**

- void Init ()
- size\_t capacity () const
- size\_t writable () const
- size\_t readable () const
- void Write (T v)
- void Overwrite (T v)
- T Read ()
- T ImmediateRead ()
- void Flush ()
- void Swallow (size\_t n)
- void ImmediateRead (T \*destination, size t num elements)
- void Overwrite (const T \*source, size\_t num\_elements)

### 8.33.1 Detailed Description

```
\label{template} \mbox{typename T, size\_t size} > \mbox{class daisy::RingBuffer} < \mbox{T, size} >
```

**Utility Ring Buffer** 

imported from pichenettes/stmlib

The documentation for this class was generated from the following file:

• src/util\_ringbuffer.h

## 8.34 daisy::RingBuffer < T, 0 > Class Template Reference

```
#include <util_ringbuffer.h>
```

### **Public Member Functions**

- void Init ()
- size\_t capacity () const
- size\_t writable () const
- size\_t readable () const
- void Write (T v)
- void Overwrite (T v)
- T Read ()
- T ImmediateRead ()
- void Flush ()
- void ImmediateRead (T \*destination, size\_t num\_elements)
- void Overwrite (const T \*source, size\_t num\_elements)

### 8.34.1 Detailed Description

```
template<typename T> class daisy::RingBuffer< T, 0 >
```

Utility Ring Buffer imported from pichenettes/stmlib

The documentation for this class was generated from the following file:

• src/util\_ringbuffer.h

## 8.35 daisy::SdmmcHandler Class Reference

```
#include <per_sdmmc.h>
```

### **Public Member Functions**

• void Init ()

## 8.35.1 Detailed Description

Configuration for interfacing with SD cards. Currently only supports operation using FatFS filesystem

The documentation for this class was generated from the following file:

• src/per\_sdmmc.h

## 8.36 daisy::SdmmcHandlerInit Struct Reference

```
#include <per_sdmmc.h>
```

### **Public Attributes**

- SdmmcBitWidth bitdepth
- · SdmmcSpeed speed

## 8.36.1 Detailed Description

Structure for setting the options above. Used to intiailize SdmmcHandler

The documentation for this struct was generated from the following file:

· src/per\_sdmmc.h

## 8.37 ShiftRegister595 Class Reference

```
Device Driver for 8-bit shift register.
CD74HC595 - 8-bit serial to parallel output shift.
```

```
#include <dev_sr_595.h>
```

### **Public Types**

enum Pins { PIN\_LATCH, PIN\_CLK, PIN\_DATA, NUM\_PINS }

### **Public Member Functions**

- void Init (dsy\_gpio\_pin \*pin\_cfg, size\_t num\_daisy\_chained=1)
- void Set (uint8 t idx, bool state)
- void Write ()

### 8.37.1 Detailed Description

Device Driver for 8-bit shift register. CD74HC595 - 8-bit serial to parallel output shift.

**Author** 

shensley

Date

May 2020

## 8.37.2 Member Enumeration Documentation

### 8.37.2.1 Pins

```
enum ShiftRegister595::Pins
```

The following pins correspond to the hardware connections to the 595.

### Enumerator

PIN_CLK	LATCH corresonds to Pin 12 "RCLK"
PIN_DATA	CLK corresponds to Pin 11 "SRCLK"
NUM_PINS	DATA corresponds to Pin 14 "SER"

### 8.37.3 Member Function Documentation

### 8.37.3.1 Init()

Initializes the GPIO, and data for the ShiftRegister

### **Parameters**

pin_cfg	is an array of dsy_gpio_pin corresponding the the Pins enum above.
num_daisy_chained	(default = 1) is the number of 595 devices daisy chained together.

### 8.37.3.2 Set()

Sets the state of the specified output.

### **Parameters**

idx The index starts with QA on the first device and ends with Q		The index starts with QA on the first device and ends with QH on the last device.
	state	A true state will set the output HIGH, while a false state will set the output LOW.

### 8.37.3.3 Write()

```
void ShiftRegister595::Write ( )
```

Writes the states of shift register out to the connected devices.

The documentation for this class was generated from the following file:

```
    src/dev_sr_595.h
```

## 8.38 daisy::SpiHandle Class Reference

```
#include <per_spi.h>
```

### **Public Member Functions**

- void Init ()
- void BlockingTransmit (uint8\_t \*buff, size\_t size)

### 8.38.1 Detailed Description

Handler for serial peripheral interface

The documentation for this class was generated from the following file:

· src/per\_spi.h

## 8.39 daisy::Switch Class Reference

```
#include <hid_switch.h>
```

## **Public Types**

- enum Type { TYPE\_TOGGLE, TYPE\_MOMENTARY }
- enum Polarity { POLARITY\_NORMAL, POLARITY\_INVERTED }
- enum Pull { PULL\_UP, PULL\_DOWN, PULL\_NONE }

### **Public Member Functions**

- void Init (dsy\_gpio\_pin pin, float update\_rate, Type t, Polarity pol, Pull pu)
- void Init (dsy\_gpio\_pin pin, float update\_rate)
- void Debounce ()
- bool RisingEdge () const
- bool FallingEdge () const
- bool Pressed () const
- float TimeHeldMs () const

### 8.39.1 Detailed Description

Generic Class for handling momentary/latching switches Inspired/influenced by Mutable Instruments (pichenettes) Switch classes

**Author** 

Stephen Hensley

Date

December 2019

The documentation for this class was generated from the following file:

· src/hid\_switch.h

## 8.40 daisy::UartHandler Class Reference

```
#include <per_uart.h>
```

### **Public Member Functions**

```
void Init ()
int PollReceive (uint8_t *buff, size_t size, uint32_t timeout)
int StartRx (size_t size)
bool RxActive ()
int FlushRx ()
int PollTx (uint8_t *buff, size_t size)
```

- uint8\_t PopRx ()
- size\_t Readable ()
- int CheckError ()

### 8.40.1 Detailed Description

**Uart Peripheral** 

Author

shensley

Date

March 2020

The documentation for this class was generated from the following file:

· src/per\_uart.h

### 8.41 UsbHandle Class Reference

Interface for initializing and using the USB Peripherals on the daisy.

```
#include <hid_usb.h>
```

## **Public Types**

```
    enum UsbPeriph {
        FS_INTERNAL, FS_EXTERNAL, FS_BOTH, FS_INTERNAL,
        FS_EXTERNAL, FS_BOTH }
    enum UsbPeriph {
        FS_INTERNAL, FS_EXTERNAL, FS_BOTH, FS_INTERNAL,
        FS_EXTERNAL, FS_BOTH }
    typedef void(* ReceiveCallback) (uint8_t *buff, uint32_t *len)
```

typedef void(\* ReceiveCallback) (uint8\_t \*buff, uint32\_t \*len)

### **Public Member Functions**

- void Init (UsbPeriph dev)
- void TransmitInternal (uint8\_t \*buff, size\_t size)
- void TransmitExternal (uint8\_t \*buff, size\_t size)
- void SetReceiveCallback (ReceiveCallback cb)
- void Init (UsbPeriph dev)
- void TransmitInternal (uint8 t \*buff, size t size)
- void TransmitExternal (uint8\_t \*buff, size\_t size)
- void SetReceiveCallback (ReceiveCallback cb)

### 8.41.1 Detailed Description

Interface for initializing and using the USB Peripherals on the daisy.

**Author** 

Stephen Hensley

Date

December 2019

## 8.41.2 Member Typedef Documentation

```
8.41.2.1 ReceiveCallback [1/2]
```

```
typedef void(* UsbHandle::ReceiveCallback) (uint8_t *buff, uint32_t *len)
```

Function called upon reception of a buffer

```
8.41.2.2 ReceiveCallback [2/2]
```

```
typedef void(* UsbHandle::ReceiveCallback) (uint8_t *buff, uint32_t *len)
```

Function called upon reception of a buffer

### 8.41.3 Member Enumeration Documentation

```
8.41.3.1 UsbPeriph [1/2]
```

```
enum UsbHandle::UsbPeriph
```

Specified which of the two USB Peripherals to initialize.

### Enumerator

FS_INTERNAL	Internal pin
FS_EXTERNAL	FS External D+ pin is Pin 38 (GPIO32). FS External D- pin is Pin 37 (GPIO31)
FS_BOTH	Both
FS_INTERNAL	Internal pin
FS_EXTERNAL	FS External D+ pin is Pin 38 (GPIO32). FS External D- pin is Pin 37 (GPIO31)
FS_BOTH	Both

## **8.41.3.2** UsbPeriph [2/2]

enum UsbHandle::UsbPeriph

Specified which of the two USB Peripherals to initialize.

### Enumerator

FS_INTERNAL	Internal pin
FS_EXTERNAL	FS External D+ pin is Pin 38 (GPIO32). FS External D- pin is Pin 37 (GPIO31)
FS_BOTH	Both
FS_INTERNAL	Internal pin
FS_EXTERNAL	FS External D+ pin is Pin 38 (GPIO32). FS External D- pin is Pin 37 (GPIO31)
FS_BOTH	Both

## 8.41.4 Member Function Documentation

Initializes the specified peripheral(s) as USB CDC Devices

### **Parameters**

dev Device to initialize

```
8.41.4.2 Init() [2/2]
```

void UsbHandle::Init (

```
UsbPeriph dev )
```

Initializes the specified peripheral(s) as USB CDC Devices

### **Parameters**

```
dev Device to initialize
```

### 8.41.4.3 SetReceiveCallback() [1/2]

```
\begin{tabular}{ll} \beg
```

sets the callback to be called upon reception of new data

### **Parameters**

cb Function to serve as callback

### 8.41.4.4 SetReceiveCallback() [2/2]

sets the callback to be called upon reception of new data

### **Parameters**

cb | Function to serve as callback

### **8.41.4.5** TransmitExternal() [1/2]

Transmits a buffer of 'size' bytes from a USB port connected to the external USB Pins of the daisy seed.

### **Parameters**

buff	Buffer to transmit
size	Buffer size

### **8.41.4.6** TransmitExternal() [2/2]

Transmits a buffer of 'size' bytes from a USB port connected to the external USB Pins of the daisy seed.

#### **Parameters**

buff	Buffer to transmit
size	Buffer size

### **8.41.4.7** TransmitInternal() [1/2]

Transmits a buffer of 'size' bytes from the on board USB FS port.

## **Parameters**

buff	Buffer to transmit
size	Buffer size

## **8.41.4.8 TransmitInternal()** [2/2]

Transmits a buffer of 'size' bytes from the on board USB FS port.

#### **Parameters**

buff	Buffer to transmit
size	Buffer size

The documentation for this class was generated from the following file:

• src/hid\_usb.h

# 8.42 WAV\_FormatTypeDef Struct Reference

```
#include <util_wav_format.h>
```

### **Public Attributes**

- uint32\_t Chunkld
- uint32 t FileSize
- uint32 t FileFormat
- uint32\_t SubChunk1ID
- uint32\_t SubChunk1Size
- uint16\_t AudioFormat
- uint16\_t NbrChannels
- uint32\_t SampleRate
- uint32\_t ByteRate
- uint16\_t BlockAlign
- uint16\_t BitPerSample
- uint32\_t SubChunk2ID
- uint32\_t SubCHunk2Size

### 8.42.1 Detailed Description

Helper struct for handling the WAV file format

### 8.42.2 Member Data Documentation

### 8.42.2.1 AudioFormat

```
uint16_t WAV_FormatTypeDef::AudioFormat
```

&

### 8.42.2.2 BitPerSample

uint16\_t WAV\_FormatTypeDef::BitPerSample

&

### 8.42.2.3 BlockAlign

uint16\_t WAV\_FormatTypeDef::BlockAlign

&

```
8.42.2.4 ByteRate
uint32_t WAV_FormatTypeDef::ByteRate
8.42.2.5 Chunkld
uint32_t WAV_FormatTypeDef::ChunkId
8.42.2.6 FileFormat
uint32_t WAV_FormatTypeDef::FileFormat
8.42.2.7 FileSize
uint32_t WAV_FormatTypeDef::FileSize
8.42.2.8 NbrChannels
uint16_t WAV_FormatTypeDef::NbrChannels
&
8.42.2.9 SampleRate
uint32_t WAV_FormatTypeDef::SampleRate
&
8.42.2.10 SubChunk1ID
uint32_t WAV_FormatTypeDef::SubChunk1ID
&
8.42.2.11 SubChunk1Size
uint32_t WAV_FormatTypeDef::SubChunk1Size
```

&

## 8.42.2.12 SubChunk2ID

uint32\_t WAV\_FormatTypeDef::SubChunk2ID

&

### 8.42.2.13 SubCHunk2Size

uint32\_t WAV\_FormatTypeDef::SubCHunk2Size

&

The documentation for this struct was generated from the following file:

• src/util\_wav\_format.h

# 8.43 daisy::WavFileInfo Struct Reference

#include <hid\_wavplayer.h>

### **Public Attributes**

- WAV\_FormatTypeDef raw\_data
- char name [256]

## 8.43.1 Detailed Description

Struct containing details of Wav File.

### 8.43.2 Member Data Documentation

### 8.43.2.1 name

char daisy::WavFileInfo::name[256]

## Wav filename

### 8.43.2.2 raw\_data

```
WAV_FormatTypeDef daisy::WavFileInfo::raw_data
```

Raw wav data

The documentation for this struct was generated from the following file:

· src/hid\_wavplayer.h

# 8.44 daisy::WavPlayer Class Reference

```
#include <hid_wavplayer.h>
```

### **Public Member Functions**

- void Init ()
- int Open (size\_t sel)
- int Close ()
- int16\_t Stream ()
- void Prepare ()
- void Restart ()
- void SetLooping (bool loop)
- · bool GetLooping () const
- size\_t GetNumberFiles () const
- size\_t GetCurrentFile () const

### 8.44.1 Detailed Description

Wav Player that will load .wav files from an SD Card, and then provide a method of accessing the samples with double-buffering.

## 8.44.2 Member Function Documentation

### 8.44.2.1 Close()

```
int daisy::WavPlayer::Close ( )
```

Closes whatever file is currently open.

Returns

&

#### 8.44.2.2 GetCurrentFile()

```
size_t daisy::WavPlayer::GetCurrentFile ( ) const [inline]
```

#### Returns

currently selected file.

## 8.44.2.3 GetLooping()

```
bool daisy::WavPlayer::GetLooping ( ) const [inline]
```

#### Returns

Whether the WavPlayer is looping or not.

#### 8.44.2.4 GetNumberFiles()

```
size_t daisy::WavPlayer::GetNumberFiles ( ) const [inline]
```

## Returns

The number of files loaded by the WavPlayer

## 8.44.2.5 Init()

```
void daisy::WavPlayer::Init ( )
```

Initializes the WavPlayer, loading up to max\_files of wav files from an SD Card.

#### 8.44.2.6 Open()

Opens the file at index sel for reading.

#### **Parameters**

sel File to open

218 Class Documentation

#### 8.44.2.7 Prepare()

```
void daisy::WavPlayer::Prepare ( )
```

Collects buffer for playback when needed.

#### 8.44.2.8 Restart()

```
void daisy::WavPlayer::Restart ( )
```

Resets the playback position to the beginning of the file immediately

## 8.44.2.9 SetLooping()

```
void daisy::WavPlayer::SetLooping (
          bool loop ) [inline]
```

Sets whether or not the current file will repeat after completing playback.

#### **Parameters**

```
loop To loop or not to loop.
```

## 8.44.2.10 Stream()

```
int16_t daisy::WavPlayer::Stream ( )
```

#### Returns

The next sample if playing, otherwise returns 0

The documentation for this class was generated from the following file:

• src/hid\_wavplayer.h

# **Chapter 9**

## **File Documentation**

#### 9.1 src/ffconf.h File Reference

```
#include "util_bsp_sd_diskio.h"
#include <stdlib.h>
```

#### **Macros**

- #define \_FFCONF 68300
- #define \_FS\_READONLY 0
- #define \_FS\_MINIMIZE 0
- #define \_USE\_STRFUNC 2
- #define \_USE\_FIND 0
- #define \_USE\_MKFS 1
- #define \_USE\_FASTSEEK 1
- #define \_USE\_EXPAND 0
- #define \_USE\_CHMOD 0
- #define \_USE\_LABEL 0
- #define \_USE\_FORWARD 0
- #define \_CODE\_PAGE 850
- #define \_USE\_LFN 1
- #define \_MAX\_LFN 255
- #define \_LFN\_UNICODE 0
- #define \_STRF\_ENCODE 3
- #define \_FS\_RPATH 0
- #define \_VOLUMES 1
- #define \_STR\_VOLUME\_ID 0
- #define \_VOLUME\_STRS
- #define \_MULTI\_PARTITION 0
- #define \_MIN\_SS 512
- #define \_MAX\_SS 512
- #define \_USE\_TRIM 0
- #define \_FS\_NOFSINFO 0
- #define \_FS\_TINY 0
- #define \_FS\_EXFAT 0
- #define \_FS\_NORTC 0

- #define \_NORTC\_MON 6
- #define \_NORTC\_MDAY 4
- #define NORTC YEAR 2015
- #define \_FS\_LOCK 2
- #define FS REENTRANT 0
- #define FS TIMEOUT 1000
- #define \_SYNC\_t osSemaphoreId
- #define ff\_malloc malloc
- · #define ff free free

## 9.1.1 Detailed Description

Further fatfs support.

#### 9.1.2 Macro Definition Documentation

#### 9.1.2.1 \_CODE\_PAGE

#define \_CODE\_PAGE 850

This option specifies the OEM code page to be used on the target system. / Incorrect setting of the code page can cause a file open failure. // 1 - ASCII (No extended character. Non-LFN cfg. only) / 437 - U.S. / 720 - Arabic / 737 - Greek / 771 - KBL / 775 - Baltic / 850 - Latin 1 / 852 - Latin 2 / 855 - Cyrillic / 857 - Turkish / 860 - Portuguese / 861 - Icelandic / 862 - Hebrew / 863 - Canadian French / 864 - Arabic / 865 - Nordic / 866 - Russian / 869 - Greek 2 / 932 - Japanese (DBCS) / 936 - Simplified Chinese (DBCS) / 949 - Korean (DBCS) / 950 - Traditional Chinese (DBCS)

9.1.2.2 \_FFCONF

#define \_FFCONF 68300

FatFs - Generic FAT file system module R0.12c (C)ChaN, 2017

Attention

© Copyright (c) 2019 STMicroelectronics. All rights reserved.

This software component is licensed by ST under Ultimate Liberty license SLA0044, the "License"; You may not use this file except in compliance with the License. You may obtain a copy of the License at: www.st.com/SLA0044 $\leftarrow$  Revision ID

#### 9.1.2.3 \_FS\_EXFAT

```
#define _FS_EXFAT 0
```

This option switches support of exFAT file system. (0:Disable or 1:Enable) / When enable exFAT, also LFN needs to be enabled. ( USE LFN  $\geq$ = 1) / Note that enabling exFAT discards C89 compatibility.

#### 9.1.2.4 \_FS\_LOCK

```
#define _FS_LOCK 2
```

0:Disable or >=1:Enable The option \_FS\_LOCK switches file lock function to control duplicated file open / and illegal operation to open objects. This option must be 0 when \_FS\_READONLY / is 1. // 0: Disable file lock function. To avoid volume corruption, application program / should avoid illegal open, remove and rename to the open objects. / >0: Enable file lock function. The value defines how many files/sub-directories / can be opened simultaneously under file lock control. Note that the file / lock control is independent of re-entrancy.

#### 9.1.2.5 \_FS\_MINIMIZE

```
#define _FS_MINIMIZE 0
```

0 to 3 This option defines minimization level to remove some basic API functions. // 0: All basic functions are enabled. / 1: f\_stat(), f\_getfree(), f\_unlink(), f\_mkdir(), f\_truncate() and f\_rename() / are removed. / 2: f\_opendir(), f\_readdir() and f\_closedir() are removed in addition to 1. / 3: f\_lseek() function is removed in addition to 2.

#### 9.1.2.6 \_FS\_NOFSINFO

```
#define _FS_NOFSINFO 0
```

0,1,2 or 3 If you need to know correct free space on the FAT32 volume, set bit 0 of this / option, and f\_getfree() function at first time after volume mount will force / a full FAT scan. Bit 1 controls the use of last allocated cluster number. // bit0=0: Use free cluster count in the FSINFO if available. / bit0=1: Do not trust free cluster count in the FSINFO. / bit1=0: Use last allocated cluster number in the FSINFO if available. / bit1=1: Do not trust last allocated cluster number in the FSINFO.

#### 9.1.2.7 \_FS\_NORTC

```
#define _FS_NORTC 0
```

&

#### 9.1.2.8 FS\_READONLY

```
#define _FS_READONLY 0
```

0:Read/Write or 1:Read only This option switches read-only configuration. (0:Read/Write or 1:Read-only) / Read-only configuration removes writing API functions, f\_write(), f\_sync(), / f\_unlink(), f\_mkdir(), f\_chmod(), f\_rename(), f\_truncate(), f\_getfree() / and optional writing functions as well.

#### 9.1.2.9 \_FS\_REENTRANT

```
#define _FS_REENTRANT 0
```

0:Disable or 1:Enable

#### 9.1.2.10 \_FS\_RPATH

```
#define _FS_RPATH 0
```

0 to 2 This option configures support of relative path. // 0: Disable relative path and remove related functions. / 1: Enable relative path. f\_chdir() and f\_chdrive() are available. / 2: f\_getcwd() function is available in addition to 1.

#### 9.1.2.11 \_FS\_TIMEOUT

```
#define _FS_TIMEOUT 1000
```

Timeout period in unit of time ticks

#### 9.1.2.12 \_FS\_TINY

```
#define _FS_TINY 0
```

0:Normal or 1:Tiny This option switches tiny buffer configuration. (0:Normal or 1:Tiny) / At the tiny configuration, size of file object (FIL) is reduced \_MAX\_SS bytes. / Instead of private sector buffer eliminated from the file object, common sector / buffer in the file system object (FATFS) is used for the file data transfer.

## 9.1.2.13 \_LFN\_UNICODE

```
#define _LFN_UNICODE 0
```

0:ANSI/OEM or 1:Unicode This option switches character encoding on the API. (0:ANSI/OEM or 1:UTF-16) / To use Unicode string for the path name, enable LFN and set  $\_LFN\_UNICODE = 1$ . / This option also affects behavior of string I/O functions.

## 9.1.2.14 \_MAX\_LFN

```
#define _MAX_LFN 255
```

Maximum LFN length to handle (12 to 255) The \_USE\_LFN switches the support of long file name (LFN). // 0: Disable support of LFN. \_MAX\_LFN has no effect. / 1: Enable LFN with static working buffer on the BSS. Always NOT thread-safe. / 2: Enable LFN with dynamic working buffer on the STACK. / 3: Enable LFN with dynamic working buffer on the HEAP. // To enable the LFN, Unicode handling functions (option/unicode.c) must be added / to the project. The working buffer occupies (\_MAX\_LFN + 1) \* 2 bytes and / additional 608 bytes at exFAT enabled. \_MAX\_LFN can be in range from 12 to 255. / It should be set 255 to support full featured LFN operations. / When use stack for the working buffer, take care on stack overflow. When use heap / memory for the working buffer, memory management functions, ff\_memalloc() and / ff\_memfree(), must be added to the project.

```
9.1.2.15 _MAX_SS
```

```
#define _MAX_SS 512
```

512, 1024, 2048 or 4096 These options configure the range of sector size to be supported. (512, 1024, / 2048 or 4096) Always set both 512 for most systems, all type of memory cards and / harddisk. But a larger value may be required for on-board flash memory and some / type of optical media. When \_MAX\_SS is larger than \_MIN\_SS, FatFs is configured / to variable sector size and GET\_SECTOR\_SIZE command must be implemented to the / disk\_ioctl() function.

```
9.1.2.16 _MIN_SS
```

```
#define _MIN_SS 512
```

512, 1024, 2048 or 4096

#### 9.1.2.17 \_MULTI\_PARTITION

```
#define _MULTI_PARTITION 0
```

0:Single partition, 1:Multiple partition This option switches support of multi-partition on a physical drive. / By default (0), each logical drive number is bound to the same physical drive / number and only an FAT volume found on the physical drive will be mounted. / When multi-partition is enabled (1), each logical drive number can be bound to / arbitrary physical drive and partition listed in the VolToPart[]. Also f\_fdisk() / function will be available.

#### 9.1.2.18 NORTC\_MDAY

```
#define _NORTC_MDAY 4
```

&

#### 9.1.2.19 \_NORTC\_MON

```
#define _NORTC_MON 6
```

&

#### 9.1.2.20 \_NORTC\_YEAR

```
#define _NORTC_YEAR 2015
```

The option \_FS\_NORTC switches timestamp function. If the system does not have / any RTC function or valid timestamp is not needed, set \_FS\_NORTC = 1 to disable / the timestamp function. All objects modified by FatFs will have a fixed timestamp / defined by \_NORTC\_MON, \_NORTC\_MDAY and \_NORTC\_YEAR in local time. / To enable timestamp function (\_FS\_NORTC = 0), get\_fattime() function need to be / added to the project to get current time form real-time clock. \_NORTC\_MON, / \_NORTC\_MDAY and \_NORTC\_YEAR have no effect. / These options have no effect at read-only configuration (\_FS\_READONLY = 1).

```
9.1.2.21 _STR_VOLUME_ID
```

```
#define _STR_VOLUME_ID 0
```

0:Use only 0-9 for drive ID, 1:Use strings for drive ID

```
9.1.2.22 _STRF_ENCODE
```

```
#define _STRF_ENCODE 3
```

When  $\_$ LFN $\_$ UNICODE == 1, this option selects the character encoding ON THE FILE to / be read/written via string I/O functions, f $\_$ gets(), f $\_$ putc(), f $\_$ puts and f $\_$ printf(). // 0: ANSI/OEM / 1: UTF-16LE / 2: UTF-16BE / 3: UTF-8 // This option has no effect when  $\_$ LFN $\_$ UNICODE == 0.

```
9.1.2.23 _SYNC_t
```

```
#define _SYNC_t osSemaphoreId
```

The option \_FS\_REENTRANT switches the re-entrancy (thread safe) of the FatFs / module itself. Note that regardless of this option, file access to different / volume is always re-entrant and volume control functions, f\_mount(), f\_mkfs() / and f\_fdisk() function, are always not re-entrant. Only file/directory access / to the same volume is under control of this function. / / 0: Disable re-entrancy. \_FS\_TIMEOUT and \_SYNC\_t have no effect. / 1: Enable re-entrancy. Also user provided synchronization handlers, / ff\_req\_grant(), ff\_rel\_grant(), ff\_del\_syncobj() and ff\_cre\_syncobj() / function, must be added to the project. Samples are available in / option/syscall.c. // The \_FS \_ \_TIMEOUT defines timeout period in unit of time tick. / The \_SYNC\_t defines O/S dependent sync object type. e.g. HANDLE, ID, OS\_EVENT\*, / SemaphoreHandle\_t and etc.. A header file for O/S definitions needs to be / included somewhere in the scope of ff.h.

```
9.1.2.24 _USE_CHMOD
```

```
#define _USE_CHMOD 0
```

This option switches attribute manipulation functions,  $f_chmod()$  and  $f_utime()$ . / (0:Disable or 1:Enable) Also  $_F \leftarrow S_READONLY$  needs to be 0 to enable this option.

```
9.1.2.25 _USE_EXPAND
```

```
#define _USE_EXPAND 0
```

This option switches f\_expand function. (0:Disable or 1:Enable)

#### 9.1.2.26 \_USE\_FASTSEEK

```
#define _USE_FASTSEEK 1
```

This option switches fast seek feature. (0:Disable or 1:Enable)

```
9.1.2.27 _USE_FIND
```

```
#define _USE_FIND 0
```

This option switches filtered directory read functions, f\_findfirst() and / f\_findnext(). (0:Disable, 1:Enable 2:Enable with matching altname[] too)

```
9.1.2.28 _USE_FORWARD
```

```
#define _USE_FORWARD 0
```

This option switches f forward() function. (0:Disable or 1:Enable)

```
9.1.2.29 _USE_LABEL
```

```
#define _USE_LABEL 0
```

This option switches volume label functions, f\_getlabel() and f\_setlabel(). / (0:Disable or 1:Enable)

```
9.1.2.30 _USE_LFN
```

```
#define _USE_LFN 1
```

0 to 3

#### 9.1.2.31 \_USE\_MKFS

```
#define _USE_MKFS 1
```

This option switches f\_mkfs() function. (0:Disable or 1:Enable)

#### 9.1.2.32 USE STRFUNC

```
#define _USE_STRFUNC 2
```

0:Disable or 1-2:Enable This option switches string functions, f\_gets(), f\_putc(), f\_puts() and / f\_printf(). // 0: Disable string functions. / 1: Enable without LF-CRLF conversion. / 2: Enable with LF-CRLF conversion.

#### 9.1.2.33 \_USE\_TRIM

```
#define _USE_TRIM 0
```

This option switches support of ATA-TRIM. (0:Disable or 1:Enable) / To enable Trim function, also CTRL\_TRIM command should be implemented to the / disk\_ioctl() function.

#### 9.1.2.34 \_VOLUME\_STRS

```
#define _VOLUME_STRS
```

#### Value:

```
"RAM", "NAND", "CF", "SD1", "SD2", "USB1", "USB2", \
"USB3"
```

\_STR\_VOLUME\_ID switches string support of volume ID. / When \_STR\_VOLUME\_ID is set to 1, also pre-defined strings can be used as drive / number in the path name. \_VOLUME\_STRS defines the drive ID strings for each / logical drives. Number of items must be equal to \_VOLUMES. Valid characters for / the drive ID strings are: A-Z and 0-9.

#### 9.1.2.35 \_VOLUMES

```
#define _VOLUMES 1
```

Number of volumes (logical drives) to be used.

#### 9.1.2.36 ff\_free

```
#define ff_free free
```

define the ff\_malloc ff\_free macros as standard malloc free

#### 9.1.2.37 ff\_malloc

```
#define ff_malloc malloc
```

define the ff\_malloc ff\_free macros as standard malloc free

## 9.2 src/hid\_gatein.h File Reference

```
#include "per_gpio.h"
```

### **Classes**

· class daisy::GateIn

Generic Class for handling gate inputs through GPIO.

#### **Namespaces**

daisy

Hardware defines and helpers for daisy field platform.

## 9.3 src/hid\_wavplayer.h File Reference

```
#include "daisy_core.h"
#include "util_wav_format.h"
```

#### **Classes**

- · struct daisy::WavFileInfo
- class daisy::WavPlayer

## **Namespaces**

daisy

Hardware defines and helpers for daisy field platform.

#### **Macros**

- #define DSY\_WAVPLAYER\_H
- #define WAV\_FILENAME\_MAX 256

#### 9.3.1 Macro Definition Documentation

#### 9.3.1.1 DSY\_WAVPLAYER\_H

```
#define DSY_WAVPLAYER_H
```

Macro

## 9.3.1.2 WAV\_FILENAME\_MAX

```
#define WAV_FILENAME_MAX 256
```

Maximum LFN (set to same in FatFs (ffconf.h)

## 9.4 src/usbd\_cdc\_if.h File Reference

```
: Header for usbd_cdc_if.c file.
#include "usbd_cdc.h"
```

## **Typedefs**

• typedef void(\* CDC\_ReceiveCallback) (uint8\_t \*buf, uint32\_t \*size)

#### **Functions**

```
• void CDC_Set_Rx_Callback_FS (CDC_ReceiveCallback cb)
```

- uint8\_t CDC\_Transmit\_FS (uint8\_t \*Buf, uint16\_t Len)
- uint8\_t CDC\_Transmit\_HS (uint8\_t \*Buf, uint16\_t Len)

#### **Variables**

```
• USBD_CDC_ItfTypeDef USBD_Interface_fops_FS
```

• USBD\_CDC\_ltfTypeDef USBD\_Interface\_fops\_HS

## 9.4.1 Detailed Description

: Header for usbd\_cdc\_if.c file.

#### Version

: v1.0\_Cube

Attention

© Copyright (c) 2019 STMicroelectronics. All rights reserved.

This software component is licensed by ST under Ultimate Liberty license SLA0044, the "License"; You may not use this file except in compliance with the License. You may obtain a copy of the License at: www.st.com/SLA0044

## 9.5 src/usbd\_conf.h File Reference

: Header for usbd\_conf.c file.

```
#include <stdio.h>
#include <stdlib.h>
#include <string.h>
#include "stm32h7xx.h"
#include "stm32h7xx_hal.h"
```

#### **Macros**

- #define USBD\_MAX\_NUM\_INTERFACES 1U
- #define USBD MAX NUM CONFIGURATION 1U
- #define USBD\_MAX\_STR\_DESC\_SIZ 512U
- #define USBD\_SUPPORT\_USER\_STRING 0U
- #define USBD\_DEBUG\_LEVEL 3U
- #define USBD LPM ENABLED 0U
- #define USBD\_SELF\_POWERED 1U
- #define DEVICE\_FS 0
- #define DEVICE\_HS 1
- #define USBD\_malloc malloc
- #define USBD free free
- #define USBD\_memset memset
- #define USBD\_memcpy memcpy
- #define USBD\_Delay HAL\_Delay
- #define USBD UsrLog(...)
- #define USBD\_ErrLog(...)
- #define USBD\_DbgLog(...)

#### 9.5.1 Detailed Description

: Header for usbd\_conf.c file.

Version

: v1.0\_Cube

Attention

© Copyright (c) 2019 STMicroelectronics. All rights reserved.

This software component is licensed by ST under Ultimate Liberty license SLA0044, the "License"; You may not use this file except in compliance with the License. You may obtain a copy of the License at: www.st.com/SLA0044

## 9.6 src/usbd\_desc.h File Reference

: Header for usbd\_conf.c file.

#include "usbd\_def.h"

#### **Macros**

- #define DEVICE\_ID1 (UID\_BASE)
- #define DEVICE\_ID2 (UID\_BASE + 0x4)
- #define DEVICE ID3 (UID BASE + 0x8)
- #define USB\_SIZ\_STRING\_SERIAL 0x1A

#### **Variables**

- USBD\_DescriptorsTypeDef HS\_Desc
- USBD\_DescriptorsTypeDef FS\_Desc

## 9.6.1 Detailed Description

: Header for usbd\_conf.c file.

Version

: v1.0\_Cube

Attention

© Copyright (c) 2019 STMicroelectronics. All rights reserved.

This software component is licensed by ST under Ultimate Liberty license SLA0044, the "License"; You may not use this file except in compliance with the License. You may obtain a copy of the License at: www.st.com/SLA0044

# Index

_CODE_PAGE	ffconf.h, 224
ffconf.h, 220	_USE_FASTSEEK
_FFCONF	ffconf.h, 224
ffconf.h, 220	_USE_FIND
FS EXFAT	ffconf.h, 224
ffconf.h, 220	USE FORWARD
FS LOCK	 ffconf.h, 225
ffconf.h, 221	USE LABEL
_FS_MINIMIZE	ffconf.h, 225
ffconf.h, 221	USE LFN
•	
_FS_NOFSINFO	USE MKFS
ffconf.h, 221	ffconf.h, 225
_FS_NORTC	
ffconf.h, 221	_USE_STRFUNC
_FS_READONLY	ffconf.h, 225
ffconf.h, 221	_USE_TRIM
_FS_REENTRANT	ffconf.h, 225
ffconf.h, 221	_VOLUMES
_FS_RPATH	ffconf.h, 226
ffconf.h, 222	_VOLUME_STRS
FS TIMEOUT	ffconf.h, 225
ffconf.h, 222	$\sim$ AnalogControl
FS TINY	CONTROLS, 23
ffconf.h, 222	$\sim$ DaisyPatch
LFN UNICODE	DAISY, 125
ffconf.h, 222	$\sim$ DaisyPetal
	DAISY, 125
_MAX_LFN	$\sim$ GateIn
ffconf.h, 222	daisy::GateIn, 198
_MAX_SS	$\sim$ Parameter
ffconf.h, 222	CONTROLS, 23
_MIN_SS	·
ffconf.h, 223	a_direction
_MULTI_PARTITION	dsy_sai_handle, 190
ffconf.h, 223	AUDIO, 13
_NORTC_MDAY	dsy_audio_callback, 13
ffconf.h, 223	dsy audio enter bypass, 14
_NORTC_MON	dsy_audio_exit_bypass, 14
ffconf.h, 223	dsy_audio_init, 14
_NORTC_YEAR	dsy audio mc callback, 13
ffconf.h, 223	dsy_audio_passthru, 14
STRF ENCODE	dsy audio set blocksize, 14
ffconf.h, 224	dsy_audio_set_blocksize, 14 dsy_audio_set_callback, 15
_STR_VOLUME_ID	
ffconf.h, 223	dsy_audio_set_mc_callback, 1
	dsy_audio_silence, 15
_SYNC_t	dsy_audio_start, 15
ffconf.h, 224	dsy_audio_stop, 15
_USE_CHMOD	adc
ffconf.h, 224	DAISY, 125
_USE_EXPAND	AnalogControl

CONTROLS, 18	DSY_SD_CardInfoTypeDef, 192
AsControlChange	BlockSize
EXTERNAL, 33	DSY_SD_CardInfoTypeDef, 192
AsNoteOn	BlockingTransmit
EXTERNAL, 33	PERIPHERAL, 47
audio_handle	Blue
DAISY, 125	UTILITY, 134
AudioBlockSize	blue
DAISY, 112	color, 178
AudioCallbackRate	button1
DAISY, 113	DAISY, 125
AudioFormat	button2
WAV_FormatTypeDef, 213	DAISY, 125
AudioSampleRate	buttons
DAISY, 113	DAISY, 125
b_direction	ByteRate
dsy_sai_handle, 190	WAV_FormatTypeDef, 213
BLOCK_ERASE_32K_CMD	CDC ReceiveCallback
	<del>-</del>
FLASH, 71	USBD_CDC_IF_Exported_Types, 151
BSP_SD_AbortCallback	CDC_Set_Rx_Callback_FS
UTILITY, 134	USBD_CDC_IF_Exported_FunctionsPrototype,
BSP_SD_CardInfo	154
UTILITY, 132	CDC_Transmit_FS
BSP_SD_Erase	USBD_CDC_IF_Exported_FunctionsPrototype,
UTILITY, 134	154
BSP_SD_GetCardInfo	CDC_Transmit_HS
UTILITY, 135	USBD_CDC_IF_Exported_FunctionsPrototype,
BSP_SD_GetCardState	154
UTILITY, 135	CLEAR_FLAG_STATUS_REG_CMD
BSP_SD_ITConfig	FLASH, 72
UTILITY, 136	CODEC, 96
BSP_SD_Init	codec_ak4556_init, 96
UTILITY, 135	codec_pcm3060_init, 97
BSP_SD_IsDetected	codec_wm8731_enter_bypass, 97
UTILITY, 136	codec_wm8731_exit_bypass, 97
BSP_SD_ReadBlocks	codec wm8731 init, 97
UTILITY, 136	sa audio callback, 96
BSP_SD_ReadBlocks_DMA	CONTROLS, 16
UTILITY, 137	~AnalogControl, 23
BSP_SD_ReadCpltCallback	~Parameter, 23
UTILITY, 137	AnalogControl, 18
BSP_SD_WriteBlocks	Curve, 17
UTILITY, 137	Debounce, 18
BSP_SD_WriteBlocks_DMA	FallingEdge, 18
UTILITY, 138	Increment, 19
BSP_SD_WriteCpltCallback	Init, 19, 20
UTILITY, 138	InitBipolarCv, 21
BitPerSample	Parameter, 21
WAV_FormatTypeDef, 213	Polarity, 17
bitdepth	Pressed, 21
dsy_dac_handle, 186	Process, 21, 22
dsy_sai_handle, 190	Pull, 17
PERIPHERAL, 62	RisingEdge, 22
block_size	TimeHeldMs, 22
dsy_audio_handle, 185	Type, 18
BlockAlign	Value, 22, 23
WAV_FormatTypeDef, 213	capacity
BlockNbr	UTILITY, 138
	•

CardSpeed	adc, 125
DSY_SD_CardInfoTypeDef, 192	audio_handle, 125
CardType	AudioBlockSize, 112
DSY_SD_CardInfoTypeDef, 192	AudioCallbackRate, 113
CardVersion	AudioSampleRate, 113
DSY_SD_CardInfoTypeDef, 193	button1, 125
ChangeAudioCallback	button2, 125
DAISY, 113, 114	buttons, 125
channel	ChangeAudioCallback, 113, 114
EXTERNAL, 34, 35	ClearLeds, 114
CheckError	Configure, 114
PERIPHERAL, 47	controls, 126
Chunkld	
WAV_FormatTypeDef, 214	Ctrl, 109
Class	cube, 115
	cvs, 126
DSY_SD_CardInfoTypeDef, 193	DMA_BUFFER_MEM_SECTION, 107
ClearLeds	DTCM_MEM_SECTION, 107
DAISY, 114	dac_handle, 126
clk	daisy_field_init, 115
dsy_sr_4021_handle, 195	DaisyPatch, 116
Close	DaisyPetal, 116
daisy::WavPlayer, 216	DebounceControls, 116
codec_ak4556_init	DelayMs, 116, 117
CODEC, 96	display, 126
codec_frame_t, 177	DisplayControls, 117
I, 177	dsy_gpio_port, 109
r, 177	dsy_pin, 117
codec_pcm3060_init	dsy_pin_cmp, 117
CODEC, 97	encoder, 126
codec_wm8731_enter_bypass	
CODEC, 97	expression, 126
codec_wm8731_exit_bypass	f2s16, 118
CODEC, 97	f2s24, 118
codec_wm8731_init	footswitch_led, 127
CODEC, 97	FootswitchLed, 110
color, 178	gate_in, 127
blue, 178	gate_input, 127
green, 178	gate_out, 127
red, 178	gate_output, 127
	GateInput, 110
Configure	GetCtrlValue, 118
DAISY, 114	GetExpression, 119
control_number	GetKnobValue, 119
EXTERNAL, 35	GetPin, 119
controls	i2c1_handle, 127
DAISY, 126	i2c2_handle, 127
CS	Init, 119, 120
dsy_sr_4021_handle, 195	keyboard_sr, 127
Ctrl	Knob, 110, 111
DAISY, 109	knob, 128
cube	
DAISY, 115	knob1, 128
Curve	knob2, 128
CONTROLS, 17	knobs, 128
cvs	led1, 128
DAISY, 126	led2, 128
	midi, 128
DAISY, 104	qspi_handle, 129
$\sim$ DaisyPatch, 125	ring_led, 129
$\sim$ DaisyPetal, 125	RingLed, 111

o160f 100	DUAL OUT FACT DEAD 4 DVTF ADDD CMD
s162f, 120	DUAL_OUT_FAST_READ_4_BYTE_ADDR_CMD
s242f, 120	FLASH, 73 DUAL OUT FAST READ CMD
sai_handle, 129	
sdram_handle, 129	FLASH, 73 DUAL OUT FAST READ DTR CMD
seed, 129	FLASH, 74
SetAudioBlockSize, 120, 121	•
SetFootswitchLed, 121	dac_handle
SetLed, 122	DAISY, 126
SetRingLed, 122	daisy, 173
SetTestPoint, 122	daisy::AdcChannelConfig, 175
StartAdc, 122, 123	daisy::AdcHandle, 175
StartAudio, 123, 124	daisy::AnalogControl, 176
Sw, 111, 112	daisy::Color, 179
switches, 130	daisy::ControlChangeEvent, 179
UpdateAnalogControls, 124	daisy::DaisyPatch, 180
UpdateLeds, 124	daisy::DaisyPetal, 181
usb_handle, 130	daisy::DaisyPod, 183
DEVICE_FS	daisy::DaisySeed, 184
USBD_CONF_Exported_Defines, 157	daisy::Encoder, 196
DEVICE_HS	daisy::GateIn, 197
USBD_CONF_Exported_Defines, 157	$\sim$ GateIn, 198
DEVICE_ID1	GateIn, 198
USBD_DESC_Exported_Constants, 164	Init, 198
DEVICE_ID2	Trig, 198
USBD_DESC_Exported_Constants, 164	daisy::Led, 199
DEVICE_ID3	daisy::MidiEvent, 199
USBD_DESC_Exported_Constants, 164	daisy::MidiHandler, 200
DEVICE, 65	daisy::NoteOnEvent, 201
DIE_ERASE_CMD	daisy::OledDisplay, 201
FLASH, 72	daisy::Parameter, 202
DMA_BUFFER_MEM_SECTION	daisy::RgbLed, 203
DAISY, 107	daisy::RingBuffer< T, 0 >, 204
DSY_SD_CardInfoTypeDef, 192	daisy::RingBuffer< T, size >, 203
BlockNbr, 192	daisy::SdmmcHandler, 204
BlockSize, 192	daisy::SdmmcHandlerInit, 205
CardSpeed, 192	daisy::SpiHandle, 207
CardType, 192	daisy::Switch, 207
CardVersion, 193	daisy::UartHandler, 208
Class, 193	daisy::WavFileInfo, 215
LogBlockNbr, 193	name, 215
LogBlockSize, 193	raw_data, 215
RelCardAdd, 193	daisy::WavPlayer, 216
DSY_SDRAM_BSS	Close, 216
SDRAM, 102	GetCurrentFile, 216
DSY_SDRAM_DATA	GetLooping, 217
SDRAM, 102	GetNumberFiles, 217
DSY WAVPLAYER H	Init, 217
hid_wavplayer.h, 227	Open, 217
DTCM_MEM_SECTION	Prepare, 218
DAISY, 107	Restart, 218
DUAL_IN_FAST_PROG_CMD	SetLooping, 218
FLASH, 72	Stream, 218
DUAL_INOUT_FAST_READ_4_BYTE_ADDR_CMD	daisy::daisy_field, 180
FLASH, 72	daisy_field_init
DUAL_INOUT_FAST_READ_CMD	DAISY, 115
FLASH, 73	DaisyPatch
DUAL_INOUT_FAST_READ_DTR_CMD	DAISY, 116
FLASH, 73	DaisyPetal

DAISY, 116	AUDIO, 15
data	dsy_audio_start
dsy_sr_4021_handle, 195	AUDIO, 15
EXTERNAL, 35	dsy_audio_stop
FontDef, 197	AUDIO, 15
Debounce CONTROLS, 18	dsy_audio_sync PERIPHERAL, 40
DebounceControls	dsy_dac_bitdepth
DAISY, 116	PERIPHERAL, 40
DelayMs	dsy_dac_channel
DAISY, 116, 117	PERIPHERAL, 41
dev0 i2c	dsy_dac_handle, 185
dsy_audio_handle, 185	bitdepth, 186
dev1_i2c	mode, 186
dsy_audio_handle, 185	pin_config, 186
device	dsy_dac_init
dsy_qspi_handle, 189	PERIPHERAL, 47
dsy_sai_handle, 191	dsy_dac_mode
display	PERIPHERAL, 41
DAISY, 126	dsy_dac_start
DisplayControls	PERIPHERAL, 48
DAISY, 117	dsy_dac_write
DrawPixel	PERIPHERAL, 48
FEEDBACK, 25	dsy_dma_init SYSTEM, 63
dsy_audio_bitdepth PERIPHERAL, 39	dsy_get_unique_id
dsy_audio_callback	UTILITY, 139
AUDIO, 13	dsy_gpio, 186
dsy_audio_device	mode, 187
PERIPHERAL, 39	pin, 187
dsy_audio_dir	pull, 187
PERIPHERAL, 39	dsy_gpio_deinit
dsy_audio_enter_bypass	PERIPHERAL, 48
AUDIO, 14	dsy_gpio_init
dsy_audio_exit_bypass	PERIPHERAL, 49
AUDIO, 14	dsy_gpio_mode
dsy_audio_handle, 184	PERIPHERAL, 41
block_size, 185	dsy_gpio_pin, 187
dev0_i2c, 185	pin, 187
dev1_i2c, 185	port, 188
sai, 185	dsy_gpio_port
dsy_audio_init AUDIO, 14	DAISY, 109 dsy_gpio_pull
dsy audio mc callback	PERIPHERAL, 42
AUDIO, 13	dsy_gpio_read
dsy_audio_passthru	PERIPHERAL, 49
AUDIO, 14	dsy_gpio_toggle
dsy_audio_sai	PERIPHERAL, 49
PERIPHERAL, 39	dsy_gpio_write
dsy_audio_samplerate	PERIPHERAL, 49
PERIPHERAL, 40	dsy_hal_map_get_i2c
dsy_audio_set_blocksize	UTILITY, 139
AUDIO, 14	dsy_hal_map_get_pin
dsy_audio_set_callback	UTILITY, 140
AUDIO, 15	dsy_hal_map_get_port
dsy_audio_set_mc_callback	UTILITY, 140
AUDIO, 15	dsy_i2c_handle, 188
dsy_audio_silence	periph, 188

pin_config, 188	dsy_sai_pin
speed, 188	PERIPHERAL, 44
dsy_i2c_init	dsy_sdram_handle, 193
PERIPHERAL, 50	pin_config, 194
dsy_i2c_periph	state, 194
PERIPHERAL, 42	dsy_sdram_init
dsy_i2c_pin	SDRAM, 103
PERIPHERAL, 42	dsy sdram pin
dsy_i2c_speed	SDRAM, 103
PERIPHERAL, 43	dsy sdram state
dsy led driver color by name	SDRAM, 103
LED, 100	dsy_sr_4021_handle, 194
dsy_led_driver_init	clk, 195
LED, 100	cs, 195
dsy_led_driver_set_led	data, 195
LED, 100	num_daisychained, 195
	num parallel, 195
dsy_led_driver_update	pin_config, 195
LED, 101	states, 195
dsy_pin	dsy sr 4021 init
DAISY, 117	SHIFTREGISTER, 67
dsy_pin_cmp	dsy_sr_4021_state
DAISY, 117	
dsy_qspi_deinit	SHIFTREGISTER, 67
PERIPHERAL, 50	dsy_sr_4021_update
dsy_qspi_device	SHIFTREGISTER, 67
PERIPHERAL, 43	dsy_system_delay
dsy_qspi_erase	SYSTEM, 63
PERIPHERAL, 50	dsy_system_getnow
dsy_qspi_erasesector	SYSTEM, 63
PERIPHERAL, 51	dsy_system_init
dsy_qspi_handle, 189	SYSTEM, 64
device, 189	dsy_system_jumpto
mode, 189	SYSTEM, 64
pin_config, 189	dsy_system_jumptoqspi
dsy_qspi_init	SYSTEM, 64
PERIPHERAL, 51	dsy_tim_delay_ms
dsy_qspi_mode	PERIPHERAL, 53
PERIPHERAL, 43	dsy_tim_delay_tick
dsy_qspi_pin	PERIPHERAL, 53
PERIPHERAL, 44	dsy_tim_delay_us
	PERIPHERAL, 54
dsy_qspi_write PERIPHERAL, 51	dsy_tim_get_ms
	PERIPHERAL, 54
dsy_qspi_writepage	dsy_tim_get_tick
PERIPHERAL, 52	PERIPHERAL, 54
dsy_sai_handle, 190	dsy_tim_get_us
a_direction, 190	PERIPHERAL, 54
b_direction, 190	dsy_tim_init
bitdepth, 190	PERIPHERAL, 55
device, 191	dsy_tim_start
init, 191	PERIPHERAL, 55
sai1_pin_config, 191	,
sai2_pin_config, 191	ENTER_4_BYTE_ADDR_MODE_CMD
samplerate, 191	FLASH, 74
sync_config, 191	ENTER_QUAD_CMD
dsy_sai_init	FLASH, 74
PERIPHERAL, 52	EXIT_4_BYTE_ADDR_MODE_CMD
dsy_sai_init_from_handle	 FLASH, 74
PERIPHERAL, 53	EXIT QUAD CMD
,	

FLASH, 75	DUAL_INOUT_FAST_READ_DTR_CMD, 73
EXT_DUAL_IN_FAST_PROG_CMD	DUAL_OUT_FAST_READ_4_BYTE_ADDR_C
FLASH, 75	MD, 73
EXT_QUAD_IN_FAST_PROG_CMD	DUAL_OUT_FAST_READ_CMD, 73
FLASH, 75	DUAL_OUT_FAST_READ_DTR_CMD, 74
EXTERNAL, 30	ENTER_4_BYTE_ADDR_MODE_CMD, 74
AsControlChange, 33	ENTER_QUAD_CMD, 74
AsNoteOn, 33	EXIT_4_BYTE_ADDR_MODE_CMD, 74
channel, 34, 35	EXIT_QUAD_CMD, 75
control_number, 35	EXT_DUAL_IN_FAST_PROG_CMD, 75
data, 35	EXT_QUAD_IN_FAST_PROG_CMD, 75
HasEvents, 33	FAST_READ_4_BYTE_ADDR_CMD, 75
Init, 33	FAST_READ_CMD, 76
Listen, 34	FAST_READ_DTR_CMD, 76
MidiInputMode, 31	IS25LP064A EAR HIGHEST SE, 76
MidiMessageType, 31	IS25LP064A_EAR_LOWEST_SEG, 76
MidiOutputMode, 31	IS25LP064A EAR SECOND SEG, 76
note, 35	IS25LP064A EAR THIRD SEG, 76
Parse, 34	IS25LP064A EVCR DTRP, 77
PopEvent, 34	IS25LP064A_EVCR_DUAL, 77
StartReceive, 34	IS25LP064A EVCR ODS, 77
type, 35	IS25LP064A EVCR QUAD, 77
value, 35	IS25LP064A EVCR RH, 77
velocity, 35	IS25LP064A FSR ERERR, 77
encoder	IS25LP064A FSR ERSUS, 77
DAISY, 126	IS25LP064A FSR NBADDR, 77
expression	IS25LP064A_FSR_PGERR, 78
DAISY, 126	IS25LP064A FSR PGSUS, 78
Externals, 170	IS25LP064A_FSR_PRERR, 78
(0.40	IS25LP064A_FSR_READY, 78
f2s16	IS25LP064A NVCR DTRP, 78
DAISY, 118	IS25LP064A NVCR DUAL, 78
f2s24	IS25LP064A_NVCR_NB_DUMMY, 78
DAISY, 118	IS25LP064A NVCR NBADDR, 78
FAST_READ_4_BYTE_ADDR_CMD	IS25LP064A NVCR ODS, 79
FLASH, 75	IS25LP064A NVCR QUAB, 79
FAST_READ_CMD	IS25LP064A_NVCR_RH, 79
FLASH, 76	IS25LP064A_NVCR_SEGMENT, 79
FAST_READ_DTR_CMD	IS25LP064A NVCR XIP, 79
FLASH, 76	IS25LP064A_SR_QE, 79
FEEDBACK, 24 DrawPixel, 25	IS25LP064A SR SRWREN, 79
•	IS25LP064A SR WIP, 79
Fill, 25	IS25LP064A_SR_WREN, 80
Init, 25, 26 Pins, 24	IS25LP064A VCR NB DUMMY, 80
	IS25LP064A VCR WRAP, 80
Set, 26, 27 SetColor, 27	IS25LP064A VCR XIP, 80
SetCursor, 27	IS25LP080D_EAR_HIGHEST_SE, 80
Update, 28	IS25LP080D EAR LOWEST SEG, 80
WriteChar, 28	IS25LP080D_EAR_SECOND_SEG, 80
WriteString, 28	IS25LP080D_EAR_THIRD_SEG, 81
FLASH, 68	IS25LP080D EVCR DTRP, 81
BLOCK ERASE 32K CMD, 71	IS25LP080D_EVCR_DUAL, 81
CLEAR_FLAG_STATUS_REG_CMD, 72	IS25LP080D_EVCR_ODS, 81
DIE_ERASE_CMD, 72	IS25LP080D_EVCR_QUAD, 81
DUAL_IN_FAST_PROG_CMD, 72	IS25LP080D_EVCR_RH, 81
DUAL_INOUT_FAST_READ_4_BYTE_ADDR_←	IS25LP080D_FSR_ERERR, 81
CMD, 72	IS25LP080D FSR ERSUS, 81
DUAL INOUT FAST READ CMD, 73	IS25LP080D_FSR_ERSUS, 81
DUAL_INOUT_FAST_NEAD_CIVID, /3	IOZULFUOUD_FON_NDADDN, 02

IS25LP080D_FSR_PGERR, 82	WRITE DISABLE CMD, 93
IS25LP080D_FSR_PGSUS, 82	WRITE_ENABLE_CMD, 93
IS25LP080D_FSR_PRERR, 82	WRITE_ENHANCED_VOL_CFG_REG_CMD, 93
IS25LP080D_FSR_READY, 82	WRITE EXT ADDR REG CMD, 94
IS25LP080D_NVCR_DTRP, 82	WRITE_LOCK_REG_CMD, 94
IS25LP080D_NVCR_DUAL, 82	WRITE_NONVOL_CFG_REG_CMD, 94
IS25LP080D_NVCR_NB_DUMMY, 82	WRITE_READ_PARAM_REG_CMD, 94
IS25LP080D_NVCR_NBADDR, 83	WRITE STATUS REG CMD, 95
IS25LP080D_NVCR_ODS, 83	FS Desc
IS25LP080D NVCR QUAB, 83	USBD DESC Exported Variables, 168
IS25LP080D_NVCR_RH, 83	FallingEdge
IS25LP080D_NVCR_SEGMENT, 83	CONTROLS, 18
IS25LP080D NVCR XIP, 83	ff free
IS25LP080D_SR_QE, 83	ffconf.h, 226
IS25LP080D_SR_SRWREN, 83	ff_malloc
IS25LP080D SR WIP, 84	ffconf.h, 226
IS25LP080D_SR_WREN, 84	ffconf.h
IS25LP080D_VCR_NB_DUMMY, 84	_CODE_PAGE, 220
IS25LP080D_VCR_WRAP, 84	_FFCONF, 220
IS25LP080D_VCR_XIP, 84	_FS_EXFAT, 220
MULTIPLE_IO_READ_ID_CMD, 84	FS LOCK, 221
PAGE PROG 4 BYTE ADDR CMD, 85	_FS_MINIMIZE, 221
PAGE_PROG_CMD, 85	_FS_NOFSINFO, 221
PROG_ERASE_RESUME_CMD, 85	_FS_NORTC, 221
PROG_ERASE_SUSPEND_CMD, 85	_FS_READONLY, 221
PROG_OTP_ARRAY_CMD, 86	_FS_REENTRANT, 221
QUAD_IN_FAST_PROG_4_BYTE_ADDR_CMD,	_FS_RPATH, 222
86	_FS_TIMEOUT, 222
QUAD_IN_FAST_PROG_CMD, 86	_FS_TINY, 222
QUAD_INOUT_FAST_READ_4_BYTE_ADDR_	
CMD, 86	
QUAD_INOUT_FAST_READ_CMD, 87	
QUAD_INOUT_FAST_READ_DTR_CMD, 87	MIN_SS, 223
QUAD_OUT_FAST_READ_4_BYTE_ADDR_C↔	
MD, 87	_NORTC_MDAY, 223
QUAD_OUT_FAST_READ_CMD, 87	NORTC MON, 223
QUAD OUT FAST READ DTR CMD, 88	NORTC YEAR, 223
READ_4_BYTE_ADDR_CMD, 88	STRF ENCODE, 224
READ_CMD, 88	_STR_VOLUME_ID, 223
READ_ENHANCED_VOL_CFG_REG_CMD, 88	
READ_EXT_ADDR_REG_CMD, 89	_USE_CHMOD, 224
READ_FLAG_STATUS_REG_CMD, 89	USE EXPAND, 224
READ_ID_CMD2, 89	_USE_FASTSEEK, 224
READ_ID_CMD, 89	USE FIND, 224
READ_LOCK_REG_CMD, 90	_USE_FORWARD, 225
READ_NONVOL_CFG_REG_CMD, 90	_USE_LABEL, 225
READ_OTP_ARRAY_CMD, 90	_USE_LFN, 225
READ_READ_PARAM_REG_CMD, 90	USE MKFS, 225
READ_SERIAL_FLASH_DISCO_PARAM_CMD,	_USE_STRFUNC, 225
91	_USE_TRIM, 225
READ_STATUS_REG_CMD, 91	_VOLUMES, 226
RESET_ENABLE_CMD, 91	_VOLUME_STRS, 225
RESET_MEMORY_CMD, 91	ff_free, 226
SECTOR_ERASE_4_BYTE_ADDR_CMD, 92	ff_malloc, 226
SECTOR_ERASE_CMD, 92	FileFormat
SUBSECTOR_ERASE_4_BYTE_ADDR_CMD, 92	WAV_FormatTypeDef, 214
SUBSECTOR_ERASE_CMD, 92	FileSize
SUBSECTOR_ERASE_QPI_CMD, 93	WAV_FormatTypeDef, 214

Fill	GetNumberFiles
FEEDBACK, 25	daisy::WavPlayer, 217
Flush	GetPin
UTILITY, 140	DAISY, 119
FlushRx	GetPtr
PERIPHERAL, 55	PERIPHERAL, 57
Font_11x18	Green
UTILITY, 147	UTILITY, 140
Font_16x26	green
UTILITY, 147	color, 178
Font_6x8 UTILITY, 147	HS Desc
Font 7x10	USBD_DESC_Exported_Variables, 168
UTILITY, 147	HUMAN INTERFACE, 12
FontDef, 196	HasEvents
data, 197	EXTERNAL, 33
FontHeight, 197	hi2c1
FontWidth, 197	UTILITY, 148
FontHeight	hi2c2
FontDef, 197	UTILITY, 148
FontWidth	hi2c3
FontDef, 197	UTILITY, 148
footswitch_led	hi2c4
DAISY, 127	UTILITY, 148
FootswitchLed	hid_wavplayer.h DSY WAVPLAYER H, 227
DAISY, 110	WAV FILENAME MAX, 227
gate in	VV/(V_1 1EE1V/WIE_W///, 22/
DAISY, 127	i2c1_handle
gate_input	DAISY, 127
DAISY, 127	i2c2_handle
gate_out	DAISY, 127
DAISY, 127	IS25LP064A_EAR_HIGHEST_SE
gate_output	FLASH, 76
DAISY, 127	IS25LP064A_EAR_LOWEST_SEG
GateIn	FLASH, 76
daisy::GateIn, 198 GateInput	IS25LP064A_EAR_SECOND_SEG FLASH, 76
DAISY, 110	IS25LP064A EAR THIRD SEG
Get	FLASH, 76
PERIPHERAL, 55	IS25LP064A EVCR DTRP
GetCtrlValue	 FLASH, 77
DAISY, 118	IS25LP064A_EVCR_DUAL
GetCurrentFile	FLASH, 77
daisy::WavPlayer, 216	IS25LP064A_EVCR_ODS
GetExpression	FLASH, 77
DAISY, 119	IS25LP064A_EVCR_QUAD
GetFloat	FLASH, 77
PERIPHERAL, 56	IS25LP064A_EVCR_RH
GetKnobValue	FLASH, 77
DAISY, 119 GetLooping	IS25LP064A_FSR_ERERR FLASH, 77
daisy::WavPlayer, 217	IS25LP064A FSR ERSUS
GetMux	FLASH, 77
PERIPHERAL, 56	IS25LP064A FSR NBADDR
GetMuxFloat	FLASH, 77
PERIPHERAL, 56	IS25LP064A_FSR_PGERR
GetMuxPtr	FLASH, 78
PERIPHERAL, 57	IS25LP064A_FSR_PGSUS

FLASH, 78	FLASH, 81
IS25LP064A_FSR_PRERR	IS25LP080D_FSR_NBADDR
FLASH, 78	FLASH, 82
IS25LP064A_FSR_READY FLASH, 78	IS25LP080D_FSR_PGERR FLASH, 82
IS25LP064A_NVCR_DTRP	IS25LP080D_FSR_PGSUS
FLASH, 78	FLASH, 82
IS25LP064A_NVCR_DUAL	IS25LP080D_FSR_PRERR
FLASH, 78	FLASH, 82
IS25LP064A_NVCR_NB_DUMMY	IS25LP080D_FSR_READY
FLASH, 78	FLASH, 82
IS25LP064A_NVCR_NBADDR	IS25LP080D_NVCR_DTRP
FLASH, 78	FLASH, 82
IS25LP064A_NVCR_ODS	IS25LP080D_NVCR_DUAL
FLASH, 79	FLASH, 82
IS25LP064A_NVCR_QUAB	IS25LP080D_NVCR_NB_DUMMY
FLASH, 79	FLASH, 82
IS25LP064A_NVCR_RH	IS25LP080D_NVCR_NBADDR
FLASH, 79	FLASH, 83
IS25LP064A_NVCR_SEGMENT FLASH, 79	IS25LP080D_NVCR_ODS
IS25LP064A NVCR XIP	FLASH, 83 IS25LP080D_NVCR_QUAB
FLASH, 79	FLASH, 83
IS25LP064A_SR_QE	IS25LP080D_NVCR_RH
FLASH, 79	FLASH, 83
IS25LP064A_SR_SRWREN	IS25LP080D_NVCR_SEGMENT
 FLASH, 79	 FLASH, <mark>83</mark>
IS25LP064A_SR_WIP	IS25LP080D_NVCR_XIP
FLASH, 79	FLASH, 83
IS25LP064A_SR_WREN	IS25LP080D_SR_QE
FLASH, 80	FLASH, 83
IS25LP064A_VCR_NB_DUMMY	IS25LP080D_SR_SRWREN
FLASH, 80	FLASH, 83
IS25LP064A_VCR_WRAP	IS25LP080D_SR_WIP
FLASH, 80	FLASH, 84
IS25LP064A_VCR_XIP	IS25LP080D_SR_WREN
FLASH, 80 IS25LP080D_EAR_HIGHEST_SE	FLASH, 84 IS25LP080D VCR NB DUMMY
FLASH, 80	FLASH, 84
IS25LP080D_EAR_LOWEST_SEG	IS25LP080D_VCR_WRAP
FLASH, 80	FLASH, 84
IS25LP080D_EAR_SECOND_SEG	IS25LP080D VCR XIP
FLASH, 80	FLASH, <mark>84</mark>
IS25LP080D_EAR_THIRD_SEG	
1023E1 000D_EATI_TTIITD_OEG	ImmediateRead
FLASH, 81	ImmediateRead UTILITY, 141
FLASH, 81 IS25LP080D_EVCR_DTRP FLASH, 81	UTILITY, 141 Increment CONTROLS, 19
FLASH, 81 IS25LP080D_EVCR_DTRP FLASH, 81 IS25LP080D_EVCR_DUAL	UTILITY, 141 Increment CONTROLS, 19 Init
FLASH, 81 IS25LP080D_EVCR_DTRP FLASH, 81 IS25LP080D_EVCR_DUAL FLASH, 81	UTILITY, 141 Increment CONTROLS, 19 Init CONTROLS, 19, 20
FLASH, 81 IS25LP080D_EVCR_DTRP FLASH, 81 IS25LP080D_EVCR_DUAL FLASH, 81 IS25LP080D_EVCR_ODS	UTILITY, 141 Increment CONTROLS, 19 Init CONTROLS, 19, 20 DAISY, 119, 120
FLASH, 81 IS25LP080D_EVCR_DTRP FLASH, 81 IS25LP080D_EVCR_DUAL FLASH, 81 IS25LP080D_EVCR_ODS FLASH, 81	UTILITY, 141 Increment     CONTROLS, 19 Init     CONTROLS, 19, 20     DAISY, 119, 120     daisy::GateIn, 198
FLASH, 81 IS25LP080D_EVCR_DTRP FLASH, 81 IS25LP080D_EVCR_DUAL FLASH, 81 IS25LP080D_EVCR_ODS FLASH, 81 IS25LP080D_EVCR_QUAD	UTILITY, 141 Increment     CONTROLS, 19 Init     CONTROLS, 19, 20     DAISY, 119, 120     daisy::GateIn, 198     daisy::WavPlayer, 217
FLASH, 81 IS25LP080D_EVCR_DTRP FLASH, 81 IS25LP080D_EVCR_DUAL FLASH, 81 IS25LP080D_EVCR_ODS FLASH, 81 IS25LP080D_EVCR_QUAD FLASH, 81	UTILITY, 141 Increment     CONTROLS, 19 Init     CONTROLS, 19, 20     DAISY, 119, 120     daisy::GateIn, 198     daisy::WavPlayer, 217     EXTERNAL, 33
FLASH, 81 IS25LP080D_EVCR_DTRP FLASH, 81 IS25LP080D_EVCR_DUAL FLASH, 81 IS25LP080D_EVCR_ODS FLASH, 81 IS25LP080D_EVCR_QUAD FLASH, 81 IS25LP080D_EVCR_RH	UTILITY, 141 Increment     CONTROLS, 19 Init     CONTROLS, 19, 20     DAISY, 119, 120     daisy::GateIn, 198     daisy::WavPlayer, 217     EXTERNAL, 33     FEEDBACK, 25, 26
FLASH, 81 IS25LP080D_EVCR_DTRP FLASH, 81 IS25LP080D_EVCR_DUAL FLASH, 81 IS25LP080D_EVCR_ODS FLASH, 81 IS25LP080D_EVCR_QUAD FLASH, 81 IS25LP080D_EVCR_RH FLASH, 81	UTILITY, 141 Increment    CONTROLS, 19 Init    CONTROLS, 19, 20    DAISY, 119, 120    daisy::GateIn, 198    daisy::WavPlayer, 217    EXTERNAL, 33    FEEDBACK, 25, 26    PERIPHERAL, 57, 58
FLASH, 81 IS25LP080D_EVCR_DTRP FLASH, 81 IS25LP080D_EVCR_DUAL FLASH, 81 IS25LP080D_EVCR_ODS FLASH, 81 IS25LP080D_EVCR_QUAD FLASH, 81 IS25LP080D_EVCR_RH FLASH, 81 IS25LP080D_EVCR_RH FLASH, 81 IS25LP080D_FSR_ERERR	UTILITY, 141 Increment     CONTROLS, 19 Init     CONTROLS, 19, 20     DAISY, 119, 120     daisy::GateIn, 198     daisy::WavPlayer, 217     EXTERNAL, 33     FEEDBACK, 25, 26     PERIPHERAL, 57, 58     ShiftRegister595, 206
FLASH, 81 IS25LP080D_EVCR_DTRP FLASH, 81 IS25LP080D_EVCR_DUAL FLASH, 81 IS25LP080D_EVCR_ODS FLASH, 81 IS25LP080D_EVCR_QUAD FLASH, 81 IS25LP080D_EVCR_RH FLASH, 81	UTILITY, 141 Increment    CONTROLS, 19 Init    CONTROLS, 19, 20    DAISY, 119, 120    daisy::GateIn, 198    daisy::WavPlayer, 217    EXTERNAL, 33    FEEDBACK, 25, 26    PERIPHERAL, 57, 58

init	mode
dsy_sai_handle, 191	dsy_dac_handle, 186
InitBipolarCv	dsy_gpio, 187
CONTROLS, 21	dsy_qspi_handle, 189
InitMux	mux channels
PERIPHERAL, 58	PERIPHERAL, 62
InitSingle	mux_pin_
_	
PERIPHERAL, 59	PERIPHERAL, 62
kUartMaxBufferSize	MuxPin
	PERIPHERAL, 44
PERIPHERAL, 62	
keyboard_sr	name
DAISY, 127	daisy::WavFileInfo, 215
Knob	NbrChannels
DAISY, 110, 111	WAV_FormatTypeDef, 214
knob	note
DAISY, 128	EXTERNAL, 35
knob1	num_daisychained
DAISY, 128	dsy_sr_4021_handle, 195
knob2	num_parallel
DAISY, 128	dsy_sr_4021_handle, 195
knobs	35,_51521
DAISY, 128	Open
DAIG1, 120	daisy::WavPlayer, 217
T	OverSampling
codec_frame_t, 177	PERIPHERAL, 45
LED, 99	Overwrite
dsy_led_driver_color_by_name, 100	UTILITY, 144
dsy_led_driver_init, 100	DAGE DDOG 4 DVTE ADDD CMD
dsy_led_driver_set_led, 100	PAGE_PROG_4_BYTE_ADDR_CMD
dsy_led_driver_update, 101	FLASH, 85
LIBDAISY, 11	PAGE_PROG_CMD
led1	FLASH, 85
DAISY, 128	PERIPHERAL, 36
led2	bitdepth, 62
DAISY, 128	BlockingTransmit, 47
Listen	CheckError, 47
EXTERNAL, 34	dsy_audio_bitdepth, 39
LogBlockNbr	dsy_audio_device, 39
DSY_SD_CardInfoTypeDef, 193	dsy_audio_dir, 39
LogBlockSize	dsy_audio_sai, 39
DSY_SD_CardInfoTypeDef, 193	dsy audio samplerate, 40
201_02_0a/a////019020/, 100	dsy_audio_sync, 40
MSD ERROR SD NOT PRESENT	dsy_dac_bitdepth, 40
UTILITY, 133	dsy_dac_channel, 41
MSD_ERROR	dsy_dac_init, 47
UTILITY, 133	dsy_dac_mode, 41
MSD_OK	dsy_dac_start, 48
UTILITY, 133	dsy_dac_start, 48
UTILITY, 133	usy dac write, 45
	• — —
MULTIPLE_IO_READ_ID_CMD	dsy_gpio_deinit, 48
MULTIPLE_IO_READ_ID_CMD FLASH, 84	dsy_gpio_deinit, 48 dsy_gpio_init, 49
MULTIPLE_IO_READ_ID_CMD FLASH, 84 midi	dsy_gpio_deinit, 48 dsy_gpio_init, 49 dsy_gpio_mode, 41
MULTIPLE_IO_READ_ID_CMD FLASH, 84 midi DAISY, 128	dsy_gpio_deinit, 48 dsy_gpio_init, 49 dsy_gpio_mode, 41 dsy_gpio_pull, 42
MULTIPLE_IO_READ_ID_CMD FLASH, 84 midi DAISY, 128 MidiInputMode	dsy_gpio_deinit, 48 dsy_gpio_init, 49 dsy_gpio_mode, 41 dsy_gpio_pull, 42 dsy_gpio_read, 49
MULTIPLE_IO_READ_ID_CMD FLASH, 84 midi DAISY, 128	dsy_gpio_deinit, 48 dsy_gpio_init, 49 dsy_gpio_mode, 41 dsy_gpio_pull, 42
MULTIPLE_IO_READ_ID_CMD FLASH, 84 midi DAISY, 128 MidiInputMode	dsy_gpio_deinit, 48 dsy_gpio_init, 49 dsy_gpio_mode, 41 dsy_gpio_pull, 42 dsy_gpio_read, 49
MULTIPLE_IO_READ_ID_CMD FLASH, 84 midi DAISY, 128 MidiInputMode EXTERNAL, 31	dsy_gpio_deinit, 48 dsy_gpio_init, 49 dsy_gpio_mode, 41 dsy_gpio_pull, 42 dsy_gpio_read, 49 dsy_gpio_toggle, 49
MULTIPLE_IO_READ_ID_CMD FLASH, 84 midi DAISY, 128 MidiInputMode EXTERNAL, 31 MidiMessageType	dsy_gpio_deinit, 48 dsy_gpio_init, 49 dsy_gpio_mode, 41 dsy_gpio_pull, 42 dsy_gpio_read, 49 dsy_gpio_toggle, 49 dsy_gpio_write, 49
MULTIPLE_IO_READ_ID_CMD FLASH, 84 midi DAISY, 128 MidiInputMode EXTERNAL, 31 MidiMessageType EXTERNAL, 31	dsy_gpio_deinit, 48 dsy_gpio_init, 49 dsy_gpio_mode, 41 dsy_gpio_pull, 42 dsy_gpio_read, 49 dsy_gpio_toggle, 49 dsy_gpio_write, 49 dsy_i2c_init, 50

dsy_i2c_speed, 43	CONTROLS, 21
dsy_qspi_deinit, 50	Parse
dsy_qspi_device, 43	EXTERNAL, 34
dsy_qspi_erase, 50	periph
dsy_qspi_erasesector, 51	dsy_i2c_handle, 188
dsy_qspi_init, 51	pin
dsy_qspi_mode, 43	dsy_gpio, 187
dsy_qspi_pin, 44	dsy_gpio_pin, 187
dsy_qspi_write, 51	pin_
dsy_qspi_writepage, 52	PERIPHERAL, 62
dsy_sai_init, 52	pin_config
dsy_sai_init_from_handle, 53	dsy_dac_handle, 186
dsy_sai_pin, 44	dsy_i2c_handle, 188
• — —•	dsy_qspi_handle, 189
dsy_tim_delay_ms, 53	dsy_sdram_handle, 194
dsy_tim_delay_tick, 53	dsy sr 4021 handle, 195
dsy_tim_delay_us, 54	Pins
dsy_tim_get_ms, 54	
dsy_tim_get_tick, 54	FEEDBACK, 24
dsy_tim_get_us, 54	ShiftRegister595, 205
dsy_tim_init, 55	Polarity
dsy_tim_start, 55	CONTROLS, 17
FlushRx, 55	PollReceive
Get, 55	PERIPHERAL, 59
GetFloat, 56	PollTx
GetMux, 56	PERIPHERAL, 59
GetMuxFloat, 56	PopEvent
GetMuxPtr, 57	EXTERNAL, 34
GetPtr, 57	PopRx
Init, 57, 58	PERIPHERAL, 61
InitMux, 58	port
	dsy_gpio_pin, 188
InitSingle, 59	Prepare
kUartMaxBufferSize, 62	daisy::WavPlayer, 218
mux_channels_, 62	PresetColor
mux_pin_, 62	UTILITY, 134
MuxPin, 44	Pressed
OverSampling, 45	CONTROLS, 21
pin_, <mark>62</mark>	Process
PollReceive, 59	CONTROLS, 21, 22
PollTx, 59	Pull
PopRx, 61	CONTROLS, 17
Readable, 61	pull
RxActive, 61	•
SdmmcBitWidth, 45	dsy_gpio, 187
SdmmcMode, 45	QUAD IN FAST PROG 4 BYTE ADDR CMD
SdmmcSpeed, 46	FLASH, 86
speed, 62	QUAD IN FAST PROG CMD
SpiPeriph, 46	FLASH, 86
SpiPin, 46	QUAD_INOUT_FAST_READ_4_BYTE_ADDR_CMD
Start, 61	FLASH, 86
StartRx, 61	QUAD_INOUT_FAST_READ_CMD
Stop, 62	
PROG_ERASE_RESUME_CMD	FLASH, 87
	QUAD_INOUT_FAST_READ_DTR_CMD
FLASH, 85	FLASH, 87
PROG_ERASE_SUSPEND_CMD	QUAD_OUT_FAST_READ_4_BYTE_ADDR_CMD
FLASH, 85	FLASH, 87
PROG_OTP_ARRAY_CMD	QUAD_OUT_FAST_READ_CMD
FLASH, 86	FLASH, 87
Parameter	QUAD_OUT_FAST_READ_DTR_CMD

FLASH, 88	CONTROLS, 22
qspi_handle	RxActive
DAISY, 129	PERIPHERAL, 61
	1001
r	s162f
codec_frame_t, 177	DAISY, 120
READ_4_BYTE_ADDR_CMD	s242f
FLASH, 88	DAISY, 120
READ_CMD	SD_DATATIMEOUT
FLASH, 88	UTILITY, 133
READ_ENHANCED_VOL_CFG_REG_CMD	SD_NOT_PRESENT
FLASH, 88	UTILITY, 133
READ_EXT_ADDR_REG_CMD	SD_PRESENT
FLASH, 89	UTILITY, 133
READ_FLAG_STATUS_REG_CMD	SD_TRANSFER_BUSY
FLASH, 89	UTILITY, 133
READ_ID_CMD2	SD_TRANSFER_OK
FLASH, 89	UTILITY, 133
READ_ID_CMD	SDRAM, 102
FLASH, 89	DSY_SDRAM_BSS, 102
READ_LOCK_REG_CMD	DSY_SDRAM_DATA, 102
 FLASH, <mark>90</mark>	dsy_sdram_init, 103
READ_NONVOL_CFG_REG_CMD	dsy_sdram_pin, 103
FLASH, 90	dsy_sdram_state, 103
READ OTP ARRAY CMD	SECTOR_ERASE_4_BYTE_ADDR_CMD
FLASH, 90	FLASH, 92
READ_READ_PARAM_REG_CMD	SECTOR_ERASE_CMD
FLASH, 90	FLASH, 92
READ_SERIAL_FLASH_DISCO_PARAM_CMD	SHIFTREGISTER, 66
FLASH, 91	dsy_sr_4021_init, 67
READ_STATUS_REG_CMD	dsy_sr_4021_state, 67
	· — — —
FLASH, 91	dsy_sr_4021_update, 67
RESET_ENABLE_CMD	STM32_USB_OTG_DEVICE_LIBRARY, 171
FLASH, 91	SUBSECTOR_ERASE_4_BYTE_ADDR_CMD
RESET_MEMORY_CMD	FLASH, 92
FLASH, 91	SUBSECTOR_ERASE_CMD
raw_data	FLASH, 92
daisy::WavFileInfo, 215	SUBSECTOR_ERASE_QPI_CMD
Read	FLASH, 93
UTILITY, 145	SYSTEM, 63
Readable	dsy_dma_init, 63
PERIPHERAL, 61	dsy_system_delay, 63
readable	dsy_system_getnow, 63
UTILITY, 145	dsy_system_init, 64
ReceiveCallback	dsy_system_jumpto, 64
UsbHandle, 209	dsy_system_jumptoqspi, 64
Red	sa_audio_callback
UTILITY, 146	CODEC, 96
red	sai
color, 178	dsy_audio_handle, 185
RelCardAdd	sai1_pin_config
DSY_SD_CardInfoTypeDef, 193	dsy_sai_handle, 191
Restart	sai2_pin_config
daisy::WavPlayer, 218	dsy_sai_handle, 191
ring_led	sai_handle
DAISY, 129	DAISY, 129
RingLed	SampleRate
DAISY, 111	WAV_FormatTypeDef, 214
RisingEdge	samplerate
· ··-·································	

dsy_sai_handle, 191	StartRx
SdmmcBitWidth	PERIPHERAL, 61
PERIPHERAL, 45	state
SdmmcMode	dsy_sdram_handle, 194
PERIPHERAL, 45	states
SdmmcSpeed	dsy_sr_4021_handle, 195
PERIPHERAL, 46	Stop
sdram_handle	PERIPHERAL, 62
DAISY, 129	Stream
seed	daisy::WavPlayer, 218
DAISY, 129	SubCHunk2Size
Set	WAV_FormatTypeDef, 215
FEEDBACK, 26, 27	SubChunk1ID
ShiftRegister595, 206	WAV_FormatTypeDef, 214
SetAudioBlockSize	SubChunk1Size
DAISY, 120, 121	WAV_FormatTypeDef, 214
SetColor	SubChunk2ID
FEEDBACK, 27	WAV_FormatTypeDef, 214
SetCursor	Sw
FEEDBACK, 27	DAISY, 111, 112
SetFootswitchLed	Swallow
DAISY, 121	UTILITY, 146
SetLed	switches
DAISY, 122	DAISY, 130
SetLooping	sync_config
daisy::WavPlayer, 218	dsy_sai_handle, 191
SetReceiveCallback	,
UsbHandle, 211	TimeHeldMs
SetRingLed	CONTROLS, 22
DAISY, 122	TransmitExternal
SetTestPoint	UsbHandle, 211, 212
	TransmitInternal
DAISY, 122	UsbHandle, 212
ShiftRegister595, 205	Trig
Init, 206	daisy::GateIn, 198
Pins, 205	Type
Set, 206	CONTROLS, 18
Write, 206	type
speed	EXTERNAL, 35
dsy_i2c_handle, 188	
PERIPHERAL, 62	USB_SIZ_STRING_SERIAL
SpiPeriph	USBD_DESC_Exported_Constants, 164
PERIPHERAL, 46	USBD_CDC_IF_Exported_Defines, 150
SpiPin	USBD_CDC_IF_Exported_FunctionsPrototype, 154
PERIPHERAL, 46	CDC_Set_Rx_Callback_FS, 154
src/ffconf.h, 219	CDC_Transmit_FS, 154
src/hid_gatein.h, 226	CDC_Transmit_HS, 154
src/hid_wavplayer.h, 227	USBD_CDC_IF_Exported_Macros, 152
src/usbd_cdc_if.h, 227	USBD_CDC_IF_Exported_Types, 151
src/usbd_conf.h, 228	CDC_ReceiveCallback, 151
src/usbd_desc.h, 229	USBD_CDC_IF_Exported_Variables, 153
Start	USBD_Interface_fops_FS, 153
PERIPHERAL, 61	USBD_Interface_fops_HS, 153
StartAdc	USBD_CDC_IF, 149
DAISY, 122, 123	USBD_CONF_Exported_Defines, 157
StartAudio	DEVICE_FS, 157
DAISY, 123, 124	DEVICE_HS, 157
StartReceive	USBD_DEBUG_LEVEL, 157
EXTERNAL, 34	USBD_LPM_ENABLED, 157

USBD MAX NUM CONFIGURATION, 158	USBD_free
USBD MAX NUM INTERFACES, 158	USBD_CONF_Exported_Macros, 160
USBD_MAX_STR_DESC_SIZ, 158	USBD_malloc
USBD_SELF_POWERED, 158	USBD_CONF_Exported_Macros, 160
USBD_SUPPORT_USER_STRING, 158	USBD_memcpy
USBD CONF Exported FunctionsPrototype, 162	USBD CONF Exported Macros, 160
USBD_CONF_Exported_Macros, 159	USBD_memset
USBD_DbgLog, 159	USBD_CONF_Exported_Macros, 160
USBD_Delay, 159	UTILITY, 131
USBD_ErrLog, 159	BSP_SD_AbortCallback, 134
USBD_UsrLog, 160	BSP_SD_CardInfo, 132
USBD_free, 160	BSP_SD_Erase, 134
USBD_malloc, 160	BSP_SD_GetCardInfo, 135
USBD_memcpy, 160	BSP_SD_GetCardState, 135
USBD_memset, 160	BSP_SD_ITConfig, 136
USBD_CONF_Exported_Types, 161	BSP_SD_Init, 135
USBD_CONF_Exported_Variables, 156	BSP_SD_IsDetected, 136
USBD_CONF, 155	BSP_SD_ReadBlocks, 136
USBD_DEBUG_LEVEL	BSP_SD_ReadBlocks_DMA, 137
USBD_CONF_Exported_Defines, 157	BSP_SD_ReadCpltCallback, 137
USBD_DESC_Exported_Constants, 164	BSP_SD_WriteBlocks, 137
DEVICE_ID1, 164	BSP_SD_WriteBlocks_DMA, 138
DEVICE_ID2, 164	BSP_SD_WriteCpltCallback, 138
DEVICE_ID3, 164	Blue, 134
USB_SIZ_STRING_SERIAL, 164	capacity, 138
USBD_DESC_Exported_Defines, 165	dsy_get_unique_id, 139
USBD_DESC_Exported_FunctionsPrototype, 169	dsy_hal_map_get_i2c, 139
USBD_DESC_Exported_Macros, 167 USBD_DESC_Exported_TypesDefinitions, 166	dsy_hal_map_get_pin, 140 dsy_hal_map_get_port, 140
USBD_DESC_Exported_variables, 168	Flush, 140
FS_Desc, 168	Font_11x18, 147
HS_Desc, 168	Font_16x26, 147
USBD_DESC, 163	Font_6x8, 147
USBD_DbgLog	Font 7x10, 147
USBD_CONF_Exported_Macros, 159	Green, 140
USBD_Delay	hi2c1, 148
USBD_CONF_Exported_Macros, 159	hi2c2, 148
USBD_ErrLog	hi2c3, 148
USBD_CONF_Exported_Macros, 159	hi2c4, 148
USBD_Interface_fops_FS	ImmediateRead, 141
USBD_CDC_IF_Exported_Variables, 153	Init, 143
USBD_Interface_fops_HS	MSD_ERROR_SD_NOT_PRESENT, 133
USBD_CDC_IF_Exported_Variables, 153	MSD_ERROR, 133
USBD_LPM_ENABLED	MSD_OK, 133
USBD_CONF_Exported_Defines, 157	Overwrite, 144
USBD_MAX_NUM_CONFIGURATION	PresetColor, 134
USBD_CONF_Exported_Defines, 158	Read, 145
USBD_MAX_NUM_INTERFACES	readable, 145
USBD_CONF_Exported_Defines, 158	Red, 146
USBD_MAX_STR_DESC_SIZ	SD_DATATIMEOUT, 133
USBD_CONF_Exported_Defines, 158	SD_NOT_PRESENT, 133
USBD_OTG_DRIVER, 172	SD_PRESENT, 133
USBD_SELF_POWERED	SD_TRANSFER_BUSY, 133
USBD_CONF_Exported_Defines, 158	SD_TRANSFER_OK, 133
USBD_SUPPORT_USER_STRING	Swallow, 146
USBD_CONF_Exported_Defines, 158	writable, 146 Write, 146, 147
USBD_UsrLog USBD_CONF_Exported_Macros, 160	
סטטט_oom=_exported_iviacros, rou	Update

FEEDBACK, 28 UpdateAnalogControls DAISY, 124 UpdateLeds DAISY, 124 usb_handle DAISY, 130 UsbHandle, 208 Init, 210 ReceiveCallback, 209 SetReceiveCallback, 211 TransmitExternal, 211, 212 TransmitInternal, 212 UsbPeriph, 209, 210 UsbHandle, 209, 210	ShiftRegister595, 206 UTILITY, 146, 147 WriteChar FEEDBACK, 28 WriteString FEEDBACK, 28
Value CONTROLS, 22, 23 value EXTERNAL, 35 velocity EXTERNAL, 35	
WAV_FILENAME_MAX hid_wavplayer.h, 227 WAV_FormatTypeDef, 213 AudioFormat, 213 BitPerSample, 213 BlockAlign, 213 ByteRate, 213 ChunkId, 214 FileFormat, 214 FileSize, 214 NbrChannels, 214 SampleRate, 214 SubCHunk2Size, 215 SubChunk1ID, 214 SubChunk2ID, 214 SubChunk2ID, 214	
WRITE_DISABLE_CMD FLASH, 93 WRITE_ENABLE_CMD FLASH, 93 WRITE_ENHANCED_VOL_CFG_REG_CMD FLASH, 93 WRITE_EXT_ADDR_REG_CMD FLASH, 94 WRITE_LOCK_REG_CMD FLASH, 94 WRITE_NONVOL_CFG_REG_CMD FLASH, 94 WRITE_READ_PARAM_REG_CMD FLASH, 94	
WRITE_STATUS_REG_CMD FLASH, 95 writable UTILITY, 146 Write	