

UM10211 LPC23XX User manual Rev. 4.1 — 5 September 2012

User manual

Document information

Info	Content
Keywords	LPC2300, LPC2361, LPC2362, LPC2364, LPC2365, LPC2366, LPC2367, LPC2368, LPC2377, LPC2378, LPC2387, LPC2388, ARM, ARM7, 32-bit, USB, Ethernet, CAN, I2S, Microcontroller
Abstract	LPC23XX User manual revision



LPC23XX User manual

Revision history

Rev	Date	Description
4.1	20120905	LPC23XX User manual
		Modifications:
		Corrected cross references throughout.
4	20120726	LPC23XX User manual
		Modifications:
		 Updated numbering for CAN interfaces: CAN1 uses SCC = 0, CAN2 uses SCC = 1. See Section 12.14 "ID look-up table RAM" and Section 12.16 "Configuration and search algorithm".
		 Registers CANWAKEFLAGS and CANSLEEPCLR added. See Table 220 "CAN Wake and Sleep registers".
		 CCR register bit description updated. See Table 505 "Clock Control Register (CCR - address 0xE002 4008) bit description".
		 Flash erase time corrected in Section 1.3 "Features".
		 Reset value of the SCS register changed to 0x8 in Table 31.
		 Write restriction for RTC register appended in Section 26.8 "RTC usage notes".
		 ADC self-test pin set-up removed. See Table 520 "A/D pin description".
		 Update RTC usage notes: Do not ground VBAT. See Table 501 and Section 26.8.
		Description of Ethernet initialization updated in Section 11.9.
		 Glitch filter constant for EINTx pins changed to 10 ns in Table 97 to Table 100.
		Editorial updates.
3	20090825	LPC23XX User manual

Modifications:

- Deep power-down mode functionality added (see Section 4–8 "Power control" and Section 26–26.7 "RTC Usage Notes").
- Register containing device revision added (implemented starting with revision D, see Section 29–7.11).
- Part id for part LPC2387 updated (Table 29-542).
- XTAL1 input selection and PCB layout guidelines added (see Section 4-4.2).
- Editorial updates throughout the user manual.
- LPC2361 flash sectors added in Table 29–526.
- ISP1301 replaced by ISP1302 in Section 15–7.
- Fractional baud rate generator disabled in UART0/1/2/3 auto baud mode.

UM10211 NXP Semiconductors

LPC23XX User manual

Revision history ... continued

Rev	Date	Description
2	20090211	LPC23XX User manual
		Modifications:
		 Parts LPC2361 and LPC2362 added.
		Numerous editorial updates.
		 AHB configuration registers AHBCFG1 and AHBCFG2 added.
		 UARTs: minimum setting for DLL value updated.
1	20080311	LPC2364/65/66/67/68/77/78/87/88 User manual

Contact information

For more information, please visit: http://www.nxp.com

For sales office addresses, please send an email to: salesaddresses@nxp.com

UM10211

Chapter 1: LPC23xx Introductory information

Rev. 4.1 — 5 September 2012

User manual

1.1 Introduction

LPC23xx series are ARM-based microcontrollers for applications requiring serial communications for a variety of purposes. These microcontrollers typically incorporate a 10/100 Ethernet MAC, USB 2.0 Full Speed interface, four UARTs, two CAN channels, an SPI interface, two Synchronous Serial Ports (SSP), three I2C interfaces, an I2S interface, and a MiniBus (8-bit data/16-bit address parallel bus).

1.2 How to read this manual

The term "LPC23xx" in the following text will be used as a generic name for all parts covered in this user manual:

- LPC2361/62
- LPC2364/65/66/67/68
- LPC2377/78
- LPC2387
- LPC2388

Only when needed, a specific device name will be used to distinguish the part. See <u>Table 1</u> to find information about a particular part.

Table 1. LPC23xx overview

Part	Features	Ordering info	Ordering options	Block diagram
LPC2361/62	Section 1.3.1, Section 1.3.2	Table 3	Table 4	Figure 1
LPC2364/65/66/67/68	<u>Section 1.3.1</u>	Table 3	Table 5	Figure 2
LPC2377/78	Section 1.3.1, Section 1.3.3	Table 3	Table 6	Figure 3
LPC2387	Section 1.3.1, Section 1.3.4	Table 3	Table 7	Figure 4
LPC2388	Section 1.3.1, Section 1.3.4	Table 3	Table 8	Figure 5

1.3 Features

1.3.1 General features

- ARM7TDMI-S processor, running at up to 72 MHz.
- Up to 512 kB on-chip Flash Program Memory with In-System Programming (ISP) and In-Application Programming (IAP) capabilities. Single Flash sector or full-chip erase in 100 ms. Flash program memory is on the ARM local bus for high performance CPU access.
- Up to 64 kB of SRAM on the ARM local bus for high performance CPU access.

Chapter 1: LPC23xx Introductory information

- 16 kB Static RAM for Ethernet interface. Can also be used as general purpose SRAM.
- 8 kB Static RAM for general purpose or USB interface.
- Dual AHB system that provides for simultaneous Ethernet DMA, USB DMA, and program execution from on-chip flash with no contention between those functions. A bus bridge allows the Ethernet DMA to access the other AHB subsystem.
- Advanced Vectored Interrupt Controller, supporting up to 32 vectored interrupts.
- General Purpose DMA controller (GPDMA) on AHB that can be used with the SSP serial interfaces, the I²S port, and the SD/MMC card port, as well as for memory-to-memory transfers.

Serial Interfaces:

- Ethernet MAC with associated DMA controller. These functions reside on an independent AHB bus.
- On LPC2364/66/68, LPC2378, LPC2387, LPC2388: USB 2.0 device controller with on-chip PHY and associated DMA controller.
- On LPC2388: USB Host/OTG controller.
- Four UARTs with fractional baud rate generation, one with modem control I/O, one with IrDA support, all with FIFO. These reside on the APB bus.
- SPI controller, residing on the APB bus.
- Two SSP controllers with FIFO and multi-protocol capabilities. One is an alternate for the SPI port, sharing its interrupt. The SSP controllers can be used with the GPDMA controller and reside on the APB bus.
- Three I²C interfaces reside on the APB bus. The second and third I²C interfaces are expansion I²C interfaces with standard port pins rather than special open-drain I²C pins.
- I²S (Inter-IC Sound) interface for digital audio input or output, residing on the APB bus. The I²S interface can be used with the GPDMA.
- On LPC2364/66/68, LPC2378, LPC2387, LPC2388: Two CAN channels with Acceptance Filter/FullCAN mode residing on the APB bus.
- Other APB Peripherals:
 - On LPC2367/68, LPC2377/78, LPC2387, LPC2388: Secure Digital (SD) / MultiMediaCard (MMC) memory card interface.
 - Up to 70 (100 pin packages) or 104 (144 pin packages) general purpose I/O pins.
 - 10 bit A/D converter with input multiplexing among 6 pins (100 pin packages) or 8 pins (144 pin packages).
 - 10 bit D/A converter.
 - Four general purpose timers with two capture inputs each and up to four compare output pins each. Each timer block has an external count input.
 - One PWM/Timer block with support for three-phase motor control. The PWM has two external count inputs.
 - Real-Time Clock (RTC) with separate power pin; clock source can be the RTC oscillator or the APB clock.
 - 2 kB Static RAM powered from the RTC power pin, allowing data to be stored when the rest of the chip is powered off.

Chapter 1: LPC23xx Introductory information

- Watchdog Timer. The watchdog timer can be clocked from the internal RC oscillator, the RTC oscillator, or the APB clock.
- Standard ARM Test/Debug interface for compatibility with existing tools.
- Emulation Trace Module.
- Support for real-time trace.
- Single 3.3 V power supply (3.0 V to 3.6 V).
- Four reduced power modes: Idle, Sleep, Power-down, and Deep power-down modes.
- Four external interrupt inputs. In addition every PORT0/2 pin can be configured as an edge sensing interrupt.
- Processor wake-up from Power-down mode via any interrupt able to operate during Power-down mode (includes external interrupts, RTC interrupt, and Ethernet walk-up interrupt).
- Two independent power domains allow fine tuning of power consumption based on needed features.
- Brownout detect with separate thresholds for interrupt and forced reset.
- On-chip Power On Reset (POR).
- On-chip crystal oscillator with an operating range of 1 MHz to 24 MHz.
- 4 MHz internal RC oscillator that can optionally be used as the system clock. For USB and CAN application, the use of an external clock source is suggested.
- On-chip PLL allows CPU operation up to the maximum CPU rate without the need for a high-frequency crystal. May be run from the main oscillator, the internal RC oscillator, or the RTC oscillator.
- Boundary scan for simplified board testing is available in LPC2364FET100, LPC2368FET100 (TFBGA packages), LPC2377/78, and LPC2388.
- Versatile pin function selections allow more possibilities for using on-chip peripheral functions.

1.3.2 Features available on LPC2361/62

- Device/Host/OTG controller available.
- No Ethernet on LPC2361.

1.3.3 Features available in LPC2377/78 and LPC2388

External memory controller that supports static devices such as Flash and SRAM. An 8-bit data/16-bit address parallel bus is available.

1.3.4 Features available in LPC2387 and LPC2388

- 64 kB of SRAM on the ARM local bus for high performance CPU access.
- 16 kB Static RAM for USB interface. Can also be used as general purpose SRAM.

1.3.5 Overview

The following table shows the differences between LPC23xx parts. Features that are the same for all parts are not included.

Chapter 1: LPC23xx Introductory information

Table 2. LPC23xx features overview

Part	Local bus SRAM (kB)	Flash (kB)	EMC	USB/ GP SRAM (kB)	USB device	USB host/ OTG	Ethernet	Ethernet GP SRAM (kB)	_	SD/ MMC	ADC channels	GPIO pins
LPC2361	8	64	no	8	yes	yes	no	16	2	no	6	70
LPC2362	32	128	no	8	yes	yes	yes	16	2	no	6	70
LPC2364	8	128	no	8	yes	no	yes	16	2	no	6	70
LPC2365	32	256	no	8	no	no	yes	16	-	no	6	70
LPC2366	32	256	no	8	yes	no	yes	16	2	no	6	70
LPC2367	32	512	no	8	no	no	yes	16	-	yes	6	70
LPC2368	32	512	no	8	yes	no	yes	16	2	yes	6	70
LPC2377	32	512	Mini	8	no	no	yes	16	-	yes	8	104
LPC2378	32	512	Mini	8	yes	no	yes	16	2	yes	8	104
LPC2387	64	512	no	16	yes	yes	yes	16	2	yes	6	70
LPC2388	64	512	Mini	16	yes	yes	yes	16	2	yes	8	104

1.4 Applications

- Industrial control
- Medical systems

1.5 Ordering information and options

For ordering information for all LPC23xx parts, see Table 3. For ordering options, see

- Table 4 for LPC2361/62 parts.
- Table 5 for LPC2364/65/66/67/68 parts.
- Table 6 for LPC2377/78.
- Table 7 for LPC2387.
- Table 8 for LPC2388.

Table 3. LPC23xx ordering information

Type number	Package												
	Name	Description	Version										
LPC2361FBD100	LQFP100	plastic low profile quad flat package; 100 leads; body $14 \times 14 \times 1.4$ mm	SOT407-1										
LPC2362FBD100	LQFP100	plastic low profile quad flat package; 100 leads; body 14 \times 14 \times 1.4 mm	SOT407-1										
LPC2364FBD100	LQFP100	plastic low profile quad flat package; 100 leads; body 14 \times 14 \times 1.4 mm	SOT407-1										
LPC2364FET100	TFBGA100	plastic thin fine-pitch ball grid array package; 100 balls; body $9\times9\times0.7~\text{mm}$	SOT926-1										
LPC2365FBD100	LQFP100	plastic low profile quad flat package; 100 leads; body 14 \times 14 \times 1.4 mm	SOT407-1										
LPC2366FBD100	LQFP100	plastic low profile quad flat package; 100 leads; body 14 \times 14 \times 1.4 mm	SOT407-1										
LPC2367FBD100	LQFP100	plastic low profile quad flat package; 100 leads; body 14 \times 14 \times 1.4 mm	SOT407-1										
LPC2368FBD100	LQFP100	plastic low profile quad flat package; 100 leads; body 14 \times 14 \times 1.4 mm	SOT407-1										
LPC2368FET100	TFBGA100	plastic thin fine-pitch ball grid array package; 100 balls; body $9\times9\times0.7~\text{mm}$	SOT926-1										
LPC2377FBD144	LQFP144	plastic low profile quad flat package; 144 leads; body $20 \times 20 \times 1.4 \text{ mm}$	SOT486-1										

UM10211

 Table 3.
 LPC23xx ordering information ...continued

Type number	Package		
	Name	Description	Version
LPC2378FBD144	LQFP144	plastic low profile quad flat package; 144 leads; body $20 \times 20 \times 1.4$ mm	SOT486-1
LPC2387FBD100	LQFP100	plastic low profile quad flat package; 100 leads; body $14 \times 14 \times 1.4$ mm	SOT407-1
LPC2388FBD144	LQFP144	plastic low profile quad flat package; 144 leads; body $20 \times 20 \times 1.4$ mm	SOT486-1

Table 4. LPC2361/62 Ordering options

Type number	Flash	SRAM (kB)					Ethernet	USB	GP	Chann	els		Temp range
	(kB)	Local bus	Ethernet buffer	GP/USB	RTC	Total		device + 4 kB FIFO	DMA	CAN	ADC	DAC	
LPC2361FBD100	64	8	16 <mark>1</mark>	8	2	34	-	yes	yes	2	6	1	–40 °C to +85 °C
LPC2362FBD100	128	32	16	8	2	58	RMII	yes	yes	2	6	1	–40 °C to +85 °C

^[1] Available as general purpose SRAM for the LPC2361.

Table 5. LPC2364/65/66/67/68 Ordering options

Type number	Flash		SRAM	/I (kB)			Ether	USB	SD/	GP	С	hanne	ls	Temp
	(kB)	Local bus	Ethernet buffers	GP/ USB	RTC	Total	net	device + 4 kB FIFO	ММС	DMA	CAN	ADC	DAC	range
LPC2364FBD100	128	8	16	8	2	34	RMII	yes	no	yes	2	6	1	–40 °C to +85 °C
LPC2364FET100	128	8	16	8	2	34	RMII	yes	no	yes	2	6	1	-40 °C to +85 °C
LPC2365FBD100	256	32	16	8	2	58	RMII	no	no	yes	-	6	1	-40 °C to +85 °C
LPC2366FBD100	256	32	16	8	2	58	RMII	yes	no	yes	2	6	1	-40 °C to +85 °C
LPC2367FBD100	512	32	16	8	2	58	RMII	no	yes	yes	-	6	1	-40 °C to +85 °C
LPC2368FBD100	512	32	16	8	2	58	RMII	yes	yes	yes	2	6	1	–40 °C to +85 °C
LPC2368FET100	512	32	16	8	2	58	RMII	yes	yes	yes	2	6	1	-40 °C to +85 °C

Chapter 1: LPC23xx Introductory information

Table 6. LPC2377/78 ordering options

Type number	Flash		SRA	М (kB)		External bus				SD/	GP			Temp
	(kB)	Local bus	Ethernet buffer	GP/USB	RTC	Total		net	device + 4 kB FIFO	CAN channels	ММС	DMA	ADC channels	DAC channels	range
LPC2377FBD144	512	32	16	8	2	58	MiniBus: 8 data, 16 address, and 2 chip select lines	RMII	no	-	yes	yes	8	1	–40 °C to +85 °C
LPC2378FBD144	512	32	16	8	2	58	MiniBus: 8 data, 16 address, and 2 chip select lines	RMII	yes	2	yes	yes	8	1	–40 °C to +85 °C

Table 7. LPC2387 ordering options

Type number	Flash (kB)		SRAI	/I (kB)			Ether		SD/ MMC	GP DMA	С	Temp		
		Local bus	Ethernet buffers	GP/ USB	RTC	Total	net				CAN	ADC	DAC	range
LPC2387FBD100	512	64	16	16	2	98	RMII	yes	yes	yes	2	6	1	-40 °C to +85 °C

Table 8. LPC2388 ordering options

Type number	Flash (kB)	Local bus	Ethernet buffer 8	GP/USB ▼	RTC (B)	Total		Ether net	USB device host OTG+ 4 kB FIFO	CAN channels	SD/ MMC	GP DMA	ADC channels	DAC channels	Temp range
LPC2388FBD144	512	64	16	16	2	98	MiniBus: 8 data, 16 address, and 2 chip select lines	RMII	yes	2	yes	yes	8	1	–40 °C to +85 °C

1.6 Architectural overview

The LPC2300 consists of an ARM7TDMI-S CPU with emulation support, the ARM7 Local Bus for closely coupled, high speed access to the majority of on-chip memory, the AMBA Advanced High-performance Bus (AHB) interfacing to high speed on-chip peripherals and external memory, and the AMBA Advanced Peripheral Bus (APB) for connection to other on-chip peripheral functions. The microcontroller permanently configures the ARM7TDMI-S processor for little-endian byte order.

The microcontroller implements two AHB buses in order to allow the Ethernet block to operate without interference caused by other system activity. The primary AHB, referred to as AHB1, includes the Vectored Interrupt Controller, General Purpose DMA Controller, External Memory Controller, USB interface, and 8/16 kB SRAM primarily intended for use by the USB.

Chapter 1: LPC23xx Introductory information

The second AHB, referred to as AHB2, includes only the Ethernet block and an associated 16 kB SRAM. In addition, a bus bridge is provided that allows the secondary AHB to be a bus master on AHB1, allowing expansion of Ethernet buffer space into off-chip memory or unused space in memory residing on AHB1.

In summary, bus masters with access to AHB1 are the ARM7 itself, the USB block, the General Purpose DMA function, and the Ethernet block (via the bus bridge from AHB2). Bus masters with access to AHB2 are the ARM7 and the Ethernet block.

AHB peripherals are allocated a 2 MB range of addresses at the very top of the 4 GB ARM memory space. Each AHB peripheral is allocated a 16 kB address space within the AHB address space. Lower speed peripheral functions are connected to the APB bus. The AHB to APB bridge interfaces the APB bus to the AHB bus. APB peripherals are also allocated a 2 MB range of addresses, beginning at the 3.5 GB address point. Each APB peripheral is allocated a 16 kB address space within the APB address space.

1.7 ARM7TDMI-S processor

The ARM7TDMI-S is a general purpose 32 bit microprocessor, which offers high performance and very low power consumption. The ARM architecture is based on Reduced Instruction Set Computer (RISC) principles, and the instruction set and related decode mechanism are much simpler than those of microprogrammed Complex Instruction Set Computers. This simplicity results in a high instruction throughput and impressive real-time interrupt response from a small and cost-effective processor core.

Pipeline techniques are employed so that all parts of the processing and memory systems can operate continuously. Typically, while one instruction is being executed, its successor is being decoded, and a third instruction is being fetched from memory.

The ARM7TDMI-S processor also employs a unique architectural strategy known as THUMB, which makes it ideally suited to high-volume applications with memory restrictions, or applications where code density is an issue.

The key idea behind THUMB is that of a super-reduced instruction set. Essentially, the ARM7TDMI-S processor has two instruction sets:

- The standard 32 bit ARM instruction set.
- A 16 bit THUMB instruction set.

The THUMB set's 16 bit instruction length allows it to approach twice the density of standard ARM code while retaining most of the ARM's performance advantage over a traditional 16 bit processor using 16 bit registers. This is possible because THUMB code operates on the same 32 bit register set as ARM code.

THUMB code is able to provide up to 65% of the code size of ARM, and 160% of the performance of an equivalent ARM processor connected to a 16 bit memory system.

The ARM7TDMI-S processor is described in detail in the ARM7TDMI-S Data sheet that can be found on official ARM web site.

Chapter 1: LPC23xx Introductory information

1.8 On-chip flash memory system

The LPC2300 includes a Flash memory system with up to 512 kB. This memory may be used for both code and data storage. Programming of the Flash memory may be accomplished in several ways. It may be programmed In System via the serial port. The application program may also erase and/or program the Flash while the application is running, allowing a great degree of flexibility for data storage field firmware upgrades, etc.

The Flash is 128 bits wide and includes pre-fetching and buffering techniques to allow it to operate at SRAM speeds.


1.9 On-chip Static RAM


The LPC2300 includes a static RAM memory up to 64 kB in size, that may be used for code and/or data storage.


The SRAM controller incorporates a write-back buffer in order to prevent CPU stalls during back-to-back writes. The write-back buffer always holds the last data sent by software to the SRAM. The data is only written to the SRAM when software does another write. After a "warm" chip reset, the SRAM does not reflect the last write operation. Two identical writes to a location guarantee that the data will be present after a Reset. Alternatively, a dummy write operation before entering idle or power-down mode will similarly guarantee that the last data written will be present after a subsequent Reset.


Chapter 1: LPC23xx Introductory information


1.10 Block diagram

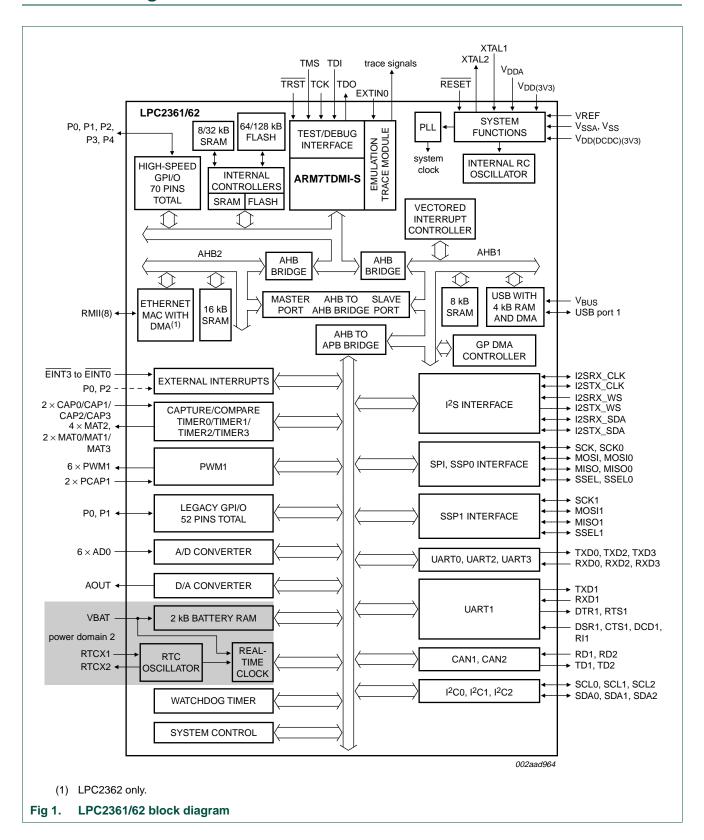

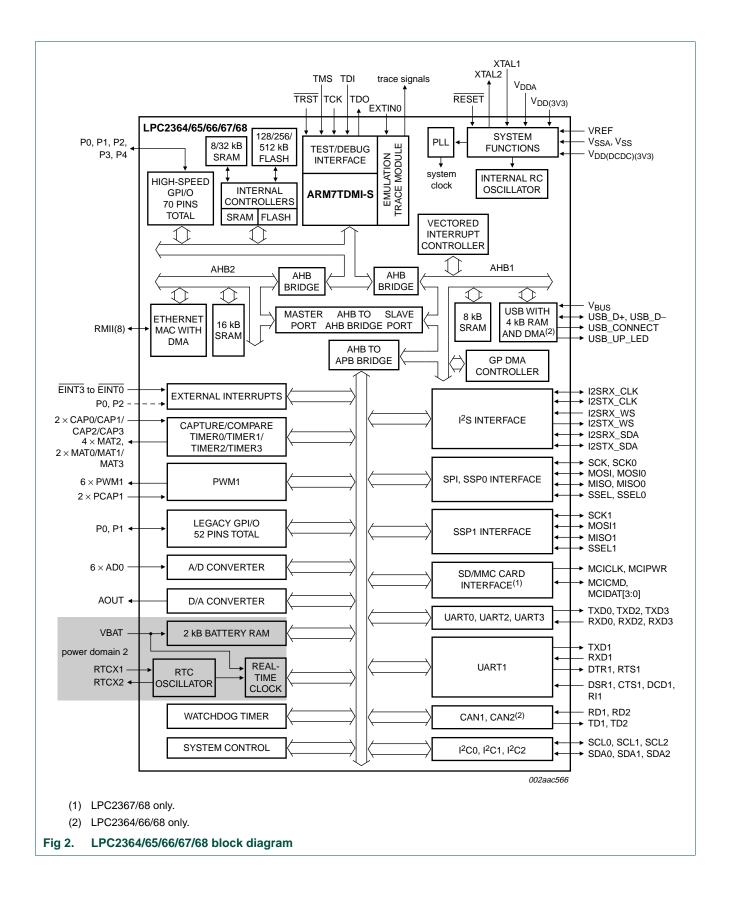

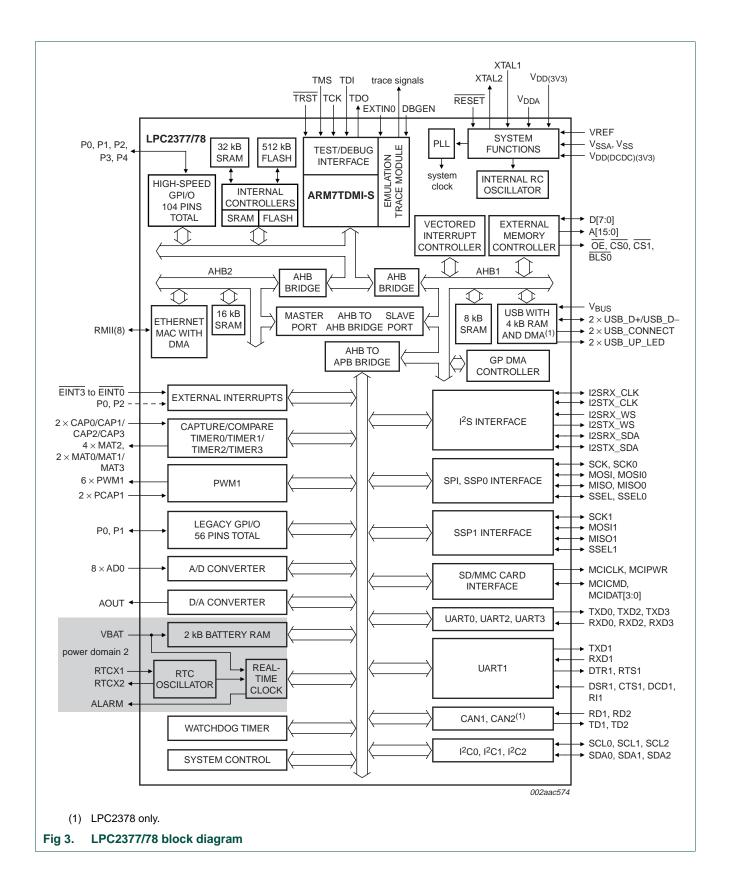

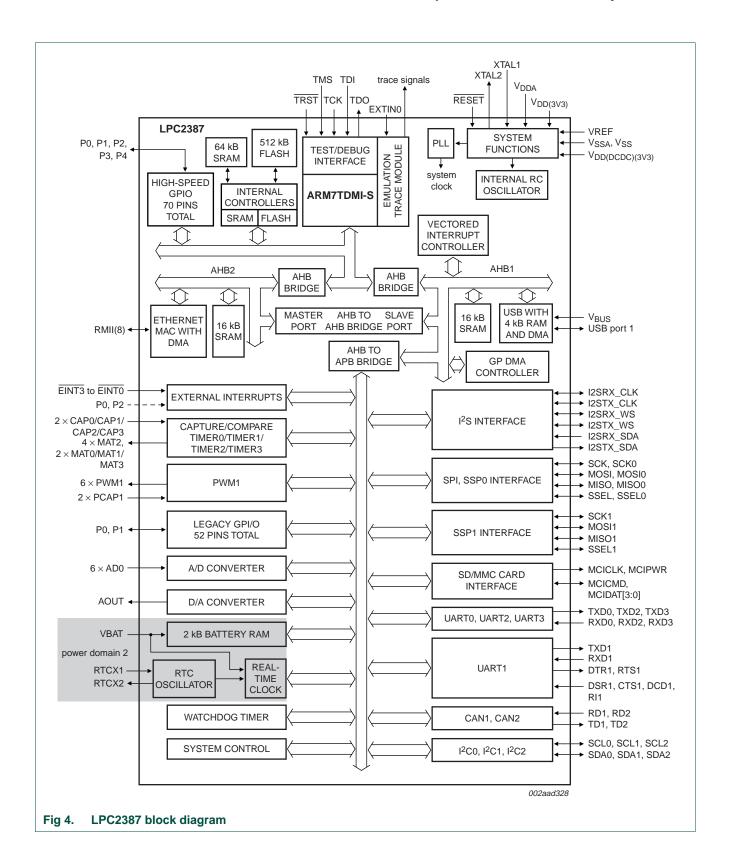

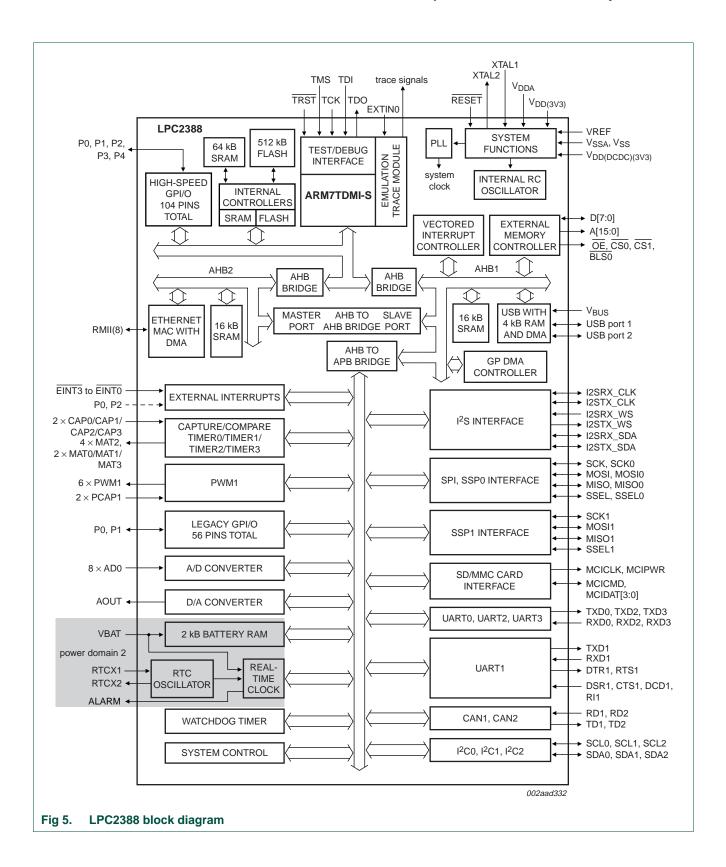

UM10211

Chapter 2: LPC23XX Memory addressing Rev. 4.1 — 5 September 2012

User manual

2.1 Memory map and peripheral addressing


ARM processors have a single 4 GB address space. The following table shows how this space is used on NXP embedded ARM devices. For memory option details see Table 2.


Table 9. LPC2300 memory usage


Address range	General use	Address range details and des	scription
0x0000 0000 to	on-chip	0x0000 0000 - 0x0007 FFFF	flash memory (up to 512 kB)
0x3FFF FFFF	NV memory and fast I/O	0x3FFF C000 - 0x3FFF FFFF	fast GPIO registers
0x4000 0000 to	on-chip RAM	0x4000 0000 - 0x4000 7FFF	RAM (up to 32 kB)
0x7FFF FFFF		0x4000 0000 - 0x4000 FFFF	RAM (64 kB for LPC2387/88)
		0x7FD0 0000 - 0x7FD0 1FFF	USB RAM (8 kB)
		0x7FD0 0000 - 0x7FD0 3FFF	USB RAM (16 kB for LPC2387/88)
		0x7FE0 0000 - 0x7FE0 3FFF	Ethernet RAM (16 kB)
0x8000 0000 to	off-chip memory	Two static memory banks, 64 KB	B each (LPC2377/78 and LPC2388 only):
0xDFFF FFFF		0x8000 0000 - 0x8000 FFFF	static memory bank 0, 64 KB
		0x8100 0000 - 0x8100 FFFF	static memory bank 1, 64 KB
0xE000 0000 to 0xEFFF FFFF	APB peripherals	0xE000 0000 - 0xE008 FFFF	36 peripheral blocks, 16 kB each (some unused), see <u>Table 10</u> .
		0xE01F C000 - 0xE01F FFFF	System Control Block
0xF000 0000 to	AHB peripherals	0xFFE0 0000 - 0xFFE0 3FFF	Ethernet Controller (not LPC2361)
0xFFFF FFFF		0xFFE0 4000 - 0xFFE0 7FFF	General Purpose DMA Controller
		0xFFE0 8000 - 0xFFE0 BFFF	External Memory Controller (EMC) (LPC2377/78, LPC2388 only)
		0xFFE0 C000 - 0xFFE0 FFFF	USB Controller (LPC2361/62/64/66/68, LPC2378, LPC2387, and LPC2388 only).
		0xFFFF F000 - 0xFFFF FFFF	Vectored Interrupt Controller (VIC)


2.2 Memory maps


The LPC2300 incorporates several distinct memory regions, shown in the following figures. Figure 7, Figure 8, and Figure 9 show the overall map of the entire address space from the user program viewpoint following reset. The interrupt vector area supports address remapping, which is described later in this section.

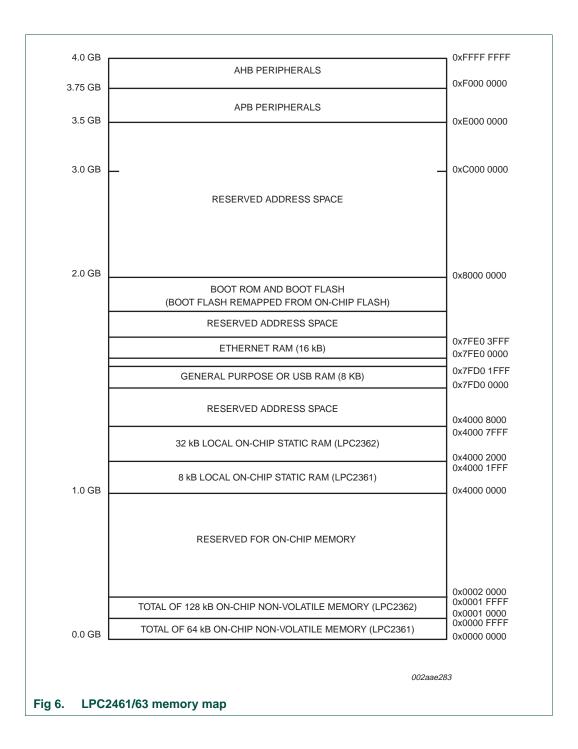

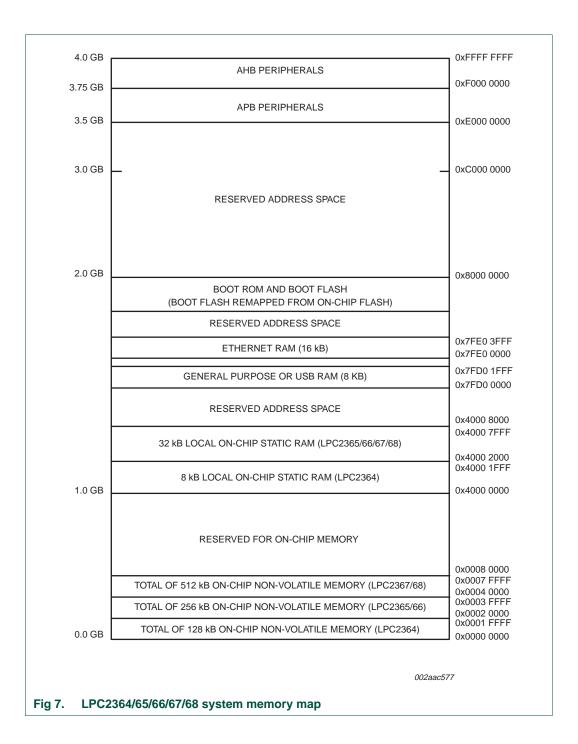

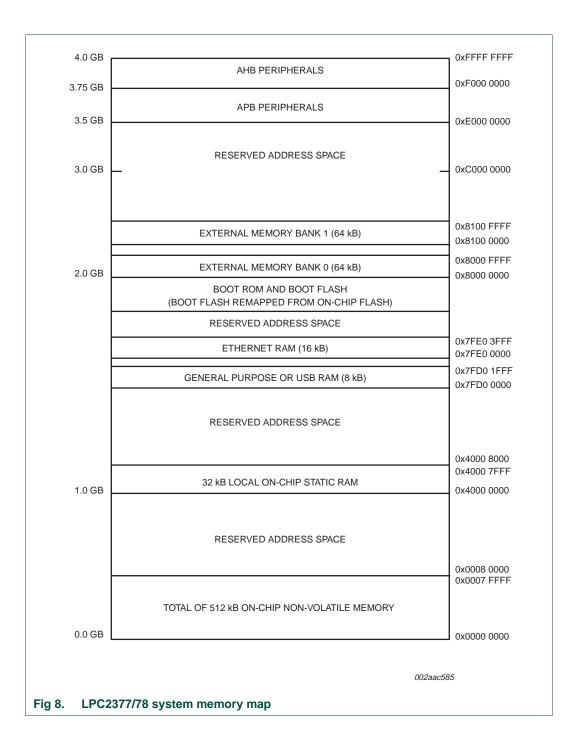

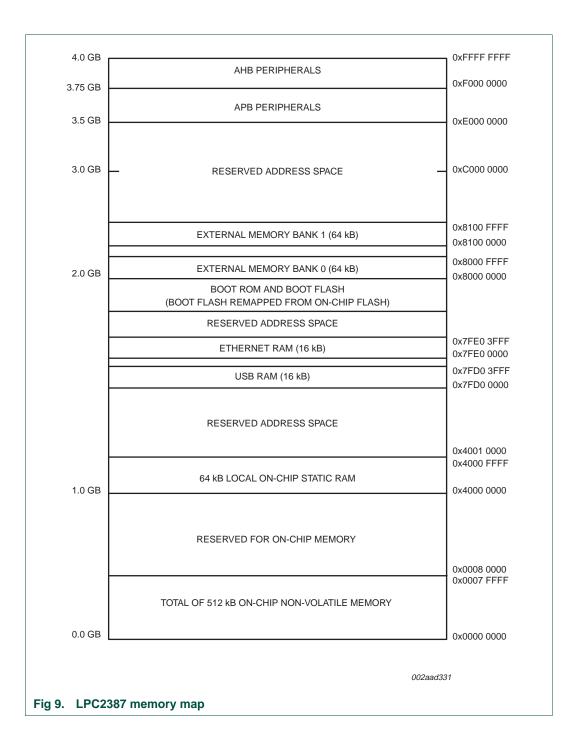

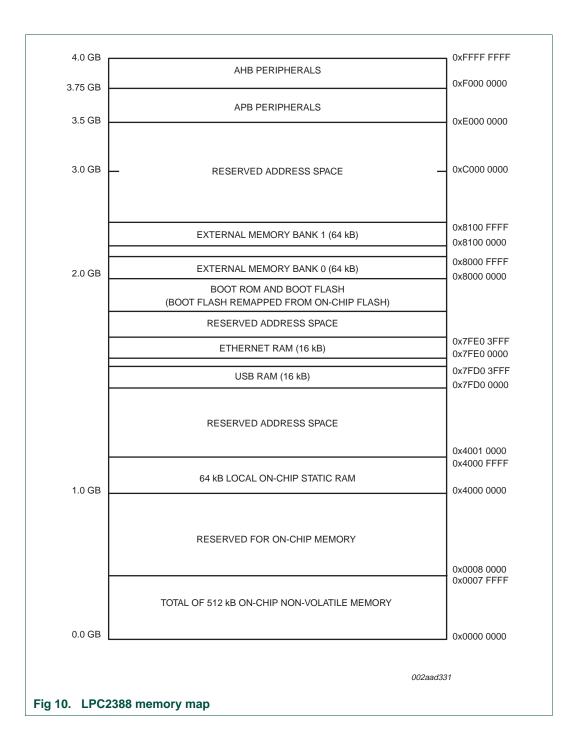


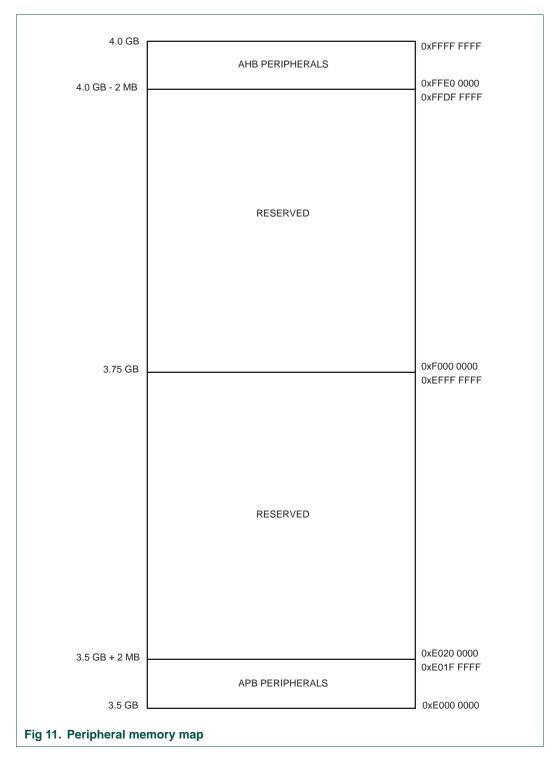


Figure 12 and Table 10 show different views of the peripheral address space. Both the AHB and APB peripheral areas are 2 megabyte spaces which are divided up into 128 peripherals. Each peripheral space is 16 kilobytes in size. This allows simplifying the address decoding for each peripheral.

Chapter 2: LPC23XX Memory addressing

All peripheral register addresses are word aligned (to 32 bit boundaries) regardless of their size. This eliminates the need for byte lane mapping hardware that would be required to allow byte (8 bit) or half-word (16 bit) accesses to occur at smaller boundaries. An implication of this is that word and half-word registers must be accessed all at once. For example, it is not possible to read or write the upper byte of a word register separately.

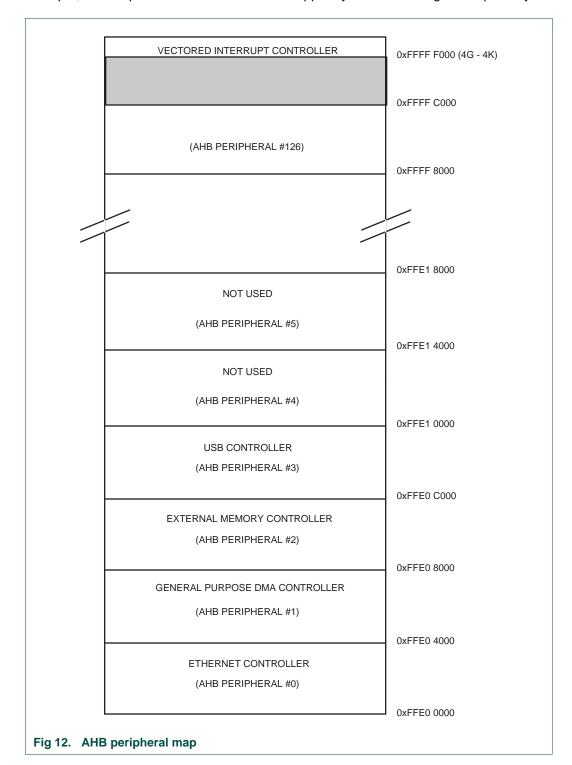

Chapter 2: LPC23XX Memory addressing

2.3 APB peripheral addresses

The following table shows the APB address map. No APB peripheral uses all of the 16 kB space allocated to it. Typically each device's registers are "aliased" or repeated at multiple locations within each 16 kB range.

Table 10. APB peripherals and base addresses

APB Peripheral	Base Address	Peripheral Name
0	0xE000 0000	Watchdog Timer
1	0xE000 4000	Timer 0
2	0xE000 8000	Timer 1
3	0xE000 C000	UART0
4	0xE001 0000	UART1
5	0xE001 4000	Not used
6	0xE001 8000	PWM1
7	0xE001 C000	I ² C0
8	0xE002 0000	SPI
9	0xE002 4000	RTC
10	0xE002 8000	GPIO
11	0xE002 C000	Pin Connect Block
12	0xE003 0000	SSP1
13	0xE003 4000	ADC
14	0xE003 8000	CAN Acceptance Filter RAM[1]
15	0xE003 C000	CAN Acceptance Filter Registers[1]
16	0xE004 0000	CAN Common Registers[1]
17	0xE004 4000	CAN Controller 1[1]
18	0xE004 8000	CAN Controller 2[1]
19 to 22	0xE004 C000 to 0xE005 8000	Not used
23	0xE005 C000	I ² C1
24	0xE006 0000	Not used
25	0xE006 4000	Not used
26	0xE006 8000	SSP0
27	0xE006 C000	DAC
28	0xE007 0000	Timer 2
29	0xE007 4000	Timer 3
30	0xE007 8000	UART2
31	0xE007 C000	UART3
32	0xE008 0000	I ² C2
33	0xE008 4000	Battery RAM
34	0xE008 8000	I ² S
35	0xE008 C000	SD/MMC Card Interface[2]
36 to 126	0xE009 0000 to 0xE01F BFFF	Not used
127	0xE01F C000	System Control Block

^[1] CAN interface is available in LPC2364/66/68, LPC2378, LPC2387, and LPC2388.

Chapter 2: LPC23XX Memory addressing

[2] The SD/MMC card interface is available in LPC2365/66, LPC2377/78, LPC2387, and LPC2388.

2.4 LPC2300 memory re-mapping and boot ROM

2.4.1 Memory map concepts and operating modes

The basic concept on the LPC2300 is that each memory area has a "natural" location in the memory map. This is the address range for which code residing in that area is written. The bulk of each memory space remains permanently fixed in the same location, eliminating the need to have portions of the code designed to run in different address ranges.

Because of the location of the interrupt vectors on the ARM7 processor (at addresses 0x0000 0000 through 0x0000 001C, as shown in <u>Table 11</u> below), a small portion of the Boot ROM and SRAM spaces need to be re-mapped in order to allow alternative uses of interrupts in the different operating modes described in <u>Table 12</u>. Re-mapping of the interrupts is accomplished via the Memory Mapping Control feature (<u>Section 2.5 "Memory mapping control" on page 27</u>).

Table 11. ARM exception vector locations

Address	Exception
0x0000 0000	Reset
0x0000 0004	Undefined Instruction
0x0000 0008	Software Interrupt
0x0000 000C	Prefetch Abort (instruction fetch memory fault)
0x0000 0010	Data Abort (data access memory fault)
0x0000 0014	Reserved
	Note: Identified as reserved in ARM documentation, this location is used by the Boot Loader as the Valid User Program key. This is described in detail in $\underbrace{\text{Section 29.3.1.1}}$.
0x0000 0018	IRQ
0x0000 001C	FIQ

Table 12. LPC2300 Memory mapping modes

Mode	Activation	Usage
Boot Loader mode	Hardware activation by any Reset	The Boot Loader always executes after any reset. The Boot ROM interrupt vectors are mapped to the bottom of memory to allow handling exceptions and using interrupts during the Boot Loading process. A sector of the Flash memory (the Boot Flash) is available to hold part of the Boot Code.

Chapter 2: LPC23XX Memory addressing

Table 12.	LPC2300	Memory	manning	modes
Iable IZ.	LI OZJOU	IAICIIIOI A	IIIabbilia	IIIOGES

		,
Mode	Activation	Usage
User Flash mode	Software activation by boot code	Activated by the Boot Loader when a valid User Program Signature is recognized in memory and Boot Loader operation is not forced. Interrupt vectors are not re-mapped and are found in the bottom of the Flash memory.
User RAM mode	Software activation by user program	Activated by a User Program as desired. Interrupt vectors are re-mapped to the bottom of the Static RAM.
User External Memory mode	Software activation by user code	Activated by a User Program as desired. Interrupt vectors are re-mapped to external memory bank 0 ^[1] .

^[1] See EMCControl register address mirror bit in Table 60 for address of external memory bank 0.

2.4.2 Memory re-mapping

In order to allow for compatibility with future derivatives, the entire Boot ROM is mapped to the top of the on-chip memory space. In this manner, the use of larger or smaller flash modules will not require changing the location of the Boot ROM (which would require changing the Boot Loader code itself) or changing the mapping of the Boot ROM interrupt vectors. Memory spaces other than the interrupt vectors remain in fixed locations. Figure 13 shows the on-chip memory mapping in the modes defined above.

The portion of memory that is re-mapped to allow interrupt processing in different modes includes the interrupt vector area (32 bytes) and an additional 32 bytes for a total of 64 bytes, that facilitates branching to interrupt handlers at distant physical addresses. The remapped code locations overlay addresses 0x0000 0000 through 0x0000 003F. A typical user program in the Flash memory can place the entire FIQ handler at address 0x0000 001C without any need to consider memory boundaries. The vector contained in the SRAM, external memory, and Boot ROM must contain branches to the actual interrupt handlers, or to other instructions that accomplish the branch to the interrupt handlers.

There are three reasons this configuration was chosen:

- 1. To give the FIQ handler in the Flash memory the advantage of not having to take a memory boundary caused by the remapping into account.
- 2. Minimize the need to for the SRAM and Boot ROM vectors to deal with arbitrary boundaries in the middle of code space.
- 3. To provide space to store constants for jumping beyond the range of single word branch instructions.

Re-mapped memory areas, including the Boot ROM and interrupt vectors, continue to appear in their original location in addition to the re-mapped address.

Details on re-mapping and examples can be found in <u>Section 2.5 "Memory mapping control" on page 27</u>.

Chapter 2: LPC23XX Memory addressing

2.5 Memory mapping control

The Memory Mapping Control alters the mapping of the interrupt vectors that appear beginning at address 0x0000 0000. This allows code running in different memory spaces to have control of the interrupts.

2.5.1 Memory Mapping Control Register (MEMMAP - 0xE01F C040)

Whenever an exception handling is necessary, microcontroller will fetch an instruction residing on exception corresponding address as described in Table 11 "ARM exception vector locations" on page 25. The MEMMAP register determines the source of data that will fill this table.

Table 13. Memory mapping control registers

Name	Description	Access	Reset value	Address
MEMMAP	Memory mapping control. Selects whether the ARM interrupt vectors are read from the Boot ROM, User Flash, or RAM.	R/W	0x00	0xE01F C040

Table 14. Memory Mapping control register (MEMMAP - address 0xE01F C040) bit description

Bit	Symbol	Value	Description	Reset value
1:0	MAP	00	Boot Loader Mode. Interrupt vectors are re-mapped to Boot ROM.	00
		01	User Flash Mode. Interrupt vectors are not re-mapped and reside in Flash.	
		10	User RAM Mode. Interrupt vectors are re-mapped to Static RAM.	
		11	User External Memory Mode (available on LPC2377/78 and LPC2388 only).	
		Warning the dev	ng: Improper setting of this value may result in incorrect operation of vice.	
7:2	-	-	Reserved, user software should not write ones to reserved bits. The value read from a reserved bit is not defined.	NA

2.5.2 Memory mapping control usage notes

Memory Mapping Control simply selects one out of three available sources of data (sets of 64 bytes each) necessary for handling ARM exceptions (interrupts).

For example, whenever a Software Interrupt request is generated, ARM core will always fetch 32 bit data "residing" on 0x0000 0008 see <u>Table 11 "ARM exception vector</u> <u>locations" on page 25</u>. This means that when MEMMAP[1:0] = 10 (User RAM Mode), read/fetch from 0x0000 0008 will provide data stored in 0x4000 0008. In case of MEMMAP[1:0] = 00 (Boot Loader Mode), read/fetch from 0x0000 0008 will provide data available also at 0x7FFF E008 (Boot ROM remapped from on-chip Bootloader).

UM10211 **NXP Semiconductors**

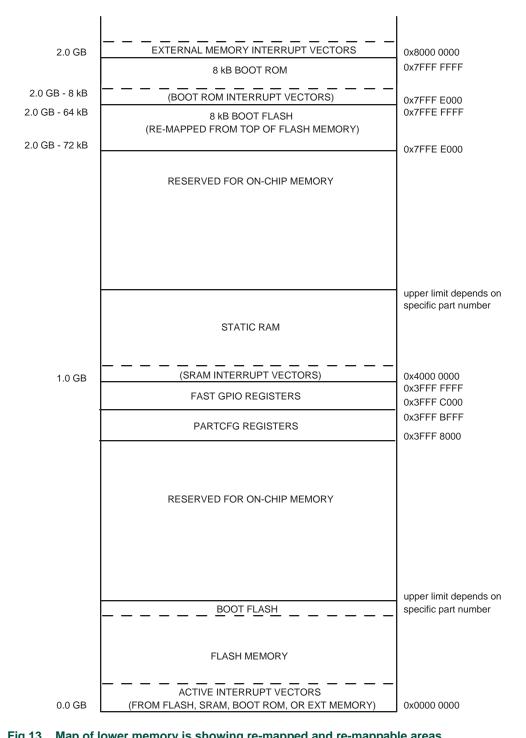


Fig 13. Map of lower memory is showing re-mapped and re-mappable areas

Chapter 2: LPC23XX Memory addressing

2.6 Prefetch abort and data abort exceptions

The LPC2300 generates the appropriate bus cycle abort exception if an access is attempted for an address that is in a reserved or unassigned address region. The regions are:

- Areas of the memory map that are not implemented for a specific ARM derivative. For the LPC2300, this is:
 - Address space between On-Chip Non-Volatile Memory and the Special Register space. Labelled "Reserved for On-Chip Memory" in <u>Figure 7</u>, <u>Figure 8</u>, and <u>Figure 9</u>.
 - Address space between On-Chip Static RAM and the Boot ROM. Labelled "Reserved Address Space" in Figure 7, Figure 8, and Figure 9.
 - External Memory
 - Reserved regions of the AHB and APB spaces. See Figure 11.
- Unassigned AHB peripheral spaces. See <u>Figure 12</u>.
- Unassigned APB peripheral spaces. See <u>Table 10</u>.

For these areas, both attempted data access and instruction fetch generate an exception. In addition, a Prefetch Abort exception is generated for any instruction fetch that maps to an AHB or APB peripheral address, or to the Special Register space located just below the SRAM at addresses 0x3FFF8000 through 0x3FFFFFF.

Within the address space of an existing APB peripheral, a data abort exception is not generated in response to an access to an undefined address. Address decoding within each peripheral is limited to that needed to distinguish defined registers within the peripheral itself. For example, an access to address 0xE000 D000 (an undefined address within the UART0 space) may result in an access to the register defined at address 0xE000 C000. Details of such address aliasing within a peripheral space are not defined in the LPC2300 documentation and are not a supported feature.

If software executes a write directly to the Flash memory, the MAM generates a data abort exception. Flash programming must be accomplished using the specified Flash programming interface provided by the Boot Code.

Note that the ARM core stores the Prefetch Abort flag along with the associated instruction (which will be meaningless) in the pipeline and processes the abort only if an attempt is made to execute the instruction fetched from the illegal address. This prevents accidental aborts that could be caused by prefetches that occur when code is executed very near a memory boundary.

UM10211

Chapter 3: LPC23XX System control block Rev. 4.1 — 5 September 2012

User manual

3.1 Introduction

The system control block includes several system features and control registers for a number of functions that are not related to specific peripheral devices. These include:

- Reset
- Brown-Out detection
- External interrupt inputs
- Miscellaneous system controls and status
- · Code security vs. debugging

Each type of function has its own registers if any are required and unneeded bits are defined as reserved in order to allow future expansion. Unrelated functions never share the same register addresses

3.2 Pin description

Table 15 shows pins that are associated with System Control block functions.

Table 15. Pin summary

Pin name	Pin direction	Pin description
EINT0	Input	External Interrupt Input 0 - An active low/high level or falling/rising edge general purpose interrupt input. This pin may be used to wake up the processor from Idle or Power-down modes.
EINT1	Input	External Interrupt Input 1 - See the EINT0 description above.
EINT2	Input	External Interrupt Input 2 - See the EINT0 description above.
EINT3	Input	External Interrupt Input 3 - See the EINT0 description above.
RESET	Input	External Reset input - A LOW on this pin resets the chip, causing I/O ports and peripherals to take on their default states, and the processor to begin execution at address 0x0000 0000.

3.3 Register description

All registers, regardless of size, are on word address boundaries. Details of the registers appear in the description of each function.

Table 16. Summary of system control registers

Name	Description	Access	Reset value	Address
External interrup	ots			
EXTINT	External Interrupt Flag Register	R/W	0x00	0xE01F C140
EXTMODE	External Interrupt Mode register	R/W	0x00	0xE01F C148
EXTPOLAR	External Interrupt Polarity Register	R/W	0x00	0xE01F C14C

UM10211

Chapter 3: LPC23XX System control block


Table 16. Summary of system control registers

Name	Description	Access	Reset value	Address
Reset				
RSID	Reset Source Identification Register	R/W	see text	0xE01F C180
AHB configuration	on registers			
AHBCFG1	Configures the AHB1 arbiter.	R/W	0x0000 0145	0xE01F C188
AHBCFG2	Configures the AHB2 arbiter.	R/W	0x0000 0145	0xE01F C18C
Syscon miscellaneous registers				
SCS	System Control and Status	R/W	0x08	0xE01F C1A0

3.4 Reset

Reset has four sources on the LPC2300: the RESET pin, the Watchdog Reset, Power On Reset (POR) and the Brown Out Detection circuit (BOD). The RESET pin is a Schmitt trigger input pin. Assertion of chip Reset by any source, once the operating voltage attains a usable level, starts the Wake-up Timer (see description in Section 4.9 "Wakeup timer" in this chapter), causing reset to remain asserted until the external Reset is de-asserted, the oscillator is running, a fixed number of clocks have passed, and the Flash controller has completed its initialization. The reset logic is shown in the following block diagram (see Figure 14).

Chapter 3: LPC23XX System control block

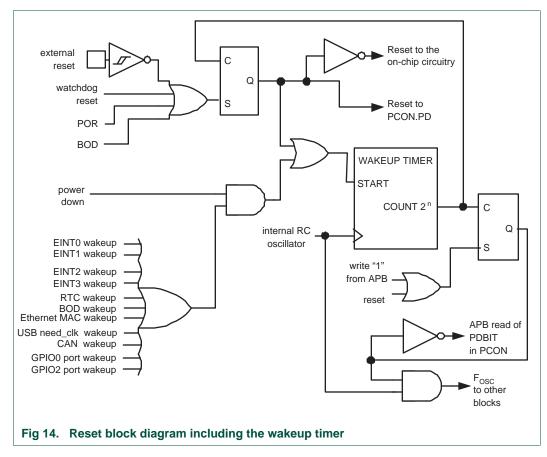


On the assertion of any of reset sources (POR, BOD reset, External reset and Watchdog reset), the IRC starts up. After the IRC-start-up time (maximum of 60 μ s on power-up) and after the IRC provides stable clock output, the reset signal is latched and synchronized on the IRC clock. Then the following two sequences start simultaneously :

- The 2-bit IRC wake-up timer starts counting when the synchronized reset is de-asserted. The boot code in the ROM starts when the 2-bit IRC wake-up timer times out. The boot code performs the boot tasks and may jump to the Flash. If the Flash is not ready to access, the MAM will insert wait cycles until the Flash is ready.
- 2. The Flash wake-up-timer (9-bit) starts counting when the synchronized reset is de-asserted. The Flash wake-up-timer generates the 100 μs Flash start-up time. Once it times out, the Flash initialization sequence is started, which takes about 250 cycles. When it's done, the MAM will be granted access to the Flash.

When the internal Reset is removed, the processor begins executing at address 0, which is initially the Reset vector mapped from the Boot Block. At that point, all of the processor and peripheral registers have been initialized to predetermined values.

<u>Figure 15</u> shows an example of the relationship between the RESET, the IRC, and the processor status when the LPC2300 starts up after reset. See <u>Section 4.4.2 "Main oscillator"</u> for start-up of the main oscillator if selected by the user code.

Chapter 3: LPC23XX System control block

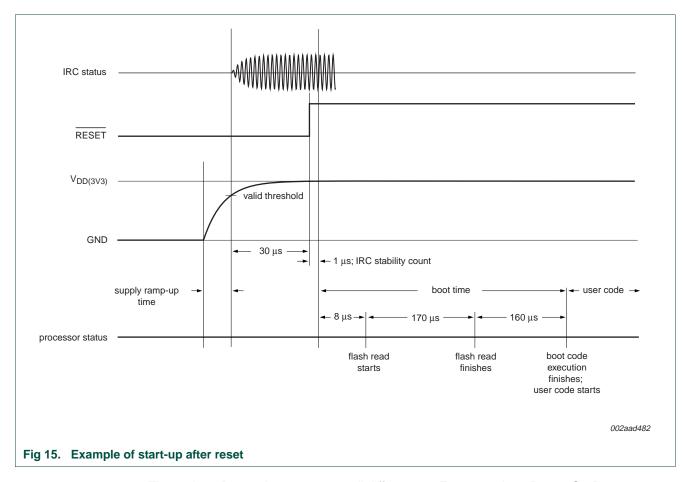

The various Resets have some small differences. For example, a Power On Reset causes the value of certain pins to be latched to configure the part.

For more details on Reset, PLL and startup/boot code interaction see <u>Section 4.6.2 "PLL and startup/boot code interaction"</u>.

3.4.1 Reset Source Identification Register (RSIR - 0xE01F C180)

This register contains one bit for each source of Reset. Writing a 1 to any of these bits clears the corresponding read-side bit to 0. The interactions among the four sources are described below.

Table 17. Reset Source Identification register (RSID - address 0xE01F C180) bit description

Bit	Symbol	Description	Reset value
0	POR	Assertion of the POR signal sets this bit, and clears all of the other bits in this register. But if another Reset signal (e.g., External Reset) remains asserted after the POR signal is negated, then its bit is set. This bit is not affected by any of the other sources of Reset.	See text
1	EXTR	Assertion of the RESET signal sets this bit. This bit is cleared by POR, but is not affected by WDT or BOD reset.	See text

Chapter 3: LPC23XX System control block

Table 17. Reset Source Identification register (RSID - address 0xE01F C180) bit description

Bit	Symbol	Description	Reset value	
2	WDTR	This bit is set when the Watchdog Timer times out and the WDTRESET bit in the Watchdog Mode Register is 1. It is cleared by any of the other sources of Reset.	See text	
3	BODR	This bit is set when the 3.3 V power reaches a level below 2.6 V.	See text	
		If the $V_{DD(DCDC)(3V3)}$ voltage dips from 3.3 V to 2.5 V and backs up, the BODR bit will be set to 1.		
		If the $V_{DD(DCDC)(3V3)}$ voltage dips from 3.3 V to 2.5 V and continues to decline to the level at which POR is asserted (nominally 1 V), the BODR bit is cleared.		
		if the $V_{DD(DCDC)(3V3)}$ voltage rises continuously from below 1 V to a level above 2.6 V, the BODR will be set to 1.		
		This bit is not affected by External Reset nor Watchdog Reset.		
		Note: Only in case when a reset occurs and the POR = 0, the BODR bit indicates if the $V_{DD(DCDC)(3V3)}$ voltage was below 2.6 V or not.		
7:4	-	Reserved, user software should not write ones to reserved bits. The value read from a reserved bit is not defined.	NA	

3.5 Brown-out detection

The LPC2300 includes 2-stage monitoring of the voltage on the $V_{DD(DCDC)(3V3)}$ pins. If this voltage falls below 2.95 V, the Brown-Out Detector (BOD) asserts an interrupt signal to the Vectored Interrupt Controller. This signal can be enabled for interrupt in the Interrupt Enable Register in the VIC (see Section 6.5.4 "Interrupt Enable Register (VICIntEnable - 0xFFFF F010)") in order to cause a CPU interrupt; if not, software can monitor the signal by reading the Raw Interrupt Status Register (see Section 6.5.3 "Raw Interrupt Status Register (VICRawIntr - 0xFFFF F008)").

The second stage of low-voltage detection asserts Reset to inactivate the LPC2300 when the voltage on the $V_{DD(DCDC)(3V3)}$ pins falls below 2.65 V. This Reset prevents alteration of the Flash as operation of the various elements of the chip would otherwise become unreliable due to low voltage. The BOD circuit maintains this reset down below 1 V, at which point the Power-On Reset circuitry maintains the overall Reset.

Both the 2.95 V and 2.65 V thresholds include some hysteresis. In normal operation, this hysteresis allows the 2.95 V detection to reliably interrupt, or a regularly-executed event loop to sense the condition.

But when Brown-Out Detection is enabled to bring the LPC2300 out of Power-Down mode (which is itself not a guaranteed operation -- see Section 4.8.7 "Power Mode Control register (PCON - 0xE01F C0C0)"), the supply voltage may recover from a transient before the Wake-up Timer has completed its delay. In this case, the net result of the transient BOD is that the part wakes up and continues operation after the instructions that set Power-Down Mode, without any interrupt occurring and with the BOD bit in the RSID being 0. Since all other wake-up conditions have latching flags (see Section 3.6.2 "External Interrupt flag register (EXTINT - 0xE01F C140)" and Section 26.7.2), a wake-up of this type, without any apparent cause, can be assumed to be a Brown-Out that has gone away.

Chapter 3: LPC23XX System control block

3.6 External interrupt inputs

The LPC2300 includes four External Interrupt Inputs as selectable pin functions. In addition, external interrupts have the ability to wake up the CPU from Power-down mode. This is controlled by the register INTWAKE, which is described in the Clocking and Power Control chapter under the Power Control heading

3.6.1 Register description

The external interrupt function has four registers associated with it. The EXTINT register contains the interrupt flags. The EXTMODE and EXTPOLAR registers specify the level and edge sensitivity parameters.

Table 18. External Interrupt registers

Name	Description	Access	Reset value[1]	Address
EXTINT	The External Interrupt Flag Register contains interrupt flags for EINT0, EINT1, EINT2 and EINT3. See <u>Table 19</u> .	R/W	0x00	0xE01F C140
EXTMODE	The External Interrupt Mode Register controls whether each pin is edge- or level-sensitive. See <u>Table 20</u> .	R/W	0x00	0xE01F C148
EXTPOLAR	The External Interrupt Polarity Register controls which level or edge on each pin will cause an interrupt. See <u>Table 21</u> .	R/W	0x00	0xE01F C14C

^[1] Reset Value reflects the data stored in used bits only. It does not include reserved bits content.

3.6.2 External Interrupt flag register (EXTINT - 0xE01F C140)

When a pin is selected for its external interrupt function, the level or edge on that pin (selected by its bits in the EXTPOLAR and EXTMODE registers) will set its interrupt flag in this register. This asserts the corresponding interrupt request to the VIC, which will cause an interrupt if interrupts from the pin are enabled.

Writing ones to bits EINT0 through EINT3 in EXTINT register clears the corresponding bits. In level-sensitive mode the interrupt is cleared only when the pin is in its inactive state.

Once a bit from EINT0 to EINT3 is set and an appropriate code starts to execute (handling wake-up and/or external interrupt), this bit in EXTINT register must be cleared. Otherwise event that was just triggered by activity on the EINT pin will not be recognized in future.

Important: whenever a change of external interrupt operating mode (i.e. active level/edge) is performed (including the initialization of an external interrupt), the corresponding bit in the EXTINT register must be cleared! For details see Section 3.6.3 "External Interrupt Mode register (EXTMODE - 0xE01F C148)" and Section 3.6.4 "External Interrupt Polarity register (EXTPOLAR - 0xE01F C14C)".

For example, if a system wakes up from power-down using low level on external interrupt 0 pin, its post-wake-up code must reset EINT0 bit in order to allow future entry into the power-down mode. If EINT0 bit is left set to 1, subsequent attempts to invoke power-down mode will fail. The same goes for external interrupt handling.

Chapter 3: LPC23XX System control block

More details on Power-down mode will be discussed in the following chapters.

Table 19. External Interrupt Flag register (EXTINT - address 0xE01F C140) bit description

	0 .0. =	ternal interrupt riag register (EXTINT - address 0xE011 0140) bit descri	puon
Bit	Symbol	Description	Reset value
0	EINT0	In level-sensitive mode, this bit is set if the EINT0 function is selected for its pin, and the pin is in its active state. In edge-sensitive mode, this bit is set if the EINT0 function is selected for its pin, and the selected edge occurs on the pin.	0
		This bit is cleared by writing a one to it, except in level sensitive mode when the pin is in its active state. $\fbox{11}$	
1	EINT1	In level-sensitive mode, this bit is set if the EINT1 function is selected for its pin, and the pin is in its active state. In edge-sensitive mode, this bit is set if the EINT1 function is selected for its pin, and the selected edge occurs on the pin.	0
		This bit is cleared by writing a one to it, except in level sensitive mode when the pin is in its active state. $\[\]$	
2	EINT2	In level-sensitive mode, this bit is set if the EINT2 function is selected for its pin, and the pin is in its active state. In edge-sensitive mode, this bit is set if the EINT2 function is selected for its pin, and the selected edge occurs on the pin.	0
		This bit is cleared by writing a one to it, except in level sensitive mode when the pin is in its active state. $\[\]$	
3	EINT3	In level-sensitive mode, this bit is set if the EINT3 function is selected for its pin, and the pin is in its active state. In edge-sensitive mode, this bit is set if the EINT3 function is selected for its pin, and the selected edge occurs on the pin.	0
		This bit is cleared by writing a one to it, except in level sensitive mode when the pin is in its active state.	
7:4	-	Reserved, user software should not write ones to reserved bits. The value read from a reserved bit is not defined.	NA

^[1] Example: e.g. if the EINTx is selected to be low level sensitive and low level is present on corresponding pin, this bit can not be cleared; this bit can be cleared only when signal on the pin becomes high.

3.6.3 External Interrupt Mode register (EXTMODE - 0xE01F C148)

The bits in this register select whether each EINT pin is level- or edge-sensitive. Only pins that are selected for the EINT function (see Section 9.5) and enabled in the VICIntEnable register (Section 6.5.4 "Interrupt Enable Register (VICIntEnable - 0xFFFF F010)") can cause interrupts from the External Interrupt function (though of course pins selected for other functions may cause interrupts from those functions).

Note: Software should only change a bit in this register when its interrupt is disabled in VICIntEnable, and should write the corresponding 1 to EXTINT before enabling (initializing) or re-enabling the interrupt. An extraneous interrupts could be set by changing the mode and not having the EXTINT cleared.

Chapter 3: LPC23XX System control block

Table 20. External Interrupt Mode register (EXTMODE - address 0xE01F C148) bit description

Bit	Symbol	Value	Description	Reset value
0	EXTMODE0	0	Level-sensitivity is selected for $\overline{EINT0}$.	0
		1	EINT0 is edge sensitive.	
1	1 EXTMODE1		Level-sensitivity is selected for EINT1.	0
			EINT1 is edge sensitive.	
2	2 EXTMODE2		Level-sensitivity is selected for EINT2.	0
		1	EINT2 is edge sensitive.	
3	EXTMODE3	0	Level-sensitivity is selected for EINT3.	0
			EINT3 is edge sensitive.	
7:4	-	-	Reserved, user software should not write ones to reserved bits. The value read from a reserved bit is not defined.	NA

3.6.4 External Interrupt Polarity register (EXTPOLAR - 0xE01F C14C)

In level-sensitive mode, the bits in this register select whether the corresponding pin is high- or low-active. In edge-sensitive mode, they select whether the pin is rising- or falling-edge sensitive. Only pins that are selected for the EINT function (see Section 9.5) and enabled in the VICIntEnable register (Section 6.5.4 "Interrupt Enable Register (VICIntEnable - 0xFFFF F010)") can cause interrupts from the External Interrupt function (though of course pins selected for other functions may cause interrupts from those functions).

Note: Software should only change a bit in this register when its interrupt is disabled in VICIntEnable, and should write the corresponding 1 to EXTINT before enabling (initializing) or re-enabling the interrupt. An extraneous interrupts could be set by changing the polarity and not having the EXTINT cleared.

Table 21. External Interrupt Polarity register (EXTPOLAR - address 0xE01F C14C) bit description

Bit	Symbol	Value	Description	Reset value
0	EXTPOLAR0	0	EINTO is low-active or falling-edge sensitive (depending on EXTMODE0).	0
		1	EINTO is high-active or rising-edge sensitive (depending on EXTMODE0).	
1	EXTPOLAR1	0	EINT1 is low-active or falling-edge sensitive (depending on EXTMODE1).	0
		1	EINT1 is high-active or rising-edge sensitive (depending on EXTMODE1).	
2	EXTPOLAR2	0	EINT2 is low-active or falling-edge sensitive (depending on EXTMODE2).	0
		1	EINT2 is high-active or rising-edge sensitive (depending on EXTMODE2).	0 0

Chapter 3: LPC23XX System control block

Table 21. External Interrupt Polarity register (EXTPOLAR - address 0xE01F C14C) bit description

Bit	Symbol	Value	Description	Reset value
3	EXTPOLAR3	0	EINT3 is low-active or falling-edge sensitive (depending on EXTMODE3).	0
		1	EINT3 is high-active or rising-edge sensitive (depending on EXTMODE3).	
7:4	-	-	Reserved, user software should not write ones to reserved bits. The value read from a reserved bit is not defined.	NA

3.7 Other system controls and status flags

Some aspects of controlling LPC2300 operation that do not fit into peripheral or other registers are grouped here.

3.7.1 AHB Configuration

The AHB configuration register allows changing AHB scheduling and arbitration strategies.

Table 22. AHB configuration register map

Name	Description	Access	Reset value	Address
AHBCFG1	Configures the AHB1 arbiter.	R/W	0x0000 0145	0xE01F C188
AHBCFG2	Configures the AHB2 arbiter.	R/W	0x0000 0145	0xE01F C18C

3.7.1.1 AHB Arbiter Configuration register 1 (AHBCFG1 - 0xE01F C188)

By default, the AHB1 access is scheduled round-robin (bit 0 = 1). For round-robin scheduling, the default priority sequence will be CPU, DMA, AHB1, and USB. The AHB1 access priority can be configured as priority scheduling (bit 0 = 0) and priority of the each of the AHB1 bus masters can be set by writing the priority value (highest priority = 4, lowest priority = 1).

Masters with the same priority value are scheduled on a round-robin basis.

Table 23. AHB Arbiter Configuration register 1 (AHBCFG1 - address 0xE01F C188) bit description

Bit	Symbol	Value	Description	Reset value
0	scheduler	0	Priority scheduling.	
		1	Uniform (round-robin) scheduling.	
2:1	break_burst	00	Break all defined length bursts (the CPU does not create defined bursts).	10
		01	Break all defined length bursts greater than four-beat.	
		10	Break all defined length bursts greater than eight-beat.	
		11	Never break defined length bursts.	
3	quantum_type	0	A quantum is an AHB clock.	0
		1	A quantum is an AHB bus cycle.	

Chapter 3: LPC23XX System control block

Table 23. AHB Arbiter Configuration register 1 (AHBCFG1 - address 0xE01F C188) bit description

Bit	Symbol	Value	Description	Reset value
7:4	quantum_size		Controls the type of arbitration and the number of quanta before re-arbitration occurs.	0100
		0000	Preemptive, re-arbitrate after 1 AHB quantum.	
		0001	Preemptive, re-arbitrate after 2 AHB quanta.	
		0010	Preemptive, re-arbitrate after 4 AHB quanta.	
		0011	Preemptive, re-arbitrate after 8 AHB quanta.	
		0100	Preemptive, re-arbitrate after 16 AHB quanta.	
		0101	Preemptive, re-arbitrate after 32 AHB quanta.	
		0110	Preemptive, re-arbitrate after 64 AHB quanta.	
		0111	Preemptive, re-arbitrate after 128 AHB quanta.	
		1000	Preemptive, re-arbitrate after 256 AHB quanta.	
		1001	Preemptive, re-arbitrate after 512 AHB quanta.	
		1010	Preemptive, re-arbitrate after 1024 AHB quanta.	
		1011	Preemptive, re-arbitrate after 2048 AHB quanta.	
		1100	Preemptive, re-arbitrate after 4096 AHB quanta.	
		1101	Preemptive, re-arbitrate after 8192 AHB quanta.	
		1110	Preemptive, re-arbitrate after 16384 AHB quanta.	
		1111	Non- preemptive, infinite AHB quanta.	
10:8	default_master	nnn[1]	Master 1 (CPU) is the default master.	001
11	-	-	Reserved.	-
14:12	EP1	nnn[1]	External priority for master 1 (CPU).	000
15	-	-	Reserved.	-
18:16	EP2	nnn[1]	External priority for master 2 (GPDMA).	000
19	-	-	Reserved.	-
22:20	EP3	nnn[1]	External priority for master 3 (AHB1).	000
23	-	-	Reserved.	-
26:24	EP4	nnn[1]	External priority for master 4 (USB).	000
31:27	-	-	Reserved.	-

^[1] Allowed values for nnn are: 100 (highest priority), 011, 010, 001 (lowest priority).

3.7.1.1.1 Examples of AHB1 settings

The following examples use the LPC2378 to illustrate how to select the priority of each AHB1 master based on different system requirements.

Table 24. Priority sequence (bit 0 = 0): CPU, GPDMA, AHB1, USB

Bit	Symbol	Description	Priority value nnn	Priority sequence
14:12	EP1	CPU	100 (4)	1
18:16	EP2	GPDMA	011 (3)	2
22:20	EP3	AHB1	010 (2)	3
26:24	EP4	USB	001 (1)	4

Chapter 3: LPC23XX System control block

Table 25. Priority sequence (bit 0 = 0): USB, AHB1, CPU, GPDMA

Bit	Symbol	Description	Priority value nnn	Priority sequence
14:12	EP1	CPU	010 (2)	3
18:16	EP2	GPDMA	001 (1)	4
22:20	EP3	AHB1	011 (3)	2
26:24	EP4	USB	100 (4)	1

Table 26. Priority sequence (bit 0 = 0): GPDMA, AHB1, CPU, USB

Bit	Symbol	Description	Priority value nnn	Priority sequence
14:12	EP1	CPU	010 (2)	3
18:16	EP2	GPDMA	011 (3)	1[1]
22:20	EP3	AHB1	011 (3)	2[1]
26:24	EP4	USB	001 (1)	4

^[1] Sequence based on round-robin.

Table 27. Priority sequence (bit 0 = 0): USB, AHB1, CPU, GPDMA

Bit	Symbol	Description	Priority value nnn	Priority sequence
14:12	EP1	CPU	000	3[1]
18:16	EP2	GPDMA	000	4 <u>[1]</u>
22:20	EP3	AHB1	010 (2)	1
26:24	EP4	USB	001 (1)	2

^[1] Sequence based on round-robin.

3.7.1.2 AHB Arbiter Configuration register 2 (AHBCFG2 - 0xE01F C18C)

By default, the AHB2 access is scheduled round-robin (bit 0 = 1). For round-robin scheduling, the default priority sequence will be Ethernet and CPU.

The AHB2 access priority can be configured as priority scheduling (bit 0 = 0) and priority of the each of the AHB2 bus masters can be set by writing the priority value (highest priority = 2, lowest priority = 1).

Masters with the same priority value are scheduled on a round-robin basis.

Table 28. AHB Arbiter Configuration register 2 (AHBCFG2 - address 0xE01F C18C) bit description

Bit	Symbol	Value	Description	Reset value
0	scheduler	0	Priority scheduling.	1
		1	Uniform (round-robin) scheduling.	
2:1	break_burst	00	Break all defined length bursts (the CPU does not create defined bursts).	10
		01	Break all defined length bursts greater than four-beat.	10 — —
		10	Break all defined length bursts greater than eight-beat.	
		11	Never break defined length bursts.	
3	quantum_type	0	A quantum is an AHB clock.	
		1	A quantum is an AHB bus cycle.	

Chapter 3: LPC23XX System control block

Table 28. AHB Arbiter Configuration register 2 (AHBCFG2 - address 0xE01F C18C) bit description

Bit	Symbol	Value	Description	Reset value
7:4	quantum_size		Controls the type of arbitration and the number of quanta before re-arbitration occurs.	0100
		0000	Preemptive, re-arbitrate after 1 AHB quantum.	
		0001	Preemptive, re-arbitrate after 2 AHB quanta.	
		0010	Preemptive, re-arbitrate after 4 AHB quanta.	
		0011	Preemptive, re-arbitrate after 8 AHB quanta.	
		0100	Preemptive, re-arbitrate after 16 AHB quanta.	
		0101	Preemptive, re-arbitrate after 32 AHB quanta.	
		0110	Preemptive, re-arbitrate after 64 AHB quanta.	
		0111	Preemptive, re-arbitrate after 128 AHB quanta.	
		1000	Preemptive, re-arbitrate after 256 AHB quanta.	
		1001	Preemptive, re-arbitrate after 512 AHB quanta.	
		1010	Preemptive, re-arbitrate after 1024 AHB quanta.	
		1011	Preemptive, re-arbitrate after 2048 AHB quanta.	
		1100	Preemptive, re-arbitrate after 4096 AHB quanta.	
		1101	Preemptive, re-arbitrate after 8192 AHB quanta.	
		1110	Preemptive, re-arbitrate after 16384 AHB quanta.	
		1111	Non- preemptive, infinite AHB quanta.	
9:8	default_master	nn	Master 2 (Ethernet) is the default master.	01
11:10	-	-	Reserved.	-
13:12	EP1	nn	External priority for master 1 (CPU).	00
15:14	-	-	Reserved.	-
17:16	EP2	nn	External priority for master 2 (Ethernet).	00
31:18	-	-	Reserved. User software should not write ones to reserved bits. The value read from a reserved bit is not defined.	NA

^[1] Allowed values for nn are: 10 (high priority) and 01 (low priority).

3.7.1.2.1 Examples of AHB2 settings

Table 29. Priority sequence (bit 0 = 0): Ethernet, CPU

Bit	Symbol	Description	Priority value nn	Priority sequence
13:12	EP1	CPU	10 (2)	1
17:16	EP2	Ethernet	01 (1)	2

Table 30. Priority sequence (bit 0 = 0): Ethernet, CPU

Bit	Symbol	Description	Priority value nn	Priority sequence
13:12	EP1	CPU	00	2[1]
17:16	EP2	Ethernet	00	1[1]

^[1] Sequence based on round-robin.

Chapter 3: LPC23XX System control block

3.7.2 System Controls and Status register (SCS - 0xE01F C1A0)

Remark: The EMC is available in LPC2377/78 and LPC2388 only. The SD/MMC is available in LPC2365/66, LPC2377/78, LPC2387, and LPC2388. Bits are reserved when the peripheral is not present.

Table 31. System Controls and Status register (SCS - address 0xE01F C1A0) bit description

Bit	Symbol	Value	Description	Access	Reset value
0	GPIOM		GPIO access mode selection.	R/W	0
		0	GPIO ports 0 and 1 are accessed via APB addresses in a fashion compatible with previous LPC2000 devices.		
		1	High speed GPIO is enabled on ports 0 and 1, accessed via addresses in the on-chip memory range. This mode includes the port masking feature described in the GPIO chapter.		
1	EMC Reset		External Memory Controller Reset Disable.	R/W	0
	Disable ^{[1][2]}	0	Both EMC resets are asserted when any type of reset event occurs. In this mode, all registers and functions of the EMC are initialized upon any reset condition.		
		1	Many portions of the EMC are only reset by a power-on or brown-out event, in order to allow the EMC to retain its state through a warm reset (external reset or watchdog reset). If the EMC is configured correctly, auto-refresh can be maintained through a warm reset.		
2	EMC Burst Control ²		External Memory Controller Burst Control (implemented on device revisions C and higher).	R/W	0
		0	Burst enabled.		
		1	Burst disabled.		
3	MCIPWR		MCIPWR pin control.	R/W	1
	Active Level[1]	0 The MCIPWR pin is low.	The MCIPWR pin is low.		
	Levei	1	The MCIPWR pin is high.		
4	OSCRANGE		Main oscillator range select.	R/W	0
		0	The frequency range of the main oscillator is 1 MHz to 20 MHz.		
		1	The frequency range of the main oscillator is 15 MHz to 24 MHz.		
5	OSCEN		Main oscillator enable.	R/W	0
		0	The main oscillator is disabled.		
		1	The main oscillator is enabled, and will start up if the correct external circuitry is connected to the XTAL1 and XTAL2 pins.		
6	OSCSTAT		Main oscillator status.	RO	0
		0	The main oscillator is not ready to be used as a clock source.		
		1	The main oscillator is ready to be used as a clock source. The main oscillator must be enabled via the OSCEN bit.		
31:7	-	-	Reserved. User software should not write ones to reserved bits. The value read from a reserved bit is not defined.	-	NA

^[1] The state of this bit is preserved through a software reset, and only a POR or a BOD event will reset it to its default value.

^[2] EMC available on parts LPC2388 and LPC2378/77.

Chapter 3: LPC23XX System control block

3.8 Code security vs. debugging

Applications in development typically need the debugging and tracing facilities in the LPC2300. Later in the life cycle of an application, it may be more important to protect the application code from observation by hostile or competitive eyes. The Code Read Protection (CRP) feature of the LPC2300 allows an application to control whether it can be debugged or protected from observation.

Details about Code Read Protection can be found in Section 29.6.

UM10211

Chapter 4: LPC23XX Clocking and power control

Rev. 4.1 — 5 September 2012

User manual

4.1 How to read this chapter

This chapter describes the clocking and power control features for all LPC23XX parts. Note that the CAN1/2 block and the USB block are available on LPC2364/66/68, LPC2378, LPC2387, and LPC2388 (**not** available on LPC2365 and LPC2377). The MCI is available on LPC2367/68, LPC2377/78, LPC2387, and LPC2388. The Ethernet controller is **not** available on the LPC3161. All corresponding bits and register settings for not implemented peripherals are reserved.


4.2 Introduction

This chapter describes the generation of the various clocks needed by the LPC2300 and options of clock source selection, as well as power control and wake-up from reduced power modes. Functions described in the following subsections include:

- Oscillators
- Clock source selection
- PLL
- Clock dividers
- Power control
- · Wake-up timer

<u>Figure 16</u> shows how the clocks for different blocks and peripherals on the LPC23xx are generated.

Chapter 4: LPC23XX Clocking and power control

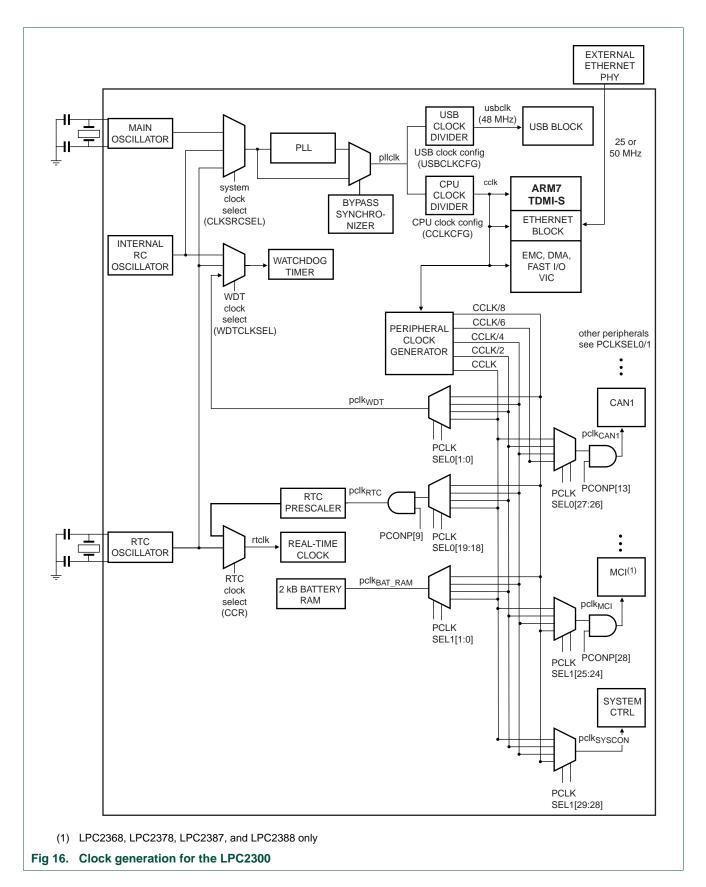

Chapter 4: LPC23XX Clocking and power control

4.3 Register description

All registers, regardless of size, are on word address boundaries. Details of the registers appear in the description of each function.

Table 32. Summary of system control registers

Table 02: Oa	minuty of cyclem control registers					
Name	Description	Access	Reset value	Address		
Clock source	selection					
CLKSRCSEL	Clock Source Select Register	R/W	0	0xE01F C10C		
Phase Locked	l Loop					
PLLCON	PLL Control Register	R/W	0	0xE01F C080		
PLLCFG	PLL Configuration Register	R/W	0	0xE01F C084		
PLLSTAT	PLL Status Register	RO	0	0xE01F C088		
PLLFEED	PLL Feed Register	WO	NA	0xE01F C08C		
Clock dividers	3					
CCLKCFG	CPU Clock Configuration Register	R/W	0	0xE01F C104		
USBCLKCFG	USB Clock Configuration Register	R/W	0	0xE01F C108		
IRCTRIM	IRC Trim Register	R/W	0xA0	0xE01FC1A4		
PCLKSEL0	Peripheral Clock Selection register 0.	R/W	0	0xE01F C1A8		
PCLKSEL1	Peripheral Clock Selection register 1.	R/W	0	0xE01F C1AC		
Power control	Power control					
PCON	Power Control Register	R/W	0	0xE01F C0C0		
INTWAKE	Interrupt Wakeup Register	R/W	0	0xE01F C144		
PCONP	Power Control for Peripherals Register	R/W	0x03BE	0xE01F C0C4		

4.4 Oscillators

The LPC2300 includes three independent oscillators. These are the Main Oscillator, the Internal RC Oscillator, and the RTC oscillator. Each oscillator can be used for more than one purpose as required in a particular application.

Following Reset, the LPC2300 will operate from the Internal RC Oscillator until switched by software. This allows systems to operate without any external crystal, and allows the Boot Loader code to operate at a known frequency. When Boot Block will branch to a user program, there could be an option to activate the main oscillator prior to entering user code.

4.4.1 Internal RC oscillator

The Internal RC Oscillator (IRC) may be used as the clock source for the watchdog timer, and/or as the clock that drives the PLL and subsequently the CPU. The precision of the IRC does not allow for use with the USB interface, which requires a much more precise time base. Also, do not use the IRC for the CAN1/2 block if the CAN baud rate is higher than 100 kbit/s. The nominal IRC frequency is 4 MHz.

Upon power up or any chip reset, the LPC2300 uses the IRC as the clock source. Software may later switch to one of the other available clock sources.

Chapter 4: LPC23XX Clocking and power control

4.4.2 Main oscillator

The main oscillator can be used as the clock source for the CPU, with or without using the PLL. The main oscillator operates at frequencies of 1 MHz to 24 MHz. This frequency can be boosted to a higher frequency, up to the maximum CPU operating frequency, by the PLL. The oscillator output is called OSCCLK. The clock selected as the PLL input is PLLCLKIN and the ARM processor clock frequency is referred to as CCLK for purposes of rate equations, etc. elsewhere in this document. The frequencies of PLLCLKIN and CCLK are the same value unless the PLL is active and connected. Refer to the PLL description in this chapter for details.

The on-board oscillator in the LPC2300 can operate in one of two modes: slave mode and oscillation mode.

In slave mode the input clock signal should be coupled by means of a capacitor of 100 pF (C_g in <u>Figure 17</u>, drawing a), with an amplitude of at least 200 mV(RMS). The XTAL2 pin in this configuration can be left not connected.

External components and models used in oscillation mode are shown in Figure 17, drawings b and c, and in Table 33 and Table 34. Since the feedback resistance is integrated on chip, only a crystal and the capacitances C_{X1} and C_{X2} need to be connected externally in case of fundamental mode oscillation (the fundamental frequency is represented by L, C_L and R_S). Capacitance C_P in Figure 17, drawing c, represents the parallel package capacitance and should not be larger than 7 pF. Parameters F_C , C_L , R_S and C_P are supplied by the crystal manufacturer.

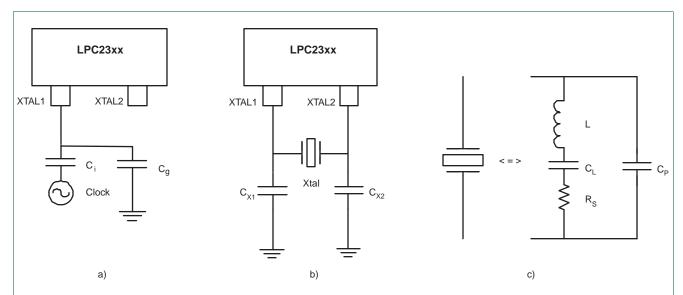


Fig 17. Oscillator modes and models: a) slave mode of operation, b) oscillation mode of operation, c) external crystal model used for C_{X1}/_{X2} evaluation

Chapter 4: LPC23XX Clocking and power control

Table 33. Recommended values for $C_{X1/X2}$ in oscillation mode (crystal and external components parameters) low frequency mode (OSCRANGE = 0, see Table 31)

Fundamental oscillation frequency Fosc	Crystal load capacitance C _L	Maximum crystal series resistance R _S	External load capacitors C _{X1} , _{CX2}
1 MHz - 5 MHz	10 pF	< 300 Ω	18 pF, 18 pF
	20 pF	< 300 Ω	39 pF, 39 pF
	30 pF	< 300 Ω	57 pF, 57 pF
5 MHz - 10 MHz	10 pF	< 300 Ω	18 pF, 18 pF
	20 pF	< 200 Ω	39 pF, 39 pF
	30 pF	< 100 Ω	57 pF, 57 pF
10 MHz - 15 MHz	10 pF	< 160 Ω	18 pF, 18 pF
	20 pF	< 60 Ω	39 pF, 39 pF
15 MHz - 20 MHz	10 pF	< 80 Ω	18 pF, 18 pF

Table 34. Recommended values for C_{X1/X2} in oscillation mode (crystal and external components parameters) high frequency mode (OSCRANGE = 1, see Table 31)

Fundamental oscillation frequency Fosc	Crystal load capacitance C _L	Maximum crystal series resistance R _S	External load capacitors C _{X1} , _{CX2}
15 MHz - 20 MHz	10 pF	< 180 Ω	18 pF, 18 pF
	20 pF	< 100 Ω	39 pF, 39 pF
20 MHz - 25 MHz	10 pF	< 160 Ω	18 pF, 18 pF
	20 pF	< 80 Ω	39 pF, 39 pF

Since chip operation always begins using the Internal RC Oscillator, and the main oscillator may never be used in some applications, it will only be started by software request. This is accomplished by setting the OSCEN bit in the SCS register, as described in Table 31. The main oscillator provides a status flag (the OSCSTAT bit in the SCS register) so that software can determine when the oscillator is running and stable. At that point, software can control switching to the main oscillator as a clock source. Prior to starting the main oscillator, a frequency range must be selected by configuring the OSCRANGE bit in the SCS register.

4.4.2.1 XTAL1 input

The input voltage to the on-chip oscillators is limited to 1.8 V. If the oscillator is driven by a clock in slave mode, it is recommended that the input be coupled through a capacitor with $C_i = 100$ pF. To limit the input voltage to the specified range, choose an additional capacitor to ground C_g which attenuates the input voltage by a factor $C_i/(C_i + C_g)$, see Figure 17. In slave mode, a minimum of 200 mV(RMS) is needed.

4.4.2.2 Printed Circuit Board (PCB) layout guidelines

The crystal should be connected on the PCB as close as possible to the oscillator input and output pins of the chip. Take care that the load capacitors C_{x1} and C_{x2} , and C_{x3} in case of third overtone crystal usage, have a common ground plane. The external components must also be connected to the ground plain. Loops must be made as small as possible, in order to keep the noise coupled in via the PCB as small as possible. Also parasitics should stay as small as possible. Values of C_{x1} and C_{x2} should be chosen smaller accordingly to the increase in parasitics of the PCB layout.

Chapter 4: LPC23XX Clocking and power control

4.4.3 RTC oscillator

The RTC oscillator can be used as the clock source for the RTC, and/or the watchdog timer. The RTC oscillator can also be used to drive the PLL and the CPU.

4.5 Clock source selection multiplexer

Several clock sources may be chosen to drive the PLL and ultimately the CPU and on-chip peripheral devices. The clock sources available are the main oscillator, the RTC oscillator, and the Internal RC oscillator.

The clock source selection can only be changed safely when the PLL is not connected. For a detailed description of how to change the clock source in a system using the PLL see Section 4.6.14 "PLL setup sequence".

Note the following restrictions regarding the choice of clock sources:

- The IRC oscillator cannot be used as clock source for the USB block.
- The IRC oscillator cannot be used as clock source for the CAN controllers if the CAN baud rate is larger than 100 kbit/s.

4.5.1 Clock Source Select register (CLKSRCSEL - 0xE01F C10C)

The PCLKSRCSEL register contains the bits that select the clock source for the PLL.

Table 35. Clock Source Select register (CLKSRCSEL - address 0xE01F C10C) bit description

Bit	Symbol	Value	Description	Reset value
1:0	1:0 CLKSRC		Selects the clock source for the PLL as follows:	0
		00	Selects the Internal RC oscillator as the PLL clock source (default).	
		01	Selects the main oscillator as the PLL clock source.	
		10	Selects the RTC oscillator as the PLL clock source.	
		11	Reserved, user software should not write ones to reserved bits. The value read from a reserved bit is not defined.	
			ng: Improper setting of this value, or an incorrect sequence of ing this value may result in incorrect operation of the device.	
7:2	-	0	Unused, always 0.	0

4.6 PLL (Phase Locked Loop)

The PLL accepts an input clock frequency in the range of 32 kHz to 25 MHz . The input frequency is multiplied up to a high frequency, then divided down to provide the actual clock used by the CPU and the USB block.

Chapter 4: LPC23XX Clocking and power control

4.6.1 PLL operation

The PLL input, in the range of 32 kHz to 25 MHz, may initially be divided down by a value "N", which may be in the range of 1 to 256. This input division provides a greater number of possibilities in providing a wide range of output frequencies from the same input frequency.

Following the PLL input divider is the PLL multiplier. This can multiply the input divider output through the use of a Current Controlled Oscillator (CCO) by a value "M", in the range of 1 through 32768. The resulting frequency must be in the range of 275 MHz to 550 MHz. The multiplier works by dividing the CCO output by the value of M, then using a phase-frequency detector to compare the divided CCO output to the multiplier input. The error value is used to adjust the CCO frequency.

There are additional dividers at the PLL output to bring the frequency down to what is needed for the CPU, USB, and other peripherals. The PLL output dividers are described in the Clock Dividers section following the PLL description. A block diagram of the PLL is shown in Figure 18

PLL activation is controlled via the PLLCON register. The PLL multiplier and divider values are controlled by the PLLCFG register. These two registers are protected in order to prevent accidental alteration of PLL parameters or deactivation of the PLL. Since all chip operations, including the Watchdog Timer, could be dependent on the PLL if so configured (for example when it is providing the chip clock), accidental changes to the PLL setup could result in unexpected or fatal behavior of the microcontroller. The protection is accomplished by a feed sequence similar to that of the Watchdog Timer. Details are provided in the description of the PLLFEED register.

The PLL is turned off and bypassed following a chip Reset and by entering Power-down mode. PLL is enabled by software only.

It is important that the setup procedure described in <u>Section 4.6.14 "PLL setup sequence"</u> is followed as is or the PLL might not operate at all!.

4.6.2 PLL and startup/boot code interaction

The boot code for the LPC2300 is a little different from those for the previous NXP ARM7 LPC2000 chips. When there's no valid code (determined by the checksum word) in the user flash or the ISP enable pin (P2.10) is pulled low on startup, the ISP mode will be entered and the boot code will setup the PLL with the IRC. Therefore it can not be assumed that the PLL is disabled when the user opens a debug session to debug the application code. The user startup code must follow the steps described in this chapter to disconnect the PLL.

The boot code may also change the values for some registers when the chip enters ISP mode. For example, the GPIOM bit in the SCS register is set in the ISP mode. If the user doesn't notice it and clears the GPIOM bit in the application code, the application code will not be able to operate with the traditional GPIO function on PORT0 and PORT1.

4.6.3 Register description

The PLL is controlled by the registers shown in <u>Table 36</u>. More detailed descriptions follow. Writes to any unused bits are ignored. A read of any unused bits will return a logic zero.


Chapter 4: LPC23XX Clocking and power control

Warning: Improper setting of PLL values may result in incorrect operation of the device!

Table 36. PLL registers

Name	Description	Access	Reset value[1]	Address
PLLCON	PLL Control Register. Holding register for updating PLL control bits. Values written to this register do not take effect until a valid PLL feed sequence has taken place.	R/W	0	0xE01F C080
PLLCFG	PLL Configuration Register. Holding register for updating PLL configuration values. Values written to this register do not take effect until a valid PLL feed sequence has taken place.	R/W	0	0xE01F C084
PLLSTAT	PLL Status Register. Read-back register for PLL control and configuration information. If PLLCON or PLLCFG have been written to, but a PLL feed sequence has not yet occurred, they will not reflect the current PLL state. Reading this register provides the actual values controlling the PLL, as well as the PLL status.	RO	0	0xE01F C088
PLLFEED	PLL Feed Register. This register enables loading of the PLL control and configuration information from the PLLCON and PLLCFG registers into the shadow registers that actually affect PLL operation.	WO	NA	0xE01F C08C

^[1] Reset Value reflects the data stored in used bits only. It does not include reserved bits content.

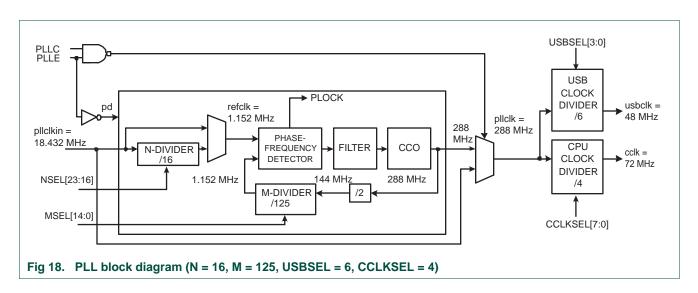

4.6.4 PLL Control register (PLLCON - 0xE01F C080)

The PLLCON register contains the bits that enable and connect the PLL. Enabling the PLL allows it to attempt to lock to the current settings of the multiplier and divider values. Connecting the PLL causes the processor and all chip functions to run from the PLL output clock. Changes to the PLLCON register do not take effect until a correct PLL feed sequence has been given (see Section 4.6.9 "PLL Feed register (PLLFEED - 0xE01F C08C)").

Chapter 4: LPC23XX Clocking and power control

Table 37. PLL Control register (PLLCON - address 0xE01F C080) bit description

Bit	Symbol	Description	Reset value
0	PLLE	PLL Enable. When one, and after a valid PLL feed, this bit will activate the PLL and allow it to lock to the requested frequency. See PLLSTAT register, <u>Table 40</u> .	0
1	PLLC	PLL Connect. Having both PLLC and PLLE set to one followed by a valid PLL feed sequence, the PLL becomes the clock source for the CPU, as well as the USB subsystem and. Otherwise, the clock selected by the Clock Source Selection Multiplexer is used directly by the LPC2300. See PLLSTAT register, <u>Table 40</u> .	0
7:2	-	Reserved, user software should not write ones to reserved bits. The value read from a reserved bit is not defined.	NA

The PLL must be set up, enabled, and Lock established before it may be used as a clock source. When switching from the oscillator clock to the PLL output or vice versa, internal circuitry synchronizes the operation in order to ensure that glitches are not generated. Hardware does not insure that the PLL is locked before it is connected or automatically disconnect the PLL if lock is lost during operation. In the event of loss of PLL lock, it is likely that the oscillator clock has become unstable and disconnecting the PLL will not remedy the situation.

4.6.5 PLL Configuration register (PLLCFG - 0xE01F C084)

The PLLCFG register contains the PLL multiplier and divider values. Changes to the PLLCFG register do not take effect until a correct PLL feed sequence has been given (see Section 4.6.9 "PLL Feed register (PLLFEED - 0xE01F C08C)"). Calculations for the PLL frequency, and multiplier and divider values are found in the Section 4.6.11 "PLL frequency calculation".

Table 38. PLL Configuration register (PLLCFG - address 0xE01F C084) bit description

Bit	Symbol	Description	Reset value
14:0	MSEL	PLL Multiplier value. Supplies the value "M" in the PLL frequency calculations. The value stored here is M - 1. Supported values for M are 6 through 512 and those listed in Table 39	0
		Note: Not all values of M are needed, and therefore some are not supported by hardware. For details on selecting values for MSEL see Section 4.6.11 "PLL frequency calculation".	
15	-	Reserved, user software should not write ones to reserved bits. The value read from a reserved bit is not defined.	NA
23:16	NSEL	calculations. Supported values for N are 1 through 32. Note: For details on selecting the right value for NSEL see	
31:24	-	Section 4.6.11 "PLL frequency calculation". Reserved, user software should not write ones to reserved bits. The value read from a reserved bit is not defined.	NA

Chapter 4: LPC23XX Clocking and power control

Table 39. Multiplier values for 32 kHz oscillator

Multiplier (M)	Pre-divide (N)	F _{CCO}
4272	1	279.9698
4395	1	288.0307
4578	1	300.0238
4725	1	309.6576
4807	1	315.0316
5127	1	336.0031
5188	1	340.0008
5400	1	353.8944
5493	1	359.9892
5859	1	383.9754
6042	1	395.9685
6075	1	398.1312
6104	1	400.0317
6409	1	420.0202
6592	1	432.0133
6750	1	442.3680
6836	1	448.0041
6866	1	449.9702
6958	1	455.9995
7050	1	462.0288
7324	1	479.9857
7425	1	486.6048
7690	1	503.9718
7813	1	512.0328
7935	1	520.0282
8057	1	528.0236
8100	1	530.8416
8545	2	280.0026
8789	2	287.9980
9155	2	299.9910
9613	2	314.9988
10254	2	336.0031
10376	2	340.0008
10986	2	359.9892
11719	2	384.0082
12085	2	396.0013
12207	2	399.9990
12817	2	419.9875
12817	3	279.9916
13184	2	432.0133
13184	3	288.0089

Chapter 4: LPC23XX Clocking and power control

Table 39. Multiplier values for 32 kHz oscillator

Multiplier (M)	Pre-divide (N)	F _{CCO}
13672	2	448.0041
13733	2	450.0029
13733	3	300.0020
13916	2	455.9995
14099	2	461.9960
14420	3	315.0097
14648	2	479.9857
15381	2	504.0046
15381	3	336.0031
15564	3	340.0008
15625	2	512.0000
15869	2	519.9954
16113	2	527.9908
16479	3	359.9892
17578	3	383.9973
18127	3	395.9904
18311	3	400.0099
19226	3	419.9984
19775	3	431.9915
20508	3	448.0041
20599	3	449.9920
20874	3	455.9995
21149	3	462.0070
21973	3	480.0075
23071	3	503.9937
23438	3	512.0109
23804	3	520.0063
24170	3	528.0017

4.6.6 PLL Status register (PLLSTAT - 0xE01F C088)

The read-only PLLSTAT register provides the actual PLL parameters that are in effect at the time it is read, as well as the PLL status. PLLSTAT may disagree with values found in PLLCON and PLLCFG because changes to those registers do not take effect until a proper PLL feed has occurred (see Section 4.6.9 "PLL Feed register (PLLFEED - OxE01F C08C)").

Chapter 4: LPC23XX Clocking and power control

Table 40. PLL Status register (PLLSTAT - address 0xE01F C088) bit description

Bit	Symbol	Description	Reset value
14:0	MSEL	Read-back for the PLL Multiplier value. This is the value currently used by the PLL, and is one less than the actual multiplier.	0
15	-	Reserved, user software should not write ones to reserved bits. The value read from a reserved bit is not defined.	NA
23:16	NSEL	Read-back for the PLL Pre-Divider value. This is the value currently used by the PLL, and is one less than the actual divider.	0
24	PLLE	Read-back for the PLL Enable bit. When one, the PLL is currently activated. When zero, the PLL is turned off. This bit is automatically cleared when Power-down mode is activated.	0
25	PLLC	Read-back for the PLL Connect bit. When PLLC and PLLE are both one, the PLL is connected as the clock source for the LPC2300. When either PLLC or PLLE is zero, the PLL is bypassed. This bit is automatically cleared when Power-down mode is activated.	0
26	PLOCK	Reflects the PLL Lock status. When zero, the PLL is not locked. When one, the PLL is locked onto the requested frequency. See text for details.	0
31:27	-	Reserved, user software should not write ones to reserved bits. The value read from a reserved bit is not defined.	NA

4.6.7 PLL Interrupt: PLOCK

The PLOCK bit in the PLLSTAT register reflects the lock status of the PLL. When the PLL is enabled, or parameters are changed, the PLL requires some time to establish lock under the new conditions. PLOCK can be monitored to determine when the PLL may be connected for use. The value of PLOCK may not be stable when the PLL reference frequency (F_{REF} , the frequency of REFCLK, which is equal to the PLL input frequency divided by the pre-divider value) is less than 100 kHz or greater than 20 MHz. In these cases, the PLL may be assumed to be stable after a start-up time has passed. This time is 500 μs when FREF is greater than 400 kHz and 200 / FREF seconds when FREF is less than 400 kHz

PLOCK is connected to the interrupt controller. This allows for software to turn on the PLL and continue with other functions without having to wait for the PLL to achieve lock. When the interrupt occurs, the PLL may be connected, and the interrupt disabled.

4.6.8 PLL Modes

The combinations of PLLE and PLLC are shown in Table 41.

Table 41. PLL control bit combinations

PLLC	PLLE	PLL Function
0	0	PLL is turned off and disconnected. The PLL outputs the unmodified clock input.
0	1	The PLL is active, but not yet connected. The PLL can be connected after PLOCK is asserted.
1	0	Same as 00 combination. This prevents the possibility of the PLL being connected without also being enabled.
1	1	The PLL is active and has been connected as the system clock source.

Chapter 4: LPC23XX Clocking and power control

4.6.9 PLL Feed register (PLLFEED - 0xE01F C08C)

A correct feed sequence must be written to the PLLFEED register in order for changes to the PLLCON and PLLCFG registers to take effect. The feed sequence is:

- 1. Write the value 0xAA to PLLFEED.
- 2. Write the value 0x55 to PLLFEED.

The two writes must be in the correct sequence, and must be consecutive APB bus cycles. The latter requirement implies that interrupts must be disabled for the duration of the PLL feed operation. If either of the feed values is incorrect, or one of the previously mentioned conditions is not met, any changes to the PLLCON or PLLCFG register will not become effective.

Table 42. PLL Feed register (PLLFEED - address 0xE01F C08C) bit description

Bit	Symbol	Description	Reset value
7:0	PLLFEED	The PLL feed sequence must be written to this register in order for PLL configuration and control register changes to take effect.	0x00

4.6.10 PLL and Power-down mode

Power-down mode automatically turns off and disconnects the PLL. Wake-up from Power-down mode does not automatically restore the PLL settings, this must be done in software. Typically, a routine to activate the PLL, wait for lock, and then connect the PLL can be called at the beginning of any interrupt service routine that might be called due to the wake-up. It is important not to attempt to restart the PLL by simply feeding it when execution resumes after a wake-up from Power-down mode. This would enable and connect the PLL at the same time, before PLL lock is established.

4.6.11 PLL frequency calculation

The PLL equations use the following parameters:

Table 43. PLL frequency parameter

Parameter	Description
F _{IN}	the frequency of PLLCLKIN from the Clock Source Selection Multiplexer.
F _{CCO}	the frequency of the SYSCLK (output of the PLL Current Controlled Oscillator)
N	PLL Pre-divider value from the NSEL bits in the PLLCFG register (PLLCFG NSEL field + 1). N is an integer from 1 through 32.
M	PLL Multiplier value from the MSEL bits in the PLLCFG register (PLLCFG MSEL field + 1). Not all potential values are supported. See below.
F _{REF}	PLL internal reference frequency, FIN divided by N.

The PLL output frequency (when the PLL is both active and connected) is given by:

$$F_{CCO} = (2 \times M \times F_{IN}) / N$$

The PLL inputs and settings must meet the following:

- F_{IN} is in the range of 32 kHz to 50 MHz.
- F_{CCO} is in the range of 275 MHz to 550 MHz.

UM10211

Chapter 4: LPC23XX Clocking and power control

The PLL equation can be solved for other PLL parameters:

$$M = (F_{CCO} \times N) / (2 \times F_{IN})$$

$$N = (2 \times M \times F_{IN}) / F_{CCO}$$

$$F_{IN} = (F_{CCO} \times N) / (2 \times M)$$

Allowed values for M:

At higher oscillator frequencies, in the MHz range, values of M from 6 through 512 are allowed. This supports the entire useful range of both the main oscillator and the IRC.

For lower frequencies, specifically when the RTC is used to clock the PLL, a set of 65 additional M values have been selected for supporting baud rate generation, CAN/USB operation, and attaining even MHz frequencies. These values are shown in Table 44

Low Frequency PLL Multipliers						
4272	4395	4578	4725	4807		
5127	5188	5400	5493	5859		
6042	6075	6104	6409	6592		
6750	6836	6866	6958	7050		
7324	7425	7690	7813	7935		
8057	8100	8545	8789	9155		
9613	10254	10376	10986	11719		
12085	12207	12817	13184	13672		
13733	13916	14099	14420	14648		
15381	15564	15625	15869	16113		
16479	17578	18127	18311	19226		
19775	20508	20599	20874	21149		

23438

Table 44. Additional Multiplier Values for use with a Low Frequency Clock Input

4.6.12 Procedure for determining PLL settings

23071

21973

PLL parameter determination can be simplified by using a spreadsheet available from NXP. To determine PLL parameters by hand, the following general procedure may be used:

23804

24170

- 1. Determine if the application requires use of the USB interface. The USB requires a 50% duty cycle clock of 48 MHz within a very small tolerance, which means that F_{CCO} must be an even integer multiple of 48 MHz (i.e. an integer multiple of 96 MHz), within a very small tolerance.
- 2. Choose the desired processor operating frequency (CCLK). This may be based on processor throughput requirements, need to support a specific set of UART baud rates, etc. Bear in mind that peripheral devices may be running from a lower clock frequency than that of the processor (see Section 4.7 "Clock dividers" on page 60 and Section 4.8 "Power control" on page 63). Find a value for F_{CCO} that is close to a multiple of the desired CCLK frequency, bearing in mind the requirement for USB support in [1] above, and that lower values of F_{CCO} result in lower power dissipation.

Chapter 4: LPC23XX Clocking and power control

- 3. Choose a value for the PLL input frequency (F_{IN}). This can be a clock obtained from the main oscillator, the RTC oscillator, or the on-chip RC oscillator. For USB support, the main oscillator should be used.
- Calculate values for M and N to produce a sufficiently accurate F_{CCO} frequency. The
 desired M value -1 will be written to the MSEL field in PLLCFG. The desired N value -1
 will be written to the NSEL field in PLLCFG.

In general, it is better to use a smaller value for N, to reduce the level of multiplication that must be accomplished by the CCO. Due to the difficulty in finding the best values in some cases, it is recommended to use a spreadsheet or similar method to show many possibilities at once, from which an overall best choice may be selected. A spreadsheet is available from NXP for this purpose.

4.6.13 Examples of PLL settings

The following examples illustrate selecting PLL values based on different system requirements.

Example 1)

Assumptions:

- The USB interface will be used in the application. The lowest integer multiple of 96 MHz that falls within the PLL operating range (288 MHz) will be targeted.
- The desired CPU rate = 60 MHz.
- An external 4 MHz crystal or clock source will be used as the system clock source.

Calculations:

$$M = (F_{CCO} \times N) / (2 \times F_{IN})$$

Start by assuming N = 1, since this produces the smallest multiplier needed for the PLL. So, M = 288×10^6 / ($2 \times 4 \times 10^6$) = 36. Since the result is an integer, there is no need to look further for a good set of PLL configuration values. The value written to PLLCFG would be 0x23 (N - 1 = 0; M - 1 = 35 = 0x23).

The potential CPU clock rate can be determined by dividing F_{CCO} by the desired CPU frequency: 288×10^6 / 60×10^6 = 4.8. The nearest integer value for the CPU Clock Divider is then 5, giving us 57.6 MHz as the nearest value to the desired CPU clock rate.

If it is important to obtain exactly 60 MHz, an $F_{\rm CCO}$ rate must be found that can be divided down to both 48 MHz and 60 MHz. The only possibility is 480 MHz. Divided by 10, this gives the 48 MHz with a 50% duty cycle needed by the USB block. Divided by 8, it gives 60 MHz for the CPU clock. PLL settings for 480 MHz are N = 1 and M = 60.

Example 2)

Assumptions:

- The USB interface will not be used in the application.
- The desired CPU rate = 72 MHz
- The 32.768 kHz RTC clock source will be used as the system clock source

Calculations:

Chapter 4: LPC23XX Clocking and power control

$$M = (F_{CCO} \times N) / (2 \times F_{IN})$$

The smallest frequency for F_{CCO} that can produce our desired CPU clock rate and is within the PLL operating range is 288 MHz (4 \times 72 MHz). Start by assuming N = 1, since this produces the smallest multiplier needed for the PLL.

So, $M = 288 \times 10^6 / (2 \times 32,768) = 4,394.53125$. This is not an integer, so the CPU frequency will not be exactly 288 MHz with this setting. Since this case is less obvious, it may be useful to make a table of possibilities for different values of N (see Table 45).

Table 45. Potential values for PLL ex	xample
---------------------------------------	--------

N	M	M Rounded	F _{REF} (Hz)	F _{CCO} (Hz)	Actual CCLK (Hz)	% Error
1	4394.53125	4395	32768	288.0307	72.0077	0.0107
2	8789.0625	8789	16384	287.9980	71.9995	-0.0007
3	13183.59375	13184	10922.67	288.0089	72.0022	0.0031
4	17578.125	17578	8192	287.9980	71.9995	-0.0007
5	21972.65625	21973	6553.6	288.0045	72.0011	0.0016

Beyond N = 7, the value of M is out of range or not supported, so the table stops there. In the table, the calculated M value is rounded to the nearest integer. If this results in CCLK being above the maximum operating frequency (72 MHz), it is allowed if it is not more than $\frac{1}{2}$ % above the maximum frequency.

In general, larger values of F_{REF} result in a more stable PLL when the input clock is a low frequency. Even the first table entry shows a very small error of just over 1 hundredth of a percent, or 107 parts per million (ppm). If that is not accurate enough in the application, the second case gives a much smaller error of 7 ppm.

Remember that when a frequency below about 1 MHz is used as the PLL clock source, not all multiplier values are available. As it turns out, all of the rounded M values found in <u>Table 45</u> of this example are supported, as may be confirmed in <u>Table 44</u>.

If PLL calculations suggest use of unsupported multiplier values, those values must be disregarded and other values examined to find the best fit. Multiplier values one count off from calculated values may also be good possibilities.

The value written to PLLCFG for the second table entry would be 0x12254 (N - 1 = 1 = 0x1; M - 1 = 8788 = 0x2254).

4.6.14 PLL setup sequence

The following sequence must be followed step by step in order to have the PLL initialized an running:

- 1. Disconnect the PLL with one feed sequence if PLL is already connected.
- 2. Disable the PLL with one feed sequence.
- Change the CPU Clock Divider setting to speed up operation without the PLL, if desired.
- 4. Write to the Clock Source Selection Control register to change the clock source.
- 5. Write to the PLLCFG and make it effective with one feed sequence. The PLLCFG can only be updated when the PLL is disabled.

UM10211


Chapter 4: LPC23XX Clocking and power control

- 6. Enable the PLL with one feed sequence.
- 7. Change the CPU Clock Divider setting for the operation with the PLL. It's critical to do this before connecting the PLL.
- 8. Wait for the PLL to achieve lock by monitoring the PLOCK bit in the PLLSTAT register, or using the PLOCK interrupt, or wait for a fixed time when the input clock to PLL is slow (i.e. 32 kHz). The value of PLOCK may not be stable when the PLL reference frequency (FREF, the frequency of REFCLK, which is equal to the PLL input frequency divided by the pre-divider value) is less than 100 kHz or greater than 20 MHz. In these cases, the PLL may be assumed to be stable after a start-up time has passed. This time is 500 μs when FREF is greater than 400 kHz and 200 / FREF seconds when FREF is less than 400 kHz.
- 9. Connect the PLL with one feed sequence.

It's very important not to merge any steps above. For example, don't update the PLLCFG and enable the PLL simultaneously with the same feed sequence.

4.7 Clock dividers

The output of the PLL must be divided down for use by the CPU and the USB block. Separate dividers are provided such that the CPU frequency can be determined independently from the USB block, which always requires 48 MHz with a 50% duty cycle for proper operation.

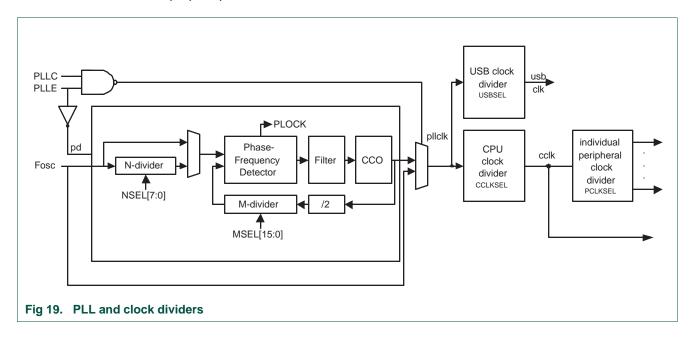

4.7.1 CPU Clock Configuration register (CCLKCFG - 0xE01F C104)

The CCLKCFG register controls the division of the PLL output before it is used by the CPU. When the PLL is bypassed, the division may be by 1. When the PLL is running, the output must be divided in order to bring the CPU clock frequency (CCLK) within operating limits. An 8 bit divider allows a range of options, including slowing CPU operation to a low rate for temporary power savings without turning off the PLL.

Chapter 4: LPC23XX Clocking and power control

Note: when the USB interface is used in an application, CCLK must be at least 18 MHz in order to support internal operations of the USB block.

Table 46. CPU Clock Configuration register (CCLKCFG - address 0xE01F C104) bit description

Bit	Symbol	Description	Reset value
7:0	CCLKSEL	Selects the divide value for creating the CPU clock (CCLK) from the PLL output.	0x00
		Only 0 and odd values (1, 3, 5,, 255) are supported and can be used when programming the CCLKSEL bits.	
		Warning: Using an even value (2, 4, 6,, 254) when setting the CCLKSEL bits may result in incorrect operation of the device.	

The CCLK is derived from the PLL output signal, divided by CCLKSEL + 1. Having CCLKSEL = 1 results in CCLK being one half the PLL output, CCLKSEL = 3 results in CCLK being one quarter of the PLL output, etc..

4.7.2 USB Clock Configuration register (USBCLKCFG - 0xE01F C108)

The USBCLKCFG register controls the division of the PLL output before it is used by the USB block. If the PLL is bypassed, the division may be by 1. In that case, the PLL input frequency must be 48 MHz, with a 500 ppm tolerance. When the PLL is running, the output must be divided in order to bring the USB clock frequency to 48 MHz with a 50% duty cycle. A 4-bit divider allows obtaining the correct USB clock from any even multiple of 48 MHz (i.e. any multiple of 96 MHz) within the PLL operating range.

Remark: The Internal RC clock can not be used as a clock source for USB because a more precise clock is needed (see <u>Table 35</u>).

Table 47. USB Clock Configuration register (USBCLKCFG - address 0xE01F C108) bit description

Bit	Symbol	Description	Reset value
3:0	USBSEL	Selects the divide value for creating the USB clock from the PLL output. Warning: Improper setting of this value will result in incorrect operation of the USB interface.	0
7:4	-	Reserved, user software should not write ones to reserved bits. The value read from a reserved bit is not defined.	NA

The USB clock is derived from the PLL output signal, divided by USBSEL + 1. Having USBSEL = 1 results in USB's clock being one half the PLL output.

4.7.3 IRC Trim Register (IRCTRIM - 0xE01F C1A4)

This register is used to trim the on-chip 4 MHz oscillator.

Table 48. IRC Trim register (IRCTRIM - address 0xE01F C1A4) bit description

Bit	Symbol	Description	Reset value
7:0	IRCtrim	IRC trim value. It controls the on-chip 4 MHz IRC frequency.	0xA0[1]
15:8	-	Reserved. Software must write 0 into these bits.	NA

[1] Actual reset value depends on IRC factory trimming.

Chapter 4: LPC23XX Clocking and power control

4.7.4 Peripheral Clock Selection registers 0 and 1 (PCLKSEL0 - 0xE01F C1A8 and PCLKSEL1 - 0xE01F C1AC)

A pair of bits in a Peripheral Clock Selection register controls the rate of the clock signal that will be supplied to the corresponding peripheral as specified in <u>Table 49</u>, <u>Table 50</u> and <u>Table 51</u>. For details on the CCLK clock see <u>Figure 19</u>.

Table 49. Peripheral Clock Selection register 0 (PCLKSEL0 - address 0xE01F C1A8) bit description

Bit	Symbol	Description	Reset value
1:0	PCLK_WDT	Peripheral clock selection for WDT.	00
3:2	PCLK_TIMER0	Peripheral clock selection for TIMER0.	00
5:4	PCLK_TIMER1	Peripheral clock selection for TIMER1.	00
7:6	PCLK_UART0	Peripheral clock selection for UART0.	00
9:8	PCLK_UART1	Peripheral clock selection for UART1.	00
11:10	-	Unused, always read as 0.	00
13:12	PCLK_PWM1	Peripheral clock selection for PWM1.	00
15:14	PCLK_I2C0	Peripheral clock selection for I2C0.	00
17:16	PCLK_SPI	Peripheral clock selection for SPI.	00
19:18	PCLK_RTC[1]	Peripheral clock selection for RTC.	00
21:20	PCLK_SSP1	Peripheral clock selection for SSP1.	00
23:22	PCLK_DAC	Peripheral clock selection for DAC.	00
25:24	PCLK_ADC	Peripheral clock selection for ADC.	00
27:26	PCLK_CAN12	Peripheral clock selection for CAN1.	00
29:28	PCLK_CAN2[2]	Peripheral clock selection for CAN2.	00
31:30	PCLK_ACF[2]	Peripheral clock selection for CAN filtering.	00

^[1] For PCLK_RTC only, the value '01' is illegal. Do not write '01' to the PCLK_RTC. Attempting to write '01' results in the previous value being unchanged.

Table 50. Peripheral Clock Selection register 1 (PCLKSEL1 - address 0xE01F C1AC) bit description

Bit	Symbol	Description	Reset value
1:0	PCLK_BAT_RAM	Peripheral clock selection for the battery supported RAM.	00
3:2	PCLK_GPIO	Peripheral clock selection for GPIOs.	00
5:4	PCLK_PCB	Peripheral clock selection for the Pin Connect block.	00
7:6	PCLK_I2C1	Peripheral clock selection for I2C1.	00
9:8	-	Unused, always read as 0.	00
11:10	PCLK_SSP0	Peripheral clock selection for SSP0.	00
13:12	PCLK_TIMER2	Peripheral clock selection for TIMER2.	00
15:14	PCLK_TIMER3	Peripheral clock selection for TIMER3.	00
17:16	PCLK_UART2	Peripheral clock selection for UART2.	00
19:18	PCLK_UART3	Peripheral clock selection for UART3.	00
21:20	PCLK_I2C2	Peripheral clock selection for I2C2.	00

^[2] PCLK_CAN1/2 must be set to the same value as PCLK_ACF.

Chapter 4: LPC23XX Clocking and power control

Table 50. Peripheral Clock Selection register 1 (PCLKSEL1 - address 0xE01F C1AC) bit description

Bit	Symbol	Description	Reset value
23:22	PCLK_I2S	Peripheral clock selection for I2S.	00
25:24	PCLK_MCI	Peripheral clock selection for MCI.	00
27:26	-	Unused, always read as 0.	00
29:28	PCLK_SYSCON	Peripheral clock selection for the System Control block.	00
31:30	-	Unused, always read as 0.	00

Table 51. Peripheral Clock Selection register bit values

PCLKSEL0 and PCLKSEL1 individual peripheral's clock select options	Function	Reset value
00	PCLK_xyz = CCLK/4	00
01	PCLK_xyz = CCLK[1]	
10	PCLK_xyz = CCLK/2	
11	Peripheral's clock is selected to PCLK_xyz = CCLK/8 except for CAN1, CAN2, and CAN filtering when '11' selects PCLK_xyz = CCLK/6.	

^[1] For PCLK_RTC only, the value '01' is illegal. Do not write '01' to the PCLK_RTC. Attempting to write '01' results in the previous value being unchanged.

4.8 Power control

The LPC2300 supports a variety of power control features. There are four special modes of processor power reduction: Idle mode, Sleep mode, Power-down mode, and Deep power-down mode. The CPU clock rate may also be controlled as needed by changing clock sources, re-configuring PLL values, and/or altering the CPU clock divider value. This allows a trade-off of power versus processing speed based on application requirements. In addition, Peripheral Power Control allows shutting down the clocks to individual on-chip peripherals, allowing fine tuning of power consumption by eliminating all dynamic power use in any peripherals that are not required for the application.

The LPC2300 also implements a separate power domain in order to allow turning off power to the bulk of the device while maintaining operation of the Real Time Clock and a small static RAM, referred to as the Battery RAM. This feature is described in more detail in <u>Section 4.8.11</u> and in <u>Section 26.8</u>.

4.8.1 Idle mode

When Idle mode is entered, the clock to the core is stopped. Resumption from the Idle mode does not need any special sequence but re-enabling the clock to the ARM core.

In Idle mode, execution of instructions is suspended until either a Reset or interrupt occurs. Peripheral functions continue operation during Idle mode and may generate interrupts to cause the processor to resume execution. Idle mode eliminates dynamic power used by the processor itself, memory systems and related controllers, and internal buses.

Chapter 4: LPC23XX Clocking and power control

4.8.2 Sleep mode

When the chip enters the Sleep mode, the main oscillator is powered down and all clocks are stopped. The output of the IRC is disabled but the IRC is not powered down for a fast wake-up later. The 32 kHz RTC oscillator is not stopped because the RTC interrupts may be used as the wake-up source. The flash is left in the standby mode allowing a very quick wake-up. The PLL is automatically turned off and disconnected. The CCLK and USBCLK clock dividers automatically get reset to zero.

The processor state and registers, peripheral registers, and internal SRAM values are preserved throughout Sleep mode and the logic levels of chip pins remain static. The Sleep mode can be terminated and normal operation resumed by either a Reset or certain specific interrupts that are able to function without clocks. Since all dynamic operation of the chip is suspended, Sleep mode reduces chip power consumption to a very low value.

On the wake-up of sleep mode, if the IRC was used before entering sleep mode, the 2-bit IRC timer starts counting and the code execution and peripherals activities will resume after the timer expires (4 cycles). If the main external oscillator was used, the 12-bit main oscillator timer starts counting and the code execution will resume when the timer expires (4096 cycles). The PLL and the clock dividers must be reconfigured after wakeup.

4.8.3 Power-down mode

Power-down mode does everything that Sleep mode does, but also turns off the flash memory. This saves more power, but requires waiting for resumption of flash operation before execution of code or data access in the flash memory can be accomplished.

When the chip enters Power-down mode, the IRC, the main oscillator, and all clocks are stopped. The 32kHz RTC oscillator is not stopped because the RTC interrupts may be used as the wakeup source. The flash is forced into Power-down mode. The PLL is automatically turned off and disconnected. The CCLK and USBCLK clock dividers automatically get reset to zero.

On the wakeup from Power-down mode, if the IRC was used before entering power-down mode, after IRC-start-up time (60 μs), the 2-bit IRC timer starts counting and expires in 4 cycles. The code execution can then be resumed immediately upon the expiration of the IRC timer if the code was running from SRAM. In the meantime, the flash wakeup-timer generates flash start-up time 100 μs . When it times out, access to the flash is enabled. The PLL and clock dividers must be reconfigured after wakeup.

4.8.4 Deep power-down mode

Deep power-down mode is like Power-down mode, but the on-chip regulator that supplies power to internal logic is also shut off. This produces the lowest possible power consumption without actually removing power from the entire chip. Since Deep power-down mode shuts down the on-chip logic power supply, there is no register or memory retention, and resumption of operation involves the same activities as a full-chip reset.

If power is supplied to the LPC2300 during Deep power-down mode, wakeup can be caused by the RTC alarm or external reset.

While in Deep power-down mode, external device power may be removed. In this case, the LPC2300 will start up when external power is restored.

Chapter 4: LPC23XX Clocking and power control

Essential data may be retained through Deep power-down mode (or through complete powering off of the chip) by storing data in the battery RAM, as long as the external power to the VBAT pin is maintained.

4.8.5 Peripheral power control

A Power Control for Peripherals feature allows individual peripherals to be turned off if they are not needed in the application, resulting in additional power savings. This is detailed in the description of the PCONP register.

4.8.6 Register description

The Power Control function uses registers shown in $\underline{\text{Table 52}}$. More detailed descriptions follow.

Table 52. Power Control registers

Name	Description	Access	Reset value ^[1]	Address
PCON	Power Control Register. This register contains control bits that enable the two reduced power operating modes of the LPC2300. See <u>Table 53</u> .	R/W	0x00	0xE01F C0C0
INTWAKE	Interrupt Wakeup Register. Controls which interrupts will wake the LPC2300 from power-down mode. See <u>Table 55</u>	R/W	0x00	0xE01F C144
PCONP	Power Control for Peripherals Register. This register contains control bits that enable and disable individual peripheral functions, allowing elimination of power consumption by peripherals that are not needed.	R/W		0xE01F C0C4

^[1] Reset Value reflects the data stored in used bits only. It does not include reserved bits content.

4.8.7 Power Mode Control register (PCON - 0xE01F C0C0)

Reduced power modes are controlled via the PCON register, as described in Table 53.

Table 53. Power Mode Control register (PCON - address 0xE01F C0C0) bit description

Bit	Symbol	Description	Reset value
0	PM0 (IDL)	Power mode control bit 0. See text and table below for details.	0
1	PM1 (PD)	Power mode control bit 1. See text and table below for details.	0
2	BODPDM	Brown-Out Power-down mode. When BODPDM is 1, the Brown-Out Detect circuitry will turn off when chip Power-down mode is entered, resulting in a further reduction in power usage. However, the possibility of using Brown-Out Detect as a wakeup source from Power-down mode will be lost.	0
		When 0, the Brown-Out Detect function remains active during Power-down mode.	
		See the System Control Block chapter for details of Brown-Out detection.	

Chapter 4: LPC23XX Clocking and power control

Table 53. Power Mode Control register (PCON - address 0xE01F C0C0) bit description

Bit	Symbol	Description	Reset value
3	BOGD	Brown-Out Global Disable. When BOGD is 1, the Brown-Out Detect circuitry is fully disabled at all times, and does not consume power.	0
		When 0, the Brown-Out Detect circuitry is enabled.	
		See the System Control Block chapter for details of Brown-Out detection.	
4	BORD	Brown-Out Reset Disable. When BORD is 1, the second stage of low voltage detection (2.6 V) will not cause a chip reset.	0
		When BORD is 0, the reset is enabled. The first stage of low voltage detection (2.9 V) Brown-Out interrupt is not affected.	
		See the System Control Block chapter for details of Brown-Out detection.	
6:3	-	Reserved, user software should not write ones to reserved bits. The value read from a reserved bit is not defined.	NA
7	PM2	Power mode control bit 2. See text and table below for details.	0

Encoding of reduced power modes

The PM2, PM1, and PM0 bits in PCON allow entering reduced power modes as needed. The encoding of these bits allows backward compatibility with devices that previously only supported Idle and Power-down modes. <u>Table 54</u> below shows the encoding for the four reduced power modes supported by the LPC2300.

Table 54. Encoding of reduced power modes

PM2, PM1, PM0	Description
000	Normal operation
001	Idle mode. Causes the processor clock to be stopped, while on-chip peripherals remain active. Any enabled interrupt from a peripheral or an external interrupt source will cause the processor to resume execution. See Section 4.8.1 for details.
101	Sleep mode. This mode is similar to Power-down mode (the oscillator and all on-chip clocks are stopped), but the flash memory is left in Standby mode. This allows a more rapid wakeup than Power-down mode because the flash reference voltage regulator start-up time is not needed. See Section 4.8.2 for details.
010	Power-down mode. Causes the oscillator and all on-chip clocks to be stopped. A wakeup condition from an external interrupt can cause the oscillator to re-start, the PD bit to be cleared, and the processor to resume execution. See Section 4.8.3 for details.
110	Deep power-down mode. This is the most extreme power saving mode. As in Power-down mode, Deep power-down mode causes the oscillator and all on-chip clocks to be stopped, but also turns off the on-chip DC-DC converter that supplies power to internal circuitry. See Section 4.8.4 for details.
Others	Reserved, not currently used.

4.8.8 Interrupt Wakeup Register (INTWAKE - 0xE01F C144)

Enable bits in the INTWAKE register allow the external interrupts to wake up the processor if it is in Power-down mode. The related EINTn function must be mapped to the pin in order for the wakeup process to take place. It is not necessary for the interrupt to be

Chapter 4: LPC23XX Clocking and power control

enabled in the Vectored Interrupt Controller for a wakeup to take place. This arrangement allows additional capabilities, such as having an external interrupt input wake up the processor from Power-down mode without causing an interrupt (simply resuming operation), or allowing an interrupt to be enabled during Power Down without waking the processor up if it is asserted (eliminating the need to disable the interrupt if the wakeup feature is not desirable in the application). Details of the wakeup operations are shown in Table 55.

For an external interrupt pin to be a source that would wake up the microcontroller from Power-down mode, it is also necessary to clear the corresponding interrupt flag (see Section 3.6.2 "External Interrupt flag register (EXTINT - 0xE01F C140)").

Table 55. Interrupt Wakeup register (INTWAKE - address 0xE01F C144) bit description

Bit	Symbol	Description	Reset value
0	EXTWAKE0	When one, assertion of $\overline{\text{EINT0}}$ will wake up the processor from Power-down mode.	0
1	EXTWAKE1	When one, assertion of $\overline{\text{EINT1}}$ will wake up the processor from Power-down mode.	0
2	EXTWAKE2	When one, assertion of $\overline{\text{EINT2}}$ will wake up the processor from Power-down mode.	0
3	EXTWAKE3	When one, assertion of $\overline{\text{EINT3}}$ will wake up the processor from Power-down mode.	0
4	ETHWAKE	When one, assertion of the Wake-up on LAN interrupt (WakeupInt) of the Ethernet block will wake up the processor from Power-down mode.	0
5	USBWAKE	When one, activity on the USB bus will wake up the processor from Power-down mode. Any change of state on the USB data pins will cause a wakeup when this bit is set. For details on the relationship of USB to Power-down mode and wakeup, see the relevant USB chapter(s).	0
6	CANWAKE	When one, activity of the CAN bus will wake up the processor from Power-down mode. Any change of state on the CAN receive pins will cause a wakeup when this bit is set.	0
7	GPIO0WAKE	When one, specified activity on GPIO pins (port 0) enabled for wakeup will wake up the processor from Power-down mode. See the GPIO chapter for details.	0
8	GPIO2WAKE	When one, specified activity on GPIO pins (port 2) enabled for wakeup will wake up the processor from Power-down mode. See the GPIO chapter for details.	0

Chapter 4: LPC23XX Clocking and power control

Table 55. Interrupt Wakeup register (INTWAKE - address 0xE01F C144) bit description

Bit	Symbol	Description	Reset value
13:9	-	Reserved, user software should not write ones to reserved bits. The value read from a reserved bit is not defined.	NA
14	BODWAKE	When one, Brown-Out Detect interrupt will wake up the processor from Power-down mode.	0
		Note: since there is a delay before execution begins, there is no guarantee that execution will resume before $V_{DD(DCDC)(3V3)}$ has fallen below the lower BOD threshold, which prevents execution. If execution does resume, there is no guarantee of how long the processor will continue execution before the lower BOD threshold terminates execution. These issues depend on the slope of the decline of $V_{DD(DCDC)(3V3)}$. High decoupling capacitance (between $V_{DD(DCDC)(3V3)}$ and ground) in the vicinity of the LPC2300 will improve the likelihood that software will be able to do what needs to be done when power is in the process of being lost.	
15	RTCWAKE	When one, assertion of an RTC interrupt will wake up the processor from Power-down mode.	0

4.8.9 Power Control for Peripherals register (PCONP - 0xE01F C0C4)

The PCONP register allows turning off selected peripheral functions for the purpose of saving power. This is accomplished by gating off the clock source to the specified peripheral blocks. A few peripheral functions cannot be turned off (i.e. the Watchdog timer, GPIO, the Pin Connect block, and the System Control block).

Some peripherals, particularly those that include analog functions, may consume power that is not clock dependent. These peripherals may contain a separate disable control that turns off additional circuitry to reduce power. Information on peripheral specific power saving features may be found in the chapter describing that peripheral.

Each bit in PCONP controls one peripheral as shown in <u>Table 56</u>. The bit numbers correspond to the related peripheral number as shown in the APB peripheral map <u>Table 10 "APB peripherals and base addresses"</u>.

If a peripheral control bit is 1, that peripheral is enabled. If a peripheral bit is 0, that peripheral's clock is disabled (gated off) to conserve power. For example if bit 19 is 1, the I²C1 interface is enabled. If bit 19 is 0, the I²C1 interface is disabled.

Important: valid read from a peripheral register and valid write to a peripheral register is possible only if that peripheral is enabled in the PCONP register!

Table 56. Power Control for Peripherals register (PCONP - address 0xE01F C0C4) bit description

Bit	Symbol	Description	Reset value
0	-	Unused, always 0.	0
1	PCTIM0	Timer/Counter 0 power/clock control bit.	1
2	PCTIM1	Timer/Counter 1 power/clock control bit.	1
3	PCUART0	UART0 power/clock control bit.	1
4	PCUART1	UART1 power/clock control bit.	1

UM10211

Chapter 4: LPC23XX Clocking and power control

Table 56. Power Control for Peripherals register (PCONP - address 0xE01F C0C4) bit description

Bit	Symbol	Description	Reset value
5	-	Unused, always 0.	1
6	PCPWM1	PWM1 power/clock control bit.	1
7	PCI2C0	The I ² C0 interface power/clock control bit.	1
8	PCSPI	The SPI interface power/clock control bit.	1
9	PCRTC	The RTC power/clock control bit.	1
10	PCSSP1	The SSP1 interface power/clock control bit.	1
11	PCEMC	External Memory Controller	1
12	PCAD	A/D converter (ADC) power/clock control bit.	0
		Note: Clear the PDN bit in the AD0CR (see <u>Section 27.6.1</u>) before clearing this bit, and set this bit before setting PDN.	
13	PCAN1	CAN Controller 1 power/clock control bit.	0
14	PCAN2	CAN Controller 2 power/clock control bit.	0
18:15	-	Reserved, user software should not write ones to reserved bits. The value read from a reserved bit is not defined.	NA
19	PCI2C1	The I ² C1 interface power/clock control bit.	1
20	-	Unused, always 0	0
21	PCSSP0	The SSP0 interface power/clock control bit.	1
22	PCTIM2	Timer 2 power/clock control bit.	0
23	PCTIM3	Timer 3 power/clock control bit.	0
24	PCUART2	UART 2 power/clock control bit.	0
25	PCUART3	UART 3 power/clock control bit.	0
26	PCI2C2	I ² C interface 2 power/clock control bit.	1
27	PCI2S	I ² S interface power/clock control bit.	0
28	PCSDC	SD card interface power/clock control bit.	0
29	PCGPDMA	GP DMA function power/clock control bit.	0
30	PCENET	Ethernet block power/clock control bit.	0
31	PCUSB	USB interface power/clock control bit.	0

4.8.10 Power control usage notes

After every reset, the PCONP register contains the value that enables selected interfaces and peripherals controlled by the PCONP to be enabled. Therefore, apart from proper configuring via peripheral dedicated registers, the user's application might have to access the PCONP in order to start using some of the on-board peripherals.

Power saving oriented systems should have 1s in the PCONP register only in positions that match peripherals really used in the application. All other bits, declared to be "Reserved" or dedicated to the peripherals not used in the current application, must be cleared to 0.

Chapter 4: LPC23XX Clocking and power control

4.8.11 Power domains

The LPC2300 provides two independent power domains that allow the bulk of the device to have power removed while maintaining operation of the Real Time Clock and the Battery RAM.

The VBAT pin supplies power only to the RTC and the Battery RAM. These two functions require a minimum of power to operate, which can be supplied by an external battery. When the CPU and the rest of chip functions are stopped and power removed, the RTC can supply an alarm output that may be used by external hardware to restore chip power and resume operation. Details may be found in Section 26.3.

Remark: The RTC and the battery RAM operate independently from each other. Therefore, the battery RAM can be accessed at any time, regardless of whether the RTC is enabled or disabled via its dedicated bit in the PCONP register.

4.9 Wakeup timer

The LPC2300 begins operation at power-up and when awakened from Power-down mode or Deep power-down mode by using the 4 MHz IRC oscillator as the clock source (see Section 3.4). This allows chip operation to resume quickly. If the main oscillator or the PLL is needed by the application, software will need to enable these features and wait for them to stabilize before they are used as a clock source.

When the main oscillator is initially activated, the wakeup timer allows software to ensure that the main oscillator is fully functional before the processor uses it as a clock source and starts to execute instructions. This is important at power on, all types of Reset, and whenever any of the aforementioned functions are turned off for any reason. Since the oscillator and other functions are turned off during Power-down and Deep power-down modes, any wakeup of the processor from these mode makes use of the Wakeup Timer.

The Wakeup Timer monitors the crystal oscillator as the means of checking whether it is safe to begin code execution. When power is applied to the chip, or some event caused the chip to exit Power-down mode, some time is required for the oscillator to produce a signal of sufficient amplitude to drive the clock logic. The amount of time depends on many factors, including the rate of $V_{DD(3V3)}$ ramp (in the case of power on), the type of crystal and its electrical characteristics (if a quartz crystal is used), as well as any other external circuitry (e.g. capacitors), and the characteristics of the oscillator itself under the existing ambient conditions.

Once a clock is detected, the Wakeup timer counts a fixed number of clocks (4096), then sets the flag (OSCSTAT bit in the SCS register) that indicates that the main oscillator is ready for use. Software can then switch to the main oscillator and, if needed, start the PLL. See Section 4.4.2 for details.

UM10211

Chapter 5: LPC23XX External Memory Controller (EMC)

Rev. 4.1 — 5 September 2012

User manual

5.1 How to read this chapter

This chapter describes the EMC controller for the following parts:

- LPC2377/78
- LPC2388

LPC2361/62, LPC2364/65/66/67/68, and LPC2387 do not have an EMC controller.

5.2 Basic configuration

The EMC is configured using the following registers:

- 1. Power: In the PCONP register (Table 56), set bit PCEMC.
 - **Remark:** The EMC is enabled on reset (PCEMC = 1). On POR and warm reset, the EMC is enabled as well, see Section 5.11.1.
- 2. Clock: see Section 4.7.1.
- 3. Pins: Select data, address, and control pins and their modes in PINSEL6/8/9 and PINMODE6/8/9 (see Section 9.5).
- 4. Configuration: see Table 62 and Table 64.

5.3 Introduction

The External Memory Controller (EMC) is an ARM PrimeCell MultiPort Memory Controller peripheral offering support for asynchronous static memory devices such as RAM, ROM and Flash. The EMC is an Advanced Microcontroller Bus Architecture (AMBA) compliant peripheral.

5.4 Features

- Asynchronous static memory device support including RAM, ROM, and Flash, with or without asynchronous page mode.
- Low transaction latency.
- Read and write buffers to reduce latency and to improve performance.
- 8-bit wide static memory support.
- Can be used as an interface to some external I/O devices.
- Two chip selects for static memory devices.


5.5 Functional overview

This chapter describes the major functional blocks of the EMC.

Chapter 5: LPC23XX External Memory Controller (EMC)

5.6 EMC functional description

Figure 20 shows a block diagram of the EMC.

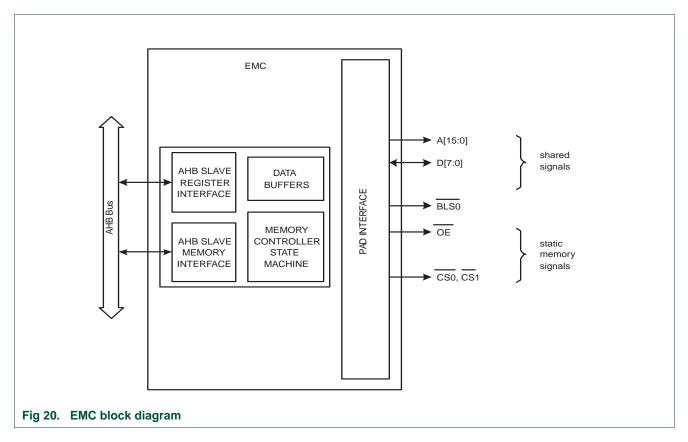

The functions of the EMC blocks are described in the following sections:

- · AHB slave register interface.
- AHB slave memory interfaces.
- Data buffers.
- Memory controller state machine.
- Pad interface.

5.7 AHB Slave register interface

The AHB slave register interface block enables the registers of the EMC to be programmed. This module also contains most of the registers and performs the majority of the register address decoding.

To eliminate the possibility of endianness problems, all data transfers to and from the registers of the EMC must be 32 bits wide.

Note: If an access is attempted with a size other than a word (32 bits), it causes an ERROR response to the AHB bus and the transfer is terminated.

Chapter 5: LPC23XX External Memory Controller (EMC)

5.7.1 AHB Slave memory interface

The AHB slave memory interface allows access to external memories.

5.7.1.1 Memory transaction endianness

The endianness of the data transfers to and from the external memories is determined by the Endian mode (N) bit in the EMCConfig Register.

Note: The memory controller must be idle (see the busy field of the EMCStatus Register) before endianness is changed, so that the data is transferred correctly.

5.7.1.2 Memory transaction size

For the LPC23xx, memory transactions must be 8 bits wide. Any access attempted with a size greater than 8 bits causes an ERROR response to the AHB bus and the transfer is terminated.

5.7.1.3 Write protected memory areas

Write transactions to write-protected memory areas generate an ERROR response to the AHB bus and the transfer is terminated.

5.7.2 Data buffers

The AHB interface reads and writes via buffers to improve memory bandwidth and reduce transaction latency. The EMC contains four 16-word buffers. The buffers can be used as read buffers, write buffers, or a combination of both. The buffers are allocated automatically.

They can be enabled or disabled for static memory using the EMCStaticConfig Registers.

5.7.2.1 Write buffers

Write buffers are used to:

- Merge write transactions so that the number of external transactions are minimized.
 Buffer data until the EMC can complete the write transaction, improving AHB write latency.
- Reduce external memory traffic. This improves memory bandwidth and reduces power consumption.

Write buffer operation:

- If the buffers are enabled, an AHB write operation writes into the Least Recently Used (LRU) buffer, if empty.
 - If the LRU buffer is not empty, the contents of the buffer are flushed to memory to make space for the AHB write data.
- If a buffer contains write data it is marked as dirty, and its contents are written to memory before the buffer can be reallocated.

The write buffers are flushed whenever:

 The memory controller state machine is not busy performing accesses to external memory.

Chapter 5: LPC23XX External Memory Controller (EMC)

The memory controller state machine is not busy performing accesses to external memory, and an AHB interface is writing to a different buffer.

Note: For static memory, the smallest buffer flush is a byte of data.

5.7.2.2 Read buffers

Read buffers are used to:

- Buffer read requests from memory. Future read requests that hit the buffer read the data from the buffer rather than memory, reducing transaction latency.
- Reduce external memory traffic. This improves memory bandwidth and reduces power consumption.

Read buffer operation:

- If the buffers are enabled and the read data is contained in one of the buffers, the read data is provided directly from the buffer.
- If the read data is not contained in a buffer, the LRU buffer is selected. If the buffer is dirty (contains write data), the write data is flushed to memory. When an empty buffer is available the read command is posted to the memory.

A buffer filled by performing a read from memory is marked as not-dirty (not containing write data) and its contents are not flushed back to the memory controller unless a subsequent AHB transfer performs a write that hits the buffer.

5.7.3 Memory controller state machine

The memory controller state machine comprises a static memory controller.

5.7.4 Pad interface

The pad interface block provides the interface to the pads.

5.8 Memory bank select

Two independently-configurable memory chip selects are supported. Pins $\overline{\text{CS1}}$ and $\overline{\text{CS0}}$ are used to select static memory devices.

Static memory chip select ranges are each 64 kilobytes in size. <u>Table 57</u> shows the address ranges of the chip selects.

Table 57. Memory bank selection

Chip Select Pin	Address Range	Memory Type	Size of Range
CS0	0x8000 0000 - 0x8000 FFFF	Static	64 kB
CS1	0x8100 0000 - 0x8100 FFFF	Static	64 kB

Chapter 5: LPC23XX External Memory Controller (EMC)

5.9 Reset

The EMC receives two reset signals. One is Power-On Reset (POR), asserted when chip power is applied, and when a brown-out condition is detected (see <u>Section 3.5 "Brown-out detection"</u> for details). The other reset is from the external Reset pin and the Watchdog Timer.

A configuration bit in the SCS register, called EMC_Reset_Disable, allows control of how the EMC is reset. The default configuration (EMC_Reset_Disable = 0) is that both EMC resets are asserted when any type of reset event occurs. In this mode, all registers and functions of the EMC are initialized upon any reset condition.

If EMC_Reset_Disable is set to 1, many portions of the EMC are only reset by a power-on or brown-out event, in order to allow the EMC to retain its state through a warm reset (external reset or watchdog reset). If the EMC is configured correctly, auto-refresh can be maintained through a warm reset.

5.10 Pin description

Table 58 shows the interface and control signal pins for the EMC.

Table 58. Pad interface and control signal descriptions

		•	•
Name	Туре	Value on POR reset	Description
A[15:0]	Output	0x0000 0000	External memory address output.
D[7:0]	Input/ Output	Data outputs = 0x0000 0000	External memory data lines. These are inputs when data is read from external memory and outputs when data is written to external memory.
ŌE	Output	1	Low active output enable for static memory devices.
BLS0	Output	1	Low active Byte Lane select signal 0.
CS[1:0]	Output	0x3	Static memory chip selects. Default active LOW. Used for static memory devices.

5.11 Register description

This chapter describes the EMC registers and provides details required when programming the microcontroller. The EMC registers are shown in Table 59.

Table 59. EMC register summary

Address	Register Name	Description		POR Reset Value	Туре
0xFFE0 8000	EMCControl	Controls operation of the memory controller.	0x1	0x3	R/W
0xFFE0 8004	EMCStatus	Provides EMC status information.	-	0x5	RO
0xFFE0 8008	EMCConfig	Configures operation of the memory controller	-	0x0	R/W
0xFFE0 8080	EMCStaticExtendedWait	Time long static memory read and write transfers.	-	0x0	R/W
0xFFE0 8200	EMCStaticConfig0	Selects the memory configuration for static chip select 0.	-	0x0	R/W
0xFFE0 8204	EMCStaticWaitWen0	Selects the delay from chip select 0 to write enable.	-	0x0	R/W

Chapter 5: LPC23XX External Memory Controller (EMC)

Table 59. EMC register summary

	•				
Address	Register Name	Description		POR Reset Value	Туре
0xFFE0 8208	EMCStaticWaitOen0	Selects the delay from chip select 0 or address change, whichever is later, to output enable.	-	0x0	R/W
0xFFE0 820C	EMCStaticWaitRd0	Selects the delay from chip select 0 to a read access.	-	0x1F	R/W
0xFFE0 8210	EMCStaticWaitPage0	Selects the delay for asynchronous page mode sequential accesses for chip select 0.	-	0x1F	R/W
0xFFE0 8214	EMCStaticWaitWr0	Selects the delay from chip select 0 to a write access.	-	0x1F	R/W
0xFFE0 8218	EMCStaticWaitTurn0	Selects the number of bus turnaround cycles for chip select 0.	-	0xF	R/W
0xFFE0 8220	EMCStaticConfig1	Selects the memory configuration for static chip select 1.	-	0x0	R/W
0xFFE0 8224	EMCStatic\WaitWen1	Selects the delay from chip select 1 to write enable.	-	0x0	R/W
0xFFE0 8228	EMCStaticWaitOen1	Selects the delay from chip select 1 or address change, whichever is later, to output enable.	-	0x0	R/W
0xFFE0 822C	EMCStaticWaitRd1	Selects the delay from chip select 1 to a read access.	-	0x1F	R/W
0xFFE0 8230	EMCStaticWaitPage1	Selects the delay for asynchronous page mode sequential accesses for chip select 1.	-	0x1F	R/W
0xFFE0 8234	EMCStaticWaitWr1	Selects the delay from chip select 1 to a write access.	-	0x1F	R/W
0xFFE0 8238	EMCStaticWaitTurn1	Selects the number of bus turnaround cycles for chip select 1.	-	0xF	R/W

5.11.1 EMC Control Register (EMCControl - 0xFFE0 8000)

The EMCControl Register is a read/write register that controls operation of the memory controller. The control bits can be altered during normal operation. <u>Table 60</u> shows the bit assignments for the EMCControl Register.

Table 60. EMC Control register (EMCControl - address 0xFFE0 8000) bit description

Bit	Symbol	Value	Description	POR Reset Value	
0	Е		EMC Enable control. Indicates if the EMC is enabled or disabled:		
		0	Disabled		
		1	Enabled (POR and warm reset value).		
			Note: Disabling the EMC reduces power consumption. When the memory controller is disabled the memory is not refreshed. The memory controller is enabled by setting the enable bit or by reset.		
			This bit must only be modified when the EMC is in idle state.[1]		
1	М		Address mirror control. Indicates normal or reset memory map:	1	
		0	Normal memory map.		
		1	Reset memory map. Static memory chip select 1 is mirrored onto chip select 0 (POR reset value).		
			Note: On POR, chip select 1 is mirrored to the chip select 0 memory area.		

Chapter 5: LPC23XX External Memory Controller (EMC)

Table 60. EMC Control register (EMCControl - address 0xFFE0 8000) bit description

Bit	Symbol	Value	Description	POR Reset Value
2	L		Low-power mode control. Indicates normal, or low-power mode:	0
		0	Normal mode (warm reset value).	
		1	Low-power mode.	
			Note: Entering low-power mode reduces memory controller power consumption. The memory controller returns to normal functional mode by clearing the low-power mode bit (L), or by POR.	
			This bit must only be modified when the EMC is in idle state.[1]	
31:3	-	-	Reserved, user software should not write ones to reserved bits. The value read from a reserved bit is not defined.	NA

^[1] The external memory cannot be accessed in low-power or disabled state. If a memory access is performed an AHB error response is generated. The EMC registers can be programmed in low-power and/or disabled state.

5.11.2 EMC Status Register (EMCStatus - 0xFFE0 8004)

The read-only EMCStatus Register provides EMC status information. <u>Table 61</u> shows the bit assignments for the EMCStatus Register.

Table 61. EMC Status register (EMCStatus - address 0xFFE0 8008) bit description

Bit	Symbol	Value	Description	POR Reset Value
0	В		Busy. This bit is used to ensure that the memory controller enters the low-power or disabled mode cleanly by determining if the memory controller is busy or not:	1
		0	EMC is idle (warm reset value).	
		1	EMC is busy performing memory transactions, commands, auto-refresh cycles, or is in self-refresh mode (POR reset value).	
1	S		Write buffer status. This bit enables the EMC to enter low-power mode or disabled mode cleanly:	0
		0	Write buffers empty (POR reset value)	
		1	Write buffers contain data.	
2	SA		Self-refresh acknowledge. This bit indicates the operating mode of the EMC:	1
		0	Normal mode	
		1	Self-refresh mode (POR reset value).	
31:3	-	-	Reserved, user software should not write ones to reserved bits. The value read from a reserved bit is not defined.	NA

5.11.3 EMC Configuration Register (EMCConfig - 0xFFE0 8008)

The EMCConfig Register configures the operation of the memory controller. It is recommended that this register is modified during system initialization, or when there are no current or outstanding transactions. This can be ensured by waiting until the EMC is idle, and then entering low-power or disabled mode. This register is accessed with one wait state. Table 62 shows the bit assignments for the EMCConfig Register.

Chapter 5: LPC23XX External Memory Controller (EMC)

Table 62. EMC Configuration register (EMCConfig - address 0xFFE0 8008) bit description

Bit	Symbol	Value	Description	POR Reset Value
0	Endian_mode		Endian mode:	0
		0	Little-endian mode (POR reset value).	
		1	Big-endian mode.	
			On power-on reset, the value of the endian bit is 0. All data must be flushed in the EMC before switching between little-endian and big-endian modes.	
7:1	-	-	Reserved, user software should not write ones to reserved bits. The value read from a reserved bit is not defined.	NA
8	-	-	Reserved, user software should not write ones to reserved bits. The value read from a reserved bit is not defined.	0
31:9	-	-	Reserved, user software should not write ones to reserved bits. The value read from a reserved bit is not defined.	NA

5.11.4 Static Memory Extended Wait Register (EMCStaticExtendedWait - 0xFFE0 8080)

The EMCStaticExtendedWait register times long static memory read and write transfers (which are longer that can be supported by the EMCStaticWaitRd[n] or EMCStaticWaitWr[n] registers) when the EW bit of one of the EMCStaticConfig registers is enabled. There is only a single EMCStaticExtendedWait Register. This is used by the relevant static memory chip select if the appropriate ExtendedWait (EW) bit in the EMCStaticConfig Register is set. It is recommended that this register is modified during system initialization, or when there are no current or outstanding transactions. However, if necessary, these control bits can be altered during normal operation. This register is accessed with one wait state.

<u>Table 70</u> shows the bit assignments for the EMCStaticExtendedWait register.

Table 63. Static Memory Extended Wait register (EMCStaticExtendedWait - address 0xFFE0 8080) bit description

Bit	Symbol	Value	Description	Reset Value
9:0	EXTENDEDWAIT		External wait time out in terms of the CCLK clock cycles. The delay is (EXTENDWAIT + 1) x 16 x t_{CCLK}	0x000
		0x0	16 CCLK clock cycles (POR reset value).	
		n	(n+1) x 16 CCLK clock cycles.	
		0x3F	(0x3F+1) x 16 CCLK clock cycles.	
31:10	-	-	Reserved, user software should not write ones to reserved bits. The value read from a reserved bit is not defined.	NA

For example, for a static memory read/write transfer time of 16 μ s, and a CCLK frequency of 50 MHz, the following value must be programmed into this register:

$$\frac{16 \times 10^{-6} \times 50 \times 10^{6}}{16} - 1 = 49$$

Chapter 5: LPC23XX External Memory Controller (EMC)

5.11.5 Static Memory Configuration Registers (EMCStaticConfig0-1 - 0xFFE0 8200, 220)

The EMCStaticConfig0-1 Registers configure the static memory configuration. It is recommended that these registers are modified during system initialization, or when there are no current or outstanding transactions. This can be ensured by waiting until the EMC is idle, and then entering low-power, or disabled mode. These registers are accessed with one wait state.

<u>Table 64</u> shows the bit assignments for the EMCStaticConfig0-1 Registers. Note that synchronous burst mode memory devices are not supported.

Table 64. Static Memory Configuration registers (EMCStaticConfig0-1 - addresses 0xFFE0 8200, 0xFFE0 8220) bit description

Bit	Symbol	Value	Description	POR Reset Value
1:0	MW		Memory width.	00
		00	8 bit (POR reset value).	
		01	Reserved.	
		10	Reserved.	
		11	Reserved.	
2	-	-	Reserved, user software should not write ones to reserved bits. The value read from a reserved bit is not defined.	NA
3	PM		Page mode. In page mode the EMC can burst up to four external accesses. Therefore devices with asynchronous page mode burst four or higher devices are supported. Asynchronous page mode burst two devices are not supported and must be accessed normally.	0
		0	Disabled (POR reset value).	
		1	Async page mode enabled (page length four).	
5:4	-	-	Reserved, user software should not write ones to reserved bits. The value read from a reserved bit is not defined.	NA
6	PC		Chip select polarity. The value of the chip select polarity on power-on reset is 0.	0
		0	Active LOW chip select.	
		1	Active HIGH chip select.	
7	-	-	Reserved, user software should not write ones to reserved bits. The value read from a reserved bit is not defined.	NA
8	EW		Extended wait. Extended wait (EW) uses the EMCStaticExtendedWait Register to time both the read and write transfers rather than the EMCStaticWaitRd and EMCStaticWaitWr Registers. This enables much longer transactions.[1]	0
		0	Extended wait disabled (POR reset value).	
		1	Extended wait enabled.	
18:9	-	-	Reserved, user software should not write ones to reserved bits. The value read from a reserved bit is not defined.	NA
19	B[2]		Buffer enable control.	0
		0	Buffer disabled (POR reset value).	
		1	Buffer enabled.	

Chapter 5: LPC23XX External Memory Controller (EMC)

Table 64. Static Memory Configuration registers (EMCStaticConfig0-1 - addresses 0xFFE0 8200, 0xFFE0 8220) bit description

Bit	Symbol	Value	Description	POR Reset Value
20	Р		Write protect control.	0
		0	Writes not protected (POR reset value).	
		1	Write protected.	
31:21	-	-	Reserved, user software should not write ones to reserved bits. The value read from a reserved bit is not defined.	NA

^[1] Extended wait and page mode cannot be selected simultaneously.

5.11.6 Static Memory Write Enable Delay Registers (EMCStaticWaitWen0-1 - 0xFFE0 8204, 224)

The EMCStaticWaitWen0-1 Registers enable you to program the delay from the chip select to the write enable. It is recommended that these registers are modified during system initialization, or when there are no current or outstanding transactions. This can be ensured by waiting until the EMC is idle, and then entering low-power, or disabled mode. These registers are accessed with one wait state.

Table 65 shows the bit assignments for the EMCStaticWaitWen0-1 Registers.

Table 65. Static Memory Write Enable Delay registers (EMCStaticWaitWen0-1 - addresses 0xFFE0 8204,0xFFE0 8224) bit description

		- ,-	,	
Bit	Symbol	Value	Description	POR Reset Value
3:0	WAITWEN		Wait write enable. Delay from chip select assertion to write enable in terms of the CCLK clock cycles. The delay is: (WAITWEN + 1) x t _{CCLK} .	0
		0	One CCLK cycle delay between assertion of chip select and write enable (POR reset value).	
		n	(n + 1) CCLK clock cycles delay.	
		0xF	16 CCLK cycle delay.	
31:4	-	-	Reserved, user software should not write ones to reserved bits. The value read from a reserved bit is not defined.	NA

5.11.7 Static Memory Output Enable Delay Registers (EMCStaticWaitOen0-1 - 0xFFE0 8208, 228)

The EMCStaticWaitOen0-1 Registers enable you to program the delay from the chip select or address change, whichever is later, to the output enable. It is recommended that these registers are modified during system initialization, or when there are no current or outstanding transactions. This can be ensured by waiting until the EMC is idle, and then entering low-power, or disabled mode. These registers are accessed with one wait state.

Table 66 shows the bit assignments for the EMCStaticWaitOen0-1 Registers.

^[2] EMC may perform burst read access even when the buffer enable bit is cleared.

Chapter 5: LPC23XX External Memory Controller (EMC)

Table 66. Static Memory Output Enable delay registers (EMCStaticWaitOen0-1 - addresses 0xFFE0 8208, 0xFFE0 8228) bit description

Bit	Symbol	Value	Description	POR Reset Value
3:0	WAITOEN		Wait output enable. Delay from chip select assertion to output enable in terms of the CCLK cycles. The delay is: (WAITOEN x $t_{\rm CCLK}$).	0x0
		0x0	No delay (POR reset value).	
		n	n CCLK clock cycles delay.	
		0xF	15 CCLK clock cycles delay.	
31:4	-	-	Reserved, user software should not write ones to reserved bits. The value read from a reserved bit is not defined.	NA

5.11.8 Static Memory Read Delay Registers (EMCStaticWaitRd0-1 - 0xFFE0 820C, 22C)

The EMCStaticWaitRd0-1 Registers enable you to program the delay from the chip select to the read access. It is recommended that these registers are modified during system initialization, or when there are no current or outstanding transactions. This can be ensured by waiting until the EMC is idle, and then entering low-power, or disabled mode. It is not used if the extended wait bit is enabled in the EMCStaticConfig0-1 Registers. These registers are accessed with one wait state.

<u>Table 67</u> shows the bit assignments for the EMCStaticWaitRd0-1 Registers.

Table 67. Static Memory Read Delay registers (EMCStaticWaitRd0-1 - addresses 0xFFE0 820C, 0xFFE0 822C) bit description

oxi i 20 0200, oxi i 20 0220) bit dobbliption							
Symbol	Value	Description	Reset Value				
WAITRD		Non-page mode read wait states or asynchronous page mode readfirst access wait state expressed in terms of the CCLK clock cycles. Non-page mode read or asynchronous page mode read, first read only wait state time is: (WAITRD + 1) x t _{CCLK}	0x1F				
	0x0	1 CCLK clock cycle for read accesses.					
	n	(n + 1) CCLK cycles for read accesses.					
	0x1F	32 CCLK cycles for read accesses (POR reset value).					
-	-	Reserved, user software should not write ones to reserved bits. The value read from a reserved bit is not defined.	NA				
	•	WAITRD Ox0 n	WAITRD Non-page mode read wait states or asynchronous page mode readfirst access wait state expressed in terms of the CCLK clock cycles. Non-page mode read or asynchronous page mode read, first read only wait state time is: (WAITRD + 1) x t _{CCLK} 0x0 1 CCLK clock cycle for read accesses. n (n + 1) CCLK cycles for read accesses. 0x1F 32 CCLK cycles for read accesses (POR reset value). - Reserved, user software should not write ones to reserved bits. The value read from a reserved bit is not				

5.11.9 Static Memory Page Mode Read Delay Registers (EMCStaticwaitPage0-1 - 0xFFE0 8210, 230)

The EMCStaticWaitPage0-1 Registers enable you to program the delay for asynchronous page mode sequential accesses. It is recommended that these registers are modified during system initialization, or when there are no current or outstanding transactions. This can be ensured by waiting until the EMC is idle, and then entering low-power, or disabled mode. This register is accessed with one wait state.

Table 68 shows the bit assignments for the EMCStaticWaitPage0-1 Registers.

Chapter 5: LPC23XX External Memory Controller (EMC)

Table 68. Static Memory Page Mode Read Delay registers0-1 (EMCStaticWaitPage0-1 - addresses 0xFFE0 8210, 0xFFE0 8230) bit description

Bit	Symbol	Value	Description	POR Reset Value
4:0	WAITPAGE		Asynchronous page mode read after the first read wait states. Number of wait states for asynchronous page mode read accesses after the first read is: (WAITPAGE + 1) x t _{CCLK}	0x1F
		0x0	1 CCLK cycle read access time.	
		n	(n+ 1) CCLK cycle read access time.	
		0x1F	32 CCLK cycle read access time (POR reset value).	
31:5	-	-	Reserved, user software should not write ones to reserved bits. The value read from a reserved bit is not defined.	NA

5.11.10 Static Memory Write Delay Registers (EMCStaticWaitwr0-1 - 0xFFE0 8214, 234)

The EMCStaticWaitWr0-1 Registers enable you to program the delay from the chip select to the write access. It is recommended that these registers are modified during system initialization, or when there are no current or outstanding transactions. This can be ensured by waiting until the EMC is idle, and then entering low-power, or disabled mode. These registers are not used if the extended wait (EW) bit is enabled in the EMCStaticConfig Register. These registers are accessed with one wait state.

Table 69 shows the bit assignments for the EMCStaticWaitWr0-1 Registers.

Table 69. Static Memory Write Delay registers0-1 (EMCStaticWaitWr - addresses 0xFFE0 8214, 0xFFE0 8234) bit description

Symbol	Value	Description	Reset Value
WAITWR		SRAM Write wait states. SRAM wait state time for write accesses after the first read in terms of the CCLK clock cycles. The wait state time for write accesses after the first read is (WAITWR + 2) x t_{CCLK} :	0x1F
	0x0	2 CCLK cycles write access time.	
	n	(n + 2) CCLK cycle write access time.	
	0x1F	33 CCLK cycle write access time (POR reset value).	
-	-	Reserved, user software should not write ones to reserved bits. The value read from a reserved bit is not defined.	NA
	WAITWR	WAITWR 0x0 n 0x1F	WAITWR SRAM Write wait states. SRAM wait state time for write accesses after the first read in terms of the CCLK clock cycles. The wait state time for write accesses after the first read is (WAITWR + 2) x t _{CCLK} : 0x0 2 CCLK cycles write access time. n (n + 2) CCLK cycle write access time. 0x1F 33 CCLK cycle write access time (POR reset value). - Reserved, user software should not write ones to reserved bits. The value read from a reserved bit is not

5.11.11 Static Memory Extended Wait Register (EMCStaticExtendedWait - 0xFFE0 8080)

The EMCStaticExtendedWait register times long static memory read and write transfers (which are longer that can be supported by the EMCStaticWaitRd[n] or EMCStaticWaitWr[n] registers) when the EW bit of one of the EMCStaticConfig registers is enabled. There is only a single EMCStaticExtendedWait Register. This is used by the relevant static memory chip select if the appropriate ExtendedWait (EW) bit in the EMCStaticConfig Register is set. It is recommended that this register is modified during

Chapter 5: LPC23XX External Memory Controller (EMC)

system initialization, or when there are no current or outstanding transactions. However, if necessary, these control bits can be altered during normal operation. This register is accessed with one wait state.

Table 70 shows the bit assignments for the EMCStaticExtendedWait register.

Table 70. Static Memory Extended Wait register (EMCStaticExtendedWait - address 0xFFE0 8080) bit description

Bit	Symbol	Value	Description	Reset Value
9:0	EXTENDEDWAIT		External wait time out in terms of the CCLK clock cycles. The delay is (EXTENDWAIT + 1) x 16 x t_{CCLK}	0x000
		0x0	16 CCLK clock cycles (POR reset value).	
		n	(n+1) x 16 CCLK clock cycles.	
		0x3F	(0x3F+1) x 16 CCLK clock cycles.	
31:10	-	-	Reserved, user software should not write ones to reserved bits. The value read from a reserved bit is not defined.	NA

For example, for a static memory read/write transfer time of 16 μ s, and a CCLK frequency of 50 MHz, the following value must be programmed into this register:

$$\frac{16 \times 10^{-6} \times 50 \times 10^{6}}{16} - 1 = 49$$

5.11.12 Static Memory Turn Round Delay Registers (EMCStaticWaitTurn0-1 - 0xFFE0 8218, 238, 258, 278)

The EMCStaticWaitTurn0-1 Registers enable you to program the number of bus turnaround cycles. It is recommended that these registers are modified during system initialization, or when there are no current or outstanding transactions. This can be ensured by waiting until the EMC is idle, and then entering low-power, or disabled mode. These registers are accessed with one wait state.

Table 71 shows the bit assignments for the EMCStaticWaitTurn0-1 Registers.

Table 71. Static Memory Turn Round Delay registers0-1 (EMCStaticWaitTurn0-1- addresses 0xFFE0 8218, 0xFFE0 8238) bit description

Bit	Symbol	Value	Description	Reset Value
3:0	WAITTURN		Bus turnaround cycles in terms of the CCLK clock cycles. Bus turnaround time is (WAITTURN + 1) x t_{CCLK} .	
		0	1 CCLK clock cycle turnaround cycles	
		n	(n + 1) CCLK clock cycles turnaround cycle.	0xF
		0xF	16 CCLK turnaround cycles (POR reset value).	
31:4	-	-	Reserved, user software should not write ones to reserved bits. The value read from a reserved bit is not defined.	NA

Chapter 5: LPC23XX External Memory Controller (EMC)


To prevent bus contention on the external memory data bus, the WAITTURN field controls the number of bus turnaround cycles added between static memory read and write accesses. The WAITTURN field also controls the number of turnaround cycles between static memory accesses.

5.12 External memory interface

Shown in Figure 21 is the external memory interfacing for an 8-bit bank width.

8 bit wide memory banks do require all address lines down to A0. See <u>Section 9.5.9</u> for configuring pins for address lines.

Symbol "a_b" in the following figures refers to the highest order address line in the data bus. Symbol "a_m" refers to the highest order address line of the memory chip used in the external memory interface.

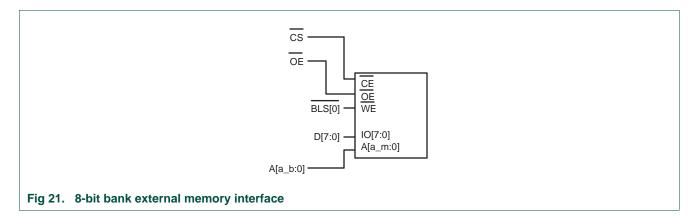

UM10211

Chapter 6: LPC23XX Vectored Interrupt Controller (VIC) Rev. 4.1 — 5 September 2012 User

User manual

6.1 How to read this chapter

See Table 2 for peripherals that are not implemented in all LPC23XX parts. The corresponding interrupt signals are reserved.

6.2 Features

- ARM PrimeCell Vectored Interrupt Controller
- Mapped to AHB address space for fast access
- Supports 32 vectored IRQ interrupts
- 16 programmable interrupt priority levels
- Fixed hardware priority within each programmable priority level
- Hardware priority level masking
- Any input can be assigned as an FIQ interrupt
- Software interrupt generation

6.3 Description

The ARM processor core has two interrupt inputs called Interrupt Request (IRQ) and Fast Interrupt reQuest (FIQ). The Vectored Interrupt Controller (VIC) takes 32 interrupt request inputs and programmably assigns them as FIQ or vectored IRQ types. The programmable assignment scheme means that priorities of interrupts from the various peripherals can be dynamically assigned and adjusted.

Fast Interrupt reQuest (FIQ) requests have the highest priority. If more than one request is assigned to FIQ, the VIC ORs the requests to produce the FIQ signal to the ARM processor. The fastest possible FIQ latency is achieved when only one request is classified as FIQ, because then the FIQ service routine can simply start dealing with that device. But if more than one request is assigned to the FIQ class, the FIQ service routine can read a word from the VIC that identifies which FIQ sources are requesting an interrupt.

Vectored IRQ's, which include all interrupt requests that are not classified as FIQs, have a programmable interrupt priority. When more than one interrupt is assigned the same priority and occur simultaneously, the one connected to the lowest numbered VIC channel (see Table 86 on page 92) will be serviced first.

The VIC ORs the requests from all of the vectored IRQs to produce the IRQ signal to the ARM processor. The IRQ service routine can start by reading a register from the VIC and jumping to the address supplied by that register.

6.4 Register description

The VIC implements the registers shown in Table 72. More detailed descriptions follow.

Table 72. VIC register map

	ster map	_		
Name	Description	Access	Reset value ^[1]	Address
VICIRQStatus	IRQ Status Register. This register reads out the state of those interrupt requests that are enabled and classified as IRQ.	RO	0	0xFFFF F000
VICFIQStatus	FIQ Status Requests. This register reads out the state of those interrupt requests that are enabled and classified as FIQ.	RO	0	0xFFFF F004
VICRawIntr	Raw Interrupt Status Register. This register reads out the state of the 32 interrupt requests / software interrupts, regardless of enabling or classification.	RO	-	0xFFFF F008
VICIntSelect	Interrupt Select Register. This register classifies each of the 32 interrupt requests as contributing to FIQ or IRQ.	R/W	0	0xFFFF F00C
VICIntEnable	Interrupt Enable Register. This register controls which of the 32 interrupt requests and software interrupts are enabled to contribute to FIQ or IRQ.	R/W	0	0xFFFF F010
VICIntEnCIr	Interrupt Enable Clear Register. This register allows software to clear one or more bits in the Interrupt Enable register.	WO	-	0xFFFF F014
VICSoftInt	Software Interrupt Register. The contents of this register are ORed with the 32 interrupt requests from various peripheral functions.	R/W	0	0xFFFF F018
VICSoftIntClear	Software Interrupt Clear Register. This register allows software to clear one or more bits in the Software Interrupt register.	WO	-	0xFFFF F01C
VICProtection	Protection enable register. This register allows limiting access to the VIC registers by software running in privileged mode.	R/W	0	0xFFFF F020
VICSWPriorityMask	Software Priority Mask Register. Allows masking individual interrupt priority levels in any combination.	R/W	0xFFFF	0xFFFF F024
VICVectAddr0	Vector address 0 register. Vector Address Registers 0-31 hold the addresses of the Interrupt Service routines (ISRs) for the 32 vectored IRQ slots.	R/W	0	0xFFFF F100
VICVectAddr1	Vector address 1 register.	R/W	0	0xFFFF F104
VICVectAddr2	Vector address 2 register.	R/W	0	0xFFFF F108
VICVectAddr3	Vector address 3 register.	R/W	0	0xFFFF F10C
VICVectAddr4	Vector address 4 register.	R/W	0	0xFFFF F110
VICVectAddr5	Vector address 5 register.	R/W	0	0xFFFF F114
VICVectAddr6	Vector address 6 register.	R/W	0	0xFFFF F118
VICVectAddr7	Vector address 7 register.	R/W	0	0xFFFF F11C
VICVectAddr8	Vector address 8 register.	R/W	0	0xFFFF F120
VICVectAddr9	Vector address 9 register.	R/W	0	0xFFFF F124
VICVectAddr10	Vector address 10 register.	R/W	0	0xFFFF F128
VICVectAddr11	Vector address 11 register.	R/W	0	0xFFFF F12C
VICVectAddr12	Vector address 12 register.	R/W	0	0xFFFF F130
VICVectAddr13	Vector address 13 register.	R/W	0	0xFFFF F134
VICVectAddr14	Vector address 14 register.	R/W	0	0xFFFF F138
VICVectAddr15	Vector address 15 register.	R/W	0	0xFFFF F13C
VICVectAddr16	Vector address 16 register.	R/W	0	0xFFFF F140
VICVectAddr17	Vector address 17 register.	R/W	0	0xFFFF F144
VICVectAddr18	Vector address 18 register.	R/W	0	0xFFFF F148

UM10211 NXP Semiconductors

Table 72. VIC register map

Name	Description	Access	Reset value[1]	Address
VICVectAddr19	Vector address 19 register.	R/W	0	0xFFFF F14C
VICVectAddr20	Vector address 20 register.	R/W	0	0xFFFF F150
VICVectAddr21	Vector address 21 register.	R/W	0	0xFFFF F154
VICVectAddr22	Vector address 22 register.	R/W	0	0xFFFF F158
VICVectAddr23	Vector address 23 register.	R/W	0	0xFFFF F15C
VICVectAddr24	Vector address 24 register.	R/W	0	0xFFFF F160
VICVectAddr25	Vector address 25 register.	R/W	0	0xFFFF F164
VICVectAddr26	Vector address 26 register.	R/W	0	0xFFFF F168
VICVectAddr27	Vector address 27 register.	R/W	0	0xFFFF F16C
VICVectAddr28	Vector address 28 register.	R/W	0	0xFFFF F170
VICVectAddr29	Vector address 29 register.	R/W	0	0xFFFF F174
VICVectAddr30	Vector address 30 register.	R/W	0	0xFFFF F178
VICVectAddr31	Vector address 31 register.	R/W	0	0xFFFF F17C
VICVectPriority0	Vector priority 0 register. Vector Priority Registers 0-31. Each of these registers designates the priority of the corresponding vectored IRQ slot.	R/W	0xF	0xFFFF F200
VICVectPriority1	Vector priority 1 register.	R/W	0xF	0xFFFF F204
VICVectPriority2	Vector priority 2 register.	R/W	0xF	0xFFFF F208
VICVectPriority3	Vector priority 3 register.	R/W	0xF	0xFFFF F20C
VICVectPriority4	Vector priority 4 register.	R/W	0xF	0xFFFF F210
VICVectPriority5	Vector priority 5 register.	R/W	0xF	0xFFFF F214
VICVectPriority6	Vector priority 6 register.	R/W	0xF	0xFFFF F218
VICVectPriority7	Vector priority 7 register.	R/W	0xF	0xFFFF F21C
VICVectPriority8	Vector priority 8 register.	R/W	0xF	0xFFFF F220
VICVectPriority9	Vector priority 9 register.	R/W	0xF	0xFFFF F224
VICVectPriority10	Vector priority 10 register.	R/W	0xF	0xFFFF F228
VICVectPriority11	Vector priority 11 register.	R/W	0xF	0xFFFF F22C
VICVectPriority12	Vector priority 12 register.	R/W	0xF	0xFFFF F230
VICVectPriority13	Vector priority 13 register.	R/W	0xF	0xFFFF F234
VICVectPriority14	Vector priority 14 register.	R/W	0xF	0xFFFF F238
VICVectPriority15	Vector priority 15 register.	R/W	0xF	0xFFFF F23C
VICVectPriority16	Vector priority 16 register.	R/W	0xF	0xFFFF F240
VICVectPriority17	Vector priority 17 register.	R/W	0xF	0xFFFF F244
VICVectPriority18	Vector priority 18 register.	R/W	0xF	0xFFFF F248
VICVectPriority19	Vector priority 19 register.	R/W	0xF	0xFFFF F24C
VICVectPriority20	Vector priority 20 register.	R/W	0xF	0xFFFF F250
VICVectPriority21	Vector priority 21 register.	R/W	0xF	0xFFFF F254
VICVectPriority22	Vector priority 22 register.	R/W	0xF	0xFFFF F258
VICVectPriority23	Vector priority 23 register.	R/W	0xF	0xFFFF F25C
VICVectPriority24	Vector priority 24 register.	R/W	0xF	0xFFFF F260
VICVectPriority25	Vector priority 25 register.	R/W	0xF	0xFFFF F264

Chapter 6: LPC23XX Vectored Interrupt Controller (VIC)

Table 72. VIC register map

Name	Description	Access	Reset value[1]	Address
VICVectPriority26	Vector priority 26 register.	R/W	0xF	0xFFFF F268
VICVectPriority27	Vector priority 27 register.	R/W	0xF	0xFFFF F26C
VICVectPriority28	Vector priority 28 register.	R/W	0xF	0xFFFF F270
VICVectPriority29	Vector priority 29 register.	R/W	0xF	0xFFFF F274
VICVectPriority30	Vector priority 30 register.	R/W	0xF	0xFFFF F278
VICVectPriority31	Vector priority 31 register.	R/W	0xF	0xFFFF F27C
VICAddress	Vector address register. When an IRQ interrupt occurs, the Vector Address Register holds the address of the currently active interrupt.	R/W	0	0xFFFF FF00

^[1] Reset Value reflects the data stored in used bits only. It does not include reserved bits content.

6.5 VIC registers

The following section describes the VIC registers in the order in which they are used in the VIC logic, from those closest to the interrupt request inputs to those most abstracted for use by software. For most people, this is also the best order to read about the registers when learning the VIC.

6.5.1 Software Interrupt Register (VICSoftInt - 0xFFFF F018)

The VICSoftInt register is used to generate software interrupts. The contents of this register are ORed with the 32 interrupt requests from the various peripherals, before any other logic is applied.

Table 73. Software Interrupt register (VICSoftInt - address 0xFFFF F018) bit description

Bit	Symbol	Value	Description	Reset value
31:0	See <u>Table 87</u> "Interrupt sources	0	Do not force the interrupt request with this bit number. Writing zeroes to bits in VICSoftInt has no effect, see VICSoftIntClear (Section 6.5.2).	0
	bit allocation table".	1	Force the interrupt request with this bit number.	

6.5.2 Software Interrupt Clear Register (VICSoftIntClear - 0xFFFF F01C)

The VICSoftIntClear register is a 'Write Only' register. This register allows software to clear one or more bits in the Software Interrupt register, without having to first read it.

Table 74. Software Interrupt Clear register (VICSoftIntClear - address 0xFFFF F01C) bit description

Bit	Symbol	Value	Description	Reset value
31:0	See Table 87	0	Writing a 0 leaves the corresponding bit in VICSoftInt unchanged.	0
	"Interrupt sources bit allocation table".	1	Writing a 1 clears the corresponding bit in the Software Interrupt register, removing any interrupt that may have been generated by that bit.	

Chapter 6: LPC23XX Vectored Interrupt Controller (VIC)

6.5.3 Raw Interrupt Status Register (VICRawIntr - 0xFFFF F008)

This is a read only register. This register reads out the state of the 32 interrupt requests and software interrupts, regardless of enabling or classification.

Table 75. Raw Interrupt Status register (VICRawIntr - address 0xFFFF F008) bit description

			,	•	
Bit	Symbol	Value	Description	Reset value	
31:0	See Table 87 "Interrupt sources bit allocation table".		0	Neither the hardware nor software interrupt request with this bit number are asserted.	S -
		1	The hardware or software interrupt request with this bit number is asserted.		

6.5.4 Interrupt Enable Register (VICIntEnable - 0xFFFF F010)

This is a read/write accessible register. This register controls which of the 32 combined hardware and software interrupt requests are enabled to contribute to FIQ or IRQ.

Table 76. Interrupt Enable register (VICIntEnable - address 0xFFFF F010) bit description

Bit	Symbol	Description	Reset value
31:0	See Table 87 "Interrupt sources bit allocation table".	When this register is read, 1s indicate interrupt requests or software interrupts that are enabled to contribute to FIQ or IRQ. When this register is written, ones enable interrupt requests or software interrupts to contribute to FIQ or IRQ, zeroes have no effect. See Section 6.5.5 "Interrupt Enable Clear Register (VICIntEnClear - 0xFFFF F014)" on page 89 and Table 77 below for how to disable interrupts.	0

6.5.5 Interrupt Enable Clear Register (VICIntEnClear - 0xFFFF F014)

This is a write only register. This register allows software to clear one or more bits in the Interrupt Enable register (see <u>Section 6.5.4 "Interrupt Enable Register (VICIntEnable - 0xFFFF F010)"</u> on page 89), without having to first read it.

Table 77. Interrupt Enable Clear register (VICIntEnClear - address 0xFFFF F014) bit description

Bit	Symbol	Value	Description	Reset value
31:0	See <u>Table 87</u> <u>"Interrupt</u>	0	Writing a 0 leaves the corresponding bit in VICIntEnable unchanged.	-
	allocation table".	1	Writing a 1 clears the corresponding bit in the Interrupt Enable register, thus disabling interrupts for this request.	

6.5.6 Interrupt Select Register (VICIntSelect - 0xFFFF F00C)

This is a read/write accessible register. This register classifies each of the 32 interrupt requests as contributing to FIQ or IRQ.

Chapter 6: LPC23XX Vectored Interrupt Controller (VIC)

Table 78. Interrupt Select register (VICIntSelect - address 0xFFFF F00C) bit description

Bit	Symbol	Value	Description	Reset value	
31:0	See <u>Table 87</u> "Interrupt	See <u>Table 87</u> <u>"Interrupt</u>	0	The interrupt request with this bit number is assigned to the IRQ category.	0
	sources bit allocation table".	1	The interrupt request with this bit number is assigned to the FIQ category.		

6.5.7 IRQ Status Register (VICIRQStatus - 0xFFFF F000)

This is a read only register. This register reads out the state of those interrupt requests that are enabled and classified as IRQ.

Table 79. IRQ Status register (VICIRQStatus - address 0xFFFF F000) bit description

Bit	Symbol	Description	Reset value
31:0	See Table 87 "Interrupt sources bit allocation table".	A bit read as 1 indicates a corresponding interrupt request being enabled, classified as IRQ, and asserted	0

6.5.8 FIQ Status Register (VICFIQStatus - 0xFFFF F004)

This is a read only register. This register reads out the state of those interrupt requests that are enabled and classified as FIQ. If more than one request is classified as FIQ, the FIQ service routine can read this register to see which request(s) is (are) active.

Table 80. FIQ Status register (VICFIQStatus - address 0xFFFF F004) bit description

Bit	Symbol	Description	Reset value
31:0	See Table 87 "Interrupt sources bit allocation table".	A bit read as 1 indicates a corresponding interrupt request being enabled, classified as IRQ, and asserted	0

6.5.9 Vector Address Registers 0-31 (VICVectAddr0-31 - 0xFFFF F100 to 17C)

These are read/write accessible registers. These registers hold the addresses of the Interrupt Service routines (ISRs) for the 32 vectored IRQ slots.

Table 81. Vector Address registers 0-31 (VICVectAddr0-31 - addresses 0xFFFF F100 to 0xFFFF F17C) bit description

Bit	Symbol	Description	Reset value
31:0	VICVectAddr	The VIC provides the contents of one of these registers in response to a read of the Vector Address register (VICAddress see Section 6.5.9). The contents of the specific VICVectAddr register (one of the 32 VICVectAddr registers) that corresponds to the interrupt that is to be serviced is read from VICAddress whenever an interrupt occurs.	0x0000 0000

Chapter 6: LPC23XX Vectored Interrupt Controller (VIC)

6.5.10 Vector Priority Registers 0-31 (VICVectPriority0-31 - 0xFFFF F200 to 27C)

These registers select a priority level for the 32 vectored IRQs. There are 16 priority levels, corresponding to the values 0 through 15 decimal, of which 15 is the lowest priority. The reset value of these registers defaults all interrupt to the lowest priority, allowing a single write to elevate the priority of an individual interrupt.

Table 82. Vector Priority registers 0-31 (VICVectPriority0-31 - addresses 0xFFFF F200 to 0xFFFF F27C) bit description

Bit	Symbol	Description	Reset value
3:0	VICVectPriority	Selects one of 16 priority levels for the corresponding vectored interrupt.	0xF
31:4	-	Reserved, user software should not write ones to reserved bits. The value read from a reserved bit is not defined.	NA

6.5.11 Vector Address Register (VICAddress - 0xFFFF FF00)

When an IRQ interrupt occurs, the address of the Interrupt Service Routine (ISR) for the interrupt that is to be serviced can be read from this register. The address supplied is from one of the Vector Address Registers (VICVectAddr0-31).

Table 83. Vector Address register (VICAddress - address 0xFFFF FF00) bit description

Bit	Symbol	Description	Reset value
31:0	VICAddress	Contains the address of the ISR for the currently active interrupt. This register must be written (with any value) at the end of an ISR, to update the VIC priority hardware. Writing to the register at any other time can cause incorrect operation.	0

6.5.12 Software Priority Mask Register (VICSWPriorityMask - 0xFFFF F024)

The Software Priority Mask Register contains individual mask bits for the 16 interrupt priority levels.

Table 84. Software Priority Mask register (VICSWPriorityMask - address 0xFFFF F024) bit description

Bit	Symbol	Value	Description	Reset value
15:0	VICSWPriorityMask	0	Interrupt priority level is masked.	0xFFFF
		1	Interrupt priority level is not masked.	
31:16	-	-	Reserved, user software should not write ones to reserved bits. The value read from a reserved bit is not defined.	NA

6.5.13 Protection Enable Register (VICProtection - 0xFFFF F020)

This is a read/write accessible register. This one bit register controls access to the VIC registers by software running in User mode. The VICProtection register itself can only be accessed in privileged mode.

Chapter 6: LPC23XX Vectored Interrupt Controller (VIC)

Table 85. Protection Enable register (VICProtection - address 0xFFFF F020) bit description

Bit	Symbol	Value	Description	
0	VIC_access	0	VIC registers can be accessed in User or privileged mode.	0
		1	The VIC registers can only be accessed in privileged mode.	
31:1	-	-	Reserved, user software should not write ones to reserved bits. The value read from a reserved bit is not defined.	NA

6.6 Interrupt sources

<u>Table 86</u> lists the interrupt sources for each peripheral function. Each peripheral device may have one or more interrupt lines to the Vectored Interrupt Controller. Each line may represent more than one interrupt source. There is no significance or priority about what line is connected where, except for certain standards from ARM.

Table 86. Connection of interrupt sources to the Vectored Interrupt Controller

Block	Flag(s)		Channel # and Mask
WDT	Watchdog Interrupt (WDINT)	0	0x0000 0001
-	Reserved for Software Interrupts only	1	0x0000 0002
ARM Core	Embedded ICE, DbgCommRx	2	0x0000 0004
ARM Core	Embedded ICE, DbgCommTX	3	0x0000 00008
TIMER0	Match 0 - 1 (MR0, MR1)	4	0x0000 0010
	Capture 0 - 1 (CR0, CR1)		
TIMER1	Match 0 - 2 (MR0, MR1, MR2)	5	0x0000 0020
	Capture 0 - 1 (CR0, CR1)		
UART0	Rx Line Status (RLS)	6	0x0000 0040
	Transmit Holding Register Empty (THRE)		
	Rx Data Available (RDA)		
	Character Time-out Indicator (CTI)		
	End of Auto-Baud (ABEO)		
	Auto-Baud Time-Out (ABTO)		
UART1	Rx Line Status (RLS)	7	0x0000 0080
	Transmit Holding Register Empty (THRE)		
	Rx Data Available (RDA)		
	Character Time-out Indicator (CTI)		
	Modem Control Change		
	End of Auto-Baud (ABEO)		
	Auto-Baud Time-Out (ABTO)		
PWM1	Match 0 - 6 of PWM1 Capture 0-1 of PWM1	8	0x0000 0100
I ² C0	SI (state change)	9	0x0000 0200

Table 86. Connection of interrupt sources to the Vectored Interrupt Controller

Block	Flag(s)	_	Channel # and Mask
SPI, SSP0	SPI Interrupt Flag of SPI (SPIF) Mode Fault of SPI0 (MODF) Tx FIFO half empty of SSP0 Rx FIFO half full of SSP0 Rx Time-out of SSP0 Rx Overrun of SSP0	10	0x0000 0400
SSP 1	Tx FIFO half empty Rx FIFO half full Rx Timeout Rx Overrun	11	0x0000 0800
PLL	PLL Lock (PLOCK)	12	0x0000 1000
RTC	Counter Increment (RTCCIF) Alarm (RTCALF) Subsecond Int (RTCSSF)	13	0x0000 2000
System	External Interrupt 0 (EINT0)	14	0x0000 4000
Control (External	External Interrupt 1 (EINT1)	15	0x0000 8000
Interrupts)	External Interrupt 2 (EINT2)	16	0x0001 0000
	External Interrupt 3 (EINT3). Note: EINT3 channel is shared with GPIO interrupts	17	0x0002 0000
ADC0	A/D Converter 0 end of conversion	18	0x0004 0000
I ² C1	SI (state change)	19	0x0008 0000
BOD	Brown Out detect	20	0x0010 0000
Ethernet[1]	WakeupInt, SoftInt, TxDoneInt, TxFinishedInt, TxErrorInt, TxUnderrunInt, RxDoneInt, RxFinishedInt, RxErrorInt, RxOverrunInt.	21	0x0020 0000
USB[2]	USB_INT_REQ_LP, USB_INT_REQ_HP, USB_INT_REQ_DMA	22	0x0040 0000
CAN[2]	CAN Common, CAN 0 Tx, CAN 0 Rx, CAN 1 Tx, CAN 1 Rx	23	0x0080 0000
SD/ MMC interface[3]	RxDataAvlbl, TxDataAvlbl, RxFifoEmpty, TxFifoEmpty, RxFifoFull, TxFifoFull, RxFifoHalfFull, TxFifoHalfEmpty, RxActive, TxActive, CmdActive, DataBlockEnd, StartBitErr, DataEnd, CmdSent, CmdRespEnd, RxOverrun, TxUnderrun, DataTimeOut, CmdTimeOut, DataCrcFail, CmdCrcFail	24	0x0100 0000
GP DMA	IntStatus of DMA channel 0, IntStatus of DMA channel 1	25	0x0200 0000
Timer 2	Match 0-3	26	0x0400 0000
Timer 3	Capture 0-1 Match 0-3 Capture 0-1	27	0x0800 0000

Table 86. Connection of interrupt sources to the Vectored Interrupt Controller

Block	Flag(s)	_	Channel # and Mask
UART 2	Rx Line Status (RLS)	28	0x1000 0000
	Transmit Holding Register Empty (THRE)		
	Rx Data Available (RDA)		
	Character Time-out Indicator (CTI)		
	End of Auto-Baud (ABEO)		
	Auto-Baud Time-Out (ABTO)		
UART 3	Rx Line Status (RLS)	29	0x2000 0000
	Transmit Holding Register Empty (THRE)		
	Rx Data Available (RDA)		
	Character Time-out Indicator (CTI)		
	End of Auto-Baud (ABEO)		
	Auto-Baud Time-Out (ABTO)		
I ² C2	SI (state change)	30	0x4000 0000
I ² S	irq_rx	31	0x8000 0000
	irq_tx		


^[1] Not on LPC2361.

Table 87. Interrupt sources bit allocation table

Bit	31	30	29	28	27	26	25	24
Symbol	I2S	I2C2	UART3	UART2	TIMER3	TIMER2	GPDMA	SD/MMC
Bit	23	22	21	20	19	18	17	16
Symbol	CAN1&2	USB	Ethernet	BOD	I2C1	AD0	EINT3	EINT2
Bit	15	14	13	12	11	10	9	8
Symbol	EINT1	EINT0	RTC	PLL	SSP1	SPI/SSP0	I2C0	PWM1
Bit	7	6	5	4	3	2	1	0
Symbol	UART1	UART0	TIMER1	TIMER0	ARMCore1	ARMCore0	-	WDT

^[2] LPC2361/62/64/66/68, LPC2378, LPC2387, and LPC2388

^[3] LPC2367/68, LPC2377/78, LPC2387, LPC2388

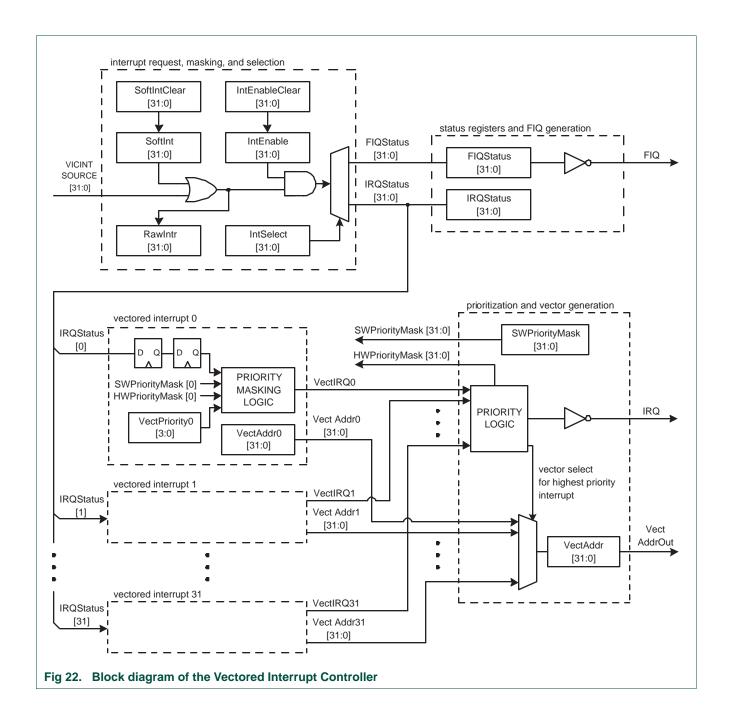

UM10211

Chapter 7: LPC23XX Memory Acceleration Module (MAM)

Rev. 4.1 — 5 September 2012

User manual

7.1 Introduction

The MAM block in the LPC23XX maximizes the performance of the ARM processor when it is running code in Flash memory using a single Flash bank.

7.2 Operation

Simply put, the Memory Accelerator Module (MAM) attempts to have the next ARM instruction that will be needed in its latches in time to prevent CPU fetch stalls. The LPC2300 uses one bank of Flash memory, compared to the two banks used on predecessor devices. It includes three 128 bit buffers called the Prefetch buffer, the Branch Trail Buffer and the data buffer. When an Instruction Fetch is not satisfied by either the Prefetch or Branch Trail buffer, nor has a prefetch been initiated for that line, the ARM is stalled while a fetch is initiated for the 128 bit line. If a prefetch has been initiated but not yet completed, the ARM is stalled for a shorter time. Unless aborted by a data access, a prefetch is initiated as soon as the Flash has completed the previous access. The prefetched line is latched by the Flash module, but the MAM does not capture the line in its prefetch buffer until the ARM core presents the address from which the prefetch has been made. If the core presents a different address from the one from which the prefetch has been made, the prefetched line is discarded.

The prefetch and Branch Trail buffers each include four 32 bit ARM instructions or eight 16 bit Thumb instructions. During sequential code execution, typically the prefetch buffer contains the current instruction and the entire Flash line that contains it.

The MAM uses the LPROT[0] line to differentiate between instruction and data accesses. Code and data accesses use separate 128 bit buffers. 3 of every 4 sequential 32 bit code or data accesses "hit" in the buffer without requiring a Flash access (7 of 8 sequential 16 bit accesses, 15 of every 16 sequential byte accesses). The fourth (eighth, 16th) sequential data access must access Flash, aborting any prefetch in progress. When a Flash data access is concluded, any prefetch that had been in progress is re-initiated.

Timing of Flash read operations is programmable and is described later in this section.

In this manner, there is no code fetch penalty for sequential instruction execution when the CPU clock period is greater than or equal to one fourth of the Flash access time. The average amount of time spent doing program branches is relatively small (less than 25%) and may be minimized in ARM (rather than Thumb) code through the use of the conditional execution feature present in all ARM instructions. This conditional execution may often be used to avoid small forward branches that would otherwise be necessary.

Branches and other program flow changes cause a break in the sequential flow of instruction fetches described above. The Branch Trail buffer captures the line to which such a non-sequential break occurs. If the same branch is taken again, the next instruction is taken from the Branch Trail buffer. When a branch outside the contents of the prefetch and Branch Trail buffer is taken, a stall of several clocks is needed to load the Branch Trail buffer. Subsequently, there will typically be no further instruction fetch delays until a new and different branch occurs.

Chapter 7: LPC23XX Memory Acceleration Module (MAM)

If an attempt is made to write directly to the Flash memory, without using the normal Flash programming interface, the MAM generates a data abort.

7.3 Memory Acceleration Module blocks

The Memory Accelerator Module is divided into several functional blocks:

- A Flash Address Latch and an incrementor function to form prefetch addresses
- A 128 bit prefetch buffer and an associated Address latch and comparator
- A 128 bit Branch Trail buffer and an associated Address latch and comparator
- A 128 bit Data buffer and an associated Address latch and comparator
- Control logic
- Wait logic


<u>Figure 23</u> shows a simplified block diagram of the Memory Accelerator Module data paths.

In the following descriptions, the term "fetch" applies to an explicit Flash read request from the ARM. "Pre-fetch" is used to denote a Flash read of instructions beyond the current processor fetch address.

7.3.1 Flash memory bank

There is one bank of Flash memory with the LPC2300 MAM.

Flash programming operations are not controlled by the MAM, but are handled as a separate function. A "boot block" sector contains Flash programming algorithms that may be called as part of the application program, and a loader that may be run to allow serial programming of the Flash memory.

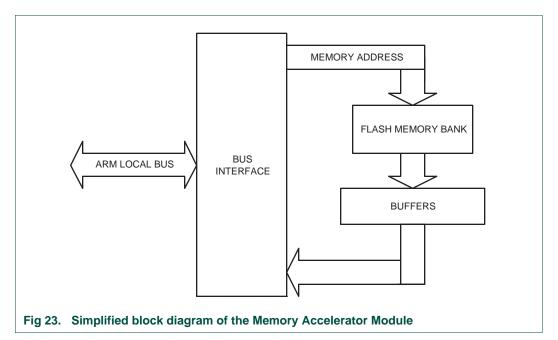

Chapter 7: LPC23XX Memory Acceleration Module (MAM)

7.3.2 Instruction latches and data latches

Code and Data accesses are treated separately by the Memory Accelerator Module. There is a 128 bit Latch, a 15 bit Address Latch, and a 15 bit comparator associated with each buffer (prefetch, branch trail, and data). Each 128 bit latch holds 4 words (4 ARM instructions, or 8 Thumb instructions).

Also associated with each buffer are 32 4:1 Multiplexers that select the requested word from the 128 bit line.

7.3.3 Flash programming Issues

Since the Flash memory does not allow accesses during programming and erase operations, it is necessary for the MAM to force the CPU to wait if a memory access to a Flash address is requested while the Flash module is busy. (This is accomplished by asserting the ARM7TDMI-S local bus signal CLKEN.) Under some conditions, this delay could result in a Watchdog time-out. The user will need to be aware of this possibility and take steps to insure that an unwanted Watchdog reset does not cause a system failure while programming or erasing the Flash memory.

In order to preclude the possibility of stale data being read from the Flash memory, the LPC2300 MAM holding latches are automatically invalidated at the beginning of any Flash programming or erase operation. Any subsequent read from a Flash address will cause a new fetch to be initiated after the Flash operation has completed.

7.4 Memory Accelerator Module Operating modes

Three modes of operation are defined for the MAM, trading off performance for ease of predictability:

Mode 0: MAM off. All memory requests result in a Flash read operation (see note 2 below). There are no instruction prefetches.

Mode 1: MAM partially enabled. Sequential instruction accesses are fulfilled from the holding latches if the data is present. Instruction prefetch is enabled. Non-sequential instruction accesses initiate Flash read operations (see <u>Table note 2</u>). This means that all branches cause memory fetches. All data operations cause a Flash read because buffered data access timing is hard to predict and is very situation dependent.

Mode 2: MAM fully enabled. Any memory request (code or data) for a value that is contained in one of the corresponding holding latches is fulfilled from the latch. Instruction prefetch is enabled. Flash read operations are initiated for instruction prefetch and code or data values not available in the corresponding holding latches.

Table 88. MAM responses to program accesses of various types

Program Memory Request Type	equest Type MAM Mode		
	0	1	2
Sequential access, data in latches	Initiate Fetch[2]	Use Latched Data ^[1]	Use Latched Data ^[1]

Chapter 7: LPC23XX Memory Acceleration Module (MAM)

Table 88. MAM responses to program accesses of various types

Program Memory Request Type	MAM Mode				
	0	1	2		
Sequential access, data not in latches	Initiate Fetch	Initiate Fetch[1]	Initiate Fetch[1]		
Non-sequential access, data in latches	Initiate Fetch[2]	Initiate Fetch ^{[1][2]}	Use Latched Data[1]		
Non-sequential access, data not in latches	Initiate Fetch	Initiate Fetch[1]	Initiate Fetch[1]		

^[1] Instruction prefetch is enabled in modes 1 and 2.

Table 89. MAM responses to data and DMA accesses of various types

Data Memory Request Type	MAM Mode				
	0	1	2		
Sequential access, data in latches	Initiate Fetch[1]	Initiate Fetch[1]	Use Latched Data		
Sequential access, data not in latches	Initiate Fetch	Initiate Fetch	Initiate Fetch		
Non-sequential access, data in latches	Initiate Fetch[1]	Initiate Fetch[1]	Use Latched Data		
Non-sequential access, data not in latches	Initiate Fetch	Initiate Fetch	Initiate Fetch		

^[1] The MAM actually uses latched data if it is available, but mimics the timing of a Flash read operation. This saves power while resulting in the same execution timing. The MAM can truly be turned off by setting the fetch timing value in MAMTIM to one clock.

7.5 MAM configuration

After reset the MAM defaults to the disabled state. Software can turn memory access acceleration on or off at any time. This allows most of an application to be run at the highest possible performance, while certain functions can be run at a somewhat slower but more predictable rate if more precise timing is required.

7.6 Register description

The MAM is controlled by the registers shown in <u>Table 90</u>. More detailed descriptions follow. Writes to any unused bits are ignored. A read of any unused bits will return a logic zero.

^[2] The MAM actually uses latched data if it is available, but mimics the timing of a Flash read operation. This saves power while resulting in the same execution timing. The MAM can truly be turned off by setting the fetch timing value in MAMTIM to one clock.

Chapter 7: LPC23XX Memory Acceleration Module (MAM)

Table 90. Summary of Memory Acceleration Module registers

Name	Description	Access	Reset value ^[1]	Address
MAMCR	Memory Accelerator Module Control Register. Determines the MAM functional mode, that is, to what extent the MAM performance enhancements are enabled. See <u>Table 91</u> .	R/W	0x0	0xE01F C000
MAMTIM	Memory Accelerator Module Timing control. Determines the number of clocks used for Flash memory fetches (1 to 7 processor clocks).	R/W	0x07	0xE01F C004

^[1] Reset Value reflects the data stored in used bits only. It does not include reserved bits content.

7.7 MAM Control Register (MAMCR - 0xE01F C000)

Two configuration bits select the three MAM operating modes, as shown in <u>Table 91</u>.

Following any reset, MAM functions are disabled. Software can turn memory access acceleration on or off at any time allowing most of an application to be run at the highest possible performance, while certain functions can be run at a somewhat slower but more predictable rate if more precise timing is required.

Changing the MAM operating mode causes the MAM to invalidate all of the holding latches, resulting in new reads of Flash information as required. This guarantees synchronization of the MAM to CPU operation.

Table 91. MAM Control Register (MAMCR - address 0xE01F C000) bit description

Bit	Symbol	Value	Description	Reset value
1:0	MAM_mode		These bits determine the operating mode of the MAM.	0
	_control	00	MAM functions disabled	
		01	MAM functions partially enabled	
		10	MAM functions fully enabled	
		11	Reserved. Not to be used in the application.	
7:2	-	-	Unused, always 0.	0

7.8 MAM Timing Register (MAMTIM - 0xE01F C004)


The MAM Timing register determines how many CCLK cycles are used to access the Flash memory. This allows tuning MAM timing to match the processor operating frequency. Flash access times from 1 clock to 7 clocks are possible. Single clock Flash accesses would essentially remove the MAM from timing calculations. In this case the MAM mode may be selected to optimize power usage.

Chapter 7: LPC23XX Memory Acceleration Module (MAM)

Table 92. MAM Timing register (MAMTIM - address 0xE01F C004) bit description

Bit	Symbol	Value	Description	Reset value
2:0 MAM_fetch_		These bits set the duration of MAM fetch operations.	07	
	cycle_timing	000	0 - Reserved	
		001	1 - MAM fetch cycles are 1 processor clock (CCLK) in duration	
		010	2 - MAM fetch cycles are 2 CCLKs in duration	
		011	3 - MAM fetch cycles are 3 CCLKs in duration	
		100	4 - MAM fetch cycles are 4 CCLKs in duration	
		101	5 - MAM fetch cycles are 5 CCLKs in duration	
		110	6 - MAM fetch cycles are 6 CCLKs in duration	
		111	7 - MAM fetch cycles are 7 CCLKs in duration	
		as liste	ng: These bits set the duration of MAM Flash fetch operations and here. Improper setting of this value may result in incorrect on of the device.	
7:3	-	-	Unused, always 0	0

Chapter 7: LPC23XX Memory Acceleration Module (MAM)

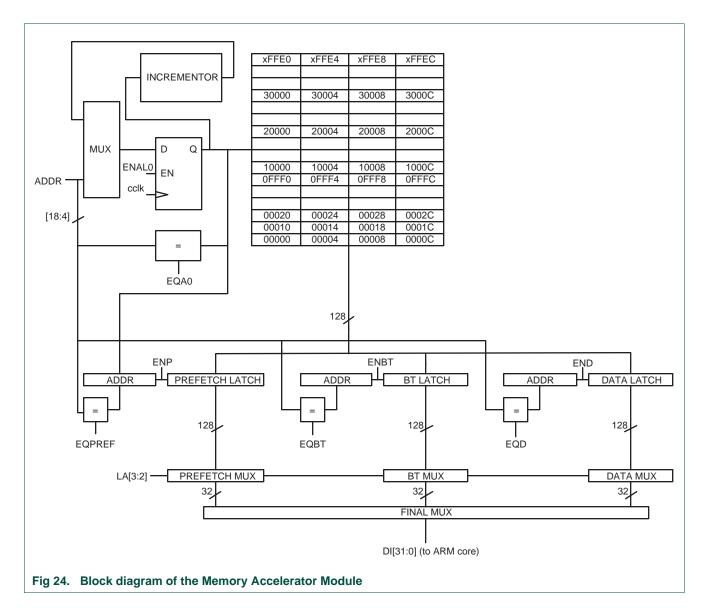

7.9 MAM usage notes

When changing MAM timing, the MAM must first be turned off by writing a zero to MAMCR. A new value may then be written to MAMTIM. Finally, the MAM may be turned on again by writing a value (1 or 2) corresponding to the desired operating mode to MAMCR.

For a system clock slower than 20 MHz, MAMTIM can be 001. For a system clock between 20 MHz and 40 MHz, flash access time is suggested to be 2 CCLKs, while in systems with a system clock faster than 40 MHz, 3 CCLKs are proposed. For system clocks of 60 MHz and above, 4CCLK's are needed.

Chapter 7: LPC23XX Memory Acceleration Module (MAM)

Table 93. Suggestions for MAM timing selection

system clock	Number of MAM fetch cycles in MAMTIM (see <u>Table 92</u>)
< 20 MHz	1 CCLK
20 MHz to 40 MHz	2 CCLK
40 MHz to 60 MHz	3 CCLK
> 60 MHz	4 CCLK

UM10211

Chapter 8: LPC23XX Pin configuration Rev. 4.1 — 5 September 2012

User manual

8.1 Overview

Table 94. LPC23xx pinning overview

Part	Package	Pin configuration
LPC2361/62	LQFP: Figure 25	Table 95
LPC2364/65/66/67/68	LQFP: Figure 26	Table 97
	TFBGA: Figure 27	Table 96, Table 97
LPC2377/78	LQFP: Figure 28	Table 98
LPC2387	LQFP: Figure 28	Table 99
LPC2388	LQFP: Figure 30	Table 100

8.2 LPC2361/62 100-pin packages

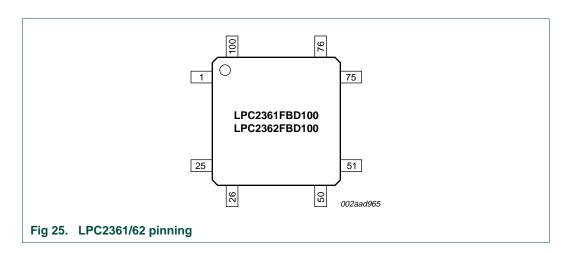


Table 95. LPC2361/62 pin description

Symbol	Pin	Туре	Description		
P0[0] to P0[31]		I/O	Port 0: Port 0 is a 32-bit I/O port with individual direction of The operation of port 0 pins depends upon the pin function connect block. Pins 12, 13, 14, and 31 of this port are not a	selected via the pin	
P0[0]/RD1/TXD3/ 46[1]	46 <mark>[1]</mark>	I/O	P0[0] — General purpose digital input/output pin.		
SDA1		1	RD1 — CAN1 receiver input.		
				0	TXD3 — Transmitter output for UART3.
		I/O	SDA1 — I ² C1 data input/output (this is not an open-drain p	oin).	
P0[1]/TD1/RXD3/ 47[47 <mark>[1]</mark>	I/O	P0[1] — General purpose digital input/output pin.		
SCL1		0	TD1 — CAN1 transmitter output.		
		1	RXD3 — Receiver input for UART3.		
		I/O	SCL1 — I ² C1 clock input/output (this is not an open-drain	pin).	
P0[2]/TXD0 98[1]		I/O	P0[2] — General purpose digital input/output pin.		
		0	TXD0 — Transmitter output for UART0.		
UM10211			All information provided in this document is subject to legal disclaimers.	© NXP B.V. 2012. All rights reserved	

Chapter 8: LPC23XX Pin configuration

Table 95. LPC2361/62 pin description ...continued

Symbol	Pin	Type	Description
P0[3]/RXD0	99 <mark>[1]</mark>	I/O	P0[3] — General purpose digital input/output pin.
		I	RXD0 — Receiver input for UART0.
P0[4]/I2SRX_CLK/	81 <mark>년</mark>	I/O	P0[4] — General purpose digital input/output pin.
RD2/CAP2[0]		I/O	I2SRX_CLK — Receive Clock. It is driven by the master and received by the slave. Corresponds to the signal SCK in the <i>PS-bus specification</i> .
		I	RD2 — CAN2 receiver input.
		I	CAP2[0] — Capture input for Timer 2, channel 0.
P0[5]/I2SRX_WS/	80 <mark>[1]</mark>	I/O	P0[5] — General purpose digital input/output pin.
TD2/CAP2[1]		I/O	I2SRX_WS — Receive Word Select. It is driven by the master and received by the slave. Corresponds to the signal WS in the <i>PS-bus specification</i> .
		0	TD2 — CAN2 transmitter output.
		I	CAP2[1] — Capture input for Timer 2, channel 1.
P0[6]/I2SRX_SDA/	79 <mark>[1]</mark>	I/O	P0[6] — General purpose digital input/output pin.
SSEL1/MAT2[0]		I/O	I2SRX_SDA — Receive data. It is driven by the transmitter and read by the receiver. Corresponds to the signal SD in the PS -bus specification.
		I/O	SSEL1 — Slave Select for SSP1.
		0	MAT2[0] — Match output for Timer 2, channel 0.
–	78 <mark>[1]</mark>	I/O	P0[7] — General purpose digital input/output pin.
SCK1/MAT2[1]		I/O	I2STX_CLK — Transmit Clock. It is driven by the master and received by the slave. Corresponds to the signal SCK in the ℓ^2 S-bus specification.
		I/O	SCK1 — Serial Clock for SSP1.
		0	MAT2[1] — Match output for Timer 2, channel 1.
P0[8]/I2STX_WS/	77 <u>[1]</u>	I/O	P0[8] — General purpose digital input/output pin.
MISO1/MAT2[2]		I/O	I2STX_WS — Transmit Word Select. It is driven by the master and received by the slave. Corresponds to the signal WS in the <i>PS-bus specification</i> .
		I/O	MISO1 — Master In Slave Out for SSP1.
		0	MAT2[2] — Match output for Timer 2, channel 2.
P0[9]/I2STX_SDA/	76 <mark>11</mark>	I/O	P0[9] — General purpose digital input/output pin.
MOSI1/MAT2[3]		I/O	I2STX_SDA — Transmit data. It is driven by the transmitter and read by the receiver. Corresponds to the signal SD in the PS -bus specification.
		I/O	MOSI1 — Master Out Slave In for SSP1.
		0	MAT2[3] — Match output for Timer 2, channel 3.
P0[10]/TXD2/	48 <mark>[1]</mark>	I/O	P0[10] — General purpose digital input/output pin.
SDA2/MAT3[0]		0	TXD2 — Transmitter output for UART2.
		I/O	SDA2 — I ² C2 data input/output (this is not an open-drain pin).
		0	MAT3[0] — Match output for Timer 3, channel 0.
P0[11]/RXD2/	49 <mark>[1]</mark>	I/O	P0[11] — General purpose digital input/output pin.
SCL2/MAT3[1]		I	RXD2 — Receiver input for UART2.
		I/O	SCL2 — I ² C2 clock input/output (this is not an open-drain pin).
		0	MAT3[1] — Match output for Timer 3, channel 1.

Chapter 8: LPC23XX Pin configuration

Table 95. LPC2361/62 pin description ...continued

Symbol	Pin	Type	Description
P0[15]/TXD1/ SCK0/SCK	62 <mark>1</mark>]	I/O	P0[15] — General purpose digital input/output pin.
		0	TXD1 — Transmitter output for UART1.
		I/O	SCK0 — Serial clock for SSP0.
		I/O	SCK — Serial clock for SPI.
P0[16]/RXD1/ SSEL0/SSEL	63 ^[1]	I/O	P0[16] — General purpose digital input/output pin.
		I	RXD1 — Receiver input for UART1.
		I/O	SSEL0 — Slave Select for SSP0.
		I/O	SSEL — Slave Select for SPI.
P0[17]/CTS1/	61[1]	I/O	P0[17] — General purpose digital input/output pin.
MISO0/MISO		I	CTS1 — Clear to Send input for UART1.
		I/O	MISO0 — Master In Slave Out for SSP0.
		I/O	MISO — Master In Slave Out for SPI.
P0[18]/DCD1/	60 <mark>[1]</mark>	I/O	P0[18] — General purpose digital input/output pin.
MOSI0/MOSI		I	DCD1 — Data Carrier Detect input for UART1.
		I/O	MOSI0 — Master Out Slave In for SSP0.
		I/O	MOSI — Master Out Slave In for SPI.
P0[19]/DSR1/	59 <mark>[1]</mark>	I/O	P0[19] — General purpose digital input/output pin.
MCICLK/SDA1		I	DSR1 — Data Set Ready input for UART1.
		0	MCICLK — Clock output line for SD/MMC interface.
		I/O	SDA1 — I ² C1 data input/output (this is not an open-drain pin).
P0[20]/DTR1/	58 <mark>11</mark>	I/O	P0[20] — General purpose digital input/output pin.
MCICMD/SCL1		0	DTR1 — Data Terminal Ready output for UART1.
		I	MCICMD — Command line for SD/MMC interface.
		I/O	SCL1 — I ² C1 clock input/output (this is not an open-drain pin).
P0[21]/RI1/ MCIPWR/RD1	57 <mark>1</mark> 1	I/O	P0[21] — General purpose digital input/output pin.
		I	RI1 — Ring Indicator input for UART1.
		0	MCIPWR — Power Supply Enable for external SD/MMC power supply.
		I	RD1 — CAN1 receiver input.
P0[22]/RTS1/ MCIDAT0/TD1	56 <mark>11</mark>	I/O	P0[22] — General purpose digital input/output pin.
		0	RTS1 — Request to Send output for UART1.
		0	MCIDAT0 — Data line for SD/MMC interface.
		0	TD1 — CAN1 transmitter output.
P0[23]/AD0[0]/ I2SRX_CLK/ CAP3[0]	9[2]	I/O	P0[23] — General purpose digital input/output pin.
		I	AD0[0] — A/D converter 0, input 0.
		I/O	I2SRX_CLK — Receive Clock. It is driven by the master and received by the slave. Corresponds to the signal SCK in the PS -bus specification.
		I	CAP3[0] — Capture input for Timer 3, channel 0.

Chapter 8: LPC23XX Pin configuration

Table 95. LPC2361/62 pin description ...continued

Symbol	Pin	Туре	Description
P0[24]/AD0[1]/ I2SRX_WS/ CAP3[1]	8[2]	I/O	P0[24] — General purpose digital input/output pin.
		I/O	AD0[1] — A/D converter 0, input 1.
		I/O	I2SRX_WS — Receive Word Select. It is driven by the master and received by the slave. Corresponds to the signal WS in the <i>PS-bus specification</i> .
			CAP3[1] — Capture input for Timer 3, channel 1.
P0[25]/AD0[2]/ I2SRX_SDA/ TXD3	7[2]	I/O	P0[25] — General purpose digital input/output pin.
		"" 	AD0[2] — A/D converter 0, input 2.
		I/O	I2SRX_SDA — Receive data. It is driven by the transmitter and read by the receiver. Corresponds to the signal SD in the <i>PS-bus specification</i> .
		0	TXD3 — Transmitter output for UART3.
P0[26]/AD0[3]/	6[3]	I/O	P0[26] — General purpose digital input/output pin.
AOUT/RXD3		I	AD0[3] — A/D converter 0, input 3.
		0	AOUT — D/A converter output.
		I	RXD3 — Receiver input for UART3.
P0[27]/SDA0	25 [4]	I/O	P0[27] — General purpose digital input/output pin.
		I/O	SDA0 — I ² C0 data input/output. Open-drain output (for I ² C-bus compliance).
P0[28]/SCL0	24[4]	I/O	P0[28] — General purpose digital input/output pin.
		I/O	SCL0 — I ² C0 clock input/output. Open-drain output (for I ² C-bus compliance).
P0[29]/USB_D+	29[5]	I/O	P0[29] — General purpose digital input/output pin.
–		I/O	USB_D+ — USB bidirectional D+ line.
P0[30]/USB_D-	30[5]	I/O	P0[30] — General purpose digital input/output pin.
		I/O	USB_D- — USB bidirectional D- line.
P1[0] to P1[31]		I/O	Port 1: Port 1 is a 32-bit I/O port with individual direction controls for each bit. The operation of port 1 pins depends upon the pin function selected via the pin connect block. Pins 2, 3, 5, 6, 7, 11, 12, and 13 of this port are not available.
P1[0]/ENET_TXD0	95 <u>[1]</u>	I/O	P1[0] — General purpose digital input/output pin.
		0	ENET_TXD0 — Ethernet transmit data 0.
P1[1]/ENET_TXD1	94[1]	I/O	P1[1] — General purpose digital input/output pin.
		0	ENET_TXD1 — Ethernet transmit data 1.
P1[4]/ENET_TX_EN	93[1]	I/O	P1[4] — General purpose digital input/output pin.
		0	ENET_TX_EN — Ethernet transmit data enable.
P1[8]/ENET_CRS	92[1]	I/O	P1[8] — General purpose digital input/output pin.
		I	ENET_CRS — Ethernet carrier sense.
P1[9]/ENET_RXD0	91[1]	I/O	P1[9] — General purpose digital input/output pin.
		I	ENET_RXD0 — Ethernet receive data.
P1[10]/ENET_RXD1	90[1]	I/O	P1[10] — General purpose digital input/output pin.
		I	ENET_RXD1 — Ethernet receive data.
P1[14]/ ENET_RX_ER	89[1]	I/O	P1[14] — General purpose digital input/output pin.
		I	ENET_RX_ER — Ethernet receive error.
P1[15]/ ENET_REF_CLK	88 <mark>[1]</mark>	I/O	P1[15] — General purpose digital input/output pin.
		I	ENET_REF_CLK/ENET_RX_CLK — Ethernet receiver clock.

Table 95. LPC2361/62 pin description ...continued

Symbol	Pin	Type	Description
P1[16]/ENET_MDC	87 <mark>[1]</mark>	I/O	P1[16] — General purpose digital input/output pin.
		0	ENET_MDC — Ethernet MIIM clock.
P1[17]/ENET_MDIO	86 <mark>[1]</mark>	I/O	P1[17] — General purpose digital input/output pin.
		I/O	ENET_MDIO — Ethernet MIIM data input and output.
P1[18]/	32[1]	I/O	P1[18] — General purpose digital input/output pin.
USB_UP_LED/ PWM1[1]/ CAP1[0]		0	USB_UP_LED — USB GoodLink LED indicator. It is LOW when device is configured (non-control endpoints enabled). It is HIGH when the device is not configured or during global suspend.
		0	PWM1[1] — Pulse Width Modulator 1, channel 1 output.
		I	CAP1[0] — Capture input for Timer 1, channel 0.
P1[19]/	33[1]	I/O	P1[19] — General purpose digital input/output pin.
USB_TX_E1/ USB_PPWR1/		0	USB_TX_E1 — Transmit Enable signal for USB port 1 (OTG transceiver).
CAP1[1]		0	USB_PPWR1 — Port Power enable signal for USB port 1.
		I	CAP1[1] — Capture input for Timer 1, channel 1.
P1[20]/	34[1]	I/O	P1[20] — General purpose digital input/output pin.
USB_TX_DP1/ PWM1[2]/SCK0		0	USB_TX_DP1 — D+ transmit data for USB port 1 (OTG transceiver).
[2],001.0		0	PWM1[2] — Pulse Width Modulator 1, channel 2 output.
		I/O	SCK0 — Serial clock for SSP0.
P1[21]/	35[1]	I/O	P1[21] — General purpose digital input/output pin.
JSB_TX_DM1/ PWM1[3]/SSEL0		0	USB_TX_DM1 — D- transmit data for USB port 1 (OTG transceiver).
WWWT[5]/OOLLO		0	PWM1[3] — Pulse Width Modulator 1, channel 3 output.
		I/O	SSEL0 — Slave Select for SSP0.
P1[22]/	36 <mark>[1]</mark>	I/O	P1[22] — General purpose digital input/output pin.
USB_RCV1/ USB_PWRD1/		I	USB_RCV1 — Differential receive data for USB port 1 (OTG transceiver).
MAT1[0]		I	USB_PWRD1 — Power Status for USB port 1 (host power switch).
		0	MAT1[0] — Match output for Timer 1, channel 0.
P1[23]/	37 <mark>[1]</mark>	I/O	P1[23] — General purpose digital input/output pin.
JSB_RX_DP1/ PWM1[4]/MISO0		I	USB_RX_DP1 — D+ receive data for USB port 1 (OTG transceiver).
VVIVI1[+j/IVIIOO0		0	PWM1[4] — Pulse Width Modulator 1, channel 4 output.
		I/O	MISO0 — Master In Slave Out for SSP0.
P1[24]/	38 <mark>[1]</mark>	I/O	P1[24] — General purpose digital input/output pin.
JSB_RX_DM1/		I	USB_RX_DM1 — D- receive data for USB port 1 (OTG transceiver).
PWM1[5]/MOSI0		0	PWM1[5] — Pulse Width Modulator 1, channel 5 output.
		I/O	MOSI0 — Master Out Slave in for SSP0.
P1[25]/	39 <mark>[1]</mark>	I/O	P1[25] — General purpose digital input/output pin.
USB_LS1/		0	USB_LS1 — Low-speed status for USB port 1 (OTG transceiver).
USB_HSTEN1/ MAT1[1]		0	USB_HSTEN1 — Host Enabled status for USB port 1.
		0	MAT1[1] — Match output for Timer 1, channel 1.

Table 95. LPC2361/62 pin description ...continued

Symbol	Pin	Type	Description
P1[26]/	40[1]	I/O	P1[26] — General purpose digital input/output pin.
USB_SSPND1/ PWM1[6]/		0	USB_SSPND1 — USB port 1 bus suspend status (OTG transceiver).
CAP0[0]		0	PWM1[6] — Pulse Width Modulator 1, channel 6 output.
		I	CAP0[0] — Capture input for Timer 0, channel 0.
P1[27]/	43 <mark>[1]</mark>	I/O	P1[27] — General purpose digital input/output pin.
USB_INT1/ USB_OVRCR1/		I	USB_INT1 — USB port 1 OTG transceiver interrupt (OTG transceiver).
CAP0[1]		I	USB_OVRCR1 — USB port 1 Over-Current status.
		I	CAP0[1] — Capture input for Timer 0, channel 1.
P1[28]/USB_SCL1/	44[1]	I/O	P1[28] — General purpose digital input/output pin.
PCAP1[0]/MAT0[0]		I/O	USB_SCL1 — USB port 1 I ² C-bus serial clock (OTG transceiver).
		I	PCAP1[0] — Capture input for PWM1, channel 0.
		0	MAT0[0] — Match output for Timer 0, channel 0.
P1[29]/USB_SDA1/	45 <mark>[1]</mark>	I/O	P1[29] — General purpose digital input/output pin.
PCAP1[1]/MAT0[1]		I/O	USB_SDA1 — USB port 1 I ² C-bus serial data (OTG transceiver).
		1	PCAP1[1] — Capture input for PWM1, channel 1.
		0	MAT0[1] — Match output for Timer 0, channel 0.
P1[30]/V _{BUS} /AD0[4]	212	I/O	P1[30] — General purpose digital input/output pin.
		1	V _{BUS} — Monitors the presence of USB bus power.
			Note: This signal must be HIGH for USB reset to occur.
		l	AD0[4] — A/D converter 0, input 4.
P1[31]/SCK1/AD0[5]	20[2]	I/O	P1[31] — General purpose digital input/output pin.
		I/O	SCK1 — Serial Clock for SSP1.
		l	AD0[5] — A/D converter 0, input 5.
P2[0] to P2[31]		I/O	Port 2: Port 2 is a 32-bit I/O port with individual direction controls for each bit. The operation of port 2 pins depends upon the pin function selected via the pin connect block. Pins 14 through 31 of this port are not available.
P2[0]/PWM1[1]/	75 <mark>1</mark> 1	I/O	P2[0] — General purpose digital input/output pin.
TXD1/TRACECLK		0	PWM1[1] — Pulse Width Modulator 1, channel 1 output.
		0	TXD1 — Transmitter output for UART1.
		0	TRACECLK — Trace Clock.
P2[1]/PWM1[2]/	74 <mark>[1]</mark>	I/O	P2[1] — General purpose digital input/output pin.
RXD1/PIPESTAT0		0	PWM1[2] — Pulse Width Modulator 1, channel 2 output.
		I	RXD1 — Receiver input for UART1.
		0	PIPESTAT0 — Pipeline Status, bit 0.
P2[2]/PWM1[3]/	73 <mark>[1]</mark>	I/O	P2[2] — General purpose digital input/output pin.
CTS1/PIPESTAT1		0	PWM1[3] — Pulse Width Modulator 1, channel 3 output.
		I	CTS1 — Clear to Send input for UART1.
		0	PIPESTAT1 — Pipeline Status, bit 1.

Table 95. LPC2361/62 pin description ...continued

Symbol	Pin	Type	Description
P2[3]/PWM1[4]/	70 <mark>11</mark>	I/O	P2[3] — General purpose digital input/output pin.
DCD1/PIPESTAT2		0	PWM1[4] — Pulse Width Modulator 1, channel 4 output.
		I	DCD1 — Data Carrier Detect input for UART1.
		0	PIPESTAT2 — Pipeline Status, bit 2.
P2[4]/PWM1[5]/	69 <mark>[1]</mark>	I/O	P2[4] — General purpose digital input/output pin.
DSR1/TRACESYNC		0	PWM1[5] — Pulse Width Modulator 1, channel 5 output.
		I	DSR1 — Data Set Ready input for UART1.
		0	TRACESYNC — Trace Synchronization.
P2[5]/PWM1[6]/	68 <mark>[1]</mark>	I/O	P2[5] — General purpose digital input/output pin.
OTR1/TRACEPKT0		0	PWM1[6] — Pulse Width Modulator 1, channel 6 output.
		0	DTR1 — Data Terminal Ready output for UART1.
		0	TRACEPKT0 — Trace Packet, bit 0.
P2[6]/PCAP1[0]/RI1/	67 <mark>1</mark> 1	I/O	P2[6] — General purpose digital input/output pin.
TRACEPKT1		I	PCAP1[0] — Capture input for PWM1, channel 0.
		I	RI1 — Ring Indicator input for UART1.
		0	TRACEPKT1 — Trace Packet, bit 1.
P2[7]/RD2/	66 <mark>11</mark>	I/O	P2[7] — General purpose digital input/output pin.
RTS1/TRACEPKT2		I	RD2 — CAN2 receiver input.
		0	RTS1 — Request to Send output for UART1.
		0	TRACEPKT2 — Trace Packet, bit 2.
P2[8]/TD2/	65 <mark>[1]</mark>	I/O	P2[8] — General purpose digital input/output pin.
TXD2/TRACEPKT3		0	TD2 — CAN2 transmitter output.
		0	TXD2 — Transmitter output for UART2.
		0	TRACEPKT3 — Trace Packet, bit 3.
P2[9]/	64 <mark>11</mark>	I/O	P2[9] — General purpose digital input/output pin.
JSB_CONNECT/ RXD2/EXTIN0		0	USB_CONNECT — Signal used to switch an external 1.5 kΩ resistor under software control. Used with the SoftConnect USB feature.
		I	RXD2 — Receiver input for UART2.
		I	EXTIN0 — External Trigger Input.
P2[10]/EINT0	53 <mark>[6]</mark>	I/O	P2[10] — General purpose digital input/output pin.
			Note: LOW on this pin while RESET is LOW forces on-chip bootloader to take over control of the part after a reset.
		I	EINT0 — External interrupt 0 input.
P2[11]/EINT1/	52 <mark>6</mark>]	I/O	P2[11] — General purpose digital input/output pin.
MCIDAT1/ 2STX_CLK		I	EINT1 — External interrupt 1 input.
201A_ULN		0	MCIDAT1 — Data line for SD/MMC interface.
		I/O	I2STX_CLK — Transmit Clock. It is driven by the master and received by the slave. Corresponds to the signal SCK in the ℓ S-bus specification.

Table 95. LPC2361/62 pin description ...continued

Symbol	Pin	Type	Description
P2[12]/EINT2/	51 <mark>6</mark>	I/O	P2[12] — General purpose digital input/output pin.
MCIDAT2/ I2STX_WS		I	EINT2 — External interrupt 2 input.
1231 X_W3		0	MCIDAT2 — Data line for SD/MMC interface.
		I/O	I2STX_WS — Transmit Word Select. It is driven by the master and received by the slave. Corresponds to the signal WS in the ℓ S-bus specification.
P2[13]/EINT3/	50 <mark>6]</mark>	I/O	P2[13] — General purpose digital input/output pin.
MCIDAT3/ I2STX_SDA		I	EINT3 — External interrupt 3 input.
IZOTA_ODA		0	MCIDAT3 — Data line for SD/MMC interface.
		I/O	I2STX_SDA — Transmit data. It is driven by the transmitter and read by the receiver. Corresponds to the signal SD in the ℓ S-bus specification.
P3[0] to P3[31]		I/O	Port 3: Port 3 is a 32-bit I/O port with individual direction controls for each bit. The operation of port 3 pins depends upon the pin function selected via the pin connect block. Pins 0 through 24, and 27 through 31 of this port are not available.
P3[25]/MAT0[0]/	27 <mark>1</mark> 1	I/O	P3[25] — General purpose digital input/output pin.
PWM1[2]		0	MAT0[0] — Match output for Timer 0, channel 0.
		0	PWM1[2] — Pulse Width Modulator 1, output 2.
P3[26]/MAT0[1]/	26 <mark>1</mark> 1	I/O	P3[26] — General purpose digital input/output pin.
PWM1[3]		Ο	MAT0[1] — Match output for Timer 0, channel 1.
		0	PWM1[3] — Pulse Width Modulator 1, output 3.
P4[0] to P4[31]		I/O	Port 4: Port 4 is a 32-bit I/O port with individual direction controls for each bit. The operation of port 4 pins depends upon the pin function selected via the pin connect block. Pins 0 through 27, 30, and 31 of this port are not available.
P4[28]/MAT2[0]/	82 <mark>[1]</mark>	I/O	P4[28] — General purpose digital input/output pin.
TXD3		0	MAT2[0] — Match output for Timer 2, channel 0.
		0	TXD3 — Transmitter output for UART3.
P4[29]/MAT2[1]/	85 <mark>[1]</mark>	I/O	P4[29] — General purpose digital input/output pin.
RXD3		0	MAT2[1] — Match output for Timer 2, channel 1.
		I	RXD3 — Receiver input for UART3.
TDO	1[1]	0	TDO — Test Data Out for JTAG interface.
TDI	2[1]	I	TDI — Test Data In for JTAG interface.
TMS	3[1]	I	TMS — Test Mode Select for JTAG interface.
TRST	4 <u>[1]</u>	ı	TRST — Test Reset for JTAG interface.
TCK	5 <u>[1]</u>	I	$\bf TCK$ — Test Clock for JTAG interface. This clock must be slower than $^{1}?_{6}$ of the CPU clock (CCLK) for the JTAG interface to operate.
RTCK	100[1]	I/O	RTCK — JTAG interface control signal.
			Note: LOW on this pin while RESET is LOW enables ETM pins (P2[9:0]) to operate as trace port after reset.
RSTOUT	14	0	RSTOUT — This is a 3.3 V pin. LOW on this pin indicates UM10211 being in Reset state.
			Note: This pin is available in LPC2387FBD100 devices only (LQFP100 package).


Table 95. LPC2361/62 pin description ... continued


Symbol	Pin	Type	Description
RESET	17 <mark>7</mark>	I	External reset input: A LOW on this pin resets the device, causing I/O ports and peripherals to take on their default states, and processor execution to begin at address 0. TTL with hysteresis, 5 V tolerant.
XTAL1	22 <mark>[8]</mark>	1	Input to the oscillator circuit and internal clock generator circuits.
XTAL2	23[8]	0	Output from the oscillator amplifier.
RTCX1	16 ^[8]	I	Input to the RTC oscillator circuit.
RTCX2	18 <mark>8</mark>	0	Output from the RTC oscillator circuit.
V _{SS}	15, 31, 41, 55, 72, 97, 83 ⁹	I	ground: 0 V reference.
V _{SSA}	11 ^[10]	I	analog ground: 0 V reference. This should nominally be the same voltage as V_{SS} , but should be isolated to minimize noise and error.
V _{DD(3V3)}	28, 54, 71, 96 <u>[11]</u>	I	3.3 V supply voltage: This is the power supply voltage for the I/O ports.
V _{DD(DCDC)(3V3)}	13, 42, 84 <u>[12]</u>	I	3.3 V DC-to-DC converter supply voltage: This is the supply voltage for the on-chip DC-to-DC converter only.
V_{DDA}	10 ^[13]	I	analog 3.3 V pad supply voltage: This should be nominally the same voltage as $V_{DD(3V3)}$ but should be isolated to minimize noise and error. This voltage is used to power the ADC and DAC.
VREF	12 <u>[13]</u>	I	ADC reference: This should be nominally the same voltage as $V_{DD(3V3)}$ but should be isolated to minimize noise and error. Level on this pin is used as a reference for ADC and DAC.
VBAT	19 ^[13]	I	RTC pin power supply: 3.3 V on this pin supplies the power to the RTC peripheral.

- [1] 5 V tolerant pad providing digital I/O functions with TTL levels and hysteresis.
- [2] 5 V tolerant pad providing digital I/O functions (with TTL levels and hysteresis) and analog input. When configured as a DAC input, digital section of the pad is disabled.
- [3] 5 V tolerant pad providing digital I/O with TTL levels and hysteresis and analog output function. When configured as the DAC output, digital section of the pad is disabled.
- [4] Open-drain 5 V tolerant digital I/O pad, compatible with I²C-bus 400 kHz specification. This pad requires an external pull-up to provide output functionality. When power is switched off, this pin connected to the I²C-bus is floating and does not disturb the I²C lines. Open-drain configuration applies to all functions on this pin.
- [5] Pad provides digital I/O and USB functions. It is designed in accordance with the *USB specification, revision 2.0* (Full-speed and Low-speed mode only).
- [6] 5 V tolerant pad with 10 ns glitch filter providing digital I/O functions with TTL levels and hysteresis
- [7] 5 V tolerant pad with 20 ns glitch filter providing digital I/O function with TTL levels and hysteresis
- [8] Pad provides special analog functionality.
- [9] Pad provides special analog functionality.
- [10] Pad provides special analog functionality.
- [11] Pad provides special analog functionality.
- [12] Pad provides special analog functionality.
- [13] Pad provides special analog functionality.

Chapter 8: LPC23XX Pin configuration

8.3 LPC2364/65/66/67/68 100-pin packages

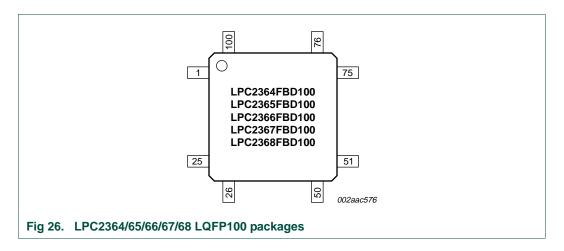

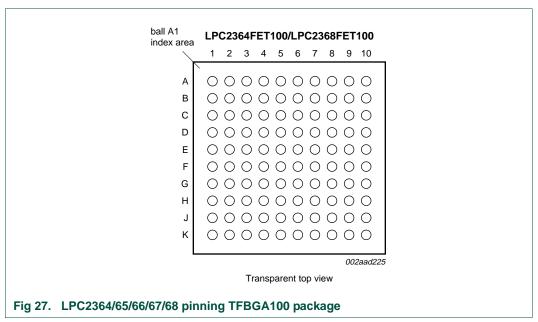

Pin descriptions for LPC2364/65/66/67/68 and a brief explanation of their corresponding functions are shown in the following tables.

Table 96. LPC2364/68 pin allocation table

Pin	Symbol	Pin	Symbol	Pin	Symbol	Pin	Symbol
Rov	w A	•					
1	TDO	2	P0[3]/RXD0	3	V _{DD(3V3)}	4	P1[4]/ENET_TX_EN
5	P1[10]/ENET_RXD1	6	P1[16]/ENET_MDC	7	V _{DD(DCDC)(3V3)}	8	P0[4]/I2SRX_CLK/ RD2/CAP2[0]
9	P0[7]/I2STX_CLK/ SCK1/MAT2[1]	10	P0[9]/I2STX_SDA/ MOSI1/MAT2[3]	11	-	12	-
Rov	w B						
1	TMS	2	RTCK	3	V _{SS}	4	P1[1]/ENET_TXD1

Table 96. LPC2364/68 pin allocation table ...continued

Pin	Symbol	Pin	Symbol	Pin	Symbol	Pin	Symbol
5	P1[9]/ENET_RXD0	6	P1[17]/ ENET_MDIO	7	V_{SS}	8	P0[6]/I2SRX_SDA/ SSEL1/MAT2[0]
9	P2[0]/PWM1[1]/ TXD1/TRACECLK	10	P2[1]/PWM1[2]/ RXD1/PIPESTAT0	11	-	12	-
Rov	v C						
1	TCK	2	TRST	3	TDI	4	P0[2]/TXD0
5	P1[8]/ENET_CRS	6	P1[15]/ ENET_REF_CLK	7	P4[28]/MAT2[0]/ TXD3	8	P0[8]/I2STX_WS/ MISO1/MAT2[2]
9	V _{SS}	10	V _{DD(3V3)}	11	-	12	-
Rov	v D						
1	P0[24]/AD0[1]/ I2SRX_WS/CAP3[1]	2	P0[25]/AD0[2]/ I2SRX_SDA/TXD3	3	P0[26]/AD0[3]/ AOUT/RXD3	4	DBGEN
5	P1[0]/ENET_TXD0	6	P1[14]/ENET_RX_ER	7	P0[5]/I2SRX_WS/ TD2/CAP2[1]	8	P2[2]/PWM1[3]/ CTS1/PIPESTAT1
9	P2[4]/PWM1[5]/ DSR1/TRACESYNC	10	P2[5]/PWM1[6]/ DTR1/TRACEPKT0	11	-	12	-
Rov	v E						
1	V _{SSA}	2	V_{DDA}	3	VREF	4	V _{DD(DCDC)(3V3)}
5	P0[23]/AD0[0]/ I2SRX_CLK/CAP3[0]	6	P4[29]/MAT2[1]/ RXD3	7	P2[3]/PWM1[4]/ DCD1/PIPESTAT2	8	P2[6]/PCAP1[0]/RI1/ TRACEPKT1
9	P2[7]/RD2/ RTS1/TRACEPKT2	10	P2[8]/TD2/ TXD2/TRACEPKT3	11	-	12	-
Rov	v F					!	
1	V _{SS}	2	RTCX1	3	RESET	4	P1[31]/SCK1/ AD0[5]
5	P1[21]/PWM1[3]/ SSEL0	6	P0[18]/DCD1/ MOSI0/MOSI	7	P2[9]/USB_CONNECT/ RXD2/EXTIN0	8	P0[16]/RXD1/ SSEL0/SSEL
9	P0[17]/CTS1/ MISO0/MISO	10	P0[15]/TXD1/ SCK0/SCK	11	-	12	-
Rov	v G						
1	RTCX2	2	VBAT	3	XTAL2	4	P0[30]/USB_D-
5	P1[25]/MAT1[1]	6	P1[29]/PCAP1[1]/ MAT0[1]	7	V _{SS}	8	P0[21]/RI1/ MCIPWR/RD1
9	P0[20]/DTR1/ MCICMD/SCL1	10	P0[19]/DSR1/ MCICLK/SDA1	11	-	12	-
Rov	v H						
1	P1[30]/V _{BUS} / AD0[4]	2	XTAL1	3	P3[25]/MAT0[0]/ PWM1[2]	4	P1[18]/USB_UP_LED/ PWM1[1]/CAP1[0]
5	P1[24]/PWM1[5]/ MOSI0	6	V _{DD(DCDC)(3V3)}	7	P0[10]/TXD2/ SDA2/MAT3[0]	8	P2[11]/EINT1/ MCIDAT1/I2STX_CLK
9	V _{DD(3V3)}	10	P0[22]/RTS1/ MCIDAT0/TD1	11	-	12	-
Rov	v J	1		1		1	
1	P0[28]/SCL0	2	P0[27]/SDA0	3	P0[29]/USB_D+	4	P1[19]/CAP1[1]

Table 96. LPC2364/68 pin allocation table ...continued

Pin	Symbol	Pin	Symbol	Pin	Symbol	Pin	Symbol
5	P1[22]/MAT1[0]	6	V_{SS}	7	P1[28]/PCAP1[0]/ MAT0[0]	8	P0[1]/TD1/RXD3/SCL1
9	P2[13]/ EINT3 / MCIDAT3/I2STX_SDA	10	P2[10]/EINT0	11	-	12	-
Row	νK	•					
1	P3[26]/MAT0[1]/ PWM1[3]	2	$V_{DD(3V3)}$	3	V _{SS}	4	P1[20]/PWM1[2]/ SCK0
5	P1[23]/PWM1[4]/ MISO0	6	P1[26]/PWM1[6]/ CAP0[0]	7	P1[27]/CAP0[1]	8	P0[0]/RD1/TXD3/SDA1
9	P0[11]/RXD2/ SCL2/MAT3[1]	10	P2[12]/EINT2/ MCIDAT2/I2STX_WS	11	-	12	-

Table 97. LPC2364/65/66/67/68 pin description

Symbol	Pin	Ball	Type	Description									
P0[0] to P0[31]			I/O	Port 0: Port 0 is a 32-bit I/O port with individual direction controls for each bit. The operation of port 0 pins depends upon the pin function selected via the pin connect block. Pins 12, 13, 14, and 31 of this port are not available									
P0[0]/RD1/TXD3/	46[1]	K8[1]	I/O	P0[0] — General purpose digital input/output pin.									
SDA1			I	RD1 — CAN1 receiver input. (LPC2364/66/68 only)									
			0	TXD3 — Transmitter output for UART3.									
			I/O	SDA1 — I ² C1 data input/output (this is not an open-drain pin).									
P0[1]/TD1/RXD3/	47 <u>[1]</u>	J8 <u>[1]</u>	I/O	P0[1] — General purpose digital input/output pin.									
SCL1			0	TD1 — CAN1 transmitter output. (LPC2364/66/68 only)									
			I	RXD3 — Receiver input for UART3.									
			I/O	SCL1 — I ² C1 clock input/output (this is not an open-drain pin).									
P0[2]/TXD0	98 <mark>[1]</mark>	C4[1]	I/O	P0[2] — General purpose digital input/output pin.									
			0	TXD0 — Transmitter output for UART0.									
P0[3]/RXD0]/RXD0 99[1] A2[1]	A2[1]	I/O	P0[3] — General purpose digital input/output pin.									
			I	RXD0 — Receiver input for UART0.									
P0[4]/	81 <mark>[1]</mark>	[1] A8[1]	I/O	P0[4] — General purpose digital input/output pin.									
I2SRX_CLK/ RD2/CAP2[0]												I/O	I2SRX_CLK — Receive Clock. It is driven by the master and received by the slave. Corresponds to the signal SCK in the <i>l</i> ² <i>S-bus specification</i> .
			I	CAP2[0] — Capture input for Timer 2, channel 0.									
P0[5]/	80 <mark>[1]</mark>	D7[1]	I/O	P0[5] — General purpose digital input/output pin.									
I2SRX_WS/ TD2/CAP2[1]			I/O	I2SRX_WS — Receive Word Select. It is driven by the master and received by the slave. Corresponds to the signal WS in the <i>PS-bus specification</i> .									
			0	TD2 — CAN2 transmitter output. (LPC2364/66/68 only)									
			I	CAP2[1] — Capture input for Timer 2, channel 1.									
P0[6]/	79 <mark>[1]</mark>	B8[1]	I/O	P0[6] — General purpose digital input/output pin.									
I2SRX_SDA/ SSEL1/MAT2[0]			I/O	I2SRX_SDA — Receive data. It is driven by the transmitter and read by the receiver. Corresponds to the signal SD in the <i>l</i> ² <i>S-bus specification</i> .									
			I/O	SSEL1 — Slave Select for SSP1.									
			0	MAT2[0] — Match output for Timer 2, channel 0.									
IMAOOAA				@NVDDV 0000 All sights account in which to be a final final significance.									

Table 97. LPC2364/65/66/67/68 pin description ...continued

Symbol	Pin	Ball	Type	Description
P0[7]/	78 <mark>[1]</mark>	A9[1]	I/O	P0[7] — General purpose digital input/output pin.
I2STX_CLK/ SCK1/MAT2[1]			I/O	I2STX_CLK — Transmit Clock. It is driven by the master and received by the slave. Corresponds to the signal SCK in the <i>I</i> ² S-bus specification.
			I/O	SCK1 — Serial Clock for SSP1.
			0	MAT2[1] — Match output for Timer 2, channel 1.
P0[8]/	77 <u>[1]</u>	C8[1]	I/O	P0[8] — General purpose digital input/output pin.
I2STX_WS/ MISO1/MAT2[2]			I/O	I2STX_WS — Transmit Word Select. It is driven by the master and received by the slave. Corresponds to the signal WS in the PS -bus specification.
			I/O	MISO1 — Master In Slave Out for SSP1.
			0	MAT2[2] — Match output for Timer 2, channel 2.
P0[9]/	76 ^[1]	A10 ¹¹	I/O	P0[9] — General purpose digital input/output pin.
I2STX_SDA/ MOSI1/MAT2[3]			I/O	I2STX_SDA — Transmit data. It is driven by the transmitter and read by the receiver. Corresponds to the signal SD in the <i>I</i> ² S-bus specification.
			I/O	MOSI1 — Master Out Slave In for SSP1.
			0	MAT2[3] — Match output for Timer 2, channel 3.
P0[10]/TXD2/	48 <u>[1]</u>	H7[<u>1]</u>	I/O	P0[10] — General purpose digital input/output pin.
SDA2/MAT3[0]			0	TXD2 — Transmitter output for UART2.
			I/O	SDA2 — I ² C2 data input/output (this is not an open-drain pin).
			0	MAT3[0] — Match output for Timer 3, channel 0.
P0[11]/RXD2/	49 <u>[1]</u>	K9[1]	I/O	P0[11] — General purpose digital input/output pin.
SCL2/MAT3[1]				RXD2 — Receiver input for UART2.
			I/O	SCL2 — I ² C2 clock input/output (this is not an open-drain pin).
			0	MAT3[1] — Match output for Timer 3, channel 1.
P0[15]/TXD1/	62 <mark>[1]</mark>	F10[1]	I/O	P0[15] — General purpose digital input/output pin.
SCK0/SCK			0	TXD1 — Transmitter output for UART1.
			I/O	SCK0 — Serial clock for SSP0.
			I/O	SCK — Serial clock for SPI.
P0[16]/RXD1/	63 <mark>[1]</mark>	F8[1]	I/O	P0[16] — General purpose digital input/output pin.
SSEL0/SSEL			I	RXD1 — Receiver input for UART1.
			I/O	SSEL0 — Slave Select for SSP0.
			I/O	SSEL — Slave Select for SPI.
P0[17]/CTS1/	61 <u>[1]</u>	F9[1]	I/O	P0[17] — General purpose digital input/output pin.
MISO0/MISO			I	CTS1 — Clear to Send input for UART1.
			I/O	MISO0 — Master In Slave Out for SSP0.
			I/O	MISO — Master In Slave Out for SPI.
P0[18]/DCD1/	60 <u>[1]</u>	F6[1]	I/O	P0[18] — General purpose digital input/output pin.
MOSI0/MOSI			I	DCD1 — Data Carrier Detect input for UART1.
			I/O	MOSI0 — Master Out Slave In for SSP0.
			I/O	MOSI — Master Out Slave In for SPI.

Table 97. LPC2364/65/66/67/68 pin description ...continued

Symbol	Pin	Ball	Туре	Description						
P0[19]/DSR1/	59 <mark>[1]</mark>	G10[1]	I/O	P0[19] — General purpose digital input/output pin.						
MCICLK/SDA1			I	DSR1 — Data Set Ready input for UART1.						
			0	MCICLK — Clock output line for SD/MMC interface. (LPC2367/68 only)						
			I/O	SDA1 — I ² C1 data input/output (this is not an open-drain pin).						
P0[20]/DTR1/	58 <mark>[1]</mark>	G9[1]	I/O	P0[20] — General purpose digital input/output pin.						
MCICMD/SCL1			0	DTR1 — Data Terminal Ready output for UART1.						
			I	MCICMD — Command line for SD/MMC interface. (LPC2367/68 only)						
			I/O	SCL1 — I ² C1 clock input/output (this is not an open-drain pin).						
P0[21]/RI1/	57 <mark>∐</mark>	G8 <mark>[1]</mark>	I/O	P0[21] — General purpose digital input/output pin.						
MCIPWR/RD1	MCIPWR/RD1		I	RI1 — Ring Indicator input for UART1.						
			0	MCIPWR — Power Supply Enable for external SD/MMC power supply. (LPC2367/68 only)						
			I	RD1 — CAN1 receiver input. (LPC2364/66/68 only)						
P0[22]/RTS1/	56 <mark>[1]</mark>	H10[1]	I/O	P0[22] — General purpose digital input/output pin.						
MCIDAT0/TD1			0	RTS1 — Request to Send output for UART1.						
			0	MCIDAT0 — Data line for SD/MMC interface. (LPC2367/68 only)						
			0	TD1 — CAN1 transmitter output. (LPC2364/66/68 only)						
P0[23]/AD0[0]/	9 <u>[2]</u>	E5[2]	I/O	P0[23] — General purpose digital input/output pin.						
I2SRX_CLK/			I	AD0[0] — A/D converter 0, input 0.						
CAP3[0]			I/O	I2SRX_CLK — Receive Clock. It is driven by the master and received by the slave. Corresponds to the signal SCK in the <i>I</i> ² <i>S-bus specification</i> .						
			I	CAP3[0] — Capture input for Timer 3, channel 0.						
P0[24]/AD0[1]/	8[2]	D1 ²	D1 ²	I/O	P0[24] — General purpose digital input/output pin.					
I2SRX_WS/ CAP3[1]			I	AD0[1] — A/D converter 0, input 1.						
OAI S[I]			I/O	I2SRX_WS — Receive Word Select. It is driven by the master and received by the slave. Corresponds to the signal WS in the ℓ S-bus specification.						
			I	CAP3[1] — Capture input for Timer 3, channel 1.						
P0[25]/AD0[2]/	7[2]	D2[2]	I/O	P0[25] — General purpose digital input/output pin.						
I2SRX_SDA/ TXD3			I	AD0[2] — A/D converter 0, input 2.						
TADS										I2SRX_SDA — Receive data. It is driven by the transmitter and read by the receiver. Corresponds to the signal SD in the <i>I</i> ² S-bus specification.
			0	TXD3 — Transmitter output for UART3.						
P0[26]/AD0[3]/	6 <mark>[3]</mark>	D3[3]	I/O	P0[26] — General purpose digital input/output pin.						
AOUT/RXD3			I	AD0[3] — A/D converter 0, input 3.						
			0	AOUT — D/A converter output.						
			I	RXD3 — Receiver input for UART3.						
P0[27]/SDA0	25 <mark>[4]</mark>	J2[4]	I/O	P0[27] — General purpose digital input/output pin. Output is open-drain.						
			I/O	SDA0 — I ² C0 data input/output. Open-drain output (for I ² C-bus compliance).						
P0[28]/SCL0	24 <mark>4</mark>	J1[4]	I/O	P0[28] — General purpose digital input/output pin. Output is open-drain.						
			I/O	SCL0 — I ² C0 clock input/output. Open-drain output (for I ² C-bus compliance).						

Table 97. LPC2364/65/66/67/68 pin description ...continued

Symbol	Pin	Ball	Type	Description							
P0[29]/USB_D+	29 <mark>[5]</mark>	J3 <mark>[5]</mark>	I/O	P0[29] — General purpose digital input/output pin.							
			I/O	USB_D+ — USB bidirectional D+ line. (LPC2364/66/68 only)							
P0[30]/USB_D-	30[5]	G4[5]	I/O	P0[30] — General purpose digital input/output pin.							
			I/O	USB_D- — USB bidirectional D- line. (LPC2364/66/68 only)							
P1[0] to P1[31]			I/O	Port 1: Port 1 is a 32-bit I/O port with individual direction controls for each bit. The operation of port 1 pins depends upon the pin function selected via the pin connect block. Pins 2, 3, 5, 6, 7, 11, 12, and 13 of this port are not available.							
P1[0]/	95 <mark>[1]</mark>	D5[1]	I/O	P1[0] — General purpose digital input/output pin.							
ENET_TXD0			0	ENET_TXD0 — Ethernet transmit data 0.							
P1[1]/	94[1]	B4[1]	I/O	P1[1] — General purpose digital input/output pin.							
ENET_TXD1			0	ENET_TXD1 — Ethernet transmit data 1.							
P1[4]/	93[1]	A4[1]	I/O	P1[4] — General purpose digital input/output pin.							
ENET_TX_EN			0	ENET_TX_EN — Ethernet transmit data enable.							
P1[8]/	92[1]	C5[1]	I/O	P1[8] — General purpose digital input/output pin.							
ENET_CRS			I	ENET_CRS — Ethernet carrier sense.							
P1[9]/	91 <mark>1</mark>	B5[1]	I/O	P1[9] — General purpose digital input/output pin.							
ENET_RXD0			I	ENET_RXD0 — Ethernet receive data.							
P1[10]/	90[1]	A5[1]	I/O	P1[10] — General purpose digital input/output pin.							
ENET_RXD1			I	ENET_RXD1 — Ethernet receive data.							
P1[14]/	89 <mark>[1]</mark>	D6[1]	I/O	P1[14] — General purpose digital input/output pin.							
ENET_RX_ER			I	ENET_RX_ER — Ethernet receive error.							
P1[15]/	88 <mark>[1]</mark>	C6[1]	I/O	P1[15] — General purpose digital input/output pin.							
ENET_REF_CLK			I	ENET_REF_CLK/ENET_RX_CLK — Ethernet receiver clock.							
P1[16]/	87 <mark>[1]</mark>	A6[1]	I/O	P1[16] — General purpose digital input/output pin.							
ENET_MDC			0	ENET_MDC — Ethernet MIIM clock.							
P1[17]/	86 <mark>[1]</mark>	B6[1]	I/O	P1[17] — General purpose digital input/output pin.							
ENET_MDIO			I/O	ENET_MDIO — Ethernet MIIM data input and output.							
P1[18]/	32[1]	H4[1]	I/O	P1[18] — General purpose digital input/output pin.							
USB_UP_LED/ PWM1[1]/ CAP1[0]										0	USB_UP_LED — USB GoodLink LED indicator. It is LOW when device is configured (non-control endpoints enabled). It is HIGH when the device is not configured or during global suspend. (LPC2364/66/68 only)
			0	PWM1[1] — Pulse Width Modulator 1, channel 1 output.							
			I	CAP1[0] — Capture input for Timer 1, channel 0.							
P1[19]/CAP1[1]	33[1]	J4[1]	I/O	P1[19] — General purpose digital input/output pin.							
			I	CAP1[1] — Capture input for Timer 1, channel 1.							
P1[20]/PWM1[2]/	34[1]	K4[1]	I/O	P1[20] — General purpose digital input/output pin.							
SCK0			0	PWM1[2] — Pulse Width Modulator 1, channel 2 output.							
			I/O	SCK0 — Serial clock for SSP0.							
P1[21]/PWM1[3]/	35 <mark>[1]</mark>	F5[1]	I/O	P1[21] — General purpose digital input/output pin.							
SSEL0			0	PWM1[3] — Pulse Width Modulator 1, channel 3 output.							
				·							

Table 97. LPC2364/65/66/67/68 pin description ...continued

Symbol	Pin	Ball	Type	Description
P1[22]/MAT1[0]	36 <mark>11</mark>	J5 <mark>[1]</mark>	I/O	P1[22] — General purpose digital input/output pin.
			0	MAT1[0] — Match output for Timer 1, channel 0.
P1[23]/PWM1[4]/	37 <mark>[1]</mark>	K5[1]	I/O	P1[23] — General purpose digital input/output pin.
MISO0			0	PWM1[4] — Pulse Width Modulator 1, channel 4 output.
			I/O	MISO0 — Master In Slave Out for SSP0.
P1[24]/PWM1[5]/	38[1]	H5[1]	I/O	P1[24] — General purpose digital input/output pin.
MOSI0			0	PWM1[5] — Pulse Width Modulator 1, channel 5 output.
			I/O	MOSI0 — Master Out Slave in for SSP0.
P1[25]/MAT1[1]	39 <mark>[1]</mark>	G5[1]	I/O	P1[25] — General purpose digital input/output pin.
			0	MAT1[1] — Match output for Timer 1, channel 1.
P1[26]/PWM1[6]/	40[1]	K6[1]	I/O	P1[26] — General purpose digital input/output pin.
CAP0[0]			0	PWM1[6] — Pulse Width Modulator 1, channel 6 output.
			I	CAP0[0] — Capture input for Timer 0, channel 0.
P1[27]/CAP0[1]	43 <mark>[1]</mark>	K7[1]	I/O	P1[27] — General purpose digital input/output pin.
			I	CAP0[1] — Capture input for Timer 0, channel 1.
P1[28]/	44[1]	[1] J7[1]	I/O	P1[28] — General purpose digital input/output pin.
PCAP1[0]/			I	PCAP1[0] — Capture input for PWM1, channel 0.
MAT0[0]			0	MAT0[0] — Match output for Timer 0, channel 0.
P1[29]/	45 <mark>[1]</mark>	5[1] G6[1]	I/O	P1[29] — General purpose digital input/output pin.
PCAP1[1]/ MAT0[1]			I	PCAP1[1] — Capture input for PWM1, channel 1.
WATO[1]			0	MAT0[1] — Match output for Timer 0, channel 0.
P1[30]/V _{BUS} /	21[2]	H1[2]	I/O	P1[30] — General purpose digital input/output pin.
AD0[4]			I	V _{BUS} — Monitors the presence of USB bus power. (LPC2364/66/68 only)
				Note: This signal must be HIGH for USB reset to occur.
			I	AD0[4] — A/D converter 0, input 4.
P1[31]/SCK1/	20[2]	F4[2]	I/O	P1[31] — General purpose digital input/output pin.
AD0[5]			I/O	SCK1 — Serial Clock for SSP1.
			I	AD0[5] — A/D converter 0, input 5.
P2[0] to P2[31]			I/O	Port 2: Port 2 is a 32-bit I/O port with individual direction controls for each bit. The operation of port 2 pins depends upon the pin function selected via the pin connect block. Pins 14 through 31 of this port are not available.
P2[0]/PWM1[1]/	75 <mark>[1]</mark>	B9[1]	I/O	P2[0] — General purpose digital input/output pin.
TXD1/ TRACECLK			0	PWM1[1] — Pulse Width Modulator 1, channel 1 output.
INACECLN			0	TXD1 — Transmitter output for UART1.
			0	TRACECLK — Trace Clock.
P2[1]/PWM1[2]/	74 <mark>[1]</mark>	B10[1]	I/O	P2[1] — General purpose digital input/output pin.
RXD1/			0	PWM1[2] — Pulse Width Modulator 1, channel 2 output.
PIPESTAT0			ı	RXD1 — Receiver input for UART1.
			0	PIPESTAT0 — Pipeline Status, bit 0.

Table 97. LPC2364/65/66/67/68 pin description ...continued

Symbol	Pin	Ball	Type	Description
P2[2]/PWM1[3]/	73 <mark>[1]</mark>	D8[1]	I/O	P2[2] — General purpose digital input/output pin.
CTS1/ PIPESTAT1			0	PWM1[3] — Pulse Width Modulator 1, channel 3 output.
			I	CTS1 — Clear to Send input for UART1.
			0	PIPESTAT1 — Pipeline Status, bit 1.
P2[3]/PWM1[4]/	70 <mark>1</mark>	E7[1]	I/O	P2[3] — General purpose digital input/output pin.
DCD1/ PIPESTAT2			0	PWM1[4] — Pulse Width Modulator 1, channel 4 output.
111 201/112			l	DCD1 — Data Carrier Detect input for UART1.
			0	PIPESTAT2 — Pipeline Status, bit 2.
P2[4]/PWM1[5]/	69 <mark>11</mark>	D9[1]	I/O	P2[4] — General purpose digital input/output pin.
DSR1/ TRACESYNC			0	PWM1[5] — Pulse Width Modulator 1, channel 5 output.
TRACESTING			I	DSR1 — Data Set Ready input for UART1.
			0	TRACESYNC — Trace Synchronization.
P2[5]/PWM1[6]/	68 <mark>[1]</mark>	D10[1]	I/O	P2[5] — General purpose digital input/output pin.
DTR1/ TRACEPKT0			0	PWM1[6] — Pulse Width Modulator 1, channel 6 output.
TRACETATO			0	DTR1 — Data Terminal Ready output for UART1.
			0	TRACEPKT0 — Trace Packet, bit 0.
P2[6]/PCAP1[0]/	67 <mark>11</mark>	E8[1]	I/O	P2[6] — General purpose digital input/output pin.
RI1/ TRACEPKT1			1	PCAP1[0] — Capture input for PWM1, channel 0.
TRACETRA			l	RI1 — Ring Indicator input for UART1.
			0	TRACEPKT1 — Trace Packet, bit 1.
P2[7]/RD2/	66 <mark>11</mark>	E9[1]	I/O	P2[7] — General purpose digital input/output pin.
RTS1/ TRACEPKT2			1	RD2 — CAN2 receiver input. (LPC2364/66/68 only)
THOROLITHIE			0	RTS1 — Request to Send output for UART1.
			0	TRACEPKT2 — Trace Packet, bit 2.
P2[8]/TD2/	65 <mark>11</mark>	E10[1]	I/O	P2[8] — General purpose digital input/output pin.
TXD2/ TRACEPKT3			0	TD2 — CAN2 transmitter output. (LPC2364/66/68 only)
THE COLUMN			0	TXD2 — Transmitter output for UART2.
			0	TRACEPKT3 — Trace Packet, bit 3.
P2[9]/	64 <mark>11</mark>	F7[1]	I/O	P2[9] — General purpose digital input/output pin.
USB_CONNECT/ RXD2/EXTIN0			0	USB_CONNECT — Signal used to switch an external 1.5 k Ω resistor under software control. Used with the SoftConnect USB feature. (LPC2364/66/68 only)
			I	RXD2 — Receiver input for UART2.
			I	EXTINO — External Trigger Input.
P2[10]/EINT0	53 <mark>6</mark>	J10 <mark>6</mark>	I/O	P2[10] — General purpose digital input/output pin.
				Note: LOW on this pin while RESET is LOW forces on-chip bootloader to take over control of the part after a reset.
			I	EINT0 — External interrupt 0 input.

Table 97. LPC2364/65/66/67/68 pin description ...continued

Symbol	Pin	Ball	Туре	Description
P2[11]/EINT1/	52 <mark>6</mark>	H8 <mark>6</mark>]	I/O	P2[11] — General purpose digital input/output pin.
MCIDAT1/			I	EINT1 — External interrupt 1 input.
I2STX_CLK			0	MCIDAT1 — Data line for SD/MMC interface. (LPC2367/68 only)
			I/O	I2STX_CLK — Transmit Clock. It is driven by the master and received by the slave. Corresponds to the signal SCK in the <i>I</i> ² <i>S-bus specification</i> .
P2[12]/EINT2/	51 <mark>6</mark>	K10 ⁶	I/O	P2[12] — General purpose digital input/output pin.
MCIDAT2/ I2STX_WS			I	EINT2 — External interrupt 2 input.
1231X_VV3			0	MCIDAT2 — Data line for SD/MMC interface. (LPC2367/68 only)
			I/O	I2STX_WS — Transmit Word Select. It is driven by the master and received by the slave. Corresponds to the signal WS in the <i>PS-bus</i> specification.
P2[13]/EINT3/	50 <mark>6</mark>	J9 <mark>[6]</mark>	I/O	P2[13] — General purpose digital input/output pin.
MCIDAT3/ I2STX_SDA			I	EINT3 — External interrupt 3 input.
1231 X_3DA			0	MCIDAT3 — Data line for SD/MMC interface. (LPC2367/68 only)
			I/O	I2STX_SDA — Transmit data. It is driven by the transmitter and read by the receiver. Corresponds to the signal SD in the <i>l</i> ² <i>S-bus specification</i> .
P3[0] to P3[31]			I/O	Port 3: Port 3 is a 32-bit I/O port with individual direction controls for each bit. The operation of port 3 pins depends upon the pin function selected via the pin connect block. Pins 0 through 24, and 27 through 31 of this port are not available.
P3[25]/MAT0[0]/	27[1]	1] H3[1]	I/O	P3[25] — General purpose digital input/output pin.
PWM1[2]			0	MAT0[0] — Match output for Timer 0, channel 0.
			0	PWM1[2] — Pulse Width Modulator 1, output 2.
P3[26]/MAT0[1]/	26 <mark>[1]</mark>	K1[1]	I/O	P3[26] — General purpose digital input/output pin.
PWM1[3]			0	MAT0[1] — Match output for Timer 0, channel 1.
			0	PWM1[3] — Pulse Width Modulator 1, output 3.
P4[0] to P4[31]			I/O	Port 4: Port 4 is a 32-bit I/O port with individual direction controls for each bit. The operation of port 4 pins depends upon the pin function selected via the pin connect block. Pins 0 through 27, 30, and 31 of this port are not available.
P4[28]/MAT2[0]/	82 <mark>[1]</mark>	C7[1]	I/O	P4[28] — General purpose digital input/output pin.
TXD3			0	MAT2[0] — Match output for Timer 2, channel 0.
			0	TXD3 — Transmitter output for UART3.
P4[29]/MAT2[1]/	85 <mark>[1]</mark>	E6[1]	I/O	P4[29] — General purpose digital input/output pin.
RXD3			0	MAT2[1] — Match output for Timer 2, channel 1.
			I	RXD3 — Receiver input for UART3.
DBGEN	-	D4[1]	I	DBGEN — JTAG interface control signal. Also used for boundary scanning.
				Note: This pin is available in LPC2364FET100 and LPC2368FET100 devices only (TFBGA package).
TDO	1[1]	A1[1]	0	TDO — Test Data out for JTAG interface.
TDI	2[1]	C3[1]		TDI — Test Data in for JTAG interface.
TMS	3[1]	B1 <mark>11</mark>		TMS — Test Mode Select for JTAG interface.
TRST	4 <u>[1]</u>	C2[1]	I	TRST — Test Reset for JTAG interface.

UM10211 **NXP Semiconductors**

Table 97. LPC2364/65/66/67/68 pin description ... continued

Symbol	Pin	Ball	Type	Description
TCK	5 <u>[1]</u>	C1[1]	I	$\bf TCK$ — Test Clock for JTAG interface. This clock must be slower than $^{1}?_{6}$ of the CPU clock (CCLK) for the JTAG interface to operate
RTCK	100 <u>[1]</u>	B2[1]	I/O	RTCK — JTAG interface control signal.
				Note: LOW on this pin while $\overline{\text{RESET}}$ is LOW enables ETM pins (P2[9:0]) to operate as trace port after reset.
RSTOUT	14	-	0	RSTOUT — This is a 3.3 V pin. LOW on this pin indicates LPC23xx being in Reset state.
				Note: This pin is available in LPC2364FBD100, LPC2365FBD100, LPC2366FBD100, LPC2367FBD100, and LPC2368FBD100 devices only (LQFP100 package).
RESET	17 <u>17</u>	F3 <u>[7]</u>	I	External reset input: A LOW on this pin resets the device, causing I/O ports and peripherals to take on their default states, and processor execution to begin at address 0. TTL with hysteresis, 5 V tolerant.
XTAL1	22[8]	H2[8]	I	Input to the oscillator circuit and internal clock generator circuits.
XTAL2	23[8]	G3[8]	0	Output from the oscillator amplifier.
RTCX1	16 ⁸	F2 ^[8]	I	Input to the RTC oscillator circuit.
RTCX2	18 <mark>8</mark>	G1 <mark>8</mark>	0	Output from the RTC oscillator circuit.
V _{SS}	15, 31, 41, 55, 72, 97, 83 ^[9]	B3, B7, C9, F1, G7, J6, K3 ⁹	I	ground: 0 V reference.
V _{SSA}	11 ^[10]	E1[10]	I	analog ground: 0 V reference. This should nominally be the same voltage as $V_{\rm SS}$, but should be isolated to minimize noise and error.
V _{DD(3V3)}	28, 54, 71, 96 ^[11]	A3, C10, H9, K2[11]	I	3.3 V supply voltage: This is the power supply voltage for the I/O ports.
V _{DD(DCDC)(3V3)}	13, 42, 84 <u>[12]</u>	A7, E4, H6 <mark>[12]</mark>	I	3.3 V DC-to-DC converter supply voltage: This is the supply voltage for the on-chip DC-to-DC converter only.
V_{DDA}	10 <u>^[13]</u>	E2[13]	I	analog 3.3 V pad supply voltage: This should be nominally the same voltage as $V_{\text{DD}(3V3)}$ but should be isolated to minimize noise and error. This voltage is used to power the ADC and DAC.
VREF	12 ^[13]	E3[13]	I	ADC reference: This should be nominally the same voltage as $V_{DD(3V3)}$ but should be isolated to minimize noise and error. Level on this pin is used as a reference for ADC and DAC.
VBAT	19 [13]	G2[13]	I	RTC pin power supply: 3.3 V on this pin supplies the power to the RTC peripheral.

^{[1] 5} V tolerant pad providing digital I/O functions with TTL levels and hysteresis.

- [6] 5 V tolerant pad with 10 ns glitch filter providing digital I/O functions with TTL levels and hysteresis.
- [7] 5 V tolerant pad with 20 ns glitch filter providing digital I/O function with TTL levels and hysteresis.

^{[2] 5} V tolerant pad providing digital I/O functions (with TTL levels and hysteresis) and analog input. When configured as a DAC input, digital section of the pad is disabled.

^{[3] 5} V tolerant pad providing digital I/O with TTL levels and hysteresis and analog output function. When configured as the DAC output, digital section of the pad is disabled.


^[4] Open-drain 5 V tolerant digital I/O pad, compatible with I²C-bus 400 kHz specification. This pad requires an external pull-up to provide output functionality. When power is switched off, this pin connected to the I²C-bus is floating and does not disturb the I²C lines. Open-drain configuration applies to all functions on this pin.

^[5] Pad provides digital I/O and USB functions (LPC2364/66/68 only). It is designed in accordance with the USB specification, revision 2.0 (Full-speed and Low-speed mode only).

- [8] Pad provides special analog functionality.
- [9] Pad provides special analog functionality.
- [10] Pad provides special analog functionality.
- [11] Pad provides special analog functionality.
- [12] Pad provides special analog functionality.
- [13] Pad provides special analog functionality.

Chapter 8: LPC23XX Pin configuration

8.4 LPC2377/78 144-pin package

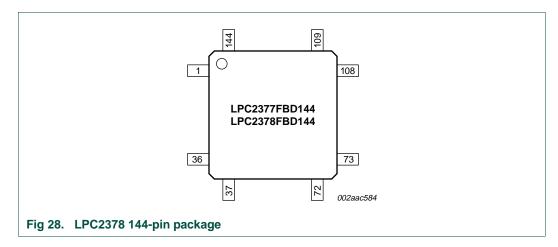

Pin descriptions for LPC2377/78 and a brief explanation of their corresponding functions are shown in the following table.

Table 98. LPC2377/78 pin description

Symbol	Pin	Type	Description
P0[0] to P0[31]		I/O	Port 0: Port 0 is a 32-bit I/O port with individual direction controls for each bit. The operation of port 0 pins depends upon the pin function selected via the pin connect block.
P0[0]/RD1/TXD/	66 <mark>11</mark>	I/O	P0[0] — General purpose digital input/output pin.
SDA1		I	RD1 — CAN1 receiver input. (LPC2378 only)
		0	TXD3 — Transmitter output for UART3.
		I/O	SDA1 — I ² C1 data input/output (this is not an open-drain pin).
P0[1]/TD1/RXD3/	67 <mark>11</mark>	I/O	P0[1] — General purpose digital input/output pin.
SCL1		0	TD1 — CAN1 transmitter output. (LPC2378 only)
		I	RXD3 — Receiver input for UART3.
		I/O	SCL1 — I ² C1 clock input/output (this is not an open-drain pin).
P0[2]/TXD0	141[1]	I/O	P0[2] — General purpose digital input/output pin.
		0	TXD0 — Transmitter output for UART0.
P0[3]/RXD0	142 <mark>1</mark>	I/O	P0[3] — General purpose digital input/output pin.
		I	RXD0 — Receiver input for UART0.
P0[4]/	116 <mark>11</mark>	I/O	P0[4] — General purpose digital input/output pin.
I2SRX_CLK/ RD2/CAP2[0]		I/O	I2SRX_CLK — Receive Clock. It is driven by the master and received by the slave. Corresponds to the signal SCK in the ℓ S-bus specification.
		I	RD2 — CAN2 receiver input. (LPC2378 only)
		I	CAP2[0] — Capture input for Timer 2, channel 0.
P0[5]/	115 <u>¹¹</u>	I/O	P0[5] — General purpose digital input/output pin.
I2SRX_WS/ TD2/CAP2[1]		I/O	I2SRX_WS — Receive Word Select. It is driven by the master and received by the slave. Corresponds to the signal WS in the ℓ S-bus specification.
		0	TD2 — CAN2 transmitter output. (LPC2378 only)
		I	CAP2[1] — Capture input for Timer 2, channel 1.

User manual

Table 98. LPC2377/78 pin description ... continued

P0[6]/ I2SRX_SDA/ SSEL1/MAT2[0] P0[7]/ I2STX_CLK/ SCK1/MAT2[1]	113 ^[1]	I/O I/O I/O O I/O	 P0[6] — General purpose digital input/output pin. I2SRX_SDA — Receive data. It is driven by the transmitter and read by the receiver. Corresponds to the signal SD in the <i>PS-bus specification</i>. SSEL1 — Slave Select for SSP1. MAT2[0] — Match output for Timer 2, channel 0.
SSEL1/MAT2[0] P0[7]/ I2STX_CLK/	112[1]	I/O O	receiver. Corresponds to the signal SD in the <i>PS-bus specification</i> . SSEL1 — Slave Select for SSP1.
I2STX_CLK/	112[1]	0	
I2STX_CLK/	112[1]		MAT2[0] — Match output for Timer 2, channel 0
I2STX_CLK/	112[1]	I/O	MATZ[0] — Match output for Timer 2, charmer 0.
			P0[7] — General purpose digital input/output pin.
		I/O	I2STX_CLK — Transmit Clock. It is driven by the master and received by the slave. Corresponds to the signal SCK in the <i>PS-bus specification</i> .
		I/O	SCK1 — Serial Clock for SSP1.
		0	MAT2[1] — Match output for Timer 2, channel 1.
	111[1]	I/O	P0[8] — General purpose digital input/output pin.
I2STX_WS/ MISO1/MAT2[2]		I/O	I2STX_WS — Transmit Word Select. It is driven by the master and received by the slave. Corresponds to the signal WS in the <i>l</i> ² S-bus specification.
		I/O	MISO1 — Master In Slave Out for SSP1.
		0	MAT2[2] — Match output for Timer 2, channel 2.
	109[1]	I/O	P0[9] — General purpose digital input/output pin.
I2STX_SDA/ MOSI1/MAT2[3]		I/O	I2STX_SDA — Transmit data. It is driven by the transmitter and read by the receiver. Corresponds to the signal SD in the <i>PS-bus specification</i> .
		I/O	MOSI1 — Master Out Slave In for SSP1.
		0	MAT2[3] — Match output for Timer 2, channel 3.
	69 <u>[1]</u>	I/O	P0[10] — General purpose digital input/output pin.
SDA2/MAT3 [0]		0	TXD2 — Transmitter output for UART2.
		I/O	SDA2 — I ² C2 data input/output (this is not an open-drain pin).
		0	MAT3[0] — Match output for Timer 3, channel 0.
	70 <u>[1]</u>	I/O	P0[11] — General purpose digital input/output pin.
SCL2/MAT3[1]		I	RXD2 — Receiver input for UART2.
		I/O	SCL2 — I ² C2 clock input/output (this is not an open-drain pin).
		0	MAT3[1] — Match output for Timer 3, channel 1.
	29[2]	I/O	P0[12] — General purpose digital input/output pin.
AD0[6]		I/O	MISO1 — Master In Slave Out for SSP1.
		l	AD0[6] — A/D converter 0, input 6.
	32[2]	I/O	P0[13] — General purpose digital input/output pin.
USB_UP_LED2/ MOSI1/AD0[7]		0	USB_UP_LED2 — USB2 Good Link LED indicator. It is LOW when device is configured (non-control endpoints enabled). It is HIGH when the device is not configured or during global suspend. (LPC2378 only)
		I/O	MOSI1 — Master Out Slave In for SSP1.
		I	AD0[7] — A/D converter 0, input 7.
	48[1]	I/O	P0[14] — General purpose digital input/output pin.
USB_CONNECT2/ SSEL1		0	USB_CONNECT2 — USB2 Soft Connect control. Signal used to switch an external 1.5 kΩ resistor under software control. Used with the SoftConnect USB feature. (LPC2378 only)
		I/O	SSEL1 — Slave Select for SSP1.

Table 98. LPC2377/78 pin description ...continued

Symbol	Pin	Type	Description
P0[15]/TXD1/	89 <mark>[1]</mark>	I/O	P0[15] — General purpose digital input/output pin.
SCK0/SCK		0	TXD1 — Transmitter output for UART1.
		I/O	SCK0 — Serial clock for SSP0.
		I/O	SCK — Serial clock for SPI.
P0[16]/RXD1/	90[1]	I/O	P0 [16] — General purpose digital input/output pin.
SSEL0/SSEL		I	RXD1 — Receiver input for UART1.
		I/O	SSEL0 — Slave Select for SSP0.
		I/O	SSEL — Slave Select for SPI.
P0[17]/CTS1/	87 <mark>11</mark>	I/O	P0[17] — General purpose digital input/output pin.
MISO0/MISO		I	CTS1 — Clear to Send input for UART1.
		I/O	MISO0 — Master In Slave Out for SSP0.
		I/O	MISO — Master In Slave Out for SPI.
P0[18]/DCD1/	86 <mark>[1]</mark>	I/O	P0[18] — General purpose digital input/output pin.
MOSI0/MOSI		I	DCD1 — Data Carrier Detect input for UART1.
		I/O	MOSI0 — Master Out Slave In for SSP0.
		I/O	MOSI — Master Out Slave In for SPI.
P0[19]/DSR1/	85 <mark>[1]</mark>	I/O	P0[19] — General purpose digital input/output pin.
MCICLK/SDA1		1	DSR1 — Data Set Ready input for UART1.
		0	MCICLK — Clock output line for SD/MMC interface.
		I/O	SDA1 — I ² C1 data input/output (this is not an open-drain pin).
P0[20]/DTR1/	83 <mark>[1]</mark>	I/O	P0[20] — General purpose digital input/output pin.
MCICMD/SCL1		0	DTR1 — Data Terminal Ready output for UART1.
		I	MCICMD — Command line for SD/MMC interface.
		I/O	SCL1 — I ² C1 clock input/output (this is not an open-drain pin).
P0[21]/RI1/	82 <mark>1</mark> 1	I/O	P0[21] — General purpose digital input/output pin.
MCIPWR/RD1		I	RI1 — Ring Indicator input for UART1.
		0	MCIPWR — Power Supply Enable for external SD/MMC power supply.
		I	RD1 — CAN1 receiver input. (LPC2378 only)
P0[22]/RTS1/	80[1]	I/O	P0[22] — General purpose digital input/output pin.
MCIDAT0/TD1		0	RTS1 — Request to Send output for UART1.
		0	MCIDAT0 — Data line for SD/MMC interface.
		0	TD1 — CAN1 transmitter output. (LPC2378 only)
P0[23]/AD0[0]/	13[2]	I/O	P0[23] — General purpose digital input/output pin.
I2SRX_CLK/ CAP3[0]		I	AD0[0] — A/D converter 0, input 0.
CAP3[U]		I/O	I2SRX_CLK — Receive Clock. It is driven by the master and received by the slave. Corresponds to the signal SCK in the PS -bus specification.
		I	CAP3[0] — Capture input for Timer 3, channel 0.

Table 98. LPC2377/78 pin description ...continued

Symbol	Pin	Type	Description
P0[24]/AD0[1]/	11[3]	I/O	P0[24] — General purpose digital input/output pin.
2SRX_WS/ CAP3[1]		I	AD0[1] — A/D converter 0, input 1.
OAI O[I]		I/O	I2SRX_WS — Receive Word Select. It is driven by the master and received by the slave. Corresponds to the signal WS in the PS -bus specification.
		I	CAP3[1] — Capture input for Timer 3, channel 1.
P0[25]/AD0[2]/	10[2]	I/O	P0[25] — General purpose digital input/output pin.
2SRX_SDA/ FXD3		I	AD0[2] — A/D converter 0, input 2.
TADO		I/O	I2SRX_SDA — Receive data. It is driven by the transmitter and read by the receiver. Corresponds to the signal SD in the <i>PS-bus specification</i> .
		0	TXD3 — Transmitter output for UART3.
P0[26]/AD0[3]/	8[2]	I/O	P0[26] — General purpose digital input/output pin.
AOUT/RXD3		I	AD0[3] —]A/D converter 0, input 3.
		0	AOUT — D/A converter output.
		I	RXD3 — Receiver input for UART3.
P0[27]/SDA0	35 <mark>[4]</mark>	I/O	P0[27] — General purpose digital input/output pin. Output is open-drain.
		I/O	SDA0 — I ² C0 data input/output. Open-drain output (for I ² C-bus compliance).
P0[28]/SCL0	28]/SCL0 34[4]	I/O	P0[28] — General purpose digital input/output pin. Output is open-drain.
		I/O	SCL0 — I ² C0 clock input/output. Open-drain output (for I ² C-bus compliance).
P0[29]/USB_D+1	42 ^[5]	I/O	P0[29] — General purpose digital input/output pin.
		I/O	USB_D+1 — USB1 port bidirectional D+ line. (LPC2378 only)
P0[30]/USB_D-1	43 <mark>[5]</mark>	I/O	P0[30] — General purpose digital input/output pin.
		I/O	USB_D-1 — USB1 port bidirectional D- line. (LPC2378 only)
P0[31]/USB_D+2	36 <mark>5</mark>	I/O	P0[31] — General purpose digital input/output pin.
		I/O	USB_D+2 — USB2 port bidirectional D+ line. (LPC2378 only)
P1[0] to P1[31]		I/O	Port 1: Port 1 is a 32-bit I/O port with individual direction controls for each bit. The operation of port 1 pins depends upon the pin function selected via the pin connect block. Pins 2, 3, 5, 6, 7, 11, 12, and 13 of this port are not available.
P1[0]/	136 <mark>[1]</mark>	I/O	P1[0] — General purpose digital input/output pin.
ENET_TXD0		0	ENET_TXD0 — Ethernet transmit data 0.
P1[1]/	135 <u>[1]</u>	I/O	P1[1] — General purpose digital input/output pin.
ENET_TXD1		0	ENET_TXD1 — Ethernet transmit data 1.
P1[4]/	133 <u>[1]</u>	I/O	P1[4] — General purpose digital input/output pin.
ENET_TX_EN		0	ENET_TX_EN — Ethernet transmit data enable.
P1[8]/	132 <mark>[1]</mark>	I/O	P1[8] — General purpose digital input/output pin.
ENET_CRS		I	ENET_CRS — Ethernet carrier sense.
P1[9]/	131 <u>[1]</u>	I/O	P1[9] — General purpose digital input/output pin.
ENET_RXD0		I	ENET_RXD0 — Ethernet receive data.
P1[10]/	129 <mark>[1]</mark>	I/O	P1[10] — General purpose digital input/output pin.
ENET_RXD1		I	ENET_RXD1 — Ethernet receive data.
P1[14]/	128[1]	I/O	P1[14] — General purpose digital input/output pin.
ENET_RX_ER		I	ENET_RX_ER — Ethernet receive error.

Table 98. LPC2377/78 pin description ...continued

Symbol	Pin	Type	Description
P1[15]/	126 <mark>1</mark>	I/O	P1[15] — General purpose digital input/output pin.
ENET_REF_CLK		I	ENET_REF_CLK/ENET_RX_CLK — Ethernet receiver clock.
P1[16]/	125 <mark>1</mark>	I/O	P1[16] — General purpose digital input/output pin.
ENET_MDC		0	ENET_MDC — Ethernet MIIM clock.
P1[17]/	123[1]	I/O	P1[17] — General purpose digital input/output pin.
ENET_MDIO		I/O	ENET_MDIO — Ethernet MIIM data input and output.
P1[18]/	46 <mark>1</mark> 1	I/O	P1[18] — General purpose digital input/output pin.
USB_UP_LED1/ PWM1[1]/ CAP1[0]		0	USB_UP_LED1 — USB1 port Good Link LED indicator. It is LOW when device is configured (non-control endpoints enabled). It is HIGH when the device is not configured or during global suspend. (LPC2378 only)
		0	PWM1[1] — Pulse Width Modulator 1, channel 1 output.
		I	CAP1[0] — Capture input for Timer 1, channel 0.
P1[19]/CAP1[1]	47 <mark>[1]</mark>	I/O	P1[19] — General purpose digital input/output pin.
		I	CAP1[1] — Capture input for Timer 1, channel 1.
P1[20]/PWM1[2]/	49 <mark>[1]</mark>	I/O	P1[20] — General purpose digital input/output pin.
SCK0		0	PWM1[2] — Pulse Width Modulator 1, channel 2 output.
		I/O	SCK0 — Serial clock for SSP0.
P1[21]/PWM1[3]/	50 <mark>11</mark>	I/O	P1[21] — General purpose digital input/output pin.
SSEL0		0	PWM1[3] — Pulse Width Modulator 1, channel 3 output.
		I/O	SSEL0 — Slave Select for SSP0.
P1[22]/MAT1[0]	51 <u>¹¹</u>	I/O	P1[22] — General purpose digital input/output pin.
		0	MAT1[0] — Match output for Timer 1, channel 0.
P1[23]/PWM1[4]/	53 <mark>[1]</mark>	I/O	P1[23] — General purpose digital input/output pin.
MISO0		0	PWM1[4] — Pulse Width Modulator 1, channel 4 output.
		I/O	MISO0 — Master In Slave Out for SSP0.
P1[24]/PWM1[5]/	54 <mark>[1]</mark>	I/O	P1[24] — General purpose digital input/output pin.
MOSI0		0	PWM1[5] — Pulse Width Modulator 1, channel 5 output.
		I/O	MOSI0 — Master Out Slave in for SSP0.
P1[25]/MAT1[1]	56 <mark>[1]</mark>	I/O	P1[25] — General purpose digital input/output pin.
		0	MAT1[1] — Match output for Timer 1, channel 1.
P1[26]/PWM1[6]/	57 <mark>11</mark>	I/O	P1[26] — General purpose digital input/output pin.
CAP0[0]		0	PWM1[6] — Pulse Width Modulator 1, channel 6 output.
		I	CAP0[0] — Capture input for Timer 0, channel 0.
P1[27]/CAP0[1]	61 <mark>1</mark> 1	I/O	P1[27] — General purpose digital input/output pin.
		I	CAP0[1] — Capture input for Timer 0, channel 1.
P1[28]/	63 <mark>[1]</mark>	I/O	P1[28] — General purpose digital input/output pin.
PCAP1[0]/ MAT0[0]		I	PCAP1[0] — Capture input for PWM1, channel 0.
ivii (i o[o]		0	MAT0[0] — Match output for Timer 0, channel 0.
P1[29]/	64 <mark>11</mark>	I/O	P1[29] — General purpose digital input/output pin.
PCAP1[1]/ MAT0[1]		I	PCAP1[1] — Capture input for PWM1, channel 1.
www.cloli]		0	MAT0[1] — Match output for Timer 0, channel 0.

Table 98. LPC2377/78 pin description ...continued

Symbol	Pin	Type	Description
P1[30]/	30[2]	I/O	P1[30] — General purpose digital input/output pin.
V _{BUS} /AD0[4]		I	V _{BUS} — Monitors the presence of USB bus power. (LPC2378 only)
			Note: This signal must be HIGH for USB reset to occur.
		I	AD0[4] — A/D converter 0, input 4.
P1[31]/SCK1/	28[2]	I/O	P1[31] — General purpose digital input/output pin.
AD0[5]		I/O	SCK1 — Serial Clock for SSP1.
		I	AD0[5] — A/D converter 0, input 5.
P2[0] to P2[31]		I/O	Port 2: Port 2 is a 32 bit I/O port with individual direction controls for each bit. The operation of port 2 pins depends upon the pin function selected via the pin connect block. Pins 14 through 31 of this port are not available.
P2[0]/PWM1[1]/	107 <mark>[1]</mark>	I/O	P2[0] — General purpose digital input/output pin.
TXD1/ TRACECLK		0	PWM1[1] — Pulse Width Modulator 1, channel 1 output.
		0	TXD1 — Transmitter output for UART1.
		0	TRACECLK — Trace Clock.
P2[1]/PWM1[2]/	106[1]	I/O	P2[1] — General purpose digital input/output pin.
RXD1/		0	PWM1[2] — Pulse Width Modulator 1, channel 2 output.
PIPESTAT0		I	RXD1 — Receiver input for UART1.
		0	PIPESTAT0 — Pipeline Status, bit 0.
P2[2]/PWM1[3]/	105[1]	I/O	P2[2] — General purpose digital input/output pin.
CTS1/ PIPESTAT1		0	PWM1[3] — Pulse Width Modulator 1, channel 3 output.
I II LOIAI I		I	CTS1 — Clear to Send input for UART1.
		0	PIPESTAT1 — Pipeline Status, bit 1.
P2[3]/PWM1[4]/	100[1]	I/O	P2[3] — General purpose digital input/output pin.
DCD1/ PIPESTAT2		0	PWM1[4] — Pulse Width Modulator 1, channel 4 output.
FIFESTATE		I	DCD1 — Data Carrier Detect input for UART1.
		0	PIPESTAT2 — Pipeline Status, bit 2.
P2[4]/PWM1[5]/	99 <mark>[1]</mark>	I/O	P2[4] — General purpose digital input/output pin.
DSR1/ TRACESYNC		0	PWM1[5] — Pulse Width Modulator 1, channel 5 output.
TRACESTING		I	DSR1 — Data Set Ready input for UART1.
		0	TRACESYNC — Trace Synchronization.
P2[5]/PWM1[6]/	97 <mark>∐</mark>	I/O	P2[5] — General purpose digital input/output pin.
DTR1/ TRACEPKT0		0	PWM1[6] — Pulse Width Modulator 1, channel 6 output.
INACEFAIU		0	DTR1 — Data Terminal Ready output for UART1.
		0	TRACEPKT0 — Trace Packet, bit 0.
P2[6]/PCAP1[0]/	96 <mark>[1]</mark>	I/O	P2[6] — General purpose digital input/output pin.
RI1/		I	PCAP1[0] — Capture input for PWM1, channel 0.
TRACEPKT1		I	RI1 — Ring Indicator input for UART1.
		0	TRACEPKT1 — Trace Packet, bit 1.

Table 98. LPC2377/78 pin description ...continued

Symbol	Pin	Type	Description
P2[7]/RD2/	95 <mark>[1]</mark>	I/O	P2[7] — General purpose digital input/output pin.
RTS1/ TRACEPKT2		I	RD2 — CAN2 receiver input. (LPC2378 only)
TRACEPRIZ		0	RTS1 — Request to Send output for UART1.
		0	TRACEPKT2 — Trace Packet, bit 2.
P2[8]/TD2/	93[1]	I/O	P2[8] — General purpose digital input/output pin.
TXD2/		0	TD2 — CAN2 transmitter output. (LPC2378 only)
TRACEPKT3		0	TXD2 — Transmitter output for UART2.
		0	TRACEPKT3 — Trace Packet, bit 3.
P2[9]/	92 <mark>[1]</mark>	I/O	P2[9] — General purpose digital input/output pin.
USB_CONNECT1/ RXD2/ EXTIN0		0	USB_CONNECT1 — USB1 Soft Connect control. Signal used to switch an external 1.5 kΩ resistor under the software control. Used with the SoftConnect USB feature. (LPC2378 only)
		I	RXD2 — Receiver input for UART2.
		I	EXTIN0 — External Trigger Input.
P2[10]/EINT0	76 <mark>6</mark>	I/O	P2[10] — General purpose digital input/output pin.
			Note: LOW on this pin while RESET is LOW forces on-chip boot-loader to take over control of the part after a reset.
		I	EINT0 — External interrupt 0 input.
P2[11]/EINT1/	75 <u>6</u>	I/O	P2[11] — General purpose digital input/output pin.
MCIDAT1/ I2STX_CLK		I	EINT1 — External interrupt 1 input.
1231A_GER		0	MCIDAT1 — Data line for SD/MMC interface.
		I/O	I2STX_CLK — Transmit Clock. It is driven by the master and received by the slave. Corresponds to the signal SCK in the PS -bus specification.
P2[12]/EINT2/	73 <mark>6</mark>	I/O	P2[12] — General purpose digital input/output pin.
MCIDAT2/ I2STX_WS		I	EINT2 — External interrupt 2 input.
1231 A_VV3		0	MCIDAT2 — Data line for SD/MMC interface.
		I/O	I2STX_WS — Transmit Word Select. It is driven by the master and received by the slave. Corresponds to the signal WS in the <i>PS-bus specification</i> .
P2[13]/EINT3/	716	I/O	P2[13] — General purpose digital input/output pin.
MCIDAT3/		I	EINT3 — External interrupt 3 input.
2STX_SDA		0	MCIDAT3 — Data line for SD/MMC interface.
		I/O	I2STX_SDA — Transmit data. It is driven by the transmitter and read by the receiver. Corresponds to the signal SD in the PS -bus specification.
P3[0] to P3[31]		I/O	Port 3: Port 3 is a 32 bit I/O port with individual direction controls for each bit. The operation of port 3 pins depends upon the pin function selected via the pin connect block. Pins 8 through 22, and 27 through 31 of this port are not available.
P3[0]/D0	137 <mark>[1]</mark>	I/O	P3[0] — General purpose digital input/output pin.
		I/O	D0 — External memory data line 0.
P3[1]/D1	140[1]	I/O	P3[1] — General purpose digital input/output pin.
		I/O	D1 — External memory data line 1.
P3[2]/D2	144[1]	I/O	P3[2] — General purpose digital input/output pin.
		I/O	D2 — External memory data line 2.

Table 98. LPC2377/78 pin description ...continued

Symbol	Pin	Type	Description
P3[3]/D3	2[1]	I/O	P3[3] — General purpose digital input/output pin.
		I/O	D3 — External memory data line 3.
P3[4]/D4	9 <mark>[1]</mark>	I/O	P3[4] — General purpose digital input/output pin.
		I/O	D4 — External memory data line 4.
P3[5]/D5	12 <mark>11</mark>	I/O	P3[5] — General purpose digital input/output pin.
		I/O	D5 — External memory data line 5.
P3[6]/D6	16 <mark>11</mark>	I/O	P3[6] — General purpose digital input/output pin.
		I/O	D6 — External memory data line 6.
P3[7]/D7	19 <mark>11</mark>	I/O	P3[7] — General purpose digital input/output pin.
		I/O	D7 — External memory data line 7.
P3[23]/CAP0[0]/	45 <mark>[1]</mark>	I/O	P3[23] — General purpose digital input/output pin.
PCAP1[0]		I	CAP0[0] — Capture input for Timer 0, channel 0.
		I	PCAP1[0] — Capture input for PWM1, channel 0.
P3[24]/CAP0[1]/	40 <mark>[1]</mark>	I/O	P3[24] — General purpose digital input/output pin.
PWM1[1]		I	CAP0[1] — Capture input for Timer 0, channel 1.
		0	PWM1[1] — Pulse Width Modulator 1, output 1.
P3[25]/MAT0[0]/	39 <mark>[1]</mark>	I/O	P3[25] — General purpose digital input/output pin.
PWM1[2]		0	MAT0[0] — Match output for Timer 0, channel 0.
		0	PWM1[2] — Pulse Width Modulator 1, output 2.
P3[26]/MAT0[1]/	38 <mark>[1]</mark>	I/O	P3[26] — General purpose digital input/output pin.
PWM1[3]		0	MAT0[1] — Match output for Timer 0, channel 1.
		0	PWM1[3] — Pulse Width Modulator 1, output 3.
P4[0] to P4[31]		I/O	Port 4: Port 4 is a 32 bit I/O port with individual direction controls for each bit. The operation of port 4 pins depends upon the pin function selected via the pin connect block. Pins 16 through 23, 26, and 27 of this port are not available.
P4[0]/A0	52 <mark>[1]</mark>	I/O	P4[0] —]General purpose digital input/output pin.
		I/O	A0 — External memory address line 0.
P4[1]/A1	55 <mark>[1]</mark>	I/O	P4[1] — General purpose digital input/output pin.
		I/O	A1 — External memory address line 1.
P4[2]/A2	58 <mark>[1]</mark>	I/O	P4[2] — General purpose digital input/output pin.
		I/O	A2 — External memory address line 2.
P4[3]/A3	68 <mark>[1]</mark>	I/O	P4[3] — General purpose digital input/output pin.
		I/O	A3 — External memory address line 3.
P4[4]/A4	72 <mark>[1]</mark>	I/O	P4[4] — General purpose digital input/output pin.
		I/O	A4 — External memory address line 4.
P4[5]/A5	74 <mark>[1]</mark>	I/O	P4[5] — General purpose digital input/output pin.
		I/O	A5 — External memory address line 5.
P4[6]/A6	78 <mark>[1]</mark>	I/O	P4[6] — General purpose digital input/output pin.
		I/O	A6 — External memory address line 6.
P4[7]/A7	84[1]	I/O	P4[7] — General purpose digital input/output pin.
		I/O	A7 — External memory address line 7.

Table 98. LPC2377/78 pin description ...continued

Symbol	Pin	Type	Description
P4[8]/A8	88 <mark>[1]</mark>	I/O	P4[8] — General purpose digital input/output pin.
		I/O	A8 — External memory address line 8.
P4[9]/A9	91 <mark>1</mark> 1	I/O	P4[9] — General purpose digital input/output pin.
		I/O	A9 — External memory address line 9.
P4[10]/A10	94[1]	I/O	P4[10] — General purpose digital input/output pin.
		I/O	A10 — External memory address line 10.
P4[11]/A11	101[1]	I/O	P4[11] — General purpose digital input/output pin.
		I/O	A11 — External memory address line 11.
P4[12]/A12	104 <mark>1</mark>	I/O	P4[12] — General purpose digital input/output pin.
		I/O	A12 — External memory address line 12.
P4[13]/A13	108[1]	I/O	P4[13] — General purpose digital input/output pin.
		I/O	A13 — External memory address line 13.
P4[14]/A14	110[1]	I/O	P4[14] — General purpose digital input/output pin.
		I/O	A14 — External memory address line 14.
P4[15]/A15	120 <mark>1</mark>	I/O	P4[15] — General purpose digital input/output pin.
		I/O	A15 — External memory address line 15.
P4[24]/OE	127 <mark>1</mark>	I/O	P4[24] — General purpose digital input/output pin.
		0	OE — LOW active Output Enable signal.
P4[25]/BLS0	124 <mark>[1]</mark>	I/O	P4[25] — General purpose digital input/output pin.
		0	BLS0 — LOW active Byte Lane select signal 0.
P4[28]/MAT2[0]/	118 <mark>[1]</mark>	I/O	P4 [28] — General purpose digital input/output pin.
TXD3		О	MAT2[0] — Match output for Timer 2, channel 0.
		0	TXD3 — Transmitter output for UART3.
P4[29]/MAT2[1]/	122 <mark>1</mark>	I/O	P4[29] — General purpose digital input/output pin.
RXD3		О	MAT2[1] — Match output for Timer 2, channel 1.
		I	RXD3 — Receiver input for UART3.
P4[30]/CS0	130[1]	I/O	P4[30] — General purpose digital input/output pin.
		0	CS0 — LOW active Chip Select 0 signal.
P4[31]/CS1	134[1]	I/O	P4[31] — General purpose digital input/output pin.
		0	CS1 — LOW active Chip Select 1 signal.
ALARM	26 ⁸	0	ALARM — RTC controlled output. This is a 1.8 V pin. It goes HIGH when a RTC alarm is generated.
USB_D-2	37	I/O	USB_D-2 — USB2 port bidirectional D– line. LPC2378 only. This pin is not connected on the LPC2377.
DBGEN	6 <u>[1]</u>	<u> </u>	DBGEN — JTAG interface control signal. Also used for boundary scanning.
TDO	1[1]	0	TDO — Test Data out for JTAG interface.
TDI	3[1]	 	TDI — Test Data in for JTAG interface.
TMS	4[1]	<u> </u>	TMS — Test Mode Select for JTAG interface.
TRST	5[1]	 	TRST — Test Reset for JTAG interface.
TCK	7[1]	 	TCK — Test Clock for JTAG interface. This clock must be slower than ¹ ? ₆ of the
	- -	-	CPU clock (CCLK) for the JTAG interface to operate.

Chapter 8: LPC23XX Pin configuration

Table 98. LPC2377/78 pin description ...continued

Symbol	Pin	Туре	Description
RTCK	143[1]		•
RICK	14311	I/O	RTCK — JTAG interface control signal. Note: LOW on this pin while RESET is LOW enables ETM pins (P2[9:0]) to operate as Trace port after reset.
RSTOUT	20	0	RSTOUT — This is a 3.3 V pin. LOW on this pin indicates LPC23xx being in Reset state.
RESET	24[7]	I	external reset input: A LOW on this pin resets the device, causing I/O ports and peripherals to take on their default states, and processor execution to begin at address 0. TTL with hysteresis, 5 V tolerant.
XTAL1	31 <mark>8</mark>	I	Input to the oscillator circuit and internal clock generator circuits.
XTAL2	33[8]	0	Output from the oscillator amplifier.
RTCX1	23[8]	I	Input to the RTC oscillator circuit.
RTCX2	25 ^[8]	0	Output from the RTC oscillator circuit.
V _{SS}	22, 44, 59, 65, 79, 103, 117,119, 139 ^[9]	I	ground: 0 V reference.
V _{SSA}	15 ^[10]	I	analog ground: 0 V reference. This should nominally be the same voltage as V_{SS} , but should be isolated to minimize noise and error.
V _{DD(3V3)}	41, 62, 77, 102, 114, 138[11]	I	3.3 V supply voltage: This is the power supply voltage for the I/O ports.
n.c.	21, 81, 98[12]	I	Leave these pins unconnected.
V _{DD(DCDC)(3V3)}	18, 60, 121 ^[13]	I	3.3 V DC-to-DC converter supply voltage: This is the power supply for the on-chip DC-to-DC converter only.
V_{DDA}	14 [14]	I	analog 3.3 V pad supply voltage: This should be nominally the same voltage as $V_{\text{DD}(3V3)}$ but should be isolated to minimize noise and error. This voltage is used to power the ADC and DAC.
VREF	17 [14]	I	ADC reference: This should be nominally the same voltage as $V_{DD(3V3)}$ but should be isolated to minimize noise and error. The level on this pin is used as a reference for ADC and DAC.
VBAT	27 <u>[14]</u>	I	RTC pin power supply: 3.3 V on this pin supplies the power to the RTC peripheral.
-			

- [1] 5 V tolerant pad providing digital I/O functions with TTL levels and hysteresis.
- [2] 5 V tolerant pad providing digital I/O functions (with TTL levels and hysteresis) and analog input. When configured as a DAC input, digital section of the pad is disabled.
- [3] 5 V tolerant pad providing digital I/O with TTL levels and hysteresis and analog output function. When configured as the DAC output, digital section of the pad is disabled.
- [4] Open-drain, 5 V tolerant digital I/O pad compatible with I²C-bus 400 kHz specification. It requires an external pull-up to provide output functionality. When power is switched off, this pin connected to the I²C-bus is floating and does not disturb the I²C lines. Open-drain configuration applies to all functions on this pin.
- [5] Pad provides digital I/O and USB functions (LPC2378 only). It is designed in accordance with the USB specification, revision 2.0 (Full-speed and Low-speed mode only).
- [6] 5 V tolerant pad with 10 ns glitch filter providing digital I/O functions with TTL levels and hysteresis.
- [7] $\,$ 5 V tolerant pad with 20 ns glitch filter providing digital I/O function with TTL levels and hysteresis.
- [8] Pad provides special analog functionality.
- [9] Pad provides special analog functionality.

UM10211

Chapter 8: LPC23XX Pin configuration

- [10] Pad provides special analog functionality.
- [11] Pad provides special analog functionality.
- [12] Pad provides special analog functionality.
- [13] Pad provides special analog functionality.
- [14] Pad provides special analog functionality.

8.5 LPC2387 100-pin package

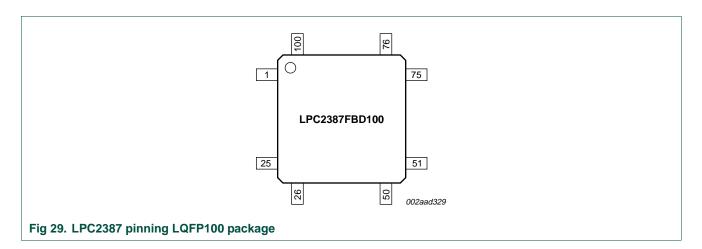


Table 99. LPC2387 pin description

Symbol	Pin	Туре	Description
P0[0] to P0[31]		I/O	Port 0: Port 0 is a 32-bit I/O port with individual direction controls for each bit. The operation of port 0 pins depends upon the pin function selected via the pin connect block. Pins 12, 13, 14, and 31 of this port are not available.
P0[0]/RD1/TXD3/	46 <mark>1</mark> 1	I/O	P0[0] — General purpose digital input/output pin.
SDA1		I	RD1 — CAN1 receiver input.
		0	TXD3 — Transmitter output for UART3.
		I/O	SDA1 — I ² C1 data input/output (this is not an open-drain pin).
P0[1]/TD1/RXD3/	47[1]	I/O	P0[1] — General purpose digital input/output pin.
SCL1		0	TD1 — CAN1 transmitter output.
		I	RXD3 — Receiver input for UART3.
		I/O	SCL1 — I ² C1 clock input/output (this is not an open-drain pin).
P0[2]/TXD0	98[1]	I/O	P0[2] — General purpose digital input/output pin.
		0	TXD0 — Transmitter output for UART0.
P0[3]/RXD0	99[1]	I/O	P0[3] — General purpose digital input/output pin.
		I	RXD0 — Receiver input for UART0.
P0[4]/I2SRX_CLK/	81 <mark>1</mark> 1	I/O	P0[4] — General purpose digital input/output pin.
RD2/CAP2[0]		I/O	I2SRX_CLK — Receive Clock. It is driven by the master and received by the slave. Corresponds to the signal SCK in the <i>l</i> ² S-bus specification.
		I	RD2 — CAN2 receiver input.
		I	CAP2[0] — Capture input for Timer 2, channel 0.

Table 99. LPC2387 pin description ... continued

Symbol	Pin	Type	Description
P0[5]/I2SRX_WS/	80[1]	I/O	P0[5] — General purpose digital input/output pin.
FD2/CAP2[1]		I/O	I2SRX_WS — Receive Word Select. It is driven by the master and received by the slave. Corresponds to the signal WS in the <i>l</i> ² S-bus specification.
		0	TD2 — CAN2 transmitter output.
		I	CAP2[1] — Capture input for Timer 2, channel 1.
P0[6]/I2SRX_SDA/	79 <u>[1]</u>	I/O	P0[6] — General purpose digital input/output pin.
SSEL1/MAT2[0]		I/O	I2SRX_SDA — Receive data. It is driven by the transmitter and read by the receiver. Corresponds to the signal SD in the PS -bus specification.
		I/O	SSEL1 — Slave Select for SSP1.
		0	MAT2[0] — Match output for Timer 2, channel 0.
P0[7]/I2STX_CLK/	78 <mark>[1]</mark>	I/O	P0[7] — General purpose digital input/output pin.
SCK1/MAT2[1]		I/O	I2STX_CLK — Transmit Clock. It is driven by the master and received by the slave. Corresponds to the signal SCK in the <i>l</i> ² S-bus specification.
		I/O	SCK1 — Serial Clock for SSP1.
		0	MAT2[1] — Match output for Timer 2, channel 1.
P0[8]/I2STX_WS/	77 <mark>[1]</mark>	I/O	P0[8] — General purpose digital input/output pin.
MISO1/MAT2[2]		I/O	I2STX_WS — Transmit Word Select. It is driven by the master and received by the slave. Corresponds to the signal WS in the <i>PS-bus specification</i> .
		I/O	MISO1 — Master In Slave Out for SSP1.
		0	MAT2[2] — Match output for Timer 2, channel 2.
P0[9]/I2STX_SDA/	76[1]	I/O	P0[9] — General purpose digital input/output pin.
MOSI1/MAT2[3]		I/O	I2STX_SDA — Transmit data. It is driven by the transmitter and read by the receiver. Corresponds to the signal SD in the <i>l</i> ² S-bus specification.
		I/O	MOSI1 — Master Out Slave In for SSP1.
		0	MAT2[3] — Match output for Timer 2, channel 3.
P0[10]/TXD2/	48[1]	I/O	P0[10] — General purpose digital input/output pin.
SDA2/MAT3[0]		0	TXD2 — Transmitter output for UART2.
		I/O	SDA2 — I ² C2 data input/output (this is not an open-drain pin).
		0	MAT3[0] — Match output for Timer 3, channel 0.
P0[11]/RXD2/	49[1]	I/O	P0[11] — General purpose digital input/output pin.
SCL2/MAT3[1]		I	RXD2 — Receiver input for UART2.
		I/O	SCL2 — I ² C2 clock input/output (this is not an open-drain pin).
		0	MAT3[1] — Match output for Timer 3, channel 1.
0[15]/TXD1/	62 <mark>11</mark>	I/O	P0[15] — General purpose digital input/output pin.
CK0/SCK		0	TXD1 — Transmitter output for UART1.
		I/O	SCK0 — Serial clock for SSP0.
		I/O	SCK — Serial clock for SPI.
P0[16]/RXD1/	63 <mark>[1]</mark>	I/O	P0[16] — General purpose digital input/output pin.
SSEL0/SSEL		I	RXD1 — Receiver input for UART1.
		I/O	SSEL0 — Slave Select for SSP0.
		I/O	SSEL — Slave Select for SPI.

Table 99. LPC2387 pin description ...continued

Symbol	Pin	Type	Description
P0[17]/CTS1/	61 <mark>1</mark> 1	I/O	P0[17] — General purpose digital input/output pin.
MISO0/MISO		I	CTS1 — Clear to Send input for UART1.
		I/O	MISO0 — Master In Slave Out for SSP0.
		I/O	MISO — Master In Slave Out for SPI.
P0[18]/DCD1/	60 <mark>[1]</mark>	I/O	P0[18] — General purpose digital input/output pin.
MOSI0/MOSI		I	DCD1 — Data Carrier Detect input for UART1.
		I/O	MOSI0 — Master Out Slave In for SSP0.
		I/O	MOSI — Master Out Slave In for SPI.
P0[19]/DSR1/	59 <mark>[1]</mark>	I/O	P0[19] — General purpose digital input/output pin.
MCICLK/SDA1		I	DSR1 — Data Set Ready input for UART1.
		0	MCICLK — Clock output line for SD/MMC interface.
		I/O	SDA1 — I ² C1 data input/output (this is not an open-drain pin).
P0[20]/DTR1/	58 <mark>[1]</mark>	I/O	P0[20] — General purpose digital input/output pin.
MCICMD/SCL1		0	DTR1 — Data Terminal Ready output for UART1.
		I	MCICMD — Command line for SD/MMC interface.
		I/O	SCL1 — I ² C1 clock input/output (this is not an open-drain pin).
P0[21]/RI1/	57 <mark>[1]</mark>	I/O	P0[21] — General purpose digital input/output pin.
MCIPWR/RD1		I	RI1 — Ring Indicator input for UART1.
		0	MCIPWR — Power Supply Enable for external SD/MMC power supply.
		I	RD1 — CAN1 receiver input.
P0[22]/RTS1/	56 ^[1]	I/O	P0[22] — General purpose digital input/output pin.
MCIDAT0/TD1		0	RTS1 — Request to Send output for UART1.
		0	MCIDAT0 — Data line for SD/MMC interface.
		0	TD1 — CAN1 transmitter output.
P0[23]/AD0[0]/	9[2]	I/O	P0[23] — General purpose digital input/output pin.
2SRX_CLK/ CAP3[0]		I	AD0[0] — A/D converter 0, input 0.
		I/O	I2SRX_CLK — Receive Clock. It is driven by the master and received by the slave. Corresponds to the signal SCK in the <i>l</i> ² S-bus specification.
		I	CAP3[0] — Capture input for Timer 3, channel 0.
P0[24]/AD0[1]/	8 <mark>[2]</mark>	I/O	P0[24] — General purpose digital input/output pin.
2SRX_WS/ CAP3[1]		I	AD0[1] — A/D converter 0, input 1.
		I/O	I2SRX_WS — Receive Word Select. It is driven by the master and received by the slave. Corresponds to the signal WS in the <i>PS-bus specification</i> .
		I	CAP3[1] — Capture input for Timer 3, channel 1.
P0[25]/AD0[2]/	7[2]	I/O	P0[25] — General purpose digital input/output pin.
2SRX_SDA/		I	AD0[2] — A/D converter 0, input 2.
FXD3		I/O	I2SRX_SDA — Receive data. It is driven by the transmitter and read by the receiver. Corresponds to the signal SD in the <i>PS-bus specification</i> .
			TXD3 — Transmitter output for UART3.

Table 99. LPC2387 pin description ... continued

Symbol	Pin	Type	Description
P0[26]/AD0[3]/	6[3]	I/O	P0[26] — General purpose digital input/output pin.
AOUT/RXD3		I	AD0[3] — A/D converter 0, input 3.
		0	AOUT — D/A converter output.
		I	RXD3 — Receiver input for UART3.
P0[27]/SDA0	25 <mark>[4]</mark>	I/O	P0[27] — General purpose digital input/output pin.
		I/O	SDA0 — I ² C0 data input/output. Open-drain output (for I ² C-bus compliance).
P0[28]/SCL0	24 <mark>4</mark>	I/O	P0[28] — General purpose digital input/output pin.
		I/O	SCL0 — I ² C0 clock input/output. Open-drain output (for I ² C-bus compliance).
P0[29]/USB_D+	29 <mark>5</mark>]	I/O	P0[29] — General purpose digital input/output pin.
		I/O	USB_D+ — USB bidirectional D+ line.
P0[30]/USB_D-	30[5]	I/O	P0[30] — General purpose digital input/output pin.
		I/O	USB_D- — USB bidirectional D- line.
P1[0] to P1[31]		I/O	Port 1: Port 1 is a 32-bit I/O port with individual direction controls for each bit. The operation of port 1 pins depends upon the pin function selected via the pin connect block. Pins 2, 3, 5, 6, 7, 11, 12, and 13 of this port are not available.
P1[0]/ENET_TXD0	95 <mark>[1]</mark>	I/O	P1[0] — General purpose digital input/output pin.
		0	ENET_TXD0 — Ethernet transmit data 0.
P1[1]/ENET_TXD1	94[1]	I/O	P1[1] — General purpose digital input/output pin.
		0	ENET_TXD1 — Ethernet transmit data 1.
P1[4]/ENET_TX_EN	93[1]	I/O	P1[4] — General purpose digital input/output pin.
		0	ENET_TX_EN — Ethernet transmit data enable.
P1[8]/ENET_CRS	92[1]	I/O	P1[8] — General purpose digital input/output pin.
		I	ENET_CRS — Ethernet carrier sense.
P1[9]/ENET_RXD0	91[1]	I/O	P1[9] — General purpose digital input/output pin.
		I	ENET_RXD0 — Ethernet receive data.
P1[10]/ENET_RXD1	90[1]	I/O	P1[10] — General purpose digital input/output pin.
		I	ENET_RXD1 — Ethernet receive data.
P1[14]/	89[1]	I/O	P1[14] — General purpose digital input/output pin.
ENET_RX_ER		I	ENET_RX_ER — Ethernet receive error.
P1[15]/	88[1]	I/O	P1[15] — General purpose digital input/output pin.
ENET_REF_CLK		I	ENET_REF_CLK/ENET_RX_CLK — Ethernet receiver clock.
P1[16]/ENET_MDC	87 <mark>[1]</mark>	I/O	P1[16] — General purpose digital input/output pin.
		0	ENET_MDC — Ethernet MIIM clock.
P1[17]/ENET_MDIO	86[1]	I/O	P1[17] — General purpose digital input/output pin.
		I/O	ENET_MDIO — Ethernet MIIM data input and output.
P1[18]/	32[1]	I/O	P1[18] — General purpose digital input/output pin.
USB_UP_LED/ PWM1[1]/ CAP1[0]		0	USB_UP_LED — USB GoodLink LED indicator. It is LOW when device is configured (non-control endpoints enabled). It is HIGH when the device is not configured or during global suspend.
		0	PWM1[1] — Pulse Width Modulator 1, channel 1 output.
		1	CAP1[0] — Capture input for Timer 1, channel 0.

Table 99. LPC2387 pin description ...continued

Symbol	Pin	Type	Description
P1[19]/	33[1]	I/O	P1[19] — General purpose digital input/output pin.
USB_TX_E1/ USB_PPWR1/ CAP1[1]		0	USB_TX_E1 — Transmit Enable signal for USB port 1 (OTG transceiver).
		0	USB_PPWR1 — Port Power enable signal for USB port 1.
		I	CAP1[1] — Capture input for Timer 1, channel 1.
P1[20]/	34 <mark>[1]</mark>	I/O	P1[20] — General purpose digital input/output pin.
USB_TX_DP1/ PWM1[2]/SCK0		0	USB_TX_DP1 — D+ transmit data for USB port 1 (OTG transceiver).
PWWI[2]/SCRU		0	PWM1[2] — Pulse Width Modulator 1, channel 2 output.
		I/O	SCK0 — Serial clock for SSP0.
P1[21]/	35 <mark>[1]</mark>	I/O	P1[21] — General purpose digital input/output pin.
USB_TX_DM1/		0	USB_TX_DM1 — D- transmit data for USB port 1 (OTG transceiver).
PWM1[3]/SSEL0		0	PWM1[3] — Pulse Width Modulator 1, channel 3 output.
		I/O	SSEL0 — Slave Select for SSP0.
P1[22]/	36 <mark>[1]</mark>	I/O	P1[22] — General purpose digital input/output pin.
USB_RCV1/ USB_PWRD1/		I	USB_RCV1 — Differential receive data for USB port 1 (OTG transceiver).
MAT1[0]		I	USB_PWRD1 — Power Status for USB port 1 (host power switch).
		0	MAT1[0] — Match output for Timer 1, channel 0.
P1[23]/	37[1]	I/O	P1[23] — General purpose digital input/output pin.
JSB_RX_DP1/		I	USB_RX_DP1 — D+ receive data for USB port 1 (OTG transceiver).
PWM1[4]/MISO0		0	PWM1[4] — Pulse Width Modulator 1, channel 4 output.
		I/O	MISO0 — Master In Slave Out for SSP0.
P1[24]/	38[1]	I/O	P1[24] — General purpose digital input/output pin.
JSB_RX_DM1/		I	USB_RX_DM1 — D- receive data for USB port 1 (OTG transceiver).
PWM1[5]/MOSI0		0	PWM1[5] — Pulse Width Modulator 1, channel 5 output.
		I/O	MOSI0 — Master Out Slave in for SSP0.
P1[25]/	39[1]	I/O	P1[25] — General purpose digital input/output pin.
JSB_LS1/ JSB_HSTEN1/		0	USB_LS1 — Low-speed status for USB port 1 (OTG transceiver).
MAT1[1]		0	USB_HSTEN1 — Host Enabled status for USB port 1.
		0	MAT1[1] — Match output for Timer 1, channel 1.
P1[26]/	40[1]	I/O	P1[26] — General purpose digital input/output pin.
JSB_SSPND1/ PWM1[6]/		0	USB_SSPND1 — USB port 1 bus suspend status (OTG transceiver).
CAP0[0]		0	PWM1[6] — Pulse Width Modulator 1, channel 6 output.
		I	CAP0[0] — Capture input for Timer 0, channel 0.
P1[27]/	43 <mark>[1]</mark>	I/O	P1[27] — General purpose digital input/output pin.
JSB_INT1/ JSB_OVRCR1/		I	USB_INT1 — USB port 1 OTG transceiver interrupt (OTG transceiver).
CAP0[1]		I	USB_OVRCR1 — USB port 1 Over-Current status.
		I	CAP0[1] — Capture input for Timer 0, channel 1.
P1[28]/USB_SCL1/	44 <mark>[1]</mark>	I/O	P1[28] — General purpose digital input/output pin.
PCAP1[0]/MAT0[0]		I/O	USB_SCL1 — USB port 1 I ² C-bus serial clock (OTG transceiver).
		I	PCAP1[0] — Capture input for PWM1, channel 0.
		0	MAT0[0] — Match output for Timer 0, channel 0.

Table 99. LPC2387 pin description ... continued

Symbol	Pin	Type	Description
P1[29]/USB_SDA1/	45 <u>[1]</u>	I/O	P1[29] — General purpose digital input/output pin.
PCAP1[1]/MAT0[1]		I/O	USB_SDA1 — USB port 1 I ² C-bus serial data (OTG transceiver).
		I	PCAP1[1] — Capture input for PWM1, channel 1.
		0	MAT0[1] — Match output for Timer 0, channel 0.
P1[30]/V _{BUS} /AD0[4]	212	I/O	P1[30] — General purpose digital input/output pin.
		I	V _{BUS} — Monitors the presence of USB bus power.
			Note: This signal must be HIGH for USB reset to occur.
		I	AD0[4] — A/D converter 0, input 4.
P1[31]/SCK1/AD0[5]	20[2]	I/O	P1[31] — General purpose digital input/output pin.
		I/O	SCK1 — Serial Clock for SSP1.
		I	AD0[5] — A/D converter 0, input 5.
P2[0] to P2[31]		I/O	Port 2: Port 2 is a 32-bit I/O port with individual direction controls for each bit. The operation of port 2 pins depends upon the pin function selected via the pin connect block. Pins 14 through 31 of this port are not available.
P2[0]/PWM1[1]/	75 <mark>1</mark>]	I/O	P2[0] — General purpose digital input/output pin.
TXD1/TRACECLK		0	PWM1[1] — Pulse Width Modulator 1, channel 1 output.
		0	TXD1 — Transmitter output for UART1.
		0	TRACECLK — Trace Clock.
P2[1]/PWM1[2]/	74 <u>[1]</u>	I/O	P2[1] — General purpose digital input/output pin.
RXD1/PIPESTAT0		0	PWM1[2] — Pulse Width Modulator 1, channel 2 output.
		I	RXD1 — Receiver input for UART1.
		0	PIPESTAT0 — Pipeline Status, bit 0.
P2[2]/PWM1[3]/	73[1]	I/O	P2[2] — General purpose digital input/output pin.
CTS1/PIPESTAT1		0	PWM1[3] — Pulse Width Modulator 1, channel 3 output.
		I	CTS1 — Clear to Send input for UART1.
		0	PIPESTAT1 — Pipeline Status, bit 1.
P2[3]/PWM1[4]/	70[1]	I/O	P2[3] — General purpose digital input/output pin.
DCD1/PIPESTAT2		0	PWM1[4] — Pulse Width Modulator 1, channel 4 output.
		I	DCD1 — Data Carrier Detect input for UART1.
		0	PIPESTAT2 — Pipeline Status, bit 2.
P2[4]/PWM1[5]/	69 <mark>[1]</mark>	I/O	P2[4] — General purpose digital input/output pin.
DSR1/TRACESYNC		0	PWM1[5] — Pulse Width Modulator 1, channel 5 output.
		I	DSR1 — Data Set Ready input for UART1.
		0	TRACESYNC — Trace Synchronization.
P2[5]/PWM1[6]/	68 <mark>[1]</mark>	I/O	P2[5] — General purpose digital input/output pin.
DTR1/TRACEPKT0		0	PWM1[6] — Pulse Width Modulator 1, channel 6 output.
		0	DTR1 — Data Terminal Ready output for UART1.
		0	TRACEPKT0 — Trace Packet, bit 0.

Table 99. LPC2387 pin description ... continued

Table 99. LPC2387	pin descri	ption	continued
Symbol	Pin	Type	Description
P2[6]/PCAP1[0]/RI1/	67 <mark>1</mark> 1	I/O	P2[6] — General purpose digital input/output pin.
TRACEPKT1		I	PCAP1[0] — Capture input for PWM1, channel 0.
		I	RI1 — Ring Indicator input for UART1.
		0	TRACEPKT1 — Trace Packet, bit 1.
P2[7]/RD2/	66 <mark>11</mark>	I/O	P2[7] — General purpose digital input/output pin.
RTS1/TRACEPKT2		I	RD2 — CAN2 receiver input.
		0	RTS1 — Request to Send output for UART1.
		0	TRACEPKT2 — Trace Packet, bit 2.
P2[8]/TD2/	65 <mark>11</mark>	I/O	P2[8] — General purpose digital input/output pin.
TXD2/TRACEPKT3		0	TD2 — CAN2 transmitter output.
		0	TXD2 — Transmitter output for UART2.
		0	TRACEPKT3 — Trace Packet, bit 3.
P2[9]/	64 <mark>[1]</mark>	I/O	P2[9] — General purpose digital input/output pin.
USB_CONNECT/ RXD2/EXTIN0		0	USB_CONNECT — Signal used to switch an external 1.5 k Ω resistor under software control. Used with the SoftConnect USB feature.
		I	RXD2 — Receiver input for UART2.
		1	EXTINO — External Trigger Input.
P2[10]/EINT0	53 <mark>[6]</mark>	I/O	P2[10] — General purpose digital input/output pin.
			Note: LOW on this pin while RESET is LOW forces on-chip bootloader to take over control of the part after a reset.
		I	EINT0 — External interrupt 0 input.
P2[11]/EINT1/	52 <mark>6</mark>	I/O	P2[11] — General purpose digital input/output pin.
MCIDAT1/		I	EINT1 — External interrupt 1 input.
I2STX_CLK		0	MCIDAT1 — Data line for SD/MMC interface.
		I/O	I2STX_CLK — Transmit Clock. It is driven by the master and received by the slave. Corresponds to the signal SCK in the <i>I</i> ² <i>S-bus specification</i> .
P2[12]/EINT2/	51 <u>6</u>	I/O	P2[12] — General purpose digital input/output pin.
MCIDAT2/		1	EINT2 — External interrupt 2 input.
2STX_WS		0	MCIDAT2 — Data line for SD/MMC interface.
		I/O	I2STX_WS — Transmit Word Select. It is driven by the master and received by the slave. Corresponds to the signal WS in the <i>PS-bus specification</i> .
P2[13]/EINT3/	50 <mark>6</mark>]	I/O	P2[13] — General purpose digital input/output pin.
MCIDAT3/			EINT3 — External interrupt 3 input.
I2STX_SDA		0	MCIDAT3 — Data line for SD/MMC interface.
		I/O	I2STX_SDA — Transmit data. It is driven by the transmitter and read by the receiver. Corresponds to the signal SD in the <i>I</i> ² S-bus specification.
P3[0] to P3[31]		I/O	Port 3: Port 3 is a 32-bit I/O port with individual direction controls for each bit. The operation of port 3 pins depends upon the pin function selected via the pin connect block. Pins 0 through 24, and 27 through 31 of this port are not available.
P3[25]/MAT0[0]/	27[1]	I/O	P3[25] — General purpose digital input/output pin.
PWM1[2]		0	MAT0[0] — Match output for Timer 0, channel 0.
		0	PWM1[2] — Pulse Width Modulator 1, output 2.
IM10211			All information provided in this document is subject to legal disclaimers

Table 99. LPC2387 pin description ...continued

Symbol	Pin	Type	Description
P3[26]/MAT0[1]/	26 <mark>1</mark> 1	I/O	P3[26] — General purpose digital input/output pin.
PWM1[3]		0	MAT0[1] — Match output for Timer 0, channel 1.
		0	PWM1[3] — Pulse Width Modulator 1, output 3.
P4[0] to P4[31]		I/O	Port 4: Port 4 is a 32-bit I/O port with individual direction controls for each bit. The operation of port 4 pins depends upon the pin function selected via the pin connect block. Pins 0 through 27, 30, and 31 of this port are not available.
P4[28]/MAT2[0]/	82 <mark>[1]</mark>	I/O	P4[28] — General purpose digital input/output pin.
TXD3		0	MAT2[0] — Match output for Timer 2, channel 0.
		0	TXD3 — Transmitter output for UART3.
P4[29]/MAT2[1]/	85 <mark>[1]</mark>	I/O	P4[29] — General purpose digital input/output pin.
RXD3		0	MAT2[1] — Match output for Timer 2, channel 1.
		I	RXD3 — Receiver input for UART3.
TDO	1[1]	0	TDO — Test Data Out for JTAG interface.
TDI	2[1]	I	TDI — Test Data In for JTAG interface.
TMS	3 <mark>[1]</mark>	I	TMS — Test Mode Select for JTAG interface.
TRST	4 <u>[1]</u>	I	TRST — Test Reset for JTAG interface.
TCK	5 <u>[1]</u>	I	TCK — Test Clock for JTAG interface. This clock must be slower than 1 ? of the CPU clock (CCLK) for the JTAG interface to operate.
RTCK	100[1]	I/O	RTCK — JTAG interface control signal.
			Note: LOW on this pin while RESET is LOW enables ETM pins (P2[9:0]) to operate as trace port after reset.
RSTOUT	14	0	RSTOUT — This is a 3.3 V pin. LOW on this pin indicates UM10211 being in Reset state.
			Note: This pin is available in LPC2387FBD100 devices only (LQFP100 package).
RESET	17 <u>7</u>	I	External reset input: A LOW on this pin resets the device, causing I/O ports and peripherals to take on their default states, and processor execution to begin at address 0. TTL with hysteresis, 5 V tolerant.
XTAL1	22[8]	I	Input to the oscillator circuit and internal clock generator circuits.
XTAL2	23[8]	0	Output from the oscillator amplifier.
RTCX1	16 <mark>[8]</mark>	I	Input to the RTC oscillator circuit.
RTCX2	18 <mark>[8]</mark>	0	Output from the RTC oscillator circuit.
V _{SS}	15, 31, 41, 55, 72, 97, 83 ^[9]	I	ground: 0 V reference.
V _{SSA}	11 ^[10]	I	analog ground: $0\ V$ reference. This should nominally be the same voltage as V_{SS} , but should be isolated to minimize noise and error.
V _{DD(3V3)}	28, 54, 71, 96 ^[11]	I	3.3 V supply voltage: This is the power supply voltage for the I/O ports.
V _{DD(DCDC)(3V3)}	13, 42, 84 <u>[12]</u>	I	3.3 V DC-to-DC converter supply voltage: This is the supply voltage for the on-chip DC-to-DC converter only.

Chapter 8: LPC23XX Pin configuration

Table 99. LPC2387 pin description ... continued

Symbol	Pin	Type	Description
V_{DDA}	10 ^[13]	I	analog 3.3 V pad supply voltage: This should be nominally the same voltage as $V_{DD(3V3)}$ but should be isolated to minimize noise and error. This voltage is used to power the ADC and DAC.
VREF	12 ^[13]	I	ADC reference: This should be nominally the same voltage as $V_{DD(3V3)}$ but should be isolated to minimize noise and error. Level on this pin is used as a reference for ADC and DAC.
VBAT	19 <mark>[13]</mark>	I	RTC pin power supply: 3.3 V on this pin supplies the power to the RTC peripheral.

- [1] 5 V tolerant pad providing digital I/O functions with TTL levels and hysteresis.
- [2] 5 V tolerant pad providing digital I/O functions (with TTL levels and hysteresis) and analog input. When configured as a DAC input, digital section of the pad is disabled.
- [3] 5 V tolerant pad providing digital I/O with TTL levels and hysteresis and analog output function. When configured as the DAC output, digital section of the pad is disabled.
- [4] Open-drain 5 V tolerant digital I/O pad, compatible with I²C-bus 400 kHz specification. This pad requires an external pull-up to provide output functionality. When power is switched off, this pin connected to the I²C-bus is floating and does not disturb the I²C lines. Open-drain configuration applies to all functions on this pin.
- [5] Pad provides digital I/O and USB functions. It is designed in accordance with the *USB specification, revision 2.0* (Full-speed and Low-speed mode only).
- [6] 5 V tolerant pad with 10 ns glitch filter providing digital I/O functions with TTL levels and hysteresis
- [7] 5 V tolerant pad with 20 ns glitch filter providing digital I/O function with TTL levels and hysteresis
- [8] Pad provides special analog functionality.
- [9] Pad provides special analog functionality.
- [10] Pad provides special analog functionality.
- [11] Pad provides special analog functionality.
- [12] Pad provides special analog functionality.
- [13] Pad provides special analog functionality.

8.6 LPC2388 144-pin package

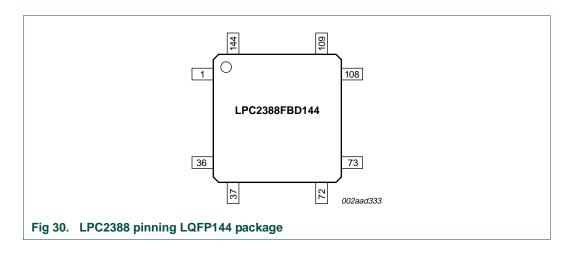


Table 100. LPC2388 pin description

Symbol	Pin	Type	Description
P0[0] to P0[31]		I/O	Port 0: Port 0 is a 32-bit I/O port with individual direction controls for each bit. The operation of port 0 pins depends upon the pin function selected via the Pin Connect block.
P0[0]/RD1/TXD/	66 <mark>[1]</mark>	I/O	P0[0] — General purpose digital input/output pin.
SDA1		I	RD1 — CAN1 receiver input.
		0	TXD3 — Transmitter output for UART3.
		I/O	SDA1 — I ² C1 data input/output (this is not an open-drain pin).
P0[1]/TD1/RXD3/	67 <mark>11</mark>	I/O	P0[1] — General purpose digital input/output pin.
SCL1		0	TD1 — CAN1 transmitter output.
		I	RXD3 — Receiver input for UART3.
		I/O	SCL1 — I ² C1 clock input/output (this is not an open-drain pin).
P0[2]/TXD0	141 <mark>1</mark> 1	I/O	P0[2] — General purpose digital input/output pin.
		0	TXD0 — Transmitter output for UART0.
P0[3]/RXD0	142 <mark>[1]</mark>	I/O	P0[3] — General purpose digital input/output pin.
		I	RXD0 — Receiver input for UART0.
P0[4]/	116[1]	I/O	P0[4] — General purpose digital input/output pin.
I2SRX_CLK/ RD2/CAP2[0]		I/O	I2SRX_CLK — Receive Clock. It is driven by the master and received by the slave. Corresponds to the signal SCK in the ℓ S-bus specification.
		I	RD2 — CAN2 receiver input.
		I	CAP2[0] — Capture input for Timer 2, channel 0.
P0[5]/	115 ^[1]	I/O	P0[5] — General purpose digital input/output pin.
I2SRX_WS/ TD2/CAP2[1]		I/O	I2SRX_WS — Receive Word Select. It is driven by the master and received by the slave. Corresponds to the signal WS in the <i>PS-bus specification</i> .
		0	TD2 — CAN2 transmitter output.
		ļ	CAP2[1] — Capture input for Timer 2, channel 1.
P0[6]/	113🗓	I/O	P0[6] — General purpose digital input/output pin.
I2SRX_SDA/ SSEL1/MAT2[0]		I/O	I2SRX_SDA — Receive data. It is driven by the transmitter and read by the receiver. Corresponds to the signal SD in the l^2S -bus specification.
		I/O	SSEL1 — Slave Select for SSP1.
		0	MAT2[0] — Match output for Timer 2, channel 0.
P0[7]/	112 <mark>1</mark> 1	I/O	P0[7] — General purpose digital input/output pin.
I2STX_CLK/ SCK1/MAT2[1]		I/O	I2STX_CLK — Transmit Clock. It is driven by the master and received by the slave. Corresponds to the signal SCK in the PS -bus specification.
		I/O	SCK1 — Serial Clock for SSP1.
		0	MAT2[1] — Match output for Timer 2, channel 1.
P0[8]/	111 <u>[1]</u>	I/O	P0[8] — General purpose digital input/output pin.
I2STX_WS/ MISO1/MAT2[2]		I/O	I2STX_WS — Transmit Word Select. It is driven by the master and received by the slave. Corresponds to the signal WS in the PS -bus specification.
		I/O	MISO1 — Master In Slave Out for SSP1.
		0	MAT2[2] — Match output for Timer 2, channel 2.

Table 100. LPC2388 pin description ...continued

Symbol	Pin	Type	Description
P0[9]/	109 <mark>1</mark>	I/O	P0[9] — General purpose digital input/output pin.
I2STX_SDA/ MOSI1/MAT2[3]		I/O	I2STX_SDA — Transmit data. It is driven by the transmitter and read by the receiver. Corresponds to the signal SD in the PS -bus specification.
		I/O	MOSI1 — Master Out Slave In for SSP1.
		0	MAT2[3] — Match output for Timer 2, channel 3.
P0[10]/TXD2/	69 <mark>[1]</mark>	I/O	P0[10] — General purpose digital input/output pin.
SDA2/MAT3 [0]		0	TXD2 — Transmitter output for UART2.
		I/O	SDA2 — I ² C2 data input/output (this is not an open-drain pin).
		0	MAT3[0] — Match output for Timer 3, channel 0.
P0[11]/RXD2/	70 <u>[1]</u>	I/O	P0[11] — General purpose digital input/output pin.
SCL2/MAT3[1]		I	RXD2 — Receiver input for UART2.
		I/O	SCL2 — I ² C2 clock input/output (this is not an open-drain pin).
		0	MAT3[1] — Match output for Timer 3, channel 1.
P0[12]/MISO1/	29[2]	I/O	P0[12] — General purpose digital input/output pin.
USB_PPWR2/		I/O	MISO1 — Master In Slave Out for SSP1.
AD0[6]		0	USB_PPWR2 — Port power enable signal for USB port 2.
		I	AD0[6] — A/D converter 0, input 6.
P0[13]/	32[2]	I/O	P0[13] — General purpose digital input/output pin.
USB_UP_LED2/ MOSI1/AD0[7]		0	USB_UP_LED2 — USB port 2 Good Link LED indicator. It is LOW when device is configured (non-control endpoints enabled). It is HIGH when the device is not configured or during global suspend.
		I/O	MOSI1 — Master Out Slave In for SSP1.
		I	AD0[7] — A/D converter 0, input 7.
P0[14]/	48[1]	I/O	P0[14] — General purpose digital input/output pin.
USB_HSTEN2/		0	USB_HSTEN2 — Host Enabled status for USB port 2.
USB_CONNECT2/ SSEL1		0	USB_CONNECT2 — SoftConnect control for USB port 2. Signal used to switch an external 1.5 k Ω resistor under software control. Used with the SoftConnect USB feature.
		I/O	SSEL1 — Slave Select for SSP1.
P0[15]/TXD1/	89[1]	I/O	P0[15] — General purpose digital input/output pin.
SCK0/SCK		0	TXD1 — Transmitter output for UART1.
		I/O	SCK0 — Serial clock for SSP0.
		I/O	SCK — Serial clock for SPI.
P0[16]/RXD1/	90[1]	I/O	P0 [16] — General purpose digital input/output pin.
SSEL0/SSEL		I	RXD1 — Receiver input for UART1.
		I/O	SSEL0 — Slave Select for SSP0.
		I/O	SSEL — Slave Select for SPI.
P0[17]/CTS1/	87 <mark>[1]</mark>	I/O	P0[17] — General purpose digital input/output pin.
MISO0/MISO		I	CTS1 — Clear to Send input for UART1.
		I/O	MISO0 — Master In Slave Out for SSP0.

Table 100. LPC2388 pin description ...continued

Symbol	Pin	Type	Description
P0[18]/DCD1/	86 <mark>[1]</mark>	I/O	P0[18] — General purpose digital input/output pin.
MOSI0/MOSI		I	DCD1 — Data Carrier Detect input for UART1.
		I/O	MOSI0 — Master Out Slave In for SSP0.
		I/O	MOSI — Master Out Slave In for SPI.
P0[19]/DSR1/	85 <mark>[1]</mark>	I/O	P0[19] — General purpose digital input/output pin.
MCICLK/SDA1		I	DSR1 — Data Set Ready input for UART1.
		0	MCICLK — Clock output line for SD/MMC interface.
		I/O	SDA1 — I ² C1 data input/output (this is not an open-drain pin).
P0[20]/DTR1/	83 <mark>[1]</mark>	I/O	P0[20] — General purpose digital input/output pin.
MCICMD/SCL1		0	DTR1 — Data Terminal Ready output for UART1.
		I	MCICMD — Command line for SD/MMC interface.
		I/O	SCL1 — I ² C1 clock input/output (this is not an open-drain pin).
P0[21]/RI1/	82 <mark>[1]</mark>	I/O	P0[21] — General purpose digital input/output pin.
MCIPWR/RD1		I	RI1 — Ring Indicator input for UART1.
		0	MCIPWR — Power Supply Enable for external SD/MMC power supply.
		I	RD1 — CAN1 receiver input.
P0[22]/RTS1/	80 <mark>[1]</mark>	I/O	P0[22] — General purpose digital input/output pin.
MCIDAT0/TD1		0	RTS1 — Request to Send output for UART1.
		0	MCIDAT0 — Data line for SD/MMC interface.
		0	TD1 — CAN1 transmitter output.
P0[23]/AD0[0]/	13 <mark>2</mark>	I/O	P0[23] — General purpose digital input/output pin.
I2SRX_CLK/ CAP3[0]		I	AD0[0] — A/D converter 0, input 0.
CAFS[0]		I/O	I2SRX_CLK — Receive Clock. It is driven by the master and received by the slave Corresponds to the signal SCK in the <i>l</i> ² S-bus specification.
		I	CAP3[0] — Capture input for Timer 3, channel 0.
P0[24]/AD0[1]/	11 <u>[3]</u>	I/O	P0[24] — General purpose digital input/output pin.
2SRX_WS/		I	AD0[1] — A/D converter 0, input 1.
CAP3[1]		I/O	I2SRX_WS — Receive Word Select. It is driven by the master and received by the slave. Corresponds to the signal WS in the <i>PS-bus specification</i> .
		I	CAP3[1] — Capture input for Timer 3, channel 1.
P0[25]/AD0[2]/	10[2]	I/O	P0[25] — General purpose digital input/output pin.
2SRX_SDA/ TXD3		I	AD0[2] — A/D converter 0, input 2.
IADS		I/O	I2SRX_SDA — Receive data. It is driven by the transmitter and read by the receiver. Corresponds to the signal SD in the <i>l</i> ² <i>S-bus specification</i> .
		0	TXD3 — Transmitter output for UART3.
P0[26]/AD0[3]/	8[2]	I/O	P0[26] — General purpose digital input/output pin.
AOUT/RXD3		I	AD0[3] —]A/D converter 0, input 3.
		0	AOUT — D/A converter output.
		1	RXD3 — Receiver input for UART3.
P0[27]/SDA0	35[4]	I/O	P0[27] — General purpose digital input/output pin. Output is open-drain.
· -		I/O	SDA0 — I ² C0 data input/output. Open-drain output (for I ² C-bus compliance).

Table 100. LPC2388 pin description ... continued

Symbol	Pin	Type	Description				
P0[28]/SCL0	34 <mark>[4]</mark>	I/O	P0[28] — General purpose digital input/output pin. Output is open-drain.				
		I/O	SCL0 — I ² C0 clock input/output. Open-drain output (for I ² C-bus compliance).				
P0[29]/USB_D+1	42 <mark>5</mark>	I/O	P0[29] — General purpose digital input/output pin.				
		I/O	USB_D+1 — USB port 1 bidirectional D+ line.				
P0[30]/USB_D-1	43 <mark>5</mark>	I/O	P0[30] — General purpose digital input/output pin.				
		I/O	USB_D-1 — USB port 1 bidirectional D- line.				
P0[31]/USB_D+2	36 ^[5]	I/O	P0[31] — General purpose digital input/output pin.				
		I/O	USB_D+2 — USB port 2 bidirectional D+ line.				
P1[0] to P1[31]		I/O	Port 1: Port 1 is a 32-bit I/O port with individual direction controls for each bit. The operation of port 1 pins depends upon the pin function selected via the Pin Connect block. Pins 2, 3, 5, 6, 7, 11, 12, and 13 of this port are not available.				
P1[0]/	136 <mark>11</mark>	I/O	P1[0] — General purpose digital input/output pin.				
ENET_TXD0		0	ENET_TXD0 — Ethernet transmit data 0.				
P1[1]/	135 <mark>1</mark>	I/O	P1[1] — General purpose digital input/output pin.				
ENET_TXD1		0	ENET_TXD1 — Ethernet transmit data 1.				
P1[4]/	133 <mark>11</mark>	I/O	P1[4] — General purpose digital input/output pin.				
ENET_TX_EN		0	ENET_TX_EN — Ethernet transmit data enable.				
P1[8]/	132[1]	I/O	P1[8] — General purpose digital input/output pin.				
ENET_CRS		I	ENET_CRS — Ethernet carrier sense.				
P1[9]/	131[1]	I/O	P1[9] — General purpose digital input/output pin.				
ENET_RXD0		I	ENET_RXD0 — Ethernet receive data.				
P1[10]/	129 ^[1]	I/O	P1[10] — General purpose digital input/output pin.				
ENET_RXD1		I	ENET_RXD1 — Ethernet receive data.				
P1[14]/	128[1]	I/O	P1[14] — General purpose digital input/output pin.				
ENET_RX_ER		l	ENET_RX_ER — Ethernet receive error.				
P1[15]/	126[1]	I/O	P1[15] — General purpose digital input/output pin.				
ENET_REF_CLK		l	ENET_REF_CLK/ENET_RX_CLK — Ethernet receiver clock.				
P1[16]/	125 <mark>1</mark>	I/O	P1[16] — General purpose digital input/output pin.				
ENET_MDC		0	ENET_MDC — Ethernet MIIM clock.				
P1[17]/	123 <mark>1</mark> 1	I/O	P1[17] — General purpose digital input/output pin.				
ENET_MDIO		I/O	ENET_MDIO — Ethernet MI data input and output.				
P1[18]/	46 ^[1]	I/O	P1[18] — General purpose digital input/output pin.				
USB_UP_LED1/ PWM1[1]/ CAP1[0]		0	USB_UP_LED1 — USB port 1 Good Link LED indicator. It is LOW when device is configured (non-control endpoints enabled). It is HIGH when the device is not configured or during global suspend.				
		0	PWM1[1] — Pulse Width Modulator 1, channel 1 output.				
		I	CAP1[0] — Capture input for Timer 1, channel 0.				
P1[19]/	47 <u>[1]</u>	I/O	P1[19] — General purpose digital input/output pin.				
USB_TX_E1/ USB_PPWR1/		0	USB_TX_E1 — Transmit Enable signal for USB port 1 (OTG transceiver).				
CAP1[1]		0	USB_PPWR1 — Port Power enable signal for USB port 1.				
			CAP1[1] — Capture input for Timer 1, channel 1.				

Table 100. LPC2388 pin description ... continued

Symbol	Pin	Type	Description				
P1[20]/	49 <mark>[1]</mark>	I/O	P1[20] — General purpose digital input/output pin.				
USB_TX_DP1/ PWM1[2]/SCK0		0	USB_TX_DP1 — D+ transmit data for USB port 1 (OTG transceiver).				
F WWI I[2]/SCRU		0	PWM1[2] — Pulse Width Modulator 1, channel 2 output.				
		I/O	SCK0 — Serial clock for SSP0.				
P1[21]/	50 <mark>[1]</mark>	I/O	P1[21] — General purpose digital input/output pin.				
USB_TX_DM1/ PWM1[3]/SSEL0		0	USB_TX_DM1 — D- transmit data for USB port 1 (OTG transceiver).				
r wwitelener		0	PWM1[3] — Pulse Width Modulator 1, channel 3 output.				
		I/O	SSEL0 — Slave Select for SSP0.				
P1[22]/	51 <mark>1</mark> 1	I/O	P1[22] — General purpose digital input/output pin.				
USB_RCV1/ USB_PWRD1/		I	USB_RCV1 — Differential receive data for USB port 1 (OTG transceiver).				
MAT1[0]		I	USB_PWRD1 — Power Status for USB port 1 (host power switch).				
		0	MAT1[0] — Match output for Timer 1, channel 0.				
P1[23]/	53 <mark>[1]</mark>	I/O	P1[23] — General purpose digital input/output pin.				
USB_RX_DP1/ PWM1[4]/MISO0		I	USB_RX_DP1 — D+ receive data for USB port 1 (OTG transceiver).				
VVIVIT[4]/IVIISOU		0	PWM1[4] — Pulse Width Modulator 1, channel 4 output.				
		I/O	MISO0 — Master In Slave Out for SSP0.				
P1[24]/	54[1]	I/O	P1[24] — General purpose digital input/output pin.				
JSB_RX_DM1/ PWM1[5]/MOSI0		I	USB_RX_DM1 — D- receive data for USB port 1 (OTG transceiver).				
		0	PWM1[5] — Pulse Width Modulator 1, channel 5 output.				
		I/O	MOSI0 — Master Out Slave in for SSP0.				
P1[25]/	56 ^[1]	I/O	P1[25] — General purpose digital input/output pin.				
USB_LS1/ USB_HSTEN1/		0	USB_LS1 — Low-speed status for USB port 1 (OTG transceiver).				
MAT1[1]		0	USB_HSTEN1 — Host Enabled status for USB port 1.				
		0	MAT1[1] — Match output for Timer 1, channel 1.				
P1[26]/	57 <mark>11</mark>	I/O	P1[26] — General purpose digital input/output pin.				
USB_SSPND1/ PWM1[6]/		0	USB_SSPND1 — USB port 1 bus suspend status (OTG transceiver).				
CAP0[0]		0	PWM1[6] — Pulse Width Modulator 1, channel 6 output.				
		I	CAP0[0] — Capture input for Timer 0, channel 0.				
P1[27]/	61 <mark>1</mark> 1	I/O	P1[27] — General purpose digital input/output pin.				
JSB_INT1/ JSB_OVRCR1/		I	USB_INT1 — USB port 1 OTG transceiver interrupt (OTG transceiver).				
CAP0[1]		I	USB_OVRCR1 — USB port 1 Over-Current status.				
		I	CAP0[1] — Capture input for Timer 0, channel 1.				
P1[28]/	63 <mark>[1]</mark>	I/O	P1[28] — General purpose digital input/output pin.				
JSB_SCL1/ PCAP1[0]/		I/O	USB_SCL1 — USB port 1 I ² C-bus serial clock (OTG transceiver).				
MAT0[0]		I	PCAP1[0] — Capture input for PWM1, channel 0.				
		0	MAT0[0] — Match output for Timer 0, channel 0.				
P1[29]/	64 <mark>[1]</mark>	I/O	P1[29] — General purpose digital input/output pin.				
USB_SDA1/ PCAP1[1]/		I/O	USB_SDA1 — USB port 1 I ² C-bus serial data (OTG transceiver).				
MAT0[1]		I	PCAP1[1] — Capture input for PWM1, channel 1.				
		0	MAT0[1] — Match output for Timer 0, channel 0.				

Table 100. LPC2388 pin description ...continued

Symbol	Pin	Type	Description
P1[30]/	30[2]	I/O	P1[30] — General purpose digital input/output pin.
USB_PWRD2/ V _{BUS} /AD0[4]		I	USB_PWRD2 — Power Status for USB port 2.
AB08/MD0[4]		I	V _{BUS} — Monitors the presence of USB bus power.
			Note: This signal must be HIGH for USB reset to occur.
		I	AD0[4] — A/D converter 0, input 4.
P1[31]/	28[2]	I/O	P1[31] — General purpose digital input/output pin.
USB_OVRCR2/ SCK1/AD0[5]			USB_OVRCR2 — Over-Current status for USB port 2.
SCI(1/AD0[3]		I/O	SCK1 — Serial Clock for SSP1.
		1	AD0[5] — A/D converter 0, input 5.
P2[0] to P2[31]		I/O	Port 2: Port 2 is a 32 bit I/O port with individual direction controls for each bit. The operation of port 2 pins depends upon the pin function selected via the Pin Connect block. Pins 14 through 31 of this port are not available.
P2[0]/PWM1[1]/	107 <u>1</u> 1	I/O	P2[0] — General purpose digital input/output pin.
TXD1/		0	PWM1[1] — Pulse Width Modulator 1, channel 1 output.
TRACECLK		0	TXD1 — Transmitter output for UART1.
		0	TRACECLK — Trace Clock.
P2[1]/PWM1[2]/	106[1]	I/O	P2[1] — General purpose digital input/output pin.
RXD1/ PIPESTAT0		0	PWM1[2] — Pulse Width Modulator 1, channel 2 output.
PIPESTATU		I	RXD1 — Receiver input for UART1.
		0	PIPESTAT0 — Pipeline Status, bit 0.
P2[2]/PWM1[3]/	105 ^[1]	I/O	P2[2] — General purpose digital input/output pin.
CTS1/ PIPESTAT1		0	PWM1[3] — Pulse Width Modulator 1, channel 3 output.
FIFESTALL		I	CTS1 — Clear to Send input for UART1.
		0	PIPESTAT1 — Pipeline Status, bit 1.
P2[3]/PWM1[4]/	100[1]	I/O	P2[3] — General purpose digital input/output pin.
DCD1/ PIPESTAT2		0	PWM1[4] — Pulse Width Modulator 1, channel 4 output.
PIPESTATZ		I	DCD1 — Data Carrier Detect input for UART1.
		0	PIPESTAT2 — Pipeline Status, bit 2.
P2[4]/PWM1[5]/	99 <mark>[1]</mark>	I/O	P2[4] — General purpose digital input/output pin.
DSR1/ TRACESYNC		0	PWM1[5] — Pulse Width Modulator 1, channel 5 output.
TRACESTING		1	DSR1 — Data Set Ready input for UART1.
		0	TRACESYNC — Trace Synchronization.
P2[5]/PWM1[6]/	97 <mark>11</mark>	I/O	P2[5] — General purpose digital input/output pin.
DTR1/ TRACEPKT0		0	PWM1[6] — Pulse Width Modulator 1, channel 6 output.
INAULFILIU		0	DTR1 — Data Terminal Ready output for UART1.
		0	TRACEPKT0 — Trace Packet, bit 0.
P2[6]/PCAP1[0]/	96 <mark>[1]</mark>	I/O	P2[6] — General purpose digital input/output pin.
RI1/		I	PCAP1[0] — Capture input for PWM1, channel 0.
TRACEPKT1			RI1 — Ring Indicator input for UART1.

Table 100. LPC2388 pin description ... continued

Symbol	Pin	Type	Description
P2[7]/RD2/	95 <mark>[1]</mark>	I/O	P2[7] — General purpose digital input/output pin.
RTS1/ TRACEPKT2		I	RD2 — CAN2 receiver input.
TRACEPK 12		0	RTS1 — Request to Send output for UART1.
		0	TRACEPKT2 — Trace Packet, bit 2.
P2[8]/TD2/	93 <mark>[1]</mark>	I/O	P2[8] — General purpose digital input/output pin.
TXD2/		0	TD2 — CAN2 transmitter output.
TRACEPKT3		0	TXD2 — Transmitter output for UART2.
		0	TRACEPKT3 — Trace Packet, bit 3.
P2[9]/	92 <mark>[1]</mark>	I/O	P2[9] — General purpose digital input/output pin.
USB_CONNECT1/ RXD2/ EXTIN0		0	USB_CONNECT1 — USB port 1 Soft Connect control. Signal used to switch an external 1.5 k Ω resistor under the software control. Used with the SoftConnect USB feature.
		I	RXD2 — Receiver input for UART2.
		I	EXTIN0 — External Trigger Input.
P2[10]/EINT0	76 <mark>6</mark>	I/O	P2[10] — General purpose digital input/output pin.
			Note: LOW on this pin while RESET is LOW forces on-chip boot-loader to take over control of the part after a reset.
		I	EINT0 — External interrupt 0 input.
P2[11]/EINT1/	75 <u>[6]</u>	I/O	P2[11] — General purpose digital input/output pin.
MCIDAT1/ I2STX_CLK		I	EINT1 — External interrupt 1 input.
12017_OLK		0	MCIDAT1 — Data line for SD/MMC interface.
		I/O	I2STX_CLK — Transmit Clock. It is driven by the master and received by the slave. Corresponds to the signal SCK in the <i>PS-bus specification</i> .
P2[12]/EINT2/	73[6]	I/O	P2[12] — General purpose digital input/output pin.
MCIDAT2/ I2STX_WS		I	EINT2 — External interrupt 2 input.
1231 X_VV3		0	MCIDAT2 — Data line for SD/MMC interface.
		I/O	I2STX_WS — Transmit Word Select. It is driven by the master and received by the slave. Corresponds to the signal WS in the <i>PS-bus specification</i> .
P2[13]/EINT3/	71 <mark>6</mark>]	I/O	P2[13] — General purpose digital input/output pin.
MCIDAT3/		I	EINT3 — External interrupt 3 input.
I2STX_SDA		0	MCIDAT3 — Data line for SD/MMC interface.
		I/O	I2STX_SDA — Transmit data. It is driven by the transmitter and read by the receiver. Corresponds to the signal SD in the <i>PS-bus specification</i> .
P3[0] to P3[31]		I/O	Port 3: Port 3 is a 32 bit I/O port with individual direction controls for each bit. The operation of port 3 pins depends upon the pin function selected via the Pin Connect block. Pins 8 through 22, and 27 through 31 of this port are not available.
P3[0]/D0	137 <mark>[1]</mark>	I/O	P3[0] — General purpose digital input/output pin.
		I/O	D0 — External memory data line 0.
P3[1]/D1	140[1]	I/O	P3[1] — General purpose digital input/output pin.
		I/O	D1 — External memory data line 1.
P3[2]/D2	144[1]	I/O	P3[2] — General purpose digital input/output pin.
		I/O	D2 — External memory data line 2.

Table 100. LPC2388 pin description ...continued

Symbol	Pin	Type	Description
P3[3]/D3	2[1]	I/O	P3[3] — General purpose digital input/output pin.
		I/O	D3 — External memory data line 3.
P3[4]/D4	9 <mark>[1]</mark>	I/O	P3[4] — General purpose digital input/output pin.
		I/O	D4 — External memory data line 4.
P3[5]/D5	12 <mark>1</mark>	I/O	P3[5] — General purpose digital input/output pin.
		I/O	D5 — External memory data line 5.
P3[6]/D6	16 <mark>1</mark>	I/O	P3[6] — General purpose digital input/output pin.
		I/O	D6 — External memory data line 6.
P3[7]/D7	19 <mark>1</mark>	I/O	P3[7] — General purpose digital input/output pin.
		I/O	D7 — External memory data line 7.
P3[23]/CAP0[0]/	45 <mark>[1]</mark>	I/O	P3[23] — General purpose digital input/output pin.
PCAP1[0]		I	CAP0[0] — Capture input for Timer 0, channel 0.
		I	PCAP1[0] — Capture input for PWM1, channel 0.
P3[24]/CAP0[1]/	40[1]	I/O	P3[24] — General purpose digital input/output pin.
PWM1[1]		I	CAP0[1] — Capture input for Timer 0, channel 1.
		0	PWM1[1] — Pulse Width Modulator 1, output 1.
P3[25]/MAT0[0]/	39[1]	I/O	P3[25] — General purpose digital input/output pin.
PWM1[2]		0	MAT0[0] — Match output for Timer 0, channel 0.
		0	PWM1[2] — Pulse Width Modulator 1, output 2.
P3[26]/MAT0[1]/	38[1]	I/O	P3[26] — General purpose digital input/output pin.
PWM1[3]		0	MAT0[1] — Match output for Timer 0, channel 1.
		0	PWM1[3] — Pulse Width Modulator 1, output 3.
P4[0] to P4[31]		I/O	Port 4: Port 4 is a 32 bit I/O port with individual direction controls for each bit. The operation of port 4 pins depends upon the pin function selected via the Pin Connect block. Pins 16 through 23, 26, and 27 of this port are not available.
P4[0]/A0	52 <mark>[1]</mark>	I/O	P4[0] —]General purpose digital input/output pin.
		I/O	A0 — External memory address line 0.
P4[1]/A1	55 <mark>[1]</mark>	I/O	P4[1] — General purpose digital input/output pin.
		I/O	A1 — External memory address line 1.
P4[2]/A2	58 <mark>[1]</mark>	I/O	P4[2] — General purpose digital input/output pin.
		I/O	A2 — External memory address line 2.
P4[3]/A3	68 <mark>[1]</mark>	I/O	P4[3] — General purpose digital input/output pin.
		I/O	A3 — External memory address line 3.
P4[4]/A4	72[1]	I/O	P4[4] — General purpose digital input/output pin.
		I/O	A4 — External memory address line 4.
P4[5]/A5	74[1]	I/O	P4[5] — General purpose digital input/output pin.
		I/O	A5 — External memory address line 5.
P4[6]/A6	78 <mark>[1]</mark>	I/O	P4[6] — General purpose digital input/output pin.
		I/O	A6 — External memory address line 6.
P4[7]/A7	84[1]	I/O	P4[7] — General purpose digital input/output pin.
	-		the state of the s

Table 100. LPC2388 pin description ... continued

Symbol	Pin	Type	Description
P4[8]/A8	88 <mark>[1]</mark>	I/O	P4[8] — General purpose digital input/output pin.
		I/O	A8 — External memory address line 8.
P4[9]/A9	91 <mark>1</mark> 1	I/O	P4[9] — General purpose digital input/output pin.
		I/O	A9 — External memory address line 9.
P4[10]/A10	94 <mark>[1]</mark>	I/O	P4[10] — General purpose digital input/output pin.
		I/O	A10 — External memory address line 10.
P4[11]/A11	101[1]	I/O	P4[11] — General purpose digital input/output pin.
		I/O	A11 — External memory address line 11.
P4[12]/A12	104 <mark>1</mark> 1	I/O	P4[12] — General purpose digital input/output pin.
		I/O	A12 — External memory address line 12.
P4[13]/A13	108 <mark>[1]</mark>	I/O	P4[13] — General purpose digital input/output pin.
		I/O	A13 — External memory address line 13.
P4[14]/A14	110[1]	I/O	P4[14] — General purpose digital input/output pin.
		I/O	A14 — External memory address line 14.
P4[15]/A15	120[1]	I/O	P4[15] — General purpose digital input/output pin.
		I/O	A15 — External memory address line 15.
P4[24]/ OE	127 <mark>1</mark> 1	I/O	P4[24] — General purpose digital input/output pin.
		0	OE — LOW active Output Enable signal.
P4[25]/BLS0	124 <mark>1</mark> 1	I/O	P4[25] — General purpose digital input/output pin.
		0	BLS0 — LOW active Byte Lane select signal 0.
P4[28]/MAT2[0]/ TXD3	118[1]	I/O	P4 [28] — General purpose digital input/output pin.
		0	MAT2[0] — Match output for Timer 2, channel 0.
		0	TXD3 — Transmitter output for UART3.
P4[29]/MAT2[1]/	122 <mark>1</mark>	I/O	P4[29] — General purpose digital input/output pin.
RXD3		0	MAT2[1] — Match output for Timer 2, channel 1.
		I	RXD3 — Receiver input for UART3.
P4[30]/CS0	130 <mark>[1]</mark>	I/O	P4[30] — General purpose digital input/output pin.
		0	CS0 — LOW active Chip Select 0 signal.
P4[31]/CS1	134 <mark>11</mark>	I/O	P4[31] — General purpose digital input/output pin.
		0	CS1 — LOW active Chip Select 1 signal.
ALARM	26 ^[8]	0	ALARM — RTC controlled output. This is a 1.8 V pin. It goes HIGH when a RTC alarm is generated.
USB_D-2	37	I/O	USB_D-2 — USB port 2 bidirectional D- line.
DBGEN	6 <mark>[1]</mark>	I	DBGEN — JTAG interface control signal. Also used for boundary scanning.
TDO	1 <u>[1]</u>	0	TDO — Test Data out for JTAG interface.
TDI	3 <u>[1]</u>	I	TDI — Test Data in for JTAG interface.
TMS	4 <u>[1]</u>	I	TMS — Test Mode Select for JTAG interface.
TRST	5 <u>[1]</u>	I	TRST — Test Reset for JTAG interface.
TCK	7 <u>[1]</u>	I	TCK — Test Clock for JTAG interface. This clock must be slower than ¹ ? ₆ of the CPU clock (CCLK) for the JTAG interface to operate.

Chapter 8: LPC23XX Pin configuration

Table 100. LPC2388 pin description ... continued

Symbol	Pin	Туре	Description
RTCK	143[1]	I/O	·
RICK	1430	1/0	RTCK — JTAG interface control signal. Note: LOW on this pin while RESET is LOW enables ETM pins (P2[9:0]) to operate as Trace port after reset.
RSTOUT	20	0	RSTOUT — This is a 3.3 V pin. LOW on this pin indicates LPC23xx being in Reset state.
RESET	24[7]	I	external reset input: A LOW on this pin resets the device, causing I/O ports and peripherals to take on their default states, and processor execution to begin at address 0. TTL with hysteresis, 5 V tolerant.
XTAL1	31 <mark>8</mark>]	I	Input to the oscillator circuit and internal clock generator circuits.
XTAL2	33[8]	0	Output from the oscillator amplifier.
RTCX1	23[8]	I	Input to the RTC oscillator circuit.
RTCX2	25 ^[8]	0	Output from the RTC oscillator circuit.
V _{SS}	22, 44, 59, 65, 79, 103, 117,119, 139	I	ground: 0 V reference.
V _{SSA}	15 ^[10]	I	analog ground: 0 V reference. This should nominally be the same voltage as V_{SS} , but should be isolated to minimize noise and error.
V _{DD(3V3)}	41, 62, 77, 102, 114, 138[11]	I	3.3 V supply voltage: This is the power supply voltage for the I/O ports.
n.c.	21, 81, 98 <mark>[12]</mark>	I	Leave these pins unconnected.
V _{DD(DCDC)(3V3)}	18, 60, 121 ^[13]	I	3.3 V DC-to-DC converter supply voltage: This is the power supply for the on-chip DC-to-DC converter only.
V_{DDA}	14 <mark>[14]</mark>	1	analog 3.3 V pad supply voltage: This should be nominally the same voltage as $V_{\text{DD}(3\text{V3})}$ but should be isolated to minimize noise and error. This voltage is used to power the ADC and DAC.
VREF	17 ^[14]	1	ADC reference: This should be nominally the same voltage as $V_{DD(3V3)}$ but should be isolated to minimize noise and error. The level on this pin is used as a reference for ADC and DAC.
VBAT	27 <mark>[14]</mark>	I	RTC power supply: 3.3 V on this pin supplies the power to the RTC peripheral.

- [1] 5 V tolerant pad providing digital I/O functions with TTL levels and hysteresis.
- [2] 5 V tolerant pad providing digital I/O functions (with TTL levels and hysteresis) and analog input. When configured as a DAC input, digital section of the pad is disabled.
- [3] 5 V tolerant pad providing digital I/O with TTL levels and hysteresis and analog output function. When configured as the DAC output, digital section of the pad is disabled.
- [4] Open-drain 5 V tolerant digital I/O pad, compatible with I²C-bus 400 kHz specification. It requires an external pull-up to provide output functionality. When power is switched off, this pin connected to the I²C-bus is floating and does not disturb the I²C lines. Open-drain configuration applies to all functions on this pin.
- [5] Pad provides digital I/O and USB functions. It is designed in accordance with the *USB specification, revision 2.0* (Full-speed and Low-speed mode only).
- [6] 5 V tolerant pad with 10 ns glitch filter providing digital I/O functions with TTL levels and hysteresis.
- [7] $\,$ 5 V tolerant pad with 20 ns glitch filter providing digital I/O function with TTL levels and hysteresis.
- [8] Pad provides special analog functionality.
- [9] Pad provides special analog functionality.

UM10211

- [10] Pad provides special analog functionality.
- [11] Pad provides special analog functionality.
- [12] Pad provides special analog functionality.
- [13] Pad provides special analog functionality.
- [14] Pad provides special analog functionality.

UM10211

Chapter 9: LPC23XX Pin connect block

Rev. 4.1 — 5 September 2012

User manual

9.1 How to read this chapter

See Table 101 for how to use the PINSEL registers for different LPC23xx parts.

Table 101. Part specific PINSEL registers

PINSEL register	LPC2361/ 62	Functions disabled	LPC2364/ 65/66/67/68	Functions disabled	LPC2377/78	Functions disabled	LPC2387	LPC2388
PINSEL0	Table 105	-	Table 105	CAN (LPC2365/ 67)	Table 106	CAN (LPC2377)	Table 105	Table 106
PINSEL1	Table 107	-	Table 107	USB device, CAN (LPC2365/ 67)	Table 108	USBdevice, CAN (LPC2377)	Table 107	Table 108
PINSEL2	<u>Table 109</u>	Ethernet (LPC2361)	<u>Table 109</u>	-	Table 109		<u>Table 109</u>	Table 109
PINSEL3	<u>Table 110</u>	Ethernet (LPC2361)	<u>Table 110</u>	USB OTG/host	<u>Table 111</u>		Table 110	Table 111
PINSEL4	Table 112	-	Table 112	USB device (LPC2365/ 67)	Table 113	USB device (LPC2377)	Table 112	Table 113
PINSEL5	not used	-	not used	-	not used		not used	not used
PINSEL6	not used	-	not used	-	Table 114		not used	<u>Table 114</u>
PINSEL7	Table 115	-	Table 115	-	Table 116		Table 115	Table 116
PINSEL8	not used	-	not used	-	Table 117		not used	Table 117
PINSEL9	not used	-	not used	-	Table 119		not used	<u>Table 119</u>
PINSEL10	Table 120	-	Table 120	-	Table 120		Table 120	Table 120

9.2 Description

The pin connect block allows selected pins of the microcontroller to have more than one function. Configuration registers control the multiplexers to allow connection between the pin and the on chip peripherals.

Peripherals should be connected to the appropriate pins prior to being activated and prior to any related interrupts being enabled. Activity of any enabled peripheral function that is not mapped to a related pin should be considered undefined.

Selection of a single function on a port pin completely excludes all other functions otherwise available on the same pin.

9.3 Pin function select register values

The PINSEL registers control the functions of device pins as shown below. Pairs of bits in these registers correspond to specific device pins.

Chapter 9: LPC23XX Pin connect block

Table 102. Pin function select register bits

PINSEL0 to PINSEL9 Values	Function	Value after Reset
00	Primary (default) function, typically GPIO port	00
01	First alternate function	
10	Second alternate function	
11	Third alternate function	

The direction control bit in the GPIO registers is effective only when the GPIO function is selected for a pin. For other functions, direction is controlled automatically. Each derivative typically has a different pinout and therefore a different set of functions possible for each pin. Details for a specific derivative may be found in the appropriate data sheet.

9.4 Pin mode select register values

The PINMODE registers control the on-chip pull-up/pull-down resistor feature (the mode) for all ports. The on-chip pull-up/pull-down resistor can be selected for every pin regardless of the function on this pin with the exception of the I²C pins and the USB pins (see Section 9.5.13). Two bits are used to control the mode of a port pin. Bits are reserved for unused pins as in the PINSEL registers.

Table 103. Pin Mode Select register Bits

PINMODE0 to PINMODE9 Values	Function	Value after Reset
00	Pin has an on-chip pull-up resistor enabled.	00
01	Reserved. This value should not be used.	
10	Pin has neither pull-up nor pull-down resistor enabled.	
11	Pin has an on-chip pull-down resistor enabled.	

9.5 Register description

The Pin Control Module contains 11 registers as shown in Table 104 below.

Table 104. Pin Connect Block Register Map

Name	Description	Access	Reset Value[1]	Address
PINSEL0	Pin function select register 0.	R/W	0x0000 0000	0xE002 C000
PINSEL1	Pin function select register 1.	R/W	0x0000 0000	0xE002 C004
PINSEL2	Pin function select register 2.	R/W	0x0000 0000	0xE002 C008
PINSEL3	Pin function select register 3.	R/W	0x0000 0000	0xE002 C00C
PINSEL4	Pin function select register 4.	R/W	0x0000 0000	0xE002 C010
PINSEL5	Pin function select register 5.	R/W	0x0000 0000	0xE002 C014
PINSEL6	Pin function select register 6.	R/W	0x0000 0000	0xE002 C018
PINSEL7	Pin function select register 7.	R/W	0x0000 0000	0xE002 C01C
PINSEL8	Pin function select register 8.	R/W	0x0000 0000	0xE002 C020
PINSEL9	Pin function select register 9.	R/W	0x0000 0000	0xE002 C024
PINSEL10	Pin function select register 10.	R/W	0x0000 0000	0xE002 C028

UM10211

Chapter 9: LPC23XX Pin connect block

Table 104. Pin Connect Block Register Map

Name	Description	Access	Reset Value[1]	Address
PINMODE0	Pin mode select register 0.	R/W	0x0000 0000	0xE002 C040
PINMODE1	Pin mode select register 1.	R/W	0x0000 0000	0xE002 C044
PINMODE2	Pin mode select register 2.	R/W	0x0000 0000	0xE002 C048
PINMODE3	Pin mode select register 3.	R/W	0x0000 0000	0xE002 C04C
PINMODE4	Pin mode select register 4.	R/W	0x0000 0000	0xE002 C050
PINMODE5	Pin mode select register 5.	R/W	0x0000 0000	0xE002 C054
PINMODE6	Pin mode select register 6.	R/W	0x0000 0000	0xE002 C058
PINMODE7	Pin mode select register 7.	R/W	0x0000 0000	0xE002 C05C
PINMODE8	Pin mode select register 8.	R/W	0x0000 0000	0xE002 C060
PINMODE9	Pin mode select register 9.	R/W	0x0000 0000	0xE002 C064

^[1] Reset Value reflects the data stored in used bits only. It does not include reserved bits content.

Pin control module register reset values

On power-on-reset (POR) and BOD reset, all registers in this module are reset to '0'.

On external reset and watchdog reset:

- The corresponding bits for P0.31:0, P1.31:0, P2.13:0 are always reset to '0'.
- For all other bits (applies to LPC2377/78 and LPC2388 only):
 - if the EMC_Reset_Disable = 1 (see <u>Section 3.7 "Other system controls and status</u> flags"), they retain their values for external memory interface
 - else if the EMC_Reset_Disable = 0, they are reset to '0'.

9.5.1 Pin Function Select register 0 (PINSEL0 - 0xE002 C000)

The PINSEL0 register controls the functions of the pins. The direction control bit in the IO0DIR register (or the FIO0DIR register if the enhanced GPIO function is selected for port 0) is effective only when the GPIO function is selected for a pin. For other functions, the direction is controlled automatically.

9.5.1.1 100-pin packages

Table 105. Pin function select register 0 (PINSEL0 - address 0xE002 C000) bit description (LPC2364/65/66/67/68 and LPC2387)

PINSEL0	Pin name	Function when 00	Function when 01	Function when 10	Function when 11	Reset value
1:0	P0.0	GPIO Port 0.0	RD1[1]	TXD3	SDA1	00
3:2	P0.1	GPIO Port 0.1	TD1[1]	RXD3	SCL1	00
5:4	P0.2	GPIO Port 0.2	TXD0	Reserved	Reserved	00
7:6	P0.3	GPIO Port 0.3	RXD0	Reserved	Reserved	00
9:8	P0.4	GPIO Port 0.4	I2SRX_CLK	RD2[1]	CAP2.0	00
11:10	P0.5	GPIO Port 0.5	I2SRX_WS	TD2[1]	CAP2.1	00
13:12	P0.6	GPIO Port 0.6	I2SRX_SDA	SSEL1	MAT2.0	00
15:14	P0.7	GPIO Port 0.7	I2STX_CLK	SCK1	MAT2.1	00
17:16	P0.8	GPIO Port 0.8	I2STX_WS	MISO1	MAT2.2	00

Table 105. Pin function select register 0 (PINSEL0 - address 0xE002 C000) bit description (LPC2364/65/66/67/68 and LPC2387)

PINSEL0	Pin name	Function when 00	Function when 01	Function when 10	Function when 11	Reset value
19:18	P0.9	GPIO Port 0.9	I2STX_SDA	MOSI1	MAT2.3	00
21:20	P0.10	GPIO Port 0.10	TXD2	SDA2	MAT3.0	00
23:22	P0.11	GPIO Port 0.11	RXD2	SCL2	MAT3.1	00
25:24	-	Reserved	Reserved	Reserved	Reserved	00
27:26	-	Reserved	Reserved	Reserved	Reserved	00
29:28	-	Reserved	Reserved	Reserved	Reserved	00
31:30	P0.15	GPIO Port 0.15	TXD1	SCK0	SCK	00

^[1] LPC2361/62/64/66/68 and LPC2387 only. These bits are reserved on LPC2365/67.

9.5.1.2 144-pin packages

Table 106. Pin function select register 0 (PINSEL0 - address 0xE002 C000) bit description (LPC2377/78 and LPC2388)

PINSEL0	Pin name	Function when 00	Function when 01	Function when 10	Function when 11	Reset value
1:0	P0.0	GPIO Port 0.0	RD1[1]	TXD3	SDA1	00
3:2	P0.1	GPIO Port 0.1	TD1[1]	RXD3	SCL1	00
5:4	P0.2	GPIO Port 0.2	TXD0	Reserved	Reserved	00
7:6	P0.3	GPIO Port 0.3	RXD0	Reserved	Reserved	00
9:8	P0.4	GPIO Port 0.4	I2SRX_CLK	RD2 ^[1]	CAP2.0	00
11:10	P0.5	GPIO Port 0.5	I2SRX_WS	TD2[1]	CAP2.1	00
13:12	P0.6	GPIO Port 0.6	I2SRX_SDA	SSEL1	MAT2.0	00
15:14	P0.7	GPIO Port 0.7	I2STX_CLK	SCK1	MAT2.1	00
17:16	P0.8	GPIO Port 0.8	I2STX_WS	MISO1	MAT2.2	00
19:18	P0.9	GPIO Port 0.9	I2STX_SDA	MOSI1	MAT2.3	00
21:20	P0.10	GPIO Port 0.10	TXD2	SDA2	MAT3.0	00
23:22	P0.11	GPIO Port 0.11	RXD2	SCL2	MAT3.1	00
25:24	P0.12	GPIO Port 0.12	USB_PPWR2[2]	MISO1	AD0.6	00
27:26	P0.13	GPIO Port 0.13	USB_UP_LED2[1]	MOSI1	AD0.7	00
29:28	P0.14	GPIO Port 0.14	USB_HSTEN2[2]	USB_CONNEC T2[1]	SSEL1	00
31:30	P0.15	GPIO Port 0.15	TXD1	SCK0	SCK	00

^[1] LPC2378/88 only. These bits are reserved on LPC2377.

9.5.2 Pin Function Select Register 1 (PINSEL1 - 0xE002 C004)

The PINSEL1 register controls the functions of the pins. The direction control bit in the IO0DIR (or the FIO0DIR register if the enhanced GPIO function is selected for port 0) register is effective only when the GPIO function is selected for a pin. For other functions the direction is controlled automatically.

^[2] LPC2388 only. These bits are reserved on LPC2377/78.

Chapter 9: LPC23XX Pin connect block

9.5.2.1 100-pin packages

Table 107. Pin function select register 1 (PINSEL1 - address 0xE002 C004) bit description (LPC2364/65/66/67/68 and LPC2387)

PINSEL1	Pin name	Function when 00	Function when 01	Function when 10	Function when 11	Reset value
1:0	P0.16	GPIO Port 0.16	RXD1	SSEL0	SSEL	00
3:2	P0.17	GPIO Port 0.17	CTS1	MISO0	MISO	00
5:4	P0.18	GPIO Port 0.18	DCD1	MOSI0	MOSI	00
7:6	P0.19	GPIO Port 0.19	DSR1	MCICLK	SDA1	00
9:8	P0.20	GPIO Port 0.20	DTR1	MCICMD	SCL1	00
11:10	P0.21	GPIO Port 0.21	RI1	MCIPWR	RD1[1]	00
13:12	P0.22	GPIO Port 0.22	RTS1	MCIDAT0	TD1[1]	00
15:14	P0.23	GPIO Port 0.23	AD0.0	I2SRX_CLK	CAP3.0	00
17:16	P0.24	GPIO Port 0.24	AD0.1	I2SRX_WS	CAP3.1	00
19:18	P0.25	GPIO Port 0.25	AD0.2	I2SRX_SDA	TXD3	00
21:20	P0.26	GPIO Port 0.26	AD0.3	AOUT	RXD3	00
23:22	P0.27 ^[2]	GPIO Port 0.27	SDA0	Reserved	Reserved	00
25:24	P0.28 ^[2]	GPIO Port 0.28	SCL0	Reserved	Reserved	00
27:26	P0.29	GPIO Port 0.29	USB_D+1	Reserved	Reserved	00
29:28	P0.30	GPIO Port 0.30	USB_D-1	Reserved	Reserved	00
31:30	P0.31	Reserved	Reserved	Reserved	Reserved	00

^[1] LPC2361/62/64/66/68 and LPC2387 only. These bits are reserved on LPC2365/67.

9.5.2.2 144-pin packages

Table 108. Pin function select register 1 (PINSEL1 - address 0xE002 C004) bit description (LPC2377/78 and LPC2388)

PINSEL1	Pin name	Function when 00	Function when 01	Function when 10	Function when 11	Reset value
1:0	P0.16	GPIO Port 0.16	RXD1	SSEL0	SSEL	00
3:2	P0.17	GPIO Port 0.17	CTS1	MISO0	MISO	00
5:4	P0.18	GPIO Port 0.18	DCD1	MOSI0	MOSI	00
7:6	P0.19	GPIO Port 0.19	DSR1	MCICLK	SDA1	00
9:8	P0.20	GPIO Port 0.20	DTR1	MCICMD	SCL1	00
11:10	P0.21	GPIO Port 0.21	RI1	MCIPWR	RD1 ^[1]	00
13:12	P0.22	GPIO Port 0.22	RTS1	MCIDAT0	TD1 ¹¹	00
15:14	P0.23	GPIO Port 0.23	AD0.0	I2SRX_CLK	CAP3.0	00
17:16	P0.24	GPIO Port 0.24	AD0.1	I2SRX_WS	CAP3.1	00
19:18	P0.25	GPIO Port 0.25	AD0.2	I2SRX_SDA	TXD3	00
21:20	P0.26	GPIO Port 0.26	AD0.3	AOUT	RXD3	00
23:22	P0.27[2]	GPIO Port 0.27	SDA0	Reserved	Reserved	00
25:24	P0.28 ²	GPIO Port 0.28	SCL0	Reserved	Reserved	00

^[2] Pins P027] and P0[28] are open-drain for I²C0 and GPIO functionality for I²C-bus compliance.

Chapter 9: LPC23XX Pin connect block

Table 108. Pin function select register 1 (PINSEL1 - address 0xE002 C004) bit description (LPC2377/78 and LPC2388)

PINSEL1	Pin name	Function when 00	Function when 01	Function when 10	Function when 11	Reset value
27:26	P0.29	GPIO Port 0.29	USB_D+1	Reserved	Reserved	00
29:28	P0.30	GPIO Port 0.30	USB_D-1	Reserved	Reserved	00
31:30	P0.31	GPIO Port 0.30	USB_D+2	Reserved	Reserved	00

^[1] LPC2378/88 only. These bits are reserved on LPC2377.

9.5.3 Pin Function Select register 2 (PINSEL2 - 0xE002 C008)

The PINSEL2 register controls the functions of the pins. The direction control bit in the IO1DIR register (or the FIO1DIR register if the enhanced GPIO function is selected for port 1) is effective only when the GPIO function is selected for a pin. For other functions, the direction is controlled automatically.

9.5.3.1 100-pin packages and 144-pin packages

Table 109. Pin function select register 2 (PINSEL2 - address 0xE002 C008) bit description (LPC2364/65/66/67/68, LPC2377/78, LPC2387, LPC2388)

	(,		, = =====,		
PINSEL2	Pin name	Function when 00	Function when 01	Function when 10	Function when 11	Reset value
1:0	P1.0	GPIO Port 1.0	ENET_TXD0	Reserved	Reserved	00
3:2	P1.1	GPIO Port 1.1	ENET_TXD1	Reserved	Reserved	00
5:4	P1.2	Reserved	Reserved	Reserved	Reserved	00
7:6	P1.3	Reserved	Reserved	Reserved	Reserved	00
9:8	P1.4	GPIO Port 1.4	ENET_TX_EN	Reserved	Reserved	00
11:10	P1.5	Reserved	Reserved	Reserved	Reserved	00
13:12	P1.6	Reserved	Reserved	Reserved	Reserved	00
15:14	P1.7	Reserved	Reserved	Reserved	Reserved	00
17:16	P1.8	GPIO Port 1.8	ENET_CRS	Reserved	Reserved	00
19:18	P1.9	GPIO Port 1.9	ENET_RXD0	Reserved	Reserved	00
21:20	P1.10	GPIO Port 1.10	ENET_RXD1	Reserved	Reserved	00
23:22	P1.11	Reserved	Reserved	Reserved	Reserved	00
25:24	P1.12	Reserved	Reserved	Reserved	Reserved	00
27:26	P1.13	Reserved	Reserved	Reserved	Reserved	00
29:28	P1.14	GPIO Port 1.14	ENET_RX_ER	Reserved	Reserved	00
31:30	P1.15	GPIO Port 1.15	ENET_REF_CLK	Reserved	Reserved	00

9.5.4 Pin Function Select Register 3 (PINSEL3 - 0xE002 C00C)

The PINSEL3 register controls the functions of the pins. The direction control bit in the IO1DIR register (or the FIO1DIR register if the enhanced GPIO function is selected for port 1) is effective only when the GPIO function is selected for a pin. For other functions, direction is controlled automatically.

^[2] Pins P027] and P0[28] are open-drain for I²C0 and GPIO functionality for I²C-bus compliance.

Chapter 9: LPC23XX Pin connect block

9.5.4.1 100-pin packages

Table 110. Pin function select register 3 (PINSEL3 - address 0xE002 C00C) bit description (LPC2361/62/64/65/66/67/68 and LPC2387)

PINSEL3 Pin name Function when 00 Function when 01 Function when 10 Function when 11 Reset value 1:0 P1.16 GPIO Port 1.16 ENET_MDC Reserved Reserved 00 3:2 P1.17 GPIO Port 1.17 ENET_MDIO Reserved Reserved 00 5:4 P1.18 GPIO Port 1.18 USB_UP_LED1[1] PWM1.1 CAP1.0 00 7:6 P1.19 GPIO Port 1.19 USB_TX_E1[2] USB_PPWR1 CAP1.1 00 9:8 P1.20 GPIO Port 1.20 USB_TX_DP1[2] PWM1.2 SCK0 00 11:10 P1.21 GPIO Port 1.21 USB_TX_DM1[2] PWM1.3 SSEL0 00 13:12 P1.22 GPIO Port 1.22 USB_RCV1[2] USB_PWRD1 MAT1.0 00 15:14 P1.23 GPIO Port 1.23 USB_RX_DM1[2] PWM1.4 MISO0 00 17:16 P1.24 GPIO Port 1.25 USB_LS1[2] USB_HSTEN MAT1.1 00 21:20 P1.26 GPIO P				· · · · · · · · · · · · · · · · · · ·			
3:2 P1.17 GPIO Port 1.17 ENET_MDIO Reserved Reserved 00 5:4 P1.18 GPIO Port 1.18 USB_UP_LED1[1] PWM1.1 CAP1.0 00 7:6 P1.19 GPIO Port 1.19 USB_TX_E1[2] USB_PPWR1 CAP1.1 00 9:8 P1.20 GPIO Port 1.20 USB_TX_DP1[2] PWM1.2 SCK0 00 11:10 P1.21 GPIO Port 1.21 USB_TX_DM1[2] PWM1.3 SSEL0 00 13:12 P1.22 GPIO Port 1.22 USB_RCV1[2] USB_PWRD1 MAT1.0 00 15:14 P1.23 GPIO Port 1.23 USB_RX_DP1[2] PWM1.4 MISO0 00 17:16 P1.24 GPIO Port 1.24 USB_RX_DM1[2] PWM1.5 MOSI0 00 19:18 P1.25 GPIO Port 1.25 USB_LS1[2] USB_HSTEN MAT1.1 00 21:20 P1.26 GPIO Port 1.27 USB_INT1[2] PWM1.6 CAP0.0 00 23:22 P1.27 GPIO Port 1.27	PINSEL3						
5:4 P1.18 GPIO Port 1.18 USB_UP_LED1[1] PWM1.1 CAP1.0 00 7:6 P1.19 GPIO Port 1.19 USB_TX_E1[2] USB_PPWR1 CAP1.1 00 9:8 P1.20 GPIO Port 1.20 USB_TX_DP1[2] PWM1.2 SCK0 00 11:10 P1.21 GPIO Port 1.21 USB_TX_DM1[2] PWM1.3 SSEL0 00 13:12 P1.22 GPIO Port 1.22 USB_RCV1[2] USB_PWRD1 MAT1.0 00 15:14 P1.23 GPIO Port 1.23 USB_RX_DP1[2] PWM1.4 MISO0 00 17:16 P1.24 GPIO Port 1.24 USB_RX_DM1[2] PWM1.5 MOSI0 00 19:18 P1.25 GPIO Port 1.25 USB_LS1[2] USB_HSTEN MAT1.1 00 21:20 P1.26 GPIO Port 1.26 USB_SPND1[2] PWM1.6 CAP0.0 00 23:22 P1.27 GPIO Port 1.27 USB_INT1[2] USB_OVRCR CAP0.1 00	1:0	P1.16	GPIO Port 1.16	ENET_MDC	Reserved	Reserved	00
7:6 P1.19 GPIO Port 1.19 USB_TX_E121 USB_PPWR1 CAP1.1 00 9:8 P1.20 GPIO Port 1.20 USB_TX_DP1121 PWM1.2 SCK0 00 11:10 P1.21 GPIO Port 1.21 USB_TX_DM121 PWM1.3 SSEL0 00 13:12 P1.22 GPIO Port 1.22 USB_RCV121 USB_PWRD1 MAT1.0 00 15:14 P1.23 GPIO Port 1.23 USB_RX_DP121 PWM1.4 MISO0 00 17:16 P1.24 GPIO Port 1.24 USB_RX_DM121 PWM1.5 MOSI0 00 19:18 P1.25 GPIO Port 1.25 USB_LS121 USB_HSTEN MAT1.1 00 21:20 P1.26 GPIO Port 1.26 USB_SSPND121 PWM1.6 CAP0.0 00 23:22 P1.27 GPIO Port 1.27 USB_INT121 USB_OVRCR CAP0.1 00	3:2	P1.17	GPIO Port 1.17	ENET_MDIO	Reserved	Reserved	00
9:8 P1.20 GPIO Port 1.20 USB_TX_DP1[2] PWM1.2 SCK0 00 11:10 P1.21 GPIO Port 1.21 USB_TX_DM1[2] PWM1.3 SSEL0 00 13:12 P1.22 GPIO Port 1.22 USB_RCV1[2] USB_PWRD1 MAT1.0 00 15:14 P1.23 GPIO Port 1.23 USB_RX_DP1[2] PWM1.4 MISO0 00 17:16 P1.24 GPIO Port 1.24 USB_RX_DM1[2] PWM1.5 MOSI0 00 19:18 P1.25 GPIO Port 1.25 USB_LS1[2] USB_HSTEN MAT1.1 00 21:20 P1.26 GPIO Port 1.26 USB_SSPND1[2] PWM1.6 CAP0.0 00 23:22 P1.27 GPIO Port 1.27 USB_INT1[2] USB_OVRCR CAP0.1 00	5:4	P1.18	GPIO Port 1.18	USB_UP_LED1[1]	PWM1.1	CAP1.0	00
11:10 P1.21 GPIO Port 1.21 USB_TX_DM1[2] PWM1.3 SSEL0 00 13:12 P1.22 GPIO Port 1.22 USB_RCV1[2] USB_PWRD1 MAT1.0 00 15:14 P1.23 GPIO Port 1.23 USB_RX_DP1[2] PWM1.4 MISO0 00 17:16 P1.24 GPIO Port 1.24 USB_RX_DM1[2] PWM1.5 MOSI0 00 19:18 P1.25 GPIO Port 1.25 USB_LS1[2] USB_HSTEN MAT1.1 00 21:20 P1.26 GPIO Port 1.26 USB_SSPND1[2] PWM1.6 CAP0.0 00 23:22 P1.27 GPIO Port 1.27 USB_INT1[2] USB_OVRCR CAP0.1 00	7:6	P1.19	GPIO Port 1.19	USB_TX_E1 ²	-	CAP1.1	00
13:12 P1.22 GPIO Port 1.22 USB_RCV1[2] USB_PWRD1 MAT1.0 00 15:14 P1.23 GPIO Port 1.23 USB_RX_DP1[2] PWM1.4 MISO0 00 17:16 P1.24 GPIO Port 1.24 USB_RX_DM1[2] PWM1.5 MOSI0 00 19:18 P1.25 GPIO Port 1.25 USB_LS1[2] USB_HSTEN MAT1.1 00 21:20 P1.26 GPIO Port 1.26 USB_SSPND1[2] PWM1.6 CAP0.0 00 23:22 P1.27 GPIO Port 1.27 USB_INT1[2] USB_OVRCR CAP0.1 00	9:8	P1.20	GPIO Port 1.20	USB_TX_DP1[2]	PWM1.2	SCK0	00
15:14 P1.23 GPIO Port 1.23 USB_RX_DP1[2] PWM1.4 MISO0 00 17:16 P1.24 GPIO Port 1.24 USB_RX_DM1[2] PWM1.5 MOSI0 00 19:18 P1.25 GPIO Port 1.25 USB_LS1[2] USB_HSTEN MAT1.1 00 21:20 P1.26 GPIO Port 1.26 USB_SSPND1[2] PWM1.6 CAP0.0 00 23:22 P1.27 GPIO Port 1.27 USB_INT1[2] USB_OVRCR CAP0.1 00	11:10	P1.21	GPIO Port 1.21	USB_TX_DM12	PWM1.3	SSEL0	00
17:16 P1.24 GPIO Port 1.24 USB_RX_DM12 PWM1.5 MOSIO 00 19:18 P1.25 GPIO Port 1.25 USB_LS12 USB_HSTEN MAT1.1 00 21:20 P1.26 GPIO Port 1.26 USB_SSPND12 PWM1.6 CAP0.0 00 23:22 P1.27 GPIO Port 1.27 USB_INT12 USB_OVRCR CAP0.1 00	13:12	P1.22	GPIO Port 1.22	USB_RCV1 ²	-	MAT1.0	00
19:18 P1.25 GPIO Port 1.25 USB_LS121 USB_HSTEN MAT1.1 00 21:20 P1.26 GPIO Port 1.26 USB_SSPND121 PWM1.6 CAP0.0 00 23:22 P1.27 GPIO Port 1.27 USB_INT121 USB_OVRCR CAP0.1 00 121 121 USB_OVRCR CAP0.1 00 00	15:14	P1.23	GPIO Port 1.23	USB_RX_DP12	PWM1.4	MISO0	00
T 2 21:20 P1.26 GPIO Port 1.26 USB_SSPND12 PWM1.6 CAP0.0 00 23:22 P1.27 GPIO Port 1.27 USB_INT12 USB_OVRCR CAP0.1 00 12 12	17:16	P1.24	GPIO Port 1.24	USB_RX_DM12	PWM1.5	MOSI0	00
23:22 P1.27 GPIO Port 1.27 USB_INT1 USB_OVRCR CAP0.1 00	19:18	P1.25	GPIO Port 1.25	USB_LS1[2]		MAT1.1	00
12	21:20	P1.26	GPIO Port 1.26	USB_SSPND1[2]	PWM1.6	CAP0.0	00
OF OA DA OO ODIO DI 14 OO HOD OOLA[2] DOADA O MATO O	23:22	P1.27	GPIO Port 1.27	USB_INT1[2]		CAP0.1	00
25:24 P1.28 GPIO Port 1.28 USB_SCL12 PCAP1.0 MAT0.0 00	25:24	P1.28	GPIO Port 1.28	USB_SCL1[2]	PCAP1.0	MAT0.0	00
27:26 P1.29 GPIO Port 1.29 USB_SDA1 PCAP1.1 MAT0.1 00	27:26	P1.29	GPIO Port 1.29	USB_SDA12	PCAP1.1	MAT0.1	00
29:28 P1.30 GPIO Port 1.30 Reserved V _{BUS} [1] AD0.4 00	29:28	P1.30	GPIO Port 1.30	Reserved	V _{BUS} [1]	AD0.4	00
31:30 P1.31 GPIO Port 1.31 Reserved SCK1 AD0.5 00	31:30	P1.31	GPIO Port 1.31	Reserved	SCK1	AD0.5	00

^[1] LPC2361/62/64/66/68 and LPC2387 only. These bits are reserved for LPC2365/66.

9.5.4.2 144-pin packages

Table 111. Pin function select register 3 (PINSEL3 - address 0xE002 C00C) bit description (LPC2377/78 and LPC2388)

PINSEL3	Pin name	Function when 00	Function when 01	Function when 10	Function when 11	Reset value
1:0	P1.16	GPIO Port 1.16	ENET_MDC	Reserved	Reserved	00
3:2	P1.17	GPIO Port 1.17	ENET_MDIO	Reserved	Reserved	00
5:4	P1.18	GPIO Port 1.18	USB_UP_LED1[1]	PWM1.1	CAP1.0	00
7:6	P1.19	GPIO Port 1.19	USB_TX_E12	USB_PPWR12	CAP1.1	00
9:8	P1.20	GPIO Port 1.20	USB_TX_DP12	PWM1.2	SCK0	00
11:10	P1.21	GPIO Port 1.21	USB_TX_DM12	PWM1.3	SSEL0	00
13:12	P1.22	GPIO Port 1.22	USB_RCV12	USB_PWRD1[2]	MAT1.0	00
15:14	P1.23	GPIO Port 1.23	USB_RX_DP12	PWM1.4	MISO0	00
17:16	P1.24	GPIO Port 1.24	USB_RX_DM12	PWM1.5	MOSI0	00
19:18	P1.25	GPIO Port 1.25	USB_LS1 ²	USB_HSTEN1[2]	MAT1.1	00
21:20	P1.26	GPIO Port 1.26	USB_SSPND1[2]	PWM1.6	CAP0.0	00

^[2] LPC2361/62 only.

Chapter 9: LPC23XX Pin connect block

Table 111. Pin function select register 3 (PINSEL3 - address 0xE002 C00C) bit description (LPC2377/78 and LPC2388)

PINSEL3	Pin name	Function when 00	Function when 01	Function when 10	Function when 11	Reset value
23:22	P1.27	GPIO Port 1.27	USB_INT1 ²	USB_OVRCR1 2	CAP0.1	00
25:24	P1.28	GPIO Port 1.28	USB_SCL12	PCAP1.0	MAT0.0	00
27:26	P1.29	GPIO Port 1.29	USB_SDA12	PCAP1.1	MAT0.1	00
29:28	P1.30	GPIO Port 1.30	USB_PWRD2[2]	V _{BUS} [1]	AD0.4	00
31:30	P1.31	GPIO Port 1.31	USB_OVRCR2[2]	SCK1	AD0.5	00

^[1] LPC2378 and LPC2388 only. These bits are reserved for LPC2377.

9.5.5 Pin Function Select Register 4 (PINSEL4 - 0xE002 C010)

The PINSEL4 register controls the functions of the pins. The direction control bit in the FIO2DIR register is effective only when the GPIO function is selected for a pin. For other functions, direction is controlled automatically.

9.5.5.1 100-pin packages

Table 112. Pin function select register 4 (PINSEL4 - address 0xE002 C010) bit description (LPC2364/65/66/67/68 and LPC2387)

	•		•			
PINSEL4	Pin name	Function when 00	Function when 01	Function when 10	Function when 11	Reset value
1:0	P2.0	GPIO Port 2.0	PWM1.1	TXD1	TRACECLK[1]	00
3:2	P2.1	GPIO Port 2.1	PWM1.2	RXD1	PIPESTAT0[1]	00
5:4	P2.2	GPIO Port 2.2	PWM1.3	CTS1	PIPESTAT1[1]	00
7:6	P2.3	GPIO Port 2.3	PWM1.4	DCD1	PIPESTAT2[1]	00
9:8	P2.4	GPIO Port 2.4	PWM1.5	DSR1	TRACESYNC[1]	00
11:10	P2.5	GPIO Port 2.5	PWM1.6	DTR1	TRACEPKT0[1]	00
13:12	P2.6	GPIO Port 2.6	PCAP1.0	RI1	TRACEPKT1[1]	00
15:14	P2.7	GPIO Port 2.7	RD2[2]	RTS1	TRACEPKT2[1]	00
17:16	P2.8	GPIO Port 2.8	TD2[2]	TXD2	TRACEPKT3[1]	00
19:18	P2.9	GPIO Port 2.9	USB_CONNECT1[2]	RXD2	EXTINO[1]	00
21:20	P2.10	GPIO Port 2.10	EINT0	Reserved	Reserved	00
23:22	P2.11	GPIO Port 2.11	EINT1	MCIDAT1	I2STX_CLK	00
25:24	P2.12	GPIO Port 2.12	EINT2	MCIDAT2	I2STX_WS	00
27:26	P2.13	GPIO Port 2.13	EINT3	MCIDAT3	I2STX_SDA	00
29:28	P2.14	Reserved	Reserved	Reserved	Reserved	00
31:30	P2.15	Reserved	Reserved	Reserved	Reserved	00

^[1] See Section 9.5.11 "Pin Function Select Register 10 (PINSEL10 - 0xE002 C028)" for details on using the ETM functionality.

^[2] LPC2388 only. These bits are reserved for LPC2377/78.

^[2] LPC2361/62/64/66/68 and LPC2387 only. These bits are reserved on LPC2365/67.

Chapter 9: LPC23XX Pin connect block

9.5.5.2 144-pin packages

Table 113. Pin function select register 4 (PINSEL4 - address 0xE002 C010) bit description (LPC2377/78 and LPC2388)

PINSEL4	Pin name	Function when 00	Function when 01	Function when 10	Function when 11	Reset value
1:0	P2.0	GPIO Port 2.0	PWM1.1	TXD1	TRACECLK[1]	00
3:2	P2.1	GPIO Port 2.1	PWM1.2	RXD1	PIPESTAT0[1]	00
5:4	P2.2	GPIO Port 2.2	PWM1.3	CTS1	PIPESTAT1[1]	00
7:6	P2.3	GPIO Port 2.3	PWM1.4	DCD1	PIPESTAT2[1]	00
9:8	P2.4	GPIO Port 2.4	PWM1.5	DSR1	TRACESYNC[1]	00
11:10	P2.5	GPIO Port 2.5	PWM1.6	DTR1	TRACEPKT0[1]	00
13:12	P2.6	GPIO Port 2.6	PCAP1.0	RI1	TRACEPKT1[1]	00
15:14	P2.7	GPIO Port 2.7	RD2[2]	RTS1	TRACEPKT2[1]	00
17:16	P2.8	GPIO Port 2.8	TD2[2]	TXD2	TRACEPKT3[1]	00
19:18	P2.9	GPIO Port 2.9	USB_CONNECT1[2]	RXD2	EXTINO[1]	00
21:20	P2.10	GPIO Port 2.10	EINT0	Reserved	Reserved	00
23:22	P2.11	GPIO Port 2.11	EINT1	MCIDAT1	I2STX_CLK	00
25:24	P2.12	GPIO Port 2.12	EINT2	MCIDAT2	I2STX_WS	00
27:26	P2.13	GPIO Port 2.13	EINT3	MCIDAT3	I2STX_SDA	00
29:28	P2.14	Reserved	Reserved	Reserved	Reserved	00
31:30	P2.15	Reserved	Reserved	Reserved	Reserved	00

^[1] See Section 9.5.11 "Pin Function Select Register 10 (PINSEL10 - 0xE002 C028)" for details on using the ETM functionality.

9.5.6 Pin Function Select Register 5 (PINSEL5 - 0xE002 C014)

The PINSEL5 register is not used on the LPC23XX.

9.5.7 Pin Function Select Register 6 (PINSEL6 - 0xE002 C018)

The PINSEL6 register controls the functions of the pins. The direction control bit in the FIO3DIR register is effective only when the GPIO function is selected for a pin. For other functions, direction is controlled automatically.

9.5.7.1 100-pin packages

The PINSEL6 is not used for LPC236x and LPC2387. All bits are reserved.

9.5.7.2 144-pin packages

Table 114. Pin function select register 6 (PINSEL6 - address 0xE002 C018) bit description (LPC2377/78 and LPC2388)

PINSEL6	Pin name	Function when 00	Function when 01	Function when 10	Function when 11	Reset value
1:0	P3.0	GPIO Port 3.0	D0	Reserved	Reserved	00
3:2	P3.1	GPIO Port 3.1	D1	Reserved	Reserved	00
5:4	P3.2	GPIO Port 3.2	D2	Reserved	Reserved	00

UM10211

^[2] LPC2378 and LPC2388 only. These bits are reserved on LPC2377.

Chapter 9: LPC23XX Pin connect block

Table 114.	Pin function select register 6 (PINSEL6 - address 0xE002 C018) bit description
	(LPC2377/78 and LPC2388)

PINSEL6	Pin name	Function when 00	Function when 01	Function when 10	Function when 11	Reset value
7:6	P3.3	GPIO Port 3.3	D3	Reserved	Reserved	00
9:8	P3.4	GPIO Port 3.4	D4	Reserved	Reserved	00
11:10	P3.5	GPIO Port 3.5	D5	Reserved	Reserved	00
13:12	P3.6	GPIO Port 3.6	D6	Reserved	Reserved	00
15:14	P3.7	GPIO Port 3.7	D7	Reserved	Reserved	00
17:16	P3.8	Reserved	Reserved	Reserved	Reserved	00
19:18	P3.9	Reserved	Reserved	Reserved	Reserved	00
21:20	P3.10	Reserved	Reserved	Reserved	Reserved	00
23:22	P3.11	Reserved	Reserved	Reserved	Reserved	00
25:24	P3.12	Reserved	Reserved	Reserved	Reserved	00
27:26	P3.13	Reserved	Reserved	Reserved	Reserved	00
29:28	P3.14	Reserved	Reserved	Reserved	Reserved	00
31:30	P3.15	Reserved	Reserved	Reserved	Reserved	00

9.5.8 Pin Function Select Register 7 (PINSEL7 - 0xE002 C01C)

The PINSEL7 register controls the functions of the pins. The direction control bit in the FIO3DIR register is effective only when the GPIO function is selected for a pin. For other functions, direction is controlled automatically.

9.5.8.1 100-pin packages

Table 115. Pin function select register 7 (PINSEL7 - address 0xE002 C01C) bit description (LPC2364/65/66/67/68 and LPC2387)

PINSEL7	Pin name	Function when 00	Function when 01	Function when 10	Function when 11	Reset value
1:0	P3.16	Reserved	Reserved	Reserved	Reserved	00
3:2	P3.17	Reserved	Reserved	Reserved	Reserved	00
5:4	P3.18	Reserved	Reserved	Reserved	Reserved	00
7:6	P3.19	Reserved	Reserved	Reserved	Reserved	00
9:8	P3.20	Reserved	Reserved	Reserved	Reserved	00
11:10	P3.21	Reserved	Reserved	Reserved	Reserved	00
13:12	P3.22	Reserved	Reserved	Reserved	Reserved	00
15:14	P3.23	Reserved	Reserved	Reserved	Reserved	00
17:16	P3.24	Reserved	Reserved	Reserved	Reserved	00
19:18	P3.25	GPIO Port 3.25	Reserved	MAT0.0	PWM1.2	00
21:20	P3.26	GPIO Port 3.26	Reserved	MAT0.1	PWM1.3	00
23:22	P3.27	Reserved	Reserved	Reserved	Reserved	00
25:24	P3.28	Reserved	Reserved	Reserved	Reserved	00
27:26	P3.29	Reserved	Reserved	Reserved	Reserved	00
29:28	P3.30	Reserved	Reserved	Reserved	Reserved	00
31:30	P3.31	Reserved	Reserved	Reserved	Reserved	00

Chapter 9: LPC23XX Pin connect block

9.5.8.2 144-pin packages

Table 116. Pin function select register 7 (PINSEL7 - address 0xE002 C01C) bit description (LPC2377/78 and LPC2388)

PINSEL7	Pin name	Function when 00	Function when 01	Function when 10	Function when 11	Reset value
1:0	P3.16	Reserved	Reserved	Reserved	Reserved	00
3:2	P3.17	Reserved	Reserved	Reserved	Reserved	00
5:4	P3.18	Reserved	Reserved	Reserved	Reserved	00
7:6	P3.19	Reserved	Reserved	Reserved	Reserved	00
9:8	P3.20	Reserved	Reserved	Reserved	Reserved	00
11:10	P3.21	Reserved	Reserved	Reserved	Reserved	00
13:12	P3.22	Reserved	Reserved	Reserved	Reserved	00
15:14	P3.23	GPIO Port 3.23	Reserved	CAP0.0	PCAP1.0	00
17:16	P3.24	GPIO Port 3.24	Reserved	CAP0.1	PWM1.1	00
19:18	P3.25	GPIO Port 3.25	Reserved	MAT0.0	PWM1.2	00
21:20	P3.26	GPIO Port 3.26	Reserved	MAT0.1	PWM1.3	00
23:22	P3.27	Reserved	Reserved	Reserved	Reserved	00
25:24	P3.28	Reserved	Reserved	Reserved	Reserved	00
27:26	P3.29	Reserved	Reserved	Reserved	Reserved	00
29:28	P3.30	Reserved	Reserved	Reserved	Reserved	00
31:30	P3.31	Reserved	Reserved	Reserved	Reserved	00

9.5.9 Pin Function Select Register 8 (PINSEL8 - 0xE002 C020)

The PINSEL8 register controls the functions of the pins. The direction control bit in the FIO4DIR register is effective only when the GPIO function is selected for a pin. For other functions, direction is controlled automatically.

9.5.9.1 100-pin packages

The PINSEL8 is not used for LPC2364/65/66/67/68 and LPC2387. All bits are reserved.

9.5.9.2 144-pin packages

Table 117. Pin function select register 8 (PINSEL8 - address 0xE002 C020) bit description (LPC2377/78 and LPC2388)

PINSEL8	Pin name	Function when 00	Function when 01	Function when 10	Function when 11	Reset value
1:0	P4.0	GPIO Port 4.0	A0	Reserved	Reserved	00
3:2	P4.1	GPIO Port 4.1	A1	Reserved	Reserved	00
5:4	P4.2	GPIO Port 4.2	A2	Reserved	Reserved	00
7:6	P4.3	GPIO Port 4.3	A3	Reserved	Reserved	00
9:8	P4.4	GPIO Port 4.4	A4	Reserved	Reserved	00
11:10	P4.5	GPIO Port 4.5	A5	Reserved	Reserved	00
13:12	P4.6	GPIO Port 4.6	A6	Reserved	Reserved	00
15:14	P4.7	GPIO Port 4.7	A7	Reserved	Reserved	00
17:16	P4.8	GPIO Port 4.8	A8	Reserved	Reserved	00

Chapter 9: LPC23XX Pin connect block

Table 117. Pin function select register 8 (PINSEL8 - address 0xE002 C020) bit description (LPC2377/78 and LPC2388)

PINSEL8	Pin name	Function when 00	Function when 01	Function when 10	Function when 11	Reset value
19:18	P4.9	GPIO Port 4.9	A9	Reserved	Reserved	00
21:20	P4.10	GPIO Port 4.10	A10	Reserved	Reserved	00
23:22	P4.11	GPIO Port 4.11	A11	Reserved	Reserved	00
25:24	P4.12	GPIO Port 4.12	A12	Reserved	Reserved	00
27:26	P4.13	GPIO Port 4.13	A13	Reserved	Reserved	00
29:28	P4.14	GPIO Port 4.14	A14	Reserved	Reserved	00
31:30	P4.15	GPIO Port 4.15	A15	Reserved	Reserved	00

9.5.10 Pin Function Select Register 9 (PINSEL9 - 0xE002 C024)

The PINSEL9 register controls the functions of the pins. The direction control bit in the FIO4DIR register is effective only when the GPIO function is selected for a pin. For other functions, direction is controlled automatically.

9.5.10.1 100-pin packages

Table 118. Pin function select register 9 (PINSEL9 - address 0xE002 C024) bit description (LPC2364/66/65/67/68 and LPC2387)

			- /			
PINSEL9	Pin name	Function when 00	Function when 01	Function when 10	Function when 11	Reset value
1:0	P4.16	Reserved	Reserved	Reserved	Reserved	00
3:2	P4.17	Reserved	Reserved	Reserved	Reserved	00
5:4	P4.18	Reserved	Reserved	Reserved	Reserved	00
7:6	P4.19	Reserved	Reserved	Reserved	Reserved	00
9:8	P4.20	Reserved	Reserved	Reserved	Reserved	00
11:10	P4.21	Reserved	Reserved	Reserved	Reserved	00
13:12	P4.22	Reserved	Reserved	Reserved	Reserved	00
15:14	P4.23	Reserved	Reserved	Reserved	Reserved	00
17:16	P4.24	Reserved	Reserved	Reserved	Reserved	00
19:18	P4.25	Reserved	Reserved	Reserved	Reserved	00
21:20	P4.26	Reserved	Reserved	Reserved	Reserved	00
23:22	P4.27	Reserved	Reserved	Reserved	Reserved	00
25:24	P4.28	GPIO Port 4.28	Reserved	MAT2.0	TXD3	00
27:26	P4.29	GPIO Port 4.29	Reserved	MAT2.1	RXD3	00
29:28	P4.30	Reserved	Reserved	Reserved	Reserved	00
31:30	P4.31	Reserved	Reserved	Reserved	Reserved	00

Chapter 9: LPC23XX Pin connect block

9.5.10.2 144-pin packages

Table 119. Pin function select register 9 (PINSEL9 - address 0xE002 C024) bit description (LPC2377/78 and LPC2388)

	· .					_
PINSEL9	Pin name	Function when 00	Function when 01	Function when 10	Function when 11	Reset value
1:0	P4.16	Reserved	Reserved	Reserved	Reserved	00
3:2	P4.17	Reserved	Reserved	Reserved	Reserved	00
5:4	P4.18	Reserved	Reserved	Reserved	Reserved	00
7:6	P4.19	Reserved	Reserved	Reserved	Reserved	00
9:8	P4.20	Reserved	Reserved	Reserved	Reserved	00
11:10	P4.21	Reserved	Reserved	Reserved	Reserved	00
13:12	P4.22	Reserved	Reserved	Reserved	Reserved	00
15:14	P4.23	Reserved	Reserved	Reserved	Reserved	00
17:16	P4.24	GPIO Port 4.24	ŌE	Reserved	Reserved	00
19:18	P4.25	GPIO Port 4.25	-	BLS0	Reserved	00
21:20	P4.26	Reserved	Reserved	Reserved	Reserved	00
23:22	P4.27	Reserved	Reserved	Reserved	Reserved	00
25:24	P4.28	GPIO Port 4.28	Reserved	MAT2.0	TXD3	00
27:26	P4.29	GPIO Port 4.29	Reserved	MAT2.1	RXD3	00
29:28	P4.30	GPIO Port 4.30	CS0	Reserved	Reserved	00
31:30	P4.31	GPIO Port 4.31	CS1	Reserved	Reserved	00

9.5.11 Pin Function Select Register 10 (PINSEL10 - 0xE002 C028)

Only bit 3 of this register is used to control the ETM interface pins.

The value of the RTCK I/O pin is sampled when the external reset is asserted. When RTCK pin is low during external reset, bit 3 in PINSEL10 is set to enable the ETM interface pins. When RTCK pin is high during external reset, bit 3 in PINSEL10 is cleared to disable the ETM interface pins.

The ETM interface control pin can also be modified by the software.

Table 120. Pin function select register 10 (PINSEL10 - address 0xE002 C028) bit description

				•
Bit	Symbol	Value	Description	Reset value
2:0	-	-	Reserved. Software should not write 1 to these bits.	NA
3 GPIO/TRACE	0	ETM interface pins control. ETM interface is disabled.	RTCK, see the text	
		1	ETM interface is enabled. ETM signals are available on the pins hosting them regardless of the PINSEL4 content.	- above
31:4	-	-	Reserved. Software should not write 1 to these bits.	NA

9.5.12 Pin Mode select register 0 (PINMODE0 - 0xE002 C040)

This register controls pull-up/pull-down resistor configuration for PORT0 pins 0 to 15.

Chapter 9: LPC23XX Pin connect block

Table 121. Pin Mode select register 0 (PINMODE0 - address 0xE002 C040) bit description

PINMODE0	Symbol	Value	Description	Reset value
1:0	P0.00MODE		PORT0 pin 0 on-chip pull-up/down resistor control.	00
		00	P0.00 pin has a pull-up resistor enabled.	
		01	Reserved. This value should not be used.	
		10	P0.00 pin has neither pull-up nor pull-down.	
		11	P0.00 has a pull-down resistor enabled.	
31:30	31:30 P0.15MODE		PORT0 pin 15 on-chip pull-up/down resistor control.	00

9.5.13 Pin Mode select register 1 (PINMODE1 - 0xE002 C044)

This register controls pull-up/pull-down resistor configuration for PORT0 pins 16 to 26. For details see Section 9.4 "Pin mode select register values".

Table 122. Pin Mode select register 1 (PINMODE1 - address 0xE002 C044) bit description

PINMODE1	Symbol	Description	Reset value
1:0	P0.16MODE	PORT0 pin 16 on-chip pull-up/down resistor control.	00
•••			
21:20	P0.26MODE	PORT0 pin 26 on-chip pull-up/down resistor control.	00
31:21	-	Reserved	

Remark: The pin mode cannot be selected for pins P0[27] to P0[31]. Pins P0[27] and P0[28] are dedicated I²C open-drain pins without pull-up/down. Pins P0[29], P0[30], P0[31] are USB specific pins without configurable pull-up or pull-down resistors.

9.5.14 Pin Mode select register 2 (PINMODE2 - 0xE002 C048)

This register controls pull-up/pull-down resistor configuration for PORT1 pins 0 to 15. For details see Section 9.4 "Pin mode select register values".

Table 123. Pin Mode select register 2 (PINMODE2 - address 0xE002 C048) bit description

PINMODE2	Symbol	Description	Reset value
1:0	P1.00MODE	PORT1 pin 0 on-chip pull-up/down resistor control.	00
31:30	P1.15MODE	PORT1 pin 15 on-chip pull-up/down resistor control.	00

9.5.15 Pin Mode select register 3 (PINMODE3 - 0xE002 C04C)

This register controls pull-up/pull-down resistor configuration for PORT1 pins 16 to 31. For details see Section 9.4 "Pin mode select register values".

Chapter 9: LPC23XX Pin connect block

Table 124. Pin Mode select register 3 (PINMODE3 - address 0xE002 C04C) bit description

PINMODE3	Symbol	Description	Reset value
1:0	P1.16MODE	PORT1 pin 16 on-chip pull-up/down resistor control.	00
31:30	P1.31MODE	PORT1 pin 31 on-chip pull-up/down resistor control.	00

9.5.16 Pin Mode select register 4 (PINMODE4 - 0xE002 C050)

This register controls pull-up/pull-down resistor configuration for PORT2 pins 0 to 15. For details see Section 9.4 "Pin mode select register values".

Table 125. Pin Mode select register 4 (PINMODE4 - address 0xE002 C050) bit description

PINMODE4	Symbol	Description	Reset value
1:0	P2.00MODE	PORT2 pin 0 on-chip pull-up/down resistor control.	00
31:30	P2.15MODE	PORT2 pin 15 on-chip pull-up/down resistor control.	00

9.5.17 Pin Mode select register 5 (PINMODE5 - 0xE002 C054)

This register controls pull-up/pull-down resistor configuration for PORT2 pins 16 to 31. For details see Section 9.4 "Pin mode select register values".

Table 126. Pin Mode select register 5 (PINMODE5 - address 0xE002 C054) bit description

PINMODE5	Symbol	Description	Reset value
1:0	P2.16MODE	Reserved	00
31:30	P2.31MODE	Reserved	00

9.5.18 Pin Mode select register 6 (PINMODE6 - 0xE002 C058)

This register controls pull-up/pull-down resistor configuration for PORT3 pins 0 to 15. For details see Section 9.4 "Pin mode select register values".

Table 127. Pin Mode select register 6 (PINMODE6 - address 0xE002 C058) bit description

PINMODE6	Symbol	Description	Reset value
1:0	P3.00MODE	PORT3 pin 0 on-chip pull-up/down resistor control.	00
31:30	P3.15MODE	PORT3 pin 15 on-chip pull-up/down resistor control.	00

9.5.19 Pin Mode select register 7 (PINMODE7 - 0xE002 C05C)

This register controls pull-up/pull-down resistor configuration for PORT3 pins 16 to 31. For details see Section 9.4 "Pin mode select register values".

Chapter 9: LPC23XX Pin connect block

Table 128. Pin Mode select register 7 (PINMODE7 - address 0xE002 C05C) bit description

PINMODE7	Symbol	Description	Reset value
1:0	P3.16MODE	PORT3 pin 16 on-chip pull-up/down resistor control.	00
31:30	P3.31MODE	PORT3 pin 31 on-chip pull-up/down resistor control.	00

9.5.20 Pin Mode select register 8 (PINMODE8 - 0xE002 C060)

This register controls pull-up/pull-down resistor configuration for PORT4 pins 0 to 15. For details see Section 9.4 "Pin mode select register values".

Table 129. Pin Mode select register 8 (PINMODE8 - address 0xE002 C060) bit description

PINMODE8	Symbol	Description	
1:0	P4.00MODE	PORT4 pin 0 on-chip pull-up/down resistor control.	00
31:30	P4.15MODE	PORT4 pin 15 on-chip pull-up/down resistor control.	00

9.5.21 Pin Mode select register 9 (PINMODE9 - 0xE002 C064)

This register controls pull-up/pull-down resistor configuration for PORT4 pins 16 to 31. For details see Section 9.4 "Pin mode select register values".

Table 130. Pin Mode select register 9 (PINMODE9 - address 0xE002 C064) bit description

PINMODE9	Symbol	Description	Reset value
1:0	P4.16MODE	PORT4 pin 16 on-chip pull-up/down resistor control.	00
31:30	P4.31MODE	PORT4 pin 31 on-chip pull-up/down resistor control.	00

UM10211

Chapter 10: LPC23XX General Purpose Input/Output ports (GPIO)

Rev. 4.1 — 5 September 2012

User manual

10.1 Basic configuration

GPIOs are configured using the following registers:

- 1. Power: always enabled.
- 2. Clock: For fast GPIO ports, see <u>Section 4.7.1</u>. For legacy GPIO ports, use the PCLKSEL1 register (Table 50).
- 3. Pins: Select GPIO pins and their modes in PINSEL0 to PINSEL10 and PINMODE0 to PINMODE10 (Section 9.5).
- 4. Wake-up: Use the INTWAKE register (<u>Table 55</u>) to configure GPIO ports 0 and 2 for wake-up if needed.
- Interrupts: Enable GPIO interrupts in IO0/2IntEnR (<u>Table 150</u>) or IO0/2IntEnF (<u>Table 151</u>). Interrupts are enabled in the VIC using the VICIntEnable register (<u>Table 76</u>).

10.2 Features

10.2.1 Digital I/O ports

- GPIO PORT0 and PORT1 are ports accessible via either the group of registers providing enhanced features and accelerated port access or the legacy group of registers. PORT2/3/4 are accessed as fast ports only.
- Accelerated GPIO functions:
 - GPIO registers are relocated to the ARM local bus so that the fastest possible I/O timing can be achieved
 - Mask registers allow treating sets of port bits as a group, leaving other bits unchanged
 - All GPIO registers are byte and half-word addressable
 - Entire port value can be written in one instruction
- Bit-level set and clear registers allow a single instruction set or clear of any number of bits in one port
- Direction control of individual bits
- All I/O default to inputs after reset
- Backward compatibility with other earlier devices is maintained with legacy registers appearing at the original addresses on the APB bus

10.2.2 Interrupt generating digital ports

- PORT0 and PORT2 provide an interrupt for each port pin.
- Each interrupt can be programmed to generate an interrupt on a rising edge, a falling edge, or both.

UM10211

Chapter 10: LPC23XX General Purpose Input/Output ports (GPIO)

- Edge detection is asynchronous, so it may operate when clocks are not present, such as during Power-down mode. With this feature, level triggered interrupts are not needed.
- Each enabled interrupt contributes to a Wake-up signal that can be used to bring the part out of Power-down mode.
- Registers provide software a view of pending rising edge interrupts, pending falling edge interrupts, and overall pending GPIO interrupts.
- GPIO0 and GPIO2 interrupts share the same VIC slot with the External Interrupt 3
 event.

10.3 Applications

- General purpose I/O
- Driving LEDs, or other indicators
- Controlling off-chip devices
- Sensing digital inputs, detecting edges
- Bringing the part out of Power Down mode

10.4 Pin description

Table 131. GPIO pin description

		-
Pin Name	Type	Description
P0.[31:0] P1.[31:0] P2.[31:0] P3.[31:0]	Input/ Output	General purpose input/output. These are typically shared with other peripherals functions and will therefore not all be available in an application. Packaging options may affect the number of GPIOs available in a particular device (see <u>Table 2</u> and <u>Table 101</u>).
P4.[31:0]		Some pins may be limited by requirements of the alternate functions of the pin. For example, the pins containing the I ² C0 function are open-drain for any function of that pin. Details may be found in the LPC2300 pin description.

10.5 Register description

LPC2300 has up to five 32-bit General Purpose I/O ports. PORT0 and PORT1 are controlled via two groups of registers as shown in <u>Table 132</u> and <u>Table 133</u>. Apart from them, LPC2300 can have three additional 32-bit ports, PORT2, PORT3 and PORT4. Details on a specific GPIO port usage can be found in <u>Section 8.1</u> and <u>Section 9.5</u>.

Legacy registers shown in <u>Table 132</u> allow backward compatibility with earlier family devices, using existing code. The functions and relative timing of older GPIO implementations is preserved. Only PORT0 and PORT1 can be controlled via the legacy port registers.

The registers in <u>Table 133</u> represent the enhanced GPIO features available on all of the LPC2300's GPIO ports. These registers are located directly on the local bus of the CPU for the fastest possible read and write timing. They can be accessed as byte or half-word long data, too. A mask register allows access to a group of bits in a single GPIO port independently from other bits in the same port.

Chapter 10: LPC23XX General Purpose Input/Output ports (GPIO)

When PORT0 and PORT1 are used, user must select whether these ports will be accessed via registers that provide enhanced features or a legacy set of registers (see Section 3.7 "Other system controls and status flags" on page 38). While both of a port's fast and legacy GPIO registers are controlling the same physical pins, these two port control branches are mutually exclusive and operate independently. For example, changing a pin's output via a fast register will not be observable via the corresponding legacy register.

The following text will refer to the legacy GPIO as "the slow" GPIO, while GPIO equipped with the enhanced features will be referred as "the fast" GPIO.

Table 132. GPIO register map (legacy APB accessible registers)

Generic Name	Description	Access	Reset value[1]	PORTn Register Address & Name
IOPIN	GPIO Port Pin value register. The current state of the GPIO configured port pins can always be read from this register, regardless of pin direction. By writing to this register port's pins will be set to the desired level instantaneously.	R/W	NA	IO0PIN - 0xE002 8000 IO1PIN - 0xE002 8010
IOSET	GPIO Port Output Set register. This register controls the state of output pins in conjunction with the IOCLR register. Writing ones produces highs at the corresponding port pins. Writing zeroes has no effect.	R/W	0x0	IO0SET - 0xE002 8004 IO1SET - 0xE002 8014
IODIR	GPIO Port Direction control register. This register individually controls the direction of each port pin.	R/W	0x0	IO0DIR - 0xE002 8008 IO1DIR - 0xE002 8018
IOCLR	GPIO Port Output Clear register. This register controls the state of output pins. Writing ones produces lows at the corresponding port pins and clears the corresponding bits in the IOSET register. Writing zeroes has no effect.	WO	0x0	IO0CLR - 0xE002 800C IO1CLR - 0xE002 801C

^[1] Reset value reflects the data stored in used bits only. It does not include reserved bits content.

Chapter 10: LPC23XX General Purpose Input/Output ports (GPIO)

Table 133. GPIO register map (local bus accessible registers - enhanced GPIO features)

Generic Name	Description	Access	Reset value[1]	PORTn Register Address & Name
FIODIR	Fast GPIO Port Direction control register. This register individually controls the direction of each port pin.	R/W	0x0	FIOODIR - 0x3FFF C000 FIO1DIR - 0x3FFF C020 FIO2DIR - 0x3FFF C040 FIO3DIR - 0x3FFF C060 FIO4DIR - 0x3FFF C080
FIOMASK	Fast Mask register for port. Writes, sets, clears, and reads to port (done via writes to FIOPIN, FIOSET, and FIOCLR, and reads of FIOPIN) alter or return only the bits enabled by zeros in this register.	R/W	0x0	FIO0MASK - 0x3FFF C010 FIO1MASK - 0x3FFF C030 FIO2MASK - 0x3FFF C050 FIO3MASK - 0x3FFF C070 FIO4MASK - 0x3FFF C090
FIOPIN	Fast Port Pin value register using FIOMASK. The current state of digital port pins can be read from this register, regardless of pin direction or alternate function selection (as long as pins are not configured as an input to ADC). The value read is masked by ANDing with inverted FIOMASK. Writing to this register places corresponding values in all bits enabled by zeros in FIOMASK.	R/W	0x0	FIO0PIN - 0x3FFF C014 FIO1PIN - 0x3FFF C034 FIO2PIN - 0x3FFF C054 FIO3PIN - 0x3FFF C074 FIO4PIN - 0x3FFF C094
	Important: if a FIOPIN register is read, its bit(s) masked with 1 in the FIOMASK register will be set to 0 regardless of the physical pin state.			
FIOSET	Fast Port Output Set register using FIOMASK. This register controls the state of output pins. Writing 1s produces highs at the corresponding port pins. Writing 0s has no effect. Reading this register returns the current contents of the port output register. Only bits enabled by 0 in FIOMASK can be altered.	R/W	0x0	FIO0SET - 0x3FFF C018 FIO1SET - 0x3FFF C038 FIO2SET - 0x3FFF C058 FIO3SET - 0x3FFF C078 FIO4SET - 0x3FFF C098
FIOCLR	Fast Port Output Clear register using FIOMASK0. This register controls the state of output pins. Writing 1s produces lows at the corresponding port pins. Writing 0s has no effect. Only bits enabled by 0 in FIOMASK0 can be altered.	WO	0x0	FIO0CLR - 0x3FFF C01C FIO1CLR - 0x3FFF C03C FIO2CLR - 0x3FFF C05C FIO3CLR - 0x3FFF C07C FIO4CLR - 0x3FFF C09C

^[1] Reset value reflects the data stored in used bits only. It does not include reserved bits content.

Table 134. GPIO interrupt register map

Generic Name	Description	Access	Reset value[1]	PORTn Register Address & Name
IntEnR	GPIO Interrupt Enable for Rising edge.	R/W	0x0	IO0IntEnR - 0xE002 8090 IO2IntEnR - 0xE002 80B0
IntEnF	GPIO Interrupt Enable for Falling edge.	R/W	0x0	IO0IntEnR - 0xE002 8094 IO2IntEnR - 0xE002 80B4
IntStatR	GPIO Interrupt Status for Rising edge.	RO	0x0	IO0IntStatR - 0xE002 8084 IO2IntStatR - 0xE002 80A4
IntStatF	GPIO Interrupt Status for Falling edge.	RO	0x0	IO0IntStatF - 0xE002 8088 IO2IntStatF - 0xE002 80A8
IntClr	GPIO Interrupt Clear.	WO	0x0	IO0IntClr - 0xE002 808C IO2IntClr - 0xE002 80AC
IntStatus	GPIO overall Interrupt Status.	RO	0x00	IOIntStatus - 0xE002 8080

^[1] Reset value reflects the data stored in used bits only. It does not include reserved bits content.

Chapter 10: LPC23XX General Purpose Input/Output ports (GPIO)

10.5.1 GPIO port Direction register IODIR and FIODIR(IO[0/1]DIR - 0xE002 80[0/1]8 and FIO[0/1/2/3/4]DIR - 0x3FFF C0[0/2/4/6/8]0)

This word accessible register is used to control the direction of the pins when they are configured as GPIO port pins. Direction bit for any pin must be set according to the pin functionality.

Remark: GPIO pins P0.29 and P0.30 are shared with the USB D+/– pins and must have the same direction. If either P0DIR bits 29 **or** 30 are configured LOW in the IO0DIR or FIO0DIR registers, both, P0.29 and P0.30, are inputs. If both, P0DIR bit 29 **and** bit 30 are HIGH, both, P0.29 and P0.30, are outputs.

Legacy registers are the IO0DIR and IO1DIR while the enhanced GPIO functions are supported via the FIO0DIR, FIO1DIR, FIO2DIR, FIO3DIR and FIO4DIR registers.

Table 135. GPIO port Direction register (IO0DIR - address 0xE002 8008 and IO1DIR - address 0xE002 8018) bit description

Bit	Symbol	Value	Description	Reset value
31:0	P0xDIR or P1xDIR	0	Slow GPIO Direction PORTx control bits. Bit 0 in IOxDIR controls pin Px.0, bit 31 IOxDIR controls pin Px.31. Controlled pin is an input pin.	0x0
		1	Controlled pin is an output pin.	

Table 136. Fast GPIO port Direction register (FIO[0/1/2/3/4]DIR - address 0x3FFF C0[0/2/4/6/8]0) bit description

Bit	Symbol	Value	Description	Reset value
31:0	FP0xDIR FP1xDIR FP2xDIR	0	Fast GPIO Direction PORTx control bits. Bit 0 in FIOxDIR controls pin Px.0, bit 31 in FIOxDIR controls pin Px.31. Controlled pin is input.	0x0
	FP3xDIR FP4xDIR	1	Controlled pin is output.	

Aside from the 32-bit long and word only accessible FIODIR register, every fast GPIO port can also be controlled via several byte and half-word accessible registers listed in Table 137, too. Next to providing the same functions as the FIODIR register, these additional registers allow easier and faster access to the physical port pins.

Chapter 10: LPC23XX General Purpose Input/Output ports (GPIO)

Table 137. Fast GPIO port Direction control byte and half-word accessible register description

Generic Register name	Description	Register length (bits) & access	Reset value	PORTn Register Address & Name
FIOxDIR0	Fast GPIO Port x Direction control register 0. Bit 0 in FIOxDIR0 register corresponds to pin Px.0 bit 7 to pin Px.7.	8 (byte) R/W	0x00	FIOODIRO - 0x3FFF C000 FIO1DIRO - 0x3FFF C020 FIO2DIRO - 0x3FFF C040 FIO3DIRO - 0x3FFF C060 FIO4DIRO - 0x3FFF C080
FIOxDIR1	Fast GPIO Port x Direction control register 1. Bit 0 in FIOxDIR1 register corresponds to pin Px.8 bit 7 to pin Px.15.	8 (byte) R/W	0x00	FIO0DIR1 - 0x3FFF C001 FIO1DIR1 - 0x3FFF C021 FIO2DIR1 - 0x3FFF C041 FIO3DIR1 - 0x3FFF C061 FIO4DIR1 - 0x3FFF C081
FIO0DIR2	Fast GPIO Port x Direction control register 2. Bit 0 in FIOxDIR2 register corresponds to pin Px.16 bit 7 to pin Px.23.	8 (byte) R/W	0x00	FIOODIR2 - 0x3FFF C002 FIO1DIR2 - 0x3FFF C022 FIO2DIR2 - 0x3FFF C042 FIO3DIR2 - 0x3FFF C062 FIO4DIR2 - 0x3FFF C082
FIOxDIR3	Fast GPIO Port x Direction control register 3. Bit 0 in FIOxDIR3 register corresponds to pin Px.24 bit 7 to pin Px.31.	8 (byte) R/W	0x00	FIO0DIR3 - 0x3FFF C003 FIO1DIR3 - 0x3FFF C023 FIO2DIR3 - 0x3FFF C043 FIO3DIR3 - 0x3FFF C063 FIO4DIR3 - 0x3FFF C083
FIOxDIRL	Fast GPIO Port x Direction control Lower half-word register. Bit 0 in FIOxDIRL register corresponds to pin Px.0 bit 15 to pin Px.15.	16 (half-word) R/W	0x0000	FIO0DIRL - 0x3FFF C000 FIO1DIRL - 0x3FFF C020 FIO2DIRL - 0x3FFF C040 FIO3DIRL - 0x3FFF C060 FIO4DIRL - 0x3FFF C080
FIOxDIRU	Fast GPIO Port x Direction control Upper half-word register. Bit 0 in FIOxDIRU register corresponds to Px.16 bit 15 to Px.31.	16 (half-word) R/W	0x0000	FIO0DIRU - 0x3FFF C002 FIO1DIRU - 0x3FFF C022 FIO2DIRU - 0x3FFF C042 FIO3DIRU - 0x3FFF C062 FIO4DIRU - 0x3FFF C082

10.5.2 GPIO port output Set register IOSET and FIOSET(IO[0/1]SET - 0xE002 80[0/1]4 and FIO[0/1/2/3/4]SET - 0x3FFF C0[1/3/5/7/9]8)

This register is used to produce a HIGH level output at the port pins configured as GPIO in an OUTPUT mode. Writing 1 produces a HIGH level at the corresponding port pins. Writing 0 has no effect. If any pin is configured as an input or a secondary function, writing 1 to the corresponding bit in the IOSET has no effect.

Reading the IOSET register returns the value of this register, as determined by previous writes to IOSET and IOCLR (or IOPIN as noted above). This value does not reflect the effect of any outside world influence on the I/O pins.

Legacy registers are the IO0SET and IO1SET while the enhanced GPIOs are supported via the FIO0SET, FIO1SET, FIO2SET, FIO3SET, and FIO4SET registers. Access to a port pin via the FIOSET register is conditioned by the corresponding bit of the FIOMASK register (see Section 10.5.5 "Fast GPIO port Mask register FIOMASK(FIO[0/1/2/3/4]MASK - 0x3FFF C0[1/3/5/7/9]0)").

Chapter 10: LPC23XX General Purpose Input/Output ports (GPIO)

Table 138. GPIO port output Set register (IO0SET - address 0xE002 8004 and IO1SET - address 0xE002 8014) bit description

Bit	Symbol	Value	Description	Reset value
31:0	31:0 P0xSET or		Slow GPIO output value Set bits. Bit 0 in IOxSET controls pin Px.0, bit 31 in IOxSET controls pin Px.31.	0x0
	P1xSET	0	Controlled pin output is unchanged.	
		1	Controlled pin output is set to HIGH.	

Table 139. Fast GPIO port output Set register (FIO[0/1/2/3/4]SET - address 0x3FFF C0[1/3/5/7/9]8) bit description

Bit	Symbol	Value	Description	Reset value
31:0	FP0xSET FP1xSET FP2xSET	0	Fast GPIO output value Set bits. Bit 0 in FIOxSET controls pin Px.0, bit 31 in FIOxSET controls pin Px.31. Controlled pin output is unchanged.	0x0
	FP3xSET FP4xSET	1	Controlled pin output is set to HIGH.	

Aside from the 32-bit long and word only accessible FIOSET register, every fast GPIO port can also be controlled via several byte and half-word accessible registers listed in Table 140, too. Next to providing the same functions as the FIOSET register, these additional registers allow easier and faster access to the physical port pins.

Table 140. Fast GPIO port output Set byte and half-word accessible register description

Generic Register name	Description	Register length (bits) & access	Reset value	PORTn Register Address & Name
FIOxSET0	Fast GPIO Port x output Set register 0. Bit 0 in FIOxSET0 register corresponds to pin Px.0 bit 7 to pin Px.7.	8 (byte) R/W	0x00	FIO0SET0 - 0x3FFF C018 FIO1SET0 - 0x3FFF C038 FIO2SET0 - 0x3FFF C058 FIO3SET0 - 0x3FFF C078 FIO4SET0 - 0x3FFF C098
FIOxSET1	Fast GPIO Port x output Set register 1. Bit 0 in FIOxSET1 register corresponds to pin Px.8 bit 7 to pin Px.15.	8 (byte) R/W	0x00	FIO0SET1 - 0x3FFF C019 FIO1SET1 - 0x3FFF C039 FIO2SET1 - 0x3FFF C059 FIO3SET1 - 0x3FFF C079 FIO4SET1 - 0x3FFF C099
FIOxSET2	Fast GPIO Port x output Set register 2. Bit 0 in FIOxSET2 register corresponds to pin Px.16 bit 7 to pin Px.23.	8 (byte) R/W	0x00	FIO0SET2 - 0x3FFF C01A FIO1SET2 - 0x3FFF C03A FIO2SET2 - 0x3FFF C05A FIO3SET2 - 0x3FFF C07A FIO4SET2 - 0x3FFF C09A

Chapter 10: LPC23XX General Purpose Input/Output ports (GPIO)

Table 140. Fast GPIO port output Set byte and half-word accessible register description

Generic Register name	Description	Register length (bits) & access	Reset value	PORTn Register Address & Name
FIOxSET3	Fast GPIO Port x output Set register 3. Bit 0 in FIOxSET3 register corresponds to pin Px.24 bit 7 to pin Px.31.	8 (byte) R/W	0x00	FIO0SET3 - 0x3FFF C01B FIO1SET3 - 0x3FFF C03B FIO2SET3 - 0x3FFF C05B FIO3SET3 - 0x3FFF C07B FIO4SET3 - 0x3FFF C09B
FIOxSETL	Fast GPIO Port x output Set Lower half-word register. Bit 0 in FIOxSETL register corresponds to pin Px.0 bit 15 to pin Px.15.	16 (half-word) R/W	0x0000	FIO0SETL - 0x3FFF C018 FIO1SETL - 0x3FFF C038 FIO2SETL - 0x3FFF C058 FIO3SETL - 0x3FFF C078 FIO4SETL - 0x3FFF C098
FIOxSETU	Fast GPIO Port x output Set Upper half-word register. Bit 0 in FIOxSETU register corresponds to Px.16 bit 15 to Px.31.	16 (half-word) R/W	0x0000	FIO0SETU - 0x3FFF C01A FIO1SETU - 0x3FFF C03A FIO2SETU - 0x3FFF C05A FIO3SETU - 0x3FFF C07A FIO4SETU - 0x3FFF C09A

10.5.3 GPIO port output Clear register IOCLR and FIOCLR (IO[0/1]CLR - 0xE002 80[0/1]C and FIO[0/1/2/3/4]CLR - 0x3FFF C0[1/3/5/7/9]C)

This register is used to produce a LOW level output at port pins configured as GPIO in an OUTPUT mode. Writing 1 produces a LOW level at the corresponding port pin and clears the corresponding bit in the IOSET register. Writing 0 has no effect. If any pin is configured as an input or a secondary function, writing to IOCLR has no effect.

Legacy registers are the IO0CLR and IO1CLR while the enhanced GPIOs are supported via the FIO0CLR, FIO1CLR, FIO2CLR, FIO3CLR, and FIO4CLR registers. Access to a port pin via the FIOCLR register is conditioned by the corresponding bit of the FIOMASK register (see Section 10.5.5 "Fast GPIO port Mask register FIOMASK(FIO[0/1/2/3/4]MASK - 0x3FFF C0[1/3/5/7/9]0)").

Table 141. GPIO port output Clear register (IO0CLR - address 0xE002 800C and IO1CLR - address 0xE002 801C) bit description

Bit	Symbol	Value	Description	Reset value
31:0	31:0 P0xCLR or		Slow GPIO output value Clear bits. Bit 0 in IOxCLR controls pin Px.0, bit 31 in IOxCLR controls pin Px.31.	0x0
	P1xCLR	0	Controlled pin output is unchanged.	
		1	Controlled pin output is set to LOW.	_

Table 142. Fast GPIO port output Clear register (FIO[0/1/2/3/4]CLR - address 0x3FFF C0[1/3/5/7/9]C) bit description

Bit	Symbol	Value	Description	Reset value
31:0	FP0xCLR FP1xCLR FP2xCLR FP3xCLR FP4xCLR	0	Fast GPIO output value Clear bits. Bit 0 in FIOxCLR controls pin Px.0, bit 31 controls pin Px.31. Controlled pin output is unchanged. Controlled pin output is set to LOW.	0x0

Chapter 10: LPC23XX General Purpose Input/Output ports (GPIO)

Aside from the 32-bit long and word only accessible FIOCLR register, every fast GPIO port can also be controlled via several byte and half-word accessible registers listed in Table 143, too. Next to providing the same functions as the FIOCLR register, these additional registers allow easier and faster access to the physical port pins.

Table 143. Fast GPIO port output Clear byte and half-word accessible register description

Generic Register name	Description	Register length (bits) & access	Reset value	PORTn Register Address & Name
FIOxCLR0	Fast GPIO Port x output Clear register 0. Bit 0 in FIOxCLR0 register corresponds to pin Px.0 bit 7 to pin Px.7.	8 (byte) WO	0x00	FIO0CLR0 - 0x3FFF C01C FIO1CLR0 - 0x3FFF C03C FIO2CLR0 - 0x3FFF C05C FIO3CLR0 - 0x3FFF C07C FIO4CLR0 - 0x3FFF C09C
FIOxCLR1	Fast GPIO Port x output Clear register 1. Bit 0 in FIOxCLR1 register corresponds to pin Px.8 bit 7 to pin Px.15.	8 (byte) WO	0x00	FIO0CLR1 - 0x3FFF C01D FIO1CLR1 - 0x3FFF C03D FIO2CLR1 - 0x3FFF C05D FIO3CLR1 - 0x3FFF C07D FIO4CLR1 - 0x3FFF C09D
FIOxCLR2	Fast GPIO Port x output Clear register 2. Bit 0 in FIOxCLR2 register corresponds to pin Px.16 bit 7 to pin Px.23.	8 (byte) WO	0x00	FIO0CLR2 - 0x3FFF C01E FIO1CLR2 - 0x3FFF C03E FIO2CLR2 - 0x3FFF C05E FIO3CLR2 - 0x3FFF C07E FIO4CLR2 - 0x3FFF C09E
FIOxCLR3	Fast GPIO Port x output Clear register 3. Bit 0 in FIOxCLR3 register corresponds to pin Px.24 bit 7 to pin Px.31.	8 (byte) WO	0x00	FIO0CLR3 - 0x3FFF C01F FIO1CLR3 - 0x3FFF C03F FIO2CLR3 - 0x3FFF C05F FIO3CLR3 - 0x3FFF C07F FIO4CLR3 - 0x3FFF C09F
FIOxCLRL	Fast GPIO Port x output Clear Lower half-word register. Bit 0 in FIOxCLRL register corresponds to pin Px.0 bit 15 to pin Px.15.	16 (half-word) WO	0x0000	FIO0CLRL - 0x3FFF C01C FIO1CLRL - 0x3FFF C03C FIO2CLRL - 0x3FFF C05C FIO3CLRL - 0x3FFF C07C FIO4CLRL - 0x3FFF C09C
FIOxCLRU	Fast GPIO Port x output Clear Upper half-word register. Bit 0 in FIOxCLRU register corresponds to pin Px.16 bit 15 to Px.31.	16 (half-word) WO	0x0000	FIO0CLRU - 0x3FFF C01E FIO1CLRU - 0x3FFF C03E FIO2CLRU - 0x3FFF C05E FIO3CLRU - 0x3FFF C07E FIO4CLRU - 0x3FFF C09E

10.5.4 GPIO port Pin value register IOPIN and FIOPIN (IO[0/1]PIN - 0xE002 80[0/1]0 and FIO[0/1/2/3/4]PIN - 0x3FFF C0[1/3/5/7/9]4)

This register provides the value of port pins that are configured to perform only digital functions. The register will give the logic value of the pin regardless of whether the pin is configured for input or output, or as GPIO or an alternate digital function. As an example, a particular port pin may have GPIO input, GPIO output, UART receive, and PWM output as selectable functions. Any configuration of that pin will allow its current logic state to be read from the corresponding IOPIN register.

If a pin has an analog function as one of its options, the pin state cannot be read if the analog configuration is selected. Selecting the pin as an A/D input disconnects the digital features of the pin. In that case, the pin value read in the IOPIN register is not valid.

Chapter 10: LPC23XX General Purpose Input/Output ports (GPIO)

Writing to the IOPIN register stores the value in the port output register, bypassing the need to use both the IOSET and IOCLR registers to obtain the entire written value. This feature should be used carefully in an application since it affects the entire port.

Legacy registers are the IOOPIN and IO1PIN while the enhanced GPIOs are supported via the FIO0PIN, FIO1PIN, FIO2PIN, FIO3PIN and FIO4PIN registers. Access to a port pin via the FIOPIN register is conditioned by the corresponding bit of the FIOMASK register (see Section 10.5.5 "Fast GPIO port Mask register FIOMASK(FIO[0/1/2/3/4]MASK - 0x3FFF C0[1/3/5/7/9]0)").

Only pins masked with zeros in the Mask register (see Section 10.5.5 "Fast GPIO port Mask register FIOMASK(FIO[0/1/2/3/4]MASK - 0x3FFF C0[1/3/5/7/9]0)") will be correlated to the current content of the Fast GPIO port pin value register.

Table 144. GPIO port Pin value register (IO0PIN - address 0xE002 8000 and IO1PIN - address 0xE002 8010) bit description

Bit	Symbol	Value	Description	Reset value
31:0	P0xVAL or P1xVAL		Slow GPIO pin value bits. Bit 0 in IOxPIN corresponds to pin Px.0, bit 31 in IOxPIN corresponds to pin Px.31.	0x0
		0	Reading a 0 indicates that the port pin's current state is LOW. Controlled pin output is set to LOW.	
		1	Reading a 1 indicates that the port pin's current state is HIGH. Controlled pin output is set to HIGH.	

Table 145. Fast GPIO port Pin value register (FIO[0/1/2/3/4]PIN - address 0x3FFF C0[1/3/5/7/9]4) bit description

Bit	Symbol	Value	Description	Reset value
31:0	FP0xVAL FP1xVAL FP2xVAL FP3xVAL FP4xVAL		Fast GPIO pin value bits. Bit 0 in FIOxPIN corresponds to pin Px.0, bit 31 in FIOxPIN corresponds to pin Px.31. Only bits also set to 0 in the FIOxMASK register are affected by a write or show the pin's actual logic state.	0x0
		0	Reading a 0 indicates that the port pin's current state is LOW. Writing a 0 sets the output register value to LOW.	
		1	Reading a 1 indicates that the port pin's current state is HIGH. Writing a 1 sets the output register value to HIGH.	

Aside from the 32-bit long and word only accessible FIOPIN register, every fast GPIO port can also be controlled via several byte and half-word accessible registers listed in Table 146, too. Next to providing the same functions as the FIOPIN register, these additional registers allow easier and faster access to the physical port pins.

Chapter 10: LPC23XX General Purpose Input/Output ports (GPIO)

Table 146. Fast GPIO port Pin value byte and half-word accessible register description

Generic Register name	Description	Register length (bits) & access	Reset value	PORTn Register Address & Name
FIOxPIN0	Fast GPIO Port x Pin value register 0. Bit 0 in FIOxPIN0 register corresponds to pin Px.0 bit 7 to pin Px.7.	8 (byte) R/W	0x00	FIO0PIN0 - 0x3FFF C014 FIO1PIN0 - 0x3FFF C034 FIO2PIN0 - 0x3FFF C054 FIO3PIN0 - 0x3FFF C074 FIO4PIN0 - 0x3FFF C094
FIOxPIN1	Fast GPIO Port x Pin value register 1. Bit 0 in FIOxPIN1 register corresponds to pin Px.8 bit 7 to pin Px.15.	8 (byte) R/W	0x00	FIO0PIN1 - 0x3FFF C015 FIO1PIN1 - 0x3FFF C035 FIO2PIN1 - 0x3FFF C055 FIO3PIN1 - 0x3FFF C075 FIO4PIN1 - 0x3FFF C095
FIOxPIN2	Fast GPIO Port x Pin value register 2. Bit 0 in FIOxPIN2 register corresponds to pin Px.16 bit 7 to pin Px.23.	8 (byte) R/W	0x00	FIO0PIN2 - 0x3FFF C016 FIO1PIN2 - 0x3FFF C036 FIO2PIN2 - 0x3FFF C056 FIO3PIN2 - 0x3FFF C076 FIO4PIN2 - 0x3FFF C096
FIOxPIN3	Fast GPIO Port x Pin value register 3. Bit 0 in FIOxPIN3 register corresponds to pin Px.24 bit 7 to pin Px.31.	8 (byte) R/W	0x00	FIO0PIN3 - 0x3FFF C017 FIO1PIN3 - 0x3FFF C037 FIO2PIN3 - 0x3FFF C057 FIO3PIN3 - 0x3FFF C077 FIO4PIN3 - 0x3FFF C097
FIOxPINL	Fast GPIO Port x Pin value Lower half-word register. Bit 0 in FIOxPINL register corresponds to pin Px.0 bit 15 to pin Px.15.	16 (half-word) R/W	0x0000	FIO0PINL - 0x3FFF C014 FIO1PINL - 0x3FFF C034 FIO2PINL - 0x3FFF C054 FIO3PINL - 0x3FFF C074 FIO4PINL - 0x3FFF C094
FIOxPINU	Fast GPIO Port x Pin value Upper half-word register. Bit 0 in FIOxPINU register corresponds to pin Px.16 bit 15 to Px.31.	16 (half-word) R/W	0x0000	FIO0PINU - 0x3FFF C016 FIO1PINU - 0x3FFF C036 FIO2PINU - 0x3FFF C056 FIO3PINU - 0x3FFF C076 FIO4PINU - 0x3FFF C096

10.5.5 Fast GPIO port Mask register FIOMASK(FIO[0/1/2/3/4]MASK - 0x3FFF C0[1/3/5/7/9]0)

This register is available in the enhanced group of registers only. It is used to select port pins that will and will not be affected by write accesses to the FIOPIN, FIOSET or FIOCLR register. Mask register also filters out port's content when the FIOPIN register is read.

A zero in this register's bit enables an access to the corresponding physical pin via a read or write access. If a bit in this register is one, corresponding pin will not be changed with write access and if read, will not be reflected in the updated FIOPIN register. For software examples, see Section 10.6 "GPIO usage notes" on page 184

Chapter 10: LPC23XX General Purpose Input/Output ports (GPIO)

Table 147. Fast GPIO port Mask register (FIO[0/1/2/3/4]MASK - address 0x3FFF C0[1/3/5/7/9]0) bit description

Bit	Symbol	Value	Description	Reset value
31:0 FP0xMASK,	,		Fast GPIO physical pin access control.	0x0
	FP1xMASK, FP2xMASK, FP3xMASK FP4xMASK	0	Controlled pin is affected by writes to the port's FIOSET, FIOCLR, and FIOPIN register(s). Current state of the pin can be read from the FIOPIN register.	
	FF4XIVIASK	1	Controlled pin is not affected by writes into the port's FIOSET, FIOCLR and FIOPIN register(s). When the FIOPIN register is read, this bit will not be updated with the state of the physical pin.	_

Aside from the 32-bit long and word only accessible FIOMASK register, every fast GPIO port can also be controlled via several byte and half-word accessible registers listed in Table 148, too. Next to providing the same functions as the FIOMASK register, these additional registers allow easier and faster access to the physical port pins.

Table 148. Fast GPIO port Mask byte and half-word accessible register description

Generic Register name	Description	Register length (bits) & access		PORTn Register Address & Name
FIOxMASK0	Fast GPIO Port x Mask register 0. Bit 0 in FIOxMASK0 register corresponds to pin Px.0 bit 7 to pin Px.7.	8 (byte) R/W	0x0	FIO0MASK0 - 0x3FFF C010 FIO1MASK0 - 0x3FFF C030 FIO2MASK0 - 0x3FFF C050 FIO3MASK0 - 0x3FFF C070 FIO4MASK0 - 0x3FFF C090
FIOxMASK1	Fast GPIO Port x Mask register 1. Bit 0 in FIOxMASK1 register corresponds to pin Px.8 bit 7 to pin Px.15.	8 (byte) R/W	0x0	FIO0MASK1 - 0x3FFF C011 FIO1MASK1 - 0x3FFF C031 FIO2MASK1 - 0x3FFF C051 FIO3MASK1 - 0x3FFF C071 FIO4MASK1 - 0x3FFF C091
FIOxMASK2	Fast GPIO Port x Mask register 2. Bit 0 in FIOxMASK2 register corresponds to pin Px.16 bit 7 to pin Px.23.	8 (byte) R/W	0x0	FIO0MASK2 - 0x3FFF C012 FIO1MASK2 - 0x3FFF C032 FIO2MASK2 - 0x3FFF C052 FIO3MASK2 - 0x3FFF C072 FIO4MASK2 - 0x3FFF C092
FIOxMASK3	Fast GPIO Port x Mask register 3. Bit 0 in FIOxMASK3 register corresponds to pin Px.24 bit 7 to pin Px.31.	8 (byte) R/W	0x0	FIO0MASK3 - 0x3FFF C013 FIO1MASK3 - 0x3FFF C033 FIO2MASK3 - 0x3FFF C053 FIO3MASK3 - 0x3FFF C073 FIO4MASK3 - 0x3FFF C093
FIOxMASKL	Fast GPIO Port x Mask Lower half-word register. Bit 0 in FIOxMASKL register corresponds to pin Px.0 bit 15 to pin Px.15.	16 (half-word) R/W	0x0	FIO0MASKL - 0x3FFF C010 FIO1MASKL - 0x3FFF C030 FIO2MASKL - 0x3FFF C050 FIO3MASKL - 0x3FFF C070 FIO4MASKL - 0x3FFF C090
FIOxMASKU	Fast GPIO Port x Mask Upper half-word register. Bit 0 in FIOxMASKU register corresponds to pin Px.16 bit 15 to Px.31.	16 (half-word) R/W	0x0	FIO0MASKU - 0x3FFF C012 FIO1MASKU - 0x3FFF C032 FIO2MASKU - 0x3FFF C053 FIO3MASKU - 0x3FFF C072 FIO4MASKU - 0x3FFF C092

Chapter 10: LPC23XX General Purpose Input/Output ports (GPIO)

10.5.6 GPIO interrupt registers

The following registers configure the pins of port 0 and port 2 to generate interrupts.

10.5.6.1 GPIO overall Interrupt Status register (IOIntStatus - 0xE002 8080)

This read-only register indicates the presence of interrupt pending on all of the GPIO ports that support GPIO interrupts. Only one bit per port is used.

Table 149. GPIO overall Interrupt Status register (IOIntStatus - address 0xE002 8080) bit description

Bit	Symbol	Value	Description	Reset value
0	P0Int		PORT0 GPIO interrupt pending.	0
		0	There are no pending interrupts on PORT0.	
		1	There is at least one pending interrupt on PORT0.	
1	-	-	Reserved. The value read from a reserved bit is not defined.	NA
2	P2Int		PORT2 GPIO interrupt pending.	0
		0	There are no pending interrupts on PORT2.	
		1	There is at least one pending interrupt on PORT2.	
31:2	-	-	Reserved. The value read from a reserved bit is not defined.	NA

10.5.6.2 GPIO Interrupt Enable for Rising edge register (IO0IntEnR - 0xE002 8090 and IO2IntEnR - 0xE002 80B0)

Each bit in these read-write registers enables the rising edge interrupt for the corresponding GPIO port pin.

Table 150. GPIO Interrupt Enable for Rising edge register (IO0IntEnR - address 0xE002 8090 and IO2IntEnR - address 0xE002 80B0) bit description

Bit	Symbol	Value	Description	Reset value
31:0	P0xER and P2xER	0	Enable Rising edge. Bit 0 in IOxIntEnR corresponds to pin Px.0, bit 31 in IOxIntEnR corresponds to pin Px.31. Rising edge interrupt is disabled on the controlled pin.	0
		1	Rising edge interrupt is enabled on the controlled pin.	

10.5.6.3 GPIO Interrupt Enable for Falling edge register (IO0IntEnF - 0xE002 8094 and IO2IntEnF - 0xE002 80B4)

Each bit in these read-write registers enables the falling edge interrupt for the corresponding GPIO port pin.

Table 151. GPIO Interrupt Enable for Falling edge register (IO0IntEnF - address 0xE002 8094 and IO2IntEnF - address 0xE002 80B4) bit description

Bit	Symbol	Value	Description	Reset value
31:0	P0xEF and		Enable Falling edge. Bit 0 in IOxIntEnF corresponds to pin Px.0, bit 31 in IOxIntEnF corresponds to pin Px.31.	0
	P2xEF	0	Falling edge interrupt is disabled on the controlled pin.	
		1	Falling edge interrupt is enabled on the controlled pin.	_

Chapter 10: LPC23XX General Purpose Input/Output ports (GPIO)

10.5.6.4 GPIO Interrupt Status for Rising edge register (IO0IntStatR - 0xE002 8084 and IO2IntStatR - 0xE002 80A4)

Each bit in these read-only registers indicates the rising edge interrupt status for the corresponding port.

Table 152. GPIO Status for Rising edge register (IO0IntStatR - address 0xE002 8084 and IO2IntStatR - address 0xE002 80A4) bit description

Bit	Symbol	Value	Description	Reset value
31:0 P0xREI and P2xREI			Rising Edge Interrupt status. Bit 0 in IOxIntStatR corresponds to pin Px.0, bit 31 in IOxIntStatR corresponds to pin Px.31.	0
	P2xREI	0	Rising edge has not been detected on the corresponding pin.	
		1	An interrupt is generated due to a rising edge on the corresponding pin.	

10.5.6.5 GPIO Interrupt Status for Falling edge register (IO0IntStatF - 0xE002 8088 and IO2IntStatF - 0xE002 80A8)

Each bit in these read-only registers indicates the rising edge interrupt status for the corresponding port.

Table 153. GPIO Status for Falling edge register (IO0IntStatF - address 0xE002 8088 and IO2IntStatF - address 0xE002 80A8) bit description

Bit	Symbol	Value	Description	Reset value
31:0	P0xFEI and		Falling Edge Interrupt status. Bit 0 in IOxIntStatF corresponds to pin Px.0, bit 31 in IOxIntStatF corresponds to pin Px.31.	0
P2xFEI	P2xFEI	0	Falling edge has not been detected on the corresponding pin.	
		1	An interrupt is generated due to a falling edge on the corresponding pin.	

10.5.6.6 GPIO Interrupt Clear register (IO0IntClr - 0xE002 808C and IO2IntClr - 0xE002 80AC)

Writing a 1 into each bit in these write-only registers clears any interrupts for the corresponding GPIO port pin.

Table 154. GPIO Status for Falling edge register (IO0IntClr - address 0xE002 808C and IO2IntClr - address 0xE002 80AC) bit description

Bit	Symbol	Value	Description	Reset value
31:0	P0xCI and		Clear GPIO port Interrupt. Bit 0 in IOxIntClr corresponds to pin Px.0, bit 31 in IOxIntClr corresponds to pin Px.31.	0
P2xCl	0	Corresponding bit in IOxIntStatR and/or IOxIntStatF is unchanged.		
		1	Corresponding bit in IOxIntStatR and IOxStatF is cleared to 0.	

Chapter 10: LPC23XX General Purpose Input/Output ports (GPIO)

10.6 GPIO usage notes

10.6.1 Example 1: sequential accesses to IOSET and IOCLR affecting the same GPIO pin/bit

State of the output configured GPIO pin is determined by writes into the pin's port IOSET and IOCLR registers. Last of these accesses to the IOSET/IOCLR register will determine the final output of a pin.

In the example code:

```
IOODIR = 0x0000 0080 ;pin P0.7 configured as output IOOCLR = 0x0000 0080 ;P0.7 goes LOW IOOSET = 0x0000 0080 ;P0.7 goes HIGH IOOCLR = 0x0000 0080 ;P0.7 goes LOW
```

pin P0.7 is configured as an output (write to IO0DIR register). After this, P0.7 output is set to low (first write to IO0CLR register). Short high pulse follows on P0.7 (write access to IO0SET), and the final write to IO0CLR register sets pin P0.7 back to low level.

10.6.2 Example 2: an instantaneous output of 0s and 1s on a GPIO port

Write access to port's IOSET followed by write to the IOCLR register results with pins outputting 0s being slightly later then pins outputting 1s. There are systems that can tolerate this delay of a valid output, but for some applications simultaneous output of a binary content (mixed 0s and 1s) within a group of pins on a single GPIO port is required. This can be accomplished by writing to the port's IOPIN register.

Following code will preserve existing output on PORT0 pins P0.[31:16] and P0.[7:0] and at the same time set P0.[15:8] to 0xA5, regardless of the previous value of pins P0.[15:8]:

```
IOOPIN = (IOOPIN && 0xFFFF00FF) | 0x0000A500
```

The same outcome can be obtained using the fast port access.

Solution 1: using 32-bit (word) accessible fast GPIO registers

```
FIOOMASK = 0xFFFF00FF;
FIOOPIN = 0x0000A500;
```

Solution 2: using 16-bit (half-word) accessible fast GPIO registers

```
FIOOMASKL = 0x00FF;
FIOOPINL = 0xA500;
```

Solution 3: using 8-bit (byte) accessible fast GPIO registers

```
FIOOPIN1 = 0xA5;
```

Chapter 10: LPC23XX General Purpose Input/Output ports (GPIO)

10.6.3 Writing to IOSET/IOCLR vs. IOPIN

Write to the IOSET/IOCLR register allows easy change of the port's selected output pin(s) to high/low level at a time. Only pin/bit(s) in the IOSET/IOCLR written with 1 will be set to high/low level, while those written as 0 will remain unaffected. However, by just writing to either IOSET or IOCLR register it is not possible to instantaneously output arbitrary binary data containing a mixture of 0s and 1s on a GPIO port.

Write to the IOPIN register enables instantaneous output of a desired content on the parallel GPIO. Binary data written into the IOPIN register will affect all output configured pins of that parallel port: 0s in the IOPIN will produce low level pin outputs and 1s in IOPIN will produce high level pin outputs. In order to change output of only a group of port's pins, application must logically AND readout from the IOPIN with mask containing 0s in bits corresponding to pins that will be changed, and 1s for all others. Finally, this result has to be logically ORred with the desired content and stored back into the IOPIN register. Example 2 from above illustrates output of 0xA5 on PORT0 pins 15 to 8 while preserving all other PORT0 output pins as they were before.

10.6.4 Output signal frequency considerations when using the legacy and enhanced GPIO registers

The enhanced features of the fast GPIO ports available on this microcontroller make GPIO pins more responsive to the code that has task of controlling them. In particular, software access to a GPIO pin is 3.5 times faster via the fast GPIO registers than it is when the legacy set of registers is used. As a result of the access speed increase, the maximum output frequency of the digital pin is increased 3.5 times, too. This tremendous increase of the output frequency is not always that visible when a plain C code is used, and a portion of an application handling the fast port output might have to be written in assembly code and executed in the ARM mode.

UM10211

Chapter 11: LPC23XX Ethernet

Rev. 4.1 — 5 September 2012

User manual

11.1 How to read this chapter

The Ethernet is **not** available on part LPC2361.

11.2 Basic configuration

The Ethernet controller is configured using the following registers:

- 1. Power: In the PCONP register (<u>Table 56</u>), set bit PCENET.
 - **Remark:** On reset, the Ethernet block is disabled (PCENET = 0).
- 2. Clock: see Section 4.7.1.
- 3. Pins: Select Ethernet pins and their modes in PINSEL2/3 and PINMODE2/3 (Section 9.5).
- 4. Wake-up: Use the INTWAKE register (<u>Table 55</u>) to enable activity on the Ethernet port to wake up the microcontroller from Power-down mode.
- 5. Interrupts: Interrupts are enabled in the VIC using the VICIntEnable register (Table 76).
- 6. Initialization: see Section 11.18.2.

11.3 Introduction

Remark: LPC23xx devices are RMII interfaced only.

The Ethernet block contains a full featured 10 Mbps or 100 Mbps Ethernet MAC (Media Access Controller) designed to provide optimized performance through the use of DMA hardware acceleration. Features include a generous suite of control registers, half or full duplex operation, flow control, control frames, hardware acceleration for transmit retry, receive packet filtering and wake-up on LAN activity. Automatic frame transmission and reception with Scatter-Gather DMA off-loads many operations from the CPU.

The Ethernet block and the CPU share a dedicated AHB subsystem (AHB2) that is used to access the Ethernet SRAM for Ethernet data, control, and status information. All other AHB traffic in the LPC2300 takes place on a different AHB subsystem, effectively separating Ethernet activity from the rest of the system. The Ethernet DMA can also access off-chip memory via the External Memory Controller, as well as the SRAM located on AHB1, if is not being used by the USB block. However, using memory other than the Ethernet SRAM, especially off-chip memory (possible in LPC2377/78 and LPC2388 only), will slow Ethernet access to memory and increase the loading of AHB1.

The Ethernet block interfaces between an off-chip Ethernet PHY using the RMII (reduced MII) protocol and the on-chip MIIM (Media Independent Interface Management) serial bus, also known as MDIO (Management Data Input/Output).

Chapter 11: LPC23XX Ethernet

Table 155. Ethernet acronyms, abbreviations, and definitions

Acronym or Abbreviation	Definition
AHB	Advanced High-performance bus
CRC	Cyclic Redundancy Check
DMA	Direct Memory Access
Double-word	64 bit entity
FCS	Frame Check Sequence (CRC)
Fragment	A (part of an) Ethernet frame; one or multiple fragments can add up to a single Ethernet frame.
Frame	An Ethernet frame consists of destination address, source address, length type field, payload and frame check sequence.
Half-word	16 bit entity
LAN	Local Area Network
MAC	Media Access Control sublayer
MII	Media Independent Interface
MIIM	MII management
Octet	An 8 bit data entity, used in lieu of "byte" by IEEE 802.3
Packet	A frame that is transported across Ethernet; a packet consists of a preamble, a start of frame delimiter and an Ethernet frame.
PHY	Ethernet Physical Layer
RMII	Reduced MII
Rx	Receive
TCP/IP	Transmission Control Protocol / Internet Protocol. The most common high-level protocol used with Ethernet.
Tx	Transmit
VLAN	Virtual LAN
WoL	Wake-up on LAN
Word	32 bit entity

11.4 Features


- Ethernet standards support:
 - Supports 10 or 100 Mbps PHY devices including 10 Base-T, 100 Base-TX, 100 Base-FX, and 100 Base-T4.
 - Fully compliant with IEEE standard 802.3.
 - Fully compliant with 802.3x Full Duplex Flow Control and Half Duplex back pressure.
 - Flexible transmit and receive frame options.
 - VLAN frame support.
- Memory management:
 - Independent transmit and receive buffers memory mapped to shared SRAM.
 - DMA managers with scatter/gather DMA and arrays of frame descriptors.

Chapter 11: LPC23XX Ethernet

- Memory traffic optimized by buffering and pre-fetching.
- Enhanced Ethernet features:
 - Receive filtering.
 - Multicast and broadcast frame support for both transmit and receive.
 - Optional automatic FCS insertion (CRC) for transmit.
 - Selectable automatic transmit frame padding.
 - Over-length frame support for both transmit and receive allows any length frames.
 - Promiscuous receive mode.
 - Automatic collision backoff and frame retransmission.
 - Includes power management by clock switching.
 - Wake-on-LAN power management support allows system wake-up: using the receive filters or a magic frame detection filter.
- Physical interface:
 - Attachment of external PHY chip through a standard Reduced MII (RMII) interface.
 - PHY register access is available via the Media Independent Interface Management (MIIM) interface.

11.5 Architecture and operation

Figure 31 shows the internal architecture of the Ethernet block.

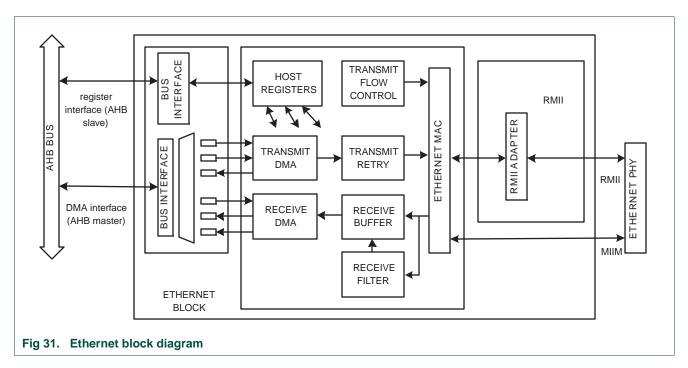

The block diagram for the Ethernet block consists of:

Chapter 11: LPC23XX Ethernet

- The host registers module containing the registers in the software view and handling AHB accesses to the Ethernet block. The host registers connect to the transmit and receive data path as well as the MAC.
- The DMA to AHB interface. This provides an AHB master connection that allows the Ethernet block to access the Ethernet SRAM for reading of descriptors, writing of status, and reading and writing data buffers.
- The Ethernet MAC which interfaces to the off-chip PHY via an RMII interface.
- The transmit data path, including:
 - The transmit DMA manager which reads descriptors and data from memory and writes status to memory.
 - The transmit retry module handling Ethernet retry and abort situations.
 - The transmit flow control module which can insert Ethernet pause frames.
- The receive data path, including:
 - The receive DMA manager which reads descriptors from memory and writes data and status to memory.
 - The Ethernet MAC which detects frame types by parsing part of the frame header.
 - The receive filter which can filter out certain Ethernet frames by applying different filtering schemes.
 - The receive buffer implementing a delay for receive frames to allow the filter to filter out certain frames before storing them to memory.

11.6 DMA engine functions

The Ethernet block is designed to provide optimized performance via DMA hardware acceleration. Independent scatter/gather DMA engines connected to the AHB bus off-load many data transfers from the ARM7 CPU.

Descriptors, which are stored in memory, contain information about fragments of incoming or outgoing Ethernet frames. A fragment may be an entire frame or a much smaller amount of data. Each descriptor contains a pointer to a memory buffer that holds data associated with a fragment, the size of the fragment buffer, and details of how the fragment will be transmitted or received.

Descriptors are stored in arrays in memory, which are located by pointer registers in the Ethernet block. Other registers determine the size of the arrays, point to the next descriptor in each array that will be used by the DMA engine, and point to the next descriptor in each array that will be used by the Ethernet device driver.

11.7 Overview of DMA operation

The DMA engine makes use of a Receive descriptor array and a Transmit descriptor array in memory. All or part of an Ethernet frame may be contained in a memory buffer associated with a descriptor. When transmitting, the transmit DMA engine uses as many descriptors as needed (one or more) to obtain (gather) all of the parts of a frame, and sends them out in sequence. When receiving, the receive DMA engine also uses as many descriptors as needed (one or more) to find places to store (scatter) all of the data in the received frame.

Chapter 11: LPC23XX Ethernet

The base address registers for the descriptor array, registers indicating the number of descriptor array entries, and descriptor array input/output pointers are contained in the Ethernet block. The descriptor entries and all transmit and receive packet data are stored in memory which is not a part of the Ethernet block. The descriptor entries tell where related frame data is stored in memory, certain aspects of how the data is handled, and the result status of each Ethernet transaction.


Hardware in the DMA engine controls how data incoming from the Ethernet MAC is saved to memory, causes fragment related status to be saved, and advances the hardware receive pointer for incoming data. Driver software must handle the disposition of received data, changing of descriptor data addresses (to avoid unnecessary data movement), and advancing the software receive pointer. The two pointers create a circular queue in the descriptor array and allow both the DMA hardware and the driver software to know which descriptors (if any) are available for their use, including whether the descriptor array is empty or full.

Similarly, driver software must set up pointers to data that will be transmitted by the Ethernet MAC, giving instructions for each fragment of data, and advancing the software transmit pointer for outgoing data. Hardware in the DMA engine reads this information and sends the data to the Ethernet MAC interface when possible, updating the status and advancing the hardware transmit pointer.

11.8 Ethernet Packet

Figure 32 illustrates the different fields in an Ethernet packet.

Chapter 11: LPC23XX Ethernet

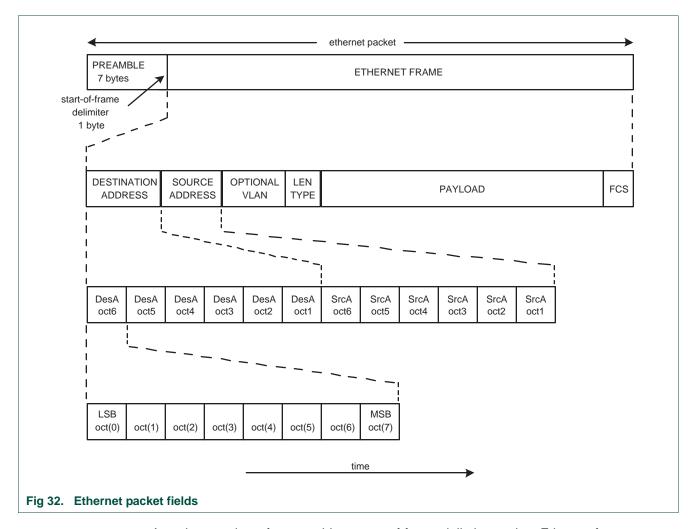

A packet consists of a preamble, a start-of-frame delimiter and an Ethernet frame.

The Ethernet frame consists of the destination address, the source address, an optional VLAN field, the length/type field, the payload and the frame check sequence.

Each address consists of 6 bytes where each byte consists of 8 bits. Bits are transferred starting with the least significant bit.

11.9 Overview

11.9.1 Partitioning

The Ethernet block and associated device driver software offer the functionality of the Media Access Control (MAC) sub layer of the data link layer in the OSI reference model (see IEEE std 802.3). The MAC sub layer offers the service of transmitting and receiving frames to the next higher protocol level, the MAC client layer, typically the Logical Link Control sub layer. The device driver software implements the interface to the MAC client layer. It sets up registers in the Ethernet block, maintains descriptor arrays pointing to frames in memory and receives results back from the Ethernet block through interrupts. When a frame is transmitted, the software partially sets up the Ethernet frames by

Chapter 11: LPC23XX Ethernet

providing pointers to the destination address field, source address field, the length/type field, the MAC client data field and optionally the CRC in the frame check sequence field. Preferably concatenation of frame fields should be done by using the scatter/gather functionality of the Ethernet core to avoid unnecessary copying of data. The hardware adds the preamble and start frame delimiter fields and can optionally add the CRC, if requested by software. When a packet is received the hardware strips the preamble and start frame delimiter and passes the rest of the packet - the Ethernet frame - to the device driver, including destination address, source address, length/type field, MAC client data and frame check sequence (FCS).

Apart from the MAC, the Ethernet block contains receive and transmit DMA managers that control receive and transmit data streams between the MAC and the AHB interface. Frames are passed via descriptor arrays located in host memory, so that the hardware can process many frames without software/CPU support. Frames can consist of multiple fragments that are accessed with scatter/gather DMA. The DMA managers optimize memory bandwidth using prefetching and buffering.

A receive filter block is used to identify received frames that are not addressed to this Ethernet station, so that they can be discarded. The Rx filters include a perfect address filter and a hash filter.

Wake-on-LAN power management support makes it possible to wake the system up from a power-down state -a state in which some of the clocks are switched off -when wake-up frames are received over the LAN. Wake-up frames are recognized by the receive filtering modules or by a Magic Frame detection technology. System wake-up occurs by triggering an interrupt.

An interrupt logic block raises and masks interrupts and keeps track of the cause of interrupts. The interrupt block sends an interrupt request signal to the host system. Interrupts can be enabled, cleared and set by software.

Support for IEEE 802.3/clause 31 flow control is implemented in the flow control block. Receive flow control frames are automatically handled by the MAC. Transmit flow control frames can be initiated by software. In half duplex mode, the flow control module will generate back pressure by sending out continuous preamble only, interrupted by pauses to prevent the jabber limit from being exceeded.

The Ethernet block has a standard Reduced Media Independent Interface (RMII) to connect to an external Ethernet PHY chip. Registers in the PHY chip are accessed via the AHB interface through the serial management connection of the MII bus (MIIM), typically operating at 2.5 MHz.

11.9.2 Example PHY Devices

Some examples of compatible PHY devices are shown in <u>Table 156</u>.

Table 156. Example PHY Devices

Manufacturer	Part Number(s)
Broadcom	BCM5221
ICS	ICS1893
Intel	LXT971A
LSI Logic	L80223, L80225, L80227

Chapter 11: LPC23XX Ethernet

Table 156. Example PHY Devices

Manufacturer	Part Number(s)
Micrel	KS8721
National	DP83847, DP83846, DP83843
SMSC	LAN83C185

11.10 Pin description

<u>Table 157</u> shows the signals used for the Reduced Media Independent Interface (RMII) to the external PHY.

Remark: The Ethernet interface must be enabled through the PCONP register and the reference clock (ENET_REF_CLK signal) must be selected in the PINSEL register (see Section 5) prior to the Ethernet configuration. If the reference clock is not connected to the MAC, the CPU can become locked and no further functionality will be possible. This will cause JTAG to lose communication with the target if debug mode is being used. For details, see Section 11.18.2.

Table 157. Ethernet RMII pin descriptions

Pin Name	Туре	Pin Description
ENET_TX_EN	Output	Transmit data enable
ENET_TXD[1:0]	Output	Transmit data, 2 bits
ENET_RXD[1:0]	Input	Receive data, 2 bits.
ENET_RX_ER	Input	Receive error.
ENET_CRS	Input	Carrier sense/data valid.
ENET_REF_CLK	Input	Reference clock

<u>Table 158</u> shows the signals used for Media Independent Interface Management (MIIM) of the external PHY.

Table 158. Ethernet MIIM pin descriptions

Pin Name	Туре	Pin Description
ENET_MDC	Output	MIIM clock.
ENET_MDIO	Input/Output	MI data input and output

Remark: The Ethernet interface must be enabled through the PCONP register **and** the Ethernet pins must be connected to port pins using the PINSEL registers (see <u>Table 56</u> and <u>Section 9.5</u>). Enabling the Ethernet block without connecting the Ethernet signals to external pins will lock the Ethernet interface and, in Debug mode, cause JTAG to lose communication with the target.

11.11 Registers and software interface

The software interface of the Ethernet block consists of a register view and the format definitions for the transmit and receive descriptors. These two aspects are addressed in the next two subsections.

Chapter 11: LPC23XX Ethernet

11.11.1 Register map

<u>Table 159</u> lists the registers, register addresses and other basic information. The total AHB address space required is 4 kilobytes.

After a hard reset or a soft reset via the RegReset bit of the Command register all bits in all registers are reset to 0 unless stated otherwise in the following register descriptions.

Some registers will have unused bits which will return a 0 on a read via the AHB interface. Writing to unused register bits of an otherwise writable register will not have side effects.

The register map consists of registers in the Ethernet MAC and registers around the core for controlling DMA transfers, flow control and filtering.

Reading from reserved addresses or reserved bits leads to unpredictable data. Writing to reserved addresses or reserved bits has no effect.

Reading of write-only registers will return a read error on the AHB interface. Writing of read-only registers will return a write error on the AHB interface.

Table 159. Register definitions

Symbol	Address	R/W	Description
MAC registers	71441.000		2000
MAC1	0xFFE0 0000	R/W	MAC configuration register 1.
MAC2	0xFFE0 0004	R/W	MAC configuration register 2.
IPGT	0xFFE0 0008		Back-to-Back Inter-Packet-Gap register.
IPGR	0xFFE0 000C	R/W	Non Back-to-Back Inter-Packet-Gap register.
CLRT	0xFFE0 0010	R/W	Collision window / Retry register.
MAXF	0xFFE0 0014	R/W	Maximum Frame register.
SUPP	0xFFE0 0018	R/W	PHY Support register.
TEST	0xFFE0 001C	R/W	Test register.
MCFG	0xFFE0 0020	R/W	MII Mgmt Configuration register.
MCMD	0xFFE0 0024	R/W	MII Mgmt Command register.
MADR	0xFFE0 0028	R/W	MII Mgmt Address register.
MWTD	0xFFE0 002C	WO	MII Mgmt Write Data register.
MRDD	0xFFE0 0030	RO	MII Mgmt Read Data register.
MIND	0xFFE0 0034	RO	MII Mgmt Indicators register.
-	0xFFE0 0038 to 0xFFE0 003F	-	Reserved, user software should not write ones to reserved bits. The value read from a reserved bit is not defined.
SA0	0xFFE0 0040	R/W	Station Address 0 register.
SA1	0xFFE0 0044	R/W	Station Address 1 register.
SA2	0xFFE0 0048	R/W	Station Address 2 register.
-	0xFFE0 004C to 0xFFE0 00FC	-	Reserved, user software should not write ones to reserved bits. The value read from a reserved bit is not defined.
Control registers			
Command	0xFFE0 0100	R/W	Command register.
Status	0xFFE0 0104	RO	Status register.

Chapter 11: LPC23XX Ethernet

Table 159. Register definitions

Symbol	Address		Description
RxDescriptor	0xFFE0 0108	R/W	Receive descriptor base address register.
RxStatus	0xFFE0 010C	R/W	Receive status base address register.
RxDescriptorNumber	0xFFE0 0110	R/W	Receive number of descriptors register.
RxProduceIndex	0xFFE0 0114	RO	Receive produce index register.
RxConsumeIndex	0xFFE0 0118	R/W	Receive consume index register.
TxDescriptor	0xFFE0 011C	R/W	Transmit descriptor base address register.
TxStatus	0xFFE0 0120	R/W	Transmit status base address register.
TxDescriptorNumber	0xFFE0 0124	R/W	Transmit number of descriptors register.
TxProduceIndex	0xFFE0 0128	R/W	Transmit produce index register.
TxConsumeIndex	0xFFE0 012C	RO	Transmit consume index register.
-	0xFFE0 0130 to 0xFFE0 0154	-	Reserved, user software should not write ones to reserved bits. The value read from a reserved bit is not defined.
TSV0	0xFFE0 0158	RO	Transmit status vector 0 register.
TSV1	0xFFE0 015C	RO	Transmit status vector 1 register.
RSV	0xFFE0 0160	RO	Receive status vector register.
-	0xFFE0 0164 to 0xFFE0 016C	-	Reserved, user software should not write ones to reserved bits. The value read from a reserved bit is not defined.
FlowControlCounter	0xFFE0 0170	R/W	Flow control counter register.
FlowControlStatus	0xFFE0 0174	RO	Flow control status register.
-	0xFFE0 0178 to 0xFFE0 01FC	-	Reserved, user software should not write ones to reserved bits. The value read from a reserved bit is not defined.
Rx filter registers			
RxFliterCtrl	0xFFE0 0200		Receive filter control register.
RxFilterWoLStatus	0xFFE0 0204		Receive filter WoL status register.
RxFilterWoLClear	0xFFE0 0208		Receive filter WoL clear register.
-	0xFFE0 020C	-	Reserved, user software should not write ones to reserved bits. The value read from a reserved bit is not defined.
HashFilterL	0xFFE0 0210		Hash filter table LSBs register.
HashFilterH	0xFFE0 0214		Hash filter table MSBs register.
-	0xFFE0 0218 to 0xFFE0 0FDC	-	Reserved, user software should not write ones to reserved bits. The value read from a reserved bit is not defined.
Module control regis	iters		
IntStatus	0xFFE0 0FE0	RO	Interrupt status register.
IntEnable	0xFFE0 0FE4	R/W	Interrupt enable register.
IntClear	0xFFE0 0FE8	WO	Interrupt clear register.
IntSet	0xFFE0 0FEC	WO	Interrupt set register.

Chapter 11: LPC23XX Ethernet

Table 159. Register definitions

Symbol	Address	R/W	Description
-	0xFFE0 0FF0	-	Reserved, user software should not write ones to reserved bits. The value read from a reserved bit is not defined.
PowerDown	0xFFE0 0FF4	R/W	Power-down register.
-	0xFFE0 0FF8	-	Reserved, user software should not write ones to reserved bits. The value read from a reserved bit is not defined.

The third column in the table lists the accessibility of the register: read-only, write-only, read/write.

All AHB register write transactions except for accesses to the interrupt registers are posted i.e. the AHB transaction will complete before write data is actually committed to the register. Accesses to the interrupt registers will only be completed by accepting the write data when the data has been committed to the register.

11.12 Ethernet MAC register definitions

This section defines the bits in the individual registers of the Ethernet block register map.

11.12.1 MAC Configuration Register 1 (MAC1 - 0xFFE0 0000)

The MAC configuration register 1 (MAC1) has an address of 0xFFE0 0000. Its bit definition is shown in Table 160.

Table 160. MAC Configuration register 1 (MAC1 - address 0xFFE0 0000) bit description

Bit	Symbol	Function	Reset value
0	RECEIVE ENABLE	Set this to allow receive frames to be received. Internally the MAC synchronizes this control bit to the incoming receive stream.	0
1	PASS ALL RECEIVE FRAMES	When enabled (set to '1'), the MAC will pass all frames regardless of type (normal vs. Control). When disabled, the MAC does not pass valid Control frames.	0
2	RX FLOW CONTROL	When enabled (set to '1'), the MAC acts upon received PAUSE Flow Control frames. When disabled, received PAUSE Flow Control frames are ignored.	0
3	TX FLOW CONTROL	When enabled (set to '1'), PAUSE Flow Control frames are allowed to be transmitted. When disabled, Flow Control frames are blocked.	0
4	LOOPBACK	Setting this bit will cause the MAC Transmit interface to be looped back to the MAC Receive interface. Clearing this bit results in normal operation.	0
7:5	-	Unused	0x0
8	RESET TX	Setting this bit will put the Transmit Function logic in reset.	0
9	RESET MCS / TX	Setting this bit resets the MAC Control Sublayer / Transmit logic. The MCS logic implements flow control.	0
10	RESET RX	Setting this bit will put the Ethernet receive logic in reset.	0
11	RESET MCS / RX	Setting this bit resets the MAC Control Sublayer / Receive logic. The MCS logic implements flow control.	0x0
13:12	-	Reserved. User software should not write ones to reserved bits. The value read from a reserved bit is not defined.	0x0

Chapter 11: LPC23XX Ethernet

Table 160. MAC Configuration register 1 (MAC1 - address 0xFFE0 0000) bit description

Bit	Symbol	Function	Reset value
14	SIMULATION RESET	Setting this bit will cause a reset to the random number generator within the Transmit Function.	0
15	SOFT RESET	Setting this bit will put all modules within the MAC in reset except the Host Interface.	1
31:16	-	Reserved. User software should not write ones to reserved bits. The value read from a reserved bit is not defined.	0x0

11.12.2 MAC Configuration Register 2 (MAC2 - 0xFFE0 0004)

The MAC configuration register 2 (MAC2) has an address of 0xFFE0 0004. Its bit definition is shown in Table 161.

Table 161. MAC Configuration register 2 (MAC2 - address 0xFFE0 0004) bit description

Bit	Symbol	Function	Reset value
0	FULL-DUPLEX	When enabled (set to '1'), the MAC operates in Full-Duplex mode. When disabled, the MAC operates in Half-Duplex mode.	0
1	FRAME LENGTH CHECKING	When enabled (set to '1'), both transmit and receive frame lengths are compared to the Length/Type field. If the Length/Type field represents a length then the check is performed. Mismatches are reported in the StatusInfo word for each received frame.	0
2	HUGE FRAME ENABLE	When enabled (set to '1'), frames of any length are transmitted and received.	0
3	DELAYED CRC	This bit determines the number of bytes, if any, of proprietary header information that exist on the front of IEEE 802.3 frames. When 1, four bytes of header (ignored by the CRC function) are added. When 0, there is no proprietary header.	0
4	CRC ENABLE	Set this bit to append a CRC to every frame whether padding was required or not. Must be set if PAD/CRC ENABLE is set. Clear this bit if frames presented to the MAC contain a CRC.	0
5	PAD / CRC ENABLE	Set this bit to have the MAC pad all short frames. Clear this bit if frames presented to the MAC have a valid length. This bit is used in conjunction with AUTO PAD ENABLE and VLAN PAD ENABLE. See <u>Table 162</u> - Pad Operation for details on the pad function.	0
6	VLAN PAD ENABLE	Set this bit to cause the MAC to pad all short frames to 64 bytes and append a valid CRC. Consult <u>Table 162</u> - Pad Operation for more information on the various padding features. Note: This bit is ignored if PAD / CRC ENABLE is cleared.	0
7	AUTO DETECT PAD ENABLE	Set this bit to cause the MAC to automatically detect the type of frame, either tagged or un-tagged, by comparing the two octets following the source address with 0x8100 (VLAN Protocol ID) and pad accordingly. Table 162 - Pad Operation provides a description of the pad function based on the configuration of this register. Note : This bit is ignored if PAD / CRC ENABLE is cleared.	0
8	PURE PREAMBLE ENFORCEMENT	When enabled (set to '1'), the MAC will verify the content of the preamble to ensure it contains 0x55 and is error-free. A packet with an incorrect preamble is discarded. When disabled, no preamble checking is performed.	0
9	LONG PREAMBLE ENFORCEMENT	When enabled (set to '1'), the MAC only allows receive packets which contain preamble fields less than 12 bytes in length. When disabled, the MAC allows any length preamble as per the Standard.	0
11:10	-	Reserved. User software should not write ones to reserved bits. The value read from a reserved bit is not defined.	0x0

Chapter 11: LPC23XX Ethernet

Table 161. MAC Configuration register 2 (MAC2 - address 0xFFE0 0004) bit description

Bit	Symbol	Function	Reset value
12	NO BACKOFF	When enabled (set to '1'), the MAC will immediately retransmit following a collision rather than using the Binary Exponential Backoff algorithm as specified in the Standard.	0
13	BACK PRESSURE / NO BACKOFF	When enabled (set to '1'), after the MAC incidentally causes a collision during back pressure, it will immediately retransmit without backoff, reducing the chance of further collisions and ensuring transmit packets get sent.	0
14	EXCESS DEFER	When enabled (set to '1') the MAC will defer to carrier indefinitely as per the Standard. When disabled, the MAC will abort when the excessive deferral limit is reached.	0
31:15	-	Reserved. User software should not write ones to reserved bits. The value read from a reserved bit is not defined.	0x0

Table 162. Pad operation

Туре	Auto detect pad enable MAC2 [7]	VLAN pad enable MAC2 [6]	Pad/CRC enable MAC2 [5]	Action
Any	Х	Х	0	No pad or CRC check
Any	0	0	1	Pad to 60 bytes, append CRC
Any	Х	1	1	Pad to 64 bytes, append CRC
Any	1	0	1	If untagged, pad to 60 bytes and append CRC. If VLAN tagged: pad to 64 bytes and append CRC.

11.12.3 Back-to-Back Inter-Packet-Gap Register (IPGT - 0xFFE0 0008)

The Back-to-Back Inter-Packet-Gap register (IPGT) has an address of 0xFFE0 0008. Its bit definition is shown in Table 163.

Table 163. Back-to-back Inter-packet-gap register (IPGT - address 0xFFE0 0008) bit description

Bit	Symbol	Function	Reset value
6:0	BACK-TO-BACK INTER-PACKET-GAP	This is a programmable field representing the nibble time offset of the minimum possible period between the end of any transmitted packet to the beginning of the next. In Full-Duplex mode, the register value should be the desired period in nibble times minus 3. In Half-Duplex mode, the register value should be the desired period in nibble times minus 6. In Full-Duplex the recommended setting is 0x15 (21d), which represents the minimum IPG of 960 ns (in 100 Mbps mode) or 9.6 μs (in 10 Mbps mode). In Half-Duplex the recommended setting is 0x12 (18d), which also represents the minimum IPG of 960 ns (in 100 Mbps mode) or 9.6 μs (in 10 Mbps mode).	0x0
31:7	-	Reserved. User software should not write ones to reserved bits. The value read from a reserved bit is not defined.	0x0

11.12.4 Non Back-to-Back Inter-Packet-Gap Register (IPGR - 0xFFE0 000C)

The Non Back-to-Back Inter-Packet-Gap register (IPGR) has an address of 0xFFE0 000C. Its bit definition is shown in Table 164.

Chapter 11: LPC23XX Ethernet

Table 164. Non Back-to-back Inter-packet-gap register (IPGR - address 0xFFE0 000C) bit description

Bit	Symbol	Function	Reset value
6:0	NON-BACK-TO-BACK INTER-PACKET-GAP PART2	This is a programmable field representing the Non-Back-to-Back Inter-Packet-Gap. The recommended value is 0x12 (18d), which represents the minimum IPG of 960 ns (in 100 Mbps mode) or 9.6 μ s (in 10 Mbps mode).	0x0
7	-	Reserved. User software should not write ones to reserved bits. The value read from a reserved bit is not defined.	0x0
14:8	NON-BACK-TO-BACK INTER-PACKET-GAP PART1	This is a programmable field representing the optional carrierSense window referenced in IEEE 802.3/4.2.3.2.1 'Carrier Deference'. If carrier is detected during the timing of IPGR1, the MAC defers to carrier. If, however, carrier becomes active after IPGR1, the MAC continues timing IPGR2 and transmits, knowingly causing a collision, thus ensuring fair access to medium. Its range of values is 0x0 to IPGR2. The recommended value is 0xC (12d)	0x0
31:15	-	Reserved. User software should not write ones to reserved bits. The value read from a reserved bit is not defined.	0x0

11.12.5 Collision Window / Retry Register (CLRT - 0xFFE0 0010)

The Collision window / Retry register (CLRT) has an address of 0xFFE0 0010. Its bit definition is shown in Table 165.

Table 165. Collision Window / Retry register (CLRT - address 0xFFE0 0010) bit description

Bit	Symbol	Function	Reset value
3:0	RETRANSMISSION MAXIMUM	This is a programmable field specifying the number of retransmission attempts following a collision before aborting the packet due to excessive collisions. The Standard specifies the attemptLimit to be 0xF (15d). See IEEE 802.3/4.2.3.2.5.	0xF
7:4	-	Reserved. User software should not write ones to reserved bits. The value read from a reserved bit is not defined.	0x0
13:8	COLLISION WINDOW	This is a programmable field representing the slot time or collision window during which collisions occur in properly configured networks. The default value of 0x37 (55d) represents a 56 byte window following the preamble and SFD.	0x37
31:14	-	Reserved, user software should not write ones to reserved bits. The value read from a reserved bit is not defined.	NA

11.12.6 Maximum Frame Register (MAXF - 0xFFE0 0014)

The Maximum Frame register (MAXF) has an address of 0xFFE0 0014. Its bit definition is shown in Table 166.

Table 166. Maximum Frame register (MAXF - address 0xFFE0 0014) bit description

Bit	Symbol	Function	Reset value
15:0	MAXIMUM FRAME LENGTH	This field resets to the value 0x0600, which represents a maximum receive frame of 1536 octets. An untagged maximum size Ethernet frame is 1518 octets. A tagged frame adds four octets for a total of 1522 octets. If a shorter maximum length restriction is desired, program this 16 bit field.	0x0600
31:16	-	Unused	0x0

Chapter 11: LPC23XX Ethernet

11.12.7 PHY Support Register (SUPP - 0xFFE0 0018)

The PHY Support register (SUPP) has an address of 0xFFE0 0018. The SUPP register provides additional control over the RMII interface. The bit definition of this register is shown in Table 167.

Table 167. PHY Support register (SUPP - address 0xFFE0 0018) bit description

Bit	Symbol	Function	Reset value
7:0	-	Unused	0x0
8	SPEED	This bit configures the Reduced MII logic for the current operating speed. When set, 100 Mbps mode is selected. When cleared, 10 Mbps mode is selected.	0
31:9	-	Unused	0x0

Unused bits in the PHY support register should be left as zeroes.

11.12.8 Test Register (TEST - 0xFFE0 001C)

The Test register (TEST) has an address of 0xFFE0 001C. The bit definition of this register is shown in Table 168. These bits are used for testing purposes only.

Table 168. Test register (TEST - address 0xFFE0) bit description

Bit	Symbol	Function	Reset value
0	SHORTCUT PAUSE QUANTA	This bit reduces the effective PAUSE quanta from 64 byte-times to 1 byte-time.	0
1	TEST PAUSE	This bit causes the MAC Control sublayer to inhibit transmissions, just as if a PAUSE Receive Control frame with a nonzero pause time parameter was received.	0
2	TEST BACKPRESSURE	Setting this bit will cause the MAC to assert backpressure on the link. Backpressure causes preamble to be transmitted, raising carrier sense. A transmit packet from the system will be sent during backpressure.	0
31:3	-	Unused	0x0

11.12.9 MII Mgmt Configuration Register (MCFG - 0xFFE0 0020)

The MII Mgmt Configuration register (MCFG) has an address of 0xFFE0 0020. The bit definition of this register is shown in Table 169.

Table 169. MII Mgmt Configuration register (MCFG - address 0xFFE0 0020) bit description

Bit	Symbol	Function	Reset value
0	SCAN INCREMENT	Set this bit to cause the MII Management hardware to perform read cycles across a range of PHYs. When set, the MII Management hardware will perform read cycles from address 1 through the value set in PHY ADDRESS[4:0]. Clear this bit to allow continuous reads of the same PHY.	0
1	SUPPRESS PREAMBLE	Set this bit to cause the MII Management hardware to perform read/write cycles without the 32 bit preamble field. Clear this bit to cause normal cycles to be performed. Some PHYs support suppressed preamble.	0
4:2	CLOCK SELECT	This field is used by the clock divide logic in creating the MII Management Clock (MDC) which IEEE 802.3u defines to be no faster than 2.5 MHz. Some PHYs support clock rates up to 12.5 MHz, however. Refer to Table 170 below for the definition of values for this field.	0

UM10211

Chapter 11: LPC23XX Ethernet

Table 169. MII Mgmt Configuration register (MCFG - address 0xFFE0 0020) bit description

Bit	Symbol	Function	Reset value
14:5	-	Unused	0x0
15	RESET MII MGMT	This bit resets the MII Management hardware.	0
31:16	-	Unused	0x0

Table 170. Clock select encoding

Clock Select	Bit 4	Bit 3	Bit 2
Host Clock divided by 4	0	0	x
Host Clock divided by 6	0	1	0
Host Clock divided by 8	0	1	1
Host Clock divided by 10	1	0	0
Host Clock divided by 14	1	0	1
Host Clock divided by 20	1	1	0
Host Clock divided by 28	1	1	1

11.12.10 MII Mgmt Command Register (MCMD - 0xFFE0 0024)

The MII Mgmt Command register (MCMD) has an address of 0xFFE0 0024. The bit definition of this register is shown in Table 171.

Table 171. MII Mgmt Command register (MCMD - address 0xFFE0 0024) bit description

Bit	Symbol	Function	Reset value
0	READ	This bit causes the MII Management hardware to perform a single Read cycle. The Read data is returned in Register MRDD (MII Mgmt Read Data).	0
1	SCAN	This bit causes the MII Management hardware to perform Read cycles continuously. This is useful for monitoring Link Fail for example.	0
31:2	-	Unused	0x0

11.12.11 MII Mgmt Address Register (MADR - 0xFFE0 0028)

The MII Mgmt Address register (MADR) has an address of 0xFFE0 0028. The bit definition of this register is shown in $\underline{\text{Table 172}}$.

Table 172. MII Mgmt Address register (MADR - address 0xFFE0 0028) bit description

Bit	Symbol	Function	Reset value
4:0	REGISTER ADDRESS	This field represents the 5 bit Register Address field of Mgmt cycles. Up to 32 registers can be accessed.	0x0
7:5	-	Unused	0x0
12:8	PHY ADDRESS	This field represents the 5 bit PHY Address field of Mgmt cycles. Up to 31 PHYs can be addressed (0 is reserved).	0x0
31:13	-	Unused	0x0

Chapter 11: LPC23XX Ethernet

11.12.12 MII Mgmt Write Data Register (MWTD - 0xFFE0 002C)

The MII Mgmt Write Data register (MWTD) is a Write Only register with an address of 0xFFE0 002C. The bit definition of this register is shown in Table 173.

Table 173. MII Mgmt Write Data register (MWTD - address 0xFFE0 002C) bit description

Bit	Symbol	Function	Reset value
15:0	WRITE DATA	When written, an MII Mgmt write cycle is performed using the 16 bit data and the pre-configured PHY and Register addresses from the MII Mgmt Address register (MADR).	0x0
31:16	-	Unused	0x0

11.12.13 MII Mgmt Read Data Register (MRDD - 0xFFE0 0030)

The MII Mgmt Read Data register (MRDD) is a Read Only register with an address of 0xFFE0 0030. The bit definition of this register is shown in <u>Table 174</u>.

Table 174. MII Mgmt Read Data register (MRDD - address 0xFFE0 0030) bit description

Bit	Symbol	Function	Reset value
15:0	READ DATA	Following an MII Mgmt Read Cycle, the 16 bit data can be read from this location.	0x0
31:16	-	Unused	0x0

11.12.14 MII Mgmt Indicators Register (MIND - 0xFFE0 0034)

The MII Mgmt Indicators register (MIND) is a Read Only register with an address of 0xFFE0 0034. The bit definition of this register is shown in Table 175.

Table 175. MII Mgmt Indicators register (MIND - address 0xFFE0 0034) bit description

Bit	Symbol	Function	Reset value
0	BUSY	When '1' is returned - indicates MII Mgmt is currently performing an MII Mgmt Read or Write cycle.	0
1	SCANNING	When '1' is returned - indicates a scan operation (continuous MII Mgmt Read cycles) is in progress.	0
2	NOT VALID	When '1' is returned - indicates MII Mgmt Read cycle has not completed and the Read Data is not yet valid.	0
3	MII Link Fail	When '1' is returned - indicates that an MII Mgmt link fail has occurred.	0
31:4	-	Unused	0x0

Here are two examples to access PHY via the MII Management Controller.

For PHY Write if scan is not used:

- 1. Write 0 to MCMD
- 2. Write PHY address and register address to MADR
- 3. Write data to MWTD
- 4. Wait for busy bit to be cleared in MIND

Chapter 11: LPC23XX Ethernet

For PHY Read if scan is not used:

- 1. Write 1 to MCMD
- 2. Write PHY address and register address to MADR
- 3. Wait for busy bit to be cleared in MIND
- 4. Write 0 to MCMD
- Read data from MRDD

11.12.15 Station Address 0 Register (SA0 - 0xFFE0 0040)

The Station Address 0 register (SA0) has an address of 0xFFE0 0040. The bit definition of this register is shown in Table 176.

Table 176. Station Address register (SA0 - address 0xFFE0 0040) bit description

Bit	Symbol	Function	Reset value
7:0	STATION ADDRESS, 2nd octet	This field holds the second octet of the station address.	0x0
15:8	STATION ADDRESS, 1st octet	This field holds the first octet of the station address.	0x0
31:16	-	Unused	0x0

The station address is used for perfect address filtering and for sending pause control frames. For the ordering of the octets in the packet please refer to Figure 32.

11.12.16 Station Address 1 Register (SA1 - 0xFFE0 0044)

The Station Address 1 register (SA1) has an address of 0xFFE0 0044. The bit definition of this register is shown in Table 177.

Table 177. Station Address register (SA1 - address 0xFFE0 0044) bit description

Bit	Symbol	Function	Reset value
7:0	STATION ADDRESS, 4th octet	This field holds the fourth octet of the station address.	0x0
15:8	STATION ADDRESS, 3rd octet	This field holds the third octet of the station address.	0x0
31:16	-	Unused	0x0

The station address is used for perfect address filtering and for sending pause control frames. For the ordering of the octets in the packet please refer to Figure 32.

11.12.17 Station Address 2 Register (SA2 - 0xFFE0 0048)

The Station Address 2 register (SA2) has an address of 0xFFE0 0048. The bit definition of this register is shown in <u>Table 178</u>.

Chapter 11: LPC23XX Ethernet

Table 178. Station Address register (SA2 - address 0xFFE0 0048) bit description

Bit	Symbol	Function	Reset value
7:0	STATION ADDRESS, 6th octet	This field holds the sixth octet of the station address.	0x0
15:8	STATION ADDRESS, 5th octet	This field holds the fifth octet of the station address.	0x0
31:16	-	Unused	0x0

The station address is used for perfect address filtering and for sending pause control frames. For the ordering of the octets in the packet please refer to Figure 32.

11.13 Control register definitions

11.13.1 Command Register (Command - 0xFFE0 0100)

The Command register (Command) register has an address of 0xFFE0 0100. Its bit definition is shown in <u>Table 179</u>.

Table 179. Command register (Command - address 0xFFE0 0100) bit description

Bit	Symbol	Function	Reset value
0	RxEnable	Enable receive.	0
1	TxEnable	Enable transmit.	0
2	-	Unused	0x0
3	RegReset	When a '1' is written, all datapaths and the host registers are reset. The MAC needs to be reset separately.	
4	TxReset	When a '1' is written, the transmit datapath is reset.	0
5	RxReset	When a '1' is written, the receive datapath is reset.	0
6	PassRuntFrame	When set to '1', passes runt frames smaller than 64 bytes to memory unless they have a CRC error. If '0' runt frames are filtered out.	
7	PassRxFilter	When set to '1', disables receive filtering i.e. all frames received are written to memory.	0
8	TxFlowControl	Enable IEEE 802.3 / clause 31 flow control sending pause frames in full duplex and continuous preamble in half duplex.	0
9	RMII	When set to '1', RMII mode is selected; if '0', MII mode is selected (see Section 11.18.2).	
10	FullDuplex	When set to '1', indicates full duplex operation.	
31:11	-	Unused	0x0

All bits can be written and read. The Tx/RxReset bits are write only, reading will return a 0.

11.13.2 Status Register (Status - 0xFFE0 0104)

The Status register (Status) is a Read Only register with an address of 0xFFE0 0104. Its bit definition is shown in <u>Table 180</u>.

Chapter 11: LPC23XX Ethernet

Table 180. Status register (Status - address 0xFFE0 0104) bit description

Bit	Symbol	Function	Reset value
0	RxStatus	If 1, the receive channel is active. If 0, the receive channel is inactive.	0
1	TxStatus	If 1, the transmit channel is active. If 0, the transmit channel is inactive.	0
31:2	-	Unused	0x0

The values represent the status of the two channels/data paths. When the status is 1, the channel is active, meaning:

- It is enabled and the Rx/TxEnable bit is set in the Command register or it just got disabled while still transmitting or receiving a frame.
- Also, for the transmit channel, the transmit queue is not empty i.e. ProduceIndex != ConsumeIndex.
- Also, for the receive channel, the receive queue is not full i.e. ProduceIndex != ConsumeIndex - 1.

The status transitions from active to inactive if the channel is disabled by a software reset of the Rx/TxEnable bit in the Command register and the channel has committed the status and data of the current frame to memory. The status also transitions to inactive if the transmit queue is empty or if the receive queue is full and status and data have been committed to memory.

11.13.3 Receive Descriptor Base Address Register (RxDescriptor - 0xFFE0 0108)

The Receive Descriptor base address register (RxDescriptor) has an address of 0xFFE0 0108. Its bit definition is shown in Table 181.

Table 181. Receive Descriptor Base Address register (RxDescriptor - address 0xFFE0 0108) bit description

Bit	Symbol	Function	Reset value
1:0	-	Fixed to '00'	-
31:2	RxDescriptor	MSBs of receive descriptor base address.	0x0

The receive descriptor base address is a byte address aligned to a word boundary i.e. LSB 1:0 are fixed to '00'. The register contains the lowest address in the array of descriptors.

11.13.4 Receive Status Base Address Register (RxStatus - 0xFFE0 010C)

The receive descriptor base address is a byte address aligned to a word boundary i.e. LSB 1:0 are fixed to '00'. The register contains the lowest address in the array of descriptors.

Table 182. receive Status Base Address register (RxStatus - address 0xFFE0 010C) bit description

Bit	Symbol	Function	Reset value
2:0	-	Fixed to '000'	-
31:3	RxStatus	MSBs of receive status base address.	0x0

UM10211

Chapter 11: LPC23XX Ethernet

The receive status base address is a byte address aligned to a double word boundary i.e. LSB 2:0 are fixed to '000'.

11.13.5 Receive Number of Descriptors Register (RxDescriptor - 0xFFE0 0110)

The Receive Number of Descriptors register (RxDescriptorNumber) has an address of 0xFFE0 0110. Its bit definition is shown in Table 183.

Table 183. Receive Number of Descriptors register (RxDescriptor - address 0xFFE0 0110) bit description

Bit	Symbol	Function	Reset value
15:0	RxDescriptorNumber	Number of descriptors in the descriptor array for which RxDescriptor is the base address. The number of descriptors is minus one encoded.	0x0
31:16	-	Unused	0x0

The receive number of descriptors register defines the number of descriptors in the descriptor array for which RxDescriptor is the base address. The number of descriptors should match the number of statuses. The register uses minus one encoding i.e. if the array has 8 elements, the value in the register should be 7.

11.13.6 Receive Produce Index Register (RxProduceIndex - 0xFFE0 0114)

The Receive Produce Index register (RxProduceIndex) is a Read Only register with an address of 0xFFE0 0114. Its bit definition is shown in Table 184.

Table 184. Receive Produce Index register (RxProduceIndex - address 0xFFE0 0114) bit description

Bit	Symbol	Function	Reset value
15:0	RxProduceIndex	Index of the descriptor that is going to be filled next by the receive datapath.	0x0
31:16	-	Unused	0x0

The receive produce index register defines the descriptor that is going to be filled next by the hardware receive process. After a frame has been received, hardware increments the index. The value is wrapped to 0 once the value of RxDescriptorNumber has been reached. If the RxProduceIndex equals RxConsumeIndex - 1, the array is full and any further frames being received will cause a buffer overrun error.

11.13.7 Receive Consume Index Register (RxConsumeIndex - 0xFFE0 0118)

The Receive consume index register (RxConsumeIndex) has an address of 0xFFE0 0118. Its bit definition is shown in <u>Table 185</u>.

Chapter 11: LPC23XX Ethernet

Table 185. Receive Consume Index register (RXConsumeIndex - address 0xFFE0 0118) bit description

Bit	Symbol	Function	Reset value
15:0	RxConsumeIndex	Index of the descriptor that is going to be processed next by the receive	
31:16	-	Unused	0x0

The receive consume register defines the descriptor that is going to be processed next by the software receive driver. The receive array is empty as long as RxProduceIndex equals RxConsumeIndex. As soon as the array is not empty, software can process the frame pointed to by RxConsumeIndex. After a frame has been processed by software, software should increment the RxConsumeIndex. The value must be wrapped to 0 once the value of RxDescriptorNumber has been reached. If the RxProduceIndex equals RxConsumeIndex - 1, the array is full and any further frames being received will cause a buffer overrun error.

11.13.8 Transmit Descriptor Base Address Register (TxDescriptor - 0xFFE0 011C)

The Transmit Descriptor base address register (TxDescriptor) has an address of 0xFFE0 011C. Its bit definition is shown in Table 186.

Table 186. Transmit Descriptor Base Address register (TxDescriptor - address 0xFFE0 011C) bit description

Bit	Symbol	Function	Reset value
1:0	-	Fixed to '00'	-
31:2	TxDescriptor	MSBs of transmit descriptor base address.	0x0

The transmit descriptor base address is a byte address aligned to a word boundary i.e. LSB 1:0 are fixed to '00'. The register contains the lowest address in the array of descriptors.

11.13.9 Transmit Status Base Address Register (TxStatus - 0xFFE0 0120)

The Transmit Status base address register (TxStatus) has an address of 0xFFE0 0120. Its bit definition is shown in Table 187.

Table 187. Transmit Status Base Address register (TxStatus - address 0xFFE0 0120) bit description

Bit	Symbol	Function	Reset value
1:0	-	Fixed to '00'	-
31:2	TxStatus	MSBs of transmit status base address.	0x0

The transmit status base address is a byte address aligned to a word boundary i.e. LSB 1:0 are fixed to '00'. The register contains the lowest address in the array of statuses.

Chapter 11: LPC23XX Ethernet

11.13.10 Transmit Number of Descriptors Register (TxDescriptorNumber - 0xFFE0 0124)

The Transmit Number of Descriptors register (TxDescriptorNumber) has an address of 0xFFE0 0124. Its bit definition is shown in Table 188.

Table 188. Transmit Number of Descriptors register (TxDescriptorNumber - address 0xFFE0 0124) bit description

	,	•	
Bit	Symbol	Function	Reset value
15:0	TxDescriptorNumber	Number of descriptors in the descriptor array for which TxDescriptor is the base address. The register is minus one encoded.	
31:16	-	Unused	0x0

The transmit number of descriptors register defines the number of descriptors in the descriptor array for which TxDescriptor is the base address. The number of descriptors should match the number of statuses. The register uses minus one encoding i.e. if the array has 8 elements, the value in the register should be 7.

11.13.11 Transmit Produce Index Register (TxProduceIndex - 0xFFE0 0128)

The Transmit Produce Index register (TxProduceIndex) has an address of 0xFFE0 0128. Its bit definition is shown in Table 189.

Table 189. Transmit Produce Index register (TxProduceIndex - address 0xFFE0 0128) bit description

Bit	Symbol	Function	Reset value
15:0	TxProduceIndex	Index of the descriptor that is going to be filled next by the transmit software driver.	0x0
31:16	-	Unused	0x0

The transmit produce index register defines the descriptor that is going to be filled next by the software transmit driver. The transmit descriptor array is empty as long as TxProduceIndex equals TxConsumeIndex. If the transmit hardware is enabled, it will start transmitting frames as soon as the descriptor array is not empty. After a frame has been processed by software, it should increment the TxProduceIndex. The value must be wrapped to 0 once the value of TxDescriptorNumber has been reached. If the TxProduceIndex equals TxConsumeIndex - 1 the descriptor array is full and software should stop producing new descriptors until hardware has transmitted some frames and updated the TxConsumeIndex.

11.13.12 Transmit Consume Index Register (TxConsumeIndex - 0xFFE0 012C)

The Transmit Consume Index register (TxConsumeIndex) is a Read Only register with an address of 0xFFE0 012C. Its bit definition is shown in Table 190.

Chapter 11: LPC23XX Ethernet

Table 190. Transmit Consume Index register (TxConsumeIndex - address 0xFFE0 012C) bit description

Bit	Symbol	Function	Reset value
15:0	TxConsumeIndex	Index of the descriptor that is going to be transmitted next by the transmit datapath.	0x0
31:16	-	Unused	0x0

The transmit consume index register defines the descriptor that is going to be transmitted next by the hardware transmit process. After a frame has been transmitted hardware increments the index, wrapping the value to 0 once the value of TxDescriptorNumber has been reached. If the TxConsumeIndex equals TxProduceIndex the descriptor array is empty and the transmit channel will stop transmitting until software produces new descriptors.

11.13.13 Transmit Status Vector 0 Register (TSV0 - 0xFFE0 0158)

The Transmit Status Vector 0 register (TSV0) is a Read Only register with an address of 0xFFE0 0158. The transmit status vector registers store the most recent transmit status returned by the MAC. Since the status vector consists of more than 4 bytes, status is distributed over two registers TSV0 and TSV1. These registers are provided for debug purposes, because the communication between driver software and the Ethernet block takes place primarily through the frame descriptors. The status register contents are valid as long as the internal status of the MAC is valid and should typically only be read when the transmit and receive processes are halted.

Table 191 lists the bit definitions of the TSV0 register.

Table 191. Transmit Status Vector 0 register (TSV0 - address 0xFFE0 0158) bit description

Bit	Symbol	Function	Reset value
0	CRC error	The attached CRC in the packet did not match the internally generated CRC.	0
1	Length check error	Indicates the frame length field does not match the actual number of data items and is not a type field.	0
2	Length out of range[1]	Indicates that frame type/length field was larger than 1500 bytes.	0
3	Done	Transmission of packet was completed.	0
4	Multicast	Packet's destination was a multicast address.	0
5	Broadcast	Packet's destination was a broadcast address.	0
6	Packet Defer	Packet was deferred for at least one attempt, but less than an excessive defer.	0
7	Excessive Defer	Packet was deferred in excess of 6071 nibble times in 100 Mbps or 24287 bit times in 10 Mbps mode.	0
8	Excessive Collision	Packet was aborted due to exceeding of maximum allowed number of collisions.	0
9	Late Collision	Collision occurred beyond collision window, 512 bit times.	0
10	Giant	Byte count in frame was greater than can be represented in the transmit byte count field in TSV1.	0
11	Underrun	Host side caused buffer underrun.	0

Chapter 11: LPC23XX Ethernet

Table 191.	Transmit Status Ved	tor 0 register (TSV0	- address 0xFFE0 0158) bit description

Bit	Symbol	Function	Reset value
27:12	Total bytes	The total number of bytes transferred including collided attempts.	0x0
28	Control frame	The frame was a control frame.	0
29	Pause	The frame was a control frame with a valid PAUSE opcode.	0
30	Backpressure	Carrier-sense method backpressure was previously applied.	0
31	VLAN	Frame's length/type field contained 0x8100 which is the VLAN protocol identifier.	0

^[1] The EMAC doesn't distinguish the frame type and frame length, so, e.g. when the IP(0x8000) or ARP(0x0806) packets are received, it compares the frame type with the max length and gives the "Length out of range" error. In fact, this bit is not an error indication, but simply a statement by the chip regarding the status of the received frame.

11.13.14 Transmit Status Vector 1 Register (TSV1 - 0xFFE0 015C)

The Transmit Status Vector 1 register (TSV1) is a Read Only register with an address of 0xFFE0 015C. The transmit status vector registers store the most recent transmit status returned by the MAC. Since the status vector consists of more than 4 bytes, status is distributed over two registers TSV0 and TSV1. These registers are provided for debug purposes, because the communication between driver software and the Ethernet block takes place primarily through the frame descriptors. The status register contents are valid as long as the internal status of the MAC is valid and should typically only be read when the transmit and receive processes are halted. Table 192 lists the bit definitions of the TSV1 register.

Table 192. Transmit Status Vector 1 register (TSV1 - address 0xFFE0 015C) bit description

Bit	Symbol	Function	Reset value
15:0	Transmit byte count	The total number of bytes in the frame, not counting the collided bytes.	0x0
19:16	Transmit collision count	Number of collisions the current packet incurred during transmission attempts. The maximum number of collisions (16) cannot be represented.	0x0
31:20	-	Unused	0x0

11.13.15 Receive Status Vector Register (RSV - 0xFFE0 0160)

The Receive status vector register (RSV) is a Read Only register with an address of 0xFFE0 0160. The receive status vector register stores the most recent receive status returned by the MAC. This register is provided for debug purposes, because the communication between driver software and the Ethernet block takes place primarily through the frame descriptors. The status register contents are valid as long as the internal status of the MAC is valid and should typically only be read when the transmit and receive processes are halted.

<u>Table 193</u> lists the bit definitions of the RSV register.

Chapter 11: LPC23XX Ethernet

Table 193. Receive Status Vector register (RSV - address 0xFFE0 0160) bit description

Bit	Symbol	Function	Reset value
15:0	Received byte count	Indicates length of received frame.	0x0
16	Packet previously ignored	Indicates that a packet was dropped.	0
17	RXDV event previously seen	Indicates that the last receive event seen was not long enough to be a valid packet.	0
18	Carrier event previously seen	Indicates that at some time since the last receive statistics, a carrier event was detected.	0
19	Receive code violation	Indicates that received PHY data does not represent a valid receive code.	0
20	CRC error	The attached CRC in the packet did not match the internally generated CRC.	0
21	Length check error	Indicates the frame length field does not match the actual number of data items and is not a type field.	0
22	Length out of range[1]	Indicates that frame type/length field was larger than 1518 bytes.	0
23	Receive OK	The packet had valid CRC and no symbol errors.	0
24	Multicast	The packet destination was a multicast address.	0
25	Broadcast	The packet destination was a broadcast address.	0
26	Dribble Nibble	Indicates that after the end of packet another 1-7 bits were received. A single nibble, called dribble nibble, is formed but not sent out.	0
27	Control frame	The frame was a control frame.	0
28	PAUSE	The frame was a control frame with a valid PAUSE opcode.	0
29	Unsupported Opcode	The current frame was recognized as a Control Frame but contains an unknown opcode.	0
30	VLAN	Frame's length/type field contained 0x8100 which is the VLAN protocol identifier.	0
31	-	Unused	0x0

^[1] The EMAC doesn't distinguish the frame type and frame length, so, e.g. when the IP(0x8000) or ARP(0x0806) packets are received, it compares the frame type with the max length and gives the "Length out of range" error. In fact, this bit is not an error indication, but simply a statement by the chip regarding the status of the received frame.

11.13.16 Flow Control Counter Register (FlowControlCounter - 0xFFE0 0170)

The Flow Control Counter register (FlowControlCounter) has an address of 0xFFE0 0170. Table 194 lists the bit definitions of the register.

Chapter 11: LPC23XX Ethernet

Table 194. Flow Control Counter register (FlowControlCounter - address 0xFFE0 0170) bit description

Bit	Symbol	Function	Reset value
15:0	MirrorCounter	In full duplex mode the MirrorCounter specifies the number of cycles before re-issuing the Pause control frame.	0x0
31:16	PauseTimer	In full-duplex mode the PauseTimer specifies the value that is inserted into the pause timer field of a pause flow control frame. In half duplex mode the PauseTimer specifies the number of backpressure cycles.	0x0

11.13.17 Flow Control Status Register (FlowControlStatus - 0xFFE0 0174)

The Flow Control Status register (FlowControlStatus) is a Read Only register with an address of 0xFFE0 8174. Table 195 lists the bit definitions of the register.

Table 195. Flow Control Status register (FlowControlStatus - address 0xFFE0 8174) bit description

	•		
Bit	Symbol	Function	Reset value
15:0	MirrorCounterCurrent	In full duplex mode this register represents the current value of the datapath's mirror counter which counts up to the value specified by the MirrorCounter field in the FlowControlCounter register. In half duplex mode the register counts until it reaches the value of the PauseTimer bits in the FlowControlCounter register.	0x0
31:16	-	Unused	0x0

11.14 Receive filter register definitions

11.14.1 Receive Filter Control Register (RxFilterCtrl - 0xFFE0 0200)

The Receive Filter Control register (RxFilterCtrl) has an address of 0xFFE0 0200. Table 196 lists the definition of the individual bits in the register.

Table 196. Receive Filter Control register (RxFilterCtrl - address 0xFFE0 0200) bit description

Bit	Symbol	Function	Reset value
0	AcceptUnicastEn	When set to '1', all unicast frames are accepted.	0
1	AcceptBroadcastEn	When set to '1', all broadcast frames are accepted.	0
2	AcceptMulticastEn	When set to '1', all multicast frames are accepted.	0
3	AcceptUnicastHashEn	When set to '1', unicast frames that pass the imperfect hash filter are accepted.	0
4	AcceptMulticastHashEn	When set to '1', multicast frames that pass the imperfect hash filter are accepted.	0
5	AcceptPerfectEn	When set to '1', the frames with a destination address identical to the	0
		station address are accepted.	

Chapter 11: LPC23XX Ethernet

Table 196. Receive Filter Control register (RxFilterCtrl - address 0xFFE0 0200) bit description

Bit	Symbol	Function	Reset value
11:6	-	Reserved, user software should not write ones to reserved bits. The value read from a reserved bit is not defined.	NA
12	MagicPacketEnWoL	When set to '1', the result of the magic packet filter will generate a WoL interrupt when there is a match.	0
13	RxFilterEnWoL	When set to '1', the result of the perfect address matching filter and the imperfect hash filter will generate a WoL interrupt when there is a match.	0
31:14	-	Unused	0x0

11.14.2 Receive Filter WoL Status Register (RxFilterWoLStatus - 0xFFE0 0204)

The Receive Filter Wake-up on LAN Status register (RxFilterWoLStatus) is a Read Only register with an address of 0xFFE0 0204.

Table 197 lists the definition of the individual bits in the register.

Table 197. Receive Filter WoL Status register (RxFilterWoLStatus - address 0xFFE0 0204) bit description

Bit	Symbol	Function	Reset value
0	AcceptUnicastWoL	When the value is '1', a unicast frames caused WoL.	0
1	AcceptBroadcastWoL	When the value is '1', a broadcast frame caused WoL.	0
2	AcceptMulticastWoL	When the value is '1', a multicast frame caused WoL.	0
3	AcceptUnicastHashWoL	When the value is '1', a unicast frame that passes the imperfect hash filter caused WoL.	0
4	AcceptMulticastHashWoL	When the value is '1', a multicast frame that passes the imperfect hash filter caused WoL.	0
5	AcceptPerfectWoL	When the value is '1', the perfect address matching filter caused WoL.	0
6	-	Unused	0x0
7	RxFilterWoL	When the value is '1', the receive filter caused WoL.	0
8	MagicPacketWoL	When the value is '1', the magic packet filter caused WoL.	0
31:9	-	Unused	0x0

The bits in this register record the cause for a WoL. Bits in RxFilterWoLStatus can be cleared by writing the RxFilterWoLClear register.

11.14.3 Receive Filter WoL Clear Register (RxFilterWoLClear - 0xFFE0 0208)

The Receive Filter Wake-up on LAN Clear register (RxFilterWoLClear) is a Write Only register with an address of 0xFFE0 0208.

Table 198 lists the definition of the individual bits in the register.

Chapter 11: LPC23XX Ethernet

Table 198. Receive Filter WoL Clear register (RxFilterWoLClear - address 0xFFE0 0208) bit description

Bit	Symbol	Function	Reset value
0	AcceptUnicastWoLCIr	When a '1' is written to one of these bits (0 to 5), the	0
1	AcceptBroadcastWoLCIr	corresponding status bit in the RxFilterWoLStatus register is cleared.	0
2	AcceptMulticastWoLCIr		0
3	AcceptUnicastHashWoLCIr		0
4	AcceptMulticastHashWoLCIr		0
5	AcceptPerfectWoLCIr		0
6	-	Unused	0x0
7	RxFilterWoLCIr	When a '1' is written to one of these bits (7 and/or 8),	0
8	MagicPacketWoLCIr	the corresponding status bit in the RxFilterWoLStatus register is cleared.	0
31:9	-	Unused	0x0

The bits in this register are write-only; writing resets the corresponding bits in the RxFilterWoLStatus register.

11.14.4 Hash Filter Table LSBs Register (HashFilterL - 0xFFE0 0210)

The Hash Filter table LSBs register (HashFilterL) has an address of 0xFFE0 0210. Table 199 lists the bit definitions of the register. Details of Hash filter table use can be found in Section 11.18.10 "Receive filtering" on page 245.

Table 199. Hash Filter Table LSBs register (HashFilterL - address 0xFFE0 0210) bit description

Bit	Symbol	Function	Reset value
31:0	HashFilterL	Bit 31:0 of the imperfect filter hash table for receive filtering.	0x0

11.14.5 Hash Filter Table MSBs Register (HashFilterH - 0xFFE0 0214)

The Hash Filter table MSBs register (HashFilterH) has an address of 0xFFE0 0214. <u>Table 200</u> lists the bit definitions of the register. Details of Hash filter table use can be found in Section 11.18.10 "Receive filtering" on page 245.

Table 200. Hash Filter MSBs register (HashFilterH - address 0xFFE0 0214) bit description

Bit	Symbol	Function	Reset value
31:0	HashFilterH	Bit 63:32 of the imperfect filter hash table for receive filtering.	0x0

Chapter 11: LPC23XX Ethernet

11.15 Module control register definitions

11.15.1 Interrupt Status Register (IntStatus - 0xFFE0 0FE0)

The Interrupt Status register (IntStatus) is a Read Only register with an address of 0xFFE0 0FE0. The interrupt status register bit definition is shown in <u>Table 201</u>. Note that all bits are flip-flops with an asynchronous set in order to be able to generate interrupts if there are wake-up events while clocks are disabled.

Table 201. Interrupt Status register (IntStatus - address 0xFFE0 0FE0) bit description

Bit	Symbol	Function	Reset value
0	RxOverrunInt	Interrupt set on a fatal overrun error in the receive queue. The fatal interrupt should be resolved by a Rx soft-reset. The bit is not set when there is a nonfatal overrun error.	0
1	RxErrorInt	Interrupt trigger on receive errors: AlignmentError, RangeError, LengthError, SymbolError, CRCError or NoDescriptor or Overrun.	0
2	RxFinishedInt	Interrupt triggered when all receive descriptors have been processed i.e. on the transition to the situation where ProduceIndex == ConsumeIndex.	0
3	RxDoneInt	Interrupt triggered when a receive descriptor has been processed while the Interrupt bit in the Control field of the descriptor was set.	0
4	TxUnderrunInt	Interrupt set on a fatal underrun error in the transmit queue. The fatal interrupt should be resolved by a Tx soft-reset. The bit is not set when there is a nonfatal underrun error.	0
5	TxErrorInt	Interrupt trigger on transmit errors: LateCollision, ExcessiveCollision and ExcessiveDefer, NoDescriptor or Underrun.	0
6	TxFinishedInt	Interrupt triggered when all transmit descriptors have been processed i.e. on the transition to the situation where ProduceIndex == ConsumeIndex.	0
7	TxDoneInt	Interrupt triggered when a descriptor has been transmitted while the Interrupt bit in the Control field of the descriptor was set.	0
11:8	-	Unused	0x0
12	SoftInt	Interrupt triggered by software writing a 1 to the SoftintSet bit in the IntSet register.	0
13	WakeupInt	Interrupt triggered by a Wakeup event detected by the receive filter.	0
31:14	-	Unused	0x0

The interrupt status register is read-only. Setting can be done via the IntSet register. Reset can be accomplished via the IntClear register.

11.15.2 Interrupt Enable Register (IntEnable - 0xFFE0 0FE4)

The Interrupt Enable register (IntEnable) has an address of 0xFFE0 0FE4. The interrupt enable register bit definition is shown in <u>Table 202</u>.

Chapter 11: LPC23XX Ethernet

Table 202. Interrupt Enable register (intEnable - address 0xFFE0 0FE4) bit description

Bit	Symbol	Function	Reset value
0	RxOverrunIntEn	Enable for interrupt trigger on receive buffer overrun or descriptor underrun situations.	0
1	RxErrorIntEn	Enable for interrupt trigger on receive errors.	0
2	RxFinishedIntEn	Enable for interrupt triggered when all receive descriptors have been processed i.e. on the transition to the situation where ProduceIndex == ConsumeIndex.	0
3	RxDoneIntEn	Enable for interrupt triggered when a receive descriptor has been processed while the Interrupt bit in the Control field of the descriptor was set.	0
4	TxUnderrunIntEn	Enable for interrupt trigger on transmit buffer or descriptor underrun situations.	0
5	TxErrorIntEn	Enable for interrupt trigger on transmit errors.	
6	TxFinishedIntEn	Enable for interrupt triggered when all transmit descriptors have been processed i.e. on the transition to the situation where ProduceIndex == ConsumeIndex.	0
7	TxDoneIntEn	Enable for interrupt triggered when a descriptor has been transmitted while the Interrupt bit in the Control field of the descriptor was set.	0
11:8	-	Unused	0x0
12	SoftIntEn	Enable for interrupt triggered by the SoftInt bit in the IntStatus register, caused by software writing a 1 to the SoftIntSet bit in the IntSet register.	0
13	WakeupIntEn	Enable for interrupt triggered by a Wakeup event detected by the receive filter.	0
31:14	-	Unused	0x0

11.15.3 Interrupt Clear Register (IntClear - 0xFFE0 0FE8)

The Interrupt Clear register (IntClear) is a Write Only register with an address of 0xFFE0 0FE8. The interrupt clear register bit definition is shown in Table 203.

Table 203. Interrupt Clear register (IntClear - address 0xFFE0 0FE8) bit description

Bit	Symbol	Function	Reset value
0	RxOverrunIntClr	Writing a '1' to one of these bits clears (0 to 7) the	0
1	RxErrorIntClr	corresponding status bit in interrupt status register IntStatus.	0
2	RxFinishedIntClr		0
3	RxDoneIntClr		0
4	TxUnderrunIntClr		0
5	TxErrorIntClr		0
6	TxFinishedIntClr		0
7	TxDoneIntClr		0
11:8	-	Unused	0x0

Chapter 11: LPC23XX Ethernet

Table 203. Interrupt Clear register (IntClear - address 0xFFE0 0FE8) bit description

Bit	Symbol	Function	Reset value
12	SoftIntClr		0
13	WakeupIntClr	corresponding status bit in interrupt status register IntStatus.	0
31:14	-	Unused	0x0

The interrupt clear register is write-only. Writing a 1 to a bit of the IntClear register clears the corresponding bit in the status register. Writing a 0 will not affect the interrupt status.

11.15.4 Interrupt Set Register (IntSet - 0xFFE0 0FEC)

The Interrupt Set register (IntSet) is a Write Only register with an address of 0xFFE0 0FEC. The interrupt set register bit definition is shown in Table 204.

Table 204. Interrupt Set register (IntSet - address 0xFFE0 0FEC) bit description

Bit	Symbol	Function	Reset value
0	RxOverrunIntSet	Writing a '1' to one of these bits (0 to 7) sets the	0
1	RxErrorIntSet	corresponding status bit in interrupt status register IntStatus.	0
2	RxFinishedIntSet	- Iniciatus.	0
3	RxDoneIntSet		
4	TxUnderrunIntSet		0
5	TxErrorIntSet		0
6	TxFinishedIntSet		0
7	TxDoneIntSet		0
11:8	-	Unused	0x0
12	SoftIntSet	Writing a '1' to one of these bits (12 and/or 13) sets the	0
13	WakeupIntSet	corresponding status bit in interrupt status register IntStatus.	0
31:14	-	Unused	0x0

The interrupt set register is write-only. Writing a 1 to a bit of the IntSet register sets the corresponding bit in the status register. Writing a 0 will not affect the interrupt status.

11.15.5 Power Down Register (PowerDown - 0xFFE0 0FF4)

The Power-Down register (PowerDown) is used to block all AHB accesses except accesses to the PowerDown register. The register has an address of 0xFFE0 0FF4. The bit definition of the register is listed in <u>Table 205</u>.

Table 205. Power Down register (PowerDown - address 0xFFE0 0FF4) bit description

Bit	Symbol	Function	Reset value
30:0	-	Unused	0x0
31	PowerDownMACAHB	If true, all AHB accesses will return a read/write error, except accesses to the PowerDown register.	0

Setting the bit will return an error on all read and write accesses on the MACAHB interface except for accesses to the PowerDown register.


Chapter 11: LPC23XX Ethernet

11.16 Descriptor and status formats

This section defines the descriptor format for the transmit and receive scatter/gather DMA engines. Each Ethernet frame can consist of one or more fragments. Each fragment corresponds to a single descriptor. The DMA managers in the Ethernet block scatter (for receive) and gather (for transmit) multiple fragments for a single Ethernet frame.

11.16.1 Receive descriptors and statuses

Figure 33 depicts the layout of the receive descriptors in memory.

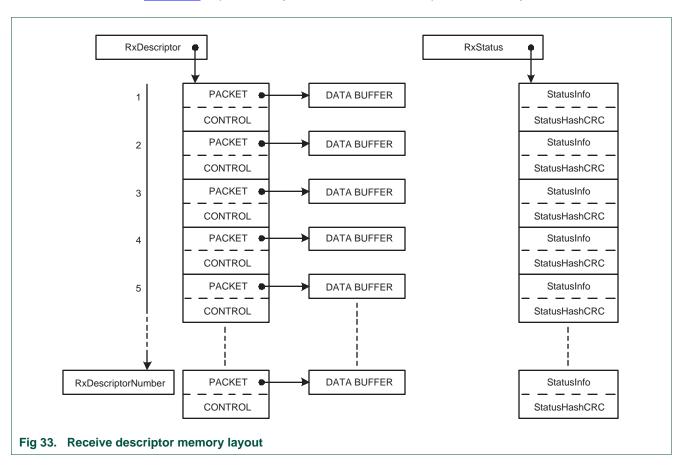

Receive descriptors are stored in an array in memory. The base address of the array is stored in the RxDescriptor register, and should be aligned on a 4 byte address boundary. The number of descriptors in the array is stored in the RxDescriptorNumber register using a minus one encoding style e.g. if the array has 8 elements the register value should be 7. Parallel to the descriptors there is an array of statuses. For each element of the descriptor array there is an associated status field in the status array. The base address of the status array is stored in the RxStatus register, and must be aligned on an 8 byte address boundary. During operation (when the receive data path is enabled) the RxDescriptor, RxStatus and RxDescriptorNumber registers should not be modified.

Two registers, RxConsumeIndex and RxProduceIndex, define the descriptor locations that will be used next by hardware and software. Both registers act as counters starting at 0 and wrapping when they reach the value of RxDescriptorNumber. The RxProduceIndex contains the index of the descriptor that is going to be filled with the next frame being

Chapter 11: LPC23XX Ethernet

received. The RxConsumeIndex is programmed by software and is the index of the next descriptor that the software receive driver is going to process. When RxProduceIndex == RxConsumeIndex, the receive buffer is empty. When RxProduceIndex == RxConsumeIndex -1 (taking wraparound into account), the receive buffer is full and newly received data would generate an overflow unless the software driver frees up one or more descriptors.

Each receive descriptor takes two word locations (8 bytes) in memory. Likewise each status field takes two words (8 bytes) in memory. Each receive descriptor consists of a pointer to the data buffer for storing receive data (Packet) and a control word (Control). The Packet field has a zero address offset, the control field has a 4 byte address offset with respect to the descriptor address as defined in Table 206.

Table 206. Receive Descriptor Fields

Symbol	Address offset	Bytes	Description
Packet	0x0	4	Base address of the data buffer for storing receive data.
Control	0x4	4	Control information, see <u>Table 207</u> .

The data buffer pointer (Packet) is a 32 bits byte aligned address value containing the base address of the data buffer. The definition of the control word bits is listed in Table 207.

Table 207. Receive Descriptor Control Word

Bit	Symbol	Description
10:0	Size	Size in bytes of the data buffer. This is the size of the buffer reserved by the device driver for a frame or frame fragment i.e. the byte size of the buffer pointed to by the Packet field. The size is -1 encoded e.g. if the buffer is 8 bytes the size field should be equal to 7.
30:11	-	Unused
31	Interrupt	If true generate an RxDone interrupt when the data in this frame or frame fragment and the associated status information has been committed to memory.

<u>Table 208</u> lists the fields in the receive status elements from the status array.

Table 208. Receive Status Fields

Symbol	Address offset	Bytes	Description
StatusInfo	0x0	4	Receive status return flags, see <u>Table 210</u> .
StatusHashCRC	0x4	4	The concatenation of the destination address hash CRC and the source address hash CRC.

Each receive status consists of two words. The StatusHashCRC word contains a concatenation of the two 9 bit hash CRCs calculated from the destination and source addresses contained in the received frame. After detecting the destination and source addresses, StatusHashCRC is calculated once, then held for every fragment of the same frame.

The concatenation of the two CRCs is shown in Table 209:

Chapter 11: LPC23XX Ethernet

Table 209. Receive Status HashCRC Word

Bit	Symbol	Description
8:0	SAHashCRC	Hash CRC calculated from the source address.
15:9	-	Unused
24:16	DAHashCRC	Hash CRC calculated from the destination address.
31:25	-	Unused

The StatusInfo word contains flags returned by the MAC and flags generated by the receive data path reflecting the status of the reception. <u>Table 210</u> lists the bit definitions in the StatusInfo word.

Table 210. Receive status information word

Bit	Symbol	Description
10:0	RxSize	The size in bytes of the actual data transferred into one fragment buffer. In other words, this is the size of the frame or fragment as actually written by the DMA manager for one descriptor. This may be different from the Size bits of the Control field in the descriptor that indicate the size of the buffer allocated by the device driver. Size is -1 encoded e.g. if the buffer has 8 bytes the RxSize value will be 7.
17:11	-	Unused
18	ControlFrame	Indicates this is a control frame for flow control, either a pause frame or a frame with an unsupported opcode.
19	VLAN	Indicates a VLAN frame.
20	FailFilter	Indicates this frame has failed the Rx filter. These frames will not normally pass to memory. But due to the limitation of the size of the buffer, part of this frame may already be passed to memory. Once the frame is found to have failed the Rx filter, the remainder of the frame will be discarded without being passed to the memory. However, if the PassRxFilter bit in the Command register is set, the whole frame will be passed to memory.
21	Multicast	Set when a multicast frame is received.
22	Broadcast	Set when a broadcast frame is received.
23	CRCError	The received frame had a CRC error.
24	SymbolError	The PHY reports a bit error over the PHY interface during reception.
25	LengthError	The frame length field value in the frame specifies a valid length, but does not match the actual data length.
26	RangeError[1]	The received packet exceeds the maximum packet size.
27	AlignmentError	An alignment error is flagged when dribble bits are detected and also a CRC error is detected. This is in accordance with IEEE std. 802.3/clause 4.3.2.
28	Overrun	Receive overrun. The adapter can not accept the data stream.
29	NoDescriptor	No new Rx descriptor is available and the frame is too long for the buffer size in the current receive descriptor.
30	LastFlag	When set to 1, indicates this descriptor is for the last fragment of a frame. If the frame consists of a single fragment, this bit is also set to 1.
31	Error	An error occurred during reception of this frame. This is a logical OR of AlignmentError, RangeError, LengthError, SymbolError, CRCError, and Overrun.


Chapter 11: LPC23XX Ethernet

[1] The EMAC doesn't distinguish the frame type and frame length, so, e.g. when the IP(0x8000) or ARP(0x0806) packets are received, it compares the frame type with the max length and gives the "Range" error. In fact, this bit is not an error indication, but simply a statement by the chip regarding the status of the received frame.

For multi-fragment frames, the value of the AlignmentError, RangeError, LengthError, SymbolError and CRCError bits in all but the last fragment in the frame will be 0; likewise the value of the FailFilter, Multicast, Broadcast, VLAN and ControlFrame bits is undefined. The status of the last fragment in the frame will copy the value for these bits from the MAC. All fragment statuses will have valid LastFrag, RxSize, Error, Overrun and NoDescriptor bits.

11.16.2 Transmit descriptors and statuses

Figure 34 depicts the layout of the transmit descriptors in memory.

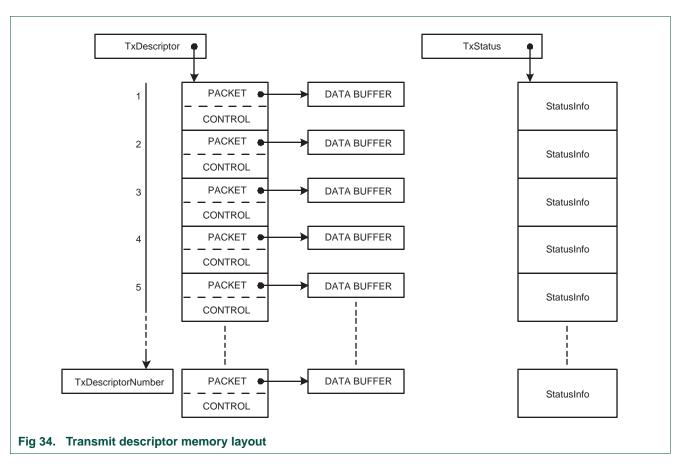

Transmit descriptors are stored in an array in memory. The lowest address of the transmit descriptor array is stored in the TxDescriptor register, and must be aligned on a 4 byte address boundary. The number of descriptors in the array is stored in the TxDescriptorNumber register using a minus one encoding style i.e. if the array has 8 elements the register value should be 7. Parallel to the descriptors there is an array of statuses. For each element of the descriptor array there is an associated status field in the status array. The base address of the status array is stored in the TxStatus register, and must be aligned on a 4 byte address boundary. During operation (when the transmit data path is enabled) the TxDescriptor, TxStatus, and TxDescriptorNumber registers should not be modified.

Chapter 11: LPC23XX Ethernet

Two registers, TxConsumeIndex and TxProduceIndex, define the descriptor locations that will be used next by hardware and software. Both register act as counters starting at 0 and wrapping when they reach the value of TxDescriptorNumber. The TxProduceIndex contains the index of the next descriptor that is going to be filled by the software driver. The TxConsumeIndex contains the index of the next descriptor going to be transmitted by the hardware. When TxProduceIndex == TxConsumeIndex, the transmit buffer is empty. When TxProduceIndex == TxConsumeIndex -1 (taking wraparound into account), the transmit buffer is full and the software driver cannot add new descriptors until the hardware has transmitted one or more frames to free up descriptors.

Each transmit descriptor takes two word locations (8 bytes) in memory. Likewise each status field takes one word (4 bytes) in memory. Each transmit descriptor consists of a pointer to the data buffer containing transmit data (Packet) and a control word (Control). The Packet field has a zero address offset, whereas the control field has a 4 byte address offset, see Table 211.

Table 211. Transmit descriptor fields

Symbol	Address offset	Bytes	Description
Packet	0x0	4	Base address of the data buffer containing transmit data.
Control	0x4	4	Control information, see <u>Table 212</u> .

The data buffer pointer (Packet) is a 32 bit, byte aligned address value containing the base address of the data buffer. The definition of the control word bits is listed in Table 212.

Table 212. Transmit descriptor control word

Bit	Symbol	Description
10:0	Size	Size in bytes of the data buffer. This is the size of the frame or fragment as it needs to be fetched by the DMA manager. In most cases it will be equal to the byte size of the data buffer pointed to by the Packet field of the descriptor. Size is -1 encoded e.g. a buffer of 8 bytes is encoded as the Size value 7.
25:11	-	Unused
26	Override	Per frame override. If true, bits 30:27 will override the defaults from the MAC internal registers. If false, bits 30:27 will be ignored and the default values from the MAC will be used.
27	Huge	If true, enables huge frame, allowing unlimited frame sizes. When false, prevents transmission of more than the maximum frame length (MAXF[15:0]).
28	Pad	If true, pad short frames to 64 bytes.
29	CRC	If true, append a hardware CRC to the frame.
30	Last	If true, indicates that this is the descriptor for the last fragment in the transmit frame. If false, the fragment from the next descriptor should be appended.
31	Interrupt	If true, a TxDone interrupt will be generated when the data in this frame or frame fragment has been sent and the associated status information has been committed to memory.

Table 213 shows the one field transmit status.

Table 213. Transmit status fields

Symbol	Address offset	Bytes	Description
StatusInfo	0x0	4	Transmit status return flags, see <u>Table 214</u> .

Chapter 11: LPC23XX Ethernet

The transmit status consists of one word which is the StatusInfo word. It contains flags returned by the MAC and flags generated by the transmit data path reflecting the status of the transmission. Table 214 lists the bit definitions in the StatusInfo word.

Table 214. Transmit status information word

Bit	Symbol	Description
20:0	-	Unused
24:21	CollisionCount	The number of collisions this packet incurred, up to the Retransmission Maximum.
25	Defer	This packet incurred deferral, because the medium was occupied. This is not an error unless excessive deferral occurs.
26	ExcessiveDefer	This packet incurred deferral beyond the maximum deferral limit and was aborted.
27	ExcessiveCollision	Indicates this packet exceeded the maximum collision limit and was aborted.
28	LateCollision	An Out of window Collision was seen, causing packet abort.
29	Underrun	A Tx underrun occurred due to the adapter not producing transmit data.
30	NoDescriptor	The transmit stream was interrupted because a descriptor was not available.
31	Error	An error occurred during transmission. This is a logical OR of Underrun, LateCollision, ExcessiveCollision, and ExcessiveDefer.

For multi-fragment frames, the value of the LateCollision, ExcessiveCollision, ExcessiveDefer, Defer and CollissionCount bits in all but the last fragment in the frame will be 0. The status of the last fragment in the frame will copy the value for these bits from the MAC. All fragment statuses will have valid Error, NoDescriptor and Underrun bits.

11.17 Ethernet block functional description

This section defines the functions of the DMA capable 10/100 Ethernet MAC. After introducing the DMA concepts of the Ethernet block, and a description of the basic transmit and receive functions, this section elaborates on advanced features such as flow control, receive filtering, etc.

11.17.1 Overview

The Ethernet block can transmit and receive Ethernet packets from an off-chip Ethernet PHY connected through the RMII interface.

Typically during system start-up, the Ethernet block will be initialized. Software initialization of the Ethernet block should include initialization of the descriptor and status arrays as well as the receiver fragment buffers.

Remark: When initializing the Ethernet block, it is important to first configure the PHY and ensure that reference clocks (ENET_REF_CLK signal in RMII mode, or both ENET_RX_CLK and ENET_TX_CLK signals in MII mode) are present at the external pins and connected to the EMAC module (selecting the appropriate pins using the PINSEL registers) prior to continuing with Ethernet configuration. Otherwise the CPU can become locked and no further functionality will be possible. This will cause JTAG lose communication with the target, if debug mode is being used.

Chapter 11: LPC23XX Ethernet

To transmit a packet the software driver has to set up the appropriate Control registers and a descriptor to point to the packet data buffer before transferring the packet to hardware by incrementing the TxProduceIndex register. After transmission, hardware will increment TxConsumeIndex and optionally generate an interrupt.

The hardware will receive packets from the PHY and apply filtering as configured by the software driver. While receiving a packet the hardware will read a descriptor from memory to find the location of the associated receiver data buffer. Receive data is written in the data buffer and receive status is returned in the receive descriptor status word. Optionally an interrupt can be generated to notify software that a packet has been received. Note that the DMA manager will prefetch and buffer up to three descriptors.

11.17.2 AHB interface

The registers of the Ethernet block connect to an AHB slave interface to allow access to the registers from the CPU.

The AHB interface has a 32 bit data path, which supports only word accesses and has an address aperture of 4 kB. <u>Table 159</u> lists the registers of the Ethernet block.

All AHB write accesses to registers are posted except for accesses to the IntSet, IntClear and IntEnable registers. AHB write operations are executed in order.

If the PowerDown bit of the PowerDown register is set, all AHB read and write accesses will return a read or write error except for accesses to the PowerDown register.

Bus Errors

The Ethernet block generates errors for several conditions:

- The AHB interface will return a read error when there is an AHB read access to a write-only register; likewise a write error is returned when there is an AHB write access to the read-only register. An AHB read or write error will be returned on AHB read or write accesses to reserved registers. These errors are propagated back to the CPU. Registers defined as read-only and write-only are identified in Table 159.
- If the PowerDown bit is set all accesses to AHB registers will result in an error response except for accesses to the PowerDown register.

11.18 Interrupts

The Ethernet block has a single interrupt request output to the CPU (via the Vectored Interrupt Controller).

The interrupt service routine must read the IntStatus register to determine the origin of the interrupt. All interrupt statuses can be set by software writing to the IntSet register; statuses can be cleared by software writing to the IntClear register.

The transmit and receive data paths can only set interrupt statuses, they cannot clear statuses. The SoftInt interrupt cannot be set by hardware and can be used by software for test purposes.

11.18.1 Direct Memory Access (DMA)

Descriptor arrays

Chapter 11: LPC23XX Ethernet

The Ethernet block includes two DMA managers. The DMA managers make it possible to transfer frames directly to and from memory with little support from the processor and without the need to trigger an interrupt for each frame.

The DMA managers work with arrays of frame descriptors and statuses that are stored in memory. The descriptors and statuses act as an interface between the Ethernet hardware and the device driver software. There is one descriptor array for receive frames and one descriptor array for transmit frames. Using buffering for frame descriptors, the memory traffic and memory bandwidth utilization of descriptors can be kept small.

Each frame descriptor contains two 32 bit fields: the first field is a pointer to a data buffer containing a frame or a fragment, whereas the second field is a control word related to that frame or fragment.

The software driver must write the base addresses of the descriptor and status arrays in the TxDescriptor/RxDescriptor and TxStatus/RxStatus registers. The number of descriptors/statuses in each array must be written in the

TxDescriptorNumber/RxDescriptorNumber registers. The number of descriptors in an array corresponds to the number of statuses in the associated status array.

Transmit descriptor arrays, receive descriptor arrays and transmit status arrays must be aligned on a 4 byte (32bit)address boundary, while the receive status array must be aligned on a 8 byte (64bit) address boundary.

Ownership of descriptors

Both device driver software and Ethernet hardware can read and write the descriptor arrays at the same time in order to produce and consume descriptors. Arbitration on the AHB bus gives priority to the DMA hardware in the case of simultaneous requests. A descriptor is "owned" either by the device driver or by the Ethernet hardware. Only the owner of a descriptor reads or writes its value. Typically, the sequence of use and ownership of descriptors and statuses is as follows: a descriptor is owned and set up by the device driver; ownership of the descriptor/status is passed by the device driver to the Ethernet block, which reads the descriptor and writes information to the status field; the Ethernet block passes ownership of the descriptor back to the device driver, which uses the status information and then recycles the descriptor to be used for another frame. Software must pre-allocate the memory used to hold the descriptor arrays.

Software can hand over ownership of descriptors and statuses to the hardware by incrementing (and wrapping if on the array boundary) the TxProduceIndex/RxConsumeIndex registers. Hardware hands over descriptors and status to software by updating the TxConsumeIndex/RxProduceIndex registers.

After handing over a descriptor to the receive and transmit DMA hardware, device driver software should not modify the descriptor or reclaim the descriptor by decrementing the TxProduceIndex/ RxConsumeIndex registers because descriptors may have been prefetched by the hardware. In this case the device driver software will have to wait until the frame has been transmitted or the device driver has to soft-reset the transmit and/or receive data paths which will also reset the descriptor arrays.

Sequential order with wrap-around

Chapter 11: LPC23XX Ethernet

When descriptors are read from and statuses are written to the arrays, this is done in sequential order with wrap-around. Sequential order means that when the Ethernet block has finished reading/writing a descriptor/status, the next descriptor/status it reads/writes is the one at the next higher, adjacent memory address. Wrap around means that when the Ethernet block has finished reading/writing the last descriptor/status of the array (with the highest memory address), the next descriptor/status it reads/writes is the first descriptor/status of the array at the base address of the array.

Full and Empty state of descriptor arrays

The descriptor arrays can be empty, partially full or full. A descriptor array is empty when all descriptors are owned by the producer. A descriptor array is partially full if both producer and consumer own part of the descriptors and both are busy processing those descriptors. A descriptor array is full when all descriptors (except one) are owned by the consumer, so that the producer has no more room to process frames. Ownership of descriptors is indicated with the use of a consume index and a produce index. The produce index is the first element of the array owned by the producer. It is also the index of the array element that is next going to be used by the producer of frames (it may already be busy using it and subsequent elements). The consume index is the first element of the array that is owned by the consumer. It is also the number of the array element next to be consumed by the consumer of frames (it and subsequent elements may already be in the process of being consumed). If the consume index and the produce index are equal, the descriptor array is empty and all array elements are owned by the producer. If the consume index equals the produce index plus one, then the array is full and all array elements (except the one at the produce index) are owned by the consumer. With a full descriptor array, still one array element is kept empty, to be able to easily distinguish the full or empty state by looking at the value of the produce index and consume index. An array must have at least 2 elements to be able to indicate a full descriptor array with a produce index of value 0 and a consume index of value 1. The wrap around of the arrays is taken into account when determining if a descriptor array is full, so a produce index that indicates the last element in the array and a consume index that indicates the first element in the array, also means the descriptor array is full. When the produce index and the consume index are unequal and the consume index is not the produce index plus one (with wrap around taken into account), then the descriptor array is partially full and both the consumer and producer own enough descriptors to be able to operate actively on the descriptor array.

Interrupt bit

The descriptors have an Interrupt bit, which is programmed by software. When the Ethernet block is processing a descriptor and finds this bit set, it will allow triggering an interrupt (after committing status to memory) by passing the RxDoneInt or TxDoneInt bits in the IntStatus register to the interrupt output pin. If the Interrupt bit is not set in the descriptor, then the RxDoneInt or TxDoneInt are not set and no interrupt is triggered (note that the corresponding bits in IntEnable must also be set to trigger interrupts). This offers flexible ways of managing the descriptor arrays. For instance, the device driver could add 10 frames to the Tx descriptor array, and set the Interrupt bit in descriptor number 5 in the descriptor array. This would invoke the interrupt service routine before the transmit descriptor array is completely exhausted. The device driver could add another batch of frames to the descriptor array, without interrupting continuous transmission of frames.

Frame fragments

Chapter 11: LPC23XX Ethernet

For maximum flexibility in frame storage, frames can be split up into multiple frame fragments with fragments located in different places in memory. In this case one descriptor is used for each frame fragment. So, a descriptor can point to a single frame or to a fragment of a frame. By using fragments, scatter/gather DMA can be done: transmit frames are gathered from multiple fragments in memory and receive frames can be scattered to multiple fragments in memory.

By stringing together fragments it is possible to create large frames from small memory areas. Another use of fragments is to be able to locate a frame header and frame payload in different places and to concatenate them without copy operations in the device driver.

For transmissions, the Last bit in the descriptor Control field indicates if the fragment is the last in a frame; for receive frames, the LastFrag bit in the StatusInfo field of the status words indicates if the fragment is the last in the frame. If the Last(Frag) bit is 0 the next descriptor belongs to the same Ethernet frame, If the Last(Frag) bit is 1 the next descriptor is a new Ethernet frame.

11.18.2 Initialization

After reset, the Ethernet software driver needs to initialize the Ethernet block. During initialization the software needs to:

- Remove the soft reset condition from the MAC.
- Configure the PHY via the MIIM interface of the MAC.

Remark: it is important to configure the PHY and insure that reference clock (ENET_REF_CLK) is present at the external pin and connected to the Ethernet MAC module (selecting the appropriate pin using the PINSEL registers) prior to continuing with Ethernet configuration. Otherwise the CPU can become locked and no further functionality will be possible. This will cause JTAG lose communication with the target, if debug mode is being used.

- Select RMII mode.
- Configure the transmit and receive DMA engines, including the descriptor arrays.
- Configure the host registers (MAC1,MAC2 etc.) in the MAC.
- Enable the receive and transmit data paths.

Depending on the PHY, the software needs to initialize registers in the PHY via the MII Management interface. The software can read and write PHY registers by programming the MCFG, MCMD, MADR registers of the MAC. Write data should be written to the MWTD register; read data and status information can be read from the MRDD and MIND registers.

The Ethernet block supports RMII PHYs. During initialization software must select RMII mode by programming the Command register.

Before switching to RMII mode the default soft reset (MAC1 register bit 15) has to be deasserted when the Ethernet block is in MII mode. The phy_ref_clk must be running and internally connected to the Ethernet block during this operation.

Chapter 11: LPC23XX Ethernet

Transmit and receive DMA engines should be initialized by the device driver by allocating the descriptor and status arrays in memory. Transmit and receive functions have their own dedicated descriptor and status arrays. The base addresses of these arrays need to be programmed in the TxDescriptor/TxStatus and RxDescriptor/RxStatus registers. The number of descriptors in an array matches the number of statuses in an array.

Please note that the transmit descriptors, receive descriptors and receive statuses are 8 bytes each while the transmit statuses are 4 bytes each. All descriptor arrays and transmit statuses need to be aligned on 4 byte boundaries; receive status arrays need to be aligned on 8 byte boundaries. The number of descriptors in the descriptor arrays needs to be written to the TxDescriptorNumber/RxDescriptorNumber registers using a -1 encoding i.e. the value in the registers is the number of descriptors minus one e.g. if the descriptor array has 4 descriptors the value of the number of descriptors register should be 3.

After setting up the descriptor arrays, frame buffers need to be allocated for the receive descriptors before enabling the receive data path. The Packet field of the receive descriptors needs to be filled with the base address of the frame buffer of that descriptor. Amongst others the Control field in the receive descriptor needs to contain the size of the data buffer using -1 encoding.

The receive data path has a configurable filtering function for discarding/ignoring specific Ethernet frames. The filtering function should also be configured during initialization.

After an assertion of the hardware reset, the soft reset bit in the MAC will be asserted. The soft reset condition must be removed before the Ethernet block can be enabled.

Enabling of the receive function is located in two places. The receive DMA manager needs to be enabled and the receive data path of the MAC needs to be enabled. To prevent overflow in the receive DMA engine the receive DMA engine should be enabled by setting the RxEnable bit in the Command register before enabling the receive data path in the MAC by setting the RECEIVE ENABLE bit in the MAC1 register.

The transmit DMA engine can be enabled at any time by setting the TxEnable bit in the Command register.

Before enabling the data paths, several options can be programmed in the MAC, such as automatic flow control, transmit to receive loop-back for verification, full/half duplex modes, etc.

Base addresses of descriptor arrays and descriptor array sizes cannot be modified without a (soft) reset of the receive and transmit data paths.

11.18.3 Transmit process

Overview

This section outlines the transmission process.

Device driver sets up descriptors and data

If the descriptor array is full the device driver should wait for the descriptor arrays to become not full before writing to a descriptor in the descriptor array. If the descriptor array is not full, the device driver should use the descriptor numbered TxProduceIndex of the array pointed to by TxDescriptor.

Chapter 11: LPC23XX Ethernet

The Packet pointer in the descriptor is set to point to a data frame or frame fragment to be transmitted. The Size field in the Command field of the descriptor should be set to the number of bytes in the fragment buffer, -1 encoded. Additional control information can be indicated in the Control field in the descriptor (bits Interrupt, Last, CRC, Pad).

After writing the descriptor the descriptor needs to be handed over to the hardware by incrementing (and possibly wrapping) the TxProduceIndex register.

If the transmit data path is disabled, the device driver should not forget to enable the transmit data path by setting the TxEnable bit in the Command register.

When there is a multi-fragment transmission for fragments other than the last, the Last bit in the descriptor must be set to 0; for the last fragment the Last bit must be set to 1. To trigger an interrupt when the frame has been transmitted and transmission status has been committed to memory, set the Interrupt bit in the descriptor Control field to 1. To have the hardware add a CRC in the frame sequence control field of this Ethernet frame, set the CRC bit in the descriptor. This should be done if the CRC has not already been added by software. To enable automatic padding of small frames to the minimum required frame size, set the Pad bit in the Control field of the descriptor to 1. In typical applications bits CRC and Pad are both set to 1.

The device driver can set up interrupts using the IntEnable register to wait for a signal of completion from the hardware or can periodically inspect (poll) the progress of transmission. It can also add new frames at the end of the descriptor array, while hardware consumes descriptors at the start of the array.

The device driver can stop the transmit process by resetting the TxEnable bit in the Command register to 0. The transmission will not stop immediately; frames already being transmitted will be transmitted completely and the status will be committed to memory before deactivating the data path. The status of the transmit data path can be monitored by the device driver reading the TxStatus bit in the Status register.

As soon as the transmit data path is enabled and the corresponding TxConsumeIndex and TxProduceIndex are not equal i.e. the hardware still needs to process frames from the descriptor array, the TxStatus bit in the Status register will return to 1 (active).

Tx DMA manager reads the Tx descriptor array

When the TxEnable bit is set, the Tx DMA manager reads the descriptors from memory at the address determined by TxDescriptor and TxConsumeIndex. The number of descriptors requested is determined by the total number of descriptors owned by the hardware: TxProduceIndex - TxConsumeIndex. Block transferring descriptors minimizes memory loading. Read data returned from memory is buffered and consumed as needed.

Tx DMA manager transmits data

After reading the descriptor the transmit DMA engine reads the associated frame data from memory and transmits the frame. After transfer completion, the Tx DMA manager writes status information back to the StatusInfo and StatusHashCRC words of the status field. The value of the TxConsumeIndex is only updated after status information has been committed to memory, which is checked by an internal tag protocol in the memory interface. The Tx DMA manager continues to transmit frames until the descriptor array is

Chapter 11: LPC23XX Ethernet

empty. If the transmit descriptor array is empty the TxStatus bit in the Status register will return to 0 (inactive). If the descriptor array is empty the Ethernet hardware will set the TxFinishedInt bit of the IntStatus register. The transmit data path will still be enabled.

The Tx DMA manager inspects the Last bit of the descriptor Control field when loading the descriptor. If the Last bit is 0, this indicates that the frame consists of multiple fragments. The Tx DMA manager gathers all the fragments from the host memory, visiting a string of frame descriptors, and sends them out as one Ethernet frame on the Ethernet connection. When the Tx DMA manager finds a descriptor with the Last bit in the Control field set to 1, this indicates the last fragment of the frame and thus the end of the frame is found.

Update ConsumeIndex

Each time the Tx DMA manager commits a status word to memory it completes the transmission of a descriptor and it increments the TxConsumeIndex (taking wrap around into account) to hand the descriptor back to the device driver software. Software can re-use the descriptor for new transmissions after hardware has handed it back.

The device driver software can keep track of the progress of the DMA manager by reading the TxConsumeIndex register to see how far along the transmit process is. When the Tx descriptor array is emptied completely, the TxConsumeIndex register retains its last value.

Write transmission status

After the frame has been transmitted over the RMII bus, the StatusInfo word of the frame descriptor is updated by the DMA manager.

If the descriptor is for the last fragment of a frame (or for the whole frame if there are no fragments), then depending on the success or failure of the frame transmission, error flags (Error, LateCollision, ExcessiveCollision, Underrun, ExcessiveDefer, Defer) are set in the status. The CollisionCount field is set to the number of collisions the frame incurred, up to the Retransmission Maximum programmed in the Collision window/retry register of the MAC.

Statuses for all but the last fragment in the frame will be written as soon as the data in the frame has been accepted by the Tx DMA manager. Even if the descriptor is for a frame fragment other than the last fragment, the error flags are returned via the AHB interface. If the Ethernet block detects a transmission error during transmission of a (multi-fragment) frame, all remaining fragments of the frame are still read via the AHB interface. After an error, the remaining transmit data is discarded by the Ethernet block. If there are errors during transmission of a multi-fragment frame the error statuses will be repeated until the last fragment of the frame. Statuses for all but the last fragment in the frame will be written as soon as the data in the frame has been accepted by the Tx DMA manager. These may include error information if the error is detected early enough. The status for the last fragment in the frame will only be written after the transmission has completed on the Ethernet connection. Thus, the status for the last fragment will always reflect any error that occurred anywhere in the frame.

The status of the last frame transmission can also be inspected by reading the TSV0 and TSV1 registers. These registers do not report statuses on a fragment basis and do not store information of previously sent frames. They are provided primarily for debug purposes, because the communication between driver software and the Ethernet block

Chapter 11: LPC23XX Ethernet

takes place through the frame descriptors. The status registers are valid as long as the internal status of the MAC is valid and should typically only be read when the transmit and receive processes are halted.

Transmission error handling

If an error occurs during the transmit process, the Tx DMA manager will report the error via the transmission StatusInfo word written in the Status array and the IntStatus interrupt status register.

The transmission can generate several types of errors: LateCollision, ExcessiveCollision, ExcessiveDefer, Underrun, and NoDescriptor. All have corresponding bits in the transmission StatusInfo word. In addition to the separate bits in the StatusInfo word, LateCollision, ExcessiveCollision, and ExcessiveDefer are ORed together into the Error bit of the Status. Errors are also propagated to the IntStatus register; the TxError bit in the IntStatus register is set in the case of a LateCollision, ExcessiveCollision, ExcessiveDefer, or NoDescriptor error; Underrun errors are reported in the TxUnderrun bit of the IntStatus register.

Underrun errors can have three causes:

- The next fragment in a multi-fragment transmission is not available. This is a nonfatal error. A NoDescriptor status will be returned on the previous fragment and the TxError bit in IntStatus will be set.
- The transmission fragment data is not available when the Ethernet block has already started sending the frame. This is a nonfatal error. An Underrun status will be returned on transfer and the TxError bit in IntStatus will be set.
- The flow of transmission statuses stalls and a new status has to be written while a previous status still waits to be transferred across the memory interface. This is a fatal error which can only be resolved by a soft reset of the hardware.

The first and second situations are nonfatal and the device driver has to resend the frame or have upper software layers resend the frame. In the third case the hardware is in an undefined state and needs to be soft reset by setting the TxReset bit in the Command register.

After reporting a LateCollision, ExcessiveCollision, ExcessiveDefer or Underrun error, the transmission of the erroneous frame will be aborted, remaining transmission data and frame fragments will be discarded and transmission will continue with the next frame in the descriptor array.

Device drivers should catch the transmission errors and take action.

Transmit triggers interrupts

The transmit data path can generate four different interrupt types:

If the Interrupt bit in the descriptor Control field is set, the Tx DMA will set the
TxDoneInt bit in the IntStatus register after sending the fragment and committing the
associated transmission status to memory. Even if a descriptor (fragment) is not the
last in a multi-fragment frame the Interrupt bit in the descriptor can be used to
generate an interrupt.

Chapter 11: LPC23XX Ethernet

- If the descriptor array is empty while the Ethernet hardware is enabled the hardware will set the TxFinishedInt bit of the IntStatus register.
- If the AHB interface does not consume the transmission statuses at a sufficiently high bandwidth the transmission may underrun in which case the TxUnderrun bit will be set in the IntStatus register. This is a fatal error which requires a soft reset of the transmission queue.
- In the case of a transmission error (LateCollision, ExcessiveCollision, or ExcessiveDefer) or a multi-fragment frame where the device driver did provide the initial fragments but did not provide the rest of the fragments (NoDescriptor) or in the case of a nonfatal overrun, the hardware will set the TxErrorInt bit of the IntStatus register.


All of the above interrupts can be enabled and disabled by setting or resetting the corresponding bits in the IntEnable register. Enabling or disabling does not affect the IntStatus register contents, only the propagation of the interrupt status to the CPU (via the Vectored Interrupt Controller).

The interrupts, either of individual frames or of the whole list, are a good means of communication between the DMA manager and the device driver, triggering the device driver to inspect the status words of descriptors that have been processed.

Transmit example

<u>Figure 35</u> illustrates the transmit process in an example transmitting uses a frame header of 8 bytes and a frame payload of 12 bytes.

Chapter 11: LPC23XX Ethernet

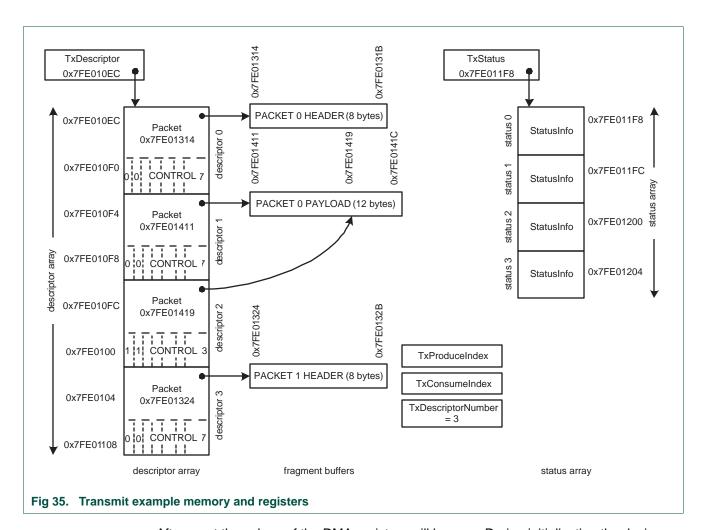

After reset the values of the DMA registers will be zero. During initialization the device driver will allocate the descriptor and status array in memory. In this example, an array of four descriptors is allocated; the array is 4x2x4 bytes and aligned on a 4 byte address boundary. Since the number of descriptors matches the number of statuses the status array consists of four elements; the array is 4x1x4 bytes and aligned on a 4 byte address boundary. The device driver writes the base address of the descriptor array (0x7FE0 10EC) to the TxDescriptor register and the base address of the status array (0x7FE0 11F8) to the TxStatus register. The device driver writes the number of descriptors and statuses minus 1(3) to the TxDescriptorNumber register. The descriptors and statuses in the arrays need not be initialized, yet.

At this point, the transmit data path may be enabled by setting the TxEnable bit in the Command register. If the transmit data path is enabled while there are no further frames to send the TxFinishedInt interrupt flag will be set. To reduce the processor interrupt load only the desired interrupts can be enabled by setting the relevant bits in the IntEnable register.

Now suppose application software wants to transmit a frame of 12 bytes using a TCP/IP protocol (in real applications frames will be larger than 12 bytes). The TCP/IP stack will add a header to the frame. The frame header need not be immediately in front of the payload data in memory. The device driver can program the Tx DMA to collect header and payload data. To do so, the device driver will program the first descriptor to point at the

Chapter 11: LPC23XX Ethernet

frame header; the Last flag in the descriptor will be set to false/0 to indicate a multi-fragment transmission. The device driver will program the next descriptor to point at the actual payload data. The maximum size of a payload buffer is 2 kB so a single descriptor suffices to describe the payload buffer. For the sake of the example though the payload is distributed across two descriptors. After the first descriptor in the array describing the header, the second descriptor in the array describes the initial 8 bytes of the payload; the third descriptor in the array describes the remaining 4 bytes of the frame. In the third descriptor the Last bit in the Control word is set to true/1 to indicate it is the last descriptor in the frame. In this example the Interrupt bit in the descriptor Control field is set in the last fragment of the frame in order to trigger an interrupt after the transmission completed. The Size field in the descriptor's Control word is set to the number of bytes in the fragment buffer, -1 encoded.

Note that in real device drivers, the payload will typically only be split across multiple descriptors if it is more than 2 kB. Also note that transmission payload data is forwarded to the hardware without the device driver copying it (zero copy device driver).

After setting up the descriptors for the transaction the device driver increments the TxProduceIndex register by 3 since three descriptors have been programmed. If the transmit data path was not enabled during initialization the device driver needs to enable the data path now.

If the transmit data path is enabled the Ethernet block will start transmitting the frame as soon as it detects the TxProduceIndex is not equal to TxConsumeIndex - both were zero after reset. The Tx DMA will start reading the descriptors from memory. The memory system will return the descriptors and the Ethernet block will accept them one by one while reading the transmit data fragments.

As soon as transmission read data is returned from memory, the Ethernet block will try to start transmission on the Ethernet connection via the RMII interface.

After transmitting each fragment of the frame the Tx DMA will write the status of the fragment's transmission. Statuses for all but the last fragment in the frame will be written as soon as the data in the frame has been accepted by the Tx DMA manager. The status for the last fragment in the frame will only be written after the transmission has completed on the Ethernet connection.

Since the Interrupt bit in the descriptor of the last fragment is set, after committing the status of the last fragment to memory the Ethernet block will trigger a TxDoneInt interrupt, which triggers the device driver to inspect the status information.

In this example the device driver cannot add new descriptors as long as the Ethernet block has not incremented the TxConsumeIndex because the descriptor array is full (even though one descriptor is not programmed yet). Only after the hardware commits the status for the first fragment to memory and the TxConsumeIndex is set to 1 by the DMA manager can the device driver program the next (the fourth) descriptor. The fourth descriptor can already be programmed before completely transmitting the first frame.

In this example the hardware adds the CRC to the frame. If the device driver software adds the CRC, the CRC trailer can be considered another frame fragment which can be added by doing another gather DMA.

Chapter 11: LPC23XX Ethernet

Each data byte is transmitted across the RMII interface as four 2-bit values. The Ethernet block adds the preamble, frame delimiter leader, and the CRC trailer if hardware CRC is enabled. Once transmission on the RMII interface commences the transmission cannot be interrupted without generating an underrun error, which is why descriptors and data read commands are issued as soon as possible and pipelined.

Using RMII, data between the Ethernet block and the PHY are communicated at 50 MHz. In 10 Mbps mode data will only be transmitted once every 10 clock cycles.

11.18.4 Receive process

This section outlines the receive process including the activities in the device driver software.

Device driver sets up descriptors

After initializing the receive descriptor and status arrays to receive frames from the Ethernet connection, the receive data path should be enabled in the MAC1 register and the Control register.

During initialization, each Packet pointer in the descriptors is set to point to a data fragment buffer. The size of the buffer is stored in the Size bits of the Control field of the descriptor. Additionally, the Control field in the descriptor has an Interrupt bit. The Interrupt bit allows generation of an interrupt after a fragment buffer has been filled and its status has been committed to memory.

After the initialization and enabling of the receive data path, all descriptors are owned by the receive hardware and should not be modified by the software unless hardware hands over the descriptor by incrementing the RxProduceIndex, indicating that a frame has been received. The device driver is allowed to modify the descriptors after a (soft) reset of the receive data path.

Rx DMA manager reads Rx descriptor arrays

When the RxEnable bit in the Command register is set, the Rx DMA manager reads the descriptors from memory at the address determined by RxDescriptor and RxProduceIndex. The Ethernet block will start reading descriptors even before actual receive data arrives on the RMII interface (descriptor prefetching). The block size of the descriptors to be read is determined by the total number of descriptors owned by the hardware: RxConsumeIndex - RxProduceIndex - 1. Block transferring of descriptors minimizes memory load. Read data returned from memory is buffered and consumed as needed.

RX DMA manager receives data

After reading the descriptor, the receive DMA engine waits for the MAC to return receive data from the RMII interface that passes the receive filter. Receive frames that do not match the filtering criteria are not passed to memory. Once a frame passes the receive filter, the data is written in the fragment buffer associated with the descriptor. The Rx DMA does not write beyond the size of the buffer. When a frame is received that is larger than a descriptor's fragment buffer, the frame will be written to multiple fragment buffers of consecutive descriptors. In the case of a multi-fragment reception, all but the last fragment in the frame will return a status where the LastFrag bit is set to 0. Only on the last

Chapter 11: LPC23XX Ethernet

fragment of a frame the LastFrag bit in the status will be set to 1. If a fragment buffer is the last of a frame, the buffer may not be filled completely. The first receive data of the next frame will be written to the fragment buffer of the next descriptor.

After receiving a fragment, the Rx DMA manager writes status information back to the StatusInfo and StatusHashCRC words of the status. The Ethernet block writes the size in bytes of a descriptor's fragment buffer in the RxSize field of the Status word. The value of the RxProduceIndex is only updated after the fragment data and the fragment status information has been committed to memory, which is checked by an internal tag protocol in the memory interface. The Rx DMA manager continues to receive frames until the descriptor array is full. If the descriptor array is full, the Ethernet hardware will set the RxFinishedInt bit of the IntStatus register. The receive data path will still be enabled. If the receive descriptor array is full any new receive data will generate an overflow error and interrupt.

Update ProduceIndex

Each time the Rx DMA manager commits a data fragment and the associated status word to memory, it completes the reception of a descriptor and increments the RxProduceIndex (taking wrap around into account) in order to hand the descriptor back to the device driver software. Software can re-use the descriptor for new receptions by handing it back to hardware when the receive data has been processed.

The device driver software can keep track of the progress of the DMA manager by reading the RxProduceIndex register to see how far along the receive process is. When the Rx descriptor array is emptied completely, the RxProduceIndex retains its last value.

Write reception status

After the frame has been received from the RMII bus, the StatusInfo and StatusHashCRC words of the frame descriptor are updated by the DMA manager.

If the descriptor is for the last fragment of a frame (or for the whole frame if there are no fragments), then depending on the success or failure of the frame reception, error flags (Error, NoDescriptor, Overrun, AlignmentError, RangeError, LengthError, SymbolError, or CRCError) are set in StatusInfo. The RxSize field is set to the number of bytes actually written to the fragment buffer, -1 encoded. For fragments not being the last in the frame the RxSize will match the size of the buffer. The hash CRCs of the destination and source addresses of a packet are calculated once for all the fragments belonging to the same packet and then stored in every StatusHashCRC word of the statuses associated with the corresponding fragments. If the reception reports an error, any remaining data in the receive frame is discarded and the LastFrag bit will be set in the receive status field, so the error flags in all but the last fragment of a frame will always be 0.

The status of the last received frame can also be inspected by reading the RSV register. The register does not report statuses on a fragment basis and does not store information of previously received frames. RSV is provided primarily for debug purposes, because the communication between driver software and the Ethernet block takes place through the frame descriptors.

Reception error handling

Chapter 11: LPC23XX Ethernet

When an error occurs during the receive process, the Rx DMA manager will report the error via the receive StatusInfo written in the Status array and the IntStatus interrupt status register.

The receive process can generate several types of errors: AlignmentError, RangeError, LengthError, SymbolError, CRCError, Overrun, and NoDescriptor. All have corresponding bits in the receive StatusInfo. In addition to the separate bits in the StatusInfo, AlignmentError, RangeError, LengthError, SymbolError, and CRCError are ORed together into the Error bit of the StatusInfo. Errors are also propagated to the IntStatus register; the RxError bit in the IntStatus register is set if there is an AlignmentError, RangeError, LengthError, SymbolError, CRCError, or NoDescriptor error; nonfatal overrun errors are reported in the RxError bit of the IntStatus register; fatal Overrun errors are report in the RxOverrun bit of the IntStatus register. On fatal overrun errors, the Rx data path needs to be soft reset by setting the RxReset bit in the Command register.

Overrun errors can have three causes:

- In the case of a multi-fragment reception, the next descriptor may be missing. In this
 case the NoDescriptor field is set in the status word of the previous descriptor and the
 RxError in the IntStatus register is set. This error is nonfatal.
- The data flow on the receiver data interface stalls, corrupting the packet. In this case the overrun bit in the status word is set and the RxError bit in the IntStatus register is set. This error is nonfatal.
- The flow of reception statuses stalls and a new status has to be written while a
 previous status still waits to be transferred across the memory interface. This error will
 corrupt the hardware state and requires the hardware to be soft reset. The error is
 detected and sets the Overrun bit in the IntStatus register.

The first overrun situation will result in an incomplete frame with a NoDescriptor status and the RxError bit in IntStatus set. Software should discard the partially received frame. In the second overrun situation the frame data will be corrupt which results in the Overrun status bit being set in the Status word while the IntError interrupt bit is set. In the third case receive errors cannot be reported in the receiver Status arrays which corrupts the hardware state; the errors will still be reported in the IntStatus register's Overrun bit. The RxReset bit in the Command register should be used to soft reset the hardware.

Device drivers should catch the above receive errors and take action.

Receive triggers interrupts

The receive data path can generate four different interrupt types:

- If the Interrupt bit in the descriptor Control field is set, the Rx DMA will set the
 RxDoneInt bit in the IntStatus register after receiving a fragment and committing the
 associated data and status to memory. Even if a descriptor (fragment) is not the last in
 a multi-fragment frame, the Interrupt bit in the descriptor can be used to generate an
 interrupt.
- If the descriptor array is full while the Ethernet hardware is enabled, the hardware will set the RxFinishedInt bit of the IntStatus register.
- If the AHB interface does not consume receive statuses at a sufficiently high bandwidth, the receive status process may overrun, in which case the RxOverrun bit will be set in the IntStatus register.

Chapter 11: LPC23XX Ethernet

 If there is a receive error (AlignmentError, RangeError, LengthError, SymbolError, or CRCError), or a multi-fragment frame where the device driver did provide descriptors for the initial fragments but did not provide the descriptors for the rest of the fragments, or if a nonfatal data Overrun occurred, the hardware will set the RxErrorInt bit of the IntStatus register.

All of the above interrupts can be enabled and disabled by setting or resetting the corresponding bits in the IntEnable register. Enabling or disabling does not affect the IntStatus register contents, only the propagation of the interrupt status to the CPU (via the Vectored Interrupt Controller).

The interrupts, either of individual frames or of the whole list, are a good means of communication between the DMA manager and the device driver, triggering the device driver to inspect the status words of descriptors that have been processed.

Device driver processes receive data


As a response to status (e.g. RxDoneInt) interrupts or polling of the RxProduceIndex, the device driver can read the descriptors that have been handed over to it by the hardware (RxProduceIndex - RxConsumeIndex). The device driver should inspect the status words in the status array to check for multi-fragment receptions and receive errors.

The device driver can forward receive data and status to upper software layers. After processing of data and status, the descriptors, statuses and data buffers may be recycled and handed back to hardware by incrementing the RxConsumeIndex.

Receive example

Figure 36 illustrates the receive process in an example receiving a frame of 19 bytes.

Chapter 11: LPC23XX Ethernet

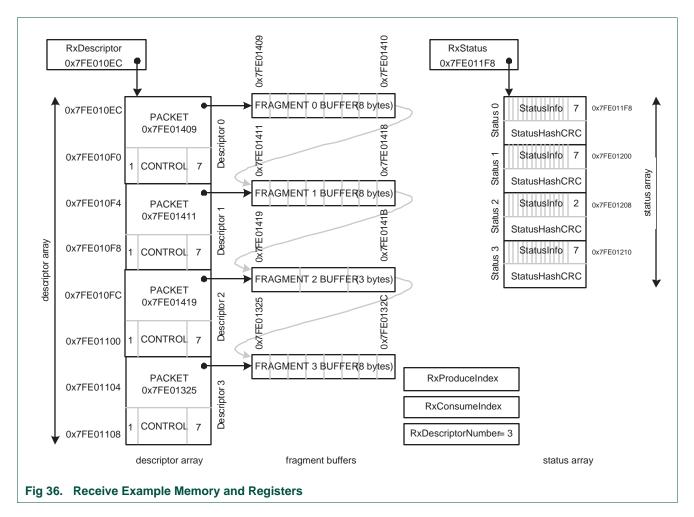

After reset, the values of the DMA registers will be zero. During initialization, the device driver will allocate the descriptor and status array in memory. In this example, an array of four descriptors is allocated; the array is 4x2x4 bytes and aligned on a 4 byte address boundary. Since the number of descriptors matches the number of statuses, the status array consists of four elements; the array is 4x2x4 bytes and aligned on a 8 byte address boundary. The device driver writes the base address of the descriptor array (0xFEED B0EC) in the RxDescriptor register, and the base address of the status array (0xFEED B1F8) in the RxStatus register. The device driver writes the number of descriptors and statuses minus 1 (3) in the RxDescriptorNumber register. The descriptors and statuses in the arrays need not be initialized yet.

After allocating the descriptors, a fragment buffer needs to be allocated for each of the descriptors. Each fragment buffer can be between 1 byte and 2 k bytes. The base address of the fragment buffer is stored in the Packet field of the descriptors. The number of bytes in the fragment buffer is stored in the Size field of the descriptor Control word. The Interrupt field in the Control word of the descriptor can be set to generate an interrupt as soon as the descriptor has been filled by the receive process. In this example the fragment buffers are 8 bytes, so the value of the Size field in the Control word of the descriptor is set to 7. Note that in this example, the fragment buffers are actually a

Chapter 11: LPC23XX Ethernet

continuous memory space; even when a frame is distributed over multiple fragments it will typically be in a linear, continuous memory space; when the descriptors wrap at the end of the descriptor array the frame will not be in a continuous memory space.

The device driver should enable the receive process by writing a 1 to the RxEnable bit of the Command register, after which the MAC needs to be enabled by writing a 1 to the 'RECEIVE ENABLE' bit of the MAC1 configuration register. The Ethernet block will now start receiving Ethernet frames. To reduce the processor interrupt load, some interrupts can be disabled by setting the relevant bits in the IntEnable register.

After the Rx DMA manager is enabled, it will start issuing descriptor read commands. In this example the number of descriptors is 4. Initially the RxProduceIndex and RxConsumeIndex are 0. Since the descriptor array is considered full if RxProduceIndex == RxConsumeIndex - 1, the Rx DMA manager can only read (RxConsumeIndex - RxProduceIndex - 1 =) 3 descriptors; note the wrapping.

After enabling the receive function in the MAC, data reception will begin starting at the next frame i.e. if the receive function is enabled while the RMII interface is halfway through receiving a frame, the frame will be discarded and reception will start at the next frame. The Ethernet block will strip the preamble and start of frame delimiter from the frame. If the frame passes the receive filtering, the Rx DMA manager will start writing the frame to the first fragment buffer.

Suppose the frame is 19 bytes long. Due to the buffer sizes specified in this example, the frame will be distributed over three fragment buffers. After writing the initial 8 bytes in the first fragment buffer, the status for the first fragment buffer will be written and the Rx DMA will continue filling the second fragment buffer. Since this is a multi-fragment receive, the status of the first fragment will have a 0 for the LastFrag bit in the StatusInfo word; the RxSize field will be set to 7 (8, -1 encoded). After writing the 8 bytes in the second fragment the Rx DMA will continue writing the third fragment. The status of the second fragment will be like the status of the first fragment: LastFrag = 0, RxSize = 7. After writing the three bytes in the third fragment buffer, the end of the frame has been reached and the status of the third fragment is written. The third fragment's status will have the LastFrag bit set to 1 and the RxSize equal to 2 (3, -1 encoded).

The next frame received from the RMII interface will be written to the fourth fragment buffer i.e. five bytes of the third buffer will be unused.

The Rx DMA manager uses an internal tag protocol in the memory interface to check that the receive data and status have been committed to memory. After the status of the fragments are committed to memory, an RxDoneInt interrupt will be triggered, which activates the device driver to inspect the status information. In this example, all descriptors have the Interrupt bit set in the Control word i.e. all descriptors will generate an interrupt after committing data and status to memory.

In this example the receive function cannot read new descriptors as long as the device driver does not increment the RxConsumeIndex, because the descriptor array is full (even though one descriptor is not programmed yet). Only after the device driver has forwarded the receive data to application software, and after the device driver has updated the RxConsumeIndex by incrementing it, will the Ethernet block can continue reading descriptors and receive data. The device driver will probably increment the RxConsumeIndex by 3, since the driver will forward the complete frame consisting of three fragments to the application, and hence free up three descriptors at the same time.

Chapter 11: LPC23XX Ethernet

Each four pairs of bits transferred on the RMII interface is transferred as a byte on the data write interface after being delayed by 128 or 136 cycles for filtering by the receive filter and buffer modules. The Ethernet block removes preamble, frame start delimiter, and CRC from the data and checks the CRC. To limit the buffer NoDescriptor error probability, three descriptors are buffered. The value of the RxProduceIndex is only updated after status information has been committed to memory, which is checked by an internal tag protocol in the memory interface. The software device driver will process the receive data, after which the device driver will update the RxConsumeIndex.

11.18.5 Transmission retry

If a collision on the Ethernet occurs, it usually takes place during the collision window spanning the first 64 bytes of a frame. If collision is detected, the Ethernet block will retry the transmission. For this purpose, the first 64 bytes of a frame are buffered, so that this data can be used during the retry. A transmission retry within the first 64 bytes in a frame is fully transparent to the application and device driver software.

When a collision occurs outside of the 64 byte collision window, a LateCollision error is triggered, and the transmission is aborted. After a LateCollision error, the remaining data in the transmit frame will be discarded. The Ethernet block will set the Error and LateCollision bits in the frame's status fields. The TxError bit in the IntStatus register will be set. If the corresponding bit in the IntEnable register is set, the TxError bit in the IntStatus register will be propagated to the CPU (via the Vectored Interrupt Controller). The device driver software should catch the interrupt and take appropriate actions.

The 'RETRANSMISSION MAXIMUM' field of the CLRT register can be used to configure the maximum number of retries before aborting the transmission.

11.18.6 Status hash CRC calculations

For each received frame, the Ethernet block is able to detect the destination address and source address and from them calculate the corresponding hash CRCs. To perform the computation, the Ethernet block features two internal blocks: one is a controller synchronized with the beginning and the end of each frame, the second block is the CRC calculator.

When a new frame is detected, internal signaling notifies the controller. The controller starts counting the incoming bytes of the frame, which correspond to the destination address bytes. When the sixth (and last) byte is counted, the controller notifies the calculator to store the corresponding 32 bit CRC into a first inner register. Then the controller repeats counting the next incoming bytes, in order to get synchronized with the source address. When the last byte of the source address is encountered, the controller again notifies the CRC calculator, which freezes until the next new frame. When the calculator receives this second notification, it stores the present 32 bit CRC into a second inner register. Then the CRCs remain frozen in their own registers until new notifications arise.

The destination address and source address hash CRCs being written in the StatusHashCRC word are the nine most significant bits of the 32 bit CRCs as calculated by the CRC calculator.

Chapter 11: LPC23XX Ethernet

11.18.7 Duplex modes

The Ethernet block can operate in full duplex and half duplex mode. Half or full duplex mode needs to be configured by the device driver software during initialization.

For a full duplex connection the FullDuplex bit of the Command register needs to be set to 1 and the FULL-DUPLEX bit of the MAC2 configuration register needs to be set to 1; for half duplex the same bits need to be set to 0.

11.18.8 IEE 802.3/Clause 31 flow control

Overview

For full duplex connections, the Ethernet block supports IEEE 802.3/clause 31 flow control using pause frames. This type of flow control may be used in full-duplex point-to-point connections. Flow control allows a receiver to stall a transmitter e.g. when the receive buffers are (almost) full. For this purpose, the receiving side sends a pause frame to the transmitting side.

Pause frames use units of 512 bit times corresponding to 128 rx_clk/tx_clk cycles.

Receive flow control

In full-duplex mode, the Ethernet block will suspend its transmissions when the it receives a pause frame. Rx flow control is initiated by the receiving side of the transmission. It is enabled by setting the 'RX FLOW CONTROL' bit in the MAC1 configuration register. If the RX FLOW CONTROL' bit is zero, then the Ethernet block ignores received pause control frames. When a pause frame is received on the Rx side of the Ethernet block, transmission on the Tx side will be interrupted after the currently transmitting frame has completed, for an amount of time as indicated in the received pause frame. The transmit data path will stop transmitting data for the number of 512 bit slot times encoded in the pause-timer field of the received pause control frame.

By default the received pause control frames are not forwarded to the device driver. To forward the receive flow control frames to the device driver, set the 'PASS ALL RECEIVE FRAMES' bit in the MAC1 configuration register.

Transmit flow control

If case device drivers need to stall the receive data e.g. because software buffers are full, the Ethernet block can transmit pause control frames. Transmit flow control needs to be initiated by the device driver software; there is no IEEE 802.3/31 flow control initiated by hardware, such as the DMA managers.

With software flow control, the device driver can detect a situation in which the process of receiving frames needs to be interrupted by sending out Tx pause frames. Note that due to Ethernet delays, a few frames can still be received before the flow control takes effect and the receive stream stops.

Transmit flow control is activated by writing 1 to the TxFlowControl bit of the Command register. When the Ethernet block operates in full duplex mode, this will result in transmission of IEEE 802.3/31 pause frames. The flow control continues until a 0 is written to TxFlowControl bit of the Command register.

Chapter 11: LPC23XX Ethernet

If the MAC is operating in full-duplex mode, then setting the TxFlowControl bit of the Command register will start a pause frame transmission. The value inserted into the pause-timer value field of transmitted pause frames is programmed via the PauseTimer[15:0] bits in the FlowControlCounter register. When the TxFlowControl bit is deasserted, another pause frame having a pause-timer value of 0x0000 is automatically sent to abort flow control and resume transmission.

When flow control be in force for an extended time, a sequence of pause frames must be transmitted. This is supported with a mirror counter mechanism. To enable mirror counting, a nonzero value is written to the MirrorCounter[15:0] bits in the FlowControlCounter register. When the TxFlowControl bit is asserted, a pause frame is transmitted. After sending the pause frame, an internal mirror counter is initialized to zero. The internal mirror counter starts incrementing one every 512 bit-slot times. When the internal mirror counter reaches the MirrorCounter value, another pause frame is transmitted with pause-timer value equal to the PauseTimer field from the FlowControlCounter register, the internal mirror counter is reset to zero and restarts counting. The register MirrorCounter[15:0] is usually set to a smaller value than register PauseTimer[15:0] to ensure an early expiration of the mirror counter, allowing time to send a new pause frame before the transmission on the other side can resume. By continuing to send pause frames before the transmitting side finishes counting the pause timer, the pause can be extended as long as TxFlowControl is asserted. This continues until TxFlowControl is deasserted when a final pause frame having a pause-timer value of 0x0000 is automatically sent to abort flow control and resume transmission. To disable the mirror counter mechanism, write the value 0 to MirrorCounter field in the FlowControlCounter register. When using the mirror counter mechanism, account for time-of-flight delays, frame transmission time, queuing delays, crystal frequency tolerances, and response time delays by programming the MirrorCounter conservatively, typically about 80% of the PauseTimer value.

If the software device driver sets the MirrorCounter field of the FlowControlCounter register to zero, the Ethernet block will only send one pause control frame. After sending the pause frame an internal pause counter is initialized at zero; the internal pause counter is incremented by one every 512 bit-slot times. Once the internal pause counter reaches the value of the PauseTimer register, the TxFlowControl bit in the Command register will be reset. The software device driver can poll the TxFlowControl bit to detect when the pause completes.

The value of the internal counter in the flow control module can be read out via the FlowControlStatus register. If the MirrorCounter is nonzero, the FlowControlStatus register will return the value of the internal mirror counter; if the MirrorCounter is zero the FlowControlStatus register will return the value of the internal pause counter value.


The device driver is allowed to dynamically modify the MirrorCounter register value and switch between zero MirrorCounter and nonzero MirrorCounter modes.

Transmit flow control is enabled via the 'TX FLOW CONTROL' bit in the MAC1 configuration register. If the 'TX FLOW CONTROL' bit is zero, then the MAC will not transmit pause control frames, software must not initiate pause frame transmissions, and the TxFlowControl bit in the Command register should be zero.

Transmit flow control example

Figure 37 illustrates the transmit flow control.

Chapter 11: LPC23XX Ethernet

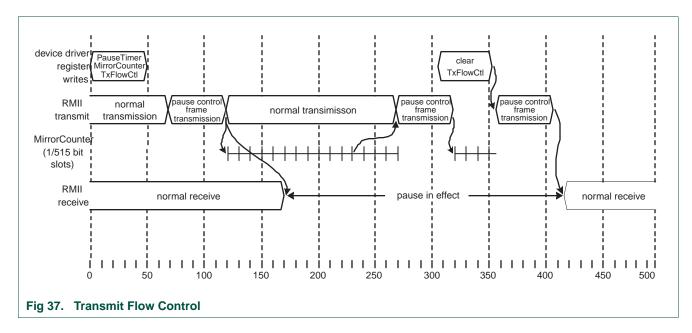

In this example, a frame is received while transmitting another frame (full duplex.) The device driver detects that some buffer might overrun and enables the transmit flow control by programming the PauseTimer and MirrorCounter fields of the FlowControlCounter register, after which it enables the transmit flow control by setting the TxFlowControl bit in the Command register.

As a response to the enabling of the flow control a pause control frame will be sent after the currently transmitting frame has been transmitted. When the pause frame transmission completes the internal mirror counter will start counting bit slots; as soon as the counter reaches the value in the MirrorCounter field another pause frame is transmitted. While counting the transmit data path will continue normal transmissions.

As soon as software disables transmit flow control a zero pause control frame is transmitted to resume the receive process.

11.18.9 Half-Duplex mode backpressure

When in half-duplex mode, backpressure can be generated to stall receive packets by sending continuous preamble that basically jams any other transmissions on the Ethernet medium. When the Ethernet block operates in half duplex mode, asserting the TxFlowControl bit in the Command register will result in applying continuous preamble on the Ethernet wire, effectively blocking traffic from any other Ethernet station on the same segment.

In half duplex mode, when the TxFlowControl bit goes high, continuous preamble is sent until TxFlowControl is deasserted. If the medium is idle, the Ethernet block begins transmitting preamble, which raises carrier sense causing all other stations to defer. In the event the transmitting of preamble causes a collision, the backpressure 'rides through' the collision. The colliding station backs off and then defers to the backpressure. If during backpressure, the user wishes to send a frame, the backpressure is interrupted, the frame sent and then the backpressure resumed. If TxFlowControl is asserted for longer than 3.3 ms in 10 Mbps mode or 0.33 ms in 100 Mbps mode, backpressure will cease sending preamble for several byte times to avoid the jabber limit.

Chapter 11: LPC23XX Ethernet

11.18.10 Receive filtering

Features of receive filtering

The Ethernet MAC has several receive packet filtering functions that can be configured from the software driver:

- Perfect address filter: allows packets with a perfectly matching station address to be identified and passed to the software driver.
- Hash table filter: allows imperfect filtering of packets based on the station address.
- Unicast/multicast/broadcast filtering: allows passing of all unicast, multicast, and/or broadcast packets.
- Magic packet filter: detection of magic packets to generate a Wake-on-LAN interrupt.

The filtering functions can be logically combined to create complex filtering functions. Furthermore, the Ethernet block can pass or reject runt packets smaller than 64 bytes; a promiscuous mode allows all packets to be passed to software.


Overview

The Ethernet block has the capability to filter out receive frames by analyzing the Ethernet destination address in the frame. This capability greatly reduces the load on the host system, because Ethernet frames that are addressed to other stations would otherwise need to be inspected and rejected by the device driver software, using up bandwidth, memory space, and host CPU time. Address filtering can be implemented using the perfect address filter or the (imperfect) hash filter. The latter produces a 6 bits hash code which can be used as an index into a 64 entry programmable hash table. Figure 38 depicts a functional view of the receive filter.

At the top of the diagram the Ethernet receive frame enters the filters. Each filter is controlled by signals from control registers; each filter produces a 'Ready' output and a 'Match' output. If 'Ready' is 0 then the Match value is 'don't care'; if a filter finishes filtering then it will assert its Ready output; if the filter finds a matching frame it will assert the Match output along with the Ready output. The results of the filters are combined by logic functions into a single RxAbort output. If the RxAbort output is asserted, the frame does not need to be received.

In order to reduce memory traffic, the receive data path has a buffer of 68 bytes. The Ethernet MAC will only start writing a frame to memory after 68 byte delays. If the RxAbort signal is asserted during the initial 68 bytes of the frame, the frame can be discarded and removed from the buffer and not stored to memory at all, not using up receive descriptors, etc. If the RxAbort signal is asserted after the initial 68 bytes in a frame (probably due to reception of a Magic Packet), part of the frame is already written to memory and the Ethernet MAC will stop writing further data in the frame to memory; the FailFilter bit in the status word of the frame will be set to indicate that the software device driver can discard the frame immediately.

Chapter 11: LPC23XX Ethernet

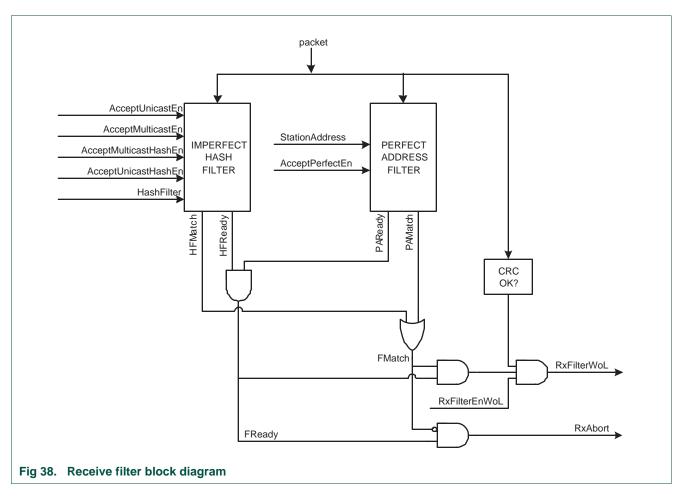

Unicast, broadcast and multicast

Generic filtering based on the type of frame (unicast, multicast or broadcast) can be programmed using the AcceptUnicastEn, AcceptMulticastEn, or AcceptBroadcastEn bits of the RxFilterCtrl register. Setting the AcceptUnicast, AcceptMulticast, and AcceptBroadcast bits causes all frames of types unicast, multicast and broadcast, respectively, to be accepted, ignoring the Ethernet destination address in the frame. To program promiscuous mode, i.e. to accept all frames, set all 3 bits to 1.

Perfect address match

When a frame with a unicast destination address is received, a perfect filter compares the destination address with the 6 byte station address programmed in the station address registers SA0, SA1, SA2. If the AcceptPerfectEn bit in the RxFilterCtrl register is set to 1, and the address matches, the frame is accepted.

Imperfect hash filtering

An imperfect filter is available, based on a hash mechanism. This filter applies a hash function to the destination address and uses the hash to access a table that indicates if the frame should be accepted. The advantage of this type of filter is that a small table can cover any possible address. The disadvantage is that the filtering is imperfect, i.e. sometimes frames are accepted that should have been discarded.

Chapter 11: LPC23XX Ethernet

· Hash function:

- The standard Ethernet cyclic redundancy check (CRC) function is calculated from the 6 byte destination address in the Ethernet frame (this CRC is calculated anyway as part of calculating the CRC of the whole frame), then bits [28:23] out of the 32 bits CRC result are taken to form the hash. The 6 bit hash is used to access the hash table: it is used as an index in the 64 bit HashFilter register that has been programmed with accept values. If the selected accept value is 1, the frame is accepted.
- The device driver can initialize the hash filter table by writing to the registers HashFilterL and HashfilterH. HashFilterL contains bits 0 through 31 of the table and HashFilterH contains bit 32 through 63 of the table. So, hash value 0 corresponds to bit 0 of the HashfilterL register and hash value 63 corresponds to bit 31 of the HashFilterH register.

Multicast and unicast

- The imperfect hash filter can be applied to multicast addresses, by setting the AcceptMulticastHashEn bit in the RxFilter register to 1.
- The same imperfect hash filter that is available for multicast addresses can also be used for unicast addresses. This is useful to be able to respond to a multitude of unicast addresses without enabling all unicast addresses. The hash filter can be applied to unicast addresses by setting the AcceptUnicastHashEn bit in the RxFilter register to 1.

Enabling and disabling filtering

The filters as defined in the sections above can be bypassed by setting the PassRxFilter bit in the Command register. When the PassRxFilter bit is set, all receive frames will be passed to memory. In this case the device driver software has to implement all filtering functionality in software. Setting the PassRxFilter bit does not affect the runt frame filtering as defined in the next section.

Runt frames

A frame with less than 64 bytes (or 68 bytes for VLAN frames) is shorter than the minimum Ethernet frame size and therefore considered erroneous; they might be collision fragments. The receive data path automatically filters and discards these runt frames without writing them to memory and using a receive descriptor.

When a runt frame has a correct CRC there is a possibility that it is intended to be useful. The device driver can receive the runt frames with correct CRC by setting the PassRuntFrame bit of the Command register to 1.

11.18.11 Power management

The Ethernet block supports power management by means of clock switching. All clocks in the Ethernet core can be switched off. If Wake-up on LAN is needed, the rx_clk should not be switched off.

11.18.12 Wake-up on LAN

Overview

Chapter 11: LPC23XX Ethernet

The Ethernet block supports power management with remote wake-up over LAN. The host system can be powered down, even including part of the Ethernet block itself, while the Ethernet block continues to listen to packets on the LAN. Appropriately formed packets can be received and recognized by the Ethernet block and used to trigger the host system to wake up from its power-down state.

Wake-up of the system takes effect through an interrupt. When a wake-up event is detected, the WakeupInt bit in the IntStatus register is set. The interrupt status will trigger an interrupt if the corresponding WakeupIntEn bit in the IntEnable register is set. This interrupt should be used by system power management logic to wake up the system.

While in a power-down state the packet that generates a Wake-up on LAN event is lost.

There are two ways in which Ethernet packets can trigger wake-up events: generic Wake-up on LAN and Magic Packet. Magic Packet filtering uses an additional filter for Magic Packet detection. In both cases a Wake-up on LAN event is only triggered if the triggering packet has a valid CRC. Figure 38 shows the generation of the wake-up signal.

The RxFilterWoLStatus register can be read by the software to inspect the reason for a Wake-up event. Before going to power-down the power management software should clear the register by writing the RxFilterWolClear register.

NOTE: when entering in power-down mode, a receive frame might be not entirely stored into the Rx buffer. In this situation, after turning exiting power-down mode, the next receive frame is corrupted due to the data of the previous frame being added in front of the last received frame. Software drivers have to reset the receive data path just after exiting power-down mode.

The following subsections describe the two Wake-up on LAN mechanisms.

Filtering for WoL

The receive filter functionality can be used to generate Wake-up on LAN events. If the RxFilterEnWoL bit of the RxFilterCtrl register is set, the receive filter will set the WakeupInt bit of the IntStatus register if a frame is received that passes the filter. The interrupt will only be generated if the CRC of the frame is correct.

Magic Packet WoL

The Ethernet block supports wake-up using Magic Packet technology (see 'Magic Packet technology', Advanced Micro Devices). A Magic Packet is a specially formed packet solely intended for wake-up purposes. This packet can be received, analyzed and recognized by the Ethernet block and used to trigger a wake-up event.

A Magic Packet is a packet that contains in its data portion the station address repeated 16 times with no breaks or interruptions, preceded by 6 Magic Packet synchronization bytes with the value 0xFF. Other data may be surrounding the Magic Packet pattern in the data portion of the packet. The whole packet must be a well-formed Ethernet frame.

The magic packet detection unit analyzes the Ethernet packets, extracts the packet address and checks the payload for the Magic Packet pattern. The address from the packet is used for matching the pattern (not the address in the SA0/1/2 registers.) A magic packet only sets the wake-up interrupt status bit if the packet passes the receive filter as illustrated in Figure 38: the result of the receive filter is ANDed with the magic packet filter result to produce the result.

Magic Packet filtering is enabled by setting the MagicPacketEnWoL bit of the RxFilterCtrl register. Note that when doing Magic Packet WoL, the RxFilterEnWoL bit in the RxFilterCtrl register should be 0. Setting the RxFilterEnWoL bit to 1 would accept all packets for a matching address, not just the Magic Packets i.e. WoL using Magic Packets is more strict.

Chapter 11: LPC23XX Ethernet

When a magic packet is detected, apart from the WakeupInt bit in the IntStatus register, the MagicPacketWoL bit is set in the RxFilterWoLStatus register. Software can reset the bit writing a 1 to the corresponding bit of the RxFilterWoLClear register.

Example: An example of a Magic Packet with station address 0x11 0x22 0x33 0x44 0x55 0x66 is the following (MISC indicates miscellaneous additional data bytes in the packet):


11.18.13 Enabling and disabling receive and transmit

Enabling and disabling reception

After reset, the receive function of the Ethernet block is disabled. The receive function can be enabled by the device driver setting the RxEnable bit in the Command register and the "RECEIVE ENABLE" bit in the MAC1 configuration register (in that order).

The status of the receive data path can be monitored by the device driver by reading the RxStatus bit of the Status register. Figure 39 illustrates the state machine for the generation of the RxStatus bit.

Chapter 11: LPC23XX Ethernet

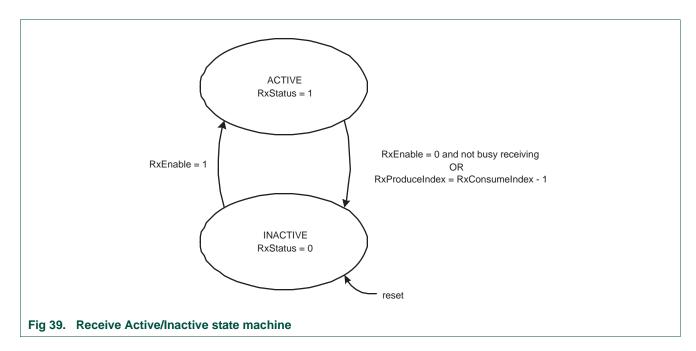

After a reset, the state machine is in the INACTIVE state. As soon as the RxEnable bit is set in the Command register, the state machine transitions to the ACTIVE state. As soon as the RxEnable bit is cleared, the state machine returns to the INACTIVE state. If the receive data path is busy receiving a packet while the receive data path gets disabled, the packet will be received completely, stored to memory along with its status before returning to the INACTIVE state. Also if the Receive descriptor array is full, the state machine will return to the INACTIVE state.


For the state machine in <u>Figure 39</u>, a soft reset is like a hardware reset assertion, i.e. after a soft reset the receive data path is inactive until the data path is re-enabled.

Enabling and disabling transmission

After reset, the transmit function of the Ethernet block is disabled. The Tx transmit data path can be enabled by the device driver setting the TxEnable bit in the Command register to 1.

The status of the transmit data paths can be monitored by the device driver reading the TxStatus bit of the Status register. Figure 40 illustrates the state machine for the generation of the TxStatus bit.

Chapter 11: LPC23XX Ethernet

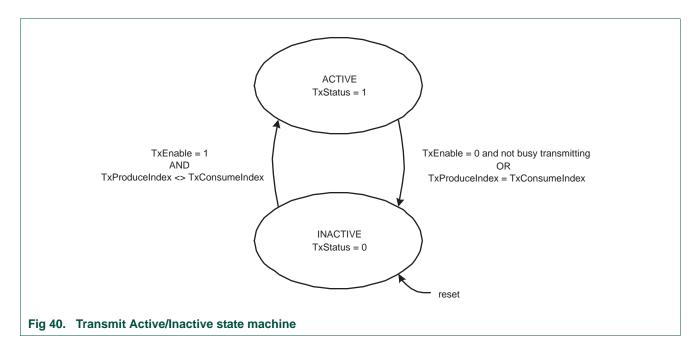

After reset, the state machine is in the INACTIVE state. As soon as the TxEnable bit is set in the Command register and the Produce and Consume indices are not equal, the state machine transitions to the ACTIVE state. As soon as the TxEnable bit is cleared and the transmit data path has completed all pending transmissions, including committing the transmission status to memory, the state machine returns to the INACTIVE state. The state machine will also return to the INACTIVE state if the Produce and Consume indices are equal again i.e. all frames have been transmitted.

For the state machine in <u>Figure 40</u>, a soft reset is like a hardware reset assertion, i.e. after a soft reset the transmit data path is inactive until the data path is re-enabled.

11.18.14 Transmission padding and CRC

In the case of a frame of less than 60 bytes (or 64 bytes for VLAN frames), the Ethernet block can pad the frame to 64 or 68 bytes including a 4 bytes CRC Frame Check Sequence (FCS). Padding is affected by the value of the 'AUTO DETECT PAD ENABLE' (ADPEN), 'VLAN PAD ENABLE' (VLPEN) and 'PAD/CRC ENABLE' (PADEN) bits of the MAC2 configuration register, as well as the Override and Pad bits from the transmit descriptor Control word. CRC generation is affected by the 'CRC ENABLE' (CRCE) and 'DELAYED CRC' (DCRC) bits of the MAC2 configuration register, and the Override and CRC bits from the transmit descriptor Control word.

The effective pad enable (EPADEN) is equal to the 'PAD/CRC ENABLE' bit from the MAC2 register if the Override bit in the descriptor is 0. If the Override bit is 1, then EPADEN will be taken from the descriptor Pad bit. Likewise the effective CRC enable (ECRCE) equals CRCE if the Override bit is 0, otherwise it equal the CRC bit from the descriptor.

If padding is required and enabled, a CRC will always be appended to the padded frames. A CRC will only be appended to the non-padded frames if ECRCE is set.

If EPADEN is 0, the frame will not be padded and no CRC will be added unless ECRCE is set.

Chapter 11: LPC23XX Ethernet

If EPADEN is 1, then small frames will be padded and a CRC will always be added to the padded frames. In this case if ADPEN and VLPEN are both 0, then the frames will be padded to 60 bytes and a CRC will be added creating 64 bytes frames; if VLPEN is 1, the frames will be padded to 64 bytes and a CRC will be added creating 68 bytes frames; if ADPEN is 1, while VLPEN is 0 VLAN frames will be padded to 64 bytes, non VLAN frames will be padded to 60 bytes, and a CRC will be added to padded frames, creating 64 or 68 bytes padded frames.

If CRC generation is enabled, CRC generation can be delayed by four bytes by setting the DELAYED CRC bit in the MAC2 register, in order to skip proprietary header information.

11.18.15 Huge frames and frame length checking

The 'HUGE FRAME ENABLE' bit in the MAC2 configuration register can be set to 1 to enable transmission and reception of frames of any length. Huge frame transmission can be enabled on a per frame basis by setting the Override and Huge bits in the transmit descriptor Control word.

When enabling huge frames, the Ethernet block will not check frame lengths and report frame length errors (RangeError and LengthError). If huge frames are enabled, the received byte count in the RSV register may be invalid because the frame may exceed the maximum size; the RxSize fields from the receive status arrays will be valid.

Frame lengths are checked by comparing the length/type field of the frame to the actual number of bytes in the frame. A LengthError is reported by setting the corresponding bit in the receive StatusInfo word.

The MAXF register allows the device driver to specify the maximum number of bytes in a frame. The Ethernet block will compare the actual receive frame to the MAXF value and report a RangeError in the receive StatusInfo word if the frame is larger.

11.18.16 Statistics counters

Generally, Ethernet applications maintain many counters that track Ethernet traffic statistics. There are a number of standards specifying such counters, such as IEEE std 802.3 / clause 30. Other standards are RFC 2665 and RFC 2233.

The approach taken here is that by default all counters are implemented in software. With the help of the StatusInfo field in frame statuses, many of the important statistics events listed in the standards can be counted by software.

11.18.17 MAC status vectors

Transmit and receive status information as detected by the MAC are available in registers TSV0, TSV1 and RSV so that software can poll them. These registers are normally of limited use because the communication between driver software and the Ethernet block takes place primarily through frame descriptors. Statistical events can be counted by software in the device driver. However, for debug purposes the transmit and receive status vectors are made visible. They are valid as long as the internal status of the MAC is valid and should typically only be read when the transmit and receive processes are halted.

Chapter 11: LPC23XX Ethernet

11.18.18 Reset

The Ethernet block has a hard reset input which is connected to the chip reset, as well as several soft resets which can be activated by setting the appropriate bits in registers. All registers in the Ethernet block have a value of 0 after a hard reset, unless otherwise specified.

Hard reset

After a hard reset, all registers will be set to their default value.

Soft reset

Parts of the Ethernet block can be soft reset by setting bits in the Command register and the MAC1 configuration register. The MAC1 register has six different reset bits:

- SOFT RESET: Setting this bit will put all modules in the MAC in reset, except for the MAC registers (at addresses 0x000 to 0x0FC). The value of the soft reset after a hardware reset assertion is 1, i.e. the soft reset needs to be cleared after a hardware reset.
- SIMULATION RESET: Resets the random number generator in the Transmit Function. The value after a hardware reset assertion is 0.
- RESET MCS/Rx: Setting this bit will reset the MAC Control Sublayer (pause frame logic) and the receive function in the MAC. The value after a hardware reset assertion is 0.
- RESET Rx: Setting this bit will reset the receive function in the MAC. The value after a hardware reset assertion is 0.
- RESET MCS/Tx: Setting this bit will reset the MAC Control Sublayer (pause frame logic) and the transmit function in the MAC. The value after a hardware reset assertion is 0.
- RESET Tx: Setting this bit will reset the transmit function of the MAC. The value after a hardware reset assertion is 0.

The above reset bits must be cleared by software.

The Command register has three different reset bits:

- TxReset: Writing a '1' to the TxReset bit will reset the transmit data path, excluding the MAC portions, including all (read-only) registers in the transmit data path, as well as the TxProduceIndex register in the host registers module. A soft reset of the transmit data path will abort all AHB transactions of the transmit data path. The reset bit will be cleared autonomously by the Ethernet block. A soft reset of the Tx data path will clear the TxStatus bit in the Status register.
- RxReset: Writing a '1' to the RxReset bit will reset the receive data path, excluding the MAC portions, including all (read-only) registers in the receive data path, as well as the RxConsumeIndex register in the host registers module. A soft reset of the receive data path will abort all AHB transactions of the receive data path. The reset bit will be cleared autonomously by the Ethernet block. A soft reset of the Rx data path will clear the RxStatus bit in the Status register.

Chapter 11: LPC23XX Ethernet

 RegReset: Resets all of the data paths and registers in the host registers module, excluding the registers in the MAC. A soft reset of the registers will also abort all AHB transactions of the transmit and receive data path. The reset bit will be cleared autonomously by the Ethernet block.

To do a full soft reset of the Ethernet block, device driver software must:

- Set the 'SOFT RESET' bit in the MAC1 register to 1.
- Set the RegReset bit in the Command register, this bit clears automatically.
- Reinitialize the MAC registers (0x000 to 0x0FC).
- Reset the 'SOFT RESET' bit in the MAC1 register to 0.

To reset just the transmit data path, the device driver software has to:

- Set the 'RESET MCS/Tx' bit in the MAC1 register to 1.
- Disable the Tx DMA managers by setting the TxEnable bits in the Command register to 0.
- Set the TxReset bit in the Command register, this bit clears automatically.
- Reset the 'RESET MCS/Tx' bit in the MAC1 register to 0.

To reset just the receive data path, the device driver software has to:

- Disable the receive function by resetting the 'RECEIVE ENABLE' bit in the MAC1 configuration register and resetting of the RxEnable bit of the Command register.
- Set the 'RESET MCS/Rx' bit in the MAC1 register to 1.
- Set the RxReset bit in the Command register, this bit clears automatically.
- Reset the 'RESET MCS/Rx' bit in the MAC1 register to 0.

11.18.19 Ethernet errors

The Ethernet block generates errors for the following conditions:

- A reception can cause an error: AlignmentError, RangeError, LengthError, SymbolError, CRCError, NoDescriptor, or Overrun. These are reported back in the receive StatusInfo and in the interrupt status register (IntStatus).
- A transmission can cause an error: LateCollision, ExcessiveCollision, ExcessiveDefer, NoDescriptor, or Underrun. These are reported back in the transmission StatusInfo and in the interrupt status register (IntStatus).

11.19 AHB bandwidth

The Ethernet block is connected to an AHB bus which must carry all of the data and control information associated with all Ethernet traffic in addition to the CPU accesses required to operate the Ethernet block and deal with message contents.

11.19.1 DMA access

Assumptions

Chapter 11: LPC23XX Ethernet

By making some assumptions, the bandwidth needed for each type of AHB transfer can be calculated and added in order to find the overall bandwidth requirement.

The flexibility of the descriptors used in the Ethernet block allows the possibility of defining memory buffers in a range of sizes. In order to analyze bus bandwidth requirements, some assumptions must be made about these buffers. The "worst case" is not addressed since that would involve all descriptors pointing to single byte buffers, with most of the memory occupied in holding descriptors and very little data. It can easily be shown that the AHB cannot handle the huge amount of bus traffic that would be caused by such a degenerate (and illogical) case.

For this analysis, an Ethernet packet is assumed to consist of a 64 byte frame. Continuous traffic is assumed on both the transmit and receive channels.

This analysis does not reflect the flow of Ethernet traffic over time, which would include inter-packet gaps in both the transmit and receive channels that reduce the bandwidth requirements over a larger time frame.

Types of DMA access and their bandwidth requirements

The interface to an external Ethernet PHY is via RMII. RMII operates at 50 MHz, transferring a byte in 4 clock cycles. The data transfer rate is 12.5 Mbps.

The Ethernet block initiates DMA accesses for the following cases:

- Tx descriptor read:
 - Transmit descriptors occupy 2 words (8 bytes) of memory and are read once for each use of a descriptor.
 - Two word read happens once every 64 bytes (16 words) of transmitted data.
 - This gives 1/8th of the data rate, which = 1.5625 Mbps.
- Rx descriptor read:
 - Receive descriptors occupy 2 words (8 bytes) of memory and are read once for each use of a descriptor.
 - Two word read happens once every 64 bytes (16 words) of received data.
 - This gives 1/8th of the data rate, which = 1.5625 Mbps.
- Tx status write:
 - Transmit status occupies 1 word (4 bytes) of memory and is written once for each use of a descriptor.
 - One word write happens once every 64 bytes (16 words) of transmitted data.
 - This gives 1/16th of the data rate, which = 0.7813 Mbps.
- · Rx status write:
 - Receive status occupies 2 words (8 bytes) of memory and is written once for each use of a descriptor.
 - Two word write happens once every 64 bytes (16 words) of received data.
 - This gives 1/8 of the data rate, which = 1.5625 Mbps.
- Tx data read:
 - Data transmitted in an Ethernet frame, the size is variable.
 - Basic Ethernet rate = 12.5 Mbps.

Chapter 11: LPC23XX Ethernet

- Rx data write:
 - Data to be received in an Ethernet frame, the size is variable.
 - Basic Ethernet rate = 12.5 Mbps.

This gives a total rate of 30.5 Mbps for the traffic generated by the Ethernet DMA function.

11.19.2 Types of CPU access

- Accesses that mirror each of the DMA access types:
 - All or part of status values must be read, and all or part of descriptors need to be
 written after each use, transmitted data must be stored in the memory by the CPU,
 and eventually received data must be retrieved from the memory by the CPU.
 - This gives roughly the same or slightly lower rate as the combined DMA functions, which = 30.5 Mbps.
- Access to registers in the Ethernet block:
 - The CPU must read the RxProduceIndex, TxConsumeIndex, and IntStatus registers, and both read and write the RxConsumeIndex and TxProduceIndex registers.
 - 7 word read/writes once every 64 bytes (16 words) of transmitted and received data.
 - This gives 7/16 of the data rate, which = 5.4688 Mbps.

This gives a total rate of 36 Mbps for the traffic generated by the Ethernet DMA function.

11.19.3 Overall bandwidth

Overall traffic on the AHB is the sum of DMA access rates and CPU access rates, which comes to approximately 66.5 MB/s.

The peak bandwidth requirement can be somewhat higher due to the use of small memory buffers, in order to hold often used addresses (e.g. the station address) for example. Driver software can determine how to build frames in an efficient manner that does not overutilize the AHB.

The bandwidth available on the AHB bus depends on the system clock frequency. As an example, assume that the system clock is set at 60 MHz. All or nearly all of bus accesses related to the Ethernet will be word transfers. The raw AHB bandwidth can be approximated as 4 bytes per two system clocks, which equals 2 times the system clock rate. With a 60 MHz system clock, the bandwidth is 120 MB/s, giving about 55% utilization for Ethernet traffic during simultaneous transmit and receive operations.

11.20 CRC calculation

The calculation is used for several purposes:

- Generation the FCS at the end of the Ethernet frame.
- Generation of the hash table index for the hash table filtering.
- Generation of the destination and source address hash CRCs.

Chapter 11: LPC23XX Ethernet

The C pseudocode function below calculates the CRC on a frame taking the frame (without FCS) and the number of bytes in the frame as arguments. The function returns the CRC as a 32 bit integer.

```
int crc calc(char frame no fcs[], int frame len) {
     int i; // iterator
     int j;
              // another iterator
     char byte; // current byte
     int crc; // CRC result
     int q0, q1, q2, q3; // temporary variables
     crc = 0xFFFFFFF;
     for (i = 0; i < frame_len; i++) {
          byte = *frame no fcs++;
          for (j = 0; j < 2; j++) {
                if (((crc >> 28) ^ (byte >> 3)) & 0x0000001) {
                     q3 = 0x04C11DB7;
                } else {
                     q3 = 0x00000000;
                if (((crc >> 29) ^ (byte >> 2)) & 0x00000001) {
                     q2 = 0x09823B6E;
                } else {
                     q2 = 0x00000000;
                if (((crc >> 30) ^ (byte >> 1)) & 0x00000001) {
                     q1 = 0x130476DC;
                } else {
                     q1 = 0x00000000;
                if (((crc >> 31) ^ (byte >> 0)) & 0x00000001) {
                     q0 = 0x2608EDB8;
                } else {
                     q0 = 0x00000000;
                crc = (crc << 4) ^ q3 ^ q2 ^ q1 ^ q0;
                byte >>= 4;
     return crc;
```

For FCS calculation, this function is passed a pointer to the first byte of the frame and the length of the frame without the FCS.

For hash filtering, this function is passed a pointer to the destination address part of the frame and the CRC is only calculated on the 6 address bytes. The hash filter uses bits [28:23] for indexing the 64 bits {HashFilterH, HashFilterL} vector. If the corresponding bit is set the packet is passed, otherwise it is rejected by the hash filter.

Chapter 11: LPC23XX Ethernet

For obtaining the destination and source address hash CRCs, this function calculates first both the 32 bit CRCs, then the nine most significant bits from each 32 bit CRC are extracted, concatenated, and written in every StatusHashCRC word of every fragment status.

UM10211

Chapter 12: LPC23XX CAN controllers CAN1/2

Rev. 4.1 — 5 September 2012

User manual

12.1 How to read this chapter

This chapter describes the CAN controllers for the following LPC23XX parts:

- LPC2361/62
- LPC2364/66/68
- LPC2378
- LPC2387
- LPC2388

LPC2365/67 and LPC2377 do not include CAN controllers.

12.2 Basic configuration

The CAN1/2 peripherals are configured using the following registers:

- 1. Power: In the PCONP register (<u>Table 56</u>), set bits PCAN1/2.
 - **Remark:** On reset, the CAN1/2 blocks are disabled (PCAN1/2 = 0).
- 2. Peripheral clock: In the PCLK_SEL0 register (<u>Table 49</u>), select PCLK_CAN1/2 and, for the acceptance filter, PCLK_ACF. PCLK_CAN1/2 and PCLK_ACF must be set to the same value.
 - **Remark:** If CAN baudrates above 100 kbit/s (see <u>Table 226</u>) are needed, do not select the IRC as the clock source (see <u>Table 35</u>).
- 3. Wake-up: Use the INTWAKE register (<u>Table 55</u>) to enable the CAN controllers to wake up the microcontroller from Power-down mode.
- 4. Pins: Select CAN1/2 pins and pin modes in registers PINSELn and PINMODEn (see Section 9.5).
- 5. Interrupts: CAN interrupts are enabled using the CAN1/2IER registers (<u>Table 225</u>). Interrupts are enabled in the VIC using the VICIntEnable register (<u>Table 76</u>).
- 6. CAN controller initialization: see CANMOD register (Table 221).

12.3 Introduction

Controller Area Network (CAN) is the definition of a high performance communication protocol for serial data communication. The CAN Controller is designed to provide a full implementation of the CAN-Protocol according to the CAN Specification Version 2.0B. Microcontrollers with this on-chip CAN controller are used to build powerful local networks by supporting distributed real-time control with a very high level of security. The applications are automotive, industrial environments, and high speed networks as well as low cost multiplex wiring. The result is a strongly reduced wiring harness and enhanced diagnostic and supervisory capabilities.

Chapter 12: LPC23XX CAN controllers CAN1/2

The CAN block is intended to support multiple CAN buses simultaneously, allowing the device to be used as a gateway, switch, or router among a number of CAN buses in various applications.

The CAN module consists of two elements: the controller and the Acceptance Filter. All registers and the RAM are accessed as 32 bit words.

12.4 Features

12.4.1 General CAN features

- Compatible with CAN specification 2.0B, ISO 11898-1.
- Multi-master architecture with non destructive bit-wise arbitration.
- Bus access priority determined by the message identifier (11-bit or 29-bit).
- Guaranteed latency time for high priority messages.
- Programmable transfer rate (up to 1 Mbit/s).
- Multicast and broadcast message facility.
- Data length from 0 up to 8 bytes.
- · Powerful error handling capability.
- Non-return-to-zero (NRZ) coding/decoding with bit stuffing.

12.4.2 CAN controller features

- 2 CAN controllers and buses.
- Supports 11-bit identifier as well as 29-bit identifier.
- Double Receive Buffer and Triple Transmit Buffer.
- Programmable Error Warning Limit and Error Counters with read/write access.
- Arbitration Lost Capture and Error Code Capture with detailed bit position.
- Single Shot Transmission (no re-transmission).
- Listen Only Mode (no acknowledge, no active error flags).
- Reception of "own" messages (Self Reception Request).

12.4.3 Acceptance filter features

- Fast hardware implemented search algorithm supporting a large number of CAN identifiers.
- Global Acceptance Filter recognizes 11 and 29 bit Rx Identifiers for all CAN buses.
- Allows definition of explicit and groups for 11-bit and 29-bit CAN identifiers.
- Acceptance Filter can provide FullCAN-style automatic reception for selected Standard Identifiers.

Chapter 12: LPC23XX CAN controllers CAN1/2

12.5 Pin description

Table 215. CAN Pin descriptions


Pin Name	Туре	Description
RD2/1	Inputs	Serial Inputs. From CAN transceivers.
TD2/1	Outputs	Serial Outputs. To CAN transceivers.

12.6 CAN controller architecture

The CAN Controller is a complete serial interface with both Transmit and Receive Buffers but without Acceptance Filter. CAN Identifier filtering is done for all CAN channels in a separate block (Acceptance Filter). Except for message buffering and acceptance filtering the functionality is similar to the PeliCAN concept.

The CAN Controller Block includes interfaces to the following blocks:

- APB Interface
- Acceptance Filter
- Vectored Interrupt Controller (VIC)
- CAN Transceiver
- Common Status Registers

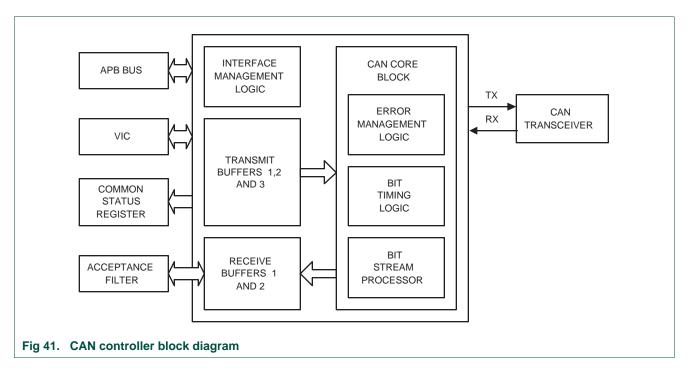

12.6.1 APB interface block (AIB)

The APB Interface Block provides access to all CAN Controller registers.


Chapter 12: LPC23XX CAN controllers CAN1/2

12.6.2 Interface management logic (IML)

The Interface Management Logic interprets commands from the CPU, controls internal addressing of the CAN Registers and provides interrupts and status information to the CPU.

12.6.3 Transmit Buffers (TXB)

The TXB represents a Triple Transmit Buffer, which is the interface between the Interface Management Logic (IML) and the Bit Stream Processor (BSP). Each Transmit Buffer is able to store a complete message which can be transmitted over the CAN network. This buffer is written by the CPU and read out by the BSP.

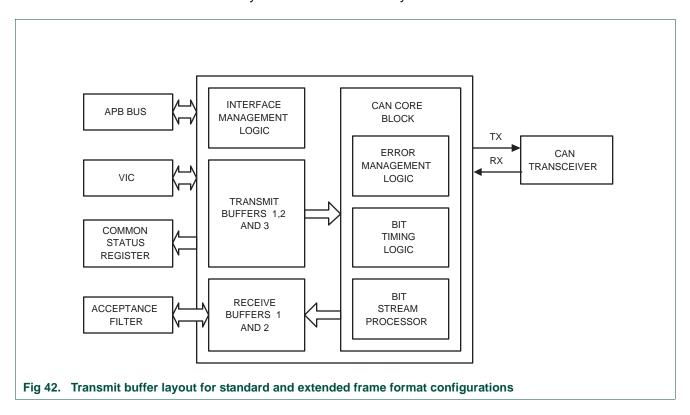

12.6.4 Receive Buffer (RXB)


The Receive Buffer (RXB) represents a CPU accessible Double Receive Buffer. It is located between the CAN Controller Core Block and APB Interface Block and stores all received messages from the CAN Bus line. With the help of this Double Receive Buffer concept the CPU is able to process one message while another message is being received.

The global layout of the Receive Buffer is very similar to the Transmit Buffer described earlier. Identifier, Frame Format, Remote Transmission Request bit and Data Length Code have the same meaning as described for the Transmit Buffer. In addition, the Receive Buffer includes an ID Index field (see Section 12.8.9.1 "ID index field").

The received Data Length Code represents the real transmitted Data Length Code, which may be greater than 8 depending on transmitting CAN node. Nevertheless, the maximum number of received data bytes is 8. This should be taken into account by reading a

Chapter 12: LPC23XX CAN controllers CAN1/2

message from the Receive Buffer. If there is not enough space for a new message within the Receive Buffer, the CAN Controller generates a Data Overrun condition when this message becomes valid and the acceptance test was positive. A message that is partly written into the Receive Buffer (when the Data Overrun situation occurs) is deleted. This situation is signalled to the CPU via the Status Register and the Data Overrun Interrupt, if enabled.

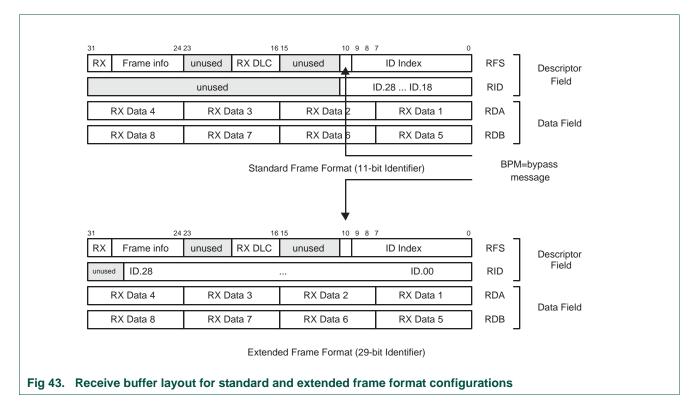

12.6.5 Error Management Logic (EML)

The EML is responsible for the error confinement. It gets error announcements from the BSP and then informs the BSP and IML about error statistics.

12.6.6 Bit Timing Logic (BTL)

The Bit Timing Logic monitors the serial CAN Bus line and handles the Bus line related bit timing. It synchronizes to the bit stream on the CAN Bus on a "recessive" to "dominant" Bus line transition at the beginning of a message (hard synchronization) and re-synchronizes on further transitions during the reception of a message (soft synchronization). The BTL also provides programmable time segments to compensate for the propagation delay times and phase shifts (e.g. due to oscillator drifts) and to define the sample point and the number of samples to be taken within a bit time.

12.6.7 Bit Stream Processor (BSP)

The Bit Stream Processor is a sequencer, controlling the data stream between the Transmit Buffer, Receive Buffers and the CAN Bus. It also performs the error detection, arbitration, stuffing and error handling on the CAN Bus.

Chapter 12: LPC23XX CAN controllers CAN1/2

12.6.8 CAN controller self-tests


The CAN controller of the LPC2000 family supports two different options for self-tests:

- Global Self-Test (setting the self reception request bit in normal Operating Mode)
- Local Self-Test (setting the self reception request bit in Self Test Mode)

Both self-tests are using the 'Self Reception' feature of the CAN Controller. With the Self Reception Request, the transmitted message is also received and stored in the receive buffer. Therefore the acceptance filter has to be configured accordingly. As soon as the CAN message is transmitted, a transmit and a receive interrupt are generated, if enabled.

Global self test

A Global Self-Test can for example be used to verify the chosen configuration of the CAN Controller in a given CAN system. As shown in <u>Figure 44</u>, at least one other CAN node, which is acknowledging each CAN message has to be connected to the CAN bus.

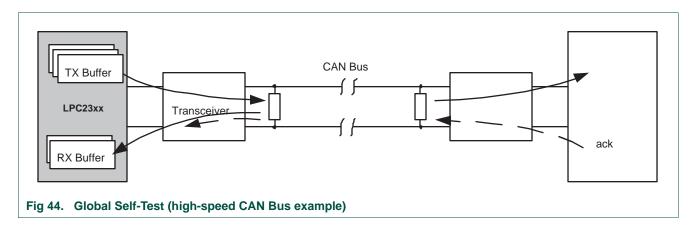


Initiating a Global Self-Test is similar to a normal CAN transmission. In this case the transmission of a CAN message(s) is initiated by setting Self Reception Request bit (SRR) in conjunction with the selected Message Buffer bits (STB3, STB2, STB1) in the CAN Controller Command register (CANCMR).

Local self test

The Local Self-Test perfectly fits for single node tests. In this case an acknowledge from other nodes is not needed. As shown in the Figure below, a CAN transceiver with an appropriate CAN bus termination has to be connected to the LPC. The CAN Controller has to be put into the 'Self Test Mode' by setting the STM bit in the CAN Controller Mode register (CANMOD). Hint: Setting the Self Test Mode bit (STM) is possible only when the CAN Controller is in Reset Mode.

Chapter 12: LPC23XX CAN controllers CAN1/2

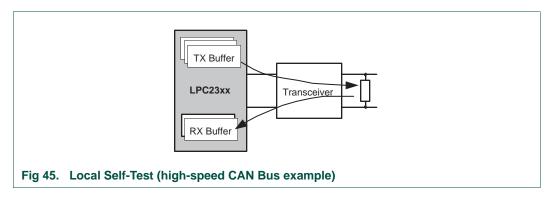

A message transmission is initiated by setting Self Reception Request bit (SRR) in conjunction with the selected Message Buffer(s) (STB3, STB2, STB1).

12.7 Memory map of the CAN block

The CAN Controllers and Acceptance Filter occupy a number of APB slots, as follows:

Table 216. Memory Map of the CAN Block

Address Range	Used for
0xE003 8000 - 0xE003 87FF	Acceptance Filter RAM.
0xE003 C000 - 0xE003 C017	Acceptance Filter Registers.
0xE004 0000 - 0xE004 000B	Central CAN Registers.
0xE004 4000 - 0xE004 405F	CAN Controller 1 Registers.
0xE004 8000 - 0xE004 805F	CAN Controller 2 Registers.

12.8 CAN controller registers

CAN block implements the registers shown in <u>Table 217</u> and <u>Table 218</u>. More detailed descriptions follow.

Table 217. CAN acceptance filter and central CAN registers

Name	Description	Access	Reset Value	Address
AFMR	Acceptance Filter Register	R/W	1	0xE003 C000
SFF_sa	Standard Frame Individual Start Address Register	R/W	0	0xE003 C004
SFF_GRP_sa	Standard Frame Group Start Address Register	R/W	0	0xE003 C008
EFF_sa	Extended Frame Start Address Register	R/W	0	0xE003 C00C
EFF_GRP_sa	Extended Frame Group Start Address Register	R/W	0	0xE003 C010
ENDofTable	End of AF Tables register	R/W	0	0xE003 C014
LUTerrAd	LUT Error Address register	RO	0	0xE003 C018
LUTerr	LUT Error Register	RO	0	0xE003 C01C
FCANIE	FullCAN interrupt enable register	R/W	0	0xE003 C020
FCANIC0	FullCAN interrupt and capture register 0	R/W	0	0xE003 C024
FCANIC1	FullCAN interrupt and capture register 1	R/W	0	0xE003 C028

Chapter 12: LPC23XX CAN controllers CAN1/2

Table 217. CAN acceptance filter and central CAN registers

Name	Description	Access	Reset Value	Address
CANTxSR	CAN Central Transmit Status Register	RO	0x0003 0300	0xE004 0000
CANRXSR	CAN Central Receive Status Register	RO	0	0xE004 0004
CANMSR	CAN Central Miscellaneous Register	RO	0	0xE004 0008

Table 218. CAN1 and CAN2 controller register map

Generic Name	Description	Access	CAN1 Register Address & Name	CAN2 Register Address & Name
MOD	Controls the operating mode of the CAN Controller.	R/W	CAN1MOD - 0xE004 4000	CAN2MOD - 0xE004 8000
CMR	Command bits that affect the state of the CAN Controller	WO	CAN1CMR - 0xE004 4004	CAN2CMR - 0xE004 8004
GSR	Global Controller Status and Error Counters	RO[1]	CAN1GSR - 0xE004 4008	CAN2GSR - 0xE004 8008
ICR	Interrupt status, Arbitration Lost Capture, Error Code Capture	RO	CAN1ICR - 0xE004 400C	CAN2ICR - 0xE004 800C
IER	Interrupt Enable	R/W	CAN1IER - 0xE004 4010	CAN2IER - 0xE004 8010
BTR	Bus Timing	R/W[2]	CAN1BTR - 0xE004 4014	CAN2BTR - 0xE004 8014
EWL	Error Warning Limit	R/W[2]	CAN1EWL - 0xE004 4018	CAN2EWL - 0xE004 8018
SR	Status Register	RO	CAN1SR - 0xE004 401C	CAN2SR - 0xE004 801C
RFS	Receive frame status	R/W[2]	CAN1RFS - 0xE004 4020	CAN2RFS - 0xE004 8020
RID	Received Identifier	R/W[2]	CAN1RID - 0xE004 4024	CAN2RID - 0xE004 8024
RDA	Received data bytes 1-4	R/W[2]	CAN1RDA - 0xE004 4028	CAN2RDA - 0xE004 8028
RDB	Received data bytes 5-8	R/W[2]	CAN1RDB - 0xE004 402C	CAN2RDB - 0xE004 802C
TFI1	Transmit frame info (Tx Buffer 1)	R/W	CAN1TFI1 - 0xE004 4030	CAN2TFI1 - 0xE004 8030
TID1	Transmit Identifier (Tx Buffer 1)	R/W	CAN1TID1 - 0xE004 4034	CAN2TID1 - 0xE004 8034
TDA1	Transmit data bytes 1-4 (Tx Buffer 1)	R/W	CAN1TDA1 - 0xE004 4038	CAN2TDA1 - 0xE004 8038
TDB1	Transmit data bytes 5-8 (Tx Buffer 1)	R/W	CAN1TDB1- 0xE004 403C CAN2TDB1- 0xE004 803C	CAN1TDB1 - 0xE004 403C CAN2TDB1 - 0xE004 803C
TFI2	Transmit frame info (Tx Buffer 2)	R/W	CAN1TFI2 - 0xE004 4040 CAN2TFI2 - 0xE004 8040	CAN1TFI2 - 0xE004 4040 CAN2TFI2 - 0xE004 8040
TID2	Transmit Identifier (Tx Buffer 2)	R/W	CAN1TID2 - 0xE004 4044 CAN2TID2 - 0xE004 8044	CAN1TID2 - 0xE004 4044 CAN2TID2 - 0xE004 8044
TDA2	Transmit data bytes 1-4 (Tx Buffer 2)	R/W	CAN1TDA2 - 0xE004 4048 CAN2TDA2 - 0xE004 8048	CAN1TDA2 - 0xE004 4048 CAN2TDA2 - 0xE004 8048
TDB2	Transmit data bytes 5-8 (Tx Buffer 2)	R/W	CAN1TDB2 - 0xE004 404C CAN2TDB2 - 0xE004 804C	CAN1TDB2 - 0xE004 404C CAN2TDB2 - 0xE004 804C
TFI3	Transmit frame info (Tx Buffer 3)	R/W	CAN1TFI3 - 0xE004 4050 CAN2TFI3 - 0xE004 8050	CAN1TFI3 - 0xE004 4050 CAN2TFI3 - 0xE004 8050
TID3	Transmit Identifier (Tx Buffer 3)	R/W	CAN1TID3 - 0xE004 4054 CAN2TID3 - 0xE004 8054	CAN1TID3 - 0xE004 4054 CAN2TID3 - 0xE004 8054
TDA3	Transmit data bytes 1-4 (Tx Buffer 3)	R/W	CAN1TDA3 - 0xE004 4058 CAN2TDA3 - 0xE004 8058	CAN1TDA3 - 0xE004 4058 CAN2TDA3 - 0xE004 8058
TDB3	Transmit data bytes 5-8 (Tx Buffer 3)	R/W	CAN1TDB3 - 0xE004 405C CAN2TDB3 - 0xE004 805C	CAN1TDB3 - 0xE004 405C CAN2TDB3 - 0xE004 805C

^[1] The error counters can only be written when RM in CANMOD is 1.

UM10211

Chapter 12: LPC23XX CAN controllers CAN1/2

[2] These registers can only be written when RM in CANMOD is 1.

The internal registers of each CAN Controller appear to the CPU as on-chip memory mapped peripheral registers. Because the CAN Controller can operate in different modes (Operating/Reset, see also Section 12.8.1 "Mode Register (CAN1MOD - 0xE004 4000, CAN2MOD - 0xE004 8000)"), one has to distinguish between different internal address definitions. Note that write access to some registers is only allowed in Reset Mode.

Table 219. CAN1 and CAN2 controller register map

		<u> </u>		
Generic	Operating Mode		Reset Mode	
Name	Read	Write	Read	Write
MOD	Mode	Mode	Mode	Mode
CMR	0x00	Command	0x00	Command
GSR	Global Status and Error Counters	-	Global Status and Error Counters	Error Counters only
ICR	Interrupt and Capture	-	Interrupt and Capture	-
IER	Interrupt Enable	Interrupt Enable	Interrupt Enable	Interrupt Enable
BTR	Bus Timing	-	Bus Timing	Bus Timing
EWL	Error Warning Limit	-	Error Warning Limit	Error Warning Limit
SR	Status	-	Status	-
RFS	Rx Info and Index	-	Rx Info and Index	Rx Info and Index
RID	Rx Identifier	-	Rx Identifier	Rx Identifier
RDA	Rx Data	-	Rx Data	Rx Data
RDB	Rx Info and Index	-	Rx Info and Index	Rx Info and Index
TFI1	Tx Info1	Tx Info	Tx Info	Tx Info
TID1	Tx Identifier	Tx Identifier	Tx Identifier	Tx Identifier
TDA1	Tx Data	Tx Data	Tx Data	Tx Data
TDB1	Tx Data	Tx Data	Tx Data	Tx Data

Table 220. CAN Wake and Sleep registers

Name	Description	Access	Reset Value	Address
CANSLEEPCLR	Allows clearing the current CAN channel sleep state as well as reading that state.	R/W	0	0x400F C110
CANWAKEFLAGS	Allows reading the wake-up state of the CAN channels.	R/W	0	0x400F C114

In the following register tables, the column "Reset Value" shows how a hardware reset affects each bit or field, while the column "RM Set" indicates how each bit or field is affected if software sets the RM bit, or RM is set because of a Bus-Off condition. Note that while hardware reset sets RM, in this case the setting noted in the "Reset Value" column prevails over that shown in the "RM Set" column, in the few bits where they differ. In both columns, X indicates the bit or field is unchanged.

12.8.1 Mode Register (CAN1MOD - 0xE004 4000, CAN2MOD - 0xE004 8000)

The contents of the Mode Register are used to change the behavior of the CAN Controller. Bits may be set or reset by the CPU that uses the Mode Register as a read/write memory. Reserved Bits are read as 0 and should be written as 0.

Chapter 12: LPC23XX CAN controllers CAN1/2

Table 221. Mode register (CAN1MOD - address 0xE004 4000, CAN2MOD - address 0xE004 8000) bit description

Bit	Symbol	Value	Function	Reset Value	
0	RM[1][6]		Reset Mode.	1	1
		0(normal)	The CAN Controller is in the Operating Mode, and certain registers can not be written.		
		1(reset)	CAN operation is disabled, writable registers can be written and the current transmission/reception of a message is aborted.		
1	LOM[3][2]		Listen Only Mode.	0	Х
	[6]	0(normal)	The CAN controller acknowledges a successfully received message on the CAN bus. The error counters are stopped at the current value.		
		1(listen only)	The controller gives no acknowledgment, even if a message is successfully received. Messages cannot be sent, and the controller operates in "error passive" mode. This mode is intended for software bit rate detection and "hot plugging".		
2	STM[3][6]		Self Test Mode.	0	Х
		0(normal)	A transmitted message must be acknowledged to be considered successful.	ous	
		1(self test)	The controller will consider a Tx message successful even if there is no acknowledgment received.		
			In this mode a full node test is possible without any other active node on the bus using the SRR bit in CANxCMR.		
3	TPM[4]		Transmit Priority Mode.	0	Х
		0(CAN ID)	The transmit priority for 3 Transmit Buffers depends on the CAN Identifier.		
		1(local prio)	The transmit priority for 3 Transmit Buffers depends on the contents of the Tx Priority register within the Transmit Buffer.		
4	SM[5]		Sleep Mode.	0	0
		0(wake-up)	Normal operation.		
		1(sleep)	The CAN controller enters Sleep Mode if no CAN interrupt is pending and there is no bus activity. See the Sleep Mode description Section 12.9.2 on page 287.		
5	RPM		Receive Polarity Mode.	0	Х
		0(low active)	RD input is active Low (dominant bit = 0).		
		1(high active)	RD input is active High (dominant bit = 1) reverse polarity.		
6	-	-	Reserved, user software should not write ones to reserved bits.	0	0
7	TM		Test Mode.	0	Х
		0(disabled)	Normal operation.		
		1(enabled)	The TD pin will reflect the bit, detected on RD pin, with the next positive edge of the system clock.		

^[1] During a Hardware reset or when the Bus Status bit is set '1' (Bus-Off), the Reset Mode bit is set '1' (present). After the Reset Mode bit is set '0' the CAN Controller will wait for:

- [3] A write access to the bits MOD.1 and MOD.2 is possible only if the Reset Mode is entered previously.
- [4] Transmit Priority Mode is explained in more detail in Section 12.6.3 "Transmit Buffers (TXB)".

⁻ one occurrence of Bus-Free signal (11 recessive bits), if the preceding reset has been caused by a Hardware reset or a CPU-initiated reset.

^{- 128} occurrences of Bus-Free, if the preceding reset has been caused by a CAN Controller initiated Bus-Off, before re-entering the Bus-On mode.

^[2] This mode of operation forces the CAN Controller to be error passive. Message Transmission is not possible. The Listen Only Mode can be used e.g. for software driven bit rate detection and "hot plugging".

Chapter 12: LPC23XX CAN controllers CAN1/2

- [5] The CAN Controller will enter Sleep Mode, if the Sleep Mode bit is set '1' (sleep), there is no bus activity, and none of the CAN interrupts is pending. Setting of SM with at least one of the previously mentioned exceptions valid will result in a wake-up interrupt. The CAN Controller will wake up if SM is set LOW (wake-up) or there is bus activity. On wake-up, a Wake-up Interrupt is generated. A sleeping CAN Controller which wakes up due to bus activity will not be able to receive this message until it detects 11 consecutive recessive bits (Bus-Free sequence). Note that setting of SM is not possible in Reset Mode. After clearing of Reset Mode, setting of SM is possible only when Bus-Free is detected again.
- [6] The LOM and STM bits can only be written if the RM bit is 1 prior to the write operation.

12.8.2 Command Register (CAN1CMR - 0xE004 x004, CAN2CMR - 0xE004 8004)

Writing to this write-only register initiates an action within the transfer layer of the CAN Controller. Bits not listed should be written as 0. Reading this register yields zeroes.

At least one internal clock cycle is needed for processing between two commands.

Table 222. Command Register (CAN1CMR - address 0xE004 4004, CAN2CMR - address 0xE004 8004) bit description

Bit	Symbol	Value	Function	Reset Value	
0[1][2]	TR		Transmission Request.	0	0
		0 (absent)	No transmission request.		
		1 (present)	The message, previously written to the CANxTFI, CANxTID, and optionally the CANxTDA and CANxTDB registers, is queued for transmission from the selected Transmit Buffer. If at two or all three of STB1, STB2 and STB3 bits are selected when TR=1 is written, Transmit Buffer will be selected based on the chosen priority scheme (for details see <a "transmit="" (txb)")"="" buffers="" href="Section 12.6.3">Section 12.6.3 "Transmit Buffers (TXB)")		
1[1][3]	AT		Abort Transmission.	0	0
		0 (no action)	Do not abort the transmission.		
		1 (present)	if not already in progress, a pending Transmission Request for the selected Transmit Buffer is cancelled.		
2[4]	RRB		Release Receive Buffer.	0	0
		0 (no action)	Do not release the receive buffer.		
		1 (released)	The information in the Receive Buffer (consisting of CANxRFS, CANxRID, and if applicable the CANxRDA and CANxRDB registers) is released, and becomes eligible for replacement by the next received frame. If the next received frame is not available, writing this command clears the RBS bit in the Status Register(s).		
3[5]	CDO		Clear Data Overrun.	0	0
		0 (no action)	Do not clear the data overrun bit.		
		1 (clear)	The Data Overrun bit in Status Register(s) is cleared.		
4[1][6]	SRR		Self Reception Request.	0	0
		0 (absent)	No self reception request.		
		1 (present)	The message, previously written to the CANxTFS, CANxTID, and optionally the CANxTDA and CANxTDB registers, is queued for transmission from the selected Transmit Buffer and received simultaneously. This differs from the TR bit above in that the receiver is not disabled during the transmission, so that it receives the message if its Identifier is recognized by the Acceptance Filter.		

Chapter 12: LPC23XX CAN controllers CAN1/2

Table 222. Command Register (CAN1CMR - address 0xE004 4004, CAN2CMR - address 0xE004 8004) bit description

Bit	Symbol	Value	Function	Reset Value												
5	STB1		Select Tx Buffer 1.	0	0											
		0 (not selected)	Tx Buffer 1 is not selected for transmission.													
		1 (selected)	Tx Buffer 1 is selected for transmission.													
6	STB2		Select Tx Buffer 2.	0	0											
				0 (not selected)	Tx Buffer 2 is not selected for transmission.											
																1 (selected)
7	STB3		Select Tx Buffer 3.	0	0											
		0 (not selected)	Tx Buffer 3 is not selected for transmission.													
		1 (selected)	Tx Buffer 3 is selected for transmission.													

- [1] Setting the command bits TR and AT simultaneously results in transmitting a message once. No re-transmission will be performed in case of an error or arbitration lost (single shot transmission).
 - Setting the command bits SRR and TR simultaneously results in sending the transmit message once using the self-reception feature. No re-transmission will be performed in case of an error or arbitration lost.
 - Setting the command bits TR, AT and SRR simultaneously results in transmitting a message once as described for TR and AT. The moment the Transmit Status bit is set within the Status Register, the internal Transmission Request Bit is cleared automatically.
 - Setting TR and SRR simultaneously will ignore the set SRR bit.
- [2] If the Transmission Request or the Self-Reception Request bit was set '1' in a previous command, it cannot be cancelled by resetting the bits. The requested transmission may only be cancelled by setting the Abort Transmission bit.
- [3] The Abort Transmission bit is used when the CPU requires the suspension of the previously requested transmission, e.g. to transmit a more urgent message before. A transmission already in progress is not stopped. In order to see if the original message has been either transmitted successfully or aborted, the Transmission Complete Status bit should be checked. This should be done after the Transmit Buffer Status bit has been set to '1' or a Transmit Interrupt has been generated.
- [4] After reading the contents of the Receive Buffer, the CPU can release this memory space by setting the Release Receive Buffer bit '1'.

 This may result in another message becoming immediately available. If there is no other message available, the Receive Interrupt bit is reset. If the RRB command is given, it will take at least 2 internal clock cycles before a new interrupt is generated.
- [5] This command bit is used to clear the Data Overrun condition signalled by the Data Overrun Status bit. As long as the Data Overrun Status bit is set no further Data Overrun Interrupt is generated.
- [6] Upon Self Reception Request, a message is transmitted and simultaneously received if the Acceptance Filter is set to the corresponding identifier. A receive and a transmit interrupt will indicate correct self reception (see also Self Test Mode in Section 12.8.1 "Mode Register (CAN1MOD 0xE004 4000, CAN2MOD 0xE004 8000)").

12.8.3 Global Status Register (CAN1GSR - 0xE004 x008, CAN2GSR - 0xE004 8008)

The content of the Global Status Register reflects the status of the CAN Controller. This register is read-only, except that the Error Counters can be written when the RM bit in the CANMOD register is 1. Bits not listed read as 0 and should be written as 0.

Table 223. Global Status Register (CAN1GSR - address 0xE004 4008, CAN2GSR - address 0xE004 8008) bit description

Bit	Symbol	Value	Function	Reset Value	
0	RBS[1]		Receive Buffer Status.	0	0
		0 (empty)	No message is available.		
		1 (full)	At least one complete message is received by the Double Receive Buffer and available in the CANxRFS, CANxRID, and if applicable the CANxRDA and CANxRDB registers. This bit is cleared by the Release Receive Buffer command in CANxCMR, if no subsequent received message is available.		

UM10211

Chapter 12: LPC23XX CAN controllers CAN1/2

Table 223. Global Status Register (CAN1GSR - address 0xE004 4008, CAN2GSR - address 0xE004 8008) bit description

Bit	Symbol	Value	Function	Reset Value	
1	DOS[2]		Data Overrun Status.	0	0
		0 (absent)	No data overrun has occurred since the last Clear Data Overrun command was given/written to CANxCMR (or since Reset).		
		1 (overrun)	A message was lost because the preceding message to this CAN controller was not read and released quickly enough (there was not enough space for a new message in the Double Receive Buffer).		
2	TBS		Transmit Buffer Status.	1	1
		0 (locked)	At least one of the Transmit Buffers is not available for the CPU, i.e. at least one previously queued message for this CAN controller has not yet been sent, and therefore software should not write to the CANxTFI, CANxTID, CANxTDA, nor CANxTDB registers of that (those) Tx buffer(s).		
		1 (released)	All three Transmit Buffers are available for the CPU. No transmit message is pending for this CAN controller (in any of the 3 Tx buffers), and software may write to any of the CANxTFI, CANxTID, CANxTDA, and CANxTDB registers.		
3	TCS[3]		Transmit Complete Status.	1	Х
		0 (incomplete)	At least one requested transmission has not been successfully completed yet.		
		1 (complete)	All requested transmission(s) has (have) been successfully completed.		
4	RS[4]		Receive Status.	1	0
		0 (idle)	The CAN controller is idle.		
		1 (receive)	The CAN controller is receiving a message.		
5	TS[4]		Transmit Status.	1	0
		0 (idle)	The CAN controller is idle.		
		1 (transmit)	The CAN controller is sending a message.		
6	ES[5]		Error Status.	0	0
		0 (ok)	Both error counters are below the Error Warning Limit.		
		1 (error)	One or both of the Transmit and Receive Error Counters has reached the limit set in the Error Warning Limit register.		
7	BS[6]		Bus Status.	0	0
		0 (Bus-On)	The CAN Controller is involved in bus activities		
		1 (Bus-Off)	The CAN controller is currently not involved/prohibited from bus activity because the Transmit Error Counter reached its limiting value of 255.		
15:8	-	-	Reserved, user software should not write ones to reserved bits. The value read from a reserved bit is not defined.	NA	
23:16	RXERR	-	The current value of the Rx Error Counter (an 8 - bit value).	0	Χ
31:24	TXERR	-	The current value of the Tx Error Counter (an 8 - bit value).	0	Χ

^[1] After reading all messages and releasing their memory space with the command 'Release Receive Buffer,' this bit is cleared.

^[2] If there is not enough space to store the message within the Receive Buffer, that message is dropped and the Data Overrun condition is signalled to the CPU in the moment this message becomes valid. If this message is not completed successfully (e.g. because of an error), no overrun condition is signalled.

^[3] The Transmission Complete Status bit is set '0' (incomplete) whenever the Transmission Request bit or the Self Reception Request bit is set '1' at least for one of the three Transmit Buffers. The Transmission Complete Status bit will remain '0' until all messages are transmitted successfully.

Chapter 12: LPC23XX CAN controllers CAN1/2

- [4] If both the Receive Status and the Transmit Status bits are '0' (idle), the CAN-Bus is idle. If both bits are set, the controller is waiting to become idle again. After hardware reset 11 consecutive recessive bits have to be detected until idle status is reached. After Bus-off this will take 128 times of 11 consecutive recessive bits.
- [5] Errors detected during reception or transmission will effect the error counters according to the CAN specification. The Error Status bit is set when at least one of the error counters has reached or exceeded the Error Warning Limit. An Error Warning Interrupt is generated, if enabled. The default value of the Error Warning Limit after hardware reset is 96 decimal, see also Section 12.8.7 "Error Warning Limit Register (CAN1EWL 0xE004 4018, CAN2EWL 0xE004 8018)".
- [6] Mode bit '1' (present) and an Error Warning Interrupt is generated, if enabled. Afterwards the Transmit Error Counter is set to '127', and the Receive Error Counter is cleared. It will stay in this mode until the CPU clears the Reset Mode bit. Once this is completed the CAN Controller will wait the minimum protocol-defined time (128 occurrences of the Bus-Free signal) counting down the Transmit Error Counter. After that, the Bus Status bit is cleared (Bus-On), the Error Status bit is set '0' (ok), the Error Counters are reset, and an Error Warning Interrupt is generated, if enabled. Reading the TX Error Counter during this time gives information about the status of the Bus-Off recovery.

RX error counter

The RX Error Counter Register, which is part of the Status Register, reflects the current value of the Receive Error Counter. After hardware reset this register is initialized to 0. In Operating Mode this register appears to the CPU as a read only memory. A write access to this register is possible only in Reset Mode. If a Bus Off event occurs, the RX Error Counter is initialized to 0. As long as Bus Off is valid, writing to this register has no effect. The Rx Error Counter is determined as follows:

RX Error Counter = (CANxGSR AND 0x00FF0000) / 0x00010000

Note that a CPU-forced content change of the RX Error Counter is possible only if the Reset Mode was entered previously. An Error Status change (Status Register), an Error Warning or an Error Passive Interrupt forced by the new register content will not occur until the Reset Mode is cancelled again.

TX error counter

The TX Error Counter Register, which is part of the Status Register, reflects the current value of the Transmit Error Counter. In Operating Mode this register appears to the CPU as a read only memory. After hardware reset this register is initialized to '0'. A write access to this register is possible only in Reset Mode. If a bus-off event occurs, the TX Error Counter is initialized to 127 to count the minimum protocol-defined time (128 occurrences of the Bus-Free signal). Reading the TX Error Counter during this time gives information about the status of the Bus-Off recovery. If Bus Off is active, a write access to TXERR in the range of 0 to 254 clears the Bus Off Flag and the controller will wait for one occurrence of 11 consecutive recessive bits (bus free) after clearing of Reset Mode. The Tx error counter is determined as follows:

TX Error Counter = (CANxGSR AND 0xFF000000) / 0x01000000

Writing 255 to TXERR allows initiation of a CPU-driven Bus Off event. Note that a CPU-forced content change of the TX Error Counter is possible only if the Reset Mode was entered previously. An Error or Bus Status change (Status Register), an Error Warning, or an Error Passive Interrupt forced by the new register content will not occur until the Reset Mode is cancelled again. After leaving the Reset Mode, the new TX Counter content is interpreted and the Bus Off event is performed in the same way as if it was forced by a bus error event. That means, that the Reset Mode is entered again, the TX Error Counter is initialized to 127, the RX Counter is cleared, and all concerned Status and Interrupt Register Bits are set. Clearing of Reset Mode now will perform the protocol

Chapter 12: LPC23XX CAN controllers CAN1/2

defined Bus Off recovery sequence (waiting for 128 occurrences of the Bus-Free signal). If the Reset Mode is entered again before the end of Bus Off recovery (TXERR>0), Bus Off keeps active and TXERR is frozen.

12.8.4 Interrupt and Capture Register (CAN1ICR - 0xE004 400C, CAN2ICR - 0xE004 800C)

Bits in this register indicate information about events on the CAN bus. This register is read-only. Bits not listed read as 0 and should be written as 0.

The Interrupt flags of the Interrupt and Capture Register allow the identification of an interrupt source. When one or more bits are set, a CAN interrupt will be indicated to the CPU. After this register is read from the CPU all interrupt bits are reset **except** of the Receive Interrupt bit. The Interrupt Register appears to the CPU as a read only memory.

Bits 1 thru 10 clear when they are read.

Bits 16-23 are captured when a bus error occurs. At the same time, if the BEIE bit in CANIER is 1, the BEI bit in this register is set, and a CAN interrupt can occur.

Bits 24-31 are captured when CAN arbitration is lost. At the same time, if the ALIE bit in CANIER is 1, the ALI bit in this register is set, and a CAN interrupt can occur. Once either of these bytes is captured, its value will remain the same until it is read, at which time it is released to capture a new value.

The clearing of bits 1 to 10 and the releasing of bits 16-23 and 24-31 all occur on any read from CANxICR, regardless of whether part or all of the register is read. This means that software should always read CANxICR as a word, and process and deal with all bits of the register as appropriate for the application.

Table 224. Interrupt and Capture Register (CAN1ICR - address 0xE004 400C, CAN2ICR - address 0xE004 800C) bit description

Bit	Symbol	Value	Function	Reset Value	
0	RI[1]	0 (reset) 1 (set)	Receive Interrupt. This bit is set whenever the RBS bit in CANxSR and the RIE bit in CANxIER are both 1, indicating that a new message was received and stored in the Receive Buffer.	0	0
1	TI1	0 (reset) 1 (set)	Transmit Interrupt 1. This bit is set when the TBS1 bit in CANxSR goes from 0 to 1 (whenever a message out of TXB1 was successfully transmitted or aborted), indicating that Transmit buffer 1 is available, and the TIE1 bit in CANxIER is 1.	0	0
2	EI	0 (reset) 1 (set)	Error Warning Interrupt. This bit is set on every change (set or clear) of either the Error Status or Bus Status bit in CANxSR and the EIE bit bit is set within the Interrupt Enable Register at the time of the change.	0	X
3	DOI	0 (reset) 1 (set)	Data Overrun Interrupt. This bit is set when the DOS bit in CANxSR goes from 0 to 1 and the DOIE bit in CANxIER is 1.	0	0
4	WUI[2]	0 (reset) 1 (set)	Wake-Up Interrupt. This bit is set if the CAN controller is sleeping and bus activity is detected and the WUIE bit in CANxIER is 1.	0	0

Chapter 12: LPC23XX CAN controllers CAN1/2

Table 224. Interrupt and Capture Register (CAN1ICR - address 0xE004 400C, CAN2ICR - address 0xE004 800C) bit description

Bit	Symbol	Value	Function		RM Set
5	EPI 0 (reset) Error Passive Interrupt. This bit is set if the EPIE bit in 1 (set) CANxIER is 1, and the CAN controller switches between Error Passive and Error Active mode in either direction.		0	0	
			This is the case when the CAN Controller has reached the Error Passive Status (at least one error counter exceeds the CAN protocol defined level of 127) or if the CAN Controller is in Error Passive Status and enters the Error Active Status again.		
6	ALI	0 (reset) 1 (set)	Arbitration Lost Interrupt. This bit is set if the ALIE bit in CANxIER is 1, and the CAN controller loses arbitration while attempting to transmit. In this case the CAN node becomes a receiver.	0	0
7	BEI	0 (reset) 1 (set)	Bus Error Interrupt this bit is set if the BEIE bit in CANxIER is 1, and the CAN controller detects an error on the bus.	0	X
8	IDI	0 (reset) 1 (set)	ID Ready Interrupt this bit is set if the IDIE bit in CANxIER is 1, and a CAN Identifier has been received (a message was successfully transmitted or aborted). This bit is set whenever a message was successfully transmitted or aborted and the IDIE bit is set in the IER reg.	0	0
9	TI2	0 (reset) 1 (set)	Transmit Interrupt 2. This bit is set when the TBS2 bit in CANxSR goes from 0 to 1 (whenever a message out of TXB2 was successfully transmitted or aborted), indicating that Transmit buffer 2 is available, and the TIE2 bit in CANxIER is 1.	0	0
10	TI3	0 (reset) 1 (set)	Transmit Interrupt 3. This bit is set when the TBS3 bit in CANxSR goes from 0 to 1 (whenever a message out of TXB3 was successfully transmitted or aborted), indicating that Transmit buffer 3 is available, and the TIE3 bit in CANxIER is 1.		0
15:11	-	-	Reserved, user software should not write ones to reserved bits.	0	0

Chapter 12: LPC23XX CAN controllers CAN1/2

Table 224. Interrupt and Capture Register (CAN1ICR - address 0xE004 400C, CAN2ICR - address 0xE004 800C) bit description

Bit	Symbol	Value	Function	Reset	_
20:16	ERRBIT		Error Code Capture: when the CAN controller detects	Value 0	Set
20.10	4:0 ³		a bus error, the location of the error within the frame is captured in this field. The value reflects an internal	U	^
			state variable, and as a result is not very linear:		
		00011	Start of Frame		
		00010	ID28 ID21		
		00110	ID20 ID18		
		00100	SRTR Bit		
		00101	IDE bit		
		00111	ID17 13		
		01111	ID12 ID5		
		01110	ID4 ID0		
		01100	RTR Bit		
		01101	Reserved Bit 1		
		01001	Reserved Bit 0		
		01011	Data Length Code		
		01010	Data Field		
		01000	CRC Sequence		
		11000	CRC Delimiter		
		11001	Acknowledge Slot		
		11011	Acknowledge Delimiter		
		11010	End of Frame		
		10010	Intermission		
		10001	Active Error Flag		
		10110	Passive Error Flag		
		10011	Tolerate Dominant Bits		
		10111	Error Delimiter		
		11100	Overload flag		
21	ERRDIR		When the CAN controller detects a bus error, the direction of the current bit is captured in this bit.	0	Χ
		0	Error occurred during transmitting.		
		1	Error occurred during receiving.		
23:22	ERRC1:0		When the CAN controller detects a bus error, the type of error is captured in this field:	0	X
		00	Bit error		
		01	Form error		
		10	Stuff error		

Chapter 12: LPC23XX CAN controllers CAN1/2

Table 224. Interrupt and Capture Register (CAN1ICR - address 0xE004 400C, CAN2ICR - address 0xE004 800C) bit description

Bit	Symbol	Value	Function	Reset Value	RM Set	
31:24	ALCBIT[4]	-	Each time arbitration is lost while trying to send on the CAN, the bit number within the frame is captured into this field. After the content of ALCBIT is read, the ALI bit is cleared and a new Arbitration Lost interrupt can occur.	0	X	
		00	arbitration lost in the first bit (MS) of identifier			
			a			
		11	arbitration lost in SRTS bit (RTR bit for standard frame messages)			
		12	arbitration lost in IDE bit			
		13	arbitration lost in 12th bit of identifier (extended frame only)			
		30	arbitration lost in last bit of identifier (extended frame only)			
				31	arbitration lost in RTR bit (extended frame only)	

- [1] The Receive Interrupt Bit is not cleared upon a read access to the Interrupt Register. Giving the Command "Release Receive Buffer" will clear RI temporarily. If there is another message available within the Receive Buffer after the release command, RI is set again. Otherwise RI remains cleared.
- [2] A Wake-Up Interrupt is also generated if the CPU tries to set the Sleep bit while the CAN controller is involved in bus activities or a CAN Interrupt is pending. The WUI flag can also get asserted when the according enable bit WUIE is not set. In this case a Wake-Up Interrupt does not get asserted.
- [3] Whenever a bus error occurs, the corresponding bus error interrupt is forced, if enabled. At the same time, the current position of the Bit Stream Processor is captured into the Error Code Capture Register. The content within this register is fixed until the user software has read out its content once. From now on, the capture mechanism is activated again, i.e. reading the CANxICR enables another Bus Error Interrupt.
- [4] On arbitration lost, the corresponding arbitration lost interrupt is forced, if enabled. At that time, the current bit position of the Bit Stream Processor is captured into the Arbitration Lost Capture Register. The content within this register is fixed until the user application has read out its contents once. From now on, the capture mechanism is activated again.

12.8.5 Interrupt Enable Register (CAN1IER - 0xE004 4010, CAN2IER - 0xE004 8010)

This read/write register controls whether various events on the CAN controller will result in an interrupt or not. Bits 10:0 in this register correspond 1-to-1 with bits 10:0 in the CANxICR register. If a bit in the CANxIER register is 0 the corresponding interrupt is disabled; if a bit in the CANxIER register is 1 the corresponding source is enabled to trigger an interrupt.

Chapter 12: LPC23XX CAN controllers CAN1/2

Table 225. Interrupt Enable Register (CAN1IER - address 0xE004 4010, CAN2IER - address 0xE004 8010) bit description

Bit	Symbol	Function		RM Set
0	RIE	Receiver Interrupt Enable. When the Receive Buffer Status is 'full', the CAN Controller requests the respective interrupt.	0	Х
1	TIE1	Transmit Interrupt Enable for Buffer1. When a message has been successfully transmitted out of TXB1 or Transmit Buffer 1 is accessible again (e.g. after an Abort Transmission command), the CAN Controller requests the respective interrupt.		X
2	EIE	Error Warning Interrupt Enable. If the Error or Bus Status change (see Status Register), the CAN Controller requests the respective interrupt.	0	X
3	DOIE	Data Overrun Interrupt Enable. If the Data Overrun Status bit is set (see Status Register), the CAN Controller requests the respective interrupt.		X
4	WUIE	Wake-Up Interrupt Enable. If the sleeping CAN controller wakes up, the respective interrupt is requested.		X
5	EPIE	Error Passive Interrupt Enable. If the error status of the CAN Controller changes from error active to error passive or vice versa, the respective interrupt is requested.		X
6	ALIE	Arbitration Lost Interrupt Enable. If the CAN Controller has lost arbitration, the respective interrupt is requested.	0	X
7	BEIE	Bus Error Interrupt Enable. If a bus error has been detected, the CAN Controller requests the respective interrupt.	0	Χ
8	IDIE	ID Ready Interrupt Enable. When a CAN identifier has been received, the CAN Controller requests the respective interrupt.	0	Χ
9	TIE2	Transmit Interrupt Enable for Buffer2. When a message has been successfully transmitted out of TXB2 or Transmit Buffer 2 is accessible again (e.g. after an Abort Transmission command), the CAN Controller requests the respective interrupt.	0	X
10	TIE3	Transmit Interrupt Enable for Buffer3. When a message has been successfully transmitted out of TXB3 or Transmit Buffer 3 is accessible again (e.g. after an Abort Transmission command), the CAN Controller requests the respective interrupt.	0	X
31:11	-	Reserved, user software should not write ones to reserved bits. The value read from a reserved bit is not defined.	NA	

12.8.6 Bus Timing Register (CAN1BTR - 0xE004 4014, CAN2BTR - 0xE004 8014)

This register controls how various CAN timings are derived from the APB clock. It defines the values of the Baud Rate Prescaler (BRP) and the Synchronization Jump Width (SJW). Furthermore, it defines the length of the bit period, the location of the sample point and the number of samples to be taken at each sample point. It can be read at any time but can only be written if the RM bit in CANmod is 1.

Chapter 12: LPC23XX CAN controllers CAN1/2

Table 226. Bus Timing Register (CAN1BTR - address 0xE004 4014, CAN2BTR - address 0xE004 8014) bit description

Bit	Symbol	Value	Function	Reset Value	
9:0	BRP	RP Baud Rate Prescaler. The APB clock is divided by (this value plus one) to produce the CAN clock.		0	X
13:10	-		Reserved, user software should not write ones to reserved bits. The value read from a reserved bit is not defined.	NA	
15:14	SJW		The Synchronization Jump Width is (this value plus one) CAN clocks.	s one) 0	
19:16	TESG1		The delay from the nominal Sync point to the sample point is (this value plus one) CAN clocks.		Χ
22:20	TESG2		The delay from the sample point to the next nominal sync point is (this value plus one) CAN clocks. The nominal CAN bit time is (this value plus the value in TSEG1 plus 3) CAN clocks.	001	X
23	SAM		Sampling		
		0	The bus is sampled once (recommended for high speed buses)	0	X
		1	The bus is sampled 3 times (recommended for low to medium speed buses to filter spikes on the bus-line)		
31:24	-		Reserved, user software should not write ones to reserved bits. The value read from a reserved bit is not defined.	NA	

Baud rate prescaler

The period of the CAN system clock t_{SCL} is programmable and determines the individual bit timing. The CAN system clock t_{SCL} is calculated using the following equation:

(1)

$$t_{SCL} = t_{CANsuppliedCLK} \times (BRP + 1)$$

Synchronization jump width

To compensate for phase shifts between clock oscillators of different bus controllers, any bus controller must re-synchronize on any relevant signal edge of the current transmission. The synchronization jump width t_{SJW} defines the maximum number of clock cycles a certain bit period may be shortened or lengthened by one re-synchronization:

(2)

$$t_{SJW} = t_{SCL} \times (SJW + 1)$$

Time segment 1 and time segment 2

Time segments TSEG1 and TSEG2 determine the number of clock cycles per bit period and the location of the sample point:

(3)

$$t_{SYNCSEG} = t_{SCL}$$

Chapter 12: LPC23XX CAN controllers CAN1/2

$$t_{TSEG1} = t_{SCL} \times (TSEG1 + 1)$$

(5)

$$t_{TSEG2} = t_{SCL} \times (TSEG2 + 1)$$

12.8.7 Error Warning Limit Register (CAN1EWL - 0xE004 4018, CAN2EWL - 0xE004 8018)

This register sets a limit on Tx or Rx errors at which an interrupt can occur. It can be read at any time but can only be written if the RM bit in CANmod is 1. The default value (after hardware reset) is 96.

Table 227. Error Warning Limit register (CAN1EWL - address 0xE004 4018, CAN2EWL - address 0xE004 8018) bit description

Bit	Symbol	Function	Reset Value	RM Set
7:0	EWL	During CAN operation, this value is compared to both the Tx and Rx Error Counters. If either of these counter matches this value, the Error Status (ES) bit in CANSR is set.		X

Note that a content change of the Error Warning Limit Register is possible only if the Reset Mode was entered previously. An Error Status change (Status Register) and an Error Warning Interrupt forced by the new register content will not occur until the Reset Mode is cancelled again.

12.8.8 Status Register (CAN1SR - 0xE004 401C, CAN2SR - 0xE004 801C)

This register contains three status bytes in which the bits not related to transmission are identical to the corresponding bits in the Global Status Register, while those relating to transmission reflect the status of each of the 3 Tx Buffers.

Table 228. Status Register (CAN1SR - address 0xE004 401C, CAN2SR - address 0xE004 801C) bit description

Bit	Symbol	Value	Function	Reset Value	
0	RBS		Receive Buffer Status. This bit is identical to the RBS bit in the CANxGSR.	0	0
1	DOS		Data Overrun Status. This bit is identical to the DOS bit in the CANxGSR.	0	0
2	TBS1[1]		Transmit Buffer Status 1.		1
		0(locked)	Software cannot access the Tx Buffer 1 nor write to the corresponding CANxTFI, CANxTID, CANxTDA, and CANxTDB registers because a message is either waiting for transmission or is in transmitting process.		
		1(released)	Software may write a message into the Transmit Buffer 1 and its CANxTFI, CANxTID, CANxTDA, and CANxTDB registers.		
3	TCS1 ^[2]		Transmission Complete Status.	1	Х
		0(incomplete)	The previously requested transmission for Tx Buffer 1 is not complete.		
		1(complete)	The previously requested transmission for Tx Buffer 1 has been successfully completed.		
4	RS		Receive Status. This bit is identical to the RS bit in the GSR.	1	0

Chapter 12: LPC23XX CAN controllers CAN1/2

Table 228. Status Register (CAN1SR - address 0xE004 401C, CAN2SR - address 0xE004 801C) bit description

Bit	Symbol	Value	Function		RM Set
5	TS1		Transmit Status 1.	1	0
		0(idle)	There is no transmission from Tx Buffer 1.		
		1(transmit)	The CAN Controller is transmitting a message from Tx Buffer 1.		
6	ES		Error Status. This bit is identical to the ES bit in the CANxGSR.	0	0
7	BS		Bus Status. This bit is identical to the BS bit in the CANxGSR.		0
8	RBS		Receive Buffer Status. This bit is identical to the RBS bit in the CANxGSR.	0	0
9	DOS		Data Overrun Status. This bit is identical to the DOS bit in the CANxGSR.	0	0
10	TBS2[1]		Transmit Buffer Status 2.	1	1
		0(locked)	Software cannot access the Tx Buffer 2 nor write to the corresponding CANxTFI, CANxTID, CANxTDA, and CANxTDB registers because a message is either waiting for transmission or is in transmitting process.		
		1(released)	Software may write a message into the Transmit Buffer 2 and its CANxTFI, CANxTID, CANxTDA, and CANxTDB registers.		
11 TC	TCS2 ^[2]		Transmission Complete Status.	1	Х
		0(incomplete)	The previously requested transmission for Tx Buffer 2 is not complete.		
	1(complete) The previously requested transmission for Tx Buffer 2 has be completed.		The previously requested transmission for Tx Buffer 2 has been successfully completed.		
12	RS		Receive Status. This bit is identical to the RS bit in the GSR.	1	0
13	TS2		Transmit Status 2.	1	0
		0(idle)	There is no transmission from Tx Buffer 2.		
		1(transmit)	The CAN Controller is transmitting a message from Tx Buffer 2.		
14	ES		Error Status. This bit is identical to the ES bit in the CANxGSR.	0	0
15	BS		Bus Status. This bit is identical to the BS bit in the CANxGSR.	0	0
16	RBS		Receive Buffer Status. This bit is identical to the RBS bit in the CANxGSR.	0	0
17	DOS		Data Overrun Status. This bit is identical to the DOS bit in the CANxGSR.	0	0
18	TBS3[1]		Transmit Buffer Status 3.	1	1
		0(locked)	Software cannot access the Tx Buffer 3 nor write to the corresponding CANxTFI, CANxTID, CANxTDA, and CANxTDB registers because a message is either waiting for transmission or is in transmitting process.		
		1(released)	Software may write a message into the Transmit Buffer 3 and its CANxTFI, CANxTID, CANxTDA, and CANxTDB registers.		
19	TCS3[2]		Transmission Complete Status.	1	Х
		0(incomplete)	The previously requested transmission for Tx Buffer 3 is not complete.		
		1(complete)	The previously requested transmission for Tx Buffer 3 has been successfully completed.		
20	RS		Receive Status. This bit is identical to the RS bit in the GSR.	1	0
21	TS3		Transmit Status 3.	1	0
		0(idle)	There is no transmission from Tx Buffer 3.		
		1(transmit)	The CAN Controller is transmitting a message from Tx Buffer 3.		

Chapter 12: LPC23XX CAN controllers CAN1/2

Table 228. Status Register (CAN1SR - address 0xE004 401C, CAN2SR - address 0xE004 801C) bit description

Bit	Symbol Value	Function	Reset Value	
22	ES	Error Status. This bit is identical to the ES bit in the CANxGSR.	0	0
23	BS	Bus Status. This bit is identical to the BS bit in the CANxGSR.	0	0
31:24	-	Reserved, user software should not write ones to reserved bits. The value read from a reserved bit is not defined.	NA	

^[1] If the CPU tries to write to this Transmit Buffer when the Transmit Buffer Status bit is '0' (locked), the written byte is not accepted and is lost without this being signalled.

12.8.9 Receive Frame Status Register (CAN1RFS - 0xE004 4020, CAN2RFS - 0xE004 8020)

This register defines the characteristics of the current received message. It is read-only in normal operation but can be written for testing purposes if the RM bit in CANxMOD is 1.

Table 229. Receive Frame Status register (CAN1RFS - address 0xE004 4020, CAN2RFS - address 0xE004 8020) bit description

Bit	Symbol	Function	Reset Value	RM Set
9:0	ID Index	If the BP bit (below) is 0, this value is the zero-based number of the Lookup Table RAM entry at which the Acceptance Filter matched the received Identifier. Disabled entries in the Standard tables are included in this numbering, but will not be matched. See Section 12.18 "Examples of acceptance filter tables and ID index values" on page 310 for examples of ID Index values.		X
10	BP	If this bit is 1, the current message was received in AF Bypass mode, and the ID Index field (above) is meaningless.	0	X
15:11	-	Reserved, user software should not write ones to reserved bits. The value read from a reserved bit is not defined.	NA	
19:16	DLC	The field contains the Data Length Code (DLC) field of the current received message. When RTR = 0, this is related to the number of data bytes available in the CANRDA and CANRDB registers as follows: 0000-0111 = 0 to 7 bytes1000-1111 = 8 bytes	0	X
		With RTR = 1, this value indicates the number of data bytes requested to be sent back, with the same encoding.		
29:20	-	Reserved, user software should not write ones to reserved bits. The value read from a reserved bit is not defined.	NA	
30	RTR	This bit contains the Remote Transmission Request bit of the current received message. 0 indicates a Data Frame, in which (if DLC is non-zero) data can be read from the CANRDA and possibly the CANRDB registers. 1 indicates a Remote frame, in which case the DLC value identifies the number of data bytes requested to be sent using the same Identifier.	ė	
31	FF	A 0 in this bit indicates that the current received message included an 11 bit Identifier, while a 1 indicates a 29 bit Identifier. This affects the contents of the CANid register described below.	0	X

^[2] The Transmission Complete Status bit is set '0' (incomplete) whenever the Transmission Request bit or the Self Reception Request bit is set '1' for this TX buffer. The Transmission Complete Status bit remains '0' until a message is transmitted successfully.

Chapter 12: LPC23XX CAN controllers CAN1/2

12.8.9.1 ID index field

The ID Index is a 10-bit field in the Info Register that contains the table position of the ID Look-up Table if the currently received message was accepted. The software can use this index to simplify message transfers from the Receive Buffer into the Shared Message Memory. Whenever bit 10 (BP) of the ID Index in the CANRFS register is 1, the current CAN message was received in acceptance filter bypass mode.

12.8.10 Receive Identifier Register (CAN1RID - 0xE004 4024, CAN2RID - 0xE004 8024)

This register contains the Identifier field of the current received message. It is read-only in normal operation but can be written for testing purposes if the RM bit in CANmod is 1. It has two different formats depending on the FF bit in CANRFS. See <u>Table 217</u> for details on specific CAN channel register address.

Table 230. Receive Identifier Register (CAN1RID - address 0xE004 4024, CAN2RID - address 0xE004 8024) bit description

Bit	Symbol	Function	Reset Value	RM Set
10:0	ID	The 11 bit Identifier field of the current received message. In CAN 2.0A, these bits are called ID10-0, while in CAN 2.0B they're called ID29-18.	0	X
31:11	-	Reserved, user software should not write ones to reserved bits. The value read from a reserved bit is not defined.	NA	

Table 231. RX Identifier register when FF = 1

Bit	Symbol	Function	Reset Value	RM Set
28:0	ID	The 29 bit Identifier field of the current received message. In CAN 2.0B these bits are called ID29-0.	0	X
31:29	-	Reserved, user software should not write ones to reserved bits. The value read from a reserved bit is not defined.	NA	

12.8.11 Receive Data Register A (CAN1RDA - 0xE004 4028, CAN2RDA - 0xE004 8028)

This register contains the first 1-4 Data bytes of the current received message. It is read-only in normal operation, but can be written for testing purposes if the RM bit in CANMOD is 1. See Table 217 for details on specific CAN channel register address.

Table 232. Receive Data register A (CAN1RDA - address 0xE004 4028, CAN2RDA - address 0xE004 8028) bit description

Bit	Symbol	Function	Reset Value	
7:0	Data 1	If the DLC field in CANRFS Š 0001, this contains the first Data byte of the current received message.	0	X

Chapter 12: LPC23XX CAN controllers CAN1/2

Table 232. Receive Data register A (CAN1RDA - address 0xE004 4028, CAN2RDA - address 0xE004 8028) bit description

Bit	Symbol	Function	Reset Value	
15:8	Data 2	If the DLC field in CANRFS $\check{\text{S}}$ 0010, this contains the first Data byte of the current received message.	0	X
23:16	Data 3	If the DLC field in CANRFS Š 0011, this contains the first Data byte of the current received message.	0	X
31:24	Data 4	If the DLC field in CANRFS $\check{\text{S}}$ 0100, this contains the first Data byte of the current received message.	0	X

12.8.12 Receive Data Register B (CAN1RDB - 0xE004 402C, CAN2RDB - 0xE004 802C)

This register contains the 5th through 8th Data bytes of the current received message. It is read-only in normal operation, but can be written for testing purposes if the RM bit in CANMOD is 1. See Table 217 for details on specific CAN channel register address.

Table 233. Receive Data register B (CAN1RDB - address 0xE004 402C, CAN2RDB - address 0xE004 802C) bit description

Bit	Symbol	Function	Reset Value	
7:0	Data 5	If the DLC field in CANRFS $\check{\text{S}}$ 0101, this contains the first Data byte of the current received message.	0	Χ
15:8	Data 6	If the DLC field in CANRFS Š 0110, this contains the first Data byte of the current received message.	0	X
23:16	Data 7	If the DLC field in CANRFS Š 0111, this contains the first Data byte of the current received message.	0	X
31:24	Data 8	If the DLC field in CANRFS Š 1000, this contains the first Data byte of the current received message.	0	X

12.8.13 Transmit Frame Information Register (CAN1TFI[1/2/3] - 0xE004 40[30/40/50], CAN2TFI[1/2/3] - 0xE004 80[30/40/50])

When the corresponding TBS bit in CANSR is 1, software can write to one of these registers to define the format of the next transmit message for that Tx buffer. Bits not listed read as 0 and should be written as 0.

The values for the reserved bits of the CANxTFI register in the Transmit Buffer should be set to the values expected in the Receive Buffer for an easy comparison, when using the Self Reception facility (self test), otherwise they are not defined.

The CAN Controller consist of three Transmit Buffers. Each of them has a length of 4 words and is able to store one complete CAN message as shown in Figure 42.

The buffer layout is subdivided into Descriptor and Data Field where the first word of the Descriptor Field includes the TX Frame Info that describes the Frame Format, the Data Length and whether it is a Remote or Data Frame. In addition, a TX Priority register allows the definition of a certain priority for each transmit message. Depending on the chosen Frame Format, an 11-bit identifier for Standard Frame Format (SFF) or an 29-bit identifier for Extended Frame Format (EFF) follows. Note that unused bits in the TID field have to be defined as 0. The Data Field in TDA and TDB contains up to eight data bytes.

Chapter 12: LPC23XX CAN controllers CAN1/2

Table 234. Transmit Frame Information Register (CAN1TFI[1/2/3] - address 0xE004 40[30/40/50], CAN2TFI[1/2/3] - 0xE004 80[30/40/50]) bit description

Bit	Symbol	Function	Reset Value	RM Set
7:0	PRIO	If the TPM (Transmit Priority Mode) bit in the CANxMOD register is set to 1, enabled Tx Buffers contend for the right to send their messages based on this field. The buffer with the lowest TX Priority value wins the prioritization and is sent first.		X
15:8	-	Reserved.	0	
19:16	DLC	Data Length Code. This value is sent in the DLC field of the next transmit message. In addition, if RTR = 0, this value controls the number of Data bytes sent in the next transmit message, from the CANxTDA and CANxTDB registers: 0000-0111 = 0-7 bytes 1xxx = 8 bytes	0	X
29:20	-	Reserved.	0	
30	RTR	This value is sent in the RTR bit of the next transmit message. If this bit is 0, the number of data bytes called out by the DLC field are sent from the CANxTDA and CANxTDB registers. If this bit is 1, a Remote Frame is sent, containing a request for that number of bytes.	0	X
31	FF	If this bit is 0, the next transmit message will be sent with an 11 bit Identifier (standard frame format), while if it's 1, the message will be sent with a 29 bit Identifier (extended frame format).	0	X

Automatic transmit priority detection

To allow uninterrupted streams of transmit messages, the CAN Controller provides Automatic Transmit Priority Detection for all Transmit Buffers. Depending on the selected Transmit Priority Mode, internal prioritization is based on the CAN Identifier or a user defined "local priority". If more than one message is enabled for transmission (TR=1) the internal transmit message queue is organized such as that the transmit buffer with the lowest CAN Identifier (TID) or the lowest "local priority" (TX Priority) wins the prioritization and is sent first. The result of the internal scheduling process is taken into account short before a new CAN message is sent on the bus. This is also true after the occurrence of a transmission error and right before a re-transmission.

Tx DLC

The number of bytes in the Data Field of a message is coded with the Data Length Code (DLC). At the start of a Remote Frame transmission the DLC is not considered due to the RTR bit being '1 ' (remote). This forces the number of transmitted/received data bytes to be 0. Nevertheless, the DLC must be specified correctly to avoid bus errors, if two CAN Controllers start a Remote Frame transmission with the same identifier simultaneously. For reasons of compatibility no DLC > 8 should be used. If a value greater than 8 is selected, 8 bytes are transmitted in the data frame with the Data Length Code specified in DLC. The range of the Data Byte Count is 0 to 8 bytes and is coded as follows:

(6)

DataByteCount = DLC

Chapter 12: LPC23XX CAN controllers CAN1/2

12.8.14 Transmit Identifier Register (CAN1TID[1/2/3] - 0xE004 40[34/44/54], CAN2TID[1/2/3] - 0xE004 80[34/44/54])

When the corresponding TBS bit in CANxSR is 1, software can write to one of these registers to define the Identifier field of the next transmit message. Bits not listed read as 0 and should be written as 0. The register assumes two different formats depending on the FF bit in CANTFI.

In Standard Frame Format messages, the CAN Identifier consists of 11 bits (ID.28 to ID.18), and in Extended Frame Format messages, the CAN identifier consists of 29 bits (ID.28 to ID.0). ID.28 is the most significant bit, and it is transmitted first on the bus during the arbitration process. The Identifier acts as the message's name, used in a receiver for acceptance filtering, and also determines the bus access priority during the arbitration process.

Table 235. Transfer Identifier Register (CAN1TID[1/2/3] - address 0xE004 40[34/44/54], CAN2TID[1/2/3] - address 0xE004 80[34/44/54]) bit description

Bit	Symbol	Function	Reset Value	RM Set
10:0	ID	The 11 bit Identifier to be sent in the next transmit message.	0	Χ
31:11	-	Reserved, user software should not write ones to reserved bits. The value read from a reserved bit is not defined.	NA	

Table 236. Transfer Identifier register when FF = 1

Bit	Symbol	Function	Reset Value	RM Set
28:0	ID	The 29 bit Identifier to be sent in the next transmit message.	0	Χ
31:29	-	Reserved, user software should not write ones to reserved bits. The value read from a reserved bit is not defined.	NA	

12.8.15 Transmit Data Register A (CAN1TDA[1/2/3] - 0xE004 40[38/48/58], CAN2TDA[1/2/3] - 0xE004 80[38/48/58])

When the corresponding TBS bit in CANSR is 1, software can write to one of these registers to define the first 1 - 4 data bytes of the next transmit message. The Data Length Code defines the number of transferred data bytes. The first bit transmitted is the most significant bit of TX Data Byte 1.

Table 237. Transmit Data Register A (CAN1TDA[1/2/3] - address 0xE004 40[38/48/58], CAN2TDA[1/2/3] - address 0xE004 80[38/48/58]) bit description

Bit	Symbol	Function	Reset Value	RM Set
7:0	Data 1	If RTR = 0 and DLC \check{S} 0001 in the corresponding CANxTFI, this byte is sent as the first Data byte of the next transmit message.	0	Χ
15;8	Data 2	If RTR = 0 and DLC Š 0010 in the corresponding CANxTFI, this byte is sent as the 2nd Data byte of the next transmit message.	0	X
23:16	Data 3	If RTR = 0 and DLC Š 0011 in the corresponding CANxTFI, this byte is sent as the 3rd Data byte of the next transmit message.	0	X
31:24	Data 4	If RTR = 0 and DLC Š 0100 in the corresponding CANxTFI, this byte is sent as the 4th Data byte of the next transmit message.	0	Х

Chapter 12: LPC23XX CAN controllers CAN1/2

12.8.16 Transmit Data Register B (CAN1TDB[1/2/3] - 0xE004 40[3C/4C/5C], CAN2TDB[1/2/3] - 0xE004 80[3C/4C/5C])

When the corresponding TBS bit in CANSR is 1, software can write to one of these registers to define the 5th through 8th data bytes of the next transmit message. The Data Length Code defines the number of transferred data bytes. The first bit transmitted is the most significant bit of TX Data Byte 1.

Table 238. Transmit Data Register B (CAN1TDB[1/2/3] - address 0xE004 40[3C/4C/5C], CAN2TDB[1/2/3] - address 0xE004 80[3C/4C/5C]) bit description

Bit	Symbol	Function	Reset Value	RM Set
7:0	Data 5	If RTR = 0 and DLC \check{S} 0101 in the corresponding CANTFI, this byte is sent as the 5th Data byte of the next transmit message.	0	X
15;8	Data 6	If RTR = 0 and DLC Š 0110 in the corresponding CANTFI, this byte is sent as the 6th Data byte of the next transmit message.	0	X
23:16	Data 7	If RTR = 0 and DLC Š 0111 in the corresponding CANTFI, this byte is sent as the 7th Data byte of the next transmit message.	0	X
31:24	Data 8	If RTR = 0 and DLC \check{S} 1000 in the corresponding CANTFI, this byte is sent as the 8th Data byte of the next transmit message.	0	X

12.8.17 CAN Sleep Clear register (CANSLEEPCLR - 0x400F C110)

This register provides the current sleep state of the two CAN channels and provides a means to restore the clocks to that channel following wake-up. Refer to Section 12.9.2 "Sleep mode" for more information on the CAN sleep feature.

Table 239. CAN Sleep Clear register (CANSLEEPCLR - address 0x400F C110) bit description

Bit	Symbol	Function	Reset Value
0	-	Reserved, user software should not write ones to reserved bits. The value read from a reserved bit is not defined.	NA
1	CAN1SLEEP	Sleep status and control for CAN channel 1.	0
		Read: when 1, indicates that CAN channel 1 is in the sleep mode.	
		Write: writing a 1 causes clocks to be restored to CAN channel 1.	
2	CAN2SLEEP	Sleep status and control for CAN channel 2.	0
		Read: when 1, indicates that CAN channel 2 is in the sleep mode.	
		Write: writing a 1 causes clocks to be restored to CAN channel 2.	
31:3	-	Reserved, user software should not write ones to reserved bits. The value read from a reserved bit is not defined.	NA

12.8.18 CAN Wake-up Flags register (CANWAKEFLAGS - 0x400F C114)

This register provides the wake-up status for the two CAN channels and allows clearing wake-up events. Refer to <u>Section 12.9.2 "Sleep mode"</u> for more information on the CAN sleep feature.

Chapter 12: LPC23XX CAN controllers CAN1/2

Table 240. CAN Wake-up Flags register (CANWAKEFLAGS - address 0x400F C114) bit description

Bit	Symbol	Function	Reset Value
0	-	Reserved, user software should not write ones to reserved bits. The value read from a reserved bit is not defined.	NA
1	CAN1WAKE	Wake-up status for CAN channel 1.	0
		Read: when 1, indicates that a falling edge has occurred on the receive data line of CAN channel 1.	
		Write: writing a 1 clears this bit.	
2	CAN2WAKE	Wake-up status for CAN channel 2.	0
		Read: when 1, indicates that a falling edge has occurred on the receive data line of CAN channel 2.	
		Write: writing a 1 clears this bit.	
31:3	-	Reserved, user software should not write ones to reserved bits. The value read from a reserved bit is not defined.	NA

12.9 CAN controller operation

12.9.1 Error handling

The CAN Controllers count and handle transmit and receive errors as specified in CAN Spec 2.0B. The Transmit and Receive Error Counters are incriminated for each detected error and are decremented when operation is error-free. If the Transmit Error counter contains 255 and another error occurs, the CAN Controller is forced into a state called Bus-Off. In this state, the following register bits are set: BS in CANxSR, BEI and EI in CANxIR if these are enabled, and RM in CANxMOD. RM resets and disables much of the CAN Controller. Also at this time the Transmit Error Counter is set to 127 and the Receive Error Counter is cleared. Software must next clear the RM bit. Thereafter the Transmit Error Counter will count down 128 occurrences of the Bus Free condition (11 consecutive recessive bits). Software can monitor this countdown by reading the Tx Error Counter. When this countdown is complete, the CAN Controller clears BS and ES in CANxSR, and sets EI in CANxSR if EIE in IER is 1.

The Tx and Rx error counters can be written if RM in CANxMOD is 1. Writing 255 to the Tx Error Counter forces the CAN Controller to Bus-Off state. If Bus-Off (BS in CANxSR) is 1, writing any value 0 through 254 to the Tx Error Counter clears Bus-Off. When software clears RM in CANxMOD thereafter, only one Bus Free condition (11 consecutive recessive bits) is needed before operation resumes.

12.9.2 Sleep mode

The CAN Controller will enter sleep mode if the SM bit in the CAN Mode register is 1, no CAN interrupt is pending, and there is no activity on the CAN bus. Software can only set SM when RM in the CAN Mode register is 0; it can also set the WUIE bit in the CAN Interrupt Enable register to enable an interrupt on any wake-up condition.

The CAN Controller wakes up (and sets WUI in the CAN Interrupt register if WUIE in the CAN Interrupt Enable register is 1) in response to a) a dominant bit on the CAN bus, or b) software clearing SM in the CAN Mode register. A sleeping CAN Controller, that wakes up in response to bus activity, is not able to receive an initial message, until after it detects Bus_Free (11 consecutive recessive bits). If an interrupt is pending or the CAN bus is active when software sets SM, the wake-up is immediate.

Chapter 12: LPC23XX CAN controllers CAN1/2

12.9.3 Interrupts

Each CAN Controller produces interrupt requests for Receive, Transmit, and "other status". The Transmit interrupt is the OR of the Transmit interrupts from the three Tx Buffers. The Receive, Transmit, and "other status" interrupts from all of the CAN controllers and the Acceptance Filter LUTerr condition are ORed into one VIC channel (see Table 86).

12.9.4 Transmit priority

If the TPM bit in the CANxMOD register is 0, multiple enabled Tx Buffers contend for the right to send their messages based on the value of their CAN Identifier (TID). If TPM is 1, they contend based on the PRIO fields in bits 7:0 of their CANxTFS registers. In both cases the smallest binary value has priority. If two (or three) transmit-enabled buffers have the same smallest value, the lowest-numbered buffer sends first.

The CAN controller selects among multiple enabled Tx Buffers dynamically, just before it sends each message.

12.10 Centralized CAN registers

For easy and fast access, all CAN Controller Status bits from each CAN Controller Status register are bundled together. Each defined byte of the following registers contains one particular status bit from each of the CAN controllers, in its LS bits.

All Status registers are "read-only" and allow byte, half word and word access.

12.10.1 Central Transmit Status Register (CANTxSR - 0xE004 0000)

Table 241. Central Transit Status Register (CANTxSR - address 0xE004 0000) bit description

Bit	Symbol	Description	Reset Value
0	TS1	When 1, the CAN controller 1 is sending a message (same as TS in the). $ \\$	0
1	TS2	When 1, the CAN controller 2 is sending a message (same as TS in the CAN2GSR)	0
7:2	-	Reserved, user software should not write ones to reserved bits. The value read from a reserved bit is not defined.	NA
8	TBS1	When 1, all 3 Tx Buffers of the CAN1 controller are available to the CPU (same as TBS in CAN1GSR).	1
9	TBS2	When 1, all 3 Tx Buffers of the CAN2 controller are available to the CPU (same as TBS in CAN2GSR).	1
15:10	-	Reserved, user software should not write ones to reserved bits. The value read from a reserved bit is not defined.	NA
16	TCS1	When 1, all requested transmissions have been completed successfully by the CAN1 controller (same as TCS in CAN1GSR).	1
17:16	TCS2	When 1, all requested transmissions have been completed successfully by the CAN2 controller (same as TCS in CAN2GSR).	1
31:18	-	Reserved, user software should not write ones to reserved bits. The value read from a reserved bit is not defined.	NA

Chapter 12: LPC23XX CAN controllers CAN1/2

12.10.2 Central Receive Status Register (CANRxSR - 0xE004 0004)

Table 242. Central Receive Status Register (CANRxSR - address 0xE004 0004) bit description

Bit	Symbol	Description	Reset Value
0	RS1	When 1, CAN1 is receiving a message (same as RS in CAN1GSR).	0
1	RS2	When 1, CAN2 is receiving a message (same as RS in CAN2GSR).	0
7:2	-	Reserved, user software should not write ones to reserved bits. The value read from a reserved bit is not defined.	NA
8	RB1	When 1, a received message is available in the CAN1 controller (same as RBS in CAN1GSR).	0
9	RB2	When 1, a received message is available in the CAN2 controller (same as RBS in CAN2GSR).	0
15:10	-	Reserved, user software should not write ones to reserved bits. The value read from a reserved bit is not defined.	NA
16	DOS1	When 1, a message was lost because the preceding message to CAN1 controller was not read out quickly enough (same as DOS in CAN1GSR).	0
17:16	DOS2	When 1, a message was lost because the preceding message to CAN2 controller was not read out quickly enough (same as DOS in CAN2GSR).	0
31:18	-	Reserved, user software should not write ones to reserved bits. The value read from a reserved bit is not defined.	NA

12.10.3 Central Miscellaneous Status Register (CANMSR - 0xE004 0008)

Table 243. Central Miscellaneous Status Register (CANMSR - address 0xE004 0008) bit description

Bit	Symbol	Description	Reset Value
0	E1	When 1, one or both of the CAN1 Tx and Rx Error Counters has reached the limit set in the CAN1EWL register (same as ES in CAN1GSR)	0
1	E2	When 1, one or both of the CAN2 Tx and Rx Error Counters has reached the limit set in the CAN2EWL register (same as ES in CAN2GSR)	0
7:2	-	Reserved, user software should not write ones to reserved bits. The value read from a reserved bit is not defined.	NA
8	BS1	When 1, the CAN controller is currently not involved/prohibited from bus activity (same as BS in CAN1GSR).	0
9	BS2	When 1, the CAN controller is currently not involved/prohibited from bus activity (same as BS in CAN1GSR).	0
31:10	-	Reserved, user software should not write ones to reserved bits. The value read from a reserved bit is not defined.	NA

12.11 Global acceptance filter

This block provides lookup for received Identifiers (called Acceptance Filtering in CAN terminology) for all the CAN Controllers. It includes a 512 x 32 (2 kB) RAM in which software maintains one to five tables of Identifiers. This RAM can contain up to 1024 Standard Identifiers or 512 Extended Identifiers, or a mixture of both types.

Chapter 12: LPC23XX CAN controllers CAN1/2

12.12 Acceptance filter modes

The Acceptance Filter can be put into different modes by setting the according AccOff, AccBP, and eFCAN bits in the Acceptance Filter Mode Register (Section 12.15.1

"Acceptance Filter Mode Register (AFMR - 0xE003 C000)"). During each mode the access to the Configuration Register and the ID Look-up table is handled differently.

Table 244. Acceptance filter modes and access control

Acceptance filter mode	Bit AccOff	Bit AccBP	Acceptance filter state	ID Look-up table RAM[1]	Acceptanc e filter config. registers	CAN controller message receive
Off Mode	1	0	reset & halted	r/w access from CPU	r/w access from CPU	no messages accepted
Bypass Mode	X	1	reset & halted	r/w access from CPU	r/w access from CPU	all messages accepted
Operating Mode and FullCAN Mode	0	0	running	read only from CPU[2]	access from Acceptance filter only	hardware acceptance filtering

^[1] The whole ID Look-up Table RAM is only word accessible.

A write access to all section configuration registers is only possible during the Acceptance Filter Off and Bypass Mode. Read access is allowed in all Acceptance Filter Modes.

12.12.1 Acceptance filter Off mode

The Acceptance Filter Off Mode is typically used during initialization. During this mode an unconditional access to all registers and to the Look-up Table RAM is possible. With the Acceptance Filter Off Mode, CAN messages are not accepted and therefore not stored in the Receive Buffers of active CAN Controllers.

12.12.2 Acceptance filter Bypass mode

The Acceptance Filter Bypass Mode can be used for example to change the acceptance filter configuration during a running system, e.g. change of identifiers in the ID-Look-up Table memory. During this re-configuration, software acceptance filtering has to be used.

It is recommended to use the ID ready Interrupt (ID Index) and the Receive Interrupt (RI). In this mode all CAN message are accepted and stored in the Receive Buffers of active CAN Controllers.

12.12.3 Acceptance filter Operating mode

The Acceptance Filter is in Operating Mode when neither the AccOff nor the AccBP in the Configuration Register is set and the eFCAN = 0.

^[2] During the Operating Mode of the Acceptance Filter the Look-up Table can be accessed only to disable or enable Messages.

Chapter 12: LPC23XX CAN controllers CAN1/2

12.12.4 FullCAN mode

The Acceptance Filter is in Operating Mode when neither the AccOff nor the AccBP in the Configuration Register is set and the eFCAN = 1. More details on FullCAN mode are available in Section 12.17 "FullCAN mode".

12.13 Sections of the ID look-up table RAM

Four 12-bit section configuration registers (SFF_sa, SFF_GRP_sa, EFF_sa, EFF_sa, EFF_GRP_sa) are used to define the boundaries of the different identifier sections in the ID-Look-up Table Memory. The fifth 12-bit section configuration register, the End of Table address register (ENDofTable) is used to define the end of all identifier sections. The End of Table address is also used to assign the start address of the section where FullCAN Message Objects, if enabled are stored.

Table 245. Section configuration register settings


ID-Look up Table Section	Register	Value	Section status
FullCAN (Standard Frame Format) Identifier Section	SFF_sa	= 0x000	disabled
		> 0x000	enabled
Explicit Standard Frame Format Identifier Section	SFF_GRP_sa	= SFF_sa	disabled
		> SFF_sa	enabled
Group of Standard Frame Format Identifier Section	EFF_sa	= SFF_GRP_sa	disabled
		> SFF_GRP_sa	enabled
Explicit Extended Frame Format Identifier Section	EFF_GRP_sa	= EFF_sa	disabled
		> EFF_sa	enabled
Group of Extended Frame Format Identifier Section	ENDofTable	= EFF_GRP_sa	disabled
		> EFF_GRP_sa	enabled

12.14 ID look-up table RAM


The Whole ID Look-up Table RAM is only word accessible. A write access is only possible during the Acceptance Filter Off or Bypass Mode. Read access is allowed in all Acceptance Filter Modes.

If Standard (11 bit) Identifiers are used in the application, at least one of 3 tables in Acceptance Filter RAM must not be empty. If the optional "fullCAN mode" is enabled, the first table contains Standard identifiers for which reception is to be handled in this mode. The next table contains individual Standard Identifiers and the third contains ranges of Standard Identifiers, for which messages are to be received via the CAN Controllers. The tables of fullCAN and individual Standard Identifiers must be arranged in ascending numerical order, one per halfword, two per word. Since each CAN bus has its own address map, each entry also contains the number of the CAN Controller (SCC = 000 (CAN1) -or SCC = 001 (CAN2)) to which it applies.

Chapter 12: LPC23XX CAN controllers CAN1/2

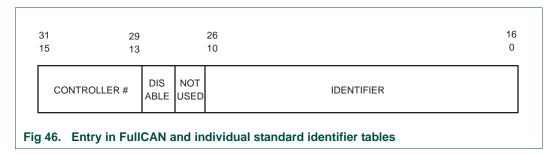

The table of Standard Identifier Ranges contains paired upper and lower (inclusive) bounds, one pair per word. These must also be arranged in ascending numerical order.

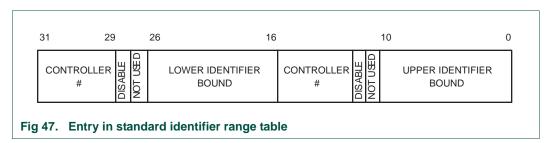

The disable bits in Standard entries provide a means to turn response, to particular CAN Identifiers or ranges of Identifiers, on and off dynamically. When the Acceptance Filter function is enabled, only the disable bits in Acceptance Filter RAM can be changed by software. Response to a range of Standard addresses can be enabled by writing 32 zero bits to its word in RAM, and turned off by writing 32 one bits (0xFFFF FFFF) to its word in RAM. Only the disable bits are actually changed. Disabled entries must maintain the ascending sequence of Identifiers.

If Extended (29 bit) Identifiers are used in the application, at least one of the other two tables in Acceptance Filter RAM must not be empty, one for individual Extended Identifiers and one for ranges of Extended Identifiers. The table of individual Extended Identifiers must be arranged in ascending numerical order.



The table of ranges of Extended Identifiers must contain an even number of entries, of the same form as in the individual Extended Identifier table. Like the Individual Extended table, the Extended Range must be arranged in ascending numerical order. The first and second (3rd and 4th ...) entries in the table are implicitly paired as an inclusive range of Extended addresses, such that any received address that falls in the inclusive range is received (accepted). Software must maintain the table to consist of such word pairs.

There is no facility to receive messages to Extended identifiers using the fullCAN method.

Chapter 12: LPC23XX CAN controllers CAN1/2

Five address registers point to the boundaries between the tables in Acceptance Filter RAM: fullCAN Standard addresses, Standard Individual addresses, Standard address ranges, Extended Individual addresses, and Extended address ranges. These tables must be consecutive in memory. The start of each of the latter four tables is implicitly the end of the preceding table. The end of the Extended range table is given in an End of Tables register. If the start address of a table equals the start of the next table or the End Of Tables register, that table is empty.

When the Receive side of a CAN controller has received a complete Identifier, it signals the Acceptance Filter of this fact. The Acceptance Filter responds to this signal, and reads the Controller number, the size of the Identifier, and the Identifier itself from the Controller. It then proceeds to search its RAM to determine whether the message should be received or ignored.

If fullCAN mode is enabled and the CAN controller signals that the current message contains a Standard identifier, the Acceptance Filter first searches the table of identifiers for which reception is to be done in fullCAN mode. Otherwise, or if the AF doesn't find a match in the fullCAN table, it searches its individual Identifier table for the size of Identifier signalled by the CAN controller. If it finds an equal match, the AF signals the CAN controller to retain the message, and provides it with an ID Index value to store in its Receive Frame Status register.

If the Acceptance Filter does not find a match in the appropriate individual Identifier table, it then searches the Identifier Range table for the size of Identifier signalled by the CAN controller. If the AF finds a match to a range in the table, it similarly signals the CAN controller to retain the message, and provides it with an ID Index value to store in its Receive Frame Status register. If the Acceptance Filter does not find a match in either the individual or Range table for the size of Identifier received, it signals the CAN controller to discard/ignore the received message.

12.15 Acceptance filter registers

12.15.1 Acceptance Filter Mode Register (AFMR - 0xE003 C000)

The AccBP and AccOff bits of the acceptance filter mode register are used for putting the acceptance filter into the Bypass and Off mode. The eFCAN bit of the mode register can be used to activate a FullCAN mode enhancement for received 11-bit CAN ID messages.

Table 246. Acceptance Filter Mode Register (AFMR - address 0xE003 C000) bit description

Bit	Symbol	Value	Description	Reset Value
0	AccOff[2]	1	if AccBP is 0, the Acceptance Filter is not operational. All Rx messages on all CAN buses are ignored.	1
1	AccBP[1]	1	All Rx messages are accepted on enabled CAN controllers. Software must set this bit before modifying the contents of any of the registers described below, and before modifying the contents of Lookup Table RAM in any way other than setting or clearing Disable bits in Standard Identifier entries. When both this bit and AccOff are 0, the Acceptance filter operates to screen received CAN Identifiers.	0

Chapter 12: LPC23XX CAN controllers CAN1/2

Bit	Symbol	Value	Description	Reset Value
2	eFCAN[3]	0	Software must read all messages for all enabled IDs on all enabled CAN buses, from the receiving CAN controllers.	0
		1	The Acceptance Filter itself will take care of receiving and storing messages for selected Standard ID values on selected CAN buses. See Section 12.17 "FullCAN mode" on page 299.	
31:3	-		Reserved, user software should not write ones to reserved bits. The value read from a reserved bit is not defined.	NA

- [1] Acceptance Filter Bypass Mode (AccBP): By setting the AccBP bit in the Acceptance Filter Mode Register, the Acceptance filter is put into the Acceptance Filter Bypass mode. During bypass mode, the internal state machine of the Acceptance Filter is reset and halted. All received CAN messages are accepted, and acceptance filtering can be done by software.
- [2] Acceptance Filter Off mode (AccOff): After power-upon hardware reset, the Acceptance filter will be in Off mode, the AccOff bit in the Acceptance filter Mode register 0 will be set to 1. The internal state machine of the acceptance filter is reset and halted. If not in Off mode, setting the AccOff bit, either by hardware or by software, will force the acceptance filter into Off mode.
- [3] FullCan Mode Enhancements: A FullCan mode for received CAN messages can be enabled by setting the eFCAN bit in the acceptance filter mode register.

12.15.2 Section configuration registers

The 10 bit section configuration registers are used for the ID look-up table RAM to indicate the boundaries of the different sections for explicit and group of CAN identifiers for 11 bit CAN and 29 bit CAN identifiers, respectively. The 10 bit wide section configuration registers allow the use of a 512x32 (2 kB) look-up table RAM. The whole ID Look-up Table RAM is only word accessible. All five section configuration registers contain APB addresses for the acceptance filter RAM and do not include the APB base address. A write access to all section configuration registers is only possible during the Acceptance filter off and Bypass modes. Read access is allowed in all acceptance filter modes.

12.15.3 Standard Frame Individual Start Address Register (SFF_sa - 0xE003 C004)

Table 247. Standard Frame Individual Start Address Register (SFF_sa - address 0xE003 C004) bit description

Bit	Symbol	Description	Reset Value
1:0	-	Reserved, user software should not write ones to reserved bits. The value read from a reserved bit is not defined.	NA
10:2	SFF_sa ^[1]	The start address of the table of individual Standard Identifiers in AF Lookup RAM. If the table is empty, write the same value in this register and the SFF_GRP_sa register described below. For compatibility with possible future devices, write zeroes in bits 31:11 and 1:0 of this register. If the eFCAN bit in the AFMR is 1, this value also indicates the size of the table of Standard IDs which the Acceptance Filter will search and (if found) automatically store received messages in Acceptance Filter RAM.	0
31:11	-	Reserved, user software should not write ones to reserved bits. The value read from a reserved bit is not defined.	NA

Chapter 12: LPC23XX CAN controllers CAN1/2

[1] Write access to the look-up table section configuration registers are possible only during the Acceptance filter bypass mode or the Acceptance filter off mode.

12.15.4 Standard Frame Group Start Address Register (SFF_GRP_sa - 0xE003 C008)

Table 248. Standard Frame Group Start Address Register (SFF_GRP_sa - address 0xE003 C008) bit description

Bit	Symbol	Description	Reset Value
1:0	-	Reserved, user software should not write ones to reserved bits. The value read from a reserved bit is not defined.	NA
11:2	SFF_GRP_sa[1]	The start address of the table of grouped Standard Identifiers in AF Lookup RAM. If the table is empty, write the same value in this register and the EFF_sa register described below. The largest value that should be written to this register is 0x800, when only the Standard Individual table is used, and the last word (address 0x7FC) in AF Lookup Table RAM is used. For compatibility with possible future devices, please write zeroes in bits 31:12 and 1:0 of this register.	0
31:12	-	Reserved, user software should not write ones to reserved bits. The value read from a reserved bit is not defined.	NA

^[1] Write access to the look-up table section configuration registers are possible only during the Acceptance filter bypass mode or the Acceptance filter off mode.

12.15.5 Extended Frame Start Address Register (EFF_sa - 0xE003 C00C)

Table 249. Extended Frame Start Address Register (EFF_sa - address 0xE003 C00C) bit description

Bit	Symbol	Description	Reset Value
1:0	-	Reserved, user software should not write ones to reserved bits. The value read from a reserved bit is not defined.	NA
10:2	EFF_sa ^[1]	The start address of the table of individual Extended Identifiers in AF Lookup RAM. If the table is empty, write the same value in this register and the EFF_GRP_sa register described below. The largest value that should be written to this register is 0x800, when both Extended Tables are empty and the last word (address 0x7FC) in AF Lookup Table RAM is used. For compatibility with possible future devices, please write zeroes in bits 31:11 and 1:0 of this register.	0
31:11	-	Reserved, user software should not write ones to reserved bits. The value read from a reserved bit is not defined.	NA

^[1] Write access to the look-up table section configuration registers are possible only during the Acceptance filter bypass mode or the Acceptance filter off mode.

Chapter 12: LPC23XX CAN controllers CAN1/2

12.15.6 Extended Frame Group Start Address Register (EFF_GRP_sa - 0xE003 C010)

Table 250. Extended Frame Group Start Address Register (EFF_GRP_sa - address 0xE003 C010) bit description

Bit	Symbol	Description	Reset Value
1:0	-	Reserved, user software should not write ones to reserved bits. The value read from a reserved bit is not defined.	NA
11:2	Eff_GRP_sa[1]	The start address of the table of grouped Extended Identifiers in AF Lookup RAM. If the table is empty, write the same value in this register and the ENDofTable register described below. The largest value that should be written to this register is 0x800, when this table is empty and the last word (address 0x7FC) in AF Lookup Table RAM is used. For compatibility with possible future devices, please write zeroes in bits 31:12 and 1:0 of this register.	0
31:12	-	Reserved, user software should not write ones to reserved bits. The value read from a reserved bit is not defined.	NA

^[1] Write access to the look-up table section configuration registers are possible only during the Acceptance filter bypass mode or the Acceptance filter off mode.

12.15.7 End of AF Tables Register (ENDofTable - 0xE003 C014)

Table 251. End of AF Tables Register (ENDofTable - address 0xE003 C014) bit description

Bit	Symbol	Description	Reset Value
1:0	-	Reserved, user software should not write ones to reserved bits. The value read from a reserved bit is not defined.	NA
11:2	EndofTable [1]	The address above the last active address in the last active AF table. For compatibility with possible future devices, please write zeroes in bits 31:12 and 1:0 of this register. If the eFCAN bit in the AFMR is 0, the largest value that should be written to this register is 0x800, which allows the last word (address	0
		0x7FC) in AF Lookup Table RAM to be used. If the eFCAN bit in the AFMR is 1, this value marks the start of the area of Acceptance Filter RAM, into which the Acceptance Filter will automatically receive messages for selected IDs on selected CAN buses. In this case, the maximum value that should be written to this register is 0x800 minus 6 times the value in SFF_sa. This allows 12 bytes of message storage between this address and the end of Acceptance Filter RAM, for each Standard ID that is specified between the start of Acceptance Filter RAM, and the next active AF table.	
31:12	-	Reserved, user software should not write ones to reserved bits. The value read from a reserved bit is not defined.	NA

^[1] Write access to the look-up table section configuration registers are possible only during the Acceptance filter bypass mode or the Acceptance filter off mode.

12.15.8 Status registers

The look-up table error status registers, the error addresses, and the flag register provide information if a programming error in the look-up table RAM during the ID screening was encountered. The look-up table error address and flag register have only read access. If

UM10211

Chapter 12: LPC23XX CAN controllers CAN1/2

an error is detected, the LUTerror flag is set, and the LUTerrorAddr register provides the information under which address during an ID screening an error in the look-up table was encountered. Any read of the LUTerrorAddr Filter block can be used for a look-up table interrupt.

12.15.9 LUT Error Address Register (LUTerrAd - 0xE003 C018)

Table 252. LUT Error Address Register (LUTerrAd - address 0xE003 C018) bit description

		, ,	
Bit	Symbol	Description	Reset Value
1:0	-	Reserved, user software should not write ones to reserved bits. The value read from a reserved bit is not defined.	NA
10:2	LUTerrAd	It the LUT Error bit (below) is 1, this read-only field contains the address in AF Lookup Table RAM, at which the Acceptance Filter encountered an error in the content of the tables.	0
31:11	-	Reserved, user software should not write ones to reserved bits. The value read from a reserved bit is not defined.	NA

12.15.10 LUT Error Register (LUTerr - 0xE003 C01C)

Table 253. LUT Error Register (LUTerr - address 0xE003 C01C) bit description

Bit	Symbol	Description	Reset Value
0	LUTerr	This read-only bit is set to 1 if the Acceptance Filter encounters an error in the content of the tables in AF RAM. It is cleared when software reads the LUTerrAd register. This condition is ORed with the "other CAN" interrupts from the CAN controllers, to produce the request for a VIC interrupt channel.	0
31:1	-	Reserved, user software should not write ones to reserved bits. The value read from a reserved bit is not defined.	NA

12.15.11 Global FullCANInterrupt Enable register (FCANIE - 0xE003 C020)

A write access to the Global FullCAN Interrupt Enable register is only possible when the Acceptance Filter is in the off mode.

Table 254. Global FullCAN Enable register (FCANIE - address 0xE003 C020) bit description

Bit	Symbol	Description	Reset Value
0	FCANIE	Global FullCAN Interrupt Enable. When 1, this interrupt is enabled.	0
31:1	-	Reserved, user software should not write ones to reserved bits. The value read from a reserved bit is not defined.	NA

12.15.12 FullCAN Interrupt and Capture registers (FCANIC0 - 0xE003 C024 and FCANIC1 - 0xE003 C028)

For detailed description on these two registers, see <u>Section 12.17.2 "FullCAN interrupts"</u>.

Chapter 12: LPC23XX CAN controllers CAN1/2

Table 255. FullCAN Interrupt and Capture register 0 (FCANIC0 - address 0xE003 C024) bit description

Bit	Symbol	Description	Reset Value
0	IntPnd0	FullCan Interrupt Pending bit 0.	0
	IntPndx (0 <x<31)< td=""><td>FullCan Interrupt Pending bit x.</td><td>0</td></x<31)<>	FullCan Interrupt Pending bit x.	0
31	IntPnd31	FullCan Interrupt Pending bit 31.	0

Table 256. FullCAN Interrupt and Capture register 1 (FCANIC1 - address 0xE003 C028) bit description

Bit	Symbol	Description	Reset Value
0	IntPnd32	FullCan Interrupt Pending bit 32.	0
	IntPndx (32 <x<63)< td=""><td>FullCan Interrupt Pending bit x.</td><td>0</td></x<63)<>	FullCan Interrupt Pending bit x.	0
31	IntPnd63	FullCan Interrupt Pending bit 63.	0

12.16 Configuration and search algorithm

The CAN Identifier Look-up Table Memory can contain explicit identifiers and groups of CAN identifiers for Standard and Extended CAN Frame Formats. They are organized as a sorted list or table with an increasing order of the Source CAN Channel (SCC) together with CAN Identifier in each section.

SCC value equals CAN_controller - 1, i.e., SCC = 0 matches CAN1 and SCC = 1 matches CAN2.

Every CAN identifier is linked to an ID Index number. In case of a CAN Identifier match, the matching ID Index is stored in the Identifier Index of the Frame Status Register (CANRFS) of the according CAN Controller.

12.16.1 Acceptance filter search algorithm

The identifier screening process of the acceptance filter starts in the following order:

- 1. FullCAN (Standard Frame Format) Identifier Section
- 2. Explicit Standard Frame Format Identifier Section
- 3. Group of Standard Frame Format Identifier Section
- 4. Explicit Extended Frame Format Identifier Section
- 5. Group of Extended Frame Format Identifier Section


Note: Only activated sections will take part in the screening process.

In cases where equal message identifiers of same frame format are defined in more than one section, the first match will end the screening process for this identifier.

For example, if the same Source CAN Channel in conjunction with the identifier is defined in the FullCAN, the Explicit Standard Frame Format and the Group of Standard Frame Format Identifier Sections, the screening will already be finished with the match in the FullCAN section.

Chapter 12: LPC23XX CAN controllers CAN1/2

In the example of <u>Figure 49</u>, Identifiers with their Source CAN Channel have been defined in the FullCAN, Explicit and Group of Standard Frame Format Identifier Sections.

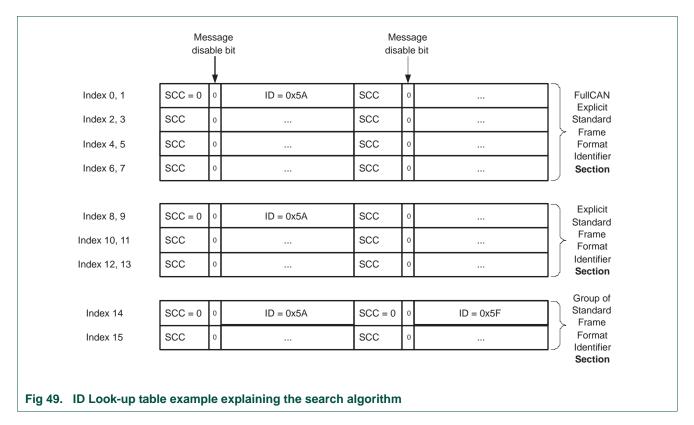

The identifier 0x5A of the CAN Controller 1 with the Source CAN Channel SCC = 0, is defined in all three sections. With this configuration incoming CAN messages on CAN Controller 1 with a 0x5A identifier will find a match in the FullCAN section.

It is possible to disable the '0x5A identifier' in the FullCAN section. With that, the screening process would be finished with the match in the Explicit Identifier Section.

The first group in the Group Identifier Section has been defined such that incoming CAN messages with identifiers of 0x5A up to 0x5F are accepted on CAN Controller 1 with the Source CAN Channel SCC = 0. As stated above, the identifier 0x5A would find a match already in the FullCAN or in the Explicit Identifier section if enabled. The rest of the defined identifiers of this group (0x5B to 0x5F) will find a match in this Group Identifier Section.

This way the user can switch dynamically between different filter modes for the same identifiers.

12.17 FullCAN mode

The FullCAN mode is based on capabilities provided by the CAN Gateway module used in the LPC2000 family of products. This block uses the Acceptance Filter to provide filtering for both CAN channels.

Chapter 12: LPC23XX CAN controllers CAN1/2

The concept of the CAN Gateway block is mainly based on a BasicCAN functionality. This concept fits perfectly in systems where a gateway is used to transfer messages or message data between different CAN channels. A BasicCAN device is generating a receive interrupt whenever a CAN message is accepted and received. Software has to move the received message out of the receive buffer from the according CAN controller into the user RAM.

To cover dashboard like applications where the controller typically receives data from several CAN channels for further processing, the CAN Gateway block was extended by a so-called FullCAN receive function. This additional feature uses an internal message handler to move received FullCAN messages from the receive buffer of the according CAN controller into the FullCAN message object data space of Look-up Table RAM.

When fullCAN mode is enabled, the Acceptance Filter itself takes care of receiving and storing messages for selected Standard ID values on selected CAN buses, in the style of "FullCAN" controllers.

In order to set this bit and use this mode, two other conditions must be met with respect to the contents of Acceptance Filter RAM and the pointers into it:

- The Standard Frame Individual Start Address Register (SFF_sa) must be greater than
 or equal to the number of IDs for which automatic receive storage is to be done, times
 two. SFF_sa must be rounded up to a multiple of 4 if necessary.
- The EndOfTable register must be less than or equal to 0x800 minus 6 times the SFF_sa value, to allow 12 bytes of message storage for each ID for which automatic receive storage will be done.

When these conditions are met and eFCAN is set:

- The area between the start of Acceptance Filter RAM and the SFF_sa address, is used for a table of individual Standard IDs and CAN Controller/bus identification, sorted in ascending order and in the same format as in the Individual Standard ID table (see Figure 46 "Entry in FullCAN and individual standard identifier tables" on page 292). Entries can be marked as "disabled" as in the other Standard tables. If there are an odd number of "FullCAN" ID's, at least one entry in this table must be so marked.
- The first (SFF_sa)/2 IDindex values are assigned to these automatically-stored ID's.
 That is, IDindex values stored in the Rx Frame Status Register, for IDs not handled in
 this way, are increased by (SFF_sa)/2 compared to the values they would have when
 eFCAN is 0.
- When a Standard ID is received, the Acceptance Filter searches this table before the Standard Individual and Group tables.
- When a message is received for a controller and ID in this table, the Acceptance filter reads the received message out of the CAN controller and stores it in Acceptance Filter RAM, starting at (EndOfTable) + its IDindex*12.
- The format of such messages is shown in Table 257.

Chapter 12: LPC23XX CAN controllers CAN1/2

12.17.1 FullCAN message layout

Table 257. Format of automatically stored Rx messages

Address	-	-								2 0									9	8	7	6	5	4	3	2	1	0
0	_	R T R	00	00		SE [1:	 00	00			DL	_C		00	000			ID	.28	II	D.1	8						
+4	Rx	Da	ta 4	ļ			Rx	Da	ta 3	}				Rx	Da	ta 2	<u>-</u>				Rx	(Da	ata 1	1				
+8	Rx	Da	ta 8	3			Rx	Da	ta 7	•				Rx	Da	ta 6	6				Rx	(Da	ata (5				

The FF, RTR, and DLC fields are as described in Table 229.

Since the FullCAN message object section of the Look-up table RAM can be accessed both by the Acceptance Filter and the CPU, there is a method for insuring that no CPU reads from FullCAN message object occurs while the Acceptance Filter hardware is writing to that object.

For this purpose the Acceptance Filter uses a 3-state semaphore, encoded with the two semaphore bits SEM1 and SEM0 (see <u>Table 257 "Format of automatically stored Rx messages"</u>) for each message object. This mechanism provides the CPU with information about the current state of the Acceptance Filter activity in the FullCAN message object section.

The semaphore operates in the following manner:

Table 258. FullCAN semaphore operation

SEM1	SEM0	activity
0	1	Acceptance Filter is updating the content
1	1	Acceptance Filter has finished updating the content
0	0	CPU is in process of reading from the Acceptance Filter

Prior to writing the first data byte into a message object, the Acceptance Filter will write the FrameInfo byte into the according buffer location with SEM[1:0] = 01.

After having written the last data byte into the message object, the Acceptance Filter will update the semaphore bits by setting SEM[1:0] = 11.


Before reading a message object, the CPU should read SEM[1:0] to determine the current state of the Acceptance Filter activity therein. If SEM[1:0] = 01, then the Acceptance Filter is currently active in this message object. If SEM[1:0] = 11, then the message object is available to be read.

Before the CPU begins reading from the message object, it should clear SEM[1:0] = 00.

When the CPU is finished reading, it can check SEM[1:0] again. At the time of this final check, if SEM[1:0] = 01 or 11, then the Acceptance Filter has updated the message object during the time when the CPU reads were taking place, and the CPU should discard the data. If, on the other hand, SEM[1:0] = 00 as expected, then valid data has been successfully read by the CPU.

<u>Figure 50</u> shows how software should use the SEM field to ensure that all three words read from the message are all from the same received message.

Chapter 12: LPC23XX CAN controllers CAN1/2

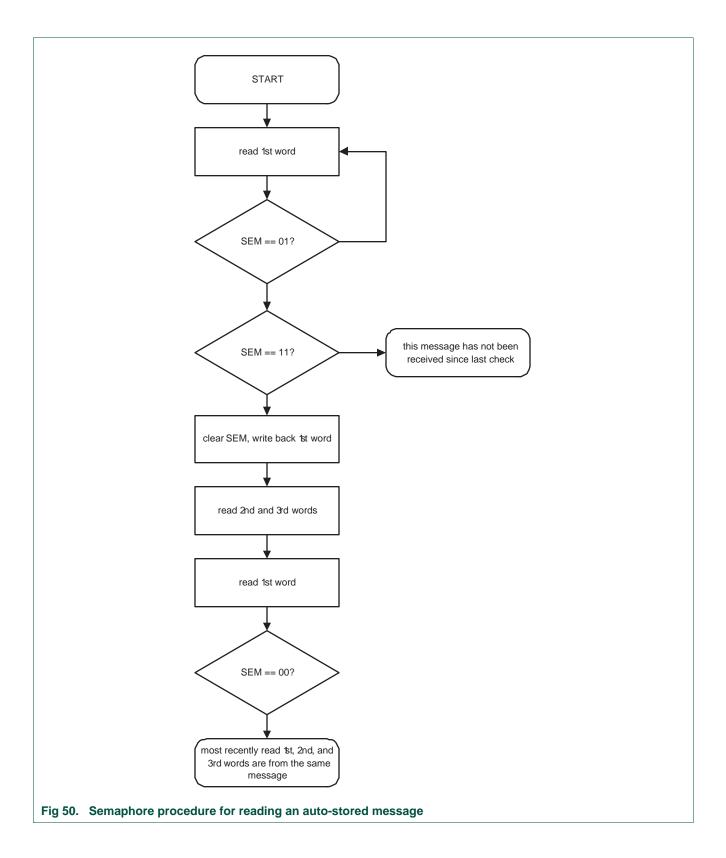

Chapter 12: LPC23XX CAN controllers CAN1/2

12.17.2 FullCAN interrupts

The CAN Gateway Block contains a 2 kB ID Look-up Table RAM. With this size a maximum number of 146 FullCAN objects can be defined if the whole Look-up Table RAM is used for FullCAN objects only. Only the first 64 FullCAN objects can be configured to participate in the interrupt scheme. It is still possible to define more than 64 FullCAN objects. The only difference is, that the remaining FullCAN objects will not provide a FullCAN interrupt.

The FullCAN Interrupt Register-set contains interrupt flags (IntPndx) for (pending) FullCAN receive interrupts. As soon as a FullCAN message is received, the according interrupt bit (IntPndx) in the FCAN Interrupt Register gets asserted. In case that the Global FullCAN Interrupt Enable bit is set, the FullCAN Receive Interrupt is passed to the Vectored Interrupt Controller.

Application Software has to solve the following:

- 1. Index/Object number calculation based on the bit position in the FCANIC Interrupt Register for more than one pending interrupt.
- Interrupt priority handling if more than one FullCAN receive interrupt is pending.


The software that covers the interrupt priority handling has to assign a receive interrupt priority to every FullCAN object. If more than one interrupt is pending, then the software has to decide, which received FullCAN object has to be served next.

To each FullCAN object a new FullCAN Interrupt Enable bit (FCANIntxEn) is added, so that it is possible to enable or disable FullCAN interrupts for each object individually. The new Message Lost flag (MsgLstx) is introduced to indicate whether more than one FullCAN message has been received since last time this message object was read by the CPU. The Interrupt Enable and the Message Lost bits reside in the existing Look-up Table RAM.

12.17.2.1 FullCAN message interrupt enable bit


In <u>Figure 51</u> 8 FullCAN Identifiers with their Source CAN Channel are defined in the FullCAN, Section. The new introduced FullCAN Message Interrupt enable bit can be used to enable for each FullCAN message an Interrupt.

Chapter 12: LPC23XX CAN controllers CAN1/2

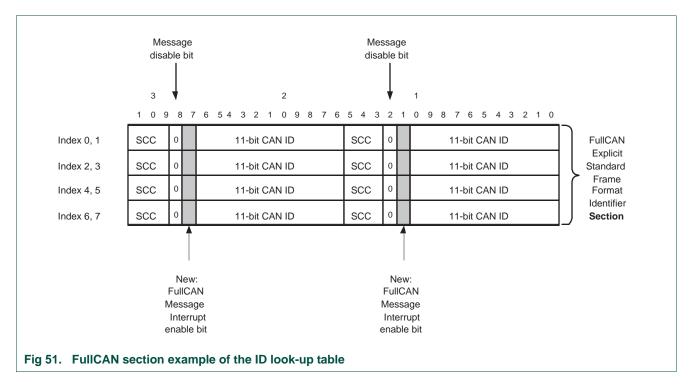

12.17.2.2 Message lost bit and CAN channel number

<u>Figure 52</u> is the detailed layout structure of one FullCAN message stored in the FullCAN message object section of the Look-up Table.

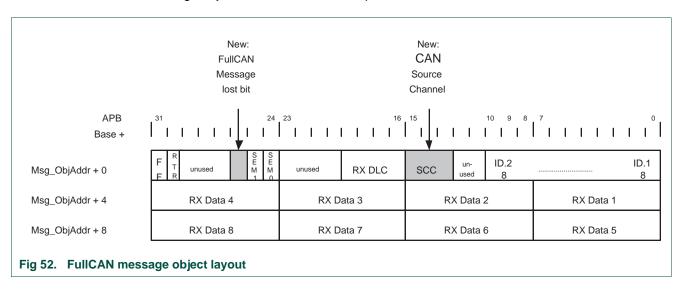

The new message lost bit (MsgLst) is introduced to indicate whether more than one FullCAN message has been received since last time this message object was read. For more information the CAN Source Channel (SCC) of the received FullCAN message is added to Message Object.

Chapter 12: LPC23XX CAN controllers CAN1/2

12.17.2.3 Setting the interrupt pending bits (IntPnd 63 to 0)

The interrupt pending bit (IntPndx) gets asserted in case of an accepted FullCAN message and if the interrupt of the according FullCAN Object is enabled (enable bit FCANIntxEn) is set).

During the **last write access** from the data storage of a FullCAN message object the interrupt pending bit of a FullCAN object (IntPndx) gets asserted.

12.17.2.4 Clearing the interrupt pending bits (IntPnd 63 to 0)

Each of the FullCAN Interrupt Pending requests gets cleared when the semaphore bits of a message object are cleared by Software (ARM CPU).

12.17.2.5 Setting the message lost bit of a FullCAN message object (MsgLost 63 to 0)

The Message Lost bit of a FullCAN message object gets asserted in case of an accepted FullCAN message and when the FullCAN Interrupt of the same object is asserted already.

During the **first write access** from the data storage of a FullCAN message object the Message Lost bit of a FullCAN object (MsgLostx) gets asserted if the interrupt pending bit is set already.

12.17.2.6 Clearing the message lost bit of a FullCAN message object (MsgLost 63 to 0)

The Message Lost bit of a FullCAN message object gets cleared when the FullCAN Interrupt of the same object is not asserted.

During the **first write access** from the data storage of a FullCAN message object the Message Lost bit of a FullCAN object (MsgLostx) gets cleared if the interrupt pending bit is not set.


12.17.3 Set and clear mechanism of the FullCAN interrupt

Special precaution is needed for the built-in set and clear mechanism of the FullCAN Interrupts. The following text illustrates how the already existing Semaphore Bits (see Section 12.17.1 "FullCAN message layout" for more details) and how the new introduced features (IntPndx, MsgLstx) will behave.

12.17.3.1 Scenario 1: Normal case, no message lost


<u>Figure 53</u> below shows a typical "normal" scenario in which an accepted FullCAN message is stored in the FullCAN Message Object Section. After storage the message is read out by Software (ARM CPU).

Chapter 12: LPC23XX CAN controllers CAN1/2

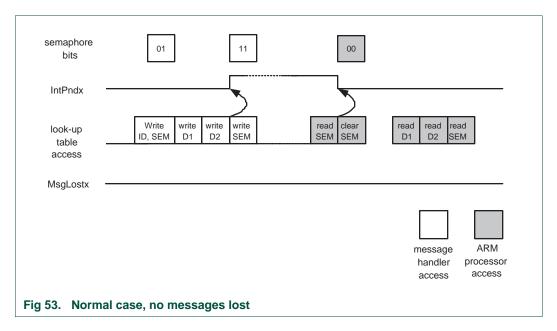

12.17.3.2 Scenario 2: Message lost


In this scenario a first FullCAN Message is stored and read out by Software (1st Object write and read). In a second course a second message is stored (2nd Object write) but not read out before a third message gets stored (3rd Object write). Since the FullCAN Interrupt of that Object (IntPndx) is already asserted, the Message Lost Signal gets asserted.

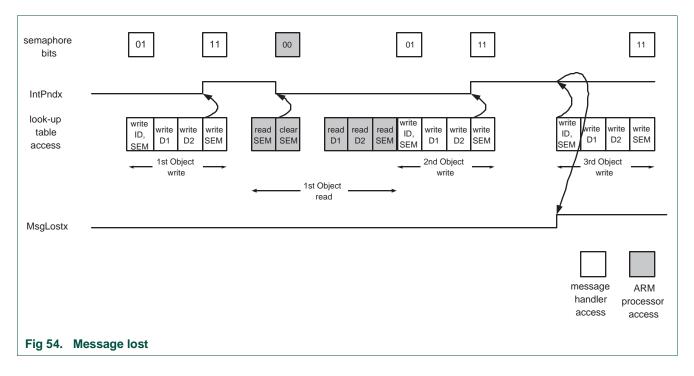

Chapter 12: LPC23XX CAN controllers CAN1/2

12.17.3.3 Scenario 3: Message gets overwritten indicated by Semaphore bits


This scenario is a special case in which the lost message is indicated by the existing semaphore bits. The scenario is entered, if during a Software read of a message object another new message gets stored by the message handler. In this case, the FullCAN Interrupt bit gets set for a second time with the 2nd Object write.

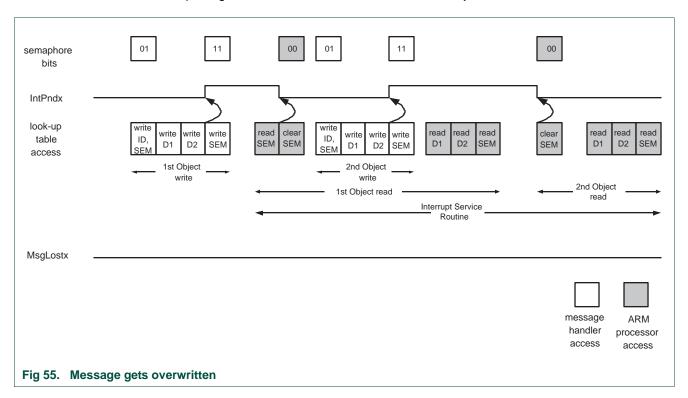

12.17.3.4 Scenario 3.1: Message gets overwritten indicated by Semaphore bits and Message Lost

This scenario is a sub-case to Scenario 3 in which the lost message is indicated by the existing semaphore bits and by Message Lost.


Chapter 12: LPC23XX CAN controllers CAN1/2

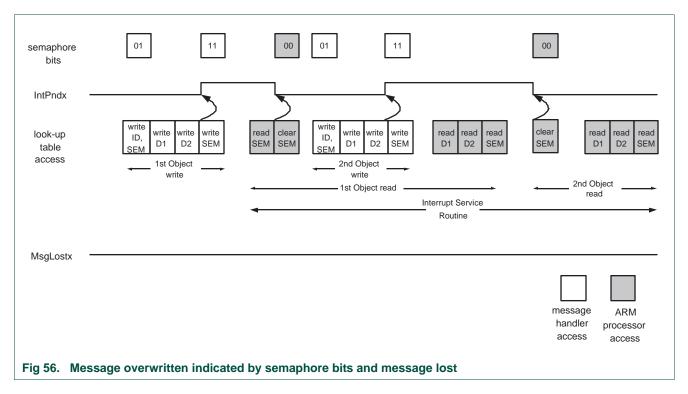

12.17.3.5 Scenario 3.2: Message gets overwritten indicated by Message Lost

This scenario is a sub-case to Scenario 3 in which the lost message is indicated by Message Lost.


Chapter 12: LPC23XX CAN controllers CAN1/2

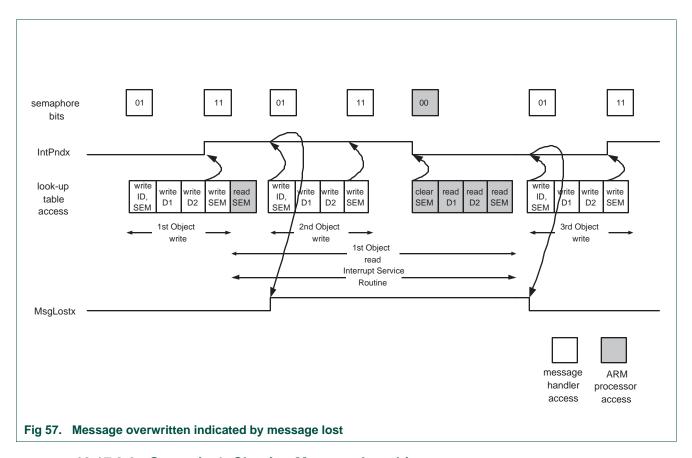

12.17.3.6 Scenario 4: Clearing Message Lost bit

This scenario is a special case in which the lost message bit of an object gets set during an overwrite of a none read message object (2nd Object write). The subsequent read out of that object by Software (1st Object read) clears the pending Interrupt. The 3rd Object write clears the Message Lost bit. Every "write ID, SEM" clears Message Lost bit if no pending Interrupt of that object is set.

Chapter 12: LPC23XX CAN controllers CAN1/2

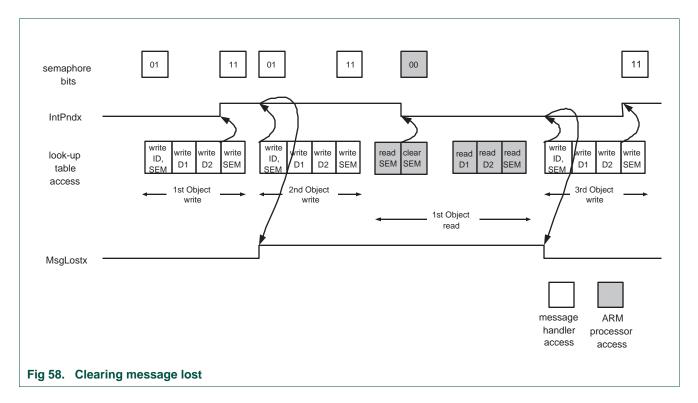

12.18 Examples of acceptance filter tables and ID index values

12.18.1 Example 1: only one section is used

SFF_sa	<	ENDofTable	OR
SFF_GRP_sa	<	ENDofTable	OR
EFF_sa	<	ENDofTable	OR
EFF GRP sa	<	ENDofTable	

The start address of a section is lower than the end address of all programmed CAN identifiers.

12.18.2 Example 2: all sections are used

SFF_sa	<	SFF_GRP_sa	AND
SFF_GRP_sa	<	EFF_sa	AND
EFF_sa	<	EFF_GRP_sa	AND
EFF GRP sa	<	ENDofTable	

In cases of a section not being used, the start address has to be set onto the value of the next section start address.

12.18.3 Example 3: more than one but not all sections are used

If the SFF group is not used, the start address of the SFF Group Section (SFF_GRP_sa register) has to be set to the same value of the next section start address, in this case the start address of the Explicit SFF Section (SFF_sa register).

Chapter 12: LPC23XX CAN controllers CAN1/2

In cases where explicit identifiers as well as groups of the identifiers are programmed, a CAN identifier search has to start in the explicit identifier section first. If no match is found, it continues the search in the group of identifier section. By this order it can be guaranteed that in case where an explicit identifier match is found, the succeeding software can directly proceed on this certain message whereas in case of a group of identifier match the succeeding software needs more steps to identify the message.

12.18.4 Configuration example 4

Suppose that the five Acceptance Filter address registers contain the values shown in the third column below. In this case each table contains the decimal number of words and entries shown in the next two columns, and the ID Index field of the CANRFS register can return the decimal values shown in the column ID Indexes for CAN messages whose Identifiers match the entries in that table.

Table 259. Example of Acceptance Filter Tables and ID index Values


Table	Register	Value	# Words	# Entire	ID Indexes
Standard Individual	SFF_sa	0x040	810	1610	0-1510
Standard Group	SFF_GRP_sa	0x060	410	410	16-1910
Extended Individual	EFF_sa	0x070	810	1610	20-5510
Extended Group	EFF_GRP_sa	0x100	810	1610	56-5710
	ENDofTable	0x110			

12.18.5 Configuration example 5

<u>Figure 59</u> below is a more detailed and graphic example of the address registers, table layout, and ID Index values. It shows:

- A Standard Individual table starting at the start of Acceptance Filter RAM and containing 26 Identifiers, followed by:
- A Standard Group table containing 12 ranges of Identifiers, followed by:
- An Extended Individual table containing 3 Identifiers, followed by:
- An Extended Group table containing 2 ranges of Identifiers.

Chapter 12: LPC23XX CAN controllers CAN1/2

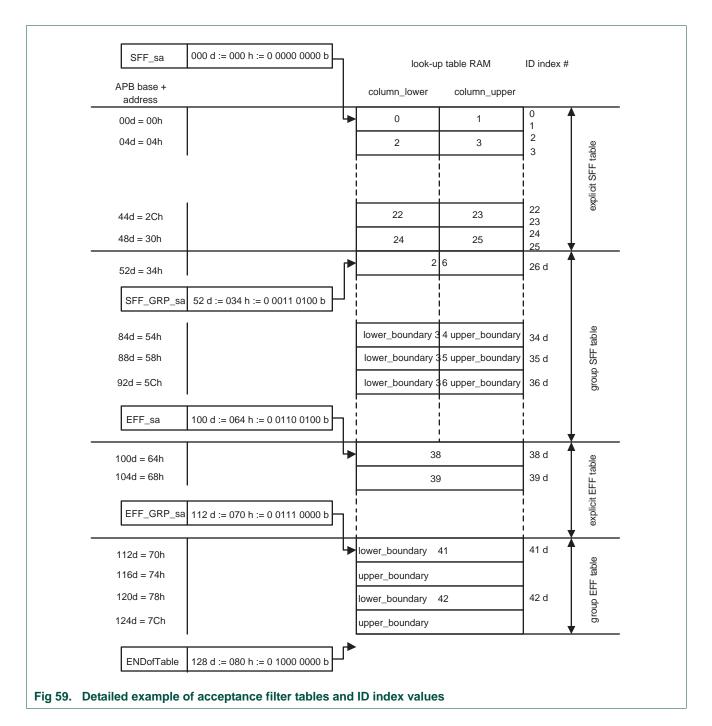

12.18.6 Configuration example 6

The Table below shows which sections and therefore which types of CAN identifiers are used and activated. The ID-Look-up Table configuration of this example is shown in Figure 60.

Chapter 12: LPC23XX CAN controllers CAN1/2

Table 260. Used ID-Look-up Table sections

ID-Look-up Table Section	Status
FullCAN	not activated
Explicit Standard Frame Format	activated
Group of Standard Frame Format	activated
Explicit Extended Frame Format	activated
Group of Extended Frame Format	activated

Explicit standard frame format identifier section (11-bit CAN ID):

The start address of the Explicit Standard Frame Format section is defined in the SFF_sa register with the value of 0x00. The end of this section is defined in the SFF_GRP_sa register. In the Explicit Standard Frame Format section of the ID Look-up Table two CAN Identifiers with their Source CAN Channels (SCC) share one 32-bit word. Not used or disabled CAN Identifiers can be marked by setting the message disable bit.

Group of standard frame format identifier section (11-bit CAN ID):

The start address of the Group of Standard Frame Format section is defined with the SFF_GRP_sa register with the value of 0x10. The end of this section is defined with the EFF_sa register. In the Group of Standard Frame Format section two CAN Identifiers with the same Source CAN Channel (SCC) share one 32-bit word and represent a range of CAN Identifiers to be accepted. Bit 31 down to 16 represents the lower boundary and bit 15 down to 0 represents the upper boundary of the range of CAN Identifiers. All Identifiers within this range (including the boundary identifiers) will be accepted. A whole group can be disabled and not used by the acceptance filter by setting the message disable bit in the upper and lower boundary identifier. To provide memory space for four Groups of Standard Frame Format identifiers, the EFF_sa register value is set to 0x20. The identifier group with the Index 9 of this section is not used and therefore disabled.


Explicit extended frame format identifier section (29-bit CAN ID, Figure 60)

The start address of the Explicit Extended Frame Format section is defined with the EFF_sa register with the value of 0x20. The end of this section is defined with the EFF_GRP_sa register. In the explicit Extended Frame Format section only one CAN Identifier with its Source CAN Channel (SCC) is programmed per address line. To provide memory space for four Explicit Extended Frame Format identifiers, the EFF_GRP_sa register value is set to 0x30.

Group of extended frame format identifier section (29-bit CAN ID, Figure 60)

The start address of the Group of Extended Frame Format is defined with the EFF_GRP_sa register with the value of 0x30. The end of this section is defined with the End of Table address register (ENDofTable). In the Group of Extended Frame Format section the boundaries are programmed with a pair of address lines; the first is the lower boundary, the second the upper boundary. To provide memory space for two Groups of Extended Frame Format Identifiers, the ENDofTable register value is set to 0x40.

Chapter 12: LPC23XX CAN controllers CAN1/2

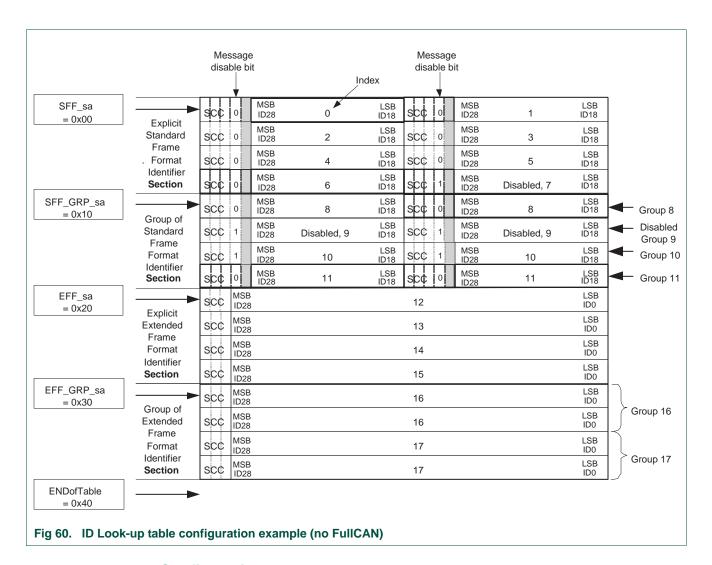

12.18.7 Configuration example 7

The Table below shows which sections and therefore which types of CAN identifiers are used and activated. The ID-Look-up Table configuration of this example is shown in Figure 61.

This example uses a typical configuration in which FullCAN as well as Explicit Standard Frame Format messages are defined. As described in <u>Section 12.16.1</u> "Acceptance filter <u>search algorithm</u>", acceptance filtering takes place in a certain order. With the enabled FullCAN section, the identifier screening process of the acceptance filter starts always in the FullCAN section first, before it continues with the rest of enabled sections.e disabled.

Table 261. Used ID-Look-up Table sections

ID-Look-up Table Section	Status			
FullCAN	activated and enabled			
Explicit Standard Frame Format	activated			
Group of Standard Frame Format	not activated			
Explicit Extended Frame Format	not activated			
Group of Extended Frame Format	not activated			

UM10211

Chapter 12: LPC23XX CAN controllers CAN1/2

FullCAN explicit standard frame format identifier section (11-bit CAN ID)

The start address of the FullCAN Explicit Standard Frame Format Identifier section is (automatically) set to 0x00. The end of this section is defined in the SFF_sa register. In the FullCAN ID section only identifiers of FullCAN Object are stored for acceptance filtering. In this section two CAN Identifiers with their Source CAN Channels (SCC) share one 32-bit word. Not used or disabled CAN Identifiers can be marked by setting the message disable bit. The FullCAN Object data for each defined identifier can be found in the FullCAN Message Object section. In case of an identifier match during the acceptance filter process, the received FullCAN message object data is moved from the Receive Buffer of the appropriate CAN Controller into the FullCAN Message Object section. To provide memory space for eight FullCAN, Explicit Standard Frame Format identifiers, the SFF_sa register value is set to 0x10. The identifier with the Index 1 of this section is not used and therefore disabled.


Explicit standard frame format identifier section (11-bit CAN ID)

The start address of the Explicit Standard Frame Format section is defined in the SFF_sa register with the value of 0x10. The end of this section is defined in the End of Table address register (ENDofTable). In the explicit Standard Frame Format section of the ID Look-up Table two CAN Identifiers with their Source CAN Channel (SCC) share one 32-bit word. Not used or disabled CAN Identifiers can be marked by setting the message disable bit. To provide memory space for eight Explicit Standard Frame Format identifiers, the ENDofTable register value is set to 0x20.

FullCAN message object data section

The start address of the FullCAN Message Object Data section is defined with the ENDofTable register. The number of enabled FullCAN identifiers is limited to the available memory space in the FullCAN Message Object Data section. Each defined FullCAN Message needs three address lines for the Message Data in the FullCAN Message Object Data section. The FullCAN Message Object section is organized in that way, that each Index number of the FullCAN Identifier section corresponds to a Message Object Number in the FullCAN Message Object section.

Chapter 12: LPC23XX CAN controllers CAN1/2

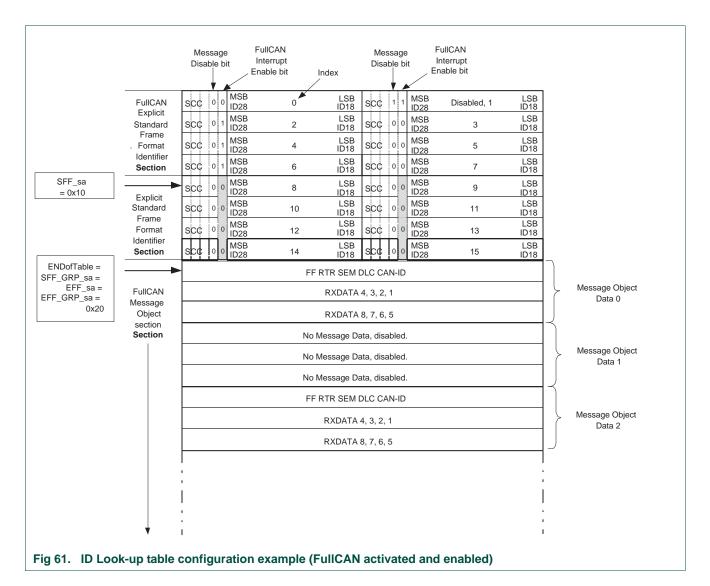

12.18.8 Look-up table programming guidelines

All identifier sections of the ID Look-up Table have to be programmed in such a way, that each active section is organized as a sorted list or table with an increasing order of the Source CAN Channel (SCC) together with CAN Identifier in each section.

SCC value equals CAN_controller - 1, i.e., SCC = 0 matches CAN1 and SCC = 1 matches CAN2.

In cases, where a syntax error in the ID Look-up Table is encountered, the Look-up Table address of the incorrect line is made available in the Look-up Table Error Address Register (LUTerrAd).

The reporting process in the Look-up Table Error Address Register (LUTerrAd) is a "run-time" process. Only those address lines with syntax error are reported, which were passed through the acceptance filtering process.

The following general rules for programming the Look-up Table apply:

Chapter 12: LPC23XX CAN controllers CAN1/2

- Each section has to be organized as a sorted list or table with an increasing order of the Source CAN Channel (SCC) in conjunction with the CAN Identifier (there is no exception for disabled identifiers).
- The upper and lower bound in a Group of Identifiers definition has to be from the same Source CAN Channel.
- To disable a Group of Identifiers the message disable bit has to be set for both, the upper and lower bound.

UM10211

Chapter 13: LPC23XX USB device controller

Rev. 4.1 — 5 September 2012

User manual

13.1 How to read this chapter

This chapter describes the USB device controller for the following LPC23XX parts:

- LPC2361/62
- LPC2364/66/68
- LPC2378
- LPC2387
- LPC2388

LPC2365/67 and LPC2377 do not include a USB interface.

13.2 Basic configuration

The USB controller is configured using the following registers:

- Power: In the PCONP register (<u>Table 56</u>), set bit PCUSB.
 Remark: On reset, the USB block is disabled (PCUSB = 0).
- 2. Clock: see Table 47.
- 3. Pins: Select USB pins and their modes in PINSEL0 to PINSEL5 and PINMODE0 to PINMODE5 (Section 9.5).
- 4. Wake-up: Use the INTWAKE register (<u>Table 55</u>) to enable activity on the USB bus port to wake up the microcontroller from Power-down mode.
- Interrupts: Interrupts are enabled in the VIC using the VICIntEnable register (Table 76).
- 6. Initialization: see Section 13.13.

13.3 Introduction

The Universal Serial Bus (USB) is a four-wire bus that supports communication between a host and one or more (up to 127) peripherals. The host controller allocates the USB bandwidth to attached devices through a token-based protocol. The bus supports hot plugging and dynamic configuration of the devices. All transactions are initiated by the host controller.

The host schedules transactions in 1 ms frames. Each frame contains a Start-Of-Frame (SOF) marker and transactions that transfer data to or from device endpoints. Each device can have a maximum of 16 logical or 32 physical endpoints. There are four types of transfers defined for the endpoints. Control transfers are used to configure the device. Interrupt transfers are used for periodic data transfer. Bulk transfers are used when the rate of transfer is not critical. Isochronous transfers have guaranteed delivery time but no error correction.

Chapter 13: LPC23XX USB device controller

For more information on the Universal Serial Bus, see the USB Implementers Forum web site.

The USB device controller on the LPC23xx enables full-speed (12 Mb/s) data exchange with a USB host controller.

Table 262. USB related acronyms, abbreviations, and definitions used in this chapter

Acronym/abbreviation	Description
AHB	Advanced High-performance bus
ATLE	Auto Transfer Length Extraction
ATX	Analog Transceiver
DD	DMA Descriptor
DDP	DMA Description Pointer
DMA	Direct Memory Access
EOP	End-Of-Packet
EP	Endpoint
EP_RAM	Endpoint RAM
FS	Full Speed
LED	Light Emitting Diode
LS	Low Speed
MPS	Maximum Packet Size
NAK	Negative Acknowledge
PLL	Phase Locked Loop
RAM	Random Access Memory
SOF	Start-Of-Frame
SIE	Serial Interface Engine
SRAM	Synchronous RAM
UDCA	USB Device Communication Area
USB	Universal Serial Bus

13.4 Features

- Fully compliant with the USB 2.0 specification (full speed).
- Supports 32 physical (16 logical) endpoints.
- Supports Control, Bulk, Interrupt and Isochronous endpoints.
- Scalable realization of endpoints at run time.
- Endpoint maximum packet size selection (up to USB maximum specification) by software at run time.
- Supports SoftConnect and GoodLink features.
- Supports DMA transfers on all non-control endpoints.
- Allows dynamic switching between CPU controlled and DMA modes.
- Double buffer implementation for Bulk and Isochronous endpoints.

Chapter 13: LPC23XX USB device controller

13.5 Fixed endpoint configuration

<u>Table 263</u> shows the supported endpoint configurations. Endpoints are realized and configured at run time using the Endpoint realization registers, documented in <u>Section 13.10.5 "Endpoint realization registers"</u>.


Table 263. Fixed endpoint configuration

		3			
Logical endpoint	Physical endpoint	Endpoint type	Direction	Packet size (bytes)	Double buffer
0	0	Control	Out	8, 16, 32, 64	No
0	1	Control	In	8, 16, 32, 64	No
1	2	Interrupt	Out	1 to 64	No
1	3	Interrupt	In	1 to 64	No
2	4	Bulk	Out	8, 16, 32, 64	Yes
2	5	Bulk	In	8, 16, 32, 64	Yes
3	6	Isochronous	Out	1 to 1023	Yes
3	7	Isochronous	In	1 to 1023	Yes
4	8	Interrupt	Out	1 to 64	No
4	9	Interrupt	In	1 to 64	No
5	10	Bulk	Out	8, 16, 32, 64	Yes
5	11	Bulk	In	8, 16, 32, 64	Yes
6	12	Isochronous	Out	1 to 1023	Yes
6	13	Isochronous	In	1 to 1023	Yes
7	14	Interrupt	Out	1 to 64	No
7	15	Interrupt	In	1 to 64	No
8	16	Bulk	Out	8, 16, 32, 64	Yes
8	17	Bulk	In	8, 16, 32, 64	Yes
9	18	Isochronous	Out	1 to 1023	Yes
9	19	Isochronous	In	1 to 1023	Yes
10	20	Interrupt	Out	1 to 64	No
10	21	Interrupt	In	1 to 64	No
11	22	Bulk	Out	8, 16, 32, 64	Yes
11	23	Bulk	In	8, 16, 32, 64	Yes
12	24	Isochronous	Out	1 to 1023	Yes
12	25	Isochronous	In	1 to 1023	Yes
13	26	Interrupt	Out	1 to 64	No
13	27	Interrupt	In	1 to 64	No
14	28	Bulk	Out	8, 16, 32, 64	Yes
14	29	Bulk	In	8, 16, 32, 64	Yes
15	30	Bulk	Out	8, 16, 32, 64	Yes
15	31	Bulk	In	8, 16, 32, 64	Yes

Chapter 13: LPC23XX USB device controller

13.6 Functional description

The architecture of the USB device controller is shown below in Figure 62.

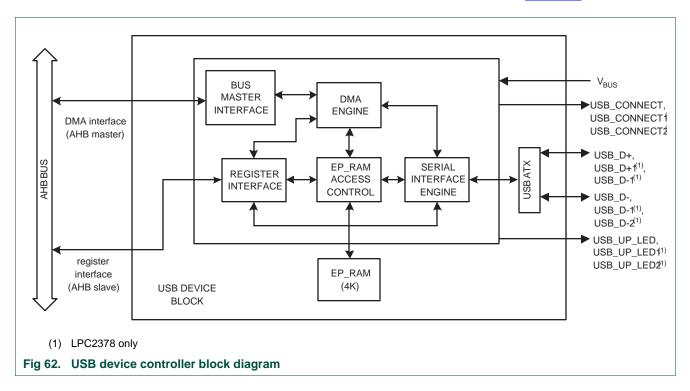

13.6.1 Analog transceiver

The USB Device Controller has a built-in analog transceiver (ATX). The USB ATX sends/receives the bi-directional D+ and D- signals of the USB bus.

13.6.2 Serial Interface Engine (SIE)

The SIE implements the full USB protocol layer. It is completely hardwired for speed and needs no firmware intervention. It handles transfer of data between the endpoint buffers in EP_RAM and the USB bus. The functions of this block include: synchronization pattern recognition, parallel/serial conversion, bit stuffing/de-stuffing, CRC checking/generation, PID verification/generation, address recognition, and handshake evaluation/generation.

13.6.3 Endpoint RAM (EP_RAM)

Each endpoint buffer is implemented as an SRAM based FIFO. The SRAM dedicated for this purpose is called the EP_RAM. Each realized endpoint has a reserved space in the EP_RAM. The total EP_RAM space required depends on the number of realized endpoints, the maximum packet size of the endpoint, and whether the endpoint supports double buffering.

13.6.4 EP RAM access control

The EP_RAM Access Control logic handles transfer of data from/to the EP_RAM and the three sources that can access it: the CPU (via the Register Interface), the SIE, and the DMA Engine.

Chapter 13: LPC23XX USB device controller

13.6.5 DMA engine and bus master interface

When enabled for an endpoint, the DMA Engine transfers data between RAM on the AHB bus and the endpoint's buffer in EP_RAM. A single DMA channel is shared between all endpoints. When transferring data, the DMA Engine functions as a master on the AHB bus through the bus master interface.

13.6.6 Register interface

The Register Interface allows the CPU to control the operation of the USB Device Controller. It also provides a way to write transmit data to the controller and read receive data from the controller.

13.6.7 SoftConnect

The connection to the USB is accomplished by bringing D+ (for a full-speed device) HIGH through a 1.5 kOhm pull-up resistor. The SoftConnect feature can be used to allow software to finish its initialization sequence before deciding to establish connection to the USB. Re-initialization of the USB bus connection can also be performed without having to unplug the cable.

To use the SoftConnect feature, the CONNECT signal should control an external switch that connects the 1.5 kOhm resistor between D+ and +3.3V. Software can then control the CONNECT signal by writing to the CON bit using the SIE Set Device Status command.

13.6.8 GoodLink

Good USB connection indication is provided through GoodLink technology. When the device is successfully enumerated and configured, the LED indicator will be permanently ON. During suspend, the LED will be OFF.

This feature provides a user-friendly indicator on the status of the USB device. It is a useful field diagnostics tool to isolate faulty equipment.

To use the GoodLink feature the UP_LED signal should control an LED. The UP_LED signal is controlled using the SIE Configure Device command.

13.7 Operational overview

Transactions on the USB bus transfer data between device endpoints and the host. The direction of a transaction is defined with respect to the host. OUT transactions transfer data from the host to the device. IN transactions transfer data from the device to the host. All transactions are initiated by the host controller.

For an OUT transaction, the USB ATX receives the bi-directional D+ and D- signals of the USB bus. The Serial Interface Engine (SIE) receives the serial data from the ATX and converts it into a parallel data stream. The parallel data is written to the corresponding endpoint buffer in the EP_RAM.

For IN transactions, the SIE reads the parallel data from the endpoint buffer in EP_RAM, converts it into serial data, and transmits it onto the USB bus using the USB ATX.

Chapter 13: LPC23XX USB device controller

Once data has been received or sent, the endpoint buffer can be read or written. How this is accomplished depends on the endpoint's type and operating mode. The two operating modes for each endpoint are Slave (CPU-controlled) mode, and DMA mode.

In Slave mode, the CPU transfers data between RAM and the endpoint buffer using the Register Interface. See <u>Section 13.14 "Slave mode operation"</u> for a detailed description of this mode.

In DMA mode, the DMA transfers data between RAM and the endpoint buffer. See Section 13.15 "DMA operation" for a detailed description of this mode.

13.8 Pin description

Table 264. USB external interface

Name	Direction	Description
V _{BUS}	I	$V_{\mbox{\scriptsize BUS}}$ status input. When this function is not enabled via its corresponding PINSEL register, it is driven HIGH internally.
USB_CONNECT, USB_CONNECT1[1], USB_CONNECT2[1]	0	SoftConnect control signal.
USB_UP_LED, USB_UP_LED1[1], USB_UP_LED2[1]	0	GoodLink LED control signal.
USB_D+, USB_D+1 ^[1] , USB_D+2 ^[1]	I/O	Positive differential data.
USB_D-, USB_D-1 ^[1] , USB_D-2 ^[1]	I/O	Negative differential data.

^[1] LPC2378 only.

13.8.1 LPC2378 usage note

For the LPC2378 only, the USB interface can be routed to either USB port1 (using USB_CONNECT1, USB_UP_LED1, USB_D+1, USB_D-1) or USB port2 (using USB_CONNECT2, USB_UP_LED2, USB_D+2, USB_D-2) to allow for more versatile pin multiplexing (see Section 13.10.1.1 "USB Port Select register (USBPortSel - 0xFFE0 C110 - LPC2378 only)").

13.8.2 LPC2388 usage note

It is not possible to configure both ports as USB device at the same time. To use both ports for USB transfer, it is recommended to configure port1 as the host and port2 as the device. See Section 6.3 "Connecting USB as one port host and one port device" on page 399 for details.

Remark: If port1 is configured as device and port2 is configured as host, the USB_PWRD2 pin function is not available for monitoring the bus power of the host.

Chapter 13: LPC23XX USB device controller

13.9 Clocking and power management

This section describes the clocking and power management features of the USB Device Controller.

13.9.1 Power requirements

The USB protocol insists on power management by the device. This becomes very critical if the device draws power from the bus (bus-powered device). The following constraints should be met by a bus-powered device:

- 1. A device in the non-configured state should draw a maximum of 100 mA from the bus.
- 2. A configured device can draw only up to what is specified in the Max Power field of the configuration descriptor. The maximum value is 500 mA.
- 3. A suspended device can draw a maximum of 500 μA.

13.9.2 Clocks

The USB device controller clocks are shown in Table 265

Table 265. USB device controller clock sources

Clock source	Description
AHB master clock	Clock for the AHB master bus interface and DMA
AHB slave clock	Clock for the AHB slave interface
usbclk	48 MHz clock from the USB clock divider, used to recover the 12 MHz clock from the USB bus

13.9.3 Power management support

To help conserve power, the USB device controller automatically disables the AHB master clock and usbclk when not in use.

When the USB Device Controller goes into the suspend state (bus is idle for 3 ms), the usbclk input to the device controller is automatically disabled, helping to conserve power. However, if software wishes to access the device controller registers, usbclk must be active. To allow access to the device controller registers while in the suspend state, the USBClkCtrl and USBClkSt registers are provided.

When software wishes to access the device controller registers, it should first ensure usbclk is enabled by setting DEV_CLK_EN in the USBClkCtrl register, and then poll the corresponding DEV_CLK_ON bit in USBClkSt until set. Once set, usbclk will remain enabled until DEV_CLK_EN is cleared by software.

When a DMA transfer occurs, the device controller automatically turns on the AHB master clock. Once asserted, it remains active for a minimum of 2 ms (2 frames), to help ensure that DMA throughput is not affected by turning off the AHB master clock. 2 ms after the last DMA access, the AHB master clock is automatically disabled to help conserve power. If desired, software also has the capability of forcing this clock to remain enabled using the USBClkCtrl register.

Chapter 13: LPC23XX USB device controller

Note that the AHB slave clock is always enabled as long as the PCUSB bit of PCONP is set. When the device controller is not in use, all of the device controller clocks may be disabled by clearing PCUSB.

The USB_NEED_CLK signal is used to facilitate going into and waking up from chip Power Down mode. USB_NEED_CLK is asserted if any of the bits of the USBClkSt register are asserted.

After entering the suspend state with DEV_CLK_EN and AHB_CLK_EN cleared, the DEV_CLK_ON and AHB_CLK_ON will be cleared when the corresponding clock turns off. When both bits are zero, USB_NEED_CLK will be low, indicating that the chip can be put into Power Down mode by writing to the PCON register. The status of USB_NEED_CLK can be read from the USBIntSt register.

Any bus activity in the suspend state will cause the USB_NEED_CLK signal to be asserted. When the USB is configured to be a wake-up source from Power Down (USBWAKE bit set in the INTWAKE register), the assertion of USB_NEED_CLK causes the chip to wake up from Power Down mode.

13.9.4 Remote wake-up

The USB device controller supports software initiated remote wake-up. Remote wake-up involves resume signaling on the USB bus initiated from the device. This is done by clearing the SUS bit in the SIE Set Device Status register. Before writing into the register, all the clocks to the device controller have to be enabled using the USBClkCtrl register.

13.10 Register description

<u>Table 266</u> shows the USB Device Controller registers directly accessible by the CPU. The Serial Interface Engine (SIE) has other registers that are indirectly accessible via the SIE command registers. See <u>Section 13.12 "Serial interface engine command description"</u> for more info.

Table 266. USB device register map

Name	Description	Access	Reset value[1]	Address	
Port select register (LI	PC2378 only)				
USBPortSel	USB Port Select	R/W	0x0000 0000	0xFFE0 C110	
Clock control registers	s				
USBClkCtrl	USB Clock Control	R/W	0x0000 0000	0xFFE0 CFF4	
USBClkSt	USB Clock Status	RO	0x0000 0000	0xFFE0 CFF8	
Device interrupt registers					
USBIntSt	USB Interrupt Status	R/W	0x8000 0000	0xE01F C1C0	
USBDevIntSt	USB Device Interrupt Status	RO	0x0000 0010	0xFFE0 C200	
USBDevIntEn	USB Device Interrupt Enable	R/W	0x0000 0000	0xFFE0 C204	
USBDevIntClr	USB Device Interrupt Clear	WO	0x0000 0000	0xFFE0 C208	
USBDevIntSet	USB Device Interrupt Set	WO	0x0000 0000	0xFFE0 C20C	
USBDevIntPri	USB Device Interrupt Priority	WO	0x00	0xFFE0 C22C	
Endpoint interrupt reg	isters				
USBEpIntSt	USB Endpoint Interrupt Status	RO	0x0000 0000	0xFFE0 C230	

UM10211

Chapter 13: LPC23XX USB device controller

Table 266. USB device register map

Name	Description	Access	Reset value[1]	Address
USBEpIntEn	USB Endpoint Interrupt Enable	R/W	0x0000 0000	0xFFE0 C234
USBEpIntClr	USB Endpoint Interrupt Clear	WO	0x0000 0000	0xFFE0 C238
USBEpIntSet	USB Endpoint Interrupt Set	WO	0x0000 0000	0xFFE0 C23C
USBEpIntPri	USB Endpoint Priority	WO[3]	0x0000 0000	0xFFE0 C240
Endpoint realization re	egisters			
USBReEp	USB Realize Endpoint	R/W	0x0000 0003	0xFFE0 C244
USBEpInd	USB Endpoint Index	WO[3]	0x0000 0000	0xFFE0 C248
USBMaxPSize	USB MaxPacketSize	R/W	0x0000 0008	0xFFE0 C24C
USB transfer registers	3			
USBRxData	USB Receive Data	RO	0x0000 0000	0xFFE0 C218
USBRxPLen	USB Receive Packet Length	RO	0x0000 0000	0xFFE0 C220
USBTxData	USB Transmit Data	WO[3]	0x0000 0000	0xFFE0 C21C
USBTxPLen	USB Transmit Packet Length	WO[3]	0x0000 0000	0xFFE0 C224
USBCtrl	USB Control	R/W	0x0000 0000	0xFFE0 C228
SIE Command register	rs			
USBCmdCode	USB Command Code	WO[3]	0x0000 0000	0xFFE0 C210
USBCmdData	USB Command Data	RO	0x0000 0000	0xFFE0 C214
DMA registers				
USBDMARSt	USB DMA Request Status	RO	0x0000 0000	0xFFE0 C250
USBDMARCIr	USB DMA Request Clear	WO[3]	0x0000 0000	0xFFE0 C254
USBDMARSet	USB DMA Request Set	WO[3]	0x0000 0000	0xFFE0 C258
USBUDCAH	USB UDCA Head	R/W	0x0000 0000	0xFFE0 C280
USBEpDMASt	USB Endpoint DMA Status	RO	0x0000 0000	0xFFE0 C284
USBEpDMAEn	USB Endpoint DMA Enable	WO[3]	0x0000 0000	0xFFE0 C288
USBEpDMADis	USB Endpoint DMA Disable	WO[3]	0x0000 0000	0xFFE0 C28C
USBDMAIntSt	USB DMA Interrupt Status	RO	0x0000 0000	0xFFE0 C290
USBDMAIntEn	USB DMA Interrupt Enable	R/W	0x0000 0000	0xFFE0 C294
USBEoTIntSt	USB End of Transfer Interrupt Status	RO	0x0000 0000	0xFFE0 C2A0
USBEoTIntClr	USB End of Transfer Interrupt Clear	WO[3]	0x0000 0000	0xFFE0 C2A4
USBEoTIntSet	USB End of Transfer Interrupt Set	WO[3]	0x0000 0000	0xFFE0 C2A8
USBNDDRIntSt	USB New DD Request Interrupt Status	RO	0x0000 0000	0xFFE0 C2AC
USBNDDRIntClr	USB New DD Request Interrupt Clear	WO[3]	0x0000 0000	0xFFE0 C2B0
USBNDDRIntSet	USB New DD Request Interrupt Set	WO[3]	0x0000 0000	0xFFE0 C2B4
USBSysErrIntSt	USB System Error Interrupt Status	RO	0x0000 0000	0xFFE0 C2B8
USBSysErrIntClr	USB System Error Interrupt Clear	WO[3]	0x0000 0000	0xFFE0 C2BC
USBSysErrIntSet	USB System Error Interrupt Set	WO[3]	0x0000 0000	0xFFE0 C2C0

^[1] Reset value reflects the data stored in used bits only. It does not include reserved bits content.

^[2] The USBPortSel register is identical to the OTGStCtrl register (see <u>Table 338</u>). In device-only operations only bits 0 and 1 of this register are used to control the routing of USB pins to port 1 or port 2.

^[3] Reading WO register will return an invalid value.

Chapter 13: LPC23XX USB device controller

13.10.1 Port select register

13.10.1.1 USB Port Select register (USBPortSel - 0xFFE0 C110 - LPC2378 only)

This register selects the USB port pins the USB device signals are routed to. USBPortSel is a read/write register.

Table 267. USB Port Select register (USBPortSel - address 0xFFE0 C110) bit description

Bit	Symbol	Value	Description	Reset value
1:0	PORTSEL	0x0	The USB device controller signals are mapped to the U1 port: USB_CONNECT1, USB_UP_LED1, USB_D+1, USB_D-1.	0
		0x3	The USB device controller signals are mapped to the U2 port:USB_CONNECT2, USB_UP_LED2, USB_D+2, USB_D-2.	
31:2	-	-	Reserved, user software should not write ones to reserved bits. The value read from a reserved bit is not defined.	NA

13.10.2 Clock control registers

13.10.2.1 USB Clock Control register (USBClkCtrl - 0xFFE0 CFF4)

This register controls the clocking of the USB Device Controller. Whenever software wants to access the device controller registers, both DEV_CLK_EN and AHB_CLK_EN must be set. The PORTSEL_CLK_EN bit need only be set when accessing the USBPortSel register.

The software does not have to repeat this exercise for every register access, provided that the corresponding USBClkCtrl bits are already set. Note that this register is functional only when the PCUSB bit of PCONP is set; when PCUSB is cleared, all clocks to the device controller are disabled irrespective of the contents of this register. USBClkCtrl is a read/write register.

Table 268. USBClkCtrl register (USBClkCtrl - address 0xFFE0 CFF4) bit description

Bit	Symbol	Description	Reset value
0	-	Reserved, user software should not write ones to reserved bits. The value read from a reserved bit is not defined.	NA
1	DEV_CLK_EN	Device clock enable. Enables the usbclk input to the device controller	0
2	-	Reserved, user software should not write ones to reserved bits. The value read from a reserved bit is not defined.	NA
3	PORTSEL_CLK_EN	Port select register clock enable(LPC2378 only).	NA
4	AHB_CLK_EN	AHB clock enable	0
31:5	-	Reserved, user software should not write ones to reserved bits. The value read from a reserved bit is not defined.	NA

Chapter 13: LPC23XX USB device controller

13.10.2.2 USB Clock Status register (USBClkSt - 0xFFE0 CFF8)

This register holds the clock availability status. The bits of this register are ORed together to form the USB_NEED_CLK signal. When enabling a clock via USBClkCtrl, software should poll the corresponding bit in USBClkSt. If it is set, then software can go ahead with the register access. Software does not have to repeat this exercise for every access, provided that the USBClkCtrl bits are not disturbed. USBClkSt is a read only register.

Table 269. USB Clock Status register (USBClkSt - 0xFFE0 CFF8) bit description

Bit	Symbol	Description	Reset value
0	-	Reserved, user software should not write ones to reserved bits. The value read from a reserved bit is not defined.	NA
1	DEV_CLK_ON	Device clock on. The usbclk input to the device controller is active.	0
2	-	Reserved, user software should not write ones to reserved bits. The value read from a reserved bit is not defined.	NA
3	PORTSEL_CLK_ON	Port select register clock on (LPC2378 only).	NA
4	AHB_CLK_ON	AHB clock on.	0
31:5	-	Reserved, user software should not write ones to reserved bits. The value read from a reserved bit is not defined.	NA

13.10.3 Device interrupt registers

13.10.3.1 USB Interrupt Status register (USBIntSt - 0xE01F C1C0)

The USB Device Controller has three interrupt lines. This register allows software to determine their status with a single read operation. All three interrupt lines are ORed together to a single channel of the vectored interrupt controller. This register also contains the USB_NEED_CLK status and EN_USB_INTS control bits. USBIntSt is a read/write register.

Table 270. USB Interrupt Status register (USBIntSt - address 0xE01F C1C0) bit description

Bit	Symbol	Description	Reset
			value
0	USB_INT_REQ_LP	Low priority interrupt line status. This bit is read only.	0
1	USB_INT_REQ_HP	High priority interrupt line status. This bit is read only.	0
2	USB_INT_REQ_DMA	DMA interrupt line status. This bit is read only.	0
7:3	-	Reserved, user software should not write ones to reserved bits. The value read from a reserved bit is not defined.	NA

Chapter 13: LPC23XX USB device controller

Table 270. USB Interrupt Status register (USBIntSt - address 0xE01F C1C0) bit description

Bit	Symbol	Description	Reset value
8	USB_NEED_CLK	USB need clock indicator. This bit is set to 1 when USB activity or a change of state on the USB data pins is detected, and it indicates that a PLL supplied clock of 48 MHz is needed. Once USB_NEED_CLK becomes one, it resets to zero 5 ms after the last packet has been received/sent, or 2 ms after the Suspend Change (SUS_CH) interrupt has occurred. A change of this bit from 0 to 1 can wake up the microcontroller if activity on the USB bus is selected to wake up the part from the Power Down mode (see <a (interrupt="" (intwake="" -="" 0xe01f="" c144)"="" details)."="" for="" href="Section 4.8.8" register="" wakeup="">Section 4.8.9 "Power Control for Peripherals register (PCONP - 0xE01F C0C4)" for considerations about the PLL and invoking the Power Down mode. This bit is read only.	0
30:9	-	Reserved, user software should not write ones to reserved bits. The value read from a reserved bit is not defined.	NA
31	EN_USB_INTS	Enable all USB interrupts. When this bit is cleared, the Vectored Interrupt Controller does not see the ORed output of the USB interrupt lines.	1

13.10.3.2 USB Device Interrupt Status register (USBDevIntSt - 0xFFE0 C200)

The USBDevIntSt register holds the status of each interrupt. A 0 indicates no interrupt and 1 indicates the presence of the interrupt. USBDevIntSt is a read only register.

Table 271. USB Device Interrupt Status register (USBDevIntSt - address 0xFFE0 C200) bit allocation Reset value: 0x0000 0000

Bit	31	30	29	28	27	26	25	24
Symbol	-	-	-	-	-	-	-	-
Bit	23	22	21	20	19	18	17	16
Symbol	-	-	-	-	-	-	-	-
Bit	15	14	13	12	11	10	9	8
Symbol	-	-	-	-	-	-	ERR_INT	EP_RLZED
Bit	7	6	5	4	3	2	1	0
Symbol	TxENDPKT	Rx ENDPKT	CDFULL	CCEMPTY	DEV_STAT	EP_SLOW	EP_FAST	FRAME

Table 272. USB Device Interrupt Status register (USBDevIntSt - address 0xFFE0 C200) bit description

Bit	Symbol	Description	Reset value
0	FRAME	The frame interrupt occurs every 1 ms. This is used in isochronous packet transfers.	0
1	EP_FAST	Fast endpoint interrupt. If an Endpoint Interrupt Priority register (USBEpIntPri) bit is set, the corresponding endpoint interrupt will be routed to this bit.	0
2	EP_SLOW	Slow endpoints interrupt. If an Endpoint Interrupt Priority Register (USBEpIntPri) bit is not set, the corresponding endpoint interrupt will be routed to this bit.	0
3	DEV_STAT	Set when USB Bus reset, USB suspend change or Connect change event occurs. Refer to Section 13.12.6 "Set Device Status (Command: 0xFE, Data: write 1 byte)" on page 355.	0
4	CCEMPTY	The command code register (USBCmdCode) is empty (New command can be written).	1
5	CDFULL	Command data register (USBCmdData) is full (Data can be read now).	0

UM10211

Chapter 13: LPC23XX USB device controller

Table 272. USB Device Interrupt Status register (USBDevIntSt - address 0xFFE0 C200) bit description

Bit	Symbol	Description	Reset value
6	RxENDPKT	The current packet in the endpoint buffer is transferred to the CPU.	0
7	TxENDPKT	The number of data bytes transferred to the endpoint buffer equals the number of bytes programmed in the TxPacket length register (USBTxPLen).	0
8	EP_RLZED	Endpoints realized. Set when Realize Endpoint register (USBReEp) or MaxPacketSize register (USBMaxPSize) is updated and the corresponding operation is completed.	0
9	ERR_INT	Error Interrupt. Any bus error interrupt from the USB device. Refer to Section 13.12.9 "Read Error Status (Command: 0xFB, Data: read 1 byte)" on page 357	0
31:10	-	Reserved, user software should not write ones to reserved bits. The value read from a reserved bit is not defined.	NA

13.10.3.3 USB Device Interrupt Enable register (USBDevIntEn - 0xFFE0 C204)

Writing a one to a bit in this register enables the corresponding bit in USBDevIntSt to generate an interrupt on one of the interrupt lines when set. By default, the interrupt is routed to the USB_INT_REQ_LP interrupt line. Optionally, either the EP_FAST or FRAME interrupt may be routed to the USB_INT_REQ_HP interrupt line by changing the value of USBDevIntPri. USBDevIntEn is a read/write register.

Table 273. USB Device Interrupt Enable register (USBDevIntEn - address 0xFFE0 C204) bit allocation Reset value: 0x0000 0000

Troot value. Shoot door								
Bit	31	30	29	28	27	26	25	24
Symbol	-	-	-	-	-	-	-	-
Bit	23	22	21	20	19	18	17	16
Symbol	-	-	-	-	-	-	-	-
Bit	15	14	13	12	11	10	9	8
Symbol	-	-	-	-	-	-	ERR_INT	EP_RLZED
Bit	7	6	5	4	3	2	1	0
Symbol	TxENDPKT	Rx ENDPKT	CDFULL	CCEMPTY	DEV_STAT	EP_SLOW	EP_FAST	FRAME

Table 274. USB Device Interrupt Enable register (USBDevIntEn - address 0xFFE0 C204) bit description

Bit	Symbol	Value	Description	Reset value
31:0	See	0	No interrupt is generated.	0
	USBDevIntEn bit allocation table above	1	An interrupt will be generated when the corresponding bit in the Device Interrupt Status (USBDevIntSt) register (Table 271) is set. By default, the interrupt is routed to the USB_INT_REQ_LP interrupt line. Optionally, either the EP_FAST or FRAME interrupt may be routed to the USB_INT_REQ_HP interrupt line by changing the value of USBDevIntPri.	

13.10.3.4 USB Device Interrupt Clear register (USBDevIntClr - 0xFFE0 C208)

Writing one to a bit in this register clears the corresponding bit in USBDevIntSt. Writing a zero has no effect.

Remark: Before clearing the EP_SLOW or EP_FAST interrupt bits, the corresponding endpoint interrupts in USBEpIntSt should be cleared.

USBDevIntClr is a write only register.

Chapter 13: LPC23XX USB device controller

Table 275. USB Device Interrupt Clear register (USBDevIntClr - address 0xFFE0 C208) bit allocation

Reset value: 0x0000 0000

Bit	31	30	29	28	27	26	25	24
Symbol	-	-	-	-	-	-	-	-
Bit	23	22	21	20	19	18	17	16
Symbol	-	-	-	-	-	-	-	-
Bit	15	14	13	12	11	10	9	8
Symbol	-	-	-	-	-	-	ERR_INT	EP_RLZED
Bit	7	6	5	4	3	2	1	0
Symbol	TxENDPKT	Rx ENDPKT	CDFULL	CCEMPTY	DEV_STAT	EP_SLOW	EP_FAST	FRAME

Table 276. USB Device Interrupt Clear register (USBDevIntClr - address 0xFFE0 C208) bit description

Bit	Symbol	Value	Description	Reset value		
31:0 See		- · · · · · · · · · · · · · · · · · · ·				
	USBDevIntCIr bit allocation table above	1	The corresponding bit in USBDevIntSt (Section 13.10.3.2) is cleared.			

13.10.3.5 USB Device Interrupt Set register (USBDevIntSet - 0xFFE0 C20C)

Writing one to a bit in this register sets the corresponding bit in the USBDevIntSt. Writing a zero has no effect

USBDevIntSet is a write only register.

Table 277. USB Device Interrupt Set register (USBDevIntSet - address 0xFFE0 C20C) bit allocation Reset value: 0x0000 0000

Bit	31	30	29	28	27	26	25	24
Symbol	-	-	-	-	-	-	-	-
Bit	23	22	21	20	19	18	17	16
Symbol	-	-	-	-	-	-	-	-
Bit	15	14	13	12	11	10	9	8
Symbol	-	-	-	-	-	-	ERR_INT	EP_RLZED
Bit	7	6	5	4	3	2	1	0
Symbol	TxENDPKT	Rx ENDPKT	CDFULL	CCEMPTY	DEV_STAT	EP_SLOW	EP_FAST	FRAME

Table 278. USB Device Interrupt Set register (USBDevIntSet - address 0xFFE0 C20C) bit description

Bit	Symbol	Value	Description	Reset value
	See	0	No effect.	0
	USBDevIntSet bit allocation table above	1	The corresponding bit in USBDevIntSt (Section 13.10.3.2) is set.	

Chapter 13: LPC23XX USB device controller

13.10.3.6 USB Device Interrupt Priority register (USBDevIntPri - 0xFFE0 C22C)

Writing one to a bit in this register causes the corresponding interrupt to be routed to the USB_INT_REQ_HP interrupt line. Writing zero causes the interrupt to be routed to the USB_INT_REQ_LP interrupt line. Either the EP_FAST or FRAME interrupt can be routed to USB_INT_REQ_HP, but not both. If the software attempts to set both bits to one, no interrupt will be routed to USB_INT_REQ_HP. USBDevIntPri is a write only register.

Table 279. USB Device Interrupt Priority register (USBDevIntPri - address 0xFFE0 C22C) bit description

Bit	Symbol	Value	Description	Reset value	
0	FRAME	0	FRAME interrupt is routed to USB_INT_REQ_LP.	0	
		1	FRAME interrupt is routed to USB_INT_REQ_HP.		
1	EP_FAST	0	EP_FAST interrupt is routed to USB_INT_REQ_LP.	0	
		1	EP_FAST interrupt is routed to USB_INT_REQ_HP.		
7:2	-	-	Reserved, user software should not write ones to reserved bits. The value read from a reserved bit is not defined.	NA	

13.10.4 Endpoint interrupt registers

The registers in this group facilitate handling of endpoint interrupts. Endpoint interrupts are used in Slave mode operation.

13.10.4.1 USB Endpoint Interrupt Status register (USBEpIntSt - 0xFFE0 C230)

Each physical non-isochronous endpoint is represented by a bit in this register to indicate that it has generated an interrupt. All non-isochronous OUT endpoints generate an interrupt when they receive a packet without an error. All non-isochronous IN endpoints generate an interrupt when a packet is successfully transmitted, or when a NAK handshake is sent on the bus and the interrupt on NAK feature is enabled (see Section 13.12.3 "Set Mode (Command: 0xF3, Data: write 1 byte)" on page 354). A bit set to one in this register causes either the EP_FAST or EP_SLOW bit of USBDevIntSt to be set depending on the value of the corresponding bit of USBEpDevIntPri. USBEpIntSt is a read only register.

Note that for Isochronous endpoints, handling of packet data is done when the FRAME interrupt occurs.

Table 280. USB Endpoint Interrupt Status register (USBEpIntSt - address 0xFFE0 C230) bit allocation Reset value: 0x0000 0000

Bit	31	30	29	28	27	26	25	24
Symbol	EP15TX	EP15RX	EP14TX	EP14RX	EP13TX	EP13RX	EP12TX	EP12RX
Bit	23	22	21	20	19	18	17	16
Symbol	EP11TX	EP11RX	EP10TX	EP10RX	EP9TX	EP9RX	EP8TX	EP8RX
Bit	15	14	13	12	11	10	9	8
Symbol	EP7TX	EP7RX	EP6TX	EP6RX	EP5TX	EP5RX	EP4TX	EP4RX
Bit	7	6	5	4	3	2	1	0
Symbol	EP3TX	EP3RX	EP2TX	EP2RX	EP1TX	EP1RX	EP0TX	EP0RX

Chapter 13: LPC23XX USB device controller

Table 281. USB Endpoint Interrupt Status register (USBEpIntSt - address 0xFFE0 C230) bit description

Bit	Symbol	Description	Reset value
0	EP0RX	Endpoint 0, Data Received Interrupt bit.	0
1	EP0TX	Endpoint 0, Data Transmitted Interrupt bit or sent a NAK.	0
2	EP1RX	Endpoint 1, Data Received Interrupt bit.	0
3	EP1TX	Endpoint 1, Data Transmitted Interrupt bit or sent a NAK.	0
4	EP2RX	Endpoint 2, Data Received Interrupt bit.	0
5	EP2TX	Endpoint 2, Data Transmitted Interrupt bit or sent a NAK.	0
6	EP3RX	Endpoint 3, Isochronous endpoint.	NA
7	EP3TX	Endpoint 3, Isochronous endpoint.	NA
8	EP4RX	Endpoint 4, Data Received Interrupt bit.	0
9	EP4TX	Endpoint 4, Data Transmitted Interrupt bit or sent a NAK.	0
10	EP5RX	Endpoint 5, Data Received Interrupt bit.	0
11	EP5TX	Endpoint 5, Data Transmitted Interrupt bit or sent a NAK.	0
12	EP6RX	Endpoint 6, Isochronous endpoint.	NA
13	EP6TX	Endpoint 6, Isochronous endpoint.	NA
14	EP7RX	Endpoint 7, Data Received Interrupt bit.	0
15	EP7TX	Endpoint 7, Data Transmitted Interrupt bit or sent a NAK.	0
16	EP8RX	Endpoint 8, Data Received Interrupt bit.	0
17	EP8TX	Endpoint 8, Data Transmitted Interrupt bit or sent a NAK.	0
18	EP9RX	Endpoint 9, Isochronous endpoint.	NA
19	EP9TX	Endpoint 9, Isochronous endpoint.	NA
20	EP10RX	Endpoint 10, Data Received Interrupt bit.	0
21	EP10TX	Endpoint 10, Data Transmitted Interrupt bit or sent a NAK.	0
22	EP11RX	Endpoint 11, Data Received Interrupt bit.	0
23	EP11TX	Endpoint 11, Data Transmitted Interrupt bit or sent a NAK.	0
24	EP12RX	Endpoint 12, Isochronous endpoint.	NA
25	EP12TX	Endpoint 12, Isochronous endpoint.	NA
26	EP13RX	Endpoint 13, Data Received Interrupt bit.	0
27	EP13TX	Endpoint 13, Data Transmitted Interrupt bit or sent a NAK.	0
28	EP14RX	Endpoint 14, Data Received Interrupt bit.	0
29	EP14TX	Endpoint 14, Data Transmitted Interrupt bit or sent a NAK.	0
30	EP15RX	Endpoint 15, Data Received Interrupt bit.	0
31	EP15TX	Endpoint 15, Data Transmitted Interrupt bit or sent a NAK.	0

13.10.4.2 USB Endpoint Interrupt Enable register (USBEpIntEn - 0xFFE0 C234)

Setting a bit to 1 in this register causes the corresponding bit in USBEpIntSt to be set when an interrupt occurs for the associated endpoint. Setting a bit to 0 causes the corresponding bit in USBDMARSt to be set when an interrupt occurs for the associated endpoint. USBEpIntEn is a read/write register.

Chapter 13: LPC23XX USB device controller

Table 282. USB Endpoint Interrupt Enable register (USBEpIntEn - address 0xFFE0 C234) bit allocation

Reset value: 0x0000 0000

Bit	31	30	29	28	27	26	25	24
Symbol	EP15TX	EP15RX	EP14TX	EP14RX	EP13TX	EP13RX	EP12TX	EP12RX
Bit	23	22	21	20	19	18	17	16
Symbol	EP11TX	EP11RX	EP10TX	EP10RX	EP9TX	EP9RX	EP8TX	EP8RX
Bit	15	14	13	12	11	10	9	8
Symbol	EP7TX	EP7RX	EP6TX	EP6RX	EP5TX	EP5RX	EP4TX	EP4RX
Bit	7	6	5	4	3	2	1	0
Symbol	EP3TX	EP3RX	EP2TX	EP2RX	EP1TX	EP1RX	EP0TX	EP0RX

Table 283. USB Endpoint Interrupt Enable register (USBEpIntEn - address 0xFFE0 C234) bit description

Bit	Symbol	Value	Description	Reset value
31:0	See USBEpIntEn	0	The corresponding bit in USBDMARSt is set when an interrupt occurs for this endpoint.	0
	bit allocation table above	1	The corresponding bit in USBEpIntSt is set when an interrupt occurs for this endpoint. Implies Slave mode for this endpoint.	

13.10.4.3 USB Endpoint Interrupt Clear register (USBEpIntClr - 0xFFE0 C238)

Writing a one to this a bit in this register causes the SIE Select Endpoint/Clear Interrupt command to be executed (<u>Table 327</u>) for the corresponding physical endpoint. Writing zero has no effect. Before executing the Select Endpoint/Clear Interrupt command, the CDFULL bit in USBDevIntSt is cleared by hardware. On completion of the command, the CDFULL bit is set, USBCmdData contains the status of the endpoint, and the corresponding bit in USBEpIntSt is cleared.

Notes:

- When clearing interrupts using USBEpIntClr, software should wait for CDFULL to be set to ensure the corresponding interrupt has been cleared before proceeding.
- While setting multiple bits in USBEpIntClr simultaneously is possible, it is not recommended; only the status of the endpoint corresponding to the least significant interrupt bit cleared will be available at the end of the operation.
- Alternatively, the SIE Select Endpoint/Clear Interrupt command can be directly invoked using the SIE command registers, but using USBEpIntClr is recommended because of its ease of use.

Each physical endpoint has its own reserved bit in this register. The bit field definition is the same as that of USBEpIntSt shown in Table 280 . USBEpIntClr is a write only register.

Table 284. USB Endpoint Interrupt Clear register (USBEpIntClr - address 0xFFE0 C238) bit allocation Reset value: 0x0000 0000

Bit	31	30	29	28	27	26	25	24
Symbol	EP15TX	EP15RX	EP14TX	EP14RX	EP13TX	EP13RX	EP12TX	EP12RX
Bit	23	22	21	20	19	18	17	16
Symbol	EP11TX	EP11RX	EP10TX	EP10RX	EP9TX	EP9RX	EP8TX	EP8RX
Bit	15	14	13	12	11	10	9	8
Symbol	EP7TX	EP7RX	EP6TX	EP6RX	EP5TX	EP5RX	EP4TX	EP4RX

UM10211

Chapter 13: LPC23XX USB device controller

Bit	7	6	5	4	3	2	1	0
Symbol	EP3TX	EP3RX	EP2TX	EP2RX	EP1TX	EP1RX	EP0TX	EP0RX

Table 285. USB Endpoint Interrupt Clear register (USBEpIntClr - address 0xFFE0 C238) bit description

Bit	Symbol	Value	Description	Reset value
31:0	See	0	No effect.	0
	USBEpIntClr bit allocation table above	1	Clears the corresponding bit in USBEpIntSt, by executing the SIE Select Endpoint/Clear Interrupt command for this endpoint.	

13.10.4.4 USB Endpoint Interrupt Set register (USBEpIntSet - 0xFFE0 C23C)

Writing a one to a bit in this register sets the corresponding bit in USBEpIntSt. Writing zero has no effect. Each endpoint has its own bit in this register. USBEpIntSet is a write only register.

Table 286. USB Endpoint Interrupt Set register (USBEpIntSet - address 0xFFE0 C23C) bit allocation

Reset value: 0x0000 0000

Bit	31	30	29	28	27	26	25	24
Symbol	EP15TX	EP15RX	EP14TX	EP14RX	EP13TX	EP13RX	EP12TX	EP12RX
Bit	23	22	21	20	19	18	17	16
Symbol	EP11TX	EP11RX	EP10TX	EP10RX	EP9TX	EP9RX	EP8TX	EP8RX
Bit	15	14	13	12	11	10	9	8
Symbol	EP7TX	EP7RX	EP6TX	EP6RX	EP5TX	EP5RX	EP4TX	EP4RX
Bit	7	6	5	4	3	2	1	0
Symbol	EP3TX	EP3RX	EP2TX	EP2RX	EP1TX	EP1RX	EP0TX	EP0RX

Table 287. USB Endpoint Interrupt Set register (USBEpIntSet - address 0xFFE0 C23C) bit description

Bit	Symbol	Value	Description	Reset value
31:0	See	0	No effect.	0
	USBEpIntSet bit allocation table above	1	Sets the corresponding bit in USBEpIntSt.	

13.10.4.5 USB Endpoint Interrupt Priority register (USBEpIntPri - 0xFFE0 C240)

This register determines whether an endpoint interrupt is routed to the EP_FAST or EP_SLOW bits of USBDevIntSt. If a bit in this register is set to one, the interrupt is routed to EP_FAST, if zero it is routed to EP_SLOW. Routing of multiple endpoints to EP_FAST or EP_SLOW is possible.

Note that the USBDevIntPri register determines whether the EP_FAST interrupt is routed to the USB_INT_REQ_HP or USB_INT_REQ_LP interrupt line.

USBEpIntPri is a write only register.

Table 288. USB Endpoint Interrupt Priority register (USBEpIntPri - address 0xFFE0 C240) bit allocation

Reset value: 0x0000 0000

Bit	31	30	29	28	27	26	25	24
Symbol	EP15TX	EP15RX	EP14TX	E14RX	EP13TX	EP13RX	EP12TX	EP12RX

UM10211

Chapter 13: LPC23XX USB device controller

Bit	23	22	21	20	19	18	17	16
Symbol	EP11TX	EP11RX	EP10TX	EP10RX	EP9TX	EP9RX	EP8TX	EP8RX
Bit	15	14	13	12	11	10	9	8
Symbol	EP7TX	EP7RX	EP6TX	EP6RX	EP5TX	EP5RX	EP4TX	EP4RX
Bit	7	6	5	4	3	2	1	0
Symbol	EP3TX	EP3RX	EP2TX	EP2RX	EP1TX	EP1RX	EP0TX	EP0RX

Table 289. USB Endpoint Interrupt Priority register (USBEpIntPri - address 0xFFE0 C240) bit description

Bit	Symbol	Value	Description	Reset value
	See	0	The corresponding interrupt is routed to the EP_SLOW bit of USBDevIntSt	0
	USBEpIntPri bit allocation table above	1	The corresponding interrupt is routed to the EP_FAST bit of USBDevIntSt	

13.10.5 Endpoint realization registers

The registers in this group allow realization and configuration of endpoints at run time.

13.10.5.1 EP RAM requirements

The USB device controller uses a RAM based FIFO for each endpoint buffer. The RAM dedicated for this purpose is called the Endpoint RAM (EP_RAM). Each endpoint has space reserved in the EP_RAM. The EP_RAM space required for an endpoint depends on its MaxPacketSize and whether it is double buffered. 32 words of EP_RAM are used by the device for storing the endpoint buffer pointers. The EP_RAM is word aligned but the MaxPacketSize is defined in bytes hence the RAM depth has to be adjusted to the next word boundary. Also, each buffer has one word header showing the size of the packet length received.

The EP_ RAM space (in words) required for the physical endpoint can be expressed as

$$EPRAMspace = \left(\frac{MaxPacketSize + 3}{4} + 1\right) \times dbstatus$$

where dbstatus = 1 for a single buffered endpoint and 2 for double a buffered endpoint.

Since all the realized endpoints occupy EP_RAM space, the total EP_RAM requirement is

$$TotalEPRAM space = 32 + \sum_{n=0}^{N} EPRAM space(n)$$

where N is the number of realized endpoints. Total EP_RAM space should not exceed 4096 bytes (4 kB, 1 kwords).

Chapter 13: LPC23XX USB device controller

13.10.5.2 USB Realize Endpoint register (USBReEp - 0xFFE0 C244)

Writing one to a bit in this register causes the corresponding endpoint to be realized. Writing zeros causes it to be unrealized. This register returns to its reset state when a bus reset occurs. USBReEp is a read/write register.

Table 290. USB Realize Endpoint register (USBReEp - address 0xFFE0 C244) bit allocation

Reset value: 0x0000 0003

Bit	31	30	29	28	27	26	25	24
Symbol	EP31	EP30	EP29	EP28	EP27	EP26	EP25	EP24
Bit	23	22	21	20	19	18	17	16
Symbol	EP23	EP22	EP21	EP20	EP19	EP18	EP17	EP16
Bit	15	14	13	12	11	10	9	8
Symbol	EP15	EP14	EP13	EP12	EP11	EP10	EP9	EP8
Bit	7	6	5	4	3	2	1	0
Symbol	EP7	EP6	EP5	EP4	EP3	EP2	EP1	EP0

Table 291. USB Realize Endpoint register (USBReEp - address 0xFFE0 C244) bit description

Bit	Symbol	Value	Description	Reset value
0	EP0	0	Control endpoint EP0 is not realized.	1
		1	Control endpoint EP0 is realized.	
1	EP1	0	Control endpoint EP1 is not realized.	1
		1	Control endpoint EP1 is realized.	
31:2	EPxx	0	Endpoint EPxx is not realized.	0
		1	Endpoint EPxx is realized.	

On reset, only the control endpoints are realized. Other endpoints, if required, are realized by programming the corresponding bits in USBReEp. To calculate the required EP_RAM space for the realized endpoints, see <u>Section 13.10.5.1</u>.

Realization of endpoints is a multi-cycle operation. Pseudo code for endpoint realization is shown below.

```
Clear EP_RLZED bit in USBDevIntSt;

for every endpoint to be realized,
{
    /* OR with the existing value of the Realize Endpoint register */
    USBReEp |= (UInt32) ((0x1 << endpt));
    /* Load Endpoint index Reg with physical endpoint no.*/
    USBEpIn = (UInt32) endpointnumber;

    /* load the max packet size Register */
    USBEpMaxPSize = MPS;

    /* check whether the EP_RLZED bit in the Device Interrupt Status register is set */
    while (!(USBDevIntSt & EP_RLZED))
    {
        /* wait until endpoint realization is complete */</pre>
```

Chapter 13: LPC23XX USB device controller

```
/* Clear the EP_RLZED bit */
Clear EP RLZED bit in USBDevIntSt;
```

The device will not respond to any transactions to unrealized endpoints. The SIE Configure Device command will only cause realized and enabled endpoints to respond to transactions. For details see Table 322.

13.10.5.3 USB Endpoint Index register (USBEpIn - 0xFFE0 C248)

Each endpoint has a register carrying the MaxPacketSize value for that endpoint. This is in fact a register array. Hence before writing, this register is addressed through the USBEpIn register.

The USBEpIn register will hold the physical endpoint number. Writing to USBMaxPSize will set the array element pointed to by USBEpIn. USBEpIn is a write only register.

Table 292. USB Endpoint Index register (USBEpIn - address 0xFFE0 C248) bit description

Bit	Symbol	Description	Reset value
4:0	PHY_EP	Physical endpoint number (0-31)	0
31:5	-	Reserved, user software should not write ones to reserved bits. The value read from a reserved bit is not defined.	NA

13.10.5.4 USB MaxPacketSize register (USBMaxPSize - 0xFFE0 C24C)

On reset, the control endpoint is assigned the maximum packet size of 8 bytes. Other endpoints are assigned 0. Modifying USBMaxPSize will cause the endpoint buffer addresses within the EP_RAM to be recalculated. This is a multi-cycle process. At the end, the EP_RLZED bit will be set in USBDevIntSt (Table 271). USBMaxPSize array indexing is shown in Figure 63. USBMaxPSize is a read/write register.

Table 293. USB MaxPacketSize register (USBMaxPSize - address 0xFFE0 C24C) bit description

Bit	Symbol	Description	Reset value
9:0	MPS	The maximum packet size value.	0x008[1]
31:10	-	Reserved, user software should not write ones to reserved bits. The value read from a reserved bit is not defined.	NA

^[1] Reset value for EP0 and EP1. All other endpoints have a reset value of 0x0.

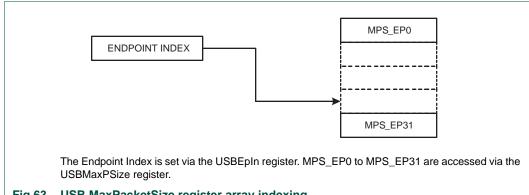


Fig 63. USB MaxPacketSize register array indexing

Chapter 13: LPC23XX USB device controller

13.10.6 USB transfer registers

The registers in this group are used for transferring data between endpoint buffers and RAM in Slave mode operation. See Section 13.14 "Slave mode operation".

13.10.6.1 USB Receive Data register (USBRxData - 0xFFE0 C218)

For an OUT transaction, the CPU reads the endpoint buffer data from this register. Before reading this register, the RD_EN bit and LOG_ENDPOINT field of the USBCtrl register should be set appropriately. On reading this register, data from the selected endpoint buffer is fetched. The data is in little endian format: the first byte received from the USB bus will be available in the least significant byte of USBRxData. USBRxData is a read only register.

Table 294. USB Receive Data register (USBRxData - address 0xFFE0 C218) bit description

Bit	Symbol	Description	Reset value
31:0	RX_DATA	Data received.	0x0000 0000

13.10.6.2 USB Receive Packet Length register (USBRxPLen - 0xFFE0 C220)

This register contains the number of bytes remaining in the endpoint buffer for the current packet being read via the USBRxData register, and a bit indicating whether the packet is valid or not. Before reading this register, the RD_EN bit and LOG_ENDPOINT field of the USBCtrl register should be set appropriately. This register is updated on each read of the USBRxData register. USBRxPLen is a read only register.

Table 295. USB Receive Packet Length register (USBRxPlen - address 0xFFE0 C220) bit description

Bit	Symbol	Value	Description	Reset value
9:0	PKT_LNGTH	-	The remaining number of bytes to be read from the currently selected endpoint's buffer. When this field decrements to 0, the RxENDPKT bit will be set in USBDevIntSt.	0
10	DV		Data valid. This bit is useful for isochronous endpoints. Non-isochronous endpoints do not raise an interrupt when an erroneous data packet is received. But invalid data packet can be produced with a bus reset. For isochronous endpoints, data transfer will happen even if an erroneous packet is received. In this case DV bit will not be set for the packet.	0
		0	Data is invalid.	
		1	Data is valid.	
11	PKT_RDY	-	The PKT_LNGTH field is valid and the packet is ready for reading.	0
31:12	-	-	Reserved, user software should not write ones to reserved bits. The value read from a reserved bit is not defined.	NA

13.10.6.3 USB Transmit Data register (USBTxData - 0xFFE0 C21C)

For an IN transaction, the CPU writes the endpoint data into this register. Before writing to this register, the WR_EN bit and LOG_ENDPOINT field of the USBCtrl register should be set appropriately, and the packet length should be written to the USBTxPlen register. On

Chapter 13: LPC23XX USB device controller

writing this register, the data is written to the selected endpoint buffer. The data is in little endian format: the first byte sent on the USB bus will be the least significant byte of USBTxData. USBTxData is a write only register.

Table 296. USB Transmit Data register (USBTxData - address 0xFFE0 C21C) bit description

Bit	Symbol	Description	Reset value
31:0	TX_DATA	Transmit Data.	0x0000 0000

13.10.6.4 USB Transmit Packet Length register (USBTxPLen - 0xFFE0 C224)

This register contains the number of bytes transferred from the CPU to the selected endpoint buffer. Before writing data to USBTxData, software should first write the packet length (≤ MaxPacketSize) to this register. After each write to USBTxData, hardware decrements USBTxPLen by 4. The WR_EN bit and LOG_ENDPOINT field of the USBCtrl register should be set to select the desired endpoint buffer before starting this process.

For data buffers larger than the endpoint's MaxPacketSize, software should submit data in packets of MaxPacketSize, and send the remaining extra bytes in the last packet. For example, if the MaxPacketSize is 64 bytes and the data buffer to be transferred is of length 130 bytes, then the software sends two 64-byte packets and the remaining 2 bytes in the last packet. So, a total of 3 packets are sent on USB. USBTxPLen is a write only register.

Table 297. USB Transmit Packet Length register (USBTxPLen - address 0xFFE0 C224) bit description

Bit	Symbol	Value	Description	Reset value
9:0	PKT_LNGTH	-	The remaining number of bytes to be written to the selected endpoint buffer. This field is decremented by 4 by hardware after each write to USBTxData. When this field decrements to 0, the TxENDPKT bit will be set in USBDevIntSt.	0x000
31:10	-	-	Reserved, user software should not write ones to reserved bits. The value read from a reserved bit is not defined.	NA

13.10.6.5 USB Control register (USBCtrl - 0xFFE0 C228)

This register controls the data transfer operation of the USB device. It selects the endpoint buffer that is accessed by the USBRxData and USBTxData registers, and enables reading and writing them. USBCtrl is a read/write register.

Table 298. USB Control register (USBCtrl - address 0xFFE0 C228) bit description

Bit	Symbol	Value	Description	Reset value
0	RD_EN		Read mode control. Enables reading data from the OUT endpoint buffer for the endpoint specified in the LOG_ENDPOINT field using the USBRxData register. This bit is cleared by hardware when the last word of the current packet is read from USBRxData.	0
		0	Read mode is disabled.	
		1	Read mode is enabled.	

Chapter 13: LPC23XX USB device controller

Table 298. USB Control register (USBCtrl - address 0xFFE0 C228) bit description

Bit	Symbol	Value	Description	Reset value
1	WR_EN		Write mode control. Enables writing data to the IN endpoint buffer for the endpoint specified in the LOG_ENDPOINT field using the USBTxData register. This bit is cleared by hardware when the number of bytes in USBTxLen have been sent.	0
		0	Write mode is disabled.	
		1	Write mode is enabled.	
5:2	LOG_ENDPOINT	-	Logical Endpoint number.	0x0
31:6	-	-	Reserved, user software should not write ones to reserved bits. The value read from a reserved bit is not defined.	NA

13.10.7 SIE command code registers

The SIE command code registers are used for communicating with the Serial Interface Engine. See <u>Section 13.12 "Serial interface engine command description"</u> for more information.

13.10.7.1 USB Command Code register (USBCmdCode - 0xFFE0 C210)

This register is used for sending the command and write data to the SIE. The commands written here are propagated to the SIE and executed there. After executing the command, the register is empty, and the CCEMPTY bit of USBDevIntSt register is set. See Section 13.12 for details. USBCmdCode is a write only register.

Table 299. USB Command Code register (USBCmdCode - address 0xFFE0 C210) bit description

Bit	Symbol	Value	Description	Reset value
7:0	-	-	Reserved, user software should not write ones to reserved bits. The value read from a reserved bit is not defined.	NA
15:8	CMD_PHASE		The command phase:	0x00
		0x01	Read	
		0x02	Write	
		0x05	Command	
23:16	CMD_CODE/ CMD_WDATA		This is a multi-purpose field. When CMD_PHASE is Command or Read, this field contains the code for the command (CMD_CODE). When CMD_PHASE is Write, this field contains the command write data (CMD_WDATA).	0x00
31:24	-	-	Reserved, user software should not write ones to reserved bits. The value read from a reserved bit is not defined.	NA

13.10.7.2 USB Command Data register (USBCmdData - 0xFFE0 C214)

This register contains the data retrieved after executing a SIE command. When the data is ready to be read, the CD_FULL bit of the USBDevIntSt register is set. See <u>Table 271</u> for details. USBCmdData is a read only register.

Chapter 13: LPC23XX USB device controller

Table 300. USB Command Data register (USBCmdData - address 0xFFE0 C214) bit description

Bit	Symbol	Description	Reset value
7:0	CMD_RDATA	Command Read Data.	0x00
31:8	-	Reserved, user software should not write ones to reserved bits. The value read from a reserved bit is not defined.	NA

13.10.8 DMA registers

The registers in this group are used for the DMA mode of operation (see <u>Section 13.15</u> "DMA operation")

13.10.8.1 USB DMA Request Status register (USBDMARSt - 0xFFE0 C250)

A bit in this register associated with a non-isochronous endpoint is set by hardware when an endpoint interrupt occurs (see the description of USBEpIntSt) and the corresponding bit in USBEpIntEn is 0. A bit associated with an isochronous endpoint is set when the corresponding bit in USBEpIntEn is 0 and a FRAME interrupt occurs. A set bit serves as a flag for the DMA engine to start the data transfer if the DMA is enabled for the corresponding endpoint in the USBEpDMASt register. The DMA cannot be enabled for control endpoints (EP0 and EP1). USBDMARSt is a read only register.

Table 301. USB DMA Request Status register (USBDMARSt - address 0xFFE0 C250) bit allocation Reset value: 0x0000 0000

Bit	31	30	29	28	27	26	25	24
Symbol	EP31	EP30	EP29	EP28	EP27	EP26	EP25	EP24
Bit	23	22	21	20	19	18	17	16
Symbol	EP23	EP22	EP21	EP20	EP19	EP18	EP17	EP16
Bit	15	14	13	12	11	10	9	8
Symbol	EP15	EP14	EP13	EP12	EP11	EP10	EP9	EP8
Bit	7	6	5	4	3	2	1	0
Symbol	EP7	EP6	EP5	EP4	EP3	EP2	EP1	EP0

Table 302. USB DMA Request Status register (USBDMARSt - address 0xFFE0 C250) bit description

		-		
Bit	Symbol	Value	Description	Reset value
0	EP0	0	Control endpoint OUT (DMA cannot be enabled for this endpoint and EP0 bit must be 0).	0
1	EP1	0	Control endpoint IN (DMA cannot be enabled for this endpoint and EP1 bit must be 0).	0
31:2	EPxx		Endpoint xx ($2 \le xx \le 31$) DMA request.	0
		0	DMA not requested by endpoint xx.	
		1	DMA requested by endpoint xx.	

^[1] DMA can not be enabled for this endpoint and the corresponding bit in the USBDMARSt must be 0.

13.10.8.2 USB DMA Request Clear register (USBDMARCIr - 0xFFE0 C254)

Writing one to a bit in this register will clear the corresponding bit in the USBDMARSt register. Writing zero has no effect.

Chapter 13: LPC23XX USB device controller

This register is intended for initialization prior to enabling the DMA for an endpoint. When the DMA is enabled for an endpoint, hardware clears the corresponding bit in USBDMARSt on completion of a packet transfer. Therefore, software should not clear the bit using this register while the endpoint is enabled for DMA operation.

USBDMARCIr is a write only register.

The USBDMARCIr bit allocation is identical to the USBDMARSt register (Table 301).

Table 303. USB DMA Request Clear register (USBDMARCIr - address 0xFFE0 C254) bit description

Bit	Symbol	Value	Description	Reset value
0	EP0	0	Control endpoint OUT (DMA cannot be enabled for this endpoint and the EP0 bit must be 0).	0
1	EP1	0	Control endpoint IN (DMA cannot be enabled for this endpoint and the EP1 bit must be 0).	0
31:2	EPxx		Clear the endpoint xx ($2 \le xx \le 31$) DMA request.	0
		0	No effect.	
		1	Clear the corresponding bit in USBDMARSt.	

13.10.8.3 USB DMA Request Set register (USBDMARSet - 0xFFE0 C258)

Writing one to a bit in this register sets the corresponding bit in the USBDMARSt register. Writing zero has no effect.

This register allows software to raise a DMA request. This can be useful when switching from Slave to DMA mode of operation for an endpoint: if a packet to be processed in DMA mode arrives before the corresponding bit of USBEpIntEn is cleared, the DMA request is not raised by hardware. Software can then use this register to manually start the DMA transfer.

Software can also use this register to initiate a DMA transfer to proactively fill an IN endpoint buffer before an IN token packet is received from the host.

USBDMARSet is a write only register.

The USBDMARSet bit allocation is identical to the USBDMARSt register (Table 301).

Table 304. USB DMA Request Set register (USBDMARSet - address 0xFFE0 C258) bit description

Bit	Symbol	Value	Description	Reset value
0	EP0	0	Control endpoint OUT (DMA cannot be enabled for this endpoint and the EP0 bit must be 0).	0
1	EP1	0	Control endpoint IN (DMA cannot be enabled for this endpoint and the EP1 bit must be 0).	0
31:2	EPxx		Set the endpoint xx (2 \leq xx \leq 31) DMA request.	0
		0	No effect.	
		1	Set the corresponding bit in USBDMARSt.	

Chapter 13: LPC23XX USB device controller

13.10.8.4 USB UDCA Head register (USBUDCAH - 0xFFE0 C280)

The UDCA (USB Device Communication Area) Head register maintains the address where the UDCA is located in the USB RAM. Refer to <u>Section 13.15.2 "USB device communication area"</u> and <u>Section 13.15.4 "The DMA descriptor"</u> for more details on the UDCA and DMA descriptors. USBUDCAH is a read/write register.

Table 305. USB UDCA Head register (USBUDCAH - address 0xFFE0 C280) bit description

Bit	Symbol	Description	Reset value
6:0	-	Reserved. Software should not write ones to reserved bits. The UDCA is aligned to 128-byte boundaries.	0x00
31:7	UDCA_ADDR	Start address of the UDCA.	0

13.10.8.5 USB EP DMA Status register (USBEpDMASt - 0xFFE0 C284)

Bits in this register indicate whether DMA operation is enabled for the corresponding endpoint. A DMA transfer for an endpoint can start only if the corresponding bit is set in this register. USBEpDMASt is a read only register.

Table 306. USB EP DMA Status register (USBEpDMASt - address 0xFFE0 C284) bit description

Bit	Symbol	Value	Description	Reset value
0	EP0_DMA_ENABLE	0	Control endpoint OUT (DMA cannot be enabled for this endpoint and the EP0_DMA_ENABLE bit must be 0).	0
1	EP1_DMA_ENABLE	0	Control endpoint IN (DMA cannot be enabled for this endpoint and the EP1_DMA_ENABLE bit must be 0).	0
31:2	EPxx_DMA_ENABLE		endpoint xx ($2 \le xx \le 31$) DMA enabled bit.	0
		0	The DMA for endpoint EPxx is disabled.	
		1	The DMA for endpoint EPxx is enabled.	

13.10.8.6 USB EP DMA Enable register (USBEpDMAEn - 0xFFE0 C288)

Writing one to a bit to this register will enable the DMA operation for the corresponding endpoint. Writing zero has no effect. The DMA cannot be enabled for control endpoints EP0 and EP1. USBEpDMAEn is a write only register.

Table 307. USB EP DMA Enable register (USBEpDMAEn - address 0xFFE0 C288) bit description

Bit	Symbol	Value	Description	Reset value
0	EP0_DMA_ENABLE	0	Control endpoint OUT (DMA cannot be enabled for this endpoint and the EP0_DMA_ENABLE bit value must be 0).	0
1	EP1_DMA_ENABLE	0	Control endpoint IN (DMA cannot be enabled for this endpoint and the EP1_DMA_ENABLE bit must be 0).	0
31:2	EPxx_DMA_ENABLE		Endpoint $xx(2 \le xx \le 31)$ DMA enable control bit.	0
		0	No effect.	
		1	Enable the DMA operation for endpoint EPxx.	

Chapter 13: LPC23XX USB device controller

13.10.8.7 USB EP DMA Disable register (USBEpDMADis - 0xFFE0 C28C)

Writing a one to a bit in this register clears the corresponding bit in USBEpDMASt. Writing zero has no effect on the corresponding bit of USBEpDMASt. Any write to this register clears the internal DMA_PROCEED flag. Refer to Section 13.15.5.4 "Optimizing descriptor fetch" for more information on the DMA_PROCEED flag. If a DMA transfer is in progress for an endpoint when its corresponding bit is cleared, the transfer is completed before the DMA is disabled. When an error condition is detected during a DMA transfer, the corresponding bit is cleared by hardware. USBEpDMADis is a write only register.

Table 308. USB EP DMA Disable register (USBEpDMADis - address 0xFFE0 C28C) bit description

Bit	Symbol	Value	Description	Reset value
0	EP0_DMA_DISABLE	0	Control endpoint OUT (DMA cannot be enabled for this endpoint and the EP0_DMA_DISABLE bit value must be 0).	0
1	EP1_DMA_DISABLE	0	Control endpoint IN (DMA cannot be enabled for this endpoint and the EP1_DMA_DISABLE bit value must be 0).	0
31:2	EPxx_DMA_DISABLE		Endpoint xx (2 \leq xx \leq 31) DMA disable control bit.	0
		0	No effect.	
		1	Disable the DMA operation for endpoint EPxx.	

13.10.8.8 USB DMA Interrupt Status register (USBDMAIntSt - 0xFFE0 C290)

Each bit of this register reflects whether any of the 32 bits in the corresponding interrupt status register are set. USBDMAIntSt is a read only register.

Table 309. USB DMA Interrupt Status register (USBDMAIntSt - address 0xFFE0 C290) bit description

•			
Symbol	Value	Description	Reset value
EOT		End of Transfer Interrupt bit.	0
	0	All bits in the USBEoTIntSt register are 0.	
	1	At least one bit in the USBEoTIntSt is set.	
NDDR		New DD Request Interrupt bit.	0
	0	All bits in the USBNDDRIntSt register are 0.	
	1	At least one bit in the USBNDDRIntSt is set.	
ERR		System Error Interrupt bit.	0
	0	All bits in the USBSysErrIntSt register are 0.	
	1	At least one bit in the USBSysErrIntSt is set.	
-	-	Reserved, user software should not write ones to reserved bits. The value read from a reserved bit is not defined.	NA
	EOT NDDR ERR	EOT 0 1 NDDR 0 1 ERR 0 1	EOT End of Transfer Interrupt bit. O All bits in the USBEoTIntSt register are 0. 1 At least one bit in the USBEoTIntSt is set. NDDR New DD Request Interrupt bit. O All bits in the USBNDDRIntSt register are 0. 1 At least one bit in the USBNDDRIntSt is set. ERR System Error Interrupt bit. O All bits in the USBSysErrIntSt register are 0. 1 At least one bit in the USBSysErrIntSt register are 0. 1 At least one bit in the USBSysErrIntSt is set. - Reserved, user software should not write ones to reserved bits. The value read from a

13.10.8.9 USB DMA Interrupt Enable register (USBDMAIntEn - 0xFFE0 C294)

Writing a one to a bit in this register enables the corresponding bit in USBDMAIntSt to generate an interrupt on the USB_INT_REQ_DMA interrupt line when set. USBDMAIntEn is a read/write register.

Chapter 13: LPC23XX USB device controller

Table 310. USB DMA Interrupt Enable register (USBDMAIntEn - address 0xFFE0 C294) bit description

Bit	Symbol	Value	Description	Reset value
0	EOT		End of Transfer Interrupt enable bit.	0
		0	The End of Transfer Interrupt is disabled.	
		1	The End of Transfer Interrupt is enabled.	
1	NDDR		New DD Request Interrupt enable bit.	0
		0	The New DD Request Interrupt is disabled.	
		1	The New DD Request Interrupt is enabled.	
2	ERR		System Error Interrupt enable bit.	0
		0	The System Error Interrupt is disabled.	
		1	The System Error Interrupt is enabled.	
31:3	-	-	Reserved, user software should not write ones to reserved bits. The value read from a reserved bit is not defined.	NA

13.10.8.10 USB End of Transfer Interrupt Status register (USBEoTIntSt - 0xFFE0 C2A0)

When the DMA transfer completes for the current DMA descriptor, either normally (descriptor is retired) or because of an error, the bit corresponding to the endpoint is set in this register. The cause of the interrupt is recorded in the DD_status field of the descriptor. USBEoTIntSt is a read only register.

Table 311. USB End of Transfer Interrupt Status register (USBEoTIntSt - address 0xFFE0 C2A0s) bit description

Bit	Symbol	Value	Description	Reset value
31:0	EPxx		Endpoint xx (2 \leq xx \leq 31) End of Transfer Interrupt request.	0
		0	There is no End of Transfer interrupt request for endpoint xx.	
		1	There is an End of Transfer Interrupt request for endpoint xx.	

13.10.8.11 USB End of Transfer Interrupt Clear register (USBEoTIntClr - 0xFFE0 C2A4)

Writing one to a bit in this register clears the corresponding bit in the USBEoTIntSt register. Writing zero has no effect. USBEoTIntClr is a write only register.

Table 312. USB End of Transfer Interrupt Clear register (USBEoTIntClr - address 0xFFE0 C2A4) bit description

Bit	Symbol	Value	Description	Reset value
31:0	EPxx		Clear endpoint xx (2 \leq xx \leq 31) End of Transfer Interrupt request.	0
	0	No effect.		
		1	Clear the EPxx End of Transfer Interrupt request in the USBEoTIntSt register.	

Chapter 13: LPC23XX USB device controller

13.10.8.12 USB End of Transfer Interrupt Set register (USBEoTIntSet - 0xFFE0 C2A8)

Writing one to a bit in this register sets the corresponding bit in the USBEoTIntSt register. Writing zero has no effect. USBEoTIntSet is a write only register.

Table 313. USB End of Transfer Interrupt Set register (USBEoTIntSet - address 0xFFE0 C2A8) bit description

Bit	Symbol	Value	Description	Reset value	
31:0		EPxx		Set endpoint xx (2 \leq xx \leq 31) End of Transfer Interrupt request.	0
		No effect.			
		1	Set the EPxx End of Transfer Interrupt request in the USBEoTIntSt register.		

13.10.8.13 USB New DD Request Interrupt Status register (USBNDDRIntSt - 0xFFE0 C2AC)

A bit in this register is set when a transfer is requested from the USB device and no valid DD is detected for the corresponding endpoint. USBNDDRIntSt is a read only register.

Table 314. USB New DD Request Interrupt Status register (USBNDDRIntSt - address 0xFFE0 C2AC) bit description

Bit	Symbol	Value	Description	Reset value
31:0	EPxx		Endpoint xx ($2 \le xx \le 31$) new DD interrupt request.	0
		0	There is no new DD interrupt request for endpoint xx.	
		1	There is a new DD interrupt request for endpoint xx.	

13.10.8.14 USB New DD Request Interrupt Clear register (USBNDDRIntClr - 0xFFE0 C2B0)

Writing one to a bit in this register clears the corresponding bit in the USBNDDRIntSt register. Writing zero has no effect. USBNDDRIntClr is a write only register.

Table 315. USB New DD Request Interrupt Clear register (USBNDDRIntClr - address 0xFFE0 C2B0) bit description

Bit	Symbol	Value	Description	Reset value
31:0	EPxx		Clear endpoint xx (2 \leq xx \leq 31) new DD interrupt request.	0
	0	0	No effect.	
		1	Clear the EPxx new DD interrupt request in the USBNDDRIntSt register.	

13.10.8.15 USB New DD Request Interrupt Set register (USBNDDRIntSet - 0xFFE0 C2B4)

Writing one to a bit in this register sets the corresponding bit in the USBNDDRIntSt register. Writing zero has no effect. USBNDDRIntSet is a write only register

Chapter 13: LPC23XX USB device controller

Table 316. USB New DD Request Interrupt Set register (USBNDDRIntSet - address 0xFFE0 C2B4) bit description

Bit	Symbol	Value	Description	Reset value
31:0	EPxx		Set endpoint xx (2 \leq xx \leq 31) new DD interrupt request.	0
		0	No effect.	
		1	Set the EPxx new DD interrupt request in the USBNDDRIntSt register.	

13.10.8.16 USB System Error Interrupt Status register (USBSysErrIntSt - 0xFFE0 C2B8)

If a system error (AHB bus error) occurs when transferring the data or when fetching or updating the DD the corresponding bit is set in this register. USBSysErrIntSt is a read only register.

Table 317. USB System Error Interrupt Status register (USBSysErrIntSt - address 0xFFE0 C2B8) bit description

Bit	Symbol	Value	Description	Reset value
31:0	EPxx		Endpoint xx (2 \leq xx \leq 31) System Error Interrupt request.	0
		0	There is no System Error Interrupt request for endpoint xx.	
		1	There is a System Error Interrupt request for endpoint xx.	

13.10.8.17 USB System Error Interrupt Clear register (USBSysErrIntClr - 0xFFE0 C2BC)

Writing one to a bit in this register clears the corresponding bit in the USBSysErrIntSt register. Writing zero has no effect. USBSysErrIntClr is a write only register.

Table 318. USB System Error Interrupt Clear register (USBSysErrIntClr - address 0xFFE0 C2BC) bit description

Bit	Symbol	Value	Description	Reset value
31:0	EPxx		Clear endpoint xx (2 \leq xx \leq 31) System Error Interrupt request.	0
		0	No effect.	
		1	Clear the EPxx System Error Interrupt request in the USBSysErrIntSt register.	

13.10.8.18 USB System Error Interrupt Set register (USBSysErrIntSet - 0xFFE0 C2C0)

Writing one to a bit in this register sets the corresponding bit in the USBSysErrIntSt register. Writing zero has no effect. USBSysErrIntSet is a write only register.

Table 319. USB System Error Interrupt Set register (USBSysErrIntSet - address 0xFFE0 C2C0) bit description

Bit	Symbol	Value	Description	Reset value
31:0	EPxx		Set endpoint xx (2 \leq xx \leq 31) System Error Interrupt request.	0
		0	No effect.	
		1	Set the EPxx System Error Interrupt request in the USBSysErrIntSt register.	

Chapter 13: LPC23XX USB device controller

13.11 Interrupt handling

This section describes how an interrupt event on any of the endpoints is routed to the Vectored Interrupt Controller (VIC). For a diagram showing interrupt event handling, see Figure 64.

All non-isochronous OUT endpoints (control, bulk, and interrupt endpoints) generate an interrupt when they receive a packet without an error. All non-isochronous IN endpoints generate an interrupt when a packet has been successfully transmitted or when a NAK signal is sent and interrupts on NAK are enabled by the SIE Set Mode command, see Section 13.12.3. For isochronous endpoints, a frame interrupt is generated every 1 ms.

The interrupt handling is different for Slave and DMA mode.

Slave mode

If an interrupt event occurs on an endpoint and the endpoint interrupt is enabled in the USBEpIntEn register, the corresponding status bit in the USBEpIntSt is set. For non-isochronous endpoints, all endpoint interrupt events are divided into two types by the corresponding USBEpIntPri[n] registers: fast endpoint interrupt events and slow endpoint interrupt events. All fast endpoint interrupt events are ORed and routed to bit EP_FAST in the USBDevIntSt register. All slow endpoint interrupt events are ORed and routed to the EP_SLOW bit in USBDevIntSt.

For isochronous endpoints, the FRAME bit in USBDevIntSt is set every 1 ms.

The USBDevIntSt register holds the status of all endpoint interrupt events as well as the status of various other interrupts (see Section 13.10.3.2). By default, all interrupts (if enabled in USBDevIntEn) are routed to the USB_INT_REQ_LP bit in the USBIntSt register to request low priority interrupt handling. However, the USBDevIntPri register can route either the FRAME or the EP_FAST bit to the USB_INT_REQ_HP bit in the USBIntSt register.

Only one of the EP_FAST and FRAME interrupt events can be routed to the USB_INT_REQ_HP bit. If routing both bits to USB_INT_REQ_HP is attempted, both interrupt events are routed to USB_INT_REQ_LP.

Slow endpoint interrupt events are always routed directly to the USB_INT_REQ_LP bit for low priority interrupt handling by software.

The final interrupt signal to the VIC is gated by the EN_USB_INTS bit in the USBIntSt register. The USB interrupts are routed to VIC channel #22 only if EN_USB_INTS is set.

DMA mode

If an interrupt event occurs on a non-control endpoint and the endpoint interrupt is not enabled in the USBEpIntEn register, the corresponding status bit in the USBDMARSt is set by hardware. This serves as a flag for the DMA engine to transfer data if DMA transfer is enabled for the corresponding endpoint in the USBEpDMASt register.


Three types of interrupts can occur for each endpoint for data transfers in DMA mode: End of transfer interrupt, new DD request interrupt, and system error interrupt. These interrupt events set a bit for each endpoint in the respective registers USBEoTIntSt, USBNDDRIntSt, and USBSysErrIntSt. The End of transfer interrupts from all endpoints

Chapter 13: LPC23XX USB device controller

are then Ored and routed to the EOT bit in USBDMAIntSt. Likewise, all New DD request interrupts and system error interrupt events are routed to the NDDR and ERR bits respectively in the USBDMAStInt register.

The EOT, NDDR, and ERR bits (if enabled in USBDMAIntEn) are ORed to set the USB_INT_REQ_DMA bit in the USBIntSt register. If the EN_USB_INTS bit is set in USBIntSt, the interrupt is routed to VIC channel #22.

Chapter 13: LPC23XX USB device controller

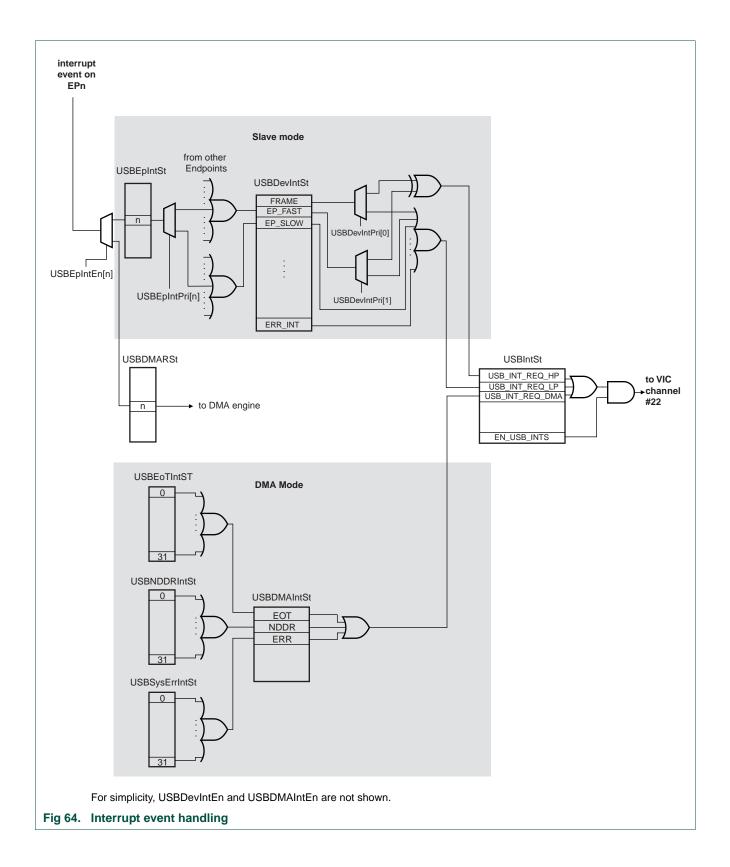

Chapter 13: LPC23XX USB device controller

13.12 Serial interface engine command description

The functions and registers of the Serial Interface Engine (SIE) are accessed using commands, which consist of a command code followed by optional data bytes (read or write action). The USBCmdCode (<u>Table 299</u>) and USBCmdData (<u>Table 300</u>) registers are used for these accesses.

A complete access consists of two phases:

- Command phase: the USBCmdCode register is written with the CMD_PHASE field set to the value 0x05 (Command), and the CMD_CODE field set to the desired command code. On completion of the command, the CCEMPTY bit of USBDevIntSt is set.
- 2. Data phase (optional): for writes, the USBCmdCode register is written with the CMD_PHASE field set to the value 0x01 (Write), and the CMD_WDATA field set with the desired write data. On completion of the write, the CCEMPTY bit of USBDevIntSt is set. For reads, USBCmdCode register is written with the CMD_PHASE field set to the value 0x02 (Read), and the CMD_CODE field set with command code the read corresponds to. On completion of the read, the CDFULL bit of USBDevInSt will be set, indicating the data is available for reading in the USBCmdData register. In the case of multi-byte registers, the least significant byte is accessed first.

An overview of the available commands is given in <u>Table 320</u>.

Here is an example of the Read Current Frame Number command (reading 2 bytes):

```
USBDevIntClr = 0x30;
                                                                                                                      // Clear both CCEMPTY & CDFULL
USBCmdCode = 0 \times 0.0 = 0.00 = 0.00 = 0.00 = 0.00 = 0.00 = 0.00 = 0.00 = 0.00 = 0.00 = 0.00 = 0.00 = 0.00 = 0.00 = 0.00 = 0.00 = 0.00 = 0.00 = 0.00 = 0.00 = 0.00 = 0.00 = 0.00 = 0.00 = 0.00 = 0.00 = 0.00 = 0.00 = 0.00 = 0.00 = 0.00 = 0.00 = 0.00 = 0.00 = 0.00 = 0.00 = 0.00 = 0.00 = 0.00 = 0.00 = 0.00 = 0.00 = 0.00 = 0.00 = 0.00 = 0.00 = 0.00 = 0.00 = 0.00 = 0.00 = 0.00 = 0.00 = 0.00 = 0.00 = 0.00 = 0.00 = 0.00 = 0.00 = 0.00 = 0.00 = 0.00 = 0.00 = 0.00 = 0.00 = 0.00 = 0.00 = 0.00 = 0.00 = 0.00 = 0.00 = 0.00 = 0.00 = 0.00 = 0.00 = 0.00 = 0.00 = 0.00 = 0.00 = 0.00 = 0.00 = 0.00 = 0.00 = 0.00 = 0.00 = 0.00 = 0.00 = 0.00 = 0.00 = 0.00 = 0.00 = 0.00 = 0.00 = 0.00 = 0.00 = 0.00 = 0.00 = 0.00 = 0.00 = 0.00 = 0.00 = 0.00 = 0.00 = 0.00 = 0.00 = 0.00 = 0.00 = 0.00 = 0.00 = 0.00 = 0.00 = 0.00 = 0.00 = 0.00 = 0.00 = 0.00 = 0.00 = 0.00 = 0.00 = 0.00 = 0.00 = 0.00 = 0.00 = 0.00 = 0.00 = 0.00 = 0.00 = 0.00 = 0.00 = 0.00 = 0.00 = 0.00 = 0.00 = 0.00 = 0.00 = 0.00 = 0.00 = 0.00 = 0.00 = 0.00 = 0.00 = 0.00 = 0.00 = 0.00 = 0.00 = 0.00 = 0.00 = 0.00 = 0.00 = 0.00 = 0.00 = 0.00 = 0.00 = 0.00 = 0.00 = 0.00 = 0.00 = 0.00 = 0.00 = 0.00 = 0.00 = 0.00 = 0.00 = 0.00 = 0.00 = 0.00 = 0.00 = 0.00 = 0.00 = 0.00 = 0.00 = 0.00 = 0.00 = 0.00 = 0.00 = 0.00 = 0.00 = 0.00 = 0.00 = 0.00 = 0.00 = 0.00 = 0.00 = 0.00 = 0.00 = 0.00 = 0.00 = 0.00 = 0.00 = 0.00 = 0.00 = 0.00 = 0.00 = 0.00 = 0.00 = 0.00 = 0.00 = 0.00 = 0.00 = 0.00 = 0.00 = 0.00 = 0.00 = 0.00 = 0.00 = 0.00 = 0.00 = 0.00 = 0.00 = 0.00 = 0.00 = 0.00 = 0.00 = 0.00 = 0.00 = 0.00 = 0.00 = 0.00 = 0.00 = 0.00 = 0.00 = 0.00 = 0.00 = 0.00 = 0.00 = 0.00 = 0.00 = 0.00 = 0.00 = 0.00 = 0.00 = 0.00 = 0.00 = 0.00 = 0.00 = 0.00 = 0.00 = 0.00 = 0.00 = 0.00 = 0.00 = 0.00 = 0.00 = 0.00 = 0.00 = 0.00 = 0.00 = 0.00 = 0.00 = 0.00 = 0.00 = 0.00 = 0.00 = 0.00 = 0.00 = 0.00 = 0.00 = 0.00 = 0.00 = 0.00 = 0.00 = 0.00 = 0.00 = 0.00 = 0.00 = 0.00 = 0.00 = 0.00 = 0.00 = 0.00 = 0.00 = 0.00 = 0.00 = 0.00 = 0.00 = 0.00 = 0.00 = 0.00 = 0.00 = 0.00 = 0.00 = 0.00 = 0.00 = 0.00 = 0.00 = 0.00 = 0.00 = 0.00 = 0.00 = 0.00 = 0.00 
                                                                                                                  // CMD CODE=0xF5, CMD PHASE=0x05(Command)
 while (!(USBDevIntSt & 0x10)); // Wait for CCEMPTY.
USBDevIntClr = 0x10;
                                                                                                                 // Clear CCEMPTY interrupt bit.
USBCmdCode = 0x00F50200;
                                                                                                                   // CMD CODE=0xF5, CMD PHASE=0x02(Read)
while (!(USBDevIntSt & 0x20)); // Wait for CDFULL.
                                                                                                                 // Clear CDFULL.
USBDevIntClr = 0x20;
CurFrameNum = USBCmdData;
                                                                                                                     // Read Frame number LSB byte.
USBCmdCode = 0x00F50200;
                                                                                                                  // CMD CODE=0xF5, CMD PHASE=0x02(Read)
while (!(USBDevIntSt & 0x20)); // Wait for CDFULL.
Temp = USBCmdData;
                                                                                                                     // Read Frame number MSB byte
                                                                                                                 // Clear CDFULL interrupt bit.
USBDevIntClr = 0x20;
CurFrameNum = CurFrameNum | (Temp << 8);</pre>
```

Here is an example of the Set Address command (writing 1 byte):

Chapter 13: LPC23XX USB device controller

Table 320. SIE command code table

Command name	Recipient	Code (Hex)	Data phase
Device commands			
Set Address	Device	D0	Write 1 byte
Configure Device	Device	D8	Write 1 byte
Set Mode	Device	F3	Write 1 byte
Read Current Frame Number	Device	F5	Read 1 or 2 bytes
Read Test Register	Device	FD	Read 2 bytes
Set Device Status	Device	FE	Write 1 byte
Get Device Status	Device	FE	Read 1 byte
Get Error Code	Device	FF	Read 1 byte
Read Error Status	Device	FB	Read 1 byte
Endpoint Commands			
Select Endpoint	Endpoint 0	00	Read 1 byte (optional)
	Endpoint 1	01	Read 1 byte (optional)
	Endpoint xx	XX	Read 1 byte (optional)
Select Endpoint/Clear Interrupt	Endpoint 0	40	Read 1 byte
	Endpoint 1	41	Read 1 byte
	Endpoint xx	xx + 40	Read 1 byte
Set Endpoint Status	Endpoint 0	40	Write 1 byte
	Endpoint 1	41	Write 1 byte
	Endpoint xx	xx + 40	Write 1 byte
Clear Buffer	Selected Endpoint	F2	Read 1 byte (optional)
Validate Buffer	Selected Endpoint	FA	None

13.12.1 Set Address (Command: 0xD0, Data: write 1 byte)

The Set Address command is used to set the USB assigned address and enable the (embedded) function. The address set in the device will take effect after the status stage of the control transaction. After a bus reset, DEV_ADDR is set to 0x00, and DEV_EN is set to 1. The device will respond to packets for function address 0x00, endpoint 0 (default endpoint).

Table 321. Device Set Address Register bit description

Symbol	Description	Reset value
DEV_ADDR	Device address set by the software. After a bus reset this field is set to 0x00.	0x00
DEV_EN	Device Enable. After a bus reset this bit is set to 1.	0
	0: Device will not respond to any packets.	
	1: Device will respond to packets for function address DEV_ADDR.	
	DEV_ADDR	DEV_ADDR Device address set by the software. After a bus reset this field is set to 0x00. DEV_EN Device Enable. After a bus reset this bit is set to 1. 0: Device will not respond to any packets.

13.12.2 Configure Device (Command: 0xD8, Data: write 1 byte)

A value of 1 written to the register indicates that the device is configured and all the enabled non-control endpoints will respond. Control endpoints are always enabled and respond even if the device is not configured, in the default state.

Chapter 13: LPC23XX USB device controller

Table 322. Configure Device Register bit description

Bit	Symbol	Description	Reset value
0	CONF_DEVICE	Device is configured. All enabled non-control endpoints will respond. This bit is cleared by hardware when a bus reset occurs. When set, the UP_LED signal is driven LOW if the device is not in the suspended state (SUS=0).	
7:1	-	Reserved, user software should not write ones to reserved bits. The value read from a reserved bit is not defined.	NA

13.12.3 Set Mode (Command: 0xF3, Data: write 1 byte)

Table 323. Set Mode Register bit description

Bit	Symbol	Value	Description	Reset value
0	AP_CLK		Always PLL Clock.	0
		0	USB_NEED_CLK is functional; the 48 MHz clock can be stopped when the device enters suspend state.	
		1	USB_NEED_CLK is fixed to 1; the 48 MHz clock cannot be stopped when the device enters suspend state.	
1	INAK_CI		Interrupt on NAK for Control IN endpoint.	0
		0	Only successful transactions generate an interrupt.	
		1	Both successful and NAKed IN transactions generate interrupts.	
2	INAK_CO		Interrupt on NAK for Control OUT endpoint.	0
		0	Only successful transactions generate an interrupt.	
		1	Both successful and NAKed OUT transactions generate interrupts.	
3	INAK_II		Interrupt on NAK for Interrupt IN endpoint.	0
		0	Only successful transactions generate an interrupt.	
		1	Both successful and NAKed IN transactions generate interrupts.	
4	INAK_IO[1]		Interrupt on NAK for Interrupt OUT endpoints.	0
		0	Only successful transactions generate an interrupt.	
		1	Both successful and NAKed OUT transactions generate interrupts.	
5	INAK_BI		Interrupt on NAK for Bulk IN endpoints.	0
		0	Only successful transactions generate an interrupt.	
		1	Both successful and NAKed IN transactions generate interrupts.	
6	INAK_BO[2]		Interrupt on NAK for Bulk OUT endpoints.	0
		0	Only successful transactions generate an interrupt.	
		1	Both successful and NAKed OUT transactions generate interrupts.	
7	-	-	Reserved, user software should not write ones to reserved bits. The value read from a reserved bit is not defined.	NA

^[1] This bit should be reset to 0 if the DMA is enabled for any of the Interrupt OUT endpoints.

^[2] This bit should be reset to 0 if the DMA is enabled for any of the Bulk OUT endpoints.

Chapter 13: LPC23XX USB device controller

13.12.4 Read Current Frame Number (Command: 0xF5, Data: read 1 or 2 bytes)

Returns the frame number of the last successfully received SOF. The frame number is eleven bits wide. The frame number returns least significant byte first. In case the user is only interested in the lower 8 bits of the frame number, only the first byte needs to be read.

- In case no SOF was received by the device at the beginning of a frame, the frame number returned is that of the last successfully received SOF.
- In case the SOF frame number contained a CRC error, the frame number returned will be the corrupted frame number as received by the device.

13.12.5 Read Test Register (Command: 0xFD, Data: read 2 bytes)

The test register is 16 bits wide. It returns the value of 0xA50F if the USB clocks (usbclk and AHB slave clock) are running.

13.12.6 Set Device Status (Command: 0xFE, Data: write 1 byte)

The Set Device Status command sets bits in the Device Status Register.

Table 324. Set Device Status Register bit description

Bit	Symbol	Value	Description	Reset value
0	CON		The Connect bit indicates the current connect status of the device. It controls the CONNECT output pin, used for SoftConnect. Reading the connect bit returns the current connect status. This bit is cleared by hardware when the V_{BUS} status input is LOW for more than 3 ms. The 3 ms delay filters out temporary dips in the V_{BUS} voltage.	0
		0	Writing a 0 will make the CONNECT pin go HIGH.	
		1	Writing a 1 will make the CONNECT pin go LOW	
1	CON_CH		Connect Change.	0
		0	This bit is cleared when read.	
		1	This bit is set when the device's pull-up resistor is disconnected because V_{BUS} disappeared. The DEV_STAT interrupt is generated when this bit is 1.	
2	SUS		Suspend: The Suspend bit represents the current suspend state. When the device is suspended (SUS = 1) and the CPU writes a 0 into it, the device will generate a remote wakeup. This will only happen when the device is connected (CON = 1). When the device is not connected or not suspended, writing a 0 has no effect. Writing a 1 to this bit has no effect.	0
		0	This bit is reset to 0 on any activity.	
		1	This bit is set to 1 when the device hasn't seen any activity on its upstream port for more than 3 ms.	

Chapter 13: LPC23XX USB device controller

Table 324. Set Device Status Register bit description

Bit	Symbol	Value	Description	Reset value
3	SUS_CH		Suspend (SUS) bit change indicator. The SUS bit can toggle because:	0
			The device goes into the suspended state.	
			The device is disconnected.	
			• The device receives resume signalling on its upstream port.	
			This bit is cleared when read.	
		0	SUS bit not changed.	
		1	SUS bit changed. At the same time a DEV_STAT interrupt is generated.	
4	RST		Bus Reset bit. On a bus reset, the device will automatically go to the default state. In the default state:	0
			Device is unconfigured.	
			 Will respond to address 0. 	
			 Control endpoint will be in the Stalled state. 	
			 All endpoints are unrealized except control endpoints EP0 and EP1. 	
			 Data toggling is reset for all endpoints. 	
			All buffers are cleared.	
			 There is no change to the endpoint interrupt status. 	
			 DEV_STAT interrupt is generated. 	
			Note: Bus resets are ignored when the device is not connected (CON=0).	
		0	This bit is cleared when read.	
		1	This bit is set when the device receives a bus reset. A DEV_STAT interrupt is generated.	
7:5	-		Reserved, user software should not write ones to reserved bits. The value read from a reserved bit is not defined.	NA

13.12.7 Get Device Status (Command: 0xFE, Data: read 1 byte)

The Get Device Status command returns the Device Status Register. Reading the device status returns 1 byte of data. The bit field definition is same as the Set Device Status Register as shown in <u>Table 324</u>.

Remark: To ensure correct operation, the DEV_STAT bit of USBDevIntSt must be cleared before executing the Get Device Status command.

13.12.8 Get Error Code (Command: 0xFF, Data: read 1 byte)

Different error conditions can arise inside the SIE. The Get Error Code command returns the last error code that occurred. The 4 least significant bits form the error code.

Chapter 13: LPC23XX USB device controller

Table 325. Get Error Code Register bit description

Bit	Symbol	Value	Description	Reset value
3:0	EC		Error Code.	0x0
		0000	No Error.	
		0001	PID Encoding Error.	
		0010	Unknown PID.	
		0011	Unexpected Packet - any packet sequence violation from the specification.	
		0100	Error in Token CRC.	
		0101	Error in Data CRC.	
		0110	Time Out Error.	
		0111	Babble.	
		1000	Error in End of Packet.	
		1001	Sent/Received NAK.	
		1010	Sent Stall.	
		1011	Buffer Overrun Error.	
		1100	Sent Empty Packet (ISO Endpoints only).	
		1101	Bitstuff Error.	
		1110	Error in Sync.	
		1111	Wrong Toggle Bit in Data PID, ignored data.	
4	EA	-	The Error Active bit will be reset once this register is read.	
7:5	-		Reserved, user software should not write ones to reserved bits. The value read from a reserved bit is not defined.	NA

13.12.9 Read Error Status (Command: 0xFB, Data: read 1 byte)

This command reads the 8-bit Error register from the USB device. This register records which error events have recently occurred in the SIE. If any of these bits are set, the ERR_INT bit of USBDevIntSt is set. The error bits are cleared after reading this register.

Table 326. Read Error Status Register bit description

Bit	Symbol	Description	Reset value
0	PID_ERR	PID encoding error or Unknown PID or Token CRC.	0
1	UEPKT	Unexpected Packet - any packet sequence violation from the specification.	0
2	DCRC	Data CRC error.	0
3	TIMEOUT	Time out error.	0
4	EOP	End of packet error.	0
5	B_OVRN	Buffer Overrun.	0
6	BTSTF	Bit stuff error.	0
7	TGL_ERR	Wrong toggle bit in data PID, ignored data.	0

Chapter 13: LPC23XX USB device controller

13.12.10 Select Endpoint (Command: 0x00 - 0x1F, Data: read 1 byte (optional))

The Select Endpoint command initializes an internal pointer to the start of the selected buffer in EP_RAM. Optionally, this command can be followed by a data read, which returns some additional information on the packet(s) in the endpoint buffer(s). The command code of the Select Endpoint command is equal to the physical endpoint number. In the case of a single buffered endpoint the B_2_FULL bit is not valid.

Table 327. Select Endpoint Register bit description

Bit	Symbol	Value	Description	Reset value
0	FE		Full/Empty. This bit indicates the full or empty status of the endpoint buffer(s). For IN endpoints, the FE bit gives the ANDed result of the B_1_FULL and B_2_FULL bits. For OUT endpoints, the FE bit gives ORed result of the B_1_FULL and B_2_FULL bits. For single buffered endpoints, this bit simply reflects the status of B_1_FULL.	0
		0	For an IN endpoint, at least one write endpoint buffer is empty.	
		1	For an OUT endpoint, at least one endpoint read buffer is full.	
1	ST		Stalled endpoint indicator.	0
		0	The selected endpoint is not stalled.	
		1	The selected endpoint is stalled.	
2	STP		SETUP bit: the value of this bit is updated after each successfully received packet (i.e. an ACKed package on that particular physical endpoint).	0
		0	The STP bit is cleared by doing a Select Endpoint/Clear Interrupt on this endpoint.	
		1	The last received packet for the selected endpoint was a SETUP packet.	
3	PO		Packet over-written bit.	0
		0	The PO bit is cleared by the 'Select Endpoint/Clear Interrupt' command.	
		1	The previously received packet was over-written by a SETUP packet.	
4	EPN		EP NAKed bit indicates sending of a NAK. If the host sends an OUT packet to a filled OUT buffer, the device returns NAK. If the host sends an IN token packet to an empty IN buffer, the device returns NAK.	0
		0	The EPN bit is reset after the device has sent an ACK after an OUT packet or when the device has seen an ACK after sending an IN packet.	
		1	The EPN bit is set when a NAK is sent and the interrupt on NAK feature is enabled.	
5	B_1_FULL		The buffer 1 status.	0
		0	Buffer 1 is empty.	
		1	Buffer 1 is full.	

Chapter 13: LPC23XX USB device controller

Table 327. Select Endpoint Register bit description

Bit	Symbol	Value	Description	Reset value
6	B_2_FULL		The buffer 2 status.	0
		0	Buffer 2 is empty.	
		1	Buffer 2 is full.	
7	-	-	Reserved, user software should not write ones to reserved bits. The value read from a reserved bit is not defined.	NA

13.12.11 Select Endpoint/Clear Interrupt (Command: 0x40 - 0x5F, Data: read 1 byte)

Commands 0x40 to 0x5F are identical to their Select Endpoint equivalents, with the following differences:

- They clear the bit corresponding to the endpoint in the USBEpIntSt register.
- In case of a control OUT endpoint, they clear the STP and PO bits in the corresponding Select Endpoint Register.
- Reading one byte is obligatory.

Remark: This command may be invoked by using the USBCmdCode and USBCmdData registers, or by setting the corresponding bit in USBEpIntClr. For ease of use, using the USBEpIntClr register is recommended.

13.12.12 Set Endpoint Status (Command: 0x40 - 0x55, Data: write 1 byte (optional))

The Set Endpoint Status command sets status bits 7:5 and 0 of the endpoint. The Command Code of Set Endpoint Status is equal to the sum of 0x40 and the physical endpoint number in hex. Not all bits can be set for all types of endpoints.

Table 328. Set Endpoint Status Register bit description

Bit	Symbol	Value	Description	Reset value
0	ST		Stalled endpoint bit. A Stalled control endpoint is automatically unstalled when it receives a SETUP token, regardless of the content of the packet. If the endpoint should stay in its stalled state, the CPU can stall it again by setting this bit. When a stalled endpoint is unstalled - either by the Set Endpoint Status command or by receiving a SETUP token - it is also re-initialized. This flushes the buffer: in case of an OUT buffer it waits for a DATA 0 PID; in case of an IN buffer it writes a DATA 0 PID. There is no change of the interrupt status of the endpoint. When already unstalled, writing a zero to this bit initializes the endpoint. When an endpoint is stalled by the Set Endpoint Status command, it is also re-initialized.	0
		0	The endpoint is unstalled.	
		1	The endpoint is stalled.	
4:1	-	-	Reserved, user software should not write ones to reserved bits. The value read from a reserved bit is not defined.	NA

Chapter 13: LPC23XX USB device controller

Table 328. Set Endpoint Status Register bit description

Bit	Symbol	Value	Description	Reset value
5 DA			Disabled endpoint bit.	0
		0	The endpoint is enabled.	
		1	The endpoint is disabled.	
6	RF_MO		Rate Feedback Mode.	0
		0	Interrupt endpoint is in the Toggle mode.	
		1	Interrupt endpoint is in the Rate Feedback mode. This means that transfer takes place without data toggle bit.	
7	CND_ST		Conditional Stall bit.	0
		0	Unstalls both control endpoints.	
		1	Stall both control endpoints, unless the STP bit is set in the Select Endpoint register. It is defined only for control OUT endpoints.	

13.12.13 Clear Buffer (Command: 0xF2, Data: read 1 byte (optional))

When an OUT packet sent by the host has been received successfully, an internal hardware FIFO status Buffer_Full flag is set. All subsequent packets will be refused by returning a NAK. When the device software has read the data, it should free the buffer by issuing the Clear Buffer command. This clears the internal Buffer_Full flag. When the buffer is cleared, new packets will be accepted.

When bit 0 of the optional data byte is 1, the previously received packet was over-written by a SETUP packet. The Packet over-written bit is used only in control transfers. According to the USB specification, a SETUP packet should be accepted irrespective of the buffer status. The software should always check the status of the PO bit after reading the SETUP data. If it is set then it should discard the previously read data, clear the PO bit by issuing a Select Endpoint/Clear Interrupt command, read the new SETUP data and again check the status of the PO bit.

See <u>Section 13.14 "Slave mode operation"</u> for a description of when this command is used.

Table 329. Clear Buffer Register bit description

Bit	Symbol	Value	Description	Reset value
0	РО	O Packet over-written bit. This bit is only applicable to the control endpoint EP0.		0
		0	The previously received packet is intact.	
		1	The previously received packet was over-written by a later SETUP packet.	
7:1	-	-	Reserved, user software should not write ones to reserved bits. The value read from a reserved bit is not defined.	NA

13.12.14 Validate Buffer (Command: 0xFA, Data: none)

When the CPU has written data into an IN buffer, software should issue a Validate Buffer command. This tells hardware that the buffer is ready for sending on the USB bus. Hardware will send the contents of the buffer when the next IN token packet is received.

Chapter 13: LPC23XX USB device controller

Internally, there is a hardware FIFO status flag called Buffer_Full. This flag is set by the Validate Buffer command and cleared when the data has been sent on the USB bus and the buffer is empty.

A control IN buffer cannot be validated when its corresponding OUT buffer has the Packet Over-written (PO) bit (see the Clear Buffer Register) set or contains a pending SETUP packet. For the control endpoint the validated buffer will be invalidated when a SETUP packet is received.

See <u>Section 13.14 "Slave mode operation"</u> for a description of when this command is used.

13.13 USB device controller initialization

The LPC23xx USB device controller initialization includes the following steps:

- 1. Enable the device controller by setting the PCUSB bit of PCONP.
- Configure and enable the PLL and Clock Dividers to provide 48 MHz for usbclk and the desired frequency for cclk. For correct operation of synchronization logic in the device controller, the minimum cclk frequency is 18 MHz. For the procedure for determining the PLL setting and configuration, see <u>Section 4.6.12 "Procedure for</u> <u>determining PLL settings"</u>.
- Enable the device controller clocks by setting DEV_CLK_EN and AHB_CLK_EN bits in the USBClkCtrl register. Poll the respective clock bits in the USBClkSt register until they are set.
- 4. LPC2377/78 and LPC2388 only: select the desired USB port pins using the USBPortSel register. The PORTSEL_CLK_EN bit must be set in USBClkCtrl before accessing USBPortSel and should be cleared after accessing USBPortSel.
- 5. Enable the USB pin functions by writing to the corresponding PINSEL register.
- Disable the pull-up resistor on the V_{BUS} pin using the corresponding PINMODE register.
- 7. Set USBEpIn and USBMaxPSize registers for EP0 and EP1, and wait until the EP RLZED bit in USBDevIntSt is set so that EP0 and EP1 are realized.
- 8. Enable endpoint interrupts (Slave mode):
 - Clear all endpoint interrupts using USBEpIntClr.
 - Clear any device interrupts using USBDevIntClr.
 - Enable Slave mode for the desired endpoints by setting the corresponding bits in USBEpIntEn.
 - Set the priority of each enabled interrupt using USBEpIntPri.
 - Configure the desired interrupt mode using the SIE Set Mode command.
 - Enable device interrupts using USBDevIntEn (normally DEV_STAT, EP_SLOW, and possibly EP_FAST).
- 9. Configure the DMA (DMA mode):
 - Disable DMA operation for all endpoints using USBEpDMADis.
 - Clear any pending DMA requests using USBDMARCIr.

Chapter 13: LPC23XX USB device controller

- Clear all DMA interrupts using USBEoTIntClr, USBNDDRIntClr, and USBSysErrIntClr.
- Prepare the UDCA in system memory.
- Write the desired address for the UDCA to USBUDCAH (for example 0x7FD0 0000).
- Enable the desired endpoints for DMA operation using USBEpDMAEn.
- Set EOT, DDR, and ERR bits in USBDMAIntEn.
- 10. Install USB interrupt handler in the VIC by writing its address to the corresponding VICVectAddr register and enabling the USB interrupt in the VICIntEnable register.
- 11. Set default USB address to 0x0 and DEV_EN to 1 using the SIE Set Address command. A bus reset will also cause this to happen.
- 12. Set CON bit to 1 to make CONNECT active using the SIE Set Device Status command.

The configuration of the endpoints varies depending on the software application. By default, all the endpoints are disabled except control endpoints EP0 and EP1. Additional endpoints are enabled and configured by software after a SET_CONFIGURATION or SET_INTERFACE device request is received from the host.

13.14 Slave mode operation

In Slave mode, the CPU transfers data between RAM and the endpoint buffer using the Register Interface.

13.14.1 Interrupt generation

In slave mode, data packet transfer between RAM and an endpoint buffer can be initiated in response to an endpoint interrupt. Endpoint interrupts are enabled using the USBEpIntEn register, and are observable in the USBEpIntSt register.

All non-isochronous OUT endpoints generate an endpoint interrupt when they receive a packet without an error. All non-isochronous IN endpoints generate an interrupt when a packet is successfully transmitted, or when a NAK handshake is sent on the bus and the interrupt on NAK feature is enabled.

For Isochronous endpoints, transfer of data is done when the FRAME interrupt (in USBDevIntSt) occurs.

13.14.2 Data transfer for OUT endpoints

When the software wants to read the data from an endpoint buffer it should set the RD_EN bit and program LOG_ENDPOINT with the desired endpoint number in the USBCtrl register. The control logic will fetch the packet length to the USBRxPLen register, and set the PKT_RDY bit (Table 295).

Software can now start reading the data from the USBRxData register (<u>Table 294</u>). When the end of packet is reached, the RD_EN bit is cleared, and the RxENDPKT bit is set in the USBDevSt register. Software now issues a Clear Buffer (refer to <u>Table 329</u>) command. The endpoint is now ready to accept the next packet. For OUT isochronous endpoints, the

Chapter 13: LPC23XX USB device controller

next packet will be received irrespective of whether the buffer has been cleared. Any data not read from the buffer before the end of the frame is lost. See <u>Section 13.16 "Double buffered endpoint operation"</u> for more details.

If the software clears RD_EN before the entire packet is read, reading is terminated, and the data remains in the endpoint's buffer. When RD_EN is set again for this endpoint, the data will be read from the beginning.

13.14.3 Data transfer for IN endpoints

When writing data to an endpoint buffer, WR_EN (<u>Section 13.10.6.5</u> "<u>USB Control register (USBCtrl - 0xFFE0 C228)</u>") is set and software writes to the number of bytes it is going to send in the packet to the USBTxPLen register (<u>Section 13.10.6.4</u>). It can then write data continuously in the USBTxData register.

When the number of bytes programmed in USBTxPLen have been written to USBTxData, the WR_EN bit is cleared, and the TxENDPKT bit is set in the USBDevIntSt register. Software issues a Validate Buffer (Section 13.12.14 "Validate Buffer (Command: 0xFA, Data: none)") command. The endpoint is now ready to send the packet. For IN isochronous endpoints, the data in the buffer will be sent only if the buffer is validated before the next FRAME interrupt occurs; otherwise, an empty packet will be sent in the next frame. If the software clears WR_EN before the entire packet is written, writing will start again from the beginning the next time WR_EN is set for this endpoint.

Both RD_EN and WR_EN can be high at the same time for the same logical endpoint. Interleaved read and write operation is possible.

13.15 DMA operation

In DMA mode, the DMA transfers data between RAM and the endpoint buffer.

The following sections discuss DMA mode operation. Background information is given in sections Section 13.15.2 "USB device communication area" and Section 13.15.3 "Triggering the DMA engine". The fields of the DMA Descriptor are described in section Section 13.15.4 "The DMA descriptor". The last three sections describe DMA operation: Section 13.15.5 "Non-isochronous endpoint operation", Section 13.15.6 "Isochronous endpoint operation", and Section 13.15.7 "Auto Length Transfer Extraction (ATLE) mode operation".

13.15.1 Transfer terminology

Within this section three types of transfers are mentioned:

- USB transfers transfer of data over the USB bus. The USB 2.0 specification refers
 to these simply as transfers. Within this section they are referred to as USB transfers
 to distinguish them from DMA transfers. A USB transfer is composed of transactions.
 Each transaction is composed of packets.
- 2. DMA transfers the transfer of data between an endpoint buffer and system memory (RAM).
- Packet transfers in this section, a packet transfer refers to the transfer of a packet of data between an endpoint buffer and system memory (RAM). A DMA transfer is composed of one or more packet transfers.


Chapter 13: LPC23XX USB device controller

13.15.2 USB device communication area

The CPU and DMA controller communicate through a common area of memory, called the USB Device Communication Area, or UDCA. The UDCA is a 32-word array of DMA Descriptor Pointers (DDPs), each of which corresponds to a physical endpoint. Each DDP points to the start address of a DMA Descriptor, if one is defined for the endpoint. DDPs for unrealized endpoints and endpoints disabled for DMA operation are ignored and can be set to a NULL (0x0) value.

The start address of the UDCA is stored in the USBUDCAH register. The UDCA can reside at any 128-byte boundary of RAM that is accessible to both the CPU and DMA controller.

<u>Figure 65</u> illustrates the UDCA and its relationship to the UDCA Head (USBUDCAH) register and DMA Descriptors.

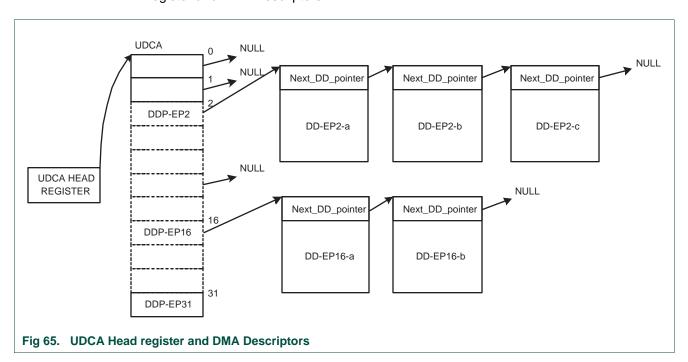

13.15.3 Triggering the DMA engine

An endpoint raises a DMA request when Slave mode is disabled by setting the corresponding bit in the USBEpIntEn register to 0 (Section 13.10.4.2) and an endpoint interrupt occurs (see Section 13.10.8.1 "USB DMA Request Status register (USBDMARSt - 0xFFE0 C250)").

A DMA transfer for an endpoint starts when the endpoint is enabled for DMA operation in USBEpDMASt, the corresponding bit in USBDMARSt is set, and a valid DD is found for the endpoint.

All endpoints share a single DMA channel to minimize hardware overhead. If more than one DMA request is active in USBDMARSt, the endpoint with the lowest physical endpoint number is processed first.

Chapter 13: LPC23XX USB device controller

In DMA mode, the bits corresponding to Interrupt on NAK for Bulk OUT and Interrupt OUT endpoints (INAK_BO and INAK_IO) should be set to 0 using the SIE Set Mode command (Section 13.12.3).

13.15.4 The DMA descriptor

DMA transfers are described by a data structure called the DMA Descriptor (DD).

DDs are placed in the USB RAM. These descriptors can be located anywhere in the USB RAM at word-aligned addresses. USB RAM is part of the system memory that is used for the USB purposes. It is located at address 0x7FD0 0000 and is 8 kB in size.

DDs for non-isochronous endpoints are four words long. DDs for isochronous endpoints are five words long.

The parameters associated with a DMA transfer are:

- The start address of the DMA buffer
- The length of the DMA buffer
- The start address of the next DMA descriptor
- Control information
- Count information (number of bytes transferred)
- Status information

Table 330 lists the DMA descriptor fields.

Table 330. DMA descriptor

		-		
Word position	Access (H/W)	Access (S/W)	Bit position	Description
0	R	R/W	31:0	Next_DD_pointer (USB RAM address)
1	R	R/W	1:0	DMA_mode (00 -Normal; 01 - ATLE)
	R	R/W	2	Next_DD_valid (1 - valid; 0 - invalid)
	-	-	3	Reserved
	R	R/W	4	Isochronous_endpoint (1 - isochronous; 0 - non-isochronous)
	R	R/W	15:5	Max_packet_size
	R/W[1]	R/W	31:16	DMA_buffer_length
				This value is specified in bytes for non-isochronous endpoints and in number of packets for isochronous endpoints.
2	R/W	R/W	31:0	DMA_buffer_start_addr

Chapter 13: LPC23XX USB device controller

Table 330. DMA descriptor

Word position	Access (H/W)	Access (S/W)	Bit position	Description
3	R/W	R/I	0	DD_retired (To be initialized to 0)
	W	R/I	4:1	DD_status (To be initialized to 0000):
				0000 - NotServiced
				0001 - BeingServiced
				0010 - NormalCompletion
				0011 - DataUnderrun (short packet)
				1000 - DataOverrun
				1001 - SystemError
	W	R/I	5	Packet_valid (To be initialized to 0)
	W	R/I	6	LS_byte_extracted (ATLE mode) (To be initialized to 0)
	W	R/I	7	MS_byte_extracted (ATLE mode) (To be initialized to 0)
	R	W	13:8	Message_length_position (ATLE mode)
	-	-	15:14	Reserved
	R/W	R/I	31:16	Present_DMA_count (To be initialized to 0)
4	R/W	R/W	31:0	Isochronous_packetsize_memory_address

^[1] Write only in ATLE mode

Legend: R - Read; W - Write; I - Initialize

13.15.4.1 Next_DD_pointer

Pointer to the memory location from where the next DMA descriptor will be fetched.

13.15.4.2 DMA_mode

Specifies the DMA mode of operation. Two modes have been defined: Normal and Automatic Transfer Length Extraction (ATLE) mode. In normal mode, software initializes the DMA_buffer_length for OUT endpoints. In ATLE mode, the DMA_buffer_length is extracted from the incoming data. See Section 13.15.7 "Auto Length Transfer Extraction (ATLE) mode operation" on page 372 for more details.

13.15.4.3 Next_DD_valid

This bit indicates whether the software has prepared the next DMA descriptor. If set, the DMA engine fetches the new descriptor when it is finished with the current one.

13.15.4.4 Isochronous_endpoint

When set, this bit indicates that the descriptor belongs to an isochronous endpoint. Hence 5 words have to be read when fetching it.

13.15.4.5 Max_packet_size

The maximum packet size of the endpoint. This parameter is used while transferring the data for IN endpoints from the memory. It is used for OUT endpoints to detect the short packet. This is applicable to non-isochronous endpoints only. This field should be set to the same MPS value that is assigned for the endpoint using the USBMaxPSize register.

Chapter 13: LPC23XX USB device controller

13.15.4.6 DMA_buffer_length

This indicates the depth of the DMA buffer allocated for transferring the data. The DMA engine will stop using this descriptor when this limit is reached and will look for the next descriptor.

In Normal mode operation, software sets this value for both IN and OUT endpoints. In ATLE mode operation, software sets this value for IN endpoints only. For OUT endpoints, hardware sets this value using the extracted length of the data stream.

For isochronous endpoints, DMA_buffer_length is specified in number of packets, for non-isochronous endpoints in bytes.

13.15.4.7 DMA buffer start addr

The address where the data is read from or written to. This field is updated each time the DMA engine finishes transferring a packet.

13.15.4.8 DD retired

This bit is set by hardware when the DMA engine finishes the current descriptor. This happens when the end of the buffer is reached, a short packet is transferred (non-isochronous endpoints), or an error condition is detected.

13.15.4.9 DD status

The status of the DMA transfer is encoded in this field. The following codes are defined:

- NotServiced No packet has been transferred yet.
- BeingServiced At least one packet is transferred.
- **NormalCompletion** The DD is retired because the end of the buffer is reached and there were no errors. The DD retired bit is also set.
- DataUnderrun Before reaching the end of the DMA buffer, the USB transfer is terminated because a short packet is received. The DD_retired bit is also set.
- DataOverrun The end of the DMA buffer is reached in the middle of a packet transfer. This is an error situation. The DD_retired bit is set. The present DMA count field is equal to the value of DMA_buffer_length. The packet must be re-transmitted from the endpoint buffer in another DMA transfer. The corresponding EPxx DMA ENABLE bit in USBEpDMASt is cleared.
- SystemError The DMA transfer being serviced is terminated because of an error on the AHB bus. The DD_retired bit is not set in this case. The corresponding EPxx_DMA_ENABLE in USBEpDMASt is cleared. Since a system error can happen while updating the DD, the DD fields in RAM may be unreliable.

13.15.4.10 Packet valid

This bit is used for isochronous endpoints. It indicates whether the last packet transferred to the memory is received with errors or not. This bit is set if the packet is valid, i.e., it was received without errors. See Section 13.15.6 "Isochronous endpoint operation" on page 370 for isochronous endpoint operation.

This bit is unnecessary for non-isochronous endpoints because a DMA request is generated only for packets without errors, and thus Packet_valid will always be set when the request is generated.

Chapter 13: LPC23XX USB device controller

13.15.4.11 LS_byte_extracted

Used in ATLE mode. When set, this bit indicates that the Least Significant Byte (LSB) of the transfer length has been extracted. The extracted size is reflected in the DMA buffer length field, bits 23:16.

13.15.4.12 MS_byte_extracted

Used in ATLE mode. When set, this bit indicates that the Most Significant Byte (MSB) of the transfer size has been extracted. The size extracted is reflected in the DMA_buffer_length field, bits 31:24. Extraction stops when LS_Byte_extracted and MS_byte_extracted bits are set.

13.15.4.13 Present DMA count

The number of bytes transferred by the DMA engine. The DMA engine updates this field after completing each packet transfer.

For isochronous endpoints, Present_DMA_count is the number of packets transferred; for non-isochronous endpoints, Present_DMA_count is the number of bytes.

13.15.4.14 Message_length_position

Used in ATLE mode. This field gives the offset of the message length position embedded in the incoming data packets. This is applicable only for OUT endpoints. Offset 0 indicates that the message length starts from the first byte of the first packet.

13.15.4.15 Isochronous_packetsize_memory_address

The memory buffer address where the packet size information along with the frame number has to be transferred or fetched. See <u>Figure 66</u>. This is applicable to isochronous endpoints only.

13.15.5 Non-isochronous endpoint operation

13.15.5.1 Setting up DMA transfers

Software prepares the DMA Descriptors (DDs) for those physical endpoints to be enabled for DMA transfer. These DDs are present in the USB RAM. The start address of the first DD is programmed into the DMA Description pointer (DDP) location for the corresponding endpoint in the UDCA. Software then sets the EPxx_DMA_ENABLE bit for this endpoint in the USBEpDMAEn register (Section 13.10.8.6). The DMA_mode bit field in the descriptor is set to '00' for normal mode operation. All other DD fields are initialized as specified in Table 330.

DMA operation is not supported for physical endpoints 0 and 1 (default control endpoints).

13.15.5.2 Finding DMA Descriptor

When there is a trigger for a DMA transfer for an endpoint, the DMA engine will first determine whether a new descriptor has to the fetched or not. A new descriptor does not have to be fetched if the last packet transferred was for the same endpoint and the DD is not yet in the retired state. An internal flag called DMA_PROCEED is used to identify this condition (see Section 13.15.5.4 "Optimizing descriptor fetch" on page 369).

Chapter 13: LPC23XX USB device controller

If a new descriptor has to be read, the DMA engine will calculate the location of the DDP for this endpoint and will fetch the start address of the DD from this location. A DD start address at location zero is considered invalid. In this case the NDDR interrupt is raised. All other word-aligned addresses are considered valid.

When the DD is fetched, the DD status word (word 3) is read first and the status of the DD_retired bit is checked. If not set, DDP points to a valid DD. If DD_retired is set, the DMA engine will read the control word (word 1) of the DD.

If Next_DD_valid bit is set, the DMA engine will fetch the Next_DD_pointer field (word 0) of the DD and load it to the DDP. The new DDP is written to the UDCA area.

The full DD (4 words) will then be fetched from the address in the DDP. The DD will give the details of the DMA transfer to be done. The DMA engine will load its hardware resources with the information fetched from the DD (start address, DMA count etc.).

If Next_DD_valid is not set and DD_retired bit is set, the DMA engine raises the NDDR interrupt for this endpoint and clears the corresponding EPxx_DMA_ENABLE bit.

13.15.5.3 Transferring the data

For OUT endpoints, the current packet is read from the EP_RAM by the DMA Engine and transferred to the USB RAM memory locations starting from DMA_buffer_start_addr. For IN endpoints, the data is fetched from the USB RAM at DMA_buffer_start_addr and written to the EP_RAM. The DMA_buffer_start_addr and Present_DMA_count fields are updated after each packet is transferred.

13.15.5.4 Optimizing descriptor fetch

A DMA transfer normally involves multiple packet transfers. Hardware will not re-fetch a new DD from memory unless the endpoint changes. To indicate an ongoing multi-packet transfer, hardware sets an internal flag called DMA_PROCEED.

The DMA_PROCEED flag is cleared after the required number of bytes specified in the DMA_buffer_length field is transferred. It is also cleared when the software writes into the USBEpDMADis register. The ability to clear the DMA_PROCEED flag allows software to force the DD to be re-fetched for the next packet transfer. Writing all zeros into the USBEpDMADis register clears the DMA_PROCEED flag without disabling DMA operation for any endpoint.

13.15.5.5 Ending the packet transfer

On completing a packet transfer, the DMA engine writes back the DD with updated status information to the same memory location from where it was read. The DMA_buffer_start_addr, Present_DMA_count, and the DD_status fields in the DD are updated.

A DD can have the following types of completion:

Normal completion - If the current packet is fully transferred and the Present_DMA_count field equals the DMA_buffer_length, the DD has completed normally. The DD will be written back to memory with DD_retired set and DD_status set to NormalCompletion. The EOT interrupt is raised for this endpoint.

Chapter 13: LPC23XX USB device controller

USB transfer end completion - If the current packet is fully transferred and its size is less than the Max_packet_size field, and the end of the DMA buffer is still not reached, the USB transfer end completion occurs. The DD will be written back to the memory with DD_retired set and DD_Status set to the DataUnderrun completion code. The EOT interrupt is raised for this endpoint.

Error completion - If the current packet is partially transferred i.e. the end of the DMA buffer is reached in the middle of the packet transfer, an error situation occurs. The DD is written back with DD_retired set and DD_status set to the DataOverrun status code. The EOT interrupt is raised for this endpoint and the corresponding bit in USBEpDMASt register is cleared. The packet will be re-sent from the endpoint buffer to memory when the corresponding EPxx_DMA_ENABLE bit is set again using the USBEpDMAEn register.

13.15.5.6 No Packet DD

For an IN transfer, if the system does not have any data to send for a while, it can respond to an NDDR interrupt by programming a No_Packet DD. This is done by setting both the Max_packet_size and DMA_buffer_length fields in the DD to 0. On processing a No_Packet DD, the DMA engine clears the DMA request bit in USBDMARSt corresponding to the endpoint without transferring a packet. The DD is retired with a status code of NormalCompletion. This can be repeated as often as necessary. The device will respond to IN token packets on the USB bus with a NAK until a DD with a data packet is programmed and the DMA transfers the packet into the endpoint buffer.

13.15.6 Isochronous endpoint operation

For isochronous endpoints, the packet size can vary for each packet. There is one packet per isochronous endpoint for each frame.

13.15.6.1 Setting up DMA transfers

Software sets the isochronous endpoint bit to 1 in the DD, and programs the initial value of the Isochronous_packetsize_memory_address field. All other fields are initialized the same as for non-isochronous endpoints.

For isochronous endpoints, the DMA_buffer_length and Present_DMA_count fields are in frames rather than bytes.

13.15.6.2 Finding the DMA Descriptor

Finding the descriptors is done in the same way as that for a non-isochronous endpoint.

A DMA request will be placed for DMA-enabled isochronous endpoints on every FRAME interrupt. On processing the request, the DMA engine will fetch the descriptor and if Isochronous_endpoint is set, will fetch the Isochronous_packetsize_memory_address from the fifth word of the DD.

13.15.6.3 Transferring the Data

The data is transferred to or from the memory location DMA_buffer_start_addr. After the end of the packet transfer the Present_DMA_count value is incremented by 1.

Chapter 13: LPC23XX USB device controller

The isochronous packet size is stored in memory as shown in <u>Figure 66</u>. Each word in the packet size memory shown is divided into fields: Frame_number (bits 31 to 17), Packet_valid (bit 16), and Packet_length (bits 15 to 0). The space allocated for the packet size memory for a given DD should be DMA_buffer_length words in size – one word for each packet to transfer.

OUT endpoints

At the completion of each frame, the packet size is written to the address location in Isochronous_packet_size_memory_address, and Isochronous packet size memory address is incremented by 4.

IN endpoints

Only the Packet_length field of the isochronous packet size word is used. For each frame, an isochronous data packet of size specified by this field is transferred from the USB device to the host, and Isochronous_packet_size_memory_address is incremented by 4 at the end of the packet transfer. If Packet_length is zero, an empty packet will be sent by the USB device.

13.15.6.4 DMA descriptor completion

DDs for isochronous endpoints can only end with a status code of NormalCompletion since there is no short packet on Isochronous endpoints, and the USB transfer continues indefinitely until a SystemError occurs. There is no DataOverrun detection for isochronous endpoints.


13.15.6.5 Isochronous OUT Endpoint Operation Example

Assume that an isochronous endpoint is programmed for the transfer of 10 frames and that the transfer begins when the frame number is 21. After transferring four frames with packet sizes of 10,15, 8 and 20 bytes without errors, the descriptor and memory map appear as shown in Figure 66.

The total number of bytes transferred = 0x0A + 0x0F + 0x08 + 0x14 = 0x35.

The Packet valid bit (bit 16) of all the words in the packet length memory is set to 1.

Chapter 13: LPC23XX USB device controller

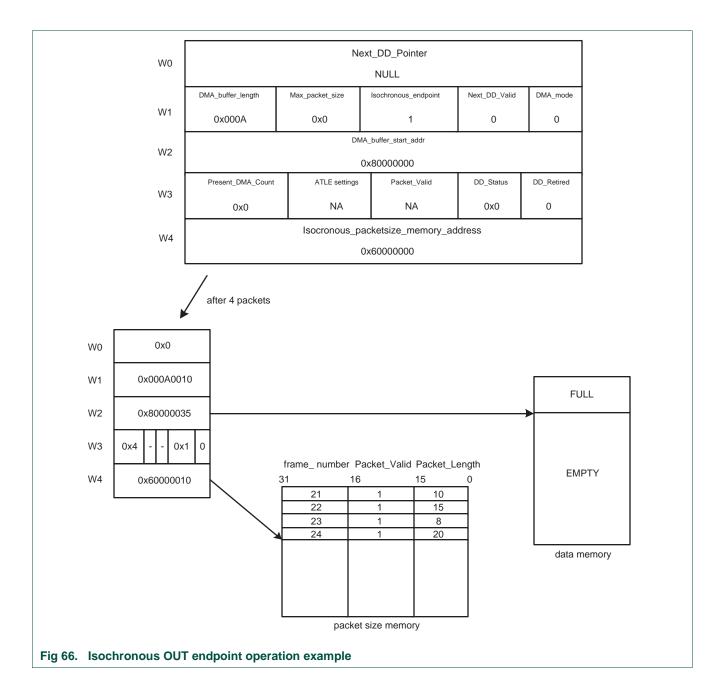

13.15.7 Auto Length Transfer Extraction (ATLE) mode operation

Some host drivers such as NDIS (Network Driver Interface Specification) host drivers are capable of concatenating small USB transfers (delta transfers) to form a single large USB transfer. For OUT USB transfers, the device hardware has to break up this concatenated transfer back into the original delta transfers and transfer them to separate DMA buffers. This is achieved by setting the DMA mode to Auto Transfer Length Extraction (ATLE) mode in the DMA descriptor. ATLE mode is supported for Bulk endpoints only.

OUT transfers in ATLE mode

Chapter 13: LPC23XX USB device controller

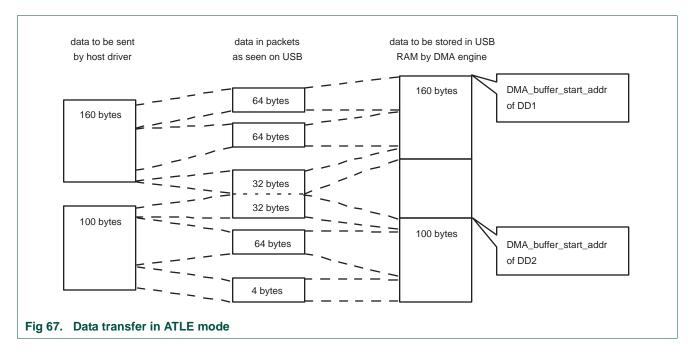


Figure 67 shows a typical OUT USB transfer in ATLE mode, where the host concatenates two USB transfers of 160 bytes and 100 bytes, respectively. Given a MaxPacketSize of 64, the device hardware interprets this USB transfer as four packets of 64 bytes and a short packet of 4 bytes. The third and fourth packets are concatenated. Note that in Normal mode, the USB transfer would be interpreted as packets of 64, 64, 32, and 64 and 36 bytes.

It is now the responsibility of the DMA engine to separate these two USB transfers and put them in the memory locations in the DMA_buffer_start_addr field of DMA Descriptor 1 (DD1) and DMA Descriptor 2 (DD2).

Hardware reads the two-byte-wide DMA_buffer_length at the offset (from the start of the USB transfer) specified by Message_length_position from the incoming data packets and writes it in the DMA_buffer_length field of the DD. To ensure that both bytes of the DMA_buffer_length are extracted in the event they are split between two packets, the flags LS_byte_extracted and MS_byte_extracted are set by hardware after the respective byte is extracted. After the extraction of the MS byte, the DMA transfer continues as in the normal mode.

The flags LS_byte_extracted and MS_byte_extracted are set to 0 by software when preparing a new DD. Therefore, once a DD is retired, the transfer length is extracted again for the next DD.

If DD1 is retired during the transfer of a concatenated packet (such as the third packet in Figure 67), and DD2 is not programmed (Next_DD_valid field of DD1 is 0), then DD1 is retired with DD_status set to the DataOverrun status code. This is treated as an error condition and the corresponding EPxx_DMA_ENABLE bit of USBEpDMASt is cleared by hardware.

Chapter 13: LPC23XX USB device controller

In ATLE mode, the last buffer length to be transferred always ends with a short or empty packet indicating the end of the USB transfer. If the concatenated transfer lengths are such that the USB transfer ends on a MaxPacketSize packet boundary, the (NDIS) host will send an empty packet to mark the end of the USB transfer.

IN transfers in ATLE mode

For IN USB transfers from the device to the host, DMA_buffer_length is set by the device software as in normal mode.

In ATLE mode, the device concatenates data from multiple DDs to form a single USB transfer. If a DD is retired in the middle of a packet (packet size is less than MaxPacketSize), the next DD referenced by Next_DD_pointer is fetched, and the remaining bytes to form a packet of MaxPacketSize are transferred from the next DD's buffer.

If the next DD is not programmed (i.e. Next_DD_valid field in DD is 0), and the DMA buffer length for the current DD has completed before the MaxPacketSize packet boundary, then the available bytes from current DD are sent as a short packet on USB, which marks the end of the USB transfer for the host.

If the last buffer length completes on a MaxPacketSize packet boundary, the device software must program the next DD with DMA_buffer_length field 0, so that an empty packet is sent by the device to mark the end of the USB transfer for the host.

13.15.7.1 Setting up the DMA transfer

For OUT endpoints, the host hardware needs to set the field Message_length_position in the DD. This indicates the start location of the message length in the incoming data packets. Also the device software has to set the DMA_buffer_length field to 0 for OUT endpoints because this field is updated by the device hardware after the extraction of the buffer length.

For IN endpoints, descriptors are set in the same way as in normal mode operation.

Since a single packet can be split between two DDs, software should always keep two DDs ready, except for the last DMA transfer which ends with a short or empty packet.

13.15.7.2 Finding the DMA Descriptor

DMA descriptors are found in the same way as the normal mode operation.

13.15.7.3 Transferring the Data

OUT endpoints

If the LS_byte_extracted or MS_byte_extracted bit in the status field is not set, the hardware will extract the transfer length from the data stream and program DMA_buffer_length. Once the extraction is complete both the LS_byte_extracted and MS_byte_extracted bits will be set.

IN endpoints

The DMA transfer proceeds as in normal mode and continues until the number of bytes transferred equals the DMA_buffer_length.

Chapter 13: LPC23XX USB device controller

13.15.7.4 Ending the packet transfer

The DMA engine proceeds with the transfer until the number of bytes specified in the field DMA_buffer_length is transferred to or from the USB RAM. Then the EOT interrupt will be generated. If this happens in the middle of the packet, the linked DD will get loaded and the remaining part of the packet gets transferred to or from the address pointed by the new DD.

OUT endpoints

If the linked DD is not valid and the packet is partially transferred to memory, the DD ends with DataOverrun status code set, and the DMA will be disabled for this endpoint. Otherwise DD_status will be updated with the NormalCompletion status code.

IN endpoints

If the linked DD is not valid and the packet is partially transferred to USB, the DD ends with a status code of NormalCompletion in the DD_status field. This situation corresponds to the end of the USB transfer, and the packet will be sent as a short packet. Also, when the linked DD is valid and buffer length is 0, an empty packet will be sent to indicate the end of the USB transfer.

13.16 Double buffered endpoint operation

The Bulk and Isochronous endpoints of the USB Device Controller are double buffered to increase data throughput.

When a double-buffered endpoint is realized, enough space for both endpoint buffers is automatically allocated in the EP_RAM. See <u>Section 13.10.5.1</u>.

For the following discussion, the endpoint buffer currently accessible to the CPU or DMA engine for reading or writing is said to be the active buffer.

13.16.1 Bulk endpoints

For Bulk endpoints, the active endpoint buffer is switched by the SIE Clear Buffer or Validate Buffer commands.

The following example illustrates how double buffering works for a Bulk OUT endpoint in Slave mode:

Assume that both buffer 1 (B_1) and buffer 2 (B_2) are empty, and that the active buffer is B_1.

- 1. The host sends a data packet to the endpoint. The device hardware puts the packet into B_1, and generates an endpoint interrupt.
- 2. Software clears the endpoint interrupt and begins reading the packet data from B_1. While B_1 is still being read, the host sends a second packet, which device hardware places in B_2, and generates an endpoint interrupt.
- 3. Software is still reading from B_1 when the host attempts to send a third packet. Since both B_1 and B_2 are full, the device hardware responds with a NAK.
- 4. Software finishes reading the first packet from B_1 and sends a SIE Clear Buffer command to free B_1 to receive another packet. B_2 becomes the active buffer.

UM10211

Chapter 13: LPC23XX USB device controller

- 5. Software sends the SIE Select Endpoint command to read the Select Endpoint Register and test the FE bit. Software finds that the active buffer (B_2) has data (FE=1). Software clears the endpoint interrupt and begins reading the contents of B 2.
- 6. The host resends the third packet which device hardware places in B_1. An endpoint interrupt is generated.
- 7. Software finishes reading the second packet from B_2 and sends a SIE Clear Buffer command to free B_2 to receive another packet. B_1 becomes the active buffer. Software waits for the next endpoint interrupt to occur (it already has been generated back in step 6).
- 8. Software responds to the endpoint interrupt by clearing it and begins reading the third packet from B_1.
- 9. Software finishes reading the third packet from B_1 and sends a SIE Clear Buffer command to free B_1 to receive another packet. B_2 becomes the active buffer.
- 10. Software tests the FE bit and finds that the active buffer (B_2) is empty (FE=0).
- 11. Both B_1 and B_2 are empty. Software waits for the next endpoint interrupt to occur. The active buffer is now B_2. The next data packet sent by the host will be placed in B_2.

The following example illustrates how double buffering works for a Bulk IN endpoint in Slave mode:

Assume that both buffer 1 (B_1) and buffer 2 (B_2) are empty and that the active buffer is B_1. The interrupt on NAK feature is enabled.

- 1. The host requests a data packet by sending an IN token packet. The device responds with a NAK and generates an endpoint interrupt.
- Software clears the endpoint interrupt. The device has three packets to send.
 Software fills B_1 with the first packet and sends a SIE Validate Buffer command. The active buffer is switched to B 2.
- 3. Software sends the SIE Select Endpoint command to read the Select Endpoint Register and test the FE bit. It finds that B_2 is empty (FE=0) and fills B_2 with the second packet. Software sends a SIE Validate Buffer command, and the active buffer is switched to B_1.
- 4. Software waits for the endpoint interrupt to occur.
- 5. The device successfully sends the packet in B_1 and clears the buffer. An endpoint interrupt occurs.
- Software clears the endpoint interrupt. Software fills B_1 with the third packet and validates it using the SIE Validate Buffer command. The active buffer is switched to B 2.
- 7. The device successfully sends the second packet from B_2 and generates an endpoint interrupt.
- 8. Software has no more packets to send, so it simply clears the interrupt.
- 9. The device successfully sends the third packet from B_1 and generates an endpoint interrupt.
- 10. Software has no more packets to send, so it simply clears the interrupt.

Chapter 13: LPC23XX USB device controller

11. Both B_1 and B_2 are empty, and the active buffer is B_2. The next packet written by software will go into B_2.

In DMA mode, switching of the active buffer is handled automatically in hardware. For Bulk IN endpoints, proactively filling an endpoint buffer to take advantage of the double buffering can be accomplished by manually starting a packet transfer using the USBDMARSet register.

13.16.2 Isochronous endpoints

For isochronous endpoints, the active data buffer is switched by hardware when the FRAME interrupt occurs. The SIE Clear Buffer and Validate Buffer commands do not cause the active buffer to be switched.

Double buffering allows the software to make full use of the frame interval writing or reading a packet to or from the active buffer, while the packet in the other buffer is being sent or received on the bus.

For an OUT isochronous endpoint, any data not read from the active buffer before the end of the frame is lost when it switches.

For an IN isochronous endpoint, if the active buffer is not validated before the end of the frame, an empty packet is sent on the bus when the active buffer is switched, and its contents will be overwritten when it becomes active again.

UM10211

Chapter 14: LPC23XX USB Host controller

Rev. 4.1 — 5 September 2012

User manual

14.1 How to read this chapter

The USB host controller is available on the LPC2387/88 and LPC2361/62 only.

14.2 Basic configuration

The USB controller is configured using the following registers:

- Power: In the PCONP register (<u>Table 56</u>), set bit PCUSB.
 Remark: On reset, the USB block is disabled (PCUSB = 0).
- 2. Clock: see Table 47.
- 3. Pins: Select USB pins and their modes in PINSEL0 to PINSEL5 and PINMODE0 to PINMODE5 (Section 9.5).
- 4. Wake-up: Use the INTWAKE register (<u>Table 55</u>) to enable activity on the USB bus port to wake-up the microcontroller from Power-down mode.
- 5. Interrupts: Interrupts are enabled in the VIC using the VICIntEnable register (Table 76).
- 6. Initialization: see Section 15.11.

14.3 Introduction

This section describes the host portion of the USB 2.0 OTG dual role core which integrates the host controller (OHCI compliant), device controller, and I²C interface. The I²C interface controls the external OTG ATX.

The USB is a 4 wire bus that supports communication between a host and a number (127 max.) of peripherals. The host controller allocates the USB bandwidth to attached devices through a token based protocol. The bus supports hot plugging, un-plugging and dynamic configuration of the devices. All transactions are initiated by the host controller.

The host controller enables data exchange with various USB devices attached to the bus. It consists of register interface, serial interface engine and DMA controller. The register interface complies to the OHCI specification.

Table 331. USB (OHCI) related acronyms and abbreviations used in this chapter

Acronym/abbreviation	Description
AHB	Advanced High-Performance Bus
ATX	Analog Transceiver
DMA	Direct Memory Access
FS	Full Speed
LS	Low Speed
OHCI	Open Host Controller Interface
USB	Universal Serial Bus


Chapter 14: LPC23XX USB Host controller

14.3.1 Features

- · OHCI compliant.
- OpenHCI specifies the operation and interface of the USB Host Controller and SW Driver
 - USBOperational: Process Lists and generate SOF Tokens.
 - USBReset: Forces reset signaling on the bus, SOF disabled.
 - USBSuspend: Monitor USB for wake-up activity.
 - USBResume: Forces resume signaling on the bus.
- The Host Controller has four USB states visible to the SW Driver.
- · HCCA register points to Interrupt and Isochronous Descriptors List.
- ControlHeadED and BulkHeadED registers point to Control and Bulk Descriptors List.

14.3.2 Architecture

The architecture of the USB host controller is shown below in Figure 68.

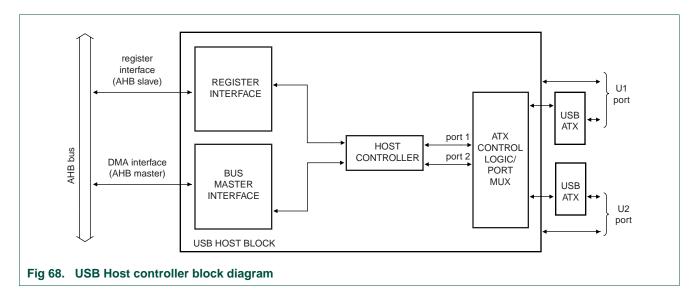

14.4 Interfaces

The USB interface is controlled by the OTG controller. It has two USB ports indicated by suffixes 1 and 2 in the USB pin names and referred to as USB port 1 (U1) and USB port 2 (U2) in the following text.

Chapter 14: LPC23XX USB Host controller

14.4.1 Pin description

Table 332. USB OTG port pins

Pin name	Direction	Description	Туре
V _{BUS}	I	$\rm V_{BUS}$ status input. When this function is not enabled via its corresponding PINSEL register, it is driven HIGH internally.	USB Connector
Port U1			
USB_D+1	I/O	Positive differential data	USB Connector
USB_D-1	I/O	Negative differential data	USB Connector
USB_CONNECT1	0	SoftConnect control signal	Control
USB_UP_LED1	0	GoodLink LED control signal	Control
USB_INT1	I	OTG ATX interrupt	External OTG transceiver
USB_SCL1	I/O	I ² C serial clock	External OTG transceiver
USB_SDA1	I/O	I ² C serial data	External OTG transceiver
USB_TX_E1	0	Transmit enable	External OTG transceiver
USB_TX_DP1	0	D+ transmit data	External OTG transceiver
USB_TX_DM1	0	D– transmit data	External OTG transceiver
USB_RCV1	I	Differential receive data	External OTG transceiver
USB_RX_DP1	I	D+ receive data	External OTG transceiver
USB_RX_DM1	I	D- receive data	External OTG transceiver
USB_LS1	0	Low speed status (applies to host functionality only)	External OTG transceiver
USB_SSPND1	0	Bus suspend status	External OTG transceiver
USB_PPWR1	0	Port power enable	Host power switch
USB_PWRD1	I	Port power status	Host power switch
USB_OVRCR1	I	Over-current status	Host power switch
USB_HSTEN1	0	Host enabled status	
Port U2			
USB_D+2	I/O	Positive differential data	USB Connector
USB_D-2	I/O	Negative differential data	USB Connector
USB_CONNECT2	0	SoftConnect control signal	Control
USB_UP_LED2	0	GoodLink LED control signal	Control
USB_PPWR2	0	Port power enable	Host power switch
U2PWRD2	I	Port power status	Host power switch
USB_OVRCR2	I	Over-current status	Host power switch
USB_HSTEN2	0	Host enabled status	Control

14.4.1.1 USB host usage note

Both ports can be configured as USB hosts. For details on how to connect the USB ports, see the USB OTG chapter, Section 15.7.

The USB device/host/OTG controller is disabled after RESET and must be enabled by writing a 1 to the PCUSB bit in the PCONP register, see <u>Table 53</u>.

Chapter 14: LPC23XX USB Host controller

14.4.2 Software interface

The software interface of the USB host block consists of a register view and the format definitions for the endpoint descriptors. For details on these two aspects see the OHCI specification. The register map is shown in the next subsection.

14.4.2.1 Register map

The following registers are located in the AHB clock 'cclk' domain. They can be accessed directly by the processor. All registers are 32 bit wide and aligned in the word address boundaries.

Table 333. USB Host register address definitions

Name	Address	R/W[1]	Function	Reset value
HcRevision	0xFFE0 C000	R	BCD representation of the version of the HCI specification that is implemented by the Host Controller.	0x10
HcControl	0xFFE0 C004	R/W	Defines the operating modes of the HC.	0x0
HcCommandStatus	0xFFE0 C008	R/W	This register is used to receive the commands from the Host Controller Driver (HCD). It also indicates the status of the HC.	0x0
HcInterruptStatus	0xFFE0 C00C	R/W	Indicates the status on various events that cause hardware interrupts by setting the appropriate bits.	0x0
HcInterruptEnable	0xFFE0 C010	R/W	Controls the bits in the HcInterruptStatus register and indicates which events will generate a hardware interrupt.	0x0
HcInterruptDisable	0xFFE0 C014	R/W	The bits in this register are used to disable corresponding bits in the HCInterruptStatus register and in turn disable that event leading to hardware interrupt.	0x0
HcHCCA	0xFFE0 C018	R/W	Contains the physical address of the host controller communication area.	0x0
HcPeriodCurrentED	0xFFE0 C01C	R	Contains the physical address of the current isochronous or interrupt endpoint descriptor.	0x0
HcControlHeadED	0xFFE0 C020	R/W	Contains the physical address of the first endpoint descriptor of the control list.	0x0
HcControlCurrentED	0xFFE0 C024	R/W	Contains the physical address of the current endpoint descriptor of the control list	0x0
HcBulkHeadED	0xFFE0 C028	R/W	Contains the physical address of the first endpoint descriptor of the bulk list.	0x0
HcBulkCurrentED	0xFFE0 C02C	R/W	Contains the physical address of the current endpoint descriptor of the bulk list.	0x0
HcDoneHead	0xFFE0 C030	R	Contains the physical address of the last transfer descriptor added to the 'Done' queue.	0x0
HcFmInterval	0xFFE0 C034	R/W	Defines the bit time interval in a frame and the full speed maximum packet size which would not cause an overrun.	0x2EDF
HcFmRemaining	0xFFE0 C038	R	A 14-bit counter showing the bit time remaining in the current frame.	0x0
HcFmNumber	0xFFE0 C03C	R	Contains a 16-bit counter and provides the timing reference among events happening in the HC and the HCD.	0x0

Chapter 14: LPC23XX USB Host controller

Table 333. USB Host register address definitions ... continued

Name	Address	R/W[1]	Function	Reset value
HcPeriodicStart	0xFFE0 C040	R/W	Contains a programmable 14-bit value which determines the earliest time HC should start processing a periodic list.	0x0
HcLSThreshold	0xFFE0 C044	R/W	Contains 11-bit value which is used by the HC to determine whether to commit to transfer a maximum of 8-byte LS packet before EOF.	0x628h
HcRhDescriptorA	0xFFE0 C048	R/W	First of the two registers which describes the characteristics of the root hub.	0xFF000902
HcRhDescriptorB	0xFFE0 C04C	R/W	Second of the two registers which describes the characteristics of the Root Hub.	0x60000h
HcRhStatus	0xFFE0 C050	R/W	This register is divided into two parts. The lower D-word represents the hub status field and the upper word represents the hub status change field.	0x0
HcRhPortStatus[1]	0xFFE0 C054	R/W	Controls and reports the port events on a per-port basis.	0x0
HcRhPortStatus[2]	0xFFE0 C058	R/W	Controls and reports the port events on a per port basis.	0x0
Module_ID/Ver_Rev_ID	0xFFE0 C0FC	R	IP number, where yy (0x00) is unique version number and zz (0x00) is a unique revision number.	0x3505yyzz

^[1] The R/W column in Table 333 lists the accessibility of the register:

14.4.2.2 USB Host Register Definitions

Refer to the OHCI specification document on Compaq's website for register definitions.

a) Registers marked 'R' for access will return their current value when read.

b) Registers marked 'R/W' allow both read and write.

UM10211

Chapter 15: LPC23XX USB OTG controller

Rev. 4.1 — 5 September 2012

User manual

15.1 How to read this chapter

The USB OTG controller is available in LPC2387/88 and LPC2361/62 only. The LPC2388 has two USB ports, the LPC2361/62 and LPC2387 have one USB port.

15.2 Basic configuration

The USB controller is configured using the following registers:

- Power: In the PCONP register (<u>Table 56</u>), set bit PCUSB.
 Remark: On reset, the USB block is disabled (PCUSB = 0).
- 2. Clock: see Table 47.
- 3. Pins: Select USB pins and their modes in PINSEL0 to PINSEL5 and PINMODE0 to PINMODE5 (Section 9.5).
- Wake-up: Use the INTWAKE register (<u>Table 55</u>) to enable activity on the USB bus port to wake-up the microcontroller from Power-down mode (see <u>Section 15.10.2</u>).
- Interrupts: Interrupts are enabled in the VIC using the VICIntEnable register (<u>Table 76</u>).
- 6. Initialization: see Section 15.11.

15.3 Introduction

This chapter describes the OTG and I²C portions of the USB 2.0 OTG dual role device controller which integrates the (OHCI) host controller, device controller, and I²C. The I²C interface (Master only) controls an external OTG transceiver.

USB OTG (On-The-Go) is a supplement to the USB 2.0 specification that augments the capability of existing mobile devices and USB peripherals by adding host functionality for connection to USB peripherals. The specification and more information on USB OTG can be found on the USB Implementers Forum web site.

15.4 Features

- Fully compliant with On-The-Go supplement to the USB 2.0 Specification, Revision 1.0a.
- Hardware support for Host Negotiation Protocol (HNP).
- Includes a programmable timer required for HNP and SRP.
- Supports any OTG transceiver compliant with the OTG Transceiver Specification (CEA-2011), Rev. 1.0.


15.5 Architecture

The architecture of the USB OTG controller is shown below in the block diagram.

Chapter 15: LPC23XX USB OTG controller

The host, device, OTG, and I2C controllers can be programmed through the register interface. The OTG controller enables dynamic switching between host and device roles through the HNP protocol. One port may be connected to an external OTG transceiver to support an OTG connection. The communication between the register interface and an external OTG transceiver is handled through an I²C interface and through the external OTG transceiver interrupt signal.

For USB connections that use the device or host controller only (not OTG), the ports use an embedded USB Analog Transceiver (ATX).

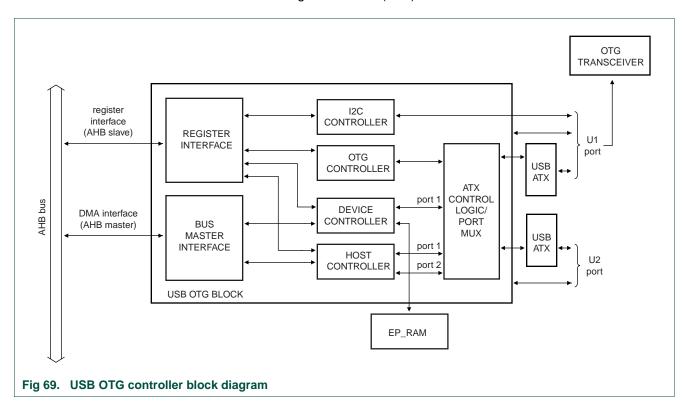

15.6 Modes of operation

On The LPC2361/62 and the LPC2387, the USB port can be configured as device, Host, or OTG port.

On the LPC2388, the OTG controller is capable of operating in the following modes:

- One port host and one port dual-role device (see Figure 70)
- One port host and one port device (see Figure 72)
- Two-port host (see Figure 73)

15.7 Pin configuration

The OTG controller has two USB ports indicated by suffixes 1 and 2 in the USB pin names and referred to as USB port 1 (U1) and USB port 2 (U2) in the following text.

Chapter 15: LPC23XX USB OTG controller

Table 334. USB OTG port 1 pins

USB_SCL1 I/O I ² C serial clock External O ² USB_SDA1 I/O I ² C serial data External O ² USB_TX_E1 O Transmit enable External O ² USB_TX_DP1 O D+ transmit data External O ² USB_TX_DM1 O D- transmit data External O ² USB_RCV1 I Differential receive data External O ²	ory
USB_D+1 I/O Positive differential data USB Connect USB_D-1 I/O Negative differential data USB Connect USB_CONNECT1 O SoftConnect control signal Control USB_UP_LED1 O GoodLink LED control signal Control USB_INT1 I OTG ATX interrupt External OTUSB_SCL1 I/O I2C serial clock External OTUSB_SDA1 I/O I2C serial data External OTUSB_TX_E1 O Transmit enable External OTUSB_TX_DP1 O D+ transmit data External OTUSB_TX_DM1 O D- transmit data External OTUSB_RCV1 I Differential receive data External OTUSB_RCV1 I Differential receive data	ector
USB_D-1 I/O Negative differential data USB Connect USB_CONNECT1 O SoftConnect control signal Control USB_UP_LED1 O GoodLink LED control signal Control USB_INT1 I OTG ATX interrupt External OTUSB_SCL1 I/O I²C serial clock External OTUSB_SDA1 I/O I²C serial data External OTUSB_TX_E1 O Transmit enable External OTUSB_TX_DP1 O D+ transmit data External OTUSB_TX_DM1 O D- transmit data External OTUSB_TX_DM1 O D- transmit data External OTUSB_RCV1 I Differential receive data External OTUSB_RCV1 I Differential receive data	
USB_CONNECT1 O SoftConnect control signal Control USB_UP_LED1 O GoodLink LED control signal Control USB_INT1 I OTG ATX interrupt External O USB_SCL1 I/O I²C serial clock External O USB_SDA1 I/O I²C serial data External O USB_TX_E1 O Transmit enable External O USB_TX_DP1 O D+ transmit data External O USB_TX_DM1 O D- transmit data External O USB_RCV1 I Differential receive data External O	ector
USB_UP_LED1 O GoodLink LED control signal Control USB_INT1 I OTG ATX interrupt External O USB_SCL1 I/O I²C serial clock External O USB_SDA1 I/O I²C serial data External O USB_TX_E1 O Transmit enable External O USB_TX_DP1 O D+ transmit data External O USB_TX_DM1 O D- transmit data External O USB_RCV1 I Differential receive data	ector
USB_INT1 I OTG ATX interrupt External OTG ATX interrupt I USB_SCL1 I/O I2C serial clock External OTG ATX Interrupt I/O I2C serial clock External OTG I/O I2C serial data External OTG I/O I2C serial data External OTG I/O I/O I2C serial data External OTG I/O	
USB_SCL1 I/O I ² C serial clock External O USB_SDA1 I/O I ² C serial data External O USB_TX_E1 O Transmit enable External O USB_TX_DP1 O D+ transmit data External O USB_TX_DM1 O D- transmit data External O USB_RCV1 I Differential receive data External O	
USB_SDA1 I/O I ² C serial data External O ² USB_TX_E1 O Transmit enable External O ² USB_TX_DP1 O D+ transmit data External O ² USB_TX_DM1 O D- transmit data External O ² USB_RCV1 I Differential receive data External O ²	TG transceiver
USB_TX_E1 O Transmit enable External O USB_TX_DP1 O D+ transmit data External O USB_TX_DM1 O D- transmit data External O USB_RCV1 I Differential receive data External O	TG transceiver
USB_TX_DP1 O D+ transmit data External O USB_TX_DM1 O D- transmit data External O USB_RCV1 I Differential receive data External O	TG transceiver
USB_TX_DM1 O D- transmit data External O USB_RCV1 I Differential receive data External O	TG transceiver
USB_RCV1 I Differential receive data External O	TG transceiver
	TG transceiver
USB_RX_DP1 I D+ receive data External O	TG transceiver
	TG transceiver
USB_RX_DM1 I D- receive data External O	TG transceiver
USB_LS1 O Low speed status (applies to host functionality only) External O	TG transceiver
USB_SSPND1 O Bus suspend status External O	TG transceiver
USB_PPWR1 O Port power enable Host power	r switch
USB_PWRD1 I Port power status Host power	r switch
USB_OVRCR1 I Over-current status Host power	r switch
USB_HSTEN1 O Host enabled status	
Port U2 (host functions on LPC2388 only)	
USB_D+2 I/O Positive differential data USB Conne	ector
USB_D-2 I/O Negative differential data USB Conne	ector
USB_CONNECT2 O SoftConnect control signal Control	
USB_UP_LED2 O GoodLink LED control signal Control	
USB_PPWR2 O Port power enable Host power	r switch
USB_PWRD2 I Port power status Host power	r switch
USB_OVRCR2 I Over-current status Host power	r switch
USB_HSTEN2 O Host enabled status Control	

The following figures show different ways to realize connections to an USB device using ports U1 and U2. The example described here uses an ISP1302 (replaces ISP1301) for the external OTG transceiver and the USB Host power switch LM3526-L (National Semiconductors).


15.7.1 Connecting port U1 to an external OTG transceiver

For OTG functionality an external OTG transceiver must be connected to the LPC2400 device. There are two ways to connect the OTG transceiver (here ISP1302) to port U1:


Chapter 15: LPC23XX USB OTG controller

- Use the internal USB transceiver for USB signalling and use the external OTG transceiver for OTG functionality only (see <u>Figure 70</u>). This option uses the internal transceiver in VP/VM mode.
- 2. Use the external OTG transceiver in VP/VM mode for OTG functionality and USB signalling (see Figure 71).

In both cases port U2 is connected as a host. Solution one uses fewer pins.

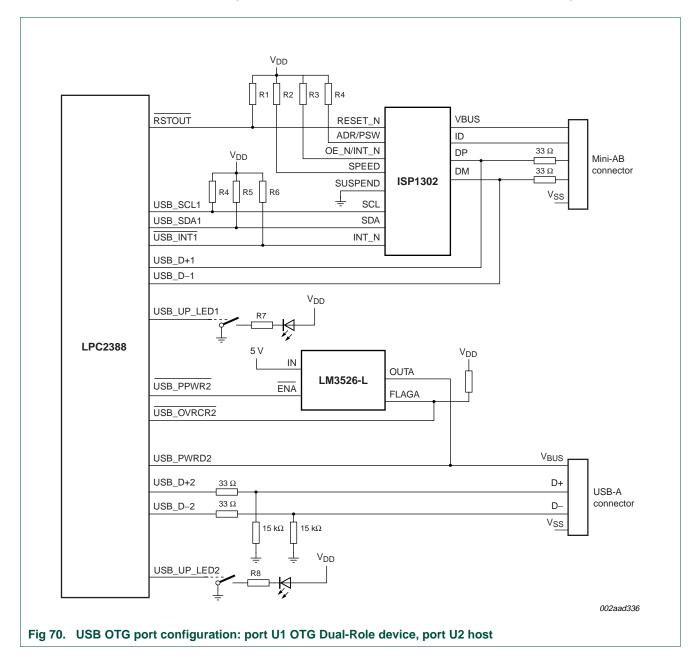


Chapter 15: LPC23XX USB OTG controller

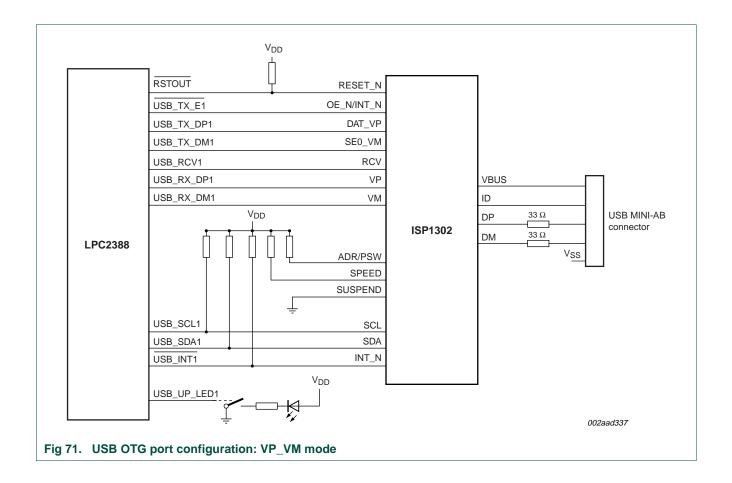

Chapter 15: LPC23XX USB OTG controller

15.7.2 Connecting USB as a two-port host


Both ports U1 and U2 are connected as hosts using an embedded USB transceiver. There is no OTG functionality on either port.

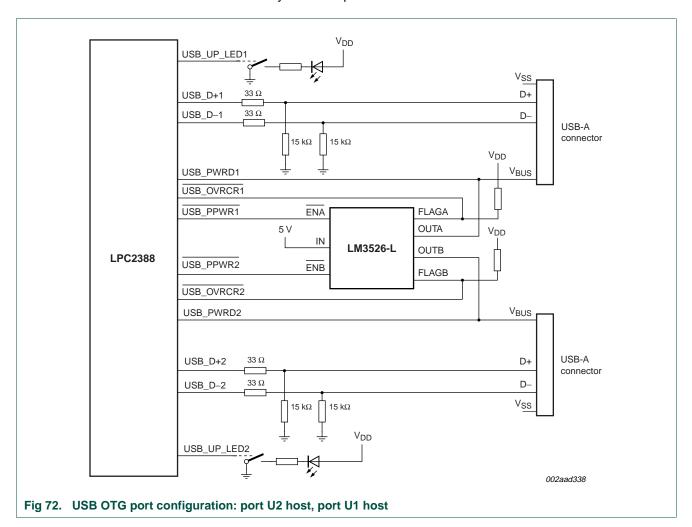

15.7.3 Connecting USB as one port host and one port device

Port U2 is connected as device, and port U1 is connected as host using an embedded USB transceiver. There is no OTG functionality on either port.

Chapter 15: LPC23XX USB OTG controller

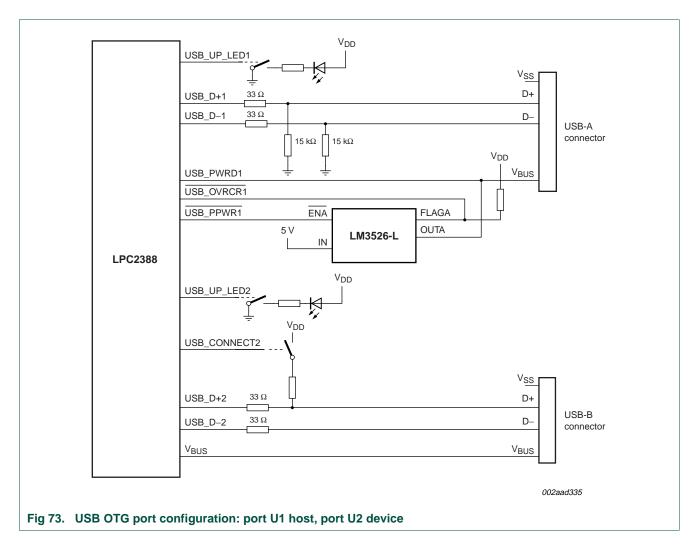

15.8 Register description

The OTG and I²C registers are summarized in the following table.

The Device and Host registers are explained in <u>Table 333</u> and <u>Table 266</u> in the USB Device Controller and USB Host (OHCI) Controller chapters. All registers are 32 bits wide and aligned to word address boundaries.

Table 335. USB OTG and I²C register address definitions

Address	Access	Function
0xE01F C1C0	R/W	USB Interrupt Status
0xFFE0 C100	RO	OTG Interrupt Status
0xFFE0 C104	R/W	OTG Interrupt Enable
0xFFE0 C108	WO	OTG Interrupt Set
0xFFE0 C10C	WO	OTG Interrupt Clear
0xFFE0 C110	R/W	OTG Status and Control
	0xE01F C1C0 0xFFE0 C100 0xFFE0 C104 0xFFE0 C108 0xFFE0 C10C	0xE01F C1C0 R/W 0xFFE0 C100 RO 0xFFE0 C104 R/W 0xFFE0 C108 WO 0xFFE0 C10C WO

UM10211

Chapter 15: LPC23XX USB OTG controller

Table 335. USB OTG and I²C register address definitions

Name	Address	Access	Function
OTGTmr	0xFFE0 C114	R/W	OTG Timer
I ² C registers			
I2C_RX	0xFFE0 C300	RO	I2C Receive
I2C_TX	0xFFE0 C300	WO	I2C Transmit
I2C_STS	0xFFE0 C304	RO	I2C Status
I2C_CTL	0xFFE0 C308	R/W	I2C Control
I2C_CLKHI	0xFFE0 C30C	R/W	I2C Clock High
I2C_CLKLO	0xFFE0 C310	WO	I2C Clock Low
Clock control regist	ters		
OTGClkCtrl	0xFFE0 CFF4	R/W	OTG clock controller
OTGClkSt	0xFFE0 CFF8	RO	OTG clock status

^[1] Bits 0 and 1 of this register are used to control the routing of the USB pins to ports 1 and 2 in device-only application (see <u>Table 267</u>).

15.8.1 USB Interrupt Status Register (USBIntSt - 0xE01F C1C0)

The USB OTG controller has seven interrupt lines. This register allows software to determine their status with a single read operation.

The interrupt lines are ORed together to a single channel of the vectored interrupt controller.

Table 336. USB Interrupt Status register - (USBIntSt - address 0xE01F C1) bit description

Bit	Symbol	Description	Reset Value
0	USB_INT_REQ_LP	Low priority interrupt line status. This bit is read only.	0
1	USB_INT_REQ_HP	High priority interrupt line status. This bit is read only.	0
2	USB_INT_REQ_DMA	DMA interrupt line status. This bit is read only.	0
3	USB_HOST_INT	USB host interrupt line status. This bit is read only.	0
4	USB_ATX_INT	External ATX interrupt line status. This bit is read only.	0
5	USB_OTG_INT	OTG interrupt line status. This bit is read only.	0
6	USB_I2C_INT	I ² C module interrupt line status. This bit is read only.	0
7	-	Reserved, user software should not write ones to reserved bits. The value read from a reserved bit is not defined.	NA
8	USB_NEED_CLK	USB need clock indicator. This bit is read only.	0
30:9	-	Reserved, user software should not write ones to reserved bits. The value read from a reserved bit is not defined.	NA
31	EN_USB_INTS	Enable all USB interrupts. When this bit is cleared, the VIC does not see the ORed output of the USB interrupt lines.	1

Chapter 15: LPC23XX USB OTG controller

15.8.2 OTG Interrupt Status Register (OTGIntSt - 0xE01F C100)

Bits is this register are set by hardware when the interrupt event occurs during the HNP handoff sequence. See Section 15.9 for more information on when these bits are set.

Table 337. OTG Interrupt Status register (OTGIntSt - address 0xE01F C100) bit description

Bit	Symbol	Description	Reset Value
0	TMR	Timer time-out.	0
1	REMOVE_PU	Remove pull-up.	0
		This bit is set by hardware to indicate that software needs to disable the D+ pull-up resistor.	
2	HNP_FAILURE	HNP failed.	0
		This bit is set by hardware to indicate that the HNP switching has failed.	
3	HNP_SUCCESS	HNP succeeded.	0
		This bit is set by hardware to indicate that the HNP switching has succeeded.	
31:4	-	Reserved, user software should not write ones to reserved bits. The value read from a reserved bit is not defined.	NA

15.8.3 OTG Interrupt Enable Register (OTGIntEn - 0xFFE0 C104)

Writing a one to a bit in this register enables the corresponding bit in OTGIntSt to generate an interrupt on one of the interrupt lines. The interrupt is routed to the USB_OTG_INT interrupt line in the USBIntSt register.

The bit allocation and reset value of OTGIntEn is the same as OTGIntSt.

15.8.4 OTG Interrupt Set Register (OTGIntSet - 0xFFE0 C20C)

Writing a one to a bit in this register will set the corresponding bit in the OTGIntSt register. Writing a zero has no effect. The bit allocation of OTGIntSet is the same as in OTGIntSt.

15.8.5 OTG Interrupt Clear Register (OTGIntClr - 0xFFE0 C10C)

Writing a one to a bit in this register will clear the corresponding bit in the OTGIntSt register. Writing a zero has no effect. The bit allocation of OTGIntClr is the same as in OTGIntSt.

15.8.6 OTG Status and Control Register (OTGStCtrl - 0xFFE0 C110)

The OTGStCtrl register allows enabling hardware tracking during the HNP hand over sequence, controlling the OTG timer, monitoring the timer count, and controlling the functions mapped to port U1 and U2.

Time critical events during the switching sequence are controlled by the OTG timer. The timer can operate in two modes:

 Monoshot mode: an interrupt is generated at the end of TIMEOUT_CNT (see <u>Section 15.8.7 "OTG Timer Register (OTGTmr - 0xFFE0 C114)"</u>), the TMR bit is set in OTGIntSt, and the timer will be disabled.

Chapter 15: LPC23XX USB OTG controller

 Free running mode: an interrupt is generated at the end of TIMEOUT_CNT (see <u>Section 15.8.7 "OTG Timer Register (OTGTmr - 0xFFE0 C114)"</u>), the TMR bit is set, and the timer value is reloaded into the counter. The timer is not disabled in this mode.

Table 338. OTG Status Control register (OTGStCtrl - address 0xFFE0 C110) bit description

Bit	Symbol	Description	Reset Value
1:0	PORT_FUNC	Controls the function of ports U1 and U2. Bit 0 is set or cleared by hardware when B_HNP_TRACK or A_HNP_TRACK is set and HNP succeeds. See Section 15.9.	-
3:2	TMR_SCALE	Timer scale selection. This field determines the duration of each timer count.	0x0
		00: 10 μs (100 KHz)	
		01: 100 μs (10 KHz)	
		10: 1000 μs (1 KHz)	
		11: Reserved	
4	TMR_MODE	Timer mode selection.	0
		0: monoshot	
		1: free running	
5	TMR_EN	Timer enable. When set, TMR_CNT increments. When cleared, TMR_CNT is reset to 0.	0
6	TMR_RST	Timer reset. Writing one to this bit resets TMR_CNT to 0. This provides a single bit control for the software to restart the timer when the timer is enabled.	0
7	-	Reserved, user software should not write ones to reserved bits. The value read from a reserved bit is not defined.	NA
8	B_HNP_TRACK	Enable HNP tracking for B-device (peripheral), see Section 15.9. Hardware clears this bit when HNP_SUCCESS or HNP_FAILURE is set.	0
9	A_HNP_TRACK	Enable HNP tracking for A-device (host), see Section 15.9. Hardware clears this bit when HNP_SUCCESS or HNP_FAILURE is set.	0
10	PU_REMOVED	When the B-device changes its role from peripheral to host, software sets this bit when it removes the D+ pull-up, see Section 15.9. Hardware clears this bit when HNP_SUCCESS or HNP_FAILURE is set.	0
15:11	-	Reserved, user software should not write ones to reserved bits. The value read from a reserved bit is not defined.	NA
31:16	TMR_CNT	Current timer count value.	0x0

Chapter 15: LPC23XX USB OTG controller

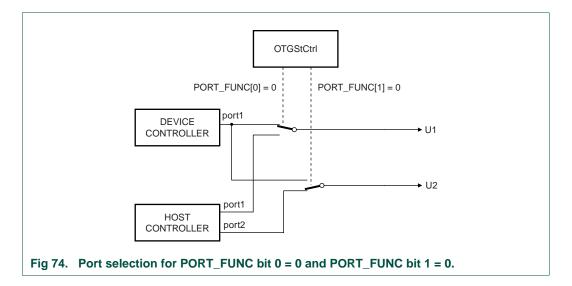


Table 339. Port function truth table

	$PORT_FUNC[0] = 0$	PORT_FUNC[0] = 1
PORT_FUNC[1] = 0	U1 = device (OTG)	U1 = host (OTG)
	U2 = host	U2 = host
PORT_FUNC[1] = 1	reserved	U1 = host
		U2 = device

15.8.7 OTG Timer Register (OTGTmr - 0xFFE0 C114)

Table 340. OTG Timer register (OTGTmr - address 0xFFE0 C114) bit description

Bit	Symbol	Description	Reset Value
15:0	TIMEOUT_CNT	The TMR interrupt is set when TMR_CNT reaches this value.	0xFFFF
31:16	-	Reserved, user software should not write ones to reserved bits. The value read from a reserved bit is not defined.	NA

15.8.8 OTG Clock Control Register (OTGClkCtrl - 0xFFE0 CFF4)

This register controls the clocking of the OTG controller. Whenever software wants to access the registers, the corresponding clock control bit needs to be set. The software does not have to repeat this exercise for every register access, provided that the corresponding OTGClkCtrl bits are already set.

Table 341. OTG_clock_control register (OTG_clock_control - address 0xFFE0 CFF4) bit description

Bit	Symbol	Value	Description	Reset Value
0	HOST_CLK_EN		Host clock enable	0
		0	Disable the Host clock.	
		1	Enable the Host clock.	

Chapter 15: LPC23XX USB OTG controller

Table 341. OTG_clock_control register (OTG_clock_control - address 0xFFE0 CFF4) bit description

Bit	Symbol	Value	Description	Reset Value
1	DEV_CLK_EN		Device clock enable	0
		0	Disable the Device clock.	
		1	Enable the Device clock.	
2	I2C_CLK_EN		I2C clock enable	0
	0	Disable the I ² C clock.		
		1	Enable the I ² C clock.	
3	OTG_CLK_EN		OTG clock enable	0
		0	Disable the OTG clock.	
		1	Enable the OTG clock.	
4	AHB_CLK_EN		AHB master clock enable	0
		0	Disable the AHB clock.	
		1	Enable the AHB clock.	
31:5	-	NA	Reserved, user software should not write ones to reserved bits. The value read from a reserved bit is not defined.	NA

15.8.9 OTG Clock Status Register (OTGClkSt - 0xFFE0 CFF8)

This register holds the clock availability status. When enabling a clock via OTGClkCtrl, software should poll the corresponding bit in this register. If it is set, then software can go ahead with the register access. Software does not have to repeat this exercise for every access, provided that the OTGClkCtrl bits are not disturbed.

Table 342. OTG_clock_status register (OTGClkSt - address 0xFFE0 CFF8) bit description

Bit	Symbol	Value	Description	Reset Value
0	HOST_CLK_ON		Host clock status.	0
		0	Host clock is not available.	
		1	Host clock is available.	
1	DEV_CLK_ON		Device clock status.	0
		0	Device clock is not available.	
		1	Device clock is available.	
2	I2C_CLK_ON		I2C clock status.	0
		0	I2C clock is not available.	
		1	I2C clock is available.	
3	OTG_CLK_ON		OTG clock status.	0
		0	OTG clock is not available.	
		1	OTG clock is available.	

Chapter 15: LPC23XX USB OTG controller

Table 342. OTG_clock_status register (OTGClkSt - address 0xFFE0 CFF8) bit description

Bit	Symbol	Value	Description	Reset Value
4	AHB_CLK_ON		AHB master clock status.	0
		0	AHB clock is not available.	
		1	AHB clock is available.	
31:5	-	NA	Reserved, user software should not write ones to reserved bits. The value read from a reserved bit is not defined.	NA

15.8.10 I2C Receive Register (I2C_RX - 0xFFE0 C300)

This register is the top byte of the receive FIFO. The receive FIFO is 4 bytes deep. The Rx FIFO is flushed by a hard reset or by a soft reset (I2C_CTL bit 7). Reading an empty FIFO gives unpredictable data results.

Table 343. I2C Receive register (I2C_RX - address 0xFFE0 C300) bit description

Bit	Symbol	Description	Reset Value
7:0	RX Data	Receive data.	-

15.8.11 I2C Transmit Register (I2C_TX - 0xFFE0 C300)

This register is the top byte of the transmit FIFO. The transmit FIFO is 4 bytes deep.

The Tx FIFO is flushed by a hard reset, soft reset (I2C_CTL bit 7) or if an arbitration failure occurs (I2C_STS bit 3). Data writes to a full FIFO are ignored.

I2C_TX must be written for both write and read operations to transfer each byte. Bits [7:0] are ignored for master-receive operations. The master-receiver must write a dummy byte to the TX FIFO for each byte it expects to receive in the RX FIFO. When the STOP bit is set or the START bit is set to cause a RESTART condition on a byte written to the TX FIFO (master-receiver), then the byte read from the slave is not acknowledged. That is, the last byte of a master-receive operation is not acknowledged.

Table 344. I2C Transmit register (I2C_TX - address 0xFFE0 C300) bit description

Bit	Symbol	Description	Reset Value
7:0	TX Data	Transmit data.	-
8	START	When 1, issue a START condition before transmitting this byte.	-
9	STOP	When 1, issue a STOP condition after transmitting this byte.	-
31:10	-	Reserved. User software should not write ones to reserved bits. The value read from a reserved bit is not defined.	-

15.8.12 I2C Status Register (I2C_STS - 0xFFE0 C304)

The I2C_STS register provides status information on the TX and RX blocks as well as the current state of the external buses. Individual bits are enabled as interrupts by the I2C_CTL register and routed to the I2C_USB_INT bit in USBIntSt.

Chapter 15: LPC23XX USB OTG controller

Table 345. I2C status register (I2C_STS - address 0xFFE0 C304) bit description

Bit	Symbol	Value	Description	Reset Value
0	TDI		Transaction Done Interrupt. This flag is set if a transaction completes successfully. It is cleared by writing a one to bit 0 of the status register. It is unaffected by slave transactions.	0
		0	Transaction has not completed.	
		1	Transaction completed.	
1	AFI		Arbitration Failure Interrupt. When transmitting, if the SDA is low when SDAOUT is high, then this I^2C has lost the arbitration to another device on the bus. The Arbitration Failure bit is set when this happens. It is cleared by writing a one to bit 1 of the status register.	0
		0	No arbitration failure on last transmission.	
		1	Arbitration failure occurred on last transmission.	
2	NAI		No Acknowledge Interrupt. After every byte of data is sent, the transmitter expects an acknowledge from the receiver. This bit is set if the acknowledge is not received. It is cleared when a byte is written to the master TX FIFO.	0
		0	Last transmission received an acknowledge.	
		1	Last transmission did not receive an acknowledge.	
3 DRMI			Master Data Request Interrupt. Once a transmission is started, the transmitter must have data to transmit as long as it isn't followed by a stop condition or it will hold SCL low until more data is available. The Master Data Request bit is set when the master transmitter is data-starved. If the master TX FIFO is empty and the last byte did not have a STOP condition flag, then SCL is held low until the CPU writes another byte to transmit. This bit is cleared when a byte is written to the master TX FIFO.	0
		0	Master transmitter does not need data.	
		1	Master transmitter needs data.	
4	4 DRSI		Slave Data Request Interrupt. Once a transmission is started, the transmitter must have data to transmit as long as it isn't followed by a STOP condition or it will hold SCL low until more data is available. The Slave Data Request bit is set when the slave transmitter is data-starved. If the slave TX FIFO is empty and the last byte transmitted was acknowledged, then SCL is held low until the CPU writes another byte to transmit. This bit is cleared when a byte is written to the slave Tx FIFO.	0
		0	Slave transmitter does not need data.	
		1	Slave transmitter needs data.	
5	Active		Indicates whether the bus is busy. This bit is set when a START condition has been seen. It is cleared when a STOP condition is seen	0
6	SCL		The current value of the SCL signal.	-
7	SDA		The current value of the SDA signal.	-

Chapter 15: LPC23XX USB OTG controller

Table 345. I2C status register (I2C_STS - address 0xFFE0 C304) bit description

Bit	Symbol	Value	Description	Reset Value
8 RFF			Receive FIFO Full (RFF). This bit is set when the RX FIFO is full and cannot accept any more data. It is cleared when the RX FIFO is not full. If a byte arrives when the Receive FIFO is full, the SCL is held low until the CPU reads the RX FIFO and makes room for it.	0
		0	RX FIFO is not full	
		1	RX FIFO is full	
9	RFE		Receive FIFO Empty. RFE is set when the RX FIFO is empty and is cleared when the RX FIFO contains valid data.	1
		0	RX FIFO contains data.	
		1	RX FIFO is empty	
10	TFF		Transmit FIFO Full. TFF is set when the TX FIFO is full and is cleared when the TX FIFO is not full.	0
		0	TX FIFO is not full.	
		1	TX FIFO is full	
11	TFE		Transmit FIFO Empty. TFE is set when the TX FIFO is empty and is cleared when the TX FIFO contains valid data.	1
		0	TX FIFO contains valid data.	
		1	TX FIFO is empty	
31:12	-	NA	Reserved, user software should not write ones to reserved bits. The value read from a reserved bit is not defined.	NA

15.8.13 I2C Control Register (I2C_CTL - 0xFFE0 C308)

The I2C_CTL register is used to enable interrupts and reset the I^2C state machine. Enabled interrupts cause the USB_I2C_INT interrupt output line to be asserted when set.

Table 346. I2C Control register (I2C_CTL - address 0xFFE0 C308) bit description

Bit	Symbol	Value	Description	Reset Value
0	0 TDIE		Transmit Done Interrupt Enable. This enables the TDI interrupt signalling that this I^2C issued a STOP condition.	0
		0	Disable the TDI interrupt.	
		1	Enable the TDI interrupt.	
1	AFIE	Transmitter Arbitration Failure Interrupt Enable. This enables the AFI interrupt wasserted during transmission when trying to set SDA high, but the bus is driven I another device.		0
		0	Disable the AFI.	
		1	Enable the AFI.	
2	NAIE		Transmitter No Acknowledge Interrupt Enable. This enables the NAI interrupt signalling that transmitted byte was not acknowledged.	0
		0	Disable the NAI.	
		1	Enable the NAI.	

Chapter 15: LPC23XX USB OTG controller

Table 346. I2C Control register (I2C_CTL - address 0xFFE0 C308) bit description

Bit	Symbol	Value	Description	Reset Value
3 DRMIE			Master Transmitter Data Request Interrupt Enable. This enables the DRMI interrupt which signals that the master transmitter has run out of data, has not issued a STOP, and is holding the SCL line low.	0
		0	Disable the DRMI interrupt.	
		1	Enable the DRMI interrupt.	
4	DRSIE		Slave Transmitter Data Request Interrupt Enable. This enables the DRSI interrupt which signals that the slave transmitter has run out of data and the last byte was acknowledged, so the SCL line is being held low.	0
		0	Disable the DRSI interrupt.	
		1	Enable the DRSI interrupt.	
5	REFIE		Receive FIFO Full Interrupt Enable. This enables the Receive FIFO Full interrupt to indicate that the receive FIFO cannot accept any more data.	0
		0	Disable the RFFI.	
		1	Enable the RFFI.	
6	RFDAIE		Receive Data Available Interrupt Enable. This enables the DAI interrupt to indicate that data is available in the receive FIFO (i.e. not empty).	0
		0	Disable the DAI.	
		1	Enable the DAI.	
7	TFFIE		Transmit FIFO Not Full Interrupt Enable. This enables the Transmit FIFO Not Full interrupt to indicate that the more data can be written to the transmit FIFO. Note that this is not full. It is intended help the CPU to write to the I ² C block only when there is room in the FIFO and do this without polling the status register.	0
		0	Disable the TFFI.	
		1	Enable the TFFI.	
8 SRST			Soft reset. This is only needed in unusual circumstances. If a device issues a start condition without issuing a stop condition. A system timer may be used to reset the I ² C if the bus remains busy longer than the time-out period. On a soft reset, the Tx and Rx FIFOs are flushed, I2C_STS register is cleared, and all internal state machines are reset to appear idle. The I2C_CLKHI, I2C_CLKLO and I2C_CTL (except Soft Reset Bit) are NOT modified by a soft reset.	0
		0	See the text.	
		1	Reset the I ² C to idle state. Self clearing.	
31:9	-	NA	Reserved, user software should not write ones to reserved bits. The value read from a reserved bit is not defined.	NA

15.8.14 I2C Clock High Register (I2C_CLKHI - 0xFFE0 C30C)

The CLK register holds a terminal count for counting 48 MHz clock cycles to create the high period of the slower I²C serial clock, SCL.

Table 347. I2C_CLKHI register (I2C_CLKHI - address 0xFFE0 C30C) bit description

Bit	Symbol	Description	Reset Value
7:0	CDHI	Clock divisor high. This value is the number of 48 MHz clocks the serial clock (SCL) will be high.	0xB9

Chapter 15: LPC23XX USB OTG controller

15.8.15 I2C Clock Low Register (I2C_CLKLO - 0xFFE0 C310)

The CLK register holds a terminal count for counting 48 MHz clock cycles to create the low period of the slower I²C serial clock, SCL.

Table 348. I2C_CLKLO register (I2C_CLKLO - address 0xFFE0 C310) bit description

Bit	Symbol	Description	Reset Value
7:0	CDLO	Clock divisor low. This value is the number of 48 MHz clocks the serial clock (SCL) will be low.	0xB9

15.8.16 Interrupt handling


The interrupts set in the OTGIntSt register are set and cleared during HNP switching. All OTG related interrupts, if enabled, are routed to the USB_OTG_INT bit in the USBIntSt register.

I2C related interrupts are set in the I2C_STS register and routed, if enabled by I2C_CTL, to the USB_I2C_INT bit.

For more details on the interrupts created by device controller, see the USB device chapter. For interrupts created by the host controllers, see the OHCI specification.

The EN_USB_INTS bit in the USBIntSt register enables the routing of any of the USB related interrupts to the VIC controller (see <u>Figure 75</u>).

Remark: During the HNP switching between host and device with the OTG stack active, an action may raise several levels of interrupts. It is advised to let the OTG stack initiate any actions based on interrupts and ignore device and host level interrupts. This means that during HNP switching, the OTG stack provides the communication to the host and device controllers.

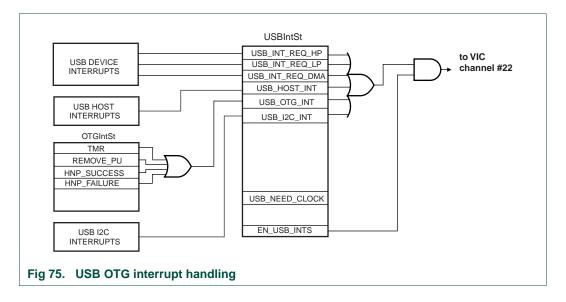

Chapter 15: LPC23XX USB OTG controller

15.9 HNP support

This section describes the hardware support for the Host Negotiation Protocol (HNP) provided by the OTG controller.

When two dual-role OTG devices are connected to each other, the plug inserted into the mini-AB receptacle determines the default role of each device. The device with the mini-A plug inserted becomes the default Host (A-device), and the device with the mini-B plug inserted becomes the default Peripheral (B-device).

Once connected, the default Host (A-device) and the default Peripheral (B-device) can switch Host and Peripheral roles using HNP.

The context of the OTG controller operation is shown in <u>Figure 76</u>. Each controller (Host, Device, or OTG) communicates with its software stack through a set of status and control registers and interrupts. In addition, the OTG software stack communicates with the external OTG transceiver through the I2C interface and the external transceiver interrupt signal.


The OTG software stack is responsible for implementing the HNP state machines as described in the On-The-Go Supplement to the USB 2.0 Specification.

The OTG controller hardware provides support for some of the state transitions in the HNP state machines as described in the following subsections.

The USB state machines, the HNP switching, and the communications between the USB controllers are described in more detail in the following documentation:

- USB OHCI specification
- USB OTG supplement, version 1.2
- USB 2.0 specification
- ISP1302 data sheet and user manual

Chapter 15: LPC23XX USB OTG controller

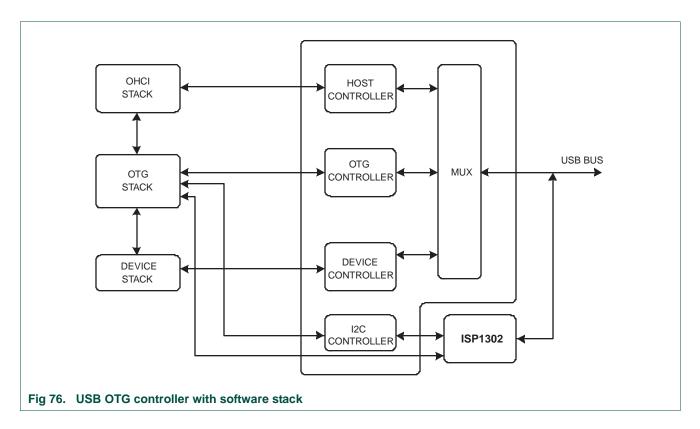


15.9.1 B-device: peripheral to host switching

In this case, the default role of the OTG controller is peripheral (B-device), and it switches roles from Peripheral to Host.

The On-The-Go Supplement defines the behavior of a dual-role B-device during HNP using a state machine diagram. The OTG software stack is responsible for implementing all of the states in the Dual-Role B-Device State Diagram.


The OTG controller hardware provides support for the state transitions between the states b_peripheral, b_wait_acon, and b_host in the Dual-Role B-Device state diagram. Setting B_HNP_TRACK in the OTGStCtrl register enables hardware support for the B-device switching from peripheral to host. The hardware actions after setting this bit are shown in Figure 77.

Chapter 15: LPC23XX USB OTG controller

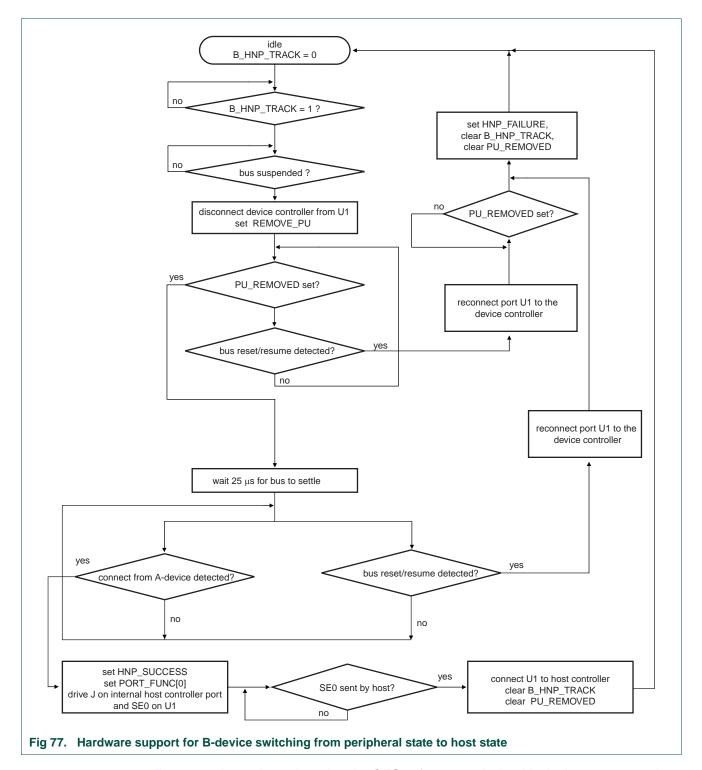

<u>Figure 78</u> shows the actions that the OTG software stack should take in response to the hardware actions setting REMOVE_PU, HNP_SUCCESS, AND HNP_FAILURE. The relationship of the software actions to the Dual-Role B-Device states is also shown. B-device states are in bold font with a circle around them.

Chapter 15: LPC23XX USB OTG controller

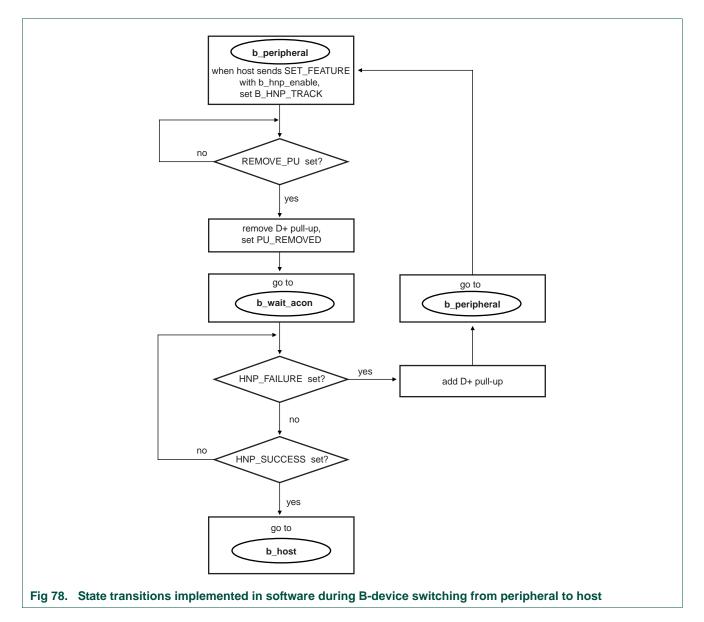

Note that only the subset of B-device HNP states and state transitions supported by hardware are shown. Software is responsible for implementing all of the HNP states.

<u>Figure 78</u> may appear to imply that the interrupt bits such as REMOVE_PU should be polled, but this is not necessary if the corresponding interrupt is enabled.

Following are code examples that show how the actions in <u>Figure 78</u> are accomplished. The examples assume that ISP1302 is being used as the external OTG transceiver.

Remove D+ pull-up

```
/* Remove D+ pull-up through ISP1302 */
OTG_I2C_TX = 0x15A; // Send ISP1302 address, R/W=0
OTG_I2C_TX = 0x007; // Send OTG Control (Clear) register address
OTG_I2C_TX = 0x201; // Clear DP_PULLUP bit, send STOP condition
```

Chapter 15: LPC23XX USB OTG controller

```
/* Wait for TDI to be set */
while (!(OTG_I2C_STS & TDI));

/* Clear TDI */
OTG_I2C_STS = TDI;

Add D+ pull-up

/* Add D+ pull-up through ISP1302 */
OTG_I2C_TX = 0x15A; // Send ISP1302 address, R/W=0
OTG_I2C_TX = 0x006; // Send OTG Control (Set) register address
OTG_I2C_TX = 0x201; // Set DP_PULLUP bit, send STOP condition

/* Wait for TDI to be set */
while (!(OTG_I2C_STS & TDI));

/* Clear TDI */
OTG I2C STS = TDI;
```


15.9.2 A-device: host to peripheral HNP switching

In this case, the role of the OTG controller is host (A-device), and the A-device switches roles from host to peripheral.

The On-The-Go Supplement defines the behavior of a dual-role A-device during HNP using a state machine diagram. The OTG software stack is responsible for implementing all of the states in the Dual-Role A-Device State Diagram.


The OTG controller hardware provides support for the state transitions between a_host, a_suspend, a_wait_vfall, and a_peripheral in the Dual-Role A-Device state diagram. Setting A_HNP_TRACK in the OTGStCtrl register enables hardware support for switching the A-device from the host state to the device state. The hardware actions after setting this bit are shown in Figure 79.

Chapter 15: LPC23XX USB OTG controller

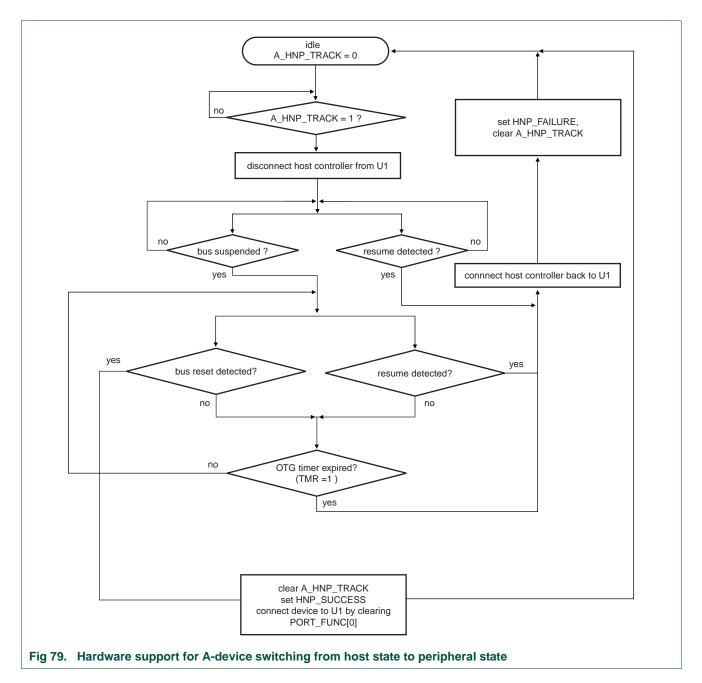

<u>Figure 80</u> shows the actions that the OTG software stack should take in response to the hardware actions setting TMR, HNP_SUCCESS, and HNP_FAILURE. The relationship of the software actions to the Dual-Role A-Device states is also shown. A-device states are shown in bold font with a circle around them.

Chapter 15: LPC23XX USB OTG controller

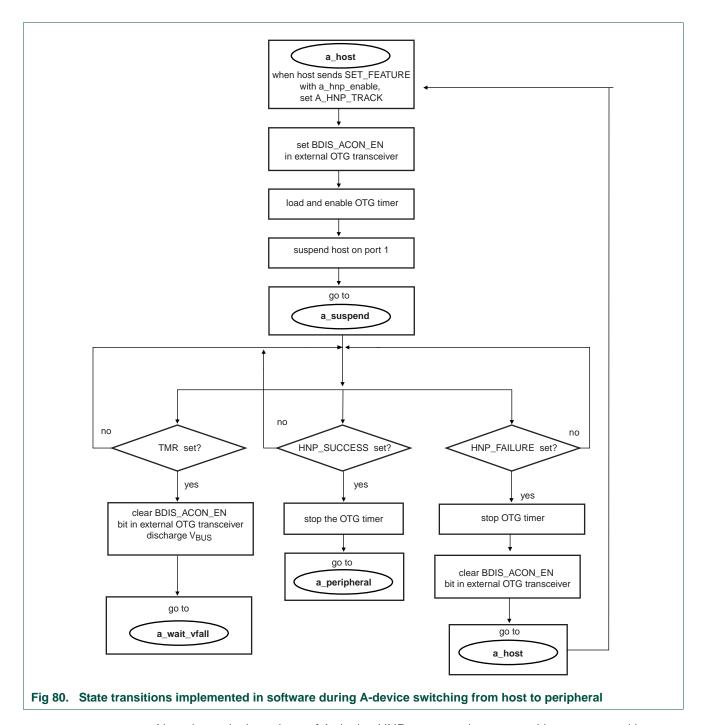

Note that only the subset of A-device HNP states and state transitions supported by hardware are shown. Software is responsible for implementing all of the HNP states.

<u>Figure 80</u> may appear to imply that the interrupt bits such as TMR should be polled, but this is not necessary if the corresponding interrupt is enabled.

Following are code examples that show how the actions in <u>Figure 80</u> are accomplished. The examples assume that ISP1302 is being used as the external OTG transceiver.

Set BDIS_ACON_EN in external OTG transceiver

Chapter 15: LPC23XX USB OTG controller

```
/* Set BDIS_ACON_EN in ISP1302 */
OTG_I2C_TX = 0x15A; // Send ISP1302 address, R/W=0
OTG I2C TX = 0x004; // Send Mode Control 1 (Set) register address
OTG_I2C_TX = 0x210; // Set BDIS_ACON_EN bit, send STOP condition
/* Wait for TDI to be set */
while (!(OTG I2C STS & TDI));
/* Clear TDI */
OTG I2C STS = TDI;
Clear BDIS_ACON_EN in external OTG transceiver
/* Set BDIS ACON EN in ISP1302 */
OTG I2C TX = 0x15A; // Send ISP1302 address, R/W=0
OTG_I2C_TX = 0x005; // Send Mode Control 1 (Clear) register address
OTG_I2C_TX = 0x210; // Clear BDIS_ACON_EN bit, send STOP condition
/* Wait for TDI to be set */
while (!(OTG I2C STS & TDI));
/* Clear TDI */
OTG_I2C_STS = TDI;
Discharge V<sub>BUS</sub>
/* Clear the VBUS DRV bit in ISP1302 */
OTG_I2C_TX = 0x15A; // Send ISP1302 address, R/W=0
OTG_I2C_TX = 0x007; // Send OTG Control (Clear) register address
OTG_I2C_TX = 0x220; // Clear VBUS_DRV bit, send STOP condition
/* Wait for TDI to be set */
while (!(OTG_I2C_STS & TDI));
/* Clear TDI */
OTG_I2C_STS = TDI;
/* Set the VBUS DISCHRG bit in ISP1302 */
OTG_I2C_TX = 0x15A; // Send ISP1302 address, R/W=0
OTG_I2C_TX = 0x006; // Send OTG Control (Set) register address
OTG I2C TX = 0x240; // Set VBUS DISCHRG bit, send STOP condition
/* Wait for TDI to be set */
while (!(OTG_I2C_STS & TDI));
```

/* Clear TDI */
OTG_I2C_STS = TDI;

Chapter 15: LPC23XX USB OTG controller

Load and enable OTG timer

```
/* The following assumes that the OTG timer has previously been */
/* configured for a time scale of 1 ms (TMR SCALE = "10")
                                                                    * /
/* and monoshot mode (TMR MODE = 0)
                                                                    * /
/* Load the timeout value to implement the a aidl bdis tmr timer */
       the minimum value is 200 ms
OTG_TIMER = 200;
/* Enable the timer */
OTG_STAT_CTRL |= TMR_EN;
Stop OTG timer
/* Disable the timer - causes TMR_CNT to be reset to 0 */
OTG_STAT_CTRL &= ~TMR_EN;
/* Clear TMR interrupt */
OTG_INT_CLR = TMR;
Suspend host on port 1
/* Write to PortSuspendStatus bit to suspend host port 1 -
^{\prime \star} this example demonstrates the low-level action software needs to take. ^{\star \prime}
/* The host stack code where this is done will be somewhat more involved. */
HC RH PORT STAT1 = PSS;
```

15.10 Clocking and power management


The OTG controller clocking is shown in Figure 81.

A clock switch controls each clock with the exception of ahb_slave_clk. When the enable of the clock switch is asserted, its clock output is turned on and its CLK_ON output is asserted. The CLK_ON signals are observable in the OTGClkSt register.

To conserve power, the clocks to the Device, Host, OTG, and I2C controllers can be disabled when not in use by clearing the respective CLK_EN bit in the OTGClkCtrl register. When the entire USB block is not in use, all of its clocks can be disabled by clearing the PCUSB bit in the PCONP register.

When software wishes to access registers in one of the controllers, it should first ensure that the respective controller's 48 MHz clock is enabled by setting its CLK_EN bit in the OTGClkCtrl register and then poll the corresponding CLK_ON bit in OTGClkSt until set. Once set, the controller's clock will remain enabled until CLK_EN is cleared by software. Accessing the register of a controller when its 48 MHz clock is not enabled will result in a data abort exception.

Chapter 15: LPC23XX USB OTG controller

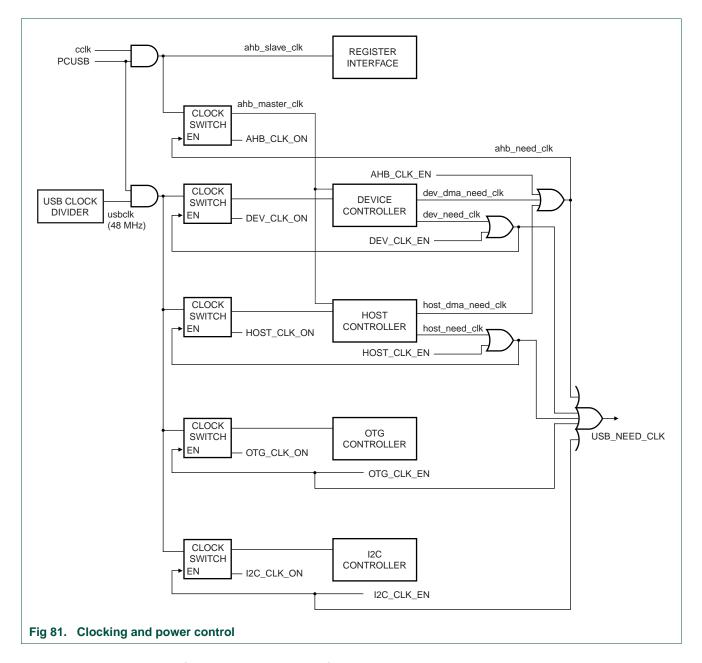

15.10.1 Device clock request signals

The Device controller has two clock request signals, dev_need_clk and dev_dma_need_clk. When asserted, these signals turn on the device's 48 MHz clock and ahb_master_clk respectively.

The dev_need_clk signal is asserted while the device is not in the suspend state, or if the device is in the suspend state and activity is detected on the USB bus. The dev_need_clk signal is de-asserted if a disconnect is detected (CON bit is cleared in the SIE Get Device Status register – Section 13.10.7). This signal allows DEV_CLK_EN to be cleared during normal operation when software does not need to access the Device controller registers – the Device will continue to function normally and automatically shut off its clock when it is suspended or disconnected.

Chapter 15: LPC23XX USB OTG controller

The dev_dma_need_clk signal is asserted on any Device controller DMA access to memory. Once asserted, it remains active for 2 ms (2 frames), to help assure that DMA throughput is not affected by any latency associated with re-enabling ahb_master_clk. 2 ms after the last DMA access, dev_dma_need_clk is de-asserted to help conserve power. This signal allows AHB_CLK_EN to be cleared during normal operation.

15.10.1.1 Host clock request signals

The Host controller has two clock request signals, host_need_clk and host_dma_need_clk. When asserted, these signals turn on the host's 48 MHz clock and ahb_master_clk respectively.

The host_need_clk signal is asserted while the Host controller functional state is not UsbSuspend, or if the functional state is UsbSuspend and resume signaling or a disconnect is detected on the USB bus. This signal allows HOST_CLK_EN to be cleared during normal operation when software does not need to access the Host controller registers – the Host will continue to function normally and automatically shut off its clock when it goes into the UsbSuspend state.

The host_dma_need_clk signal is asserted on any Host controller DMA access to memory. Once asserted, it remains active for 2 ms (2 frames), to help assure that DMA throughput is not affected by any latency associated with re-enabling ahb_master_clk. 2 ms after the last DMA access, host_dma_need_clk is de-asserted to help conserve power. This signal allows AHB_CLK_EN to be cleared during normal operation.

15.10.2 Power-down mode support

The LPC23xx can be configured to wake up from Power-down mode on any USB bus activity. When the USBWAKE bit is set in the INTWAKE register, the assertion of the USB_NEED_CLK signal causes the chip to wake up from Power Down.

Before Power-down mode can be entered when USBWAKE is set, USB_NEED_CLK must be de-asserted. This is accomplished by clearing all of the CLK_EN bits in OTGClkCtrl and putting the Host controller into the UsbSuspend functional state. If it is necessary to wait for either of the dma_need_clk signals or the dev_need_clk to be de-asserted, the status of USB_NEED_CLK can be polled in the USBIntSt register to determine when they have all been de-asserted.

15.11 USB OTG controller initialization

The LPC23xx OTG device controller initialization includes the following steps:

- Enable the device controller by setting the PCUSB bit of PCONP.
- Configure and enable the PLL and Clock Dividers to provide 48 MHz for usbclk, and the desired frequency for cclk. For correct operation of synchronization logic in the device controller, the minimum cclk frequency is 18 MHz. For the procedure for determining the PLL setting and configuration, see <u>Section 4.6.12 "Procedure for determining PLL settings"</u>.
- Enable the desired controller clocks by setting their respective CLK_EN bits in the USBClkCtrl register. Poll the corresponding CLK_ON bits in the USBClkSt register until they are set.

Chapter 15: LPC23XX USB OTG controller

- 4. Enable the desired USB pin functions by writing to the corresponding PINSEL registers.
- 5. Follow the appropriate steps in <u>Section 13.13 "USB device controller initialization"</u> to initialize the device controller.
- 6. Follow the guidelines given in the OpenHCI specification for initializing the host controller.

UM10211

Chapter 16: LPC23XX UART0/2/3

Rev. 4.1 — 5 September 2012

User manual

16.1 Basic configuration

The UART0/2/3 peripherals are configured using the following registers:

- Power: In the PCONP register (<u>Table 56</u>), set bits PCUART0/2/3.
 Remark: On reset, UART0 is enabled (PCUART0 = 1), and UART2/3 are disabled (PCUART2/3 = 0).
- Peripheral clock: In the PCLK_SEL0 register (<u>Table 49</u>), select PCLK_UART0; in the PCLK_SEL1 register (<u>Table 50</u>), select PCLK_UART2/3.
- Baud rate: In register U0/2/3LCR (<u>Table 359</u>), set bit DLAB =1. This enables access to registers DLL (<u>Table 353</u>) and DLM (<u>Table 354</u>) for setting the baud rate. Also, if needed, set the fractional baud rate in the fractional divider register (<u>Table 365</u>).
- UART FIFO: Use bit FIFO enable (bit 0) in register U0FCR (<u>Table 358</u>) to enable FIFO.
- 5. Pins: Select UART pins and pin modes in registers PINSELn and PINMODEn (see Section 9.5).

Remark: UART receive pins should not have pull-down resistors enabled.

6. Interrupts: To enable UART interrupts set bit DLAB =0 in register U0/2/3LCR (<u>Table 359</u>). This enables access to U0/2/3IER (<u>Table 356</u>). Interrupts are enabled in the VIC using the VICIntEnable register (<u>Table 76</u>).

16.2 Features

- 16 byte Receive and Transmit FIFOs.
- Register locations conform to '550 industry standard.
- Receiver FIFO trigger points at 1, 4, 8, and 14 bytes.
- Built-in baud rate generator.
- Fractional divider for baud rate control and implementation of software or hardware flow control.
- UART3 includes an IrDA mode to support infrared communication.

Chapter 16: LPC23XX UART0/2/3

16.3 Pin description

Table 349. UARTO Pin description

Pin	Туре	Description
RXD0, RXD2, RXD3	Input	Serial Input. Serial receive data.
TXD0, TXD2, TXD3	Output	Serial Output. Serial transmit data.

16.4 Register description

Each UART contains registers as shown in <u>Table 350</u>. The Divisor Latch Access Bit (DLAB) is contained in UnLCR7 and enables access to the Divisor Latches.

Table 350.	UART	Register	Map
-------------------	------	----------	-----

Generic	Description	Bit funct	tions and	daddress	ses	Access	Reset	UARTn Register				
Name		MSB							LSB		value[1]	Name & Address
		BIT7	BIT6	BIT5	BIT4	BIT3	BIT2	BIT1	BIT0			
RBR (DLAB=0)	Receiver Buffer Register				8 k	oit Read D	ata			RO	NA	U0RBR - 0xE000 C000 U2RBR - 0xE007 800 U3RBR - 0xE007 C000
THR (DLAB=0)	Transmit Holding Register				8 t	oit Write D	ata			WO	NA	U0THR - 0xE000 C00 U2THR - 0xE007 800 U3THR - 0xE007 C00
DLL (DLAB=1)	Divisor Latch LSB		8 bit Data							R/W	0x01	U0DLL - 0xE000 C000 U2DLL - 0xE007 8000 U3DLL - 0xE007 C000
DLM (DLAB=1)	Divisor Latch MSB					8 bit Data	l			R/W	0x00	U0DLM - 0xE000 C004 U2DLM - 0xE007 800 U3DLM - 0xE007 C004
IER (DLAB=0)	Interrupt Enable Register		Reserved Enable Auto-Baud Time- Out Interrupt					Enable End of Auto- Baud Interrupt	R/W	0x00	U0IER - 0xE000 C004 U2IER - 0xE007 8004 U3IER - 0xE007 C004	
				0			Enable RX Line Status Interrupt	Enable THRE Interrupt	Enable RX Data Available Interrupt			
IIR	Interrupt ID			Res	served			ABTOInt	ABEOint	RO	0x01	U0IIR - 0xE000 C008
	Register	FIFOs E	nabled	()	IIR3	IIR2	IIR1	IIR0			U2IIR - 0xE007 8008 U3IIR - 0xE007 C008
FCR	FIFO Control Register	RX Tr	igger		Reserved	d	TX FIFO Reset	RX FIFO Reset	FIFO Enable	WO	0x00	U0FCR - 0xE000 C00 U2FCR - 0xE007 800 U3FCR - 0xE007 C00
LCR	Line Control Register	DLAB	Set Break	Stick Parity	Even Parity Select	Parity Enable	Number of Stop Bits	Word Ler	ngth Select	R/W	0x00	U0LCR - 0xE000 C00C U2LCR - 0xE007 800 U3LCR - 0xE007 C00C

User manual

Table 350. UART Register Map

Generic	Description	Bit funct	tions and	d address	es					Access	Reset value[1]	UARTn Register Name & Address
Name		MSB							LSB	_		
LSR	Line Status Register	RX FIFO Error	TEMT	THRE	ВІ	FE	PE	OE	DR	RO	0x60	U0LSR - 0xE000 C01 U2LSR - 0xE007 801 U3LSR - 0xE007 C01
SCR	Scratch Pad Register					8 bit Dat	a			R/W	0x00	U0SCR - 0xE000 C01C U2SCR - 0xE007 801C U3SCR - 0xE007 C01C
ACR	Auto-baud Control Register		Reserved [31:10]					ABTO IntClr	ABEO IntClr	R/W	0x00	U0ACR - 0xE000 C020
			Re	eserved [7:	3]		Auto Reset	Mode	Start			U2ACR - 0xE007 80 U3ACR - 0xE007 C020
ICR	IrDA Control Register	Rese	erved	I	PulseDiv	/	FixPulse En	IrDAInv	IrDAEn	R/W	0	U3ICR - 0xE000 C02 (UART3 only)
FDR	Fractional Divider Register		Mu	llVal			Div	/AddVal		R/W	0x10	U0FDR - 0xE000 C02 U2FDR - 0xE007 802 U3FDR - 0xE007 C02
TER	Transmit Enable Register	TXEN	TXEN Reserved							R/W	0x80	U0TER - 0xE000 C03 U2TER - 0xE007 803 U3TER - 0xE007 C03

^[1] Reset Value reflects the data stored in used bits only. It does not include reserved bits content.

Chapter 16: LPC23XX UART0/2/3

16.4.1 UARTn Receiver Buffer Register (U0RBR - 0xE000 C000, U2RBR - 0xE007 8000, U3RBR - 0xE007 C000 when DLAB = 0, Read Only)

The UnRBR is the top byte of the UARTn Rx FIFO. The top byte of the Rx FIFO contains the oldest character received and can be read via the bus interface. The LSB (bit 0) represents the "oldest" received data bit. If the character received is less than 8 bits, the unused MSBs are padded with zeroes.

The Divisor Latch Access Bit (DLAB) in LCR must be zero in order to access the UnRBR. The UnRBR is always Read Only.

Since PE, FE and BI bits correspond to the byte sitting on the top of the RBR FIFO (i.e. the one that will be read in the next read from the RBR), the right approach for fetching the valid pair of received byte and its status bits is first to read the content of the U0LSR register, and then to read a byte from the UnRBR.

Table 351. UARTn Receiver Buffer Register (U0RBR - address 0xE000 C000, U2RBR - 0xE007 8000, U3RBR - 0E007 C000 when DLAB = 0, Read Only) bit description

Bit	Symbol	Description	Reset Value
7:0	RBR	The UARTn Receiver Buffer Register contains the oldest received byte in the UARTn Rx FIFO.	Undefined

16.4.2 UARTn Transmit Holding Register (U0THR - 0xE000 C000, U2THR - 0xE007 8000, U3THR - 0xE007 C000 when DLAB = 0, Write Only)

The UnTHR is the top byte of the UARTn TX FIFO. The top byte is the newest character in the TX FIFO and can be written via the bus interface. The LSB represents the first bit to transmit.

The Divisor Latch Access Bit (DLAB) in UnLCR must be zero in order to access the UnTHR. The UnTHR is always Write Only.

Table 352. UART0 Transmit Holding Register (U0THR - address 0xE000 C000, U2THR - 0xE007 8000, U3THR - 0xE007 C000 when DLAB = 0, Write Only) bit description

Bit	Symbol	Description	Reset Value
7:0	THR	Writing to the UARTn Transmit Holding Register causes the data to be stored in the UARTn transmit FIFO. The byte will be sent when it reaches the bottom of the FIFO and the transmitter is available.	NA

16.4.3 UARTn Divisor Latch LSB Register (U0DLL - 0xE000 C000, U2DLL - 0xE007 8000, U3DLL - 0xE007 C000 when DLAB = 1) and UARTn Divisor Latch MSB Register (U0DLM - 0xE000 C004, U2DLL - 0xE007 8004, U3DLL - 0xE007 C004 when DLAB = 1)

The UARTn Divisor Latch is part of the UARTn Baud Rate Generator and holds the value used to divide the APB clock (PCLK) in order to produce the baud rate clock, which must be 16× the desired baud rate (see Equation 7). The UnDLL and UnDLM registers together form a 16 bit divisor where UnDLL contains the lower 8 bits of the divisor and UnDLM contains the higher 8 bits of the divisor. A 0x0000 value is treated like a 0x0001 value as

Chapter 16: LPC23XX UART0/2/3

division by zero is not allowed. The Divisor Latch Access Bit (DLAB) in UnLCR must be one in order to access the UARTn Divisor Latches. Details on how to select the right value for UnDLL and UnDLM can be found in Section 16.4.12.

(7)

$$UARTn_{baudrate} = \frac{pclk}{16 \times (256 \times UnDLM + UnDLL)}$$

Table 353. UARTn Divisor Latch LSB Register (U0DLL - address 0xE000 C000, U2DLL - 0xE007 8000, U3DLL - 0xE007 C000 when DLAB = 1) bit description

Bit	Symbol	Description	Reset Value
7:0	DLLSB	The UARTn Divisor Latch LSB Register, along with the UnDLM register, determines the baud rate of the UARTn.	0x01

Table 354. UARTn Divisor Latch MSB Register (U0DLM - address 0xE000 C004, U2DLM - 0xE007 8004, U3DLM - 0xE007 C004 when DLAB = 1) bit description

Bit	Symbol	Description	Reset Value
7:0	DLMSB	The UARTn Divisor Latch MSB Register, along with the U0DLL register, determines the baud rate of the UARTn.	0x00

16.4.4 UARTn Interrupt Enable Register (U0IER - 0xE000 C004, U2IER - 0xE007 8004, U3IER - 0xE007 C004 when DLAB = 0)

The UnIER is used to enable the three UARTn interrupt sources.

Table 355. UARTn Interrupt Enable Register (U0IER - address 0xE000 C004, U2IER - 0xE007 8004, U3IER - 0xE007 C004 when DLAB = 0) bit description

Bit	Symbol	Value	Description	Reset Value
0	RBR Interrupt Enable		UnIER[0] enables the Receive Data Available interrupt for UARTn. It also controls the Character Receive Time-out interrupt.	0
		0	Disable the RDA interrupts.	
		1	Enable the RDA interrupts.	
1	THRE Interrupt Enable	0	UnIER[1] enables the THRE interrupt for UARTn. The status of this can be read from UnLSR[5].	0
		Enable	Disable the THRE interrupts.	
		1	Enable the THRE interrupts.	
2	RX Line Status Interrupt Enable	0	UnIER[2] enables the UARTn RX line status interrupts. The status of this interrupt can be read from UnLSR[4:1].	0
			Disable the RX line status interrupts.	
		1	Enable the RX line status interrupts.	
7:3	-		Reserved, user software should not write ones to reserved bits. The value read from a reserved bit is not defined.	NA

Chapter 16: LPC23XX UART0/2/3

Table 355. UARTn Interrupt Enable Register (U0IER - address 0xE000 C004, U2IER - 0xE007 8004, U3IER - 0xE007 C004 when DLAB = 0) bit description

Bit	Symbol	Value	Description	Reset Value
8	ABEOIntEn		enables the end of auto-baud interrupt.	0
		0	Disable End of Auto-baud Interrupt.	
		1	Enable End of Auto-baud Interrupt.	
9	ABTOIntEn		enables the auto-baud time-out interrupt.	0
		0	Disable Auto-baud Time-out Interrupt.	
		1	Enable Auto-baud Time-out Interrupt.	
31:10	-		Reserved, user software should not write ones to reserved bits. The value read from a reserved bit is not defined.	NA

16.4.5 UARTn Interrupt Identification Register (U0IIR - 0xE000 C008, U2IIR - 0xE007 8008, U3IIR - 0x7008 C008, Read Only)

The UnlIR provides a status code that denotes the priority and source of a pending interrupt. The interrupts are frozen during an UnlIR access. If an interrupt occurs during an UnlIR access, the interrupt is recorded for the next UnlIR access.

Table 356. UARTn Interrupt Identification Register (U0IIR - address 0xE000 C008, U2IIR - 0x7008 8008, U3IIR - 0x7008 C008, Read Only) bit description

Bit	Symbol	Value	Description	Reset Value
0	IntStatus		Interrupt status. Note that U1IIR[0] is active low. The pending interrupt can be determined by evaluating UnIIR[3:1].	1
		0	At least one interrupt is pending.	
		1	No interrupt is pending.	
3:1	Intld		Interrupt identification. UnIER[3:1] identifies an interrupt corresponding to the UARTn Rx FIFO. All other combinations of UnIER[3:1] not listed above are reserved (000,100,101,111).	0
		011	1 - Receive Line Status (RLS).	
		010	2a - Receive Data Available (RDA).	
		110	2b - Character Time-out Indicator (CTI).	
		001	3 - THRE Interrupt	
5:4	-		Reserved, user software should not write ones to reserved bits. The value read from a reserved bit is not defined.	NA
7:6	FIFO Enable		These bits are equivalent to UnFCR[0].	0
8	ABEOInt		End of auto-baud interrupt. True if auto-baud has finished successfully and interrupt is enabled.	0
9	ABTOInt		Auto-baud time-out interrupt. True if auto-baud has timed out and interrupt is enabled.	0
31:10	-		Reserved, user software should not write ones to reserved bits. The value read from a reserved bit is not defined.	NA

Chapter 16: LPC23XX UART0/2/3

Bit UnIIR[9:8] are set by the auto-baud function and signal a time-out or end of auto-baud condition. The auto-baud interrupt conditions are cleared by setting the corresponding Clear bits in the Auto-baud Control Register.

If the IntStatus bit is 1 no interrupt is pending and the IntId bits will be zero. If the IntStatus is 0, a non auto-baud interrupt is pending in which case the IntId bits identify the type of interrupt and handling as described in <u>Table 357</u>. Given the status of UnIIR[3:0], an interrupt handler routine can determine the cause of the interrupt and how to clear the active interrupt. The UnIIR must be read in order to clear the interrupt prior to exiting the Interrupt Service Routine.

The UARTn RLS interrupt (UnIIR[3:1] = 011) is the highest priority interrupt and is set whenever any one of four error conditions occur on the UARTn Rx input: overrun error (OE), parity error (PE), framing error (FE) and break interrupt (BI). The UARTn Rx error condition that set the interrupt can be observed via U0LSR[4:1]. The interrupt is cleared upon an UnLSR read.

The UARTn RDA interrupt (UnIIR[3:1] = 010) shares the second level priority with the CTI interrupt (UnIIR[3:1] = 110). The RDA is activated when the UARTn Rx FIFO reaches the trigger level defined in UnFCR[7:6] and is reset when the UARTn Rx FIFO depth falls below the trigger level. When the RDA interrupt goes active, the CPU can read a block of data defined by the trigger level.

The CTI interrupt (UnIIR[3:1] = 110) is a second level interrupt and is set when the UARTn Rx FIFO contains at least one character and no UARTn Rx FIFO activity has occurred in 3.5 to 4.5 character times. Any UARTn Rx FIFO activity (read or write of UARTn RSR) will clear the interrupt. This interrupt is intended to flush the UARTn RBR after a message has been received that is not a multiple of the trigger level size. For example, if a peripheral wished to send a 105 character message and the trigger level was 10 characters, the CPU would receive 10 RDA interrupts resulting in the transfer of 100 characters and 1 to 5 CTI interrupts (depending on the service routine) resulting in the transfer of the remaining 5 characters.

Table 357. UARTn Interrupt Handling

		-	_	
U0IIR[3:0] value[1]	Priority	Interrupt Type	Interrupt Source	Interrupt Reset
0001	-	None	None	-
0110	Highest	RX Line Status / Error	OE ^[2] or PE ^[2] or FE ^[2] or BI ^[2]	UnLSR Read[2]

Chapter 16: LPC23XX UART0/2/3

Table 357. UARTn Interrupt Handling

U0IIR[3:0] value[1]	Priority	Interrupt Type	Interrupt Source	Interrupt Reset
0100	Second	RX Data Available	Rx data available or trigger level reached in FIFO (UnFCR0=1)	UnRBR Read[3] or UARTn FIFO drops below trigger level
1100	Second	Character Time-out indication	Minimum of one character in the Rx FIFO and no character input or removed during a time period depending on how many characters are in FIFO and what the trigger level is set at (3.5 to 4.5 character times).	UnRBR Read ^[3]
			The exact time will be:	
			[(word length) \times 7 - 2] \times 8 + [(trigger level - number of characters) \times 8 + 1] RCLKs	
0010	Third	THRE	THRE ^[2]	UnIIR Read (if source of interrupt) or THR write ^[4]

^[1] Values "0000", "0011", "0101", "0111", "1000", "1001", "1010", "1011", "1110", "1111" are reserved.

The UARTn THRE interrupt (UnIIR[3:1] = 001) is a third level interrupt and is activated when the UARTn THR FIFO is empty provided certain initialization conditions have been met. These initialization conditions are intended to give the UARTn THR FIFO a chance to fill up with data to eliminate many THRE interrupts from occurring at system start-up. The initialization conditions implement a one character delay minus the stop bit whenever THRE = 1 and there have not been at least two characters in the UnTHR at one time since the last THRE = 1 event. This delay is provided to give the CPU time to write data to UnTHR without a THRE interrupt to decode and service. A THRE interrupt is set immediately if the UARTn THR FIFO has held two or more characters at one time and currently, the UnTHR is empty. The THRE interrupt is reset when a UnTHR write occurs or a read of the UnIIR occurs and the THRE is the highest interrupt (UnIIR[3:1] = 001).

16.4.6 UARTn FIFO Control Register (U0FCR - 0xE000 C008, U2FCR - 0xE007 8008, U3FCR - 0xE007 C008, Write Only)

The UnFCR controls the operation of the UARTn Rx and TX FIFOs.

^[2] For details see Section 16.4.8 "UARTn Line Status Register (U0LSR - 0xE000 C014, U2LSR - 0xE007 8014, U3LSR - 0xE007 C014, Read Only)"

^[3] For details see Section 16.4.1 "UARTh Receiver Buffer Register (U0RBR - 0xE000 C000, U2RBR - 0xE007 8000, U3RBR - 0xE007 C000 when DLAB = 0, Read Only)"

^[4] For details see Section 16.4.5 "UARTn Interrupt Identification Register (U0IIR - 0xE000 C008, U2IIR - 0xE007 8008, U3IIR - 0x7008 C008, Read Only)" and Section 16.4.2 "UARTn Transmit Holding Register (U0THR - 0xE000 C000, U2THR - 0xE007 8000, U3THR - 0xE007 C000 when DLAB = 0, Write Only)"

Chapter 16: LPC23XX UART0/2/3

Table 358. UARTn FIFO Control Register (U0FCR - address 0xE000 C008, U2FCR - 0xE007 8008, U3FCR - 0xE007 C008, Write Only) bit description

Bit	Symbol	Value	Description	Reset Value
0	FIFO Enable	0	UARTn FIFOs are disabled. Must not be used in the application.	0
		1	Active high enable for both UARTn Rx and TX FIFOs and UnFCR[7:1] access. This bit must be set for proper UARTn operation. Any transition on this bit will automatically clear the UARTn FIFOs.	
1	RX FIFO	0	No impact on either of UARTn FIFOs.	0
	Reset	1	Writing a logic 1 to UnFCR[1] will clear all bytes in UARTn Rx FIFO and reset the pointer logic. This bit is self-clearing.	
2	TX FIFO Reset	0	No impact on either of UARTn FIFOs.	0
		Reset	1	Writing a logic 1 to UnFCR[2] will clear all bytes in UARTn TX FIFO and reset the pointer logic. This bit is self-clearing.
5:3	-	0	Reserved, user software should not write ones to reserved bits. The value read from a reserved bit is not defined.	NA
7:6	RX Trigger Level		These two bits determine how many receiver UARTn FIFO characters must be written before an interrupt is activated.	0
		00	Trigger level 0 (1 character or 0x01)	
		01	Trigger level 1 (4 characters or 0x04)	
		10	Trigger level 2 (8 characters or 0x08)	
		11	Trigger level 3 (14 characters or 0x0E)	

16.4.7 UARTn Line Control Register (U0LCR - 0xE000 C00C, U2LCR - 0xE007 800C, U3LCR - 0xE007 C00C)

The UnLCR determines the format of the data character that is to be transmitted or received.

Table 359. UARTn Line Control Register (U0LCR - address 0xE000 C00C, U2LCR - 0xE007 800C, U3LCR - 0xE007 C00C) bit description

Bit	Symbol	Value	Description	Reset Value			
1:0	Word Length	00	5 bit character length	0			
	Select	01	6 bit character length				
		10	7 bit character length				
				11	8 bit character length		
2	Stop Bit Select	Stop Bit Select	Stop Bit Select	Stop Bit Select 0 1 stop	1 stop bit.	0	
		1	2 stop bits (1.5 if UnLCR[1:0]=00).				
3	Parity Enable	0	Disable parity generation and checking.	0			
					•	1	Enable parity generation and checking.

Chapter 16: LPC23XX UART0/2/3

Table 359. UARTn Line Control Register (U0LCR - address 0xE000 C00C, U2LCR - 0xE007 800C, U3LCR - 0xE007 C00C) bit description

Bit	Symbol	Value	Description	Reset Value
5:4	Parity Select	00	Odd parity. Number of 1s in the transmitted character and the attached parity bit will be odd.	0
		01	Even Parity. Number of 1s in the transmitted character and the attached parity bit will be even.	
		10	Forced "1" stick parity.	
		11	Forced "0" stick parity.	
6	Break Control	0	Disable break transmission.	0
		1	Enable break transmission. Output pin UART0 TXD is forced to logic 0 when UnLCR[6] is active high.	
7	Divisor Latch	0	Disable access to Divisor Latches.	0
	Access Bit (DLAB)	1	Enable access to Divisor Latches.	

16.4.8 UARTn Line Status Register (U0LSR - 0xE000 C014, U2LSR - 0xE007 8014, U3LSR - 0xE007 C014, Read Only)

The UnLSR is a read-only register that provides status information on the UARTn TX and RX blocks.

Table 360. UARTn Line Status Register (U0LSR - address 0xE000 C014, U2LSR - 0xE007 8014, U3LSR - 0xE007 C014, Read Only) bit description

Bit	Symbol	Value	Description	Reset Value
0	Receiver Data Ready		UnLSR0 is set when the UnRBR holds an unread character and is cleared when the UARTn RBR FIFO is empty.	0
	(RDR)	0	UnRBR is empty.	
		1	UnRBR contains valid data.	
1	Overrun Error (OE)		The overrun error condition is set as soon as it occurs. An UnLSR read clears UnLSR1. UnLSR1 is set when UARTn RSR has a new character assembled and the UARTn RBR FIFO is full. In this case, the UARTn RBR FIFO will not be overwritten and the character in the UARTn RSR will be lost.	0
		0	Overrun error status is inactive.	
		1	Overrun error status is active.	
2	Parity Error (PE)		When the parity bit of a received character is in the wrong state, a parity error occurs. An UnLSR read clears UnLSR[2]. Time of parity error detection is dependent on UnFCR[0].	0
			Note: A parity error is associated with the character at the top of the UARTn RBR FIFO.	
		0	Parity error status is inactive.	
		1	Parity error status is active.	

Chapter 16: LPC23XX UART0/2/3

Table 360. UARTn Line Status Register (U0LSR - address 0xE000 C014, U2LSR - 0xE007 8014, U3LSR - 0xE007 C014, Read Only) bit description

Bit	Symbol	Value	Description	Reset Value
3	Framing Error (FE)		When the stop bit of a received character is a logic 0, a framing error occurs. An UnLSR read clears UnLSR[3]. The time of the framing error detection is dependent on UnFCR0. Upon detection of a framing error, the Rx will attempt to resynchronize to the data and assume that the bad stop bit is actually an early start bit. However, it cannot be assumed that the next received byte will be correct even if there is no Framing Error.	0
			Note: A framing error is associated with the character at the top of the UARTn RBR FIFO.	
		0	Framing error status is inactive.	
		1	Framing error status is active.	
4	Break Interrupt (BI)		When RXDn is held in the spacing state (all 0's) for one full character transmission (start, data, parity, stop), a break interrupt occurs. Once the break condition has been detected, the receiver goes idle until RXDn goes to marking state (all 1's). An UnLSR read clears this status bit. The time of break detection is dependent on UnFCR[0].	0
			Note: The break interrupt is associated with the character at the top of the UARTn RBR FIFO.	
		0	Break interrupt status is inactive.	
		1	Break interrupt status is active.	
5	Transmitter Holding		THRE is set immediately upon detection of an empty UARTn THR and is cleared on a UnTHR write.	1
	Register Empty	0	UnTHR contains valid data.	
	(THRE))	1	UnTHR is empty.	
6	Transmitter Empty (TEMT)		TEMT is set when both UnTHR and UnTSR are empty; TEMT is cleared when either the UnTSR or the UnTHR contain valid data.	1
		0	UnTHR and/or the UnTSR contains valid data.	
		1	UnTHR and the UnTSR are empty.	
7	Error in RX FIFO (RXFE)		UnLSR[7] is set when a character with a Rx error such as framing error, parity error or break interrupt, is loaded into the UnRBR. This bit is cleared when the UnLSR register is read and there are no subsequent errors in the UARTn FIFO.	0
		0	UnRBR contains no UARTn RX errors or UnFCR[0]=0.	
		1	UARTn RBR contains at least one UARTn RX error.	

16.4.9 UARTn Scratch Pad Register (U0SCR - 0xE000 C01C, U2SCR - 0xE007 801C U3SCR - 0xE007 C01C)

The UnSCR has no effect on the UARTn operation. This register can be written and/or read at user's discretion. There is no provision in the interrupt interface that would indicate to the host that a read or write of the UnSCR has occurred.

Chapter 16: LPC23XX UART0/2/3

Table 361. UARTn Scratch Pad Register (U0SCR - address 0xE000 C01C, U2SCR - 0xE007 801C, U3SCR - 0xE007 C01C) bit description

Bit Symbol Description			
7:0 Pad	A readable, writable byte.	0x00	

16.4.10 UARTn Auto-baud Control Register (U0ACR - 0xE000 C020, U2ACR - 0xE007 8020, U3ACR - 0xE007 C020)

The UARTn Auto-baud Control Register (UnACR) controls the process of measuring the incoming clock/data rate for the baud rate generation and can be read and written at user's discretion.

Table 362. UARTn Auto-baud Control Register (U0ACR - 0xE000 C020, U2ACR - 0xE007 8020, U3ACR - 0xE007 C020) bit description

Bit	Symbol	Value	Description	Reset value	
0	Start		This bit is automatically cleared after auto-baud completion.	0	
		0	Auto-baud stop (auto-baud is not running).		
		1	Auto-baud start (auto-baud is running). Auto-baud run bit. This bit is automatically cleared after auto-baud completion.		
1	Mode		Auto-baud mode select bit.	0	
		0	Mode 0.		
		1	Mode 1.		
2	AutoRestart	0	No restart.	0	
		1	Restart in case of time-out (counter restarts at next UART0 Rx falling edge)	0	
7:3	-	NA	Reserved, user software should not write ones to reserved bits. The value read from a reserved bit is not defined.	0	
8	ABEOIntClr		End of auto-baud interrupt clear bit (write only accessible). Writing a 1 will clear the corresponding interrupt in the UnIIR. Writing a 0 has no impact.	0	
9	ABTOIntClr		Auto-baud time-out interrupt clear bit (write only accessible). Writing a 1 will clear the corresponding interrupt in the UnIIR. Writing a 0 has no impact.	0	
31:10	-	NA	Reserved, user software should not write ones to reserved bits. The value read from a reserved bit is not defined.	0	

16.4.10.1 Auto-baud

The UARTn auto-baud function can be used to measure the incoming baud-rate based on the "AT" protocol (Hayes command). If enabled the auto-baud feature will measure the bit time of the receive data stream and set the divisor latch registers UnDLM and UnDLL accordingly.

Auto-baud is started by setting the UnACR Start bit. Auto-baud can be stopped by clearing the UnACR Start bit. The Start bit will clear once auto-baud has finished and reading the bit will return the status of auto-baud (pending/finished).

Chapter 16: LPC23XX UART0/2/3

Two auto-baud measuring modes are available which can be selected by the UnACR Mode bit. In mode 0 the baud-rate is measured on two subsequent falling edges of the UARTn Rx pin (the falling edge of the start bit and the falling edge of the least significant bit). In mode 1 the baud-rate is measured between the falling edge and the subsequent rising edge of the UARTn Rx pin (the length of the start bit).

The UnACR AutoRestart bit can be used to automatically restart baud-rate measurement if a time-out occurs (the rate measurement counter overflows). If this bit is set the rate measurement will restart at the next falling edge of the UARTn Rx pin.

The auto-baud function can generate two interrupts.

- The UnlIR ABTOInt interrupt will get set if the interrupt is enabled (UnlER ABToIntEn is set and the auto-baud rate measurement counter overflows).
- The UnIIR ABEOInt interrupt will get set if the interrupt is enabled (UnIER ABEOIntEn is set and the auto-baud has completed successfully).

The auto-baud interrupts have to be cleared by setting the corresponding UnACR ABTOIntCIr and ABEOIntEn bits.

The fractional baud-rate generator is disabled (DIVADDVAL = 0) during auto-baud. When auto-baud is used, any write to UnDLM and UnDLL registers should be done before UnACR register write. The minimum and the maximum baudrates supported by UARTn are function of pclk, number of data bits, stop bits and parity bits.

(8)

$$ratemin \ = \ \frac{2 \times PCLK}{16 \times 2^{15}} \leq UARTn_{baudrate} \leq \frac{PCLK}{16 \times (2 + databits + paritybits + stopbits)} \ = \ ratemax$$

16.4.10.2 Auto-baud modes


When the software is expecting an "AT" command, it configures the UARTn with the expected character format and sets the UnACR Start bit. The initial values in the divisor latches UnDLM and UnDLM don't care. Because of the "A" or "a" ASCII coding ("A" = 0x41, "a" = 0x61), the UARTn Rx pin sensed start bit and the LSB of the expected character are delimited by two falling edges. When the UnACR Start bit is set, the auto-baud protocol will execute the following phases:

- 1. On UnACR Start bit setting, the baud-rate measurement counter is reset and the UARTn UnRSR is reset. The UnRSR baud rate is switch to the highest rate.
- 2. A falling edge on UARTn Rx pin triggers the beginning of the start bit. The rate measuring counter will start counting pclk cycles.
- 3. During the receipt of the start bit, 16 pulses are generated on the RSR baud input with the frequency of the UARTn input clock, guaranteeing the start bit is stored in the UnRSR.
- 4. During the receipt of the start bit (and the character LSB for mode = 0) the rate counter will continue incrementing with the pre-scaled UARTn input clock (pclk).
- 5. If Mode = 0 then the rate counter will stop on next falling edge of the UARTn Rx pin. If Mode = 1 then the rate counter will stop on the next rising edge of the UARTn Rx pin.

UM10211

Chapter 16: LPC23XX UART0/2/3

6. The rate counter is loaded into UnDLM/UnDLL and the baud-rate will be switched to normal operation. After setting the UnDLM/UnDLL the end of auto-baud interrupt UnIIR ABEOInt will be set, if enabled. The UnRSR will now continue receiving the remaining bits of the "A/a" character.

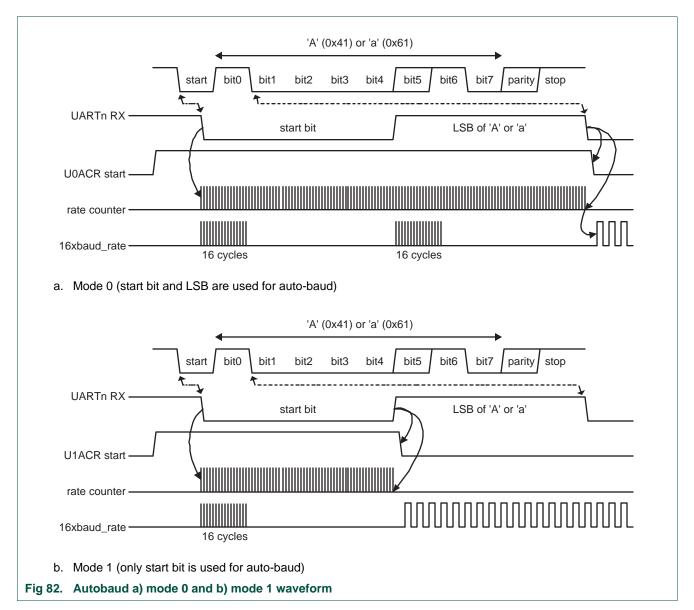

16.4.11 IrDA Control Register for UART3 Only (U3ICR - 0xE007 C024)

The IrDA Control Register enables and configures the IrDA mode for UART3 only. The value of U3ICR should not be changed while transmitting or receiving data, or data loss or corruption may occur.

Chapter 16: LPC23XX UART0/2/3

Table 363. IrDA Control Register for UART3 only (U3ICR - address 0xE007 C024) bit description

Bit	Symbol	Value	Description	Reset value
0 IrDAEn		0	IrDA mode on UART3 is disabled, UART3 acts as a standard UART.	0
		1	IrDA mode on UART3 is enabled.	
1	IrDAInv		When 1, the serial input is inverted. This has no effect on the serial output. When 0, the serial input is not inverted.	0
2	FixPulseEn		When 1, enabled IrDA fixed pulse width mode.	0
5:3	PulseDiv		Configures the pulse when FixPulseEn = 1. See text below for details.	0
31:6	-	NA	Reserved, user software should not write ones to reserved bits. The value read from a reserved bit is not defined.	0

The PulseDiv bits in U3ICR are used to select the pulse width when the fixed pulse width mode is used in IrDA mode (IrDAEn = 1 and FixPulseEn = 1). The value of these bits should be set so that the resulting pulse width is at least 1.63 μ s. Table 364 shows the possible pulse widths.

Table 364. IrDA Pulse Width

Table 604. II DAT Falce Water					
FixPulseEn	PulseDiv	IrDA Transmitter Pulse width (µs)			
0	X	$3 / (16 \times baud rate)$			
1	0	2 × T _{PCLK}			
1	1	$4 \times T_{PCLK}$			
1	2	$8 \times T_{PCLK}$			
1	3	16 × T _{PCLK}			
1	4	32 × T _{PCLK}			
1	5	64 × T _{PCLK}			
1	6	128 × T _{PCLK}			
1	7	256 × T _{PCLK}			

16.4.12 UARTn Fractional Divider Register (U0FDR - 0xE000 C028, U2FDR - 0xE007 8028, U3FDR - 0xE007 C028)

The UART0/2/3 Fractional Divider Register (U0/2/3FDR) controls the clock pre-scaler for the baud rate generation and can be read and written at the user's discretion. This pre-scaler takes the APB clock and generates an output clock according to the specified fractional requirements.

Important: If the fractional divider is active (DIVADDVAL > 0) and DLM = 0, the value of the DLL register must be 3 or greater.

Chapter 16: LPC23XX UART0/2/3

Table 365. UARTn Fractional Divider Register (U0FDR - address 0xE000 C028, U2FDR - 0xE007 8028, U3FDR - 0xE007 C028) bit description

Bit	Function	Value	Description	Reset value
3:0	DIVADDVAL	0	Baud-rate generation pre-scaler divisor value. If this field is 0, fractional baud-rate generator will not impact the UARTn baudrate.	0
7:4	MULVAL	1	Baud-rate pre-scaler multiplier value. This field must be greater or equal 1 for UARTn to operate properly, regardless of whether the fractional baud-rate generator is used or not.	1
31:8	-	NA	Reserved, user software should not write ones to reserved bits. The value read from a reserved bit is not defined.	0

This register controls the clock pre-scaler for the baud rate generation. The reset value of the register keeps the fractional capabilities of UART0/2/3 disabled making sure that UART0/2/3 is fully software and hardware compatible with UARTs not equipped with this feature.

UART0/2/3 baudrate can be calculated as (n = 0/2/3):

(9)

$$UARTn_{baudrate} = \frac{PCLK}{16 \times (256 \times UnDLM + UnDLL) \times \left(1 + \frac{DivAddVal}{MulVal}\right)}$$

Where PCLK is the peripheral clock, U0/2/3DLM and U0/2/3DLL are the standard UART0/2/3 baud rate divider registers, and DIVADDVAL and MULVAL are UART0/2/3 fractional baudrate generator specific parameters.

The value of MULVAL and DIVADDVAL should comply to the following conditions:

- 1. $1 \le MULVAL \le 15$
- 2. $0 \le DIVADDVAL \le 14$
- 3. DIVADDVAL< MULVAL


The value of the U0/2/3FDR should not be modified while transmitting/receiving data or data may be lost or corrupted.

If the U0/2/3FDR register value does not comply to these two requests, then the fractional divider output is undefined. If DIVADDVAL is zero then the fractional divider is disabled, and the clock will not be divided.

16.4.12.1 Baudrate calculation

UART can operate with or without using the Fractional Divider. In real-life applications it is likely that the desired baudrate can be achieved using several different Fractional Divider settings. The following algorithm illustrates one way of finding a set of DLM, DLL, MULVAL, and DIVADDVAL values. Such set of parameters yields a baudrate with a relative error of less than 1.1% from the desired one.

Chapter 16: LPC23XX UART0/2/3

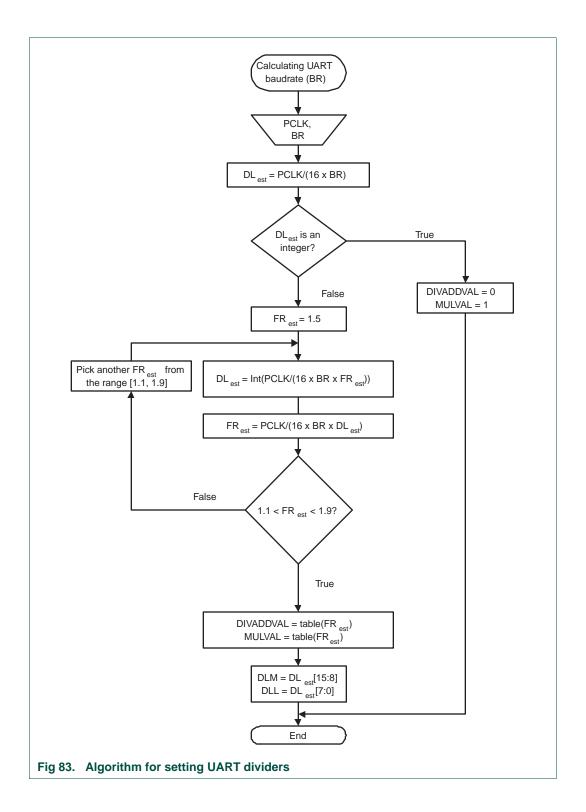

Chapter 16: LPC23XX UART0/2/3

FR	DivAddVal/ MulVal	FR	DivAddVal/ MulVal	FR	DivAddVal/ MulVal	FR	DivAddVal/ MulVal
1.000	0/1	1.250	1/4	1.500	1/2	1.750	3/4
1.067	1/15	1.267	4/15	1.533	8/15	1.769	10/13
1.071	1/14	1.273	3/11	1.538	7/13	1.778	7/9
1.077	1/13	1.286	2/7	1.545	6/11	1.786	11/14
1.083	1/12	1.300	3/10	1.556	5/9	1.800	4/5
1.091	1/11	1.308	4/13	1.571	4/7	1.818	9/11
1.100	1/10	1.333	1/3	1.583	7/12	1.833	5/6
1.111	1/9	1.357	5/14	1.600	3/5	1.846	11/13
1.125	1/8	1.364	4/11	1.615	8/13	1.857	6/7
1.133	2/15	1.375	3/8	1.625	5/8	1.867	13/15
1.143	1/7	1.385	5/13	1.636	7/11	1.875	7/8
1.154	2/13	1.400	2/5	1.643	9/14	1.889	8/9
1.167	1/6	1.417	5/12	1.667	2/3	1.900	9/10
1.182	2/11	1.429	3/7	1.692	9/13	1.909	10/11
1.200	1/5	1.444	4/9	1.700	7/10	1.917	11/12
1.214	3/14	1.455	5/11	1.714	5/7	1.923	12/13
1.222	2/9	1.462	6/13	1.727	8/11	1.929	13/14
1.231	3/13	1.467	7/15	1.733	11/15	1.933	14/15

Table 366. Fractional Divider setting look-up table

16.4.12.1.1 Example 1: PCLK = 14.7456 MHz, BR = 9600

According to the provided algorithm $DL_{est} = PCLK/(16 \text{ x BR}) = 14.7456 \text{ MHz} / (16 \text{ x 9600}) = 96$. Since this DL_{est} is an integer number, DIVADDVAL = 0, MULVAL = 1, DLM = 0, and DLL = 96.

16.4.12.1.2 Example 2: PCLK = 12 MHz, BR = 115200

According to the provided algorithm $DL_{est} = PCLK/(16 \text{ x BR}) = 12 \text{ MHz} / (16 \text{ x } 115200) = 6.51$. This DL_{est} is not an integer number and the next step is to estimate the FR parameter. Using an initial estimate of $FR_{est} = 1.5$ a new $DL_{est} = 4$ is calculated and FR_{est} is recalculated as $FR_{est} = 1.628$. Since $FR_{est} = 1.628$ is within the specified range of 1.1 and 1.9, DIVADDVAL and MULVAL values can be obtained from the attached look-up table.

The closest value for FRest = 1.628 in the look-up <u>Table 366</u> is FR = 1.625. It is equivalent to DIVADDVAL = 5 and MULVAL = 8.

Based on these findings, the suggested UART setup would be: DLM = 0, DLL = 4, DIVADDVAL = 5, and MULVAL = 8. According to Equation 9 UART's is 115384. This rate has a relative error of 0.16% from the originally specified 115200.

16.4.13 UARTn Transmit Enable Register (U0TER - 0xE000 C030, U2TER - 0xE007 8030, U3TER - 0xE007 C030)

LPC2300's UnTER enables implementation of software flow control. When TXEn=1, UARTn transmitter will keep sending data as long as they are available. As soon as TXEn becomes 0, UARTn transmission will stop.

Chapter 16: LPC23XX UART0/2/3

Table 367 describes how to use TXEn bit in order to achieve software flow control.

Table 367. UARTn Transmit Enable Register (U0TER - address 0xE000 C030, U2TER - 0xE007 8030, U3TER - 0xE007 C030) bit description

Bit	Symbol	Description	Reset Value
6:0	-	Reserved, user software should not write ones to reserved bits. The value read from a reserved bit is not defined.	NA
7	TXEN	When this bit is 1, as it is after a Reset, data written to the THR is output on the TXD pin as soon as any preceding data has been sent. If this bit is cleared to 0 while a character is being sent, the transmission of that character is completed, but no further characters are sent until this bit is set again. In other words, a 0 in this bit blocks the transfer of characters from the THR or TX FIFO into the transmit shift register. Software implementing software-handshaking can clear this bit when it receives an XOFF character (DC3). Software can set this bit again when it receives an XON (DC1) character.	1

16.5 Architecture

The architecture of the UARTs 0, 2 and 3 are shown below in the block diagram.

The APB interface provides a communications link between the CPU or host and the UART.

The UARTn receiver block, UnRX, monitors the serial input line, RXDn, for valid input. The UARTn RX Shift Register (UnRSR) accepts valid characters via RXDn. After a valid character is assembled in the UnRSR, it is passed to the UARTn RX Buffer Register FIFO to await access by the CPU or host via the generic host interface.


The UARTn transmitter block, UnTX, accepts data written by the CPU or host and buffers the data in the UARTn TX Holding Register FIFO (UnTHR). The UARTn TX Shift Register (UnTSR) reads the data stored in the UnTHR and assembles the data to transmit via the serial output pin, TXDn.

The UARTn Baud Rate Generator block, UnBRG, generates the timing enables used by the UARTn TX block. The UnBRG clock input source is the APB clock (PCLK). The main clock is divided down per the divisor specified in the UnDLL and UnDLM registers. This divided down clock is a 16x oversample clock, NBAUDOUT.

The interrupt interface contains registers UnIER and UnIIR. The interrupt interface receives several one clock wide enables from the UnTX and UnRX blocks.

Status information from the UnTX and UnRX is stored in the UnLSR. Control information for the UnTX and UnRX is stored in the UnLCR.

Chapter 16: LPC23XX UART0/2/3

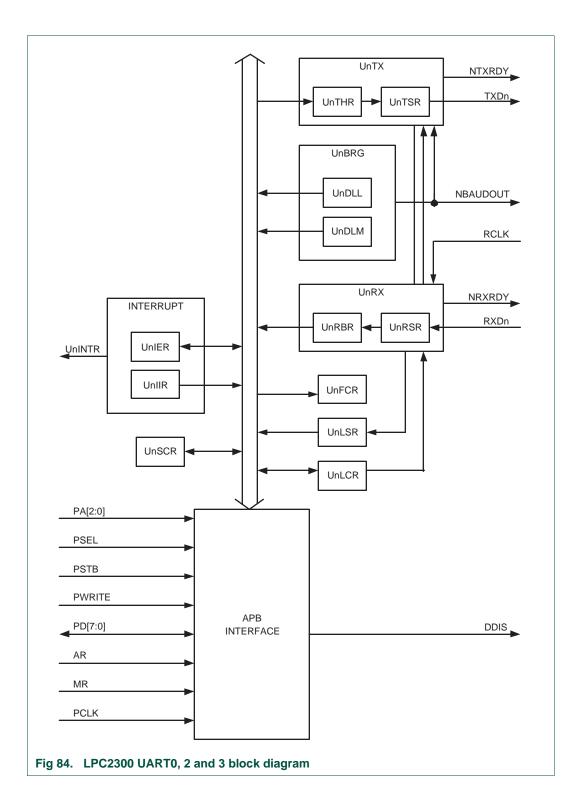

UM10211

Chapter 17: LPC23XX UART1

Rev. 4.1 — 5 September 2012

User manual

17.1 Basic configuration

The UART1 peripheral is configured using the following registers:

- Power: In the PCONP register (<u>Table 56</u>), set bits PCUART1.
 Remark: On reset, UART1 is enabled (PCUART1 = 1).
- 2. Peripheral clock: In the PCLK_SEL0 register (Table 49), select PCLK_UART1.
- Baud rate: In register U1LCR (<u>Table 378</u>), set bit DLAB =1. This enables access to registers DLL (<u>Table 372</u>) and DLM (<u>Table 373</u>) for setting the baud rate. Also, if needed, set the fractional baud rate in the fractional divider register (<u>Table 385</u>).
- 4. UART FIFO: Use bit FIFO enable (bit 0) in register U0FCR (<u>Table 377</u>) to enable FIFO.
- 5. Pins: Select UART pins and pin modes in registers PINSELn and PINMODEn (see Section 9.5).

Remark: UART receive pins should not have pull-down resistors enabled.

Interrupts: To enable UART interrupts set bit DLAB =0 in register U1LCR (<u>Table 379</u>).
 This enables access to U1IER (<u>Table 374</u>). Interrupts are enabled in the VIC using the VICIntEnable register (<u>Table 76</u>).

17.2 Features

- UART1 is identical to UART0/2/3, with the addition of a modem interface.
- 16 byte Receive and Transmit FIFOs.
- Register locations conform to '550 industry standard.
- Receiver FIFO trigger points at 1, 4, 8, and 14 bytes.
- Built-in baud rate generator.
- Standard modem interface signals included (CTS, DCD, DTS, DTR, RI, RTS).
- Either software or hardware flow control can be implemented.

Chapter 17: LPC23XX UART1

17.3 Pin description

Table 368. UART1 Pin Description

Pin	Type	Description
RXD1	Input	Serial Input. Serial receive data.
TXD1	Output	Serial Output. Serial transmit data.
CTS1	Input	Clear To Send. Active low signal indicates if the external modem is ready to accept transmitted data via TXD1 from the UART1. In normal operation of the modem interface (U1MCR[4] = 0), the complement value of this signal is stored in U1MSR[4]. State change information is stored in U1MSR[0] and is a source for a priority level 4 interrupt, if enabled (U1IER[3] = 1).
		Only CTS1 is also used in auto-cts mode to control the UART1 transmitter.
		Clear to send. CTS1 is an asynchronous, active low modem status signal. Its condition can be checked by reading bit 4 (CTS) of the modem status register. Bit 0 (DCTS) of the Modem Status Register (MSR) indicates that CTS1 has changed states since the last read from the MSR. If the modem status interrupt is enabled when CTS1 changes levels and the auto-cts mode is not enabled, an interrupt is generated. CTS1 is also used in the auto-cts mode to control the transmitter. (IP_3106)
DCD1	Input	Data Carrier Detect. Active low signal indicates if the external modem has established a communication link with the UART1 and data may be exchanged. In normal operation of the modem interface (U1MCR[4]=0), the complement value of this signal is stored in U1MSR[7]. State change information is stored in U1MSR3 and is a source for a priority level 4 interrupt, if enabled (U1IER[3] = 1).
DSR1	Input	Data Set Ready. Active low signal indicates if the external modem is ready to establish a communications link with the UART1. In normal operation of the modem interface (U1MCR[4] = 0), the complement value of this signal is stored in U1MSR[5]. State change information is stored in U1MSR[1] and is a source for a priority level 4 interrupt, if enabled (U1IER[3] = 1).
DTR1	Output	Data Terminal Ready. Active low signal indicates that the UART1 is ready to establish connection with external modem. The complement value of this signal is stored in U1MCR[0].
RI1	Input	Ring Indicator. Active low signal indicates that a telephone ringing signal has been detected by the modem. In normal operation of the modem interface (U1MCR[4] = 0), the complement value of this signal is stored in U1MSR[6]. State change information is stored in U1MSR[2] and is a source for a priority level 4 interrupt, if enabled (U1IER[3] = 1).
RTS1	Output	Request To Send. Active low signal indicates that the UART1 would like to transmit data to the external modem. The complement value of this signal is stored in U1MCR[1].
		Only in the auto-rts mode uses RTS1 to control the transmitter FIFO threshold logic.
		Request to send. RTS1 is an active low signal informing the modem or data set that the UART is ready to receive data. RTS1 is set to the active (low) level by setting the RTS modem control register bit and is set to the inactive (high) level either as a result of a system reset or during loop-back mode operations or by clearing bit 1 (RTS) of the MCR. In the auto-rts mode, RTS1 is controlled by the transmitter FIFO threshold logic.

Chapter 17: LPC23XX UART1

17.4 Register description

UART1 contains registers organized as shown in <u>Table 369</u>. The Divisor Latch Access Bit (DLAB) is contained in U1LCR[7] and enables access to the Divisor Latches.

	Table 369.	UART1	register	map
--	-------------------	-------	----------	-----

Name	Description	Bit functions and addresses							Access	Reset	Address		
		MSB							LSB		Value ^[1]		
	'	BIT7	BIT6	BIT5	BIT4	BIT3	BIT2	BIT1	BIT0				
U1RBR	Receiver Buffer Register				8 bit R	lead Data				RO	NA	0xE001 0000 (DLAB=0)	
U1THR	Transmit Holding Register		8 bit Write Data					WO	NA	0xE001 0000 (DLAB=0)			
U1DLL	Divisor Latch LSB				8 b	it Data				R/W	0x01	0xE001 0000 (DLAB=1)	
U1DLM	Divisor Latch MSB		8 bit Data						R/W	0x00	0xE001 0004 (DLAB=1)		
U1IER Interrupt Enable Register				Res	erved			Enable Autobaud Time-Out Interrupt	Enable End of Autobaud Interrupt	R/W 0x00		0xE001 0004 (DLAB=0)	
		Enable CTS Interrupt		0		Enable Modem Status interrupt	Enable RX Line Status Interrupt	Enable THRE Interrupt	Enable RX Data Available Interrupt				
U1IIR	Interrupt ID Register			Res	erved			ABTO Itn	ABEO int	RO	0x01	0xE001 0008	
		FIFOs E	Enabled		0	IIR3	IIR2	IIR1	IIR0				
U1FCR	FIFO Control Register	RX T	rigger		Reserved		TX FIFO Reset	RX FIFO Reset	FIFO Enable	WO	0x00	0xE001 0008	
U1LCR	Line Control Register	DLAB	Set Break	Stick Parity	Even Parity Select	Parity Enable	Number of Stop Bits		gth Select	R/W	0x00	0xE001 0000	
U1MCR	Modem Control Register	CTSen	RTSen	0	Loop Back		0	RTS	DTR	R/W	0x00	0xE001 0010	
U1LSR	Line Status Register	RX FIFO Error	TEMT	THRE	ВІ	FE	PE	OE	DR	RO	0x60	0xE001 0014	
U1MSR	Modem Status Register	DCD	RI	DSR	CTS	Delta DCD	Trailing Edge RI	Delta DSR	Delta CTS	RO	0x00	0xE001 0018	

Name	Description	Bit functions and	Bit functions and addresses						Address
		MSB				LSB		Value[1]	
U1SCR	Scratch Pad Register	8 bit Data				R/W	0x00	0xE001 001C	
U1ACR	Autobaud Control Register	Reserved [31:10]			ABTO IntClr	ABEO IntClr	R/W	0x00	0xE001 0020
			Reserved [7:3]	Auto Reset	Mode	Start			
U1FDR	Fractional Divider Register	Reserved [31:8]			R/W	0x10	0xE001 0028		
		N	lulval	DivA	ivAddVal				
U1TER	Transmit Enable Register	TXEN	TXEN Reserved				R/W	0x80	0xE001 0030

Reset Value reflects the data stored in used bits only. It does not include reserved bits content.

Chapter 17: LPC23XX UART1

17.4.1 UART1 Receiver Buffer Register (U1RBR - 0xE001 0000, when DLAB = 0 Read Only)

The U1RBR is the top byte of the UART1 RX FIFO. The top byte of the RX FIFO contains the oldest character received and can be read via the bus interface. The LSB (bit 0) represents the "oldest" received data bit. If the character received is less than 8 bits, the unused MSBs are padded with zeroes.

The Divisor Latch Access Bit (DLAB) in U1LCR must be zero in order to access the U1RBR. The U1RBR is always Read Only.

Since PE, FE and BI bits correspond to the byte sitting on the top of the RBR FIFO (i.e. the one that will be read in the next read from the RBR), the right approach for fetching the valid pair of received byte and its status bits is first to read the content of the U1LSR register, and then to read a byte from the U1RBR.

Table 370. UART1 Receiver Buffer Register (U1RBR - address 0xE001 0000 when DLAB = 0, Read Only) bit description

Bit	Symbol	Description	Reset Value
7:0	RBR	The UART1 Receiver Buffer Register contains the oldest received byte in the UART1 RX FIFO.	undefined

17.4.2 UART1 Transmitter Holding Register (U1THR - 0xE001 0000 when DLAB = 0, Write Only)

The U1THR is the top byte of the UART1 TX FIFO. The top byte is the newest character in the TX FIFO and can be written via the bus interface. The LSB represents the first bit to transmit.

The Divisor Latch Access Bit (DLAB) in U1LCR must be zero in order to access the U1THR. The U1THR is always Write Only.

Table 371. UART1 Transmitter Holding Register (U1THR - address 0xE001 0000 when DLAB = 0, Write Only) bit description

Bit	Symbol	Description	Reset Value
7:0	THR	Writing to the UART1 Transmit Holding Register causes the data to be stored in the UART1 transmit FIFO. The byte will be sent when it reaches the bottom of the FIFO and the transmitter is available.	NA

17.4.3 UART1 Divisor Latch LSB and MSB Registers (U1DLL - 0xE001 0000 and U1DLM - 0xE001 0004, when DLAB = 1)

The UART1 Divisor Latch is part of the UART1 Baud Rate Generator and holds the value used to divide the APB clock (PCLK) in order to produce the baud rate clock, which must be 16x the desired baud rate (Equation 10). The U1DLL and U1DLM registers together form a 16 bit divisor where U1DLL contains the lower 8 bits of the divisor and U1DLM contains the higher 8 bits of the divisor. A 0x0000 value is treated like a 0x0001 value as division by zero is not allowed. The Divisor Latch Access Bit (DLAB) in U1LCR must be one in order to access the UART1 Divisor Latches. Details on how to select the right value for U1DLL and U1DLM can be found in Section 17.4.17.

Chapter 17: LPC23XX UART1

(10)

$$UART1_{baudrate} = \frac{pclk}{16 \times (256 \times U1DLM + U1DLL)}$$

Table 372. UART1 Divisor Latch LSB Register (U1DLL - address 0xE001 0000 when DLAB = 1) bit description

Bit	Symbol	Description	Reset Value
7:0	DLLSB	The UART1 Divisor Latch LSB Register, along with the U1DLM register, determines the baud rate of the UART1.	0x01

Table 373. UART1 Divisor Latch MSB Register (U1DLM - address 0xE001 0004 when DLAB = 1) bit description

Bit	Symbol	Description	Reset Value
7:0	DLMSB	The UART1 Divisor Latch MSB Register, along with the U1DLL register, determines the baud rate of the UART1.	0x00

17.4.4 UART1 Interrupt Enable Register (U1IER - 0xE001 0004, when DLAB = 0)

The U1IER is used to enable the four UART1 interrupt sources.

Table 374. UART1 Interrupt Enable Register (U1IER - address 0xE001 0004 when DLAB = 0) bit description

Bit	Symbol	Value	Description	Reset Value
0	RBR Interrupt Enable		U1IER[0] enables the Receive Data Available interrupt for UART1. It also controls the Character Receive Time-out interrupt.	0
		0	Disable the RDA interrupts.	
		1	Enable the RDA interrupts.	
1	THRE Interrupt		U1IER[1] enables the THRE interrupt for UART1. The status of this interrupt can be read from U1LSR[5].	0
	Enable	0	Disable the THRE interrupts.	
		1	Enable the THRE interrupts.	
2	RX Line Interrupt		U1IER[2] enables the UART1 RX line status interrupts. The status of this interrupt can be read from U1LSR[4:1].	0
	Enable	0	Disable the RX line status interrupts.	
		1	Enable the RX line status interrupts.	
3	Modem Status		U1IER[3] enables the modem interrupt. The status of this interrupt can be read from U1MSR[3:0].	0
	Interrupt Enable	0	Disable the modem interrupt.	
	LITABLE	1	Enable the modem interrupt.	
6:4	-		Reserved, user software should not write ones to reserved bits. The value read from a reserved bit is not defined.	NA

Chapter 17: LPC23XX UART1

Table 374. UART1 Interrupt Enable Register (U1IER - address 0xE001 0004 when DLAB = 0) bit description

Bit	Symbol	Value	Description	Reset Value
7	CTS Interrupt Enable		If auto-cts mode is enabled this bit enables/disables the modem status interrupt generation on a CTS1 signal transition. If auto-cts mode is disabled a CTS1 transition will generate an interrupt if Modem Status Interrupt Enable (U1IER[3]) is set.	0
			In normal operation a CTS1 signal transition will generate a Modem Status Interrupt unless the interrupt has been disabled by clearing the U1IER[3] bit in the U1IER register. In auto-cts mode a transition on the CTS1 bit will trigger an interrupt only if both the U1IER[3] and U1IER[7] bits are set.	
		0	Disable the CTS interrupt.	
		1	Enable the CTS interrupt.	
8	ABEOIntEn		enables the end of auto-baud interrupt.	0
		0	Disable End of Auto-baud Interrupt.	
		1	Enable End of Auto-baud Interrupt.	
9	ABTOIntEn		enables the auto-baud time-out interrupt.	0
		0	Disable Auto-baud Time-out Interrupt.	
		1	Enable Auto-baud Time-out Interrupt.	
31:10	-		Reserved, user software should not write ones to reserved bits. The value read from a reserved bit is not defined.	NA

17.4.5 UART1 Interrupt Identification Register (U1IIR - 0xE001 0008, Read Only)

The U1IIR provides a status code that denotes the priority and source of a pending interrupt. The interrupts are frozen during an U1IIR access. If an interrupt occurs during an U1IIR access, the interrupt is recorded for the next U1IIR access.

Table 375. UART1 Interrupt Identification Register (U1IIR - address 0xE001 0008, Read Only) bit description

Bit	Symbol	Value	Description	Reset Value
0	IntStatus		Interrupt status. Note that U1IIR[0] is active low. The pending interrupt can be determined by evaluating U1IIR[3:1].	1
		0	At least one interrupt is pending.	
		1	No interrupt is pending.	

Chapter 17: LPC23XX UART1

Table 375. UART1 Interrupt Identification Register (U1IIR - address 0xE001 0008, Read Only) bit description

Bit	Symbol	Value	Description	Reset Value
3:1	Intld		Interrupt identification. U1IER[3:1] identifies an interrupt corresponding to the UART1 Rx FIFO. All other combinations of U1IER[3:1] not listed above are reserved (100,101,111).	0
		011	1 - Receive Line Status (RLS).	
		010	2a - Receive Data Available (RDA).	
		110	2b - Character Time-out Indicator (CTI).	
		001	3 - THRE Interrupt.	
		000	4 - Modem Interrupt.	
5:4	-		Reserved, user software should not write ones to reserved bits. The value read from a reserved bit is not defined.	NA
7:6	FIFO Enable		These bits are equivalent to U1FCR[0].	0
8	ABEOInt		End of auto-baud interrupt. True if auto-baud has finished successfully and interrupt is enabled.	0
9	ABTOInt		Auto-baud time-out interrupt. True if auto-baud has timed out and interrupt is enabled.	0
31:10	-		Reserved, user software should not write ones to reserved bits. The value read from a reserved bit is not defined.	NA

Bit U1IIR[9:8] are set by the auto-baud function and signal a time-out or end of auto-baud condition. The auto-baud interrupt conditions are cleared by setting the corresponding Clear bits in the Auto-baud Control Register.

If the IntStatus bit is 1 no interrupt is pending and the IntId bits will be zero. If the IntStatus is 0, a non auto-baud interrupt is pending in which case the IntId bits identify the type of interrupt and handling as described in Table 376. Given the status of U1IIR[3:0], an interrupt handler routine can determine the cause of the interrupt and how to clear the active interrupt. The U1IIR must be read in order to clear the interrupt prior to exiting the Interrupt Service Routine.

The UART1 RLS interrupt (U1IIR[3:1] = 011) is the highest priority interrupt and is set whenever any one of four error conditions occur on the UART1RX input: overrun error (OE), parity error (PE), framing error (FE) and break interrupt (BI). The UART1 Rx error condition that set the interrupt can be observed via U1LSR[4:1]. The interrupt is cleared upon an U1LSR read.

The UART1 RDA interrupt (U1IIR[3:1] = 010) shares the second level priority with the CTI interrupt (U1IIR[3:1] = 110). The RDA is activated when the UART1 Rx FIFO reaches the trigger level defined in U1FCR7:6 and is reset when the UART1 Rx FIFO depth falls below the trigger level. When the RDA interrupt goes active, the CPU can read a block of data defined by the trigger level.

The CTI interrupt (U1IIR[3:1] = 110) is a second level interrupt and is set when the UART1 Rx FIFO contains at least one character and no UART1 Rx FIFO activity has occurred in 3.5 to 4.5 character times. Any UART1 Rx FIFO activity (read or write of UART1 RSR) will clear the interrupt. This interrupt is intended to flush the UART1 RBR after a message has been received that is not a multiple of the trigger level size. For example, if a peripheral

Chapter 17: LPC23XX UART1

wished to send a 105 character message and the trigger level was 10 characters, the CPU would receive 10 RDA interrupts resulting in the transfer of 100 characters and 1 to 5 CTI interrupts (depending on the service routine) resulting in the transfer of the remaining 5 characters.

Table 376. UART1 Interrupt Handling

U1IIR[3:0] value ^[1]	Priority	Interrupt Type	Interrupt Source	Interrupt Reset
0001	-	None	None	-
0110	Highest	RX Line Status / Error	OE ^[2] or PE ^[2] or BI ^[2]	U1LSR Read ^[2]
0100	Second	RX Data Available	Rx data available or trigger level reached in FIFO (U1FCR0=1)	U1RBR Read ^[3] or UART1 FIFO drops below trigger level
1100	Second	Character Time-out indication	Minimum of one character in the RX FIFO and no character input or removed during a time period depending on how many characters are in FIFO and what the trigger level is set at (3.5 to 4.5 character times).	U1RBR Read ^[3]
			The exact time will be:	
			[(word length) \times 7 - 2] \times 8 + [(trigger level - number of characters) \times 8 + 1] RCLKs	
0010	Third	THRE	THRE[2]	U1IIR Read ^[4] (if source of interrupt) or THR write
0000	Fourth	Modem Status	CTS or DSR or RI or DCD	MSR Read

 $^{[1] \}quad \text{Values "0000", "0011", "0101", "0111", "1000", "1001", "1010", "1011", "1101", "1110", "1111" are reserved. } \\$

The UART1 THRE interrupt (U1IIR[3:1] = 001) is a third level interrupt and is activated when the UART1 THR FIFO is empty provided certain initialization conditions have been met. These initialization conditions are intended to give the UART1 THR FIFO a chance to fill up with data to eliminate many THRE interrupts from occurring at system start-up. The initialization conditions implement a one character delay minus the stop bit whenever THRE = 1 and there have not been at least two characters in the U1THR at one time since the last THRE = 1 event. This delay is provided to give the CPU time to write data to U1THR without a THRE interrupt to decode and service. A THRE interrupt is set immediately if the UART1 THR FIFO has held two or more characters at one time and currently, the U1THR is empty. The THRE interrupt is reset when a U1THR write occurs or a read of the U1IIR occurs and the THRE is the highest interrupt (U1IIR[3:1] = 001).

^[2] For details see Section 17.4.11 "UART1 Line Status Register (U1LSR - 0xE001 0014, Read Only)"

^[3] For details see Section 17.4.1 "UART1 Receiver Buffer Register (U1RBR - 0xE001 0000, when DLAB = 0 Read Only)"

^[4] For details see Section 17.4.5 "UART1 Interrupt Identification Register (U1IIR - 0xE001 0008, Read Only)" and Section 17.4.2 "UART1 Transmitter Holding Register (U1THR - 0xE001 0000 when DLAB = 0, Write Only)"

Chapter 17: LPC23XX UART1

It is the lowest priority interrupt and is activated whenever there is any state change on modem inputs pins, DCD, DSR or CTS. In addition, a low to high transition on modem input RI will generate a modem interrupt. The source of the modem interrupt can be determined by examining U1MSR[3:0]. A U1MSR read will clear the modem interrupt.

17.4.6 UART1 FIFO Control Register (U1FCR - 0xE001 0008, Write Only)

The U1FCR controls the operation of the UART1 RX and TX FIFOs.

Table 377. UART1 FIFO Control Register (U1FCR - address 0xE001 0008, Write Only) bit description

Bit	Symbol	Value	Description	Reset Value		
0	FIFO	0	UART1 FIFOs are disabled. Must not be used in the application.	0		
	Enable 1	1	Active high enable for both UART1 Rx and TX FIFOs and U1FCR[7:1] access. This bit must be set for proper UART1 operation. Any transition on this bit will automatically clear the UART1 FIFOs.			
1	1 RX FIFO Reset		0	No impact on either of UART1 FIFOs.	0	
			1	Writing a logic 1 to U1FCR[1] will clear all bytes in UART1 Rx FIFO and reset the pointer logic. This bit is self-clearing.		
2	TX FIFO Reset			0	No impact on either of UART1 FIFOs.	0
		1	Writing a logic 1 to U1FCR[2] will clear all bytes in UART1 TX FIFO and reset the pointer logic. This bit is self-clearing.			
5:3	-		Reserved, user software should not write ones to reserved bits. The value read from a reserved bit is not defined.	NA		
7:6	RX Trigger			These two bits determine how many receiver UART1 FIFO characters must be written before an interrupt is activated.	0	
	Level	00	Trigger level 0 (1 character or 0x01).			
		01	Trigger level 1 (4 characters or 0x04).			
		10	Trigger level 2 (8 characters or 0x08).			
		11	Trigger level 3 (14 characters or 0x0E).			

17.4.7 UART1 Line Control Register (U1LCR - 0xE001 000C)

The U1LCR determines the format of the data character that is to be transmitted or received.

Table 378. UART1 Line Control Register (U1LCR - address 0xE001 000C) bit description

Bit	Symbol	Value	Description	Reset Value					
1:0	Word	00	5 bit character length.	0					
	Length Select	01	6 bit character length.						
	Select	10	7 bit character length.						
							11	8 bit character length.	
2	Stop Bit Select	0	1 stop bit.	0					
		1 2 stop bits (1.5 if U1LC	2 stop bits (1.5 if U1LCR[1:0]=00).						
3	Parity	0	Disable parity generation and checking.	0					
	Enable	1	Enable parity generation and checking.						

Chapter 17: LPC23XX UART1

Table 378. UART1 Line Control Register (U1LCR - address 0xE001 000C) bit description

Bit	Symbol	Value	Description	Reset Value	
5:4	Parity Select	00	Odd parity. Number of 1s in the transmitted character and the attached parity bit will be odd.	0	
		01	Even Parity. Number of 1s in the transmitted character and the attached parity bit will be even.		
		10	Forced "1" stick parity.		
		11	Forced "0" stick parity.		
6	Break Control	Break	0	Disable break transmission.	0
		1	Enable break transmission. Output pin UART1 TXD is forced to logic 0 when U1LCR[6] is active high.		
7	Divisor	0	Disable access to Divisor Latches.	0	
	Latch Access Bit (DLAB)	1	Enable access to Divisor Latches.	_	

17.4.8 UART1 Modem Control Register (U1MCR - 0xE001 0010)

The U1MCR enables the modem loopback mode and controls the modem output signals.

Table 379. UART1 Modem Control Register (U1MCR - address 0xE001 0010) bit description

Bit	Symbol	Value	Description	Reset value
0	DTR Control		Source for modem output pin, DTR. This bit reads as 0 when modem loopback mode is active.	0
1	RTS Control		Source for modem output pin RTS. This bit reads as 0 when modem loopback mode is active.	0
3-2	-	NA	Reserved, user software should not write ones to reserved bits. The value read from a reserved bit is not defined.	0
4	Loopback Mode Select		The modem loopback mode provides a mechanism to perform diagnostic loopback testing. Serial data from the transmitter is connected internally to serial input of the receiver. Input pin, RXD1, has no effect on loopback and output pin, TXD1 is held in marking state. The four modem inputs (CTS, DSR, RI and DCD) are disconnected externally. Externally, the modem outputs (RTS, DTR) are set inactive. Internally, the four modem outputs are connected to the four modem inputs. As a result of these connections, the upper four bits of the U1MSR will be driven by the lower four bits of the U1MCR rather than the four modem inputs in normal mode. This permits modem status interrupts to be generated in loopback mode by writing the lower four bits of U1MCR.	0
		0	Disable modem loopback mode.	
		1	Enable modem loopback mode.	
5	-	NA	Reserved, user software should not write ones to reserved bits. The value read from a reserved bit is not defined.	0

Chapter 17: LPC23XX UART1

Table 379. UART1 Modem Control Register (U1MCR - address 0xE001 0010) bit description

Bit	Symbol	Value	Description	Reset value
6	RTSen	0	Disable auto-rts flow control.	0
		1	Enable auto-rts flow control.	
7	CTSen	0	Disable auto-cts flow control.	0
		1	Enable auto-cts flow control.	

17.4.9 Auto-Flow control

If auto-RTS mode is enabled the UART1's receiver FIFO hardware controls the RTS1 output of the UART1. If the auto-cts mode is enabled the UART1's U1TSR hardware will only start transmitting if the CTS1 input signal is asserted.


17.4.9.1 Auto-RTS

The Auto-RTS function is enabled by setting the RTSen bit. Auto-RTS data flow control originates in the U1RBR module and is linked to the programmed receiver FIFO trigger level. If auto-RTS is enabled, the data-flow is controlled as follows:

When the receiver FIFO level reaches the programmed trigger level, RTS1 is deasserted (to a high value). The sending UART can send an additional byte after the trigger level is reached (assuming the sending UART has another byte to send) because it might not recognize the deassertion of RTS1 until after it has begun sending the additional byte. RTS1 is automatically reasserted (to a low value) once the receiver FIFO has reached the previous trigger level. The reassertion of RTS1 signals the sending UART to continue transmitting data.

If Auto-RTS mode is disabled, the RTS Control bit controls the RTS1 output of the UART1. If Auto-RTS mode is enabled, hardware controls the RTS1 output, and the actual value of RTS1 will be copied in the RTS Control bit of the UART1. As long as Auto-RTS is enabled, the value of the RTS Control bit is read-only for software.

Example: Suppose the UART1 operating in type 550 has trigger level in U1FCR set to 0x2 then if Auto-RTS is enabled the UART1 will deassert the RTS1 output as soon as the receive FIFO contains 8 bytes (Table 377 on page 443). The RTS1 output will be reasserted as soon as the receive FIFO hits the previous trigger level: 4 bytes.

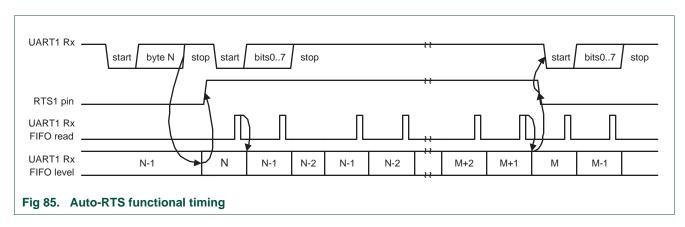

Chapter 17: LPC23XX UART1


17.4.10 Auto-CTS

The Auto-CTS function is enabled by setting the CTSen bit. If Auto-CTS is enabled, the transmitter circuitry in the U1TSR module checks CTS1 input before sending the next data byte. When CTS1 is active (low), the transmitter sends the next byte. To stop the transmitter from sending the following byte, CTS1 must be released before the middle of the last stop bit that is currently being sent. In Auto-CTS mode a change of the CTS1 signal does not trigger a modem status interrupt unless the CTS Interrupt Enable bit is set, Delta CTS bit in the U1MSR will be set though. Table 380 lists the conditions for generating a Modem Status interrupt.

Table 380. Modem status interrupt generation

Enable Modem Status Interrupt (U1ER[3]	CTSen (U1MCR[7])	CTS Interrupt Enable (U1IER[7])	Delta CTS (U1MSR[0])	Delta DCD or Trailing Edge RI or Delta DSR (U1MSR[3] or U1MSR[2] or U1MSR[1])	Modem Status Interrupt
0	х	х	х	Х	No
1	0	Х	0	0	No
1	0	Х	1	Х	Yes
1	0	Х	Х	1	Yes
1	1	0	X	0	No
1	1	0	Х	1	Yes
1	1	1	0	0	No
1	1	1	1	Х	Yes
1	1	1	Х	1	Yes

The auto-CTS function reduces interrupts to the host system. When flow control is enabled, a CTS1 state change does not trigger host interrupts because the device automatically controls its own transmitter. Without Auto-CTS, the transmitter sends any data present in the transmit FIFO and a receiver overrun error can result. Figure 86 illustrates the Auto-CTS functional timing.

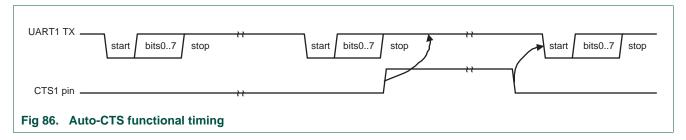

While starting transmission of the initial character the CTS1 signal is asserted. Transmission will stall as soon as the pending transmission has completed. The UART will continue transmitting a 1 bit as long as CTS1 is deasserted (high). As soon as CTS1 gets deasserted transmission resumes and a start bit is sent followed by the data bits of the next character.

17.4.11 UART1 Line Status Register (U1LSR - 0xE001 0014, Read Only)

The U1LSR is a read-only register that provides status information on the UART1 TX and RX blocks.

Table 381. UART1 Line Status Register (U1LSR - address 0xE001 0014, Read Only) bit description

	uesu	приоп		
Bit	Symbol	Value	Description	Reset Value
0	Receiver Data		U1LSR[0] is set when the U1RBR holds an unread character and is cleared when the UART1 RBR FIFO is empty.	0
	Ready (RDR)	0	U1RBR is empty.	
	(NDN)	1	U1RBR contains valid data.	
1	Overrun Error (OE)		The overrun error condition is set as soon as it occurs. An U1LSR read clears U1LSR[1]. U1LSR[1] is set when UART1 RSR has a new character assembled and the UART1 RBR FIFO is full. In this case, the UART1 RBR FIFO will not be overwritten and the character in the UART1 RSR will be lost.	0
		0	Overrun error status is inactive.	
		1	Overrun error status is active.	
2	Parity Error (PE)		When the parity bit of a received character is in the wrong state, a parity error occurs. An U1LSR read clears U1LSR[2]. Time of parity error detection is dependent on U1FCR[0].	0
			Note: A parity error is associated with the character at the top of the UART1 RBR FIFO.	
		0	Parity error status is inactive.	
		1	Parity error status is active.	
3	Framing Error (FE)		When the stop bit of a received character is a logic 0, a framing error occurs. An U1LSR read clears U1LSR[3]. The time of the framing error detection is dependent on U1FCR0. Upon detection of a framing error, the RX will attempt to resynchronize to the data and assume that the bad stop bit is actually an early start bit. However, it cannot be assumed that the next received byte will be correct even if there is no Framing Error.	0
			Note: A framing error is associated with the character at the top of the UART1 RBR FIFO.	
		0	Framing error status is inactive.	
		1	Framing error status is active.	
4	Break Interrupt (BI)		When RXD1 is held in the spacing state (all 0's) for one full character transmission (start, data, parity, stop), a break interrupt occurs. Once the break condition has been detected, the receiver goes idle until RXD1 goes to marking state (all 1's). An U1LSR read clears this status bit. The time of break detection is dependent on U1FCR[0].	0
			Note: The break interrupt is associated with the character at the top of the UART1 RBR FIFO.	
		0	Break interrupt status is inactive.	
		1	Break interrupt status is active.	

Table 381. UART1 Line Status Register (U1LSR - address 0xE001 0014, Read Only) bit description

Chapter 17: LPC23XX UART1

Dia	Cumbal	Value	Description	Doogt	
ыт	Symbol	value	Description	Reset Value	
5	r Holding THR and is cleared on a U		THRE is set immediately upon detection of an empty UART1 THR and is cleared on a U1THR write.	1	
	Register Empty	0	U1THR contains valid data.		
	(THRE)	1	U1THR is empty.		
6	Transmitte r Empty (TEMT)			TEMT is set when both U1THR and U1TSR are empty; TEMT is cleared when either the U1TSR or the U1THR contain valid data.	1
		0	U1THR and/or the U1TSR contains valid data.		
		1	U1THR and the U1TSR are empty.		
7	Error in RX FIFO (RXFE)		U1LSR[7] is set when a character with a RX error such as framing error, parity error or break interrupt, is loaded into the U1RBR. This bit is cleared when the U1LSR register is read and there are no subsequent errors in the UART1 FIFO.	0	
		0	U1RBR contains no UART1 RX errors or U1FCR[0]=0.		
		1	UART1 RBR contains at least one UART1 RX error.		

17.4.12 UART1 Modem Status Register (U1MSR - 0xE001 0018)

The U1MSR is a read-only register that provides status information on the modem input signals. U1MSR[3:0] is cleared on U1MSR read. Note that modem signals have no direct affect on UART1 operation, they facilitate software implementation of modem signal operations.

Table 382. UART1 Modem Status Register (U1MSR - address 0xE001 0018) bit description

Bit	Symbol	Value	Description	Reset Value
0	Delta		Set upon state change of input CTS. Cleared on an U1MSR rea	
	CTS	0	No change detected on modem input, CTS.	
		1	State change detected on modem input, CTS.	
1	Delta Set upon state change of input DSR. Cleared on		Set upon state change of input DSR. Cleared on an U1MSR read.	0
	DSR	0	No change detected on modem input, DSR.	
		1	State change detected on modem input, DSR.	
2	Trailing Edge RI		Set upon low to high transition of input RI. Cleared on an U1MSR read.	0
		0	No change detected on modem input, RI.	
		1	Low-to-high transition detected on RI.	
3	Delta		Set upon state change of input DCD. Cleared on an U1MSR read.	0
	DCD	0	No change detected on modem input, DCD.	
		1	State change detected on modem input, DCD.	
4	CTS		Clear To Send State. Complement of input signal CTS. This bit is connected to U1MCR[1] in modem loopback mode.	0

Chapter 17: LPC23XX UART1

Table 382. UART1 Modem Status Register (U1MSR - address 0xE001 0018) bit description

Bit	Symbol	Value	Description	Reset Value
5	DSR		Data Set Ready State. Complement of input signal DSR. This bit is connected to U1MCR[0] in modern loopback mode.	0
6	RI		Ring Indicator State. Complement of input RI. This bit is connected to U1MCR[2] in modem loopback mode.	0
7	DCD		Data Carrier Detect State. Complement of input DCD. This bit is connected to U1MCR[3] in modern loopback mode.	0

17.4.13 UART1 Scratch Pad Register (U1SCR - 0xE001 001C)

The U1SCR has no effect on the UART1 operation. This register can be written and/or read at user's discretion. There is no provision in the interrupt interface that would indicate to the host that a read or write of the U1SCR has occurred.

Table 383. UART1 Scratch Pad Register (U1SCR - address 0xE001 0014) bit description

Bit	Symbol	Description	Reset Value
7:0	Pad	A readable, writable byte.	0x00

17.4.14 UART1 Auto-baud Control Register (U1ACR - 0xE001 0020)

The UART1 Auto-baud Control Register (U1ACR) controls the process of measuring the incoming clock/data rate for the baud rate generation and can be read and written at user's discretion.

Table 384. Auto-baud Control Register (U1ACR - address 0xE001 0020) bit description

Bit	Symbol	Value	Description	Reset value
0	Start	Start This bit is automatically c completion.	This bit is automatically cleared after auto-baud completion.	0
		0	Auto-baud stop (auto-baud is not running).	
		1	Auto-baud start (auto-baud is running). Auto-baud run bit. This bit is automatically cleared after auto-baud completion.	
1	Mode		Auto-baud mode select bit.	0
		0	Mode 0.	
		1	Mode 1.	
2	AutoRestart	0	No restart	0
		1	Restart in case of time-out (counter restarts at next UART1 Rx falling edge)	0
7:3	-	NA	Reserved, user software should not write ones to reserved bits. The value read from a reserved bit is not defined.	0
8	ABEOIntClr		End of auto-baud interrupt clear bit (write only accessible).	0
		0	Writing a 0 has no impact.	
		1	Writing a 1 will clear the corresponding interrupt in the U1IIR.	

Chapter 17: LPC23XX UART1

Table 384. Auto-baud Control Register (U1ACR - address 0xE001 0020) bit description

Bit	Symbol	Value	Description	Reset value
9	ABTOIntClr		Auto-baud time-out interrupt clear bit (write only accessible).	0
		0	Writing a 0 has no impact.	
		1	Writing a 1 will clear the corresponding interrupt in the U1IIR.	
31:10	-	NA	Reserved, user software should not write ones to reserved bits. The value read from a reserved bit is not defined.	0

17.4.15 Auto-baud

The UART1 auto-baud function can be used to measure the incoming baud-rate based on the "AT" protocol (Hayes command). If enabled the auto-baud feature will measure the bit time of the receive data stream and set the divisor latch registers U1DLM and U1DLL accordingly.

Auto-baud is started by setting the U1ACR Start bit. Auto-baud can be stopped by clearing the U1ACR Start bit. The Start bit will clear once auto-baud has finished and reading the bit will return the status of auto-baud (pending/finished).

Two auto-baud measuring modes are available which can be selected by the U1ACR Mode bit. In mode 0 the baud-rate is measured on two subsequent falling edges of the UART1 Rx pin (the falling edge of the start bit and the falling edge of the least significant bit). In mode 1 the baud-rate is measured between the falling edge and the subsequent rising edge of the UART1 Rx pin (the length of the start bit).

The U1ACR AutoRestart bit can be used to automatically restart baud-rate measurement if a time-out occurs (the rate measurement counter overflows). If this bit is set the rate measurement will restart at the next falling edge of the UART1 Rx pin.

The auto-baud function can generate two interrupts.

- The U1IIR ABTOInt interrupt will get set if the interrupt is enabled (U1IER ABToIntEn is set and the auto-baud rate measurement counter overflows).
- The U1IIR ABEOInt interrupt will get set if the interrupt is enabled (U1IER ABEOIntEn is set and the auto-baud has completed successfully).

The auto-baud interrupts have to be cleared by setting the corresponding U1ACR ABTOIntClr and ABEOIntEn bits.

The fractional baud-rate generator is disabled (DIVADDVAL = 0) during auto-baud. When auto-baud is used, any write to U1DLM and U1DLL registers should be done before U1ACR register write. The minimum and the maximum baudrates supported by UART1 are function of pclk, number of data bits, stop bits and parity bits.

(11)

Chapter 17: LPC23XX UART1


$$ratemin = \frac{2 \times PCLK}{16 \times 2^{15}} \le UART1_{baudrate} \le \frac{PCLK}{16 \times (2 + databits + paritybits + stopbits)} = ratemax$$

17.4.16 Auto-baud modes

When the software is expecting an "AT" command, it configures the UART1 with the expected character format and sets the U1ACR Start bit. The initial values in the divisor latches U1DLM and U1DLM don't care. Because of the "A" or "a" ASCII coding ("A" = 0x41, "a" = 0x61), the UART1 Rx pin sensed start bit and the LSB of the expected character are delimited by two falling edges. When the U1ACR Start bit is set, the auto-baud protocol will execute the following phases:

- 1. On U1ACR Start bit setting, the baud-rate measurement counter is reset and the UART1 U1RSR is reset. The U1RSR baud rate is switch to the highest rate.
- 2. A falling edge on UART1 Rx pin triggers the beginning of the start bit. The rate measuring counter will start counting pclk cycles.
- 3. During the receipt of the start bit, 16 pulses are generated on the RSR baud input with the frequency of the UART1 input clock, guaranteeing the start bit is stored in the U1RSR.
- 4. During the receipt of the start bit (and the character LSB for mode = 0) the rate counter will continue incrementing with the pre-scaled UART1 input clock (pclk).
- 5. If Mode = 0 then the rate counter will stop on next falling edge of the UART1 Rx pin. If Mode = 1 then the rate counter will stop on the next rising edge of the UART1 Rx pin.
- 6. The rate counter is loaded into U1DLM/U1DLL and the baud-rate will be switched to normal operation. After setting the U1DLM/U1DLL the end of auto-baud interrupt U1IIR ABEOInt will be set, if enabled. The U1RSR will now continue receiving the remaining bits of the "A/a" character.

Chapter 17: LPC23XX UART1

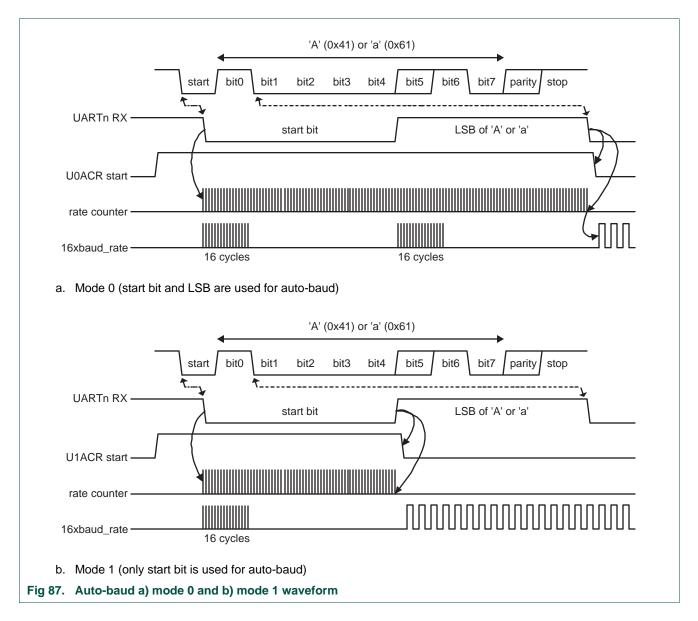

17.4.17 UART1 Fractional Divider Register (U1FDR - 0xE001 0028)

The UART1 Fractional Divider Register (U1FDR) controls the clock pre-scaler for the baud rate generation and can be read and written at the user's discretion. This pre-scaler takes the APB clock and generates an output clock according to the specified fractional requirements.

Important: If the fractional divider is active (DIVADDVAL > 0) and DLM = 0, the value of the DLL register must be 3 or greater.

Chapter 17: LPC23XX UART1

Table 385. UART1 Fractional Divider Register (U1FDR - address 0xE001 0028) bit description

Bit	Function	Value	Description	Reset value
3:0	DIVADDVAL	0	Baud-rate generation pre-scaler divisor value. If this field is 0, fractional baud-rate generator will not impact the UARTn baudrate.	0
7:4	MULVAL	1	Baud-rate pre-scaler multiplier value. This field must be greater or equal 1 for UARTn to operate properly, regardless of whether the fractional baud-rate generator is used or not.	1
31:8	-	NA	Reserved, user software should not write ones to reserved bits. The value read from a reserved bit is not defined.	0

This register controls the clock pre-scaler for the baud rate generation. The reset value of the register keeps the fractional capabilities of UART1 disabled making sure that UART1 is fully software and hardware compatible with UARTs not equipped with this feature.

UART1 baudrate can be calculated as (n = 1):

(12)

$$UARTI_{baudrate} = \frac{PCLK}{16 \times (256 \times U1DLM + U1DLL) \times \left(1 + \frac{DivAddVal}{MulVal}\right)}$$

Where PCLK is the peripheral clock, U1DLM and U1DLL are the standard UART1 baud rate divider registers, and DIVADDVAL and MULVAL are UART1 fractional baudrate generator specific parameters.

The value of MULVAL and DIVADDVAL should comply to the following conditions:

- 1. $1 \le MULVAL \le 15$
- 2. $0 \le DIVADDVAL \le 14$
- 3. DIVADDVAL< MULVAL


The value of the U1FDR should not be modified while transmitting/receiving data or data may be lost or corrupted.

If the U1FDR register value does not comply to these two requests, then the fractional divider output is undefined. If DIVADDVAL is zero then the fractional divider is disabled, and the clock will not be divided.

17.4.17.1 Baudrate calculation

UART can operate with or without using the Fractional Divider. In real-life applications it is likely that the desired baudrate can be achieved using several different Fractional Divider settings. The following algorithm illustrates one way of finding a set of DLM, DLL, MULVAL, and DIVADDVAL values. Such set of parameters yields a baudrate with a relative error of less than 1.1% from the desired one.

Chapter 17: LPC23XX UART1

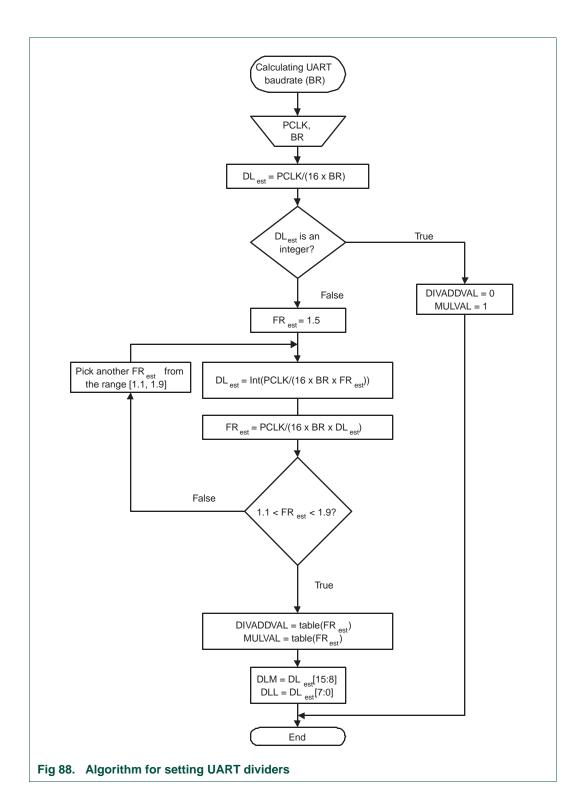

Chapter 17: LPC23XX UART1

FR	DivAddVal/ MulVal	FR	DivAddVal/ MulVal	FR	DivAddVal/ MulVal	FR	DivAddVal/ MulVal
1.000	0/1	1.250	1/4	1.500	1/2	1.750	3/4
1.067	1/15	1.267	4/15	1.533	8/15	1.769	10/13
1.071	1/14	1.273	3/11	1.538	7/13	1.778	7/9
1.077	1/13	1.286	2/7	1.545	6/11	1.786	11/14
1.083	1/12	1.300	3/10	1.556	5/9	1.800	4/5
1.091	1/11	1.308	4/13	1.571	4/7	1.818	9/11
1.100	1/10	1.333	1/3	1.583	7/12	1.833	5/6
1.111	1/9	1.357	5/14	1.600	3/5	1.846	11/13
1.125	1/8	1.364	4/11	1.615	8/13	1.857	6/7
1.133	2/15	1.375	3/8	1.625	5/8	1.867	13/15
1.143	1/7	1.385	5/13	1.636	7/11	1.875	7/8
1.154	2/13	1.400	2/5	1.643	9/14	1.889	8/9
1.167	1/6	1.417	5/12	1.667	2/3	1.900	9/10
1.182	2/11	1.429	3/7	1.692	9/13	1.909	10/11
1.200	1/5	1.444	4/9	1.700	7/10	1.917	11/12
1.214	3/14	1.455	5/11	1.714	5/7	1.923	12/13
1.222	2/9	1.462	6/13	1.727	8/11	1.929	13/14
1.231	3/13	1.467	7/15	1.733	11/15	1.933	14/15

Table 386. Fractional Divider setting look-up table

17.4.17.1.1 Example 1: PCLK = 14.7456 MHz, BR = 9600

According to the provided algorithm $DL_{est} = PCLK/(16 \text{ x BR}) = 14.7456 \text{ MHz} / (16 \text{ x 9600}) = 96$. Since this DL_{est} is an integer number, DIVADDVAL = 0, MULVAL = 1, DLM = 0, and DLL = 96.

17.4.17.1.2 Example 2: PCLK = 12 MHz, BR = 115200

According to the provided algorithm $DL_{est} = PCLK/(16 \text{ x BR}) = 12 \text{ MHz} / (16 \text{ x } 115200) = 6.51$. This DL_{est} is not an integer number and the next step is to estimate the FR parameter. Using an initial estimate of $FR_{est} = 1.5$ a new $DL_{est} = 4$ is calculated and FR_{est} is recalculated as $FR_{est} = 1.628$. Since $FR_{est} = 1.628$ is within the specified range of 1.1 and 1.9, DIVADDVAL and MULVAL values can be obtained from the attached look-up table.

The closest value for FRest = 1.628 in the look-up <u>Table 386</u> is FR = 1.625. It is equivalent to DIVADDVAL = 5 and MULVAL = 8.

Based on these findings, the suggested UART setup would be: DLM = 0, DLL = 4, DIVADDVAL = 5, and MULVAL = 8. According to Equation 12 UART's is 115384. This rate has a relative error of 0.16% from the originally specified 115200.

17.4.18 UART1 Transmit Enable Register (U1TER - 0xE001 0030)

In addition to being equipped with full hardware flow control (auto-cts and auto-rts mechanisms described above), U1TER enables implementation of software flow control, too. When TxEn=1, UART1 transmitter will keep sending data as long as they are available. As soon as TxEn becomes 0, UART1 transmission will stop.

Chapter 17: LPC23XX UART1

Although <u>Table 387</u> describes how to use TxEn bit in order to achieve hardware flow control, it is strongly suggested to let UART1 hardware implemented auto flow control features take care of this, and limit the scope of TxEn to software flow control.

LPC2300's U1TER enables implementation of software and hardware flow control. When TXEn=1, UART1 transmitter will keep sending data as long as they are available. As soon as TXEn becomes 0, UART1 transmission will stop.

Table 387 describes how to use TXEn bit in order to achieve software flow control.

Table 387. UART1 Transmit Enable Register (U1TER - address 0xE001 0030) bit description

Bit	Symbol	Description	Reset Value
6:0	-	Reserved, user software should not write ones to reserved bits. The value read from a reserved bit is not defined.	NA
7	TXEN	When this bit is 1, as it is after a Reset, data written to the THR is output on the TXD pin as soon as any preceding data has been sent. If this bit cleared to 0 while a character is being sent, the transmission of that character is completed, but no further characters are sent until this bit is set again. In other words, a 0 in this bit blocks the transfer of characters from the THR or TX FIFO into the transmit shift register. Software can clear this bit when it detects that the a hardware-handshaking TX-permit signal (CTS) has gone false, or with software handshaking, when it receives an XOFF character (DC3). Software can set this bit again when it detects that the TX-permit signal has gone true, or when it receives an XON (DC1) character.	1

17.5 Architecture

The architecture of the UART1 is shown below in the block diagram.

The APB interface provides a communications link between the CPU or host and the UART1.

The UART1 receiver block, U1RX, monitors the serial input line, RXD1, for valid input. The UART1 RX Shift Register (U1RSR) accepts valid characters via RXD1. After a valid character is assembled in the U1RSR, it is passed to the UART1 RX Buffer Register FIFO to await access by the CPU or host via the generic host interface.


The UART1 transmitter block, U1TX, accepts data written by the CPU or host and buffers the data in the UART1 TX Holding Register FIFO (U1THR). The UART1 TX Shift Register (U1TSR) reads the data stored in the U1THR and assembles the data to transmit via the serial output pin, TXD1.

The UART1 Baud Rate Generator block, U1BRG, generates the timing enables used by the UART1 TX block. The U1BRG clock input source is the APB clock (PCLK). The main clock is divided down per the divisor specified in the U1DLL and U1DLM registers. This divided down clock is a 16x oversample clock, NBAUDOUT.

The modem interface contains registers U1MCR and U1MSR. This interface is responsible for handshaking between a modem peripheral and the UART1.

The interrupt interface contains registers U1IER and U1IIR. The interrupt interface receives several one clock wide enables from the U1TX and U1RX blocks.

Status information from the U1TX and U1RX is stored in the U1LSR. Control information for the U1TX and U1RX is stored in the U1LCR.

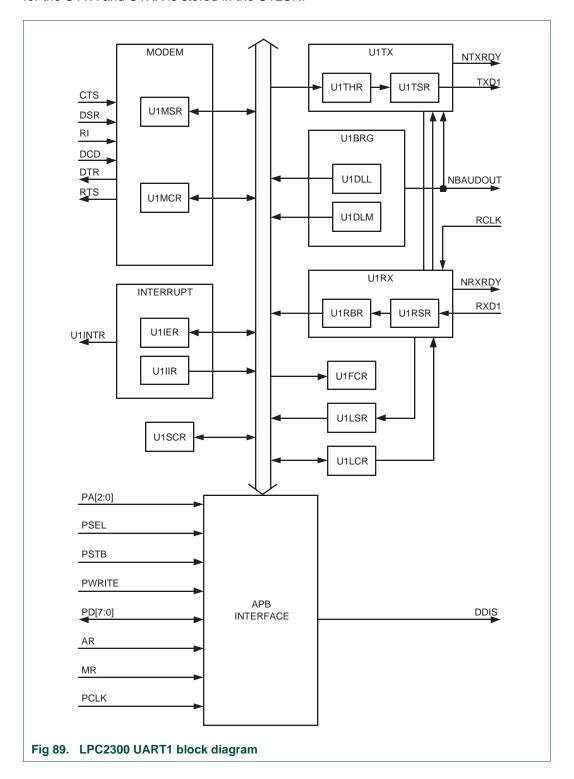

UM10211

Chapter 18: LPC23XX SPI Rev. 4.1 — 5 September 2012

User manual

18.1 Basic configuration

The SPI is configured using the following registers:

- 1. Power: In the PCONP register (Table 56), set bit PCSPI.
 - **Remark:** On reset, the SPI is enabled (PCSPI = 1).
- 2. Clock: In PCLK SEL0 select PCLK SPI (see Section 4.7.4). In master mode, the clock must be scaled down (see Section 18.7.4).
- 3. Pins: Select SPI pins and their modes in PINSEL0 to PINSEL4 and PINMODE0 to PINMODE4 (see Section 9.5).
- 4. Interrupts: Interrupts are enabled in the SOSPINT register Table 397. Interrupts are enabled in the VIC using the VICIntEnable register (Table 76).

Remark: In the VIC, the SPI shares its interrupts with the SSP0 interface.

18.2 Features

- Compliant with Serial Peripheral Interface (SPI) specification.
- Synchronous, Serial, Full Duplex Communication.
- SPI master or slave.
- Maximum data bit rate of one eighth of the input clock rate.
- 8 to 16 bits per transfer

18.3 Introduction


SPI is a full duplex serial interfaces. It can handle multiple masters and slaves being connected to a given bus. Only a single master and a single slave can communicate on the interface during a given data transfer. During a data transfer the master always sends 8 to 16 bits of data to the slave, and the slave always sends a byte of data to the master.

18.4 SPI data transfers

Figure 90 is a timing diagram that illustrates the four different data transfer formats that are available with the SPI. This timing diagram illustrates a single 8 bit data transfer. The first thing you should notice in this timing diagram is that it is divided into three horizontal parts. The first part describes the SCK and SSEL signals. The second part describes the MOSI and MISO signals when the CPHA variable is 0. The third part describes the MOSI and MISO signals when the CPHA variable is 1.

In the first part of the timing diagram, note two points. First, the SPI is illustrated with CPOL set to both 0 and 1. The second point to note is the activation and de-activation of the SSEL signal. When CPHA = 0, the SSEL signal will always go inactive between data transfers. This is not guaranteed when CPHA = 1 (the signal can remain active).

Chapter 18: LPC23XX SPI

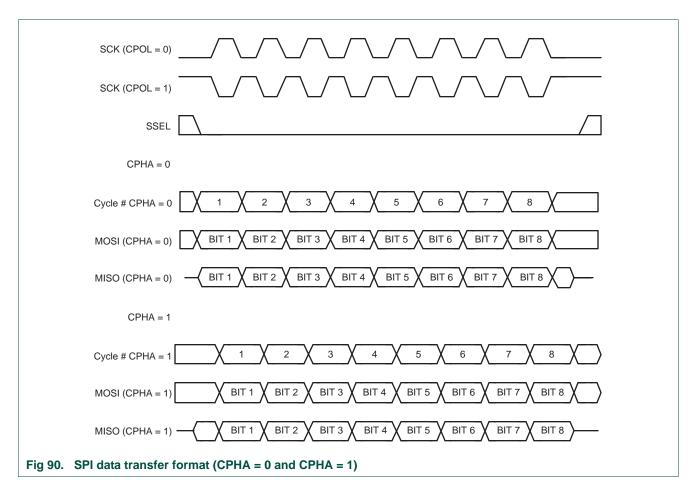

The data and clock phase relationships are summarized in <u>Table 388</u>. This table summarizes the following for each setting of CPOL and CPHA.

- When the first data bit is driven.
- When all other data bits are driven.
- When data is sampled.

Table 388. SPI Data To Clock Phase Relationship

CPOL and CPHA settings	First data driven	Other data driven	Data sampled
CPOL = 0, $CPHA = 0$	Prior to first SCK rising edge	SCK falling edge	SCK rising edge
CPOL = 0, CPHA = 1	First SCK rising edge	SCK rising edge	SCK falling edge
CPOL = 1, CPHA = 0	Prior to first SCK falling edge	SCK rising edge	SCK falling edge
CPOL = 1, CPHA = 1	First SCK falling edge	SCK falling edge	SCK rising edge

The definition of when an 8 bit transfer starts and stops is dependent on whether a device is a master or a slave, and the setting of the CPHA variable.

When a device is a master, the start of a transfer is indicated by the master having a byte of data that is ready to be transmitted. At this point, the master can activate the clock, and begin the transfer. The transfer ends when the last clock cycle of the transfer is complete.

Chapter 18: LPC23XX SPI

When a device is a slave and CPHA is set to 0, the transfer starts when the SSEL signal goes active, and ends when SSEL goes inactive. When a device is a slave, and CPHA is set to 1, the transfer starts on the first clock edge when the slave is selected, and ends on the last clock edge where data is sampled.

18.5 SPI peripheral details

18.5.1 General information

There are four registers that control the SPI peripheral. They are described in detail in Section 18.7 "Register description" on page 463.

The SPI control register contains a number of programmable bits used to control the function of the SPI block. The settings for this register must be set up prior to a given data transfer taking place.

The SPI status register contains read only bits that are used to monitor the status of the SPI interface, including normal functions, and exception conditions. The primary purpose of this register is to detect completion of a data transfer. This is indicated by the SPIF bit. The remaining bits in the register are exception condition indicators. These exceptions will be described later in this section.

The SPI data register is used to provide the transmit and receive data bytes. An internal shift register in the SPI block logic is used for the actual transmission and reception of the serial data. Data is written to the SPI data register for the transmit case. There is no buffer between the data register and the internal shift register. A write to the data register goes directly into the internal shift register. Therefore, data should only be written to this register when a transmit is not currently in progress. Read data is buffered. When a transfer is complete, the receive data is transferred to a single byte data buffer, where it is later read. A read of the SPI data register returns the value of the read data buffer.

The SPI clock counter register controls the clock rate when the SPI block is in master mode. This needs to be set prior to a transfer taking place, when the SPI block is a master. This register has no function when the SPI block is a slave.

The I/Os for this implementation of SPI are standard CMOS I/Os. The open drain SPI option is not implemented in this design. When a device is set up to be a slave, its I/Os are only active when it is selected by the SSEL signal being active.

18.5.2 Master operation

The following sequence describes how one should process a data transfer with the SPI block when it is set up to be the master. This process assumes that any prior data transfer has already completed.

- 1. Set the SPI clock counter register to the desired clock rate.
- 2. Set the SPI control register to the desired settings.
- Write the data to transmitted to the SPI data register. This write starts the SPI data transfer.
- 4. Wait for the SPIF bit in the SPI status register to be set to 1. The SPIF bit will be set after the last cycle of the SPI data transfer.

Chapter 18: LPC23XX SPI

- 5. Read the SPI status register.
- 6. Read the received data from the SPI data register (optional).
- 7. Go to step 3 if more data is required to transmit.

Note: A read or write of the SPI data register is required in order to clear the SPIF status bit. Therefore, if the optional read of the SPI data register does not take place, a write to this register is required in order to clear the SPIF status bit.

18.5.3 Slave operation

The following sequence describes how one should process a data transfer with the SPI block when it is set up to be a slave. This process assumes that any prior data transfer has already completed. It is required that the system clock driving the SPI logic be at least 8X faster than the SPI.

- 1. Set the SPI control register to the desired settings.
- 2. Write the data to transmitted to the SPI data register (optional). Note that this can only be done when a slave SPI transfer is not in progress.
- 3. Wait for the SPIF bit in the SPI status register to be set to 1. The SPIF bit will be set after the last sampling clock edge of the SPI data transfer.
- 4. Read the SPI status register.
- 5. Read the received data from the SPI data register (optional).
- 6. Go to step 2 if more data is required to transmit.

Note: A read or write of the SPI data register is required in order to clear the SPIF status bit. Therefore, at least one of the optional reads or writes of the SPI data register must take place, in order to clear the SPIF status bit.

18.5.4 Exception conditions

Read Overrun

A read overrun occurs when the SPI block internal read buffer contains data that has not been read by the processor, and a new transfer has completed. The read buffer containing valid data is indicated by the SPIF bit in the status register being active. When a transfer completes, the SPI block needs to move the received data to the read buffer. If the SPIF bit is active (the read buffer is full), the new receive data will be lost, and the read overrun (ROVR) bit in the status register will be activated.

Write Collision

As stated previously, there is no write buffer between the SPI block bus interface, and the internal shift register. As a result, data must not be written to the SPI data register when a SPI data transfer is currently in progress. The time frame where data cannot be written to the SPI data register is from when the transfer starts, until after the status register has been read when the SPIF status is active. If the SPI data register is written in this time frame, the write data will be lost, and the write collision (WCOL) bit in the status register will be activated.

Mode Fault

Chapter 18: LPC23XX SPI

If the SSEL signal goes active, when the SPI block is a master, this indicates another master has selected the device to be a slave. This condition is known as a mode fault. When a mode fault is detected, the mode fault (MODF) bit in the status register will be activated, the SPI signal drivers will be de-activated, and the SPI mode will be changed to be a slave.

If the Px.y/SSEL/... pin is assigned the SSEL function in Pin Function Select Register 0, the SSEL signal must always be inactive when the SPI controller is a master.

Slave Abort

A slave transfer is considered to be aborted, if the SSEL signal goes inactive before the transfer is complete. In the event of a slave abort, the transmit and receive data for the transfer that was in progress are lost, and the slave abort (ABRT) bit in the status register will be activated.

18.6 Pin description

Table 389. SPI Pin Description

Pin Name	Туре	Pin Description
SCK	Input/ Output	Serial Clock. The SPI is a clock signal used to synchronize the transfer of data across the SPI interface. The SPI is always driven by the master and received by the slave. The clock is programmable to be active high or active low. The SPI is only active during a data transfer. Any other time, it is either in its inactive state, or tri-stated.
SSEL	Input	Slave Select. The SPI slave select signal is an active low signal that indicates which slave is currently selected to participate in a data transfer. Each slave has its own unique slave select signal input. The SSEL must be low before data transactions begin and normally stays low for the duration of the transaction. If the SSEL signal goes high any time during a data transfer, the transfer is considered to be aborted. In this event, the slave returns to idle, and any data that was received is thrown away. There are no other indications of this exception. This signal is not directly driven by the master. It could be driven by a simple general purpose I/O under software control.
		On the LPC2300 (unlike earlier NXP ARM devices) the SSEL pin can be used for a different function when the SPI interface is only used in Master mode. For example, a pin hosting the SSEL function can be configured as an output digital GPIO pin and used to select one of the SPI slaves.
MISO	Input/ Output	Master In Slave Out. The MISO signal is a unidirectional signal used to transfer serial data from the slave to the master. When a device is a slave, serial data is output on this signal. When a device is a master, serial data is input on this signal. When a slave device is not selected, the slave drives the signal high impedance.
MOSI	Input/ Output	Master Out Slave In. The MOSI signal is a unidirectional signal used to transfer serial data from the master to the slave. When a device is a master, serial data is output on this signal. When a device is a slave, serial data is input on this signal.

Chapter 18: LPC23XX SPI

18.7 Register description

The SPI contains 5 registers as shown in <u>Table 390</u>. All registers are byte, half word and word accessible.

Table 390. SPI Register Map

Name	Description	Access	Reset Value[1]	Address
S0SPCR	SPI Control Register. This register controls the operation of the SPI.	R/W	0x00	0xE002 0000
S0SPSR	SPI Status Register. This register shows the status of the SPI.	RO	0x00	0xE002 0004
SOSPDR	SPI Data Register. This bi-directional register provides the transmit and receive data for the SPI. Transmit data is provided to the SPI0 by writing to this register. Data received by the SPI0 can be read from this register.	R/W	0x00	0xE002 0008
S0SPCCR	SPI Clock Counter Register. This register controls the frequency of a master's SCK0.	R/W	0x00	0xE002 000C
S0SPINT	SPI Interrupt Flag. This register contains the interrupt flag for the SPI interface.	R/W	0x00	0xE002 001C

^[1] Reset Value reflects the data stored in used bits only. It does not include reserved bits content.

18.7.1 SPI Control Register (S0SPCR - 0xE002 0000)

The S0SPCR register controls the operation of the SPI0 as per the configuration bits setting.

Table 391: SPI Control Register (S0SPCR - address 0xE002 0000) bit description

Bit	Symbol	Value	Description	Reset Value
1:0	-		Reserved, user software should not write ones to reserved bits. The value read from a reserved bit is not defined.	NA
2	BitEnable	0	The SPI controller sends and receives 8 bits of data per transfer.	0
		1	The SPI controller sends and receives the number of bits selected by bits 11:8.	
3	СРНА		Clock phase control determines the relationship between the data and the clock on SPI transfers, and controls when a slave transfer is defined as starting and ending.	0
		0	Data is sampled on the first clock edge of SCK. A transfer starts and ends with activation and deactivation of the SSEL signal.	
		1	Data is sampled on the second clock edge of the SCK. A transfer starts with the first clock edge, and ends with the last sampling edge when the SSEL signal is active.	
4	CPOL		Clock polarity control.	0
		0	SCK is active high.	
		1	SCK is active low.	

Table 391: SPI Control Register (S0SPCR - address 0xE002 0000) bit description

Bit	Symbol	Value	Description	Reset Value
5 MSTR	MSTR		Master mode select.	0
		0	The SPI operates in Slave mode.	
		1	The SPI operates in Master mode.	
6 LSBF	LSBF		LSB First controls which direction each byte is shifted when transferred.	0
		0	SPI data is transferred MSB (bit 7) first.	
		1	SPI data is transferred LSB (bit 0) first.	
7 SP	SPIE		Serial peripheral interrupt enable.	0
		0	SPI interrupts are inhibited.	
		1	A hardware interrupt is generated each time the SPIF or MODF bits are activated.	
11:8	BITS		When bit 2 of this register is 1, this field controls the number of bits per transfer:	0000
		1000	8 bits per transfer	
		1001	9 bits per transfer	
		1010	10 bits per transfer	
		1011	11 bits per transfer	
		1100	12 bits per transfer	
		1101	13 bits per transfer	
		1110	14 bits per transfer	
		1111	15 bits per transfer	
		0000	16 bits per transfer	
15:12	-		Reserved, user software should not write ones to reserved bits. The value read from a reserved bit is not defined.	NA

18.7.2 SPI Status Register (S0SPSR - 0xE002 0004)

The S0SPSR register controls the operation of the SPI0 as per the configuration bits setting.

Table 392: SPI Status Register (S0SPSR - address 0xE002 0004) bit description

Bit	Symbol	Description	Reset Value
2:0	-	Reserved, user software should not write ones to reserved bits. The value read from a reserved bit is not defined.	NA
3	ABRT	Slave abort. When 1, this bit indicates that a slave abort has occurred. This bit is cleared by reading this register.	0
4	MODF	Mode fault. when 1, this bit indicates that a Mode fault error has occurred. This bit is cleared by reading this register, then writing the SPI0 control register.	0

Chapter 18: LPC23XX SPI

Chapter 18: LPC23XX SPI

Table 392: SPI Status Register (S0SPSR - address 0xE002 0004) bit description

Bit	Symbol	Description	Reset Value
5	ROVR	Read overrun. When 1, this bit indicates that a read overrun has occurred. This bit is cleared by reading this register.	0
6	WCOL	Write collision. When 1, this bit indicates that a write collision has occurred. This bit is cleared by reading this register, then accessing the SPI data register.	0
7	SPIF	SPI transfer complete flag. When 1, this bit indicates when a SPI data transfer is complete. When a master, this bit is set at the end of the last cycle of the transfer. When a slave, this bit is set on the last data sampling edge of the SCK. This bit is cleared by first reading this register, then accessing the SPI data register.	0
		Note: this is not the SPI interrupt flag. This flag is found in the SPINT register.	

18.7.3 SPI Data Register (S0SPDR - 0xE002 0008)

This bi-directional data register provides the transmit and receive data for the SPI. Transmit data is provided to the SPI by writing to this register. Data received by the SPI can be read from this register. When a master, a write to this register will start a SPI data transfer. Writes to this register will be blocked from when a data transfer starts to when the SPIF status bit is set, and the status register has not been read.

Table 393: SPI Data Register (S0SPDR - address 0xE002 0008) bit description

Bit	Symbol	Description	Reset Value
7:0	DataLow	SPI Bi-directional data port.	0x00
15:8	DataHigh	If bit 2 of the SPCR is 1 and bits 11:8 are other than 1000, some or all of these bits contain the additional transmit and receive bits. When less than 16 bits are selected, the more significant among these bits read as zeroes.	0x00

18.7.4 SPI Clock Counter Register (S0SPCCR - 0xE002 000C)

This register controls the frequency of a master's SCK. The register indicates the number of SPI peripheral clock cycles that make up an SPI clock.

In Master mode, this register must be an even number greater than or equal to 8. Violations of this can result in unpredictable behavior. The SPI0 SCK rate may be calculated as: PCLK_SPI / SPCCR0 value. The SPI peripheral clock is determined by the PCLKSEL0 register contents for PCLK_SPI.

In Slave mode, the SPI clock rate provided by the master must not exceed 1/8 of the SPI peripheral clock selected in <u>Section 4.7.4</u>. The content of the S0SPCCR register is not relevant.

Table 394: SPI Clock Counter Register (S0SPCCR - address 0xE002 000C) bit description

Bit	Symbol	Description	Reset Value
7:0	Counter	SPI0 Clock counter setting.	0x00

Chapter 18: LPC23XX SPI

18.7.5 SPI Test Control Register (SPTCR - 0xE002 0010)

Note that the bits in this register are intended for functional verification only. This register should not be used for normal operation.

Table 395: SPI Test Control Register (SPTCR - address 0xE002 0010) bit description

Bit	Symbol	Description	Reset Value
0	-	Reserved, user software should not write ones to reserved bits. The value read from a reserved bit is not defined.	NA
7:1	Test	SPI test mode. When 0, the SPI operates normally. When 1, SCK will always be on, independent of master mode select, and data availability setting.	0

18.7.6 SPI Test Status Register (SPTSR - 0xE002 0014)

Note: The bits in this register are intended for functional verification only. This register should not be used for normal operation.

This register is a replication of the SPI status register. The difference between the registers is that a read of this register will not start the sequence of events required to clear these status bits. A write to this register will set an interrupt if the write data for the respective bit is a 1.

Table 396: SPI Test Status Register (SPTSR - address 0xE002 0014) bit description

		,	
Bit	Symbol	Description	Reset Value
2:0	-	Reserved, user software should not write ones to reserved bits. The value read from a reserved bit is not defined.	NA
3	ABRT	Slave abort.	0
4	MODF	Mode fault.	0
5	ROVR	Read overrun.	0
6	WCOL	Write collision.	0
7	SPIF	SPI transfer complete flag.	0

18.7.7 SPI Interrupt Register (S0SPINT - 0xE002 001C)

This register contains the interrupt flag for the SPI0 interface.


Table 397: SPI Interrupt Register (S0SPINT - address 0xE002 001C) bit description

Bit	Symbol	Description	Reset Value
0	SPI Interrupt Flag	SPI interrupt flag. Set by the SPI interface to generate an interrupt. Cleared by writing a 1 to this bit.	0
		Note: this bit will be set once when SPIE = 1 and at least one of SPIF and WCOL bits is 1. However, only when the SPI Interrupt bit is set and SPI0 Interrupt is enabled in the VIC, SPI based interrupt can be processed by interrupt handling software.	
7:1	-	Reserved, user software should not write ones to reserved bits. The value read from a reserved bit is not defined.	NA

Chapter 18: LPC23XX SPI

18.8 Architecture

The block diagram of the SPI solution implemented in SPI0 interface is shown in the Figure 91.

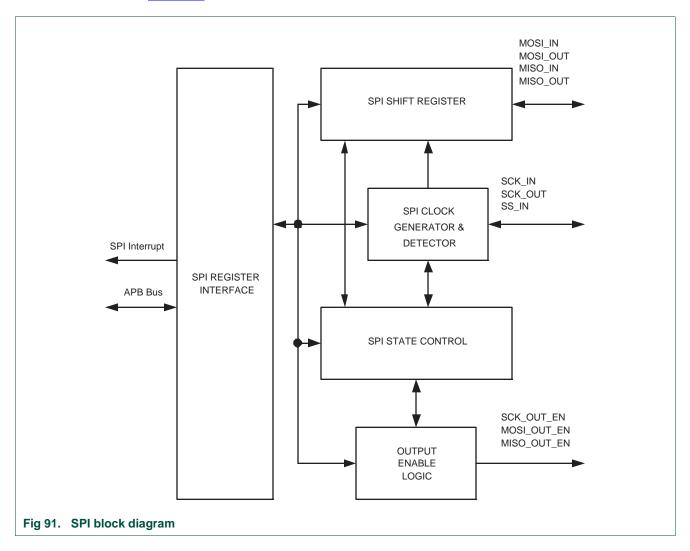

UM10211

Chapter 19: LPC23XX SSP0/1 interfaces

Rev. 4.1 — 5 September 2012

User manual

19.1 Basic configuration

The SSP0/1 interfaces are configured using the following registers:

- Power: In the PCONP register (<u>Table 56</u>), set bit PCSSP0/1.
 Remark: On reset, both SSP interfaces are enabled (PCSSP0/1 = 1).
- Clock: In PCLK_SEL0 select PCLK_SSP1; in PCLK_SEL1 select PCLK_SSP0 (see Section 4.7.4. In master mode, the clock must be scaled down (see Section 19.6.5).
- 3. Pins: Select SSP pins and their modes in PINSEL0 to PINSEL4 and PINMODE0 to PINMODE4 (see <u>Section 9.5</u>).
- Interrupts: Interrupts are enabled in the SSPnIMSC register <u>Section 19.6.6</u>. Interrupts
 are enabled in the VIC using the VICIntEnable register (<u>Table 76</u>).

Remark: In the VIC, the SSP0 shares its interrupts with the SPI interface.

5. Initialization: see Table 400 and Table 401.

19.2 Features

- Compatible with Motorola SPI, 4-wire TI SSI, and National Semiconductor Microwire buses.
- · Synchronous Serial Communication.
- Master or slave operation.
- 8 frame FIFOs for both transmit and receive.
- 4 to 16 bits frame.
- DMA transfers supported by GPDMA.

19.3 Description

The SSP is a Synchronous Serial Port (SSP) controller capable of operation on a SPI, 4-wire SSI, or Microwire bus. It can interact with multiple masters and slaves on the bus. Only a single master and a single slave can communicate on the bus during a given data transfer. Data transfers are in principle full duplex, with frames of 4 to 16 bits of data flowing from the master to the slave and from the slave to the master. In practice it is often the case that only one of these data flows carries meaningful data.

LPC2300 has two Synchronous Serial Port controllers -- SSP0 and SSP1.

Chapter 19: LPC23XX SSP0/1 interfaces

19.4 Pin descriptions

Table 398. SSP pin descriptions


Pin Name	Туре	Interfa name/	ce pin function		Pin Description
Name		SPI	SSI	Microwire	
SCK0/1	I/O	SCK	CLK	SK	Serial Clock. SCK/CLK/SK is a clock signal used to synchronize the transfer of data. It is driven by the master and received by the slave. When SPI interface is used the clock is programmable to be active high or active low, otherwise it is always active high. SCK1 only switches during a data transfer. Any other time, the SSPn either holds it in its inactive state, or does not drive it (leaves it in high impedance state).
SSEL0/1	I/O	SSEL	FS	CS	Frame Sync/Slave Select. When the SSPn is a bus master, it drives this signal from shortly before the start of serial data, to shortly after the end of serial data, to signify a data transfer as appropriate for the selected bus and mode. When the SSPn is a bus slave, this signal qualifies the presence of data from the Master, according to the protocol in use.
					When there is just one bus master and one bus slave, the Frame Sync or Slave Select signal from the Master can be connected directly to the slave's corresponding input. When there is more than one slave on the bus, further qualification of their Frame Select/Slave Select inputs will typically be necessary to prevent more than one slave from responding to a transfer.
MISO0/1	I/O	MISO	DR(M) DX(S)	SI(M) SO(S)	Master In Slave Out. The MISO signal transfers serial data from the slave to the master. When the SSPn is a slave, serial data is output on this signal. When the SSPn is a master, it clocks in serial data from this signal. When the SSPn is a slave and is not selected by FS/SSEL, it does not drive this signal (leaves it in high impedance state).
MOSI0/1	I/O	MOSI	DX(M) DR(S)	SO(M) SI(S)	Master Out Slave In. The MOSI signal transfers serial data from the master to the slave. When the SSPn is a master, it outputs serial data on this signal. When the SSPn is a slave, it clocks in serial data from this signal.

19.5 Bus description

19.5.1 Texas Instruments Synchronous Serial Frame Format

<u>Figure 92</u> shows the 4-wire Texas Instruments synchronous serial frame format supported by the SSP module.

Chapter 19: LPC23XX SSP0/1 interfaces

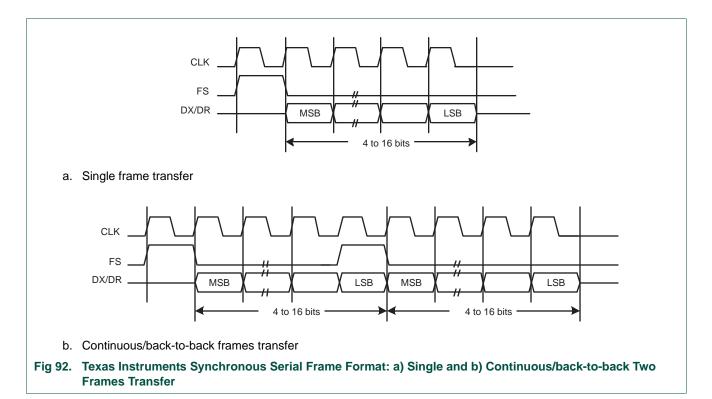

For device configured as a master in this mode, CLK and FS are forced LOW, and the transmit data line DX is tri-stated whenever the SSP is idle. Once the bottom entry of the transmit FIFO contains data, FS is pulsed HIGH for one CLK period. The value to be transmitted is also transferred from the transmit FIFO to the serial shift register of the transmit logic. On the next rising edge of CLK, the MSB of the 4 to 16 bit data frame is shifted out on the DX pin. Likewise, the MSB of the received data is shifted onto the DR pin by the off-chip serial slave device.

Both the SSP and the off-chip serial slave device then clock each data bit into their serial shifter on the falling edge of each CLK. The received data is transferred from the serial shifter to the receive FIFO on the first rising edge of CLK after the LSB has been latched.

19.5.2 SPI Frame Format

The SPI interface is a four-wire interface where the SSEL signal behaves as a slave select. The main feature of the SPI format is that the inactive state and phase of the SCK signal are programmable through the CPOL and CPHA bits within the SSPCR0 control register.

19.5.2.1 Clock Polarity (CPOL) and Phase (CPHA) Control


When the CPOL clock polarity control bit is LOW, it produces a steady state low value on the SCK pin. If the CPOL clock polarity control bit is HIGH, a steady state high value is placed on the CLK pin when data is not being transferred.

Chapter 19: LPC23XX SSP0/1 interfaces

The CPHA control bit selects the clock edge that captures data and allows it to change state. It has the most impact on the first bit transmitted by either allowing or not allowing a clock transition before the first data capture edge. When the CPHA phase control bit is LOW, data is captured on the first clock edge transition. If the CPHA clock phase control bit is HIGH, data is captured on the second clock edge transition.

19.5.2.2 SPI Format with CPOL=0,CPHA=0

Single and continuous transmission signal sequences for SPI format with CPOL = 0, CPHA = 0 are shown in Figure 93.

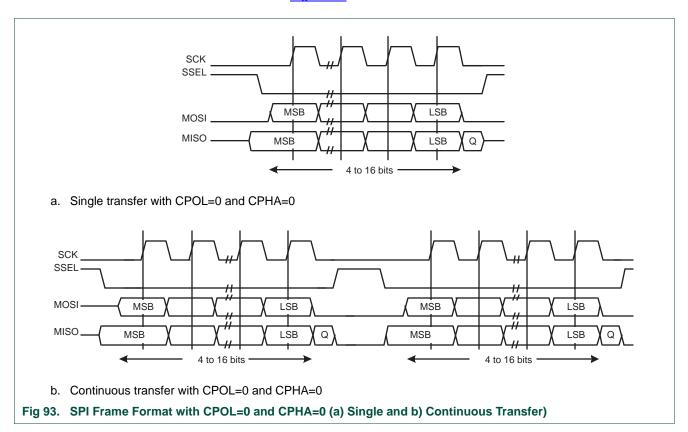

In this configuration, during idle periods:

- The CLK signal is forced LOW.
- SSEL is forced HIGH.
- The transmit MOSI/MISO pad is in high impedance.

If the SSP is enabled and there is valid data within the transmit FIFO, the start of transmission is signified by the SSEL master signal being driven LOW. This causes slave data to be enabled onto the MISO input line of the master. Master's MOSI is enabled.

One half SCK period later, valid master data is transferred to the MOSI pin. Now that both the master and slave data have been set, the SCK master clock pin goes HIGH after one further half SCK period.

The data is now captured on the rising and propagated on the falling edges of the SCK signal.


Chapter 19: LPC23XX SSP0/1 interfaces

In the case of a single word transmission, after all bits of the data word have been transferred, the SSEL line is returned to its idle HIGH state one SCK period after the last bit has been captured.

However, in the case of continuous back-to-back transmissions, the SSEL signal must be pulsed HIGH between each data word transfer. This is because the slave select pin freezes the data in its serial peripheral register and does not allow it to be altered if the CPHA bit is logic zero. Therefore the master device must raise the SSEL pin of the slave device between each data transfer to enable the serial peripheral data write. On completion of the continuous transfer, the SSEL pin is returned to its idle state one SCK period after the last bit has been captured.

19.5.2.3 SPI Format with CPOL=0,CPHA=1

The transfer signal sequence for SPI format with CPOL = 0, CPHA = 1 is shown in Figure 94, which covers both single and continuous transfers.

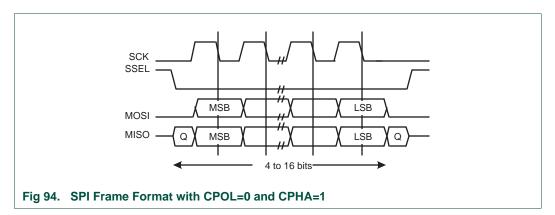

In this configuration, during idle periods:

- The CLK signal is forced LOW.
- SSEL is forced HIGH.
- The transmit MOSI/MISO pad is in high impedance.

If the SSP is enabled and there is valid data within the transmit FIFO, the start of transmission is signified by the SSEL master signal being driven LOW. Master's MOSI pin is enabled. After a further one half SCK period, both master and slave valid data is enabled onto their respective transmission lines. At the same time, the SCK is enabled with a rising edge transition.


Data is then captured on the falling edges and propagated on the rising edges of the SCK signal.

In the case of a single word transfer, after all bits have been transferred, the SSEL line is returned to its idle HIGH state one SCK period after the last bit has been captured.

For continuous back-to-back transfers, the SSEL pin is held LOW between successive data words and termination is the same as that of the single word transfer.

19.5.2.4 SPI Format with CPOL = 1,CPHA = 0

Single and continuous transmission signal sequences for SPI format with CPOL=1, CPHA=0 are shown in Figure 95.

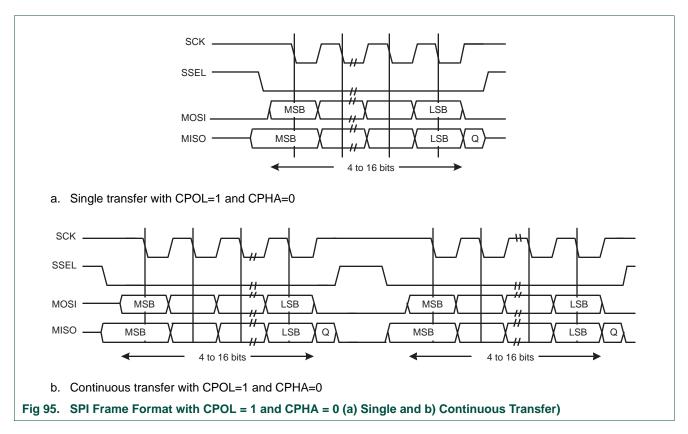

In this configuration, during idle periods:

- The CLK signal is forced HIGH.
- SSEL is forced HIGH.
- The transmit MOSI/MISO pad is in high impedance.

If the SSP is enabled and there is valid data within the transmit FIFO, the start of transmission is signified by the SSEL master signal being driven LOW, which causes slave data to be immediately transferred onto the MISO line of the master. Master's MOSI pin is enabled.

One half period later, valid master data is transferred to the MOSI line. Now that both the master and slave data have been set, the SCK master clock pin becomes LOW after one further half SCK period. This means that data is captured on the falling edges and be propagated on the rising edges of the SCK signal.


In the case of a single word transmission, after all bits of the data word are transferred, the SSEL line is returned to its idle HIGH state one SCK period after the last bit has been captured.

However, in the case of continuous back-to-back transmissions, the SSEL signal must be pulsed HIGH between each data word transfer. This is because the slave select pin freezes the data in its serial peripheral register and does not allow it to be altered if the CPHA bit is logic zero. Therefore the master device must raise the SSEL pin of the slave device between each data transfer to enable the serial peripheral data write. On completion of the continuous transfer, the SSEL pin is returned to its idle state one SCK period after the last bit has been captured.

Chapter 19: LPC23XX SSP0/1 interfaces

19.5.2.5 SPI Format with CPOL = 1,CPHA = 1

The transfer signal sequence for SPI format with CPOL = 1, CPHA = 1 is shown in Figure 96, which covers both single and continuous transfers.

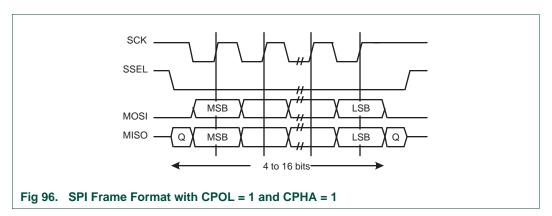

In this configuration, during idle periods:

- The CLK signal is forced HIGH.
- · SSEL is forced HIGH.
- The transmit MOSI/MISO pad is in high impedance.


If the SSP is enabled and there is valid data within the transmit FIFO, the start of transmission is signified by the SSEL master signal being driven LOW. Master's MOSI is enabled. After a further one half SCK period, both master and slave data are enabled onto their respective transmission lines. At the same time, the SCK is enabled with a falling edge transition. Data is then captured on the rising edges and propagated on the falling edges of the SCK signal.

After all bits have been transferred, in the case of a single word transmission, the SSEL line is returned to its idle HIGH state one SCK period after the last bit has been captured. For continuous back-to-back transmissions, the SSEL pins remains in its active LOW state, until the final bit of the last word has been captured, and then returns to its idle state as described above. In general, for continuous back-to-back transfers the SSEL pin is held LOW between successive data words and termination is the same as that of the single word transfer.

19.5.3 Semiconductor Microwire Frame Format

<u>Figure 97</u> shows the Microwire frame format for a single frame. <u>Figure 98</u> shows the same format when back-to-back frames are transmitted.

Chapter 19: LPC23XX SSP0/1 interfaces

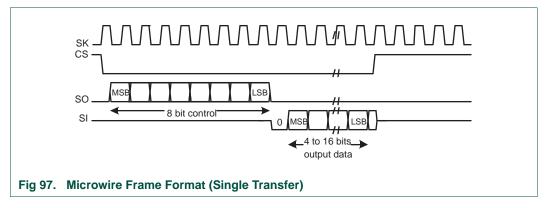

Microwire format is very similar to SPI format, except that transmission is half-duplex instead of full-duplex, using a master-slave message passing technique. Each serial transmission begins with an 8 bit control word that is transmitted from the SSP to the off-chip slave device. During this transmission, no incoming data is received by the SSP. After the message has been sent, the off-chip slave decodes it and, after waiting one serial clock after the last bit of the 8 bit control message has been sent, responds with the required data. The returned data is 4 to 16 bits in length, making the total frame length anywhere from 13 to 25 bits.

In this configuration, during idle periods:


- The SK signal is forced LOW.
- · CS is forced HIGH.
- The transmit data line SO is arbitrarily forced LOW.

A transmission is triggered by writing a control byte to the transmit FIFO. The falling edge of CS causes the value contained in the bottom entry of the transmit FIFO to be transferred to the serial shift register of the transmit logic, and the MSB of the 8 bit control frame to be shifted out onto the SO pin. CS remains LOW for the duration of the frame transmission. The SI pin remains tri-stated during this transmission.

The off-chip serial slave device latches each control bit into its serial shifter on the rising edge of each SK. After the last bit is latched by the slave device, the control byte is decoded during a one clock wait-state, and the slave responds by transmitting data back to the SSP. Each bit is driven onto SI line on the falling edge of SK. The SSP in turn latches each bit on the rising edge of SK. At the end of the frame, for single transfers, the CS signal is pulled HIGH one clock period after the last bit has been latched in the receive serial shifter, that causes the data to be transferred to the receive FIFO.

Note: The off-chip slave device can tri-state the receive line either on the falling edge of SK after the LSB has been latched by the receive shiftier, or when the CS pin goes HIGH.


For continuous transfers, data transmission begins and ends in the same manner as a single transfer. However, the CS line is continuously asserted (held LOW) and transmission of data occurs back to back. The control byte of the next frame follows directly after the LSB of the received data from the current frame. Each of the received values is transferred from the receive shifter on the falling edge SK, after the LSB of the frame has been latched into the SSP.

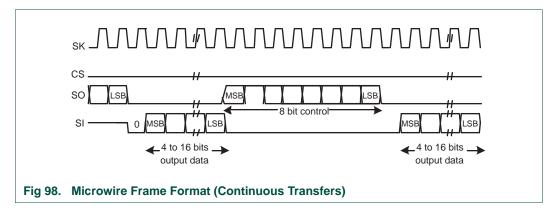

19.5.3.1 Setup and Hold Time Requirements on CS With Respect to SK in Microwire Mode

In the Microwire mode, the SSP slave samples the first bit of receive data on the rising edge of SK after CS has gone LOW. Masters that drive a free-running SK must ensure that the CS signal has sufficient setup and hold margins with respect to the rising edge of SK.

<u>Figure 99</u> illustrates these setup and hold time requirements. With respect to the SK rising edge on which the first bit of receive data is to be sampled by the SSP slave, CS must have a setup of at least two times the period of SK on which the SSP operates. With respect to the SK rising edge previous to this edge, CS must have a hold of at least one SK period.

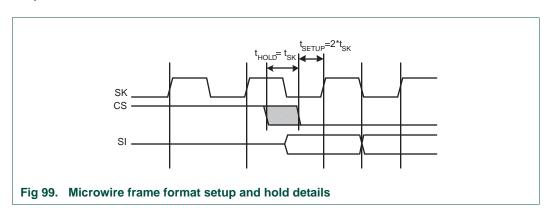

19.6 Register Description

The register offsets from the SSP controller base addresses are shown in the Table 399.

Table 399. SSP Register Map

Generic Name	Description	Access	Reset Value ^[1]	SSPn Register Name & Address
CR0	Control Register 0. Selects the serial clock rate, bus type, and data size.	R/W	0	SSP0CR0 - 0xE006 8000 SSP1CR0 - 0xE003 0000
CR1	Control Register 1. Selects master/slave and other modes.	R/W	0	SSP0CR1 - 0xE006 8004 SSP1CR1 - 0xE003 0004
DR	Data Register. Writes fill the transmit FIFO, and reads empty the receive FIFO.	R/W	0	SSP0DR - 0xE006 8008 SSP1DR - 0xE003 0008
UM10211	All information provided in this document is subject to	o legal disclaimers		© NXP B.V. 2012. All rights reserved.

Chapter 19: LPC23XX SSP0/1 interfaces

Table 399. SSP Register Map

Generic Name	Description	Access	Reset Value[1]	SSPn Register Name & Address
SR	Status Register	RO		SSP0SR - 0xE006 800C SSP1SR - 0xE003 000C
CPSR	Clock Prescale Register	R/W	0	SSP0CPSR - 0xE006 8010 SSP1CPSR - 0xE003 0010
IMSC	Interrupt Mask Set and Clear Register	R/W	0	SSP0IMSC - 0xE006 8014 SSP1IMSC - 0xE003 0014
RIS	Raw Interrupt Status Register	R/W		SSP0RIS - 0xE006 8018 SSP1RIS - 0xE003 0018
MIS	Masked Interrupt Status Register	R/W	0	SSP0MIS - 0xE006 801C SSP1MIS - 0xE003 001C
ICR	SSPICR Interrupt Clear Register	R/W	NA	SSP0ICR - 0xE006 8020 SSP1ICR - 0xE003 0020
DMACR	DMA Control Register	R/W	0	SSP0DMACR - 0xE006 8024 SSP1DMACR - 0xE003 0024

^[1] Reset Value reflects the data stored in used bits only. It does not include reserved bits content.

19.6.1 SSPn Control Register 0 (SSP0CR0 - 0xE006 8000, SSP1CR0 - 0xE003 0000)

This register controls the basic operation of the SSP controller.

Table 400: SSPn Control Register 0 (SSP0CR0 - address 0xE006 8000, SSP1CR0 - 0xE003 0000) bit description

Bit	Symbol	Value	Description	Reset Value
3:0	DSS		Data Size Select. This field controls the number of bits transferred in each frame. Values 0000-0010 are not supported and should not be used.	0000
		0011	4 bit transfer	
		0100	5 bit transfer	
		0101	6 bit transfer	
		0110	7 bit transfer	
		0111	8 bit transfer	
		1000	9 bit transfer	
		1001	10 bit transfer	
		1010	11 bit transfer	
		1011	12 bit transfer	
		1100	13 bit transfer	
		1101	14 bit transfer	
		1110	15 bit transfer	
		1111	16 bit transfer	

Chapter 19: LPC23XX SSP0/1 interfaces

Table 400: SSPn Control Register 0 (SSP0CR0 - address 0xE006 8000, SSP1CR0 - 0xE003 0000) bit description

Bit	Symbol	Value	Description	Reset Value		
5:4	FRF		Frame Format.	00		
		00	SPI			
		01	TI			
		10	Microwire			
		11	This combination is not supported and should not be used.			
6	CPOL	CPOL		Clock Out Polarity. This bit is only used in SPI mode.	0	
			0	SSP controller maintains the bus clock low between frames.		
		1	SSP controller maintains the bus clock high between frames.			
7	СРНА	СРНА	CPHA		Clock Out Phase. This bit is only used in SPI mode.	0
		0	SSP controller captures serial data on the first clock transition of the frame, that is, the transition away from the inter-frame state of the clock line.			
		1	SSP controller captures serial data on the second clock transition of the frame, that is, the transition back to the inter-frame state of the clock line.			
15:8	SCR		Serial Clock Rate. The number of prescaler-output clocks per bit on the bus, minus one. Given that CPSDVSR is the prescale divider, and the APB clock PCLK clocks the prescaler, the bit frequency is PCLK / (CPSDVSR \times [SCR+1]).	0x00		

19.6.2 SSPn Control Register 1 (SSP0CR1 - 0xE006 8004, SSP1CR1 - 0xE003 0004)

This register controls certain aspects of the operation of the SSP controller.

Table 401: SSPn Control Register 1 (SSP0CR1 - address 0xE006 8004, SSP1CR1 - 0xE003 0004) bit description

Bit	Symbol	Value	Description	Reset Value
0	LBM	Loop Back Mode.		0
		 During normal operation. 	During normal operation.	
		1	Serial input is taken from the serial output (MOSI or MISO) rather than the serial input pin (MISO or MOSI respectively).	
1	SSE		SSP Enable.	0
		0	The SSP controller is disabled.	
		1	The SSP controller will interact with other devices on the serial bus. Software should write the appropriate control information to the other SSP registers and interrupt controller registers, before setting this bit.	

Chapter 19: LPC23XX SSP0/1 interfaces

Table 401: SSPn Control Register 1 (SSP0CR1 - address 0xE006 8004, SSP1CR1 - 0xE003 0004) bit description

Bit	Symbol	Value	Description	Reset Value
2	MS		Master/Slave Mode.This bit can only be written when the SSE bit is 0.	0
		0	The SSP controller acts as a master on the bus, driving the SCLK, MOSI, and SSEL lines and receiving the MISO line.	
		1	The SSP controller acts as a slave on the bus, driving MISO line and receiving SCLK, MOSI, and SSEL lines.	
3	SOD		Slave Output Disable. This bit is relevant only in slave mode (MS = 1). If it is 1, this blocks this SSP controller from driving the transmit data line (MISO).	0
7:4	-		Reserved, user software should not write ones to reserved bits. The value read from a reserved bit is not defined.	NA

19.6.3 SSPn Data Register (SSP0DR - 0xE006 8008, SSP1DR - 0xE003 0008)

Software can write data to be transmitted to this register, and read data that has been received.

Table 402: SSPn Data Register (SSP0DR - address 0xE006 8008, SSP1DR - 0xE003 0008) bit description

Bit	Symbol	Description	Reset Value
15:0	DATA	Write: software can write data to be sent in a future frame to this register whenever the TNF bit in the Status register is 1, indicating that the Tx FIFO is not full. If the Tx FIFO was previously empty and the SSP controller is not busy on the bus, transmission of the data will begin immediately. Otherwise the data written to this register will be sent as soon as all previous data has been sent (and received). If the data length is less than 16 bits, software must right-justify the data written to this register.	0x0000
		Read: software can read data from this register whenever the RNE bit in the Status register is 1, indicating that the Rx FIFO is not empty. When software reads this register, the SSP controller returns data from the least recent frame in the Rx FIFO. If the data length is less than 16 bits, the data is right-justified in this field with higher order bits filled with 0s.	

19.6.4 SSPn Status Register (SSP0SR - 0xE006 800C, SSP1SR - 0xE003 000C)

This read-only register reflects the current status of the SSP controller.

Table 403: SSPn Status Register (SSP0SR - address 0xE006 800C, SSP1SR - 0xE003 000C) bit description

Bit	Symbol	Description	Reset Value
0	TFE	Transmit FIFO Empty. This bit is 1 is the Transmit FIFO is empty, 0 if not.	1
1	TNF	Transmit FIFO Not Full. This bit is 0 if the Tx FIFO is full, 1 if not.	1
2	RNE	Receive FIFO Not Empty. This bit is 0 if the Receive FIFO is empty, 1 if not.	0

Chapter 19: LPC23XX SSP0/1 interfaces

Table 403: SSPn Status Register (SSP0SR - address 0xE006 800C, SSP1SR - 0xE003 000C) bit description

Bit	Symbol	Description	Reset Value
3	RFF	Receive FIFO Full. This bit is 1 if the Receive FIFO is full, 0 if not.	0
4	BSY	Busy. This bit is 0 if the SSPn controller is idle, or 1 if it is currently sending/receiving a frame and/or the Tx FIFO is not empty.	0
7:5	-	Reserved, user software should not write ones to reserved bits. The value read from a reserved bit is not defined.	NA

19.6.5 SSPn Clock Prescale Register (SSP0CPSR - 0xE006 8010, SSP1CPSR - 0xE003 0010)

This register controls the factor by which the Prescaler divides the SSP peripheral clock SSP_PCLK to yield the prescaler clock that is, in turn, divided by the SCR factor in SSPnCR0, to determine the bit clock.

Table 404: SSPn Clock Prescale Register (SSP0CPSR - address 0xE006 8010, SSP1CPSR - 0xE003 8010) bit description

Bit	Symbol	Description	Reset Value
7:0	CPSDVSR	This even value between 2 and 254, by which SSP_PCLK is divided to yield the prescaler output clock. Bit 0 always reads as 0.	0

Important: the SSPnCPSR value must be properly initialized or the SSP controller will not be able to transmit data correctly.

In Slave mode, the SSP clock rate provided by the master must not exceed 1/12 of the SSP peripheral clock selected in <u>Section 4.7.4</u>. The content of the SSPnCPSR register is not relevant.

In master mode, CPSDVSR_{min} = 2 or larger (even numbers only).

19.6.6 SSPn Interrupt Mask Set/Clear Register (SSP0IMSC - 0xE006 8014, SSP1IMSC - 0xE003 0014)

This register controls whether each of the four possible interrupt conditions in the SSP controller are enabled. Note that ARM uses the word "masked" in the opposite sense from classic computer terminology, in which "masked" meant "disabled". ARM uses the word "masked" to mean "enabled". To avoid confusion we will not use the word "masked".

Chapter 19: LPC23XX SSP0/1 interfaces

Table 405: SSPn Interrupt Mask Set/Clear register (SSP0IMSC - address 0xE006 8014, SSP1IMSC - 0xE003 0014) bit description

Bit	Symbol	Description	Reset Value
0	RORIM	Software should set this bit to enable interrupt when a Receive Overrun occurs, that is, when the Rx FIFO is full and another frame is completely received. The ARM spec implies that the preceding frame data is overwritten by the new frame data when this occurs.	0
1	RTIM	Software should set this bit to enable interrupt when a Receive Timeout condition occurs. A Receive Timeout occurs when the Rx FIFO is not empty, and no has not been read for a "timeout period".	0
2	RXIM	Software should set this bit to enable interrupt when the Rx FIFO is at least half full.	0
3	TXIM	Software should set this bit to enable interrupt when the Tx FIFO is at least half empty.	0
7:4	-	Reserved, user software should not write ones to reserved bits. The value read from a reserved bit is not defined.	NA

19.6.7 SSPn Raw Interrupt Status Register (SSP0RIS - 0xE006 8018, SSP1RIS - 0xE003 0018)

This read-only register contains a 1 for each interrupt condition that is asserted, regardless of whether or not the interrupt is enabled in the SSPnIMSC.

Table 406: SSPn Raw Interrupt Status register (SSP0RIS - address 0xE006 8018, SSP1RIS - 0xE003 0018) bit description

Bit	Symbol	Description	Reset Value
0	RORRIS	This bit is 1 if another frame was completely received while the RxFIFO was full. The ARM spec implies that the preceding frame data is overwritten by the new frame data when this occurs.	0
1	RTRIS	This bit is 1 if the Rx FIFO is not empty, and has not been read for a "timeout period".	0
2	RXRIS	This bit is 1 if the Rx FIFO is at least half full.	0
3	TXRIS	This bit is 1 if the Tx FIFO is at least half empty.	1
7:4	-	Reserved, user software should not write ones to reserved bits. The value read from a reserved bit is not defined.	NA

19.6.8 SSPn Masked Interrupt Status Register (SSP0MIS - 0xE006 801C, SSP1MIS - 0xE003 001C)

This read-only register contains a 1 for each interrupt condition that is asserted and enabled in the SSPnIMSC. When an SSP interrupt occurs, the interrupt service routine should read this register to determine the cause(s) of the interrupt.

Chapter 19: LPC23XX SSP0/1 interfaces

Table 407: SSPn Masked Interrupt Status register (SSPnMIS -address 0xE006 801C, SSP1MIS - 0xE003 001C) bit description

Bit	Symbol	Description	Reset Value
0	RORMIS	This bit is 1 if another frame was completely received while the RxFIFO was full, and this interrupt is enabled.	0
1	RTMIS	This bit is 1 if the Rx FIFO is not empty, has not been read for a "timeout period", and this interrupt is enabled.	0
2	RXMIS	This bit is 1 if the Rx FIFO is at least half full, and this interrupt is enabled.	0
3	TXMIS	This bit is 1 if the Tx FIFO is at least half empty, and this interrupt is enabled.	0
7:4	-	Reserved, user software should not write ones to reserved bits. The value read from a reserved bit is not defined.	NA

19.6.9 SSPn Interrupt Clear Register (SSP0ICR - 0xE006 8020, SSP1ICR - 0xE003 0020)

Software can write one or more one(s) to this write-only register, to clear the corresponding interrupt condition(s) in the SSP controller. Note that the other two interrupt conditions can be cleared by writing or reading the appropriate FIFO, or disabled by clearing the corresponding bit in SSPnIMSC.

Table 408: SSPn interrupt Clear Register (SSP0ICR - address 0xE006 8020, SSP1ICR - 0xE003 0020) bit description

Bit	Symbol	Description	Reset Value
0	RORIC	Writing a 1 to this bit clears the "frame was received when RxFIFO was full" interrupt.	NA
1	RTIC	Writing a 1 to this bit clears the "Rx FIFO was not empty and has not been read for a timeout period" interrupt.	NA
7:2	-	Reserved, user software should not write ones to reserved bits. The value read from a reserved bit is not defined.	NA

19.6.10 SSPn DMA Control Register (SSP0DMACR - 0xE006 8024, SSP1DMACR - 0xE003 0024)

The SSPnDMACR register is the DMA control register. It is a read/write register. Table 409 shows the bit assignments of the SSPnDMACR register.

Table 409: SSPn DMA Control Register (SSP0DMACR - address 0xE006 8024, SSP1DMACR - 0xE003 0024) bit description

Bit	Symbol	Description	Reset Value
0	Receive DMA Enable (RXDMAE)	When this bit is set to one 1, DMA for the receive FIFO is enabled, otherwise receive DMA is disabled.	0
1	Transmit DMA Enable (TXDMAE)	When this bit is set to one 1, DMA for the transmit FIFO is enabled, otherwise transmit DMA is disabled	0
15:2	-	Reserved, user software should not write ones to reserved bits. The value read from a reserved bit is not defined.	NA

UM10211

Chapter 20: LPC23XX SD/MMC interface

Rev. 4.1 — 5 September 2012

User manual

20.1 How to read this chapter

This chapter describes the SD/MMC interface for the following LPC23XX parts:

- LPC2367/68
- LPC2377/78
- LPC2387
- LPC2388

LPC2361/61/64/65/66 do not include an SD/MMC interface.

20.2 Basic configuration

The SD/MMC is configured using the following registers:

- 1. Power: In the PCONP register (Table 56), set bit PCSDC.
 - **Remark:** On reset, the SD/MMC is disabled (PCMCI = 0).
- 2. Clock: In PCLK_SEL1 select PCLK_MCI (see Section 4.7.4).
- 3. Pins: Select SD/MMC pins and their modes in PINSEL0 to PINSEL4 and PINMODE0 to PINMODE4 (see Section 9.5).
- 4. Interrupts: Interrupts are enabled in the VIC using the VICIntEnable register (Table 76).

20.3 Introduction

The Secure Digital and Multimedia Card Interface (MCI) is an interface between the Advanced Peripheral Bus (APB) system bus and multimedia and/or secure digital memory cards. It consists of two parts:

- The MCI adapter block provides all functions specific to the Secure Digital/MultiMedia memory card, such as the clock generation unit, power management control, command and data transfer.
- The APB interface accesses the MCI adapter registers, and generates interrupt and DMA request signals.

20.4 Features

The following features are provided by the MCI:

- Conformance to Multimedia Card Specification v2.11.
- Conformance to Secure Digital Memory Card Physical Layer Specification, v0.96.
- Use as a multimedia card bus or a secure digital memory card bus host. It can be connected to several multimedia cards or a single secure digital memory card.
- DMA supported through the General Purpose DMA Controller.

UM10211

Chapter 20: LPC23XX SD/MMC interface

20.5 SD/MMC card interface pin description

Table 410. SD/MMC card interface pin description

Pin Name	Туре	Description
MCICLK	Output	Clock output
MCICMD	Input	Command input/output.
MCIDAT[3:0]	Output	Data lines. Only MCIDAT[0] is used for Multimedia cards.
MCIPWR	Output	Power Supply Enable for external SD/MMC power supply.


There is one additional signal needed in the interface, a power control line MCIPWR, but it can be sourced from any GPIO signal.

20.6 Functional overview

The MCI may be used as a multimedia card bus host (see <u>Section 20.6.1 "Mutimedia card"</u>) or a secure digital memory card bus host (see <u>Section 20.6.2 "Secure digital memory card"</u>). Up to 4 multimedia cards (limited by board loading) may be connected, or a single secure digital memory card.

20.6.1 Mutimedia card

Figure 100 shows the multimedia card system.

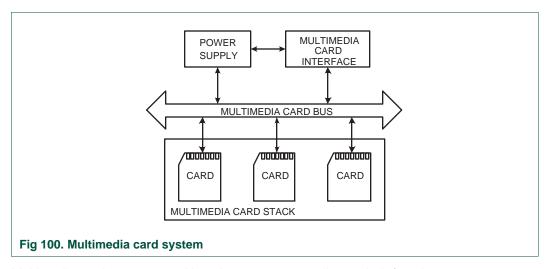

Multimedia cards are grouped into three types according to their function:

- Read Only Memory (ROM) cards, containing pre-programmed data
- Read/Write (R/W) cards, used for mass storage
- Input/Output (I/O) cards, used for communication

The multimedia card system transfers commands and data using three signal lines:


CLK: One bit is transferred on both command and data lines with each clock cycle.
 The clock frequency varies between 0 MHz and 20 MHz (for a multimedia card) or 0 MHz and 25 MHz (for a secure digital memory card).

Chapter 20: LPC23XX SD/MMC interface

- CMD: Bidirectional command channel that initializes a card and transfers commands.
 CMD has two operational modes:
 - Open-drain for initialization
 - Push-pull for command transfer
- DAT: Bidirectional data channel, operating in push-pull mode

20.6.2 Secure digital memory card

Figure 101 shows the secure digital memory card connection.

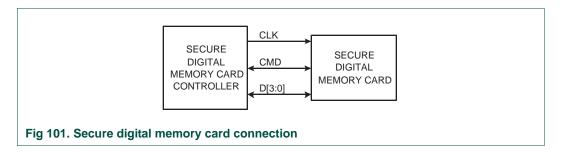


20.6.2.1 Secure digital memory card bus signals

The following signals are used on the secure digital memory card bus:

- CLK Host to card clock signal
- CMD Bidirectional command/response signal
- DAT[3:0] Bidirectional data signals

20.6.3 MCI adapter

Figure 102 shows a simplified block diagram of the MCI adapter.

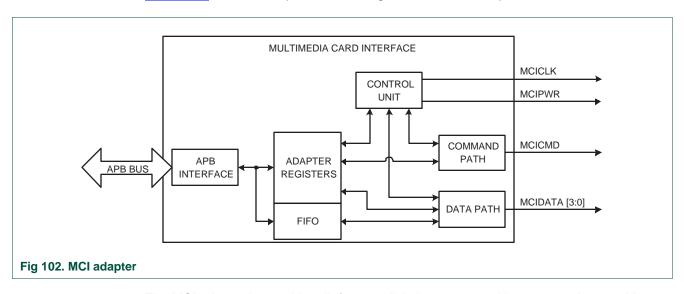

The MCI adapter is a multimedia/secure digital memory card bus master that provides an interface to a multimedia card stack or to a secure digital memory card. It consists of five subunits:

Chapter 20: LPC23XX SD/MMC interface

- Adapter register block
- Control unit
- Command path
- Data path
- Data FIFO

20.6.3.1 Adapter register block

The adapter register block contains all system registers. This block also generates the signals that clear the static flags in the multimedia card. The clear signals are generated when 1 is written into the corresponding bit location of the MCIClear register.

20.6.3.2 Control unit

The control unit contains the power management functions and the clock divider for the memory card clock.

There are three power phases:

- Power-off
- Power-up
- Power-on

The power management logic controls an external power supply unit, and disables the card bus output signals during the power-off or power-up phases. The power-up phase is a transition phase between the power-off and power-on phases, and allows an external power supply to reach the card bus operating voltage. A device driver is used to ensure that the PrimeCell MCI remains in the power-up phase until the external power supply reaches the operating voltage.

The clock management logic generates and controls the MCICLK signal. The MCICLK output can use either a clock divide or clock bypass mode. The clock output is inactive:

- · after reset
- during the power-off or power-up phases
- if the power saving mode is enabled and the card bus is in the IDLE state (eight clock periods after both the command and data path subunits enter the IDLE phase)


20.6.3.3 Command path

The command path subunit sends commands to and receives responses from the cards.

20.6.3.4 Command path state machine

When the command register is written to and the enable bit is set, command transfer starts. When the command has been sent, the Command Path State Machine (CPSM) sets the status flags and enters the IDLE state if a response is not required. If a response is required, it waits for the response (see Figure 103). When the response is received, the received CRC code and the internally generated code are compared, and the appropriate status flags are set.


Chapter 20: LPC23XX SD/MMC interface

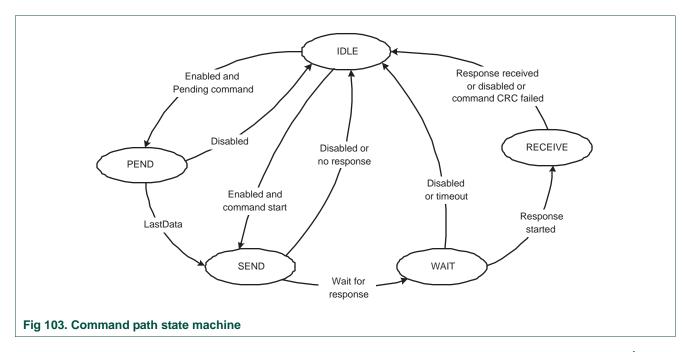

When the WAIT state is entered, the command timer starts running. If the time-out¹ is reached before the CPSM moves to the RECEIVE state, the time-out flag is set and the IDLE² state is entered.

If the interrupt bit is set in the command register, the timer is disabled and the CPSM waits for an interrupt request from one of the cards. If a pending bit is set in the command register, the CPSM enters the PEND state, and waits for a CmdPend signal from the data path subunit. When CmdPend is detected, the CPSM moves to the SEND state. This enables the data counter to trigger the stop command transmission.

Figure 104 shows the MCI command transfer.

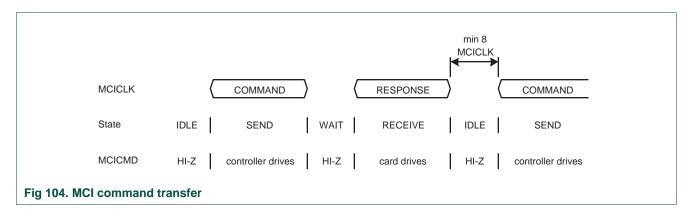

UM10211

The timeout period has a fixed value of 64 MCICLK clocks period.

^{2.} The CPSM remains in the IDLE state for at least eight MCICLK periods to meet Ncc and Nrc timing constraints.

Chapter 20: LPC23XX SD/MMC interface

20.6.3.5 Command format

The command path operates in a half-duplex mode, so that commands and responses can either be sent or received. If the CPSM is not in the SEND state, the MCICMD output is in HI-Z state, as shown in Figure 104. Data on MCICMD is synchronous to the rising MCICLK edge. All commands have a fixed length of 48 bits. Table 411 shows the command format.

Table 411. Command format

Bit Position	Width	Value	Description
0	1	1	End bit.
7:1	7	-	CRC7
39:8	32	-	Argument.
45:40	6	-	Command index.
46	1	1	Transmission bit.
47	1	0	Stat bit.

The MCI adapter supports two response types. Both use CRC error checking:

- 48 bit short response (see Table 412)
- 136 bit long response (see Table 413)

Note: If the response does not contain CRC (CMD1 response), the device driver must ignore the CRC failed status.

Table 412. Simple response format

Bit Position	Width	Value	Description
0	1	1	End bit.
7:1	7	-	CRC7 (or 1111111).
39:8	32	-	Argument.
45:40	6	-	Command index.
46	1	0	Transmission bit.
47	1	0	Start bit.

Table 413. Long response format

Bit Position	Width	Value	Description
0	1	1	End bit.
127:1	127	-	CID or CSD (including internal CRC7).
133:128	6	111111	Reserved.
134	1	1	Transmission bit.
135	1	0	Start bit.

The command register contains the command index (six bits sent to a card) and the command type. These determine whether the command requires a response, and whether the response is 48 or 136 bits long (see Section 20.7.5 "Command Register (MCICommand - 0xE008 C00C)" for more information). The command path implements the status flags shown in Table 414 (see Section 20.7.12 "Status Register (MCIStatus - 0xE008 C034)" for more information).

Chapter 20: LPC23XX SD/MMC interface

Table 414. Command path status flags

Flag	Description
CmdRespEnd	Set if response CRC is OK.
CmdCrcFail	Set if response CRC fails.
CmdSent	Set when command (that does not require response) is sent.
CmdTimeOut	Response timeout.
CmdActive	Command transfer in progress.

The CRC generator calculates the CRC checksum for all bits before the CRC code. This includes the start bit, transmitter bit, command index, and command argument (or card status). The CRC checksum is calculated for the first 120 bits of CID or CSD for the long response format. Note that the start bit, transmitter bit and the six reserved bits are not used in the CRC calculation.

The CRC checksum is a 7 bit value:

$$\begin{aligned} &\text{CRC[6:0]} = \text{Remainder} \left[\left(\mathsf{M}(\mathsf{x}) \times \mathsf{x}_7 \right) / \mathsf{G}(\mathsf{x}) \right] \\ &\text{G}(\mathsf{x}) = \mathsf{x}_7 + \mathsf{x}_3 + 1 \\ &\text{M}(\mathsf{x}) = (\text{start bit}) \times \mathsf{x}_{39} + ... + (\text{last bit before CRC}) \times \mathsf{x}_0 \text{ , or} \\ &\text{M}(\mathsf{x}) = (\text{start bit}) \times \mathsf{x}_{119} + ... + (\text{last bit before CRC}) \times \mathsf{x}_0 \end{aligned}$$

20.6.3.6 Data path

The card data bus width can be programmed using the clock control register. If the wide bus mode is enabled, data is transferred at four bits per clock cycle over all four data signals (MCIDAT[3:0]). If the wide bus mode is not enabled, only one bit per clock cycle is transferred over MCIDAT0.


Depending on the transfer direction (send or receive), the Data Path State Machine (DPSM) moves to the WAIT_S or WAIT_R state when it is enabled:

- Send: The DPSM moves to the WAIT_S state. If there is data in the send FIFO, the DPSM moves to the SEND state, and the data path subunit starts sending data to a card.
- Receive: The DPSM moves to the WAIT_R state and waits for a start bit. When it
 receives a start bit, the DPSM moves to the RECEIVE state, and the data path subunit
 starts receiving data from a card.

20.6.3.7 Data path state machine

The DPSM operates at MCICLK frequency. Data on the card bus signals is synchronous to the rising edge of MCICLK. The DPSM has six states, as shown in <u>Figure 105</u>.

Chapter 20: LPC23XX SD/MMC interface

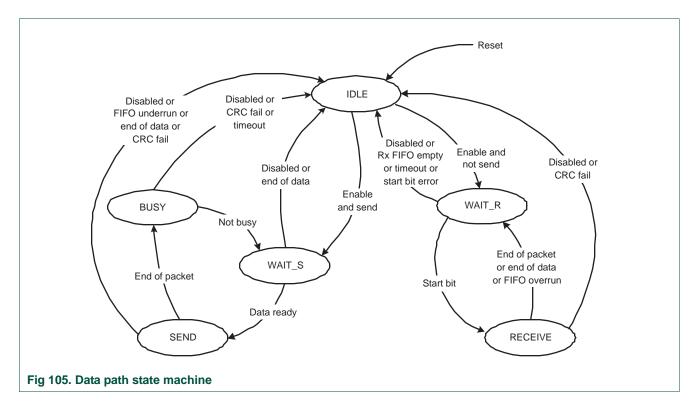

IDLE: The data path is inactive, and the MCIDAT[3:0] outputs are in HI-Z. When the
data control register is written and the enable bit is set, the DPSM loads the data
counter with a new value and, depending on the data direction bit, moves to either the
WAIT_S or WAIT_R state.

WAIT_R: If the data counter equals zero, the DPSM moves to the IDLE state when the receive FIFO is empty. If the data counter is not zero, the DPSM waits for a start bit on MCIDAT.

The DPSM moves to the RECEIVE state if it receives a start bit before a time-out, and loads the data block counter. If it reaches a time-out before it detects a start bit, or a start bit error occurs, it moves to the IDLE state and sets the time-out status flag.

- RECEIVE: Serial data received from a card is packed in bytes and written to the data FIFO. Depending on the transfer mode bit in the data control register, the data transfer mode can be either block or stream:
 - In block mode, when the data block counter reaches zero, the DPSM waits until it
 receives the CRC code. If the received code matches the internally generated
 CRC code, the DPSM moves to the WAIT_R state. If not, the CRC fail status flag is
 set and the DPSM moves to the IDLE state.
 - In stream mode, the DPSM receives data while the data counter is not zero. When
 the counter is zero, the remaining data in the shift register is written to the data
 FIFO, and the DPSM moves to the WAIT_R state.

If a FIFO overrun error occurs, the DPSM sets the FIFO error flag and moves to the WAIT_R state.

 WAIT_S: The DPSM moves to the IDLE state if the data counter is zero. If not, it waits until the data FIFO empty flag is deasserted, and moves to the SEND state.

Chapter 20: LPC23XX SD/MMC interface

Note: The DPSM remains in the WAIT_S state for at least two clock periods to meet Nwr timing constraints.

- SEND: The DPSM starts sending data to a card. Depending on the transfer mode bit in the data control register, the data transfer mode can be either block or stream:
 - In block mode, when the data block counter reaches zero, the DPSM sends an internally generated CRC code and end bit, and moves to the BUSY state.
 - In stream mode, the DPSM sends data to a card while the enable bit is HIGH and the data counter is not zero. It then moves to the IDLE state.

If a FIFO underrun error occurs, the DPSM sets the FIFO error flag and moves to the IDLE state.

- BUSY: The DPSM waits for the CRC status flag:
 - If it does not receive a positive CRC status, it moves to the IDLE state and sets the CRC fail status flag.
 - If it receives a positive CRC status, it moves to the WAIT_S state if MCIDAT0 is not LOW (the card is not busy).

If a time-out occurs while the DPSM is in the BUSY state, it sets the data time-out flag and moves to the IDLE state.

The data timer is enabled when the DPSM is in the WAIT_R or BUSY state, and generates the data time-out error:


- When transmitting data, the time-out occurs if the DPSM stays in the BUSY state for longer than the programmed time-out period
- When receiving data, the time-out occurs if the end of the data is not true, and if the DPSM stays in the WAIT R state for longer than the programmed time-out period.

20.6.3.8 Data counter

The data counter has two functions:

- To stop a data transfer when it reaches zero. This is the end of the data condition.
- To start transferring a pending command (see <u>Figure 106</u>). This is used to send the stop command for a stream data transfer.

Chapter 20: LPC23XX SD/MMC interface

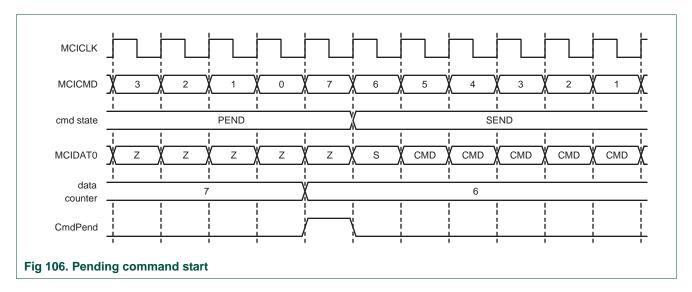

The data block counter determines the end of a data block. If the counter is zero, the end-of-data condition is TRUE (see <u>Section 20.7.10 "Data Control Register (MCIDataCtrl-0xE008 C02C)"</u> for more information).

20.6.3.9 Bus mode

In wide bus mode, all four data signals (MCIDAT[3:0]) are used to transfer data, and the CRC code is calculated separately for each data signal. While transmitting data blocks to a card, only MCIDAT0 is used for the CRC token and busy signalling. The start bit must be transmitted on all four data signals at the same time (during the same clock period). If the start bit is not detected on all data signals on the same clock edge while receiving data, the DPSM sets the start bit error flag and moves to the IDLE state.

The data path also operates in half-duplex mode, where data is either sent to a card or received from a card. While not being transferred, MCIDAT[3:0] are in the HI-Z state.

Data on these signals is synchronous to the rising edge of the clock period.

If standard bus mode is selected the MCIDAT[3:1] outputs are always in HI-Z state and only the MCIDAT0 output is driven LOW when data is transmitted.

Design note: If wide mode is selected, both nMCIDAT0EN and nMCIDATEN outputs are driven low at the same time. If not, the MCIDAT[3:1] outputs are always in HI-Z state (nMCIDATEN) is driven HIGH), and only the MCIDAT0 output is driven LOW when data is transmitted.

20.6.3.10 CRC Token status

The CRC token status follows each write data block, and determines whether a card has received the data block correctly. When the token has been received, the card asserts a busy signal by driving MCIDAT0 LOW. Table 415 shows the CRC token status values.

Table 415. CRC token status

Token	Description
010	Card has received error-free data block.
101	Card has detected a CRC error.

UM10211

Chapter 20: LPC23XX SD/MMC interface

20.6.3.11 Status flags

<u>Table 416</u> lists the data path status flags (see <u>Section 20.7.12 "Status Register (MCIStatus - 0xE008 C034)" on page 501 for more information).</u>

Table 416. Data path status flags

Flag	Description
TxFifoFull	Transmit FIFO is full.
TxFifoEmpty	Transmit FIFO is empty.
TxFifoHalfEmpty	Transmit FIFO is half full.
TxDataAvlbl	Transmit FIFO data available.
TxUnderrun	Transmit FIFO underrun error.
RxFifoFull	Receive FIFO is full.
RxFifoEmpty	Receive FIFO is empty.
RxFifoHalfFull	Receive FIFO is half full.
RxDataAvlbl	Receive FIFO data available.
RxOverrun	Receive FIFO overrun error.
DataBlockEnd	Data block sent/received.
StartBitErr	Start bit not detected on all data signals in wide bus mode.
DataCrcFail	Data packet CRC failed.
DataEnd	Data end (data counter is zero).
DataTimeOut	Data timeout.
TxActive	Data transmission in progress.
RxActive	Data reception in progress.

20.6.3.12 CRC generator

The CRC generator calculates the CRC checksum only for the data bits in a single block, and is bypassed in data stream mode. The checksum is a 16 bit value:

$$CRC[15:0] = Remainder [(M(x) \times x^{15}) / G(x)]$$

$$G(x) = x^{16} + x^{12} + x^5 + 1$$

M(x) - (first data bit) $\times x^n + ... +$ (last data bit) $Y \times X^0$

20.6.3.13 Data FIFO

The data FIFO (first-in-first-out) subunit is a data buffer with transmit and receive logic.

The FIFO contains a 32 bit wide, 16-word deep data buffer, and transmit and receive logic. Because the data FIFO operates in the APB clock domain (PCLK), all signals from the subunits in the MCI clock domain (MCLK) are resynchronized.

Depending on TxActive and RxActive, the FIFO can be disabled, transmit enabled, or receive enabled. TxActive and RxActive are driven by the data path subunit and are mutually exclusive:

 The transmit FIFO refers to the transmit logic and data buffer when TxActive is asserted (see <u>Section 20.6.3.14 "Transmit FIFO"</u>)

Chapter 20: LPC23XX SD/MMC interface

 The receive FIFO refers to the receive logic and data buffer when RxActive is asserted (see Section 20.6.3.15 "Receive FIFO").

20.6.3.14 Transmit FIFO

Data can be written to the transmit FIFO through the APB interface once the MCI is enabled for transmission.

The transmit FIFO is accessible via 16 sequential addresses (see Section 20.7.16 "Data FIFO Register (MCIFIFO - 0xE008 C080 to 0xE008 C0BC)"). The transmit FIFO contains a data output register that holds the data word pointed to by the read pointer. When the data path subunit has loaded its shift register, it increments the read pointer and drives new data out.

If the transmit FIFO is disabled, all status flags are deasserted. The data path subunit asserts TxActive when it transmits data. Table 417 lists the transmit FIFO status flags.

Table 417. Transmit FIFO status flags

Flag	Description
TxFifoFull	Set to HIGH when all 16 transmit FIFO words contain valid data.
TxFifoEmpty	Set to HIGH when the transmit FIFO does not contain valid data.
TxHalfEmpty	Set to HIGH when 8 or more transmit FIFO words are empty. This flag can be used as a DMA request.
TxDataAvlbl	Set to HIGH when the transmit FIFO contains valid data. This flag is the inverse of the TxFifoEmpty flag.
TxUnderrun	Set to HIGH when an underrun error occurs. This flag is cleared by writing to the MCIClear register.

20.6.3.15 Receive FIFO

When the data path subunit receives a word of data, it drives data on the write data bus and asserts the write enable signal. This signal is synchronized to the PCLK domain. The write pointer is incremented after the write is completed, and the receive FIFO control logic asserts RxWrDone, that then deasserts the write enable signal.

On the read side, the content of the FIFO word pointed to by the current value of the read pointer is driven on the read data bus. The read pointer is incremented when the APB bus interface asserts RxRdPrtInc.

If the receive FIFO is disabled, all status flags are deasserted, and the read and write pointers are reset. The data path subunit asserts RxActive when it receives data. Table 353 lists the receive FIFO status flags.

The receive FIFO is accessible via 16 sequential addresses (see Section 20.7.16 "Data FIFO Register (MCIFIFO - 0xE008 C080 to 0xE008 C0BC)").

If the receive FIFO is disabled, all status flags are deasserted, and the read and write pointers are reset. The data path subunit asserts RxActive when it receives data. Table 418 lists the receive FIFO status flags.

Chapter 20: LPC23XX SD/MMC interface

Table 418. Receive FIFO status flags

Symbol	Description
RxFifoFull	Set to HIGH when all 16 receive FIFO words contain valid data.
RxFifoEmpty	Set to HIGH when the receive FIFO does not contain valid data.
RxHalfFull	Set to HIGH when 8 or more receive FIFO words contain valid data. This flag can be used as a DMA request.
RxDataAvlbl	Set to HIGH when the receive FIFO is not empty. This flag is the inverse of the RxFifoEmpty flag.
RxOverrun	Set to HIGH when an overrun error occurs. This flag is cleared by writing to the MCIClear register.

20.6.3.16 APB interfaces

The APB interface generates the interrupt and DMA requests, and accesses the MCI adapter registers and the data FIFO. It consists of a data path, register decoder, and interrupt/DMA logic. DMA is controlled by the General Purpose DMA controller, see that chapter for details.

20.6.3.17 Interrupt logic

The interrupt logic generates an interrupt request signal that is asserted when at least one of the selected status flags is HIGH. A mask register is provided to allow selection of the conditions that will generate an interrupt. A status flag generates the interrupt request if a corresponding mask flag is set.

20.7 Register description

This section describes the MCI registers and provides programming details.

20.7.1 Summary of MCI Registers

The MCI registers are shown in Table 419.

Table 419. SPI register map

Name	Description	Access	Width	Reset Value[1]	Address
MCIPower	Power control register.	R/W	8	0x00	0xE008 C000
MCIClock	Clock control register.	R/W	12	0x000	0xE008 C004
MCIArgument	Argument register.	R/W	32	0x00000000	0xE008 C008
MMCCommand	Command register.	R/W	11	0x000	0xE008 C00C
MCIRespCmd	Response command register.	RO	6	0x00	0xE008 C010
MCIResponse0	Response register.	RO	32	0x00000000	0xE008 C014
MCIResponse1	Response register.	RO	32	0x00000000	0xE008 C018
MCIResponse2	Response register.	RO	32	0x00000000	0xE008 C01C
MCIResponse3	Response register.	RO	31	0x00000000	0xE008 C020
MCIDataTimer	Data Timer.	R/W	32	0x00000000	0xE008 C024
MCIDataLength	Data control register.	R/W	16	0x0000	0xE008 C028
MCIDataCtrl	Data control register.	R/W	8	0x00	0xE008 C02C
MCIDataCnt	Data counter.	RO	16	0x0000	0xE008 C030

Chapter 20: LPC23XX SD/MMC interface

Table 419. SPI register map

Name	Description	Access	Width	Reset Value[1]	Address
MCIStatus	Status register.	RO	22	0x000000	0xE008 C034
MCIClear	Clear register.	WO	11	•	0xE008 C038
MCIMask0	Interrupt 0 mask register.	R/W	22	0x000000	0xE008 C03C
MCIFifoCnt	FIFO Counter.	RO	15	0x0000	0xE008 C048
MCIFIFO	Data FIFO Register.	R/W	32	0x00000000	0xE008 C080 to 0xE008 C0BC

^[1] Reset Value reflects the data stored in used bits only. It does not include reserved bits content.

20.7.2 Power Control Register (MCI Power - 0xE008 C000)

The MCIPower register controls an external power supply. Power can be switched on and off, and adjust the output voltage. <u>Table 420</u> shows the bit assignment of the MCIPower register.

The active level of the MCIPWR (Power Supply Enable) pin can be selected by bit 3 of the SCS register (see Section 3.7.2 "System Controls and Status register (SCS - 0xE01F C1A0)" on page 42 for details).

Table 420: Power Control register (MCIPower - address 0xE008 C000) bit description

Bit	Symbol	Value	Description	Reset Value
1:0	Ctrl	00	Power-off	00
		01	Reserved	
		10	Power-up	
		11	Power-on	
5:2	-		Reserved, user software should not write ones to reserved bits. The value read from a reserved bit is not defined.	NA
6	OpenDrain		MCICMD output control.	0
7	Rod		Rod control.	0
31:8	-		Reserved, user software should not write ones to reserved bits. The value read from a reserved bit is not defined.	NA

When the external power supply is switched on, the software first enters the power-up phase, and waits until the supply output is stable before moving to the power-on phase. During the power-up phase, MCIPWR is set HIGH. The card bus outlets are disabled during both phases.

Note: After a data write, data cannot be written to this register for three MCLK clock periods plus two PCLK clock periods.

20.7.3 Clock Control Register (MCIClock - 0xE008 C004)

The MCIClock register controls the MCICLK output. <u>Table 421</u> shows the bit assignment of the clock control register.

Chapter 20: LPC23XX SD/MMC interface

Table 421: Clock Control register (MCIClock - address 0xE008 C004) bit description

Bit	Symbol	Value	Description	Reset Value	
7:0	ClkDiv		MCI bus clock period:	0x00	
			MCLCLK frequency = MCLK / $[2\times(ClkDiv+1)]$.		
8	Enable		Enable MCI bus clock:	0	
		0	Clock disabled.		
		1	Clock enabled.		
9 PwrSave	PwrSave		Disable MCI clock output when bus is idle:	0	
	0	Always enabled.			
		1	Clock enabled when bus is active.		
10	Bypass		Enable bypass of clock divide logic:	0	
		0	Disable bypass.		
		1	Enable bypass. MCLK driven to card bus output (MCICLK).		
11	WideBus		Enable wide bus mode:	0	
		0	Standard bus mode (only MCIDAT0 used).		
		1	Wide bus mode (MCIDAT3:0 used)		
31:12	-		Reserved, user software should not write ones to reserved bits. The value read from a reserved bit is not defined.	NA	

While the MCI is in identification mode, the MCICLK frequency must be less than 400 kHz. The clock frequency can be changed to the maximum card bus frequency when relative card addresses are assigned to all cards.

Note: After a data write, data cannot be written to this register for three MCLK clock periods plus two PCLK clock periods.

20.7.4 Argument Register (MCIArgument - 0xE008 C008)

The MCIArgument register contains a 32 bit command argument, which is sent to a card as part of a command message. <u>Table 422</u> shows the bit assignment of the MCIArgument register.

Table 422: Argument register (MCIArgument - address 0xE008 C008) bit description

Bit	Symbol	Description	Reset Value
31:0	CmdArg	Command argument	0x0000 0000

If a command contains an argument, it must be loaded into the argument register before writing a command to the command register.

20.7.5 Command Register (MCICommand - 0xE008 C00C)

The MCICommand register contains the command index and command type bits:

- The command index is sent to a card as part of a command message.
- The command type bits control the Command Path State Machine (CPSM). Writing 1
 to the enable bit starts the command send operation, while clearing the bit disables
 the CPSM.

Table 423 shows the bit assignment of the MCICommand register.

Chapter 20: LPC23XX SD/MMC interface

Table 423: Command register (MCICommand - address 0xE008 C00C) bit description

Bit	Symbol	Description	Reset Value
5:0	CmdIndex	Command index.	0
6	Response	If set, CPSM waits for a response.	0
7	LongRsp	If set, CPSM receives a 136 bit long response.	0
8	Interrupt	If set, CPSM disables command timer and waits for interrupt request.	0
9	Pending	If set, CPSM waits for CmdPend before it starts sending a command.	0
10	Enable	If set, CPSM is enabled.	0
31:11	-	Reserved, user software should not write ones to reserved bits. The value read from a reserved bit is not defined.	NA

Note: After a data write, data cannot be written to this register for three MCLK clock periods plus two PCLK clock periods.

Table 424 shows the response types.

Table 424: Command Response Types

Response	Long Response	Description
0	0	No response, expect CmdSent flag.
0	1	No response, expect CmdSent flag.
1	0	Short response, expect CmdRespEnd or CmdCrcFail flag.
1	1	Long response, expect CmdRespEnd or CmdCrcFail flag.

20.7.6 Command Response Register (MCIRespCommand - 0xE008 C010)

The MCIRespCommand register contains the command index field of the last command response received. <u>Table 423</u> shows the bit assignment of the MCIRespCommand register.

Table 425: Command Response register (MCIRespCommand - address 0xE008 C010) bit description

Bit	Symbol	Description	Reset Value
5:0	RespCmd	Response command index	0x00
31:6	-	Reserved, user software should not write ones to reserved bits. The value read from a reserved bit is not defined.	NA

If the command response transmission does not contain the command index field (long response), the RespCmd field is unknown, although it must contain 111111 (the value of the reserved field from the response).

20.7.7 Response Registers (MCIResponse0-3 - 0xE008 C014, E008 C018, E008 C01C and E008 C020)

The MCIResponse0-3 registers contain the status of a card, which is part of the received response. <u>Table 426</u> shows the bit assignment of the MCIResponse0-3 registers.

Chapter 20: LPC23XX SD/MMC interface

Table 426: Response registers (MCIResponse0-3 - addresses 0xE008 0014, 0xE008 C018, 0xE008 001C and 0xE008 C020) bit description

Bit	Symbol	Description	Reset Value
31:0	Status	Card status	0x0000 0000

The card status size can be 32 or 127 bits, depending on the response type (see Table 427).

Table 427: Response Register Type

Description	Short Response	Long Response
MCIResponse0	Card status [31:0]	Card status [127:96]
MCIResponse1	Unused	Card status [95:64]
MCIResponse2	Unused	Card status [63:32]
MCIResponse3	Unused	Card status [31:1]

The most significant bit of the card status is received first. The MCIResponse3 register LSBit is always 0.

20.7.8 Data Timer Register (MCIDataTimer - 0xE008 C024)

The MCIDataTimer register contains the data time-out period, in card bus clock periods. Table 428 shows the bit assignment of the MCIDataTimer register.

Table 428: Data Timer register (MCIDataTimer - address 0xE008 C024) bit description

Bit	Symbol	Description	Reset Value
31:0	DataTime	Data timeout period.	0x0000 0000

A counter loads the value from the data timer register, and starts decrementing when the Data Path State Machine (DPSM) enters the WAIT_R or BUSY state. If the timer reaches 0 while the DPSM is in either of these states, the time-out status flag is set.

A data transfer must be written to the data timer register and the data length register before being written to the data control register.

20.7.9 Data Length Register (MCIDataLength - 0xE008 C028)

The MCIDataLength register contains the number of data bytes to be transferred. The value is loaded into the data counter when data transfer starts. <u>Table 429</u> shows the bit assignment of the MCIDataLength register.

Table 429: Data Length register (MCIDataLength - address 0xE008 C028) bit description

Bit	Symbol	Description	Reset Value
15:0	DataLength	Data length value	0x0000
31:16	-	Reserved, user software should not write ones to reserved bits. The value read from a reserved bit is not defined.	NA

For a block data transfer, the value in the data length register must be a multiple of the block size (see Section 20.7.10 "Data Control Register (MCIDataCtrl - 0xE008 C02C)").

To initiate a data transfer, write to the data timer register and the data length register before writing to the data control register.

Chapter 20: LPC23XX SD/MMC interface

20.7.10 Data Control Register (MCIDataCtrl - 0xE008 C02C)

The MCIDataCtrl register controls the DPSM. <u>Table 430</u> shows the bit assignment of the MCIDataCtrl register.

Table 430: Data Control register (MCIDataCtrl - address 0xE008 C02C) bit description

Bit	Symbol	Value	Description	Reset Value
0	Enable		Data transfer enable.	0
1	Direction		Data transfer direction:	0
		0	From controller to card.	
		1	From card to controller.	
2	Mode		Data transfer mode:	0
		0	Block data transfer.	
		1	Stream data transfer.	
3	DMAEnable		Enable DMA:	0
		0	DMA disabled.	
		1	DMA enabled.	
7:4	BlockSize		Data block length	0
31:8	-		Reserved, user software should not write ones to reserved bits. The value read from a reserved bit is not defined.	NA

Note: After a data write, data cannot be written to this register for three MCLK clock periods plus two PCLK clock periods.

Data transfer starts if 1 is written to the enable bit. Depending on the direction bit, the DPSM moves to the WAIT_S or WAIT_R state. It is not necessary to clear the enable bit after the data transfer. BlockSize controls the data block length if Mode is 0, as shown in Table 431.

Table 431: Data Block Length

Block Size	Block Length
0	2^0 = 1 byte.
1	$2^1 = 2$ bytes.
	-
11	$2^{11} = 2048$ bytes.
12:15	Reserved.

20.7.11 Data Counter Register (MCIDataCnt - 0xE008 C030)

The MCIDataCnt register loads the value from the data length register (see Section 20.7.9 "Data Length Register (MCIDataLength - 0xE008 C028)") when the DPSM moves from the IDLE state to the WAIT_R or WAIT_S state. As data is transferred, the counter decrements the value until it reaches 0. The DPSM then moves to the IDLE state and the data status end flag is set. Table 432 shows the bit assignment of the MCIDataCnt register.

Chapter 20: LPC23XX SD/MMC interface

Table 432: Data Counter register (MCIDataCnt - address 0xE008 C030) bit description

Bit	Symbol	Description	Reset Value
15:0	DataCount	Remaining data	0x0000
31:16	-	Reserved, user software should not write ones to reserved bits. The value read from a reserved bit is not defined.	NA

Note: This register should be read only when the data transfer is complete.

20.7.12 Status Register (MCIStatus - 0xE008 C034)

The MCIStatus register is a read-only register. It contains two types of flag:

- Static [10:0]: These remain asserted until they are cleared by writing to the Clear register (see Section 20.7.13 "Clear Register (MCIClear 0xE008 C038)").
- Dynamic [21:11]: These change state depending on the state of the underlying logic (for example, FIFO full and empty flags are asserted and deasserted as data while written to the FIFO).

Table 433 shows the bit assignment of the MCIStatus register.

Table 433: Status register (MCIStatus - address 0xE008 C034) bit description

Bit	Symbol	Description	Reset Value
0	CmdCrcFail	Command response received (CRC check failed).	0
1	DataCrcFail	Data block sent/received (CRC check failed).	0
2	CmdTimeOut	Command response timeout.	0
3	DataTimeOut	Data timeout.	0
4	TxUnderrun	Transmit FIFO underrun error.	0
5	RxOverrun	Receive FIFO overrun error.	0
6	CmdRespEnd	Command response received (CRC check passed).	0
7	CmdSent	Command sent (no response required).	0
8	DataEnd	Data end (data counter is zero).	0
9	StartBitErr	Start bit not detected on all data signals in wide bus mode.	0
10	DataBlockEnd	Data block sent/received (CRC check passed).	0
11	CmdActive	Command transfer in progress.	0
12	TxActive	Data transmit in progress.	0
13	RxActive	Data receive in progress.	0
14	TxFifoHalfEmpty	Transmit FIFO half empty.	0
15	RxFifoHalfFull	Receive FIFO half full.	0
16	TxFifoFull	Transmit FIFO full.	0
17	RxFifoFull	Receive FIFO full.	0
18	TxFifoEmpty	Transmit FIFO empty.	0
19	RxFifoEmpty	Receive FIFO empty.	0

Chapter 20: LPC23XX SD/MMC interface

Table 433: Status register (MCIStatus - address 0xE008 C034) bit description

Bit	Symbol	Description	Reset Value
20	TxDataAvlbl	Data available in transmit FIFO.	0
21	RxDataAvlbl	Data available in receive FIFO.	0
31:22	-	Reserved, user software should not write ones to reserved bits. The value read from a reserved bit is not defined.	NA

20.7.13 Clear Register (MCIClear - 0xE008 C038)

The MCIClear register is a write-only register. The corresponding static status flags can be cleared by writing a 1 to the corresponding bit in the register. <u>Table 434</u> shows the bit assignment of the MCIClear register.

Table 434: Clear register (MCIClear - address 0xE008 C038) bit description

Bit	Symbol	Description	Reset Value
0	CmdCrcFailClr	Clears CmdCrcFail flag.	-
1	DataCrcFailClr	Clears DataCrcFail flag.	-
2	CmdTimeOutClr	Clears CmdTimeOut flag.	-
3	DataTimeOutClr	Clears DataTimeOut flag.	-
4	TxUnderrunClr	Clears TxUnderrun flag.	-
5	RxOverrunClr	Clears RxOverrun flag.	-
6	CmdRespEndClr	Clears CmdRespEnd flag.	-
7	CmdSentClr	Clears CmdSent flag.	-
8	DataEndClr	Clears DataEnd flag.	-
9	StartBitErrClr	Clears StartBitErr flag.	-
10	DataBlockEndClr	Clears DataBlockEnd flag.	-
31:11	-	Reserved, user software should not write ones to reserved bits. The value read from a reserved bit is not defined.	NA

20.7.14 Interrupt Mask Registers (MCIMask0 - 0xE008 C03C)

The interrupt mask registers determine which status flags generate an interrupt request by setting the corresponding bit to 1. <u>Table 435</u> shows the bit assignment of the MCIMaskx registers.

Table 435: Interrupt Mask registers (MCIMask0 - address 0xE008 C03C) bit description

Bit	Symbol	Description	Reset Value
0	Mask0	Mask CmdCrcFail flag.	0
1	Mask1	Mask DataCrcFail flag.	0
2	Mask2	Mask CmdTimeOut flag.	0
3	Mask3	Mask DataTimeOut flag.	0
4	Mask4	Mask TxUnderrun flag.	0
5	Mask5	Mask RxOverrun flag.	0
6	Mask6	Mask CmdRespEnd flag.	0
7	Mask7	Mask CmdSent flag.	0

UM10211

Chapter 20: LPC23XX SD/MMC interface

Table 435: Interrupt Mask registers (MCIMask0 - address 0xE008 C03C) bit description

Bit	Symbol	Description	Reset Value
8	Mask8	Mask DataEnd flag.	0
9	Mask9	Mask StartBitErr flag.	0
10	Mask10	Mask DataBlockEnd flag.	0
11	Mask11	Mask CmdActive flag.	0
12	Mask12	Mask TxActive flag.	0
13	Mask13	Mask RxActive flag.	0
14	Mask14	Mask TxFifoHalfEmpty flag.	0
15	Mask15	Mask RxFifoHalfFull flag.	0
16	Mask16	Mask TxFifoFull flag.	0
17	Mask17	Mask RxFifoFull flag.	0
18	Mask18	Mask TxFifoEmpty flag.	0
19	Mask19	Mask RxFifoEmpty flag.	0
20	Mask20	Mask TxDataAvlbl flag.	0
21	Mask21	Mask RxDataAvlbl flag.	0
31:22	-	Reserved, user software should not write ones to reserved bits. The value read from a reserved bit is not defined.	NA

20.7.15 FIFO Counter Register (MCIFifoCnt - 0xE008 C048)

The MCIFifoCnt register contains the remaining number of words to be written to or read from the FIFO. The FIFO counter loads the value from the data length register (see Section 20.7.9 "Data Length Register (MCIDataLength - 0xE008 C028)") when the Enable bit is set in the data control register. If the data length is not word aligned (multiple of 4), the remaining 1 to 3 bytes are regarded as a word. Table 436 shows the bit assignment of the MCIFifoCnt register.

Table 436: FIFO Counter register (MCIFifoCnt - address 0xE008 C048) bit description

Bit	Symbol	Description	Reset Value
14:0	DataCount	Remaining data	0x0000
31:15	-	Reserved, user software should not write ones to reserved bits. The value read from a reserved bit is not defined.	NA

20.7.16 Data FIFO Register (MCIFIFO - 0xE008 C080 to 0xE008 C0BC)

The receive and transmit FIFOs can be read or written as 32 bit wide registers. The FIFOs contain 16 entries on 16 sequential addresses. This allows the microprocessor to use its load and store multiple operands to read/write to the FIFO. <u>Table 437</u> shows the bit assignment of the MCIFIFO register.

Table 437: Data FIFO register (MCIFIFO - address 0xE008 C080 to 0xE008 C0BC) bit description

Bit	Symbol	Description	Reset Value
31:0	Data	FIFO data.	0x0000 0000

UM10211

Chapter 21: LPC23XX I2C-bus interfaces I2C0/1/2

Rev. 4.1 — 5 September 2012

User manual

21.1 Basic configuration

The I²CO/1/2 interfaces are configured using the following registers:

- Power: In the PCONP register (<u>Table 56</u>), set bit PCI2C0/1/2.
 Remark: On reset, all I²C interfaces are enabled (PCI2C0/1/2 = 1).
- Clock: In PCLK_SEL0 select PCLK_I2C0; in PCLK_SEL1 select PCLK_I2C1/2 (see Section 4.7.4.
- 3. Pins: Select I²C pins and their modes in PINSEL0 to PINSEL4 and PINMODE0 to PINMODE4 (see Section 9.5).

Remark: I²C0 pins SDA0 and SCL0 are open-drain outputs for I²C-bus compliance (see Section 9.5.13).

- 4. Interrupts are enabled in the VIC using the VICIntEnable register (Table 76).
- 5. Initialization: see Section 21.9.12.1 and Section 21.10.1.

21.2 Features

- Standard I²C compliant bus interfaces that may be configured as Master, Slave, or Master/Slave.
- Arbitration between simultaneously transmitting masters without corruption of serial data on the bus.
- Programmable clock to allow adjustment of I²C transfer rates.
- Bidirectional data transfer between masters and slaves.
- Serial clock synchronization allows devices with different bit rates to communicate via one serial bus.
- Serial clock synchronization can be used as a handshake mechanism to suspend and resume serial transfer.
- The I²C bus may be used for test and diagnostic purposes.

21.3 Applications

Interfaces to external I²C standard parts, such as serial RAMs, LCDs, tone generators, etc.

21.4 Description

A typical I^2C bus configuration is shown in <u>Figure 107</u>. Depending on the state of the direction bit (R/W), two types of data transfers are possible on the I^2C bus:

 Data transfer from a master transmitter to a slave receiver. The first byte transmitted by the master is the slave address. Next follows a number of data bytes. The slave returns an acknowledge bit after each received byte.


UM10211

Chapter 21: LPC23XX I2C-bus interfaces I2C0/1/2

• Data transfer from a slave transmitter to a master receiver. The first byte (the slave address) is transmitted by the master. The slave then returns an acknowledge bit. Next follows the data bytes transmitted by the slave to the master. The master returns an acknowledge bit after all received bytes other than the last byte. At the end of the last received byte, a "not acknowledge" is returned. The master device generates all of the serial clock pulses and the START and STOP conditions. A transfer is ended with a STOP condition or with a repeated START condition. Since a repeated START condition is also the beginning of the next serial transfer, the I²C bus will not be released.

Each of the three I²C interfaces on the LPC2300 is byte oriented, and has four operating modes: master transmitter mode, master receiver mode, slave transmitter mode and slave receiver mode.

The three I²C interfaces are identical except for the pin I/O characteristics. I²C0 complies with entire I²C specification, supporting the ability to turn power off to the LPC2300 without causing a problem with other devices on the same I²C bus (see "The I²C-bus specification" description under the heading "Fast-Mode", and notes for the table titled "Characteristics of the SDA and SCL I/O stages for F/S-mode I²C-bus devices"). This is sometimes a useful capability, but intrinsically limits alternate uses for the same pins if the I2C interface is not used. Seldom is this capability needed on multiple I2C interfaces within the same microcontroller. Therefore, I²C1 and I²C2 are implemented using standard port pins, and do not support the ability to turn power off to the LPC2300 while leaving the I²C bus functioning between other devices. This difference should be considered during system design while assigning uses for the I²C interfaces.

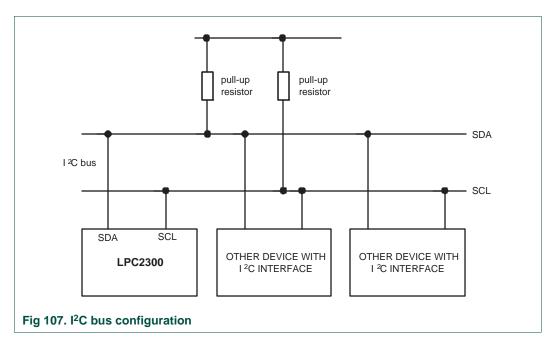

Chapter 21: LPC23XX I2C-bus interfaces I2C0/1/2

21.5 Pin description

Table 438. I²C Pin Description

Pin	Туре	Description
SDA0,1, 2	Input/Output	I2C Serial Data.
SCL0,1, 2	Input/Output	I ² C Serial Clock.

Remark: Only the I2C0 pins SDA0 and SCL0 are open-drain outputs for I²C-bus compliance.

21.6 I²C operating modes

In a given application, the I²C block may operate as a master, a slave, or both. In the slave mode, the I²C hardware looks for its own slave address and the general call address. If one of these addresses is detected, an interrupt is requested. If the processor wishes to become the bus master, the hardware waits until the bus is free before the master mode is entered so that a possible slave operation is not interrupted. If bus arbitration is lost in the master mode, the I²C block switches to the slave mode immediately and can detect its own slave address in the same serial transfer.

21.6.1 Master Transmitter mode

In this mode data is transmitted from master to slave. Before the master transmitter mode can be entered, the I2CONSET register must be initialized as shown in <u>Table 439</u>. I2EN must be set to 1 to enable the I²C function. If the AA bit is 0, the I²C interface will not acknowledge any address when another device is master of the bus, so it can not enter slave mode. The STA, STO and SI bits must be 0. The SI Bit is cleared by writing 1 to the SIC bit in the I2CONCLR register.

Table 439. I2CnCONSET used to configure Master mode


Bit	7	6	5	4	3	2	1	0
Symbol	-	I2EN	STA	STO	SI	AA	-	-
Value	-	1	0	0	0	0	-	-

The first byte transmitted contains the slave address of the receiving device (7 bits) and the data direction bit. In this mode the data direction bit (R/W) should be 0 which means Write. The first byte transmitted contains the slave address and Write bit. Data is transmitted 8 bits at a time. After each byte is transmitted, an acknowledge bit is received. START and STOP conditions are output to indicate the beginning and the end of a serial transfer.

The I²C interface will enter master transmitter mode when software sets the STA bit. The I²C logic will send the START condition as soon as the bus is free. After the START condition is transmitted, the SI bit is set, and the status code in the I2STAT register is 0x08. This status code is used to vector to a state service routine which will load the slave address and Write bit to the I2DAT register, and then clear the SI bit. SI is cleared by writing a 1 to the SIC bit in the I2CONCLR register. The STA bit should be cleared after writing the slave address.

Chapter 21: LPC23XX I2C-bus interfaces I2C0/1/2


When the slave address and R/W bit have been transmitted and an acknowledgment bit has been received, the SI bit is set again, and the possible status codes now are 0x18, 0x20, or 0x38 for the master mode, or 0x68, 0x78, or 0xB0 if the slave mode was enabled (by setting AA to 1). The appropriate actions to be taken for each of these status codes are shown in Table 454 to Table 457.

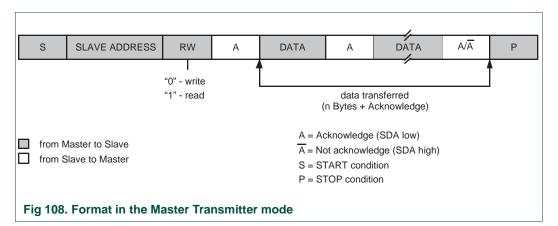

21.6.2 Master Receiver mode


In the master receiver mode, data is received from a slave transmitter. The transfer is initiated in the same way as in the master transmitter mode. When the START condition has been transmitted, the interrupt service routine must load the slave address and the data direction bit to the I²C Data Register (I2DAT), and then clear the SI bit. In this case, the data direction bit (R/W) should be 1 to indicate a read.

When the slave address and data direction bit have been transmitted and an acknowledge bit has been received, the SI bit is set, and the Status Register will show the status code. For master mode, the possible status codes are 0x40, 0x48, or 0x38. For slave mode, the possible status codes are 0x68, 0x78, or 0xB0. For details, refer to Table 455.

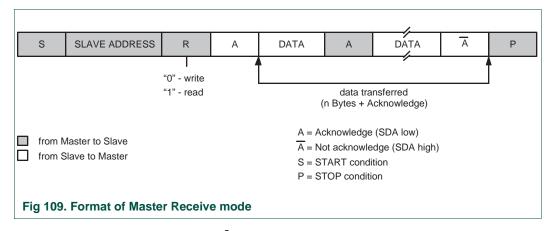

After a repeated START condition, I²C may switch to the master transmitter mode.

Chapter 21: LPC23XX I2C-bus interfaces I2C0/1/2

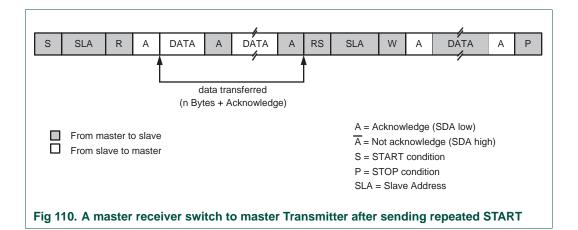

21.6.3 Slave Receiver mode


In the slave receiver mode, data bytes are received from a master transmitter. To initialize the slave receiver mode, user write the Slave Address Register (I2ADR) and write the I²C Control Set Register (I2CONSET) as shown in <u>Table 440</u>.

Table 440. I2CnCONSET used to configure Slave mode

Bit	7	6	5	4	3	2	1	0
Symbol	-	I2EN	STA	STO	SI	AA	-	-
Value	-	1	0	0	0	1	-	-

I2EN must be set to 1 to enable the I²C function. AA bit must be set to 1 to acknowledge its own slave address or the general call address. The STA, STO and SI bits are set to 0.


After I2ADR and I2CONSET are initialized, the I²C interface waits until it is addressed by its own address or general address followed by the data direction bit. If the direction bit is 0 (W), it enters slave receiver mode. If the direction bit is 1 (R), it enters slave transmitter mode. After the address and direction bit have been received, the SI bit is set and a valid status code can be read from the Status Register (I2STAT). Refer to Table 456 for the status codes and actions.

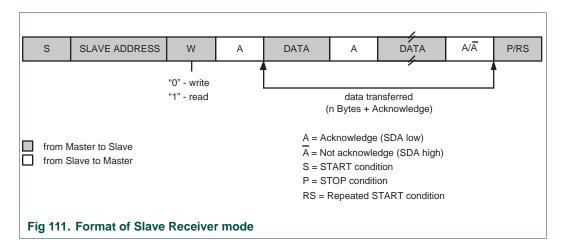

Chapter 21: LPC23XX I2C-bus interfaces I2C0/1/2

21.6.4 Slave Transmitter mode

The first byte is received and handled as in the slave receiver mode. However, in this mode, the direction bit will be 1, indicating a read operation. Serial data is transmitted via SDA while the serial clock is input through SCL. START and STOP conditions are recognized as the beginning and end of a serial transfer. In a given application, I²C may operate as a master and as a slave. In the slave mode, the I²C hardware looks for its own slave address and the general call address. If one of these addresses is detected, an interrupt is requested. When the microcontrollers wishes to become the bus master, the hardware waits until the bus is free before the master mode is entered so that a possible slave action is not interrupted. If bus arbitration is lost in the master mode, the I²C interface switches to the slave mode immediately and can detect its own slave address in the same serial transfer.

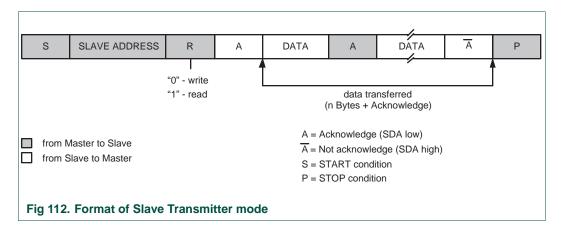


21.7 I²C implementation and operation

21.7.1 Input filters and output stages

Input signals are synchronized with the internal clock, and spikes shorter than three clocks are filtered out.

The output for I²C is a special pad designed to conform to the I²C specification. The outputs for I2C1 and I2C2 are standard port I/Os that support a subset of the full I²C specification.

Figure 113 shows how the on-chip I²C bus interface is implemented, and the following text describes the individual blocks.

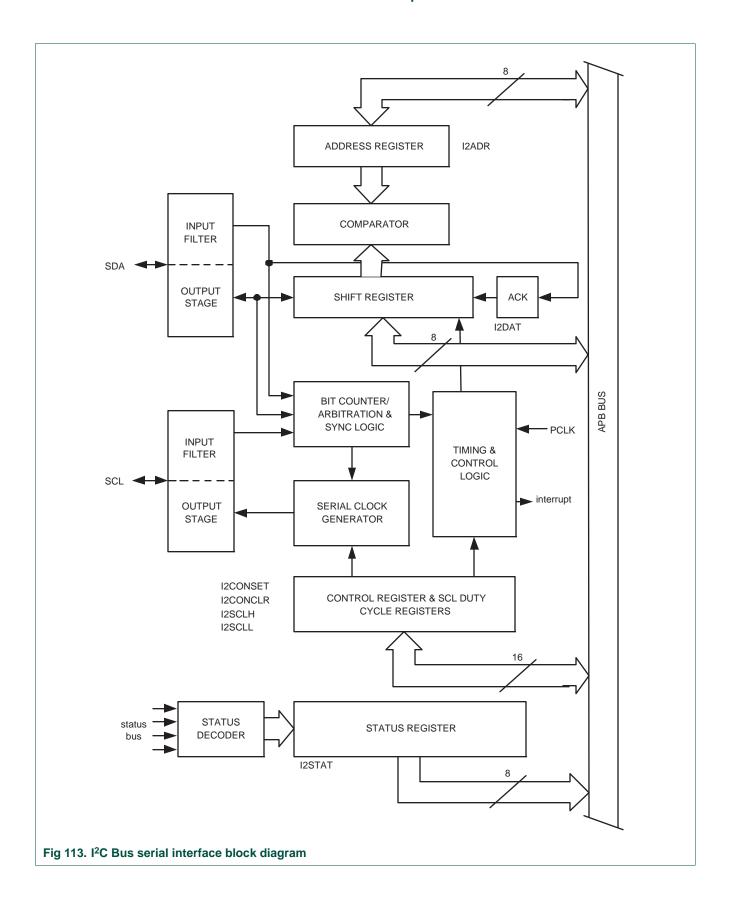

Chapter 21: LPC23XX I2C-bus interfaces I2C0/1/2

21.7.2 Address Register I2ADDR

This register may be loaded with the 7 bit slave address (7 most significant bits) to which the I²C block will respond when programmed as a slave transmitter or receiver. The LSB (GC) is used to enable general call address (0x00) recognition.

21.7.3 Comparator

The comparator compares the received 7 bit slave address with its own slave address (7 most significant bits in I2ADR). It also compares the first received 8 bit byte with the general call address (0x00). If an equality is found, the appropriate status bits are set and an interrupt is requested.


21.7.4 Shift register I2DAT

This 8 bit register contains a byte of serial data to be transmitted or a byte which has just been received. Data in I2DAT is always shifted from right to left; the first bit to be transmitted is the MSB (bit 7) and, after a byte has been received, the first bit of received data is located at the MSB of I2DAT. While data is being shifted out, data on the bus is simultaneously being shifted in; I2DAT always contains the last byte present on the bus. Thus, in the event of lost arbitration, the transition from master transmitter to slave receiver is made with the correct data in I2DAT.

21.7.5 Arbitration and synchronization logic

In the master transmitter mode, the arbitration logic checks that every transmitted logic 1 actually appears as a logic 1 on the I²C bus. If another device on the bus overrules a logic 1 and pulls the SDA line low, arbitration is lost, and the I²C block immediately changes from master transmitter to slave receiver. The I²C block will continue to output clock pulses (on SCL) until transmission of the current serial byte is complete.

Arbitration may also be lost in the master receiver mode. Loss of arbitration in this mode can only occur while the I²C block is returning a "not acknowledge: (logic 1) to the bus. Arbitration is lost when another device on the bus pulls this signal LOW. Since this can occur only at the end of a serial byte, the I²C block generates no further clock pulses. Figure 114 shows the arbitration procedure.

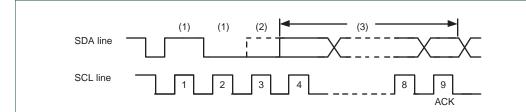


- (1) A device transmits serial data.
- (2) Another device overrules a logic 1 (dotted line), transmitted by this I²C master, by pulling the SDA line low. Arbitration is lost, and this I²C enters Slave Receiver mode.
- (3) This I²C is in Slave Receiver mode but still generates clock pulses until the current byte has been transmitted. This I²C will not generate clock pulses for the next byte. Data on SDA originates from the new master once it has won arbitration.

Fig 114. Arbitration procedure

Chapter 21: LPC23XX I2C-bus interfaces I2C0/1/2

The synchronization logic will synchronize the serial clock generator with the clock pulses on the SCL line from another device. If two or more master devices generate clock pulses, the "mark" duration is determined by the device that generates the shortest "marks," and the "space" duration is determined by the device that generates the longest "spaces". Figure 115 shows the synchronization procedure.

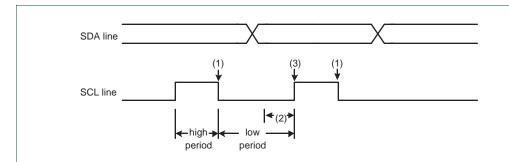

- Another device pulls the SCL line low before this I²C has timed a complete high time. The other device effectively determines the (shorter) HIGH period.
- (2) Another device continues to pull the SCL line low after this I²C has timed a complete low time and released SCL. The I²C clock generator is forced to wait until SCL goes HIGH. The other device effectively determines the (longer) LOW period.
- (3) The SCL line is released, and the clock generator begins timing the HIGH time.

Fig 115. Serial clock synchronization

A slave may stretch the space duration to slow down the bus master. The space duration may also be stretched for handshaking purposes. This can be done after each bit or after a complete byte transfer. the I²C block will stretch the SCL space duration after a byte has been transmitted or received and the acknowledge bit has been transferred. The serial interrupt flag (SI) is set, and the stretching continues until the serial interrupt flag is cleared.

21.7.6 Serial clock generator

This programmable clock pulse generator provides the SCL clock pulses when the I²C block is in the master transmitter or master receiver mode. It is switched off when the I²C block is in a slave mode. The I²C output clock frequency and duty cycle is programmable via the I²C Clock Control Registers. See the description of the I2CSCLL and I2CSCLH registers for details. The output clock pulses have a duty cycle as programmed unless the bus is synchronizing with other SCL clock sources as described above.

21.7.7 Timing and control

The timing and control logic generates the timing and control signals for serial byte handling. This logic block provides the shift pulses for I2DAT, enables the comparator, generates and detects start and stop conditions, receives and transmits acknowledge bits, controls the master and slave modes, contains interrupt request logic, and monitors the I2C bus status.

21.7.8 Control register I2CONSET and I2CONCLR

The I^2C control register contains bits used to control the following I^2C block functions: start and restart of a serial transfer, termination of a serial transfer, bit rate, address recognition, and acknowledgment.

Chapter 21: LPC23XX I2C-bus interfaces I2C0/1/2

The contents of the I²C control register may be read as I2CONSET. Writing to I2CONSET will set bits in the I²C control register that correspond to ones in the value written. Conversely, writing to I2CONCLR will clear bits in the I²C control register that correspond to ones in the value written.

21.7.9 Status decoder and status register

The status decoder takes all of the internal status bits and compresses them into a 5 bit code. This code is unique for each I²C bus status. The 5 bit code may be used to generate vector addresses for fast processing of the various service routines. Each service routine processes a particular bus status. There are 26 possible bus states if all four modes of the I²C block are used. The 5 bit status code is latched into the five most significant bits of the status register when the serial interrupt flag is set (by hardware) and remains stable until the interrupt flag is cleared by software. The three least significant bits of the status register are always zero. If the status code is used as a vector to service routines, then the routines are displaced by eight address locations. Eight bytes of code is sufficient for most of the service routines (see the software example in this section).

21.8 Register description

Each I²C interface contains 7 registers as shown in Table 441 below.

Table 441. I²C register map

Generic Name	Description	Access	Reset value[1]	I ² Cn Register Name & Address
I2CONSET	I2C Control Set Register. When a one is written to a bit of this register, the corresponding bit in the I ² C control register is set. Writing a zero has no effect on the corresponding bit in the I ² C control register.	R/W	0x00	I2C0CONSET - 0xE001 C000 I2C1CONSET - 0xE005 C000 I2C2CONSET - 0xE008 0000
I2STAT	I2C Status Register. During I ² C operation, this register provides detailed status codes that allow software to determine the next action needed.	RO	0xF8	I2C0STAT - 0xE001 C004 I2C1STAT - 0xE005 C004 I2C2STAT - 0xE008 0004
I2DAT	I2C Data Register. During master or slave transmit mode, data to be transmitted is written to this register. During master or slave receive mode, data that has been received may be read from this register.	R/W	0x00	I2C0DAT - 0xE001 C008 I2C1DAT - 0xE005 C008 I2C2DAT - 0xE008 0008
I2ADR	I2C Slave Address Register. Contains the 7 bit slave address for operation of the I ² C interface in slave mode, and is not used in master mode. The least significant bit determines whether a slave responds to the general call address.	R/W	0x00	I2C0ADR - 0xE001 C00C I2C1ADR - 0xE005 C00C I2C2ADR - 0xE008 000C

Chapter 21: LPC23XX I2C-bus interfaces I2C0/1/2

Table 441. I²C register map

Generic Name	Description	Access	Reset value[1]	I ² Cn Register Name & Address
I2SCLH	SCH Duty Cycle Register High Half Word. Determines the high time of the I ² C clock.	R/W	0x04	I2C0SCLH - 0xE001 C010 I2C1SCLH - 0xE005 C010 I2C2SCLH - 0xE008 0010
12SCLL	SCL Duty Cycle Register Low Half Word. Determines the low time of the I ² C clock. I2nSCLL and I2nSCLH together determine the clock frequency generated by an I ² C master and certain times used in slave mode.	R/W	0x04	I2C0SCLL - 0xE001 C014 I2C1SCLL - 0xE005 C014 I2C2SCLL - 0xE008 0014
I2CONCLR	I2C Control Clear Register. When a one is written to a bit of this register, the corresponding bit in the I ² C control register is cleared. Writing a zero has no effect on the corresponding bit in the I ² C control register.	WO	NA	I2C0CONCLR - 0xE001 C018 I2C1CONCLR - 0xE005 C018 I2C2CONCLR - 0xE008 0018

^[1] Reset Value reflects the data stored in used bits only. It does not include reserved bits content.

21.8.1 I²C Control Set Register (I2C[0/1/2]CONSET: 0xE001 C000, 0xE005 C000, 0xE008 0000)

The I2CONSET registers control setting of bits in the I2CON register that controls operation of the I²C interface. Writing a one to a bit of this register causes the corresponding bit in the I²C control register to be set. Writing a zero has no effect.

Table 442. I²C Control Set Register (I2C[0/1/2]CONSET - addresses: 0xE001 C000, 0xE005 C000, 0xE008 0000) bit description

Bit	Symbol	Description	Reset Value
1:0	-	Reserved. User software should not write ones to reserved bits. The value read from a reserved bit is not defined.	NA
2	AA	Assert acknowledge flag. See the text below.	
3	SI	I ² C interrupt flag.	0
4	STO	STOP flag. See the text below.	0
5	STA	START flag. See the text below.	0
6	I2EN	I ² C interface enable. See the text below.	0
7	-	Reserved. User software should not write ones to reserved bits. The value read from a reserved bit is not defined.	NA

I2EN I²C Interface Enable. When I2EN is 1, the I²C interface is enabled. I2EN can be cleared by writing 1 to the I2ENC bit in the I2CONCLR register. When I2EN is 0, the I²C interface is disabled.

When I2EN is "0", the SDA and SCL input signals are ignored, the I²C block is in the "not addressed" slave state, and the STO bit is forced to "0".

I2EN should not be used to temporarily release the I^2C bus since, when I2EN is reset, the I^2C bus status is lost. The AA flag should be used instead.

STA is the START flag. Setting this bit causes the I²C interface to enter master mode and transmit a START condition or transmit a repeated START condition if it is already in master mode.

Chapter 21: LPC23XX I2C-bus interfaces I2C0/1/2

When STA is 1 and the I²C interface is not already in master mode, it enters master mode, checks the bus and generates a START condition if the bus is free. If the bus is not free, it waits for a STOP condition (which will free the bus) and generates a START condition after a delay of a half clock period of the internal clock generator. If the I²C interface is already in master mode and data has been transmitted or received, it transmits a repeated START condition. STA may be set at any time, including when the I²C interface is in an addressed slave mode.

STA can be cleared by writing 1 to the STAC bit in the I2CONCLR register. When STA is 0, no START condition or repeated START condition will be generated.

If STA and STO are both set, then a STOP condition is transmitted on the I^2C bus if it the interface is in master mode, and transmits a START condition thereafter. If the I^2C interface is in slave mode, an internal STOP condition is generated, but is not transmitted on the bus.

STO is the STOP flag. Setting this bit causes the I²C interface to transmit a STOP condition in master mode, or recover from an error condition in slave mode. When STO is 1 in master mode, a STOP condition is transmitted on the I²C bus. When the bus detects the STOP condition, STO is cleared automatically.

In slave mode, setting this bit can recover from an error condition. In this case, no STOP condition is transmitted to the bus. The hardware behaves as if a STOP condition has been received and it switches to "not addressed" slave receiver mode. The STO flag is cleared by hardware automatically.

SI is the I²C Interrupt Flag. This bit is set when the I²C state changes. However, entering state F8 does not set SI since there is nothing for an interrupt service routine to do in that case.

While SI is set, the low period of the serial clock on the SCL line is stretched, and the serial transfer is suspended. When SCL is high, it is unaffected by the state of the SI flag. SI must be reset by software, by writing a 1 to the SIC bit in I2CONCLR register.

AA is the Assert Acknowledge Flag. When set to 1, an acknowledge (low level to SDA) will be returned during the acknowledge clock pulse on the SCL line on the following situations:

- 1. The address in the Slave Address Register has been received.
- 2. The general call address has been received while the general call bit (GC) in I2ADR is set.
- 3. A data byte has been received while the I²C is in the master receiver mode.
- 4. A data byte has been received while the I²C is in the addressed slave receiver mode.

The AA bit can be cleared by writing 1 to the AAC bit in the I2CONCLR register. When AA is 0, a not acknowledge (high level to SDA) will be returned during the acknowledge clock pulse on the SCL line on the following situations:

- 1. A data byte has been received while the I²C is in the master receiver mode.
- 2. A data byte has been received while the I²C is in the addressed slave receiver mode.

Chapter 21: LPC23XX I2C-bus interfaces I2C0/1/2

21.8.2 I²C Control Clear Register (I2C[0/1/2]CONCLR: 0xE001 C018, 0xE005 C018, 0xE008 0018)

The I2CONCLR registers control clearing of bits in the I2CON register that controls operation of the I²C interface. Writing a one to a bit of this register causes the corresponding bit in the I²C control register to be cleared. Writing a zero has no effect.

Table 443. I²C Control Set Register (I2C[0/1/2]CONCLR - addresses 0xE001 C018, 0xE005 C018, 0xE008 0018) bit description

Bit	Symbol	Description	Reset Value
1:0	-	Reserved. User software should not write ones to reserved bits. The value read from a reserved bit is not defined.	NA
2	AAC	Assert acknowledge Clear bit.	
3	SIC	I ² C interrupt Clear bit.	0
4	-	Reserved. User software should not write ones to reserved bits. The value read from a reserved bit is not defined.	NA
5	STAC	START flag Clear bit.	0
6	I2ENC	I ² C interface Disable bit.	0
7	-	Reserved. User software should not write ones to reserved bits. The value read from a reserved bit is not defined.	NA

AAC is the Assert Acknowledge Clear bit. Writing a 1 to this bit clears the AA bit in the I2CONSET register. Writing 0 has no effect.

SIC is the I²C Interrupt Clear bit. Writing a 1 to this bit clears the SI bit in the I2CONSET register. Writing 0 has no effect.

STAC is the Start flag Clear bit. Writing a 1 to this bit clears the STA bit in the I2CONSET register. Writing 0 has no effect.

I2ENC is the I²C Interface Disable bit. Writing a 1 to this bit clears the I2EN bit in the I2CONSET register. Writing 0 has no effect.

21.8.3 I²C Status Register (I2C[0/1/2]STAT - 0xE001 C004, 0xE005 C004, 0xE008 0004)

Each I²C Status register reflects the condition of the corresponding I²C interface. The I²C Status register is Read-Only.

Table 444. I²C Status Register (I2C[0/1/2]STAT - addresses 0xE001 C004, 0xE005 C004, 0xE008 0004) bit description

Bit	Symbol	Description	Reset Value
2:0	-	These bits are unused and are always 0.	0
7:3	Status	These bits give the actual status information about the $\ensuremath{\mbox{l}}^2\ensuremath{\mbox{C}}$ interface.	0x1F

The three least significant bits are always 0. Taken as a byte, the status register contents represent a status code. There are 26 possible status codes. When the status code is 0xF8, there is no relevant information available and the SI bit is not set. All other 25 status codes correspond to defined I²C states. When any of these states entered, the SI bit will be set. For a complete list of status codes, refer to tables from Table 454 to Table 457.

Chapter 21: LPC23XX I2C-bus interfaces I2C0/1/2

21.8.4 I²C Data Register (I2C[0/1/2]DAT - 0xE001 C008, 0xE005 C008, 0xE008 0008)

This register contains the data to be transmitted or the data just received. The CPU can read and write to this register only while it is not in the process of shifting a byte, when the SI bit is set. Data in I2DAT remains stable as long as the SI bit is set. Data in I2DAT is always shifted from right to left: the first bit to be transmitted is the MSB (bit 7), and after a byte has been received, the first bit of received data is located at the MSB of I2DAT.

Table 445. I²C Data Register (I2C[0/1/2]DAT - addresses 0xE001 C008, 0xE005 C008, 0xE008 0008) bit description

Bit Symbol	Description	Reset Value
7:0 Data	This register holds data values that have been received, or are to be transmitted.	0

21.8.5 I²C Slave Address Register (I2C[0/1/2]ADR - 0xE001 C00C, 0xE005 C00C, 0xE008 000C)

These registers are readable and writable, and is only used when an I²C interface is set to slave mode. In master mode, this register has no effect. The LSB of I2ADR is the general call bit. When this bit is set, the general call address (0x00) is recognized.

Table 446. I²C Slave Address register (I2C[0/1/2]ADR - addresses 0xE001 C00C, 0xE005 C00C, 0xE008 000C) bit description

Bit	Symbol	Description	Reset Value
0	GC	General Call enable bit.	0
7:1	Address	The I ² C device address for slave mode.	0x00

21.8.6 I²C SCL High Duty Cycle Register (I2C[0/1/2]SCLH - 0xE001 C010, 0xE005 C010, 0xE008 0010)

Table 447. I²C SCL High Duty Cycle register (I2C[0/1/2]SCLH - addresses 0xE001 C010, 0xE005 C010, 0xE008 0010) bit description

Bit	Symbol	Description	Reset Value
15:0	SCLH	Count for SCL HIGH time period selection.	0x0004

21.8.7 I²C SCL Low Duty Cycle Register (I2C[0/1/2]SCLL - 0xE001 C014, 0xE005 C014, 0xE008 0014)

Table 448. I²C SCL Low Duty Cycle register (I2C[0/1/2]SCLL - addresses 0xE001 C014, 0xE005 C014, 0xE008 0014) bit description

Bit	Symbol	Description	Reset Value
15:0	SCLL	Count for SCL LOW time period selection.	0x0004

21.8.8 Selecting the appropriate I²C data rate and duty cycle

Software must set values for the registers I2SCLH and I2SCLL to select the appropriate data rate and duty cycle. I2SCLH defines the number of PCLK cycles for the SCL high time, I2SCLL defines the number of PCLK cycles for the SCL low time. The frequency is determined by the following formula (f_{PCLK} being the frequency of PCLK):

UM10211

Chapter 21: LPC23XX I2C-bus interfaces I2C0/1/2

(13)

$$I^2C_{bitfrequency} = \frac{f_{PCLK}}{I2CSCLH + I2CSCLL}$$

The values for I2SCLL and I2SCLH should not necessarily be the same. Software can set different duty cycles on SCL by setting these two registers. For example, the I²C bus specification defines the SCL low time and high time at different values for a 400 kHz I²C rate. The value of the register must ensure that the data rate is in the I²C data rate range of 0 through 400 kHz. Each register value must be greater than or equal to 4. Table 449 gives some examples of I²C bus rates based on PCLK frequency and I2SCLL and I2SCLH values.

Table 449. Example I²C Clock Rates

I2SCLL +		l ²	C Bit Frequ	ency (kHz)	at PCLK (MI	Hz)	
I2SCLH	1	5	10	16	20	40	60
8	125						
10	100						
25	40	200	400				
50	20	100	200	320	400		
100	10	50	100	160	200	400	
160	6.25	31.25	62.5	100	125	250	375
200	5	25	50	80	100	200	300
400	2.5	12.5	25	40	50	100	150
800	1.25	6.25	12.5	20	25	50	75

21.9 Details of I²C operating modes

The four operating modes are:

- Master Transmitter
- Master Receiver
- Slave Receiver
- Slave Transmitter

Data transfers in each mode of operation are shown in Figures $\underline{116}$ to $\underline{120}$. $\underline{Table\ 450}$ lists abbreviations used in these figures when describing the I²C operating modes.

Table 450. Abbreviations used to describe an I²C operation

Abbreviation	Explanation
S	Start Condition
SLA	7 bit slave address
R	Read bit (high level at SDA)
W	Write bit (low level at SDA)
A	Acknowledge bit (low level at SDA)

UM10211

Chapter 21: LPC23XX I2C-bus interfaces I2C0/1/2

Table 450. Abbreviations used to describe an I²C operation

Abbreviation	Explanation
Ā	Not acknowledge bit (high level at SDA)
Data	8 bit data byte
P	Stop condition

In Figures 116 to 120, circles are used to indicate when the serial interrupt flag is set. The numbers in the circles show the status code held in the I2STAT register. At these points, a service routine must be executed to continue or complete the serial transfer. These service routines are not critical since the serial transfer is suspended until the serial interrupt flag is cleared by software.

When a serial interrupt routine is entered, the status code in I2STAT is used to branch to the appropriate service routine. For each status code, the required software action and details of the following serial transfer are given in tables from <u>Table 454</u> to <u>Table 458</u>.

21.9.1 Master Transmitter mode

In the master transmitter mode, a number of data bytes are transmitted to a slave receiver (see <u>Figure 116</u>). Before the master transmitter mode can be entered, I2CON must be initialized as follows:

Table 451. I2CONSET used to initialize Master Transmitter mode

Bit	7	6	5	4	3	2	1	0
Symbol	-	I2EN	STA	STO	SI	AA	-	-
Value	-	1	0	0	0	Х	-	-

The I²C rate must also be configured in the I2SCLL and I2SCLH registers. I2EN must be set to logic 1 to enable the I²C block. If the AA bit is reset, the I²C block will not acknowledge its own slave address or the general call address in the event of another device becoming master of the bus. In other words, if AA is reset, the I²C interface cannot enter a slave mode. STA, STO, and SI must be reset.

The master transmitter mode may now be entered by setting the STA bit. The I²C logic will now test the I²C bus and generate a start condition as soon as the bus becomes free. When a START condition is transmitted, the serial interrupt flag (SI) is set, and the status code in the status register (I2STAT) will be 0x08. This status code is used by the interrupt service routine to enter the appropriate state service routine that loads I2DAT with the slave address and the data direction bit (SLA+W). The SI bit in I2CON must then be reset before the serial transfer can continue.

When the slave address and the direction bit have been transmitted and an acknowledgment bit has been received, the serial interrupt flag (SI) is set again, and a number of status codes in I2STAT are possible. There are 0x18, 0x20, or 0x38 for the master mode and also 0x68, 0x78, or 0xB0 if the slave mode was enabled (AA = logic 1). The appropriate action to be taken for each of these status codes is detailed in Table 454. After a repeated start condition (state 0x10). The I 2 C block may switch to the master receiver mode by loading I2DAT with SLA+R).

Chapter 21: LPC23XX I2C-bus interfaces I2C0/1/2

21.9.2 Master Receiver mode

In the master receiver mode, a number of data bytes are received from a slave transmitter (see <u>Figure 117</u>). The transfer is initialized as in the master transmitter mode. When the start condition has been transmitted, the interrupt service routine must load I2DAT with the 7 bit slave address and the data direction bit (SLA+R). The SI bit in I2CON must then be cleared before the serial transfer can continue.

When the slave address and the data direction bit have been transmitted and an acknowledgment bit has been received, the serial interrupt flag (SI) is set again, and a number of status codes in I2STAT are possible. These are 0x40, 0x48, or 0x38 for the master mode and also 0x68, 0x78, or 0xB0 if the slave mode was enabled (AA = 1). The appropriate action to be taken for each of these status codes is detailed in <u>Table 455</u>. After a repeated start condition (state 0x10), the I²C block may switch to the master transmitter mode by loading I2DAT with SLA+W.

21.9.3 Slave Receiver mode

In the slave receiver mode, a number of data bytes are received from a master transmitter (see <u>Figure 118</u>). To initiate the slave receiver mode, I2ADR and I2CON must be loaded as follows:

Table 452. I2C0ADR and I2C1ADR usage in Slave Receiver mode

Bit	7	6	5	4	3	2	1	0
Symbol			ov	vn slave 7 b	oit address			GC

The upper 7 bits are the address to which the I²C block will respond when addressed by a master. If the LSB (GC) is set, the I²C block will respond to the general call address (0x00); otherwise it ignores the general call address.

Table 453. I2C0CONSET and I2C1CONSET used to initialize Slave Receiver mode


Bit	7	6	5	4	3	2	1	0
Symbol	-	I2EN	STA	STO	SI	AA	-	-
Value	-	1	0	0	0	1	-	-


The I²C bus rate settings do not affect the I²C block in the slave mode. I2EN must be set to logic 1 to enable the I²C block. The AA bit must be set to enable the I²C block to acknowledge its own slave address or the general call address. STA, STO, and SI must be reset.


When I2ADR and I2CON have been initialized, the I²C block waits until it is addressed by its own slave address followed by the data direction bit which must be "0" (W) for the I²C block to operate in the slave receiver mode. After its own slave address and the W bit have been received, the serial interrupt flag (SI) is set and a valid status code can be read from I2STAT. This status code is used to vector to a state service routine. The appropriate action to be taken for each of these status codes is detailed in <u>Table 456</u>. The slave receiver mode may also be entered if arbitration is lost while the I²C block is in the master mode (see status 0x68 and 0x78).

Chapter 21: LPC23XX I2C-bus interfaces I2C0/1/2


If the AA bit is reset during a transfer, the I²C block will return a not acknowledge (logic 1) to SDA after the next received data byte. While AA is reset, the I²C block does not respond to its own slave address or a general call address. However, the I²C bus is still monitored and address recognition may be resumed at any time by setting AA. This means that the AA bit may be used to temporarily isolate the I²C block from the I²C bus.

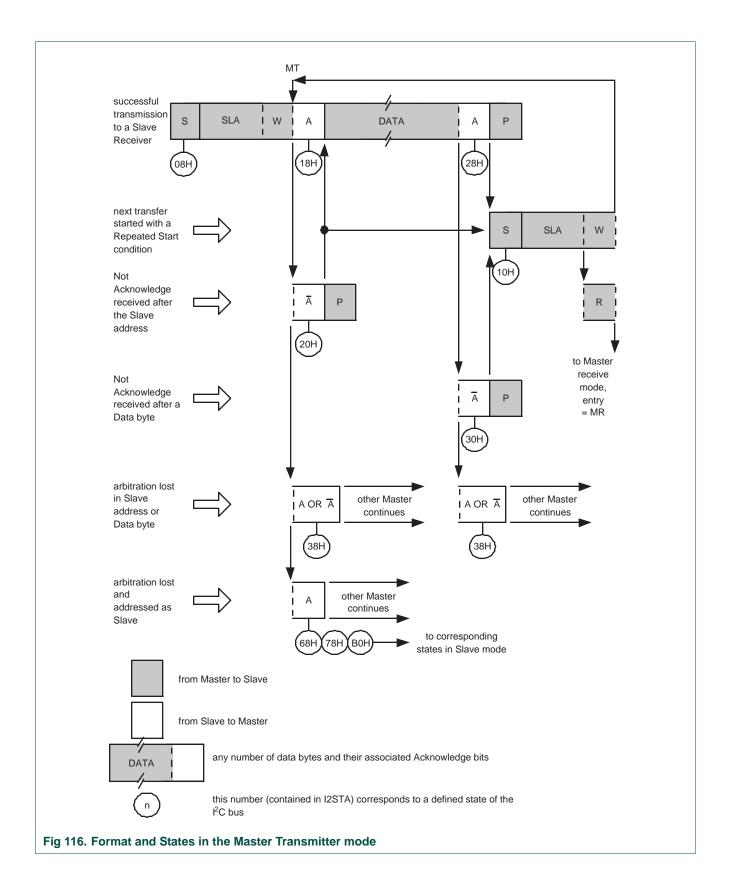

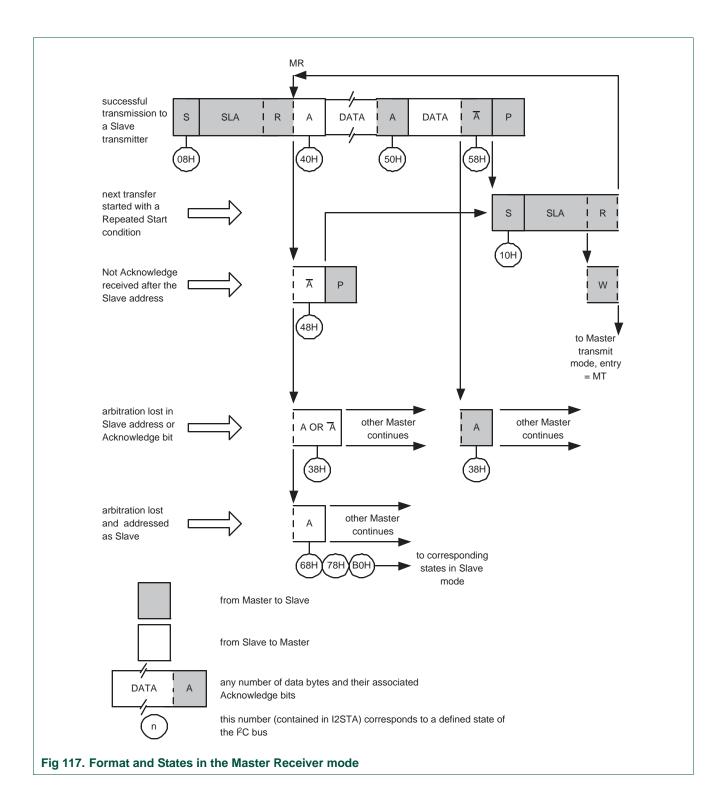

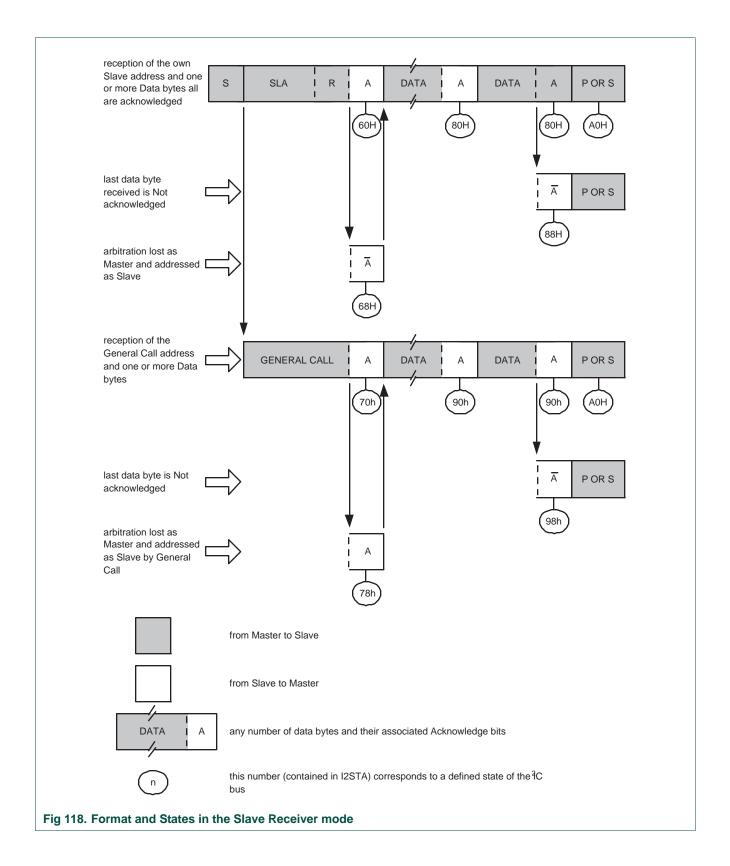

Chapter 21: LPC23XX I2C-bus interfaces I2C0/1/2

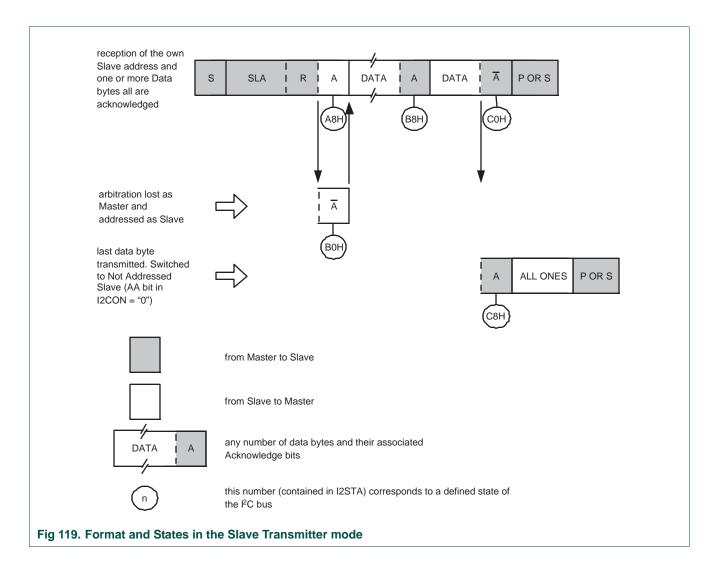

21.9.4 Slave Transmitter mode

In the slave transmitter mode, a number of data bytes are transmitted to a master receiver (see Figure 119). Data transfer is initialized as in the slave receiver mode. When I2ADR and I2CON have been initialized, the I²C block waits until it is addressed by its own slave address followed by the data direction bit which must be "1" (R) for the I²C block to operate in the slave transmitter mode. After its own slave address and the R bit have been received, the serial interrupt flag (SI) is set and a valid status code can be read from I2STAT. This status code is used to vector to a state service routine, and the appropriate action to be taken for each of these status codes is detailed in Table 457. The slave transmitter mode may also be entered if arbitration is lost while the I²C block is in the master mode (see state 0xB0).

If the AA bit is reset during a transfer, the I²C block will transmit the last byte of the transfer and enter state 0xC0 or 0xC8. The I²C block is switched to the not addressed slave mode and will ignore the master receiver if it continues the transfer. Thus the master receiver receives all 1s as serial data. While AA is reset, the I²C block does not respond to its own slave address or a general call address. However, the I²C bus is still monitored, and address recognition may be resumed at any time by setting AA. This means that the AA bit may be used to temporarily isolate the I²C block from the I²C bus.

Table 454. Master Transmitter mode

Status	Status of the I ² C bus	Application softw	are re	spons	е		Next action taken by I ² C hardware	
Code (I2CSTAT)	and hardware	To/From I2DAT	To I2	CON				
(IZCOTAT)			STA	STO	SI	AA		
80x0	A START condition has been transmitted.	Load SLA+W Clear STA	X	0	0	Χ	SLA+W will be transmitted; ACK bit will be received.	
0x10	A repeated START	Load SLA+W or	Χ	0	0	Χ	As above.	
	condition has been transmitted.	Load SLA+R Clear STA	Χ	0	0	X	SLA+W will be transmitted; the I ² C block will be switched to MST/REC mode.	
0x18	SLA+W has been transmitted; ACK has	Load data byte or	0	0	0	X	Data byte will be transmitted; ACK bit will be received.	
	been received.	No I2DAT action or	1	0	0	X	Repeated START will be transmitted.	
		No I2DAT action or	0	1	0	X	STOP condition will be transmitted; STO flag will be reset.	
		No I2DAT action	1	1	0	Χ	STOP condition followed by a START condition will be transmitted; STO flag will be reset.	
0x20 SLA+W has been transmitted; NOT ACK has been received.	transmitted; NOTACK	Load data byte or	0	0	0	Х	Data byte will be transmitted; ACK bit will be received.	
	No I2DAT action or	1	0	0	X	Repeated START will be transmitted.		
		No I2DAT action or	0	1	0	X	STOP condition will be transmitted; STO flag will be reset.	
		No I2DAT action	1	1	0	X	STOP condition followed by a START condition will be transmitted; STO flag will be reset.	
0x28	Data byte in I2DAT has been transmitted;	Load data byte or	0	0	0	Х	Data byte will be transmitted; ACK bit will be received.	
	ACK has been received.	No I2DAT action or	1	0	0	X	Repeated START will be transmitted.	
		No I2DAT action or	0	1	0	Χ	STOP condition will be transmitted; STO flag will be reset.	
		No I2DAT action	1	1	0	X	STOP condition followed by a START condition will be transmitted; STO flag will be reset.	
0x30	Data byte in I2DAT has been transmitted;	Load data byte or	0	0	0	Х	Data byte will be transmitted; ACK bit will be received.	
	NOT ACK has been received.	No I2DAT action or	1	0	0	X	Repeated START will be transmitted.	
		No I2DAT action or	0	1	0	Χ	STOP condition will be transmitted; STO flag will be reset.	
		No I2DAT action	1	1	0	Х	STOP condition followed by a START condition will be transmitted; STO flag will be reset.	
0x38	Arbitration lost in SLA+R/W or Data	No I2DAT action or	0	0	0	Χ	I ² C bus will be released; not addressed slave will be entered.	
	bytes.	No I2DAT action	1	0	0	Χ	A START condition will be transmitted when the bus becomes free.	

Table 455. Master Receiver mode

Status	Status of the I ² C bus	Application softwa	are re	spons	е	Next action taken by I ² C hardware	
Code (I2CSTAT)	and hardware	To/From I2DAT	To I2	CON			
(IZCSTAT)			STA	STO	SI	AA	
0x08	A START condition has been transmitted.	Load SLA+R	Χ	0	0	Χ	SLA+R will be transmitted; ACK bit will be received.
0x10	A repeated START	Load SLA+R or	Χ	0	0	Χ	As above.
	condition has been transmitted.	Load SLA+W	Χ	0	0	X	SLA+W will be transmitted; the I ² C block will be switched to MST/TRX mode.
0x38	Arbitration lost in NOT ACK bit.	No I2DAT action or	0	0	0	Χ	I ² C bus will be released; the I ² C block will enter a slave mode.
		No I2DAT action	1	0	0	Χ	A START condition will be transmitted when the bus becomes free.
	SLA+R has been transmitted; ACK has	No I2DAT action or	0	0	0	0	Data byte will be received; NOT ACK bit will be returned.
	been received.	No I2DAT action	0	0	0	1	Data byte will be received; ACK bit will be returned.
0x48	SLA+R has been transmitted; NOT ACK	No I2DAT action or	1	0	0	Χ	Repeated START condition will be transmitted.
	has been received.	No I2DAT action or	0	1	0	X	STOP condition will be transmitted; STO flag will be reset.
		No I2DAT action	1	1	0	X	STOP condition followed by a START condition will be transmitted; STO flag will be reset.
0x50	Data byte has been received; ACK has	Read data byte or	0	0	0	0	Data byte will be received; NOT ACK bit will be returned.
	been returned.	Read data byte	0	0	0	1	Data byte will be received; ACK bit will be returned.
0x58	Data byte has been received; NOT ACK	Read data byte or	1	0	0	Χ	Repeated START condition will be transmitted.
	has been returned.	Read data byte or	0	1	0	Χ	STOP condition will be transmitted; STO flag will be reset.
		Read data byte	1	1	0	X	STOP condition followed by a START condition will be transmitted; STO flag will be reset.

Table 456. Slave Receiver Mode

Status	Status of the I ² C bus	Application softw	are re	spons	е		Next action taken by I ² C hardware
Code (I2CSTAT)	and hardware	To/From I2DAT	To I2	CON			
(.200171)			STA	STO	SI	AA	
0x60	Own SLA+W has been received; ACK	No I2DAT action or	Χ	0	0	0	Data byte will be received and NOT ACK will be returned.
	has been returned.	No I2DAT action	Χ	0	0	1	Data byte will be received and ACK will be returned.
0x68	Arbitration lost in SLA+R/W as master;	No I2DAT action or	X	0	0	0	Data byte will be received and NOT ACK will be returned.
	Own SLA+W has been received, ACK returned.	No I2DAT action	X	0	0	1	Data byte will be received and ACK will be returned.
0x70	General call address (0x00) has been	No I2DAT action or	X	0	0	0	Data byte will be received and NOT ACK will be returned.
	received; ACK has been returned.	No I2DAT action	Χ	0	0	1	Data byte will be received and ACK will be returned.
0x78	Arbitration lost in SLA+R/W as master;	No I2DAT action or	X	0	0	0	Data byte will be received and NOT ACK will be returned.
	General call address has been received, ACK has been returned.	No I2DAT action	X	0	0	1	Data byte will be received and ACK will be returned.
0x80	Previously addressed with own SLV	Read data byte or	X	0	0	0	Data byte will be received and NOT ACK will be returned.
	address; DATA has been received; ACK has been returned.	Read data byte	X	0	0	1	Data byte will be received and ACK will be returned.
0x88	Previously addressed with own SLA; DATA byte has been	Read data byte or	0	0	0	0	Switched to not addressed SLV mode; no recognition of own SLA or General call address.
	received; NOT ACK has been returned.	Read data byte or	0	0	0	1	Switched to not addressed SLV mode; Own SLA will be recognized; General call address will be recognized if I2ADR[0] = logic 1.
		Read data byte or	1	0	0	0	Switched to not addressed SLV mode; no recognition of own SLA or General call address. A START condition will be transmitted when the bus becomes free.
		Read data byte	1	0	0	1	Switched to not addressed SLV mode; Own SLA will be recognized; General call address will be recognized if I2ADR[0] = logic 1. A START condition will be transmitted when the bus becomes free.
0x90	Previously addressed with General Call;	Read data byte or	Χ	0	0	0	Data byte will be received and NOT ACK will be returned.
	DATA byte has been received; ACK has been returned.	Read data byte	Х	0	0	1	Data byte will be received and ACK will be returned.

Table 456. Slave Receiver Mode

Status	Status of the I ² C bus	Application softw	are re	spons	е		Next action taken by I ² C hardware
Code (I2CSTAT)	and hardware	To/From I2DAT	To I2	CON			
(1200171)			STA	STO	SI	AA	
0x98	Previously addressed with General Call; DATA byte has been received; NOT ACK has been returned.	Read data byte or	0	0	0	0	Switched to not addressed SLV mode; no recognition of own SLA or General call address.
		Read data byte or	0	0	0	1	Switched to not addressed SLV mode; Own SLA will be recognized; General call address will be recognized if I2ADR[0] = logic 1.
		Read data byte or	1	0	0	0	Switched to not addressed SLV mode; no recognition of own SLA or General call address. A START condition will be transmitted when the bus becomes free.
		Read data byte	1	0	0	1	Switched to not addressed SLV mode; Own SLA will be recognized; General call address will be recognized if I2ADR[0] = logic 1. A START condition will be transmitted when the bus becomes free.
0xA0	A STOP condition or repeated START condition has been received while still addressed as SLV/REC or SLV/TRX.	No STDAT action or	0	0	0	0	Switched to not addressed SLV mode; no recognition of own SLA or General call address.
		No STDAT action or	0	0	0	1	Switched to not addressed SLV mode; Own SLA will be recognized; General call address will be recognized if I2ADR[0] = logic 1.
		No STDAT action or	1	0	0	0	Switched to not addressed SLV mode; no recognition of own SLA or General call address. A START condition will be transmitted when the bus becomes free.
		No STDAT action	1	0	0	1	Switched to not addressed SLV mode; Own SLA will be recognized; General call address will be recognized if I2ADR[0] = logic 1. A START condition will be transmitted when the bus becomes free.

Table 457. Tad_105: Slave Transmitter mode

Status	Status of the I ² C bus	Application softw	are re	spons	е	Next action taken by I ² C hardware	
Code (I2CSTAT)	and hardware	To/From I2DAT	To I2				
·				STO		AA	
0xA8	Own SLA+R has been received; ACK has	Load data byte or	Х	0	0	0	Last data byte will be transmitted and ACK bit will be received.
	been returned.	Load data byte	Х	0	0	1	Data byte will be transmitted; ACK will be received.
0xB0	Arbitration lost in SLA+R/W as master; Own SLA+R has been received, ACK has been returned.	Load data byte or	X	0	0	0	Last data byte will be transmitted and ACK bit will be received.
		Load data byte	X	0	0	1	Data byte will be transmitted; ACK bit wi be received.
0xB8	Data byte in I2DAT has been transmitted; ACK has been received.	Load data byte or	X	0	0	0	Last data byte will be transmitted and ACK bit will be received.
		Load data byte	Χ	0	0	1	Data byte will be transmitted; ACK bit will be received.
has be NOT A	Data byte in I2DAT has been transmitted; NOT ACK has been	No I2DAT action or	0	0	0	0	Switched to not addressed SLV mode; no recognition of own SLA or General call address.
	received.	No I2DAT action or	0	0	0	1	Switched to not addressed SLV mode; Own SLA will be recognized; General ca address will be recognized if I2ADR[0] = logic 1.
		No I2DAT action or	1	0	0	0	Switched to not addressed SLV mode; no recognition of own SLA or General call address. A START condition will be transmitted when the bus becomes free.
		No I2DAT action	1	0	0	1	Switched to not addressed SLV mode; Own SLA will be recognized; General ca address will be recognized if I2ADR[0] = logic 1. A START condition will be transmitted when the bus becomes free.
0xC8	Last data byte in I2DAT has been transmitted (AA = 0);	No I2DAT action or	0	0	0	0	Switched to not addressed SLV mode; no recognition of own SLA or General call address.
	ACK has been received.	No I2DAT action or	0	0	0	1	Switched to not addressed SLV mode; Own SLA will be recognized; General ca address will be recognized if I2ADR[0] = logic 1.
		No I2DAT action or	1	0	0	0	Switched to not addressed SLV mode; no recognition of own SLA or General call address. A START condition will be transmitted when the bus becomes free.
		No I2DAT action	1	0	0	1	Switched to not addressed SLV mode; Own SLA will be recognized; General ca address will be recognized if I2ADR.0 = logic 1. A START condition wi be transmitted when the bus becomes free.

Chapter 21: LPC23XX I2C-bus interfaces I2C0/1/2

21.9.5 Miscellaneous states

There are two I2STAT codes that do not correspond to a defined I²C hardware state (see Table 458). These are discussed below.

21.9.5.1 I2STAT = 0xF8

This status code indicates that no relevant information is available because the serial interrupt flag, SI, is not yet set. This occurs between other states and when the I²C block is not involved in a serial transfer.

21.9.5.2 I2STAT = 0x00

This status code indicates that a bus error has occurred during an I²C serial transfer. A bus error is caused when a START or STOP condition occurs at an illegal position in the format frame. Examples of such illegal positions are during the serial transfer of an address byte, a data byte, or an acknowledge bit. A bus error may also be caused when external interference disturbs the internal I²C block signals. When a bus error occurs, SI is set. To recover from a bus error, the STO flag must be set and SI must be cleared. This causes the I²C block to enter the "not addressed" slave mode (a defined state) and to clear the STO flag (no other bits in I2CON are affected). The SDA and SCL lines are released (a STOP condition is not transmitted).

Chapter 21: LPC23XX I2C-bus interfaces I2C0/1/2

Table 458. Miscellaneous states

Status	Status of the I ² C bus	Application softw	are re	spons	е		Next action taken by I ² C hardware
Code (I2CSTAT)	and hardware To/From I2DAT To I2CON						
(IZCSTAT)			STA	STO	SI	AA	
0xF8	No relevant state information available; SI = 0.	No I2DAT action	N	o I2CC	ON acti	ion	Wait or proceed current transfer.
0x00	Bus error during MST or selected slave modes, due to an illegal START or STOP condition. State 0x00 can also occur when interference causes the I ² C block to enter an undefined state.	No I2DAT action	0	1	0	X	Only the internal hardware is affected in the MST or addressed SLV modes. In all cases, the bus is released and the I ² C block is switched to the not addressed SLV mode. STO is reset.

21.9.6 Some special cases

The I²C hardware has facilities to handle the following special cases that may occur during a serial transfer:

21.9.7 Simultaneous repeated START conditions from two masters

A repeated START condition may be generated in the master transmitter or master receiver modes. A special case occurs if another master simultaneously generates a repeated START condition (see Figure 120). Until this occurs, arbitration is not lost by either master since they were both transmitting the same data.

If the I²C hardware detects a repeated START condition on the I²C bus before generating a repeated START condition itself, it will release the bus, and no interrupt request is generated. If another master frees the bus by generating a STOP condition, the I²C block will transmit a normal START condition (state 0x08), and a retry of the total serial data transfer can commence.

21.9.8 Data transfer after loss of arbitration

Arbitration may be lost in the master transmitter and master receiver modes (see <u>Figure 114</u>). Loss of arbitration is indicated by the following states in I2STAT; 0x38, 0x68, 0x78, and 0xB0 (see <u>Figure 116</u> and <u>Figure 117</u>).

If the STA flag in I2CON is set by the routines which service these states, then, if the bus is free again, a START condition (state 0x08) is transmitted without intervention by the CPU, and a retry of the total serial transfer can commence.

21.9.9 Forced access to the I²C bus

In some applications, it may be possible for an uncontrolled source to cause a bus hang-up. In such situations, the problem may be caused by interference, temporary interruption of the bus or a temporary short-circuit between SDA and SCL.

Chapter 21: LPC23XX I2C-bus interfaces I2C0/1/2

If an uncontrolled source generates a superfluous START or masks a STOP condition, then the I²C bus stays busy indefinitely. If the STA flag is set and bus access is not obtained within a reasonable amount of time, then a forced access to the I²C bus is possible. This is achieved by setting the STO flag while the STA flag is still set. No STOP condition is transmitted. The I²C hardware behaves as if a STOP condition was received and is able to transmit a START condition. The STO flag is cleared by hardware (see Figure 121).

21.9.10 I²C Bus obstructed by a Low level on SCL or SDA

An I²C bus hang-up occurs if SDA or SCL is pulled LOW by an uncontrolled source. If the SCL line is obstructed (pulled LOW) by a device on the bus, no further serial transfer is possible, and the I²C hardware cannot resolve this type of problem. When this occurs, the problem must be resolved by the device that is pulling the SCL bus line LOW.


If the SDA line is obstructed by another device on the bus (e.g., a slave device out of bit synchronization), the problem can be solved by transmitting additional clock pulses on the SCL line (see Figure 122). The I²C hardware transmits additional clock pulses when the STA flag is set, but no START condition can be generated because the SDA line is pulled LOW while the I²C bus is considered free. The I²C hardware attempts to generate a START condition after every two additional clock pulses on the SCL line. When the SDA line is eventually released, a normal START condition is transmitted, state 0x08 is entered, and the serial transfer continues.

If a forced bus access occurs or a repeated START condition is transmitted while SDA is obstructed (pulled LOW), the I²C hardware performs the same action as described above. In each case, state 0x08 is entered after a successful START condition is transmitted and normal serial transfer continues. Note that the CPU is not involved in solving these bus hang-up problems.


21.9.11 Bus error


A bus error occurs when a START or STOP condition is present at an illegal position in the format frame. Examples of illegal positions are during the serial transfer of an address byte, a data bit, or an acknowledge bit.

The I²C hardware only reacts to a bus error when it is involved in a serial transfer either as a master or an addressed slave. When a bus error is detected, the I²C block immediately switches to the not addressed slave mode, releases the SDA and SCL lines, sets the interrupt flag, and loads the status register with 0x00. This status code may be used to vector to a state service routine which either attempts the aborted serial transfer again or simply recovers from the error condition as shown in <u>Table 458</u>.

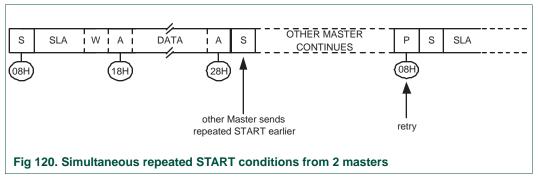

Chapter 21: LPC23XX I2C-bus interfaces I2C0/1/2

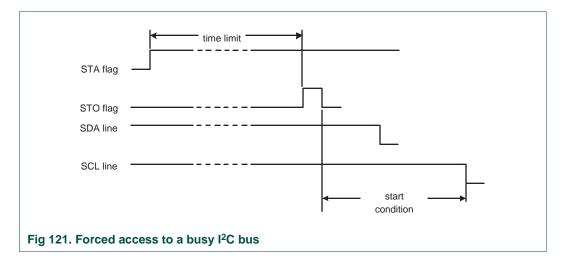

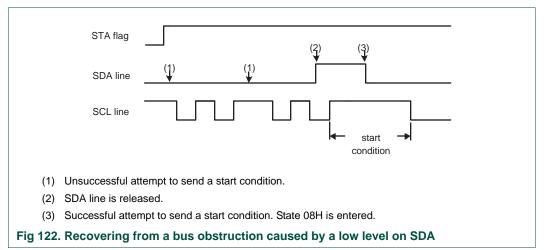

21.9.12 I²C State service routines

This section provides examples of operations that must be performed by various I²C state service routines. This includes:

- Initialization of the I²C block after a Reset.
- I²C Interrupt Service.
- The 26 state service routines providing support for all four I²C operating modes.

21.9.12.1 Initialization

In the initialization example, the I²C block is enabled for both master and slave modes. For each mode, a buffer is used for transmission and reception. The initialization routine performs the following functions:

- I2ADR is loaded with the part's own slave address and the general call bit (GC).
- The I²C interrupt enable and interrupt priority bits are set.
- The slave mode is enabled by simultaneously setting the I2EN and AA bits in I2CON and the serial clock frequency (for master modes) is defined by loading CR0 and CR1 in I2CON. The master routines must be started in the main program.

UM10211

Chapter 21: LPC23XX I2C-bus interfaces I2C0/1/2

The I^2C hardware now begins checking the I^2C bus for its own slave address and general call. If the general call or the own slave address is detected, an interrupt is requested and I2STAT is loaded with the appropriate state information.

21.9.12.2 I²C interrupt service

When the I²C interrupt is entered, I2STAT contains a status code which identifies one of the 26 state services to be executed.

21.9.12.3 The state service routines

Each state routine is part of the I²C interrupt routine and handles one of the 26 states.

21.9.12.4 Adapting state services to an application

The state service examples show the typical actions that must be performed in response to the 26 I²C state codes. If one or more of the four I²C operating modes are not used, the associated state services can be omitted, as long as care is taken that the those states can never occur.

In an application, it may be desirable to implement some kind of time-out during I²C operations, in order to trap an inoperative bus or a lost service routine.

21.10 Software example

21.10.1 Initialization routine

Example to initialize I²C Interface as a Slave and/or Master.

- 1. Load I2ADR with own Slave Address, enable general call recognition if needed.
- 2. Enable I²C interrupt.
- Write 0x44 to I2CONSET to set the I2EN and AA bits, enabling Slave functions. For Master only functions, write 0x40 to I2CONSET.

21.10.2 Start master transmit function

Begin a Master Transmit operation by setting up the buffer, pointer, and data count, then initiating a Start.

- 1. Initialize Master data counter.
- 2. Set up the Slave Address to which data will be transmitted, and add the Write bit.
- 3. Write 0x20 to I2CONSET to set the STA bit.
- 4. Set up data to be transmitted in Master Transmit buffer.
- 5. Initialize the Master data counter to match the length of the message being sent.
- 6. Exit

21.10.3 Start master receive function

Begin a Master Receive operation by setting up the buffer, pointer, and data count, then initiating a Start.

1. Initialize Master data counter.

Chapter 21: LPC23XX I2C-bus interfaces I2C0/1/2

- 2. Set up the Slave Address to which data will be transmitted, and add the Read bit.
- 3. Write 0x20 to I2CONSET to set the STA bit.
- 4. Set up the Master Receive buffer.
- 5. Initialize the Master data counter to match the length of the message to be received.
- 6. Exit

21.10.4 I²C interrupt routine

Determine the I²C state and which state routine will be used to handle it.

- 1. Read the I²C status from I2STA.
- 2. Use the status value to branch to one of 26 possible state routines.

21.10.5 Non mode specific states

21.10.5.1 State: 0x00

Bus Error. Enter not addressed Slave mode and release bus.

- 1. Write 0x14 to I2CONSET to set the STO and AA bits.
- 2. Write 0x08 to I2CONCLR to clear the SI flag.
- 3. Exit

21.10.6 Master states

State 08 and State 10 are for both Master Transmit and Master Receive modes. The R/W bit decides whether the next state is within Master Transmit mode or Master Receive mode.

21.10.6.1 State: 0x08

A Start condition has been transmitted. The Slave Address + R/W bit will be transmitted, an ACK bit will be received.

- 1. Write Slave Address with R/W bit to I2DAT.
- 2. Write 0x04 to I2CONSET to set the AA bit.
- 3. Write 0x08 to I2CONCLR to clear the SI flag.
- 4. Set up Master Transmit mode data buffer.
- 5. Set up Master Receive mode data buffer.
- 6. Initialize Master data counter.
- 7. Exit

21.10.6.2 State: 0x10

A repeated Start condition has been transmitted. The Slave Address + R/W bit will be transmitted, an ACK bit will be received.

- 1. Write Slave Address with R/W bit to I2DAT.
- 2. Write 0x04 to I2CONSET to set the AA bit.
- 3. Write 0x08 to I2CONCLR to clear the SI flag.

Chapter 21: LPC23XX I2C-bus interfaces I2C0/1/2

- 4. Set up Master Transmit mode data buffer.
- 5. Set up Master Receive mode data buffer.
- 6. Initialize Master data counter.
- 7. Exit

21.10.7 Master Transmitter states

21.10.7.1 State: 0x18

Previous state was State 8 or State 10, Slave Address + Write has been transmitted, ACK has been received. The first data byte will be transmitted, an ACK bit will be received.

- 1. Load I2DAT with first data byte from Master Transmit buffer.
- 2. Write 0x04 to I2CONSET to set the AA bit.
- 3. Write 0x08 to I2CONCLR to clear the SI flag.
- 4. Increment Master Transmit buffer pointer.
- 5. Exit

21.10.7.2 State: 0x20

Slave Address + Write has been transmitted, NOT ACK has been received. A Stop condition will be transmitted.

- 1. Write 0x14 to I2CONSET to set the STO and AA bits.
- 2. Write 0x08 to I2CONCLR to clear the SI flag.
- 3. Exit

21.10.7.3 State: 0x28

Data has been transmitted, ACK has been received. If the transmitted data was the last data byte then transmit a Stop condition, otherwise transmit the next data byte.

- 1. Decrement the Master data counter, skip to step 5 if not the last data byte.
- 2. Write 0x14 to I2CONSET to set the STO and AA bits.
- 3. Write 0x08 to I2CONCLR to clear the SI flag.
- 4. Exit
- 5. Load I2DAT with next data byte from Master Transmit buffer.
- 6. Write 0x04 to I2CONSET to set the AA bit.
- 7. Write 0x08 to I2CONCLR to clear the SI flag.
- 8. Increment Master Transmit buffer pointer
- 9. Exit

21.10.7.4 State: 0x30

Data has been transmitted, NOT ACK received. A Stop condition will be transmitted.

- 1. Write 0x14 to I2CONSET to set the STO and AA bits.
- 2. Write 0x08 to I2CONCLR to clear the SI flag.
- 3. Exit

Chapter 21: LPC23XX I2C-bus interfaces I2C0/1/2

21.10.7.5 State: 0x38

Arbitration has been lost during Slave Address + Write or data. The bus has been released and not addressed Slave mode is entered. A new Start condition will be transmitted when the bus is free again.

- 1. Write 0x24 to I2CONSET to set the STA and AA bits.
- 2. Write 0x08 to I2CONCLR to clear the SI flag.
- 3. Exit

21.10.8 Master Receive states

21.10.8.1 State: 0x40

Previous state was State 08 or State 10. Slave Address + Read has been transmitted, ACK has been received. Data will be

received and ACK returned.

- 1. Write 0x04 to I2CONSET to set the AA bit.
- 2. Write 0x08 to I2CONCLR to clear the SI flag.
- 3. Exit

21.10.8.2 State: 0x48

Slave Address + Read has been transmitted, NOT ACK has been received. A Stop condition will be transmitted.

- 1. Write 0x14 to I2CONSET to set the STO and AA bits.
- 2. Write 0x08 to I2CONCLR to clear the SI flag.
- 3. Exit

21.10.8.3 State: 0x50

Data has been received, ACK has been returned. Data will be read from I2DAT. Additional data will be received. If this is the last data byte then NOT ACK will be returned, otherwise ACK will be returned.

- 1. Read data byte from I2DAT into Master Receive buffer.
- 2. Decrement the Master data counter, skip to step 5 if not the last data byte.
- 3. Write 0x0C to I2CONCLR to clear the SI flag and the AA bit.
- 4. Exit
- 5. Write 0x04 to I2CONSET to set the AA bit.
- 6. Write 0x08 to I2CONCLR to clear the SI flag.
- 7. Increment Master Receive buffer pointer
- 8. Exit

21.10.8.4 State: 0x58

Data has been received, NOT ACK has been returned. Data will be read from I2DAT. A Stop condition will be transmitted.

Chapter 21: LPC23XX I2C-bus interfaces I2C0/1/2

- 1. Read data byte from I2DAT into Master Receive buffer.
- 2. Write 0x14 to I2CONSET to set the STO and AA bits.
- 3. Write 0x08 to I2CONCLR to clear the SI flag.
- 4. Exit

21.10.9 Slave Receiver states

21.10.9.1 State: 0x60

Own Slave Address + Write has been received, ACK has been returned. Data will be received and ACK returned.

- 1. Write 0x04 to I2CONSET to set the AA bit.
- 2. Write 0x08 to I2CONCLR to clear the SI flag.
- 3. Set up Slave Receive mode data buffer.
- 4. Initialize Slave data counter.
- 5. Exit

21.10.9.2 State: 0x68

Arbitration has been lost in Slave Address and R/W bit as bus Master. Own Slave Address + Write has been received, ACK has been returned. Data will be received and ACK will be returned. STA is set to restart Master mode after the bus is free again.

- 1. Write 0x24 to I2CONSET to set the STA and AA bits.
- 2. Write 0x08 to I2CONCLR to clear the SI flag.
- 3. Set up Slave Receive mode data buffer.
- 4. Initialize Slave data counter.
- 5. Exit.

21.10.9.3 State: 0x70

General call has been received, ACK has been returned. Data will be received and ACK returned.

- 1. Write 0x04 to I2CONSET to set the AA bit.
- 2. Write 0x08 to I2CONCLR to clear the SI flag.
- 3. Set up Slave Receive mode data buffer.
- 4. Initialize Slave data counter.
- 5. Exit

21.10.9.4 State: 0x78

Arbitration has been lost in Slave Address + R/W bit as bus Master. General call has been received and ACK has been returned. Data will be received and ACK returned. STA is set to restart Master mode after the bus is free again.

- 1. Write 0x24 to I2CONSET to set the STA and AA bits.
- 2. Write 0x08 to I2CONCLR to clear the SI flag.

UM10211

Chapter 21: LPC23XX I2C-bus interfaces I2C0/1/2

- 3. Set up Slave Receive mode data buffer.
- 4. Initialize Slave data counter.
- 5. Exit

21.10.9.5 State: 0x80

Previously addressed with own Slave Address. Data has been received and ACK has been returned. Additional data will be read.

- 1. Read data byte from I2DAT into the Slave Receive buffer.
- 2. Decrement the Slave data counter, skip to step 5 if not the last data byte.
- 3. Write 0x0C to I2CONCLR to clear the SI flag and the AA bit.
- 4. Exit.
- 5. Write 0x04 to I2CONSET to set the AA bit.
- 6. Write 0x08 to I2CONCLR to clear the SI flag.
- 7. Increment Slave Receive buffer pointer.
- 8. Exit

21.10.9.6 State: 0x88

Previously addressed with own Slave Address . Data has been received and NOT ACK has been returned. Received data will not be saved. Not addressed Slave mode is entered.

- 1. Write 0x04 to I2CONSET to set the AA bit.
- 2. Write 0x08 to I2CONCLR to clear the SI flag.
- 3. Exit

21.10.9.7 State: 0x90

Previously addressed with general call. Data has been received, ACK has been returned. Received data will be saved. Only the first data byte will be received with ACK. Additional data will be received with NOT ACK.

- 1. Read data byte from I2DAT into the Slave Receive buffer.
- 2. Write 0x0C to I2CONCLR to clear the SI flag and the AA bit.
- 3. Exit

21.10.9.8 State: 0x98

Previously addressed with general call. Data has been received, NOT ACK has been returned. Received data will not be saved. Not addressed Slave mode is entered.

- 1. Write 0x04 to I2CONSET to set the AA bit.
- 2. Write 0x08 to I2CONCLR to clear the SI flag.
- 3. Exit

21.10.9.9 State: 0xA0

A Stop condition or repeated Start has been received, while still addressed as a Slave. Data will not be saved. Not addressed Slave mode is entered.

Chapter 21: LPC23XX I2C-bus interfaces I2C0/1/2

- 1. Write 0x04 to I2CONSET to set the AA bit.
- 2. Write 0x08 to I2CONCLR to clear the SI flag.
- 3. Exit

21.10.10 Slave Transmitter States

21.10.10.1 State: 0xA8

Own Slave Address + Read has been received, ACK has been returned. Data will be transmitted, ACK bit will be received.

- 1. Load I2DAT from Slave Transmit buffer with first data byte.
- 2. Write 0x04 to I2CONSET to set the AA bit.
- 3. Write 0x08 to I2CONCLR to clear the SI flag.
- 4. Set up Slave Transmit mode data buffer.
- 5. Increment Slave Transmit buffer pointer.
- 6. Exit

21.10.10.2 State: 0xB0

Arbitration lost in Slave Address and R/W bit as bus Master. Own Slave Address + Read has been received, ACK has been returned. Data will be transmitted, ACK bit will be received. STA is set to restart Master mode after the bus is free again.

- 1. Load I2DAT from Slave Transmit buffer with first data byte.
- 2. Write 0x24 to I2CONSET to set the STA and AA bits.
- 3. Write 0x08 to I2CONCLR to clear the SI flag.
- 4. Set up Slave Transmit mode data buffer.
- 5. Increment Slave Transmit buffer pointer.
- 6. Exit

21.10.10.3 State: 0xB8

Data has been transmitted, ACK has been received. Data will be transmitted, ACK bit will be received.

- 1. Load I2DAT from Slave Transmit buffer with data byte.
- 2. Write 0x04 to I2CONSET to set the AA bit.
- 3. Write 0x08 to I2CONCLR to clear the SI flag.
- 4. Increment Slave Transmit buffer pointer.
- 5. Exit

21.10.10.4 State: 0xC0

Data has been transmitted, NOT ACK has been received. Not addressed Slave mode is entered.

- 1. Write 0x04 to I2CONSET to set the AA bit.
- 2. Write 0x08 to I2CONCLR to clear the SI flag.

UM10211

Chapter 21: LPC23XX I2C-bus interfaces I2C0/1/2

3. Exit

21.10.10.5 State: 0xC8

The last data byte has been transmitted, ACK has been received. Not addressed Slave mode is entered.

- 1. Write 0x04 to I2CONSET to set the AA bit.
- 2. Write 0x08 to I2CONCLR to clear the SI flag.
- 3. Exit

UM10211

Chapter 22: LPC23XX I2S interface

Rev. 4.1 — 5 September 2012

User manual

22.1 Basic configuration

The I²S interface is configured using the following registers:

- Power: In the PCONP register (<u>Table 56</u>), set bit PCI2S.
 Remark: On reset, the I²S interface is disabled (PCI2S = 0).
- 2. Clock: In PCLK_SEL1 select PCLK_I2S, see Section 4.7.4.
- 3. Pins: Select I²S pins and their modes in PINSEL0 to PINSEL4 and PINMODE0 to PINMODE4 (see <u>Section 9.5</u>).
- 4. Interrupts are enabled in the VIC using the VICIntEnable register (Table 76).

22.2 Features

The I2S bus provides a standard communication interface for digital audio applications.

The I2S bus specification defines a 3-wire serial bus, having one data, one clock, and one word select signal. The basic I2S connection has one master, which is always the master, and one slave. The I2S interface on the LPC2300 provides a separate transmit and receive channel, each of which can operate as either a master or a slave.

- The I2S input can operate in both master and slave mode.
 The I2S output can operate in both master and slave mode, independent of the I2S input.
- Capable of handling 8, 16, and 32 bit word sizes.
- Mono and stereo audio data supported.
- The sampling frequency can range (in practice) from 16 96 kHz. (16, 22.05, 32, 44.1, 48, 96 kHz) for audio applications.
- Word Select period in master mode is configurable (separately for I²S input and I²S output).
- Two 8 byte FIFO data buffers are provided, one for transmit and one for receive.
- Generates interrupt requests when buffer levels cross a programmable boundary.
- Two DMA requests, controlled by programmable buffer levels. These are connected to the General Purpose DMA block.
- Controls include reset, stop and mute options separately for I2S input and I2S output.

22.3 Description

The I²S performs serial data out via the transmit channel and serial data in via the receive channel. These support the NXP Inter IC Audio format for 8, 16 and 32 bits audio data both for stereo and mono modes. Configuration, data access and control is performed by a APB register set. Data streams are buffered by FIFOs with a depth of 8 bytes.

Chapter 22: LPC23XX I2S interface

The I²S receive and transmit stage can operate independently in either slave or master mode. Within the I²S module the difference between these modes lies in the word select (WS) signal which determines the timing of data transmissions. Data words start on the next falling edge of the transmitting clock after a WS change. In stereo mode when WS is low left data is transmitted and right data when WS is high. In mono mode the same data is transmitted twice, once when WS is low and again when WS is high.

- In master mode (ws_sel = 0), word select is generated internally with a 9 bit counter.
 The half period count value of this counter can be set in the control register.
- In slave mode (ws_sel = 1) word select is input from the relevant bus pin.
- When an I²S bus is active, the word select, receive clock and transmit clock signals
 are sent continuously by the bus master, while data is sent continuously by the
 transmitter.
- Disabling the I²S can be done with the stop or mute control bits separately for the transmit and receive.
- The stop bit will disable accesses by the transmit channel or the receive channel to the FIFOs and will place the transmit channel in mute mode.
- The mute control bit will place the transmit channel in mute mode. In mute mode, the
 transmit channel FIFO operates normally, but the output is discarded and replaced by
 zeroes. This bit does not affect the receive channel, data reception can occur
 normally.

22.4 Pin descriptions


Table 459. Pin descriptions

Pin Name	Туре	Description
I2SRX_CLK	Input/Output	Receive Clock. A clock signal used to synchronize the transfer of data on the receive channel. It is driven by the master and received by the slave. Corresponds to the signal SCK in the I ² S bus specification.
I2SRX_WS	Input/Output	Receive Word Select. Selects the channel from which data is to be received. It is driven by the master and received by the slave. Corresponds to the signal WS in the I ² S bus specification.
		WS = 0 indicates that data is being received by channel 1 (left channel).
		WS = 1 indicates that data is being received by channel 2 (right channel).
I2SRX_SDA	Input/Output	Receive Data. Serial data, received MSB first. It is driven by the transmitter and read by the receiver. Corresponds to the signal SD in the I ² S bus specification.

Chapter 22: LPC23XX I2S interface

Table 459. Pin descriptions

Pin Name	Туре	Description
I2STX_CLK	Input/Output	Transmit Clock. A clock signal used to synchronize the transfer of data on the transmit channel. It is driven by the master and received by the slave. Corresponds to the signal SCK in the I ² S bus specification.
I2STX_WS	Input/Output	Transmit Word Select. Selects the channel to which data is being sent. It is driven by the master and received by the slave. Corresponds to the signal WS in the I ² S bus specification.
		WS = 0 indicates that data is being sent to channel 1 (left channel).
		WS = 1 indicates that data is being sent to channel 2 (right channel).
I2STX_SDA	Input/Output	Transmit Data. Serial data, sent MSB first. It is driven by the transmitter and read by the receiver. Corresponds to the signal SD in the I ² S bus specification.

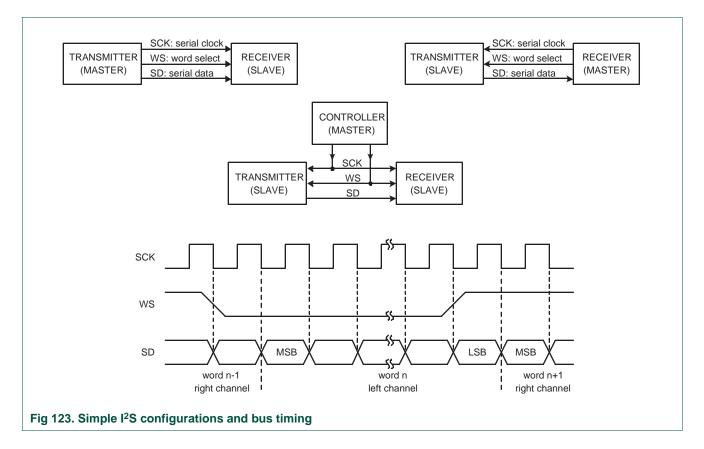

22.5 Register description

<u>Table 460</u> shows the registers associated with the I²S interface and a summary of their functions. Following the table are details for each register.

Chapter 22: LPC23XX I2S interface

Table 460. I²S register map

Name	Description	Access	Reset Value[1]	Address
I2SDAO	Digital Audio Output Register. Contains control bits for the I ² S transmit channel.	R/W		0xE008 8000
I2SDAI	Digital Audio Input Register. Contains control bits for the I ² S receive channel.	R/W		0xE008 8004
I2STXFIFO	Transmit FIFO. Access register for the 8 \times 32 bit transmitter FIFO.	WO		0xE008 8008
I2SRXFIFO	Receive FIFO. Access register for the 8 \times 32 bit receiver FIFO.	RO		0xE008 800C
12SSTATE	Status Feedback Register. Contains status information about the I ² S interface.	RO		0xE008 8010
I2SDMA1	DMA Configuration Register 1. Contains control information for DMA request 1.	R/W		0xE008 8014
I2SDMA2	DMA Configuration Register 2. Contains control information for DMA request 2.	R/W		0xE008 8018
I2SIRQ	Interrupt Request Control Register. Contains bits that control how the I ² S interrupt request is generated.	R/W		0xE008 801C
I2STXRATE	Transmit bit rate divider. This register determines the I ² S transmit bit rate by specifying the value to divide pclk by in order to produce the transmit bit clock.	R/W		0xE008 8020
I2SRXRATE	Receive bit rate divider. This register determines the I ² S receive bit rate by specifying the value to divide pclk by in order to produce the receive bit clock.	R/W		0xE008 8024

^[1] Reset Value reflects the data stored in used bits only. It does not include reserved bits content.

22.5.1 Digital Audio Output Register (I2SDAO - 0xE008 8000)

The I2SDAO register controls the operation of the I^2S transmit channel. The function of bits in DAO are shown in Table 461.

Table 461: Digital Audio Output register (I2SDAO - address 0xE008 8000) bit description

Bit	Symbol	Value	Description	Reset Value
1:0	wordwidth		Selects the number of bytes in data as follows:	01
		00	8 bit data	
		01	16 bit data	
		10	Reserved, do not use this setting	
		11	32 bit data	
2	mono		When one, data is of monaural format. When zero, the data is in stereo format.	0
3	stop		Disables accesses on FIFOs, places the transmit channel in mute mode.	0
4	reset		Asynchronously reset the transmit channel and FIFO.	0

Chapter 22: LPC23XX I2S interface

Table 461: Digital Audio Output register (I2SDAO - address 0xE008 8000) bit description

Bit	Symbol	Value	Description	Reset Value
5	ws_sel		When 0 master mode, when 1 slave mode.	1
14:6	ws_halfperiod		Word select half period minus one, i.e. WS 64clk period -> ws_halfperiod = 31.	0x1F
15	mute		When true, the transmit channel sends only zeroes.	1

22.5.2 Digital Audio Input Register (I2SDAI - 0xE008 8004)

The I2SDAI register controls the operation of the I^2S receive channel. The function of bits in DAI are shown in <u>Table 462</u>.

Table 462: Digital Audio Input register (I2SDAI - address 0xE008 8004) bit description

Bit	Symbol	Value	Description	Reset Value
1:0	wordwidth		Selects the number of bytes in data as follows:	01
		00	8 bit data	
		01	16 bit data	
		10	Reserved, do not use this setting	
		11	32 bit data	
2	mono		When one, data is of monaural format. When zero, the data is in stereo format.	0
3	stop		Disables accesses on FIFOs, places the transmit channel in mute mode.	0
4	reset		Asynchronously reset the transmit channel and FIFO.	0
5	ws_sel		When 0 master mode, when 1 slave mode.	1
14:6	ws_halfperiod		Word select half period minus one, i.e. WS 64clk period -> ws_halfperiod = 31.	0x1F
15	Unused		Unused.	1

22.5.3 Transmit FIFO Register (I2STXFIFO - 0xE008 8008)

The I2STXFIFO register provides access to the transmit FIFO. The function of bits in I2STXFIFO are shown in Table 463.

Table 463: Transmit FIFO register (I2STXFIFO - address 0xE008 8008) bit description

Bit	Symbol	Description	Reset Value
31:0	I2STXFIFO	8×32 bits transmit FIFO.	Level = 0

22.5.4 Receive FIFO Register (I2SRXFIFO - 0xE008 800C)

The I2SRXFIFO register provides access to the receive FIFO. The function of bits in I2SRXFIFO are shown in Table 464.

Table 464: Receive FIFO register (I2RXFIFO - address 0xE008 800C) bit description

Bit	Symbol	Description	Reset Value
31:0	I2SRXFIFO	8×32 bits transmit FIFO.	level = 0

Chapter 22: LPC23XX I2S interface

22.5.5 Status Feedback Register (I2SSTATE - 0xE008 8010)

The I2SSTATE register provides status information about the I2S interface. The meaning of bits in I2SSTATE are shown in Table 465.

Table 465: Status Feedback register (I2SSTATE - address 0xE008 8010) bit description

Bit	Symbol	Description	Reset Value
0	irq	This bit reflects the presence of Receive Interrupt or Transmit Interrupt.	0
1	dmareq1	This bit reflects the presence of Receive or Transmit DMA Request 1.	0
2	dmareq2	This bit reflects the presence of Receive or Transmit DMA Request 2.	0
7:3	Unused	Unused.	0
15:8	rx_level	Reflects the current level of the Receive FIFO.	0
23:16	tx_level	Reflects the current level of the Transmit FIFO.	0
31:24	-	Reserved, user software should not write ones to reserved bits. The value read from a reserved bit is not defined.	NA

22.5.6 DMA Configuration Register 1 (I2SDMA1 - 0xE008 8014)

The I2SDMA1 register controls the operation of DMA request 1. The function of bits in I2SDMA1 are shown in <u>Table 466</u>. Refer to the General Purpose DMA Controller chapter for details of DMA operation.

Table 466: DMA Configuration register 1 (I2SDMA1 - address 0xE008 8014) bit description

Bit	Symbol	Description	Reset Value
0	rx_dma1_enable	When 1, enables DMA1 for I ² S receive.	0
1	tx_dma1_enable	When 1, enables DMA1 for I ² S transmit.	0
7:2	Unused	Unused.	0
15:8	rx_depth_dma1	Set the FIFO level that triggers a receive DMA request on DMA1.	0
23:16	tx_depth_dma1	Set the FIFO level that triggers a transmit DMA request on DMA1.	0
31:24	-	Reserved, user software should not write ones to reserved bits. The value read from a reserved bit is not defined.	NA

22.5.7 DMA Configuration Register 2 (I2SDMA2 - 0xE008 8018)

The I2SDMA2 register controls the operation of DMA request 2. The function of bits in I2SDMA2 are shown in Table 461.

Table 467: DMA Configuration register 2 (I2SDMA2 - address 0xE008 8018) bit description

	_	-	=
Bit	Symbol	Description	Reset Value
0	rx_dma2_enable	When 1, enables DMA1 for I ² S receive.	0
1	tx_dma2_enable	When 1, enables DMA1 for I ² S transmit.	0
7:2	Unused	Unused.	0

Chapter 22: LPC23XX I2S interface

Table 467: DMA Configuration register 2 (I2SDMA2 - address 0xE008 8018) bit description

Bit	Symbol	Description	Reset Value
15:8	rx_depth_dma2	Set the FIFO level that triggers a receive DMA request on DMA2.	0
23:16	tx_depth_dma2	Set the FIFO level that triggers a transmit DMA request on DMA2.	0
31:24	-	Reserved, user software should not write ones to reserved bits. The value read from a reserved bit is not defined.	NA

22.5.8 Interrupt Request Control Register (I2SIRQ - 0xE008 801C)

The I2SIRQ register controls the operation of the I²S interrupt request. The function of bits in I2SIRQ are shown in Table 461.

Table 468: Interrupt Request Control register (I2SIRQ - address 0xE008 801C) bit description

			-
Bit	Symbol	Description	Reset Value
0	rx_Irq_enable	When 1, enables I2S receive interrupt.	0
1	tx_Irq_enable	When 1, enables I2S transmit interrupt.	0
7:2	Unused	Unused.	0
15:8	rx_depth_Irq	Set the FIFO level on which to create an irq request.	0
23:16	tx_depth_Irq	Set the FIFO level on which to create an irq request.	0
31:24	-	Reserved, user software should not write ones to reserved bits. The value read from a reserved bit is not defined.	NA

22.5.9 Transmit Clock Rate Register (I2STXRATE - 0xE008 8020)

The bit rate for the I²S transmitter is determined by the value of the I2STXRATE register. The value depends on the audio sample rate desired, and the data size and format (stereo/mono) used. For example, a 48 kHz sample rate for 16 bit stereo data requires a bit rate of $48,000 \times 16 \times 2 = 1.536$ MHz.

Table 469: Transmit Clock Rate register (I2TXRATE - address 0xE008 8020) bit description

Bit	Symbol	Description	Reset Value
9:0	tx_rate	I^2S transmit bit rate. This value plus one is used to divide PCLK by to produce the transmit bit clock. Ten bits of divide supports a wide range of I^2S rates over a wide range of pclk rates.	0
15:10	Unused	Unused.	0

22.5.10 Receive Clock Rate Register (I2SRXRATE - 0xE008 8024)

The bit rate for the I²S receiver is determined by the value of the I2SRXRATE register. The value depends on the audio sample rate, as well as the data size and format used. The calculation is the same as for I2STXRATE.

Chapter 22: LPC23XX I2S interface

Table 470: Receive Clock Rate register (I2SRXRATE - address 0xE008 8024) bit description

Bit	Symbol	Description	Reset Value
9:0	rx_rate	I ² S receive bit rate. This value plus one is used to divide PCLK by to produce the receive bit clock. Ten bits of divide supports a wide range of I ² S rates over a wide range of pclk rates.	0
15:10	Unused	Unused.	0

22.6 I²S transmit and receive interfaces

The I²S interface can transmit and receive 8, 16 or 32 bits stereo or mono audio information. Some details of I²S implementation are:

- When the FIFO is empty, the transmit channel will repeat transmitting the same data until new data is written to the FIFO.
- When mute is true, the data value 0 is transmitted.
- When mono is false, two successive data words are respectively left and right data.
- Data word length is determined by the wordwidth value in the configuration register.
 There is a separate wordwidth value for the receive channel and the transmit channel.
 - 0: word is considered to contain four 8 bits data words.
 - 1: word is considered to contain two 16 bits data words.
 - 3: word is considered to contain one 32 bits data word.
- When the transmit FIFO contains insufficient data the transmit channel will repeat transmitting the last data until new data is available. This can occur when the microprocessor or the DMA at some time is unable to provide new data fast enough. Because of this delay in new data there is a need to fill the gap, which is accomplished by continuing to transmit the last sample. The data is not muted as this would produce an noticeable and undesirable effect in the sound.
- The transmit channel and the receive channel only handle 32 bit aligned words, data chunks must be clipped or extended to a multiple of 32 bits.

When switching between data width or modes the I2S must be reset via the reset bit in the control register in order to ensure correct synchronization. It is advisable to set the stop bit also until sufficient data has been written in the transmit FIFO. Note that when stopped data output is muted.

All data accesses to FIFO's are 32 bits. Figure 124 shows the possible data sequences.

A data sample in the FIFO consists of:

- 1×32 bits in 8 or 16 bit stereo modes.
- 1×32 bits in mono modes.
- 2×32 bits, first left data, second right data, in 32 bit stereo modes.

Data is read from the transmit FIFO after the falling edge of WS, it will be transferred to the transmit clock domain after the rising edge of WS. On the next falling edge of WS the left data will be loaded in the shift register and transmitted and on the following rising edge of WS the right data is loaded and transmitted.

Chapter 22: LPC23XX I2S interface

The receive channel will start receiving data after a change of WS. When word select becomes low it expects this data to be left data, when WS is high received data is expected to be right data. Reception will stop when the bit counter has reached the limit set by wordwidth. On the next change of WS the received data will be stored in the appropriate hold register. When complete data is available it will be written into the receive FIFO.

22.7 FIFO controller

Handling of data for transmission and reception is performed via the FIFO controller which can generate two DMA requests and an interrupt request. The controller consists of a set of comparators which compare FIFO levels with depth settings contained in registers. The current status of the level comparators can be seen in the APB status register.

Table 471. Conditions for FIFO level comparison

Level Comparison	Condition
dmareq_tx_1	tx_depth_dma1 >= tx_level
dmareq_rx_1	rx_depth_dma1 <= rx_level
dmareq_tx_2	tx_depth_dma2 >= tx_level
dmareq_rx_2	rx_depth_dma2 <= rx_level
irq_tx	tx_depth_irq >= tx_level
irq_rx	rx_depth_irq <= rx_level

System signaling occurs when a level detection is true and enabled.

Table 472. DMA and interrupt request generation

System Signaling	Condition
irq	(irq_rx & rx_irq_enable) (irq_tx & tx_irq_enable
dmareq[0]	(dmareq_tx_1 & tx_dma1_enable) (dmareq_rx_1 & rx_dma1_enable)
dmareq[1]	(dmareq_tx_2 & tx_dma2_enable) (dmareq_rx_2 & rx_dma2_enable)

Table 473. Status feedback in the I2SSTATE register

Status Feedback	Status
irq	irq_rx irq_tx
dmareq1	(dmareq_tx_1 dmareq_rx_1)
dmareq2	(dmareq_rx_2 dmareq_tx_2)

Chapter 22: LPC23XX I2S interface

7 N+3	0 7	N + 2	0 7	N + 1	0 7	N	0	
1	0 7		0 7		0 7		0	
Stereo 8-bit data r	mode							
7 LEFT + 1	0 7	RIGHT + 1	0 7	LEFT	0 7	RIGHT	0	
	-		-		-			
Mono 16-bit data	modo							
WOULD TO-DIT GATA								
15	N + 1		0 15		N		0	
Stereo 16-bit data	mode							
	LEFT				RIGHT			
15	LEFT		0 15		RIGHT		0	
15	LEFT		0 15		RIGHT		0	
15 Mono 32-bit data			0 15		RIGHT		0	
Mono 32-bit data			0 15 N		RIGHT		<u> </u>	
			•		RIGHT		0	
Mono 32-bit data	mode		•		RIGHT		<u> </u>	
Mono 32-bit data	mode		•		RIGHT		<u> </u>	
Mono 32-bit data	mode		•		RIGHT		0	N
Mono 32-bit data	mode		N		RIGHT		0	N

UM10211

Chapter 23: LPC23XX Timer0/1/2/3

Rev. 4.1 — 5 September 2012

User manual

23.1 Basic configuration

The Timer0/1/2/3 peripherals are configured using the following registers:

- Power: In the PCONP register (<u>Table 56</u>), set bits PCTIM0/1/2/3.
 Remark: On reset, Timer0/1 are enabled (PCTIM0/1 = 1), and Timer2/3 are disabled (PCTIM2/3 = 0).
- 2. Peripheral clock: In the PCLK_SEL0 register (<u>Table 49</u>), select PCLK_TIMER0/1; in the PCLK_SEL1 register (<u>Table 50</u>), select PCLK_TIMER2/3.
- 3. Pins: Select Timer0/1/2/3 pins and pin modes in registers PINSELn and PINMODEn (see Section 9.5).
- Interrupts: See register T0/1/2/3MCR (<u>Table 479</u>) and T0/1/2/3CCR (<u>Table 480</u>) for match and capture events. Interrupts are enabled in the VIC using the VICIntEnable register (<u>Table 76</u>).

23.2 Features

Remark: The four Timer/Counters are identical except for the peripheral base address. A minimum of two Capture inputs and two Match outputs are pinned out for all four timers, with a choice of several pins for each. Timer 1 brings out a third Match output, while Timers 2 and 3 bring out all four Match outputs.

- A 32 bit Timer/Counter with a programmable 32 bit Prescaler.
- Counter or Timer operation
- Up to two 32 bit capture channels per timer which can take a snapshot of the timer value when an input signal transitions. A capture event may also optionally generate an interrupt.
- Four 32 bit match registers that allow:
 - Continuous operation with optional interrupt generation on match.
 - Stop timer on match with optional interrupt generation.
 - Reset timer on match with optional interrupt generation.
- Up to four external outputs corresponding to match registers, with the following capabilities:
 - Set low on match.
 - Set high on match.
 - Toggle on match.
 - Do nothing on match.

23.3 Applications

- Interval Timer for counting internal events.
- Pulse Width Demodulator via Capture inputs.

Chapter 23: LPC23XX Timer0/1/2/3

• Free running timer.

23.4 Description

The Timer/Counter is designed to count cycles of the peripheral clock (PCLK) or an externally-supplied clock, and can optionally generate interrupts or perform other actions at specified timer values, based on four match registers. It also includes four capture inputs to trap the timer value when an input signal transitions, optionally generating an interrupt.

23.5 Pin description

Table 474 gives a brief summary of each of the Timer/Counter related pins.

Table 474. Timer/Counter pin description

Pin	Туре	Description			
CAP0[1:0] CAP1[1:0] CAP2[1:0] CAP3[1:0]	•	Capture Signals- A transition on a capture pin can be configured to load of the Capture Registers with the value in the Timer Counter and optional generate an interrupt. Capture functionality can be selected from a number of pins. When more than one pin is selected for a Capture input on a sing TIMER0/1 channel, the pin with the lowest Port number is used			
		Timer/Counter block can select a capture signal as a clock source instead of the PCLK derived clock. For more details see <u>Section 23.6.3</u> .			
MAT0[1:0] MAT1[1:0] MAT2[3:0] MAT3[1:0]	Output	External Match Output - When a match register (MR3:0) equals the timer counter (TC) this output can either toggle, go low, go high, or do nothing. The External Match Register (EMR) controls the functionality of this output. Match Output functionality can be selected on a number of pins in parallel.			

23.5.1 Multiple CAP and MAT pins

Software can select multiple pins for most of the CAP or MAT functions in the Pin Select registers, which are described in <u>Section 9.3</u>. When more than one pin is selected for a MAT output, all such pins are driven identically. When more than one pin is selected for a CAP input, the pin with the lowest Port number is used.

23.6 Register description

Each Timer/Counter contains the registers shown in <u>Table 475</u> ("Reset Value" refers to the data stored in used bits only; it does not include reserved bits content). More detailed descriptions follow.

Chapter 23: LPC23XX Timer0/1/2/3

Table 475. TIMER/COUNTER0-3 register map

Generic Name	Description	Access	Reset Value[1]	TIMERn Register/ Name & Address
IR	Interrupt Register. The IR can be written to clear interrupts. The IR can be read to identify which of eight possible interrupt sources are pending.	R/W	0	T0IR - 0xE000 4000 T1IR - 0xE000 8000 T2IR - 0xE007 0000 T3IR - 0xE007 4000
TCR	Timer Control Register. The TCR is used to control the Timer Counter functions. The Timer Counter can be disabled or reset through the TCR.	R/W	0	T0TCR - 0xE000 4004 T1TCR - 0xE000 8004 T2TCR - 0xE007 0004 T3TCR - 0xE007 4004
TC	Timer Counter. The 32 bit TC is incremented every PR+1 cycles of PCLK. The TC is controlled through the TCR.	R/W	0	T0TC - 0xE000 4008 T1TC - 0xE000 8008 T2TC - 0xE007 0008 T3TC - 0xE007 4008
PR	Prescale Register. The Prescale Counter (below) is equal to this value, the next clock increments the TC and clears the PC.	R/W	0	T0PR - 0xE000 400C T1PR - 0xE000 800C T2PR - 0xE007 000C T3PR - 0xE007 400C
PC	Prescale Counter. The 32 bit PC is a counter which is incremented to the value stored in PR. When the value in PR is reached, the TC is incremented and the PC is cleared. The PC is observable and controllable through the bus interface.	R/W	0	T0PC - 0xE000 4010 T1PC - 0xE000 8010 T2PC - 0xE007 0010 T3PC - 0xE007 4010
MCR	Match Control Register. The MCR is used to control if an interrupt is generated and if the TC is reset when a Match occurs.	R/W	0	T0MCR - 0xE000 4014 T1MCR - 0xE000 8014 T2MCR - 0xE007 0014 T3MCR - 0xE007 4014
MR0	Match Register 0. MR0 can be enabled through the MCR to reset the TC, stop both the TC and PC, and/or generate an interrupt every time MR0 matches the TC.	R/W	0	T0MR0 - 0xE000 4018 T1MR0 - 0xE000 8018 T2MR0 - 0xE007 0018 T3MR0 - 0xE007 4018
MR1	Match Register 1. See MR0 description.	R/W	0	T0MR1 - 0xE000 401C T1MR1 - 0xE000 801C T2MR1 - 0xE007 001C T3MR1 - 0xE007 401C
MR2	Match Register 2. See MR0 description.	R/W	0	T0MR2 - 0xE000 4020 T1MR2 - 0xE000 8020 T2MR2 - 0xE007 0020 T3MR2 - 0xE007 4020
MR3	Match Register 3. See MR0 description.	R/W	0	T0MR3 - 0xE000 4024 T1MR3 - 0xE000 8024 T2MR3 - 0xE007 0024 T3MR3 - 0xE007 4024
CCR	Capture Control Register. The CCR controls which edges of the capture inputs are used to load the Capture Registers and whether or not an interrupt is generated when a capture takes place.	R/W	0	T0CCR - 0xE000 4028 T1CCR - 0xE000 8028 T2CCR - 0xE007 0028 T3CCR - 0xE007 4028

Chapter 23: LPC23XX Timer0/1/2/3

Table 475. TIMER/COUNTER0-3 register map

Generic Name	Description	Access	Reset Value[1]	TIMERn Register/ Name & Address
CR0	Capture Register 0. CR0 is loaded with the value of TC when there is an event on the CAPn.0 (CAP0.0, CAP1.0, CAP2.0, or CAP3.0) input.	RO	0	T0CR0 - 0xE000 402C T1CR0 - 0xE000 802C T2CR0 - 0xE007 002C T3CR0 - 0xE007 402C
CR1	Capture Register 1. CR1 is loaded with the value of TC when there is an event on the CAPn.0 (CAP1.0, CAP1.1, CAP2.1, or CAP3.1) input.	RO	0	T0CR1 - 0xE000 4030 T1CR1 - 0xE000 8030 T2CR1 - 0xE007 0030 T3CR1 - 0xE007 4030
EMR	External Match Register. The EMR controls the external match pins MATn.0-3 (n corresponds to timers 0 to 3).	R/W	0	T0EMR - 0xE000 403C T1EMR - 0xE000 803C T2EMR - 0xE007 003C T3EMR - 0xE007 403C
CTCR	Count Control Register. The CTCR selects between Timer and Counter mode, and in Counter mode selects the signal and edge(s) for counting.	R/W	0	T0CTCR - 0xE000 4070 T1CTCR - 0xE000 8070 T2CTCR - 0xE007 0070 T3CTCR - 0xE007 4070

^[1] Reset Value reflects the data stored in used bits only. It does not include reserved bits content.

23.6.1 Interrupt Register (T[0/1/2/3]IR - 0xE000 4000, 0xE000 8000, 0xE007 0000, 0xE007 4000)

The Interrupt Register consists of four bits for the match interrupts and four bits for the capture interrupts. If an interrupt is generated then the corresponding bit in the IR will be high. Otherwise, the bit will be low. Writing a logic one to the corresponding IR bit will reset the interrupt. Writing a zero has no effect.

Table 476: Interrupt Register (T[0/1/2/3]IR - addresses 0xE000 4000, 0xE000 8000, 0xE007 0000, 0xE007 4000) bit description

Bit	Symbol	Description	Reset Value
0	MR0 Interrupt	Interrupt flag for match channel 0.	0
1	MR1 Interrupt	Interrupt flag for match channel 1.	0
2	MR2 Interrupt	Interrupt flag for match channel 2.	0
3	MR3 Interrupt	Interrupt flag for match channel 3.	0
4	CR0 Interrupt	Interrupt flag for capture channel 0 event.	0
5	CR1 Interrupt	Interrupt flag for capture channel 1 event.	0
6	-	Reserved	0
7	-	Reserved	0

23.6.2 Timer Control Register (T[0/1/2/3]CR - 0xE000 4004, 0xE000 8004, 0xE007 0004, 0xE007 4004)

The Timer Control Register (TCR) is used to control the operation of the Timer/Counter.

Chapter 23: LPC23XX Timer0/1/2/3

Table 477: Timer Control Register (TCR, TIMERn: TnTCR - addresses 0xE000 4004, 0xE000 8004, 0xE007 0004, 0xE007 4004) bit description

Bit	Symbol	Description	Reset Value
0	Counter Enable	When one, the Timer Counter and Prescale Counter are enabled for counting. When zero, the counters are disabled.	0
1	Counter Reset	When one, the Timer Counter and the Prescale Counter are synchronously reset on the next positive edge of PCLK. The counters remain reset until TCR[1] is returned to zero.	0
7:2	-	Reserved, user software should not write ones to reserved bits. The value read from a reserved bit is not defined.	NA

23.6.3 Count Control Register (T[0/1/2/3]CTCR - 0xE000 4070, 0xE000 8070, 0xE007 0070, 0xE007 4070)

The Count Control Register (CTCR) is used to select between Timer and Counter mode, and in Counter mode to select the pin and edge(s) for counting.

When Counter Mode is chosen as a mode of operation, the CAP input (selected by the CTCR bits 3:2) is sampled on every rising edge of the PCLK clock. After comparing two consecutive samples of this CAP input, one of the following four events is recognized: rising edge, falling edge, either of edges or no changes in the level of the selected CAP input. Only if the identified event corresponds to the one selected by bits 1:0 in the CTCR register, the Timer Counter register will be incremented.

Effective processing of the externally supplied clock to the counter has some limitations. Since two successive rising edges of the PCLK clock are used to identify only one edge on the CAP selected input, the frequency of the CAP input can not exceed one quarter of the PCLK clock. Consequently, duration of the high/low levels on the same CAP input in this case can not be shorter than 1/(2 PCLK).

Table 478: Count Control Register (T[0/1/2/3]CTCR - addresses 0xE000 4070, 0xE000 8070, 0xE007 0070, 0xE007 4070) bit description

Bit	Symbol	Value	Description	Reset Value
1:0 Counter/ Timer Mode			This field selects which rising PCLK edges can increment Timer's Prescale Counter (PC), or clear PC and increment Timer Counter (TC).	
			Timer Mode: the TC is incremented when the Prescale Counter matches the Prescale Register.	
	00 Timer Mode: every rising PCLK edge		Timer Mode: every rising PCLK edge	
		01	Counter Mode: TC is incremented on rising edges on the CAP input selected by bits 3:2.	
		10	Counter Mode: TC is incremented on falling edges on the CAP input selected by bits 3:2.	
		11	Counter Mode: TC is incremented on both edges on the CAP input selected by bits 3:2.	

Chapter 23: LPC23XX Timer0/1/2/3

Table 478: Count Control Register (T[0/1/2/3]CTCR - addresses 0xE000 4070, 0xE000 8070, 0xE007 0070, 0xE007 4070) bit description

Bit	Symbol	Value	Description	Reset Value
3:2	Count Input		When bits 1:0 in this register are not 00, these bits select which CAP pin is sampled for clocking:	00
	Select	00	CAPn.0 for TIMERn	
		01	CAPn.1 for TIMERn	
			Note: If Counter mode is selected for a particular CAPn input in the TnCTCR, the 3 bits for that input in the Capture Control Register (TnCCR) must be programmed as 000. However, capture and/or interrupt can be selected for the other CAPn input in the same timer.	
		10	reserved	
		11	reserved	
7:4	-	-	Reserved, user software should not write ones to reserved bits. The value read from a reserved bit is not defined.	

23.6.4 Timer Counter registers (T0TC - T3TC, 0xE000 4008, 0xE000 8008, 0xE007 0008, 0xE007 4008)

The 32-bit Timer Counter register is incremented when the prescale counter reaches its terminal count. Unless it is reset before reaching its upper limit, the Timer Counter will count up through the value 0xFFFF FFFF and then wrap back to the value 0x0000 0000. This event does not cause an interrupt, but a match register can be used to detect an overflow if needed.

23.6.5 Prescale register (T0PR - T3PR, 0xE000 400C, 0xE000 800C, 0xE007 000C, 0xE007 400C)

The 32-bit Prescale register specifies the maximum value for the Prescale Counter.

23.6.6 Prescale Counter register (T0PC - T3PC, 0xE000 4010, 0xE000 8010, 0xE007 0010, 0xE007 4010)

The 32-bit Prescale Counter controls division of PCLK by some constant value before it is applied to the Timer Counter. This allows control of the relationship of the resolution of the timer versus the maximum time before the timer overflows. The Prescale Counter is incremented on every PCLK. When it reaches the value stored in the Prescale register, the Timer Counter is incremented and the Prescale Counter is reset on the next PCLK. This causes the Timer Counter to increment on every PCLK when PR = 0, every 2 PCLKs when PR = 1, etc.

23.6.7 Match Registers (MR0 - MR3)

The Match register values are continuously compared to the Timer Counter value. When the two values are equal, actions can be triggered automatically. The action possibilities are to generate an interrupt, reset the Timer Counter, or stop the timer. Actions are controlled by the settings in the MCR register.

Chapter 23: LPC23XX Timer0/1/2/3

23.6.8 Match Control Register (T[0/1/2/3]MCR - 0xE000 4014, 0xE000 8014, 0xE007 0014, 0xE007 4014)

The Match Control Register is used to control what operations are performed when one of the Match Registers matches the Timer Counter. The function of each of the bits is shown in Table 479.

Table 479: Match Control Register (T[0/1/2/3]MCR - addresses 0xE000 4014, 0xE000 8014, 0xE007 0014, 0xE007 4014) bit description

Bit	Symbol	Value	Description	
0 MR0I		1	Interrupt on MR0: an interrupt is generated when MR0 matches the value in the TC.	0
		0	This interrupt is disabled	
1	MR0R	1	Reset on MR0: the TC will be reset if MR0 matches it.	0
		0	Feature disabled.	
2	MR0S	1	Stop on MR0: the TC and PC will be stopped and TCR[0] will be set to 0 if MR0 matches the TC.	0
		0	Feature disabled.	
3	MR1I	1	Interrupt on MR1: an interrupt is generated when MR1 matches the value in the TC.	0
		0	This interrupt is disabled	
4	MR1R	1	Reset on MR1: the TC will be reset if MR1 matches it.	0
		0	Feature disabled.	
5	MR1S	1	Stop on MR1: the TC and PC will be stopped and TCR[0] will be set to 0 if MR1 matches the TC.	0
		0	Feature disabled.	
6	MR2I	1	Interrupt on MR2: an interrupt is generated when MR2 matches the value in the TC.	0
		0	This interrupt is disabled	
7 MR2R		1	Reset on MR2: the TC will be reset if MR2 matches it.	0
		0	Feature disabled.	
8	MR2S	1	Stop on MR2: the TC and PC will be stopped and TCR[0] will be set to 0 if MR2 matches the TC.	0
		0	Feature disabled.	
9	MR3I	1	Interrupt on MR3: an interrupt is generated when MR3 matches the value in the TC.	0
		0	This interrupt is disabled	
10	MR3R	1	Reset on MR3: the TC will be reset if MR3 matches it.	0
		0	Feature disabled.	
11	MR3S	1	Stop on MR3: the TC and PC will be stopped and TCR[0] will be set to 0 if MR3 matches the TC.	0
		0	Feature disabled.	
15:12	-		Reserved, user software should not write ones to reserved bits. The value read from a reserved bit is not defined.	NA

Chapter 23: LPC23XX Timer0/1/2/3

23.6.9 Capture Registers (CR0 and CR1)

Each Capture register is associated with a device pin and may be loaded with the Timer Counter value when a specified event occurs on that pin. The settings in the Capture Control Register register determine whether the capture function is enabled, and whether a capture event happens on the rising edge of the associated pin, the falling edge, or on both edges.

23.6.10 Capture Control Register (T[0/1/2/3]CCR - 0xE000 4028, 0xE000 8028, 0xE007 0028, 0xE007 4028)

The Capture Control Register is used to control whether one of the two Capture Registers is loaded with the value in the Timer Counter when the capture event occurs, and whether an interrupt is generated by the capture event. Setting both the rising and falling bits at the same time is a valid configuration, resulting in a capture event for both edges. In the description below, "n" represents the timer number, 0 to 3.

Note: If Counter mode is selected for a particular CAP input in the CTCR, the 3 bits for that input in this register should be programmed as 000, but capture and/or interrupt can be selected for the other CAP input.

Table 480: Capture Control Register (T[0/1/2/3]CCR - addresses 0xE000 4028, 0xE000 8020, 0xE007 0028, 0xE007 4028) bit description

Bit	Symbol	Value	e Description	
0 CAPORE		1	Capture on CAPn.0 rising edge: a sequence of 0 then 1 on CAPn.0 will cause CR0 to be loaded with the contents of TC.	
		0	This feature is disabled.	
1	CAP0FE	1	Capture on CAPn.0 falling edge: a sequence of 1 then 0 on CAPn.0 will cause CR0 to be loaded with the contents of TC.	0
		0	This feature is disabled.	
2 CAP0I		1	Interrupt on CAPn.0 event: a CR0 load due to a CAPn.0 event will generate an interrupt.	
		0	This feature is disabled.	
3	CAP1RE	1	Capture on CAPn.1 rising edge: a sequence of 0 then 1 on CAPn.1 will cause CR1 to be loaded with the contents of TC.	0
		0	This feature is disabled.	
4	CAP1FE	1	Capture on CAPn.1 falling edge: a sequence of 1 then 0 on CAPn.1 will cause CR1 to be loaded with the contents of TC.	0
		0	This feature is disabled.	
5	CAP1I	1	Interrupt on CAPn.1 event: a CR1 load due to a CAPn.1 event will generate an interrupt.	0
		0	This feature is disabled.	
15:6	-		Reserved, user software should not write ones to reserved bits. The value read from a reserved bit is not defined.	NA

Chapter 23: LPC23XX Timer0/1/2/3

23.6.11 External Match Register (T[0/1/2/3]EMR - 0xE000 403C, 0xE000 803C, 0xE007 003C, 0xE007 403C)

The External Match Register provides both control and status of the external match pins. In the descriptions below, "n" represents the Timer number, 0 to 3, and "m" represent a Match number, 0 through 3.

Table 481: External Match Register (T[0/1/2/3]EMR - addresses 0xE000 403C, 0xE000 803C, 0xE007 003C, 0xE007 403C) bit description

Bit	Symbol	Description	Reset Value
0	EM0	External Match 0. When a match occurs between the TC and MR0, this bit can either toggle, go low, go high, or do nothing, depending on bits $5:4$ of this register. This bit can be driven onto a MATn.0 pin, in a positive-logic manner ($0 = low$, $1 = high$).	0
1	EM1	External Match 1. When a match occurs between the TC and MR1, this bit can either toggle, go low, go high, or do nothing, depending on bits 7:6 of this register. This bit can be driven onto a MATn.1 pin, in a positive-logic manner $(0 = low, 1 = high)$.	0
2	EM2	External Match 2. When a match occurs between the TC and MR2, this bit can either toggle, go low, go high, or do nothing, depending on bits 9:8 of this register. This bit can be driven onto a MATn.2 pin, in a positive-logic manner $(0 = low, 1 = high)$.	0
3	EM3	External Match 3. When a match occurs between the TC and MR3, this bit can either toggle, go low, go high, or do nothing, depending on bits 11:10 of this register. This bit can be driven onto a MATn.3 pin, in a positive-logic manner (0 = low, 1 = high).	0
5:4	EMC0	External Match Control 0. Determines the functionality of External Match 0. <u>Table 482</u> shows the encoding of these bits.	00
7:6	EMC1	External Match Control 1. Determines the functionality of External Match 1. <u>Table 482</u> shows the encoding of these bits.	00
9:8	EMC2	External Match Control 2. Determines the functionality of External Match 2. Table 482 shows the encoding of these bits.	00
11:10	EMC3	External Match Control 3. Determines the functionality of External Match 3. Table 482 shows the encoding of these bits.	00
15:12	-	Reserved, user software should not write ones to reserved bits. The value read from a reserved bit is not defined.	NA

Table 482. External Match Control


EMR[11:10], EMR[9:8], EMR[7:6], or EMR[5:4]	Function
00	Do Nothing.
01	Clear the corresponding External Match bit/output to 0 (MATn.m pin is LOW if pinned out).
10	Set the corresponding External Match bit/output to 1 (MATn.m pin is HIGH if pinned out).
11	Toggle the corresponding External Match bit/output.


Chapter 23: LPC23XX Timer0/1/2/3

23.7 Example timer operation

<u>Figure 125</u> shows a timer configured to reset the count and generate an interrupt on match. The prescaler is set to 2 and the match register set to 6. At the end of the timer cycle where the match occurs, the timer count is reset. This gives a full length cycle to the match value. The interrupt indicating that a match occurred is generated in the next clock after the timer reached the match value.

<u>Figure 126</u> shows a timer configured to stop and generate an interrupt on match. The prescaler is again set to 2 and the match register set to 6. In the next clock after the timer reaches the match value, the timer enable bit in TCR is cleared, and the interrupt indicating that a match occurred is generated.

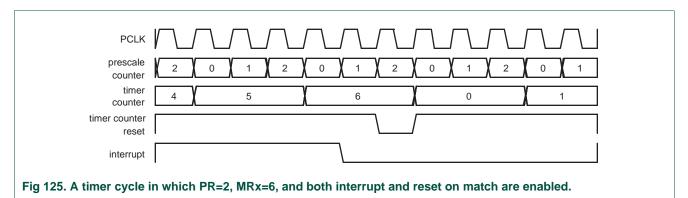


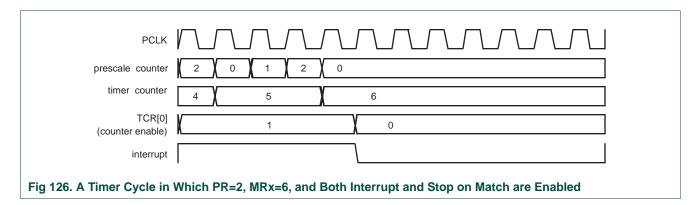

23.8 Architecture

The block diagram for TIMER/COUNTER0 and TIMER/COUNTER1 is shown in Figure 127.

Chapter 23: LPC23XX Timer0/1/2/3

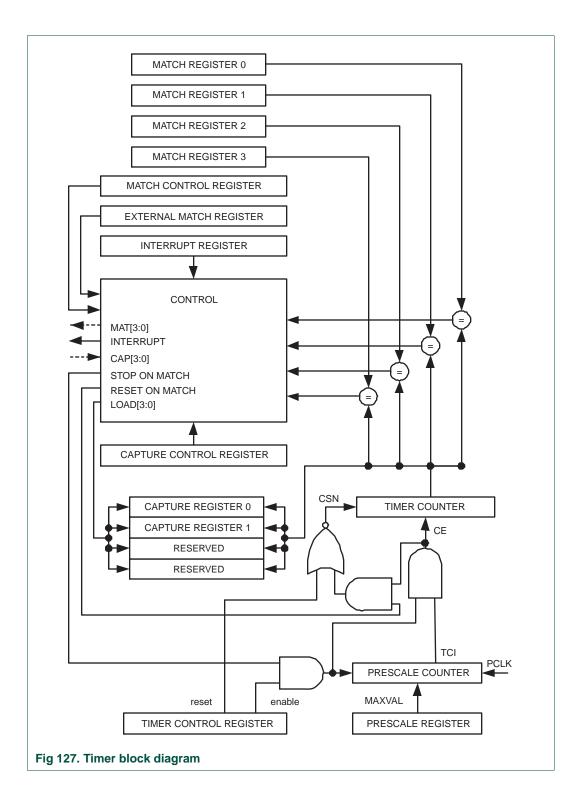

UM10211

Chapter 24: LPC23XX Pulse Width Modulator (PWM)

Rev. 4.1 — 5 September 2012

User manual

24.1 Basic configuration

The PWM is configured using the following registers:

- Power: In the PCONP register (<u>Table 56</u>), set bit PCPWM1.
 Remark: On reset, the PWM is enabled (PCPWM1 = 1).
- 2. Peripheral clock: In the PCLK_SEL0 register (Table 49), select PCLK_PWM.
- 3. Pins: Select PWM pins and pin modes in registers PINSELn and PINMODEn (see Section 9.5).
- 4. Interrupts: See register PWM1MCR (<u>Table 490</u>) and PWM1CCR (<u>Table 491</u>) for match and capture events. Interrupts are enabled in the VIC using the VICIntEnable register (<u>Table 76</u>).

24.2 Features

- Counter or Timer operation (may use the peripheral clock or one of the capture inputs as the clock source).
- Seven match registers allow up to 6 single edge controlled or 3 double edge controlled PWM outputs, or a mix of both types. The match registers also allow:
 - Continuous operation with optional interrupt generation on match.
 - Stop timer on match with optional interrupt generation.
 - Reset timer on match with optional interrupt generation.
- Supports single edge controlled and/or double edge controlled PWM outputs. Single
 edge controlled PWM outputs all go high at the beginning of each cycle unless the
 output is a constant low. Double edge controlled PWM outputs can have either edge
 occur at any position within a cycle. This allows for both positive going and negative
 going pulses.
- Pulse period and width can be any number of timer counts. This allows complete
 flexibility in the trade-off between resolution and repetition rate. All PWM outputs will
 occur at the same repetition rate.
- Double edge controlled PWM outputs can be programmed to be either positive going or negative going pulses.
- Match register updates are synchronized with pulse outputs to prevent generation of erroneous pulses. Software must "release" new match values before they can become effective.
- May be used as a standard timer if the PWM mode is not enabled.
- A 32 bit Timer/Counter with a programmable 32 bit Prescaler.
- Two 32 bit capture channels take a snapshot of the timer value when an input signal transitions. A capture event may also optionally generate an interrupt.

Chapter 24: LPC23XX Pulse Width Modulator (PWM)

24.3 Description

The PWM is based on the standard Timer block and inherits all of its features, although only the PWM function is pinned out on the LPC2300. The Timer is designed to count cycles of the peripheral clock (PCLK) and optionally generate interrupts or perform other actions when specified timer values occur, based on seven match registers. The PWM function is in addition to these features, and is based on match register events.

The ability to separately control rising and falling edge locations allows the PWM to be used for more applications. For instance, multi-phase motor control typically requires three non-overlapping PWM outputs with individual control of all three pulse widths and positions.


Two match registers can be used to provide a single edge controlled PWM output. One match register (PWMMR0) controls the PWM cycle rate, by resetting the count upon match. The other match register controls the PWM edge position. Additional single edge controlled PWM outputs require only one match register each, since the repetition rate is the same for all PWM outputs. Multiple single edge controlled PWM outputs will all have a rising edge at the beginning of each PWM cycle, when an PWMMR0 match occurs.

Three match registers can be used to provide a PWM output with both edges controlled. Again, the PWMMR0 match register controls the PWM cycle rate. The other match registers control the two PWM edge positions. Additional double edge controlled PWM outputs require only two match registers each, since the repetition rate is the same for all PWM outputs.

With double edge controlled PWM outputs, specific match registers control the rising and falling edge of the output. This allows both positive going PWM pulses (when the rising edge occurs prior to the falling edge), and negative going PWM pulses (when the falling edge occurs prior to the rising edge).

<u>Figure 128</u> shows the block diagram of the PWM. The portions that have been added to the standard timer block are on the right hand side and at the top of the diagram.


Chapter 24: LPC23XX Pulse Width Modulator (PWM)

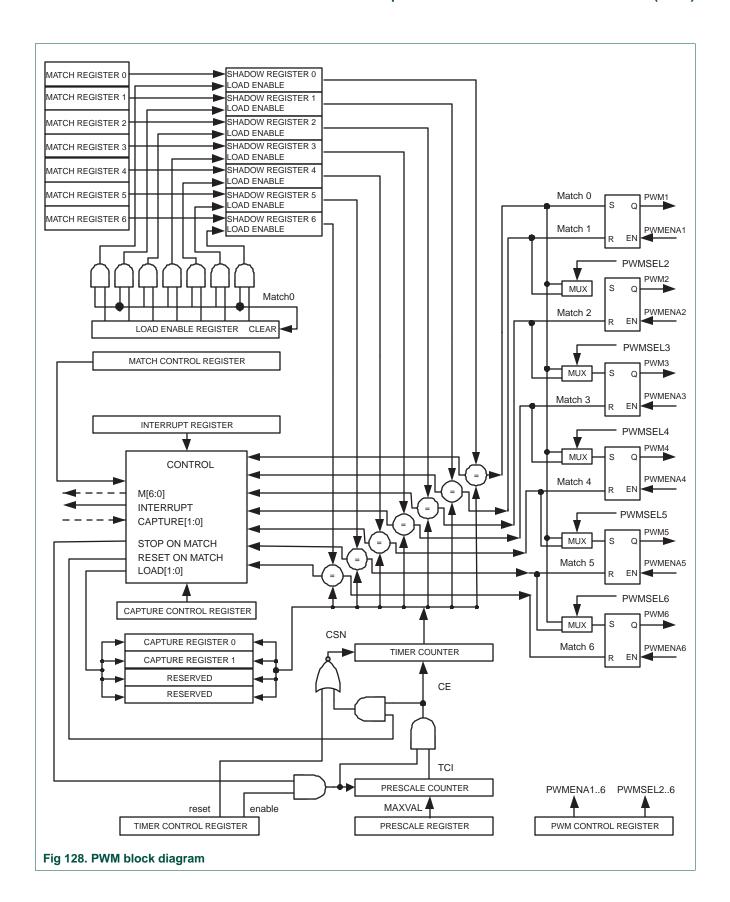

Chapter 24: LPC23XX Pulse Width Modulator (PWM)

24.4 Sample waveform with rules for single and double edge control

A sample of how PWM values relate to waveform outputs is shown in <u>Figure 129</u>. PWM output logic is shown in <u>Figure 128</u> that allows selection of either single or double edge controlled PWM outputs via the muxes controlled by the PWMSELn bits. The match register selections for various PWM outputs is shown in <u>Table 483</u>. This implementation supports up to N-1 single edge PWM outputs or (N-1)/2 double edge PWM outputs, where N is the number of match registers that are implemented. PWM types can be mixed if desired.

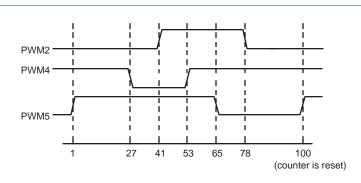

The waveforms below show a single PWM cycle and demonstrate PWM outputs under the following conditions:

The timer is configured for PWM mode (counter resets to 1).

Match 0 is configured to reset the timer/counter when a match event occurs.

All PWM related Match registers are configured for toggle on match.

Control bits PWMSEL2 and PWMSEL4 are set.

The Match register values are as follows:

MR0 = 100 (PWM rate)

MR1 = 41, MR2 = 78 (PWM2 output)

MR3 = 53, MR\$ = 27 (PWM4 output)

MR5 = 65 (PWM5 output)

Fig 129. Sample PWM waveforms

Table 483. Set and reset inputs for PWM Flip-Flops

PWM Channel	Single Edge PWN	(PWMSELn = 0)	Double Edge PW	ouble Edge PWM (PWMSELn = 1)		
	Set by	Reset by	Set by	Reset by		
1	Match 0	Match 1	Match 0[1]	Match 1[1]		
2	Match 0	Match 2	Match 1	Match 2		
3	Match 0	Match 3	Match 2[2]	Match 3 ^[2]		
4	Match 0	Match 4	Match 3	Match 4		
5	Match 0	Match 5	Match 4[2]	Match 5 ^[2]		
6	Match 0	Match 6	Match 5	Match 6		

^[1] Identical to single edge mode in this case since Match 0 is the neighboring match register. Essentially, PWM1 cannot be a double edged output.

^[2] It is generally not advantageous to use PWM channels 3 and 5 for double edge PWM outputs because it would reduce the number of double edge PWM outputs that are possible. Using PWM 2, PWM4, and PWM6 for double edge PWM outputs provides the most pairings.

Chapter 24: LPC23XX Pulse Width Modulator (PWM)

24.4.1 Rules for Single Edge Controlled PWM Outputs

- 1. All single edge controlled PWM outputs go high at the beginning of a PWM cycle unless their match value is equal to 0.
- 2. Each PWM output will go low when its match value is reached. If no match occurs (i.e. the match value is greater than the PWM rate), the PWM output remains continuously high.

24.4.2 Rules for Double Edge Controlled PWM Outputs

Five rules are used to determine the next value of a PWM output when a new cycle is about to begin:

- 1. The match values for the **next** PWM cycle are used at the end of a PWM cycle (a time point which is coincident with the beginning of the next PWM cycle), except as noted in rule 3.
- 2. A match value equal to 0 or the current PWM rate (the same as the Match channel 0 value) have the same effect, except as noted in rule 3. For example, a request for a falling edge at the beginning of the PWM cycle has the same effect as a request for a falling edge at the end of a PWM cycle.
- 3. When match values are changing, if one of the "old" match values is equal to the PWM rate, it is used again once if the neither of the new match values are equal to 0 or the PWM rate, and there was no old match value equal to 0.
- 4. If both a set and a clear of a PWM output are requested at the same time, clear takes precedence. This can occur when the set and clear match values are the same as in, or when the set or clear value equals 0 and the other value equals the PWM rate.
- 5. If a match value is out of range (i.e. greater than the PWM rate value), no match event occurs and that match channel has no effect on the output. This means that the PWM output will remain always in one state, allowing always low, always high, or "no change" outputs.

24.5 Pin description

Table 484 gives a brief summary of each of PWM related pins.

Table 484. Pin summary

Pin	Туре	Description
PWM1[1]	Output	Output from PWM channel 1.
PWM1[2]	Output	Output from PWM channel 2.
PWM1[3]	Output	Output from PWM channel 3.
PWM1[4]	Output	Output from PWM channel 4.
PWM1[5]	Output	Output from PWM channel 5.
PWM1[6]	Output	Output from PWM channel 6.
PCAP1[1:0]	Input	Capture Inputs. A transition on a capture pin can be configured to load the corresponding Capture Register with the value of the Timer Counter and optionally generate an interrupt. PWM1 brings out 2 capture inputs.

Chapter 24: LPC23XX Pulse Width Modulator (PWM)

24.6 PWM base addresses

Table 485: Addresses for PWM1

PWM	Base Addresses
1	0xE001 8000

24.7 Register description

PWM1 function adds new registers and registers bits as shown in Table 486 below.

Table 486. PWM1 register map

Generic Name	Description	Access	Reset Value[1]	PWMn Register Name & Address
IR	Interrupt Register. The IR can be written to clear interrupts. The IR can be read to identify which of eight possible interrupt sources are pending.	R/W	0	PWM1IR - 0xE001 8000
TCR	Timer Control Register. The TCR is used to control the Timer Counter functions. The Timer Counter can be disabled or reset through the TCR.	R/W	0	PWM1TCR - 0xE001 8004
TC	Timer Counter. The 32 bit TC is incremented every PR+1 cycles of PCLK. The TC is controlled through the TCR.	R/W	0	PWM1TC -0xE001 8008
PR	Prescale Register. The TC is incremented every PR+1 cycles of PCLK.	R/W	0	PWM1PR - 0xE001 800C
PC	Prescale Counter. The 32 bit PC is a counter which is incremented to the value stored in PR. When the value in PR is reached, the TC is incremented. The PC is observable and controllable through the bus interface.	R/W	0	PWM1PC - 0xE001 8010
MCR	Match Control Register. The MCR is used to control if an interrupt is generated and if the TC is reset when a Match occurs.	R/W	0	PWM1MCR - 0xE001 8014
MR0	Match Register 0. MR0 can be enabled in the MCR to reset the TC, stop both the TC and PC, and/or generate an interrupt when it matches the TC. In addition, a match between this value and the TC sets any PWM output that is in single-edge mode, and sets PWM1 if it's in double-edge mode.	R/W	0	PWM1MR0 - 0xE001 8018
MR1	Match Register 1. MR1 can be enabled in the MCR to reset the TC, stop both the TC and PC, and/or generate an interrupt when it matches the TC. In addition, a match between this value and the TC clears PWM1 in either edge mode, and sets PWM2 if it's in double-edge mode.	R/W	0	PWM1MR1 - 0xE001 801C
MR2	Match Register 2. MR2 can be enabled in the MCR to reset the TC, stop both the TC and PC, and/or generate an interrupt when it matches the TC. In addition, a match between this value and the TC clears PWM2 in either edge mode, and sets PWM3 if it's in double-edge mode.	R/W	0	PWM1MR2 - 0xE001 8020
MR3	Match Register 3. MR3 can be enabled in the MCR to reset the TC, stop both the TC and PC, and/or generate an interrupt when it matches the TC. In addition, a match between this value and the TC clears PWM3 in either edge mode, and sets PWM4 if it's in double-edge mode.	R/W	0	PWM1MR3 - 0xE001 8024

Chapter 24: LPC23XX Pulse Width Modulator (PWM)

Table 486. PWM1 register map

Generic Name	Description	Access	Reset Value[1]	PWMn Register Name & Address
CCR	Capture Control Register. The CCR controls which edges of the capture inputs are used to load the Capture Registers and whether or not an interrupt is generated when a capture takes place.	R/W	0	PWM1CCR - 0xE001 8028
CR0	Capture Register 0. CR0 is loaded with the value of the TC when there is an event on the CAPn.0 input.	RO	0	PWM1CR0 - 0xE001 802C
CR1	Capture Register 1. See CR0 description.	RO	0	PWM1CR1 - 0xE001 8030
CR2	Capture Register 2. See CR0 description.	RO	0	PWM1CR2 - 0xE001 8034
CR3	Capture Register 3. See CR0 description.	RO	0	PWM1CR3 - 0xE001 8038
MR4	Match Register 4. MR4 can be enabled in the MCR to reset the TC, stop both the TC and PC, and/or generate an interrupt when it matches the TC. In addition, a match between this value and the TC clears PWM4 in either edge mode, and sets PWM5 if it's in double-edge mode.	R/W	0	PWM1MR - 0xE001 8040
MR5	Match Register 5. MR5 can be enabled in the MCR to reset the TC, stop both the TC and PC, and/or generate an interrupt when it matches the TC. In addition, a match between this value and the TC clears PWM5 in either edge mode, and sets PWM6 if it's in double-edge mode.	R/W	0	PWM1MR - 0xE001 8044
MR6	Match Register 6. MR6 can be enabled in the MCR to reset the TC, stop both the TC and PC, and/or generate an interrupt when it matches the TC. In addition, a match between this value and the TC clears PWM6 in either edge mode.	R/W	0	PWM1MR - 0xE001 8048
PCR	PWM Control Register. Enables PWM outputs and selects PWM channel types as either single edge or double edge controlled.	R/W	0	PWM1PCR - 0xE001 804C
LER	Load Enable Register. Enables use of new PWM match values.	R/W	0	PWM1LER - 0xE001 8050
CTCR	Count Control Register. The CTCR selects between Timer and Counter mode, and in Counter mode selects the signal and edge(s) for counting.	R/W	0	PWM1CTCR - 0xE001 8070

^[1] Reset Value reflects the data stored in used bits only. It does not include reserved bits content.

24.7.1 PWM Interrupt Register (PWM1IR - 0xE001 8000)

The PWM Interrupt Register consists of eleven bits (<u>Table 487</u>), seven for the match interrupts and four reserved for the future use. If an interrupt is generated then the corresponding bit in the PWMIR will be high. Otherwise, the bit will be low. Writing a logic one to the corresponding IR bit will reset the interrupt. Writing a zero has no effect.

Table 487: PWM Interrupt Register (PWM1IR - address 0xE001 8000) bit description

Bit	Symbol	Description	Reset Value
0	PWMMR0 Interrupt	Interrupt flag for PWM match channel 0.	0
1	PWMMR1 Interrupt	Interrupt flag for PWM match channel 1.	0
2	PWMMR2 Interrupt	Interrupt flag for PWM match channel 2.	0
3	PWMMR3 Interrupt	Interrupt flag for PWM match channel 3.	0

Chapter 24: LPC23XX Pulse Width Modulator (PWM)

Table 487: PWM Interrupt Register (PWM1IR - address 0xE001 8000) bit description

Bit	Symbol	Description	Reset Value
4	PWMCAP0 Interrupt	Interrupt flag for capture input 0	0
5	PWMCAP1 Interrupt	Interrupt flag for capture input 1.	0
7:6	-	Reserved, user software should not write ones to reserved bits. The value read from a reserved bit is not defined.	NA
8	PWMMR4 Interrupt	Interrupt flag for PWM match channel 4.	0
9	PWMMR5 Interrupt	Interrupt flag for PWM match channel 5.	0
10	PWMMR6 Interrupt	Interrupt flag for PWM match channel 6.	0
15:11	-	Reserved, user software should not write ones to reserved bits. The value read from a reserved bit is not defined.	NA

24.7.2 PWM Timer Control Register (PWM1TCR 0xE001 8004)

The PWM Timer Control Register (PWMTCR) is used to control the operation of the PWM Timer Counter. The function of each of the bits is shown in Table 488.

Table 488: PWM Timer Control Register (PWM1TCR address 0xE001 8004) bit description

Bit	Symbol	Value	Description	Reset Value
0	Counter Enable	1	The PWM Timer Counter and PWM Prescale Counter are enabled for counting.	0
		0	The counters are disabled.	
1	Counter Reset	1	The PWM Timer Counter and the PWM Prescale Counter are synchronously reset on the next positive edge of PCLK. The counters remain reset until this bit is returned to zero.	0
		0	Clear reset.	
2	-		Reserved, user software should not write ones to reserved bits. The value read from a reserved bit is not defined.	NA
3	PWM Enable	1	PWM mode is enabled (counter resets to 1). PWM mode causes the shadow registers to operate in connection with the Match registers. A program write to a Match register will not have an effect on the Match result until the corresponding bit in PWMLER has been set, followed by the occurrence of a PWM Match 0 event. Note that the PWM Match register that determines the PWM rate (PWM Match Register 0 - MR0) must be set up prior to the PWM being enabled. Otherwise a Match event will not occur to cause shadow register contents to become effective.	0
		0	Timer mode is enabled (counter resets to 0).	
7:4	-		Reserved, user software should not write ones to reserved bits. The value read from a reserved bit is not defined.	NA

24.7.3 PWM Count Control Register (PWM1CTCR - 0xE001 8070)

The Count Control Register (CTCR) is used to select between Timer and Counter mode, and in Counter mode to select the pin and edge(s) for counting. The function of each of the bits is shown in Table 489.

Chapter 24: LPC23XX Pulse Width Modulator (PWM)

Table 489: PWM Count control Register (PWM1CTCR - address 0xE001 8004) bit description

Bit	Symbol	Value	Description	Reset Value
1:0	Counter/ Timer Mode	00	Timer Mode: the TC is incremented when the Prescale Counter matches the Prescale Register.	00
		01	Counter Mode: the TC is incremented on rising edges of the PCAP input selected by bits 3:2.	
		10	Counter Mode: the TC is incremented on falling edges of the PCAP input selected by bits 3:2.	
		11	Counter Mode: the TC is incremented on both edges of the PCAP input selected by bits 3:2.	
3:2	Count Input Select		When bits 1:0 of this register are not 00, these bits select which PCAP pin which carries the signal used to increment the TC.	00
		00	PCAP1.0	
		01	CAP1.1 (Other combinations are reserved)	
7:4	-		Reserved, user software should not write ones to reserved bits. The value read from a reserved bit is not defined.	NA

24.7.4 PWM Match Control Register (PWM1MCR - 0xE001 8014)

The PWM Match Control Registers are used to control what operations are performed when one of the PWM Match Registers matches the PWM Timer Counter. The function of each of the bits is shown in Table 490.

Table 490: Match Control Register (PWM1MCR - address 0xE000 8014) bit description

Bit	Symbol	Value	Description	Reset Value
0	PWMMR0I	1	Interrupt on PWMMR0: an interrupt is generated when PWMMR0 matches the value in the PWMTC.	0
		0	This interrupt is disabled.	
1	PWMMR0R	1	Reset on PWMMR0: the PWMTC will be reset if PWMMR0 matches it.	0
		0	This feature is disabled.	
2	PWMMR0S	1	Stop on PWMMR0: the PWMTC and PWMPC will be stopped and PWMTCR[0] will be set to 0 if PWMMR0 matches the PWMTC.	0
		0	This feature is disabled	
3	PWMMR1I	1	Interrupt on PWMMR1: an interrupt is generated when PWMMR1 matches the value in the PWMTC.	0
		0	This interrupt is disabled.	
4	PWMMR1R		Reset on PWMMR1: the PWMTC will be reset if PWMMR1 matches it.	0
		0	This feature is disabled.	
5	PWMMR1S	1	Stop on PWMMR1: the PWMTC and PWMPC will be stopped and PWMTCR[0] will be set to 0 if PWMMR1 matches the PWMTC.	0
		0	This feature is disabled.	

Chapter 24: LPC23XX Pulse Width Modulator (PWM)

Table 490: Match Control Register (PWM1MCR - address 0xE000 8014) bit description

Bit	Symbol	Value	Description	Reset Value
6	PWMMR2I	1	Interrupt on PWMMR2: an interrupt is generated when PWMMR2 matches the value in the PWMTC.	0
		0	This interrupt is disabled.	
7	PWMMR2R	1	Reset on PWMMR2: the PWMTC will be reset if PWMMR2 matches it.	0
		0	This feature is disabled.	
8	PWMMR2S	1	Stop on PWMMR2: the PWMTC and PWMPC will be stopped and PWMTCR[0] will be set to 0 if PWMMR2 matches the PWMTC.	0
		0	This feature is disabled	
9	PWMMR3I	1	Interrupt on PWMMR3: an interrupt is generated when PWMMR3 matches the value in the PWMTC.	0
		0	This interrupt is disabled.	
10	PWMMR3R	1	Reset on PWMMR3: the PWMTC will be reset if PWMMR3 matches it.	0
		0	This feature is disabled	
11	PWMMR3S	1	Stop on PWMMR3: The PWMTC and PWMPC will be stopped and PWMTCR[0] will be set to 0 if PWMMR3 matches the PWMTC.	0
		0	This feature is disabled	
12	PWMMR4I	1	Interrupt on PWMMR4: An interrupt is generated when PWMMR4 matches the value in the PWMTC.	0
		0	This interrupt is disabled.	
13	PWMMR4R	1	Reset on PWMMR4: the PWMTC will be reset if PWMMR4 matches it.	0
		0	This feature is disabled.	
14	PWMMR4S	1	Stop on PWMMR4: the PWMTC and PWMPC will be stopped and PWMTCR[0] will be set to 0 if PWMMR4 matches the PWMTC.	0
		0	This feature is disabled	
15	PWMMR5I	1	Interrupt on PWMMR5: An interrupt is generated when PWMMR5 matches the value in the PWMTC.	0
		0	This interrupt is disabled.	
16	PWMMR5R	1	Reset on PWMMR5: the PWMTC will be reset if PWMMR5 matches it.	0
		0	This feature is disabled.	
17	PWMMR5S	1	Stop on PWMMR5: the PWMTC and PWMPC will be stopped and PWMTCR[0] will be set to 0 if PWMMR5 matches the PWMTC.	0
		0	This feature is disabled	
18	PWMMR6I	1	Interrupt on PWMMR6: an interrupt is generated when PWMMR6 matches the value in the PWMTC.	0
		0	This interrupt is disabled.	

Chapter 24: LPC23XX Pulse Width Modulator (PWM)

Table 490: Match Control Register (PWM1MCR - address 0xE000 8014) bit description

Bit	Symbol	Value	Description	Reset Value
19	PWMMR6R	1	Reset on PWMMR6: the PWMTC will be reset if PWMMR6 matches it.	0
		0	This feature is disabled.	
20	PWMMR6S	1	Stop on PWMMR6: the PWMTC and PWMPC will be stopped and PWMTCR[0] will be set to 0 if PWMMR6 matches the PWMTC.	0
31:21	-		Reserved, user software should not write ones to reserved bits. The value read from a reserved bit is not defined.	NA

24.7.5 PWM Capture Control Register (PWM1CCR - 0xE001 8028)

The Capture Control Register is used to control whether one of the four Capture Registers is loaded with the value in the Timer Counter when a capture event occurs, and whether an interrupt is generated by the capture event. Setting both the rising and falling bits at the same time is a valid configuration, resulting in a capture event for both edges. In the descriptions below, "n" represents the Timer number, 0 or 1.

Note: If Counter mode is selected for a particular CAP input in the CTCR, the 3 bits for that input in this register should be programmed as 000, but capture and/or interrupt can be selected for the other 3 CAP inputs.

Table 491: PWM Capture Control Register (PWM1CCR - address 0xE001 8028) bit description

Bit	Symbol	Value	Description	Reset Value
0	Capture on		This feature is disabled.	0
	CAPn.0 rising edge	1	A synchronously sampled rising edge on the CAPn.0 input will cause CR0 to be loaded with the contents of the TC.	
1	Capture on	0	This feature is disabled.	0
	CAPn.0 falling edge	1	A synchronously sampled falling edge on CAPn.0 will cause CR0 to be loaded with the contents of TC.	
2	Interrupt on	0	This feature is disabled.	0
	CAPn.0 event	1	A CR0 load due to a CAPn.0 event will generate an interrupt.	
3	Capture on CAPn.1rising edge	0	This feature is disabled.	0
		•	1	A synchronously sampled rising edge on the CAPn.1 input will cause CR1 to be loaded with the contents of the TC.
4	Capture on CAPn.1falling edge	0	This feature is disabled.	0
		1	A synchronously sampled falling edge on CAPn.1 will cause CR1 to be loaded with the contents of TC.	
5	Interrupt on	0	This feature is disabled.	0
	CAPn.1 event	1	A CR1 load due to a CAPn.1 event will generate an interrupt.	
6	Capture on	<u>.</u>	This feature is disabled.	0
	CAPn.2rising edge	1	A synchronously sampled rising edge on the CAPn.2 input will cause CR2 to be loaded with the contents of the TC.	

Chapter 24: LPC23XX Pulse Width Modulator (PWM)

Table 491: PWM Capture Control Register (PWM1CCR - address 0xE001 8028) bit description

Bit	Symbol	Value	Description	Reset Value
7	Capture on	0	This feature is disabled.	0
	CAPn.2falling edge	1	A synchronously sampled falling edge on CAPn.2 will cause CR2 to be loaded with the contents of TC.	
8	Interrupt on	0	This feature is disabled.	0
	CAPn.2 event	1	A CR2 load due to a CAPn.2 event will generate an interrupt.	
9	Capture on CAPn.3rising edge	0	This feature is disabled.	0
		1	A synchronously sampled rising edge on the CAPn.3 input will cause CR3 to be loaded with the contents of TC.	
10	Capture on CAPn.3falling edge	0	This feature is disabled.	0
		1	A synchronously sampled falling edge on CAPn.3 will cause CR3 to be loaded with the contents of TC.	
11	Interrupt on	Interrupt on 0 This feat	This feature is disabled.	0
	CAPn.3 event	1	A CR3 load due to a CAPn.3 event will generate an interrupt.	
31:12	-		Reserved, user software should not write ones to reserved bits. The value read from a reserved bit is not defined.	NA

24.7.6 PWM Control Registers (PWM1PCR - 0xE001 804C)

The PWM Control Registers are used to enable and select the type of each PWM channel. The function of each of the bits are shown in <u>Table 492</u>.

Table 492: PWM Control Registers (PWM1PCR - address 0xE001 804C) bit description

Bit	Symbol	Valu e	Description	Reset Value	
1:0	Unused		Unused, always zero.	NA	
2	PWMSEL2	1	Selects double edge controlled mode for the PWM2 output.	0	
		0	Selects single edge controlled mode for PWM2.		
3	PWMSEL3	1	Selects double edge controlled mode for the PWM3 output.	0	
		0	Selects single edge controlled mode for PWM3.		
4	PWMSEL4	PWMSEL4	1	Selects double edge controlled mode for the PWM4 output.	0
		0	Selects single edge controlled mode for PWM4.		
5	PWMSEL5	1	Selects double edge controlled mode for the PWM5 output.	0	
		0	Selects single edge controlled mode for PWM5.		
6	PWMSEL6	1	Selects double edge controlled mode for the PWM6 output.	0	
		0	Selects single edge controlled mode for PWM6.		
8:7	-		Reserved, user software should not write ones to reserved bits. The value read from a reserved bit is not defined.	NA	
9	PWMENA1	1	The PWM1 output enabled.	0	
		0	The PWM1 output disabled.		
10	PWMENA2	1	The PWM2 output enabled.	0	
		0	The PWM2 output disabled.		

Chapter 24: LPC23XX Pulse Width Modulator (PWM)

Table 492: PWM Control Registers (PWM1PCR - address 0xE001 804C) bit description

Bit	Symbol	Valu e	Description	Reset Value	
11	PWMENA3	1	The PWM3 output enabled.	0	
		0	The PWM3 output disabled.		
12	PWMENA4	1	The PWM4 output enabled.	0	
		0	The PWM4 output disabled.		
13	PWMENA5	PWMENA5	1	The PWM5 output enabled.	0
		0	The PWM5 output disabled.		
14	PWMENA6	1	The PWM6 output enabled.	0	
		0	The PWM6 output disabled.		
31:15	Unused		Unused, always zero.	NA	

24.7.7 PWM Latch Enable Register (PWM1LER - 0xE001 8050)

The PWM Latch Enable Registers are used to control the update of the PWM Match registers when they are used for PWM generation. When software writes to the location of a PWM Match register while the Timer is in PWM mode, the value is captured, but not used immediately.

When a PWM Match 0 event occurs (normally also resetting the timer in PWM mode), the contents of shadow registers will be transferred to the shadow registers if the corresponding bit in the Latch Enable Register has been set. At that point, the new values will take effect and determine the course of the next PWM cycle. Once the transfer of new values has taken place, all bits of the LER are automatically cleared. Until the corresponding bit in the PWMLER is set and a PWM Match 0 event occurs, any value written to the PWM Match registers has no effect on PWM operation.

For example, if the PWM is configured for double edge operation and is currently running, a typical sequence of events for changing the timing would be:

- Write a new value to the PWM Match1 register.
- Write a new value to the PWM Match2 register.
- Write to the PWMLER, setting bits 1 and 2 at the same time.
- The altered values will become effective at the next reset of the timer (when a PWM Match 0 event occurs).

The order of writing the two PWM Match registers is not important, since neither value will be used until after the write to LER. This insures that both values go into effect at the same time, if that is required. A single value may be altered in the same way if needed.

The function of each of the bits in the LER is shown in Table 493.

Chapter 24: LPC23XX Pulse Width Modulator (PWM)

Table 493: PWM Latch Enable Register (PWM1LER - address 0xE001 8050) bit description

Bit	Symbol	Description	Reset Value
0	Enable PWM Match 0 Latch	Writing a one to this bit allows the last value written to the PWM Match 0 register to be become effective when the timer is next reset by a PWM Match event. See Section 24.7.4 "PWM Match Control Register (PWM1MCR - 0xE001 8014)".	0
1	Enable PWM Match 1 Latch	Writing a one to this bit allows the last value written to the PWM Match 1 register to be become effective when the timer is next reset by a PWM Match event. See Section 24.7.4 "PWM Match Control Register (PWM1MCR - 0xE001 8014)".	0
2	Enable PWM Match 2 Latch	Writing a one to this bit allows the last value written to the PWM Match 2 register to be become effective when the timer is next reset by a PWM Match event. See Section 24.7.4 "PWM Match Control Register (PWM1MCR - 0xE001 8014)".	0
3	Enable PWM Match 3 Latch	Writing a one to this bit allows the last value written to the PWM Match 3 register to be become effective when the timer is next reset by a PWM Match event. See Section 24.7.4 "PWM Match Control Register (PWM1MCR - 0xE001 8014)".	0
4	Enable PWM Match 4 Latch	Writing a one to this bit allows the last value written to the PWM Match 4 register to be become effective when the timer is next reset by a PWM Match event. See Section 24.7.4 "PWM Match Control Register (PWM1MCR - 0xE001 8014)".	0
5	Enable PWM Match 5 Latch	Writing a one to this bit allows the last value written to the PWM Match 5 register to be become effective when the timer is next reset by a PWM Match event. See Section 24.7.4 "PWM Match Control Register (PWM1MCR - 0xE001 8014)".	0
6	Enable PWM Match 6 Latch	Writing a one to this bit allows the last value written to the PWM Match 6 register to be become effective when the timer is next reset by a PWM Match event. See Section 24.7.4 "PWM Match Control Register (PWM1MCR - 0xE001 8014)".	0
7	-	Reserved, user software should not write ones to reserved bits. The value read from a reserved bit is not defined.	NA

UM10211

Chapter 25: LPC23XX WatchDog Timer (WDT)

Rev. 4.1 — 5 September 2012

User manual

25.1 Features

- Internally resets chip if not periodically reloaded.
- Debug mode.
- Enabled by software but requires a hardware reset or a Watchdog reset/interrupt to be disabled.
- Incorrect/Incomplete feed sequence causes reset/interrupt if enabled.
- Flag to indicate Watchdog reset.
- Programmable 32 bit timer with internal pre-scaler.
- Selectable time period from (T_{WDCLK} \times 256 \times 4) to (T_{WDCLK} \times 2³² \times 4) in multiples of T_{WDCLK} \times 4.
- The Watchdog clock (WDCLK) source can be selected from the RTC clock, the Internal RC oscillator (IRC), or the APB peripheral clock (PCLK, see <u>Table 49</u>). This gives a wide range of potential timing choices for Watchdog operation under different power reduction conditions. It also provides the ability to run the Watchdog timer from an entirely internal source that is not dependent on an external crystal and its associated components and wiring, for increased reliability.

25.2 Introduction

The purpose of the Watchdog is to reset the microcontroller within a reasonable amount of time if it enters an erroneous state. When enabled, the Watchdog will generate a system reset if the user program fails to "feed" (or reload) the Watchdog within a predetermined amount of time.

For interaction of the on-chip watchdog and other peripherals, especially the reset and boot-up procedures, please read <u>Section 3.4 "Reset" on page 31</u> of this document.

25.3 Description

The Watchdog consists of a divide by 4 fixed pre-scaler and a 32 bit counter. The clock is fed to the timer via a pre-scaler. The timer decrements when clocked. The minimum value from which the counter decrements is 0xFF. Setting a value lower than 0xFF causes 0xFF to be loaded in the counter. Hence the minimum Watchdog interval is $(T_{WDCLK} \times 256 \times 4)$ and the maximum Watchdog interval is $(T_{WDCLK} \times 2^{32} \times 4)$ in multiples of $(T_{WDCLK} \times 4)$. The Watchdog should be used in the following manner:

- Set the Watchdog timer constant reload value in WDTC register.
- Setup mode in WDMOD register.
- Enable the Watchdog by writing 0xAA followed by 0x55 to the WDFEED register.
- Watchdog should be fed again before the Watchdog counter underflows to prevent reset/interrupt.

Chapter 25: LPC23XX WatchDog Timer (WDT)

When the Watchdog counter underflows, the program counter will start from 0x0000 0000 as in the case of external reset. The Watchdog time-out flag (WDTOF) can be examined to determine if the Watchdog has caused the reset condition. The WDTOF flag must be cleared by software.

The watchdog timer block uses two clocks: PCLK and WDCLK. PCLK is used for the APB accesses to the watchdog registers. The WDCLK is used for the watchdog timer counting.

There is some synchronization logic between these two clock domains. When the WDMOD and WDTC registers are updated by APB operations, the new value will take effect in 3 WDCLK cycles on the logic in the WDCLK clock domain. When the watchdog timer is counting on WDCLK, the synchronization logic will first lock the value of the counter on WDCLK and then synchronize it with the PCLK for reading as the WDTV register by the CPU.

25.4 Register description

The Watchdog contains 4 registers as shown in Table 494 below.

Table 494. Watchdog register map

Name	Description	Access	Reset Value ^[1]	Address
WDMOD	Watchdog mode register. This register contains the basic mode and status of the Watchdog Timer.	R/W	0	0xE000 0000
WDTC	Watchdog timer constant register. This register determines the time-out value.	R/W	0xFF	0xE000 0004
WDFEED	Watchdog feed sequence register. Writing 0xAA followed by 0x55 to this register reloads the Watchdog timer with the value contained in WDTC.	WO	NA	0xE000 0008
WDTV	Watchdog timer value register. This register reads out the current value of the Watchdog timer.	RO	0xFF	0xE000 000C
WDCLKSEL	Watchdog clock source selection register.	R/W	0	0xE000 0010

^[1] Reset Value reflects the data stored in used bits only. It does not include reserved bits content.

25.4.1 Watchdog Mode Register (WDMOD - 0xE000 0000)

The WDMOD register controls the operation of the Watchdog as per the combination of WDEN and RESET bits.

Chapter 25: LPC23XX WatchDog Timer (WDT)

Table 495. Watchdog operating modes selection

WDEN	WDRESET	Mode of Operation
0	X (0 or 1)	Debug/Operate without the Watchdog running.
1	0	Watchdog interrupt mode: debug with the Watchdog interrupt but no WDRESET enabled.
		When this mode is selected, a watchdog counter underflow will set the WDINT flag and the Watchdog interrupt request will be generated.
1	1	Watchdog reset mode: operate with the Watchdog interrupt and WDRESET enabled.
		When this mode is selected, a watchdog counter underflow will reset the microcontroller. Although the Watchdog interrupt is also enabled in this case (WDEN = 1) it will not be recognized since the watchdog reset will clear the WDINT flag.

Once the **WDEN** and/or **WDRESET** bits are set they can not be cleared by software. Both flags are cleared by an external reset or a Watchdog timer underflow.

WDTOF The Watchdog time-out flag is set when the Watchdog times out. This flag is cleared by software.

WDINT The Watchdog interrupt flag is set when the Watchdog times out. This flag is cleared when any reset occurs. Once the watchdog interrupt is serviced, it can be disabled in the VIC or the watchdog interrupt request will be generated indefinitely.

Table 496: Watchdog Mode register (WDMOD - address 0xE000 0000) bit description

Bit	Symbol	Description	Reset Value
0	WDEN	WDEN Watchdog interrupt enable bit (Set Only).	0
1	WDRESET	WDRESET Watchdog reset enable bit (Set Only).	0
2	WDTOF	WDTOF Watchdog time-out flag.	0 (Only after external reset)
3	WDINT	WDINT Watchdog interrupt flag (Read Only).	0
7:4	-	Reserved, user software should not write ones to reserved bits. The value read from a reserved bit is not defined.	NA

25.4.2 Watchdog Timer Constant Register (WDTC - 0xE000 0004)

The WDTC register determines the time-out value. Every time a feed sequence occurs the WDTC content is reloaded in to the Watchdog timer. It's a 32 bit register with 8 LSB set to 1 on reset. Writing values below 0xFF will cause 0x0000 00FF to be loaded to the WDTC. Thus the minimum time-out interval is $T_{WDCLK} \times 256 \times 4$.

Table 497: Watchdog Constant register (WDTC - address 0xE000 0004) bit description

Bit	Symbol	Description	Reset Value
31:0	Count	Watchdog time-out interval.	0x0000 00FF

25.4.3 Watchdog Feed Register (WDFEED - 0xE000 0008)

Writing 0xAA followed by 0x55 to this register will reload the Watchdog timer with the WDTC value. This operation will also start the Watchdog if it is enabled via the WDMOD register. Setting the WDEN bit in the WDMOD register is not sufficient to enable the Watchdog. A valid feed sequence must be completed after setting WDEN before the Watchdog is capable of generating a reset. Until then, the Watchdog will ignore feed

Chapter 25: LPC23XX WatchDog Timer (WDT)

errors. After writing 0xAA to WDFEED, access to any Watchdog register other than writing 0x55 to WDFEED causes an immediate reset/interrupt when the Watchdog is enabled. The reset will be generated during the second PCLK following an incorrect access to a Watchdog register during a feed sequence.

Interrupts should be disabled during the feed sequence. An abort condition will occur if an interrupt happens during the feed sequence.

Table 498: Watchdog Feed Register (WDFEED - address 0xE000 0008) bit description

Bit	Symbol	Description	Reset Value
7:0	Feed	Feed value should be 0xAA followed by 0x55.	NA

25.4.4 Watchdog Timer Value Register (WDTV - 0xE000 000C)

The WDTV register is used to read the current value of Watchdog timer.

When reading the value of the 32 bit timer, the lock and synchronization procedure takes up to 6 WDCLK cycles plus 6 PCLK cycles, so the value of WDTV is older than the actual value of the timer when it's being read by the CPU.

Table 499: Watchdog Timer Value register (WDTV - address 0xE000 000C) bit description

Bit	Symbol	Description	Reset Value
31:0	Count	Counter timer value.	0x0000 00FF

25.4.5 Watchdog Timer Clock Source Selection Register (WDCLKSEL - 0xE000 0010)

This register allows selecting the clock source for the Watchdog timer. The possibilities are: the Internal RC oscillator (IRC), the RTC oscillator, and the APB peripheral clock (pclk). The function of bits in WDCLKSEL are shown in Table 500.


Table 500: Watchdog Timer Clock Source Selection register (WDCLKSEL - address 0xE000 0010) bit description

Bit	Symbol	Value	Description	Reset Value
1:0	1:0 WDSEL These bits select the clock source for the Watchdog timer as described below.			
			Warning: Improper setting of this value may result in incorrect operation of the Watchdog timer, which could adversely affect system operation.	
		00	Selects the Internal RC oscillator as the Watchdog clock source (default).	
		01	Selects the APB peripheral clock (PCLK) as the Watchdog clock source.	
		10	Selects the RTC oscillator as the Watchdog clock source.	
		11	Reserved	
31:2	-	-	Reserved, user software should not write ones to reserved bits. The value read from a reserved bit is not defined.	NA

Chapter 25: LPC23XX WatchDog Timer (WDT)

25.5 Block diagram

The block diagram of the Watchdog is shown below in the <u>Figure 130</u>. The synchronization logic (PCLK - WDCLK) is not shown in the block diagram.

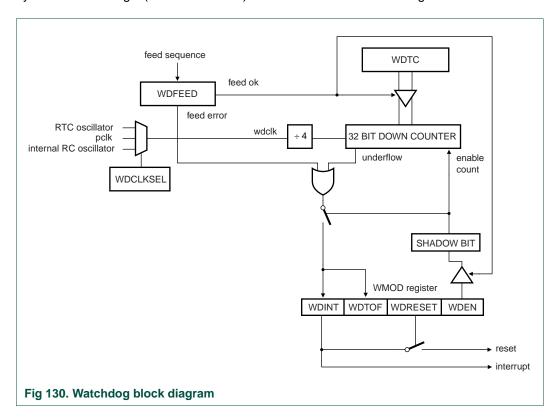

UM10211

Chapter 26: LPC23XX Real Time Clock (RTC) and battery RAM

Rev. 4.1 — 5 September 2012

User manual

26.1 How to read this chapter

The RTC alarm output pin is available on parts LPC2377, LPC2378, and LPC2388 only.

26.2 Basic configuration

The RTC is configured using the following registers:

- 1. Power: In the PCONP register (Table 56), set bits PCRTC.
 - Remark: On reset, the RTC is enabled.
- Clock: Select clock source in <u>Table 505</u>. If the peripheral clock is selected, select PCLK_RTC in the PCLK_SEL0 register (<u>Table 49</u>). For the RTC, the peripheral clock must be scaled (see <u>Section 26.7.6</u>).
- 3. Interrupts: See Section 26.7.1 for RTC interrupt handling. Interrupts are enabled in the VIC using the VICIntEnable register (Table 76).

26.3 Features

- Measures the passage of time to maintain a calendar and clock.
- Ultra Low Power design to support battery powered systems.
- Provides Seconds, Minutes, Hours, Day of Month, Month, Year, Day of Week, and Day of Year.
- Dedicated 32 kHz oscillator or programmable prescaler from APB clock.
- Dedicated power supply pin VBAT can be connected to a battery or to the main 3.3 V.
- An alarm output pin (LPC2377/78 and LPC2388 only) is included to assist in waking up from Power-down modes and when the chip has had power removed to all functions except the RTC and battery RAM.
- Periodic interrupts can be generated from increments of any field of the time registers and selected fractional second values.
- 2 kB static RAM powered by VBAT.
- RTC and Battery RAM power supply is isolated from the rest of the chip.


26.4 Description

The Real Time Clock (RTC) is a set of counters for measuring time when system power is on, and optionally when it is off. It uses little power in Power-down or Deep power-down modes. On the LPC2300, the RTC can be clocked by a separate 32.768 KHz oscillator or by a programmable prescale divider based on the APB clock. Also, the RTC is powered by its own power supply pin, VBAT, which can be connected to a battery or to the same 3.3 V supply used by the rest of the device.

Chapter 26: LPC23XX Real Time Clock (RTC) and battery RAM

The VBAT pin supplies power to the RTC and the Battery RAM. These two functions require a minimum of power to operate, which can be supplied by an external battery. When the CPU and the rest of chip functions are stopped and power removed, the RTC can supply an alarm output that can be used by external hardware to restore chip power and resume operation. The alarm output has a nominal voltage swing of 1.8 V. Note that the PLL is disabled when waking up from power-down. See Section 4.6.10 for the PLL start-up procedure.

26.5 Architecture

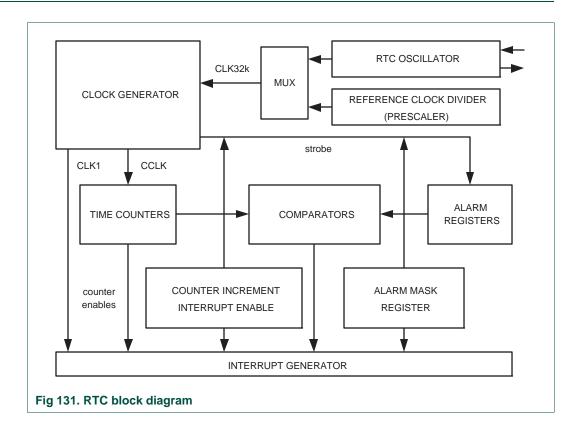

26.6 Pin description

Table 501. RTC pin description

Name	Туре	Description
RTCX1	I	Input to the RTC oscillator circuit.
RTCX2	0	Output from the RTC oscillator circuit.
		Remark: If the RTC is not used, the RTCX1/2 pins can be left floating.
VBAT	I	RTC power supply: 3.3 V on this pin supplies the power to the RTC.
		Remark: If the RTC is used, VBAT must be connected to either pin $V_{DD(3V3)}$, $V_{DD(DCDC)(3V3)}$, or an independent power supply (external battery). Otherwise, VBAT should be left floating. Do not ground VBAT.

Chapter 26: LPC23XX Real Time Clock (RTC) and battery RAM

26.7 Register description

The RTC includes a number of registers. The address space is split into four sections by functionality. The first eight addresses are the Miscellaneous Register Group (Section 26.7.2). The second set of eight locations are the Time Counter Group (Section 26.7.4). The third set of eight locations contain the Alarm Register Group (Section 26.7.5). The remaining registers control the Reference Clock Divider.

The Real Time Clock includes the registers shown in <u>Table 502</u>. Detailed descriptions of the registers follow. In these descriptions, for most of the registers the Reset Value column shows "NC", meaning that these registers are Not Changed by a Reset. Software must initialize these registers between power-on and setting the RTC into operation.

Table 502. Real Time Clock register map

Name	Description	Access	Reset Value ^[1]	Address
ILR	Interrupt Location Register	R/W	NC	0xE002 4000
CTC	Clock Tick Counter	RO	NC	0xE002 4004
CCR	Clock Control Register	R/W	NC	0xE002 4008
CIIR	Counter Increment Interrupt Register	R/W	NC	0xE002 400C
AMR	Alarm Mask Register	R/W	NC	0xE002 4010
CTIME0	Consolidated Time Register 0	RO	NC	0xE002 4014
CTIME1	Consolidated Time Register 1	RO	NC	0xE002 4018
CTIME2	Consolidated Time Register 2	RO	NC	0xE002 401C
SEC	Seconds Counter	R/W	NC	0xE002 4020
MIN	Minutes Register	R/W	NC	0xE002 4024
HOUR	Hours Register	R/W	NC	0xE002 4028
DOM	Day of Month Register	R/W	NC	0xE002 402C
DOW	Day of Week Register	R/W	NC	0xE002 4030
DOY	Day of Year Register	R/W	NC	0xE002 4034
MONTH	Months Register	R/W	NC	0xE002 4038
YEAR	Years Register	R/W	NC	0xE002 403C
CISS	Counter Increment select mask for Sub-Second interrupt	R/W	NC	0xE002 4040
ALSEC	Alarm value for Seconds	R/W	NC	0xE002 4060
ALMIN	Alarm value for Minutes	R/W	NC	0xE002 4064
ALHOUR	Alarm value for Seconds	R/W	NC	0xE002 4068
ALDOM	Alarm value for Day of Month	R/W	NC	0xE002 406C
ALDOW	Alarm value for Day of Week	R/W	NC	0xE002 4070
ALDOY	Alarm value for Day of Year	R/W	NC	0xE002 4074
ALMON	Alarm value for Months	R/W	NC	0xE002 4078
ALYEAR	Alarm value for Year	R/W	NC	0xE002 407C

Chapter 26: LPC23XX Real Time Clock (RTC) and battery RAM

Table 502. Real Time Clock register map

Name	Description	Access	Reset Value ^[1]	Address
PREINT	Prescaler value, integer portion	R/W	0	0xE002 4080
PREFRAC	Prescaler value, fractional portion	R/W	0	0xE002 4084

^[1] Registers in the RTC other than those that are part of the Prescaler are not affected by chip Reset. These registers must be initialized by software if the RTC is enabled. Reset Value reflects the data stored in used bits only. It does not include reserved bits content.

26.7.1 RTC interrupts

Interrupt generation is controlled through the Interrupt Location Register (ILR), Counter Increment Interrupt Register (CIIR), the alarm registers, and the Alarm Mask Register (AMR). Interrupts are generated only by the transition into the interrupt state. The ILR separately enables CIIR and AMR interrupts. Each bit in CIIR corresponds to one of the time counters. If CIIR is enabled for a particular counter, then every time the counter is incremented an interrupt is generated. The alarm registers allow the user to specify a date and time for an interrupt to be generated. The AMR provides a mechanism to mask alarm compares. If all non-masked alarm registers match the value in their corresponding time counter, then an interrupt is generated.

The RTC interrupt can bring the microcontroller out of power-down mode if the RTC is operating from its own oscillator on the RTCX1-2 pins. When the RTC interrupt is enabled for wake-up and its selected event occurs, the oscillator wake-up cycle associated with the XTAL1/2 pins is started. For details on the RTC based wake-up process see Section 4.8.8 "Interrupt Wakeup Register (INTWAKE - 0xE01F C144)" on page 66 and Section 4.9 "Wakeup timer" on page 70.

26.7.2 Miscellaneous register group

26.7.2.1 Interrupt Location Register (ILR - 0xE002 4000)

The Interrupt Location Register specifies which blocks are generating an interrupt (see <u>Table 503</u>). Writing a one to the appropriate bit clears the corresponding interrupt. Writing a zero has no effect. This allows the programmer to read this register and write back the same value to clear only the interrupt that is detected by the read.

Table 503. Interrupt Location Register (ILR - address 0xE002 4000) bit description

Bit	Symbol	Description	Reset value
0	RTCCIF	When one, the Counter Increment Interrupt block generated an interrupt. Writing a one to this bit location clears the counter increment interrupt.	NC
1	RTCALF	When one, the alarm registers generated an interrupt. Writing a one to this bit location clears the alarm interrupt.	NC
2	RTSSF	When one, the Counter Increment Sub-Seconds interrupt is generated. The interrupt rate is determined by the CISS register.	NC
7:2	-	Reserved, user software should not write ones to reserved bits. The value read from a reserved bit is not defined.	NA

Chapter 26: LPC23XX Real Time Clock (RTC) and battery RAM

26.7.2.2 Clock Tick Counter Register (CTCR - 0xE002 4004)

The Clock Tick Counter is read only. It can be reset to zero through the Clock Control Register (CCR). The CTC consists of the bits of the clock divider counter.

Table 504. Clock Tick Counter Register (CTCR - address 0xE002 4004) bit description

Bit	Symbol	Description	Reset value
0	-	Reserved, user software should not write ones to reserved bits. The value read from a reserved bit is not defined.	NA
15:1	Clock Tick Counter	Prior to the Seconds counter, the CTC counts 32,768 clocks per second. Due to the RTC Prescaler, these 32,768 time increments may not all be of the same duration. Refer to the Section 26.7.6.1 "Reference Clock Divider (Prescaler)" on page 592 for details.	NA

If the RTC is driven by the external 32.786 kHz oscillator, subsequent read operations of the CTCR may yield an incorrect result. The CTCR is implemented as a 15-bit ripple counter so that not all 15 bits change simultaneously. The LSB changes first, then the next, and so forth. Since the 32.786 kHz oscillator is asynchronous to the CPU clock, it is possible for a CTC read to occur during the time when the CTCR bits are changing resulting in an incorrect large difference between back-to-back reads.

If the RTC is driven by the PCLK, the CPU and the RTC are synchronous because both of their clocks are driven from the PLL output. Therefore, incorrect consecutive reads can not occur.

26.7.2.3 Clock Control Register (CCR - 0xE002 4008)

The clock register controls the operation of the clock divide circuit. Each bit of the clock register is described in Table 505.

Table 505. Clock Control Register (CCR - address 0xE002 4008) bit description

Bit	Symbol	Description	Reset value
0	CLKEN	Clock Enable. When this bit is a one the time counters are enabled. When it is a zero, they are disabled so that they may be initialized.	NA
1	CTCRST	CTC Reset. When one, the elements in the Clock Tick Counter are reset. The elements remain reset until CCR[1] is changed to zero.	
3:2	-	Internal test mode controls. These bits must be 0 for normal RTC operation.	NA
4	CLKSRC	If this bit is 0, the Clock Tick Counter takes its clock from the Prescaler, as on earlier devices in the NXP Embedded ARM family. See Section 4.7.4 for selection of the peripheral clock for the RTC. If this bit is 1, the CTC takes its clock from the 32 kHz oscillator that's connected to the RTCX1 and RTCX2 pins (see Section 26.10 "RTC external 32 kHz oscillator component selection" for hardware details).	NA
7:5	-	Reserved, user software should not write ones to reserved bits. The value read from a reserved bit is not defined.	NA

26.7.2.4 Counter Increment Interrupt Register (CIIR - 0xE002 400C)

The Counter Increment Interrupt Register (CIIR) gives the ability to generate an interrupt every time a counter is incremented. This interrupt remains valid until cleared by writing a one to bit zero of the Interrupt Location Register (ILR[0]).

Chapter 26: LPC23XX Real Time Clock (RTC) and battery RAM

Table 506. Counter Increment Interrupt Register (CIIR - address 0xE002 400C) bit description

Bit	Symbol	Description	Reset value
0	IMSEC	When 1, an increment of the Second value generates an interrupt.	NA
1	IMMIN	When 1, an increment of the Minute value generates an interrupt.	NA
2	IMHOUR	When 1, an increment of the Hour value generates an interrupt.	NA
3	IMDOM	When 1, an increment of the Day of Month value generates an interrupt.	NA
4	IMDOW	When 1, an increment of the Day of Week value generates an interrupt.	NA
5	IMDOY	When 1, an increment of the Day of Year value generates an interrupt.	NA
6	IMMON	When 1, an increment of the Month value generates an interrupt.	NA
7	IMYEAR	When 1, an increment of the Year value generates an interrupt.	NA

26.7.2.5 Counter Increment Select Mask Register (CISS - 0xE002 4040)

The CISS register provides a way to obtain millisecond-range periodic CPU interrupts from the Real Time Clock. This can allow freeing up one of the general purpose timers, or support power saving by putting the CPU into a reduced power mode between periodic interrupts.

Carry out signals from different stages of the Clock Tick Counter are used to generate the sub-second interrupts. The possibilities range from 16 counts of the CTC (about 488 microseconds), up to 2,048 counts of the CTC (about 62.5 milliseconds). The available counts and corresponding times are given in <u>Table 507</u>.

Table 507. Counter Increment Select Mask register (CISS - address 0xE002 4040) bit description

Bit	Symbol	Value	Description	Reset value	
2:0	SubSecSel		SubSecSelSub-Second Select. This field selects a count for the sub-second interrupt as follows:	NC	
		000	An interrupt is generated on every 16 counts of the Clock Tick Counter. At 32.768 kHz, this generates an interrupt approximately every 488 microseconds.		
		001	An interrupt is generated on every 32 counts of the Clock Tick Counter. At 32.768 kHz, this generates an interrupt approximately every 977 microseconds.		
			010	An interrupt is generated on every 64 counts of the Clock Tick Counter. At 32.768 kHz, this generates an interrupt approximately every 1.95 milliseconds.	
		011	An interrupt is generated on every 128 counts of the Clock Tick Counter. At 32.768 kHz, this generates an interrupt approximately every 3.9 milliseconds.		
		100	An interrupt is generated on every 256 counts of the Clock Tick Counter. At 32.768 kHz, this generates an interrupt approximately every 7.8 milliseconds.		
		101	An interrupt is generated on every 512 counts of the Clock Tick Counter. At 32.768 kHz, this generates an interrupt approximately every 15.6 milliseconds.		
		110	An interrupt is generated on every 1024 counts of the Clock Tick Counter. At 32.768 kHz, this generates an interrupt approximately every 31.25 milliseconds.		
		111	An interrupt is generated on every 2048 counts of the Clock Tick Counter. At 32.768 kHz, this generates an interrupt approximately every 62.5 milliseconds.		
6:3	Unused		Reserved, user software should not write ones to reserved bits. The value read from a reserved bit is not defined.	NA	

Chapter 26: LPC23XX Real Time Clock (RTC) and battery RAM

Table 507. Counter Increment Select Mask register (CISS - address 0xE002 4040) bit description

Bit	Symbol	Value	Description	Reset value
7	SubSecEna		Subsecond interrupt enable.	NC
		0	The sub-second interrupt is disabled.	
		1	The sub-second interrupt is enabled.	

26.7.2.6 Alarm Mask Register (AMR - 0xE002 4010)

The Alarm Mask Register (AMR) allows the user to mask any of the alarm registers. Table 508 shows the relationship between the bits in the AMR and the alarms. For the alarm function, every non-masked alarm register must match the corresponding time counter for an interrupt to be generated. The interrupt is generated only when the counter comparison first changes from no match to match. The interrupt is removed when a one is written to the appropriate bit of the Interrupt Location Register (ILR). If all mask bits are set, then the alarm is disabled.

Table 508. Alarm Mask Register (AMR - address 0xE002 4010) bit description

Bit	Symbol	Description	Reset value
0	AMRSEC	When 1, the Second value is not compared for the alarm.	NA
1	AMRMIN	When 1, the Minutes value is not compared for the alarm.	NA
2	AMRHOUR	When 1, the Hour value is not compared for the alarm.	NA
3	AMRDOM	When 1, the Day of Month value is not compared for the alarm.	NA
4	AMRDOW	When 1, the Day of Week value is not compared for the alarm.	NA
5	AMRDOY	When 1, the Day of Year value is not compared for the alarm.	NA
6	AMRMON	When 1, the Month value is not compared for the alarm.	NA
7	AMRYEAR	When 1, the Year value is not compared for the alarm.	NA

26.7.3 Consolidated time registers

The values of the Time Counters can optionally be read in a consolidated format which allows the programmer to read all time counters with only three read operations. The various registers are packed into 32 bit values as shown in <u>Table 509</u>, <u>Table 510</u>, and <u>Table 511</u>. The least significant bit of each register is read back at bit 0, 8, 16, or 24.

The Consolidated Time Registers are read only. To write new values to the Time Counters, the Time Counter addresses should be used.

26.7.3.1 Consolidated Time Register 0 (CTIME0 - 0xE002 4014)

The Consolidated Time Register 0 contains the low order time values: Seconds, Minutes, Hours, and Day of Week.

Table 509. Consolidated Time register 0 (CTIME0 - address 0xE002 4014) bit description

Bit	Symbol	Description	Reset value
5:0	Seconds	Seconds value in the range of 0 to 59	NA
7:6	-	Reserved, user software should not write ones to reserved bits. The value read from a reserved bit is not defined.	NA
13:8	Minutes	Minutes value in the range of 0 to 59	NA

UM10211

Chapter 26: LPC23XX Real Time Clock (RTC) and battery RAM

Table 509. Consolidated Time register 0 (CTIME0 - address 0xE002 4014) bit description

Bit	Symbol	Description	Reset value
15:14	-	Reserved, user software should not write ones to reserved bits. The value read from a reserved bit is not defined.	NA
20:16	Hours	Hours value in the range of 0 to 23	NA
23:21	-	Reserved, user software should not write ones to reserved bits. The value read from a reserved bit is not defined.	NA
26:24	Day Of Week	Day of week value in the range of 0 to 6	NA
31:27	-	Reserved, user software should not write ones to reserved bits. The value read from a reserved bit is not defined.	NA

26.7.3.2 Consolidated Time Register 1 (CTIME1 - 0xE002 4018)

The Consolidate Time Register 1 contains the Day of Month, Month, and Year values.

Table 510. Consolidated Time register 1 (CTIME1 - address 0xE002 4018) bit description

Bit	Symbol	Description	Reset value
4:0	Day of Month	Day of month value in the range of 1 to 28, 29, 30, or 31 (depending on the month and whether it is a leap year).	NA
7:5	-	Reserved, user software should not write ones to reserved bits. The value read from a reserved bit is not defined.	NA
11:8	Month	Month value in the range of 1 to 12.	NA
15:12	-	Reserved, user software should not write ones to reserved bits. The value read from a reserved bit is not defined.	NA
27:16	Year	Year value in the range of 0 to 4095.	NA
31:28	-	Reserved, user software should not write ones to reserved bits. The value read from a reserved bit is not defined.	NA

26.7.3.3 Consolidated Time Register 2 (CTIME2 - 0xE002 401C)

The Consolidate Time Register 2 contains just the Day of Year value.

Table 511. Consolidated Time register 2 (CTIME2 - address 0xE002 401C) bit description

Bit	Symbol	Description	
11:0	Day of Year	Day of year value in the range of 1 to 365 (366 for leap years).	NA
31:12 -		Reserved, user software should not write ones to reserved bits. The value read from a reserved bit is not defined.	NA

26.7.4 Time Counter Group

The time value consists of the eight counters shown in $\underline{\text{Table 512}}$ and $\underline{\text{Table 513}}$. These counters can be read or written at the locations shown in $\underline{\text{Table 513}}$.

Table 512. Time Counter relationships and values

Counter	Size	Enabled by	Minimum value	Maximum value
Second	6	Clk1 (see Figure 131)	0	59
Minute	6	Second	0	59
Hour	5	Minute	0	23

UM10211

Chapter 26: LPC23XX Real Time Clock (RTC) and battery RAM

Table 512. Time Counter relationships and values

Counter	Size	Enabled by	Minimum value	Maximum value
Day of Month	5	Hour	1	28, 29, 30 or 31
Day of Week	3	Hour	0	6
Day of Year	9	Hour	1	365 or 366 (for leap year)
Month	4	Day of Month	1	12
Year	12	Month or day of Year	0	4095

Table 513. Time Counter registers

Name	Size	Description	Access	Address
SEC	6	Seconds value in the range of 0 to 59	R/W	0xE002 4020
MIN	6	Minutes value in the range of 0 to 59	R/W	0xE002 4024
HOUR	5	Hours value in the range of 0 to 23	R/W	0xE002 4028
DOM	5	Day of month value in the range of 1 to 28, 29, 30, or 31 (depending on the month and whether it is a leap year).[1]	R/W	0xE002 402C
DOW	3	Day of week value in the range of 0 to 6[1]	R/W	0xE002 4030
DOY	9	Day of year value in the range of 1 to 365 (366 for leap years)[1]	R/W	0xE002 4034
MONTH	4	Month value in the range of 1 to 12	R/W	0xE002 4038
YEAR	12	Year value in the range of 0 to 4095	R/W	0xE002 403C

^[1] These values are simply incremented at the appropriate intervals and reset at the defined overflow point. They are not calculated and must be correctly initialized in order to be meaningful.

26.7.4.1 Leap year calculation

The RTC does a simple bit comparison to see if the two lowest order bits of the year counter are zero. If true, then the RTC considers that year a leap year. The RTC considers all years evenly divisible by 4 as leap years. This algorithm is accurate from the year 1901 through the year 2099, but fails for the year 2100, which is not a leap year. The only effect of leap year on the RTC is to alter the length of the month of February for the month, day of month, and year counters.

26.7.5 Alarm register group

The alarm registers are shown in <u>Table 514</u>. The values in these registers are compared with the time counters. If all the unmasked (See <u>Section 26.7.2.6 "Alarm Mask Register (AMR - 0xE002 4010)" on page 589</u>) alarm registers match their corresponding time counters then an interrupt is generated. The interrupt is cleared when a one is written to bit one of the Interrupt Location Register (ILR[1]).

Table 514. Alarm registers

Name	Size	Description	Access	Address
ALSEC	6	Alarm value for Seconds	R/W	0xE002 4060
ALMIN	6	Alarm value for Minutes	R/W	0xE002 4064
ALHOUR	5	Alarm value for Hours	R/W	0xE002 4068
ALDOM	5	Alarm value for Day of Month	R/W	0xE002 406C
ALDOW	3	Alarm value for Day of Week	R/W	0xE002 4070

Chapter 26: LPC23XX Real Time Clock (RTC) and battery RAM

Table 514. Alarm registers

Name	Size	Description	Access	Address
ALDOY	9	Alarm value for Day of Year	R/W	0xE002 4074
ALMON	4	Alarm value for Months	R/W	0xE002 4078
ALYEAR	12	Alarm value for Years	R/W	0xE002 407C

26.7.6 RTC clock generation

The RTC may be clocked by either the 32.786 kHz RTC oscillator or by the APB peripheral clock (PCLK) after adjustment by the reference clock divider.

26.7.6.1 Reference Clock Divider (Prescaler)

The reference clock divider (hereafter referred to as the Prescaler) may be used when the RTC clock source is not supplied by the RTC oscillator, but comes from the APB peripheral clock (PCLK).

The Prescaler allows generation of a 32.768 kHz reference clock from any PCLK frequency greater than or equal to 65.536 kHz (2×32.768 kHz). This permits the RTC to always run at the proper rate regardless of the peripheral clock rate. Basically, the Prescaler divides PCLK by a value which contains both an integer portion and a fractional portion. The result is not a continuous output at a constant frequency, some clock periods will be one PCLK longer than others. However, the overall result can always be 32,768 counts per second.

The reference clock divider consists of a 13 bit integer counter and a 15 bit fractional counter. The reasons for these counter sizes are as follows:

- 1. For frequencies that are expected to be supported by the LPC2300, a 13 bit integer counter is required. This can be calculated as 160 MHz divided by 32,768 minus 1 equals 4881 with a remainder of 26,624. Thirteen bits are needed to hold the value 4881, but actually supports frequencies up to 268.4 MHz (32,768 × 8192).
- 2. The remainder value could be as large as 32,767, which requires 15 bits.

Table 515. Reference Clock Divider registers

Name	Size	Description	Access	Address
PREINT	13	Prescale Value, integer portion	R/W	0xE002 4080
PREFRAC	15	Prescale Value, fractional portion	R/W	0xE002 4084

26.7.6.2 Prescaler Integer Register (PREINT - 0xE002 4080)

This is the integer portion of the prescale value, calculated as:

PREINT = int (PCLK/32768) - 1. The value of PREINT must be greater than or equal to 1.

Table 516: Prescaler Integer register (PREINT - address 0xE002 4080) bit description

Bit	Symbol	Description	Reset Value
12:0	Prescaler Integer	Contains the integer portion of the RTC prescaler value.	0
15:13	-	Reserved, user software should not write ones to reserved bits. The value read from a reserved bit is not defined.	NA

Chapter 26: LPC23XX Real Time Clock (RTC) and battery RAM

26.7.6.3 Prescaler Fraction Register (PREFRAC - 0xE002 4084)

This is the fractional portion of the prescale value, and may be calculated as:

 $PREFRAC = PCLK - ((PREINT + 1) \times 32768).$

Table 517: Prescaler Integer register (PREFRAC - address 0xE002 4084) bit description

Bit	Symbol	Description	Reset Value
14:0	Prescaler Fraction	Contains the integer portion of the RTC prescaler value.	0
15	-	Reserved, user software should not write ones to reserved bits. The value read from a reserved bit is not defined.	NA

26.7.6.4 Example of Prescaler Usage

In a simplistic case, the PCLK frequency is 65.537 kHz. So:

PREINT = int (PCLK
$$/ 32768$$
) - 1 = 1 and
PREFRAC = PCLK - ([PREINT + 1] x 32768) = 1

With this prescaler setting, exactly 32,768 clocks per second will be provided to the RTC by counting 2 PCLKs 32,767 times, and 3 PCLKs once.


In a more realistic case, the PCLK frequency is 10 MHz. Then,

```
PREINT = int (PCLK / 32768) - 1 = 304 and
PREFRAC = PCLK - ([PREINT + 1] x 32768) = 5,760.
```

In this case, 5,760 of the prescaler output clocks will be 306 (305+1) PCLKs long, the rest will be 305 PCLKs long.

In a similar manner, any PCLK rate greater than 65.536 kHz (as long as it is an even number of cycles per second) may be turned into a 32 kHz reference clock for the RTC. The only caveat is that if PREFRAC does not contain a zero, then not all of the 32,768 per second clocks are of the same length. Some of the clocks are one PCLK longer than others. While the longer pulses are distributed as evenly as possible among the remaining pulses, this "jitter" could possibly be of concern in an application that wishes to observe the contents of the Clock Tick Counter (CTC) directly(Section 26.7.2.2 "Clock Tick Counter Register (CTCR - 0xE002 4004)" on page 587).

Chapter 26: LPC23XX Real Time Clock (RTC) and battery RAM

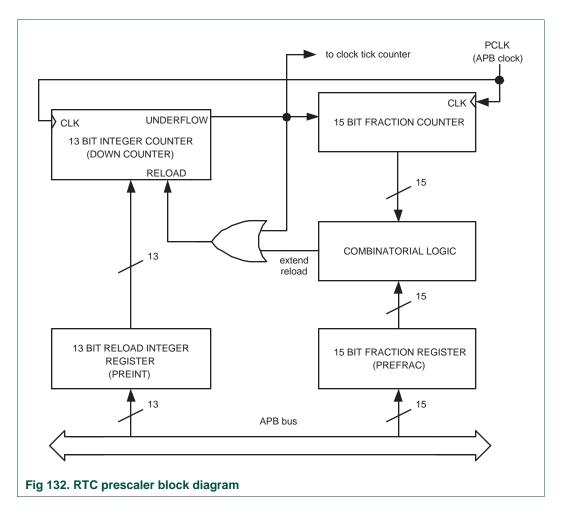

26.7.6.5 Prescaler operation

The Prescaler block labelled "Combination Logic" in Figure 132 determines when the decrement of the 13 bit PREINT counter is extended by one PCLK. In order to both insert the correct number of longer cycles, and to distribute them evenly, the combinatorial Logic associates each bit in PREFRAC with a combination in the 15 bit Fraction Counter. These associations are shown in the following Table 518.

For example, if PREFRAC bit 14 is a one (representing the fraction 1/2), then half of the cycles counted by the 13 bit counter need to be longer. When there is a 1 in the LSB of the Fraction Counter, the logic causes every alternate count (whenever the LSB of the Fraction Counter=1) to be extended by one PCLK, evenly distributing the pulse widths. Similarly, a one in PREFRAC bit 13 (representing the fraction 1/4) will cause every fourth cycle (whenever the two LSBs of the Fraction Counter = 10) counted by the 13 bit counter to be longer.

Chapter 26: LPC23XX Real Time Clock (RTC) and battery RAM

Fraction Counter PREFRAC Bit 14 13 12 11 10 9 7 8 6 --- ---- ---- 1 --- ---- ---- --10 --- ---- -100 --- ---- 1000 --- ---- 0000 --- ---- --10 0000 --- --- -100 0000 1 --- 1000 0000 1 --- ---1 0000 0000 1 1 --- --10 0000 0000 1 --- -100 0000 0000 --- 1000 0000 0000 1

Table 518. Prescaler cases where the Integer Counter reload value is incremented

26.8 RTC usage notes

--1 0000 0000 0000

-10 0000 0000 0000

100 0000 0000 0000

The RTC may be clocked by either the 32.786 kHz RTC oscillator, or by the APB peripheral clock (PCLK) after adjustment by the reference clock divider.

If the RTC is used, VBAT must be connected to either pin $V_{DD(3V3)}$ or an independent power supply (external battery). Otherwise, VBAT should be left floating. Do not ground VBAT. No provision is made in the LPC2300 to retain RTC status upon the VBAT power loss, or to maintain time incrementation if the clock source is lost, interrupted, or altered.

Since the RTC operates using one of two available clocks (the APB clock (PCLK) or the 32 kHz signal coming from the RTCX1-2 pins), any interruption of the selected clock will cause the time to drift away from the time value it would have provided otherwise. The variance could be to actual clock time if the RTC was initialized to that, or simply an error in elapsed time since the RTC was activated.

While the signal from RTCX1-2 pins can be used to supply the RTC clock at anytime, selecting the PCLK as the RTC clock and entering the Power-down mode will cause a lapse in the time update. Also, feeding the RTC with the PCLK and altering this timebase during system operation (by reconfiguring the PLL, the APB divider, or the RTC prescaler) will result in some form of accumulated time error. Accumulated time errors may occur in case RTC clock source is switched between the PCLK to the RTCX pins, too.

Once the 32 kHz signal from RTCX1-2 pins is selected as a clock source, the RTC can operate completely without the presence of the APB clock (PCLK). Therefore, power sensitive applications (i.e. battery powered application) utilizing the RTC will reduce the

1

1 -

1

Chapter 26: LPC23XX Real Time Clock (RTC) and battery RAM

power consumption by using the signal from RTCX1-2 pins, and writing a 0 into the PCRTC bit in the PCONP power control register (see Section 4.8 "Power control" on page 63).

Remark: Note that if the RTC is running from the 32 kHz signal and powered by VBAT, the internal registers can be read. However, they cannot be written to unless the PCRTC bit in the PCONP register is set to 1. This restriction does not apply to the time counter registers.

26.8.1 Alarm output

The RTC includes an alarm output pin that reflects both the alarm comparisons and interrupts from the RTC. This pin is in the RTC power domain, and therefore it is available during all power saving modes as long as power is supplied to VBAT. Since the Alarm pin combines the alarm and interrupt functions of the RTC, either a specific time/date/etc. or a periodic interval can be provided to the outside world. For example, a time of day alarm could be used to tell external circuitry to turn on power to the LPC2300 in order to wake up from Deep power-down mode.


26.9 Battery RAM

The Battery RAM is a 2 kB static RAM residing on the APB bus. The address range is 0xE008 4000 to 0xE008 47FF. The SRAM can be accessed word-wise (32-bit) only.

The Battery RAM is powered from the VBAT pin along with the RTC, both of which exist in a power domain that is isolated from the rest of the chip. This allows them to operate while the main chip power has been removed.

26.10 RTC external 32 kHz oscillator component selection

The RTC external oscillator circuit is shown in <u>Figure 133</u>. Since the feedback resistance is integrated on chip, only a crystal, the capacitances C_{X1} and C_{X2} need to be connected externally to the microcontroller.

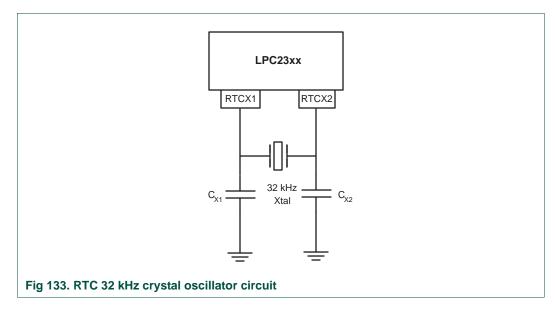

UM10211

Chapter 26: LPC23XX Real Time Clock (RTC) and battery RAM

<u>Table 519</u> gives the crystal parameters that should be used. C_L is the typical load capacitance of the crystal and is usually specified by the crystal manufacturer. The actual C_L influences oscillation frequency. When using a crystal that is manufactured for a different load capacitance, the circuit will oscillate at a slightly different frequency (depending on the quality of the crystal) compared to the specified one. Therefore for an accurate time reference it is advised to use the load capacitors as specified in <u>Table 519</u> that belong to a specific C_L . The value of external capacitances C_{X1} and C_{X2} specified in this table are calculated from the internal parasitic capacitances and the C_L . Parasitics from PCB and package are not taken into account.

Table 519. Recommended values for the RTC external 32 kHz oscillator $C_{X1/X2}$ components

Crystal load capacitance C _L	Maximum crystal series resistance R _S	External load capacitors C _{X1} , _{CX2}
11 pF	< 100 kΩ	18 pF, 18 pF
13 pF	< 100 kΩ	22 pF, 22 pF
15 pF	< 100 kΩ	27 pF, 27 pF

UM10211

Chapter 27: LPC23XX Analog-to-Digital Converter (ADC)

Rev. 4.1 — 5 September 2012

User manual

27.1 How to read this chapter

On the LPC23XX, the number of ADC channels is dependent on the part:

- LPC2361/62/64/65/66/67/68 and LPC2387: 6 channels
- LPC2377/78 and LPC2388: 8 channels

Registers for ADC channels 6 and 7 are reserved on the LPC2361/62/64/65/66/67/68 and LPC2387 parts.

27.2 Basic configuration

The ADC is configured using the following registers:

- 1. Power: In the PCONP register (Table 56), set bits PCADC.
 - **Remark:** On reset, the ADC is disabled. To enable the ADC, first set the PCADC bit, and then enable the ADC in the ADOCR register (bit PDN) <u>Table 522</u>. To disable the ADC, first clear the PDN bit, and then clear the PCADC bit.
- Clock: In the PCLK_SEL0 register (<u>Table 49</u>), select PCLK_ADC. To scale the clock for the ADC, see <u>Table 522</u> bits CLKDIV.
- Pins: Select ADC pins and pin modes in registers PINSELn and PINMODEn (see Section 9.5).
- 4. Interrupts: To enable interrupts in the ADC, see <u>Table 525</u>. Interrupts are enabled in the VIC using the VICIntEnable register (<u>Table 76</u>).

27.3 Features

- 10 bit successive approximation analog to digital converter.
- Input multiplexing among 6 pins or 8 pins.
- Power down mode.
- Measurement range 0 to 3 V.
- 10 bit conversion time ≥ 2.44 µs.
- Burst conversion mode for single or multiple inputs.
- Optional conversion on transition on input pin or Timer Match signal.
- Individual result registers for each A/D channel to reduce interrupt overhead.

27.4 Description

Basic clocking for the A/D converters is provided by the APB peripheral clock PCLK_ADC (see <u>Section 4.7.4</u>). A programmable divider is included in each converter to scale this clock to the 4.5 MHz (max) clock needed by the successive approximation process. A fully accurate conversion requires 11 of these clocks.

Chapter 27: LPC23XX Analog-to-Digital Converter (ADC)

27.5 Pin description

Table 520 gives a brief summary of each of ADC related pins.

Table 520. A/D pin description

	•	·
Pin	Туре	Description
AD0[5:0] or AD0[7:0]	Input	Analog Inputs. The A/D converter cell can measure the voltage on any of these input signals.
		Note: while the ADC pins are specified as 5 V tolerant (see Section 8.1), the analog multiplexing in the ADC block is not. More than $V_{DD(3V3)}/VREF/3.3 \text{ V}$ (V_{DDA}) should not be applied to any pin that is selected as an ADC input, or the ADC reading will be incorrect. If for example AD0.0 and AD0.1 are used as the ADC0 inputs and voltage on AD0.0 = 4.5 V while AD0.1 = 2.5 V, an excessive voltage on the AD0.0 can cause an incorrect reading of the AD0.1, although the AD0.1 input voltage is within the right range.
		If the A/D converter is not used in an application then the pins associated with A/D inputs can be used as 5V tolerant digital IO pins
VREF	Reference	Voltage Reference. This pin provides a voltage reference level for the A/D converter.
V _{DDA} , V _{SSA}	Power	Analog Power and Ground. These should be nominally the same voltages as $V_{DD(3V3)}$ and V_{SS} respectively but should be isolated to minimize noise and error.

Remark: When the ADC is not used, the V_{DDA} and VREF pins must be connected to the power supply, and pin V_{SSA} must be grounded. These pins should **not** be left floating.

27.6 Register description

The base address of the ADC is 0xE003 4000. The A/D Converter includes registers as shown in Table 521.

Table 521. A/D registers

Name	Description	Access	Reset Value[1]	Address
AD0CR	A/D Control Register. The ADOCR register must be written to select the operating mode before A/D conversion can occur.	R/W	0x0000 0001	0xE003 4000
AD0GDR	A/D Global Data Register. Contains the result of the most recent A/D conversion.	R/W	NA	0xE003 4004
AD0STAT	A/D Status Register. This register contains DONE and OVERRUN flags for all of the A/D channels, as well as the A/D interrupt flag.	RO	0	0xE003 4030
ADOINTEN	A/D Interrupt Enable Register. This register contains enable bits that allow the DONE flag of each A/D channel to be included or excluded from contributing to the generation of an A/D interrupt.	R/W	0x0000 0100	0xE003 400C
AD0DR0	A/D Channel 0 Data Register. This register contains the result of the most recent conversion completed on channel 0	R/W	NA	0xE003 4010
AD0DR1	A/D Channel 1 Data Register. This register contains the result of the most recent conversion completed on channel 1.	R/W	NA	0xE003 4014

Chapter 27: LPC23XX Analog-to-Digital Converter (ADC)

Table 521. A/D registers

Name	Description	Access	Reset Value[1]	Address
AD0DR2	A/D Channel 2 Data Register. This register contains the result of the most recent conversion completed on channel 2.	R/W	NA	0xE003 4018
AD0DR3	A/D Channel 3 Data Register. This register contains the result of the most recent conversion completed on channel 3.	R/W	NA	0xE003 401C
AD0DR4	A/D Channel 4 Data Register. This register contains the result of the most recent conversion completed on channel 4.	R/W	NA	0xE003 4020
AD0DR5	A/D Channel 5 Data Register. This register contains the result of the most recent conversion completed on channel 5.	R/W	NA	0xE003 4024
AD0DR6	A/D Channel 6 Data Register. This register contains the result of the most recent conversion completed on channel 6.	R/W	NA	0xE003 4028
AD0DR7	A/D Channel 7 Data Register. This register contains the result of the most recent conversion completed on channel 7.	R/W	NA	0xE003 402C

^[1] Reset Value reflects the data stored in used bits only. It does not include reserved bits content.

27.6.1 A/D Control Register (AD0CR - 0xE003 4000)

The A/D Control Register provides bits to select A/D channels to be converted, A/D timing, A/D modes, and the A/D start trigger.

Table 522: A/D Control Register (AD0CR - address 0xE003 4000) bit description

Bit	Symbol	Value	Description	Reset Value
7:0	SEL		Selects which of the AD0.7:0 pins is (are) to be sampled and converted. For AD0, bit 0 selects Pin AD0.0, and bit 7 selects pin AD0.7. In software-controlled mode, only one of these bits should be 1. In hardware scan mode, any value containing 1 to 8 ones. All zeroes is equivalent to 0x01.	0x01
15:8	15:8 CLKDIV		The APB clock (PCLK) is divided by (this value plus one) to produce the clock for the A/D converter, which should be less than or equal to 4.5 MHz. Typically, software should program the smallest value in this field that yields a clock of 4.5 MHz or slightly less, but in certain cases (such as a high-impedance analog source) a slower clock may be desirable.	0
16	BURST	0	Conversions are software controlled and require 11 clocks.	0
		1	The AD converter does repeated conversions at the rate selected by the CLKS field, scanning (if necessary) through the pins selected by 1s in the SEL field. The first conversion after the start corresponds to the least-significant 1 in the SEL field, then higher numbered 1 bits (pins) if applicable. Repeated conversions can be terminated by clearing this bit, but the conversion that's in progress when this bit is cleared will be completed. Important: START bits must be 000 when BURST = 1 or conversions will not start.	

Chapter 27: LPC23XX Analog-to-Digital Converter (ADC)

Table 522: A/D Control Register (AD0CR - address 0xE003 4000) bit description

Bit	Symbol	Value	Description	Reset Value
19:17	CLKS		This field selects the number of clocks used for each conversion in Burst mode, and the number of bits of accuracy of the result in the LS bits of ADDR, between 11 clocks (10 bits) and 4 clocks (3 bits).	000
		000	11 clocks / 10 bits	
		001	10 clocks / 9 bits	
		010	9 clocks / 8 bits	
		011	8 clocks / 7 bits	
		100	7 clocks / 6 bits	
		101	6 clocks / 5 bits	
		110	5 clocks / 4 bits	
		111	4 clocks / 3 bits	
20			Reserved, user software should not write ones to reserved bits. The value read from a reserved bit is not defined.	NA
21	PDN	1	The A/D converter is operational.	0
		0	The A/D converter is in power-down mode.	
23:22	-		Reserved, user software should not write ones to reserved bits. The value read from a reserved bit is not defined.	NA
26:24	START		When the BURST bit is 0, these bits control whether and when an A/D conversion is started:	0
		000	No start (this value should be used when clearing PDN to 0).	
		001	Start conversion now.	
		010	Start conversion when the edge selected by bit 27 occurs on P2.10/EINT0.	
		011	Start conversion when the edge selected by bit 27 occurs on P1.27/CAP0.1.	
		100	Start conversion when the edge selected by bit 27 occurs on MAT0.1.	
		101	Start conversion when the edge selected by bit 27 occurs on MAT0.3[1].	
		110	Start conversion when the edge selected by bit 27 occurs on MAT1.0.	
		111	Start conversion when the edge selected by bit 27 occurs on MAT1.1.	
27	EDGE		This bit is significant only when the START field contains 010-111. In these cases:	0
		1	Start conversion on a falling edge on the selected CAP/MAT signal.	
		0	Start conversion on a rising edge on the selected CAP/MAT signal.	
31:28	-		Reserved, user software should not write ones to reserved bits. The value read from a reserved bit is not defined.	NA

^[1] Function not pinned out on LPC2300.

27.6.2 A/D Global Data Register (AD0GDR - 0xE003 4004)

The A/D Global Data Register contains the result of the most recent A/D conversion. This includes the data, DONE, and Overrun flags, and the number of the A/D channel to which the data relates.

Chapter 27: LPC23XX Analog-to-Digital Converter (ADC)

Table 523: A/D Global Data Register (AD0GDR - address 0xE003 4004) bit description

Bit	Symbol	Description	Reset Value
5:0	Unused	These bits always read as zeroes. They provide compatible expansion room for future, higher-resolution A/D converters.	0
15:6	V/V _{REF}	When DONE is 1, this field contains a binary fraction representing the voltage on the Ain pin selected by the SEL field, divided by the voltage on the V_{DDA} pin. Zero in the field indicates that the voltage on the Ain pin was less than, equal to, or close to that on V_{SSA} , while 0x3FF indicates that the voltage on Ain was close to, equal to, or greater than that on V_{REF} .	X
23:16	Unused	These bits always read as zeroes. They allow accumulation of successive A/D values without AND-masking, for at least 256 values without overflow into the CHN field.	0
26:24	CHN	These bits contain the channel from which the LS bits were converted.	Χ
29:27	Unused	These bits always read as zeroes. They could be used for expansion of the CHN field in future compatible A/D converters that can convert more channels.	0
30	OVERU N	This bit is 1 in burst mode if the results of one or more conversions was (were) lost and overwritten before the conversion that produced the result in the LS bits. In non-FIFO operation, this bit is cleared by reading this register.	0
31	DONE	This bit is set to 1 when an A/D conversion completes. It is cleared when this register is read and when the ADCR is written. If the ADCR is written while a conversion is still in progress, this bit is set and a new conversion is started.	0

27.6.3 A/D Status Register (AD0STAT - 0xE003 4030)

The A/D Status register allows checking the status of all A/D channels simultaneously. The DONE and OVERRUN flags appearing in the ADDRn register for each A/D channel are mirrored in ADSTAT. The interrupt flag (the logical OR of all DONE flags) is also found in ADSTAT.

Table 524: A/D Status Register (AD0STAT - address 0xE003 4030) bit description

Bit	Symbol	Description	Reset Value
7:0	Done7:0	These bits mirror the DONE status flags that appear in the result register for each A/D channel.	0
15:8	Overrun7:0	These bits mirror the OVERRRUN status flags that appear in the result register for each A/D channel. Reading ADSTAT allows checking the status of all A/D channels simultaneously.	0
16	ADINT	This bit is the A/D interrupt flag. It is one when any of the individual A/D channel Done flags is asserted and enabled to contribute to the A/D interrupt via the ADINTEN register.	0
31:17	Unused	Unused, always 0.	0

Chapter 27: LPC23XX Analog-to-Digital Converter (ADC)

27.6.4 A/D Interrupt Enable Register (AD0INTEN - 0xE003 400C)

This register allows control over which A/D channels generate an interrupt when a conversion is complete. For example, it may be desirable to use some A/D channels to monitor sensors by continuously performing conversions on them. The most recent results are read by the application program whenever they are needed. In this case, an interrupt is not desirable at the end of each conversion for some A/D channels.

Table 525: A/D Interrupt Enable Register (AD0INTEN - address 0xE003 400C) bit description

Bit	Symbol	Description	Reset Value
7:0	ADINTEN 7:0	These bits allow control over which A/D channels generate interrupts for conversion completion. When bit 0 is one, completion of a conversion on A/D channel 0 will generate an interrupt, when bit 1 is one, completion of a conversion on A/D channel 1 will generate an interrupt, etc.	0x00
8	ADGINTEN	When 1, enables the global DONE flag in ADDR to generate an interrupt. When 0, only the individual A/D channels enabled by ADINTEN 7:0 will generate interrupts.	1
31:9	Unused	Unused, always 0.	0

27.6.5 A/D Data Registers (AD0DR0 to AD0DR7 - 0xE003 4010 to 0xE003 402C)

The A/D Data Register hold the result when an A/D conversion is complete, and also include the flags that indicate when a conversion has been completed and when a conversion overrun has occurred.

Table 526: A/D Data Registers (AD0DR0 to AD0DR7 - addresses 0xE003 4010 to 0xE003 402C) bit description

Bit	Symbol	Description	Reset Value
5:0	Unused	Unused, always 0.	0
		These bits always read as zeroes. They provide compatible expansion room for future, higher-resolution ADCs.	
15:6	V/V _{REF}	When DONE is 1, this field contains a binary fraction representing the voltage on the Ain pin, divided by the voltage on the Vref pin. Zero in the field indicates that the voltage on the Ain pin was less than, equal to, or close to that on $V_{REF},$ while 0x3FF indicates that the voltage on Ain was close to, equal to, or greater than that on Vref.	NA
29:16	Unused	These bits always read as zeroes. They allow accumulation of successive A/D values without AND-masking, for at least 256 values without overflow into the CHN field.	0
30	OVERRUN	This bit is 1 in burst mode if the results of one or more conversions was (were) lost and overwritten before the conversion that produced the result in the LS bits. This bit is cleared by reading this register.	0
31	DONE	This bit is set to 1 when an A/D conversion completes. It is cleared when this register is read.	0

Chapter 27: LPC23XX Analog-to-Digital Converter (ADC)

27.7 Operation

27.7.1 Hardware-triggered conversion

If the BURST bit in the ADCR is 0 and the START field contains 010-111, the A/D converter will start a conversion when a transition occurs on a selected pin or Timer Match signal. The choices include conversion on a specified edge of any of 4 Match signals, or conversion on a specified edge of either of 2 Capture/Match pins. The pin state from the selected pad or the selected Match signal, XORed with ADCR bit 27, is used in the edge detection logic.

27.7.2 Interrupts

An interrupt is requested to the Vectored Interrupt Controller (VIC) when the ADINT bit in the ADSTAT register is 1. The ADINT bit is one when any of the DONE bits of A/D channels that are enabled for interrupts (via the ADINTEN register) are one. Software can use the Interrupt Enable bit in the VIC that corresponds to the ADC to control whether this results in an interrupt. The result register for an A/D channel that is generating an interrupt must be read in order to clear the corresponding DONE flag.

27.7.3 Accuracy vs. Digital Receiver

While the A/D converter can be used to measure the voltage on any AIN pin, regardless of the pin's setting in the Pin Select register (<u>Table 104 "Pin Connect Block Register Map" on page 155</u>), selecting the AIN function improves the conversion accuracy by disabling the pin's digital receiver.

UM10211

Chapter 28: LPC23XX Digital-to Analog Converter (DAC) Rev. 4.1 — 5 September 2012 User r

User manual

28.1 Basic configuration

The DAC is configured using the following registers:

- 1. Power: The DAC is always on.
- 2. Clock: In the PCLK_SEL0 register (Table 49), select PCLK_DAC.
- 3. Pins: Select the DAC pin and pin mode in registers PINSEL1 and PINMODE1 (see Section 9.5).

28.2 Features

- 10 bit digital to analog converter
- · Resistor string architecture
- Buffered output
- Power down mode
- · Selectable speed vs. power

28.3 Pin description

Table 527 gives a brief summary of each of DAC related pins.

Table 527. D/A Pin Description

Pin	Туре	Description
AOUT	Output	Analog Output. After the selected settling time after the DACR is written with a new value, the voltage on this pin (with respect to V_{SSA}) is VALUE/1024 \times VREF.
VREF	Reference	Voltage Reference. This pin provides a voltage reference level for the D/A converter.
V _{DDA} , V _{SSA}	Power	Analog Power and Ground. These should be nominally the same voltages as $V_{DD(3V3)}$ and V_{SS} , but should be isolated to minimize noise and error.

Remark: When the DAC is not used, the V_{DDA} and VREF pins must be connected to the power supply, and pin V_{SSA} must be grounded. These pins should **not** be left floating.

28.4 Register description (DACR - 0xE006 C000)

This read/write register includes the digital value to be converted to analog, and a bit that trades off performance vs. power. Bits 5:0 are reserved for future, higher-resolution D/A converters.

Chapter 28: LPC23XX Digital-to Analog Converter (DAC)

Table 528: D/A Converter Register (DACR - address 0xE006 C000) bit description

Bit	Symbol	Value	Description	Reset Value
5:0	-		Reserved, user software should not write ones to reserved bits. The value read from a reserved bit is not defined.	NA
15:6	VALUE		After the selected settling time after this field is written with a new VALUE, the voltage on the A_{OUT} pin (with respect to $V_{SSA}\!)$ is VALUE/1024 \times VREF.	0
16	BIAS	0	The settling time of the DAC is 1 μs max, and the maximum current is 700 $\mu A.$	0
		1	The settling time of the DAC is 2.5 μs and the maximum current is 350 μA .	
31:17	-		Reserved, user software should not write ones to reserved bits. The value read from a reserved bit is not defined.	NA

28.5 Operation

Bits 21:20 of the PINSEL1 register (Section 9.5.2 "Pin Function Select Register 1 (PINSEL1 - 0xE002 C004)" on page 157) control whether the DAC is enabled and controlling the state of pin P0.26/AD0.3/AOUT/RXD3. When these bits are 10, the DAC is powered on and active.

The settling times noted in the description of the BIAS bit are valid for a capacitance load on the AOUT pin not exceeding 100 pF. A load impedance value greater than that value will cause settling time longer than the specified time. One or more graph(s) of load impedance vs. settling time will be included in the final data sheet.

UM10211

Chapter 29: LPC23XX Flash memory programming firmware

Rev. 4.1 — 5 September 2012

User manual

29.1 Introduction

The boot loader controls initial operation after reset and also provides the tools for programming the flash memory. This could be initial programming of a blank device, erasure and re-programming of a previously programmed device, or programming of the flash memory by the application program in a running system.

29.2 Features

- In-System Programming: In-System programming (ISP) is programming or reprogramming the on-chip flash memory, using the boot loader software and UART0 serial port. This can be done when the part resides in the end-user board.
- In Application Programming: In-Application (IAP) programming is performing erase and write operation on the on-chip flash memory, as directed by the end-user application code.

29.3 Description

The flash boot loader code is executed every time the part is powered on or reset. The loader can execute the ISP command handler or the user application code. A LOW level after reset at the P2.10 pin is considered as an external hardware request to start the ISP command handler. Assuming that power supply pins are on their nominal levels when the rising edge on RESET pin is generated, it may take up to 3 ms before P2.10 is sampled and the decision on whether to continue with user code or ISP handler is made. If P2.10 is sampled low and the watchdog overflow flag is set, the external hardware request to start the ISP command handler is ignored. If there is no request for the ISP command handler execution (P2.10 is sampled HIGH after reset), a search is made for a valid user program. If a valid user program is found then the execution control is transferred to it. If a valid user program is not found, the auto-baud routine is invoked.

Pin P2.10 that is used as hardware request for ISP requires special attention. Since P2.10 is in high impedance mode after reset, it is important that the user provides external hardware (a pull-up resistor or other device) to put the pin in a defined state. Otherwise unintended entry into ISP mode may occur.


When ISP mode is entered after a power on reset, the IRC and PLL are used to generate the CCLK of 14.748 MHz. The baud rates that can easily be obtained in this case are: 9600 Bd, 19200 Bd, 38400 Bd, 57600 Bd, 115200 Bd, and 230400 Bd. This may not be the case when ISP is invoked by the user application (see Section 29.8.8 "Reinvoke ISP" on page 627).

29.3.1 Memory map after any reset

The flash portion of the boot block is 8 kB in size and resides in the top portion (starting from 0x0007 E000) of the on-chip flash memory. After any reset the entire boot block is also mapped to the top of the on-chip memory space i.e. the boot block is also visible in the memory region starting from the address 0x7FFF E000. The flash boot loader is

Chapter 29: LPC23XX Flash memory programming firmware

designed to run from this memory area, but both the ISP and IAP software use parts of the on-chip RAM. The RAM usage is described later in this chapter. The interrupt vectors residing in the boot block of the on-chip flash memory also become active after reset, i.e., the bottom 64 bytes of the boot block are also visible in the memory region starting from the address 0x0000 0000. The reset vector contains a jump instruction to the entry point of the flash boot loader software.

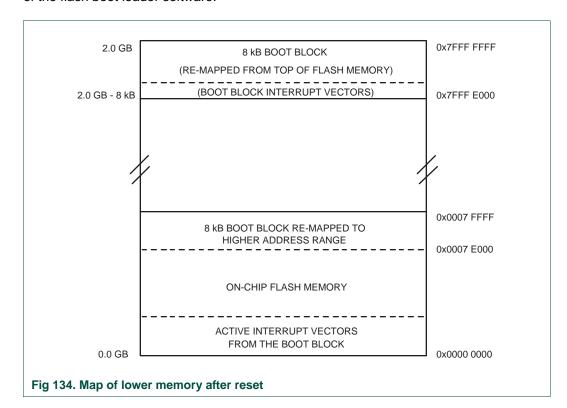

29.3.1.1 Criterion for Valid User Code

Criterion for valid user code: The reserved ARM interrupt vector location (0x0000 0014) should contain the 2's complement of the check-sum of the remaining interrupt vectors. This causes the checksum of all of the vectors together to be 0. The boot loader code disables the overlaying of the interrupt vectors from the boot block, then checksums the interrupt vectors in sector 0 of the flash. If the signatures match then the execution control is transferred to the user code by loading the program counter with 0x0000 0000. Hence the user flash reset vector should contain a jump instruction to the entry point of the user application code.

If the signature is not valid, the auto-baud routine synchronizes with the host via serial port 0. The host should send a '?' (0x3F) as a synchronization character and wait for a response. The host side serial port settings should be 8 data bits, 1 stop bit and no parity. The auto-baud routine measures the bit time of the received synchronization character in terms of its own frequency and programs the baud rate generator of the serial port. It also sends an ASCII string ("Synchronized<CR><LF>") to the Host. In response to this host should send the same string ("Synchronized<CR><LF>"). The auto-baud routine looks at the received characters to verify synchronization. If synchronization is verified then "OK<CR><LF>" string is sent to the host. Host should respond by sending the crystal frequency (in kHz) at which the part is running. For example, if the part is running at 10 MHz , the response from the host should be "10000<CR><LF>". "OK<CR><LF>" string is

Chapter 29: LPC23XX Flash memory programming firmware

sent to the host after receiving the crystal frequency. If synchronization is not verified then the auto-baud routine waits again for a synchronization character. For auto-baud to work correctly in case of user invoked ISP, the CCLK frequency should be greater than or equal to 10 MHz.

For more details on Reset, PLL and startup/boot code interaction see <u>Section 4.6.2 "PLL and startup/boot code interaction"</u>.

Once the crystal frequency is received the part is initialized and the ISP command handler is invoked. For safety reasons an "Unlock" command is required before executing the commands resulting in flash erase/write operations and the "Go" command. The rest of the commands can be executed without the unlock command. The Unlock command is required to be executed once per ISP session. The Unlock command is explained in Section 29.7 "ISP commands" on page 614.

29.3.2 Communication protocol

All ISP commands should be sent as single ASCII strings. Strings should be terminated with Carriage Return (CR) and/or Line Feed (LF) control characters. Extra <CR> and <LF> characters are ignored. All ISP responses are sent as <CR><LF> terminated ASCII strings. Data is sent and received in UU-encoded format.

29.3.2.1 ISP command format

"Command Parameter_0 Parameter_1 ... Parameter_n<CR><LF>" "Data" (Data only for Write commands).

29.3.2.2 ISP response format

"Return_Code<CR><LF>Response_0<CR><LF>Response_1<CR><LF> ... Response_n<CR><LF>"Data" (Data only for Read commands).

29.3.2.3 ISP data format

The data stream is in UU-encode format. The UU-encode algorithm converts 3 bytes of binary data in to 4 bytes of printable ASCII character set. It is more efficient than Hex format which converts 1 byte of binary data in to 2 bytes of ASCII hex. The sender should send the check-sum after transmitting 20 UU-encoded lines. The length of any UU-encoded line should not exceed 61 characters(bytes) i.e. it can hold 45 data bytes. The receiver should compare it with the check-sum of the received bytes. If the check-sum matches then the receiver should respond with "OK<CR><LF>" to continue further transmission. If the check-sum does not match the receiver should respond with "RESEND<CR><LF>". In response the sender should retransmit the bytes.

A description of UU-encode is available at the wotsit web site.

29.3.2.4 ISP flow control

A software XON/XOFF flow control scheme is used to prevent data loss due to buffer overrun. When the data arrives rapidly, the ASCII control character DC3 (stop) is sent to stop the flow of data. Data flow is resumed by sending the ASCII control character DC1 (start). The host should also support the same flow control scheme.

Chapter 29: LPC23XX Flash memory programming firmware

29.3.2.5 ISP command abort

Commands can be aborted by sending the ASCII control character "ESC". This feature is not documented as a command under "ISP Commands" section. Once the escape code is received the ISP command handler waits for a new command.

29.3.2.6 Interrupts during ISP

The boot block interrupt vectors located in the boot block of the flash are active after any reset.

29.3.2.7 Interrupts during IAP

The on-chip flash memory is not accessible during erase/write operations. When the user application code starts executing, the interrupt vectors from the user flash area are active. The user should either disable interrupts, or ensure that user interrupt vectors are active in RAM and that the interrupt handlers reside in RAM, before making a flash erase/write IAP call. The IAP code does not use or disable interrupts.

29.3.2.8 RAM used by ISP command handler

ISP commands use on-chip RAM from 0x4000 0120 to 0x4000 01FF. The user could use this area, but the contents may be lost upon reset. Flash programming commands use the top 32 bytes of on-chip RAM. The stack is located at RAM top - 32. The maximum stack usage is 256 bytes and it grows downwards.

29.3.2.9 RAM used by IAP command handler


Flash programming commands use the top 32 bytes of on-chip RAM. The maximum stack usage in the user allocated stack space is 128 bytes and it grows downwards.

29.3.2.10 RAM used by RealMonitor

The RealMonitor uses on-chip RAM from 0x4000 0040 to 0x4000 011F. The user could use this area if RealMonitor based debug is not required. The flash boot loader does not initialize the stack for RealMonitor.

Chapter 29: LPC23XX Flash memory programming firmware

29.4 Boot process flowchart

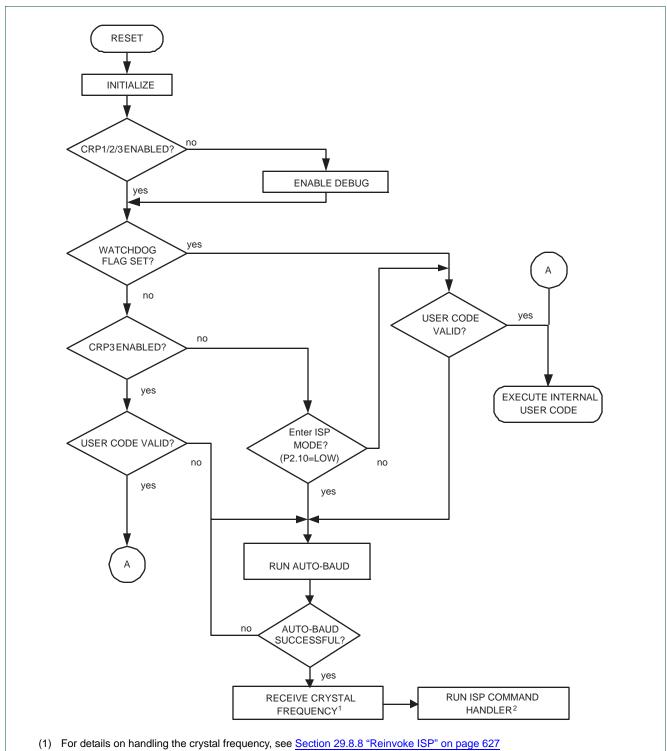

- (2) For details on available ISP commands based on the CRP settings see Section 29.6 "Code Read Protection (CRP)"

Fig 135. Boot process flowchart

Chapter 29: LPC23XX Flash memory programming firmware

29.5 Sector numbers

Some IAP and ISP commands operate on "sectors" and specify sector numbers. The following table indicate the correspondence between sector numbers and memory addresses for LPC2300 devices containing 64, 128, 256 and 512 kbytes of flash respectively. IAP, ISP, and RealMonitor routines are located in the boot block. The boot block is present at addresses 0x0007 E000 to 0x0007 FFFF in all devices. ISP and IAP commands do not allow write/erase/go operation on the boot block. Because of the boot block, the amount of flash available for user code and data is 504 K bytes in "512K" devices.

Table 529. Sectors in a LPC2300 device

Sector number	Sector size [kB]	Address range	64 kB LPC2361	128 kB LPC2362/64	256 kB LPC2365/66	512 kB LPC2367/68, LPC2377/78, LPC2387/88
0	4	0x0000 0000 - 0x0000 0FFF	Х	x	х	X
1	4	0x0000 1000 - 0x0000 1FFF	Х	х	Х	Х
2	4	0x0000 2000 - 0x0000 2FFF	Х	х	Х	х
3	4	0x0000 3000 - 0x0000 3FFF	Х	х	Х	Х
4	4	0x0000 4000 - 0x0000 4FFF	Х	х	Х	Х
5	4	0x0000 5000 - 0x0000 5FFF	Х	х	Х	х
6	4	0x0000 6000 - 0x0000 6FFF	Х	х	Х	х
7	4	0x0000 7000 - 0x0000 7FFF	Х	х	Х	х
8	32	0x0000 8000 - 0x0000 FFFF	Х	х	Х	х
9	32	0x0001 0000 - 0x0001 7FFF		х	Х	Х
10 (0x0A)	32	0x0001 8000 - 0x0001 FFFF		х	Х	Х
11 (0x0B)	32	0x0002 0000 - 0x0002 7FFF			Х	Х
12 (0x0C)	32	0x0002 8000 - 0x0002 FFFF			Х	Х
13 (0x0D)	32	0x0003 0000 - 0x0003 7FFF			Х	Х
14 (0x0E)	32	0x0003 8000 - 0x0003 FFFF			х	X
15 (0x0F)	32	0x0004 0000 - 0x0004 7FFF				Х
16 (0x10)	32	0x0004 8000 - 0x0004 FFFF				Х
17 (0x11)	32	0x0005 0000 - 0x0005 7FFF				X
18 (0x12)	32	0x0005 8000 - 0x0005 FFFF				X
19 (0x13)	32	0x0006 0000 - 0x0006 7FFF				X
20 (0x14)	32	0x0006 8000 - 0x0006 FFFF				Х
21 (0x15)	32	0x0007 0000 - 0x0007 7FFF				Х
22 (0x16)	4	0x0007 8000 - 0x0007 8FFF				х
23 (0x17)	4	0x0007 9000 - 0x0007 9FFF				х
24 (0x18)	4	0x0007 A000 - 0x0007 AFFF				х
25 (0x19)	4	0x0007 B000 - 0x0007 BFFF				х
26 (0x1A)	4	0x0007 C000 - 0x0007 CFFF				х
27 (0x1B)	4	0x0007 D000 - 0x0007 DFFF				х

Chapter 29: LPC23XX Flash memory programming firmware

29.6 Code Read Protection (CRP)

Code Read Protection is a mechanism that allows user to enable different levels of security in the system so that access to the on-chip flash and use of the ISP can be restricted. When needed, CRP is invoked by programming a specific pattern in flash location at 0x000001FC. IAP commands are not affected by the code read protection.

Starting with bootloader version 3.2 three levels of CRP are implemented. Earlier bootloader versions had only CRP2 option implemented.

Important: Any CRP change becomes effective only after the device has gone through a power cycle.

Table 530. Code Read Protection options

Name	Pattern programmed in 0x000001FC	Description
CRP1	0x12345678	Access to chip via the JTAG pins is disabled. This mode allows partial flash update using the following ISP commands and restrictions:
		 Write to RAM command can not access RAM below 0x40000200
		 Copy RAM to flash command can not write to Sector 0
		 Erase command can erase Sector 0 only when all sectors are selected for erase
		Compare command is disabled
		Read command is disabled
		This mode is useful when CRP is required and flash field updates are needed but all sectors can not be erased. Since compare command is disabled in case of partial updates the secondary loader should implement checksum mechanism to verify the integrity of the flash.
CRP2	0x87654321	Access to chip via the JTAG pins is disabled. The following ISP commands are disabled:
		Read Memory command
		Write to RAM command
		Go command
		 Copy RAM to flash command
		Compare command
		When CRP2 is enabled the ISP erase command only allows erasure of all user sectors.
CRP3	0x43218765	Access to chip via the JTAG pins is disabled. ISP entry by pulling P2.10 LOW is disabled if a valid user code is present in flash sector 0.
		This mode effectively disables ISP override using the P2.10 pin. It is up to the user's application to provide for flash updates by using IAP calls o by reinvoking ISP via UARTO.
		Caution: If CRP3 is selected, no future factory testing can be performed on the device.

Chapter 29: LPC23XX Flash memory programming firmware

Table 531. Code Read Protection hardware/software interaction

CRP option	User Code Valid	P2.10 pin at reset	JTAG enabled	LPC2300 enters ISP mode	partial flash update in ISP mode
No	No	Χ	Yes	Yes	Yes
No	Yes	High	Yes	No	NA
No	Yes	Low	Yes	Yes	Yes
CRP1	Yes	High	No	No	NA
CRP1	Yes	Low	No	Yes	Yes
CRP2	Yes	High	No	No	NA
CRP2	Yes	Low	No	Yes	No
CRP3	Yes	x	No	No	NA
CRP1	No	x	No	Yes	Yes
CRP2	No	х	No	Yes	No
CRP3	No	х	No	Yes	No

If any CRP mode is enabled and access to the chip is allowed via the ISP, an unsupported or restricted ISP command will be terminated with return code CODE_READ_PROTECTION_ENABLED.

29.7 ISP commands

The following commands are accepted by the ISP command handler. Detailed status codes are supported for each command. The command handler sends the return code INVALID_COMMAND when an undefined command is received. Commands and return codes are in ASCII format.

CMD_SUCCESS is sent by ISP command handler only when received ISP command has been completely executed and the new ISP command can be given by the host. Exceptions from this rule are "Set Baud Rate", "Write to RAM", "Read Memory", and "Go" commands.

Table 532. ISP command summary

ISP Command	Usage	Described in
Unlock	U <unlock code=""></unlock>	Table 533
Set Baud Rate	B <baud rate=""> <stop bit=""></stop></baud>	Table 534
Echo	A <setting></setting>	Table 536
Write to RAM	W <start address=""> <number bytes="" of=""></number></start>	Table 537
Read Memory	R <address> <number bytes="" of=""></number></address>	Table 538
Prepare sector(s) for write operation	P <start number="" sector=""> <end number="" sector=""></end></start>	Table 539
Copy RAM to flash	C <flash address=""> <ram address=""> <number bytes="" of=""></number></ram></flash>	Table 540
Go	G <address> <mode></mode></address>	Table 541
Erase sector(s)	E <start number="" sector=""> <end number="" sector=""></end></start>	Table 542
Blank check sector(s)	I <start number="" sector=""> <end number="" sector=""></end></start>	Table 543

Chapter 29: LPC23XX Flash memory programming firmware

Table 532. ISP command summary

ISP Command	Usage	Described in
Read Part ID	J	<u>Table 544</u>
Read Boot code version	К	<u>Table 546</u>
Compare	M <address1> <address2> <number bytes="" of=""></number></address2></address1>	<u>Table 547</u>

29.7.1 Unlock < Unlock code>

Table 533. ISP Unlock command

Command	U
Input	Unlock code: 23130 ₁₀
Return Code	CMD_SUCCESS
	INVALID_CODE
	PARAM_ERROR
Description	This command is used to unlock flash Write, Erase, and Go commands.
Example	"U 23130 <cr><lf>" unlocks the flash Write/Erase & Go commands.</lf></cr>

29.7.2 Set Baud Rate <Baud Rate> <stop bit>

Table 534. ISP Set Baud Rate command

Command	В
Input	Baud Rate: 9600 19200 38400 57600 115200 230400
	Stop bit: 1 2
Return Code	CMD_SUCCESS
	INVALID_BAUD_RATE
	INVALID_STOP_BIT
	PARAM_ERROR
Description	This command is used to change the baud rate. The new baud rate is effective after the command handler sends the CMD_SUCCESS return code.
Example	"B 57600 1 <cr><lf>" sets the serial port to baud rate 57600 bps and 1 stop bit.</lf></cr>

Table 535. Correlation between possible ISP baudrates and CCLK frequency (in MHz)

ISP Baudrate .vs. CCLK Frequency	9600	19200	38400	57600	115200	230400
10.0000	+	+	+			
11.0592	+	+		+		
12.2880	+	+	+			
14.7456[1]	+	+	+	+	+	+
15.3600	+					
18.4320	+	+		+		
19.6608	+	+	+			
24.5760	+	+	+			
25.0000	+	+	+			

^[1] ISP entry after reset uses the on chip IRC and PLL to run the device at CCLK = 14.748 MHz

Chapter 29: LPC23XX Flash memory programming firmware

29.7.3 Echo <setting>

Table 536. ISP Echo command

Command	A
Input	Setting: ON = 1 OFF = 0
Return Code	CMD_SUCCESS
	PARAM_ERROR
Description	The default setting for echo command is ON. When ON the ISP command handler sends the received serial data back to the host.
Example	"A 0 <cr><lf>" turns echo off.</lf></cr>

29.7.4 Write to RAM <start address> <number of bytes>

The host should send the data only after receiving the CMD_SUCCESS return code. The host should send the check-sum after transmitting 20 UU-encoded lines. The checksum is generated by adding raw data (before UU-encoding) bytes and is reset after transmitting 20 UU-encoded lines. The length of any UU-encoded line should not exceed 61 characters(bytes) i.e. it can hold 45 data bytes. When the data fits in less then 20 UU-encoded lines then the check-sum should be of the actual number of bytes sent. The ISP command handler compares it with the check-sum of the received bytes. If the check-sum matches, the ISP command handler responds with "OK<CR><LF>" to continue further transmission. If the check-sum does not match, the ISP command handler responds with "RESEND<CR><LF>". In response the host should retransmit the bytes.

Table 537. ISP Write to RAM command

Command	W
Input	Start Address: RAM address where data bytes are to be written. This address should be a word boundary.
	Number of Bytes: Number of bytes to be written. Count should be a multiple of 4
Return Code	CMD_SUCCESS
	ADDR_ERROR (Address not on word boundary)
	ADDR_NOT_MAPPED
	COUNT_ERROR (Byte count is not multiple of 4)
	PARAM_ERROR
	CODE_READ_PROTECTION_ENABLED
Description	This command is used to download data to RAM. Data should be in UU-encoded format. This command is blocked when code read protection is enabled.
Example	"W 1073742336 4 <cr><lf>" writes 4 bytes of data to address 0x4000 0200.</lf></cr>

29.7.5 Read Memory <address> <no. of bytes>

The data stream is followed by the command success return code. The check-sum is sent after transmitting 20 UU-encoded lines. The checksum is generated by adding raw data (before UU-encoding) bytes and is reset after transmitting 20 UU-encoded lines. The length of any UU-encoded line should not exceed 61 characters(bytes) i.e. it can hold 45 data bytes. When the data fits in less then 20 UU-encoded lines then the check-sum is of actual number of bytes sent. The host should compare it with the checksum of the received bytes. If the check-sum matches then the host should respond with

Chapter 29: LPC23XX Flash memory programming firmware

"OK<CR><LF>" to continue further transmission. If the check-sum does not match then the host should respond with "RESEND<CR><LF>". In response the ISP command handler sends the data again.

Table 538. ISP Read Memory command

	•
Command	R
Input	Start Address: Address from where data bytes are to be read. This address should be a word boundary.
	Number of Bytes: Number of bytes to be read. Count should be a multiple of 4.
Return Code	CMD_SUCCESS followed by <actual (uu-encoded)="" data=""> </actual>
	ADDR_ERROR (Address not on word boundary)
	ADDR_NOT_MAPPED
	COUNT_ERROR (Byte count is not a multiple of 4)
	PARAM_ERROR
	CODE_READ_PROTECTION_ENABLED
Description	This command is used to read data from RAM or flash memory. This command is blocked when code read protection is enabled.
Example	"R 1073741824 4 <cr><lf>" reads 4 bytes of data from address 0x4000 0000.</lf></cr>

29.7.6 Prepare sector(s) for write operation <start sector number> <end sector number>

This command makes flash write/erase operation a two step process.

Table 539. ISP Prepare sector(s) for write operation command

Command	P
Input	Start Sector Number End Sector Number: Should be greater than or equal to start sector number.
Return Code	CMD_SUCCESS BUSY INVALID_SECTOR PARAM_ERROR
Description	This command must be executed before executing "Copy RAM to flash" or "Erase Sector(s)" command. Successful execution of the "Copy RAM to flash" or "Erase Sector(s)" command causes relevant sectors to be protected again. The boot block can not be prepared by this command. To prepare a single sector use the same "Start" and "End" sector numbers.
Example	"P 0 0 <cr><lf>" prepares the flash sector 0.</lf></cr>

Chapter 29: LPC23XX Flash memory programming firmware

29.7.7 Copy RAM to flash <flash address> <RAM address> <no of bytes>

Table 540. ISP Copy command

Command	С
Input	Flash Address(DST): Destination flash address where data bytes are to be written. The destination address should be a 256 byte boundary.
	RAM Address(SRC): Source RAM address from where data bytes are to be read.
	Number of Bytes: Number of bytes to be written. Should be 256 512 1024 4096.
Return Code	CMD_SUCCESS
	SRC_ADDR_ERROR (Address not on word boundary)
	DST_ADDR_ERROR (Address not on correct boundary)
	SRC_ADDR_NOT_MAPPED
	DST_ADDR_NOT_MAPPED
	COUNT_ERROR (Byte count is not 256 512 1024 4096)
	SECTOR_NOT_PREPARED_FOR WRITE_OPERATION
	BUSY
	CMD_LOCKED
	PARAM_ERROR
	CODE_READ_PROTECTION_ENABLED
Description	This command is used to program the flash memory. The "Prepare Sector(s) for Write Operation" command should precede this command. The affected sectors are automatically protected again once the copy command is successfully executed. The boot block cannot be written by this command. This command is blocked when code read protection is enabled.
Example	"C 0 1073774592 512 <cr><lf>" copies 512 bytes from the RAM address 0x4000 8000 to the flash address 0.</lf></cr>

29.7.8 Go <address> <mode>

Table 541. ISP Go command

Command	G
Input	Address: Flash or RAM address from which the code execution is to be started. This address should be on a word boundary.
	Mode: T (Execute program in Thumb Mode) A (Execute program in ARM mode).
Return Code	CMD_SUCCESS
	ADDR_ERROR
	ADDR_NOT_MAPPED
	CMD_LOCKED
	PARAM_ERROR
	CODE_READ_PROTECTION_ENABLED
Description	This command is used to execute a program residing in RAM or flash memory. It may not be possible to return to the ISP command handler once this command is successfully executed. This command is blocked when code read protection is enabled.
Example	"G 0 A <cr><lf>" branches to address 0x0000 0000 in ARM mode.</lf></cr>

Chapter 29: LPC23XX Flash memory programming firmware

29.7.9 Erase sector(s) <start sector number> <end sector number>

Table 542. ISP Erase sector command

Command	E
Input	Start Sector Number
	End Sector Number: Should be greater than or equal to start sector number.
Return Code	CMD_SUCCESS
	BUSY
	INVALID_SECTOR
	SECTOR_NOT_PREPARED_FOR_WRITE_OPERATION
	CMD_LOCKED
	PARAM_ERROR
	CODE_READ_PROTECTION_ENABLED
Description	This command is used to erase one or more sector(s) of on-chip flash memory. The boot block can not be erased using this command. This command only allows erasure of all user sectors when the code read protection is enabled.
Example	"E 2 3 <cr><lf>" erases the flash sectors 2 and 3.</lf></cr>

29.7.10 Blank check sector(s) < sector number > < end sector number >

Table 543. ISP Blank check sector command

Command	I
Input	Start Sector Number:
	End Sector Number: Should be greater than or equal to start sector number.
Return Code	CMD_SUCCESS
	SECTOR_NOT_BLANK (followed by <offset blank="" first="" location="" non="" of="" the="" word=""> <contents blank="" location="" non="" of="" word="">) </contents></offset>
	INVALID_SECTOR
	PARAM_ERROR
Description	This command is used to blank check one or more sectors of on-chip flash memory.
	Blank check on sector 0 always fails as first 64 bytes are re-mapped to flash boot block.
Example	"I 2 3 <cr><lf>" blank checks the flash sectors 2 and 3.</lf></cr>

29.7.11 Read Part Identification number

Table 544. ISP Read Part Identification command

Command	J
Input	None.
Return Code	CMD_SUCCESS followed by part identification number in ASCII (see <u>Table 545</u> <u>"LPC2300 part identification numbers"</u>).
Description	This command is used to read the part identification number.

Chapter 29: LPC23XX Flash memory programming firmware

Table 545. LPC2300 part identification numbers

Device	ASCII/dec coding	Hex coding
LPC2361	369161985	0x1600 F701
LPC2362	369164066	0x1600 FF22
LPC2364	369162498	0x1600 F902
LPC2365	369158179	0x1600 E823
LPC2366	369162531	0x1600 F923
LPC2367	369158181	0x1600 E825
LPC2368	369162533	0x1600 F925
LPC2377	385935397	0x1700 E825
LPC2378	385940773	0x1700 FD25
LPC2387	385941301	0x1700 FF35[1]
LPC2388	402718517	0x1800 FF35

^[1] For parts starting with date code 0840. Older LPC2387 devices use 0x1800 F935.

In addition to the part identification numbers, the user can determine the device revision by reading the register contents at address 0x0007 E070. The register value is encoded as follows: 0x0 corresponds to revision '—', 0x01 corresponds to revision A, 0x02 corresponds to revision B,..., 0x1A corresponds to revision Z. On all LPC23XX parts, this feature is implemented starting with device revision D, so the register read will yield a value of 0x04 (for revision D) or larger.

29.7.12 Read Boot code version number

Table 546. ISP Read Boot Code version number command

Command	K
Input	None
Return Code	CMD_SUCCESS followed by 2 bytes of boot code version number in ASCII format. It is to be interpreted as byte1(Major)>. byte0(Minor)>.
Description	This command is used to read the boot code version number.

Chapter 29: LPC23XX Flash memory programming firmware

29.7.13 Compare <address1> <address2> <no of bytes>

Table 547. ISP Compare command

Command	M
Input	Address1 (DST): Starting flash or RAM address of data bytes to be compared. This address should be a word boundary.
	Address2 (SRC): Starting flash or RAM address of data bytes to be compared. This address should be a word boundary.
	Number of Bytes: Number of bytes to be compared; should be a multiple of 4.
Return Code	CMD_SUCCESS (Source and destination data are equal)
	COMPARE_ERROR (Followed by the offset of first mismatch)
	COUNT_ERROR (Byte count is not a multiple of 4)
	ADDR_ERROR
	ADDR_NOT_MAPPED
	PARAM_ERROR
Description	This command is used to compare the memory contents at two locations.
	Compare result may not be correct when source or destination address contains any of the first 64 bytes starting from address zero. First 64 bytes are re-mapped to flash boot sector
Example	"M 8192 1073741824 4 <cr><lf>" compares 4 bytes from the RAM address 0x4000 0000 to the 4 bytes from the flash address 0x2000.</lf></cr>

29.7.14 ISP Return Codes

Table 548. ISP Return Codes Summary

Return Code	Mnemonic	Description
0	CMD_SUCCESS	Command is executed successfully. Sent by ISP handler only when command given by the host has been completely and successfully executed.
1	INVALID_COMMAND	Invalid command.
2	SRC_ADDR_ERROR	Source address is not on word boundary.
3	DST_ADDR_ERROR	Destination address is not on a correct boundary.
4	SRC_ADDR_NOT_MAPPED	Source address is not mapped in the memory map. Count value is taken in to consideration where applicable.
5	DST_ADDR_NOT_MAPPED	Destination address is not mapped in the memory map. Count value is taken in to consideration where applicable.
6	COUNT_ERROR	Byte count is not multiple of 4 or is not a permitted value.
7	INVALID_SECTOR	Sector number is invalid or end sector number is greater than start sector number.
8	SECTOR_NOT_BLANK	Sector is not blank.
9	SECTOR_NOT_PREPARED_FOR_ WRITE_OPERATION	Command to prepare sector for write operation was not executed.
10	COMPARE_ERROR	Source and destination data not equal.
11	BUSY	Flash programming hardware interface is busy.

Chapter 29: LPC23XX Flash memory programming firmware

Table 548. ISP Return Codes Summary

Return Code	Mnemonic	Description
12	PARAM_ERROR	Insufficient number of parameters or invalid parameter.
13	ADDR_ERROR	Address is not on word boundary.
14	ADDR_NOT_MAPPED	Address is not mapped in the memory map. Count value is taken in to consideration where applicable.
15	CMD_LOCKED	Command is locked.
16	INVALID_CODE	Unlock code is invalid.
17	INVALID_BAUD_RATE	Invalid baud rate setting.
18	INVALID_STOP_BIT	Invalid stop bit setting.
19	CODE_READ_PROTECTION_ ENABLED	Code read protection enabled.

29.8 IAP commands

For in application programming the IAP routine should be called with a word pointer in register r0 pointing to memory (RAM) containing command code and parameters. Result of the IAP command is returned in the result table pointed to by register r1. The user can reuse the command table for result by passing the same pointer in registers r0 and r1. The parameter table should be big enough to hold all the results in case if number of results are more than number of parameters. Parameter passing is illustrated in the Figure 136. The number of parameters and results vary according to the IAP command. The maximum number of parameters is 5, passed to the "Copy RAM to FLASH" command. The maximum number of results is 2, returned by the "Blankcheck sector(s)" command. The command handler sends the status code INVALID_COMMAND when an undefined command is received. The IAP routine resides at 0x7FFF FFF0 location and it is thumb code.

The IAP function could be called in the following way using C.

Define the IAP location entry point. Since the 0th bit of the IAP location is set there will be a change to Thumb instruction set when the program counter branches to this address.

```
#define IAP_LOCATION 0x7fffffff1
```

Define data structure or pointers to pass IAP command table and result table to the IAP function:

```
unsigned long command[5];
unsigned long result[3];

or

unsigned long * command;
unsigned long * result;
command=(unsigned long *) 0x......
result= (unsigned long *) 0x......
```

Define pointer to function type, which takes two parameters and returns void. Note the IAP returns the result with the base address of the table residing in R1.

Chapter 29: LPC23XX Flash memory programming firmware

```
typedef void (*IAP)(unsigned int [],unsigned int[]);
IAP iap_entry;
```

Setting function pointer:

```
iap_entry=(IAP) IAP_LOCATION;
```

Whenever you wish to call IAP you could use the following statement.

```
iap_entry (command, result);
```

The IAP call could be simplified further by using the symbol definition file feature supported by ARM Linker in ADS (ARM Developer Suite). You could also call the IAP routine using assembly code.

The following symbol definitions can be used to link IAP routine and user application:

```
#<SYMDEFS># ARM Linker, ADS1.2 [Build 826]: Last Updated: Wed May 08 16:12:23 2002
0x7fffff90 T rm_init_entry
0x7fffffa0 A rm_undef_handler
0x7fffffb0 A rm_prefetchabort_handler
0x7fffffc0 A rm_dataabort_handler
0x7fffffd0 A rm_irqhandler
0x7fffffe0 A rm_irqhandler
0x7ffffff0 T iap_entry
```


As per the ARM specification (The ARM Thumb Procedure Call Standard SWS ESPC 0002 A-05) up to 4 parameters can be passed in the r0, r1, r2 and r3 registers respectively. Additional parameters are passed on the stack. Up to 4 parameters can be returned in the r0, r1, r2 and r3 registers respectively. Additional parameters are returned indirectly via memory. Some of the IAP calls require more than 4 parameters. If the ARM suggested scheme is used for the parameter passing/returning then it might create problems due to difference in the C compiler implementation from different vendors. The suggested parameter passing scheme reduces such risk.

The flash memory is not accessible during a write or erase operation. IAP commands, which results in a flash write/erase operation, use 32 bytes of space in the top portion of the on-chip RAM for execution. The user program should not be use this space if IAP flash programming is permitted in the application.

Table 549. IAP Command Summary

IAP Command	Command Code	Described in
Prepare sector(s) for write operation	50 ₁₀	Table 550
Copy RAM to flash	51 ₁₀	Table 551
Erase sector(s)	52 ₁₀	Table 552
Blank check sector(s)	53 ₁₀	Table 553
Read Part ID	54 ₁₀	Table 554
Read Boot code version	55 ₁₀	Table 555
Compare	56 ₁₀	Table 556
Reinvoke ISP	57 ₁₀	Table 557

Chapter 29: LPC23XX Flash memory programming firmware

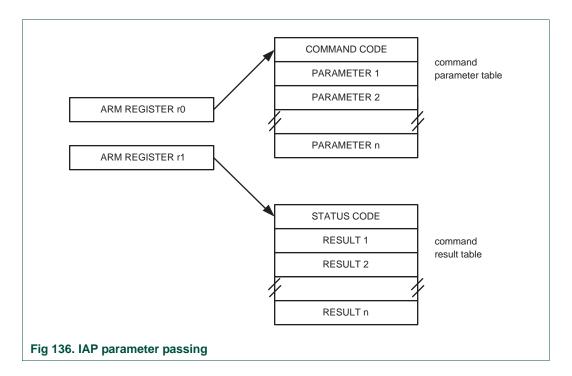

29.8.1 Prepare sector(s) for write operation

This command makes flash write/erase operation a two step process.

Table 550. IAP Prepare sector(s) for write operation command

Command	Prepare sector(s) for write operation	
Input	Command code: 5010	
	Param0: Start Sector Number	
	Param1: End Sector Number (should be greater than or equal to start sector number).	
Return Code	CMD_SUCCESS	
	BUSY	
	INVALID_SECTOR	
Result	None	
Description	This command must be executed before executing "Copy RAM to flash" or "Erase Sector(s)" command. Successful execution of the "Copy RAM to flash" or "Erase Sector(s)" command causes relevant sectors to be protected again. The boot sector can not be prepared by this command. To prepare a single sector use the same "Start" and "End" sector numbers.	

Chapter 29: LPC23XX Flash memory programming firmware

29.8.2 Copy RAM to flash

Table 551. IAP Copy RAM to flash command

Command	Copy RAM to flash				
Input	Command code: 5110				
	Param0(DST): Destination flash address where data bytes are to be written. This address should be a 256 byte boundary.				
	Param1(SRC): Source RAM address from which data bytes are to be read. This address should be a word boundary.				
	Param2: Number of bytes to be written. Should be 256 512 1024 4096.				
	Param3: System Clock Frequency (CCLK) in kHz.				
Return Code	CMD_SUCCESS				
	SRC_ADDR_ERROR (Address not a word boundary)				
	DST_ADDR_ERROR (Address not on correct boundary)				
	SRC_ADDR_NOT_MAPPED				
	DST_ADDR_NOT_MAPPED				
	COUNT_ERROR (Byte count is not 256 512 1024 4096)				
	SECTOR_NOT_PREPARED_FOR_WRITE_OPERATION				
	BUSY				
Result	None				
Description	This command is used to program the flash memory. The affected sectors should be prepared first by calling "Prepare Sector for Write Operation" command. The affected sectors are automatically protected again once the copy command is successfully executed. The boot sector can not be written by this command.				

29.8.3 Erase Sector(s)

Table 552. IAP Erase Sector(s) command

Command	Erase Sector(s)
Input	Command code: 5210
	Param0: Start Sector Number
	Param1: End Sector Number (should be greater than or equal to start sector number).
	Param2: System Clock Frequency (CCLK) in kHz.
Return Code	CMD_SUCCESS
	BUSY
	SECTOR_NOT_PREPARED_FOR_WRITE_OPERATION
	INVALID_SECTOR
Result	None
Description	This command is used to erase a sector or multiple sectors of on-chip flash memory. The boot sector can not be erased by this command. To erase a single sector use the same "Start" and "End" sector numbers.

Chapter 29: LPC23XX Flash memory programming firmware

29.8.4 Blank check sector(s)

Table 553. IAP Blank check sector(s) command

Command	Blank check sector(s)				
Input	Command code: 5310				
	Param0: Start Sector Number				
	Param1: End Sector Number (should be greater than or equal to start sector number).				
Return Code	CMD_SUCCESS				
	BUSY				
	SECTOR_NOT_BLANK				
	INVALID_SECTOR				
Result	Result0: Offset of the first non blank word location if the Status Code is SECTOR_NOT_BLANK.				
	Result1: Contents of non blank word location.				
Description	This command is used to blank check a sector or multiple sectors of on-chip flash memory. To blank check a single sector use the same "Start" and "End" sector numbers.				

29.8.5 Read Part Identification number

Table 554. IAP Read Part Identification command

Command	Read part identification number				
Input	Command code: 5410				
	Parameters: None				
Return Code	CMD_SUCCESS				
Result	Result0: Part Identification Number.				
Description	This command is used to read the part identification number.				

29.8.6 Read Boot code version number

Table 555. IAP Read Boot Code version number command

Command	Read boot code version number
Input	Command code: 5510
	Parameters: None
Return Code	CMD_SUCCESS
Result	Result0: 2 bytes of boot code version number in ASCII format. It is to be interpreted as syte1(Major)>. byte0(Minor)>
Description	This command is used to read the boot code version number.

Chapter 29: LPC23XX Flash memory programming firmware

29.8.7 Compare <address1> <address2> <no of bytes>

Table 556. IAP Compare command

Command	Compare				
Input	Command code: 5610				
	Param0(DST): Starting flash or RAM address of data bytes to be compared. This address should be a word boundary.				
	Param1(SRC): Starting flash or RAM address of data bytes to be compared. This address should be a word boundary.				
	Param2: Number of bytes to be compared; should be a multiple of 4.				
Return Code	CMD_SUCCESS				
	COMPARE_ERROR				
	COUNT_ERROR (Byte count is not a multiple of 4)				
	ADDR_ERROR				
	ADDR_NOT_MAPPED				
Result	Result0: Offset of the first mismatch if the Status Code is COMPARE_ERROR.				
Description	This command is used to compare the memory contents at two locations.				
	The result may not be correct when the source or destination includes any of the first 64 bytes starting from address zero. The first 64 bytes can be re-mapped to RAM.				

29.8.8 Reinvoke ISP

Table 557. Reinvoke ISP

Command	Compare
Input	Command code: 5710
Return Code	None
Result	None.
Description	This command is used to invoke the bootloader in ISP mode. It maps boot vectors, sets PCLK = CCLK / 4, configures UART0 pins Rx and Tx, resets TIMER1 and resets the U0FDR (see Section 16.4.12). This command may be used when a valid user program is present in the internal flash memory and the P2.10 pin is not accessible to force the ISP mode. The command does not disable the PLL hence it is possible to invoke the bootloader when the part is running off the PLL. In such case the ISP utility should pass the CCLK (crystal or PLL output depending on the clock source selection Section 4.5.1) frequency after autobaud handshake. Another option is to disable the PLL and select the IRC as the clock source before making this IAP call. In this case frequency sent by ISP is ignored and IRC and PLL are used to generate CCLK = 14.748 MHz.

29.8.9 IAP Status Codes

Table 558. IAP Status Codes Summary

Status Code	Mnemonic	Description
0	CMD_SUCCESS	Command is executed successfully.
1	INVALID_COMMAND	Invalid command.
2	SRC_ADDR_ERROR	Source address is not on a word boundary.

Chapter 29: LPC23XX Flash memory programming firmware

Table 558. IAP Status Codes Summary

Status Code	Mnemonic	Description
3	DST_ADDR_ERROR	Destination address is not on a correct boundary.
4	SRC_ADDR_NOT_MAPPED	Source address is not mapped in the memory map. Count value is taken in to consideration where applicable.
5	DST_ADDR_NOT_MAPPED	Destination address is not mapped in the memory map. Count value is taken in to consideration where applicable.
6	COUNT_ERROR	Byte count is not multiple of 4 or is not a permitted value.
7	INVALID_SECTOR	Sector number is invalid.
8	SECTOR_NOT_BLANK	Sector is not blank.
9	SECTOR_NOT_PREPARED_ FOR_WRITE_OPERATION	Command to prepare sector for write operation was not executed.
10	COMPARE_ERROR	Source and destination data is not same.
11	BUSY	Flash programming hardware interface is busy.

29.9 JTAG flash programming interface

Debug tools can write parts of the flash image to the RAM and then execute the IAP call "Copy RAM to flash" repeatedly with proper offset.

UM10211

Chapter 30: LPC23XX General Purpose DMA (GPDMA) controller

Rev. 4.1 — 5 September 2012

User manual

30.1 Basic configuration

The GPDMA is configured using the following registers:

- Power: In the PCONP register (<u>Table 56</u>), set bit PCGPDMA.
 Remark: On reset, the GPDMA is disabled (PCGPDMA = 0).
- 2. Clock: see Section 4.7.1.
- 3. Interrupts are enabled in the VIC using the VICIntEnable register (Table 76).
- 4. Initialization: see Section 30.7.

30.2 Introduction

The General Purpose DMA Controller (GPDMA) is an AMBA AHB compliant peripheral allowing selected LPC23xx peripherals to have DMA support.

30.3 Features of the GPDMA

- Two DMA channels. Each channel can support a unidirectional transfer.
 The GPDMA provides 16 peripheral DMA request lines. Some of these are connected to peripheral functions that support DMA: the SD/MMC, two SSP, and I2S interfaces.
- Single DMA and burst DMA request signals. Each peripheral connected to the GPDMA can assert either a burst DMA request or a single DMA request. The DMA burst size is set by programming the GPDMA.
- Memory-to-memory, memory-to-peripheral, peripheral-to-memory, and peripheral-to-peripheral transfers.
- Scatter or gather DMA is supported through the use of linked lists. This means that
 the source and destination areas do not have to occupy contiguous areas of memory.
- Hardware DMA channel priority. Each DMA channel has a specific hardware priority. DMA channel 0 has the highest priority and channel 1 has the lowest priority. If requests from two channels become active at the same time the channel with the highest priority is serviced first.
- AHB slave DMA programming interface. The GPDMA is programmed by writing to the DMA control registers over the AHB slave interface.
- One AHB bus master for transferring data. This interface transfers data when a DMA request goes active.
- 32 bit AHB master bus width.
- Incrementing or non-incrementing addressing for source and destination.
- Programmable DMA burst size. The DMA burst size can be programmed to more
 efficiently transfer data. Usually the burst size is set to half the size of the FIFO in the
 peripheral.
- Internal four-word FIFO per channel.

Chapter 30: LPC23XX General Purpose DMA (GPDMA) controller

- Supports 8, 16, and 32 bit wide transactions.
- Big-endian and little-endian support. The GPDMA defaults to little-endian mode on reset.
- An interrupt to the processor can be generated on a DMA completion or when a DMA error has occurred.
- Interrupt masking. The DMA error and DMA terminal count interrupt requests can be masked.
- Raw interrupt status. The DMA error and DMA count raw interrupt status can be read prior to masking.
- Test registers for use in block and integration system level testing.
- Identification registers that uniquely identify the GPDMA. These can be used by an operating system to automatically configure itself.

30.4 Functional overview

This chapter describes the major functional blocks of the GPDMA. It contains the following sections:

- GPDMA functional description
- System considerations
- System connectivity
- Use with memory management unit based systems

30.4.1 Memory regions accessible by the GPDMA

Table 559. GPDMA accessible memory


Memory region	Address range	Memory Type	
On-chip RAM	0x7FD0 0000 - 0x7FD0 1FFF	USB RAM (8 kB)	
	0x7FD0 0000 - 0x7FD0 3FFF	USB RAM (8 kB) (LPC2387 only)	
Off-Chip Memory	Two static memory banks, 64 kl	3 each	
(LPC2377/78/88 only)	0x8000 0000 - 0x8000 FFFF	Static memory bank 0	
	0x8100 0000 - 0x8100 FFFF	Static memory bank 1	

30.4.2 **GPDMA** functional description

The GPDMA enables peripheral-to-memory, memory-to-peripheral, peripheral-to-peripheral, and memory-to-memory transactions. Each DMA stream provides unidirectional serial DMA transfers for a single source and destination. For example, a bidirectional port requires one stream for transmit and one for receive. The source and destination areas can each be either a memory region or a peripheral, and can be accessed through the AHB master.

Figure 137 shows a block diagram of the GPDMA.

Chapter 30: LPC23XX General Purpose DMA (GPDMA) controller

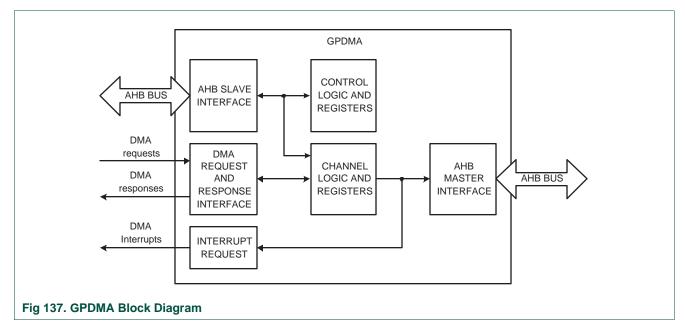

The functions of the GPDMA are described in the following sections:

- AHB slave interface
- Control logic and register bank
- DMA request and response interface
- Channel logic and channel register bank
- Interrupt request
- AHB master interface
- Channel hardware
- DMA request priority

30.4.2.1 AHB Slave Interface

All transactions on the AHB slave programming bus of the GPDMA are 32 bit wide.

30.4.2.2 Control Logic and Register Bank

The register block stores data written, or to be read across the AHB interface.

30.4.2.3 DMA Request and Response Interface

See DMA Interface description for information on the DMA request and response interface.

30.4.2.4 Channel Logic and Channel Register Bank

The channel logic and channel register bank contains registers and logic required for each DMA channel.


30.4.2.5 Interrupt Request

The interrupt request generates interrupts to the ARM processor.

Chapter 30: LPC23XX General Purpose DMA (GPDMA) controller

30.4.2.6 AHB Master Interface

The GPDMA contains a full AHB master. See <u>Figure 138</u> for how the GPDMA connected in the LPC23XX.

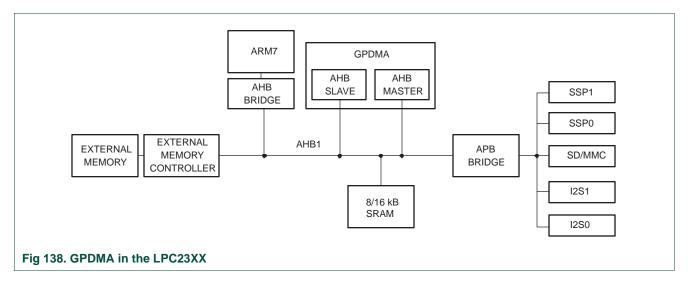

The AHB master is capable of dealing with all types of AHB transactions, including:

- Split, retry, and error responses from slaves. If a peripheral performs a split or retry, the GPDMA stalls and waits until the transaction can complete.
- Locked transfers for source and destination of each stream.
- Setting of protection bits for transfers on each stream.

30.4.2.7 Bus and Transfer Widths

The physical width of the AHB bus is 32 bits. Source and destination transfers can be of differing widths, and can be the same width or narrower than the physical bus width. The GPDMA packs or unpacks data as appropriate.

30.4.2.8 Endian Behavior

The GPDMA can cope with both little-endian and big-endian addressing. You can set the endianness of each AHB master individually.

Internally the GPDMA treats all data as a stream of bytes instead of 16 bit or 32 bit quantities. This means that when performing mixed-endian activity, where the endianness of the source and destination are different, byte swapping of the data within the 32 bit data bus is observed.

Note: If you do not require byte swapping then avoid using different endianness between the source and destination addresses.

Table 560 shows endian behavior for different source and destination combinations.

Chapter 30: LPC23XX General Purpose DMA (GPDMA) controller

Table 560. Endian behavior

Sourc	Destinatio	Sourc	Destination		Sourc	Destination	Destination
e Endian	n Endian	e Width	Width	Transfer no/ byte Lane	e Data	Transfer no/ byte Lane	Data
Little	Little	8	8	1/[7:0]	21	1/[7:0]	21212121
				2/[15:8]	43	2/[15:8]	43434343
				3/[23:16]	65	3/[23:16]	65656565
				4/[31:24]	87	4/[31:24]	87878787
Little	Little	8	16	1/[7:0]	21	1/[15:0]	43214321
				2/[15:8]	43	2/[31:16]	87658765
				3/[23:16]	65		
1 :41-	1:44-		00	4/[31:24]	87	4 /[04 : 0]	07054004
Little	Little	8	32	1/[7:0] 2/[15:8]	21 43	1/[31:0]	87654321
				3/[23:16]	43 65		
				4/[31:24]	87		
Little	Little	16	8	1/[7:0]	21	1/[7:0]	21212121
			-	1/[15:8]	43	2/[15:8]	43434343
				2/[23:16]	65	3/[23:16]	65656565
				2/[31:24]	87	4/[31:24]	87878787
Little	Little	16	16	1/[7:0]	21	1/[15:0]	43214321
				1/[15:8]	43	2/[31:16]	87658765
				2/[23:16]	65		
				2/[31:24]	87		
Little	Little	16	32	1/[7:0]	21	1/[31:0]	87654321
				2/[15:8]	43		
				3/[23:16]	65		
			_	4/[31:24]	87		
Little	Little	32	8	1/[7:0]	21	1/[7:0]	21212121
				1/[15:8]	43	2/[15:8]	43434343
				2/[23:16]	65 97	3/[23:16]	65656565
Little	Little	32	16	2/[31:24] 1/[7:0]	87 21	4/[31:24] 1/[15:0]	87878787 43214321
LILLIE	LILLIC	JZ	10	1/[7.0] 1/[15:8]	43	2/[31:16]	87658765
				2/[23:16]	65	_,[01.10]	37 0007 00
				2/[31:24]	87		
Little	Little	32	32	1/[7:0]	21	1/[31:0]	87654321
-		-		2/[15:8]	43	r1	 -
				3/[23:16]	65		
				4/[31:24]	87		
Big	Big	8	8	1/[31:24]	12	1/[31:24]	12121212
				2/[23:16]	34	2/[23:16]	34343434
				3/[15:8]	56	3/[15:8]	56565656
				4/[7:0]	78	4/[7:0]	78787878

Chapter 30: LPC23XX General Purpose DMA (GPDMA) controller

Table 560. Endian behavior

Sourc e Endian	Destinatio n Endian	Sourc e Width	Destination Width	Source Transfer no/ byte Lane	Sourc e Data	Destination Transfer no/ byte Lane	Destination Data
Big	Big	8	16	1/[31:24] 2/[23:16] 3/[15:8] 4/[7:0]	12 34 56 78	1/[15:0] 2/[31:16]	12341234 56785678
Big	Big	8	32	1/[31:24] 2/[23:16] 3/[15:8] 4/[7:0]	12 34 56 78	1/[31:0]	12345678
Big	Big	16	8	1/[31:24] 2/[23:16] 3/[15:8] 4/[7:0]	12 34 56 78	1/[31:24] 2/[23:16] 3/[15:8] 4/[7:0]	12121212 34343434 56565656 78787878
Big	Big	16	16	1/[31:24] 2/[23:16] 3/[15:8] 4/[7:0]	12 34 56 78	1/[15:0] 2/[31:16]	12341234 56785678
Big	Big	16	32	1/[31:24] 2/[23:16] 3/[15:8] 4/[7:0]	12 34 56 78	1/[31:0]	12345678
Big	Big	32	8	1/[31:24] 2/[23:16] 3/[15:8] 4/[7:0]	12 34 56 78	1/[31:24] 2/[23:16] 3/[15:8] 4/[7:0]	12121212 34343434 56565656 78787878
Big	Big	32	16	1/[31:24] 2/[23:16] 3/[15:8] 4/[7:0]	12 34 56 78	1/[15:0] 2/[31:16]	12341234 56785678
Big	Big	32	32	1/[31:24] 2/[23:16] 3/[15:8] 4/[7:0]	12 34 56 78	1/[31:0]	12345678

30.4.2.9 Error Conditions

An error during a DMA transfer is flagged directly by the peripheral by asserting an Error response on the AHB bus during the transfer. The GPDMA automatically disables the DMA stream after the current transfer has completed, and can optionally generate an error interrupt to the CPU. This error interrupt can be masked.

Chapter 30: LPC23XX General Purpose DMA (GPDMA) controller

30.4.2.10 Channel Hardware

Each stream is supported by a dedicated hardware channel, including source and destination controllers, and a FIFO. This enables better latency than a DMA controller with only a single hardware channel shared between several DMA streams and simplifies the control logic.

30.4.2.11 DMA Request Priority

DMA channel priority is fixed. DMA channel 0 has the highest priority and DMA channel 1 has the lowest priority.

If the GPDMA is transferring data for the lower priority channel and then the higher priority channel goes active, it completes the number of transfers delegated to the master interface by the lower priority channel before switching over to transfer data for the higher priority channel. In the worst case this is as large as a one quadword. Channel 1 in the GPDMA is designed so that it cannot saturate the AHB bus. If it goes active, the GPDMA relinquishes control of the bus (for a bus cycle), after four transfers of the programmed size (irrespective of the size of transfer). This enables other AHB masters to access the bus.

It is recommended that memory-to-memory transactions use the low priority channel. Otherwise other (lower priority) AHB bus masters are prevented from accessing the bus during GPDMA memory-to-memory transfer.

30.4.2.12 Interrupt Generation

A combined interrupt output is generated as an OR function of the individual interrupt requests of the GPDMA, and is connected to the LPC2300 interrupt controller.

30.4.2.13 The completion of the DMA transfer indication

The completion of the DMA transfer is indicated by:

- 1. The transfer count reaching 0 if the GPDMA is performing flow control, OR
- The peripheral setting the DMA Last Word Request Input (DMACLSREQ) or the DMA Last Burst Request Input (DMALBREQ) if the peripheral is performing flow control.

According to <u>Table 561 "DMA Connections"</u>, SSP0, SSP1 and I2S do not use DMA Last Word Request Input nor DMA Last Burst Request Input. Therefore there will be no indication of completion if SSP0, SSP1 and I2S are performing the flow control.

30.4.3 DMA System Connections

The connection of the GPDMA to the supported peripheral devices depends on the DMA functions implemented in those peripherals. <u>Table 561</u> shows the DMA Request numbers used by the supported peripherals.

Table 561. DMA Connections

Peripheral Function	DMA Single Request Input	DMA Burst Request Input	DMA Last Word Request Input	DMA Last Burst Request Input
SSP0 Tx	0	0	-	-
SSP0 Rx	1	1	-	-
SSP1 Tx	2	2	-	-

UM10211

Chapter 30: LPC23XX General Purpose DMA (GPDMA) controller

Table 561. DMA Connections

Peripheral Function	DMA Single Request Input	DMA Burst Request Input	DMA Last Word Request Input	DMA Last Burst Request Input
SSP1 Rx	3	3	-	-
SD/MMC	4	4	4	4
I ² S channel 0	-	5	-	-
I ² S channel 1	-	6	-	-

30.5 Programmer's model

This chapter describes the GPDMA registers and provides details required when programming the microcontroller. It contains the following sections:

- About the programmer's model.
- Programming the GPDMA.
- Summary of GPDMA registers.
- Register descriptions.
- · Address generation.
- · Scatter/gather.
- Interrupt requests.
- GPDMA data flow.

30.6 About the programmer's model

The GPDMA enables peripheral-to-memory, memory-to-peripheral, peripheral-to-peripheral, and memory-to-memory transactions. Each DMA stream is configured to provide unidirectional DMA transfers for a single source and destination. The source and destination areas can each be either a memory region or a peripheral which supports the GPDMA, and must be accessible through AHB1.

30.7 Programming the GPDMA

The following applies to the registers used in the GPDMA:

- Reserved or unused address locations must not be accessed because this can result in unpredictable behavior of the device.
- Reserved or unused bits of registers must be written as zero, and ignored on read unless otherwise stated in the relevant text.
- All register bits are reset to a logic 0 by a system or power-on reset unless otherwise stated in the relevant text.
- Unless otherwise stated in the relevant text, all registers support read and write accesses. A write updates the contents of a register and a read returns the contents of the register.
- All registers defined in this document can only be accessed using word reads and word writes (i.e. 32 bit accesses), unless otherwise stated in the relevant text.

Chapter 30: LPC23XX General Purpose DMA (GPDMA) controller

30.7.1 Enabling the GPDMA

To enable the GPDMA set the DMA Enable bit in the DMACConfiguration Register (Section 30.9.13 "Configuration Register (DMACConfiguration - 0xFFE0 4030)".

30.7.2 Disabling the GPDMA

To disable the GPDMA:

- Read the DMACEnbldChns Register and ensure that all the DMA channels have been disabled. If any channels are active, see <u>Section 30.7.4 "Disabling a DMA</u> Channel".
- 2. Disable the GPDMA by writing 0 to the DMA Enable bit in the DMACConfiguration Register (Section 30.10.6 "Channel Configuration Registers (DMACCoConfiguration 0xFFE0 4110 and DMACC1Configuration 0xFFE0 4130)").

30.7.3 Enabling a DMA Channel

To enable the DMA channel set the Channel Enable bit in the relevant DMA channel Configuration Register (Section 30.10.6 "Channel Configuration Registers (DMACC0Configuration - 0xFFE0 4110 and DMACC1Configuration - 0xFFE0 4130)").

Note: The channel must be fully initialized before it is enabled. Additionally, you must set the Enable bit of the GPDMA before any channels are enabled.

30.7.4 Disabling a DMA Channel

You can disable a DMA channel in the following ways:

- Write directly to the Channel Enable bit. Any outstanding data in the FIFOs is lost if this method is used.
- Use the Active and Halt bits in conjunction with the Channel Enable bit.
- Wait until the transfer completes. The channel is then automatically disabled.

30.7.5 Disabling a DMA Channel Without Losing Data in the FIFO

To disable a DMA channel without losing data in the FIFO:

- Set the Halt bit in the relevant channel Configuration Register (<u>Section 30.10.6</u> "<u>Channel Configuration Registers (DMACC0Configuration - 0xFFE0 4110 and DMACC1Configuration - 0xFFE0 4130)</u>"). This causes any further DMA requests to be ignored.
- 2. Poll the Active bit in the relevant channel Configuration Register until it reaches 0. This bit indicates whether there is any data in the channel which has to be transferred.
- 3. Clear the Channel Enable bit in the relevant channel Configuration Register.

30.7.6 Setup a New DMA Transfer

To set up a new DMA transfer:

- 1. If the channel is not set aside for the DMA transaction:
 - Read the DMACEnbldChns Register and find out which channels are inactive (see Section 30.9.8 "Enabled Channel Register (DMACEnbldChns - 0xFFE0 401C)").

UM10211

Chapter 30: LPC23XX General Purpose DMA (GPDMA) controller

- Choose an inactive channel that has the required priority.
- 2. Program the GPDMA.

30.7.7 Disabling a DMA Channel and Losing Data in the FIFO

Clear the relevant Channel Enable bit in the relevant channel Configuration Register (Section 30.10.6 "Channel Configuration Registers (DMACC0Configuration - 0xFFE0 4110 and DMACC1Configuration - 0xFFE0 4130)"). The current AHB transfer, if one is in progress, completes and the channel is disabled. Any data in the FIFO is lost.

30.7.8 Halting a DMA Transfer

Set the Halt bit in the relevant DMA channel Configuration Register. The current source request is serviced. Any further source DMA requests are ignored until the Halt bit is cleared.

30.7.9 Programming a DMA Channel

To program a DMA channel:

- 1. Choose a free DMA channel with the priority required. DMA channel 0 has the highest priority and DMA channel 1 the lowest priority.
- Clear any pending interrupts on the channel to be used by writing to the DMACIntTCCIr Register (Section 30.9.3 "Interrupt Terminal Count Clear Register (DMACIntClear - 0xFFE0 4008)") and DMACIntErrCIr Register (Section 30.9.5 "Interrupt Error Clear Register (DMACIntErrCIr - 0xFFE0 4010)"). The previous channel operation might have left interrupts active.
- 3. Write the source address into the DMACCxSrcAddr Register (Section 30.10.1 "Channel Source Address Registers (DMACC0SrcAddr - 0xFFE0 4100 and DMACC1SrcAddr - 0xFFE0 4120)").
- Write the destination address into the DMACCxDestAddr Register (<u>Section 30.10.2</u> <u>"Channel Destination Address Registers (DMACC0DestAddr - 0xFFE0 4104 and DMACC1DestAddr - 0xFFE0 4124)</u>").
- Write the address of the next Linked List Item (LLI) into the DMACCxLLI Register (Section 30.10.3 "Channel Linked List Item Registers (DMACC0LLI - 0xFFE0 4108 and DMACC1LLI - 0xFFE0 4128)"). If the transfer consists of a single packet of data then 0 must be written into this register.
- 6. Write the control information into the DMACCxControl Register (<u>Section 30.10.4</u> "<u>Channel Control Registers (DMACC0Control 0xFFE0 410C and DMACC0Control 0xFFE0 412C)</u>").
- Write the channel configuration information into the DMACCxConfiguration Register (<u>Section 30.10.6 "Channel Configuration Registers (DMACC0Configuration - 0xFFE0 4110 and DMACC1Configuration - 0xFFE0 4130)"</u>). If the Enable bit is set then the DMA channel is automatically enabled.

30.8 Summary of GPDMA registers

The GPDMA registers are shown in Table 562.

Chapter 30: LPC23XX General Purpose DMA (GPDMA) controller

Table 562. GPDMA register map

Name	Description	Access	Reset Value	Address
General Registers				
DMACIntStatus	Interrupt Status Register	RO	0x0	0xFFE0 4000
DMACIntTCStatus	Interrupt Terminal Count Status Register	RO	0x0	0xFFE0 4004
DMACIntTCClear	Interrupt Terminal Count Clear Register	WO	-	0xFFE0 4008
DMACIntErrorStatus	Interrupt Error Status Register	RO	0x0	0xFFE0 400C
DMACIntErrClr	Interrupt Error Clear Register	WO	-	0xFFE0 4010
DMACRawIntTCStatus	Raw Interrupt Terminal Count Status Register	RO	-	0xFFE0 4014
DMACRawIntErrorStatus	Raw Error Interrupt Status Register	RO	-	0xFFE0 4018
DMACEnbldChns	Enabled Channel Register	RO	0x0	0xFFE0 401C
DMACSoftBReq	Software Burst Request Register	R/W	0x0000	0xFFE0 4020
DMACSoftSReq	Software Single Request Register	R/W	0x0000	0xFFE0 4024
DMACSoftLBReq	Software Last Burst Request Register	R/W	0x0000	0xFFE0 4028
DMACSoftLSReq	Software Last Single Request Register	R/W	0x0000	0xFFE0 402C
DMACConfiguration	Configuration Register	R/W	0x0000 0000	0xFFE0 4030
DMACSync	Synchronization Register	R/W	0x0000	0xFFE0 4034
Channel 0 Registers				
DMACC0SrcAddr	Channel 0 Source Address Register	R/W	0x0000 0000	0xFFE0 4100
DMACC0DestAddr	Channel 0 Destination Address Register	R/W	0x0000 0000	0xFFE0 4104
DMACC0LLI	Channel 0 Linked List Item Register	R/W	0x0000 0000	0xFFE0 4108
DMACC0Control	Channel 0 Control Register	R/W	0x0000 0000	0xFFE0 410C
DMACC0Configuration	Channel 0 Configuration Register	R/W	0x00000 [1]	0xFFE0 4110
Channel 1 Registers				
DMACC1SrcAddr	Channel 1 Source Address Register	R/W	0x0000 0000	0xFFE0 4120
DMACC1DestAddr	Channel 1 Destination Address Register	R/W	0x0000 0000	0xFFE0 4124
DMACC1LLI	Channel 1 Linked List Item Register	R/W	0x0000 0000	0xFFE0 4128
DMACC1Control	Channel 1 Control Register	R/W	0x0000 0000	0xFFE0 412C
DMACC1Configuration	Channel 1 Configuration Register	R/W	0x00000 [1]	0xFFE0 4130

^[1] Bit [17] is read-only.

Chapter 30: LPC23XX General Purpose DMA (GPDMA) controller

30.9 Register descriptions

This section describes the registers of the GPDMA.

30.9.1 Interrupt Status Register (DMACIntStatus - 0xFFE0 4000)

The DMACIntStatus Register is read-only and shows the status of the interrupts after masking. A HIGH bit indicates that a specific DMA channel interrupt request is active. The request can be generated from either the error or terminal count interrupt requests.

Table 563 shows the bit assignments of the DMACIntStatus Register.

Table 563. Interrupt Status register (DMACIntStatus - address 0xFFE0 4000) bit description

Bit	Symbol	Description	Reset Value
0	IntStatus0	Status of channel 0 interrupts after masking.	0
1	IntStatus1	Status of channel 1 interrupts after masking.	0
31:2	-	Reserved, user software should not write ones to reserved bits. The value read from a reserved bit is not defined.	NA

30.9.2 Interrupt Terminal Count Status Register (DMACIntTCStatus - 0xFFE0 4004)

The DMACIntTCStatus Register is read-only and indicates the status of the terminal count after masking. <u>Table 564</u> shows the bit assignments of the DMACIntTCStatus Register.

Table 564. Interrupt Terminal Count Status register (DMACIntTCStatus - address 0xFFE0 4004) bit description

Bit	Symbol	Description	Reset Value
0	IntTCStatus0	Terminal count interrupt request status for channel 0.	0
1	IntTCStatus1	Terminal count interrupt request status for channel 1.	0
31:2	-	Reserved, user software should not write ones to reserved bits. The value read from a reserved bit is not defined.	NA

30.9.3 Interrupt Terminal Count Clear Register (DMACIntClear - 0xFFE0 4008)

The DMACIntTCClear Register is write-only and clears a terminal count interrupt request. When writing to this register, each data bit that is set HIGH causes the corresponding bit in the status register to be cleared. Data bits that are LOW have no effect on the corresponding bit in the register. Table 565 shows the bit assignments of the DMACIntTCClear Register.

Chapter 30: LPC23XX General Purpose DMA (GPDMA) controller

Table 565. Interrupt Terminal Count Clear register (DMACIntClear - address 0xFFE0 4008) bit description

Bit	Symbol	Description	Reset Value
0	IntTCClear0	Writing a 1 clears the terminal count interrupt request for channel 0 (IntTCStatus0).	-
1	IntTCClear1	Writing a 1 clears the terminal count interrupt request for channel 1 (IntTCStatus1).	-
31:2	-	Reserved, user software should not write ones to reserved bits. The value read from a reserved bit is not defined.	NA

30.9.4 Interrupt Error Status Register (DMACIntErrorStatus - 0xFFE0 400C)

The DMACIntErrorStatus Register is read-only and indicates the status of the error request after masking. <u>Table 566</u> shows the bit assignments of the DMACIntErrorStatus Register.

Table 566. Interrupt Error Status register (DMACIntErrorStatus - address 0xFFE0 400C) bit description

Bit	Symbol	Description	Reset Value
0	IntErrorStatus0	Interrupt error status for channel 0.	0x0
1	IntErrorStatus1	Interrupt error status for channel 1.	0x0
31:2	-	Reserved, user software should not write ones to reserved bits. The value read from a reserved bit is not defined.	NA

30.9.5 Interrupt Error Clear Register (DMACIntErrClr - 0xFFE0 4010)

The DMACIntErrClr Register is write-only and clears the error interrupt requests. When writing to this register, each data bit that is HIGH causes the corresponding bit in the status register to be cleared. Data bits that are LOW have no effect on the corresponding bit in the register. Table 567 shows the bit assignments of the DMACIntErrClr Register.

Table 567. Interrupt Error Clear register (DMACIntErrCIr - address 0xFFE0 4010) bit description

Bit	Symbol	Description	Reset Value
0	IntErrClr0	Writing a 1 clears the error interrupt request for channel 0 (IntErrorStatus0).	-
1	IntErrClr1	Writing a 1 clears the error interrupt request for channel 1 (IntErrorStatus1).	-
31:2	-	Reserved, user software should not write ones to reserved bits. The value read from a reserved bit is not defined.	NA

30.9.6 Raw Interrupt Terminal Count Status Register (DMACRawIntTCStatus - 0xFFE0 4014)

The DMACRawIntTCStatus Register is read-only and indicates which DMA channel is requesting a transfer complete (terminal count interrupt) prior to masking. A HIGH bit indicates that the terminal count interrupt request is active prior to masking. <u>Table 568</u> shows the bit assignments of the DMACRawIntTCStatus Register.

Chapter 30: LPC23XX General Purpose DMA (GPDMA) controller

Table 568. Raw Interrupt Terminal Count Status register (DMACRawIntTCStatus - address 0xFFE0 4014) bit description

Bit	Symbol	Description	Reset Value
0	RawIntTCStatus0	Status of the terminal count interrupt for channel 0 prior to masking.	-
1	RawIntTCStatus1	Status of the terminal count interrupt for channel 1 prior to masking.	-
31:2	-	Reserved, user software should not write ones to reserved bits. The value read from a reserved bit is not defined.	NA

30.9.7 Raw Error Interrupt Status Register (DMACRawIntErrorStatus - 0xFFE0 4018)

The DMACRawIntErrorStatus Register is read-only and indicates which DMA channel is requesting an error interrupt prior to masking. A HIGH bit indicates that the error interrupt request is active prior to masking. Table 569 shows the bit assignments of register of the DMACRawIntErrorStatus Register.

Table 569. Raw Error Interrupt Status register (DMACRawIntErrorStatus - address 0xFFE0 4018) bit description

Bit	Symbol	Description	Reset Value
0	RawIntErrorStatus0	Status of the error interrupt for channel 0 prior to masking.	-
1	RawIntErrorStatus1	Status of the error interrupt for channel 1 prior to masking.	-
31:2	-	Reserved, user software should not write ones to reserved bits. The value read from a reserved bit is not defined.	NA

30.9.8 Enabled Channel Register (DMACEnbldChns - 0xFFE0 401C)

The DMACEnbldChns Register is read-only and indicates which DMA channels are enabled, as indicated by the Enable bit in the DMACCxConfiguration Register. A HIGH bit indicates that a DMA channel is enabled. A bit is cleared on completion of the DMA transfer. Table 570 shows the bit assignments of the DMACEnbldChns Register.

Table 570. Enabled Channel register (DMACEnbldChns - address 0xFFE0 401C) bit description

Bit	Symbol	Description	Reset Value
0	EnabledChannels0	Enable status for Channel 0.	0
1	EnabledChannels1	Enable status for Channel 1.	0
31:2	-	Reserved, user software should not write ones to reserved bits. The value read from a reserved bit is not defined.	NA

30.9.9 Software Burst Request Register (DMACSoftBReq - 0xFFE0 4020)

The DMACSoftBReq Register is read/write and enables DMA burst requests to be generated by software. A DMA request can be generated for each source by writing a 1 to the corresponding register bit. A register bit is cleared when the transaction has completed. Writing 0 to this register has no effect. Reading the register indicates which

Chapter 30: LPC23XX General Purpose DMA (GPDMA) controller

sources are requesting DMA burst transfers. A request can be generated from either a peripheral or the software request register. <u>Table 571</u> shows the bit assignments of the DMACSoftBReq Register.

Table 571. Software Burst Request register (DMACSoftBReq - address 0xFFE0 4020) bit description

Bit	Symbol	Description	Reset Value
0	SoftBReqSSP0Tx	Software burst request flag for SSP0 Tx.	0
1	SoftBReqSSP0Rx	Software burst request flag for SSP0 Rx.	0
2	SoftBReqSSP1Tx	Software burst request flag for SSP1 Tx.	0
3	SoftBReqSSP1Rx	Software burst request flag for SSP1 Rx.	0
4	SoftBReqSDMMC	Software burst request flag for SD/MMC.	0
5	SoftBReqI2S0	Software burst request flag for I ² S0.	0
6	SoftBReqI2S1	Software burst request flag for I ² S1.	0
31:7	-	Reserved, user software should not write ones to reserved bits. The value read from a reserved bit is not defined.	NA

Note: It is recommended that software and hardware peripheral requests are not used at the same time.

30.9.10 Software Single Request Register (DMACSoftSReg - 0xFFE0 4024)

The DMACSoftSReq Register is read/write and enables DMA single requests to be generated by software. A DMA request can be generated for each source by writing a 1 to the corresponding register bit. A register bit is cleared when the transaction has completed. Writing 0 to this register has no effect. Reading the register indicates which sources are requesting single DMA transfers. A request can be generated from either a peripheral or the software request register. Table 572 shows the bit assignments of the DMACSoftSReq Register.

Table 572. Software Single Request register (DMACSoftSReq - address 0xFFE0 4024) bit description

Bit	Symbol	Description	Reset Value
0	SoftReqSSP0Tx	Single software request flag for SSP0 Tx.	0
1	SoftReqSSP0Rx	Single software request flag for SSP0 Rx.	0
2	SoftReqSSP1Tx	Single software request flag for SSP1 Tx.	0
3	SoftReqSSP1Rx	Single software request flag for SSP1 Rx.	0
4	SoftReqSDMMC	Single software request flag for SD/MMC.	0
31:5	-	Reserved, user software should not write ones to reserved bits. The value read from a reserved bit is not defined.	NA

30.9.11 Software Last Burst Request Register (DMACSoftLBreq - 0xFFE0 4028)

The DMACSoftLBReq Register is read/write and enables DMA last burst requests to be generated by software. A DMA request can be generated for each source by writing a 1 to the corresponding register bit. A register bit is cleared when the transaction has completed. Writing 0 to this register has no effect. Reading the register indicates which

Chapter 30: LPC23XX General Purpose DMA (GPDMA) controller

sources are requesting last burst DMA transfers. A request can be generated from either a peripheral or the software request register. <u>Table 573</u> shows the bit assignments of the DMACSoftLBReq Register.

Table 573. Software Last Burst Request register (DMACSoftLBReq - address 0xFFE0 4028) bit description

Bit	Symbol	Description	Reset Value
3:0	-	Reserved, user software should not write ones to reserved bits. The value read from a reserved bit is not defined.	NA
4	SoftLBReqSDMMC	Software last burst request flags for SD/MMC.	0
31:5	-	Reserved, user software should not write ones to reserved bits. The value read from a reserved bit is not defined.	NA

30.9.12 Software Last Single Request Register (DMACSoftLSReq - 0xFFE0 402C)

The DMACSoftLSReq Register is read/write and enables DMA last single requests to be generated by software. A DMA request can be generated for each source by writing a 1 to the corresponding register bit. A register bit is cleared when the transaction has completed. Writing 0 to this register has no effect. Reading the register indicates which sources are requesting last single DMA transfers. A request can be generated from either a peripheral or the software request register. Table 574 shows the bit assignments of the DMACSoftLSReq Register.

Table 574. Software Last Single Request register (DMACSoftLSReq - address 0xFFE0 402C) bit description

Bit	Symbol	Description	Reset Value
3:0	-	Reserved, user software should not write ones to reserved bits. The value read from a reserved bit is not defined.	NA
4	SoftLSReqSDMMC	Software last single request flags for SD/MMC.	0
31:5	-	Reserved, user software should not write ones to reserved bits. The value read from a reserved bit is not defined.	NA

30.9.13 Configuration Register (DMACConfiguration - 0xFFE0 4030)

The DMACConfiguration Register is read/write and configures the operation of the GPDMA. The endianness of the AHB master interface can be altered by writing to the M bit of this register. The AHB master interface is set to little-endian mode on reset.

Table 575 shows the bit assignments of the DMACConfiguration Register.

Table 575. Configuration register (DMACConfiguration - address 0xFFE0 4030) bit description

Bit	Symbol	Value	Description	Reset Value	
0	E	Е	GPDMA enable:	GPDMA enable:	0
		0	Disabled. Disabling the GPDMA reduces power consumption.		
		1	Enabled.		

Chapter 30: LPC23XX General Purpose DMA (GPDMA) controller

Table 575. Configuration register (DMACConfiguration - address 0xFFE0 4030) bit description

Bit	Symbol	Value	Description	Reset Value
1	M		AHB Master endianness configuration:	0
		0	Little-endian mode.	
		1	Big-endian mode.	
31:2	-	-	Reserved, user software should not write ones to reserved bits. The value read from a reserved bit is not defined.	NA

30.9.14 Synchronization Register (DMACSync - 0xFFE0 4034)

The DMACSync Register is read/write and enables or disables synchronization logic for the DMA request signals. The DMA request signals consist of the DMACBREQ[15:0], DMACSREQ[15:0], DMACLBREQ[15:0], and DMACLSREQ[15:0]. A bit set to 0 enables the synchronization logic for a particular group of DMA requests. A bit set to 1 disables the synchronization logic for a particular group of DMA requests. This register is reset to 0, synchronization logic enabled.

Table 576 shows the bit assignments of the DMACSync Register.

Table 576. Synchronization register (DMACSync - address 0xFFE0 4034) bit description

Bit	Symbol	Description	Reset Value
15:0	DMACSync	DMA synchronization logic for DMA request signals enabled or disabled. A LOW bit indicates that the synchronization logic for the DMACBREQ[15:0], DMACSREQ[15:0], DMACLBREQ[15:0], and DMACLSREQ[15:0] request signals is enabled. A HIGH bit indicates that the synchronization logic is disabled.	0x0000
31:16	-	Reserved, user software should not write ones to reserved bits. The value read from a reserved bit is not defined.	NA

30.10 Channel registers

The channel registers are used to program the two DMA channels. These registers consist of:

- Two DMACCxSrcAddr Registers
- Two DMACCxDestAddr Registers
- Two DMACCxLLI Registers
- Two DMACCxControl Registers
- Two DMACCxConfiguration Registers

When performing scatter/gather DMA the first four registers are automatically updated.

Chapter 30: LPC23XX General Purpose DMA (GPDMA) controller

30.10.1 Channel Source Address Registers (DMACC0SrcAddr - 0xFFE0 4100 and DMACC1SrcAddr - 0xFFE0 4120)

The two read/write DMACCxSrcAddr Registers contain the current source address (byte-aligned) of the data to be transferred. Each register is programmed directly by software before the appropriate channel is enabled. When the DMA channel is enabled this register is updated:

- As the source address is incremented.
- By following the linked list when a complete packet of data has been transferred.

Reading the register when the channel is active does not provide useful information. This is because by the time software has processed the value read, the channel might have progressed. It is intended to be read only when the channel has stopped, in which case it shows the source address of the last item read.

Note: The source and destination addresses must be aligned to the source and destination widths.

Table 577 shows the bit assignments of the DMACCxSrcAddr Registers.

Table 577. Channel Source Address registers (DMACC0SrcAddr - address 0xFFE0 4100 and DMACC1SrcAddr - address 0xFFE0 4120) bit description

Bit	Symbol	Description	Reset Value
31:0	SrcAddr	DMA source address.	0x0000 00000

30.10.2 Channel Destination Address Registers (DMACC0DestAddr - 0xFFE0 4104 and DMACC1DestAddr - 0xFFE0 4124)

The two read/write DMACCxDestAddr Registers contain the current destination address (byte-aligned) of the data to be transferred. Each register is programmed directly by software before the channel is enabled. When the DMA channel is enabled the register is updated as the destination address is incremented and by following the linked list when a complete packet of data has been transferred. Reading the register when the channel is active does not provide useful information. This is because by the time that software has processed the value read, the channel might have progressed. It is intended to be read only when a channel has stopped, in which case it shows the destination address of the last item read. Table 578 shows the bit assignments of the DMACCxDestAddr Register.

Table 578. Channel Destination Address registers (DMACC0DestAddr - address 0xFFE0 4104 and DMACC1DestAddr - address 0xFFE0 4124) bit description

Bit	Symbol	Description	Reset Value
31:0	DestAddr	DMA destination address	0x0000 0000

30.10.3 Channel Linked List Item Registers (DMACC0LLI - 0xFFE0 4108 and DMACC1LLI - 0xFFE0 4128)

The two read/write DMACCxLLI Registers contain a word-aligned address of the next Linked List Item (LLI). If the LLI is 0, then the current LLI is the last in the chain, and the DMA channel is disabled when all DMA transfers associated with it are completed.

Note: Programming this register when the DMA channel is enabled has unpredictable side effects.

UM10211

Chapter 30: LPC23XX General Purpose DMA (GPDMA) controller

Table 579 shows the bit assignments of the DMACCxLLI Register.

Table 579. Channel Linked List Item registers (DMACC0LLI - address 0xFFE0 4108 and DMACC1LLI - address 0xFFE0 4128) bit description

Bit	Symbol	Description	Reset Value
0	Reserved	Reserved, read as zero, do not modify.	NA
1	R	Reserved, and must be written as 0, masked on read.	0
31:2	LLI	Linked list item. Bits [31:2] of the address for the next LLI. Address bits [1:0] are 0.	0

Note: To make loading the LLIs more efficient for some systems, the LLI data structures can be made four-word aligned.

30.10.4 Channel Control Registers (DMACC0Control - 0xFFE0 410C and DMACC0Control - 0xFFE0 412C)

The two read/write DMACCxControl Registers contain DMA channel control information such as the transfer size, burst size, and transfer width. Each register is programmed directly by software before the DMA channel is enabled. When the channel is enabled the register is updated by following the linked list when a complete packet of data has been transferred. Reading the register while the channel is active does not give useful information. This is because by the time software has processed the value read, the channel might have progressed. It is intended to be read only when a channel has stopped. Table 580 shows the bit assignments of the DMACCxControl Register.

Table 580. Channel Control registers (DMACC0Control - address 0xFFE0 410C and DMACC1Control - address 0xFFE0 412C) bit description

Bit	Symbol	Description	Reset Value
11:0	TransferSize	Transfer size. A write to this field sets the size of the transfer when the GPDMA is the flow controller. A read from this field indicates the number of transfers completed on the destination bus. Reading the register when the channel is active does not give useful information because by the time that the software has processed the value read, the channel might have progressed. It is intended to be used only when a channel is enabled and then disabled. The transfer size value is not used if the GPDMA is not the flow controller.	0
14:12	SBSize	Source burst size. Indicates the number of transfers that make up a source burst. This value must be set to the burst size of the source peripheral, or if the source is memory, to the memory boundary size. The burst size is the amount of data that is transferred when the DMACBREQ signal goes active in the source peripheral.	0
17:15	DBsize	Destination burst size. Indicates the number of transfers that make up a destination burst transfer request. This value must be set to the burst size of the destination peripheral, or if the destination is memory, to the memory boundary size. The burst size is the amount of data that is transferred when the DMACBREQ signal goes active in the destination peripheral.	0
20:18	SWidth	Source transfer width. Transfers wider than the AHB master bus width are illegal. The source and destination widths can be different from each other. The hardware automatically packs and unpacks the data as required.	0

Chapter 30: LPC23XX General Purpose DMA (GPDMA) controller

Table 580. Channel Control registers (DMACC0Control - address 0xFFE0 410C and DMACC1Control - address 0xFFE0 412C) bit description

Bit	Symbol	Description	Reset Value
23:21	DWidth	Destination transfer width. Transfers wider than the AHB master bus width are not supported. The source and destination widths can be different from each other. The hardware automatically packs and unpacks the data as required.	0
25:24	-	Reserved, user software should not write ones to reserved bits. The value read from a reserved bit is not defined.	NA
26	SI	Source increment. When set the source address is incremented after each transfer.	0
27	DI	Destination increment. When set the destination address is incremented after each transfer.	0
30:28	Prot	Protection.	0
31	l	Terminal count interrupt enable bit. It controls whether the current LLI is expected to trigger the terminal count interrupt.	0

<u>Table 581</u> shows the value of the 3 bit DBSize or SBSize fields and the corresponding burst sizes.

Table 581. Source or destination burst size

Bit value of DBSize or SBSize	Source or distention burst transfer request size
000	1
001	4
010	8
011	16
100	32
101	64
110	128
111	256

<u>Table 582</u> shows the value of the 3 bit SWidth or DWidth fields and the corresponding transfer width.

Table 582. Source or destination transfer width

Bit value of DBWidth or SBWidth	Source or distention burst transfer request size
000	Byte (8 bit)
001	Halfword (16 bit)
010	Word (32 bit)
011 and 1xxx	Reserved

30.10.5 Protection and Access Information

AHB access information is provided to the source and destination peripherals when a transfer occurs. The transfer information is provided by programming the DMA channel (the Prot bit of the DMACCxControl Register, and the Lock bit of the DMACCxConfiguration Register). These bits are programmed by software and peripherals can use this information if necessary. Three bits of information are provided, and Table 583 shows the purpose of the three protection bits.

Chapter 30: LPC23XX General Purpose DMA (GPDMA) controller

Table 583. Protection bits

DMACC1Control Bit	Value	Description	Reset Value
28		Privileged or User. This bit controls the AHB HPROT[1] signal. Indicates that the access is in User, or privileged mode:	0
	0	User mode.	
	1	Privileged mode.	
29		Bufferable or not bufferable. This bit indicates that the access is bufferable. This bit can, for example, be used to indicate to an AMBA bridge that the read can complete in zero wait states on the source bus without waiting for it to arbitrate for the destination bus and for the slave to accept the data. This bit controls the AHB HPROT[2] signal. Indicates that the access is bufferable, or not bufferable:	0
	0	Not bufferable.	
	1	Bufferable.	
30		Cacheable or not cacheable. This indicates that the access is cacheable. This bit can, for example, be used to indicate to an AMBA bridge that when it saw the first read of a burst of eight it can transfer the whole burst of eight reads on the destination bus, rather than pass the transactions through one at a time. This bit controls the AHB HPROT[3] signal. Indicates that the access is cacheable or not cacheable:	0
	0	Not cacheable.	
	1	Cacheable.	

30.10.6 Channel Configuration Registers (DMACC0Configuration - 0xFFE0 4110 and DMACC1Configuration - 0xFFE0 4130)

The two DMACCxConfiguration Registers are read/write with the exception of bit[17] which is read-only. Used these to configure the DMA channel. The registers are not updated when a new LLI is requested. <u>Table 584</u> shows the bit assignments of the DMACCxConfiguration Register.

Chapter 30: LPC23XX General Purpose DMA (GPDMA) controller

Table 584. Channel Configuration registers (DMACC0Configuration - address 0xFFE0 4110 and DMACC1Configuration - address 0xFFE0 4130) bit description

Bit	Symbol		Description	Reset
	c y z c.	raido	2000.1910.1	Value
0	E		The Channel Enable bit status can also be found by reading the DMACEnbldChns Register.	0
			A channel is enabled by setting this bit.	
			A channel can be disabled by clearing the Enable bit. This causes the current AHB transfer (if one is in progress) to complete and the channel is then disabled. Any data in the FIFO of the relevant channel is lost. Restarting the channel by setting the Channel Enable bit has unpredictable effects and the channel must be fully re-initialized.	
			The channel is also disabled, and Channel Enable bit cleared, when the last LLI is reached or if a channel error is encountered.	
If a channel has to be disabled without losing data in the FIFO the set so that further DMA requests are ignored. The Active bit must		If a channel has to be disabled without losing data in the FIFO the Halt bit must be set so that further DMA requests are ignored. The Active bit must then be polled until it reaches 0, indicating that there is no data left in the FIFO. Finally the Channel Enable bit can be cleared.		
			Channel enable reading this bit indicates whether a channel is currently enabled or disabled:	
		0	Channel disabled.	
		1	Channel enabled.	
4:1	SrcPeripheral		Source peripheral. This value selects the DMA source request peripheral. This field is ignored if the source of the transfer is from memory.	0
		0000	SSP0 Tx	
		0001	SSP0 Rx	
		0010	SSP1 Tx	
		0011	SSP1 Rx	
		0100	SD/MMC	
		0101	I2S channel 0	
		0110	I2S channel 1	
		0111 or 1xxx	These values are reserved and should not be used.	
5	-	-	Reserved, do not modify, masked on read.	NA
9:6	DestPeriphera I		Destination peripheral. This value selects the DMA destination request peripheral. This field is ignored if the destination of the transfer is to memory. See the SrcPeripheral symbol description for values.	0
10	-	-	Reserved, do not modify, masked on read.	NA
13:11	FlowCntrl		Flow control and transfer type. This value indicates the flow controller and transfer type. The flow controller can be the GPDMA, the source peripheral, or the destination peripheral. The transfer type can be memory-to-memory, memory-to-peripheral, peripheral-to-memory, or peripheral-to-peripheral.	0
14	IE		Interrupt error mask. When cleared this bit masks out the error interrupt of the relevant channel.	0
15	ITC		Terminal count interrupt mask. When cleared this bit masks out the terminal count interrupt of the relevant channel.	0
16	L		Lock. When set, this bit enables locked transfers.	0

Chapter 30: LPC23XX General Purpose DMA (GPDMA) controller

Table 584. Channel Configuration registers (DMACC0Configuration - address 0xFFE0 4110 and DMACC1Configuration - address 0xFFE0 4130) bit description

Bit	Symbol	Value	Description	Reset Value
17 A Active. This value can be used with the Halt and Channel Enable bits disable a DMA channel. Writing to this bit has no effect.		Active. This value can be used with the Halt and Channel Enable bits to cleanly disable a DMA channel. Writing to this bit has no effect.		
		0	There is no data in the FIFO of the channel.	
		1	The channel FIFO has data.	
18 H			Halt. The contents of the channel FIFO are drained. This value can be used with the Active and Channel Enable bits to cleanly disable a DMA channel.	0
		0	Enable DMA requests.	
		1	Ignore further source DMA requests.	
31:19	-		Reserved, do not modify, masked on read.	NA

30.10.7 Lock control

Set the lock bit by programming bit 16 in the DMACCxConfiguration Register.

When a burst occurs, the AHB arbiter must not de-grant the master during the burst until the lock is deasserted. The GPDMA can be locked for a a single burst such as a long source fetch burst or a long destination drain burst. The GPDMA does not usually assert the lock continuously for a source fetch burst followed by a destination drain burst.

There are situations when the GPDMA asserts the lock for source transfers followed by destination transfers. This is possible when internal conditions in the GPDMA permit it to perform a source fetch followed by a destination drain back-to-back.

30.10.8 Flow control and transfer type

Table 585 lists the bit values of the three flow control and transfer type bits.

Table 585. Flow control and transfer type bits

Bit Value	Transfer Type	Controller
000	Memory to memory.	DMA
001	Memory to peripheral.	DMA
010	Peripheral to memory.	DMA
011	Source peripheral to destination peripheral.	DMA
100	Source peripheral to destination peripheral.	Destination peripheral.
101	Memory to peripheral.	Peripheral.
110	Peripheral to memory.	Peripheral.
111	Source peripheral to destination peripheral.	Source peripheral.

30.11 Address generation

Address generation can be either incrementing or non-incrementing (address wrapping is not supported). Bursts do not cross the 1 kB address boundary.

Chapter 30: LPC23XX General Purpose DMA (GPDMA) controller

30.12 Scatter/Gather

Scatter/gather is supported through the use of linked lists. This means that the source and destination areas do not have to occupy contiguous areas in memory. Where scatter/gather is not required the DMACCxLLI Register must be set to 0.

The source and destination data areas are defined by a series of linked lists. Each Linked List Item (LLI) controls the transfer of one block of data, and then optionally loads another LLI to continue the DMA operation, or stops the DMA stream. The first LLI is programmed into the GPDMA.

The data to be transferred described by a LLI (referred to as the packet of data) usually requires one or more DMA bursts (to each of the source and destination).

30.12.1 Linked List Items

A Linked List Item (LLI) consists of four words. These words are organized in the following order:

- 1. DMACCxSrcAddr.
- DMACCxDestAddr.
- 3. DMACCxLLI.
- 4. DMACCxControl.

Note: The DMACCxConfiguration DMA channel Configuration Register is not part of the linked list item.

30.12.2 Programming the GPDMA for scatter/gather DMA

To program the GPDMA for scatter/gather DMA:

- Write the LLIs for the complete DMA transfer to memory. Each linked list item contains four words:
 - Source address.
 - Destination address.
 - Pointer to next LLI.
 - Control word.

The last LLI has its linked list word pointer set to 0. The LLIs must be stored in the memory where the GPDMA has access to (i.e. AHB1 SRAM and external memory).


- 2. Choose a free DMA channel with the priority required. DMA channel 0 has the highest priority and DMA channel 1 the lowest priority.
- 3. Write the first linked list item, previously written to memory, to the relevant channel in the GPDMA.
- 4. Write the channel configuration information to the channel Configuration Register and set the Channel Enable bit. The GPDMA then transfers the first and then subsequent packets of data as each linked list item is loaded.

Chapter 30: LPC23XX General Purpose DMA (GPDMA) controller

5. An interrupt can be generated at the end of each LLI depending on the Terminal Count bit in the DMACCxControl Register. If this bit is set an interrupt is generated at the end of the relevant LLI. The interrupt request must then be serviced and the relevant bit in the DMACIntTCClear Register must be set to clear the interrupt.

30.12.3 Example of scatter/gather DMA

See <u>Figure 139</u> for an example of an LLI. A rectangle of memory has to be transferred to a peripheral. The addresses of each line of data are given, in hexadecimal, at the left-hand side of the figure. The LLIs describing the transfer are to be stored contiguously from address 0x20000.

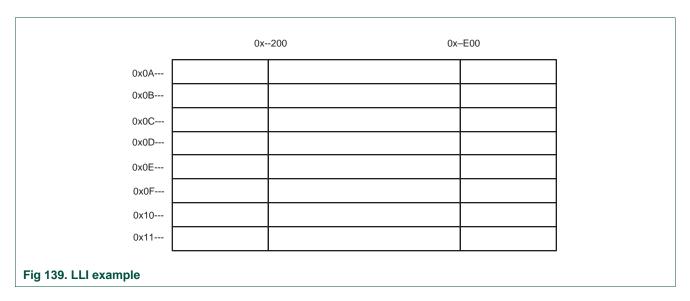

The first LLI, stored at 0x20000, defines the first block of data to be transferred, which is the data stored between addresses 0x0A200 and 0x0AE00:

- Source start address 0x0A200.
- Destination address set to the destination peripheral address.
- Transfer width, word (32 bit).
- Transfer size, 3 072 bytes (0XC00).
- Source and destination burst sizes, 16 transfers.
- Next LLI address, 0x20010.

The second LLI, stored at 0x20010, describes the next block of data to be transferred:

- Source start address 0x0B200.
- Destination address set to the destination peripheral address.
- Transfer width, word (32 bit).
- Transfer size, 3 072 bytes (0xC00).
- Source and destination burst sizes, 16 transfers.
- Next LLI address, 0x20020.

Chapter 30: LPC23XX General Purpose DMA (GPDMA) controller

A chain of descriptors is built up, each one pointing to the next in the series. To initialize the DMA stream, the first LLI, 0x20000, is programmed into the GPDMA. When the first packet of data has been transferred the next LLI is automatically loaded.

The final LLI is stored at 0x20070 and contains:

- Source start address 0x11200.
- Destination address set to the destination peripheral address.
- Transfer width, word (32 bit).
- Transfer size, 3 072 bytes (0xC00).
- Source and destination burst sizes, 16 transfers.
- Next LLI address, 0x0.

Because the next LLI address is set to zero, this is the last descriptor, and the DMA channel is disabled after transferring the last item of data. The channel is probably set to generate an interrupt at this point to indicate to the ARM processor that the channel can be reprogrammed.

30.13 Interrupt requests

Interrupt requests can be generated when an AHB error is encountered, or at the end of a transfer (terminal count) after all the data corresponding to the current LLI has been transferred to the destination. The interrupts can be masked by programming bits in the relevant DMACCxControl and DMACCxConfiguration Channel Registers. Interrupt status registers are provided which group the interrupt requests from all the DMA channels prior to interrupt masking (DMACRawIntTCStatus and DMACRawIntErrorStatus), and after interrupt masking (DMACIntTCStatus and DMACIntErrorStatus). The DMACIntStatus Register combines both the DMACIntTCStatus and DMACIntErrorStatus requests into a single register to enable the source of an interrupt to be quickly found. Writing to the DMACIntTCClear or the DMACIntErrClr Registers with a bit set HIGH enables selective clearing of interrupts.

30.13.1 Hardware interrupt sequence flow

When a DMA interrupt request occurs, the Interrupt Service Routine needs to:

- Read the DMACIntStatus Register to determine which channel generated the interrupt. If more than one request is active it is recommended that the highest priority channels be checked first.
- 2. Read the DMACIntTCStatus Register to determine whether the interrupt was generated due to the end of the transfer (terminal count). A HIGH bit indicates that the transfer completed.
- 3. Read the DMACIntErrorStatus Register to determine whether the interrupt was generated due to an error occurring. A HIGH bit indicates that an error occurred.
- 4. Service the interrupt request.
- 5. For a terminal count interrupt write a 1 to the relevant bit of the DMACIntTCCIr Register. For an error interrupt write a 1 to the relevant bit of the DMACIntErrCIr Register to clear the interrupt request.

Chapter 30: LPC23XX General Purpose DMA (GPDMA) controller

30.13.2 Interrupt polling sequence flow

Used when the GPDMA interrupt request signal is either masked out, disabled in the interrupt controller or disabled in the processor. When polling the GPDMA, you must:

- Read the DMACIntStatus Register. If none of the bits are HIGH repeat this step, otherwise go to step 2. If more than one request is active it is recommended that the highest priority channels be checked first.
- Read the DMACIntTCStatus Register to determine whether the interrupt was generated due to the end of the transfer (terminal count). A HIGH bit indicates that the transfer completed.
- 3. Service the interrupt request.
- 4. For a terminal count interrupt write a 1 to the relevant bit of the DMACIntTCCIr Register. For an error interrupt write a 1 to the relevant bit of the DMACIntErrCIr Register to clear the interrupt request.

30.14 GPDMA data flow

This section describes the GPDMA data flow sequences for the four allowed transfer types:

- Memory-to-peripheral.
- Peripheral-to-memory.
- Memory-to-memory.
- Peripheral-to-peripheral.

Each transfer type can have either the peripheral or the GPDMA as the flow controller so there are eight possible control scenarios.

Table 586 indicates the request signals used for each type of transfer.

Table 586. DMA request signal usage

Transfer Direction	Request Generator	Flow Controller
Memory-to-peripheral	Peripheral	GPDMA
Memory-to-peripheral	Peripheral	Peripheral
Peripheral-to-memory	Peripheral	GPDMA
Peripheral-to-memory	Peripheral	Peripheral
Memory-to-memory	GPDMA	GPDMA
Source peripheral to destination peripheral	Source peripheral and destination peripheral	Source peripheral
Source peripheral to destination peripheral	Source peripheral and destination peripheral	Destination peripheral
Source peripheral to destination peripheral	Source peripheral and destination peripheral	GPDMA

30.14.1 Peripheral-to-memory, or Memory-to-peripheral DMA Flow

For a peripheral-to-memory or memory-to-peripheral DMA flow the following sequence occurs:

Chapter 30: LPC23XX General Purpose DMA (GPDMA) controller

- 1. Program and enable the DMA channel.
- 2. Wait for a DMA request.
- 3. The GPDMA starts transferring data when:
 - The DMA request goes active.
 - The DMA stream has the highest pending priority.
 - The GPDMA is the bus master of the AHB bus.
- 4. If an error occurs while transferring the data, an error interrupt is generated and disables the DMA stream, and the flow sequence ends.
- 5. Decrement the transfer count if the GPDMA is performing the flow control.
- 6. If the transfer has completed (indicated by the transfer count reaching 0 if the GPDMA is performing flow control, or by the peripheral sending a DMA request if the peripheral is performing flow control):
 - The GPDMA responds with a DMA acknowledge.
 - The terminal count interrupt is generated (this interrupt can be masked).
 - If the DMACCxLLI Register is not 0, then reload the DMACCxSrcAddr, DMACCxDestAddr, DMACCxLLI, and DMACCxControl Registers and go back to step 2. However, if DMACCxLLI is 0, the DMA stream is disabled and the flow sequence ends.

30.14.2 Peripheral-to-peripheral DMA Flow

For a peripheral-to-peripheral DMA flow the following sequence occurs:

- 1. Program and enable the DMA channel.
- 2. Wait for a source DMA request.
- 3. The GPDMA starts transferring data when:
 - The DMA request goes active.
 - The DMA stream has the highest pending priority.
 - The GPDMA is the bus master of the AHB bus.
- 4. If an error occurs while transferring the data an error interrupt is generated, then finishes.
- 5. Decrement the transfer count if the GPDMA is performing the flow control.
- 6. If the transfer has completed (indicated by the transfer count reaching 0 if the GPDMA is performing flow control, or by the peripheral sending a DMA request if the peripheral is performing flow control):
 - The GPDMA responds with a DMA acknowledge to the source peripheral.
 - Further source DMA requests are ignored.
- 7. When the destination DMA request goes active and there is data in the GPDMA FIFO, transfer data into the destination peripheral.
- 8. If an error occurs while transferring the data, an error interrupt is generated and disables the DMA stream, and the flow sequence ends.
- 9. If the transfer has completed it is indicated by the transfer count reaching 0 if the GPDMA is performing flow control, or by the sending a DMA request if the peripheral is performing flow control. The following happens:

Chapter 30: LPC23XX General Purpose DMA (GPDMA) controller

- The GPDMA responds with a DMA acknowledge to the destination peripheral.
- The terminal count interrupt is generated (this interrupt can be masked).
- If the DMACCxLLI Register is not 0, then reload the DMACCxSrcAddr, DMACCxDestAddr, DMACCxLLI, and DMACCxControl Registers and go to back to step 2. However, if DMACCxLLI is 0, the DMA stream is disabled and the flow sequence ends.

30.14.3 Memory-to-memory DMA Flow

For a memory-to-memory DMA flow the following sequence occurs:

- 1. Program and enable the DMA channel.
- 2. Transfer data whenever the DMA channel has the highest pending priority and the GPDMA gains mastership of the AHB bus.
- 3. If an error occurs while transferring the data generate an error interrupt and disable the DMA stream.
- 4. Decrement the transfer count.
- 5. If the count has reached zero:
 - Generate a terminal count interrupt (the interrupt can be masked).
 - If the DMACCxLLI Register is not 0, then reload the DMACCxSrcAddr, DMACCxDestAddr, DMACCxLLI, and DMACCxControl Registers and go to back to step 2. However, if DMACCxLLI is 0, the DMA stream is disabled and the flow sequence ends.

Note: Memory-to-memory transfers should be programmed with a low channel priority, otherwise other DMA channels cannot access the bus until the memory-to-memory transfer has finished, or other AHB masters cannot perform any transaction.

30.15 Flow control

The peripheral that controls the length of the packet is known as the flow controller. The flow controller is usually the GPDMA where the packet length is programmed by software before the DMA channel is enabled. If the packet length is unknown when the DMA channel is enabled, either the source or destination peripherals can be used as the flow controller.

For simple or low-performance peripherals that know the packet length (that is, when the peripheral is the flow controller), a simple way to indicate that a transaction has completed is for the peripheral to generate an interrupt and enable the processor to reprogram the DMA channel.

The transfer size value (in the DMACCxControl register) is ignored if a peripheral is configured as the flow controller.

When the DMA is transferred:

- 1. The GPDMA issues an acknowledge to the peripheral in order to indicate that the transfer has finished.
- 2. A TC interrupt is generated, if enabled.
- 3. The GPDMA moves on to the next LLI.

User manual

UM10211

Chapter 31: LPC23XX EmbeddedTrace Module (ETM)

Rev. 4.1 — 5 September 2012

User manual

31.1 Features

- Closely track the instructions that the ARM core is executing.
- One external trigger input.
- 10 pin interface.
- All registers are programmed through JTAG interface.
- Does not consume power when trace is not being used.
- THUMB instruction set support.

31.2 Applications

As the microcontroller has significant amounts of on-chip memories, it is not possible to determine how the processor core is operating simply by observing the external pins. The ETM provides real-time trace capability for deeply embedded processor cores. It outputs information about processor execution to a trace port. A software debugger allows configuration of the ETM using a JTAG interface and displays the trace information that has been captured, in a format that a user can easily understand.

31.3 Description

The ETM is connected directly to the ARM core and not to the main AMBA system bus. It compresses the trace information and exports it through a narrow trace port. An external Trace Port Analyzer captures the trace information under software debugger control. Trace port can broadcast the Instruction trace information. Instruction trace (or PC trace) shows the flow of execution of the processor and provides a list of all the instructions that were executed. Instruction trace is significantly compressed by only broadcasting branch addresses as well as a set of status signals that indicate the pipeline status on a cycle by cycle basis. Trace information generation can be controlled by selecting the trigger resource. Trigger resources include address comparators, counters and sequencers. Since trace information is compressed the software debugger requires a static image of the code being executed. Self-modifying code can not be traced because of this restriction.

31.3.1 ETM configuration

The following standard configuration is selected for the ETM macrocell.

Table 587. ETM configuration

Resource number/type	Small[1]
Pairs of address comparators	1
Data Comparators	0 (Data tracing is not supported)
Memory Map Decoders	4
Counters	1
Sequencer Present	No

Chapter 31: LPC23XX EmbeddedTrace Module (ETM)

Table 587. ETM configuration

Resource number/type	Small ^[1]
External Inputs	2
External Outputs	0
FIFOFULL Present	Yes (Not wired)
FIFO depth	10 bytes
Trace Packet Width	4/8

^[1] For details refer to ARM documentation "Embedded Trace Macrocell Specification (ARM IHI 0014E)".

31.4 Pin description

Table 588. ETM pin description

Pin Name	Туре	Description
TRACECLK	Output	Trace Clock. The trace clock signal provides the clock for the trace port. PIPESTAT[2:0], TRACESYNC, and TRACEPKT[3:0] signals are referenced to the rising edge of the trace clock. This clock is not generated by the ETM block. It is to be derived from the system clock. The clock should be balanced to provide sufficient hold time for the trace data signals. Half rate clocking mode is supported. Trace data signals should be shifted by a clock phase from TRACECLK. Refer to Figure 3.14 page 3.26 and figure 3.15 page 3.27 in "ETM7 Technical Reference Manual" (ARM DDI 0158B), for example circuits that implements both half-rateclocking and shifting of the trace data with respect to the clock. For TRACECLK timings refer to section 5.2 on page 5-13 in "Embedded Trace Macrocell Specification" (ARM IHI 0014E).
PIPESTAT[2:0]	Output	Pipe Line status. The pipeline status signals provide a cycle-by-cycle indication of what is happening in the execution stage of the processor pipeline.
TRACESYNC	Output	Trace synchronization. The trace sync signal is used to indicate the first packet of a group of trace packets and is asserted HIGH only for the first packet of any branch address.
TRACEPKT[3:0]	Output	Trace Packet. The trace packet signals are used to output packaged address and data information related to the pipeline status. All packets are eight bits in length. A packet is output over two cycles. In the first cycle, Packet[3:0] is output and in the second cycle, Packet[7:4] is output.
EXTIN[0]	Input	External Trigger Input

31.5 Register description

The ETM contains 29 registers as shown in <u>Table 589</u> below. They are described in detail in the ARM IHI 0014E document published by ARM Limited.

Chapter 31: LPC23XX EmbeddedTrace Module (ETM)

Table 589. ETM Registers

Name	Description	Access	Register Encoding
ETM Control	Controls the general operation of the ETM.	R/W	000 0000
ETM Configuration Code	Allows a debugger to read the number of each type of resource.	RO	000 0001
Trigger Event	Holds the controlling event.	WO	000 0010
Memory Map Decode Control	Eight bit register, used to statically configure the memory map decoder.	WO	000 0011
ETM Status	Holds the pending overflow status bit.	RO	000 0100
System Configuration	Holds the configuration information using the SYSOPT bus.	RO	000 0101
Trace Enable Control 3	Holds the trace on/off addresses.	WO	000 0110
Trace Enable Control 2	Holds the address of the comparison.	WO	000 0111
Trace Enable Event	Holds the enabling event.	WO	000 1000
Trace Enable Control 1	Holds the include and exclude regions.	WO	000 1001
FIFOFULL Region	Holds the include and exclude regions.	WO	000 1010
FIFOFULL Level	Holds the level below which the FIFO is considered full.	WO	000 1011
ViewData event	Holds the enabling event.	WO	000 1100
ViewData Control 1	Holds the include/exclude regions.	WO	000 1101
ViewData Control 2	Holds the include/exclude regions.	WO	000 1110
ViewData Control 3	Holds the include/exclude regions.	WO	000 1111
Address Comparator 1 to 16	Holds the address of the comparison.	WO	001 xxxx
Address Access Type 1 to 16	Holds the type of access and the size.	WO	010 xxxx
Reserved	-	-	000 xxxx
Reserved	-	-	100 xxxx
Initial Counter Value 1 to 4	Holds the initial value of the counter.	WO	101 00xx
Counter Enable 1 to 4	Holds the counter clock enable control and event.	WO	101 01xx
Counter reload 1 to 4	Holds the counter reload event.	WO	101 10xx
Counter Value 1 to 4	Holds the current counter value.	RO	101 11xx
Sequencer State and Control	Holds the next state triggering events.	-	110 00xx
External Output 1 to 4	Holds the controlling events for each output.	WO	110 10xx
Reserved	-	-	110 11xx
Reserved	-	-	111 0xxx
Reserved	-	-	111 1xxx


31.6 Reset state of multiplexed pins

On the LPC2300, the ETM pin functions are multiplexed with GPIO, PWM, UART, and CAN functions. In order to use the trace feature, the pins must be configured to select the function. Details may be found in <u>Table 120</u>.

Chapter 31: LPC23XX EmbeddedTrace Module (ETM)

31.7 Block diagram

The block diagram of the ETM debug environment is shown below in Figure 140.

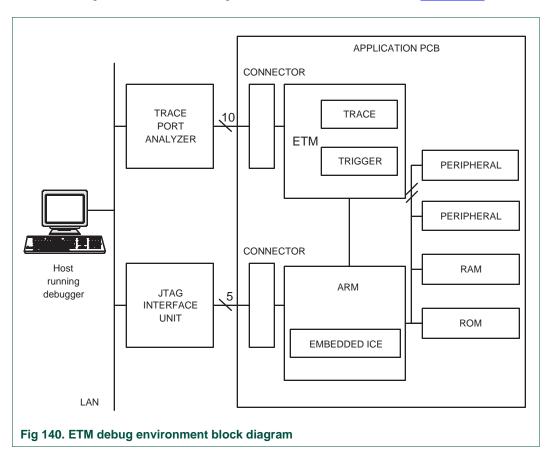

UM10211

Chapter 32: LPC23XX EmbeddedICE logic

Rev. 4.1 — 5 September 2012

User manual

32.1 Features

- No target resources are required by the software debugger in order to start the debugging session.
- Allows the software debugger to talk via a JTAG (Joint Test Action Group) port directly to the core.
- Inserts instructions directly in to the ARM7TDMI-S core.
- The ARM7TDMI-S core or the System state can be examined, saved or changed depending on the type of instruction inserted.
- Allows instructions to execute at a slow debug speed or at a fast system speed.

32.2 Applications

The EmbeddedICE logic provides on-chip debug support. The debugging of the target system requires a host computer running the debugger software and an EmbeddedICE protocol convertor. EmbeddedICE protocol convertor converts the Remote Debug Protocol commands to the JTAG data needed to access the ARM7TDMI-S core present on the target system.

32.3 Description

The ARM7TDMI-S Debug Architecture uses the existing JTAG³ port as a method of accessing the core. The scan chains that are around the core for production test are reused in the debug state to capture information from the databus and to insert new information into the core or the memory. There are two JTAG-style scan chains within the ARM7TDMI-S. A JTAG-style Test Access Port Controller controls the scan chains. In addition to the scan chains, the debug architecture uses EmbeddedICE logic which resides on chip with the ARM7TDMI-S core. The EmbeddedICE has its own scan chain that is used to insert watchpoints and breakpoints for the ARM7TDMI-S core. The EmbeddedICE logic consists of two real-time watchpoint registers, together with a control and status register. One or both of the watchpoint registers can be programmed to halt the ARM7TDMI-S core. Execution is halted when a match occurs between the values programmed into the EmbeddedICE logic and the values currently appearing on the address bus, databus and some control signals. Any bit can be masked so that its value does not affect the comparison. Either watchpoint register can be configured as a watchpoint (i.e. on a data access) or a break point (i.e. on an instruction fetch). The watchpoints and breakpoints can be combined such that:

 The conditions on both watchpoints must be satisfied before the ARM7TDMI core is stopped. The CHAIN functionality requires two consecutive conditions to be satisfied before the core is halted. An example of this would be to set the first breakpoint to

^{3.} For more details refer to IEEE Standard 1149.1 - 1990 Standard Test Access Port and Boundary Scan Architecture.

Chapter 32: LPC23XX EmbeddedICE logic

trigger on an access to a peripheral and the second to trigger on the code segment that performs the task switching. Therefore when the breakpoints trigger the information regarding which task has switched out will be ready for examination.

 The watchpoints can be configured such that a range of addresses are enabled for the watchpoints to be active. The RANGE function allows the breakpoints to be combined such that a breakpoint is to occur if an access occurs in the bottom 256 bytes of memory but not in the bottom 32 bytes.

The ARM7TDMI-S core has a Debug Communication Channel function in-built. The debug communication channel allows a program running on the target to communicate with the host debugger or another separate host without stopping the program flow or even entering the debug state. The debug communication channel is accessed as a co-processor 14 by the program running on the ARM7TDMI-S core. The debug communication channel allows the JTAG port to be used for sending and receiving data without affecting the normal program flow. The debug communication channel data and control registers are mapped in to addresses in the EmbeddedICE logic.

For more details refer to *IEEE Standard 1149.1 - 1990 Standard Test Access Port and Boundary Scan Architecture.*

32.4 Pin description

Table 590. EmbeddedICE pin description

Pin Name	Туре	Description
DBGEN[1]	Input	Debug Enable . JTAG interface control signal (see <u>Section 32.5</u>). This pin is not available on all LPC23xx parts. See <u>Section 8.1</u> for availability of the DBGEN pin.
TMS[1]	Input	Test Mode Select. The TMS pin selects the next state in the TAP state machine.
TCK[2]	Input	Test Clock. This allows shifting of the data in, on the TMS and TDI pins. It is a positive edgetriggered clock with the TMS and TCK signals that define the internal state of the device.
		Remark: This clock must be slower than 1?6 of the CPU clock (CCLK) for the JTAG interface to operate.
TDI[1]	Input	Test Data In. This is the serial data input for the shift register.
TDO[2]	Output	Test Data Output. This is the serial data output from the shift register. Data is shifted out of the device on the negative edge of the TCK signal.
nTRST[1]	Input	Test Reset. The nTRST pin can be used to reset the test logic within the EmbeddedICE logic.
RTCK[1]	Output	Returned Test Clock. Extra signal added to the JTAG port. Required for designs based on ARM7TDMI-S processor core. Multi-ICE (Development system from ARM) uses this signal to maintain synchronization with targets having slow or widely varying clock frequency. For details refer to "Multi-ICE System Design considerations Application Note 72 (ARM DAI 0072A)". Board designers may need to connect a weak bias resistor to this pin as described below.

^[1] This pin has a built-in pull-up resistor.

^[2] This pin has no built-in pull-up and no built-in pull-down resistor.

Chapter 32: LPC23XX EmbeddedICE logic

32.5 JTAG usage notes

Remark: JTAG access to the LPC2300 is only possible if no code read protection is selected, see <u>Table 530</u>.

On devices with DBGEN pin available (see Section 8.1), the JTAG port may be used either for debug or for boundary scan. The state of the DBGEN pin determines which function is available. When DBGEN = 0, the JTAG port may be used for boundary scan. When DBGEN = 1, the JTAG port may be used for debug.

32.6 Register description

The EmbeddedICE logic contains 16 registers as shown in <u>Table 591</u> below. The ARM7TDMI-S debug architecture is described in detail in "ARM7TDMI-S (rev 4) Technical Reference Manual" (ARM DDI 0234A) published by ARM Limited.


Table 591. EmbeddedICE logic registers

Table 55 it _inibaddalio_ region of			
Name	Width	Description	Address
Debug Control	6	Force debug state, disable interrupts	00000
Debug Status	5	Status of debug	00001
Debug Comms Control Register	32	Debug communication control register	00100
Debug Comms Data Register	32	Debug communication data register	00101
Watchpoint 0 Address Value	32	Holds watchpoint 0 address value	01000
Watchpoint 0 Address Mask	32	Holds watchpoint 0 address mask	01001
Watchpoint 0 Data Value	32	Holds watchpoint 0 data value	01010
Watchpoint 0 Data Mask	32	Holds watchpoint 0 data mask	01011
Watchpoint 0 Control Value	9	Holds watchpoint 0 control value	01100
Watchpoint 0 Control Mask	8	Holds watchpoint 0 control mask	01101
Watchpoint 1 Address Value	32	Holds watchpoint 1 address value	10000
Watchpoint 1 Address Mask	32	Holds watchpoint 1 address mask	10001
Watchpoint 1 Data Value	32	Holds watchpoint 1 data value	10010
Watchpoint 1 Data Mask	32	Holds watchpoint 1 data mask	10011
Watchpoint 1 Control Value	9	Holds watchpoint 1 control value	10100
Watchpoint 1 Control Mask	8	Holds watchpoint 1 control mask	10101

32.7 Block diagram

The block diagram of the debug environment is shown below in Figure 141.

Chapter 32: LPC23XX EmbeddedICE logic

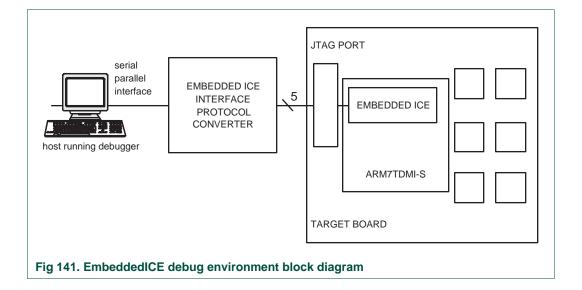

UM10211

Chapter 33: LPC23XX RealMonitor

Rev. 4.1 — 5 September 2012

User manual

33.1 Features

Remark: RealMonitor is a configurable software module which enables real time debug. RealMonitor is developed by ARM Inc. Information presented in this chapter is taken from the ARM document RealMonitor Target Integration Guide (ARM DUI 0142A). It applies to a specific configuration of RealMonitor software programmed in the on-chip ROM boot memory of this device.

- Allows user to establish a debug session to a currently running system without halting or resetting the system.
- Allows user time-critical interrupt code to continue executing while other user application code is being debugged.

33.2 Applications

Real time debugging.

33.3 Description

RealMonitor is a lightweight debug monitor that allows interrupts to be serviced while user debug their foreground application. It communicates with the host using the DCC (Debug Communications Channel), which is present in the EmbeddedICE logic. RealMonitor provides advantages over the traditional methods for debugging applications in ARM systems. The traditional methods include:

- Angel (a target-based debug monitor).
- Multi-ICE or other JTAG unit and EmbeddedICE logic (a hardware-based debug solution).

Although both of these methods provide robust debugging environments, neither is suitable as a lightweight real-time monitor.

Angel is designed to load and debug independent applications that can run in a variety of modes, and communicate with the debug host using a variety of connections (such as a serial port or ethernet). Angel is required to save and restore full processor context, and the occurrence of interrupts can be delayed as a result. Angel, as a fully functional target-based debugger, is therefore too heavyweight to perform as a real-time monitor.

Multi-ICE is a hardware debug solution that operates using the EmbeddedICE unit that is built into most ARM processors. To perform debug tasks such as accessing memory or the processor registers, Multi-ICE must place the core into a debug state. While the processor is in this state, which can be millions of cycles, normal program execution is suspended, and interrupts cannot be serviced.


RealMonitor combines features and mechanisms from both Angel and Multi-ICE to provide the services and functions that are required. In particular, it contains both the Multi-ICE communication mechanisms (the DCC using JTAG), and Angel-like support for

Chapter 33: LPC23XX RealMonitor

processor context saving and restoring. RealMonitor is pre-programmed in the on-chip ROM memory (boot sector). When enabled It allows user to observe and debug while parts of application continue to run. Refer to Section 33.4 "How to Enable RealMonitor" on Dage 669 for details.

33.3.1 RealMonitor Components

As shown in Figure 142, RealMonitor is split in to two functional components:

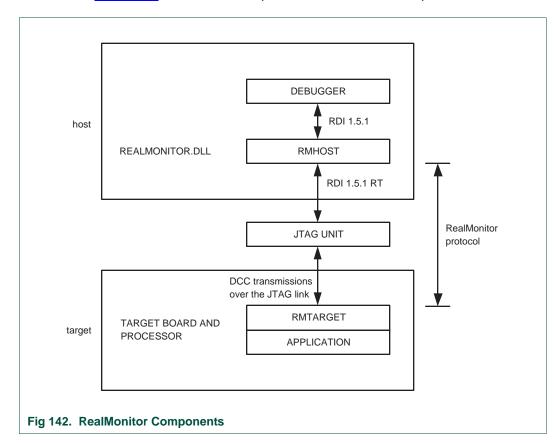

33.3.1.1 RMHost

This is located between a debugger and a JTAG unit. The RMHost controller, RealMonitor.dll, converts generic Remote Debug Interface (RDI) requests from the debugger into DCC-only RDI messages for the JTAG unit. For complete details on debugging a RealMonitor-integrated application from the host, see the ARM RMHost User Guide (ARM DUI 0137A).


33.3.1.2 RMTarget

This is pre-programmed in the on-chip ROM memory (boot sector), and runs on the target hardware. It uses the EmbeddedICE logic, and communicates with the host using the DCC. For more details on RMTarget functionality, see the RealMonitor Target Integration Guide (ARM DUI 0142A).

Chapter 33: LPC23XX RealMonitor

33.3.2 How RealMonitor Works

In general terms, the RealMonitor operates as a state machine, as shown in Figure 143. RealMonitor switches between running and stopped states, in response to packets received by the host, or due to asynchronous events on the target. RMTarget supports the triggering of only one breakpoint, watchpoint, stop, or semihosting SWI at a time. There is no provision to allow nested events to be saved and restored. So, for example, if user application has stopped at one breakpoint, and another breakpoint occurs in an IRQ handler, RealMonitor enters a panic state. No debugging can be performed after RealMonitor enters this state.

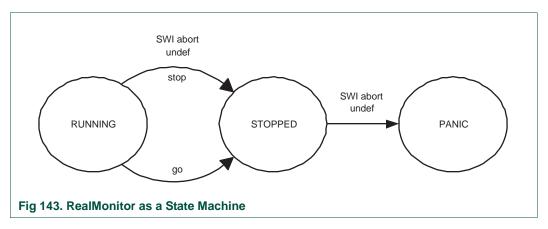

A debugger such as the ARM eXtended Debugger (AXD) or other RealMonitor aware debugger, that runs on a host computer, can connect to the target to send commands and receive data. This communication between host and target is illustrated in Figure 142.

The target component of RealMonitor, RMTarget, communicates with the host component, RMHost, using the Debug Communications Channel (DCC), which is a reliable link whose data is carried over the JTAG connection.

While user application is running, RMTarget typically uses IRQs generated by the DCC. This means that if user application also wants to use IRQs, it must pass any DCC-generated interrupts to RealMonitor.

To allow nonstop debugging, the EmbeddedICE-RT logic in the processor generates a Prefetch Abort exception when a breakpoint is reached, or a Data Abort exception when a watchpoint is hit. These exceptions are handled by the RealMonitor exception handlers that inform the user, by way of the debugger, of the event. This allows user application to continue running without stopping the processor. RealMonitor considers user application to consist of two parts:

- A foreground application running continuously, typically in User, System, or SVC mode
- A background application containing interrupt and exception handlers that are triggered by certain events in user system, including:
 - IRQs or FIQs
 - Data and Prefetch aborts caused by user foreground application. This indicates an
 error in the application being debugged. In both cases the host is notified and the
 user application is stopped.

Chapter 33: LPC23XX RealMonitor

 Undef exception caused by the undefined instructions in user foreground application. This indicates an error in the application being debugged. RealMonitor stops the user application until a "Go" packet is received from the host.

When one of these exceptions occur that is not handled by user application, the following happens:

- RealMonitor enters a loop, polling the DCC. If the DCC read buffer is full, control is
 passed to rm_ReceiveData() (RealMonitor internal function). If the DCC write buffer is
 free, control is passed to rm_TransmitData() (RealMonitor internal function). If there is
 nothing else to do, the function returns to the caller. The ordering of the above
 comparisons gives reads from the DCC a higher priority than writes to the
 communications link.
- RealMonitor stops the foreground application. Both IRQs and FIQs continue to be serviced if they were enabled by the application at the time the foreground application was stopped.

33.4 How to Enable RealMonitor

The following steps must be performed to enable RealMonitor. A code example which implements all the steps can be found at the end of this section.

33.4.1 Adding Stacks

User must ensure that stacks are set up within application for each of the processor modes used by RealMonitor. For each mode, RealMonitor requires a fixed number of words of stack space. User must therefore allow sufficient stack space for both RealMonitor and application.

RealMonitor has the following stack requirements:

Table 592. RealMonitor stack requirement

Processor Mode	RealMonitor Stack Usage (Bytes)
Undef	48
Prefetch Abort	16
Data Abort	16
IRQ	8

33.4.2 IRQ Mode

A stack for this mode is always required. RealMonitor uses two words on entry to its interrupt handler. These are freed before nested interrupts are enabled.

33.4.3 Undef Mode

A stack for this mode is always required. RealMonitor uses 12 words while processing an undefined instruction exception.

33.4.4 SVC Mode

RealMonitor makes no use of this stack.

Chapter 33: LPC23XX RealMonitor

33.4.5 Prefetch Abort Mode

RealMonitor uses four words on entry to its Prefetch abort interrupt handler.

33.4.6 Data Abort Mode

RealMonitor uses four words on entry to its data abort interrupt handler.

33.4.7 User/System Mode

RealMonitor makes no use of this stack.

33.4.8 FIQ Mode

RealMonitor makes no use of this stack.

33.4.9 Handling Exceptions

This section describes the importance of sharing exception handlers between RealMonitor and user application.


33.4.9.1 RealMonitor Exception Handling

To function properly, RealMonitor must be able to intercept certain interrupts and exceptions. Figure 144 illustrates how exceptions can be claimed by RealMonitor itself, or shared between RealMonitor and application. If user application requires the exception sharing, they must provide function (such as app_IRQDispatch ()). Depending on the nature of the exception, this handler can either:

- Pass control to the RealMonitor processing routine, such as rm_irghandler2().
- Claim the exception for the application itself, such as app_IRQHandler ().

In a simple case where an application has no exception handlers of its own, the application can install the RealMonitor low-level exception handlers directly into the vector table of the processor. Although the irq handler must get the address of the Vectored Interrupt Controller. The easiest way to do this is to write a branch instruction (<address>) into the vector table, where the target of the branch is the start address of the relevant RealMonitor exception handler.

Chapter 33: LPC23XX RealMonitor

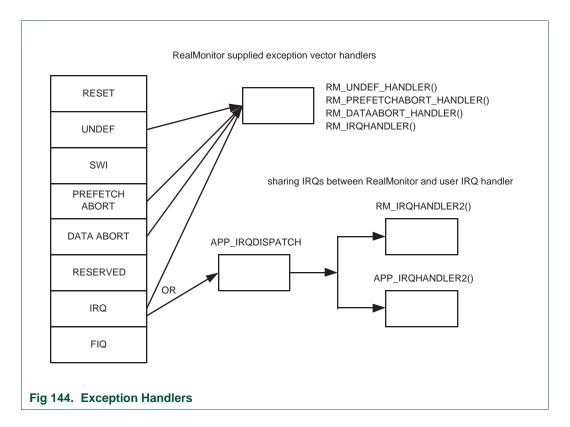

33.4.10 RMTarget Initialization

While the processor is in a privileged mode, and IRQs are disabled, user must include a line of code within the start-up sequence of application to call rm_init_entry().

33.4.11 Code Example

The following example shows how to setup stack, VIC, initialize RealMonitor and share non vectored interrupts:

```
IMPORT rm_init_entry
IMPORT rm_prefetchabort_handler
IMPORT rm_dataabort_handler
IMPORT rm_irqhandler2
IMPORT rm_undef_handler
IMPORT User_Entry ;Entry point of user application.
CODE32
ENTRY
;Define exception table. Instruct linker to place code at address 0x0000 0000
AREA exception_table, CODE

LDR pc, Reset_Address
LDR pc, Undefined_Address
LDR pc, SWI_Address
LDR pc, Prefetch_Address
LDR pc, Abort_Address
```

Chapter 33: LPC23XX RealMonitor

```
NOP; Insert User code valid signature here.
     LDR pc, [pc, #-0x120] ;Load IRQ vector from VIC
     LDR PC, FIQ Address
Reset Address
                     DCD __init
                                          Reset Entry point
Undefined_Address DCD rm_undef_handler ;Provided by RealMonitor
SWI_Address DCD 0 ;User can put address of SWI handlest prefetch_Address DCD rm_prefetchabort_handler ;Provided by RealMonitor Abort_Address DCD rm_dataabort_handler ;Provided by RealMonitor
                                          ;User can put address of SWI handler here
                   DCD 0
                                          ;User can put address of FIQ handler here
FIQ Address
AREA init_code, CODE
ram_end EQU 0x4000xxxx; Top of on-chip RAM.
; /*********************
; * Set up the stack pointers for various processor modes. Stack grows
; * downwards.
LDR r2, =ram_end; Get top of RAM
     MRS r0, CPSR ; Save current processor mode
     ; Initialize the Undef mode stack for RealMonitor use
     BIC r1, r0, #0x1f
     ORR r1, r1, #0x1b
     MSR CPSR_c, r1
     ; Keep top 32 bytes for flash programming routines.
     ; Refer to Flash Memory System and Programming chapter
     SUB sp,r2,#0x1F
     ; Initialize the Abort mode stack for RealMonitor
     BIC r1, r0, #0x1f
     ORR r1, r1, #0x17
     MSR CPSR_c, r1
     ; Keep 64 bytes for Undef mode stack
     SUB sp,r2,\#0x5F
     ; Initialize the IRQ mode stack for RealMonitor and User
     BIC r1, r0, #0x1f
     ORR r1, r1, #0x12
     MSR CPSR_c, r1
     ;Keep 32 bytes for Abort mode stack
     SUB sp,r2,\#0x7F
     ; Return to the original mode.
     MSR CPSR c, r0
     ; Initialize the stack for user application
     ; Keep 256 bytes for IRQ mode stack
     SUB sp,r2,#0x17F
```

Chapter 33: LPC23XX RealMonitor

```
; /**********************
; * Setup Vectored Interrupt controller. DCC Rx and Tx interrupts
; * generate Non Vectored IRQ request. rm init entry is aware
; * of the VIC and it enables the DBGCommRX and DBGCommTx interrupts.
; * Default vector address register is programmed with the address of
; * Non vectored app_irqDispatch mentioned in this example. User can setup
; * Vectored IRQs or FIQs here.
EQU 0xFFFFF000 ; VIC Base address
    VICBaseAddr
    VICDefVectAddrOffset EQU 0x34
    LDR r0, =VICBaseAddr
    LDR r1, =app_irqDispatch
    STR r1, [r0, #VICDefVectAddrOffset]
    BL rm_init_entry ;Initialize RealMonitor
    ;enable FIO and IRO in ARM Processor
    MRS r1, CPSR ; get the CPSR
    BIC r1, r1, #0xC0 ; enable IRQs and FIQs
    MSR CPSR c, r1 ; update the CPSR
; /**********************
; * Get the address of the User entry point.
LDR lr, =User Entry
    MOV pc, lr
; /*********************************
; * Non vectored irg handler (app irgDispatch)
AREA app_irqDispatch, CODE
VICVectAddrOffset EOU 0x30
app_irqDispatch
    ; enable interrupt nesting
    STMFD sp!, \{r12,r14\}
    MRS r12, spsr
                          ;Save SPSR in to r12
    MSR cpsr_c,0x1F
                          ;Re-enable IRQ, go to system mode
;User should insert code here if non vectored Interrupt sharing is
;required. Each non vectored shared irq handler must return to
;the interrupted instruction by using the following code.
                                  ;Disable irg, move to IRQ mode
    MSR cpsr c, #0x52
    MSR spsr, r12
                                  ;Restore SPSR from r12
    STMFD sp!, {r0}
   LDR r0, =VICBaseAddr
    STR r1, [r0, #VICVectAddrOffset]
                                 ;Acknowledge Non Vectored irq has finished
   LDMFD sp!, {r12,r14,r0}
                                  ;Restore registers
   SUBS pc, r14, #4
                                  ;Return to the interrupted instruction
```

juser interrupt did not happen so call rm irghandler2. This handler

Chapter 33: LPC23XX RealMonitor

```
; is not aware of the VIC interrupt priority hardware so trick
;rm_irghandler2 to return here
STMFD sp!, {ip,pc}
LDR pc, rm_irqhandler2
;rm_irqhandler2 returns here
MSR cpsr c, #0x52
                                     ;Disable irg, move to IRQ mode
MSR spsr, r12
                                     ;Restore SPSR from r12
STMFD sp!, {r0}
LDR r0, =VICBaseAddr
STR r1, [r0, #VICVectAddrOffset]
                                     ;Acknowledge Non Vectored irq has finished
LDMFD sp!, {r12,r14,r0}
                                     ;Restore registers
SUBS pc, r14, #4
                                     ; Return to the interrupted instruction
END
```

33.5 RealMonitor Build Options

RealMonitor was built with the following options:

RM_OPT_DATALOGGING=FALSE

This option enables or disables support for any target-to-host packets sent on a non RealMonitor (third-party) channel.

RM_OPT_STOPSTART=TRUE

This option enables or disables support for all stop and start debugging features.

RM_OPT_SOFTBREAKPOINT=TRUE

This option enables or disables support for software breakpoints.

RM_OPT_HARDBREAKPOINT=TRUE

Enabled for cores with EmbeddedICE-RT. This device uses ARM-7TDMI-S Rev 4 with EmbeddedICE-RT.

RM_OPT_HARDWATCHPOINT=TRUE

Enabled for cores with EmbeddedICE-RT. This device uses ARM-7TDMI-S Rev 4 with EmbeddedICE-RT.

RM_OPT_SEMIHOSTING=FALSE

This option enables or disables support for SWI semi-hosting. Semi-hosting provides code running on an ARM target use of facilities on a host computer that is running an ARM debugger. Examples of such facilities include the keyboard input, screen output, and disk I/O.

RM_OPT_SAVE_FIQ_REGISTERS=TRUE

This option determines whether the FIQ-mode registers are saved into the registers block when RealMonitor stops.

Chapter 33: LPC23XX RealMonitor

RM_OPT_READBYTES=TRUE

RM_OPT_WRITEBYTES=TRUE

RM_OPT_READHALFWORDS=TRUE

RM_OPT_WRITEHALFWORDS=TRUE

RM_OPT_READWORDS=TRUE

RM_OPT_WRITEWORDS=TRUE

Enables/Disables support for 8/16/32 bit read/write.

RM_OPT_EXECUTECODE=FALSE

Enables/Disables support for executing code from "execute code" buffer. The code must be downloaded first.

RM OPT GETPC=TRUE

This option enables or disables support for the RealMonitor GetPC packet. Useful in code profiling when real monitor is used in interrupt mode.

RM_EXECUTECODE_SIZE=NA

"execute code" buffer size. Also refer to RM_OPT_EXECUTECODE option.

RM OPT GATHER STATISTICS=FALSE

This option enables or disables the code for gathering statistics about the internal operation of RealMonitor.

RM_DEBUG=FALSE

This option enables or disables additional debugging and error-checking code in RealMonitor.

RM OPT BUILDIDENTIFIER=FALSE

This option determines whether a build identifier is built into the capabilities table of RMTarget. Capabilities table is stored in ROM.

RM_OPT_SDM_INFO=FALSE

SDM gives additional information about application board and processor to debug tools.

RM_OPT_MEMORYMAP=FALSE

This option determines whether a memory map of the board is built into the target and made available through the capabilities table

RM_OPT_USE_INTERRUPTS=TRUE

This option specifies whether RMTarget is built for interrupt-driven mode or polled mode.

RM_FIFOSIZE=NA

UM10211 NXP Semiconductors

Chapter 33: LPC23XX RealMonitor

This option specifies the size, in words, of the data logging FIFO buffer.

CHAIN_VECTORS=FALSE

This option allows RMTarget to support vector chaining through μHAL (ARM HW abstraction API).

UM10211

Chapter 34: Supplementary information Rev. 4.1 — 5 September 2012

User manual

34.1 Abbreviations

Table 593. Acronym list

Table 333. Actorylin list		
Acronym	Description	
ADC	Analog-to-Digital Converter	
AHB	Advanced High-performance Bus	
AMBA	Advanced Microcontroller Bus Architecture	
APB	Advanced Peripheral Bus	
ATX	Analog Transceiver	
BLS	Byte Lane Select	
BOD	BrownOut Detection	
CAN	Controller Area Network	
DAC	Digital-to-Analog Converter	
DCC	Debug Communication Channel	
DMA	Direct Memory Access	
DSP	Digital Signal Processing	
EOP	End Of Packet	
ETM	Embedded Trace Macrocell	
GPIO	General Purpose Input/Output	
IrDA	Infrared Data Association	
JTAG	Joint Test Action Group	
MII	Media Independent Interface	
PHY	Physical Layer	
PLL	Phase-Locked Loop	
PWM	Pulse Width Modulator	
RMII	Reduced Media Independent Interface	
SD/MMC	Secure Digital/MultiMediaCard	
SE0	Single Ended Zero	
SPI	Serial Peripheral Interface	
SSI	Synchronous Serial Interface	
SSP	Synchronous Serial Port	
TTL	Transistor-Transistor Logic	
UART	Universal Asynchronous Receiver/Transmitter	
USB	Universal Serial Bus	

Chapter 34: Supplementary information

34.2 Legal information

34.2.1 Definitions

Draft — The document is a draft version only. The content is still under internal review and subject to formal approval, which may result in modifications or additions. NXP Semiconductors does not give any representations or warranties as to the accuracy or completeness of information included herein and shall have no liability for the consequences of use of such information.

34.2.2 Disclaimers

Limited warranty and liability — Information in this document is believed to be accurate and reliable. However, NXP Semiconductors does not give any representations or warranties, expressed or implied, as to the accuracy or completeness of such information and shall have no liability for the consequences of use of such information. NXP Semiconductors takes no responsibility for the content in this document if provided by an information source outside of NXP Semiconductors.

In no event shall NXP Semiconductors be liable for any indirect, incidental, punitive, special or consequential damages (including - without limitation - lost profits, lost savings, business interruption, costs related to the removal or replacement of any products or rework charges) whether or not such damages are based on tort (including negligence), warranty, breach of contract or any other legal theory.

Notwithstanding any damages that customer might incur for any reason whatsoever, NXP Semiconductors' aggregate and cumulative liability towards customer for the products described herein shall be limited in accordance with the *Terms and conditions of commercial sale* of NXP Semiconductors.

Right to make changes — NXP Semiconductors reserves the right to make changes to information published in this document, including without limitation specifications and product descriptions, at any time and without notice. This document supersedes and replaces all information supplied prior to the publication hereof.

Suitability for use — NXP Semiconductors products are not designed, authorized or warranted to be suitable for use in life support, life-critical or safety-critical systems or equipment, nor in applications where failure or

malfunction of an NXP Semiconductors product can reasonably be expected to result in personal injury, death or severe property or environmental damage. NXP Semiconductors and its suppliers accept no liability for inclusion and/or use of NXP Semiconductors products in such equipment or applications and therefore such inclusion and/or use is at the customer's own risk

Applications — Applications that are described herein for any of these products are for illustrative purposes only. NXP Semiconductors makes no representation or warranty that such applications will be suitable for the specified use without further testing or modification.

Customers are responsible for the design and operation of their applications and products using NXP Semiconductors products, and NXP Semiconductors accepts no liability for any assistance with applications or customer product design. It is customer's sole responsibility to determine whether the NXP Semiconductors product is suitable and fit for the customer's applications and products planned, as well as for the planned application and use of customer's third party customer(s). Customers should provide appropriate design and operating safeguards to minimize the risks associated with their applications and products.

NXP Semiconductors does not accept any liability related to any default, damage, costs or problem which is based on any weakness or default in the customer's applications or products, or the application or use by customer's third party customer(s). Customer is responsible for doing all necessary testing for the customer's applications and products using NXP Semiconductors products in order to avoid a default of the applications and the products or of the application or use by customer's third party customer(s). NXP does not accept any liability in this respect.

Export control — This document as well as the item(s) described herein may be subject to export control regulations. Export might require a prior authorization from competent authorities.

34.2.3 Trademarks

Notice: All referenced brands, product names, service names and trademarks are the property of their respective owners.

I2C-bus - logo is a trademark of NXP B.V.

Chapter 34: Supplementary information

34.3 Tables

Table 1.	LPC23xx overview		0xE01F C080) bit description 52
Table 2.	LPC23xx features overview 6	Table 38.	PLL Configuration register (PLLCFG - address
Table 3.	LPC23xx ordering information 6		0xE01F C084) bit description 52
Table 4.	LPC2361/62 Ordering options	Table 39.	Multiplier values for 32 kHz oscillator 53
Table 5.	LPC2364/65/66/67/68 Ordering options7	Table 40.	PLL Status register (PLLSTAT - address
Table 6.	LPC2377/78 ordering options8		0xE01F C088) bit description 55
Table 7.	LPC2387 ordering options	Table 41.	PLL control bit combinations 55
Table 8.	LPC2388 ordering options	Table 42.	PLL Feed register (PLLFEED - address
Table 9.	LPC2300 memory usage		0xE01F C08C) bit description 56
	APB peripherals and base addresses 24		PLL frequency parameter56
Table 11.	ARM exception vector locations	Table 44.	Additional Multiplier Values for use with a Low
	LPC2300 Memory mapping modes		Frequency Clock Input57
	Memory mapping control registers		Potential values for PLL example59
Table 14.	Memory Mapping control register (MEMMAP -	Table 46.	CPU Clock Configuration register (CCLKCFG -
	address 0xE01F C040) bit description 27		address 0xE01F C104) bit description 61
	Pin summary30	Table 47.	USB Clock Configuration register (USBCLKCFG -
	Summary of system control registers		address 0xE01F C108) bit description61
Table 17.	Reset Source Identification register (RSID -	Table 48.	IRC Trim register (IRCTRIM - address
	address 0xE01F C180) bit description		0xE01F C1A4) bit description
	External Interrupt registers	Table 49.	Peripheral Clock Selection register 0 (PCLKSEL0
Table 19.	External Interrupt Flag register (EXTINT - address	T.I. 50	- address 0xE01F C1A8) bit description 62
T.I. 00	0xE01F C140) bit description	Table 50.	Peripheral Clock Selection register 1 (PCLKSEL1
Table 20.	External Interrupt Mode register (EXTMODE -	T-1-1- 54	- address 0xE01F C1AC) bit description 62
Table 04	address 0xE01F C148) bit description		Peripheral Clock Selection register bit values . 63
Table 21.	External Interrupt Polarity register (EXTPOLAR -		Power Control registers
Table 22	address 0xE01F C14C) bit description37	Table 53.	Power Mode Control register (PCON - address
	AHB Arbitar Configuration register 1 (AHBCEC1	Toblo 54	0xE01F C0C0) bit description
Table 23.	AHB Arbiter Configuration register 1 (AHBCFG1 -		Encoding of reduced power modes
Toble 24	address 0xE01F C188) bit description 38	Table 55.	Interrupt Wakeup register (INTWAKE - address
Table 24.	Priority sequence (bit 0 = 0): CPU, GPDMA, AHB1, USB	Table 56	0xE01F C144) bit description 67 Power Control for Peripherals register (PCONP -
Table 25	Priority sequence (bit 0 = 0): USB, AHB1, CPU,	Table 50.	address 0xE01F C0C4) bit description 68
Table 25.	GPDMA	Table 57	Memory bank selection
Table 26	Priority sequence (bit 0 = 0): GPDMA, AHB1,		Pad interface and control signal descriptions . 75
Table 20.	CPU, USB		EMC register summary
Table 27	Priority sequence (bit 0 = 0): USB, AHB1, CPU,		EMC Control register (EMCControl - address
14510 211	GPDMA40	14510 00.	0xFFE0 8000) bit description
Table 28.	AHB Arbiter Configuration register 2 (AHBCFG2 -	Table 61.	EMC Status register (EMCStatus - address
	address 0xE01F C18C) bit description 40		0xFFE0 8008) bit description
Table 29.	Priority sequence (bit 0 = 0): Ethernet, CPU41	Table 62.	EMC Configuration register (EMCConfig -
	Priority sequence (bit $0 = 0$): Ethernet, CPU41		address 0xFFE0 8008) bit description 78
	System Controls and Status register (SCS -		Static Memory Extended Wait register
	address 0xE01F C1A0) bit description 42		(EMCStaticExtendedWait - address
Table 32.	Summary of system control registers		0xFFE0 8080) bit description
	Recommended values for $C_{X1/X2}$ in oscillation	Table 64.	Static Memory Configuration registers
	mode (crystal and external components		(EMCStaticConfig0-1 - addresses 0xFFE0 8200,
	parameters) low frequency mode (OSCRANGE =		0xFFE0 8220) bit description 79
	0, see <u>Table 31</u>)	Table 65.	Static Memory Write Enable Delay registers
Table 34.	Recommended values for $C_{X1/X2}$ in oscillation		(EMCStaticWaitWen0-1 - addresses
	mode (crystal and external components		0xFFE0 8204,0xFFE0 8224) bit description80
	parameters) high frequency mode (OSCRANGE =	Table 66.	Static Memory Output Enable delay registers
	1, see <u>Table 31</u>)		(EMCStaticWaitOen0-1 - addresses
Table 35.	Clock Source Select register (CLKSRCSEL -		$\mbox{0xFFE0}$ 8208, $\mbox{0xFFE0}$ 8228) bit description 81
	address 0xE01F C10C) bit description 49	Table 67.	Static Memory Read Delay registers
	PLL registers51		(EMCStaticWaitRd0-1 - addresses 0xFFE0 820C,
Table 37.	PLL Control register (PLLCON - address		0xFFE0 822C) bit description

Table 68.	Static Memory Page Mode Read Delay	Table 96. LPC2364/68 pin allocation table 113
	registers0-1 (EMCStaticWaitPage0-1 - addresses	Table 97. LPC2364/65/66/67/68 pin description 115
	0xFFE0 8210, 0xFFE0 8230) bit description82	Table 98. LPC2377/78 pin description
Table 69.	Static Memory Write Delay registers0-1	Table 99. LPC2387 pin description
	(EMCStaticWaitWr - addresses 0xFFE0 8214,	Table 100. LPC2388 pin description
	0xFFE0 8234) bit description	Table 101. Part specific PINSEL registers 154
Table 70.	Static Memory Extended Wait register	Table 102. Pin function select register bits 155
	(EMCStaticExtendedWait - address	Table 103. Pin Mode Select register Bits
	0xFFE0 8080) bit description	Table 104. Pin Connect Block Register Map
Table 71	Static Memory Turn Round Delay registers0-1	Table 105. Pin function select register 0 (PINSEL0 - address
Table 11.	· · · · · · · · · · · · · · · · · · ·	-
	(EMCStaticWaitTurn0-1- addresses	0xE002 C000) bit description
T	0xFFE0 8218, 0xFFE0 8238) bit description83	(LPC2364/65/66/67/68 and LPC2387)156
	VIC register map	Table 106. Pin function select register 0 (PINSEL0 - address
Table 73.	Software Interrupt register (VICSoftInt - address	0xE002 C000) bit description (LPC2377/78 and
	0xFFFF F018) bit description	LPC2388)
Table 74.	Software Interrupt Clear register (VICSoftIntClear	Table 107. Pin function select register 1 (PINSEL1 - address
	- address 0xFFFF F01C) bit description88	0xE002 C004) bit description
Table 75.	Raw Interrupt Status register (VICRawIntr -	(LPC2364/65/66/67/68 and LPC2387) 158
	address 0xFFFF F008) bit description 89	Table 108. Pin function select register 1 (PINSEL1 - address
Table 76.	Interrupt Enable register (VICIntEnable - address	0xE002 C004) bit description (LPC2377/78 and
	0xFFFF F010) bit description	LPC2388)158
Table 77.	Interrupt Enable Clear register (VICIntEnClear -	Table 109. Pin function select register 2 (PINSEL2 - address
	address 0xFFFF F014) bit description 89	0xE002 C008) bit description
Table 78.	Interrupt Select register (VICIntSelect - address	(LPC2364/65/66/67/68, LPC2377/78, LPC2387,
	0xFFFF F00C) bit description	LPC2388)159
Table 79	IRQ Status register (VICIRQStatus - address	Table 110. Pin function select register 3 (PINSEL3 - address
14510 701	0xFFFF F000) bit description	0xE002 C00C) bit description
Tahla 80	FIQ Status register (VICFIQStatus - address	(LPC2361/62/64/65/66/67/68 and LPC2387). 160
Table 00.	0xFFFF F004) bit description	Table 111. Pin function select register 3 (PINSEL3 - address
Toblo 01		
Table of.	Vector Address registers 0-31 (VICVectAddr0-31 -	0xE002 C00C) bit description (LPC2377/78 and
	addresses 0xFFFF F100 to 0xFFFF F17C) bit	LPC2388)
T	description	Table 112. Pin function select register 4 (PINSEL4 - address
Table 82.	Vector Priority registers 0-31 (VICVectPriority0-31	0xE002 C010) bit description
	- addresses 0xFFFF F200 to 0xFFFF F27C) bit	(LPC2364/65/66/67/68 and LPC2387) 161
	description	Table 113. Pin function select register 4 (PINSEL4 - address
Table 83.	Vector Address register (VICAddress - address	0xE002 C010) bit description (LPC2377/78 and
	0xFFFF FF00) bit description	LPC2388)162
Table 84.	Software Priority Mask register	Table 114. Pin function select register 6 (PINSEL6 - address
	(VICSWPriorityMask - address 0xFFFF F024) bit	0xE002 C018) bit description (LPC2377/78 and
	description	LPC2388)162
Table 85.	Protection Enable register (VICProtection -	Table 115. Pin function select register 7 (PINSEL7 - address
	address 0xFFFF F020) bit description 92	0xE002 C01C) bit description
Table 86.	Connection of interrupt sources to the Vectored	(LPC2364/65/66/67/68 and LPC2387)163
	Interrupt Controller	Table 116. Pin function select register 7 (PINSEL7 - address
Table 87.	Interrupt sources bit allocation table	0xE002 C01C) bit description (LPC2377/78 and
	MAM responses to program accesses of various	LPC2388)164
	types98	Table 117. Pin function select register 8 (PINSEL8 - address
Table 89	MAM responses to data and DMA accesses of	0xE002 C020) bit description (LPC2377/78 and
	various types99	LPC2388)
Table 90	Summary of Memory Acceleration Module	Table 118. Pin function select register 9 (PINSEL9 - address
Table 00.	registers	0xE002 C024) bit description
Table 01	MAM Control Register (MAMCR - address	(LPC2364/66/65/67/68 and LPC2387) 165
Table 31.	0xE01F C000) bit description	,
Table 00		Table 119. Pin function select register 9 (PINSEL9 - address
iable 92.	MAM Timing register (MAMTIM - address	0xE002 C024) bit description (LPC2377/78 and
T-bl- 00	0xE01F C004) bit description	LPC2388)
	Suggestions for MAM timing selection 103	Table 120. Pin function select register 10 (PINSEL10 -
	LPC23xx pinning overview	address 0xE002 C028) bit description 166
iable 95.	LPC2361/62 pin description104	Table 121. Pin Mode select register 0 (PINMODE0 - address

	0xE002 C040) bit description	(FIO[0/1/2/3/4]MASK - address
Table 122.	Pin Mode select register 1 (PINMODE1 - address	0x3FFF C0[1/3/5/7/9]0) bit description 181
	0xE002 C044) bit description	Table 148. Fast GPIO port Mask byte and half-word
	Pin Mode select register 2 (PINMODE2 - address	accessible register description181
	0xE002 C048) bit description	Table 149. GPIO overall Interrupt Status register (IOIntStatus
	Pin Mode select register 3 (PINMODE3 - address	- address 0xE002 8080) bit description 182
	0xE002 C04C) bit description168	Table 150. GPIO Interrupt Enable for Rising edge register
Table 125.	Pin Mode select register 4 (PINMODE4 - address	(IO0IntEnR - address 0xE002 8090 and
	0xE002 C050) bit description	IO2IntEnR - address 0xE002 80B0) bit description
Table 126.	Pin Mode select register 5 (PINMODE5 - address	182
	0xE002 C054) bit description	Table 151. GPIO Interrupt Enable for Falling edge register
	Pin Mode select register 6 (PINMODE6 - address	(IO0IntEnF - address 0xE002 8094 and
	0xE002 C058) bit description	IO2IntEnF - address 0xE002 80B4) bit description
	Pin Mode select register 7 (PINMODE7 - address	182
	0xE002 C05C) bit description	Table 152. GPIO Status for Rising edge register (IO0IntStatR
	Pin Mode select register 8 (PINMODE8 - address	- address 0xE002 8084 and IO2IntStatR - address
	0xE002 C060) bit description	0xE002 80A4) bit description
	Pin Mode select register 9 (PINMODE9 - address	Table 153. GPIO Status for Falling edge register (IO0IntStatF
	0xE002 C064) bit description	- address 0xE002 8088 and IO2IntStatF - address
	GPIO pin description	0xE002 80A8) bit description
	. GPIO register map (legacy APB accessible	Table 154. GPIO Status for Falling edge register (IO0IntClr -
	registers)	address 0xE002 808C and IO2IntClr - address
	GPIO register map (local bus accessible registers	0xE002 80AC) bit description
	- enhanced GPIO features)	Table 155. Ethernet acronyms, abbreviations, and
	GPIO interrupt register map	definitions
	0xE002 8008 and IO1DIR - address	Table 157. Ethernet RMII pin descriptions
	0xE002 8018) bit description	Table 158. Ethernet MIIM pin descriptions
	Fast GPIO port Direction register	Table 159. Register definitions
	(FIO[0/1/2/3/4]DIR - address	Table 160. MAC Configuration register 1 (MAC1 - address
	0x3FFF C0[0/2/4/6/8]0) bit description 174	0xFFE0 0000) bit description
	Fast GPIO port Direction control byte and	Table 161. MAC Configuration register 2 (MAC2 - address
	half-word accessible register description 174	0xFFE0 0004) bit description 197
	. GPIO port output Set register (IO0SET - address	Table 162. Pad operation198
	0xE002 8004 and IO1SET - address	Table 163. Back-to-back Inter-packet-gap register (IPGT -
	0xE002 8014) bit description	address 0xFFE0 0008) bit description 198
Table 139.	Fast GPIO port output Set register	Table 164. Non Back-to-back Inter-packet-gap register
	(FIO[0/1/2/3/4]SET - address	(IPGR - address 0xFFE0 000C) bit
	0x3FFF C0[1/3/5/7/9]8) bit description 176	description
Table 140.	Fast GPIO port output Set byte and half-word	Table 165. Collision Window / Retry register (CLRT - address
	accessible register description	0xFFE0 0010) bit description199
	. GPIO port output Clear register (IO0CLR -	Table 166. Maximum Frame register (MAXF - address
	address 0xE002 800C and IO1CLR - address	0xFFE0 0014) bit description199
	0xE002 801C) bit description	Table 167. PHY Support register (SUPP - address
	Fast GPIO port output Clear register	0xFFE0 0018) bit description200
	(FIO[0/1/2/3/4]CLR - address	Table 168. Test register (TEST - address 0xFFE0) bit
	0x3FFF C0[1/3/5/7/9]C) bit description177	description
	Fast GPIO port output Clear byte and half-word	Table 169. MII Mgmt Configuration register (MCFG - address
	accessible register description	0xFFE0 0020) bit description
	. GPIO port Pin value register (IO0PIN - address	Table 170. Clock select encoding
	0xE002 8000 and IO1PIN - address	Table 171. MII Mgmt Command register (MCMD - address
	0xE002 8010) bit description	0xFFE0 0024) bit description
	Fast GPIO port Pin value register	Table 172. MII Mgmt Address register (MADR - address
	(FIO[0/1/2/3/4]PIN - address 0x3FFF C0[1/3/5/7/9]4) bit description	0xFFE0 0028) bit description
	Fast GPIO port Pin value byte and half-word	0xFFE0 002C) bit description202
	accessible register description	Table 174. MII Mgmt Read Data register (MRDD - address
	Fast GPIO port Mask register	0xFFE0 0030) bit description 202
		5 5 5 5 5 5 , 5.1. 3 5 5 5 1 7 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1

Table 175	. MII Mgmt Indicators register (MIND - address	description
	0xFFE0 0034) bit description	Table 199. Hash Filter Table LSBs register (HashFilterL -
Table 176	. Station Address register (SA0 - address	address 0xFFE0 0210) bit description 214
	0xFFE0 0040) bit description	Table 200. Hash Filter MSBs register (HashFilterH - address
Table 177	. Station Address register (SA1 - address	0xFFE0 0214) bit description 214
	0xFFE0 0044) bit description	Table 201. Interrupt Status register (IntStatus - address
Table 178	. Station Address register (SA2 - address	0xFFE0 0FE0) bit description
	0xFFE0 0048) bit description	Table 202. Interrupt Enable register (intEnable - address
Table 179	. Command register (Command - address	0xFFE0 0FE4) bit description
	0xFFE0 0100) bit description	Table 203. Interrupt Clear register (IntClear - address
Table 180	. Status register (Status - address 0xFFE0 0104)	0xFFE0 0FE8) bit description
	bit description	Table 204. Interrupt Set register (IntSet - address
Table 181	. Receive Descriptor Base Address register	0xFFE0 0FEC) bit description 217
	(RxDescriptor - address 0xFFE0 0108) bit	Table 205. Power Down register (PowerDown - address
	description	0xFFE0 0FF4) bit description 217
Table 182	. receive Status Base Address register (RxStatus -	Table 206. Receive Descriptor Fields 219
	address 0xFFE0 010C) bit description 205	Table 207. Receive Descriptor Control Word 219
Table 183	. Receive Number of Descriptors register	Table 208. Receive Status Fields
	(RxDescriptor - address 0xFFE0 0110) bit	Table 209. Receive Status HashCRC Word
	description	Table 210. Receive status information word
Table 184	. Receive Produce Index register	Table 211. Transmit descriptor fields
10010 101	(RxProduceIndex - address 0xFFE0 0114) bit	Table 212. Transmit descriptor control word222
	description	Table 213. Transmit status fields
Table 185	. Receive Consume Index register	Table 214. Transmit status information word
Table 100	(RXConsumeIndex - address 0xFFE0 0118) bit	Table 215. CAN Pin descriptions
	description	Table 216. Memory Map of the CAN Block
186 aldeT	. Transmit Descriptor Base Address register	Table 217. CAN acceptance filter and central CAN
Table 100	(TxDescriptor - address 0xFFE0 011C) bit	registers
	description207	Table 218. CAN1 and CAN2 controller register map 266
Tabla 197		
Table Tor	. Transmit Status Base Address register (TxStatus	Table 219. CAN Wake and Sleep registers 267
Table 100	- address 0xFFE0 0120) bit description 207	Table 220. CAN Wake and Sleep registers
Table Too	. Transmit Number of Descriptors register	Table 221. Mode register (CAN1MOD - address
	(TxDescriptorNumber - address 0xFFE0 0124) bit	0xE004 4000, CAN2MOD - address
Table 100	description	0xE004 8000) bit description
Table 169	. Transmit Produce Index register	Table 222. Command Register (CAN1CMR - address
	(TxProduceIndex - address 0xFFE0 0128) bit	0xE004 4004, CAN2CMR - address
T-1-1- 400	description	0xE004 8004) bit description
Table 190	. Transmit Consume Index register	Table 223. Global Status Register (CAN1GSR - address
	(TxConsumeIndex - address 0xFFE0 012C) bit	0xE004 4008, CAN2GSR - address
T 404	description	0xE004 8008) bit description
Table 191	. Transmit Status Vector 0 register (TSV0 -	Table 224. Interrupt and Capture Register (CAN1ICR -
T 400	address 0xFFE0 0158) bit description 209	address 0xE004 400C, CAN2ICR - address
Table 192	. Transmit Status Vector 1 register (TSV1 - address	0xE004 800C) bit description273
	0xFFE0 015C) bit description	Table 225. Interrupt Enable Register (CAN1IER - address
Table 193	. Receive Status Vector register (RSV - address	0xE004 4010, CAN2IER - address 0xE004 8010)
	0xFFE0 0160) bit description	bit description277
Table 194	. Flow Control Counter register	Table 226. Bus Timing Register (CAN1BTR - address
	(FlowControlCounter - address 0xFFE0 0170) bit	0xE004 4014, CAN2BTR - address 0xE004 8014)
	description212	bit description278
Table 195	. Flow Control Status register (FlowControlStatus -	Table 227. Error Warning Limit register (CAN1EWL -
	address 0xFFE0 8174) bit description 212	address 0xE004 4018, CAN2EWL - address
Table 196	. Receive Filter Control register (RxFilterCtrl -	0xE004 8018) bit description 279
	address 0xFFE0 0200) bit description 212	Table 228. Status Register (CAN1SR - address
Table 197	. Receive Filter WoL Status register	0xE004 401C, CAN2SR - address 0xE004 801C)
	(RxFilterWoLStatus - address 0xFFE0 0204) bit	bit description279
	description	Table 229. Receive Frame Status register (CAN1RFS -
Table 198	. Receive Filter WoL Clear register	address 0xE004 4020, CAN2RFS - address
	(RxFilterWoLClear - address 0xFFE0 0208) bit	0xE004 8020) bit description 281

	0xE004 4024, CAN2RID - address 0xE004 8024)	(FCANICO - address 0xE003 C024) bit
	bit description	description
	RX Identifier register when FF = 1282	Table 256. FullCAN Interrupt and Capture register 1
	Receive Data register A (CAN1RDA - address	(FCANIC1 - address 0xE003 C028) bit
	0xE004 4028, CAN2RDA - address	description
	0xE004 8028) bit description	Table 257. Format of automatically stored Rx messages 301
Table 233.	Receive Data register B (CAN1RDB - address	Table 258. FullCAN semaphore operation 301
	0xE004 402C, CAN2RDB - address	Table 259. Example of Acceptance Filter Tables and ID index
	0xE004 802C) bit description	Values
	Transmit Frame Information Register	Table 260. Used ID-Look-up Table sections 313
	(CAN1TFI[1/2/3] - address 0xE004 40[30/40/50],	Table 261. Used ID-Look-up Table sections 314
	CAN2TFI[1/2/3] - 0xE004 80[30/40/50]) bit	Table 262. USB related acronyms, abbreviations, and
	description	definitions used in this chapter319
Table 235.	Transfer Identifier Register (CAN1TID[1/2/3] -	Table 263. Fixed endpoint configuration 320
	address 0xE004 40[34/44/54], CAN2TID[1/2/3] -	Table 264. USB external interface
	address 0xE004 80[34/44/54]) bit description 285	Table 265. USB device controller clock sources 324
	Transfer Identifier register when FF = 1285	Table 266. USB device register map
	Transmit Data Register A (CAN1TDA[1/2/3] -	Table 267. USB Port Select register (USBPortSel - address
	address 0xE004 40[38/48/58], CAN2TDA[1/2/3] -	0xFFE0 C110) bit description327
	address 0xE004 40[36/46/56], CAN2 1 DA[172/3] address 0xE004 80[38/48/58]) bit description 285	
		Table 268. USBClkCtrl register (USBClkCtrl - address
	Transmit Data Register B (CAN1TDB[1/2/3] -	0xFFE0 CFF4) bit description
	address 0xE004 40[3C/4C/5C], CAN2TDB[1/2/3]	Table 269. USB Clock Status register (USBClkSt - 0xFFE0
	- address 0xE004 80[3C/4C/5C]) bit	CFF8) bit description
	description	Table 270. USB Interrupt Status register (USBIntSt - address
Table 239.	CAN Sleep Clear register (CANSLEEPCLR -	0xE01F C1C0) bit description 328
	address 0x400F C110) bit description 286	Table 271. USB Device Interrupt Status register
Table 240.	CAN Wake-up Flags register (CANWAKEFLAGS	(USBDevIntSt - address 0xFFE0 C200) bit
	- address 0x400F C114) bit description 287	allocation
Table 241.	Central Transit Status Register (CANTxSR -	Table 272. USB Device Interrupt Status register
	address 0xE004 0000) bit description 288	(USBDevIntSt - address 0xFFE0 C200) bit
	Central Receive Status Register (CANRxSR -	description
	address 0xE004 0004) bit description 289	Table 273. USB Device Interrupt Enable register
	Central Miscellaneous Status Register (CANMSR	(USBDevIntEn - address 0xFFE0 C204) bit
	- address 0xE004 0008) bit description 289	allocation
	Acceptance filter modes and access control .290	Table 274. USB Device Interrupt Enable register
	Section configuration register settings291	(USBDevIntEn - address 0xFFE0 C204) bit
	Acceptance Filter Mode Register (AFMR -	description
	address 0xE003 C000) bit description 293	Table 275. USB Device Interrupt Clear register
	Standard Frame Individual Start Address Register	(USBDevIntClr - address 0xFFE0 C208) bit
	(SFF_sa - address 0xE003 C004) bit	allocation
	description	Table 276. USB Device Interrupt Clear register
	Standard Frame Group Start Address Register	(USBDevIntClr - address 0xFFE0 C208) bit
	(SFF_GRP_sa - address 0xE003 C008) bit	description
	description	Table 277. USB Device Interrupt Set register (USBDevIntSet
	Extended Frame Start Address Register (EFF_sa	- address 0xFFE0 C20C) bit allocation 331
	- address 0xE003 C00C) bit description 295	Table 278. USB Device Interrupt Set register (USBDevIntSet
	Extended Frame Group Start Address Register	- address 0xFFE0 C20C) bit description 331
	(EFF_GRP_sa - address 0xE003 C010) bit	Table 279. USB Device Interrupt Priority register
	description	(USBDevIntPri - address 0xFFE0 C22C) bit
	End of AF Tables Register (ENDofTable - address	description
	0xE003 C014) bit description	Table 280. USB Endpoint Interrupt Status register
	·	
	LUT Error Address Register (LUTerrAd - address	(USBEpIntSt - address 0xFFE0 C230) bit
	0xE003 C018) bit description	allocation
	LUT Error Register (LUTerr - address	Table 281. USB Endpoint Interrupt Status register
	0xE003 C01C) bit description297	(USBEpIntSt - address 0xFFE0 C230) bit
	Global FullCAN Enable register (FCANIE -	description
	address 0xE003 C020) bit description 297	Table 282. USB Endpoint Interrupt Enable register

	(USBEpIntEn - address 0xFFE0 C234) bit	address 0xFFE0 C284) bit description 344
	allocation	Table 307. USB EP DMA Enable register (USBEpDMAEn -
Table 283.	. USB Endpoint Interrupt Enable register	address 0xFFE0 C288) bit description 344
	(USBEpIntEn - address 0xFFE0 C234) bit	Table 308. USB EP DMA Disable register (USBEpDMADis -
	description	address 0xFFE0 C28C) bit description 345
Table 284.	. USB Endpoint Interrupt Clear register	Table 309. USB DMA Interrupt Status register
	(USBEpIntClr - address 0xFFE0 C238) bit	(USBDMAIntSt - address 0xFFE0 C290) bit
	allocation	description
Table 285	. USB Endpoint Interrupt Clear register	Table 310. USB DMA Interrupt Enable register
	(USBEpIntClr - address 0xFFE0 C238) bit	(USBDMAIntEn - address 0xFFE0 C294) bit
	description	description
	. USB Endpoint Interrupt Set register	Table 311. USB End of Transfer Interrupt Status register
	(USBEpIntSet - address 0xFFE0 C23C) bit	(USBEoTIntSt - address 0xFFE0 C2A0s) bit
	allocation	description
	. USB Endpoint Interrupt Set register	Table 312. USB End of Transfer Interrupt Clear register
10010 201	(USBEpIntSet - address 0xFFE0 C23C) bit	(USBEoTIntClr - address 0xFFE0 C2A4) bit
	description	description
	. USB Endpoint Interrupt Priority register	Table 313. USB End of Transfer Interrupt Set register
Table 200	(USBEpIntPri - address 0xFFE0 C240) bit	(USBEoTIntSet - address 0xFFE0 C2A8) bit
	allocation	description
Table 200	. USB Endpoint Interrupt Priority register	•
Table 209.		Table 314. USB New DD Request Interrupt Status register
	(USBEpIntPri - address 0xFFE0 C240) bit	(USBNDDRIntSt - address 0xFFE0 C2AC) bit
	description	description
Table 290.	. USB Realize Endpoint register (USBReEp -	Table 315. USB New DD Request Interrupt Clear register
T 004	address 0xFFE0 C244) bit allocation 337	(USBNDDRIntClr - address 0xFFE0 C2B0) bit
Table 291.	. USB Realize Endpoint register (USBReEp -	description
	address 0xFFE0 C244) bit description 337	Table 316. USB New DD Request Interrupt Set register
	. USB Endpoint Index register (USBEpIn - address	(USBNDDRIntSet - address 0xFFE0 C2B4) bit
	0xFFE0 C248) bit description	description
Table 293.	. USB MaxPacketSize register (USBMaxPSize -	Table 317. USB System Error Interrupt Status register
	address 0xFFE0 C24C) bit description 338	(USBSysErrIntSt - address 0xFFE0 C2B8) bit
Table 294.	. USB Receive Data register (USBRxData -	description
	address 0xFFE0 C218) bit description 339	Table 318. USB System Error Interrupt Clear register
Table 295	. USB Receive Packet Length register	(USBSysErrIntClr - address 0xFFE0 C2BC) bit
	(USBRxPlen - address 0xFFE0 C220) bit	description
	description	Table 319. USB System Error Interrupt Set register
Table 296.	. USB Transmit Data register (USBTxData -	(USBSysErrIntSet - address 0xFFE0 C2C0) bit
	address 0xFFE0 C21C) bit description 340	description
Table 297	. USB Transmit Packet Length register	Table 320. SIE command code table
	(USBTxPLen - address 0xFFE0 C224) bit	Table 321. Device Set Address Register bit description . 353
	description	Table 322. Configure Device Register bit description 354
Table 298	. USB Control register (USBCtrl - address 0xFFE0	Table 323. Set Mode Register bit description 354
	C228) bit description	Table 324. Set Device Status Register bit description 355
Table 299	. USB Command Code register (USBCmdCode -	Table 325. Get Error Code Register bit description 357
	address 0xFFE0 C210) bit description 341	Table 326. Read Error Status Register bit description 357
Table 300	. USB Command Data register (USBCmdData -	Table 327. Select Endpoint Register bit description 358
	address 0xFFE0 C214) bit description 342	Table 328. Set Endpoint Status Register bit description . 359
	. USB DMA Request Status register (USBDMARSt	Table 329. Clear Buffer Register bit description 360
Table 30 I	- address 0xFFE0 C250) bit allocation 342	Table 330. DMA descriptor
Tahla 302	. USB DMA Request Status register (USBDMARSt	Table 331. USB (OHCI) related acronyms and abbreviations
Table 302.	- address 0xFFE0 C250) bit description 342	
Tahla 202	, ,	used in this chapter
	. USB DMA Request Clear register (USBDMARCIr	Table 332. USB OTG port pins
	- address 0xFFE0 C254) bit description 343	Table 333. USB Host register address definitions 381
Table 304.	. USB DMA Request Set register (USBDMARSet -	Table 334. USB OTG port 1 pins
T-61- 00-	address 0xFFE0 C258) bit description 343	Table 335. USB OTG and I2C register address
Table 305	. USB UDCA Head register (USBUDCAH -	definitions
T	address 0xFFE0 C280) bit description 344	Table 336. USB Interrupt Status register - (USBIntSt -
rable 306.	. USB EP DMA Status register (USBEpDMASt -	address 0xE01F C1) bit description390

Table 3		OTG Interrupt Status register (OTGIntSt - address 0xE01F C100) bit description 391	0xE007 C014, Read Only) bit description 422 Table 361. UARTn Scratch Pad Register (U0SCR - address
Table 3	338.	OTG Status Control register (OTGStCtrl - address	0xE000 C01C, U2SCR - 0xE007 801C, U3SCR -
Tahle 3		0xFFE0 C110) bit description	0xE007 C01C) bit description
		OTG Timer register (OTGTmr - address	0xE000 C020, U2ACR - 0xE007 8020, U3ACR -
14510		0xFFE0 C114) bit description	0xE007 C020) bit description424
Table 3		OTG_clock_control register (OTG_clock_control	Table 363. IrDA Control Register for UART3 only (U3ICR -
		- address 0xFFE0 CFF4) bit description 393	address 0xE007 C024) bit description 427
Table 3		OTG_clock_status register (OTGClkSt - address	Table 364. IrDA Pulse Width
		0xFFE0 CFF8) bit description394	Table 365. UARTn Fractional Divider Register (U0FDR -
Table 3		I2C Receive register (I2C_RX - address	address 0xE000 C028, U2FDR - 0xE007 8028,
Table 0		0xFFE0 C300) bit description	U3FDR - 0xE007 C028) bit description 428
rable 3		I2C Transmit register (I2C_TX - address	Table 366. Fractional Divider setting look-up table 430
Table 3		0xFFE0 C300) bit description	Table 367. UARTn Transmit Enable Register (U0TER - address 0xE000 C030, U2TER - 0xE007 8030,
Table C		0xFFE0 C304) bit description	U3TER - 0xE007 C030) bit description 431
Table 3		I2C Control register (I2C_CTL - address	Table 368. UART1 Pin Description
14510		0xFFE0 C308) bit description	Table 369. UART1 register map
Table 3		I2C_CLKHI register (I2C_CLKHI - address	Table 370. UART1 Receiver Buffer Register (U1RBR -
		0xFFE0 C30C) bit description	address 0xE001 0000 when DLAB = 0, Read
Table 3		I2C_CLKLO register (I2C_CLKLO - address	Only) bit description
		0xFFE0 C310) bit description	Table 371. UART1 Transmitter Holding Register (U1THR -
Table 3	349.	UART0 Pin description	address 0xE001 0000 when DLAB = 0, Write
		UART Register Map414	Only) bit description
Table 3		UARTn Receiver Buffer Register (U0RBR -	Table 372. UART1 Divisor Latch LSB Register (U1DLL -
		address 0xE000 C000, U2RBR - 0xE007 8000,	address 0xE001 0000 when DLAB = 1) bit
		U3RBR - 0E007 C000 when DLAB = 0, Read	description
-		Only) bit description	Table 373. UART1 Divisor Latch MSB Register (U1DLM -
Table 3		UARTO Transmit Holding Register (U0THR -	address 0xE001 0004 when DLAB = 1) bit
		address 0xE000 C000, U2THR - 0xE007 8000,	description
		U3THR - 0xE007 C000 when DLAB = 0, Write Only) bit description	Table 374. UART1 Interrupt Enable Register (U1IER - address 0xE001 0004 when DLAB = 0) bit
Table 3		UARTn Divisor Latch LSB Register (U0DLL -	description
Table C		address 0xE000 C000, U2DLL - 0xE007 8000,	Table 375. UART1 Interrupt Identification Register (U1IIR -
		U3DLL - 0xE007 C000 when DLAB = 1) bit	address 0xE001 0008, Read Only) bit
		description	description
Table 3		UARTn Divisor Latch MSB Register (U0DLM -	Table 376. UART1 Interrupt Handling
		address 0xE000 C004, U2DLM - 0xE007 8004,	Table 377. UART1 FIFO Control Register (U1FCR - address
		U3DLM - 0xE007 C004 when DLAB = 1) bit	0xE001 0008, Write Only) bit description 443
		description	Table 378. UART1 Line Control Register (U1LCR - address
Table 3	355.	UARTn Interrupt Enable Register (U0IER -	0xE001 000C) bit description443
		address 0xE000 C004, U2IER - 0xE007 8004,	Table 379. UART1 Modem Control Register (U1MCR -
		U3IER - 0xE007 C004 when DLAB = 0) bit	address 0xE001 0010) bit description 444
		description	Table 380. Modem status interrupt generation
Table 3		UARTn Interrupt Identification Register (U0IIR -	Table 381. UART1 Line Status Register (U1LSR - address
		address 0xE000 C008, U2IIR - 0x7008 8008,	0xE001 0014, Read Only) bit description 447
		U3IIR - 0x7008 C008, Read Only) bit description.	Table 382. UART1 Modem Status Register (U1MSR -
Table 3		418 UARTn Interrupt Handling	address 0xE001 0018) bit description 448 Table 383. UART1 Scratch Pad Register (U1SCR - address
		UARTh FIFO Control Register (U0FCR - address	0xE001 0014) bit description
Table C		0xE000 C008, U2FCR - 0xE007 8008, U3FCR -	Table 384. Auto-baud Control Register (U1ACR - address
		0xE007 C008, Write Only) bit description421	0xE001 0020) bit description
Table 3		UARTn Line Control Register (U0LCR - address	Table 385. UART1 Fractional Divider Register (U1FDR -
		0xE000 C00C, U2LCR - 0xE007 800C, U3LCR -	address 0xE001 0028) bit description 453
		0xE007 C00C) bit description421	Table 386. Fractional Divider setting look-up table 455
Table 3		UARTn Line Status Register (U0LSR - address	Table 387. UART1 Transmit Enable Register (U1TER -
		0xE000 C014, U2LSR - 0xE007 8014, U3LSR -	address 0xE001 0030) bit description 456

	. SPI Data To Clock Phase Relationship459		SPI register map
Table 389.	SPI Pin Description	Table 420:	Power Control register (MCIPower - address
Table 390.	. SPI Register Map463		0xE008 C000) bit description
Table 391:	: SPI Control Register (S0SPCR - address	Table 421:	Clock Control register (MCIClock - address
	0xE002 0000) bit description		0xE008 C004) bit description
	: SPI Status Register (S0SPSR - address		: Argument register (MCIArgument - address
	0xE002 0004) bit description		0xE008 C008) bit description
	: SPI Data Register (S0SPDR - address		Command register (MCICommand - address
	0xE002 0008) bit description		0xE008 C00C) bit description 498
	: SPI Clock Counter Register (S0SPCCR - address		Command Response Types
	0xE002 000C) bit description		: Command Response register
	SPI Test Control Register (SPTCR - address		
			(MCIRespCommand - address 0xE008 C010) bit
	0xE002 0010) bit description		description
	: SPI Test Status Register (SPTSR - address		Response registers (MCIResponse0-3 -
	0xE002 0014) bit description		addresses 0xE008 0014, 0xE008 C018,
	SPI Interrupt Register (S0SPINT - address		0xE008 001C and 0xE008 C020) bit
	0xE002 001C) bit description		description
	SSP pin descriptions		Response Register Type 499
	SSP Register Map		Data Timer register (MCIDataTimer - address
	SSPn Control Register 0 (SSP0CR0 - address		0xE008 C024) bit description
	0xE006 8000, SSP1CR0 - 0xE003 0000) bit		Data Length register (MCIDataLength - address
	description		0xE008 C028) bit description499
	SSPn Control Register 1 (SSP0CR1 - address		: Data Control register (MCIDataCtrl - address
	0xE006 8004, SSP1CR1 - 0xE003 0004) bit		0xE008 C02C) bit description500
	description	Table 431:	: Data Block Length500
Table 402:	: SSPn Data Register (SSP0DR - address	Table 432:	: Data Counter register (MCIDataCnt - address
	0xE006 8008, SSP1DR - 0xE003 0008) bit		0xE008 C030) bit description501
	description	Table 433:	: Status register (MCIStatus - address
Table 403:	: SSPn Status Register (SSP0SR - address		0xE008 C034) bit description501
	0xE006 800C, SSP1SR - 0xE003 000C) bit	Table 434:	: Clear register (MCIClear - address 0xE008 C038)
	description		bit description502
Table 404:	SSPn Clock Prescale Register (SSP0CPSR -	Table 435:	Interrupt Mask registers (MCIMask0 - address
	address 0xE006 8010, SSP1CPSR -		0xE008 C03C) bit description502
	0xE003 8010) bit description	Table 436:	: FIFO Counter register (MCIFifoCnt - address
Table 405:	SSPn Interrupt Mask Set/Clear register		0xE008 C048) bit description503
	(SSP0IMSC - address 0xE006 8014, SSP1IMSC	Table 437:	: Data FIFO register (MCIFIFO - address
	- 0xE003 0014) bit description		0xE008 C080 to 0xE008 C0BC) bit
Table 406:	SSPn Raw Interrupt Status register (SSP0RIS -		description
	address 0xE006 8018, SSP1RIS - 0xE003 0018)	Table 438.	. I ² C Pin Description 506
	bit description	Table 439.	. I2CnCONSET used to configure Master
Table 407:	SSPn Masked Interrupt Status register (SSPnMIS		mode
	-address 0xE006 801C, SSP1MIS -	Table 440.	. I2CnCONSET used to configure Slave mode 508
	0xE003 001C) bit description	Table 441.	. I ² C register map513
Table 408:	: SSPn interrupt Clear Register (SSP0ICR -	Table 442.	I ² C Control Set Register (I2C[0/1/2]CONSET -
	address 0xE006 8020, SSP1ICR - 0xE003 0020)		addresses: 0xE001 C000, 0xE005 C000,
	bit description		0xE008 0000) bit description 514
Table 409:	SSPn DMA Control Register (SSP0DMACR -	Table 443.	I ² C Control Set Register (I2C[0/1/2]CONCLR -
	address 0xE006 8024, SSP1DMACR -		addresses 0xE001 C018, 0xE005 C018,
	0xE003 0024) bit description		0xE008 0018) bit description 516
Table 410.	SD/MMC card interface pin description 484	Table 444.	I ² C Status Register (I2C[0/1/2]STAT - addresses
	Command format		0xE001 C004, 0xE005 C004, 0xE008 0004) bit
Table 412.	Simple response format488		description
	Long response format		I ² C Data Register (I2C[0/1/2]DAT - addresses
	. Command path status flags		0xE001 C008, 0xE005 C008, 0xE008 0008) bit
	. CRC token status		description
	Data path status flags493		I ² C Slave Address register (I2C[0/1/2]ADR -
	. Transmit FIFO status flags		addresses 0xE001 C00C, 0xE005 C00C,
	Receive FIFO status flags		0xE008 000C) bit description517
	-		

Table 447. I ² C SCL High Duty Cycle register	0xE007 0014, 0xE007 4014) bit description . 559
(I2C[0/1/2]SCLH - addresses 0xE001 C010,	Table 480: Capture Control Register (T[0/1/2/3]CCR -
0xE005 C010, 0xE008 0010) bit description .517	addresses 0xE000 4028, 0xE000 8020,
Table 448. I ² C SCL Low Duty Cycle register (I2C[0/1/2]SCLL	0xE007 0028, 0xE007 4028) bit description . 560
- addresses 0xE001 C014, 0xE005 C014,	Table 481: External Match Register (T[0/1/2/3]EMR -
0xE008 0014) bit description	addresses 0xE000 403C, 0xE000 803C,
Table 449. Example I ² C Clock Rates	0xE007 003C, 0xE007 403C) bit description . 561
Table 450. Abbreviations used to describe an I ² C	Table 482. External Match Control
operation	Table 483. Set and reset inputs for PWM Flip-Flops 567
Table 451. I2CONSET used to initialize Master Transmitter	Table 484. Pin summary
mode	Table 485: Addresses for PWM1
Table 452. I2C0ADR and I2C1ADR usage in Slave Receiver	Table 486. PWM1 register map
mode520	
Table 453. I2C0CONSET and I2C1CONSET used to	Table 487: PWM Interrupt Register (PWM1IR - address
	0xE001 8000) bit description
initialize Slave Receiver mode	Table 488: PWM Timer Control Register (PWM1TCR
Table 454. Master Transmitter mode	address 0xE001 8004) bit description 571
Table 455. Master Receiver mode	Table 489: PWM Count control Register (PWM1CTCR -
Table 456. Slave Receiver Mode	address 0xE001 8004) bit description 572
Table 457. Tad_105: Slave Transmitter mode530	Table 490: Match Control Register (PWM1MCR - address
Table 458. Miscellaneous states	0xE000 8014) bit description 572
Table 459. Pin descriptions	Table 491: PWM Capture Control Register (PWM1CCR -
Table 460. I2S register map	address 0xE001 8028) bit description 574
Table 461: Digital Audio Output register (I2SDAO - address	Table 492: PWM Control Registers (PWM1PCR - address
0xE008 8000) bit description	0xE001 804C) bit description575
Table 462: Digital Audio Input register (I2SDAI - address	Table 493: PWM Latch Enable Register (PWM1LER -
0xE008 8004) bit description	address 0xE001 8050) bit description 577
Table 463: Transmit FIFO register (I2STXFIFO - address	Table 494. Watchdog register map 579
0xE008 8008) bit description	Table 495. Watchdog operating modes selection 580
Table 464: Receive FIFO register (I2RXFIFO - address	Table 496: Watchdog Mode register (WDMOD - address
0xE008 800C) bit description	0xE000 0000) bit description 580
Table 465: Status Feedback register (I2SSTATE - address	Table 497: Watchdog Constant register (WDTC - address
0xE008 8010) bit description	0xE000 0004) bit description 580
Table 466: DMA Configuration register 1 (I2SDMA1 -	Table 498: Watchdog Feed Register (WDFEED - address
address 0xE008 8014) bit description 548	0xE000 0008) bit description
Table 467: DMA Configuration register 2 (I2SDMA2 -	Table 499: Watchdog Timer Value register (WDTV - address
address 0xE008 8018) bit description 548	0xE000 000C) bit description
Table 468: Interrupt Request Control register (I2SIRQ -	Table 500: Watchdog Timer Clock Source Selection register
address 0xE008 801C) bit description 549	(WDCLKSEL - address 0xE000 0010) bit
Table 469: Transmit Clock Rate register (I2TXRATE -	description
address 0xE008 8020) bit description 549	Table 501. RTC pin description
Table 470: Receive Clock Rate register (I2SRXRATE -	Table 502. Real Time Clock register map 585
address 0xE008 8024) bit description550	Table 503. Interrupt Location Register (ILR - address
Table 471. Conditions for FIFO level comparison 551	0xE002 4000) bit description 586
Table 472. DMA and interrupt request generation 551	Table 504. Clock Tick Counter Register (CTCR - address
Table 473. Status feedback in the I2SSTATE register551	0xE002 4004) bit description 587
Table 474. Timer/Counter pin description	Table 505. Clock Control Register (CCR - address
Table 475. TIMER/COUNTER0-3 register map 555	0xE002 4008) bit description 587
Table 476: Interrupt Register (T[0/1/2/3]IR - addresses	Table 506. Counter Increment Interrupt Register (CIIR -
0xE000 4000, 0xE000 8000, 0xE007 0000,	address 0xE002 400C) bit description 588
0xE007 4000) bit description	Table 507. Counter Increment Select Mask register (CISS -
Table 477: Timer Control Register (TCR, TIMERn: TnTCR -	address 0xE002 4040) bit description 588
addresses 0xE000 4004, 0xE000 8004,	Table 508. Alarm Mask Register (AMR - address
0xE007 0004, 0xE007 4004) bit description557	0xE002 4010) bit description
Table 478: Count Control Register (T[0/1/2/3]CTCR -	Table 509. Consolidated Time register 0 (CTIME0 - address
addresses 0xE000 4070, 0xE000 8070,	0xE002 4014) bit description
0xE007 0070, 0xE007 4070) bit description557	Table 510. Consolidated Time register 1 (CTIME1 - address
Table 479: Match Control Register (T[0/1/2/3]MCR -	0xE002 4018) bit description
addresses 0xE000 4014, 0xE000 8014,	Table 511. Consolidated Time register 2 (CTIME2 - address

	0xE002 401C) bit description	Table 553. IAP Blank check sector(s) command 626
Table 512	Time Counter relationships and values 590	Table 554. IAP Read Part Identification command 626
Table 513	Time Counter registers591	Table 555. IAP Read Boot Code version number
Table 514	. Alarm registers	command626
Table 515	Reference Clock Divider registers 592	Table 556. IAP Compare command 627
Table 516	: Prescaler Integer register (PREINT - address	Table 557. Reinvoke ISP 627
	0xE002 4080) bit description 592	Table 558. IAP Status Codes Summary 627
Table 517	: Prescaler Integer register (PREFRAC - address	Table 559. GPDMA accessible memory 630
	0xE002 4084) bit description	Table 560. Endian behavior
Table 518	. Prescaler cases where the Integer Counter	Table 561. DMA Connections 635
	reload value is incremented 595	Table 562. GPDMA register map
Table 519	. Recommended values for the RTC external	Table 563. Interrupt Status register (DMACIntStatus -
	32 kHz oscillator C _{X1/X2} components 597	address 0xFFE0 4000) bit description 640
Table 520	. A/D pin description	Table 564. Interrupt Terminal Count Status register
	. A/D registers	(DMACIntTCStatus - address 0xFFE0 4004) bit
	: A/D Control Register (AD0CR - address	description
	0xE003 4000) bit description 600	Table 565. Interrupt Terminal Count Clear register
Table 523	: A/D Global Data Register (AD0GDR - address	(DMACIntClear - address 0xFFE0 4008) bit
	0xE003 4004) bit description 602	description
Table 524	: A/D Status Register (AD0STAT - address	Table 566. Interrupt Error Status register
	0xE003 4030) bit description 602	(DMACIntErrorStatus - address 0xFFE0 400C) bit
Table 525	: A/D Interrupt Enable Register (AD0INTEN -	description
	address 0xE003 400C) bit description 603	Table 567. Interrupt Error Clear register (DMACIntErrClr -
Table 526	: A/D Data Registers (AD0DR0 to AD0DR7 -	address 0xFFE0 4010) bit description 641
	addresses 0xE003 4010 to 0xE003 402C) bit	Table 568. Raw Interrupt Terminal Count Status register
	description	(DMACRawIntTCStatus - address 0xFFE0 4014)
Table 527	7. D/A Pin Description	bit description
	: D/A Converter Register (DACR - address	Table 569. Raw Error Interrupt Status register
	0xE006 C000) bit description	(DMACRawIntErrorStatus - address
Table 529	Sectors in a LPC2300 device	0xFFE0 4018) bit description642
	Code Read Protection options613	Table 570. Enabled Channel register (DMACEnbldChns -
	. Code Read Protection hardware/software	address 0xFFE0 401C) bit description 642
	interaction	Table 571. Software Burst Request register
Table 532	. ISP command summary614	(DMACSoftBReq - address 0xFFE0 4020) bit
	S. ISP Unlock command615	description
	. ISP Set Baud Rate command	Table 572. Software Single Request register
	. Correlation between possible ISP baudrates and	(DMACSoftSReq - address 0xFFE0 4024) bit
	CCLK frequency (in MHz)615	description
Table 536	i. ISP Echo command	Table 573. Software Last Burst Request register
	ISP Write to RAM command	(DMACSoftLBReg - address 0xFFE0 4028) bit
	S. ISP Read Memory command617	description
	. ISP Prepare sector(s) for write operation	Table 574. Software Last Single Request register
	command	(DMACSoftLSReg - address 0xFFE0 402C) bit
Table 540	. ISP Copy command618	description
	. ISP Go command	Table 575. Configuration register (DMACConfiguration -
	ISP Erase sector command	address 0xFFE0 4030) bit description 644
	B. ISP Blank check sector command	Table 576. Synchronization register (DMACSync - address
	. ISP Read Part Identification command 619	0xFFE0 4034) bit description 645
	LPC2300 part identification numbers620	Table 577. Channel Source Address registers
	i. ISP Read Boot Code version number	(DMACC0SrcAddr - address 0xFFE0 4100 and
	command	DMACC1SrcAddr - address 0xFFE0 4120) bit
Table 547	ISP Compare command	description
	B. ISP Return Codes Summary	Table 578. Channel Destination Address registers
	I. IAP Command Summary	(DMACCoDestAddr - address 0xFFE0 4104 and
	. IAP Prepare sector(s) for write operation	DMACC1DestAddr - address 0xFFE0 4124) bit
	command	description
Table 551	. IAP Copy RAM to flash command 625	Table 579. Channel Linked List Item registers (DMACC0LLI
	I. IAP Erase Sector(s) command	- address 0xFFE0 4108 and DMACC1LLI -

address 0xFFE0 4128) bit description 647 Table 580. Channel Control registers (DMACC0Control - address 0xFFE0 410C and DMACC1Control -
address 0xFFE0 412C) bit description 647
Table 581. Source or destination burst size 648
Table 582. Source or destination transfer width 648
Table 583. Protection bits
Table 584. Channel Configuration registers
(DMACC0Configuration - address 0xFFE0 4110
and DMACC1Configuration - address
0xFFE0 4130) bit description
Table 585. Flow control and transfer type bits65
Table 586. DMA request signal usage658
Table 587. ETM configuration
Table 588. ETM pin description
Table 589. ETM Registers
Table 590. EmbeddedICE pin description
Table 591. EmbeddedICE logic registers664
Table 592. RealMonitor stack requirement
Table 593. Acronym list

Chapter 34: Supplementary information

34.4 Figures

Fig 1.	LPC2361/62 block diagram	Fig 46.	Entry in FullCAN and individual standard identifier
Fig 2.	LPC2364/65/66/67/68 block diagram	C: 47	tables
Fig 3.	LPC2377/78 block diagram		Entry in standard identifier range table 292
Fig 4.	LPC2387 block diagram		Entry in either extended identifier table 292
Fig 5.	LPC2388 block diagram	Fig 49.	ID Look-up table example explaining the search
Fig 6.	LPC2461/63 memory map	- :	algorithm
Fig 7.	LPC2364/65/66/67/68 system memory map 18	Fig 50.	Semaphore procedure for reading an auto-stored
Fig 8.	LPC2377/78 system memory map		message
Fig 9.	LPC2387 memory map20	Fig 51.	FullCAN section example of the ID look-up
Fig 10.	LPC2388 memory map21		table
Fig 11.	Peripheral memory map		FullCAN message object layout
	AHB peripheral map23	-	Normal case, no messages lost 306
Fig 13.	Map of lower memory is showing re-mapped and		Message lost
	re-mappable areas28		Message gets overwritten
Fig 14.	Reset block diagram including the wakeup timer.32	Fig 56.	Message overwritten indicated by semaphore bits
Fig 15.	Example of start-up after reset		and message lost
	Clock generation for the LPC230045		Message overwritten indicated by message lost309
Fig 17.	Oscillator modes and models: a) slave mode of	Fig 58.	Clearing message lost310
	operation, b) oscillation mode of operation, c)	Fig 59.	Detailed example of acceptance filter tables and ID
	external crystal model used for C _{X1} / _{X2} evaluation47		index values
Fig 18.	PLL block diagram (N = 16, M = 125, USBSEL = 6,	Fig 60.	ID Look-up table configuration example (no
	CCLKSEL = 4)		FullCAN)
Fig 19.	PLL and clock dividers60	Fig 61.	ID Look-up table configuration example (FullCAN
Fig 20.	EMC block diagram		activated and enabled)
Fig 21.	8-bit bank external memory interface 84	Fig 62.	USB device controller block diagram321
Fig 22.	Block diagram of the Vectored Interrupt	Fig 63.	USB MaxPacketSize register array indexing 338
	Controller	Fig 64.	Interrupt event handling
Fig 23.	Simplified block diagram of the Memory Accelerator	Fig 65.	UDCA Head register and DMA Descriptors 364
	Module		Isochronous OUT endpoint operation example. 372
Fig 24.	Block diagram of the Memory Accelerator		Data transfer in ATLE mode
	Module	Fig 68.	USB Host controller block diagram 379
Fig 25.	LPC2361/62 pinning	Fig 69.	USB OTG controller block diagram384
	LPC2364/65/66/67/68 LQFP100 packages 113	Fig 70.	USB OTG port configuration: port U1 OTG
Fig 27.	LPC2364/65/66/67/68 pinning TFBGA100		Dual-Role device, port U2 host
	package	Fig 71.	USB OTG port configuration: VP_VM mode387
Fig 28.	LPC2378 144-pin package		USB OTG port configuration: port U2 host, port U1
Fig 29.	LPC2387 pinning LQFP100 package 134		host
Fig 30.	LPC2388 pinning LQFP144 package 142	Fig 73.	USB OTG port configuration: port U1 host, port U2
Fig 31.	Ethernet block diagram		device
Fig 32.	Ethernet packet fields	Fig 74.	Port selection for PORT_FUNC bit 0 = 0 and
Fig 33.	Receive descriptor memory layout		PORT_FUNC bit 1 = 0
	Transmit descriptor memory layout	Fig 75.	USB OTG interrupt handling 399
	Transmit example memory and registers 233	Fig 76.	USB OTG controller with software stack401
	Receive Example Memory and Registers 239		Hardware support for B-device switching from
	Transmit Flow Control	Ü	peripheral state to host state
	Receive filter block diagram246	Fig 78.	State transitions implemented in software during
	Receive Active/Inactive state machine	Ū	B-device switching from peripheral to host 403
Fig 40.	Transmit Active/Inactive state machine	Fig 79.	Hardware support for A-device switching from host
Fig 41.	CAN controller block diagram	Ū	state to peripheral state
	Transmit buffer layout for standard and extended	Fig 80.	State transitions implemented in software during
Ü	frame format configurations	Ü	A-device switching from host to peripheral 406
Fig 43.	Receive buffer layout for standard and extended	Fig 81.	Clocking and power control409
5	frame format configurations		Autobaud a) mode 0 and b) mode 1 waveform 426
Fig 44.	Global Self-Test (high-speed CAN Bus		Algorithm for setting UART dividers 429
9	example)		LPC2300 UART0, 2 and 3 block diagram 432
Fig 45.	Local Self-Test (high-speed CAN Bus example) 265		Auto-RTS functional timing 445
•	, , , , , , , , , , , , , , , , , , , ,	J	U

Fig Fig	87.	Auto-CTS functional timing	452
Fig	88.	Algorithm for setting UART dividers	454
Fig		LPC2300 UART1 block diagram	
	90.	SPI data transfer format (CPHA = 0 and	401
rig	90.		450
		CPHA = 1)	
_	91.	SPI block diagram	467
Fig	92.	Texas Instruments Synchronous Serial Frame	
		Format: a) Single and b) Continuous/back-to-ba	ack
		Two Frames Transfer	470
Fia	93.	SPI Frame Format with CPOL=0 and CPHA=0	
9		Single and b) Continuous Transfer)	
Eia	94.	SPI Frame Format with CPOL=0 and CPHA=1.	
_			
rig	95.	SPI Frame Format with CPOL = 1 and CPHA = (
		Single and b) Continuous Transfer)	4/3
Fig	96.	SPI Frame Format with CPOL = 1 and	
		CPHA = 1	474
Fig	97.	Microwire Frame Format (Single Transfer)	475
Fia	98.	Microwire Frame Format (Continuous	
J		Transfers)	476
Fia	aa	Microwire frame format setup and hold details .	
		Multimedia card system	
		Secure digital memory card connection	
		MCI adapter	
		Command path state machine	
		MCI command transfer	
Fig	105.	Data path state machine	490
Fig	106.	Pending command start	492
Fig	107.	I ² C bus configuration	505
		Format in the Master Transmitter mode	
		Format of Master Receive mode	
		A master receiver switch to master Transmitter a	
' '9	110.	sending repeated START	
Eia	111	Format of Slave Receiver mode	
		Format of Slave Receiver mode	
		I ² C Bus serial interface block diagram	
		Arbitration procedure	
		Serial clock synchronization	512
Fig	116.	Format and States in the Master Transmitter	
		mode	.522
Fig	117.	Format and States in the Master Receiver	
		mode	523
Fig	118.	Format and States in the Slave Receiver mode	
		Format and States in the Slave Transmitter	
9		mode	525
Fia	120	Simultaneous repeated START conditions from	
ııy	120.	•	
	404	masters	
		Forced access to a busy I ² C bus	
Fig	122.	Recovering from a bus obstruction caused by a	
		level on SDA	
		Simple I2S configurations and bus timing	
Fig	124.	FIFO contents for various I ² S modes	552
Fig	125.	A timer cycle in which PR=2, MRx=6, and both	
J		interrupt and reset on match are enabled	562
Fia	126	A Timer Cycle in Which PR=2, MRx=6, and Box	
9	0.	Interrupt and Stop on Match are Enabled	
Fia	127	Timer block diagram	
		PWM block diagram	
ııy	120.	I WIN DIOUR GIAGIAIII	.000

Fig 129. Sample PWM waveforms 567
Fig 130. Watchdog block diagram 582
Fig 131. RTC block diagram
Fig 132. RTC prescaler block diagram 594
Fig 133. RTC 32 kHz crystal oscillator circuit 596
Fig 134. Map of lower memory after reset 608
Fig 135. Boot process flowchart 611
Fig 136. IAP parameter passing 624
Fig 137. GPDMA Block Diagram
Fig 138. GPDMA in the LPC23XX632
Fig 139. LLI example
Fig 140. ETM debug environment block diagram 661
Fig 141. EmbeddedICE debug environment block
diagram
Fig 142. RealMonitor Components 667
Fig 143. RealMonitor as a State Machine 668
Fig 144. Exception Handlers 671

Chapter 34: Supplementary information

34.5 Contents

Chapt	er 1: LPC23xx Introductory information	on			
1.1	Introduction	. 3	1.4	Applications	6
1.2	How to read this manual			Ordering information and options	
1.3	Features			Architectural overview	
1.3.1	General features			ARM7TDMI-S processor	
1.3.2	Features available on LPC2361/62			On-chip flash memory system	
1.3.3	Features available in LPC2377/78 and			On-chip Static RAM	
	LPC2388	. 5		- · · · · · · · · · · · · · · · · · · ·	
1.3.4	Features available in LPC2387 and LPC2388		1.10	Block diagram	11
1.3.5	Overview	. 5			
Chapt	er 2: LPC23XX Memory addressing				
2.1	Memory map and peripheral addressing	16	2.5	Memory mapping control	
2.2	Memory maps	16	2.5.1	Memory Mapping Control Register (MEMMAP	
2.3	APB peripheral addresses	24	0 = 0	0xE01F C040)	
2.4	LPC2300 memory re-mapping and boot ROM	25	2.5.2	Memory mapping control usage notes	
2.4.1	Memory map concepts and operating modes.	25	2.6	Prefetch abort and data abort exceptions	29
2.4.2	Memory re-mapping	26			
Chapt	er 3: LPC23XX System control block				
3.1	Introduction	30	3.6.4	External Interrupt Polarity register (EXTPOLAR	· -
3.2	Pin description			0xE01F C14C)	
3.3	Register description		3.7	Other system controls and status flags	
3.4	Reset		3.7.1	AHB Configuration	
3.4.1	Reset Source Identification Register (RSIR -	31	3.7.1.1	AHB Arbiter Configuration register 1 (AHBCFG	
3.4.1	0xE01F C180)	33		0xE01F C188)	
3.5	Brown-out detection		3.7.1.1.1		
	External interrupt inputs		3.7.1.2	AHB Arbiter Configuration register 2 (AHBCFG2	
3.6 3.6.1	Register description		07404	0xE01F C18C)	
3.6.2	External Interrupt flag register (EXTINT -	33	3.7.1.2.1		41
0.0.2	0xE01F C140)	35	3.7.2	System Controls and Status register (SCS - 0xE01F C1A0)	12
3.6.3	External Interrupt Mode register (EXTMODE -		3.8	Code security vs. debugging	
	0xE01F C148)		3.0	Code security vs. debugging	43
Chapt	er 4: LPC23XX Clocking and power c	ontrol			
4.1	How to read this chapter		4.6.2	PLL and startup/boot code interaction	
4.2	Introduction		4.6.3	Register description	50
4.3	Register description	46	4.6.4	PLL Control register (PLLCON - 0xE01F C080)	5 1
4.4	Oscillators	46	4.6.5	PLL Configuration register (PLLCFG -	51
4.4.1	Internal RC oscillator	46	4.0.0	0xE01F C084)	52
4.4.2	Main oscillator		4.6.6	PLL Status register (PLLSTAT -	
4.4.2.1	XTAL1 input			0xE01F C088)	54
4.4.2.2	Printed Circuit Board (PCB) layout guidelines		4.6.7	PLL Interrupt: PLOCK	
4.4.3	RTC oscillator		4.6.8	PLL Modes	55
4.5	Clock source selection multiplexer	49	4.6.9	PLL Feed register (PLLFEED - 0xE01F C08C)	
4.5.1	Clock Source Select register (CLKSRCSEL -	40	4.6.10	PLL and Power-down mode	
4.0	0xE01F C10C)		4.6.11	PLL frequency calculation	
4.6	PLL (Phase Locked Loop)		4.6.12	Procedure for determining PLL settings	
4.6.1	PLL operation	50	4.6.13 4.6.14	Examples of PLL settings	
			4.0.14	PLL setup sequence	J

4.7	Clock dividers	60	4.8.4	Deep power-down mode 6	34
4.7.1	CPU Clock Configuration register (CCLKCFG	-	4.8.5	Peripheral power control 6	
	0xE01F C104)		4.8.6	Register description 6	35
4.7.2	USB Clock Configuration register (USBCLKCF	G -	4.8.7	Power Mode Control register (PCON -	
	0xE01F C108)	61		0xE01F C0C0)6	35
4.7.3	IRC Trim Register (IRCTRIM - 0xE01F C1A4)	61		Encoding of reduced power modes 6	36
4.7.4	Peripheral Clock Selection registers 0 and 1		4.8.8	Interrupt Wakeup Register (INTWAKE -	
	(PCLKSEL0 - 0xE01F C1A8 and PCLKSEL1 -			0xE01F C144) 6	
	0xE01F C1AC)	62	4.8.9	Power Control for Peripherals register (PCONP	
4.8	Power control	63		0xE01F C0C4) 6	
4.8.1	Idle mode		4.8.10	Power control usage notes 6	
4.8.2	Sleep mode		4.8.11	Power domains	
4.8.3	Power-down mode		4.9 V	Vakeup timer 7	70
Chant	or F. I DC22VV External Mamory Cont	rallar	(EMC)		
Chapt	er 5: LPC23XX External Memory Cont	roner	(EIVIC)		
5.1	How to read this chapter	71	5.11.2	EMC Status Register (EMCStatus -	
5.2	Basic configuration	71		0xFFE0 8004)	7
5.3	Introduction		5.11.3	EMC Configuration Register (EMCConfig -	
5.4	Features			0xFFE0 8008)	7
			5.11.4	Static Memory Extended Wait Register	
5.5	Functional overview			(EMCStaticExtendedWait - 0xFFE0 8080) 7	7 8
5.6	EMC functional description		5.11.5	Static Memory Configuration Registers	
5.7	AHB Slave register interface			(EMCStaticConfig0-1 - 0xFFE0 8200, 220) 7	7 9
5.7.1	AHB Slave memory interface		5.11.6	Static Memory Write Enable Delay Registers	
5.7.1.1	Memory transaction endianness		F 44 7	(EMCStaticWaitWen0-1 - 0xFFE0 8204, 224) 8	30
5.7.1.2	Memory transaction size		5.11.7	Static Memory Output Enable Delay Registers	
5.7.1.3	Write protected memory areas		T 44 0	, ,	30
5.7.2	Data buffers		5.11.8	Static Memory Read Delay Registers	0.4
5.7.2.1	Write buffers		E 11 0	(EMCStaticWaitRd0-1 - 0xFFE0 820C, 22C). 8	
5.7.2.2	Read buffers		5.11.9	Static Memory Page Mode Read Delay Register	
5.7.3	Memory controller state machine		E 11 10	(EMCStaticwaitPage0-1 - 0xFFE0 8210, 230) 8 Static Memory Write Delay Registers)
5.7.4	Pad interface		5.11.10	(EMCStaticWaitwr0-1 - 0xFFE0 8214, 234) 8	วา
5.8	Memory bank select		5.11.11	Static Memory Extended Wait Register)_
5.9	Reset	75	5.11.11	(EMCStaticExtendedWait - 0xFFE0 8080) 8	א2
5.10	Pin description	75	5.11.12	Static Memory Turn Round Delay Registers	,_
5.11	Register description	75	0.11.12	(EMCStaticWaitTurn0-1 - 0xFFE0 8218, 238, 258	8.
5.11.1	EMC Control Register (EMCControl -			278)	
	0xFFE0 8000)	76	5.12 E	external memory interface	
Ch and	or C. I DC22VV Vectored Intervient Co.	.4			
Chapt	er 6: LPC23XX Vectored Interrupt Cor	itrone	r (VIC)		
6.1	How to read this chapter	85	6.5.6	Interrupt Select Register (VICIntSelect -	
6.2	Features	85		0xFFFF F00C)	39
6.3	Description	85	6.5.7	IRQ Status Register (VICIRQStatus -	
6.4	Register description			0xFFFF F000)) 0
	VIC registers		6.5.8	FIQ Status Register (VICFIQStatus -	
6.5		00		0xFFFF F004)	
6.5.1	Software Interrupt Register (VICSoftInt -	00	6.5.9	Vector Address Registers 0-31 (VICVectAddr0-3	
6.5.2	0xFFFF F018)Software Interrupt Clear Register	00	0.5.40	- 0xFFFF F100 to 17C)	ا0ر
0.5.∠	(VICSoftIntClear - 0xFFFF F01C)	88	6.5.10	Vector Priority Registers 0-31	٠,
6.5.3	Raw Interrupt Status Register (VICRawIntr -	50	C E 11	(VICVectPriority0-31 - 0xFFFF F200 to 27C). 9	11
0.0.0	0xFFFF F008)	89	6.5.11	Vector Address Register (VICAddress -	١,4
6.5.4	Interrupt Enable Register (VICIntEnable -	50	6.5.12	0xFFFF FF00)	<i>1</i> l
J.J. 7	0xFFFF F010)	89	0.0.12	Software Priority Mask Register (VICSWPriorityMask - 0xFFFF F024) 9	14
6.5.5	Interrupt Enable Clear Register (VICIntEnClea		6.5.13	Protection Enable Register (VICProtection -	<i>,</i> 1
	0xFFFF F014)		0.0.13	0xFFFF F020) 9	1
				OALLII 1020j	<i>,</i> I

6.6	Interrupt sources 92		
Chapt	er 7: LPC23XX Memory Acceleration Mod	ule (MAI	M)
7.1	Introduction 96	7.5	MAM configuration 99
7.2	Operation	7.6	Register description 99
7.3	Memory Acceleration Module blocks 97	7.7	MAM Control Register (MAMCR - 0xE01F
7.3.1	Flash memory bank		C000) 100
7.3.1 7.3.2	Instruction latches and data latches 98	7.8	MAM Timing Register (MAMTIM - 0xE01F
7.3.3	Flash programming Issues	7.0	C004) 100
7.4	Memory Accelerator Module Operating	7.0	
7.4	modes 98	7.9	MAM usage notes
O l 1			
Cnapt	er 8: LPC23XX Pin configuration		
8.1	Overview	8.4	LPC2377/78 144-pin package 124
8.2	LPC2361/62 100-pin packages 104	8.5	LPC2387 100-pin package 134
8.3	LPC2364/65/66/67/68 100-pin packages 113	8.6	LPC2388 144-pin package 142
Chapt	er 9: LPC23XX Pin connect block		
9.1	How to read this chapter	9.5.8.1	100-pin packages
9.2	Description	9.5.8.2	144-pin packages
9.3	Pin function select register values 154	9.5.9	Pin Function Select Register 8 (PINSEL8 -
	_		0xE002 C020)
9.4	Pin mode select register values	9.5.9.1	100-pin packages
9.5	Register description 155	9.5.9.2	144-pin packages
	Pin control module register reset values 156	9.5.10	Pin Function Select Register 9 (PINSEL9 -
9.5.1	Pin Function Select register 0 (PINSEL0 -		0xE002 C024)
	0xE002 C000)	9.5.10.1	100-pin packages 165
9.5.1.1	100-pin packages	9.5.10.2	
9.5.1.2	144-pin packages	9.5.11	Pin Function Select Register 10 (PINSEL10 -
9.5.2	Pin Function Select Register 1 (PINSEL1 -		0xE002 C028)
0 5 0 4	0xE002 C004)	9.5.12	Pin Mode select register 0 (PINMODE0 -
9.5.2.1	100-pin packages		0xE002 C040)
9.5.2.2	144-pin packages	9.5.13	Pin Mode select register 1 (PINMODE1 -
9.5.3	Pin Function Select register 2 (PINSEL2 -		0xE002 C044)
	0xE002 C008)	9.5.14	Pin Mode select register 2 (PINMODE2 -
9.5.3.1	100-pin packages and 144-pin packages 159		0xE002 C048)
9.5.4	Pin Function Select Register 3 (PINSEL3 -	9.5.15	Pin Mode select register 3 (PINMODE3 -
	0xE002 C00C)		0xE002 C04C)
9.5.4.1	100-pin packages	9.5.16	Pin Mode select register 4 (PINMODE4 -
9.5.4.2	144-pin packages		0xE002 C050)
9.5.5	Pin Function Select Register 4 (PINSEL4 -	9.5.17	Pin Mode select register 5 (PINMODE5 -
	0xE002 C010)		0xE002 C054)
9.5.5.1	100-pin packages	9.5.18	Pin Mode select register 6 (PINMODE6 -
9.5.5.2	144-pin packages		0xE002 C058)
9.5.6	Pin Function Select Register 5 (PINSEL5 -	9.5.19	Pin Mode select register 7 (PINMODE7 -
0 5 7	0xE002 C014)		0xE002 C05C)
9.5.7	Pin Function Select Register 6 (PINSEL6 -	9.5.20	Pin Mode select register 8 (PINMODE8 -
0 5 7 1	0xE002 C018)		0xE002 C060)
9.5.7.1	100-pin packages	9.5.21	Pin Mode select register 9 (PINMODE9 -
9.5.7.2	144-pin packages		0xE002 C064)
9.5.8	Pin Function Select Register 7 (PINSEL7 -		
	0xE002 C01C)		
Chapt	er 10: LPC23XX General Purpose Input/O	utput po	orts (GPIO)
10.1	Basic configuration 170	10.2	Features

10.2.1 10.2.2	Digital I/O ports	10.5.6.2	GPIO Interrupt Enable for Rising edge register (IO0IntEnR - 0xE002 8090 and IO2IntEnR -
			0xE002 80B0)
10.3	Applications	10.5.6.3	GPIO Interrupt Enable for Falling edge register
10.4	Pin description	10.0.0.0	(IO0IntEnF - 0xE002 8094 and IO2IntEnF -
10.5	Register description		0xE002 80B4)
10.5.1	GPIO port Direction register IODIR and	10.5.6.4	GPIO Interrupt Status for Rising edge register
	FIODIR(IO[0/1]DIR - 0xE002 80[0/1]8 and		(IO0IntStatR - 0xE002 8084 and IO2IntStatR -
40 5 0	FIO[0/1/2/3/4]DIR - 0x3FFF C0[0/2/4/6/8]0). 173		0xE002 80A4)
10.5.2	GPIO port output Set register IOSET and	10.5.6.5	GPIO Interrupt Status for Falling edge register
	FIOSET(IO[0/1]SET - 0xE002 80[0/1]4 and		(IO0IntStatF - 0xE002 8088 and IO2IntStatF -
40.50	FIO[0/1/2/3/4]SET - 0x3FFF C0[1/3/5/7/9]8) 175		0xE002 80A8)
10.5.3	GPIO port output Clear register IOCLR and	10.5.6.6	GPIO Interrupt Clear register (IO0IntClr -
	FIOCLR (IO[0/1]CLR - 0xE002 80[0/1]C and		0xE002 808C and IO2IntClr - 0xE002 80AC) 183
10 E 1	FIO[0/1/2/3/4]CLR - 0x3FFF C0[1/3/5/7/9]C) 177	10.6	GPIO usage notes
10.5.4	GPIO port Pin value register IOPIN and FIOPIN	10.6.1	Example 1: sequential accesses to IOSET and
	(IO[0/1]PIN - 0xE002 80[0/1]0 and		IOCLR affecting the same GPIO pin/bit 184
10 E E	FIO[0/1/2/3/4]PIN - 0x3FFF C0[1/3/5/7/9]4) . 178	10.6.2	Example 2: an instantaneous output of 0s and 1s
10.5.5	Fast GPIO port Mask register FIOMASK(FIO[0/1/2/3/4]MASK -		on a GPIO port
	0x3FFF C0[1/3/5/7/9]0)	10.6.3	Writing to IOSET/IOCLR vs. IOPIN 185
10.5.6	GPIO interrupt registers	10.6.4	Output signal frequency considerations when
10.5.6.1 10.5.6.1	. •		using the legacy and enhanced GPIO registers .
10.5.0.1	- 0xE002 8080)		185
	0x2002 0000j		
Chapt	er 11: LPC23XX Ethernet		
11.1	How to read this chapter 186	11.12.9	MII Mgmt Configuration Register (MCFG -
11.2	Basic configuration		0xFFE0 0020) 200
11.3	Introduction	11.12.10	MII Mgmt Command Register (MCMD -
			0xFFE0 0024)
11.4	Features	11.12.11	MII Mgmt Address Register (MADR -
11.5	Architecture and operation 188		0xFFE0 0028)
11.6	DMA engine functions	11.12.12	MII Mgmt Write Data Register (MWTD -
11.7	Overview of DMA operation	11 12 13	0xFFE0 002C)
11.8	Ethernet Packet	11.12.13	0xFFE0 0030)
11.9	Overview	11.12.14	MII Mgmt Indicators Register (MIND -
11.9.1	Partitioning		0xFFE0 0034)
11.9.2	Example PHY Devices	11.12.15	Station Address 0 Register (SA0 - 0xFFE0
11.10	Pin description		0040)
11.11	Registers and software interface 193	11.12.16	Station Address 1 Register (SA1 - 0xFFE0
11.11.1	Register map		0044)
11.12	Ethernet MAC register definitions 196	11.12.17	Station Address 2 Register (SA2 - 0xFFE0
11.12.1	MAC Configuration Register 1 (MAC1 -		0048)
	0xFFE0 0000)	11.13	Control register definitions 204
11.12.2	MAC Configuration Register 2 (MAC2 -	11.13.1	Command Register (Command - 0xFFE0
	0xFFE0 0004)197		0100)
11.12.3	Back-to-Back Inter-Packet-Gap Register (IPGT -	11.13.2	Status Register (Status - 0xFFE0 0104) 204
	0xFFE0 0008) 198	11.13.3	Receive Descriptor Base Address Register
11.12.4	Non Back-to-Back Inter-Packet-Gap Register		(RxDescriptor - 0xFFE0 0108)
	(IPGR - 0xFFE0 000C)	11.13.4	Receive Status Base Address Register (RxStatus
11.12.5	Collision Window / Retry Register (CLRT -		- 0xFFE0 010C)
44 45 5	0xFFE0 0010)	11.13.5	Receive Number of Descriptors Register
11.12.6	Maximum Frame Register (MAXF - 0xFFE0	44.40.0	(RxDescriptor - 0xFFE0 0110) 206
44 40 7	0014)	11.13.6	Receive Produce Index Register
11.12.7	PHY Support Register (SUPP - 0xFFE0	11 10 7	(RxProduceIndex - 0xFFE0 0114) 206
11.12.8	0018)	11.13.7	Receive Consume Index Register (RxConsumeIndex - 0xFFE0 0118) 206
11.12.0	TEST NEGISTER (TEST - DAFFED DUTO) 200		(INACCIONINGINAEA - CALTECTOTTO) 200

11.13.8	Transmit Descriptor Base Address Register		11.15.3	Interrupt Clear Register (IntClear - 0xFFE0	
	(TxDescriptor - 0xFFE0 011C) 2			0FE8)	216
11.13.9	Transmit Status Base Address Register (TxStat		11.15.4	Interrupt Set Register (IntSet - 0xFFE0	
	- 0xFFE0 0120)			0FEC)	217
11.13.10			11.15.5	Power Down Register (PowerDown -	
	(TxDescriptorNumber - 0xFFE0 0124) 2	208		0xFFE0 0FF4)	217
11.13.11	Transmit Produce Index Register		11.16 I	Descriptor and status formats	218
	(TxProduceIndex - 0xFFE0 0128) 2	208	11.16.1	Receive descriptors and statuses	
11.13.12	2 Transmit Consume Index Register		11.16.2	Transmit descriptors and statuses	
	(TxConsumeIndex - 0xFFE0 012C) 2	MΩ		Ethernet block functional description	
11.13.13	3 Transmit Status Vector 0 Register (TSV0 -		11.17.1	Overview	
	0xFFE0 0158)	(19	11.17.1		
11.13.14	1 Transmit Status Vector 1 Register (TSV1 -			AHB interface	
	0xFFE0 015C) 2	. 10		Interrupts	
11.13.15	5 Receive Status Vector Register (RSV -		11.18.1	Direct Memory Access (DMA)	
	0xFFE0 0160)	10	11.18.2	Initialization	
11.13.16	Flow Control Counter Register		11.18.3	Transmit process	
	(FlowControlCounter - 0xFFE0 0170) 2	211	11.18.4	Receive process	235
11.13.17	Flow Control Status Register (FlowControlStatu		11.18.5	Transmission retry	241
	0xFFE0 0174)	12	11.18.6	Status hash CRC calculations	241
11.14	Receive filter register definitions 2		11.18.7	Duplex modes	242
11.14.1	Receive Filter Control Register (RxFilterCtrl -		11.18.8	IEE 802.3/Clause 31 flow control	242
11.17.1	0xFFE0 0200)	12	11.18.9	Half-Duplex mode backpressure	244
11.14.2	Receive Filter WoL Status Register	.12	11.18.10	Receive filtering	245
11.14.2	(RxFilterWoLStatus - 0xFFE0 0204) 2	12	11.18.11	Power management	247
11.14.3		.13	11.18.12	Wake-up on LAN	247
11.14.5	Receive Filter WoL Clear Register (RxFilterWoLClear - 0xFFE0 0208) 2	12	11.18.13	Enabling and disabling receive and transmit	249
11.14.4	Hash Filter Table LSBs Register (HashFilterL -	.13	11.18.14	Transmission padding and CRC	251
11.14.4	- · · · · · · · · · · · · · · · · · · ·	11	11.18.15	Huge frames and frame length checking	252
11 11 5	0xFFE0 0210)		11.18.16	Statistics counters	252
11.14.5	Hash Filter Table MSBs Register (HashFilterH		11.18.17	MAC status vectors	252
	0xFFE0 0214)		11.18.18	Reset	253
11.15	Module control register definitions 2	15	11.18.19	Ethernet errors	254
11.15.1	Interrupt Status Register (IntStatus -		11.19	AHB bandwidth	254
	0xFFE0 0FE0)	'15	11.19.1	DMA access	
11.15.2	Interrupt Enable Register (IntEnable -		11.19.2	Types of CPU access	
	0xFFE0 0FE4) 2	'15	11.19.3	Overall bandwidth	
				CRC calculation	
			11.20	CRC Calculation	230
Chapt	er 12: LPC23XX CAN controllers CAN	1/2			
12.1	How to read this chapter 2	:59	12.6.8	CAN controller self-tests	264
12.2	Basic configuration			Global self test	. 264
12.3	Introduction			Local self test	. 264
			12.7 I	Memory map of the CAN block	265
12.4	Features	.00		CAN controller registers	
12.4.1	General CAN features	.00		Mode Register (CAN1MOD - 0xE004 4000,	203
12.4.2	CAN controller features		12.8.1	• •	267
12.4.3	Acceptance filter features 2		40.00	CAN2MOD - 0xE004 8000)	
12.5	Pin description 2	261	12.8.2	Command Register (CAN1CMR - 0xE004 x0	
12.6	CAN controller architecture 2	61	1202	CAN2CMR - 0xE004 8004)	209
12.6.1	APB interface block (AIB) 2		12.8.3	Global Status Register (CAN1GSR -	270
12.6.2		62		0xE004 x008, CAN2GSR - 0xE004 8008)	
12.6.3		262		RX error counter	
12.6.4	Receive Buffer (RXB)	62	1201	TX error counter	. 212
12.6.5	Error Management Logic (EML) 2		12.8.4	Interrupt and Capture Register (CAN1ICR -	272
12.6.6	Bit Timing Logic (BTL) 2	63	1205	0xE004 400C, CAN2ICR - 0xE004 800C)	273
12.6.7	Bit Stream Processor (BSP)		12.8.5	Interrupt Enable Register (CAN1IER -	270
	\ - /			0xE004 4010, CAN2IER - 0xE004 8010)	276

Chapter 34: Supplementary information

12.8.6	Bus Timing Register (CAN1BTR - 0xE004 40 CAN2BTR - 0xE004 8014)		12.15.1	Acceptance Filter Mode Register (AFMR - 0xE003 C000)
	Baud rate prescaler		12.15.2	Section configuration registers 294
	Synchronization jump width		12.15.3	Standard Frame Individual Start Address Register
	Time segment 1 and time segment 2		12.10.0	(SFF_sa - 0xE003 C004)
12.8.7	Error Warning Limit Register (CAN1EWL -	0	12.15.4	Standard Frame Group Start Address Register
	0xE004 4018, CAN2EWL - 0xE004 8018)	279		(SFF_GRP_sa - 0xE003 C008)
12.8.8	Status Register (CAN1SR - 0xE004 401C,		12.15.5	Extended Frame Start Address Register (EFF_sa
	CAN2SR - 0xE004 801C)	279		- 0xE003 C00C)
12.8.9	Receive Frame Status Register (CAN1RFS -		12.15.6	Extended Frame Group Start Address Register
	0xE004 4020, CAN2RFS - 0xE004 8020)	281		(EFF_GRP_sa - 0xE003 C010) 296
12.8.9.1	ID index field	282	12.15.7	End of AF Tables Register (ENDofTable -
12.8.10	Receive Identifier Register (CAN1RID -			0xE003 C014)
	0xE004 4024, CAN2RID - 0xE004 8024)	282	12.15.8	Status registers
12.8.11	Receive Data Register A (CAN1RDA -		12.15.9	LUT Error Address Register (LUTerrAd -
	0xE004 4028, CAN2RDA - 0xE004 8028)			0xE003 C018)
12.8.12	Receive Data Register B (CAN1RDB -			LUT Error Register (LUTerr - 0xE003 C01C) 297
	0xE004 402C, CAN2RDB - 0xE004 802C)	283	12.15.11	Global FullCANInterrupt Enable register (FCANIE
12.8.13	Transmit Frame Information Register			- 0xE003 C020)
	(CAN1TFI[1/2/3] - 0xE004 40[30/ 40/50],		12.15.12	FullCAN Interrupt and Capture registers
	CAN2TFI[1/2/3] - 0xE004 80[30/40/50])			(FCANICO - 0xE003 C024 and FCANIC1 -
	Automatic transmit priority detection			0xE003 C028)
40 0 4 4	Tx DLC			Configuration and search algorithm 298
12.8.14	Transmit Identifier Register (CAN1TID[1/2/3]	-	12.16.1	Acceptance filter search algorithm 298
	0xE004 40[34/44/54], CAN2TID[1/2/3] - 0xE004 80[34/44/54])	285	12.17 F	ullCAN mode
12.8.15	Transmit Data Register A (CAN1TDA[1/2/3] -		12.17.1	FullCAN message layout
12.0.10	0xE004 40[38/48/58], CAN2TDA[1/2/3] -		12.17.2	FullCAN interrupts
	0xE004 80[38/48/58])			FullCAN message interrupt enable bit 303
12.8.16	Transmit Data Register B (CAN1TDB[1/2/3] -			Message lost bit and CAN channel number. 304
12.0.10	0xE004 40[3C/4C/5C], CAN2TDB[1/2/3] -		12.17.2.3	Setting the interrupt pending bits (IntPnd
	0xE004 80[3C/4C/5C])	286		63 to 0)
12.8.17	CAN Sleep Clear register (CANSLEEPCLR -		12.17.2.4	Clearing the interrupt pending bits (IntPnd
	0x400F C110)		40 47 0 5	63 to 0)
12.8.18	CAN Wake-up Flags register (CANWAKEFLA		12.17.2.5	Setting the message lost bit of a FullCAN
	- 0x400F C114)	286	10 17 0 6	message object (MsgLost 63 to 0) 305
12.9	CAN controller operation	287	12.17.2.0	Clearing the message lost bit of a FullCAN message object (MsgLost 63 to 0) 305
12.9.1	Error handling	007	12.17.3	Set and clear mechanism of the FullCAN
12.9.2	Sleep mode		12.17.0	interrupt
12.9.3	Interrupts		12 17 3 1	Scenario 1: Normal case, no message lost . 305
12.9.4	Transmit priority	000		Scenario 2: Message lost
12.10	Centralized CAN registers			Scenario 3: Message gets overwritten indicated
12.10.1	Central Transmit Status Register (CANTxSR			by Semaphore bits
	0xE004 0000)		12.17.3.4	Scenario 3.1: Message gets overwritten indicated
12.10.2	Central Receive Status Register (CANRxSR			by Semaphore bits and Message Lost 307
	0xE004 0004)		12.17.3.5	Scenario 3.2: Message gets overwritten indicated
12.10.3	Central Miscellaneous Status Register (CANN	/ISR		by Message Lost
	- 0xE004 0008)	289	12.17.3.6	Scenario 4: Clearing Message Lost bit 309
12.11	Global acceptance filter	289	12.18 E	xamples of acceptance filter tables and ID
12.12	Acceptance filter modes	290	ir	ndex values 310
12.12.1	Acceptance filter Off mode		12.18.1	Example 1: only one section is used 310
12.12.2	Acceptance filter Bypass mode		12.18.2	Example 2: all sections are used 310
12.12.3	Acceptance filter Operating mode		12.18.3	Example 3: more than one but not all sections are
12.12.4	FullCAN mode			used 310
12.13	Sections of the ID look-up table RAM	291	12.18.4	Configuration example 4
	ID look-up table RAM	201	12.18.5	Configuration example 5
	Acceptance filter registers		12.18.6	Configuration example 6
12.13	Acceptance inter registers	293		Explicit standard frame format identifier section

User manual

	(11-bit CAN ID):	on 113 11 113 on	2.18.7	Configuration example 7
Chant	(29-bit CAN ID, <u>Figure 60</u>)		2.18.8	Look-up table programming guidelines 316
-				
13.1	How to read this chapter 3		3.10.4.1	USB Endpoint Interrupt Status register
13.2	Basic configuration	4	3 10 / 3	(USBEpIntSt - 0xFFE0 C230)
13.3	Introduction 3	10	5.10.4.2	(USBEpIntEn - 0xFFE0 C234)
13.4	Features		3.10.4.3	USB Endpoint Interrupt Clear register
13.5	Fixed endpoint configuration 3	20		(USBEpIntClr - 0xFFE0 C238) 334
13.6	Functional description 3		3.10.4.4	USB Endpoint Interrupt Set register (USBEpIntSet
13.6.1	Analog transceiver		24045	- 0xFFE0 C23C)
13.6.2 13.6.3	Serial Interface Engine (SIE)		3.10.4.5	USB Endpoint Interrupt Priority register (USBEpIntPri - 0xFFE0 C240)
13.6.4	EP_RAM access control		3.10.5	Endpoint realization registers
13.6.5	DMA engine and bus master interface 3			EP RAM requirements
13.6.6	Register interface			USB Realize Endpoint register (USBReEp -
13.6.7	SoftConnect	22		0xFFE0 C244) 337
13.6.8	GoodLink		3.10.5.3	USB Endpoint Index register (USBEpIn - 0xFFE0
13.7	Operational overview 3	- 1	24054	C248)
13.8	Pin description	23	3.10.5.4	USB MaxPacketSize register (USBMaxPSize - 0xFFE0 C24C)
13.8.1	LPC2378 usage note 3	1	3 10 6	USB transfer registers
13.8.2	LPC2388 usage note 3	1		USB Receive Data register (USBRxData -
13.9	Clocking and power management 3	24		0xFFE0 C218)
13.9.1	Power requirements		3.10.6.2	USB Receive Packet Length register
13.9.2 13.9.3	Clocks	0.4		(USBRxPLen - 0xFFE0 C220)
13.9.4	Power management support		3.10.6.3	USB Transmit Data register (USBTxData -
13.10	Register description		3 10 6 4	0xFFE0 C21C)
13.10.1	Port select register		J. 10.0. 4	(USBTxPLen - 0xFFE0 C224) 340
	1 USB Port Select register (USBPortSel - 0xFFE		3.10.6.5	USB Control register (USBCtrl - 0xFFE0
	C110 – LPC2378 only)			C228)
13.10.2	Clock control registers			SIE command code registers 341
13.10.2.	1 USB Clock Control register (USBClkCtrl -			USB Command Code register (USBCmdCode -
10 10 0	0xFFE0 CFF4)			0xFFE0 C210)
13.10.2.	2 USB Clock Status register (USBClkSt - 0xFFE0 CFF8)		3.10.7.2	USB Command Data register (USBCmdData - 0xFFE0 C214)
13.10.3	Device interrupt registers		3.10.8	DMA registers
	USB Interrupt Status register (USBIntSt -			USB DMA Request Status register (USBDMARSt
	0xE01F C1C0)			- 0xFFE0 C250)
13.10.3.	2 USB Device Interrupt Status register		3.10.8.2	USB DMA Request Clear register (USBDMARCIr
	,	29		- 0xFFE0 C254) 342
13.10.3.	3 USB Device Interrupt Enable register		3.10.8.3	USB DMA Request Set register (USBDMARSet -
12 10 2	(USBDevintEn - 0xFFE0 C204)	30	2 40 0 4	0xFFE0 C258)
13.10.3.	4 USB Device Interrupt Clear register (USBDevIntClr - 0xFFE0 C208)	30 30	ა.10.8.4	USB UDCA Head register (USBUDCAH - 0xFFE0 C280)
13.10.3	5 USB Device Interrupt Set register (USBDevIntS		3.10.8.5	USB EP DMA Status register (USBEpDMASt -
	- 0xFFE0 C20C)		20.0.0	0xFFE0 C284)
13.10.3.	6 USB Device Interrupt Priority register		3.10.8.6	USB EP DMA Enable register (USBEpDMAEn -
	(USBDevIntPri - 0xFFE0 C22C) 3			0xFFE0 C288)
13.10.4	Endpoint interrupt registers 3	32 1		USB EP DMA Disable register (USBEpDMADis -
				0xFFE0 C28C)

13.10.8.	8 USB DMA Interrupt Status register (USBDMAIntSt	13.14.1 Interrupt generation	
	- 0xFFE0 C290)	13.14.2 Data transfer for OUT endpoints	
13.10.8.	9 USB DMA Interrupt Enable register	13.14.3 Data transfer for IN endpoints	363
	(USBDMAIntEn - 0xFFE0 C294) 345	13.15 DMA operation	363
13.10.8.	10 USB End of Transfer Interrupt Status register	13.15.1 Transfer terminology	
	(USBEoTIntSt - 0xFFE0 C2A0)	13.15.2 USB device communication area	364
13.10.8.	11 USB End of Transfer Interrupt Clear register		
	(USBEoTIntClr - 0xFFE0 C2A4) 346	13.15.4 The DMA descriptor	
13.10.8.	12 USB End of Transfer Interrupt Set register	13.15.4.1 Next_DD_pointer	
	(USBEoTIntSet - 0xFFE0 C2A8) 347	13.15.4.2 DMA_mode	
13.10.8.	13 USB New DD Request Interrupt Status register	13.15.4.3 Next_DD_valid	
	(USBNDDRIntSt - 0xFFE0 C2AC) 347	13.15.4.4 Isochronous_endpoint	
13.10.8.	14 USB New DD Request Interrupt Clear register	13.15.4.5 Max_packet_size	
	(USBNDDRIntCir - 0xFFE0 C2B0) 347	13.15.4.6 DMA_buffer_length	367
13.10.8.	15 USB New DD Request Interrupt Set register	13.15.4.7 DMA_buffer_start_addr	367
	(USBNDDRIntSet - 0xFFE0 C2B4) 347	13.15.4.8 DD_retired	
13.10.8.	16 USB System Error Interrupt Status register	13.15.4.9 DD_status	367
	(USBSysErrIntSt - 0xFFE0 C2B8) 348	13.15.4.10 Packet_valid	
13.10.8.	17 USB System Error Interrupt Clear register	13.15.4.11 LS_byte_extracted	
40.40.0	(USBSysErrIntClr - 0xFFE0 C2BC) 348	13.15.4.12 MS_byte_extracted	368
13.10.8.	18 USB System Error Interrupt Set register	13.15.4.13 Present_DMA_count	368
	(USBSysErrIntSet - 0xFFE0 C2C0) 348	13.15.4.14 Message_length_position	368
13.11	Interrupt handling	13.15.4.15 Isochronous_packetsize_memory_address	368
	Slave mode	13.15.5 Non-isochronous endpoint operation	368
	DMA mode	13.15.5.1 Setting up DMA transfers	368
	Serial interface engine command		368
	description	13.15.5.3 Transferring the data	
13.12.1	Set Address (Command: 0xD0, Data: write	13.15.5.4 Optimizing descriptor fetch	
	1 byte)	13.15.5.6 No_Packet DD	
13.12.2	Configure Device (Command: 0xD8, Data: write 1	13.15.6 Isochronous endpoint operation	
40.40.0	byte)	13.15.6.1 Setting up DMA transfers	
13.12.3	Set Mode (Command: 0xF3, Data: write	13.15.6.2 Finding the DMA Descriptor	
12 12 1	1 byte)	13.15.6.3 Transferring the Data	
13.12.4	Read Current Frame Number (Command: 0xF5,	OUT endpoints	
13.12.5	Data: read 1 or 2 bytes)	IN endpoints	
13.12.3	2 bytes)	13.15.6.4 DMA descriptor completion	
13.12.6	Set Device Status (Command: 0xFE, Data: write 1	13.15.6.5 Isochronous OUT Endpoint Operation	
10.12.0	byte)	Example	371
13.12.7	Get Device Status (Command: 0xFE, Data: read 1	13.15.7 Auto Length Transfer Extraction (ATLE) mode	е
.02	byte)	operation	372
13.12.8	Get Error Code (Command: 0xFF, Data: read 1	OUT transfers in ATLE mode	372
	byte)	IN transfers in ATLE mode	
13.12.9	Read Error Status (Command: 0xFB, Data: read 1	13.15.7.1 Setting up the DMA transfer	
	byte)	13.15.7.2 Finding the DMA Descriptor	
13.12.10	Select Endpoint (Command: 0x00 - 0x1F, Data:	13.15.7.3 Transferring the Data	
	read 1 byte (optional))	OUT endpoints	
13.12.11	Select Endpoint/Clear Interrupt (Command:	IN endpoints	
	0x40 - 0x5F, Data: read 1 byte)	13.15.7.4 Ending the packet transfer	
13.12.12	2 Set Endpoint Status (Command: 0x40 - 0x55,	OUT endpoints	
	Data: write 1 byte (optional))	IN endpoints	
13.12.13	3 Clear Buffer (Command: 0xF2, Data: read 1 byte	13.16 Double buffered endpoint operation	
10 15 :	(optional))	13.16.1 Bulk endpoints	
13.12.14	4 Validate Buffer (Command: 0xFA, Data:	13.16.2 Isochronous endpoints	377
	none)		
	USB device controller initialization 361		
13.14	Slave mode operation		

Chapter 1	4: LP	C23XX US	B Host	controller
-----------	-------	----------	--------	------------

14.1	How to read this chapter 378		Interfaces	
14.2	Basic configuration		Pin description	
14.3	Introduction	14.4.1.1	USB host usage note	
14.3.1	Features	14.4.2	Software interface	
14.3.2	Architecture	14.4.2.1 14.4.2.2	Register map	
Chapt	ter 15: LPC23XX USB OTG controller			
15.1	How to read this chapter 383	15.8.10	I2C Receive Register (I2C_RX - 0xFFE0	
15.2	Basic configuration		C300)	395
15.3	Introduction 383	15.8.11	I2C Transmit Register (I2C_TX - 0xFFE0	
15.4	Features	45.040	C300)	395
15.5	Architecture 383	10.0.12	I2C Status Register (I2C_STS - 0xFFE0 C304)	395
15.6	Modes of operation		I2C Control Register (I2C_CTL - 0xFFE0	393
15.7	Pin configuration		C308)	397
15.7.1	Connecting port U1 to an external OTG	15.8.14	I2C Clock High Register (I2C_CLKHI -	
10.7.1	transceiver		0xFFE0 C30C)	398
15.7.2	Connecting USB as a two-port host 388		I2C Clock Low Register (I2C_CLKLO -	
15.7.3	Connecting USB as one port host and one port		0xFFE0 C310)	
	device		Interrupt handling	
15.8	Register description 389		HNP support	
15.8.1	USB Interrupt Status Register (USBIntSt -	15.9.1	B-device: peripheral to host switching	
	0xE01F C1C0))	Remove D+ pull-up	
15.8.2	OTG Interrupt Status Register (OTGIntSt -	15.9.2	Add D+ pull-up	
1502	0xE01F C100)	13.3.2	Set BDIS_ACON_EN in external OTG	404
15.8.3	OTG Interrupt Enable Register (OTGIntEn - 0xFFE0 C104)		transceiver	. 406
15.8.4	OTG Interrupt Set Register (OTGIntSet -		Clear BDIS_ACON_EN in external OTG tran	
	0xFFE0 C20C)		ceiver	. 407
15.8.5	OTG Interrupt Clear Register (OTGIntClr -		Discharge V _{BUS}	
	0xFFE0 C10C)		Load and enable OTG timer	
15.8.6	OTG Status and Control Register (OTGStCtrl -		Stop OTG timer	
45.0.7	0xFFE0 C110)		Suspend host on port 1	
15.8.7	OTG Timer Register (OTGTmr - 0xFFE0 C114)		Clocking and power management	
15.8.8	OTG Clock Control Register (OTGClkCtrl -		Device clock request signals	
10.0.0	0xFFE0 CFF4)		Power-down mode support	
15.8.9	OTG Clock Status Register (OTGClkSt -		USB OTG controller initialization	
	0xFFE0 CFF8)	13.11	OOB OTO CONTIONER INITIALIZATION	710
Chapt	ter 16: LPC23XX UART0/2/3			
16.1	Basic configuration	16.4.3	UARTn Divisor Latch LSB Register (U0DLL	-
16.2	Features		0xE000 C000, U2DLL - 0xE007 8000, U3DL	
16.3	Pin description		0xE007 C000 when DLAB = 1) and UARTn	
16.4	Register description 413		Divisor Latch MSB Register (U0DLM -	
16.4.1	UARTn Receiver Buffer Register (U0RBR -		0xE000 C004, U2DLL - 0xE007 8004, U3DL	
	0xE000 C000, U2RBR - 0xE007 8000, U3RBR -	16.4.4	0xE007 C004 when DLAB = 1)	416
	0xE007 C000 when DLAB = 0, Read Only) . 416	10.4.4	0xE000 C004, U2IER - 0xE007 8004, U3IEF	₹ -
16.4.2	UARTn Transmit Holding Register (U0THR -		0xE007 C004 when DLAB = 0)	
	0xE000 C000, U2THR - 0xE007 8000, U3THR -	16.4.5	UARTn Interrupt Identification Register (U0I	
	0xE007 C000 when DLAB = 0, Write Only) . 416	•	0xE000 C008, U2IIR - 0xE007 8008, U3IIR	
			0x7008 C008, Read Only)	418

16.4.6	UARTh FIFO Control Register (U0FCR -		Auto-baud	
	0xE000 C008, U2FCR - 0xE007 8008, U3FCR - 0xE007 C008, Write Only) 420	16.4.10.2	2 Auto-baud modes	
16.4.7	UARTn Line Control Register (U0LCR -	10.4.11	0xE007 C024)	
	0xE000 C00C, U2LCR - 0xE007 800C, U3LCR -	16.4.12	UARTn Fractional Divider Register (U0FDR -	
	0xE007 C00C)		0xE000 C028, U2FDR - 0xE007 8028, U3FD	
16.4.8	UARTn Line Status Register (U0LSR -		0xE007 C028)	
	0xE000 C014, U2LSR - 0xE007 8014, U3LSR -		Baudrate calculation	428
	0xE007 C014, Read Only)	16.4.12.1	I.1 Example 1: PCLK = 14.7456 MHz, BR =	
16.4.9	UARTn Scratch Pad Register (U0SCR -	10 1 10 1	9600	
	0xE000 C01C, U2SCR - 0xE007 801C U3SCR -		I.2 Example 2: PCLK = 12 MHz, BR = 115200	430
16.4.10	0xE007 C01C)	16.4.13	UARTn Transmit Enable Register (U0TER - 0xE000 C030, U2TER - 0xE007 8030, U3TE	:D
10.4.10	0xE000 C020, U2ACR - 0xE007 8020, U3ACR -		0xE007 C030)	
	0xE007 C020)	16.5	Architecture	
_		10.5	Architecture	431
Chapt	er 17: LPC23XX UART1			
17.1	Basic configuration 433	17.4.9.1	Auto-RTS	
17.2	Features	17.4.10	Auto-CTS	446
17.3	Pin description	17.4.11	UART1 Line Status Register (U1LSR -	447
17.4	Register description 435	17.4.12	0xE001 0014, Read Only)	447
17.4.1	UART1 Receiver Buffer Register (U1RBR -	17.4.12	0xE001 0018)	448
	0xE001 0000, when DLAB = 0 Read Only) . 438	17.4.13	UART1 Scratch Pad Register (U1SCR -	7-10
17.4.2	UART1 Transmitter Holding Register (U1THR -		0xE001 001C)	449
	0xE001 0000 when DLAB = 0, Write Only) . 438	17.4.14	UART1 Auto-baud Control Register (U1ACR	
17.4.3	UART1 Divisor Latch LSB and MSB Registers		0xE001 0020)	
	(U1DLL - 0xE001 0000 and U1DLM -	17.4.15	Auto-baud	
17.4.4	0xE001 0004, when DLAB = 1) 438 UART1 Interrupt Enable Register (U1IER -	17.4.16	Auto-baud modes	
17.4.4	0xE001 0004, when DLAB = 0) 439	17.4.17	UART1 Fractional Divider Register (U1FDR -	
17.4.5	UART1 Interrupt Identification Register (U1IIR -	47 4 47 4	0xE001 0028)	
	0xE001 0008, Read Only)		I Baudrate calculation	453
17.4.6	UART1 FIFO Control Register (U1FCR -	17.4.17.1	9600	455
	0xE001 0008, Write Only)	17.4.17.1	I.2 Example 2: PCLK = 12 MHz, BR = 115200	
17.4.7	UART1 Line Control Register (U1LCR -	17.4.18	UART1 Transmit Enable Register (U1TER -	
	0xE001 000C)		0xE001 0030)	455
17.4.8	UART1 Modem Control Register (U1MCR -	17.5	Architecture	456
17.4.9	0xE001 0010)			
Chapt	er 18: LPC23XX SPI			
18.1	Basic configuration 458	18.7.2	SPI Status Register (S0SPSR - 0xE002	404
18.2	Features	1070	0004)	464
18.3	Introduction	18.7.3 18.7.4	SPI Clock Counter Register (S0SPCCR -	405
18.4	SPI data transfers 458	10.7.4	0xE002 000C)	465
18.5	SPI peripheral details 460	18.7.5	SPI Test Control Register (SPTCR -	700
18.5.1	General information 460	101710	0xE002 0010)	466
18.5.2	Master operation	18.7.6	SPI Test Status Register (SPTSR - 0xE002	
18.5.3	Slave operation		0014)	466
18.5.4	Exception conditions	18.7.7	SPI Interrupt Register (S0SPINT - 0xE002	
18.6	Pin description		001C)	466
18.7	Register description 463	18.8	Architecture	467
18.7.1	SPI Control Register (S0SPCR - 0xE002			
	0000)			

Chapter 34: Supplementary information

Chapter 19: LPC23XX SSP0/1 interfaces

19.1	Basic configuration	468	19.6.2	SSPn Control Register 1 (SSP0CR1 -	
19.2	Features	468		0xE006 8004, SSP1CR1 - 0xE003 0004) 4	
19.3	Description	468	19.6.3	SSPn Data Register (SSP0DR - 0xE006 8008,	
19.4	Pin descriptions		40.0.4	SSP1DR - 0xE003 0008)	
19.5	Bus description		19.6.4	SSPn Status Register (SSP0SR - 0xE006 8000	
19.5.1	Texas Instruments Synchronous Serial Fram		19.6.5	SSP1SR - 0xE003 000C)	179
	Format		10.0.0	0xE006 8010, SSP1CPSR - 0xE003 0010). 4	180
19.5.2	SPI Frame Format		19.6.6	SSPn Interrupt Mask Set/Clear Register	
19.5.2.1	Clock Polarity (CPOL) and Phase (CPHA)			(SSP0IMSC - 0xE006 8014, SSP1IMSC -	
	Control				180
19.5.2.2			19.6.7	SSPn Raw Interrupt Status Register (SSP0RIS	} -
19.5.2.3	,			0xE006 8018, SSP1RIS - 0xE003 0018) 4	₽81
19.5.2.4	· · · · · · · · · · · · · · · · · · ·		19.6.8	SSPn Masked Interrupt Status Register	
19.5.2.5	· · · · · · · · · · · · · · · · · · ·			(SSP0MIS - 0xE006 801C, SSP1MIS -	
19.5.3 19.5.3.1	Semiconductor Microwire Frame Format		4000		181
19.5.5.1	Setup and Hold Time Requirements on CS V Respect to SK in Microwire Mode		19.6.9	SSPn Interrupt Clear Register (SSP0ICR -	
40 C	-		10 6 10	,	182
19.6	Register Description	4/6	19.6.10	SSPn DMA Control Register (SSP0DMACR - 0xE006 8024, SSP1DMACR - 0xE003	
19.6.1	SSPn Control Register 0 (SSP0CR0 - 0xE006 8000, SSP1CR0 - 0xE003 0000)	177		0024)	182
	•	4//		0021)	.02
Chapt	er 20: LPC23XX SD/MMC interface				
20.1	How to read this chapter	483	20.7.3	Clock Control Register (MCIClock -	
20.2	Basic configuration				196
20.3	Introduction		20.7.4	Argument Register (MCIArgument -	
20.4	Features			,	197
20.5	SD/MMC card interface pin description		20.7.5	Command Register (MCICommand -	
			0070	,	197
20.6	Functional overview		20.7.6	Command Response Register	100
20.6.1 20.6.2	Mutimedia cardSecure digital memory card		20.7.7	(MCIRespCommand - 0xE008 C010) 4 Response Registers (MCIResponse0-3 -	198
20.6.2.1	Secure digital memory card bus signals		20.7.7	0xE008 C014, E008 C018, E008 C01C and	
20.6.3	MCI adapter				198
20.6.3.1	Adapter register block		20.7.8	Data Timer Register (MCIDataTimer -	
20.6.3.2					
20.6.3.3		400		Č ,	199
	Command path		20.7.9	0xE008 C024)	
20.6.3.4	•	486	20.7.9	0xE008 C024)	199 199
20.6.3.5	Command path state machine	486 486 488	20.7.9	OxE008 C024)	199
20.6.3.5 20.6.3.6	Command path state machine	486 486 488 489	20.7.10	0xE008 C024) 4 Data Length Register (MCIDataLength - 0xE008 C028) 4 Data Control Register (MCIDataCtrl - 0xE008 C02C) 5	
20.6.3.5 20.6.3.6 20.6.3.7	Command path state machine	486 486 488 489 489		0xE008 C024) 4 Data Length Register (MCIDataLength - 0xE008 C028) 4 Data Control Register (MCIDataCtrl - 0xE008 C02C) 5 Data Counter Register (MCIDataCnt - 1	199 500
20.6.3.5 20.6.3.6 20.6.3.7 20.6.3.8	Command path state machine Command format Data path Data path state machine. Data counter.	486 486 488 489 489	20.7.10	0xE008 C024) 4 Data Length Register (MCIDataLength - 4 0xE008 C028) 4 Data Control Register (MCIDataCtrl - 5 Data Counter Register (MCIDataCnt - 0xE008 C030) 5 5	199 500 500
20.6.3.5 20.6.3.6 20.6.3.7 20.6.3.8 20.6.3.9	Command path state machine Command format Data path Data path state machine Data counter Bus mode	486 486 488 489 489 491 492	20.7.10 20.7.11 20.7.12	0xE008 C024) 4 Data Length Register (MCIDataLength - 4 0xE008 C028) 4 Data Control Register (MCIDataCtrl - 5 0xE008 C02C) 5 Data Counter Register (MCIDataCnt - 5 0xE008 C030) 5 Status Register (MCIStatus - 0xE008 C034) 5	199 500 500 501
20.6.3.5 20.6.3.6 20.6.3.7 20.6.3.8 20.6.3.9 20.6.3.1	Command path state machine Command format Data path Data path state machine Data counter Bus mode CRC Token status	486 486 488 489 489 491 492 492	20.7.10 20.7.11 20.7.12 20.7.13	0xE008 C024) 4 Data Length Register (MCIDataLength - 4 0xE008 C028) 4 Data Control Register (MCIDataCtrl - 5 0xE008 C02C) 5 Data Counter Register (MCIDataCnt - 5 0xE008 C030) 5 Status Register (MCIStatus - 0xE008 C034) 5 Clear Register (MCIClear - 0xE008 C038) 5	199 500 500
20.6.3.5 20.6.3.6 20.6.3.7 20.6.3.8 20.6.3.9 20.6.3.1 20.6.3.1	Command path state machine Command format Data path Data path state machine Data counter Bus mode CRC Token status Status flags	486 486 488 489 489 491 492 492 493	20.7.10 20.7.11 20.7.12	0xE008 C024) 4 Data Length Register (MCIDataLength - 4 0xE008 C028) 4 Data Control Register (MCIDataCtrl - 5 0xE008 C02C) 5 Data Counter Register (MCIDataCnt - 5 0xE008 C030) 5 Status Register (MCIStatus - 0xE008 C034) 5 Clear Register (MCIClear - 0xE008 C038) 5 Interrupt Mask Registers (MCIMask0 - 5	199 500 500 501 502
20.6.3.5 20.6.3.6 20.6.3.7 20.6.3.8 20.6.3.9 20.6.3.1 20.6.3.1 20.6.3.1	Command path state machine Command format Data path Data path state machine Data counter Bus mode CRC Token status Status flags CRC generator	486 486 488 489 489 491 492 492 493 493	20.7.10 20.7.11 20.7.12 20.7.13 20.7.14	0xE008 C024) 4 Data Length Register (MCIDataLength - 4 0xE008 C028) 4 Data Control Register (MCIDataCtrl - 5 0xE008 C02C) 5 Data Counter Register (MCIDataCnt - 5 0xE008 C030) 5 Status Register (MCIStatus - 0xE008 C034) 5 Clear Register (MCIClear - 0xE008 C038) 5 Interrupt Mask Registers (MCIMask0 - 0xE008 C03C)	199 500 500 501
20.6.3.5 20.6.3.6 20.6.3.7 20.6.3.8 20.6.3.1 20.6.3.1 20.6.3.1 20.6.3.1	Command path state machine Command format Data path Data path state machine Data counter Bus mode CRC Token status Status flags CRC generator Data FIFO	486 486 488 489 489 491 492 492 493 493	20.7.10 20.7.11 20.7.12 20.7.13	0xE008 C024) 4 Data Length Register (MCIDataLength - 4 0xE008 C028) 4 Data Control Register (MCIDataCtrl - 5 0xE008 C02C) 5 Data Counter Register (MCIDataCnt - 5 0xE008 C030) 5 Status Register (MCIStatus - 0xE008 C034) 5 Clear Register (MCIClear - 0xE008 C038) 5 Interrupt Mask Registers (MCIMask0 - 0xE008 C03C) 0xE008 C03C) 5 FIFO Counter Register (MCIFifoCnt -	199 500 501 502
20.6.3.5 20.6.3.6 20.6.3.7 20.6.3.8 20.6.3.1 20.6.3.1 20.6.3.1 20.6.3.1 20.6.3.1	Command path state machine Command format Data path Data path state machine Data counter Bus mode CRC Token status Status flags CRC generator Data FIFO Transmit FIFO	486 486 488 489 491 492 492 493 493 493 494	20.7.10 20.7.11 20.7.12 20.7.13 20.7.14 20.7.15	0xE008 C024) 4 Data Length Register (MCIDataLength - 4 0xE008 C028) 4 Data Control Register (MCIDataCtrl - 5 0xE008 C02C) 5 Data Counter Register (MCIDataCnt - 5 0xE008 C030) 5 Status Register (MCIStatus - 0xE008 C034) 5 Clear Register (MCIClear - 0xE008 C038) 5 Interrupt Mask Registers (MCIMask0 - 0xE008 C03C) 5 FIFO Counter Register (MCIFifoCnt - 0xE008 C048) 5	199 500 500 501 502 502
20.6.3.5 20.6.3.6 20.6.3.7 20.6.3.8 20.6.3.9 20.6.3.1 20.6.3.1 20.6.3.1 20.6.3.1 20.6.3.1	Command path state machine Command format Data path Data path state machine Data counter Bus mode CRC Token status Status flags CRC generator Data FIFO	486 486 488 489 489 491 492 492 493 493 493 494	20.7.10 20.7.11 20.7.12 20.7.13 20.7.14	0xE008 C024) 4 Data Length Register (MCIDataLength - 4 0xE008 C028) 4 Data Control Register (MCIDataCtrl - 5 0xE008 C02C) 5 Data Counter Register (MCIDataCnt - 5 0xE008 C030) 5 Status Register (MCIStatus - 0xE008 C034) 5 Clear Register (MCIClear - 0xE008 C038) 5 Interrupt Mask Registers (MCIMask0 - 5 0xE008 C03C) 5 FIFO Counter Register (MCIFifoCnt - 5 0xE008 C048) 5 Data FIFO Register (MCIFIFO - 0xE008 C080	199 500 500 501 502 502
20.6.3.5 20.6.3.6 20.6.3.7 20.6.3.8 20.6.3.1 20.6.3.1 20.6.3.1 20.6.3.1 20.6.3.1 20.6.3.1 20.6.3.1	Command path state machine Command format Data path Data path state machine Data counter Bus mode CRC Token status Status flags CRC generator Data FIFO Transmit FIFO Receive FIFO	486 486 488 489 491 492 492 493 493 493 494 494	20.7.10 20.7.11 20.7.12 20.7.13 20.7.14 20.7.15	0xE008 C024) 4 Data Length Register (MCIDataLength - 4 0xE008 C028) 4 Data Control Register (MCIDataCtrl - 5 0xE008 C02C) 5 Data Counter Register (MCIDataCnt - 5 0xE008 C030) 5 Status Register (MCIStatus - 0xE008 C034) 5 Clear Register (MCIClear - 0xE008 C038) 5 Interrupt Mask Registers (MCIMask0 - 5 0xE008 C03C) 5 FIFO Counter Register (MCIFifoCnt - 5 0xE008 C048) 5 Data FIFO Register (MCIFIFO - 0xE008 C080	199 500 501 502 503 to
20.6.3.5 20.6.3.6 20.6.3.7 20.6.3.8 20.6.3.1 20.6.3.1 20.6.3.1 20.6.3.1 20.6.3.1 20.6.3.1 20.6.3.1	Command path state machine Command format Data path Data path state machine Data counter Bus mode CRC Token status Status flags CRC generator Data FIFO Transmit FIFO Receive FIFO APB interfaces Interrupt logic	486 486 488 489 491 492 492 493 493 493 494 494 495 495	20.7.10 20.7.11 20.7.12 20.7.13 20.7.14 20.7.15	0xE008 C024) 4 Data Length Register (MCIDataLength - 4 0xE008 C028) 4 Data Control Register (MCIDataCtrl - 5 0xE008 C02C) 5 Data Counter Register (MCIDataCnt - 5 0xE008 C030) 5 Status Register (MCIStatus - 0xE008 C034) 5 Clear Register (MCIClear - 0xE008 C038) 5 Interrupt Mask Registers (MCIMask0 - 5 0xE008 C03C) 5 FIFO Counter Register (MCIFifoCnt - 5 0xE008 C048) 5 Data FIFO Register (MCIFIFO - 0xE008 C080	199 500 501 502 503 to
20.6.3.5 20.6.3.6 20.6.3.7 20.6.3.8 20.6.3.1 20.6.3.1 20.6.3.1 20.6.3.1 20.6.3.1 20.6.3.1 20.6.3.1	Command path state machine Command format Data path Data path state machine Data counter Bus mode CRC Token status Status flags CRC generator Data FIFO Transmit FIFO Receive FIFO APB interfaces Interrupt logic Register description	486 486 488 489 491 492 492 493 493 493 494 494 495 495	20.7.10 20.7.11 20.7.12 20.7.13 20.7.14 20.7.15	0xE008 C024) 4 Data Length Register (MCIDataLength - 4 0xE008 C028) 4 Data Control Register (MCIDataCtrl - 5 0xE008 C02C) 5 Data Counter Register (MCIDataCnt - 5 0xE008 C030) 5 Status Register (MCIStatus - 0xE008 C034) 5 Clear Register (MCIClear - 0xE008 C038) 5 Interrupt Mask Registers (MCIMask0 - 5 0xE008 C03C) 5 FIFO Counter Register (MCIFifoCnt - 5 0xE008 C048) 5 Data FIFO Register (MCIFIFO - 0xE008 C080	199 500 501 502 503 to
20.6.3.5 20.6.3.6 20.6.3.7 20.6.3.8 20.6.3.1 20.6.3.1 20.6.3.1 20.6.3.1 20.6.3.1 20.6.3.1 20.6.3.1 20.6.3.1	Command path state machine Command format Data path Data path state machine Data counter Bus mode CRC Token status Status flags CRC generator Data FIFO Transmit FIFO Receive FIFO APB interfaces Interrupt logic	486 486 488 489 491 492 492 493 493 493 494 494 495 495	20.7.10 20.7.11 20.7.12 20.7.13 20.7.14 20.7.15	0xE008 C024) 4 Data Length Register (MCIDataLength - 4 0xE008 C028) 4 Data Control Register (MCIDataCtrl - 5 0xE008 C02C) 5 Data Counter Register (MCIDataCnt - 5 0xE008 C030) 5 Status Register (MCIStatus - 0xE008 C034) 5 Clear Register (MCIClear - 0xE008 C038) 5 Interrupt Mask Registers (MCIMask0 - 5 0xE008 C03C) 5 FIFO Counter Register (MCIFifoCnt - 5 0xE008 C048) 5 Data FIFO Register (MCIFIFO - 0xE008 C080	199 500 501 502 503 to

Chapter 34: Supplementary information

Chapter 21: LPC23XX I2C-bus interfaces I2C0/1/2

21.1	Basic configuration 504	21.9.7	Simultaneous repeated START conditions from	
21.2	Features		two masters	
21.3	Applications 504	21.9.8	Data transfer after loss of arbitration	
21.4	Description	21.9.9	Forced access to the I ² C bus	
21.5	Pin description	21.9.10	I ² C Bus obstructed by a Low level on SCL or	
		04.0.44	SDA	
21.6	I ² C operating modes	21.9.11	Bus error	
21.6.1	Master Transmitter mode 506	21.9.12	I ² C State service routines	
21.6.2	Master Receiver mode 507		Initialization	
21.6.3	Slave Receiver mode		I ² C interrupt service	
21.6.4	Slave Transmitter mode 509		The state service routines	
21.7	I ² C implementation and operation 509		Adapting state services to an application	
21.7.1	Input filters and output stages 509		Software example	
21.7.2	Address Register I2ADDR 511	21.10.1	Initialization routine	
21.7.3	Comparator	21.10.2	Start master transmit function	
21.7.4	Shift register I2DAT511	21.10.3	Start master receive function	
21.7.5	Arbitration and synchronization logic 511	21.10.4	I ² C interrupt routine	
21.7.6	Serial clock generator	21.10.5	Non mode specific states	
21.7.7	Timing and control		State : 0x00	
21.7.8	Control register I2CONSET and I2CONCLR 512	21.10.6	Master states	
21.7.9	Status decoder and status register 513		State: 0x08	
21.8	Register description 513		State: 0x10	
21.8.1	I ² C Control Set Register (I2C[0/1/2]CONSET:	21.10.7	State: 0x18	
	0xE001 C000, 0xE005 C000, 0xE008 0000) 514		State : 0x20	
21.8.2	I ² C Control Clear Register (I2C[0/1/2]CONCLR:		State : 0x28	
04.0.0	0xE001 C018, 0xE005 C018, 0xE008 0018) 516		State : 0x30	
21.8.3	I ² C Status Register (I2C[0/1/2]STAT -		State : 0x38	
04.0.4	0xE001 C004, 0xE005 C004, 0xE008 0004) 516	21.10.7.5	Master Receive states	
21.8.4	l ² C Data Register (I2C[0/1/2]DAT - 0xE001 C008,		State: 0x40	
04.0.5	0xE005 C008, 0xE008 0008) 517		State : 0x48	
21.8.5	I ² C Slave Address Register (I2C[0/1/2]ADR -		State : 0x50	
24.0.6	0xE001 C00C, 0xE005 C00C, 0xE008 000C) 517		State : 0x58	
21.8.6	I ² C SCL High Duty Cycle Register	21.10.9	Slave Receiver states	
	(I2C[0/1/2]SCLH - 0xE001 C010, 0xE005 C010, 0xE008 0010)		State: 0x60	
21.8.7	I ² C SCL Low Duty Cycle Register		State : 0x68	
21.0.7	(I2C[0/1/2]SCLL - 0xE001 C014, 0xE005 C014,		State : 0x70	
	0xE008 0014)		State: 0x78	
21.8.8	Selecting the appropriate I ² C data rate and duty		State: 0x80	
21.0.0	cycle		State: 0x88	
21.9			State: 0x90	
	Details of I²C operating modes. 518 Master Transmitter mode 519	21.10.9.8	State: 0x98	540
21.9.1		21.10.9.9	State: 0xA0	540
21.9.2 21.9.3	Master Receiver mode	21.10.10	Slave Transmitter States	541
21.9.3 21.9.4	Slave Receiver mode	21.10.10.	1 State: 0xA8	541
	Slave Transmitter mode	21.10.10.	2 State: 0xB0	541
21.9.5 21.9.5.1	I2STAT = 0xF8	21.10.10.	3 State: 0xB8	541
21.9.5.1 21.9.5.2			4 State : 0xC0	
21.9.5.2 21.9.6	Some special cases	21.10.10.	5 State: 0xC8	542
	er 22: LPC23XX I2S interface			
 22.1	Basic configuration 543	22.4 F	Pin descriptions	544
22.2	Features		Register description	
22.3	Description	22.5.1	Digital Audio Output Register (I2SDAO -	5
	2000.ipiioii		0xE008 8000)	546
			,	-

22.5.2	Digital Audio Input Register (I2SDAI - 0xE008 8004)	547	22.5.7	DMA Configuration Register 2 (I2SDMA2 - 0xE008 8018)	548
22.5.3	Transmit FIFO Register (I2STXFIFO - 0xE008 8008)		22.5.8	Interrupt Request Control Register (I2SIRQ - 0xE008 801C)	
22.5.4	Receive FIFO Register (I2SRXFIFO -		22.5.9	Transmit Clock Rate Register (I2STXRATE -	
22.5.5	0xE008 800C)		22.5.10	0xE008 8020)	
22.5.6	0xE008 8010)	548	22.6	0xE008 8024)	
	0xE008 8014)	548	22.7	FIFO controller	
Chapt	er 23: LPC23XX Timer0/1/2/3				
23.1	Basic configuration		23.6.5	Prescale register (T0PR - T3PR, 0xE000 400	
23.2	Features		22.6.6	0xE000 800C, 0xE007 000C, 0xE007 400C)	558
23.3	Applications	553	23.6.6	Prescale Counter register (T0PC - T3PC, 0xE000 4010, 0xE000 8010, 0xE007 0010,	
23.4	Description	554		0xE007 4010)	558
23.5	Pin description	554	23.6.7	Match Registers (MR0 - MR3)	
23.5.1	Multiple CAP and MAT pins	554	23.6.8	Match Control Register (T[0/1/2/3]MCR -	000
23.6	Register description	554		0xE000 4014, 0xE000 8014, 0xE007 0014,	
23.6.1	Interrupt Register (T[0/1/2/3]IR - 0xE000 400			0xE007 4014)	559
	0xE000 8000, 0xE007 0000, 0xE007 4000).		23.6.9	Capture Registers (CR0 and CR1)	560
23.6.2	Timer Control Register (T[0/1/2/3]CR -		23.6.10	Capture Control Register (T[0/1/2/3]CCR -	
	0xE000 4004, 0xE000 8004, 0xE007 0004,			0xE000 4028, 0xE000 8028, 0xE007 0028,	
	0xE007 4004)	556	00 0 44	0xE007 4028)	560
23.6.3	Count Control Register (T[0/1/2/3]CTCR -		23.6.11	External Match Register (T[0/1/2/3]EMR -	
	0xE000 4070, 0xE000 8070, 0xE007 0070,	<i>EE</i> 7		0xE000 403C, 0xE000 803C, 0xE007 003C, 0xE007 403C)	
	0xE007 4070)	55 <i>1</i>		0XE007 403C)	301
22 6 4	Timor Counter registers (TOTC To	TC.	22.7		FCO
23.6.4	Timer Counterregisters (T0TC - T3	BTC,	23.7	Example timer operation	
23.6.4	Timer Counterregisters (T0TC - T3 0xE000 4008, 0xE000 8008, 0xE007 0008, 0xE007 4008)		23.7 23.8		
	0xE000 4008, 0xE000 8008, 0xE007 0008,	558	23.8	Example timer operation	
	0xE000 4008, 0xE000 8008, 0xE007 0008, 0xE007 4008)	558 tor (PV	23.8	PWM Interrupt Register (PWM1IR - 0xE001	562
Chapt	0xE000 4008, 0xE000 8008, 0xE007 0008, 0xE007 4008)	558 tor (PV 564	23.8 VM) 24.7.1	PWM Interrupt Register (PWM1IR - 0xE001 8000)	562
Chapt 24.1	0xE000 4008, 0xE000 8008, 0xE007 0008, 0xE007 4008) er 24: LPC23XX Pulse Width Modula Basic configuration	558 tor (PV 564 564	23.8 VM)	PWM Interrupt Register (PWM1IR - 0xE001 8000)	562 570
Chapt 24.1 24.2	0xE000 4008, 0xE000 8008, 0xE007 0008, 0xE007 4008)	558 tor (PV 564 564	23.8 VM) 24.7.1 24.7.2	PWM Interrupt Register (PWM1IR - 0xE001 8000)	562 570 571
Chapt 24.1 24.2 24.3	0xE000 4008, 0xE000 8008, 0xE007 0008, 0xE007 4008)	558 tor (PV 564 564 565	23.8 VM) 24.7.1	PWM Interrupt Register (PWM1IR - 0xE001 8000)	562 570 571
Chapt 24.1 24.2 24.3	0xE000 4008, 0xE000 8008, 0xE007 0008, 0xE007 4008)	558 tor (PV 564 564 565 567	23.8 VM) 24.7.1 24.7.2 24.7.3	PWM Interrupt Register (PWM1IR - 0xE001 8000)	562 570 571
Chapt 24.1 24.2 24.3 24.4	0xE000 4008, 0xE000 8008, 0xE007 0008, 0xE007 4008)	558 tor (PV 564 564 565 567	23.8 VM) 24.7.1 24.7.2	PWM Interrupt Register (PWM1IR - 0xE001 8000)	570 571 571
Chapt 24.1 24.2 24.3 24.4	0xE000 4008, 0xE000 8008, 0xE007 0008, 0xE007 4008)	558 tor (PV 564 564 565 567	23.8 VM) 24.7.1 24.7.2 24.7.3	PWM Interrupt Register (PWM1IR - 0xE001 8000)	570 571 571 572
Chapt 24.1 24.2 24.3 24.4 24.4.1	0xE000 4008, 0xE000 8008, 0xE007 0008, 0xE007 4008) er 24: LPC23XX Pulse Width Modula Basic configuration Features Description Sample waveform with rules for single and double edge control Rules for Single Edge Controlled PWM Outputs Rules for Double Edge Controlled PWM Outputs	558 tor (PV 564 564 565 567 568	23.8 VM) 24.7.1 24.7.2 24.7.3 24.7.4	PWM Interrupt Register (PWM1IR - 0xE001 8000)	570 571 571 572
Chapt 24.1 24.2 24.3 24.4 24.4.1 24.4.2	0xE000 4008, 0xE000 8008, 0xE007 0008, 0xE007 4008) er 24: LPC23XX Pulse Width Modula Basic configuration Features Description Sample waveform with rules for single and double edge control Rules for Single Edge Controlled PWM Outputs Rules for Double Edge Controlled PWM Outputs Pin description	558 tor (PV 564 564 565 567 568 568	23.8 VM) 24.7.1 24.7.2 24.7.3 24.7.4	PWM Interrupt Register (PWM1IR - 0xE001 8000)	570 571 571 572
Chapt 24.1 24.2 24.3 24.4 24.4.1	0xE000 4008, 0xE000 8008, 0xE007 0008, 0xE007 4008) er 24: LPC23XX Pulse Width Modula Basic configuration Features Description Sample waveform with rules for single and double edge control. Rules for Single Edge Controlled PWM Outputs Rules for Double Edge Controlled PWM Outputs Pin description PWM base addresses	558 tor (PV 564 564 565 567 568 568 568 569	23.8 VM) 24.7.1 24.7.2 24.7.3 24.7.4 24.7.5 24.7.6	PWM Interrupt Register (PWM1IR - 0xE001 8000)	570 571 571 572
Chapt 24.1 24.2 24.3 24.4 24.4.1 24.4.2	0xE000 4008, 0xE000 8008, 0xE007 0008, 0xE007 4008) er 24: LPC23XX Pulse Width Modula Basic configuration Features Description Sample waveform with rules for single and double edge control Rules for Single Edge Controlled PWM Outputs Rules for Double Edge Controlled PWM Outputs Pin description	558 tor (PV 564 564 565 567 568 568 568 569	23.8 VM) 24.7.1 24.7.2 24.7.3 24.7.4 24.7.5	PWM Interrupt Register (PWM1IR - 0xE001 8000)	570 571 571 572 574 575
Chapt 24.1 24.2 24.3 24.4 24.4.1 24.4.2 24.5 24.6 24.7	0xE000 4008, 0xE000 8008, 0xE007 0008, 0xE007 4008) er 24: LPC23XX Pulse Width Modula Basic configuration Features Description Sample waveform with rules for single and double edge control. Rules for Single Edge Controlled PWM Outputs Rules for Double Edge Controlled PWM Outputs Pin description PWM base addresses Register description	558 tor (PV 564 564 565 567 568 568 568 569 569	23.8 VM) 24.7.1 24.7.2 24.7.3 24.7.4 24.7.5 24.7.6	PWM Interrupt Register (PWM1IR - 0xE001 8000)	570 571 571 572 574
Chapt 24.1 24.2 24.3 24.4 24.4.1 24.4.2 24.5 24.5 24.6 24.7 Chapt	0xE000 4008, 0xE000 8008, 0xE007 0008, 0xE007 4008) er 24: LPC23XX Pulse Width Modula Basic configuration Features Description Sample waveform with rules for single and double edge control. Rules for Single Edge Controlled PWM Outputs Rules for Double Edge Controlled PWM Outputs Pin description PWM base addresses Register description er 25: LPC23XX WatchDog Timer (W	558 tor (PV 564 564 565 567 568 568 568 569 569 DT)	23.8 VM) 24.7.1 24.7.2 24.7.3 24.7.4 24.7.5 24.7.6 24.7.7	PWM Interrupt Register (PWM1IR - 0xE001 8000)	570 571 571 572 574 575 576
Chapt 24.1 24.2 24.3 24.4 24.4.1 24.4.2 24.5 24.6 24.7 Chapt 25.1	0xE000 4008, 0xE000 8008, 0xE007 0008, 0xE007 4008) er 24: LPC23XX Pulse Width Modula Basic configuration Features Description Sample waveform with rules for single and double edge control. Rules for Single Edge Controlled PWM Outputs Rules for Double Edge Controlled PWM Outputs Pin description PWM base addresses Register description er 25: LPC23XX WatchDog Timer (W	558 tor (PV 564 564 565 567 568 568 568 569 569 DT) 578	23.8 VM) 24.7.1 24.7.2 24.7.3 24.7.4 24.7.5 24.7.6	PWM Interrupt Register (PWM1IR - 0xE001 8000)	570 571 571 572 574 575
Chapt 24.1 24.2 24.3 24.4 24.4.1 24.4.2 24.5 24.6 24.7 Chapt 25.1 25.2	0xE000 4008, 0xE000 8008, 0xE007 0008, 0xE007 4008) er 24: LPC23XX Pulse Width Modula Basic configuration Features Description Sample waveform with rules for single and double edge control. Rules for Single Edge Controlled PWM Outputs Rules for Double Edge Controlled PWM Outputs Pin description PWM base addresses Register description er 25: LPC23XX WatchDog Timer (W	558 tor (PV 564 564 565 567 568 568 569 569 DT) 578 578	23.8 VM) 24.7.1 24.7.2 24.7.3 24.7.4 24.7.5 24.7.6 24.7.7	PWM Interrupt Register (PWM1IR - 0xE001 8000)	570 571 571 572 574 575
Chapt 24.1 24.2 24.3 24.4 24.4.1 24.4.2 24.5 24.6 24.7 Chapt 25.1 25.2 25.3	0xE000 4008, 0xE000 8008, 0xE007 0008, 0xE007 4008) er 24: LPC23XX Pulse Width Modula Basic configuration Features Description Sample waveform with rules for single and double edge control. Rules for Single Edge Controlled PWM Outputs Rules for Double Edge Controlled PWM Outputs Pin description PWM base addresses Register description er 25: LPC23XX WatchDog Timer (W Features Introduction Description	558 tor (PV 564 564 565 567 568 568 568 569 569 DT) 578 578 578	23.8 VM) 24.7.1 24.7.2 24.7.3 24.7.4 24.7.5 24.7.6 24.7.7	PWM Interrupt Register (PWM1IR - 0xE001 8000)	570 571 571 572 574 575
Chapt 24.1 24.2 24.3 24.4 24.4.1 24.4.2 24.5 24.6 24.7 Chapt 25.1 25.2	0xE000 4008, 0xE000 8008, 0xE007 0008, 0xE007 4008) er 24: LPC23XX Pulse Width Modula Basic configuration Features Description Sample waveform with rules for single and double edge control. Rules for Single Edge Controlled PWM Outputs Rules for Double Edge Controlled PWM Outputs Pin description PWM base addresses Register description er 25: LPC23XX WatchDog Timer (W	558 tor (PV 564 564 565 567 568 568 568 569 569 DT) 578 578 578	23.8 VM) 24.7.1 24.7.2 24.7.3 24.7.4 24.7.5 24.7.6 24.7.7	PWM Interrupt Register (PWM1IR - 0xE001 8000)	570 571 571 572 574 575 576

25.4.5	Watchdog Timer Clock Source Selection Register (WDCLKSEL - 0xE000 0010) 581	25.5	Block diagram	582
Chapt	er 26: LPC23XX Real Time Clock (RTC) ar	nd batter	y RAM	
26.1	How to read this chapter 583	26.7.3.1	9 (500
26.2	Basic configuration 583	00700	0xE002 4014)	589
26.3	Features	26.7.3.2		E00
26.4	Description 583	26.7.3.3	0xE002 4018) Consolidated Time Register 2 (CTIME2 -	590
26.5	Architecture	20.7.3.3	0xE002 401C)	590
26.6	Pin description 584	26.7.4	Time Counter Group	590
26.7	Register description	26.7.4.1		591
26.7.1	•	26.7.5	Alarm register group	591
26.7.1	RTC interrupts	26.7.6	RTC clock generation	592
26.7.2.1		26.7.6.1	<u> </u>	592
	4000)	26.7.6.2	Prescaler Integer Register (PREINT -	
26.7.2.2	9 (26762	0xE002 4080)	592
	0xE002 4004)	26.7.6.3		500
26.7.2.3		26764	0xE002 4084)	593
26.7.2.4	1 5 \	26.7.6.4 26.7.6.5		593
	0xE002 400C)		•	594
26.7.2.5	•	26.8	RTC usage notes	595
20.7.2.0	0xE002 4040)	26.8.1	Alarm output	596
26.7.2.6	5 (26.9	Battery RAM	596
26.7.3	Consolidated time registers 589	26.10	RTC external 32 kHz oscillator component	
			selection	596
Chapt	er 27: LPC23XX Analog-to-Digital Convert	ter (ADC	2)	
27.1	How to read this chapter 598	27.6.3	A/D Status Register (AD0STAT - 0xE003	
27.2	Basic configuration 598		4030)	602
27.3	Features	27.6.4	A/D Interrupt Enable Register (AD0INTEN -	
27.4	Description	07.0.5	0xE003 400C)	603
27.5	Pin description	27.6.5	A/D Data Registers (AD0DR0 to AD0DR7 -	602
27.6	Register description 599		0xE003 4010 to 0xE003 402C)	603
27.6.1	A/D Control Register (AD0CR - 0xE003	27.7	Operation	604
27.0.1	4000)	27.7.1	Hardware-triggered conversion	604
27.6.2	A/D Global Data Register (AD0GDR -	27.7.2	Interrupts	604
27.0.2	0xE003 4004) 601	27.7.3	Accuracy vs. Digital Receiver	604
	·			
Chapt	er 28: LPC23XX Digital-to Analog Convert	ter (DAC)	
28.1	Basic configuration 605	28.4	Register description (DACR - 0xE006 C000)	605
28.2	Features 605	28.5	Operation	606
28.3	Pin description		•	
Chapt	er 29: LPC23XX Flash memory programm	ing firm	ware	
29.1	Introduction 607	29.3.2.3	S ISP data format	609
	Features	29.3.2.4		609
29.2		29.3.2.5		610
29.3	Description	29.3.2.6		610
29.3.1	Memory map after any reset	29.3.2.7		610
29.3.1.1		29.3.2.8		610
29.3.2	Communication protocol	29.3.2.9		610
29.3.2.1			0 RAM used by RealMonitor	610
29.3.2.2	ISP response format	29.4	Boot process flowchart	
		23.4	Doot process nowundit	. 011

Chapter 34: Supplementary information

29.5	Sector numbers	612	29.7.11	Read Part Identification number 619
29.6	Code Read Protection (CRP)	613	29.7.12	Read Boot code version number 620
29.7	ISP commands	614	29.7.13	Compare <address1> <address2> <no of<="" th=""></no></address2></address1>
29.7.1	Unlock <unlock code=""></unlock>	615	00 7 4 4	bytes> 621
29.7.2	Set Baud Rate <baud rate=""> <stop bit=""></stop></baud>	615	29.7.14	ISP Return Codes 621
29.7.3	Echo <setting></setting>	616	29.8	IAP commands 622
29.7.4	Write to RAM <start address=""> <number of<="" th=""><th></th><th>29.8.1</th><th>Prepare sector(s) for write operation 624</th></number></start>		29.8.1	Prepare sector(s) for write operation 624
	bytes>	616	29.8.2	Copy RAM to flash
29.7.5	Read Memory <address> <no. bytes="" of=""></no.></address>	616	29.8.3	Erase Sector(s) 625
29.7.6	Prepare sector(s) for write operation <start se<="" th=""><th>ector</th><th>29.8.4</th><th>Blank check sector(s)</th></start>	ector	29.8.4	Blank check sector(s)
	number> <end number="" sector=""></end>	617	29.8.5	Read Part Identification number 626
29.7.7	Copy RAM to flash <flash address=""> <ram< th=""><th></th><th>29.8.6</th><th>Read Boot code version number 626</th></ram<></flash>		29.8.6	Read Boot code version number 626
	address> <no bytes="" of=""></no>	618	29.8.7	Compare <address1> <address2> <no of<="" th=""></no></address2></address1>
29.7.8	Go <address> <mode></mode></address>	618		bytes> 627
29.7.9	Erase sector(s) <start number="" sector=""> <end< th=""><th></th><th>29.8.8</th><th>Reinvoke ISP</th></end<></start>		29.8.8	Reinvoke ISP
	sector number>		29.8.9	IAP Status Codes 627
29.7.10	Blank check sector(s) <sector number=""> <end< th=""><th></th><th>29.9</th><th>JTAG flash programming interface 628</th></end<></sector>		29.9	JTAG flash programming interface 628
	sector number>	619		
Chapt	er 30: LPC23XX General Purpose DN	IA (GP	DMA) d	controller
30.1	Basic configuration	629	30.7.5	Disabling a DMA Channel Without Losing Data in
30.2	Introduction	629		the FIFO 637
30.3	Features of the GPDMA		30.7.6	Setup a New DMA Transfer 637
30.4	Functional overview		30.7.7	Disabling a DMA Channel and Losing Data in the
30.4.1				FIFO 638
30.4.1	Memory regions accessible by the GPDMA. GPDMA functional description		30.7.8	Halting a DMA Transfer 638
30.4.2.1			30.7.9	Programming a DMA Channel 638
30.4.2.2			30.8	Summary of GPDMA registers 638
30.4.2.3			30.9	Register descriptions 640
30.4.2.4	• •		30.9.1	Interrupt Status Register (DMACIntStatus -
30.4.2.5	~			0xFFE0 4000) 640
30.4.2.6	·		30.9.2	Interrupt Terminal Count Status Register
30.4.2.7				(DMACIntTCStatus - 0xFFE0 4004) 640
30.4.2.8			30.9.3	Interrupt Terminal Count Clear Register
30.4.2.9				(DMACIntClear - 0xFFE0 4008) 640
30.4.2.1	0 Channel Hardware	635	30.9.4	Interrupt Error Status Register
30.4.2.1	1 DMA Request Priority	635		(DMACIntErrorStatus - 0xFFE0 400C) 641
30.4.2.1	2 Interrupt Generation	635	30.9.5	Interrupt Error Clear Register (DMACIntErrClr -
	3 The completion of the DMA transfer			0xFFE0 4010) 641
	indication	635	30.9.6	Raw Interrupt Terminal Count Status Register
30.4.3	DMA System Connections	635		(DMACRawIntTCStatus - 0xFFE0 4014) 641
30.5	Programmer's model	636	30.9.7	Raw Error Interrupt Status Register
30.6	About the programmer's model		20.0.0	(DMACRawIntErrorStatus - 0xFFE0 4018) . 642
30.7	Programming the GPDMA		30.9.8	Enabled Channel Register (DMACEnbldChns -
30.7.1	Enabling the GPDMA		20.00	0xFFE0 401C) 642 Software Burst Request Register
30.7.1	Disabling the GPDMA		30.9.9	
30.7.3	Enabling a DMA Channel		30.9.10	(DMACSoftBReq - 0xFFE0 4020) 642 Software Single Request Register
30.7.4	Disabling a DMA Channel		50.3.10	(DMACSoftSReq - 0xFFE0 4024) 643
				(DIVINOUNICINEY - UNI FEU 4024) 043

continued >>

Chapter 34: Supplementary information

30.9.11	Software Last Burst Request Register (DMACSoftLBreq - 0xFFE0 4028)	643	30.10.6	Channel Configuration Registers (DMACC0Configuration - 0xFFE0 4110 and	
30.9.12	Software Last Single Request Register			DMACC1Configuration - 0xFFE0 4130)	649
	(DMACSoftLSReq - 0xFFE0 402C)		30.10.7		651
30.9.13	Configuration Register (DMACConfiguration -		30.10.8		
00 0 4 4	0xFFE0 4030)	644	30.11	Address generation	651
30.9.14	Synchronization Register (DMACSync -	645	30.12	Scatter/Gather	652
20.40	0xFFE0 4034)		30.12.1		652
	Channel registers	645	30.12.2	3	
30.10.1	Channel Source Address Registers (DMACC0SrcAddr - 0xFFE0 4100 and		00.40.0		652
	DMACC0SrcAddr - 0xFFE0 4100 and	646	30.12.3		653
30.10.2	Channel Destination Address Registers	0+0	30.13		
00.10.2	(DMACC0DestAddr - 0xFFE0 4104 and		30.13.1	·	654
	DMACC1DestAddr - 0xFFE0 4124)	646	30.13.2		655
30.10.3	Channel Linked List Item Registers (DMACC)		30.14	GPDMA data flow	
	- 0xFFE0 4108 and DMACC1LLI - 0xFFE0		30.14.1	Peripheral-to-memory, or Memory-to-peripher	
	4128)	646			
30.10.4	Channel Control Registers (DMACC0Control	-	30.14.2		
	0xFFE0 410C and DMACC0Control -		30.14.3		
	0xFFE0 412C)		30.15	Flow control	657
30.10.5	Protection and Access Information	648			
Chapte	er 31: LPC23XX EmbeddedTrace Mo	dule (E	TM)		
31.1	Features	658	31.4	Pin description	659
31.2	Applications	658	31.5	Register description	659
31.3	Description		31.6	-	
31.3.1	ETM configuration		31.7		
	-		•	2.000. diag.a	
Chapte	er 32: LPC23XX EmbeddedICE logic				
32.1	Features	662	32.5	JTAG usage notes	664
32.2	Applications	662	32.6	Register description	664
32.3	Description	662	32.7	Block diagram	664
32.4	Pin description				
	er 33: LPC23XX RealMonitor				
			00.4.4	0.10.14	
33.1	Features		33.4.4	SVC Mode	
33.2	Applications		33.4.5	Prefetch Abort Mode	
33.3	Description		33.4.6 33.4.7	Data Abort Mode	670
33.3.1	RealMonitor Components		33.4.8	•	670
33.3.1.1	RMHost		33.4.9		670
33.3.1.2			33.4.9.1		670
33.3.2	How RealMonitor Works		33.4.10	, ,	671
33.4	How to Enable RealMonitor		33.4.11	•	671
33.4.1	Adding Stacks		33.5	-	674
33.4.2	IRQ Mode			•	
33.4.3	Undef Mode	609			

continued >>

Chapter 34: Supplementary information

Chapter 34: Supplementary information

34.2 34.2.1 34.2.2	Legal information	678 678 678	34.4	Tables Figures Contents	690
34.2.3	Trademarks	678			

Please be aware that important notices concerning this document and the product(s) described herein, have been included in section 'Legal information'.