Embedded Systems Concepts

Computing System Definition


A device capable for performing mathematical and logical operations in accordance with a predetermined set of instructions.



Computing System Components

Any computing system consists of 3 main components:

- 1- <u>Processor</u> which is responsible for performing the instructions.
- 2- <u>Memory</u> which is responsible for storing the program
- 3- <u>Input / Output peripherals</u> for interacting with the user.

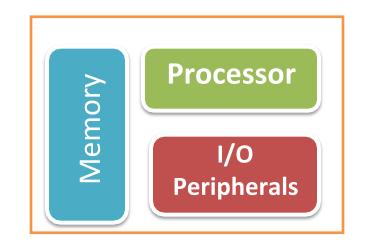

Embedded System Definition

Embedded system is a computing system with limited resources (Processor, Memory and I/O) used for performing a specific task.



Personal Computer



Embedded System



Computer is for general purpose use and with huge resources



Embedded system is for specific purpose and with limited resources

Embedded Systems Challenges

1- Performance



3- Power Consumption



2- Size



Cost



ES Implementation Techniques

System on Board SB



System on Chip SOC



performance

size

cost

Power consumption

configurability

High

High

High

Easy

Low

Low

Low

NA


When To use ...?

System Board



For Development and Design phase

System On Chip

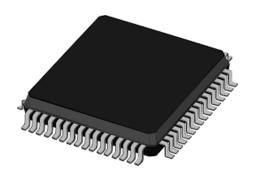

For Production after Design

Microcontroller Definition

The microcontroller is a system on chip consists of processor, memory and I/O peripherals. So, it looks like an IC but inside it has all the needed elements to make an ES and ready for programming.



Microcontroller Vs. Microprocessor

<u>Microcontroller</u> -> is a system on chip, contains processor, memory and I/O.

<u>Microprocessor</u> -> is one element from the needed 3 elements to make ES. So it needs memory and I/O.

Question ...


What is the difference between the following:


- 1- Processor
- 2- Microprocessor
- 3- Central Processing Unit (CPU)

Answer...

In the past, processor was made of vacuum tubes, it was very huge like a whole building. When the silicon industry came to the scene, a new processor was developed in small size. To differentiate between the two processor at this time, the vacuum tube one was called a processor while the silicon based IC was called a microprocessor (Micro refers to a smaller in size one). But in the current days, there is no processor based on vacuum tube, so there is no processor and microprocessor, all processors are small in size. So, the words processor and microprocessor are now interchangeable words. They are referring to the same thing.

When you have a system that contains more than one processor, one of them would be the master one, it would control all other processor. This one is called the **Central Processing Unit CPU**.

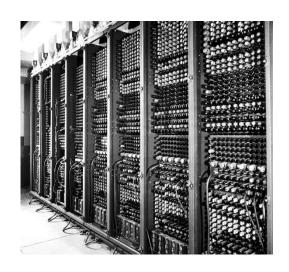

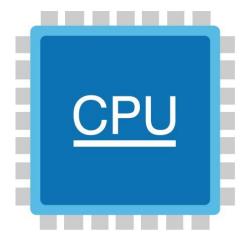


The Processor

The 3 main steps by processor:


1- Fetch

2- Decode

3- Execute

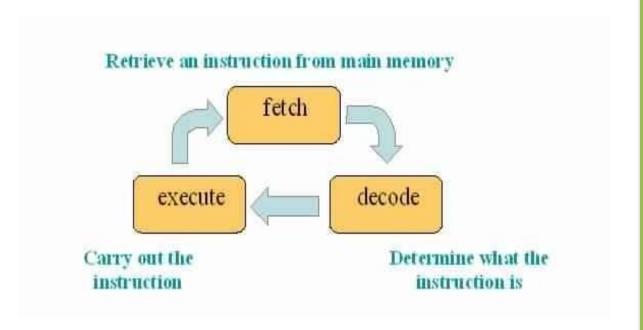

Inside the processor

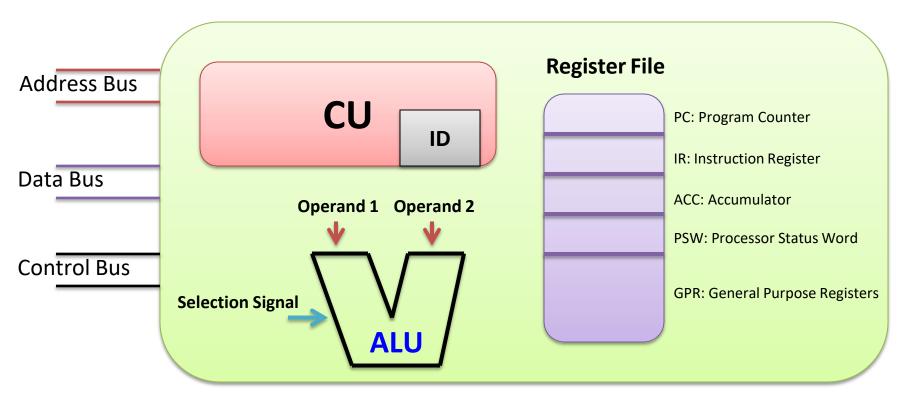


CU: Control Unit

ID: Instruction Decoder ALU: Arithmetic Logic Unit

1- Fetch :

By CU "Control Unit" from the main memory.

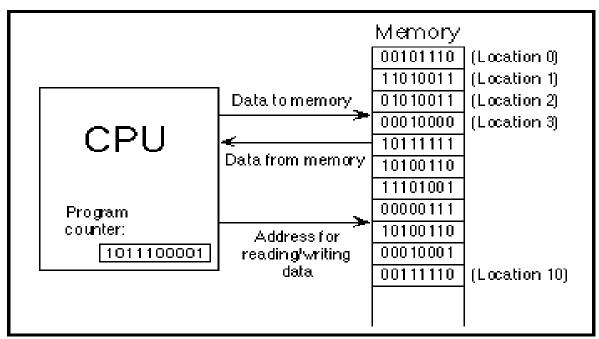

2- Decode:

Inside CU "Control Unit" by ID "Instruction Decoder".

Every processor has its **instruction set** which is the group of instructions that could be executed by the processor.

Every instruction has a unique binary representation called "Opcode".

The decoding step is responsible for defining the operation required by the instruction fetched from the memory, and defining the operands of this instruction then pass these information to the ALU.

Instruction Set

Instruction	Op Code
ADD	011
SUB	101
AND	110
OR	001
XOR	111
SHIFT	100

Note, The instruction set differs from a processor to other in number of instructions, type of instruction and even for op code of the similar instructions

Decoding Example

Given the shown instruction format of a certain processor and the same instruction set mentioned in the previous slide, the CU fetched the following instruction:

Instruction Format

Op Code	Operand 1	Operand 2
3 bit	3 bit	2 bit



Back to the instruction set, we will find that 101 is the op code for SUB operation. This means that this instruction is:

SUB 6 3

Instruction Set Architecture ISA

RISC

"Reduced Instruction Set Architecture"

"Complex Instruction Set Architecture"

CISC

Performance	Same	Same
Cost	Same	Same
Size	Same	Same
Power Consumption	Same	Same

Performance

Assume the following C line of code:

$$\int int x = 3 * 4 ;$$

In CISC Processor

This C line of code will be converted into a **single** line of assembly, because the CISC machine includes many instructions and most probably includes the multiplication instruction.

But, The decoding phase takes many cycles in CISC machine because it decodes against a lot of instructions. It takes approximately 4 clock cycles.

In RISC Processor

This C line of code will be converted into more than one instruction (approximately 4) because most probably the RISC machine doesn't support the multiplication instruction. But, the instruction in RISC machine takes only 1 clock cycle because it decodes against few numbers of instructions.

<u>The result</u> is that this line of code takes 4 clock cycles in both CISC and RISC machine, So they are **equivalent** in performance.

<u>Cost</u>

The cost of an Embedded Systems environment consists of two levels:

- 1- Hardware level
- 2- Software level (Tool chain license and development tools).

In CISC processor, the *hardware is high cost* because its ALU contains many logic circuits for their many instructions. But it is tool chain it not complex, as every line in the C code would be easily reflected in the instruction set thanks to its big instruction set which has a lot of options.

In RISC processor, the hardware is not high cost while the *software development tools are very high cost* because its instruction set is very limited to basic instructions only which makes the compiler do extra effort in order to convert the C code into assembly.





The result is that both of them will have the same cost at the end

<u>Size</u>

Before comparing the size of both CISC and RISC, Note that there are two types of "Instruction Decoder ID

Hardwired

Uses hardware logic gates to decode Instructions i.e. the decoding is done by algorithm implemented in hardware logic gates. It is Very fast and big in size part comparing to the next type.

Micro-Programmed

The decoding is done by software algorithm implemented on a mirco programmed memory. it is Slow, low cost and small in size.

Power Consumption

Although CISC machine has more powerful ALU, but actually only one circuit inside the ALU is enabled at time either in RISC or in CISC. For that reason CISC and RISC and consuming the same amount of power.



Instruction Set Architecture

So, it is now clear that CISC is not better that RISC or vice versa. It is all about the company mentality. **Intel** is one of the biggest companies in the market and it uses CISC machines, while **ARM** which is also one of the biggest companies in processor designing uses RISC.


Note that not all the ISA are only CISC and RISC, other types are existing but it has some drawbacks or used for specific reasons, like:

- OISC "One Instruction Set Computing"
- NISC "No Instruction Set Computing"
- ZISC "Zero Instruction Set Computing"

3- Execute:

By ALU "Athematic Logic Unit".

It contains many logic gates for all the supported instructions.

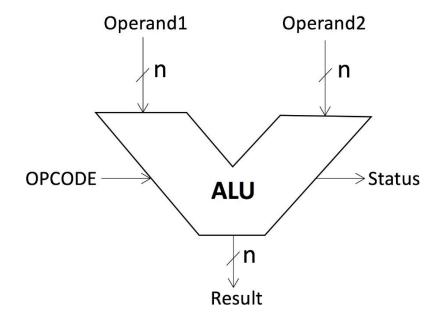

Register File

It is certain type of memory existing in the processor. Each word is called register and has a specific usage. The register file differs from processor to other, but the following are the common registers:


PC "Program Counter": Address of the next instruction to fetch, decode and execute.

IR "Instruction Register": Fetched instruction to be decoded and executed.

ACC "Accumulator": The Real Result From ALU.


PSW "Processor Status Word": Word Byte Holds flags about the result "Status".

GPR "General Purpose Registers": General registers used by the user to define high speed accessed data using the C keyword 'register'.

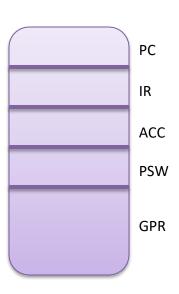


Exercise


Consider the following processor, perform one complete processor cycle

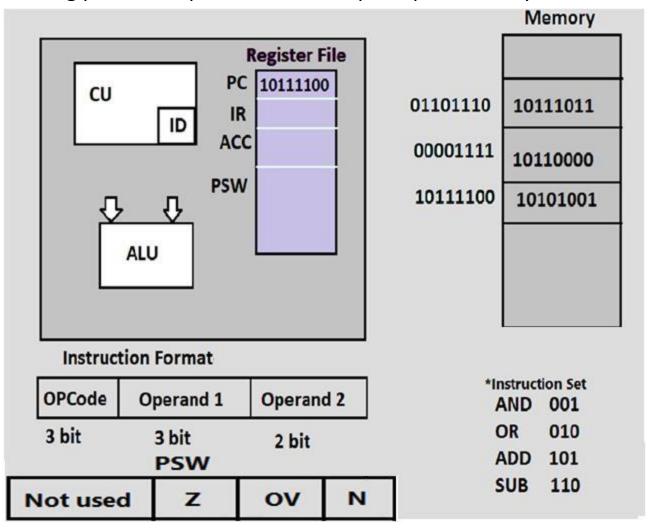


Step1: Fetch

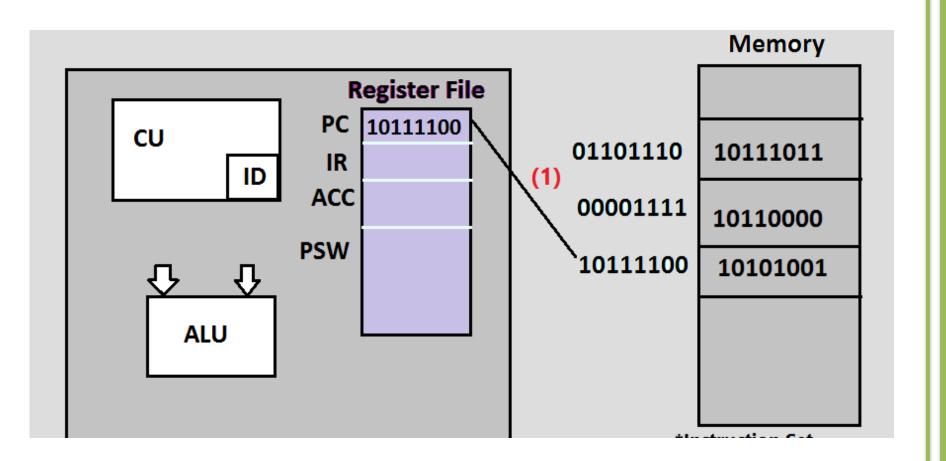


Step1: Fetch

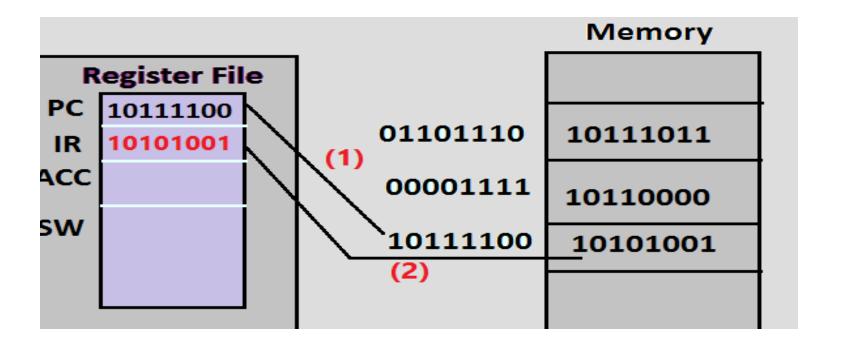


Step2: Decode

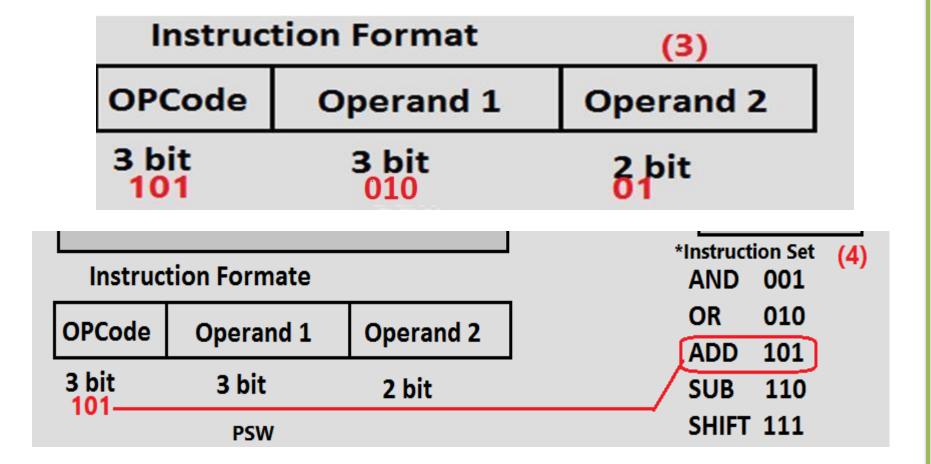


Step2: Decode

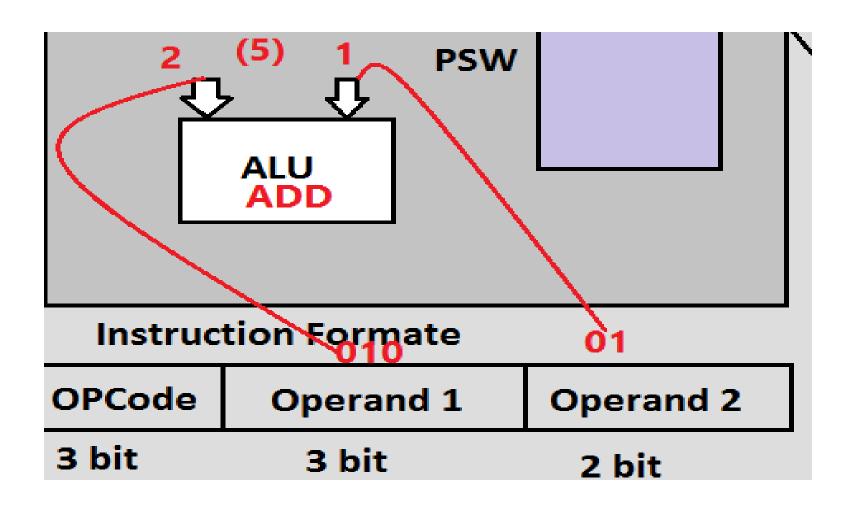

Step3: Execute

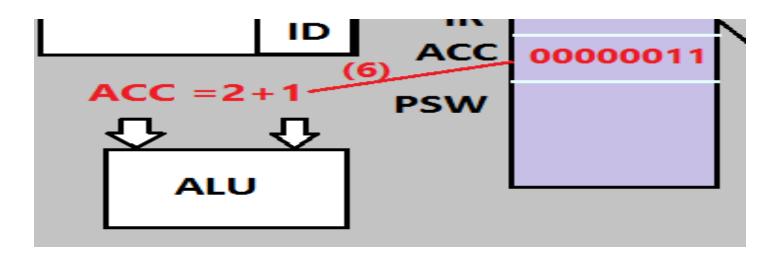

Step3: Execute

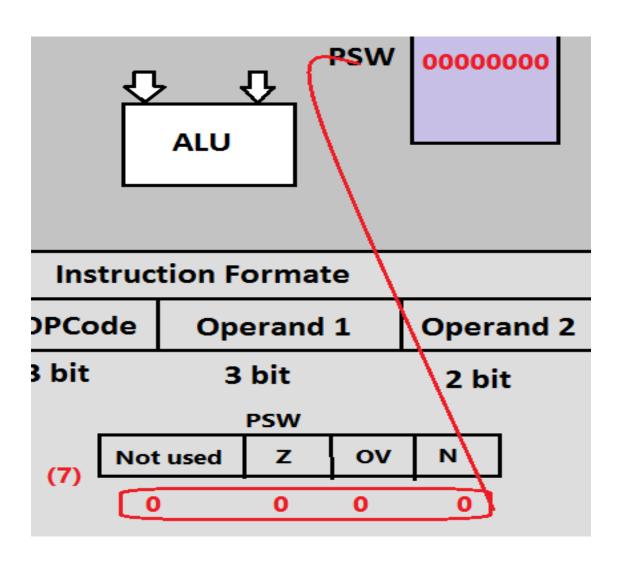

Thanks