I/O Organization

Contents

- I/O Organization
- Input-Output Interface
- Asynchronous Data Transfer
- Asynchronous Serial Transmission
- Modes of Data Transfer
- Programmed I/O
- Interrupt-Initiated I/O
- Direct Memory Access (DMA)

I/O Organization

The Input / output organization of computer depends upon the size of computer and the peripherals connected to it. The I/O Subsystem of the computer, provides an efficient mode of communication between the central system and the outside environment.

I/O Organization

The most common input output devices are:

- i) Monitor
- ii) Keyboard
- iii) Mouse
- iv) Printer
- v) Magnetic tapes

The devices that are under the direct control of the computer are said to be connected online.

Input - Output Interface

Input Output Interface provides a method for transferring information between internal storage and external I/O devices. Peripherals connected to a computer need special communication links for interfacing them with the central processing unit.

Input - Output Interface

The purpose of communication link is to resolve the differences that exist between the central computer and each peripheral.

The Major Differences are:-

- Peripherals are electromechnical and electromagnetic devices and their manner of operation of the CPU and memory, which are electronic devices. Therefore, a conversion of signal values may be needed.
- The data transfer rate of peripherals is usually slower than the transfer rate of CPU and consequently, a synchronization mechanism may be needed.

The Major Differences are:-

- 3. Data codes and formats in the peripherals differ from the word format in the CPU and memory.
- 4. The operating modes of peripherals are different from each other and must be controlled so as not to disturb the operation of other peripherals connected to the CPU.

Input - Output Interface

To Resolve these differences, computer systems include special hardware components between the CPU and Peripherals to supervises and synchronizes all input and out transfers. These components are called Interface Units because they interface between the processor bus and the peripheral devices.

It defines the typical link between the processor and several peripherals. The I/O Bus consists of data lines, address lines and control lines.

The I/O bus from the processor is attached to all peripherals interface.

To communicate with a particular device, the processor places a device address on address lines.

Each Interface **decodes** the address and control received from the I/O bus, interprets them for peripherals and provides signals for the **peripheral controller**.

It is also synchronizes the data flow and supervises the transfer between peripheral and processor.

Each peripheral has its own controller.


For example, the printer controller controls the paper motion, the print timing.

The control lines are referred as an I/O command. The commands are as following:

- Control command- A control command is issued to activate the peripheral and to inform it what to do.
- **Status command-** A status command is used to test various status conditions in the interface and the peripheral.

Output data command- A data output command causes the interface to respond by transferring data from the bus into one of its registers.

Input data command- The data input command is the opposite of the data output. In this case the interface receives on item of data from the peripheral and places it in its buffer register.

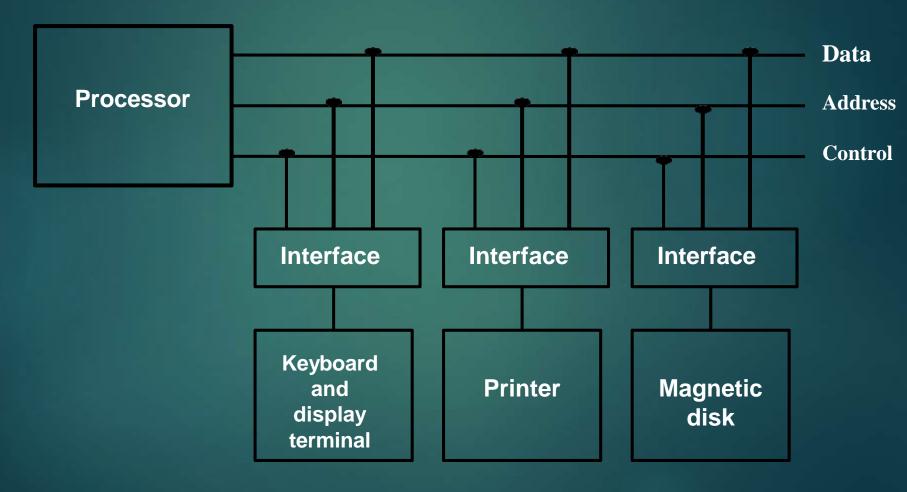

Connection of I/O bus to input-output devices

I/O Versus Memory Bus

To communicate with I/O, the processor must communicate with the memory unit.

Like the I/O bus, the memory bus contains data, address and read/write control lines.

There are 3 ways that computer buses can be used to communicate with memory and I/O:

- ❖ Use two Separate buses , one for memory and other for I/O.
- Use one common bus for both memory and I/O but separate control lines for each.
- ❖ Use one common bus for memory and I/O with common control lines.

I/O Processor


In the first method, the computer has independent sets of data, address and control buses one for accessing memory and other for I/O. This is done in computers that provides a separate I/O processor (IOP). The purpose of IOP is to provide an independent pathway for the transfer of information between external device and internal memory.

Isolated I/O

In case of Isolated I/O we have common bus(data and address) for I/O and memory but separate read and write control lines for I/O.

So when CPU decode instruction then if data is for I/O then it places the address on the address line and set I/O read or write control line ON due to which data transfer occurs between CPU and I/O.


As the address space of memory and I/O is isolated and the name is so. The address for I/O here is called ports. Here we have different read-write instruction for both I/O and

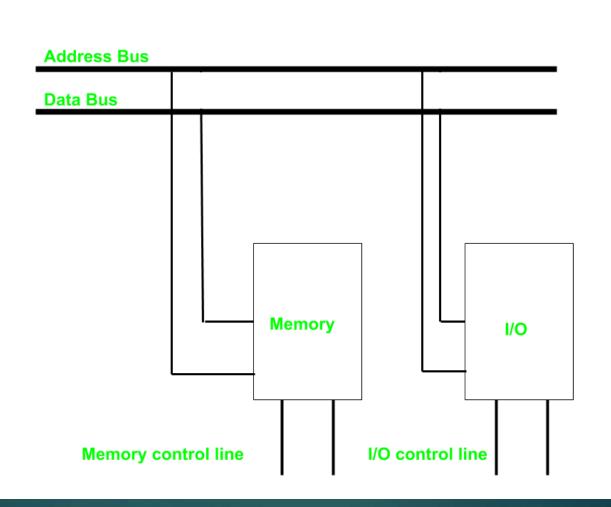

Memory Mapped I/O

- ► In this case every bus in common due to which the same set of instructions work for memory and I/O.
- ► Hence we manipulate I/O same as memory and both have same address space, due to which addressing capability of memory become less because some part is occupied by the I/O.

Memory Mapped I/O

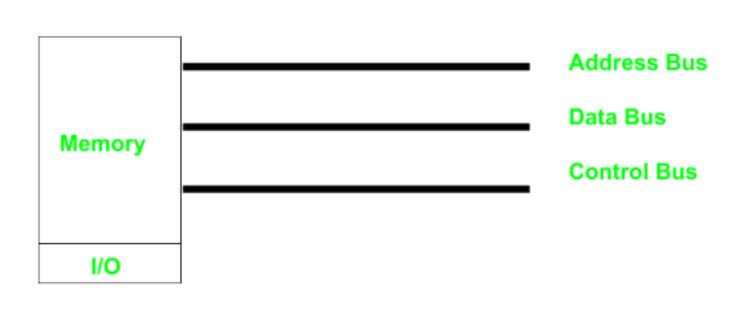

Difference

Isolated I/O	Memory Mapped I/O
Memory and I/O have separate address space	Both have same address space
All address can be used by the memory	Due to addition of I/O addressable memory become less for memory
Separate instruction control read and write operation in I/O and Memory	Same instructions can control both I/O and Memory
In this I/O address are called ports.	Normal memory address are for both
More efficient due to separate buses	Lesser efficient
Larger in size due to more buses	Smaller in size

Synchronous Dada Transfer

- Two units of Computer system (CPU and IO) are designed independantly. Of each other.
- ▶ If the internal registers in the interface share a common clock with the CPU registers the transfer between the two units is said to be synchronous.
- ▶ But in most of the cases the internal clock are different in both the unis as their speed of accessing the data is different

Asynchronous Data Transfer

This Scheme is used when speed of I/O devices do not match with microprocessor, and timing characteristics of I/O devices is not predictable.

In this method, process initiates the device and check its status. As a result, CPU has to wait till I/O device is ready to transfer data.

When device is ready CPU issues instruction for I/O transfer. In this method two types of techniques are used based on signals before data transfer.


- i. Strobe Control
- ii. Handshaking

Strobe Signal

The strobe control method of Asynchronous data transfer employs a single control line to time each transfer.

The strobe may be activated by either the source or the destination unit.

Data Transfer Initiated by Source Unit

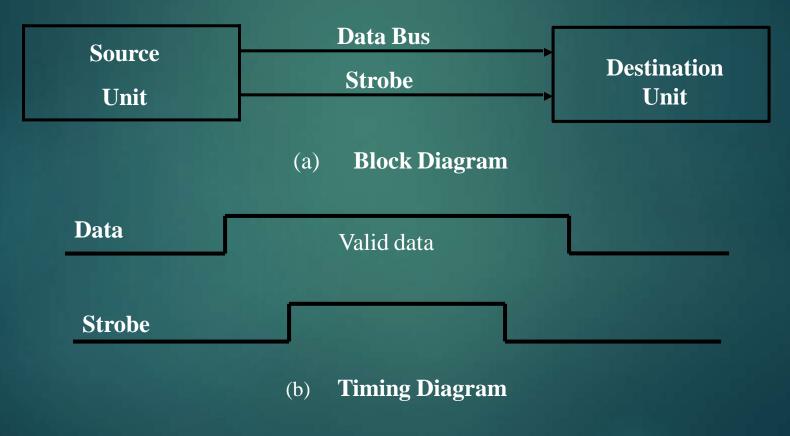

Source-Initiated strobe for Data Transfer

Data Transfer Initiated by Source Unit

In the block diagram fig. (a), the data bus carries the binary information from source to destination unit.


Typically, the bus has multiple lines to transfer an entire byte or word.

The strobe is a single line that informs the destination unit when a valid data word is available.

Data Transfer Initiated by Source Unit

- ► The timing diagram fig. (b) the source unit first places the data on the data bus.
- ► The information on the data bus and strobe signal remain in the active state to allow the destination unit to receive the data.

Data Transfer Initiated by Destination Unit

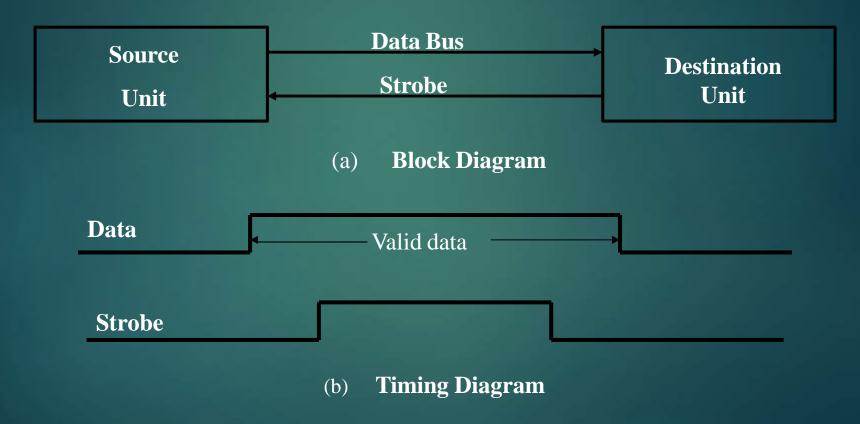

Destination-Initiated strobe for Data Transfer

Data Transfer Initiated by Destination Unit

In this method, the destination unit activates the strobe pulse, to informing the source to provide the data.

The source will respond by placing the requested binary information on the data bus.

Data Transfer Initiated by Destination Unit

- ► The data must be valid and remain in the bus long enough for the destination unit to accept it.
- When accepted the destination unit then disables the strobe and the source unit removes the data from the bus.

Disadvantage of Strobe Signal

The disadvantage of the strobe method is that,

- the source unit initiates the transfer has no way of knowing whether the destination unit has actually received the data item that was places in the bus.
- Similarly, a destination unit that initiates the transfer has no way of knowing whether the source unit has actually placed the data on bus.

The **Handshaking method** solves this problem.

Handshaking

The handshaking method solves the problem of strobe method by introducing a second control signal that provides a reply to the unit that initiates the transfer.

Principle of Handshaking

The basic **principle of the two-wire handshaking** method of data transfer is as follow: (2 control lines are used)

One control line is in the same direction as the data flows in the bus from the source to destination. It is used by source unit to inform the destination unit whether there a valid data in the bus.


The other control line is in the other direction from the destination to the source. It is used by the destination unit to inform the source whether it can accept the data. The sequence of control during the transfer depends on the unit that initiates the transfer.

Source Initiated Transfer using Handshaking

The sequence of events shows four possible states that the system can be at any given time.

- 1. The source unit initiates the transfer by placing the data on the bus and enabling its *data valid* signal.
- 2. The *data accepted* signal is activated by the destination unit after it accepts the data from the bus.
- 3. The source unit then disables its *data accepted* signal
- 4. and the system goes into its initial state.


Handshaking

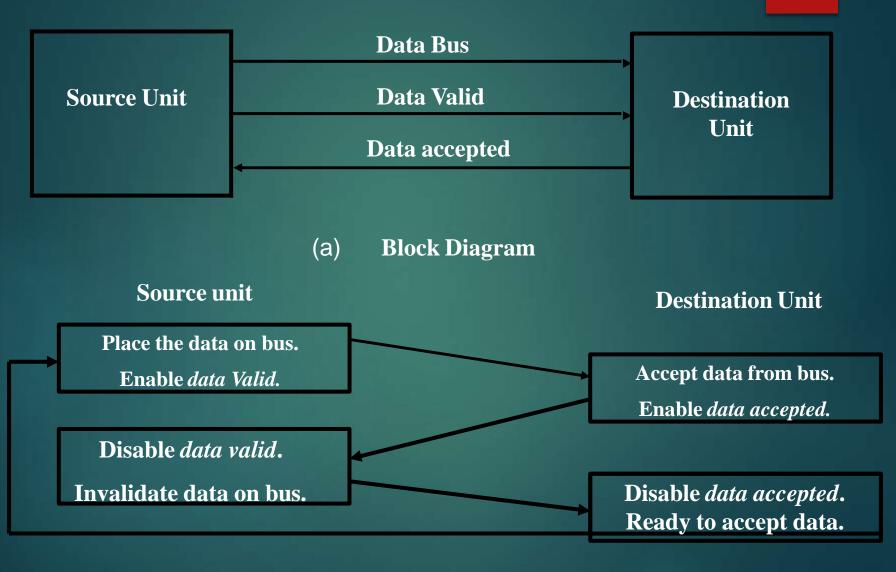

(b) Sequence of events

Destination Initiated Transfer Using Handshaking

- The name of the signal generated by the destination unit has been changed to *ready for data* to reflects its new meaning.
- The source unit in this case does not place data on the bus until after it receives the *ready for data* signal from the destination unit.
- From there on, the handshaking procedure follows the same pattern as in the source initiated case.
- The only **difference** between the Source Initiated and the Destination Initiated transfer is in their choice of Initial sate.

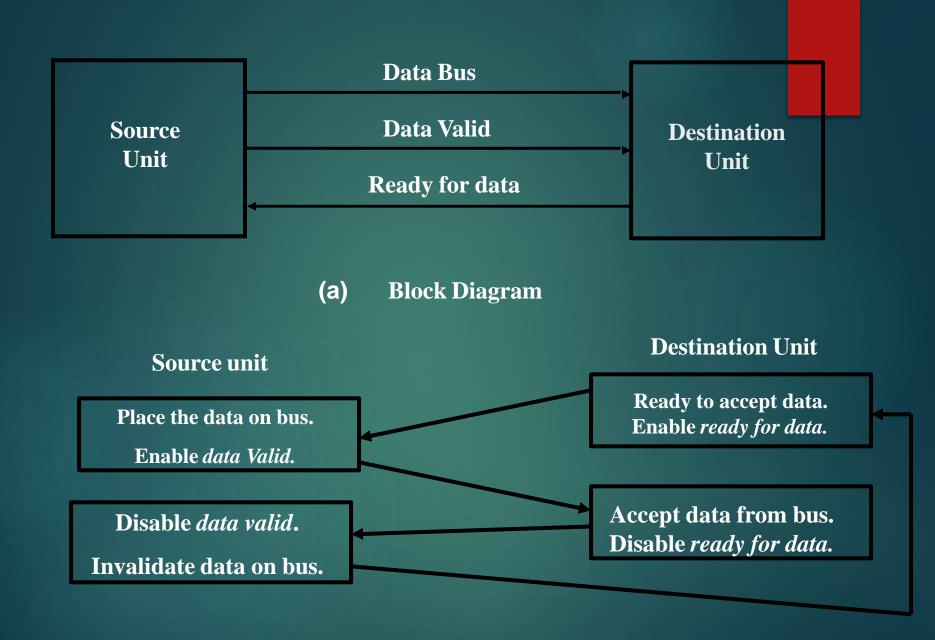

(b) Sequence of events

Destination-Initiated transfer using Handshaking

Advantage of the Handshaking method

- The Handshaking scheme provides degree of flexibility and reliability because the successful completion of data transfer relies on active participation by both units.
- If any of one unit is faulty, the data transfer will not be completed. Such an error can be detected by means of a *Timeout mechanism* which provides an alarm if the data is not completed within time.

Transfer of data is required between CPU and peripherals or memory or sometimes between any two devices or units of your computer system. To transfer a data from one unit to another one should be sure that both units have proper connection and at the time of data transfer the receiving unit is not busy. This data transfer with the computer is Internal Operation.

All the internal operations in a digital system are synchronized by means of clock pulses supplied by a common clock pulse Generator. The data transfer can be

- i. Synchronous or
- ii. Asynchronous

When both the transmitting and receiving units use same clock pulse then such a data transfer is called Synchronous process. On the other hand, if the there is not concept of clock pulses and the sender operates at different moment than the receiver then such a data transfer is called Asynchronous data transfer.

The data transfer can be handled by various modes. some of the modes use CPU as an intermediate path, others transfer the data directly to and from the memory unit and this can be handled by 3 following ways:

- i. Programmed I/O
- ii. Interrupt-Initiated I/O
- iii. Direct Memory Access (DMA)


Programmed I/O Mode

In this mode of data transfer the operations are the results in I/O instructions which is a part of computer program. Each data transfer is initiated by a instruction in the program. Normally the transfer is from a CPU register to peripheral device or vice-versa.

Programmed I/O Mode

Once the data is initiated the CPU starts monitoring the interface to see when next transfer can made. The instructions of the program keep close tabs on everything that takes place in the interface unit and the I/O devices.

In this technique CPU is responsible for executing data from the memory for output and storing data in memory for executing of Programmed I/O as shown in Flowchart-:

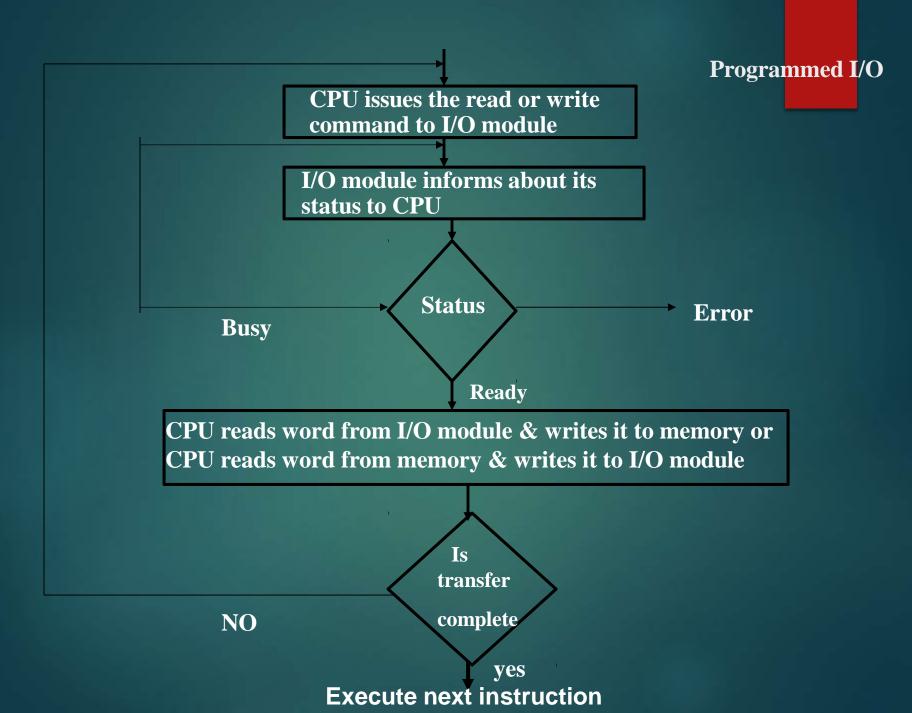

Drawback of the Programmed I/O

The main drawback of the Program Initiated I/O was that the CPU has to monitor the units all the times when the program is executing. Thus the CPU stays in a program loop until the I/O unit indicates that it is ready for data transfer. This is a time consuming process and the CPU time is wasted a lot in keeping an eye to the executing of program.

To remove this problem an Interrupt facility and special commands are used.


Interrupt-Initiated I/O

In this method an interrupt facility an interrupt command is used to inform the device about the start and end of transfer. In the meantime the CPU executes other program. When the interface determines that the device is ready for data transfer it generates an **Interrupt Request** and sends it to the computer.

Interrupt-Initiated I/O

When the CPU receives such an signal, it temporarily stops the execution of the program and branches to a service program to process the I/O transfer and after completing it returns back to task, what it was originally performing.

The Execution process of Interrupt–Initiated I/O is represented in the flowchart:

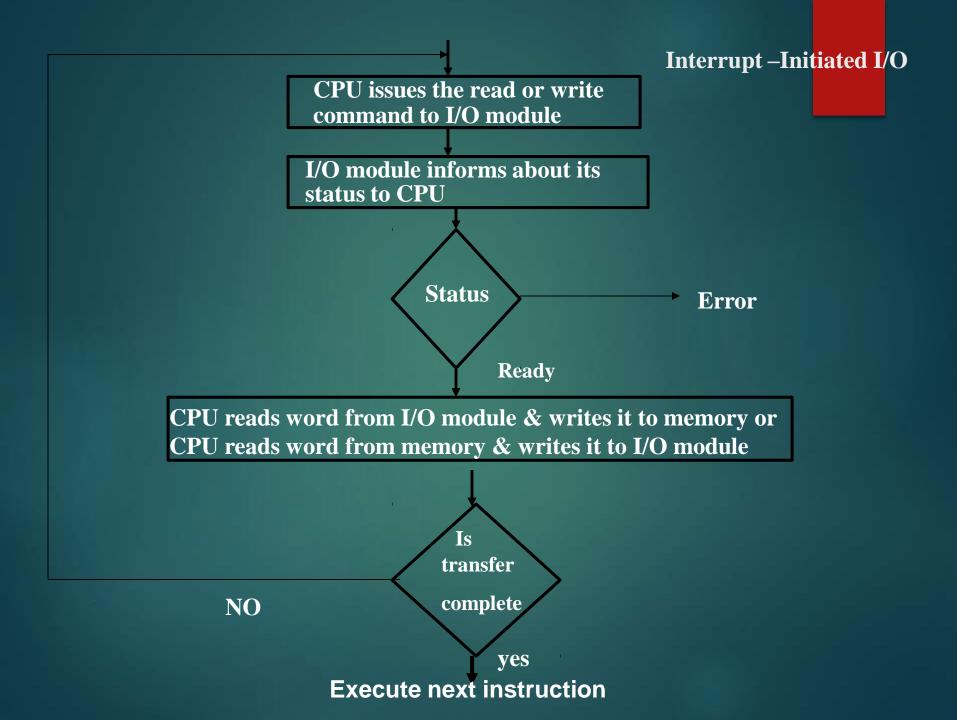

In the Direct Memory Access (DMA) the interface transfer the data into and out of the memory unit through the memory bus. The transfer of data between a fast storage device such as magnetic disk and memory is often limited by the speed of the CPU. Removing the CPU from the path and letting the peripheral device manage the memory buses directly would improve the speed of transfer. This transfer technique is called **Direct Memory Access (DMA).**

During the **DMA transfer**, the CPU is idle and has no control of the memory buses. A **DMA Controller** takes over the buses to manage the transfer directly between the I/O device and memory.

The CPU may be placed in an idle state in a variety of ways. One common method extensively used in microprocessor is to disable the buses through special control signals such as:

Bu

S

Requ


est

(BR)

transfer. The Bus Request (BR) input is used by the DMA controller to request the CPU. When this input is active, the CPU terminates the execution of the current instruction and places the address bus, data bus and read write lines into a high Impedance state. High Impedance state means that the output is

state. High Impedance state means that the output is

These two control signals in the CPU that facilitates

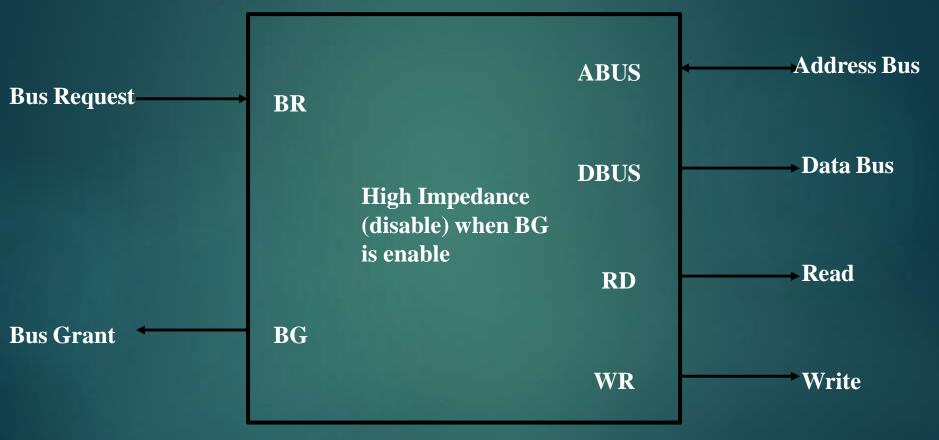

CPU bus Signals for DMA Transfer

The CPU activates the *Bus Grant (BG)* output to inform the external DMA that the Bus Request (BR) can now take control of the buses to conduct memory transfer without processor.

When the DMA terminates the transfer, it disables the *Bus Request (BR)* line. The CPU disables the *Bus Grant (BG)*, takes control of the buses and return to its normal operation.

The transfer can be made in several ways that are:

i. DMA Burst

ii. Cycle Stealing

- DMA Burst: In DMA Burst transfer, a block sequence consisting of a number of memory words is transferred in continuous burst while the DMA controller is master of the memory buses.
- Cycle Stealing: Cycle stealing allows the DMA controller to transfer one data word at a time, after which it must returns control of the buses to the CPU.

DMA Controller

The DMA controller needs the usual circuits of an interface to communicate with the CPU and I/O device. The DMA controller has three registers:

- i. Address Register
- ii. Word Count Register
- iii. Control Register


DMA Controller

- i. Address Register: Address Register contains an address to specify the desired location in memory.
- ii. Word Count Register: WC holds the number of words to be transferred. The register is incre/decre by one after each word transfer and internally tested for zero.
- iii. Control Register :- Control Register specifies the mode of transfer.

DMA Controller

The unit communicates with the CPU via the data bus and control lines. The registers in the DMA are selected by the CPU through the address bus by enabling the **DS** (**DMA select**) and **RS** (**Register select**) inputs. The **RD** (**read**) and **WR** (**write**) inputs are bidirectional.

When the **BG** (**Bus Grant**) **input is 0**, the CPU can communicate with the DMA registers through the data bus to read from or write to the DMA registers. When **BG** =1, the DMA can communicate directly with the memory by specifying an address in the address bus and activating the **RD** or **WR** control.

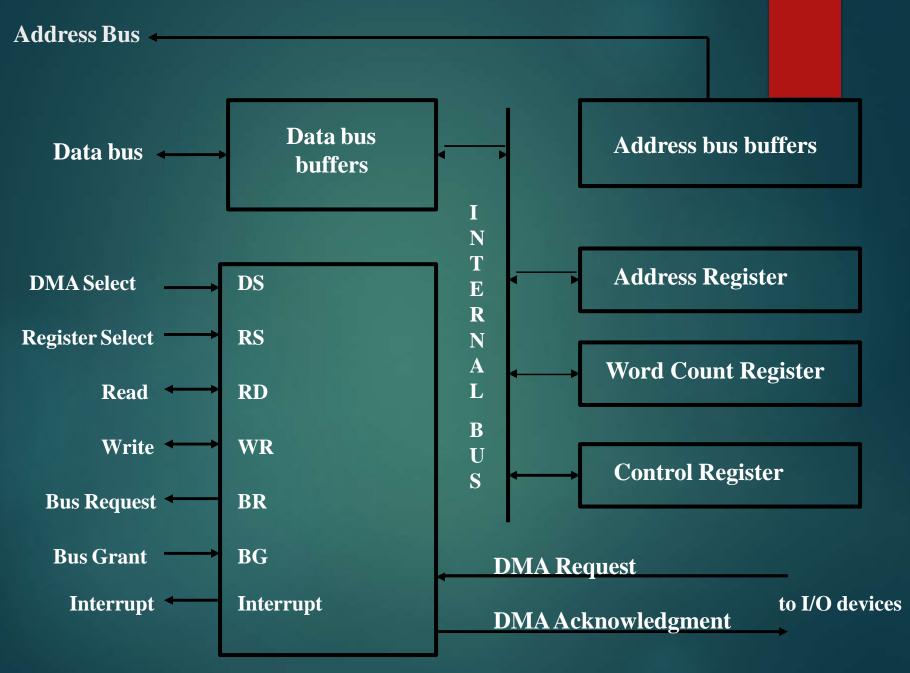

Block Diagram of DMA Controller

DMA Transfer

The CPU communicates with the DMA through the address and data buses as with any interface unit. The DMA has its own address, which activates the DS and RS lines. The CPU initializes the DMA through the data bus. Once the DMA receives the start control command, it can transfer between the peripheral and the memory.

When BG = 0 the RD and WR are input lines allowing the CPU to communicate with the internal DMA registers. When BG=1, the RD and WR are output lines from the DMA controller to the random access memory to specify the read or write operation of data.

Brief Summary

- **Interface** is the point where a connection is made between two different parts of a system.
- The **strobe control** method of Asynchronous data transfer employs a single control line to time each transfer.
- The **handshaking** method solves the problem of strobe method by introducing a second control signal that provides a reply to the unit that initiates the transfer.

Brief Summary

- Programmed I/O mode of data transfer the operations are the results in I/O instructions which is a part of computer program.
- In the **Interrupt Initiated I/O** method an interrupt facility an interrupt command is used to inform the device about the start and end of transfer.
- In the **Direct Memory Access** (**DMA**) the interface transfer the data into and out of the memory unit through the memory bus.