# **ChowTape User Manual**

**ChowTape** is an analog tape machine physical model, originally based on the Sony TC-260. The current version can be used to emulate a wide variety of reel-to-reel tape machines. As well as a tool for mixing engineers and producers, ChowTape is a research project on developing physics-based models of analog tape emulation<sup>1</sup>. The plugin is currently available as VST/VST3/AU/LV2 for Windows, Linux, and Mac.

# Installation

To install ChowTape for Mac or Windows, download the latest release, unzip the downloaded file, and copy the plugin files to your plugin folder. Note that Macintosh users may need to allow applications from unidentified developers. Linux users may download builds from the Open Build Service, or compile from source.

## **Controls**

ChowTape contains a wide range of controls allowing the user to design the the physical characteristics of the tape machine and magnetic tape being emulated. Several of the controls even allow the user to achieve more "extreme" results than would be possible with a physical tape machine.



Figure 1: A Sony TC 260 reel-to-reel tape machine

### **Main Controls**

**Input Gain** controls the gain level going into the rest of the plugin. Note that abnormally large levels can cause the plugin to become unstable, so it is recommended that sound levels are below unity gain going into the plugin, and any extra gain should come from the input gain control.

**Dry/Wet** allows the user to choose how much of the signal they want to the plugin's processing to affect.

Output Gain controls the level coming out of the plugin.

**Oversampling** controls the amount of oversampling being done internally within the plugin. More oversampling will result in a higher quality sound with fewer aliasing artifacts and better noise characteristics, but will also use more CPU. It is recommended to use as much oversampling as your CPU will allow.

Mix Group: When using ChowTape on multiple channels in a

<sup>&</sup>lt;sup>1</sup>The plugin is based off a 2019 DAFx paper "Real-time Physical Modelling for Analog Tape Machines".



Figure 2: ChowTape User Interface

mix, you can synchronize parameters between plugin instances belonging to the same mix group. Essentially, all the plugin instances in the same mix group will share the same parameters.

# **Input Filter Controls**

The ChowTape input filters apply a low-cut and high-cut filter to the input signal before it is passed on to the rest of the plugin. The **Low Cut** and **High Cut** knobs control the cutoff frequencies of the two filters. The **Makeup** control allows the signal cut out by the input filters to be added back to the output of the plugin. This can be useful for allowing sub-bass frequencies to pass through the plugin unaffected.



Figure 3: Input filter controls

# **Hysteresis Controls**

The hysteresis processing is the most important section of the plugin. Hysteresis is a complex nonlinear phenomenon that describes many natural processes in physics, biology, economics, and more. In particular, magnetic hysteresis describes the process by which tape becomes magnetised when subjected to a strong magnetic field. ChowTape emulates magnetic hysteresis, using the Jiles-Atherton<sup>2</sup> model of magnetic hysteresis. Magnetic hysteresis is largely responsible for the "warm" sound often associated with analog tape distortion.

**Drive** controls the level of amplification done by the hysteresis process. This differs from the input gain in that it affects the nonlinear characteristic of the hysteresis process.

<sup>&</sup>lt;sup>2</sup> Jiles, D.C.; Atherton, D.L. (1984) "Theory of ferromagnetic hysteresis" *Journal of Applied Physics*.



Figure 4: Tape hysteresis controls

**Saturation** controls the level at which the hysteresis function saturates. Higher values correspond to a lower Saturation point, resulting in a more distorted sound.

**Bias** controls the amount of bias used by the tape recorder. Tape bias is the addition of an inaudible high-frequency signal to the audio signal<sup>3</sup>. At lower bias levels, the hysteresis curve becomes "wider", thus creating the "deadzone" effect often associated with underbiased tape.

**Hysteresis Mode** selects the equation solver used to solve the Jiles-Atherton equation in real time. ChowTape currently supports the following hysteresis modes:

Figure 5: Hysteresis curves with varying saturation

- 2nd-order Runge Kutta (RK2)
- 4th-order Runge Kutta (RK4)
- 4-iteration Newton Raphson (NR4)
- 8-iteration Newton Raphson (NR8)
- Version 1.0 processing (V1)

The Runge-Kutta solvers are computationally cheaper, but somewhat less accurate than the Newton-Raphson solvers. Similarly, the higher-order solvers will be more accurate, but will also consume more compute resources. The V1 mode reverts to a different parameterization of the hysteresis equation that was used in earlier versions of the plugin. It is recommended to use higher-order solvers for mix busses and key tracks in a mix, while using lower-order solvers for less important tracks.

<sup>&</sup>lt;sup>3</sup>More information on tape biasing

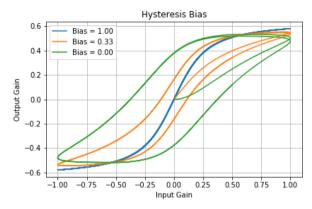


Figure 6: Hysteresis curves with varying bias

### **Tone Controls**

The tone section applies a set of pre-/post-emphasis filters to the signal before and after the hysteresis processing is applied. The filters work similar to RIAA filters, in that the pre- and post-filters have exact opposite frequency responses.

The **Bass** and **Treble** knobs control the frequency response of the pre-emphasis filter, and the post-emphasis filter will automatically adjust. The **Frequency** knob controls the transition frequency between the bass and treble sections of the filter.

# **Playhead Controls**

Physical tape machines also have a frequency response that is affected by the amount of space between the playhead and the



Figure 7: Loss filter controls

tape, the width of the playhead gap, and the thickness of tape used. The frequency responses of each of these "loss effects" is also dependent on the tape speed.

**Spacing** controls the amount of space between the playhead and the tape, measured in centilmeters.

**Thickness** controls the thickness of the tape, measured in centiimeters.

**Gap** controls the width of the playhead gap, measured in millimeters

**Speed** controls the tape speed as it effects the above loss effects, measured in inches per second (ips). While this control is continuous, standard tape speeds are 7.5, 15, and 30 ips.

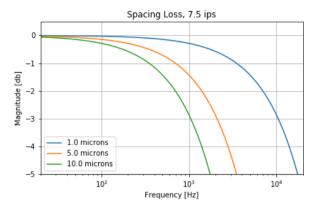


Figure 8: Spacing loss at 7.5 ips

## **Tape Degradation Controls**

The degradation parameters control a simulation of old, degraded tape. **Depth** and **Amount** control the amount of degradation that is added to the tape, while **Variance** adds a timevarying randomness to the degradatation.

### **Chew Controls**

The chew parameters simulate tape that has been chewed up by a broken tape machine. **Depth** controls how deep the tape is chewed, **Frequency** controls how much space there is between bits of tape that have been chewed up, and **Variance** determines how much randomness there is in determining the amount of space between chewed up sections.

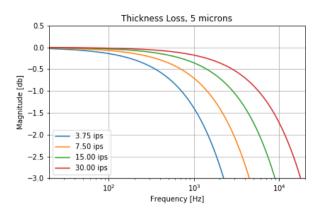


Figure 9: Thickness loss for 5 micron tape

### **Wow and Flutter Controls**

Tape machines also exhibit timing irregularities, often due to small imperfections in the mechanics of the machine causing the tape to subtly speed up and slow down while being played back. The flutter characteristic in this plugin was captured from an original Sony TC-260 tape machine.

**Rate** controls the rate of flutter, with higher values causing the flutter to occur faster. **Depth** controls the depth of the flutter, with 0 meaning that no flutter is occuring, and higher values making the flutter more noticeable.

"Wow" is similar to flutter but on a much longer time scale, and contains similar controls.

## **Presets**

Presets provide a quick way to achieve a specific sound with the plugin. ChowTape comes with a set of built-in factory presets. To contribute your presets to be added to the factory presets list for future releases, see the Presets GitHub issue.

### **User Presets**

To save the current plugin state as a user preset, open the presets menu, and select "Save". The first time a preset is saved, you will be asked to choose a preset folder. All future presets will be saved to this folder, and when the plugin opens, it will search this folder, as well as any subfolders, to load new user presets. Presets located in subfolders will be placed in their own groups in the preset menu.

# **Open Source**

ChowTape is open-source software that is free (as in "free beer"), and free (as in "free speech"), under the General Public License. As a research project, the goal of developing this plugin is to help advance the body of knowledge of real-time audio signal processing. Therefore, keeping any part of this project behind a paywall, or licensing this software under a proprietary license would be antithetical to that goal. As an open-source project, ChowTape is open to outside contributors. For more information, see our Contributing page.

## **Feedback**

If you notice any bugs, or have any questions, feel free to email me directly, or create an issue ticket on GitHub. GitHub issues are preferred, since they are publicly visible.

# **Acknowledgements**

Thanks to Yann for helping to write this user manual, as well as all the users of ChowTape who have made efforts to help improve the plugin.

Enjoy!

Jatin Chowdhury

https://github.com/jatinchowdhury18/AnalogTapeModel