

Memory Mapped IO used for GPIO

Lecture 2

GPIO for RP2040

- Memory Mapped I/O
 - GPIO Peripheral
- Embedded Rust Stack
- embassy-rs




MMIO

Memory Mapped Input Output



a simple 8 bit processor with a text display

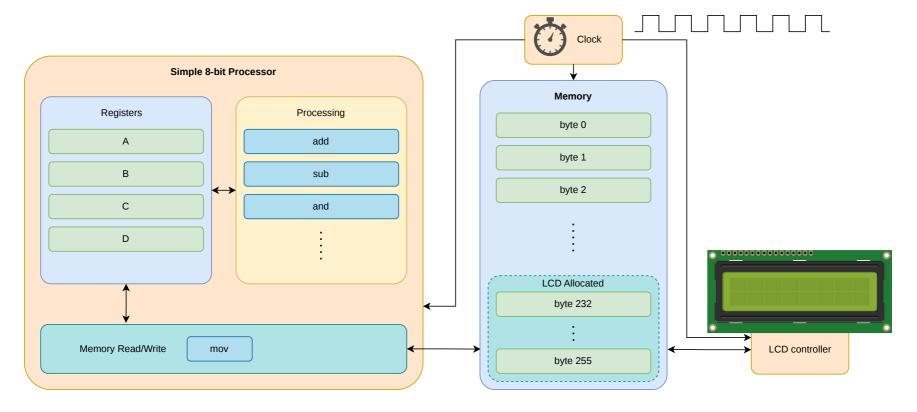


STM32L0x2

A real MCU

Cortex-M0+ Peripherals	MCU's <i>settings</i> and internal peripherals, available at the same address on all M0+			
Peripherals	GPIO, USART, SPI, I2C, USB, etc			
Flash	The storage space			
SRAM	RAM memory			
@0x0000_0000	Alias for SRAM or Flash			



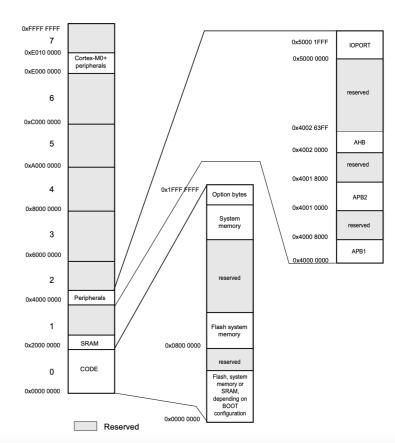

System Control Registers

@0xe000 0000

Compute the actual address

• 0xe000_0000 + Offset

Examples:

- SYST_CSR: 0xe000_e010 (0xe000_0000 + 0xe010)
- CPUID: 0xe000_ed00 (0xe000_0000 + 0xed00)

```
const SYS_CTRL: usize = 0xe000_0000;
const CPUID: usize = 0xed00;

let cpuid_reg = (SYS_CTRL + CPUID) as *const u32;
let cpuid_value = unsafe { *cpuid_reg };
```


△ Processors use cache!

Offset	Name	Info
0xe010	SYST_CSR	SysTick Control and Status Register
0xe014	SYST_RVR	SysTick Reload Value Register
0xe018	SYST_CVR	SysTick Current Value Register
0xe01c	SYST_CALIB	SysTick Calibration Value Register
0xe100	NVIC_ISER	Interrupt Set-Enable Register
0xe180	NVIC_ICER	Interrupt Clear-Enable Register
0xe200	NVIC_ISPR	Interrupt Set-Pending Register
0xe280	NVIC_ICPR	Interrupt Clear-Pending Register
0xe400	NVIC_IPR0	Interrupt Priority Register 0
0xe404	NVIC_IPR1	Interrupt Priority Register 1
0xe408	NVIC_IPR2	Interrupt Priority Register 2
0xe40c	NVIC_IPR3	Interrupt Priority Register 3
0xe410	NVIC_IPR4	Interrupt Priority Register 4
0xe414	NVIC_IPR5	Interrupt Priority Register 5
0xe418	NVIC_IPR6	Interrupt Priority Register 6
0xe41c	NVIC_IPR7	Interrupt Priority Register 7
0xed00	CPUID	CPUID Base Register
0xed04	ICSR	Interrupt Control and State Register
0xed08	VTOR	Vector Table Offset Register
0xed0c	AIRCR	Application Interrupt and Reset Control Register
0xed10	SCR	System Control Register
0xed14	CCR	Configuration and Control Register





with cache

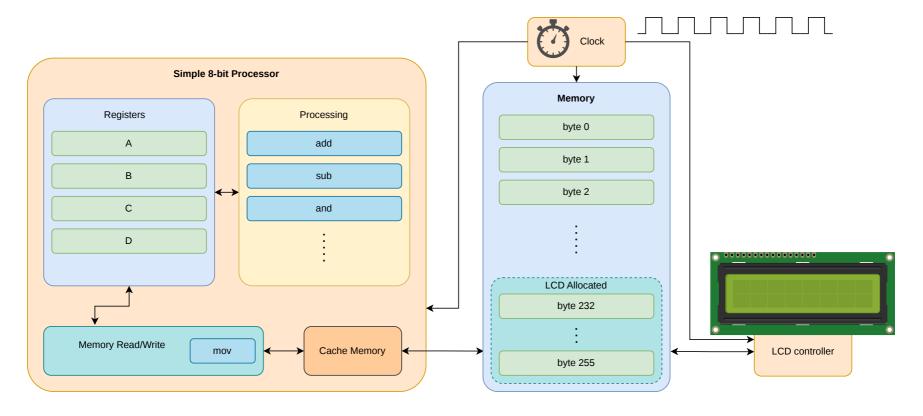

Cache Write-Trough

CPUID: **0xe000_ed00** (*0xe000_0000 + 0xed00*)

```
use core::ptr::read_volatile;

const SYS_CTRL: usize = 0xe000_0000;

const CPUID: usize = 0xed00;

let cpuid_reg = (SYS_CTRL + CPUID) as *const u32;

unsafe {
    read_volatile(cpuid_reg) // avoid cache
}
```

read_volatile	,
write_volatile	!

no cache or compileroptimization

read , write , *p

use cache and compiler
optimization

Offset	Name	Info
0xe010	SYST_CSR	SysTick Control and Status Register
0xe014	SYST_RVR	SysTick Reload Value Register
0xe018	SYST_CVR	SysTick Current Value Register
0xe01c	SYST_CALIB	SysTick Calibration Value Register
0xe100	NVIC_ISER	Interrupt Set-Enable Register
0xe180	NVIC_ICER	Interrupt Clear-Enable Register
0xe200	NVIC_ISPR	Interrupt Set-Pending Register
0xe280	NVIC_ICPR	Interrupt Clear-Pending Register
0xe400	NVIC_IPR0	Interrupt Priority Register 0
0xe404	NVIC_IPR1	Interrupt Priority Register 1
0xe408	NVIC_IPR2	Interrupt Priority Register 2
0xe40c	NVIC_IPR3	Interrupt Priority Register 3
0xe410	NVIC_IPR4	Interrupt Priority Register 4
0xe414	NVIC_IPR5	Interrupt Priority Register 5
0xe418	NVIC_IPR6	Interrupt Priority Register 6
0xe41c	NVIC_IPR7	Interrupt Priority Register 7
0xed00	CPUID	CPUID Base Register
0xed04	ICSR	Interrupt Control and State Register
0xed08	VTOR	Vector Table Offset Register
0xed0c	AIRCR	Application Interrupt and Reset Control Register
0xed10	SCR	System Control Register
0xed14	CCR	Configuration and Control Register

Read the CPUID

About the MCU

```
use core::ptr::read volatile;
     const SYS CTRL: usize = 0xe000 0000;
     const CPUID: usize = 0xed00;
     let cpuid req = (SYS CTRL + CPUID) as *const u32;
     let cpuid value = unsafe {
         read volatile(cpuid req)
 8
 9
     };
10
     // shift right 24 bits and keep only the last 8 bits
11
     let variant = (cpuid value >> 24) & 0b1111 1111;
12
13
14
     // shift right 16 bits and keep only the last 4 bits
15
     let architecture = (cpuid value >> 16) & 0b1111;
16
     // shift right 4 bits and keep only the last 12 bits
17
     let part no = (cpuid value >> 4) & 0b11 1111 1111;
18
19
     // shift right 0 bits and keep only the last 4 bits
20
     let revision = (cpuid value >> 0) & 0b1111;
```

CPUID Register

Offset: 0xed04

Bits	Name	Description	Туре	Reset
31:24	IMPLEMENTER	Implementor code: 0x41 = ARM	RO	0x41
23:20	VARIANT	Major revision number n in the rnpm revision status: 0x0 = Revision 0.	RO	0x0
19:16	ARCHITECTURE	Constant that defines the architecture of the processor: 0xC = ARMv6-M architecture.	RO	Охс
15:4	PARTNO	Number of processor within family: 0xC60 = Cortex-M0+	RO	0xc60
3:0	REVISION	Minor revision number m in the rnpm revision status: 0x1 = Patch 1.	RO	0x1



AIRCR

Application Interrupt and Reset Control Register

```
use core::ptr::read volatile;
     use core::ptr::write volatile;
     const SYS CTRL: usize = 0xe000 0000;
     const AIRCR: usize = 0xed0c;
     const VECTKEY: u32 = 16;
     const SYSRESETREQ: u32 = 2;
     let aircr register = (SYS CTRL + AIRCR) as *mut u32;
10
     let mut aircr value = unsafe {
12
         read_volatile(aircr_register)
13
     };
14
15
     aircr value = aircr value & ~(0x1111 << VECTKEY);
     aircr value = aircr value | (0x05fa << VECTKEY);</pre>
16
     aircr value = aircr value | (1 << SYSRESETREQ);</pre>
17
18
19
     unsafe {
         write volatile(aircr_register, aircr_value);
20
21
```

AIRCR Register

Offset: 0xed0c

Bits	Name	Description	Туре	Reset
31:16	VECTKEY	Register key: Reads as Unknown On writes, write 0x05FA to VECTKEY, otherwise the write is ignored.	RW	0x0000
15	ENDIANESS	Data endianness implemented: 0 = Little-endian.	RO	0x0
14:3	Reserved.	-	-	-

Bits	Name	Description	Туре	Reset
2	SYSRESETREQ	Writing 1 to this bit causes the SYSRESETREQ signal to the outer system to be asserted to request a reset. The intention is to force a large system reset of all major components except for debug. The C_HALT bit in the DHCSR is cleared as a result of the system reset requested. The debugger does not lose contact with the device.	RW	0x0
1	VECTCLRACTIVE	Clears all active state information for fixed and configurable exceptions. This bit: is self-clearing, can only be set by the DAP when the core is halted. When set: clears all active exception status of the processor, forces a return to Thread mode, forces an IPSR of 0. A debugger must re-initialize the stack.	RW	0x0
0	Reserved.	-	-	-



Read and Write

they do stuff

- Read
 - reads the value of a register
 - might ask the peripheral to do something
- Write
 - writes the value to a register
 - might ask the peripheral to do something
 - SYSRESETREQ



AIRCR Register

Offset: 0xed0c

Bits	Name	Description	Туре	Reset
31:16	VECTKEY	Register key: Reads as Unknown On writes, write 0x05FA to VECTKEY, otherwise the write is ignored.	RW	0x0000
15	ENDIANESS	Data endianness implemented: 0 = Little-endian.	RO	0x0
14:3	Reserved.	-	-	-

Bits	Name	Description	Туре	Reset
2	SYSRESETREQ	Writing 1 to this bit causes the SYSRESETREQ signal to the outer system to be asserted to request a reset. The intention is to force a large system reset of all major components except for debug. The C_HALT bit in the DHCSR is cleared as a result of the system reset requested. The debugger does not lose contact with the device.	RW	0x0
1	VECTCLRACTIVE	Clears all active state information for fixed and configurable exceptions. This bit: is self-clearing, can only be set by the DAP when the core is halted. When set: clears all active exception status of the processor, forces a return to Thread mode, forces an IPSR of 0. A debugger must re-initialize the stack.	RW	0x0
0	Reserved.	-	-	-



B

System View Description

```
<device schemaVersion="1.1"</pre>
       xmlns:xs="http://www.w3.org/2001/XMLSchema-instance" xs:noNamespaceSchemaLocation="CMSIS-SVD.xsd">
       <name>RP2040</name>
       <peripherals>
         <name>PPB</name>
         <baseAddress>0xe0000000/baseAddress>
          <register>
           <name>CPUID</name>
           <addressOffset>0xed00</addressOffset>
10
           <resetValue>0x410cc601</resetValue>
11
           <fields>
12
              <field>
13
                <name>IMPLEMENTER</name>
14
                <description>Implementor code: 0x41 = ARM</description>
15
                <bitRange>[31:24]</bitRange>
16
                <access>read-only</access>
              </field>
17
18
              <!-- rest of the fields of the register -->
19
           </fields>
20
         </register>
21
       </peripherals>
     </device>
```



Bitwise Ops

How to set and clear bits





set the 1 on position bit of register

```
fn set_bit(register: usize, bit: u8) -> usize {
    // assume register is 0b1000, bit is 2
    // 1 << 2 is 0b0100
4    // 0b1000 | 0b0100 is 0b1100
5    register | 1 << bit
6 }</pre>
```

Set multiple bits

```
fn set_bits(register: usize, bits: usize) -> usize {
      // assume register is 0b1000, bits is 0b0111
      // 0b1000 | 0b0111 is 0b1111
      register | bits
}
```



Clear bit

set the 0 on position bit of register

```
fn clear_bit(register: usize, bit: u8) -> usize {
    // assume register is 0b1100, bit is 2

    // 1 << 2 is 0b0100

4    // !(1 << 3) is 0b1011

5    // 0b1100 & 0b1011 is 0b1000

6    register & !(1 << bit)

7  }</pre>
```

Clear multiple bits

```
fn clear_bits(register: usize, bits: usize) -> usize {
    // assume register is 0b1111, bits is 0b0111
    // !bits = 0b1000
    // 0b1111 & 0b1000 is 0b1000
    register & !bits
}
```



Flip bit

flip the bit on position bit of register

```
fn flip_bit(register: usize, bit: u8) -> usize {
    // assume register is 0b1000, bit is 2
    // 1 << 2 is 0b0100
    // 0b1100 ^ 0b0100 is 0b1000
    register ^ 1 << bit
}</pre>
```

Flip multiple bits

```
fn flip_bits(register: usize, bits: usize) -> usize {
    // assume register is 0b1000, bits is 0b0111
    // 0b1000 ^ 0b0111 is 0b1111
    register ^ bits
}
```



GPIO

General Purpose Input Output for RP2040

Bibliography


for this section

Raspberry Pi Ltd, RP2040 Datasheet

- Chapter 2 *System Description*
 - Section 2.3 *Processor subsystem*
 - Subsection 2.3.1 *SIO*
 - Subsection 2.3.1.2 GPIO Control
 - Section 2.4 Cortex-M0+ (except NVIC and MPU)
 - Section 2.19 *GPIO* (except Interrupts)



GPIO

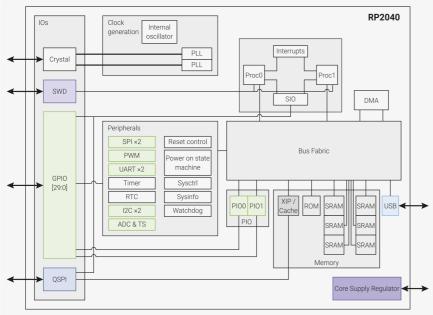

IO Bank (GPIO): Use the correct MUX function (F5)

SIO: Set the pin as Input or Output



SIO Single Cycle Input/Output, is able to control the GPIO pins

GPIO Multiplexes the functions of the GPIO pins

	Function	Function							
GPIO	F1	F2	F3	F4	F5	F6	F7	F8	F9
0	SPI0 RX	UART0 TX	I2C0 SDA	PWM0 A	SIO	PIO0	PIO1		USB OVCUR DET
1	SPI0 CSn	UARTO RX	I2C0 SCL	PWM0 B	SIO	PIO0	PIO1		USB VBUS DET
2	SPI0 SCK	UARTO CTS	I2C1 SDA	PWM1 A	SIO	PIO0	PIO1		USB VBUS EN
3	SPI0 TX	UARTO RTS	I2C1 SCL	PWM1 B	SIO	PIO0	PIO1		USB OVCUR DET
4	SPI0 RX	UART1 TX	I2C0 SDA	PWM2 A	SIO	PIO0	PIO1		USB VBUS DET
5	SPI0 CSn	UART1 RX	I2C0 SCL	PWM2 B	SIO	PIO0	PIO1		USB VBUS EN
6	SPI0 SCK	UART1 CTS	I2C1 SDA	PWM3 A	SIO	PIO0	PIO1		USB OVCUR DET
7	SPI0 TX	UART1 RTS	I2C1 SCL	PWM3 B	SIO	PIO0	PIO1		USB VBUS DET
8	SPI1 RX	UART1 TX	I2C0 SDA	PWM4 A	SIO	PIO0	PIO1		USB VBUS EN
9	SPI1 CSn	UART1 RX	I2C0 SCL	PWM4 B	SIO	PIO0	PIO1		USB OVCUR DET
10	SPI1 SCK	UART1 CTS	I2C1 SDA	PWM5 A	SIO	PIO0	PIO1		USB VBUS DET
11	SPI1 TX	UART1 RTS	I2C1 SCL	PWM5 B	SIO	PIO0	PIO1		USB VBUS EN
12	SPI1 RX	UART0 TX	I2C0 SDA	PWM6 A	SIO	PIO0	PIO1		USB OVCUR DET
13	SPI1 CSn	UART0 RX	I2C0 SCL	PWM6 B	SIO	PIO0	PIO1		USB VBUS DET
14	SPI1 SCK	UARTO CTS	I2C1 SDA	PWM7 A	SIO	PIO0	PIO1		USB VBUS EN

SIO Registers

The SIO registers start at a base address of 0xd0000000 (defined as SIO_BASE in SDK).

GPIO output value set			
GPIO output value clear			
GPIO output value XOR			
GPIO output enable			
GPIO output enable set			
_			

Input

- set GPIO_OE bit x to 0
- read GPIO_IN bit x
- Ouput
 - set GPIO_OE bit x to 1
 - write GPIO_OUT bit x

GPIO_OE

Bits	Description	Туре	Reset
31:30	Reserved.	-	-
29:0	Set output enable (1/0 → output/input) for GPI0029. Reading back gives the last value written. If core 0 and core 1 both write to GPI0_OE simultaneously (or to a SET/CLR/XOR alias), the result is as though the write from core 0 took place first, and the write from core 1 was then applied to that intermediate result.	RW	0x0000000

GPIO_IN

Bits	Description	Туре	Reset
31:30	Reserved.	-	-
29:0	Input value for GPI0029	RO	0x00000000

$GPIO_OUT$

Bits	Description	Туре	Reset
31:30	31:30 Reserved.		-
29:0	Set output level (1/0 → high/low) for GPI0029. Reading back gives the last value written, NOT the input value from the pins. If core 0 and core 1 both write to GPI0_OUT simultaneously (or to a SET/CLR/XOR alias), the result is as though the write from core 0 took place first, and the write from core 1 was then applied to that intermediate result.	RW	0x00000000

SIO Input

The SIO registers start at a base address of 0xd0000000 (defined as SIO_BASE in SDK).

Offset	Name	Info
0x000	CPUID	Processor core identifier
0x004	GPIO_IN	Input value for GPIO pins
0x008	GPIO_HI_IN	Input value for QSPI pins
0x010	GPIO_OUT	GPIO output value
0x014	GPIO_OUT_SET	GPIO output value set
0x018	GPIO_OUT_CLR	GPIO output value clear
0x01c	GPIO_OUT_XOR	GPIO output value XOR
0x020	GPIO_OE	GPIO output enable
0x024	GPIO_OE_SET	GPIO output enable set
0x028	GPIO_OE_CLR	GPIO output enable clear

GPIO OE

Bits	Description		Reset
31:30	Reserved.		-
29:0	Set output enable (1/0 → output/input) for GPI0029. Reading back gives the last value written. If core 0 and core 1 both write to GPI0_OE simultaneously (or to a SET/CLR/XOR alias), the result is as though the write from core 0 took place first, and the write from core 1 was then applied to that intermediate result.	RW	0x0000000

GPIO IN

Bits	Description	Туре	Reset
31:30	Reserved.	-	-
29:0	Input value for GPI0029	RO	0x00000000

```
use core::ptr::read_volatile;
     use core::ptr::write_volatile;
     const GPIO OE: *mut u32 = 0xd000 0020 as *mut u32;
     const GPIO_IN: *const u32= 0xd000_0004 as *const u32;
 6
     let value = unsafe {
         // write volatile(GPIO_OE, !(1 << pin));</pre>
         let gpio oe = read volatile(GPIO OE);
10
         // set bin `pin` of `gpio_oe` to 0 (input)
11
         gpio_oe = gpio_oe & !(1 << pin);</pre>
12
         write_volatile(GPIO_OE, gpio_oe);
13
         read_volatile(GPIO_IN) >> pin & 0b1
14 };
```

SIO Input

The SIO registers start at a base address of 0xd0000000 (defined as SIO_BASE in SDK).

Offset	Name	Info
0x000	CPUID	Processor core identifier
0x004	GPIO_IN	Input value for GPIO pins
0x008	GPIO_HI_IN	Input value for QSPI pins
0x010	GPIO_OUT	GPIO output value
0x014	GPIO_OUT_SET	GPIO output value set
0x018	GPIO_OUT_CLR	GPIO output value clear
0x01c	GPIO_OUT_XOR	GPIO output value XOR
0x020	GPIO_OE	GPIO output enable
0x024	GPIO_OE_SET	GPIO output enable set
0x028	GPIO_OE_CLR	GPIO output enable clear

GPIO_OE_SET

Bits Description		Туре	Reset
31:30	Reserved.	-	-
29:0	Perform an atomic bit-clear on GPIO_OE, i.e. 6PIO_0E &= ~wdata	wo	0x00000000

GPIO IN

Bits	Description	Туре	Reset
31:30	Reserved.	-	-
29:0	Input value for GPI0029	RO	0x00000000

```
use core::ptr::read_volatile;
use core::ptr::write_volatile;

const GPIO_OE_CLR: *mut u32= 0xd000_0028 as *mut u32;

const GPIO_IN: *const u32= 0xd000_0004 as *const u32;

let value = unsafe {
    // set bit `pin` of `GPIO_OE` to 0 (input)
    write_volatile(GPIO_OE_CLR, 1 << pin);
    read_volatile(GPIO_IN) >> pin & 0b1
};
```

SIO Output

The SIO registers start at a base address of 0xd0000000 (defined as SIO_BASE in SDK).

Offset	Name	Info
0x000	CPUID	Processor core identifier
0x004	GPIO_IN	Input value for GPIO pins
0x008	GPIO_HI_IN	Input value for QSPI pins
0x010	GPIO_OUT	GPIO output value
0x014	GPIO_OUT_SET	GPIO output value set
0x018	GPIO_OUT_CLR	GPIO output value clear
0x01c	GPIO_OUT_XOR	GPIO output value XOR
0x020	GPIO_OE	GPIO output enable
0x024	GPIO_OE_SET	GPIO output enable set
0x028	GPIO_OE_CLR	GPIO output enable clear

GPIO_OE_CLR

	Bits	Description	Туре	Reset
	31:30	Reserved.	-	-
ı	29:0	Perform an atomic bit-clear on GPIO_OE, i.e. GPIO_OE &= ~wdata		0x00000000

GPIO OUT

Bits	Description	Туре	Reset
31:30	Reserved.		-
29:0	Set output level (1/0 → high/low) for GPI0029. Reading back gives the last value written, NOT the input value from the pins. If core 0 and core 1 both write to GPI0_OUT simultaneously (or to a SET/CLR/XOR alias), the result is as though the write from core 0 took place first, and the write from core 1 was then applied to that intermediate result.	RW	0x0000000

```
use core::ptr::read volatile;
     use core::ptr::write volatile;
     const GPIO OE SET: *mut u32= 0xd000 0024 as *mut u32;
     const GPIO OUT: *mut u32 = 0xd000 0010 as *mut u32;
 6
     unsafe {
       // set bit `pin` of GPIO OE to 1 (output)
       write volatile(GPIO OE SET, 1 << pin);</pre>
       // write volatile(GPIO OUT, (value & 0b1) << pin);</pre>
10
11
       let gpio_out = read_volatile(GPIO_OUT);
12
       gpio_out = gpio_out | (value & 0b1) << pin;</pre>
13
       write_volatile(GPIO_OUT, gpio_out);
14
    };
```

SIO Output

efficient

The SIO registers start at a base address of 0xd0000000 (defined as SIO_BASE in SDK).

Offset	Name	Info
0x000	CPUID	Processor core identifier
0x004	GPIO_IN	Input value for GPIO pins
0x008	GPIO_HI_IN	Input value for QSPI pins
0x010	GPIO_OUT	GPIO output value
0x014	GPIO_OUT_SET	GPIO output value set
0x018	GPIO_OUT_CLR	GPIO output value clear
0x01c	GPIO_OUT_XOR	GPIO output value XOR
0x020	GPIO_OE	GPIO output enable
0x024	GPIO_OE_SET	GPIO output enable set
0x028	GPIO_OE_CLR	GPIO output enable clear

GPIO OUT SET


Bits	Description	Туре	Reset
31:30	Reserved.	-	-
29:0	Perform an atomic bit-set on GPIO_OUT, i.e. GPIO_OUT = wdata	wo	0x00000000

GPIO OUT CLR

Bits	Description	Туре	Reset
31:30	Reserved.	-	-
29:0	Perform an atomic bit-clear on GPIO_OUT, i.e. 6PIO_OUT 8= ~wdata	wo	0x00000000

```
use core::ptr::read_volatile;
     use core::ptr::write volatile;
     const GPIO_0E_SET: *mut u32= 0xd000_0024 as *mut u32;
     const GPIO OUT SET:*mut u32= 0xd000 0014 as *mut u32;
     const GPIO OUT CLR:*mut u32= 0xd000 0018 as *mut u32;
     unsafe {
         write_volatile(GPIO_OE_SET, 1 << pin);</pre>
         let reg = match value {
10
11
           0 => GPIO OUT CLR,
            _ => GPIO_OUT SET
12
13
         write volatile(reg, 1 << pin);</pre>
14
15
    };
```

IO Bank

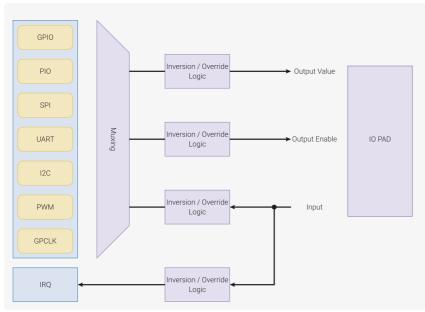

The User Bank IO registers start at a base address of 0x40014000 (defined as IO_BANKO_BASE in SDK).

Offset N	Name	Info
0x000 G	GPIO0_STATUS	GPIO status
0x004 G	GPIO0_CTRL	GPIO control including function select and overrides.

■ set FUNCSEL to 5 (SIO)

$GPIOx_CTRL$



Offset: 0x004, 0x00c, ... 0x0ec (0x4 + 8*x)

Bits	Name	Description	Туре	Reset
31:30	Reserved.	-	-	-
29:28	IRQOVER	$0x0 \rightarrow don't$ invert the interrupt $0x1 \rightarrow don't$ invert the interrupt $0x2 \rightarrow drive$ interrupt low $0x3 \rightarrow drive$ interrupt high	RW	0x0
27:18	Reserved.	-	-	-
17:16	INOVER	0x0 o don't invert the peri input $0x1 o don't$ invert the peri input $0x2 o drive$ peri input low $0x3 o drive$ peri input high	RW	0x0
15:14	Reserved.	-	-	-
13:12	OEOVER	0x0 o drive output enable from peripheral signal selected by funcsel $0x1 o drive$ output enable from inverse of peripheral signal selected by funcsel $0x2 o disable$ output $0x3 o enable$ output	RW	0x0
11:10	Reserved.	-	-	-
9:8	OUTOVER	0x0 → drive output from peripheral signal selected by funcsel 0x1 → drive output from inverse of peripheral signal selected by funcsel 0x2 → drive output low 0x3 → drive output high	RW	0x0
7:5	Reserved.	-	-	-
4:0	FUNCSEL	Function select. 31 == NULL. See GPIO function table for available functions.	RW	0x1f

IO Bank Input

The User Bank IO registers start at a base address of 0x40014000 (defined as IO_BANKO_BASE in SDK).

Offset	Name	Info
0x000	GPI00_STATUS	GPIO status
0x004	GPI00_CTRL	GPIO control including function select and overrides.

```
use core::ptr::read_volatile;
     use core::ptr::write volatile;
     const GPIOX_CTRL: u32 = 0x4001_4004;
     const GPIO OE CLR: *mut u32= 0xd000 0028 as *mut u32;
     const GPIO IN: *const u32= 0xd000 0004 as *const u32;
     let gpio_ctrl = (GPIOX_CTRL + 8 * pin) as *mut u32;
 9
     let value = unsafe {
11
         write_volatile(gpio_ctrl, 5);
12
         write volatile(GPIO OE CLR, 1 << pin);</pre>
13
         read volatile(GPIO IN) >> pin & 0b1
14
    };
```

GPIOx_CTRL



Offset: 0x004, 0x00c, ... 0x0ec (0x4 + 8*x)

Bits	Name	Description	Туре	Reset
31:30	Reserved.		-	-
29:28	IRQOVER	$0x0 \rightarrow don't$ invert the interrupt $0x1 \rightarrow don't$ invert the interrupt $0x2 \rightarrow don't$ interrupt low $0x3 \rightarrow don't$ interrupt high	RW	0x0
27:18	Reserved.	-	-	-
17:16	INOVER	0x0 → don't invert the peri input 0x1 → invert the peri input 0x2 → drive peri input low 0x3 → drive peri input high	RW	0x0
15:14	Reserved.	-	-	-
13:12	OEOVER	0x0 → drive output enable from peripheral signal selected by funcsel 0x1 → drive output enable from inverse of peripheral signal selected by funcsel 0x2 → disable output 0x3 → enable output	RW	0x0
11:10	Reserved.	-	-	-
9:8	OUTOVER	0x0 → drive output from peripheral signal selected by funcsel 0x1 → drive output from inverse of peripheral signal selected by funcsel 0x2 → drive output low 0x3 → drive output high	RW	0x0
7:5	Reserved.	-	-	-
4:0	FUNCSEL	Function select. 31 == NULL. See GPIO function table for available functions.	RW	0x1f

IO Bank Output

The User Bank IO registers start at a base address of 0x40014000 (defined as IO_BANKO_BASE in SDK).

Offset	Name	Info
0x000	GPI00_STATUS	GPIO status
0x004	GPI00_CTRL	GPIO control including function select and overrides.

```
use core::ptr::read volatile;
     use core::ptr::write volatile;
     const GPIOX CTRL: u32 = 0x4001 4004;
     const GPIO OE SET: *mut u32= 0xd000 0024 as *mut u32;
     const GPIO OUT SET: *mut u32= 0xd000 0014 as *mut u32;
     const GPIO OUT CLR:*mut u32= 0xd000 0018 as *mut u32;
     let qpio ctrl = (GPIOX CTRL + 8 * pin) as *mut u32;
     unsafe {
11
         write volatile(qpio ctrl, 5);
12
         write volatile(GPIO OE SET, 1 << pin);</pre>
13
        let reg = match value {
14
           0 => GPIO OUT CLR,
           _ => GPIO_OUT SET
15
16
17
         write volatile(reg, 1 << pin);</pre>
18
    };
```


$GPIOx_CTRL$



Offset: 0x004, 0x00c, ... 0x0ec (0x4 + 8*x)

Bits	Name	Description	Туре	Reset
31:30	Reserved.	-	-	-
29:28	IRQOVER	$0x0 \rightarrow don't$ invert the interrupt $0x1 \rightarrow invert$ the interrupt $0x2 \rightarrow drive$ interrupt low $0x3 \rightarrow drive$ interrupt high	RW	0x0
27:18	Reserved.	-	-	-
17:16	INOVER	0x0 → don't invert the peri input 0x1 → invert the peri input 0x2 → drive peri input low 0x3 → drive peri input high	RW	0x0
15:14	Reserved.	-	-	-
13:12	OEOVER	$\begin{array}{c} 0x0 \rightarrow \text{drive output enable from peripheral signal selected} \\ \text{by funcsel} \\ 0x1 \rightarrow \text{drive output enable from inverse of peripheral} \\ \text{signal selected by funcsel} \\ 0x2 \rightarrow \text{disable output} \\ 0x3 \rightarrow \text{enable output} \\ \end{array}$	RW	0x0
11:10	Reserved.	-	-	-
9:8	OUTOVER	$\begin{array}{c} 0x0 \rightarrow \text{drive output from peripheral signal selected by} \\ \text{funcsel} \\ 0x1 \rightarrow \text{drive output from inverse of peripheral signal} \\ \text{selected by funcsel} \\ 0x2 \rightarrow \text{drive output low} \\ 0x3 \rightarrow \text{drive output high} \\ \end{array}$	RW	0x0
7:5	Reserved.	-	-	-
4:0	FUNCSEL	Function select. 31 == NULL. See GPIO function table for available functions.	RW	0x1f

Pad Control

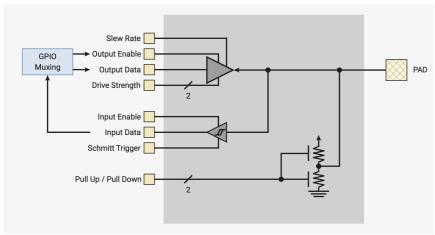

The User Bank Pad Control registers start at a base address of 0x4001c000 (defined as PADS_BANKO_BASE in SDK).

Name	Info
VOLTAGE_SELECT	Voltage select. Per bank control
GPIO0	Pad control register
GPI01	Pad control register
GPIO2	Pad control register
GPI03	Pad control register
GPIO4	Pad control register
GPI05	Pad control register
3	PIO0 PIO0 PIO0 PIO0 PIO0 PIO0 PIO0 PIO0

GPIOx Register



Offset: 0x004, 0x008, ... 0x078 (0x4 + 4*x)


Bits	Name	Description	Туре	Reset
31:8	Reserved.	-	-	-
7	OD	Output disable. Has priority over output enable from peripherals	RW	0x0
6	IE	Input enable	RW	0x1

Bits	Name	Description	Туре	Reset
5:4	5:4 DRIVE Drive strength.		RW	0x1
		0x0 → 2mA		
		0x1 → 4mA		
		0x2 → 8mA		
		0x3 → 12mA		
3	PUE	Pull up enable	RW	0x0
2	PDE	Pull down enable	RW	0x1
1	SCHMITT	Enable schmitt trigger	RW	0x1
0	SLEWFAST	Slew rate control. 1 = Fast, 0 = Slow	RW	0x0

Input

read the value from pin x


- set the FUNCSEL field of GPIOx_CTRL to 5
- set the GPIO_OE_CLR bit x to 1
- read the GPIO_IN bit x
- adjust the GPIOx fields to set the pull up/down resistor

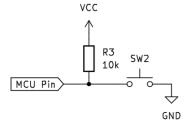

Output



- set the FUNCSEL field of GPIOx CTRL to 5
- set the GPIO_OE_SET bit x to 1
- if the value
 - is 0, set the GPIO_OUT_CLR bit x to 1
 - is 1, set the GPIO_OUT_SET bit x to 1
- adjust the GPIOx fields to set the output current

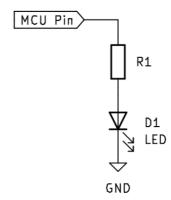






Rust Embedded HAL

The Rust API for embedded systems





Framework	Tasks, Memory Management, Network etc. embassy-rs, rtic
BSC	Board Support Crate embassy-rp, rp-pico
HAL Implementation	Uses the PAC and exports a standard HAL towards the upper levels embassy-rp
PAC	Accesses registers, usually created automatically from SVD files - rp2040_pac , rp-pac

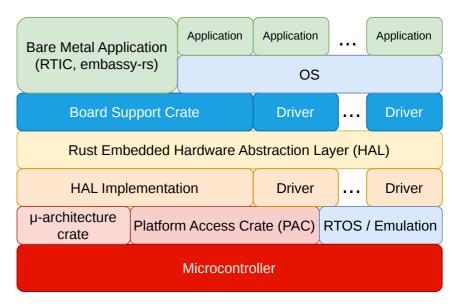





A set of standard traits

All devices should implement these traits for GPIO.

```
pub enum PinState {
Low,
High,
}
```

Input

```
pub trait InputPin: ErrorType {
    // Required methods
    fn is_high(&mut self) -> Result<bool, Self::Error>;
    fn is_low(&mut self) -> Result<bool, Self::Error>;
}
```

Output

```
pub trait OutputPin: ErrorType {
    // Required methods
    fn set_low(&mut self) -> Result<(), Self::Error>;
    fn set_high(&mut self) -> Result<(), Self::Error>;

    // Provided method
    fn set_state(&mut self, state: PinState) -> Result<(), Sel:
}</pre>
```

Bare metal

道图》

This is how a Rust application would look like

```
#![no_std]
     #![no_main]
     use cortex_m_rt::entry;
     #[entry]
     fn main() -> ! {
      // your code goes here
 9
10
         loop { }
11
12
13
     #[panic_handler]
     pub fn panic(_info: &PanicInfo) -> ! {
15
         loop { }
16
```

Rules

- 1. never exit the main function
- 2. add a panic handler that does not exit

Bare metal without PAC & HAL

This is how a Rust application would look like

```
#![no std]
     #![no_main]
     use core::ptr::{read volatile, write volatile};
     use cortex m rt::entry;
 6
     const GPIOX CTRL: u32 = 0 \times 4001 + 4004;
     const GPIO OE SET: *mut u32= 0xd000 0024 as *mut u32;
     const GPIO OUT SET:*mut u32= 0xd000 0014 as *mut u32;
     const GPIO OUT CLR:*mut u32= 0xd000 0018 as *mut u32;
11
     #[panic handler]
12
     pub fn panic( info: &PanicInfo) -> ! {
13
14
         loop { }
15
```

```
#[entry]
     fn main() -> ! {
         let gpio ctrl = GPIOX CTRL + 8 * pin as *mut u32;
20
         unsafe {
22
             write volatile(qpio ctrl, 5);
23
             write volatile(GPIO OE SET, 1 << pin);</pre>
             let req = match value {
24
             0 => GPIO OUT CLR,
              => GPIO OUT SET
27
28
             write volatile(req, 1 << pin);</pre>
29
30
31
         loop { }
32
```



embassy-rs

Embedded Asynchronous

embassy-rs

- framework
- uses the rust-embedded-hal
- Features
 - Real-time
 - Low power
 - Networking
 - Bluetooth
 - USB
 - Bootloader and DFU





```
#![no_std]
     #![no_main]
     use embassy executor::Spawner;
     use embassy_rp::gpio;
     use gpio::{Input, Pull};
     #[embassy executor::main]
     async fn main(_spawner: Spawner) {
10
         let p = embassy_rp::init(Default::default());
         let pin = Input::new(p.PIN_3, Pull:Up);
11
12
         if pin.is_high() {
13
14
15
         } else {
16
17
18
```

The main function is called by the embassy-rs framework, so it can exit.





```
#![no_std]
#![no_main]

use embassy_executor::Spawner;
use embassy_rp::gpio;
use gpio::{Level, Output};

#[embassy_executor::main]
async fn main(_spawner: Spawner) {
    let p = embassy_rp::init(Default::default());
    let mut pin = Output::new(p.PIN_2, Level::Low);

pin.set_high();
}
```

The main function is called by the embassy-rs framework, so it can exit.

Conclusion

B

we discussed about

- Memory Mapped IO
- RP2040 GPIO
 - Single Cycle IO
 - IO Bank
 - Pad
- The Rust embedded standard stack
- Bare metal Rust
- The embassy-rs framework