Department of Computer Engineering Faculty of Engineering, University of Peradeniya

CO321 Embedded Systems - 2018

Lab 3 - Timers

Using Timers in AVR

Introduction to timers/counters

Many applications need to count occurrences of an event or generate time delays. So, there are counter registers in microcontrollers for this purpose. When we want to count events, we connect the external event source to the clock pin of the counter register. Then, when an event occurs externally, the content of the counter is incremented; this way, the content of the counter represents how many times an event has occurred.

When we want to generate time delays, we connect the oscillator to the clock pin of the counter. So, when the oscillator ticks, the content of the counter is incremented. As a result, the content of the counter register represents how many ticks have occurred from the time we have cleared the counter. Since the speed of the oscillator in a microcontroller is known, we can calculate the tick period, and from the content of the counter register we will know how much time has elapsed.

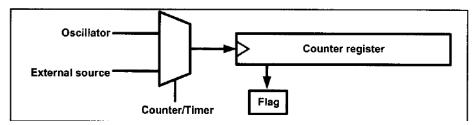


Figure 1: A general view of counters and timers in microcontrollers

Figure 1 shows the general view of a timer. All the Atmel microcontrollers have Timers as an inbuilt peripheral. ATmega328 has three timers: *TIMERo*, *TIMER1*, and *TIMER2*. They also have a *Watchdog Timer*, which can be used as a safeguard or software reset mechanism.

Here are a few details about each timer:

TIMERO

TIMERo is an 8-bit timer, meaning its counter register can record a maximum value of 255 (unsigned 8-bit value). *TIMERo* is used by native Arduino timing function such as delay ().

TIMER1

TIMER1 is a 16-bit timer, with a maximum counter value of 65535 (an unsigned 16-bit integer). The Arduino Servo library uses this timer.

TIMER2

TIMER2 is an 8-bit timer that is very similar to TIMERO. It is utilized by the Arduino tone () function.

Using Timero

To use a timer, we need to set it up, and then get it to start running. To do this, we'll use built-in registers on the AVR chip that store timer settings. Each timer involves a number of registers that do various things and the registers corresponding to *TIMERo* are described below. When programming, we can access these timer registers directly using their names.

• TCCRoA and TCCRoB

These two 8-bit registers hold setup values for the *TIMERo*. TCCR stands for *Timer/Counter Control Register*.

Each register holds 8 bits, and each bit stores a configuration value as shown in Figure 2.

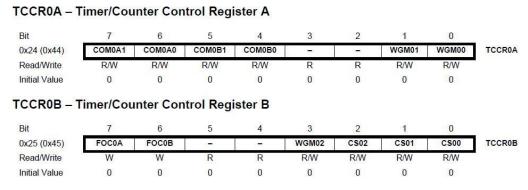


Figure 2: Timer/Countero control registers A & B

To start using our timer, the most important settings are the last three bits in TCCRoB: CS12, CS11, and CS10. These dictate the timer clock setting. By setting these bits in various combinations, we can tell the timer to run at different speeds. Figure 3 shows the relevant table from the data sheet.

CS02	CS01	CS00	Description
0	0	0	No clock source (Timer/Counter stopped)
0	0	1	clk _{I/O} /(No prescaling)
0	1	0	clk _{I/O} /8 (From prescaler)
0	1	1	clk _{I/O} /64 (From prescaler)
1	0	0	clk _{I/O} /256 (From prescaler)
1	0	1	clk _{I/O} /1024 (From prescaler)
1	1	0	External clock source on T0 pin. Clock on falling edge.
1	1	1	External clock source on T0 pin. Clock on rising edge.

Figure 3: Clock select bit description

• TCNTo

This is the *Timer/Counter Register* where the 8-bit counter value of the timer resides. The value of the counter is stored here and increases/decreases automatically. Data can be both read/written from this register.

TIFRo

The *Timer/Counter Interrupt Flag Register* is a register shared by all the timers. Bits 1 and 0 are allotted for *TIMERo*. At present we are interested in the zeroth bit named as TOVo bit. This bit is set (one) whenever *TIMERo*'s counter overflows. This bit is reset (zero) whenever the Interrupt Service Routine (ISR) is executed. If there is no ISR to execute, we should clear it manually by writing one to it.

For complete information about the registers, refer to section 15.9 in the ATmega328P datasheet.

Modes of operation for TIMERO

TIMERO has several modes of operation, that is, different behaviors for the Timer/Counter. They are namely, Normal Mode, Clear Timer on Compare Match (CTC) Mode, Fast PWM Mode and Phase Correct PWM Mode. The mode is defined by the combination of the Waveform Generation mode (WGMo2:0) and Compare Output mode (COMox1:0) bits. Here we are only focusing on the normal mode.

Normal mode of TIMERo

In this mode, the content of the timer/counter increments with each clock. It counts up until it reaches its max of $0 \times FF$. When it rolls over from $0 \times FF$ to 0×00 , it sets high a flag bit called TOVo (Time Overflow) in TIFRO Register. This time flag can be monitored.

For complete information about the modes of operation, refer to section 15.7 in the ATmega328P datasheet.

Steps to program TIMERo in normal mode

To generate a time delay using *TIMERo* in Normal mode, the following steps are taken.

- 1. Load the TCNTo register with the initial count value.
- 2. Load the values into the TCCROA and TCCROB register, indicating which mode is to be used and the prescaler option (you will have to refer to the datasheet to identify the bits that should be set for the corresponding mode). When you select the clock source, the timer/counter starts to count, and each tick causes the content of the timer/counter to increment by 1.
- 3. Keep monitoring the Timer Overflow flag (TOVo) to see if it is raised. Get-out of the loop when TOVo becomes high.
- 4. Stop the timer by disconnecting the clock source.
- 5. Clear the TOVo flag for the next round.
- 6. Go back to step 1 to load TCNTo again.

Example:

Write a C program to toggle all the bits of PORTB continuously with a fixed delay. Use *TIMERo*, in Normal mode, and no pre-scalar options to generate the delay. (go to next page for the sample code)

Code	:	

```
#include <avr/io.h>
void delay timer0(){
   TCNT0 = 0x00; /*Load timer counter register with 0*/
   TCCR0A = 0x00; /*Set the Timer0 under normal mode with no prescaler*/
   TCCR0B = 0x01;
   while ((TIFRO & 0x01) == 0); /*Wait till timer overflow bit (TOV0) is set*/
                       /*clear timer settings (this stops the timer)*/
   TCCR0A = 0x00;
   TCCR0B = 0x00;
   TIFR0 = 0x01; /*Clear the timer overflow bit (T0V0) for next round*/
    /*strange thing about this flag is that in order to clear it we should
   write 1 to it This rule applies to all flags of AVR chip*/
}
int main (void)
DDRB = DDRB | (1<<5);
                           /* configure pin 5 of PORTB for output*/
while(1) {
 PORTB = PORTB | (1<<5); /* set pin 5 high to turn led on */
 delay timer0();
 PORTB = PORTB & \sim (1 << 5); /* set pin 5 low to turn led off */
 delay_timer0();
}
```

Calculating delay length for timers

The delay length for TIMERo in normal mode depends primarily on two factors:

- a) The crystal frequency
- b) The pre-scalar factor

A third factor in the delay size is the C compiler because various C compilers generate different hex code sizes, and amount of overhead due to the instructions varies by compiler.

Exercise 1:

Write a C program to toggle only bit 5 in PORTB register (PB5) every 70µs. Use *Timero*, Normal mode, and 1:8 prescaler to create the delay. Assume XTAL=16MHz.

Derivation of initial counter value:

```
XTAL = 16\text{MHz} \rightarrow T_{\text{machine cycle}} = 1/16 \text{ MHz}
Prescaler = 1:8 \rightarrow T_{\text{clock}} = 8 \text{ x } 1/16 \text{ MHz} = 0.5 \mu\text{s}
70 \mu\text{s}/0.5 \mu\text{s} = 140 \text{ clocks} \rightarrow 1+255 - 140 = 116
```

Code:

```
#include <avr/io.h>
void delay timer0(){
   TCNT0 = 116;
                     /*Load timer counter register*/
   TCCR0A = 0x00;
                     /*Set the TimerO under normal mode with 1:8 prescaler*/
   TCCR0B = 0x02;
   while ((TIFR0 &0x01) == 0); /*Wait till timer overflow bit (T0V0) is set*/
   TCCR0A = 0x00;
                      /*clear timer settings (this stops the timer) */
   TCCR0B = 0x00;
                      /*Clear the timer overflow bit (TOVO) for next round*/
   TIFR0 = 0x01;
   /*strange thing about this flag is that inorder to clear it we should write 1 to it.
   This rule applies to all flags of AVR chip*/
}
int main (void)
   DDRB = DDRB | (1<<5); /* configure pin 5 of PORTB for output*/
   while(1) {
       delay timer0();
}
```

Exercise 2:

Write a C program to toggle only bit 5 in PORTB register (PB5) every 2ms. Use *TIMERo*, Normal mode, and a suitable pre-scalar to create the delay. Assume XTAL= 16 MHz. Explain the output. What is the reason for it?

Exercise 3:

Try to implement the delay function in the "Knight Rider" circuit using *TIMERo* with a delay of 500ms. Talk to an instructor and explain how this can be done, or why this cannot be done.

Exercise 4:

Write a C program to toggle only bit 5 in PORTB register (PB5) with the highest interval possible using *TIMERo*, normal mode, and a suitable pre-scalar to create the delay. Assume XTAL= 16MHz. What is the maximum delay?

(You must finish and show exercise 1-4 on the first day of Lab3. Exercises 5-7 should be finished on the second day of Lab3)

Exercise 5:

Write a program that toggles an LED connected to PB5 pin every second using TIMER1, while at the same time lighting up a knight rider circuit of 4 LEDs. For the LED toggle you should use the timer overflow interrupts. For the knight rider circuit you are allowed use either timer interrupts or software delays or any other method.

Exercise 6:

You found out the maximum interval you can implement using *TIMERo* in exercise 4. However, by using an 8-bit counter variable and interrupts, you can make this interval much longer. Develop a program to blink a LED with a 100ms interval using TIMERo.

Exercise 7:

Implement a program to blink two LEDs. One led should blink with an interval of 50 ms and the other should blink with an interval of 500ms. You have to do this using two timers.