Lab 2 – Reading from analog and encoder sensors. Outputting to PWM.

Part 1: Reading an Analog Signal

Objective:

For Part 1, the brightness of the LED will be controlled using pulse width modulation (PWM), which will be adjusted based on the position of the potentiometer's wiper.

Background Information:

Arduino's onboard *analog to digital converter (ADC)* converts an analog signal to a digital value. The following equation relates the input voltage to the converted digital value:

$$\frac{A/D_{result}}{ADC_{resolution}} = \frac{V_{in}}{V_{ref}}$$

- ullet V_{in} is the input voltage typically from a sensor or in this case a potentiometer
- V_{ref} is the reference voltage (usually 5v)
- $ADC_{resolution}$ is the resolution of the ADC conversion, in this case it is 10 bits (1023)


Question: If the value of the ADC on AO of the Arduino is 512, what is the input voltage on AO?

If the microcontroller does not have Digital to Analog Converter (DAC) then it can only output a binary high or low voltage (5v or 0). *Pulse width modulation (PWM)* is used to create an *average* voltage by varying the duty cycle, or the amount of time the signal is on/off. In this lab the LED on pin 13 will be driven by a PWM. A 100% duty cycle corresponds to fully powering the LED with 5v and a 0% duty cycle means the LED will receive 0v. A 50% duty cycle means *on average* the voltage seen by the LED is 2.5v. The value assigned to the PWM block can be from 0 to 255: 100% duty cycle corresponding to 255 and 0% duty cycle corresponding to 0.

Simulink Model

Build and run the following Simulink diagram with the following settings:

(Note: The "POT in" and "PWM out" blocks both use the 'Scope' block found under 'Sinks')

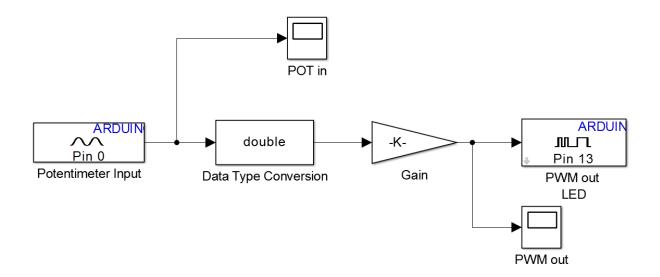

- **Configuration Parameters**: The "Fixed-step size" should be .03. (the fastest recommended size for external mode)
- **Analog Input**: Set the Pin number to 0 and the sampling time to -1. When the sample time is -1 the block will inherit the sample time used in the simulation settings. (in this case .03)
- **PWM:** Set the Pin to 13 (the onboard LED).
- **Gain:** Set the gain to the correct value to so the analog input's full range will utilize the full PWM output
 - Hint: what is the maximum digital value for the PWM block and the maximum value for the ADC?
- **Data Type Conversion:** Go to Simulink-> Signal Attributes. Double click this block and set output data type to double. This is done so that floating point math is performed to avoid truncation and division errors associated with fixed point numbers.

Question: What is the correct value for the gain?

Make sure you set the simulation with the following options at the Model Configuration menu.

Checkpoint 1:

Observe the scopes while changing the position of the potentiometer wiper. Click the 'Autoscale' button to see the full range of the graphs. At what potentiometer wiper position is the LED brightest? At what position of the potentiometer wiper is the LED completely dim?

Part 2: Reading Encoders

Objective:


For Part 2, an encoder will be used to determine the position of the output motor shaft. The brightness of the LED will be controlled based on the position.

Background Information:

An encoder is a device that can be used to determine position. Most encoders use optical sensors to output a pulse train which can be decoded to determine position and direction. In this lab the NXT's internal encoder will be used to track angular position.

• The NXT encoder has a raw resolution of 12 counts. The figure on the left below show the actual encoder wheel in the NXT motor. It has 12 holes. The optical sensor will output a high or low (1 or 0) depending on the position of this encoder. Each revolution will produce 12 pulses.



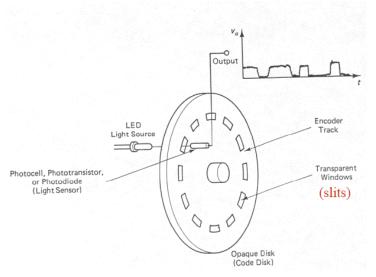


- If the output motor shaft moves 1 revolution the encoder wheel turns 15 revolutions this means for one revolution of the motor output shaft there will be 15*12 = 180 pulses from the encoder.
- The encoder device provides two channels A & B. These channels are the
 encoder pulses with one channel shifted by 90 degrees. By monitoring these
 two channels both the position and direction of the motor shaft can be
 determined. If quadrature decoding is used the resolution can be increased by 4
 times.
- The Encoder block included with this lab performs quadrature decoding so the total resolution is:

Anglular Resolution = 15 * 12 * 4 = 720 pulses per revolution of output shaft

Simulink Model

- Copy the following files to your Matlab folder where you will build the Simulink diagram (all the these files and
 - o sf Encoder.mexw64
 - o sf Encoder.tlc
 - sf_Encoder_wrapper.c
 - Encoder_Block.slx

Build the following Simulink Model (the Encoder block is inside the Encoder_Block Simulink diagram)

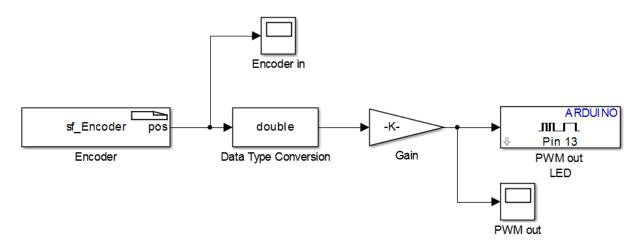

Question: What value does the gain need to be so that 1 revolution of the encoder will obtain the maximum value of the PWM?

Checkpoint 2:

Run the simulation and observe the scope and the LED when you rotate the encoder's wheel clockwise and counter-clockwise.

Verify that one revolution of the output motor shaft results in a position of 720. You can also add a 'Sinks -> Display' block to see exact values.