## **ARM**

# Assembly Language and Machine Code

Goal: Blink an LED

```
/// SET0 = 0x2020001c
// SET0 = 0x20200020
mov r0, #0x20 // 0x00000020
lsl r1, r0, #24 // 0x2000000
lsl r2, r0, #16 // 0x00200000
orr r0, r1, r2 // 0x20200000
orr r0, r0, #0x1c // 0x2020001c
mov r1, #1 // 0x0000001
lsl r1, #20 // 0x00010000
str r1, [r0] // store 1<<20 to 0x2020001c
// loop forever
loop:
b loop
```

```
// configure GPIO 20 for output
//
// FSEL0 = 0x20200000
// FSEL1 = 0x20200004
// FSEL2 = 0x20200008
mov r0, #0x20 // 0x00000020
lsl r1, r0, #24 // 0x20000000
lsl r2, r0, #16 // 0x00200000
orr r0, r1, r2 // 0x20200000
orr r0, r0, #0x08 // 0x20200008
               // 1 indicates OUTPUT
mov r1, #1
str r1, [r0]
                  // store 1 to 0x20200008
```

#### **GPIO Function Select Registers Addresses**

Address	Field Name	Description	Size	Read/ Write
0x 7E20 0000	GPFSEL0	GPIO Function Select 0	32	R/W
0x 7E20 0000	GPFSEL0	GPIO Function Select 0	32	R/W
0x 7E20 0004	GPFSEL1	GPIO Function Select 1	32	R/W
0x 7E20 0008	GPFSEL2	GPIO Function Select 2	32	R/W
0x 7E20 000C	GPFSEL3	GPIO Function Select 3	32	R/W
0x 7E20 0010	GPFSEL4	GPIO Function Select 4	32	R/W
0x 7E20 0014	GPFSEL5	GPIO Function Select 5	32	R/W
0x 7E20 0018	-	Reserved	-	-

Watch out for ...

Manual says: 0x7E200000

Replace 7E with 20: 0x20200000


Ref: BCM2835-ARM-Peripherals.pdf

## GPIO Pins can be configured to be INPUT, OUTPUT, or ALTO-ALT5

Bit pattern	Pin Function
000	The pin in an input
001	The pin is an output
100	The pin does alternate function 0
101	The pin does alternate function 1
110	The pin does alternate function 2
111	The pin does alternate function 3
011	The pin does alternate function 4
010	The pin does alternate function 5

Specifying 1 of 8 functions requires 3 bits

#### **GPIO Function Select Register**

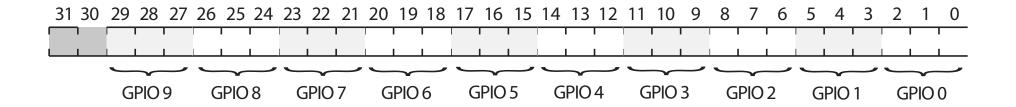

#### Function is INPUT, OUTPUT, or ALTO-ALT5

3 bits per GPIO pin

10 pins per 32-bit register (2 wasted bits)

54 GPIOs pins requires 6 registers

#### **GPIO Pin Output Set Registers (GPSETn)**

#### SYNOPSIS

The output set registers are used to set a GPIO pin. The SET{n} field defines the respective GPIO pin to set, writing a "0" to the field has no effect. If the GPIO pin is being used as in input (by default) then the value in the SET{n} field is ignored. However, if the pin is subsequently defined as an output then the bit will be set according to the last set/clear operation. Separating the set and clear functions removes the need for read-modify-write operations

Bit(s)	Field Name	Description	Туре	Reset
31-0	SETn (n=031)	0 = No effect 1 = Set GPIO pin <i>n</i>	R/W	0

**Table 6-8 – GPIO Output Set Register 0** 

Bit(s)	Field Name	Description	Туре	Reset
31-22	-	Reserved	R	0
21-0	SETn (n=3253)	0 = No effect 1 = Set GPIO pin <i>n</i> .	R/W	0

#### Table 6-9 - GPIO Output Set Register 1

#### **GPIO** Function SET Register

20 20 00 1C : GPIO SET0 Register

20 20 00 20 : GPIO SET1 Register

	31	30	29	28	27	26	25	24	23	22	21	20	19	18	17	16	15	14	13	12	11	10	9	8	7	6	5	4	3	2	1	0
٦		1		1		l		ı		1	ı		I	1		1	ı		ı	ı				ı	- 1		Т			ı		
L								<u> </u>		<u> </u>				<u> </u>		<u> </u>								!							—	
											53	52	51	50	49	48	47	46	45	44	43	42	41	40	39	38	37	36	35	34	33	32
٢		1		1		l		1		T			I	T		1	ı		ı	ı				ı	- 1		Т			Т		
L												1			1																	

#### **Notes**

- 1. 1 bit per GPIO pin
- 2. 54 pins requires 2 registers

## **Memory Map**

Peripheral registers are mapped into address space

Memory-Mapped IO (MMIO)

MMIO space is above physical memory

100000000<sub>16</sub>

02000000016

512 MB

Ref: <u>BCM2835-ARM-Peripherals.pdf</u>

## 3 Types of Instructions

- 1. Data processing instructions
- 2. Loads from and stores to memory
- 3. Conditional branches to new program locations

# Data Processing Instructions and Machine Code

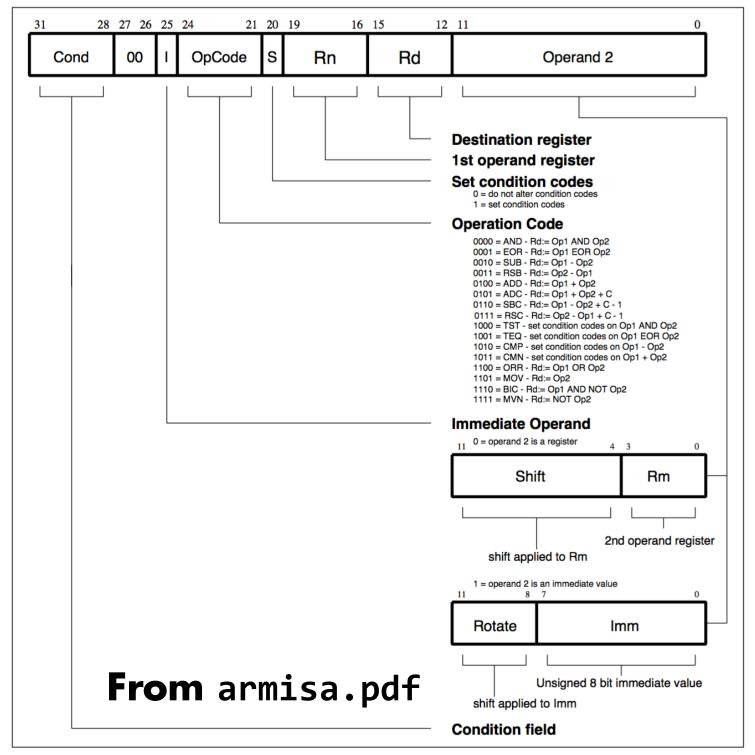


Figure 4-4: Data processing instructions


```
# data processing instruction
#
# ra = rb op rc
        Immediate mode instruction
       1110 00 i oooo s bbbb aaaa cccc cccc cccc
       Data processing instruction
    Always execute the instruction
```

<b>Assembly</b>	Code	Operations
AND	0000	ra=rb&rc
EOR (XOR)	0001	ra=rb^rc
SUB	0010	ra=rb-rc
RSB	0011	ra=rc-rb
ADD	0100	ra=rb+rc
ADC	0101	ra=rb+rc+CARRY
SBC	0110	ra=rb-rc+(1-CARRY)
RSC	0111	ra=rc-rb+(1-CARRY)
TST	1000	rb&rc (ra not set)
TEQ	1001	rb^rc (ra not set)
CMP	1010	rb-rc (ra not set)
CMN	1011	rb+rc (ra not set)
ORR (OR)	1100	ra=rb rc
MOV	1101	ra=rc
BIC	1110	ra=rb&~rc
MVN	1111	ra=~rc

```
# data processing instruction
# ra = rb op rc
#
         op rb ra rc
1110 00 i oooo s bbbb aaaa cccc cccc cccc
# i=0, s=0
         add r1 r0 r2
1110 00 0 0100 0 0001 0000 0000 0000 0010
```

```
# data processing instruction
# ra = rb op rc
#
         op rb ra rc
1110 00 i oooo s bbbb aaaa cccc cccc cccc
# i=0, s=0
         add r1 r0 r2
1110 00 0 0100 0 0001 0000 0000 0000 0010
1110 0000 1000 0001 0000 0000 0000 0010
                    0
```

#### most-significant-byte (MSB)

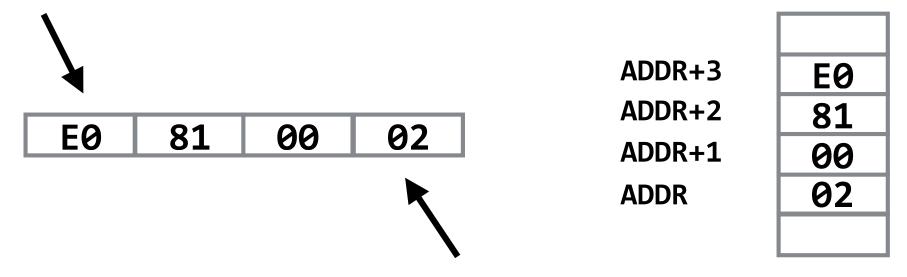


least-significant-byte (LSB)

little-endian
 (LSB first)


**ARM** uses little-endian

#### most-significant-byte (MSB)

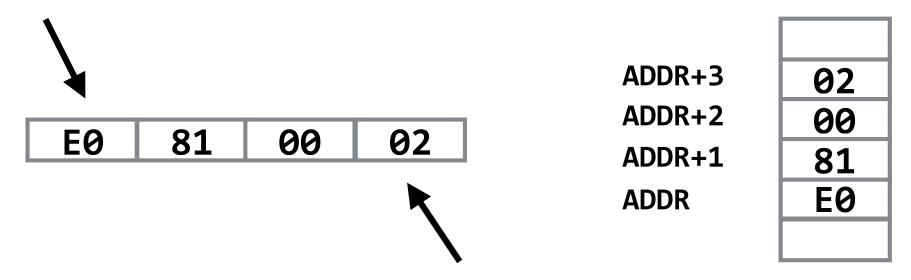


least-significant-byte (LSB)

big-endian
(MSB first)

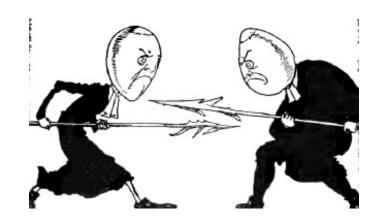

The 'little-endian' and 'big-endian' terminology which is used to denote the two approaches [to addressing memory] is derived from Swift's Gulliver s Travels. The inhabitants of Lilliput, who are well known for being rather small, are, in addition, constrained by law to break their eggs only at the little end. When this law is imposed, those of their fellow citizens who prefer to break their eggs at the big end take exception to the new rule and civil war breaks out. The big-endians eventually take refuge on a nearby island, which is the kingdom of Blefuscu. The civil war results in many casualties.


Read: Holy Wars and a Plea For Peace, D. Cohen

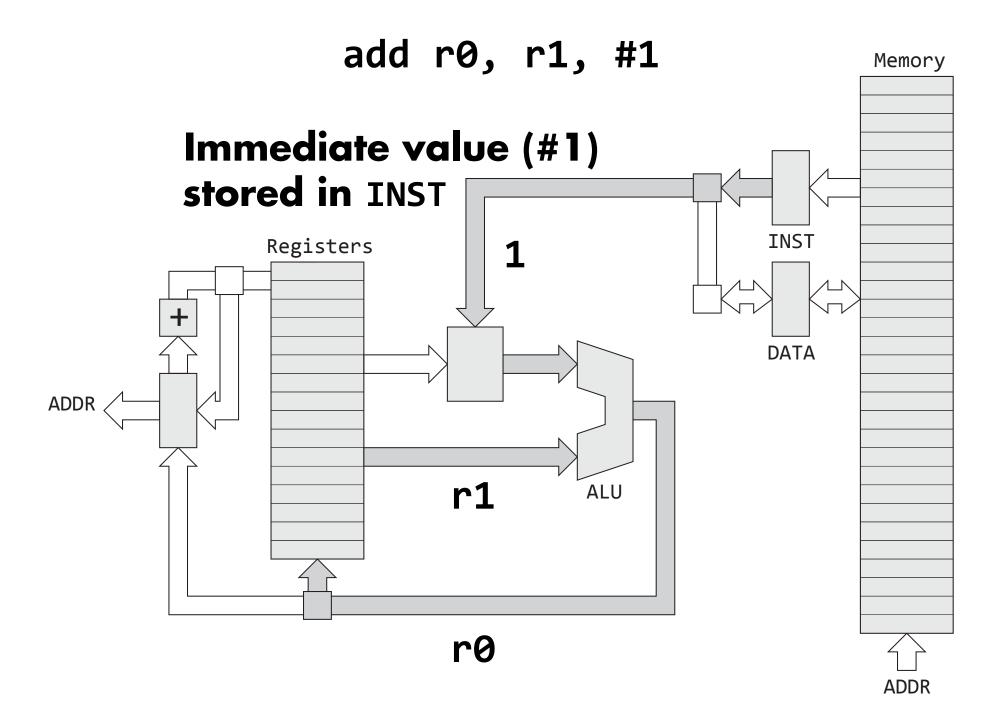


```
# data processing instruction
# ra = rb op #imm
# #imm = uuuu uuuu
          add r1 r0
                                imm
1110 00 1 0100 0 0001 0000 0000 uuuu uuuu
add r0, r1, #1
# i=1, s=0
#
# As in immediately available,
# i.e. no need to fetch from memory
```

```
# data processing instruction
# ra = rb op #imm
# #imm = uuuu uuuu
          add r1 r0
                                 imm
1110 00 1 <mark>0100</mark> 0 0001 0000 0000 uuuu uuuu
add r0, r1, #1
          add r1 r0
                                        #1
1110 00 1 0100 0 0001 0000 0000 0000 0001
```

```
# data processing instruction
# ra = rb op #imm
# #imm = uuuu uuuu
          add r1 r0
                                 imm
1110 00 1 <mark>0100</mark> 0 0001 0000 0000 uuuu uuuu
add r0, r1, #1
          add r1 r0
                                        #1
1110 00 1 0100 0 0001 0000 0000 0000 0001
1110 0010 1000 0001 0000 0000 0000 0001
                       0
```

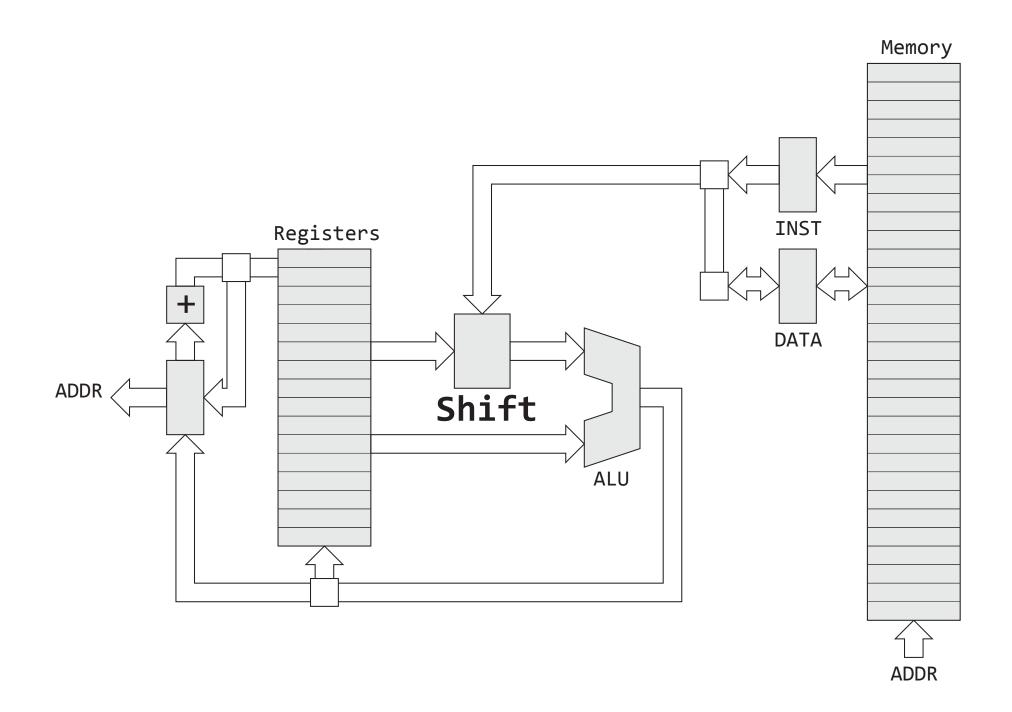

#### Rotate Right (ROR) - Rotation amount = 2x

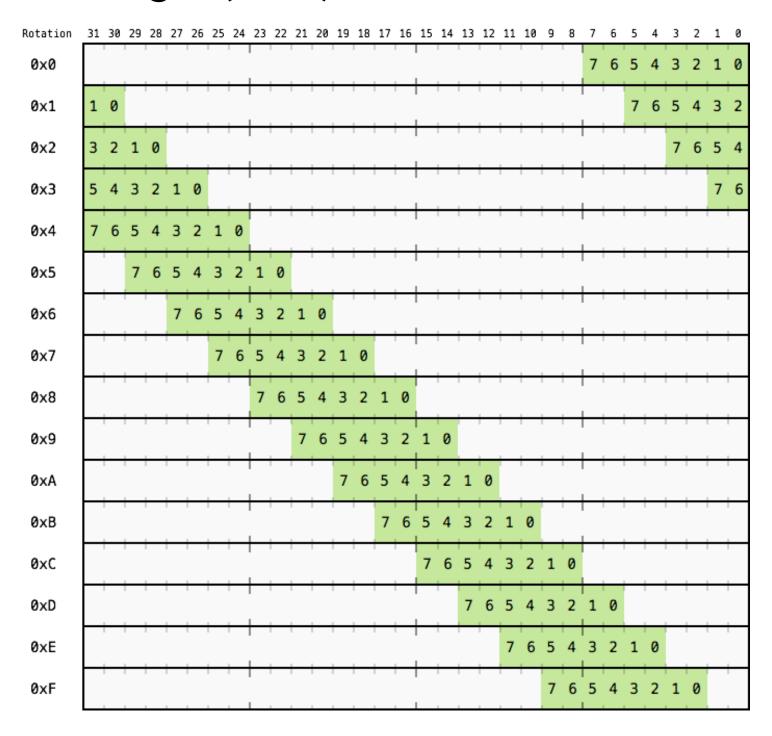

```
# data processing instruction
# ra = rb op imm
# imm = (uuuu uuuu) ROR (2*rrrr)
            rb ra ror uuu
         op
1110 00 1 oooo 0 bbbb aaaa rrrr uuuu uuuu
add r0, r1, #0x10000
         add r1 r0 0x01>>>2*8
1110 00 1 0100 0 0001 0000 1000 0000 0001
0x01>>>16
0000 0000 0000 0000 0000 0000 0000 0001
0000 0000 0000 0001 0000 0000 0000 0000
```


```
# data processing instruction
# ra = rb op imm
# imm = (uuuu uuuu) ROR (2*rrrr)
         op rb ra ror imm
1110 00 1 oooo 0 bbbb aaaa rrrr uuuu uuuu
add r0, r1, #0x10000
         add r1 r0 0x01>>>2*8
1110 00 1 0100 0 0001 0000 1000 0000 0001
1110 0010 1000 0001 0000 1000 0000 0001
           8
               1
```

```
# Determine the machine code for
sub r7, r5, #0x300
# imm = (uuuu uuuu) ROR (2*rrrr)
# Remember that ra is the result
            op rb ra ror imm
1110 00 i oooo s bbbb aaaa rrrr uuuu uuuu
// What is the machine code?
               Code
                       Operations
      Assembly
```

ra=rb-rc

0010


```
# data processing instruction
# ra = rb op imm
# imm = uuuu uuuu ROR (2*rrrr)
         op rb ra ror
1110 00 i oooo s bbbb aaaa rrrr uuuu uuuu
sub r7, r5, #0x300
         sub r5 r7 #0x03>>>24
1110 00 1 0010 0 0101 0111 1100 0000 0011
1110 0010 0100 0101 0111 1100 0000 0011
           4 5 7 C
```

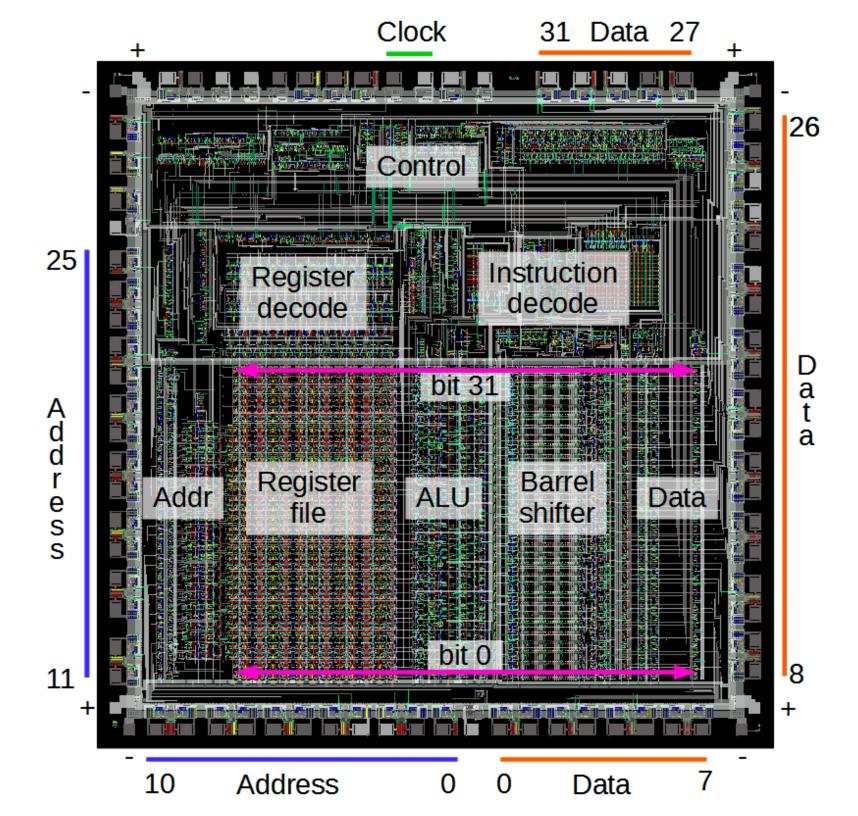

•••

```
// SET1 = 0x2020001c
mov r0, #0x20000000 // 0x20>>>8
orr r0, #0x00200000 // 0x20>>>16
orr r0, #0x0000001c // 0x1c>>>0
```

#### Load from Memory to Register (LDR)

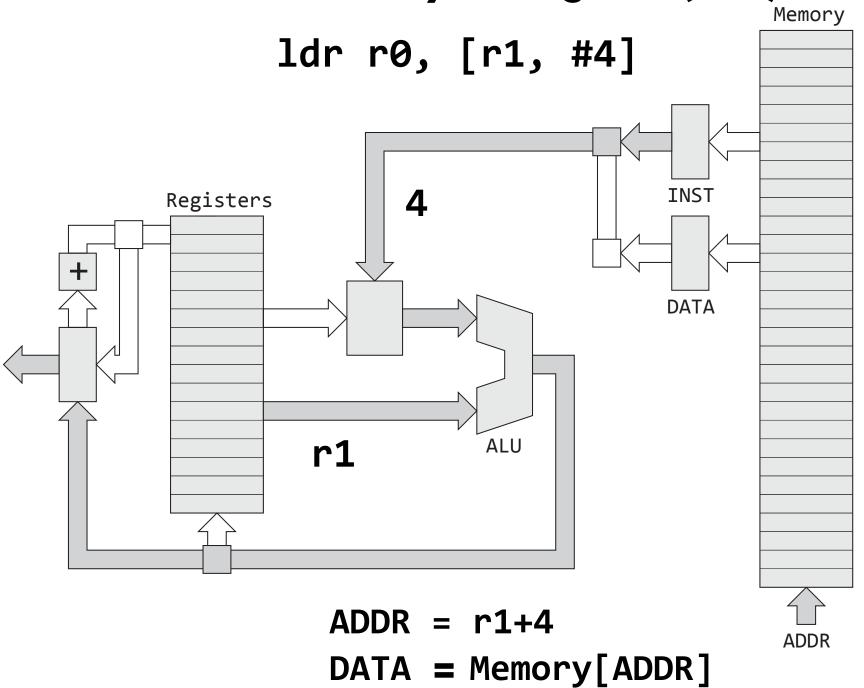

```
// configure GPIO 20 for output
ldr r0, FSEL2
mov r1, #1
str r1, [r0]
// set bit 20
ldr r0, SET0
mov r1, #0x00100000
str r1, [r0]
loop: b loop
FSEL0: .word 0x20200000
FSEL1: .word 0x20200004
FSEL2: .word 0x20200008
SET0: .word 0x2020001C
SET1: .word 0x20200020
CLR0: .word 0x20200028
CLR1: .word 0x2020002C
```

### 3 steps to run an instruction

Fetch Decode Execute

### 3 instructions takes 9 steps

# To speed things up, steps are overlapped ("pipelined")

Fetch	Decode	Execute		
	Fetch	Decode	Execute	
		Fetch	Decode	Execute

# To speed things up, steps are overlapped ("pipelined")

Fetch	Decode	Execute		_
	Fetch	Decode	Execute	
		Fetch	Decode	Execute

PC value in the executing instruction is equal to the pc value of the instruction being fetched which is 2 instructions ahead (PC+8)

## Blink

53 52 51 50 49 48 47 46 45 44 43 42 41 40 39 38 37 36 35 34 33 32

```
mov r1, #(1<<20)
```

```
// Turn on LED connected to GPI020
ldr r0, SET0
str r1, [r0]
```

// Turn off LED connected to GPI020
ldr r0, CLR0
str r1, [r0]

```
// Configure GPIO 20 for OUTPUT
loop:
 // Turn on LED
 // Turn off LED
 b loop
```

# Loops and Condition Codes

```
// define constant
.equ DELAY, 0x3f0000
mov r2, #DELAY
loop:
    subs r2, r2, #1 // s set cond code
    bne loop // branch if r2 != 0
```

# Manipulating Bit Fields

```
GPIO 29 GPIO 28 GPIO 27 GPIO 26 GPIO 25 GPIO 24 GPIO 23 GPIO 22 GPIO 21 GPIO 20
```

```
// Set GPIO 20 to OUTPUT
mov r1, #1
str r1, [r0]
// Set GPIO 21 to OUTPUT
mov r1, #(1<<3)
str r1, [r0]
// What value is in FSEL2 now?
// What mode is GPIO 20 set to now?
```

```
GPIO23
                                        GPIO 22
GPIO 29
      GPIO 28
           GPIO 27
                 GPIO 26
                       GPIO25
                            GPIO 24
                                              GPIO<sub>2</sub> 1
                                                   GPIO20
// Set GPIO 20 to OUTPUT
mov r1, #1
str r1, [r0]
// Preserve GPI020, set GPI021 to OUTPUT
ldr r1, [r0]
and r1, \#\sim(0x7<<3)
orr r1, \#(0x1<<3)
str r1, [r0]
// What value is in FSEL2 now?
```

```
// LDR FSEL2, GPI020 is OUTPUT
ldr r1, [r0]
0000 0000 0000 0000 0000 0000 0000 0001
// 0x7
0000 0000 0000 0000 0000 0000 0000 0111
// 0x7<<3
0000 0000 0000 0000 0000 0000 0011 1000
// \sim (0x7 < < 3)
1111 1111 1111 1111 1111 1111 1100 0111
and r1, \#\sim(0x7<<3)
0000 0000 0000 0000 0000 0000 0000 0001
orr r1, \#(0x1<<3)
0000 0000 0000 0000 0000 0000 0000 1001
```

## Orthogonal Instructions

**Any operation** 

Register vs. immediate operands

All registers the same\*\*

Predicated/conditional execution

Set or not set condition code

Orthogonality leads to composability

### Summary

You need to understand how processors represent and execute instructions

Instruction set architecture often easier to understand by looking at the bits. Encoding instructions in 32-bits requires trade-offs, careful design

Only write assembly when it is needed. Reading assembly more important than writing assembly Allows you to see what the compiler and processor are actually doing

Normally write code in C (Julie, starting Fri)

## The Fun Begins ...

#### Lab<sub>1</sub>

- Install tool chain before lab
- Read lab1 instructions (now online)
- Assemble Raspberry Pi Kit
- Bring USB-C to USB-A adapter (if you need it)

#### **Assignment 1**

**■ Larson scanner** 

#### **Definitive References**

BCM2865 peripherals document + errata

Raspberry Pi schematic

ARMv6 architecture reference manual

see Resources on cs107e.github.io

#### Extra Material on Branches

#### **Branch Instructions**

#### **Condition Codes**

z - Result is O

N - Result is <0

**C** - Carry generated

**V** - Arithmetic overflow

Carry and overflow will be covered later

Code	Suffix	Flags	Meaning
0000	EQ	Z set	equal
0001	NE	Z clear	not equal
0010	cs	C set	unsigned higher or same
0011	CC	C clear	unsigned lower
0100	MI	N set	negative
0101	PL	N clear	positive or zero
0110	VS	V set	overflow
0111	VC	V clear	no overflow
1000	н	C set and Z clear	unsigned higher
1001	LS	C clear or Z set	unsigned lower or same
1010	GE	N equals V	greater or equal
1011	LT	N not equal to V	less than
1100	GT	Z clear AND (N equals V)	greater than
1101	LE	Z set OR (N not equal to V)	less than or equal
1110	AL	(ignored)	always

```
# branch
cond addr
cccc 101L 0000 0000 0000 0000 0000
b = bal = branch always
cond addr
1110 101L 0000 0000 0000 0000 0000
```

bne cond addr addr 101L 0000 0000 0000 0000 0000