### **SIEMENS**

### **Technical Instructions**

Document No. 155-752 SKP25...U.. July 9, 2014

### **SKP Series**

# SKP25...U.. Pressure Regulating Gas Valve Actuator with Safety Shut-off Function



ISO 9001 and 14000 REGISTERED FIRM







Only when assembled to Series VG...U Gas valves

### Description

SKP25... pressure regulating electro-hydraulic actuators combine with VG... series gas valve bodies to provide safety shut-off and gas pressure regulation for industrial and commercial burners. The SKP25... can also be applied as a 1:1 air/gas proportionator or zero governor.

Since a single valve performs two or more functions, fewer gas train components and fittings are required. This significantly reduces both the size and weight of the gas train. In addition, smaller diameter gas valves can be used.

The compact SKP25... actuator opens slowly and closes immediately when power is interrupted. The modular design allows the SKP25... to be used in combination with all VG... series gas valve bodies from 1/2-inch to 6-inch in size. The actuator is easily mounted on the square flange of any VG... valve with four pre-mounted screws. A visible position indicator on the front of the actuator displays the entire stroke of the valve. A light indicates when the actuator is powered.

### **Features**

- UL listed, FM approved, CSA certified for USA and Canada, and ISO 9001 certified. European, Australian and Japanese approved versions available.
- Certified as a ventless pressure regulator.
- Safety shut-off function and pressure regulating function in one compact unit.
- Proof of Closure with Over Travel (POC) versions.
- Optional NEMA 4 protection.
- Visual position indication.
- "Power on" indication light
- Quick connect wiring terminals
- Optional adjustable auxiliary switch available.
- Applicable as 1:1 air/gas proportionator or zero governor.
- Accurate pressure control characteristics, and zero offset (droop).
- Modular design with 360° actuator rotation for easy field wiring and installation.
- Low, 13.5 VA power consumption.
- Integral regulation leak limiter

Siemens Building Technologies, Inc.

### **Application**

SKP25... series actuators are combined with 1/2-inch to 6-inch VG... series gas valve bodies. VG... series gas valves must be ordered separately (See *VG...U...Technical Instructions*, P/N 155-512P25).

### **Product Numbers**

#### Table 1.

Product Number <sup>1</sup>	Operating Voltage	Proof of Closure Switch <sup>4</sup>	Auxiliary Switch <sup>4</sup>	Type of Switch
SKP25.011U1	110 to 120 Vac	х	_	SPDT
SKP25.012U1		Х	х	SPDT SPDT
SKP25.013U1		_	_	_
SKP25.411U1 <sup>2</sup>		х	_	SPDT
SKP25.611U1 <sup>3</sup>		х	-	SPDT
SKP25.012U2	220 to 240 Vac	х	х	SPDT SPDT
SKP25.013U2		_	-	_

### NOTES:

- 1. European, CE certified models are available (see data sheet 7643)
- 2. High outlet pressure model for 1.5 to 20 psi outlet pressure regulation
- 3. High bias model for proportionator function with 0" to -4" WC bias.
- 4. Proof of closure and auxiliary switches cannot be field installed.

### Accessories Table 2.

Product Number	Description	
AGA22	Yellow setpoint spring for 6" to 48" WC (1.5 to 10 psi for SKP25.411U1)	
AGA23	Red setpoint spring for 40" to 100" WC (8.5 to 20 psi for SKP25.411U1)	
AGA25.2	Damping orifice for mounting into vent connection of SKP25.0 or SKP25.4 models	
AGA28	Black bias spring to install if SKP25.0 is used as proportionator or zero governor	
AGA29	Unpainted setpoint spring for 0" to 8.5" WC (included in SKP25.0 as standard)	
AGA66	Sealing gasket to provide NEMA 3, 3R, and 4 protection (for VGG/VGDvalves)	

Specifications	As a safety shut-off valve	UL/429, FM/7400, ANSI Z21.21/CSA 6.5 C/I Agency marks apply only for SKPxx.xxxU actuators	
Agency approvals		assembled with VGxxx.xxxU series gas valve bodies.	
	As a pressure regulator	ANSI Z21.18/CSA 6.3	
Power supply	Operating voltage	110 to 120 Vac + 10% to -15%	
		220 to 240 Vac + 10% to -15%	
	Operating frequency	50 to 60 Hz <u>+</u> 6%	
	Power consumption	13.5 VA	
	Duty cycle	continuous	
Operating environment	Ambient operating temperature	5°F to 140°F (-15°C to 60°C)	
	Mounting position	Any position except upside down	
	Maximum inlet gas pressure	Same as VG series	

Specifications,	Weight	3.5 lb (1.6 kg)	
Continued	Enclosure	NEMA 1, 2, 5 and 12 for indoor use	
Physical characteristics		NEMA 3, 3R, and 4 with optional AGA66 gasket	
Triyotodi orlandotoriotico	Dimensions	See Figure 3	
	Specification for valve bodies	See gas valve Technical Instructions, P/N 155-512P25	
Connections	Conduit connection	Two 1/2-inch NPSM threaded knock-outs	
	Electrical connection	Spring loaded terminals for 14 AWG wires	
	Gas connection	1/4" NPT	
	Air connection Gas pressure test connection	1/4" NPT Hose barb with close-off screw	
Operating characteristics	Output force	100 lb (450 N)	
	Maximum stroke	1 inch (26 mm)	
	Opening time for maximum stroke	Varies with valve size, 14 seconds for max. stroke	
	Closing time	< 0.8 seconds	
Operation/installation	Outlet pressure spring range for SKP25.0 models for SKP25.411U1 models	0" to 8.5" WC ( standard, unpainted spring, AGA29) 6" to 48" WC (yellow spring, AGA22) 40" to 100" WC (red spring, AGA23) 1.5 to 10 psi (standard, yellow spring, AGA22)	
		8.5 to 20 psi (red spring, AGA23)	
	With air pressure loading for SKP25.4	± 0.6" WC bias (black spring AGA28)	
	models or zero governor		
	or for SKP25.611U1	0" to – 4" WC bias (white spring)	
	Maximum sensing line pressure	20 psi	
	Maximum sensing line vacuum	3 psi for SKP25.0 models	
	Minimum sensing line diameter	1/4" inside diameter	
	Minimum distance between sensing line and gas valve outlet	5 times the pipe diameter	
	Minimum time required for high to low fire load changes	• •	
Auxiliary features	Proof of closure switch	Non-adjustable	
	Setting range of auxiliary switch	40% to 100% of stroke	
	Switch rating	6A/250 Vac resistive; 3A/120 Vac pilot duty	

### Operation

July 9, 2014

(See Figure 1)

### **Safety Shut-off Function**

The electro-hydraulic actuator consists of a cylinder filled with oil, a piston containing an electric oscillating pump, and a relief system. When power is supplied to the actuator, the relief system closes, and the pump moves oil from the reservoir into the pressure chamber. This action causes the piston to move downward in the cylinder, opening the gas valve. When power to the actuator is interrupted, the relief system opens and the gas valve closes in less than 0.8 seconds.

A position indicator, visible through the transparent portion of the terminal cover, shows the entire stroke range of the actuator. A light, which is visible through the lower left transparent portion of the terminal cover, indicates when the actuator receives power. An optional, non-adjustable SPDT proof of closure over travel switch signals the closed position after the gas valve has closed. An optional SPDT auxiliary switch is adjustable between 40% and 100% of the stroke. The adjustment screw and scale are located on the right side in the terminal box, and are visible through the transparent portion of the terminal cover.

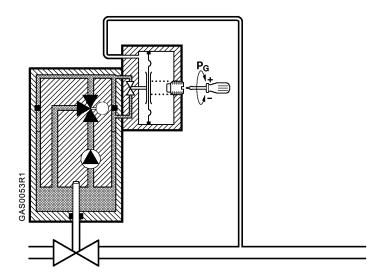


Figure 1. SKP25... Operation.

### **Regulating Function**

The outlet gas pressure sensing line is connected to the pressure regulator housing. The outlet pressure acts on the regulator diaphragm. The diaphragm is opposed by an adjustable setpoint spring force, which represents the desired gas pressure value. The movement of the diaphragm modulates a hydraulic bypass valve connecting the pressure chamber to the hydraulic fluid reservoir. When the outlet gas pressure is lower than the desired value, the bypass valve is closed by the movement of the diaphragm, causing the actuator piston to open the gas valve. The opposite occurs when the outlet gas pressure is higher than the desired value; the diaphragm moves to open the bypass causing the actuator piston to close the gas valve. The movement of the actuator piston stops once the outlet gas pressure is equal to the setpoint. In this position the bypass valve is partially open so that the oil flow supplied by the pump is identical to the return flow. Unlike the conventional direct acting regulators, the SKP25... servo operated regulating system displays virtually zero droop (offset) across the turndown range.

### Regulating Function, Continued

The SKP25.0... models may be applied as a 1:1 air/gas proportionator or as a zero governor. For either application, the standard spring has to be replaced with AGA28 spring, which allows sdjusting the bias between + 0.6" to –0.6" WC.

For proportionator operation, the air pressure sensing line must be connected to the port marked "AIR".

High bias model SKP25.611U1 is a 1:1 air/gas proportionator with a factory installed spring for 0" to -4.0" WC bias.

**NOTES:** 1. To avoid oscillation, do not oversize the VG... valve body. (See *Technical Instructions*, P/N 155-512P25.)

2. SKP25.4... models must not be used as proportionators.

### Installation



#### **WARNING:**

- Personal injury or loss of life may occur if procedures are not followed as specified.
- All installations must be performed by qualified personnel only.
- Do not pull the actuator shaft.
- If minimum gas pressure detection is required, the pressure switch must be mounted upstream of the regulating gas valve to ensure sufficient gas pressure before starting the burner. If maximum gas pressure detection is required the pressure switch must be mounted downstream.
- The AGA66 gasket must be installed between the actuator and the gas valve body to provide NEMA 3, 3R, and 4 protection rating for VGG... and VGD... valves.
- The gas pressure sensing line must be at least 1/4-inch inside diameter.
- The gas pressure sensing line connection must be flush with the inner wall of the gas pipe in order to sense turbulence free pressure. The gas sensing line connection should be located at least five pipe diameters downstream of the valve, elbow, coupling, or other flow disturbing fitting.
   Do not use the taps on the valve body for the gas sensing line connection since these locations typically have strong turbulence. The pressure connection pipe should be as short as possible to allow the regulator to react to sudden changes.

### Installation, Continued

- The SKP25... actuator is directly coupled to the VG... series valve body by four pre-mounted 4 mm Allen key screws.
- The square mounting flange can be rotated in steps of 90° to provide four different mounting positions. The SKP25... actuator can be mounted in any position with the diaphragm vertical, except upside down.
- The actuator can be mounted or replaced while the valve body is under pressure.
- The SKP25... actuator has two knock-outs for the installation of 1/2"-14 NPSM conduit connections.
- When conduit routing is connected, flexible conduit must be used.
- Liquid tight conduit must be used in combination with AGA66 to provide NEMA 3. 3R, and 4 protection.
- The terminal marked GND, located above the wiring terminals, must be connected to the electrical ground.

Wiring must meet all relevant electrical codes. NOTE:

### Start-up

### Regulator

The gas outlet pressure setpoint adjustment screw is located in the center of the regulator cover. The SKP25.0... models are available with three interchangeable setpoint springs for an adjustable range of 0" to 100" WC The SKP25.411U... models are available with two interchangeable setpoint springs for an adjustable range of 1.5 to 20 psi. The bias for the SKP25.611U1 model is adjustable from 0 to 4.0" WC (See Specifications and Table 2). Clockwise rotation of the setpoint adjustment screw increases the outlet gas pressure. The hexagonal cap must be tightened after the setpoint screw has been adjusted and may be sealed from tampering by means of a wire and lead seal.



#### **WARNING:**

When firing at maximum burner capacity, ensure that the SKP25... /VG... is not in the fully open position. If this is the case, either the gas valve is sized too small or the gas supply pressure is too low.

### Wiring and Switch Adjustment

(See Terminal Designations)

- The actuator is equipped with spring-loaded terminals for 14 AWG wires.
- The actuator has two line and two neutral terminals.
- Insert one wire into the opening of the terminal while pressing the lever downward with a screwdriver or hard object. Make sure that all strands insert into the opening.
- Adjust the auxiliary switch (if provided) according to the wiring diagram on the label below the terminals (see Figure 2). The adjustment screw and scale are located on the right side of the terminal box, and are visible through the transparent portion of the terminal cover.

- **NOTES**: 1. The auxiliary switch is adjustable between 40% and 100% of the stroke. The factory setting is at 40%.
  - 2. The auxiliary switch must not be used for proof of closure detection or other safety interlock functions.
  - 3. The Proof of Closure Switch is non-adjustable.

### Service

## Terminal Designations

There are no serviceable parts on the SKP25... series actuators. If inoperative, replace the actuator. Tag wires before servicing.

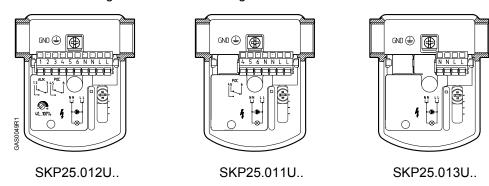


Figure 2. Terminal Designations.

### **Dimensions**

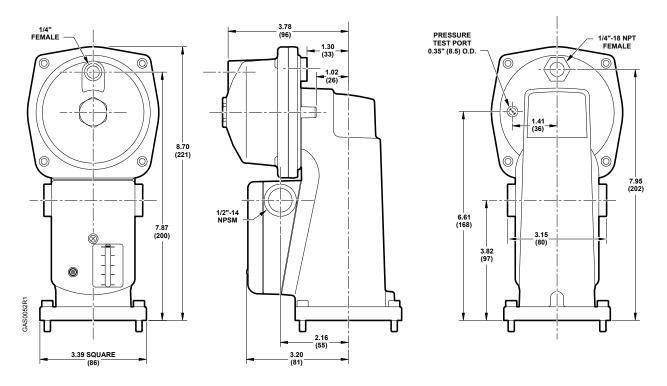


Figure 3. SKP25...U.. Dimensions in Inches, Millimeters in Parentheses.

Information in this publication is based on current specifications. The company reserves the right to make changes in specifications and models as design improvements are introduced. Other product or company names mentioned herein may be the trademarks of their respective owners. © 2005 Siemens Building Technologies, Inc.