

# Computer Architecture and Operating Systems Lecture 4: Instruction Set Architecture


#### **Andrei Tatarnikov**

<u>atatarnikov@hse.ru</u> <u>@andrewt0301</u>

# How Computer Works

#### **Main Parts:**

- Control
- Datapath
- Memory
- Input
- Output

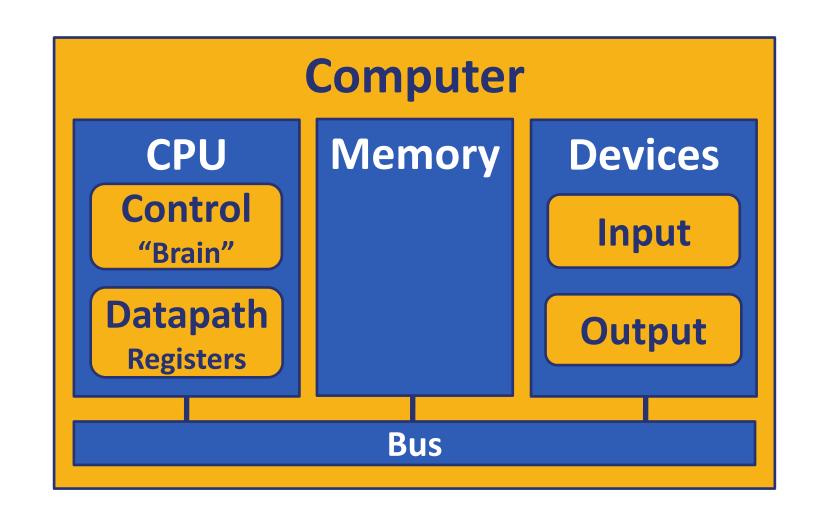

# Stored Program Concept

- 32-bit instructions and data stored in memory
- Program is a sequence of instructions
- ■To run a new program:
  - Simply load the new program into memory
- Program Execution:
  - CPU fetches (reads) instructions from memory in sequence
  - CPU performs the specified operations

# Stored Program Representation

#### **Assembly Code**

lw t0, 32 (t1) add s1, s0, s2 addi t0, s3, -12 sub t0, t3, t5

#### **Machine Code**

0x02032283 0x012404B3 0xFF498293 0x41EE02B3

**Stored Program** 

#### Memory

**Instructions** 

**Address** 

**Program Counter (PC):** 

keeps track of current instruction

1

# Memory Layout

- Text: program code
- Static data: global variables
  - E.g., static variables in C, constant arrays and strings
- Dynamic data: heap
  - E.g., malloc in C, new in Java
- Stack: automatic storage

SP = 0x 7FFF EFFC

GP = 0x 1000 8000

PC = 0x 0040 0000

Stack



**Dynamic Data** 

**Static Data** 

Text

Reserved

0

# **RISC-V Instructions**

Name	Description	Version	Status					
Base								
RVWMO	Weak Memory Ordering	2.0	Ratified					
RV32I	Base Integer Instruction Set, 32-bit	2.1	Ratified					
RV64I	Base Integer Instruction Set, 64-bit	2.1	Ratified					
RV128I	Base Integer Instruction Set, 128-bit	1.7	Open					
Extensions								
M	Standard Extension for Integer Multiplication and Division	2.0	Ratified					
Α	Standard Extension for Atomic Instructions	2.1	Ratified					
F	Standard Extension for Single-Precision Floating-Point	2.2	Ratified					
D	Standard Extension for Double-Precision Floating-Point	2.2	Ratified					
G	Shorthand for the base integer set (I) and above extensions (MAFD)	N/A	N/A					
Q	Standard Extension for Quad-Precision Floating-Point	2.2	Ratified					
С	Standard Extension for Compressed Instructions	2.0	Ratified					
ZiCSR	Control and Status Register (CSR)	2.0	Ratified					
Zifencei	Instruction-Fetch Fence	2.0	Ratified					
And more standard and custom extensions								


# Design Principles

- Design Principle 1: Simplicity favors regularity
  - Regularity makes implementation simpler
  - Simplicity enables higher performance at lower cost
- Design Principle 2: Make the common case fast
  - Most common cases affect the performance the most
- Design Principle 3: Smaller is faster
  - 32 registers, fewer instructions
- Design Principle 4: Good design demands good compromises
  - Different formats complicate decoding, but allow 32-bit instructions uniformly
  - Keep formats as similar as possible

#### Six Instruction Formats

- R-format: instructions using 3 register inputs
  - add, xor, mul arithmetic/logical ops
- I-format: instructions with immediates, loads
  - addi, lw, jalr, slli
- **S-format:** store instructions
  - sw, sb
- **SB-format:** branch instructions
  - beq, bge
- U-format: instructions with upper immediates
  - lui, auipc upper immediate is 20-bits
- UJ-format: the jump instruction
  - jal


## R-format Instructions

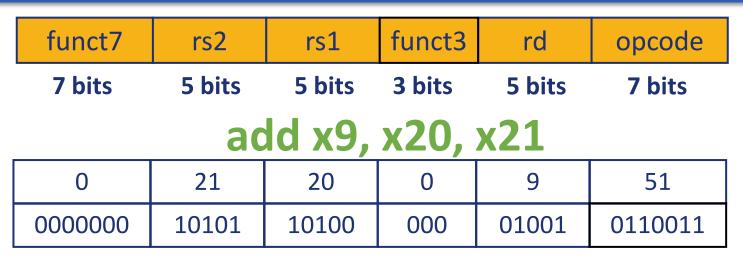

### 0000 0001 0101 1010 0000 0100 1011 0011<sub>two</sub> = $015A04B3_{16}$

- Arithmetic Instructions
  - opcode: operation code
  - rd: destination register number
  - funct3: 3-bit function code (additional opcode)
  - rs1 and rs2: first and second source register 5-bit numbers
  - funct7: 7-bit function code (additional opcode)

### **I-format Instructions**

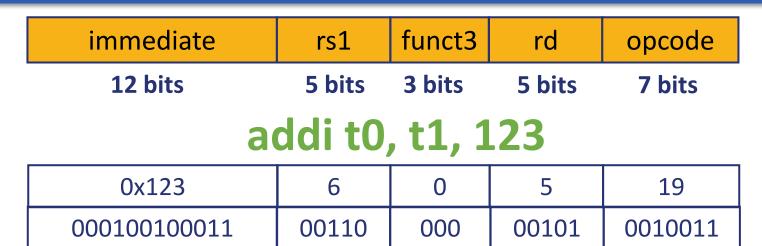

#### $0001\ 0010\ 0011\ 0011\ 0000\ 0010\ 1001\ 0011_{two} = 0x12330293_{16}$

- Immediate arithmetic and load instructions
  - rs1: source or base address register number
  - immediate: constant operand, or offset added to base address
    - 2s-complement, sign extended


### S-format Instructions

imm[11:5]	rs2	rs1	funct3	imm[4:0]	opcode			
7 bits	5 bits	5 bits	3 bits	5 bits	7 bits			
sw t0, 4(t1)								
0	5	6	2	4	35			
0000000	00101	00110	010	00100	100011			

#### $0000\ 0000\ 0101\ 0011\ 0010\ 0010\ 0010\ 0011_{two} = 0x00532223_{16}$

- Different immediate format for store instructions
  - rs1: base address register number
  - rs2: source operand register number
  - immediate: offset added to base address
    - Split so that rs1 and rs2 fields always in the same place


# **SB-format Instructions**

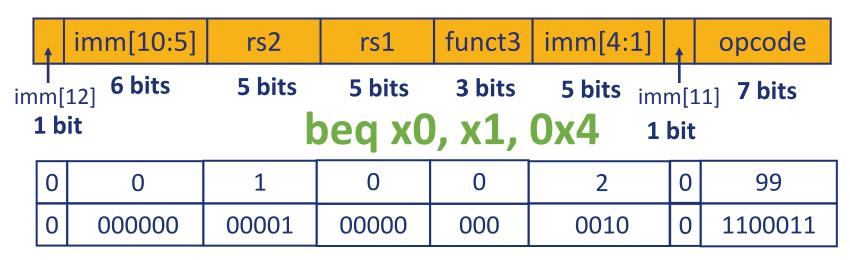

#### 0000 0000 0001 0000 0000 0010 0110 0011 $_{two}$ = 00100263 $_{16}$

- Branch instructions specify
  - Opcode, two registers, target address
- Most branch targets are near branch
  - Forward or backward
- PC-relative addressing
  - Target address = PC + immediate × 2


### **U-format Instructions**

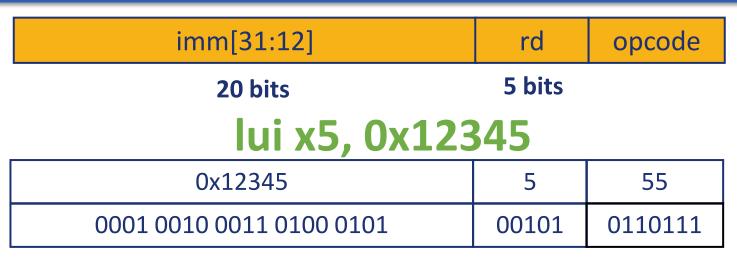

#### 0001 0010 0011 0100 0101 0010 1011 0111 $_{two}$ = 123452b7 $_{16}$

- Upper-immediate values: 20-bit values shifted left by 12 bits
  - opcode: operation code
  - rd: destination register number
  - imm: 20-bit immediate value

## **UJ-format Instructions**

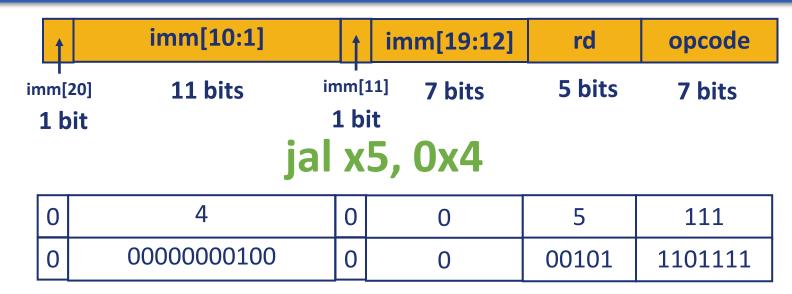


#### 0000 0000 0100 0000 0000 0010 1110 $1111_{two} = 004002ef_{16}$

- Jump instructions
  - opcode: operation code
  - rd: destination link register
  - imm: signed offset in multiples of 2 bytes added to PC

# RISC-V Addressing Summary


#### 1. Immediate addressing

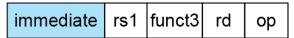


#### 2. Register addressing



#### 3. Base addressing

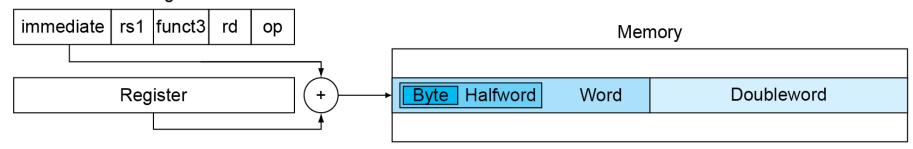

#### 4. PC-relative addressing

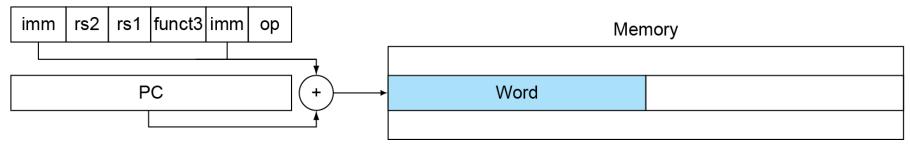

# RISC-V Encoding Summary

Name	Field Field						Comments
(Field Size)	7 bits	5 bits	5 bits	3 bits	5 bits	7 bits	
R-type	funct7	rs2	rs1	funct3	rd	opcode	Arithmetic instruction format
I-type	immediate[11:0]		rs1	funct3	rd	opcode	Loads & immediate arithmetic
S-type	immed[11:5]	rs2	rs1	funct3	immed[4:0]	opcode	Stores
SB-type	immed[12,10:5]	rs2	rs1	funct3	immed[4:1,11]	opcode	Conditional branch format
UJ-type	immediate[20,10:1,11,19:12]				rd	opcode	Unconditional jump format
U-type	immediate[31:12]				rd	opcode	Upper immediate format

# Any Questions?

```
__start: addi t1, zero, 0x18
addi t2, zero, 0x21

cycle: beq t1, t2, done
slt t0, t1, t2
bne t0, zero, if_less
nop
sub t1, t1, t2
j cycle
nop

if_less: sub t2, t2, t1
j cycle
done: add t3, t1, zero
```