

Lab 2 Report

Jinzhi Cai, Ryan Kane, Yifei Che

February 27, 2020

Contents

1	Introduction	4
2	Boot and display the Beaglebone Desktop GUI	4
2.1	Setup	4
2.2	Procedure	4
2.3	Result	4
3	Boot and display the RPi Desktop	5
3.1	Setup	5
3.2	Procedure	5
3.3	Result	5
4	Arduino serial port	6
4.1	Setup	6
4.2	Procedure	6
4.3	Result	6
5	Flip a bit test on RPi	7
5.1	Setup	7
5.2	Procedure	7
5.3	Result	7
6	Send serial data to and from RPi from Arduino	8
6.1	Setup	8
6.2	Procedure	8
6.3	Result	8
7	Send a single float in COBS format out Arduino	9
7.1	Setup	9
7.2	Procedure	9
7.3	Result	9
8	Send a single float in COBS format, A to RPi	10
8.1	Setup	10
8.2	Procedure	10
8.3	Result	10
9	Send a float array in COBS format, A to RPi	11
9.1	Setup	11
9.2	Procedure	11
9.3	Result	11
10	RPi ask for data using COBS PacketSerial	12
10.1	Setup	12
10.2	Procedure	12
10.2.1	Step one	13
10.2.2	Step two	13
10.2.3	Step three	14
10.3	Result	15

11 RPi ask for data when A send bump detected	17
11.1 Setup	17
11.2 Procedure	17
11.2.1 Step one	18
11.2.2 Step two	18
11.2.3 Step three	18
11.2.4 Step four	19
11.3 Result	20
12 Conclusion	23
13 Appendix	23
13.1 Appendix A	23
13.2 Appendix B	23
13.3 Appendix C	24

1 Introduction

Embedded system play an important role in the modern society. In this lab, we will discuss how to create an embedded system using open source hardware and learn about the different problem engineers will facing in the real life development.

2 Boot and display the Beaglebone Desktop GUI

2.1 Setup

In this experiment of the lab, we will upload a system image with a graphical user interface onto the Beaglebone Black. The setup for this experiment includes having a microSD card with at least 4GB of storage, a usb keyboard and mouse, and an HDMI cable.

2.2 Procedure

First, the latest GUI system image can be obtained at <https://beagleboard.org/latest-images>. Here the system image downloaded is the “Debian X.X 4GB SD LXQT”. After the image is downloaded, it has to be extracted from an .img.xz file to a .img file. After this is done, the image is then flashed to the SD card using Etcher. In Etcher select the SD Card, press flash and wait for the process to finish. Now, make sure the board is powered down by unplugging it from the computer if it is plugged in. Then insert the SD card and plug it back into the computer while holding the user button until it is booted successfully.

2.3 Result

After the board is booted properly, it should display on the monitor through the HDMI cable, and can be controlled using a plugged in keyboard and mouse 1.

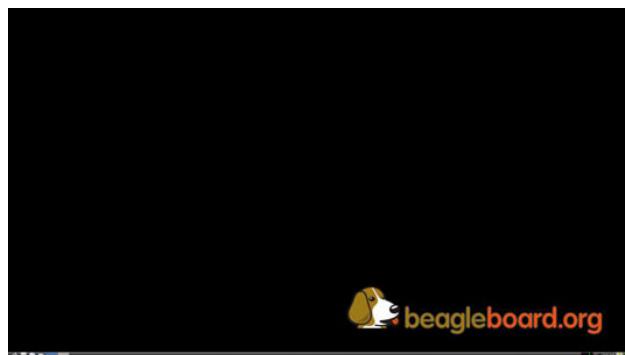


Figure 1: Beaglebone Desktop

3 Boot and display the RPi Desktop

3.1 Setup

Now, we will setup the Raspberry Pi Zero with a system image that will be used for the remainder of the lab. For this setup, a Raspberry Pi Zero and a microSD card with at least 4GB is needed.

3.2 Procedure

First, the latest system image can be obtained at <https://www.raspberrypi.org/downloads/raspbian/>. Here, any system image can be downloaded, but the lighter the image the faster it will run. We selected the lightest version that only has terminal support. After the image is downloaded, it has to be extracted from an .zip file to a .iso file. After this is done, the image is then flashed to the SD card using Etcher. In Etcher select the SD Card, press flash and wait for the process to finish. Now, make sure the board is powered down by unplugging it from the pi if it is plugged in. Then insert the SD card and plug it back into the pi.

3.3 Result

After the board is booted properly, it should display on the monitor through the HDMI cable (terminal or GUI depending on the system image), and can be controlled using a plugged in keyboard and mouse 2.

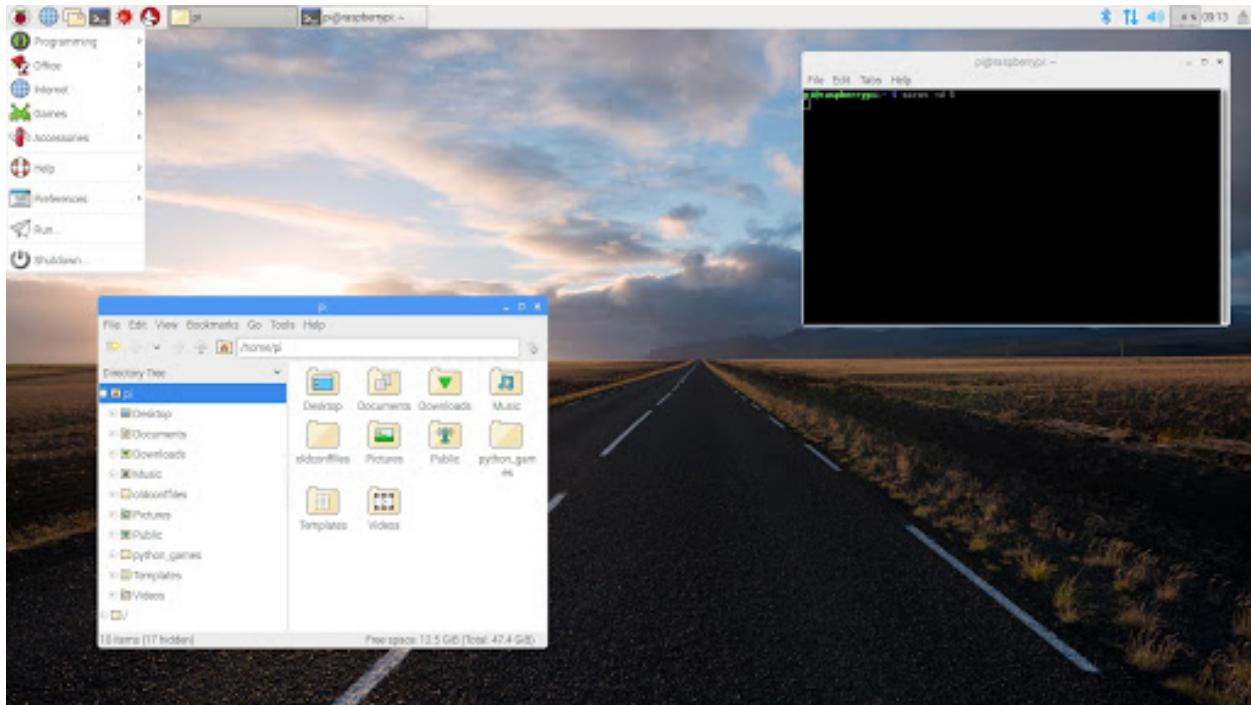


Figure 2: Raspberry Desktop

4 Arduino serial port

4.1 Setup

For this task, we will encode a packet using COBS format to make our communication protocol more robust. The setup required is connecting the TX pin on the Adafruit ItzyBitzy M0 to the Analog Discovery pin 0. Then, make sure the PacketSerial library is installed for the Arduino IDE.

4.2 Procedure

First, The PacketSerial library is imported and a handler for it is created. Then we create a packet, which is a `uint8_t` array to send out the serial port. This is done by calling the `send()` method of the `PacketSerial` object. This method takes the array and encodes it using the COBS format and sends it out the serial port. The full code for this experiment can be found in the appendix.

4.3 Result

Using the Analog Discovery, a UART receiver can be setup in the Logic window. Here we can see the packet sent is now encoded into COBS format, with an extra padding byte in front, and a 0 byte at the end.

5 Flip a bit test on RPi

5.1 Setup

Since we are unable to type gpio in the command line in the first place, we have to connect to the WIFI and download the image which has the wiring Pi library. Then we install the wiring Pi. For hardware setup, we connect the ground (on analog discovery side) to raspberry pi, and 1+(analog discovery side) to gpio pin 7.

5.2 Procedure

In the C++ code, we define the LED 7 first. In the main function, we start with the wiringPiSetup() function, which can initialize the wiring Pi and we can further use the scheme. The next line “pinMode(LED, OUTPUT)” set the pin 7 to output pin mode. Then, we have a while loop that goes forever. In the while loop, we use the digitalWrite(LED,1) and digitalWrite(LED,0) repeatedly so that we can continuously change send 1 and 0 to make the bit flipped.

5.3 Result

We use the analog discovery to detect the signal sent from Raspberry Pi. The frequency is set to 6.4MHz. We can see the bit flipping between 0 and 1.

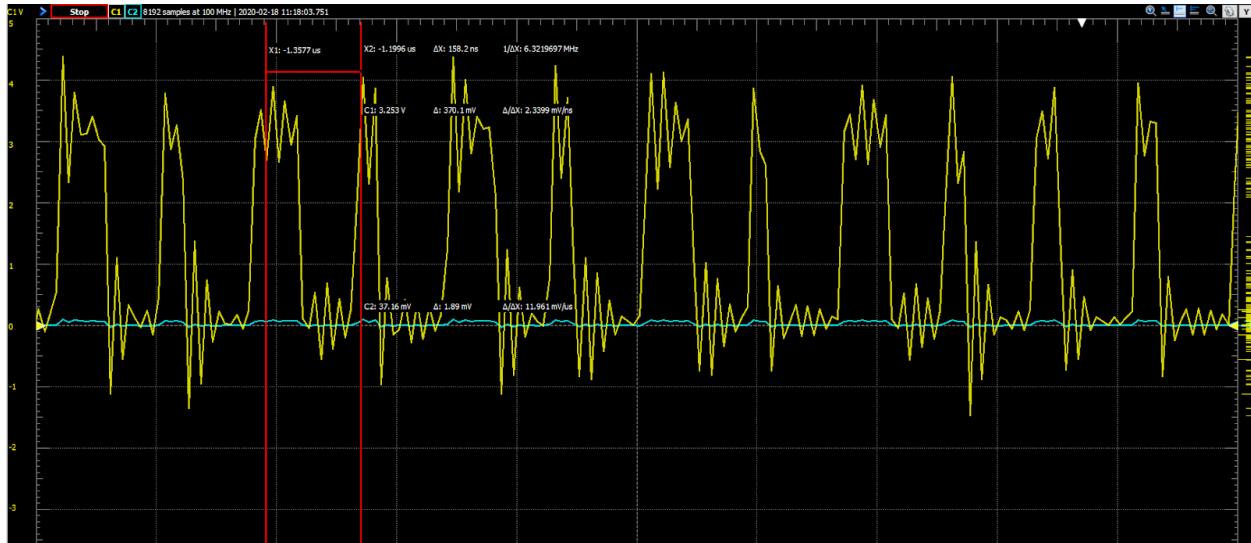


Figure 3: Analog Discovery Scope for Raspberry Pi Bit

6 Send serial data to and from RPi from Arduino

6.1 Setup

Since we are unable to type gpio in the command line in the first place, we have to connect to the WIFI and download the image which has the wiring Pi library. Then we install the wiring Pi. For hardware setup, we connect the ground (on analog discovery side) to raspberry pi, and 1+(analog discovery side) to gpio pin 74.

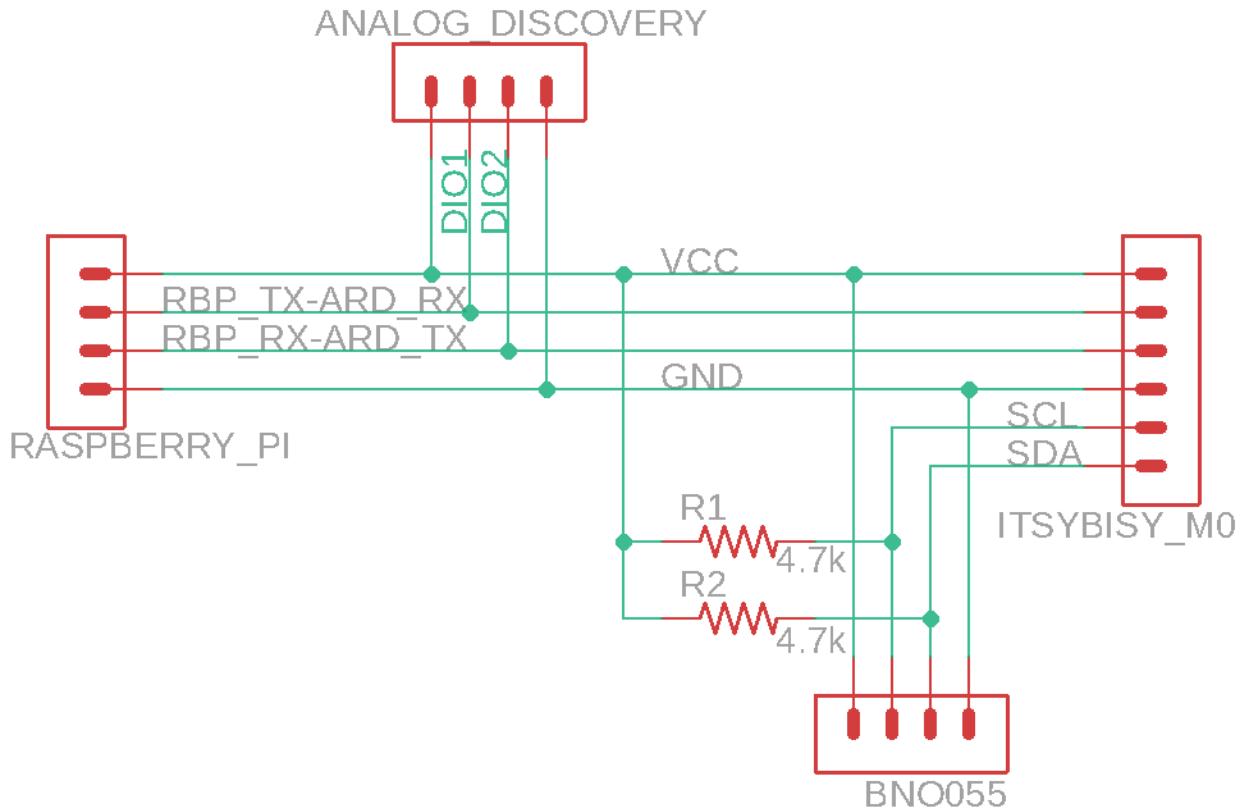


Figure 4: Circuit Diagram For Serial Connection

6.2 Procedure

In the C++ code, we define the LED 7 first. In the main function, we start with the `wiringPiSetup()` function, which can initialize the wiring Pi and we can further use the scheme. The next line “`pinMode(LED, OUTPUT)`” set the pin 7 to output pin mode. Then, we have a while loop that goes forever. In the while loop, we use the `DigitalWrite(LED,1)` and `DigitalWrite(LED,0)` repeatedly so that we can continuously change send 1 and 0 to make the bit flipped.

6.3 Result

We use the analog discovery to detect the signal sent from Raspberry Pi. The frequency is set to 6.4MHz. We can see the bit flipping between 0 and 1.

7 Send a single float in COBS format out Arduino

7.1 Setup

For this task, we will encode a packet using COBS format to make our communication protocol more robust. The setup required is connecting the TX pin on the Adafruit ItzyBitzy M0 to the Analog Discovery pin 0. Then, make sure the PacketSerial library is installed for the Arduino IDE.

7.2 Procedure

First, The PacketSerial library is imported and a handler for it is created. Then we create a packet, which is a `uint8_t` array to send out the serial port. This is done by calling the `send()` method of the `PacketSerial` object. This method takes the array and encodes it using the COBS format and sends it out the serial port. The full code for this experiment can be found in the appendix.

7.3 Result

Using the Analog Discovery, a UART receiver can be setup in the Logic window. Here we can see the packet sent is now encoded into COBS format, with an extra padding byte in front, and a 0 byte at the end.

8 Send a single float in COBS format, A to RPi

8.1 Setup

For this task, we now will convert the Arduino code to read an Analog voltage from an potentiometer, and send it to the Raspberry Pi in COBS format. To set it up, we connect the middle pin of the potentiometer to pin A1 on the Arduino, and connect the other two to 5V and GND.

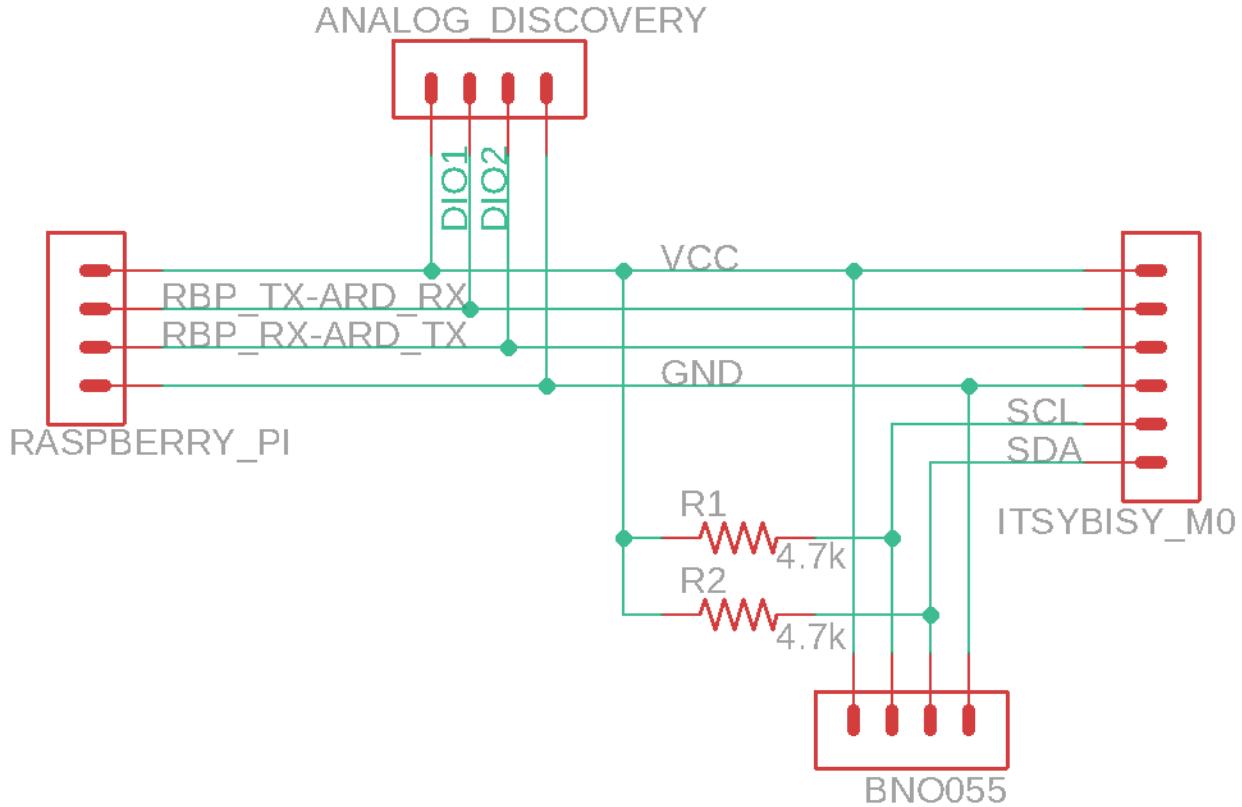


Figure 5: Circuit Diagram For Serial Connection

8.2 Procedure

For the Arduino code, we first loop to read the analog voltage on pin A1 and scale it based on a 1024 bit ADC and a max voltage of 3 volts. Now, since the PacketSerial method uses `uint8_t` arrays to send the data, we must define a union to convert the float value to an array of integers (length of 4). Using this union, we assign the float of it to the reading from the ADC. Then, we send the integer array in the `send()` method. Now, on the Raspberry Pi this value is read by the `SerialHandler` class, and then decoded using the `COBSHandler` class. Finally, the union is reversed on the Raspberry Pi side and we are left with the float that was sent by the Arduino. The Arduino code can be found in Appendix B.

8.3 Result

Using the potentiometer to send different voltages to the Arduino correctly changes the value outputted by the Raspberry Pi, with a small delay as the communication and processing occurs.

9 Send a float array in COBS format, A to RPi

9.1 Setup

In this task, we adapt the program running previously on the Arduino and Raspberry Pi to send and receive an array of floats. This is done because the Arduino can run and collect real-time data since it has no operating system and scheduler like the Raspberry Pi. Therefore, we will have the Arduino collect data points and store them in a buffer with a size of 10. Every 100ms the Arduino will collect the data, and send that buffer every 1 second to the Raspberry Pi. No setup is required from the last task 6.

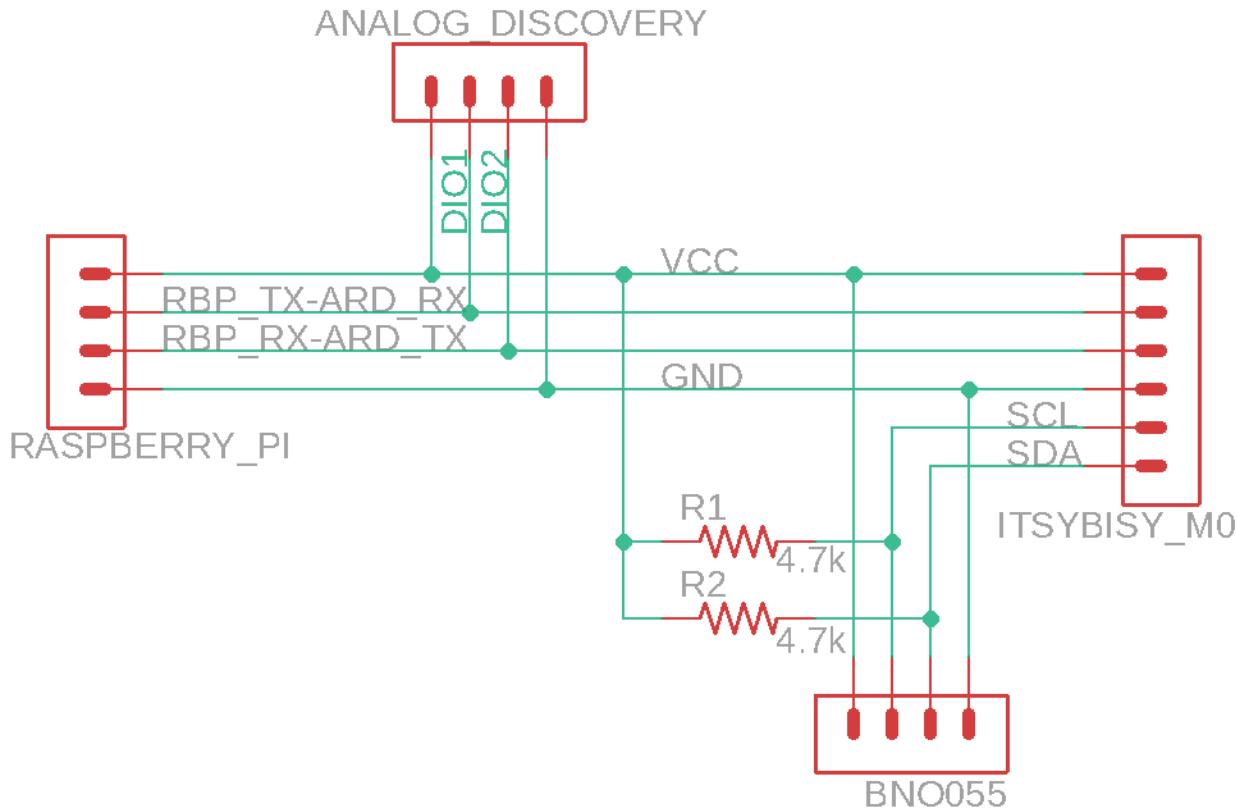


Figure 6: Circuit Diagram For Serial Connection

9.2 Procedure

To adapt the Arduino code, we first change our packet union definition to store an array of 10 floats and an array of 40 uint8_ts instead of 1 and 4 respectively. Every 100 ms it then shifts the buffer to the right by one, and then replaces the first index of it with the new float. We will then utilize the send() method of PacketSerial to send this new packet to the Raspberry Pi. On the Raspberry Pi, we simply read in the packet like before, except it is now read into an array, and every 4 bytes are converted into a float like the last experiment. The code changes for this experiment can be found in Appendix C.

9.3 Result

Now, every 100ms we can see the Arduino print out a value to the serial monitor, which is the new data point. However, only every 1 second can we see the data buffer on the Raspberry Pi. This buffer contains the last 10 data points collected by the Arduino.

10 RPi ask for data using COBS PacketSerial

10.1 Setup

The hardware requirement for this section is following:

- Raspberry
- BNO055
- Itsybisy M0
- Analog Discovery

Connect all the component base on the following diagram 7.

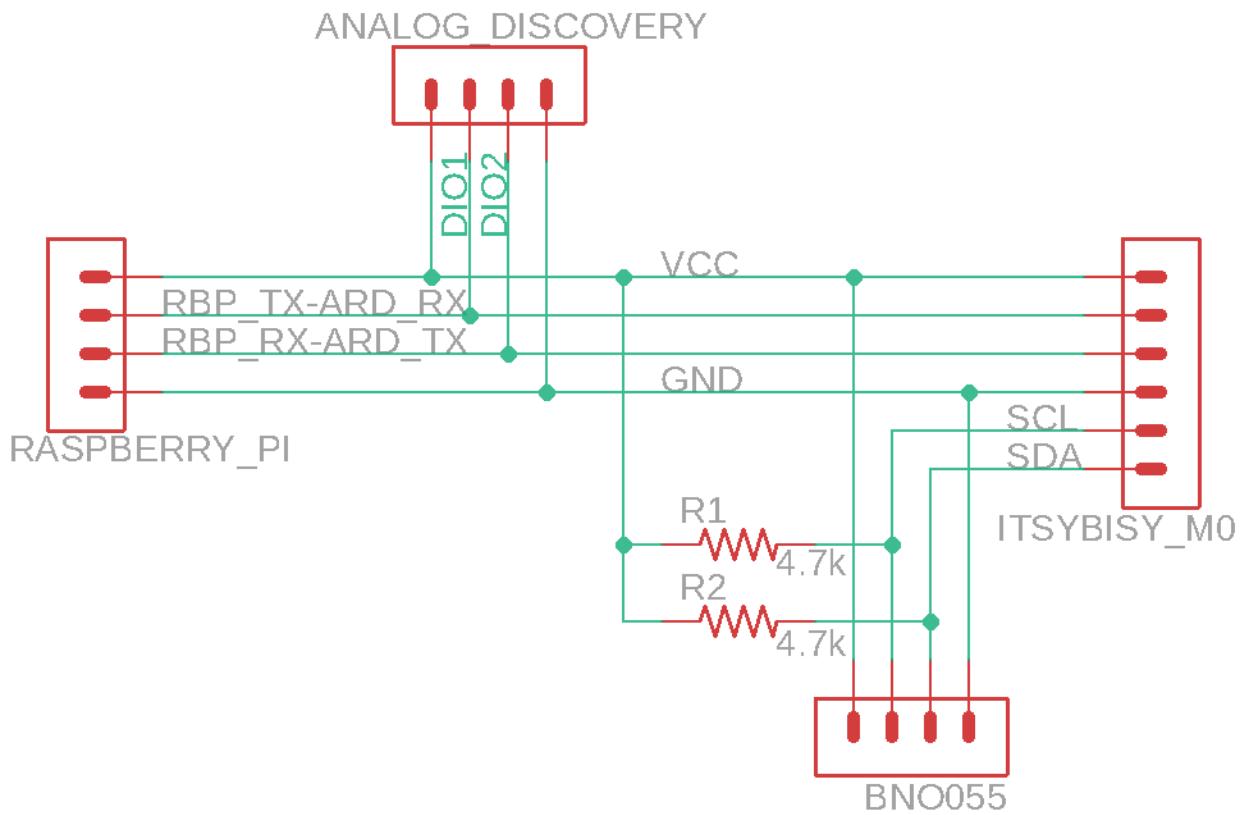


Figure 7: Circuit Diagram For Serial Connection

10.2 Procedure

The steps to finish the goal is following.

- Raspberry Pi need to send a message to Itsybisy to request data.
- Itsybisy need to read data Raspberry Pi ask for and package it base on the COB format
- Raspberry Pi need to read the COB data and change it back to float data and display it to the screen.

10.2.1 Step one

Main program construct a data packet which contain data and length of this data. Serial handler will use the **serialPuts** function to put the data to serial buffer and let system send it.

```
void send(Datapacket* p){  
    serialPuts(fd ,p->data );  
    if ( p->data [ p->length -1]==0)  
    {  
        serialPutchar(fd , '\0');  
    }  
}
```

10.2.2 Step two

Itsbyisy will receive the request and read the data from the BNO055.

```
void loop () {  
    myPacketSerial . update ();  
    if ( myPacketSerial . overflow ())  
        Serial . println (" Buffer Overflow ! ");  
    for ( int i = 0; i < 10; i ++ ) {  
        myPacketSerial . update ();  
        imu :: Vector<3> accel = bno  
            . getVector (Adafruit_BNO055 :: VECTOR_LINEARACCEL );  
  
        float temp = pow(accel.x(), 2)  
            + pow(accel.y(), 2)  
            + pow(accel.z(), 2);  
        float mag = sqrt (temp);  
        if (mag - previousMag >= 2.0) {  
            myPacketSerial . send (bumpPacket , 4);  
        }  
        previousMag = mag;  
        Serial . print (" Acceleration Magnitude: ");  
        Serial . println (mag);  
        addToBuffer (mag);  
  
        /* Wait the specified delay before requesting nex data */  
        delay (BNO055_SAMPLERATE_DELAY_MS);  
    }  
}  
  
void onPacketReceived ( const uint8_t * buffer , size_t size ) {  
    if ( size == 4 && compare (buffer , " test " ))  
        myPacketSerial . send (packet1 . packet_data , 40);  
}  
  
bool compare ( const uint8_t * buffer , const uint8_t * buffer2 , int size ){  
    for ( int i = 0; i < size ; i ++ )  
    {  
        if ( buffer [ i ] != buffer2 [ i ]) return false ;  
    }
```

```

        return true;
    }

    void addToBuffer( float newMeasurement) {
        for ( int i = 9; i >= 0; i--) {
            packet1.packet_float[ i ] = packet1.packet_float[ i - 1];
        }
        packet1.packet_float[0] = newMeasurement;
    }
}

```

10.2.3 Step three

Raspberry Pi will get the data and decode the format.

```

void SerialHandler :: operator >>(Datapacket* dp){
    int length=0;
    char buffer[40960];
    int isBegin=0;
    while (1)
    {
        if (isBegin==0){
            buffer [length]=(char)serialGetchar(fd);
            length++;
            usleep(100);
            if (buffer [length-1]==0){
                isBegin=0;
                break;
            }
        }
    }
    char* frame=new char[length];
    memcpy(frame , buffer , length );
    dp->data=frame ;
    dp->length=length ;
}

void COBHandler :: operator>= ( Datapacket* p){
    char* rawData=p->data ;
    int index=0;
    int nextIndex=0;
    while (index<p->length-1){
        nextIndex=(uint16_t)rawData [ index ];
        rawData [ index ]=0;
        index+=nextIndex ;
    }
    char* newData=new char [p->length -2];
    memcpy(newData , rawData+1,p->length -2);
    p->length -=2;
    p->data=newData ;
}

```

10.3 Result

When the raspberry pi send the request9, arduino read the data from BNO055 and send to raspberry pi. Raspberry Pi decode it and display it to the screen8.

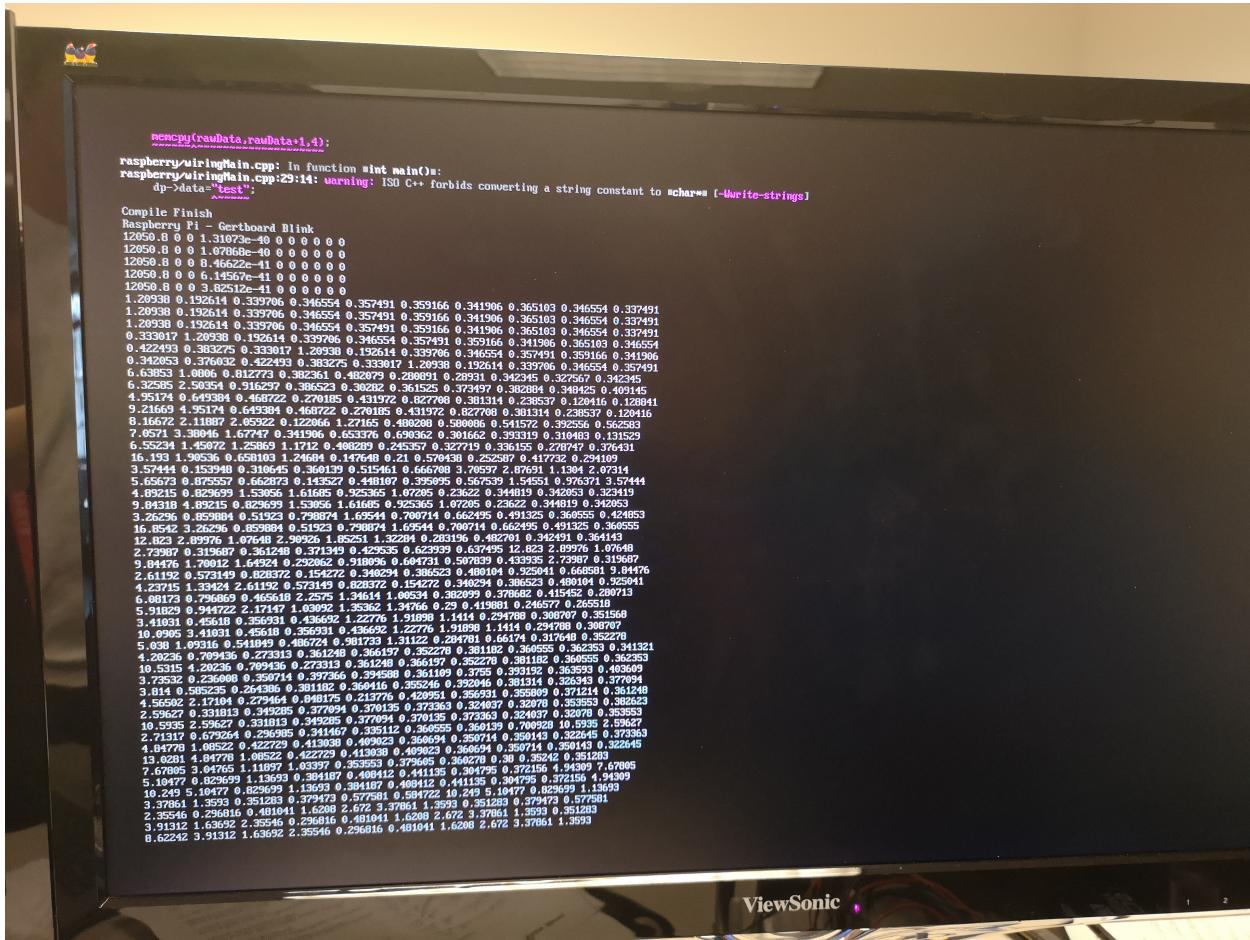


Figure 8: Data Received by Raspberry Pi

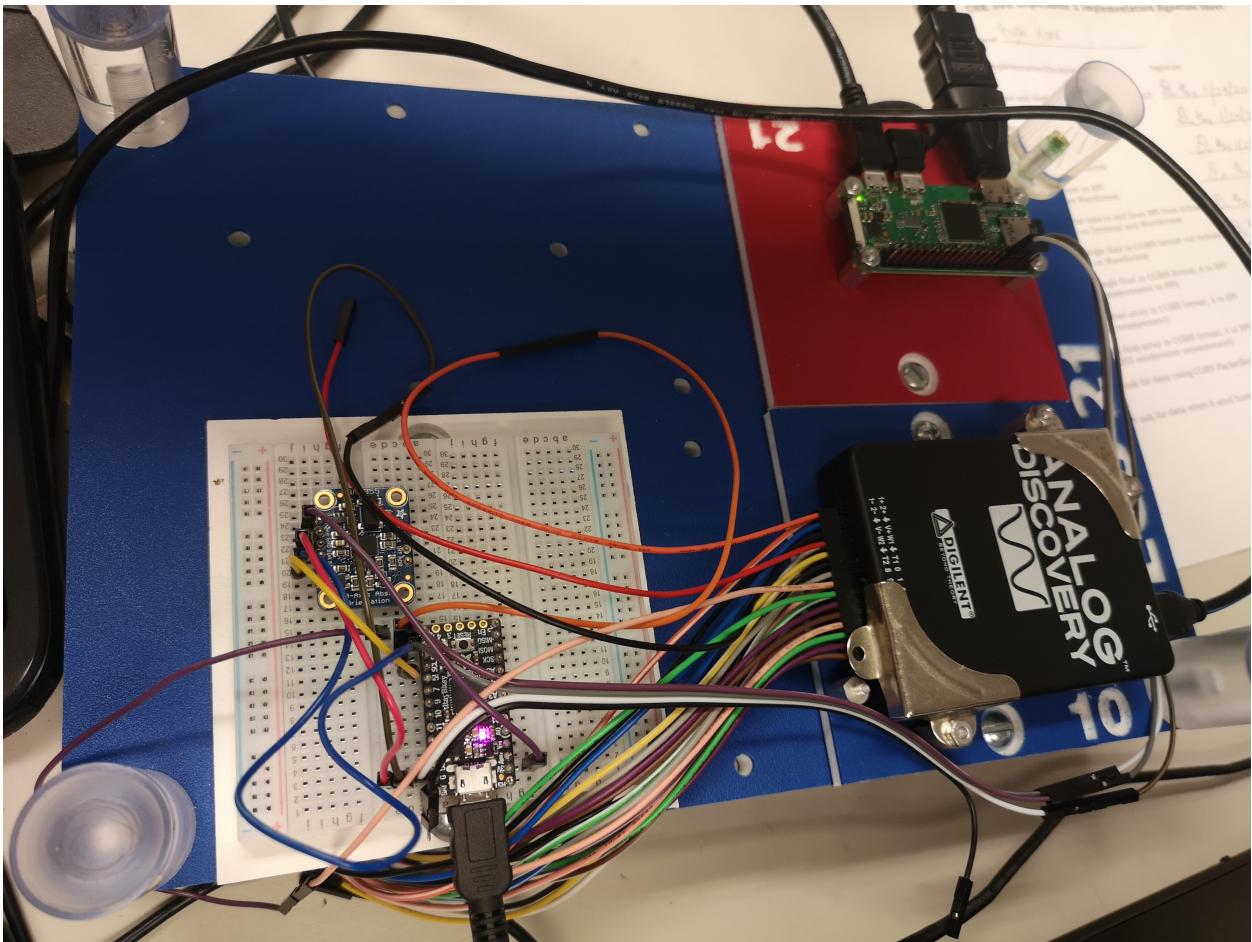


Figure 9: Physical Connection

11 RPi ask for data when A send bump detected

11.1 Setup

The hardware requirement for this section is following:

- Raspberry
- BNO055
- Itsybisy M0
- Analog Discovery

Connect all the component base on the following diagram 10.

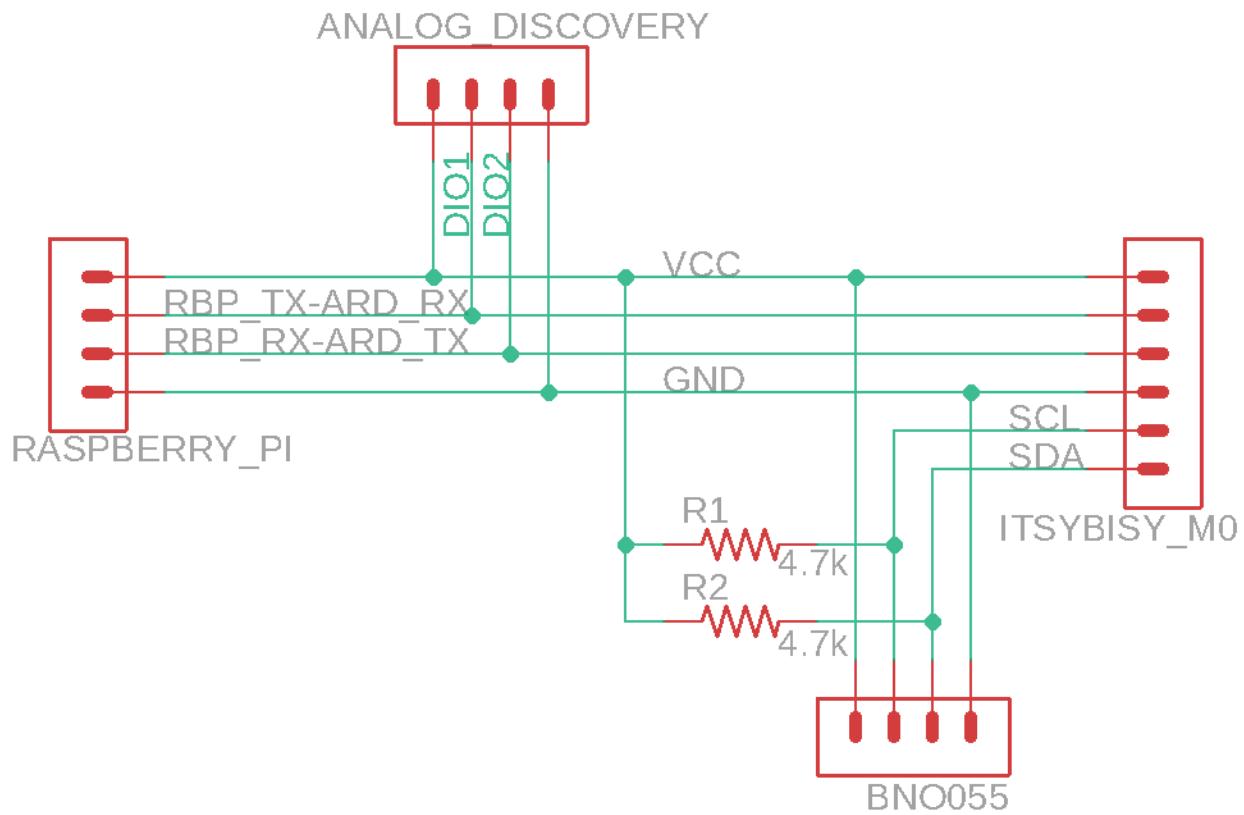


Figure 10: Circuit Diagram For Serial Connection

11.2 Procedure

The steps to finish the goal is following.

- Itsybisy detect a bump and send a event to Raspberry Pi
- Raspberry Pi need to send a message to Itsybisy to request data.
- Itsybisy need to read data Raspberry Pi ask for and package it base on the COB format
- Raspberry Pi need to read the COB data and change it back to float data and display it to the screen.

11.2.1 Step one

Itsybisy will reading the data and send a message to Raspberry Pi when it detect the data have a bump.

```
void loop() {
    myPacketSerial.update();
    if (myPacketSerial.overflow()) {
        Serial.println("Buffer Overflow!");
    }
    for (int i = 0; i < 10; i++) {
        myPacketSerial.update();
        imu::Vector<3> accel = bno.getVector(Adafruit_BNO055::VECTOR_LINEARACCEL);

        float temp = pow(accel.x(), 2) + pow(accel.y(), 2) + pow(accel.z(), 2);
        float mag = sqrt(temp);
        if (mag - previousMag >= 2.0) {
            myPacketSerial.send(bumpPacket, 4);
        }
        previousMag = mag;
        Serial.print("Acceleration Magnitude: ");
        Serial.println(mag);
        addToBuffer(mag);

        /* Wait the specified delay before requesting next data */
        delay(BNO055_SAMPLERATE_DELAY_MS);
    }
}
```

11.2.2 Step two

Main program construct a data packet which contain data and length of this data. Serial handler will use the **serialPuts** function to put the data to serial buffer and let system send it.

```
void send(Datapacket* p){
    serialPuts(fd, p->data);
    if (p->data[p->length - 1] == 0)
    {
        serialPutchar(fd, '\0');
    }
}
```

11.2.3 Step three

Itsybisy will receive the request and read the data from the BNO055.

```
void loop() {
    myPacketSerial.update();
    if (myPacketSerial.overflow())
        Serial.println("Buffer Overflow!");
    for (int i = 0; i < 10; i++) {
        myPacketSerial.update();
        imu::Vector<3> accel = bno
            .getVector(Adafruit_BNO055::VECTOR_LINEARACCEL);
```

```

        float temp = pow(accel.x(), 2)
        + pow(accel.y(), 2)
        + pow(accel.z(), 2);
        float mag = sqrt(temp);
        if (mag - previousMag >= 2.0) {
            myPacketSerial.send(bumpPacket, 4);
        }
        previousMag = mag;
        Serial.print("Accelaration Magnitude: ");
        Serial.println(mag);
        addToBuffer(mag);

        /* Wait the specified delay before requesting nex data */
        delay(BNO055_SAMPLERATE_DELAY_MS);
    }
}

void onPacketReceived(const uint8_t* buffer, size_t size) {
    if (size==4&&compare(buffer,"test"))
        myPacketSerial.send(packet1.packet_data, 40);
}

bool compare(const uint8_t* buffer, const uint8_t* buffer2, int size){
    for (int i = 0; i < size; i++)
    {
        if (buffer[i]!=buffer2[i]) return false;
    }
    return true;
}

void addToBuffer(float newMeasurement) {
    for (int i = 9; i >= 0; i--) {
        packet1.packet_float[i] = packet1.packet_float[i - 1];
    }
    packet1.packet_float[0] = newMeasurement;
}

```

11.2.4 Step four

Raspberry Pi will get the data and decode the format.

```

void SerialHandler::operator >>(Datapacket* dp){
    int length=0;
    char buffer[40960];
    int isBegin=0;
    while (1)
    {
        if (isBegin==0){
            buffer[length]=(char)serialGetchar(fd);
            length++;
            usleep(100);
            if (buffer[length-1]==0){
                isBegin=0;

```

```

                break;
            }
        }
    }
    char* frame=new char[length];
    memcpy(frame , buffer , length );
    dp->data=frame;
    dp->length=length ;
}

void COBHandler::operator>= ( Datapacket* p){
    char* rawData=p->data;
    int index=0;
    int nextIndex=0;
    while ( index<p->length -1){
        nextIndex=(uint16_t)rawData[ index ];
        rawData[ index ]=0;
        index+=nextIndex;
    }
    char* newData=new char [p->length -2];
    memcpy(newData , rawData+1,p->length -2);
    p->length -=2;
    p->data=newData;
}

```

11.3 Result

When itsybisy detect a bump, it send a event Raspberry Pi 14 and Raspberry Pi request the data from the itsybisy 12. Raspberry Pi decode it and display in the screen 13 11.

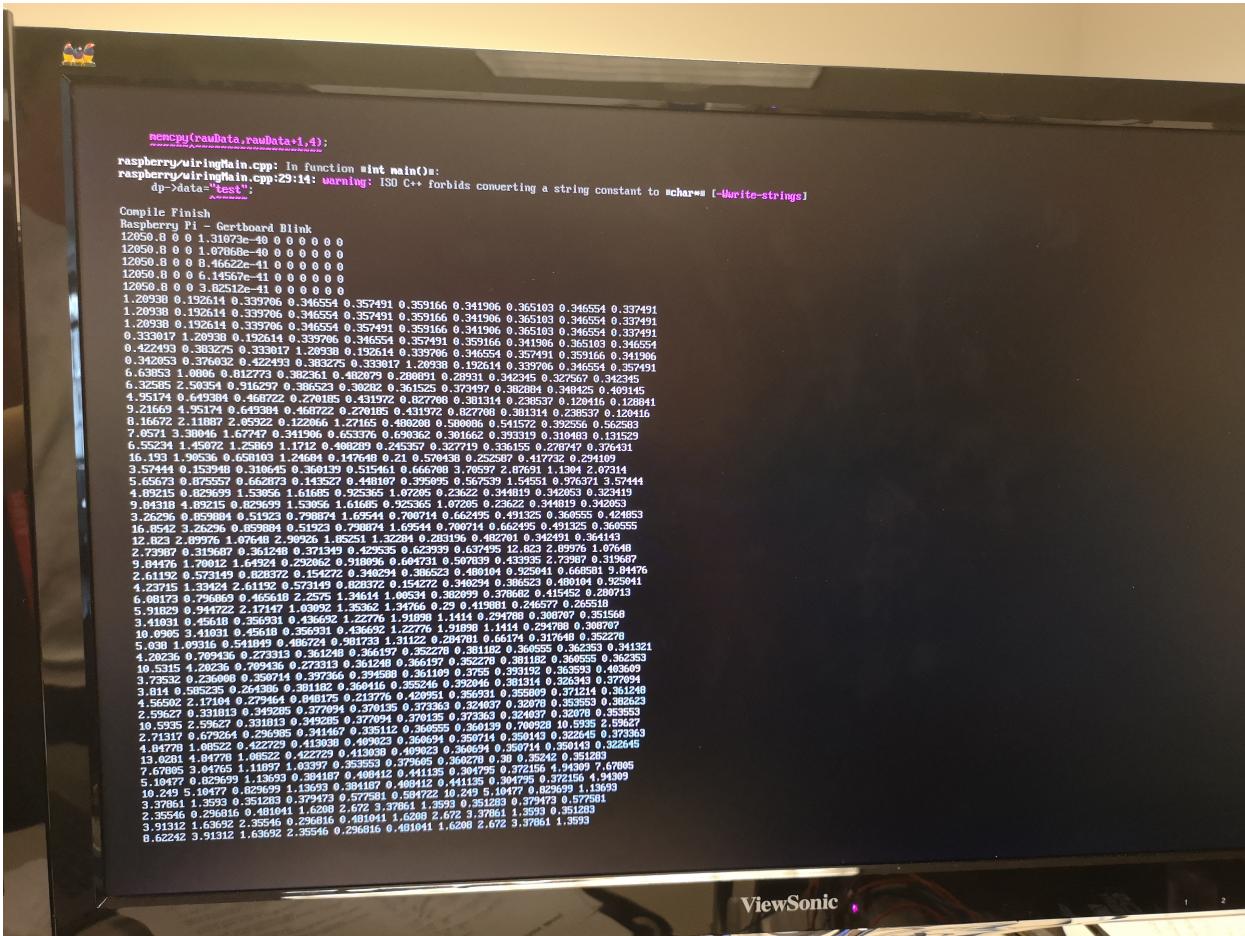


Figure 11: Data Received by Raspberry Pi

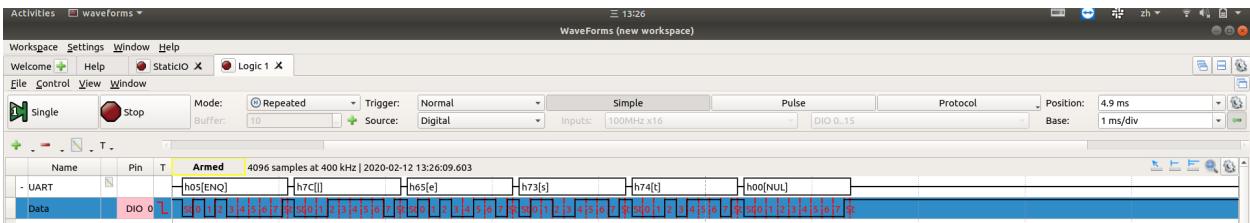


Figure 12: Data Send by Raspberry Pi

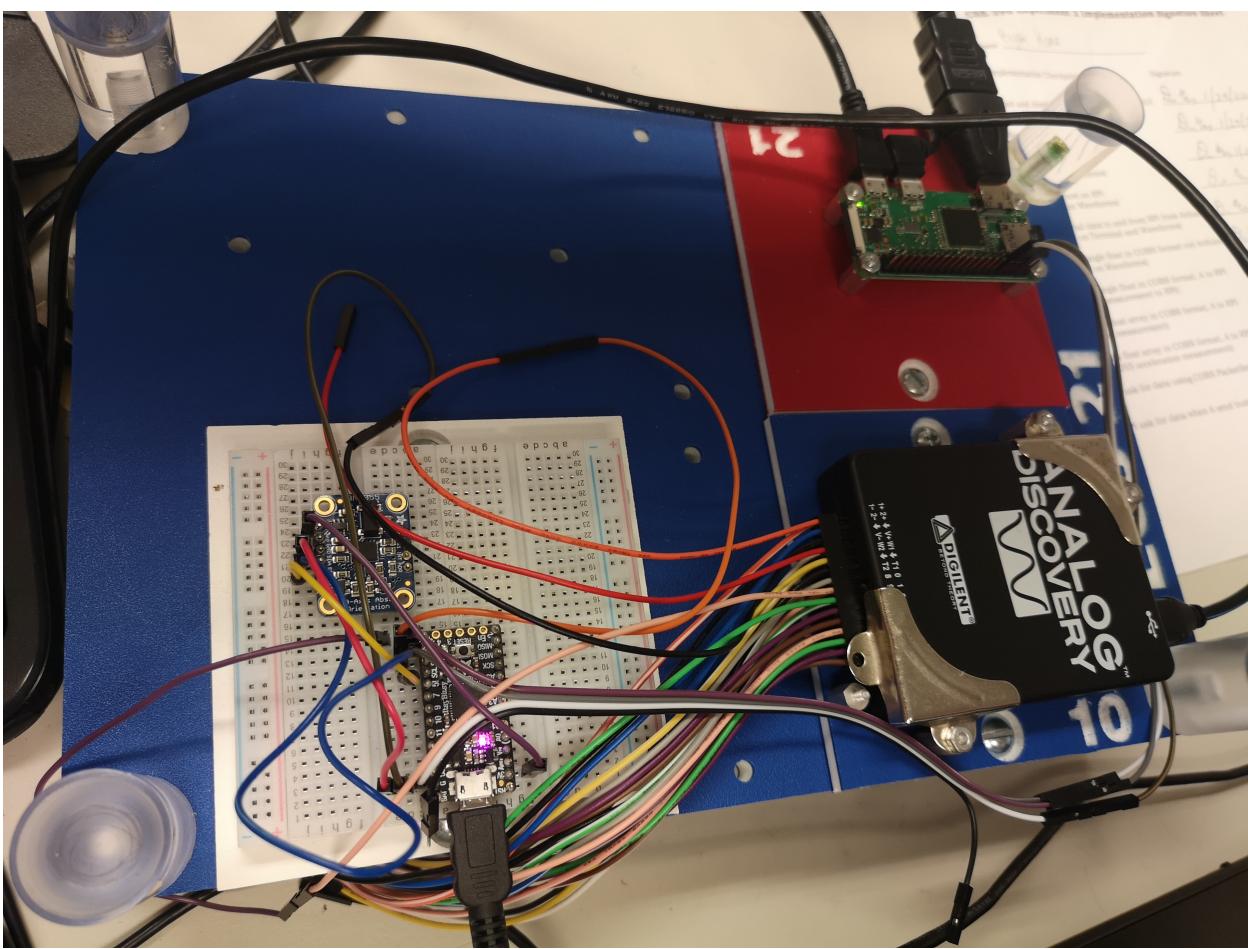


Figure 13: Physical Connection

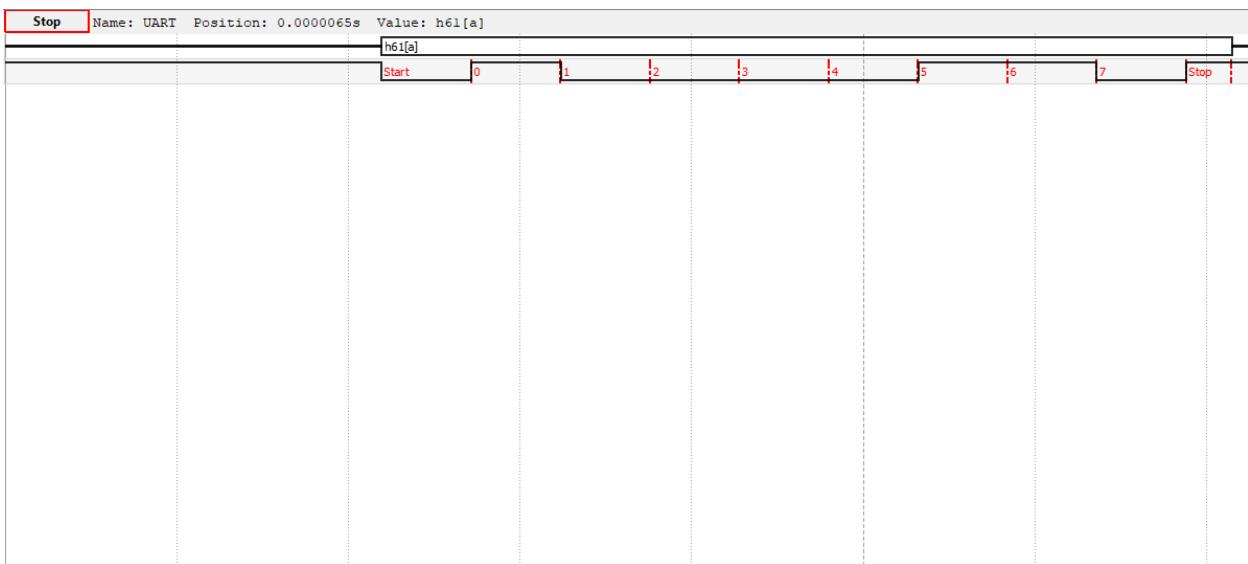


Figure 14: Analog Discovery Logic Itsybisy Serial

12 Conclusion

By using the open source hardware and COB encoding method, we create a embedded system which can detect a bump to table and record the data about this event. During development, we discover the computer system which not as powerful as a PC still will be able to do variety of tasks.

13 Appendix

13.1 Appendix A

```
#include "PacketSerial.h"

PacketSerial_<COBS, 0, 255> myPacketSerial;
uint8_t myPacket[3] = { 1, 0, 1 };

void setup() {
    Serial1.begin(9600);
    myPacketSerial.setStream(&Serial1);
    myPacketSerial.setPacketHandler(&onPacketReceived);
}

void loop() {
    myPacketSerial.update();
    myPacketSerial.send(myPacket, 3);
    delay(1000);
}
```

13.2 Appendix B

```
#include "PacketSerial.h"

PacketSerial_<COBS, 0, 255> myPacketSerial;

typedef union _packet {
    float packet_float;
    uint8_t data[4];
};

_packet packet1;

void setup() {
    Serial.begin(9600);
    pinMode(A1, INPUT);
    Serial1.begin(9600);
    myPacketSerial.setStream(&Serial1);
    myPacketSerial.setPacketHandler(&onPacketReceived);
}

void loop() {
    packet1.packet_float = (analogRead(A1) / 1024.0) * 3;
    myPacketSerial.update();
    myPacketSerial.send(packet1.data, 4);
}
```

13.3 Appendix C

```
#include "PacketSerial.h"

PacketSerial_<COBS, 0, 255> myPacketSerial;

typedef union _packet {
    float packet_float[10];
    uint8_t packet_data[40];
};

_packet packet1;

void setup() {
    Serial.begin(9600);
    pinMode(A1, INPUT);
    Serial1.begin(9600);
    myPacketSerial.setStream(&Serial1);
    myPacketSerial.setPacketHandler(&onPacketReceived);
}

void loop() {
    for(int i = 0; i < 10; i++) {
        addToBuffer((analogRead(A1) / 1024.0) * 3.0);
        myPacketSerial.update();
        delay(100);
    }
    printPacket(packet1);
    myPacketSerial.send(packet1.packet_data, 40);
}

void addToBuffer(float newMeasurement) {
    for (int i = 9; i >= 0; i--) {
        packet1.packet_float[i] = packet1.packet_float[i - 1];
    }
    packet1.packet_float[0] = newMeasurement;
}
```