

Description

The Arduino Due is a groundbreaking microcontroller board featuring the Atmel SAM3X8E ARM Cortex-M3 CPU, making it the first Arduino board built around a 32-bit ARM core microcontroller. With its 54x digital input/output pins, 12x analog inputs, 4x UARTs, USB OTG capability, and 84 MHz clock, the Due offers enhanced performance and versatility for a wide range of projects. Compatible with all Arduino shields designed for operation at 3.3 V and compliant with the 1.0 Arduino pinout standard, the Due is a powerful tool for both beginners and experienced makers alike.

Target Areas

Embedded Systems Development, Robotics, 3D Printing, CNC Machines, Prototyping



Contents

1 Application Examples	5
2 Features	6
2.1 General Specifications Overview	6
2.2 Microcontroller	6
2.3 Inputs	7
2.4 Outputs	7
3 Accessories	7
4 Related Products	7
5 Rating	7
5.1 Recommended Operating Conditions	7
5.2 Power Specification	8
5.3 Current Consumption	8
6 Functional Overview	9
6.1 Pinout	9
6.2 Full Pinout Table	10
6.2.1 Board's 24-Pin Header	10
6.2.2 Board's 26-Pin Header	11
6.2.3 SPI	12
6.2.4 Digital Pins D22 - D53 LHS	12
6.2.5 Digital Pins D22 - D53 RHS	13
6.2.6 JTAG Pins	13
6.3 Block Diagram	14
6.4 Power Supply	15
6.5 Product Topology	16
6.5.1 JTAG Connector	17
6.5.2 Native USB Port	17
6.5.3 Programming USB Port	18
6.5.4 Board's 24-Pin Header Connector	18
6.5.5 Board's 26-Pin Header Connector	19
6.5.6 SPI	20
6.5.7 D22 to D53 on Left and Right Side	20
7 Device Operation	22
7.1 Getting Started - IDE	22



7.2 Getting Started - Arduino Cloud Editor	22
7.3 Getting Started - Arduino Cloud	22
7.4 Online Resources	22
7.5 Board Recovery	22
8 Mechanical Information	23
8.1 Board Dimensions	23
8.2 Board Connectors	24
9 Certifications	25
9.1 Certifications Summary	25
9.2 Declaration of Conformity CE DoC (EU)	25
9.3 Declaration of Conformity to EU RoHS & REACH 211 01/19/2021	25
9.4 Conflict Minerals Declaration	26
9.5 FCC Caution	26
10 Revision History	28
11 应用示例	
12 特点	
12.1 一般规格概述	
12.2 微控制器	
12.3 输入	
12.4 输出	
13 配件	
14 相关产品	
15 额定值	
15.1 建议运行条件	
15.2 电源规格	
15.3 电流消耗	
16 功能概述	
16.1 引脚布局	
16.2 完整引脚配置表	
16.2.1 电路板的 24 引脚接头	
16.2.2 电路板的 26 引脚接头	
16.2.3 SPI	35
16.2.4 数字引脚 D22 - D53 LHS	
16.2.5 数字引脚 D22 - D53 LHS	
16.2.6 JTAG 复位	
16.3 方框图	



16.4 电源	
16.5 产品拓扑结构	
16.5.1 JTAG 连接器	
16.5.2 原生 USB 端口	
16.5.3 编程 USB 端口	
16.5.4 电路板的 24 引脚接头连接器	
16.5.5 电路板的 26 引脚接头连接器	
16.5.6 SPI	43
16.5.7 左侧和右侧的 D22 至 D53	
17 电路板操作	
17.1 入门指南 - IDE	
17.2 入门指南 - Arduino Cloud Editor	
17.3 入门指南 - Arduino Cloud	
17.4 在线资源	
17.5 电路板恢复	
18 机械层信息	
18.1 电路板尺寸	
18.2 电路板连接器	
19 认证	
19.1 认证摘要	
19.2 符合性声明 CE DoC (欧盟)	
19.3 声明符合欧盟 RoHS 和 REACH 2011 01/19/2021	
19.4 冲突矿产声明	
19.5 FCC 警告	
20 修订记录	



1 Application Examples

The Arduino Due combines the performance of the Atmel SAM3X8E microcontroller with the flexibility of the Arduino platform, offering a versatile solution for developers, hobbyists, and professionals alike. With its 32-bit architecture and clock speed of 84 MHz, the Due delivers robust performance for demanding applications.

- **Embedded Systems Development:** The Arduino Due can be utilized to create a real-time data acquisition system for monitoring and analyzing environmental parameters in industrial settings. By interfacing sensors such as temperature, humidity, and pressure sensors with the Due's abundant I/O pins, developers can capture real-time data and process it using the Due's powerful microcontroller. The system can then transmit this data wirelessly or via USB to a host computer for analysis, allowing for continuous monitoring and remote management of critical processes.
- **Robotics:** The Arduino Due can serve as the brain of an autonomous mobile robot capable of navigating and interacting with its environment. By integrating sensors such as ultrasonic range finders, gyroscopes, and encoders, developers can equip the robot with perception capabilities to sense its surroundings and detect obstacles. Using the Due's abundant I/O pins and powerful processing capabilities, algorithms for localization, mapping, and path planning can be implemented to enable autonomous navigation. Additionally, actuators such as motors or servos can be controlled by the Due to execute motion commands, allowing the robot to move and manipulate objects in its environment autonomously.
- **3D Printing & CNC Machines:** The Arduino Due can function as a versatile controller for DIY projects. By interfacing stepper motor drivers and end-stop switches with the Due's numerous I/O pins, enthusiasts can create their own 3D printers or CNC machines. The Due's high-speed processing capabilities enable precise control of stepper motors for accurate positioning and movement.
- **Prototyping:** The Arduino Due serves as an invaluable tool for quickly iterating and testing new ideas for IoT devices. By leveraging the Due's extensive I/O capabilities and compatibility with various sensors, communication modules, and actuators, developers can rapidly assemble and test prototypes of IoT devices. Whether it is a smart home sensor node, a weather station, or a remote monitoring system, the Arduino Due provides a flexible platform for integrating components, writing firmware, and validating functionality. With the Due's support for Arduino libraries and easy-to-use development environment, prototypers can focus on innovation and experimentation, accelerating the process of bringing ideas to fruition.



2 Features

2.1 General Specifications Overview

The Arduino Due is a versatile microcontroller board designed for a wide range of applications. Powered by the Atmel SAM3X8E ARM Cortex-M3 CPU, it offers high performance and a robust set of features, making it suitable for complex projects. The Due's 32-bit architecture provides enhanced processing capabilities compared to traditional Arduino boards. Designed with a similar form factor to the Arduino® Mega, it maintains compatibility with most Arduino shields through its extensive set of I/O pins and headers. The following table summarizes the board's main features.

Feature	Description
Microcontroller	Atmel SAM3X8E ARM Cortex-M3 32-bit ARM Cortex-M3 / 84 MHz Clock speed
Memory	SAM3X 512 KB Flash / 96 KB SRAM (divided into two banks: 64 KB and 32 KB)
USB-to-serial	ATmega16U2 connected to the SAM3X hardware UART
Digital Inputs	Digital Inputs not 5 V compatible (x54)
Analog Inputs	The Due's analog inputs pins measure from ground to a maximum value of 3.3 V (x12)
PWM Pins	PWM Pins with 8 bits resolution (x12)
Communication	UART (x4), I2C (x2), SPI (x1 SPI header), Native USB port (x1), Programming USB port (x1)
Power	Input voltage (VIN): 7-12 VDC / DC Current per I/O Pin: 8 mA
Dimensions	101.6 mm x 53.34 mm
Weight	36 g
Operating Temperature	-40 °C to +85 °C
Certifications	CE/RED, UKCA, FCC, IC, RCM, RoHS, REACH, WEEE

2.2 Microcontroller

Component	Details
Atmel SAM3X8E	32-bit ARM Cortex-M3 at 84 MHz
Flash Memory	512 KB
Programming Memory	96 KB SRAM (divided into two banks: 64 KB and 32 KB)

2.3 Inputs

Characteristics	Details
Number of inputs	54x digital inputs, 12x analog inputs
Inputs overvoltage protection	Yes
Antipolarity protection	Yes

2.4 Outputs

Characteristics	Details
DAC1 and DAC2	True analog output 12-bits resolution (4096 levels)
PWM outputs	12x PWM outputs

3 Accessories

- USB Cable Type-A Male to Micro Type-B Male (Not included)

4 Related Products

- Arduino Mega Proto Shield Rev3 (A000080)
- Arduino 4 Relays Shield (A000110)
- Arduino Motor Shield Rev3 (A000079)

5 Rating

5.1 Recommended Operating Conditions

Symbol	Description	Min	Typ	Max	Unit
V_{IN}	Input voltage from VIN pad	6.0	7.0	16	V
V_{USB}	Input voltage from USB connector	4.8	5.0	5.5	V
V_{DD}	Input high-level voltage	$0.7*V_{DD}$		V_{DD}	V
V_{IL}	Input low-level voltage	0		$0.3*V_{DD}$	V
T_{OP}	Operating Temperature	-40	25	85	°C

Note: V_{DD} controls the logic level and is connected to the 3.3 V power rail. V_{AREF} is for the analog logic.

5.2 Power Specification

Property	Min	Typ	Max	Unit
Supply voltage	7.0	-	12	V
Permissible range	6.0	-	16	V

Safety Note: Unlike most traditional Arduino boards, the Arduino Due board runs at 3.3 V. Keep in mind the maximum voltage that the I/O pins can tolerate is 3.3 V. Applying voltages higher than 3.3 V to any I/O pin could damage the board.


5.3 Current Consumption

Parameter	Symbol	Min	Typ	Max	Unit
Normal Mode Current Consumption	I_{NM}	130	---	800	mA

6 Functional Overview

6.1 Pinout

The Arduino Due pinout is shown in the following figure.

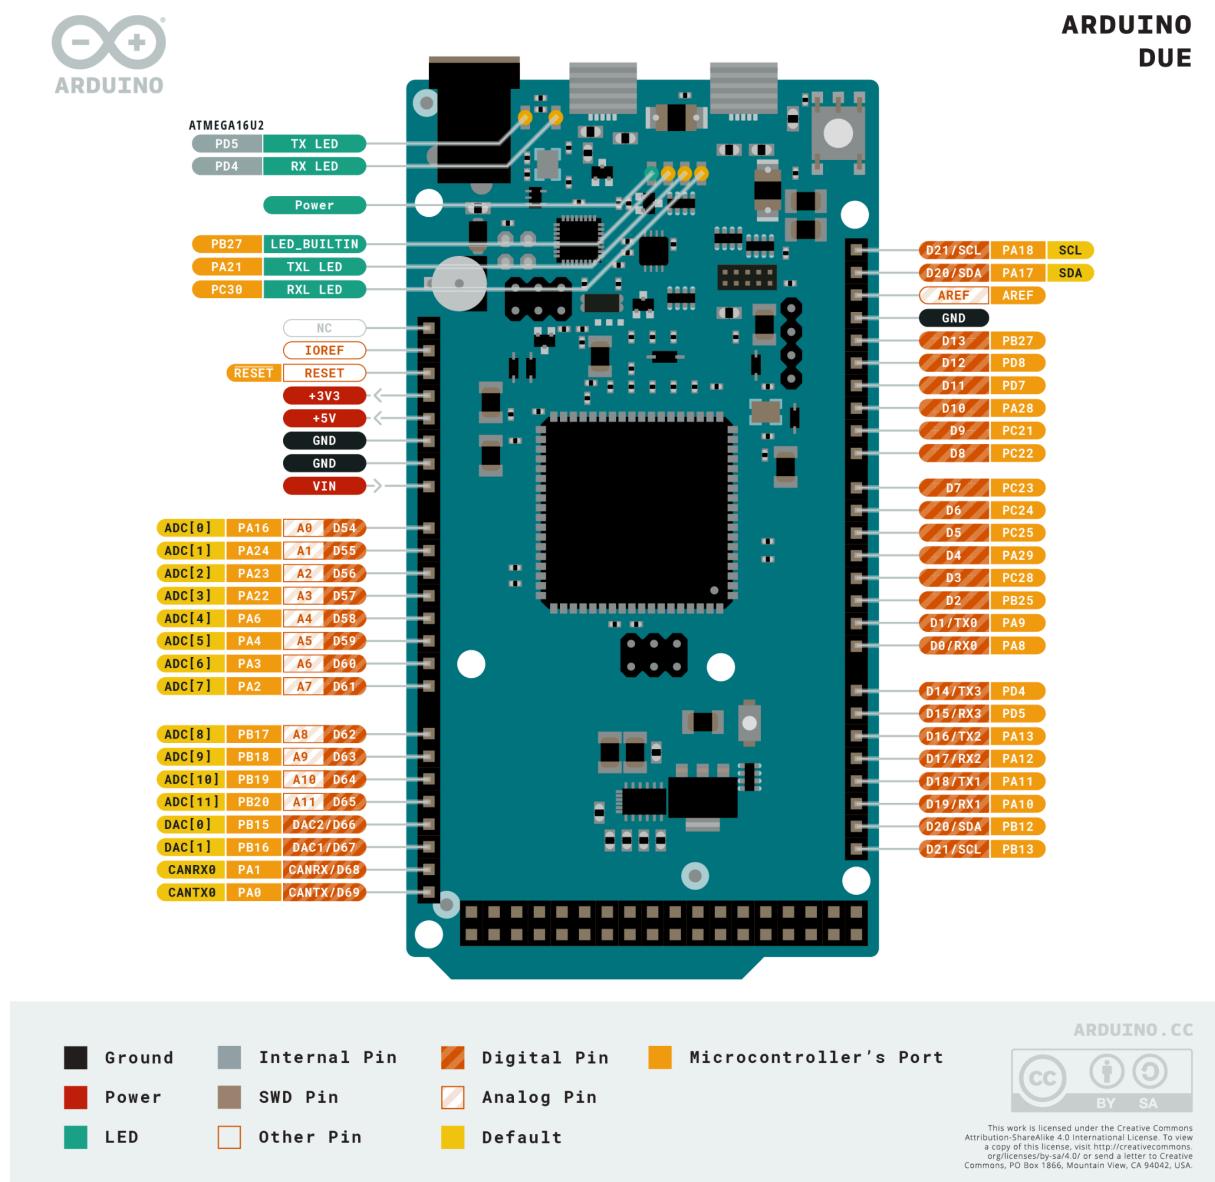

Arduino Due pinout

Safety Note: Disconnect power before board modifications to avoid short-circuiting.

6.2 Full Pinout Table

The full pinout of the Arduino Due is available in the following tables.

6.2.1 Board's 24-Pin Header

Pin	Function	Type	Description
1	NC	NC	Not Connected
2	IOREF	IOREF	Reference for digital logic voltage - connected to 3.3 V
3	Reset	Reset	Reset
4	+3V3	Power	+3V3 Power Rail
5	+5V	Power	+5V Power Rail
6	GND	Power	Ground
7	GND	Power	Ground
8	VIN	Power	Voltage Input
9	A0	Analog	Analog input 0 / GPIO
10	A1	Analog	Analog input 1 / GPIO
11	A2	Analog	Analog input 2 / GPIO
12	A3	Analog	Analog input 3 / GPIO
13	A4	Analog	Analog input 4 / GPIO
14	A5	Analog	Analog input 5 / GPIO
15	A6	Analog	Analog input 6 / GPIO
16	A7	Analog	Analog input 7 / GPIO
17	A8	Analog	Analog input 8 / GPIO
18	A9	Analog	Analog input 9 / GPIO
19	A10	Analog	Analog input 10 / GPIO
20	A11	Analog	Analog input 11 / GPIO
21	DAC0	Analog	Digital to Analog Converter 0
22	DAC1	Analog	Digital to Analog Converter 1
23	CANRX	Digital	CAN Bus Receiver
24	CANTX	Digital	CAN Bus Transmitter

Board's 24-Pin Header pinout



6.2.2 Board's 26-Pin Header

Pin	Function	Type	Description
1	D21/SCL1	Digital	GPIO 21 / I2C 1 Clock
2	D20/SDA1	Digital	GPIO 20 / I2C 1 Dataline
3	AREF	Digital	Analog Reference Voltage
4	GND	Power	Ground
5	D13/SCK	Digital	GPIO 13 / SPI Clock (PWM~)
6	D12/CIPO	Digital	GPIO 12 / SPI Controller In Peripheral Out (PWM~)
7	D11/COPI	Digital	GPIO 11 / SPI Controller Out Peripheral In (PWM~)
8	D10/CS	Digital	GPIO 10 / SPI Chip Select (PWM~)
9	D9/SDA2	Digital	GPIO 9 / I2C 2 Dataline (PWM~)
10	D8/SCL2	Digital	GPIO 8 / I2C 2 Clockline (PWM~)
11	D7	Digital	GPIO 7 (PWM~)
12	D6	Digital	GPIO 6 (PWM~)
13	D5	Digital	GPIO 5 (PWM~)
14	D4	Digital	GPIO 4 (PWM~)
15	D3	Digital	GPIO 3 (PWM~)
16	D2	Digital	GPIO 2 (PWM~)
17	D1/TX0	Digital	GPIO 1 / Serial 0 Transmitter
18	D0/TX0	Digital	GPIO 0 / Serial 0 Receiver
19	D14/TX3	Digital	GPIO 14 / Serial 3 Transmitter
20	D15/RX3	Digital	GPIO 15 / Serial 3 Receiver
21	D16/TX2	Digital	GPIO 16 / Serial 2 Transmitter
22	D17/RX2	Digital	GPIO 17 / Serial 2 Receiver
23	D18/TX1	Digital	GPIO 18 / Serial 1 Transmitter
24	D19/RX1	Digital	GPIO 19 / Serial 1 Receiver
25	D20/SDA	Digital	GPIO 20 / I2C 0 Dataline
26	D21/SCL	Digital	GPIO 21 / I2C 0 Clock

Board's 26-Pin Header pinout



6.2.3 SPI

The board provides an SPI interface and full access to its pinout as it can be seen in the following table.

Pin	Function	Type	Description
1	CIPO	Internal	Controller In Peripheral Out
2	+5V	Internal	Power Supply of 5V
3	SCK	Internal	Serial Clock
4	COPI	Internal	Controller Out Peripheral In
5	RESET	Internal	Reset
6	GND	Internal	Ground

SPI pinout

6.2.4 Digital Pins D22 – D53 LHS

Pin	Function	Type	Description
1	+5V	Power	+5V Power Rail
2	D22	Digital	GPIO 22
3	D24	Digital	GPIO 24
4	D26	Digital	GPIO 26
5	D28	Digital	GPIO 28
6	D30	Digital	GPIO 30
7	D32	Digital	GPIO 32
8	D34	Digital	GPIO 34
9	D36	Digital	GPIO 36
10	D38	Digital	GPIO 38
11	D40	Digital	GPIO 40
12	D42	Digital	GPIO 42
13	D44	Digital	GPIO 44
14	D46	Digital	GPIO 46
15	D48	Digital	GPIO 48
16	D50	Digital	GPIO 50
17	D52	Digital	GPIO 52
18	GND	Power	Ground

D22 - D53 LHS pinout



6.2.5 Digital Pins D22 – D53 RHS

Pin	Function	Type	Description
1	+5V	Power	+5V Power Rail
2	D23	Digital	GPIO 23
3	D25	Digital	GPIO 25
4	D27	Digital	GPIO 27
5	D29	Digital	GPIO 29
6	D31	Digital	GPIO 31
7	D33	Digital	GPIO 33
8	D35	Digital	GPIO 35
9	D37	Digital	GPIO 37
10	D39	Digital	GPIO 39
11	D41	Digital	GPIO 41
12	D43	Digital	GPIO 43
13	D45	Digital	GPIO 45
14	D47	Digital	GPIO 47
15	D49	Digital	GPIO 49
16	D51	Digital	GPIO 51
17	D53	Digital	GPIO 53
18	GND	Power	Ground

D22 - D53 RHS pinout

6.2.6 JTAG Pins


The board provides access to the debugging interface using the JTAG pins as it can be seen in the following table.

Pin	Function	Type	Description
1	Reset	Reset	Reset
2	GND	Power	GROUND
3	TDI	Digital	Test Data In
4	N/C	-	Not Connected
5	TDO	Digital	Test Data Out
6	GND	Power	GROUND
7	TCK	Digital	Test Clock
8	GND	Power	GROUND
9	TMS	Digital	Test Mode Select
10	+3V3	Power	+3V3 Power Rail

Debugging's JTAG pinout

6.3 Block Diagram

The block diagram with the main parts of the product can be checked in the following image:

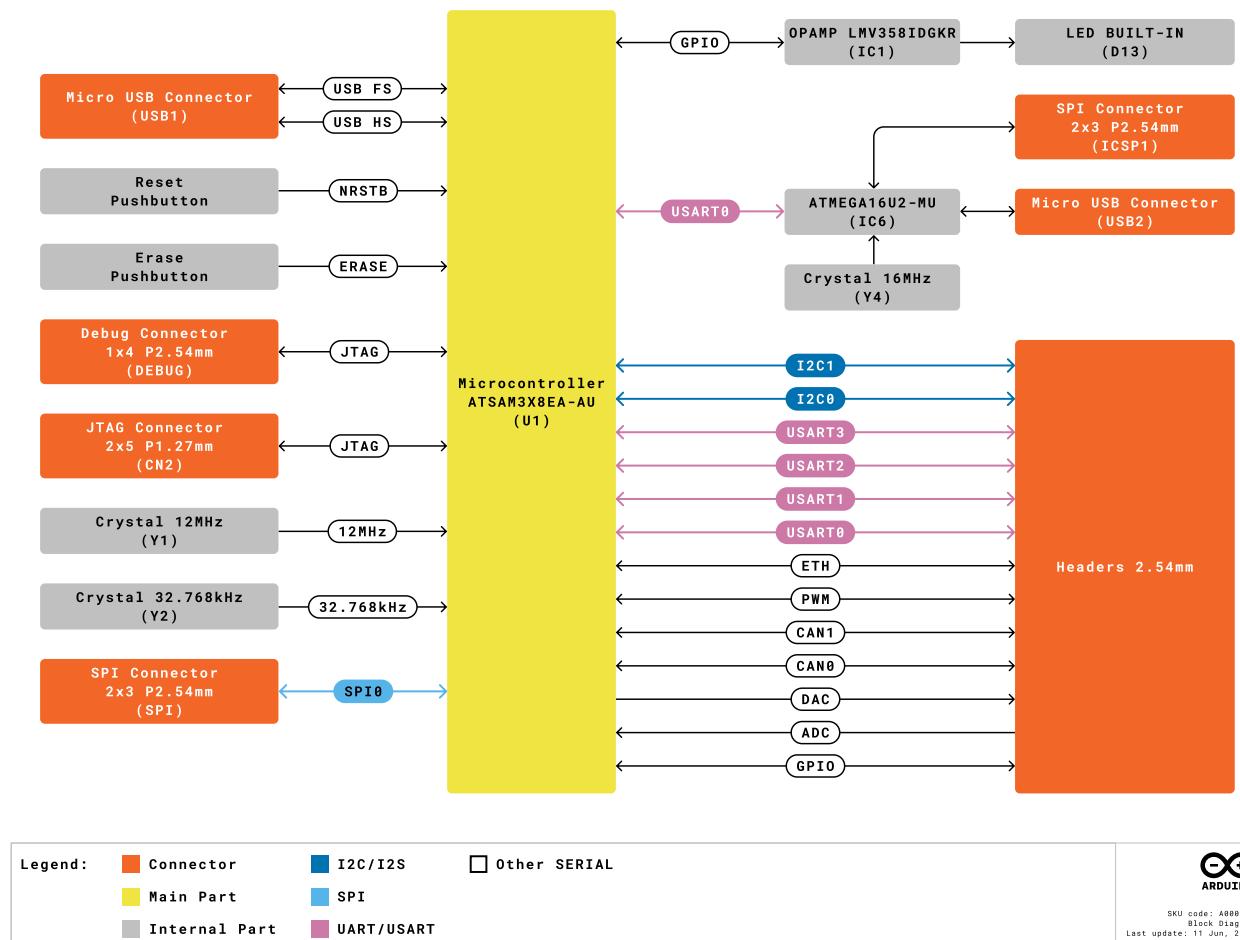


Arduino Due Block Diagram

6.4 Power Supply

The Arduino Due can be powered in multiple ways:


- USB Type-B port (Native port and Programming port).
- Using an external voltage source connected to VIN pin, which has a recommended voltage range of 7-12 VCC.
- The Power Jack: The Due can be powered using a DC power supply connected to the power jack, which accepts a voltage range of 7 to 12 V.

It is essential to note that the Arduino Due operates at 3.3 V, so any external power source must be regulated to this voltage level. Additionally, the power supply should be able to provide sufficient current for the board's operation and any connected peripherals.

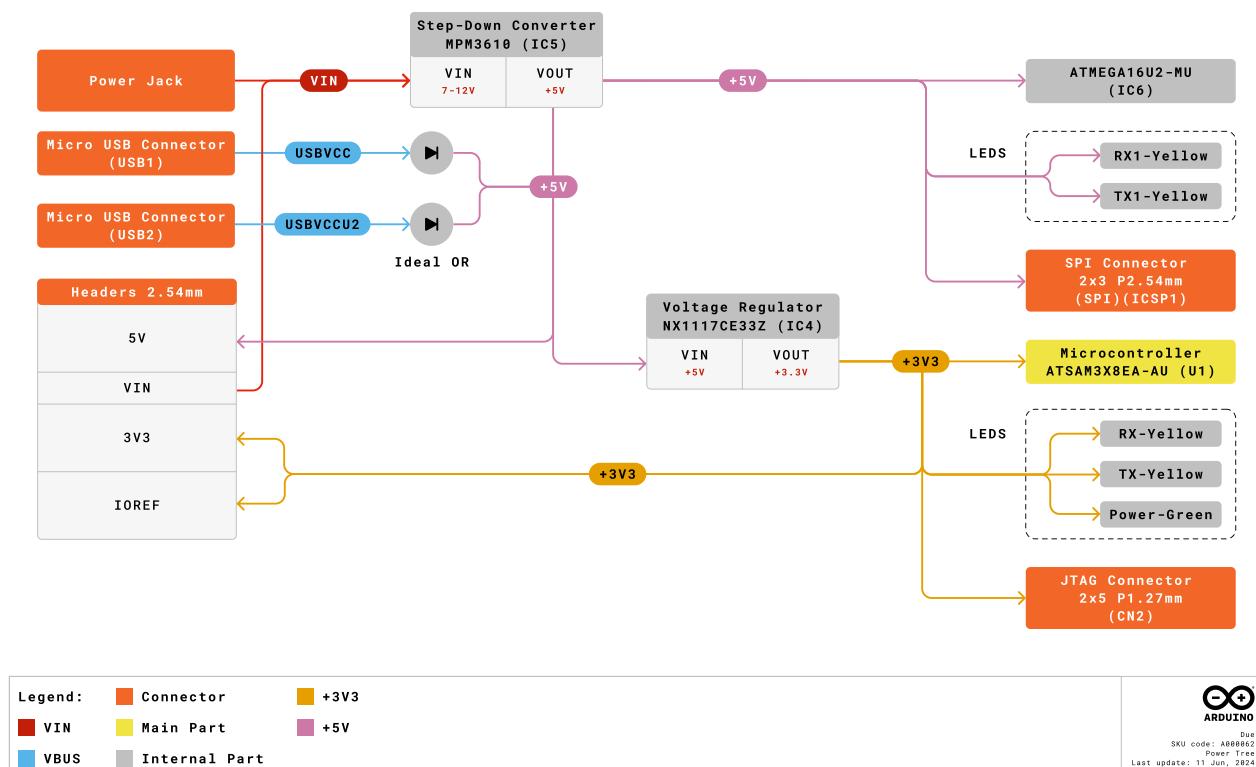

6.5 Product Topology

In the following drawing you can see the main integrated circuits and passive components of the Arduino Due board.

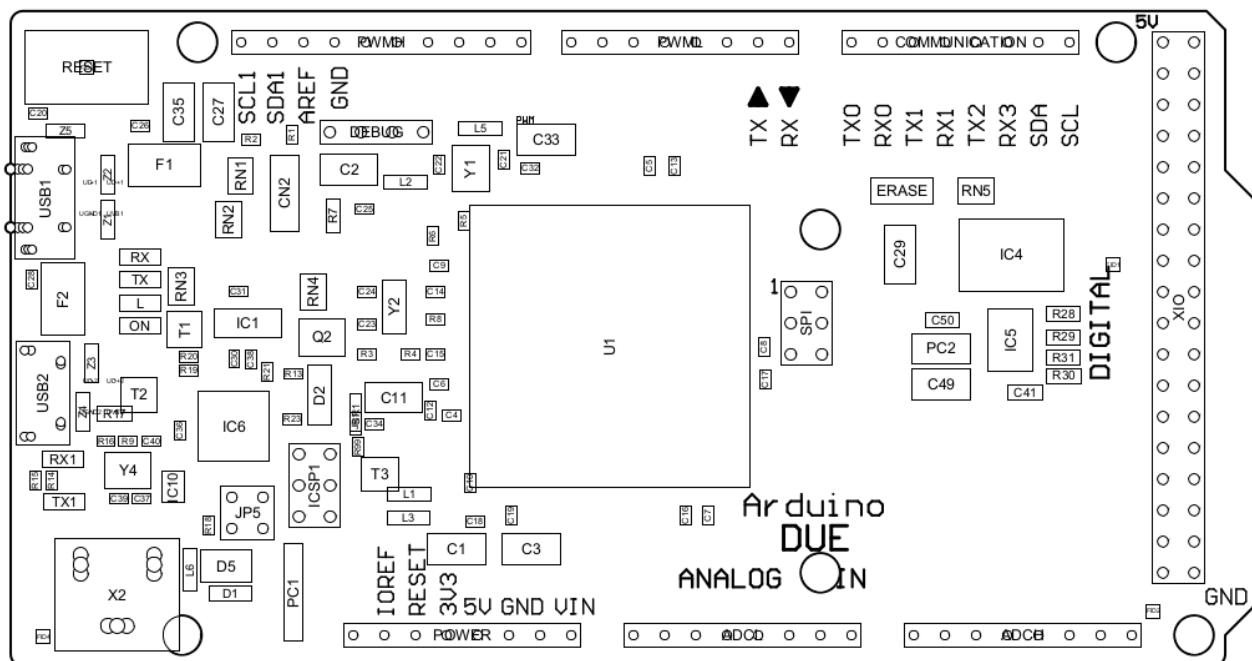

Arduino Due Topology

Ref.	Description
U1	Atmel SAM3X8E ARM Cortex-M3
USB1	Native USB port
USB2	Programming USB port
X2	Power Jack VIN 7-12 VCC
ERASE	ERASE Button
RESET	Reset Button
DEBUG	Debug JTAG pinnout
SPI	SPI pinout
ICSP1	ICSPI1 Pinout

6.5.1 JTAG Connector


Debugging capabilities are integrated directly into the Arduino Due and are accessible via the 6-pin JTAG connector.

Pin	Function	Type	Description
1	Reset	Reset	Reset
2	GND	Power	GROUND
3	TDI	Digital	Test Data In
4	N/C	-	Not Connected
5	TDO	Digital	Test Data Out
6	GND	Power	GROUND
7	TCK	Digital	Test Clock
8	GND	Power	GROUND
9	TMS	Digital	Test Mode Select
10	+3V3	Power	+3V3 Power Rail

JTAG pinout

6.5.2 Native USB Port

The Arduino Due's Native USB port features a USB Type-B connector. This port allows the board to communicate directly with a computer as a USB device, enabling functionalities such as USB host/device capabilities and USB OTG (On-The-Go) functionality.

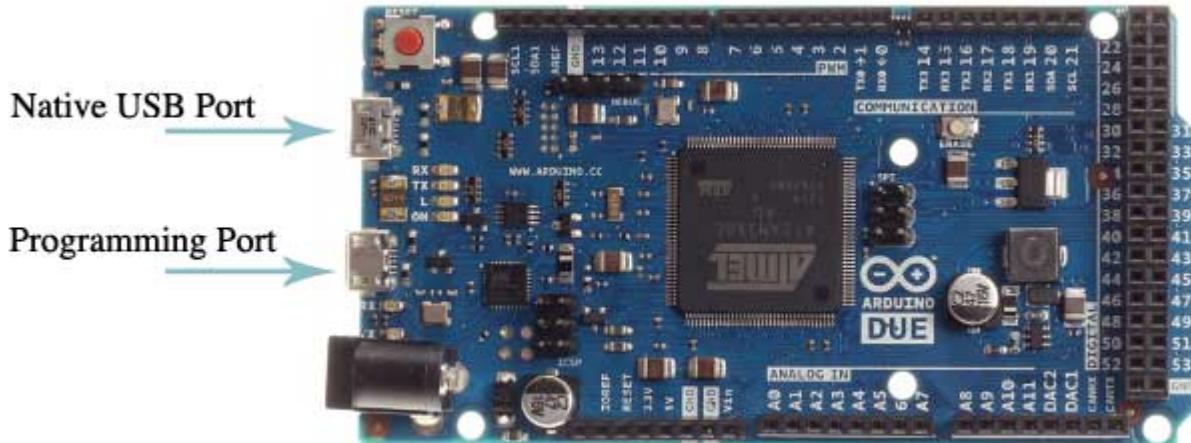

Arduino Due USB port

6.5.3 Programming USB Port

This port allows the board to be programmed and powered via a USB connection to a computer. It facilitates serial communication between the Arduino Due and the computer, enabling the uploading of sketches and interaction with the Arduino IDE. The port is connected to the ATmega16U2 microcontroller, which acts as a USB-to-serial converter, simplifying the programming process. When connected to a computer, the Arduino IDE recognizes the board as a COM port, enabling seamless communication for programming and debugging purposes.

6.5.4 Board's 24-Pin Header Connector

The 24-pin header connector provides a range of interfaces and general-purpose pins essential for various applications

These pins offer a range of functionalities, including analog and digital input/output, power supply connections, analog-to-digital, digital-to-analog conversion and CAN bus communication.

Pin	Function	Type	Description
1	NC	NC	Not Connected
2	IOREF	IOREF	Reference for digital logic voltage - connected to 3.3V
3	Reset	Reset	Reset
4	+3V3	Power	+3V3 Power Rail
5	+5V	Power	+5V Power Rail
6	GND	Power	Ground
7	GND	Power	Ground
8	VIN	Power	Voltage Input
9	A0	Analog	Analog input 0 / GPIO
10	A1	Analog	Analog input 1 / GPIO
11	A2	Analog	Analog input 2 / GPIO
12	A3	Analog	Analog input 3 / GPIO
13	A4	Analog	Analog input 4 / GPIO
14	A5	Analog	Analog input 5 / GPIO
15	A6	Analog	Analog input 6 / GPIO
16	A7	Analog	Analog input 7 / GPIO
17	A8	Analog	Analog input 8 / GPIO
18	A9	Analog	Analog input 9 / GPIO
19	A10	Analog	Analog input 10 / GPIO
20	A11	Analog	Analog input 11 / GPIO
21	DAC0	Analog	Digital to Analog Converter 0
22	DAC1	Analog	Digital to Analog Converter 1
23	CANRX	Digital	CAN Bus Receiver
24	CANTX	Digital	CAN Bus Transmitter

Board's 24-Pin Header pinout

6.5.5 Board's 26-Pin Header Connector

The 26-pin header connector on the Arduino Due offers a comprehensive set of interfaces and versatile pins crucial for diverse applications.

These pins offer a range of functionalities, including digital input/output, serial communication, PWM (Pulse Width Modulation) outputs, and I2C (Inter-Integrated Circuit) communication.

Pin	Function	Type	Description
1	D21/SCL1	Digital	GPIO 21 / I2C 1 Clock
2	D20/SDA1	Digital	GPIO 20 / I2C 1 Dataline
3	AREF	Digital	Analog Reference Voltage
4	GND	Power	Ground
5	D13/SCK	Digital	GPIO 13 / SPI Clock (PWM~)
6	D12/CIPO	Digital	GPIO 12 / SPI Controller In Peripheral Out (PWM~)
7	D11/COPI	Digital	GPIO 11 / SPI Controller Out Peripheral In (PWM~)
8	D10/CS	Digital	GPIO 10 / SPI Chip Select (PWM~)
9	D9/SDA2	Digital	GPIO 9 / I2C 2 Dataline (PWM~)
10	D8/SCL2	Digital	GPIO 8 / I2C 2 Clockline (PWM~)
11	D7	Digital	GPIO 7 (PWM~)
12	D6	Digital	GPIO 6 (PWM~)
13	D5	Digital	GPIO 5 (PWM~)
14	D4	Digital	GPIO 4 (PWM~)
15	D3	Digital	GPIO 3 (PWM~)
16	D2	Digital	GPIO 2 (PWM~)
17	D1/TX0	Digital	GPIO 1 / Serial 0 Transmitter
18	D0/TX0	Digital	GPIO 0 / Serial 0 Receiver
19	D14/TX3	Digital	GPIO 14 / Serial 3 Transmitter
20	D15/RX3	Digital	GPIO 15 / Serial 3 Receiver
21	D16/TX2	Digital	GPIO 16 / Serial 2 Transmitter
22	D17/RX2	Digital	GPIO 17 / Serial 2 Receiver
23	D18/TX1	Digital	GPIO 18 / Serial 1 Transmitter
24	D19/RX1	Digital	GPIO 19 / Serial 1 Receiver
25	D20/SDA	Digital	GPIO 20 / I2C 0 Dataline
26	D21/SCL	Digital	GPIO 21 / I2C 0 Clock

Board's 26-Pin Header pinout

6.5.6 SPI

These pins facilitate communication between the Arduino Due and external SPI devices

Pin	Function	Type	Description
1	CIPO	Internal	Controller In Peripheral Out
2	+5V	Internal	Power Supply of 5 V
3	SCK	Internal	Serial Clock
4	COPI	Internal	Controller Out Peripheral In
5	RESET	Internal	Reset
6	GND	Internal	Ground

SPI pinout

6.5.7 D22 to D53 on Left and Right Side

These digital pins provide a wide range of GPIO (General Purpose Input/Output) capabilities for interfacing with external sensors, actuators, and other digital devices in Arduino Due projects.

Pin	Function	Type	Description
1	+5V	Power	+5V Power Rail
2	D22	Digital	GPIO 22
3	D24	Digital	GPIO 24
4	D26	Digital	GPIO 26
5	D28	Digital	GPIO 28
6	D30	Digital	GPIO 30
7	D32	Digital	GPIO 32
8	D34	Digital	GPIO 34
9	D36	Digital	GPIO 36
10	D38	Digital	GPIO 38
11	D40	Digital	GPIO 40
12	D42	Digital	GPIO 42
13	D44	Digital	GPIO 44
14	D46	Digital	GPIO 46
15	D48	Digital	GPIO 48
16	D50	Digital	GPIO 50
17	D52	Digital	GPIO 52
18	GND	Power	Ground

D22 - D53 LHS pinout

Pin	Function	Type	Description
1	+5V	Power	+5V Power Rail
2	D23	Digital	GPIO 23
3	D25	Digital	GPIO 25
4	D27	Digital	GPIO 27
5	D29	Digital	GPIO 29
6	D31	Digital	GPIO 31
7	D33	Digital	GPIO 33
8	D35	Digital	GPIO 35
9	D37	Digital	GPIO 37
10	D39	Digital	GPIO 39
11	D41	Digital	GPIO 41
12	D43	Digital	GPIO 43
13	D45	Digital	GPIO 45
14	D47	Digital	GPIO 47
15	D49	Digital	GPIO 49
16	D51	Digital	GPIO 51
17	D53	Digital	GPIO 53
18	GND	Power	Ground

D22 - D53 RHS pinout



7 Device Operation

7.1 Getting Started - IDE

If you want to program your Arduino Due while offline you need to install the Arduino® Desktop IDE [1]. To connect the Arduino Due to your computer, you will need a USB Type-B cable, which can also provide power to the board, as indicated by the LED (DL1).

7.2 Getting Started - Arduino Cloud Editor

All Arduino boards, including this one, work out-of-the-box on the Arduino® Cloud Editor [2], by just installing a simple plugin.

The Arduino Cloud Editor is hosted online, therefore it will always be up-to-date with the latest features and support for all boards. Follow [3] to start coding on the browser and upload your sketches onto your board.

7.3 Getting Started - Arduino Cloud

All Arduino IoT enabled products are supported on Arduino Cloud which allows you to log, graph and analyze sensor data, trigger events, and automate your home or business.

7.4 Online Resources

Now that you have gone through the basics of what you can do with the board you can explore the endless possibilities it provides by checking exciting projects on ProjectHub [4], the Arduino Library Reference [5], and the online store [6]; where you will be able to complement your board with sensors, actuators and more.

7.5 Board Recovery


All Arduino boards have a built-in bootloader which allows flashing the board via USB. In case a sketch locks up the processor and the board is not reachable anymore via USB, it is possible to enter bootloader mode by double-tapping the reset button right after the power-up.

8 Mechanical Information

The Arduino Due is a microcontroller board measuring 101.52 mm x 53.3 mm, featuring two USB-B connectors and a big quantity of GPIO pins headers.

8.1 Board Dimensions


The Arduino Due board outline and mounting holes dimensions are shown in the figure below; all the dimensions are in mm.

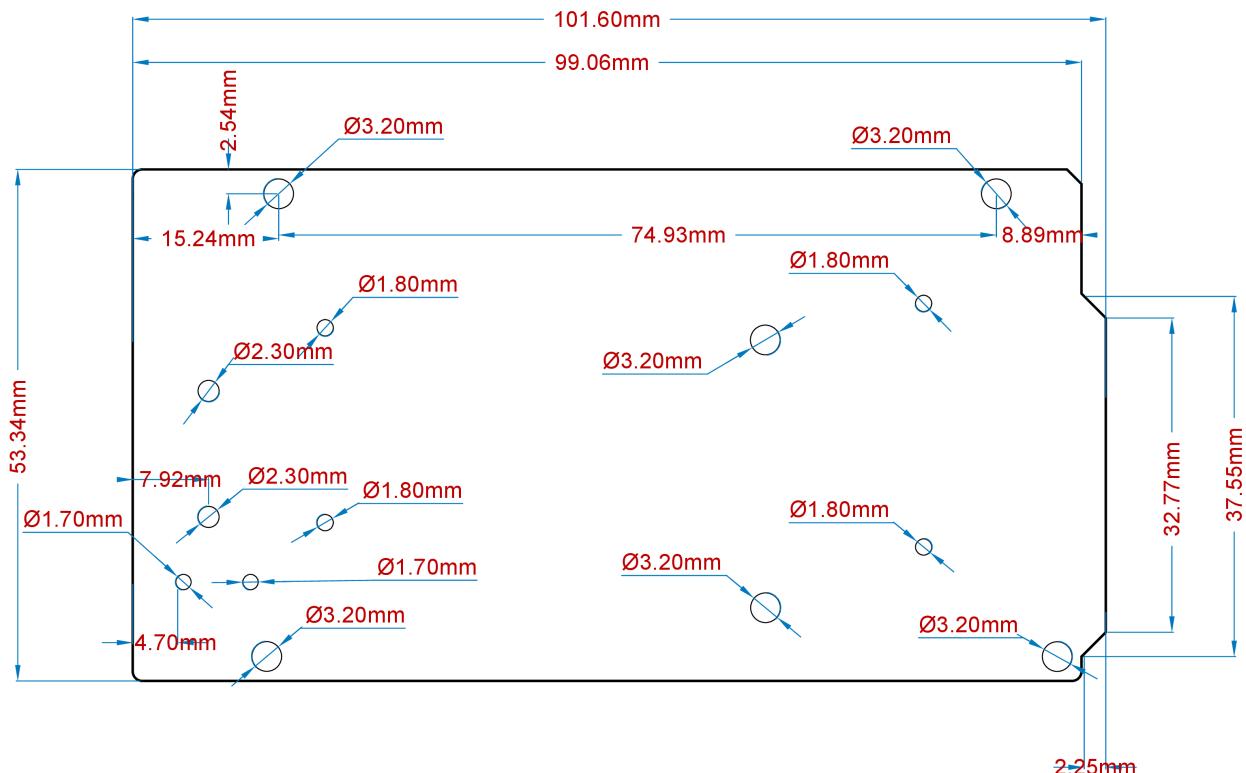

Arduino Due Mounting Holes And Board Outline

8.2 Board Connectors

Connectors of the Arduino Due are placed on the left side of the board; their placement is shown in the figure below. All the dimensions are in mm.

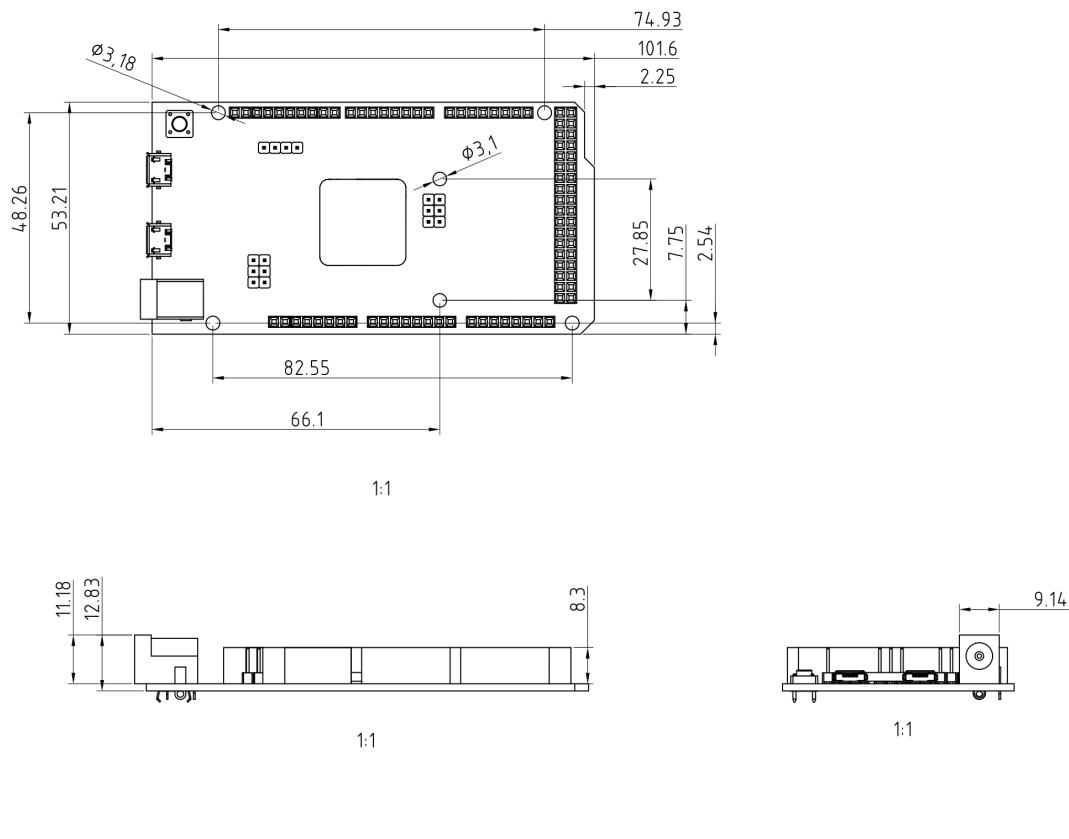

Arduino Due Technical drawing



9 Certifications

9.1 Certifications Summary

Certification	Status
CE/RED (Europe)	Yes
UKCA (UK)	Yes
FCC (USA)	Yes
IC (Canada)	Yes
RCM (Australia)	Yes
RoHS	Yes
REACH	Yes
WEEE	Yes

9.2 Declaration of Conformity CE DoC (EU)

We declare under our sole responsibility that the products above are in conformity with the essential requirements of the following EU Directives and therefore qualify for free movement within markets comprising the European Union (EU) and European Economic Area (EEA).

9.3 Declaration of Conformity to EU RoHS & REACH 211 01/19/2021

Arduino boards are in compliance with RoHS 2 Directive 2011/65/EU of the European Parliament and RoHS 3 Directive 2015/863/EU of the Council of 4 June 2015 on the restriction of the use of certain hazardous substances in electrical and electronic equipment.

Substance	Maximum limit (ppm)
Lead (Pb)	1000
Cadmium (Cd)	100
Mercury (Hg)	1000
Hexavalent Chromium (Cr6+)	1000
Poly Brominated Biphenyls (PBB)	1000
Poly Brominated Diphenyl ethers (PBDE)	1000
Bis(2-Ethylhexyl) phthalate (DEHP)	1000
Benzyl butyl phthalate (BBP)	1000
Dibutyl phthalate (DBP)	1000
Diisobutyl phthalate (DIBP)	1000

Exemptions: No exemptions are claimed.

Arduino Boards are fully compliant with the related requirements of European Union Regulation (EC) 1907 /2006 concerning the Registration, Evaluation, Authorization and Restriction of Chemicals (REACH). We declare none of the SVHCs (<https://echa.europa.eu/web/guest/candidate-list-table>), the Candidate List of Substances of Very High Concern for authorization currently released by ECHA, is present in all products (and also package) in quantities totaling in a concentration equal or above 0.1%. To the best of our knowledge, we also declare that our products do not contain any of the substances listed on the "Authorization List" (Annex XIV of the REACH regulations) and



Substances of Very High Concern (SVHC) in any significant amounts as specified by the Annex XVII of Candidate list published by ECHA (European Chemical Agency) 1907 /2006/EC.

9.4 Conflict Minerals Declaration

As a global supplier of electronic and electrical components, Arduino is aware of our obligations with regard to laws and regulations regarding Conflict Minerals, specifically the Dodd-Frank Wall Street Reform and Consumer Protection Act, Section 1502. Arduino does not directly source or process conflict minerals such as Tin, Tantalum, Tungsten, or Gold. Conflict minerals are contained in our products in the form of solder or as a component in metal alloys. As part of our reasonable due diligence, Arduino has contacted component suppliers within our supply chain to verify their continued compliance with the regulations. Based on the information received thus far we declare that our products contain Conflict Minerals sourced from conflict-free areas.

9.5 FCC Caution

Any Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions:

- (1) This device may not cause harmful interference
- (2) this device must accept any interference received, including interference that may cause undesired operation.

FCC RF Radiation Exposure Statement:

1. This Transmitter must not be co-located or operating in conjunction with any other antenna or transmitter.
2. This equipment complies with RF radiation exposure limits set forth for an uncontrolled environment.
3. This equipment should be installed and operated with a minimum distance of 20 cm between the radiator & your body.

Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

English: User manuals for license-exempt radio apparatus shall contain the following or equivalent notice in a conspicuous location in the user manual or alternatively on the device or both. This device complies with Industry Canada license-exempt RSS standard(s). Operation is subject to the following two conditions:

- (1) this device may not cause interference



(2) this device must accept any interference, including interference that may cause undesired operation of the device.

French: Le présent appareil est conforme aux CNR d'Industrie Canada applicables aux appareils radio exempts de licence. L'exploitation est autorisée aux deux conditions suivantes:

(1) l'appareil n'edoit pas produire de brouillage

(2) l'utilisateur de l'appareil doit accepter tout brouillage radioélectrique subi, même si le brouillage est susceptible d'en compromettre le fonctionnement.

IC SAR Warning:

English: This equipment should be installed and operated with a minimum distance of 20 cm between the radiator and your body.

French: Lors de l' installation et de l' exploitation de ce dispositif, la distance entre le radiateur et le corps est d'au moins 20 cm.

Important: The operating temperature of the EUT can't exceed 85°C and shouldn't be lower than -40°C.

Hereby, Arduino S.r.l. declares that this product is in compliance with essential requirements and other relevant provisions of Directive 2014/53/EU. This product is allowed to be used in all EU member states.

Company Information

Company name	Arduino SRL
Company Address	Via Andrea Appiani, 25 - 20900 MONZA (Italy)

Reference Documentation

Ref	Link
Arduino IDE (Desktop)	https://www.arduino.cc/en/Main/Software
Arduino IDE (Cloud)	https://create.arduino.cc/editor
Cloud IDE Getting Started	https://docs.arduino.cc/cloud/web-editor/tutorials/getting-started/getting-started-web-editor
Project Hub	https://create.arduino.cc/projecthub?by=part&part_id=11332&sort=trending
Library Reference	https://github.com/arduino-libraries/
Online Store	https://store.arduino.cc/



10 Revision History

Date	Revision	Changes
12/06/2024	1	First release

中文 (ZH)

描述

Arduino Due 是一款开创性的微控制器板，采用 Atmel SAM3X8E ARM Cortex-M3 CPU，是首款围绕 32 位 ARM 内核微控制器构建的 Arduino 板。Due 具有 54 个数字输入/输出引脚、12 个模拟输入、4 个 UART、USB OTG 功能和 84 MHz 时钟，可为各种项目提供更强的性能和多功能性。Due 兼容所有工作电压为 3.3 V 的 Arduino 扩展板，并符合 1.0 Arduino 引脚布局标准，是初学者和经验丰富的创客们的强大工具。

目标领域

嵌入式系统开发、机器人技术、3D 打印、数控机床、原型设计

目录

11 应用示例

Arduino Due 集 Atmel SAM3X8E 微控制器的性能和 Arduino 平台的灵活性于一身，为开发人员、业余爱好者和专业人士提供了一种多功能解决方案。Due 采用 32 位架构，时钟频率为 84 MHz，可为要求苛刻的应用提供强大的性能。

- 嵌入式系统开发：** Arduino Due 可用于创建实时数据采集系统，以监测和分析工业环境参数。通过将温度、湿度和压力传感器等传感器与 Due 丰富的 I/O 引脚连接，开发人员可以捕获实时数据，并使用 Due 功能强大的微控制器进行处理。然后，系统可以通过无线或 USB 将这些数据传输到主机进行分析，从而实现对关键过程的持续监测和远程管理。
- 机器人技术：** Arduino Due 可作为自主移动机器人的大脑，能够导航并与环境互动。通过集成超声波测距仪、陀螺仪和编码器等传感器，开发人员可以为机器人配备感知能力，以感知周围环境并检测障碍物。利用 Due 丰富的 I/O 引脚和强大的处理能力，可以实施定位、绘图和路径规划算法，从而实现自主导航。此外，Due 还可控制电机或伺服器等执行器来执行运动指令，使机器人能够自主移动和操控环境中的物体。
- 3D 打印和数控机床：** Arduino Due 可作为 DIY 项目的多功能控制器。通过将步进电机驱动器和限位开关与 Due 的众多 I/O 引脚相连接，爱好者们可以制造自己的 3D 打印机或数控机床。Due 的高速处理能力可精确控制步进电机，实现精确定位和移动。
- 原型设计：** Arduino Due 是快速迭代和测试物联网设备新想法的宝贵工具。利用 Due 广泛的输入/输出功能以及与各种传感器、通信模块和执行器的兼容性，开发人员可以快速组装和测试物联网设备原型。无论是智能家居传感器节点、气象站还是远程监控系统，Arduino Due 都提供了一个灵活的平台，便于集成组件、编写固件和验证功能。凭借 Due 对 Arduino 库的支持和易于使用的开发环境，原型设计人员可以专注于创新和实验，加速将想法转化为现实的过程。



12 特点

12.1 一般规格概述

Arduino Due 是一款多功能微控制器板，专为各种应用而设计。它采用 Atmel SAM3X8E ARM Cortex-M3 CPU，性能卓越，功能强大，适用于复杂的项目。与传统的 Arduino 板相比，Due 的 32 位架构提供了更强的处理能力。它采用与 Arduino® Mega 相似的外形设计，通过丰富的 I/O 引脚和接头与大多数 Arduino 扩展板保持兼容。下表总结了该电路板的主要特点。

特点	描述
微控制器	Atmel SAM3X8E ARM Cortex-M3 32 位 ARM Cortex-M3 / 84 MHz 时钟频率
内存	SAM3X 512 KB 闪存 / 96 KB SRAM (分为两个存储区：64 KB 和 32 KB)
USB 转串行接口	ATmega16U2 连接到 SAM3X 硬件 UART
数字输入	不兼容 5 V 的数字输入 (x54)
模拟输入	Due 的模拟输入引脚从接地到 3.3 V 的最大值 (x12)
PWM 引脚	分辨率为 8 位的 PWM 引脚 (x12)
通信	UART (x4), I2C (x2), SPI (x1 SPI 接头), 原生 USB 端口 (1个), 编程 USB 端口 (1个)
电源	输入电压 (VIN): 7-12 VDC / 每个 I/O 引脚的直流电流：8 mA
尺寸	101.6 mm x 53.34 mm
重量	36 g
工作温度	-40 °C 至 +85 °C
认证	CE/RED、UKCA、FCC、IC、RCM、RoHS、REACH、WEEE

12.2 微控制器

组件	详细信息
Atmel SAM3X8E	32 位 ARM Cortex-M3, 时钟频率：84 MHz
闪存	512 KB
编程内存	96 KB SRAM (分为两个存储区：64 KB 和 32 KB)



12.3 输入

特点	详细信息
输入数量	54 个数字输入, 12 个模拟输入
输入过压保护	是
反极性保护	是

12.4 输出

特点	详细信息
DAC1 和 DAC2	真值模拟输出 12 位分辨率 (4096 个电平)
PWM 输出	12 个 PWM 输出

13 配件

- USB 电缆 Type-A 公端转 Micro Type-B 公端 (不包括在内)

14 相关产品

- Arduino Mega Proto Shield Rev3 (A000080)
- Arduino 4 Relays Shield (A000110)
- Arduino Motor Shield Rev3 (A000079)

15 额定值

15.1 建议运行条件

符号	描述	最小值	典型值	最大值	单位
V_{IN}	来自 VIN 焊盘的输入电压	6.0	7.0	16	V
V_{USB}	来自 USB 连接器的输入电压	4.8	5.0	5.5	V
V_{DD}	输入高电平电压	0.7* V_{DD}		V_{DD}	V
V_{IL}	输入低电平电压	0		0.3* V_{DD}	V
T_{OP}	工作温度	-40	25	85	°C

注: V_{DD} 控制逻辑电平并与 3.3 V 电源轨相连 V_{AREF} 用于模拟逻辑。



15.2 电源规格

特性	最小值	典型值	最大值	单位
电源电压	7.0	-	12	V
允许范围	6.0	-	16	V

安全注意事项: 与大多数传统的 Arduino 电路板不同, Arduino Due 电路板工作电压为 3.3V。请注意, I/O 引脚能够承受的最大电压为 3.3V。为任何 I/O 引脚使用高于 3.3V 的电压可能会损坏电路板。


15.3 电流消耗

参数	符号	最小值	典型值	最大值	单位
正常模式下的电流消耗	I_{NM}	130	---	800	mA

16 功能概述

16.1 引脚布局

Arduino Due 的引脚布局如下图所示。

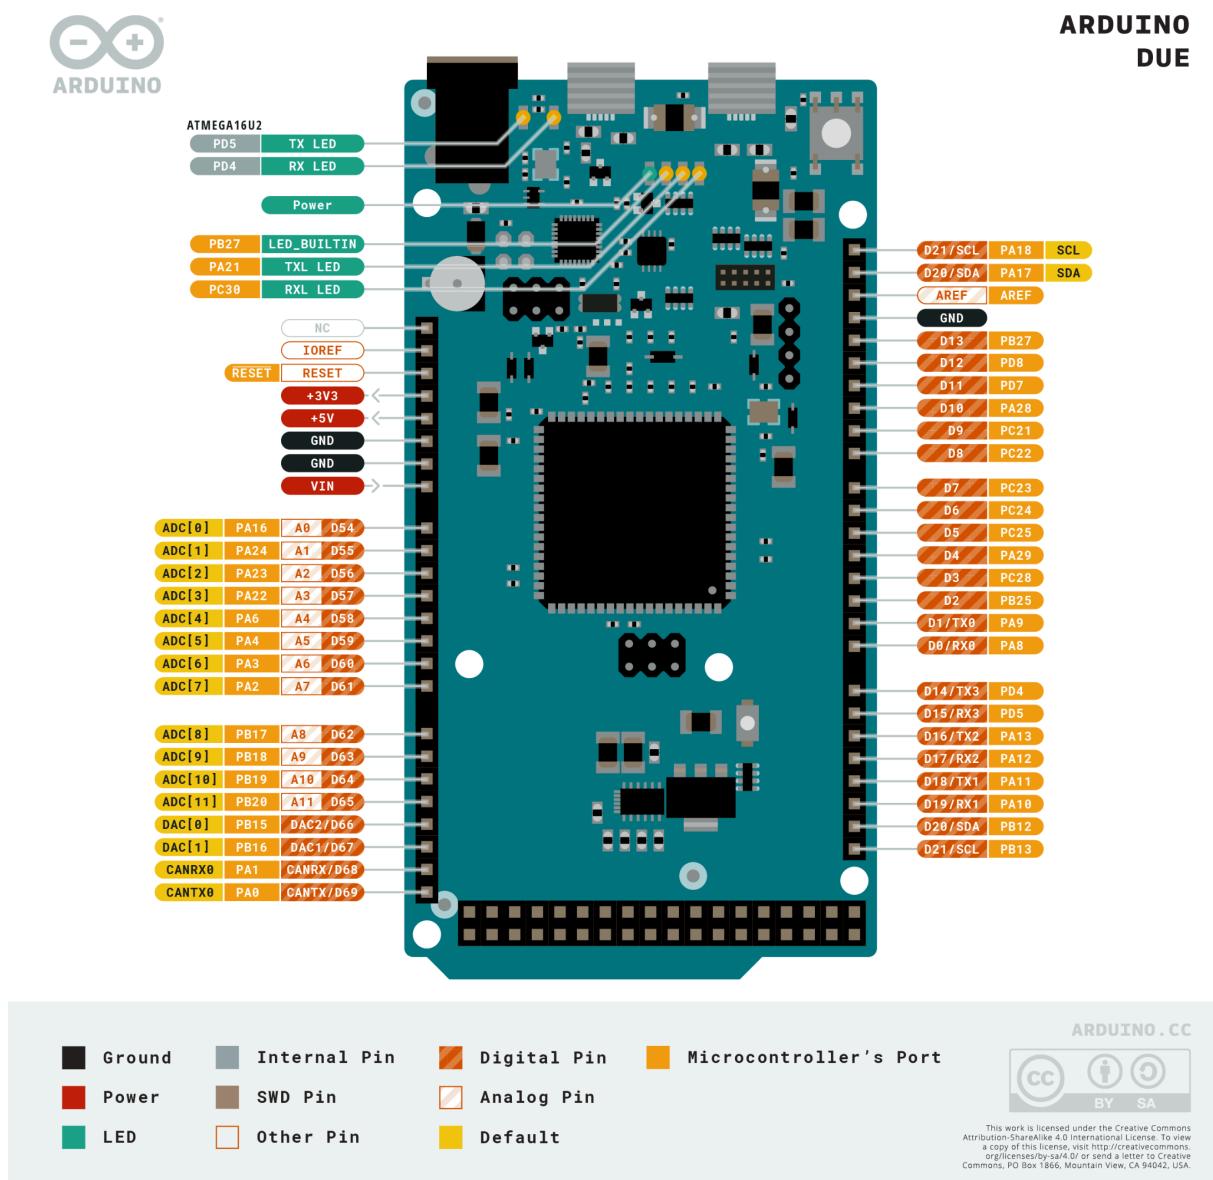

Arduino Due 引脚布局

安全注意事项: 在修改电路板之前, 请断开电源, 以避免短路。

16.2 完整引脚配置表

Arduino Due 的完整引脚配置如下表所示。

16.2.1 电路板的 24 引脚接头

引脚	功能	类型	描述
1	NC	NC	未连接
2	IOREF	IOREF	数字逻辑电压参考 - 连接到 3.3 V
3	Reset	复位	复位
4	+3V3	电源	+3V3 电源轨
5	+5V	电源	+5V 电源轨
6	GND	电源	接地
7	GND	电源	接地
8	VIN	电源	电压输入
9	A0	模拟	模拟输入0 / GPIO
10	A1	模拟	模拟输入1 / GPIO
11	A2	模拟	模拟输入2 / GPIO
12	A3	模拟	模拟输入3 / GPIO
13	A4	模拟	模拟输入4 / GPIO
14	A5	模拟	模拟输入5 / GPIO
15	A6	模拟	模拟输入6 / GPIO
16	A7	模拟	模拟输入7 / GPIO
17	A8	模拟	模拟输入8 / GPIO
18	A9	模拟	模拟输入9 / GPIO
19	A10	模拟	模拟输入10 / GPIO
20	A11	模拟	模拟输入11 / GPIO
21	DAC0	模拟	数字模拟转换器 0
22	DAC1	模拟	数字模拟转换器 1
23	CANRX	数字	CAN 总线接收器
24	CANTX	数字	CAN 总线发射器

电路板的 24 引脚接头引脚布局



16.2.2 电路板的 26 引脚接头

引脚	功能	类型	描述
1	D21/SCL1	数字	GPIO 21 / I2C 1 时钟
2	D20/SDA1	数字	GPIO 20 / I2C 1 数据线
3	AREF	数字	模拟参考电压
4	GND	电源	接地
5	D13/SCK	数字	GPIO 13 / SPI 时钟 (PWM~)
6	D12/CIPO	数字	GPIO 12 / SPI 控制器输入外设输出 (PWM~)
7	D11/COPI	数字	GPIO 11 / SPI 控制器输出外设输入 (PWM~)
8	D10/CS	数字	GPIO 10 / SPI 芯片选择 (PWM~)
9	D9/SDA2	数字	GPIO 9 / I2C 2 数据线 (PWM~)
10	D8/SCL2	数字	GPIO 8 / I2C 2 时钟线 (PWM~)
11	D7	数字	GPIO 7 (PWM~)
12	D6	数字	GPIO 6 (PWM~)
13	D5	数字	GPIO 5 (PWM~)
14	D4	数字	GPIO 4 (PWM~)
15	D3	数字	GPIO 3 (PWM~)
16	D2	数字	GPIO 2 (PWM~)
17	D1/TX0	数字	GPIO 1 / 串行 0 发射器
18	D0/TX0	数字	GPIO 0 / 串行 0 接收器
19	D14/TX3	数字	GPIO 14 / 串行 3 发射器
20	D15/RX3	数字	GPIO 15 / 串行 3 接收器
21	D16/TX2	数字	GPIO 16 / 串行 2 发射器
22	D17/RX2	数字	GPIO 17 / 串行 2 接收器
23	D18/TX1	数字	GPIO 18 / 串行 1 发射器
24	D19/RX1	数字	GPIO 19 / 串行 1 接收器
25	D20/SDA	数字	GPIO 20 / I2C 0 数据线
26	D21/SCL	数字	GPIO 21 / I2C 0 时钟

电路板的 26 引脚接头引脚布局

16.2.3 SPI

该电路板提供 SPI 接口和完整的引脚布局，如下表所示。

引脚	功能	类型	描述
1	CIPO	内部	控制器输入外设输出
2	+5V	内部	5 V 的电源
3	SCK	内部	串行时钟
4	COPI	内部	控制器输出外设输入
5	RESET	内部	复位
6	GND	内部	接地

SPI 引脚布局

16.2.4 数字引脚 D22 – D53 LHS

引脚	功能	类型	描述
1	+5V	电源	+5V 电源轨
2	D22	数字	GPIO 22
3	D24	数字	GPIO 24
4	D26	数字	GPIO 26
5	D28	数字	GPIO 28
6	D30	数字	GPIO 30
7	D32	数字	GPIO 32
8	D34	数字	GPIO 34
9	D36	数字	GPIO 36
10	D38	数字	GPIO 38
11	D40	数字	GPIO 40
12	D42	数字	GPIO 42
13	D44	数字	GPIO 44
14	D46	数字	GPIO 46
15	D48	数字	GPIO 48
16	D50	数字	GPIO 50
17	D52	数字	GPIO 52
18	GND	电源	接地

D22 - D53 LHS 引脚布局



16.2.5 数字引脚 D22 - D53 LHS

引脚	功能	类型	描述
1	+5V	电源	+5V 电源轨
2	D23	数字	GPIO 23
3	D25	数字	GPIO 25
4	D27	数字	GPIO 27
5	D29	数字	GPIO 29
6	D31	数字	GPIO 31
7	D33	数字	GPIO 33
8	D35	数字	GPIO 35
9	D37	数字	GPIO 37
10	D39	数字	GPIO 39
11	D41	数字	GPIO 41
12	D43	数字	GPIO 43
13	D45	数字	GPIO 45
14	D47	数字	GPIO 47
15	D49	数字	GPIO 49
16	D51	数字	GPIO 51
17	D53	数字	GPIO 53
18	GND	电源	接地

D22 - D53 RHS 引脚布局

16.2.6 JTAG 复位


该电路板通过 JTAG 引脚提供调试接口的访问权限，如下表所示。

引脚	功能	类型	描述
1	Reset	复位	复位
2	GND	电源	接地
3	TDI	数字	测试数据输入
4	N/C	-	未连接
5	TDO	数字	测试数据输出
6	GND	电源	接地
7	TCK	数字	测试时钟
8	GND	电源	接地
9	TMS	数字	测试模式选择
10	+3V3	电源	+3V3 电源轨

调试的 JTAG 引脚布局

16.3 方框图

产品主要部件框图见下图：

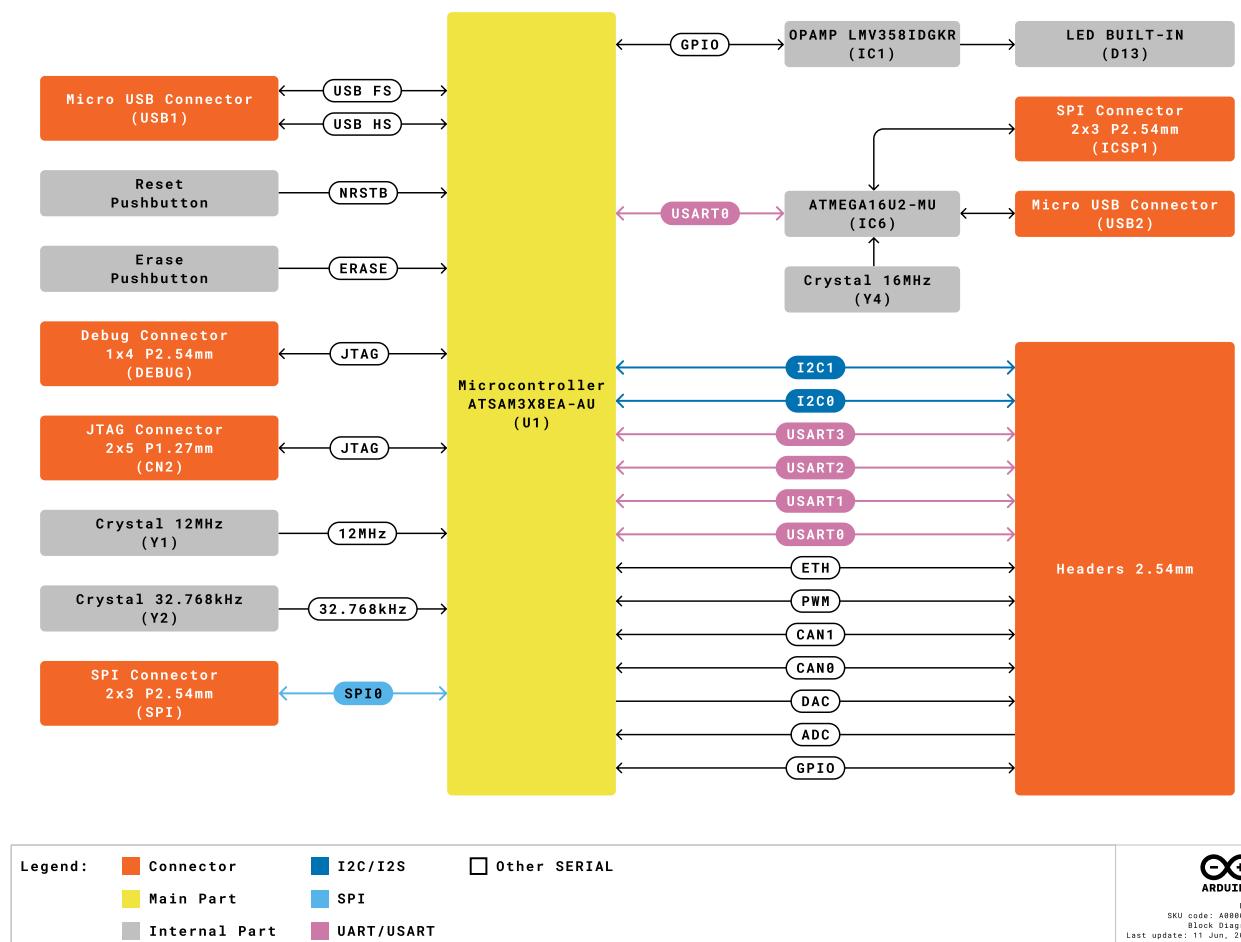


Arduino Due 方框图

16.4 电源

可通过多种方式为 Arduino Due 提供电源：

- USB Type-B 接口（原生接口和编程接口）。
- 使用外部电压源连接到 VIN 引脚，建议的电压范围为 7-12 VCC。
- 电源插孔：可使用连接到电源插孔的直流电源为 Arduino Due 提供电源，支持的电压范围为 7 至 12 V。


必须注意的是，Arduino Due 的工作电压为 3.3 V，因此任何外部电源都必须调节到这一电压水平。此外，电源应能为电路板的运行和任何连接的外设提供足够的电流。

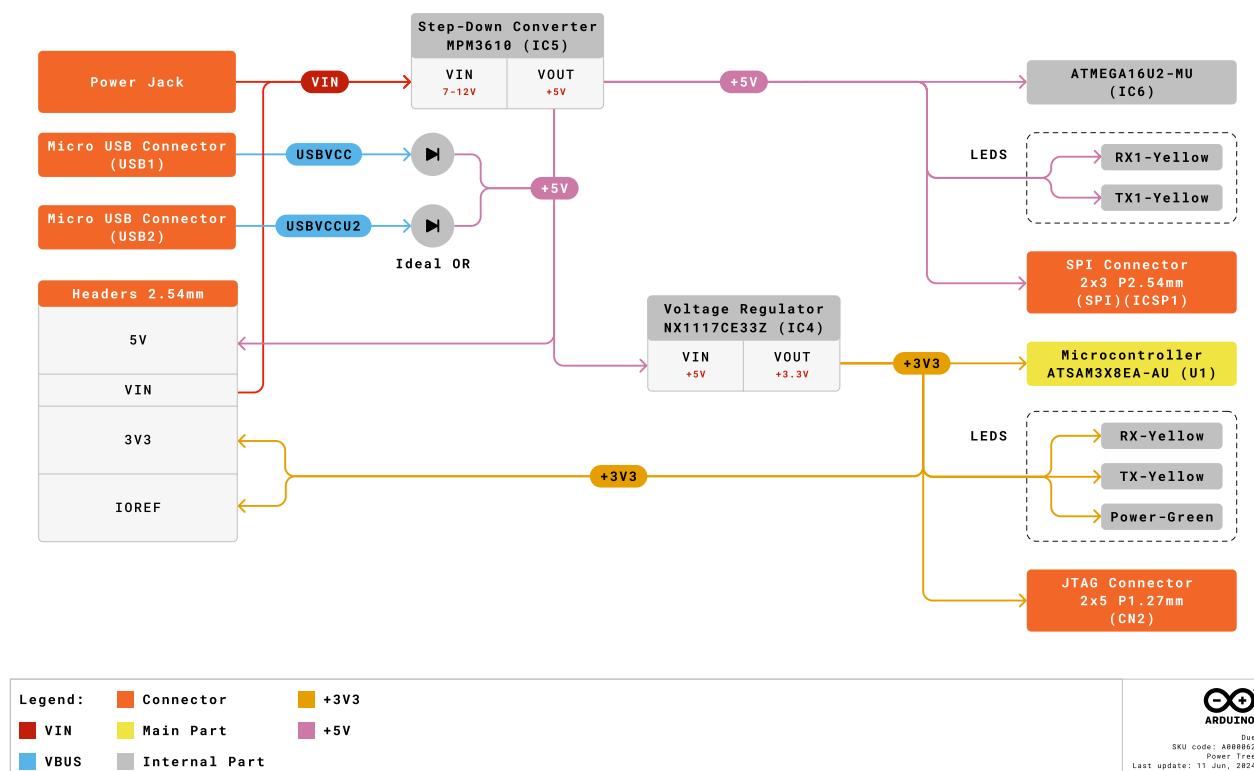

Arduino Due 电源树

16.5 产品拓扑结构

在下图中，您可以看到 Arduino Due 电路板的主要集成电路和被动元件。

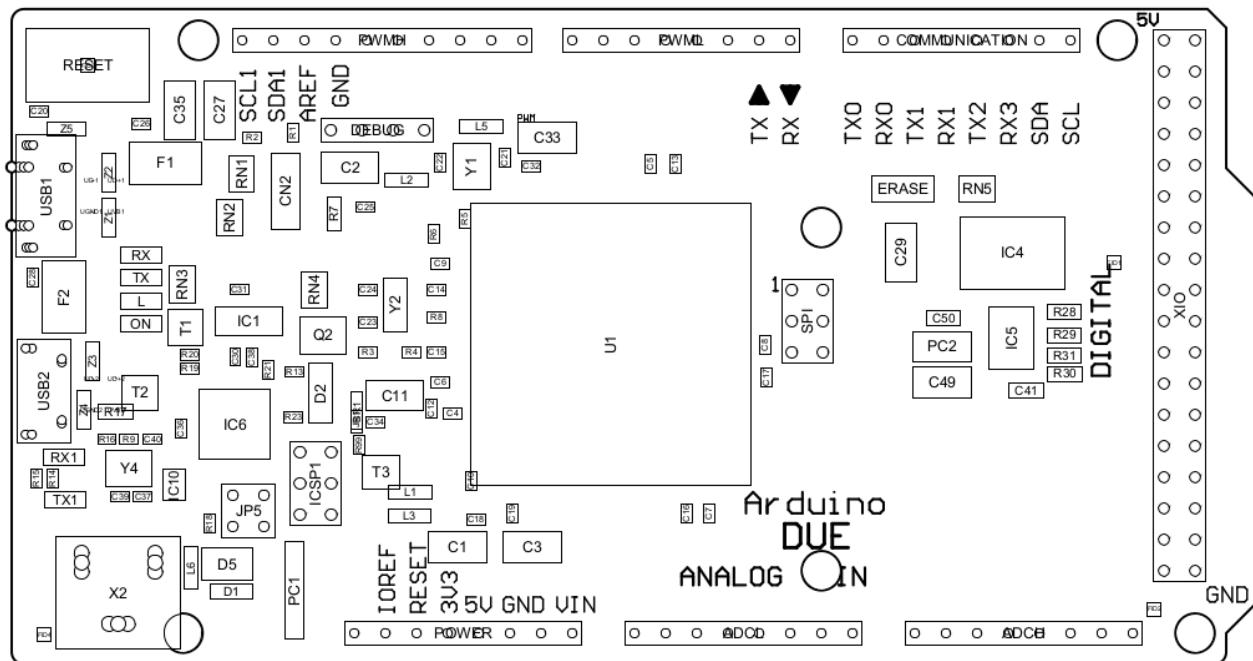

Arduino Due 拓扑结构

编号	描述
U1	Atmel SAM3X8E ARM Cortex-M3
USB1	原生 USB 端口
USB2	编程 USB 端口
X2	电源插孔 VIN 7-12 VCC
ERASE	擦除按钮
RESET	复位按钮
DEBUG	调试 JTAG 引脚布局
SPI	SPI 引脚布局
ICSP1	ICSP1 引脚布局

16.5.1 JTAG 连接器


调试功能直接集成到 Arduino Due 中，可通过 6 针 JTAG 连接器访问。

引脚	功能	类型	描述
1	Reset	复位	复位
2	GND	电源	接地
3	TDI	数字	测试数据输入
4	N/C	-	未连接
5	TDO	数字	测试数据输出
6	GND	电源	接地
7	TCK	数字	测试时钟
8	GND	电源	接地
9	TMS	数字	测试模式选择
10	+3V3	电源	+3V3 电源轨

JTAG 引脚布局

16.5.2 原生 USB 端口

Arduino Due 的原生 USB 端口采用 USB Type-B 接口。该端口允许电路板作为 USB 设备与计算机直接通信，从而实现 USB 主机/设备功能和 USB OTG (On-The-Go) 功能。

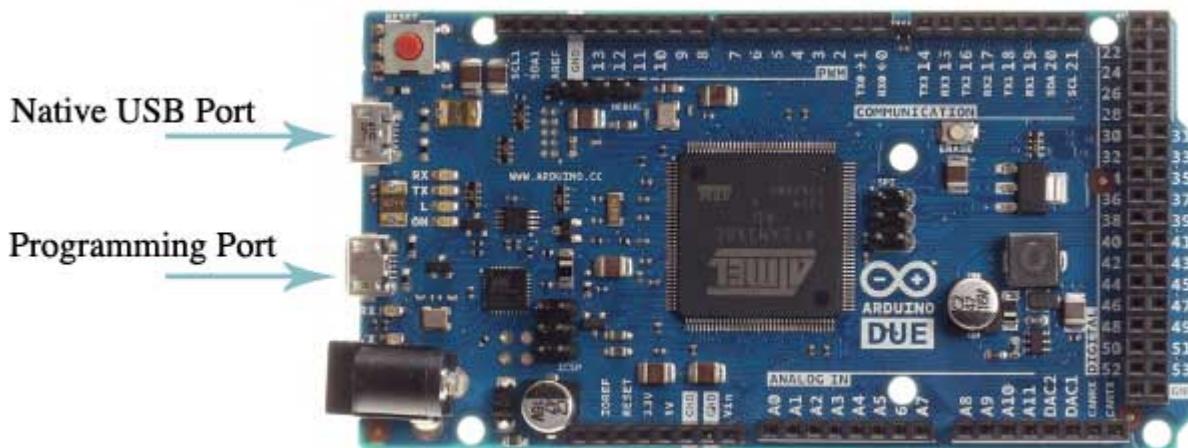

Arduino Due USB 端口

16.5.3 编程 USB 端口

该端口允许通过 USB 连接计算机对电路板进行编程和供电。它有助于 Arduino Due 与计算机之间的串行通信，从而支持上传程序并与 Arduino IDE 交互。该端口与 ATmega16U2 微控制器相连，后者充当 USB 转串口转换器，简化了编程过程。当连接到计算机时，Arduino IDE 会将电路板识别为 COM 端口，从而实现无缝通信，达到编程和调试的目的。

16.5.4 电路板的 24 引脚接头连接器

24 引脚接头连接器提供各种应用所需的接口和通用引脚。

这些引脚提供一系列功能，包括模拟和数字输入/输出、电源连接、模数转换、数模转换和 CAN 总线通信。

引脚	功能	类型	描述
1	NC	NC	未连接
2	IOREF	IOREF	数字逻辑电压参考 - 连接到 3.3 V
3	Reset	复位	复位
4	+3V3	电源	+3V3 电源轨
5	+5V	电源	+5V 电源轨
6	GND	电源	接地
7	GND	电源	接地
8	VIN	电源	电压输入
9	A0	模拟	模拟输入 0 / GPIO
10	A1	模拟	模拟输入 1 / GPIO
11	A2	模拟	模拟输入 2 / GPIO
12	A3	模拟	模拟输入 3 / GPIO
13	A4	模拟	模拟输入 4 / GPIO
14	A5	模拟	模拟输入 5 / GPIO
15	A6	模拟	模拟输入 6 / GPIO
16	A7	模拟	模拟输入 7 / GPIO
17	A8	模拟	模拟输入 8 / GPIO
18	A9	模拟	模拟输入 9 / GPIO
19	A10	模拟	模拟输入 10 / GPIO
20	A11	模拟	模拟输入 11 / GPIO
21	DAC0	模拟	数字模拟转换器 0
22	DAC1	模拟	数字模拟转换器 1
23	CANRX	数字	CAN 总线接收器
24	CANTX	数字	CAN 总线发射器

电路板的 24 引脚接头引脚布局

16.5.5 电路板的 26 引脚接头连接器

Arduino Due 上的 26 针接头连接器提供了一套全面的接口和多功能引脚，对各种应用至关重要。

这些引脚提供一系列功能，包括数字输入/输出、串行通信、PWM（脉宽调制）输出和 I2C（集成电路总线）通信。

引脚	功能	类型	描述
1	D21/SCL1	数字	GPIO 21 / I2C 1 时钟
2	D20/SDA1	数字	GPIO 20 / I2C 1 数据线
3	AREF	数字	模拟参考电压
4	GND	电源	接地
5	D13/SCK	数字	GPIO 13 / SPI 时钟 (PWM~)
6	D12/CIPO	数字	GPIO 12 / SPI 控制器输入外设输出 (PWM~)
7	D11/COPI	数字	GPIO 11 / SPI 控制器输出外设输入 (PWM~)
8	D10/CS	数字	GPIO 10 / SPI 芯片选择 (PWM~)
9	D9/SDA2	数字	GPIO 9 / I2C 2 数据线 (PWM~)
10	D8/SCL2	数字	GPIO 8 / I2C 2 时钟线 (PWM~)
11	D7	数字	GPIO 7 (PWM~)
12	D6	数字	GPIO 6 (PWM~)
13	D5	数字	GPIO 5 (PWM~)
14	D4	数字	GPIO 4 (PWM~)
15	D3	数字	GPIO 3 (PWM~)
16	D2	数字	GPIO 2 (PWM~)
17	D1/TX0	数字	GPIO 1 / 串行 0 发射器
18	D0/TX0	数字	GPIO 0 / 串行 0 接收器
19	D14/TX3	数字	GPIO 14 / 串行 3 发射器
20	D15/RX3	数字	GPIO 15 / 串行 3 接收器
21	D16/TX2	数字	GPIO 16 / 串行 2 发射器
22	D17/RX2	数字	GPIO 17 / 串行 2 接收器
23	D18/TX1	数字	GPIO 18 / 串行 1 发射器
24	D19/RX1	数字	GPIO 19 / 串行 1 接收器
25	D20/SDA	数字	GPIO 20 / I2C 0 数据线
26	D21/SCL	数字	GPIO 21 / I2C 0 时钟

电路板的 26 引脚接头引脚布局

16.5.6 SPI

这些引脚有助于 Arduino Due 与外部 SPI 设备之间的通信。

引脚	功能	类型	描述
1	CIPO	内部	控制器输入外设输出
2	+5V	内部	5 V 的电源
3	SCK	内部	串行时钟
4	COPI	内部	控制器输出外设输入
5	RESET	内部	复位
6	GND	内部	接地

SPI 引脚布局

16.5.7 左侧和右侧的 D22 至 D53

这些数字引脚提供了广泛的 GPIO（通用输入/输出）功能，用于连接 Arduino Due 项目中的外部传感器、执行器和其他数字设备。

引脚	功能	类型	描述
1	+5V	电源	+5V 电源轨
2	D22	数字	GPIO 22
3	D24	数字	GPIO 24
4	D26	数字	GPIO 26
5	D28	数字	GPIO 28
6	D30	数字	GPIO 30
7	D32	数字	GPIO 32
8	D34	数字	GPIO 34
9	D36	数字	GPIO 36
10	D38	数字	GPIO 38
11	D40	数字	GPIO 40
12	D42	数字	GPIO 42
13	D44	数字	GPIO 44
14	D46	数字	GPIO 46
15	D48	数字	GPIO 48
16	D50	数字	GPIO 50
17	D52	数字	GPIO 52
18	GND	电源	接地

D22 - D53 LHS 引脚布局



引脚	功能	类型	描述
1	+5V	电源	+5V 电源轨
2	D23	数字	GPIO 23
3	D25	数字	GPIO 25
4	D27	数字	GPIO 27
5	D29	数字	GPIO 29
6	D31	数字	GPIO 31
7	D33	数字	GPIO 33
8	D35	数字	GPIO 35
9	D37	数字	GPIO 37
10	D39	数字	GPIO 39
11	D41	数字	GPIO 41
12	D43	数字	GPIO 43
13	D45	数字	GPIO 45
14	D47	数字	GPIO 47
15	D49	数字	GPIO 49
16	D51	数字	GPIO 51
17	D53	数字	GPIO 53
18	GND	电源	接地

D22 - D53 RHS 引脚布局



17 电路板操作

17.1 入门指南 - IDE

如需在离线状态下对 Arduino Due 进行编程，则需要安装 Arduino® Desktop IDE **[1]**。若要将 Arduino Due 连接到计算机，则需要使用 USB Type-B 电缆，如 LED 指示灯 (DL1) 所示，该电缆还可以为电路板提供电源。

17.2 入门指南 - Arduino Cloud Editor

包括本电路板在内的所有 Arduino 电路板，都可以在 Arduino® Cloud Editor **[2]** 上开箱即用，只需安装一个简单的插件即可。

Arduino Cloud Editor 是在线托管的，因此它将始终提供最新功能并支持所有电路板。接下来**[3]**开始在浏览器上编码并将程序上传到您的电路板上。

17.3 入门指南 - Arduino Cloud

Arduino Cloud 支持所有支持 IoT 功能的 Arduino 产品，让您可以记录、绘制和分析传感器数据，触发事件，实现家庭或企业自动化。

17.4 在线资源

现在，您已经了解该电路板的基本功能，就可以通过查看 Project Hub **[4]**、Arduino® Library Reference [5] 和在线商店 [6] 上的精彩项目来探索它所提供的无限可能性；在这些项目中，您可以为电路板配备传感器、执行器等。

17.5 电路板恢复


所有 Arduino 电路板都配置有内置的引导加载程序，可以通过 USB 对电路板进行刷新。如果某一程序锁定了处理器，且无法通过 USB 再次访问电路板，则可以在上电后立即双击复位按钮进入引导加载程序模式。

18 机械层信息

Arduino Due 是一块微控制器电路板，尺寸为 101.52 毫米 x 53.3 毫米，具有两个 USB-B 接口和大量 GPIO 引脚接头。

18.1 电路板尺寸


Arduino Due 电路板的外形和安装孔尺寸如下图所示；所有尺寸均以毫米为单位。

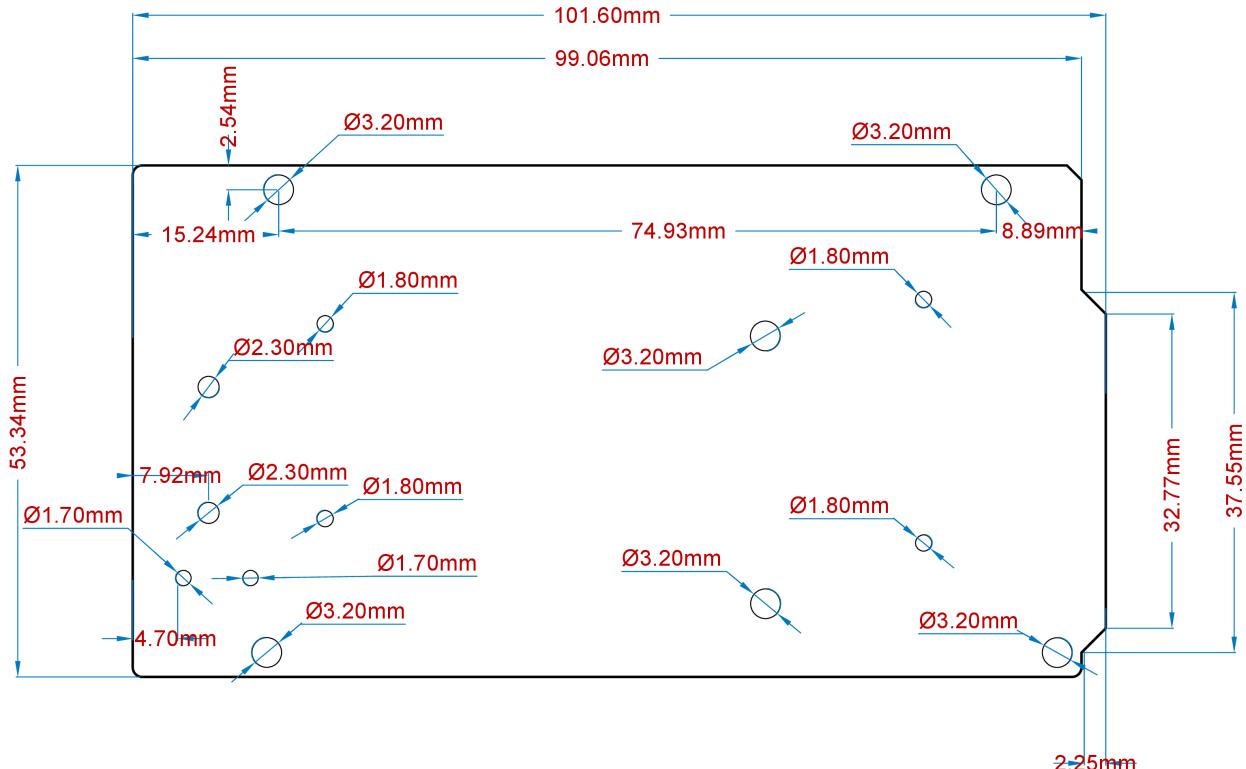

Arduino Due 安装孔和电路板外形图

18.2 电路板连接器

Arduino Due 的连接器位于电路板左侧；其位置如下图所示。所有尺寸均以毫米为单位。

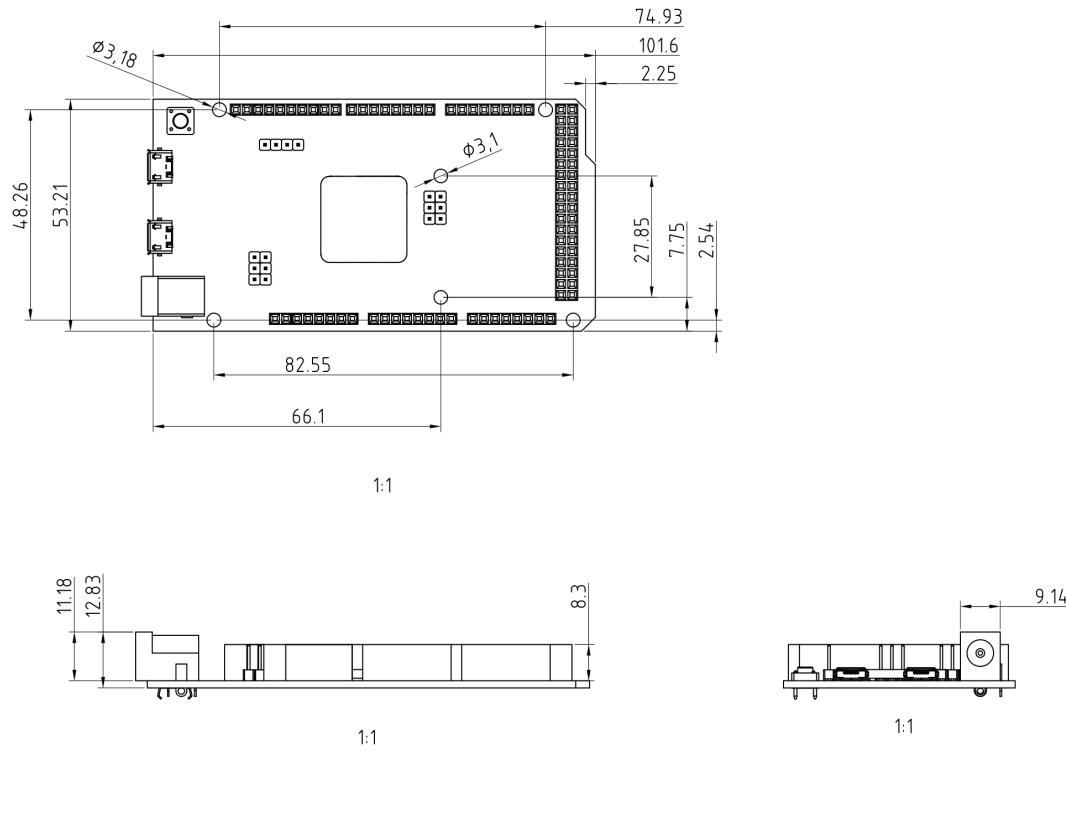

Arduino
Due
Technical
drawing

Arduino Due 技术图纸

19 认证

19.1 认证摘要

认证	状态
CE/RED (欧洲)	是
UKCA (英国)	是
FCC (美国)	是
IC (加拿大)	是
RCM (澳大利亚)	是
RoHS	是
REACH	是
WEEE	是



19.2 符合性声明 CE DoC (欧盟)

我们在此郑重声明，上述产品符合以下欧盟指令的基本要求，因此有资格在包括欧盟 (EU) 和欧洲经济区 (EEA) 在内的市场内自由流通。

19.3 声明符合欧盟 RoHS 和 REACH 211 01/19/2021

Arduino 电路板符合欧洲议会关于限制在电子电气设备中使用某些有害物质的 RoHS 2 指令 2011/65/EU 和欧盟理事会于 2015 年 6 月 4 日颁布的关于限制在电子电气设备中使用某些有害物质的 RoHS 3 指令 2015/863/EU。

物质	最大限值 (ppm)
铅 (Pb)	1000
镉 (Cd)	100
汞 (Hg)	1000
六价铬 (Cr6+)	1000
多溴联苯 (PBB)	1000
多溴联苯醚 (PBDE)	1000
邻苯二甲酸二(2-乙基己)酯 (DEHP)	1000
邻苯二甲酸丁苄酯 (BBP)	1000
邻苯二甲酸二丁酯 (DBP)	1000
邻苯二甲酸二异丁酯 (DIBP)	1000

豁免：未申请任何豁免。

Arduino 电路板完全符合欧盟法规 (EC) 1907/2006 中关于化学品注册、评估、许可和限制 (REACH) 的相关要求。我们声明，所有产品（包括包装）中的 SVHC (<https://echa.europa.eu/web/guest/candidate-list-table>)，（欧洲化学品管理局目前发布的《高度关注物质候选授权清单》）含量总浓度均未超过 0.1%。据我们所知，我们还声明，我们的产品不含 ECHA（欧洲化学品管理局）1907/2006/EC 公布的候选清单附件 XVII 中规定的“授权清单”(REACH 法规附件 XIV) 和高度关注物质 (SVHC) 所列的任何物质。

19.4 冲突矿产声明

作为电子和电气元件的全球供应商，Arduino 意识到我们有义务遵守有关冲突矿产的法律法规，特别是《多德-弗兰克华尔街改革与消费者保护法案》第 1502 条。Arduino 不直接采购或加工锡、钽、钨或金等冲突矿物。冲突矿物以焊料的形式或作为金属合金的组成部分存在于我们的产品中。作为我们合理尽职调查的一部分，Arduino 已联系供应链中的元件供应商，以核实他们是否始终遵守法规的相关规定。根据迄今收到的信息，我们声明我们的产品中含有来自非冲突地区的冲突矿物。



19.5 FCC 警告

任何未经合规性负责方明确批准的更改或修改都可能导致用户无权操作设备。

本设备符合 FCC 规则第 15 部分的规定。操作须满足以下两个条件：

- (1) 此设备不会造成有害干扰。
- (2) 此设备必须接受接收到的任何干扰，包括可能导致不良操作的干扰。

FCC 射频辐射暴露声明：

1. 此发射器不得与任何其他天线或发射器放置在同一位置或同时运行。
2. 此设备符合为非受控环境规定的射频辐射暴露限值。
3. 安装和操作本设备时，辐射源与您的身体之间至少应保持 20 厘米的距离。

注：本设备已经过测试，符合 FCC 规则第 15 部分规定的 B 类数字设备限值。这些限值旨在为住宅安装提供合理保护，防止有害干扰。本设备会产生、使用和辐射射频能量，如果未按照说明进行安装和使用，可能会对无线电通信造成有害干扰。但是，不能保证在特定安装环境中不会产生干扰。如果本设备确实对无线电或电视接收造成有害干扰，可通过关闭再打开本设备来确定，建议用户采取以下一项或多项措施来尝试消除干扰：

- 重新调整接收天线的方向或位置。
- 增加设备与接收器之间的距离。
- 将设备连接到与接收器连接的电路不同的插座上。
- 向经销商或有经验的无线电/电视技术人员寻求帮助。

English: User manuals for license-exempt radio apparatus shall contain the following or equivalent notice in a conspicuous location in the user manual or alternatively on the device or both. This device complies with Industry Canada license-exempt RSS standard(s). Operation is subject to the following two conditions:

- (1) this device may not cause interference
- (2) this device must accept any interference, including interference that may cause undesired operation of the device.

French: Le présent appareil est conforme aux CNR d'Industrie Canada applicables aux appareils radio exempts de licence. L'exploitation est autorisée aux deux conditions suivantes :

- (1) l'appareil ne doit pas produire de brouillage
- (2) l'utilisateur de l'appareil doit accepter tout brouillage radioélectrique subi, même si le brouillage est susceptible d'en compromettre le fonctionnement.

IC SAR 警告：

English This equipment should be installed and operated with a minimum distance of 20 cm between the radiator and your body.

French: Lors de l' installation et de l' exploitation de ce dispositif, la distance entre le radiateur et le corps est d'au moins 20 cm.

重要提示： EUT 的工作温度不能超过 85°C，也不能低于 -40°C。

Arduino S.r.l. 特此声明，本产品符合 2014/53/EU 指令的基本要求和其他相关规定。本产品允许在所有欧盟成员国使用。



公司信息

公司名称	Arduino SRL
公司地址	Via Andrea Appiani, 25 - 20900 MONZA (意大利)

参考资料

参考资料	链接
Arduino IDE (Desktop)	https://www.arduino.cc/en/Main/Software
Arduino IDE (Cloud)	https://create.arduino.cc/editor
Cloud IDE 入门指南	https://docs.arduino.cc/cloud/web-editor/tutorials/getting-started/getting-started-web-editor
Arduino Project Hub	https://create.arduino.cc/projecthub?by=part&part_id=11332&sort=trending
库参考	https://github.com/arduino-libraries/
在线商店	https://store.arduino.cc/

20 修订记录

日期	版次	变更
12/06/2024	1	首次发布